



**ALCATEL**  
mobile phones

[www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

OT-808

**ALCATEL**  
mobile phones





# Introduction .....

TCT Mobile Limited would like to thank you for purchasing this mobile phone.

## Power media applications

- Music player & Radio
- Video & Streaming
- Webcam

The 2.0 Megapixel camera is the best companion for PC instant messaging.

## Bluetooth

With Bluetooth 2.0 supporting A2DP profiles, enjoy handsfree conversations.

## My friends

Popular websites (like Bebo, Friendster, hi5, Myspace, etc.) to stay in touch with your friends wherever you are, whenever you want.

# Table of contents

<b>Safety and use.....</b>	<b>6</b>
<b>General information .....</b>	<b>11</b>
<b>1 Your mobile.....</b>	<b>13</b>
1.1 Keys.....	14
1.2 Main screen icons.....	16
<b>2 Getting started .....</b>	<b>18</b>
2.1 Set-up .....	18
2.2 Power on your phone .....	20
2.3 Power off your phone .....	21
<b>3 Calls .....</b>	<b>22</b>
3.1 Making a call.....	22
3.2 Calling your voicemail .....	22
3.3 Receiving a call .....	23
3.4 During a call.....	24
3.5 Conference calls .....	25
3.6 Line switching.....	25
<b>4 Menu arrange.....</b>	<b>26</b>
<b>5 Messages.....</b>	<b>27</b>
5.1 Create message .....	27
5.2 Inbox.....	28
5.3 Outbox.....	29
5.4 Sent.....	29
5.5 Voicemail.....	29
5.6 Broadcast SMS.....	29
5.7 WAP alerts.....	29
5.8 Drafts.....	30
5.9 Archive .....	30
5.10 Empty folder .....	30
5.11 Templates.....	30
5.12 Settings.....	30



<b>6</b>	<b>Email</b>	<b>32</b>
6.1	Access	32
6.2	Email account set-up	32
6.3	Inbox	33
6.4	Outbox	33
6.5	Sent	33
6.6	Drafts	33
6.7	Available options	33
<b>7</b>	<b>Instant messaging</b>	<b>34</b>
7.1	Access	34
7.2	Open a Palringo account online	34
7.3	Sign in/Sign out	34
7.4	Add service	35
7.5	Chat	35
7.6	Contacts	35
7.7	Groups	35
<b>8</b>	<b>Directory</b>	<b>36</b>
8.1	Consulting your directory	36
8.2	Adding a contact	37
8.3	Available options	38
<b>9</b>	<b>Call register</b>	<b>40</b>
9.1	Call memory	40
9.2	My numbers	40
9.3	Billing	40
9.4	Call settings	41
<b>10</b>	<b>Media applications</b>	<b>43</b>
10.1	Music player	43
10.2	Image Viewer	44
10.3	Video player	45
10.4	Radio	45
<b>11</b>	<b>Internet</b>	<b>47</b>
11.1	My friends	47
11.2	Opera	47

11.3	Web	47
11.4	News	48
11.5	Weather	49
11.6	Facebook	50
11.7	Twitter	50
<b>12</b>	<b>Entertainment</b>	<b>51</b>
12.1	Fun	51
12.2	Ebook	51
12.3	Java	52
<b>13</b>	<b>Camera</b>	<b>53</b>
13.1	Access	53
13.2	Camera	53
13.3	Video	55
<b>14</b>	<b>Profiles</b>	<b>58</b>
14.1	General	58
14.2	Meeting	59
14.3	Outdoor	59
14.4	Indoor	59
14.5	Silence	59
14.6	Flight mode	59
<b>15</b>	<b>File manager</b>	<b>60</b>
15.1	My audios	60
15.2	My images	60
15.3	My videos	61
15.4	My creations	61
15.5	Unknown files	61
15.6	Ebook	61
15.7	Phone	61
15.8	Memory card	61
15.9	Managing audios, images, videos and creations	62
15.10	Formats and compatibility	64
15.11	Memory status	64
<b>16</b>	<b>Bluetooth</b>	<b>65</b>



<b>17 Others .....</b>	<b>67</b>
17.1 Calendar .....	67
17.2 Calculator .....	67
17.3 Notes.....	68
17.4 Tasks .....	68
17.5 Clock .....	69
17.6 Converter.....	70
<b>18 Settings .....</b>	<b>71</b>
18.1 Display .....	71
18.2 Languages.....	73
18.3 Clamshell .....	73
18.4 Headset mode.....	73
18.5 Input mode.....	73
18.6 Vocabulary .....	73
18.7 Keypad.....	74
18.8 Home screen.....	74
18.9 Security .....	75
18.10 Network .....	76
18.11 Connectivity.....	76
<b>19 Making the most of your mobile.....</b>	<b>77</b>
19.1 PC suite .....	77
19.2 Webcam.....	77
<b>20 Latin input mode/character table .....</b>	<b>78</b>
<b>21 Telephone warranty .....</b>	<b>81</b>
<b>22 Accessories .....</b>	<b>83</b>
<b>23 Troubleshooting.....</b>	<b>84</b>

## Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

### • CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.



At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List, page 83). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

## • PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

## • BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

### In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

### In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

**CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

## • CHARGERS

Mains powered chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.



## • RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

### THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure thresholds recommended by international requirements (ICNIRP) <sup>(1)</sup> and by the Council of the European Union (Recommendation 1999/519/EC) <sup>(2)</sup>.

These limits are part of a set of requirements and establish authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health.

The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 watts/kilogram (W/kg) averaged over 10 grams of body tissue. The tests used to determine SAR levels were carried out on the basis of standard usage modes with the phones transmitting at their maximum power level over the entire range of frequency bands.

Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at many different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to a base station antenna, the lower the power level required by the mobile phone.

(1) The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Korea), Australia.  
(2) The European recommendation (1999/519/EC) is applicable in the following regions: Europe, Israel.

The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 0.8 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure.

The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body (fact sheet n° 193). Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.

Although no danger relating to the use of telephone was ever proved, the World Health Organisation advises as a precautionary measure to use your telephone with a good level of network reception as indicated on the telephone display (4 to 5 bars). It is also advised to keep the telephone, during communications, away from the belly of pregnant women and from the lower abdomen for teenagers.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 2cm away from the body.

## • LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

## OT-808 Bluetooth QD ID B015352



eZiText™ zicorporation eZiText™ and Zi™ are trademarks of Zi Corporation and/or its affiliates.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Opera Mini™ is a registered trademark of Opera Mini.



Facebook and the f Logo are trademarks of Facebook, Inc., and are used under license.



Twitter and the T Logo are trademarks of Twitter, Inc., and are used under license.





## General information .....

- **Internet address:** [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

# CE 1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com).

## Protection against theft <sup>(1)</sup>

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering \* # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.


## Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

<sup>(1)</sup> Contact your network operator to check service availability.



# Your mobile.....

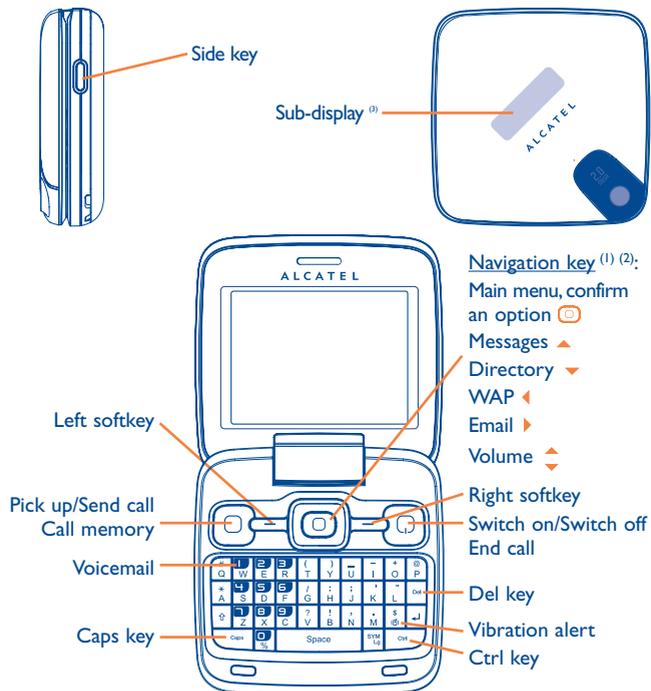

Navigation key <sup>(1)</sup> <sup>(2)</sup>:

Main menu, confirm an option

Messages ▲

Directory ▼

WAP ◀

Email ▶

Volume ▲▼

Right softkey

Switch on/Switch off  
End call

Del key

Vibration alert

Ctrl key

<sup>(1)</sup> Depending on your network operator.

<sup>(2)</sup> Disabled when "Home screen" is on or events (incoming call, SMS/MMS, news, weather, appointments etc.) displayed on main screen.

<sup>(3)</sup> Display events (call, SMS, MMS, alarm...) or current status.

## 1.1 Keys



Navigation key

Confirm an option (press the middle of the key)



Pick up

Send a call

Access call memory (Redial) (short keypress)



Switch on/Switch off the telephone (long keypress)

End a call

Return to the main screen



Left softkey



Right softkey



Access your voicemail (long keypress)



Side key

Short keypress:

- Scroll up/down "Home Screen" menus (Home Screen is on)

- Confirm an option

- Backlight on

- Access "Music player"

- Play/pause music (in music playing mode)

Long keypress:

- Scroll up/down "Home Screen" menus quickly (Home Screen is on)

- Exit "Music player"



Ctrl + B: Activate/Deactivate Bluetooth

Ctrl + M: Access Music player

Ctrl + P: Access Profiles

Ctrl + J: Access Java applications



Delete a contact (in Directory/Call memory)

Delete a message (in Inbox/Outbox...)

Delete a file (in File manager)

Delete a note (in Notes)



Shift sound play among Headset, Bluetooth and Headset & Bluetooth (long keypress).

## 1.2 Main screen icons <sup>(1)</sup>



**Battery charge level**



**Vibrate alert:** your phone vibrates, but does not ring or beep with the exception of the alarm (see page 58).



**Bluetooth status** (Blue - Activated).



**Bluetooth status** (Connected to an audio device).



**Headset connected.**



**Call forwarding activated:** your calls are forwarded (see page 41).



**Alarm** (see page 69).



**Level of network reception.**



**Voicemail message arrived.**



**Missed calls.**



**Radio is on.**



**Stopwatch is active.**



**WAP alerts <sup>(2)</sup>.**



**Roaming.**



**Memory card scanning in progress.**

<sup>(1)</sup> The icons and illustrations in this guide are provided for informational purposes only.

<sup>(2)</sup> Depending on your network operator.




-  **Memory card scanning completed.**
-  **SIM card missing.**
-  **Line switching** <sup>(1)</sup>; indicates the selected line.
-  **GPRS connection status** (Blue - Activated).
-  **EDGE attached.**
-  **EDGE connecting.**
-  Shown only in no ciphering mode while calling, sending/receiving SMS.
-  **Music player active.**
-  **Message receipt in progress.**
-  **Sending a message.**
-  **Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm (see page 58).
-  **Message unread**
-  **Message list is full:** your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
-  **Flight mode.**
-  **A2DP connected.**


## 2 Getting started .....

### 2.1 Set-up

#### Removing or installing the back cover

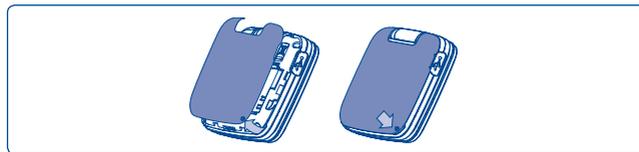

#### Installing or removing the battery

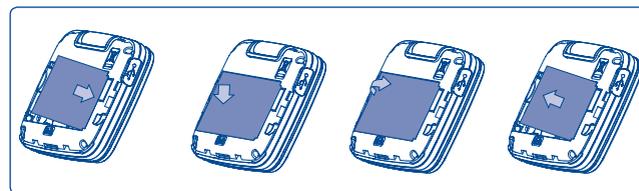

Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery.

<sup>(1)</sup> Contact your network operator to check service availability.




## Inserting or removing the SIM card <sup>(1)</sup>

You must insert your SIM card to make phone calls.



Place the SIM card with the chip facing downwards and slide it into the housing. Make sure that it is correctly inserted. To remove the card, press the bottom and slide it out. Please power off your phone before you remove the SIM card.

## Charging the battery

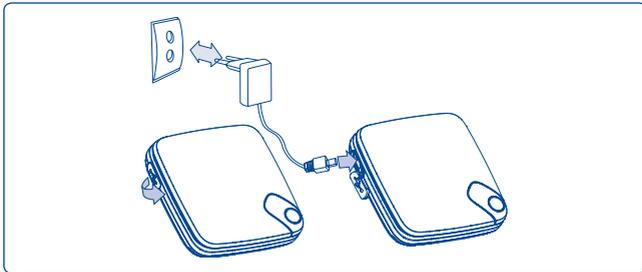

Connect the battery charger

<sup>(1)</sup> Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

- Charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (  ).

## 2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm with the  key. The main screen is displayed.



If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.



If cell broadcast messages are displayed, use the  key to browse through them or press the right softkey to return to the main screen.

While the phone is searching for a network, "Searching/Emergency" will be displayed.

In the power on screen, you also have access to the functions of "Radio", "Camera", "Music player", etc. even if there is no SIM card inserted.

## 2.3 Power off your phone

Hold down the  key from the main screen.

# 3 Calls.....

## 3.1 Making a call

Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey or  key.

To hang up the call, press the  key.

### Making an emergency call

If your phone has network coverage, dial emergency number and press the  key to make an emergency call. This works even without a SIM card and without typing the PIN code.

## 3.2 Calling your voicemail <sup>(1)</sup>

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to "My numbers" (see page 40).



To use your voicemail service from abroad, contact your network operator before leaving.

<sup>(1)</sup> Contact your network operator to check service availability.



### 3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

#### If the flip is open

- To pick up a call, press the  key.

#### If the flip is closed

- To pick up a call, open the flip (if clamshell open answer option is activated, see page 73).

#### Muting the ringtone

Press the right softkey once while the telephone is ringing. Answer the call by pressing the  key.

#### Rejecting a call

Press the  key once or the right softkey twice, or reject it by SMS (Options\Reject by SMS\Templates).

### 3.4 During a call

#### Available functions

During a call, press the  key to use your directory, diary, short messages etc. without losing your caller.



Call on hold



Ongoing call



Handsfree

**WARNING:** move the handset away from your ear while using the "handsfree" option because the amplified volume might cause hearing damage.



Directory



Messages



Calendar



Services <sup>(1)</sup>



Sound recorder (record your current call).

You can switch the audio speech from handset to BT device when connected.

#### Adjusting the volume

You can adjust the sound level during a call using the  key.

#### Handling two calls

- Answering a second call (ensure that "Call waiting" is activated, see page 41).
- To call a second party during a call, dial the number directly.

<sup>(1)</sup> Contact your network operator to check service availability.



### 3.5 Conference calls <sup>(1)</sup>

Your phone allows you to talk to several people at the same time (up to five). If you are on a double call, press "**Options**" and select "**Conference**" then confirm with the  key. If a third call comes in, answer it by pressing the  key and speak with your new caller.

This caller becomes a member of the conference if you press "**Options**" and select "**Add to conference**", and then confirm by pressing . Pressing  disconnects the current call.

To end the conference call, press "**Options**" and select "**End conf.**".

### 3.6 Line switching <sup>(1)</sup>

Your SIM card can contain two distinct telephone numbers. Under "**Call register**", choose "**Line switching**" and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use either of the two lines.



The services programmed on the default line do not impact those selected on the other line.

<sup>(1)</sup> Contact your network operator to check service availability.

## 4 Menu arrange .....



Main menu is designed to vary according to your preference.

### Change the order

Press left softkey and select "**Move**" or long keypress Side key/ key until tick "✓" is shown, then move the cursor to your favorite destination and confirm with  key.

### Show/Hide

Access "**Menu arrange**", press  to show/hide the main menu items.

### Restore default settings

From main menu, select "**Menu arrange**", press the "**Options**" softkey, and then select "**Restore default settings**" to return back to the default menu display.





# 5 Messages .....

You can create, edit and receive SMS and MMS with this mobile phone.

MMS enables you to send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 31).

## 5.1 Create message

From the main menu select **"Messages\Write msg"** to create text/multimedia message.

An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted, Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

You can type a message, modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc. (only available while editing an MMS). While writing a message, select **"Options"** to access all the messaging options.

You can save your messages that you send often to **Drafts** or **Templates (MMS only)**.



An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

## 5.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message:  unread SMS in phone,  unread SMS in SIM card,  read SMS in phone,  read SMS in SIM card,  unread MMS in phone,  read MMS in phone,  message reception in progress and  message sending in progress.

### Receiving and reading SMS/MMS

When you receive a new message, a beep sounds and the  icon with the number of new messages appear on the screen. Press  to view it and press   to view the previous and next messages directly.

Once you receive a message, the following options are given: **View, Reply, Forward** the message to another person, **Edit, Group by sender, Delete, Delete all, Move to Archive** and extract number, URL or email address (**Use number/Use URL/Use Email address**), etc.

### Group by sender/Group by receiver <sup>(1)</sup>

Messages can be grouped by sender/receiver ("**Options\Group by sender\Options\Group by receiver**"). You are able to quick search the messages by pressing the key associated with the first letter of sender/receiver's name.

<sup>(1)</sup> The option of "Group by receiver" is available in Outbox, Sent, and Draft folders only.





## Group unread message

Unread messages will always be positioned above the read messages.

## Timer send

Schedule a SMS/MMS to be sent out at predefined time (**Create SMS/MMS**→**Add number**→**Options/Timer send**).

## Multi-mark

Mark/Unmark file(s) for further operations: **Move to archive** <sup>(1)</sup>, **Send** <sup>(2)</sup>, **Delete**.

## 5.3 Outbox

All failed to send messages.

## 5.4 Sent

All sent messages.

## 5.5 Voicemail

View and edit the voicemail number.

## 5.6 Broadcast SMS

Store the received Broadcast SMS.

## 5.7 WAP alerts

Store WAP push messages.

<sup>(1)</sup> Inbox/Sent folder only.

<sup>(2)</sup> Outbox only.

## 5.8 Drafts

All draft messages.

## 5.9 Archive

A library to store messages.

## 5.10 Empty folder

Delete all messages in "Inbox/Outbox/Sent/Drafts...".

## 5.11 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined multimedia messages.

## 5.12 Settings

### 5.12.1 Text messages

- Profile settings** • Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
- General settings** • Delivery report, request for acknowledgement of delivery report On/Off. Reply path<sup>(1)</sup>: show reply path.
- Alphabet management** • Enables the definition of SMS data coding for SMS sending.
- Memory status** • Memory used on the phone.

<sup>(1)</sup> Depending on your network operator.



**Preferred storage** • Select default message storage, SIM or phone.

**Preferred bearer** • Bearer preference.

### 5.12.2 Multimedia messages

**Edit** • Set edit mode, image size and signature.

**Sending** • Set the values for validity period, Read report, etc.

**Retrieve** • Set the values for Home network, Roaming network, etc.

**Edit profiles** • Follow the same procedure as for setting your WAP connection.

**Memory status** • Memory used on the phone.

### 5.12.3 Broadcast SMS <sup>(1)</sup>

**Receiving mode** • Enable to receive broadcast SMS.

**Languages** • Language selection.

**Channel settings** • Add/Edit channels.

<sup>(1)</sup> Depending on your network operator.

## 6 Email .....



Your phone has an email client with the settings pre-defined for a few popular email services like – GoogleMail, Windows live, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

### 6.1 Access

Press key to enter main menu, select **"Email"**, then confirm with key.

### 6.2 Email account set-up

#### Pre-defined email service

If you own an email account of predefined services, you can install it to your phone by selecting the service (GoogleMail, yahoo, etc.), entering the username, password and account name, and then confirming with key.

#### New email service

To set up a new email account other than the predefined email services, access **"Create Email account"** menu, select **"Other Email accounts"**, then confirm with /left softkey.

You are required to enter your email address, select protocol <sup>(1)</sup> (POP3 or IMAP4) and network, then enter your incoming server address and outgoing server address, and then input your user name, password and account name, select **"Done"**.



After entering or selecting, do not forget to select **"Next"** to go to the next step.

<sup>(1)</sup> Consult your email service provider for more information about protocol.



### 6.3 Inbox

Folder of all received Emails.

### 6.4 Outbox

Folder of all unsent Emails.

### 6.5 Sent

Folder of all sent Emails.

### 6.6 Drafts

Folder of all draft Emails.

### 6.7 Available options

- Select** • Select to enter the menu.
- Send and receive** • To connect the email server in order to receive/send mails.
- Send and receive all accounts** • To connect all email accounts' server in order to receive/send mails.
- Create Email** • To create a new Email.
- Templates** • A list of predefined messages.
- Edit account** • To edit the detailed configuration information of the selected account.
- Delete account** • To delete the current selected account.
- New account** • To create a new email account.
- Empty folder** • Delete all emails in "Inbox/Outbox/Sent/Drafts".
- Delete marked** • To delete the marked mail in the selected folder.
- Delete all** • To delete all the mails in the selected folder.
- Delete all marked** • To delete all marked mails in all folders.

## 7 Instant messaging <sup>(1)</sup> .....

Palringo Instant messaging (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, Google talk, iChat etc. Please note that the services may be upgraded depending on your client version.

### 7.1 Access

To access Palringo, press  key to enter main menu, select  and press  to confirm.

### 7.2 Open a Palringo account online

Before activating this service, you are required to open a Palringo account online. There are three ways to do this:

- Click "**Menu**", select "**Register**".
- Press left softkey to enter "**Menu**", click "**Sign in**", then press , confirm with , and select "**Create Account**".
- You can also open account directly on website:  
<http://www.palringo.com/en/gb/>.

### 7.3 Sign in/Sign out

To connect to Palringo instant messaging server, please click "**Menu**", then select "**Sign in**". You are required to input your Palringo account information, like username (Email address), password, sign in status, etc.

To sign out, click "**Menu**", then "**Sign out**".

<sup>(1)</sup> Depending on your network operator.



## 7.4 Add service

Various services (Yahoo, Google, ICQ etc.) can be added by "**Menu**\Services\Add Service".

## 7.5 Chat

To start a chat, select one online contact, then "**Menu**\Private chat". Type a text message, then press /left softkey to send. During chat, you can also exchange voice or photo messages with your community.

## 7.6 Contacts

### • Add a contact

To add a contact, click "**Menu**", then select "**Contacts**\Add contact".

First, you need to specify which service, Yahoo for example, you want to add the new contact to. Then input the contact's email address and confirm by pressing /left softkey.



Your request will be sent to the contact for approval. Once accepted, the contact's name and status will appear on your contact list.

### • Delete a contact

To delete a contact, select one contact, then "**Menu**\Delete contact". The selected contact will be removed from your contact list.

## 7.7 Groups

With this menu, you can "**Join a group**" or "**Create a new group**". You can begin chatting with all members in the group simultaneously.

# 8 Directory .....



## 8.1 Consulting your directory

To access the **Directory** from the main screen, press the  key <sup>(1)</sup> or press the  key and select the  icon from the menu.

You can also customise a quick access to your contact with the keypad customisation (see page 74).

You have 5 directories:



General



Most called



SIM directory



Phone directory



Group

In addition to the directories already provided, you can create up to 4 groups (maximum 100 entries per group).

### Searching for a contact

You can search for a contact by inputting the initial of their name. Subsequent letters may be added to refine the search.

### Reading a file

Select a name from your directory, then press  to read the file.

<sup>(1)</sup> Depending on your network operator.



## Sending Vcard via Bluetooth

Selecting the Vcard you wish to transfer ("**Options**\Send vCard\By Bluetooth").

### Making the call

Press the  key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key. Press the  key to make the call.



Information in the directory and the calendar may be sent to and received from a computer using the PC suite.

## 8.2 Adding a contact

Select the directory in which you wish to add a contact, press the "**Options**" softkey, select "**Add contact**".

When you add a new contact in the product directory, at least one of the following fields must be filled in:  First name,  Last name,  Group,  Mobile,  Home,  Ringtone,  Image,  Video,  Work,  Fax,  Email,  IMPS ID,  Birthday,  Company,  URL.

You can move from one field to another using the  key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 22).

## 8.3 Available options

From the list of names in SIM directory, General directory or Group you may access the following options:

**View** • View a complete file: name, numbers, address, e-mail, etc.

**View chat history** • Display chat logs in chronological order.

**Add contact** • Add a contact (name, numbers, address, e-mail, etc.) in the desired directory.

**Dial** • Make a call

**Create group** • Create a group of files.

**Send message** • Send an SMS/MMS/Email to a contact you selected from the directory.

**Launch URL** • Launch the URL of the selected contact.

**Edit** • Modify the contents of a file: name, number, ringtone, image, etc.

**Delete** • Delete the selected file.

**Mark/Unmark** • Mark/Unmark a tick on a contact for further operation.

**Mark/Unmark all** • Mark/Unmark ticks on all contacts for further operation.

**Delete group** • The group and its files will be completely deleted.

**Copy to phone/ SIM** • Copy a file from SIM directory to Phone directory, vice versa.

**Set as My favorite** • Set the number as your favourite, whose ringtone you would like to be different.

**Save to directory** • Save the contact to phone directory or SIM directory.



- Set ringtone**
  - Customise the ringtone of incoming call for the contact in "My favorite".
- Send vCard**
  - Exchange data via SMS, MMS, Email, Bluetooth or save to memory card.
- Reset**
  - Reset the contacts in "Most called".
- Associate/Not associate**
  - Sets whether or not the entry in a group will be updated if the original entry in the SIM or General directory is changed.
- Directory manage**
  - Default storage Set default storage to store new contacts.
  - Copy all Copy the whole directory to the SIM or General directory only if there is sufficient memory.
  - Delete all Delete all the files in the current directory.
  - My number Type in, modify or send the user's own number by SMS.
  - Memory status View used and available space in SIM and Phone directory.
  - Display format Select the format for name display.

## 9 Call register.....

### 9.1 Call memory

You can access your call memory by pressing the  key from the main screen. Choose the option of the desired list:

-  Missed calls
-  Outgoing calls (Redial)
-  Answered calls

Select a number from the call memory and press the "Options" softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

### 9.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing . Your telephone number is usually written on your SIM card.

### 9.3 Billing <sup>(1)</sup>

You can access different items with this option:

- Amount**
  - You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
- Duration**
  - You can view the total duration of all outgoing calls or reset it.
- GPRS counter**
  - Management of the volume of data communications charged for (in kilobytes).

<sup>(1)</sup> Depending on your network operator.



- Beep duration**
- You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by .

## 9.4 Call settings <sup>(1)</sup>

You can access a number of items with this option:

### 9.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

### 9.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

### 9.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

- Outgoing calls**
- The following configurations are possible:
    - All calls
    - All outgoing calls are barred.

- International calls
  - Outgoing international calls are barred.
  - International except home
    - Outgoing international calls except those to your country of subscription are barred.

**Incoming calls**

- The following configurations are possible:

- All calls
- Roaming
- All incoming calls are barred.
- Incoming calls are barred when you are abroad.
- Deactivate all call barring.

**Cancel all barring**

**Change barring PW**

- Change the original PW for activating call barring.

### 9.4.4 Caller ID

Activate/deactivate CLIR.

### 9.4.5 Line switching <sup>(1)</sup>

Line switch between line 1 and line 2.

### 9.4.6 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

<sup>(1)</sup> Contact your network operator to check service availability.

<sup>(1)</sup> Depending on your SIM card.



# 10 Media applications.....

## 10.1 Music player .....

Access this feature from the main menu by selecting "Music player". You will have full flexibility of managing music both on your mobile and memory card.

You can have access to your music files through one of the following:

- All songs**
  - Contains all songs both on phone memory and memory card.
- My star list**
  - You can simply add your favorite songs to "My star list" by holding down  during playing music (max 100).
  - Category of songs in folder.
- Folders**
- Album/Artist/Genre**
  - Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "Unknown files".
- Update songs**
  - Update the information of songs saved in phone or memory card.

Use keys to manage the Music player:

-  : Set as play/pause
-  : Set the volume level
-  : Go to previous/next title (short keypress)  
Fast play backward/forward (long keypress)
-  : Ctrl + M Access Music player folder (on main screen)  
Music playing in background (in music playing mode)

### Mark/Unmark

Mark/Unmark tick(s) on file(s) for further operations: **Add to my star list, Play, Send, Delete marked**, etc.

### 10.1.1 Settings

Access by pressing the right navigation key for following options:

- Play mode**
  - Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle. You may also customise it simply by pressing  during playing music.
- Equalizer**
  - Different music styles preset in the phone. You may also customise it simply by pressing  during playing music.
- Play in Bluetooth/ Play in phone/ Play in Phone & Bluetooth**
  - You can play music in Bluetooth, Phone or both in Phone & Bluetooth, in play mode, press the  key to shift between play in speaker and play in BT stereo headset or both in speaker and BT stereo headset.
- Display**
  - Enable your player to display spectrum, song info. or lyric.
- Sub-display**
  - Display or undisplay music playing info on subdisplay by selecting **On/Off**.

### 10.1.2 Playing with lyrics

Lyrics can be displayed in synchronization with the music.

## 10.2 Image Viewer.....

A library links to the pictures in "My creations" and "My images" in phone to be shown in list, slide, or thumbnail, set as Wallpaper, Screen saver, Power on/off display, and Contact ID, or sent by MMS, Email, Bluetooth.





### 10.3 Video player.....

Contains all video clips both in phone and memory card and enables you to **Play**, **Set as** contact ID, **Mark/Unmark**, **Send** (by MMS, Email, or Bluetooth), **Delete**, **Delete all**, **Rename**, **Sort** (by name, type, time or size) and to Download/Capture new video clips.

#### Streaming URL

This feature enables the user to start watching video almost as soon as it begins downloading from internet.

Use keys to manage the Video player:

 : Set as play/pause

 : Set the volume level

 : Fast play backward/forward

 : Adjust the display screen size via left softkey

### 10.4 Radio .....

Your phone is equipped with a radio <sup>(1)</sup> with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

<sup>(1)</sup> The quality of the radio depends on the coverage of the radio station in that particular area.

#### Available options:

- Channel list** • Open the list of saved stations.
- Save channel** • Save the current tuned station to the "**Channel list**".
- Auto search** • Start auto search and stations will be automatically saved to "**Channel list**".
- Enter the frequency** • Enter the frequency manually.
- Turn off** • Stop playing the radio.
- Record** • Record the radio: files will be automatically saved to "**Notes**".
- Settings** • Use   navigation keys to manage settings.
- Activate loudspeaker/ Play in headset** • Listen to the radio using loudspeaker or headset.
- Activate mono mode/stereo mode** • Switch between mono and stereo mode.
- Update station name <sup>(1)</sup>** • Save RDS information as station name in the channel list.
- Optimize radio frequency** • Optimize the audio quality.



Hold down the  key to enter "**Manual tuning**" mode and go to the previous/next station by pressing the   navigation keys in the Radio interface.

<sup>(1)</sup> Availability on RDS information detected.



# Internet.....

## 11.1 My friends <sup>(1)</sup>

It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Friendster, Hi5, Myspace, etc.

## 11.2 Opera <sup>(1)</sup>

Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

## 11.3 Web

### 11.3.1 Homepage

Launch the Web browser with the preset homepage.

### 11.3.2 Bookmarks

Access your favorite sites.

### 11.3.3 Go to URL

Enter the URL of Web site.

### 11.3.4 Last web address

Last visited URL.

### 11.3.5 Recent pages

Pages which you recently browsed.

<sup>(1)</sup> Depending on your network operator.

## 11.3.6 Offline pages

Pages available for offline viewing.

## 11.3.7 Service inbox

Store WAP push messages.

## 11.3.8 Settings

Customise your browser preferences.

## 11.4 News <sup>(1)</sup>

It is a huge time saver providing news updates from a website in a simple form.

Once subscribed to a feed, it gives you the ability to track and manage all your favorite RSS content on your mobile phone at anytime, anywhere!

### Available options:

- View** Message title or message summary of a feed with URL will be shown.
- Update** Refresh the content of a feed.
- Create channel** Create a new channel with name and URL.
- Delete** Delete the feed.
- Edit** Edit the name or URL of a feed.

<sup>(1)</sup> Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.



- Update all** Refresh all feeds.
- Enable/Disable all auto-update** Activate auto-update or not to all feeds.
- Settings** Select a regular interval to retrieve updates automatically, set to show images or not, as well as a network account to connect to.
- Send** Share a feed with your friend by sending it by SMS, MMS or Email.

## 11.5 Weather <sup>(1)</sup>

Your phone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.

To access the function, you can scroll up/down on Home Screen to select the  icon. You can also press the  key to access the main menu and select the .

### Available options:

- More info** Search more weather info online.
- Forecast** Display 3-day weather forecast.
- Update** Refresh weather information.
- My cities** List all my cities, you can add new city, set default city, delete the selected city, etc. via **"My cities|Options"**.
- Settings** Set unit, update mode and network.

<sup>(1)</sup> Depending on your network operator: May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

## 11.6 Facebook

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc.

To open an account online, please go to: <http://www.facebook.com/>.

## 11.7 Twitter

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables phone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.

To open an account online, please go to: <http://twitter.com/>.



# 12 Entertainment .....

## 12.1 Fun.....

### 12.1.1 Stopwatch

The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

### 12.1.2 Games

Your phone may include some JAVA™ games.

## 12.2 Ebook <sup>(1)</sup>.....

A bookshelf contains the electronic books (.txt and .pdf file only). While reading the book, you may add bookmarks, or reach the text by searching words, phrases (**Options\Search, Options\Jump to**).

### Available options:

- Open**                    Open the current ebook
- Book info**            Display the detailed info (title, size and format) about the book.
- Delete**                Delete the current book.
- Delete all**            Delete all the books.
- Sort**                    Sort the books by name, type, time or size.
- Global settings**    Set the font, scroll mode, display format, storage, etc.
- Help**                    List all hotkeys.

<sup>(1)</sup> This menu is hidden by default, you can make it visible in main menu (see page 26).



To avoid character corruption, please ensure that the encoding format is correct (**Global settings** or **Settings\Encoding format**).

## 12.3 Java .....

### 12.3.1 Launch an application

Select "**Java applications**" to launch applications.

### 12.3.2 Java settings

The "**Java**" menu allows you to manage Java settings, in which you may set Java audio, vibration, network and identify how much Heap size is available.

### 12.3.3 Java downloading

You can download new Java™ applications in the "**Java**" menu by selecting "**Download application**". The list of available Web bookmarks dedicated to the application download will then be displayed.

Select the appropriate bookmark to go to the desired Web page.



Each downloaded java game can be assigned as a main menu for quick access.

### Disclaimer

Downloading or running applications will not damage or alter any software already in your mobile telephone designed to support Java™ technology. TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase.

The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/repared, the mobile phone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.

# 13 Camera.....

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them in your "**File manager**My creations".
- send them in a multimedia message (MMS) to a mobile phone or an email address.
- send them directly by Email or Bluetooth.
- customise your main screen (see page 71).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.
- modify your photos by adding frames (see page 55).

## 13.1 Access

To access the function from the main screen:

- press the  key to access the menu and select the  icon.

## 13.2 Camera

### 13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press  to take the picture and the pictures will be automatically saved. If you don't want it, you may directly delete it by pressing left softkey "**Delete**".

### 13.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

Selected options bar:

Image size	Night mode	My creations
Capture mode	Exposure Value	Storage
Quality	White balance	Access Video
Timer	Color mode	Restore default
Banding	Add frame	Hotkeys



Navigation key:

- : take the picture
- : exposure – or +
- : zoom in or out

Right softkey: Back, return to sub-menus of previous screen

Left softkey: **Options**

**Quality:**  
High/Standard/Economy

**Hide/Unhide**  
all icons.

**Image size:**  
320x240, 640x480,  
1280x1024, 1600x1200

**White balance**

**Color mode**

**Capture mode:**  
1/3/5 shot/Off

**Night mode:**  
On/Off

**Add frame** (only available to size 320x240)

**Access Video**

**Timer:** 5/10/15 sec/Off



From the photo shot screen, press the "Options" softkey not only to access: "Image size", "Capture mode", "Quality", "Timer", "Banding", "Night mode", "Exposure Value", "White balance", "Color mode", "Add frame", but also following ones:

- My creations** • Go to "File manager\My creations" for viewing the photos you have taken.
- Storage** • You may choose saving location if MicroSD card is inserted.
- Access Video** • Access Video recording mode.
- Restore default** • Return all settings to default values.
- Hotkeys** • List all hotkeys.

### 13.2.3 Options available after taking the photo

Once you have taken a photo, five icons appear on the photo for your selection. By pressing ◀, ▲, ▼, ▶, you can send your photo by Bluetooth, MMS and Email, assign it to a contact, or set as wallpaper.

### 13.2.4 Modifying images

Access the "File manager\My creations" after taking a photo, and then select "Modify".

## 13.3 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.



We strongly advise you to change the default folder to "Memory card" to store your photos and videos.

### 13.3.1 Video setting while in framing mode





When you enter the **"Video"** function, you are in Framing mode. Use the mobile screen as a viewfinder and press the **"Options"** softkey for the settings of **White balance, Exposure Value, Night mode, Banding, Quality, Record duration, Record audio, Encode format, Color mode, Storage, Access Camera, Hotkeys**, to access the **"File manager/My videos"**, and to restore default value.

### 13.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the  key.



If you receive a call in recording mode, video recording will be stopped and a pop up message will inquire if you want to save it.

### 13.3.3 Playing mode

In the list of **"My videos"**, press **"Options"** to play the video and send by MMS, Email or Bluetooth.

## 14 Profiles.....



With this menu, you may personalise ringtones for different events and environments.

### 14.1 General

To modify the sound settings, press **"Options"** and select **"Edit"** and you will see the functions below using   key:

-  Select a melody from the list using the  key then confirm by pressing  (see page 43).
-  Mode (normal, discreet, vibration...). You may set your phone ringtone to Normal, Discreet (melody with beep), Vibration (all sounds are replaced by vibrations except for alarms), Vibration and melody, Vibration then melody, Beep and vibration, Silence (no sounds except for alarms, the  icon will be displayed).
-  Adjust the volume using the  key.
-  Select the type of key beep.
-  Select a melody for a new incoming message.
-  Select a melody for an alarm or appointment.
-  Power on beep.
-  Power off beep.
-  Select a sound for opening the flip and for closing it.



## 14.2 Meeting

Activate it, your cellphone vibrates when new event coming, but neither rings nor beeps except for the alarms.

## 14.3 Outdoor

It is a profile designed for outdoor users who require louder ringtones.

## 14.4 Indoor

Ringtone/beep volume will be slightly lower than General mode volume.

## 14.5 Silence

This profile will turn off all ringtones, even notification sounds.

## 14.6 Flight mode

Flight mode, under which you will have no voice call, Bluetooth or messaging functions, can be used to increase standby duration.

# 15 File manager .....



You will have access to all audio and visual files stored in phone or memory card in File manager.

## 15.1 My audios

Choose an audio for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The "My audios" album contains the following folders <sup>(1)</sup>:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

## 15.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.



The images will be displayed in alphabetical order.

<sup>(1)</sup> The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.



### 15.3 My videos

The **"My videos"** album contains all video clips recorded by the user, originally embedded in the phone and downloaded to the phone or memory card.

### 15.4 My creations

This feature stores all the photos captured by your mobile phone. In addition, you can use **"Mark"** function, to select multiple files.

### 15.5 Unknown files

Store files of unsupported format.

### 15.6 Ebook

A bookshelf contains the electronic books (.txt and .pdf file only).

### 15.7 Phone

An entry to access all files in all folders stored in phone.

### 15.8 Memory card

You can access all files stored in the memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

### Insert the memory card:



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

### Available options

- Create folder**
  - Create more folders.
- Delete folder**
  - Remove folders.
- Rename folder**
  - Edit folder's name.
- Empty folder**
  - Delete all files in one folder.
- Memory card**
  - To format or to query its memory status.

### 15.9 Managing audios, images, videos and creations

According to the item chosen, you can access some of the functions below:

- View**
  - View the selected image.
- Play**
  - Play the selected video.
- Send <sup>(1)</sup>**
  - Send the audio/image/video.

<sup>(1)</sup> Files marked with  cannot be sent.



## Delete

- Delete the audio/image/video selected (not applicable for embedded items).

## Set as

- - Image→wallpaper, screen saver, switch ON/OFF, assign it to a contact.
- - Sound→ringtone, message beep, switch ON/OFF, assign it to a contact.
- - Video→assign it to a contact as a contact ring tone and contact ID.

## Modify

- Modify an image <sup>(1)</sup>.

## Mark/Unmark

- Mark/Unmark a tick on a file for further operation.

## Mark/Unmark all

- Mark/Unmark ticks on all files for further operation.

## Download

- Download new items.

## Rename

- Rename the audio/image/video.

## Sort

- Sort the files by name, type, time and size.

## Move to phone/

## memory card

- Move a file from the product memory to the memory card and vice-versa

## Properties

- Display part of the ID3 Tag content of an MP3 file.
- DRM file option.

## Activate

## Copy to phone/

## memory card

- Copy a file to the phone memory or the memory card.

## Delete all

- Delete all the files except the embedded ones.

## Capture

- Access "**Camera**" function directly.

## Picture show

- Show pictures in list, slide, thumbnail view.

## 15.10 Formats and compatibility <sup>(1)</sup>

- Sounds: mp3, m4a, aac, midi, wav, amr, wma
- Images: jpg, gif
- Videos: 3gp, mp4

## 15.11 Memory status

Indicates how much space is used and how much is currently free on your phone and memory card (if any).

### 15.11.1 Phone

View available memory space.

Your phone's memory is shared among several functions: directory, scheduler, messages, images, melodies, games and video clips.

### 15.11.2 Memory card (MicroSD card)

View the memory available on your MicroSD card.



You are advised to save large files (like songs) on your microSD card.

<sup>(1)</sup> Only applies to images that can be cleared but not for copyrighted files.

<sup>(1)</sup> Depending on product and market.



# 16 Bluetooth™ (1)

Access this feature by pressing  to enter the main menu, then selecting "Bluetooth".

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

## Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "Bluetooth\Activation\On" option. Then enter the "Device list" menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the Bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press the "Options" softkey to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

(1) You are highly recommended to use Alcatel OT-BM82 (mono) Bluetooth headset, which has been tested and proved fully compatible with OT-808.

## Available functions

### Data transmit

- Exchange files with another bluetooth device.

### Handle a call

- Initiate or receive a phone call with a Bluetooth headset.

### Listen to music

- Support A2DP profile.

### PBAP (Phonebook access profile)

- Make contacts in Directory & Call memory easily accessible and even directly operated on car kit or Bluetooth headset if PBAP supported.

## Settings

- **Visibility:** Select whether you want to hide ("Hidden") or show to all ("Visible to all") your phone.
- **My phone's name:** you may change your phone name, which is visible to the others.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and set as "Visible to all".

Your phone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.



# 17 Others.....

## 17.1 Calendar .....

Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

### Available options:

- Create** • Create an appointment.
- View today's appointments** • See today's appointments.
- List all appointments** • See all the created appointments.
- Jump to date** • Input the required date and it will be immediately highlighted.
- Settings** • Set the first day of the week and the first week of the year.

## 17.2 Calculator .....

Access this feature by selecting "**Calculator**" from the main menu.

Enter a number, select the type of operation to be performed using the navigation keys, and enter the second number, then press  key or left softkey to display the result.

Once an operation is complete, you can select "**Clear**" to clear numbers and carry out a new operation.

To return to the main screen, press the "**Back**" softkey.

## 17.3 Notes .....

You can create a note in text or voice format by accessing "**Notes**" from the main menu.

### Available options:

- Open** • Open and view note.
- Send** • Send by SMS, MMS, Email or Bluetooth.
- New text note/ voice memo** • Add new text note or voice memo.
- Delete** • Delete note.
- Delete all** • Delete all notes.
- Input mode** • Select input method.
- Languages** • Select language.

While recording a voice memo, you can define the audio format (AMR, WAV or AWB), Quality (High/Low), and Storage (Phone, memory card).

## 17.4 Tasks .....

Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.

### Available options:

- Add** • Add new task
- Delete** • Delete the current task
- Mark as done/ Mark as not done** • Change task's status



## 17.5 Clock.....



### 17.5.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

**Repeat** • You may select Once (default)/Every day/Days.

**Snooze** • The alarm will repeat at regular intervals.

**Mode** • You may select the mode of Ringtone: Ring, Vibration only, Silence, Radio <sup>(1)</sup> or Vibration and Ring.

### 17.5.2 Clock

Allows you to have settings of date and time, including 12/24h format. You can also set the daylight saving adjustment.

### 17.5.3 World clock

The World clock shows current local time and the time zone in different cities. You may view up to 3 cities at one time (**Options\Set as my city**). Also, you can add a maximum of 10 new cities to the list (**Options\Add**).

<sup>(1)</sup> In Radio mode, you are required to plug in headset first. Your phone will power on automatically before Radio is on.

## 17.6 Converter.....



### 17.6.1 Unit converter

You can use the Weight and Length conversion by selecting the unit you wish to convert via ◀▶, then press ▼ to input the digits. Finally confirm with ◻ key or left softkey.

### 17.6.2 Currency converter

The currency converter allows you to:

- Convert a currency directly into euros and vice versa <sup>(1)</sup>.
- Convert between international currencies, both currencies must be selected by ◀▶ keys. You are requested to input the appropriate exchange rate.

<sup>(1)</sup> For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.



# 8 Settings.....



From the main menu, select the menu icon  and select the function of your choice in order to customise your telephone.

## 18.1 Display

### 18.1.1 Main screen

#### Wallpaper

The wallpaper is displayed when you switch on your telephone.

You can access the main functions from the wallpaper either with the navigation key or by pressing  and by selecting the icons displayed on the screen <sup>(1)</sup>.

By selecting "Wallpaper" you can customise it by replacing the default image or animation displayed on your telephone.

#### Screen saver

If you activate this option, the screen saver will be displayed a little while after the wallpaper. You can choose a picture or an animation as your screen saver.

#### News (On/Off)

Select On/Off to display or not news on main screen.

#### Weather (On/Off)

Select On/Off to display or not weather information on main screen.

<sup>(1)</sup> Depending on the operator.

## Appointment reminder (On/Off)

All appointments will be sorted by due date in Calendar, and the foremost one will be displayed/hidden on main screen as a reminder.



Any displayed events (incoming call, SMS/MMS, news, weather, appointments etc.) can be accessed directly by pressing  keys to select, then confirm with  key.

### 18.1.2 Theme

This function enables you to customise the graphic style and the colours of your telephone.

### 18.1.3 Power On/Off <sup>(1)</sup>

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

### 18.1.4 Brightness

You may adjust black level with respect to LCD display by pressing the key .

### 18.1.5 Backlight

**Screen** • Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.

**Keypad** • You may customise your keypad light by selecting On/Off or inputting your preferred duration directly.

<sup>(1)</sup> Depending on the model.



## 18.2 Languages <sup>(1)</sup>

Display language for messages (select using ) . The "Automatic" option selects the language according to the home network (if available).

## 18.3 Clamshell

### 18.3.1 Clamshell open answer

You can decide whether you want to automatically answer the call when you open the flip.

### 18.3.2 Clamshell close options

You can decide whether you want to continue or stop the running application when you close the flip.

## 18.4 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between Headset only and Phone&Headset.

## 18.5 Input mode <sup>(2)</sup>

Please see chapter "Latin input mode", page 78. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

## 18.6 Vocabulary

You have a vocabulary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your vocabulary, you can add, modify or erase words by using the "Options" softkey.

<sup>(1)</sup> Contact your network operator to check service availability.

<sup>(2)</sup> Depending on the language.

## 18.7 Keypad

### Softkeys & Navigation keys

These keys have predefined functions, which vary from one model to another (operator services, games access, or Games & Applications ...). You can customise <sup>(1)</sup> them, assigning the functions, numbers from directory and URL you wish to each key.

### Ctrl + keys

You can activate a command or shortcut with the ctrl key pressed in combination with another letter.

Ctrl + B Access Bluetooth.

Ctrl + M Access Music player

Ctrl + P Access Profiles

Ctrl + J Access Java applications



Above predefined combinations cannot be modified, but you may add new ones if desired.

### Numeric keys

By customising your keys, you can access any function directly from the main screen.

## 18.8 Home screen <sup>(2)</sup>

From home screen, you can quickly access the features that you use the most.

### • Quick access

When activated, press  keys or Side key to scroll up/down application shortcuts one by one, and press  keys to access a list of available actions of the selected applications. To close the list, press  key.

<sup>(1)</sup> Depending on your network operator.

<sup>(2)</sup> It is activated by default. To exit this function, you can set it off from "Settings\ Home screen\Display\Off".



- **Reorder**

The order of the shortcuts can be varied as you wish. Access "**Edit\Reorder**", select the application, and press keys to the desired destination, then confirm with left softkey and save by selecting "**Done**".

- **Add/Delete** <sup>(1)</sup>

You can add or delete an item via "**Edit\Add**" or "**Edit\Delete**".



A total of 8 shortcuts can be displayed at any one time. Before you can add a new item, you will need to delete one of the original ones first.

## 18.9 Security

### Activate PIN

- The SIM card protection code is requested each time the phone is powered on if this code is activated.

### Change PIN

- Change PIN code.

### Change PIN2

- A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

### Activate phone code

- It is requested each time the phone is powered on if this code is activated.

### Change phone code

- Change phone password, its initial one is 1234.

<sup>(1)</sup> Three predefined items (**Calls**, **Contacts** and **Messages**) can not be deleted.

### Fixed dialed number

- Allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

## 18.10 Network

### Network selection

- Preferred network • List of networks to which you wish to be connected in order of priority (update this list using ).
- Select network • The choice of network connection is left up to the user.
- Search mode • Network connection can be switched between "**Manual**" and "**Automatic**".

### GPRS connection <sup>(1)</sup>

- When needed • GPRS mode active depending on connection requirements.
- Always • GPRS mode continuously active.

### GPRS international roaming

You can enable or not GPRS international roaming by setting "**On**" or "**Off**".

## 18.11 Connectivity

A set of profile settings for messaging (MMS, Email...) and Web connection.

<sup>(1)</sup> Depending on network availability.



# 19 Making the most of your mobile .....

## 19.1 PC suite

You can download software upgrade for free from the website. The PC suite includes:

- Backup/restore
  - You can backup the important data in your mobile and restore them when needed.
- GPRS Modem
  - Use your mobile phone to connect PC to the internet.
- Multimedia Personalization
  - Customize your mobile with images, animations and melodies.
- Messaging
  - You can compose SMS/MMS easily on your PC and transfer them to phone.

### Supported Operating Systems

- Windows 2000/XP/Vista/Windows 7

## 19.2 Webcam <sup>(1)</sup>

You can use your OT-808 as a webcam for instant messaging on your PC.

- Connect your phone to PC via USB cable.
- Go to "My computer" folder on your PC and find USB video device (Under Scanners & Cameras).

<sup>(1)</sup> The using of webcam may vary according to the operating system of your PC.

# 20 Latin input mode/character table <sup>(1)</sup> .....

To write messages, there are two writing methods:

- Normal
- Predictive with the eZi mode

## Normal

This mode allows you to type text by choosing a letter or a sequence of characters.

## Predictive eZi mode

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

<sup>(1)</sup> For specific languages as Chinese, please see specific input leaflets.





## Symbol table

Short press the **SYM** key to display the symbols table; the cursor is positioned in the centre. Use the navigation key to move it and the **OK** key to select.



**Key** :  
Press once:  
input a top-half character.  
Press twice:  
top-half characters  
inputting mode.

Navigation key:  
: Validate the word  
: Previous/next word  
: Page up/down

**Del key** :  
Short keypress:  
delete one by one.  
Long keypress: delete all.

**Caps key** :  
In eZi predictive mode:  
Switch among lowercase,  
incap, and uppercase.  
In normal mode:  
Switch between  
lowercase and uppercase.

**SYM key** :  
Short keypress:  
access the Symbols table  
Long keypress:  
access the language list

**Ctrl key** :  
Short press:  
Switch from eZi predictive  
mode to Normal mode  
Long press: add a word





## 2 | Telephone warranty.....

Your phone is warranted against any defect which may occur in conditions of normal use during the warranty period of twelve (12) months <sup>(1)</sup> from the date of purchase as shown on your original invoice.

Batteries <sup>(2)</sup> and accessories sold with your phone are also warranted against any defect which may occur during the first six (6) months <sup>(1)</sup> from the date of purchase as shown on your original invoice.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with a proof of purchase.

If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

<sup>(1)</sup> The warranty period may vary depending on your country.

<sup>(2)</sup> The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3) Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- 4) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.



## 22 Accessories <sup>(1)</sup> .....

The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.




Standard charger



UK charger <sup>(2)</sup>



Stereo headset

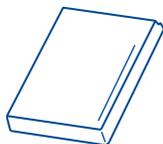

Battery



USB cable



Only use your telephone with Alcatel batteries, chargers and accessories in your box.

<sup>(1)</sup> Pictures for reference only.

<sup>(2)</sup> For UK market only.

## 23 Troubleshooting .....

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge (  ) the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

### My mobile phone will not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

### My phone has not responded for several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

### My screen is difficult to read

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

### My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level



### **My mobile phone will not charge properly**

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C - +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible

### **My mobile phone will not connect to a network**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 76)
- Try connecting at a later time if the network is overloaded

### **SIM card error**

- Make sure the SIM card has been correctly inserted (see page 19)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

### **Unable to make outgoing calls**

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 41)

### **Unable to receive incoming calls**

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 41)
- Make sure that you have not barred certain calls

### **The caller's name does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

### **The sound quality of the calls is not optimal**

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon level 

### **I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

### **When I select a number from my directory, the number is not dialled**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

### **I am unable to add a contact in my directory**

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)

### **My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

### **I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

### **I am unable to send and receive MMS**

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 31)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be swamped; try again later

### **The icon is displayed on my standby screen**

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory



### "No service" is displayed

- You are outside of the network coverage area

### I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

### I am unable to connect my telephone to my computer

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

### I am unable to download new files

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

### The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users (see page 65)

### My mobile phone is dead, can't power on

- Make sure your battery is not completely used up or damaged.
- Remove your battery, **remove your SIM** card then power it on again.
- Hold down # + power on/off key at same time to reset it.



ALL User phone data: contacts, photos, messages and files, downloaded applications like Java games will be **lost permanently**.

### How to make your battery last longer

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request.
- Extend email auto-check interval as long as possible.
- Update news, weather info. upon demand manually or set its auto-check interval longer.
- Exit Java background-running applications if they are not being used for a long time.
- Deactivate Bluetooth when not in use.

ALCATEL is a trademark of Alcatel-Lucent  
and used under license by  
TCT Mobile Limited.

All rights reserved © Copyright 2010  
TCT Mobile Limited.

TCT Mobile Limited reserves  
the right to alter material or technical  
specification without prior notice.