

 **AUDIOVOX**
Communications Corp.

 **AUDIOVOX**
Communications Corp.
185 OSER AVE., HAUPPAUGE, NY 11788

OPERATING INSTRUCTIONS



**HANDHELD PORTABLE CELLULAR TELEPHONE
COMPLETE WITH CHARGER AND BATTERY**

MVX506

MVX506 HANDHELD CELLULAR TELEPHONE

Congratulations. By choosing the MVX506, you have joined the millions of satisfied customers who are enjoying the benefits and quality performance that only an Audiovox Cellular Telephone can provide.

Your Audiovox Portable Cellular Telephone has been designed to the highest standards of quality and manufacturing excellence to fulfill both your personal and business requirements. Fully charged standard Ni-Cd battery provides approximately 80 minutes of continuous talk time or approximately 12 hours of standby time.

The Audiovox MVX506 is packed with advanced features like Programmable One Touch Emergency Dialing, Anti-Fraud Security Features, Automatic Call Retry, a Constant Signal Strength Indicator and Battery Level Indicator.

Optional Accessories include; an Extended Life Nickel Metal Hydride Battery, a Slim Profile Nickel Metal Hydride Battery, a Hands free Mobile Kit with provisions for external antenna and a 3 watt RF Power Booster. A Desk Top Charger, Cigarette Lighter Charger, Battery Eliminator and a Leather Carrying Case are also available.

And of course, your new Audiovox MVX506 comes with something only an Audiovox phone can provide. The proven reliability that has made Audiovox one of the world's leading suppliers of cellular communications equipment.

The following pages describe the unit's functions and will help you make the most efficient use of this wonderful communications tool.

Following codes can be obtained through your selling Audiovox dealer.

- a. 3-digit Initial Lock (Unlock) Code
- b. 3-digit Initial Call Restriction Code
- c. 2-digit Initial Call Counter Code
- d. 2-digit Initial Call Timer Code

Keep these codes in a safe place!

TABLE OF CONTENTS

INTRODUCTION	3
Safety Information for Wireless Handheld Phones	3
Features	7
Key/Display Names and Functions	8
Wrist Strap Attachment	10
BATTERY OPERATION	10
Battery Insertion/Removal	10
Battery Charging	11
Battery Level Indicator	12
Low Battery Warning	12
BASIC OPERATION	13
Turning the Phone ON and OFF	13
Backlighting	13
Antenna Position	13
Display Own Telephone Number	13
Display Own System ID	13
Placing Calls	13
Call-in Progress Protection	14
Receiving Calls	14
Call in Absence Indication	14
Silent Incoming Calls	14
Automatic Answering	15
Redialing Functions	15
Last Three Numbers Dialed	15
Automatic Redial (Programmable Option)	16
MIC Mute During Conversation	16
Volume Adjustment	16
Earpiece Volume	16
Alert Volume	16
Keypad Tone Volume	16
ENHANCED OPERATION	17
Locking/Unlocking the Phone	17
Locking the Phone	17
Changing the Unlock Code	17
Automatic Lock (Programmable Option)	17
Keypad Disable Function in Handsfree Mode (Programmable Option)	18
Storing in the Memory	19
Name Entry Keys	19
Manual Storage	20
Automatic Storage	21
Storage After Vacant Memory Location Search	22
Editing the Telephone Numbers and Names	23
Editing the Telephone Numbers	23
Editing the Names	24
Editing Phone Number under Stored Name	24
Memory Search	24

Recalling Numbers from Memory	24
Memory Dialing	24
Dialing after Telephone Number Search	25
Dialing after Name Search	25
Speed Dialing	25
One Touch Dialing	26
Storing in the One Touch Memory	26
Placing a Call with One Touch Memory	26
Programmable One Touch Emergency Call	26
Placing One Touch Emergency Call	26
One Touch Emergency Call ON/OFF	26
Programming a New Emergency Number	26
Scratch Pad Memory	27
Storing Numbers in the Scratch Pad Memory	27
Dialing Numbers in the Scratch Pad Memory	27
Emergency and Priority Dialing	27
Storing the Emergency and Priority Number	27
Dialing the Emergency and Priority Number	27

EXTENDED FEATURES AND FUNCTIONS 28

Call Restriction	28
To Activate the Call Restriction	28
To Change the Call Restriction Code	28
Keypad (DTMF) Tones	29
Keypad (DTMF) Tones Duration Selection	29
Keypad (DTMF) Tones Mute during conversation	29
Sending DTMF Tones During a Call	29
Timer and Counter Functions	29
Elapsed Time Display	29
Outgoing Call Timer	30
Cumulative Call Timer	30
Temporary Accumulated Call Counter	30
Outgoing Call Counter	31
Accumulated Call Counter	31
To Change the Call Timer/Call Counter Codes	31
Call Time Warning Tone	32
SID Management (Programmable Option)	32
A/B System Selection	32
Multiple City Registration	33
Current SID, Channel and RSSI Level Display	34
Electronic Serial Number (ESN)	34
Anti Fraud Security Feature (PIN Feature)	34
Function Review	35
Audiovox Accessory Catalog	39

GENERAL SPECIFICATIONS 43

TABLE OF KEY OPERATION 44

12 MONTH LIMITED WARRANTY 47

INTRODUCTION

First introduced in 1984, the handheld portable cellular telephone is one of the most exciting and innovative electronic products ever developed. With it you can stay in contact with your office, your home, emergency services, and others.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

READ THIS INFORMATION BEFORE USING YOUR HANDHELD PORTABLE CELLULAR TELEPHONE

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992)*

NCRP Report 86 (1986)*

ICNIRP (1996)*

- American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

PHONE OPERATION

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION : For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

DRIVING

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving - - driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the events of such interference, you may want to consult your service provider or call the customer service line to discuss alternatives.

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

VEHICLES

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

POSTED FACILITIES

Turn your phone OFF in any facility where posted notices so require.

AIRCRAFT

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "**Turn off two-way radio**". Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical

transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

FOR VEHICLES EQUIPPED WITH AN AIR BAG

An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FEATURES


- SID management (programmable option)
- Multiple city registration
- Easy to read LCD display with alphanumeric and status indicators
- Back-lit keypad and LCD display
- Microphone mute control
- Priority/emergency calling with automatic retry
- 9 number speed dialing
- Automatic redial (programmable option)
- 89 alphanumeric memory locations
- 7 location scratch pad, with automatic scroll
- Vacant memory location search
- Automatic entry into vacant memory location
- Phone number search
- Name search
- Programmable one touch dialing
- Programmable one touch emergency call
- Last 3 number dialed memory
- Silent incoming calls
- Automatic answering
- Call in progress protection
- Call time warning tone
- DTMF tone dialing from memory
- DTMF keypad mute
- DTMF extended tone dialing
- A/B system selection
- Current SID, RF channel and RSSI level display
- Automatic self diagnostics
- Electronic serial number display (own)
- Telephone number display (own)
- System ID display (own)
- 6 function call timer
- Function review
- Constant battery level indicator
- Anti-Fraud PIN feature capability
- Automatic lock (programmable option)
- Keypad disable in handsfree mode (programmable option)

This cellular telephone is also capable of supporting the following optional network services.

- 1) Caller ID
- 2) Voice Mail Notification
- 3) Short messaging Service


Note: Your cellular service provider may use different terminology when referring to the enhanced features listed above. Please check with your cellular service provider for an explanation and availability of these enhanced features.

KEY/DISPLAY NAMES AND FUNCTIONS

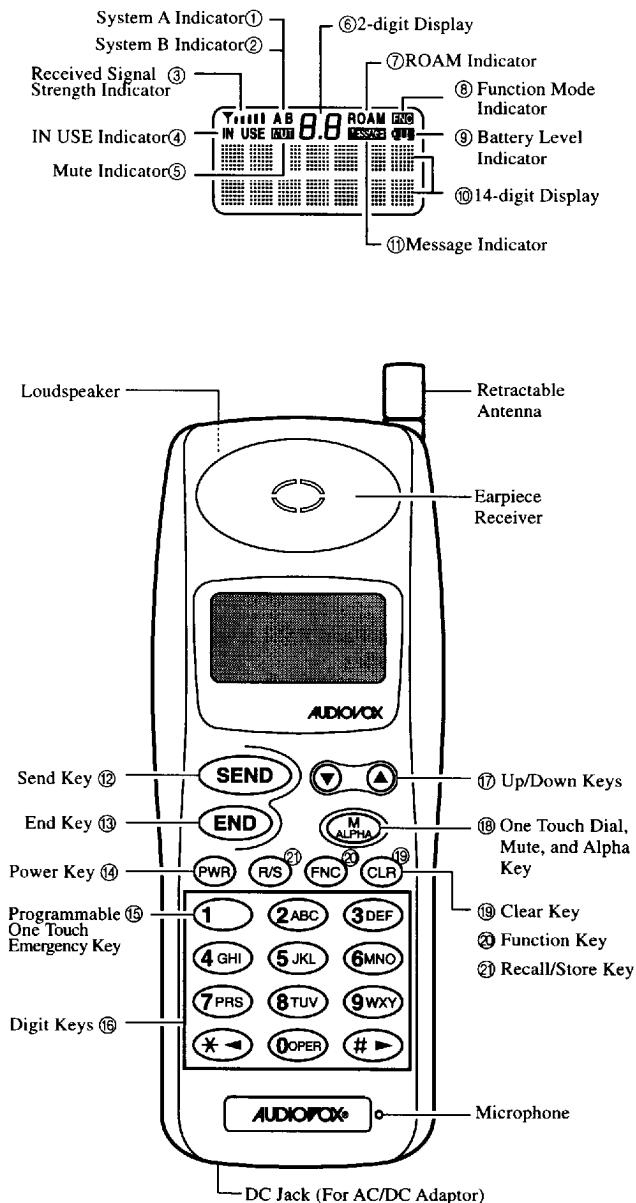

- ① **A** lights when the system A (non-wireline) or standard mode is selected.
- ② **B** lights when the system B (wireline) or standard mode is selected.
- ③ Received Signal Strength Indicator constantly displays the signal strength represented by the number of bars.
- ④ **IN USE** lights when a call is in progress.
- ⑤ **MUT** lights when the mute control is in effect.
- ⑥ 2-digit display **8.8** shows the memory location number and the status of various functions.
- ⑦ **ROAM** lights when receiving services other than a registered home system.
- ⑧ **FNC** lights when **(FNC)** is pressed to select extended functions, etc.
- ⑨ Battery Level Indicator constantly displays Battery Level by the number of bar segments.
- ⑩ 14-digit display shows the telephone number dialed, etc.
- ⑪ **MESSAGE** flashes when Message is received where Enhanced Feature Service is provided.
- ⑫ **(SEND)** initiates and answers a call.
- ⑬ **(END)** terminates a call.
- ⑭ **(PWR)** (Power) turns your phone on and off.
- ⑮ **(1)** (Programmable One Touch Emergency Key) places a call to the programmed emergency number by a single key stroke.
- ⑯ Digit keys enter telephone numbers, alphanumeric information, etc.
- ⑰ Up/Down keys and adjusts the alert, earpiece and keypad tones. and are also used to select ON/OFF setting and scroll.
- ⑱ **(M)** (One Touch Dial, Mute and Alpha Key):
 - In standby mode, the stored telephone number in the one touch memory is dialed with a single key stroke.
 - During conversation, switches off the microphone to mute your voice.
 - Used to enter alphanumeric characters.
- ⑲ **(CLR)** (Clear) clears the digit(s) from the display.
- ⑳ **(FNC)** (Function) is used with digit keys to allow operation of extended functions, etc.
- ㉑ **(R/S)** (Recall/Store) recalls telephone numbers from the memory. Also used to store telephone numbers in the memory.

WRIST STRAP ATTACHMENT

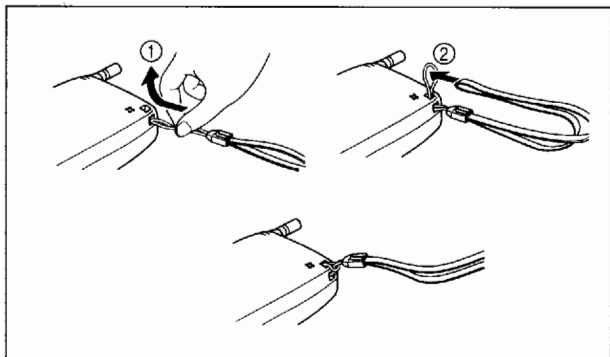


BATTERY OPERATION


Be sure that your battery is fully charged before using your cellular telephone for the first time. The telephone will not operate without a charged battery.

BATTERY INSERTION/REMOVAL


Battery Insertion

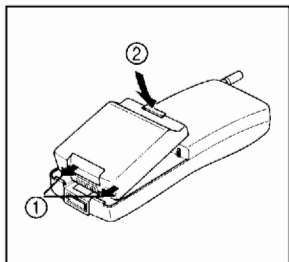

Battery Removal

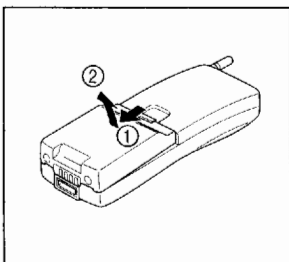

BATTERY CHARGING

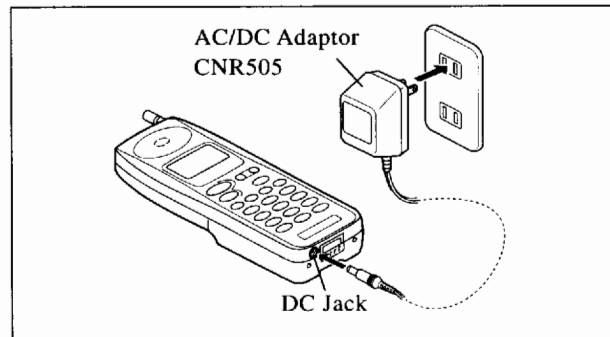

When your battery is charged, "Battery Charge" appears in the display. The bar segment of the Battery Level Indicator flashes during charging.

- When "Fully Charged" appears in the display, battery charging is completed.

Notes: • The standard battery BTR405 and the optional BTM405 will be fully charged in about 2 hours. The optional BTE405 will be fully charged in about 3 hours. However, actual charging time varies with battery conditions.

- To place or receive calls during charging, press and hold **PWR** to turn your phone on. After calls, press and hold **PWR** again to turn your phone off.

CAUTIONS:

- Use only the supplied AC/DC Adaptor CNR505. Using other AC/DC Adaptors can damage the battery and/or the handset.
- Do not discard the battery into fire.
- Do not "short out" the battery (direct connection of the + and - terminals on the battery).
- Do not use any batteries or chargers other than those specifically designed for use with this phone.
- Charge the battery indoors with the ambient temperature between 41°F and 104°F (5°C and 40°C).
- Do not charge the battery in direct sunlight, or in high humidity places like a bathroom.

- Do not recharge or “top-off” the battery pack by charging for short periods of time to avoid shortening the battery life. It is recommended to charge the battery after the battery is discharged completely.

- The product that you have purchased contains a rechargeable Battery. The Battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this Battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.



Power Management Talk & Stand-By Times

Battery	Talk-Time	Stand-By Time	Weight
800 mAh NICAD BTR405	80 Minutes	12 Hours	7.6 oz.
1200mAh NiMH BTE405	120 Minutes	20 Hours	8.1 oz.
800 mAh NiMH BTM405	80 Minutes	12 Hours	7.6 oz.

Please note all times are approximate.

BATTERY LEVEL INDICATOR

The battery Level Indicator shows the current strength of the battery in the three-level bar segment in the battery symbol. Note that the battery level indication may be affected by variables such as temperature, battery age, and charging conditions.

Talk & Stand-by times can vary and are dependent upon the coverage of the network and how you use your phone.

LOW BATTERY WARNING

When “Low Battery” and the Battery Level Indicator flash every second, and an alarm tone sounds, there are only a few minutes left for call processing. If usage continues, “Low Battery” flashes more frequently. A few moments later, your call is terminated and your phone is automatically turned off.

BASIC OPERATION

TURNING THE PHONE ON AND OFF

Press and hold **(PWR)** to turn on your phone. Your own telephone number will be momentarily displayed.

Note: When “NO SVC” (No Service) is displayed, you cannot place or receive calls as the “Cellular System” is not available.

To turn off your phone, press and hold **(PWR)** again.

Backlighting

When you press any key, the backlighting for display and keypad turns on to provide easier operation of your phone. It will go out 8 seconds after the last key press.

Antenna Position

The dual position antenna allows your phone to receive calls while the antenna is down. However, for optimum performance and signal strength or while operating in poor signal areas, please extend your antenna fully.

Note: The antenna can be used in its fully extended or fully retracted position only.

Display Own Telephone Number

Press **(FNC)**, **(#)**, **(1)**.

To clear the display, press **(CLR)**.

Display Own System ID

Press **(FNC)**, **(#)**, **(3DEF)**.

 
To clear the display, press **(CLR)**.

PLACING CALLS

1. Enter the telephone number.
2. Press **(SEND)**.
The **IN USE** indicator will light.
3. When you finish talking, press **(END)**.

Example: To call 123-4567

1. Enter **1** **2ABC** **3DEF** **4GHI** **5JKL** **6MNO** **7PRS**.
2. Press **SEND**.
Talk with the other party.
3. To terminate the call, press **END**.



To Correct Entered Digits:

- Press **CLR** to erase the last digit entered.
- Press and hold **CLR** to erase the whole number.

To View Whole Number (Hidden Digits):

Although you can enter up to 32 digits, the display can show the last 14 digits only. To view the whole number, press and hold **FNC** key. The hidden digits (over 14 digits) and the last 14 digits will scroll displaying "P 1" (for the last 14 digit), "P 2" (for the next 14 digits) and "P 3" (for the rest of upper digits).

Call-in Progress Protection

Even if **PWR** is pressed during conversation, your call is not interrupted.

RECEIVING CALLS

1. When an incoming call is attempted, an alert tone will sound and "CALL" will flash repeatedly.
2. Press any key except **PWR**, **END**, **▲**, and **▼**.
The **IN USE** will light and you can talk with the other party.
3. To terminate your call, press **END**.

Call in Absence Indication

If calls go unanswered, "CALL" and the number of unanswered calls will appear in the 2-digit display.

To clear the display, press **CLR**.

Silent Incoming Calls

When this feature is activated, a single beep and a flashing "CALL" message will alert you of an incoming call.

Note: If the Silent Incoming Calls is activated, "Silent Alert on" will be displayed when your phone is powered up.

To Activate the Silent Incoming Calls:

Press **FNC**, **8TUV**.

"Silent Alert on" will be displayed.

To clear the display, press **CLR**.

To Deactivate the Silent Incoming Calls:

Press **FNC**, **8TUV** again.

"Silent Alert off" will be displayed.

To clear the display, press **CLR**.

Automatic Answering

When this feature is activated in handsfree mode, your phone will automatically answer an incoming call on the second alert.

To Activate Automatic Answering:

Press **FNC**, **9WXYZ**.

"Auto Answer on" will be displayed.

To clear the display, press **CLR**.

To Deactivate Automatic Answering:

Press **FNC**, **9WXYZ** again.

"Auto Answer off" will be displayed.

To clear the display, press **CLR**.

Notes: • Automatic Answering will function in handsfree mode only.

- Automatic Answering will not function if your phone is in the lock, call restriction, or silent incoming calls mode.
- If Automatic Answering is activated, "Auto Answer on" will be displayed when your phone is powered up.

REDIALING FUNCTIONS

Last Three Numbers Dialed

You can display and redial any of the last three telephone numbers you tried to call.

1. Select one of the telephone numbers out of three.
 - Press **R/S**, **#**, **0OPER** to display the most recent number.
 - Press **R/S**, **#**, **1** to display the second most recent number.
 - Press **R/S**, **#**, **2ABC** to display the third most recent number.

2. Press **SEND** for redialing.

Note: If “Ready” is displayed and you wish to redial the last number dialed, simply press **SEND**.

Automatic Redial (Programmable Option)

If Automatic Redial is selected, your phone will automatically continue redialing in 20 seconds if the attempt to reach the cell site is not successful. The **IN USE** indicator will stay on, but the earpiece speaker will be muted.

Note: Automatic Redial will initiate only on a “Cellular System” busy signal but not on a “Line” busy signal.

MIC MUTE DURING CONVERSATION

To Mute the Microphone:

During conversation, press **M**.

To Release Mute:

During conversation, press **M** again.

Note: The mute will be automatically released when the call is terminated.

VOLUME ADJUSTMENT

Your phone has 7-level volume controls each for the “Earpiece” volume, the alert level and the keypad tone level.

Earpiece Volume

During conversation, press **▲** or **▼** to raise or lower the loudness of other party's voice.

While not in use, press **FNC**, ***->**, **9WXY**, **0OPEN**, to display “Voice”. Press **▲** or **▼** to adjust the earpiece Volume.

Alert Volume

During ringing, press **▲** or **▼** to raise or lower the alert volume level.

While not in use, press **FNC**, ***->**, **9WXY**, **1**, to display “Alert”. Press **▲** or **▼** to adjust the Alert Volume.

Keypad Tone Volume

In standby mode, press **▲** or **▼** to raise or lower the keypad tone volume level.

ENHANCED OPERATION

LOCKING/UNLOCKING THE PHONE

You can restrict outgoing calls except for the Programmable One Touch Emergency Call, Emergency (911, 000, 119), and the number stored in the emergency/priority dialing area. Your phone will receive calls normally even if it is locked.

Locking the Phone

1. Press **FNC**, **5JKL**.
2. Enter the 3-digit Unlock code.

Notes: • Please contact your selling Audiovox dealer to check the initial Unlock code.
• If your phone is locked, “Locked” will be displayed when your phone is powered up.

To Unlock the Phone:

While “Locked” is displayed, enter the 3-digit Unlock code.

Changing the Unlock Code

1. Press **FNC**, **#>**, **5JKL**, **1**.
“Unlock Pre?” will be displayed.
2. Enter the current 3-digit Unlock code.

Note: Please contact your selling Audiovox dealer to check the initial Unlock code.

“Unlock New?” will be displayed.

3. Enter a new 3-digit Unlock code except 911, 000, and 119.
4. Press **R/S**.

CAUTION: Keep the record of new code in a safe place!

AUTOMATIC LOCK (PROGRAMMABLE OPTION)

You can automatically lock the phone by programmable option each time your phone is turned on.

The display shows “Locked” when your phone is turned on. Even in automatic lock mode, your phone will receive calls normally.

To Unlock the Phone:

Enter the 3-digit Unlock code.

- Notes:**
- When your phone is disconnected from the curly cord, your phone goes into the locked mode automatically if Automatic Lock is selected by Programmable option.
 - When both automatic lock and keypad disable modes are selected by Programmable option and your phone is connected to the handsfree kit with curly cord, the display shows "Keypad Disable" upon powering up.

KEYPAD DISABLE FUNCTION IN HANDSFREE MODE (PROGRAMMABLE OPTION)

This function prevents accidental or unintentional use of the keypad in handsfree mode.

When this function is activated by Programmable option, no key operations in handsfree mode are possible. The display shows "Keypad Disable" each time your phone is turned on.

Note: Even in keypad disable mode, your phone will receive calls normally.

To Temporarily Release Keypad Disable Mode:

Press and hold **[*←]** and **[#→]** simultaneously. "Keypad Disable" will disappear.

To Return to Keypad Disable Mode:

Press and hold **[*←]** and **[#→]** simultaneously again. "Keypad Disable" will be displayed.

Note: When handsfree curly cord is disconnected from your phone, key operations become possible and "Keypad Disable" disappears.

STORING IN THE MEMORY

You can store telephone numbers and names in the 89 memory locations. For each memory location, you can store a telephone number of up to 32 digits and a name of up to 7 characters. (Entry of name can be omitted.)

Name Entry Keys

To enter names, the following keys are used:

[Alphanumeric Character Entry Keys]

Key	Key Presses				
	1st	2nd	3rd	4th	5th
[1]	&	@	Space	1	
[2 ABC]	A	B	C	2	
[3 DEF]	D	E	F	3	
[4 GHI]	G	H	I	4	
[5 JKL]	J	K	L	5	
[6 MNO]	M	N	O	6	
[7 PRS]	P	Q	R	5	7
[8 TUV]	T	U	V	8	
[9 WXY]	W	X	Y	Z	9
[0 PWR]	-	-	#	0	

[Editor Function Keys]

Key	Function
[#→]	Shifts cursor to the right.
[*←]	Shifts cursor to the left.
Press [CLR]	Deletes the character where the cursor is positioned.
Hold [CLR]	Deletes all the characters.

The following example shows how to enter the name JOHN. You can learn the characters behind the digit keys and how to move the characters with the cursor keys. Note this example illustrates how to enter a name but not actually store the name.

Example: To enter the name JOHN

1. To enter name entry mode,

press (CLR) (FNC) (M ALPHA).

"ALPHA" will blink.

2. Enter the name JOHN.

Press (5 JKL) (# >) (6 MNO)

(J) (J) (JM)

(6 MNO) (6 MNO) (# >) (4 GHI)

(JN) (JO) (JO) (JOG)

(4 GHI) (# >) (6 MNO) (6 MNO).

(JOH) (JOH) (JOHM) (JOHN)

3. Press (END) to terminate this example.

Y:|||| AB
ALPHA ?
TEL NO?

Y:|||| AB
JOHN
TEL NO?

Manual Storage

Telephone numbers and names can be stored manually into the memory locations 01 to 89.

1. Press (CLR), then enter the telephone number.
2. Enter the name.
 - 1) Press (FNC), (M ALPHA). "ALPHA?" will blink.
 - 2) Enter the name with the name entry keys.
3. Press (FNC), (R/S). "Store ?" will be displayed.
4. Enter a 2-digit location number (01-89). After the momentary display of "Stored", the stored memory location number, the telephone number and name remain displayed.
5. Press (CLR).

Note: If the selected memory location number is already used, the previous information will be overwritten.

The following examples show how to store the telephone number together with name, as well as how to store telephone number alone.

Example 1: To store telephone No. 123-4567 with name JOHN in memory location No. 10

1. Press (CLR), then enter (1) (2 ABC) (3 DEF)

(4 GHI) (5 JKL) (6 MNO) (7 PRS).

Y:|||| AB
ALPHA?
1234567

2. Press (FNC) (M ALPHA).

"ALPHA?" will blink.

3. Enter the name JOHN with the name entry keys.

Y:|||| AB
JOHN
1234567

4. Press (FNC) (R/S). "Store ?" will be displayed.

5. Enter (1) (00PRH). After the momentary display of "Stored", the stored memory location number, telephone number and name will be displayed.

Y:|||| AB
10
JOHN
1234567

6. Press (CLR) to clear the display.

Note: If telephone number is not entered before pressing (FNC) (M ALPHA) "TEL NO?" is displayed. In this case, press (M ALPHA) to enter the telephone number.

Example 2: To store telephone No. 234-5678 alone in memory location No. 11

1. Press (CLR), then enter (2 ABC) (3 DEF) (4 GHI)

(5 JKL) (6 MNO) (7 PRS) (8 TUV).

Y:|||| AB
2345678

2. Press (FNC) (R/S).

3. Enter (1) (1) while the telephone number is blinking.

Y:|||| AB
11
2345678

4. Press (CLR) to clear the display.

Automatic Storage

You can automatically store telephone numbers and names in vacant memory locations. (You may choose to omit names.)

1. Press **CLR**, then enter the telephone number.

2. Enter the name.

1) Press **FNC**, **M ALPHA**. "ALPHA?" will blink.

2) Enter the name with the name entry keys.

3. Press **FNC**, **R/S**, **R/S**.

The telephone number and name are automatically stored in the first available vacant memory location.

4. Press **CLR**.

Note: If there is no available location, "Memory Full" will be displayed. In this case, choose a memory location that you wish to overwrite with the new information (Name, Number).

Example: To automatically store telephone No. 345-6789 with name JOHN in vacant memory

1. Press **CLR**, then enter **3 DEF** **4 GHI** **5 JKL**

6 MNO **7 PRS** **8 TUV** **9 WXY**.

2. Enter the name.

1) Press **FNC**, **M ALPHA**. "ALPHA?" will blink.

2) Enter the name with the name entry keys.

3. Press **FNC**, **R/S**, **R/S**.

The telephone number and name are automatically stored in the vacant memory location 12, for example.

4. Press **CLR**.

YIMTAB 12 QTH
JOHN
3456789

Storage After Vacant Memory Location Search

You can search for unused memory locations to which telephone numbers and names can be stored. (You may choose to omit names.)

1. Press **CLR**, then enter the telephone number.

2. Enter the name.

1) Press **FNC**, **M ALPHA**. "ALPHA?" will blink.

2) Enter the name with the name entry keys.

3. Press **FNC**, **R/S**.

4. Press **▲** or **▼** to search for the desired vacant memory location.

5. Press **R/S** to store in that memory location.

6. Press **CLR**.

Example: To store telephone No. 456-7890 with name JOHN in the vacant memory location No. 13

1. Press **CLR**, then enter **4 GHI** **5 JKL** **6 MNO** **7 PRS** **8 TUV** **9 WXY** **0 OPQ**.

2. Enter the name.

1) Press **FNC**, **M ALPHA**. "ALPHA?" will blink.

2) Enter the name with the name entry keys.

3. Press **FNC**, **R/S**.

4. Press **▲** or **▼** to search for vacant memory location 13, for example.

5. Press **R/S**.

6. Press **CLR**.

YIMTAB 13 QTH
JOHN
4567890

Notes: • To exit the Vacant Memory Location Search function, press **END**.

• If there is no available location, "Memory Full" will be displayed. In this case, choose a memory location that you wish to overwrite with new information (Name, Number).

EDITING THE TELEPHONE NUMBERS AND NAMES

You can edit the telephone numbers or names as required.

Editing the Telephone Numbers

To Change the Telephone Number of Location No. XX (01-89):

1. Press **CLR**, then enter a new telephone number.

2. Press **FNC**, **R/S**. The entered telephone number will blink.

3. Enter 2-digit location number **X X** to store the new number.

To Delete the Telephone Number of Location No. XX (1-89):

1. To display the telephone number, follow one of the next procedures.

• To search for the telephone number, press **R/S**, then **▲** / **▼**.

• Press **R/S**, **X/X/X**.

2. Press **CLR**. "Memory Clear ?" will be displayed.

3. Press **CLR** again. "Memory Cleared" will be displayed.

Editing the Names

To edit the name of location No. XX (1-89), follow the next steps.

1. Press **R/S**, and enter **X/X/X**.
2. Press **FNC**, **M ALPHA**.
3. Edit the name with the name entry keys.
4. Press **FNC**, **R/S**, **R/S** to store the new name.

Note: To exit the editing mode, press **END** at any time.

Editing Phone Number under stored Name

To edit phone number under stored name, follow the next steps.

1. Press **FNC**, **M ALPHA**.
2. Enter the name with the name entry keys.
3. Enter **R/S**, **▲/▼** for direct search.
4. Press **M ALPHA**, **M ALPHA** to set phone number edit mode.
5. Enter new Phone No.
6. Press **FNC**, **R/S**, **R/S** to store.
7. Press **CLR** to clear the display.

Memory Search

When you wish to search the memory information:

1. Press **R/S**. "Recall" will be displayed.
2. Press **▲** or **▼** to scroll up/down memory information.

Note: Holding **▲** or **▼** automatically scrolls up/down memory information.

RECALLING NUMBERS FROM MEMORY

Memory Dialing

 
Telephone numbers can be recalled and dialed from one of any 89 different memory locations.

1. Press **R/S**.
2. Enter the 1 or 2 digit location number (1-89).
The telephone number and name will appear.
3. Press **SEND** to initiate dialing.

Note: If nothing is stored in a particular memory location, "Memory Empty" will be displayed. In this case, check the memory location with Memory Search.

Example: To place a call using memory location No. 10

1. Press **R/S**.
2. Enter **1**, **0**.
3. Press **SEND**.



Dialing after Telephone Number Search

You can scan, recall and dial numbers stored in memory locations 1 through 89.

1. Press **R/S**.
2. Press **▲** or **▼** to scroll up or down the memory locations.
3. If your desired telephone number is displayed, press **SEND** to initiate dialing.

Note: To exit the search mode, press **END** at any time.

Dialing after Name Search

You can dial after searching for telephone numbers by their names.

1. Press **CLR**, **FNC**, **M ALPHA**.
"ALPHA?" will blink.
2. Enter the beginning part of name with the digit keys.
Example: Enter J, JO, or JOH for JOHN.
3. Press **R/S**. "Search" will be displayed.
4. Press **▲** or **▼** to search for the desired name.
5. Press **SEND** to initiate dialing.

Notes: • If no name was found, "Not Found" will be displayed in step 4. Enter another character(s) to continue name search.

• To exit from the search mode, press **END** at any time.

Speed Dialing

You can place a call from the stored memory locations 1 to 9 using the keys **1** to **9WXY**.

1. Press one of keys **1** to **9WXY**.
2. Press **SEND** to initiate dialing.

ONE TOUCH DIALING

You can place a call with **(M ALPHA)** key after storing a telephone number in the one touch memory assigned to **(M ALPHA)** key.

Storing in the One Touch Memory

1. Press **(CLR)**, then enter a telephone number.
2. Press **(FNC)**, **(R/S)**, **(M ALPHA)**.

Note: The stored telephone number can be reviewed by pressing **(R/S)**, **(M ALPHA)**.

Placing a Call with One Touch Memory

1. Press and hold **(M ALPHA)**.
2. The telephone number appears, and the **IN USE** indicator will light as a call is placed.

PROGRAMMABLE ONE TOUCH EMERGENCY CALL

You can place an emergency call with **(1)** key alone, even when the phone is in lock and/or call restriction mode. 911 is the preset emergency number. You can reprogram this number with another number (up to 7 digits) if you wish. Also, you can deactivate this feature to avoid an unintentional call by mistake.

Placing One Touch Emergency Call

1. Press and hold **(1)** for 2 seconds.
The pre-programmed emergency number will appear, and the **IN USE** indicator will light as a call is placed.

One Touch Emergency Call ON/OFF

1. Press **(FNC)**, **(*)**, **(4 GH)**.
2. Enter the 3-digit Unlock code.
3. Press **(▲)** to select “ON”, or **(▼)** to select “OFF”.
4. Press **(R/S)** to store and exit.
5. Press **(CLR)** to clear the display.

Programming a New Emergency Number

1. Press **(FNC)**, **(*)**, **(4 GH)**.
2. Enter the 3-digit Unlock code.
3. Enter a new emergency number (Max. 7 digits).
4. Press **(R/S)** to store and exit.
5. Press **(CLR)** to clear the display.

SCRATCH PAD MEMORY

As a sort of numerical note pad, you can enter up to 7 entries in special memory locations (memory locations 90 to 96) of up to 32 digits each. Also, you can place a call from the scratch pad memory. The 8th entry scrolls the scratch pad memory and the number entered first is erased.

Note: Contents of the scratch pad memory will not be cleared even if the phone is turned off.

Storing Numbers in the Scratch Pad Memory

1. Press **(CLR)** and enter a number you wish to store (up to 32 digits).
2. Press **(FNC)**, **(1)**.

Dialing Numbers in the Scratch Pad Memory

1. Press **(R/S)**.
2. Enter one of the location numbers (90 to 96).
Example: Enter **(9WXY)** **(OPER)** to recall the last number entered.
3. Press **(SEND)** to initiate dialing.

EMERGENCY AND PRIORITY DIALING

You can store a single telephone number up to 32 digits for emergency or priority purpose. The memory location 97 is reserved for this purpose.

Storing the Emergency and Priority Number

1. Press **(CLR)**, then enter the telephone number.
2. Press **(FNC)**, **(R/S)**.
3. Enter **(9WXY)**, **(7PRS)** while the telephone number is blinking.
4. Press **(CLR)** to clear the display.

Dialing the Emergency and Priority Number

1. Press **(R/S)**, **(9WXY)**, **(7PRS)**.
2. Press **(SEND)**.

Note: The emergency and priority number will automatically be redialed up to 3 times at 50 second intervals or until a connection is made. During redialing sequence, “Priority Dial” will be displayed indicating that this feature is in operation.

EXTENDED FEATURES AND FUNCTIONS

CALL RESTRICTION

In the call restriction mode, only specific keys are effective to prevent unauthorized operation of the phone. Only the following keys are operative to place a call.

- 1) Any combination of numbers 1 and 2 for a call:

- (R/S) + (1, 2, 11, 12, 21, 22) + (SEND)

- 2) Emergency Calls:

- (R/S) + 9 + 7 + (SEND)

- 9 + 1 + 1 + (SEND)

- 0 + 0 + 0 + (SEND)

- 1 + 1 + 9 + (SEND)

- 3) One Touch Emergency Call:

- Holding (1) for 2 seconds.

Note: You can receive a call even if the phone is in the call restriction mode.

To Activate Call Restriction

1. Press (FNC), (*), (5 JKL).
2. Enter the 3-digit Call Restriction code.

Note: Please contact your selling Audiovox dealer to check the initial Call Restriction code.

“CR” will be displayed to indicate that call restriction is in effect.

Note: The call restriction is effective until it is deactivated. When the power is turned on, “CR” will be displayed. (“Locked” will be displayed if the phone is locked.)

To Exit Call Restriction Mode:

While “CR” is displayed, enter the 3-digit Call Restriction code. Then, “Regular” will be displayed. To clear the display, press (CLR).

To Change the Call Restriction Code

1. Press (FNC), (*), (5 JKL), (2 ABC).
“Restr. Pre?” will be displayed.
2. Enter the current 3-digit Call Restriction code.
“Restr. New?” will be displayed.
3. Enter a new 3-digit Call Restriction code except 911, 000, and 119.
4. Press (R/S).

CAUTION: Keep the record of new code in a safe place!

Note: If you enter a wrong code in step 2, your phone returns to standby mode.

KEYPAD (DTMF) TONES

Dual Tone Multi-Frequency (DTMF), or “Keypad Tone” signals can be transmitted during a call by entering digits on the keypad or recalling numbers from the memory. By sending the DTMF signals, you can access special services such as voice mail and answering machines that require long duration tone.

Keypad (DTMF) Tones Duration Selection

To toggle the Long Tone and Short Tone for the time duration of DTMF tones, press (FNC), (#), (8 TUV).

Keypad (DTMF) Tones Mute during conversation

To mute the keypad (DTMF) tone, press (FNC), (3 DEF) during conversation.

To enable the keypad (DTMF) tones, press (FNC), (3 DEF) again during conversation.

Sending DTMF Tones During a Call From the Keypad:

1. During a call, press any key on the keypad.

From the Memory:

1. During a call, press (R/S), (*).
2. Enter a 2-digit memory location (01-89).

TIMER AND COUNTER FUNCTIONS

Elapsed Time Display

You can display the elapsed time of the current call or last call while not in use.

1. Press (FNC), (*), (3 DEF), (0 OPER).

“Time mm:ss” will be displayed. (mm: Minutes, ss: Seconds)

2. Press (CLR) to exit this mode.

Note: The time count will automatically reset to 00:00 after 99 minutes and 59 seconds.

Outgoing Call Timer

You can display your outgoing call time.

1. Press **(FNC)**, **(*)**, **(3DEF)**, **(1)**.
2. Enter the 2-digit Call Timer code.

Note: Please contact your selling Audiovox dealer to check the initial Call Timer code.

“Outgo-T hhhh:mm” will be displayed. (hhh: Hours, mm: Minutes)

To exit this mode, press **(CLR)**.

To reset the Outgoing Call Timer to 0000:00, press **(*)**, **(CLR)**.

Note: The timer will automatically reset to 0000:00 after 9,999 hours and 59 minutes.

Cumulative Call Timer

You can display a running total of on-air usage.

1. Press **(FNC)**, **(*)**, **(3DEF)**, **(2ABC)**.
2. Enter the 2-digit Call Timer code.

Note: Please contact your selling Audiovox dealer to check the initial Call Timer code.

“Total-T hhhh:mm” will be displayed. (hhh: Hours, mm: Minutes)

To exit this mode, press **(CLR)**.

To reset the Cumulative Call Timer to 0000:00, press **(*)**, **(CLR)**.

Note: The timer will automatically reset to 0000:00 after 9,999 hours and 59 minutes have been accumulated.

Temporary Accumulated Call Counter

You can display the temporary accumulated number of calls.

1. Press **(FNC)**, **(*)**, **(2ABC)**, **(0OPER)**.

“Call XXXX” will be displayed. (XXXX: Number of calls)

To exit this mode, press **(CLR)**.

To reset the total number to 0000, press **(*)**, **(CLR)**.

Note: The call counter will automatically reset to 0 after 9,999 calls.

Outgoing Call Counter

You can check the accumulated number of outgoing calls.

1. Press **(FNC)**, **(*)**, **(2ABC)**, **(1)**.
2. Enter the 2-digit Call Counter code.

Note: Please contact your selling Audiovox dealer to check the initial Call Counter code.

“Outgo-C XXXX” will be displayed. (XXXX: Number of outgoing calls)

To exit this mode, press **(CLR)**.

To reset the Outgoing Call Counter to 0000, press **(*)**, **(CLR)**.

Note: The call counter will automatically reset to 0 after 9,999 calls.

Accumulated Call Counter

You can check the accumulated number of calls.

1. Press **(FNC)**, **(*)**, **(2ABC)**, **(2ABC)**.
2. Enter the 2-digit Call Counter code.

Note: Please contact your selling Audiovox dealer to check the initial Call Counter code.

“Total-C XXXX” will be displayed. (XXXX: Number of calls)

To exit this mode, press **(CLR)**.

To reset the Accumulated Call Counter to 0000, press **(*)**, **(CLR)**.

Note: The call counter will automatically reset to 0 after 9,999th call has been made.

To Change the Call Timer/Call Counter Codes

- In case of Call Timer code change, press **(FNC)**, **(#)**, **(5JKL)**, **(4GHI)**.

“Timer Pre?” will be displayed.

- In case of Call Counter code change, press **(FNC)**, **(#)**, **(5JKL)**, **(3DEF)**.

“Counter Pre?” will be displayed.

2. Enter the current code.

Note: Please contact your selling Audiovox dealer to check the initial code.

“Timer New?” or “Counter New?” will be displayed.

3. Enter a new 2-digit code.
4. Press **(R/S)**.

CAUTION: Keep the record of new codes in a safe place!

Call Time Warning Tone

You can turn the Call Time Warning Tone on and off. When it is set to on, a single warning tone will be heard every 1 minute and a double warning tone will be heard every 5 minutes during a call.

To Turn the Warning Tone ON:

1. Press **FNC**, **★→**, **1** while not in use.
“Beep Tone on” will be displayed.
2. Press **CLR** to clear the display.

To Turn the Warning Tone OFF:

Press **FNC**, **★→**, **1** again while not in use. On/off toggles and “Beep Tone off” will be displayed.

SID MANAGEMENT (PROGRAMMABLE OPTION)

You can take advantage of a family of SID (System Identification) groups by this Programmable option. This is a group of cellular systems in cities that your carrier owns or has special billing arrangements with. Your close family SID's will be billed at the same rate as your home billing. (Both **NO SVC** and **ROAM** are off.) More distant family SID's will be billed at a preferred rate. Your phone will display solid **ROAM**. When flashing **ROAM** is displayed, you are using a SID system that is not included in the groups assigned at the time of programming.

If your display indicates **NO SVC**, you will need to change your A/B system selection or, please refer to Multiple City Registration to change phone registration to enable you to make a call.

Note: For specific information regarding special billing arrangements, please consult your cellular service provider.

A/B SYSTEM SELECTION

You can select the system you need to use. The system that you are registered with is the preferred system and your home system.

1. Press **FNC**, **6HW**.
2. Press **▲** or **▼** until your desired system is displayed.
3. Press **R/S**.

Note: When you turn the phone on, the phone will start to scan the system of the last power-off.

Standard Mode:

Your phone will scan the preferred system channels. If unable to find an acceptable preferred channel, your phone switches to scan the non-preferred system channels. “**A B**” will light in the display.

System A Only Mode:

Your phone will scan the system A only. “**A**” will light in the display.

System B Only Mode:

Your phone will scan the system B only. “**B**” will light in the display.

Home Mode:

Your phone will scan preferred system and Brother/Sister system channels.

You can place or receive calls only within your Home area.

Family Mode:

Your phone will scan both systems A and B regardless of Brother/Sister or Cousin system channels.

MULTIPLE CITY REGISTRATION

You can reprogram the different phone numbers for the cities in which you are registered. Each programmed phone number will be designated as your home system.

Note: To use this feature, you must register your phone with the carrier in order to get both the system ID number and your phone number.

To Program the Phone Number:

1. Press **CLR**, then enter the new system ID number (5 digits).
2. Enter corresponding phone number including your area code (10 digits)
3. Press **FNC**, **#→**, **#→**.
4. Enter the 3-digit Unlock code.


After programming the new number, your phone automatically wakes up again, and displays the new phone number.

Note: Calls are placed or received using the programmed phone number only.

CURRENT SID, CHANNEL AND RSSI LEVEL DISPLAY

You can see the current SID (System Identification), channel No. and RSSI level at a time. The RSSI is the signal strength of the current channel of operation represented in voltage. The higher voltage shows the better connection and clearer communications.

1. Press **(FNC)**, **(*)**, **(BAND)**.
2. To clear the display, press **(CLR)**.

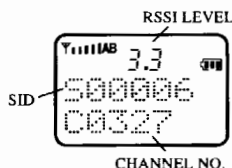

ELECTRONIC SERIAL NUMBER (ESN)

Press **(FNC)**, **(#)**, **(2ABC)** to display your ESN.

To clear the display, press **(CLR)**.

ANTI FRAUD SECURITY FEATURE (PIN Feature)

If your cellular carrier offers Personal Identification Number (PIN) service, your new phone must be programmed with your PIN. For your protection, you cannot make any outgoing calls until establishing your PIN. Please contact your cellular service provider for specific instructions.

To Place a Call Using the PIN service:

1. Enter the telephone number.
2. Press **(SEND)**.
"PIN" will flash in the display.
3. Press **(SEND)** again. Your call will then be placed.

To Enter the PIN and Turn the PIN Feature ON or OFF:

1. Press **(FNC)**, **(#)**, **(*)**.
2. Enter the 3-digit Unlock code.

Note: Please contact your selling Audiovox dealer to check the initial Unlock code.

3. Enter your PIN (up to 6 digits).
4. Press **(▲)** or **(▼)** to turn the PIN feature on or off.
5. Press **(R/S)**.
6. To exit the mode, press **(CLR)**.

FUNCTION REVIEW

To Review the Function Menus:

1. Press **(FNC)**, then **(▲)** or **(▼)**. "FNC Review" will be displayed.
2. Press **(▲)** or **(▼)** to scroll up or down the function menus.
3. Press **(CLR)** to exit the mode.

Notes:

- You can directly access to "FNC *1" by pressing **(FNC)**, **(*)**, **(▲/▼)**.
- You can directly access to "FNC #1" by pressing **(FNC)**, **(#)**, **(▲/▼)**.

To Directly Enter the Function Setting Mode:

1. Press **(FNC)**, then **(▲)** or **(▼)** to search for the desired function menu.
2. Press **(FNC)**. Then, you can enter the function setting mode.

The following table shows each function menu. In the actual display, "FNC 1 Scratch" and "FNC 1 Pad" are alternately displayed in case of FNC 1.

Display	Function
FNC 1 Scratch Pad	Scratch pad memory
FNC 3 DTMF Tone	DTMF tone mute (during a call)
FNC 5 Lock	Locking your phone electronically
FNC 6 System Standard	Scan mode selection
FNC 8 Silent Alert	Silent alert selection
FNC 9 Auto Answer	Automatic answer selection
FNC 71 Message Mode	Message mode selection
FNC 72 Message Beep	Message beep selection
FNC *1 Beep Tone	Call time warning tone selection

Display	Function
FNC *4 1-Touch Emerg.	One touch emergency call selection
FNC *5 Call Restr.	Call restriction mode selection
FNC *6 Display RSSI	Current SID, RF Channel and RSSI level display
FNC *20 Call Counter	Temporarily accumulated call counter display
FNC *21 Outgo Call	Accumulated outgoing call counter display
FNC *22 Total Call	Accumulated call counter display
FNC *30 Call Timer	Elapsed timer display for current or last call
FNC *31 Outgo Time	Outgoing call timer display
FNC *32 Total Time	Cumulative call timer display
FNC *90 Voice Volume	Earpiece volume selection
FNC *91 Alert Volume	Alert volume selection
FNC *92 Tone Volume	Keypad tone volume selection
FNC *93 M-Beep Volume	Message Beep volume selection
FNC #1 Own Phone	Own telephone number display
FNC #2 Display ESN	Own ESN display (Electronic Serial Number)
FNC #3 Display SIDH	Own system ID display
FNC #8 Change DTMF	DTMF (keypad) tone duration selection
FNC #51 Change Unlock	Unlock code change
FNC #52 Change CR	Call restriction access code change

Display	Function
FNC #53 Change C-Count	Call counter access code change
FNC #54 Change C-Timer	Call timer access code change
FNC ** Change PIN	PIN entry mode
FNC ## Multi Reg.	Multiple city registration (phone number and SID entry)

ENHANCED FEATURE OPERATION

The feature operation on the following pages pertains to “Enhanced Features” that may be offered by your cellular service provider. Before you can use these features, you must subscribe to them through your home cellular service provider.

Please note: *These optional network services may not be available in all areas.*

Caller ID

When your phone receives a call, “CALL” blinks and the caller’s phone number is displayed. The caller’s phone number is also displayed in Call Waiting.

To answer the call, press any key except **(PWR)**, **(END)**, **(▲)**, and **(▼)** as usual.

If you do not answer the call, the number of unanswered call and the caller’s phone number will remain in the display.

Call Back Number

- When Call Back Number is received in standby mode, “CALL BACK” will be displayed. Press **(R/S)**, **(R/S)**, and use **(▲/▼)** keys to view the Call Back Number.
- When Call Back Number is received during alert, “CALL” blinks and the Call Back Number is displayed.
- When Call Back Number is received during conversation, the Call Back Number is displayed.

Voice Mail Notification

- When Voice Mail Message is received in standby mode,

"VOICE MAIL" will blink. Press **(R/S)**, **(R/S)** and use **(▲/▼)** keys to display the number of received Voice Mail.

- When Voice Mail Message is received during alert or conversation, Voice Mail Number or number of received Voice Mail is displayed.

Short Message Service

- When Short Message Service is received in standby mode, "SHORT MESSAGE" will be displayed. Press **(R/S)**, **(R/S)** and use **(▲/▼)** keys to view the Short Message.
- When Short Message Service is received during alert or conversation, the Short Message is displayed.

Digital Message Mode ON/OFF:

1. Press **(FNC)**, **(7PWS)**, **(1)**, then enter the 3 digit Unlock code.
2. Press **(▲)**, **(R/S)** or **(▼)**, **(R/S)** to turn the mode on or off. "Message Mode on" or "Message Mode off" will be displayed.
3. Press **(CLR)** to clear the display.

Digital Message Beep ON/OFF:

Press **(FNC)**, **(7PWS)**, **(2ABC)**. "Message Beep on" or "Message Beep off" will be displayed. To toggle "on" and "off", press **(FNC)**, **(7PWS)**, **(2ABC)**. To clear the display, press **(CLR)**.

Message Beep Alert Tone Level Control

While not in use, Message Beep Alert Tone can be adjusted as follows:

1. Press **(FNC)**, **(*→)**, **(9WV)**, **(3OCF)**.
2. Press **(▲)** or **(▼)** according to your desired tone level.
3. Press **(CLR)** to clear the display.

Memory Stack

Your phone has a 30 memory stack for data and messages and one independent memory stack for Voice Mail Notification. When there is an unreviewed message in standby mode, the **MESSAGE** indicator blinks.

Press **(R/S)** and hold **(R/S)** for 2 seconds to see the number of stored and unreviewed messages. Then press any key except **(PWR)**, **(END)**, **(▲)**, and **(▼)** to see the stored messages.

AUDIOVOX ACCESSORY CATALOG MVX-501/505/506/507



**BTR-405**

Standard Life NiCad Battery (800 mAh) (standard with MVX-501/505/506)

**BTE-405**

Extended Life NiMH Battery (1200 mAh) (standard with MVX-507)

**BTM-405**

Slim NiMH Battery (800 mAh) (option)

**DTC-405**

Desk Top Charger (option)

**HF-505**

Hands Free Mobile Kit (option)

**CLA-505**

Cigarette Lighter Adapter (option)

**RC-505**

Rapid Charger (standard with MVX-507)

**CHF-505**

Cigarette Lighter Hands Free (option)

**CLP-505**

Cigarette Lighter Charger (option)

**LB-405**

Leather Carrying Case (option)

**PBK-405**

3 Watt RF Power Booster (must be used with HF-505) (option)

**CNR-505**

AC Adapter (standard with MVX-501/505/506)

WS-700

Wrist Strap
(Not shown)

These accessories are available at your local AUDIOVOX Dealer. For information contact:



**BTR-405**

Standard Life NiCad Battery (800 mAh) (standard with MVX-501/505/506)

**BTE-405**

Extended Life NiMH Battery (1200 mAh) (standard with MVX-507)

**BTM-405**

Slim NiMH Battery (800 mAh) (option)

**DTC-405**

Desk Top Charger (option)

**HF-505**

Hands Free Mobile Kit (option)

**CLA-505**

Cigarette Lighter Adapter (option)

**RC-505**

Rapid Charger (standard with MVX-507)

**CHF-505**

Cigarette Lighter Hands Free (option)

**CLP-505**

Cigarette Lighter Charger (option)

**LB-405**

Leather Carrying Case (option)

**PBK-405**

3 Watt RF Power Booster (must be used with HF-505) (option)

**CNR-505**

AC Adapter (standard with MVX-501/505/506)

WS-700

Wrist Strap
(Not shown)

These accessories are available at your local AUDIOVOX Dealer. For information contact:



PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to...or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect, or accident”.

Many companies are making look-alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible for use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit, and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



AUDIOVOX COMMUNICATIONS CORP.

185 Oser Avenue, Hauppauge, New York 11788, 516-233-3300
16808 Marquardt Avenue, Cerritos, California 90701, 310-802-5100

Audiovox Canada

405 Britannia Rd. East, Ste 101, Mississauga, Ontario, Canada

L4Z3E6, 905-712-9299

Audiovox Pacific Pty Ltd

110 Rocky Point Road, Kogarah, NSW 2217, Australia, 02-9587-0011

Audiovox New Zealand Pty Ltd

Unit B, 6 Henderson Place, Auckland, 6496345720

Audiovox Singapore Pte Ltd

268 Orchard Road, #07-07, Singapore, 238856, 65-733-5902

<http://www.audiovox.com>

GENERAL SPECIFICATIONS

Frequency Range:

Transmit: 824.030 to 848.980 MHz

Receive: 869.030 to 893.980 MHz

Number of RF Channels: 2412 Channels, Full Duplex

Channel Spacing: 10 KHz

Duplex Spacing: 45 MHz

Frequency Stability: ± 1.0 PPM

Operating Temperature:

Main Unit: -22°F to $+140^{\circ}\text{F}$ (-30°C to $+60^{\circ}\text{C}$)

Battery: $+5^{\circ}\text{F}$ to $+122^{\circ}\text{F}$ (-15°C to $+50^{\circ}\text{C}$)

Battery Charging

Temperature: $+41^{\circ}\text{F}$ to $+104^{\circ}\text{F}$ (5°C to $+40^{\circ}\text{C}$)

Supply Voltage: 4.8 V – DC

RF Power Output: 0.6 W

Dimensions: $6.3" \times 2.3" \times 0.9"$
(159 mm \times 60 mm \times 24 mm)

Weight:

with Standard Ni-Cd Battery: Approx. 7.6 oz. (216 g)

with Slim profile Ni-MH Battery: Approx. 7.6 oz. (216 g)

with Extended life Ni-MH Battery: Approx. 8.1 oz. (229 g)

Talk Time:

with Standard Ni-Cd Battery: Approx. 80 Minutes

with Slim profile Ni-MH Battery: Approx. 80 Minutes

with Extended life Ni-MH Battery: Approx. 120 Minutes

Stand-by Time:

with Standard Ni-Cd Battery: Approx. 12 Hours

with Slim profile Ni-MH Battery: Approx. 12 Hours

with Extended life Ni-MH Battery: Approx. 20 Hours

** Subject to change without notice.*

TABLE OF KEY OPERATION

KEY OPERATION	Function
(PWR)	Holding (PWR) turns your phone on and off.
Phone No. + (FNC) + 1	Stores to Scratch Pad Memory.
(FNC) + 3 DEF (During conversation)	Turns the DTMF tone on and off.
(FNC) + 5 JKL + 3 Digit Code	Locks your phone electronically.
(FNC) + 6 MNO + ▲	Displays current scan mode.
(FNC) + 6 MNO + ▲ + ▲ + ... R/S	Selects Scan Mode.
(FNC) + 7 PRS + 1 + 3 Digit Code + ▲/▼ + R/S	Turns the Message Mode on and off.
(FNC) + 7 PRS + 2 ABC	Turns the Message Beep on and off.
(FNC) + 8 TUV	Turns the Silent Alert mode on and off.
(FNC) + 9 WXY	Turns the Automatic Answer mode on and off.
(FNC) + ▲/▼	Enters the Alphanumeric entry mode.
(FNC) + * + 1	Turns the Call Time Warning Tone on and off.
(FNC) + * + 2 ABC + 0 OPER	Displays the temporarily accumulated number of calls.
(FNC) + * + 2 ABC + 1 + 2 Digit Code	Displays the number of outgoing calls.
(FNC) + * + 2 ABC + 2 ABC + 2 Digit Code	Displays the accumulated number of calls.
(FNC) + * + 3 DEF + 0 OPER	Displays the time of current or last call.
(FNC) + * + 3 DEF + 1 + 2 Digit Code	Displays the time of outgoing calls.
(FNC) + * + 3 DEF + 2 ABC + 2 Digit Code	Displays the cumulative call time.
(FNC) + * + 4 GHI + 3 Digit Code + New Emergency No. + ▲/▼ + R/S	Changes Emergency Number and turns the One Touch Emergency call mode on and off.

KEY OPERATION	Function
(FNC) + * + 5 JKL + 3 Digit Code	Activates the Call Restriction mode.
(FNC) + * + 6 MNO	Displays the current SID, current Channel and the RSSI Level.
(FNC) + * + 9 WXY + 0 OPER + ▲/▼	Adjusts the earpiece volume level.
(FNC) + * + 9 WXY + 1 + ▲/▼	Adjusts the alert sound output volume level.
(FNC) + * + 9 WXY + 2 ABC + ▲/▼	Adjusts the tone volume level.
(FNC) + * + 9 WXY + 3 DEF + ▲/▼	Adjusts the Message Beep volume level.
(FNC) + # + 1	Displays own telephone number.
(FNC) + # + 2 ABC	Displays the Electronic Serial Number (ESN).
(FNC) + # + 3 DEF	Displays the Home System ID (SIDH).
(FNC) + # + 5 JKL + 1	Changes the Unlock Code.
(FNC) + # + 5 JKL + 2 ABC	Changes the Call Restriction Access Code.
(FNC) + # + 5 JKL + 3 DEF	Changes the Call Counter Access Code.
(FNC) + # + 5 JKL + 4 GHI	Changes the Air Timer Access Code.
(FNC) + # + 8 TUV	Changes the Keypad (DTMF) Tone Duration
(FNC) + # + * + 3 Digit Code + PIN + ▲/▼ + R/S	Enters PIN and turns PIN feature on and off
(CLR) + 5 Digit New SID + 10 Digit Phone No. + (FNC) + # + # + 3 Digit Code	Multiple City Registration (Changes the phone number and SIDH)
(CLR)	Clears the last digit. If held in erases the entire number from display.

KEY OPERATION Function

(CLR) + (END)	Clears the entire number from display.
Phone No. + (FNC) + (R/S) + Memory Location No.	Stores the telephone number in the memory.
Phone No. + (FNC) + (M ALPHA) + Name + (FNC) + (R/S) + Memory Location No.	Stores the telephone number and the alphanumeric information in the memory.
Phone No. + (FNC) + (R/S) + (R/S)	Searches the vacant memory and stores the telephone number automatically.
Phone No. + (FNC) + (M ALPHA) + Name + (FNC) + (R/S) + (R/S)	Searches the vacant memory and stores the telephone number and alphanumeric information automatically.
Phone No. + (FNC) + (R/S) + (▲) / (▼)	Searches the vacant memory address to store.
(R/S) + (▲) + (OPER) / (1) / (2 ABC)	Displays the telephone number of three latest calls.
(R/S) + Memory Location No.	Recalls the telephone number from the memory.
(R/S) + (★) + (▼)	Adds the DTMF tone to the recalled number.
(R/S) + (▲) / (▼)	Recalls the telephone number in address order.
(FNC) + (M ALPHA) + Name + (R/S) + (▲) / (▼)	Searches the telephone number by alphanumeric characters.
(M ALPHA)	In standby mode, holding (M ALPHA) initiates a call to the number stored in One Touch Memory. During conversation, pressing (M ALPHA) switches the Mute mode on and off. In alphanumeric entry mode, pressing (M ALPHA) toggles between phone number entry and name entry mode.
(SEND)	Receives the call when "Call" is flashed in the display. Redials the last number dialed when "Ready" is displayed.
Phone No. + (SEND)	Processes the call.
(END)	Terminates the call.

12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORPORATION (the Company), warrants to the original retail purchaser of this Audiovox Cellular Telephone, that should this product or any part there of (except the items listed below), under normal use and conditions, be proven defective in material or workmanship within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s). Accessories, if supplied, except rechargeable battery packs, are similarly warranted for 12 months. Battery packs are warranted from the date of purchase for 90 days.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of warranty coverage, specification of defect(s), transportation prepaid, to the Company at the address shown below.

In the United States call toll free to (800) 229-1235 [in NY State and other areas, call (516) 233-3410]

This Warranty does not apply to fuses, or costs incurred for removal, reinstallation, testing, evaluation, or to any product or part there of which has suffered through alteration, serial number defacement, improper installation, excessive temperature or humidity, environmental conditions, mishandling, misuse, neglect or accident. This Warranty is not assignable or transferable. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

The Company disclaims liability for geographic coverage, inadequate signal to antenna, communications range or operation of the Cellular System as a whole. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY, ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IN U.S.A.: AUDIOVOX COMMUNICATIONS CORPORATION

185 Oser Avenue, Hauppauge, New York 11788 (516) 233-3300

IN CANADA: AUDIOVOX CANADA, LTD.

405 Britannia Road East Suite 101 Mississauga, Ontario L4Z 3E6 (905) 712-9299 (800) 465-9672