

User Manual

English

Bea-fon S200/S210



bea-fon

General Information

Congratulations on the purchase of your Bea-fon S200/S210!

Please read this information before using the phone to make a better use of your phone. We are not responsible for any damage due to your misunderstanding of this information and misacting.

We are endeavouring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-supported features. Please contact your network operator for further information.

Please check the package contents to ensure that all components listed below are included. If the product is defective or if there is a component missing, immediately contact the retailer where you purchased this handset.

General Information

Your Bea-fon S200/S210 box contains:

- 1 mobile phone
- 1 desktop charger
- 1 travel charger
- 1 battery
- 1 headset
- 1 Micro SD card (only for S210)
- User manuals

If you find the size of the script not easily readable for you, you can also find this manual on our website, where you will be able to adjust the size of the script.

Go to: www.beafon.com / Products

Device Code:

This device code ensures that unauthorized persons will not be able to use your phone. The default code is **0000**.

PIN-Code:

The PIN-code was supplied to you by your network operator together with your SIM card and/or adjusted/set up by yourself.

Directory

General Information.....	2
Directory	4
Your Phone	6
Getting started	9
What is a SIM card?	9
Insert the SIM card (and Micro SD card) as follows: ...	9
Insert the battery as follows:.....	10
Charging the battery:.....	10
Switching the telephone on or off:.....	11
Keypad lock:	12
Standby:	12
Display (Standby mode):	13
Soft key functions:.....	14
Call function.....	16
Make a call:.....	16
Make a call using the phone book:	16
Answering a call:	17
Operations during a call:.....	17
Hands Free:.....	17
Menu.....	18
Contacts	20
Search:.....	20
Add new:.....	20
Copy all:.....	20
Delete:	21
Memory status:.....	21
Speed dial.....	21
Call logs	22
Missed, Dialed and Received:.....	22
Delete call logs:	22
Call timers:	22

Directory

Call cost:	22
SMS counter:	23
GPRS counter:	23
Messages	24
SMS	24
MMS (<i>Only on S210</i>):	27
MMS account (<i>Only on S210</i>):	30
Voice mail:	31
Broadcast:	32
Settings	33
Sound & Alert:	33
Phone settings:	33
Bluetooth (<i>Only on S210</i>):	33
Call settings:	35
Network setting:	36
Security setup:	36
Restore factory settings:	36
Organizer	37
To Do:	37
Alarm:	37
Calculator:	38
SOS	39
SOS Button:	41
SOS number:	41
Edit emergency SMS:	41
Camera (<i>Only on S210</i>)	42
FAQ	44
Battery	47
Phone	49
For your safety	51

Your Phone

Front

Display

Soft key 'left'
and Short key
Messages

Dial Key
Green key

Arrow key
(down)

In standby mode;
long press it to
switch to
Bluetooth
(Only on S210)

* Key

In standby mode; press
it to input * / + / p / w
In editor; press to input
symbols.

Number Key

In standby mode; press to
input numbers.
Long press 2-9 to speed dial.
In editor; press them to input
numbers or words.

Arrow key
(up)

In standby
mode, press it
to go to Menu

Soft key
'right' and
Short key
Contacts

Power
On/Off
Red key

Key

In standby mode; long
press it to switch the
user profiles.
In editor; press to
change input method.



Your Phone

Top



Flashlight

Back

 
Camera
(Only on S210)




SOS button

Your Phone

Left side

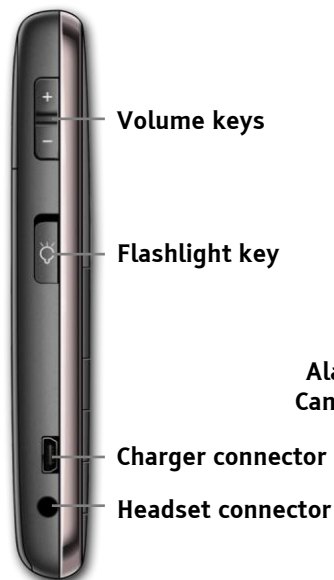

Right side

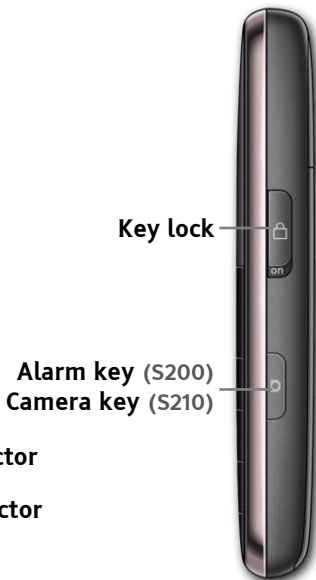 

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. Please refer to your handset for actuality.

Getting started

What is a SIM card?

 
Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

Keep the SIM card away from children. The SIM card can easily be damaged or bent. You should therefore handle the SIM card with care during installation and/or removal.

Insert the SIM card (and Micro SD card) as follows:


1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. If the battery is already inside, remove it.
4. You can see two card slots side by side (left: SIM, right: Micro SD).
5. Slide the SIM card carefully into the SIM card slot. Make sure that the gold-coloured connectors on the SIM card are facing downwards and that the bevelled corner is on the right.
6. **Only for S210:** Open the Micro SD card slot. Slide the Micro SD card into the Micro SD card slot. After placing the Micro SD card close the slot.

Getting started

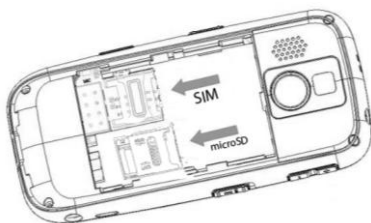

Insert the battery as follows:

 1. Insert the battery by aligning the gold contacts in the battery compartment on the phone.
2. Push down on the upper section of the battery until it 'clicks' into place.
3. Close the battery compartment by sliding the cover closed until you hear a 'click'.

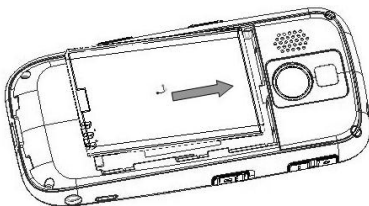

Charging the battery:

There are two ways of S200/S210 battery charging:

- A. Desktop charging
- B. Travel charging

Getting started

The lithium battery of the mobile phone can be immediately used after unpacking. A new battery, is not fully charged, and performs best after performing a full charge/discharge 3 times:

1. Plug the charger into the charger connector.
2. Plug the other end into an electrical outlet.
3. The phone may need several hours for reaching a fully charge.

When your phone is power off, it might take a few seconds to show charging display and it shows charge complete when finished.

When your phone is power on, the battery icon flickers when it starting charging and become still with full bars in battery icon when finished.

Note: Charge the battery for at least 10 hours before using the phone for the first time.

Switching the telephone on or off:

Make sure that you SIM card is in your mobile phone and that the battery is charged.

1. Press the **red key** to switch the phone on.
2. If prompted, choose your language and press **OK**.
3. If you have entered a PIN-code before, the phone will ask for the code now. Enter the PIN-code and confirm by pressing **OK**.
4. To turn off your phone, press and hold the **red key** for two seconds.

If you don't insert a SIM card, your phone shows *Insert SIM*. None of the functions related to SIM

Getting started

card can be used. You can make an emergency call only.

Note: If you enter an incorrect PIN-code 3 times in succession, the phone will require you to enter the PUK-code. You received this PUK-code together with your SIM card.

Keypad lock:

The keypad lock prevents keys from being pressed accidentally.

To lock or unlock the keypad:



Switch the unlock key, which is on the right side of the phone, down and then the key lock is activated. If you switch the unlock key up the key lock is deactivated.

Standby:

If you do not use your phone for a while, it will automatically switch to *standby mode*. The phone will be activated again by pressing any key. Calls can be received as usual while in standby mode.






Getting started

Display (Standby mode):







1	2	3
4		
5		
6		
7	8	9

- | | |
|---------------------|-----------------|
| 1. Signal status | 6. Date and day |
| 2. Pictograms | 7. Messages |
| 3. Battery status | 8. Menu |
| 4. Network operator | 9. Contacts |
| 5. Time | |


Screen icons:

	Signal Strength <i>The vertical bars show the network connection strength. SIM card has signals.</i>
	New messages <i>This icon shows when you receive a new message.</i> SIM Card has an unread message <i>The inbox is full.</i> <i>This icon  flickers when the inbox is full and you need to delete messages to receive new messages.</i>
	Earphone <i>This icon shows when you plug the earphone in. Voice will be heard from the earphone.</i>
	Missed Calls <i>This icon shows when you are viewing the missed call. SIM card has a missed call.</i>




Getting started

	Alert Type <i>Ring</i> <i>Silent mode on and Vibration only</i> <i>Vibrate then ring</i>
	Call Divert <i>This icon shows when you divert all calls unconditionally. SIM card has been set up call divert.</i>
	Keypad Lock <i>The icons show the current state of your keypad. Keypad locked - currently the keypad is in a locked state, the keystroke is of no use.</i>
	GPRS <i>This icon shows when the GPRS connection is available or active.</i>
	Turn alarm on <i>This icon shows when you turn alarm on.</i>
	Roaming <i>This icon shows when your phone is in roaming state. SIM card is roaming.</i>
	Bluetooth (Only on S210) <i>This icon shows when the Bluetooth is active.</i>
	Battery capacity <i>This icon's color changes according to the status of battery capacity:    </i>

Soft key functions:

	Direction Key (up) <i>In Standby mode, enables you to enter the Menu screen.</i>
--	--

Getting started

	Direction Key (down)- <i>(Only on S210)</i> <i>In Standby mode, enables you to enter the Bluetooth menu screen.</i>
	Soft key 'right' <i>In Standby mode, enables you to enter the Contacts screen.</i>
	Soft key 'left' <i>In Standby mode, enables you to enter the Message menu screen.</i>

Password:

The password of your phone is originally set to be **0000**. You can change it whenever you like. You can also change your SIM card password. See *Security setup* on page 36.

Note: Please contact your network operator for further information.

Call function

Make a call:

1. To make a call, enter the phone number with the prefix and press the **green key**. For international calls, enter '+' by pressing * for 2 sec. Then enter the country code followed by the telephone number, in which the 0 of the prefix must be dropped.
2. If you have entered a wrong number, press the soft key 'right' **Clear** to remove the number to the left of the blinking cursor.
3. Press the **green key** to call the number.
4. Press the **red key** to end the call or to cancel the call attempt.

Make a call using the phone book:

If you have saved a name and number in the phone book, you can also use the phonebook to make a call. (see **Add new** on page 20, how to save a name and number).

1. In standby mode, press the soft key 'right' to go to **Contacts**.
2. Scroll with the up and down arrow key to the name you want to call.
3. Press the **green key** to call the number.
4. Press the **red key** to end the call or to cancel the call attempt.

Call function

Answering a call:

When there is an incoming call, the phone rings and/or vibrates and shows the number or the corresponding name.

1. Press the **green key** or *Answer* if you would like to answer a call.
2. Press the **red key** or *Reject* if you would like to reject a call, or for ending the connection after the call.

Earphone/Bluetooth Mode (BT only S210): When plugging the earphone (including Bluetooth earphone), you can answer a call by pressing the key on the earphone.

Operations during a call:

Press *Option* to perform following operation during a call:

<i>Hold Single Call:</i>	Hold this call.
<i>Loudspeaker*:</i>	Normal/Handsfree.
<i>New Call:</i>	Make a new call during a call.
<i>Phonebook:</i>	To go to <i>Phonebook</i> .
<i>Messages:</i>	To go to <i>Messages</i> .

*Note: the menus marked with * must be supported by your SIM card. For details, please contact your network operator.*

Hands Free:

During a call you can turn the hands free equipment on or off with the up arrow key.

Menu

Press the up arrow key to go to the Menu. Scroll through the menu using the arrow keys.

1. **Contacts**

1. **Search**
2. **Add new**
3. **Copy all**
4. **Delete**
5. **Memory status**
6. **Speed dial**

2. **Call logs**

1. **Missed**
2. **Dialed**
3. **Received**
4. **Delete call logs**
5. **Call timers**
6. **Call cost***
7. **SMS counter**
8. **GPRS counter**

3. **Messages**

1. **SMS**
2. **MMS** (*Only on S210*)
3. **MMS account** (*Only on S210*)
4. **Voice Mail**
5. **Broadcast**

Menu

4. Settings

1. Sound & Alert
2. Phone settings
3. Bluetooth (*Only on S210*)
4. Call settings
5. Network setting
6. Security setup
7. Restore factory setting

5. Organizer

1. To do
2. Alarm
3. Calculator

6. SOS

1. SOS button
2. SOS number
3. Edit emergency SMS

7. Camera (*Only on S210*)

1. Camera
2. Photos
3. Camera settings
4. Image settings
5. Scene mode
6. Restore default

*Note: the menus marked with * must be supported by your SIM card. For details, please contact your network operator.*

Contacts

Search:

1. Choose *Search* in the *Phonebook*.
2. Key in the first character(s) of the name you are looking for and press *Search*.
3. If you press *Option* you can use the following options:
Call, Send SMS, Send MMS, View, Edit, Delete and Copy. (Send MMS only on S210)

Add new:

You can save names and phone numbers in the phone's memory (internal phone book) and in the SIM card's memory (SIM phone book). The internal phone book can store up to 500 names.

1. Choose *Add new* in the *Phonebook*.
2. Choose storage: *To SIM* or *To Phone*.
3. If you choose *To SIM*: you can only edit *Name* and *Number*.
4. If you choose *To phone*: you can edit *Name*, *Number* and *Associate picture*. This pictures you see when you receive a call from this contact.
5. Press *OK* or *Done* if you want to save the contact.

Copy all:

You can copy all the names stored in SIM card to phone or copy all the names in phone storage to SIM card.

Note: When copy the names stored in the phone storage to SIM card, only names and default numbers can be saved.

Contacts

Delete:

You can choose the following options:

From SIM: Delete all the names stored in SIM card

From phone: Delete all the names stored in the phone storage

One By One: Delete the selected names one by one.

Memory status:

Displays the amount of SIM and phone numbers you have saved. And also how many you still can save.

Speed dial:

You can turn the speed dial function on or off by *Enable speed dial*.

It is possible to enter 8 speed dial numbers that can be called from the stand-by mode by pressing the corresponding number keys (2~9).

1. Choose *Set number* and press *OK*.
2. Select the key you want (2-9) and press *Option*.
3. Press *OK* for *Edit*.
4. Select the name you want and press *OK* (the name you want, most already been saved by *Contacts*). The name is now saved under the corresponding number key.

In standby mode: Press and hold the corresponding number key until the call is started.

Call logs

Missed, Dialed and Received:

The phone registers the phone numbers of *Missed*, *Dialed* and *Received* calls.

When you press *OK* by *Missed*, *Dialed* or *Received*, you can view the calls you *Missed*, *Dialed* or *Received*. If you press *Option* you can choose the following options:

Call, *Save*, *Call info*, *Delete*, *Edit*, *Send SMS* and *Send MMS* (*Send MMS* only on S210)

Delete call logs:

You can delete all the records of the *Missed*, *Dialed* and *Received* calls, you can also choose *Delete All* to delete all the records of the above-mentioned calls logs.

Call timers:

Shows the time of the *Last call* and also the total time of the *Dialed* and the *Received* calls.

Reset All Time: To Reset the *Last call* time, total *Dialed* time and total *Received* time back on zero.

Call cost:

You can view the cost of the last call, or of all calls. Costs are shown only if your network operator supports this service.

Call logs

You can choose the following options:

Last call cost: Allows you to check the cost of the last call.

Total cost: Allows you to check the cost of all calls.

Reset cost: Allows you to reset the call cost.

Max. cost: Enter PIN2 and input a limitation of the Max Cost.

Price per unit: Enter PIN2 and input a limitation of the price per unit.

Note: Not all SIM cards support this feature. The number of items in these lists depends on the contents of your SIM card.

SMS counter:

You can view the number of *Sent* and *Received Message(s)*. Press *Reset* to clear *Sent* and *Received Message(s)*.

GPRS counter:


You can view the data of *Last sent*, *Last received*, *All sent* and *All received*. You can also *Reset* the records through *Reset Counter*.

Messages

You can receive and send *Messages: SMS* and on the S210 also *MMS*. Here you can also choose *Voice Mail* and *Broadcast*. These services are web-based services. Please contact your network operator before using.

SMS

Inbox:

The *Inbox* is for storing received SMS messages. Depending on the selected mode, the phone vibrates or rings when you receive a new message. And in the standby mode you see this icon  until you have read the new SMS message.

You can choose the following options while reading your received SMS:

Reply, Delete, Edit, Forward, Copy to SIM, Move to SIM*, Delete all, Copy all, Move all and Use number.*

**These options may not appear according to the storage location.*

Note: The new message icon keeps flickering in the standby mode when your inbox is full. Please delete some messages for receiving new messages.

Write message:

You can write and send text messages. Invoicing is based upon how many ordinary messages are needed for any multi-part message.

Press the key marked with the letter that you want repeatedly until the letter appears.

Messages

Use the following functions to edit the text:

- To add a space, press 0.
- To add a punctuation mark or special character, press 1.
- To move the cursor left or right, press the up and down arrow key.
- To delete the character to the left of the cursor, press *Clear*. To clear the screen, press and hold this key.
- To switch between upper and lower case, press # indicated with:
ABC, abc, 123

Key in the message. The number of characters and the current part numbers are shown on the top right of the display.

When the message is complete, press *Option*, select *Send*, key in the recipient's phone number or search for the number, and press *OK*.

If you want to send the message to several people, press *Option* and select *Send to many*, scroll to *Edit recipients* and *Edit* the first recipient, and press *OK*. Repeat this for each recipient and press *Back* and scroll to *Send now* to send the message.

Other options are:

Insert template, *Insert number*, *Insert name* and *Input method*.

Messages

Outbox:

The *Outbox* is for storing sent SMS messages.

You can choose the following options while reading your sent SMS:

Send, Edit, Delete, Copy to phone, Move to phone*, Delete all, Copy all, Move all and Use number.*

**These options may not appear according to the storage location.*

Drafts:

By *Drafts* you can view the draft SMS messages you have saved.

You can choose the following options while reading your draft:

Send, Edit, Delete, Copy to SIM, Move to SIM*, Delete all, Copy all, Move all and Use number.*

**These options may not appear according to the storage location.*

Templates:

The phone provides you 10 messages *Templates*. These templates you can *Edit, Remove* and use for *Write message*.

SMS settings:

Here you can edit your SMS message settings. You can choose the following options:

Profile settings: This setting is needed to use the SMS function.

Messages

The number can be obtained from the network operator.

Memory status: Displays the percentage of memory space used in the SIM card and phone memory.

Preferred storage: Select *SIM* or *Phone* to store messages on the SIM card or Phone memory.

Preferred connection: Select the way of connection you prefer.

MMS (Only on S210)

Write messages:

Here you can write your MMS. Use the following functions to write your MMS:

To, CC, BCC: Here you can add the number or E-mail of the recipient's.

Subject: Short description about the content of the mms.


Edit content: Here you can *Add text, Add picture, Add audio, Add attachment, Add slide before, Add slide after, Preview* and *Slide timing*.

When the MMS is complete, press *Done*. Here you can choose what you want to do with the MMS: *Send only, Save and send, Save to Drafts, Save as template, Send options* and *Exit*.

Note: If you can't send a MMS successfully, please reset the corresponding setting of the MMS or contact your network operator.

Messages

Inbox:

The *Inbox* is for storing received MMS messages. Depending on the selected mode, the phone vibrates or rings when you receive a new message. And in the standby mode you see this icon  until you have read the new MMS message.

You can choose the following options while reading your received MMS:

View, Reply, Reply by SMS, Reply all, Forward, Delete, Delete all, Save as template, Properties and Use details.

Outbox:

The *Outbox* is for storing sent MMS messages.

You can choose the following options while reading your sent MMS:

View, Send, Delete, Delete all, Save as template, Properties and Use details.

Drafts:

By *Drafts* you can view the draft MMS messages you have saved.

You can choose the following options by *Drafts*:

View, Send, Edit, Delete, Delete all, Save as template, Properties and Use details.

Messages

Templates:

By *Templates* you can view the MMS templates you have saved.

You can choose the following options by *Templates*: *View, Write message, Delete, Delete all* and *Properties*.

MMS settings:

Here you can edit your MMS message settings. You can choose the following options:

Compose: Here you can compose the *Creation mode, Auto signature* and *Signature* of your MMS.

Send: Set the *Validity period, Delivery report, Read report, Priority, Slide timing* and *Delivery time* of your sent MMS.

Retrieve: Set the *Home network, Roaming, Read report* and *Delivery report* of your receiving MMS.

Filter: Your phone will reject or allow MMS of the selected filter criteria.

Server Profile: Activate and edit the Server profile. Please contact your network operator for the settings.

Memory status: Displays the number of messages saved and the memory space left in the phone.

Messages

MMS account (*Only on S210*)

GSM data:

This setting allows you to change the settings for the GSM Data network.

You can choose the following options by any *Account*:

Account name: Here you can edit the *Account name*.

Number: Enter here the server phone number.

User Name: Enter here the *User name* required to connect to GSM Data network.

Password: Enter the *Password* required to connect to GSM Data network.

Line Type: Choose a network connection type between *ISDN* and *Analogue*.

Speed: Select here the desired speed from 9.6 Kbps, 14.4 Kbps and 4.8Kbps.

DNS: Enter here the DNS IP address.

GPRS:

This setting allows you to change the settings for the GPRS Data network as following.

You can choose the following options by any GPRS network:

Account name: Here you can edit the *Account name*.

Messages

- APN:** Enter here the access point name used for the address of the GPRS network gateway.
- User name:** Enter here the *User name* required to connect to GPRS network.
- Password:** Enter here the *Password* required to connect to GPRS network.
- Auth. Type:** Select here the authorization type: *Normal* or *Secure*.

Voice mail:

Voice mail is a service supplied by your network operator. For more information and for the voice mailbox number, contact your network operator. When you have a new voice mail message, your phone will receive a message.

The phone offers you 2 voice mail addresses.

1. Select address 1 or 2 and press *Option*.
2. Choose *Call voice mail* or *Edit*.
3. If you choose *Edit*, edit the name and number of the voice mail. After enter the number press *OK*.

In standby mode: Press and hold key number 1 for directly calling the *Voice mail*. Only the number saved under voice mail address 1 is called.

Note: This function must be supported by your network operator. For more information about this please contact your network operator.

Messages

Broadcast:

Broadcast messages are messages that your network operator broadcasts to all users within a particular area, such as weather forecast and transportation conditions. The new broadcast message covers the old one if they are from the same channel.

Receive Mode: Here you can choose the status of the broadcast message (on or off).

Read Message: Here you can read the broadcast messages.

Languages: Here you can choose the language of the broadcast messages.

Channel Setting: Here you can edit the broadcast messages channel.

Settings

Sound & Alert:

You can choose the following options:

Tone setup: Here you can set your: *Incoming call, Alarm, Message tone and Keypad tone.*

Volume: Here you can set your volume of *Ringtone and Key tone.*

Ring Type: Select here your *Ring type: Single, Repeat or Ascending.*

Alert type: Select here your *Alert type: Ring only, Vib. only, Vib and ring or Vib. then ring.*

Phone settings:

You can choose the following options:

Time & Date: *Set time zone, Set time and date and Set format.*

Language: Here you can choose the language you want in your display.

Writing language: Here you can choose the language you want for write.

Characteristics: Here you can choose your *Wallpaper, Show date and time and Show operator name.*

LCD: Here you can set the time for the *LCD backlight.*

Bluetooth (Only on S210):

You can connect wirelessly to other Bluetooth compatible devices such as headsets.

Settings

In standby mode: Press the down arrow key to go directly to Bluetooth.

You can choose the following options:

Power: Here you can choose to turn Bluetooth *On* or *Off*.

Inquiry audio device: Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it now by pressing *Yes*.

My device: List of saved devices and enables you to add new devices; *Inquiry new device*.

Inquiry new device:

1. Press *OK*, the phone is going to search for new devices.
2. Select the devices you want to connect with and press *Bond*.
3. When connecting with another Bluetooth device you need a shared passcode. Enter the passcode and press *OK*.
4. Select the device from the list and press *Option*. Can choose the following options: *Connect*, *Rename*, *Authorize*, *Delete*, *Delete all* and *Service list*.

Active devices: List of the Bluetooth device connected with your phone now.

Settings

- Settings:** Here you can set your: *Visibility, Change device name, Authentication, Audio path and Block list.*
- About:** Here you can check the *Device name, Device address and Supported services*, of your Bluetooth device.

Note: You cannot use Bluetooth and Camera at the same time.

Call settings:

Depending on network operator support and subscription, you can choose the following options:

Call waiting: When this network service is activated, the network notifies you of a new incoming call while you have a call in progress. Press *OK* to answer the waiting call. The first call is put on hold or press the **red key** to reject the call.

Call divert: To divert your incoming calls to your voice mailbox or some other phone number (network service). Select the divert option you want. Several divert options may be active at the same time.

Settings

Call barring: With this network service you can restrict the making and receiving of calls with your phone.

Block list: To block incoming calls you have edit in the blacklist.

Network setting:

Depending on network operator support , you can choose the following options:

Network selection: Here you can choose: *New search*, *Select network* and *Selection Mode*.

Preferred networks: Here you can choose the network you prefer.

GPRS connection: Here to can choose between: *When needed* and *Always*.

Security setup:

You can choose the following options:

SIM lock: To turn your SIM PIN code *On* or *Off*.

Phone lock: To lock your phone with a password. The default password is: *0000*.

Change password: Here you can change your password of: *PIN*, *PIN2* and *Phone password*.

Restore factory settings:

To reset some of the menu settings to their original values. The password is: *0000*.

Organizer

To Do:

You can schedule and organizer things such as appointments and meetings in *To do*.

To add a new task:

1. Choose *Add* in the *Task list*. If there's already a task choose *Option* and *Add*.
2. Choose *New task*.
3. Here you can enter your *New Task*.
4. Press *Done* to save the *New task*.

You can choose the following options if you select a task in the *Task list*:

View, Add, Edit task, Delete and Delete all.

Note: You can only store a fixed number of tasks. So please delete some unimportant tasks to save storage for important ones.

Alarm:

You can set a maximum of 5 different alarms.

To set an alarm clock:

1. Select one alarm and press *Edit*.
2. *Edit alarm: On or Off, Time, Repeat, Snooze (m) and Alert type.*
3. Press *Done* to save the *Alarm*.

When alarm sounds, you can stop the alarm by pressing *Stop*. If you press *Delay*, the alarm stops and rings again in the *Snooze* time you have edit in the *Alarm*.

Organizer

If the alarm sounds for one minute, the alarm will stop and sound again after about five minutes.

Calculator:

The phone is provided with a calculator. This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

Function:

- The keys 1 to 0 insert a digit.
- To insert a decimal, press #.
- Press the up and down arrow key for +, -, x, ÷.

To get the result, press *Result*. Press and hold *Clear* to clear the display for a new calculation.

SOS

The SOS function is a simple function which can save lives at the deciding moment. In all, you can save 5 SOS numbers (relatives, neighbours, friends and rescue). These numbers, previously saved in order of sequence, will be automatically dialed in an SOS by pressing the *SOS button* on the back of the mobile phone. During the SOS call, a warning tone sounds so the person that you rang knows that it is an emergency! If you cannot get through on the first number, the second number will be called automatically. If you cannot get through on the second number, the third number will be called etc.

If no emergency number is saved, or your phone card has run out, or you are not allowed under a foreign network (e.g. Roaming not activated), you can dial 112 or another emergency number on the numerical keypad.

SOS:

Press the *SOS button* on the back of the mobile phone for 3 seconds. If you want to stop or cancel the SOS call, press the *red key* for 3 seconds.

Functionality:

By pressing the *SOS button*, the emergency numbers you have previously saved will be automatically dialed in the given sequence. (The emergency button also functions when the key lock is on). The mobile phone switches on the hands free function at full volume and at the same time,

SOS

if the SOS call is not answered, the S200/S210 will send a SOS SMS to this person (in case mobile number or telephones with SMS function is available for emergency contact).

If you are called within an hour of the start of the SOS call function, the telephone automatically takes each incoming call. If you would like to stop the 'automatic reception up to 1 hour after emergency call' function you must switch your mobile phone off and then switch it on again (For safety reasons, only pressing is not sufficient).

Note:

- When you press the SOS button, the phone first vibrates and after 2/3 seconds starts calling the SOS number.
- If you want to stop or cancel the SOS call, press the **red key** for 3 seconds.
- The SOS call should not end up unheard on a mobile- or voice mail box. To make this sure the calling time is limited for two minutes. After that the next number will be called automatically.
- When changing a phone card: Always make sure that there is sufficient credit on your phone card because private emergency numbers cannot be dialed without sufficient credit.
- As a rule, the international emergency call 112 can still be called outside of the regional network of your network operator.

SOS

Attention: If you want to save SOS numbers such as the ambulance service, the police, fire brigade etc. as an SOS number, you must gain permission from each of these institutions beforehand. There will be no liability for possible costs arising from calling them by accident.

SOS Button:

Here you can choose to turn the *SOS button* **On** or **Off**. If the *SOS button* is pressed when switched off, no emergency call will be made. However, you can dial 112 or another emergency number on the numerical keypad.

SOS number:

Here you can set up a maximum of 5 *SOS numbers* and their sequence.

Edit emergency SMS:

If you press the *SOS button*, and the SOS call is not answered, this text will be send to the *SOS numbers*. The text can be changed (maximum 64 characters).

Camera (Only on S210)

In the standby mode press the camera key, on the right side of the phone, for 2 seconds to activate the camera.

Take a picture:

Aim the camera lens at the place/object, and press the up arrow key, to take a picture. Keep the camera lens steady for a while for a better image quality.

After taking the picture, press *Save* to save the picture. If you press *Cancel* the picture will not be saved. After choosing *Save* or *Cancel* the camera goes back to the viewfinder display. Where, if you like, can take a new picture.

If you press *Option* in the viewfinder display the following options:

Photos: Here you can view the saved pictures. Also the pictures you received by MMS/Bluetooth. The pictures that the camera makes are saved as a .bmp file. If you press *Option* by a picture you can choose the following options:

View, Use, Send, Rename, Delete, Delete all files and Storage.

Camera settings: Here you can set the *Shutter sound* and *Banding*.

Camera (Only on S210)

- Image settings:* Here you can adjust the image size.
- Scene mode:* Here you can choose between: *Auto* or *Night*.
- Restore default:* Restore the default settings.

Note: All the photos are stored on the Micro SD card. So please install this card if you want to take and save pictures. You cannot use Bluetooth and Camera at the same time. But you can send a picture by Bluetooth, the phone will ask: 'Power on Bluetooth first'?

FAQ

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or network operator.

Can't turn the phone on:

- Check battery installation, please install battery correctly.
- Check if battery level is low, change a battery or charge the battery.
- Check if entered incorrect PIN code 3 times in a row.

If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

SIM error:

- Is the SIM card dirty? Please clean it.
- Try and reinstall the SIM card.
- Is the SIM card damaged? Please contact your network operator.

Weak signal or no signal:

- You may be in a location where the reception is bad, such as tunnel or cellar, please relocate and try again.
- You can try turning around slightly or get near the window if you are in a room.
- Please contact your network operator, if you still have a weak signal or no signal.

FAQ

Bad talking quality:

- Weak signal? See: Weak signal or no signal.
- Check if battery if battery is low. Charge the battery or change the battery.
- Use the up volume key to adjust the microphone volume during a call.

Can't make a call:

- Check if you enter the correct number and press **green key**.
- Check if you set call barring, if yes, please cancel it.
- Check if the SIM card is registered in the network.
- If your SIM card is a prepaid card, please make sure there is enough money on the card.

Can't receive calls:

- Is the SIM card registered in the network?
- Check if your phone is turned on.
- Check if screens shows no signal, if yes, see: Weak signal or no signal.
- Check if you set call barring, if yes, please cancel it.

Screen is dark:

- Check if battery if battery is low. Charge the battery or change the battery.
- Adjust the wallpaper.
- Your phone may be affected with damp, keep it dry.

FAQ

PIN locked:

- **Check if entered incorrect PIN code 3 times in a row.**

If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

Tips: if all suggests and solutions can't solve your problem, please check Customer Service on www.beafon.com. Please do not disassembly or repair your phone without professional guide.

Battery

- Your phone is powered by a rechargeable battery.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.
- When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer.
- Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Use the battery only for its intended purpose.
- Never use any charger or battery which is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Battery

- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries performance is particularly limited in temperatures well below freezing.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling).
- Do not dispose as household waste.
- Do not charge your mobile phone if the battery is not installed.

Phone

Your phone is a product of superior design and craftsmanship and should be treated with care.

The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.

Phone

- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal.



Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



Road safety comes first

Do not use a hand-held phone while driving.



Switch off in aircraft

Wireless devices can cause interference in aircraft.



Switch off in hospitals

Follow any regulations or rules. Switch the phone off near medical equipment.



Switch off when refuelling

Do not use the phone at a refuelling point. Do not use near fuel or chemicals.



Interference

All wireless phones may get interference, which could affect performance.

For your safety

Traffic Safety:

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop. Remember road safety always comes first!

Operating environment:

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone.

Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices:

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

For your safety

Pacemakers:

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids:

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your network operator.

Other medical devices:

Operation of any radio transmitting equipment, including cellular phones, may interfere with the

For your safety

functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Posted facilities:

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres:

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air

For your safety

contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles:

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Certification information (SAR):

This model phone meets the EU requirements for exposure to radio waves.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg. Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

The highest SAR value for this device when tested at the ear was 0.85 W/kg and the highest tested SAR value is 0.44 W/kg.

For your safety

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

Liability Disclaimer:

- **Bea-fon Mobile GmbH shall not bear any liability for any relevant, indirect, special, incidental, or inevitable injuries caused by using of this product, including injuries which have been considered, or unconsidered, likely to happen.**
- **For any losses caused by natural disasters (such as earthquake, flood, etc.) or any acts or accidents (including deliberate or accidental misuses by the user under these accidents or other unusual circumstances) which are beyond our liability scope, non-responsibility should be accounted on us.**