

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

Trademarks and Permissions



HUAWEI, HUAWEI and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.


Contents

1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Status Icons	4
2 Getting Started	5
Installing SIM Cards and the Battery	5
Removing the Battery and SIM Cards	5
Installing a microSD Card	5
Charging the Battery.....	6
Working with the Main Menu	7
Automatically Switching Between Profiles	7
Phone Lock.....	8
Mass Storage	8
PIN and PUK	9
Locking and Unlocking the Keypad.....	10
Entertainment.....	10
3 Voice Services	11
Dual-Card Management	11
Making a Call.....	11
Answering a Call.....	12
4 Text Input	12
Changing the Text Input Mode	12
Multi-Tap Input Mode.....	13
Predictive Input Mode	13
Number Input Mode.....	13
Entering Symbols	13

5 Messaging	14
Writing and Sending a Text Message	14
Writing and Sending a Multimedia Message	15
6 Phonebook	16
Creating a Contact	16
Searching for a Contact	16
Setting the Preferred Storage	16
Copying Contacts	17
7 Ebook Reader	18
8 Games	19
9 Camera	19
10 Audio Player	20
11 FM Radio	20
12 File Manager	21
13 Services	22
Network Settings	22
Selecting a SIM Card	23
Connecting to a Network	23
14 STK	23
15 LED Flash	24
16 Warnings and Precautions	24

1 Getting to Know Your Phone

Your Phone

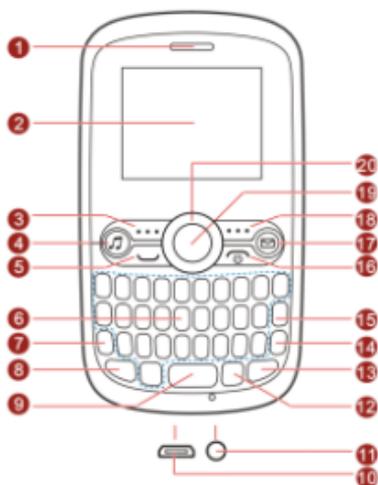

- | | | | |
|----|----------------------------------------------|----|----------------------------|
| 1 | Earpiece | 11 | Headset jack |
| 2 | Screen | 12 | Sym key |
| 3 | Left soft key | 13 | Input method switching key |
| 4 | Audio player key | 14 | Enter key |
| 5 | Call/Answer key | 15 | Delete key |
| 6 | Keypad | 16 | End/Power key |
| 7 | Fn key | 17 | Message key |
| 8 | A/a key | 18 | Right soft key |
| 9 | Space key | 19 | OK/Confirm key |
| 10 | Charger jack/Universal serial bus (USB) port | 20 | Navigation keys |



The figure above shows the appearance of your phone and is provided only for your reference.

Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> • Make a call from the SIM card 1 or 2 in standby mode. • Answer a call. • View call logs of SIM card 1 and 2 in standby mode.
	<ul style="list-style-type: none"> • Power the phone on or off (press and hold the key for about 3s). • End or reject a call. • Return to standby mode.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Select a highlighted item.
	<ul style="list-style-type: none"> • Access Contacts in standby mode. • Return to the previous screen.
	Access Audio player in standby mode.
	Access Messages in standby mode.
	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Confirm a selection.
	Scroll through the main menu (press  ,  ,  , or ).
	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call voicemail in standby mode (press and hold the 1 key for about 3s). • Select an option labeled with the corresponding number.

Press...	To...
	Enter a space in editing mode.
	<ul style="list-style-type: none"> • Lock the keypad in standby mode (press and hold the key for about 3s). • Switch between text input methods in editing mode.
	Switch between uppercase and lowercase in editing mode.
	<ul style="list-style-type: none"> • Access FM radio in standby mode (press and hold the key for about 3s). • Display the Select symbol list in editing mode.


Status Icons

Icon	Indicates...
	Signal strength for SIM card 1 or 2.
	New text messages for SIM card 1 or 2.
	New multimedia messages for SIM card 1 or 2.
	Call forwarding enabled for SIM card 1 or 2.
	Missed calls for SIM card 1 or 2.
	Alarms enabled.
	Keypad locked.
	Battery level.
	General profile activated.
	Silent profile activated.
	Meeting profile activated.
	Outdoor profile activated.
	Headset connected.

2 Getting Started


Installing SIM Cards and the Battery

You can install two Subscriber Identification Module (SIM) cards in the phone at the same time. When inserting a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

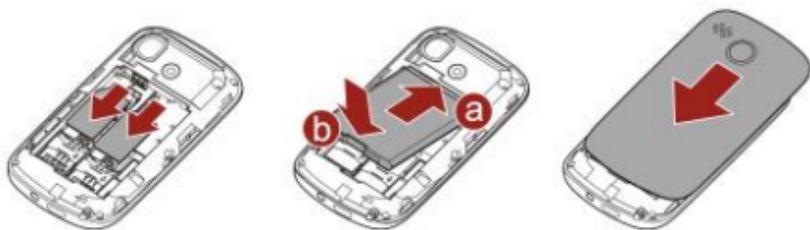

Removing the Battery and SIM Cards

Before removing the battery and SIM cards, ensure that your phone is powered off.


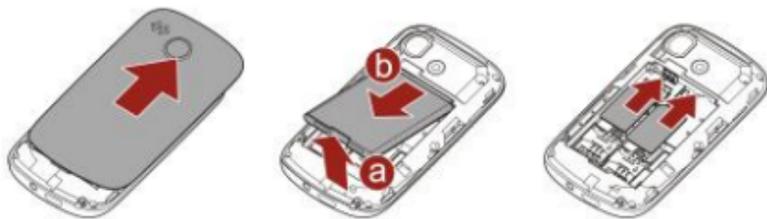


Installing a microSD Card



Before installing or removing a microSD card, power the phone off. When powered back on, the phone indicates whether the microSD card has been correctly installed.

You can expand your phone's memory capacity by installing a microSD card. When installing a microSD card, ensure that the gold contact area faces down.

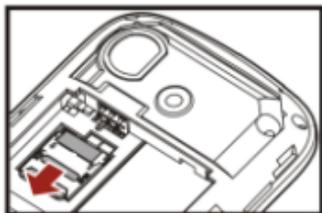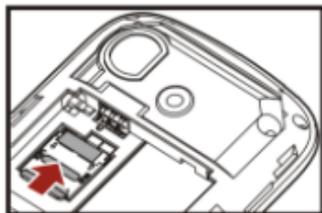

Charging the Battery

To charge the battery:

1. Connect the charger to the phone's charger jack.
2. Connect the charger to a power outlet.



3. Allow the battery to fully charge.
When the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.
4. Disconnect the charger from the power outlet and then from the phone.

Working with the Main Menu

1. In standby mode, press  (**Menu**) to access the main menu.

2. Press  to scroll to the desired submenu, and press  to access the submenu.

3. Press  or  to scroll to an option, and press  (**OK**) or  to select the option.

4. Press  (**Back**) to return to the previous screen or  to return to the standby mode.

Automatically Switching Between Profiles

You can set your phone to activate different profiles at different times. The phone can automatically switch between profiles up to a maximum of three times a day.

To automatically switch between profiles:

1. Select **Menu > User profiles > Profile Switch Timing**.

2. Scroll to a time, and press  (**Edit**) to select the profile to be activated at the specified time.

3. Press  (**Done**) to save the settings.

Phone Lock

The phone lock protects your phone from unauthorized use. The preset password to unlock your phone is **1234**. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the password each time you power on the phone.

To enable the phone lock:

1. Select **Menu > Settings > Security settings > Phone security > Phone lock**.



2. Enter the password, and press **(OK)**.

To change the password:

1. Select **Menu > Settings > Security settings > Phone security > Change password**.



2. Enter the old password and press **(OK)**.



3. Enter a new password and press **(OK)**.

The password must be a numeric string between four and eight digits.

4. Enter the new password again to confirm it.

If you forget the password, contact your service provider.

Mass Storage

When you have connected your phone to a computer using the USB cable, **Mass storage** is displayed on the phone screen.

Select **Mass storage** to manage the files stored in the phone memory or on the microSD card using the computer's file manager application.

The phone memory and its microSD card are displayed as removable disks on the computer. You can perform the following operations:

1. Double-click a disk to open it.
2. Copy, paste or delete files on a disk.

3. Disconnect the phone from the PC.



- Ensure that you connect and disconnect the USB cable correctly.
- Do not run the formatting command on the computer to format the phone memory; doing so may permanently damage the phone memory.
- You can transfer data and charge the battery by connecting the phone to the computer with the USB cable.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use.

If you incorrectly enter the PIN a specified number of times, the PIN is blocked and the phone prompts you to enter the PIN unblocking key (PUK).

If you incorrectly enter the PUK a specified number of times, the SIM card will become permanently invalid, and you must contact your service provider for a new SIM card.

Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

The lock for each SIM card must be configured separately.

To enable the PIN lock:

1. Select **Menu > Settings > Security settings > SIM1 or SIM2 security > PIN lock.**

2. Enter the PIN and press  (OK).

Locking and Unlocking the Keypad

To lock the keypad, press and hold  in standby mode for 3s.

To unlock the keypad, press  (**Unlock**) and then

 (**OK**).

If the **Auto keypad lock** function is enabled, the phone will automatically lock the keypad after being idle in standby mode for a preset period.

To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock**, scroll to a period, and press

 (**OK**) to select the period.



When the keypad is locked, you can press  to answer a call or make an emergency call.

Entertainment

- **Camera:** take pictures.
- **Image viewer:** view pictures stored on the phone or the microSD card.
- **Audio player:** play audio clips stored on the phone or the microSD card.
- **Sound recorder:** record audio clips.
- **FM radio:** listen to the radio.
- **Games:** play games.

3 Voice Services

Dual-Card Management

Your phone supports dual-card dual-standby mode, but the two SIM cards cannot be used simultaneously. When you are making a call or using data services with one SIM card, the other SIM card becomes unavailable, that is, no incoming calls can be received and the data services cannot be used.

Making a Call

- In standby mode, enter the phone number.
 - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number.
 - To call an extension, enter the switchboard number, press  to enter **P**, press  and then  to enter **W**, and enter the extension number.
- Press  to dial the number.
- Press  to end the call.
 -  You can also make calls from call logs, contacts, or messages.
 - During a call, you can press  or  to adjust the in-call volume.

Answering a Call

When you receive an incoming call:

- Press  to answer the call.
- Press  (**Options**) and select **Answer** to answer the call.
- Press  to reject the call.
- Press  (**Silent**) to mute the ringtone, and press  (**Reject**) to reject the call.
- Press  (**Silent**) to mute the ringtone, press  (**Options**), and then select **Answer** to answer the call.

If the **Any key** answer function is enabled, you can press any key

except  and  to answer a call.

4 Text Input

Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. You can press  to switch between text input modes.

Indicator	Text Input Mode
abc	Multi-tap input mode
S abc	Predictive input mode
123	Number input mode



- Press  (**Clear**) or  once to delete the last entered character. You can also press and hold  (**Clear**) to delete all the characters entered.
- In any text input mode, press  to enter a space.
- In any text input mode, press  to start a new paragraph.
- When the input language is English, press  to switch between upper and lower case.

Multi-Tap Input Mode

In multi-tap input mode, press the key labeled with the desired letter.

Predictive Input Mode

To enter a word in predictive input mode:

1. Press each key once according to the spelling sequence of the desired word.
The phone displays candidate words.
2. Press  or  to scroll left or right, and press  or  to turn pages.
3. Press  to enter the word.

Number Input Mode

In number mode, press the key labeled with the desired digit.

Entering Symbols

To enter a symbol with the QWERTY keypad in any input mode:

Using to Enter a Symbol

- To enter only one symbol, press  once and then the key labeled with the desired symbol.
- To enter multiple symbols, press  twice and then the keys labeled with the desired symbols.

Using to Enter a Symbol

1. Press  to display the symbol list.
2. Press  or  to scroll left or right, and press  or  to scroll up or down.
3. Press  to select the desired symbol.

5 Messaging

Writing and Sending a Text Message

1. In standby mode, select **Menu > Messages > Write message > Text message**, or press  and select **Write message > Text Message**.
2. Write the message.
3. Press  (**Options**), and select **Send to**.
4. Select **Enter number**, and enter the recipient's phone number; or select **Add from Phonebook** and add a recipient from the phonebook.
To add multiple recipients, repeat this step.

5. Once the recipient or recipients have been added, and press  to send the message or press  (**Options**) for the following options:
- **Send**: send the message to the recipient or recipients.
 - **Save to Drafts**: save the message to **Drafts** and exit the message editing screen.

Writing and Sending a Multimedia Message

1. In standby mode, select **Menu** > **Messages** > **Write message** > **Multimedia message**, or press  and select **Write message** > **Multimedia message**.
2. Write the message.
3. Press  (**Options**) for the following options:
 - **Add picture**: add a picture to the message.
 - **Add sound**: add an audio clip to the message.
 - **Add subject**: add a subject to the message.
4. On the message editing screen, press , or press  (**Options**) and select **Send to**.
5. Select **Enter recipient** to enter the recipients' phone numbers, or select **Add from Phonebook** to add the desired recipients from the phonebook.
6. Once the recipient has been added, press  to immediately send the message, or press  (**Options**) for the following options:
 - **Send**: send the message.
 - **Change to Cc**: copy the message to the recipient.

- **Change to Bcc:** blind copy the message to the recipient.
 - **Save to Drafts:** save the message to **Drafts**.
-  • You can contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
- Your phone supports a multimedia message up to 300 KB.
 - Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.

6 Phonebook

Creating a Contact

1. Select **Menu > Contacts > Add new contact**.
2. Select **To SIM1/SIM2** or **To Phone** for saving the contact.
3. Enter the contact information, press , and select **Save**.
4. When prompted, press  (Yes).

Searching for a Contact

1. Select **Menu > Contacts**.
2. Enter the first letter of the contact name in the search box.
3. Press  or  to scroll to the desired contact.

Setting the Preferred Storage

You can set the storage where you want to save new contacts.

1. Select **Menu > Contacts**.

2. Press  (**Options**), and select **Phonebook settings > Preferred storage**.
3. Scroll to **SIM1**, **SIM2**, **Phone**, or **All** as desired.
4. Press  (**OK**).

Copying Contacts

You can copy contacts to the phone, SIM 1 card or SIM 2 card.

Copying One Contact

1. Select **Menu > Contacts**.
2. Press  or  to scroll to the desired contact.
3. Press  (**Options**), and select **Copy**.
4. Select **To Phone**, **To SIM1**, or **To SIM2** to copy the contact to the desired location.

Copying All Contacts

1. Select **Menu > Contacts**.
2. Press  (**Options**), and select **Phonebook settings > Copy contacts**.
3. Press  or  to scroll to the desired option, such as **From Phone** or **From SIM1/SIM2**.
4. Press  (**OK**) to copy all contacts to the desired location.

7 Ebook Reader

Your phone supports ebooks in .txt format.

1. Select **Menu > Organizer > Ebook reader** to display the bookshelf. The phone automatically adds ebooks stored in **Ebook** on the microSD card to the bookshelf.
2. Scroll to the desired ebook.
3. Press  (**Options**), and then select **Open ebook** to start reading the ebook.

You can also press  (**Options**), and then select **Global settings** to configure settings such as **Font size**, **Scroll by** and **Alignment**.

4. Press  (**Back**) to stop reading.



- When reading an ebook, press  and  to turn pages.
- It is recommended that you store ebooks in **Ebook** on the microSD card. When you open an ebook stored in a folder other than **Ebook**, the phone automatically moves the ebook to **Ebook** so that you can find it easily next time you want to open it.

8 Games

For your entertainment, your phone comes pre-installed with the games **Smash** and **Puzzle**. Select **Menu > Games > Games settings** to set the **Sound effect** and **Volume**.

9 Camera

The phone is equipped with a digital camera.

1. Select **Menu > Multimedia > Camera**.

2. On the viewfinder screen:

- Press  (**Options**) to view pictures or configure the camera settings.
- Press  or  to adjust the exposure value.
- Press  or  to zoom in or zoom out.

3. Focus the camera and press  to take a picture.

4. Press  (**Back**) to return to the viewfinder; or press  (**Options**) and select **Delete** to delete the picture.

10 Audio Player

The audio player plays audio files stored in **My music** in the phone memory or on the microSD card. If you want to listen to audio with enhanced quality sound, use the headset provided.

1. Select **Menu > Multimedia > Audio player**; or press  in standby mode to access **Audio player**.
2. Press  to start playing audio files.
When playing audio files:
 - Press  and  to adjust the volume.
 - Press  and  to switch between audio files.
 - Press the button on the headset cable to switch between audio files.
 - Press  (**List**) to view the audio file list, and press  (**Options**) to configure the relevant settings.
3. Press  to pause or continue.

11 FM Radio

Your phone is equipped with a built-in antenna, so you can listen to radio programs through the loudspeaker. If the headset is included in the product package, you can also use the headset to listen to the FM radio.

In standby mode, select **Menu > Multimedia > FM radio**, or press and hold  for 3s.

1. When listening to the radio:

- Press  to pause or continue.
- Press  and  to adjust the volume.
- Press  or  to adjust the frequency in steps of 0.1 MHz.
- Press and hold  or , and then release the key to switch to an adjacent channel.
- Press a number key to switch to the corresponding channel in **Channel list**.
- Press the button on the headset cable to switch between channels.
- Press  (**Options**) to view or edit the channel list, manually set a frequency, record an audio clip, append a new audio clip to an existing one, automatically search for and save channels, and configure the relevant settings.

12 File Manager

You can use **File manager** to organize files stored on your phone and microSD card. You can view photos, listen to music and read ebooks from **File manager**.

13 Services

You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites, you must subscribe to the corresponding service from your service provider and set the relevant parameters on your phone. For details about the service and the charges, contact your service provider.

Network Settings

Before accessing WAP sites, create your data account and configure WAP parameters.

Setting the Connection Profile

1. Select **Menu > Settings > Data account**.
2. Press  (**Options**), and select **Add PS account**.
3. Edit **Account name**, **APN**, **User name**, **Password**, **Auth.type**, **SIM selection** and **Advanced settings** (such as **Homepage**, **Connection Type**, **IP address**). Set the parameters based on the information provided by your service provider.
4. Press  (**OK**) to save the settings.

 If the data account provided by your service provider is already set up on your phone, you do not need to create a new data account.

Setting the WAP Profile

1. Select **Menu > WAP > Settings > Data account**.
2. Select **SIM1** or **SIM2**.
3. Select your service provider, and press  (**OK**) to select

a data account.

Selecting a SIM Card

If dual-SIM mode is enabled, you must select which SIM card to use when connecting to the Internet.

To select a SIM card:

1. Select **Menu** > **WAP** > **Settings** > **Select profile**.
2. Scroll to **SIM1**, **SIM2**, or **Always ask** as desired.
3. Press  (**OK**) to select the SIM card.

Connecting to a Network

1. Press **Menu** > **WAP** > **Input address**.
2. Enter a Uniform Resource Locator (URL).
3. Press  (**Options**), and select **Done** to access the address.



It is recommended that you clear cache regularly to ensure a better browsing experience.

14 STK

The SIM Tool Kit (STK) function is provided only by some service providers. It allows you to send text messages, read news, and use other applications. For details, contact your service provider.

15 LED Flash

Your phone has a charming LED flash. The LED flash is steady on or blinking in the following situations:

- The phone is being powered on or off.
- The phone is being charged.
- There are unread messages or missed calls.
- When an alarm, a calendar event reminder, or an incoming call occurs.

If you want to save power, you can disable the LED flash as follows:

1. Select **Menu > Settings > Phone settings > LED flash**.
2. Scroll to the desired LED flash (**Power On/Off LED**, **Charge LED**, **Reminder LED**, or **Tips LED**) and select **Off** to disable it.

16 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.

- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.

- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.

- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.964 W/kg, and when properly worn on the body is 0.876 W/kg.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0700

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Please visit www.huaweidevice.com/worldwide/support/hotline for recently updated hotline and email address in your country or region.