

Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.



Violation of the instructions may cause serious injury or death.



- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.



- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.



- Store the battery in a place out of reach of children.
- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



Important Safety Precautions



- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.



- Do not use a hand-held phone while driving.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).



- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- Never store your phone in temperatures less than -4°F or greater than 122°F.



- Do not use harsh chemicals(such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.



- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.



- Do not use your phone in high explosive areas as the phone may generate sparks.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.



- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



- Do not hold or let the antenna come in contact with your body during a call.
- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.



Contents

Important Safety Precautions	1	Signal Strength	14	Smileys Mode	19
Contents	4	Screen Icons	15	Changing Letter Case	20
Welcome	7	Making Calls	16	Initial Cap (T9Word / Abc)	20
Important Information	7	Correcting Dialing Mistakes	16	Caps Lock (T9WORD / ABC)	20
FCC Part 15 Class B Compliance	7	Redialing Calls	16	Lower Case (T9word / abc)	20
Technical Details	7	Receiving Calls	16	Text Input Examples	20
FCC RF Exposure Information	9	Quick Access to Convenient Features	17	Using Abc (Multi-tap) Text Input	20
Bodily Contact During Operation	9	Manner Mode	17	Using T9 Mode Text Input	20
Vehicle-Mounted External Antenna	9	Lock Mode	17	Using the NEXT Key	21
Caution	9	Mute Function	17	Adding Words to the T9 Database	21
Phone Overview	10	Volume Quick Adjustment	17	Contacts in Your Phone's Memory .22	
Menus Overview	11	Adjusting Speaker On	18	Contacts Entries	22
Getting Started with Your Phone	13	Call Waiting	18	The Basics of Storing Contacts Entries	22
The Battery	13	Caller ID	18	Options to Customize Your Contacts	23
Installing the Battery	13	Speed Dialing	18	Adding or Changing the Group	23
Removing the Battery	13	Entering and Editing Information	19	Changing the Call Ringer	23
Charging the Battery	13	Text Input	19	Changing the Message Ringer	24
Battery Charge Level	13	Text Input Modes	19	Adding or Changing the Memo	24
Turning the Phone On and Off	14	T9Word (T9) Mode	19	Adding or Changing the Picture ID	24
Turning the Phone Off	14	Abc (Multi-tap) Mode	19	Adding Speed Dial	25
		123 (Numbers) Mode	19	Adding Voice Dial	25
		Symbols Mode	19		

Editing Contacts Entries	25	From Contacts	30	Messaging	37
Adding Another Phone Number	25	From Recent Calls	31	1. Voice Mail	38
Through Contacts	26	Speed Dialing	31	2. Text Messaging	38
Default Numbers	26	Appending a Stored Number	31	2.1 Send New	38
Changing the Default Number	26	Using Phone Menus	32	Message Icon Reference	40
Editing Stored Phone Numbers	26	Menu Access	32	2.2 Inbox	41
Editing Stored Names	27	Contacts	32	Out of Memory Warning	41
Editing Customized Options	27	1. List Entries	33	2.3 Outbox/Sent	42
Deleting	27	2. New Number	33	2.4 Templates	43
Deleting a Phone Number from a Contact	27	3. New e-mail	33	2.5 Drafts	43
Additional Ways to Delete a Contact	28	4. Groups	34	2.6 Saved	43
Deleting a Speed Dial	28	5. Speed Dial	34	2.7 Erase Messages	43
Phone Numbers With Pauses	28	6. Voice Dial	34	2.8 Settings	44
Hard Pause (P)	28	7. Erase all Contacts	34	1. Save to Outbox	44
2-sec Pause (T)	28	Calls History	35	2. Auto Delete Inbox	44
Storing a Number with Pauses	29	1. All Calls	35	3. Callback #	44
Adding a Pause to an Existing Number	29	2. Dialed Calls	35	4. Quick Text	45
Searching Your Phone's Memory	29	3. Received Calls	36	5. Default Entry Mode	45
Scrolling Through Your Contacts	30	4. Missed Calls	36	3. Web Alerts	45
Searching by Letter	30	5. Erase History	36	4. e-mail	45
Searching Options	30	6. Timers	36	5. IM & Chat	45
		7. KB Counter	36		



Contents

Do More	46	1.4 Alerts	55	4.5 Data Setup	61
Instant Talk	49	2. Display	56	5. Voice Dial	62
Call from PTT Contact List (Barge) ..	49	2.1 Banner	56	5.1 Voice Dial Prompt	62
Call from PTT Contact List (Alert) ..	49	2.2 Backlight	56	5.2 Train Words	62
Call from PTT Contact List (Group) ..	50	2.3 Wallpaper	56	6. Advanced	62
Call from Keypad (Barge)	50	2.4 Contrast	57	6.1 Phone Info	62
Incoming PTT (Barge)	51	2.5 Menu Style	57	6.2 System	62
Incoming PTT (Alert)	51	2.6 Theme Colour	57	6.3 Security	63
Incoming PTT (Group)	51	2.7 Time	57	7. Airplane Mode	64
Making a PTT call when the folder is c	51	2.8 Fonts	57	8. Icon Glossary	64
losed	51	2.9 Power Saver	58	Safety	65
1. PTT Contacts	52	3. Games/Tools	58	Accessories	81
2. New PTT Contact	52	3.1 Backlight	58	Warranty Information	82
3. New Talk Group	52	3.2 Volume	58	Index	84
4. Settings	52	3.3 Notification	58		
4.1 Instant Talk On/Off	53	3.4 Memory Status	58		
4.2 Speaker On/Off	53	4. Setup	59		
4.3 Presence On/Off	53	4.1 Shortcut	59		
Settings	54	4.2 Call Setup	59		
1. Sounds	54	4.3 Language	60		
1.1 Ringers	54	4.4 TTY Mode	61		
1.2 DTMF Length	54				
1.3 Volume	55				

Thank you for choosing the advanced and compact LG4750 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA) and Advanced Mobile Phone Service (AMPS). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 7-line backlight LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 18-key keypad.
- Speaker phone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and French) capabilities.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

The LG4750 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 Ghz. Also, the LG4750 works on Advanced Mobile Phone Service (AMPS). We call it a tri-mode phone. Since the phone operates on Cellular, PCS and AMPS, the call fail rate is less than on a conventional



Welcome

dual-mode or singlemode phone.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions. The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface Advanced Mobile Phone Service
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Nom-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Async Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 3/4 inches (2 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 3/4 inches (2 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 3/4 inches (2 cm)

distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

 
 
Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.



Phone Overview



1. **Earpiece**
2. **Flip** Flip open the case to answer an incoming call and close to end the call.
3. **LCD Screen** Displays messages and indicator icons.
4. **Left Soft Key** Use to display the function setting menu.
5. **Side Keys** Use to adjust the ringer volume in Main Menu Screen and the earpiece volume during a call.
6. **Send Key** Use to place or answer calls.
7. **Voice Dial Key** Use for access to Voice Dial.
8. **Manner Mode Key** Use to set the Manner Mode (from Main Menu Screen press and hold  for about 3 seconds).
9. **Right Soft Key** Use to select an action within a menu.
10. **Navigation Key** Use for quick access to Messaging, Shortcut, and All Calls.
11. **Speakerphone Key** Use to set the Speaker Phone Mode.
12. **End/Power Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
13. **Back Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.
14. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
15. **Lock Mode Key** Use in Main Menu Screen to set the lock function by pressing and holding the key  for about 3 seconds.
16. **Microphone**
17. **PTT button** Press to use the Instant Talk function.
18. **Headset Jack**



Contacts

1. List Entries
2. New Number
3. New e-mail
4. Groups
5. Speed Dial
6. Voice Dial
7. Erase all Contacts



Call History

1. All Calls
2. Dialed Calls
3. Received Calls
4. Missed Calls
5. Erase History
 1. All Calls
 2. Dialed Calls
 3. Received Calls
 4. Missed Calls

6. Timers

1. Last Call
 2. Lifetime
 3. Home Calls
 4. Roam Calls
 5. Instant Talk Calls
- ## 7. KB Counter
1. Received
 2. Transmitted
 3. Total



Messaging

1. Voice Mail
2. Text Messaging
3. Web Alerts
4. e-mail
5. IM & Chat



Do More

1. Wireless Web
2. Sounds
3. Wallpaper
4. Games
5. Tools
6. Favourites



Menus Overview



Instant Talk

1. PTT Contacts
2. New PTT Contact
3. New Talk Group
4. Settings
 1. Instant Talk On/Off
 2. Speaker On/Off
 3. Presence On/Off



Settings

1. Sounds
 1. Ringers
 2. DTMF Length
 3. Volume
 4. Alerts
2. Display
 1. Banner
 2. Backlight
 3. Wallpaper

4. Contrast
5. Menu Style
6. Theme Colour
7. Time
8. Fonts
9. Power Saver
3. Games/Tools
 1. Backlight
 2. Volume
 3. Notification
 4. Memory Status

4. Setup
 1. Shortcut
 2. Call Setup
 3. Language
 4. TTY Mode
 5. Data Setup
5. Voice Dial
 1. Voice Dial Prompt
 2. Train Words

6. Advanced
 1. Phone Info
 2. System
 3. Security
7. Airplane Mode
8. Icon Glossary

The Battery

NOTE It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

To install the battery, insert the battery into the opening on the back of the phone. Put the battery cover on the battery and push it slightly upwards.

Removing the Battery

Turn the power off. While pressing the PUSH button on the back of the phone, pull the battery cover downward and remove it. Then remove the battery by pressing the upper area of it.

Charging the Battery

 
To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG4750 may damage your phone or battery.

1. Plug the round end of the adapter into the phone's charger jack and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged battery is 3.5 hours.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying LOW BATTERY WARNING! If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.






Getting Started with Your Phone

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a vehicle power charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

NOTE Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

Turning the Phone Off


 



 















1. Press and hold  until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Screen Icons



When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

	Signal strength indicator. The strength of the signal received by the phone is indicated by the number of bars displayed.		Data Session		PTT 1X
	Battery indicator. Indicates battery charge level.		Alarm		PTT Inuse
	In use indicator. A call is in progress. * No icon indicates the phone is in Main Menu Screen.		Manner mode		Airplane Mode
	No service indicator. The phone is not receiving a system signal.		Analog indicator.		
	New text message indicator.		Instant Talk On		
	New voice mail indicator.		Digital indicator.		
	New text and voice message indicator.		TTY		
	1x service indicator.		SSL		
	Roaming indicator. The phone is outside of the home service area.		Speaker Phone On.		



Getting Started with Your Phone





Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.



- Call Failed** - indicates the call did not go through.
- Restricted** - indicates outgoing calls are in restricted mode.

NOTE If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts. To turn off this function:


Menu ->  Setting ->  Advanced ->
 Security -> Enter Lock Code -> 
Restrict Calls -> Off -> OK

4. Press  to end the call.

Correcting Dialing Mistakes



If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to delete all digits.

Redialing Calls

1. Press  twice to redial the last number you dialed. The last 30 numbers are stored in the call history list and you can also select one of these to redial.


Receiving Calls

1. When the phone rings or vibrates, press  to answer.


NOTE If you press  or  (the side keys) while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.

Manner Mode

Use Manner Mode in public places. When Manner Mode is set,  is displayed on the screen, the key tones are silent, and the phone is set to vibrate.

Manner Mode Quick Activation

1. From standby mode, press  for 3 seconds.

Manner Mode Quick Cancellation

1. Press  to switch to Normal Mode.

Lock Mode

Use Lock Mode to prevent others from using your phone. When Lock Mode is set, your 4-digit password is required to use the phone.

NOTE The lock code/password is the last 4 digits of your phone number. You can change to a new password using the Security menu.

Lock Mode Quick Activation

1. From standby mode, press  for 3 seconds then enter your 4-digit password.

Lock Mode Quick Cancellation

1. Press Right Soft Key  **Unlock** then enter your 4-digit password.

Mute Function

The Mute function prevents the other party from hearing your voice, but allows you to hear the other party.

Mute Quick Activation

1. Press Left Soft Key  **Mute** during a call.

Mute Quick Cancellation

1. Press Left Soft Key  **Unmute** again.

Volume Quick Adjustment

Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.


- Earpiece volume can be adjusted during a call.

NOTE Key beep volume is adjusted through the Sounds Volume (Menu -> 6 -> 1 -> 3 -> 3).



Quick Access to Convenient Features



Adjusting Speaker On

During a call, press the Speakerphone key  to quickly activate Speaker On allowing your phone to function as a speaker box.

NOTE To cancel Speaker On, press Speakerphone Key  again.

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name appears with the number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it.

Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.

OR

Enter the speed dial number and press .

Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press .

Text Input

You can input and edit your Banner, Schedule, Contacts, and messages.

Key Functions



Right Soft Key (Left Soft Key): Press to scroll through the following text input modes:

T9Word -> Abc -> 123 -> Symbols -> Smileys.



Shift: Press to change case.

T9 text : T9Word -> T9WORD -> T9word

Abc text : Abc -> ABC -> abc



Next : In T9 mode, press to display other matching words.



Space : Press to complete a word and insert a space.





Clear : Press to delete a single space or character. Hold to delete words.



Punctuation : In T9 mode, press to insert punctuation in a word and complete a sentence.

Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing Right Soft Key  (or Left Soft Key ) displays a pop-up list of text modes.

T9Word (T9) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words by using the letters on each key and a compressed database.

Abc (Multi-tap) Mode

Use to add words to the T9 database.

123 (Numbers) Mode

Use to type numbers using one keystroke per number.

Symbols Mode

 
Use to insert special characters or punctuation. There are 34 special characters including "SP" which inserts a space and "LF" which forces the text to the next line.

Smileys Mode

Use to insert smiley graphics. There are 40 smiley characters.



Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to reach the following:

Initial Cap (T9Word / Abc)

Only the first letter is capitalized and subsequent letters are lower case.

Caps Lock (T9WORD / ABC)




All letters are capitalized.

Lower Case (T9word / abc)







All letters are in lower case.

Text Input Examples

Display the text modes and select a text mode:







 







 
 

1. In a text entry field, press Right (or Left) Soft Key  to display text modes.
2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.

Using Abc (Multi-tap) Text Input

1. Press Right (or Left) Soft Key  to change to Abc mode.
2. Press  to change to ABC Caps Lock.
3. Press    .

LG is displayed.

Using T9 Mode Text Input

1. Press Right (or Left) Soft Key  to change to T9Word mode.
2. Press    .
3. Press  to complete the word and add a space.
4. Press         
 .

Call the office. is displayed.

Using the NEXT Key

After you have finished entering a word, if the word displayed is not the one you want, press **0 next** to display additional choices of words from the database.

1. Press **4 ght** **6 mno** **6 mno** **3 def**.


Good is displayed.

2. Press **0 next**.

The display gives you additional choices such as:
Home, Gone, Hood, etc.


Adding Words to the T9 Database

If a word is not in the T9 database, add it using Abc (Multi-tap) mode text entry.

1. Press Right Soft (or Left) Key  to change to Abc (multi-tap) mode.

2. Press **2 abc** **2 abc** **6 mno** **6 mno** **6 mno** **7 pqrs**.

Bop is displayed.

3. Press Right Soft (or Left) Key  to change to T9 mode to add the word Bop to the T9 database.

4. Press **BACK** to erase the existing word.

5. Press **2 abc** **6 mno** **7 pqrs**.

cop is displayed.

6. Press **0 next** **0 next**.

Bop is displayed.

 


Contacts in Your Phone's Memory

Contacts Entries

 
 
This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 500 entries with up to 5 phone numbers each. Each entry may be up to 22 characters. Each phone number may be up to 48 digits.

The Basics of Storing Contacts Entries

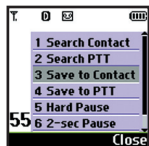

1. From Main Menu Screen, enter the phone number you want to save (up to 48 digits).
2. Press Right Soft Key **Options**.
3. Use to select **Save to Contact**, then press .
4. Use to select a Label, then press .
Home / Home2 / Office / Office2 / Mobile / Mobile2 / Pager / Fax / Fax2 / None
5. Use to select **New Name**, or **Existing** and press .

NOTE Use Existing to add another phone number to a contact already stored in memory.

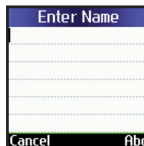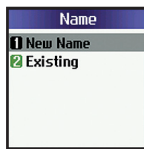

6. Enter a name for the phone number (up to 22 characters), then press .







NOTE To skip name entry, press to go to the next step.

NOTE Press Left Soft Key **Done** to further customize the Contact entry or press to return to the Main Menu Screen.

7. Continue saving the entry as a Speed Dial, press to select Speed Dial.
8. Enter a Speed Dial digit (e.g., 2). Use the keypad, then press or use to highlight the Speed Dial location, then press .
9. Continue saving the entry to have Voice Dial access use to highlight Voice Dial and press .
10. Press to select **OK**.
11. Follow the Voice Dial prompts.







Options to Customize Your Contacts




Once the basic phone number and name information is stored in your Contacts, you can edit and customize each entry.

1. Press Right Soft Key  **Contacts** and use  to highlight the contact entry you want to edit, then press .
2. Press Left Soft Key  **Edit** to access the Edit Contact screen.
3. Use  to highlight the information you want to customize, then press .

Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.










1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **No Group**, then press .

4. Use  to select the Group, then press .
No Group / Family / Friends / Colleagues / Business / School
5. Press Left Soft Key  **Done** to save the change.

NOTE Use Menu -> 1 -> 4 to change the name of a group, add a group, and delete a group.

Changing the Call Ringer

Allows you to identify who is calling, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight **Default Ringer**, then press .
4. Use  to select the Ringer Type, then press .
5. Press Left Soft Key  **Done** to save the change.



Contacts in Your Phone's Memory

Changing the Message Ringer

Allows you to identify who is sending you a message, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key **Contacts** and use to highlight an entry, then press .
2. Press Left Soft Key **Edit**.
3. Use to highlight **Default Text Msg Ringer**, then press .
4. Use to select the Ringer Type, then press .
5. Press Left Soft Key **Done** to save the change.

Adding or Changing the Memo

Allows you to enter up to 32 characters as a memo to the Contact entry.

1. Press Right Soft Key **Contacts** and use to highlight an entry, then press .
2. Press Left Soft Key **Edit**.
3. Use to highlight **Memo**, then press .













4. Enter text, then press .
5. Press Left Soft Key **Done** to save the change.

Adding or Changing the Picture ID










Allows the phone to display an image to identify the caller.



1. Press Right Soft Key **Contacts** and use to highlight an entry, then press .
2. Press Left Soft Key **Edit**.
3. Use to highlight **Default**, then press .
4. Press Right Soft Key **More** to display additional choices.
5. Use to select one of the 34 images available, then press .
6. Press Left Soft Key **Select**.
7. Press Left Soft Key **Done** to save the change.

Adding Speed Dial

1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight the phone number you want to set with a Speed Dial, then press .
4. Press  to select **Speed Dial**, then press .
5. Enter a Speed Dial digit. Use the Keypad, then press , or use  to highlight the Speed Dial digit, then press .
6. Press Left Soft Key  **Done** to save the change.

Adding Voice Dial








1. Press Right Soft Key  **Contacts** and use  to highlight an entry, then press .
2. Press Left Soft Key  **Edit**.
3. Use  to highlight the phone number you want to set with a Voice Dial and press .
4. Press  to select **Voice Dial** and press .
5. Press  to select **OK**.

6. Follow the Voice Dial prompts.
7. Press Left Soft Key  **Done** to continue editing the Contact entry, or Press  to return to the Main Menu Screen.

Editing Contacts Entries

Adding Another Phone Number










From the Main Menu Screen

1. From Main Menu Screen enter the phone number you want to save (up to 48 digits).
2. Press Right Soft Key  **Options** and select **Save to Contact**.
3. Use  to highlight a Label, then press 
Home / Home2 / Office / Office2 / Mobile / Mobile2 / Pager / Fax / Fax2 / None
4. Use  to highlight **Existing**, then press .
5. Use  to highlight the existing Contact entry, then press 
A confirmation message is displayed.



Contacts in Your Phone's Memory




Through Contacts





1. From Main Menu Screen press Right Soft Key  **Contacts**. Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight **Add Number**, then press .
5. Enter the number, then press .
6. Use  to highlight a Label, then press .
A confirmation message is displayed.

Default Numbers










The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be designated as the Default Number.

Changing the Default Number









1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .

3. Press Left Soft Key  **Edit**.
4. Use  to highlight the phone number you want to set as the Default Number, then press Right Soft Key  **Options**.
5. Press  **Set as Default #**.
A confirmation message is displayed.

Editing Stored Phone Numbers







1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the phone number, then press  twice.
5. Edit the phone number as necessary, then press .
6. Use  to confirm the Label, then press .
A confirmation message is displayed.



Editing Stored Names

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the name, then press .
5. Edit the name as necessary, then press .
6. Press Left Soft Key  **Done** to save the change.

Editing Customized Options









Edit any of the Contacts options in the same manner as when the Contact is created.

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the information you want to customize, then press .

5. Edit the information as necessary, then press .
6. Press Left Soft Key  **Done** to save the change.

Deleting

Deleting a Phone Number from a Contact








1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the phone number to be deleted.
5. Press Right Soft Key  **Options**.
6. Press  **Erase Number**.
7. Press  **Erase Number**.

A confirmation message is displayed.




Contacts in Your Phone's Memory







Deleting a Contact Entry







1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to be deleted, then press .
3. Press Left Soft Key  **Edit**.
4. Press Right Soft Key  **Options**.
5. Press  **Erase Contact**.
6. Press  **Erase**. A confirmation message is displayed.

Additional Ways to Delete a Contact

At any time when your Contacts are displayed, the Right Soft Key  **Options** allows you to erase the highlighted entry.

Deleting a Speed Dial


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the number, then press .

5. Use  to highlight the Speed Dial entry, then press .
6. Use  to highlight the existing Speed Dial location.
7. Press Right Soft Key  **Options**.
8. Press  **Remove**.
9. Press  **Remove**.
A confirmation message is displayed.

Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:










Hard Pause (P)

The phone stops dialing until you press Left Soft Key  **Release** to advance to the next number.





2-sec Pause (T)









The phone waits 2 seconds before sending the next string of digits.

Storing a Number with Pauses

1. Press Left Soft Key  **Menu**.
2. Press  **Contacts**.
3. Press  **New Number**.
4. Enter the number.
5. Press Right Soft Key  **Pause**.
6. Use  to select pause type, then press .
Hard pause / 2-sec pause
7. Enter additional number(s) (e.g., pin number or credit card number), then press .
8. Use  to select a Label, then press .
9. Enter a name (up to 22 characters).
A confirmation message is displayed.

Adding a Pause to an Existing Number

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to edit, then press .
3. Press Left Soft Key  **Edit**.

4. Use  to highlight the number then press  2 times.
5. Press Right Soft Key  **Pause**.
6. Press  **Hard pause** or  **2-sec pause**.
7. Enter additional number(s), then press .
8. Use  to confirm the Label, then press .
A confirmation message is displayed.

Searching Your Phone's Memory



The LG4750 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter
- Searching by Options
 - Find Name
 - Find Number
 - Find Speed Dial
 - Find e-mail




Contacts in Your Phone's Memory





Scrolling Through Your Contacts


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to scroll through the list.

Searching by Letter


1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

Searching Options




1. Press Right Soft Key  **Contacts**.
2. Press Right Soft Key  **Options**.
3. Select the search criteria (use  then press , or press the corresponding number on the keypad):

 **Find Name** - Enter the character(s) to search for (such as the first letter(s) of the name).

 **Find Number** - Enter the number(s) to search.


 **Find Speed Dial** - Enter the speed dial number(s) to search.

 **Find e-mail** - Enter the e-mail address to search.






4. When the list of matches is displayed, use  to highlight a matched entry.
5. Press  to see more information or press  to place a call.

Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- Use Speed Dialing



From Contacts

1. Press Right Soft Key  **Contacts** to display your Contacts alphabetically.
2. Use  to select the Contact entry, then press .
3. Use  to select the phone number.
4. Press  to place the call.



From Recent Calls

1. Press Left Soft Key  **Menu**.
2. Press  **Calls History**.
3. Use  to select the type of recent call, then press .

All Calls/Dialed Calls/Received Calls/Missed Calls


 


4. Use  to select the phone number.
5. Press  to place the call.

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press .

Prepending a Stored Number

Prepend can be used if you are out of your home system area and need to add the area code to an existing number in your phone's memory. When a Contacts entry or message callback number is displayed, you can add to the beginning of the original number. However, you cannot edit the original number.

1. Recall a number in your Recent Calls (All Calls, Dialed, Received, Missed).
2. Press Right Soft Key  **Options**.
3. Press  **Prepend**. If **All Calls** is selected, press .
4. Enter the prepend digits to the phone number.
5. Press  to place the call.



Using Phone Menus

Menu Access

Press Left Soft Key **Menu** to access 6 phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the menu (or submenu).

For example:

1. Press Left Soft Key **Menu** to display Six menu items.
Use to scroll through the list of menus.
2. Press the appropriate number key corresponding to the menu item you want to select.
The sub-menu list will be displayed.
3. Press the appropriate number key corresponding to the sub-menu you want to access.
4. Use to highlight your preferred setting, then press to select it.

NOTE Press to go back one step (while accessing a menu or selecting a setting). Changes to settings will not be saved.



Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).

Access and Options

1. Press Left Soft Key **Menu**.
2. Press **Contacts**.
3. Select a sub-menu.



1. List Entries
2. New Number
3. New e-mail
4. Groups
5. Speed Dial
6. Voice Dial
7. Erase all Contacts



1. List Entries

Allows you to view your Contacts list.

1. Press , , .
2. Options from here:
 - Press to scroll through your Contacts alphabetically.
 - Press Right Soft Key **Options** to select one of the following:
Erase Contact / Send Message / Copy to PTT / Find Name / Find Number / Find Speed Dial / Find e-mail
 - Press Left Soft Key **Alert**.
 Press and release PTT button to alert.
 - Receiver hears alerting tone.
 - Sender hears connecting tone.

2. New Number

Allows you to add a new number to your Contacts

NOTE Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press , , .
2. Enter the number, then press .
3. Select the Label you want and press .
4. Enter the name, then press .
5. Continue saving the entry as necessary.

3. New e-mail

Allows you to save a new e-mail address.

NOTE Using this sub-menu, the e-mail is saved as a new Contact. To save the e-mail into an existing Contact, edit the Contact entry.

1. Press , , .
2. Enter the e-mail address, then press .
3. Enter the name, then press .
4. Continue saving the entry as necessary.



Using Phone Menus

4. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press , , .

2. Options from here:

- Use to highlight a group to view, then press .
- Press Left Soft Key **Add** to add a new group to the list.
- Use to highlight a group, then press Right Soft Key **Options** to change the name of the group or delete the group.

5. Speed Dial

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press , , .

2. Use to highlight the Speed Dial position (or enter the Speed Dial digit), then press .

3. Use to highlight the Contact, then press .

4. Use to highlight the number, then press .

A confirmation message is displayed.

6. Voice Dial

Allows you to view the list of numbers programmed with voice dialing or add a Voice Dial command to a number stored in your Contacts.

1. Press , , .

- Options from here:
- Press Left Soft Key **New** to add a new Voice Dial entry.
- Use to highlight a Voice Dial and press Right Soft Key **Options** to choose one of the following:
Play / Re-record / Erase / Erase All

NOTE Recordings should be made in a normal use position (speaker by your ear and microphone near your mouth) while using a clear voice. Hands-free car kits or headsets should be used if the phone is primarily used with them.

7. Erase all Contacts

Allows you to erase all of your Contacts at once.

1. Press , , .




2. Set **Erase all #s / Cancel** and press .





Calls History

The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

NOTE To view a quick list of all your recent calls, press from the Main Menu.

-  indicates a dialed call.
-  indicates a received call.
-  indicates a missed call.

Access and Options







1. Press Left Soft Key  **Menu**.
2. Press  **Calls History**.
3. Select a sub-menu.



1. All Calls
2. Dialed Calls
3. Received Calls
4. Missed Calls
5. Erase History
6. Timers
7. KB Counter





1. All Calls

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press  ,  ,  .
2. Use  to highlight an entry.
- Press  to view the entry.
- Press  to place a call to the number.

2. Dialed Calls

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press  ,  ,  .
2. Use  to highlight an entry.



Using Phone Menus

- Press to view the entry.
- Press to place a call to the number.

3. Received Calls

Allows you to view the list of incoming calls; up to 30 entries.

1. Press , , .
2. Use to highlight an entry.

4. Missed Calls

Allows you to view the list of missed calls; up to 30 entries.

1. Press , , .
2. Use to highlight an entry.

Calls History Options :

Press Right Soft Key **Options**(for call lists) to select

- If the number is saved in Contacts:
Contact Info / Send Message / Prepend / Dial 1+Number / Erase / Erase All
- If the number is not saved in Contacts:
Save to Contacts / Save to PTT / Send Message / Prepend / Dial 1+Number / Erase / Erase All

- If it is an emergency call:
Send Message / Prepend / Dial 1+Number / Erase / Erase All

NOTE **Erase All** option is not Showed in the All Calls list.

5. Erase History

Allows you to erase selected call list(s).

1. Press , , .
2. Use to highlight the list of calls to erase, then press .
All Calls / Dialed Calls / Received Calls / Missed Calls
3. Press **Erase** or **Cancel**.

6. Timers

Allows you to view the duration of selected calls.

1. Press , , .
2. Use to highlight a call list, then press .
Last Call / Liftime / Home Calls / Roam Calls / Intant Talk Calls



7. KB Counter

Allows you to view the list of received and transmitted data calls.

1. Press , , .
2. Use to highlight a data call list, then press .
Received / Transmitted / Total



Access and Options



1. Press Left Soft Key  **Menu**.
2. Press  **Messaging**.
3. Select a sub-menu.



1. Voice Mail
2. Text Messaging
3. Web Alerts
4. e-mail
5. Im & Chat



Text messages, and the voice mail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing  during an Inbox message check.
- Read and edit messages saved in the outbox after transmission and resend them.

The phone can store up to 170 messages (50 inbox text messages, 50 out box text messages, 10 templates text messages, 10 draft text messages, 50 saved text messages). The LG4750 supports up to 146 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.



Using Phone Menus

New Message Alert

There are three ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. One of eight ring types is heard, if selected.
3. The message icon (✉) is displayed on the screen. In the case of an urgent message, the icon will flash and Urgent message is displayed.

NOTE If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.



1. Voice Mail

Allows you to view new voice messages recorded in the voice mail box. Your phone will alert you when you receive a new voice message.

Checking Your Voice Mail Box

1. Press , , .

Options from here:







- Press Left Soft Key  **Clear** to delete information, then select **Clear Count**.
- Press  to listen to the message(s).

2. Text Messaging




2.1 Send New

Allows you to send text messages. Each message has a destination (Address1) and information (Message). These are dependent upon the type of message you want to send.


The Basics of Sending a Text Message

1. Press , , , .
2. With the highlight on Address 1, press .
3. Enter the recipient's address, then press .

NOTE To send a message, press Left Soft Key  now.

4. Press  to access the message screen.
5. Type your message, then press .
6. Press Left Soft Key  **Send**.
A confirmation message is displayed.











Customizing the Text Message Using Options

1. Create a new message.
2. Press Right Soft Key  **Options**.
3. Select the option(s) to customize.

- | | |
|------------------------|--|
| Send | Sends the message. |
| Priority | Gives priority to the message.
Normal / Urgent. |
| Callback # | Inserts a pre-programmed callback number with your message.
On / Off / Edit |
| Delivery Notice | Informs you that the message has been successfully delivered to the recipient.
Enhanced / Normal |
| Save Message | Saves the message into the saved folder. |
| Erase Message | Deletes address or contents of message field. |
4. Complete and send the message.

Using Contacts to Send a Text Messaging

You can designate an entry saved in your Contacts as Address 1 instead of manually entering the destination.




1. Press  ,  ,  ,  .
 2. Press Left Soft Key  **Contacts**.
 3. Select **Contacts / All Calls / Recent Addresses**. then press  .
 4. Use  to highlight the Contact entry containing the destination, then press  .
 5. Use  to highlight the SMS phone number, then press  .
- NOTE** The Address 1 feature allows multi-sending of up to 10 addresses.
6. Complete the message as necessary.



Using Phone Menus

Text Options

While you are composing the text of a message you can insert customized text.



 





1. Create a new message.
2. Use  to highlight Message then press .
3. Press Right Soft Key  **Options**.
4. Select the option(s) to customize.

Insert Quick Text Inserts 9 predefined phrases.

Save Quick Text Allows you to define phrases to insert as Insert Quick Text.


5. Complete and send or save the message.

Message Icon Reference

	Sent : Messages sent in Short Message Center(SMC) have been transmitted.
	Fail : Indicates a failed message transmission.
	Lock : Indicates that messages are locked.
	Multi-sending : Indicates more than one designated recipient.
	Pending : Transmission is unavailable in a no service area or in an analog service area. Messages are pending transmission. Pending messages are transmitted automatically when digital mode becomes available.
	Read : Indicates a read message.
	Unread : Indicates an unread message.
	Draft : Indicates a draft message.

2.2 Inbox

The phone alerts you in 3 ways when you receive a new message by:

- Displaying a message notification on the screen.
- Sounding a beep, vibrating or sound, if set.
- Displaying the message icon . It blinks when the message is urgent.




 



Received text messages may be searched and the contents viewed. Received messages are displayed from newest to oldest.

Out of Memory Warning

If the memory is full, no more messages can be received until enough memory space becomes available. The message NOT ENOUGH MEMORY is displayed and new messages are not accepted.

Viewing Your Inbox

Up to 50 received messages can be stored in the Inbox.





1. Press , , , .
2. Use  to highlight an Inbox message.
 - Left Soft Key  **Reply**.
 - Right Soft Key  **Options**.

Erase

Deletes the selected message from the Inbox.

Lock/Unlock

Locks a message so that it is not erased if the Erase Inbox or Erase All feature are used.

3. Use  to highlight an Inbox message, then press .
4. While viewing the selected message, press Left Soft Key  **Reply** or Right Soft Key  **Options**.

Options from here:

Reply w Copy

Replies to the SMS with the original message attached.

Forward

Forwards a received message to other destination address(es).

Erase

Deletes the selected message from the Inbox.

Load URL

Access to the URL of the Message.

Save Address

Stores the callback number, e-mail address, and numbers in user data included in the received message into your Contacts.

Save Quick Text

Saves the message into the Quick Text list.

Save Message

Saves Inbox message into the Saved Folder.



Using Phone Menus

Lock/Unlock






Locks or unlocks the selected message. Locked messages can not be deleted by the Erase Inbox or Erase All functions.



PTT Alert

Makes a PTT call to the number in user data included in the received message.

2.3 Outbox/Sent

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.





1. Press , , , .
2. Use  to highlight an Outbox message.

- Press Left Soft Key  **Resend**.
- Press Right Soft Key  **Options**.

Erase

Deletes the selected message from the Outbox.

Lock/Unlock Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used.

3. Use  to highlight an Outbox message, then press .
- While viewing the selected Outbox message, press Left Soft Key  **Send to** or press Right Soft Key  **Options**.

Erase

Load URL

Save Address

Deletes the selected message.
Access to the URL of the Message.
Stores the callback number, e-mail address, and numbers in user data included in the received message into your Contacts.

Save Quick Text

Saves the message into the Quick Text list.

Save Message

Saves Outbox message into the Saved Folder.

Lock/Unlock









Locks or unlocks the selected message. Locked messages can not be deleted by the Erase Outbox and Erase All functions.

Message Info

Shows the message type priority and status.








2.4 Templates

Allows you save your templates messages in your Templates folder.

1. Press , , , .
2. Create new message selecting Create New or select your saved message using  and Press Left Soft Key  **Edit** or Press Right Soft key  **Options**.
 - **Send / Erase / Erase all**
3. Press  to view the message.

2.5 Drafts

Displays draft messages.




 





1. Press , , , .
2. Select a message with  and Press Left Soft Key  **Resume** or Press Right Soft key  **Options**.

Erase Deletes the selected message.

Lock/Unlock Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

2.6 Saved

Displays saved messages.






1. Press , , , .
2. Use  to highlight a Saved message.
 - If the message is saved from Outbox, press Left Soft Key  **Resend**. If the message is saved from Inbox, press Left Soft Key  **Reply**.
 - If the message is saved from Send New, press Left Soft Key  **Resume**.
 - Press Right Soft Key  **Options**.

Erase Deletes the selected message.

Lock/Unlock Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

2.7 Erase Messages

This allows you to erase all text messages stored in your Inbox, Outbox, Drafts, Saved or Templates folders. You can also erase all messages stored in these folders at the same time.

1. Press , , , .
- Press  **Inbox** to erase all messages stored in the Inbox.



Using Phone Menus

- Press **[2 abc]** **Outbox** to erase all messages stored in the Outbox.
- Press **[3 def]** **Drafts** to erase all messages stored in the Draft.
- Press **[4 ghi]** **Saved** to erase all messages stored in the Saved Items folder.
- Press **[5 jkl]** **Templates** to erase all messages stored in the Templates Items folder.
- Press **[6 mno]** **All Messages** to erase all messages stored in the Inbox, Outbox, Drafts, Saved, and Templates Items folder.

Erase all / Cancel

2.8 Settings

Allows you to configure 5 settings for received messages.

1. Press **[Message Icon]**, **[3 def]**, **[2 abc]**, **[8 tuv]**.
2. Use **[Up/Down Arrow]** to highlight one of the settings and press **[Enter]** to select it.

Save to Outbox Auto Save / Prompt / Do Not Save

Auto Delete Inbox On / Off

Callback # Edit Callback #

Quick Text

How are you? / Hi there! / Thanks! / I'll call you later. / On my way. / Busy right now. / Call me. / Running late, Will be there soon. / Where are you?

Default Entry Mode T9Word / Alpha / Number

Message Settings Sub-Menu Descriptions

1. Save to Outbox

Allows you to automatically save sent messages in your Outbox. You can choose Auto Save, Prompt, or Do Not Save.

2. Auto Delete Inbox

With this feature on, read messages(except locked messages) are automatically deleted when you exceed the storage limit.

3. Callback

Allows you to automatically send a designated callback number when you send a message. Allows you to manually enter the number.

4. Quick Text

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

5. Default Entry Mode

Allows you to select the default input method.

3. Web Alerts

Web Msg are special links or message provided from the carrier to inform you of special offers, bulletins and announcements.

1. Press  ,  ,  .

Web Msg notifies the user with 4 kinds of alert.

The Alert type is determined by its priority.

4. e-mail

Allows you send an E-mail.

1. Press  ,  ,  .

5. IM & Chat

Allows you to send and receive instant messages at any time.

Allows you to chat with internet messenger users.

1. Press  ,  ,  .




Using Phone Menus



Do More

Your phone's Do More menu lets you access some of the extra features built into your phone. Your phone permits you to store up to 2MB of memory. Each item is also limited by size according to their content-type when you download.

Quick Access to Do More

Pressing  from stand by mode is a hot key for Do More.

To access to Wireless Web menu :

1. Press Left Soft Key  **Menu**, , .

To access to Sounds menu :

1. Press Left Soft Key  **Menu**, , .

To access to Wallpaper menu :

1. Press Left Soft Key  **Menu**, , .

To access to Games menu :

1. Press Left Soft Key  **Menu**, , .

To access to Tools menu :

1. Press Left Soft Key  **Menu**, , .

Get New

1. From Tools menu, select Get New to get new tools.

Calculator



 



Allows you to perform simple mathematical calculations. You can enter numbers up to the second decimal place.











1. From Tools menu, select **Calculator**.

NOTE Calculations can be made with up to 2 lines at one time.

Alarm Clock











Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, **Alarm 1** (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.



1. Press Left Soft Key  **Menu**, , .
2. Use  to select **Alarm Clock** then press .
3. Select the alarm you want to edit and press .
[1] **Alarm 1** / [2] **Alarm 2** / [3] **Alarm 3** / [4] **Quick Alarm**

- Use  to select On / Off then press .
- Press , set the time for alarm and press .
- Press  to select one of the following:
Once / Daily / Mon - Fri / Weekends
- Use  to highlight Ring (ring type setting), press , and select your desired ring using .
- Press .
- Left Soft Key  Save.

Schedule

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.







- Press Left Soft Key  Menu, , .
- Use  to select Schedule then press .
- Use  to highlight the scheduled day.
 -  Moves cursor to the left.
 -  Moves cursor to the right.
 -  Moves to the previous week.
 -  Moves to the next week.

- Press Left Soft Key  **Add**.
- Enter your schedule information including:
 - Date
 - Time
 - Contents
 - Voice
 - Recurring event
 - When to ring the alarm reminder
 - Which ring alarm to sound
- Press Left Soft Key  Save.

NOTE Scheduler will not alert you during a call or during SMS transmitting. It will sound the reminder after you exit a call.

Notepad

Allows you to read, add, edit, and erase notes to yourself.

- Press Left Soft Key  Menu, , .
- Use  to select **Notepad** then press .
- Press Left Soft Key  add to write a new note.



Using Phone Menus

EZ Tips Calc

Allows you to calculate a tip based on several user defined variables.

1. Press Left Soft Key Menu, , .
2. Use to select **EZ Tips Calc** then press .

World Clock

Useful if you need to make a call to another country and you are not sure about the time difference.

1. Press Left Soft Key Menu, , .
2. Use to select **World Clock** then press .

Voice Memo

Allows you to listen to, add, and erase short verbal reminders.

1. Press Left Soft Key Menu, , .
2. Use to select **Voice Memo** then press .
3. Press Left Soft Key **New** to record a **new Voice Memo**.
4. Select the Voice Memo you want then press Right Soft Key **Options**.

Edit Title Edits the title of the Voice Memo.

Memory Info Shows the memory info used and left.

Set As Set the Voice Memo as a Ring
Tone(Contacts/Caller ID/No Caller ID/Restrict).

Erase Delete the selected Voice Memo.

Erase All Delete all of the Voice Memos.

To access to Favourites menu :

1. Press Left Soft Key Menu, , .

6.1 Shortcode List

Shows you the Shortcode List.

6.2 Text Message

Allows you to save your templates messages in your Templates folder.

6.3 Web Links

Allows you to bookmark many individual web pages.



Instant Talk

Instant Talk allows you to make a barge call or send an Alert message. The receiving party does not have the option to ignore the call. When an Alert message is sent to the receiving party, the receiving party has the option to place a PTT call or ignore the alert.

Access and Options


1. Press Left Soft Key  **Menu**.
2. Press  **Speed Talk**.



1. PTT Contacts
2. New PTT Contact
3. New Talk Group
4. Settings

NOTE PTT button is the button on top of the phone.



Call from PTT Contact List (Barge)

1. From Idle Screen, press PTT button to access your PTT Contact List.
2. Use  to highlight the PTT Contact entry you wish to call.
3. Press and hold PTT button.
 - Sender hears PTT talk tone and can begin speaking.
4. Release PTT button.
 - Receiver hears incoming barge tone.
 - Receiver hears sender's voice followed by the floor available tone.
 - Sender's device displays connected screen.
5. Press and hold PTT button to speak.
6. Release PTT button to listen.



Using Phone Menus


Call from PTT Contact List (Alert)

1. From Idle Screen press PTT button to access your PTT Contact List.
2. Use  to highlight the PTT Contact entry you wish to alert.
3. Press Left Soft Key  **Alert**.
Press and release PTT button to send alert.
 - Receiver hears alerting tone and receives alert message.
4. If receiver accepts the alert and places a PTT call to the sender,
 - Sender hears receiver's voice followed by the floor available tone.
 - Receiver's device displays connected screen.
5. Press and hold PTT button and speak.
6. Release PTT button to listen.

NOTE When someone else sends you a PTT Alert, a Buddy Alert Message appears. You can select either **Answer** or **ignore**. When you select **Answer**, 'Press and Hold PTT button to talk' message appears. You can place a PTT call to the sender by pressing the PTT button.

Call from PTT Contact List (Group)

Allows you to make a multiparty call with all members of a PTT Group.

1. Press PTT button to access PTT Contact list.
2. Use  to highlight the PTT group.
3. To make a PTT Group call to all members in the Group,
 - Press and hold PTT button
4. Release PTT button.
 - All members of Group hear incoming barge tone.
 - All members of Group hear sender's voice followed by the floor available tone.
 - Sender's device displays connected screen.

Call from Keypad (Barge)

1. From Idle Screen, enter the number.
2. Press PTT button.
 - If the phone number is in the PTT contact list, screen shows the Contact name.
 - Sender hears PTT talk tone and can begin speaking.

3. Release PTT button.

- Receiver hears incoming barge tone.
- Receiver hears sender's voice followed by the floor available tone.
- Sender's device displays connected screen.

Incoming PTT (Barge)

1. Listening screen is shown with the phone number. If the number is stored in PTT Contact List, the sender's name is shown.
2. Press and hold PTT button.
 - Sender Hears PTT talk tone and can begin speaking.
3. Release PTT button.
 - Receiver hears callers voice followed by the floor available tone.
 - Sender's device displays connected screen.

Incoming PTT (Alert)

1. Buddy Alert Message appears.
2. Select Answer or Ignore.
3. If Answer is selected, 'Press and Hold PTT button to talk' is shown.
4. Press and hold PTT button to place a PTT call.
 - Sender Hears PTT talk tone and can begin speaking.
5. Release PTT button.
 - Receiver hears callers voice followed by the floor available tone.
 - Sender's device displays connected screen.

Incoming PTT (Group)

 
1. One person can speak at a time.
2. If floor control released, press and hold PTT button, speak after the talk tone is heard.

NOTE During a voice call, PTT call cannot be received and vice versa.








Using Phone Menus

Making a PTT call when the folder is closed

When the folder is closed, you can place a PTT call by pressing the PTT button. Your Recent PTT Call history will come up on the outer LCD screen. You may scroll through the list using the side rocker keys. To place a call, highlight a number then press the PTT button. When the call is connected, you will see  icon in the status bar of your outer LCD screen.

1. PTT Contacts

Allows you to view your PTT Contacts list. PTT Contacts consists of individual and Group. For a individual, a single phone number is saved. For a Group, multiple individuals can be saved. A individual can be saved in multiple PTT Groups.






1. Press , , .
2. Press  to scroll through your PTT Contacts alphabetically.
3. Press Right Soft Key  **Options** to select one of the following:

Find Name / Find Number / Find Group / New Contact /

New Group / Erase / Copy to Contacts (It shows only when the highlighted entry is individual.)






2. New PTT Contact

Allows you to add a new individual to PTT Contacts.

1. Press , , .
2. Enter the number, then press .
3. Enter the name, then press .
4. Connect to server and update Contact information.
A confirmation message is displayed briefly.

3. New Talk Group

Allows you to add a new PTT group.




1. Press , , .
2. Enter the PTT Group name, then press .
3. Press Left Softkey  to save.
4. Connect to server and update Contact information.
A confirmation message is displayed briefly.

4. Settings

Allows you to adjust your PTT settings.




4.1 Instant Talk On/Off

Allows you to set your PTT availability.

1. Press , **5 jkl**, **4 ghi**, **1 .**
2. Set **On** / **Off** with  then press .




4.2 Speaker On/Off

Allows you to set PTT speaker On/Off.

1. Press , **5 jkl**, **4 ghi**, **2 abc**.
2. Set **On** / **Off** with  then press .

4.3 Presence On/Off

Allow you to show the presence information on PTT contact list.

1. Press , **5 jkl**, **4 ghi**, **3 def**.
2. Set **On** / **Off** with  then press .



Using Phone Menus



Settings

The Settings menu has options to customize your phone.

Access and Options

1. Press Left Soft Key **Menu**.
2. Press **Settings**.
3. Select a sub-menu.



1. Sounds
2. Display
3. Games/Tools
4. Setup



5. Voice Dial
6. Advanced
7. Airplane Mode
8. Icon Glossary

1. Sounds

Options to customize the phone's sounds.

1.1 Ringers

Allows you to assign ring tones for incoming calls.

1. Press , , , .
2. Press **Voice Calls**

Select **Caller ID / No Caller ID / Restricted Calls**.

3. Press **Messages**

Select **Voice Mail / Text Messages / 2-Min Reminder**.

4. Use to select a ringer, then press to save the sound.

1.2 DTMF Length

Allows you to set the Key tone length and touch tone playback speed.

1. Press , , , .
2. Select an option, then press .







Normal Sends out a tone for a fixed period of time even if you keep the key pressed.

Long Sends out a continuous tone for as long as you keep the key pressed.

NOTE Dual-Tone Multi Frequency (DTMF) Signaling by the simultaneous transmission of two tones, one from a group of low frequencies and another from a group of high frequencies. Each group of frequencies consists of four frequencies. Setting the Key Beep length to Long will extend the DTMF tone.





1.3 Volume

Allows you to set various volume settings.

1. Press , , , .
2. Select **Ringer / Earpiece / Key Tones / Power On/Off / Speaker**.
3. Use  to adjust the volume of the ringer, then press .

1.4 Alerts

Allows you to set any of the 4 Alerts options to On or Off.

1. Press , , , .
2. Select an alert option.

1.4.1 Service Change

Alerts you when service changes. Displays Entering Service Area or Leaving Service Area message.

1.4.2 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

1.4.3 Call Connect

Alerts you when the call is connected.

1.4.4 Lost Connection

Alerts you when the call lost connection.

3. Use  to set **On** or **Off**, then press .



Using Phone Menus

2. Display

Options to customize the phone's display screen.

2.1 Banner

Allows you to enter a string of up to 16 characters which display on the LCD screen.

1. Press , , , .
2. Enter your banner text, then press .

2.2 Backlight

Allows you to set the duration for illuminating the backlight. LCD and Key Light Timer are set separately.

NOTE If an amount of time is set for the timer option, the time starts after the last key was pressed.

2.2.1 Main Display

1. Press , , , , .
2. Choose a sub-menu, then press .
 Timer / Brightness

2.2.2 Keypad

1. Press , , , , .
2. Choose a setting, then press .

2.3 Wallpaper

Allows you to assign ring tones for incoming calls.

1. Press , , , .
2. Press **Wallpaper**
3. Select from different images, then press .
4. Press Left Soft Key **Save**.





NOTE Press Right Soft Key More for more image choices.

- 1.Default 2.Downloaded 3.Image Clips
2. Press **Image Clips**
3. Use to select the image, then press Right Soft Key **Set As**

Contacts / Wallpaper / Power On / Power Off



2.4 Contrast

Allows you to set the level of contrast for your LCD screen.

1. Press , **6** mno, **2** abc, **4** ghi.
2. Choose a Contrast sub-menu and press .
 - 1** . **Main LCD** / **2** abc **Front LCD**
3. Use  to adjust the contrast level, then press .



2.5 Menu Style

Allows you to view the Menu as an Icon or List display.

1. Press , **6** mno, **2** abc, **5** jkl.
2. Select **Icon** or **List** and press .



2.6 Theme Colour

Allows you to choose the colour of the background screen.

1. Press , **6** mno, **2** abc, **6** mno.
2. Select **Default** / **Theme 1** / **Theme 2**, then press .

2.7 Time




Allows you to choose the kind of time to be displayed on the LCD screen.

1. Press , **6** mno, **2** abc, **7** pqrs.
2. Select **Digital 1** / **Digital 2** / **Analog** then press .

2.8 Fonts

Allows you to set the size and colour of the font for calling digits and text editor.




2.8.1 Calling Digits

1. Press , **6** mno, **2** abc, **8** tuv, **1** ..
2. Select **1** . **Size** or **2** abc **Colour**.
3. Press  to choose a setting, then press  to save.

Size : Normal / Large

Colour : Black / Blue / Red / Green / Pink

2.8.2 Text Editor

1. Press , **6** mno, **2** abc, **8** tuv, **2** abc.
2. Select **1** . **Size** or **2** abc **Colour**.
3. Press  to choose a setting, then press  to save.

Size : Normal / Large

Colour : Black / Blue / Red / Green / Pink



Using Phone Menus

2.9 Power Saver

Display and buttons are lighted for a designated length of time, allowing you the convenience to use your mobile phone in the dark.

1. Press , , , .
2. Use to select **30 sec / 60 sec / 120 sec / Off**, then press .

3. Games/Tools

Your phone tools include a Backlight, a Volume, Notification and Memory Status.

3.1 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press , , , .

- 8 Seconds
- 15 Seconds
- Always On
- Always Off means that the backlight is never on.

3.2 Volume

1. Press , , , .
2. Select **High / High Med / Med / Med Low / Low / Off** then press .
3. Adjust the volume with then press to save the setting.

3.3 Notification

1. Press , , , .
2. Select **Voice Mail / Text Message** then press .
3. Set **On / Off** with then press .


3.4 Memory Status







1. Press , , , .

4. Setup

The Setup menu allows you to designate how the phone handles both incoming and outgoing calls.

4.1 Shortcut

Assign a shortcut to your favorite and most frequently used function. Select it from the list, and then access it directly by pressing  in standby mode.

1. Press , , , .
2. Press  to select OK.
3. Select a menu and press .

Left Navigation Key / Right Navigation Key



4.2 Call Setup

The Call Setup menu allows you to designate how the phone handles both incoming and outgoing calls.

4.2.1 Call Answer

Allows you to determine how to handle an answered call.





 


1. Press , , , , .

2. Use  to select a setting, then press .

Send Key / Any Key / Flip Open

4.2.2 Auto-Answer




 
 


This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device. This feature works when the flip is opened.

1. Press , , , , .
2. Use  to select a setting, then press .

On / Off

4.2.3 Auto-Prepend

Allows you to add Dial 1+Number to Options in recent calls list. If you choose Dial 1+Number in recent calls list, Terminal displays dialing screen and shows 1+Number on the screen regardless of calling digits condition.

1. Press , , , , .
2. Use  to select a setting, then press .

On / Off



Using Phone Menus

4.2.4 Auto-Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press , **6** mno , **4** ghi , **2** abc , **4** ghi .
2. Use to select a setting, then press .
Off / Every 10 sec / Every 30 sec / Every 60 sec

4.2.5 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press , **6** mno , **4** ghi , **2** abc , **5** jkl .
2. Use to select a setting, then press .
Enhanced / Standard

4.2.6 Auto-Volume

Provides a better audio experience by enabling the Auto Volume feature to control the dynamic range and volume of the sending and receiving voice across different levels of speaker and environments.

1. Press , **6** mno , **4** ghi , **2** abc , **6** mno .
2. Use to select a setting, then press .
On / Off

4.2.7 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Disable, Speed Dial numbers designated in your Contacts will not function.

1. Press , **6** mno , **4** ghi , **2** abc , **7** pqrs .
2. Use to select a setting, then press .
Enable / Disable

4.3 Language





Allows you to set the bilingual feature according to your preference. Choose between English and French.

1. Press , **6** mno , **4** ghi , **3** def ,
2. Use to select **English** or **French**, then press .

4.4 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

* TTY : Text Telephone. (or Teletypewriter for Deaf).

1. Press , **6** mn, **4** gh, **4** gh.
2. Press .
3. Use  to select a setting, then press .




TTY Full / TTY + Talk / TTY + Hear / TTY Off

4.5 Data Setup

This menu allows you to use wireless data communication services. Wireless data communication services refers to the utilization of subscriber terminals for access to the internet with personal computers or laptops at 19.2 Kbps or at a maximum of 230.4 Kbps. The connection speed depends on your carrier's network and other variables. Check that communications information specifications match the network.

4.5.1 Data/Fax

Allows you to use your phone to transmit data and faxes.




1. Press , **6** mn, **4** gh, **5** jl, **1** ..
2. Use  to select a setting, then press .

Off / Fax In Once / Fax In Always / Data In Once / Data In Always

NOTE The Data Connection Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere.

4.5.2 PC Connection

Allows you to select the data port.

1. Press , **6** mn, **4** gh, **5** jl, **2** abc.
2. Use  to select a setting, then press .

USB / RS-232C / Closed

NOTE When using the 1X HSPD data service via an RS-232C data cable, the port speed is set to 115,200 (230,400 is not supported). When using the 1X HSPD data service via a USB data cable, you may get better port speed if the port speed is set to 230,400 rather than 115,200.



Using Phone Menus

5. Voice Dial

The Voice Services menu provides access to the voice services available with your phone.

5.1 Voice Dial Prompt

Allows you to set the command to enable voice dialing.

1. Press , , , .
2. Select **Key press** / **Flip Open** / **Disable** then press .

5.2 Train Words

Allows you to help your phone distinguish your voice when using voice commands. During the voice recognition process, if you cannot clearly recognize the words Yes or No, you can record your own voice with this feature.

1. Press , , , .
2. Select **Yes** / **No** then press .
4. Select **Train** or **Un-train** then press .

6. Advanced

Provides you with specific information pertaining to your phone model.

6.1 Phone Info

Allows you to view the specific information pertaining to your phone model.

1. Press , , , .

6.2 System

The System menu allows you to designate specific system network settings.

6.2.1 Set Mode




 


Allows you to set up the phone producer's management environment. Leave the default setting unless you want to alter the system selection as instructed by your service provider.

1. Press , , , , .
2. Use to select a setting, then press .

Digital Only / **Analog Only** / **Automatic** / **Home Only**




 
 

6.2.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Select **NAM 1 / NAM 2** then press .

6.2.3 Call Guard

Call Guard alerts you when roaming charges apply.







1. Press , , , , .
2. Select **On / Off** and press .

6.3 Security

The Security menu allows you to secure the phone electronically.

6.3.1 Lock Phone







Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the Change Lock within the Security menu.

1. Press , , , .
2. Enter the four-digit lock code.
The lock code is commonly the last 4 digits of your phone number.
3. Press  **Lock Phone**.
4. Select an option then press .

Unlock	The phone is never locked (Lock mode can be used).
Lock	The phone is always locked. When locked, you can receive incoming calls or make only emergency calls.
On Power Up	The phone is locked when it is turned on.

6.3.2 Restrict Calls

Allows you to restrict outgoing calls. If you set this feature to On, you can only place calls to emergency numbers. You can still receive calls in restrict mode.




 

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Restrict Calls**.
3. Select **On / Off** and press .



Using Phone Menus




 



6.3.3 Change Lock

Allows you to enter a new four-digit lock code.

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Change Lock**.
4. For confirmation, it will ask you to enter the new lock code again.






6.3.4 Reset Defaults

Allows you to reset your phone to the factory default settings.

1. Press , , , .
2. Enter the four-digit lock code.
3. Press  **Reset Defaults**.
4. Press , select **Revert / Cancel** then press .

7. Airplane Mode

Turning Airplane Mode ON will prevent any outgoing and incoming calls as well as any online access.

1. Press , , .
2. Press  to select OK.
3. Select **On / Off** then press .

8. Icon Glossary

Allows you to view all the icons and their meanings.

1. Press , , .

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians

from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.



Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.



Violation of the instructions may cause minor or serious damage to the product.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.

- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin),

metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight

burn. Please contact an LG Authorized Service Center to replace the damaged antenna.

- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it in your ear.



FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than

those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user's head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.



4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the

studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone

users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.



8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones



for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones

(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program

(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection Board (UK)

(<http://www.nrp.org.uk/>)

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested

frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.



Safety

The highest SAR value for this model phone when tested for use at the ear is 1.21 W/kg and when worn on the body, as described in this user guide, is 1.28 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJWX4700. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability.



AC Adapter

The AC adapter allows you to power your phone.



Battery

Two batteries are available. The standard battery, and the extended battery.



Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle. It takes 5 hours to charge a completely discharged battery.



Hands-Free Car Kit (Portable)

The hands-free car kit enables you to attach the phone to the power jack in your car, providing you with hands-free operation. It can charge a completely discharged battery in 5 hours.



Headset

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer / termination button.



USB Cable

Connects your phone to your PC.



Holster



Warranty Information

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.

- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer Service Department at LG was not notified by the consumer during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.

- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including but not limited to any implied warranty of marketability merchantability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM U.S.A., INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING

OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623