# FOMA® P705iμ/PROSOLID μ

ISSUE DATE: OS.7
NAME:
PHONE NUMBER:
MAIL ADDRESS:

**INSTRUCTION MANUAL** 



Easy Search/Contents/Precautions

Before Using the Handset

Voice/Videophone Calls

Phonebook

Sound/Screen/Light Settings

Security Settings

Camera

i-mode/i-motion/i-Channel

Mail

i-αppli

Osaifu-Keitai/ToruCa

Full Browser/PC Movie

Data Display/Edit/Management

Music&Video Channel/Music Playback

**Other Convenient Functions** 

**Character Entry** 

**Network Services** 

PC Connection

Overseas Use

Appendix/External Devices Troubleshooting

Index/Quick Manual

# DoCoMo W-CDMA system

Thank you for selecting the "FOMA P705iµ/PROSOLID  $\mu$ ". Before or during use of the FOMA P705iµ/PROSOLID  $\mu$ , make sure that you read this manual and the separate manuals for other optional devices thoroughly so that you can use the FOMA P705iµ/PROSOLID  $\mu$  correctly. If you feel any inconvenience in reading the manual, contact the DoCoMo Information Center listed on the back page of this manual. The FOMA P705iµ/PROSOLID  $\mu$  is designed to be your close partner. Treat it carefully at all times to ensure long-term performance.

### Before using your FOMA phone

- Because the FOMA phones use radio waves, they cannot be used in places where radio waves do not reach, such as inside tunnels, underground, or in buildings; or the outside where radio waves are weak or out of the FOMA service area. They may not be used in the high-rise buildings even when the antennas are unobstructed. You may also experience interruption of calls even when using without moving while the radio waves are strong enough for the three antennas to appear on the display.
- Use the FOMA phone carefully to avoid disturbing other people when in public, or in crowded or quiet places.
- Since the FOMA phones use radio waves as the medium of telecommunication, calls may be tapped by the third party. However, the W-CDMA system automatically supports tapping prevention, so your conversation will be incomprehensible to the third party.
- •The FOMA phones change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice may sound different from the actual original voice.
- ●The user hereby agrees that the user shall be solely responsible for the result of the use of SSL. Neither DoCoMo nor the certifiers as listed herein make any representation and warranty as for the security in the use of SSL. In the event that the user shall sustain damage or loss due to the use of SSL, neither DoCoMo nor the certifiers shall be responsible for any such damage or loss.

Certifiers: VeriSign Japan K.K., Cybertrust, Inc., GlobalSign K.K., RSA Security Inc., and SECOM Trust Systems Co., Ltd.

- ●This FOMA phone supports FOMA Plus-Area and FOMA High-Speed Area.
- The FOMA terminal can be used only via the FOMA network provided by DoCoMo and in DoCoMo's roaming area.

- It is recommended that you make separate notes of the information (such as Phonebook entries, schedule events, text memos, record messages, voice memos, movie memos) stored in the FOMA phone and keep them in a safe place. Note that we cannot be held responsible for the unlikely event of loss of the stored contents due to a malfunction, repair, change of your model, or other mishandling of the FOMA phone.
- ●You are advised to save your important data files to the microSD memory card. If you have a personal computer, you can transfer and save the information such as Phonebook entries, mail messages, schedule events, and others to the personal computer by using DoCoMo keitai datalink.

### For Using This Manual

This FOMA phone supports Kisekae Tool (page 107). If you use Kisekae Tool to change the design of the Menu display, some menu configurations change according to the usage frequency depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply. In that case, you cannot operate as described in this manual, so you are advised to switch to the basic structure menu (page 108), or reset menu settings (page 108).

You can download the latest information about this manual from the following DoCoMo web site:

- ·User's Manual (PDF file) Download
  - (http://www.nttdocomo.co.jp/english/support/manual/index.html)
- \*\*The URL and the content of the web site might be modified without notice.

# How to Read/Refer to This Manual

In this manual, illustrations and symbols are used in the explanations so that you can easily understand how to use the FOMA phone correctly.

- The operating procedures and displays in this manual are described with the default settings of the "SILVER" handset. However, the following settings are changed.
- · "Menu icon setting": TGB-menu03
- · "Color theme setting": Yellow
- · "Display setting" → "Stand-by display": OFF
- · "Display setting" → "Clock" → "Position": Pattern 2

In this manual, the contents are described with "Character size" set to "Standard". With PROSOLID  $\mu$ , the default of "Character size" is "Large" or "Extra large", so switch the setting to "Standard" to have the same displays with this manual.

- Unless otherwise specified, the descriptions of the operating procedures in this manual start from the Stand-by display.
- Operations are described in the method of "Scroll Selection" (see page 32).
- Displays and illustrations described in this manual are for reference. The actual ones might differ.
- In this manual, "Osaifu-Keitai compatible i-oppli which supports the IC card function" is described as "Osaifu-Keitai compatible i-αppli".
- Note that "FOMA P705i μ/PROSOLID μ" is referred to as "FOMA phone" in this manual.
- In the operating procedures of this manual, key operations are described with simplified key icons.
- The functions which use a microSD memory card are described in this manual; however, you need to obtain a microSD memory card separately to make these functions available. See page 294 for the microSD memory card.

### For Users Who Use PROSOLID $\mu$

Unless otherwise specified, this manual essentially describes the operations and displays of the P705i  $\mu$ . When you read this manual to operate PROSOLID  $\mu$  (P705iCL), keep the following in mind.

■ Functions not available on PROSOLID µ

You cannot use the camera function and its related functions. (Shooting still images/moving images, Bar Code Reader, Text Reader, etc.)

■ PRO u mark used in this manual

With this mark, the supplemental descriptions are given to text where operations or displays differ from those of P705i  $\mu$ .

### How to Refer to This Manual

By the following search methods, you can find pages where your desired functions and services are described:

### From the Index

Search from the index when you know the names of functions or services.

# From Easy Search

Search from keywords for the functions you frequently use or the functions that are convenient if you can know any.

### From the Tabs on the Cover

Search from the tabs printed on the cover.

See the next page for details.

### From the Contents



Search from the contents that categorize functions.

### From the Main Functions >> P.8



Search from here to use the main functions.

## From the Function List >> P.412

Search from the function list

### From Quick Manual


P.478


Quick Manual gives you a clear, brief description about basic functions. You can take it when you go out. Further, Quick Manual "For Overseas Use" is attached, so refer to it when you use the FOMA phone overseas.

It is prohibited to copy all or part of this manual without permission.

The instructions contained in this manual may be changed without notice.

How to search for "Alarm" is explained here as an example of search method.

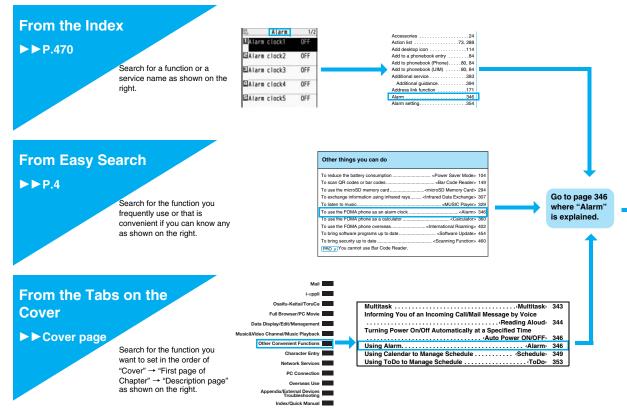

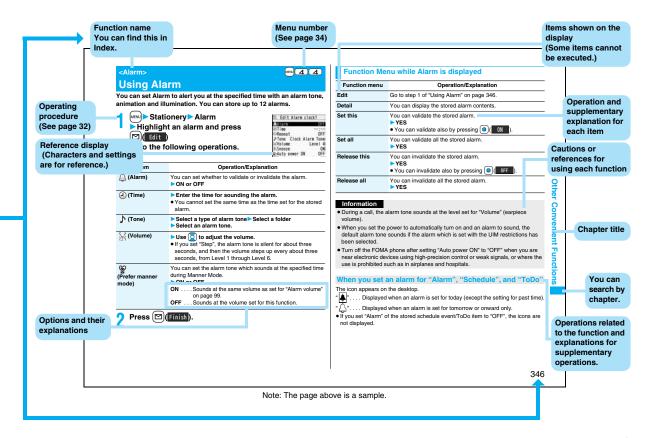

# **Easy Search**

To retrieve the operation for the desired function with simple words, refer to the following:

### To know convenient functions for making calls

To/Not to notify your phone number to the other party < Caller ID Notification>	46
To switch to a videophone call during a voice call <switch call="" to="" videophone=""></switch>	53
To change a volume level of the other party's voice<	66
To put a call on hold during a call	67

# To do the following when you cannot answer calls

To put an incoming call on hold before answering	67
To convey the message that you need to	
refrain from talking on the phone <public (drive="" mode="" mode)=""></public>	68
<public (power="" mode="" off)=""></public>	69
To record voice/video messages< Record Message Setting>	70

### To change melody or illumination

To adjust the ring volume <ring volume=""></ring>	67
To change ring tones according to callers <ahdd phonebook="" to=""></ahdd>	80
To change ring tones <select ring="" tone=""></select>	94
To know incoming calls by vibrator	96
To silence the keypad sound<	97
To activate Manner Mode <marked></marked>	98
To change colors/lighting patterns of Call indicator for incoming calls	
<lllumination></lllumination>	109

# To change/know display settings

To know the meaning of marks (icons) on the display	
<display></display>	29
To change the menu display <simple menu=""></simple>	36
To change the Stand-by display (Wallpaper) <pre>cbisplay Setting&gt;</pre>	101
To display a calendar on the Stand-by display<	101
To change the character size	115

### To make full use of mail

To send Deco-mail <deco-mail></deco-mail>	186
To send images <attachments></attachments>	191
To sort and save mail automatically <auto-sort></auto-sort>	210

### To make full use of camera

PRO µ Not available To save to the microSD memory card ......< Storage Setting (Store In)> 146 To display shot images......<Picture Viewer> 273

# To use the FOMA phone with a sense of security

To lock the FOMA phone from away when it gets lost < Omakase Lock>**1	
To keep Phonebook entries from prying eyes <secret mode=""></secret>	127
To reject calls without a caller ID<	
To reject calls from the phone numbers not	
in the Phonebook <reject unknown=""></reject>	130
To separately store Phonebook and other data	
files in preparation for their erasure CData Security Service>*2	131

<sup>\*1</sup> This is a pay service.

# Other things you can do

To reduce the battery consumption <power mode="" saver=""> 10</power>	14
To scan QR codes or bar codes Sar Code Reader> 14	9
To use the microSD memory card <microsd card="" memory=""> 29</microsd>	4
To exchange information using infrared rays	7
To listen to music <music> MUSIC Player&gt; 32</music>	9
To use the FOMA phone as an alarm clock <a href="#">Alarm</a> 34	6
To use the FOMA phone as a calculator<	0
To use the FOMA phone overseas </td <td>2</td>	2
To bring software programs up to date<	4
To bring security up to date<	0
PRO $\mu$ You cannot use Bar Code Reader.	

 The operating procedures for frequently used functions are summarized in Quick Manual. (See page 478)

<sup>\*2</sup> This is a pay service which is available on a subscription basis.

# Contents

How to Read/Refer to This Manual	·
Easy Search	4
Contents	6
Main Functions of FOMA P705i µ/	
PROSOLID #	8
Making Full Use of FOMA P705i $\mu$ /	
PROSOLID µ!	10

Safety Precautions	12
Notes on Handling	18
Intellectual Property Rights	21
Accessories and Main Options	24

Before Using the Handset 25	Phone Parts and Functions, Simple Menu, Guide, UIM (FOMA Card), Battery, Charging, Power ON/OFF, Select Language, Initial Setting, Caller ID Notification, etc.
Voice/Videophone Calls 49	Making a Call/Videophone Call, Chaku-moji, WORLD CALL, Hands-free, Receiving a Call/Videophone Call, Volume, Ring Volume, Public Mode (Drive Mode), Public Mode (Power Off), Record Message Setting, Chara-den, etc.
Phonebook 79	Available Phonebooks, Add to Phonebook (FOMA phone/UIM), Group Setting, Search Phonebook, No. of Phonebook, Two-touch Dial, Voice Dial, Data Security Service, etc.
Sound/Screen/ Light Settings 93	Select Ring Tone, Vibrator, Manner Mode, Display Setting, Backlight, Color Theme Setting, Menu Icon Setting, Kisekae Tool, Feel Settings, Illumination, Desktop Icon, Font, Character Size, etc.
Security Settings	Passwords, Releasing PIN Lock, Lock All, Omakase Lock, Self Mode, Personal Data Lock, Keypad Dial Lock, Secret Mode, Mail Security, Call Setting without ID, Reject Unknown, etc.

Camera 133	Before Using Cameras, Still Image Shoot, Moving Image Shoot, Settings for Shooting Images, Setting Image Size/Image Quality, Bar Code Reader, Text Reader
i-mode/i-motion/ i-Channel 155	What is i-mode?,   Menu, My Menu, Change i-mode Password, Enter URL, Bookmark, Screen Memo, Download,   -mode Settings, SSL Certificate, Client Certificate, What is i-motion?, What is i-Channel?, etc.
Mail 181	i-mode Mail, Deco-mail, Attachments, Mail Auto-receive, Receive Option, Check New Message, Inbox, Outbox, Draft, Message R/F, Emergency Alert "Area Mail", Chat Mail, SMS, Web Mail, etc.
i-⊲ppli 229	What is i-αppli?, i-αppli Download, i-αppli Run, β-αppli Settings, Starting i-αppli Automatically, i-αppli Stand-by Display, β-αppli(microSD)
Osaifu-Keitai/ ToruCa 245	What is Osaifu-Keitai?, What is iC Transfer Service?, Osaifu-Keitai Compatible i-αppli, What is ToruCa?, Obtain ToruCa Files, ToruCa File List/Detailed ToruCa File Display, ToruCa Settings, IC Card Lock

Full Browser/PC Movie 255	Full Browser, Full Browser Settings, What is PC Movie?, Downloading PC Movies, PC Movie Player	Network Services 375	Check New Messages, Voice Mail, Call Waiting, Call Forwarding, Nuisance Call Blocking, Caller ID Request, Dual Network, Service Numbers, Remote Control, Multi Number, 2in1, OFFICEED, etc.
Data Display/Edit/ Management 269	Data Box, Picture Viewer, i-motion Player, Chara-den, Melody Player, Kisekae Tool, microSD Memory Card, Infrared Data Exchange, iC Communication, PDF Viewer, Document Viewer, etc.	PC Connection 395	Available Data Communication, Before Using, Preparation Flow for Data Communication, AT Command, CD-ROM, DoCoMo Keitai Datalink
Music&Video Channel/Music Playback 319	What is Music&Video Channel?, Setting Programs, Playing Back/Operating Programs, Playing Back Music, Saving Music Files, MUSIC Player, Playlist	Overseas Use 401	Outline of International Roaming (WORLD WING), Available Services, Confirmation for Using, Making a Call from the Country You Stay, Receiving a Call, Set Roaming Guidance, Network Services, etc.
Other Convenient Functions 341	Multiaccess, Multitask, Reading Aloud, Alarm, Schedule, ToDo, Own Number, Voice Memo, Movie Memo, Voice Recorder, Call Data, Calculator, Text Memo, UIM Operation, Reset Settings, Initialize, etc.	Appendix/ External Devices/ Troubleshooting 411	Function List, Options and Related Equipment, Troubleshooting, Error Messages, Warranty and Maintenance Services, Software Update, Scanning Function, Specifications, Number of Savable/Storable/Protectable Items, SAR, Export Administration Regulations, etc.
Character Entry 365	Character Entry, Mode 1 (5-touch), Common Phrases, Cut/Copy/Paste, Own Dictionary, Download Dictionary, Mode 2 (2-touch), Mode 3 (NIKO-touch), etc.	Index/Quick Manual 469	Index, Quick Manual, Quick Manual "For Overseas Use"

# Main Functions of FOMA P705i $\mu$ / PROSOLID $\mu$

FOMA (Freedom Of Mobile multimedia Access) is the name of the DoCoMo service based on the W-CDMA format, authorized as one of the world's standards for third-generation mobile telecommunication systems (IMT-2000).

### Remarkable i-mode!

i-mode is an online service that enables you to get useful information from i-mode menu sites (programs) or i-mode web pages. This service also enables you to send or receive mail messages with ease.

### ◆i-mode mail/Deco-mail/Decomail-pictograph ▶ P.182, P.186, P.270

Besides mail text, you can attach up to 2 Mbytes of files or 10 files (JPEG, ToruCa, PDF, etc.) in total. The FOMA phone supports Deco-mail/Decomail-pictographs, so you can change the character color, character size, and background color of mail text, and insert images and moving pictographs.

### ◆Mega i-oppli ►► P.230

By downloading i-oppli programs from sites, you can enjoy playing games or have stock price information or weather forecasts updated automatically. As the large capacity mega i-oppli is supported, you can enjoy playing high-resolution 3D games and full-length role playing games.

### ♦ High-Speed Area Supported ▶ ▶ P.396

FOMA High-Speed Area is supported so that high speed communication is available with download speed of up to 3.6 Mbps and upload speed of up to 384 kbps.

### ♦International Roaming ▶▶P.402

You can use your FOMA phone, phone number, and mail address overseas as they are. (Supported in 3G area)

Voice calls, videophone calls, i-mode, i-mode mail, SMS, and network services are available.

### ◆Chaku-uta Full®/Uta-hodai/Music&Video Channel®/Video Clips ▶▶P.176, P.320, P.327, P.329

This FOMA phone supports Chaku-uta Full® that enables you to download a whole music file and Uta-hodai that enables you to enjoy listening music as much as you like at a flat rate.

This FOMA phone also supports Music&Video Channel that, just by setting up beforehand, automatically downloads music programs in the night. You can watch programs containing moving images on your P705i  $\mu$ /PROSOLID  $\mu$ . Further, this FOMA phone supports up to 10 Mbytes of i-motion movies, so it also supports Video Clip that enables you to eniov a whole music clip file.

• "Chaku-uta Full" is a registered trademark of Sony Music Entertainment Inc. \*\*This is a pay service which is available on a subscription basis.

### ◆Osaifu-Keitai/ToruCa ►► P.246, P.248

By downloading Osaifu-Keitai compatible i-αppli, you can replenish electronic money from a site into the IC card in the FOMA phone and check your account for the balance and usage details. In addition, the "DCMX" i-αppli program that provides the DoCoMo credit service is pre-installed. Further, "iC transfer service" is supported so that you can easily move data from the existing IC card to a new one when you replace your FOMA phone such as at the time of phone model change. ToruCa is an electronic card that you can obtain from scanning devices or sites and can easily exchange using mail or infrared data exchange.

### ◆Kisekae Tool ▶▶P.107, P.293

By downloading the displays of your favorite characters from an i-mode site, you can change the Stand-by display or Menu display at a time.

### ◆Image Stabilizer ►► P.146

You can shoot still images with less blur by the camera.

PRO μ Not available

### ◆Feel \* Talk/Feel \* Mail ▶ ▶ P.108

Animation of 45 characters and illumination reproduce the atmosphere of conversation or mail messages. Pleasant animation appears or illumination lights according to the contents of the conversation or new mail message.

### **♦WQVGA Display**

You can display still or moving images in the WQVGA (240 dots x 427 dots) display of approx. 3.0 inches.

Also, the light sensor automatically adjusts the backlight in accordance with the ambient brightness, and the LCD Al compensates the image quality in accordance with the brightness.

### ◆One-push Open ▶▶P.43

#### ■ One-push Answer ▶▶P.66

When a call comes in, just press the one-push open button, and you can open the FOMA phone to answer the call.

#### ■ Recv. Mail/Call at Open ▶▶P.104

When a missed call or new mail message is found, just press the one-push open button, and you can open the FOMA phone to display the detailed Missed Call display or the Inbox List.

### ♦View Blind ▶▶P.105

You can make the display hard to see from an angle. You can use the FOMA phone without being gazed at by others.

### **◆**Document Viewer ▶▶ P.316

On your FOMA phone, you can display Microsoft Word files, Microsoft Excel files, and Microsoft PowerPoint files created by personal computers.

### **♦Voice Recorder** ▶▶P.357

You can record your voice as a substitute for talking notes. You can repeatedly play it back, so it is convenient to record the proceedings at a meeting, etc.

### ◆Security Settings ▶▶P.119

Various settings such as the lock functions and security settings for "safety" are available.

#### ■ Omakase Lock ▶▶P.123

When you have lost the FOMA phone, you can lock the FOMA phone and release it by contacting DoCoMo.

For inquiries, see the back page of this manual.

Omakase Lock is a pay service\*.

- ※You are not charged if you apply for this service at the same time as applying for the suspension of the use or during the suspension.
- Note that Omakase Lock might be activated by an offer from the contractor of the FOMA phone when the contractor and the user of the FOMA phone differ.

### ■ Data Security Service ▶▶P.131

This service enables you to save Phonebook entries, images, and mail messages from your FOMA phone to the Data Storage Center, and restore the saved data, when you lost your FOMA phone or in other cases, to your FOMA phone from the Data Storage Center. Further, you can edit or manage data held at the Data Storage Center using your personal computer and can reflect the edited data to your FOMA phone.

For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version". For inquiries, see the back page of this manual.

Data Security Service is a pay service that is available on a subscription basis.

### ◆Network Services ▶▶P.375

- Voice Mail Service (Charged)
- A separate subscription is required.
  Call Forwarding Service (Free)
- · A separate subscription is required.
- Dual Network Service (Charged)
   A separate subscription is required.
- 2in1 (Charged)
  - · A separate subscription is required.

- Call Waiting Service (Charged)
   A separate subscription is required.
- Nuisance Call Blocking Service (Free)
  - · No subscription is required.
- Multi Number (Charged)
- A separate subscription is required.
- SMS (Free)
  - · No subscription is required.

# Making Full Use of FOMA P705i μ/ PROSOLID $\mu!$

### ♦Videophone ▶▶P.50

You can talk on the phone while viewing sending/receiving images. By default, the substitute image is displayed at the position of the sending image.

You can switch to the outward-facing camera to display the surrounding scenery.

PRO u You cannot switch to the image through your camera.

### **♦i-Channel** ▶ ▶ P.178

i-Channel distributes graphical information such as news or weather forecast. By selecting a channel you want to see from the Channel List, you can obtain detailed expressive information created by Flash (see page 158). • This is a pay service which is available on a subscription basis.

• The service is provided only in Japanese.









### ◆The Stand-by and Menu displays by TGB-design ▶▶P.101, P.106

The Stand-by Flash movies/Menu displays by TGB-design, the designer team that plays an active role in various fields, are pre-installed. Enjoy a new motion by the graphic design which smoothly shifts from the Stand-by display to the Menu display with the sense of unity. Each setting can be changed from "Stand-by display" of "Display setting" or "Menu icon setting".

### ■ Examples of the contents by TGB-design





Stand-by display

Mail Menu display

### ■ Recommended combination of "Stand-by display" and "Menu icon setting"

Stand-by display	Menu icon setting
TGB-flash01	TGB-menu01
TGB-flash02	TGB-menu02
TGB-flash03	TGB-menu03
TGB-flash04	TGB-menu04

Further, "TGB-interface" that can collectively set "Stand-by display", "Menu icon setting", and ring melodies is pre-installed in Kisekae Tool.

\*The contents by TGB-design such as ring tones and an i-motion movie are pre-installed as well.

### **♦MUSIC Player** ▶▶ P.329

On a single player, you can play back and enjoy Chaku-uta Full® music files. Windows Media® Audio (WMA) files, and SD-Audio files.

You can download Chaku-uta Full® music files from sites and may be able to display their images and lyrics while playing them back.


In the case of SD-Audio or WMA files, you can obtain your favorite music files from music CDs or Internet web pages and save them on the microSD memory card by using your personal computer.

You can save music files also by using the Napster® application program.

#### ◆2in1 ▶▶P.387

This service enables you to have two numbers/two mail addresses on your single FOMA phone and to use your FOMA phone as if you were using two sets, by using the dedicated mode function. You can sort Phonebook entries, mail boxes, dialed/received call records, and Stand-by displays into "A mode" and "B mode" to manage them separately. You can also use "Dual mode" to simultaneously manage both A and B modes.

• This is a pay service which is available on a subscription basis.

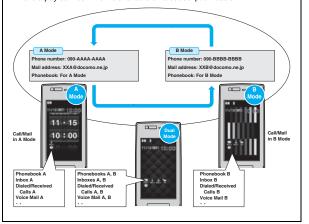

### ◆Chaku-moji ▶▶P.57

While calling up the other party, you can have your message displayed on his/her Call Receiving display. The receiving end can know your subject/feeling by reading the message before answering the call.

### ♦Pre-installed i-αppli ▶▶P.234

### ■ 七田式!記憶耳アプリ (Shichida Method! Memory Ear Application)

An epoch-making application program that enables you to train your right brain through hearing, which has been designed based on the ideas of Dr. Shichida.

Two modes, "トレーニング (Training)" and "耳パワー分析 (Hearing ability analysis)" are available, by which you can easily train your brain.



#### © SHICHIDA CHILD ACADEMY KANDOU SEIKATSU CLUB

### ■ 旺文社漢検アプリ for P (Obunsha Kanji Test Application for P)

Learn kanji as if you were playing a game. A study book of Obunsha that has achievement in Kanji Aptitude Test is concentrated in this application program.

%The pre-level 2 is installed.



© Obunsha Co., Ltd © MTI. Ltd

"漢字検定" and "漢検" are trademarks of Japan Kanji Aptitude Testing Foundation.

# Safety Precautions (Always follow the safety precautions.)

- Before using the FOMA phone, read these safety precautions carefully so that you can use it correctly.
  - After reading the precautions, keep them in a safe place.
- Be sure to observe these safety precautions because they are designed to protect you or those around you from causing injury and to avoid unnecessary damage to the property.
- The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed.



# Danger

This symbol indicates that incorrect handling will almost certainly cause death or serious injury.



# Warning

This symbol indicates that incorrect handling poses a risk of causing death or serious injury.



# Caution

This symbol indicates that incorrect handling poses a risk of causing injury or damage to the product or property.

■ The following symbols show specific directions:



Denotes things not to do. (Prohibition)



Denotes not to disassemble

disassemble



Denotes not to touch with wet hands.

hands



Denotes not to use where it could get wet or not to wet it.

Water

Do

Denotes mandatory instructions (matters that must be complied with).



Denotes to pull the power plug out of the outlet.

Pull the power plua out

■ "Safety Precautions" are divided into the following six sections:

General precautions for FOMA phone, batteries, adapters/chargers, and UIM......P.13 Precautions for FOMA phone......P.14 Precautions for UIM ......P.17 Notes on using near electronic medical equipment ......P.18

# General precautions for FOMA phone, batteries, adapters/ chargers, and UIM



# **Danger**



Do not use, store or leave the FOMA phone and its accessories in places with a high temperature such as near fire or places exposed to direct sunlight, or in cars under the blazing sun.

The devices could be deformed or malfunction, or the battery may leak, overheat, burst, or catch fire, thus resulting in the deterioration of performance and shortening of the life of devices. Also, part of the case could get heated, causing bare skin burns.



disassemble

# Do not disassemble, modify or solder the FOMA phone or accessories.

Accidents such as fire, injury, or electric shock, or malfunction may result. The battery may leak, overheat, burst or catch fire



Water

# Do not wet the FOMA phone or accessories.

If liquids such as water or pet urine get onto them, overheating, electric shock, fire, malfunction, injury or others may result. Pay attention to the place of use and the way of handling.



# Use only the batteries and adapters/chargers approved by DoCoMo for your FOMA phone.

If you use any type of battery, adapter or charger other than the specified one, your FOMA phone, battery or other accessories may leak, overheat, burst, catch fire or malfunction.

Battery Pack P17
FOMA AC Adapter 01/02
FOMA AC Adapter 01 for Global use FOMA DC Adapter 01/02
Desktop Holder P26
FOMA Dry Battery Adapter 01
FOMA USB Cable with Charger Function 01



shop.

# Warning

\*For other compatible products, contact

a handling counter such as a DoCoMo



Do not place the batteries, the FOMA phone, adapters/chargers, or UIM in cooking appliances such as microwave ovens or high-pressure containers.

The battery may leak, overheat, burst, or catch fire. The FOMA phone or the adapter/charger may overheat, smoke, or catch fire, or its circuit parts may become damaged.



# Do not throw the FOMA phone or accessories, or subject them to severe shocks.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Don't

Be careful not to let electroconductive materials (metal pieces, pencil leads etc.) contact with the charging terminals or connector terminal. Also, make sure that those are not entered into the inside of the FOMA phone.

Short-circuit could cause fire or malfunction of the FOMA phone.



When you are in a place such as a gas station where flammable gas is generated, turn off the FOMA phone, and never do charging. Otherwise, catching fire may result.

Ensure that you use Osaifu-Keitai with the FOMA phone turned off when you are in the vicinity of the gas station. (When IC Card Lock is set, turn off the power with the lock released.)



 
If odor, overheat, discoloration, or deformation is detected during use, battery charge, or storage, immediately observe the following:

- 1. Pull the power plug out of the outlet or cigarette lighter socket.
- Turn off the power to the FOMA phone.
- 3. Remove the battery pack from the FOMA phone.

If you use the FOMA phone and its accessories as they are, overheat, burst, or catching fire could result or the battery could leak.



# Caution



The FOMA phone or accessories may fall, resulting in injury or malfunction.



Do not store in humid or dusty places, or in high temperature environments.

Malfunction may result.



If children use the FOMA phone or accessories, a quardian should explain the safety precautions and correct operations. The quardian should also make sure that the instructions are followed during use. Otherwise, injury may result.



Keep out of the reach of babies and infants.

Accidental swallowing or injury may result.



Be especially careful when you use the FOMA phone for a long time with the adapter/charger connected.

If you use i-appli programs, talk on the videophone and so on for a long time during charging, the temperature of the FOMA phone, battery pack, or adapter/charger might rise.

If you directly touch the part of high temperature continuously, redness, itching, rash, or low-temperature bare skin burns may result depending on your physical conditions or predisposition.

## **Precautions for FOMA phone**



# Warning



Do not directly point the infrared data port at someone's eyes during transmission.

His/her eyes may possibly be affected. Other infrared devices may operate erroneously if the infrared data port is pointed at them during transmission.



Do not put the FOMA phone in the place where it could be affected by an expanded airbag. e.g., on the dashboard.

If the airbag expands, the FOMA phone could hit you and others, causing accidents such as injury and the FOMA phone could malfunction and become damaged.



If you have any implanted electronic medical equipment, do not place your FOMA phone in a chest pocket or inner pocket. If the FOMA phone is positioned close to electronic medical equipment, it may cause that equipment to malfunction.



Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the UIM or microSD memory card slot of the FOMA phone.

Fire, electric shock or malfunction may result



Turn off the FOMA phone in places where use is prohibited such as in airplanes and hospitals.

Otherwise, electronic devices and electronic medical appliances may be adversely affected. If the Auto Power ON function is set, deactivate the setting, then turn the power off.

For use inside medical facilities, make sure that you comply with their regulations. You may be punished for using the FOMA phone in airplanes, which is prohibited by law



When talking with the FOMA phone set to Hands-free, be sure to keep the FOMA phone away from your ear.

Further, when you play games or play back music with the earphone/microphone connected, adjust the sound volume to moderate volume.

The excessive sound volume impairs your hearing. Further, accidents may result due to the hardness of hearing of surrounding sound.



For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully.

Those functions may cause an effect on the heart.



If thunder starts to rumble while you are using the FOMA phone outdoors, turn off the power and move to a safe place.

Otherwise, you could be struck by lightning or suffer an electric shock.



Turn off the FOMA phone when near electronic devices using high-precision control or weak signals.

The FOMA phone may possibly cause these devices to malfunction.

Electronic devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices. If you use an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



If the display part or camera lens is broken, be careful about broken glasses or the exposed interior of the FOMA phone.

Plastic panels are used for the surfaces of the display part and camera lens so that glasses do not easily get scattered, however, pay attention not to erroneously touch the broken part or interior. Otherwise, injury may result.



# Caution



Do not swing the FOMA phone by its strap.

The FOMA phone may hit you or persons around you, and accidents such as injury or malfunction and damage may result.



Do not place magnetic cards or similar objects near the FOMA phone or between phone parts.

Information on magnetic cards such as cash cards, credit cards, telephone cards and floppy disks may be deleted.



Do not bring magnetic substances close to your FOMA phone.

Strong magnetic items might cause in erroneous operation.



If you erroneously break the display part and then crystal liquid gets leaked, never take or suck the liquid to or into your mouth, or apply to skin. If the crystal liquid gets into the eyes or mouth, immediately rinse it out with clean water and then seek medical attention. When it adheres to your skin or clothes, immediately wipe it away with alcohol etc., and then rinse it out with water and soap.

Otherwise, the loss of eyesight or injury to your skin may result.



Do not bring your ears close to the speakers while a ring tone sounds or a melody is played back from the FOMA phone.

Otherwise, your hearing could be impaired.



Do not open the FOMA phone by pressing the one-push open button near persons around you or your face.

The FOMA phone may hit you or persons around you, causing accidents and injuries.



Electronic devices in some types of cars can be affected by use of the FOMA phone.

Do For safety's sake, make sure not to use the FOMA phone inside such cars.



Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the FOMA phone immediately, and then seek medical attention.

Metals are used for the following parts:

Where it is used	Material	Finishing
The above case Back cover	Stainless	Baking finish
Side upper key Side lower key Metal part of the one-push open button	ABS	Chrome-plated finish with nickel-plated ground
Charging terminal	Copper alloy	Gold-plated finish with nickel-plated ground



Be careful not to get your finger or a strap caught between the FOMA phone when you close or open it.

Accidents such as injury or damage may result.



The back cover is made of metal, so handle it with care.

You may hurt your hand or fingers.



### **Precautions for batteries**

■ Check the description on the label of the battery pack for the type of battery.

Description	Туре
Li-ion	Lithium-ion battery



# **Danger**



Do not let any metal object such as a wire come in contact the battery terminals. Also do not carry or store the battery together with any metal objects like a necklace.

The battery may leak, overheat, burst or catch fire.



Do not use excessive force to attach the battery to the FOMA phone even when you cannot attach it successfully. Also, check that the battery is the right way round when you attach it.

The battery may leak, overheat, burst or catch fire.



**Do not throw the battery into fire.** The battery may leak, overheat, burst or catch fire.

Don't



Do not pierce it with nails, hit it with a hammer, or step on it.

The battery may leak, overheat, burst or catch fire.



If the battery fluid gets into your eyes, do not rub them. Flush your eyes with clean water and seek medical attention immediately. Otherwise, the loss of eyesight may

 $\wedge$ 

result.

# Warning



When any abnormality due to external shock such as the deformation or scratches by dropping is found on the battery pack, immediately stop using it.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



If charging is not completed at the end of the specified charging time, stop charging.

Otherwise, the battery may leak, overheat, become damaged or catch fire.



Immediately stop using the FOMA phone and keep it away from fire if the battery leaks or emits an odor.

The leaked battery fluid may ignite, causing fire or burst.



Be careful that your pets do not bite into the battery pack.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



## Caution



An exhausted battery should not be disposed of with other waste.

The Don't the e

The battery may catch fire or damage the environment. After insulating the battery terminals with tape, take the unneeded battery to a handling counter such as a DoCoMo shop or dispose of it in accordance with local waste disposal regulations.



Do not charge the wet battery.

The battery pack may overheat, catch fire, or burst.



If the battery fluid comes in contact with skin or clothes, immediately stop using, then rinse it out thoroughly with clean water.

Skin injury may result.

### Precautions for adapters/chargers



# Warning



Do not use a damaged adapter/ charger cord or power cord.

Electric shock, overheating or fire may result.



Do not use the AC adapter and desktop holder in steamy places such as a bathroom.

Electric shock may occur.



The DC adapter is for use only in a negative (-) grounded vehicle. Do not use it in a positive (+) grounded vehicle.

Fire may result.



If it starts to thunder, do not touch the FOMA phone and adapter/charger.

You might be struck by lighting or suffer an electric shock.



Never short-circuit the charging terminals when the adapter is plugged into the power outlet or cigarette lighter socket. Also, never touch the charging terminals with fingers or other bare skin.

Fire. malfunction, electric shock or injury may result.



Place the charger and desktop holder on a stable location during charging. Do not cover or wrap the charger and desktop holder in cloth or bedding.

The FOMA phone may drop off, or the charger and desktop holder may overheat, causing fire or malfunction.



Do not place something heavy on the adapter/charger cord and power cord.

Don't Electric shock or fire may result.



Not wet hands

Do not touch the power cord of the adapter/charger, or power outlet with wet hands.

Electric shock may result.



Use the adapter/charger at the specified V AC.

If you use it at a wrong voltage, fire or malfunction may result. When using the FOMA phone overseas, use FOMA AC adapter available overseas.

AC adapter: 100 V AC DC adapter: 12/24 V DC

[For negative (-) grounded vehicles only] AC adapter available overseas: 100 V to

240 V AC

[Connect only to household AC outlet]



If a fuse of the DC adapter has blown, replace it with a specified fuse.

If you use an unspecified fuse, fire or malfunction may result. For the specified fuse, refer to each instruction manual.



Keep the power plugs dust-free. Otherwise, fire may result.



Dο

When plugging the AC adapter into the power outlet, firmly plug it in, taking care not to contact with metal straps or the like.

Otherwise, electric shock, short-circuit or fire may result.



Do

When removing the adapter/ charger out of the outlet or cigarette lighter socket, do not forcibly pull the adapter/charger cord or power cord, instead take hold of the power plug and then pull.

If you pull the plug out by the cord, the cord may be damaged, which could result in electric shock or fire.



Pull the power plua out

When the adapter/charger is not to be used for a long period of time, unplug the power cord from the outlet.

Otherwise, electric shock, fire, or malfunction may result.



out

If liquids such as water get in the charger, unplug the power cord immediately from the outlet or cigarette lighter socket. Otherwise, electric shock, smoke or fire

may result.



Before cleaning, pull the power plug out of the outlet or cigarette lighter socket.

power plug out

Otherwise, electric shock may result.

### **Precautions for UIM**



# Caution



Be careful not to touch the cut surface of the UIM (IC portion) when removing it.

You may hurt your hand or fingers.

# Notes on using near electronic medical equipment

■ The description below meets "Guidelines on the Use of Radio-communication Equipment such as Cellular Telephones – Safeguards for Electronic Medical Equipment" by the Electromagnetic Compatibility Conference Japan.



# Warning



Comply with the following in hospitals or health care facilities:

- Do not carry the FOMA phone into operating rooms, intensive care units (ICU) or coronary care units (CCU).
- •Turn off the FOMA phone in hospital wards.
- If there is any electronic medical equipment near you, turn off the FOMA phone even when in a location such as a lobby.
- Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.
- If the Auto Power ON function is set, deactivate the setting, then turn the power off.



Turn off the FOMA phone in crowded areas such as inside trains during rush hour, as someone with an implanted cardiac pacemaker or implanted defibrillator may be near you. Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



If you use an implanted cardiac pacemaker or implanted defibrillator, use the mobile phone 22 cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

Operation of electronic medical equipment can be affected by radio waves.

# **Notes on Handling**

### **General notes**

Do not wet the equipment.

The FOMA phone, battery, adapter/charger, and UIM are not waterproofed. Do not use them in environments, which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them against your body, they become moist due to perspiration and the internal parts may become corroded, causing malfunction. If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible. This may be repaired at a cost if repairs are possible.

- Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
  - The screen of the FOMA phone sometimes has a special coating so that they are easier to see. If you rub it roughly with a dry cloth, it might be scratched. Take care of the way of handling, and use only a dry, soft cloth such as the one for cleaning glasses. If the screen is left with water drop or stain adhered, smear may be generated or the coating might peel off.
  - Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.
- Occasionally clean the terminals of the equipment using a dry cotton swab.

  If the terminals become soiled, the connection might deteriorate so that the power turns off or the battery does not charge fully. Wipe the terminals with a dry cloth or cotton swab.

### Do not place the FOMA phone near an air conditioner outlets.

Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction

# ■ Do not apply excessive force onto the FOMA phone and battery pack.

If you put the FOMA phone in a bag along with many other articles or sit with the FOMA phone in a clothes pocket, the display, internal circuitry and the battery pack could be damaged or malfunction. Also, if your FOMA phone is left with an external device connected to the connector terminal, the connector could be damaged, or malfunction.

- Carefully read each instruction manual attached to the FOMA phone, adapter/charger, or desktop holder.
- Do not rub or scratch the display part with metals.

Doing so might cause damage to the part, resulting in trouble or malfunction.

## Notes on handling the FOMA phone

Avoid using in extremely high or low temperatures.

The FOMA phone should be used within a temperature range of 5°C to 35°C and a humidity range of 45% to 85%.

- The FOMA phone, if operated near landline phones, television sets, radios or other devices that are in use, may affect them. You should operate your FOMA phone as far away from such equipment as possible.
- It is recommended that you make separate notes of the information stored in the FOMA phone and keep such notes in a safe place. We take no responsibility for any loss of the stored data items.

- Do not insert an external device to the connector terminal (earphone/microphone terminal) at a slant when connecting, and do not pull it out when it is inserted.

  Malfunction or damage may result.
- Make sure that nothing, such as a strap, gets caught between the parts of the FOMA phone when you close it.

Otherwise, malfunction or damage may result.

- The FOMA phone becomes warm during use or charging but this is not an abnormality. Use the FOMA phone as it is.
- Do not leave the camera in places exposed to direct sunlight.

Pixels may be discolored or burns may result.

Usually, use the FOMA phone with the cover of the connector terminal and that of microSD memory card slot mounted.

Dust or water might enter into the FOMA phone, causing malfunction.

Do not use the FOMA phone with the back cover left removed.

The battery pack might come out, or malfunction or damage may result.

Do not apply an excessively thick sticker onto the surfaces of the display, keys, or buttons.

Malfunction may result.

■ While you are using the microSD memory card, never take it off or turn off the power to the FOMA phone.

Data may be erased or malfunction may result.

# Notes on handling batteries

Batteries have a limited life.

Though it varies depending on the usage state, you are advised to replace the battery if its usable time is extremely short even when you fully charge it. Make sure that you buy the specified battery.

- Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.
- Make sure that the battery is charged when you use the FOMA phone for the first time or have not used it for a long period of time.
- The usable time of the battery differs depending on the usage environment or its remaining life.
- Depending on how the battery pack is used, it might swell as its operating life becomes short, but this is not a problem.
- Do not store or leave the empty battery pack.

The performance and operating life of the battery pack might be lowered or shortened.

# Notes on handling chargers/ adapters

- Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.
- Charge the battery where:
  - ·There is very little humidity, vibration, and dust.
  - There are no landline phones, television sets or radios nearby.
- During charging, the adapter/charger may become warm. This is not an abnormality, so continue charging.
- Do not use the DC adapter for charging the battery when the car engine is not running. The car battery could go flat.

- When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.
- Do not give a strong shock. Also, do not deform the charging terminals or terminal guide.

Malfunction may result.

### Notes on handling the UIM

- Never use more force than necessary when inserting/removing the UIM.
- The UIM may become warm during use, but this is not a sign of a malfunction. Continue using it as it is.
- The warranty does not cover damage caused by inserting the UIM into some other types of IC card reader/writer.
- Always keep the IC portion clean.
- Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
- It is recommended that you make separate notes of the information stored on the UIM and keep such notes in a safe place.
  We take no responsibility for any loss of the stored data items.
- For the environmental protection, bring any unneeded UIMs to a handling counter such as a DoCoMo shop.
- Avoid using in extremely high or low temperatures.
- Do not damage, carelessly touch, or short-circuit the IC.

Data might be lost or malfunction may result.

Do not drop the UIM or subject it to strong impacts.

Malfunction may result.

■ Do not bend the UIM or place something heavy on it.

Malfunction may result.

■ Into the FOMA phone, do not insert the UIM with a label or sticker pasted.

Malfunction may result.

# Notes on handling the FeliCa reader/writer

- The FeliCa reader/writer function on the FOMA phone uses very weak radio waves which do not require to be licensed as radio stations.
- The FeliCa reader/writer is operated on the 13.56 MHz frequencies. When you use another reader/writer nearby, take enough distance between your FOMA phone and the reader/writer. Further, ensure that there are no radio stations that use the same frequencies.

### Caution

■Do not use the modified FOMA phone.
Using a modified FOMA phone infringes the Radio Law.

The FOMA phones are granted technical regulations conformity certification as the specified radio equipment under the Radio Law and bear a "technical conformity mark "on the nameplate as evidence of conformity. Unscrewing the FOMA phone and modifying internal components void the technical regulations conformity certification. Do not use the FOMA phone in this state, which infringes the Radio Law.

# ■Be especially careful not to operate the FOMA phone while driving.

You will be imposed punishment if you use the mobile phone in your hand while driving. If you answer a call out of necessity, tell the caller with Hands-free that you will call him/her back, park your car to somewhere safe, and then dial.

# ■ Use the FeliCa reader/writer functions in Japan only.

overseas

The FeliCa reader/writer functions on the FOMA phone have been authorized in compliance with the radio transmission standards in Japan.
You might be imposed punishment if you use it

# **Intellectual Property Rights**

### **Copyrights and Portrait Rights**

You have no right to copy, modify, or distribute the contents such as text, images, music, or software programs downloaded from web pages on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law

Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait rights.

### **Trademarks**

- •"FOMA", "mova", "i-mode", "i-appli", "i-appliDX", "i-motion", "Deco-mail", "Chaku-motion", "Chara-den", "ToruCa", "mopera", "mopera U", "WORLD CALL", "Dual Network", "FirstPass", "visualnet", "V-live", "i-Channel", "DCMX", "iD", "Security Scan", "i-shot", "i-motion mail", "l-area", "Short Mail", "WORLD WING", "Public mode", "DoPa", "sigmarion", "musea", "IMCS", "OFFICEED", "2in1", and the logos of "FOMA", "i-mode", "i-oppli", "DCMX", "iC", "iD", "Music&Video Channel" and "HIGH-SPEED" are trademarks or registered trademarks of NTT DoCoMo, Inc.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and or its affiliates



- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- NAVIDIAL and NAVIDIAL logo mark are trademarks of NTT Communications Corporation.
- Microsoft<sup>®</sup>, Windows<sup>®</sup>, and Windows Vista<sup>®</sup> are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- Windows Media<sup>®</sup> is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

- Powered by JBlend<sup>™</sup> Copyright 2002-2007 Aplix Corporation. All rights reserved.
- JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- $\bigcirc$  is a registered trademark of FeliCa Networks, Inc.
- The microSD logo is a trademark.
- The microSDHC logo is a trademark.
- "Multitask" is a registered trademark of NEC Corporation.
- QR code is a registered trademark of Denso Wave Inc.
- ●使いかたナビ® is a registered trademark of CANNAC, Inc.
- Java and Java related trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- Powered by Mascot Capsule<sup>®</sup>/Micro3D Edition™
   Mascot Capsule<sup>®</sup> is a trademark of HI CORPORATION.
- The image stabilization technology utilized is PhotoSolid®, a product of Morpho, Inc. PhotoSolid® is the registered trademark of Morpho, Inc. in Japan and other countries.
- Napster is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
- Other company names and product names described in the text are trademarks or registered trademarks of those companies.

### **Others**

 
 This product contains NetFront Sync Client of ACCESS CO., LTD.

NetFront

ENABLED

Copyright © 2007 ACCESS CO., LTD. All rights reserved. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.

- This product contains IrFront software of ACCESS CO., LTD.
   Copyright © 1996-2007 ACCESS CO., LTD.
- ACCESS and IrFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.
- Contains Flash<sup>®</sup> Lite<sup>™</sup> and Adobe<sup>®</sup> Reader<sup>®</sup> technology by Adobe Systems Incorporated.
- Flash Lite copyright © 1995-2007 Adobe Macromedia Software LLC. All rights reserved.



Adobe, Flash, Flash Lite and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries

- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.





 Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307	5,504,773	5,109,390	5,535,239	5,267,262	5,600,754
5,416,797	5,490,165	5,101,501	5,511,073	5,267,261	5,568,483
5,414,796	5,659,569	5,056,109	5,506,865	5,228,054	5,544,196
5 337 338	5 657 420	5 710 784	5 778 338		

 This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc.

For more details, see "readme.txt" in the "GPL LGPL等について" folder on the bundled CD-ROM. ("readme.txt" is only available in Japanese version.)

• Advanced Wnn V2 of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.

- "Advanced Wnn V2" © OMRON SOFTWARE Co., LTD. 1999-2008 All Right Reserved.
- This product contains "Sense", the voice analysis technology of Alegria Corporation for Feel \* Talk.
- This product is licensed under the MPEG-4 patent portfolio license for the personal and non-commercial use of a consumer to
  - (i) encode video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or
  - (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

- This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to
  - (i) encode video in compliance with the AVC Standard ("AVC Video") and/or
  - (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video.

No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

- This product is licensed under the VC-1 patent portfolio license for the personal and non-commercial use of a consumer to
  - (i) encode video in compliance with the VC-1 Standard ("VC-1 Video") and/or
  - (ii) decode VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide VC-1 Video.

No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.

See http://www.mpegla.com.

- Copyright 2001 Seiko Epson Corporation.
- All Rights Reserved. PRINT Image Matching is a trademark of Seiko Epson Corporation.

The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.

- This product is manufactured or sold under license from InterDigital Technology Corporation.
- The abbreviations used for respective operating systems (Japanese version) in this manual are as shown below:

Windows Vista is the abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, and Ultimate).

Windows XP is the abbreviation of Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional operating system or Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition operating system. Windows 2000 is the abbreviation of Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Professional operating system.

- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- Content providers are using the digital rights management technology for Windóws Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.
- The copyrights on the designs described below are owned by TGB-design and NTT DoCoMo.
  - · Pre-installed files below:
  - Images that take the file name of "TGB-xxxx"
  - Melodies that take the file names of "RING-xxxx" and "SE-xxxx"

Images or i-motion movies on the Dialing/Call Receiving display, Videophone Dialing/Videophone Call Receiving display, Mail Sending/Receiving display, display, Mail Sending/Receiving display, display,

- Check New Message display, and Mail/Message Reception Result display
- Power ON/OFF display
- · Wake-up display
- · Images during infrared data exchange
- · Processing display (while operating i-mode etc.)
- · Images displayed during dialing/during talk/during multi-connections/during answer-hold (On Hold)/during data communications
- · MUSIC Player Playback display (for when no image is stored on music)

- ·Fonts below:
- "Pattern 1" of "Disp. call/receive No.", the calendar, the date and time on the main display, and "Pattern 1" of the clock in the Private window
- ·Coloring by "Color theme setting"
- ·lcons for battery level, for radio wave level, during a voice call, during a video-phone call, and for Public Mode (Drive Mode)
- Navigation icons
- · Notification icons
- · Desktop icons (except the ones for Alarm and MUSIC Player)
- · Icons for the i-oppli Stand-by display being set

# **Accessories and Main Options**

### <Accessories>

ullet FOMA P705i  $\mu$ /PROSOLID  $\mu$  Handset (With Warranty and Back Cover P24)



ullet FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM

The PDF versions of "Manual for PC connection setting" and "Kuten Code List" are included.



Instruction Manual

Quick Manual included (See page 478)



Battery Pack P17



 Earphone Plug Adapter for External connector terminal (Sample item) (With Instruction Manual)

You use this item for connecting the Flat-plug Earphone/Microphone with Switch (Option) or commercial stereo earphone (mini plug).

 


# <Main Options>

•FOMA AC Adapter 01/02 (With Warranty and Instruction Manual)



 Desktop Holder P26 (With Instruction Manual)




Other Options → See page 441

# **Before Using the Handset**

Phone Parts and Functions	26
Navigation Displays and Key Operations	28
Display	29
Displaying Description of Icons	3
Private Window	31
Method for Selecting Menu	32
Using Simple Menu	36
When You do not Remember Key Operation Guide	37
Using UIM (FOMA Card)	37
Attaching/Removing Batteries	40
Charging FOMA Phone	41
Opening FOMA Phone by Using a Button «One-push Open»	43
Checking Battery Level	43
Turning Power On/Off	44
Switching to English	44
Executing Initial Settings	45
Setting Date and Time	45
Displaying World Time World Time Watch>	46
Notifying the Other Party of Your Phone Number	
	46
Checking Your Own Number Own Number	47

# **Phone Parts and Functions**

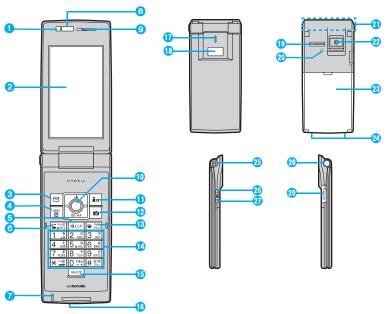

For using the Flat-plug Earphone/Microphone with Switch (Option)

 
Use the Flat-plug Earphone/Microphone with Switch (Option) by connecting it to the Earphone Plug Adapter for External connector terminal (Sample item).

- 1. Insert the flat plug for the Flat-plug Earphone/Microphone with Switch (Option) into the earphone terminal. (Flat-plug) (①)
- 2. Insert the plug for handset side into the connector of the FOMA phone. (②)

  Land take hold of the plug and insert or pull it straight into or out. Be careful not to take hold of the cover and plug together when you pull it out.

  [Filt-plug]

Flat plug for the Flat-plug Earphone/
Microphone with Switch



#### Light sensor

· For sensing brightness (See page 104)

### Oisplay

(See page 29)

## Mail key

- · For showing the Mail menu (See page 200)
- · For operating the function corresponding to the navigation displays (See page 28)
- <Press and hold for at least one second>
- · For checking new mail messages (See page 195)

### Menu key/IC Card Lock key

- For showing Main Menu (See page 32)
- · For operating the function corresponding to the navigation displays (See page 28)
- <Press and hold for at least one second>
- · For locking the IC card (See page 254)

### **6** CLR Clear key

- · For returning to the previous operation
- · For clearing entered text or a phone number
- <Pre><Pre>ress and hold for at least one second>
- · For resetting Main Menu (See page 108)

# 

- · For making/receiving calls (See page 50 and page 63)
- · For talking with Hands-free (See page 62)
- <Press and hold for at least one second>
- · For accessing a voice dial entry (See page 91)

### Microphone

· For speaking to the other party

### Infrared data port

 Used for infrared data exchange and the infrared remote-controller. (See page 307 and page 310)

### Serpiece

· For listening to the other party's voice

## (I) Command Navigation key

For operating functions and menus (See page 28)

### ີ (≣ຊ) i-mode key/i-αppli key

For showing the i-mode menu (See page 156)
For operating the function corresponding to the

navigation displays (See page 28)
<Press and hold for at least one second>

· For showing the i-oppli Software List (See page 231)

### (D) Camera key

For activating the camera in "Photo mode" (See page 140)

 For switching the camera mode while the camera is activated (See page 145)

For operating the function corresponding to the navigation displays (See page 28)

#### <Press and hold for at least one second>

· For activating the camera in "Movie mode" (See page 143)

PRO  $\mu$  The key is different.

### Personal data lock key

·For activating the voice recorder (See page 357)
·For operating the function corresponding to the navigation displays (See page 28)

Press and hold for at least one second>

·For activating/releasing Personal Data Lock (See page 125)

### 18 Power/End key

For ending calls For ending respective functions
For turning on the power (for at least one second)/
For turning off the power (for at least two seconds)
(See page 44)

#### Numeric kevs

For entering phone numbers and text

• # (for at least one second)
For activating Manner Mode (See page 98)

●★ (for at least one second)

For activating Public Mode (Drive Mode)

(See page 68)

• 5 (for at least one second)

For switching the backlight on/off (See page 105)

• 8 (for at least one second)
For activating/deactivating View Blind (See page 105)

### (15 (MULTI) Multi key

 $\cdot\,\text{For showing the Multitask menu}$  (See page 344)

<Press and hold for at least one second>

· For switching functions, when multiple functions are running (See page 343)

#### (Connector terminal

For connecting the AC adapter (option), DC adapter (option), FOMA USB Cable with Charge Function 01 (option), or Earphone Plug Adapter for External connector terminal, etc.

### Call/Charging indicator

· Flickers for incoming calls/mail and during a call. (See page 109)

· Lights in red during charging.

### Private window

(See page 31)

### Speakers

· For sounding ring tone

· For listening to the other party's voice when Hands-free is activated (See page 62)

### FeliCa mark

· The IC card is mounted.

 Use the IC card function placing this mark over the scanning device. You cannot dismount the IC card. (See page 247)

#### FOMA antenna

 The FOMA antenna is embedded in the FOMA phone. Do not cover the antenna with your hand for better communication.

#### Camera

· For shooting portraits and/or landscapes (See page 134)

 For catching sight of persons and/or landscapes during a videophone call

PRO  $\mu$  The camera is not mounted.

#### Back cover

 Remove this when attaching/removing the battery pack and UIM. (See page 37 and page 40)

### Charging terminals

⊕Strap hole

### ▲ Side upper key

For scrolling up page by page

<Press and hold for at least one second with the FOMA phone opened>

· For activating 2in1 (See page 387)

### Side lower key

· For scrolling down page by page

·For using Record Message (See page 71)

 For checking for missed calls and new mail (See page 111)

<Press and hold for at least one second with the FOMA phone closed>

· For activating Manner Mode (See page 98)

### One-push open button (See page 43)


### @microSD memory card slot


· For inserting microSD memory card (See page 294)


# Navigation Displays and Key Operations

When you want to execute an operation on the display, press the corresponding key as below.


■ Basic display examples and key assignments

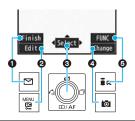


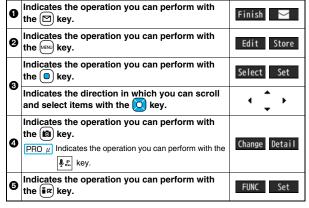

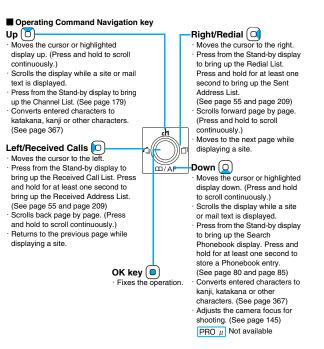

# Display

 

 



0		Battery level (estimate) (See page 43)
		Radio waves reception level (estimate)  Strong
0		You are out of the FOMA service area or radio waves do not reach.
	self	During Self Mode (See page 124)
		During i-mode (See page 156)
	⇒	During i-mode communication (See page 156)
0	i i i i i i i i i i i i i i i i i i i	During packet communication (The icon differs depending on the communication status.)
	€	You get out of the service area while Network Search Mode is set to "Manual". (See page 407)
0	<u>®</u> . ∴	During SSL communication (See page 157)
	(white)	Unread i-mode mail or an SMS message exists. (See page 194 and page 225)
	(black)	The area for i-mode mail and SMS messages in the FOMA phone is full. (See page 194 and page 225)
6		The area for SMS messages on the UIM (FOMA card) is full.
	(white)	Unread mail exists, and the area for SMS messages on the UIM (FOMA card) is full.
	(black)	Both the FOMA phone and UIM (FOMA card) are full.
	<b></b>	Area Mail exists. (See page 218)

		•
0		Unread Messages R/F exist. (See page 215)
U	R F (black)	The area for Messages R/F in the FOMA phone is full. (See page 216)
•	(white)	i-mode mail is held at the i-mode Center. (See page 195)
	(black)	The box for i-mode mail at the i-mode Center is full. (See page 194)
	(white)	Messages R/F are held at the i-mode Center. (See page 216)
	(black)	The box for Messages R/F at the i-mode Center is full. (See page 216)
		i-mode mail is held at the i-mode Center while Receive Option Setting is set to "ON". (See page 195)
	<b>a</b>	During a voice call
3	F.	During a videophone call (64K)
	F	During a videophone call (32K)
	<u> </u>	During 64K data communication
9	5D	A microSD memory card is inserted. (See page 295)
	<b>=</b>	Data is being read to/written from the microSD memory card.
	50	A write-protected microSD memory card is inserted. (See page 295)

JOW.		
	50	The inserted microSD memory card cannot be used. (See page 295)
9	4	A microSD memory card is inserted, and the FOMA USB Cable with Charge Function 01 (option) is connected in microSD Mode. (See page 302)
	Ę	A microSD memory card is inserted, and the FOMA USB Cable with Charge Function 01 (option) is connected in MTP Mode. (See page 302)
	<b>~</b>	During Lock All (See page 122)
	F.	During Personal Data Lock (See page 125)
	a.	During Keypad Dial Lock (See page 126)
	<b></b>	During Secret Mode or Secret Data Only (See page 127)
	<b>9</b> 5	During IC Card Lock (See page 254)
0	88	Both Keypad Dial Lock and Personal Data Lock are set.
	200	Both Keypad Dial Lock and Secret Mode/ Secret Data Only are set.
		Both IC Card Lock and Lock All are set.
	<b>EL</b>	Both IC Card Lock and Personal Data Lock are set.
		Both IC Card Lock and Keypad Dial Lock are set.

$\overline{}$	177	Both IC Card Lock and Secret Mode/
		Secret Data Only are set.
	PFTS	IC Card Lock, Keypad Dial Lock, and
0		Personal Data Lock are simultaneously set.
		IC Card Lock, Keypad Dial Lock, and
	<b>5</b> 2	Secret Mode/Secret Data Only are
		simultaneously set.
<b>o</b>	3G\$	Type of in-use network (See page 403)
w	OFFICEED	You are in the OFFICEED area.
		(See page 393)
Ø	6	Timer Lock ON At Close is set. (See page 125)
	0	During Multitask (See page 343)
•	7	Multiple functions are activated.
Œ	_	(See page 343)
	ෂි	During music playback (See page 330)
İ	<b>@</b>	During music pause (See page 330)
•	ŝir	During infrared data exchange
0	ш	(See page 307 and page 310)
	į.	The FOMA USB Cable with Charge
	<b>~</b>	Function 01 (option) is connected in
		Communication Mode.
	<b>€</b>	The FOMA USB Cable with Charge
	_	Function 01 (option) is connected in
	PG)	microSD Mode. (See page 302).
<b>©</b>		During talk or communication through a USB Hands-free compatible device
		(See page 63)
		A USB Hands-free compatible device is
		connected. (See page 63)
	<b>S</b>	A USB Hands-free compatible device is
	66	connected in microSD Mode. (See page 63)
0	V⊅ V₂ Vå	Vibrator is set. (See page 96)
	SA Sa Sá	Ring Volume is set to "Silent" or
Ð	کے سے سے	Mail/Msg. Ring Time is set to "OFF".
		(See page 67 and page 97)
0	<b>D</b> i	During Manner Mode (See page 98)
0	8	During Public Mode (Drive Mode)
۳		(See page 68)

0	¥	The call cost has exceeded the specified limit. (See page 359)
4	$\triangle$	An alarm is set. (See page 347)
@	III .	A Music&Video Channel program is booked. (See page 320)
8	9	Backlight is set to "OFF". (See page 105)
@		Side Keys Guard is set to "ON". (See page 126)
<b>2</b> 3		USB Mode Setting is set to "microSD mode". (See page 302)
•	MTP	USB Mode Setting is set to "MTP mode". (See page 302)
<b>Ø</b>		Voice mail messages for Number B are held at the Voice Mail Center in Dual Mode of 2in1. (See page 392)
Ø	唐~唐· 唐	Voice mail messages are held at the Voice Mail Center. (See page 376)
<b>@</b>	<b>₽~₽</b>	The number of record messages (See page 70)
<b>@</b>	₫~₫	The number of videophone record messages (See page 70)

- You can change the design of the battery icon and antenna icon shown in 1 and 2. (See page 103)
- When "Icon color" (see page 103) is set to "Color", the icons of ⑤ to ♂ are changed from "white" to "pink" or "yellow", and from "black" to "dark blue".
- The clock at the upper right of the display does not appear when icon ② or ③ is displayed.
- When the Stand-by display is shown, the notification icon or desktop icon appears. (See page 112)

### Information

- Some characters and symbols on the display and Private window might be modified or abbreviated. In addition, the Private window is displayed in monochrome.
- The color liquid crystal display uses high-precision production technology. The slightest change in the environment or other factors may result in unlit or permanently lit pixels, but this is not a manufacturing defect.
- The color display is shown in black and white in this manual, so the color tone of the actual display looks different.

<lcons>



# **Displaying Description of Icons**

The symbols at the top of the display (such as  $\sqrt[3]{}$ ,  $\sqrt{}$ , and  $\stackrel{\triangle}{\cong}$ ) are called icons. You can check the meanings of the selected icons on the display.

Settings Display Icons Use to highlight an icon.

## **Private Window**

Various information is displayed on the Private window like the following examples:

Press |▲|/|▼| with the FOMA phone closed to display information on the Private window for about 15 seconds.











Schedule alarm

### When a missed call is found

When the FOMA phone is closed, "Missed call" appears, and then "Info" is displayed.

Press (a) to display the missed call record. The name is displayed as a ticker for the missed call coming from the party stored in the Phonehook

When there are multiple missed calls, up to three missed call records are displayed each time you press .

- If you have received 30 or more incoming calls after a missed call, the missed call record disappears.
- · Missed call records might not be displayed while another function is activated.
- After you display a missed call record, "Info" disappears.



11/15(Sat



### When a new mail message or Message R/F is received

When the FOMA phone is closed, "New mail" appears, and then "Info" is displayed.

When "Mail" on page 104 is set to "ON", the received date/time, sender's address (name), and subject of the mail or the received date/ time and subject of the Message R/F are displayed. The sender's name is displayed as a ticker for the mail coming from the party stored in the Phonebook. When multiple mail messages or Messages R/F are received, up to three mail messages or Messages R/F appear each time you press |



• When "Disp. /play new one" of Feel \* Mail (see page 109) is set to "ON", a Feel \* Mail image is played back after receiving a mail

message.

When you press , the latest Feel \* Mail image is played back. (For Messages R/F, the Feel \* Mail image is not played back.)

Press to end the playback of the Feel \* Mail image or to clear the received date/ time, and others.

- For the mail messages and Messages R/F sorted to the box or folder with security set, the Feel \* Mail images, received date/time, and others are not played back/displayed after displaying information, and then "Info" is displayed.
- When a mail message or Message R/F comes in while "Receiving display" is set to "Operation preferred" and a display other than the Stand-by display is shown, "New mail" appears, and then "Info" is displayed without showing any information.
- Depending on the setting of "Auto-display", "New mail" appears without showing any information when a Message R/F comes in, and then "Info" is displayed.
- When a mail message or Message R/F comes in during a voice call or a videophone call, information is not displayed even when "Receiving display" is set to "Alarm preferred".
- When you set "Secret mail display" to "OFF" and you receive a secret mail message in Normal Mode, a Feel \* Mail image is not played back.

### When i-Channel is received

When "i-Channel ticker" on page 104 is set to "ON" and the FOMA phone is closed, tickers flow on the Private window.

Press ▲/▼ to end the tickers' flow.



## Change Clock Display

You can change displayed contents by pressing [A] while clock is shown.







# **Method for Selecting Menu**

Press (vew) of the FOMA phone to bring up Main Menu so that you can execute, set, or check respective functions.

- Some functions can be selected also by the operation other than pressing well. In this manual, the operation by the easier way is described.
- You can also switch to Simple Menu focusing on only basic functions for easy operation. (See page 36)
- This FOMA phone supports Kisekae Tool (see page 107). If you use Kisekae Tool to change the design of the Menu display, some menu configurations change according to the usage frequency depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply. In that case, you cannot operate as described in this manual, so you are advised to switch to the basic structure menu (see page 108), or reset menu settings (see page 108).

When you set "Menu icon setting" by "ドコモダケ\_P705i $\mu$ " ("ドコモダケ\_P705iCL" for PROSOLID  $\mu$ ) of Kisekae Tool, you can temporarily restore to the normal menu structure by selecting "基本メニュー呼び出し (Display basic menu)" from the main menu items.

When you set "ドコモダケ\_P705i  $\mu$ " ("ドコモダケ\_P705iCL" for PROSOLID  $\mu$ ) of Kisekae Tool for Main Menu, the main menu items and sub-menu items are displayed in Japanese even if "Select language" is set to "English".

#### ■ Scroll Selection

Main Menu is composed of 12 main menu icons indicating each function.

- If you select a main menu icon, the Sub-menu Item Selection display appears. If you further select a sub-menu item, the Lower Sub-menu Item Selection display appears.
- By repeating selecting, you can set and check the function.

#### ■ Menu Number Selection

You can display some functions by pressing (MENU) + the menu number (see page 412).

### ■ Multitask is Supported

• You can simultaneously use some functions in Main Menu. (See page 343)

### **Scroll Selection**

In this manual, the description of the command navigation key operation (selection of top/bottom/left/right, and press of after selecting/entering a function item) is omitted. Scroll selection is explained below using the example of selecting the function "Quality alarm":


### Description Example of Steps





### Select a main menu icon from the menu function

Select "Settings" from Main Menu. Main Menu at purchase differs depending on the body color. (See page 416)

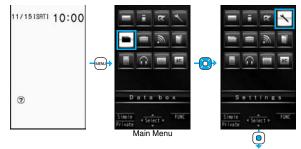

- Press to highlight the icon. Press and hold to scroll the icons continuously.
- If you have not touched any keys for at least 15 seconds, the Stand-by display returns.




### **STEP**



### Select a sub-menu item from the menu function

Select "Talk" from "Settings".

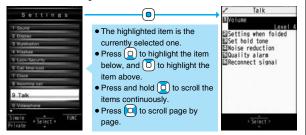


### **STEP**



### Select a desired lower sub-menu item (function)

Select "Quality alarm" from "Talk".

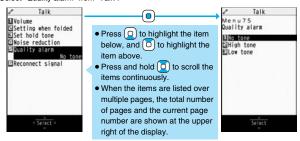


### **STEP**



### Set or check the function

Some menu items have even more detailed menus.


The example below shows how to set "Low tone" for "Quality alarm".

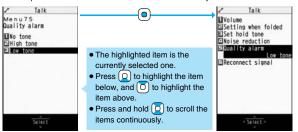

### **Menu Number Selection**

Menu Number Selection is explained below using the following example:

 
### **Description Example of Menu Number**



### **STEP**



From the Stand-by display, press MENU (7)(5).

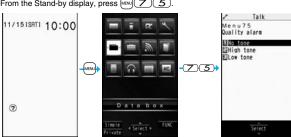

### **Function Menu**

If you press ( when "FUNC " appears at the lower right of the display, the Function menu including selectable items such as "Save", "Edit" or "Delete" in each operation appear on the display. The contents of the Function menu depend on the display from which you bring up the Function menu.

• When the items are listed over multiple pages, the total number of pages and the current page number are shown at the upper right of the Function Menu display.




#### **Description Example for Function Menu**

In this manual, the operation of the Function menu is described as follows:



#### An actual operation is done as follows:

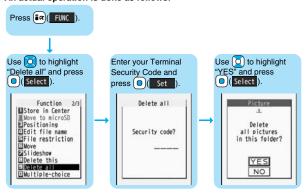

### To select items quickly <Direct selection>

Press the numeric key corresponding to the displayed item number.



#### Item scroll

When menu items are listed over multiple pages, you can show the previous/next page by pressing with the uppermost/lowermost item highlighted. You can press to scroll through page by page. When Page \( \lambda / \) Page \( \nabla \) is displayed on the display, you can scroll through page by page also by pressing (Page \( \Delta \)/ (Page ▼).

 Depending on the display being shown, such as lower sub-menu items, you might be able to scroll through page by page also by pressing A/V instead of

#### Check box

With the functions you can select multiple items, put a check mark for check boxes to select them. Each time you press ( )(Select ), " □ " and " ▼ " switches.



With some functions, you can put or clear check marks at

a time by pressing (FUNC) and selecting "Select all/Release all" or by pressing MENU (SEL all/RLS all)

" is placed to the selected item depending on the function.

## After finishing the operation

The Lower Sub-menu Item Selection display is shown. When you press ( ), the Stand-by display returns (except during Multitask). The Stand-by display or the former display automatically returns depending on the function.

## To cancel the operation midway

Press (2). The contents of the setting are abandoned and the Stand-by display or the former display returns. The confirmation display appears asking whether to abandon the setting contents depending on the function. You can press (CLR) to return to the previous operation.

## When the "YES/NO" selection display appears

Press ( to highlight "YES" or "NO", then press ( Select ).



# **Using Simple Menu**


Simple Menu is a menu focusing on only basic functions for easy operation.

- This manual describes the operating procedures in Normal Main Menu only. For how to operate in Simple Menu, see the respective pages of each function.
- You cannot use the Multitask function. (See page 343)

## Switch to Simple Menu

You can switch between Normal Main Menu and Simple Menu.


From the Stand-by display, press (MENU).

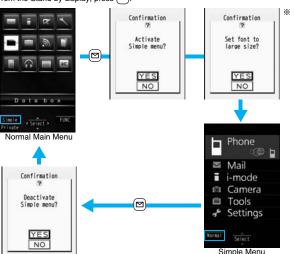

If you select "YES", "Mail", "i-mode", "Character input (Character size)" and "Character input (Candid. disp. size)" of "Character size" (see page 115) is set to "Extra large", and "Phonebook", "Setting menu", "Dialed/recv.calls" and "i-Channel ticker" are set to "Large". Even when you release Simple Menu, each of the settings does not return. When "Large" has already been set, the confirmation display does not appear.

## **Configuration of Simple Menu**

PRO  $\mu$  You cannot use the Simple Menu of the camera.

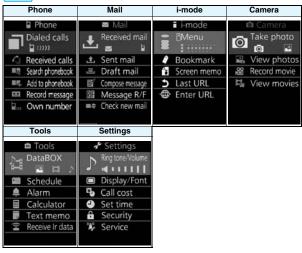

#### <Guide>

## When You do not Remember Key Operation

You can search for the functions you want to know and use, and then check the operating methods. You can execute some functions from "使いかたナビ (Guide)". This function is available in Japanese Mode only.

【 MENU ► ステーショナリー (Stationery) ▶使いかたナビ (Guide) ► Select an item.

#### おすすめ機能 (Recommendable functions)

- ....Displays the recommendable functions. Go to step 3. キーワード検索 (From keywords)
- ... Enter keywords and retrieve. Go to step 2
- 機能一覧検索 (From Function List)
  ... Retrieves from the function list. Go to step 3.
- 検索履歴 (Search history)
- ... Displays up to 30 search histories. Go to step 3.
- ◆ Highlight each item and press (☐(M)<sup>o</sup>); then the detailed operating methods are displayed.

If you highlight "キーワード検索 (From keywords)" and press (図)( 117° ), select "キーワード検索 (From

keywords)" or "文字入力のしかた (How to input words)".

●The 使いかたナビ (Guide) display appears also by selecting the 使いかたナビ (Guide) icon "(②)" pasted on the desktop at purchase.

## Enter a keyword.

Up to 50 search results are displayed.

• You can enter up to 24 full-pitch/48 half-pitch characters.

## Select a function Select an item.

機能の説明 (**Description**) . . . . . . Displays explanations for the function. 操作のしかた (**How to operate**) . . . . . Displays the operating method. **2** の機能を使う (**Operate function**) . Executes the function. Operate each

function.

関連機能 (Relevant function)...... Displays up to 10 relevant functions.
Repeat step 3.

- For some functions, press ( )( 選択 ) several times for selection.
- You can display explanations about the function also by pressing
   () 数明) while highlighting the function.
- To delete search history, press (車席) ( 根語 ) and select "1件削除 (Delete this)" or "全削除 (Delete all)", then select "YES".

# **Using UIM (FOMA Card)**

The UIM is an IC card that holds your information such as phone numbers. It can hold data such as Phonebook entries and SMS messages as well. By sharing a UIM, you can operate multiple FOMA phones for multiple purposes.

You cannot use the FOMA phone for communication such as voice and videophone calls, i-mode, sending/receiving mail, or packet communication unless the UIM is inserted.

For details on how to use the UIM, refer to the UIM instruction manual. When inserting or removing the UIM, take care not to accidentally touch or scratch the IC.

#### Insert/Remove UIM

You need to turn off the power and then remove the battery before you insert the UIM. (See page 40)

Inserting

使いかたナビ

おすすめ機能

キーワード検索

 
機能一覧検索

検索履歴

探す方法を選んでください

使いかたナビ (Guide) display

With the golden IC surface downward, push the UIM slowly to the bottom while pressing the surface of it.



#### ■ Removing

# While sliding the UIM, pull it slowly.



#### Information

- Make sure that you insert/remove the UIM with the FOMA phone closed and held in your hand.
- Take care not to force the UIM into place because this can break it.
- Take care not to lose the UIM once you remove it.
- When you replace your UIM (except during Omakase Lock), you need to enter the
  four- to eight-digit Terminal Security Code after turning on the power. When you
  enter the correct Terminal Security Code, the Stand-by display appears. If you
  enter the incorrect Terminal Security Code five times in succession, the power
  turns off. (However, you can turn on the power again.)

### **About Password of UIM**

You can set two passwords, PIN1 and PIN2, for a UIM. (See page 121)

## **UIM Restrictions**


The FOMA phone has the UIM restriction function as a security function to protect your data and files.

If you obtain data and files by the method below with the UIM inserted, UIM restrictions are automatically set to them.

- When downloading images or melodies and so on, from sites or Internet web pages
- · When receiving i-mode mail with file attachments

The data or files with the UIM restrictions can be browsed, played back, started, edited, attached to mail, or transferred via infrared rays only when the UIM used for obtaining is inserted. When the UIM used for obtaining the data or files is not inserted, or when another UIM is inserted, these functions are not operable.

 In the explanation hereafter, the UIM used to obtain data and files is referred to as "your UIM" and other UIMs as "another person's UIM".

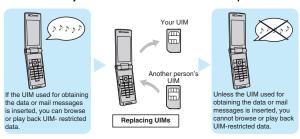

- - · i-motion movies · i-mopli programs · Chara-den images
  - · PDF files · Kisekae Tool files
  - · Chaku-uta®/Chaku-uta Full® music files · Templates
  - · Downloaded dictionaries · Screen memos
  - · Files attached or pasted to i-mode mail in the Inbox
  - ·Files attached to i-mode mail in the Outbox/Draft (except the data shot or edited with the FOMA phone)
  - Messages R/F with files (melodies or images) attached or pasted
  - ·Images inserted into Deco-mail text
  - %This function applies to the pre-installed i-oppli programs, Chara-den images, Decomail-pictographs, etc. if they are reinstalled (upgraded) from a site.
- \* "Chaku-uta" is a registered trademark of Sony Music Entertainment Inc.
- The data set with the UIM restrictions appear on the preview display as shown on the right.



#### Information

- When the UIM restrictions are set for data and files, you cannot set those data and files for the functions such as "Display setting" and "Select ring tone" when another person's UIM is inserted instead.
- If you have set the data and files with the UIM restrictions for the functions such as "Display setting" and "Select ring tone", these will work with their default settings if you remove your UIM or insert another person's UIM. If you insert your UIM again, then your settings will be enabled again.
- UIM restrictions are not set for the data received using the infrared data exchange function or data transmission (OBEX) function or the still images/moving images shot or edited with the FOMA phone.
- Even when another person's UIM is inserted, data and files set with the UIM restrictions can be moved or deleted

#### Information

• The settings of the following functions are stored on the UIM:

· SMS validity period · SMS center selection · Select language

PLMN setting Validating/Invalidating DoCoMo Certificate 1 and user certificate

· PIN1 code, PIN2 code · PIN1 code entry set

## Differences of UIM (FOMA Card)

If you use the blue UIM with your FOMA phone, note that following specifications differ from those of the green/white UIM:

Functions	UIM		Reference
i unctions	(blue)	(green/white)	Helefellee
Number of digits of the phone number that can be stored in the UIM Phonebook	20 max.	26 max.	81
Operation of user certificate to use FirstPass	Cannot be used	Can be used	174
Use of WORLD WING*	Cannot be used	Can be used	402
Use of Service Numbers for "DoCoMo repair counter" and "General inquiries <docomo center="" information="">"</docomo>	Cannot be used	Can be used	384

\*WORLD WING is the DoCoMo FOMA international roaming service that enables you to use the current phone number overseas for making and receiving calls using the UIM (green/white) and service compatible mobile phone.

You can use this FOMA phone only in the DoCoMo 3G roaming service area. For using in a GSM service area, insert the UIM into a GSM service compatible mobile phone.

- ※ You do not need to subscribe to WORLD WING if you have subscribed to the FOMA service after September 1, 2005. If you offered that you did not need WORLD WING at the time you signed up for the FOMA service, or when you have midway canceled WORLD WING, you are required to take the procedures to newly subscribe to WORLD WING.
- If you have signed up for the FOMA service before August 31, 2005, and have not yet subscribed to WORLD WING, you are required to subscribe to it.
- \*This service is not available with some billing plans.
- If you lose your UIM (green/white) or have it stolen overseas, immediately contact DoCoMo to take the steps necessary for suspending the use of the UIM. For inquiries, see "DoCoMo Information Center" on the back page of this manual. Note that you are still charged the call and communication fees incurred after you lose it or have it stolen

 
# **Attaching/Removing Batteries**

 
Use the FOMA phone's dedicated Battery Pack P17.

Attaching


While pressing the "
part in the direction A,
slide the back cover
(2 mm or more) in the
direction B to unlock.


As illustrated, securely match the battery pack to the dent on the FOMA phone with the arrow-marked surface upward, and depress the battery pack in the direction B while pushing it in the direction A.





 
 Make sure that there is no gap between the back cover and the FOMA phone, and then slide the back cover and close it completely. If it is not completely closed, you may hurt your hand or fingers because it is made of metal.



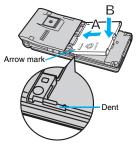


■ Removing

 While pressing the "
part in the direction of
A, slide the back cover
(2 mm or more) in the
direction of B to unlock.



 Take hold of the projection of the battery pack to lift it up.



### Information

- Make sure that you attach/remove the battery with the FOMA phone closed and held in your hand after you turn off the power. Also, make sure not to press the one-push open button when you attach/remove the battery.
- $\bullet$  If you try to force the battery into place, you could damage the UIM.
- If you try to force the battery into place, you could damage the charging terminals of the FOMA phone.

# **Charging FOMA Phone**

# Use the FOMA phone's dedicated Battery Pack P17. Life of battery pack

- Battery packs are consumables. The usable time shortens slightly each time they are charged.
- When the usable time of the battery pack becomes half the time it was purchased, replacing is recommended because the battery pack is nearing the end of its life.
   Depending on the use conditions, the battery pack may swell as it nears the end of its life, but this is not a problem.
- The life of the battery pack may shorten if you use i-oppli programs, talk on the videophone, and so on for a long time during charging.

For environmental protection, bring the unneeded battery pack to an NTT DoCoMo, dealer, or recycle shop.



#### Charging

- For details, refer to the instruction manuals for the FOMA AC Adapter 01/02 (option), FOMA AC Adapter 01 for Global use (option), and FOMA DC Adapter 01/ 02 (option).
- The FOMA AC Adapter 01 supports 100 V AC only. The FOMA AC Adapter 02 and FOMA AC Adapter 01 for Global use support from 100 V AC through 240 V AC.
- The shape of the plug for the AC adapter is for 100 V AC (for domestic use). To use the AC adapter that supports from 100 V AC through 240 V AC overseas, you need to have a conversion plug adapter that is compatible with the voltage of the country you stay. Do not use a transformer for overseas travel to charge the battery pack.
- Even during charging, you can still answer calls if the FOMA phone is turned on.
   This will consume the charged amount so that charging will take longer. Also, the standby time or talk time might be shorter if you charge the battery pack with your FOMA phone open.
- If you have a long time videophone call during charging, the temperature in the FOMA phone may rise and charging may be suspended. In such a case, wait for a while and try charging again.
- Remove and insert the connector slowly and carefully, without using unnecessary force.
- Do not remove the battery pack during charging.

# Do not charge for long periods of time (several days) with the FOMA phone turned on.

• If you leave the FOMA phone powered on for long periods of time during charging, you may not be able to use the FOMA phone for long duration as expected and the low battery alarm may sound soon, because the FOMA phone receives the power from the battery pack after charging is completed. If this happens, charge the battery pack correctly. When charging the battery pack again, first remove the FOMA phone from the AC adapter (or desktop holder) or DC adapter and then set it again.

#### Estimated usable time for battery pack

(The usable time for the battery pack varies with the charging time and the remaining life of the battery pack.)

Continuous standby time	Standstill: Approx. 440 hours	In motion: Approx. 310 hours
		Videophone call: Approx. 100 minutes

- \*\*The continuous talk time is the estimated time that the FOMA phone can be used for calls when radio waves can be sent and received normally.
- \*\*The continuous standby time is the estimated time when radio waves can be received normally. The standby time could be about half of this estimate depending on the charge level of the battery pack, function settings, other ambient conditions such as temperature, and the status of radio waves in the area (weak or no radio waves, for instance). When you use i-mode communication, the talk/communication time and standby time will be shorter. Further, even if you do not make calls or not execute i-mode communication, the talk/communication time and standby time will be shorter if you compose i-mode mail, start up a downloaded i-appli program or the i-appli Stand-by display, execute data communication or Multiaccess, use the camera, or play back music.
- \*\*The continuous talk time and the continuous standby time may be shortened depending on the network environment in the country you stay.
- \*The continuous standby time for standstill is the average number of hours you can use the FOMA phone in standstill status when it is closed and can receive radio waves normally.
- \*\*The continuous standby time for in motion is the average number of hours you can use the FOMA phone in the combined status of "standstill" "moving" and "out of the service area" when it is closed, in an area where it can receive radio waves normally.

#### Estimated time for charging battery pack

AC adapter	Approx. 100 minutes	DC adapter	Approx. 100 minutes

\*The charging time is an estimate of time for when empty battery pack is charged with the FOMA phone tumed off. The charging time will be longer if you charge the battery pack with the power of the FOMA phone turned on.

## Charge with AC Adapter and Desktop Holder

Call/Charging indicator

Desktop

Holder P26

Power

socket

100 V ÁC

Connector

Plug in horizontally

with engraved side

AC Adapter's

facing down

plua

FOMA AC Adapter 01/02

 
- Connect the AC adapter (option) to the desktop holder (option).
- 2 Insert the AC adapter's plug into a power socket.
- Set the FOMA phone onto the desktop holder securely.

Check that the Call/Charging indicator lights in red. When the Call/Charging indicator flickers, dismount the AC adapter and battery pack from the FOMA phone and then re-mount them for charging.

If the symptom persists, troubles with the AC adapter, desktop holder or

battery pack may be involved, so consult a handling counter such as a DoCoMo shop.

- Be sure to set the FOMA phone onto the desktop holder with the FOMA phone closed.
- The charging confirmation tone (see page 97) sounds when charging starts and ends. However, it does not sound when the power is off or during Manner Mode or Public Mode (Drive Mode).
- Be sure to set the FOMA phone firmly onto the desktop holder. Also, be careful that the connector cover or a commercial strap is not caught between the FOMA phone and desktop holder.
- When charging is completed, hold the desktop holder with your fingers and lift up the FOMA phone to remove.
  - Unplug the AC adapter from the power socket when you are not going to use it for a long time.



	Call/Charging indicator	"
Charging	Lights in red	Blinks
Charging completed	Off	Lights

• When the FOMA phone is turned off, " = " does not appear.


If you start charging with the battery flat, the Call/Charging indicator might not light immediately; however, charging itself has started.

## When charging with the AC adapter only

 Insert the connector with the engraved surface facing up until it clicks. Pull straight the connector out while pressing the release buttons.

\*\*Check the facing direction (front or rear) of the AC adapter plug and then insert or pull it horizontally into or out of the FOMA phone.

Malfunction could result if you try to pull it forcibly.



## ■ DC adapter (option)

With the DC adapter, you can use a cigarette lighter socket (12 V/24 V) of cars to charge the FOMA phone with the battery pack attached.

For details, refer to the instruction manual for the FOMA DC Adapter 01/02.

## Information

 
If the fuse blows off when charging with the DC adapter, be sure to use a 2A fuse.
 The 2A fuse is consumables, so purchase at auto parts stores in your neighborhood.

## <One-push Open>

# Opening FOMA Phone by Using a Button

You can open the FOMA phone easily by one-push key operation. (One-push Open)

- You can open it also manually without using the button.
- You need to close the FOMA phone manually. If it does not close, open it fully and then close it.



#### Information

- When you open the FOMA phone by pressing the one-push open button, it might not open fully depending on its direction.
- When you open the FOMA phone by pressing the one-push open button, be careful not to drop it by its rebound.

## <Battery Level>

 
# **Checking Battery Level**

When the FOMA phone is turned on, an estimate of the battery level is indicated by the icon.

- Charge the battery when it is almost empty.

## Check by Display and Tone

You can check an estimate of the battery level by the display and sound.



Getting low



Full charge





Almost empty

Charge the battery.

• The pictograph disappears after about three seconds.

## When the battery is running out

The display on the right appears and the low battery alarm sounds for about 10 seconds. To stop this alarm, press any key other than and . About one minute later, the FOMA phone will be turned off.

During a call, a beeping tone from the earpiece notify you
of the low battery. About 20 seconds later your call will be
cut and then one minute later the FOMA phone will be
turned off.



Recharge Battery display

### <Power ON/OFF>

# **Turning Power On/Off**

## **Turn Power On**

Press and hold for at least one second.

After the Wake-up display (see page 102) is displayed, the Stand-by display appears.

- If you have stored many Phonebook entries or mail messages, it may take a while for the display to appear.
- If Set Time is set, the current date and time are shown.
- When " is displayed, the FOMA phone is out of the service area or in the place where the radio waves do not reach. Move to a location where " imp" disappears.
- If "starting system wait a minute" is displayed when you turn on the power, wait for a while and then proceed.

11/15 (SAT) 10:00

?

Stand-by display

### When your UIM is replaced (except during Omakase Lock)

Enter the four- to eight-digit Terminal Security Code after turning on the power. When you enter the correct Terminal Security Code, the Stand-by display appears. If you enter the incorrect Terminal Security Code five times in succession, the power turns off. (However, you can turn on the power again.)

## When "PIN1 code entry set" of "UIM setting" is set to "ON"

Enter the four- to eight-digit PIN1 code after you turn on the power. When you enter the correct PIN1 code, the Stand-by display appears. See page 121 for PIN1 code.

# When "Auto reset setting" of "Notice call cost" is set to "ON" (except during Omakase Lock)

Enter the four- to eight-digit PIN2 code after you turn on the power. When you enter the correct PIN2 code, the Stand-by display appears. If you press CLR or without entering the correct PIN2 code, "Auto reset setting" is set to "OFF" and the Stand-by display appears. See page 121 for PIN2 code.

#### Information

 Each entry display appears in the order of "PIN1 code" → "Terminal Security Code" → "PIN2 code".

#### **Turn Power Off**

Press and hold 🖀 for at least two seconds.

The exit display appears and the power turns off.

 You cannot turn on the power immediately after turning off the power. Wait a few seconds.

## <Select Language>



# **Switching to English**

● 設定 (Settings) ディスプレイ (Display)

- ▶バイリンガル (Select language)
- ▶Japanese (日本語) or English (英語)
- The following functions are different between Japanese display and English display:

Functions	Japanese	English
Info Notice Setting	電子音 (Electrical tone) ボイス (Voice)	ON Not available
	OFF	OFF
"Clock" of Display Setting  → "Day of week"	Available	Not available
使いかたナビ (Guide)	Available	Not available
Voice Guidance	Available	Not available

## Information

• When you insert the UIM, the "バイリンガル (Select language)" setting is stored on the UIM.

## <Initial Setting>

# **Executing Initial Settings**

If the date and time, Terminal Security Code, Keypad Sound, or Character Size is not set, the Initial Setting display appears when the power is turned on. You can set the initial settings also from each menu function separately.

## Turn on the power ➤ YES

 When the display for entering your Terminal Security Code, PIN 1 code, or PIN 2 code appears, follow the operation on page 44.



# Set the date and time.

You can select "Auto time adjust ON" or "Auto time adjust OFF" for setting the time. (See page 45)

# Set your Terminal Security Code.

You can set your Terminal Security Code required for setting functions. (See page 120)

Enter "0000" ➤ Enter your new Terminal Security Code (four to eight digits)
 YES

# Set Keypad Sound.

You can set the keypad whether to make a sound. (See page 97) 1. ON or OFF

## Set the size of characters.

You can set the size of characters on the display at a time. (See page 115)

#### Information

- When an unset function is found, the Initial Setting display for an unset function appears each time you turn on the power.
- The completed settings are valid even when total setting is interrupted by an incoming call or canceled by pressing or CLR midway.

#### Information

- When the power is automatically turned on by alarm notification, the Initial Setting display does not appear even if there is any unset function.
- When you finish the initial settings, the confirmation display appears telling that updating software is executed automatically. This display appears only at the first time, and after that, does not appear until you execute Reset Settings or Initialize.

#### <Set Time>



## **Setting Date and Time**

You can select whether to correct the time automatically or set it manually. The time is set/displayed on the 24-hour basis.

# Settings Clock Set time

## ► Auto time adjust ON or Auto time adjust OFF

#### Auto time adjust ON

...Corrects the date/time automatically. The setting is completed.

 
If the time is not automatically corrected such as when " is displayed and the date/time has not been set, the display for manually correcting the time appears. Follow step 2 to set the date/time.

#### Auto time adjust OFF

- . . . . Sets the date/time manually.
- When "Notice call cost" is set to "ON", you need to enter your Terminal Security Code.

## Enter year, month, date and time.

Use to move the cursor and enter numbers by the numeric keys.





#### About date/time correction function

The time displayed on the FOMA phone is corrected according to the clock information obtained from the network.

The time is corrected when you show the Stand-by display with "Auto time adjust ON" set. If you want to set the time with a lag, set the time manually.

- Some few second errors might occur. You might not be able to correct the time depending on the radio wave conditions, or the i-αppli program set for the i-αppli Stand-by display.
- When you receive the clock information overseas and the time difference correction information differs from the previously received one, "Time is adjusted" is displayed and the time difference is corrected automatically. Press "OK" to update the time and show Redial, Dialed Calls, Received Calls, sent/received mail messages and others in local time.
- When the time difference is corrected overseas, the sub clock (Japanese date/ time, etc.) is displayed below the clock on the Stand-by display.
- Depending on the networks overseas, the time difference might not be corrected.

#### Information

- Unless Set Time is set, the functions which use the clock such as Schedule do not work correctly. Further, the date/time for redial items and received call records are not stored.
- The set time is retained even when the battery pack is replaced, however, it might
  be reset if the battery pack is left removed for a long time. In that case, charge the
  FOMA phone and then perform the clock setting.
- The sub clock is not displayed while "Set time" is set to "Auto time adjust OFF" or in Japan.
- This function supports clock settings from 00:00 on January 1, 2007 through 23:59 on December 31, 2037.

## <World Time Watch>

# **Displaying World Time**

You can display the time of the specified area under the Stand-by display clock.



#### Information

 World Time Watch does not appear when "Display setting" → "Clock" → "Clock display" is set to "OFF", or when you use the FOMA phone overseas.

## **Summer Time**

You can advance the time displayed for the overseas country you stay and for a region of World Time Watch by one hour.

Settings Clock Summer time ON or OFF

## <Caller ID Notification>

# Notifying the Other Party of Your Phone Number

You can set the FOMA phone to send your phone number to the called party's phone when dialing. Your phone number is important information, so take utmost care when notifying your phone number. This function is available only when the other party's phone supports Caller ID.

### Set Caller ID Notification to Network



You can set whether to notify your caller ID on the network.

Service Caller ID notification ► Do the following operations.

Item	Operation/Explanation	
Activate	► ON or OFF	
Check setting	You can check the setting contents of "Activate".	

## Set Caller ID Notification when Making a Call

Each time you dial out, you can set whether to notify your caller ID.

Enter a phone number or

> bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

FUNC ) Notify caller ID Don't notify or Notify caller (OFF or ON)

• To release "Notify caller ID", select "Cancel prefix". Whether to notify or not follows the setting for "Activate" of "Caller ID notification".

## Set "Notify/Not Notify" by Entering "186/184"

You can select whether to notify the other party of your phone number also by entering "186"/"184" before the other party's phone number.

## To notify your caller ID

186→Destination phone number or ( o ) ( Dial )





Press (☑)(V. phone) to make a videophone call.

### Not to notify your caller ID

184→Destination phone number or (□)(□ Dial )



Press (☑)(V. phone) to make a videophone call.

#### Information

- When you make a call and hear the guidance requesting your caller ID (see page 382), follow the steps of "To notify your caller ID" to enter "186" and redial.
- You cannot set "Caller ID notification" while " " is displayed.

## <Own Number>



# **Checking Your Own Number**

Your phone number (own number) is stored on the UIM.



#### Information

- In Dual Mode of 2in1, you can switch between Number A and Number B by pressing ( ) (Change ) from the Own Number display. " appears for Number A, and " appears for Number B.
- When you replace a UIM with another one (2in1 contractor → 2in1 contractor) while using 2in1, perform "2in1 function OFF" (see page 388) and then set "2in1 setting" to "YES", or perform "Auto acquire No. B" (see page 356), to acquire the correct Number B.

When you replace a UIM with another one (2in1 contractor → 2in1 non-contractor), perform "2in1 function OFF" as well to update the owner's information to the correct one.



# **Voice/Videophone Calls**

Making Calls/Videophone Calls	
About Videophone	50
Making a Call/Videophone Call	50
Switching between a Voice Call and Videophone Call	53
Using Call Records (Redial) (Dialed Calls) (Received Calls)	54
Setting Chaku-moji	57
Sending Touch-tone Signals Quickly Pause Dial	59
International CallsWORLD CALL>	59
Setting for International Calls International Dial Assist	60
Storing Numbers to be Added to the Beginning of a Phone Number	
	61
Making a Call with Specified Sub-address	
Sub-address Setting>	62
Setting Alarm for Reconnecting Reconnect Signal	62
Reducing Surrounding Noise to Make Voice Clear	
	62
Switching to Hands-free	62
Using Hands-free Compatible Devices (In-Car Hands-free)	63
Receiving Calls/Videophone Calls	
Receiving a Call/Videophone Call	63
Switched between a Voice Call and Videophone Call by the Other Party	65
Setting Response of Key Operation for Answering Incoming Calls	
	65
Setting Response for when Opening FOMA Phone during Ringing	
(Setting when Opened)	66
Setting Response for when Closing FOMA Phone during a Call	
(Setting when Folded)	66
Adjusting Earpiece Volume	66
Adjusting Ring Volume Ring Volume	67
-	

When You Cannot or Could not Answer the Call Putting an Incoming Call on Hold when You cannot Answer at Once	
	67
Putting a Call on Hold during a Call	67
Setting Hold ToneSet Hold Tone> Using Public Mode (Drive Mode)	68
Public Mode (Drive Mode)	68
Using Public Mode (Power Off) «Public Mode (Power Off)»	69
If You could not Answer an Incoming Call Missed Call Recording Voice/Video Messages when You cannot Answer the Call	70
	70
during Ringing	7
(Play/Erase Messages) (Play/Erase Videophone Messages)	72
Making Full Use of Videophone Calls	
Using Chara-den	73
Useful Functions for Videophone Calls	74
Setting Videophone Hands-free Hands-free with Videophone	70
Setting Image Quality for Videophone Calls (Visual Preference)	70
Changing Image Displays for Videophone Calls Select Image Redialing as a Voice Call when a Videophone Call cannot be	70
Connected	7
Setting for Switching between a Voice Call and a Videophone Call	
	7
Selecting Response to Incoming Videophone Calls during i-modeVideophone while Packet	78
Connecting FOMA Phone to External Devices to Use Videophone	٠,

## **About Videophone**

Between the DoCoMo phones which support videophone calls, you can talk while viewing sending/receiving images. By default, the substitute image is displayed at the position of the sending image.

This FOMA phone has no inward-facing camera. Therefore, the image sent to the other party is a Chara-den image, still image, or image being shot by the outward-facing camera.

PRO "You cannot send the images through your camera because neither the outward-facing camera nor inward-facing camera is mounted.

DoCoMo videophones conform to 3G-324M, standardized by the international standard 3GPP. You cannot connect to the videophone that uses a different format.

#### •3GPP (3rd Generation Partnership Project):

This is the regional standards organization for developing common technical specifications for third-generation mobile telecommunication systems (IMT-2000).

#### •3G-324M:

This is the international standard for the third generation of mobile videophones.

• This FOMA phone supports only 64 kbps communication speed of videophone dialing. You can talk but cannot make a videophone call at 32 kbps communication speed.

#### ■ Display during videophone calls

- Receiving image (Image through the other party's camera or substitute image)
- 2 ··· Sending image (Substitute image or image through your camera)
- **❸**···Call duration
- : 64K communicating : 32K communicating
- : Voice sending/ receivina
- (gray): Voice sending/ receiving failed\*1
- : Image sending/ receiving
- (gray): Image sending/ receiving failed\*2
- : Substitute image sending Camera image sending Chara-den talking



Mode



¾1 When voice sending fails, the other party cannot hear your voice. When voice receiving fails, you cannot hear the other party's voice.

 
\*2 When image sending fails, the sending image is not displayed at the other end. When image receiving fails, the receiving image is not displayed.

When voice or image sending/receiving fails, it does not recover automatically. You need to make a videophone call again.

# Making a Call/Videophone Call

- Enter the other party's phone number, starting with the city code.
  - When 27 or more digits are entered, the lower 26 digits only are displayed.
  - To store an entered phone number in the Phonebook, press (MENU) (Store). Go to step 2 on page 84.
  - Even when you are dialing within the same area, you need to enter the city code before the phone number. <Example>





090-XXXX-XXXX 080-XXXX-XXXX

Other party's phone number (11 digits)

N9NXXXXXXXX

« Dial

To make calls to PHS



Other party's phone number (11 digits)



# When Making a Voice Call

Press or (Dial).

• "\mathbb{E}" blinks during dialing, and lights during a call.



## When Making a Videophone Call

Press  $igtimes_{ extstyle (V. phone)}$ .

- "F" blinks during dialing and lights during the call.
- During a videophone call, you can press
- (Simage) to display the image through your camera at the other party.

To resume the substitute image, press (Subst.) again.



The digital communication charging starts from this display.

Press 🗃 to end the call after talking.

#### Information

- If you hear the guidance requesting your caller ID (see page 382), follow the steps of "To notify your caller ID" on page 47 to enter "186" and redial.
- When the Flat-plug Earphone/Microphone with Switch (option) is connected, you
  can hear the other party's voice from the earphone. (See page 362)
- If you close the FOMA phone during a call, the FOMA phone works in accordance with the setting of "Setting when folded". (See page 66)
- You can press numeric keys to send touch-tone signals during a call. During a Chara-den call, you need to switch to DTMF Transmission Mode. (See page 75)
- In Dual Mode of 2in1, you can make a call after selecting Number A or Number B. (See page 389)

#### <For Voice Calls>

 You can make a voice call also by pressing and then entering the party's phone number. If you enter a wrong number, press to clear the display and then redial.

#### <For Videophone Calls>

- Just after purchase, Hands-free is automatically activated by "Hands-free w/ V. phone" (see page 76). However, Hands-free is deactivated during Manner Mode regardless of "Hands-free w/ V. phone".
- When you make a videophone call with substitute image, note that you will still be charged for the digital communication, not the voice calls.
- If you make a videophone call at 110/119/118 from the FOMA phone, it is automatically dialed out as a voice call.
- You can send a Chara-den image to the other party instead of the substitute image. (See page 73)
- The international videophone call is available using the DoCoMo international call service "WORLD CALL". (See page 59)

## Display during dialing

The other party's name and icon are displayed if the party's phone number and name are stored in the Phonebook. However, the image is not displayed even if it is stored in the Phonebook.

- If the same phone number is stored with multiple names in the Phonebook, the name that comes first in the search order (see page 86) is displayed.
- The phone number instead of the name is displayed if the Phonebook entry is stored as secret data or if Personal Data Lock is activated.

## If you entered a wrong phone number

Each time you press CLR, the digit on the far right is cleared. If you press and hold CLR for at least one second, all the digits are cleared and the Stand-by display returns.

Press to move the cursor to the digit you want to clear, and then press to clear it. To clear all the digits on and to the right of the cursor, press and hold to rat least one second.

## If a videophone call could not be connected

The reason why it could not be connected is displayed. (The displayed reason might not be the same as the actual reason depending on the type of the other party's phone and contract for network services.)

Messages	Reasons
Check number, then	You have dialed a non-existent phone number.
redial	
Busy	The other party is busy. (Depending on the receiver's phone, this message might be displayed during packet communication as well.)
Busy with packet transmission	The packet communication is progress at the other end.
Out of service area/ power off	The other party's phone is out of the service area or turned off.
Set caller ID to ON	Your caller ID is not notified. (when dialing "visualnet", etc.)
Your call is being forwarded	During forwarding
Redial using voice call	The other party activates Call Forwarding Service but the forwarding destination phone does not support videophone calls.
Upper limit has been exceeded Connection failed	The upper limit for the plan with the limit function (Type Limit, Family Wide Limit) is exceeded.
Please make your call from the i-mode web page	You did not make a videophone call from the IP (Information Provider) site among i-mode official sites (at dialing to V-live).
Connection failed	Redial after setting "Activate" of "Caller ID notification" to "ON".  • This may appear in the case other than above.

## **Auto-redialing**

If "Voice call auto redial" is set to "ON", and a videophone call is not connected, a voice call is automatically made.

- Videophone calls cannot be connected to the phones that do not support the videophone function, or to the phones that are out of the service area or turned off even if they are videophones. If you have set "Voice call auto redial" to "ON" and attempt to dial a phone that does not have the videophone function, the number will be redialed as a voice call. However, this operation might not work if you call an ISDN-synchronous 64K or PIAFS access point or an ISDN videophone that does not support 3G-324M (as of December 2007), or if you dial the wrong number. Note that you could be charged for the communication.
- Once the videophone call has started communications, redialing as a voice call will not be made.

## **Function Menu while Entering Phone Number**

Function menu	Operation/Explanation
Notify caller ID	See page 47.
Prefix numbers	See page 62.
Int'l dial assist	See page 60.
Select image	See page 77.
Multi number	You can select a phone number to be notified to the other party. (See page 386.)
Add to phonebook	See page 84.
Compose message	You can compose a mail message to send to the phone number set as the destination address. Go to step 3 on page 182.
Chaku-moji	See page 57.

# Switching between a Voice Call and Videophone Call

You (caller) can switch between a voice call and a videophone call. This function is available for the mobile phones that can switch between a voice call and a videophone call.

## Switch from a Voice Call to Videophone Call

When the other party's phone has a function to switch between the calls, "I. phone" is displayed on your phone and you can switch from the voice call to videophone call.

During a voice call ► (V. phone) ► Change



- When you select an image to be sent to the other party, select "Select image".
   Go to step 2 on page 77.
- When "Cancel" is selected, the FOMA phone cancels switching and returns to the voice call.
- While switching, the voice guidance is played back.

## Switch from a Videophone Call to Voice Call

When the other party's phone has a function to switch between the calls, you can switch from the videophone call to voice call by selecting "CHG to voice call" from the Function menu.

During a videophone call ► (FUNC )
► CHG to voice call ► YES



- Select "NO" on the confirmation display to stop switching and to resume the videophone call.
- While switching, the voice guidance is played back.

#### Information

- You can switch between a voice call and a videophone call repeatedly.
- When i-mode or packet communication is in progress, the communication is disconnected and then the voice call is switched to the videophone call.
- When packet communication is in progress at the other end, the message to the
  effect that the communication cannot be switched is displayed and the voice call
  continues without switching to the videophone call.
- You cannot switch from the voice call to the videophone call while "Multi calling" is displayed during the call if you have signed up for Call Waiting Service.
- It takes about five seconds to switch. Switching may take a longer time depending on the radio wave conditions.
- Depending on how the caller's phone is working or on the radio wave conditions, switching between a voice call and videophone call may fail and the connection may be cut off.
- If you switch between the voice call and videophone call during a call, the call duration and call
  cost are counted respectively for the calls. You are not charged while "Changing" is displayed.

#### Information

- You cannot switch between the videophone call and voice call unless "Notify switchable mode" is set to "Indication ON" at the other end. See page 77 for "Notify switchable mode".
- When you switch a videophone call to voice call, Hands-free is deactivated.

## <Redial> <Dialed Calls> <Received Calls>

# **Using Call Records**

The FOMA phone can store the other party's phone number and date/ time you have dialed or received. You can call back to the other party.

#### ■ Redial

Up to 30 records of dialed voice calls and videophone calls are stored in total, and the older record of dialing to the same phone number is deleted.

#### Dialed Calls

Up to 30 records of dialed voice calls and videophone calls are stored in total, and up to 30 records of 64K data and packet communications are stored in total as well. The older records of dialing to the same phone number are also retained.

#### ■ Received Calls

Up to 30 records of incoming voice calls and videophone calls are stored in total, and up to 30 records of 64K data and packet communications are stored in total as well. The older records coming from the same phone number are also retained.

- When a call is switched between a voice call and a videophone call, the call that is dialed/received first is stored.
- When more than 30 calls are dialed, the older records are automatically deleted.
   Even if you turn off the FOMA phone, call records are not deleted.
- In Dual Mode of 2in1, up to 60 redial items, 90 dialed call records, and 120 received call records for Number A and Number B are stored in total.

#### ■ Icons for Redial, Dialed Calls, and Received Calls

□ (•PHONE / □ (•MISS **	Dialed and received calls/missed calls of voice call
EMPHONE / EM MISS *	Dialed and received calls/missed calls of videophone call
<b>PER MSG</b>	Voice/Video messages are recorded on Record Message
■@PHONE / ■@MISS **	Dialed and received calls/missed calls of international call
ESPHONE / ESS *	Dialed and received calls/missed calls of international videophone call
<b>⊠</b> ⊉z	Dialed calls of 64K data communication
<u>1</u> 64K / <u>1</u> MISS *	Received calls/missed calls of 64K data communication
<b>≥</b>	Dialed calls of packet communication

□+PACKET / □+ MISS **	Received calls/missed calls of packet communication
CONNECT	Received calls of 64K data communication and packet communication when no external device is connected
₾	Received Chaku-moji message
•	Records with time difference corrected
₽B	Records for Number B (only in Dual Mode of 2in1)

<sup>\*</sup> The unchecked missed call icons are highlighted.

## Use Redial/Dialed Calls

When Using Redial Press O.

## When Using Dialed Calls

► Phonebook Dialed/recv. calls

Dialed calls

The list for call records is displayed.

• Press (MENU) (Change) to display the Sent Address List.



## Select a call record.

 
The detailed display for the call record is displayed.

 When the other party is stored in the Phonebook, the phone number, name, and icon are displayed. If the same phone number is stored with multiple names in the Phonebook, the name and icon that come first in the search order (see page 86) are displayed.



## **Use Received Calls**





- . . All the records including missed calls Missed calls
- . . The records of missed calls only

In Dual Mode of 2in1, the number of missed calls for Number A and Number B is displayed respectively.

(If unchecked missed calls are found, the number of them is displayed.)

• Press (Change) to display the Received Address List.

## Select a received call record.

 The other party's phone number is displayed if it is provided.
 If this caller is stored in the Phonebook, the phone

number, name, and icon are displayed. If the same phone number is stored with multiple names in the Phonebook, the name and icon that

come first in search order (see page 86) are displayed. If there is a call for packet communication, the sender's access point name (APN) is displayed.

When the other party's phone number is not notified, the reason for no caller ID is displayed.

- For missed calls, the ring time is displayed on the right of the received date/ time.
- When a Chaku-moji message is received, it is displayed.

# To make a call to a displayed redial item, dialed call record, or received call record

Press (3) to make a voice call. You can make a voice call also by pressing (0) (1) from the detailed display. Press (2) (1) phone to make a videophone call.

## Information

 You can make a voice call to the most recently dialed or received number by pressing from the Stand-by display and then .



m is displayed.)
t.

Received calls 2/7
11/15(Sat) 9:50

DoCoMo Taro

DDDDXXXXXXXXXXXXX

Detailed Received
Call display

#### Information

- When you make/receive a call with an additional number of Multi Number, the stored name for the additional number is displayed below the phone number on the detailed display. If you store a phone number for "Number setting" of "Multi number", the phone number is displayed as well.
- Even if you make a voice call (or videophone call) to the phone number in a received call record with a Chaku-moji message displayed, the received Chaku-moji message is not sent.
- When a call comes in from a party who uses a dial-in phone number, a different phone number might be displayed.

## Function Menu while Redial/Dialed Calls/Received Calls is Displayed

Function menu	Operation/Explanation	
Notify caller ID	See page 47.	
Prefix numbers	See page 62.	
Int'l dial assist	See page 60.	
2in1 dial	You can select a phone number to be notified to the other party in Dual Mode of 2in1. (See page 389)	
Multi number	You can select a phone number to be notified to the other party. (See page 386)	
Chaku-moji	See page 57.	
Character size	You can switch the character size for the list between Large and Standard.  • The setting here applies to "Dialed/recv. calls" of "Character size".	
Add to phonebook	d to phonebook See page 84.  • You can store the phone number in the Phonebook also by pressing (Store) from the detailed display. Go to step 2 on page 84.	
Feel * Talk	*Talk See page 109.	
Ring time [Received Call List only]	You can display the ring time for missed calls. Even if you have set "Missed calls display" of "Ring time" to "Not display", the missed calls which stopped ringing within the ring start time and their ring times are displayed.	
Add desktop icon	dd desktop icon See page 114.	

Function menu	Operation/Explanation	
Compose message	You can compose a mail message to send to the phone number set as the destination address.  Go to step 3 on page 182.	
Compose SMS	You can compose an SMS message to send to the phone number set as the destination address.  Go to step 3 on page 224.	
Sent address [Redial/Dialed Calls only]	See page 209.	
Received address [Received Calls only]	See page 209.	
Delete this	▶YES	
Delete selected ▶ Put a check mark for redial items, dialed call recorded received call records to be deleted ▶ ( Finish ) ▶		
Delete all	e all ►Enter your Terminal Security Code ►YES	
Select image	ect image See page 77.	

#### Information

- <Delete this> <Delete selected> <Delete all>
- If you execute "Delete all" from the Function menu of Redial/Dialed Calls, all
  records in both Redial and Dialed Calls are deleted. Even if you execute "Delete
  this" or "Delete selected" of Redial, the records are not deleted from Dialed Calls
  and they are retained. To delete the dialed call records, delete them from the
  Function menu while "Dialed calls" is displayed.

# Setting Chaku-moji

 
When making a voice call or videophone call, you can send your text message to tell the subject during calling.

- For details on Chaku-moii or compatible models, refer to DoCoMo web page or "Mobile Phone User's Guide [Network Services]".
- The sending end is charged, but the receiving end is not charged.

### When a Chaku-moji message is received

A Chaku-moji message is displayed below a caller. The Chaku-moji message is stored in Received Calls as well.

- The Chaku-moji message is displayed only during ringing. It is not displayed during a call.
- ring start time set by "Ring time", it is received and recorded in Received Calls.



- "Called" on page 104 is set to "ON".
- The Chaku-moji message is not displayed during Lock All, Omakase Lock, or Personal Data Lock. However, you can check the Chaku-moji message from Received Calls after the lock is released.

## Store Chaku-moji Messages

You can store up to 10 Chaku-moji messages in the Message List.

- MENU Service Chaku-moji Create message
  - ► Highlight <Not stored> and press (☑)(
  - Enter a message.
  - To edit a stored message, highlight it and press (☑)( Edit ).
  - You can enter up to 10 characters regardless of whether they are pictographs, symbols, or full-pitch/half-pitch characters.

## Make a Call with a Chaku-moji Message

Enter a phone number

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

FUNC ) Chaku-moii Do the following operations.

Function menu	Operation/Explanation	
Create message	You can create a Chaku-moji message just before dialing.  Enter a message.  You can enter up to 10 characters regardless of whether they are pictographs, symbols, or full-pitch/half-pitch characters.  The Chaku-moji message created using this function is not stored in the Message List.	
Select message	From the Message List, you can select the stored Chaku-moji message.  > Select a message.	
Sent messages	From the Sent Message List, you can select a Chaku-moji message to be sent. Up to 10 sent Chaku-moji messages only are stored in the Sent Message List. If you send the same Chaku-moji message, the older one is deleted. When the number of sent Chaku-moji messages exceeds 10, the messages are deleted from the oldest one.  Select a sent message.	



N9NXXXXXXXX





- Press (☑)(V. phone) to make a videophone call.
- The Chaku-moii message being sent is displayed during dialing.

## Information

- When a Chaku-moji message has arrived at the other party's phone, "Transmission completed" is displayed, and you are charged a transmission fee.
- When a Chaku-moji message does not arrive at the other party's phone such as when the other party's phone is not a Chaku-moji compatible mobile phone or the call is not allowed by "Message disp. settings" at the receiving end, "Transmission failed" is displayed. In this case, you are not charged a transmission fee.
- Depending on the radio wave conditions, the transmission result may not be displayed at the sending end even if a Chaku-moii message has arrived at the other party's phone. In this case, you are charged a transmission fee.
- Even if you make a call sending a Chaku-moji message, the Chaku-moji message is not displayed and you are not charged a transmission fee (the call is not recorded in Received Calls at the receiving end) when the other party's phone is out of the service area, turned off, during Public Mode (Drive Mode), or the ring time for Record Message Setting is set to zero seconds. Also, the transmission result is not displayed at the sending end.

## Information

- When a videophone call is not connected and automatically dialed as a voice call, the Chaku-moji message is resent as well.
- You cannot send/receive Chaku-moji messages overseas.

 
## **Detailed Sent Message**

Up to 10 sent Chaku-moji messages are stored in Sent Messages, and you can check for the other party's phone number and the date/time the Chaku-moji messages were sent. Older messages sent to the same phone number are also retained.

 In Dual Mode of 2in1, up to 10 records for Number A and Number B can be displayed in total.



....Chaku-moji message successfully sent
....Chaku-moji message unsuccessfully sent
....Chaku-moji message for Number B (only



- displayed.
   Depending on the radio wave conditions, the transmission result might not be displayed correctly.
- Select a sent message.
  - When the other party's phone number is stored in the Phonebook, the phone number, name, and icon are displayed.



Sent messages 1/2

□11/15 9:50 PNO

E11/15 9:30 Meeting

## Function Menu while Detailed Sent Message is Displayed

Function menu	Operation/Explanation	
Store	You can store a sent Chaku-moji message in the Message List.  ► <not stored="">  • You can store also by pressing (Store).</not>	
Delete this	►YES	
Delete all	► Enter your Terminal Security Code ➤ YES	

## **Message Display Settings**

You can set how incoming Chaku-moji messages are displayed.

Service Chaku-moji

Message disp. settings ➤ Select an item.

Display all messages . . . Displays Chaku-moji messages from all callers.

Numbers stored in PB . . Displays Chaku-moji messages only from the callers stored in the Phonebook.

Calls with callerID . . . . Displays Chaku-moji messages only from the caller notifying his/her phone number.

Hide all messages . . . . Does not display Chaku-moji messages.

#### Information

When you set to "Numbers stored in PB", you cannot receive Chaku-moji
messages from the callers stored in the Phonebook B in A Mode of 2in1 (and vice
versa).

## Prefer Chaku-moji

You can set how your FOMA phone works for incoming Chaku-moji messages for when "Setting when opened" is set to "Answer".



**ON** . . . . Does not answer by opening the FOMA phone during ringing, so you can check a Chaku-moji message.

**OFF** . . . Answers by opening the FOMA phone during ringing.

<Pause Dial>



# **Sending Touch-tone Signals Quickly**

You can send touch-tone signals from your FOMA phone to use services such as reserving tickets, checking bank balance, etc.

### Store Pause Dial

You need to store a number string to be sent as a touch-tone signal in the Pause Dial List. If you have inserted a pause (p), you can send a number string breaking at the point where the pause is inserted.

Settings Other settings Pause dial

- When a number string is already stored, it is displayed.
- To delete a stored pause dial, press (■R)( FUNC ) and select "Delete", then select "YES".

# Enter a number string.

- Enter the pause (p) by pressing and holding  $\maltese$  for at least one second.
- You can use only O through ♀, #, ★ to enter a number string and the pause (p).
- You can enter up to 128 digits.
- You cannot enter a pause (p) at the beginning and end of a number string, or enter it consecutively.

## **Send Pause Dial**

Settings Other settings Pause dial

(Send ) Enter a phone number

a or (Dial)

A voice call is made. Once the line is connected, a number string stored in Pause Dial is displayed up to the first pause (p).

- When the other party's phone number is stored in the Phonebook, you can retrieve it selecting from the Search Phonebook display by pressing .
- You can search for the phone number also from Received Calls by pressing or from Redial by pressing o.

## Check that the line is connected



A number string up to the first pause (p) is sent, and a number string up to the next pause (p) is displayed.

A number string up to the pause (p) is sent each time you press or or (Send).

When you have finished sending the last number, the "Talking" display appears.

 To send multiple pieces of a number string at a time, press and hold of for at least one second, and select "Send at one time".

#### Information

- During a call, you can send a number string also by displaying the Function menu of the Pause Dial display.
- Some devices on the receiving end cannot receive signals.
- You cannot send a number string with pauses during a videophone call.

# <world call> International Calls

WORLD CALL is the international call service available from DoCoMo mobile phones.

When you have signed up for FOMA service, you have contracted to use "WORLD CALL" (except those who have applied not to use it).

- You can call about 240 countries and regions.
- The WORLD CALL charges are added to your monthly FOMA bill.
- The application/monthly fee is free of charge.
- Changes in procedures for international call
- "My Line" service is not available for mobile communications such as mobile phones, so cannot be used with WORLD CALL. However, in conjunction with the launch of "My Line" service, the dialing procedure for international calls from mobile phones has changed. Note that the old way of dialing (the way without "010" from the operation of "Enter a Phone Number to Make an International Call") no longer works.
- The service is not available with some billing plans.
- Contact "DoCoMo Information Center" on the back page of this manual for inquiries about WORLD CALL.
- $\bullet$  When using international carriers other than DoCoMo, contact them.

## About international videophone calls

You can make international videophone calls to the other party who uses a specific 3G mobile phone overseas. Press (V, phone) instead of or (0)(0ial) in the steps of "Enter a Phone Number to Make an International Call". (See page 60)

- For the information about connectable countries and telecommunications carriers, refer to the DoCoMo Global Service web page.
- Images sent from the other party may blur on your FOMA phone or you may not be able to connect, depending on the other party's phone used for the international videophone call.

## **Enter a Phone Number to Make an International Call**

- Tenter numbers in order of 009130→010→country code

  →area code (city code)→destination phone number
  - or (Dial )
  - When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.
  - Press (☑)(V. phone) to make an international videophone call.

## Use "+" to Make an International Call

When you enter a phone number for dialing or storing it in the Phonebook, press and hold of for at least one second to enter "+". You can use "+" to make international calls without entering an international call access code such as 009130-010.

- If you set "Auto assist setting" of "Int'l dial assist" to "ON", an international call access code of "IDD prefix setting" is automatically entered.
  - O(for at least one second)
    - Enter numbers in order of country code
    - →area code (city code) → destination phone number
    - or (Dial ) Dial
    - When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.
    - Press (☑)(V. phone) to make an international videophone call.
    - When you select "Dial with orig. No.", you can make a call without adding an international call access code.

#### International Dial Assist

You can make a call adding a country code or international call access code to a phone number. (Except for some countries and regions, if the phone number starts with "0", the "0" at the beginning is automatically deleted.)

# Enter a phone number

or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

- Press (☑)(V. phone) to make an international videophone call.
- When the beginning of the phone number is "+", you can select only an international call access code.
- When "Japan" is selected as a country name, the display for selecting a name is not displayed.

## <International Dial Assist>

# **Setting for International Calls**

## **Auto Assist Setting**

You can set whether to replace "+" at the beginning of a phone number with an international call access code for when you make an international call from Japan.

- Settings Network setting Int'l dial assist
  - ► Auto assist setting ► ON or OFF
  - ► Select a country name ➤ Select a name.
  - When no country code or international call access code is stored, the
    confirmation display appears asking whether to store it. Select "YES" and go
    to step 2 of "Country Code Setting" on page 61 for a country code, and go to
    step 2 of "IDD Prefix Setting" on page 61 for an international call access
    code.

## **Country Code Setting**

You can store up to 27 country codes to be added for making international calls from overseas.

- Settings Network setting
  Int'l dial assist Country Code set.
  - ► Highlight <Not recorded> and press (☑)
  - inginight (not receitable and press (
  - If you select a stored country name, you can check the stored contents.
- - You can enter a country name of up to 8 full-pitch/16 half-pitch characters.
  - ullet You can enter a country code of up to 5 digits. But you cannot use #,  $\frac{1}{2}$ , and
- **IDD Prefix Setting**

You can store up to three international call access codes to be added to the beginning of a phone number for making an international call.

- Settings Network setting
  - Int'l dial assist IDD prefix setting
  - ► Highlight <Not recorded> and press (□)( Edit ).
  - If you select the stored item, you can check the stored contents.
- Enter a name Enter an international call access code.
  - You can enter a name of up to 8 full-pitch/16 half-pitch characters.
  - You can enter an international call access code of up to 16 digits.

# Function Menu while Country Code Setting/IDD Prefix Setting is Displayed

Function menu	Operation/Explanation	
Edit	Go to step 2 of "Country Code Setting" on page 61 for Country Code Setting, and go to step 2 of "IDD Prefix Setting" on page 61 for IDD Prefix Setting.  • You can edit the item also by pressing (Edit ).	
Delete this	►YES	
Delete all	► Enter your Terminal Security Code ➤ YES	

#### Information

- <Delete this> <Delete all>
- You cannot delete the country code or international call access code set by "Auto assist setting".

## <Pre><Prefix Setting>

# Storing Numbers to be Added to the **Beginning** of a Phone Number

You can store prefix numbers such as international call access codes or "186"/"184" and add them to the phone number for dialing. You can store up to seven prefix numbers.

- Settings Network setting Prefix setting
   Highlight <Not recorded> and press (☐)( Edit ).
  - If you select a stored prefix, you can check the stored contents.
  - To delete a stored prefix, press [R]( FUNC ) and select "Delete this" or "Delete all" then select "YES". If you select "Delete all", you need to enter your Terminal Security Code.
- ¶

  ☐ Enter a name Enter a prefix number.
  - You can enter a name of up to 8 full-pitch/16 half-pitch characters.

#### **Prefix Numbers**

You can add a prefix number to the beginning of phone number when you make a call.

Enter a phone number

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

FUNC ) Prefix numbers Select a name **≤** or (□)( Dial )

<Sub-address Setting>

# Making a Call with Specified Sub-address

You can set whether to regard the numbers after "\( \times \)" of a phone number as a sub-address to access the specified phones or data terminals.

• The sub-address is a number assigned to identify each ISDN terminal connected to an ISDN line. It is also used for selecting contents on "V-live".

Settings ➤ Other settings ➤ Sub-address setting ON or OFF

#### Information

• Even if you set "Sub-address setting" to "ON", "X" at the top of phone numbers and "X" immediately after the prefix number or "186"/"184" are not regarded as sub-address mark-off symbols.

## <Reconnect Signal>



# **Setting Alarm for Reconnecting**

You can set an alarm that sounds until a voice call or videophone call is reconnected after disconnected owing to bad radio wave conditions.

MENU Settings Talk Reconnect signal Select an alarm.

#### Information

- The reconnectable time differs depending on the usage status and radio wave conditions. An estimate is about 10 seconds and the call charge is applied also for that duration
- While you are disconnected, no sound is transmitted to the other party.

#### <Noise Reduction>



## **Reducing Surrounding Noise to Make Voice Clear**

Settings ➤ Talk ➤ Noise reduction ➤ ON or OFF

#### <Hands-free>

## **Switching to Hands-free**

When you switch to Hands-free, sound such as the other party's voice is audible over the speaker.

# During a call

- When Hands-free is activated, " " is displayed.
- You can activate/deactivate also during dialing or connecting. Press again to deactivate Hands-free.
- The sound volume during a Hands-free call follows the setting specified by "Volume" (earpiece volume).
- You can switch to Hands-free even during Manner Mode. Also, you will still hear voice through the speaker even when you activate Manner Mode during a Hands-free call.

#### Information

- While the Flat-plug Earphone/Microphone with Switch (option) is connected, you cannot hear voice through the speaker even if you switch to Hands-free.
- Keep the FOMA phone well away from your ear during a Hands-free call. Otherwise you could affect or damage your hearing.
- Talk into the FOMA phone within a distance of about 50 cm.

#### <In-Car Hands-free>

# **Using Hands-free Compatible Devices**

You can make or receive voice calls from a Hands-free compatible device such as In-Car Hands-Free Kit 01 (option) or a car navigation system by connecting with your FOMA phone.

You can connect your FOMA phone to a Hands-free compatible device.

- Connect using a cable (USB connection):
- To use/charge via the In-Car Hands-Free Kit 01 (option), you need to have the FOMA In-Car Hands-Free Cable 01 (option).
- \* For how to operate Hands-free compatible devices, refer to the respective instruction manuals

#### Information

- To connect using a cable (USB connection), set "USB mode setting" to "Communication mode"
- "" appears while you are talking or communicating using a USB Hands-free compatible device.
- "" might appear while the FOMA phone is connected to a USB Hands-free compatible device, and "E" while "USB mode setting" is set to "microSD mode", depending on the Hands-free device connected.
- The display or ring tone for incoming calls follows the settings of the FOMA phone.
- When the sound is set to output from a Hands-free compatible device, the ring tone sounds from that device even when Manner Mode is activated or "Ring volume" of the FOMA phone is set to "Silent".
- The receiving operation in Public Mode (Drive Mode) works in accordance with the "Public (Drive) mode" setting.
- The receiving operation while Record Message is activated works in accordance with the "Record message setting" setting.

#### Information

• When the sound is set to output from the FOMA phone, the FOMA phone works in accordance with "Setting when folded" if it is closed during a call. When the sound is set to output from a Hands-free device, the communication state does not change regardless of "Setting when folded" even if you close the FOMA phone.

# Receiving a Call/Videophone Call

- When you receive a call, the ring tone sounds and the Call/Charging indicator flickers.
  - To vibrate the FOMA phone for incoming calls, set "Phone" or "Videophone" of "Vibrator" to other than "OFF".
  - When receiving a videophone call, "Incoming V.phone" is displayed.
  - " [ w ] " is displayed at the upper left of the phone number for incoming international calls.



(See page 57)

For Answering a Voice Call Press or ( )(Answer ) to answer the call.



## For Answering a Videophone Call

# Press or (Answer) to answer the videophone call.

You can send the substitute image to the other party.

Press during a call to switch between the substitute image and image through your camera for sending to the other party.



Press 🖀 to end the call after talking.

### Information

- If you close the FOMA phone during a call, the FOMA phone works in accordance with the setting of "Setting when folded". (See page 66)
- You might hear beeps (in-call ring tone) during a call.

If you have signed up for any of Voice Mail Service, Call Waiting Service, or Call Forwarding Service and set "Arrival call act" to "Answer", the beeps (in-call ring tone) will sound for another incoming call, enabling you to do the following operations:

Voice Mail Service

- ... Transfer the call to the Voice Mail Service Center. (See page 377) Call Waiting Service
- ... Put your current call on hold and answer the incoming call. (See page 378) Call Forwarding Service
- $\dots$  Transfer the call to the registered forwarding destination. (See page 381)
- You can set "Reject unknown" not to accept calls from the phone numbers not stored in the Phonebook.

#### Information

#### <For Voice Calls>

• When "Answer setting" is set to "Any key answer", the call is placed on hold if you answer the call by pressing (a) with the FOMA phone closed. If you have set "Setting when folded" to "No tone" or "End the call", the other party hears nothing, and if you have set "Setting when folded" to "Tone on", the call hold tone is played back. You can start talking by opening the FOMA phone.

#### <For Videophone Calls>

- Just after purchase, Hands-free is automatically activated during a videophone call as "Hands-free w V. phone" has been set to "ON". (See page 76) However, Hands-free is deactivated during Manner Mode regardless of "Hands-free w V. phone".
- Even if Call Forwarding Service is set to "Activate", the call is not forwarded unless the forwarding destination is a phone compatible with the videophone conforming to 3G-324M (see page 50). Check the phone you are forwarding the call to and then activate the service. The videophone caller does not hear the guidance to the effect that the call is forwarded. (The message to the effect that the call is to be forwarded appears, depending on the receiver's FOMA phone.)
- If a videophone call comes in from the phone number to be rejected by Nuisance Call Blocking Service, the video guidance for Call Rejection is played back and the call is disconnected.
- You can send a Chara-den image to the other party instead of the substitute image. (See page 73)

## Display for incoming calls

#### When a caller's phone number is provided

If you store the caller's name, phone number, and image in the Phonebook, the name, phone number, and icon (or image) are displayed.

- If the same phone number is stored with multiple names in the Phonebook, the name that comes first in the search order (see page 86) is displayed.
- The phone number but not the name is displayed during Personal Data Lock.
- For a forwarded call, the forwarder's phone number is displayed below the caller. (It might not be displayed in the case of some forwarders.)
- When you receive a call to an additional number of Multi Number, the stored name for the additional number is displayed below the caller. (With a forwarded call, you can press (a) (Change) to switch to display of the forwarder.)

#### When a caller's phone number is not provided

The reason for no caller ID is displayed. (See page 129)

Function menu	Operation/Explanation	
Call rejection	You can disconnect the call without answering.  • You cannot execute "Call rejection" if you set "Setting when opened" to "Answer" and the call is received with the FOMA phone closed.	
Call forwarding	See page 381.	
Voice mail	See page 377.	

# Switched between a Voice Call and Videophone Call by the Other Party

When you have set "Notify switchable mode" to "Indication ON", the caller (the other party) can switch between a voice call and videophone call.

When the caller (the other party) switches between a voice call and videophone call, the message telling that the call is being switched appears, the voice guidance is played back, and then the call is switched.

You (receiving end) cannot switch between a voice call and videophone call.

## <Answer Setting>



 
# **Setting Response of Key Operation for Answering Incoming Calls**

You can set to start talking (Any key answer) or to stop the ring tone (Quick silent) by pressing a key besides and for when a call comes in.

# Settings Incoming call Answer setting Select a key operation.

#### Any key answer

You can start talking by pressing any key shown below:



• When receiving a videophone call, you can start talking by pressing ( ) or

#### Quick silent

You can stop the ring tone, vibrator, or voice guidance by the key operations below:

When "Setting when opened" is set to "Keep ringing", you can stop the ring tone, vibrator, or voice guidance also by opening the FOMA phone. Even if you stop it, the other party hears a calling tone.

Voi	ce call	
Vide call	eophone	$\bigcirc$ through $\bigcirc$ , $\bigcirc$ , $\#$ , $\bigcirc$ LR, $\bigcirc$ *2, $\bigcirc$ , $\blacktriangle$

• After you stop the ring tone, vibrator or voice guidance by the key operation above, you can press or to start talking.

## OFF

You can start talking by pressing a key shown below:

Voice call Videophone	0, 😩
call	

- \*\*1 You can start talking also by pressing when five record messages have already been recorded.
- ※2 While "Change" is displayed, you cannot start talking or stop the ring tone, vibrator or voice guidance.

#### Information

• While the Flat-plug Earphone/Microphone with Switch (option) is connected, you can press the switch to start talking, regardless of "Answer setting". (See page 362)

## <Setting when Opened>

## **Setting Response for when Opening FOMA Phone during Ringing**

Settings Incoming call Setting when opened Select an incoming type Keep ringing or Answer

## Information

• If you receive a videophone call with "Answer" set, the still image set for "Substitute image" of "Select image" is sent to the other party.

## <Setting when Folded>



# Setting Response for when Closing FOMA Phone during a Call

MENU Settings Talk Setting when folded Select an item.

The voice is muted. The hold tone does not sound. The setting is completed.

**Tone on ......** The other party hears the hold tone set for "Holding tone" of "Set hold tone" while the FOMA phone is closed.

End the call . . . The call is finished. This is the same operation as pressing during a call. The setting is completed.

## Speaker ON or Speaker OFF

Speaker ON . . . . The hold tone sounds from the speaker.

Speaker OFF . . . The hold tone does not sound from the speaker.

#### Information

- This function is disabled when the Flat-plug Earphone/Microphone with Switch (option) is connected. The communication state does not change even if you close the FOMA phone during a voice call. If you close the FOMA phone during a videophone call, the substitute image is sent to the other party with the line connected.
- If you close the FOMA phone during a videophone call with "No tone" set, substitute image is sent to the other party. When "Tone on" is set, the still image set for "Holding" of "Select image" is sent.
- If you set to "No tone" or "Tone on", "Holding" is displayed on the Private window when the FOMA phone is closed.

#### <Volume>

# **Adjusting Earpiece Volume**

[MENU] Settings Talk Volume Use (☐) or 🔼 / 🔻 to adjust the earpiece volume.

Adjust the earpiece volume to Level 1 (minimum) through Level 6 (maximum). During a call or calling, you can press ☐ or ▲/▼ to adjust the volume, and while entering a phone number, you can press and hold ( (for at least one second) to adjust it. Press □ or △/▼ within two seconds to adjust it.

## Information

- The earpiece volume adjusted during a call is retained even after the call ends.
- When you adjust the earpiece volume, the sound volume during a Hands-free call is also adjusted.

## <Ring Volume>



# **Adjusting Ring Volume**

You can adjust the ring volume for incoming calls and mail.

# **1** MENU ► Settings ► Sound ► Ring volume

- Select an incoming type
- ►Use ( to adjust the volume.
- Following icons are displayed on the Stand-by display while the ring volume is set to "Silent":
- 5): The ring volume for voice calls or videophone calls is "Silent".
- 5x: The ring volume for mail, chat mail or Messages R/F is "Silent".
- The ring volume for voice calls or videophone calls is "Silent" and the ring volume for mail, chat mail, or Messages R/F is "Silent".
- If you have set "Step", the ring tone is silent for about three seconds, and then
  the volume steps up every three seconds, from Level 1 through Level 6.
- During ringing of a voice call or videophone call, you can adjust the ring volume also by pressing or by pressing and holding ♠/♥ for at least one second.
   However, you cannot adjust the ring volume in the following cases:
  - ·Ring Volume is set to "Step".
  - -"Answer setting" is set to "Quick silent" and you stop the ring tone or voice guidance.
- ·During Manner Mode
- ·Incoming calls within the ring start time specified by "Ring time"

### <On Hold>

# Putting an Incoming Call on Hold when You cannot Answer at Once

# **1** During ringing ► **2**

The FOMA phone makes three rapid beeps for confirmation and the call is put on answer-hold (On Hold).

- The confirmation tone does not sound while Manner Mode is activated or when "Phone"/"Videophone" of "Ring volume" is "Silent".
- The other party hears the hold tone set for "On hold tone" of "Set hold tone".
   For videophone calls, the still image set for "On hold" of "Select image" is displayed.

# Press (Answer) or to release hold and answer the call.

- If a videophone call is on hold, the substitute image is sent by pressing
   (Answer) or to release hold.

#### Information

- The caller is charged for the call even during answer-hold (On Hold).
- If you press a during answer-hold (On Hold), the call will be disconnected.

## <Holding>

# Putting a Call on Hold during a Call

- → During a call → ( Hold )
  - The other party hears the hold tone set for "Holding tone" of "Set hold tone".
     For videophone calls, the still image set for "Holding" of "Select image" is displayed.
  - You can put the call on hold by closing the FOMA phone during the call if you have set "Setting when folded" to "Tone on".
- Press (Answer) or (Land to release hold and answer the call.
  - If a videophone call is on hold, the substitute image is sent by pressing

    ()(Answer) or (1) to release hold.
  - If you have set "Setting when folded" to "Tone on" and put the call on hold by closing the FOMA phone, open the FOMA phone or connect the Flat-plug Earphone/Microphone with Switch (option) to answer the call.
     If you connect the Flat-plug Earphone/Microphone with Switch to answer the
  - If you connect the Flat-plug Earphone/Microphone with Switch to answer the videophone call, the substitute image is sent to the other party.

## Information

- The caller is charged for the call even while the call is on hold.
- If a new call comes in while the current call is put on hold, the hold (Holding) is released.

<Set Hold Tone>

# **Setting Hold Tone**

You can set the guidance the other party hears during on hold.

Settings ► Talk ► Set hold tone

On hold tone or Holding tone ► Select a hold tone.

Tone 1/2..... The caller hears the pre-installed guidance in Japanese.

**JESU JOY OF MAN'S** . . The caller hears the melody. You can set this for "Holding tone" only.

Voice announce...... The caller hears the sound recorded by "Voice announce". If it has not been recorded, this is not displayed.

 Press ☒(Play) to play back a hold tone. Press ℂLR to end the demo playback.

<Public Mode (Drive Mode)>

# **Using Public Mode (Drive Mode)**

Public Mode is an auto-answer service that puts importance on manners in public spaces. Once you activate Public Mode, the guidance is played back telling that you cannot answer the call as you are currently driving or in a place (a train, bus, movie theater, etc.) where you should refrain from answering the call. Then the call is disconnected.

Press and hold  $\overleftarrow{\times}$  for at least one second.

Public Mode is activated and " ﷺ" is displayed.
When a call comes in, the guidance "The person you are calling is currently driving or in an area where cell phone should not be used. Please try again later," is olaved back for incoming calls.

• To deactivate Public Mode, perform the same operation. Then, Public Mode is deactivated and " and " disappears.

#### Information

• You can activate/deactivate Public Mode only from the Stand-by display. You can activate/deactivate Public Mode even when " " is displayed.

#### Information

- You can make calls as usual even during Public Mode.
- If you make an emergency call at 110/119/118, Public Mode is released.
- When Public Mode and Manner Mode are activated simultaneously, Public Mode has priority.
- If a "User unset" call comes in while "Caller ID request" is set to "Activate", the Caller ID Request guidance is played back. (The Public Mode guidance is not played back.)
- You cannot use this function during data communication or international roaming.

## When Public Mode (Drive Mode) is activated

 
- Even when a call comes in, the ring tone does not sound. The "Missed call" icon appears on the display and the call is stored in "Received calls". The guidance is played back to the caller to the effect that you are currently driving or in an area where mobile phones should not be used. Then the call is disconnected. However, when the power is off or " is displayed, the caller hears the out-of-service area guidance instead of the Public Mode guidance.
- The ring tone does not sound and the Call/Charging indicator does not flicker even when mail or a message comes in. In addition, the set vibrator does not work.
- The ring tone for 64K data communication, alarm tone, and charging confirmation tone do not sound, and a melody while i- $\alpha$ ppli is running is not played back.
- · The tickers of i-Channel are not displayed.
- · The Call/Charging indicator does not light for "Illum. when folded".
- See page 69 for how Public Mode (Drive Mode) and each network service work for incoming calls when they are simultaneously activated.

### <Public Mode (Power Off)>

## **Using Public Mode (Power Off)**

Public Mode (Power Off) is an auto-answer service that puts importance on manners in public spaces. Once you activate Public Mode (Power Off), the guidance is played back telling that you cannot answer the call as you are currently in a place (hospital, airplane, around priority seat in a train, etc.) where use is prohibited. Then the call is disconnected.





Public Mode (Power Off) is set. (Nothing is changed on the Stand-by display.) After setting Public Mode (Power Off) and turning off the power, the guidance "The person you are calling is currently in an area where use is prohibited.

- Please try again later." is played back for incoming calls.

   To release Public Mode (Power Off), dial "\*X25250".
- To check the setting for Public Mode (Power Off), dial "\*\(\frac{4}{2}5259\)".

#### When Public Mode (Power Off) is activated

The setting stays activated until you dial "\*£25250" to deactivate Public Mode (Power Off). You cannot deactivate the setting just by turning on the power.

The guidance is played back to the caller telling that you are currently in a place where you should turn off the power. Then the call is disconnected.

The Public Mode (Power Off) guidance is played back even when you are out of the service area or out of reach of radio waves.

· See page 69 for how Public Mode (Power Off) and each network service work for incoming calls when they are simultaneously activated.

#### ■ The receiving operation during Public Mode (Drive Mode/Power Off)

Service	Responses to Incoming Voice	Responses to Incoming
Service	Calls	Videophone Calls
Voice Mail Service*	Plays back the Public Mode guidance, and then the call is connected to the Voice Mail Service Center.	Does not play back the video guidance for Public Mode, and the call is connected to the Voice Mail Service Center.
Call Forwarding Service*	Plays back the Public Mode guidance, and then the call is forwarded to the forwarding destination. Whether the guidance is played back or not depends on the guidance setting of Call Forwarding Service. If "Plays guidance" is set, plays back the Public Mode guidance. If "Does not play guidance" is set, does not play back the guidance.	Does not play back the video guidance for Public Mode, and the call is forwarded to the forwarding destination. If the destination does not support videophone calls, the call is disconnected.
Nuisance Call Blocking Service	For the call from the phone number registered to be rejected, plays back the Call Rejection guidance, and then the call is disconnected.	For the call from the phone number registered to be rejected, plays back the video guidance for Call Rejection, and then the call is disconnected.
Caller ID Display Request Service	For the caller without a caller ID, plays back the Caller ID Request guidance, and then the call is disconnected.  For the caller with a caller ID, plays back the Public Mode guidance, and then the call is disconnected.	For the caller without a caller ID, plays back the video guidance for Caller ID Request, and then the call is disconnected.  For the caller with a caller ID, plays back the video guidance for Public Mode, and then the call is disconnected.

<sup>\*\*</sup> When the ring time is set to 0 seconds, the FOMA phone is out of the service area, or the power is off, the Public Mode guidance is not played back, but Voice Mail Service or Call Forwarding Service works. Note that in this case the call is not notified by the "Missed call" icon and not stored in "Received calls".

<Missed Call>

# If You could not Answer an Incoming Call

When you could not answer calls (Missed calls), the "Notification icon" appears on the Stand-by display. You can check Received Calls by selecting the icon.





- Press or CLR to return to the former display.
- When multiple icons are found, use to highlight an icon and press
   | Select |.
- See page 31 for when the FOMA phone is closed.

## <Record Message Setting>



# Recording Voice/Video Messages when You cannot Answer the Call

By activating Record Message, you can play back an answer message to incoming calls and record callers' voice/video messages when you cannot answer them even if you have not signed up for Voice Mail Service.

You can record up to five messages for voice calls and up to two messages for videophone calls. Each message can be recorded for up to 20 seconds.


## **Activate Record Message**

- LifeKit Rec. msg/voice memo
  - ► Record message setting ➤ ON or OFF
  - Select an answer message.
  - Press ☒(Play) to play back the answer message. Press ℂLR to end the demo playback.
  - When "Japanese 1", "Japanese 2", or "English" is set, a beep sounds after playing back the answer message to the other party. If "Voice announce" is set, the beep does not sound.

## Enter a ring time (seconds).

- Enter from "000" through "120" in three digits.
- You cannot set the same ring time for Auto Answer Setting and Record Message Setting. Set a different time for each.
- While Record Message is activated, " " " " " " " " " " " " (the number of recorded messages for voice calls) and " " " " " " " " " " " (the number of recorded messages for videophone calls) are displayed.

#### Incoming calls when Record Message Setting is set to "ON"

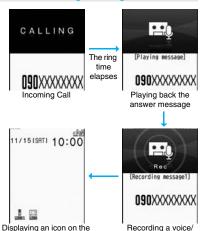

For videophone calls, the still image set for "Preparing" of "Select image" is displayed on the other party's display while playing back the answer message, and the still image set for "Record message" of "Select image" is displayed while recording.

desktop (See page 112)

• To answer a call while the answer message is played back or a voice/video message is recorded, press ( )(Answer ) or (

For videophone calls, press ( (Answer ) or ( to send the substitute image. You can answer a call also by pressing the switch on the Flat-plug Earphone/ Microphone with Switch (option). For videophone calls, the substitute image is sent to the other party.

#### Information

- Record Message does not work when " " is displayed.
- When Public Mode (Drive Mode) and Record Message are simultaneously. activated, the former has priority and the latter does not work.
- The priority order of answer messages is as follows: "Setting for Phonebook entry" → "Group setting" → "Record message setting".

#### Information

- If "Voice announce" selected as an answer message is deleted, the answer message will be set to "Japanese 1".
- When Voice Mail Service or Call Forwarding Service is simultaneously set with Record Message, the priority depends on the ring time set for Voice Mail Service or Call Forwarding Service. To give Record Message priority, set the ring time for Record Message Setting shorter than that for Voice Mail Service or Call Forwarding Service, Even when you do this. Voice Mail Service or Call Forwarding Service works if there are already five record messages for voice calls and two record messages for videophone calls.
- You cannot receive a call from a third party while a voice/video message is being recorded. The third party will hear the busy tone.

#### <Quick Record Message>

#### **Recording Voice/Video Messages when** You cannot Answer the Call during Ringing

Even if a call comes in while Record Message is not activated, you can record the caller's voice/video message just for that incoming call.



video message



The caller will hear the answer message and then can leave you a voice/video message.

- Record Message does not work when five messages for voice calls and two messages for videophone calls have already been recorded. Only Manner Mode is set when you operate by pressing ▼.
- When "Side keys guard" is set to "ON", you cannot activate Record Message by pressing |▼| with the FOMA phone closed.

<Play/Erase Messages>

MENU (5) (5)

Record Message List

<Play/Erase Videophone Messages>

Playing Back/Erasing Record Messages/a Voice Memo/Videophone Record Messages/Movie Memos

#### Play Back/Erase Record Messages/a Voice Memo

LifeKit Rec. msg/voice memo

Select a record message or voice memo.

A beep sounds and playback starts.

- On the Record Message List, recorded items are indicated by "★".
- It is played back at the volume set for "Volume" (earpiece volume).
- When playback ends, a double-beep sounds and the message "Playing" is cleared from the display.
- The date and time the message/memo was recorded are displayed during playback. When a caller's phone number is provided, it is displayed. If the caller is stored in the Phonebook, his/her name is also displayed. However, the name is not displayed and the phone number only is displayed in the following cases:

 When you play back a record message from the caller stored as secret data in Normal Mode

·When you play back a record message for Number A in B Mode (or vice versa) while using 2in1

If the caller's phone number is displayed during playback, you can make a
voice call to that phone number by pressing . Press (V. phone) to
make a videophone call.

#### To play back using ▼

From the Stand-by display, press lacktriangledown to play back the latest record message. When record messages are not recorded, a voice memo is played back.

#### To skip to next message

Each time you press v during playback, messages are played back in the following order: the next new record message → the oldest record message → a voice memo.

#### To cancel playback midway

Press ( Stop ) or CLR.

# Play Back/Erase Videophone Record Messages/Movie Memos

LifeKit Rec. msg/voice memo
Play/Erase VP msg. Select a
videophone record message or
movie memo.



- On the Videophone Record Message List, recorded items are indicated by "★".
- It is played back at the same volume of the playback sound of i-motion movies.
- The date and time the message/memo was recorded are displayed during playback.

#### To play back using ▼

From the Stand-by display, press and hold  $\boxed{\textbf{v}}$  for at least one second to play back the latest videophone record message. When videophone record messages are not recorded, the latest movie memo is played back.

#### To cancel playback midway

Press ( ) or CLR.

# Function Menu of the Record Message List/Videophone Record Message List

Function menu	Operation/Explanation	
Play	You can play back a message.	
Erase this	YES You can erase a message/memo also by pressing	
Erase rec. msg.	You can erase all record messages from the Record Message List, and can erase all videophone record messages from the Videophone Record Message List.  YES	
Erase movie memo [Videophone Record Message List only]	You can erase all movie memos.  YES	

Function menu	Operation/Explanation	
Erase all	You can erase all record messages and a voice memo from the Record Message List, and can erase all videophone record messages and movie memos from the Videophone Record Message List.  YES	

#### **Using Chara-den**

You can perform the setting for sending a Chara-den image to the other party.

• See page 287 for Chara-den images.

#### Set by Call

You can set a Chara-den image to be sent to the other party for making a videophone call.

Thaking a videophone can.

Chara-den display/Chara-den List

(V. phone)

Enter the destination phone number and press  $\bigcirc$  (V. phone) to make a videophone call.

- When the other party's phone number is stored in the Phonebook, you can retrieve it selecting from the Search Phonebook display by pressing O.

#### Information

The priority order of substitute images to be sent to the other party is as follows:
 "Setting by call" → "Setting for Phonebook entry" → "Group setting" → "Select image".

#### **Substitute Image**

You can set a Chara-den image for "Substitute image" of "Select image".

- The Chara-den display/Chara-den List/Chara-den Recording display (FUNC ) Substitute image
  - From the Chara-den List, you can set it also by pressing MENU (Subst. ).

#### **Chara-den Setup**

Mode

img.

You can perform settings for a Chara-den call. These settings are effective only for during a videophone call.

During a Chara-den call ► (FUNC )

Chara-den setup ➤ Do the following operations.

Item	Operation/Explanation	
Switch Chara-den	Select a Chara-den image.     If you switch Chara-den images, the action mode switches to Whole Action Mode.	

You can display the list for actions that you can operate.  ● Highlight an action and press (

Change action		You can switch the action mode between Whole Action Mode
	At videophone start-up	(ᠲ) and Parts Action Mode ("ਜੈ").  ● You can switch modes also by pressing ☑.
	Whole Action	

G .		You can switch a substitute image to be sent to the other party to the still image set for "Pre-installed" of "Select image".
	SW org. subst.	You can switch a substitute image to be sent to the other party

to the still image set for "Original" of "Select image".

#### **Useful Functions for Videophone Calls**

#### Switch Images to be Sent

You can switch images to be sent to the other party from the substitute image to the image through your camera.

PRO u Not available

See page 287 for Chara-den.

#### During a videophone call

The image through your camera is sent to the other party.

While the image through your camera is being sent, "Pa" is displayed.

 Press (Subst.) again to switch from the image through your camera to the substitute image.

#### Information

 The priority order of substitute images to be sent to the other party is as follows: "Setting by call" → "Setting for Phonebook entry" → "Group setting" → "Select image".

Note that "Setting for Phonebook entry" and "Group setting" are disabled when a videophone call comes in without notifying the caller ID.

 Even when you make a videophone call sending a substitute image, you are charged for the digital communication.

#### **Switch Image Display Positions**

You can switch the display locations of the receiving image and the sending image.

During a videophone call, press 🔯 (Change).



• Each time you press (Change), the displays switch.

# Zoom At videophone start-up | Wide

You can adjust the magnification for the camera image to be sent to the other party. During a videophone call, the maximum magnification of the camera is about 6.8 times.

PRO µ Not available

# During a videophone call ► Use to adjust the magnification.

• The former zoom setting returns when the videophone call ends.

#### Function Menu during Videophone Call

	3 v				
	Function menu	Operation/Explanation			
CI	IG to voice call	See page 54.			
Send DTMF tone/ DTMF tone OFF		Transmission Mode that enables you to enter the data from the numeric keys and to send DTMF (touch-tone signals). You can operate it only during a Chara-den call.  • "Send DTMF tone" is displayed when the mode is not DTMF Transmission Mode and "DTMF tone OFF" is displayed in DTMF Transmission Mode.  • In DTMF Transmission Mode, you cannot operate the action of Chara-den images.  • The DTMF tone may not be received depending on the device of a receiving end.			
	phone settings				
•	isual preferenc	e)			
	RO μ				
Visual preference					
V.phone settings		, ,			
(Brightness)		to other party to -3 (dark) through +3 (bright).			
	At videophone	PRO μ Not available			
	start-up	➤ Brightness ➤ Select a brightness level.			
	0				

Function menu	Operation/Explanation	
V.phone settings	You can adjust the colors of the camera image to be sent to	
(White balance)	the other party, to make the colors look more natural.	
At videophone	PRO μ Not available	
start-up	White balance Select an item.	
Automatic	Fine weatherFor talking outdoors in fine weather  Cloudy weatherFor talking in cloudy weather or in the	
	shade	
	Automatic For adjusting white balance automatically	
	Light bulb For talking under incandescent light	
V.phone settings	You can switch the color tone of the camera image to be sent	
(Color mode set)	to the other party.	
At videophone	PRO μ Not available	
start-up	Color mode set Select a color tone.	
Normal		
Normal		
V.phone settings	You can lengthen the camera's exposure time to make the	
(Night mode)	camera image to be sent clear in a dark place.	
At videophone	PRO μ Not available	
start-up	Night mode ➤ ON or OFF	
OFF		
V.phone settings	You can set the focus for the camera during a videophone call.	
(Focus)	PRO $\mu$ Not available	
At videophone	Focus Close-up or Landscape	
start-up		
Landscape		
Chara-den setup	See page 73.	
Backlight	You can select whether to light the display constantly or light	
	for about 15 seconds after an operation.  Constant light or 15 seconds light	
LCD AI	· ·	
	See page 105.	
Own number	You can display your phone number.	
Key guide	You can display the guide of key operation during a	
	videophone call.	

<Hands-free with Videophone>

#### **Setting Videophone Hands-free**

You can set whether to switch to Hands-free automatically for when a videophone call starts.

Settings ➤ Videophone ➤ Hands-free w/ V. phone

 See page 62 for the operation while Hands-free is activated and how to switch to Hands-free.

#### <Visual Preference>

# Setting Image Quality for Videophone Calls

You can set the quality of both the receiving image and sending image on the display.

PRO  $\mu$  You can set the quality of receiving images only.

Settings Videophone Visual preference
Select an image quality.

- "Prefer motion spd" is effective for moving images. When there is little motion, the quality becomes better if you set to "Prefer ima qual".
- If you operate from the Function menu during a videophone call, the setting is effective only for the current videophone call.

#### Information

 If the radio wave conditions weaken during a videophone call, the image may appear like a mosaic.

#### <Select Image>

# Changing Image Displays for Videophone Calls

You can set an image to be sent to the other party.

# Select an item.

On hold .... Sets an image for during answer-hold (On hold).

Holding .... Sets an image for while a call is on hold (Holding).

Substitute image

Sets a substitute image (still image or Chara-den) for when the

#### Record message

..... Sets an image while recording a record message.

**Preparing...** Sets an image for while playing back an answer message. **Movie memo** 

..... Sets an image for while recording a movie memo.

#### Select an image.

Pre-installed ... For sending a pre-installed still image to the other party.

Original ...... For sending an appropriate message with a still image stored using "Set display".

Chara-den . . . . For sending a Chara-den image selected by "Substitute image". (See page 73)

(Displayed only when "Substitute image" has been selected in step 1.)

- Press ☑( Play ) to play back a demo to check the still image or Chara-den image
- To change the setting of "Original" or "Chara-den", press (■)( FUNC ), select
  "Change setting", then select a still image or Chara-den image. If you have
  selected "Original", select a still image after selecting a folder. See "Set
  display" for settable still images.

#### Information

 Even if you delete the still image selected from "Original", that still image is displayed to the other party. To change, set by "Change setting" or "Set display".

#### Set by Call

You can set an image to be sent to the other party for making a videophone call.

Enter a phone number

or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

7 (FUNC ) ➤ Select image ➤ Chara-den

• To cancel the setting by call, select "Release". The setting is completed.

Select a Chara-den image.

<Voice Call Auto Redial>

# Redialing as a Voice Call when a Videophone Call cannot be Connected

If a videophone call cannot be connected, it will be automatically redialed as a voice call.

Settings Videophone
Voice call auto redial ON or OFF

#### Information

- The charges for calls once switched to voice calls are billed at the rates for the voice calls.
- Voice Call Auto Redial does not work when a videophone call cannot be connected such as when the line is busy or the other party's phone is in Public Mode (Drive Mode). However, Voice Call Auto Redial works when you make a videophone call to a phone that does not support the videophone function.

<Notify Switchable Mode>

# Setting for Switching between a Voice Call and a Videophone Call

You can let the other party know that your FOMA phone can switch between a voice call and videophone call. This function is set to "Indication ON" at the time of contract. When "Notify switchable mode" is set to "Indication ON", the caller can switch between the videophone call and voice call.

 You cannot operate "Notify switchable mode" when you are out of the service area or radio waves do not reach, or during a call.

► Settings Videophone Notify switchable mode Do the following operations.

Item	Operation/Explanation		
Indication ON	▶YES▶OK		
Indication OFF	►YES►OK		
Check indication	You can check the setting of the function.		

<Videophone while Packet>

# Selecting Response to Incoming Videophone Calls during i-mode

Settings Incoming call
V-phone while packet Select an item.

#### V-phone priority

.. Shows the Videophone Call Receiving display. When you answer the videophone call, packet communication is disconnected.

#### Packet downld priority

. . Rejects the videophone call and continues the communication.

#### V-phone answerphone

- .. Connects the incoming videophone call to the Voice Mail Service Center. Call forwarding
- ... Forwards the incoming videophone call to the forwarding destination.

#### Information

 If you have not signed up for Voice Mail Service or Call Forwarding Service, "Packet downld priority" works even if you set to "V-phone answerphone" or "Call forwarding".

# Connecting FOMA Phone to External Devices to Use Videophone Function


You can operate your FOMA phone from an external device such as your personal computer for making or receiving videophone calls by connecting them using the FOMA USB Cable with Charge Function 01 (option).

To use this function, you need to install a videophone application program on a dedicated external device or personal computer, and further, you need to prepare equipment (commercial item) such as an earphone/microphone or USB compatible web camera.

- For operating environments for a videophone application program and how to set or
  operate it, refer to the instruction manual or other literature for an external device.
- You can use "ドコモテレビ電話ソフト (DoCoMo Videophone Software)" for the application program that supports this function.
  Download it from the DoCoMo Videophone Software web site.

(For details such as operating environment for the personal computers, refer to the support web page.)

http://videophonesoft.nttdocomo.co.jp/ (Japanese only)

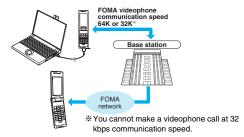

#### Information

- $\bullet$  You cannot make a videophone call from the external device during a voice call.
- When you have signed up for Call Waiting Service, an incoming videophone call
  from an external device during a voice call is recorded as a missed call in
  Received Calls. The same applies for an incoming voice call, videophone call,
  and 64K data communication during a videophone call from an external device.

# **Phonebook**

Phonebooks Available for FOMA Phone	80
Storing Phonebook EntriesAdd to Phonebook	80
Storing Displayed Phone Number/Mail Address in Phonebook	84
Setting Groups	85
Dialing from Phonebooks Search Phonebook	85
Editing Phonebook Entries Edit Phonebook	87
Deleting Phonebook Entries Delete Data	87
Checking Number of Phonebook Entries	
(No. of Phonebook)	88
Making Full Use of Phonebooks	88
Making a Call with a Few Touches Two-touch Dial	90
Accessing Phonebook Entries by Voice Voice Dial	90
Saving (Restoring/Updating) Phonebook to Data Storage Cente	r
(Data Security Service)	92

#### **Phonebooks Available for FOMA Phone**

You can use two types of Phonebook, namely the Phonebook in the FOMA phone itself, and the Phonebook on the UIM.

			FOMA phone	UIM
Number of entries		r of entries	1,000 entries	50 entries
Contents of Phonebook	Basic item	Name (Reading)	0	0
		Group	19 groups	10 groups
		Phone number	4 phone numbers	1 phone number
of Pt	ш.	Phone number icon	0	×
ıts c		Mail address	3 mail addresses	1 mail address
nter		Mail address icon	0	×
S		Address	0	×
		Birthday	0	×
		Memo	0	×
		Image	100 images	×
		Memory No.	From 000 to 999	×
	E	Ring tone	0	
	g ite	Vibrator	0	
	Setting item	Illumination	0	
		Picture	0	
		Chara-den	100 Chara-den images	×
		Mail ring tone	0	
		Mail vibrator	0	
		Mail illumination	0	
		Answer message	0	
	su	Restrict dialing		
	ctio	Call rejection		
	Restrictions	Call acceptance	0	×
	R	Call forwarding		
	Ì	Voice mail		
	Secret code		0	×
		rage in Secret Mode or cret Data Only	0	×

		FOMA phone	UIM
dn	Name	0	0
Group	Ring tone		
of	Vibrator		
Contents	Illumination		
onte	Picture		
Ŏ	Chara-den	0	×
	Mail ring tone		
	Mail vibrator		
	Mail illumination		
	Answer message		

- O: Can be stored. X: Cannot be stored.
- You can set your UIM into another FOMA phone and use the UIM Phonebook entries.

#### <Add to Phonebook>


#### **Storing Phonebook Entries**

You can store Phonebook entries in the FOMA phone (Phone) or on the UIM.

(for at least one second) Phone or UIM
The Edit Name display appears. Go to step 2 and enter a name.

# 2 Do the following operations.

 You can press to to switch between the "Basic item" tab and "Settings" tab on the FOMA phone's Phonebook.

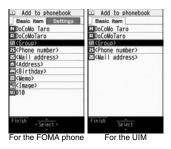

Item	Operation/Explanation
Name>	You can enter the name of the person or company in kanji, hiragana, katakana, alphabetic characters, or numerals.  Enter a name.  For the FOMA phone, you can enter up to 16 full-pitch/32 half-pitch characters. You can enter pictographs and symbols as well.  For the UIM, you can enter up to 10 full-pitch characters/21 half-pitch alphanumeric characters. (Half-pitch katakana characters cannot be entered.) When the entry contains both full-pitch and half-pitch characters, you can store up to 10 characters from the beginning regardless of full-pitch or half-pitch characters.
R <reading></reading>	You can enter the reading in half-pitch katakana, alphabetic characters, or numerals.  ▶ Enter a reading.  • For the FOMA phone, you can enter up to 32 half-pitch characters. You can enter half-pitch symbols as well.  • For the UIM, you can enter up to 12 full-pitch characters/25 half-pitch alphanumeric characters. (Half-pitch katakana characters cannot be entered.) When the entry contains both full-pitch and half-pitch characters, you can store up to 12 characters from the beginning regardless of full-pitch or half-pitch characters.  • If the displayed reading is acceptable, you do not need to edit it. However, depending on the characters entered for names or entering method, they are not reflected in the reading.  • If you enter "⊅ (reduced size)" or "⊃ (reduced size)" for a name, "⊃ (half-pitch, regular size)" (for the FOMA phone) and "¬⊃ (regular size)" (for the UIM) are displayed in the reading field.
<group></group>	In the FOMA phone, 19 groups are available. On the UIM, 10 groups are available.  Select a group.  When the storage is completed with no group selected, the Phonebook entry is stored in "No setting".

Item	Operation/Explanation
Phone number>	You can store up to four phone numbers per Phonebook entry in the FOMA phone. You can set an icon for each phone number to categorize mobile phone numbers, office phone numbers, and so on. You can store only one phone number per Phonebook entry on the UIM.  Enter a phone number.  Enter from the city code for the phone numbers.  You can enter up to 26 digits. However, you can enter up to 20 digits for blue UIMs.  Press and hold Thome number you store. However, you cannot insert the pause (p) into the phone number you store. However, you cannot insert the pause (p) to the beginning of phone number or insert it consecutively. The pause (p) inserted to the end of phone number is not stored.  If you insert "X" in the middle of a phone number, you cannot make a call. However, the phone number is recorded in Redial or Dialed Calls.  You can store the phone number which includes "#" such as that for information service as well.  Select an icon.  If you have stored a phone number in the FOMA phone, another "Ad-to-Phonebook display. To store another phone number, select "Fall <phone numbers".<="" th=""></phone>

Item	Operation/Explanation
<mail address=""></mail>	You can store up to three mail addresses per Phonebook entry in the FOMA phone. You can set an icon for each mail address to categorize mobile phone addresses, home addresses, and so on. You can store only one mail address per Phonebook entry on the UIM.  Enter a mail address.  The mail address can consist of up to 50 half-pitch alphabets, numerals or symbol characters.  When the mail address is "phone number@docomo.ne.jp", store the phone number only.  For the FOMA phone, you can set a secret code as well. (See page 89)
	■ Select an icon.  If you have stored a mail address in the FOMA phone, another " <a href="Adail"><a href="Adail"><a href="Add-to-Phonebook display. To store another mail address, select"><a href="Add-to-Phonebook display"><a href="Add-to-Phonebook display. To store another mail address, select"><a href="Add-to-Phonebook display. To store another mail address, select"><a href="Add-to-Phonebook display. To store another mail address"><a href="Add-to-Phonebook"><a "-"="" (hyphen)="" code.<="" href="Add-to&lt;/th&gt;&lt;/tr&gt;&lt;tr&gt;&lt;th&gt;Address&gt;&lt;/th&gt;&lt;th&gt;&lt;ul&gt;     &lt;li&gt;▶ Enter a ZIP code ▶ Enter a postal address.&lt;/li&gt;     &lt;li&gt;• You can enter up to 7 digits for the zip code.&lt;/li&gt;     &lt;li&gt;• You can enter up to 50 full-pitch/100 half-pitch characters for the postal address. Further, you can enter pictographs as well.&lt;/li&gt;     &lt;li&gt;• You cannot enter " in="" li="" or="" the="" zip="" ⊤"=""> </a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a></a>
部 会Birthday>	● Enter a birthday ● ON or OFF ● You can enter the birthday from January 1, 1800 through December 31, 2099. ● When you set to "ON", the birthday is stored as an anniversary in the schedule of every year. "誕生日 (名前) [Birthday (name)]" is stored as the anniversary content. ● Even if you delete the Phonebook entries, the stored anniversaries are not deleted.
<memo></memo>	Enter a memo.     You can enter up to 100 full-pitch/200 half-pitch characters.     Further, you can enter pictographs as well.

Item	Operation/Explanation
< mage>	The stored still image is displayed when you call up the Phonebook entry.  ▶ Select an item.  Select image  You can store a still image in Data Box.  Shoot image  You can store the shot still image. Perform step 2 through step 3 on page 140.  □RO □  Not available  • To release the stored still image, select "Release image". • The size of a still image you can store is Stand-by (240 x 427) or smaller and up to 300 Kbytes in JPEG format or GIF format. • If you store a still image larger than 72 x 54 dots, it is displayed shrunk on the detailed Phonebook display. • If you store a still image larger than 240 x 180 dots, it is displayed shrunk on the Call Receiving display. • When "Disp. PH-book image" is set to "ON", the stored still image is displayed for an incoming call. However, when another image is stored in the "Picture" field, that image is preferentially displayed for the incoming call.
ND <memory no.=""></memory>	● Enter a memory number.  ● Enter a three-digit number of "000" through "999".  • The lowest empty memory number "010" through "999" is entered in advance.  If "010" through "999" are all occupied, the lowest empty memory number from "000" through "009" is entered.
<ring tone=""></ring>	You can set a ring tone for when a voice call or videophone call comes in from the person stored in the Phonebook.  Select ring tone Go to step 2 on page 95.  To release the stored ring tone, select "Release ring tone".

Item	Operation/Explanation
	· · · · · · · · · · · · · · · · · · ·
< <mark>∐</mark> <vibrator></vibrator>	You can set a vibration pattern for when a voice call or videophone call comes in from the person stored in the Phonebook.  ▶ Select vibrator▶ Select a vibration pattern.  • To release the stored vibrator, select "Release vibrator".
!!umination	You can set an illumination color for when a voice call or videophone call comes in from the person stored in the Phonebook.  ▶ Select illumination ▶ Select a color.  • To release the stored illumination, select "Release illumination".
<picture></picture>	You can set an image to be displayed for when a call comes in from the person stored in the Phonebook.  ▶ Select picture▶ Select a type of image  ▶ Select a folder▶ Select an image.  • To release the stored image, select "Release picture".
근 <chara-den></chara-den>	The stored Chara-den image is displayed as a substitute image for videophone calls with the person stored in the Phonebook.  Select Chara-den Select a Chara-den image.  To release the stored Chara-den image, select "Release Chara-den".
Mail ring tone>	You can set a ring tone for when a mail message comes in from the person stored in the Phonebook.  Select ring tone Go to step 2 on page 95.  To release the stored mail ring tone, select "Release ring tone".
✓ Mail vibrator>	You can set a vibration pattern for when a mail message comes in from the person stored in the Phonebook.

Select vibrator ➤ Select a vibration pattern.

• To release the stored mail vibrator, select "Release vibrator".

Item	Operation/Explanation
Mail illumination>	You can set an illumination color for when a mail message comes in from the person stored in the Phonebook. ▶ Select illumination ▶ Select a color. • To release the stored mail illumination, select "Release illumination".
Answer message>	You can set an answer message for Record Message by Phonebook entry.  ➤ Select answer message ➤ Select an answer message.  To release the stored answer message, select "Release answer message".
Press (Finish).  • If you have not entered any name, "Finish" is not displayed and you cannot	

#### Phonebook entries while editing

#### When the low battery alarm sounds

store the entry.

The Phonebook entry you are editing is saved automatically. The confirmation display appears asking whether to resume editing when you continue editing after charging the battery or when you operate step 1 on page 80 and select the storage location for the interrupted Phonebook entry after changing to a charged battery. Recall . . . You can resume editing the Phonebook entry.

New . . . . You can edit a new Phonebook entry. In this case, the interrupted data is retained. If you execute "Add to phonebook" after storing the new Phonebook entry, the confirmation display appears again.

- Only the most recently interrupted entry is retained.
- If you resume editing the data but then cancel editing without storing it, that data will be abandoned. Once you recall the data, be sure to store it.
- If you receive a call or mail

 
You can respond it leaving the edited data as it is, thanks to the Multitask function. To return to the Phonebook Edit display, press and hold [MULTI] for at least one second to switch the menu. You can return to the Phonebook Edit display also by ending the call or mail function.

#### Storing Displayed Phone Number/Mail Address in Phonebook

You can store the displayed or selected phone number, mail address. and still image in the FOMA phone's or UIM's Phonebook.

Operation	Storable items
While a phone number is entered	Phone number
While a redial item, dialed call record, or received call record is displayed	Phone number
While Sent Address or Received Address is displayed	Phone number/Mail address
While a site or screen memo is displayed	Phone number/Mail address
While the text of Message R/F or mail is displayed	Phone number/Mail address
While the data scanned by Bar Code Reader or Text Reader is displayed $\boxed{\text{PRO }\mu} \text{ Not available}$	Phone number/Mail address
While a ToruCa file is displayed	Phone number/Mail address
While the Still Image List or a still image is displayed	Still image

### Add to phonebook



- To store the address of the sender (or of another recipient of simultaneous mail) of the received mail or the destination address of the sent mail into the Phonebook, select "Store address".
  - When the addresses of the sender and another recipient of simultaneous mail are found or the multiple destination addresses are found, the display for selecting an address appears. Use ( ) to select the mail address or phone number you want to store.
- To store the results scanned by Text Reader in a Phonebook entry, select "Store phone No." or "Store mail add.".
- To store a still image in the Phonebook, select "Phonebook" from "Set display".
- When "Add to phonebook" is displayed on the Scanned Code Result display for Bar Code Reader, select "Add to phonebook"; then other information in the scanned code besides the phone number or mail address is entered into each field.

#### Phone or UIM Select a storing method.

New ... Go to step 2 on page 80.

Add. . . . Adds data to the existing Phonebook entry. When storing data on the UIM. "Overwrite" is displayed.

#### Select a search method Search the Phonebook

Select a Phonebook entry to be stored



The phone number or mail address is entered automatically.

- See step 2 on page 80 to edit other items in the Phonebook entry.
- When you store into the FOMA phone's Phonebook, you can remain the original entry and store a new entry into a different location by changing the memory number.



• If you store the entry in the UIM Phonebook, select "Overwrite" to overwrite the original entry, or select "Add" to store it as a new entry.

#### Information

- The Phonebook entry does not store the information of "Notify caller ID" included in Redial/Dialed Calls. To set Caller ID Notification, add "186"/"184" to the phone number and store it
- Characters that cannot be stored may be replaced by spaces or deleted, and then stored.
- You may not be able to store the information from some sites into the Phonebook.

#### **Setting Groups**

You can utilize the Phonebook by sorting the entries by group such as "Company" or "Friend", or by your interest such as "Baseball" or "Ceramic art".

You can set a ring tone, vibration pattern, or illumination by group.

#### ↑ MENU Phonebook Group setting

- The groups on the UIM are indicated by " ".
- To reset the group names and respective settings by group, which have already been stored, press (FUNC), select "Reset group", and then select "YES".

#### 

- When you select " Group name", enter a group name. You can store up
  to 10 full-pitch/21 half-pitch characters. However, you can store only up to 10
  characters (regardless of full-pitch or half-pitch characters) when you enter
  both full-pitch and half-pitch characters for a UIM group name.
- See step 2 on page 80 for the operations of the other items. However, you
  cannot set for groups on the UIM.
- Select a stored group, or press (\$\frac{\pi}{\pi}\rightarrow\rig
- Press ☑(Finish).

<Search Phonebook>

#### **Dialing from Phonebooks**

You can retrieve stored Phonebook entries by eight search methods.

#### **1 ○** Do the following operations.

 The display for the same search method as the previous one appears once you have carried out a search. Press (CLR) to show the Search Phonebook display.

□ Search phonebook	
1 A 1 1 ?	
□Reading?	
EGroup?	
■ Memory No. ?	
■Name?	
☐Phone number?	
☑Wail address?	
2-touch dial?	
Search Phonebook	
display	

	αιοριαγ
Item	Operation/Explanation
All?	You can bring up all Phonebook entries.  The tabs appear on the top of the Phonebook List. (See page 86)
Reading?	You can enter the reading of the other party's name from the first character and search. You do not need to enter the full reading.  • Enter a part of the reading.  • The tabs appear on the top of the Phonebook List. (See page 86)
Group?	You can bring up Phonebook entries stored in the specified group.  ➤ Select a group.  • The tabs appear on the top of the Phonebook List. (See page 86) • If you press (□x)(   FUNC   ) on the Group List, the Function menu for "Group setting" is displayed.
Memory No.? [FOMA phone only]	You can search for the entry by the memory number assigned when it was stored in the Phonebook.

Enter the memory number.

number of the phone number.

• Enter from "000" through "999" in three digits.

The tabs appear on the top of the Phonebook List. (See page 86)
 From the Stand-by display, you can press and then press to display the Memory No. Dial display. From there you can make a voice call by entering the memory

Item	Operation/Explanation
Name?	You can enter the other party's name from the first character and search. You do not need to enter the full name.  Enter a part of the name
Phone number?	You can enter a part of the other party's phone number and search. You can search for the entry even from the middle of phone number.  • Enter a part of the phone number  • You can display the Phonebook List also by entering a part of the phone number from the Stand-by display or the "Talking" display, and pressing .
Mail address?	You can enter a part of the other party's mail address and search. You can search for the entry even from the middle of mail address.  Enter a part of the mail address
2-touch dial? [FOMA phone only]	You can bring up the list of Phonebook entries in memory number 000 through 009.  • Phonebook entries not yet stored or being set with secret are displayed as <>.





- When the entry contains multiple phone numbers, or when you searched by "Mail address?", press of from the detailed display to select a phone number.
- You can make a videophone call by pressing (♥)(V. phone).

#### Information

- In a search method other than "Group?" and "2-touch dial?", enter nothing and press (): then you can search all through the Phonebook.
- When no Phonebook entry is found that matches the condition you entered by "Reading?" or "Memory No.?", the entry that is the closest to the condition is displayed.

#### Search order

The Phonebook entries are searched in the order of readings you entered for storing. as follows:

"Space at the beginning of the reading" → "Japanese syllabary (ア、イ、ウ、エ、 オ、... ン)"  $\rightarrow$  "Alphabet (A, a, B, b, ...Z, z)"  $\rightarrow$  "Numerals (0 through 9)"  $\rightarrow$  "Symbols" → "No reading".

For "All?" and "Reading?", searching is done in the following order:

"Japanese syllabary (ア、イ、ウ、エ、オ、...ン)" → "Alphabet (A, a, B, b, ...Z, z)" → "Space at the beginning of the reading" → "Numerals (0 through 9)" → "Symbols" → "No reading".

\* The Memory No. Search searches in the order of the memory numbers.

#### **About Phonebook List**

When you search from "All?", "Reading?", "Group?", or "Memory No.?", the tabs appear on the top of the Phonebook List. With "All?" and "Reading?", the entries are sorted by every column of reading, with "Memory No.?" by every 100 of the memory number, and with "Group?" by every group.



Press o to display the Phonebook entries in the tab at left

or right. However, when there are 12 or more Phonebook entries in a tab, pressing (Page ▲), ((Page ▼), or (▲)(▼) brings up the previous or next page.

- After you search by "Reading?", you can move the cursor to the "ア" through "ワ". "英", and "他" tab by pressing each numeric key from the List. When you successively press the same numeric key, you can move the cursor within the same column
- <Example>Press 5 to display the "\(\psi\)" tab. Each time you press 5, the cursor moves to the top of "=" "\texts" and so on.
- After you search by "Group?", you can move the cursor to the top of each column in the tab by pressing each numeric key from the List. When you successively press the same numeric key, you can move the cursor within the same column.
  - <Example>Press (5) to move the cursor to the top of the "ナ" column. Each time you press (5), the cursor moves to the top of " $\equiv$ " " $\mathbb{Z}$ " and so on.
- After you search by "Memory No.?", you can move the cursor to the "000~" to "900~" tab by pressing each numeric key from the List.
  - <Example>Press 5 to move the cursor to the "500~" tab.
- You can make a voice call to the phone number stored for the name highlighted on the Phonebook List, by pressing (≦). Also, press (☑)(V. phone) to make a videophone call. When multiple phone numbers are stored for the name, the one stored first will be dialed.
- " appears for the Phonebook entries set to A by Phonebook 2in1 Setting, " 🗓 " appears for the Phonebook entries set to B, and " 🗊 " appears for the Phonebook entries set to common data. (Only in Dual Mode)

#### About the detailed display

Use o to highlight a tab, then the detailed contents are displayed.



- For the Phonebook entry stored on the UIM, "a" is displayed on the memory number field.
- When Notify Caller ID is set to "Notify caller", "((1))" appears, and when set to "Don't notify", "((?))" appears.
- Under the still image, "Qualified and appears for the Phonebook entries set to A by Phonebook 2in1 Setting, "Qualified appears for the Phonebook entries set to B, and "Qualified appears for the Phonebook entries set to common data. (Only in Dual Mode)
- When a Phonebook entry contains the setting for Multi Number or Chaku-moji, the set contents are displayed in the Item List/Phone Number display.

#### **: ■** Item list

The first stored phone number, mail address, postal address, birthday, and memo are displayed.

#### Phone number

#### Mail address

When you select the item, you can compose an i-mode mail message with that mail address entered into the address field.

#### Personal information

When you select a postal address, memo, or still image, the full display appears.
 Press () (Exit) or CLR to return to the former display.

#### ✓ Settings

When you select each item, a demo is played back.

Press ( ) ( Stop ) or CLR to end the demo.

#### <Edit Phonebook>

#### **Editing Phonebook Entries**

- Detailed Phonebook display
- Select an item to be edited Edit the contents.
- See step 2 on page 80 for how to edit the Phonebook entry.
- Even if you edit the Phonebook entry in the FOMA phone (Phone), you can remain the original contents in the original location and store the edited contents in the different location by changing the memory number.

#### 

• If you edited the UIM Phonebook entry, select "Overwrite" to overwrite the original contents, or "Add" to save the contents as a new entry.

#### <Delete Data>

#### **Deleting Phonebook Entries**

#### **Delete from the Detailed Phonebook Display**

- Tetailed Phonebook display ► (FUNC )
  - ► Delete data ► Select an item ► YES
  - You can delete an item highlighted by pressing from the detailed display or delete the Phonebook entry.

#### **Delete from the Phonebook List**

Phonebook List ►(□ FUNC ) Delete data

▶ Do the following operations.

Item	Operation/Explanation
Delete this	► YES

Item	Operation/Explanation			
Delete selected	Put a check mark for Phonebook entries to be deleted  [☑](Finish) YES  • You can check or uncheck all items by pressing [II](FUNC) and selecting "Select all in tab/Select all/Release all in tab/Release all".  • Perform the same operation as that of "Delete all" when you have selected all Phonebook entries including secret ones.			
Delete all in tab	You can delete all the Phonebook entries for the displayed tab. > YES			
Delete all	You can delete all Phonebook entries including secret entr  ▶ Enter your Terminal Security Code ▶ YES ▶ YES			

#### <No. of Phonebook>

#### **Checking Number of Phonebook Entries**

# Phone Phone Phonebook ... The number of Phonebook entries stored in the FOMA phone (Phone) Secret ... ... The number of Phonebook entries stored as secret data during Secret Mode or Secret Data Only Image ... ... The number of Phonebook entries in which still images are stored Chara-den ... The number of Phonebook entries in which Chara-den images are stored Voice dial. ... The number of Phonebook entries set as voice dial entries Rest ... ... ... ... ... ... The number of phone numbers that can still be stored IIIM

#### Information

 While you are using 2in1, the number of displayable Phonebook entries for each mode is displayed. (See page 390)

Phonebook . . . The number of Phonebook entries stored on the UIM

#### **Making Full Use of Phonebooks**

#### Function Menu of the Phonebook List

Function menu	Operation/Explanation			
New	You can store a new Phonebook entry. Go to step 1 on page 80.			
Sort	You can change the display order.  Select a type of order.  You can sort Phonebook entries in reverse order by selecting "Ascending" or "Descending".  You cannot sort on the Phonebook List with tabs displayed.			
Attach to mail	You can send an i-mode mail message with the Phonebook entry attached. Go to step 2 on page 182.			
Send Ir data (Send phonebook)	See page 309.			
Send Ir data (Send all phonebook)	See page 310.			
transmission (Send phonebook)	See page 311.			
transmission (Send all phonebook)	See page 311.			
Copy to microSD	See page 296.			
Connect to Center	See page 92.			
Delete data	See page 87.			
Character size	You can switch the character size for the list between Large and Standard.  • The setting here applies to "Phonebook" of "Character size".			
Set secret/Release secret	You can activate/deactivate Secret for the Phonebook entry.  • If you select "Set secret" in ordinary mode (not in "Secret mode" or "Secret data only"), enter your Terminal Security Code.			

#### Function Menu of the Detailed Phonebook Display

Function menu	Operation/Explanation			
Notify caller ID	See page 46.			
Prefix numbers	See page 62.			
Int'l dial assist	See page 60.			
2in1 dial	You can select a phone number to be notified to the other party in Dual Mode of 2in1. (See page 389)			
Multi number	You can select a phone number to be notified to the other party. (See page 386)			
Chaku-moji	See page 57.			
Restrictions	See page 128.			
Edit data	Go to step 1 of "Editing Phonebook Entries" on page 87.			
Delete data	See page 87.			
Add desktop icon	See page 114.			
Compose message	You can compose an i-mode mail message to send to the mail address. Go to step 3 on page 182.			
Compose SMS	You can compose an SMS message to send to the phone number set as the destination address. Go to step 3 on page 224.			
Attach to mail	You can send an i-mode mail message with the Phonebook entry attached. Go to step 2 on page 182.			
Send Ir data (Send phonebook)	See page 309.			
Send Ir data (Send all phonebook)	See page 310.			
(Send phonebook)	See page 311.			
transmission (Send all phonebook)	See page 311.			
Copy to microSD	See page 296.			

Function menu	Operation/Explanation				
Connect to Center	See page 92.				
Copy name	You can paste the copied text to a mail message and others				
Copy phone number/ Copy mail add./ Copy address/ Copy birthday/ Copy memo	From the detailed display, press to highlight an item to be copied. The items in the Function menu differ depending on the highlighted items in the Phonebook entry.      You can paste the copied text to a mail message and others				
Secret code	You need to add the recipient's secret code when sending i-mode mail to anyone who has registered a secret code. Once you set the secret code for the mail address in the Phonebook entry, it will be added automatically whenever you send mail to that address.  • Enter your Terminal Security Code • Set code • From the detailed display, press to highlight a phone number or mail address to be set with a secret code. • To check the secret code, select "Check code". • To release the secret code, select "Release code".				
	■ Enter a four-digit secret code ■ YES ■ In the Function menu, "Secret code" is indicated by "★", after it is set. ■ Enter a four-digit number for secret code. You cannot set "0000".				
Character size	See page 88.				
Set secret/Release secret	See page 88.				
Copy to UIM/ Copy from UIM	See page 361.				
Select image	See page 77.				

# Function menu Sort phone number/ Sort mail address Operation/Explanation Sort phone number/ Sort mail address O(Select) Use □ to sort ○ (Select) □(Select) ○ Use □ to sort ○ (Select)

 From the detailed display, press to highlight an item to be sorted. The items in the Function menu differ depending on the highlighted item.

#### Information

#### <Secret code>

- You cannot set secret codes for UIM Phonebook entries.
- The secret code can be added only when the recipient's mail address is in the form of "phone number" or "phone number@docomo.ne.jp". It cannot be added to any other form of mail address.
- If you have stored the mail address as "phone number+secret code@docomo.ne.jp", you cannot reply to mail messages from the party of that mail address. After changing the mail address to "phone number@docomo.ne.jp", set the secret code.

#### <Two-touch Dial>

#### Making a Call with a Few Touches

When the entry is stored in memory number "000" through "009" in the FOMA phone's Phonebook, you can dial the phone number just by pressing the lowest one digit of memory number and ...



#### Information

- When the Phonebook entry contains multiple phone numbers, the first phone number will be dialed.
- When you set "Restrict dialing" to a Phonebook entry of memory number 000 through 009, set it to the first phone number in the Phonebook entry.
- When you store a Phonebook entry of memory number from 000 through 009 as secret data, make a call to that entry in Secret Mode or Secret Data Only.

#### <Voice Dial>

#### **Accessing Phonebook Entries by Voice**

Just vocalize the other party's voice dial name and then the Phonebook entry is accessed for making a call.

#### Voice Dial Setting



You can store up to 100 voice dial entries selecting from among the Phonebook entries stored in the FOMA phone (Phone).

# Phonebook ► Phonebook settings Voice dial setting ► < New >

- To delete the stored voice dial entry, press (FUNC) and select "Delete" or "Delete all" and then select "YES".

#### Search the Phonebook

Select a Phonebook entry.

The display for search method you used last time appears.

- The "★" mark is added to the Phonebook entry stored in the Voice Dial List.
- 🤦 Enter a voice dial name.
  - You can enter up to 22 half-pitch katakana characters.
  - The reading (katakana only) of the Phonebook entry is displayed as the voice dial name. Correct the name to the easy-to-identify words.

#### Information

- The voice dial name set by this function is effective only for calling up a voice dial entry. For the voice guidance function, the reading (name) stored in the Phonebook is read aloud.
- When multiple similar voice dial names are stored or when the voice dial name is short, the recognition rate lowers and a wrong voice dial entry (Phonebook entry) might be accessed. In this case, rename the existing voice dial name and store it.
- You cannot store "ボイスセッテイ (Boisusettei)" as a voice dial name.

#### **Dial from Phonebook by Voice**

By your voice, you can access the Phonebook entry you set in the Voice Dial List. When "Read aloud settings" is set to "ON" and "Voice dial" is checked, the operation is guided by the voice guidance.

(for at least one second) ➤ As soon as the voice recognition start tone sounds, vocalize the voice dial name.

Start vocalizing within four seconds after the voice recognition start tone sounds.

Once the voice is recognized as a voice dial entry, the detected result is displayed.

- You cannot change the volume of the voice recognition start tone. The voice recognition start tone does not sound during Manner Mode.
- If you say the word "ボイス設定 (Boisusettei)", the display of "Voice settings" appears. (See page 91)
- When "Auto voice dial" is set to "ON", the display for Auto Voice Dial appears
  after the voice is recognized as a voice dial entry. Then about two seconds
  later, the FOMA phone automatically dials out.
- Highlight a detected result and press or

The first phone number in the selected Phonebook entry is dialed.

◆ You can bring up the detailed Phonebook display by pressing (□)(□etail).

Highlight a phone number and press or o (Dial) to make a voice call. Also, you can make a videophone call by pressing (V. Phone).

#### Information

- When you vocalize, keep your mouth away from the microphone about 10 cm. If your voice is too distant, it may be difficult to recognize your voice.
- Pronounce the voice dial name as clearly as possible.
- Before and after voice production, avoid making the sounds unrelated to the voice dial name such as clearing your throat, clicking your tongue, noisy breathing or other noise.
- Vocalize in guiet, noise-free locations.
- While vocalizing, do not put your fingers over the microphone, or press or brush the keys.

#### To access a voice dial entry using the Flat-plug Earphone/ Microphone with Switch

You need to set "Voice earphone dial" to "ON" and open the FOMA phone in advance.

- Press and hold the switch of the Flat-plug Earphone/
  Microphone with Switch (option) for at least one second.
- Perform the operations in step 1 and step 2 of "Dial from Phonebook by Voice" on page 91.

#### **Voice Settings**

Settings Other settings Voice settings
Do the following operations.

Item	Operation/Explanation		
Auto voice dial	You can automatically make a call to the phone number accessed by voice.  ON or OFF		
Voice earphone dial	You can access the voice dial entries by using the Flat-plug Earphone/Microphone with Switch (option).  On or OFF		
Read aloud settings	See page 344.		
Read aloud volume	See page 345.		
Read aloud speed	See page 345.		
Read aloud output	See page 345.		
Read aloud valid set.	See page 345.		

#### <Data Security Service>

# Saving (Restoring/Updating) Phonebook to Data Storage Center

You can save the Phonebook stored in your FOMA phone to the Data Storage Center. By accessing the Data Storage Center, you can restore/update the Phonebook to your FOMA phone. Data Security Service is a pay service that is available on a subscription basis.

You cannot use Data Security Service when you are out of the service area.
 For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

LifeKit ▶ Data Security Service ▶ Do the following operations.

Item	Operation/Explanation				
Connect to Center	►Enter your Terminal Security Code ➤ YES				
Sent/recv. PB data list	You can display the records of communication such as saving the Phonebook, mail messages, or images to the Data Storage Center.  Select a record.  Select a communication completion time in the list to switch to the detailed display.				
PB image sending	You can set whether to save images set for the Phonebook entries to the Data Storage Center.  ON or OFF				

#### Information

#### <Connect to Center>

- You cannot save the UIM Phonebook.
- When the Phonebook entries saved to the Data Storage Center exceeds the number of Phonebook entries storable in the FOMA phone's Phonebook, the excess entries cannot be updated.

#### <Sent/recv. PB data list>

 Up to 30 records are saved. When more than 30 records are saved, the older records are overwritten.

#### Information

<PB image sending>

• You cannot save the images whose output from FOMA phone is prohibited.

#### **Auto-update**

On the site of the Data Storage Center, you can set so as to periodically update and save the Phonebook entries in your FOMA phone to the Data Storage Center.

• For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

#### Information

- The Phonebook is not automatically updated while another function is working at the time of Auto-update.
- If the Phonebook cannot be updated, the notification icon of " [\$\frac{1}{2}\text{\$\titt{\$\texitt{\$\text{\$\text{\$\text{\$\text{

# Sound/Screen/Light Settings

5	Sound Settings	
	Changing Ring Tone of FOMA Phone (Select Ring Tone)	94
	Setting Play Start Position of Melody Set for Ring Tone or Alar	m
	Tone	95
	Informing You of an Incoming Call by Vibration Vibrator	96
	Using Recorded Sound as Ring Tone Voice Announce	96
	Changing Calling ToneMelody Call Setting	96
	Setting Keypad Sound Keypad Sound	97
	Setting Charging-start/end Tones Charge Sound	97
	Sounding Alarm when a Line is Likely to be Disconnected	
	Quality Alarm>	97
	Setting Ring Time for Mail and Messages R/F	
	Mail/Message Ring Time>	97
	Sounding Ring Tone from Earphone Only	
		98
	Silencing TonesManner Mode	98
	Solosting Manner Mode Type  Manner Mode Set	00

Screen/Light Settings	
Changing DisplaysDisplay Setting	101
Displaying an Image Stored in Phonebook during Ringing	
	103
Setting Displays for Private Window < Private Window >	103
Displaying Arrival Information by Opening FOMA Phone	
Received Mail/Call at Open	104
Setting Lights for Display and KeypadBacklight	104
Adjusting Quality of Display Automatically(LCD AI)	105
Making Display Hard to See from People Around	
View Blind>	105
Setting Quality of Display Image Quality	106
Setting Color Combination for Display	
(Color Theme Setting)	106
Setting Display of Main Menu	106
Using Kisekae Tool Kisekae Tool>	107
Using Feel FunctionFeel Settings>	108
Setting Color of Call/Charging Indicator and Others	
dllumination>	109
Checking Missed Calls and New Mail by Tone and Call/Chargin	ng
Indicator	111
Using Icons on Desktop Desktop Icon>	112
Changing Character Font Font>	115
Changing Character Size	115
Setting Clock Display	117

#### <Select Ring Tone>



#### **Changing Ring Tone of FOMA Phone**

You can set ring tones by incoming type.

If you select an i-motion movie, the i-motion movie and sound are played back for incoming calls/messages. (Chaku-motion)

- The ring tone is the PCM sound source, chord of 128 tones, and ADPCM compliant.
- See "Add to Phonebook" for setting a ring tone by Phonebook entry, and see "Group Setting" for setting it by group.

#### ■ Ring Tone List (pre-installed)

 
Display	Title	The Name of Lyricist/Composer	
Pattern 1	_	_	
Pattern 2	_	_	
Pattern 3	_	_	
Pattern 4	_	_	
Pattern 5	_	_	
RING-UltraLiving01	RING-UltraLiving01	Takuma Nonaka	
RING-UltraLiving02	RING-UltraLiving02	Takuma Nonaka	
RING-UltraLiving03	RING-UltraLiving03	Takuma Nonaka	
RING-COM.A	RING-COM.A	COM.A	
RING-Numb	RING-Numb	Numb	
WHAT I'VE DONE	WHAT I'VE DONE	Composer: BENNINGTON CHESTER CHARLES Composer: BOURDON ROBERT G Composer: DELSON BRAD Composer: FARRELL DAVID Composer: HAHN JOSEPH Composer: SHINODA MIKE	
THE JAMES BOND THEME	THE JAMES BOND THEME	Composer: NORMAN MONTY	
JAZZ	JAZZ	_	
POLET SHMAJA	POLET SHMAJA	Composer: RIMSKIJ KORSAKOVICH NICOLAS ANDR	

Display	Title	The Name of Lyricist/Composer	
RHAPSODY ON A	RHAPSODY ON A THEME	Composer: RACHMANINOFF	
THEME	OF PAGANINI OP 43	SERGEI	
SE-UltraLiving01	SE-UltraLiving01	Takuma Nonaka	
SE-UltraLiving02	SE-UltraLiving02	Takuma Nonaka	
SE-UltraLiving03	SE-UltraLiving03	Takuma Nonaka	
SE-Numb01	SE-Numb01	Numb	
SE-Numb02	SE-Numb02	Numb	
SE-CubeJuice	SE-CubeJuice	CUBE JUICE	
SE-COM.A	SE-COM.A	COM.A	
Spy	_	_	
Magical Stick	_	_	
Twinkle	_	_	
Smart Beep	_	_	
Garden Terrace	_	_	
Waterdrop	_	_	
P705i µ-imotion <sup>®</sup>	P705i µ-imotion		
PRO µ	PRO μ	Numb	
PROSOLID $\mu$ -	PROSOLID $\mu$ -imotion		
imotion*			

\* i-motion movie

(Note) The name of lyricists and composers are described conforming to the JASRAC web page.

Whole part of long titles may not be displayed due to restriction of the display size.



# Settings Sound Select ring tone

#### Select an incoming type.

 Select an item and press (Play) to check the contents actually played back or displayed.

#### Select ring tone Select a type of ring tone.

Melody . . . . . . . . . Sets a melody as a ring tone.

MUSIC ...... Sets a Chaku-uta Full<sup>®</sup> music file as a ring tone.

8 motion ..... Sets an i-motion movie as a ring tone. (Chaku-motion/

Chaku-uta®)

Chaku-uta

Voice announce . . . . Sets the sound recorded by "Voice announce" as a ring tone. The setting is completed.

tone. The setting is completed.

OFF ......Sets a ring tone off. The setting is completed.

#### Select a folder►Select a ring tone.

- If you select "MUSIC" in step 2, select "Fullsong ring tone" or "Point ring tone". (See page 335)
- See page 169 when you select "Search by i-mode".

#### Information

- You can set the Call Receiving display by selecting "Phone" or "Videophone", and then by selecting "Select calling disp.". Go to step 2 on page 102.
- You can set the Mail Receiving display by selecting "Mail", "Chat mail", "MessageR" or "MessageF", and then by selecting "Select receiving disp.". Go to step 2 of "Set Stand-by Display" on page 101.
- The priority order of ring tones is as follows: "Read aloud settings" → "Setting for Phonebook entry" → "Group setting" → "Select ring tone". When a call comes in to the additional number, the ring tone specified by "Set as ring tone" of "Multi number" sounds.
  - If a call comes in to Number B while using 2in1, the priority order of the ring tones is as follows: "Read aloud settings" → "Setting for Phonebook entry" → "Group setting" → "Ringtone set, for No. B" (see page 388).
- The ring tone or images set at purchase might be played back or displayed for incoming calls or messages, depending on the combination of this function and "Display setting".
- $\bullet$  See "  $\S$  motion Info" to check whether the i-motion movie can be set for a ring tone.
- When you set an i-motion movie containing video and sound for a mail ring tone, you can press (CLR) or others to stop the ring tone.

#### Information

- When you set an i-motion movie containing video and sound for a ring tone (Chaku-motion), it is played back taking priority over "Display setting". However, if you set a voice-only i-motion movie for the ring tone, the image set by "Display setting" is displayed.
- When you set an i-motion movie containing video and sound for "Select calling disp.", the i-motion movie is played back taking priority over this function for incoming calls. However, if you set an i-motion movie containing only video for "Select calling disp.", the ring tone selected for this function is played back for incoming calls.
- When different types of mail i-mode mail, SMS messages, chat mail, or Messages R/F are received at the same time, the priority order of ring tone as follows: "Chat mail" "i-mode mail/SMS" "MessageR" "MessageF". If you receive the same type of mail simultaneously, the ring tone corresponding to the mail you have received last works.
- For the melody downloaded from a site or attached to mail, or the melody prohibited to attach to mail or output from the FOMA phone, a playing part may be specified in advance. When the play-part-specified melody is set for the ring tone, only the specified part is played back.

#### <Position to Play>

MENU 6 4

**Setting Play Start Position of Melody Set** for Ring Tone or Alarm Tone

# Settings Sound Position to play Select a play start position.

Play all . . . . . Starts playback from the beginning of the melody.

Play portion . . . Starts playback from the specified point set in the melody.

<Vibrator>



# Informing You of an Incoming Call by Vibration

You can set the vibrator to notify you of incoming calls and mail.

Settings Incoming call Vibrator
Select an incoming type Select a vibration pattern.

Pattern 1 . . . . . . Alternates between vibration on (about 0.5 second) and off (about 0.5 second).

Pattern 2...... Alternates between vibration on (about 1 second) and off (about 1 second).

Pattern 3...... Alternates between vibration on (about 3 seconds) and off (about 1 second).

 $\label{eq:Melody linkage.} \mbox{ . . . Vibrates in time with the vibration pattern stored in the melody.}$ 

OFF..... Does not vibrate.

- While you are selecting a pattern, the FOMA phone vibrates by the selected pattern for confirmation. However, it does not vibrate if you select "Melody linkage".
- The following icons are displayed on the Stand-by display while the vibrator is set:
  - Vibrates for incoming voice calls or videophone calls.
  - Y<sub>■</sub>: Vibrates for incoming mail, chat mail or Messages R/F.
  - Y':: Vibrates for incoming voice calls or videophone calls, and vibrates for incoming mail. chat mail or Messages R/F.

#### Information

- The priority order of vibrators is as follows: "Setting for Phonebook entry" →
   "Group setting" → "Vibrator".
- $\bullet$  The vibrator vibrates at a regular strength, regardless of the ring volume level.
- Even when "Melody linkage" is set, the FOMA phone vibrates with "Pattern 2" if an i-motion movie or melody with no vibration pattern is set for the ring tone.
- Be careful not to leave the FOMA phone on a desk or similar places with the vibrator activated; when a call comes in, the FOMA phone might move and fall by vibration.

<Voice Announce>



#### **Using Recorded Sound as Ring Tone**

You can set the sound you recorded with the FOMA phone for a ring tone (including a ring tone for Number B of 2in1), On hold tone/ Holding tone, alarm for "Alarm", "Schedule", and "ToDo", and an answer message for Record Message.

You can record only one item for about 15 seconds.

# LifeKit►Rec.msg/voice memo►Voice announce ►Record

- To suspend recording midway, press (Stop), (Stop), (CLR). The contents recorded to that point are saved.
- The tone beeps about 5 seconds before the recording time (for about 15 seconds) ends. When recording ends, the tone beeps twice, and the former display returns.
- The recording is suspended when a call comes in, when an alarm for "Alarm", "Schedule", or "ToDo" sounds, or when you switch displays using Multitask during recording. (The contents recorded to that point are saved.)
- To play back the recorded sound, select "Play". To suspend playback midway, press () (Stop), (), (CLR).
- To erase the recorded sound, select "Erase", then select "YES".

#### <Melody Call Setting>

#### **Changing Calling Tone**

Melody Call is the service that changes the calling tone phone callers hear, to a melody you like.

For details, refer to "Mobile Phone User's Guide [Network Services]".

Melody Call is a pay service which is available on a subscription basis.



#### Information

Melody Call is not available for incoming videophone calls.

#### Information

When you select "YES" from the confirmation display asking whether to connect
to the site, the line is connected to the i-mode site. You are not charged a packet
communication fee for connecting to the site for settings, however, you are
charged for connecting to the IP site, i-mode menu site, and free melody corner.

#### <Keypad Sound>



#### **Setting Keypad Sound**

**1** MENU ► Settings ► Sound ► Keypad sound ► ON or OFF

#### Information

- The sound volume for keypad sound cannot be changed.
- If you set this function to "OFF", the battery level tone (see page 43) and respective warning tones do not sound.
- The keypad does not make a sound when you press , during ringing, or during playback of a moving image or i-motion movie.
- When you press with your FOMA phone closed, the FOMA phone works according to "Info notice setting" on page 111.

#### <Charge Sound>

#### **Setting Charging-start/end Tones**

The confirmation tone sounds twice when charging starts/ends.

Settings Other settings Battery
Charge sound ON or OFF

#### Information

- The sound volume for charge sound cannot be changed.
- The charging confirmation tone does not sound when a display other than the Stand-by display is shown or during Manner Mode or Public Mode (Drive Mode).

#### <Quality Alarm>



# Sounding Alarm when a Line is Likely to be Disconnected

When a call is likely to be disconnected midway due to bad radio wave conditions, an alarm sounds to inform you right before disconnection.

# Settings ► Talk ► Quality alarm ► Select an alarm.

No tone . . . . Does not sound. High tone . . . High alarm sounds. Low tone . . . . Low alarm sounds.

#### Information

- You might be disconnected without hearing an alarm if radio wave conditions deteriorate suddenly.
- An alarm for "Quality alarm" sounds only from the earpiece during a videophone call.

#### <Mail/Message Ring Time>



#### **Setting Ring Time for Mail and Messages R/F**

You can set the duration of the ring tone which sounds for incoming i-mode mail, SMS messages, Chat mail and Messages R/F.

- Settings ➤ Sound ➤ Mail/Msg. ring time
  - ► Select a type of mail or message ➤ ON or OFF
  - Enter a ring time (seconds).
  - Enter in two digits from "01" through "30".

<Headset Usage Setting>



#### **Sounding Ring Tone from Earphone Only**

You can set where you make the ring tone and alarm sound from for when you connect the Flat-plug Earphone/Microphone with Switch (option).

Settings Sound Headset usage setting Headset + speaker or Headset only

#### Information

- Even when you set "Headset only", the ring tone sounds from both the earphone
  and speaker about 20 seconds after ringing starts. However, the tone does not
  sound from the speaker but sounds from the earphone only even after 20
  seconds have elapsed if the tone sounds for the operations other than incoming
  calls, incoming mail, and alarm notification.
- Even when you set "Headset only", the tone sounds from the speaker when you
  do not connect the Flat-plug Earphone/Microphone with Switch or when you start
  shooting still or moving images.
- In the following cases, the tone sounds from the earphone when the Flat-plug Earphone/Microphone with Switch is connected, and from the speakers when it is not connected, regardless of this setting.
  - · During playback of a melody
  - · During playback of an i-motion movie
  - · While i-appli is running
  - · During playback of a music file by MUSIC Player
  - · During playback of a Music&Video Channel program
- Do not wind the cord of the Flat-plug Earphone/Microphone with Switch around the FOMA phone.
- The FOMA phone may pick up noise if you take the cord of the Flat-plug Earphone/Microphone with Switch close to the FOMA phone during a call.

#### <Manner Mode>

#### **Silencing Tones**

You can just press one key to silence the FOMA phone muting the ring tone, keypad sound, etc.

You can use "Manner mode set" to select Manner Mode functions from three types; "Manner mode", "Super silent", or "Original". While "Manner mode" or "Super silent" is activated, or while "Mic sensitiv." is set to "Up" in "Original", you can talk softly on the phone but your voice can still be heard clearly at the other end.

# 1

#### During standby/During a call

► # (for at least one second)

Manner mode selected in "Manner mode set" is set.

- When FOMA phone is closed, press and hold for at least one second to activate Manner Mode.
- During Manner Mode, " " is displayed. The settings you selected for "Manner mode set" are also displayed.

Y

ightharpoonup in the image is not included in the image is not include

5♪ / 5x / 5x : Indicate that "Ring volume" has been set to "Silent".

#### Information

- If you activate Manner Mode during a call or calling, the message to that effect appears.
- The recording start tone sounds even in Manner Mode when you shoot still images or moving images.
- In Manner Mode, if you try to play back a melody, the confirmation display appears asking whether to play it back. Select "YES" to play back the melody at the volume set for "Phone" of "Ring volume". If the setting is "Silent" or "Step", the volume is Level 2.
- In Manner Mode, if you do the following operations, the confirmation display appears asking whether to play back voice or music.
- · Playing back an i-motion movie
- · Playing back a music file by MUSIC Player
- · Playing back a Music&Video Channel program

Select "YES" to play it back at the volume set for each player. When you change the volume level, it is played back at the set volume for the next time.

#### Information

• When a Flat-plug Earphone/Microphone with Switch (option) is connected, the sound comes out of the earphone. The confirmation display asking whether to play back sound or music files during Manner Mode does not appear. Further, the playback tone does not sound from the speakers even if you unplug the Flat-plug Earphone/Microphone with Switch during playing back sound or music files by each player.

#### To release Manner Mode

Press and hold # for at least one second. During a call or calling, two beeps sound and the message that is released appears.

 When FOMA phone is closed, press and hold ▼ for at least one second to release Manner Mode

#### To activate Manner Mode during ringing

Press ( Memo ) or ▼

Manner Mode is activated and Record Message is simultaneously activated so that the caller can leave a voice/video message.

Even when "Record message setting" has not been set to "ON", the Record Message function works.

Press (a) or (answer) to answer a voice call, or press (a), (answer) to answer a videophone call.

- When five messages for voice calls and two messages for videophone calls have already been recorded, Record Message does not work. Manner Mode specified by "Manner mode set" works.
- After you finish a call, Manner Mode is still activated.

#### <Manner Mode Set>



#### **Selecting Manner Mode Type**

You can select one of three types of operations for Manner Mode.

Operations during Manner Mode

Operations during Mann	Manner	Super	Original	
	Mode Silent		0.1ga.	
Record message	Set value of Record		ON or OFF	
		sage		
Vibrator*1	0	N	ON or OFF	
Phone volume	Sile	ent	Silent through Level 6 and step	
Mail volume	Sile	ent	Silent through Level 6 and step	
Alarm volume <sup>*2</sup>	Sile	ent	Silent through Level 6 and step	
VM tone	ON	OFF	ON or OFF3	
Keypad sound	OFF		ON or OFF4	
Microphone sensitivity	U	p	Normal or Up	
Low voltage alarm tone			ON or OFF	
(Low battery alarm)	OFF		When "LVA tone" is set to "ON",	
			it works with the same set value	
			as ①.**3	
Confirmation tone for	Silent		Works with the same set value	
selecting ring tone	O.I.	OIII	as ① · ②.	
On hold tone	Silent		Works with the same set value as ①.**4	
Holding tone	Silent		Works with the same set value as ①.**5	
ToruCa obtained tone and	Silent		Works with the same set value	
ToruCa failed-to-obtain tone			as ①.	
Confirmation tone for	ON	OFF	Works with the same set value	
recording voice announce	ON	OFF	as ③.	
Battery level tone	Silent		Silent	

	Manner Mode	Super Silent	Original
Voice recognition start tone	Silent		Silent
Confirmation tone for checking missed calls and new mail	Silent		Works with the same set value as ①.**6
Warning tones	Silent		Works with the same set value as 4.
Schedule alarm	Silent		Works with the same set value as 1.
Start tones for shooting still and moving images  PRO   Not available	Lev	el 4	Level 4
Confirmation tone for selecting shutter sound  PRO   Not available	_		Works with the same set value as ①.**4
Switching to Hands-free by "Hands-free w/ V. phone"	OFF		OFF
Read aloud volume	Sile	ent	Works with the same set value as "Read aloud volume" on page 345.

※1 Vibrator works for the following tones:

Ring tone and alarm for "Alarm", "Schedule", and "ToDo"

The vibration pattern is the same as the setting described on page 96. However, if the setting described on page 96 is "OFF", "Pattern 2" is activated.

Confirmation tone for checking missed calls and new mail

· Vibrates for about 1 second when you have missed calls or new mail messages.

- · Vibrates for about 0.2 second when you have no missed calls and new mail messages.
- \*2 When "Prefer manner mode" on page 347 is set to "OFF", the alarm tone sounds at the volume set for Alarm.
- $\ensuremath{\%3}$  The tone sounds at Level 1 when  $\ensuremath{\bigcirc}$  is "Silent".
- %4 The tone sounds at Level 2 when ① is "Step".
- ※5 The tone sounds at Level 1 when 

  ① is not "Silent".
- %6 The tone sounds at Level 6 when 1 is not "Silent".

You can select from among standard "Manner mode" to inform you of incoming calls or mail by the vibrator, "Super silent" to erase sounds including confirmation tones from the earpiece, or "Original" to customize operations.

Settings Incoming call Manner mode set

Manner mode, Super silent or Original

Do the following operations.

Item	Operation/Explanation
Record msg.	ON or OFF     Even if you select "ON", the ring time is fixed to about 13 seconds and cannot be changed when "Record message setting" on page 70 is set to "OFF".     See page 70 for Record Message Setting.
Vibrator	You can set the FOMA phone to vibrate for incoming calls and mail.  ON or OFF  See page 96 for Vibrator.
Phone vol.	You can adjust the ring volume for incoming voice calls and videophone calls.  • Use to adjust the volume.  • See page 67 for Ring Volume.
Mail vol.	You can adjust the ring volume for i-mode mail, SMS messages, and Messages R/F.  Use to adjust the volume.  See page 67 for Ring Volume.
Alarm vol.	► Use  to adjust the volume. • See page 346 for Alarm.
VM tone	You can set the FOMA phone to sound a confirmation tone for when a record message is played back, a voice memo is recorded or played back, and a movie memo is recorded.  ON or OFF
Keypad sound	► ON or OFF • See page 97 for Keypad Sound.
Mic sensitiv.	Normal or Up

 Item
 Operation/Explanation

 LVA tone
 ▶ ON or OFF

 • See page 43 for LVA Tone (low battery alarm).

Press ☑(Finish).

<Display Setting>



#### **Changing Displays**

#### **Set Stand-by Display**

You can set an image for the Stand-by display. You can set also i-motion movies shot by the FOMA phone or downloaded from sites for the Stand-by display.

- Settings Display Display setting
  Stand-by display Select a type of image.
  - If you select "Calendar/schedule", select a display format, and then select "BG image ON" or "BG image OFF". If you select "BG image OFF", the setting is completed.
- Select a folder►Select an image.
  - When the image is larger than the Stand-by display, the overall image is displayed with the dimensions shrunk and proportional ratio retained. The image smaller than the Stand-by display is displayed in equivalent dimensions.
  - See page 169 when you select "Search by i-mode".

#### When Schedule is set

The list of up to 10 schedule events appears on the Stand-by display.

• From the Stand-by display, press and then press to show the previous or following schedule event. Press (Select) to show the detailed Schedule display.



#### When Calendar + Schedule is set

The calendar and the list of up to 10 schedule events appear on the Stand-by display.

From the Stand-by display, press , use to select the calendar or schedule list, and then press (Select). Use to select the previous or following calendar or schedule event and then press (Select).

The Calendar display appears for the calendar and the detailed Schedule display appears for a schedule event.



#### When Calendar is set

The calendar in the set format appears on the Stand-by display. You can check the calendar for the previous or next month or set schedule events (see page 349) with ease.

• From the Stand-by display, press 
and then 
to display the previous calendar, or press 
to display the next calendar.

Press ( Select ) again to set "Schedule".



#### When an original animation or animation GIF is set

It is played back when you display the Stand-by display or press ( ) from the Stand-by display. The first frame is displayed as the Stand-by display.

#### When a Flash movie is set

It is played back when you display the Stand-by display or press (a) from the Stand-by display.

#### When an i-motion movie is set

It is played back when you display the Stand-by display or press (a) from the Stand-by display. The first frame is displayed as the Stand-by display.

- Press , M, M, M, CLR, CLR, CLR or to end the playback.
- If you play back an i-motion movie during Manner Mode, the sound is not played back

#### Not to display icons on the Stand-by display

Press From the Stand-by display.

Status icons, calendar, schedule events, notification icons, and desktop icons are cleared. Press again to show the icons and others.

When a Flash movie is set as the Stand-by display, however, the following operations are performed:

· When you press 
during playback of a Flash movie, the playback pauses.

Press 
again to clear the icons and others.

#### Information

- When a desktop icon is pasted on the Stand-by display, pressing ( ) highlights
  the desktop icon, the calendar, or schedule list previously used.
   Highlight the item to be displayed, and press ( )( Select ).
- The schedule list shows the today's schedule events whose start time has not come, and the today's schedule events set as "Whole day". "Holiday" and "Anniversary" are not displayed.
- You cannot display the schedule list during Personal Data Lock, Lock All, or Omakase Lock.
- Some i-motion movies might not be correctly displayed.
- You cannot set a still image which is larger than Stand-by (240 x 427) size or in excess of 300 Kbytes for the Stand-by display.
- You cannot set some images or i-motion movies for the Stand-by display.
- The sound of Flash movies cannot be played back.

#### Set the Wake-up Display

You can set an image or message to be displayed for when the power is turned on.

# Settings Display Display setting Wake-up display Select a type of image.

- If you select "Message", enter a message. You can enter up to 50 full-pitch/ 100 half-pitch characters.
- See page 169 when you select "Search by i-mode".

#### Information

- You cannot set some images or i-motion movies for the Wake-up display.
- The sound of Flash movies cannot be played back.

#### Set Displays for Dialing/Calling and Others

You can set an image for the Dialing/Call Receiving display, Mail Sending/Mail Receiving display, and Checking display.

# Settings Display Display setting Select a type of display.

- When "Incoming call" or "Videophone incoming" is selected, select "Select calling disp.".
- When "Mail receiving" is selected, select "Select receiving disp." and go to step 2 of "Set Stand-by Display" on page 101.
- If you select "Dialing", "Videophone dialing", "Mail sending", "Check new message", or "Mail/msg. rcpt result", go to step 2 of "Set Stand-by Display" on page 101.
- Select "Incoming call", "Videophone incoming" or "Mail receiving" and press [\(\text{\text{D}}\)] to check the contents actually displayed or played back.

#### Select a type of image.

Go to step 2 of "Set Stand-by Display" on page 101.

#### Information

- When you select "Incoming call", "Videophone incoming", or "Mail receiving", select "Select ring tone" to set the ring tone. Go to step 2 on page 95.
- The priority order of displays for call receiving is as follows: "Setting for Phonebook entry" → "Group setting" → "Disp. PH-book image" → "Display setting". However, when "Incoming call" or "Videophone incoming" of "Read aloud settings" is set to "ON", the default image is displayed.

The same order applies if a call comes in to Number B while using 2in1. However, when you set an i-motion movie containing video and sound for a ring tone (Chaku-motion) by "Ringtone set. for No. B", it is played back as Chaku-motion, taking priority over this function.

- When you set an i-motion movie containing video and sound for a ring tone (Chaku-motion), it is played back for incoming calls, taking priority over this function. However, if you set a voice-only i-motion movie, the image set by this function is displayed.
- When you set an i-motion movie containing video and sound for "Select calling disp.", the i-motion movie is played back taking priority over "Select ring tone" of "Incoming call" for incoming calls. However, if you set an i-motion movie containing only video for "Select calling disp.", the ring tone selected for "Select ring tone" of "Incoming call" is played back.
- The images or ring tone set at purchase might be displayed or played back for incoming calls or messages, depending on the combination of this function and "Select ring tone".
- You cannot set some images for "Display setting".
- The sound of Flash movies is not played back.

#### Set Battery Icon and Antenna Icon

You can set the icons for battery level and radio wave reception level that appear on the display.

Settings Display Display setting
Battery icon or Antenna icon Select a pattern.

#### Information



#### Show Icons in Color/Monochrome

Settings Display Display setting Icon color Color or Monochrome

• You cannot change the battery icon and antenna icon.

#### <Display Phonebook Image>

# Displaying an Image Stored in Phonebook during Ringing

If the caller ID notified by the caller matches the phone number stored in the Phonebook, the still image stored in the Phonebook is displayed.

Settings ► Incoming call ► Disp. PH-book image ► ON or OFF

#### Information

 The priority order of displays for call receiving is as follows: "Picture for Phonebook entry" → "Picture for group" → "Image for Phonebook entry" → "Display setting". However, when "Incoming call" or "Videophone incoming" of "Read aloud settings" is set to "ON", the default image is displayed.

#### <Private Window>



#### **Setting Displays for Private Window**

Settings Display Private window ON or OFF Do the following operations.

Item	Operation/Explanation
Clock	You can set the display pattern of the clock.  Pattern 1, Pattern 2 or Pattern 3
Orientation	You can set the direction of the clock to be displayed.  Pattern 1 or Pattern 2

Item	Operation/Explanation
Brightness	You can adjust the brightness to Level 1 (dark) through Level 3 (bright).  Select a brightness level.
Called	You can display the phone number (name when stored in the Phonebook) of the caller during ringing.  > ON or OFF
	You can set whether to display a Chaku-moji message. ▶ON or OFF
Mail	You can display the received date/time and others of mail messages or Messages R/F. (See page 31)  ON or OFF  The received date/time and others of the mail messages or Messages R/F in the box or folder with security set are not displayed.
i-Channel ticker	► ON or OFF • You can set for each mode of 2in1. When 2in1 is deactivated, it becomes common to the setting in A Mode.
Disp. connection	You can set whether to display animations/characters during communication.  NON or OFF

#### <Received Mail/Call at Open>

# Displaying Arrival Information by Opening FOMA Phone

When you have a missed call, new mail message, new chat mail message, or new Message R/F, the detailed Missed Call display/Inbox List/Chat Mail display/Message R/F List is displayed at opening the FOMA phone.

Settings Display Recv. mail/call at open

#### Information

 When a call comes in while you are using Simple Menu, the detailed Received Call display appears.

#### Information

- When multiple newly received messages/missed calls are found, the display for the last message/call appears.
- When a new mail message, chat mail, Message R/F are simultaneously received, the messages are displayed in the order of the chat mail message, i-mode message, Message R, and Message F.

# <Backlight> Setting Lights for Display and Keypad

Settings Display Backlight
Do the following operations.

Item	Operation/Explanation
Lighting	You can set whether to light the backlight in ordinary time.  ON or OFF  If you set to "OFF", "  Table " appears on the Stand-by display.
	Also, you can set whether to activate Power Saver Mode for the main display.  ➤ ON or OFF ➤ Enter a light time (seconds).  ■ Enter from "015" through "999" in three digits.
Charging	➤ Standard or Constant light Standard Lights during charging in the same setting as it lights in ordinary time. Constant light Always lights during battery charge.
Area	You can set the range the backlight lights in. ▶LCD+Keys or LCD
Brightness	You can adjust the brightness of the backlight for the main display to Level 1 (dark) through Level 5 (bright).  Select a brightness level.  When "Auto setting" is set, the backlight set by "Area" is automatically adjusted according to the ambient brightness that has been detected by the light sensor.

Item	Operation/Explanation
Soft light	You can set whether to light the backlight for the main display softly.  NON or OFF

#### To switch the backlight on/off by pressing one key

Press and hold 5 for at least one second.

#### Information

- When "Lighting" is set to "ON", the backlight stays lit while a call is coming in and the area specified by "Area" lights for about 15 seconds when you turn on the power, touch the keys, or open the FOMA phone. The backlight stays lit while the camera is activated or a moving image/i-motion movie is played back. When "OFF" is set, it does not light. However, it stays lit during recording of a moving image regardless of the "Lightling" setting.
- See page 75 for Backlight during a videophone call.
- If the power is supplied from external power sources such as an AC adapter (option), the setting for "Charging" applies, regardless of the on/off setting of the backlight for "Lighting".
- When you display the text of i-mode mail or Messages R/F, the lighting time varies according to the length of the text.
- If you set "Power saver mode" to "ON", the display switches to Power saver mode
  and goes off after the specified time elapses with no operation on the Stand-by
  display. When you set "Illumination in talk" of "Illumination" to "OFF", the display
  during a voice call also goes off.
- When an image other than still image is set for the Stand-by display, the Stand-by display shifts to Power Saver Mode after the image is played back and a standby time elapses.
- The FOMA phone does not switch to Power Saver Mode during data communication or charging, or while the i-oppli Stand-by display is running.
- The receiving display does not appear when you receive a call in Public Mode (Drive Mode).

#### <LCD AI>

#### **Adjusting Quality of Display Automatically**

You can set whether to automatically adjust the brightness of the display backlight and to compensate the image quality according to that brightness during playback of i-motion movies, PC movies, or Music&Video Channel programs, or during a videophone call.

#### Settings Display LCD AI ON or OFF

 If you operate the setting from the Function menu during a videophone call, the setting is effective only for the current videophone call.

#### Information

- If you set to "ON", the brightness is adjusted within the level specified for "Brightness" of "Backlight". The brightness is adjusted also while you are selecting a menu item.
- This function is disabled during Play Background.

#### <View Blind>

#### Making Display Hard to See from People Around

Settings Display View blind On or OFF
► Select a contrast.

- You can adjust the contrast to Level 1 through Level 3. (most difficult to view in Level 3)
- You can set/release View Blind with the selected contrast retained also by pressing and holding 8 for at least one second.

#### Information

- - · During Omakase Lock · During Lock All · While initializing
- · While i-oppli is running · While displaying a PDF file · While entering characters

#### <Image Quality>

#### **Setting Quality of Display**

MENU Settings Display Image quality Select an item.

Normal . . . . Normal image quality Vivid . . . . . Vivid image quality

Dynamic . . . Dynamic image quality in which motion is emphasized

<Color Theme Setting>



#### **Setting Color Combination for Display**

You can set the display color pattern of characters and backgrounds. and so on.

MENU Settings Display Color theme setting Select a color theme.

• While a color theme is selected, the selected color theme appears on the display for confirmation.

#### Information

- You cannot change the color for icons and images displayed in multiple colors, the DoCoMo pictographs, and the Internet web pages (sites) supporting i-mode.
- You might not be able to see some pictographs depending on the color you set.

#### <Menu Icon Setting>

#### **Setting Display of Main Menu**

You can change the icons and the background images of Main Menu.

►(ic) (FUNC ) Menu icon setting Select a pattern.



TGB-menu01

TGB-menu04



TGB-menu02







MENU (5) (7

TGB-menu03



Normal

# When you select "Customize" in step 1, select a menu icon or background image to be changed

- Select a folder
- Select an image.

Repeat step 2 and set menu icons and a background image.

- While selecting a menu icon or background image, press ( Play ) to confirm the currently set image.
- To reset the menu icon and background image set to "Customize" to "スタンダード (Standard)" in the "Pre-installed" folder, press [家(『FINC』) and select "Reset" or "All reset", then select "YES".
- See page 169 when you select "Search by i-mode".

#### Information

- The image you can customize is a JPEG or GIF image whose size is Stand-by (240 x 427) or smaller and up to 300 Kbytes. Perform "Change size" or "Trim away" for other images.
- When a customized image is deleted, "スタンダード (Standard)" in the "Pre-installed" folder returns.
- When Personal Data Lock is activated while "Customize" is set, the default image is displayed.
- When you set "Customize", the main menu icons do not switch even if you switch "Select language".



#### <Kisekae Tool>

# **Using Kisekae Tool**

You can use Kisekae Tool to change the ring tone, Stand-by display, menu icons and others at a time.

- See page 168 for details on how to download Kisekae Tool files.
- Items that can be set with Kisekae Tool
- · Select ring tone

Illumination

· Display setting

 
· Illumination in talk

· Color theme setting

· Side key illumination

Menu icon setting

- · Tone
- · "Clock" and "Orientation" of Private window
- Items that can be set differ depending on the Kisekae Tool file.
- The setting change of phone/videophone ring tones, mail ring tone, and Stand-by display is applied only to the A Mode of 2in1. The other changes are applied to the all modes of 2in1.



- "★" is added to the Kisekae Tool file collectively set at the moment.
- Depending on the selected Kisekae Tool file, the confirmation display might appear asking whether to change the character size.

- For the functions set by Kisekae Tool, each setting display is shown with "Follow Kisekae Tool" highlighted. You can separately change each setting, however, if you want to reset to the setting by Kisekae Tool, you need to perform collective settings again. You cannot select "Follow Kisekae Tool".
- If you use Kisekae Tool to change the design of the Menu display, some menu configurations change according to the usage frequency depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply.
- In that case, you cannot operate as described in this manual, so you are advised to show Main Menu of "Normal" by "Disp. default MENU", or reset Main Menu by "Reset menu screen".
- When you set "ドコモダケ\_P705i µ" ("ドコモダケ\_P705iCL" for PROSOLID µ) of Kisekae Tool for Main Menu, the main menu items and sub-menu items are displayed in Japanese even if "Select language" is set to "English".

Reset

### **Function Menu of Main Menu** Function menu Operation/Explanation Menu icon setting See page 106. You can manually replace the items on Main Menu. Change launcher ► Select the menu item to sort ➤ YES Disp. default MENU You can temporarily show Main Menu of "Normal". • Once you close Main Menu of "Normal", the currently set Main Menu returns.

### **Reset Changed Design**

You can reset the items changed by Kisekae Tool.

See page 108.

MENU ► ( FUNC ) ► Reset ► Enter your Terminal Security Code ➤ Select an item.

#### Reset disp. /sound

- Resets all of "Items that can be set with Kisekae Tool" to the default Reset menu screen
- ... Resets Main Menu to the default. You can reset also by pressing and holding (CLR) for at least one second from the Stand-by display and selecting "YES".

#### Reset menu log

.. Resets the operation records of Main Menu to the default.

#### Information

- Even if you perform "Reset disp. /sound" or "Reset menu screen", you cannot reset "Character size".
- Even if you execute "Reset menu screen". the main menu items manually replaced by "Change launcher" are not reset.

#### <Feel Settings>

# **Using Feel Function**

The Feel function reproduces the atmosphere of "communications" or "mail" by actions of 45 types of animated characters.

- To end the playback, press ( or (CLR)
- When the FOMA phone is closed, press ▲/▼ to end the playback.





#### Feel \* Talk

Once you activate Feel \* Talk, a Feel \* Talk image is played back when a call ends. You can play it back also from the Redial List, Dialed Call List, Received Call List, or each detailed display.

You can make the Call/Charging indicator light/flicker in synchronization with Feel \* Talk when you close your FOMA phone after ending a call.

You cannot use Feel \* Talk for videophone calls.

MENU Settings Feel settings Feel \* Talk ▶ Do the following operations.

Item	Operation/Explanation
Display after talk	A Feel * Talk image is played back on the Stand-by display when a call ends.  ON or OFF  When this function is set to "OFF", a Feel * Talk icon does not appear on each record display even while "Disp. /play in history" is set to "ON".

Item	Operation/Explanation
Disp. /play in history	A Feel * Talk icon appears on each record display.  ➤ ON or OFF
Illumination	At the first time of closing the FOMA phone after a call ends, the Call/Charging indicator lights/flickers in synchronization with Feel * Talk.  • ON or OFF • The Call/Charging indicator lights/flickers regardless of the setting of "Illum. when folded".

• A Feel \* Talk image is played back even if you end a call after switching between a videophone call and voice call.

#### Feel \* Mail

Once you activate Feel \* Mail, a Feel \* Mail image is played back after you receive an i-mode mail/SMS message. You can play it back also from the Received Address List/detailed display or Inbox List.

Settings ► Feel settings ► Feel \* Mail Do the following operations.

Item	Operation/Explanation
Disp. /play new one	A Feel * Mail image is played back on the Private window after you receive an i-mode mail/SMS message.  ON or OFF  When this function is set to "OFF", a Feel * Mail icon does not appear on each record display, the Received Address List, the Inbox List, and the detailed Received Mail display even while "Disp. /play in history" is set to "ON".
Disp. /play in history	A Feel * Mail icon appears on each record display, the Received Address List, the Inbox List, or the detailed Received Mail display.  ON or OFF

### Play Back Feel \* Talk/Feel \* Mail Image from Each **Record Display**

Select a record item which contains a Feel \* Talk or Feel \* Mail icon from Redial, Dialed Calls, Received Calls, or the Received Address List, Inbox List or show each detailed display.





Redial display

- A Feel \* Talk/Feel \* Mail icon moves when it is selected or shown.
- Press (D) (

The Feel \* Talk/Feel \* Mail image is played back.

- To end the playback, press (CLR).
- When you display the record display from another function, you cannot play back the Feel \* Talk/Feel \* Mail image by pressing ( ) ( ) ( ) ( ).

#### <ll>Illumination>

# **Setting Color of Call/Charging Indicator** and Others

MENU Settings Illumination Do the following operations.

Item	Operation/Explanation
All illum. setting	You can set all illumination items at one time.  Select a pattern.
Illumination	See page 110.

Item	Operation/Explanation
Illumination in talk	You can set the flickering color of the Call/Charging indicator for during a call.  Use to select a color.  The Call/Charging indicator flickers for confirmation while you are selecting.  It flickers in the same color as it flickers during a call, while Record Message is working, during answer-hold (On Hold), or while a call is on hold (Holding).
Miss/unread illum.	The Call/Charging indicator flickers for missed calls, new mail messages, or new Messages R/F at about 5-second interval for about 30 minutes.  ON or OFF
Music&Video ch illum.	The Call/Charging indicator flickers when obtaining Music&Video Channel programs is completed at about 5-second interval for about 30 minutes.  ON or OFF
Illum. when folded	The Call/Charging indicator lights when the FOMA phone is closed. <b>DON or OFF</b>
Hourly illumination	You can be notified of the specified time (every hour at 0 minutes) by the tone and light of the Call/Charging indicator.  Select a pattern.  "Hourly illumination" does not work while a display other than the Stand-by display is shown, or Lock All or Omakase Lock is activated.  Time tone sounds at the volume set for "Phone" of "Ring volume". If "Step" is set, it sounds at Level 2.
MUSIC illumination	The Call/Charging indicator flickers for about 15 seconds when you start playback by MUSIC Player.  ON or OFF
IC card illumination	The Call/Charging indicator lights/flickers when you place the FOMA phone over an IC card scanning device or during iC communication.  ON or OFF  It does not light/flicker during IC Card Lock.
Side key illumination	You can set the lighting color of the Call/Charging indicator for when you press with the FOMA phone closed.  Use to select a color.  The Call/Charging indicator lights for confirmation while you are selecting.  The lighting duration differs depending on the illumination.

Item	Operation/Explanation
Check settings	You can check the setting contents for "Illumination", "Illumination in talk", "Hourly illumination" and "Side key illumination".
Illumination	MENU 8 9

Illumination

You can set the flickering color of the Call/Charging indicator according to the incoming type.

Settings Illumination Illumination Do the following operations.

Item	Operation/Explanation
Set color	➤ Select an incoming type➤ Use  to select a color.  • To make the indicator light in colors "Color 1" to "Color 12" in order, select "Gradation".  • The Call/Charging indicator lights for confirmation while you are selecting.
Set pattern	You can set the flickering pattern of the Illumination.  Select a pattern.  Standard Flickers in the same pattern repeatedly.  Melody linkage Flickers with the ring tone.
Color setting (Edit color name)	➤ Edit color name ➤ Select a color ➤ Enter a name.  • You can edit "Color 1" through "Color 12" only.  • You can enter up to 10 full-pitch/20 half-pitch characters.
Color setting (Adjust color tone)	➤ Adjust color tone ➤ Select a color ➤ Adjust the color tone.  • You can adjust the color tone of "Color 1" through "Color 12 only.  • Use  to select a color and use  to change the color tone.

## Information

<Set color>

• The priority order of illumination is; "Setting for Phonebook entry" → "Group setting" → "Set color".

<Set pattern>

 Even when "Melody linkage" is set, the Call/Charging indicator flickers by "Standard" in the following cases:

When "Set color" is set to other than "Color 1" through "Color 12" and "Gradation"
 When an i-motion movie or melody with no flickering pattern is set for the ring tone

#### <Info Notice Setting>



# Checking Missed Calls and New Mail by Tone and Call/Charging Indicator

When the FOMA phone is closed, you can press ▼ to check for missed calls, new mail, new chat mail, new Messages R/F, record messages, and voice mail messages. To use this function, you need to set "Side keys quard" to "OFF" in advance.

Select an item.

ON\* . . . Notifies you whether there are missed calls, new mail, new chat mail, or new Messages R/F by the electronic sound and flickering of the Call/Charging indicator.

OFF ... Turns off the information notice.

※ When "Select language" is set to "日本語 (Japanese)", you can select "電子音 (electronic sound)" or "ポイス (voice)". With "ポイス (voice)", Japanese electronic voice and flickering of the Call/Charging indicator notify you of new chat mail, new mail, missed calls, record messages and voice mail messages in this order.

# If you press ▼ while the FOMA phone is closed

When you have a missed call, new mail, new chat mail, or new Message R/F (When the "Missed call" icon, "New mail" icon, "Chat mail", or "Message R/F" icon is displayed on the Stand-by display.)

If "Info notice setting" is set to "ON", a double-beep tone sounds and the Call/ Charging indicator lights for about five seconds.

If "Info notice setting" is set to "ポイス (voice)" in Japanese display, a beep tone sounds and a voice message announces that you have new mail, a missed call, and so on, and the Call/Charging indicator lights for about five seconds.

- When "Info notice setting" is set to "ボイス (voice)" in Japanese display, and a new Message R/F\_comes in, a voice message announces that you have new mail.
- If you press (▼) again while the voice is being played back, you can stop it.

When you have no missed calls, new mail, new chat mail, or new Message R/F If "Info notice setting" is set to "ON", or "ポイス (voice)" in Japanese display, a triple-beep tone sounds, and the Call/Charging indicator flickers for about five seconds.

Even when "Info notice setting" is set to " $\pi$ 4 $\chi$ 7 (voice)" in Japanese display, the notice is not made by voice.

- You cannot check for the mail messages held at the i-mode Center by this function.
- The confirmation function might not work depending on the function being activated.
- The sound volume for electronic sound cannot be changed.
- "ボイス (voice)" sounds at the volume set for "Phone" of "Ring volume". If "Step" is set, the sound volume is Level 2.
- The missed call, new mail, and new chat mail are informed by both the Call/ Charging indicator and the vibrator unless "Phone" of "Vibrator" has been set to "OFF".
- The vibrator notifies the information as follows:
- ·Vibrates for about 1 second when you have a missed call, new mail, or new chat mail message.
- ·Vibrates for about 0.2 second when you have no missed calls, new mail, or new chat mail message.
- If you open the FOMA phone during notification, it stops.

# <Desktop Icon>

# **Using Icons on Desktop**



#### ■ Operation when a status icon is selected

V» Vs Vš	Vibrator Shows the display for selecting an incoming type. (See page 96)
S⊅ S≥ S₽	Ring Volume Shows the display for selecting a ring volume type. (See page 67)
Q	Manner mode Shows the display for selecting a manner mode type. (See page 100)
©	Public Mode (Drive Mode) Shows the display for releasing Public Mode (Drive Mode). (See page 68)
¥	Notice call cost Shows the display for Notice Call Cost. (See page 360)
4	Alarm Shows the display for selecting Alarm, Schedule, or ToDo. (See page 346, page 349 or page 353)
III	A Music&Video Channel program is booked Shows the Music&Video Channel display. (See page 320)
9	Backlight Shows the display for Backlight. (See page 104)
<u></u>	Side keys guard Shows the display for Side Key Guard. (See page 126)
iii MTP	USB mode setting Shows the display for USB Mode Setting. (See page 302)
<b>a</b> ∼ <b>a</b> · <b>a</b>	Voice mail service Shows the display for Voice Mail Service. (See page 377)

	Voice mail service of B mode Shows the display for Voice Mail Service. (See page 377)
₽~₽	Record message for voice calls Shows the display for Rec. Msg/Voice Memo. (See page 70)
₫~₫	Record message for videophone calls Shows the display for Rec. Msg/Voice Memo. (See page 70)

### Operation when a notification icon is selected

	ation when a notification icon is selected
Mes 1	Missed call Shows the Missed Call List. (See page 55)
Misse 1	Missed call to Number B of 2in1 Shows the Missed Call List. (See page 55)
	Record message Shows the Record Message List. (See page 72)
	Videophone record message Shows the Videophone Record Message List. (See page 72)
	New i-mode mail or SMS Shows the Inbox List. (See page 198)
MEH 1	New chat mail Starts Chat Mail. (See page 222)
	New Message R/F Shows the Message R/F List. (See page 216)
	When i-oppli did not start automatically Shows the i-oppli Auto Start Info. (See page 243)
NO SHI	When a ToruCa file is obtained from a scanning device Shows the ToruCa File List. (See page 249)
	When a security error occurred on the i-αppli Stand-by display Shows the Security Error History. (See page 233)
UPOMTE	Success in downloading a Music&Video Channel program Activates Music&Video Channel. (See page 320)


X	Failure in downloading a Music&Video Channel program Activates Music&Video Channel. (See page 321)
Ĺ Mes	Missed alarm Shows the contents of the alarm that could not be notified. (See page 348)
	When Messages are held at the Voice Mail Center Shows the display for Voice Mail. (See page 376)
	When the Phonebook could not be updated by Data Security Service Shows the update display for Data Security Service. (See page 92)
	When Software Update is needed Starts Software Update. (See page 457)
	When Software Update was executed Shows the Update Completion display or the reason for not completing. (See page 456)
Auto update	When Software rewriting is possible Shows the rewriting confirmation display. (See page 455)
	When pattern data was updated automatically Shows the updated result. (See page 461)
USE	When the FOMA phone and a personal computer are connected by the FOMA USB Cable with Charge Function 01 (option) Shows the display for setting "USB mode setting". (See page 302)

### Operation when a desktop icon is selected

(See page 224)

่≣ีก	Phone number Shows the Dialing display with the phone number entered. (See page 50)
) - K	URL of site Shows the site of that URL. (See page 156)
<b>)</b>	URL for Full Browser Shows the site of that URL by Full Browser. (See page 256)
X	Sender's/Destination address of i-mode mail Shows the Message Composition display with the mail address entered. (See page 182)
<b>%</b>	Sender's/Destination address of SMS Shows the SMS Composition display with the mail address entered.

QZ,	i-oppli <sup>≭</sup> Starts the i-oppli program. (See page 231)
	Picture* Shows it on the Picture viewer. (See page 273)
	i-motion movie* Plays it back by the i-motion player. (See page 280)
ಲ್ಡ	Chara-den image <sup>®</sup> Plays it back by the Chara-den player. (See page 287)
A,	Melody <sup>®</sup> Plays it back by the Melody player. (See page 290)
	PDF file* Shows it on the PDF viewer. (See page 312)
<b>€</b> 1	ToruCa file* Shows it on the ToruCa viewer. (See page 249)
	Private menu Shows the Private menu. (See page 354)
O <sub>0</sub> .	Alarm Shows the Alarm display. (See page 346)
	Schedule Shows the Calendar display. (See page 350)
3	ToDo Shows the ToDo List. (See page 353)
4	Text memo Shows Text Memo. (See page 360)
	Calculator Shows the calculator. (See page 360)
?	<b>使いかたナビ (Guide)</b> Shows the 使いかたナビ (Guide) display. (See page 37)
	Bar code reader Shows the Bar Code Reader menu. (See page 149) [PRO µ] Not available

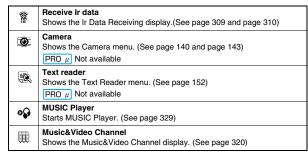

\*When the original data is deleted or overwritten, the desktop icon is disabled.

## Paste Icons to Desktop

You can paste up to 15 desktop icons of such as phone numbers, mail addresses, etc.

The display for an item to be pasted ►(FUNC) ► Add desktop icon ► YES

 When the addresses of the sender and another recipient of simultaneous mail are found or the multiple destination addresses are found, select a mail address or phone number to be pasted.

### Information

- You may not be able to paste the URL to the desktop depending on the site.
- You can store the title for URL of up to 16 full-pitch/32 half-pitch characters. When
  the number of characters for the title exceeds that much, the characters in excess
  are deleted. If no title exists for a site, up to 22 half-pitch characters of the URL
  excluding "http://" or "https://" is displayed.
- Some files and data might not be pasted to the desktop.

# Proceed to Respective Functions from Icons on Desktop

1 Press .



) Use 🔯 to highlight an icon, and press 📵 (Select ).



When a record message icon is selected

- A "Notification icon" is deleted when each function is executed. To delete all "Notification icons", press and hold CLR for at least one second from the display in step 1.

#### Information

When the notification icon of "Messages are held at the Voice Mail Center"
 ( ) appears while you are overseas, you cannot operate the Voice Mail function from the notification icon. Follow the steps of "Operate Voice Mail Service from the Country You Stay" on page 409.

### **Check Details of Desktop Icon**



Settings ➤ Display
Desktop icon

The list of desktop icons pasted to the desktop is displayed.



# Select the icon whose details are to be displayed.

### **Function Menu of the Desktop Icon List**

You can bring up the Function menu also by pressing (FUNC), while highlighting a desktop icon from the Stand-by display.

Function menu	Operation/Explanation
Add to desktop	Put a check mark for the function to be added  ▶ ☑(Finish)
Edit title	Enter a title.     You can enter up to 16 full-pitch/32 half-pitch characters. However, the number of characters for the title displayed when you highlight the icon is up to 11 full-pitch/ 22 half-pitch characters from the beginning of the title.
Sort	► Select a desktop icon ► Use ( to change the order ► ( Finish )
Reset desktop	The desktop icons are reset to the default.  YES
Delete this	▶YES
Delete all	▶YES

### <Font>



# **Changing Character Font**



#### Information

- Some characters are displayed in "Font 1" regardless of this function.
- You cannot change the font of a phone number entry or clock display.

### **Change Character Font of Phone Numbers**

You can set the font of phone numbers displayed on the following display:

- Dialing/Call Receiving display
- Detailed Dialed/Received Call display
- Detailed Redial display
- · Detailed Sent Chaku-moji Message display
- When you use 2in1, the setting here applies to the font for Number A. To specify
  the font for Number B, operate "Set call/receive No. (Disp. call/receive No.)" of
  "2in1 setting".
- Settings Incoming call
  Disp. call/receive No. Select a font.

#### <Character Size>

# **Changing Character Size**

Settings Display Character size Do the following operations.

Item	Operation/Explanation
Enlarge font	You can set all the items of "Character size" at a time.
display	Large, Standard, or Small
	• The confirmation display might appear asking whether to
	change the character size of the menu as well. If you select
	"YES", the menu icons are set to "Enlarge menu" when you
	have set to "Large", and they return to the default when you
	have set "Standard" or "Small".
	When "Large" is set, "Mail", "      ∃ -mode", "Character input
	(Character size)" and "Character input (Candid. disp. size)"
	are set to "Extra large".
	When "Small" is set "Phonebook" "Dialed/recy calls" and

"Character input (Character size)" are set to "Standard".

Item	Operation/Explanation
Mail	You can set the character size for the detailed mail display and detailed Message R/F display.  ▶ Extra large, Large, Standard, or Small  • The setting here applies to "Character size" of Mail Settings.  • When a sent or received mail message is displayed, press  ③ ), or [a] (FUNC) to select "Display" and then select "Character size".  • You cannot change the character size of Decomailpictographs.  • While the mail text is displayed, you can change character size also by pressing and holding [o] for at least one second. (See page 194 and page 225) In this case, the setting here also changes.  • When you set to "Extra large" or "Large", the characters on the Folder List, the Inbox/Outbox/Draft List, and the displays within "Mail settings" are enlarged as well.
i-mode	You can set the character size displayed on sites and screen memos.  ▶ Extra large, Large, Standard, or Small  • The setting here applies to "Character size" of ⑤ -mode Settings.  • When you set to "Extra large" or "Large", the characters on the displays within " ⑥ -mode settings", " ⑥ -Channel", "Operate certificate", "Bookmark", "Screen memo" and "Internet" are enlarged as well.
i-Channel ticker	You can set the character size for the i-Channel ticker.  Large, Standard, or Small  The setting here applies "Ticker font size set." of i-Channel.
Setting menu	You can enlarge the characters on the item selection displays.  Large or Standard  The character size is not enlarged on the Folder List or File List of Data Box for selecting a ring tone, etc.

Item	Operation/Explanation
Phonebook	You can set the character size for the Phonebook display.  ▶ Large or Standard  ● You can set also by (□□□□) ▶ Phonebook ▶ Phonebook settings  ▶ Character size▶ Phonebook.  When you set to "Large", the characters on the displays within "Phonebook settings" and on the display for checking the number of Phonebook entries are enlarged as well.
Dialed/recv. calls	You can set the character size for the Redial/Dialed Call/ Received Call/Sent Address/Received Address List.  ▶ Large or Standard  • You can set also by  Phonebook ► Phonebook settings  ▶ Character size ► Dialed/recv. calls.
Character input (Character size)	You can set the character size for the character entry display, Message Composition display, or SMS Composition display.  ▶ Character size ▶ Extra large, Large or Standard
Character input (Candid. disp. size)	You can set the character size of the conversion candidate list that is shown below the Character Entry (Edit) display.  ▶ Chandid. disp. size▶ Extra large, Large, Standard, or Small  • The setting here applies to "Candid. disp. size" of the Function menu while entering (editing) characters.

### ■ When the character size is set, the display appears as shown below:

<For the detailed Received Mail display>









- If you select "YES" from the confirmation display asking whether to enlarge the font when switching to Simple Menu, "Large" is set.
- When "Large" is set, some item names displayed for each operating procedure differ from the ones displayed for when "Standard" or "Small" is set.



# **Setting Clock Display**

You can set whether to display the clock on the Stand-by display and can set its display pattern.

Settings Display Display setting Clock Do the following operations.

Item	Operation/Explanation	
Clock display	▶ Big, Small, or OFF  • The setting here does not change the clock size on the Private window, World Time Watch, and the sub clock.	
Day of week	When "Select language" is set to "日本語 (Japanese)", you can select "日本語 (Japanese)" or "英語 (English)". ● The setting here applies to the clock display on the Private window. ● If you set to "英語 (English)", region names of World Time Watch are displayed in English as well.	
Position	Select a pattern.	
Color	► Black or White	

#### Information

#### <Position>

- Even if you set any of "Pattern 3" through "Pattern 13", the clock is displayed in "Pattern 2" in the following cases:
- · When you set "Calendar/schedule" for the Stand-by display
- · When World Time Watch or the sub clock is displayed under the clock on the Stand-by display\*
- · When a carrier name is displayed on the Stand-by display by "Operator name display"
- · When "local time zone" of "Set time" is not set to "GMT +9"\*
- During Lock All
- · During Omakase Lock
- \*Even if you set to "Pattern 1", the clock is displayed in "Pattern 2".
- If you set "Pattern 1", the settings of "Clock display" and "Day of week" are invalid.



# **Security Settings**

Passwords	120
gg,,	121
Setting PIN Code	122
Releasing PIN Lock	122
Restricting Operations or Functions	
Locking your Phone to Prevent Use by Others \Lock All>	122
Using Omakase Lock Omakase Lock	123
Using Self Mode	124
Locking Functions Regarding Personal Information	
Personal Data Lock	124
Setting Lock by Closing the FOMA Phone	
Timer Lock ON At Close	125
Locking Keypad Dial (Keypad Dial Lock)	126
Preventing Side Key Operation Errors Side Keys Guard	126

Restricting Outgoing/Incoming Calls or Messages Setting not to Display Redial/Received Calls	
(Record Display Set)	126
Protecting Phonebook Entries and Schedule Events from Pryi	ng
Eyes Secret Mode Secret Data Only	127
Applying Secret for Mail in Outbox/Inbox	
Secret Mail Display	127
Setting not to Display Mail in Outbox/Inbox without Permissio	n
Mail Security>	128
Setting Restrictions on Phonebook Entries (Restrictions)	128
Setting Response to Incoming Calls without Caller ID	
Call Setting without ID>	129
Delaying Start of Ringing Operation Ring Time>	130
Rejecting Calls from Phone Numbers which are not Stored in	
Phonebooks	130
Rejecting Incoming Videophone Calls Reject Videophone	130
What is Data Security Service?	131
Other "Security Settings"	
Other "Security Settings"	131

## **Passwords**

For some functions of the FOMA phone, you need to enter your password. In addition to the Terminal Security Code for operating respective mobile phone functions, the Network Security Code to use network services, and i-mode password are available. These passwords help you utilize your FOMA phone.

#### ■ Cautions on passwords

- You should avoid using the numbers for passwords such as denoting your birth date, part of your phone number, local address number, room number, "1111" or "1234" that is easily decoded by a third party. Also make sure that you take a note of the passwords you have selected just in case you forget them.
- Take care not to let others know your passwords. Even if your passwords are known and used by a third party, we at DoCoMo take no responsibility in any event for the resultant loss.
- $\bullet$  Note that we at DoCoMo will never make any inquiries about your passwords.
- If you do not remember your respective passwords, you need to bring an identification card such as your driver's license, the FOMA phone and UIM to the handling counter of a DoCoMo shop.

For details contact "DoCoMo Information Center" on the back page of this manual.

## **Terminal Security Code**

The Terminal Security Code is set to "0000" at purchase but you can change it by yourself. (See page 121)

When the display for entering the Terminal Security Code appears, enter your four- to eight-digit code and press ( )( Set ).

- When you enter your Terminal Security Code, the entered numbers are indicated by " " and not displayed.
- If you have entered wrong numbers or nothing for about 15 seconds, a warning tone sounds and a warning message is displayed; then the display prior to entering the Terminal Security Code returns. Check the correct code and retry entering numbers.



### **Network Security Code**

The Network Security Code is a four-digit number for procedures on DoCoMo e-site or for using network services. This is determined at the time of contract but can be changed by yourself.

If you have "DoCoMo ID/Password" for "My DoCoMo", the overall support site for personal computers, you can use a personal computer to take proceedings of changing your Network Security Code to new one. Also, you can change it by yourself from "各種手続き (procedures)" on DoCoMo e-site by using the i-mode phone.

※ For "My DoCoMo" and "DoCoMo e-site (ドコモeサイト)", see the inside back cover of this manual.

#### i-mode Password

You need to enter the four-digit "i-mode password" for registering or deleting My Menu, applying for or canceling Message Services, i-mode pay service, and so on.

(Some information providers may provide you with their specific password.)

The i-mode password is "0000" at the time of your contract, but you can change it by yourself. (See page 161)

From i-mode, you can change the i-mode password by following operation:

"  $\[ \[ \] \]$  Menu" → "English iMenu" → "Options" → "Change i-mode Password"

#### PIN1 Code/PIN2 Code

For the UIM, you can set the two security codes, namely the PIN1 code and PIN2 code.

These security codes are "0000" at the time of your contract, but you can change them by yourself. (See page 122)

The PIN1 code is the four- to eight-digit number for checking the user each time the UIM is inserted into the FOMA phone or each time the FOMA phone is turned on, so that you can prevent the third party from using your UIM. By entering your PIN1 code, you can make or answer calls, or use functions in the FOMA phone.

The PIN2 code is the four- to eight-digit number for executing Reset Total Cost, using the user certificate or applying for the issue of it, etc.

 If you purchase a new FOMA phone and use the existing UIM with the new FOMA phone, use the PIN1 code and PIN2 code you have set previously.

When the PIN1 Code/PIN2 Code Entry display appears, enter your four- to eight-digit PIN1 code/PIN2 code and press ( Set ).

- The entered PIN1 code/PIN2 code is displayed as "\_".
- If you enter a wrong PIN1 code/PIN2 code three times in succession, it is locked and the FOMA phone cannot be used. (The remaining number of times you can enter appears on the display.)

When you enter the correct PIN1 code/PIN2 code, the remaining number of times you can enter will return to three times.




For PIN1 code

### **PUK (PIN Unblock Code)**

The PUK (PIN unblock code) is the eight-digit number for releasing the PIN1 code and PIN2 code lock state. You cannot change this code by vourself.

 If you enter a wrong PUK (PIN unblock code) 10 times in succession, the UIM is locked.

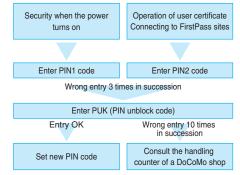

### <Change Security Code>



# **Changing Terminal Security Code**

Change the default for the Terminal Security Code required for operating functions to your own four- to eight-digit code so that you can make full use of the FOMA phone. Make sure you take a note of the security code you have changed just in case you forget it.

- ► Settings Lock/Security Change security code Enter the current Terminal Security Code.
  - If you enter the code for the first time, enter "0000".
- 2 Enter a new Terminal Security Code (four to eight digits) ►YES

#### <UIM Setting>

# **Setting PIN Code**

### **PIN1 Code Entry Set**

You can set the FOMA phone not to work unless you enter your PIN1 code when turning on the power.

- Settings Lock/Security UIM setting
  - ► Enter your Terminal Security Code
  - ► PIN1 code entry set ► ON or OFF
  - ► Enter the PIN1 code.
  - See page 121 for the PIN1 code.

#### Change PIN1 Code/Change PIN2 Code

You need to have set "PIN1 code entry set" to "ON" to change the PIN1 code.

- **Settings** Lock/Security VIIM setting
  - Enter your Terminal Security Code
  - ► Change PIN1 code or Change PIN2 code
  - ► Enter the current PIN1 code/PIN2 code.
  - See page 121 for the PIN1 code/PIN2 code.
- Enter a new PIN1 code/PIN2 code (four to eight digits).
  - The entered PIN1 code/PIN2 code is displayed as "\_".
- Enter the new PIN1 code/PIN2 code again.

# **Releasing PIN Lock**

If you enter a wrong PIN1 code/PIN2 code three times in succession on the display requiring its entry, it is locked and the FOMA phone cannot be used. In this case, release the PIN1 code/PIN2 code lock and set a new PIN1 code/PIN2 code.

- Enter the PUK (PIN unblock code) (eight digits).
  - The entered unblock code is displayed as "\_".



- Enter a new PIN1 code/PIN2 code (four to eight digits).
  - The entered PIN1 code/PIN2 code is displayed as "\_".
- 2 Enter the new PIN1 code/PIN2 code again.

### <Lock All>

# **Locking your Phone to Prevent Use by Others**

If you set Lock All, you can do no operations other than answering calls and turning on/off the power.

- Settings Lock/Security Lock all Enter your Terminal Security Code.
  - " and "Lock all" appear and Lock All is set.
  - To release Lock All, enter your Terminal Security Code from the Stand-by display. Even if you turn off the power, Lock All will not be released.

- You cannot make calls during Lock All. However, you can make emergency calls at 110/119/118. Select "YES" from the confirmation display for dialing.
- You can receive calls, but the callers' data such as their names and images stored in the Phonebook are not displayed except for their phone numbers.
   Further, the ring tone sounds in "Pattern 1".
- If you fail to release Lock All five times in succession, the power to the FOMA phone turns off. However, you can turn it on again.
- You can receive mail messages or Messages R/F during Lock All; however, the Receiving or Reception Result display for incoming mail messages and Messages R/F does not appear. The icons such as "\( \sum\_{"} \)", "\( \mathbb{\mathbb{R}} \)", or "\( \mathbb{\mathbb{F}} \)" appear after Lock All is released.
- The desktop icon disappears during Lock All. When Lock All is released, the icon reappears.
- The tickers of i-Channel are not displayed during Lock All.
- The default Wake-up display appears during Lock All even when an i-motion movie has been set for the Wake-up display.
- Even if you set Lock All, IC Card Lock is not activated.

#### <Omakase Lock>

# **Using Omakase Lock**

When you have lost your FOMA phone or in other cases, you can use this service to remotely lock your FOMA phone by contacting DoCoMo or by operating from My DoCoMo. Your privacy and Osaifu-Keitai are protected.

#### To release the lock, contact DoCoMo by phone, etc.

\*\* Omakase Lock is a pay service. However, you are not charged if you apply for this service at the same time as applying for the suspension of the use or during the suspension.

#### ■ Setting/Releasing Omakase Lock

0120-524-360 Business hours: 24 hours

- ※ You can set/release also from My DoCoMo site via a personal computer or other devices.
- For details on Omakase Lock, refer to "Mobile Phone User's Guide [Procedures and After-Sales Service]".

"Omakase lock" is displayed on the Stand-by display and Omakase Lock is set.



- Omakase Lock is the service that locks the FOMA phone in which your contracted UIM is inserted.
   During Omakase Lock, all the key operations are locked
- and respective functions (including IC card functions) are disabled, except for answering voice calls/videophone calls, putting them on answer-hold (On Hold), turning on/off the power, adjusting the earpiece volume and adjusting the ring volume.
- You can receive voice calls and videophone calls, but the callers' data such as names
  and images stored in the Phonebook are not displayed except for their phone numbers.
  In addition, the ring image, ring tone, and vibrator are reset to the default.
   When you release Omakase Lock, the former settings return.
- Mail messages received during Omakase Lock are held at the Mail Center.
- You can turn on/off the power, however, Omakase Lock is not released by turning off the power.
- Note that neither the UIM nor the microSD memory card is locked.

#### Information

 
 Even while another function is working, Omakase Lock applies after finishing that function.

- Omakase Lock can be set even when another lock function is set. However, if you have set Public Mode (Drive Mode) before setting Omakase Lock, you cannot receive voice calls and videophone calls.
- Omakase Lock cannot be set when the FOMA phone is out of the service area, turned off, or during Self Mode.
- When you have signed up for Dual Network Service and are using the mova phone. Omakase Lock cannot be set.
- Omakase Lock is a service that is activated by an offer from the contractor of the UIM inserted in the FOMA phone. Even when the contractor and the user of the FOMA phone differ, the FOMA phone will be locked if the contractor offers to DoCoMo.
- You can release Omakase Lock only when the UIM of the same phone number at locking is inserted in your FOMA phone. If you cannot release it, contact "DoCoMo Information Center" on the back page of this manual.
- You cannot use this function during international roaming.

### <Self Mode>

# **Using Self Mode**

You can disable all phone calls and communication functions. During Self Mode, the caller hears the guidance to the effect that radio waves do not reach or the power is turned off. If you use DoCoMo Voice Mail Service or Call Forwarding Service, you can use these services in the same way as when the FOMA phone is turned off.



- **SEIf** " appears and Self Mode is set.
- To release Self Mode, perform the same operation.

#### Information

- You can make emergency calls at 110/119/118 even during Self Mode. In this case. Self Mode is released.
- You cannot receive mail messages, Area Mail messages, or Messages R/F during Self Mode.

#### Information

 Even if a call comes in during Self Mode, the "Missed call" icon does not appear after releasing Self Mode.

#### <Personal Data Lock>

## **Locking Functions Regarding Personal** Information

To prevent other people from reading or tampering with your personal information, you can set the following functions not to be used:

- · Record message
- Play/Erase msg.
- Select image
- · Add to phonebook
- Group setting
- · No. of phonebook
- Voice dial
- · Voice announce
- Kisekae tool
- · Feel image playback
- Desktop Restrictions
- · Reject unknown
- Camera
- Bar code reader
- · Text reader
- · i-mode

- Bookmark
- · i-Channel
- · Mail · Photo-sendina
- · Mail group · Chat group
- · Phonebook settings · i-appli
- Search phonebook · IC card content
  - ToruCa Full browser
    - · PC movie
    - · Still image · Moving image
    - · Chara-den Melody
    - · microSD memory card
    - · Infrared data exchange
    - · iC communication
    - PDF viewer

- · Document viewer
- · Music&Video Channel
- · MUSIC · MUSIC player
- · Alarm
- Schedule · ToDo
- · Alarm setting
- Own number
- · Voice memo
- · Movie memo
- · Text memo
- UIM operation Reset settings
- · Initialize
- · "Number setting" and
- "Set as ring tone" for Multi number
- · Data transfer

- Settings Lock/Security Personal data lock

  Enter your Terminal Security Code.
  - "appears and Personal Data Lock is set.

PRO μ You can set Personal Data Lock also by pressing and holding for at least one second.

 To release Personal Data Lock, perform the same operation. When "Timer lock ON at close" is set, the display for releasing Personal Data Lock appears also by opening the FOMA phone.

#### To temporally release Personal Data Lock

When you select a function which cannot be used during Personal Data Lock, the display for entering your Terminal Security Code appears depending on the function. When you enter your Terminal Security Code, " " is cleared and you can temporarily use the function.

 When you show the Stand-by display while no menu function is activated, Personal Data Lock is set again.

#### Information

- You can automatically receive Messages R/F, i-mode mail messages, chat mail messages, and SMS messages during Personal Data Lock; however, the Receiving or Reception Result display does not appear. Further, the receiving operation such as ringing/vibration does not work, so you are not notified of receiving. The icons such as "\(\sigma\)", "\(\bar{\mathbb{E}}\)", or "\(\bar{\mathbb{E}}\)" appear after Personal Data Lock is released.
- During Personal Data Lock, the "Notification icon" and "Desktop icon" such as "New mail", "Missed alarm", "Phone number", "URL" and "Mail address" do not appear, however, they reappear when you release Personal Data Lock.
- During Personal Data Lock, the "Pre-installed" substitute image is sent to the other party if you send the substitute image during a videophone call.
- If you set "Lock all" during Personal Data Lock, " " is cleared and " " appears instead.

### <Timer Lock ON At Close>

# **Setting Lock by Closing the FOMA Phone**

- **Settings** Lock/Security
  - ► Timer lock ON at close
  - ► Enter your Terminal Security Code
  - ▶ Personal data lock or IC card lock
  - Select an elapse time.

If you set to other than "OFF", "Com" appears and then Timer Lock ON At Close is set. After each lock is activated, the Lock Release display appears when you open the FOMA phone.

- When the Stand-by display is not shown, or when another function is working with
  the Stand-by display shown, the lock is not activated even after the specified time
  elapses. However, when another function ends after closing the FOMA phone,
  the lock is activated after the specified time elapses.
- When a call or mail message comes in after closing the FOMA phone, or when you open it, the elapsed time counter returns to 0 seconds.
- When this function is activated, the lock is temporarily released if you release each lock. However, it is re-locked when the specified time elapses after closing the FOMA phone.

<Keypad Dial Lock>

# **Locking Keypad Dial**

You can lock dialing from the numeric keys. When using the FOMA phone for business purposes, private use of the FOMA phone can be prevented.

#### Unavailable operations

- · Dialing from the numeric keys
- · Initial setting
- Phonebook (storing, editing, deleting, copying from the microSD memory card, sending/receiving using Infrared rays, sending/receiving using iC communication)
- · Phone To/AV Phone To function
- · Mail To function

#### Available operations

- Dialing from the Phonebook or Voice Dial
- Dialing from Redial, Dialed Calls, Received Calls, Sent Address, or Received Address (Only phone numbers stored in the Phonebook)

# Settings Lock/Security Keypad dial lock Enter your Terminal Security Code.

- " is displayed and Keypad Dial Lock is set.
- To release Keypad Dial Lock, perform the same operation.

#### Information

- You can make emergency calls at 110/119/118 using numeric keys even during Keypad Dial Lock.
- If you set Keypad Dial Lock, you can send mail only when the address is called up from the Phonebook and when the address stored in the Phonebook is called up from Sent Address or Received Address.

<Side Keys Guard>

# **Preventing Side Key Operation Errors**

You can disable the side keys  $\boxed{\blacktriangle}$  and  $\boxed{\blacktriangledown}$  for when the FOMA phone is closed.

You can prevent operation errors in a bag.

(for at least one second)

- " appears and "Side keys guard" is set to "ON".
- To set to "OFF", perform the same operation.

#### Information

 When an external device such as the Flat-plug Earphone/Microphone with Switch (option) is connected, the function of the side keys is valid regardless of this setting.

<Record Display Set>

# Setting not to Display Redial/Received Calls

Settings Incoming call Record display set Enter your Terminal Security Code Select an item.

Received calls . . . . . . Sets whether to display Received Calls and Received Address.

Redial/Dialed calls . . . . Sets whether to display Redial, Dialed Calls and Sent Address.

# ON or OFF

 When you set "Received calls" to "OFF", you cannot play back record messages of voice calls, either. <Secret Mode> <Secret Data Only>

# **Protecting Phonebook Entries and Schedule Events from Prying Eyes**

In ordinary mode, you cannot access/refer to Phonebook entries or schedule events stored as secret data. In Secret Mode, you can select whether to store the stored/edited Phonebook entries/schedule events as secret data or as ordinary data. The Phonebook entries/schedule events you have stored/edited in Secret Data Only are stored as secret data.

You can access/refer to all the data files in Secret Mode but can access/refer to only the secret data files in Secret Data Only.

# Activate Secret Mode Activate Secret Data Only



- ✓ MENU

  Settings

  Lock/Security
  - Secret mode or Secret data only
  - ► Enter your Terminal Security Code.

When "Secret mode" is selected, " " appears and Secret Mode is activated. When "Secret data only" is selected, " " blinks, the number of stored secret data items is displayed, and then Secret Data Only is activated.

- To deactivate Secret Mode or Secret Data Only, perform the same operation or press from the Stand-by display.

# To change secret data to an ordinary Phonebook entry or schedule event

In Secret Mode or Secret Data Only, select "Release secret" from the Function menu of the Phonebook entry or schedule event to be released.

#### Information

- You can store FOMA phone's Phonebook entries only as secret data.
- When you make a call to the party stored as secret data, his/her name is not displayed but the phone number is displayed on the Dialing/Talking display.
- If you call up a secret entry to make a call or send mail, the record is not stored in "Redial", "Dialed calls" or "Sent address".
- If you simultaneously activate "Lock all" and "Secret mode" or "Secret data only", deactivating "Lock all" deactivates "Secret mode" or "Secret data only".

### <Secret Mail Display>

# **Applying Secret for Mail in Outbox/Inbox**

You can set whether to display the mail (secret mail) message from the sender or to the destination address that matches secret data in the Phonebook.

Mail settings ➤ Secret mail display
■ Enter your Terminal Security Code ➤ ON or OFF

- Even when "Secret mail display" is set to "OFF", you can check secret mail in Secret Mode or in Secret Data Only.
- When "Secret mail display" is set to "OFF", and any secret address is included in addresses of simultaneous mail, that mail message is not displayed.
- When "Secret mail display" is set to "OFF", and any secret member is included in chat members, chat mail messages of all chat members are not displayed.
- When "Secret mail display" is set to "OFF", Area Mail messages are not displayed in Secret Data Only.

#### <Mail Security>

# Setting not to Display Mail in Outbox/ Inbox without Permission

You can set the security function for the Inbox, Outbox and Draft of the Mail menu.

You need to enter your Terminal Security Code to display the mail messages in security-activated boxes.

- Mail settings ► Mail security
  - Enter your Terminal Security Code
  - Put a check mark for boxes to be set ► (☑)(Finish)
  - When security is set, "  $\xi$ " is added to the icon of the set box in the Mail menu.

### Information

 If you set security for the Outbox and Inbox, mail addresses are not stored in Sent Address and Received Address.

#### <Restrictions>

# **Setting Restrictions on Phonebook Entries**

#### **Restrict Dialing**

#### **Call Rejection**

You can reject voice calls and videophone calls from specified phone numbers. You can set only the calls you do not want to receive to be rejected. The caller hears a busy tone. You can specify up to 20 phone numbers.

This function is valid only when the other party notifies his/her phone number. It is advisable to activate "Caller ID request" and "Call setting w/o ID" simultaneously.

#### Call Acceptance

You can receive voice calls and videophone calls only from specified phone numbers. You can set only the calls you want to accept to be connected. You can specify up to 20 phone numbers.

This function is valid only when the other party notifies his/her phone number. It is advisable to activate "Caller ID request" simultaneously.

### Restrict Dialing/Call Rejection/Call Acceptance

- Detailed Phonebook display ▶ ( FUNC )
  - ► Restrictions ► Enter your Terminal Security Code
  - Select an item.

Restrict dialing . . . . . You can dial the specified phone numbers only.

**Call rejection**.....You can reject calls from the specified phone numbers. **Call acceptance**....You can accept calls from the specified phone numbers

Call acceptance . . . . You can accept calls from the specified phone numbers only.

**Call forwarding** . . . . See page 381. **Voice mail** . . . . . See page 378.

The set item is indicated by "★".

- When a Phonebook entry contains multiple phone numbers, press on the detailed display to highlight the phone number you will set Restrictions for.
- To set Restrict Dialing for multiple phone numbers, first set Restrict Dialing and press ℂLR to return to the detailed Phonebook display; □ to highlight the phone number to be set for Restrict Dialing and continue the operation. If you press ☒ to return to the Stand-by display, additional settings cannot be done. To do additional settings, release Restrict Dialing for the set phone number and activate Restrict Dialing again, including the released phone number.
- $\bullet$  To release Restrictions, perform the same operation.

- You cannot set this function for Phonebook entries stored as secret data, and in the UIM Phonebook.
- If you activate "Personal data lock" while "Call rejection" or "Call acceptance" is set, you can accept all incoming calls.

- You cannot operate the following while "Restrict dialing" is set:
  - · Calling up/Referring to phone numbers other than specified
  - · Keypad dial (except for the calls to the specified phone numbers)
- Dialing from Received Calls (except for the calls from the specified phone numbers)
- · Storing/Editing/Deleting Phonebook entries, copying Phonebook entries from the microSD memory card, and copying Phonebook entries to the UIM
- You can make emergency calls at 110/119/118 even if you set "Restrict dialing".
- When a call comes in from the phone number set with "Call rejection" or from the phone number other than the ones set with "Call acceptance", the call is stored in "Received calls" as a missed call record and the "Missed call" icon appears on the Stand-by display. Also, the caller hears a busy tone even if you have set Voice Mail Service or Call Forwarding Service to "Activate". However, if you set the ring time for Voice Mail Service or Call Forwarding Service to 0 seconds, when the FOMA phone is out of the service area, or when the power is turned off, the caller does not hear the busy tone and Voice Mail Service or Call Forwarding Service works.
- You can receive SMS messages or i-mode mail messages regardless of the setting of "Call rejection" or "Call acceptance".

### **Check/Release Restrictions on Phonebook Entries**

**↑** (MENU) ► Phonebook ► Restrictions

► Enter your Terminal Security Code Select an item.

- The set item is indicated by "★".
- To release all the Phonebook entries set with Restrictions, press [ix]( FUNC ), select "Release", and then select "YES".
- Select a Phonebook entry.

The phone number set with Restrictions is displayed.

To release "Restrictions" per phone number, select the phone number you
want to release by following the same steps above, and select "YES".

### <Call Setting without ID>



# **Setting Response to Incoming Calls without Caller ID**

You can set whether to receive (accept) or not to receive (reject) a voice call and videophone call depending on the reason for no caller ID. There are three reasons; "Unavailable", "PublicPhone", and "User unset".

- Settings Lock/Security Call setting w/o ID
- ► Enter your Terminal Security Code
- Select an item.

Unavailable...

 Calls from the other party who cannot notify his/her phone number such as calls from overseas or from landline phones via call forwarding services.

(However, the caller ID might be notified depending on the telephone companies the calls go through.)

PublicPhone . . . Calls from public phones, etc.

User unset . . . . When the caller has set the caller ID not to be notified.

# Accept or Reject

• If you select "Accept", go to step 2 on page 95 to select a ring tone. If you select "Same as ring tone", the ring tone will be the one selected in "Phone" of "Select ring tone".

- If you set to "Reject", the ring tone does not sound even when a call comes in. The call is stored in "Received calls" as a missed call record and the "Missed call" icon appears on the Stand-by display. Also, the caller hears a busy tone even if you have set Voice Mail Service or Call Forwarding Service to "Activate". However, if you set the ring time for Voice Mail Service or Call Forwarding Service to 0 seconds, when the FOMA phone is out of the service area, or when the power is turned off, the caller does not hear the busy tone and Voice Mail Service or Call Forwarding Service works.
- You can receive SMS messages or i-mode mail messages regardless of this setting.

<Ring Time>



# **Delaying Start of Ringing Operation**

Settings Incoming call Ring time Do the following operations.

Item Operation/Explanation	
Ring start time	You can set the FOMA phone not to start ringing operation immediately for when a voice call or videophone call comes in from the party whose phone number is not stored in the Phonebook. This function is effective as a countermeasure for blocking nuisance calls such as one ring phone scam (one-giri).  Non or OFF Enter a start time (seconds).  Enter from "01" through "99" in two digits.
Missed calls display	You can set whether to display the call disconnected within the time specified for "Ring start time" in Received Calls.  Display or Not display

#### Information

- When a call comes in from the party whose phone number is stored in the Phonebook, the FOMA phone starts ringing as soon as the call comes in even if "186" / "184" is added to the phone number. However, during Personal Data Lock, or for the call from the party whose phone number is stored as secret data, ringing starts according to the setting of this function.
- If the ring start time is longer than the ring time for Record Message Setting, the ringing operations do not start, activating Record Message instead. To activate Record Message after starting the ringing operations, set the longer ring time for Record Message Setting than the ring start time. The same applies to the ring time for Voice Mail Service, Call Forwarding Service, and Auto Answer Setting.

### <Reject Unknown>

# Rejecting Calls from Phone Numbers which are not Stored in Phonebooks

You can reject voice calls and videophone calls from the party whose phone number is not stored in the Phonebook.

This function is valid only when the other party notifies his/her phone number. It is advisable to activate "Caller ID request" and "Call setting w/o ID" simultaneously.

Settings Lock/Security Reject unknown

Enter your Terminal Security Code

► Accept or Reject

#### Information

- If a call comes in from the party whose phone number is stored as secret data, the call is not rejected, regardless of this setting.
- If you simultaneously activate "Reject unknown" and "Call acceptance" of "Restrictions". the latter has priority.
- When a call comes in from anyone whose phone number is not stored in the Phonebook while you set this function to "Reject", the call is stored in "Received calls" as a missed call record, and the "Missed call" icon appears on the Stand-by display. Also, the caller hears a busy tone even if you have set Voice Mail Service or Call Forwarding Service to "Activate". However, if you set the ring time for Voice Mail Service or Call Forwarding Service to 0 seconds, when the FOMA phone is out of the service area, or when the power is turned off, the caller does not hear the busy tone and Voice Mail Service or Call Forwarding Service works.
- Even when this function is set to "Reject", your FOMA phone follows the settings specified by "Call setting w/o ID" if each setting of "Call setting w/o ID" is set to "Accept".
- You can receive SMS messages or i-mode mail regardless of this setting.
- You cannot set "Reject unknown" to "Reject" while "Ring start time" of "Ring time" is set to "ON".

### <Reject Videophone>

# **Rejecting Incoming Videophone Calls**


Settings Videophone Reject videophone Enter your Terminal Security Code ON or OFF

# What is Data Security Service?

Data Security Service enables you to save the Phonebook entries, images, and mail messages stored in your FOMA phone (saved data files) to the DoCoMo Data Storage Center.

You can restore the saved data files even when the FOMA phone is lost or exposed to water, to your new FOMA phone from the Data Storage Center by operating i-mode. Also, you can periodically and automatically update Phonebook entries on the FOMA phone to the latest information. Further, you can easily edit the saved data files stored at the Data Storage Center from My DoCoMo page via a personal computer, and can store the edited saved data files in the FOMA phone.

For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode]
 FOMA version".

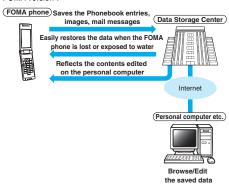

Data Security Service is a pay service that is available on a subscription basis.
 (You need to subscribe to i-mode to apply for Data Security Service.)

# Other "Security Settings"

Other than introduced in this chapter, the following functions/services for the Security Settings are available:

If you want	Functions/Service name	Reference page
To prevent crank calls or vicious sales calls from incoming	Nuisance Call Blocking Service	381
To prevent the incoming call that does not notify a caller ID	Caller ID Request	382
To ensure safe and reliable data communication by using electronic authentication services *Limited to FirstPass sites	FirstPass	174
To protect the IC card function from being used illegally	IC Card Lock	254
To update software programs in the FOMA phone when necessary	Software Update	454
To protect the FOMA phone from data liable to cause trouble	Scanning Function	460
To receive necessary mail only from among the large volume of incoming mail	Receive Option	195

If you want	Functions/Service name	Reference page
To store/check safety information using i-mode when a disaster occurs	i-mode Disaster Message Board Service	
To change the mail address	Change Mail Address	1
To reject mail with URL	Spam Mail Prevention (Reject Mail with URL)	
To accept or reject mail from the specified domain	Spam Mail Prevention (Reject/Receive Mail	
To accept or reject mail between i-mode mobile phones only		
To accept or reject mail from the specified address		
To set the recommended Spam Mail Prevention easily	Spam Mail Prevention (Easy Mail Setting)	*
To reject the 500th and succeeding i-mode mail messages sent from a single i-mode phone on the same day	Spam Mail Prevention (Reject Mass i-mode Mail Senders)	
To reject SMS messages	Spam Mail Prevention (SMS Rejection Settings)	
To reject advertising mail that is sent unilaterally	Reject Unsolicited Ad Mail	
To restrict the file size of incoming mail	Limit Mail Size	
To confirm the settings for the mail function	Confirm Settings	
To stop the mail function temporarily	Suspend Mail	

<sup>\*\*</sup>Refer to "Mobile Phone User's Guide [i-mode] FOMA version".

 The priority order of functions simultaneously set to prevent nuisance calls is as follows: "Nuisance Call Blocking Service" → "Call rejection" → "Reject unknown/ Call setting w/o ID" → "Ring time".

# Camera

Before Using Cameras	13
Shooting Still ImagesStill Image Shoot	14
Shooting Moving Images (Moving Image Shoot)	14
Changing Settings for Shooting Images	14
Setting Image Size and Image Quality	14
Using Bar Code Reader Bar Code Reader	14
Using Text Reader	15

PRO  $\mu$  The camera function is not available.

#### **■**Copyrights and Portrait Rights

You have no right to copy, modify, or distribute the contents of which a third party holds the copyright such as text, image, music, or software programs downloaded from web pages on the Internet, or recorded using this product, without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law.

Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use.

Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this may violate portrait rights.

You may be imposed punishment according to the law and rule (such as the nuisance prevention ordinance) if you use the FOMA phone
to give a remarkable nuisance and misdeed to the public.



Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

# **Before Using Cameras**

### **Notes for when Shooting Images**

- Check the lens for any stain before shooting. If the lens is stained, clean the lens with a soft cloth. If the lens is stained with fingerprints or something oily, you will not be able to focus on a subject, or the stains are reflected on still or moving images you shoot.
- Make sure that you do not let fingers, hairs, or the strap overlap the lens when shooting.
- Make sure that you hold the FOMA phone securely with your hands so that it does not move when shooting. Otherwise, the image may be blurred, especially in a dark place.
- Do not leave the FOMA phone with the lens pointing direct to the sunlight. Pixels may be discolored or burns may result.
- If you shoot under a fluorescent lamp, mercury lamp, or sodium lamp flickering at high speeds, "flicker symptom", horizontal stripes flow from top to bottom of the display, may result. The color tone for the image may vary depending on a shooting timing.
- If you shoot a subject containing an area of an extremely high brightness such as the reflection of sun light, the bright area might be black-spotted but this is not a malfunction.
- Images shot by the cameras might differ from actual subjects in color tone and brightness.
- When the battery level is low, you may not be able to save still or moving shot images.
- A slight time lag is found between when you press ((Record)) and when you actually shoot. Therefore, if you shoot a fast moving subject, the subject might be shot with its position slightly away from the one you see it when you press ((Record)).
- Do not remove the microSD memory card while saving files to it. The FOMA phone or microSD memory card could malfunction.
- · If you turn off the power while saving a file, an incomplete file may be saved.
- If the battery pack is removed off while saving a file to the FOMA phone or microSD memory card, that data becomes contingent.

· You need to obtain a microSD memory card separately to use the functions related to the microSD memory card. The microSD memory card is available at mass retailers for home electric appliances, etc. (See page 294)


#### **Use Cameras**

You can use the camera to shoot still or moving images.

Autofocus works for shooting images. (See page 145)

Image Stabilizer corrects the blur due to camera shake. (See page 146)

 You can operate the main functions for shooting not only from the Function menu but also by operating the keys directly.



#### Keys used for shooting


	Icon menu operation	Brightness
(ia)	Function menu access	2 White balance
MENU	Bar code reader	3 Photo mode
	Change camera-mode*1	Image quality
	Shutter/Save	5 Image size
0	Tele	[6] Image stabilizer (in Photo mode)
0	Wide	Auto timer
O	Switch settings for Focus <sup>*2</sup>	Switch settings for Store in <sup>※3</sup>
0	Autofocus	End camera (in ordinary time)
	Switch displays for Icons	Release focus lock (when focus is locked)
	1	End camera

- %1 Each time of pressing switches in order of "Photo mode" → "Movie mode" → "Continuous mode".
- ※2 Each time of pressing switches in order of "Auto" → "Close-up" → "Landscape".
- \*3 Each time of pressing switches between "Phone" and "microSD".

- While the camera is activated, the Call/Charging indicator flickers. You cannot turn off flickering.
- You cannot change or silence the volume of the shutter sound. You cannot set a downloaded melody for the shutter sound, either.
- If no key operation is done on the Finder display, the camera is automatically deactivated after about three minutes.
- When you shoot in a dark place, ensure to set "Photo mode" of "Camera settings" to "Night mode".
- You can operate the following by the Icon menu: "Brightness", "White balance", "Photo mode", "Image quality", "Image size".

### **Camera Setting and Finder Display**

On the Finder display, the settings are indicated by bars and icons.

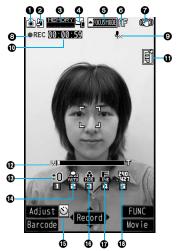

lo	con/bar name	lcon	Description	Page
0	Camera mode	<b>(a)</b>	Photo mode	140
			Movie mode	143
		<b>a</b> / <b>b</b> / <b>2</b>	Continuous mode (Auto, Manual, Auto bracket)	140
0	Store in	Į.	Phone: Stores in the FOMA phone.	
		þ	microSD: Stores on the microSD memory card.	146
0	Number of recordable image	_	Number of remaining recordable still images Up to 999 images are displayed.	
	Memory capacity bar	10 000	Memory usage state (estimate) in Movie mode Displayed in red when the memory space reaches maximum.	_
	File size setting	Yss	Mail restrict'n (S): Up to 500 Kbytes can be saved.	
		Y	Mail restrict'n (L): Up to 2 Mbytes can be saved.	145
		ш- <u>н</u>	Long time: Long time recording is possible.	
<b>6</b>	Focus guide	<u> FOCUS MODE</u>	Focus guide	_
<b>0</b>	Focus	A	Auto	
		<b>G</b>	Close-up	146
		£	Landscape	
nage stabilizer			Image stabilizer (Auto or OFF)	
<b>⑤</b> Shooting status		●REC	During moving image recording	143
Movie type set		<b>₽</b> ×	Records only the video.	147
Recordable time		_	Recordable time (estimate) for moving images	_
<b>⊕</b> Top icon		line	Shows the vertical direction of the still or moving image.	_

Icon/bar name	Icon	Description	Page		
<b>⊕</b> Zoom bar	UI N	Zooming status	144		
⊕Brightness	-3 ~ +3	Brightness of shot image			
White balance		Auto: For adjusting white balance automatically			
	*	Fine: For shooting outdoors in fine weather			
	∆	Cloudy: For shooting in cloudy weather or in the shade	145		
	彖	Light bulb: For shooting under incandescent light			
	0	Fluorescent light: For shooting under fluorescent light			
Number of frames for continuous shooting	1	Number of frames at "Manual" shooting in "Continuous mode"	147		
Auto timer	<u></u>	Auto timer ON	148		
⊕Photo mode		Normal			
	Ð	Portrait			
	<i>E3</i>	Sports			
	<b>†</b> ⊚ <b>†</b>	Food	146		
	<u>A</u>	Scenery			
	突	Night mode			
	3,	Backlight			
nage quality	N DIRID	Normal: Standard quality			
	F	Fine: Fairly high quality	145		
	S	Super fine: High quality			

le	con/bar name	Icon		Description		Page	
<b>©</b>	Image size (Photo mode/	1300 4200		2M	2M (1600 x 1200)		
	Continuous	1500 = 900		1.4	M Wide (1600 x 900)		
	mode)	1280 = 950		1M	(1280 x 960)	-	
		210 202		Sta	and-by (240 x 427)	-	
		5VD = V30	Photo	Photo Continuous shooting	VGA (640 x 480)		
		3333 8233			CIF (352 x 288)	145	
		≈ 65-0 ≈ 63-0			QVGA (240 x 320)		
		1773 = 1881			QCIF (176 x 144)		
		[73] = 93			Sub-QCIF (128 x 96)		
	Image size (Movie mode)	#430 640	VG	iA (6	640 x 480)		
	(wovie mode)	5VD = 33-72	ΗV	/GA Wide (640 x 352)			
		320 320	Q۷	VGA (320 x 240)			
		973 = 155	QC	IF (	176 x 144)		
		173 133	Su	b-Q	CIF (128 x 96)		

## **Specifications for Still Image Shooting**

File format	JPEG
Compression format	Baseline format
Pixels	Photo: 2M (1600 x 1200), 1.4M Wide (1600 x 900), 1M (1280 x 960), VGA (640 x 480), Stand-by (240 x 427), CIF (352 x 288), CVGA (240 x 320), QCIF (176 x 144), Sub-QCIF (128 x 96) Continuous shooting: VGA (640 x 480), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), Sub-QCIF (128 x 96)
Extension	jpg
Title	Automatically set according to the date and time the image was saved and the number of shot frames (when the 1st frame was shot at 10:00 on November 15, 2008) "2008/11/15 10:00"
File name	Automatically set according to the date and time the image was saved and the number of shot frames (when the 1st frame was shot at 10:00 on November 15, 2008)  "200811151000000" (Store in: Phone) "P1000001" (Store in: microSD)
Maximum file size	700 Kbytes
Mail attachment/ Output	Can be attached to mail or output from the FOMA phone by using the microSD memory card.
Memory capacity	Approx. 111.6 Mbytes (Phone)

### Estimate of the number of storable still images

The number of files that can be saved varies depending on shooting environments. \*\*The number of files that can be saved to the FOMA phone and microSD memory card has limit.

#### ■ The number of files that can be saved to P705i µ

Image quality	Super fine	Fine	Normal
Image size	(Approx.)	(Approx.)	(Approx.)
2M (1600 x 1200)	150	207	257
1.4M Wide (1600 x 900)	209	299	402
1M (1280 x 960)	209	299	402
VGA (640 x 480)	1,029	1,225	1,430
Stand-by (240 x 427)	1,838	2,340	2,500
CIF (352 x 288)	1,838	2,340	2,500
QVGA (240 x 320)	2,145	2,500	2,500
QCIF (176 x 144)	2,500	2,500	2,500
Sub-QCIF (128 x 96)	2,500	2,500	2,500

<sup>•</sup> The number of files that can be saved is the default estimate value.

#### ■ The number of files that can be saved to the microSD memory card (64 Mbytes)

Image quality	Super fine	Fine	Normal
Image size	(Approx.)	(Approx.)	(Approx.)
2M (1600 x 1200)	89	122	152
1.4M Wide (1600 x 900)	122	172	223
1M (1280 x 960)	122	172	223
VGA (640 x 480)	608	724	845
Stand-by (240 x 427)	1,087	1,383	1,902
CIF (352 x 288)	1,087	1,383	1,902
QVGA (240 x 320)	1,268	1,691	2,174
QCIF (176 x 144)	2,536	3,044	3,805
Sub-QCIF (128 x 96)	3,805	5,073	5,073

The number of files that can be saved is the default estimate value.

## **Specifications for Moving Image Shooting**

File format	MP4, ASF
Coding system	Video: MPEG4 Voice: AMR, G.726
Pixels	VGA (640 x 480), HVGA Wide (640 x 352), QVGA (320 x 240), QCIF (176 x 144), Sub-QCIF (128 x 96)
Extension	3gp, mp4, asf
Title	Automatically set according to the date and time the image was recorded (when shot at 10:00 on November 15, 2008) "2008/11/15 10:00"
File name	Automatically set according to the date and time the image was recorded (when shot at 10:00 on November 15, 2008) "20081151000" (Store in: Phone) "MOL001" (Store in: microSD)
Maximum file size	2 Mbytes (Store in: Phone) Can be limited to the size which can be attached to i-motion mail when shooting. (See page 145)
Mail attachment/ Output	Can be attached to mail or output from the FOMA phone by using the microSD memory card.
Memory capacity	Approx. 111.6 Mbytes (Phone)

### Estimate of recordable time

The recordable time varies depending on shooting environments. Take reference to the recordable time and memory capacity which appear on the Finder display as well.

### ■ Recordable time to P705i $\mu$

	File size setting	No. da Ama	Recordabl	e time per recording	(Approx.)	Total	recordable time (Ap	orox.)
Image size		Movie type set		Image quality		Image quality		
		Set	Super fine	Fine	Normal	Super fine	Fine	Normal
	Mail restriction	Normal	4 sec	5 sec	8 sec	12 min	16 min	24 min
		Video	4 sec	5 sec	8 sec	12 min	16 min	24 min
VGA	(S)	Voice		305 sec			1,040 min	
(640 x 480)	Mail	Normal	16 sec	20 sec	30 sec	12 min	16 min	24 min
	restriction	Video	16 sec	20 sec	30 sec	12 min	16 min	24 min
	(L)	Voice		20 min			1,040 min	
	Mail	Normal	5 sec	8 sec	10 sec	16 min	24 min	32 min
	restriction	Video	5 sec	8 sec	10 sec	16 min	24 min	33 min
HVGA Wide	(S)	Voice	<u> </u>	305 sec			1,040 min	
(640 x 352)	Mail	Normal	20 sec	30 sec	40 sec	16 min	24 min	32 min
	restriction (L)	Video	20 sec	30 sec	40 sec	16 min	24 min	33 min
		Voice		20 min			1,040 min	
	Mail restriction (S)	Normal	5 sec	10 sec	15 sec	16 min	32 min	48 min
		Video	5 sec	10 sec	15 sec	16 min	33 min	49 min
QVGA		Voice		305 sec			1,040 min	
(320 x 240)	Mail	Normal	20 sec	39 sec	59 sec	16 min	32 min	48 min
	restriction	Video	20 sec	40 sec	60 sec	16 min	33 min	49 min
	(L)	Voice		20 min			1,040 min	
	Mail	Normal	10 sec	35 sec	69 sec	32 min	117 min	232 min
	restriction	Video	10 sec	39 sec	78 sec	33 min	132 min	264 min
QCIF	(S)	Voice		305 sec			1,040 min	
(176 x 144)	Mail	Normal	39 sec	141 sec	279 sec	32 min	117 min	232 min
	restriction	Video	40 sec	159 sec	318 sec	33 min	132 min	264 min
	(L)	Voice		20 min			1,040 min	
	Mail	Normal	19 sec	62 sec	122 sec	62 min	211 min	413 min
	restriction	Video	20 sec	78 sec	156 sec	66 min	264 min	529 min
Sub-QCIF	(S)	Voice		305 sec			1,040 min	
(128 x 96)	Mail	Normal	75 sec	254 sec	497 sec	62 min	211 min	413 min
	restriction	Video	80 sec	318 sec	10 min	66 min	264 min	529 min
	(L)	Voice		20 min	1		1,040 min	

<sup>•</sup> The recordable time is the default estimate value.

### ■ Recordable time to microSD memory card (64 Mbytes)

	File size	Marria tres	Recordable	e time per recording	(Approx.)	Total	recordable time (App	orox.)
Image size	setting	Movie type set	Image quality			Image quality		
	Jetting	301	Super fine	Fine	Normal	Super fine	Fine	Normal
V.0.4		Normal	447 sec	577 sec	14 min	447 sec	577 sec	14 min
VGA (640 x 480)		Video	462 sec	10 min	15 min	462 sec	10 min	15 min
(040 X 400)		Voice	· · · · · · · · · · · · · · · · · · ·	180 min			240 min	
		Normal	557 sec	14 min	18 min	577 sec	14 min	18 min
HVGA Wide (640 x 352)	Long time	Video	10 min	15 min	20 min	10 min	15 min	20 min
(640 X 352)		Voice	,	180 min			240 min	
01/04		Normal	577 sec	18 min	26 min	577 sec	18 min	26 min
QVGA (320 x 240)		Video	15 min	20 min	30 min	15 min	20 min	30 min
(320 X 240)		Voice	· · · · · · · · · · · · · · · · · · ·	180 min			240 min	
		Normal	18 min	60 min	96 min	18 min	60 min	96 min
QCIF (176 x 144)		Video	20 min	80 min	160 min	20 min	80 min	160 min
(176 X 144)		Voice	,	180 min			240 min	
0 1 0015		Normal	34 min	96 min	137 min	34 min	96 min	137 min
Sub-QCIF (128 x 96)		Video	40 min	160 min	180 min	40 min	160 min	320 min
(120 X 90)		Voice	ļ	180 min			240 min	

<sup>•</sup> The recordable time is the default estimate value.

#### <Still Image Shoot>

# **Shooting Still Images**

You can shoot still images by using the camera. The shot still images are saved to the "Camera" folder of "My picture" in the FOMA phone or to the microSD memory card.

- See "Storage setting (Store in)" and "Select storage" for selecting a storage location.
- See page 273 for how to display saved still images.

### Shoot a Still Image

Press (

- The Camera menu is displayed by LifeKit Camera. You can start also by selecting "Photo mode" from the Camera menu.
- You can paste the Camera menu to the desktop. (See page 114)
- Change the direction of the FOMA phone according to the direction of the Top icon.



Finder display

Press ( Record )

A still image is shot. The Post View display for confirmation appears.

- When "Focus" is set to "Auto", shooting starts after the focus operation.
- When "Auto save set" is set to "ON", the Post View display does not appear: the still image is automatically saved. Go to step 4.

# Press D ( Save

The still image you shot is saved to the "Camera" folder.

- To save the still image as an mirrored image (horizontally reversed), press (FUNC) and select "Mirror save"
- When you set "Store in" to "microSD", the still image is saved to the folder selected by "Select storage".
- Press (CLR) to cancel the shot still image and return to the Finder display.



Post View display

Press (2) to end the camera.

## **Continuous Shooting**

You can continuously shoot still images. You can set the number of frames, and shooting interval for auto-shooting. (See page 147)



• The camera starts in the mode you used last time, "Auto", "Manual", or "Auto bracket", To change Continuous Mode, see "Continuous mode" of "Cont. shooting set.".



Continuous shooting starts.

When "Continuous mode" is set to "Manual", press (Record) the number of times of shooting frames. The Post View display for confirmation appears.


- When "Focus" is set to "Auto", shooting starts after the focus operation.
- To cancel shooting midway, press (CLR), If you shoot in the "Auto" or "Auto bracket" mode of "Continuous mode", you can cancel also by pressing (☐)(☐0uit☐). You can cancel shooting also by closing the FOMA phone.
- When "Auto save set" is set to "ON", the Post View display does not appear: the still images are automatically saved. Go to step 4.

# To select a still image and save it

Select a still image and press ( Detail )





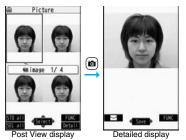

- Press [O] from the detailed display to show the previous or next still image. • To save the still image as a mirrored image (horizontally reversed), press
- (FUNC ) and select "Mirror save".

#### To select multiple still images and save them

Put a check mark for still images to be saved

Save or Mirror save

#### To save all still images



The still images you shot are saved to the "Camera" folder.

- Press (CLR) from the Post View display to cancel the shot still images and return to the Finder display.
- When "Store in" is set to "microSD", the still images are saved to the folder set by "Select storage".

# Press ( ) to end the camera.

- The image quality may be coarse depending on "Image size" or "Display size".
- When you shoot, the tone selected for "Shutter sound" sounds regardless of the settings such as Manner Mode. The sound volume for shutter tone cannot be changed.
- Even when a mail message comes in while shooting, the shooting operation continues. Though unread message icon is displayed, the Mail Receiving display is not displayed.
- If you end the camera function by using Multitask while shooting, unsaved still images are deleted.
- When shooting, hold the FOMA phone securely to avoid blurred images.
- While you are shooting in Photo Mode or "Manual" of Continuous Mode, the Call/ Charging indicator flickers. In "Auto"/"Auto bracket" of Continuous Mode, it lights.

## Function Menu of the Post View Display in Photo Mode/ Detailed Display in Continuous Mode

Function menu	Operation/Explanation					
Save	See page 140 and page 141.					
Mirror save	See page 140 and page 141.					
Attach to mail	You can save the still image you shot and attach it to an i-mode mail message. Go to step 2 on page 182.  You can compose an i-mode mail message also by pressing ( ).					
Set display	You can paste the still image to the Stand-by display and others for displaying. This is available only in Photo Mode. Go to "Set display" on page 274.  • Even when "Store in" is set to "microSD", the still image is saved to the FOMA phone.					
Change frame	You can replace the frame added to the shot still image by new one. This is available only in Photo Mode.  Select a frame.  Press to to bring up the previous or next frame.  To reselect a frame, press (Cancel).  O(Set)  You cannot release the frame.					
Normal display/ Mirror display	You can switch between a correct image and a mirrored image (horizontally reversed).					
Store in	See page 146.					
Display size	See page 147.					
File restriction	See page 148.					
Icon	You can set whether to display icons. ▶ON or OFF					
Cancel	You do not save the still shot image.					

## Function Menu of the Post View Display in Continuous Mode

■ If you highlight a still image from the Post View display and press ( (Select ), "☑" is added. Press ( (Select ) again to release the selection.

	<del>_</del>				
Function menu	Operation/Explanation				
Save	See page 141.				
Store all/animat'n	You can save all the shot still images to store as an original animation.  Save  To save as a mirrored image (horizontally reversed), select "Mirror save".				
	> <new></new>				
Store in	See page 146.				
Normal display/ Mirror display	You can switch between a correct image and a mirrored image (horizontally reversed).				
File restriction	You can set the file restrictions on the image on the Post View display.  File unrestricted or File restricted  See page 148 for the file restrictions.				
Cancel	You do not save the shot still images.				

#### Information

#### <Store all/animat'n>

- When "Store in" is set to "microSD", this function is not available.
- If you have shot a single still image only, this function is not available.

#### <Moving Image Shoot>

#### **Shooting Moving Images**

You can shoot moving images by using the camera. The shot moving images are saved to the "Camera" folder of " a motion" in the FOMA phone or to the microSD memory card.

- For selecting a storage location, see "Store in" and "Select storage".
- See page 280 for playing back the saved moving images.

#### (for at least one second)

- The Camera menu is displayed by LifeKit Camera. You can start also by selecting "Movie mode" from the Camera menu.
- You can paste the Camera menu to the desktop. (See page 114)
- Change the direction of the FOMA phone according. to the direction of the Top icon.



Finder display

Recording starts.

- When "Focus" is set to "Auto", shooting starts after the focus operation. While shooting, the subject is automatically focused regardless of the setting of "Focus".
- Press ( )

Recording ends. The Post View display for confirmation appears.

- Recording automatically ends when a call comes in, the low battery alarm sounds, or the FOMA phone is closed during recording.
- When "Auto save set" is set to "ON", or "File size setting" is set to "Long time". the Post View display does not appear; the moving image is automatically saved. When "Store in" is set to "microSD", the moving image is saved to the folder set by "Select storage". Go to step 5.

The moving image you shot is saved to the "Camera" folder.

• Press (CLR) to cancel the shot moving image and return to the Finder display.



Press (a) to end the camera.

#### If recording ends or the image quality deteriorates while shooting

When you use a microSD memory card that you repeatedly save/delete data files to/ from, the writing speed slows down, recording might end midway or the image quality might deteriorate.

Do the following operations to improve such symptoms:

- 1. Copy all the data files from the microSD memory card onto your personal computer as they are.
  - When your personal computer is set so as to hide folders and files, change the settings to display those folders and files, and then operate. For how to change the settings, refer to the operating manual or Help on the personal computer you use.
  - Do not change the names of folders and files copied to the personal computer.
- 2. Use the personal computer to delete all the data files on the microSD memory card.
  - Do not format the microSD memory card. The data files might not be played hack
- 3. Copy the data files copied in step 1 back to the microSD memory card.
  - Be sure to copy them back to the same microSD memory card. Even if you save the copyrighted data files on another microSD memory card, you cannot play them back.

- The shutter tone set by "Shutter sound" sounds when shooting starts and ends regardless of the settings such as Manner Mode. The sound volume for shutter tone cannot be changed.
- If you do key operations while recording, the operation sound may be picked up.
- The Call/Charging indicator flickers during recording.
- When you switch the subject you are shooting to a subject with a difference in perspective, it takes time to focus on the new subject.
- When you have difficulty focusing on a subject, switch to another subject. Then
  the subject might come into focus.
- The operating speed of Autofocus is slowed down in a dark place.

#### Function Menu of the Post View Display in Movie Mode

Function menu	Operation/Explanation
Play	See page 280.
Save	See page 143.
Attach to mail	You can save the recorded moving image and attach it to an i-mode mail message.  Go to step 2 on page 182.  You can compose an i-mode mail message also by pressing
Set as stand-by	You can save the recorded moving image and set it for the Stand-by display.
Store in	See page 146
Display size	See page 147.
File restriction	See page 148.
Icon	You can set whether to display icons.  ON or OFF
Cancel	You do not save the recorded moving image.

#### Information

- <Set as stand-by>
- Some moving images might not be displayed correctly.
- See page 102 for playback of the moving image set for the Stand-by display.

#### **Changing Settings for Shooting Images**

You can set the camera when shooting images.

#### **Use Zoom**

You can display the image through the camera in "Wide" or "Tele". The maximum magnification for each size is as follows:

Camera mode	Size	Level of zoom	The maximum magnifications (Approx.)
	2M (1600 x 1200)	1 level	1.0 times
	1.4M Wide (1600 x 900)	1 level	1.0 times
	1M (1280 x 960)	6 levels	1.2 times
	VGA (640 x 480)	11 levels	1.8 times
Photo	Stand-by (240 x 427)	31 levels	3.7 times
	CIF (352 x 288)	31 levels	3.4 times
	QVGA (240 x 320)	31 levels	5.0 times
	QCIF (176 x 144)	31 levels	6.8 times
	Sub-QCIF (128 x 96)	31 levels	9.3 times
	VGA (640 x 480)	6 levels	2.5 times
Continuous	CIF (352 x 288)	31 levels	3.4 times
	QVGA (240 x 320)	31 levels	5.0 times
	QCIF (176 x 144)	31 levels	6.8 times
	Sub-QCIF (128 x 96)	31 levels	9.3 times
	VGA (640 x 480)	6 levels	2.5 times
	HVGA Wide (640 x 352)	6 levels	2.5 times
Movie	QVGA (320 x 240)	31 levels	3.7 times
	QCIF (176 x 144)	31 levels	6.8 times
	Sub-QCIF (128 x 96)	31 levels	9.3 times

finder display ► Use to adjust the magnification.

- The image quality may slightly change when you select "Wide" or "Tele".
- "Tele" is released in the following cases:
  - · When you press (a) to end the camera
  - · When a size is changed
  - · When camera mode is switched

#### **Use Autofocus**

You can shoot with the camera after confirming the focus conditions. You can use Autofocus, even if "Focus" is set to "Close-up" or "Landscape".

**1** Finder display▶ □

When the subject is focused, a confirmation tone sounds, then the frame becomes green and the focus is locked.

When the subject is not focused, the frame becomes red.

- Press CLR to focus again.
- If "Focus" is set to "Auto", the shooting starts after the focus operation when you press () (Record) from the Finder display.

Press (Record).

#### Information

• If "Movie type set" is set to "Voice" in Movie Mode, you cannot use Autofocus.

#### **Setting Image Size and Image Quality**

#### Function Menu of the Finder Display

Function menu	Operation/Explanation
CHG camera-mode	Select a mode. When you select "Continuous mode", the camera starts in the mode you used last time, "Auto", "Manual", or "Auto bracket".
Image size	<ul> <li>Select an image size.</li> <li>When you shoot a photo for sending during a voice call, you can select only "QCIF (176 x 144)" and "Sub-QCIF (128 x 96)".</li> </ul>
File size setting [Movie Mode only]	➤ Select an item.  Mail restrict'n (S) You can shoot up to 500 Kbytes.  Mail restrict'n (L) You can shoot up to 2 Mbytes.  Long time
Image quality	You can set the image quality for saving.  Select an image quality.
Camera settings (Brightness)  At Camera start-up  ±0	You can adjust to -3 (dark) through +3 (bright). ▶ Brightness▶ Select a brightness level.
Camera settings (White balance)  At Camera start-up Auto	You can adjust the coloring of the image on the Finder display to create a natural color tone.  ▶ White balance▶ Select an item.  Auto For adjusting white balance automatically Fine For shooting outdoors in fine weather Cloudy For shooting in cloudy weather or in the shade

**Light bulb** . . . . . For shooting under incandescent light **Fluorescent light** . . For shooting under fluorescent lighting

Function menu	Operation/Explanation
Camera settings (Color mode set)  At Camera start-up  Normal	➤ Color mode set➤ Select a color mode.  Normal Shoots in normal color.  Sepia Shoots in sepia color.  Monochrome Shoots in monochrome.
Camera settings (Photo mode)  At Camera start-up  Normal	You can set a photo mode suitable for the place.  ▶ Photo mode ▶ Select a photo mode.  Normal Standard mode Portrait For shooting portraits Sports For shooting moving subjects such as athletes Food For shooting dishes Scenery For shooting scenery Night mode For shooting in dark places such as in nighttime Backlight For shooting against the sun (from behind)
Camera settings (Focus)  At Camera start-up Auto	You can set the focus of the camera.  ▶ Focus ▶ Select an item.  Auto For focusing automatically before shooting (See page 145)  Close-up For focusing on a subject in a short distance  Landscape For focusing on a landscape in a long distance
Camera settings (Shutter sound)	You can set a shutter sound. You can set a shutter sound each for Photo Mode (Continuous Mode) and Movie Mode.  Shutter sound Select a shutter sound.  While you are selecting, the shutter tone sounds for confirmation.
Camera settings (Flicker correction)	You can suppress blur on the Finder display for when shooting with the camera.  Flicker correction Auto, Mode 1 (50Hz) or Mode 2 (60Hz)
Storage setting (Store in)	You can set the storage location for the still or moving images you shot.  ► Store in ► Phone or microSD

Function menu	Operation/Explanation
Storage setting (Auto save set)	You can set whether to automatically save the image after shooting. When "Store in" is "Phone", the image is saved to the "Camera" folder. When "Store in" is "microSD", the image is saved to the folder set by "Select storage".  ► Auto save set ► ON or OFF
Storage setting (File restriction)	See page 148.
Img. stabilizer [Photo Mode only]	You can correct camera shake for when shooting photos.  Auto or OFF
Auto timer	See page 148.
Shooting effect (Shoot with frame)  At Camera start-up  OFF  [Photo Mode only]	You can shoot a still image with a frame.  ➤ Shoot with frame ➤ ON or OFF ➤ Select a frame.
Shooting effect (Cushy mark)  At Camera start-up  OFF  [Photo/Movie Mode]	You can shoot a person's face with a cushy mark pasted. The cushy mark is automatically pasted in an appropriate position ► Cushy mark ► ON or OFF ► Select a cushy mark.
	► Continuous mode ➤ Select a mode.
(Continuous mode) [Continuous Mode only]	Auto  Shoots automatically at an interval and with the number of frames as specified by "Shot interval" and "Shot number"  Manual  Shoots one by one manually with the number of frames specified by "Shot number".  Auto bracket  Shoots automatically nine still images at an interval of about 0.3 second while changing the brightness and colo

Function menu	Operation/Explanation
Cont. shooting set. (Shot interval) [Continuous Mode only]	➤ Shot interval ➤ Select a shooting interval.  • You can set this only in "Auto" of Continuous Mode.
Cont. shooting set. (Shot number) [Continuous Mode only]	➤ Shot number ➤ Enter the number of photos.  • When "Image size" is set to "VGA (640 x 480)" or "CIF (352 x 288)", you cannot change "Shot number".  • You can set this only in "Auto" or "Manual" of Continuous Mode.
Movie type set  At Camera start-up  Normal  [Movie Mode only]	You can select whether to record both the video and voice, or one of them when you shoot the moving image.  Normal, Video, or Voice
Display size	You can set whether to display a moving image or still image in the original size (Actual size) or to fit to the screen size on the Finder display.  Actual size or Fit in display
Common replay mode [Movie Mode only]	You can set a shooting size appropriate for attaching to i-mode mail.  YES  Image Size is set to "QCIF", File Size Setting is set to "Mail restrict" (S)", and Image Quality (Movie Mode) is set to "Normal".
Icon	You can set whether to display icons.  ON or OFF
Memory info	You can display the used memory space (estimate)/number of stored items.

#### <File size setting>

• When the "File size setting" is set to "Long time", "Store in" is set to "microSD".

#### <Camera settings>

- Note that the image may blur in Night Mode because the exposure takes a longer time.
- If you set "Flicker correction" to "Auto", it may take a while to automatically adjust the image quality. In this case, switch to Mode 1 or Mode 2 according to the power frequency provided in the shooting location.
- Even if you change the setting of "Brightness", "White balance", "Color mode set", or "Focus", the setting appropriate for each "Photo mode" applies when you change "Photo mode".

#### <Storage setting>

- See "Select storage" for how to set a storage location on the microSD memory card.
- If you change "File size setting" to "Long time", "Store in" is set to "microSD" and "Storage setting" cannot be operated.
- When "Auto save set" is set to "ON", the image is saved to the latest folder if "Select storage" is not set or the folder set as a destination folder is deleted.

#### <mg, stabilizer>

- This function is only for decreasing the degree of camera shake, so its effect differs depending on the subject or condition.
- Image Stabilizer might not work effectively in the following cases:
- · When the camera shakes to a great extent
- · When zooming is in use
- · When shooting moving subjects
- When "Photo mode" of "Camera settings" is set to "Sports" or "Night mode", "Img. stabilizer" becomes invalid.
- Residual images might remain in the area where the subject is moving, or noise might be found in overall area. In that case, set this function to "OFF".
- When this function is activated, the processing time after shooting might be longer about two seconds due to the processing by Image Stabilizer.

#### <Shooting effect>

- When "Image size" is set to larger than "VGA (640 x 480)", you cannot shoot with a frame
- You cannot save the still image shot with a frame as the mirrored image.
- When "Image size" is set to larger than "VGA (640 x 480)", cushy marks cannot be pasted in Photo Mode.

#### <Cont. shooting set.>

 The number of shots that can be set differs depending on the image size. The number of shots that can be set is as follows:

VGA (640 x 480): 4 CIF (352 x 288): 4

OVGA (240 × 220): 5

QVGA (240 x 320): 5 through 10 QCIF (176 x 144): 5 through 20

Sub-QCIF (128 x 96): 5 through 20

#### <Display size>

- When "Image size" is set to a size larger than "QVGA (320 x 240)", "Fit in display" always applies.
- The setting on the Finder display is reflected on the Post View display; however the setting on the Post View display is not reflected on the Finder display.

#### <Common replay mode>

• You cannot operate when you set "File size setting" to "Long time".

#### **File Restriction**

You can set the file restrictions for when you save the shot still or moving image. The operation of attaching to i-mode mail is disabled at the receiving end who has received the image as the first distribution.

 
Finder display

➤ Storage setting ➤ File restriction

or

File unrestricted or File restricted

#### For "File unrestricted"



#### For "File restricted"



#### Information

- Even when you set "File restriction" to "File restricted", the still or moving images
  can be output from the destination mobile phone by transmitting the images using
  infrared data exchange or by copying them to the microSD memory card.
- After saving, you can use "File restriction" on page 274 to change the settings.
- When you set "File size setting" to "Long time" in Movie Mode, "File restriction" becomes "File unrestricted".

#### **Auto Timer**

At Camera start-up OFF



• Enter from "01" through "15", in two digits.

#### When Auto Timer is set to "ON"

" appears on the Finder display.

If you press (Record), a confirmation tone sounds and """ blinks. The Call/ Charging indicator flickers every about 1 second until about 5 seconds before shooting. From about 5 seconds before shooting, the Call/Charging indicator flickers every about 0.5 second, and the confirmation tone sounds every about 1 second. Shooting takes place after the set delay time has elapsed.

- To cancel shooting, press [☑]([Quit]) or (CLR) while the Call/Charging indicator is flickering. Even if you cancel shooting, "Auto timer" stays set to "ON".
- You can shoot immediately by pressing ( Record ) before the delay time has elapsed.
- When you shoot, a confirmation tone sounds regardless of the settings such as Manner Mode. The sound volume for the confirmation tone cannot be changed.

#### Information

- You cannot use Auto Timer in "Manual" of Continuous Mode.
- Auto Timer will be set to "OFF" when shooting ends.


#### <Bar Code Reader>

#### **Using Bar Code Reader**

You can use the camera to scan JAN codes and QR codes and store them as data.

From the scanned data, you can make calls, compose i-mode mail messages, and access Internet web pages, and so on.

■ When scanning with Bar Code Reader

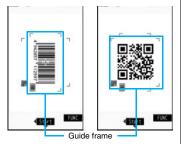

- Take the character strings as large as possible within the guide frame.
- Autofocus works when you scan a code about 10 cm or more away from it. When you scan a code in the out-of-focus state, the recognition rate lowers.
- Scan so that the camera is in parallel with the code.

#### JAN Code

JAN Code is a bar code that denotes numerals with the vertical bars of a different width.

You can scan 8-digit (JAN8) and 13-digit (JAN13) JAN codes.

 "4942857112597" is displayed when you scan this bar code with the FOMA phone.



#### QR Code

QR Code is one of the 2-dimensional codes that denotes data in the vertical and horizontal directions.

Kanji, katakana, alphanumeric characters, and pictographs are displayed when you scan it. Some QR codes have image or melody information.

● "株式会社NTTドコモ (NTT DoCoMo, Inc.)" is displayed when you scan this QR code with the FOMA phone.

 


#### Scan a Code

At Bar Code Reader start-up	Brightness: ±0 Zoom: Magnified view
-----------------------------	--

You can store up to 5 scanned codes.

You can scan up to 16 divided QR codes.



The Bar Code Reader menu is displayed.

• You can paste the Bar Code Reader menu to the desktop. (See page 114)

## Fit a code to be scanned to the guide frame and press ①.

When the focus is locked, a confirmation tone sounds and the <u>cross</u> mark becomes green.

- Press (R) (FUNC) and select "Brightness"; then you can adjust brightness to -3 (dark) through +3 (bright).
- Press to show the reduced display, and press
   to return to the former display.



Scanning Code display

#### Press (Start).

The code is scanned. (The shutter tone does not sound.)

- To cancel scanning, press CLR or (■)( Quit ).
- When scanning is completed, the scanning completion tone sounds and the Call/Charging indicator lights. The sound level is fixed and cannot be changed. However, the tone does not sound in Manner Mode or while "Phone" of "Ring volume" is set to "Silent".
- " ]" is displayed for melody files and " 🖾 " or " 🚾 " is displayed for incompatible or damaged files.
- While you are entering (editing) characters, the Scanned Code Result display does not appear; the Text Data Confirmation display of the scanned code appears. To enter the scanned code, press (S) (Set ). To discard it, press (Marcell) or CLR. The characters that cannot be displayed are replaced by Cancell spaces. When the code containing no text data has been scanned, the code is not correctly displayed.
- If scanning is not completed in a certain period, the scanning is suspended and the Scanning Code display returns.
- When the scanned code is part of divided QR codes, select "OK" to repeat step 2 and step 3 for scanning the rest of codes.





Scanned Code Result display

#### Information

- You cannot scan bar codes or 2-dimensional codes other than JAN codes or QR codes.
- Scanning may take a long time. Hold the FOMA phone securely with your hands during scanning.
- You may not be able to scan codes correctly depending on scratch, dirt, damage, the quality of printed material, light reflection, or QR code version.
- You cannot scan some codes depending on the type or size.

#### Function Menu of the Scanned Code Result Display

Operation/Explanation
See page 150.
You can bring up the Bar Code Reader List when one or more files are stored.
You can connect to the highlighted URL via i-mode or Full Browser.  ▶ i-mode or Full Browser ▶ YES  • You can connect to the URL also by highlighting the URL and pressing ( Select ).
You can compose an i-mode mail message to send to the highlighted mail address. Go to step 3 on page 182.  • You can compose it also by highlighting the mail address and pressing ( select ).  • When you select "Compose message" from the Scanned Code Result display, the data on the Scanned Code Result display is entered into the address, subject, and text field.

Function menu	Operation/Explanation	
Dialing	You can make a voice call or videophone call to the highlighted phone number.  Select a dialing type.  When you select "Select image", select an image to send to the other party during the videophone call.  When you select "Compose SMS", you can compose an SMS message to send to the phone number set as the destination address. Go to step 3 on page 224.  You can make a call also by highlighting the phone number and pressing (Select).	
	<ul> <li>▶ Dial</li> <li>◆ To make an international call, select "Int'l dial assist". (See page 60)</li> <li>◆ To set Caller ID Notification, select "Notify caller ID". (See step 2 on page 47)</li> </ul>	
Add to phonebook	See page 84.	
Add bookmark	You can bookmark the site name and URL.  YES  Select "Page title" to edit the title.  OK Select a destination folder.	
Save image	You can save the scanned image data to set to the Stand-by display or other displays.  Select a destination folder. Go to step 3 on page 166.  See page 170 when images are stored to the maximum.	
Save melody	You can save the scanned melody data to set it as a ring tone or other tones.  YES> Select a destination folder. Go to step 2 on page 167.  Select [] To play back the melody. See page 170 when melodies are stored to the maximum.	
Save ToruCa	You can save the scanned ToruCa file.  Select a destination folder.  Select " To display the ToruCa file.  See page 170 when ToruCa files are stored to maximum.	

Function menu	Operation/Explanation
Start ಔ αppli	You can start up i-oppli from the scanned data. ▶YES
Сору	Select a start point for copying Select an end point for copying. You can copy codes of up to 5,000 full-pitch/10,000 half-pitch characters. See page 372 for pasting copied characters.

#### <Internet>

 URL can be displayed in up to 512 half-pitch characters by Bar Code Reader and up to 256 half-pitch characters by Text Reader.

#### <Compose message>

 If the scanned data contains nonenterable characters, you cannot enter it as a mail address, and those characters may become spaces in the text field.

#### <Dialing>

• You cannot make emergency calls by scanning "110", "119" or "118".

#### <Add bookmark>

 You can display up to 512 half-pitch characters for a URL and can store up to 256 characters from the beginning.

#### <Save image>

 $\bullet$  The file name and title for the saved image are "imageXXX" (XXX are numerals).

#### <Save melody>

- The file name for the saved melody is "melodyXXX" (XXX are numerals).
- For the melody with no title, the file name is displayed as the title.
- When playing back the melody, it is played back at the sound volume set for "Phone" of "Ring volume".

#### **Display the Saved Data List**

LifeKit Bar code reader



The titles for stored data are displayed from the latest one.

• Select a title to show the Scanned Code Result display.

#### Bar Code Reader

#### Information

• The titles for the scanned data are as follows:

(Example) When the scanned data is saved at 10:00 on November 15, 2007; Title name: 20071115\_1000\_0000

> If you store multiple data items for the same date and time, the lower four-digit numbers increase up to "9999".

#### **Function Menu of the Bar Code Reader List**

Function menu	Operation/Explanation
Edit title	► Enter a title. You can enter up to 9 full-pitch/18 half-pitch characters.
Result	You can bring up the Scanned Code Result display for stored data.
Delete (Delete this)	▶ Delete this▶ YES
Delete (Delete all)	Delete all ► Enter your Terminal Security Code ► YES


#### <Text Reader>

#### **Using Text Reader**

You can scan printed phone numbers, mail addresses or alphanumeric characters such as URLs using the camera, and store them as text information. Use the text information to make calls, compose i-mode mail, connect to the Internet, and so on.

#### ■ When scanning with Text Reader

- Take the character strings as large as possible within the guide frame.
- Autofocus works when you scan characters about 10 cm or more away from them. When you scan characters in the out-of-focus state, the recognition rate lowers
- Scan the character string with the camera set in parallel.

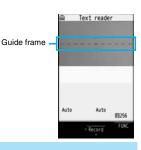

#### **Scan Text**

At Text Reader start-up	Zoom: Magnified view

You can store eight scanned data files of up to 256 half-pitch characters per item.

The number of characters you can scan at a time is up to 50 half-pitch characters, and you can scan the increased characters in parts.



The Text Reader menu is displayed.

• You can paste the Text Reader menu to the desktop. (See page 114)

#### Fit the characters to be scanned to the guide frame and press $\bigcirc$ .

When the focus is locked, a confirmation tone sounds and the guide frame becomes green.

 Press to show the reduced display, and press to return to the former display.



Scanning Text display

Press ( Record

The characters are scanned. (The shutter tone does not sound.)

To cancel scanning, press (CLR).

• When scanning is completed, the scanning completion tone sounds and the Call/Charging indicator lights. The sound level is fixed and cannot be changed. However, the tone does not sound in Manner Mode or while "Phone" of "Ring volume" is set to "Silent".

#### Confirm the scanned result.

The scanned characters are underlined. Confirm the scanned characters for mistakes.

- Press (CLR) to restart scanning.
- To store the characters without correcting, go to step 7.



Confirmation display

#### Press ot highlight a character to be corrected Press the number of the conversion candidate.

- Conversion candidates are displayed up to four kinds for each character.
- When you want to correct a character to other than the conversion candidate. highlight the character to be corrected and press (Mode), then enter a character after switching to "Alphabet entry mode" or "Numeric entry mode". However you cannot enter characters such as ".ne.jp" or ".co.jp" by pressing (<del>X</del>).

The scanned characters are set.

- To link characters, repeat step 2 through step 6.
- To release the set characters, press (CLR).

FUNC ) Store

The scanned characters are stored

- When scanned text contains "tel", "@", or "http://", you can execute Phone To or Web To function by selecting the text. (See page 170) You can select only first item even if multiple items are found.
- como, taro, AA@docomo, ne Scanned Text Result display

Text reader

 Press (☑)( 0verwr ) to overwrite the scanned characters and activate Text Reader, Go to step 2.

#### Information

- Hold the FOMA phone securely with your hands during scanning so that you can scan characters correctly.
- Characters you can scan are alphabet letters (uppercase and lowercase), numerals, and symbols (#, &, (, ), -, ., /, :, @, [, ], \_,  $^{\sim}$ , ?, =,  $^{\circ}$ , and +). You cannot scan kanii and hiragana characters. You might not be able to scan those correctly depending on the surroundings such as lighting.
- You cannot scan handwritten characters correctly.
- You might not be able to scan the following: Characters received by a FAX/Copied characters/Designed characters/ Characters having no certain space between characters/Characters difficult to identify from the background.

#### Display the Saved Data List

MENU LifeKit Text reader Saved data

□docomo ΔΛΛ. taro@docomo

Up to 22 half-pitch characters are displayed for each stored data

Text Reader List

• Select a data item to show the Scanned Text Result display.

## Function Menu of the Scanning Text Display/Scanned Text Confirmation Display

Function menu	Operation/Explanation
Store	See page 153.
Edit	You can edit and store the scanned character string.  Edit the text.
Recognition mode  At Text Reader start-up Auto setting	You can set this mode according to the type of the character string you want to scan.  ▶ Select an item. Auto setting Automatically recognizes the type of characters.  URL Select this when you scan a URL. "http://" or "https://" is automatically entered to the head of the character string when it is stored.  Mail address Select this when you scan a mail address. Phone number Select this when you scan a phone number Select this when you scan numerals.  Free character Select this when you scan alphabetic characters that are not especially specified.
At Text Reader start-up Auto setting	You can set this mode to fit to the printing conditions of the character string you want to scan.  Select an item.  Auto setting Automatically recognizes printing conditions.  Positive fix Select this when deep color characters are printed over faint color ground.  Negative fix Select this when faint color characters are printed over deep color ground.

## Function Menu of the Scanned Text Result Display/Text Reader List

Function menu	Operation/Explanation
Edit	► Edit the text.
Internet	See page 150.
Compose message	You can compose an i-mode mail message to send to the scanned mail address as a destination address.  Go to step 3 on page 182.  ● You can compose it also by pressing 【□】(■□■■).
Dialing	See page 151.
Store mail add.	See page 84.
Store phone No.	See page 84.
Add bookmark	You can bookmark the URL you have scanned.  OK  Select "Page title" to edit the title.  Select a destination folder.
Search phonebook	You can search for Phonebook entries using the scanned phone number or mail address. ▶ Select a search method ▶ □ The Phonebook List that corresponds to the phone number or mail address is displayed.
Display detail/ Display list	You can switch between the Scanned Text Result display and Text Reader List.
Delete (Delete this)	▶ Delete this▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

## i-mode/i-motion/i-Channel

What is i-mode?	156
Displaying Sites	
Accessing Sites ß Menu>	156
How to View/to Operate Sites	157
Displaying Most Recently Accessed SiteLast URL>	160
Using My Menu	161
Changing i-mode Password Change i-mode Password	161
Displaying Internet Web Pages Enter URL>	162
Bookmarking Web Pages or Sites for Quick Access	
Bookmark>	162
Saving Site Contents	164
Downloading Images or Melodies from Sites	
Downloading Files or Data Items from Sites	166
Convenient Functions of i-mode	
Operations from Highlighted Information	170
Setting Functions of i-mode	
Setting i-mode	172
Setting Connection Timeout Set Connection Timeout	172
Changing a Host from i-mode (ISP Connection Communication	1)
	173

Using Certificates	
Operating SSL Certificates	173
Setting FirstPass	174
Changing a CA CenterCertificate Host	175
Using i-motion	
What is i-motion?	176
Obtaining i-motion Movies from Sites	
Obtain i-motion Movie>	177
Setting Automatic Replay of i-motion Movies	
ເ ∰ motion Auto-play>	178
Using i-Channel	
What is i-Channel?	178
Using i-Channel	179
Setting How Ticker is Displayed (Ticker ON/OFF)	179

#### What is i-mode?

i-mode is the service that makes use of the display of the FOMA phone supporting i-mode (i-mode phone) to enable you to use online services such as site (program) access, Internet access, and i-mode mail.

- i-mode is a pay service that is available on a subscription basis.
- For details on i-mode, refer to the "Mobile Phone User's Guide [i-mode] FOMA version".

#### ■ Before Using i-mode

- Contents of sites (programs) and web pages (Internet web pages) are generally protected by copyrights law. Data such as text and images that you obtained to the i-mode phone from sites (programs) and Internet web pages can be used for personal entertainment but cannot be used in whole or in part, as it is or after modification, for commercial purposes or sent as e-mail attachments or output from your i-mode phone to other devices, unless you have permission from the copyright holders.
- If you replace the UIM with another one or turn on the power with the UIM not inserted, you cannot display/play back files depending on the model, such as still images/moving images/melodies obtained from sites, attached files (still images/ moving images/melodies and other files) sent/received by mail, screen memos, or Messages R/F.
- When the file whose display and/or playback is restricted by the UIM is set for the Stand-by display or specified ring tone, the FOMA phone works with the default contents when you replace the existing UIM with new one or turn on the power with the UIM not inserted.

#### < 8 Menu>

#### **Accessing Sites**

You can use a variety of services offered by IPs (Information Providers). From the display of the FOMA phone, you can check your bank balance, reserve tickets, and do similar tasks, (IPs offer different types of services. Some of them need to be applied for separately.)





While you are online, " # " blinks.

- " " blinks while you are using the i-mode service (during i-mode standby).
- To cancel during the connection, select "Cancel". To cancel while obtaining a page, press ( Quit ).
- To end i-mode, press (a) and select "YES" while the site is displayed. "a goes off and i-mode ends.
  - It may take longer to end i-mode.

#### Select an item (link).

- Repeat selecting items (links) to display the desired site.
- You can select underscored items on the displayed site. When you select an item, it is highlighted.
- If there is a number at the head of the item showing the link, you can connect to that link directly by pressing the numeric key corresponding to that number. (Some sites cannot be connected.)
- While the site is displayed, press ( ) to scroll through line by line. Press (Page ▲)/()(Page ▼) or ▲/(▼) to scroll through page by page.

#### To obtain an SSL site (SSL pages)

The display on the right appears. When obtaining is completed, the SSL page appears and "\( \frac{\text{SSL}}{2\text{C}} \)" lights.

#### To return to a non-SSL site

The display on the right appears. Select "YES" to display the ordinary site: " $\frac{m}{n}$ " goes off.





#### Information

- Depending on the site, you may need to apply for the service in writing separately, or to pay information fees to use it.
- The maximum display size of the images on the site is 240 x 350 dots. If an image is larger than 240 x 350 dots, it is displayed shrunk with a proportional ratio retained.
- Depending on the site, " imight be displayed when the image is not correctly displayed.
- Depending on the site or data, you might not be able to download or save melodies. PDF files, software programs, and others.
- With some Internet web pages (sites) supporting i-mode, the color setting might make the text difficult or impossible to see.
- When you are asked from the site to send information about music you have played back on the FOMA phone, the confirmation display appears for about sending your music information. Select "YES" to send the information (title names, artist names, and played dates) of the music played back on the FOMA phone. The sent music information is used for the IP (information provider) to provide customized information to you.

#### Change to 6 Menu in English

The S Menu can be displayed in English.

● To change back to the Japanese display, select "日本語 (Japanese)".



#### Information

- The \$\frac{1}{2}\$ Menu in English differs slightly from the \$\frac{1}{2}\$ Menu in Japanese.
- Items such as Tokusuru Menu and News are not shown on the English & Menu.
- Generally, "What's New" site will be updated every other Monday.
- English sites are displayed after entering Menu List (sites differ from Japanese version).
- Access news from DoCoMo and usage regulations on "What's New".

#### **How to View/to Operate Sites**

Basic operating methods while a site is displayed are explained.

## Return to Obtained Previous Page/Go to Obtained Next Page

The FOMA phone saves the files such as the displayed Internet web pages to a temporal storage area called a cache. By pressing O, you can bring up the page stored in the cache without communicating.

- When you bring up a page that exceeds the cache size on the FOMA phone or a page that is configured (created) to always read its latest information, the FOMA phone starts communication.
- When i-mode ends, the cache is cleared.

Press to return to the previous page.

Press to go to the next page.

Two pages before



One page before

ミュージ ックチャネル(番組配信)

DCMX (ケータイクレラ\*ット)


タファッション/コスメ



Currently displayed page

#### To turn pages

You can move back up through the pages that you have displayed so far by pressing  $\bigcirc$  repeatedly. However, if you display a different page ("D") from the previous page ("B"), you cannot return to "C" from "D" even when you press  $\bigcirc$  twice. Instead, the pages are displayed in the order of "D"  $\rightarrow$  "B"  $\rightarrow$  "A".

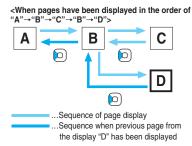

#### Information

- When you display a page stored in cache, you cannot display text or settings you entered when connected before.
- When Flash movies are displayed, the site behavior might differ from the one for ordinary sites.

#### Select/Enter Information on Sites

In sites, you may use the displayed radio buttons, check boxes, text boxes, and pull down menus.

Name	Display example	Operation/Explanation
Radio button	Not selected  Selected	Radio buttons are for selecting one from multiple choices.
Check box	Not selected Selected	Check boxes are for selecting one or more items from multiple choices.

Name	Display example	Operation/Explanation
Text box	乗換駅から 下車駅へ 0.検索	You can enter characters. Highlight a text box and press (Select) to show the Character Entry display.
Pull down menu	東京 校案 東京祭業国 群馬城岡	You can select an item from the option list. Highlight a pull-down menu and press  (a) (select) to show the option list.  You might be able to select multiple items from pull-down menus. Each time you use to highlight an item and press (a) (select), you can select/release items repeatedly. After selecting items, press (a) (Finish).

#### Information

 Depending on the site, the display authenticating your user ID or password might appear.
 Enter your user ID and password, and then select "OK".

#### **Flash Function**

Flash is an animation technology using pictures and sound. Flash movies make the sites more attractive. You can download Flash movies to your FOMA phone and play them back or set them for the Stand-by display.

#### Information

- The maximum display size of the Flash movies on the site is 240 x 350 dots. If a
  Flash movie is larger than 240 x 350 dots, it is displayed shrunk with a
  proportional ratio retained.
- Some Flash movies refer to the phone-information data in your FOMA phone. To permit the use of the information in your FOMA phone, set "Use phone information" to "YES". ("YES" is set at purchase.)

- Effect tones sound for some Flash movies. To silence them, set "Sound effect setting" (or "Sound effect") to "OFF".
- The effect tone and vibrator for the Flash movie set for the Stand-by display do not work.
- The effect tone for Flash movies does not sound during Play Background.
- Some Flash movies may vibrate the FOMA phone while they are being played back. The FOMA phone vibrates regardless of the setting of "Vibrator".
- When you play back a Flash movie after saving to Data Box, microSD memory card, or Screen Memo, it might look different depending on the saving location.
- Some Flash movies might not work correctly.
- You cannot save the Flash movies if an error occurs while they are being played back.
- When Flash movies are displayed, the behavior might differ from ordinary sites.

#### Serial number of mobile phones/UIMs

When you select an item, the confirmation display might appear asking whether to send the serial number of mobile phone/UIM.

- The "serial number of your mobile phone/UIM" to be sent is used by an identifying the user, providing customized information, and for judging if the contents the IP (Information Provider) offers are available on your mobile phone.
- The "serial number of your mobile phone/UIM" is sent to the IPs (Information Providers) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IPs (Information Providers) or others, by this operation.

#### Function Menu while Site is Displayed

Function menu	Operation/Explanation
8 Menu	You can return to " & Menu".
Bookmark (Add bookmark)	See page 162.

Function menu	Operation/Explanation	
Bookmark	▶ Bookmark	
(Bookmark)	Go to step 1 on page 163.	
Screen memo	See page 164.	
(Add screen memo)		
	N. O. and an arrange like	
Screen memo	Screen memo list Go to step 2 on page 165.	
<u> </u>		
Internet (Enter URL)	You can enter a URL to display an Internet web page.  Enter URL Select the text box.	
(Linter OnL)	Go to step 2 on page 162.	
	The URL of the displayed site is input beforehand.	
Internet	See page 258.	
(Switch to FB)	000 pago 200.	
Reload	The site contents will be updated with the latest information.	
Save image	See page 166.	
Compose message	You can compose an i-mode mail message with the URL/image of a displayed site/screen memo pasted or attached.	
	Select an item.	
	Attach URL Pastes a URL to the text of an i-mode mail message.	
	Attach image Select an image to attach it to an i-mode mail message.	
	Insert dec. mail Select an image to paste it to a  Deco-mail message.	
	Go to step 2 on page 182.	
	See page 186 for Deco-mail.	
Add to phonebook	See page 84.	
Add desktop icon	See page 114.	
Others	When characters are not correctly displayed, you can convert	
(Change CHR	them to the correct ones.	
code)	Change CHR code  This setting is valid only for the site and Internet web page	
	This setting is valid only for the site and Internet web page	

being displayed.

**►**Title

You can display the title of the displayed site.

Others

(Title)

Function menu	Operation/Explanation
Others (URL)	You can display the URL of the displayed site. ▶URL
Others (Certificate)	You can check the subject name, author, validity period and serial number of the certificate used in SSL communication. Up to five certificates are displayed.  Certificate
Others (Set image display)	See page 172.
Others (Sound effect)	See page 172.
Others (Retry)	You can play back the animation or Flash movie from the beginning.  Retry  When a part of the Flash movie is outside the display area, the Flash movie might not be played back.

#### <Compose message>

- The number of characters of the URL you can paste to the text is up to 256 half-pitch characters. If the URL contains 256 half-pitch characters or more, you cannot paste it.
- You may not be able to attach or paste some images to i-mode mail.

#### <Others (Change CHR code)>

- When characters are not correctly displayed, repeat the operation. However, the
  previous character is displayed if you repeat the operation four times.
- Even when you repeat this operation, the correct character might not appear.
- If you change the character code when the correct characters are displayed, wrong characters might appear instead.

#### <Others (Title)>

• Up to 128 half-pitch/64 full-pitch characters can be displayed for a title.

#### <Last URL>

#### **Displaying Most Recently Accessed Site**

#### **Display Last URL**

When you end i-mode, the URL of the page displayed last is stored as "Last URL".

You can display the page you viewed last time by selecting "Last URL" from the i-mode menu.



#### Information

 Some pages cannot be stored as "Last URL", such as pages whose URLs contain more than 2,048 half-pitch characters, the Obtaining Completion display for melodies or i-motion movies, etc. and FirstPass Center pages.

#### **Reset Last URL**

You can initialize the URL of the page you viewed last time to the  $\ensuremath{\mathsf{R}}$  Menu URL.



লৈ ► ্ল -mode settings ► Reset last URL ► YES

#### <My Menu>

#### **Using My Menu**

If you register frequently used sites in My Menu, you will be able to access them easily.

You can register up to 45 sites.

#### Register Sites in My Menu

- → Bring up a page to be registered Register My Menu
  - The page configuration differs depending on the site.
- Select the i-mode password text box
  - ▶Enter the i-mode password▶決定 (OK)
  - The entered i-mode password is displayed as "\*".
  - See page 120 for the i-mode password.

#### Information

- Some sites cannot be registered in My Menu.
- When you subscribe to a pay site in メニュー/検索(Menu/Search) and Menu List, it will be registered in My Menu automatically.

#### Access Sites from My Menu

ୀ (ଛିନ୍ନ)⊳ ଞ୍ଜି Menu⊳ English iMenu⊳ My Menu ⊳ Select a site to be accessed.

#### Information

 If you are using Dual Network Service, you might not be able to use My Menu registered by the mova phone using the FOMA phone, or My Menu registered by the FOMA phone using the mova phone. <Change i-mode Password>

#### **Changing i-mode Password**

The i-mode password (four digits) is required to subscribe to and unsubscribe from message services and i-mode pay sites, and to do i-mode mail settings.

Be sure not to let others know your i-mode password.

- <mark>1</mark> ເຂັα ▶ ຄື Menu ▶ English iMenu ▶ Options
  - Change i-mode Password
  - ► Select the "Current Password" text box
  - ► Enter the i-mode password (four digits).
  - If you enter the i-mode password for the first time, enter "0000" (four zeros) which is set at a time of your contract.
  - The entered numeral is displayed as "\*".
- Select the "New Password" text box
  - ► Enter a new i-mode password (four digits).
  - Enter your own i-mode password.
- Select the "New Password (Confirmation)" text box
  - ► Enter the new i-mode password (four digits) ➤ Select
    - Enter the same number that you entered in step 2.

#### Information

 Note that if you do not remember the i-mode password, you need to bring an identification card such as your driver's license to the handling counter of a DoCoMo shop.

#### <Enter URL>

#### **Displaying Internet Web Pages**

Go to location > <NEW>

#### Enter a URL OK

- You can enter up to 256 half-pitch alphanumeric characters and symbols (up to 512 half-pitch characters for Full Browser).
- For Full Browser, the confirmation display appears telling that the web page might not be displayed.

 
#### Information

- For i-mode, Internet web pages not supporting i-mode or some type of internet web pages to be connected might not be displayed correctly.
- When the file size of the page you have received exceeds the maximum obtainable size of a page, receiving is suspended. The data obtained so far might be displayable by selecting "OK".

#### Displaying Web Pages from URL History

Up to 10 entered URLs can be stored in URL History.

(≅∞) ➤ Go to location Select a URL to be displayed ➤ OK



• You can edit the URL by selecting the URL's text box.



#### Information

- When the entered URLs exceed 10 items, the URL histories are overwritten automatically, starting from the oldest one.
- When you newly enter a URL to access a site, that URL is saved as a different record even if you access the same URL.

Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message with the highlighted URL pasted to the text. Go to step 2 on page 182.  ● You can compose it also by pressing ( ).
Add desktop icon	See page 114.
Set as home URL	You can store the site as Home URL of Full Browser.  YES  You can operate this only from the URL History List of Full Browser.
Delete [Delete (Delete this)]	▶ Delete (Delete this) ▶ YES

▶ Delete selected ▶ Put a check mark for URL histories to

▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

Function Manu of the LIDI History List

#### <Bookmark>

(Delete selected)

Delete

Delete

(Delete all)

#### **Bookmarking Web Pages or Sites for Quick Access**

be deleted \(\sum (\) Finish ) \(\sum YES\)

#### Add Bookmark

Once you bookmark a frequently accessed site, you can display the page directly. You can register 100 bookmarks each for i-mode and Full Browser.

- From the page to be registered ► (\$\varphi\alpha)(\varphi\text{FUNC})
  - ► Bookmark ► Add bookmark ► YFS
  - Select a destination folder.

- URLs containing up to 256 half-pitch characters can be registered (up to 512 half-pitch characters for Full Browser). URLs longer than this cannot be registered.
- Up to 12 full-pitch/24 half-pitch characters are stored for a title. For longer titles, the excess characters are deleted. If no title is entered, the URL without "http://" or "https://" is registered.
- The contents entered in the site are not saved to the bookmark.
- Some pages cannot be bookmarked.

#### Display Web Pages or Sites from a Bookmark

■ Bookmark Select a folder Select a bookmark to be displayed.



 After you use a bookmark to display a page, that bookmark will be displayed at the top of the Bookmark List.

#### **Function Menu of the Bookmark Folder List**

Function menu	Operation/Explanation
Operate folder (Add folder)	You can add a new folder. You can add up to nine folders in addition to each "Bookmark" folder,"Screen memo" folder.  ▶ Add folder ▶ Enter a folder name.  ◆ You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder	► Edit folder name ► Edit the folder name.
(Edit folder name)	<ul> <li>You can enter up to 10 full-pitch/20 half-pitch characters.</li> </ul>

Function menu	Operation/Explanation
Operate folder (Delete folder)	You can delete the folder and all bookmarks and screen memos in the folder. You cannot delete the "Bookmark" folder. "Screen memo" folder.  Delete folder Enter your Terminal Security Code YES
Ir/ transmission (Send all Ir data)	See page 310.
Ir/ transmission (All transmission)	See page 311.
No. of bookmarks	You can check the number of bookmarks stored in all folders.
Delete all	The folders will not be deleted. ▶ Enter your Terminal Security Code▶ YES
Function Menu of the Bookmark List	
Function menu	Operation/Explanation
Compose message You can compose an i-mode mail message with the	

Function menu	Operation/Explanation	
Compose message	You can compose an i-mode mail message with the highlighted URL pasted to the text.  Go to step 2 on page 182.  You can compose it also by pressing ().	
Attach to mail	You can send an i-mode mail message with the bookmark attached. Go to step 2 on page 182.	
Move	You can move bookmarks or screen memos to another folder.  ➤ Select a destination folder  ➤ Put a check mark for bookmarks or screen memos to be moved  ➤ (Finish)  ➤ YES	

Function menu	Operation/Explanation		
Edit title	► Edit the title.  • You can edit the title also by pressing (Edit) from the listing display.  • You can enter up to 12 full-pitch/24 half-pitch characters for a bookmark. If you press (Set) with a blank, the URL without "http://" or "https://" is registered.  • You can enter up to 11 full-pitch/22 half-pitch characters for a screen memo. If you press (Set) with a blank, the screen memo is registered as "No title".		
Copy (Copy URL)	You can copy the URL of the bookmark.  Select a start point for copying  Select an end point for copying.  See page 372 for how to paste copied characters.		
Copy (Copy to microSD)	See page 296.		
Set as home URL	You can store the site as Home URL of Full Browser.  YES  You can operate this only from the Bookmark List of Full Browser.		
Add desktop icon	See page 114.		
Ir/ transmission (Send Ir data)	See page 309.		
Ir/ transmission (transmission)	See page 311.		
No. of bookmarks	You can display the number of bookmarks stored in the displayed folder.		
Delete [Delete (Delete this)]	▶ Delete (Delete this)▶ YES		
Delete (Delete selected)	Delete selected ▶ Put a check mark for bookmarks or screen memos to be deleted ▶ (Finish) ▶ YES		
Delete (Delete all)	You can delete all bookmarks or screen memos stored in the folder.  ▶ Delete all ▶ Enter your Terminal Security Code ▶ YES		

#### <Screen Memo>

#### **Saving Site Contents**

#### Save as a Screen Memo

You can save a displayed page as a screen memo to the FOMA phone. You can display the page saved as a screen memo without connecting to i-mode.

You can save up to 100 screen memos, however, the number of screen memos you can save decreases depending on the data volume.



- Select a destination folder.
- See page 170 when screen memos are stored to the maximum.

#### Information

- Up to 11 full-pitch/22 half-pitch characters are stored for a title. For longer titles. the excess characters are deleted
- If you save the Obtaining Completion display, its data file is saved as well. (The Obtaining Completion display for Chaku-uta Full® music files, for i-motion movies with playback deadline, or for the ToruCa files whose output from the FOMA phone is prohibited cannot be saved.) Some Obtaining Completion displays cannot be saved as screen memos. The display except the Obtaining Completion display is saved with a URL of that page of up to 256 half-pitch characters.
- When you save SSL pages, their SSL certificates are saved as well.
- The contents entered in the text box, or selected with the pull-down menu, check box, or radio button are not saved to screen memos.
- You can save up to 100 Kbytes per page. However, you can save up to 500 Kbytes of the i-motion Obtaining Completion display, up to 200 Kbytes of the Template Obtaining Completion display, up to 1 Kbyte of the ToruCa Obtaining Completion display, and up to 20 Kbytes of the Download Dictionary Obtaining Completion display.

#### Display a Screen Memo

Screen memo



Select a folder Select a screen memo.



• Use other screen memos.

#### Information

• The page saved as a screen memo has the information at the time it was saved. This might differ from the latest information on the site.

#### **Function Menu of the Screen Memo Folder List**

Function menu	Operation/Explanation	
Operate folder (Add folder)	See page 163.	
Operate folder (Edit folder name)	See page 163.	
Operate folder (Delete folder)	See page 163.	
Security ON/OFF	You can set the folder to open only when you enter your Terminal Security Code.  ▶ Enter your Terminal Security Code ▶ YES The folder changes to "[□;".  • To release it, perform the same operation.	

Function menu	Operation/Explanation	
No. of memos	You can display the number of stored screen memos and protected screen memos in all folders.	
Delete all	You can delete all screen memos. The folders will not be deleted. ► Enter your Terminal Security Code ► YES	

#### Function Menu of the Screen Memo List

Function wend of the Screen went List		
Function menu	Operation/Explanation	
Move	See page 163.	
Edit title	See page 164.	
Protect ON/OFF	You can protect screen memos not to be deleted. You can protect up to 50 screen memos, however, the number of screen memos you can protect decreases depending on the data volume.  Protected items are indicated by """.  To release protection, perform the same operation.	
No. of memos	You can display the number of stored screen memos and protected screen memos in the displayed folder.	
Delete (Delete)	See page 164.	
Delete (Delete selected)	See page 164.	
Delete (Delete all)	See page 164.	
(Delete all)		

#### **Function Menu of the Detailed Screen Memo Display**

Function menu	Operation/Explanation	
Compose message	You can compose an i-mode mail message also by pressing [ ] ( See page 159)	
Edit title	See page 164.	
Protect ON/OFF	See page 165.	
Save image	See page 166.	
Add to phonebook	See page 84.	
Others (URL)	You can display the URL of the screen memo.  URL	
Others (Certificate)	See page 160.	
Others (Sound effect)	See page 172.	
Others (Retry)	You can play back the animation or Flash movie from the beginning.  • Retry  • When a part of the Flash movie is outside the display area, the Flash movie might not be played back.	
Delete	▶YES	

#### **Downloading Files or Data Items from Sites**

You can download the files such as images and melodies from sites and save them to the FOMA phone. You can save some files directly to the microSD memory card.

#### **Download Image**

You can save the image displayed on a site or screen memo, and then set it as the Stand-by display, Wake-up display, or another display. You can save images, frames and marks for Deco-mail as well. You can save up to 3,500 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

- From a site display/Detailed Screen Memo display
  - ►(inc) Save image
  - ► Save image or Save BG image
  - When you save an image, select it.
- YES►Select a destination folder.
  - See page 170 when images are stored to the maximum.
- To set it as a display, select "YES".

  Go to "Set display" on page 274.

#### Information

- Up to 36 half-pitch characters are saved for a file name.

   When the file name is a saved for a file name.
- When the file name is not specified, a part of the downloaded URL or "imagexxx" (xxx denotes numerals) is saved as the file name.
- Even when an image is displayed on the site, it might not be displayed on the Picture viewer after saving it to the FOMA phone.
- ◆ The image satisfying the following conditions is saved as a Decomail-pictograph:
   ◆ GIF or JPEG image
   ◆ Image of 20 x 20 dots
- · Image without file restrictions · Image of 6 Kbytes or less

- The image satisfying the following conditions is saved as a frame or a mark:
   Transparent GIF (except animation GIF)
   The extension is "ifm".
- Image of Stand-by (240 x 427) or smaller Images of Stand-by (240 x 427), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), and Sub-QCIF (128 x 96) are saved as frames, and others are saved as marks.
- You can save up to 100 Kbytes per image via i-mode, or 500 Kbytes per image via Full Browser.
- For Full Browser, you cannot save some images. You can save images in BMP format and PNG format only to the microSD memory card.

#### **Download Melody**

You can download melodies and set them as a ring tone and other tones. You can save up to 3,500 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

- Bring up a melody downloadable site
  Select a melody Save YES
  - Select a destination folder.
  - See page 290 for operations while a melody is being played back.
  - Select "Property" to display the melody information. (See page 291)
  - See page 170 when melodies are stored to the maximum.
  - See page 164 to save a screen memo.



Obtaining Completion display

Select "YES" to set the downloaded melody as a ring tone
Select an incoming type.

#### Information

- For some melodies, the play part might have been specified. If you set the play-part-specified melody for a ring tone, it is played back according to the setting of "Position to play".
- $\bullet$  Some downloaded melodies might not be played back successfully.

#### Information

- Up to 36 half-pitch characters are saved for a file name.
   When the file name is not specified, a part of the downloaded URL or "melodyxxx" (xxx denotes numerals) is saved as the file name.
- Untitled melodies are indicated by "No title" on the Obtaining Completion display or list.
- You can save up to 100 Kbytes per melody.

#### **Download PDF File**

You can download PDF files from sites for display. You can save up to 3,500 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

### Bring up a PDF file downloadable site Select a PDF file.

- With the PDF file that cannot be displayed unless you download all pages, the confirmation display appears asking whether to download all pages.
   Select "YES" to select the destination folder.
- If you have not downloaded all pages, you can additionally download the remaining pages by using "Download remain".
- See page 315 for how to save the displayed PDF file to the FOMA phone.
   You can save the PDF file containing pages that have not been downloaded or the PDF file of which download was suspended midway as well.
- The password entry display might be displayed depending on the PDF file.
   Enter the password, and then select "OK".
- See page 312 for operations while PDF file is displayed.

#### Information

- The file size of the PDF file you can download from i-mode sites is up to 2 Mbytes.
   You cannot download the PDF file in excess of 2 Mbytes.
- You might be able to display the failed-to-download PDF file by re-downloading.

#### **Download Kisekae Tool File**

You can download Kisekae Tool files from the site to change the ring tone, Stand-by display, icons, and others at a time. You can save up to 3,500 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

- You can download the pre-installed Kisekae Tool file from the "P-SQUARE" site. (See page 170)
  - Bring up a Kisekae Tool downloadable site ➤ Select a Kisekae Tool file
    - Save YES Phone or microSD
    - When you save a Kisekae Tool file to your FOMA phone, the confirmation display appears asking whether to set the Kisekae Tool file at a time.
    - Select "Property" to display the Kisekae Tool information. (See page 293)
    - See page 170 when Kisekae Tool files are stored to the maximum.
    - See page 164 to save a screen memo.

# Data acquisition The important in the

Obtaining Completion display

#### When downloading Kisekae Tool file is suspended

When you press [ Quit ] to suspend downloading or when downloading is suspended by an incoming call, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the Obtaining Completion display. When you select "Save pt.", select "Phone" or "microSD" to save.

You can re-download the rest of the partially saved file from "Kisekae Tool" in "Data box".

#### Information

You can save up to 2.078 Kbytes per Kisekae Tool file.

#### Download ToruCa File

You can download ToruCa files from sites. You can save up to 495 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

## Bring up a ToruCa file downloadable site Select a ToruCa file Save ➤ YES Select a destination folder.

- Select "Display" to preview the ToruCa file. You can save the ToruCa file also by pressing ( )( Save )
- See page 170 when ToruCa files are stored to the maximum.
- Press (FUNC ) and select "Add screen memo" to save the display as a screen memo. (See page 164)



Obtaining Completion display

#### **Download Template**

while it is previewed.

You can download templates for Deco-mail from sites.

You can save up to 100 templates including the pre-installed ones, however, the number of templates you can save decreases depending on the data volume.

 You can download the pre-installed templates from the "P-SQUARE" site. (See page 170)

## Bring up a template downloadable site ➤ Select a template ➤ Save ➤ YES

- Select "Property" to display the information about the template. (See page 190)
- See page 189 for how to check the stored template.
- See page 170 when templates are stored to the maximum.
- See page 164 to save a screen memo.



Completion display

- When no decoration is set for the template, you cannot save it.
- When a file is attached to the template, that file is deleted.
- When the image whose output from the FOMA phone is prohibited is inserted, the inserted image is deleted when saving. When the inserted image is deleted and thus no decoration is found, you cannot save the template.
- The title of the downloaded template takes the name of "YYYY/MM/DD hh:mm".
   (Y: year, M: month, D: date, h: hour, m: minute)
- You can download up to 200 Kbytes per template file, but when the number of characters used for the mail text exceeds 5,000 full-pitch characters or 10,000 half-pitch characters, or when the total of the image size inserted exceeds 90 Kbytes, you cannot save that template file.

#### **Download Dictionary**

You can download dictionaries from sites. You can save up to 10 dictionaries including the pre-installed ones.

- You can download the pre-installed dictionaries from the "P-SQUARE" site. (See page 170)
  - Bring up a dictionary downloadable site Select a dictionary Save YES
    - Select "Property" to display the information about the dictionary. (See page 373)
  - See page 164 to save a screen memo.



Completion display

<Not stored>▶To set it as a dictionary file, select "YES".

• See page 373 for how to operate the downloaded dictionary.

#### Information

- You can save up to 20 Kbytes per dictionary.
- Depending on the site, you might not be able to download dictionaries.

#### **Download Chara-den Images**

You can download Chara-den images from sites. You can save up to three Chara-den images including the pre-installed ones.

- You can download the pre-installed chara-den images from the "P-SQUARE" site. (See page 170)
- Bring up a Chara-den image downloadable site
  - ► Select a Chara-den image ► Save
  - YES
  - Select "Property" to display the information about the Chara-den image. (See page 288)
  - See page 170 when Chara-den images are stored to the maximum.
  - See page 164 to save a screen memo.



Completion display

#### Information

• You can save up to 100 Kbytes per Chara-den image.

#### Search by i-mode

You can look for your favorite files on the site and download them. The number of files you can save differs depending on the files you download.

You cannot change the site.

- Each selection display Search by i-mode YES
  - Select a file.
  - The way of downloading differs depending on the file.

#### Information

• You are separately charged a packet communication fee.

#### When the data files are stored to the maximum

If the maximum number of data files is stored or there is not enough memory when you try to save the data files, the confirmation display appears asking whether to delete the unnecessary file and save new one.

 
- Perform this operation to save the following data:
- · Images · i-motion movies · Melodies
- · Chara-den images · Programs
- · Chaku-uta Full® music files · PDF files
- · i-αppli programs · ToruCa files · Templates
- · Screen memos · Kisekae Tool files
- 1. YES▶Put a check mark for data files to be deleted▶☑(Finish)▶YES

As the data files except Chara-den images, templates, and screen memos are stored in the same storage area, you can select other files when deleting files. Select a folder and put a check mark for the files to be deleted. "\*" appears on the folder which contains the checked files.

- "Finish" appears when you put it for the files whose amount of data is equal to memory shortage.
- You can put or clear check marks at a time by pressing (FUNC) and selecting "Select all in page/Release in page".
- Each time you press and select "Change disp. mode", you can switch display/nondisplay of data volume of the folder.
- When selecting a file in "MUSIC", you can show the lower level folders by pressing ( ).
- Each time you press CLR, the upper level folder returns.
- For programs, you need to delete many files when deleting other files because the data volume per program is large.
- If the maximum number of programs are stored when you execute "Move program" or try to save an i-αppli program or ToruCa file, you need to delete at least one file which belongs to the same type.
- If there is a security-applied folder for screen memos, the confirmation display appears asking whether to enable you to select screen memos in that security-applied folder. When you select "YES", you need to enter your Terminal Security Code.
- The file set for another function is indicated by "★".
- See page 234 for deleting mail-linked i-oppli.
- If you operate this when moving an i-oppli program from the microSD memory card
  to the FOMA phone, you cannot delete the i-oppli program with its data file on the
  IC card.

#### About "P-SQUARE"

You can download the pre-installed Kisekae Tool file, templates, dictionaries, Chara-den images, and Decomail-pictographs from the "P-SQUARE" site (Japanese only).





QR code for accessing the

#### **Operations from Highlighted Information**

You can easily make a call, send mail, display Internet web pages using highlighted information (phone numbers, mail addresses, URLs, melodies, images, and so on) displayed on sites and in mail.

- The Web To, Phone To/AV Phone To, Mail To, i-oppli To and Address Link functions might not be available depending on the mail sent from a personal computer or the site.
- You might be able to use the Web To, Phone To/AV Phone To, Mail To, or i-cppli
  To function using highlighted information other than a phone number, mail address
  or URL.
- In B Mode of 2in1, the Mail To function is not available.

#### Phone To/AV Phone To Function

You can make voice calls or videophone calls by using phone numbers or similar information displayed on sites and in mail.

 The Phone To function to make a videophone call is called the AV Phone To function.

## Select a phone number or similar information Select a dialing type.

- When you select "Select image", select an image to be sent to other party during a videophone call.
- Select "SMS" to compose an SMS message to send to the phone number set as the destination address. Go to step 3 on page 224.
- The choices for dialing types may not be displayed when the phone number is prefixed by "tel:" or "tel-av:". Go to step 2.

#### Dial

- To make an international call, select "Int'l dial assist". (See page 60)
- To set Caller ID Notification, select "Notify caller ID". (See step 2 on page 47)

#### **Mail To Function**

You can send mail by using mail addresses or similar information displayed on sites and in mail.

Select a mail address or similar information.

The destination mail address is already entered in the address field. Go to step 3 on page 182.

#### **Web To Function**

You can access Internet web pages, via i-mode or Full Browser, from URL or similar information displayed on sites or in mail.

- Select a URL or similar information
  - When the URL or similar one contains the information of i-mode or Full Browser, you are connected via the function which corresponds to the information
  - To cancel during connection, select "Cancel". To cancel while obtaining a page, press (□)( Quit ).

#### i-αppli To Function

You can start i-oppli programs from URLs (links) displayed on sites and in mail.

Select i-αppli information ➤ YES
i-αppli starts.

#### Information

Even if i-mode mail text contains a link to start an i-oppli program, you cannot
quote the link when forwarding or replying to. Also, you cannot quote it when
using DoCoMo keitai datalink or infrared data exchange function.

#### **Address Link Function**

You can bring up a map from the postal address shown in a site or others. You can send the location information by i-mode mail as well.

Select the location information such as postal address Select an item.

Run ☐ oppli . . . . Selects and starts an i-oppli program.

**Read a map**. . . . . Connects to the map site and displays a map.

Paste to mail. . . . Converts the location information into a URL and compose

an i-mode mail message with the URL pasted to the text.

#### < 8 -mode Settings>

#### **Setting i-mode**

1 (in partial in part

Item	Operation/Explanation	
Scroll	You can set the number of lines that are scrolled for when you use while displaying a site or screen memo.  Select the number of lines.	
Character size	See page 116.	
Set image display	You can set whether to display images or Flash movies included on sites or in screen memos.  > ON or OFF	
Set connection timeout	See page 172.	
Host selection	See page 173.	
🖁 motion auto-play See page 178.		
Use phone information	To display a Flash movie while a site or screen memo is displayed, the information in the FOMA phone may be used. You can select whether to permit the information to be used for that case.  YES or NO	
Sound effect setting	You can set whether to make an effect tone sound for when you display a Flash movie while a site or screen memo is displayed.  ON or OFF	
Doc. display settings	See page 316.	
Check settings	You can check each of " g -mode settings".	
Reset last URL	See page 160.	

#### Information

#### <Set image display>

- Even when "ON" is set, images might not be displayed correctly. In this case,
   " x" is displayed.
- When "OFF" is set, " is displayed and the data file is not received.

#### <Use phone information>

- The available information is as follows:
- · Date and time set by "Set time"
- · Reception level of radio waves
- · Battery level
- · Sound volume set by "Phone" of "Ring volume"
- Language selected by "Select language"
- · Model name and serial number of FOMA phone

#### <Sound effect setting>

 Even when "ON" is set, the effect tones may not sound depending on Flash movies.

#### <Set Connection Timeout>

#### **Setting Connection Timeout**

It may take long to obtain some sites. You can set the time to wait before canceling obtaining. Obtaining is not canceled automatically when "Unlimited" is set.

ୀ 🚉 ଜ 🎖 -mode settings ➤ Set connection timeout ► Select a timeout.

#### Information

 Even when you have set "Unlimited", you may be disconnected owing to radio wave conditions.

#### <Host Selection>



## Changing a Host from i-mode (ISP Connection Communication)

\*Normally, you do not need to change this setting.

You can set the host (APN) to use for receiving services other than i-mode (DoCoMo).

If you change this setting, you will not be able to use i-mode.

- ्डिल् ► ॄ -mode settings ► Host selection
  - ► Highlight <Not recorded> and press (☑)( Edit )
  - ► Enter your Terminal Security Code.
  - If you select a stored host, the setting is changed to the selected one.
  - To delete the stored host, press [ar]( FUNC ), select "Delete", enter your Terminal Security Code, and then select "YES".

#### Do the following operations.

Item	Operation/Explanation	
Host name	Enter a host name.     You can enter up to 9 full-pitch/18 half-pitch characters.	
Host number	► Enter a host number. • You can enter up to 99 half-pitch alphanumeric characters.	
Host address	► Enter a host address. • You can enter up to 30 half-pitch alphanumeric characters.	
Host address 2	► Enter a host address 2.  • You can enter up to 30 half-pitch alphanumeric characters.	
Drogg (Fisial)		

#### Information

 If you set any other host than i-mode, "Pake-Houdai" or "Pake-Houdai Full" are not applied. <SSL Certificate>

#### **Operating SSL Certificates**

- - ► Highlight a certificate and press (FUNC
  - ▶ Do the following operations.

Item	Operation/Explanation	
Certificate info	The subject name, author, validity period, and serial number of the certificate are displayed.  • You can check the certificate also by pressing (Select) instead of (FUNC).	
Valid/Invalid	The selected item is invalidated; then "  " changes to "  " ".  • When you select an invalid certificate, it will be validated.  • If you set a certificate to invalid, you cannot display the sites with that SSL certificate.  • You cannot set "DoCoMo Cert 2" to "Invalid".	

#### **Certificates used for SSL communication**

#### Certificate

... Certificates issued by the authenticating company and stored in the FOMA phone at purchase.

#### DoCoMo Certificate

.... Certificates required for connecting to the FirstPass Center or FirstPass sites; they are stored on the UIM (green/white).

#### User Certificate

.... Certificates downloaded from the FirstPass Center by selecting "Client certificate" from the i-mode menu; they are stored on the UIM (green/white).

#### <Client Certificate>

#### **Setting FirstPass**

User certificates verify that you have subscribed to the FOMA service. Downloaded user certificates are stored on the UIM for the use on FirstPass sites. When you cannot display a FirstPass site because the user certificate on the UIM has expired or the required user certificate is not stored on the UIM, you can request the issue and download the user certificate from the FirstPass Center.

- You can request and download user certificates from the FirstPass Center.
- This function is not available with the blue UIM.
- The display and operating method displayed in the FirstPass Center site are subject to change.
- To show FirstPass sites, you can use Full Browser as well.
- You cannot send/receive mail or receive Messages R/F while connected to the FirstPass Center.
- Set the date and time using "Set time" beforehand to connect to the FirstPass Center.
- This function is not available overseas.

#### **Client Authentication**

- With the FOMA phone, server authentication and client authentication are performed for safer data exchange. The site and your FOMA phone exchange certificates, check the other party's certificate and verify each other for safer communication service. By getting client authentication, you can enjoy more secure communication services.
- Client authentication is available via the Internet communication from the FOMA phone or via the Internet communication with the FOMA phone connected to a personal computer. To use the personal computer for the client authentication, you need to install the FirstPass PC software from the provided CD-ROM. For details, refer to "FirstPassManual (PDF format)" in the "FirstPassPCsoft" folder on the CD-ROM. Adobe® Reader® (version 6.0 or higher is recommended) is required to see "FirstPassManual (PDF format)". If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it. For details such as how to use it, refer to "Adobe Reader Help".

#### **Access FirstPass Center**

You can perform user certificate operations on the site of the FirstPass Center site.

● Operate certificate Client certificate English



Site display for the FirstPass Center

#### Information

- Before using the FirstPass Center, select "The usage regulation (Japanese only)" and carefully read the regulation.
- You are not charged a packet communication fee for connecting to the FirstPass Center.

#### Request Issue of User Certificate for Download

You need to request the issue of the user certificate before you download it. When requesting the issue of your user certificate is completed, download the user certificate. After the downloading is completed, it is saved on the UIM and the FirstPass sites will be displayable.

## Site display for the FirstPass Center Request your certificate Continue

- For an update, the message "Updating user certificate" is displayed.
- When you have already requested the issue of the user certificate, select "Download" from the site display for the FirstPass Center, go to step 3.



#### Denter your PIN2 code.

- Enter your PIN2 code within 60 seconds. When the code is not entered within 60 seconds, the connection is cut off as an error entry.
- See page 121 for PIN2 code.

## FirstPass Requesting a certificate is completed. Download the certificate Download/Menu

#### Download Continue

 If you do not download the user certificate immediately, select "Menu". From the confirmation display asking whether to close the SSL page, select "YES" to return to the site display for the FirstPass Center.

#### Information

 Before downloading a new or an updated certificate, be sure to request the user certificate to be issued. User certificates cannot be downloaded until the request for issue has been made.

#### **Access Sites with User Certificate**

You can connect to FirstPass sites with your user certificate.

■ Bring up a FirstPass site Select an item YES

#### Enter your PIN2 code.

- Enter your PIN2 code within 60 seconds. When the code is not entered within 60 seconds, the connection is cut off as an error entry.
- See page 121 for PIN2 code.

#### Information

- If you try to connect to the FirstPass site without the user certificate or when its available period is expired, the confirmation display appears asking whether to continue connecting to the site. Select "NO" to return to the previous page. Download or update the user certificate from the FirstPass Center site and then access the site again.
- The packet communication fee for accessing the FirstPass site is included in Pake-Houdai or Pake-Houdai Full.

#### **Request Revocation of User Certificate**

You can revoke the downloaded user certificate.

- Site display of the FirstPass Center ➤ Other settings
  - ► Revoke your certificate ➤ YES
  - ► Enter your PIN2 code.
  - Enter your PIN2 code within 60 seconds. When the code is not entered within 60 seconds, the connection is cut off as an error entry.
  - See page 121 for PIN2 code.
- Continue ➤ Continue ➤ Continue

FirstPass

Are you sure you want to revoke your certificate?
(You can't cancel revoca tion process after start ed.)

\*\*COLUMN TO THE TABLE OF THE TA

#### Information

- To use FirstPass after revoking a certificate, you need to apply again for your user certificate to be issued and then download it.
- See page 173 for how to view the download user certificate.

#### <Certificate Host>

#### Changing a CA Center

\*Normally, you do not need to change this setting.

You can set the host for downloading the user certificate.

- Operate certificate Certificate host

  Highlight <Not recorded> and press ( Edit ).
  - If you select a stored host, the setting is changed to that host.
  - To delete the stored host, press [ac] (FUNC), select "Delete", enter your Terminal Security Code, and then select "YES".

## Enter your Terminal Security Code Do the following operations.

Item	Operation/Explanation	
Default URL	► Enter a default URL.  • You can enter up to 100 half-pitch alphanumeric characters.	
Host address	► Enter a host address. • You can enter up to 99 half-pitch alphanumeric characters.	



#### ■ Before Using FirstPass

- FirstPass is DoCoMo's electronic authentication service. By using FirstPass, client authentication is enabled, whereby the site and your FOMA phone exchange certificates, check the other party's certificate and perform mutual authentication.
- When requesting issue of a user certificate, carefully read "The usage regulation (Japanese only)" on the display, agree to this, and then make the request.
- You need to enter the PIN2 code to use the user certificate. Once you have entered your PIN2 code, all subsequent operations will be deemed to be done by you, so be careful not to let anyone else use your UIM or PIN2 code.
- If your UIM is lost or stolen, "DoCoMo Information Center" on the back page of this manual can revoke your user certificate.
- DoCoMo bears no obligation or responsibility with regard to the sites and information provided by FirstPass sites. Please solve the problem between you and FirstPass sites.
- DoCoMo and the CA do not guarantee security when you use FirstPass and SSL, so you should use them on your own judgment and responsibility.

#### What is i-motion?

i-motion movies are composed of video, sound and music, and you can play them back obtaining from i-motion compatible sites into your FOMA phone. You can set the i-motion movie for a ring tone. Two types of i-motion movies are available as shown below. The type of the obtained i-motion movie differs depending on the site or file. You can save up to 10 Mbytes per i-motion movie.

Categories		
Туре	Playback type	Description
Standard (normal) type	Plays back after obtaining	Plays back after obtaining all the data of an i-motion movie.
(can be saved)	Plays back while obtaining	Plays back while obtaining an i-motion movie. After obtaining, you can play it back in the same way as "Plays back after obtaining".
Streaming type (cannot be saved)	Plays back while obtaining	Plays back while obtaining an i-motion movie. The data is deleted after playback, so you cannot play it back again or save it to the FOMA phone.

#### <Obtain i-motion Movie>

#### **Obtaining i-motion Movies from Sites**

#### Play Back an i-motion Movie Obtained from a Site

## Select an i-motion movie from an i-motion obtainable site Play

See page 281 for the operation during playback.

- If an i-motion movie can be played back during obtaining, it will be played back during obtaining.
- If " 

  motion auto-play" is set to "ON", the i-motion
  movie will be played back automatically after it is
  obtained.
- Select "Property" to display the i-motion information. (See page 282)
- See page 164 to save a screen memo.



Obtaining Completion display

#### Information

- Depending on the accessed site or an i-motion movie, you might not be able to obtain the data or play it back during obtaining, or play it back after obtaining.
   Also, you cannot obtain an i-motion movie in ASF format.
- See page 281 for the file formats of playable i-motion movies.
- Even when you stop playing back the data of standard (normal) type while obtaining, obtaining still continues.
- Even if " motion auto-play" is set to "ON", the data is not automatically played back after obtaining when it is played back while obtaining.
- For an i-motion movie that has restrictions on the number of playbacks, playback period, or playback deadline, "①" is displayed at the head of the title. An i-motion movie with the playback period restricted cannot be played back before or after the restriction period. If you leave the FOMA phone with the battery pack removed for a long time, the date/time information in the FOMA phone might be reset. In that case, you cannot play back the i-motion movie that has restrictions on the playback period and playback deadline. See " a motion info" for checking the playback restrictions.
- " & motion info" of an i-motion movie and deadline information on the display that notifies you of a playback deadline are shown by date/time with "Summer time" set to "OFF".

#### Information

 Depending on the line speed, line state, or radio wave conditions, the playback during obtaining might be suspended or the images might be distorted. You can repeatedly play back the standard (normal) type of i-motion movies after obtaining, but cannot play back the streaming type of i-motion movies.

#### Save an i-motion Movie

You can save the obtained i-motion movie to your FOMA phone and set it for a ring tone, the Stand-by display, and the Wake-up display. You can save up to 111.6 Mbytes of files in total sharing the memory space with other data files. (See page 462)

Obtaining Completion display Save YES
 Select a destination folder.

• See page 170 for when i-motion movies are stored to the maximum.

2 Select "YES" to execute "Set a motion".

Go to "Set a motion" on page 282.

#### When downloading i-motion movie is suspended

When you press \( \begin{align\*} \end{align\*} \) to suspend downloading or when downloading is suspended by an incoming call, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the Obtaining Completion display for a partially savable i-motion file. Select "Save pt." to save that file to any folder in "\( \frac{a}{2} \) motion" in "Data box". You can re-download the rest of the partially saved file from "Data box".

- The file name of the partially saved i-motion movie is "movie".
- When the playback period or playback deadline of the partially saved i-motion movie has passed, you cannot download the remaining segments of the file. You can delete the partially saved file when you try to download the file.

#### Information

- Depending on the i-motion movie, you might not be able to save the obtained data to the FOMA phone.
- Partially saved i-motion movies cannot be played back from Data Box.

< # motion Auto-play>

## **Setting Automatic Replay of i-motion Movies**

You can set whether to play back an i-motion movie automatically, for when you have obtained a standard (normal) type of i-motion movie from a site or have selected a screen memo which contains a standard (normal) type of i-motion movie.

1 ເຂົ້າແັ່⊳ ຄຼີ -mode settings ⊳ ຄຼີ motion auto-play ▶ON or OFF

#### Information

 Note that a streaming type of i-motion movie is played back automatically even if this function is set to "OFF".

#### What is i-Channel?

DoCoMo or IPs (Information Providers) distribute news, weather forecast and others as graphical information to i-Channel mobile phones. Information is periodically received and tickers flow on the Stand-by display for the latest information. You can press the i-Channel key to show the Channel List. (See page 179) In addition, by selecting a channel you want to see on the Channel List, you can obtain detailed information. Also, two types of channels are available, "Basic channel" and "Favorite channel", "Basic channel" is provided by DoCoMo and comes with the FOMA phone, so you can browse that channel as soon as you start using i-Channel. The packet communication fee that is charged for auto-updates of information distributed through "Basic channel" is not charged. "Favorite channel" is provided by IPs (Information Providers) other than DoCoMo, so you can register and use any channels you like. The packet communication fee that is charged for auto-updates of information distributed through "Favorite channel" is not included in the i-Channel service fee. However, for both "Basic channel" and "Favorite channel", you are charged the i-Channel service fee plus packet communication fee to browse detailed information from the Channel List, Also, the packet communication fee that is charged for auto-updates of information distributed through the Basic channel during international roaming is not included in the i-Channel service

- i-Channel is a pay service which is available on a subscription basis. (You need to subscribe to i-mode to apply for i-Channel.)
- For details on i-Channel, refer to the "Mobile Phone User's Guide [i-mode] FOMA version"
- The i-Channel service is provided in Japanese only.

#### Information

When the FOMA phone is turned off or if radio wave conditions are bad such as when it is out of the service area, you may not be able to receive information even if you have contracted to the i-Channel service. In that case, select the channel for unsigned subscribers that appears by pressing ; then you can now receive information, and tickers flow on the Stand-by display. If your FOMA phone remains in the default state, you may not be able to receive information. Press and then information is received and tickers flow on the Stand-by display.

- To receive i-Channel information overseas, you are charged a communication fee by channel (domestic talk-free service does not apply).
- After you cancel the contract for the i-Channel service, the ticker setting is automatically set to off.
- If you cancel the contract for the i-mode service before you cancel the contract for the i-Channel service, the ticker setting remains on.

# **Using i-Channel**

When "Ticker ON/OFF" is set to "ON", up to 10 ticker files for the latest information flow repeatedly on the Stand-by display. If you want to know more about the information, you can obtain the details from the Channel List.

🕇 Press 🔼.

The Channel List appears regardless of the "Ticker ON/OFF" setting.



Channel List

Select an item (link).



#### Information

 The ring tone does not sound and the vibrator does not work even when information comes in. In addition, the Call/Charging indicator does not light or flicker.

#### Information

Tickers are not displayed in the following cases:

When the information is automatically updated after that or when you press to receive the latest information, tickers automatically flow.

- ·When the UIM is replaced.
- ·When "Host selection" is changed.
- ·When "Reset i-Channel" is executed.
- ·When "Reset settings" is executed.
- ·When "Initialize" is executed.

However, the information might not be automatically updated when "Host selection" is changed. To receive the latest information, press (a) to display the Channel List.

- When "Host selection" is changed, the i-Channel connecting end is also changed. (In ordinary, you do not need to change the setting.)
- Depending on your usage state, you might receive information from i-Channel when you display the Channel List.

#### <Ticker ON/OFF>

# **Setting How Ticker is Displayed**

বু ্টা -Channel ➤ Do the following operations.

Item	Operation/Explanation
Channel list	You can display the Channel List. Go to step 2 on page 179.
Ticker ON/OFF	You can set whether to display tickers on the Stand-by display <b>ON or OFF</b>
Ticker font size set.	▶ Large, Standard or Small     • Press (☑)( Play ) to display tickers in the selected character size as a demo.
Ticker color set.	Select a pattern.     Press ⊠( Play ) to display tickers in the selected color as a demo.
Ticker scroll speed	You can set the ticker flowing speed.  ► Select a speed.  • Press (□)( ► Play ) to display tickers in the selected speed as a demo.

Item	Operation/Explanation
Reset i-Channel	You can initialize the ticker information, set "Ticker ON/OFF" to "ON", and "i-Channel ticker" of "Private window" to "OFF".  ▶ Enter your Terminal Security Code ▶ YES

 You can perform "Ticker ON/OFF", "Ticker scroll speed", and "Reset i-Channel" for each mode of 2in1. However, i-Channel information is initialized for all modes. Further, when 2in1 is deactivated, they become common to the settings in A Mode.

#### <Ticker ON/OFF>

• In Public Mode (Drive Mode), or during Lock All, tickers are not displayed.

#### <Reset i-Channel>

Tickers are not displayed after you execute "Reset i-Channel". When the
information is automatically updated after that or when you press to receive
the latest information, tickers automatically flow.

# Mail

What is i-mode Mail?	182	Setting Mail Settings	
Composing i-mode Mail/Deco-mail		Sorting Mail Automatically to Each Folder Auto-sort	210
Composing i-mode Mail to Send Compose Message	182	Creating Mail Group	212
Composing Deco-mail to Send	186	Setting Mail and Messages R/FMail Settings>	213
Composing Deco-mail by Using TemplateTemplate	189	Using Message Services	
Attaching Files	191	Receiving Messages R/F Automatically	
Using Photo-sending Photo-sending	192	Receive Message R/F>	215
Receiving and Operating i-mode Mail		Reading Received Messages R/F Display Message R/F>	216
Receiving i-mode Mail Automatically Mail Auto-receive	194	Using Emergency Alert "Area Mail"	
Receiving Selected i-mode Mail Receive Option>	195	What is Emergency Alert "Area Mail"?	218
Checking whether Center Holds i-mode Mail		Receiving Emergency Alert "Area Mail"	218
	195	Setting Emergency Alert "Area Mail" Area Mail Settings	219
Replying to Received i-mode Mail		Using Chat Mail	
Reply×Reply with Quote>	196	Using Chat Mail	219
Forwarding Received i-mode MailForward>	196	Creating Chat Group	223
When i-mode Mail with Files Attached/Pasted is Received	197	Using SMS	
Operating Mail Box		Composing SMS Messages to Send (Compose SMS)	224
Displaying Mail from Inbox/Outbox/Draft		Receiving SMS Messages Automatically Receive SMS	225
	198	Checking whether Center Holds SMS Messages	
How to See Inbox/Outbox/Draft List and Detailed Display	200	Check New SMS>	226
Managing Mail Messages	203	Setting SMSSMS Settings	226
Using Mail History		Using Web Mail	
Displaying Sent/Received Mail Record		Using Web Mail	227
Sent Address (Received Address)	209		

## What is i-mode Mail?

Once you subscribe to i-mode, you can exchange e-mails over the Internet as well as with other i-mode phones.

You can attach up to 10 files (JPEG, ToruCa, PDF, etc.) within 2 Mbytes in total besides mail text. The i-mode mail also supports Deco-mail, so you can change the character color, character size, and background color of mail text. Further, a variety of

Decomail-pictographs you can insert into text are pre-installed, so you can easily compose pleasant messages to send.

For details on the i-mode mail, refer to the "Mobile Phone User's Guide [i-mode]
 FOMA version".

 
## <Compose Message>

# Composing i-mode Mail to Send

You can compose and send i-mode mail messages.

You can save up to 1,000 sent i-mode mail messages including SMS messages to the Outbox.

See page 186 for composing Deco-mail.



# Select the address field Select an item.

Phonebook . . . . . . Call up a Phonebook entry and select a phone number or mail address.

Sent address . . . . . . Select a phone number or mail address and press

(Select).

Received address . . . Select a phone number or mail address and press

Mail group . . . . . . . Select a mail group.

Enter address . . . . . . Enter a mail address or phone number.

- You can enter up to 50 half-pitch characters.
- If the destination is an i-mode phone, you can send mail also by entering only the part preceding the "@" mark of a mail address.
- See page 184 for sending to multiple destination addresses.
- See page 184 for deleting an added address.

## Select the subject field Enter a subject.

• You can enter up to 100 full-pitch/200 half-pitch characters.

# ✓ Select the attachment field Select an item.

See page 191 for how to select an attachment.

## Select the text field Enter text.

- You can enter up to 5,000 full-pitch/10,000 half-pitch characters
- See page 184 for pasting a header or signature.
- You can select a Decomail-picture by pressing and holding a for at least one second.



Message Entry display

# Press (Send).

The animation display during transmission appears and the mail message is sent.

To cancel sending midway, press (a) (Cancel) or press and hold (CLR) (for at least one second). However, the mail message might be sent depending on the timing.

# **7** ok

#### Information

- Depending on the radio wave conditions, the characters might not be displayed correctly at the destination.
- If you send an i-mode mail message to other carrier's mobile phone (au/SoftBank/Tu-Ka) with a pictograph entered, the pictograph is automatically converted into a similar pictograph at the receiving end. Depending on the model or function of the receiving end's mobile phone, however, the pictograph might not be correctly displayed or be converted into a character or "=" when no corresponding pictograph is found.
- When the number of sent mail messages exceeds the FOMA phone's storage maximum, they will be overwritten from the oldest one. However, protected sent mail messages cannot be overwritten.
- You cannot compose an i-mode mail message when the number of sent mail
  messages in the Outbox has reached the maximum and those messages are all
  protected, or when 20 mail messages are saved to the Draft or the Draft is full.
   Release the protection for sent mail messages, or send/delete draft mail
  messages, and then operate again.
- When you select "Compose message" from the Function menu such as when
  entering a phone number, the mail address is entered as a destination address if
  the phone number and mail address are stored in a Phonebook entry. When
  multiple mail addresses are stored in the Phonebook entry, the first mail address
  is entered.
- If you try to send the mail whose address is a phone number headed by "184"/
  "186", the confirmation display appears asking whether to delete prefix numbers
  and send the mail.
- When a destination phone number or mail address is stored in the Phonebook, the name stored in the Phonebook is displayed in the address field.
- You cannot send mail to the addresses that include a comma (,).
- You can enter an address in the To, Cc and Bcc fields.

#### Information

- If the destination address has been stored in the Phonebook with a secret code, the secret code will be added automatically at sending. However, even if a secret code is stored in the Phonebook, the secret code will not be added and the mail will be sent as ordinary i-mode mail unless the address is a phone number or "bhone number@docomo.ne.io".
- If you store the secret code and send mail to a mail address other than that of DoCoMo mobile phones, you might not receive the error message for unknown address.
- The recipients might not be able to receive the full length of the subject depending on their phones.
- You can send up to 2,000 full-pitch characters in text to the i-mode phone of the mova service.
- Each line feed is counted as one full-pitch character, and a space is counted as one full-pitch or half-pitch character.
- The mail message you entered a Decomail-pictograph becomes a Deco-mail message.
- In B Mode of 2in1, you cannot compose i-mode mail.

## **Function Menu of the Message Composition Display**

Function menu	Operation/Explanation
Send	You can send the mail message. Go to step 7 on page 183.
Preview	Check the address, subject, text and attachments before sending.  ◆ You can send the mail message by pressing ☑( Send ).
Save	When composing or editing the mail, you can save it to the Draft.

Function menu	Operation/Explanation
Operate receiver (Add receiver)	You can add multiple addresses in the address field to send the same i-mode mail to multiple recipients simultaneously. You can send the same mail to up to five addresses at the same time.  Add receiver Select an item.
	Phonebook
	Call up a Phonebook entry and select a phone number or mail address.
	Sent address
	Select a phone number or mail address and press  (Select).
	Received address
	Select a phone number or mail address and press  (Select ).  Enter address
	Enter a mail address or phone number.
	To consecutively add addresses, select <not entered=""> and</not>
	repeat the above steps.
	Press (FUNC) and select "Delete receiver" to delete the selected mail address. Select "YES".
	Press [is/( FUIC ) and select "Change rcv. type" to change the type of mail. (See page 184)
	Select an entered mail address on the Mail Composition display to show the Address List.
	► [M](Finish)
Operate receiver (Delete receiver)	You can delete the selected address when there are multiple addresses.  Delete receiver YES
Operate receiver	► Change rcv. type Select a type of address.
(Change rcv. type)	To This is the direct destination address. "To" recipients
	are displayed at the receiving ends.*  Cc Specify to let parties know the mail contents in addition to the direct recipients. "Cc" recipients are displayed at the receiving ends.*
	Bcc Specify to hide the recipients from others. "Bcc" recipients are not displayed at the receiving ends.   They might not be displayed depending on the mobile

phone, device, or mail software of the receiving end.

Function menu	Operation/Explanation
Operate att. file (Activate camera)	You can shoot and attach an image or i-motion movie.  PRO   Not available  Activate camera Select a shooting mode.  See page 140 and page 143 for how to shoot.
Operate att. file (Attach file)	See page 191.
Operate att. file (Delete att. file)	See page 192.
Template (Load template)	You can read in a template and compose a Deco-mail message.  > Load template  • When the text has already been entered, the confirmation display appears asking whether to delete the text.  > Select a template.  The contents of the template are entered into the text.  • While selecting a template, press (Play) to check the contents of the template.  • See page 186 for composing Deco-mail.
Template (Save template)	You can save the Deco-mail you are composing as a template.  Save template YES  See page 170 when templates are stored to the maximum.  See page 189 for how to check the stored template.
Add header/sig.	You can paste a header/signature at the beginning or ending of the text of the i-mode mail message.  Add header or Add signature  You need to store the header/signature beforehand. (See page 214)
Information	

## <Operate receiver>

- You cannot add any addresses if the address field for "To", "Cc", and "Bcc" already contains five addresses in total or contains no addresses.
- You cannot send i-mode mail if the "To" field is blank.

#### <Template (Save template)>

• The subject of i-mode mail you are composing will be the title of the template. If no subject is entered, the title takes the name of "YYYY/MM/DD hh:mm".

(Y: year, M: month, D: date, h: hour, m: minute)

#### <Add header/sig.>

- You cannot paste a header/signature if the text, including the header/signature, would exceed 5,000 full-pitch or 10,000 half-pitch characters.
- If the decoration such as font color or character size is set for the top or end of text, the header or signature will be decorated as well.

# Function Menu of the Message Entry Display

Function menu	Operation/Explanation
Decorate mail	See page 187.
Template (Load template)	See page 184.
Template (Save template)	See page 184.
Full pitch/Half pitch	See page 369.
Сору	See page 372.
Cut	See page 372.
Paste	See page 372.
Undo	After entering or deleting characters, pasting data, or operating on a decoration, you can undo your most recent operation.  You can do it up to twice.  You can undo the operation also by pressing well undo.
Pictograph/ symbols (Pictograph)	See page 369.
Pictograph/ symbols (Symbols)	See page 369.
Pictograph/ symbols (Space)	See page 369.

Function menu	Operation/Explanation
Phrase/code/quote (Common phrases)	
Phrase/code/quote (Kuten code)	See page 369.
Phrase/code/quote (Input time)	See page 369.
Phrase/code/quote (Quote phonebook)	
Phrase/code/quote (Quote own data)	See page 370.
Phrase/code/quote (Bar code reader)	See page 149. PRO $\mu$ Not available
Char. input/dict. (Own dictionary)	See page 372.
Char. input/dict. (Learned words)	See page 373.
Char. input/dict. (Change input mode)	See page 370.
Char. input/dict. (Candid. disp. size)	See page 370.
Char. input/dict. (Predict)	See page 368.
Char. input/dict. (Candidate display)	See page 370.
Char. input/dict. (Character set time)	See page 370.
Char. input/dict. (2/NIKO-touch guide)	See page 370.

Function menu	Operation/Explanation
Help	See page 370.
JUMP	See page 370.
Preview	You can check the contents of the text before sending.

#### <Undo>


- Once you use "Undo" to return to the previous status, you cannot cancel this by using "Undo" again.
- If you close the Message Entry display, you cannot return to the previous status by using "Undo" when you re-open it. (However, after you have exited "Preview", you can return to the previous status by "Undo".)

# **Composing Deco-mail to Send**

When editing an i-mode mail message, you can change the size of the font and the color of the background as well as inserting images, thus composing your own original mail.

You can compose Deco-mail also using the templates (patterns). (See page 189)



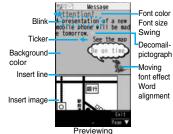

Perform the operations in step 1 through step 3 on page 182.

# Select the text field Decorate the text using Palette.

• See page 187 for how to use Palette.

#### To enter text after selecting decorations

Select one of decorations Enter text.

#### To set decorations after entering text

Enter text

Go to "Select area" on page 188.

- You can enter up to 5,000 full-pitch/10,000 half-pitch characters. (The number of characters you can enter decreases depending on the decoration.)
- Once you decorate the mail text, "PFV" appears.

# Press 🔘 (Se

The Message Composition display is displayed. Go to step 6 on page 183.

#### Information

- Even if you delete the decorated characters, only the decoration data remain and the number of characters you can enter might decrease. Clear the decoration and then delete the characters. If you delete the characters by pressing and holding CLR for at least one second, the characters as well as the decoration data are deleted.
- When you reply with quote to the received Deco-mail or you forward it, the decorations or inserted images are displayed at the replying destination or forwarding destination.
- If you use a template containing an image unable to attach to mail for sending, the image is deleted.
- When you send a Deco-mail message in excess of 10,000 bytes to a Deco-mail incompatible model or a Deco-mail compatible model other than the models described below.\*\*, it is received at the destination as a mail message with the URL for browsing Deco-mail described.
- However, depending on the incompatible model, only the mail text without the URL for browsing might be received.
- 3903 series, 904 series, 905 series, 903 series (except 903), 904 series (except 904), 904 series (except 904), 904 series
- Decorations might not be correctly displayed if you send or receive Deco-mail to and from devices such as personal computers.
- The movement of Ticker/Swing, blink and animation playback stop when a certain period has passed.

#### **About Decorations**

You can decorate the text of i-mode mail using Palette. You can set multiple decorations for one point.

- You cannot combine Word Alignment, Ticker, and Swing for one point.
- Lines are inserted by Line Insert with the color specified by Font Color.
- If Word Alignment, Ticker, or Swing is specified, the images and moving font effects are inserted with the specified state.
- You can enter Decomail-pictographs using "Insert image", and from "Pictograph" on the Function menu as well.

#### ■ How to use Palette

Press from the Message Entry display to display Palette.

 When the cursor is over the decorated character, the Palette appears with the icon for the set decoration depressed.

Highlight the depressed icon and press (a) (Select ); then you can change, complete or cancel the decoration. You can release the area selection also by pressing (CLR) while the area is selected.

Press (a) (Exit ) to close Palette. You can close Palette also by pressing (CLR) while you are operating on it.

#### Switch operations

You can switch between the operation of Palette and the operation of entering text, each time you press . You can move the cursor and enter text with Palette displayed.

• After you enter text, the text entry operation returns.

When you use Palette in succession, press ( and operate.



Palette operation

#### ■ How to operate Decoration

(Insert image/Font effect)	Operation/Explanation  You can convert characters to a mark and insert it into the text. The mark animates in various ways and conveys your feelings to the other party.  A Select a moving font effect Enter text.  To delete the moving font effect, move the cursor to the
	moving font effect and press CLR.
(Insert image/My picture)	You can insert the image stored in "My picture" into the text of mail.  ► Select a folder Select an image.  • You can select a Decomail-picture by pressing and holding for at least one second from the Message Entry display.  • To delete the image, move the cursor to the image and press CLR.
(Insert image/ Camera)	You can insert the image shot by the camera on the spot into the text of mail.  PRO   Not available  The image size of the camera is Sub-QCIF (128 x 96), QCIF (176 x 144), QVGA (240 x 320), CIF (352 x 288) or Stand-by display (240 x 427).  To delete the image, move the cursor to the image and press CIR.  See step 2 and step 3 on page 140 for how to shoot.
(Font color)	You can change the color of characters and lines to be entered.  Select a color Enter text.  In the font color changing mode, " " is displayed at the upper right of the display.  You can set other decorations in succession.  When you have selected the area, you do not need to enter text.
	You can change the background color of the mail text.  Select a color.

Function	Operation/Explanation
(Insert line)	You can insert a horizontal line into the mail text. The line feed is inserted automatically, and the line is inserted.  • To delete the line, move the cursor to the line and press  CLR.
(Undo)	You can return to the previous status of the set decoration. You can do it up to twice.  • You can undo the operation also by pressing (Undo).
(Decorate all reset)	You can release all the decorations.  YES  If you have inserted an image, the message "In-line image is deleted" is displayed.
(Select area)	You can set Font Color, Blink, Font Size, Word Alignment, Ticker and Swing over the selected text you have entered. You can also change the set decoration, add another decoration, or cancel Blink, Ticker or Swing.  Select a start point.  You can select all text by pressing (All ) and selecting "YES".  Select an end point.  Set, change, add or cancel each decoration.  """""""""""" is displayed at the upper right of the display during selecting decoration area.
	<set, add="" change,="" decoration="" or=""> Select an icon and set, change, or add decorations. • Select another icon in succession to change the multiple decorations or add decorations. • When Blink, Ticker, or Swing has been set, reselect each icon and complete decorations.</set,>
	<release blink,="" or="" swing="" ticker,=""> Select the icon for Blink, Ticker, or Swing Select the same icon again.</release>

Function	Operation/Explanation
(Font size)	You can change the size of characters to be entered.  ► Select a font size ► Enter text.  • In the font size changing mode, "♣ " or "♣ " is displayed at the upper right of the display.  • You can set other decorations in succession.  • When you have selected the area, you do not need to enter text.
(Select blink)	You can make characters to be entered blink.  Enter text.  The set characters are blinking.  In the blink setting mode, " A refer to displayed at the upper right of the display.  You can set other decorations in succession.
	(Reset blink)
(Select ticker)	You can make characters to be entered and images to be inserted flow (moving from right to left).  Enter text.  The line feed is inserted automatically and " " is displayed before and after the cursor.  In the ticker setting mode, " is displayed at the upper right of the display.  You can set other decorations in succession.
	The line feed is inserted automatically.
A (Select swing)	You can make characters to be entered and images to be inserted swing (moving to left and right back).  Enter text. The line feed is inserted automatically and "" is displayed before and after the cursor.  In the swing setting mode, "" is displayed at the upper right of the display.  You can set other decorations in succession.
	The line feed is inserted automatically.

Function	Operation/Explanation
(Word alignment)	You can change the position of characters to be entered and images to be inserted.
	Select a word alignment Enter text.
	The line feed is inserted automatically, and the alignment is
	set.
	<ul> <li>In the word alignment setting mode, "  is displayed at the upper right of the display.</li> </ul>
	<ul> <li>You can set other decorations in succession.</li> </ul>
	When you have selected the area, you do not need to enter text.

#### <Insert image>

- You can insert up to 20 types of images within 90 Kbytes in total. However, even if
  the inserted types of images are 20 or fewer, the confirmation display appears for
  some operations asking whether to re-edit the text because the maximum number
  of images has exceeded.
- If multiple same images are inserted, they are counted as a single type of file. If you copy/paste the image already inserted, that image is regarded as the same image and handled as a single type of file.

#### <Font color>

- If you move the cursor to the character for which another color is set, the setting changes to that color.
- The color for pictographs is also subjected to the specified font color. To restore the color to ordinary one, select "指定なし/Default".
- You cannot change the color of Decomail-pictographs.

#### <Background color>

• You cannot change the background color when editing the header or signature.

#### <Font size>

- If you move the cursor to the character for which a different font size is set, the font size is changed to that size of the character.
- You cannot change the size of the Decomail-pictograph.

#### <Select blink>

• You cannot make Decomail-pictographs blink.

#### <Template>

# **Composing Deco-mail by Using Template**


Template is form data for Deco-mail for which decorations such as font size and image insertion are already specified.

Other than those pre-installed in the FOMA phone, you can download templates from sites (see page 168). You can also save Deco-mail you sent, received or composed as a template (see page 184 and page 208).

#### You can edit the saved template using Palette.

 You can delete the pre-installed templates. You can re-download them from the "P-SQUARE" site (see page 170). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 38) are set to them.



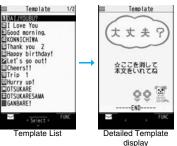

- Press ( ) to compose Deco-mail using the contents of the template. Go to step 2 on page 182.
- Even if you set "Header/signature" to automatically paste the header or signature, you cannot paste it.
- See page 169 when you select "Search by i-mode".

# **Function Menu of the Template List**

_	
Function menu	Operation/Explanation
Compose message	You can compose a Deco-mail message using the contents of the template.  Go to step 2 on page 182.
Sort	You can change the order of displayed templates.  Select an order.
Edit title	► Enter a title. • You can enter up to 15 full-pitch/30 half-pitch characters.
Info	You can display the file size, saved date and time of the template, and whether it contains images.
No. of messages	You can display the number of stored templates.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected)	▶ Delete selected▶ Put a check mark for templates to be deleted▶ (Finish)▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

# Function Menu of the Detailed Template Display

Function menu	Operation/Explanation		
Compose message	You can compose a Deco-mail message using the contents of the template.  Go to step 2 on page 182.		
Edit	You can edit the contents of the template and save it.  Edit the text ( ( Save ) YES or NO YES Overwrites and saves. NO Saves as a separate file.  See step 2 through step 3 on page 186 for how to edit the text.  See page 170 when the templates are stored to the maximum.		
Save insert image	You can save images inserted into the template or Deco-mail text, and set them as the Stand-by display and Wake-up display.  Select an image ► YES ► Select a destination folder. Go to step 3 on page 166.  See page 170 when images are stored to the maximum.		

## Information

## <Edit>

The title name when saved as a separate file takes "YYYY/MM/DD hh:mm"
 (Y: Year, M: Month, D: Date, h: hour, m: minute).

## <Save insert image>

• Decomail-pictographs are saved to the "お気に入り (Favorite)" folder in the "Decomail-pictograph" folder.

## <Attachments>

# **Attaching Files**

You can send an i-mode mail message with files attached.

You can attach following files:

- · Still image · Moving image/i-motion movie
- · Melody · PDF file · ToruCa file · Phonebook entry · Schedule event · ToDo item
- · Bookmark (i-mode, Full Browser) · Word
- Excel
   PowerPoint
   SD other files

#### You can attach up to 10 files within 2 Mbytes in total.

- You cannot attach files that are prohibited from being attached to mail or output from the FOMA phone to other devices.
- Regardless of the "File restriction" setting, you can attach the still image or moving image/i-motion movie shot with your FOMA phone or the files received via infrared rays.
- When you attach a file, another attachment field appears on the Message Composition display.
- When the receiving end is not the model described below<sup>™</sup>, it receives only compatible files within the memory space of that model.
  - 3903 series, 904i series, 905i series, 703i series (except P703i $\mu$ ), 704i series (except P704i $\mu$ ), 705i series
- It might take a time to send the i-mode mail depending on the size of attached files.

# Message Composition display

- ► Select the attachment field
- **▶** Do the following operations.

Item	Operation/Explanation	
Picture	➤ Select a folder ➤ Select an image.  • Highlight an attached image and press ( Select ) to display the image.  Press ( LR ) to return to the former display.	
Melody	➤ Select a folder ➤ Select a melody.  • Highlight an attached melody and press ( Select ) to play back the melody.  Press any key to stop the playback.	

İtem	Operation/Explanation
item	Operation/Explanation
្ជិ motion	Select a folder ➤ Select an i-motion movie.     Highlight the attached i-motion movie and press     (Select) to play back the i-motion movie.     Press CLR during playback or stop the playback to return to the former display.
ToruCa	When the ToruCa file is a ToruCa file (details), it is attached as a ToruCa file (details).  ➤ Select a folder ➤ Select a ToruCa file.  • Highlight the attached ToruCa file and press ( Select ) to preview it. Press ( CLR ) to return to the former display.
PDF	➤ Select a folder ➤ Select a PDF file.  • Highlight an attached PDF file and press (Select) to display the PDF file.  Press (CLR) to return to the former display.
Phonebook	➤ Select a search method ➤ Select a Phonebook entry  ○ (   Select )  • When you specified a search method last time, the Phonebook entry is searched by that method.
Schedule	► Select a date ► Select a schedule event ► (Select)
ToDo	► Select a ToDo item ► (   Select )
Bookmark	▶i-mode or Full Browser▶Select a bookmark.
Document file	You can attach a file of Word, Excel, and PowerPoint. ▶ Select a folder ▶ Select a file.
Other	You can attach a file stored in "SD other files".  ▶ Select a folder ▶ Select a file.

Go to step 2 on page 182.

#### <Picture>

- The images are not sent as the attachments to i-mode phones of the mova service; they are in the form of URLs for browsing images and automatically attached with expiry dates and can be obtained by selecting URLs. The mail text that can be sent to an i-mode phone of the mova service is up to 184 full-pitch characters (369 bytes). (When the acceptable number of characters of the mova phone is "250 full-pitch characters")
  - When multiple files are attached, the files are deleted and just the mail text is sent.
- The i-mode phone of the mova service cannot receive GIF images.
- You can attach a Flash movie as well.
- The still image might not be received correctly or not be displayed or coarsely displayed depending on the model at the receiving end.

#### <Melodv>

- Melodies stored on the microSD memory card cannot be attached. Copy the melodies to the FOMA phone. (See page 299)
- If the receiving end is other than FOMA P705i μ/PROSOLID μ, the sent melody might not be played back correctly or the attachment might be deleted.
- You cannot receive the attached melody on the i-mode phone of the mova service.

#### < 8 motion>

- Some i-motion movies cannot be attached to mail or their file sizes may become larger or smaller.
- Moving images stored on the microSD memory card cannot be attached. Copy the moving images to the FOMA phone. (See page 299)
- Depending on the mobile phone of the receiving end, i-motion movies cannot be correctly received/displayed, might become coarse, or might be converted into consecutive still images. When sending moving images to other than the model described below\*, it is advisable to shoot them with the following settings: File size setting: Mail restrict'n (S)

#### Image quality: Normal

\*903i series, 904i series, 905i series, 703i series (except P703iμ), 704i series (except P704iμ), 705i series

#### <ToruCa>

• ToruCa files stored on the microSD memory card cannot be attached. Copy the ToruCa files to the FOMA phone. (See page 250)

#### **Delete Attached File**

You can delete an attached file you are selecting or all attached files.



- ➤ Operate att. file ➤ Delete att. file
- ▶ Delete this or Delete all ➤ YES
- To delete a single file, highlight the file to be deleted.

## <Photo-sending>

# **Using Photo-sending**

You can send photos (still images) to the other party during a voice call. The photo is sent as the attachments of i-mode mail, and the receiving end can view it during a call.

To send photos during a voice call, you need to store the phone number and mail address of the other party in the same Phonebook entry beforehand.

Depending on the model of other party's phone, the other party might not be able to view the photo during a call.

PRO u You cannot shoot /send still images.

#### Shoot and Send Photos

During a voice call, you can send photos (still images) you shoot on the spot.

During a voice call ►(\$\varphi\) Shoot/send photo ► Photo mode

The camera starts up.

Press ( Record ).

- The photo is shot.
- Press (a) from the Finder display to return to the "Talking" display.
- See page 145 for how to operate on the Finder display.



The photo is saved and sent.

- You can send it also by pressing (FUNC ) and selecting "Save & send".
- You can set "Set display" and "File restriction" by pressing (☐R)(☐FUNC ). (See page 142 and page 148)
- When multiple mail addresses are stored, select the mail address you send the mail message to.
- When you select "Quit", the photo is saved to the Draft as the image-attached mail

#### Information

• The image sizes of the camera are QCIF (176 x 144) and Sub-QCIF (128 x 96).

#### Select and Send Photos

You can send the saved photos (still images).

- During a voice call ► i ( FUNC ) ► Shoot/send photo ► My picture
- Select a folder Select a photo
  Select a mail address.

The photo is sent.

- You can select a photo (still image) of QCIF (176 x 144) and Sub-QCIF (128 x 96).
- When multiple mail addresses are stored, select the mail address you send the mail message to.

#### When you received a photo (still image)

When "Photo auto display" is set to "ON", the photo is automatically displayed. If you have received multiple photos during a voice call, you can press of to switch them

- You can display the received photo during a voice call by pressing (FUNC) and selecting "Display photo".
- You can also execute "Check new msg." during a voice call by pressing [ ] ( FUNC ). (See page 195)

#### Information

- Photo-sending is not available in the following cases:
- · When the phone number and mail address of the other party on the phone are not stored in the same Phonebook entry
- When the phone number and mail address of the other party on the phone are stored as secret data in the Phonebook
- · When a caller ID is not notified to the receiving end (User unset, PublicPhone, Unavailable etc.)
  - (However, you can send from the calling end.)
- When "Restrict dialing" is not set for the phone number of the other party on the phone during "Restrict dialing"
- When the number of sent mail messages in the Outbox has reached the maximum and those messages are all protected, or when 20 mail messages are saved to the Draft or the Draft is full (You cannot send.)
- When the Inbox is full of unread or protected mail (You cannot receive.)
- · During Call Waiting
- · In B Mode of 2in1
- You cannot send Flash movies by Photo-sending.
- You cannot send some photos (images) during a voice call.
- A photo sent/received during a voice call is saved to the Outbox or Inbox as a file attachment of the image mail (the subject is the phone number).

#### <Mail Auto-receive>

# **Receiving i-mode Mail Automatically**

When the FOMA phone is in the service area, you can receive i-mode mail, SMS messages and SMS reports automatically. (See page 195 for receiving i-mode mail after selecting it.)

When a mail message comes in, "⋈(white)" appears at the top of the display.

You can save up to 2,500 received i-mode mail messages including SMS messages.

When i-mode mail arrives, "∭(white)" blinks and the receiving message is displayed.

Received result

BluessageR

EllessageR

Reception Result

Reception Result display

When receiving is completed, the display shows the number of received i-mode mail messages and Messages R/F.

- You can display the Inbox List by selecting "Mail".
- To cancel receiving midway, select "Cancel" or press and hold CLR for at least one second while "Mail Receiving..." is displayed.
   However, the mail message might be received depending on the timing.
- If no keys are pressed for about 15 seconds, " [ ] " (see page 112) appears on the desktop and the former display returns. (The transit time varies depending on the setting for "Mail/Msg. ring time".)
   Press ( ), highlight " [ ] , and press ( ) (Select ) to display the Inbox List.
- See page 31 for when the FOMA phone is closed.

#### Information

- You can automatically receive up to 100 Kbytes of an i-mode mail message including attached files. You can manually obtain the attached files in excess of 100 Kbytes from the i-mode Center. (See page 197)
- When the total number or size of received messages stored in the FOMA phone has reached the maximum, the mail messages will be overwritten in the priority order of mail in the "Trash box" folder and older received mail. However, unread or protected mail is not overwritten.

#### Information

- When the total number of unread or protected mail messages in the Inbox has reached the maximum, no new mail can be received and " (black)" is displayed. To receive i-mode mail, delete received mail or read unread mail or release protection of mail until " (black)" clears, and then perform "Check new message".
- You can receive i-mode mail with melodies, still images, or other files attached.
   You can receive incompatible attached files but you cannot display them.
- When you receive mail from a device that can set To, Cc and Bcc, you can check whether the message was sent to you as To, Cc or Bcc.
- Mail Messages for you are held at the i-mode Center in the following cases:
  - · When the power is off
- · During a videophone call
- · During Self Mode
- · During infrared data exchange
- · During Omakase Lock · During iC communication
- · When you are out of the service area
- · While connecting to the FirstPass center
- $\cdot$  While copying to the microSD memory card
- · While connecting to the Data Storage Center
- · When the space of the Inbox is full with protected or unread messages
- When i-mode mail messages are held at the i-mode Center, "[[] (white)" appears, and when they are held to the maximum, "[[] (black)", appears.

# Display Newly Received i-mode Mail

- Reception Result display ➤ Mail
  ➤ Select an i-mode mail message to be displayed.
  - Press and hold of for at least one second from the detailed i-mode mail display to change the size of text characters. When you set to "Extra large" or "Large", the characters on the Folder List and the Inbox/Outbox/Draft List are displayed in large size as well.



#### Information

• Undisplayable characters are replaced by spaces, etc.

- When the number of characters in the text of received i-mode mail exceeds the
  maximum, "/" or "//" is inserted at the end of the text and the excess part is deleted
  automatically.
- The still image automatically displayed at opening might not be correctly displayed. When the image is larger than the screen size, it is displayed shrunk with a proportional ratio retained.
- Some decorations inserted into the decorated mail (HTML mail) sent from a personal computer might not be displayed correctly.

### <Receive Option>

# **Receiving Selected i-mode Mail**

You can check the titles of i-mode mail messages held at the i-mode Center and select them to receive, or delete them at the Center before receiving.

To use this function, set "Receive option setting" to "ON" beforehand. When "Receive option setting" is set to "ON", you cannot receive i-mode mail messages automatically. When a mail message comes in the i-mode Center, " " is displayed.

# **Receive Option Setting**

You can set whether to select and receive necessary i-mode mail only.

Mail settings Receive option setting Non or OFF

## **Select and Receive Mail Messages**

- Paceive option Departs following the procedure described in "Mobile Phone User's Guide [i-mode] FOMA version".
  - When "Receive option setting" is set to "OFF", the display to the effect that it
    will be <u>set</u> to "ON" appears.
  - Press ( )(Select ) to set "Receive option setting".
  - You can bring up the Receive Option display also by (in) 8 Menu ●メニュー/検索 (Menu/Search) ●メール選択受信 (Receive Option).

#### Information

- Even when Receive Option Setting is set to "ON", you will still receive all mail messages if you execute "Check new message". If you do not want to receive all mail messages, remove a check mark from "Mail". (See page 214)
- When you bring up the Receive Option display, the "" icon goes off. Also, the "" icon goes off if you turn the power off or bring up the mail display.
- You cannot select SMS messages for receiving.

## <Check New Message>

# **Checking whether Center Holds i-mode Mail**

i-mode mail messages and Messages R/F arriving at the i-mode Center are automatically sent to your FOMA phone. However, the messages will be held at the i-mode Center if your FOMA phone cannot receive mail because it is turned off or out of the service area, or when Receive Option Setting is set to "ON".

When "
(white)" is displayed, receive mail by checking the i-mode

Center. See "Receive option" when "" is displayed.

" (white)" and " (white)' (white)" will blink, the message "Checking..." will be displayed, and the i-mode mail and Messages R/F will be delivered.

On the results of checking, the numbers of the received i-mode mail and Messages R/F are shown.

To cancel receiving midway, press and hold CLR for at least one second.
 However, the mail message might be received depending on the timing.

#### Information

When icons such as " (black)", " (black)/ (black)" or " (black)" are displayed, the FOMA phone cannot receive any more i-mode mail or Messages R/F. Delete unnecessary mail and messages, or read unread mail and messages, or release protection. (Read and unprotected mail and messages are overwritten automatically from the oldest one.)

● Even when i-mode mail messages are held at the i-mode Center, the "\(\exists \) (white)" icon to that effect, or the " (black)" icon telling that messages are held to the maximum at the i-mode Center might not appear.

(This happens if mail arrives at the Center when, for instance, your FOMA phone is off.)

- You can select items to be checked by "Set check new message".
- You cannot use this function to receive SMS messages. Use "Check new SMS" to receive them.

<Reply> <Reply with Quote>

# Replying to Received i-mode Mail

You can reply to the sender. With "Reply with quote", you can quote the original text in your received i-mode mail and reply to it. You cannot use "Reply with quote" for SMS messages.

Inbox List/Detailed Received Mail display (FUNC)



- ► Reply/forward ➤ Reply or Reply with quote
- You can reply also by pressing (☐)( Reply ).
- If other recipients of the simultaneous mail are found, you can choose whether to reply to the sender only or to all addresses. Select "To sender" or "To all".
- Just one quotation mark (see page 215) is added to the beginning of the text in the i-mode mail to be replied with quote.
- Enter a subject and text and send.

When you have selected i-mode mail, go to step 3 on page 182. When you have selected an SMS message, go to step 3 on page 224. After you send mail, " a " changes to " ".

### Information

- For the sender's address that cannot be replied to (such as when the mail address exceeds 50 half-pitch characters), " [ " is displayed.
- "Re:" is prefixed to the subject of the mail message to be replied or replied with a quotation. When the subject exceeds 100 full-pitch characters, the excess part is deleted. (When "Re:" has already been prefixed, it changes to "Re2:" and will be counted up to "Re99:".)

#### Information

- Even if the i-mode mail text contains pasted data, you cannot quote it in your reply. Also, you cannot quote it when using the DoCoMo keitai datalink or infrared data exchange function. See page 201 for pasted data.
- If the text of Deco-mail contains images that are prohibited from being attached to mail or being output from the FOMA phone to other devices, such images will be deleted when you reply to it.

#### <Forward>

# Forwarding Received i-mode Mail

You can forward the i-mode mail or SMS messages to others.

- Inbox List/Detailed Received Mail display ► ( Func ) ► Reply/forward ► Forward
  - You can forward also by pressing [MEN] (Forward) from the Inbox List.
- Enter an address and send the mail.

When you have selected an i-mode mail message, go to step 2 on page 182. When you have selected an SMS message, go to step 2 on page 224. After you send mail. " a" changes to " ".

#### Information

- "Fw:" is prefixed to the subject of the mail message to be forwarded. When the subject exceeds 100 full-pitch characters, the excess part is deleted. (When "Fw:" has already been prefixed, it changes to "Fw2:" and will be counted up to "Fw99:".)
- When you forward an i-mode mail message with a file you have not obtained yet, the file information is deleted.
- Even if the i-mode mail text contains pasted data, you cannot quote it in your forwarding mail. Also, you cannot quote it when using the DoCoMo keitai datalink or infrared data exchange function. See page 201 for pasted data.
- When a mail message is forwarded and a ToruCa file (details) that contains data whose output from the FOMA phone is prohibited is attached to the mail message, the attached file returns to a ToruCa file before obtaining details.

- When a mail message on the microSD memory card is forwarded, the attached file is deleted
- When you "Forward" a mail/SMS message received to Number B/Address B in Dual Mode of 2in1, the sent mail message is retained in the Outbox or Draft, even if you switch to A Mode.

# When i-mode Mail with Files Attached/ Pasted is Received

You can receive up to 2 Mbytes of the attached files on your FOMA phone. However, you receive only the attached file information for the files in excess of 100 Kbytes, so you need to manually obtain those attached files from the i-mode Center.

The FOMA phone supports following files:

- · Still image · Moving in
- · Moving image/i-motion movie
  - · ToruCa file

- · PDF file
- · PC movie
- · ToDo item
- Phonebook entry Schedule event
- · Bookmark (i-mode, Full Browser) · Word
- · Excel · PowerPoint

You cannot play back or display the files other than above. You can save them to any folder in "SD other files", or use the i-mode mail to forward them.

You can use "Attachment preference" to select the files to be received.

• When multiple data items are pasted, they might not be displayed.

## **Obtain Receive Option Attached Files**

You can obtain the receive option attached files held at the i-mode Center.

Detailed Received Mail display
Select an attached file which has
not been obtained.

After obtaining is completed, files are played back/ displayed.



Melody

#### Information

 You cannot obtain the attached files when the unused memory space in the Inbox is smaller than the files.

## Play Back/Display Attached or Pasted Files

You can play back or display the attached/pasted files already obtained.

# Detailed Sent Mail display/Detailed Received Mail display Select an attached file.

The file is played back or displayed.

- For a PC movie or document file, the confirmation display appears telling that you cannot play it back/display it. Play it back/display it after saving it to the microSD memory card.
- Document files are saved to the destination folder in "Document viewer".
- For the Phonebook entries, schedule events, ToDo items, bookmarks, and files not supported by the FOMA phone, the confirmation display appears asking whether to save them.

#### Information

- ullet When the sender's device is other than FOMA P705i  $\mu$ /PROSOLID  $\mu$ , the received melodies might not be played back correctly.
- When the first attached file is an obtained still image, that still image only is automatically displayed when the mail message is opened. The size of a still image displayed automatically is up to 5M (2592 x 1944) size.
- When the image size is larger than the screen, it is displayed shrunk.
- You cannot play back a melody in excess of 100 Kbytes.
- You cannot play back a Flash movie in excess of 100 Kbytes.
- You cannot display a ToruCa file in excess of 1 Kbyte and ToruCa file (details) in excess of 100 Kbytes.

#### Save Attached or Pasted Files

You can save the attached or pasted files that you have obtained. You can set some files for a ring tone, or an image on the Stand-by display, Wake-up display, or other displays.

- Detailed Sent Mail display/Detailed Received Mail display/Detailed Message R/F display
  - ► Highlight an attached file and press (\$\varphi\) (FUNC )
  - ➤ Operate file ➤ Save attached file ➤ YES
  - PC movies are saved to the destination folder in "microSD" folder of "PC Movie"
  - Document files are saved to the destination folder in "Document viewer"
  - The files not supported by the FOMA phone are saved to the destination folder in "SD other files".
  - Even if the files are supported by the FOMA phone, some of them cannot be saved to the FOMA phone depending on the file such as an invalid data file or whose size is too large. In that case, the confirmation display appears asking whether to save it to the microSD memory card. When you save it, it is saved to a destination folder in "SD other files".
  - The confirmation display might appear telling that a part of the file cannot be saved depending on the attached file.

## Select a destination location or folder.

For melodies, go to step 2 on page 167. For still images, go to step 3 on page 166.

For i-motion movies, go to step 2 on page 177.

- . Bookmarks are saved according to each information of i-mode or Full Browser.
- If the maximum number of files has already been saved to the microSD memory card or there is no usable memory space when you save SD other files. PC movies, or document files, the confirmation display appears asking whether to delete unnecessary files and to save new files. Select "YES" to list the files in Data Box, then select unnecessary files and delete them. See page 170 for when files other than SD other files. PC movies, or document files are stored to the maximum

#### Information

- You cannot save a melody in excess of 100 Kbytes to the FOMA phone.
- You cannot save a Flash movie in excess of 100Kbytes to the FOMA phone.
- You cannot save a ToruCa file in excess of 1 Kbyte and ToruCa file (details) in excess of 100 Kbytes to the FOMA phone.

#### <Inbox> <Outbox> <Draft>

# Displaying Mail from Inbox/Outbox/Draft

## **Display Mail from Inbox**

You can save up to 2,500 received i-mode mail messages including SMS messages.

You can save up to 30 Area Mail messages separately from i-mode mail messages and SMS messages.

You can check the received i-mode mail messages. SMS messages. and Area Mail messages.

# □ Inbox Select a folder.

See page 216 for displaying Messages R/F.



Inhox Folder List

Select a mail message.





Mail display

- Use ( to check other mail messages.
- When a melody is attached, it is played back automatically. (You can change this setting by "Auto melody play".)
- See page 109 for Feel \* Mail.

## **Display Mail from Outbox**


You can save up to 1,000 sent i-mode mail messages including SMS messages.

You can check the sent i-mode mail messages and SMS messages.

Outbox Select a folder.



Select a mail message.

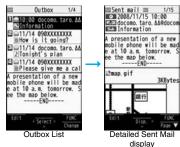

- Use other mail messages.

## **Display Mail from Draft**

You can edit and send i-mode mail messages and SMS messages in the Draft. You can save up to 20 i-mode mail messages including SMS messages.





Select a mail message.

When you have selected i-mode mail, go to step 2 on page 182. When you have selected an SMS message, go to step 2 on page 224.

#### Information

 When you select the i-αppli mail folder, the mail-linked i-αppli that supports the folder starts.

# How to See Inbox/Outbox/Draft List and Detailed Display

#### Mail menu

Icons might have the following marks:

 





#### ■ Inbox Folder List

#### **⊕**Folder status

"Naw" appears when unread messages are found, and "§" appears when Mail Security is activated.



Folder name

 

#### ■ Inbox List and detailed Received Mail display







Mail display

#### Mail status and type

For "Date+sender/receiver subject"

"appears when protection is set.

(pink)	Unread mail
	Read mail
<b>~</b>	Forwarded mail
Ð	Replied mail
Area Mail	
Type of the received mail (for detailed display only)	

#### Received date and time

The Inbox List shows the time for the mail received today, and shows the date for the mail received until yesterday.

The detailed display shows the date and time the mail was received. The Japanese date and time the mail was received from the Center is displayed.

OPhone number or mail address of the sender or of another recipient of simultaneous mail

From	Sender's mail address (for detailed display only)
Fm×□	Sender's mail address that cannot be replied to (for detailed display only)
⊠To ⊠Cc	Recipient's mail addresses of simultaneous mail (for detailed display only)
axt axt	Recipient's mail addresses of simultaneous mail that cannot be replied to (for detailed display only)

#### Subject

When "Mail list display" is set to "Date+sender/receiver subject", the subject is displayed up to 11 full-pitch/22 half-pitch characters. When set to "Date+subject", it is displayed up to 7 full-pitch/14 half-pitch characters, however, for a mail message with files attached, it is decreased by 1 full-pitch/2 half-pitch character/s as the icon is added at the top.

For SMS messages or Area Mail messages, the beginning of the text is displayed. ("SMS" or "Area Mail" is displayed on the detailed display.)

In Dual Mode of 2in1, " Fig." is displayed at the end of the subject or sender's address of SMS/i-mode mail messages received to Number B/Address B.

(blue)	SMS messages in the FOMA phone
	SMS messages on the UIM


#### Attached or pasted data

The detailed display shows the data volume as well.


<For Inbox List (Date+sender/receiver subject) and detailed Received Mail display>

" is added to each icon when you execute "Delete att. file" (for detailed display only).

Melody file	
Image file	
Inserted image file (for List only)	
i-motion movie file	
PC Movie file	
ToruCa file	
PDF file	
Document file	
Phonebook entry file	
Schedule event or ToDo item file	
Bookmark file	
Other files	

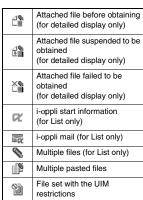

#### <For Inbox List (Date+subject) (Date+sender/receiver)>

 



File set with the UIM restrictions

#### @Feel \* Mail icon

See page 109 for Feel \* Mail.

 
#### Text of mail

#### Outbox Folder List

#### Folder status

🕻 appears when Mail Security is activated.





#### **⊘**Folder name

Outbox List and detailed Sent Mail display







Outbox List For "Date+subject"



etailed Sent M display

#### **♠**Mail status

" appears when protection is set.

pink)	Mail successfully sent	
≅	Mail failed to be sent	
Simultaneous mail successfully sent to all addresses		
(gray)	Simultaneous mail sent to some addresses	
(pink)	Simultaneous mail failed to be sent to all addresses	

#### Sent date and time

The Outbox List shows the time for the mail sent today, and shows the date for the mail sent until yesterday.

The detailed display shows the date and time the mail was sent. " " appears when the date/time is corrected.

#### Recipient's phone number or mail address

 
≅;oOK	<b>≅</b> c OK	₹cc OK	Mail address successfully sent (for detailed display only)
≊ <sub>fo</sub> X	<b>≅</b> c×	₹.c×	Mail address failed to be sent (for detailed display only)

#### Subject

When "Mail list display" is set to "Date+sender/receiver subject", the subject is displayed up to 11 full-pitch/22 half-pitch characters. When set to "Date+subject", it is displayed up to 7 full-pitch/14 half-pitch characters, however, for a mail message with files attached, it is decreased by 1 full-pitch/2 half-pitch character/s as the icon is added at the top.

For SMS messages, the beginning of the text is displayed. ("SMS" is displayed on the detailed display.)

(blue)	SMS messages in the FOMA phone
	SMS messages on the UIM



#### Attached data

The detailed display shows the data volume as well.

 
- <For Outbox List (Date+sender/receiver subject) and detailed Sent Mail display>
- "is added to each icon when you execute "Delete att. file" (for detailed display only).

7	Melody file
	Image file
100	Inserted image file (for List only)
Ħ	i-motion movie file
PC	PC Movie file
4	ToruCa file
	PDF file
	Document file

Γ	Ð,	Phonebook entry file
	** <b>%</b>	Schedule event or ToDo item file
	N_	Bookmark file
	□ <b>©</b> etg	Other files
	To.	i-αppli mail (for List only)
	0	Multiple files (for List only)
		File set with the UIM restrictions

#### <For Outbox List (Date+subject) (Date+sender/receiver)>

Attached file
i-oppli mail



## Text of mail

## ■ Draft List

## **●**Mail status





For "Date+sender/receiver subject"



For "Date+subject"

#### 2 Saved date and time

The Draft List shows the time for the mail saved today, and shows the date for the mail saved until yesterday. " appears when the date/time is corrected.

#### @Recipient's phone number or mail address

When the phone number or mail address is stored in the Phonebook, the name stored in the Phonebook is displayed.

#### Subject

When "Mail list display" is set to "Date+sender/receiver subject", the subject is displayed up to 11 full-pitch/22 half-pitch characters. When set to "Date+subject", it is displayed up to 7 full-pitch/14 half-pitch characters, however, for a mail message with files attached, it is decreased by 1 full-pitch/2 half-pitch character/s as the icon is added at the top.

For SMS messages, the beginning of the text is displayed.

(blue)	SMS messages
--------	--------------

#### Attached data

#### <For Date+sender/receiver subject>

1	Melody file
0	Image file
12	Inserted image file
Ħ	i-motion movie file
PC	PC Movie file
4	ToruCa file
	PDF file
	Document file

O.	Phonebook entry file
<b>**</b> **	Schedule event or ToDo item file
N. C.	Bookmark file
_1 <b>©</b> etq	Other files
0	Multiple files (for List only)
2	File set with the UIM restrictions

#### <For (Date+subject) (Date+sender/receiver)>

0	Attached file
	File set with the UIM restrictions

#### Text of mail

#### Information

- See "Mail list display" on page 213 to change a method to display the Inbox/ Outbox/Draft List.
- When "Name in phonebook" of "Mail list display" is checked, the name stored in the Phonebook is displayed as sender or recipient. However, when the sender's mail address is "phone number@docomo.ne.jp", the name is not displayed even when "phone number@docomo.ne.jp" is stored in the mail address field in a Phonebook entry. Store the phone number part only to display the name. When a sender's/recipient's phone number or mail address matches a Phonebook entry stored as secret data, the name is not displayed. It is displayed in Secret Mode or Secret Data Only.

Even when a sender's/recipient's phone number or mail address matches a Phonebook entry not stored as secret data, the name is not displayed in Secret Data Only. Switch to Secret Mode or release Secret Data Only to display the name.

 When "Message" of "Mail list display" is not checked, the text does not appear on the Inbox/Outbox/Draft List.

# **Managing Mail Messages**

#### Function Menu of the Inbox Folder List/Outbox Folder List

Function menu	Operation/Explanation
Operate folder (Add folder)	You can add a new folder. You can add up to 22 folders to each of "Inbox" and "Outbox".  Add folder Enter a folder name.  You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder (Edit folder name)	You can edit the names of the added folders only.  Edit folder name Edit the folder name.  You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder (Sort folder)	You can sort folders. You can sort the added folders, Message R/Message F folders, and i-αppli mail folders.  ▶ Sort folder ➤ Use  to sort the order of the folders  ▶ (Select)

Function menu	Operation/Explanation
Operate folder (Delete folder)	All the mail messages including secret mail in the folder will be deleted as well.  ▶ Delete folder ▶ Enter your Terminal Security Code ▶ YES
Open folder	You can display the mail messages in the i-αppli mail folder without running mail-linked i-αppli.
Read all [Inbox Folder only]	You can change unread mail in the folder to read mail.  > YES
Sort (Auto-sort)	See page 210.
Sort (Re-sort)	You can resort mail messages following the sorting conditions specified by "Auto-sort".  Re-sort YES  When the folder applied with Mail security (see page 204) is found, you need to enter your Terminal Security Code.
Mail security	You can set the folder to open only when you enter your Terminal Security Code.  ▶ Enter your Terminal Security Code ▶ YES  ● To release it, perform the same operation.
Ir/ 10 transmission (Send all Ir data)	See page 310.
Ir/ 1 transmission (All 1 transmission)	See page 311.
No. of messages	You can display the number of stored received mail messages, Messages R/F, and sent mail messages.
Delete (DEL all read mails) [Inbox Folder only]	You can delete all the read mail messages including secret mail in all Inbox folders. All the read SMS messages on the UIM are deleted as well.  DEL all read mails YES
Delete (DEL all recv. mails) [Inbox Folder only]	You can delete all the mail messages including secret mail in all Inbox folders. All the received SMS messages on the UIM are deleted as well.  DEL all recv. mails Enter your Terminal Security Code  YES

Function menu	Operation/Explanation
DEL all sent mails	You can delete all the mail messages including secret mail in
[Outbox Folder only]	all Outbox folders.
	All sent SMS messages on the UIM are deleted as well.
	► Enter your Terminal Security Code ➤ YES

#### <Operate folder (Delete folder)>

You cannot delete an i-αppli mail folder if corresponding mail-linked i-αppli exists.
 If the software program does not exist, you can delete the i-αppli mail folder, but
 this will delete both folders created in the Outbox Folder List and Inbox Folder
 List.

#### <Sort (Re-sort)>

- You cannot re-sort the mail messages in the "Chat" folder and "Trash box" folder.
- Mail messages which are not applied with "Auto-sort" are sorted into the "Inbox" folder.

#### <Mail security>

• You can neither delete the Mail-Security-activated folder nor edit its name.

## Function Menu of the Inbox List/Outbox List/Draft List

Function menu	Operation/Explanation
Reply/forward (Reply) [Inbox only]	See page 196.
Reply/forward (Reply with quote) [Inbox only]	See page 196.
Reply/forward (Forward) [Inbox only]	See page 196.

Function menu	Operation/Explanation
Edit [Outbox only]	You can re-edit the sent mail message and send it again. When you have selected an i-mode mail message, go to step 2 on page 182. When you have selected an SMS message, go to step 2 on page 224.
Protect (Protect ON/OFF) [Inbox/Outbox]	You can protect the mail message so that it is not overwritten and deleted. You can protect all the received and sent messages. (2,500 received messages, 1,000 sent messages) The protected one is indicated by " Protect ON/OFF  • To release protection, perform the same operation. • You can switch between protected and unprotected also by pressing Tom the detailed Received Mail display or detailed Sent Mail display.
Protect (ProtectSLCT. ON/ OFF) [Inbox/Outbox]	ProtectSLCT. ON/OFF Put/Remove a check mark for mail messages to be protected/unprotected ☑(Finish)  • A check mark is placed to the mail already protected.
Move/copy (Move) [Inbox/Outbox]	► Move ► Select a destination folder ► Put a check mark for mail messages to be moved ► ☑ (Finish) ► YES
Move/copy (Move to trash) [Inbox only]	You can move mail messages to the "Trash box" folder. The mail messages moved to the "Trash box" folder are preferentially overwritten (deleted).  ▶ Move to trash ▶ Put a check mark for mail messages to be moved to the trash box ▶ (  Finish   ▶ YES
Move/copy (UIM operation) [Inbox/Outbox]	You can copy or move the mail message to the UIM or FOMA phone. (See page 361)
Move/copy (Copy to microSD)	See page 296.

Function menu	Operation/Explanation
Move/copy (Store in Center)	You can save mail messages stored in FOMA phone to the Data Storage Center. Data Security Service is a pay service that is available on a subscription basis.  Store in Center Enter your Terminal Security Code  Put a check mark for mail messages to be saved  Description YES  You can select up to 10 mail messages.  You do not need to put a check mark for the mail messages on the detailed Received Mail display and detailed Sent Mail display.
Search/sort (Search sender/ Search receiver) [Inbox/Outbox]	You can retrieve mail messages with a mail address or phone number of a sender or recipient.  "Search sender" for received mail and "Search receiver" for sent mail are displayed respectively.  Search mail—Search sender or Search receiver  Select an item.  Phonebook  Call up a Phonebook entry and select a phone number or mail address.  Received address  Select a phone number or mail address and press  (a) (select).  Sent address  Select a phone number or mail address and press  (b) (select).  Enter address  The mail address or phone number.  You can enter up to 50 half-pitch characters.
Search/sort (Search subject) [Inbox/Outbox]	You can retrieve mail messages with a subject.  ► Search mail ► Search subject ► Enter a subject.  • You can enter up to 100 full-pitch/200 half-pitch characters.
Search/sort (Search subject+msg) [Inbox/Outbox]	You can retrieve mail messages with a subject or text.  Search mail Search subject+msg  Enter a part of a subject or text.  You can enter up to 100 full-pitch/200 half-pitch characters.

Function menu	Operation/Explanation
Search/sort (Sort) [Inbox/Outbox]	You can change the order of displayed mail messages.  ➤ Sort ➤ Select an order.
Search/sort (Filter) [Inbox/Outbox]	You can display the mail messages only that satisfy the condition.  ► Filter ► Select a type.
Search/sort (Display all) [Inbox/Outbox]	You can re-display all mail messages in "By date † " order after using Search Mail, or the Sort or Filter function.  Display all
Mail history [Inbox/Outbox]	You can display the history of sent/received mail from the sender or to the recipient being selected or displayed. Up to 1,000 histories are displayed in the chronological order from the most recent one.  Select a sender's or destination address.  The target sent/received mail histories are displayed.  Sent mail  Select a history; then you can bring up the detailed Received Mail display or detailed Sent Mail display. Press CLR to return to the former display.  You can display also by pressing  on the detailed Received Mail display also by pressing  on the detailed Received Mail display or detailed Sent Mail display.
Color label [Inbox/Outbox]	You can color the characters on the Inbox List and Outbox List for classifying mail. Select "Default" to set ordinary character color.  Select a color.
List setting	You can select the item to be displayed on the List. You can also switch between the name stored in the Phonebook and the mail address/phone number for the display in the sender's/ destination address field.  You can set to list the mail messages by subject depending on the setting of "Mail list display".  Select an item to be displayed.

Function menu	Operation/Explanation
Ir/ C transmission (Send Ir data)	See page 309.
Ir/ transmission (Send all Ir data) [Draft only]	See page 310.
Ir/ 10 transmission (10 transmission)	See page 311.
transmission (All transmission) [Draft only]	See page 311.
No. of messages	You can display the number of stored received mail messages, sent mail messages and draft mail messages.
Delete (Delete this)	▶ Delete this▶ YES
Delete (Delete selected)	▶ Delete selected ▶ Put a check mark for mail messages to be deleted ▶ (Finish) ▶ YES
Delete (Delete read mails) [Inbox only]	You can delete all the read mail messages in the folder.  ▶ Delete read mails ▶ YES
Delete (Delete all SMS-R) [Inbox only]	You can delete all the SMS reports. While displaying SMS reports using the Search Mail function or Filter function, only the displayed SMS reports are deleted.  ▶ Delete all SMS-R▶ Enter your Terminal Security Code ▶ YES
Delete (DEL all frm folder) [Inbox/Outbox]	You can delete all mail messages in the folder.  ▶ DEL all frm folder▶ Enter your Terminal Security Code ▶ YES
Delete (Delete all) [Draft only]	You can delete all the mail messages in Draft.  ▶ Delete all ▶ Enter your Terminal Security Code ➤ YES

#### <Edit>

- To use "Mail group" for destination addresses, delete all the entered addresses, press (M)(Finish) to complete the deletion, and then re-select the address field.
- <Protect>
- You cannot protect mail messages in the "Trash box" folder.
- If you protect all the sent messages which are stored to the maximum, you can no longer compose i-mode mail messages.

#### <Move/copy (Move to trash)>

• If you move unread mail to the Trash box, it changes to read mail.

### <Move/copy (Store in Center)>

- You cannot save the SMS messages stored on the UIM.
- You cannot save the files attached to mail.
- You cannot use Data Security Service when you are out of the service area.
- When you have not signed up for Data Security Service, the message to that effect appears.
- You can download the mail messages saved to the Data Security Center from its site to your FOMA phone. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

#### <Search/sort>

 Even if you set "No title" for "Search subject" of "Search mail", you cannot search for the i-mode mail whose subject is not entered and displayed as "No title".

#### <Color label>

- Color Label applied to the mail messages is released when they are copied to the microSD memory card, copied/moved to the UIM, copied/moved from the UIM or sent via infrared rays or iC transmission.
- Color Label applied to the SMS messages on the UIM is released when the UIM is dismounted and then mounted.

## Function Menu of the Detailed Received Mail Display/ Detailed Sent Mail Display

Function menu		Operation/Explanation
Reply/forward (Reply) [Received Mail only]	See page 196.	

Function menu	Operation/Explanation	
Reply/forward (Reply with quote) [Received Mail only]	See page 196.	
Reply/forward (Forward) [Received Mail only]	See page 196.	
Edit [Sent Mail only]	See page 205.	
Resend [Sent Mail only]	You can re-send the sent mail message.  YES	
Protect ON/OFF	See page 205.	
Move/copy (Copy)	➤ Copy ➤ Select an item to be copied.  See page 372 for how to copy.  When the addresses of the sender and another recipient of simultaneous mail are found or the multiple destination addresses are found, select a mail address or phone number to be copied.	
Move/copy (Move)	► Move ► Select a destination folder.	
Move/copy (Move to trash) [Received Mail only]	You can move the mail to the "Trash box" folder. The mail messages moved to the "Trash box" folder are preferentially overwritten (deleted).  Move to trash YES	
Move/copy (UIM operation)	You can copy or move the mail to the UIM or FOMA phone. (See page 361)	
Move/copy (Copy to microSD)	See page 296.	
Move/copy (Store in Center)	See page 205.	
Operate file (Save attached file)	See page 198.	
Operate file (Save insert image	See page 190.	

Function menu	Operation/Explanation	
Operate file (Save D-pictograph) [Received Mail only]	You can save Decomail-pictographs in the mail text at once. You can save up to 20 of them. ▶ Save D-pictograph ▶ YES  • See page 170 for when the Decomail-pictographs are stored to the maximum.  • See page 273 for how to check the stored Decomail-pictographs.	
Operate file (Save as template)	You can save the sent/received Deco-mail as a template.  Save as template YES  See page 170 for when the templates are stored to the maximum.  See page 189 for how to check the stored template.	
Operate file (Property)	You can display the file name and file size of the image inserted into the text.  Property Select an image.	
Operate file (Delete att. file)	▶ Delete att. file ▶ YES	
Store (Store address)	See page 84.	
Store (Add to phonebook)	See page 84.	
Store (Auto-sort)	You can store a sender or subject as a sort condition. (See page 210)	
Store (Add desktop icon)	See page 114.	
Mail history	See page 206.	
Color label	See page 206.	
Display (Name/address)	You can display the sender's/destination address by the name stored in the Phonebook or by the mail address/phone number.  Name/address  You can switch also by pressing 5.	

Function menu	Operation/Explanation	
Display (Scroll)	See page 213.	
Display (Character size)	See page 116.	
Display SMS report [Sent Mail only]	t You can check the result of the SMS message you sent, or the date and time it arrived at the destination. To receive the SMS report, set "SMS report request" to "ON".	
Ir/ transmission (Send Ir data)	See page 309.	
Ir/ ( transmission ( transmission)	See page 311.	
Delete	►YES • You can delete the mail message also by pressing O.	
Information		

#### <Resend>

If you re-send a failed-to-send mail message, it is saved as the sent mail message. If you re-send the failed-to-send simultaneous message to all addresses, it is saved as the sent mail message.

#### <Sent Address> <Received Address>

# **Displaying Sent/Received Mail Record**

Sent and received i-mode mail messages and SMS messages are stored in Sent Address and Received Address, up to 30 messages each. You can check the List for the mail addresses and phone numbers. When you exchange mail messages with the same mail address or phone number, the older one is deleted.

 In Dual Mode of 2in1, up to 60 records for Number A/Address A and Number B/ Address B are stored in Received Address in total.

## When Using Sent Address

# Press and hold of for at least one second.

■SMS: SMS message successfully sent
■MAL: i-mode mail successfully sent

**■SMS**: SMS message failed to be sent

MAL: i-mode mail failed to be sent

🐑 : Time-difference corrected time

Press [Manage] from the Sent Address List to display Redial. When the Sent Address List is displayed from Dialed Calls, you can press [Manage] to display Dialed Calls.

11/14 15:00

E 11/14 15:00

DoCoMo Taro Received Address List

DoCoMo Taro Sent Address List

 
Received address 1/2

#### When Using Received Address

# Press and hold ( ) for at least one second.

■ SMS: SMS message

: Time-difference corrected time



Press (Change) from the Received Address List to display Received Calls.

# Select a record to be displayed.

The detailed display of the Address List is displayed.

- With an SMS message for which the other party's phone number is not notified, the reason for no caller ID is displayed.
- To store in the Phonebook, press (Store). Go to step 2 on page 84.

## Function Menu while Sent/Received Address is Displayed

Function menu	Operation/Explanation
Character size	You can switch the character size for the list.  • The setting here applies to "Dialed/recv. calls" of "Character size".
Feel * Mail [Received Address only]	See page 109.
Add to phonebook	See page 84.
Add desktop icon	See page 114.
Compose message	You can compose an i-mode mail message. The mail address is entered in the address field. Go to step 3 on page 182.
Compose SMS	You can compose an SMS message. The phone number is entered into the address field. Go to step 3 on page 224.

Function menu	Operation/Explanation
Dialing	If the mail address has been stored in a Phonebook entry, you can make a voice call or videophone call to the phone number stored in the Phonebook.  Select a dialing type.  When you select "Select image", select an image to be sent to the other party during a videophone call. To cancel the setting, select "Release".  When multiple phone numbers are stored in a Phonebook entry, you can dial the first phone number.
	<ul> <li>Dial</li> <li>To make an international call, select "Int'l dial assist", select an international call access code, and follow the procedure above after selecting "Dialing" from the Function menu. (See page 60)</li> <li>To set Caller ID Notification, select "Notify caller ID". (See step 2 on page 47)</li> </ul>
Redial/Dialed calls [Sent Address only]	You can display the Redial List or the Dialed Call List.
Received calls [Received Address only]	You can display the Received Call List. All received calls (all calls) are displayed.
Delete this	▶YES
Delete selected	▶ Put a check mark for records to be deleted ▶ [ Finish ] ▶ YES
Delete all	► Enter your Terminal Security Code ➤ YES

#### <Auto-sort>

# **Sorting Mail Automatically to Each Folder**

You can automatically save the mail messages that satisfy the set conditions to the specified folder. This function applies to only the added folders and i-oppli mail folders.

# ┪ Inbox Folder List/Outbox Folder List▶(≩ຊ)(





Follow the operation of the Function menu list on page 211 to set "Auto-sort". If you select a folder for which Auto-sort conditions have been set, the Auto-sort Setting display appears.

## **Auto-sort Storing**

You can specify a sort condition and folder from the detailed Sent/ Received Mail display.

- Detailed Sent Mail display/Detailed Received Mail display ► ( FUNC ) > Store > Auto-sort
  - ► Do the following operations.

Item	Operation/Explanation
Address sort	You can set the displayed sender's/recipient's address for a sorting condition.  Select a folder.  When multiple addresses are found, select an address.
Subject sort	You can edit the displayed subject and set it for a sorting condition.  ▶ Edit the subject▶ Select a folder.

## To change the condition

The confirmation display appears asking whether to change the condition or to overwrite it. Select "YES" to release the set condition and set the new one.

### When the same condition is set for another folder

The confirmation display appears asking whether to change the condition. Select "YES" to release the condition set for another folder and to set it for the selected folder.

 $\bullet$  You cannot change the setting for a Mail-Security-activated folder.

# When storing another address for the folder set for "Address sort"

The confirmation display appears asking whether to add the address.

#### Information

- You can store a total of 700 addresses in all folders.
- When multiple conditions match, sorting is done in the priority below.
- 1 Sort all
- ② Subject sort
- 3 Reply impossible/Send impossible
- (4) Address sort (Look-up address/Enter address)
- (5) Address sort (Look-up mail group)
- Address sort (Look-up group)
- Mail messages sent simultaneously to multiple members cannot be sorted by "Address sort" or "Send impossible".
- Area Mail messages are not sorted by "Address sort".

# Function Menu of the Auto-sort Setting Display

Function menu	Operation/Explanation
Address sort	You can look up a mail address or phone number in the
(Look-up address)	Phonebook or Sent/Received Address and set it to the folder
	for sorting.
	► Look-up address ➤ Select an item.
	Phonebook
	Call up a Phonebook entry and select a phone number or
	mail address.
	Sent address
	Select a phone number or mail address and press
	(Select).
	Received address
	Select a phone number or mail address and press
	(Select).
Address sort	You can set a group to be sorted into the folder.
(Look-up group)	► Look-up group ➤ Select a group.

Function menu	Operation/Explanation
Address sort (Look-up mail group)	You can set a mail group to be sorted into the folder.  ▶Look-up mail group ➤ Select a mail group.
Address sort (Enter address)	You can directly enter a mail address or phone number to be sorted into the folder.  Enter address Enter a mail address or phone number.  You can enter up to 50 half-pitch characters.  When the mail address is "phone number@docomo.ne.jp", enter the phone number only. You can sort SMS messages as well if you enter the phone number only.
Subject sort	You can enter the subject of i-mode mail messages to be sorted into the folder. One subject can be set per folder.  Enter a subject.  You can enter up to 100 full-pitch/200 half-pitch characters.
Reply impossible	You can set reply-disabled mail messages to be sorted. You can set for only one folder.
Send impossible	You can set failed-to-send mail messages to be sorted. You can set for only one folder.
Sort all	You can sort all mail messages into the i-oppli mail folder. You can set for only one i-oppli mail folder each in the Inbox and Outbox. When "Sort all" is set, other sort settings are disabled.  > YES
Edit addr/subj	You can edit and store the mail address, phone number, and subject set for the folder.  Edit the mail address, phone number or subject.
List setting	You can switch whether to display the destinations by the name stored in the Phonebook or by the mail address or phone number.  Name or Address  You can switch also by pressing (Change).
Release (Release this)	You can release the sort condition. (The item is deleted from the Auto-sort Setting display.)  Release this YES

Function menu	Operation/Explanation
Release (Release selected)	You can select mail addresses or phone numbers, and release the sort condition for them. (The items are deleted from the Auto-sort Setting display.)  Release selected Put a check mark for mail addresses or phone numbers to be released \(\sigma\)(\(\)\(\)\(\)\(\)\(\)\(\)\(\)\(\)\(\)
Release (Release all)	You can release all sort conditions. (The items are deleted from the Auto-sort Setting display.)  Release all YES

#### <Address sort (Look-up group)>

- On the Auto-sort Setting display, " The " is added to the top of the group name.
- You cannot set groups on the UIM.
- The secret mail messages received in ordinary mode (not in "Secret mode" or "Secret data only") are not sorted into the folder.

## <Address sort (Look-up mail group)>

• On the Auto-sort Setting display, " To is added to the top of the mail group name.

#### <Subject sort>

- When the subject matches sort conditions for multiple folders, it is sorted to the folder nearest to the "Inbox" folder or "Outbox" folder.
- Even if you set "No title", the i-mode mail titled with "No title" because of no entry cannot be sorted.
- SMS messages cannot be sorted by subject.

#### <Sort all>

 You cannot sort SMS reports or SMS messages that have been directly received on the UIM.

#### <Mail Group>



Mail group 2 group 3

Mail group 4 Mail Group List

# **Creating Mail Group**

 
You can store mail addresses by group. You can send mail to regular destinations.

You can store up to five addresses per group, and up to 20 groups.

# MENU Phonebook Phonebook settings Mail group

Select a Mail group to be stored.

- When mail addresses are stored in a Mail group,



# Highlight <Not stored> and press



• If you select a stored mail address, the Mail Group Address Confirmation display appears.



## Enter a mail address.

 You can enter up to 50 half-pitch characters. Repeat step 2 and step 3 to store multiple mail addresses.

## **Function Menu of the Mail Group List**

Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message to the Mail group. Go to step 3 on page 182.
Edit group name	► Enter a name of the Mail group. • You can enter up to 10 full-pitch/20 half-pitch characters.
Reset group name	You can reset the name of Mail group to the default.  YES

# Function Menu of the Detailed Mail Group Display/Mail Group Address Confirmation Display

Function menu	Operation/Explanation
Edit address	Go to step 3 on page 212.  ● You can edit the address also by pressing ( Edit ).
Look-up address	You can call up a phone number or mail address in the Phonebook, Sent Address, or Received Address to enter it.  Select an item.  Phonebook  Call up a Phonebook entry and select a phone number or mail address.  Sent address  Select a phone number or mail address and press  (a) (select).  Received address  Select a phone number or mail address and press  (b) (select).
Delete this	▶YES
Delete all	► Enter your Terminal Security Code ➤ YES

# <Mail Settings>

# **Setting Mail and Messages R/F**

**1** ☑ ► Mail settings ► Do the following operations.

Item	Operation/Explanation
Scroll	You can set the number of lines that are scrolled at a time for when you press on the detailed mail display, detailed Message R/F display, Message Composition display and preview display.  Select the number of lines.
Character size	See page 116.

Item	Operation/Explanation
Mail list display	You can set items to be displayed on the Inbox/Outbox/Draft List by using radio buttons or check boxes.  ▶ Select a display format ▶ ☑(Finish)
Message display	You can set whether to display received mail in standard display (from the top) or from the text.  Standard or From message
Mail security	See page 128.
Secret mail display	See page 127.
Auto color label	You can specify the text color of the sender, received date/time and others on the Inbox List by mail address. You can store up to 10 items.  > Not stored> Select an item.  Phonebook Call up a Phonebook entry and select a phone number or mail address.  Sent address Select a phone number or mail address and press

Item	Operation/Explanation
Pred. conv. at reply	You can set whether to preferentially display the words contained in the subject and text of the received mail message as conversion candidates when you reply to, reply with quote to, or forward it.  ON or OFF
Header/signature	See page 214.
Set check new message	You can select items to be checked from among i-mode mail, Message R and Message F, for when you perform "Check new message".  Put a check mark for the items to be checked  Circle Finish)
Auto-display	See page 216.
Receiving display	You can set whether to display the Message Receiving and Reception Result displays, even during operation of another function.  Alarm preferred or Operation preferred Alarm preferredPrioritizes the Message Receiving and Reception Result displays when you have new mail.  Operation preferredPrioritizes the display of the current operation when you have new mail.
Receive option setting	See page 195.
Attachment preference	You can set whether to receive the attached file with an i-mode mail message. The attached files for which you remove a check mark are held at the i-mode Center. (The file in excess of 100 Kbytes is held at the i-mode Center, even if you put a check mark for it.)  Put a check mark for items to be received  Put a check mark for "Tool data" to receive Phonebook entries, schedule events, ToDo items, and bookmarks.  Put a check mark for "Other" to receive PC movies, document files, and files unsupported by the FOMA phone.
Auto melody play	You can set whether to play back the attached or pasted melodies automatically for when you display the text of received mail, or message R/F.  ON or OFF

Item	Operation/Explanation
Photo auto display	You can set whether to automatically display the photo (still image) received during a call.  ON or OFF
Chat setting	See page 222.
Check settings	You can check each of "Mail settings".
Even if "From message" is set, the message might not be displayed from the text depending on the number of characters in the text.     Auto color label>     Even when you set this function, the text color of the mail message already received does not change.	
Set check new message> <ul> <li>If you do not want to receive Messages R and Messages F by "Check new message", change these settings to "".</li> </ul> Auto melody play>	
<auto melody="" play:<="" th=""><td>- <u>-</u></td></auto>	- <u>-</u>

# Header/Signature

You can store a header, signature and quotation mark. Also, you can set whether to automatically paste the header or signature.

Mail settings ► Header/signature ► Do the following operations.

regardless of the setting of "Auto melody play".

Item	Operation/Explanation
Header	The header is the sentence such as greeting at the beginning of the text.  Select the header field Enter a header (Finish)  You can enter up to 5,000 full-pitch/10,000 half-pitch characters.  If you do not want the header to be pasted automatically, select "Insert" to change " "" to " "". See page 184 for adding a header by mail message.

Item	Operation/Explanation
Signature	The signature is your name and other information, placed at the end of the text.  ➤ Select the signature field ➤ Enter a signature ➤ (Finish)  • You can enter up to 5,000 full-pitch/10,000 half-pitch characters.  • If you do not want the signature to be pasted automatically, select "Insert" to change "  " " to " " ". See page 184 for adding a signature by mail message.
Quotation marks	The quotation mark is the symbol indicating a quotation from received mail for when you reply to mail.  Enter a quotation mark.  You can enter up to 10 full-pitch/20 half-pitch characters.

- You can set decorations in a header and signature.
- Even if you have put a check mark for "Insert", the header and signature cannot be pasted when you compose i-mode mail for Photo-sending during a call or from a template or i-αρρli.
- You cannot paste the header, signature, and quotation marks to SMS messages.

# <Receive Message R/F>

# **Receiving Messages R/F Automatically**

Message services automatically deliver information you want to your FOMA phone.

When your FOMA phone is in the service area, it receives Messages R/F automatically from the i-mode Center.

" $\mathbb{R}$ (white)" or " $\mathbb{R}$ (white)" appears at the top of the display when a Message R/F is delivered.

You can save up to 100 each of received Messages R/F.

When you receive a Message R/F, the "R(white)" or "F(white)" blinks and the message for receiving the Message R/F appears.



After the message is received, the number of received mail messages and Messages R/F is displayed.

- You can display the Message R/F List by selecting "MessageR" or "MessageF".
- If "Auto-display" is set to other than "OFF", the contents of received Message R/F are displayed automatically. They are displayed for 15 seconds when "Mail/Msg. ring time" is set to 0 through 10 seconds, or for the specified duration plus 5 seconds when it is set to 11 seconds or longer.
- If no keys are pressed for the specified duration, " or " or " (see page 112) appears on the desktop and the former display returns. (The transit time varies depending on the setting for "Mail/Msg. ring time".)

  Press (a), highlight " or " or " , and press (a) (select ) to display the Message R/F List.
- See page 31 for when the FOMA phone is closed.

#### When unread Messages R/F are found

NEW" is added to "Message R/F" of i-mode menu.

#### Information

 Received Messages R/F are not automatically displayed while a display other than the Stand-by display is shown, while i-oppli is running, during Public Mode (Drive Mode), during Lock All, or during Personal Data Lock.

- When the Messages R/F exceed the maximum number of saved messages, they are overwritten starting from the oldest one. Unread or protected Messages R/F are not overwritten.
- When the FOMA phone cannot receive any more Messages R/F, " (black)" or " (black)" is displayed. Delete unnecessary Messages R/F, read unread Messages R/F or release protection.
- When the icon " (white)" or " (white)" is displayed, the i-mode Center holds Messages R/F. When the icon (lolack)" or (lolack)" is displayed, the i-mode Center can hold no more Messages R/F. Perform "Check new message" to receive them.
- After being displayed automatically, Messages R/F are still displayed as unread ones in the Message R/F List. However, if you scroll through the messages while they are being displayed automatically, they will be indicated as read.
- Messages R/F for you are held at the i-mode Center in the following cases:
- · When the power is off
- · During a videophone call

· During Self Mode

- · When you are out of the service area
- · During infrared data exchange
- · While connecting to the FirstPass Center
- · During Omakase Lock · During iC communication
- · During copy to microSD
- $\cdot$  While connecting to the Data Storage Center
- · When the space for Messages R/F is full with protected or unread messages

# **Auto-display**

You can set how to automatically display Messages R/F received during standby.

**1** ☑ ► Mail settings ► Auto-display

Select an option for automatic display.

#### Information

 The Messages R/F are not displayed automatically when "Mail security" is set for "Inbox", or when "Mail security" is set for "MessageR" folder or "MessageF" folder. <Display Message R/F>

 
# Reading Received Messages R/F

■ Inbox MessageR or MessageF
■ Select a Message R/F to be displayed.



- When you select an unread Message R/F, " (pink)" changes to " 2".
- Use to check other Messages R/F.
- When the text of Message R/F is long, use to scroll the display to check it. Also, you can press (Page ▲)/(a)(Page ▼) or ▲/▼ to scroll page by page.





#### 1 Status of Message R/F

"final appears when protection is set.

Ī	pink)	Unread Message R/F
		Read Message R/F

#### Received date and time

The list shows the time for the Message R/F received today, and shows the date for the Message R/F received until yesterday. The detailed display shows the date and time the Message R/F was received.

#### Subject

#### The data attached or pasted

The detailed display shows the data volume.

7	Valid melody file
0	Valid image file
♠	Valid ToruCa file
0	Multiple attached files
	Multiple pasted files
	File set with the UIM restrictions

#### Text of message

The phone number stored in the Phonebook is displayed by the name stored in the Phonebook.

# **Function Menu of the Message R/F List**

Function menu	Operation/Explanation
Protect (Protect ON/OFF)	You can protect a Message R/F not to be overwritten or deleted. You can protect up to 50 messages (Message R and Message F each). Protected messages are indicated by " Protect ON/OFF To release protection, perform the same operation.
Protect (Unprotect all)	► Unprotect all ► YES
Search/sort (Sort)	You can rearrange the displaying order.  ▶ Sort▶ Select a displaying order.
Search/sort (Filter)	You can display only Messages R/F that satisfy the condition.  Filter Select a displaying type.

Function menu	Operation/Explanation
Search/sort (Display all)	After you execute "Sort" or "Filter", you can reset it and list all Messages R/F by "By date ↑".  Display all
No. of messages	You can display the total number of Messages R/F stored in the FOMA phone, as well as the number of unread messages and protected messages.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected)	▶ Delete selected▶ Put a check mark for Messages R/F to be deleted▶ (Finish)▶ YES
Delete (Delete read mails)	You can delete all read Messages R/F. ▶Delete read mails▶YES
Delete (DEL all frm folder)	You can delete all Messages R/F.  ▶ DEL all frm folder ▶ Enter your Terminal Security Code  ▶ YES

#### Information

#### <Search/sort>

- $\bullet$  To return to the former status, execute "Display all".
- If you close the List and re-open it, you can return to the List of all items.

# Function Menu of the Detailed Message R/F Display

Function menu	Operation/Explanation
Protect ON/OFF	See page 217.
Operate file (Save attached file)	You can save attached or pasted files. (See page 198)
Operate file (Save insert image)	You can save the attached image and set it as the Stand-by display, Wake-up display, or another display. (See page 190)
Operate file (Save BG image)	► Save BG image ➤ YES ➤ Select a destination folder. Go to step 3 on page 166.
Operate file (Save D-pictograph)	You can save the all Decomail-pictographs inserted into the text. (See page 208)

Function menu Operation/Explanation Add to phonebook See page 84. > YES Delete

# What is Emergency Alert "Area Mail"?

This service enables you to receive reports such as emergency earthquake alerts distributed from the Japan Meteorological Agency.

- You can receive Area Mail messages without i-mode contract.
- You need to set "Receive setting" to receive Area Mail messages. \*See page 219 for "Receive setting" of Area Mail.
- You might not be able to receive Area Mail messages in the following cases:
- During a call (voice call/videophone call)
- · During packet communication (i-mode communication, data communication) During updating software program
- You cannot receive Area Mail messages in the following cases:
- · During Omakase Lock
- · During international roaming
- · During Self Mode
- \*When you could not receive the messages by the reasons above, you cannot receive them again.

# Receiving Emergency Alert "Area Mail"

When you receive an Area Mail message, the ring tone for Area Mail sounds. The "Ring volume", "Ring time", and "Vibrator" settings follow that of "Mail".

When you receive an emergency earthquake alert, a dedicated buzzer (alarm) sounds, and the vibrator works to notify you. Further, the contents are automatically displayed, "Ring volume" is fixed to "Level 4", and "Vibrator" is fixed to "Pattern 2", so you cannot change their settings. You can use "Area mail settings" to set "Beep time". Up to 30 Area Mail messages are saved separately from i-mode mail messages and SMS messages in the Inbox.

- When an Area Mail message arrives, "@" blinks and the message telling its arrival appears.
  - If you press any key, the former display returns.
  - The details of some Area Mail messages might be displayed when you receive them. To clear it, press . (CLR), or 🖀).
  - See page 198 for displaying Area Mail messages.



Reception Result display

#### Information

- The buzzer sounds when you receive an emergency earthquake alert with "Original" set to sound any of the following tones:
- · Mail volume · Phone volume · Alarm volume
- · VM tone
- · Keypad sound
- Even when "Vibrator" of "Original" is set to "OFF", the vibrator works if you receive an emergency earthquake alert.
- When you receive a new Area Mail message with 30 Area Mail messages saved. the read messages are overwritten from the oldest. When all 30 messages are not read, they are overwritten from the oldest one in order.
- Whether the details of a received Area Mail message are displayed or not depends on the setting by the Area Mail message provider.

## <Area Mail Settings>

# **Setting Emergency Alert "Area Mail"**

Area mail settings Do the following operations.

Item	Operation/Explanation
Receive setting	You can set whether to use Area Mail. ► Read exemption clause thoroughly ► Yes or No
Receive entry	You can register Message IDs for the reports to be received other than emergency information. You can register up to 20 IDs.  ➤ New> ► Enter your Terminal Security Code  ► Enter a registration name ► Enter a Message ID.  • To edit a registered Message ID, highlight it, press  □ (
Beep setting	You can set whether to make the beep sound for when you receive an Area Mail message that beeps.  ON or OFF  When you set "OFF", the dedicated ring tone for Area Mail sounds.
Beep time	You can set the duration the beep sounds.  Enter a beep time (seconds).

• Enter it in two digit, from "01" through "30".

#### <Chat Mail>

# **Using Chat Mail**

You can send or receive chat mail messages to and from multiple persons on a single display. To use Chat Mail, you need to store chat members. You can easily store them by creating chat groups.

#### **Store Chat Members**

You can store up to six chat members including the user (yourself).

- ☐ Chat mail (FUNC )
- Chat member > <Not recorded>
- Enter a mail address.
- To edit a stored member, select the member.
- When the mail address is "phone number@docomo.ne.jp", store the phone number only.
- You can enter up to 50 half-pitch characters.

# Chat member If your model is the control of the co

#### Information

 If you edit the mail address of the stored member, the member's name and image are changed.

#### **Function Menu of the Chat Member List**

Function menu	Operation/Explanation
Edit	You can edit the mail address.
	Go to step 1 of "Store Chat Members" on page 219.

Function menu	Operation/Explanation
Refer address	You can look up a phone number or mail address in the Phonebook, Received Address, or Sent Address to enter it.  > Select an item. PhonebookCall up a Phonebook entry and select a phone number or mail address. Sent addressSelect a phone number or mail address and press  (a) (select).  Received addressSelect a phone number or mail address and press (a) (select).
Change member (Chat group)	You can store the members stored in a chat group as chat members.  ▶ Chat group ▶ Group list or Member list Group list You can select members by chat group. Member list You can select members from all the members stored in chat groups.  ● If you select "Group list", select a chat group. The members from the selected group are stored.  ● If you select "Member list", check the members you want to store and press [□] (Finist).  ● If you have already stored chat members, the confirmation display appears asking whether to replace all the chat members.
Change member (Mail group)	You can store the mail addresses stored in Mail group as chat members.  ▶ Mail group ► Select a Mail group.  • If you have already stored chat members, the confirmation

display appears asking whether to replace all the chat

members.

Function menu	Operation/Explanation
Display setting	You can check the chat member's name, image, background color, and mail address.  • You can press on to switch members.  • The mail address of the user (yourself) is not displayed.
Delete (Delete this)	▶ Delete this▶ YES
Delete (Delete all)	▶ Delete all ▶ YES

# **Exchange Chat Mail Messages**





Chat Mail display

) (Select) ► Enter characters.

• You can enter up to 250 full-pitch/500 half-pitch characters.



Press ☑ (Send).

The chat mail message is sent.

The sent chat mail message is displayed at the top of the Chat Mail display.



The display for receiving chat mail appears and a chat mail message is received.



The received chat mail message is displayed at the top of the Chat Mail display.

Repeat step 2 through step 4 to send and receive chat mail messages.

# CLR YES or NO

- YES . . . You can delete read and sent chat mail message from the "Chat" folder.
- NO . . . . You do not delete read and sent chat mail message from the "Chat" folder

Chat Mail ends

- You can end Chat Mail also by pressing
- When no sent and received chat mail messages are found, the confirmation display does not appear.

#### ■ Chat Mail display

#### • Image

The image you have stored in Chat Group is displayed.

#### 2Member name

The chat member's name store in the chat group is displayed. Also, the name is displayed with a specified background color.

• When the name is not stored in the chat group, up to eight half-pitch characters from the beginning of the mail address are displayed. When the mail address is stored in the Phonebook, up to four full-pitch/eight half-pitch characters from the beginning of the name are displayed.



#### Broadcast mark

Displayed when the chat mail message set with multiple addresses is received.

Q (blue): All addresses are stored in Chat Member.

(dark blue): Addresses that are not stored in Chat Member are found.

#### Sent/Received date and time

The date and time the chat mail message was sent/received are displayed. The time is displayed for the chat mail messages sent/received today and the date for the chat mail messages sent/received until yesterday.

#### Text

The text of chart mail message is displayed. The number of characters of the text to be displayed is up to 250 full-pitch/500 half-pitch characters.

If the text exceeds four lines, is displayed and you can switch the pages by pressing .

- You cannot switch the page of the text on the Chat Mail history.
- The text of the chat mail message successfully sent is displayed in black. The text
  of the chat mail message failed to be sent is displayed in gray.

#### Olnput box

Entered characters (characters to send) are displayed from the beginning by a factor of one line.

#### Information

- The communication fee for when you send chat mail messages to multiple chat members is the same as for sending a chat mail message to one member.
   (However, the data for the added address fields will involve a higher charge.)
- When "Receive option setting" is set to "ON", you cannot execute Chat Mail.
- When the Inbox is full of unread or protected mail messages, you cannot execute
  Chat Mail. Delete unnecessary mail messages or read unread mail messages, or
  release the protection and then operate.
- · Attached files or pasted data are not displayed.
- Sent/Received chat mail messages are saved to the "Chat" folder.
- The subject of a sent chat mail message is "チャットメール (chat mail)" (half-pitch characters).
- Even when the chat mail text on the Chat Mail display contains the phone
  number, mail address, or URL, the Phone To/AV Phone To, Mail To, and Web To
  functions are not available. However, those functions will be available when Chat
  Mail is finished and chat mail message is brought up from the "Inbox" or "Outbox".
- During playing back a music file by MUSIC Player, a tone for the chat mail message does not sound.

# If You Receive Chat Mail during Standby

If you receive a chat mail message during standby, " 💥 " appears on the desktop.

Press (a), highlight " and press (a) (select); then Chat Mail starts up.

#### Information

- Messages are recognized as chat mail messages in the following cases:
   When the sender's address or destination address is stored in Chat Member or in a chat group
  - ・When the subject contains "チャットメール (chat mail)" (all full-pitch or all half-pitch characters)
- Even when you receive a chat mail message from a member of a chat group other than Chat Member while Chat Mail is running, " papears.

#### If you start Chat Mail from the desktop or Chat Group

If you start Chat Mail from a mail address or from a chat group that is not stored in Chat Member, the confirmation display appears asking whether to delete stored member and start Chat Mail.

Select "YES"; then the current chat members are deleted and the sender's mail address or chat group members are stored in Chat Member.

#### If you start Chat Mail from the desktop

The sender's mail address is stored in Chat Member. When the sender's mail address has been stored in a chat group, the members in that chat group are stored in Chat Member. However, the mail address selected as the destination is only the mail address of the sender.

#### If you start Chat Mail from Chat Group

The chat group members are stored in Chat Member. All members of the group are selected as the destination.

# **Function Menu of the Chat Mail Display**

Function menu	Operation/Explanation
Send	You can send the chat mail message.
Select receiver	From among chat members, you can select destination addresses to send the chat mail messages to.  Put a check mark for destination addresses to send the messages to   (Finish)
Chat member	You can store chat members. (See page 219)
Broadcast address	You can check the destination addresses you have simultaneously sent a chat mail message to.  • When there are destination addresses that are not stored in Chat Member, the confirmation display appears asking whether to store them in Chat Member. If you store them in Chat Member, select "YES" and put a check mark for the destination addresses to be stored and press () (Finish).
Reload	You can receive chat mail messages that you could not automatically receive. If you receive a new chat mail message, the Chat Mail display is updated.
View first line	You can display the latest chat mail message.
View last line	You can display the oldest chat mail message.

Function menu	Operation/Explanation
Delete read mails	You can delete all the received read chat mail messages and sent chat mail messages including secret mail and chat mail messages failed to send.  > YES

# Information

<Broadcast address>

• You can store up to six members (including yourself) in Chat Member.

#### **Chat Setting**

Mail settings Chat setting Do the following operations.

Item	Operation/Explanation
Sound setting	You can set a tone for when you send/receive a chat mail message on the Chat Mail display.  ▶ Select a folder ▶ Select a tone.  • The tone does not sound when a chat mail message comes in from a member not stored in Chat Member.
Chat image	You can set whether to display images on the Chat Mail display.  ON or OFF
User setting	You can set the name and image of the user (yourself).  Select the name field Enter a user name.  You can enter up to four full-pitch/eight half-pitch characters.  If you do not change the user name, go to the next step.  Select the image field Select a folder
	Select an image.

#### <Chat Group>



# **Creating Chat Group**

You can store the mail addresses you want to exchange chat mail per group.

By storing multiple members in a group, you can set them as chat members at a time.

You can store up to five mail addresses per group. You can create up to five groups.

 
Phonebook ► Phonebook settings ► Chat group ► Select a chat group to be stored.



When the selected chat group has any member,
 "CHAT" appears at the lower left of the display.

If you press (CHAT), Chat group members are stored in Chat Member and Chat Mail starts. Go to step 2 on page 220.

# Highlight <Not stored> and press





## Enter a mail address.

- You can enter up to 50 half-pitch characters.
- When the entered mail address is stored in the Phonebook, and the image is stored in the Phonebook, the image is also set.
- When the mail address is "phone number@docomo.ne.jp", store the phone number only.

Repeat step 2 and step 3 to store multiple mail addresses.

# **Function Menu of the Chat Group List**

Function menu	Operation/Explanation
Activate chat	The members in the chat group are stored as chat members and Chat Mail starts. Go to step 2 on page 220.
Edit group name	► Enter a chat group name.  • You can enter up to 10 full-pitch/20 half-pitch characters.
Reset group name	You can reset the name of the chat group to the default.  >YES

# Function Menu of the Detailed Chat Group Display/Chat Group Address Confirmation Display

Function menu	Operation/Explanation
Edit	You can edit the mail address.
	Go to step 3 on page 223.
	<ul> <li>You can edit also by pressing (☐ Edit ☐).</li> </ul>
Refer address	You can look up a phone number or mail address in the
	Phonebook, Sent Address, or Received Address to enter it.
	Select an item.
	Phonebook
	Call up a Phonebook entry and select a phone number or
	mail address.
	Sent address
	Select a phone number or mail address and press  ( ) ( Select ).
	Received address
	Select a phone number or mail address and press  o (Select).

Function menu	Operation/Explanation	
Change member	You can store members from a Mail group in the chat group.  Mail group. Select a Mail group.  If you have already stored members in the chat group, the confirmation display appears asking whether to replace all the members.	
Member setting	You can set the member's name and image. You can switch members by pressing O.  Select the member name field Enter a member's name.  You can enter up to four full-pitch/eight half-pitch characters.  Not to change the member's name, go to the next step.	
	➤ Select the picture field ➤ Select a folder ➤ Select an image.	
Delete	►YES	
Delete all	► Enter your Terminal Security Code ➤ YES	

<Compose SMS>

# Composing SMS Messages to Send

You can compose and send SMS messages.

You can save up to 1,000 sent SMS messages including i-mode mail messages to the Outbox.

- You can send and receive SMS messages to and from subscribers of overseas carriers other than DoCoMo. For the countries and overseas carriers available for the service, refer to the DoCoMo Global Service web page.
- You can move/copy the sent SMS messages to the UIM. (See page 361)





# Select the address field Select an item.

**Phonebook** . . . . . . Call up a Phonebook entry and select a phone number.

Sent address.... Select a phone number and press (Select).

Received address... Select a phone number and press (Select).

Enter address . . . . . Enter a phone number and press (Enter address . . . . .

Only one address can be specified.

Only one address can be specified.

- You can enter up to 21 digits (including "+").
- When the address is that of overseas carriers other than DoCoMo, enter "+" (press and hold O for at least one second), "country code", and "destination mobile phone number" in that order. When the mobile phone number begins with "0", enter the phone number except for the "0". Also, you can enter "010", "country code", and "destination mobile phone number" in that order to send SMS messages. (When you reply to SMS messages received from overseas, enter "010".)

# Select the text field Enter text.

 The number of characters you can enter differs depending on the "SMS input character".

The animation display during transmission appears and mail is sent.

5 OK

#### Information

- Depending on the radio wave conditions, the characters might not be sent successfully to the destination.
- When the number of sent mail messages exceeds the maximum number of storage, they will be overwritten starting from the oldest sent mail. However, protected sent mail cannot be overwritten.
- You cannot compose an SMS message when the number of sent mail messages in the Outbox has reached the maximum and those messages are all protected, or when 20 mail messages are saved to the Draft or the Draft is full.
   Release the protection for sent mail messages, or send/delete draft mail messages, and then operate again.
- Even if "Activate" of "Caller ID notification" is set to "OFF", the caller ID is notified
  to the other party you send an SMS message to. If you attempt to send an SMS
  message to the phone number headed by "184"/"186", the confirmation display
  appears asking whether to delete prefix numbers and send the mail.

- If you set "SMS report request" to "ON", you cannot send SMS messages to the i-mode phone of the mova service.
- "+" is valid only at the beginning of the address.
- You cannot send the message to addresses that include any characters other than numbers, "\*", "#" and "+".
- You cannot start a new line while editing the text.
- The special symbols (see page 433) are replaced by half-pitch spaces.
- Each space is counted as a character.
- You cannot reply to the SMS message whose sender is User unset/PublicPhone/ Unavailable.
- In B Mode of 2in1, you cannot compose SMS messages.

#### Function Menu of the SMS Composition Display

Function menu	Operation/Explanation
Send	You can send the SMS message. Go to step 5 on page 224.
Preview	Before sending, you can check the address and the text contents.  ● Press ☑( Send ) to send the SMS message.
Save	You can save the SMS message you are composing or editing to the Draft.  • You cannot save the message when the address field and text field are blank.
SMS report req.	See page 226.
SMS valid. per.	See page 226.
SMS input char.	See page 227.

#### <Receive SMS>

# **Receiving SMS Messages Automatically**

You can save up to 2,500 received SMS messages including i-mode mail messages.

• You can move/copy the received SMS messages to the UIM. (See page 361)

# When an SMS message arrives, "∑(white)" lights and the receiving message is displayed.



display

When receiving ends, the display shows the number of received SMS messages.

- You can display the Inbox List by selecting "Mail".
- See page 31 for when the FOMA phone is closed.

#### Information

• When the number of unread or protected messages in the Inbox has reached the maximum, no new messages can be received and " (black)" is displayed. To receive SMS messages, delete mail in the Inbox or read unread mail or release protection until " (black)" clears, and then perform "Check new SMS".

# **Display Newly Received SMS Messages**

Reception Result display Mail
Select an SMS message to be displayed.



Press and hold for at least one second from the detailed SMS display to change the size of text characters. When you set to "Large", the characters on the Folder List and the Inbox/Outbox/Draft List are displayed in large size as well.

- Spaces might be displayed depending on the characters entered in the received SMS message.
- While the sender's address (phone number) is highlighted in the displayed SMS message, you can press ( | Select ) to make a voice call or videophone call to the displayed number (the Phone To/AV Phone To function).

  Further, if the sender's phone number is stored in the Phonebook, the stored "name" is highlighted. In this case, you can dial the phone number in the same way.
- A Short Mail message is received as an SMS message on the FOMA phone.
   When the sender does not notify of the phone number, the reason is displayed in the sender's field.

#### <Check New SMS>

# **Checking whether Center Holds SMS Messages**

When SMS messages arrive at the SMS Center, they are automatically sent to your FOMA phone, but will be held at the SMS Center if your FOMA phone cannot receive messages such as when it is off or out of the service area.

You can receive the messages by "Check new SMS".

↑ Check new SMS

# Return

If the Center holds SMS messages, the FOMA phone automatically receives them.

#### Information

- Some SMS messages are not delivered immediately after checking.
- When " (black)" or " (black)", etc. are displayed, you cannot receive any more SMS messages. Delete unnecessary mail, read unread mail, or release protection. (Read and unprotected messages are overwritten automatically from the oldest one.)
- You cannot use this function to receive i-mode mail or Messages R/F. Use "Check new message" to receive i-mode mail or Messages R/F.

#### <SMS Settings>

 
# **Setting SMS**

#### **SMS Report Request**

You can set whether to request an SMS report for when sending an SMS message.

The SMS report lets you know that your SMS message was delivered to the destination.

You can check received SMS reports in the "Inbox" folder.



 When you operate from the Function menu of the SMS Composition display, the setting is effective only for the SMS message you are composing.

#### **SMS Validity Period**

You can set the period that the SMS Center holds an SMS message sent but unsuccessfully delivered due to the out-of-service area, etc.

- SMS settings SMS validity period Select a holding period.
  - If you select "None", the stored SMS message is re-sent after a certain period of time and deleted from the SMS Center.
  - When you operate from the Function menu of the SMS Composition display, the setting is effective only for the SMS message you are composing.

## **SMS Input Character**

You can set the characters you can enter into the text of SMS messages. You can set to enter only half-pitch alphanumeric characters and half-pitch symbols.

SMS settings SMS input character Select an item.

#### Japanese (70char.)

... You can enter full-pitch and half-pitch characters. You cannot enter pictographs except " ? and " ? (see page 429). You can enter up to 70 characters for the text.

#### English (160char.)

- ... You can enter only half-pitch alphanumeric characters and half-pitch symbols. You can enter up to 160 characters for the text.
- When you operate from the Function menu of the SMS Composition display, the setting is effective only for the SMS message you are composing.

#### **SMS Center Selection**

#### Normally, you do not need to change this setting.

You can set the address and "Type of number" for the SMS Center. This setting is for getting any service other than SMS Service you currently use.

- SMS settings SMS center selection
  User setting Enter an address.
  - You can enter up to 20 half-pitch characters.
  - You can reset User Setting to "DoCoMo" by Reset ► Enter your Terminal Security Code ➤ YES.
- International or Unknown

 If "\( \text{\*}\)" or "\( \text{#"}\) is included in the entered address, you cannot set it for "International".

#### <Web Mail>

# **Using Web Mail**

You can send mail messages or browse received mail messages on the i-mode site.

- You can use only in B Mode or Dual Mode of 2in1.
- For details on Web mail, refer to "Mobile Phone User's Guide [2in1]".
- Web mail Follow the instructions on the display.



# i-αppli

What is i-oppli?	230
Downloading i-appli from Sites (i-appli Download)	230
Starting i-applii-appli Run>	231
Setting i-appli	242
Starting i-oppli Automatically	242
Operating i-αppli Stand-by Display	
(i-appli Stand-by Display)	243
Displaying i-oppli Data Files on the microSD Memory Card	
⟨ ⅓ -αppli(microSD)>	244

# What is i-oppli?

By downloading i-oppli from i-mode sites, i-mode phone becomes more convenient. For example, you can enjoy various games downloaded to your i-mode phone, and can also use the i-oppli which enables you to directly store the data into the Phonebook or Schedule, or the i-oppli which links to Data Box, enabling you to save or obtain images.

 For details on the i-αppli, refer to the "Mobile Phone User's Guide [i-mode] FOMA version".

#### <i-appli Download>

# Downloading i-oppli from Sites

You can download software programs from sites to the FOMA phone. You can save up to 100 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

■ Bring up an i-αppli downloadable site
■ Select a software program.



# Select "OK" when downloading ends.

- See page 170 when i-oppli programs are stored to the maximum.
  - When downloading ends, the display for Software Setting (Network Set or Stand-by Set) might appear. These settings can be done also from the Software List
- YES or NO

YES . . . . Starts i-oppli.

NO . . . . Returns to the site display.

#### When downloading is suspended

When you press CLR or to suspend downloading an i-oppli program of 100 Kbytes or more, or when downloading is suspended by the radio wave conditions, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the confirmation display asking whether to save the file downloaded halfway. Select "YES" to partially save the file.

You can re-download the rest of the partially saved i- $\alpha$ ppli program from the Software List.

#### When you downloaded mail-linked i-αppli

An i-oppli mail folder is created automatically each in the Inbox/Outbox Folder List, and the title of the downloaded mail-linked i-oppli becomes the name of the folder.

- You can save up to five mail-linked i-αppli programs.
- You cannot download the software program if the mail-linked i-αppli using the same folder is already in the Software List.
- You cannot download mail-linked i-αppli while Mail Security is set.
- You cannot download mail-linked i-oppli if the Inbox/Outbox Folder List contains five i-oppli mail folders.
- When re-downloading mail-linked i-αppli whose folder only remains, the confirmation display appears asking whether to use the existing i-αppli mail folder. If you select "YES", the existing folder is used. If you select "NO" because you do not use it, the confirmation display appears asking whether to delete an existing folder and create a new one. You cannot download mail-linked i-αppli without creating a new folder.

#### Information

 You can download pre-installed i-αppli programs from the "P-SQUARE" site (Japanese only).

QR code for accessing the site



- Downloading is not available at some accessed sites.
- Some i-oppli programs can automatically connect to the i-mode Center after they
  are downloaded. However, to use this service, you need to set it in advance in
  "Software setting (Network set)".
- "\$\frac{\text{\text{\$\line{1}\text

- At downloading, the confirmation display might appear asking whether to send the "serial number of your mobile phone/UIM". Select "YES" to start downloading. In this case, the "serial number of your mobile phone/UIM" is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Provider) or others by this operation.
- If you attempt to re-download the software program that was downloaded using a different UIM, the confirmation display appears asking whether to overwrite the software program. With the Osaifu-Keitai compatible i-oppli, the confirmation display appears telling that the data on the IC card is to be deleted. Select "YES" to start downloading. When downloading ends, the software program that was downloaded using a different UIM and the data on the IC card are deleted.
- You cannot download some software programs while the IC card function is working or IC Card Lock is activated.
- Some software programs that start immediately after downloading cannot be saved.
- Depending on the data volume on the IC card, you might not be able to download Osaifu-Keitai compatible i-oppli even if there is still available space for software storage. Delete the displayed software programs following the confirmation display, and then download it again. (Some software programs might not be targeted for deletion, depending on the software type to be downloaded.) Depending on the software program, you need to start it and delete the files on the IC card before deleting the software program itself.
- You can save up to 1 Mbyte per i-oppli program.
- "i-αρρli mail" is the mail sent and saved by mail-linked i-αρρli and mail received as mail-linked i-oppli, i-oppli mail is automatically saved to the i-oppli mail folder.
- The 3D polygonal\* engine enables cubic images to be displayed in i-oppli. \*By combining polygons, a deep, cubic image is displayed.

# **Display Software Info**

You can display software information when downloading i-oppli.

⊳ ຣູີ -αppli⊳ ຣູີ -αppli settings⊳ Disp. software info Display or Not display

#### <i-oppli Run>

# Starting i-appli

(ig of the second) (ig of the second) Select a software program to be started.

: Osaifu-Keitai compatible i-oppli

Management information i-oppli

: microSD memory card compatible i-oppli

: i-copli DX

Mail-linked i-oppli

Partially saved i-oppli

: Set for Auto Start

: Set for the i-oppli Stand-by display

: Set for both Auto Start and the i-oppli Stand-by display

: Can set for the i-oppli Stand-by display

: Downloaded from an SSL page

: Downloaded or upgraded by using a different UIM

• You can display the Software List on the microSD memory card by MENU ► A -coppli ► A -coppli(microSD) ► SW list(microSD).

• Each time you press (Change) from the Software List in the FOMA phone, the display format changes.

• When you start an i-oppli DX program or while it is running, the confirmation display might appear asking whether to permit the i-oppli DX program to use the FOMA phone's information and functions.

- When you select a partially saved i-αppli program, you can download the remaining part of it.
- "" or " de" is displayed while i-αppli is running.
- To end i-oppli, press and hold (CLR) for at least one second or press (3): then select "YFS"
- The software program you started last time comes at the top of the list. You cannot manually change the order of software programs.
- See page 169 when you select "Search by i-mode".



## **Bring up IC Card List**

You can list up Osaifu-Keitai compatible i-oppli programs.

**→** Osaifu Keitai IC card content

• See page 169 when you select "Search by i-mode".



#### Information

- When a software program to be started is not specified, select a software program.
- To start up i-oppli DX, set the data and time by "Set time" beforehand.
- When a software program is running, melodies are played back at the volume set for "Phone" of "Ring volume". However, melodies are not played back during a call.
- You may need to set the communication setting while a software program is running.
- When communicating frequency is extremely high in a certain period of time while i-αppli is running, the confirmation display appears asking whether to continue communicating.
- With some software programs, you can use the Web To function and the Phone To/AV Phone To function from i-oppli. However, you cannot use them while the software program is running as the i-oppli Stand-by display.
- If you start the camera from i-oppli, the shot images are not saved with ordinary images, but are saved as part of i-oppli for its usage.
- If you start the camera from i-αppli, you can specify the image size or image quality for some i-αppli programs.
- You can scan QR codes and JAN codes from i-αppli using the camera. The scanned data is saved and used by the software program.
- Images<sup>※</sup> that are used by i-αppli and data you have entered might be sent over the Internet to the server automatically.
  - %i-oppli uses the following types of images:
    - · Images shot by the camera after it is started from a camera-linked application program
    - · Images obtained by the infrared data exchange function of i-oppli
  - · Images downloaded from sites or Internet web pages
  - · Images obtained from Data Box by i-αppli
- i-αppli mail running under mail-linked i-αppli might not be displayed correctly.

#### Information

 
- You can save the data files of some software programs to the microSD memory card, but you might not be able to use them for another model. You can check "

  " appli(microSD)" for the software programs that use the microSD memory card.
- Some IPs (Information Providers) may access the software program stored in your mobile phone and have it directly halted, depending on the software program. In that case, you will not be able to start or upgrade the software program, or use it for the Stand-by display. You can delete it or display the software information. To resume running the software program, you need to receive the communication to cancel the software halting state. Contact the IP (Information Provider) to inquire about that.
- Some IPs (Information Providers) might send data to the software program stored in your mobile phone depending on the software program.
- When the IP (Information Provider) requests to halt or re-open the software program or sends data to it, the mobile phone communicates and "[]" is displayed. In this case, you are not charged a communication fee.
- To creators of i-oppli
- If you encounter an error while creating a software program, the Trace Information display might help identify the problem.

For how to check the trace information, see "Trace Information" on page 232.

#### **Trace Information**

You can check the details when a software program malfunctions.



- When the memory space for Trace Info becomes full, the information is overwritten from the oldest one.
- You can operate "Copy info" and "Delete info" from the Function menu.

# **Security Error History**

You can check the details when an i- $\!\alpha\!ppli$  program ends because of a security error.

- 1 ் மால் > இ -ஷpli > இ -ஷpli info > Security error history
  - $\bullet$  You can operate "Copy info" and "Delete info" from the Function menu.

# Function Menu of the Software List/IC Card List

Function menu	Operation/Explanation
Set 🖁 oppli To	You can set whether to permit the i-αppli program to start from links on sites or mail. You can also set whether to start the i-αppli program when you place the FOMA phone over an IC card compatible scanning device. You can set this for each software program.  ▶ Put a check mark for items to be set ► ☒ (Finish)  • Some items might not be set depending on the software program.
Auto start time	See page 243.
Software setting (Stand-by set)	See page 243.
Software setting (Network set)	You can set whether to communicate while i-oppli is running.  ▶ Network set▶ ON, OFF or Check every start  ▶ [Since   Finish]  • If you select "Check every start", the confirmation display appears each time you start it.
Software setting (Stand-by net)	See page 244.
Software setting (Icon info)	You can set whether to permit the i-αppli program to use information of icons indicating i-mode mail, SMS messages, Messages R/F, battery level, Manner Mode, and within/out-of service area.  ▶ Icon info▶ ON or OFF▶ (Finish)

(Change mld./img.) for ring tones or the Stand-by display. This function is available only for i-cppli DX.  Change mld./img. ON, OFF or Check every change  (Finish)  If you select "Check every change", the confirmation display appears each time you change the setting for ring tones and the Stand-by display from i-cppli to refer to the Stand-by display from i-cppli to refer to the Phonebook, Redial, and Received Calls. This function is available only for i-cppli DX.  See P. book/hist. ON or OFF ☑ (Finish)  Software setting (View ToruCa)  You can set whether to permit the i-cppli to refer to ToruCa files. This function is available only for i-cppli DX.  View ToruCa ON or OFF ☑ (Finish)  Software info  You can display the software name and version of the i-cppli.  Upgrade  YES  Add desktop icon  Delete (Delete this)  Delete programs to be deleted ☑ (Finish) YES  Delete (Delete all)  Move to microSD  See page 300.  Move to phone  See page 300.  Power saver  You can set whether to validate Power Saver Mode for each i-cppli program for when "cPower saver" is set to "ON".	Function menu	Operation/Explanation
(See P. book/hist.) Phonebook, Redial, and Received Calls. This function is available only for i-coppli DX. See P. book/hist.▶ ON or OFF▶ ☑(Finish)  Software setting (View ToruCa) (View ToruCa) View ToruCa ► ON or OFF▶ ☑(Finish)  Software info You can display the software name and version of the i-coppli.  Upgrade YES  Add desktop icon See page 114.  Delete (Delete this)  Delete (Delete selected) Delete (Delete selected) Delete (Delete all)  Delete all ► Enter your Terminal Security Code YES (Delete all)  Move to microSD See page 300.  Power saver  You can set whether to validate Power Saver Mode for each i-coppli program for when "cPower saver" is set to "ON".		only for i-oppli DX.  ► Change mld,/img. ► ON, OFF or Check every change  ► (Finish)  • If you select "Check every change", the confirmation display appears each time you change the setting for ring tones and
(View ToruCa)  files. This function is available only for i-oppli DX.  View ToruCa No or OFF (Finish)  Software info  You can display the software name and version of the i-oppli.  Upgrade  YES  Add desktop icon  See page 114.  Delete (Delete this)  Delete (Delete selected)  Delete e (Delete selected)  Delete e (Delete all)  Enter your Terminal Security Code YES  Move to microSD  See page 300.  Move to phone  See page 300.  Power saver  You can set whether to validate Power Saver Mode for each i-oppli program for when "oPower saver" is set to "ON".		Phonebook, Redial, and Received Calls. This function is available only for i-αppli DX.
Upgrade  Add desktop icon  See page 114.  Delete (Delete this)  Delete selected  Delete programs to be deleted  □(Finish)  YES  Delete all  Delete all  Enter your Terminal Security Code  YES  YES  Delete all  Move to microSD  See page 300.  Move to phone  See page 300.  Power saver  You can set whether to validate Power Saver Mode for each i-oppli program for when "oPower saver" is set to "ON".		files. This function is available only for i-oppli DX.
Add desktop icon See page 114.  Delete (Delete this)  Delete e Delete selected Put a check mark for software (Delete selected)  Delete programs to be deleted (Firits) YES  Delete Delete all Enter your Terminal Security Code YES (Delete all)  Move to microSD See page 300.  Move to phone See page 300.  Power saver You can set whether to validate Power Saver Mode for each i-oppli program for when "oPower saver" is set to "ON".	Software info	You can display the software name and version of the i-oppli.
Delete (Delete this)  Delete (Delete selected Put a check mark for software programs to be deleted □(Finish) YES  Delete (Delete all)  Delete all Enter your Terminal Security Code YES (Delete all)  Move to microSD See page 300.  Move to phone See page 300.  Power saver You can set whether to validate Power Saver Mode for each i-oppli program for when "oPower saver" is set to "ON".	Upgrade	▶YES
Delete this     Delete   Delete selected Put a check mark for software     Delete selected   Put a check mark for software     Delete selected   Put a check mark for software     Delete   Delete all   Enter your Terminal Security Code YES     Delete all   Enter your Terminal Securi	Add desktop icon	See page 114.
Delete selected   programs to be deleted   ∞ (Finish)   YES		▶ Delete this ▶ YES
(Delete all)  Move to microSD See page 300.  Move to phone See page 300.  Power saver You can set whether to validate Power Saver Mode for each i-oppli program for when "oPower saver" is set to "ON".	- 0.0.0	
Move to phone         See page 300.           Power saver         You can set whether to validate Power Saver Mode for each i-αppli program for when "αPower saver" is set to "ON".		▶ Delete all ▶ Enter your Terminal Security Code ▶ YES
Power saver  You can set whether to validate Power Saver Mode for each i-oppli program for when "oPower saver" is set to "ON".	Move to microSD	See page 300.
i-αppli program for when "αPower saver" is set to "ON".	Move to phone	See page 300.
▶ ON or OFF	Power saver	i-αppli program for when "αPower saver" is set to "ON".

#### <Software setting (Icon info)>

- When you set "Software setting (Icon info)" to "ON" for the i-oppli Stand-by display, the icon information for unread mail/message, battery level, Manner Mode, radio wave strength and out-of-service area can be sent to the IP (Information Provider) over the Internet in the same way as the serial number of your mobile phone/UIM, and can be deciphered by third parties.
- When the software program needs "Software setting (Icon info)", the software program might not run if "OFF" is selected.

#### <Upgrade>

- Depending on the software program, you can upgrade it at start.
- At upgrading, the confirmation display might appear asking whether to send the
  "serial number of your mobile phone/UIM". Select "YES" to start upgrading. In this
  case, the "serial number of your mobile phone/UIM" is sent to the IP (Information
  Provider) over the Internet, so could be deciphered by third parties. However,
  your phone number, address, age, and gender are not notified to the IP
  (Information Provider) or others by this operation.
- You cannot upgrade the mail-linked i-αppli in the following cases:
   While details of the corresponding i-αppli mail folder are displayed
- · While Mail Security is set
- ·When Mail Security is set for the corresponding i-oppli mail folder

#### When you delete mail-linked i-αppli

The confirmation display appears asking whether to delete the i- $\alpha$ ppli mail folder as well. If you do not delete it, you can check the text of mail from the Outbox/Inbox List.

YES . . . . . Deletes both the software program and the i- $\alpha$ ppli mail folder.

NO . . . . . Deletes the software program only and the i-oppli mail folder is left.

Cancel . . . Does not delete both the software program and i-oppli mail folder; the former display returns.

- You can delete neither the i-oppli program nor the i-oppli mail folder even if you select "YES", in the following cases:
  - · While displaying details of the folder
  - · While Mail Security is set
  - · While the folder is set with security
  - $\cdot$  When the folder contains protected mail

# When you delete an i- $\alpha$ ppli program whose files are on the microSD memory card

The confirmation display appears asking whether to delete files on the microSD memory card as well.

YES. . . . Deletes both the software program and files on the microSD memory card. Press "YES" again on the confirmation display. You need to enter your Terminal Security Code to execute "Delete" or "Delete selected".

NO. . . . . Deletes the software program only and the files are left.

Cancel... Does not delete both the software program and files on the microSD memory card, and the former display returns.

#### When you delete Osaifu-Keitai compatible i-αppli

The confirmation display appears telling that the files on the IC card will be deleted.

- You might not be able to delete the Osaifu-Keitai compatible i-oppli unless you delete the files on the IC card after starting the Osaifu-Keitai compatible i-oppli.
- You might not be able to delete the Osaifu-Keitai compatible i-αppli while the IC card function is working or IC Card Lock is set.

# Pre-installed i-oppli Programs

#### The following i-oppli programs are pre-installed:

- You can delete the pre-installed i-oppli programs. You can re-download them from the "P-SQUARE" site (see page 170). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 38) are set to them.
- Deadlines for re-download services
  - ・"七田式!記憶耳アプリ (Shichida Method! Memory Ear Application)": the end of December, 2011
- ・"旺文社漢検アプリ for P (Obunsha Kanji Test Application for P)": the end of January, 2012
- ・"もじリスヘキサ (Mojiris Hexagon)": the end of January, 2012 ・"カウントダウントレイン-P (Countdown Train-P)": the end of January, 2011
- The re-download service might be halted or closed without notice even in the service period.
- Deadlines for downloading i-αppli additional data
- ・"七田式!記憶耳アプリ (Shichida Method! Memory Ear Application)": the end of January, 2012
- ・ "カウントダウントレイン-P (Countdown Train-P)": the end of February, 2011

#### 七田式!記憶耳アプリ (Shichida Method! Memory Ear Application)

An epoch-making application program that enables you to train your right brain through hearing, which has been designed based on the ideas of Dr. Shichida.



© SHICHIDA CHILD ACADEMY KANDOU SEIKATSU CLUB

# Software List▶記憶耳アプリ (Memory Ear Application)

- When "N(")" or another appears at the lower right of display, press to adjust the sound volume.
- 🤈 Select a menu item.

トレーニング (**Training**) ....Memorize numbers to train your retentive memory. Go to step 3.

耳パワー分析 (Hearing ability analysis)

マイデータ (My data)......You can check the graph for the record up to the

current point.

ヘルプ (Help) . . . . . . . . Displays how to play the game or the explanation of the effect.

WEBサイトへ (WEB site) . . . Accesses to "七田式耳パワー (Shichida method hearing ability)" site. Displays how to play the

game and other hearing training applications.

Select an item.

プレイする (Play the game) . . . . . . . . Starts the game.

効果を確認する (Confirm the effect) . . . Checks the effect of the game.

Use to select a step.

#### Information

- You are separately charged a packet communication fee to connect to the web site.
- Note that the effect of training has its variation among people, and that it is not necessarily guaranteed.

#### 旺文社漢検アプリ for P (Obunsha Kanji Test Application for P)

You can enjoy abundant questions of pre-level 2 of the Kanji Aptitude Test.



"漢字検定" and "漢検" are trademarks of Japan Kanji Aptitude Testing Foundation.

© Obunsha Co., Ltd © MTI, Ltd

## 【 Software List▶旺文社漢検アプリ\_P (Obunsha Kanji Test Application for P)

Select a menu item.

とことん漢検 (Intensive kanji test)

.... Do exercises of the pre-level 2 by genre.

漢検チェッカー (Kanji test checker)

. . . . Check to see if you attain the pre-level 2 of the Kanji Aptitude Test.

達成度確認 (Confirm the achievement level)

....Check the number of your answers and the ratio of correct answers by genre. 漢検日記 (Kanji test diary)

.... Check a proceeding state on the application program that is automatically recorded. 各種設定 (Respective settings)

.... Make the game settings or reset the application.

.... Make the game settings of reset the applic 使い方・ヘルプ (Guide/Help)

.... Displays the explanation of the application and how to play it.

You can display each setting and Help also by pressing (■□)

#### もじリスヘキサ (Mojiris Hexagon)

This is a word puzzle game to create words by shooting a character block into space and combining it with character blocks arranged beforehand. The created words are then erased.

Try to create as many words as possible so that the character blocks do not reach the bottom.

Two-to-four-character words can be erased.

For details, refer to " ${\sim} \mathcal{N} \mathcal{I}$  (Help)" in the menu.



© 2007 NBGI

# **1** Software List▶もじリスヘキサ (Mojiris Hexagon)

- You can adjust the sound volume by pressing \( \frac{\frac{1}}{\frac{1}{2}} \).
- You can select the item by pressing
- You can select "ヘルプ (Help)" or "コンフィグ (Configuration)" by pressing (水ニー).
- Press

#### Key operation for playing a game

- . . . Drops the character blocks.
- ... Suspends the game.
- Shifts the gun sight to the right or left to shoot character blocks.
- ☑ . . . Returns to the title display. 
  ☐ . . . Shoots the character blocks.

#### カウントダウントレイン-P (Countdown Train-P)

You can download the time schedule of trains, and can count down the departure time of the train you want to catch on a minute/second basis. The alarm function is also provided to notify you of 5 to 30 minutes before the departure. You can update the time schedule from the menu so the latest one is always available.

For details, refer to "\lumber ("\lumber \lumber )" in the menu.



Powered by JR Travel Navigator

- Software List >カウントダウントレイン-P (Countdown Train-P)
- 2 Read "免責事項 (Exemption clause)" thoroughly ▶ (( 次へ ) ▶ はい (YES)
- - You do not need to enter the whole station name.
- Select a station name Select a line and destination

#### Information

 You are separately charged a packet communication fee to store/update the time schedule data.

#### - 地図アプリ (Map Application)

"地図アプリ (Map Application)" is the i-appli program that enables you to use Open i-area for checking your current location, to see the map for the specified location, or to check the routes to your destination.

You can easily get transfer information by voice input.

- You are advised to subscribe to Pake-Houdai/Pake-Houdai Full service for using this software program.
- If you delete this software program and then when you want to resume it, download it from "i エリアー周辺情報ー (i-area -Local Information-)".
- This software program is the i-oppli program that uses the mail function, so it is not available when the mode of 2in1 is set to B Mode.
- Note that we are not held responsible for the accuracy and promptness of the map and route information.
- While driving, ensure that a person other than the driver operates this software program.

#### Standard and optional services

The standard and optional services are available with this software program.

Standard service: Provided by DoCoMo (charge free).

Optional service: Provided by ZENRIN DataCom (charged).

You can use the optional services charge free except traffic information for up to 90 days from when you have started this software program for the first time. To use the optional services from 91 days on, you need to register yourself as a member of ゼンリン 企 地図+ナビ (ZENRIN/map+navi)" (charged) provided by ZENRIN DataCom.

Even when you register yourself as a member while you are using this software program, you do not need to re-download it. You can use the software program as it is.

Menu	Descriptions	Up to 90 days	From 91 days on
このあたりの場所 (Around here)	<ul> <li>You can use Open i-area to see the map for your current location or send the map by mail.</li> </ul>	Free	Free
周辺を調べる (Check nearby area)	You can check the details of shops, facilities, or iD member stores in the area where you are currently in or you specify, and can obtain coupons from gournet information.     You can check nearby weather status or spare spaces in parking lots.	Free	Free
地図を見る (See map)	<ul> <li>You can enter a keyword, genre, address, or phone number to see the map.</li> </ul>	Free	Free
	<ul> <li>You can check the points stored in this software program or on the server or check the map for the points retrieved by the previous search.</li> <li>After the storage on the server, the stored points can be shared with your personal computer.</li> </ul>	Free	Charged

Menu	Descriptions	Up to 90 days	From 91 days on
ルートを探す (Search for route)	You can search for the route to the destination by vehicle, on foot, or by car. You can search for the route easily to your home you have stored.	Free	Charged
乗換案内 (Transfer guide)	You can check the train transfer guides and timetables.     You can check the map for train routes and set an alarm before your departure.	Free	Charged
おしゃべり検索 (Voice search)	<ul> <li>By voice input, you can easily check the details of your nearby area or see the map.</li> </ul>	Free	Free
	By voice input, you can easily get transfer information.	Free	Charged
設定 (Settings)	You can set how to show the map, and check how to use them.	Free	Free

#### ■ "地図アプリ (Map Application)" TOP display and its operation

The respective menus are displayed on the TOP display. When you close the menu, the map retrieved by the last search appears.

- The displays are for reference, so the actual ones might differ
- At the first start-up, the usage rules and caution items on use are displayed.



TOP display

#### ♦When 91 days have passed without registering yourself as a member

At the first start-up on or after 91 days, the message telling that your privilege to use the functions is limited, and the message that refers to the member registration site appear. The same messages appear when you select a menu for optional services.

※To register yourself as a member, access "ゼンリン ๋ 地図 +ナビ (ZENRIN/map+navi)" via this software program.



#### ■ Map display and its operation

#### ♦Key operation when the map is shown

Key operation	Action
[メニュー (Menu)]	Shows the menu.
•	Shows the quick access menu.
[拡縮 (Enlarge/ Reduce)]	Shows the scale bar. To enlarge the display, press つ, and to display the details, press ②. Press [家開じる (close)] to fix the scale and clear the bar.
	Moves the map up, down, left, and right.
CLR	Closes the menu, or returns to the point retrieved by the first search.
*	Turns the map to the left.
0	Turns the map northward.
#	Turns the map to the right.



© ZENRIN DataCom CO.,LTD, 2007

#### ◆Key operation when the quick access menu is shown

Key operation	Action
○[周辺を調べる (Check nearby area)]	Checks the details of the nearby area mainly on the displayed map.
□[□□へのルート (Route here)]	Specifies the start point and searches for the route to the center of the map.
□[ココを送信 (Send here)]	Sends the URL for the displayed map by i-mode mail.
O [ココを登録 (Store here)]	Stores the location information of the center of the map in this software program or on the server. When you store it on the server, the stored point can be shared with your personal computer as well.
[地図へ (To map)]	Closes the quick access menu.
<u>1</u> [パノラマ (Panorama)]	Shows the point from where panoramic images can be viewed. Select the point to display panoramic images.
<b>②</b> [ビル/テナント (Building/Tenant)]	Shows the buildings around and can click to check the tenants in the buildings if any.

#### ■ The Search Result display for the nearby area details and its operation

- The display is for reference, so the actual one might differ.
- The display and operation are for when you show the search result on the map, not for when you select it on the list.

#### ◆The Search Result display for the nearby area details

\*When the cursor is not placed over the shop retrieved by the search, the quick menu appears.

◆Key operation when the Search Result display for the nearby area details is shown

Key operation	Action
•	Confirms detailed information about search results.
	Moves the map up, down, left, and right.
5	Re-searches the center area of the map being displayed.
4	Shows the previous search results.
6	Shows the next search results.
[メニュー (Menu)]	Shows the menu.
in [拡縮 (Enlarge/ Reduce)]	Shows the scale bar. To enlarge the display, press 〇, and to display the details, press ②. Press 範閣以る (close)] to fix the scale and clear the bar.



© ZENRIN DataCom CO.,LTD. 2007

#### **Searching for Routes to Destination**

You can specify the start point and destination, and search for the route. The routes you can go through on foot, by public transportation, or by car are displayed.

- 【 Map View display▶ ☑ [メニュー (Menu)]▶ルートを探す (Search for the route)
- 🤈 出発地 (Start point)▶Select a setting method.

このあたり (Around here)

- $\ldots$  . Uses Open i-area to measure the approximate location and set it.
- フリーワード検索 (Keyword search)
- ... Searches and sets the start point by keywords.

地図上で指定 (Specify on map)

... Specify the start point on the map.

TEL/ 〒検索 (TEL/ZIP code search)

... Searches to set the start point by the phone number or zip code.

住所一覧から (From address list)

... Select the address to set the start point.

ジャンルから (From genre)

... Select a genre to set the start point.

履歴から (From record)

... Set the start point on the map previously displayed.

#### 登録地点から (From stored point)

... Set the start point from the location information stored in this software program or on the server.

#### 自宅 (Home)

... Set the start point from the location information of your home.

#### 出発地の確認 (Confirm start point)

. . . Confirm information about the start point.

# **3** 目的地 (Destination)▶Set the destination by same operation as that of step 2.

# / 時間指定 (Specify time) Select an item.

現時刻で指定 (Specify by current time)... Searches for the route by the current time. 出発時刻指定 (Specify start time).... Specifies the start time and searches for the route. 到着時刻指定 (Specify arrival time).... Specifies the arrival time and searches for the route. 接電を利用 (Use last train)... Searches for the route by the last train of the day.

# \_\_\_条件設定 (Set conditions)▶Select conditions

❤ ▶上記で設定 (Fix as specified above)

#### 乗換条件 (Transfer conditions)

... Select transfer condition from <sup>\*</sup>早い (Fast)", "安い (Cheap)", and "楽々 (Easy)". 徒歩ルート (Foot route)

.... Select a foot route from "おまかせ (Free)", "屋根多い (Many roofs)", and "階段少ない (Less stairs)". で 特急利用 (Use special express)

.... Select whether to use special expresses for even when the total distance is less than 100 km. 通常利用車種 (Ordinary type of vehicles)

... Select a type of vehicle.

# 🧲 ルートを検索 (Search for a route)

楽 (Easý): Transfer is less.

オススメ (Recommendable): Route provided with three conditions, "早 (Fast)", "安 (Cheap)". and "楽 (Easv)".

有料 (Charged): Route by car using toll roads

一般 (Ordinary): Route by car using ordinary roads

● To store the route, select "ルートを登録 (Store route)".

# <mark>フ</mark>ルートを選択 (Select a route)▶ルート確認 (Confirm route)

- To confirm the route, select "ルート確認 (Confirm route)".
- To check the timetable, select "時刻表 (Timetable)".

#### ■ Route (Car) display and its operation

- The display is for reference, so the actual one might differ.
- ♦Key operation when a route is shown

		7337
Key operation	Action	(a)
<b>図</b> [メニュー (Menu)]	Ends displaying the route and shows the TOP menu.	and man 4
•	Shows the quick access menu.	
ix[拡縮 (Enlarge/ Reduce)]	Shows the scale bar. To enlarge the display, press ①, and to display the details, press ②. Press 配別じる (Close)] to fix the scale and clear the bar.	
	Moves the map up, down, left, and right.	* GXSTR
CLR	Returns to the current location.	
2	Switches to intersection mode.	Route (Car) View dis
*	Turns the map to the left.	` ´
0	Turns the map northward.	The route to the destination is
#	Turns the map to the right.	displayed.
	@ ZENDIN D-4	-C CO LTD 000

© ZENRIN DataCom CO.,LTD. 2007

#### ◆Key operation when the quick access menu is shown

Key operation	Action
☐[結果&設定 (Result&Settings)]	Shows the search result of the route (time and fare, and others), or sets the route.
[経由地を設定 (Point setting)]	Searches for the route by adding up to three points you go through to the destination.
ロ[リルート(Re-route)]	Searches for the route from the current point to the destination again.
1 [ルート消去 (Clear route)]	Clears the route being displayed.
②[モード切替 (Switch mode)]	Switches to the intersection mode.

## Using おしゃべり検索 (Voice search)

By voice input, you can easily check the details of your nearby area, get transfer information, or see the map from the voice search menu. Example: When using おしゃべり検索 (Voice search) to check the details of your nearby area

# 【 Top display▶おしゃべり検索 (Voice search)

▶周辺を調べる (Check nearby area)

How to input your voice is displayed.

## 2 Explanatory display for voice input ▶音声入力開始 (Start voice input)

The display for voice input appears. After the Voice Input display appears, speak Japanese about the details of nearby area you want to search. Example: "Konoatari-no Konbini" (nearby convenience store)



A confirmation display appears after your voice is recognized.

When the recognition result is wrong, select "音声再入力(Re-input voice)".

#### **Using Settings and Help**

# <mark>1 Top display▶設定 (Settings)</mark>

▶設定・ヘルプ (Settings/Help)▶Select an item.

Item	Action
	You can check whether you are registered as a member of "ゼンリン <b>命</b> 地図+ナビ (ZENRIN/map+navi)".
α基本設定 (α Standard settings)	You can perform the overall settings of the software program such as specifying map display color or font size.
ルート検索設定 (Route search settings)	You can perform the overall settings of the route search.
★ 自宅設定 (Home setting)	You can register the location of your home.
履歴系クリア (Clear records)	You can clear the records of the map or route used.
使い方の説明/よく ある質問/利用規約 (Explanation about how to use/FAQ/Usage rules)	rules.

# 楽オク出品アプリ2 (Rakuoku Exhibition Application 2)

"楽オク出品アプリ2 (Rakuoku Exhibition Application 2)" enables you to easily exhibit your goods on Rakuoku whenever you want wherever you are. Even if you are a beginner, an instruction guides you through exhibition procedures, so you can use it easily. The convenient functions such as shooting/editing photos and saving records are available so that you can exhibit your goods in a shorter time than you do on sites.

#### PRO u Not available

- You need to agree with "利用規約 (Usage rules)" for the first time.
- You are separately charged a packet communication fee.
- For details on Rakuoku, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- To exhibit on Rakuoku, you need to register with the Rakuten membership and exhibitor membership.
- For the information about Rakuoku, refer to

i-mode site.

QR code for accessing the site



りアプリバンキング

(2) 南南 田田田銀行

\*The display is for reference.

The actual one may differ.

#### i アプリバンキング (i-∞ppli Banking)

This is an i-oppli program that enables you to conveniently use mobile banking. Mobile banking enables you to use your FOMA phone to check the account balance, check the deposits/withdrawals, and transfer/shift money whenever you want and wherever you are. By entering your specified password at the start of this application program, you can use the mobile banking services for up to two banks.

- To use mobile banking, you need to have the bank account and subscribe to the mobile banking service of each bank
- You are separately charged a packet communication fee.
- For details on the i-oppli Banking, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- For the information about i-oppli Banking, refer to i-mode site.

i-mode site: 

Menu→メニュー/検索 (Menu/ Search)→モバイルバンキング (Mobile Banking)→ i アプリバンキ ング (i-coppli Banking)

OR code for accessing the site





The display is for reference. The actual one may differ.

# FOMA 通信環境確認アプリ (FOMA Communication Environment Check Application)

"FOMA 通信環境確認アプリ (FOMA Communication Environment Check Application)" enables you to check whether the FOMA phone is available at the FOMA High-Speed Area.

- Use "FOMA 通信環境確認アプリ (FOMA Communication Environment Check Application)" with your consent to "ご利 用の注意 (Cautions in use)".
- Depending on the communication environment (such as weather, radio wave conditions, network congestion state) at communication environment check, the different result or "out of service" might appear even in the same area or at the same period of time.
- You might not be able to check correctly if you use another function while using this application program.



\*The display is for reference. The actual one may differ.

## Gガイド番組表リモコン (G Guide Program List Remote-controller)

This is a convenient application program that bundles the TV program list and AV remote-controller function and the monthly charge is free. Anytime and anywhere you are, you can easily obtain the

terrestrial digital, terrestrial analog or BS digital TV program information for the desired time zone. You can know about titles, contents, and start/end times of TV programs. If there is any program you want to watch, you can set timer recordings of the program on a DVD hard disk recorder over the Internet. (You need to have a DVD hard disk recorder that supports the remote timer recording function. And you need to perform initial settings of this application program.) Further, you can search for the program information by keywords such as program genres or celebrities you like. You can also remote-control a TV, video recorder, and DVD player. (Some models are not supported.)

- See "Using Infrared Remote-controller Function" on page 310 for details on the infrared remote-controller.
- You need to make the initial settings and to agree with the usage rules for the first time.
- You are separately charged a packet communication fee.
- To use this application program overseas, set the date/time for the FOMA phone to Japan time.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- "Gガイド番組表リモコン (G Guide Program List Remote-controller)" is a mail-linked i-oppli program, so you cannot use it in B Mode of 2in1.



The actual one differs

Local programs according

to your region appear on

your display.

#### About remote timer recording function

If you have a DVD hard disk recorder that supports the remote timer recording function, you can set timer recordings from the program list of this application program over the Internet even if you are away.

For remote timer recording, you need to make initial settings of this application program.

#### How to make initial settings

- 1. Set the Internet connection for the DVD hard disk recorder.
- (Refer to the instruction manual of the DVD hard disk recorder you use.)

  2. Software List タガイド番組表リモコン (G Guide Program List Remote-controller)
- ▶ ( 火ュー ) ▶ リモート録画予約 (Remote timer recording)
  - Operate following the guidance.

#### How to set timer recordings

After the initial settings, specify your desired program and select "リモート録画予約 (Remote timer recording)". Then, the DVD hard disk recorder specified on this application program is connected via the Internet, and you can set timer recordings.

• You are separately charged a packet communication fee.

#### iD設定アプリ (iD Setting Application)

Chargeless electronic money "iD" is a service that enables you to do shopping by placing your Osaifu-Keitai or a credit card with "iD" mounted over a scanning device. You can do shopping easily and conveniently without signing. Depending on the card publishing company, cashing is also supported.

- For using "iD", you need to subscribe to a card publishing company that supports "iD" as well as to have
   Osaifu-Keitai on which specified settings have been completed by the iD application program and card application program provided by the card publishing company, or a credit card on which "iD" is mounted.
- When you use "iD" on Osaifu-Keitai, start the iD

  application program, agree with "ご利用上の注意 (Cautions
  in use)", and then complete the specified settings at the iD application program
  end. Then download or start the card application program, and perform the
  specified settings at the card application program end.
- The expense (annual fees, etc.) charged for the iD service differs depending on the card publishing company.
- You are charged a packet communication fee for downloading the iD application program, and the card application program.



X The display is for reference.
The actual one may differ.

• For the information about "iD", refer to the i-mode site of "iD"

QR code for accessing the site



#### DCMXクレジットアプリ (DCMX Credit Application)

"DCMX" is a credit service that supports "iD" and offered by NTT DoCoMo Group. DCMX provides DCMX mini that enables you to use up to ¥10,000 per month and respective DCMX services that enable you to use more amount and save up DoCoMo points.

With "DCMX mini", you can easily make a subscription from this application program and immediately use Mobile Phone Credit.



%The display is for reference.
The actual one may differ.

#### Subscribing for membership/Screening \*1

#### Setting card information

#### Use

No troublesome deposit is required! Just by placing the setup completed mobile phone over the scanning device at a shop, you can enjoy shopping without signing\*\*3.

#### Check \*2

You can check, on the application program, the balance for the current month and detailed account!

#### Change

When updating your card or changing models, you can apply from the application program.

- ※1 The online screening is conducted at your subscription for DCMX mini. For subscribing to a service other than "DCMX mini", you are connected to the subscription page for i-mode.
- %2 The checking function for usage status and others is available for "DCMX mini" only.
- 3 You might be required to enter your pin number under certain conditions.

 For service contents and details of subscriptions, refer to the i-mode site of DCMX.

· i-mode site: 

Menu→DCMX iD



QR code for accessing the site

#### Information

- To start this application program for the first time, you need to agree with "ご利用上 の注意 (Cautions in use)".
- You are charged a packet communication fee for settings and operations.

#### ■ Cautions on Osaifu-Keitai compatible i-αppli

Note that we take no responsibility for any information set on your IC card.

< a -cappli Settings>

# Setting i-oppli

1 ເພລາ ຣີ -αppli ຣີ -αppli settings Do the following operations.

Item	Operation/Explanation
Auto start setting	See page 242.
Disp. software info	See page 231.
Preferred tone	You can set which sound to be output preferentially, from MUSIC or i-αppli program, for when you start an i-αppli program during music playback.  ► MUSIC or 🖁 αppli
oBacklight	You can set the backlight operation for when an i-αppli program is running.  ▶ Select an item.  Depend on system Follows the setting of "Backlight".  Depend on software Follows the setting of each software program.  Constant light Lights constantly.

Item	Operation/Explanation
dPower saver	You can set to Power Saver Mode to decrease battery consumption by suspending the i-appli program temporarily for when you close the FOMA phone during i-appli running.  Nor OFF  This setting is valid from when an i-appli program starts until it closes. Even when this function is set to "ON", Power Saver Mode becomes invalid if "Power saver" that can be set for each i-appli program is set to "OFF".
αVibrator	You can set the vibrator operation for when an i-oppli program is running.  Depend on system or Depend on software Depend on system  Does not work regardless of the setting of "Vibrator". With some software programs, the vibrator works. Depend on software  Bepend on software
Check settings	You can check each of " $\frac{1}{6}$ -oppli settings".

#### Information

#### <@Backlight> <@Vibrator>

With some software programs, the backlight and vibrator settings are "OFF".
 Consequently, if you set "Depend on software", the backlight and vibrator will not work; if you want them to work, set "Depend on system".

# Starting i-oppli Automatically

You can make an i-oppli program start automatically at the set date and time. Set the date and time for automatic start using Auto Start Time.

#### **Auto Start Setting**

You can set whether to enable automatic start of i-oppli programs.

ୁ -ଉppli ⊜ -ଉppli settings > Auto start setting > ON or OFF

#### **Auto Start Time**

You can set the date and time for automatic start. You can set for up to three software programs.

Software List/IC Card List ► (FUNC

Put a check mark for an item to be set ► [ (Finish )

Time interval set . . . Starts at an interval specified by the software program.

The setting is completed.

Start time set . . . . . Starts at the set start time automatically.

3 Select start time▶Enter the date and time to be set.

1 time Select a type of repeat.

• If you select "1 time", the automatic start is not repeated.

 If you select "Weekly", put a check mark for days of the week to be set and press ((Finish)).

Fress (Finish).

#### **Auto Start Info**

You can check whether a software program has started automatically and properly. Also, you can check the information of start failure from IC card. Up to three records of automatic start, a record of automatic start set by i-oppli, and a record of start failure from IC card are stored.

StartO.....Started automatically and properly.

StartX . . . . Did not start automatically. When "Start" is displayed, you can press (a) (Start to start the software program.

Start- . . . . . Has not started yet.

#### Information

- Software programs do not start automatically in the following cases:
  - When the FOMA phone is turned off
     When the date and time are not set
     During Lock All
  - During Personal Data Lock

    During playback of animations/Flash movies

    When the time set for automatic start is identical to the reserved time set for
- "Software update". or the time set for an alarm of "Alarm". "Schedule" or "ToDo"
- When a start time has been specified to the same software program within 10 minutes from the previous auto-start
- If automatic start fails, " R appears on the desktop. Select the icon to bring up the Auto Start Info

## <i-∞ppli Stand-by Display>

# Operating i-oppli Stand-by Display

# Software Setting (Stand-by Set)

You can set an i-oppli program for the Stand-by display. Once set, the i-oppli Stand-by display automatically appears each time you bring up the Stand-by display.

Software List/IC Card List ▶ 🗐 🗷 ( FUNC

- ➤ Software setting ➤ Stand-by set ➤ ON or OFF
- $(\square)$ (Finish)
- is displayed for the software program set as the Stand-by display.
- " γ or " 🚜 " is displayed while an i-αρρli Stand-by display is running.

# To operate an i-αppli program as a normal i-αppli program when an i-αppli Stand-by display is running

From the i-oppli Stand-by display, press CLR.

"
"
" or "
"
" changes to a blinking "
" or "
"
" and then you can operate the i-oppli program as a normal one.

 To return to the i-oppli Stand-by display, press and hold CLR for at least one second or press (♠); then select "Ended". To release the i-oppli Stand-by display, select "Terminated", and select "YES".

#### Information

- If you turn off the FOMA phone while the i-αppli Stand-by display is running, the confirmation display appears asking whether to start the i-αppli program when you turn on the power again.
- You can set only one software program for the i-oppli Stand-by display.

- Some i-αppli programs cannot be set for the Stand-by display.
- With some software programs set as the i-oppli Stand-by display, you can press a key to go from the normal i-oppli status to the i-oppli Stand-by display status. However, you cannot return to the i-oppli Stand-by display if another menu function is running.
- Note that you might not be able to receive timely information if you have set
- You cannot use the Web To function and the Phone To/AV Phone To function from the i-oppli Stand-by display.
- If the software program which connects to the network is set for the i-αppli Stand-by display, it might not operate successfully because of radio wave conditions or other factors.
- When you bring up the Stand-by display while a menu function is operating, the image set for "Stand-by display" of "Display setting" will be displayed, even when the i-copil Stand-by display is set.
- When communicating frequency is extremely high in a certain period of time while an i-oppli program is running as the i-oppli Stand-by display, the confirmation display appears. When you press (CLR), the confirmation display appears asking whether to continue communication.
- If you set Lock All or Personal Data Lock when the i-αppli Stand-by display is shown, the i-αppli Stand-by display will end. If you set Lock All, the image set for "Stand-by display" of "Display setting" will be displayed and if you set Personal Data Lock, the default Stand-by display will be displayed. The i-αppli Stand-by display will return when you release each lock.

#### Software Setting (Stand-by Net)

"Software setting (Stand-by net)" to "OFF".

You can set whether to permit communication for when the i- $\alpha$ ppli Stand-by display is running.

Software List/IC Card List ► (FUNC )

► Software setting ➤ Stand-by net ➤ ON or OFF

► (Finish)

#### **End Stand-by Display**

You can temporarily end the running i-oppli Stand-by display. Also, you can release the i-oppli Stand-by display.

- **1** MENU ► Settings ► Display ► Display setting
  - ▶ Stand-by display ▶ End 🖁 αppli display
  - ► End or Terminate
  - When you select "Terminate", select "YES".

#### **End Stand-by Info**

When the i- $\alpha$ ppli Stand-by display does not end successfully, you can check the date/time and its reason.



• When "FUNC" is displayed on the End Stand-by Info display, press

[a](FUNC), and select "Copy info" to copy the information. Select "Delete info", and select "YES" to delete the information.

#### < a -oppli(microSD)>

# Displaying i-αppli Data Files on the microSD Memory Card

Depending on the i-oppli program, you can save its data files on the microSD memory card.

You can display the i- $\alpha$ ppli data files saved on the microSD memory card.

1 MENU ▶ 중 -αppli ▶ 중 -αppli(microSD) ▶ 중 αppli(microSD)

# Function Menu while i-αppli Data File is Displayed

Function menu	Operation/Explanation
Folder info	You can display the information of the software program that uses the selected folder, available/unavailable for folder usage, and the reason if unavailable.
Delete folder	You can delete the selected folder and files in the folder.  ▶ Enter your Terminal Security Code ▶ YES

# Osaifu-Keitai/ToruCa

What is Osaifu-Keitai?	24
What is iC Transfer Service?	24
Starting Osaifu-Keitai Compatible i-oppli	24
What is ToruCa?	24
Obtaining ToruCa Files Obtain ToruCa Files	24
Displaying ToruCa Files	24
How to See ToruCa File List/Detailed ToruCa File Display	25
Setting about ToruCa	25
Locking IC Card Function (IC Card Lock)	25

# What is Osaifu-Keitai?

The convenient i-mode function which uses the IC card function of the i-mode phone (i-mode FeliCa), or the i-mode phone with the IC card mounted is called "Osaifu-Keitai".

FeliCa is one of the non-contact IC technologies that enables you to read and write data just by placing it over a scanning device. Just by placing Osaifu-Keitai over the scanning device in a shop, you can pay by electronic cash or use it as an air ticket or reward card. Mobile phones have become one of easy-to-use tools.

Further, different from the existing FeliCa compatible non-contact IC card, the new one enables you to deposit electronic money by using the communication into the IC card inside the Osaifu-Keitai or to check your account for balance or usage details.

- \*\*To use Osaifu-Keitai compatible service, you need to make the settings from i-oppli (IC application) program which supports the IC card function [for details, inquire of IP (Information Provider)].
- \*\*For cautions on using each Osaifu-Keitai compatible service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- Data on the IC card might be lost or deformed owing to the malfunction of Osaifu-Keitai. (When we keep your Osaifu-Keitai for repair, we cannot keep it with data files left, so the data files shall be deleted beforehand by yourself as a rule.) Use the backup service of the IP (Information Provider) for supports such as reissue, restoration, temporary storage or transfer of data files, except for the data transfer by iC transfer service. The availability of backup services and their usage conditions (necessary applications, charges, etc.) and the support availability of iC transfer service differ depending on the service. Contact the IP (Information Provider) beforehand. For your important data files, be sure to use the service with backup support.
- In any case including malfunction or model change, we cannot be held responsible for the loss or deformation of data on the IC card or other losses caused regarding Osaifu-Keitai compatible services.
- If your Osaifu-Keitai has been stolen or lost, inquire of the provider for Osaifu-Keitai compatible service you use about ways of dealing with the trouble, immediately.
   With this FOMA phone, you can use Omakase Lock or IC Card Lock. (See page 123, and page 254)

# What is iC Transfer Service?

iC transfer service  $^{\otimes 1}$  is the service for transferring the data files on the IC card at a time  $^{\otimes 2}$  to your new Osaifu-Keitai mobile phone  $^{\otimes 3}$  when you replace your Osaifu-Keitai mobile phone such as at the time of model change or malfunction. After completing the transfer of data files on the IC card, just download an Osaifu-Keitai compatible i- $\alpha$ ppli program, and then you can easily use the Osaifu-Keitai services. iC transfer service is available at the service counters such as a DoCoMo shop nearby.

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- \*1 You are charged a handling fee for using iC transfer service. (You might not be charged at times.)
  In addition, you are charged a packet communication fee for downloading iC application programs and respective settings.
- \*2 Some Osaifu-Keitai services are not supported. The services that are not supported are deleted when you use iC transfer service, so ensure that you use a back-up service for the Osaifu-Keitai services or delete them in advance.
- \*\*3 iC transfer service is available when new Osaifu-Keitai mobile phone is iC transfer service compatible model.

# Starting Osaifu-Keitai Compatible i-oppli

#### Read and Write Data inside the IC Card

You can start the Osaifu-Keitai compatible i-αppli from the Software List or IC Card List. By using Osaifu-Keitai compatible i-αppli, you can read/write the data inside the IC card and use convenient functions such as depositing electronic money or traffic tickets, or checking your account for the balance and usage details on the mobile phone.

- Take care of your Terminal Security Code and password used for each service not to reveal to anyone.
- When you start or download the Osaifu-Keitai compatible i-oppli program for the
  first time, the message "Use IC card for current UIM?" appears. When you select
  "YES", you cannot use the IC card function afterward unless you insert the same
  UIM.

To use the IC card function with another UIM, insert the currently supported UIM first and then deleted all the Osaifu-Keitai compatible i- $\alpha$ ppli programs. Otherwise, you cannot use it.

- Reading and writing data from the software program and to the IC card is suspended in the following cases:
- In that case, the read or written data is discarded. The operation after the communication ends differs depending on the service you use.
- When a call comes in while i-αppli is running
- When the battery goes flat

 
# iα (for at least one second) ➤ Select an Osaifu-Keitai compatible i-αppli program.

The Osaifu-Keitai compatible i-oppli program starts up.

#### Use Osaifu-Keitai

Place the FeliCa mark " $\Omega$ " of the FOMA phone over the scanning device, and you can use the FOMA phone as electronic money to pay for shopping or to use it as a traffic ticket. This function is available without starting the software program.

- During a call or i-mode connection, you can use Osaifu-Keitai by placing the FeliCa mark over the scanning device, however, you cannot start the Osaifu-Keitai compatible i-oppli.
- Place the FeliCa mark " " of the FOMA phone over the scanning device to use the target service.
  - The Call/Charging indicator lights when you bring your FOMA phone close to a scanning device and communication becomes ready.



#### Information

- Mount the battery pack to use Osaifu-Keitai. Even when the power is turned off or when the battery has gone flat, you can use Osaifu-Keitai by placing the FeliCa mark over the scanning device, however, you cannot start the Osaifu-Keitai compatible i-oppli. You might not be able to use Osaifu-Keitai if you have left the battery unused for a long period or not charged it after the low battery alarm sounds. Charge the battery.
- When the FeliCa mark "
   —" of the FOMA phone placed over the scanning device
  is not identified, slightly move the mark forwards, backwards, to left, or to right.
- Osaifu-Keitai compatible i-αppli might start when you place the FOMA phone over the scanning device.

#### <ToruCa>

# What is ToruCa?


ToruCa is an electronic card that you can obtain with Osaifu-Keitai for use as fliers, restaurant cards, and coupon tickets.

You can obtain ToruCa files from scanning devices or sites and can easily exchange them using mail, infrared ray, or a microSD memory card.

The obtained ToruCa files are saved to "ToruCa" of "Osaifu Keitai".


- Available on the ToruCa compatible model.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

#### ■ Flow for using ToruCa

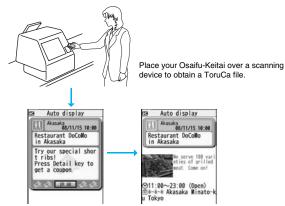

You can view more detailed information by using "詳細 (Details)" key.

#### ■ Sources of ToruCa files

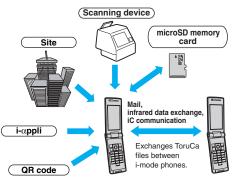


<Obtain ToruCa Files>

# Obtaining ToruCa Files
 
# **Obtain from Scanning Device**

You can obtain the ToruCa file from a scanning device using the IC card function. By obtaining detailed information, a ToruCa file becomes a ToruCa file (details) which has more pieces of information.

- For a ToruCa file (details), you can download up to 100 Kbytes per file, and for a ToruCa file before obtaining the details, you can download up to 1 Kbyte per file.
- Place the FeliCa mark " > " of the FOMA phone over the scanning device.



#### When the ToruCa file is obtained

A ToruCa obtained tone sounds, the Call/Charging indicator flickers.

- When "Receiving display" is set to "ON", detailed display of obtained ToruCa file appears.
- For a ToruCa file before obtaining detailed information, the confirmation display appears asking whether to connect to a site to download detailed information. Select "YES" to display a ToruCa file (details) with detailed information obtained. Select "NO" to display a ToruCa file without detailed information.



⊘11:00~23:00 (Open) ⊕\*-\*-\* Akasaka Minato-k u Tokyo

If no keys are pressed for about 15 seconds or "Receiving display" is set to "OFF",

" appears on the desktop.

Press , highlight , and press (Select); then the ToruCa File List appears.

#### **About Auto-reading Function of ToruCa**

If you set "Auto reading" to "Accept" to use the ToruCa files by placing the FOMA phone over the scanning device, the available ToruCa files are automatically recognized. The used ToruCa files are converted into "Used" and then moved to the "Used ToruCa" folder. Up to 20 used ToruCa files are saved, and when the number of the files exceeds 20, the files are deleted from the one downloaded at the oldest date.

Even if "Auto reading" is set to "Reject", the confirmation display might appear
asking whether to use "Auto reading" when you place the FOMA phone over the
scanning device. To use ToruCa files, select "YES", and then set "Auto reading" to
"Accept".

 
#### Information

- When you fail to obtain a ToruCa file, the ToruCa failed-to-obtain tone sounds, and the Call/Charging indicator lights.
- A ToruCa obtained tone and a ToruCa failed-to-obtain tone sound at the volume set for "Phone" of "Ring volume".
- Depending on the settings by IPs (Information Providers), you might not be able to update ToruCa files or send them by mail or infrared rays.

#### <ToruCa Viewer>

# **Displaying ToruCa Files**

You can display the ToruCa file obtained using the IC card function, or from sites or mail.



- When the folder contains unread ToruCa files, "NEW" appears.





ToruCa folders

ToruCa Folder List

Elised ToruCa

#### When obtaining detailed information from a ToruCa file

A ToruCa file before obtaining detailed information itself does not show the detailed information. Select "Fif## (Details)" on the ToruCa file display and select "YES" to connect to the site to obtain more detailed information.

After obtaining the detailed information, the ToruCa file is overwritten and saved.

#### Information

You are charged the ordinary packet fee for obtaining.

Function Menu of the ToruCa Folder List	
Function menu	Operation/Explanation
Operate folder (Add folder)	You can create a user folder. You can create up to 20 folders.  Add folder Enter a folder name.  You can enter up to 10 full-pitch/20 half-pitch characters for the FOMA phone.  You can enter up to 31 full-pitch/63 half-pitch characters for the microSD memory card.
Operate folder (Edit folder name)	You can edit the folder name for the user folder.  Edit folder name Enter a folder name.  You can enter up to 10 full-pitch/20 half-pitch characters for the FOMA phone.  You can enter up to 31 full-pitch/63 half-pitch characters for the microSD memory card.
Operate folder (Delete folder)	All ToruCa files in the folder are deleted.  ▶ Delete folder ▶ Enter your Terminal Security Code ▶ YES
Search all folders	You can search through all ToruCa files in the FOMA phone (except ToruCa files stored in the "Used ToruCa" folder) by specifying a search condition.  Select a search condition.  Genre Select a genre.  Press ((Detail)) to display a list of category icons belonging to the genre.  Title Enter characters to be searched for, from those in the title.  Index Enter characters to be searched for, from those in location data.  You can enter up to 20 full-pitch/40 half-pitch characters for the Title search, and up to 10 full-pitch/20 half-pitch characters for the Index search.

Function menu	Operation/Explanation
Auto-sort	You can set a ToruCa file that matches the condition to be automatically sorted and saved to the folder when you obtain the ToruCa file from the scanning device.  Select a sorting condition.  Genre Put a check mark for the genre to sort into and press (() (Finish)). You can put it for multiple genres.  Title Enter characters from those in the title, to be a sorting condition.  Index Enter characters from those in the location data, to be a sorting condition.  Release Select "YES" to release the sorting condition you specified.  You can enter up to 20 full-pitch/40 half-pitch characters for the Title sort, and up to 10 full-pitch/20 half-pitch characters for the Index sort.  When a sorting condition is already specified for the folder, it is displayed. Press (R)
Copy (Copy to microSD)	You can copy the ToruCa files together with the folder from the FOMA phone to the microSD memory card.  Copy to microSD
Copy (CPY all to microSD)	You can copy all the ToruCa files together with the folder from the FOMA phone to the microSD memory card.  CPY all to microSD Enter your Terminal Security Code YES
Copy (Copy to phone)	You can copy the ToruCa files together with the folder from the microSD memory card to the FOMA phone.  Copy to phone
Copy (Copy all to phone)	You can copy all the ToruCa files together with the folder from the microSD memory card to the FOMA phone.  ▶ Copy all to phone ► Add or Overwrite  ▶ Enter your Terminal Security Code ➤ YES

Function menu	Operation/Explanation
Ir/ transmission (Send all Ir data)	See page 310.
Ir/ transmission (All transmission)	See page 311.
Memory info	You can display the used memory space (estimate)/the number of saved files.
Delete all	You can delete all the ToruCa files stored in the FOMA phone. ▶Enter your Terminal Security Code▶YES
Select storage	You can set a destination folder for when copying from the FOMA phone to the microSD memory card.  > YES

#### <Auto-sort>

- " is displayed when the Genre sort is set, " is displayed when the Title sort is set, and " is displayed when the Index sort is set.
- When a file satisfies multiple conditions, it is sorted into the top of the folder in the ToruCa Folder List.

## <Copy (Copy to microSD)>

The ToruCa file (details) is copied as a ToruCa file before obtaining details if it
contains data which is prohibited to output from the FOMA phone or set with UIM
restrictions.

## <Copy (CPY all to microSD)>

 The ToruCa files in the "ToruCa" folder within the FOMA phone are saved to "SD ToruCa" on the microSD memory card.


## <Copy (Copy all to phone)>

 The ToruCa files in "SD ToruCa" on the microSD memory card are added or overwritten and then saved to the "ToruCa" folder in the FOMA phone.

### <Select storage>

- " a" is displayed for the folder set as a destination.
- When you execute Check microSD, or create or edit a folder by using a personal computer, the destination folder on the microSD memory card might be changed.
   When the setting is changed, set the destination folder again.

# How to See ToruCa File List/Detailed ToruCa File Display

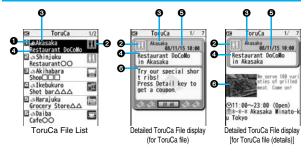

## Indicates the state of ToruCa file

<b>₹</b> 3 <b>*</b> 1	Unread ToruCa file
4	Read ToruCa file
<i>≹</i> *2	FOMA phone incompatible ToruCa file

%1 Does not apply to the ToruCa file downloaded from a site.

- %2 Appears for only the ToruCa file on the microSD memory card.
- "a" is add to the expired ToruCa file.
- " is add to the ToruCa file whose output from the FOMA phone is prohibited.

  Aindicates the category

## Displays a category icon that matches the contents of the ToruCa file.

Sindicates the Index file
Displays the location data of the publisher that publishes the information about the

# ToruCa file. Andicates the title

6 Indicates the date and time the ToruCa file was obtained

### **⊙**Indicates the ToruCa information

Simple explanation and the "詳細 (Details)" key are displayed for a ToruCa file. Information about the publisher is displayed for a ToruCa file (details).

# Function Menu of the ToruCa File List/Detailed ToruCa File Display

F	On south of Franchism at least
Function menu	Operation/Explanation
Attach to mail	You can compose an i-mode mail message with the ToruCa file attached.  Go to step 2 on page 182.  ◆ You can compose it also by pressing ( ).
Move	➤ Select a destination folder.  • You cannot select the "Used ToruCa" folder.
Search/sort (Search) [List only]	You can search through ToruCa file in the folder by specifying a search condition.  Search Select a search condition.  Genre Select a genre.  Press ☑(Detail) to display a list of category icons belonging to the genre.  Title Enter characters to be searched for, from those in the title.  Index Enter characters to be searched for, from those in location data.  You can enter up to 20 full-pitch/40 half-pitch characters for the Title search, and up to 10 full-pitch/20 half-pitch characters for the Index search.
Search/sort (Sort) [List only]	You can change the order of displayed files. ▶ Sort▶ Select an order.
Copy (Copy)	You can copy the displayed or highlighted ToruCa file to another folder.  ▶ Copy▶ Select a destination folder.  ◆ You cannot select the "Used ToruCa" folder.
Copy (Copy to microSD)	The files are copied to the folder as specified by "Select storage" on page 251.  Copy to microSD
Copy (Copy to phone)	You can copy the ToruCa file from the microSD memory card to the ToruCa folder in the FOMA phone.  Copy to phone

Function menu	Operation/Explanation
Multiple-choice [List only]	You can select multiple ToruCa files and operate.  ▶ Put a check mark for ToruCa files to be selected  • □( FIMC ) ► Select an item.  Move See page 252.  Copy See page 252.  Copy to microSD See page 252.  Copy to phone See page 252.  Send Ir data See page 309.  Select all Selects all files.  Release all Releases all selections.
Update ToruCa [Detailed display only]	You can re-obtain the information about the ToruCa file. The re-obtained ToruCa file (details) is automatically overwritten and then saved.  > YES  • You cannot update some ToruCa files. • See page 170 for when ToruCa files are stored to the maximum.
Operate image (Save image) [Detailed display only]	You can save the image displayed on the ToruCa file and set it for the Stand-by display or Wake-up display.  ➤ Save image ➤ Select an image ➤ YES  ➤ Select a destination folder.  Go to step 3 on page 166.  • See page 170 for when images are stored to the maximum.
Operate image (Save BG image) [Detailed display only]	You can save the background image of the ToruCa file and set it for the Stand-by display or Wake-up display.  ► Save BG image ► YES ► Select a destination folder. Go to step 3 on page 166.  • See page 170 for when images are stored to the maximum.
Operate image (Retry) [Detailed display only]	You can play back an animation image or Flash movie in the ToruCa file from the beginning.  • Retry  • When a part of the Flash movie is outside the display area, the Flash movie might not be played back.
Add to phonebook [Detailed display only]	See page 84.
Add desktop icon	See page 114.

Function menu	Operation/Explanation
Ir/ transmission (Send Ir data)	See page 309.
Ir/ transmission (transmission)	See page 311.
Memory info [List only]	You can display the used memory space (estimate)/the number of saved files.
Delete (Delete this)	▶ Delete this▶YES
Delete (Delete selected) [List only]	Delete selected ▶ Put a check mark for ToruCa files to be deleted ▶ ( Finish ) ▶ YES
Delete (Delete all) [List only]	You can delete all ToruCa files in the folder.  ▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

#### <Attach to mail>

- The ToruCa file (details) that contains data whose output from the FOMA phone is prohibited is attached as a ToruCa file before obtaining details.
- You might not be able to attach the ToruCa file to i-mode mail depending on its file size.

#### <Copy (Copy)>

- You cannot copy ToruCa files whose output from the FOMA phone is prohibited. <Copy (Copy to microSD)>
- The ToruCa file (details) that contains data whose output from the FOMA phone is prohibited or the data set with the UIM restrictions is copied as a ToruCa file before obtaining details.
- When the number of files in the destination folder on the microSD memory card is full, a new folder is automatically created and ToruCa files are saved to that folder.

When copying is completed, the message "This folder is set for storage XXXXXX" (XXXXXX denotes a folder name) appears.

- The name of copied ToruCa file is TORUCXXX (XXX denotes a numeral).
- When no folder is set as a destination folder on the microSD memory card, a new folder is created automatically and the file is saved to the folder. After saving, the newly created folder is set as the destination folder.
- You might not be able to execute "Copy to microSD" for the ToruCa file depending on its file size.

## <Copy (Copy to phone)>

 You might not be able to execute "Copy to phone" for the ToruCa file depending on its file size.

## Information

#### <Operate image>

- The images that satisfy the following conditions are saved as frames or stamps:

  The transparent GIF file that is not an animation GIF file
- ·The file extension is "ifm".
- ·The image size is Stand-by (240 x 427), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), or Sub-QCIF (128 x 96) for frames; and Stand-by (240 x 427) or smaller except frames for stamps.

## <ToruCa Settings>

# **Setting about ToruCa**

Osaifu Keitai Settings
Do the following operations.

Item	Operation/Explanation	
Receive ToruCa	You can set whether to obtain ToruCa file from a scanning device using the IC card function.  Accept or Reject	
Receiving display	You can set whether to display the detailed ToruCa File display when you obtain a ToruCa file while the Stand-by display is shown.  On or OFF	
Check same data	You can set whether to check the same ToruCa file is already obtained before obtaining a ToruCa file from a scanning device.  ▶ ON or OFF ON Checks and does not obtain a new ToruCa file if the same ToruCa file is already obtained.  OFF Does not check. Obtains even the same ToruCa file.	
Auto reading	You can set whether to have the available ToruCa files automatically recognized for when you place the FOMA phone over the scanning device.  Accept or Reject	

- <Check same data>
- The ToruCa files stored in "Used ToruCa" or expired ToruCa files are not included as target files.
- <Auto reading>
- If "Auto reading" is set to "Reject", you might not be able to use ToruCa files.

#### <IC Card Lock>

# **Locking IC Card Function**

To prevent the IC card function from being used by others, you can set the Osaifu-Keitai, obtained ToruCa, or iC communication disabled.

- If the battery runs out when the IC card is locked, the IC card stays locked.
- Press and hold (MENU) for at least one second.
  - "E" appears and IC Card Lock is set.
  - To release IC Card Lock, perform the same operation and enter your Terminal Security Code. When Timer Lock ON At Close is set, the display for releasing IC Card Lock appears also by opening the FOMA phone.

## IC Lock (Power-off)

You can set whether to lock the IC card function while the power is turned off.

OI

MENU ► Osaifu Keitai ► IC card lock set.

- IC lock (power-off)
  - Enter your Terminal Security Code Select an item.

**Setting before OFF** . . . Follows the setting at just before the power-off. **Lock** . . . . . . . . Sets IC Card Lock.

# Full Browser/PC Movie

Displaying Web Pages Designed for PC Full Browser	256
Setting Full Browser Full Browser Settings	260
What is PC Movie?	262
Downloading PC Movies	262
Playing Back PC Movies from Data Box < PC Movie Player>	264

#### <Full Browser>

# **Displaying Web Pages Designed for PC**

You can browse Internet web pages designed for PCs using the Full Browser function. You can display even the Internet web pages that cannot be correctly displayed by i-mode. However, you cannot display or correctly display some Internet web pages.

- The data such as Home URL or Bookmarks registered via Full Browser cannot be used via i-mode. The contents set by Full Browser are invalid for i-mode, either.
- Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files. For details on the packet communication fee, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can browse Internet web pages composed of frames. You can select a frame to display it as well. (See page 258)
- You can display SSL/TLS\*-compatible pages via Full Browser.
  - SSL and TLS are the methods of safer data communication using authentication/encryption technology to protect your privacy. SSL/TLS pages prevent eavesdropping and information alteration during communication by exchanging encrypted data files.

Further, server authentication prevents web spoofing, thus making your personal information such as credit card number or postal address exchanged safer.

## full Browser Select an item.

Home ...... Displays an Internet web page set as Home URL.

Bookmark. .... Displays an Internet web page stored in Bookmark.

(See page 162)

Last URL...... Displays an Internet web page you viewed last time.
Go to location ... Displays an Internet web page by entering a URL.

# (See "Displaying Internet Web Pages" on page 162) Full Browser settings

- Configures Full Browser settings. (See page 260)
   When "Access setting" is set to "No", the confirmation display appears asking whether to start Full Browser. Highlight "Yes" and select "OK" to switch setting of "Access setting". then Full Browser starts up.
- To end Full Browser, press with an Internet web page displayed and select "YFS"

#### Information

- It may take long to display some Internet web pages.
- $\bullet$  You cannot use the following functions on Full Browser:

 
· Phone To function · Screen memos · Flash movies

Flash movies · PDF files

## **Full Browser Display**

- Displaying in multiple windows
- 2···Window number/Number of windows
- ③ · · · ☐ : During communication in another window
  ☐ : During communication in another frame
- **④**··· 

  ☐: Phone Mode
- 🕂 : PC Mode



## ■ Operations for the Full Browser display

Omeration	Key operation	
Operation	Phone Mode	PC Mode
Return to previous page	or 1	1
Forward to next page	0 or 3	3
Scroll display		<u> </u>
Scroll display page by page	▲/▼ or MEND (Page ▲)/ (MEND OF TO scroll to the top/end least one second), MEND (for at least one second	of the page, ▲/▼(for at (Page ▲)/( (Page ▼)
Reload	2	
Enlarge/Reduce display size	7 to reduce the displ 8 to display in standa 9 to enlarge the disp	ard size
Display Bookmark Folder List	0	

## Switch Display Mode

Two modes, "Phone mode" and "PC mode", are available for the Full Browser display.

Full Browser Full Browser settings
Display Mode setting Phone mode or PC mode

#### Phone mode

... Displays an Internet web page to fit in the display width of the FOMA phone. You do not need to scroll sideways; you can browse Internet web pages by scrolling upward and downward.

#### PC mode

- ... Displays an Internet web page in the same format as when it is displayed on your personal computer in 800 (width) x 600 (height) dots. You can browse Internet web pages by scrolling upward, downward, and sideways.
- Each time you select "Change disp. mode" from the Function menu with an Internet web page shown, the display modes switches.

## Use Operation Mode

Press (()) ((())) from the Full Browser display to switch to "Operation mode". The operation palette is displayed by switching to Operation Mode, then you can move to the previous/next page or enlarge/reduce the display size.

in Moves to the previous/next page.

: Enlarges/reduces the display size.



## Open Multiple Windows

You can simultaneously open up to five Internet web pages via Full Browser.

 You can switch the simultaneously opened Internet web pages to show one by one.

Full Browser display ► in (FUNC) ➤ Open new window ► Select an item.

**Bookmark**....Opens a new window to show an Internet web page stored in Bookmark. (See page 162)

Enter URL . . . . Opens a new window to show an Internet web page by entering a URL . (See "Displaying Internet Web Pages" on page 162)

**Home**.....Opens a new window to show an Internet web page set as Home URL.

Link . . . . . . Opens a new window to show a page of the link highlighted on the Full Browser display.

• See page 258 for how to switch or close the window.


## Information

Some Internet web pages have links configured to open in new windows. When
you open such a link, the new window opens even if you do not perform above
operations.

## Display a Page Composed of Frames

You can display Internet web pages composed of frames. You can select a frame, and enlarge each selected frame for displaying.

From an Internet web page composed of frames Press ( to highlight a frame, and press ( Select ).

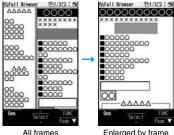

Enlarged by frame

• To return to the display for all frames, press (CLR) or select "All frames" from the Function menu.

## Information

• When an Internet web page has many divided frames, you might not be able to open all frames. "[X" is added to the frames that you could not open.

## Upload Images

You can upload JPEG or GIF images stored in the FOMA phone to an Internet web page.

• Procedure for uploading images differs depending on the Internet web page. Follow the instructions on the display.

## Information

• When the total size of the selected images exceeds 80 Kbytes, or when the total size of the selected image and other files exceeds 100 Kbytes, you cannot upload the images.

#### Information

- You may not be able to upload images depending on the Internet web page.
- You cannot upload the images whose output from FOMA phone is prohibited.

## Switch from i-mode to Full Browser

You can switch to Full Browser to show the Internet web pages incorrectly displayed by i-mode.

While a page to be shown in Full Browser is displayed FUNC ) Internet Switch to FB OK

#### Information

• You cannot correctly display some Internet web pages.

## **Function Menu of Full Browser Display**

Function menu	Operation/Explanation
Add bookmark	See page 162.
Bookmark	See page 163.
Enter URL	You can enter a URL to display an Internet web page.  Select a text box. Go to step 2 on page 162.  The URL of displaying site is entered beforehand.
Reload	The contents on the Internet web page is updated to the latest ones.
Change disp. mode	See page 257.
Open new window	See page 257.
Change window	You can switch the windows while displaying the Internet web pages in multiple windows.  Select a window.

Function menu	Operation/Explanation	
Close window	You can close the window while displaying the Internet web pages in multiple windows.  YES	
Save image	See page 166.	
Add desktop icon	See page 114.	
Compose message	You can compose an i-mode mail message with the URL of the displayed Internet web page pasted to the text. Go to step 2 on page 182.	
Home (Set as home URL)	You can set the displayed Internet web page as Home URL. ► Set as home URL ► YES	
Home (Display home)	You can display the Internet web page set as Home URL.  Display home	
Scroll (Speed)	See page 260.	
Scroll (Focus while scroll)	See page 260.	
Zoom	See page 260.	
All frames	You can return to the display for all frames from the display for the enlarged frame.	
Retry	You can play back the displayed animation from the beginning.	
Page info	You can display information of the displayed Internet web page.  • URL or Title	
Others (Set image display)	You can set whether to display images.  Set image display See page 260.	
Others (Change CHR code)	See page 159.	

Function menu	Operation/Explanation	
Others (Cookie setting)	You can set whether to validate cookies.  Cookie setting Go to step 1 of "Cookie Setting" on page 261.	
Others (Delete Cookies)	You can delete cookies.  Delete Cookies Go to step 1 of "Delete Cookies" on page 261.	
Others (Referer setting)	You can set whether to send a referer.  Referer setting Go to step 1 of "Referer Setting" on page 261.	
Others (Certificate)	See page 160.	

- <Compose message>
   The number of characters of the URL you can paste to the text is up to 512 half-pitch characters. If the URL contains 512 half-pitch characters or more, you cannot paste it.

## <Full Browser Settings>

# **Setting Full Browser**

Full Browser ► Full Browser settings ► Do the following operations.

Item	Operation/Explanation
Display Mode setting	See page 257.
Scroll (Speed)	You can set scroll speed. ▶Speed▶High speed or Low speed
Scroll (Focus while scroll)	You can set whether to highlight links while scrolling.  ▶ Focus while scroll ▶ ON or OFF
Zoom	You can set the display size of the Internet web page. From the Function menu of the Full Browser display, you can enlarge/reduce the display size by each page.  Select a display size.  In PC Mode, you can select a display area by "Select disp. area" from the Function menu of the Full Browser display.
Access setting	You can set whether to use Full Browser.  Yes Uses Full Browser.  No Displays the cautions at the start of Full Browser.  Check the cautions, highlight "Yes" and then select  "OK", then the setting switches to "Yes", and Full  Browser becomes available.
Home URL	You can set Home URL. ▶Select the URL field▶Enter a URL▶OK
Set image display	You can set whether to display images.  Non or OFF
PC Movie auto-play	You can set whether to automatically play back the downloaded type of PC movies while obtaining.  ON or OFF

Item	Operation/Explanation
Cookie setting	See page 261.
Delete Cookies	See page 261.
Referer setting	See page 261.
Script setting	You can set whether to validate JavaScript. JavaScript is a simple program language that runs on Internet web pages. It is widely used to create Internet web pages with movements. When "Valid" is set, you can use the JavaScript function to browse Internet web pages on Full Browser.  Valid or Invalid
Window Open Guard	You can set whether to prevent a new window from opening automatically by JavaScript.  Valid or Invalid
Check settings	You can check respective Full Browser settings.
Reset last URL	You can erase the URL of the Internet web page you viewed last.  YES

## Information

## <Access setting>

 If you replace the UIM with a new one when "Yes" is set, the setting switches to "No".

## <Set image display>

- Even when "ON" is set, images might not be displayed correctly. In this case,
   " is displayed.
- When "OFF" is set, " \( \bigcirc \) " is displayed and the data file is not received.

## <Script setting>

- Some Internet web pages may not be displayed correctly unless "Valid" is set.
- Even when "Valid" is set, it might not work depending on JavaScript.

## Cookie

By using cookies, you can effectively access the Internet web pages you have accessed once.

A cookie is the system to temporarily save personal information such as the date/time or number of times you accessed an Internet web page. The information from the server is written into the FOMA phone, temporarily saved, and used for content services.

• If a cookie is sent, the information such as the date/time or number of times you accessed an Internet web page is also sent to the web page. Note that even if your information is detected by a third party by sending a cookie, we cannot be held responsible for that. However, you may not be able to correctly display or use some Internet web pages or content services unless the cookie setting is valid.

## Cookie Setting

You can set whether to validate cookies.

Full Browser Full Browser settings Cookie setting Select an item.

Valid . . . . Always validates cookies. The confirmation display does not appear before a cookie is sent or received.

Invalid . . . Always invalidates cookies.

#### Notify (sending)

.......... Validates cookie's sending/receiving. The confirmation display appears each time before a cookie is sent.

## Notify (receiving)

........... Validates cookie's sending/receiving, The confirmation display appears each time before a cookie is received.

#### Notify (send/recv.)

- ...... The confirmation display appears asking whether to permit a cookie to be sent or received each time before a cookie is sent or received.
- When you replace a UIM with another one, "Invalid" is set. If you change the setting with the another one, the display for entering your Terminal Security Code might appear.

#### Information

 When "Notify" is set, the confirmation display might consecutively appear asking whether to send/receive (update) cookies depending on the Internet web page.

## Delete Cookies

■ Full Browser Full Browser settings
■ Delete Cookies ■ Enter your Terminal Security Code
■ YES

## Referer

The referer denotes the link source information. When a referer is sent, the information about from which page you have accessed it is sent to the site.

Note that even if your information is detected by a third party by sending a referer, we cannot be held responsible for that.

## Referer Setting

You can set whether to send a referer while an Internet web page is open.

Full Browser Full Browser settings
Referer setting Select an item.

Send . . . . Sends a referer.

Unsend . . . Does not send a referer.

Notify. . . . . When a referer is sent, the confirmation display appears asking whether to send it.

#### Information

 When "Notify" is set, the confirmation display might consecutively appear asking whether to send a referer depending on the Internet web page.

## What is PC Movie?

By using high speed communication, you can play back smooth and high-quality PC movies provided by portal sites, movie specialty sites and other sites on the Internet.

- PC Movie Player supports playback of Windows Media® Video.
- When downloading or streaming a PC movie, you might receive a bulky size of file.
   Note that you are charged a high packet communication fee for a bulky sent/received file such as a streaming type file whose size is not limited. For the details of the packet communication fee and billing plan, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Categories		Description
Type	Playback type	Description
Streaming type (cannot be saved)	Plays back while obtaining	You can play back a PC movie while obtaining it. A long time playback is available.
Download type (can be saved)	Plays back while obtaining	When "PC Movie auto-play" is set to "ON", you can play back a PC movie while obtaining it. You can save it to the microSD memory card after download and play it back without re-connection. Up to 10 Mbytes of a file can be downloaded.
	Plays back a file saved to the microSD memory card	To the microSD memory card, you can save not only data files obtained by the FOMA phone but also PC movies obtained or created on a personal computer, and then play them back. You can save a bulky file of up to the space size of microSD memory card.

- The distribution server for streaming type supports Windows Media Services 9 only. You cannot play back a streaming type of PC movie distributed from other than Windows Media Services 9.
- Some sites check the operating environment (browser type, OS type, etc.) are checked and you might not be able to play back PC movies.
- See page 265 for the supported file format of PC movies.

# **Downloading PC Movies**

## Playing Back a Streaming Type of PC Movie

Select a PC movie from a PC movie obtainable site YES

See page 264 for the operation during playback.



## About license (Windows Media DRM)

- Among the PC movies protected by the license, you can play back the streaming type of PC movies only. You cannot play back the download type of PC movies protected by the license.
- You might not be able to play back PC movies depending on the license setting of the PC movies.
- If files are stored to the maximum when you try to obtain a license to save it to the FOMA phone, the confirmation display appears asking whether to delete currently stored licenses to save a new one. Select "YES" to delete all the stored licenses to save it. You need to obtain a license again to play back a PC movie whose license is deleted.

## Playing Back a Download Type of PC Movie

Select a PC movie from a PC movie obtainable site ► YES

See page 264 for the operation during playback.

- If "PC Movie auto-play" is set to "ON", a PC movie is played back during obtaining. If "OFF" is set, you can play it back by selecting "Play" from the Obtaining Completion display.
- When you obtain a download type of PC movie from a site, the file is obtained while it is played back, and obtaining itself continues even when you suspend the playback midway.



Obtaining
Completion display

Data acquisition

Save

## When obtaining a PC movie is suspended

Depending on the type of a PC movie being obtained or the reason why the obtaining is suspended, the operation differs.

 
#### Streaming type

After the suspension by an incoming call, alarm notification, or disconnection of communication, the obtaining will be in pause state. Press () () to resume playback from the suspended point.

The display before playback returns when you suspend obtaining by pressing CLR or .

#### Download type

After the suspension by an incoming call, alarm notification, or disconnection of communication, the Obtaining Completion display appears. Select "Play" to play back the obtained segments of the file. However, when it is played back while obtaining, the display in pause state appears. Select "ResumeDL" to resume obtaining from the suspended point.



The confirmation display appears asking whether to discard the data when you suspend obtaining by pressing CLR or .

- For download type of PC movies, the downloading is continued during suspension if it is suspended by an incoming voice call, receiving a mail message or Message R/F. or alarm notification.
- Depending on the PC movie or the site you are connecting to, you cannot resume from the suspended point even by pressing ( ) ( ) or selecting "ResumeDL".
   In that case, the obtaining resumes from the top of the file.

#### Information

- Note that there is no upper size limit for a streaming type of PC movie, you might exchange the files of no size limit. When obtaining it, the confirmation display appears asking whether to play it back.
- Depending on the site or PC movie you are connecting to, you might not be able to obtain a file, play it back during obtaining, or play it back after obtaining.
- Depending on the line speed, line state, or radio wave conditions, the playback during obtaining might be suspended or the images might blur. You can repeatedly play back the download type of PC movies after obtaining but cannot play back the streaming type of PC movies.
- If a PC movie has restrictions on the playback period, you cannot play it back before and after that period. If you leave the FOMA phone with the battery pack removed for a long time, the date/time information in the FOMA phone might be reset. In that case, you cannot play back the PC movie that has restrictions on the playback period or playback deadline. See "Contents info" for checking the playback restrictions.
- "Contents info" of a PC movie and deadline information on the display that notifies you of a playback deadline are shown by the date/time with "Summer time" set to "OFF".

## **Saving PC Movies**

You can save the obtained PC movies to the microSD memory card. However, you cannot save the streaming type of PC movies.

## Obtaining Completion display Save YES

The PC movie is saved to the folder selected by "Select storage".

• When the maximum number of files has already been saved to the microSD memory card or memory space is full, the confirmation display appears asking whether to delete unnecessary files to save new one. Select "YES" to list the files in Data Box, and select the unnecessary files to delete them. Before deleting, you can play back PC movies on the microSD memory card for confirmation, but cannot display the previous or next files.

#### Information

• You cannot attach the saved PC movie to an i-mode mail message for sending.

<PC Movie Player>

# **Playing Back PC Movies from Data Box**

You can play back moving images published on the Internet for personal computers or PC movies saved to the microSD memory card via a personal computer, etc.

■ Data box PC Movie



PC Movie Type Selection display

microSD►Select a folder►Select a file.



 When you press aduring playback, pause, or halt, PC Movie Player ends. It ends even when you play back during obtaining.

## ■ Operations while playing back a PC movie

• See page 267 for when you operate from the Function menu.

Operation	Key operation
Pause*1	
	● (
Fast forward <sup>**1</sup>	
	● ( ) to play back
Display next file*2*3	0
Display previous file*2*3	€ 34
Select position to play*1*5	Press and hold .

Operation	Key operation
Sound volume adjustment	or A/V Press and hold to adjust the sound volume sequentially. Setting from Level 0 (Silent) through 25 is available.
Mute	(
Switch vertical display/ horizontal display*6*7	● Each time of pressing switches display direction.
Remaster	• Each time of pressing switches between "ON" and "OFF".
Listening	<ul> <li>8</li> <li>Each time of pressing switches in order of "OFF"</li> <li>→ "Surround" → "Natur1" → "Natur2".</li> </ul>
Equalizer	● Each time of pressing switches in order of "Normal" → "S-XBS1" → "S-XBS2" → "Train".

- $\%1\,$  You might not be able to operate this for some PC movies.
- ※2 You cannot operate this for a streaming type of PC movie, or when you are playing back a PC movie while obtaining it. You cannot operate this when you play back an obtained but unsaved PC movie from the Obtaining Completion display, either.
- ※3 The files are displayed in the order on the PC Movie List. You can operate this when you play back from the PC Movie List. However, PC movies in WVX, ASX, and WAX formats are skipped.
- ¾4 When playback time is over three seconds, you go back to the beginning of the file. However, you might not be able to operate this for a streaming type of PC movie or when you are playing back a PC movie while obtaining it.
- ¥5 You cannot operate this during fast-rewinding.
- %6 The horizontal display is valid only for the current playback. When you close the playback display, the vertical display returns.
- \*7 You cannot operate this for PC movies with incompatible video data or voice-only PC movies.
- If you resume playback in the horizontal full display from the pause state, the display might become dark, however, the video appears soon after the playback resumes.

# You can perform the following operations when you play back or pause a PC movie using the Flat-plug Stereo Earphone Set (option) or Flat-plug Earphone/Microphone with switch (option).

Operation	Switch operation
Pause	Press the switch once. To play back, press it
	again.
Play back next file	Press the switch twice in succession.
Play back previous file	Press the switch three times in succession.
	When playback time is over three seconds, you
	go back to the beginning of the file.

## ■ Specification for PC movie playback

File format	WMV, WMA, WVX, WAX, ASF, ASX	
Extension	wmv, wma, wvx, wax, asf, asx	
Codec	Video	Windows® Media Video 8 through 9
	Audio	Windows® Media Audio 2 through 9
Bit rate	Video only	512 kbps
	Voice only	192 kbps
	Video + Voice	512 kbps + 64 kbps
Video size	QVGA (sidewise 320 dots x lengthwise 240 dots)	
Frame rate	30 fps	

You might be able to play back the files that exceed the bit rates described above.

- Even when the file format is supported, you might not be able to obtain files, play back during obtaining, or play back after obtaining depending on the file.
- If the file format of either video or audio is not supported, the file might be played back with the supported format only.

#### Information

 Files with the extension of wvx, wax, asx are the files for which the URL of a PC movie on the Internet is specified. When you select those files saved on the microSD memory card, streaming or downloading playback starts from the specified URL.

#### ■ Icons on the PC Movie List

lcon	File format
PC	WMV, ASF
P#	WVX, ASX
<b>&gt;</b>	WMA
	WAX

Icon	Description
	PC movie on the Internet
	PC movie saved to the microSD memory card

• Above icons are displayed only for "Position memory" or "Played history".

# When you select "Position memory" from the PC Movie Type Selection display

The Position Memory selection display appears. When you select "Marker to resume" or "Position memory1 through 9", the PC movie is played back from the stored position.

Ma	arker to resume	This is stored automatically when a call comes in, an alarm operates, or the battery level goes flat during playback of a PC movie, or when you terminate the PC Movie player during playback.
Po	osition memory	You can store in any optional position in a PC movie, and create up to nine position memories. (See page 267)

- You can display information about the position memory by pressing in function and selecting "Posit. memory info".
- To delete "Position memory", press [RV] [FUNC]) and select "Multiple-choice", "Delete this", or "Delete all". You cannot delete "Marker to resume".
- When a PC movie with a position memory has been deleted or moved to another folder, or when its file name has been edited, you cannot play it back.
- Even when you play back a PC movie from a position memory, it may be played back from the beginning, depending on the PC movie.

# When you select "Played history" from the PC Movie Type Selection display

When you play back a PC movie, the URL or storage location of that file is stored as a history. Up to 30 histories are stored, and when those are exceeded, the oldest history is overwritten. Select a played history to play back the PC movie according to the history information.



- When a PC movie stored in a played history has been deleted or moved to another folder, you cannot play it back.
- When you play back an obtained but unsaved PC movie from the Obtaining Completion display, it is not stored in Played History.

## **Function Menu of the PC Movie Folder List**

Function menu	Operation/Explanation	
Add folder	Enter a folder name.	
	You can enter up to 31 full-pitch/63 half-pitch characters.	
Edit folder name	► Enter a folder name.	
	You can enter up to 31 full-pitch/63 half-pitch characters.	
Delete folder	► Enter your Terminal Security Code ➤ YES	
Select storage	You can set a destination folder for saving downloaded PC	
	movies to the microSD memory card.	
	▶YES	

## Information

<Select storage>

" manage is displayed for the folder set as a destination folder.

## Function Menu of the PC Movie List/Played History List

	,,,,,,,,,,
Function menu	Operation/Explanation
Contents info	You can display the file title, file name, and others of the PC movie.
Move	You can move the PC movie to another folder.
	Select a destination folder.
Edit title	► Edit title ► Enter a title.
(Edit title)	You can enter up to 18 full-pitch/36 half-pitch characters.
Edit title	You can reset the title to the default.
(Reset title)	Reset title ►YES
Сору	You can copy the PC movie to another folder.
	Select a destination folder.
History info	You can display information of the played history.
Position memory	You can store the URL information of the PC movie stored in
	Played History to a position memory. When you play back the
	file from the position memory, it is played back from the
	beginning.
	Select a position memory number to be registered.
	You cannot select "Marker to resume".
Multiple-choice	You can select multiple files and operate them.
	Put a check mark for files to be operated
	►(IRC) Select an item.
	Delete See "Delete this" on page 266.
	Copy See page 266.
	Move See page 266.
Description	You can display the lyric or description of the PC movie.
	► The words view or Description view
	Up to 1,024 full-pitch/2,048 half-pitch characters can be
	displayed in each.
Memory info	You can display the used memory space (estimate).
Delete this	YES
Delete all	You can delete all the files in the folder.
	► Enter your Terminal Security Code ➤ YES

Function menu	Operation/Explanation
Listing	You can change the display format of PC Movie List.
	► Title or File name

## Function Menu during Pause/at the End of Playback

Operation/Explanation

**Function menu** 

Fast	The PC movie is played back fast.  ■ To cancel it, press ( ).	
Rewind	The PC movie is played back fast in the opposite direction.  ■ To cancel it, press ( ).	
Stop	You can end playback.	
Position to play	You can set the start position for playing back the PC movie.  Use to move the cursor position of the time bar and press (Set).  To cancel, press (CLR).	
Sound effect (Remaster)	You can bring the sound from an earphone to the original sound by complementing high-pitch range lost at data compression.  Remaster ON or OFF	
Sound effect (Listening)	You can set sound effect for when using an earphone.  Listening Select an item.  Surround Makes the sound natural and stereophonic.  Natur 1/2 Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste.  OFF Sets Listening to "OFF".	

Function menu	Operation/Explanation
Sound effect (Equalizer)	You can change the quality of sound from an earphone.  Equalizer Select an item.  Normal Reproduces normal sound quality.  S-XBS1 Enhances bass sound.  S-XBS2 Enhances bass sound more deeply than S-XBS1  Train Minimizes abnormal sound that causes sound leakage.
Contents info	See page 266.
Position memory	You can store a position memory in the PC movie. Operate it at the desired position in pause state.  Select a position memory number to be stored.  You cannot select "Marker to resume".
Description	See page 266.
Copy URL	While playing back a PC movie published on the Internet, you can copy the URL of that PC movie.  • You can copy up to 512 half-pitch characters for the URL.
Display size	You can set the display whether to display a PC movie in the original size (Actual size) or to fit to the display size.  Actual size or Fit in display  Even if you set to "Actual size", the PC movie in excess of the display size is reduced to the display size.

## Information

## <Position to play>

- You might not be able to select the position to play depending on the PC movies. <Sound effect>
- Even if an earphone is not connected, the respective setting contents are displayed on the display.

## <Position memory>

- You might not be able to store the position memory depending on the PC movies.
   Display size>
- Depending on the image size, the image might be displayed with the right or bottom side cut off.



# Data Display/Edit/Management

About Data Box	270
Making Full Use of Still Images Displaying Images	273
Editing Still Images Edit Picture	277
Creating Animations	279
Making Full Use of Moving Images Playing Back Moving Images/i-motion Movies	
(i-motion Player)	280
Using Playlist	284
Editing Moving Images/i-motion Movies Edit & motion	285
Making Full Use of Chara-den	
What is Chara-den?	287
Displaying/Operating Chara-den Images	
	287
Recording Chara-den Images Record Chara-den	
Making Full Use of Melodies	
Playing Back Melodies	290
Making Full Use of Kisekae Tool	
Checking Kisekae Tool	293
	200
Making Full Use of microSD Memory Card About microSD Memory Card	294
Inserting/Removing microSD Memory Card	294
	294
Displaying Data Items on microSD Memory Card SD-PIM	
Copying Still Images, Moving Images, etc.	298
Moving Copyrighted Files Movable Contents	300
Managing Unsupported Files (SD Other Files)	301
Formatting microSD Memory Card microSD Format	301

Checking microSD Memory Card	301
microSD Info>	302
Using a microSD Memory Card with a Personal Computer	302
Folder Configuration on microSD Memory Card	303
Making Full Use of Data	
Managing Folders	305
Making Full Use of Infrared Data Exchange	
About Infrared Data Exchange	307
Sending/Receiving One or Multiple Data Files	309
Sending/Receiving All Data Files	309
Using Infrared Remote-controller Function	310
Communication Setting (Forwarding Image)	310
Making Full Use of iC Communication	
About iC Communication	311
Sending/Receiving One Data File	311
Sending/Receiving All Data Files	311
Making Full Use of PDF Viewer	
Displaying PDF Files	312
Making Full Use of Document Viewer Displaying Word, Excel, and PowerPoint Files	
	316
Printing Still Images	
Printing Saved Images	317

# **About Data Box**

Data Box contains the items and folders as listed below. Data is saved to respective folders according to the contents.

i-mode  Camera  PRO µ Not  Decomail-pid	Search by i-mode	Downloaded still images, etc.  Connects to the data site.  Still images shot by the camera, shot Chara-den	
Camera PRO µ Not			
PRO μ Not	available	Still images shot by the camera, shot Chara-don	
	available		
Docomail-nic		images, etc.	
		Still images to be used for composing Deco-mail	
	Search by i-mode	Connects to the data site.	
	お気に入り*1	Pictographs to be used for composing Deco-mail	
pictograph (	,	<ul> <li>You can delete the pre-installed Decomail-pictographs.</li> </ul>	
	8 絵文字※1	You can re-download them from the	
1.	∫	"P-SQUARE" site (see page 170). When you	
	接飾 <sup>※1</sup> (Decoration)	use a UIM other than the one used for	
	ハート・キラキラ※1	downloading, the UIM restrictions (see	
	(Heart/Sparkling)	page 38) are set to them.	
	天気·季節※1 'Weather/Season)		
,	,		
(	移動・生活※1 Transfer/Life)		
	電話・メール※1 [Phone/Mail)		
1	食べ物※1 (Food)		
=	キャラクター※1		
(	Cartoon character)		
	文字 <sup>※1</sup> (Character)		
	Search by i-mode	Connects to the data site.	
Pre-installed		Pre-installed still images	
User folder <sup>*2</sup>		Still images in the user folder	
Original animation		The function of displaying still images	
		continuously	
Frame		Still images to be used for frames	
Stamp		Still images to be used for marker stamps and cushy marks	
Search by i-mode		Connects to the data site.	

Distant	Otill in a second at the second and income in
Picture	Still images shot by the camera, and images in JPEG format and GIF format that conform to the
	DCF standard and were copied from the FOMA
	phone
Image Box	Animation images in GIF format copied from the
	FOMA phone, and images in JPEG format that
	do not conform to the DCF standard
Movable contents	Copyrighted still images moved from the FOMA phone
Decomail-pictograph	Decomail-pictographs copied from the FOMA phone
	I.
Initial folder	Chaku-uta Full® music files obtained from sites
Search by i-mode	Connects to the data site.
User folder**2	Chaku-uta Full® music files in the user folder
Search by i-mode	Connects to the data site.
microSD	Copyrighted Chaku-uta Full® music files
	downloaded or moved from the FOMA phone
•	WMA files obtained from personal computer
deo Channel	
ed program	Programs downloaded via Music&Video Channel
gram	Programs saved to the FOMA phone
	i-motion movies obtained from sites, etc.
Search by i-mode	Connects to the data site.
	i-motion movies recorded by the camera, shot
ot available	Chara-den movies, etc.
ed	Pre-installed i-motion movies
rder	Voices recorded by the voice recorder
r※2	i-motion movies in the user folder
	Playback of playlist
emory	Playback of marker position
i-mode	Connects to the data site.
	Movable contents Decomail-pictograph  Initial folder Search by i-mode User folder**2 Search by i-mode microSD  Search by i-mode ad program gram  Search by i-mode ot available ad order ***2 emory

microSD	Movie	Moving images shot by the camera or copied from the FOMA phone	
	Movable contents	Copyrighted moving images moved from the FOMA phone	
	Other contents	Voice-only i-motion movies <sup>®3</sup> recorded by using the camera function, voice-only i-motion movies <sup>®3</sup> copied from the FOMA phone, or video-unplayable i-motion movies <sup>®3</sup> copied from the FOMA phone	
Melody			
i-mode		Downloaded melodies, etc.	
	Search by i-mode	Connects to the data site.	
Pre-installe	d	Pre-installed melodies	
User folder	*2	Melodies in the user folder	
Voice anno	unce	Data files recorded by using "Voice announce"	
Playlist		Playback of playlist	
Search by i	-mode	Connects to the data site.	
microSD	Melody	Melodies copied from the FOMA phone	
	Movable contents	Copyrighted melodies moved from the FOMA phone	
My docum	ents		
i-mode		Downloaded PDF files, etc.	
microSD		PDF files downloaded or copied from the FOMA phone	
Kisekae To	ool		
Search by i	-mode	Connects to the data site.	
microSD		Kisekae Tool files downloaded, or moved from the FOMA phone	
Chara-den			
Pre-installe	d or downloaded Cha	ra-den images	
PC Movie			
microSD		PC movies downloaded, or saved by personal computer	
Position memory		Playback of marker position	
Played history		Playback histories of PC movies	
Document			
Document t	files saved from mail (	attached files) or personal computer etc.	

SD other files	
SD others	Incompatible files saved from mail (attached
	files), or files in BMP or PNG format obtained by
	Full Browser

- \*\*1 The folder names can be changed by "Edit folder name". Decomail-pictographs are directly saved to these folders, and files other than Decomail-pictographs cannot be saved to them.
- %2 The folder names you have entered for "Add folder" are displayed.
- \*3 Includes the music files in AAC format.

#### ■ Icons in the File List





①File Type

Icon	Туре	File format
UPG	Still image	JPEG
बाइ	Still image/Animation image	GIF
	Frame	GIF
	Marker stamp	GIF
	Cushy mark	GIF
	Flash movie	SWF
	i-motion movie	MP4(AMR)
	i-motion movie	MP4(AAC)
E	i-motion movie	MP4(AAC+[HE-AAC])
	i-motion movie	MP4(Enhanced aacPlus)
1	i-motion movie	ASF

Icon	Туре	File format
	Partially saved i-motion movie	_
IJ	Melody	SMF
1	Melody	MFi
	Complete PDF file	PDF
56.0	Partial PDF file	PDF
	Incomplete PDF file	PDF
	Damaged PDF file	PDF
F	Kisekae Tool file	_
DL	Partially saved Kisekae Tool file	_
Œ	Chara-den image	_
•	Word file	WORD
<b>20</b>	Excel file	EXCEL
<b>4</b>	PowerPoint file	POWERPOINT
etc	Incompatible file	_

- For the file with the file restrictions, " is added to each icon.
- Some files have restrictions on the number of playbacks, playback deadline, or playback period. "①" is added to the icon of the file with playback restrictions and "①" is added to the icon of the file with expired playback restrictions.

## ②Acquired source

Icon	Description	
<b>8</b> *	Obtained from sites or i-mode mail attachment	
6	Files shot by the FOMA phone $\begin{picture}(100,0) \put(0,0){\line(1,0){100}} \put(0,0){\line(1,0$	
_	Files recorded by the voice recorder $PRO \mu$ " $\P$ " appears.	
•	Obtained from infrared data exchange or iC communication or microSD memory card	
a E	Files of recorded Chara-den images $\begin{picture}(1,0)\put(0,0)\pu$	

%For the copyrighted file movable to the microSD memory card, "  $\frac{1}{2D}$  " is displayed. **③Available operation** 

Icon	Description
	Attach to i-mode mail
E.g.	Insert image into Deco-mail
	Set display
<u> </u>	Send Ir data, iC transmission
∳SD	Copy to microSD memory card
2	Upload

## <Picture Viewer>



# **Displaying Images**

You can display the still images saved to the FOMA phone or the microSD memory card.

Data box My picture Select a folder Select a file.



- Each time you press from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 305 for the Function menu on the Folder List.
- The image on the right is displayed when you cannot display a preview image:



 For folders, the preview images on the right are displayed.





destination folder

- When selecting folders or still images by another function, some folders or still images may not be displayed depending on the function. You may at times be able to confirm the still image by pressing (Play) while you are selecting it.
- See page 169 when you select "Search by i-mode".

## Operations when playing back still images

• See page 276 for when you operate from the Function menu.

Operation	Key operation
Display the next file*1	0
Display the previous file*1	0
Zoom (Enlarge/Reduce)**2	● ( Zoom )  • IP ( → ) or ( → ) to display enlarge/ reduce during zooming  • ( Return ) to return to the former file

- %1 Files are displayed in the order on the Still Image List.
- \*2 You cannot operate depending on the image size or file format.

#### ■ Specifications for playing back still image files

File format	JPEG <sup>*1</sup> , GIF, Flash
Extension	jpg, gif, swf, ifm
Pixels	Files of 5M (2592 x 1944) size or smaller*2
File size	Still images of 2 Mbytes or less

- \*1 The types of JPEG file you can play back are Baseline and Progressive of the Exif/CIFF/JFIF format.
- \*2 For the file in the progressive format, you can display the file of VGA (640 x 480) size or smaller.
- You cannot display some files even if their file formats are supported.

## Function Menu of the Still Image List

Function menu	Operation/Explanation
Edit picture	See page 277.
Edit title	<ul> <li>Enter a title.</li> <li>For a file in the FOMA phone, you can enter up to 9 full-pitch/18 half-pitch characters.</li> <li>For a file on the microSD memory card, you can enter up to 18 full-pitch/36 half-pitch characters.</li> </ul>

Function menu	Operation/Explanation	
Display picture	You can display the image.	
Set display	You can paste the image to the Stand-by display and other displays for displaying.  See "Positioning" for the position to which you paste the still image.  ▶ Select the display you paste it to.  • "★" is displayed for the pasted items but not for the videophone related items other than "Videophone dial" or "V.phone incoming" even if already pasted.  • If you select the videophone related items other than "Videophone dial" or "V.phone incoming", an appropriate message is displayed at the center of the still image.	
Picture info	You can display the still image title, file name and others.  The item of "Set display" only is displayed for "Picture info" of original animations.	
Attach to mail	Go to step 2 on page 182.  • You can compose an i-mode mail message also by pressing  ( ).	
Decorate mail	You can compose Deco-mail using data in the "Decomail-picture" folder or "Decomail-pictograph" folder. Go to step 2 on page 182.  See page 186 for Deco-mail.	
Send Ir data	See page 309.	
transmission	See page 311.	
Add desktop icon	See page 114.	
Copy to microSD	See page 298.	

Function menu	Operation/Explanation	
Store in Center	You can save the still image stored in the FOMA phone to the Data Storage Center. Data Security Service is a pay service that is available on a subscription basis.  ▶ Enter your Terminal Security Code  ▶ Put a check mark for still images to be saved  ▶ ☑ (Finish) ▶ YES  • You can select up to 10 still images.  • You can switch between "Picture" and "Title name" by pressing ☐ (FUNC).  • While a still image is displayed, you do not need to put a check mark for the still image.	
Copy to phone	See page 299.	
Move to microSD	See page 300.	
Move to phone	See page 300.	
Positioning	You can set the position for when you paste the still image to the Stand-by display, etc.  See page 274 for "Set display".  Select a position for displaying.	
Edit file name	► Enter a file name. • You can enter up to 36 half-pitch alphanumeric characters.	
File restriction	If you set "File restricted" for the file, the operation of attaching to i-mode mail is disabled at the receiving end who receives the image as the first distribution.  File unrestricted or File restricted  See page 148 for the file restrictions.	
DPOF setting	See page 317.	
Slideshow	All still images are consecutively displayed starting from the still image selected in the folder. You can select the speed the still image switches at.  Normal or Slow  Press (Stop) to stop Slideshow. Press (Resume) again to resume Slideshow.	
Сору	You can copy the still image, moving image, PDF file, document file, or SD other file on the microSD memory card to another folder on the microSD memory card.  Select a destination folder.	

Function menu Operation/Explanation		
Move	You can move the still image, moving image, PDF file, document file, Kisekae Tool file, or SD other file to another folder.  Select a destination folder.  Press () () to display folders at the second-tier level or lower, if they exist. Press (CLR) to return to the upper level.	
Delete this	►YES	
Delete all	You can delete all files in the folder.  ▶ Enter your Terminal Security Code▶YES	
Multiple-choice	You can select multiple files and operate them.  Put a check mark for the files to be operated  IRC   FUNC  > Select an item.  Picture/Title name/Listing See page 275, page 293 and page 313.  Delete. See "Delete this" on page 275.  DPOF setting. See page 374.  Move See page 274.  Move See page 275.  Copy to microSD See page 298.  Copy to microSD See page 299.  Send Ir data. See page 309.  Select all Selects all files.  Release all. Releases all selected files.	
Memory info	You can display the used memory space (estimate)/number of stored items.	
Sort	You can change displayed order.  ► Select an order.  • You cannot sort the files on the microSD memory card.	
Picture/	You can switch the lists of still images.	

You can switch the lists also by pressing ( Change

the Still Image List.

Title name

#### Information

#### <Edit title>

• You may not be able to edit the title depending on the file.

#### <Display picture>

- You may not be able to execute Display Picture depending on the file.
- Flash movies are played back at the volume set for "Phone" of "Ring volume".
   When "Phone" of "Ring volume" is set to "Step", they are played back at "Level 2".

#### <Set display>

- Flash movies can be pasted only to "Stand-by display", "Wake-up display", "Dialing", "Calling", "Videophone dial", "V-phone incoming", "Mail sending", "Mail receiving", "Checking", and "Mail/msg. rcpt result".
- Animation GIF images cannot paste to the videophone related items other than "Videophone dial" or "V.phone incoming".
- The displayed size might differ from the actual size depending on the image size or the display pasted to.
- You cannot execute "Set display" for some image files.

#### <Attach to mail>

- You may not be able to compose i-mode mail depending on the image.
- See page 148 for attaching a file set with the file restriction to mail.

#### <Decorate mail>

- When an image size is larger than Sub-QCIF (128 x 96) size, the display for selecting how to convert the image size appears. The converted still image is saved as a separate new file.
- saved as a separate new file.

  Select "Attach directly"; then the image size does not change.

  Select "Sub-QCIF scale down"; then the image size is scaled down to Sub-QCIF (128 x 96) size or smaller with its proportional ratio retained.
- Select "Sub-QCIF trim away"; then the image size is scaled down or cut out to Sub-QCIF (128 x 96) size or smaller with its proportional ratio retained. If the file size exceeds the maximum size to create Deco-mail, its size is converted to the maximum size to create Deco-mail or less.
- Even if you scale down or cut out the still image to Sub-QCIF (128 x 96) size, you can again scale down or cut it out by pressing ((ancel)) or pressing
- (FUNC) and selecting "Cancel". When you press (FUNC) and select "Set", the Message Composition display appears.
- You may not be able to create Deco-mail depending on the image.

#### <Store in Center>

- You cannot save the following still images:
- · Images whose sizes exceed 100 Kbytes
- · Images whose output from the FOMA phone is prohibited · Images other than in JPEG or GIF format
- You cannot use Data Security Service when you are out of the service area.
- When you have not signed up for Data Security Service, the message to that effect appears.
- You can download the saved still images from the Data Storage Center site to your FOMA phone. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

#### <Edit file name>

- You may not be able to edit the file name depending on the file.
- You cannot use half-pitch space for the file name.

#### <File restriction>

• You may not be able to set the file restrictions depending on the file.

#### <Slideshow>

- Flash movies are not displayed.
- The time interval to show the images might differ depending on the image.

#### <Copy> <Move>

 If a call comes in while copying/moving multiple files, copying/moving is canceled even midway.

## <Delete this> <Delete all>

• If a call comes in while deleting multiple files, deleting is canceled.

#### <Multiple-choice>

 You can select up to 3,500 still images, moving images, melodies, PDF files and Kisekae Tool files, and up to 100 document files and SD other files.

#### <Picture/Title name>

• When you use "Picture" to display still images, some images may appear different.

 
Function Menu while Playing Back Still Image		
Function menu	Operation/Explanation	
Edit picture	See page 277.	
Set display	See page 274.	
Picture info	See page 274.	
Attach to mail	See page 274.	
Decorate mail	See page 274.	
Send Ir data	See page 309.	
transmission	See page 311.	
Display size	You can set whether to display the still image in original size (normal size) or to fit to the display size.  Normal or Fit in display  Even if you set to "Normal", the still image in excess of the display size is reduced to the display size.	
Add desktop icon	See page 114.	
Copy to microSD	See page 298.	
Store in Center	See page 274.	
Copy to phone	See page 299.	
Positioning	See page 274.	
DPOF setting	See page 317.	
Delete	See "Delete this" on page 275.	
Retry	You can play back the animation or Flash movie from the beginning.	

## <Edit Picture>

# **Editing Still Images**

- Still Image List/Still image in play

  | | Still Image List/Still image in play
  | | Still Image List/Still image in play
  - When the still image is larger than VGA size, it is reduced to VGA size.
  - When the still image to be edited is larger than the display size, use to scroll it.



Edit Picture display

2 FUNC > Edit the still image.
See page 278 to page 279 for how to operate.

( Save ) ➤ YES or NO

YES . . . . Overwrites the image to save.

NO . . . . . Saves the image as a new still image.

The edited still image is saved.

- To edit and save an edited still image on the microSD memory card, press

  (Save) in step 3; then it is saved to the "i-mode" folder anew.
- Not to save the edited still image, press (CLR) or (ST); then select "YES".
- See page 170 when images are stored to the maximum.

## ■ The size of still image you can edit

Edit menu	2M 1M VGA	Stand-by CIF QVGA QCIF Sub-QCIF	1.4M Wide	Other sizes smaller than VGA
Marker stamp	0	0	0	0
Frame	×	0	×	×
Character stamp	0	0	0	○*1
Cushy mark	×	0	×	0
Change size	0	0	0	0
Trim away	0	0	0	○*2
Retouch	×	0	0	0
Rotate	0	0	0	0
Brightness	0	0	0	0
Attach to mail	0	0	0	0

 $<sup>\</sup>bigcirc$ : Editing picture is enabled.  $\times$ : Editing picture is disabled.

### Information

- You can execute "Edit picture" only for the "File unrestricted" files of still images shot by the cameras, obtained by data communication, downloaded from sites, or retrieved from i-mode mail.
- You cannot edit some still images, or you might have difficulty to produce editing effect.
- If you repeat editing image such as pasting frames or marker stamps to the shot still image, the image quality may deteriorate or the file size may become larger.

X1 You cannot edit the still image smaller than 24 x 24 dots.

<sup>※2</sup> You cannot edit the still image of Chat Picture (80 x 80) size or smaller.

You can edit the still images of 1920 x 1440 dots, 1616 x 1212 dots, 1632 x 1224 dots, and 1280 x 960 dots as well.

- If you change the size of a still image, some still images cannot be allowed to edit picture.
- If the battery runs out during editing, the edited contents are discarded.
- The file name, title, storage location, and acquired source of the newly saved still image are as follows:
  - · File name: "YYYYMMDDhhmmnnn"
  - · Title: "YYYY/MM/DD hh:mm"
    - (Y: year, M: month, D: date, h: hour, m: minute, n: number)
  - Storage location: Folder the source file is saved to (Still images on the microSD memory card are saved to the "i-mode" folder.)
  - · Acquired source: The same as the source file

# **Function Menu of the Edit Picture Display**

Function menu	Operation/Explanation
Marker stamp	You can add the marker stamp in the "Stamp" folder.  ➤ Select a marker stamp.  • You can rotate the marker stamp by pressing (FUNC) and selecting "90° to right/90° to left/180°". Select "Scale up/ Scale down" to enlarge or shrink the marker stamp.  • You can reselect a marker stamp by pressing (ancel).  ➤ Use to position the marker stamp and press (Put).  • You can add a marker stamp by pressing (Add).  ➤ (Set)
Frame	Select a frame ○ ( Set )  You can add the frame whose size is the same as the size of the image you are editing.  You can display the previous or next frame by pressing □. Press and hold □ for at least one second to display sequentially.  You can rotate the frame by pressing □ (FUNC ) and selecting "180" rotation".  You can reselect a frame by pressing □ (Cancel ).

Function menu	Operation/Explanation
Character stamp	You can add text.  Finter characters. You can enter up to 15 full-pitch/30 half-pitch characters. However, the number of characters you can enter decreases depending on the size of the still image.  Press (R) (FUNC) and select "Character color" to select a color; then, you can change the color of characters. You can switch between "16 Color" and "256 Color" by pressing (Change).  Select "Font" to change the character fonts.  Select "Character size" to enlarge or shrink characters.  Select "Character input" to edit entered characters.
	► Use  to position the characters and press  (Fut )  ► (Set )  • You can reselect a position by pressing  (Cancel ).
Cushy mark	You can compound a cushy mark in the "Stamp" folder. The person's facial region is automatically recognized and the cushy mark is pasted to an appropriate position.  ▶ Select a cushy mark.  ● Press [□x]( FUNC ) and select "Scale up/Scale down" to enlarge or shrink the cushy mark.  ● To cancel, press [□x]( Cancel ).
	► Use to position the cushy mark and press (Fut ).  • The cushy mark that comes out of the still image is cut off.  • You can add a cushy mark by pressing (Add ).  • (Set )
Change size	Select an image size to change to. If you select the size different in proportional ratio from the source still image, the still image is enlarged or shrunk so that it does not exceed the selected size with its proportional ratio retained.  Set
	● You can reselect a size by pressing (Cancel).

Function menu	Operation/Explanation
Trim away	You can trim the still image to a certain size.  Select an image size to trim to.  You cannot select a trimming frame larger than the still image you are editing.  When you select "Dial/recv. PIC (240 x 144)", the still image you are editing or the trimming frame are halved at both lengthwise and sidewise to be displayed.
	Use to select a part to be trimmed and press Set ).
	You can reselect a size to trim by pressing (☑)( Cancel ).
	You can reselect a part to be trimmed by pressing     (Cancel).
Retouch	You can set texture and color tone of the still image.  ▶ Select an item. Sharp
Rotate	▶ 90° to right, 90° to left or 180° ▶ ② ( Set )  • You can reselect the rotation angle by pressing ☒ ( Cancel ).
Brightness	You can adjust the brightness to -3 (dark) through +3 (bright).  Select a brightness level.
Attach to mail	See page 274.
Save	See page 277.

#### <Marker stamp>

- You cannot select the marker stamp with following sizes:
- · When the size is larger than the still image to be edited
- · CIF (352 x 288) · VGA (640 x 480) · Stand-by (240 x 427) · QVGA (240 x 320) · QCIF (176 x 144) · Sub-QCIF (128 x 96)
- You cannot enlarge a marker stamp to the size larger than the still image you are editing.

#### <Character stamp>

 You cannot set some character colors depending on the image to be edited. In that case, select another color.

#### <Cushy mark>

- You cannot select a cushy mark larger than VGA (640 x 480) size.
- You can enlarge or shrink a cushy mark up to three times, but cannot enlarge it to the size larger than VGA (640 x480) size.
- Person's face or outline might not be recognized correctly. When multiple persons' faces are found, a single person's face only is recognized.

## <Original Animation>

# **Creating Animations**

You can select up to 20 JPEG files (20 frames) of Stand-by (240 x 427) size or smaller from the "i-mode" folder, "Camera" folder and user folders, and play them back as an animation. You can store 20 original animations.





- To change, select an original animation you have set.
- Select a frame position from <1st> to <20th>.
- Select a folder Select a still image.
  - To release the stored still image, select "Release this".
- Repeat step 2 ► (Finish

## **Function Menu of the Original Animation List**

Function menu	Operation/Explanation	
Edit title	► Enter a title. • You can enter up to 9 full-pitch/18 half-pitch characters.	
Org. animation	Go to step 2 on page 279.	
Display picture	You can play back the original animation.	
Set display	See page 274.	
Picture info	See page 274.	
Release animation	▶YES	

## **Function Menu while Playing Back Original Animation**

Function menu	Operation/Explanation	
Set display	See page 274.	
Display size	See page 276.	
Retry	You can play back the original animation again.	

## Information

• If you delete a still image stored in an original animation, the original animation which contains the still image is released.

## <i-motion Player>

## Playing Back Moving Images/i-motion Movies

You can play back moving images saved to the FOMA phone or the microSD memory card.



Data box ≥ 8 motion ≥ Select a folder > Select a file.





Moving Image List

- Each time you press (MENU) from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 305 for the Function menu on the Folder List.
- See page 169 when you select "Search by i-mode".
- The following images are displayed when you cannot display the preview images:



Cannot be played back



No preview images



Expired playback restrictions, etc.

DL Incomplete

download

- When you select a folder or i-motion movie from another function, some folders or i-motion movies may not be displayed depending on the function. You may be able to confirm the i-motion movie by pressing (☑)( Play while selecting an i-motion movie.
- Depending on the i-motion movie, you can play back by selecting a chapter set for the i-motion movie. (See page 283)

## Operations when playing back moving image

• See page 283 for when you operate from the Function menu.

Operation	Key operation
Quick View	
Mute	• in (
Pause <sup>※1</sup>	(
Play back frame by frame <sup>*2</sup>	● Each time of pressing proceeds frame by frame.
Sound volume adjustment	or A/v Press and hold to adjust the sound volume sequentially. Setting from Level 0 (Silent) through 6 is available.
Display next file or chapter <sup>*3</sup>	
Display previous file or chapter*3	<b>○</b> *4
Search (fast forward) <sup>※2</sup>	Press and hold .
Search (fast rewind) <sup>※2</sup>	Press and hold .
Change vertical disp./horizontal disp./full disp.	( Wide )     Each time of pressing switches display format.
Remaster	● Each time of pressing switches between "ON" and "OFF".
Listening	<ul> <li>8</li> <li>Each time of pressing switches in order of "OFF"</li> <li>→ "Surround" → "Natur1" → "Natur2".</li> </ul>
Equalizer	● Each time of pressing switches in order of "Normal"  → "S-XBS1" → "S-XBS2" → "Train".

- \*1 You cannot operate this for a streaming type of i-motion movie.
- \*2 You cannot operate this for a streaming type of i-motion movie, or when you are playing back an i-motion movie while obtaining it. Further, you might not be able to operate this depending on the i-motion movie.
- \*3 Moving images having no chapters are switched in the order on the Moving Image List. This operation is available when you play back from the Moving Image List. Moving images having chapters are switched in the order that the chapters are stored.
- \*4 When playback time is over three seconds, you go back to the beginning of the file. (A moving image having chapters returns to the top of the chapter.)

## ■ Specifications for moving image playback

File format	MP4, ASF	
Coding system	MP4 file	Image: MPEG4, H.263, H.264 Audio: AMR, AAC, AAC+ (HE-AAC), Enhanced aacPlus
	ASF file	Image: MPEG4 Audio: G.726
Pixels	MPEG4: Files of VGA (640 x 480) size or smaller  H.263: Files of Sub-QCIF (128 x 96) or QCIF (176 x 144) size only	
	H.264: Files	s of QVGA (240 x 320) size or smaller
Extension	sdv, 3gp, mp4, asf	

• Even when the file format is supported, you might not be able to play back some

## When you select "Position memory" from the Folder List of moving images

The display for selecting Position Memory appears. When you select "Marker to resume" or "Position memory 1/2", the moving image is played back from the stored position.

	This is stored automatically when a call comes in, an alarm operates, or the battery level goes flat during playback of a moving image, or when you terminate the i-motion player during playback.
	You can store in any optional position in a moving image, and create up to two position memories. (See page 283)

- To delete "Position memory", press (IR) (IFUNC ) and select "Delete". You cannot delete the "Marker to resume".
- When the moving image with a position memory has been deleted or moved to another folder, you cannot play it back.

- While searching (fast forward or fast rewind) a moving image or playing it back frame by frame, it does not sound. You can search (fast forward or fast rewind) while pausing or playing back the moving image (including slow and quick view).
- If you receive mail or a Message R/F when playing back an i-motion movie, the video or sound might be interrupted.

# **Function Menu of the Moving Image List**

Function menu	Operation/Explanation
Edit 🖁 motion	See page 285.
Edit title	See page 273.
Set § motion (Ring tone)	You can set a moving image for a ring tone.  ▶ Ring tone ➤ Select an incoming type ▶ ☒(Finish)  • The set item is indicated by "★".
Set ୍ଞି motion (Stand-by display)	You can set a moving image to Stand-by display.  ▶ Stand-by display ▶ YES ▶ ( Finish )
Set ୍ଞି motion (Wake-up display)	You can set a moving image to Wake-up display.  ► Wake-up display ► YES ► ( Finish )
8 motion info	You can display the i-motion movie title, file name and others.
Attach to mail	You can compose an i-motion mail message with the file attached. Go to step 2 on page 182.  • You can compose it also by pressing ().
Send Ir data	See page 309.
transmission	See page 311.
Copy to microSD	See page 298.
Copy to phone	See page 299.

Function menu	Operation/Explanation	
Move to microSD	See page 300.	
Move to phone	See page 300.	
Сору	See page 274.	
Move	See page 275.	
Add desktop icon	See page 114.	
Edit file name	See page 274.	
File restriction	See page 274.	
Reset title	You can reset the title to the default. ▶YES	
Delete this	See page 275.	
Delete all	See page 275.	
Multiple-choice	See page 275.	
Memory info	You can display the used memory space (estimate).	
Sort	See page 275.	
Listing	You can change the displayed contents for Moving Image List. You can select whether the title or file name is displayed in the microSD Memory Card List.  Select a display format.  Title  The titles or file names are listed.  Title + Image  The title or file name, and image are displayed at a time. The displayed image is the first frame of moving image.  Title/File name  You can select whether to display the title or file name.  In the case of the microSD Memory Card List, "Title" is displayed as "Name", and "Title + Image" is displayed as "Name + Image".  You can switch the lists also by pressing (Change) from the Moving Image List.	

#### 

- tone or receiving display.

#### <Attach to mail>

- When the file size is larger than 2 Mbytes, the confirmation display appears asking whether to cut it out to the mail size. Select "YES" to cut out the i-motion movie from the beginning to the about 2-Mbyte point.
- You may not be able to compose i-mode mail depending on the i-motion movie.
- Depending on the i-motion movie, its file size may become larger or smaller.
- You cannot attach an i-motion movie in excess of 2 Mbytes to mail from the Edit amotion display. See "Trim for mail" for how to cut out the i-motion movie for attaching to i-motion mail.

## Function Menu during Pause/at the End of Playback

Function menu	Operation/Explanation	
Normal play	The moving image is played back at the normal speed.	
Chapter list	You can display the list of chapters stored in the moving image and select a chapter to be played back.  Select a chapter to be played back.	
Slow	The moving image is played back mute at half the normal speed.  ■ To cancel Slow playback, press (□)( □ □), or perform "Normal play".	
Quick View (1.25x)	The moving image is played back at the speed 1.25 times the normal speed.  • Press (()()()) to play back the moving image at twice the normal speed. Press (()()) to play back at the normal speed.	
Quick View (2x)	The moving image is played back at twice the normal speed.  • To cancel Quick View, press ((), or perform "Normal play".	
Stop	You can end playback.	

Function menu	Operation/Explanation	
Position to play	You can set the start point for playing back the moving image.  > Use (a) to move the cursor position of the time bar and press (a) ( Set ( )).  • To cancel, press (CLR).	
Sound effect (Remaster)	You can bring the sound from an earphone to the original sound by complementing high-pitch range lost at data compression.  ▶ Remaster ➤ ON or OFF	
Sound effect (Listening)	You can set sound effect for when using an earphone.  Listening Select an item.  Surround Makes the sound natural and stereophonic.  Natur 1/2 Complements the cooped-up feeling specific to earphones and plays back natural sound.  Select 1 or 2 according to your taste.  OFF Sets Listening to "OFF".	
Sound effect (Equalizer)	You can change the quality of sound from an earphone. ▶ Equalizer ▶ Select an item. Normal Reproduces normal sound quality. S-XBS1 Enhances bass sound. S-XBS2 Enhances bass sound more deeply than S-XBS1. Train Minimizes abnormal sound that causes sound leakage.	
Position memory	You can store a position memory in the moving image. Store it at the desired position in pause state.  Position memory1 or Position memory2	
Edit 🖁 motion	See page 285.	
Attach to mail	See page 282.  • You can compose an i-mode mail message also by pressing  () () from the playback end display.	
Set 🖁 motion	See page 282.	
8 motion info	See page 282.	

Function menu	Operation/Explanation
Send Ir data	See page 309.
transmission	See page 311.
Copy to phone	See page 299.
Add desktop icon	See page 114.
Display size	You can set the display whether to display a moving image in the original size (Actual size) or to fit to the display size.  Actual size or Fit in display  Even if you set to "Actual size", the moving image in excess of the display size is reduced to the display size.
Change to full	You can change the display format of moving images. Each time of selecting the item switches in order of playback on the

vertical display → playback on the horizontal display fitted to

the display size → playback on the enlarged full size display.

#### Information

#### <Chapter list>

- When restrictions on chapter forward/rewind are applied, you cannot select chapters after/before the one you are currently playing back.

   Slow>
- You cannot slow-play the following i-motion movie:
- · A streaming type of i-motion movie
- · An i-motion movie being played back while obtaining data
- · An i-motion movie played back from the Stand-by display

#### <Quick View>

- You cannot execute Quick View for some i-motion movies.
- i-motion movies are not played back in stereo sound during Quick View.
- $\bullet$  It may be hard to hear sound during Quick View.

### <Position to play>

 You might not be able to select the position to play depending on the moving image/i-motion movie.

#### <Sound effect>

- Even if an earphone is not connected, the respective setting contents are shown on the display.
- When audio format of the i-motion movie is AMR or G.726, sound effect might be unavailable.

## Information

#### <Position memory>

 You might not be able to store the position memory depending on the moving image/i-motion movie.

#### <Display size>

- Depending on the image size, the image might be displayed with the right or bottom side cut off.
- <Change to full>
- The moving image of QCIF (176 x 144) size or smaller is not played back in full display.
- Depending on the image size, the image might be displayed with the right or bottom side cut off.

# **Using Playlist**

You can store moving images in a playlist, and continuously play them back in the order you like. You can create up to five playlists, and can store up to 30 moving images per playlist.

## **Store Playlist**

Data box ☐ motion ☐ Playlist ☐ Select Playlist 1 through 5.



2 Select <1st> through <30th>▶ Select a folder ▶ Select a moving image.

# Repeat step 2 🖂 (Finish

- To release a stored moving image, press (FUNC) and select "DEL one from list". Select "DEL all from list", then you can release all the stored moving images.
- To change the order of stored moving images, press (a) (FUNC) and select "Order to play", and select a moving image whose position to be changed. Then, select the destination position to change the order.

## Information

You cannot store partially saved i-motion movies to the playlist.

## **Play Back Playlist**

Playlist List ► Highlight a playlist and press ( Play ).



## **Function Menu of the Playlist List**

Function menu	Operation/Explanation
Play	See page 285.
Edit playlist	You can edit the playlist. Go to step 2 on page 284.
Release playlist	You can release all moving images stored in the playlist.  >YES
Edit playlist name	You can edit the name of the playlist.  Edit a playlist name.  You can enter up to 10 full-pitch/20 half-pitch characters.

## <Edit # motion>

# **Editing Moving Images/i-motion Movies**

You can edit the moving image/i-motion movie. The moving image/ i-motion movie you edited is saved to the folder containing the source moving image/i-motion movie.

- Moving Image List/During pause/At the end of playback ► (FUNC )
  - ► Edit 🖁 motion



Edit 8 motion display

- FUNC ) Edit the moving image/i-motion movie. See page 286 for how to operate.
- - Not to save the edited moving image/i-motion movie, press (CLR) or (3): then select "YES".





YES

The edited moving image/i-motion movie is saved.

• See page 170 for when i-motion movies are stored to the maximum.

## ■ Operations during editing an i-motion movie or demo playback

Operation	Key operation
Pause	
	● Press ( ) ( ) to resume play back.
Fast forward	Press and hold .
Fast rewind	Press and hold .
Forward frame by frame	During pause, press O.
Rewind frame by frame	During pause, press .
Sound volume adjustment	O or ♠/▼

You cannot do some operations depending on the state.

## Information

- You cannot edit the following moving images/i-motion movies:
   The files with "File restriction" and "Replay restriction" obtained from sites or
- i-mode mail

   The files other than VGA (640 x 480), HVGA Wide (640 x 352), QVGA (320 x
- 240), QCIF (176 x 144) and Sub-QCIF (128 x 96) size

  The files saved to the microSD memory card
- You might not be able to edit some i-motion movies.
- When a call comes in, the battery level goes flat, or you close the FOMA phone
  while editing, the confirmation display appears asking whether to save the fixed
  edited contents.

Function Me	Function Menu of the Edit 🖁 motion Display	
Function menu	Operation/Explanation	
Trim ☐ motion	You can cut out a certain range from an i-motion movie.  > Use ( ) to display a start frame and press ( ) ( Start ).  The start frame is set and the moving image/i-motion movie is played back.	
	Press (() () at the position you want to cut out. Playing back the moving image/i-motion movie pauses.	
	► Use  to display an end frame and press ( End ). The cut out range is played back.  • When the file size reaches about 10 Mbytes, the end frame is automatically set.	
	Press ☑( Set ).  • Press ☑( Play ) to play back a demo to check the edited moving image/i-motion movie.	
Trim for picture	You can cut out the still image and save it.  ► Use () to display a frame and press () Set () YES  ► Select a folder.  • See page 170 for when images are stored to the maximum.	
Trim for mail	You can cut out the moving image/i-motion movie to the size attachable to i-mode mail.  ▶ Mail size (S) or Mail size Mail size (S)  Cut out to the size of about 500 Kbytes or less.  Mail size  Cut out to the size of about 2,048 Kbytes or less.	
	► Use O to display a start frame and press (Start). The moving image/i-motion movie is played back. When the file size reaches about 500 Kbytes, about 2,048 Kbytes, or at the end of playback, the playback stops automatically.	
	● Press ☑( Play ) to play back a demo and you can check the edited moving image/i-motion movie.	

Function menu	Operation/Explanation
Attach to mail	See page 282.
File restriction	See page 274.

<Trim 8 motion>

• If you execute "Trim a motion", the file size may become larger.

# Function Menu while i-motion Movie is Edited or Demo Playback is in Pause

Function menu	Operation/Explanation
Normal play	You can play back at the normal speed.
Slow	You can play back mute at half the normal speed.
Quick View (1.25x)	You can play back at the speed 1.25 times the normal speed.
Quick View (2x)	You can play back at twice the normal speed.
Starting point	You can set the start frame for "Trim $\ _{8}^{6}$ motion" and "Trim for mail".
Ending point	You can set the end frame for "Trim 🖁 motion".
Determine	You can set the frame for "Trim for picture".
Stop	You can stop playing back.

#### <Chara-den>

## What is Chara-den?

Chara-den is an animation character representing yourself. You can send it as your image during videophone calls.

You can use the Chara-den player to play it back and shoot it.

- You can delete the pre-installed Chara-den image. You can re-download it from the "P-SQUARE" site (see page 170).
- When you use a UIM other than the one used for downloading, the UIM restrictions (see page 38) are set to it.
- Some Chara-den images synchronize their movement with your voice spoken into the microphone.

### <Chara-den Player>

 
# **Displaying/Operating Chara-den Images**

You can display stored Chara-den images.

You can press keys to make the Chara-den image move.



▶ Data box ➤ Chara-den ➤ Select a Chara-den image.



### ■ Key assignment of operating Chara-den

You can use the Action List to check the actions that you can operate.

The number of actions you can operate differs depending on the Chara-den image.

Key operation	Details
1)~(9) #1)~(#)(9)*1*2 (Whole Action Mode)	Whole action: expresses an action with whole of the body.
(Parts Action Mode)	Parts action: expresses an action with a part of the body.
0	Suspends the running action.
MENU	Displays the Action List.
	Makes a videophone call.
<b>(6)</b>	Records Chara-den images.  [PRO µ] Not available

<sup>%1</sup> You cannot operate for the pre-installed Chara-den image.
%2 Press (#) again to cancel the first (#).

## **Function Menu of the Chara-den List**

Function menu	Operation/Explanation
Chara-den call	See page 73.
Substitute image	See page 73.
Rec. Chara-den	See page 289. PRO µ Not available
Edit title	► Enter a title.  • You can enter up to 18 full-pitch/36 half-pitch characters.
File property	You can display the title, file name, and others of the Chara-den image.
Memory info	You can display the used memory space (estimate).
Add desktop icon	See page 114.
Delete	▶YES

Function menu	Operation/Explanation
Delete all	► Enter your Terminal Security Code ➤ YES  • This operation deletes the pre-installed Chara-den image as well.
Multiple-choice	You can select and delete multiple Chara-den images.  Put a check mark for Chara-den images to be deleted  ( FUNC ) Delete YES
Display size	You can set whether to display the Chara-den image in "Actual size" or "Fit in display".  Actual size or Fit in display
Reset title	You can reset the title to the default one. ▶YES

#### Information <File property>

• "Rec. file restriction" denotes whether to restrict the operation such as attaching still images/moving images created by "Rec. Chara-den" to mail, saving them to microSD memory card, or editing them.

#### <Delete> <Delete all> <Multiple-choice>

• If you delete a Chara-den image set for the substitute image, a pre-installed substitute image will be sent.

# Function Menu of the Chara-den Display

Function menu	Operation/Explanation
Chara-den call	See page 73.
Substitute image	See page 73.
Rec. Chara-den	See page 289. $\overline{\text{PRO }\mu}$ Not available
Add desktop icon	See page 114.
Action list	You can display the list for actions that you can operate.  • Highlight an action, and press ((Select)) to run the action; and press ((Detail)) to check the details of the action.  • You can display the Action List also by pressing ((Detail)).

Function menu	Operation/Explanation
Change action  At Chara-den display  Whole Action Mode	You can switch the action modes between Whole Action Mode ( ) and Parts Action Mode ( • • ).
File property	See page 288.
Display size	See page 288.

#### <Record Chara-den>

## **Recording Chara-den Images**

You can shoot the displayed Chara-den image as a still image or moving image.

PRO u Not available

- MENU Data box Chara-den
  - Select a Chara-den image to be shot
  - Record )
  - You can select "Rec. Chara-den" also from the Function menu of the Chara-den List or Chara-den display for recording.



Chara-den Recording display

## **Shoot Still Images**

Display " a" on the Chara-den Recording display and press ( Record ).

A still image of the displayed Chara-den image is shot.

- While "☐" is displayed, press (๑)(Photo) to display "[๑]".
- Press ( ) The still image you have shot is saved to the "Camera" folder.

## **Record Moving Images**

Display "\mathbb{\textcolor{1}}" on the Chara-den Recording display and press ( ) (Record ).

Recording of the displayed Chara-den image starts.

- While "on" is displayed, press (on the lowest one) while "one" is displayed, press (one).
- Save
  - The recorded moving image is saved to the "Camera" folder.

#### Information

- The image size is fixed to QCIF (176 x 144).
- In Manner Mode or when "Phone" or "Mail" of "Ring volume" is set to "Silent", the recording confirmation tone, the recording start tone, and the recording end tone do not sound.
- When "Recording type" is set to "Video + voice", the voice is recorded as well. [When a Flat-plug Earphone/Microphone with Switch (option) is connected, the voice is recorded via the Earphone/Microphone.]

## Function Menu of the Chara-den Recording Display

Function menu	Operation/Explanation
Switch Chara-den	If you switch Chara-den images, the action mode switches to Whole Action Mode.  Select a Chara-den image to be displayed.
Substitute image	See page 73.
Action list	See page 288.
Change action	See page 289.
Display size	See page 288.
Recording size	You can set the size of the image for recording and saving a still Chara-den image. You can set only in Photo Mode.  > QCIF (176 x 144) or Small (117 x 96)
Recording type	You can set whether to record video or voice for recording and saving moving Chara-den images. You can set only in Movie Mode.  Video + voice or Video

Function menu Operation/Explanation

 
Recording quality You can set the image quality for saving a moving Chara-den image. You can set only in Movie Mode.

Normal, Prefer image quality, or Prefer motion speed

## <Melody Player>

# MENJ 16

## **Playing Back Melodies**



- Each time you press from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 305 for the Function menu on the Folder List.



# Select a folder ➤ Select a melody.



Melody List

Melody Playback display

- When selecting folders and melodies by another function, some folders or
  melodies may not be displayed depending on the function. Some melodies
  may be played back for confirmation while being selected, or you may at
  times be able to play back the melody by pressing (Play).
- See page 169 when you select "Search by i-mode".

## **Play Back Playlist**

You can repeatedly play back the melodies selected by "Edit playlist".



#### Operation while playing back a melody

Operation	Key operation
Halt	( Stop ),
Sound volume adjustment	or A/ **1 Press and hold to adjust the sound volume sequentially. Setting from Level 0 (Silent) through 6 is available.
Replay next file <sup>*2</sup>	0
Replay previous file*2	0

- %1 If the FOMA phone is closed, playback in halted.
- %2 Valid when played back from the Melody List.

- The melodies are played back at the volume set for "Phone" of "Ring volume".
   When "Phone" of "Ring volume" is set to "Silent" or "Step", they are played back at "Level 2". However, the melody played back when it is selected does not sound.
- Even if you change the volume while playing back, the volume set for "Phone" of "Ring volume" returns when you exit the Melody player.

# Function Menu of the Melody List

Function menu	Operation/Explanation
Edit title	● Edit the title.  For a file in the FOMA phone, you can enter up to 31 full-pitch/63 half-pitch characters.  For a file on the microSD memory card, you can enter up to 18 full-pitch/36 half-pitch characters.
Edit file name	► Edit the file name. • You can enter up to 36 half-pitch alphanumeric characters (except extension).
Play melody	See page 290.
Set as ring tone	► Select an incoming type. • "★" indicates the set item.
File restriction	You can set the file restrictions on the selected melody.  File unrestricted or File restricted  See page 148 for the file restrictions.
Add desktop icon	See page 114.
Attach to mail	You can compose an i-mode mail message with the selected melody attached. Go to step 2 on page 182.  ● You can compose it also by pressing ( )( ).
Send Ir data	See page 309.
transmission	See page 311.
Copy to microSD	See page 298.
Melody info	You can display the melody title, file name and others.
Copy to phone	See page 299.
Move to phone	See page 300.
Сору	You can copy the melody from a folder on the microSD memory card to another folder on the microSD memory card.  > Select a destination folder.
Memory info	You can display the used memory space (estimate).

Function menu	Operation/Explanation
Reset title	You can reset the title to the default. ▶YES
Delete (Delete this)	You can delete the melody stored in the FOMA phone.  ▶ Delete this ▶ YES
Delete (Delete selected)	You can select and delete multiple melodies stored in the FOMA phone.  Delete selected
	Put a check mark for melodies to be deleted  □( Finish ) ► YES
Delete (Delete all)	You can delete all melodies stored in the selected folder in the FOMA phone.  ▶ Delete all ▶ Enter your Terminal Security Code▶ YES
Delete this	You can delete the melody stored on the microSD memory card.  > YES
Delete all	You can delete all melodies stored in the selected folder on the microSD memory card.  ▶ Enter your Terminal Security Code▶YES
Multiple-choice	You can select multiple melodies stored on the microSD memory card and operate them.  Put a check mark for the melodies to be operated    iii (  FUNC  )   Select an item.  Delete
Sort	You can change displayed order.  Select an order.  You cannot sort the files on the microSD memory card.

Function menu	Operation/Explanation
Move	You can move the melody to another folder.  Select a destination folder
	Put a check mark for melodies to be moved  ▶ (Finish) ➤ YES
	Press () to display folders at the second-tier level or lower, if they exist. Press (CLR) to return to the upper level. For the microSD memory card, you do not need to put a check mark for the melodies.
Move to microSD	See page 300.

#### <Edit file name>

When the icon of the acquired source is " or " " or " " or " " or " " or " " or "

#### <File restriction>

- You can set the file restrictions only to the melody with the acquired source icon
   "
   —
   ".
- When the melody file exceeds 100 Kbytes by applying the restriction, you cannot set the file restrictions.

#### <Attach to mail>

• You cannot attach the melody with " ? " or " ? ", or the melody in excess of 100 Kbytes, whose acquired source icon is " " or " " " " or " " ".

#### <Melody info>

 You may not be able to attach to i-mode mail even when the file restriction in the melody information is "File unrestricted".

#### <Delete>

- When a melody set for another function is deleted, the setting returns to the default. (When the melody is set for an alarm tone of "Schedule" or "ToDo", or for "Alarm", it switches to "Clock Alarm Tone".)
- You cannot delete the pre-installed melody.

Function menu	Operation/Explanation	
Set as ring tone	See page 291.	
Add desktop icon	See page 114.	
Attach to mail	See page 291.	
Melody info	See page 291.	
Copy to microSD	See page 298.	
Copy to phone	See page 299.	
Play all/ Play portion	You can temporarily switch the play start positions of the melody.	

<Kisekae Tool>

# **Checking Kisekae Tool**

#### You can check the details on Kisekae Tool files.

- You can delete the pre-installed Kisekae Tool file. You can re-download it from the "P-SQUARE" site (see page 170). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 38) are set to it.
- Data box Kisekae Tool
  Select a Kisekae Tool file Select an item.



Selected image, ring tone or illumination are played back as a demo. If you select a color theme, the display is displayed in selected color theme.

- Each time you press with from the Kisekae Tool List, you can switch between
  the List in the FOMA phone and the microSD memory card. In the Folder List
  on the microSD memory card, you can display the Kisekae Tool List by
  selecting a folder.
- See page 305 for the Function menu on the Folder List.
- The image on the right is displayed when you cannot display a preview image.
- When you select a Chara-den image in a Kisekae Tool file, you can press

  RC (FUNC) to use the Function menu of the Chara-den display (see page 288).





cannot be No preview images played

• See page 169 when you select "Search by i-mode".

#### Information

- $\bullet$  You cannot set Kisekae Tool files on the microSD memory card at a time.
- Clock display cannot be played back as a demo.

## Function Menu while Kisekae Tool File is Displayed

Function menu	Operation/Explanation	
Edit title	See page 273.	
Preview	You can preview the Kisekae Tool file.	
Set at one time	You can set the Kisekae Tool file at one time. (See page 107)  ◆ You can set Kisekae Tool file at one time also by pressing ☑.	
File info	You can display the title, file name, and others of the Kisekae Tool file.	
Move to microSD	See page 300.	
Move to phone	See page 300.	
Reset title	You can reset the title to the default.  YES	
Move	See page 275.	
Delete this	See page 275.	
Delete all	You can delete all files in the folder.  ► Enter your Terminal Security Code ► YES	
Multiple-choice	See page 275.	
Memory info	You can check the used memory space (estimate)/number of stored items.	
Sort	See page 275.	
Listing	You can change the displayed contents for the Kisekae Tool List.  ▶ Title or Image  • You can switch the lists also by pressing (Change) from the Kisekae Tool List.	

# **About microSD Memory Card**

You need to obtain a microSD memory card separately to use the functions related to the microSD memory card.

The microSD memory card is available at mass retailers for home electric appliances etc.

- This FOMA phone supports a commercial microSD memory card of up to 2 Gbytes and microSDHC memory card of up to 4 Gbytes (As of December 2007).
  For the latest operation check information such as the memory capacity and manufacturers of microSD memory cards, access the following sites (Japanese only). Note that the microSD memory cards other than published in the sites might not correctly work.
  - ・From i-mode to P-SQUARE (As of December 2007) § Menu → メニュー/検索 (Menu/Search) → ケータイ電話
  - メーカー (Mobile Phone Maker)→ P-SQUARE
  - · From personal computers
  - http://panasonic.ip/mobile/

Note that the published information is the result obtained from the operation check, which does not necessarily guarantee all performances of those microSD memory cards.



QR code for accessing the

- During processing of the card, "←" is displayed. During processing of the card, never remove the microSD memory card, or turn off the FOMA phone. Check that processing of the card does not go on before turning off the FOMA phone, and then remove the microSD memory card.
- Folders and files on the microSD memory card are recognized up to about 65,500 items.
- When the FOMA phone or microSD memory card has many data files, it may take longer to access the files.
- The microSD memory card has an operating life. If you use the microSD memory card for a long time, you may not be able to write new data on it, or the card may be disabled.
- With the FOMA phone, you can save the downloaded still images, i-motion movies, melodies, Kisekae Tool files, Chaku-uta Full<sup>®</sup> music files, and i-oppli programs with the file restrictions to the microSD memory card. You cannot save the files IPs (Information Providers) do not permit.

#### Information

- You may not be able to use the microSD memory card formatted using a personal computer and other devices. Be sure to use the microSD memory card formatted with this FOMA phone.
- Note that formatting deletes all the contents on the microSD memory card.
- If you read/write data from/on a microSD memory card using a device other than this FOMA phone, the microSD memory card might become unusable depending on the device or operations.
- When you insert a microSD memory card which has been used with another device such as a personal computer into this FOMA phone, new files and folders to be used in this FOMA phone are created.

# Inserting/Removing microSD Memory Card

#### Inserting

Open the cover of the microSD memory card slot.



Pace the back surface of the microSD memory card upwards and insert the memory card.



- · Push it until it clicks.
- Close the cover of the microSD memory card slot.



#### ■ Removing

Open the cover referring the illustration of step 1 of "Inserting", and push the microSD memory card until it clicks.



 
- Pushing the microSD memory card inside pops up the card.
- Remove the microSD memory card.



#### ■ Icons on the display

The following icons appear when you insert the microSD memory card:

50: You can save and read data.



You cannot use the microSD memory card. Remove the microSD memory card and then insert it again.

If "si " is still displayed, execute "Check microSD" or "microSD format".

#### Information

- Do not insert or remove the microSD memory card with the FOMA phone turned on. It may damage the microSD memory card or its data.
- Note that microSD memory card may pop out when you insert or remove it.
- Check the direction of the microSD memory card, and then insert or remove it straight. If you obliquely insert the microSD memory card into the slot, the microSD memory card may be damaged.
- It may take long to initially read or write data after inserting the microSD memory card.

<SD-PIM>

# Displaying Data Items on microSD Memory Card

You can display the Phonebook entries, schedule events, ToDo items, mail messages, text memos, and bookmarks (i-mode/Full Browser) stored on the microSD memory card.

 You can operate in the same way on the detailed Phonebook display, detailed Mail display, and detailed Bookmarks display as when you display data stored in your FOMA phone.

See page 89 for detailed operations of the Phonebook.

See page 207 for detailed operations of mail.

 
See page 163 for detailed operations of bookmarks.

► LifeKit ► SD-PIM ► Select a category.



• If you select "Schedule", ToDo items are also displayed.

Select a file Select a data item.



## Function Menu of the Category List/microSD File Display/ **Data List/Detailed Data Display**

Function menu	Operation/Explanation	
Edit title	► Enter a title.  • You can enter up to 15 full-pitch/31 half-pitch characters.	
Add to phone	See page 297.	
Overwrite to phone	See page 298.	
Add one to phone	See page 297.	
Add all to phone	See page 297.	
Overwr. all to ph.	See page 297.	
Copy to microSD	See page 296.	
Delete this	►YES	
Delete all	You can delete all files in the currently displayed category.  ▶Enter your Terminal Security Code▶YES	
microSD info	See page 302.	
Property	You can display the detailed data display.	
microSD format	See page 301.	
Check microSD	See page 301.	

#### Information

<Delete this> <Delete all>

• When the access right is set for read only by devices such as a personal computer, the confirmation display appears asking whether to delete the data.

## Copy Data Items in the FOMA Phone to the microSD **Memory Card**

You can copy the Phonebook entries, schedule events, ToDo items, mail messages, text memos, and bookmarks stored in the FOMA phone to the microSD memory card.

#### Copy one to microSD

You can copy a single file from the FOMA phone onto the microSD memory card. A copied data item is saved as a single file. You cannot copy the secret code stored in a Phonebook entry.

Display for a data item to be copied | [ FUNC ]



► Copy to microSD > YES

#### Copy all to microSD

You can copy the data items of the category selected on the Category List or of the category displayed on the microSD File display from the FOMA phone to the microSD memory card. The copied data items are all saved as a single file.

You cannot copy secret codes or voice dial entries stored in the Phonebook entries.





- Copy to microSD
- ► Enter your Terminal Security Code > YES
- To copy scheduled events, select "Schedule", "ToDo", or "All" (Schedule and ToDo).
- To copy bookmarks, select "i-mode", "Full Browser", or "All" (i-mode and Full Browser).

- When you copy a file stored as secret data, the file is copied as an ordinary file.
- When you copy all files, the files stored as secret data are also copied.

- When you copy all the Phonebook entries, the contents of "Own number" are also copied.
- For copying mail, some files attached to mail may be deleted depending on file
- When you copy mail containing links to start an i-coppli program, the information about starting the i-oppli program in that mail is deleted.
- During copying, the FOMA phone is placed in the same status as it is out of the service area

#### Copy Data Items on the microSD Memory Card to the **FOMA Phone**

You can copy the Phonebook entries, schedule events. ToDo items. mail messages, text memos, and bookmarks (i-mode/Full Browser) stored on the microSD memory card to the FOMA phone.

• See page 304 for the number of data items that can be saved to the microSD memory card.

#### Add one to phone

You can copy the data item selected on the Data List or displayed on the detailed Data display to the FOMA phone.

Data List/Detailed Data display ► (\$\overline{\pi}\arphi) (FUNC) ► Add one to phone or Copy to phone > YES

### Add all to phone

You can copy all data items in all files of the category selected on the Category List or all data items in all files displayed on the microSD File display to the FOMA phone.

The copied data items are added to the FOMA phone.

Category List ► [\$\varphi\varphi\) | Func | > Add all to phone ► Enter your Terminal Security Code > YES or microSD File display [\$\varphi\alpha](\varphi\text{FUNC}) \rightarrow Add all to phone ► Enter your Terminal Security Code > YES

#### Add to phone

You can copy all data items in a file selected on the microSD File display or all data items displayed on the Data List to the FOMA phone. The copied data items are added to the FOMA phone.

microSD File display (FUNC ) Add to phone ► Enter your Terminal Security Code > YES or

Data List ► (FUNC ) ► Add all to phone ► Enter your Terminal Security Code > YES

#### Overwrite all to phone

You can copy all data items in all files of the category selected on the Category List or all data items in all files displayed on the microSD File display to the FOMA phone.

Note that the data items already stored in the FOMA phone are overwritten and deleted.

Category List ► (FUNC ) ➤ Overwr. all to ph. ► Enter your Terminal Security Code YES YES or

microSD File display (FUNC) Overwr, all to ph.

► Enter your Terminal Security Code YES YES

#### Overwrite to phone

You can copy all data items in a file selected on the microSD File display or all data items displayed on the Data List to the FOMA phone. Note that the data items already stored in the FOMA phone are overwritten and deleted.

- microSD File display ► 🛱 🗷 ( FUNC )
  - **▶**Overwrite to phone
  - ► Enter your Terminal Security Code ➤ YES ➤ YES or
  - Data List ► (FUNC ) ➤ Overwr. all to ph.
  - ► Enter your Terminal Security Code ➤ YES ➤ YES

### Information

- If the memory capacity of the FOMA phone runs short during copying, copying is suspended midway; however, the data already copied is stored.
- When you perform "Add one to phone" for a Phonebook entry, any group is not set if the group number or group name stored in the microSD file differs from that stored on the FOMA phone.
- $\bullet$  When you overwrite the Phonebook entries, the voice dial entries are deleted.
- When you copy a mail message with the Outbox or Inbox full, the oldest unprotected mail message is overwritten (the read one for the Inbox).
- When you execute "Add all to phone", you cannot copy the following data:
  - $\cdot$  Schedule events set for the same date and time
  - · Bookmarks of the same URL
- If the number of files stored on the microSD memory card increases, it may take long to read or write data.
- During copying, the FOMA phone is placed in the same status as it is out of the service area

# Copying Still Images, Moving Images, etc.

# Copy Files from the FOMA Phone to the microSD Memory Card

File name and the destination folder are as follows:

Still image (DCF standard)	The destination folder in the "Picture" folder PXXXXXXX (X denotes a numeral.)
Still image (Non DCF standard)	The destination folder in the "Image Box" folder STILXXXX (X denotes a numeral.)
Still image (Decomail- pictograph)	The destination folder in the "Decomail-pictograph" folder DIMGXXXX (X denotes a numeral.)
Moving image (With video)	The destination folder in the "Movie" folder MOLXXX (X denotes an alpha-numeral.)
Moving image (With only sound)	The destination folder in the "Other contents" folder MMFXXXX (X denotes a numeral.)
Melody	The destination folder RINGXXXX (X denotes a numeral.)
PDF file	The destination folder PDFDCXXX (X denotes a numeral.)

 When you copy or move a file between the FOMA phone and the microSD memory card, its file format might change.

## 

 When you have selected "Multiple-choice" to select the files to be copied, you can copy multiple files at a time.

- You can copy JPEG, GIF, SWF, MP4, MFi, SMF and PDF files in the "i-mode" folder, "Camera" folder, "Decomail-picture" folder, "Decomail-pictograph" folder and a user folder.
- You can copy multiple JPEG, GIF, SWF and MP4 files at a time but not others.
- When the files in the destination folder are stored to the maximum, a new folder is automatically created and files are saved to that folder.
- For the files other than still images, the message "Storage is changed to XXXXXXX" (XXXXXXX denotes a folder name) appears when copying is completed.
- You cannot copy the following files:
- · Files that you shot Chara-den models whose "Rec. file restriction" is "File restricted" · Files whose output from the FOMA phone is prohibited
- · Pre-installed Decomail-pictures
- · Files set with playback restrictions
- · Partially saved i-motion movies or Chaku-uta Full® music files
- PDF files partially downloaded page by page
- If you copy the file to the microSD memory card, the image quality may deteriorate or the file size becomes larger.

# Copy Files from the microSD Memory Card to the FOMA Phone

You can copy files from the microSD memory card to the i-mode folder in the FOMA phone.

(Decomail-pictographs are copied to the "お気に入り (Favorite)" folder in the "Decomail-pictograph" folder.)

- Still Image List/Still image in play/Moving Image List/ Moving image in pause/Moving image at the end of playback/Melody List/Melody during playback/PDF File\_List, which is on the microSD memory card
  - ►(\$\alpha)(\begin{array}{c} FUNC \end{array}) ➤ Copy to phone
  - When you have selected "Multiple-choice" to select the files to be copied, you can copy multiple files at a time.
  - See page 170 when images/i-motion movies/Melodies/PDF files are stored to the maximum.

- Do not pull out the microSD memory card during copying.
- You can copy JPEG, GIF, SWF, MP4, MFi, SMF and PDF files. However, you cannot copy a melody and a SWF file in excess of 100 Kbytes.
- You can copy multiple JPEG, GIF, SWF and MP4 files only at a time. However, you cannot copy multiple moving images of ASF format, VGA (640 x 480) and HVGA Wide (640 x 352) size, or in excess of 10 Mbytes.
- When you copy moving images, the images are cut out, converted or shrunk; therefore the image quality may deteriorate or the file size may become larger or smaller. However, a moving image whose video codec is H.264 is copied without being converted or shrunk.
- When you copy VGA (640 x 480) size or HVGA Wide (640 x 352) size of a moving image, the image is converted into QVGA (320 x 240) size. When you copy VGA (640 x 480) size or HVGA Wide (640 x 352) size of a moving image, ASF file, or the file in excess of 10 Mbytes, it might take a longer time.
- You cannot copy the moving image in excess of 10 Mbytes in the following cases:
   When the video codec is H.264
- ·When the audio codec is AAC, AAC+ (HE-AAC), or Enhanced aacPlus
- ·When the bit rate of the moving image is in excess of the restriction
- ·When searching (fast forward or fast rewind) is disabled
- ·When the moving image size is other than VGA (640 x 480), HVGA Wide (640 x 352), QVGA (320 x 240), QCIF (176 x 144) or Sub-QCIF (128 x 96) Some moving images cannot be copied in the conditions other than the above.
- Playback time of a copied ASF file might become longer.
- The file after copying takes the title of the one set on the microSD memory card.
   When no title is set on the microSD memory card or the default title is unknown, the file name will be the title.

<Movable Contents>

# **Moving Copyrighted Files**

# Move Files in the FOMA Phone to the microSD Memory Card

You can move the copyrighted file obtained from a site to the microSD memory card after encoding. The moved file is then saved to the destination folder in the "Movable contents" folder (the specified destination folder for Chaku-uta Full® music files). Some files you moved to the microSD memory card can be operated only with the UIM you used when moving, and some files can be operated with the UIM and the phone you used when moving.

Still image List/Moving image List/Melody List/ Kisekae Tool List/Chaku-uta Full® Music List

► (\$\varphi\alpha) (FUNC ) ► Move to microSD ► OK

#### Information

- You can move a file to the microSD memory card only when the acquired source icon is " "".
- Partially saved i-motion movies, Chaku-uta Full<sup>®</sup> music files and Kisekae Tool files cannot be moved to the microSD memory card.
- The setting is released if you move a file set for another function.

# Move Files from the microSD Memory Card to the FOMA Phone

You can move a copyrighted file from the microSD memory card to the "i-mode" folder in the FOMA phone.

Still Image List/Moving Image List/Melody List/
Kisekae Tool List/Chaku-uta Full<sup>®</sup> Music List, which is on the microSD memory card FUNC NOVE to phone

#### Information

- You can move a copyrighted file (with file restriction) to the FOMA phone only if its property for "Moved to phone" is "Available" or "Available (Same model)". In addition, you cannot move a file of "Available (Same model)" to the FOMA phone other than P705i µ/PROSOLID µ. See "Picture info", " ∃ motion info", "Melody info", "File info", or "Music info" to check whether the file is "Available", "Unavailable" or "Available (Same model)".
- The setting is released if you move a file set for another function.
- The moved files are saved to the "i-mode" folder. However, the Kisekae Tool files are saved to the "Kisekae Tool" folder and Chaku-uta Full® music files are saved to the "Initial folder" in Data Box.

# Move i- $\alpha$ ppli in the FOMA Phone to the microSD Memory Card

Some i- $\alpha$ ppli programs can be moved to and saved to the microSD memory card.

You cannot start the i-αppli program moved to the microSD memory card. Move it back to your FOMA phone to start. However, some i-αppli programs can be operated only with the UIM you used when moving, and some other programs can be operated only with the UIM and the phone you used when moving.

Software List/IC Card List

# Move i-αppli from the microSD Memory Card to the FOMA Phone

 
You can move an i-oppli program from the microSD memory card to the FOMA phone.

Software List ► (FUNC ) ➤ Move to phone ➤ YES

#### <SD Other Files>

# **Managing Unsupported Files**

You can save a variety of files which are not supported by the FOMA phone, or files in BMP and PNG format obtained by Full Browser, to the microSD memory card. (See page 198 and page 259) You can attach the saved files to an i-mode mail message to send, or check them on a personal computer.



- See page 305 for the Function menu on the Folder List.
- You cannot display the contents of the file using the FOMA phone.

### **Function Menu of the SD Other File List**

Function menu	Operation/Explanation	
Edit title	See page 273.	
File info	You can display the name and type of files.	
Attach to mail	You can compose an i-mode mail message with the file attached. Go to step 2 on page 182.  ● You can compose it also by pressing ( ).	
Сору	See page 274.	
Move	See page 275.	
Delete this	See page 275.	
Delete all	See page 275.	
Multiple-choice	See page 275.	
Memory info	You can display the used memory space (estimate).	

<microSD Format>

## **Formatting microSD Memory Card**

When you use the microSD memory card for the first time, you need to format (initialize) it. Be sure to use this FOMA phone for formatting. The microSD memory card formatted using other devices such as personal computers may not be used properly.

Note that formatting deletes all the contents on the microSD memory card.

LifeKit SD-PIM (FUNC ) > microSD format > Enter your Terminal Security Code > YES

#### Information

SD Other File List

- Do not remove the microSD memory card during formatting. Malfunction of the FOMA phone or microSD memory card could result.
- If you press (Quit) or , or receive a voice call or videophone call while formatting the microSD memory card, formatting is canceled. Format it again.
- Files that have been saved to the microSD memory card whose formatting is suspended becomes unfixed.
- You cannot format the incompatible memory card.
- Required folders are automatically created when you save data to the microSD memory card after formatting.

#### <Check microSD>

# Checking microSD Memory Card

You can check and recover the microSD memory card.

- Do not remove the microSD memory card during Check microSD. Malfunction of the FOMA phone or microSD memory card could result.
- You cannot execute Check microSD for the unformatted microSD memory card or incompatible memory card.
- When you execute Check microSD, the microSD memory card may not be recovered correctly, the data existed before executing Check microSD may be deleted, or the microSD memory card itself may be initialized depending on the condition of the microSD memory card.
- If you press (Quit) or , or receive a voice call or videophone call during Check microSD, Check microSD is canceled.
- If you cancel Check microSD midway, data not recovered may remain. In this case, try Check microSD again.
- It may take long to complete Check microSD depending on the data volume stored on the microSD memory card.

#### <microSD Info>

# Displaying Capacity of microSD Memory Card

You can display the used and unused memory space (estimate) on the microSD memory card.

 See page 275 for checking the used memory space for the still images or moving images.



#### Information

 As the microSD memory card contains the system files for the card, the memory space is smaller than that described on the microSD memory card even if it contains no data.

# Using a microSD Memory Card with a Personal Computer

By connecting the microSD memory card to the microSD memory card adapter, you can use the microSD memory card on a personal computer which supports SD memory card.

The microSD memory card adapter is available at mass retailers for home electric appliances etc.

For installing the microSD memory card adapter, refer to the instruction manual for the microSD memory card adapter.

#### Use FOMA Phone as microSD Reader/Writer

With a microSD memory card inserted, connect the FOMA phone to a personal computer; then you can read the data from or write the data onto the microSD memory card.

The following equipment is required:

- Connector Cable:
- FOMA USB Cable with Charge Function 01 (option)
- Personal Computer:

Personal computer having the USB port (Universal Serial Bus Specification Rev 1.1 compliant) that can be connected with the FOMA USB Cable with Charge Function 01 (option)

Compatible Operating Systems:

Windows 2000, Windows XP, Windows Vista (Japanese version in each)

# Settings Other settings USB mode setting microSD mode

- When you set to "microSD mode", " appears on the Stand-by display.
- To save WMA files from your personal computer to the microSD memory card, set to "MTP mode". When you set to "MTP mode", "[[17]]" appears on the Stand-by display.
- To use the FOMA phone for packet communication, 64K data communication, data sending/receiving (OBEX), and for calls with USB Hands-free compatible device, set mode to "Communication mode".

## Connect the FOMA phone to a personal computer using the FOMA USB Cable with Charge Function 01 (option).

The personal computer recognizes the microSD memory card.

• " 🍶 " appears on the desktop, and "鮔" appears on the Stand-by display. Also, "复" is displayed while the microSD memory card is in the FOMA phone.

- If the FOMA phone and personal computer are not correctly connected, or the remaining battery level of the FOMA phone shows very low or goes flat, you cannot send or receive data. In addition, you may lose data.
- While data is being read or written, do not pull the FOMA USB Cable with Charge Function 01 off. Not only you cannot send or receive data, but also you may lose the data.
- While data is being read or written, you cannot set this function. Further, make sure that you do not "Reset settings" or "Initialize" during reading/writing.
   Malfunction of the microSD memory card could result.
- You cannot read from/write to a personal computer while reading from/writing to the FOMA phone, and vice versa.
- To use the DoCoMo keitai datalink, set it to "Communication mode".

# Folder Configuration on microSD Memory Card

The FOMA phone creates the following folders on the microSD memory card to save data files. To write files to the microSD memory card from a personal computer, you need to write the following configuration and file names.

```
DCIM (Folder for DCF standard still images)

DCIM (Folder for DCF standard still images)

DCIM (Folder for DCF standard still images)

DCIM (Folder for DCF standard still images)
```

MISC [DPOF folder (This folder is created automatically when "DPOF Setting" on page 317 is set.)]

```
page 317 is set.)]

SD_VIDEO (Folder for moving images)

PRL

(Folder for movies)

MOL

### (Extension is 3GP, SDV, ASF, or MP4.)
```

```
PRIVATE
 DOCOMO
   STILL (Folder for non-DCF standard still images)
   STILzzzz.### (Extension is JPG, GIF, or SWF.)
  DOCUMENT (Folder for PDF files)
    PUD U
      PDFDC□□□.PDF

    RINGER (Folder for melodies)

    ☐ RUD□□□
      RINGzzzz.### (Extension is MLD, or SMF.)
   TORUCA (Folder for ToruCa files)
    TRC U
      TORUC□□□.TRC

    MMFILE (Folder for non-SD-VIDEO standard moving images (include)

           music data of AAC format)]
    MMFzzzz.### (Extension is 3GP, SDV, ASF, or MP4.)
   - ₩M SYSTEM

□ WM
  DECOIMG (Folder for Decomail-pictographs)
    DUD U
      DIMGzzzz.### (Extension is JPG, or GIF.)
  OTHER (Folder for SD other files)
   that the FOMA phone cannot recognize.)
   MOVIE (Folder for PC movie files)
    · □ MVUD□□□
      MOVIED .### (Extension is WMV, WMA, WVX, WAX, ASF, or ASX.)
  TABLE (Folder for additional information)
 MEIGROUP
 - □ PMC
    DOCUMENT (Folder for Word, Excel, or PowerPoint files)
      DOCDC□□□.### (Extension is XLS, DOC, or PPT.)
     TABLE
      DOCUMENT
```

- SD\_PIM (Folder for Phonebook entries, schedule events, ToDo items, mail messages, text memos, and bookmarks)
- PIM A A A A ... ### (Extension is VCF for Phonebook entries, VCS for schedule events and ToDo items, VMG for mail messages, VNT for text memos, and VBM for bookmarks)
- SD\_AUDIO (Folder for SD-Audio)
- SD\_BIND (Folder for i-αppli or movable contents)
- SVCAAAAA
- △△△: A three-digit half-pitch numeral of 100 through 999 (Use the same numerals for the folder name, and for the file name saved to that folder.)
- □□□: A three-digit half-pitch numeral of 001 through 999

  S: A hexadecimal numeral\* of 001 through FFF using half-pitch numerals of 0
- through 9 and half-pitch alphabets of A through F
- and ◆◆◆◆ ∴ Hexadecimal numerals of 0001 through FFFF using half-pitch numerals of 0 through 9 and half-pitch alphabets of A through F

zzzz: A four-digit half-pitch numeral of 0001 through 9999 ###: Extension

- \*\*The hexadecimal numerals are carried up every 16, unlike the way the decimal numerals are carried up every 10.
- Using a personal computer, you can write a file name of 64 bytes (including extension) free characters for a PDF file, SD other file, PC movie file, Word file, Excel file and PowerPoint file. However, the file name might change when the file is copied or moved in the FOMA phone.

## ■ The number of files and time that can be saved to the microSD memory card

File	Folder	Number of savable files/time
Still image (DCF standard)	DCIM	See page 137.
Still image (Non-DCF standard)	STILL	Approx. 58,390
Moving image (Movie)	SD_VIDEO	See page 139.
Moving image (Non-SD-VIDEO standard)	MMFILE	Approx. 58,390
PC movie file	MOVIE	Approx. 58,390
Melody	RINGER	Approx. 58,390
PDF file	DOCUMENT	Approx. 58,390
Word, Excel, PowerPoint file	PMC	Approx. 58,390
SD-Audio	SD_AUDIO	999
ToruCa file	TORUCA	Approx. 58,390
Decomail-pictograph	DECOIMG	Approx. 58,390
SD other file	OTHER	Approx. 58,390
Phonebook entry, schedule event, ToDo item, mail message, text memo, bookmark	SD_PIM	Approx. 58,390
i-oppli	SD_BIND	Approx. 58,390
Movable contents	SD_BIND	Αρριολ. 56,590

- The number of savable files and time for saving vary depending on the memory capacity of the microSD memory card. You can save more files by adding folders to save files to.
- You might not be able to save the maximum number of files depending on the file size.
- You can check used and unused space of the microSD memory card by "microSD info".

- Folder and file names may be displayed in lowercase characters depending on the personal computer you use.
- When the personal computer is set not to display extensions and hidden folders, change the setting and then operate. For how to change the setting, refer to the instruction manual for your personal computer or Help.
- Do not use the personal computer to delete or move the folders on the microSD memory card. The microSD memory card might not be read by this FOMA phone.
- You cannot see the files in the "SD\_AUDIO" and "SD\_BIND" folders on a personal computer, as they are encrypted.
- When you delete, overwrite, or write a file on a personal computer, ensure that you do not use the same file name you have once used. Even when you have deleted that file, use a different file name.
- On the FOMA phone, you might not be able to display or play back a data item
  which was saved to the microSD memory card from other devices. On other
  devices, you might not be able to display or play back a data item which was
  saved to the microSD memory card from the FOMA phone.
- To procure a microSD reader/writer or PC card read adapter, inquire respective manufacturers for the operation of microSD memory card beforehand.

# **Managing Folders**

My picture, MUSIC,  $\frac{1}{6}$  motion, Melody, My documents, Kisekae Tool (SD), PC Movie, Document viewer, and SD other files in Data Box manage files in the respective folders.

- See page 334 for folder operations of MUSIC.
- Even when the files in the "Movable contents" folder are listed, the Function menu in the Folder List is displayed.

#### **Function Menu of the Folder List**

Function menu	Operation/Explanation
Add folder	You can create a user folder.  Enter a folder name.  You can enter up to 10 full-pitch/20 half-pitch characters in the FOMA phone.  You can enter up to 31 full-pitch/63 half-pitch characters on the microSD memory card. You can enter up to 10 full-pitch/20 half-pitch characters for a folder in the "Movable contents" folder.
Edit folder name	You can edit the folder name of a user folder, or a folder in the "Decomail-pictograph" folder in the FOMA phone.  Enter a folder name.  You can enter up to 10 full-pitch/20 half-pitch characters in the FOMA phone.  You can enter up to 31 full-pitch/63 half-pitch characters on the microSD memory card. You can enter up to 10 full-pitch/20 half-pitch characters for a folder in the "Movable contents" folder.
Delete folder	You can delete a user folder and all files in the folder.  ▶Enter your Terminal Security Code▶YES

Function menu	Operation/Explanation	
Folder security [My picture/	You can set the folder to open only when you enter your Terminal Security Code.  ► Enter your Terminal Security Code ► YES The folder changes to "	
Delete all image [My picture only]	You can delete all the files in "My picture".  Enter your Terminal Security Code YES  You cannot delete the pre-installed files. (However, Decomail-pictographs are deleted.) The files on the microSD memory card are not deleted, either.	
Edit playlist [Melody only]	You can select up to 10 melodies and program them in order as you like. This is displayed while you are selecting "Playlist" Select a playing order from <1st> through <10th> Select a folder Select a melody.  To release a programmed melody, select "Release this".	
	► Repeat the operations and complete the playlist editing  ► ☑ (Finish)	
Release playlist [Melody only]	You can release all the programmed melodies from the playlist. This is displayed while you are selecting "Playlist".  YES	
Select storage	You can set the destination folder for when you save the shot still/moving images or the melodies and PDF files obtained by downloading or data communication to the microSD memory card.  > YES	

#### <Add folder>

- You can add up to 20 folders in the FOMA phone.
- You can add up to 19 folders in the " a motion" folder.
- You cannot add folders on the microSD memory card in the following cases:
  - · When the "Picture" folder contains 900 folders
  - · When the "Movie" folder contains 4.095 folders
  - When 999 folders are contained in "Image Box", "Decomail-pictograph", "Melody", "Other contents", "My documents", "Document viewer", or "SD other files".

#### <Delete folder> <Delete all image>

- When a melody set for another function is deleted, the setting returns to the default. (When the melody is set for an alarm tone of "Schedule" or "ToDo", or for "Alarm", it switches to "Clock Alarm Tone".)
- <Folder security>
- You can set it only for "i-mode", "Camera", "User folder", and "Voice recorder".
- When you select a folder with folder security, the display for entering your Terminal Security Code appears. Enter your Terminal Security Code to temporarily release folder security.

#### <Edit playlist>

 If you change or delete the file name, title, or contents of the melody stored in the playlist, all the melodies are released from the playlist.

#### <Select storage>

- The following icons are displayed for the folder set as a destination folder:
- " The folders in the "Picture" folder and "Movie" folder
- "In the folders in "My documents", "Document viewer", and "SD other files"

  The folders in the "Decomail-pictograph" folder, "Image Box" folder, and


  "Melody" folder
- " The folders in the "Movable contents" and "Kisekae Tool" folder
- " a" . . . The folders in the "Other contents" folder
- When you execute Check microSD, or create or edit a folder by using a personal computer, the destination folder on the microSD memory card might be changed.
   When the setting is changed, set the destination folder again.

# **About Infrared Data Exchange**

#### The FOMA phone conforms to IrMC version 1.1.

You can exchange data files with the devices supporting the infrared data exchange function. However, you cannot exchange some files depending on the other party's device.

- The distance for infrared data exchange should be within about 20 cm. Do not
  move the FOMA phone with the infrared data port pointed to the receiving end until
  data transfer ends.
- Hold the FOMA phone with your hands securely so that it does not move.
- If you expose the FOMA phone to direct sunlight or put it under fluorescent lights or near an infrared equipment, you may not be able to transmit infrared ray normally due to their influence.
- First set at the receiving end and begin sending data from the sending end within 30 seconds.
- During exchange, the FOMA phone is placed in the same state as it is out of the service area, so you cannot make/receive voice calls or videophone calls, use packet communication such as i-mode or mail, or do data communication.

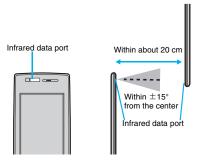

#### ■ List of data files you can transfer

Transfer terms Transferable data	One item	Multiple items	All items
Phonebook (Own number)	0	×	Up to 1,000 items
Schedule*1	0	×	Up to 1,000 items
ToDo	0	×	Up to 100 items
Received mail <sup>*2</sup>	0	×	Up to 2,500 items
Sent mail	0	×	Up to 1,000 items
Draft mail	0	×	Up to 20 items
Text memo	0	×	Up to 20 items
Melody*3, *4	0	×	×
Still image file*4, *5, *6	0	0	×
Moving image file*4, *7	0	0	×
PDF file**3, **4, **8	0	×	×
ToruCa file <sup>*4</sup>	0	0	Up to 495 items
Bookmark (i-mode/Full Browser)**9	0	×	Up to 100 items each for i-mode and Full Browser

- O: Can be transferred X: Cannot be transferred
- %1 You cannot send/receive holidays and anniversaries.
- %2 You can send/receive up to 30 Area Mail messages separately. (2.530 messages in total)
- ※3 You cannot send/receive some files.
- \*4 The file is sent/received after being converted to the vnt file.
- %5 Includes Flash movies.
- %6 You cannot send/receive original animations.
- ¾7 You cannot send/receive ASF files.
- ※8 The i-mode bookmarks may be deleted.
- ※9 When sending/receiving bookmarks, the folder-sort setting may not be reflected.

#### Storage location and order of received files

Data		Storage location/Order		
Phone book (Own number)	receive one data	The phone number is stored to the lowest empty memory number in "010" through "999" in the Phonebook. If all memory numbers "010" through "999" are occupied, the phone number is stored to the lowest empty memory numbers in "000" through "009" (two-touch dial).		
	receive all data	Stored in the same memory number as that of the sender.		
Schedule	receive one data	Stored with the starting date/time of the schedule event.		
	receive all data	Stored with the same date and time as those of the sender.		
ToDo	receive one data	Stored on the top in the ToDo list.		
	receive all data	Stored in the same order as that of the sender.		
Received mail	receive one data	Stored in the "Inbox" folder on the Inbox Folder List with the same date and time as that of the sender.		
	receive all data	Stored in the same folder as that of the sender with the same date and time.		
		Stored in the "Outbox" folder on the Outbox Folder List with the same date and time as that of the sender.		
	receive all data	Stored in the same folder as that of the sender with the same date and time.		
Draft mail receive one data Stored with the same date and time a sender.		Stored with the same date and time as that of the sender.		
	receive all data	Stored with the same date and time as that of the sender.		
Text Memo	receive one data	Stored in the first <not recorded="">.</not>		
	receive all data	Stored in the same order as that of the sender from the top of the list.		
Melody	receive one data	Stored on the top in the "i-mode" folder in "Melody" inside "Data box".		
Still Image file	receive one data/receive multiple data	Stored on the top in the "i-mode" folder in "My picture" inside "Data box".		
Moving Image file	receive one data/receive multiple data	Stored on the top in the "i-mode" folder in "g motion" inside "Data box".		

Data		Storage location/Order	
PDF file	receive one data	Stored on the top in the "i-mode" folder in "My documents" inside "Data box".	
ToruCa file	receive one data/receive multiple data	Stored on the top in the "ToruCa" folder.	
	receive all data	Stored in the same folder as that of the sender in the same order.	
Bookmark	receive one data	Stored on the top in the "Bookmark" folder each for i-mode and Full Browser.	
	receive all data	Stored in the same folder as that of the sender in the same order.	

- You cannot send the following files:
- · Files whose output from the FOMA phone is prohibited
- · Partially saved files
- · Pre-installed Decomail-pictures
- · Phonebook entries and SMS messages on the UIM
- You cannot send the files on the microSD memory card. Copy or move to the FOMA phone and then send.
- You can send and receive up to 9 full-pitch/18 half-pitch characters for a title of a still image, moving image, or PDF file, or up to 31 full-pitch/63 half-pitch characters for a title of a melody.
- When you send a mail message, the file attached to the mail message is also sent. However some files cannot be sent depending on the file type.
- Depending on the mobile phone at the receiving end, subjects of i-mode mail messages cannot be received completely.
- The mail message with an attached file which has not been obtained, or the mail
  message containing the link information for starting an i-αppli program is sent
  after the file or information is deleted.
- When the maximum number of storable received mail messages (see page 463) is exceeded, the messages are overwritten in the following order; messages in the "Trash box" folder → the oldest received message.
- When the maximum number of storable sent mail messages (see page 463) is exceeded, the oldest unprotected mail message in the Outbox folder is overwritten.
- When you send a ToruCa file (details) using infrared rays, the confirmation display appears asking whether to forward the file including the detailed information. In this case, select "YES" to send it with the detailed information, or select "NO" to send the ToruCa file as a file before obtaining the detailed information.

- The ToruCa file (details) that contains data whose output from the FOMA phone is prohibited is sent as a ToruCa file before obtaining the detailed information.
- You cannot receive Phonebook entries while Restrict Dialing is activated. At sending, you can send only the Phonebook entries set with Restrict Dialing and data of Own Number.
- It may take long to forward data or you might not be able to receive data depending on the data size.
- You cannot store a still image in excess of 2 Mbytes, moving image in excess of 10 Mbytes, melody in excess of 100 Kbytes, PDF file in excess of 2 Mbytes, ToruCa file in excess of 1 Kbyte. or ToruCa file (details) in excess of 100 Kbytes.
- If the FOMA USB Cable with Charge Function 01 (option) is connected to the FOMA phone, you may not be able to perform infrared data exchange.
- You cannot send files that are not supported by the device at the receiving end.

# Sending/Receiving One or Multiple Data Files

You can send/receive the data files one by one using infrared rays. You can send/receive multiple still images, moving images, and ToruCa files at a time.

#### ■ Notes on sending/receiving

- In Secret Mode, you can send secret data as well. However, in Secret Data Only, you can send only the secret data.
- If you receive a Phonebook entry stored as secret data in "Secret mode" or "Secret data only", the Phonebook entry is stored as an ordinary one.
- When sending a Phonebook entry, you cannot send the stored secret code and voice dial entry.

### Send One or Multiple Data Files

Display for a data item to be sent ► (FUNC )
► Send Ir data

- To send a Phonebook entry, select "Send Ir data" from the Function menu and select "Send phonebook".
- To send a mail message, ToruCa file or bookmark, select "Ir/ transmission" from the Function menu and select "Send Ir data".
- To send multiple files, select the files you want to send by "Multiple-choice".
   Press (■R)( FUNC ) to select "Send Ir data".

## **YES**

 To send multiple files, select "YES" by a factor of selected number of files, and send them.

### Receive One or Multiple Data Files



► LifeKit ➤ Receive Ir data

• You can paste the Ir data receiving function to the desktop. (See page 114)

### Receive YES

 The confirmation display appears asking whether to continue receiving after receiving one data file.

When you received multiple files, select "YES".

#### Information

 When you receive an instruction for starting a software program, and you have already downloaded a compatible software program, that software program starts. If you have not put a check mark for "Ir \(\frac{1}{6}\) oppli To" of "Set \(\frac{1}{6}\) oppli To", the software program does not start up automatically.

# Sending/Receiving All Data Files

You can send/receive the following data files all at once using infrared rays: the Phonebook entries, schedule events, ToDo items, text memos, bookmarks, mail messages, and ToruCa files.

To send all data files, enter a session number (any four-digit number). The receiving end needs to enter the same session number.

#### ■ Notes on sending/receiving all data files

- Receiving all data files deletes all data you have stored including the secret data
  and protected data, and the received data overwrites the existing data. The data
  you have stored in "Secret mode" is deleted as well. Check that no important data
  is stored before receiving all data files.
- If you send all Phonebook entries, the "Own number" data is also sent. All the data
  of "Own number" at the receiving end is overwritten except the own number. Mail
  address is also overwritten by sender's address, so change it at the receiving end.
- Even if you send all Phonebook entries, information of voice dial entries are not sent.

- The Phonebook entries stored as secret data are sent not only during Secret Mode but also any other time. The sent secret data is stored as secret data at the receiving end, too.
- The group names in the Phonebook you have received are stored, so the data set in "Group setting" is also overwritten.
- Note that the schedule events at the receiving end are all deleted if you send all ToDo items to the phone that does not support ToDo.
- You can send/receive the protected sent/received mail messages.

#### Send All Data Files

- Display for a data item to be sent ► [ix]( FUNC )
  ► Send all Ir data ► Enter your Terminal Security Code.
  - To send the Phonebook entries, select "Send Ir data" from the Function menu and select "Send all phonebook".
  - To send mail messages, ToruCa files or bookmarks, select "Ir/ transmission" from the Function menu and select "Send all Ir data".
- Enter the session number ➤ YES
  - Enter any four-digit number as the session number.

#### **Receive All Data Files**



- MENU ► LifeKit ► Receive Ir data
  - You can paste the Ir data receiving function to the desktop. (See page 114)
- Peceive all ► Enter your Terminal Security Code
  ► Enter the same session number as that entered at
  the sending end ► YES ► YES

The stored data is deleted, then receiving starts.

#### Information

 When you receive Phonebook entries in which still images are stored or mail to which files are attached, and the multiple same still images or files are found, only one image or file is stored.

 
# Using Infrared Remote-controller Function

You can use the FOMA phone as a TV remote-controller by starting the i-oppli program.

- To use remote-control devices, you may need to download the software program for those devices. [The pre-installed "Gガイド番組表リモコン (G Guide Program List Remote-controller)" supports the infrared remote-controller function.] The key operation for the remote-controller differs depending on the software program.
- This function does not work with some devices.
- Communication might be affected by compatible devices and the ambient light.
- You cannot use the infrared remote-controller during Self Mode.

### Infrared Remote-controller

- Turn the FOMA phone's Infrared data port to the front of a device to be operated. You can operate within about 4 meters away from the device.
- The radiation angle of the infrared rays is within ±15° from the center.



<Forwarding Image>

MENU (2) (6)

# **Communication Setting**

For when you forward Phonebook entries using infrared rays, iC communication, SD-PIM, or DoCoMo keitai datalink, you can specify whether to forward the stored still images together.

Phonebook Phonebook settings
Forwarding image ON or OFF

#### <iC Transmission>

## **About iC Communication**

iC communication is the function that enables you to send/receive data files to/from another FOMA phone using the FeliCa reader/writer function. You can send/receive data files by overlapping the FeliCa " " mark of your FOMA phone with that of another FOMA phone supporting the iC communication function.

- The type of files and conditions of forwarding are the same as those of infrared data exchange. (See page 307)
- However, you cannot send multiple files at a time.
- You cannot execute iC communication while "IC card lock" is activated.
- You might have difficulty in sending or receiving files depending on the destination FOMA phone. In that case, move a FeliCa mark " (2) " close to or away from the other FeliCa mark or move each side up, down, left, or right.



# Sending/Receiving One Data File

You can send/receive the data files one by one using iC communication.

• See "Notes on sending/receiving" on page 309 as well.

#### Send One Data File

- You cannot use this function during charging.

  - ► **T** transmission
    - To send a Phonebook entry, select "To transmission" from the Function menu and select "Send phonebook".
    - To send a mail message, ToruCa file or bookmark, select "Ir/ To transmission" from the Function menu and select " transmission".

# YES

#### **Receive One Data File**

Overlap the FeliCa mark " 7" at the sending end with that of your FOMA phone while the Stand-by display is shown YES

# Sending/Receiving All Data Files

You can send/receive the following data files all at once using iC communication: Phonebook entries, schedule events, ToDo items, text memos, bookmarks, mail messages, and ToruCa files.

To send all data files, enter a session number (any four-digits number). The receiving end needs to enter the same session number.

• See "Notes on sending/receiving all data files" on page 309 as well.

### Send All Data Files

- You cannot use this function during charging.
- Display of the data to be sent ► ( FUNC )



- ► All **T** transmission
- ► Enter your Terminal Security Code.
- To send the Phonebook entries, select " transmission" from the Function menu and select "Send all phonebook".
- To send mail messages, ToruCa files or bookmarks, select "Ir/ TC transmission" from the Function menu and select "All transmission".

# Enter the session number ➤ YES

• Enter any four-digits number as the session number.

### Receive All Data Files

- Overlap the FeliCa mark " at the sending end with that of your FOMA phone while the Stand-by display is shown.
- YES Enter your Terminal Security Code Enter the same session number as that entered at the sending end.

The stored data is deleted, and then receiving starts.

#### Information

 
 When you receive Phonebook entries in which still images are stored, and the multiple same still images are found, only one image is stored.

### <PDF Viewer>

## **Displaying PDF Files**

You can display the PDF files saved by downloading from sites.

Data box My documents Select a folder
Select a PDF file.



- Each time you press [week] from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- $\bullet$  See page 305 for the Function menu on the Folder List.

 If you cannot display a preview image, any of the following images are displayed:









Does not support (PDF file displayed as " ")

- See page 167 when the PDF file is set with a password.
- Operations when displaying a PDF file
- See page 313 for when you operate from the Function menu.

Operation	Key operation
Upper scroll	
Lower scroll	Q
Left scroll	0
Right scroll	0
Bring up key operation guide	(I
Zoom in	3
Zoom out	
Fit page	2

Operation	Key operation
Next page	<b>6</b> 97
Previous page	MENU Z
Search	5
Search next	6
Search previous	4
Bring up bookmark list	8
Add bookmark	(for at least one second)

- When many files are stored in the FOMA phone or the microSD memory card, it
  may take long to access them. It may take long to display the PDF file depending
  on the PDF file.
- A PDF file that contains the complicated design or in the format not compatible with the PDF viewer might not be correctly displayed.
- When you try to display undownloaded pages while the PDF file partially downloaded is displayed, downloading of the page starts.

# Function Menu of the PDF File List

Function menu	Operation/Explanation
Edit title	See page 273.
Document info	You can display the PDF file name, saved date/time, etc.
Attach to mail	You can compose an i-mode mail message with the PDF files attached. Go to step 2 on page 182.  • You can compose it also by pressing ().
Send Ir data	See page 309.
transmission	See page 311.
Copy to microSD	See page 298.
Copy to phone	See page 299.
Сору	See page 274.
Move	See page 275.
Add desktop icon	See page 114.
Delete this	See page 275.
Delete all	See page 275.
Multiple-choice	See page 275.
Memory info	You can display the used memory space (estimate)/number of stored items.
Sort	See page 275.
Listing	You can change the displayed contents of the PDF File List.  Title or Image  You can switch the lists also by pressing (Change) from the PDF File List.

## Information

#### <Listing>

 When you use "Image" to display PDF files, they might appear different from the actual images depending on the PDF files.

## Function Menu while PDF File is Displayed

Function menu	Operation/Explanation
Zoom in	You can zoom in the PDF file. You can zoom in the PDF file up to 1,000%.
Zoom out	You can zoom out the PDF file. You can zoom out the PDF file up to 8%.
Go to	You can move to another page of the PDF file.  Select the page you want to move to.  If you select "Specified page", enter the page number you want to move to in the page number field, and select "OK"; then you can access to the specified page.
Search	You can display the screen in which the specified character string is contained. The point that matches the specified character is marked in yellow green.  Search Select the search string field  Enter a character string to be searched for.  You can enter up to 8 full-pitch/16 half-pitch characters.
	Put a check mark for search conditions to be specified  □((search))  • If you select "Search next" or "Search prev.", you can continue to search under the same condition.
Bookmark/mark (Disp. bookmark)	See page 315.
Bookmark/mark (Add bookmark)	You can set a bookmark (i-mode bookmark) for the page currently displayed and can display the desired page easily be selecting the bookmark. You can set up to 10 bookmarks.  Add bookmark YES Select the title field  Enter a title OK  You can enter up to 64 full-pitch/128 half-pitch characters.  See page 316 when bookmarks are stored to the maximum
Bookmark/mark (Display mark)	See page 315.

Function menu	Operation/Explanation
Bookmark/mark (Add mark)	You can store the currently displayed page number and the position within the page as the mark. You can use the stored mark as the sign of the reference point. You can set up to 10 marks.  Add mark YES  See page 316 when marks are stored to the maximum.
View types (View mode)	You can change display format of the PDF file.  View mode Select a display format.  If you select "User defined", enter the magnification value in the magnification specification field, and select "OK"; then you can display the page at the specified magnification.  The magnification you can specify is 8 through 1,000%.  If you save a file after changing the display format, it is displayed at the saved magnification next time.
View types (Rotate view)	▶ Rotate view▶90° to right or 90° to left
View types (Page layout)  At Viewer start-up Single page	You can change the layout the PDF file is displayed.  Page layout  Single page, Continuous or Continuous-facing
View types (Display link)	You can display links set in the PDF file. Internal links (links set in the PDF file displayed), Web To, Mail To, and Phone To/AV Phone To are available for the links.  Display link Select a link.  When multiple links are found in the display, you can select a link by pressing .  When you select an internal link, you can move to the linked page in the PDF file. See page 170 for another link.
View types (Page info ON/OFF At Viewer start-up Display	You can set whether to display the zoom magnification, page number, and scroll bar for displaying the PDF file.  ▶ Page info ON/OFF≫ Select an item  ▶ Display or Not display
View types (Document info)	See page 313.

Function menu	Operation/Explanation
Save	See page 315.
Download remain	You can download all pages of the PDF file which you have not completely downloaded yet such as partially downloaded page by page or failed to be downloaded owing to disconnection of communication midway.  > YES
Capture screen	You can cut out a part of the display and save it as JPEG image.  (Select) YES Select a folder.  See page 170 when images are stored to the maximum.
Attach to mail	You can compose an i-mode mail message with the PDF files attached. Go to step 2 on page 182.
Information	

#### <Search>

- The search conditions work as shown below:
- Match case: Identifies between uppercase and lowercase for search.

Whole words only: Searches for character strings that completely match by unit of a word.

Search upward: When you do "Search next", you can search backwards to the first page from the start page.

Search '?' as wildcard: "?" mark (half-pitch) entered in the search string field is set for a search condition as a random character.

Search in this page: Searches in the currently displayed page only.

- <View types (Page layout)>
- You cannot change the layout of the partial PDF file.

### <Capture screen>

• You might not be able to cut out the display depending on the security setting of the PDF file.

## **Display Bookmark**

You can list the bookmarks set for the PDF file and the i-mode bookmarks additionally set.

By selecting a bookmark, you can display the page for which the bookmark is set.

- ¶ While a PDF file is displayed ▶ ਫ਼ੈਕ ( FUNC )
  - ► Bookmark/mark ► Disp. bookmark
  - ► Bookmark or i-mode bookmark
  - Select a bookmark.
  - Some bookmarks that have been set beforehand are categorized into tier-levels. Press [ar] ( Next ) to display the bookmarks at the lower level. However, all the bookmarks at the third-tier level or lower are displayed at the third-tier level.

## Function Menu while i-mode Bookmark is Displayed

Function menu	Operation/Explanation
Edit title	► Enter a title. • You can enter up to 64 full-pitch/128 half-pitch characters.
Delete (Delete)	➤ Delete ➤ YES
Delete (Delete selected)	▶ Delete selected     ▶ Put a check mark for bookmarks to be deleted     ▶ ☒ (Finish) ➤ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

### **Display Mark**

You can list the marked pages and positions stored in the PDF file. When you select a mark, you can display the page in which the mark is stored.

While a PDF file is displayed ► (FUNC )
► Bookmark/mark ► Display mark ► Select a mark.

### Function Menu while the Mark List is Displayed

Function menu	Operation/Explanation
Delete	▶YES
Delete selected	▶ Put a check mark for marks to be deleted ▶ (Finish) ▶ YES
Delete all	► Enter your Terminal Security Code ➤ YES

#### Save

You can save the PDF files. You can save the newly downloaded pages and added bookmarks/marks.

You can save up to 3,500 files in total sharing the memory space with other data files, however, the number of files you can save decreases depending on the data volume. (See page 463)

While a PDF file is displayed ▶ ( FUNC ) ▶ Save ▶ YES

The PDF file once saved to the FOMA phone or microSD memory card is overwritten each time you save it. (The operation in step 2 is not required.) The PDF file that is not saved to the FOMA phone or microSD memory card is newly saved.

- With the PDF file that was re-downloaded from the first page owing to updating at the server's end, the confirmation display appears asking whether to overwrite the current data. Select "YES" to overwrite it. Select "NO" to newly save.
- Select a destination folder.
  - See page 170 when PDF files in the FOMA phone are stored to the maximum.

#### When bookmarks or marks are set to the maximum

If you try to add a bookmark or mark to the PDF file for which 10 bookmarks or marks have been set, or if you try to save the PDF file for which 11 or more bookmarks or marks have been set, the confirmation display appears asking whether to add/save the bookmark or mark after unnecessary ones are deleted.

- 1. YES
- Select bookmarks/marks to be deleted YES
  - Put a check mark for bookmarks/marks to be deleted ► (Finish) ► YES
  - Continue putting a check mark until "Finish" appears.

## **Document Display Settings**

You can set a display format for when the PDF files are displayed from sites.

ୀ ୍ଞିନ୍ନ ⊳ ଞ୍ଜି -mode settings > Doc. display settings > Select a display format.

## <Document Viewer>

# **Displaying Word, Excel, and PowerPoint Files**

You can display the Microsoft Word, Microsoft Excel and Microsoft PowerPoint files saved to the microSD memory card.

Data box Document viewer Select a folder
► Select a file.



 $\bullet$  See page 305 for the Function menu on the Folder List.

#### Operations when displaying a document file

• See page 317 for when you operate from the Function menu.

Operation	Key operation
Upper scroll	Ō
Lower scroll	<u> </u>
Left scroll	0
Right scroll	0
Bring up key operation guide	
Zoom in	3
Zoom out	

Operation	Key operation
Fit page	2
Next page	<b>8</b> 9▼
Previous page	MENU Z
Search	(5)
Search next	6
Search previous	4

## **Function Menu of the Document List**

Function menu	Operation/Explanation
Edit title	See page 273.
File info	You can display the name and type of files.
Attach to mail	You can compose an i-mode mail message with the document file attached. Go to step 2 on page 182.  ◆ You can compose it also by pressing ( ).
Сору	See page 274.
Move	See page 275.
Delete this	See page 275.
Delete all	See page 275.
Multiple-choice	See page 275.
Memory info	You can display the used memory space (estimate).

## **Function Menu while Document File is Displayed**

Function menu	Operation/Explanation
Zoom in	You can zoom in the file. You can zoom in the file up to 1,000%.
Zoom out	You can zoom out the file. You can zoom out the file up to 8%.
View types	You can change display format of the file.  Select a display format.  If you select "User defined", enter the magnification value in the magnification specification field, and select "OK"; then you can display the page at the specified magnification.  The magnification you can specify by "User defined" is 8 through 1,000%.
Go to	You can move to another page or sheet of the file.  Select the page or the sheet you want to move to.  If you select "Specified page" for the Microsoft Word file or Microsoft PowerPoint file, enter the page number you want to move to in the page number field, and select "OK"; then you can move to the specified page.
Search	You can display the screen in which the specified character string is contained. The point that matches the specified character string is highlighted.  ➤ Search ➤ Select the search string field  ➤ Enter a character string to be searched for.  • You can enter up to 8 full-pitch/16 half-pitch characters.
	Put a check mark for search conditions to be specified  □(Search)  • If you select "Search prev." or "Search next", you can continue to search under the same condition.
Zoom & page	You can set whether to display the zoom magnification and page number for displaying the file.  Display or Not display
Scroll bar	You can set whether to display the scroll bar for displaying the file.  Display or Not display
Rotate view	▶90° to right or 90° to left
Document info	You can display the name and type of files.

#### Information

#### <Search>

The search conditions work as shown below:

Whole words only: Searches for character strings that completely match by unit of

Match case: Identifies between uppercase and lowercase for search. Search in this page (Excel file only): Searches in the currently displayed page only. Search in this file (Excel file only): Searches in the whole file.

## **Printing Saved Images**

#### Select a Method to Print the Images Saved in the microSD Memory Card

DPOF is the format for recording the print information about the still image you shot with a digital camera. You can input the information into the still image on the microSD memory card about whether to print it out and how many copies you print out. You can take the card to DPE service shops or use a DPOF compatible printer to print photos as you specify.





- ► DPOF setting ► Print
- Enter the number of copies to be printed out.
- Enter "01" through "99" in two digits.
- To cancel printing the selected still image, select "Print OFF". To cancel printing all still images, select "All print OFF".

- You can set DPOF Setting for up to 999 image files.
- You cannot set DPOF Setting for the image in excess of 2 Mbytes or 5M (2592 x 1944) size.
- If unused space on the microSD memory card is not enough, DPOF Setting might not be set. (The icon and Picture Information, however, indicate DPOF is set.)
- Still images shot by this FOMA phone also support PRINT Image Matching III.



# Music&Video Channel/Music Playback

Music&Video Channel	
What is Music&Video Channel?	320
Setting Programs	320
Playing Back/Operating Programs	322
MUSIC Player	
Playing Back Music	326
Saving Music Files	326
Using MUSIC PlayerMUSIC Player>	329
Heing Playlist	22.

### ■Handling Music Files

You can use music files saved on the microSD memory card for personal use only. Before using, give enough consideration not to infringe on the third party's intellectual property rights or other rights such as copyright.

## What is Music&Video Channel?

Music&Video Channel is a service which automatically delivers up to about one-hour programs at night by just setting your favorite music programs in advance. Further, you can enjoy a high-quality moving image program of up to about 30 minutes. Programs are updated periodically and you can enjoy the delivered programs at your convenient time such as on commuting.

#### ■ Before using Music&Video Channel

- Music&Video Channel is a pay service which is available on a subscription basis.
   (You need to subscribe to i-mode and Pake-Houdai/Pake-Houdai Full to apply for it)
- Other than the service fee for using Music&Video Channel, you might be separately charged an information fee depending on the program.
- For the details on Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- If you insert the UIM to the Music&Video Channel incompatible FOMA phone after you subscribe to Music&Video Channel, you cannot use Music&Video Channel Service. Note that the service fee applies unless you cancel the Music&Video Channel subscription.
- You cannot obtain or set programs during international roaming, as Pake-Houdai/ Pake-Houdai Full is not applied. When you try to obtain or set programs, note that you are charged a packet communication fee for the i-mode communication. Take procedures to halt the distribution of programs before departure to overseas. Then, after homecoming, resume receiving distribution.

# **Setting Programs**

If you previously set a program that you want to watch, the FOMA phone automatically downloads the program data at night.





Music&Video Channel display

# Set program

Follow the instructions on the display to set a program.

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

• See page 170 when data files are stored to the maximum.

#### When a program is set

"III" appears on the Stand-by display 12 hours before the time the program obtaining starts. However, it does not appear if you have inserted a UIM which is different from the one you used to set the program.



Programs are automatically obtained at night. The display for obtaining programs does not appear but " appears on the desktop when they are successfully obtained.

Press , highlight " , and press () ( select ) to



display the Music&Video Channel display. When obtaining fails, " 🧱 " appears

### Information

 When the communication is disconnected during obtaining a program, re-obtaining is automatically tried up to five times by an interval of about three minutes. When a display for obtaining a program is shown, however, the confirmation display appears asking whether to re-obtain the program.

- The ring tone does not sound and the vibrator does not work to notify that
  obtaining programs starts or is completed. When you set "Music&Video ch illum."
  of "Illumination" to "ON", the Call/Charging indicator flickers when obtaining
  programs is completed. (See page 109)
- You can set up to two programs at once.
- Note that a newly obtained program overwrites a saved program and you can no longer play back that saved program afterward. To avoid overwriting, perform "Move program" to move the program to the "Saved program" folder.
- You cannot save the obtained program to the microSD memory card.
- To set programs, you need to register the site which offers Music&Video Channel programs to your My Menu. (See page 161)
- If you have not subscribed to Music&Video Channel, select "About this service" to see the Music&Video Channel introduction page.
- When the programs could not be obtained due to "power off" or "low battery" at the start time of program obtaining, re-obtaining is performed at night of the following day.
- It may take a time to obtain programs, so fully charge the battery and operate in the good radio wave conditions.
- You cannot perform the setting operation and automatic obtaining of the program selected on the Music&Video Channel display or the program in use.
- If you cancel the Music&Video Channel or i-mode subscription, program files in the "Downloaded program" folder might be erased.
- If you insert a UIM which is different from the one you used to set programs, programs cannot be automatically obtained. Set the programs again from the Music&Video Channel display.
- When you select a service menu for Music&Video Channel and the message "Confirm set up information?" appears, select "YES" to delete the programs that have already been distributed. However, they are not deleted while the distribution of programs is halted.
- If you insert the UIM of the FOMA phone that you have already set programs into another Music&Video Channel compatible FOMA phone, the programs cannot be obtained automatically. Select "Set program" again from the Music&Video Channel display to automatically update the program setting on the FOMA phone, then the programs can be obtained automatically.

## **Check/Cancel the Set Program**

Music&Video Channel display ➤ Set program
➤ Follow the instructions on the display.

You can check or cancel the set program. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

#### Information

• Even if the setting of a program is canceled, My Menu is not deleted.

### **Obtain a Program Manually**

" \( \mathbb{\tilde{k}} \) " appears on the Stand-by display when the automatic program obtaining fails or the program is not updated even after the program distribution date. When the automatic obtaining fails, you can manually obtain the program.

# Music&Video Channel display ► Select a program ► YES

- For a partially obtained program, select "Play" to play it back.
- For a program which has not been updated, select "Play" to play it back.

- When obtaining of a program is suspended, the part of the program obtained up
  to that point is saved. To obtain remaining part, you can manually obtain it except
  in some time zones. When a program has been updated or switched to another
  program, obtaining starts not from the suspended point but from the beginning.
- You cannot re-obtain the program with expired playback restrictions. Such a program cannot be updated until the next distribution date.
- You may not be able to manually obtain programs depending on the time zone.

# **Playing Back/Operating Programs**

 You can enjoy playing back programs in stereo sound by connecting the Flat-plug Stereo Earphone Set (option).

# MENU MUSIC Music Video Channel Select a program.

- " is displayed while Music & Video Channel is activated, and " " is displayed when the program shifts to pause state during Play Background.
- When information of the previously played program exists, playback starts from the position and/or in the mode accordingly.
- Highlight a program and press (☐)(Chapter); then the Chapter List is displayed.
- Highlight a program and press MENU (To site) to connect to the URL of the program URL information.
- Any of the following images are displayed when you cannot display the preview images:



Cannot be played back



No preview images



Expired playback restrictions, etc.



Music&Video Channel

XX hit chart

Set program

⊞Program list

MAbout this service

Music&Video

Channel display


program

- When you press a during playback or pause, playing back program ends.
- You can use mail functions, display sites, and so on, while listening to music using Music&Video Channel (Play Background). (See page 438)

## Operate Music&Video Channel from Data Box

You can play back programs also from Data box, From Data Box, you can play back currently distributed programs as well as the programs that have been distributed in the past and moved to the "Saved program".

- MENU Data box Music&Video Channel
- Downloaded program or Saved program
  - Select a program.

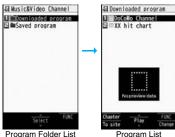

Program Folder List

(Change) from the

• You can switch display format each time you press ( Program List.

### ■ About Music&Video Channel Playback display



ch001 / Dol When the FOMA phone is closed\*2

- Program image<sup>※1</sup> or program video
- Chapter number/The number of chapters
   (Chapter number only on the Private window)
- ❸···Chapter name/Artist name
- **4**···Program name **5**···Playback state
- **⑥**···Playback time/Total playback time
- Play mode (No indication for "Normal")

  : Repeat
- **3**···Equalizer

NORMAL: Normal

**\$-XB\$2** : S-XBS2



STEREO: Stereo MONO: Monaural

SURROUND: Surround NATUR1: Natur1
NATUR2: Natur2

**⑥**···Remaster (No indication for "OFF")

REMASTER: ON

- **№** Sound volume
- %1 When no images are stored, an animation appears.
- \*2 In the Private window, a chapter name and artist name are displayed and when they are too long to be in the window, they flow as tickers.

## ■ Operation while playing back a Music&Video Channel program

Operation	Key operation
Halt	
Pause	(
Sound volume adjustment	or A/V Press and hold to adjust the sound volume sequentially Setting from Level 0 (Silent) through 25 is available.
Replay next chapter	or (for at least one second)
Replay previous chapter <sup>*1</sup>	or (a)(for at least one second)  When playback time is over three seconds, you go back to the beginning of the file.
Search (fast forward) <sup>※2</sup>	Press and hold .
Search (fast rewind) <sup>*2</sup>	Press and hold .
Connect to site	MEN)(To site)
Play background	( BGM )
Display next image	3
Display previous image	
Remaster	● Each time of pressing switches between "ON" and "OFF".
Listening	<ul> <li>8</li> <li>Each time of pressing switches in order of "OFF"</li> <li>→ "Surround" → "Natur1" → "Natur2".</li> </ul>
Equalizer	● Each time of pressing switches in order of "Normal" → "S-XBS1" → "S-XBS2" → "Train".

<sup>\*1</sup> You go back to the beginning of the music file when no previous chapter is found.

<sup>%2</sup> You cannot operate during pause.

From the Music&Video Channel Playback display, you can do the following operations by using the switch of the Flat-plug Stereo Earphone Set (option) or the Flat-plug Earphone/Microphone with Switch (option):

• You can operate them when the FOMA phone is closed as well.

Tod dan operate them when the Towns phone to dioced do well.	
Operation	Switch operation
Pause	Press once.
	<ul> <li>To play back, press again.</li> </ul>
Replay next chapter	Press twice in succession.
Replay previous chapter*	Press three times in succession.  • When playback time is over three seconds, you go back to the beginning of the file.

- \* You go back to the beginning of the music file when no previous chapter is found.
- Icons on the Music&Video Channel display/the Program List

The icons on the Music&Video Channel display indicate the download status.

lcon	Description
m	Successfully obtained program
**	Broken program
×	Partially obtained program or unsuccessfully obtained program

- "NEW" is added to the newly obtained program.
- Some programs have restrictions on the number of playbacks, playback deadline, or playback period. "⊕" is added to the icon of the program with playback restrictions and "⊕" is added to the icon of the program with expired playback restrictions. You can check the playback restrictions for the program by "Program info".
- Some programs have restrictions on operation. "N" is added to the icon of the program with operation restrictions.
- When obtaining a periodically-updated program fails, "
   <sup>\*\*</sup> appears to tell the program has not been updated. "
   <sup>\*\*</sup> disappears when obtaining the program starts.
- The file restriction is set to all the Music&Video Channel programs. See page 148 for the file restrictions.

### Information

- The information of the previously played program is erased if you do the following operations:
  - · When you turn on/off the FOMA phone
  - · When you update the program
  - · When you delete or move the previously played program
- If you try to play back a program with a low battery, the confirmation display appears asking whether to play it back. When the battery becomes low during playback, the playback pauses, and the confirmation display appears asking whether to finish the playback.
- In the following cases, playback pauses and resumes after you finish each operation:
   When you make/receive a voice call or videophone call
  - · When you receive a mail message or Message R/F while "Receiving display" is set to "Alarm preferred" or the Stand-by display is shown
  - · When an alarm tone of "Alarm", "Schedule" or "ToDo" sounds
- Depending on the function which occurred, the confirmation display might appear asking whether to end the Music&Video Channel program.
- If a black display appears after you play back a program with time zone restrictions, playback starts at the next playable time zone.
- "Program info" of a Music&Video Channel program and deadline information on the display that notifies you of a playback deadline are shown by date/time with "Summer time" set to "OFF".
- If you playback a program in countries other than Japan, the playback deadline might expire before or after the displayed deadline.

## Function Menu of Music&Video Channel display/ Program Folder List/Program List

Function menu	Operation/Explanation
Chapter list	You can display the list of chapters set for the program. Select a chapter to play back the selected chapter and afterward.  • Press (R) ( FUNC ) and select "Chapter info" to display the information about the chapter title, playback time, etc.
Play mode setting	Normal or Repeat
	Normal Plays back the program once in the order of the chapters.
	Repeat Plays back the program repeatedly in the order of the chapters.

Function menu	Operation/Explanation
Program info	You can display the program title, distribution source, playback restrictions, etc.
Move program	Programs currently distributed are updated to new programs on the next distribution date. You can save the current programs by moving them to the "Saved program" folder before the distributed program is updated. You can check "Memory info" for unused memory space you can save to. You can save up to 10 programs sharing the memory space with other data files, however, the number of programs you can save decreases depending on the data volume. (See page 463)  > YES  • See page 170 when programs are stored to the maximum.
Add desktop icon	See page 114.
Edit title	► Enter a title. • You can enter up to 31 full-pitch/63 half-pitch characters.
Reset title	You can reset the title to the default.  >YES
Multiple-choice	You can select and delete multiple programs stored in "Saved program" folder.  Put a check mark for programs to be deleted  [ix](  FUNC  ) Delete
Connect to URL	You can access the URL when the program has the URL information.  > YES
Display image	You can display the program images stored in the program.  • Press CLR to return to the List.
Memory info	You can display the used memory space (estimate).
Delete/Delete this	You can delete the program.  ➤ YES  • When you delete a currently distributed program, "Setting program" continues to be displayed on the Music&Video Channel display of MUSIC until the next program

distribution. "No Program" is displayed when no program is

set.

Function menu	Operation/Explanation
Delete all	You can delete all the programs stored in the "Saved program" folder.  ▶ Enter your Terminal Security Code▶ YES

## Information

## <Play mode setting>

- Play Mode Setting is invalid for the programs with time zone restrictions.
- Even if you set to "Repeat", the program is not played back repeatedly if it has no time zone restrictions but has restrictions on the number of playbacks.

## <Move program>

 You cannot move the program when its obtaining is not completed, or the move restriction or time zone restriction is set for the program.

### <Edit title>

- When the next program is delivered, the edited title is overwritten by the new title.
- <Multiple-choice> <Delete/Delete this> <Delete all>
- Even when you delete the program, the program setting is not released.

## Function Menu during Playback/Pause

Function menu	Operation/Explanation
Chapter list	See page 324.
Play mode setting	See page 324.
Sound effect (Remaster)	You can bring the sound from an earphone to the original sound by complementing high-pitch range lost at data compression.  ▶ Remaster ▶ ON or OFF
Sound effect (Listening)	You can set sound effect for when using an earphone.  Listening Select an item.  Surround Makes the sound natural and stereophonic.  Natur 1/2 Complements the cooped-up feeling specific to earphones and plays back natural sound.  Select 1 or 2 according to your taste.  OFF Sets Listening to "OFF".

Function menu	Operation/Explanation
Sound effect (Equalizer)	You can change the quality of sound from an earphone.  Fequalizer Select an item.  Normal Reproduces normal sound quality.  S-XBS1 Enhances bass sound.  S-XBS2 Enhances bass sound more deeply than S-XBS1.  Train Minimizes abnormal sound that causes sound leakage.
Program info	See page 325.
Chapter info	You can display the title, playback time, etc. of the chapter currently played back.
Connect to URL	See page 325.
Previous image	You can display a previous image.
Next image	You can display a next image.
Change to full	You can play back the program in the horizontal display with the images rotated in 90 degrees to the right.  • When they are already played back horizontally, the vertical display returns.

 Even if an earphone is not connected, the respective setting contents are displayed on the display.

### <Pre><Previous image> <Next image>

 You can display up to three images, however, you may not be able to display them depending on the program.

## **Playing Back Music**

You can play back music files on your FOMA phone by using MUSIC Player or i-motion player.

## ■ MUSIC Player (See page 329)

By "MUSIC Player" of "MUSIC", you can play back Chaku-uta Full® music files or music files saved from music CDs to the microSD memory card via a personal computer.

## ■ i-motion Player (See page 280)

From the " $\S$  motion" folder in "Data box", you can play back the voice-only i-motion movie (including music data of AAC format) or AAC format files stored on the microSD memory card.

 You can display mail, sites, and so on, while listening to music by MUSIC Player (Play Background). (See page 438)

## **Saving Music Files**

## Download Chaku-uta Full® Music Files

You can download Chaku-uta Full® music files from sites. You can save up to 111.6 Mbytes of files in total sharing the memory space with other data files. (See page 462)

## Bring up a Chaku-uta Full<sup>®</sup> music file downloadable site ➤ Select a Chakuuta Full<sup>®</sup> music file ➤ Save ➤ YES

- Select "Play" to play back the Chaku-uta Full<sup>®</sup> music file. See page 331 for operations while a Chaku-uta Full<sup>®</sup> music file is being played back.
- Select "Property" to display the Chaku-uta Full<sup>®</sup> music file information. (See page 335)
- See page 170 when Chaku-uta Full<sup>®</sup> music files are stored to the maximum.



Completion display

## 7

## Select a destination folder.

 Press (CLR) to display folders at the second-tier level or lower, if they exist. Press (CLR) to return to the upper level.

## When downloading Chaku-uta Full® music file is suspended

When you press (Quit ) to suspend downloading or when the downloading is suspended by an incoming call, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the Obtaining Completion display. Select "Save pt." to save it to a folder in "i-mode" folder in "NUSIC" in "Data box".

You can re-download the rest of the partially saved file from "Data box".

- The title name of the partially saved Chaku-uta Full<sup>®</sup> music file takes the date and time when it is downloaded.
- When the playback period or playback deadline of the partially saved Chaku-uta Full<sup>®</sup> music file has passed, you cannot download the remaining segments of the file. Further, the partially saved file is deleted when you perform obtaining operation.

## **About Uta-hodai**

Uta-hodai files are the Chaku-uta Full® music files you can play back just for a period of the contract with a content provider. The playback deadline is specified in the license information that is downloaded together with the music file.

Even when the playback deadline has passed, you can play back the music file by updating the license.

- When a music file with expired playback deadline (Chaku-uta Full® music file downloaded on the membership service basis) is found at the start of MUSIC Player, the confirmation display appears asking whether to update the playback deadline. Select "YES" to update the file (Packet communication fee is charged). Select "NO" not to use the music file. See page 329 for starting MUSIC Player.
- Some Uta-hodai files are applied with surplus playback period even after the playback deadline has passed. During this period, you can play back files without updating the playback deadline information. When the surplus playback period is over, you cannot play back the files. Also if you download a music file without updating the playback deadline, you cannot play it back before it is saved.
- When the upper limit of the (membership) music services you can register is exceeded, the confirmation display appears asking whether to overwrite them. Select "YES" to overwrite a music service whose playback deadline is the oldest. You can no longer play back the music files downloaded from the overwritten service.
- Packet communication fee charged for updating a playback deadline during international roaming is not supported by Pake-Houdai and Pake-Houdai Full.
- If you insert the UIM with a phone number different from the one you used to download Uta-hodai music files, you cannot download/play back the files. When you use Uta-hodai with a new UIM, execute "Initialize" (see page 364).

### Information

- You can save up to 5 Mbytes per Chaku-uta Full® music file.
- When the Uta-hodai music file set for a ring tone or alarm tone needs to be updated because of expired playback deadline, the default tone sounds when a call comes in, or an alarm sounds/vibrates.
- For a Chaku-uta Full<sup>®</sup> music file that has restrictions on the number of playbacks. playback period, or playback deadline, "(4)" is displayed at the head of the title. If you leave the FOMA phone with the battery pack removed for a long time, the date/ time information in the FOMA phone might be reset. In that case, you cannot play back the Chaku-uta Full® music file that has restrictions on the playback period or playback deadline. See "Music info" for checking the playback restrictions.
- "Music info" of a Chaku-uta Full® music file and deadline information on the display that notifies you of a playback deadline are shown by the date/time with "Summer time" set to "OFF"
- Partially saved Chaku-uta Full® music files cannot be played back from Data Box.

## Save WMA Files

You can use Windows Media Player 10/11 to save Windows Media® Audio (WMA) files from a personal computer to the microSD memory card.

You can save up to 600 WMA files.

• As well as music files, you can save playlists, jacket images, and license keys.

### STEP



Prepare devices required for saving WMA files

First, prepare the devices required for saving WMA files.

- FOMA P705i μ/PROSOLID μ
- microSD memory card
- FOMA USB Cable with Charge Function 01 (option)
- Personal computer with Windows Media Player 10 (10.00.00.3802 or later)/11 installed
- ·When you use Windows Media Player 10/11 in Windows XP, use Windows XP Service Pack 2 or later. When you use Windows Vista, use Windows Media Plaver 11.
- Before connecting the FOMA phone to a personal computer, you need to check the version of Windows Media Player.

## **STEP**



Use the FOMA phone as reader/writer

Set "USB mode setting" to "MTP mode", (See page 302)

### **STEP**



Save music files to the microSD memory card

Start Windows Media Player 10/11 and save WMA files to the microSD memory card.

- You cannot save WMA files to the FOMA phone.
- For how to operate Windows Media Player 10/11, refer to Help for Windows Media Player 10/11.
- When you finish saving, remove the FOMA USB Cable with Charge Function 01 from the FOMA phone.

When you remove the FOMA USB Cable with Charge Function 01, remove it after finishing the software in use.

## About the Napster® Application

You have the ability to save music files using the Napster® application.

- Please download the Napster® application from the following web page: http://www.napster.jp/ (Japanese only)
- If you have any questions about the Napster® application, refer to the following web page:

http://www.napster.jp/support/ (Japanese only)

### Information

- Do not remove the microSD memory card during saving a file. You may lose the file.
- Music files and jacket images are saved to PRIVATE/DOCOMO/MMFILE/WM/ on the microSD memory card.
- The WMA files saved on the microSD memory card using another FOMA phone might not be recognized by this FOMA phone. Further, the files might not be recognized by this FOMA phone even when it is connected to the personal computer with "USB mode setting" set to "MTP mode".
  In that case, delete "WM" folder and "WM-SYSTEM" folder on the microSD memory card by using your personal computer, or format the microSD memory card (see page 301). Note that not only music files but also all the other files are deleted when the microSD memory card is formatted.
- When you add or delete the WMA files on the microSD memory card repeatedly, the size of license files might become large, and memory space on the microSD memory card might become low. In this case, you can delete the license files. After you perform "DEL all licenses" for WMA files, connect your FOMA phone to your personal computer and update the license files. You cannot play back the WMA files unless you update the license files.
- When unused memory space on the microSD memory card becomes 300 Kbytes
  or less, the card might not be recognized by a personal computer. Check the
  unused memory space on the microSD memory card, and delete unnecessary
  data files if the unused memory space is 300 Kbytes or less, then connect to the
  personal computer after setting "USB mode setting" to "MTP mode".

## Save Music Files by Using SD-Audio

By using SD-Jukebox (commercial item), you can save the music files on the music CDs to the microSD memory card as AAC format data.

- By using the microSD memory card adapter (option), you can save music files to the microSD memory card directly from a personal computer as well.
- \*\*The following steps are an example for when the FOMA phone is used as a microSD reader/writer for saving music files.

## About SD-Jukebox

You can purchase SD-Jukebox from the web page below:

http://www.sense.panasonic.co.jp/PanaSense/special/soft/sd\_jukebox/ (Japanese only)

• For details about operating environments, refer to the web page below: http://panasonic.jp/support/software/sdjb/ (Japanese only)

## **STEP**



## Prepare devices required for saving music files

First, prepare the devices required for saving music files.

- ullet FOMA P705i $\mu$ /PROSOLID  $\mu$
- microSD memory card
- FOMA USB Cable with Charge Function 01 (option)
- Personal computer (Windows XP, Windows 2000, or Windows Vista)
- SD-Jukebox (commercial item)
- Music CD you want to save

## STEP



## 2 Install SD-Jukebox

Install SD-Jukebox on the personal computer.

### **STEP**



## Use the FOMA phone as reader/writer

Set "USB mode setting" to "microSD mode". (See page 302)

## **STEP**



## Save music files to the microSD memory card

Start SD-Jukebox and set a music CD on the personal computer. Then use SD-Jukebox to save music files to the microSD memory card.

- For how to operate SD-Jukebox, refer to Help for SD-Jukebox.
- When you finish saving, remove the FOMA USB Cable with Charge Function 01 from the FOMA phone.

## <MUSIC Player>

## **Using MUSIC Player**

You can play back Chaku-uta Full® music files obtained from sites or music files saved to the microSD memory card.

To play back music files, select "MUSIC Player" from "MUSIC" on Main Menu. Play Background is available so that you can use mail functions, display sites, and so on, while listening to music.

To manage folders or data files, select "MUSIC" from "Data box" on Main Menu.

- Note that battery consumption will be faster when you use MUSIC Player.
- You can enjoy playing back music in stereo sound by connecting the Flat-plug Stereo Earphone Set (option).
- If the number of stored files increases, it may take long to start MUSIC Player.

## **Play Back Music Files**

MENU MUSIC MUSIC Player

The Player Menu display appears.

- The playback display (in pause state) of the previously played music file appears when the information about it remains.
- The "★" mark is added to the playlist which is currently played back or was previously played back.



## Select an item.

### All tracks

#### Artist

. . . . . . . . Displays all the artist names.

Highlight the name of the artist you want to listen to and press

(Select), then all the album names of the selected artist are displayed. (Go to Album)

#### Album

. . . . . . . . Displays all the albums.

 
Highlight the name of the album you want to listen to and press

(Select).

#### Genre

. .Displays all the genres.

Highlight the genre you want to listen to and press (Select).



See page 338 for the playback of playlists.



Type List (For Artist)



Music List

- When you select "Artist", "Album", or "Genre", and press ☑ (Play) from the Type List, all the music files stored in the selected item are played back.
- You can switch display format each time you press (Change) from the Music List.
- When "Player" is displayed on the Type List or the Music List, you can display the playback display of previously played back music file or music file in-play by pressing [MIN] (Player).
- You might not be able to display all the stored music files depending on their file size.
- Any of the following images are displayed when you cannot display the preview image:







## Select a music file.

Playback starts from the selected music file in the order listed on the Type List or playlist. "Off is displayed while MUSIC Player is activated, and displayed when the music shifts to pause state during Play Background.

- The "★" mark is added to the music file which is currently played back or was previously played back.
- Playback continues even if you close the FOMA phone during playback.
- When you press a during playback, pause, or halt, MUSIC Player ends.
- When you press (MENN) ( List ) during playback, the former Music List is displayed.

## **Manage Folders or Music Files**





Music Folder List

## Select an item.

MUSIC Player . . . MUSIC Player starts. (See page 329)
i-mode . . . . . . Displays the i-mode (Chaku-uta Full®) Folder List. Select a folder

WMA..... Displays the WMA List.







Chaku-uta Full® Music List

- Some WMA files have playable license (number/ period/deadline).
- You can switch display format each time you press

  (Change) from the Chaku-uta Full® Music List and WMA List.
- See page 330 when you cannot display a preview image.
- See page 169 when you select "Search by i-mode".

## Select a Chaku-uta Full® music file or WMA file.

Only the selected music file is played back as a demo.

- When you close the FOMA phone during playback, the playback stops.
- To terminate playback, press (a) during playback or pause.
- You might be able to play back a Chaku-uta Full® music file by pressing Play ) or selecting "Play" from the Function menu while selecting it on another function.
- Chaku-uta Full® music files are shown by titles ("Music title Artist name" in default title) for control when you display them from the "i-mode" folder. When you operate them from "MUSIC Player", titles are shown.

### ■ About playback display during using MUSIC Player



When the FOMA phone is closed\*3

- 1.... The image \*1 which is stored in the music file
- 2.... Track number
- Title
- 6 ... Playback state 4.... Artist name
- 6.... Playback time/Total playback time
- 7.... Play mode (No indication for "Normal")
  - Play only one
- : Repeat one : Random
- : Repeat all
  - : Random play & repeat
- Demo\*2
- @.... Equalizer
- NORMA : Normal
- \$-XB\$2 : S-XB\$2 STEREO: Stereo
- - - : Monaural

- .... Listening (No indication for "OFF")
  - NATUR1 : Natur1 SURROUND : Surround NATUR2 : Natur2
- 1 .... Remaster (No indication for "OFF")
  - REMASTER: ON
- Sound volume
- \*1 When no images are stored, an animation appears.
- ※2 Displayed only in demo playbacks.
- \*3 In the Private window, a chapter name and artist name are displayed and when they are too long to be in the window, they flow as tickers.

### Operations of MUSIC Player in use

Operation	Key operation
Halt	<b>( ( ( ( ( ( ( ( ( (</b>
	• ( ) to play back
Pause	
	● ( ) to play back
Sound volume	Or ▲/▼
adjustment	<ul> <li>Press and hold  to adjust the sound volume sequentially.</li> </ul>
	Setting from Level 0 (Silent) through 25 is available.
Replay next file	or (for at least one second)
Replay previous file *1	or (for at least one second) When playback time is over three seconds, you go back to the beginning of the file.
Search (fast forward)*2	Press and hold .
Search (fast rewind)**2	Press and hold O.
Display list	MENU ( List )
Play background	( BGM )
Display image/ Display lyric	Each time of pressing switches between jacket image and
	lyric image.
Display next image	3

Operation	Key operation
Display previous image	
Remaster	• Each time of pressing switches between "ON" and "OFF".
Listening	Each time of pressing switches in order of "OFF"     → "Surround" → "Natur1" → "Natur2".
Equalizer	● Each time of pressing switches in order of "Normal"  → "S-XBS1" → "S-XBS2" → "Train".

<sup>\*\*1</sup> You go back to the beginning of the music file when "Random" or "Random play&repeat" is set or no previous music file is found.

• You cannot use some operations during playback of a demo.

From the playback display during using MUSIC Player, you can operate the following by using the switch of the Flat-plug Stereo Earphone Set (option) or the Flat-plug Earphone/Microphone with Switch (option):

• You can operate them when the FOMA phone is closed as well.

Operation	Switch operation
Pause	Press once.
	To play back, press again.
Replay next file	Press twice in succession.
Replay previous file*	Press three times in succession.
	When playback time is over three seconds, you go back to the beginning of the file.

<sup>&</sup>quot;You go back to the beginning of the music file when "Random" or "Random play&repeat" is set or no previous music file is found.

"Random" or "Ran

## ■ Playback specifications of Chaku-uta Full® music files

File format	MP4
Codec	MPEG-4 AAC
	MPEG-4 AAC+ (HE-AAC)
	Enhanced aacPlus
Bit rate	8 to 128 kbps
Extension	3gp

### ■ Playback specifications of SD-Audio files and number of storable files

File format	MPEG-2 AAC, MPEG-2 AAC+SBR
Bit rate	32 to 128 kbps
Maximum number of storable files	999 files
Maximum number of playlist	99 files (Up to 99 files can be stored in a single playlist. **)

Except "All tracks".

### ■ Playback specifications of WMA files and number of storable files

File format	WMA (Windows Media Audio 9 Standard)
Bit rate	32 to 192 kbps
Maximum number of storable files	Maximum 600 files
Maximum number of playlist	100 files (Up to 250 files can be stored in a single playlist.)

<sup>※2</sup> You cannot operate during halt or pause.

### ■ Icons on the Music List

When you select a music file from "MUSIC→MUSIC Player", the following icons are displayed:

Icon	Description
,	Stored in the FOMA phone
SD	Stored on the microSD memory card
4	SD-Audio file type
₽.	Chaku-uta Full® file type
ыме	WMA file type
Q <sub>j</sub>	UIM restrictions function
<u>a</u>	Chaku-uta Full® music file with playback restrictions
9	Chaku-uta Full <sup>®</sup> music file with expired playback restrictions
Ē	Playable Uta-hodai music file
*	Uta-hodai music file which needs to be updated because of expired playback deadline
×	Unplayable Uta-hodai music file
⇒×	File with file restrictions

### ■ Icons on the Chaku-uta Full® Music List

When you select a Chaku-uta Full<sup>®</sup> music file from "Data box→MUSIC", the following icons are displayed:

Icon	Audio format	Type
<b>39</b>	AAC, AAC+(HE-AAC), Enhanced aacPlus	MP4 file
G	-	Partially saved Chaku-uta Full® music files

- Some Chaku-uta Full<sup>®</sup> music files and Uta-hodai music files have restrictions on the number of playbacks, playback deadline, or playback period. The following icons are added.

- You can check the playback restrictions for the Chaku-uta Full<sup>®</sup> music file by "Music info".
- All Chaku-uta Full<sup>®</sup> music files are set with file restrictions. See page 148 for file restrictions

Icon	Acquired source
** 000	Sites

※For the copyrighted file movable to the microSD memory card, "

☐ " is displayed.

### Information

- Even when the file format is supported, you might not be able to play back some files.
- The information of the previously played music file is erased if you do the following operations:
  - ·When you remove/insert the microSD memory card
  - ·When you turn on/off the FOMA phone
  - ·When you execute "Reset settings" or "Initialize"
  - ·When you delete the previously played music file
  - ·When you delete the previously played playlist
  - When you do not insert the microSD memory card on which the previously played music file is stored
  - ·When you set "USB mode setting" to "microSD mode" or "MTP mode" and connect to a personal computer
- When you played back a music file from other than a playlist last time, and then when you perform "Edit music info" or "Reset music info", or when you newly download, save or delete a Chaku-uta Full<sup>®</sup> music file
- ·When the music file previously played is an Uta-hodai music file which needs to be updated because of expired playback deadline
- When the previously played music file is a WMA file and when you delete all the WMA licenses
- ·When the WMA license becomes invalid

- Partially saved Chaku-uta Full<sup>®</sup> music files are not displayed when you operate from MUSIC Player.
- Note that the battery is consumed sooner if you perform the fast-forward and other similar operations frequently.
- In the following cases, the playback pauses and resumes after you finish each operation:
  - · When you make/receive a voice call or videophone call
  - · When you receive a mail message or Message R/F while "Receiving display" is set to "Alarm preferred" or the Stand-by display is shown
  - · When an alarm tone of "Alarm", "Schedule" or "ToDo" sounds
  - Depending on the event which occurred, the confirmation display might appear asking whether to end MUSIC Player.
- When a music file is switched to the previous or next one, the music file with expired playback deadline or playback period, or WMA file whose WMA license is deleted is skipped. When the Chaku-uta Full<sup>®</sup> music file has restrictions on the number of playbacks, the confirmation display appears asking whether to play it back regardless of the remaining number of playbacks. However, the music file whose number of playbacks has finished is skipped.

# Function Menu of the Music Folder List/i-mode (Chaku-uta Full®) Folder List/Player Menu Display

Function menu	Operation/Explanation
Play mode setting	Select a play mode.
	Normal
	Plays back the music files sorted by type or in the playli in order as listed.
	Finishes after the last music file is played back.
	Play only one
	Plays back the selected music file once.
	Repeat one
	Plays back the selected music file repeatedly.
	Repeat all
	Plays back the music files sorted by type or in the playli in order as listed repeatedly.
	Random
	Plays back the music files sorted by type or in the playli at random. Finishes after all the music files are played
	back.
	Random play&repeat
	Plays back the music files sorted by type or in the playli at random repeatedly.
Add folder	Enter a folder name.
	You can enter up to 10 full-pitch/20 half-pitch characters.     You can create a total of 25 folders at each level up to the second-tier level in the FOMA phone. You can create folde at each level up to the seventh-tier level on the microSD memory card.
Edit folder name	► Enter a folder name. • You can enter up to 10 full-pitch/20 half-pitch characters.
Delete folder	You can delete a user folder and all Chaku-uta Full® music files in the folder.
	► Enter your Terminal Security Code > YES

Function menu	Operation/Explanation
Select storage	You can set the destination folder for when you move the Chaku-uta Full® music file to the microSD memory card. You can set it for up to seventh-tier-level folders.  ➤ YES
Memory info	You can display the used memory space (estimate)/number of stored items.

### <Add folder>

• You cannot create a user folder in the WMA folder.

### <Delete folder>

• If you delete the Chaku-uta Full<sup>®</sup> music file set for another function, the setting returns to the default.

### <Select storage>

- " a" is displayed for the folder set as a destination.
- When you execute Check microSD, or create or edit a folder by using a personal computer, the destination folder on the microSD memory card might be changed.
   When the setting is changed, set the destination folder again.

# Function Menu of the Chaku-uta Full® Music List/Type List/Music List/WMA List

Function menu	Operation/Explanation
Player menu	You can show the Player Menu display from the Type List or Music List.
Play mode setting	See page 334.
Set as ring tone (Fullsong ring tone)	You can set a full piece of Chaku-uta Full® music file as a ring tone.  Fullsong ring tone Select an item.
tone)	For the Chaku-uta Full® music files on the microSD memory card, the confirmation display appears asking whether to move it to the FOMA phone.

Function menu	Operation/Explanation
Set as ring tone (Point ring tone)	You can set a part of Chaku-uta Full® music file as a ring tone.  ▶ Point ring tone ▶ Select a range to be set  ▶ Select an item.  ● You can check the range to be set by pressing ☒( Play ).  ● For the Chaku-uta Full® music files on the microSD memory card, the confirmation display appears asking whether to move it to the FOMA phone.
Music info	You can display the title, artist name, playback time, etc.  • Press (F) (F) () with the music information of Chaku-uta Full® music file displayed and select "Edit music info"; then you can edit the information contents. Select a desired item and then edit it. To return the edited information to the unedited one, select "Reset music info". Select a desired item and select "YES".
Add to playlist	➤ Select a storing method.  Add one to P-list
Move	You can move the Chaku-uta Full® music file in the FOMA phone to another folder inside it, or can move the Chaku-uta Full® music file on the microSD memory card to another folder inside it.  ▶ Select a destination folder.  ● Press ☑(  ) to display folders at the second-tier level or lower, if they exist. Press ℂCLR ) to return to the upper level.
Move to microSD	You can move the Chaku-uta Full <sup>®</sup> music file to the microSD memory card. (See page 300)
Move to phone	You can move the Chaku-uta Full® music file on the microSD memory card to the FOMA phone. (See page 300)

Function menu	Operation/Explanation
Edit title	You can edit the title of Chaku-uta Full® music file.  ► Enter a title.  • For a Chaku-uta Full® music file in the FOMA phone, you can enter up to 9 full-pitch/18 half-pitch characters.  • For a Chaku-uta Full® music file on the microSD memory card, you can enter up to 18 full-pitch/36 half-pitch characters.
Reset title	You can reset the title of Chaku-uta Full® music file to "Music title - Artist name".  YES
Add folder	See page 334.
Edit folder name	See page 334.
Delete folder	See page 334.
Multiple-choice	You can select multiple Chaku-uta Full <sup>®</sup> music files and operate them.  Put a check mark for Chaku-uta Full <sup>®</sup> music files to be operated ► [ax]( FUNC ) Select an item.  Delete See "Delete this" on page 336.  Move See page 335.
Connect to URL	You can access the URL when the Chaku-uta Full® music file has the URL information.  ▶YES
Display image	You can display jacket images stored in the music file.  • When multiple jacket images are stored, press to display a previous or next jacket image.  • When the image is storable, press (Save) and select "YES", then select any destination folder to save it.
Display lyric	You can display lyric images stored in the Chaku-uta Full® music file.  • When multiple lyric images are stored, press ① to display a previous or next lyric image. You can display up to seven lyric images.  • When the image is storable, press ② ( Save ) and select "YES", then select any destination folder to save it.
Select storage	See page 335.

Function menu	Operation/Explanation
Memory info	You can display the used memory space (estimate)/number of stored items.
DEL all licenses	You can delete the WMA license files. ▶ Enter your Terminal Security Code ➤ YES
Delete this	▶YES
Delete all	You can delete all Chaku-uta Full® music files or WMA files in the folder.  ► Enter your Terminal Security Code ➤ YES  • If there is a user folder in a folder, you cannot delete the user folder or Chaku-uta Full® music files in the user folder.

### <Set as ring tone>

- When an Uta-hodai music file set for a ring tone cannot be played back, needs to be updated because of expired playback deadline, or is set with UIM restrictions, the default ring tone returns.
- See "Music info" for checking whether to be set as ring tone.

### <Add to playlist>

- You cannot add music files to the playlist created using a personal computer.
- <Reset title>
- $\bullet$  If there is no music title or artist name, it is displayed as "Unknown" in each.

## <Display image>

• Some images may not be displayed correctly.

## <Delete this> <Delete all>

- If you delete the Chaku-uta Full<sup>®</sup> music file set for another function, the setting returns to the default.
- If you delete the WMA file stored in the WMA playlist, it is released from WMA playlist.

## Function Menu during Playback/Pause/Halt

Function menu	Operation/Explanation
Player menu	You can show the Player Menu display from the playback display during using MUSIC Player.  • Playback state continues even when you show the Player Menu display.
Play mode setting	See page 334.
Sound effect (Remaster)	You can bring the sound from an earphone to the original sound by complementing high-pitch range lost at data compression.  Remaster ON or OFF
Sound effect (Listening)	You can set sound effect for when using an earphone.  Listening Select an item.  Surround Makes the sound natural and stereophonic.  Natur 1/2 Complements the cooped-up feeling specific to earphones and plays back natural sound.  Select 1 or 2 according to your taste.  OFF Sets Listening to "OFF".
Sound effect (Equalizer)	You can change the quality of sound from an earphone.  Fequalizer Select an item.  Normal Reproduces normal sound quality.  S-XBS1 Enhances bass sound.  S-XBS2 Enhances bass sound more deeply than S-XBS1.  Train Minimizes abnormal sound that causes sound leakage.
Music info	See page 335.
Connect to URL	See page 336.
Display image/ Display lyric	You can display jacket images or lyric images stored in the music file.
Previous image/ Previous lyric	You can display a previous jacket image or lyric image.
Next image/ Next lyric	You can display a next jacket image or lyric image.

### Information

#### <Sound effect>

- Even if an earphone is not connected, the respective setting contents are displayed on the display.
- <Display image/Display lyric> <Previous image/Previous lyric> <Next image/ Next lyric>
- For Chaku-uta Full<sup>®</sup> music files, you can display up to 3 jacket images and up to 7 lyric images.

For SD-Audio files saved by SD-Jukebox, you can display up to 20 jacket images, and for WMA file, you can display up to 2 image buried in a file. When you use the Napster® application program, you can display 1 image stored as a jacket image. There are no lyric images for them.

## **Using Playlist**

You can create the list of music files you want to listen to, and play them back in the order you like. You can play back using the playlists created by the FOMA phone or Windows Media Player, or the SD-Audio playlists created by SD-Jukebox.

• The maximum number of playlists that can be created and the number of music files that can be stored per playlist are as follows:

Creating source	Number of playlist	Number of music files that can be stored per playlist
Playlists created by FOMA phone	Maximum 30 (Except "All tracks")	100
Playlists created by Windows Media Player	Maximum 100	250
SD-Audio playlists created by SD-Jukebox	Maximum 99 (Except "All tracks")	99

When you create a playlist on the FOMA phone, you can store the Chaku-uta Full<sup>®</sup>
music files saved to the FOMA phone or microSD memory card, the WMA files
saved by Windows Media Player, and the SD-Audio files saved by SD-Jukebox
into the same playlist.

## ■ Icons on the Playlist List

Icon	Туре
J.	All tracks
ALL P	All tracks for SD-Audio
	FOMA playlist
	SD-Audio playlist
iiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiii	WMA playlist

## **Create Playlist**

Player Menu display
Playlist/SD-Audio

Hall SD-Audio traci D-DoCoMo Playlist D-J-POPS D-SD-Audio playlist D-J-Wish Music Playlist List

- - Select a type and display the Music List
  - Put a check mark for music files to be stored
  - ► (Finish)
  - The music files are stored in the displayed order.
- Enter a playlist name.
  - You can enter up to 18 full-pitch/36 half-pitch characters.

### Information

 In a playlist, you cannot store partially saved Chaku-uta Full<sup>®</sup> music files or files with expired playback restrictions.

## **Play Back Playlist**

- Playlist List Select a playlist
  Select a music file.
  - Press (Play) from the Playlist List to play back the music files from the top one in the selected
  - You cannot play back a playlist from "MUSIC" of Data Box.



Music List of a Playlist

## **Function Menu of the Playlist List**

Function menu	Operation/Explanation
Player menu	You can show the Player Menu display.
Play mode setting	See page 334.
Create playlist	See page 338.
Copy playlist	<ul> <li>Enter a playlist name.</li> <li>You can enter up to 18 full-pitch/36 half-pitch characters.</li> <li>When you copy the SD-Audio playlist or WMA playlist, it is copied to the FOMA phone as the FOMA playlist.</li> </ul>
Edit playlist name	You can edit the name of the FOMA playlist.  Edit the playlist name.  You can enter up to 18 full-pitch/36 half-pitch characters.
Add	You can add the music files to the FOMA playlist.  Select a type and display the Music List  Put a check mark for the music files to be added  [Signature]  The music files are stored at the end of the list in the displayed order.

Polete playlist  You can delete the FOMA playlist.  ▶ Select a deleting method.  Delete this	Function menu	Operation/Explanation
	Delete playlist	► Select a deleting method.  Delete this

- <Copy playlist>
- You cannot copy the WMA playlist with no music files stored.

## Function Menu of the Music List of a Playlist

Function menu	Operation/Explanation
Player menu	You can display the Player Menu display.  • Playback state continues even when you show the Player Menu display.
Play mode setting	See page 334.
Music info	See page 335.
Add	See page 338.
DEL from playlist	You can release the music files from the FOMA playlist.  Select a deleting method.  DEL one from list

Function menu	Operation/Explanation
Order to play	You can change the order of playlist created on the FOMA phone.  Select a file whose position is to be changed
	► Use  to change the position of the music file  (Select)
	Repeat the above procedure to change the order of the music files.
	▶⊠( Set )
Add to playlist	See page 335.
Display image	See page 336.
Display lyric	See page 336.

## Information

<DEL from playlist>

• You cannot release music files from the playlists created on a personal computer.



# **Other Convenient Functions**

Multiaccess	342
MultitaskMultitask	343
Informing You of an Incoming Call/Mail Message by Voice	
Reading Aloud	344
Turning Power On/Off Automatically at a Specified Time	
	346
Using Alarm	346
Using Calendar to Manage Schedule Schedule	349
Using ToDo to Manage Schedule	353
Setting Operating Conditions of Alarm Alarm Setting	354
Using Your Original Menu Private Menu Setting	354
Storing Your Name, Mail Address and Other Information	
	355
Recording Voice during a Call or Standby as Voice Memo	
«Voice Memo during a Call» «Voice Memo»	356
Recording Images during a Videophone Call as a Movie Memo	
	357

Using Voice RecorderVoice Recorder	35
Checking Call Duration and Cost Call Data	35
Resetting Total Duration/Total Cost	
Reset Total Cost&Duration	359
Setting Call Cost LimitNotice Call Cost	359
Using Calculator	360
Making Text Memos	360
Copying/Deleting Data Items in FOMA Phone or UIM	
	36
Making/Receiving Calls Using Flat-plug Earphone/Microphone with	
Switch	362
Selecting a Call Destination when Earphone is Connected	
Headset Switch to Call>	363
Answering a Call Automatically when Earphone is Connected	
	36
Resetting Function Settings Reset Settings>	364
Deleting Stored Data All at OnceInitialize	36

### <Multiaccess>

## **Multiaccess**

Multiaccess enables you to simultaneously connect to three lines; a voice call, packet communication, and SMS.

To switch the displays, press and hold (MULT) for at least one second; or press (MULT) to switch from TASK MENU. (See page 343)
See page 437 for details on combination of Multiaccess.

Voice call	Single line
i-mode, i-oppli, i-mode mail, packet communication via PC	Single line
SMS	Single line

### Information

• You are charged a fee for each line during Multiaccess.

# Make a Voice Call during i-mode or during Packet Communication

You can make a voice call without disconnecting i-mode or packet communication.

During i-mode or packet communication ► MULTI
► Stand-by display

The Stand-by display appears.

## Make a call.

• If you make a videophone call during i-mode, i-mode is disconnected and the videophone call is made.

After you finish the videophone call, the i-mode display returns.

# Receive a Voice Call during i-mode or during Packet Communication

You can receive a voice call without disconnecting i-mode or packet communication.

The Call Receiving display appears when a call comes in Press 😩 to answer the call.

To return to the display for i-mode or packet communication without answering the call, press and hold (MULTI) for at least one second. Press and hold (MULTI) for at least one second again to return to the Call Receiving display.

The other party hears not a message but a calling tone.

## **Use Communication during Voice Call**

You can use i-mode, send/receive i-mode mail, etc. without disconnecting a voice call.

During a voice call MULTI MENU (Menu Select an icon to operate each function.

### Information

- When a mail message or Message R/F comes in during a call, the ring tone does not sound and illumination does not flicker regardless of the "Receiving display" setting.
- A ring tone sounds and the Receiving Result display appears when "Receiving display" is set to "Alarm preferred" except for the following cases:

   During a call

   While the camera is activated
- · When an i-oppli program set for the Stand-by display is running as an ordinary i-oppli program
- When you perform packet communication via a personal computer, make a call-out operation from the personal computer during a voice call.

### <Multitask>

## **Multitask**

The FOMA phone supports "Multitask" that enables you to use up to three functions such as menu functions (see page 32) at the same time. By combining Multiaccess and Multitask, you can use following functions simultaneously (see page 438 for the combination patterns of Multitask):

- ■Mail group
  - i-mode mail and SMS functions
- ■i-mode group

Menu functions inside "i-mode group" on Main Menu

■Setting group

Menu functions inside "Setting group" on Main Menu

■Tool group

Menu functions inside "Tool group" on Main Menu

■Other functions which do not belong to the groups

Voice call, videophone call, 64K data communication, etc.



## **Start Another Function**

When a function is running MULTI

MENU (Henu ) Start another function.

For the icon of the group in use, " $\bigtriangledown$ " or another mark is added.

When a single function is used, " " is displayed.
When multiple functions are used, " " is displayed.



When a function in the Tool group is running

# If another menu function in the same group has already been called up

The confirmation display appears asking whether to switch the functions. Select "YES" to close the current menu function and the new menu function will be called up.

### Information

- You are charged a call fee even when you are running other functions during a call.
- If a call comes in while another function is working, the call might not be received correctly. In that case, "Record message" or "Call Forwarding Service" may start in a shorter time than the ring time specified for them.
- If you use Multitask to switch functions while executing another function whose load of processing is high, delay may occur in displaying operation, and so on.

## **Switch Displays**

When multiple menu functions are working, you can switch the displays by pressing and holding  $\widehat{\text{Multi}}$  for at least one second. The display switches from the latest one in chronological order.

## To display the menu list for functions in use

Press (MULTI).

You can switch functions by selecting a function from the list. Select "Open Menu" to show Main Menu, and select "Stand-by display" to show the Stand-by display.



## **Information**

 Even if you press (MULT) to switch the displays, neither menu function in use is closed nor the call is disconnected. Also, even when you switch the Character Entry display (see page 366) to another menu and use that menu for editing text, you can continue editing the previous text if you switch tasks.

## **Exit a Function**

To close a menu function, press (22) with the menu function displayed.

- Press (□ PND) from TASK MENU, and select "YES" to close all menu functions and to return to the Stand-by display.
- When you press from the Stand-by display during Play Background, the confirmation display appears asking whether to end the menu function.

## <Reading Aloud>

# Informing You of an Incoming Call/Mail Message by Voice

You can set to be notified of incoming calls by voice instead of a ring tone, or to have the mail contents automatically read aloud. Further, the voice guidance instructs you through the operations of Voice Dial. This function is available in Japanese Mode only.

## **Read Aloud Settings**

Settings ➤ Other settings ➤ Voice settings
➤ Read aloud settings ➤ ON or OFF ➤ Put a check mark for items to be read aloud ➤ (Finish)

#### Voice dial

...Instructs you through the Voice Dial operation by voice guidance.

...Notifies you of the caller information by voice while a voice call is coming in. **Videophone incoming** 

... Notifies you of the caller information by voice while a videophone call is coming in.

### Number of mails/msqs.

... Notifies you of the number of mail messages/Messages R/F by voice at reception. The setting of "Mail/Msg. ring time" is invalid.

#### Mail list

. . . Reads aloud the sender/destination address and subject on the Inbox/ Outbox List.

### Displaying mail

... Reads aloud the sender/destination address, subject, and text on the detailed mail display. However, the voice guidance is not provided when a melody is automatically played back while "Auto melody play" is set to "ON".

### Send mail preview

- ... Reads aloud the destination address and text when previewed.
- You can stop the voice guidance for a mail message midway by pressing any key. However, it continues if you scroll the display.
- The voice guidance for a mail message is not provided when you display a mail message stored on the microSD memory card.

## **Read Aloud Volume**

Settings Other settings Voice settings Read aloud volume Use to adjust the volume.

## **Read Aloud Speed**

Settings Other settings Voice settings
Read aloud speed Select a speed.

## **Read Aloud Output**

You can set whether to play back the voice guidance from the speaker or hear it from the earpiece.

Settings Other settings Voice settings
Read aloud output Speaker or Earpiece

## Information

- The voice guidance of "Incoming call", "Videophone incoming" and "Number of mails/msgs." is output from the speaker even when this function is set to "Earpiece".
- When the Flat-plug Earphone/Microphone with Switch (option) is connected, the voice guidance is output according to the setting of "Headset usage setting". However, when "Read aloud output" is set to "Earpiece" and "Headset usage setting" is set to "Headset + speaker", the voice guidance is output from the earphone except for "Incoming call", "Videophone incoming" and "Number of mails/msqs.".
- From a Hands-free device, the voice guidance for "Incoming call" and "Videophone incoming" only might be provided.
- You might not be able to stop the voice guidance even by pressing the switch of the Flat-plug Earphone/Microphone with Switch (option).

## **Read Aloud Valid Setting**

You can set the voice guidance to be provided only when the Flat-plug Earphone/Microphone with Switch (option) is connected.

Settings Other settings Voice settings Read aloud valid set. Normal or Earphone

Normal. . . . . . Always provides the voice guidance.

**Earphone** . . . Provides the voice guidance only when the Flat-plug Earphone/
Microphone with Switch is connected.

### Information

 When you set to "Earphone", the voice guidance continues even if you remove the Flat-plug Earphone/Microphone with Switch during the voice guidance.
 When a call comes in while the Flat-plug Earphone/Microphone with Switch is removed, the voice guidance does not start even if you connect it.

## **Rules of Voice Guidance**

The contents of Phonebook entries and mail messages are read aloud generally according to the rules as described below:

 They may not be read aloud as specified in the following rules depending on the function you use:

### <Numerics>

- A numeric string up to 16 digits is read aloud as a number. When a numeric string begins with "0" or it is identified as a URL or mail address, it is read aloud digit by digit.
- When numerals are separated by "/" or ".", they are read aloud as dates.
- "1 =" is differently read aloud for the meaning of the date (1st date of a month) and for others. The kanji characters of dates other than "1 = are always read aloud as for the dates.
- When numerals are separated by ":", they are read aloud as time.
- "-", "(" and ")" contained in a phone number or zip code are not read aloud, and numbers only are read aloud.
- When a numeric string begins with "\(\pm\)", "\(\pm\)", "\(\pm\)", "\(\pm\)", "\(\pm\)", it is read aloud as the meaning of money amount. When "," is used, the numeric string before "," is identified as money amount and that after "," is identified as a number, unless it is separated by every three dioits.
- "(Numeral) 分の (numeral)" is read as a fraction.

### <Alphabet>

- Alphabetical letters are read aloud according to the voice guidance dictionary pre-installed in the FOMA phone.
- When a word consists of four or more letters and can be read in romaji-reading, it is read aloud in romaji-reading.
- The alphabetical letters after a numeral might be read aloud as a unit.
- "M", "T", "S", and "H" before a date are converted to the Japanese era name and then read aloud.
- Alphabetical letters other than above are read aloud in alphabetical reading.

### <Symbol>

- Symbols are read aloud according to the Symbol List. When the same symbol
  continues three times or more, that symbol is not read aloud.
- "ヘンシン" is read aloud for the following character strings: "Re:", "Re>", "Re2:", "Re2>" and "Re2\*"
- "テンソー" is read aloud for the following character strings:
- "Fw:", "Fw>", "Fw2:", "Fw2>", "Fwd\*", "Fwd-", "Fwd>", "Fwd2:", "Fwd2>" and "Fwd2\*"

   When symbols for "Reply" or "Forward" are consecutively repeated, they are read
- When symbols for "Reply" or "Forward" are consecutively repeated, they are real aloud only once.

### <Pictograph>

• Pictographs are read aloud according to the Pictograph List.

### <Smiley>

 Smileys are read aloud according to the voice guidance dictionary pre-installed in the FOMA phone. When they are identified as a URL or mail address, however, they are read aloud as symbols.

### <Other items>

- Texts are read aloud separated by punctuation marks and symbols such as "!", or "?".
- When the kanji character that expresses the day of the week is put between "(" and ")", it is read aloud as the day of the week.
- Words might not be correctly read aloud depending on the context of the text (especially place names and proper nouns).

<Auto Power ON/OFF>

# Turning Power On/Off Automatically at a Specified Time

► Settings Clock Auto power ON/OFF

Auto power ON or Auto power OFF Select an item.

OFF. . . . . . Does not set Auto Power ON/OFF. The setting is completed.

1 time . . . . . Sets to turn on/off the power automatically at the specified time only once.

**Daily** . . . . . . Sets to turn on/off the power automatically at a specified time everyday repeatedly.

## Enter a time.

### Information

 When you set "Auto power ON" and "Auto power OFF" to the same time, and the specified time arrives, the FOMA phone will turn on if it is turned off, and the FOMA phone will turn off, if it is turned on.

### Information

- When you set "Auto power OFF" to the same time of an alarm, schedule alarm, or others, those alarms preferentially work.
- Even when you set "Auto power OFF", the power does not turn off at the specified time if other than the Stand-by display is displayed. The power turns off after the function in working is finished.
   When you set a Flash movie as the Stand-by display, the power might not be turned off while the Flash movie is moving.
- Turn off the FOMA phone after setting "Auto power ON" to "OFF" when you are near electronic devices using high-precision control or weak signals, or where the use is prohibited such as in airplanes and hospitals.

# <Alarm>



## **Using Alarm**

You can set Alarm to alert you at the specified time with an alarm tone, animation and illumination. You can store up to 12 alarms.

Stationery Alarm
Highlight an alarm and press
(C)(Edit) Do the following operations.



Item	Operation/Explanation
(Alarm)	You can set whether to validate or invalidate the alarm.  No or OFF
(Time)	➤ Enter the time for sounding the alarm. • You cannot set the same time as the time set for the stored alarm.
(Repeat)	■ Select a type of repeat.  If you select "1 time", the alarm is not repeated.  If you select "Select day", put a check mark for days of the week to be set and press () (Finish).

Item	Operation/Explanation
(Tone)	➤ Select a type of alarm tone ➤ Select a folder➤ Select an alarm tone.
욹 (Volume)	► Use  to adjust the volume.  • If you set "Step", the alarm tone is silent for about three seconds, and then the volume steps up every about three seconds, from Level 1 through Level 6.
(Snooze)	You can set whether to activate Snooze. If you set to "OFF", set the duration that the alarm tone is to continue sounding.  ▶ ON or OFF▶ Enter a ring time (minutes).  • You can enter from "01" through "10" in two digits.  • See page 348 for how Snooze works.
(Auto power ON)	You can set whether to turn on the power automatically to make an alarm sound when the alarm time arrives during power off.  ON or OFF
(Prefer manner mode)	You can set the alarm tone which sounds at the specified time during Manner Mode.  ▶ ON or OFF ON Sounds at the same volume as set for "Alarm volume" on page 99.  OFF Sounds at the volume set for this function.

→ Press (Finish).

• The following icons appear on the display depending on the setting:

Repeats daily.

: Repeats on the specified day of the week.

## Function Menu while Alarm is displayed

Function menu	Operation/Explanation
Edit	Go to step 1 of "Using Alarm" on page 346.
Detail	You can display the stored alarm contents.
Set this	You can validate the stored alarm.  ▶YES  • You can validate also by pressing (

Function menu	Operation/Explanation
Set all	You can validate all the stored alarm.  YES
Release this	You can invalidate the stored alarm.  ▶YES  • You can invalidate also by pressing (□)(□0FF ).
Release all	You can invalidate all the stored alarm. ▶YES

## Information

- If the alarm tone sounds during a call, press any key to stop it. Once again press any key to end the alarm including Snooze. If the other party on the phone hangs up, an alarm including Snooze ends.
- During a call, the alarm tone sounds at the level set for "Volume" (earpiece volume).
- If any of the following events occurs in Snooze state, Snooze is released:
   When you receive a voice call or videophone call
   When you receive a mail message or Message R/F while "Receiving display" is
  - ·When an alarm tone of "Schedule" or "ToDo" sounds
- When you set the power to automatically turn on and an alarm to sound, the default alarm tone sounds if the alarm which is set with the UIM restrictions has heen selected
- Turn off the FOMA phone after setting "Auto power ON" to "OFF" when you are near electronic devices using high-precision control or weak signals, or where the use is prohibited such as in airplanes and hospitals.

# When you set an alarm for "Alarm", "Schedule", and "ToDo"

The icon appears on the desktop.

set to "Alarm preferred"

".... Displayed when an alarm is set for today (except the setting for past time).

"\(\sigma^n\).... Displayed when an alarm is set for tomorrow or onward only.

 If you set "Alarm" of the stored schedule event/ToDo item to "OFF", the icons are not displayed.

# When the time specified for "Alarm", "Schedule" or "ToDo" comes

The alarm sounds for about five minutes (in the case of "Alarm", the alarm sounds for specified time), and illumination lights. The vibrator works as you set for "Phone" of "Vibrator". The set alarm message and an animation or i-motion movie linking to the selected icon appear on the display.

- If you set "Snooze" of "Alarm" to "ON"
- The alarm sounds for about one minute at an interval of five minutes, up to six times, until Snooze is released by pressing .
- During a call

The alarm sounds from the earpiece three times repeatedly.

During operations

The FOMA phone works according to the setting of "Alarm setting". (See page 354)

When you set an alarm to the time of another alarm

The alarm sounds in the priority order of "Alarm" → "ToDo" → "Schedule". A missed schedule event or ToDo is notified by the "Missed alarm" icon.

- When the power is turned off
  - <Alarm>

When "Auto power ON" is set to "ON", the power automatically turns on to make an alarm notification sound. When the auto-power setting is set to "OFF", an alarm does not sound with the power stayed off. Even after turning the power on, the "Missed alarm" icon is not displayed.

<Schedule/ToDo>

The alarm does not sound.

The "Missed alarm" icon is not displayed even after turning the power on.

• In Manner Mode

The vibrator and illumination light notify you. For Schedule/ToDo, a message is also displayed. The alarm sounds at the volume set for Manner Mode. (See page 99)

• During Lock All, Personal Data Lock or Omakase Lock

The alarm does not sound.

After releasing each lock, the "Missed alarm" icon is displayed to inform you of the missed alarm. Further, if the power is turned off, the power does not turn on and the "Missed alarm" icon does not appear even after releasing each lock.

 While SD-PIM is activated, during infrared data exchange, or during iC communication

The alarm does not sound.

After each function is finished, the "Missed alarm" icon is displayed.

- While updating a software program
- The alarm does not sound.

When the specified time comes during rewriting the software program, the "Missed alarm" icon is not displayed even after updating is completed.

### Information

- If you set "Alarm setting" to "Alarm preferred" and the alarm time has come when
  you are dialing, the alarm sounds after calling up the other party. If the alarm time
  has come when receiving a call, the alarm sounds after starting communication.
- You might not be able to set some i-motion movies or Chaku-uta Full<sup>®</sup> music files for the alarm.
- Some i-motion movies set for the alarm might be played back only with sound at the specified time.
- The Chaku-uta Full<sup>®</sup> music file set for the alarm is played back only with sound at the specified time.

The illumination for when you play back a demo to select an alarm tone might differ from for when you are notified by an alarm.

# To clear alarm tone/alarm message, and animation/i-motion movie from the display

Press any key to stop the alarm tone but the animation/i-motion movie changes to a still image and the alarm message remains displayed. Press any key again (press if you set "Snooze" of "Alarm" to "ON") to clear the display. However, you cannot clear the alarm message for the schedule event or ToDo item by pressing a side key, with the FOMA phone closed. When a call comes in, the alarm stops sounding.

## When "Alarm" did not work

"Missed alarm" icon is displayed on the desktop. You can check that icon for the contents of the missed alarm (Missed alarm information).

The latest missed alarm information that could not be notified is displayed.

### <Schedule>



# **Using Calendar to Manage Schedule**

You can display the calendar by month or week to check the stored schedule events.

You can display or store from January 1, 2000 through December 31. 2037.

See page 348 for how alarm works.

## Store Schedule Events

When the specified date and time come, an alarm tone, an illumination, alarm message (summary or contents of the schedule event) and an animation corresponding to the set icon notify you of the schedule event.

You can store up to 1,000 schedule events.

Stationery Schedule (□)( Schedule Do the following operations.

Item	Operation/Explanation
(Edit summary)	Select an icon.  When the alarm tone alerts you, the animation corresponding to the selected icon is displayed.  Enter the summary of the schedule event.  You can enter up to 20 full-pitch/40 half-pitch characters.  A summary corresponding to the selected icon is entered in advance.
(Whole day)	You can set whole day schedule without entering starting and ending date/time.  OFF or ON  If you set to "ON", the alarm sounds at 12 a.m.
① [Date (from)]	► Enter the date and time for starting the schedule.
① [Date (to)]	► Enter the date and time for ending the schedule.

Item	Operation/Explanation
(Repeat)	▶ Select a type of repeat.     If you select "1 time", the alarm is not repeated.     If you select "Select day", put a check mark for days of the week to be set and press ((Finish)).  The schedule event set with repetition is counted as one event.
(Alarm)	Select an alarm method. ON
1 (Tone)	➤ Select a type of alarm tone ➤ Select a folder ➤ Select an alarm tone.
(Contents)	► Enter schedule contents.  • You can enter up to 256 full-pitch/512 half-pitch characters.
Press ☑(Finish).	

- The following icons appear on the display depending on the setting:
  - : Alarm sounds.
  - Repeats daily.
  - Repeats on the specified day of the week.
  - Repeats monthly. Repeats vearly.

## When you attempt to set two schedule events to the same date and time

You can set the schedule events to the same setting time only by a combination of "1 time" and "Daily/Select day/Monthly/Yearly" for "Repeat". When both two events are set to "1 time" or "Daily/Select day/Monthly/Yearly", the confirmation display appears asking whether to overwrite on each.

When one event is set to "1 time" and the other is set to "Daily/Select day/Monthly/ Yearly", the confirmation display appears telling that "1 time" has priority.

- If you enter a date on or after 29th in "Date (from)" and set "Repeat" to "Monthly", the schedule event is set on the last day of the month when the month does not have the specified date.
- If you enter February 29 of the leap year in "Date (from)" and set "Repeat" to "Yearly", the schedule event is set on February 28 when the year is not the leap year.
- For the schedule event stored as secret data, an animation for secret data appears when the alarm sounds in ordinary mode (not in "Secret mode" or "Secret data only"). An alarm message is not displayed.
- During standby, the alarm tone sounds at the level set for "Phone" of "Ring volume". During a call, the alarm tone sounds at the level set for "Volume" (earpiece volume).

## Store Holidays/Anniversaries

You can store a holiday per day of up to 100, and anniversaries of up to 100 per day.

MENU ► Stationery ► Schedule ► ( New )

► Holiday or Anniversary

Do the following operations.

Item	Operation/Explanation
(Date setting)	► Enter the date.
(Repeat)	Select a type of repeat. If you select "1 time", the holiday/anniversary is not repeated. The holiday or anniversary set with repetition is counted as one event.
(Contents)	Enter the contents of the holiday or anniversary.     You can enter up to 10 full-pitch/20 half-pitch characters.

🤈 Press 🗹 (Finish).

• The holiday ( \*) or anniversary ( \*) you set is stored.

: Repeats yearly.

## **Check Schedule Events**

You can check the details of schedule events, holidays, or anniversaries.







(Monthly display)

Calendar display (Weekly display)

The Calendar display appears.

- Today and the selected date are highlighted and the number of stored schedule events and the contents of them of the day are displayed at the bottom of the display.
- . Display on the calendar
  - (blue): Schedule set for a.m.
- (orange): Schedule set for p.m.
- : Schedule continues two days or more
- Holidays are displayed in red, and anniversaries are marked with a red circle.
- If you press well ( Prev. ) or ( Next ) from the monthly display, the calendar for the pervious or next month is displayed.
  - If you press (Prev.) or (Next) from the weekly display, the calendar for the pervious or next week is displayed.

Select a date.

The Schedule List for the selected date is displayed.



# 3 Select a schedule event, holiday, or anniversary.

Schedule	- 335
<b>∠</b> Summary	
Golf Practice	
⊕Whole day	OFF
@Date(from)	
2008/11/15(Sat)	10:30
@Date(to)	
2008/11/15(Sat)	12:00
	Weekly
TuWeThSa	
OAlarm Pre	-notice
2008/11/15(Sat)	10:25
♪Tone	
Clock Alarm Tone	e
Detailed Sched	dule
display	

### Information

 National holidays on the calendar are conformance with "Law on National Holidays and the partially amended version of the Elder Law" (up to No.43, 2005).
 Spring Equinox Day and Autumn Equinox Day are announced on the official gazette of February 1 in the previous year, therefore, they may differ from the days on the calendar. (As of December 2007)

## **Function Menu of the Calendar Display**

Function menu	Operation/Explanation
New	Select an item. Schedule Go to step 1 on page 349. Holiday Go to step 1 of "Store Holidays/ Anniversaries" on page 350. Anniversary Go to step 1 of "Store Holidays/ Anniversaries" on page 350.
Monthly display/ Weekly display	You can switch the Calendar displays.  Monthly display or Weekly display
Icon display	➤ Select an icon to be displayed.  The Schedule Event List for the selected icon is displayed.  • Select a schedule event to display the details.
To specified date	► Enter date, month, and year ► ( Set )

Function menu	Operation/Explanation
No. of schedules	You can display the number of schedule events, holidays, and anniversaries. You can display the number of the schedule events stored as secret data during Secret Mode or Secret Data Only.
Add desktop icon	See page 114.
Send all Ir data	See page 310.
All transmission	See page 311.
Customize holiday	You can specify the color for the day of the week.  Select a day of the week Default, Red, or Blue  The display color of national holidays and stored holidays has priority over this setting.
Delete past	You can delete the schedule events, holidays or anniversaries stored for up to a preceding day of the selected day.  ▶ Select an item to be deleted ▶ YES
Delete all	You can delete all the schedule events, holidays or anniversaries.  ► Enter your Terminal Security Code  ► Select an item to be deleted ► YES  • When you delete all holidays, the setting for national holidays will be reset.
Reset holiday	You can restore the national holidays you deleted to its default. You cannot reset the holidays you have set.  YES

## Information

### <lcon display>

 On the Icon display, the schedule set with repetition is displayed as a single event. For the date, the nearest date of the schedule event is displayed.

### <Customize holiday>

• They are displayed in the default color during Lock All, Omakase Lock, and Personal Data Lock.

#### <Delete all>

 In Secret Mode or Secret Only Mode, you can delete schedule events stored as secret data.

# Function Menu of the Schedule List/Detailed Schedule Display

Function menu	Operation/Explanation
New	➤ Select an item.  ScheduleGo to step 1 on page 349.  HolidayGo to step 1 of "Store Holidays/
Edit	Go to step 1 on page 349 for the schedule event. Go to step 1 of "Store Holidays/Anniversaries" on page 350 for the holiday and anniversary.  • You can edit also by pressing (Edit) from the detailed Schedule display.  • You cannot edit national holidays.
Сору	You can copy the schedule event, holiday or anniversary and store it for another date.  Enter the date and time you are pasting to. Go to step 1 on page 349 for the schedule event. Go to step 1 of "Store Holidays/Anniversaries" on page 350 for the holiday and anniversary.  Even if "Repeat" of the copy source is set to "Daily/Select day/Monthly/Yearly", the pasted one is set to "1 time".  You cannot copy national holidays.
Calendar display	You can return to the Calendar display from the Icon display. You can operate this only when the Icon display is displayed.
Icon display	See page 351.
To specified date	See page 351
Set secret/ Release secret	You can have the schedule event set to or release from secret.  YES  When you select "Set secret" in ordinary mode (not in "Secret mode" or "Secret data only"), enter your Terminal Security Code.

Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message whose text contains the date and contents of the schedule event. Go to step 2 on page 182.
Attach to mail	You can attach the schedule event to an i-mode mail message to send.  Go to step 2 on page 182.  You can attach it to an i-mode mail message also by pressing ( ) from the detailed Schedule display.
Send Ir data	See page 309.
Send all Ir data	See page 310.
transmission	See page 311.
All Tetransmission	See page 311.
Copy to microSD	See page 296.
Delete this	YES  If you delete a schedule event, holiday or anniversary set for repeat, the all data items set for repeat will be deleted.  You can delete national holidays only by "Delete this".
Delete past	See page 351.
Delete select	▶ Put a check mark for schedule events to be deleted ▶ 않(Finish)▶ YES
Delete all	You can operate this only when the Icon display is displayed. (See page 351) You can delete all the schedule events, holidays, and anniversaries for the selected icons.

## <ToDo>



## **Using ToDo to Manage Schedule**

You can manage your schedule events in the list and make an alarm tone sound when the specified time comes. You can store up to 100 ToDo items to manage your schedule.

• See page 348 for how alarm works.



You can check the stored contents by selecting a stored ToDo item, and you can edit it by pressing (Edit ).

),,	
Item	Operation/Explanation
(Edit ToDo)	► Enter ToDo contents.
	You can enter up to 100 full-pitch/200 half-pitch characters.
(Due date)	Select an item.  Enter date Enter the date (due date) directly.  Choose date
	Select a date (due date) from the calendar.  Check the date and press ( Set ).  No date Does not set the date (due date). The alarm
_	does not work.
P (Priority)	<ul> <li>Select a priority.</li> <li>If you sort the items in due date order, the items for the same date are displayed from the higher priority.</li> </ul>
(Category)	Select a category.
(Alarm)	Select an alarm method. ON Alerts you at the set time. The setting for alarm notification is completed. ON/Set time
	► Enter the date and time to notify

Item	Operation/Explanation
(Tone)	➤ Select a type of alarm tone ➤ Select a folder ➤ Select an alarm tone.

## Press ☑(Finish).

H: Priority high
: Priority low

 If you do not enter the contents, "Finish" is not displayed, and you cannot store the ToDo item.

## Function Menu while ToDo Item is Displayed

Function menu	Operation/Explanation
New	Go to step 1 on page 353.
Edit	Go to step 1 on page 353.  To edit "Completion date" of the ToDo item set with "Completion", select " , and perform the same operation as in "Due date" of step 1 on page 353.
Change status	The set status icons are displayed on the ToDo List.  Select a status.  The status icons switch from blue to red after the due date.  If you select "Completion", perform the same operation as i "Due date" of step 1 on page 353.
Category display	Select a category.  Select a ToDo item to display the details of it.
Sort/Filter	You can sort ToDo items for display. You can also list them up by the specified status.  Select the order or state you want to display.
Add desktop icon	See page 114.
Attach to mail	You can attach the ToDo item to an i-mode mail message to send. Go to step 2 on page 182.  • You can attach it to an i-mode mail message also by pressin  () while checking the stored contents of the ToDo item.
Send Ir data	See page 309.

Function menu	Operation/Explanation
Send all Ir data	See page 310.
transmission	See page 311.
All [[] transmission	See page 311.
Copy to microSD	See page 296.
Delete this	► YES
Delete select	► Put a check mark for ToDo items to be deleted  □ □ (Finish) ➤ YES
Delete completed	You can delete the "Completion" ToDo items. ▶YES
Delete all	► Enter your Terminal Security Code ➤ YES

• During standby, the alarm tone sounds at the level set for "Phone" of "Ring volume". During a call, the alarm tone sounds at the level set for "Volume" (earpiece volume).

## <Alarm Setting>

## **Setting Operating Conditions of Alarm**

You can set whether to make an alarm notification of "Alarm", "Schedule", and "ToDo", for when operating another function.

MENU Settings Clock Alarm setting Operation preferred or Alarm preferred

Operation preferred. . . . Alerts you only during the Stand-by display. Alarm preferred . . . . . . Alerts you even when you are operating the FOMA phone or during a call.

## Information

• When you could not be alerted, the "Missed alarm" icon appears on the desktop.

## <Private Menu Setting>

## **Using Your Original Menu**

You can store frequently used functions in the Private menu. You can store a total of 12 items from respective functions in Main Menu (see page 412).

## Select a Function from the Private Menu

MENU (Private)

- Private menu is displayed.
- Press (Set ) to display the Private Menu List.
- If you have not touched any keys for at least 15 seconds, the Stand-by display returns.



Private menu

## Select an icon.

The display for the selected function is displayed.

## **Display the Private Menu List**

MENU Settings Display Private menu setting





## **Function Menu of the Private Menu List**

Function menu	Operation/Explanation
Add to menu	You can store the frequently used function in the Private menu.  > Select a function to be stored.  • Press O to display the storable functions by main menu item or sub-menu item. Press to highlight the function you store.
Change BG image	➤ Select a folder ➤ Select an image.
Add desktop icon	See page 114.
Reset menu	You can reset the Private menu to the default.  >YES
Release this	▶YES
Release all	► YES

## Information

### <Add to menu>

• For "i-mode", " 🖁 oppli", and "Mail", you can store only the main menu items of the menu function. Functions in the main menu items cannot be stored.

### <Change BG image>

 The image you can set is a JPEG or GIF image whose size is Stand-by display (240 x 427) or smaller and up to 300 Kbytes. Perform "Change size" or "Trim away" for other images to set. However, when you set a GIF animation, the first frame is displayed.

## <Own Number>



# Storing Your Name, Mail Address and Other Information

In addition to the phone number (own number) you have signed up, you can store your personal information such as your name, reading of your name, phone numbers (up to three), mail addresses (up to three), a postal address, a birthday, memorandums, and a still image. If you change the mail address or register a secret code, change the mail address in this function as well.

Phonebook ➤ Own number ➤ ☑( Edit )
➤ Enter your Terminal Security Code.



Perform the operation in step 2 on page 80 to store personal information.

- You cannot change or delete own number.
- If you have already entered your Terminal Security Code by operating another function such as "Display all data", the display for entering your Terminal Security Code does not appear.



## Information

- The items other than own number are displayed even if you use another UIM, because they are stored in the FOMA phone.
- The mail address you can change using this function is limited to the mail address displayed by "Own number". You cannot change the actual mail address.

## **Function Menu of the Own Number Display**

Function Menu of the Own Number Display		
Function menu	Operation/Explanation	
Edit	Go to step 1 on page 355.	
Character size	See page 88.	
Display all data	You can display all the stored phone numbers and mail addresses.  Enter your Terminal Security Code. Use ot display each item.	
Copy name	You can copy a name.	
Copy phone number. Copy mail add./ Copy address/ Copy birthday/ Copy memorandums	You can copy each item.  ■ The items in the Function menu differ depending on the displayed item.	
Send Ir data	See page 309.  • You can send data via infrared data exchange also by pressing (	
transmission	See page 311.  • You can send data via iC transmission also by pressing  [IETrans].	
Copy to microSD	See page 296.	
Erase mail add./ Erase address/ Erase birthday/	You can delete each item.  VES  When the display for entering your Terminal Security Code appears, enter the code.  The items in the Function menu differ depending on the displayed item.	
Reset	You can reset (delete) all the stored personal data such as phone numbers or mail addresses except own number.  YES  When the display for entering your Terminal Security Code appears, enter the code.	
Auto acquire No. B	You can check if the 2in1 service is contracted. When it has been contracted, Number B is stored.	

<Voice Memo during a Call> <Voice Memo>

 
# Recording Voice during a Call or Standby as Voice Memo

Two types of Voice Memo are available; one is "Voice memo" (during a call) for recording the other party's voice during a call and the other is "Record voice memo" for recording your own voice during standby. You can record either one of "Voice memo" (during a call) or "Voice memo" for about three minutes.

• See page 72 for playing back/erasing "Voice memo" (during a call) or "Voice memo".

## **Record Other Party's Voice during a Call**

During a voice call



A beep sounds and recording starts.


- To suspend the recording midway, press (☐)( Stop ) or (CLR), or press and hold (for at least one second).
- Press To end the recording and the call.
- A beep sounds about five seconds before the recording time (for about three minutes) ends.
   The beep sounds twice when the recording ends and the "Talking" display returns.

### Information

 - If you record a voice memo when either "Voice memo" (during a call) or "Voice memo" has already been saved, the old one is overwritten regardless of whether you have played back or not.
- $\bullet$  You cannot record a voice memo while operating each item in the Function menu.

## **Record Your Voice during Standby**





A beep sounds and recording starts. Speak into the microphone.

- To suspend the recording midway, press (□)( Stop ), CLR or ≅.
- A beep sounds about five seconds before the recording time (for about three minutes) ends.

The beep sounds twice when the recording ends and the former display returns.

• The recording is suspended when a call comes in, when an alarm for "Alarm", "Schedule", or "ToDo" sounds, or when you switch the displays by Multitask.

## <Movie Memo>

## **Recording Images during a Videophone** Call as a Movie Memo

During a videophone call, you can record the receiving images along with voice.

You can record up to five items for about 20 seconds per item.

• See page 72 for playing back/erasing "Movie memo".

## During a videophone call ▶ (for at least one second)

A beep sounds and recording starts. " REC " is displayed during recording.

- A still image specified by "Movie memo" of "Select image" is shown on the other party's display.
- To suspend the recording midway, press ( ) ( Stop ) or press and hold (for at least one second).
- Press ( ) to end the recording and the call.
- A beep sounds about 5 seconds before the recording time (for about 20 seconds) ends.

The beep sounds twice when the recording ends and the "Talking" display returns.

## Information

- If you record a movie memo when five movie memos have already been recorded, the oldest movie memo is overwritten regardless of whether you have played it back or not.
- You cannot record a movie memo while operating each item in the Function menu.

### <Voice Recorder>

 
## **Using Voice Recorder**

This function is for recording voices. You can record voices in a meeting instead of taking notes.

- This function is the same as the one for when "Movie type set" is set to "Voice" in Movie Mode.
- You can play back the saved voice from " 8 motion" of "Data box".
- See page 138 for an estimate of recording time.



PRO  $\mu$  You can start the voice recorder also by pressing & &



Voice Recording display

- Start recording
- - ) to save the recorded voice and attach it to i-mode mail.
  - Press MENU ( Play ) to play back the recorded voice.



## **Function Menu of the Voice Recording display**

Function menu	Operation/Explanation
File size setting	Select an item     Mail restrict'n(S)You can record up to 500 Kbytes.     Mail restrict'n(L)You can record up to 2 Mbytes.     Long timeYou can record for a long time. The voice is saved to the microSD memory card.
Storage setting (Store in)	You can set the storage location for the recorded voice. When you set to "Phone", the voice is saved to "Voice recorder" in the " \( \frac{1}{2}\) motion" folder. When you set to "microSD", it is saved to the folder in "Other contents" which you set for "Select storage".
Storage setting (Auto save set)	You can set whether to automatically save the recorded voice after you finish recording.  > ON • OFF
Storage setting (File restriction)	See page 148.
Memory info	You can display the used memory space (estimate)/number of stored items.

## Function Menu of the Voice Saving Pre-check display

Function menu	Operation/Explanation
Play	See page 357.
Save	See page 357.
Attach to mail	See page 357.
Store in	See page 358.
File restriction	See page 148.
Cancel	You do not save the recorded voice.

## <Call Data>





## **Checking Call Duration and Cost**

You can confirm the last and accumulated call duration and cost for voice calls and videophone calls.

- Displayed call duration and cost are for reference and might differ from the actual ones. In addition, the consumption tax is not included in the call cost.
- Both the voice call duration and digital communications duration (videophone call duration + 64K data communication duration) are displayed and both incoming and outgoing calls are included in the duration.
- The call cost is for the outgoing calls only. However, "¥0" or "¥\*\*" is displayed for toll free calls such as Free Dial or for Directory Assistance Service (104), etc.
- The call cost is accumulated on the UIM. Therefore, when you replace the UIM, the charge accumulated on the UIM in use is displayed. (accumulation from December 2004)
  - \*You cannot display the accumulated cost on the UIM using the FOMA phones that were released before the 901i series. (The cost is accumulated on the UIM.)
- You can reset the displayed call duration and call cost.

# Settings Call time/cost Call data

#### Last call duration

Talk: Displays the call duration of the latest voice call.

Digital Videophone: Displays the call duration of the latest videophone call.

Non-limiting digital: Displays the call duration of the latest 64K data

communication

#### Last call cost

Talk: Displays the call cost for the latest voice call.

Digital Videophone: Displays the call cost for the latest videophone call.

Non-limiting digital: Displays the call cost for the latest 64K data communication.

#### Total calls duration

Talk: Displays the call duration of voice calls from the time Reset Total Duration was executed to the current time.

Digital: Displays the call duration of videophone calls and 64K data communication from the time Reset Total Duration was executed to the current time.

#### Total calls

Displays the call cost from the time Reset Total Cost was executed to the current call.

#### Calls reset

Displays the date and time when Reset Total Duration was executed last time. Cost reset

Displays the date and time when Reset Total Cost was executed last time.

#### Information

- When Last Call Duration exceeds "19 hours 59 minutes 59 seconds", or Total Calls Duration exceeds "199 hours 59 minutes 59 seconds", "0 s" returns to re-count the time.
- If you switch between the voice call and videophone call during a call, the call
  duration and call cost are counted respectively for the calls. You are not charged
  while "Changing" (see page 53) is displayed.
- The duration/charge for i-mode communication and packet communication are not counted. For how to check the i-mode fee, refer to "Mobile Phone User's Guide [i-mode] FOMA version" which is supplied on your i-mode contract.
- The charge for Chaku-moji is not counted.
- The international call fee for using WORLD CALL is counted. The fees for using other international call services are not counted.
- The duration for ringing and calling is not counted as call duration.
- If you turn off the power or remove the UIM, Last Call Duration is reset to "0 s"; and Last Call Cost is reset to "¥\*\*".

#### <Reset Total Cost&Duration>



# **Resetting Total Duration/Total Cost**

- Settings Call time/cost Reset total cost&dura.
- ► Enter your Terminal Security Code
  - ▶ Do the following operations.

Item	Operation/Explanation
Reset total duration	You can reset Last Call Duration and Total Calls Duration to "0 s".  YES
Reset total cost	You can reset Last Call Cost and Total Calls to "¥0".  YES Enter the PIN2 code.  • See page 121 for PIN2 code.

## <Notice Call Cost>

# **Setting Call Cost Limit**

You can set the call cost limit for Total Calls and can be notified when it is exceeded. If you set "Auto reset setting" to "ON", the call cost is reset at midnight on the 1st of the month and "\(\begin{align\*}\)" is deleted.

- Settings Call time/cost Notice call cost
  - ► Enter your Terminal Security Code
  - ➤ ON or OFF Enter a max cost.
  - You can set from ¥10 through ¥100,000 in unit of ¥10.
- Select a method to alert > ON or OFF
- Enter the PIN2 code.
  - See page 121 for PIN2 code.

#### When Total Calls has exceeded the max cost

"
 appears. When "lcon + alarm" is set as a notice method and the Stand-by display returns, the message to the effect that the call cost has exceeded the maximum cost is displayed, and a warning tone sounds from the speakers.

#### Clear Max Cost Icon

You can clear " " displayed by Notice Call Cost.

Settings Call time/cost CLR max cost icon Enter your Terminal Security Code.

#### Information

- " " is cleared also by executing Reset Total Cost, Reset Settings, or Initialize.
- To be re-notified of the set limit after the maximum cost is exceeded, reset Total Calls.

#### <Calculator>



# **Using Calculator**

You can display the calculator to make the four rules of calculation  $(+, -, \times, \div)$ . You can display up to 10 digits.

Stationery Calculator
Follow the operation below to make a calculation.

0	+	Ō	×
0	_	<u></u>	÷
•	=		Decimal point
i R	%		
CLR	C (Clear): Clear entered last.	rs the num	neral you have
	AC (All clear): 0 you entered.	Clears all t	ne calculations



#### Information

- You cannot enter a minus sign while you are performing calculation.
- When the calculated result exceeds 10 digits or invalid calculation like "divided by 0" is performed, ".E" is displayed.

#### <Text Memo>



# **Making Text Memos**

You can store up to 20 text memos.

Stationery Text memo
Select <Not recorded> Enter a text memo.

- You can enter up to 256 full-pitch/512 half-pitch characters.
- You can check the stored contents by selecting a stored text memo, and you
  can edit it by pressing ( (Edit ).

### **Function Menu of the Text Memo List**

Function menu	Operation/Explanation
Edit	Go to step 1 of "Making Text Memos" on page 360.
Compose message	P You can compose an i-mode mail message containing the contents of the text memo. Go to step 2 on page 182.  ■ You can compose it also by pressing ( ).
Edit schedule	You can create a schedule event containing the contents of the text memo.  > Schedule Go to step 1 on page 349.
Add desktop icon	See page 114.
Send Ir data	See page 309.
Send all Ir data	See page 310.
transmission	See page 311.
All transmission	See page 311.
Copy to microSD	See page 296.
Text memo info	You can display the date and time when the text memo was created, the date and time of the latest update, and the category.
Category	You can classify text memos by category.  Select a category.  If you do not set, the category is set to "None".

Function menu	Operation/Explanation
Delete this	▶ YES
Delete selected	► Put a check mark for text memos to be deleted  □ (Finish) YES
Delete all	► Enter your Terminal Security Code ➤ YES

## <UIM Operation>

# Copying/Deleting Data Items in FOMA Phone or UIM

You can exchange the Phonebook entries or SMS messages between the FOMA phone and the UIM. You can also delete the Phonebook entries or SMS messages stored in the FOMA phone or the UIM. You can save a total of 20 received and sent SMS messages to the UIM.

## Copy/Delete Data Items

Phonebook UIM operation Enter your Terminal Security Code.

When you enter your Terminal Security Code, " appears, and you cannot use phone and mail functions.

 When a call comes in just before entering your Terminal Security Code, UIM Operation ends.

# 2 Copy or Delete Select a copy end or delete source ► Phonebook or SMS

#### Phonebook

Search the Phonebook to list the entries.

#### SMS

 Inbox
 Copies or deletes the data in the Inbox.

 Outbox
 Copies or deletes the data in the Outbox.

Select a folder and show the list.

 When copying or moving data items to the UIM, the confirmation display appears telling that 2in1 management information will be deleted if 2in1 is activated.

# Put a check mark for data items to be copied or deleted ► (□)(Finish) ► YES

# Function Menu while the Phonebook List or SMS List is Displayed

Function menu	Operation/Explanation
Start copy/Start deletion	You can start copy or deletion.
Select this	You can select the data item.
Select all in tab	You can select all the Phonebook entries in the displayed tab.
Select all	You can select all data items.
Release this	You can release the selection.
Release all in tab	You can release all the selected Phonebook entries in the displayed tab.
Release all	You can release all selections.
Detail	You can display the detailed Phonebook display or the detailed SMS display.

## Copy from the Function Menu of Phonebook

Detailed Phonebook display ► (FUNC )
► Copy to UIM or Copy from UIM ► YES

## Move or Copy from the Function Menu of Mail

- Outbox List/Detailed Sent Mail display/Inbox List/
  Detailed Received Mail display ▶ ( FUNC )
  - ► Move/copy ► UIM operation
  - Select a move method or copy method ➤ YES
  - " (blue)" indicates an SMS message in the FOMA phone.
  - " indicates an SMS message on the UIM.

#### Information

- The number of phone numbers/mail addresses you can store in a single Phonebook entry differs between the FOMA phone and the UIM. Therefore, you cannot copy the second or later phone numbers/mail addresses stored in the FOMA phone to the UIM. You cannot copy the data that cannot be stored on the UIM such as a postal address, either.
- The types of character fonts you can use differ between the FOMA phone and the UIM; therefore a pictograph is converted into a space.
- When you copy Phonebook entries from the FOMA phone to the UIM, the name
  of up to 10 full-pitch/21 half-pitch characters and the reading of up to 12 half-pitch
  characters are converted to full-pitch katakana characters and copied. The rest
  characters are not copied.
- Phonebook entries stored as secret data cannot be copied to the UIM even in Secret Mode or Secret Data Only.
- If you set the same group name in the FOMA phone and the UIM, the group settings for the Phonebook are retained. If you set different group names in the FOMA phone and the UIM, the group settings are not retained.
- You can neither move nor copy SMS reports.
- You cannot protect SMS messages you have moved or copied to the UIM. If you
  copy or move protected SMS messages to the UIM, SMS messages on the UIM
  are unprotected. Also, the reply and forward icons become the read icons.
- If SMS messages are moved or copied from the FOMA phone to the UIM, you can check them in the "Inbox" or "Outbox" folder.
   While you use 2in1, all the SMS messages are saved as the ones for Number A, regardless of the current mode.
- When you move or copy SMS messages from the UIM to the FOMA phone, they
  are moved or copied to the "Inbox" or "Outbox" folder.

# Making/Receiving Calls Using Flat-plug Earphone/Microphone with Switch

The Earphone Plug Adapter for External connector terminal (sample item) is necessary to use the Flat-plug Earphone/Microphone with Switch (option). (See page 26)

### Make Calls Using Flat-plug Earphone/Microphone with Switch

Enter a phone number

bring up a Phonebook entry, redial item, dialed call record, or received call record.

- Press and hold the switch of the Flat-plug Earphone/
  Microphone with Switch for at least one second
  Start talking when the other party answers.
  - A beep sounds and you are connected.

 You cannot make a videophone call by pressing the switch of Flat-plug Earphone/Microphone with Switch.

- You can make a call also by operating the FOMA phone.
- 3 After talking, press and hold the switch of the Flat-plug Earphone/Microphone with Switch for at least one second to end the call.

A beep sounds twice and you are disconnected.

### Receive Calls Using Flat-plug Earphone/Microphone with Switch

During ringing Press the switch of the Flat-plug Earphone/Microphone with Switch.

A beep sounds and you are connected.

With a videophone call, a camera image is sent to the other party. You can switch between the camera image and the substitute image by pressing during the videophone call. (See page 74)

- You can use it also with the FOMA phone closed.
- You can answer calls also by operating the FOMA phone.
- When "Auto answer setting" is set to "ON", a call is answered automatically after the ring time elapsed.

# 2 After talking, press and hold the switch of the Flat-plug Earphone/Microphone with Switch for at least one second to end the call.

A beep sounds twice and you are disconnected.

#### Information

- Regardless of the setting for "Keypad sound", a tone for connecting and disconnecting the line sounds.
- Note that you might be connected if you try to connect the Flat-plug Earphone/ Microphone with Switch after the ring tone sounds.
- To release hold, press the switch of the Flat-plug Earphone/Microphone with Switch during answer-hold (On Hold) and while a call is on hold (Holding). (When a videophone call is put on hold, the camera image is sent and the videophone call starts.)
- Do not press or release the switch of the Flat-plug Earphone/Microphone with Switch in succession. You might be automatically connected.
- If you have signed up for Call Waiting Service and "Multi calling" is displayed during a call, you can switch two calls by pressing and holding the switch of the Flat-plug Earphone/Microphone with Switch for at least one second. However, you cannot use the switch to end the call.
- You can adjust the earpiece volume by pressing ▲ (raise) or ▼ (lower) during a call.

#### <Headset Switch to Call>

# Selecting a Call Destination when Earphone is Connected

When "Headset switch to call" is set to "Voice call" and the Stand-by display is shown, you can press the switch on the Flat-plug Earphone/ Microphone with Switch (option) to make voice calls.

- Settings ➤ Other settings ➤ Headset switch to call ➤ Voice call or OFF
  - You can check the currently set phonebook entry by pressing (☐)( Prev ).
- Search the Phonebook Select an entry.

#### Information

- When the Phonebook entry contains multiple phone numbers, the first phone number is set.
- If you delete the set Phonebook entry, the Phonebook entry stored in the memory number 999 is automatically set to Headset Switch to Call.

### < Auto Answer Setting>



# Answering a Call Automatically when Earphone is Connected

If a call comes in while the Flat-plug Earphone/Microphone with Switch (option) is connected, the FOMA phone automatically answers the call after the specified ring time elapses.

- Settings Incoming call Auto answer setting
  ON or OFF Enter a ring time (seconds).
  - Enter from "001" through "120" in three digits.
  - You cannot set the same ring time for Auto Answer Setting and Record Message Setting. Set a different time for each.

- When the FOMA phone automatically answers a videophone call, a substitute image is sent to the other party. You can switch between the substitute image and the camera image by pressing well during the videophone call. (See page 74)
- If you activate Voice Mail Service or Call Forwarding Service together with Auto Answer Setting and want to give priority to Auto Answer Setting over the service, set its ring time shorter than that for Voice Mail Service or Call Forwarding Service.
- Even if you connect the Flat-plug Earphone/Microphone with Switch while ringing, Auto Answer setting does not work. However, if you disconnect it while ringing, Auto Answer setting works.
- During 64K data communication, Auto Answer Setting does not work.

# <Reset Settings>



# **Resetting Function Settings**

You can reset the items indicated by of "Function List" to their default. (See page 412)

Settings Other settings Reset settings Enter your Terminal Security Code YES

#### Information

After you execute "Reset settings", the tickers are not displayed. Then, when the
information is automatically updated or you press to receive the latest
information, the tickers automatically flow.

#### <Initialize>

# **Deleting Stored Data All at Once**

You can delete the stored data and reset the setting contents of each function to the default.

- See "Function List" for the setting at purchase. (See page 412)
- You cannot delete the pre-installed data.
- You cannot delete the pre-installed i-oppli programs.
- You can delete the data stored in the pre-installed i-oppli programs. However, you
  cannot delete the data stored in the Osaifu-Keitai compatible i-oppli programs.
- The protected data is also deleted.

- All the stored data files are deleted regardless of the mode of 2in1.
- Even if you have deleted the pre-installed Deco-mail templates, Chara-den images, Kisekae Tool files, PDF files, or Decomail-pictographs, they are restored when you execute "Initialize". However, if you delete the pre-installed i-αppli programs. they are not restored.
- Charge the battery full before initializing the FOMA phone. When the battery level is not enough, you may not be able to initialize the FOMA phone.
- During initialization, never turn off the power of the FOMA phone.
- You cannot use other functions during initialization. Also, you cannot receive calls or mail messages.

# Settings Other settings Initialize Enter your Terminal Security Code YES YES

When initializing ends, the power automatically turns off and then turns on and the "Initial setting" display appears.

- You cannot delete the data saved to, stored in, or set for the UIM or the microSD memory card.
- You cannot delete the setting of data communication set by a personal computer.
- To restore the downloaded dictionaries and i-oppli programs, download them from the "P-SQUARE" site. For downloading, you are charged an additional communication fee.
- After you execute "Initialize", the tickers are not displayed. Then, when the
  information is automatically updated or you press to receive the latest
  information, the tickers automatically flow.
- After you initialize the FOMA phone, you cannot automatically obtain Music&Video Channel programs. Access the Setting Confirmation display from the Music&Video Channel menu to reflect the program setting.
- Initialization may take a while if the data to be deleted is bulky.

# **Character Entry**

Entering Characters (Character Entry)	366
Entering Characters in Mode 1 (5-touch)	
	366
Using Common Phrases Common Phrases	371
Cutting/Copying/Pasting Characters	372
Storing Words in Own DictionaryOwn Dictionary	372
Checking Learned Words	373
Using Downloaded Dictionary Download Dictionary	373
Entering Characters in Mode 2 (2-touch)	
	374
Entering Characters in Mode 3 (NIKO-touch)	
	374

For details on "Kuten Code List", refer to the PDF version of "Kuten Code List" on the provided CD-ROM or DoCoMo web page.

To see the PDF version of "Kuten Code List", you need to have Adobe® Reader®.

If it is not installed in your passage computer install Adobe® Pender® from the provided CD-ROM to see it.

If it is not installed in your personal computer, install Adobe<sup>®</sup> Reader<sup>®</sup> from the provided CD-ROM to see it. For details such as how to use it, refer to "Adobe Reader Help".

#### <Character Entry>

# **Entering Characters**

The FOMA phone is provided with many functions that require to enter characters such as when creating the Phonebook or composing mail messages.

## **Character Entry Display**

On the Character Entry (Edit) display, the information of character input method, input mode, and the remaining number of characters and others are displayed.

#### Character input method

2 : Mode 2 (2-touch)

(NIKO-touch)

Not displayed in Mode 1 (5-touch).

#### Alnout mode

abc: Alphabet input mode

123 : Numeral input mode

漢: Kanji/Hiragana input mode

#### @Full/Half-pitch

1/1: Full-pitch input mode

1/2: Half-pitch input mode

#### 4 Remaining/Maximum bytes that can be entered

• "Number of entered characters" might be displayed depending on the function.

## **Select Character Input Method**



Three types of character input methods are available as shown below: Mode 1 (5-touch) . . . . . . . See page 366

Multiple characters are assigned to a single key. Each time you press the key, characters switch.

Mode 2 (2-touch) . . . . . . . See page 374

Enter characters by pairs of numerals.

Mode 3 (NIKO-touch) . . . . See page 374 Enter characters by pairs of numerals.



Edit text memo

4

IRI512/512km

0 စ

MENU Settings Other settings

- Character input method Input mode
- ▶ Put a check mark for modes to be used ► [\simeq] (Finish
- Select at least two modes

# Select a priority mode.

• Select a mode you use preferentially from modes selected in step 1.

## Switching modes on the Character Entry (Edit) display

Press and hold (Mode) for at least one second, or select "Char, input/dict," and then select "Change input mode" from the Function menu.

### <Mode 1 (5-touch)>

# **Entering Characters in Mode 1 (5-touch)**

In the step for entering characters, press (Mode) to switch input modes. You might not be able to switch to some modes depending on the function you enter.

### **Enter Characters**

You can enter characters by using Prediction Conversion which converts the entered few words into the predicted ones and Context Forecast which displays the next conversion candidates inferred from the relation between words.

 The FOMA phone increases prediction conversion candidates and context forecast candidates by learning characters.

# <Example> Enter "タダの菓子" into a text memo. d MENU ► Stationery ► Text memo ► Select <Not recorded>.

The Character Entry (Edit) display appears in prediction conversion mode when "Predict" is set to "ON", and appears in ordinary conversion mode when set to "OFF".

Enter hiragana characters in Kanji/Hiragana input mode.

 $\uparrow z \rightarrow \text{Press} \ \underline{4} \ \text{once and} \ \underline{0} \ \text{once}.$ 

 $\uparrow \stackrel{\sim}{\sim}$  Press  $\bigcirc 4$  once and  $\bigcirc +$  once.  $\bigcirc \rightarrow$  Press  $\bigcirc 5$  five times.

b→ Press 2 once.

U→ Press 3 twice.

 You can enter up to 24 characters at a time. However, when "Predict" is set to "ON", if you enter 6 or more characters, the conversion mode is automatically switched to the ordinary conversion mode.

When a character on the same key comes after a character, press to move the cursor, and enter the next character.

If you set "Character set time", you can omit the operation to move the cursor.

- To switch between uppercase and lowercase, press after you have entered characters.
- Each time you press ( ), characters are displayed in reverse order.
- If you set "Predict" to "ON", each time you press (), ordinary conversion mode and prediction conversion mode switch.
- You can press (a)(a)(a)(a) to display the candidate list of alphanumeric or katakana characters. Depending on the entered character, the conversion candidates for date/time are displayed.
- To fix a character as it is without conversion, press (□) ( Set □)

# Q Use □ to move the cursor onto "O".

- The conversion mode is automatically switched to the ordinary conversion mode.
- Use to move the cursor onto the candidate list ►Use to highlight "タダの" and press ([Select]).
  - By pressing (Prev. )/( Next ), you can scroll the candidate list page by page.
  - When you press CLR while you are selecting a conversion candidate, the Character Entry (Edit) display returns.
  - Press (Set all) to fix the whole paragraph.

# Use to move the cursor onto the candidate list Use to highlight "菓子" and press ()(Select).

The selected characters are fixed.

- When the character strings that are assumed to be the context forecast candidates are found after fixing the characters, that context forecast candidates are displayed. Press to move the cursor onto the candidate list to enter the context forecast candidates.
- When you press CLR while you are selecting the context forecast candidates, the Character Entry (Edit) display returns.

#### Information

- The learning function stores up to 1,000 words, and the character of a high conversion rate goes up in the character order list.
- The candidate character strings are displayed from characters converted as usual and from a dictionary downloaded from sites.
  - Only a small number of character strings are registered by default so candidate characters might not be displayed in some cases. By doing the character conversion as usual, the converted characters are added to the candidate characters.
- You can download a dictionary from sites and add candidate characters from the dictionary. However, when you delete the downloaded dictionary, the added candidate characters are also deleted from the existing candidate characters. (See page 169 and page 373)
- You can use Prediction Conversion and Context Forecast with 2-touch and NIKO-touch in Kanji/Hiragana input mode.
- The number of kanji characters that you can convert to is limited so you might not be able to convert to some kanji characters. You can use Kuten Code to enter kanji characters that you cannot convert to. The number of characters you can enter is 6355 in the JIS level-1 and level-2 kanji sets.
- Part of a complicated kanji character is deformed or left out.

#### Numbers of remaining characters and entered characters

On the Character Entry display, the number of remaining characters and the maximum number of characters you can enter are displayed in bytes. (The number of entered characters is displayed by unit of characters, depending on the function such as entering SMS text.)

The number of characters in the Character Entry (Edit) display is counted according to the following rules:

- One half-pitch character is counted as one byte and one full-pitch character as two bytes.
- Full pitch: あいうえお 5 characters (counted as 10 bytes) Half pitch: アイウエオカキケコ 10 characters (counted as 10 bytes)



Edit text memo

あいうえおかきくけこさし

アイウエオカキクケンサラト

#### **Combination of characters**

When entering characters, pay attention to the combination of characters.

<Example> When you are entering "\" 元" in half-pitch Katakana input mode and "①携带電話" in Kanji/Hiragana input mode

- The number of characters that appears on the display is 9 and counted as 14 bytes that equal 14 half-pitch characters.
- Half-pitch character "" and "" are counted as one character.

## Other Entry Functions

Item	Operation/Explanation
Katakana input	Press ☑ ( Mode ) a few times to switch to Katakana input mode ➤ Press keys to enter characters.
Alphanumeric input	Press ☑ ( Mode ) a few times to switch to Alphabet input mode ➤ Press keys to enter characters.
Numeral input	Press ☑( Mode ) a few times to switch to Numeral input mode ▶ Press keys to enter numerals.
Line feed	Press (a) (Line Ft).  ■ When the cursor is at the end of text and characters are fixed, you can press (a) to break a line.
Smiley input	Enter "かお"▶Use ② to move the cursor onto the candidate list▶Use ② to select a smiley.  • Smileys are stored in the pre-installed common phrases.

#### Information

<Line feed>

• A line feed is counted as one full-pitch character.

 You cannot break a line depending on the function such as editing in the text box for i-mode.

#### **Correct Characters**

Move the cursor to the left of the character you want to correct ▶ (CLR)

The character at the right of the cursor is deleted. Press and hold CLR for at least one second to delete all characters on and after the cursor.

 When no character is found to the right side of the <u>cursor</u>, the character to the left side of the cursor is deleted. Press and hold <u>CLR</u> for at least one second to delete all characters.

## Enter a correct character.

The character is entered in the position of the cursor.

#### Data you are editing

When the battery alarm sounds

The data you have been editing is automatically fixed and saved. Charge the battery or replace it with a new charged battery to resume editing. However, you cannot save the unfixed data being converted.

## When you press 🖀

The confirmation display appears asking whether to discard the data you are editing. When a call or mail comes in

The Multitask function works, so the data you are editing is retained, and you can answer the call or receive the mail.

You can return to the edit display by switching menu, by pressing and holding (MULT) for at least one second. You can return to the edit display also by ending the call or mail function.

#### Predict



You can set whether to display the prediction conversion/context forecast candidates in the candidate list.

Settings Other settings

Character input method Predict ON or OFF

## Intelligent with Secret



You can set whether to store the characters converted in Secret Mode or Secret Data Only as learned words.

MENU ► Settings ► Other settings

► Character input method Int.with secret

► Enter your Terminal Security Code ON or OFF

# **Function Menu while Entering (Editing) Characters**

• See page 185 for the Function menu of the Message Entry display.

Function menu	Operation/Explanation
Full pitch/Half pitch	You can switch between full pitch and half pitch.
Сору	See page 372.
Cut	See page 372.
Paste	See page 372.
Undo	You can undo the fixed, deleted, cut, or pasted text. You can undo the operation up to 10 times. However, you can undo the fixing of characters only once.  • You can undo the operation also by pressing [west] ( Undo ).
Pictograph/ symbols (Pictograph)	You can enter pictographs while seeing them on the display.  Pictograph Highlight a pictograph and press  (cont.).  Repeat the above step and enter other pictographs consecutively.  You can display the Pictograph List also by pressing 法 in Kanji/Hiragana input mode.  Press 包 to switch the pictograph lists in order of "Pictograph 1" → "Pictograph 2" → "Decomail-pictograph" [お気に入り (Favorite) through 文字 (Characters)]. However, you can enter "Decomail-pictograph" [お気に入り (Favorite) through 文字 (Characters)] only while editing the i-mode mail text. Press low to switch them in the reverse order.  You can select a pictograph also by pressing a column number (number to the left) and then a row number (number at the top).  Press (いっぱい (Symbol)) to display the Symbol List.  Press (いっぱい (Select))  The selected pictograph is entered and the Character Entry (Edit) display returns.

Pictograph/	You can enter symbols while seeing them on the display.
	· · · · · · · · · · · · · · · · · · ·
symbols (Symbols)	➤ Symbols ➤ Highlight a symbol and press (☐).  Repeat the above step and enter other symbols consecutively.
	<ul> <li>You can display the Symbol List also by pressing and holding # for at least one second.</li> </ul>
	Press to switch the symbol lists in order of Half-pitch
	symbols → Full-pitch symbols.
	Press (MENU) to switch them in the reverse order.
	You can select a symbol also by pressing a column number (number to the left) and then a row number (number at the top).  Press (R)(Pic) to display the Pictograph List.  Press (L) to switch between the Symbol List Full display
	and ordinary input display.
	The selected symbol is entered and the Character Entry (Edit) display returns.
Pictograph/	You can enter a full-pitch space in full-pitch input mode, and a
symbols	half-pitch space in half-pitch input mode.
(Space)	Space
	When the cursor is at the end of text, you can enter a space
	also by pressing O.
	Common phrases Select a folder
(Common phrases)	Select a common phrase.
	In the mode other than numeral input mode, you can bring     the folder list for account of the folder list for account
	up the folder list for common phrases also by pressing and holding (*\frac{*}{}) for at least one second.
Dhwasa/aada/awata	You can enter characters, numerals, and symbols on the
(Kuten code)	Kuten Code List (see the PDF version of "Kuten Code List" on
()	the provided CD-ROM)
	You can operate in Kanji/Hiragana input mode.
	► Kuten code ► Enter a four-digit Kuten code.
	A character that matches the entered Kuten code is displayed,
	and the former input mode returns.  • When a character that matches the entered Kuten code is
	You can operate in Kanji/Hiragana input mode.  • Kuten code • Enter a four-digit Kuten code.  A character that matches the entered Kuten code is displayed, and the former input mode returns.  • When a character that matches the entered Kuten code is not found, a space is inserted.  • Input time • Select a format for entering the date/time • Enter the date/time.
Phrasoloodole::ata	▶Input time▶ Select a format for entering the date/time
(Input time)	Enter the date/time.
(p)	You can enter the date/time using the numeric keys.
	You can enter the date/time using the numeric keys.     You can enter years 1800 through 2099.  369
	369
	309 -

Operation/Explanation

Function menu

Function menu	Operation/Explanation
	You can access and quote Phonebook entries. The following are the items you can quote: <inside foma="" phone=""> Name, reading, phone number, mail address, postal address, birthday, memorandums <inside uim=""> Name, reading, phone number, mail address  ►Quote phonebook ► Search the Phonebook  ► Select a Phonebook entry  ► Put a check mark for items to be quoted ► (Finish)</inside></inside>
Phrase/code/quote (Quote own data)	You can access and quote your personal information. The following are the items you can quote:  Name, reading, phone number, mail address, postal address, birthday, memorandums  Quote own data Enter your Terminal Security Code  Put a check mark for items to be quoted
Phrase/code/quote (Bar code reader)	You can start Bar Code Reader. (See page 149)  PRO   Not available  Bar code reader
Char. input/dict. (Own dictionary)	You can store the words in own dictionary. (See page 372)  Own dictionary
Char. input/dict. (Learned words)	See page 373.
Char. input/dict. (Change input mode)	You can switch the character input methods.  Change input mode Select an input mode.  You cannot select the input mode that is not selected in "Input mode" of "Character input method" (see page 366).
Char. input/dict. (Candid. disp. size)	You can set the character size of conversion candidates.  ▶ Candid. disp. size  ▶ Extra large, Large, Standard, or Small  • The settings here applies to "Character size" → "Character input" → "Candid. disp. size".
Char. input/dict. (Predict)	See page 368.
Char. input/dict. (Candidate display)	You can select whether to use context forecast candidates.  ▶ Candidate display ▶ ON or OFF

Function menu	Operation/Explanation
Char. input/dict. (Character set	You can select whether to automatically fix the entered characters while you are entering characters in Mode 1
time)	(5-touch). In addition, you can specify the time until characters are fixed.
	You can omit the operation of pressing on to move the cursor for the entry of characters on the same key.
	► Character set time ► Fast, Normal, Slow, or OFF
Char. input/dict. (2/NIKO-touch guide)	You can select whether to list character conversion candidates at the lower part of the display when you press the first-digit key while you are entering characters in Mode 2 (2-touch) or Mode 3 (NIKO-touch).  2/NIKO-touch guide ON or OFF
Help	You can check the operating procedures for entering characters.  Select an item.
JUMP	You can move the cursor to the top or end of text.  To beginning or To end  When the Character Entry (Edit) display ranges over multiple pages, the cursor moves to the beginning or end of the page.

#### Information

#### <Full pitch/Half pitch>

- When you switch to half-pitch mode in Kanji/Hiragana input mode of NIKO-touch, the input mode switches to half-pitch Katakana input mode.
- <Pictograph/symbols (Pictograph)>
- You might not be able to enter pictographs depending on the Character Entry (Edit) display.
- Once you have entered pictographs, "History" appears first.
- Up to 27 records of the pictographs entered in Pictograph 1 and Pictograph 2 and up to 36 records of Decomail-pictograph are displayed on "History".
- You can enter up to 20 Decomail-pictographs. When you insert other images, however, the number of Decomail-pictographs that can be entered is reduced by the number of inserted images.

#### Information

#### <Pictograph/symbols (Symbols)>

- You can enter "+" by pressing and holding O for at least one second in Numeral input mode.
- You might not be able to enter some symbols depending on the Character Entry (Edit) display.
- Once you have entered symbols, "History" appears first.
- Up to 27 records of the symbols entered in half-pitch and up to 36 records in full-pitch are displayed on "History".

#### <Phrase/code/quote (Common phrases)>

- You might not be able to enter common phrases depending on the Character Entry (Edit) display.
- In Japanese Mode, the called-up contents of common phrases pre-installed in the FOMA phone differ depending on the input mode.

#### <Phrase/code/quote (Quote phonebook)>

When you guote a postal address, you cannot guote "

¬" of the postal code.

#### <Phrase/code/quote (Quote own data)>

- When you quote a postal address, you cannot quote "

  ¬" or "-" of the postal code.
- The personal data of Number A is quoted in A Mode of 2in1, the personal data of Number B is quoted in B Mode, and the personal data of both Number A and Number B is quoted in Dual Mode.

#### <Char. input/dict. (Character set time)>

• You might not be able to enter characters as you like depending on this setting and your speed of operating keys.

#### <Common Phrases>



# **Using Common Phrases**

You can call up and enter, on the Character Entry (Edit) display, the common phrases pre-installed in the FOMA phone, or your own created common phrases.

The common phrases are sorted into five folders and each folder contains 10 of them. You can edit the pre-installed common phrases to save as your own common phrases.

## **Display Common Phrases**

Stationery Common phrase/dic. Common phrases Select a folder.



Common Phrase Folder List

Select a common phrase.



- Do not use half-pitch katakana characters and pictographs for your own common phrases used for composing mail. They might not be correctly displayed. (Pictographs can be used between i-mode mail messages.)
- In Japanese Mode, the common phrases pre-installed in the "あいさつ (Greeting)" and "ビジネス (Business)" folders are called up as kanji/hiragana common phrases in Kanji/Hiragana input mode and called up as half-pitch katakana common phrases in other input mode.

### **Function Menu of the Common Phrase Folder List**

Function menu	Operation/Explanation
Edit folder name	Enter a folder name.     You can enter up to 10 full-pitch/20 half-pitch characters.     When you delete all the characters entered as a folder name, the folder name is reset to the default.
Reset name	You can reset the folder name to the default.  > YES

# Function Menu of the Common Phrase List/Common Phrase Display

Function menu	Operation/Explanation
Edit	► Enter a common phrase.  • You can enter up to 64 full-pitch/128 half-pitch characters.  • When you delete all the characters in a common phrase, the common phrase is reset to the default.  • You can edit a common phrase by pressing ( Edit ).
Reset this	You can reset the common phrase to the default. ▶YES
Reset all	You can reset all the common phrases in the folder to the default.  ►Enter your Terminal Security Code YES

# **Cutting/Copying/Pasting Characters**

## Cut/Copy

You can cut or copy up to 5,000 full-pitch/10,000 half-pitch characters.

Character Entry (Edit) display

• You can press ( AII ) to select all characters.

# Select an end point.

#### Information

- If you copy/cut the Deco-mail text during composing and paste it, the information about the decoration is pasted as well.
- You might not be able to cut or copy data such as Deco-mail text because the memory space runs short.

#### **Paste**

You can paste cut or copied characters.

- Character Entry (Edit) display
  - ► Move the cursor to a start position for pasting
  - ► FUNC ) Paste

### <Own Dictionary>



# **Storing Words in Own Dictionary**

In Own Dictionary, you can store up to 100 frequently used words with your favorite reading.

- Stationery Common phrase/dic.
  - Own dictionary ➤ <New> ➤ Enter a word.
  - Select a stored Own dictionary to check the stored contents.
  - You can enter up to 10 full-pitch/20 half-pitch characters. However, you cannot enter line feeds.

# Enter a reading.

- You can enter up to 10 hiragana characters. Also, you cannot store symbols
  other than "Long vowel (—)". However, you can store "" or "" for the
  words to which "" or "" can be attached.
- Even if you enter a space, the word is stored with the space automatically deleted.

### **Function Menu while Own Dictionary is Displayed**

Function menu	Operation/Explanation
New	Go to step 1 of "Storing Words in Own Dictionary" on page 372.
Edit	Go to step 1 of "Storing Words in Own Dictionary" on page 372.  ◆ You can edit also by pressing (☐)( Edit ).
Delete this	▶YES
Delete selected	► Put a check mark for own dictionaries to be deleted ► ☑(Finish) ➤ YES
Delete all	► Enter your Terminal Security Code ➤ YES

#### Information

#### <Delete this> <Delete all>

 When you display Own Dictionary from the Function menu of the Character Entry (Edit) display, select "Delete" from the Function menu, then select "Delete this" or "Delete all".

#### <Delete selected>

 "Delete selected" does not appear when you display Own Dictionary from the Function menu of the Character Entry (Edit) display.

## **Checking Learned Words**

The character strings once you entered are automatically stored and displayed as the conversion candidates of learned words.

- Function menu while entering (editing) characters
  - Char. input/dict. ► Learned words ► Select a column ► Select a record
  - To delete learned words, press ( FUNC ) and select "Delete this" or "Delete all", then select "YES". If you select "Delete all", you need to enter your Terminal Security Code.

#### **Reset Learned Words**



You can reset the learned words.

- Settings Other settings
  - Character input method Reset learned words
  - ► Enter your Terminal Security Code ➤ YES

<Download Dictionary>



# **Using Downloaded Dictionary**

You can make dictionaries downloaded (see page 169) from sites valid.

- Stationery Common phrase/dic.
  - Download dictionary
  - Select a downloaded dictionary.

The downloaded dictionary you have selected is validated and indicated by "★".

To invalidate a downloaded dictionary, perform the same operation.

 You can delete the pre-installed dictionaries. You can re-download them from the "P-SQUARE" site (see page 170). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 38) are set to them.

# Function Menu while Downloaded Dictionary is Displayed

Function menu	Operation/Explanation	
Edit title	► Edit the title.  • You can enter up to 10 full-pitch/20 half-pitch characters.	
Set dictionary	You can set the dictionary valid/invalid. Each time you operate, valid and invalid switch. $ \\$	
Dictionary info	You can display the dictionary title and version.	
Delete this	▶YES	
Delete all	► Enter your Terminal Security Code ► YES	

#### Information

#### <Edit title>

• If you delete all the characters entered as a title, the title is reset to the default.

### <Mode 2 (2-touch)>

# **Entering Characters in Mode 2 (2-touch)**

When you press two numeric keys to enter two-digit numerals, a character (symbol) that corresponds to the numerals is entered. Press the first key to list candidate characters (symbols) at the lower part of the display. To list candidate characters, you need to set "2/NIKO-touch quide" to "ON" in advance.

- See page 429 for how characters are assigned to the numeric keys (2-touch).
- See page 366 for switching to "2-touch".

## **Switch Input Modes (2-touch)**

Press (C) (Node) from the Character Entry (Edit) display to switch input modes. You might not be able to switch to some modes depending on the function you enter.

#### **Enter Characters**

- <Example> Enter "タダの菓子" into a text memo.
- Stationery Text memo Select <Not recorded>.
  The Character Entry (Edit) display appears.
- 2 Enter hiragana characters in Kanji/Hiragana input mode.

 $\begin{array}{cccc}
tc \rightarrow 4 & 1 \\
tc \rightarrow 4 & 1 \\
tc \rightarrow 5 & 5 \\
tc \rightarrow 2 & 1
\end{array}$ 

- To enter "" or "° ", enter the character and then press 🛨
- Press (8) (O) to switch between uppercase and lowercase. You can switch uppercase and lowercase also by entering the character that can be switched between uppercase and lowercase and pressing (2).

After entering hiragana characters, go to step 3 on page 367.

#### <Mode 3 (NIKO-touch)>

# **Entering Characters in Mode 3 (NIKO-touch)**

When you press two numeric keys to enter two-digit numerals, a character (symbol) that corresponds to the numerals is entered. Press the first key to list candidate characters (symbols) at the lower part of the display. To list candidate characters, you need to set "2/NIKO-touch quide" to "ON" in advance.

- See page 430 for how characters are assigned to the numeric keys (NIKO-touch).
- See page 366 for switching to "NIKO-touch".

### **Switch Input Modes (NIKO-touch)**

Press (Mode) from the Character Entry (Edit) display to switch input modes. You might not be able to switch to some modes depending on the function you enter.

### **Enter Characters**

<Example> Enter "タダの菓子" into a text memo.

- **Stationery** ► Text memo ► Select <Not recorded>.
- The Character Entry (Edit) display appears.
- 2 Enter hiragana characters in Kanji/Hiragana input mode.

tc→(4)(1), (★)
tc→(4)(1), (★)
tc→(5)(5)
tr→(2)(1)
tr→(3)(2)

- To enter "" or "", enter the character and then press ★.
- Enter the character that can be switched between uppercase and lowercase and press 😰; then you can switch.

After entering hiragana characters, go to step 3 on page 367.

# **Network Services**

Checking New Voice Mail Messages Check New Messages	376
Using Voice Mail Service	376
Using Call Waiting Service (Call Waiting)	378
Using Call Forwarding Service Call Forwarding	380
Using Nuisance Call Blocking Service	
Nuisance Call Blocking>	381
Using Caller ID Display Request Service	
	382
Using Dual Network ServiceDual Network	383

Switching Guidance Language between Japanese and English	i
English Guidance	383
Using Service NumbersService Numbers	384
Selecting Response to Incoming Calls during a Call	
Arrival Call Act	384
Setting Remote Control	385
Setting Additional Number	385
Using 2in1	387
Using OFFICEEDOFFICEED>	393
Heing Additional Services (Additional Service)	303

#### Available Network Services

The following are the DoCoMo network services available from the FOMA phone.

For the outline and usage method of each service, see the reference page in the table below.

- The network services are not available when you are out of the service area or out of reach of radio waves.
- For details, refer to "Mobile Phone User's Guide [Network Services]".
- For subscriptions and inquiries, contact "DoCoMo Information Center" on the back page of this manual.

Service	Application	Monthly fee	Reference
Voice Mail Service	Required	Charged	376
Call Waiting Service	Required	Charged	378
Call Forwarding Service	Required	Free	380
Nuisance Call Blocking Service	Not required	Free	381
Caller ID Notification Service	Not required	Free	47
Caller ID Display Request Service	Not required	Free	382
Dual Network Service	Required	Charged	383

Service	Application	Monthly fee	Reference
English Guidance	Not required	Free	383
Multi Number	Required	Charged	385
2in1	Required	Charged	387
Public Mode (Drive Mode)	Not required	Free	68
Public Mode (Power Off)	Not required	Free	69
OFFICEED	Required	Charged	393
Melody Call	Required	Charged	96

- "OFFICEED" is a pay service which is available on a subscription basis. For details, visit the DoCoMo-enterprise-oriented web site (http://www.docomo.biz/d/212/). (Japanese only)
- "Deactivate" does not mean that the contract for Voice Mail Service, Call Forwarding Service or other services is canceled.
- You can store new network services in the menu when they are provided by DoCoMo. (See page 393)
- In this manual, a brief outline for each network service is described following the procedure using the menus of the FOMA phone.

<Check New Messages>

# **Checking New Voice Mail Messages**

You can check whether any message is held at the Voice Mail Service Center.

Service Voice mail Check new messages OK

#### About checked results

- If any voice mail message is held, the "Voice mail" icon ( ) and another Voice Mail icon such as " () appear to inform you of the held message.
- To erase the Voice Mail icon such as " | ", dial at the Voice Mail Service Center for saving or erasing the voice mail message or follow the operations of "Erase icon".
- The Voice Mail icons switch among [1], [2], [2], etc., and [3] (6 or more messages) according to the number of the messages held at the Voice Mail Service Center. The displayed number is the number of messages informed by the guidance when you play back new messages. Saved messages are not included.
- If you set "Message notification", the ring tone sounds each time a message is added.
- See page 377 for how to play back voice mail messages.

When " appears

You cannot check voice mail messages. Move to a place where " " is cleared.

#### <Voice Mail>

# **Using Voice Mail Service**

This service provides an answer message for incoming voice calls/ videophone calls and then holds voice mail messages on behalf of you when you are in a place where radio waves do not reach, the power is turned off, or you cannot answer calls.

- When Record Message (see page 70) is simultaneously activated and you want to give priority to Voice Mail Service, set its ring time shorter than that for Record Message.
- When you do not answer an incoming voice call or videophone call while Voice
  Mail Service is set to "Activate", the call is recorded as a missed call in "Received
  calls", and the "Missed call" desktop icon appears on the Stand-by display.
- Voice Mail Service is valid for voice calls and videophone calls.
- A voice mail message can be recorded for up to three minutes. Twenty messages can be recorded respectively for voice calls and videophone calls and held at the Center for up to 72 hours.
- When a voice mail message of a videophone call is retained at the Voice Mail Service Center, you are notified by an SMS message.
- Make a voice call at "1412" to change the Voice Mail setting for videophone calls.
- When a Chara-den call is connected to the Voice Mail Service Center, DTMF operation is not available. Switch to "Send DTMF tone" on the Function menu. (See page 75)
- When a call comes in while Voice Mail Service is set to "Activate", the ring tone (specified by "Select ring tone") will sound. (You can change the ring time for incoming calls. See page 377.) If you answer the call within the specified time, you can start talking. If you do not answer, the call is connected to the Voice Mail Service Center.
- You can just press keys to connect an incoming call to the Voice Mail Service Center, Also, you can connect the call that comes in during a call to the Center.

### **Basic Flow of Voice Mail Service**

Step 1: Set the service to "Activate".

Step 2: The caller records a voice/video message.\*

Step 3: Play back the message.

If the caller wants to skip playback of the answer message and record a message
 such as when in a hurry, he/she can immediately switch to the recording mode by
 pressing "#" while the answer message is played back.

#### **Use Voice Mail Service**

MENU Service Voice mail Do the following operations.

Item	Operation/Explanation
Play messages	You can play back messages recorded as the Voice Mail.  YES Operate following the voice guidance.
Activate	➤ YES➤ YES➤ Enter a ring time (seconds).  • Enter from "000" through "120" in three digits.
Deactivate	YES
Set ring time	You can set the ring time until the call is connected to the Voice Mail Service Center.  Enter a ring time (seconds).  Enter from "000" through "120" in three digits.
Check setting	You can check the setting contents of Voice Mail Service.
Setting	You can switch the setting contents of Voice Mail Service.  YES Operate following the voice guidance.
Check new messages	See page 376.
Message notification	You can set the ring tone to sound when a new message is recorded. The ring tone set for "Mail" of "Select ring tone" sounds for about five seconds.  > YES or NO
Erase icon	You can erase the Voice Mail icons (such as ﷺ) from the Stand-by display. ▶ YES

Item	Operation/Explanation
Activate notice call	When a call comes in while you are out of reach of radio waves or the power is turned off, you are informed of the received call record by an SMS message.  Select an item.  All calls
Deactivate notice call	▶YES
Notice call status	You can check the setting contents of notice call.
Information <play messages=""> &lt;</play>	Setting>

- You cannot operate during a call.
- If you press (O) through (9), (X), or (#) following the voice guidance, you may not be able to end the call by pressing (2). In this case, press (2) again. <Set ring time>
- If "Set ring time" is set to 0 seconds, the calls are not recorded in Received Calls. <Frase icon>
- Even if you erase the Voice Mail icons, the messages held at the Voice Mail Service Center are not erased.
- <Activate notice call>
- Even when you set to reject all SMS messages, you are informed by SMS message of the received call records.

## Forward an Incoming Call to Voice Mail Service Center during Ringing

You can connect an incoming call to the Voice Mail Service Center just by a simple key operation. Even if you do not set Voice Mail Service to "Activate", the service will be available using this function.

# During ringing ► (\$\overline{\pi}\arpi) (\overline{\pi}\text{FUNC}) > Voice mail

• You can connect the incoming call to the Voice Mail Service Center also by pressing (FUNC ), and pressing (#).

## **Forward Specified Calls to Voice Mail Center**

You can automatically connect the calls coming from the phone numbers stored in the Phonebook to the Voice Mail Service Center regardless of the Activate/Deactivate setting for the Service.

You can specify up to 20 phone numbers.

This setting is valid only when the caller notifies his/her phone number.

It is advisable to activate "Caller ID request" at the same time.

- ▶ Restrictions ► Enter your Terminal Security Code
- Voice mail

"Voice mail" is indicated by "★".

• To release "Voice mail", perform the same operation.

#### Information

- When a call comes in from the phone number set with this function, the ring tone sounds for about one second and then the call is connected to the Voice Mail Service Center. You will be notified of the call by the icons on the desktop (see page 70 and page 112) and "Received calls".
- Even if you set this function, all incoming calls are not connected to the Voice Mail Service Center when you set "Personal data lock" while Voice Mail Service is deactivated.

#### <Call Waiting>

# **Using Call Waiting Service**

When a call comes in during a call, this service notifies you of it by the ring tone in call, and enables you to place the current call on hold to answer the new call.

Further, you can make a call to another person putting the current call on hold.

 To use Call Waiting Service, set "Arrival call act" (see page 384) to "Answer" in advance. When another option is set, you cannot answer a voice call during a voice call even if you set "Call waiting" to "Activate".

## **Use Call Waiting Service**

Service Call waiting
Do the following operations.

Item	Operation/Explanation
Activate	▶YES
Deactivate	►YES
Check setting	You can check the setting contents of Call Waiting Service.

## Answer an Incoming Call during a Call

You can answer another call putting the current call on hold.

# Another call comes in during a call



The current call is automatically put on hold so that you can receive another call.

- "Multi calling" is displayed when there is the party on hold.
- Each time you press , you can switch the parties you can talk with.



- For an incoming call or communication that is not supported by Call Waiting, press from the Call Receiving display to show the confirmation display telling that you can answer a new call if you end the current call. Press to end the current call, and then the Call Receiving display appears. When you select "OK", the Call Receiving display during a call returns.
- If a call comes in during a videophone call, the FOMA phone operates as follows:
   The moving image, i-motion movie or Flash movie set as the image for incoming calls is not displayed.
- $\cdot$  A "Pre-installed" substitute image is sent to the other party of the current call.
- · The vibrator does not work.
- When a voice call comes in while dialing 117, you hear an in-call ring tone but cannot answer that call. The call is recorded as a missed call in Received Calls.

#### **End a Call to Answer Another Call**

You can answer another call after finishing the current call.

Another call comes in during a call

The ring tone sounds. You can answer the new call.

### Continue the Current Call

Another call comes in during a call
▶(≣ফ)(| FUNC |) ➤ Do the following operations.

Function menu	Operation/Explanation	
Call rejection	You can reject a new incoming call and resume the current call.	
Call forwarding	You can forward a new incoming call to the forwarding destination and resume the current call.	
Voice mail	You can connect a new incoming call to the Voice Mail Center and resume the current call.	

#### Information

• Incoming calls are rejected during a videophone call, answer-hold (On Hold), or while Record Message is working. The "Missed call" icon appears when the current call ends, and the call is recorded in Received Calls. (The "Missed call" icon might not appear and the received call record might not be recorded depending on the contracts and setting for Voice Mail, Call Waiting, and Call Forwarding Services.)

### Hold a Call to Make a New Call

You can make a call to another party putting the current call on hold.

Enter another party's phone number during a call

You can talk with the party you have dialed.

The call with the first party is automatically put on hold.

- "Multi calling" is displayed when there is the party on hold.
- Each time you press 

  , you can switch the parties you can talk with.

Multi calling

# End a Call to Answer the Held Call

You can answer the held call after finishing the current call.

During Multi calling ► The ring tone sounds.

Press ar or (Answer).

• When the other party you have been talking with ends the call, press ( to talk with the party on hold.

#### **End a Held Call**

Turing Multi calling ►( FUNC ) ► End held call

- When another call comes in while the current call is put on hold, the held call is released.
- When another call comes in during Multi-calling, the Call Receiving display
  appears. Press (FUNC) and select "End held call" to end the held call. If you
  select "End talk", you can end the current call.

#### <Call Forwarding>

# **Using Call Forwarding Service**

This service forwards incoming voice calls/videophone calls when you are in a place where radio waves do not reach, the power is turned off, or you do not answer calls within a specified ring time.

- When Record Message (see page 70) is simultaneously activated and you want to give priority to Call Forwarding Service, set its ring time shorter than that for "Record message setting".
- When you do not answer an incoming voice call or videophone call while Call Forwarding Service is set to "Activate", the call is stored as a missed call in "Received calls", and the "Missed call" desktop icon appears on the Stand-by display.
- When a call comes in while Call Forwarding Service is set to "Activate", the ring tone (specified by "Select ring tone") will sound. (You can change the ring time for incoming calls. See page 380.) If you answer the call within the specified time, you can start talking.
- You can just press keys to forward incoming calls. Also, you can forward the call that comes in during a call.

## **Basic Flow of Call Forwarding Service**

- Step 1: Store the phone number of forwarding destination.
- Step 2: Set Call Forwarding Service to "Activate".
- Step 3: A call comes into your FOMA phone.
- Step 4: The call is automatically forwarded to the specified destination if you do not answer.

## **Use Call Forwarding Service**

Service Call forwarding Do the following operations.

Item	Operation/Explanation
Activate	PRegister fwd number ▶ Enter the phone number of forwarding destination.  Press  to select the phone number from the Search Phonebook display. (See page 85)  Set ring time ▶ Enter a ring time (seconds).  Enter from "000" through "120" in three digits.  Activate ▶ YES
Deactivate	▶YES
Change forwarding No.	➤ Enter the phone number of forwarding destination ➤ Select an item.  Change No.
Setting if fwd. No. busy	You can set an incoming call to be connected to the Voice Mail Service Center when the forwarding destination is busy. You need to subscribe to Voice Mail Service to use it.  YES
Check setting	You can check the phone number of forwarding destination and ring time.

#### Information

• If you answer the call while ringing, the call is not forwarded; you can talk.

#### Information

- If you are out of reach of radio waves or the power is turned off, the ring tone does not sound and the call is automatically forwarded. The call fee from the forwarder to the forwarding destination is charged for the forwarder who has subscribed for the service.
- If the ring time for Call Forwarding Service is set to 0 seconds, the calls are not recorded in Received Calls.

## Set On/Off of Forwarding Guidance

- 1429
  - ▶ Operate following the voice guidance.
  - For details, refer to "Mobile Phone User's Guide [Network Services]".

## Forward an Incoming Call during Ringing

You can forward an incoming call to the phone number you specified as a "Forwarding number" by a simple key operation. Even if you do not set Call Forwarding Service to "Activate", the service will be available using this function.

During ringing ► (FUNC) ► Call forwarding

## Forward Specified Calls to Specified Destination

You can automatically forward the calls from the specified phone numbers stored in the Phonebook after the ring tone sounds for about one second, regardless of the Activate/Deactivate setting for Call Forwarding Service.

You can specify up to 20 phone numbers.

This setting is valid only when the caller notifies his/her phone number.

It is advisable to activate "Caller ID request" at the same time.

- Detailed Phonebook display ► ( FUNC )
  ► Restrictions ► Enter your Terminal Security Code
  ► Call forwarding
  - "Call forwarding" is indicated by "★".
  - To release "Call forwarding", perform the same operation.

#### Information

- Even if you set this function, all incoming calls are not forwarded when you set "Personal data lock" while Call Forwarding Service is deactivated.
- If you have not signed up for Call Forwarding Service or have not set the forwarding destination, the call will be a missed call.

## <Nuisance Call Blocking>

# **Using Nuisance Call Blocking Service**

You can register so as not to receive "nuisance calls" such as crank calls.

Once you register a phone number for rejection, calls from that phone number is automatically rejected and the guidance answers the caller.

- When a call comes in from the phone number stored for rejection, the ring tone does not sound. The call is not recorded in Received Calls, either.
- Relation between each Service and incoming calls while Nuisance Call Blocking Service is activated

Service	Handling of incoming calls from the caller rejected as Register Caller	
Voice Mail Service	Call Rejection guidance is played back. (Message is not held.)	
Call Forwarding Service	Call Rejection guidance is played back. (Not forwarded to forwarding destination.)	
Call Waiting Service	Call Rejection guidance is played back.	
Caller ID Display Request Service	Call Rejection guidance is played back.	
Public Mode (Drive Mode)	Call Rejection guidance is played back. [Public Mode (Drive Mode) guidance is not played back.]	

For details, refer to "Mobile Phone User's Guide [Network Services]".

# Service Nuis. call blocking Do the following operations.

Item	Operation/Explanation	
Register caller	You can register the phone number of the call that arrived last for rejection.  > YES>OK	
Register selected No.	You can register the specified phone number for rejection so that the call from that phone number does not come in.  ▶ Enter a phone number▶ YES  • Press  to select the phone number from the Search Phonebook display, and press  to select from the Diale Call List, and press  to select from the Received Call List	
Delete last entry	You can delete the phone number registered last. Repeat the same procedures to delete phone numbers one by one from the one registered last.  > YES>OK	
Delete all entries	►YES►OK	
Check No. of entries	You can check the number of phone numbers registered for rejection.	

### <Caller ID Request>

# **Using Caller ID Display Request Service**

This service provides the guidance asking the caller ID notification against incoming voice calls/videophone calls without caller IDs, and then automatically disconnects the call.

- The call rejected by Caller ID Display Request Service is not stored in "Received calls", and the "Missed call" desktop icon does not appear.
- Relation between each Service and incoming calls while Caller ID Display Request Service is activated

Service	Handling incoming call from the caller who does not notify a caller ID	
Voice Mail Service	Caller ID Request guidance is played back. (Message is not held.)	
Call Forwarding Service	Caller ID Request guidance is played back. (Not forwarded to the forwarding destination.)	
Call Waiting Service	Caller ID Request guidance is played back.	
Nuisance Call Blocking Service	For the call from the number registered to be rejected, the Call Rejection guidance is played back.	
Public Mode (Drive Mode)	Caller ID Request guidance is played back. [Public Mode (Drive Mode) guidance is not played back.]	

# Service Caller ID request Do the following operations.

Item	Operation/Explanation	
Activate	YES>OK	
Deactivate	YES OK	
Check setting	You can check the setting contents of Caller ID Display Request Service.	

- If you activate this service while you set "Call setting w/o ID" to "Reject", this service has priority.
- You can set and confirm this setting from the FOMA phone with your own UIM
  inserted. You cannot remote-control the setting from landline phones, public
  phones, and other mobile phones.

#### <Dual Network>

# **Using Dual Network Service**

You can use a mova phone with the phone number for your FOMA phone. You can use either your FOMA phone or mova phone depending on the service area.

- You cannot use your FOMA phone and mova phone at the same time.
- You need to operate Dual Network Switching from the phone which is not using the service.



Item	Operation/Explanation	
Dual network switching	You can switch to the FOMA phone so that you can use it. Operate when the FOMA is in the FOMA service area.  YES Enter your Network Security Code.  See page 120 for the Network Security Code.	
Check setting	You can check the setting contents of Dual Network Service.	

## **Dual Network Service by Key Operations**

You can press a few keys to use Dual Network Service instead of using the menu function in the FOMA phone.

- Check network status (from the phone you want to check)

(1)(5)	$(\mathbf{A})$	(പ	(⊈)-	<ul> <li>Check</li> </ul>	<b>→</b> ( 🖀

#### Information

- For details, refer to "Mobile Phone User's Guide [Network Services]".
- If you press ① through ②, ※, or # following the voice guidance, you may not be able to end the call by pressing ②. In this case, press ③ again.

## <English Guidance>

# **Switching Guidance Language between Japanese and English**

You can set the guidance for network services such as "Voice mail" or the voice guidance such as for the out-of-service area, to be played back in English.

■ Outgoing (Guidance to yourself)

Language Description	
Japanese	Plays back the guidance in Japanese.
English	Plays back the guidance in English.

■ Incoming (Guidance to the caller)

Language	Description
Japanese	Plays back the guidance in Japanese.
Japanese+English	Plays back the guidance first in Japanese and then in English.
English+Japanese	Plays back the guidance first in English and then in Japanese.

Service English guidance Do the following operations.

Item	Operation/Explanation	
Guidance setting	Select an item.  Outgoing+Incoming  Sets the guidance for outgoing and incoming calls at a time.  Outgoing call Sets the guidance for outgoing calls.  Incoming call Sets the guidance for incoming calls.	
	➤ Select a guidance language to be set➤ YES  • If you select "Outgoing+Incoming", set the guidance for outgoing calls, and then set the guidance for incoming calls.	
Check setting	You can check the setting contents of the English guidance.	

#### Information

 You can set and confirm this setting from the FOMA phone with your own UIM inserted. You cannot remote-control the setting from landline phones, public phones, and other mobile phones.

#### <Service Numbers>

# **Using Service Numbers**

You can make calls to the DoCoMo Information Center or DoCoMo repair counter.

 Depending on the UIM you use, the displayed items might differ or no items are displayed.

Service Service numbers
Do the following operations.

Item	Operation/Explanation
ドコモ故障問合せ (DoCoMo repair counter)	You can make a call to the repair counter.  O(Dial)  Dialing 113 starts.
ドコモ総合案内・受付 (DoCoMo Information Center)	You can make a call to the Information Center.  O[Dial]  Dialing 151 starts.

#### <Arrival Call Act>

# **Selecting Response to Incoming Calls during a Call**

You can set how to manage a voice call/videophone call or 64K data communication that comes in during a call when you have signed up for "Voice mail". "Call forwarding" or "Call waiting".

- When you have not signed up for "Voice mail", "Call forwarding", or "Call waiting", you cannot answer calls that come in during a call.
- To use "Arrival call act", you need to set "Set in-call arrival act" to "Activate".



Item	Operation/Explanation	
Voice mail	You can connect voice calls or videophone calls that come in during a call to the Voice Mail Service Center, regardless of the setting for "Call waiting" or "Voice mail".	
Call forwarding	You can forward voice calls or videophone calls that come in during a call to the forwarding destination, regardless of the setting for "Call waiting" or "Call forwarding".	
Call rejection	You can reject voice calls, videophone calls, or 64K data communication that come in during a call.	

Item	Operation/Explanation
Answer	If you have set "Call waiting" to "Activate" and receive a voice call during a voice call, you can use "Call waiting". Any of the following operations is available during a voice call (when "Call waiting" is set to "Deactivate"), during a videophone call, or during 64K data communication.
	<ul> <li>You can answer incoming voice calls, videophone calls, or 64K data communication after finishing the current voice call, videophone call or 64K data communication.</li> </ul>

 From the Function menu, you can manually operate voice calls, videophone calls, or 64K data communication that come in during a call.
 When "Voice mail" or "Call forwarding" is set to "Activate",

 When "Voice mail" or "Call forwarding" is set to "Activate" your FOMA phone follows that setting.

## **Set In-call Arrival Act**

You can activate/deactivate the functions you selected in Arrival Call Act and can check the setting contents.

Service Set in-call arrival act Do the following operations.

Item	Operation/Explanation	
Activate	▶YES	
Deactivate	▶YES	
Check setting	You can check the setting contents of In-call Arrival Act.	

#### Information

You can set and confirm this setting from the FOMA phone with your own UIM
inserted. You cannot remote-control the setting from landline phones, public
phones, and other mobile phones.

#### <Remote Control>

# **Setting Remote Control**

You can set "Voice mail" or "Call forwarding" to be operated from touch-tone landline phones, public phones, DoCoMo mobile phones, or others.

• To use "Voice mail" or "Call forwarding" overseas, you need to set "Remote control" to "Activate" in advance.

Service Remote control Do the following operations.

Item	Operation/Explanation	
Activate	► YES	
Deactivate	► YES	
Check setting	You can check the setting contents of Remote Control.	

#### Information

You can set and confirm this setting from the FOMA phone with your own UIM
inserted. You cannot remote-control the setting from landline phones, public
phones, and other mobile phones.

### <Multi Number>

## **Setting Additional Number**

You can add and use the additional number 1 and 2 at maximum as the phone numbers of your FOMA phone besides the basic number.

- When you remove or replace the UIM, the multi number settings (name, phone number, etc.) stored in the FOMA phone might be erased. In this case, store them again.
- The name that corresponds to each multi number (Basic Number/Additional Number1/Additional Number2) appears on the Dialing display/Call Receiving display.
- When you make a call from Redial, Dialed Calls, or Received Calls, the multi number of the call you dialed/received at that time appears and is dialed.

## **Number Setting**

You can edit the registration name for the basic number, register additional numbers, and edit the registration names for them.

- Service Multi number Number setting Select a phone number.
  - You can register/edit also by pressing [a]( FUNC ) and selecting "Edit" or by pressing ( (Edit ).
  - Select the basic number or registered additional number to check the registration name and phone number.
  - To reset the registration name of the basic number, press (FUNC) and select "Reset BasicNo. name", then select "YES". \_\_\_
  - To delete the registered additional number, press (FUNC) and select "Delete this" or "Delete all", then select "YES".
- Enter a registration name ► Enter a phone number.
  - You can enter up to 8 full-pitch/16 half-pitch characters for a registration name.
  - You cannot edit the phone number of the basic number.

#### Set Multi Number

By switching this setting, you can make all calls from a specified phone number.

Service Multi number Set multi number Select a phone number.

Basic Number . . . . . Dials by the contracted phone number.

Additional Number1/2 . . . Dials by an additional number.

When the registration name is changed, each registration name is displayed.
 However, the registration name is not displayed during Personal Data Lock.

9 YES

## Set Own Phone Number when Making a Call

Before making a call, you can select a phone number to be notified to the other party from the Function menu, and then make a call.

Enter a phone number

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

- y ( FUNC ) ➤ Multi number ➤ Select a phone number.
  - To cancel the additional number, select "Cancel prefix".
  - When you have not signed up for Multi Number, your basic number is used for dialing even if you select an additional number.

#### Information

If you select "Basic Number" or "Additional Number1/2", "X590#", "X591#", or "X592#" is added after the phone numbers.

## **Check Setting**

You can check a phone number set for "Set multi number".

Service Multi number Check setting

## **Set as Ring Tone**

You can set a ring tone for calls that come in to the additional number.

Service Multi number Set as ring tone Select an additional number.

Go to step 2 on page 95.

When the ring tone is set to "Same as ring tone", the ring tone will be the one set for "Phone" or "Videophone" of "Select ring tone".

# **Using 2in1**

You can use two phone numbers/mail addresses on your single FOMA phone. By using respective modes, you can operate your FOMA phone as if you are using two sets of them.

The following three modes are available with 2in1:

#### A Mode

You can use your phone number (Number A) to make calls and your i-mode mail address (Address A) to send/receive mail messages, and can browse their related data.

#### B Mode

You can use your 2in1 phone number (Number B) to make calls and access the sites for Web mail (Address B), and can browse their related data.

#### Dual Mode

This mode has the functions of both A Mode and B Mode.

- For details on 2in1, refer to "Mobile Phone User's Guide [2in1]".
- $\bullet$  Address B is used to send/receive mail messages via the dedicated Web mail site.
- $\bullet$  You can use packet communication even in B Mode if you subscribe to i-mode.
- You can subscribe to either 2in1 or Multi Number.
- When you replace a UIM with another one (2in1 contractor → 2in1 contractor) while using 2in1, perform "2in1 function OFF" (see page 388) and then set "2in1 setting" to "YES", or perform "Auto acquire No. B" (see page 356), to acquire the correct Number B.

When you replace a UIM with another one (2in1 contractor  $\rightarrow$  2in1 non-contractor), perform "2in1 function OFF" as well to update the owner's information to the correct one.

See page 390 for how this service works for each mode.

#### Activate 2in1

Service 2in1 setting
Enter your Terminal Security Code
YES

When you activate 2in1, the 2in1 Menu display appears.

 This display appears also by pressing and holding for at least one second with the FOMA phone open and entering your Terminal Security Code.



## **Configure 2in1 Setting**

2in1 Menu display Do the following operations.

Item	Operation/Explanation
Mode switching	You can switch to the mode you use.  Select a mode.  When 2in1 is activated, the display for selecting the mode appears also by pressing and holding for at least one second with the Stand-by display shown, and entering your Terminal Security Code.  When "Mode link" is activated, the confirmation display appears telling that the setting for "Receive avoidance set." is also changed.
Phonebook 2in1 setting	You can change Phonebook 2in1 Setting for the Phonebook entry stored in the FOMA phone. ▶ Select an item.  Set to A
	➤ Select a setting method.  Set one Sets a Phonebook entry you call up.  Set some Select multiple Phonebook entries from the Phonebook List you call up, then press  [□](Finish).  Set group Sets a Phonebook group you call up.
Stand-by display	You can set the Stand-by display that appears in Dual Mode or B Mode.  ▶ Select a mode▶ Set the Stand-by display.  • See page 101 for how to set the Stand-by display. However, "§ appli display" is not displayed.  • If you select "Release", the setting returns to the default.

Item	Operation/Explanation
	You can set the character font of phone numbers displayed on the Dialing/Call Receiving display, detailed Dialed/Received Call display, detailed Redial display, and detailed Sent Chaku-moji Message display for when you make/receive calls by Number B.  Pattern 1 or Pattern 2
Set call/receive No. (Ringtone set. for No. B)	You can set a ring tone for Number B and a mail ring tone for Address B.  ▶ Select an item.  Phone
	➤ Select a type of ring tone. Go to step 3 on page 95.  • If you select "Release", the setting returns to the default.
2in1 function OFF	You can deactivate 2in1.  YES
Receive avoidance set. (Change recv. avoid.)	You can set Receive Avoidance Set. manually for number A and number B.  Change recv. avoid. A number or B number  Select an item.  Unchange Does not change Receive Avoidance Set.  Receives the calls to the selected phone number.  Avoid Avoids the calls to the selected phone number.  W[Finish]  When "Mode link" is activated, the confirmation display appears telling that it is necessary to deactivate it.
Receive avoidance set. (Check recv. avoidance)	You can check Receive Avoidance Set.  Check recv. avoidance

Item	Operation/Explanation		
Receive avoidance set. (Mode link)	You can activate/deactivate Mode Link. When you activate it, Receive Avoidance Set. automatically changes by linking to switching of the mode of 2in1; You can receive a call only to Number A when in A Mode, only to Number B when in B Mode, and to both Number A and B when in Dual Mode.  Mode link YES		
Receive avoidance set. [Recv. avoid. (abroad)]	You can operate Receive Avoidance Set. from overseas.  Recv. avoid. (abroad) > YES  Operate following the voice guidance.  When "Mode link" is activated, the confirmation display appears telling that it is necessary to deactivate it.		
Information <stand-by display=""> • See "Set Stand-by Display" on page 101 to set the Stand-by display in A Mode. <set (disp.="" call="" no.="" no.)="" receive=""> • The setting is retained during Personal Data Lock. • See "Change Character Font of Phone Numbers" on page 115 to set the font of phone numbers displayed for when you make/receive calls by Number A.</set></stand-by>			

- <Set call/receive No. (Ringtone set. for No. B)>
- See "Select Ring Tone" on page 94 to set a ring tone for Number A and a mail ring tone for Address A.
- If a call comes in to Number B without notifying his/her caller ID, the ring tone set by "Call setting w/o ID" sounds.
- <Receive avoidance set. (Mode link)>
- When "Mode link" is activated, you cannot execute "Mode switching" out of the service area.

### Make a Call in Dual Mode

In Dual Mode, Number A dialing is the default setting when you make a call from the Phonebook entry of A/common setting or the dialed/ received call record of Number A, and Number B dialing is the default setting when you make a call from the Phonebook entry of B setting or the dialed/received call record of Number B. Further, you can select a phone number to be notified to the other party before making a call by the following operations.

#### When Entering a Phone Number to Make a Call

- Enter a phone number ► or (Dial)
- Number A or Number B

   To cancel, select "Cancel".

# When Selecting Your Caller ID from Phonebook or Call Records

- 1 Bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.
- 2 (FUNC) > 2in1 dial > Number A or Number B

   To cancel, select "2in1 dial OFF".

#### ■ Services available to each mode

• The items whose operations differ depending on the mode are listed. (Items that work the same way as with A Mode are omitted.)

Item		A Mode	B Mode	Dual Mode
Voice call	Dialing	Number A	Number B	Selectable when dialing*1
Videophone call	Receiving	Receiving all calls <sup>**2</sup>		
Phonebook <sup>*3</sup>	Displaying <sup>**4</sup>	Phonebook entries with A setting/ common setting	Phonebook entries with B setting/ common setting	All Phonebook entries
	Changing to name <sup>※5</sup>	Phonebook entries with A setting/ common setting	Phonebook entries with B setting/ common setting	All Phonebook entries
	2in1 setting when newly storing	Phonebook entries with A setting	Phonebook entries with B setting	Phonebook entries with A setting
	Receiving all entries using infrared rays/iC or from microSD memory card		Copying sender's 2in1 setting <sup>&amp;6</sup>	
	Receiving one entry using infrared rays/iC or from microSD memory card	Phonebook entries with A setting	Phonebook entries with B setting	Phonebook entries with A setting
	"Copy to UIM"	At the time of "Copy to UIM", 2in1 setting becomes common		s common
	"Copy from UIM"	Phonebook entries with A setting	Phonebook entries with B setting	Phonebook entries with A setting
Redial Dialed calls Received calls Received address records Detailed sent Chakumoji message	Displaying	Records for Number A/Address A	Records for Number B/Address B	All records
Mail/SMS	Displaying <sup>®</sup> <sup>7</sup>	Sent/Received mail messages for Address A     Sent/Received SMS messages for Number A	<foma phone=""> <ul> <li>Received mail messages saved to the FOMA phone for Address B [mail messages you performed "端末に保存 (save to the FOMA phone)" on Web mail site], notification mail for new mail, and alarm notification mail</li> <li>Received SMS messages for Number B</li> <li><web mail="" site=""></web></li> <li>Sent/Received mail messages for Address B</li> </ul></foma>	FOMA phone>     Sent/Received mail messages for Address A, received mail messages saved to the FOMA phone for Address B, notification mail for new mail, and alarm notification mail     Sent/Received SMS messages for Number A     Received SMS messages for Number B     Web mail site>     Sent/Received mail messages for Address B

Item		A Mode	B Mode	Dual Mode
Mail/SMS	Sending	Mail messages from Address A	<foma phone=""></foma>	<foma phone=""></foma>
		SMS messages from Number A	Unable to send mail/SMS messages <web mail="" site=""></web>	Mail messages from Address A <sup>※8</sup> SMS messages from Number A
			Mail messages from Address B	<web mail="" site=""> Mail messages from Address B</web>
	Receiving	Mail messages to Address A/SMS messages to Number A (with ring tone/ vibration) Mail messages to Address B that you performed the saving operation to the FOMA phone/Notification mail for new mail or alarm notification mail/SMS messages to Number B (without ring tone/vibration)	Mail messages to Address A/SMS messages to Number A (without ring tone/vibration) Mail messages to Address B that you performed the saving operation to the FOMA phone/Notification mail for new mail or alarm notification mail/SMS messages to Number B (with ring tone/vibration)	Mail messages to Address A/SMS messages to Number A (with ring tone/ vibration) Mail messages to Address B that you performed the saving operation to the FOMA phone/Notification mail for new mail or alarm notification mail/SMS messages to Number B (with ring tone/ vibration)
Receiving all messages using infrared rays/iC or from microSD memory card				
	Receiving one message using infrared rays/iC or from microSD memory card	Or Mail for Address A/SMS massages for Number A		per A
	"Copy to UIM" (SMS only)  SMS messages for		SMS messages for Number A	
	"Copy from UIM" (SMS only)	SMS messages for Number A	Undisplayable	SMS messages for Number A
i-αppli		All usable	Usable <sup>*9</sup>	Usable <sup>*10</sup>
Own number		Number A	Number B	Number A/Number B
Voice mail	Recording voice mail messages	Recording all voice mail messages <sup>#11</sup>		
	Connection number for the service**12	Number A	Number B <sup>*13</sup>	Selectable when dialing
Call forwarding	Forwarding to the forwarding destination		Forwarding all calls	l
	Connection number for the service*12	Number A	Number B <sup>**14</sup>	Selectable when dialing

<sup>\*11</sup> The Phonebook entry with A setting or common setting is dialed by Number A and the Phonebook entry with B setting is dialed by Number B by default.

<sup>\*\*2</sup> When you set "Call acceptance" in A (B) Mode, you can receive calls only from the specified phone numbers in A/Dual (B/Dual) Mode, but you receive calls from all phone numbers in B (A) Mode.

When you set "Call rejection" in A (B) Mode, you can reject calls only from the specified phone numbers in A/Dual (B/Dual) Mode, but you receive calls from all phone numbers in B (A) Mode.

- 3 When you set a Phonebook entry as secret data, secret mode has priority.
- \*4 Regardless of the mode, all the Phonebook entries on the microSD memory card are displayed.
- \*5 This function checks the phone number/mail address with the Phonebook, and changes it to the name of the Phonebook entry for displaying when the caller's phone number, receiver's phone number, sender's phone number, sender's mail address, or receiver's mail address is stored in the Phonebook.
- %6 When the sender's model does not support 2in1, all data files are set with A setting.
- \*7 In B Mode, mail messages and SMS messages on the microSD memory card are not displayed if they do not have B Mode attribute information.
- \*\*8 When you compose a mail message in Dual Mode, you can select a receiver's mail address from the Phonebook entries set with B setting, however, note that the mail message is sent from Address A.
- \*9 Except message application programs, mail-linked i-oppli programs, and the i-oppli Stand-by display.
- ※10 Except the i-oppli Stand-by display.
- \*11 Up to 20 voice mail messages for Number A and Number B can be recorded in total.

The icon such as " in appears when the voice mail messages for Number A are recorded, and the icon such as " appears when the voice mail messages for Number B are recorded.

- \*12 You can activate/deactivate the service and make other settings for Number A and Number B respectively.
- \*13 When you execute "Check setting" of "Voice mail", the confirmation display appears asking which number you use for dialing, Number A or Number B.
- \*\*14 When you execute "Check setting" of "Call forwarding", the confirmation display appears asking which number you use for dialing, Number A or Number B.

#### Information

· Mail settings

When you delete an image or melody set to a Phonebook entry with B setting or move it to the microSD memory card in A Mode (or a Phonebook entry with A setting in B Mode), the message telling that the file is set to another function does not appear.

· Photo-sending

- In B Mode, you cannot use the following mail functions:
  - · Composing i-mode mail/SMS messages · Templates
  - · Receive option · Forward
    - · Chat mail
- ard Reply/Reply with quote
  mail Displaying Outbox/Draft
  - · Mail To function · i-αppli To function from i-mode mail text
- In Dual Mode, you cannot compose i-mode mail/SMS messages, and use Photo-sending from a redial item/dialed call record for Number B, and received call record for Number B.
- In Dual Mode, you cannot execute "Reply" and "Reply with quote" from the mail/SMS message sent to Number B/Address B.
- When you perform following operations in Dual Mode, calls are made from Number A:
- · When you make a call from Pause Dial
- · When you make a call from Record Message
- When you make an emergency call at 110/119/118 during Lock All
- When you make a call/AT command call from an external device, the call is made from Number A in A Mode and Dual Mode, and from Number B in B Mode.
- Regardless of the current mode, you can save up to 2,500 i-mode mail messages including SMS messages in the Inbox.
- The i-mode mail/SMS messages sent to Address B/Number B cannot be replied to, however, they are not saved to the folder set to "Reply impossible".
- "DEL all read mails", "DEL all recv. mails", "Delete read mails", "Delete all SMS-R", "DEL all frm folder", and "Delete all" apply to all the i-mode mail/SMS messages.
- Regardless of the current mode, "Delete all" of the Phonebook applies to all the Phonebook entries.

#### <OFFICEED>

# **Using OFFICEED**

"OFFICEED" is an in-group fixed bill service that applies to the specified IMCS (In-building Mobile Communication System). The separate subscription is required for use.

For details, check the DoCoMo-enterprise-oriented web page (http://www.docomo.biz/d/212/). (Japanese only)

## **Use OFFICEED Out-of-Area Forwarding Function**

You can use the OFFICEED out-of-area forwarding function to forward OFFICEED calls to out-of-OFFICEED area.

Service OFFICEED

Do the following operations.

Item	Operation/Explanation	
Area display setting	You can set whether to display " GFFICEED" while you are in the OFFICEED area.  No or OFF  If you select "ON", the confirmation display appears asking whether to set Area Display Setting to "ON".	
Activate forwarding	You can activate the OFFICEED out-of- area forwarding function.  >YES	
Deactivate forwarding	You can deactivate the OFFICEED out-of- area forwarding function.  > YES	
Check forwarding set.	You can check the setting of the OFFICEED out-of- area forwarding function.	

#### <Additional Service>

# **Using Additional Services**

When a new network service is provided by DoCoMo, you can register that service in the menu to use it.

## **Add New Service**

- Service Additional service Additional service
  - ► Highlight <Not stored> and press (FUNC )
  - ► Add new service

  - To delete the registered service, press (□R)( FUNC ) and select "Delete this" or "Delete all", then select "YES" → "OK".
  - You can register up to 10 network services.

### Enter a service name

Enter number or Enter USSD number

Select either "Enter number" or "Enter USSD number" according to the service contents you add.

- You can enter up to 10 full-pitch/20 half-pitch characters.
- Enter either a special number or a service code (USSD number)►YES

- You need to check and enter "Special number" or "Service code" supplied by DoCoMo for using the services.
  - Special number
  - ..... Number for connecting the Service Center.
  - Service code (USSD number)
  - ...... With the FOMA phone, enter it as USSD. The code is for notifying to the Service Center.

## **Use Registered Service**

Service Additional service Additional service
Select a service (Send)

Dialing to the Service Center starts.

## **Register Additional Guidance**

For when you execute the additional services, you can register up to 10 additional guidance items which correspond to the codes (USSD) that are returned from the Service Center. The additional guidance name is displayed when the registered command is returned as a reply.

- Service ➤ Additional service
  ➤ Additional guidance ➤ Highlight <Not stored> and press (FUNC ) ➤ Add new guidance
  - You can check the setting by selecting the registered guidance.
  - You can change the setting of the registered guidance by pressing [a](| FUNC|) and selecting "Edit".
  - To delete the registered guidance, press (iR) (FUNC) and select "Delete this" or "Delete all", then select "YES" → "OK".
- Enter a command.
  - Enter the code (USSD) provided by DoCoMo.
- Enter an additional guidance name ➤ YES
  - You can enter up to 10 full-pitch/20 half-pitch characters.

# **PC Connection**

Data Communication Available from FOMA Phone	396
Before Using	397
Preparation Flow for Data Transfer (OBEX)	398
Preparation Flow for Data Communication	399
AT Command	399
About CD-ROM	400
Introduction of DoCoMo Keitai Datalink	400

For details on data communication, refer to the PDF version of "Manual for PC connection setting" on the provided CD-ROM or DoCoMo web page.

To see the PDF version of "Manual for PC connection setting", you need to have Adobe® Reader®.

If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it.

For details such as how to use it, refer to "Adobe Reader Help".


## **Data Communication Available from FOMA Phone**

The data communication services you can use by connecting the FOMA phone to a personal computer are classified as follows: packet communication, 64K data communication, and data transfer (OBEX). The FOMA phone is equipped with the adapter function for packet communication.

- You might not be able to activate or operate other functions during data communication. See "Multiaccess Combination Patterns" on page 437 for details.
- The 64K data communication is not available overseas.
- To perform the packet communication overseas, perform it via the IP connection.
   (You cannot perform the packet communication via the PPP connection.)

### Data Transfer (OBEX)

You can exchange data files such as images, music files, Phonebook entries and mail messages with another FOMA phone or a personal computer.

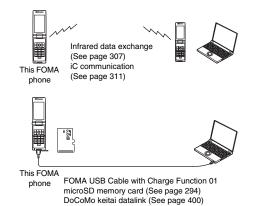

### Packet Communication

This service requires a communication fee according to the amount of data you sent and received. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps) It uses an access point which supports FOMA packet communication such as DoCoMo Internet access service "mopera U"/"mopera". To use this service, connect the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option), and then carry out settings. The packet communication is suitable for using applications through the high-speed communication.

- The packet communication is charged according to the amount of data you sent and received. Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files.
- The data is sent/received at the maximum speed of 384 kbps outside the FOMA High-speed Area.
- When you use the packet communication with "sigmarion II", "sigmarion III", or "musea" of DoCoMo's PDA, the data is sent/received at the maximum speed of 384 kbps. High-speed communication for FOMA High-speed Area is not supported.

### 64K Data Communication

This service requires a communication fee according to the duration of connection. By connecting the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option), you can execute communication.

To use this service, connect to an access point which supports FOMA 64K data communication such as DoCoMo Internet access service "mopera U"/ "mopera", or an ISDN-synchronous 64K access point.

The 64K data communication is charged according to the duration of connection.
 Note that a communication fee becomes expensive if you use this service for a long time.

#### Information

- You cannot use PHS services such as PIAFS (32K/64K data communication) from the FOMA phone.
- The FOMA phone does not support Remote Wakeup.
- The FOMA phone does not support the FAX communication.
- You can perform data communications by connecting the FOMA phone with DoCoMo's PDA "sigmarion II", "sigmarion III", or "musea". To use "sigmarion II" or "musea", the update is required. For details such as how to update them, refer to the DoCoMo web page.

## **Before Using**

## Charge of Internet service provider

To use the Internet, you need to pay the charge for the Internet service provider you use. Besides the FOMA service fee, you need to directly pay this charge to the Internet service provider. For details on the charge, contact the Internet service provider you use.

You can use the DoCoMo Internet access service, "mopera U"/ "mopera". To use "mopera U", subscription (charged) is required. To use "mopera", subscription and monthly charge are not required. However, the maximum communication speed of sending/receiving data is limited to 384 kbps.

#### Setting access point (Internet service provider, etc.)

The access points for the packet communication and 64K data communication differ. To use the packet communication, connect to an access point which supports packet communication. To use the 64K data communication, connect to an access point which supports FOMA 64K data communication or ISDN-synchronous 64K.

- You cannot connect to the DoPa access point.
- You cannot connect to PHS 64K/32K data communication access point such as PIAFS.

### About user authentication for accessing network

User authentication (ID and password) may be required at connection to some access points. In this case, enter your ID and password on the communication software program (dial-up network). ID and password are specified by the Internet service provider or network administrator of the access point. For details, contact the provider or network administrator.

### About access authentication for using browser

If you need FirstPass (user certificate), install the FirstPass PC software from the provided CD-ROM and make the setting.

For details, refer to "FirstPassManual" (PDF format) in the "FirstPassPCSoft" folder on the CD-ROM.

Adobe® Reader® (version 6.0 or higher is recommended) is required to see "FirstPassManual" (PDF format). If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it. For details such as how to use it, refer to "Adobe Reader Help".

# Conditions of packet communication and 64K data communication

To carry out the communication by using the FOMA phone in Japan, the following conditions are required:

- The personal computer to be used can use the FOMA USB Cable with Charge Function 01 (option).
- The PDA to be used should support FOMA packet communication and 64K data communication.
- Within the FOMA service area
- For packet communication, the access point should support packet communication of the FOMA.
- For 64K data communication, the access point should support the FOMA 64K data communication or ISDN-synchronous 64K.

Even when these conditions are satisfied, if the base station is congested or the radio wave conditions are bad, you may not carry out the communication.

### **About Operating Environment**

For the data communication, the following operating environment is required for your personal computer:

#### ■ PC main unit

PC/AT compatible model

When using the FOMA USB Cable with Charge Function 01 (option):

USB port (Universal Serial Bus Specification Rev1.1 compliant)

Display resolution 800 x 600 dots. High Color 16 bits or more recommended.

#### ■ os

Windows 2000, Windows XP, Windows Vista (Japanese version in each)

#### ■ Memory requirements

Windows 2000: 64 Mbytes or more Windows XP: 128 Mbytes or more Windows Vista: 512 Mbytes or more

#### ■ Hard disk space size

Unused memory space of 5 Mbytes or more

- The operation on the upgraded OS is not guaranteed.
- The memory requirements and hard disk space size may vary depending on the system environment.

## **Necessary Devices**

The following hardware and software programs are required besides the FOMA phone and personal computer:

- FOMA USB Cable with Charge Function 01 (option) or FOMA USB Cable (option)
- Provided "FOMA P705i μ/PROSOLID μ CD-ROM"

#### Information

- Use a dedicated "FOMA USB Cable with Charge Function 01" or "FOMA USB Cable". The USB cable for personal computers cannot be used because the shape of the connector differs.
- In this manual, operations are described for the case of using FOMA USB Cable with Charge Function 01.
- If you use a USB hub, the devices may not work correctly.

## **Connect FOMA Phone to Other Devices**

The following two ways are available for connecting the FOMA phone to another device:

### Use FOMA USB Cable with Charge Function 01

Connect the FOMA phone to a personal computer provided with the USB port using the FOMA USB Cable with Charge Function 01 (option).

This way of connection applies to all types of communications such as packet communication, 64K data communication, and data transfer.

- Set "USB mode setting" to "Communication mode". (See page 302)
- You need to install the "FOMA communication setup files" (driver) before use.

#### Use Infrared Data Exchange

By using infrared rays, you can send/receive data between your FOMA phone and another FOMA phone, mobile phone, or personal computer provided with the infrared data exchange function. (See page 307)

This applies only to data transfer.

## **Preparation Flow for Data Transfer (OBEX)**

The following outline shows a preparation flow to use the DoCoMo keital datalink by connecting the FOMA phone to a personal computer.

Download or install the FOMA communication setup files.

- Install the FOMA communication setup files from the provided CD-ROM.

  or
- Download the FOMA communication setup files from the DoCoMo web page and install.



Data transfer

## **Preparation Flow for Data Communication**

The following outline shows a preparation flow to use the packet communication by connecting the FOMA phone to a personal computer.

Connect a personal computer to the FOMA phone using the FOMA USB Cable with Charge Function 01 (option).



Download or install the FOMA communication setup files.

- Install the FOMA communication setup files from the provided CD-ROM.
   or
- Download the FOMA communication setup files from the DoCoMo web page and install.



Check the setting after installation.



Set the access point by using the FOMA PC setup software.

Set the access point and dial-up network without using the FOMA PC setup software.



Connect.

## When installing "FOMA communication setup files" (driver)

Use the provided "FOMA P705i $\mu$ /PROSOLID  $\mu$  CD-ROM". You are advised to install "FOMA PC setup software" for establishing the APN or dial-up setting easily when you communicate.

## **Install FOMA Communication Setup Files (Driver)**

Installing the FOMA communication setup files (driver) is required when you connect the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 (option) for the first time.

## **FOMA PC Setup Software**

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings for the communication. By using the "FOMA PC setup software", you can easily carry out the settings. If required, you can set the packet communication and 64K data communication without using the "FOMA PC setup software".

## **AT Command**

AT commands are used to specify and modify the functions of the FOMA phone on the personal computer.

## **About CD-ROM**

The provided CD-ROM contains the software programs for using data communication on your FOMA phone, "Manual for PC connection setting" and "Kuten Code List" (PDF file). For details, refer to the provided CD-ROM.

- <Contained software programs/PDF>
- · FOMA通信設定ファイル

(FOMA Communication Setup Files)

- ・FOMA PC設定ソフト (FOMA PC Setup Software)
- ・FOMAバイトカウンタ (FOMA byte counter)
- ドコモケータイdatalinkのご案内

(DoCoMo keitai datalink information)

- · FirstPass PCソフト (FirstPass PC Software)
- mopera Uのご案内 (mopera Uかんたんスタート/U かんたん接続設定ソフト/U オリジナルデータ取得ソフト/FOMAバイトカウンタ)

[mopera U information (mopera U start up tool/mopera U connection & setting tool/mopera U requesting original data/FOMA byte counter)]

- ・ナップスター®のご案内 (Napster® information)
- ・PDF version of "パソコン接続マニュアル"/
  - "Manual for PC connection setting"
- ・PDF version of "区点コード一覧"/"Kuten Code List"
- · Adobe®Reader®

## When a warning message appears

When you set the CD-ROM on your personal computer, an alert message might appear on the display as shown below. This alert message appears depending on the security settings of Internet Explorer, however, you can use your computer without any problem.

Click "はい (YES)".

 $\frak{MThe}$  display below is for when you use Windows XP.

It might differ depending on the environment of the computer you use.



## Introduction of DoCoMo Keitai Datalink

"DoCoMo keitai datalink" is the software program that enables you to back up your Phonebook entries and i-mode mail messages to your personal computer and edit them. The software program is distributed from the DoCoMo web page. For details and how to download, refer to the web page below. You can access the web page below from the provided CD-ROM as well.

http://datalink.nttdocomo.co.jp/ (Japanese only)

 For details on how to download, transferable data, operating environments such as compatible OS, installation method, operating method, and restrictions, refer to the web page above. For operations after installation, refer to Help contained in the software program. To use the DoCoMo keitai datalink, you need to separately have the USB Cable (option).

# **Overseas Use**

Outline of International Roaming (WORLD WING)	40
Services Available Overseas	40
Confirmation for Using	40
Making a Call from the Country You Stay	40
Receiving a Call	40
Setting a Search Method of Carrier	
	40
Setting a Carrier to Preferentially Connect to	
PLMN Setting>	40
Displaying a Carrier on the Stand-by Display	
Operator Name Display	40
Confirming a Communication System Status in the Area	40
Setting Guidance during Roaming	
Set Roaming Guidance	40
Setting Your FOMA Phone to Reject Calls during Roaming	
Call Barring>	409
Using Network Services during Roaming	409

# Outline of International Roaming (WORLD WING)

International Roaming (WORLD WING) is a service that enables you, using local carrier's networks, to make calls or to communicate in foreign countries where are out of the service area of the FOMA network.

- You can use this FOMA phone in the 3G roaming area. For details on the area, refer to the DoCoMo Global Service web page. (You cannot use this FOMA phone in the service area of GSM/GPRS.)
- The 3G roaming area is the third-generation mobile communication network that conforms to the world-standard specifications 3GPP\*\*.
  - #3GPP(3rd Generation Parthership Project) is a regional standards organization for developing common technical specifications for third-generation mobile telecommunication systems (IMT-2000).
- At the time of purchase, the FOMA phone is set to automatically switch networks in foreign countries. (See page 407)
- You are advised to read the following booklets to use your FOMA phone overseas:

Booklet title	Contents
Mobile Phone User's Guide [International Services]	Describes the details of International Roaming Service such as the contents of the service, billing, and cautions.
Mobile Phone User's Guide [Network Services]	Describes the contents of each local network service and cautions.

### Information

- Quick Manual "For Overseas Use" is attached to the end of this manual. Refer to it when you use the FOMA phone overseas.
- For the country codes, international call access codes, and international prefix numbers for the universal number, refer to "Mobile Phone User's Guide [International Services]" or the DoCoMo Global Service web page.
- Overseas use fee is added to your monthly bill. You might be requested, however, to pay according to the invoice for the following month on and after depending on the overseas carrier of your stay. Note that the invoice for the total of the fees to be paid for the month might be separately issued.

## **Services Available Overseas**

Voice call<sup>\*1</sup>

In the country you stay, you can use the phone number as used in Japan to make or take local calls, or to make international calls to Japan or to other countries.

Videophone call\*1

You can make international videophone calls to users of the specified 3G mobile phone carriers overseas and FOMA users.

• i-mode

Perform the overseas usage settings.

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

• i-mode mail

You can send/receive i-mode mail overseas by the same address as used in Japan.

- SMS
- i-Channel<sup>※2</sup>
- · Packet communication by connecting with a personal computer
- ※1 In B Mode or Dual Mode of 2in1, you cannot make calls from Number B.
- ※2 Auto-updates are automatically suspended when you are connected to an overseas carrier. To resume the auto-updates of i-Channel, you need to make the i-Channel settings again. When you use i-Channel overseas, the communication fee for auto-updates of the basic channel also applies. (In Japan, the fee is included in the monthly service bill.)
- The 64K data communication is not available overseas.
- $\bullet$  You cannot dial from an additional number even if you are the user of Multi Number.
- Some services are not available depending on the carrier or network. For connectable countries, regions, and carriers, refer to the DoCoMo Global Service web page.

## **Confirmation for Using**

## **Confirmation before Departure**

Confirm below in Japan before you use the FOMA phone overseas.

#### ■ About contract

- You do not need to subscribe to WORLD WING if you have subscribed to the FOMA service after September 1, 2005. If you offered that you do not need WORLD WING at the time you signed up for the FOMA service, or when you have canceled WORLD WING midway, you are required to newly subscribe to WORLD WING
- If you have signed up for the FOMA service before August 31, 2005, and have not yet subscribed to WORLD WING, you are required to subscribe to it.
- Insert the UIM (other than blue one) that supports "WORLD WING" into the FOMA phone. (See page 37)
- This service is not available with some billing plans.

#### About charging batteries

- See page 19 for cautions for handling AC adapter.
- See page 41 and page 42 for charging batteries using AC adapter.

#### About the setting of network service

When you have signed up for network services, you can operate to activate/ deactivate the network services from overseas except some operations.

 Even with the network services that you can operate to activate/deactivate, you might not be able to use the services depending on the overseas carrier. Also, some network services are available only in Japan.

To use network services overseas, refer to "Mobile Phone User's Guide [International Services]" or "Mobile Phone User's Guide [Network Services]" before departure.

#### About SMS

Even during international roaming, you can send/receive SMS messages to and from the other party who uses the FOMA phone in Japan or overseas or who uses overseas carriers.

- When you enter the destination address for sending an SMS message to the other party who is using an overseas carrier, add "+" and a country code to the head of the destination phone number. When the destination phone number begins with "0", however, enter the phone number except for the "0". However, include "0" when making a call to some countries or regions such as Italy.
- When the text of an SMS message sent to the other party who is using an overseas carrier contains characters that do not support those on the destination phone, the characters might not be correctly displayed. For details, refer to "Mobile Phone User's Guide [International Services]" or "Mobile Phone User's Guide [Network Services]".

## Check Required at the Country You Stay

After you arrive at the country overseas, once turn the power off and then turn on to automatically set an available carrier in that country.

• The network system you are currently using appears at the upper side of the display.

**∃ Б ≑** : 3G network that supports packet communication

**3G** network that does not support packet communication

- When "Operator name display" is set to "Display ON", the connected carrier appears on the Stand-by display.
- When "Network search mode" is set to "Auto", and you move out of the service area of the network you are connected to, the available network of another carrier is automatically searched for and you are re-connected to it.

#### ■ About inquiries

For lost, stolen, and cost settlement, or malfunction of your FOMA phone overseas, refer to "Loss or theft of FOMA terminal or payment of cumulative cost overseas" or "Failures encountered overseas" on the back page of this manual. Note that you are still charged the call and communication fees incurred after you lose it or have it stolen.

- You need to add "international call access code for the country you stay" or "international prefix number for the universal number" that is assigned to the country you stay, to the head of the phone number for inquiries.
- For the latest information about the international call access codes and international prefix numbers for the universal number, refer to the DoCoMo Global Service web page.

#### ■ Country codes for major countries

Use the following country codes when you make international calls or when you set Int'l Dial Assist.

(As of December 2007)

Service area	Country code	Service area	Country code
Australia	61	Monaco	377
Belgium	32	Netherlands	31
Brazil	55	New Zealand	64
Canada	1	Norway	47
China	86	Philippines	63
Czech Republic	420	Poland	48
Denmark	45	Portugal	351
Finland	358	Russia	7
France	33	Singapore	65
Germany	49	South Korea	82
Greece	30	Spain	34
Hong Kong	852	Sweden	46
Hungary	36	Switzerland	41
India	91	Taiwan	886
Indonesia	62	Thailand	66
Ireland	353	Turkey	90
Italy	39	United Arab Emirates	971
Luxembourg	352	United Kingdom	44
Macau	853	United States of America	1
Malaysia	60	Vietnam	84

For other country codes and details, refer to the DoCoMo Global Service web page.

## ■ International call access codes for major countries (Table 1)

The international call access codes for major countries are listed below.

(As of August 2007)

Service area	Access code	Service area	Access code
Australia	0011	Monaco	00
Belgium	00	Netherlands	00
Brazil	0041/	New Zealand	00
DIAZII	0014	Norway	00
Canada	011	Philippines	00
China	00	Poland	00
Czech Republic	00	Portugal	00
Denmark	00	Russia	810
Finland	00	Singapore	001
France	00	South Korea	001
Germany	00	Spain	00
Greece	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	002
India	00	Thailand	001
Indonesia	001	Turkey	00
Ireland	00	United Arab Emirates	00
Italy	00	United Kingdom	00
Luxembourg	00	United States of America	011
Macau	00		011
Malaysia	00	Vietnam	00

#### ■ International prefix numbers for the universal number (Table 2)

The international prefix numbers for the universal number for major countries are listed below

(As of August 2007)

Service area	Inter- national prefix number	Service area	Inter- national prefix number
Argentina	00	Luxembourg	00
Australia	0011	Malaysia	00
Austria	00	Netherlands	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Bulgaria	00	Peru	00
Canada	011	Philippines	00
China	00	Portugal	00
Colombia	009	Singapore	001
Denmark	00	South Africa	09
Finland	990	South Korea	001
France	00	Spain	00
Germany	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	00
Ireland	00	Thailand	001
Israel	014	United Kingdom	00
Italy	00	United States of America	011

- The numbers are not available in some areas.
- You can use the universal numbers only in countries listed in the table above.
- When making a call from a hotel, you may be separately charged the phone usage fee from the hotel. (You are responsible for the fee.) You should check with the hotel before making a call.
- Note that, in many cases, the universal number may not be used from a mobile phone, public phone, or hotel phone, etc.

## **Check Required after Homecoming**

After you return to Japan, the FOMA network is automatically searched and connected.

Set to the FOMA network (DoCoMo) with "Network search mode" set to "Auto" or "Manual".

## Making a Call from the Country You Stay

You can make voice calls or videophone calls from overseas using international roaming service.

## Make a Call to Outside the Country You Stay (Including Japan)

#### Use Phonebook to Make an International Call to Japan

When you make an international call from the country you stay to a landline phone or mobile phone in Japan, you can operate from the Phonebook easily.

• This is available only when the phone number stored in the Phonebook begins with "0". You need to set "Auto assist setting" of "Int'l dial assist" to "ON" and to "Japan (81)" in advance. (Setting at purchase)

# Detailed Phonebook display or or







• Press (☑)(V. phone) to make an international videophone call.

## Dial

"0" at the head of the phone number is replaced with "+81" when dialed.

• When you select "Original phone No.", the phone number is dialed as stored in the Phonebook.

### Information

• From a redial item or dialed call record, or by entering phone number directly, you can make an international call by the same operation.

#### Use "+" to Make an International Call

Press and hold of for at least one second, then you can enter "+" when dialing. By using "+", you can make international calls from the country you stay to the countries such as Japan.

O(for at least one second) ► Enter numbers in order of country code → area code (city code) → destination phone number ► area or (D(Dial))

- Enter "81" as a country code when you make an international call to Japan.
- When the area code (city code) begins with "0", enter it except for the "0".
   However, include "0" when making a call to some countries or regions such as Italy.
- Press (☑)(V. phone) to make an international videophone call.

### International Dial

If you have stored a country code by Country Code Setting (see page 61), you can make international calls from the country you stay to the country such as Japan. The following are the procedures for overseas.

1 Enter a phone number

or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

) [FUNC ] ► Int'l dial assist

Select the name of the country you make a call to

 
or (Dial)

Press (☑)(V. phone) to make an international videophone call.

## Make a Call to a Phone in the Country You Stay

In the same way as you do in Japan, you can make a voice call or videophone call by entering the destination's phone number.

## Tenter a destination phone number



- Press (♥)(V. phone) to make a videophone call.
- To make a call in the country you stay using the Phonebook, select "Original phone No." in step 2 of "Make a Call to Outside the Country You Stay (Including Japan)" on page 405.

# Make a Call to a Person who is Staying Overseas and Using WORLD WING

When you make a call to a person who is also internationally roaming, make the call in the same way as to make international calls to Japan even if he/she is in the country you stay.

## Receiving a Call

In the same operation as you do in Japan, you can answer voice calls and videophone calls overseas. (See page 63)

■ Having calls to your FOMA phone made from Japan

You can receive international calls from Japan by just having your phone number entered in the same way as the callers usually do in Japan.

Making a call entering "090-XXXX-XXXX"

Making a call entering "080-XXXX-XXXX"

making a call entering 000-AAAA-AAAA

■ Having calls to your FOMA phone made from countries other than Japan Regardless of the country you stay, you receive calls via Japan; therefore, have the caller enter "international call access code of his/her country" and "81" (Japan) in the same way as the caller makes a call to Japan and then enter your phone number whose "0" is excluded from the head.

Making a call entering "international call access code of the country of the caller-81-90-XXXX-XXXX"

or

Making a call entering "international call access code of the country of the caller-81-80-XXXX-XXXX"

#### Information

- Even for incoming calls, you are charged a receiving fee including an international forwarding fee, depending on the country or region.
- Even when a caller tried to notify of his/her caller ID, it might not be notified depending on the overseas carrier. Also, a different number from the other party's caller ID might be notified depending on the caller's network.
- While you use the FOMA phone overseas, "Call setting w/o ID", "Reject unknown", and "Restrictions (except Restrict Dialing)" might not work. In addition, it might work as "Answer" regardless of the setting of "Arrival call act".
- When a call comes in during international roaming, the call is forwarded from Japan regardless of whatever country the call is from. The caller is charged a call fee to Japan and the receiver is charged a receiving fee including an international forwarding fee.

#### <Network Search Mode>

## **Setting a Search Method of Carrier**

You can set whether to automatically search a network and connect to another carrier when you move out of the service area.

Settings Network setting Int'l roaming
Network search mode Select an item.

# Select a carrier.

Press ☒(Update) to display the list of carriers again.

#### Information

- You cannot set this function if the UIM is not inserted.
- When you move out of the service area while this function is set to "Manual", " ® "
  appears.
- When you have set this function to "Manual" and turn off and on the FOMA phone
  out of the service area, select a carrier again in the service area.

## <PLMN Setting>

# Setting a Carrier to Preferentially Connect to

You can specify the priority order of carriers you are connected to for when "Network search mode" is set to "Auto". You can store up to 20 carriers.

# Settings Network setting Int'l roaming PLMN setting

You can select the stored carrier to check the stored contents.

To search for a carrier by a name of country, press (S)(Search) and select a country name. You can search also by pressing (Search) again from the Country List and entering a country name.

### Function Menu while PLMN Setting is Displayed

	• • • • • • • • • • • • • • • • • • • •	
Function menu	Operation/Explanation	
Set VPLMN to UPLMN	You can store the carrier you are currently connected to.  ▶☑(Finish) ➤ YES	
PLMN list select	See "Setting a Carrier to Preferentially Connect to" on page 407.	
PLMN manual select	You can store a carrier by entering a country code and operator code.  You can store carriers not found in the list.  ► Enter a country code (3 digits) and operator code (2 to 3 digits) ► (Finish) ► YES	

Function menu	Operation/Explanation
Change priority	► Select a number to change to ► (Finish) ► YES
Delete this	►YES►⊠(Finish)►YES
Delete all	►YES ► (Finish ) ► YES

#### Information

- When the "DoCoMo" network is available, you are preferentially connected to it regardless of this setting.
- This setting is stored on the UIM.
- You cannot set this function if the UIM is not inserted.

## <Operator Name Display>

# Displaying a Carrier on the Stand-by Display

You can select whether to display, on the Stand-by display, the carrier you are currently connected to.

Settings Network setting Int'l roaming
Operator name display Display ON or Display OFF

## When you set to "Display ON"

The carrier's name is displayed on the Stand-by display. However, when you use the "DoCoMo" network, the carrier is not displayed.



 
<Status in the Area>

# **Confirming a Communication System**

You can display whether the carrier you are currently connecting to supports the circuit switching (CS)\*1 and packet switching (PS)\*2.

\*1 The communication system used for voice calls, videophone calls, SMS, etc.

\*2 The communication system used for i-mode. i-mode mail. etc.



## <Set Roaming Guidance>

## **Setting Guidance during Roaming**

For an incoming voice call or videophone call during international roaming, you can have the voice guidance played back to the caller to that effect.

- Even when you activate Roaming Guidance, the caller may hear the guidance in a foreign language depending on the overseas carrier.
- Even when you deactivate Roaming Guidance, the caller hears a calling tone set by the overseas carrier.
- You need to set this function in Japan.

# Service Set Roaming guidance Do the following operations.

Item	Operation/Explanation
Activate	▶YES
Deactivate	▶ YES
Check setting	You can check the setting contents of "Set Roaming guidance".  YES

### <Call Barring>

# **Setting Your FOMA Phone to Reject Calls during Roaming**

- This setting might not be available depending on the overseas carrier.
- Settings Network setting Int'l roaming Call barring Do the following operations.

Item	Operation/Explanation
Activate	Select an item.  Bar all incoming Bars all calls including voice calls and videophone calls.  Bar VP call/data ex Bars only videophone calls.  YESD Enter your Network Security Code.  See page 120 for the Network Security Code.
Deactivate	► YES► Enter your Network Security Code. • See page 120 for the Network Security Code.
Check setting	You can check the setting contents of "Call barring".  >YES

## **Using Network Services during Roaming**

You can use some network services such as Voice Mail Service or Call Forwarding Service from overseas. You can set Roaming Guidance as well.

• See page 388 for "Receive avoidance set." of 2in1.

## **Operate Voice Mail Service from the Country You Stay**

- Settings Network setting Int'l roaming
  - Voice mail (Int.) Select an item YES
  - Operate following the voice guidance.

# Operate Call Forwarding Service from the Country You Stay

- Settings Network setting Int'l roaming
  - ► Call forwarding (Int.) ► Select an item ► YES
  - Operate following the voice guidance.

## Operate Roaming Guidance from the Country You Stay

- Settings Network setting Int'l roaming
  - ► Roaming guidance (Int.) YES
  - Operate following the voice guidance.

## Operate Remote Control from the Country You Stay

- Settings Network setting Int'l roaming
  - Remote control (Int.) YES
  - Operate following the voice guidance.

# Operate Caller ID Request Service from the Country You Stay

- Settings Network setting Int'l roaming

  Caller ID req. (Int.) YES
  - ► Operate following the voice guidance.

#### Information

- When you use those services from overseas, you are charged an international call fee of the country you stay.
- You need to set "Remote control" beforehand.
- For the details on network services, refer to "Mobile Phone User's Guide [International Services]" and "Mobile Phone User's Guide [Network Services]".

# Appendix/External Devices/Troubleshooting

Function List	41
List of Characters Assigned to Keys (2-touch Input Method)	42
	42
List of Characters Assigned to Keys (NIKO-touch Input Method	3)
	43
Symbol List	43
Pictograph List	43
Common Phrase List	43
Multiaccess Combination Patterns	43
Multitask Combination Patterns	43
Services Available with FOMA Phones	44
Introduction of Options and Related Equipment	44
nterfacing to External Devices	
Introduction of Software for Playing Back Moving Images	44
Links with AV Equipment.	44

roubleshooting	
Troubleshooting	442
Error Messages	443
Warranty and Maintenance Services	452
i-mode Trouble Diagnosis Site	453
Updating Software Software Update>	454
Protecting FOMA Phone from Data Causing Failure	
Scanning Function>	460
Specifications	462
Number of Savable/Storable/Protectable Items in FOMA Phone	<u> </u>
	463
SAR Certification Information and Other Information	464
Export Administration Regulations	465

# **Function List**

Execute "Reset settings" on page 364 for the items indicated by to return to the respective defaults. If you execute "Initialize" on page 364, all items return to the defaults.

• Even if you execute "Initialize", the pre-installed i-oppli programs you have deleted are not restored.

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Mail	Inbox		No mail messages, Messages R/F (except inside the UIM)	198
			User created folder: None i-appli mail folder: None	
	Outbox		No mail messages (except inside the UIM)	199
			User created folder: None i-appli mail folder: None	
	Draft		No mail messages (except inside the UIM)	199
	Compose message		=	182
	Template		Pre-installed data only	189
	Web mail		_	227
	Check new message		_	195
	Compose SMS		-	224
	Check new SMS		-	226
	Chat mail		FUNC Chat member: Not recorded (except "Own")	219
	Receive option		=	195
	Mail settings	Scroll	1 line	213
		Character size	Standard PRO µ Extra large	116
		Mail list display	List display: Date+sender/receiver subject Message/Name in phonebook: Checked	213
		Message display	Standard	213
		Mail security	All Unchecked	128
		Secret mail display	ON	127
		Auto color label	Not stored	213
		Pred. conv. at reply	ON	214
		Header/signature	Header: Blank Insert: Checked	214
			Signature: Blank Insert: Checked	215
			Quotation marks: >	215
		Set check new message	All Checked	214
		Auto-display	MessageR preferred	216
		Receiving display	Alarm preferred	214
		Receive option setting	OFF	195
		Attachment preference	All Checked	214
		Attachment preference	All Ollecked	214

lain menu iten	n Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Mail	Mail settings	Auto melody play	ON	214
		Photo auto display	ON	214
		Chat setting	Sound setting: Alarm 1	222
			Chat image: ON	222
			User setting Name: Own Image: Apple	222
		Check settings	-	214
	SMS settings	SMS report request	OFF	226
		SMS validity period	3 days	226
		SMS input character	Japanese (70char.)	227
		SMS center selection	DoCoMo	227
	Area mail settings	Receive setting	No	219
		Receive entry	Emergency information	219
		Beep setting	ON	219
		Beep time	10 seconds	219
∃ -mode	8 Menu		-	156
	Bookmark		Not stored	162
	Screen memo		User created folder: None	164
	Last URL		§ Menu	160
	Go to location		No URL histories	162
	Message R/F		No messages	216
	General       General      General       General       General       General       General	Channel list	_	179
		Ticker ON/OFF	ON	179
		Ticker font size set.	Standard	179
		Ticker color set.	Pattern 1	179
		Ticker scroll speed	Normal	179
		Reset i-Channel	-	180
	Check new message		-	195
	Operate certificate	Client certificate	-	174
		Certificate	All Valid	173
		Certificate host	DoCoMo	175
	8 -mode settings	Scroll	1 line	172
		Character size	Standard PRO µ Extra large	116
		Set image display	ON	172
		Set connection timeout	60 seconds	172
		Host selection (Fig. 81)	i-mode	173

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
S -mode	🖁 -mode settings	្តី motion auto-play	ON	178
		Use phone information	YES	172
		Sound effect setting	ON	172
		Doc. display settings	Fit page	316
		Check settings	-	172
		Reset last URL	-	160
	Full Browser	Home	-	256
		Bookmark	Not stored	162
			User created folder: None	
		Last URL	None	256
		Go to location	No URL histories	162
		Full Browser settings	Display Mode setting: Phone mode	257
			Scroll Speed: High speed Focus while scroll: OFF	260
			Zoom: 100%	260
			Access setting: No	260
			Home URL: Set URL http://www.google.co.jp	260
			Set image display: ON	260
			PC Movie auto-play: ON	260
			Cookie setting: Valid (No cookies)	261
			Referer setting: Send	261
			Script setting: Valid	260
			Window Open Guard: Invalid	260
ỗ -αppli	Software list(phone)	•	Pre-installed i-αppli programs only	231
			Display: Icon display	231
			Auto start time: All Unchecked	243
			FUNC Power saver: ON	233
	ể -αppli(microSD)	SW list(microSD)	_	231
		ც დppli(microSD)	-	244
	ි -අppli info	End stand-by info	No information	244
		Security error history	No histories	233
		Auto start info	No information	243
		Trace info	No information	232
	appli settings	Auto start setting	OFF	242
		Disp. software info	Not display	231
		Preferred tone	MUSIC	242

ain menu item		Lower sub-menu item	Setting at purchase	Reference
္జ -αppli	ã -αppli settings	∞Backlight	Depend on system	242
			OFF	242
		αVibrator	Depend on system	242
		Check settings	-	242
Settings	Sound	Select ring tone (@13)	Phone/Videophone: RING-UltraLiving02 Maii: SE-UltraLiving01 Chat mail: SE-UltraLiving02 MessageR/MessageF: SE-UltraLiving03	94
		Ring volume (Few 50)	All Level 4	67
		Keypad sound (📖30)	ON	97
		Position to play ([64)	Play all	95
		Headset usage setting (1984)51)	Headset + speaker	98
		Mail/Msg. ring time (@68)	All ON Ring time: All 5 seconds	97
Dis	Display	Display setting (MM)56)	Stand-by display  "TGB-flash01" for body color "SILVER" "TGB-flash02" for body color "BLACK"  "TGB-flash03" for body color "BROWN"  PRO µ TGB-flash05	101
			Clock Clock display: Big Day of week: Unavailable Position: Pattern 1 PRO µ Pattern 2 Color "Black" for body color "SILVER" "White" for body color "BLACK"/"BROWN" PRO µ White	117
			Dialing, Incoming call, Videophone dialing, Videophone incoming, Mail sending, Mail receiving, Check new message, Mail/msg. rcpt result  "Black" for body color "SILVER"  "Brown" for body color "BLACK"/"BROWN"  "PRO ## Black	102
			Icon color: Monochrome	103
			Battery icon/Antenna icon: Pattern 1	103
			Wake-up display: Wake up	102
	Display	Backlight (FEN) 70)	Lighting: ON Power saver mode: ON Light time: 120 seconds	104
			Charging: Standard	104
			Area: LCD+Keys	104
			Brightness: Auto setting	104
			Soft light: ON	105
		View blind	OFF	105

Main menu item	Sub-menu item	Lower sub-menu item	Setting	at purchase	Reference
Settings	Display	Color theme setting (1986)	"Purple" for body color "SILVER"  "Black" for body color "BROWN"	"Black" for body color "BLACK"	106
		Menu icon setting (1900)57)	"TGB-menu01" for body color "SILVER" "TGB-menu03" for body color "BROWN"	"TGB-menu02" for body color "BLACK"  PRO   Enlarge menu	106
		Private menu setting (-52)		cation, Voice recorder, Alarm, acter size, PC Movie, Schedule rd content, ToDo, Schedule, Alarm, ser, Character size, Personal data lock,	354
			FUNC Change BG image: Normal		355
		Desktop icon (63)	Guide (使いかたナビ)		112
		Private window (93)	ON Clock: Pattern 1 Orientation: Pattern 2 Brightness: Level 3 Called: ON Chaku-moji: OFF Mail: OFF i-Channel ticker: OFF Disp. connection: ON		103
		Font (wew 66)	Font 1		115
		Character size	Phonebook, Diale Mail, i-mode, Cha	lay, i-Channel ticker, Setting menu, ed/recv. calls: Large aracter input (Character size), Candid. disp. size): Extra large	115
		Select language (MEN) 15)	Japanese (日本語)		44
		Recv.mail/call at open	OFF		104
		Image quality	Dynamic		106
		LCD AI	ON		105
		Icons ((MEN) 36)		_	31

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Settings	Illumination	All illum. setting	-	109
		Illumination (@89)	Set color Body color "SILVER" Phone/Videophone/Mail/Chat mail/MessageR/MessageF: Color 9 Body color "BLACK" Phone/Videophone/Mail/Chat mail/MessageR/MessageF: Color 3 Body color "BROWN" Phone/Videophone/Mail/Chat mail/MessageR/MessageF: Color 1 PRO # All Color 3	110
			Set pattern: Standard Color setting: All Default	110 110
		Illumination in talk	OFF	110
		Miss/unread illum.	ON	110
		Music&Video ch illum.	OFF	110
		Illum, when folded	ON	110
		Hourly illumination	OFF	110
		MUSIC illumination	ON	110
		IC card illumination	ON	110
		Side key illumination	"Pattern D-3" for body color "SILVER" "Pattern A-3" for body color "BLACK" "Pattern B-3" for body color "BROWN" PRO µ Pattern A-3	110
		Check settings	_	110
	Kisekae		-	107
	Lock/Security	Self mode	Released	124
		Lock all	Released	122
		Personal data lock	Released	124
		IC card lock	Released	254
		Timer lock ON at close	All OFF	125
		Secret mode ( 40)	Released	127
		Secret data only (www 41)	Released	127
		Keypad dial lock	Released	126
		Reject unknown	Accept	130

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Settings	Lock/Security	Call setting w/o ID (MEN) 10)	All Accept	129
			Select ring tone: All Same as ring tone	
		Change security code (week)29)	0000	121
		UIM setting	_	122
		Scanning function	Set scan: All Valid	460
		IC lock(power-off)	Setting before OFF	254
	Call time/cost	Call data (60061)	Last call duration/Total calls duration: 0 seconds Last call cost: ¥**	358
			Calls reset/Cost reset:/:	
		Reset total cost&dura. (MENU 60)	_	359
		Notice call cost	OFF	359
			Max cost: ¥0 (when "Notice call cost" is set to "ON")	
			Method to alert: Icon (when "Notice call cost" is set to "ON")	
		CLR max cost icon	Auto reset setting: OFF (when "Notice call cost" is set to "ON")	000
	<b>a.</b> .			360
	Clock	Set time (@31)	Auto time adjust ON	45
		World time watch	OFF	46
		Summer time	OFF	46
		Auto power ON/OFF	All OFF	346
		Alarm setting	Alarm preferred	354
	Incoming call	Vibrator (1988) 54)	All OFF	96
		Manner mode set (west) 20)	Manner mode	99
			when "Original" is set	
			Record msg.: OFF Vibrator: ON Phone vol.: Silent  Mail vol.: Silent Alarm vol.: Silent VM tone: ON	
			Keypad sound: OFF Mic sensitiv.: Up LVA tone: OFF	
		Answer setting (MEN) 58)	Any key answer	65
		Setting when opened	All Keep ringing	66
		Record display set	All ON	126
		Disp. PH-book image	ON	103
		Disp. call/receive No.	Pattern 1	115
		Ring time (MEN)90)	Ring start time: OFF Start time: 1 second (when "Ring start time" is set to "ON")	130
			Missed calls display: Display	130
		Info notice setting (MEN) 65)	ON	111
		V-phone while packet	V-phone priority	78
		Auto answer setting (MENU)94)	OFF	363
1		1	Ring time: 6 seconds (when "Auto answer setting" is set to "ON")	

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Settings	Talk	Volume	Level 4	66
		Setting when folded (18)	End the call	66
		Set hold tone	On hold tone: Tone 1 Holding tone: JESU JOY OF MAN'S DESIRING	68
		Noise reduction (19976)	ON	62
		Quality alarm (600)75)	No tone	97
		Reconnect signal (MENU)77)	No tone	62
	Videophone	Visual preference	Normal	76
		Select image	On hold: Pre-installed Holding: Pre-installed	76
			Substitute image: Chara-den [男性 (Male)]	
			Record message: Pre-installed Preparing: Pre-installed  Movie memo: Pre-installed	
		Hands-free w/ V. phone	ON	76
		Voice call auto redial	OFF	77
		Notify switchable mode	_	77
		Reject videophone	OFF	130
	Feel settings	Feel * Talk	All OFF	108
	reel settings	Feel * Mail	All OFF	108
	Network setting	Prefix setting	WORLD CALL (009130010)	61
	Network setting	Int'l roaming	Network search mode: Auto	407
		int i roanning		407
		Int'l dial assist	Operator name display: Display ON Auto assist setting: ON	60
		int i diai assist	Country Code set.: Japan (81)	61
			IDD prefix setting: WORLD CALL (009130010)	61
		Status in the area	IDD prefix setting: WORLD CALL (009130010)	408
	Melody Call Setting	Status in the area	_	96
	, ,	Olds Issued	OFF -	126
	Other settings	Side keys guard		366
		Character input method	Input mode: All Checked Priority input method: Mode 1 (5-touch)	366
		((=)00)	Predict: ON	368
			Int.with secret: ON	368
		Battery	Charge sound: ON	97
		Pause dial ((MAN) 84)	Not stored	59
		Sub-address setting	ON	62
		Headset switch to call	OFF	363
		ricauser switch to call	OI I	303

Main menu item		Lower sub-menu item	Setting at purchase	Reference
Settings	Other settings	Voice settings	Auto voice dial: OFF	91
			Voice earphone dial: OFF	91
			Read aloud settings: OFF	344
			Read aloud volume: Level 4	345
			Read aloud speed: Normal	345
			Read aloud output: Speaker	345
			Read aloud valid set.: Normal	345
		USB mode setting	Communication mode	302
		Reset settings (1992)	-	364
		Initialize	-	364
		Software update	Set auto-update: Auto-update	455
			Date: Default Time: 3:00	
Data box N	My picture (www.46)		Pre-installed data only	273
			User created folder: None	
			Original animation: Not stored	279
			FUNC Edit picture Character stamp	278
			Character stamp  Character color: 16 Color, Black Font: Font 1 Character size: Standard size	
			FUNC Set display: All Released	274
			FUNC Positioning: Center	274
			FUNC Sort: By date 1	275
			FUNC Picture/Title name: Picture	275
			FUIC Display size: Normal	276
	MUSIC		No data	330
			User created folder: None	
			Display: Title + Image	330
			Volume: Level 12	331
			FUNC Sound effect	337
			Remaster: OFF Listening: OFF Equalizer: Normal	
	Music&Video Channe	I	No data	322
			Information of previously played program: None	322
			Display: Title + Image	322
			Volume: Level 12	323
			FUNC Play mode setting: Normal	324
			FUNC Sound effect	325
I			Remaster: OFF Listening: OFF Equalizer: Normal	

Melo:	oody (@16)		Pre-installed data only User created folder: None Playlist: Not stored Position memory: All Not stored Volume: Level 4  FINC Set @ motion: All Released  FINC Sort: By date †  FINC Listing: Title + Image  FINC Sound effect  Remaster: OFF Listening: OFF Equalizer: Normal	280 284 281 281 282 275 282 283
My d	ody (16)		Playlist: Not stored Position memory: All Not stored  Volume: Level 4  FUNC Set: 5 motion: All Released  FUNC Sort: By date †  FUNC Listing: Title + Image  FUNC Sound effect  Remaster: OFF Listening: OFF Equalizer: Normal	281 281 282 275 282
My d	ody (16)		Position memory: All Not stored  Volume: Level 4  FUNC Set (a) motion: All Released  FUNC Sort: By date †  FUNC Listing: Title + Image  FUNC Sound effect  Remaster: OFF Listening: OFF Equalizer: Normal	281 281 282 275 282
My d	ody (16)		Volume: Level 4  FUNC Set (a) motion: All Released  FUNC Sort: By date †  FUNC Listing: Title + Image  FUNC Sound effect  Remaster: OFF Listening: OFF Equalizer: Normal	281 282 275 282
My d	ody (16)		FINC Set & motion: All Released FINC Sort: By date † FINC Listing: Title + Image FINC Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	282 275 282
My d	ody (16)		FUNC Sort: By date †  FUNC Listing: Title + Image  FUNC Sound effect  Remaster: OFF Listening: OFF Equalizer: Normal	275 282
My d	ody (16)		FUNC Listing: Title + Image  FUNC Sound effect  Remaster: OFF Listening: OFF Equalizer: Normal	282
My d	ody (16)		FUNC Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	
My d	ody (🙉 16)		Remaster: OFF Listening: OFF Equalizer: Normal	283
My d	ody (MENU 16)		· ·	
My d	ody (MEN) 16)			284
My d	ody (MENU 16)		FUNC Change to full: Vertical display playback	284
My d	Day (MENU 16)		Pre-installed data only	290
			User created folder: None	290
			Playlist: Not stored	306
			FUNC Set as ring tone: All Released	291
			FUNC Sort: By date 1	291
	My documents		No data	312
Kisek			FUNC Sort: By date 1	275
Kisel			FUNC Listing: Image	313
	ekae Tool		Pre-installed data only	293
			FUNC Sort: By date †	275
			FUNC Listing: Image	293
Char	ra-den		Pre-installed data only	287
			FUNC Substitute image: 男性 (Male)	73
			FUNC Rec. Chara-den  Camera mode: Photo mode  Recording type: Video + voice  Recording quality: Normal	289
			PRO µ Not available  Full Display size: Fit in display	288
DC M	Movie		Position memory: All Not recorded	265
PCW	WIOVIE		Position memory: All Not recorded  Played history: No histories	265
			Volume: Level 12	
				264
			FUNC Listing: Title	267
			FUNC Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	267
			FUNC Display size: Actual size	267

Main menu item		Lower sub-menu item	Setting at purchase	Reference
Data box	Document viewer		-	316
	SD other files		-	301
LifeKit	Bar code reader	Scan code	-	149
	PRO μ Not available	Saved data	Not stored	152
	Receive Ir data (www79)	Receive	-	309
		Receive all	-	310
	SD-PIM	Phonebook	-	295
		Schedule	-	295
		Inbox	-	295
		Outbox	-	295
		Draft	-	295
		Text memo	-	295
		Bookmark	-	295
	Camera PRO μ Not available	Photo mode/ Movie mode	Photo mode: Stand-by (240 x 427)  Continuous mode: VGA (640 x 480)	145
	PhO μ Not available	Movie mode	Movie mode: QVGA (320 x 240)	
			FUNC File size setting: Mail restrict'n (L)	145
			FUNC Image quality: Fine	145
			Camera settings Shutter sound: Sound 1 Flicker correction: Auto	146
			Storage setting Store in: Phone Auto save set: OFF File restriction: File unrestricted	146
			FUNC Img. stabilizer: Auto	146
			Cont. shooting set. Continuous mode: Auto Shot interval: 0.5 second Shot number VGA (640 x 480)/CIF (352 x 288): 4 shots (Fixed) QVGA (240 x 320)/QCIF (176 x 144)/Sub-QCIF (128 x 96): 5 shots	146
			FUNC Display size: Actual size	147
			FUNC Icon: ON	147
		My picture	Same as "My picture" in "Data box"	420
		នី motion	Same as " a motion" in "Data box"	421
	Text reader	Scan text	-	152
	PRO μ Not available	Saved data	Not stored	153

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
LifeKit	Rec. msg/voice memo	, ,	Not recorded	72
	(MENU) 55)	Play/Erase VP msg.	Not recorded	72
		Record message setting	OFF	70
			Answer message: Japanese 1 (when "Record message setting" is set to "ON")	
			Ring time: 13 seconds (when "Record message setting" is set to "ON")	
		Voice memo	Not recorded	356
		Voice announce	Not recorded	96
	Voice recorder		FUNC File size setting: Mail restrict'n(L)	358
			FUNC Storage setting	358
			Store in: Phone Auto save set: OFF File restriction: File unrestricted	
	Data Security Service	Connect to Center	-	92
		Sent/recv. PB data list	No histories	92
		PB image sending	OFF	92
	Caller ID notification	Activate	_	47
	(MENU 17)	Check setting	_	47
	Voice mail	Play messages	_	377
		Activate	-	377
		Deactivate	_	377
		Set ring time	-	377
		Check setting	-	377
		Setting	-	377
		Check new messages	-	376
		Message notification	YES	377
		Erase icon	-	377
		Activate notice call	-	377
		Deactivate notice call	-	377
		Notice call status	-	377
	Call waiting	Activate	-	378
		Deactivate	-	378
		Check setting	-	378
	Call forwarding	Activate	-	380
		Deactivate	-	380
		Change forwarding No.	-	380
		Setting if fwd. No. busy	-	380
		Check setting	-	380

Main menu item		Lower sub-menu item	Setting at purchase	Reference
Service	Nuis. call blocking	Register caller	-	382
		Register selected No.	_	382
		Delete last entry	-	382
		Delete all entries	_	382
		Check No. of entries	_	382
	Caller ID request	Activate	_	382
		Deactivate	_	382
		Check setting	-	382
	2in1 setting		Deactivated Mode switching: Dual mode Stand-by display Dual mode: TGB-graphic03 B mode: TGB-graphic02 Set call/receive No.: Pattern 2 Ringtone set. for No. B Phone/Video-Phone: Pattern 4 Receive avoidance set. Mode link: Deactivated	387
Mı	Multi number	Set multi number	-	386
		Check setting	_	386
		Number setting	Not stored	386
		Set as ring tone	All Same as ring tone	386
	Arrival call act	1	Answer	384
	Set in-call arrival act	Activate	-	385
		Deactivate	-	385
		Check setting	-	385
	Remote control	Activate	_	385
		Deactivate	-	385
		Check setting	-	385
	Dual network	Dual network switching	-	383
		Check setting	-	383
	English guidance	Guidance setting	-	383
		Check setting	-	383
	Set Roaming guidance	Activate	-	408
		Deactivate	-	408
		Check setting	_	408

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Service	Additional service	Additional service	Not stored	393
		Additional guidance	Not stored	394
	Service numbers	ドコモ故障問合せ	_	384
		(DoCoMo repair counter)		
		ドコモ総合案内・受付	_	384
	05510555	(DoCoMo Information Center)		
	OFFICEED	Area display setting	-	393
		Activate forwarding	_	393
		Deactivate forwarding	_	393
		Check forwarding set.	_	393
	Chaku-moji	Create message	Not stored	57
		Message disp. settings	Calls with callerID	58
		Sent messages	No records	58
		Prefer Chaku-moji	OFF	58
Phonebook	Add to phonebook	Phone	Not stored	80
		UIM	-	80
	Search phonebook	All?	-	85
		Reading?	-	85
		Group?	_	85
		Memory No.?	_	85
		Name?	FUNC Sort: Reading order	88
		Phone number?	FUNC Sort: Reading order	88
		Mail address?	FUNC Sort: Reading order	88
		2-touch dial?	_	86
	UIM operation	Сору	_	361
		Delete	_	361
	Dialed/recv. calls (Max)24)	Dialed calls	No records	55
	21410471001104110 (()217		FUNC Sent address: No records	209
		Received calls	No records	55
			FUNC Received address: No records	209
	Own number (www)0)		Not stored (except "Own number" for Number A)	355
	Group setting		Func Edit group	85
	Circup setting		Group name: Group 01 to 19 (except inside the UIM) Settings: None	- 65

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference				
Phonebook	Restrictions	Restrict dialing	All Released	129				
		Call rejection	All Released	129				
		Call acceptance	All Released	129				
		Call forwarding	All Released	129				
		Voice mail	All Released	129				
	Phonebook settings	Character size	All Standard	116				
	(MENU) 26)	Voice dial setting	Not stored	90				
		Mail group	Not stored					
			FUNC Edit group name: Mail group 1 to 20	212				
		Chat group	Not stored	223				
			FUNC Edit group name: Group 1 to 5	223				
		Forwarding image	ON	310				
	No. of phonebook	-	-					
	Alarm (wew)44)		Not stored	346				
			Alarm: All OFF	346				
	Schedule (www45)		Not stored	349				
			Monthly display/Weekly display: Monthly display					
			FUNC Customize holiday Sunday: Red Saturday: Blue Monday - Friday: Default	351				
	ToDo (MRN)95)		Not stored	353				
			FUNC Category display: All	353				
			FUNC Sort/Filter: By entered time	353				
	Text memo (MENU)42)		Not recorded	360				
	Calculator (www 85)		-	360				
	Guide		-	37				
	Common phrase/dic.	Common phrases	All Default	371				
	(MENU 38)	Own dictionary	Not stored	372				
		Download dictionary	Pre-installed data only	373				
			FUNC Set dictionary: All Valid	373				

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
MUSIC	MUSIC Player		No data	329
			Playlist: Not stored	337
			Information of previously played music file: None	329
			Display: Title + Image	330
			Volume: Level 12	331
			FUNC Play mode setting: Normal	334
			FUNC Sound effect	337
			Remaster: OFF Listening: OFF Equalizer: Normal	
	Music&Video Chann	el	Same as "Music&Video Channel" in "Data box"	420
Osaifu Keitai	IC card content		Pre-installed i-oppli programs only	232
	DCMX		_	241
	ToruCa		No data	249
			User created folder: None	
			FUNC Sort: By date 1	252
	IC card lock set.	IC card lock	Released	254
		IC lock(power-off)	Setting before OFF	254
	Settings	Receive ToruCa	Accept	253
		Receiving display	ON	253
		Check same data	ON	253
		Auto reading	Accept	253
	Search by 🖁 -mode		_	169
Others	Clock display of Priv	/ate window	Icons and time	31
	Redial		No records	55
	Public Mode (Drive I	Mode)	Released	68
	Manner mode		Released	98
	Videophone		FUNC Backlight: Constant light	75
	Photo-sending		FUNC Image size: QCIF (176 x 144)	145
		shoot/send still images.		
	Character input		FUNC Char. input/dict.	370
			Learned words: Not stored	
			Candid. disp. size: Standard	
			Candidate display: ON	
			Character set time: OFF	
			2/NIKO-touch guide: ON	

# List of Characters Assigned to Keys (5-touch Input Method)

Display Key	abc	123	漢	tt
1	@ _/: ~ *2 *1 1	1	あいうえおぁぃぅぇぉ	アイウエオァィゥェォ
2	abc ABC 2	2	かきくけこ	カキクケコ
3	defDEF3	3	さしすせそ	サシスセソ
4	ghi GH 14	4	たちつてとっ	タチツテトッ
5	jkIJKL5	5	なにぬねの	ナニヌネノ
6	mnoMNO6	6	はひふへほ	ハヒフへホ
7	pqrsPQRS7	7	まみむめも	マミムメモ
8	tuv⊤∪∨8	8	やゆよゃゅょ	ヤユヨャュョ
9	wxyzWXYZ9	9	らりるれろ	ラリルレロ
0	0 □ (space)	0	わをんゎー □ (space)	ワヲンワ※1ー □ (space)
*	.ne.jp .co.jp .com http://www. https://www. @docomo.ne.jp	*	* * **3	••
#	, !?¥& () * #"' =^+;	#	· · ! ?	·• ·!?

<sup>\*1:</sup> Displayed when entering the character in full pitch.

<sup>※2:</sup> Displayed when entering the character in half pitch.

<sup>\*\*3:</sup> Displayed when entering characters consecutively.
If you press (\*\*) after fixing a character, pictographs are displayed.

<sup>•</sup> If you press after entering a character, characters can be scrolled in the reverse order.

<sup>•</sup> After entering hiragana, katakana, or alphabetic characters, you can switch uppercase and lowercase characters by pressing ( ...)

<sup>•</sup> You can enter "+" by pressing and holding O for at least one second in Numeral input mode.

## **List of Characters Assigned to Keys (2-touch Input Method)**

#### Kanji/Hiragana input mode

<Uppercase input mode>

					S	econ	d di	git			
			2	3	4	5	6	7	8	9	0
	1	あ	い	ń	え	お	Α	В	С	D	Е
	2	か	き	<	け	Ŋ	F	G	Н	-	L
	3	さ	U	す	Ħ	そ	Κ	L	М	Ν	0
ä	4	た	5	$\cap$	7	۲	Р	Q	R	S	Τ
First digit	5	な	C	ぬ	ね	の	U	V	W	Χ	Υ
Firs	6	は	$\mathcal{O}$	ıζı	^	ほ	Ζ	?	!	ļ	/
	7	ま	み	ť	め	ŧ	¥	&			
	8	ゃ	(	ゆ	)	አ	*	#		8	
	9	5	b	る	n	ろ	1	2	3	4	5
	0	Ą	を	Ь	*	۰	6	7	ω	O)	0

#### Katakana input mode

<Uppercase input mode>

					S	econ	ıd di	git			
		1	2	3	4	5	6	7	8	9	0
	1	7	1	ġ	Ι	t	Α	В	C	D	Е
	2	力	+	Ź.	Ţ		F	G	Н	1	J
	3	Ħ	ý	Z	t	y	K	L	М	N	0
ij	4	g	Ŧ	ŋ	Ŧ	1	Р	Q	R	S	Τ
First digit	5	t	Ξ	X	ネ	1	U	V	W	χ	Υ
Ë	6	Л	Ł	7	Λ	$^{\dagger}$	Z	?		-	/
	7	7	111	Ь	Х	ŧ	¥	3		<b>a</b>	
	8	7	(	1	)	П	*	#		€	
	9	Ē	IJ	Jλ	V		1	2	3	4	5
	0	7	Ŧ	y	*		6	7	8	9	0

#### Alphabet input mode

_					Seco	ond o	digit					
	`		1	2	3	4	5	6	7	8	9	0
		1	-	\$	%	,	+	a	b	C	d	е
		2	,		:	- ;	<	f	g	h	i	j
		3	=	>	@	[	]	k		m	n	0
	git	4	^	-	' <b>%1`%2</b>	-		р	q	ſ	S	t
	First digit	5	}	-*1-**2				U	V	W	χ	у
	Fire	6						Z	?	ļ	-	/
		7						¥	&			
		8		(		)		*	#			
		9						1	2	3	4	5
1		0						6	7	8	9	0

- : Switches between uppercase input mode and lowercase input mode.
- \*1: Displayed when entering characters in full pitch.
- ※2: Displayed when entering characters in half pitch.

#### <Lowercase input mode>

					S	econ	ıd di	git			
		1	2	3	4	5	6	7	8	9	0
	1	あ	い	ń	え	お	а	b	С	d	е
	2						f	g	h	i	j
	3						k	-	m	n	0
ij	4			U			р	q	r	S	t
t di	5						u	٧	w	Х	у
First digit	6						Z				
	7										
	8	ゃ		Ø		ょ					
	9										
	0	わ			`	0					

## <Lowercase input mode>

					S	econ	d di	git			
`		1	2	3	4	5	6	7	8	9	0
	1	7	1	ġ	I	ŧ	а	b	С	d	9
2							f	g	h	i	j
3							k		E	n	0
git	4			ŋ			р	q	r	S	t
First digit	5						U	V	W	χ	у
Firs	6						Z				
	7										
	8	ħ		1		3					
	9										
	0	9∦1									

#### Information

- A space is entered if you press keys that correspond to a blank where no character is assigned.
- In Kanji/Hiragana or Katakana input mode, you can enter " \* " and " ° " also by pressing ★ just after entering a character. For " \* ", press ★ once. For " ° ", press ★ twice.
- You can enter "+" by pressing and holding O for at least one second in Numeral input mode.

# List of Characters Assigned to Keys (NIKO-touch Input Method)

### Kanji/Hiragana input mode

<Lowercase input>

					S	econ	ıd di	git			
		1	2	3	4	5	6	7	8	9	0
	1	あ	い	う	え	お		-	@	_	1
	2	か	き	<	け	Z		а	b	С	2
	3	さ	U	す	せ	そ		d	е	f	3
Ħ	4	た	ち	つ	て	۲	つ	g	h	i	4
d.	5	な	ľ	ぬ	ね	の		j	k	ı	5
First digit	6	は	Ŋ	ıζı	>	Œ		m	n	0	6
	7	ま	み	む	め	も	р	q	r	S	7
	8	せ	Ф	አ	や	Ø	ょ	t	u	٧	8
	9	5	b	る	れ	ろ	w	х	у	Z	9
	0	わ	を	Ь		0	_		!	?	0

#### Katakana input mode <Lowercase input>

					S	econ	ıd diç	git			
1		1	2	3	4	5	6	7	8	9	0
	1	7	1	ġ	I	ŧ		-	@	-	1
	2	力	+	2	Ţ			a	b	С	2
	3	Ħ	ý	λ	t	y		d	е	f	3
ij	4	9	Ŧ	IJ	Ŧ	1	ŋ	g	h	i	4
First digit	5	t	Ξ	X	ネ	J		j	k		5
Files	6	Л	Ł	7	Λ	ホ		m	n	0	6
	7	7	111	Д	Х	ŧ	р	q	r	S	7
	8	7	1	3	Þ	1	П	t	U	٧	8
	9	j	IJ	Jλ	V		W	χ	у	Z	9
	0	7	Ŧ	ン		۰	-		!	?	0

#### Information

- A space is entered if you press keys that correspond to a blank where no character is assigned.
- You can enter "+" by pressing and holding ① for at least one second in Numeral input mode.

#### <Uppercase input>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	ń	え	お					
	2	カ			ケ			Α	В	С	
	3							D	Е	F	
	4			つ			つ	G	Н	I	
	5							J	K	L	
	6							М	Ν	0	
	7						Р	Q	R	S	
	8	ゃ	ゆ	ょ	ゃ	ゆ	ょ	Т	U	٧	
	9						W	Х	Υ	Z	
	0	わ									

Second digit

#### <Uppercase input>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	7	1	ġ	I	1					
	2							Α	В	C	
	3							D	Е	F	
	4			ŋ			ŋ	G	Н	-	
	5							J	K	L	
	6							M	N	0	
	7						Р	Q	R	S	
	8	Þ	1	3	Þ	1	3	T	U	٧	
	9						W	χ	Υ	Z	
	0										

When "Read aloud settings" is set to "ON", symbols are read aloud.

Symbol	Voice guidance
,	_
۰	_
,	コンマ*1
	ドット※1
	コンマ*1 ドット*1 テン コロン
: : ?	コロン
:	ヤミコロン
?	ギモンフ*1
!	ギモンフ*1 カンタンフ*1 ダクテン
*	ダクテン
۰	ハンダクテン
,	-
	-
	ウムラウト
	ヤマガタキゴウ*1 オーバーライン アンダーライン
	オーバーライン
	アンダーライン
\	_
1"	_
7	-
2	_
//	_
仝	ドウ
4	_
- \	シメ
0	ゼロ
_	チョーオン*2
_	ダッシュ
-	ハイフン
	スラッシュ バックスラッシュ
\	バックスラッシュ
~	カラ*3

Symbol	Voice guidance
	_
	タテセン*1
	テンテンテン
	テンテン
,	_
,	アポストロフィ※1
"	-
	インヨウフ*1
(	カッコ
)	トジカッコ
(	カッコ
)	トジカッコ
[	カッコ
]	トジカッコ
{	カッコ
}	トジカッコ
<	カッコ
>	トジカッコ
<	カッコ
) [	トジカッコ
Γ	カギカッコ
	トジカギカッコ
Γ	カギカッコ
J	トジカギカッコ
[	カッコ
]	トジカッコ
+	プラス
-	マイナス※4
±	プラスマイナス
×	カケル
÷	ワル
=	イコール

Symbol	Voice guidance
	ノットイコール
<i>≠</i> <	ショーナリ
>	ダイナリ
≦	ショーナリイコール
≧	ダイナリイコール
∞	ダイナリイコール ムゲンダイ
	ユエニ
₹1	オス
우	メス
0	7.
,	フン
"	ビョー
$^{\circ}$	ドシー
¥	エン
\$	ドル
¢	セント
£	ポンド
%	パーセント
#	イゲタ
.8	アンド
*	アスタリスク
@	アットマーク
§	セクション
☆	ホシ
*	クロホシ
0	マル
* O O	クロマル
	ニジューマル
$\Diamond$	ヒシガタ
▼	クロヒシガタ
	シカク
	クロシカク

Symbol	Voice guidance
$\triangle$	サンカク
△ ▲	クロサンカク ギャクサンカク
$\nabla$	ギャクサンカク
▼	クロギャクサンカク
*	コメジルシ ユービンバンゴー
<ul> <li>∓</li> <li>←</li> <li>↑</li> <li>↓</li> <li>∈</li> </ul>	ユービンバンゴー
<b>→</b>	ミギヤジルシ
<b>←</b>	ヒダリヤジルシ
1	ウエヤジルシ
1	シタヤジルシ
=	ゲタキゴー
	ゾクスル
∍	フクム
⊆	フクム ブブンシューゴー ブブンシューゴーフク
⊇	ブブンシューゴーフク ム
	シンブブンシューゴー
⊃	シンブブンシューゴー フクム
U	ガッペー
Λ	キョーツー
0 0 ^ V	オヨビ
V	マタワ
_	ヒテー ナラバ ドーチ
$\Rightarrow$	ナラバ
↔	ドーチ
$\forall$	スベテノ
3	アル
	カク
	スイチョク
∂	ラウンドディー

Symbol	Voice guidance
∇	ナブラ
=	ゴードー ニアリーイコール
÷	ニアリーイコール
« »	ショーナリショーナリ ダイナリダイナリ
>>	ダイナリダイナリ
$\sqrt{}$	ルート
∞ ∾	ソージ
œ	ヒレー
- ::	ナゼナラバ
∵ ∫ ∬ Å	インテグラル ダブルインテグラル
J	ダブルインテグラル
	オングストローム
‰	パーミル
#	シャープ
ь ,> †	フラット オンプ
Þ	オンプ
†	ダガー
‡	ダブルダガー
1	ダンラクキゴー
	マル
ゐ	1 I 1
ゑ	I
ヰ	1
ヱ	I
ヴ	ヴ
カ	エ ヴ カ ケ
ケ	ケー・・
A	アルファ
ア カ ケ A B Γ	ベータ
Г	カンマ
	ベータ ガンマ デルタ イプシロン
Е	イブシロン

Symbol	Voice guidance
Z	ゼータ
Н	イータ
Θ	シータ
- 1	イオタ
Κ	カッパ
^	ラムダ
М	ミュー
Ν	ニュー
Ξ Ο	グザイ
0	オミクロン
П	パイ
Π P Σ T	
Σ	シグマ
	タウ
Υ	ユプシロン
θ	ファイ
Χ	カイ
Ψ	プサイ
Ω	オメガ
α	アルファ
β	ベータ
γ	ガンマ
δ	デルタ
ε	イプシロン
ζ	ゼータ
η	イータ
	シータ
l	イオタ
К	カッパ
λ	ラムダ
μ	ミュー
V	ニュー
ξ	グザイ
0	オミクロン
π	パイ
ρ	

Symbol	Voice guidance
σ	シグマ
T	タウ
U	ユプシロン
Φ	ファイ
	カイ
χ ψ	プサイ
ω	オメガ
A	アー
Б	ベー
В	ヴェー
Γ	ゲー
Д	デー
Ë	イェー
	3-
Ж	ジェー
3	ゼー
И	イー
Й	イークラトコエ
K	カー
Л	エリ
М	エム
Н	エヌ
0	オー
П	~-
Р	エル
С	エス
Т	テー
У	ウー
Φ	エフ
Χ	/\-
Ц	ツェー
Ч	チェー
Ш	シャー
Щ	シチャー
Ъ	ツボルディーズナーク
Ы	ウイ

Symbol	Voice guidance
Ь	ミャーフィーズナーク
Э	エー
Ю	ユー
Я	ヤー
а	アー
б	~*—
В	ヴェー
Γ	ゲー
Д	デー
е	イェー
ë	ı I
ж	ジェー
3	ゼー
И	イー イークラトコエ
Й	イークラトコエ
K	カー
Л	エリ
М	エム
Н	エヌ
0	オー
П	~-
р	エル
С	エス
Т	テー
У	ウー
ф	エフ
Х	//-
Ц	ツェー
Ч	チェー
Ш	シャー
Щ	シチャー
Ъ	ツボルディーズナーク
Ы	ウイ
Ь	ミャーフィーズナーク
9	エー
Ю	ユー

Symbol	Voice guidance
Я	ヤー
_	1
Г	1
7	_
L	_
-	_
_	
4	1
	_
+	
_	1
1	_
г	
٦	
_	1
L	
F	_
_	1
4	
_	
+	
F	
_	
4	
_	
+	
-	-
т	ı
4	
工	_
+	
1	マルイチ
2	マルニ
3	マルサン

Symbol	Voice guidance
4	マルヨン
(5)	マルゴ
6	マルロク
7	マルナナ
8	マルハチ
9	マルキュー
10	マルジュー
11)	マルジューイチ
12	マルジューニ
(13)	マルジューサン
(14)	マルジューヨン
(15)	マルジューゴ
16	マルジューロク
17)	マルジューナナ
18	マルジューハチ
19	マルジューキュー
20	マルニジュー
I	イチ
П	Ξ
Ш	サン
IV	ヨン
V	ゴ
VI	ロク
VII	ナナ
VIII	ハチ
IX	キュー
Х	ジュー
ξ <sub>y</sub>	ミリ
*	+0
セン チ	センチ
トル	メートル
グラム	グラム
ь >	トン
アール	アール
ヘク タール	ヘクタール
トル トル	リットル

Symbol	Voice guidance	Symbol	Voice guidance
ワッ	ワット	km	キロメートル
加	カロリー	mg	ミリグラム
ドル	ドル	kg	キログラム
セン	セント	CC	シーシー
パーセント	パーセント	mi	ヘーホーメートル
JEN EU	ミリバール	平成	ヘーセー
%− ÿ	ページ	*	-
mm	ミリメートル	*	-
cm	センチメートル	No.	ナンバー

Symbol	Voice guidance
KK.	ケーケー
TEL	デンワ
Œ	マルウエ
<b>(H)</b>	マルナカ
ூ	マルシタ
ケ	マルヒダリ
<b>(5)</b>	マルミギ
(株)	カッコカブ
(有)	カッコユー

Voice guidance
カッコダイ
メージ
タイショー
ショーワ
ニアリーイコール
ゴードー
インテグラル
ファイ
シグマ

Symbol	Voice guidance
$\sqrt{}$	ルート
$\perp$	スイチョク
_	カク
L	チョッカク
Δ	サンカッケー
-:-	ナゼナラバ
Π	キョーツー
U	ガッペー

- %1 Does not read aloud if it is not for a URL or mail address.
- \*2 When it follows a hiragana, katakana, or kanji character, the ending of the character immediately before it is read aloud as a long vowel.
- \*3 When it follows a hiragana or katakana character, the ending of the character immediately before it is read aloud as a long vowel.
- ※4 Reads it aloud "ハイブン (hyphen)" if it is for a URL or mail address.

# Information

• Special symbols "①" through "U" might not be correctly displayed if they are sent to mobile phones which do not support i-mode or personal computers. Further, you cannot enter special symbols of into the text of SMS messages, and they are replaced by half-pitch spaces.

# **Symbol Candidate List**

On the Character Entry (Edit) display, enter "きごう" to convert it to bring up symbol candidates. Further, you can enter characters listed below to convert them into respective symbols.

Input	Conversion
おなじ	<i>11 \( \dag{\pi} \)</i>
から	~
かんま	,
こんま	,
たてせん	
てんてん	
り一だ	
しめ	×
かっこ	() ()
たす	+
ひく	_

Input	Conversion
ぷらすまいなす	±
かける	×
わる	÷
いこーる	=
ふとうごう	<>≦≧
しょうなり	<
だいなり	>
しょうなり	≤
いこーる	
だいなり	≥
いこーる	=
むげんだい	∞
おす	7

Input	Conversion
めす	우
ならば	$\Rightarrow$
どうち	⇔
にありいこーる	÷
ちいさい	«
おおきい	>>
るーと	$\sqrt{}$
Ľ.	° °C
ふん	,
びょう	"
どる	\$
せんと	¢
ぽんど	£

Input	Conversion
せつ	§
ほし	*☆★
あっと	@
まる	. ○●
	00
しかく	♦♦□■
さんかく	△▲▽▼
こめ	*
ゆうびん	₸
やじるし	<b>→</b> ← ↑ ↓
うえ	1
した	1
みぎ	<b>→</b>

Input	Conversion
ひだり	<b>←</b>
あすたりすく	*
おんぐすと ろーむ	Å
しゃーぷ	#
ふらっと	Ь
おんぷ	♪
だがー	†
だぶるだが一	‡
だんらく	¶
おーむ	Ω
でんわ	TEL

# **Pictograph List**

When "Read aloud settings" is set to "ON", pictographs are read aloud.

Picto- graph	Voice guidance
•	ハートマーク
, Wall	ユレルハートマーク
43	シツレンマーク フクスーハート
w.	マーク
03	ワーイマーク
×	プンプンマーク
$\stackrel{\sim}{\sim}$	ガクーマーク
~~	モウヤダーマーク
××	フラフラマーク
D	ルンルンマーク
⊞	オンセンマーク
♦	カワイイマーク
*	チュッマーク
÷.	ピカピカマーク
· <u>`</u> oʻ-	ヒラメキマーク
×	ムカッマーク
回	パンチマーク
•	バクダンマーク
22	ムードマーク
ZZZ	ネムイマーク
!	ビックリマーク
!?	ビックリハテナマーク
!!	ニジュービックリ マーク
$\Sigma_{\overline{\Delta}}$	ドーンマーク
20	アセアセマーク
U	アセタラーッマーク

Picto- graph	Voice guidance
=3	ダッシュマーク
***	ウーマーク
-9-	ウーンマーク
Ĵ	グッドマーク
J	バッドマーク
7	ミギナナメウエ ヤジルシマーク
7	ミギナナメシタ ヤジルシマーク
^	ヒダリナナメウエ ヤジルシマーク
<	ヒダリナナメシタ ヤジルシマーク
*	ハレマーク
$\approx$	クモリマーク
<del>•</del>	アメマーク
8	ユキマーク
4	カミナリマーク
<u>ම</u>	タイフーマーク
333	キリマーク
1	コサメマーク
Υ	オヒツジザマーク
8	オウシザマーク
$\sum$	フタゴザマーク
છ	カニザマーク
હ	シシザマーク
Me:	オトメザマーク
Ω	テンビンザマーク

Picto- graph	Voice guidance
M∙	サソリザマーク
7	イテザマーク ヤギザマーク
13	ヤギザマーク
m	ミズガメザマーク
€	ウオザマーク
00	スポーツマーク
8	ヤキューマーク
4	ゴルフマーク テニスマーク
,00	テニスマーク
⊛	サッカーマーク
ī	スキーマーク
100	バスケットマーク
<b>⊗</b>	モータースポーツ マーク ページャマーク デンシャマーク チカテツマーク シンカンセンマーク
₩.	ページャマーク
具	デンシャマーク
М	チカテツマーク
M €	シンカンセンマーク
4	セダンマーク
49	アールブイマーク
鼻	バスマーク
Ð	フネマーク
<b>ፌ</b>	ヒコーキマーク
<b></b>	イエマーク ビルマーク
<b>   </b>	ビルマーク
Î	ユービンキョク マーク
•	ビョーインマーク

Picto- graph	Voice guidance
BK	ギンコーマーク
<u>ATM</u>	エーティーエム マーク
H	ホテルマーク
<u>cvs</u>	コンビニマーク
<u>GS</u>	ガソリンスタンド マーク
®	チューシャジョー マーク
	シンゴーマーク
ėlė	トイレマーク
49	レストランマーク
	キッサテンマーク
₩	バーマーク
	ビールマーク
=	ファーストフード マーク
a	ブティックマーク
<i>∠</i>	ビヨーインマーク
9	カラオケマーク
90	エーガマーク
K	ユーエンチマーク
ß	オンガクマーク
7	アートマーク
8	エンゲキマーク
À	イベントマーク
	チケットマーク
2	キツエンマーク

Picto- graph	Voice guidance
<b>@</b>	キンエンマーク
<u>©</u>	カメラマーク
	カバンマーク
S)	ホンマーク
Ø	リボンマーク プレゼントマーク
æ	プレゼントマーク
ili	バースデーマーク
	デンワマーク
	ケータイデンワ マーク
fiii	メモマーク
₩ 8 🗇 📦	テレビマーク
8	ゲームマーク
<b>@</b>	シーディーマーク
	ハートマーク
•	スペードマーク
*	ダイヤマーク
•	クラブマーク
90	メマーク
3	ミミマーク
8	グーマーク
₩.	チョキマーク
	パーマーク
Ť	アシマーク
Ø	クツマーク
\$ 5.	メガネマーク
Ġ.	クルマイスマーク

Picto- graph	Voice guidance
•	シンゲツマーク
0	カケヅキマーク
0	ハンゲツマーク
•	ミカヅキマーク
0	マンゲツマーク
∑:•	イヌマーク
13	ネコマーク
4	リゾートマーク
舎	クリスマスマーク
П	カチンコマーク
8	フクロマーク
<b>ひ</b> (公 TE <b>1</b>	ペンマーク
B	ヒトカゲマーク
т	イスマーク
ว	ヨルマーク
soon	スーンマーク
ŧŝ	オンマーク
end	エンドマーク
0	トケーマーク
₩	デンワヘマーク
₩	メールへマーク
FÁX	ファックスへマーク
ô	アイモードマーク
	アイモードマーク
D	メールマーク
Ð	ドコモテーキョーマーク

Picto- graph	Voice guidance
<b>®</b>	ドコモポイント マーク
丨	ユーリョーマーク
PREE	ムリョーマーク
<u>1</u>	アイディーマーク
₽	パスワードマーク
4	ツギアリマーク
CL	クリアマーク
ď	サーチマーク
NEW	ニューマーク
⊈	イチジョーホー マーク
<u>88</u>	フリーダイヤル マーク
#	シャープダイヤル マーク
<b>@</b>	モバキューマーク
1	シカクイチ
2	シカクニ
3	シカクサン
4	シカクヨン
5	シカクゴ
6	シカクロク
7	シカクナナ
8	シカクハチ
9	シカクキュー
	シカクゼロ

Picto- graph	Voice guidance
OK.	ケッテーマーク
ΩĽ	アイアプリマーク
	アイアプリマーク
	ティーシャツマーク
۵	ガマグチサイフマーク
B	ケショーマーク
A.	ジーンズマーク
A.	スノボマーク
8	チャペルマーク
0.	ドアマーク
Ð	ドルブクロマーク
귝	パソコンマーク
**	ラブレターマーク
1	レンチマーク
	エンピツマーク
ш	オーカンマーク
9	ユビワマーク
$\mathbf{\Sigma}$	スナドケーマーク
do	ジテンシャマーク
ő	ユノミマーク
O	ウデドケーマーク
000	ムムマーク
33	ホッマーク
200	ヒヤアセマーク
	ヒヤアセマーク
)~c	プクッマーク

Picto- graph	Voice guidance
-:	ボケーッマーク
80	ラブラブマーク
4	オーケーマーク
뜐	アッカンベーマーク
Ç	ウィンクマーク
4	ウレシイマーク
);	ガマンマーク
13	ネコマーク
33	ナキマーク
~8	ナミダマーク
NG	エヌジーマーク
0	クリップマーク
©	コピーライトマーク
TM	トレードマーク
<u>.</u> \$	ハシルヒトマーク
<b>8</b> 8	マルヒマーク
ф	リサイクルマーク
®	レジストレッドマーク
$\triangle$	キケンマーク
禁	キンシマーク
空	クーシツマーク
合	ゴーカクマーク
潤	マンシツマーク
<b>‡</b>	サユーマーク
t	ジョーゲマーク
633	ガッコーマーク

	Picto- graph	Voice guidance
	20	ナミマーク
	$\Delta$	フジサンマーク
	36	クローバーマーク
ל	₹.	サクランボマーク
		チューリップマーク
	3	バナナマーク
	ě	リンゴマーク
	90	ワカバマーク
	*	モミジマーク
	£263a	サクラマーク
		オニギリマーク
7		ショートケーキ マーク
	25	トックリマーク
	555	ドンブリマーク
		パンマーク
	Ò	カタツムリマーク
ク	Ç	ヒヨコマーク
	2	ペンギンマーク
	<b>⊘</b>	サカナマーク
	2	ウマイマーク
	20	ウッシッシマーク
	8	ウママーク
		ブタマーク
	₽	ワイングラスマーク
	60	ゲッソリマーク

# Information

- Pictographs are all counted as full-pitch characters.
- Pictographs are not correctly displayed if they are sent to mobile phones which do not support i-mode or to personal computers. Further, the pictographs from " \( \tilde{\su} \)" are correctly displayed only when sent to i-mode phones which support those pictographs.

# **Common Phrase List**

No.	Expressions
"Gree	tings" folder
1	Good morning
2	Good afternoon
3	Good evening
4	Good night
5	I'm going
6	Have a nice day
7	I'm back
8	Welcome back
9	I'm sorry
10	Good-bye
"Busi	ness" folder
1	Your cooperation is greatly appreciated
2	We always appreciate your business
3	Please send my best regards to everyone
4	Thank you very much for the other day
5	How's everything?
6	I will be late
7	See you later
8	All right
9	Check urgently!
10	Call me

No.	Expressions
	net" folder
1	@docomo.ne.jp
2	.ne.jp/
3	.co.jp/
4	.or.jp/
5	.ac.jp/
6	.com/
7	http://www.
8	https://www.
9	www.
10	.html
	ey 1" folder
1	(**0**)/
2	♪(¯▽¯)ノ″
3	(´Д`)/~~
4	<(;)>
5	
6	0(≧∇≦)0
7	( p_q)エ-ン
8	( T_T)
9	<b>Σ</b> (¯◇¯∗) <b>⊥</b> ェッ
10	(*≧m≦*)ププッ
	ey 2" folder
1	( ) ´ 0 ` )」オーイ
2	ツンツン(。° ー°)σ
3	ヾ(・ε・。)オイオイ
4	(・0・)ゞ了解!
5	(; ¬_¬) アヤシイ
6	ヾ(≧∇≦)〃ヤダヤダ
7	σ(¯∇¯ )
8	〈(`^´)〉エヘン
9	¬ (  ̄ー ̄) ┌ フッ
10	ー(・∀・)ー ブーン

# **Multiaccess Combination Patterns**

Communication event	Voice	e call	Videoph	one call	i-mode	i-mod	e mail	SM	ИS	i-appli	i-oppli software running		nmunication munication)	-	data nication
Communication status	Outgoing	Incoming	Outgoing	Incoming	Connecting	Sending	Receiving	Sending	Receiving	Outgoing	Outgoing	Sending	Receiving	Sending	Receiving
Voice call	△*1	△*2	×	×*3	0	0	△*5	0	△*5	×	×	0	△*5	×	× **3
Videophone call	×	× **3	×	×*3	×	×	×	×	△*5	×	×	×	×	×	× **3
i-mode	0	0	△*6	△*7	×	0	0	0	0	×	×	×	×	×	×
i-mode mail	0	0	△*6	△*7	0	×	×	×	∆*5*8	×	×	×	×	×	×
SMS	0	0	0	0	0	×	△*5*8	×	△*5	0	0	0	△*5	0	△*5
i-oppli <sup>®9</sup>	×	0	×	△*7	×	×	△*5	×	△*5	×	×	×	×	×	×
i-oppli software running	0	0	△*6	△*7	×	0	△*5	0	△*5	×	×	×	×	×	×
Packet communication (Data communication)	0	0	×	×*4	×	×	×	0	0	×	×	×	×*3	×	×
64K data communication	×	× **3	×	×*3	×	×	×	×	0	×	×	×	×	×	×*3

- O: Can start.
- △: Can start by condition.
- $\times$ : Cannot start simultaneously. The current communication continues (the started communication is rejected).
- \*1: If you have signed up for "Call waiting", you can make another call with the current voice call put on hold.
- \*2: In the condition of the maximum number of voice line+1, you can activate Voice Mail, Call Waiting, or Call Forwarding. (See page 376, page 378, and page 380)
- \*3: If you have signed up for "Call waiting", "Voice mail", or "Call forwarding", vou can answer an incoming call after finishing a call or communication. (See page 385)
- \*4: The call is recorded as a missed call in Received Calls.
- ※5: "

  ✓ (white)" appears to notify of incoming mail.
- \*6: i-mode communication is cut off, and you can make a call.
- %7: The FOMA phone works in accordance with the setting of "V-phone while packet".
- \*8: For i-mode mail and SMS, you can use a single line each at a time.
- \*9: This is the case for when you are upgrading or downloading an i-αppli program.

# **Multitask Combination Patterns**

When the functions in the same group ( not appear depending on the operation.

 $part \ in \ the \ table) \ conflict, the \ display \ for \ switching \ the \ active \ function \ appears. \ However, \ it \ might$ 

Started		Video		i-mode group Setting group			group	Tool group						
Function in operation	Voice call	phone	Mail	i-mode **1	i-oppli	Settings #2	Service	Data box *1	LifeKit #3	Phone book *4	Stationery	MUSIC *5	Osaifu- Keitai **5	Private menu <sup>*2</sup>
Voice call	×	×	0	0	×	0	○*6	×	○*7	0	○*8	×	0	0
Videophone call	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Mail	0	0	×	0	0	0	0	0	0	0	0	0	0	0
i-mode <sup>**1</sup>	0	0	0	×	×	0	0	0	0	0	0	0	0	0
i-oppli	0	0	0	×	×	0	0	0	0	0	0	×*9	0	0
Settings**2	0	0	0	0	0	×	×	0	0	0	0	0	0	0
Service	0	0	0	0	0	×	×	0	0	0	0	0	0	0
Data box*1*10	0	0	0	0	0	0	0	×	×	×	×	×	×	0
LifeKit <sup>*3</sup>	○*11	○*11	○*12	0	0	0	0	×	×	×	×	××13	×	0
Phonebook <sup>**4</sup>	0	0	0	0	0	0	0	×	×	×	×	0	×	0
Stationery	0	0	0	0	0	0	0	×	×	×	×	○*14	×	0
MUSIC <sup>*5</sup>	○*15	○*15	○*16	0	×*9	0	○*17	○*15*18	×*13	0	○*14	×	0	0
Osaifu-Keitai <sup>*5</sup>	0	0	0	0	0	0	0	×	×	×	×	0	×	0

- O: Can be activated simultaneously.
- X: Cannot be activated simultaneously.
- ※1: While a PDF file is displayed, the i-mode group is in use.
- \*2: You cannot use it depending on the function.
- \*3: You cannot use Multitask to start up "Receive Ir data" and "SD-PIM".
- \*4: You cannot use Multitask to start up "UIM operation".
- %5: The functions not belonging to the Tool group are included.
- %6: You cannot start up "Caller ID notification" during a call.
- \*7: LifeKit functions you can start up during a call are limited to "Bar code reader", still image shooting of "Camera", "Text reader", and "Data Security Service".
- ※8: Stationery functions you can start up during a call are limited to "Schedule", "ToDo", "Text memo", "Calculator", and "使いかたナビ (Guide)".
- $\ensuremath{\%} 9$  : Some i-oppli programs can be activated simultaneously with MUSIC.

- \*\*10: If you use Multitask to switch functions while you are using the Picture viewer (microSD memory card), i-motion player, Chara-den player, or Melody player, or while playing back a demo from "MUSIC" in Data Box, display or playback ends. You cannot switch functions while you are editing an i-motion movie.
- \*\*11: Playback/Recording stops when a call comes in while you are playing back "Record message", "Videophone record message", "Voice memo", or "Movie memo", or while recording "Voice memo". When a call comes in while you are scanning data using "Bar code reader" or "Text reader", the data being scanned is discarded.
- \*\*12: If you set "Receiving display" to "Alarm preferred" and a mail message comes in while you are scanning data using "Bar code reader" or "Text reader", the data being scanned is discarded.
- \*13: You can simultaneously start it with "Bar code reader", "Text reader", or "Camera". However, Play Background is not available.
- ※14: You cannot simultaneously start MUSIC with "使いかたナビ (Guide)".
- \*15: Play Background is not available.
- \*16: If you set "Receiving display" to "Alarm preferred" and a mail message comes in, the playback is suspended.
- \*17: You cannot use "2in1 setting" and "Chaku-moji".
- \*\*18: You cannot simultaneously start "MUSIC Player", "MUSIC", "Music&Video Channel", and "PC Movie".

# **Services Available with FOMA Phones**

Available services	Phone number
Directory assistance service (Charges apply: guidance fee + call fee)	(No prefix) 104
*Listed phone numbers only can be given.	(NO pielix) 104
Telegrams (Telegram charges apply)	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	City code of the desired area + 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charges apply)	(No prefix) 171
Collect calls (Charges apply: guidance fee + call fee)	(No prefix) 106

# Information

- When using the collect call (106), the recipient is charged a call fee and handling fee ¥90 (¥94.5 with tax) for each call. (As of December 2007)
- When using the directory assistance service (104), you are charged a guidance fee ¥100 (¥105 with tax) plus a call fee. For whom having weak eyesight or handicapped arms, the guidance is available charge free. For more details, dial 116 (NTT inquiry counter) from landline phones. (As of December 2007)
- This FOMA phone supports "Emergency Location Report". When you make an emergency call such as at 110/118/119, information about the place where you are dialing from (location information) is automatically notified to emergency-response agencies such as police stations. It might happen that your correct location is not detected by emergency-response agencies depending on the location you dialed or radio wave conditions.

When you do not notify your phone number by call such as by adding "184", your location information and phone number are not notified. However, when an emergency-response agency has judged that the location information and phone number should be detected because of emergency priority such as protection of human life, they might be notified regardless of your setting.

The region and timing "Emergency Location Report" is introduced vary depending on the preparation of respective emergency-response agencies.

# Information

- When you make a call at 110/119/118 from the FOMA phone, tell an operator that you are calling from a mobile phone and then precisely notify your phone number and actual location. Further, remain still while talking to prevent your call from being disconnected. Do not turn off the power immediately after the call, but instead make sure that your phone can receive calls for at least 10 minutes.
- You might not be connected to regional police/fire station depending on the area from where you call. If this happens, use public phones nearby or landline phones.
- If you use "Call Forwarding Service" for the landline phones and specify a mobile
  phone as the forwarding destination, callers may hear calling tone depending on
  the settings of the landline phone/mobile phone even when the mobile phone is
  busy or out of the service area, or the power is turned off.
- Note that the FOMA phone is not available to 116 (NTT inquiry counter), Dial Q2, Message Dial, and credit call services. (You can use auto credit call to the FOMA phone from landline phones or public phones.)

# Introduction of Options and Related Equipment

Combining various options with the FOMA phone, you can realize more versatile use from personal purpose to business purposes. Some products may not be dealt in depending on the area. For details, consult a handling counter such as a DoCoMo shop. For details on options, refer to the user's manuals of respective options and related equipment.

- · Battery Pack P17
- · Back Cover P24
- · FOMA AC Adapter 01/02\*1
- · FOMA AC Adapter 01 for Global use \*1
- · FOMA DC Adapter 01/02
- · FOMA Portable Charging Adapter 01
- · FOMA Dry Battery Adapter 01
- · Desktop Holder P26
- · FOMA USB Cable with Charge Function 01 \*\*2
- FOMA USB Cable<sup>※2</sup>
- FOMA Indoor Booster Antenna<sup>3</sup>
- · FOMA Indoor Booster Antenna (Stand Type) \*3
- · Carry Case S 01
- · In-Car Holder 01
- · Earphone/Microphone with Switch P001/P002\*4\*6
- Earphone Plug Adapter P001\*6
- · Flat-plug Earphone/Microphone with Switch P01/P02\*6
- · Flat-plug Stereo Earphone Set P01\*6
- · Bone conduction microphone/receiver \*6
- · In-Car Hands-Free Kit 01\*5
- · FOMA In-Car Hands-Free Cable 01
- · Earphone Plug Adapter for External connector terminal 01
- · Earphone Terminal P001
- %1 See page 41 and page 42 for charging batteries using AC adapter.
- %2 If you use a USB hub, the devices may not work correctly.
- %3 Use it in Japan only.
- \*4 Earphone Plug Adapter P001 is required.
- \*5 FOMA In-Car Hands-Free Cable 01 is required for USB connection/charging.
- %6 Earphone Plug Adapter for External connector terminal 01 is required.

# Introduction of Software for Playing Back Moving Images

To play back moving images (MP4 format file) using your personal computer, you need to have QuickTimePlayer (free) ver. 6.4 or higher (or ver. 6.3 + 3GPP) of Apple Computer Inc.

You can download QuickTime from the following web page: http://www.apple.com/jp/quicktime/download/ (Japanese only)

# Information

- For download, a personal computer connected to the Internet is required. You are charged a communication fee to download.
- For details such as operating environments, how to download, and how to operate, refer to the web page above.

# **Links with AV Equipment**

On the FOMA phone, you may be able to play back some moving images in ASF format, which are saved from another AV equipment to the microSD memory card. Also, you may be able to play back some moving images recorded with the FOMA phone on another AV equipment. For information about links with compatible AV equipment, refer to the following:

http://panasonic.jp/mobile/ (Japanese only)

# Inquiry Center for Links with Compatible AV Equipment

■ Panasonic Mobile Communications Customer Service Center

From landline phones: 000120-15-8729 From mobile phones or PHSs: 045-938-4023

Business hours: 9:00 a.m. to 5:00 p.m.

(Excluding Saturdays, Sundays, national holidays, and specified holidays)

• Make sure that you dial the correct number.

# **Troubleshooting**

 First of all, check to see if you need to update the software program and then update it if required. See page 454 for how to update software programs.

Problem	Check point	Reference
The FOMA phone does not turn on.	Make sure the battery is attached to the FOMA phone correctly.	40
(Cannot use)	<ul> <li>Make sure the battery is fully charged.</li> <li>If the mova is usable in Dual Network Service, the FOMA phone service is not available. Is the FOMA phone usable? For details, refer to "Mobile Phone User's Guide [Network Services]".</li> </ul>	41 383
Cannot dial by pressing numeric keys.	Make sure Keypad Dial Lock is deactivated.     Make sure Restrict Dialing is deactivated.     Make sure Lock All is deactivated.     Make sure Self Mode is deactivated.	126 128 122 124
Dial but cannot connect; a busy tone sounds.	Make sure the phone number contains a city code. Enter the phone number after you hear the dial tone. If " "" appears, move to a place where it disappears.	50 44
" prears and a busy tone sounds.	You may be out of the service area or weak radio waves are being received.	44
" 3" and "Lock all" are displayed and pressing keys are null.	This may be because Lock All is activated.	122
Pressing the side keys does not work when the FOMA phone is closed.	This may be because "Side keys guard" is set to "ON".	126
Alert beeps.	The battery runs short. You need to charge.	41

Problem	Check point	Reference
Cannot charge. (The Call/Charging	Make sure the battery is attached to the FOMA phone correctly.	40
indicator of the FOMA phone does not light, or it flickers.)	Make sure the power plug of the adapter is securely inserted into outlet.      Make sure the adapter and the FOMA phone is firmly connected. For AC adapter (option), make sure its connector is firmly connected to the FOMA phone or a desktop holder (option).	42
The display grows dark, showing nothing.	Make sure Power Saver Mode is deactivated.	104
Different ring tones sound for incoming mail.	This may be the mail from a party whose mail ring tone is set by the setting items in the Phonebook.  This may be the mail from a party stored in a	83 85
	group set with a mail ring tone by Group Setting.	
When a call or mail message comes in, the Call/Charging	<ul> <li>This may be the call or mail message from a party for whom you have set "Illumination/Mail illumination" by setting items in the Phonebook.</li> </ul>	83
indicator lights/ flickers differently.	<ul> <li>This may be the call or mail message from a party stored in a group set with "Illumination/ Mail illumination" by Group Setting.</li> </ul>	85
Images or melodies selected in the functions are not played back; they are played back at the default setting.	Make sure the UIM that was inserted when you obtained images or melodies is inserted.	38
Cannot count total calls cost.	Make sure that total calls cost accumulated on the UIM does not exceed the limit (about ¥16,770,000). Perform Reset Total Cost to return to ¥0.	359
Cannot perform data transfer	<ul> <li>Make sure that you do not use a USB hub. If you use a USB hub, the devices may not work correctly.</li> </ul>	_

# **Error Messages**

• "(numerals)" in error messages are the code sent from the i-mode Center for discriminating the error.

# Activating

··· Receive Option Setting is set to "OFF". Switch the setting to "ON" and try again. (See page 195)

# Activating keypad dial lock

···Keypad Dial Lock is activated. Release Keypad Dial Lock and try again, (See page 126)

# Activating mail security

# Cannot download

··· Mail Security is activated, so you cannot download. Deactivate Mail Security and try again. (See page 128, 204)

# Activating personal data lock

···Personal Data Lock is set. Release Personal Data Lock and try again. (See page 124)

# Activating personal data lock Send pre-installed substitute image

... During Personal Data Lock, a "Pre-installed" substitute image is sent.

# Activating record display OFF

···Record Display Set is set to "OFF". Switch the setting to "ON" and try again. (See page 126)

# Activating reject unknown

··· "Reject unknown" is set to "Reject". Set to "Accept" and try again. (See page 130)

# Activating ring time

··· "Ring time" is set to "ON". Set to "OFF" and try again. (See page 130)

# Address is not valid (451)

... You could not send the mail correctly. Check the address and try again. (See page 182, 224)

# All protected

# Cannot delete

··· All data items are protected, so cannot be deleted. Release the protection and try again. (See page 165, 205, 217)

# Another function is active

# Cannot connect

Another function is active

# Cannot operate

# Another function is active

# Cannot switch

··· The function is not available simultaneously in Multitask. End the functions not in use and try again. (See page 344)

## Authentication failed

··· An authentication error occurred

# Authentication type is not supported (401)

... Incompatible authentication type, so cannot be connected.

# Auto time adjust info is not received Unable to play

···You have not received the auto time adjust information, so could not play back the file with playback period or playback deadline.

## C

# Cannot compose because too large data

... The size of the shot image is too large to attach to i-mode mail.

## Cannot dial

... An error occurred, so you could not dial.

# Cannot display

··· Corresponding software program is running. End the software program and try again. (See page 231)

# Cannot edit message

... The attached file reaches 10,000 bytes, so you cannot enter the text.

# Cannot execute because of other tasks

···The function is not available simultaneously in Multitask. End the functions not in use and try again. (See page 344)

# Cannot recognize

... The text could not be scanned. Change Recognition Mode or NEGA/POSI Mode, and scan the text again. (See page 154)

# Cannot record

··· An error occurred, so you could not save.

# Cannot resend

# Send after edit

... The address is invalid or the text exceeds the size that can be entered, so you cannot re-send. Edit the text again and send. (See page 205)

# Cannot save

... The data could not be obtained from a site, so could not be saved

# Cannot save some attached files

... Full of images, so part of the images could not be stored into the Phonebook

# Cannot set this holiday

... The received holiday and already stored data are set to the same date, so you cannot store it.

# Cannot set this schedule

···The received schedule event and already stored data are set to the same date and time, so you cannot store it.

# Cannot start any more functions

···The maximum number of functions is already running using Multitask. End the functions not in use and try again. (See page 344)

# Cannot start because use mail folder

··· Corresponding software program is running. End the program and try again. (See page 231)

# Cannot use network transmission

··· "Network set" is set to "OFF". Set it to "ON" and try again. (See page 233)

# Certificate is rejected Certificate is rejected (tampered)

···You received an altered SSL/TLS certificate, so could not connect

C

# Check new message is set all OFF

···No check marks are placed to the items for "Set check new message". Put a check mark for the items to be checked and try again. (See page 214)

## Check SMS center selection

···The SMS Center is not correctly specified by SMS Center Selection. Specify the SMS Center and try again. (See page 227)

## Connection failed

- ···Radio waves are weak, so you cannot connect. Move to a place where radio waves are strong enough and try again.
- ...The destination address set by Host Selection is wrong, so you cannot connect to it. Check the setting and try again. (See page 173)
- ···You could not connect because of network trouble. Wait a while and try again.

## Connection failed (403)

... You cannot connect to a site or Internet web page.

# Connection failed (562)

···You could not connect because of network trouble. Wait a while and try again.

# Connection interrupted

···Disconnected from the personal computer during data communication.

# Connection is not valid

- ···The destination address set by Host Selection is not compatible, so you cannot operate. Check the setting and try again. (See page 173)
- ...The user certificate is being operated, so you cannot connect. Complete operating the user certificate and try again.

# Could not add

··· An error occurred, so you could not store.

#### D

# Data in IC card is full

## Delete service?

- ···This is displayed when the memory space within the IC card is short for downloading the i-αppli program that supports Osaifu-Keitai.
- that supports Osaifu-Keitai.
  Select "YES" to display the service names of Osaifu-Keitai already registered and the space within the IC card (in bytes). Check the area size for shortage, select the service to delete, start up the i-oppli program, and then delete it.

## Data is full

- ...The maximum number of anniversaries is stored.
  Delete unnecessary ones and try again.
  (See page 351, 352)
- ···The maximum number of holidays is stored. Delete unnecessary ones and try again.

  (See page 351, 352)
- ...The maximum number of holidays/anniversaries is stored. Delete unnecessary ones and try again. (See page 351, 352)
- ···The maximum number of Phonebook entries has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary Phonebook entries and try again, (See page 87)
- ... The maximum number of schedule events has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary schedule events and try again. (See page 351, 352)
- The maximum number of ToDo items has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary ToDo items and try again. (See page 354)

# Data is too long A part is deleted

... Characters for one (or plural) of address, subject, and text of the mail exceeded the maximum, so part of them was deleted.

# Data not applicable

···Received data has an error, so cannot be displayed or saved. The received data is discarded.

# Data size is too big to save

···The file exceeded the maximum storable size by setting "File restriction", so could not be set.

# Details cannot be saved

···The ToruCa detailed data was not supported, so was not saved.

## Downloaded data exists

# Cannot connect to network

···Save the PC movie on the Obtaining Completion display, and then close the Obtaining Completion display. (See page 263)

# Downloading interrupted

···Another function was running or an error occurred, so you could not download.

# Editing now

# Cannot delete

...Being used for another function, so you cannot delete. End the function and try again.

(See page 344)

# Enter zoom size

···No magnification is entered. Enter the magnification and try again. (See page 314)

# Enter "+" in right position

···\*+" is wrongly positioned. Enter it to the beginning of the phone number. (See page 60)

# Error

 $\cdots$  An error occurred, so you could not operate.

# Error in image

# Does not work correctly

···The Flash movie had an error, so you could not play it back normally.

Î

# Failed in T transmission

···An error occurred, so you could not perform iC transmission.

# Failed to authenticate

··· An authentication error occurred.

# Failed to get license file

···Failed to obtain the license information about the PC movie, so cannot be played back.

## Failed to read

···An error occurred while reading information from the microSD memory card.

# Failed to read Quitting

- ···An error occurred when playing back the moving image.
- ···The file cannot be read because you tried to play back the file in the "Movable contents" folder with a UIM that was not inserted when that file was saved. Insert the UIM that was inserted when the file was saved, and try again. (See page 37)
- ···The microSD memory card was removed while reading the information from it. Insert the microSD memory card and try again. (See page 294)

## Failed to receive channel info

···Failed to obtain the i-Channel information because part or all of it could not be obtained.

## Failed to save

- ···An error occurred, so you could not copy the ToruCa file.
- ··· An error occurred, so you could not save.
- $\cdots$  An error occurred, so you could not store.
- ···You could not save the shot image.

# Failed to send Ir data

···An error occurred, so you could not send the data using infrared rays.

## Failed to set

··· An error occurred, so you could not set,

## Format error

## Insert microSD formatted

···The format of microSD memory card is incompatible with this FOMA phone. Use this FOMA phone to format it. (See page 301)

# § αppli stand-by display terminated due to security error

- ···i-oppli DX has forcibly been ended. (See page 233)
- " appli To" function is not set
- ...A check mark is not put for "Set 🖁 αppli To", so you cannot start up the i-αppli program. Put the check mark and try again. (See page 233)

# IC card function inactive

···IC card has been locked, so you could not download or upgrade. Release IC Card Lock and try again. (See page 254)

# Image display is OFF Cannot receive

···"Set image display" is set to "OFF", so you cannot obtain the image. Set to "ON" and try again. (See page 172)

# Image in message will be deleted

···The output-prohibited image from the FOMA phone is attached to the mail text, so deleted.

# i-mode Center is busy Please try again later (555)

···The line facility has trouble or the line is very busy. Wait a while and try again.

# i-mode mail service is busy Please try again later (553)

 $\cdots \mbox{\sc The line}$  is very busy. Wait a while and try again.

# Incomplete data

# Unable to start

···The i-αppli program you tried to start up does not start because partial data only is saved. Download the whole i-αppli program and try again.
(See page 230)

# Input error (205)

···The entered contents are wrong. Check the contents and try again.

# Input too long

···Too many entered characters to send. Decrease the number of characters and send again. (See page 158)

## Invalid

# Cannot resend

···The address is invalid or the text exceeds the size that can be entered, so you cannot re-send.

## Invalid code

···The entered USSD is incorrect. Enter the correct one. (See page 393)

# Invalid data

- ···Received data has an error, so cannot be displayed or saved. The received data is discarded.
- ···You cannot play back the following PC movies:

  The data files other than Windows Media files or

the files with invalid contents

- The data file whose image size is larger than 320 dots x 240 dots, image bit rate is higher than 2 Mbps, or voice bit rate is higher than 385 kbps
- If the server returns an unidentified response when you try to download a savable data file.
- When the streaming server is not supported by the FOMA phone (The streaming server supported by the FOMA phone is Windows Media Services 9 only.)

# Invalid data (xxx)

···Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).

# Invalid data

# Data size is not supported (xxx)

···Received data has an error, so cannot be displayed or saved. The received data is discarded. A threedigit numeral is displayed for (xxx).

# Invalid func in this UIM

···The function cannot be operated from the inserted UIM.

# Invalid UIM auto start not display Invalid UIM

# § αppli is unable to run

···You cannot start up the i-αppli program because of the UIM restrictions. Insert the UIM which had been inserted when the i-αppli program was downloaded and try again. (See page 38)

# Invalid UIM

# Incorrect display

... The screen memo cannot be correctly displayed because of the UIM restrictions. Insert the UIM that had been inserted when the screen memo was saved, and try again.

# Invalid UIM

# Requested service not available Invalid UIM requested service not available

···You cannot operate because of the UIM restrictions. Insert the UIM which had been inserted when the data or file was obtained and try again. (See page 38)

## Invalid UIM

# Requested software failed to start

# Invalid UIM requested software failed to start

···You cannot start up the i-αppli program because of the UIM restrictions. Insert the UIM which had been inserted when the data or file was obtained and try again. (See page 38)

# Invalid UIM

Unable to delete Invalid UIM Unable to download Invalid UIM

Unable to move Invalid UIM

Unable to start Invalid UIM

# Unable to upgrade

···You cannot move, start up, delete, download or upgrade because a UIM different from the one set for the IC card is inserted. Insert the UIM set for the IC card, and try again. (See page 38)

# Invalid URL

···The URL is invalid, so you cannot connect to the site or the Internet web page.

#### т

# Linked page is not downloaded

...The PDF file has a link but the linked end has not been downloaded, so the linked page could not be displayed.

## M

以下の宛先にはメール送信できませんでした (561) Mails could not be sent to following address. (561)

# ●●@△△△.ne.jp\*

···You could not send the mail message correctly to the displayed address.

\*The mail address differs depending on the destination.

Max cost icon is not displayed

···The Max Cost icon is not displayed, so cannot be deleted.

# Memory full

···There is no usable memory space, so you cannot operate.

# Memory function active Cannot operate

···The microSD memory card is in use, so you cannot set.

# Memory No.: xxx Cannot overwrite

···You cannot store in the same memory number with the Phonebook entry stored as secret data. Store in a different memory number.

A three-digit numeral is displayed for (xxx). (See page 82)

# Memory shortage

···The memory space is not enough, so processing is suspended. If displayed frequently, turn off and on the power. (See page 44)

# Memory shortage Cancel update

Memory shortage

End document viewer Memory shortage

Failed to create font effect

Memory shortage

Return to Access Setting Memory shortage

Return to Full Browser menu

Memory shortage

Return to i-mode menu Memory shortage

# Return to ToruCa list

···The memory space is not enough, so processing is suspended.

# N

# Network is not found

···You cannot connect to the specified network. However, the connection is completed if the antenna icon appears afterward.

# No data in phonebook

# Cannot operate

...The phone number and mail address of the other party are not stored in the Phonebook. Store them and try again. (See page 81)

# No response

···Sending end was not found while using iC communication.

# No response (408)

···No response from the site or Internet web page, so you could not connect to it. Try again.

# No set melody

···This is displayed when you try to play back melodies with the playlist unprogrammed. Program the melodies and then play them back. (See page 306)

# Not notify phone No.

# Cannot operate

···You could not start up because the other party's phone number was not notified.

··· An error occurred, so you could not store.

0

# Operation failed

··· An error occurred, so you could not set.

# Operation may not be performed

... The microSD memory card is removed while it is in progress or an error occurred, so it might be possible that no operation is done. Check the "Movie" folder for the data. (See page 280)

# Other function active

# Cannot operate

···The function is not available simultaneously in Multitask. End the functions not in use and try again. (See page 344)

## Out of service

## Out of service area

···Radio waves are not received. Move to a place where the radio waves are strong enough and try again.

Р

# Page is not found (404)

···The site or Internet web page does not exist, or URL is wrong. Check the URL and try again. (See page 162)

PIN1 code blocked PIN1 code blocked

## Enter PUK

# PIN1 code not recognized

...Three times erroneous entry of the PIN1 code blocks the code. Enter the PUK (PIN unblock code). (See page 122)

# Please set "To type" receiver

···No address is in the "To" field. Fill in the "To" field and try again. (See page 182, 184)

## Please wait

- ···The audio line/packet communication facility has trouble or the audio line network/packet communication network is very congested. Wait a while and try again. You can make calls at 110/119/ 118. However, calls might not be connected by the situation.
- …The packet communication facility has trouble or the packet communication network is very congested. Wait a while and try again.

## Please wait for a while

...The audio line/packet communication facility has trouble or the audio line network/packet communication network is very congested. Wait a while and try again. You can make calls at 110/119/ 118. However, calls might not be connected by the situation.

# Please wait for a while (packet)

...The packet communication facility has trouble or the packet communication network is very congested. Wait a while and try again.

# Protected all Cannot delete

···All data items are protected, so cannot be deleted. Release the protection and try again. (See page 165, 205, 217)

## Protected

Cannot delete
Protected mail
Cannot delete
Protected memo
Cannot delete
Protected message

# Cannot delete

···Protected data, so could not be deleted. Release protection and try again. (See page 217)

# PUK blocked

PUK code blocked

# PUK code not recognized

···Ten times erroneous entry of the PUK (PIN unblock code) blocks the code. Contact the handling counter of a DoCoMo shop.

# ₹ .

# Read error

···An error occurred while reading information from the microSD memory card.

# Received invalid data

···Received data has an error, so cannot be displayed or saved. The received data is discarded.

# Receiver cannot save data

··· The receiving end blocks data.

# Receiving failed

...The destination address set by Host Selection is wrong, so you cannot select and receive. Check the setting and try again. (See page 173)

# Registration is in progress (554)

···You cannot operate because the user is being registered. Wait a while and try again.

# Replace with a new one or check the disk

···The microSD memory card formatting is abnormal. Execute Check microSD. (See page 301)

# Replay period has not yet started

···Playable date has not come yet, so you cannot play back the file.

# Retention period has expired (492)

···You could not download attached files held at the i-mode Center because the save period had been over.

# Rewrite failed

···Failed to update the software program. Contact a handling counter such as a DoCoMo shop.

# Root certificate has expired Terminate SSL session

···Expiration date of SSL certificate has passed, so the connection is suspended.

# Root certificate is not valid

- ···The SSL certificate of that server is set to "Invalid" for "Certificate" setting. Set to "Valid" and try again. (See page 173)
- ...The SSL/TLS certificate of that server is set to "Invalid" for "Certificate" setting. Set to "Valid" and try again. (See page 173)

# Run software and delete data on IC card Then delete software

... Data is left inside the IC card, so you cannot delete the Osaifu-Keitai compatible i-oppli program. Start up the Osaifu-Keitai compatible i-oppli program, delete the stored data, and try again.

## S

## Secret data

···You have not switched to Secret Mode or Secret Data Only, so cannot access. Switch to Secret Mode or Secret Data Only and try again. (See page 127)

# Server is busy

- ···The line facility has trouble or the line is very busy. Wait a while and try again.
- ···The line is very busy. Wait a while and try again.

# Service is used by a previous software Unable to download

# Delete a service? Service is used by a previous software

# Unable to upgrade Delete a service?

···When the software program with the service that uses the same IC card has already been downloaded, you cannot download or upgrade a new service unless you delete the existing service that has already been stored. Select "YES" to display the service to be deleted, and then delete that service already stored.

# Service unavailable

 $\cdots$  The function cannot be operated with the inserted UIM.

# Setting auto assist Cannot delete Setting auto assist Cannot delete all

... The country code or international call access code set by Auto Assist Setting cannot be deleted. Change/Cancel the setting and try again. (See page 60)

# Setting IC card lock

···IC Card Lock is set. Release IC Card Lock and try again. (See page 254)

# Setting receive option Cannot start

···Receive Option Setting is set to "ON", so you cannot start up. Switch to "OFF" and try again. (See page 195)

# Size of data is not supported

...Data size exceeded the maximum, so you could not download normally.

# Size of page is not supported Size of this page is not supported

...The size of site or Internet web page is large, so obtaining is suspended, and only obtained portion is displayed.

# Software for this folder deleted Refer to Open folder

···The corresponding mail-linked i-αppli program has been deleted.

# Software for this folder exists Cannot delete

···The corresponding mail-linked i-αppli program is contained, so you cannot delete.

# Software terminated due to security error

 $\cdots$ i-oppli DX has forcibly been ended. (See page 233)

# Software update active Cannot operate

···You could not start up during updating the software program. After the software update is completed, try again.

# Software update is aborted Please retry

···The FOMA phone was turned off during updating the software program. Try updating it again. (See page 454)

# Software upgraded

 $\cdots$  The target software program is not updated, so you cannot execute.

# Some addresses are not valid

···Some addresses are incorrect. Enter the addresses correctly and send. (See page 182, 224)

# Some data could not be copied

···The selected files contained ones that could not be copied, so you could not copy some data.

# Some data could not be moved

···The selected files contained ones that could not be moved, so you could not move some data.

# Some data could not be saved

...The selected files contained ones that could not be copied to the FOMA phone or microSD memory card, so you could not save some data.

# Sort is full Cannot add

···The maximum number of settings is already set. Release unnecessary settings and try again. (See page 211)

# Specified page number is not valid

 The entered page number is invalid. Enter the correct page number and try again.
 (See page 313)

# Specify max cost within ¥10-100,000

···Set the limit of Notice Call Cost to ¥10 through ¥100,000. (See page 359)

# SSL session cannot be established

···Either an altered SSL certificate was received or an SSL error occurred, so you could not connect.

## SSL session failed

···An authentication error occurred at the server, so you cannot connect.

# SSL/TLS session cannot be established

...Either an altered SSL/TLS certificate was received or an SSL/TLS error occurred, so you could not connect.

## SSL/TLS session failed

···An authentication error occurred at the server, so you cannot connect.

# Syntax error

···Received data has an error, so cannot be displayed or saved. The received data is discarded.

··· An error occurred, so the system is restarted and then the Stand-by display returns.

#### Т

# This certificate has expired Terminate SSL session

... Expiration date of SSL certificate has passed, so the connection is suspended.

# This certificate is not valid for this URL Terminate SSL session

···The contents of this SSL certificate do not match, so the connection is suspended.

## This data is not valid

···You are trying to paste characters that cannot be used. Check the characters to be pasted and try again. (See page 372)

# This file is not attachable Cannot resend

...The output-prohibited file from the FOMA phone has been attached to the mail, so you could not re-send it.

## This file is not valid

···The file is incompatible, so cannot be displayed.

# This image is not valid

···The image could not be displayed normally, so cannot be saved. Even if normally displayed, it may not be saved depending on the file format.

# This mail is broken Cannot resend

...The size of the mail text is too large or the attachment information about the text is damaged, so you could not re-send.

# This picture is not valid

···The image data is invalid, so cannot be displayed.

# This site is not certified Terminate SSL session

···This SSL certificate was not supported, so the connection was suspended.

# This software contains an error

# Unable to download

···The software program contains invalid data, so cannot be downloaded or upgraded.

# This software is currently unavailable for use

···You cannot start up the software program because the effective period is expired or the server has put it in unavailable state.

# This software is not supported by this phone

...The software program to be downloaded or upgraded does not support the FOMA phone.

# This UIM cannot be recognized

- ···An error occurred on the UIM or the PUK (PIN unblock code) is blocked. Contact the handling counter of a DoCoMo shop.
- ···Check to see if the correct UIM is inserted. (See page 37)

# This UIM cannot be recognized Phone is restarted

This UIM cannot be recognized correctly. The system is restarted and then the Stand-by display returns.

# Too much data was entered

···Too many entered characters to send. Decrease the number of characters and send again. (See page 158)

## Transmission failed

Transmission failed (552)

# Transmission failed (XXX)

···You could not send the mail correctly. A three-digit numeral is displayed for (xxx).

## U

# Unable to acquire remaining data Delete data

# Unable to acquire remaining data, Data deleted.

···An error occurred when downloading the remaining data of the file that was partially saved, so the data was deleted.

# Unable to change title

···You could not edit the title because entering no characters or entering only space is disabled while editing the title. Enter characters and try again. (See page 273)

# Unable to combine/bind

···You could not concatenate the scanned data. The scanned data up to now is discarded.

# Unable to compose

# Unable to compose message

···You could not compose i-mode mail because the FOMA phone was reading data. Wait a while and try again.

## Unable to download

- ···Another function was running or an error occurred, so you could not download.
- ... The data is invalid, so cannot be downloaded.

# Unable to download Cancel update

···Another function was running or an error occurred, so you could not download.

## Unable to download

# Data exceeds maximum size

···You tried to download the PDF file exceeding the maximum size, so could not download it.

# Unable to download

# Data exceeds maximum size (452)

···You tried to receive data exceeding the maximum size, so could not receive it.

## Unable to edit file name

···You cannot change the file name to the one starting with a period or containing prohibited characters except half-pitch alphanumeric characters. Enter the correct file name and try again. (See page 274)

# Unable to input because of exceeding maximum size

···You could not enter the Decomail-pictograph because it exceeded the maximum size of the images to be inserted.

## Unable to move

···The i-oppli program is the one that cannot be moved to the FOMA phone, so could not be moved from the microSD memory card to the FOMA phone.

# Unable to play because of wrong UIM or license info

···This music file cannot be played back due to UIM restrictions. Insert the UIM you used for obtaining the Chaku-uta Full® music file, and try again. If the UIM is the one you inserted for obtaining the Chaku-uta Full® music file, the license information of the music file in the FOMA phone is invalid, so cannot be played back. Perform "Initialize" and try again. (See page 364)

# Unable to retrieve the requested URL (504)

···No response from the server, so you cannot connect.

## Unable to save

···The data could not be obtained from a site, so could not be saved.

# Unable to select

... When selecting the end point for "Trim 

mathematical motion", you tried to select the point before the start point or the same point as the start point. So, the end point could not be selected. Reselect the start point again, then proceed. (See page 286)

## Unable to send all Ir data

···All the selected files were output-prohibited from the FOMA phone, so could not be sent.

## Unable to set

··· An error occurred, so you could not set.

# Unable to set auto-update

···An error occurred, so you could not set "Set auto-update".

# Unable to set for storage

···There are no unoccupied memory numbers within the folder, so you cannot set.

# Unable to support this card

···The inserted memory card cannot be used on this FOMA phone. Use a microSD memory card compatible with this FOMA phone. (See page 294)

# Unable to upgrade

··· An error occurred, so you could not upgrade.

# Unable to use this function

 $\cdots$  The function cannot be operated with the inserted UIM.

# Unable to write

···You cannot write on the microSD memory card because it is write-protected. Use external devices to unlock the protection and try again.

# Unsupported contents exist

···The data that the FOMA phone does not support is contained.

# Update pattern definitions

···An error occurred, so you cannot use Scanning Function. Update the pattern data and try again. (See page 460)

# **Updating program**

···The program of Music&Video Channel is updating, so you cannot download or play it back. Wait a while and try again.

# URL address is not valid URL address is not valid (xxx)

···Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).

# Usage is currently restricted Try again later

···When a Pake-Houdai/Pake-Houdai Full user communicates a large amount of data within a certain duration, the connection might be restricted for a certain duration. Wait a while and try again.

# Using mail folder Cannot delete Using mail folder Cannot download

# Using mail folder Cannot start

···Corresponding software program is running. End the software program and try again. (See page 231)

# W

# Wait for a while to retry

···Currently, it is placed inactive. Wait a while and try again.

# Wrong PIN1 code

···The entered PIN1 code is wrong. Enter the correct one. (See page 121)

## Υ

# Your HTTP version is not supported (xxx)

···Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).

# **Warranty and Maintenance Services**

# Warranty

- Make sure that you have received a warranty card provided at purchase. After checking the contents of the warranty card as well as "Shop name and date of purchase", keep the warranty card in a safe place. If you notice that necessary items of the warranty card are not filled in, immediately contact the shop where you purchased the FOMA phone. The term of the warranty is one year from the date of purchase.
- All or part of this product including the accessories may be modified for improvement without notice.
- Data stored in the Phonebook and others might be changed or lost owing to a malfunction, repairs, or other mishandling of your FOMA phone. You are advised to take a note of Phonebook entries and other files in preparation for such incidents. After we repair your FOMA phone, we cannot move, with some exceptions, the information downloaded by using i-mode or i-oppli to your repaired FOMA phone because of the copyright law.
- \*\*From your FOMA phone to the microSD memory card, you can move the data files that i-motion or i-αppli uses.
- ※You can use Data Security Service (pay service that is available on a subscription basis) to save the data files such as Phonebook entries from the FOMA phone to the Data Storage Center.
- If you have a personal computer, you can transfer and save the data files from the Phonebook to your personal computer by using the DoCoMo keitai datalink (see page 400) via the FOMA USB Cable with Charge Function 01 (option) or FOMA USB Cable (option).

# **Maintenance Services**

# ○When there is a problem with the FOMA phone

Before asking repairs, check "Troubleshooting" in this manual.

If the problem remains unsolved, contact the "Repairs" counter listed on the back page of this manual for malfunction and consult them.

When repairs are necessitated as a result of consultation:

Bring your FOMA phone to a repair counter specified by DoCoMo. Note that your FOMA phone is accepted for repair during the repair counter's business hours. Also, make sure that you will bring the warranty card with you to the counter.

# In warranty period

- · Your FOMA phone is repaired charge free in accordance with the terms of warranty.
- Make sure that you bring the warranty card to the counter for the repair. If you do not show the warranty card, or when troubles or malfunctions are regarded to be caused by your mishandling, the repair cost is charged even within the warranty period.
- •The cost for troubles caused by the use of devices and consumables other than those specified by DoCoMo is charged even within the warranty period.
- For the damages of liquid crystal display, connector, etc. after purchase, the repair cost is charged.

# ■Repairs may not be performed in the following cases:

When wet-detecting sticker is colored; when corrosion due to soaking, dew condensation, or perspiration was found by the test; when the internal parts are damaged or deformed, repair may not be feasible. Even if repair is feasible, repair due to the reasons above is not covered by the warranty, so the repair cost is charged.

# ■After the warranty period

We will repair your FOMA phone on request (charges will apply).

# ■Spare parts availability period

The minimum storage period of the performance spare parts (parts required for maintaining performance) for the FOMA phone is basically six years after the closure of its production. Note, however, that your FOMA phone might not be repaired depending on the parts because of shortage of the spare parts. Even after the storage period, some FOMA phones can be repaired depending on the troubled portions. Contact the "Repairs" counter listed on the back page of this manual.

# Other points to note

- Make sure not to modify the FOMA phone or its accessories.
- · Catching fire, giving injury, or causing malfunctions may result.
- · For the repair of devices that the modification is applied to, we accept it if you agree to have the modification reset. Further, we might reject to repair depending on the conditions of the modification.

The following might be regarded as modifications:

- · To put stickers, etc. onto the liquid crystal display or keys
- · To decorate the FOMA phone using adhesives
- · To replace the coverings etc. with those of other than DoCoMo genuine
- · Repairs of troubles or malfunctions resulting from the modifications are charged even within the warranty period.
- Do not peel the nameplate off the FOMA phone.

The nameplate is a certificate for ensuring the technological standard. If someone intentionally peel off the nameplate or replace it, the contents described in the nameplate cannot be checked, as we cannot verify the conformity of the product to the technical standard. Note that we may refuse repair for some malfunctions in this case.

- •The information such as function settings and Total Calls Duration, etc. might be reset depending on troubles or repairs, or the way you handle the FOMA phone. Set the settings again.
- The following parts of the FOMA phone uses the parts generating magnetic field: Note that if you put a card such as cash card liable to be influenced by magnetic field close to it, the card might be adversely affected. Using parts: speaker, earpiece
- •If the FOMA phone gets wet or becomes moist, immediately turn off the power and remove the battery pack; then visit a repair counter. The FOMA phone may not be repaired depending on its condition.

# OMemory dial (Phonebook function) and downloaded information

- · It is recommended to take a note of the information you have stored in the FOMA phone and keep it in a safe place. We are not responsible for any change in or loss of information.
- · When replacing or repairing your FOMA phone, the data you created, obtained from external devices, or downloaded may be changed or lost. We do not take any responsibility for the loss or change incurred to the data. We may replace your FOMA phone with a new one instead of repairing, for our convenience sake. With this FOMA phone, we move the files including the images and ring melodies downloaded to the FOMA phone or the files you created to the new FOMA phone so far as your existing FOMA phone is troubled or repaired. (We cannot move some files. Also, some files might not be movable depending on the degree of malfunction.)
- It may take a while to move files, or it might occur that moving files is not possible depending on the memory size of the files stored in the FOMA phone.

# i-mode Trouble Diagnosis Site

You can check on your FOMA phone whether sending/receiving mail messages, downloading images/melodies, and others are normally working.



Top display

Test Menu List

- To connect to "i モード故障診断サイト (i-mode Trouble Diagnosis Site)" i-mode site:
- 8 Menu→お知らせ (News)→サービス・機能 (Services & Functions) → i ±- 1 (i-mode)
- → i モード故障診断 (i-mode Trouble Diagnosis) (Japanese only)



QR code for accessing the site

- A packet communication fee for connecting to the i-mode Trouble Diagnosis Site is free. (When you access it from overseas, you are charged the fee.)
- The test items differ by model of FOMA phones. Further the test items might be changed.
- When you check operations of your FOMA phone according to each test item, read the cautions on the site thoroughly and then perform the test.
- When you connect to the i-mode Trouble Diagnosis Site and test on sending mail messages, the proper information about your FOMA phone (model name, mail address, etc.) is automatically sent to the server (i-mode Trouble Diagnosis Server). We never use the sent information for other purposes than for the i-mode trouble diagnosis.
- When you think your FOMA phone is in trouble as a result of your check, contact the "Repairs" counter listed on the back page of this manual.

# <Software Update>

# **Updating Software**

This function is to check whether you need to update software programs in the FOMA phone by connecting to the network, and if necessary, you can download some parts of software programs using packet communication, and can update the software programs.

※You are not charged a packet communication fee for updating software programs.

If you need to update the software programs, the DoCoMo web page and "お知らせ (News)" in 音 Menu let you know about it.

"Auto-update", "Update Now" and "Reserve Update" are available for updating software programs.

[Auto-update] : Automatically downloads new software programs, and updates at the time you specified beforehand.

[Update Now]: If you want to, immediately update.

[Reserve Update]: Reserve the date and time for updating software programs, and they are automatically updated at the reserved date and time.

- Do not remove the battery pack while updating software programs. You may fail to update.
- You can update software programs with the Phonebook entries, images shot by the camera, or downloaded data retained in the FOMA phone; however note that data may not be protected depending on the conditions (such as malfunction, damage, or drench) your FOMA phone is placed in. You are advised to backup important data. Note that some data such as downloaded ones might not be backed up.

# ■ Before Using Software Update

- You can update software programs even when you set "Host selection" to a user designated destination.
- Fully charge the battery before updating software programs.
- You cannot update software programs in the following cases:
  - When the FOMA phone is off When date and time are not set
  - During a call
     Out of the service area
     During PIN1 code lock
     During Omakase Lock
  - · During Self Mode · While using other functions
- · When the UIM is not inserted
- · While connecting to external devices such as a personal computer
- It may take time to update (download or rewrite) software programs.
- You cannot make/receive calls, use communication functions, and use other functions while updating software programs.

(You can receive voice calls, forward calls or operate Record Message during download.)


- When updating, the FOMA phone is connected to the server (DoCoMo site) using SSL communication. You need to validate the SSL certificate.
   (Setting at purchase: Valid See page 173 for how to set.)
- It is recommended to update software programs when radio wave is strong enough with the three antennas displayed and while you are not moving.
  - If radio wave conditions get worse while downloading software programs, or
    download is suspended, move to a place with good radio wave conditions and
    try again to update software programs.
- If you check Software Update with the software programs already updated, the message "No update is needed Please continue to use as before" is displayed.
- When "Receive option setting" is set to "ON" and mail comes in during software
  update, the display for notifying you of the arrival of mail may not be displayed after
  software update is completed.
- When updating software programs, the proper information about your FOMA phone (model name or serial number, etc.) is automatically sent to the server (DoCoMo-managed server for Software Update). We at DoCoMo never use the sent information for other purposes than for updating software programs.
- If you fail to update software programs, "Rewrite failed" is displayed and you
  cannot do all the operations. In that case, you are kindly requested to come to a
  repair counter specified by DoCoMo.
- You cannot use Software Update overseas.

# Update Software Programs Automatically <Set Auto-update>

You can download new software programs automatically, then the updating is operated at the time you specified beforehand. When the rewriting state is ready, the "Rewrite notification" icon appears. Then you can confirm the rewrite time and select whether to change the rewrite time or rewrite the program immediately.


You cannot change "Set auto-update" when the notification icon of software update
is displayed on the Stand-by display. In that case, select the notification icon, and
clear that icon without confirming whether the software update is required. You are
then able to change "Set auto-update".

# Set the date/time of updating.

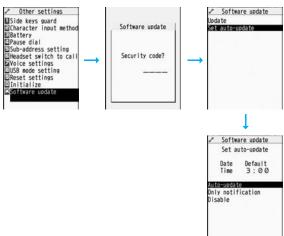

# Select the "Rewrite notification" icon on the Stand-by display, and select "OK", "Change time" or "Now rewrite".

 \*\*The "Rewrite notification" icon notifies you that rewriting starts at the set time. (It is cleared when you check it.)



Software update
Software update
Software Update scheduled
for Sunday 03:00
Make sure Batt is fully
charged beforehand. All
functions will be unava
liable during the update
Update will not start if
other Func. is running.

# Now rewrite


# When you select "OK"

\*\*After you select it, the Stand-by display returns, and then rewriting starts at the set time.



# When you select "Change time" You can set day of a week and time for rewriting. Software update Software update Time setting Date setting Software update 03:00 Sunday Monday Tuesday Security code? Wednesday Thursday Friday Saturday Default Software update Set auto-update Auto-update Date Sunday Time 3:00 Britania ?

Rewrite notification icon

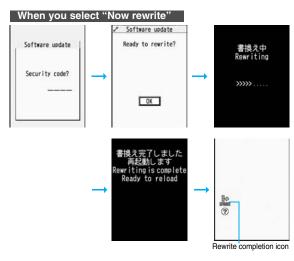

\*"Rewrite completion icon" appears only when you select "Now rewrite".

# **Start Software Update**

If you select "Only notification" of "Set auto-update", "Update notification icon" notifies you when software update is necessary. You can start Software Update by selecting "Update notification icon", or from the Menu display.

# Start Software Update by Selecting "Update notification Icon"

Select "Update notification icon" on the Stand-by display.



- If you select "No", the confirmation display appears asking whether to delete the notification icon.
- "Update notification icon" appears in the following cases:
- · When notification is provided by DoCoMo
- · When "Update is needed" is displayed in step 3 on page 457
- When you fail to update software programs during updating in Reserve Update
- · When you cancel the reservation for the software update

2 Check whether the software programs need to be updated.

◆ You can answer voice calls during check.

Software update

Software update

Software update

 
Software update

Software update

Checking...

Cancel

When updating is not necessary, "No update is needed" is displayed. Use the FOMA phone as it is. When updating is necessary, "Update is needed" is displayed. You can select either "Now update" or "Reserve".



Software Update display 

When updating is not necessary



\*\*The display for when the software update is unavailable because of the server congestion. (Wait for a while and then start the software update again.)

# Start Software Update from Menu

Settings Other settings Software update Enter your Terminal Security Code Update



Go to step 2 on page 457.

# **Update Software Now (Update Now)**

- When you select "Now update", "Start download" is displayed and downloading starts after a while. (Select "OK" to start downloading right now.)
  - You can answer voice calls during download.
  - If you cancel downloading midway, the data downloaded up to that point is deleted.
  - Once downloading starts, updating proceeds automatically; you do not need to select menu items.



When downloading is completed, rewriting the software programs starts. (Select "OK" to start rewriting right now.)

When rewriting is completed, your FOMA phone automatically restarts.



- It may take a while to start rewriting.
- You cannot even answer calls while rewriting.

<u>While rewriting the software programs, all key operations are disabled. You cannot even stop updating.</u>

Also, charging temporarily stops even if the AC adapter (option) is connected.

After confirming the update completion, select "OK".



# Reserve Date and Time for Updating Software (Reserve Update)

When downloading takes time or the server is busy, you can set in advance the date and time for starting the software update by communicating with the server.

# Select "Reserve" from the Software Update display.



The date and time which can be reserved are displayed.

The server's time table appears for the software update reservation.
 When you select "Others"

After communicating with the server, you can select the date and time you want. The availability of each time zone is displayed on the time selection display as follows:

- ○: Available, △: Almost full, ×: Not available
- When you select one time zone you want, you can communicate with the server again to display candidates for reserving time.
- 2 Confirm the date and time you selected. Select "YES". Your FOMA phone communicates with the server again and then the reservation is completed.



# When the reserved time comes

The display on the right appears and about five seconds later the software update starts automatically. Before the reserved time, fully charge the battery pack, place the FOMA phone with the Stand-by display shown in a place within reach of radio wave.



# Information

- Note that updating may not start even when the reserved time arrives if you are using another function.
- The software update may not be started if an alarm is activated.
- If you execute "Initialize" on page 364 after completing the reservation, the software update does not start even when the reserved time arrives. Make a reservation for the software update again.

# Check, Change, or Cancel the Reserved Date and Time

Select "Software update" from the setting menu, then enter your Terminal Security Code and select "Update"; then you can confirm the reserved time.

You can change or cancel the reserved date and time from the display for checking reservation. To change, select "Change". To cancel, select "Cancel".



# End Software Update

If you select "NO" or "Cancel" from each display, the display for ending the operation appears.

Select "YES"; then the software update ends and the Stand-by display returns. To return to the previous display, select "NO".

# Information

 If the battery level points " "during operation, the software rewriting is not done and the operation ends.

# <Scanning Function>

# **Protecting FOMA Phone from Data** Causing Failure

First of all, update the pattern data to make it the latest.

Regarding data and programs downloaded or obtained from sites, i-mode mail messages or SMS messages to the FOMA phone, you can detect data that might cause failure, can delete it, and can stop starting an application program.

- Use the pattern data for checking. Update the pattern data, because it is upgraded each time new trouble is found. (See page 460)
- The scan function is for filtering out the data that causes failure to mobile phones at the time of browsing web pages or receiving mail messages. Note that this function works only when the pattern data for each failure has been downloaded to your mobile phone and when the pattern data for each failure is found.
- The data contained in the pattern data varies depending on the mobile phone model. Therefore, note that we may stop distributing the pattern data to mobile phones that have been on the market for three years or more.

# Set Scanning Function <Set Scan>

If you set "Scan" to "Valid", data or a program can be automatically checked when you try to run it.

In addition, if you set "Message scan" to "Valid", a received SMS message can be automatically checked when you display it.

Settings Lock/Security Scanning function Set scan Select an item.

Scan . . . . . . . Sets whether to run the scanning function. Message scan . . . . Sets whether to run the scanning function when displaying an SMS message.

• While "Scan" is set to "Invalid", you cannot set "Message scan".

# Valid or Invalid > YES

• When the scan function is set, an alert is shown by five levels if data that might cause failure is detected. (See page 461)

# Information

• The scanning is not available for the SMS message which notifies you of receiving mopera mail or of incoming calls for Voice Mail Service.

# Update Pattern Data < Update>

Settings Lock/Security Scanning function **►Update** YES YES

• To cancel during i-mode connection, select "Cancel".

# OK

 When pattern data update is not necessary, "Pattern definitions are up-to-date" is displayed. Use the pattern data as it is.



# **Information**

- When updating the pattern data, the proper information about your FOMA phone (model name, serial number, etc.) is automatically sent to the server (DoCoMomanaged server for the scanning function). We at DoCoMo never use the sent information for other purposes than for the scanning function.
- Set the date (year/month/date) for the FOMA phone correctly in advance.
- The pattern data is not updated in the following cases:
  - · When the date/time is not set
    - · During a call · Out of the service area
  - · When the UIM is not inserted · While another function is working
- · During Lock All
  - · When connecting to external devices such as personal computers
- · While Self Mode is activated
- If you cancel downloading midway, the data downloaded up to that point is deleted.

# Update Pattern Data Automatically <Set Auto-update>

You can set whether to update the pattern data inside your FOMA phone when the pattern data is created anew.

Settings Lock/Security Scanning function
Set auto-update ON or OFF

# 

- When you select "ON" in step 1, the confirmation display appears telling that your mobile phone information is sent at auto-update.
- To cancel during i-mode connection, select "Cancel".

# Information

- When setting auto-update or updating automatically, the proper information about your FOMA phone (model name, serial number, etc.) is automatically sent to the server (DoCoMo-managed server for the scanning function). We at DoCoMo never use the sent information for other purposes than for the scanning function.
- When auto-update is completed, the notification icon of " (Update completed) appears on the Stand-by display.

If it is failed, "  $\frac{1}{N}$  (Pattern update failed) appears. Select "  $\frac{1}{N}$  " to display the update result.

# **Displays for Scanning Result**

■ About the display for scanned problem elements
A warning display appears when problematic data
is found. Select "Detail" from the warning display
to bring up the name of the problem element.

- When six or more problem elements are found, the sixth and later problem element names are omitted.
- "Detail" might not appear depending on the detected problem element.



# ■ The displays for scanning result

Alert level 0	Alert level 1	Alert level 2
Operation may not run properly  OK.  Obtail	Scanning function  Operation may not run properly Cancel operation?  YES  NO  Detail	Scanning function  Operation may not run properly Canceling operation  OK  Detail
OK Continues the operation.	YESStops and ends the operation.  NOContinues the operation.	OK Stops and ends the operation.
Alert level 3	Alert level 4	
Operation may not run run run run run run run run run run	Scanning function Operation may not run oroperly Deleting data  OK Detail	
YES Deletes the data and ends the operation. NO Stops and ends the operation.	OK Deletes the data and ends the operation.	

 The alert displays for when displaying i-mode mail messages or SMS messages may differ from the ones above.

# **Check Pattern Data Version < Version>**

Settings Lock/Security
Scanning function Version



# **Specifications**

# ■ Phone

			I	
Model		FOMA P705i µ	PROSOLID $\mu$	
			(FOMA P705iCL)	
Dimensio	ons	Height: 109 mm		
(when clo	osed)	Width: 50 mm		
		Depth: 9.8 mm		
Weight (v	with the battery	Approx. 100 g	Approx. 98 g	
pack atta	ched)		,,	
Continuo	ous standby time	Standstill: Approx. 440 ho	urs	
		In motion: Approx. 310 ho	urs	
Continuo	ous talk time	Voice call: Approx. 150 minutes		
		Videophone call: Approx.	100 minutes	
Charging	time	AC adapter: Approx. 100	minutes	
		DC adapter: Approx. 100 minutes		
LCD	Type	Display: TFT 262,144 cold	ors	
	,	Private window: Organic EL one color		
	Size	Display: Approx. 3.0 inches		
		Private window: Approx. 0.4 inches		
	Number of	Display: 102,480 pixels (240 dots x 427 dots)		
	pixels	Private window: 672 pixels (56 dots x 12 dots)		
Image	Туре	Camera: C-MOS –		
pickup	Size	Camera: 1/4 inches		
device			_	
Camera	Number of	Camera: Approx.		
	effective pixels	2,000,000 pixels	_	
	Number of	Camera: Approx.		
	recording pixels	1,900,000 pixels	_	
	(maximum)			
	Zooming (digital)	Camera: Approx. 9.3		
	3, 0,	times max.	_	
Recording	Number of	Approx. 3,500		
	recordable still	(When stored in the	_	
	images	FOMA phone)*1		
	Number of still	VGA: 4 CIF: 4		
	images for	QVGA: 5 through 10		
	continuous	QCIF: 5 through 20	_	
	shooting	Sub-QCIF: 5 through 20		
	_		l .	

Recording	Still image file format	JPEG	_
	Moving image recording time	Phone: Approx. 497 seconds <sup>*2</sup> microSD memory card (64MB):	_
		Approx. 137 minutes <sup>3</sup>	
	Moving image	Phone: MP4	
	file format	microSD memory card: ASF	_
Music	Continuous	SD-Audio file (supports Play Background):	
playback	playback time <sup>*4</sup>	Approx. 1,080 minutes <sup>*5</sup> Chaku-uta Full <sup>®</sup> music file (supports Play Background):	
		Approx. 1,020 minutes <sup>35</sup> i-motion movie (including Chaku-uta <sup>®</sup> music file):	
		Approx. 720 minutes <sup>**5</sup> WMA file (supports Play Background):	
		Approx. 960 minutes	
		Music&Video Channel program (supports Play Background)	
		Music: Approx. 1,020 minutes	
		Video: Approx. 330 minutes	
Memory	Chaku-uta®	Approx. 111.6 Mbytes <sup>**6</sup>	
capacity	Chaku-uta Full®		

- %1: Image size: Sub-QCIF (128 x 96), Image quality: Normal, File size: 10 Kbytes
- ※2: The maximum recording time per moving image which can be saved to the FOMA phone with the following conditions: Image size: Sub-QCIF (128 x 96), File size restriction: Mail restriction (L), Image quality: Normal, Type: Video + voice
- \*\*3: The maximum recording time per moving image which can be saved to the microSD memory card with the following conditions:

Image size: Sub-QCIF (128 x 96), File size restriction: Long time, Image quality: Normal, Type: Video + voice

- ¾4: The continuous playback time is the estimated time that the FOMA phone can
  play back using the Flat-plug Stereo Earphone Set P01 (option) with the FOMA
  phone closed.
- \*5: File format: AAC
- ※6: Shares with still images, i-motion movies, melodies, PDF files, Music&Video Channel programs, Kisekae Tool files, ToruCa files, and i-αppli programs.

# ■ Battery pack

Name of product	Battery Pack P17
Battery type	Li-ion (lithium ion) battery
Voltage	3.7 V
Capacity	600 mAh

# Number of Savable/Storable/Protectable Items in FOMA Phone

	unction	Number of savable/ storable items <number items="" of="" protectable=""></number>	Reference page
Phonebook		1,000 **1	80
Schedule	Schedule	1,000	349
	Holiday	100	350
	Anniversary	100	350
ToDo		100	353
Text memo		20	360
Mail (total of SMS messages and i-mode mail messages)	Received mail	2,500 max. **2, **3, **4 <2500 max. **2>	198
	Sent mail	1,000 max. **2, **4, **5 <1000 max. **2>	199
	Draft mail <sup>*6</sup>	20 max. <sup>※2</sup>	199
	User created folder (Inbox)	22	203
	User created folder (Outbox)	22	203
Area mail		30	198
Template		100 max. **2, **7	189
Message	Message R	100 max. <sup>※2</sup> <50 max. <sup>※2</sup> >	216
	Message F	100 max. <sup>※2</sup> <50 max. <sup>※2</sup> >	216
Bookmark	Bookmark	100	162
(i-mode)	Bookmark folder	10 (incl. "Bookmark")	163
Bookmark	Bookmark	100	162
(Full Browser)	Bookmark folder	10 (incl. "Bookmark")	163
Screen memo	Screen memo	100 max. **2 <50 max. **2>	164
	Screen memo folder	10 (incl. "Screen memo")	165
Still image	•	3,500 max. **2, **8, **9	273
	User created folder	20	305

Function		Number of savable/ storable items <number items="" of="" protectable=""></number>	Reference page
Moving image/i-motion movie		3,500 max. **2, **7, **9	280
	User created folder	19	305
Melody	·	3,500 max. *2, *7, *9	290
	User created folder	20	305
Chara-den		3*7	287
PDF file		3,500 max. **2, **9	312
Music&Video	Downloaded program	2	322
Channel	Saved program	10 max. **2, **9	322
Kisekae Tool	·	3,500 max. *2, *7, *9	293
ToruCa		495 max. **2, **9	248
	User created folder	20	250
i-α <b>ppl</b> i	•	100 max. **2, **9	230
	Mail-linked i-αppli	5	230

- %1: Up to 50 Phonebook entries can be stored on the UIM.
- \*2: The number of savable, storable, or protectable items may decrease depending on the data volume.
- \*3: Includes mail in the "Chat" folder, "Trash box" folder and the i-oppli mail folder.
- \*\*4: In addition, a total of 20 received and sent SMS messages can be saved to the UIM. (See page 361)
- %5: Includes mail in the "Chat" folder and the i-oppli mail folder.
- %6: Can save unsent mail you are composing.
- %7: Includes pre-installed data.
- \*\*8: Among pre-installed data, only the Deco-mail-pictographs are included as the savable/storable items.
- ※9: Still images, i-motion movies, melodies, PDF files, music files, Music&Video Channel programs, Kisekae Tool files, ToruCa files, and i-αppli programs share the number of savable/storable items and memory space.

# SAR Certification Information and Other Information

# **SAR Certification Information**

This model phone FOMA P705i  $\mu$  meets the MIC's\* technical regulation for exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)\*\* averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP\*\*\*.

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone is 0.599 W/kg\*\*\*\*. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the following web pages:

World Health Organization (WHO): http://www.who.int/peh-emf/

ICNIRP: http://www.icnirp.de/

MIC: http://www.tele.soumu.go.jp/e/ele/body/index.htm

TELEC: http://www.telec.or.jp/ENG/Index\_e.htm

NTT DoCoMo: http://www.nttdocomo.co.jp/english/product/

Panasonic Mobile Communications Co., Ltd.: http://panasonic.jp/mobile/

(Japanese only)

- Ministry of Internal Affairs and Communications
- \*\* The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.
- \*\* International Commission on Non-Ionizing Radiation Protection
- \*\*\*\* The SAR value for P705iCL model phone is 0.607 W/kg.

# **European RF Exposure Information**

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR\* limits\*\* for exposure to radio-frequency (RF) energy, which SAR\* value, when tested for compliance against the standard was 0.590 W/ka.\*\*\*

While there may be differences between the SAR\* levels of various phones and at various positions, they all meet\*\*\*\* the EU requirements for RF exposure.

- \* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
- \*\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- \*\*\* The SAR value for P705iCL model phone is 0.600 W/kg.
- \*\*\* Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

# **Declaration of Conformity**

The product "FOMA P705i µ/P705iCL" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on http://panasonic.co.jp/pmc/products/en/support/index.html.

\*\*The European RTTE approval of this product is limited to the use of the P705i  $\mu$ / P705iCL handset, Battery Pack and FOMA AC Adapter for Global use (100 to 240 V AC) only. Other accessories are not part of the approval.

# **Important Safety Information**

## AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

## DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

# HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

# INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

# **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

# **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives

# For other Medical Devices:

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

# **Export Administration Regulations**

This product and its accessories might be covered by the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). To export this product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry.

# **MEMO**

MEMO		



# **Index/Quick Manual**

Index	470
Quick Manual	478

#### How to refer to Index

 The Index contains the terms and terminologies summarizing the descriptive contents by sorting in alphabetical order. If you cannot find the term or terminology you want to know, search for it using a different term or terminology.

# <Example: To set the i-oppli Stand-by display using "Software setting" of i-oppli>

S	oftware setting	.23
	Change melody/image	.23
	Icon info	.23
	Network set	.23
	See phonebook/history	.23
	Stand-by net	.24
	Stand-by set	
•	View ToruCa	.23

Stand-by display	44
Stand-by set (i-oppli)	
Status icon	112
සි -coppli settings	242
i-oppli stand-by display	101, 243
i-oppli to function	171

◆◇◆ A ◆◇◆
αBacklight242
AC adapter
Access authentication397
Access setting260
Accessories24
Action list
Add desktop icon
Add to a phonebook entry84
Add to phonebook (Phone)80, 84
Add to phonebook (UIM)80, 84
Additional service
Additional guidance394
Address link function
Alarm346
Alarm setting354
Answer setting
Antenna
Any key answer

αPower saver242
Area mail
Area mail settings
Arrival call act
AT command
Attach bookmarks
Attach document files
Attach i-motion movies 191
Attach melodies
Attach PDF files
Attach phonebook entries 191
Attach pictures
Attach schedule events
Attach SD other files
Attach ToDo items191
Attach ToruCa files
Attachment preference
Attachments
Auto answer setting 363

Auto assist setting60
Auto color label 213
Auto melody play 214
Auto power on/off 346
Auto reading 253
Auto save set
Auto start info
Auto start setting 242
Auto start time 243
Auto timer
Auto voice dial9
Auto-display 216
Autofocus 145
Auto-sort (Mail) 210
Auto-sort (ToruCa) 250
Auto-sort setting display 210
AV phone to function 170
vVibrator
•◇• B •◇•
Back cover 27

_
◆◇◆ B ◆◇◆
Back cover
Backlight
Bar code reader 149
Bar code reader list 152
Battery level 43
Battery pack 40
Attaching/removing 40
Charging 41
Charging time 41
Usable time 41
Bookmark
Bookmark (PDF) 315

313

Add bookmark . .

Bookmark folder list	63
Bookmark list	63
Brightness 75, 145, 2	79

•◇• C •◇•
Cache
Calculator
Calendar 101, 349
Calendar display 350
Call acceptance
Call barring
Call/charging indicator27
Call data
Call forwarding 380, 409
Call rejection 65, 128
Call setting without ID 129
Call waiting
Answer an incoming call during
a call
Continue the current call 379
End a call to answer another
call
End a call to answer the held
call
End a held call 379
Hold a call to make a new call
Caller ID notification 46
Caller ID request 382, 410
Camera 27, 134
Number of storable still images
137

Specifications for moving image	Input time	Chat member	Copy to microSD
shooting	JUMP370	Chat member list	
Specifications for still image	Kuten code	Chat setting	Copy to phone 250, 252, 297, 299
shooting	Learned words	Check box158	Copy to UIM
Camera menu 140, 143	Own dictionary	Check microSD301	Copyrights
Capture screen314	Paste372	Check new message195	Correct characters 368
Category list	Pictograph369	Check new messages376	Count characters 367
Certificate	Predict368	Check new SMS	Countdown train-P 236
Certificate host 175	Quote own data370	Check same data	Country code404
Chaku-moji	Quote phonebook 370	Check settings (Full browser) 260	Country code setting 61
Chaku-motion94, 103	Space	Check settings (i-appli)	Cushy mark 146, 278
Chaku-uta full® music list 330	Symbols	Check settings (i-mode) 172	Cut
Change action 73, 289	Undo	Check settings (Mail)214	
Change camera-mode 145	2/NIKO-touch guide370	Clear max cost icon360	◆◇◆ <b>D</b> ◆◇◆
Change character code 159	Character entry display366	Client authentication	Data box
Change i-mode password161	Character input method 366	Clock display117	Data communication
Change PIN1 code122	Mode1 (5-touch)	Color label	Data list
Change PIN2 code122	Mode2 (2-touch)	Color mode set	Data security service
Change security code 121	Mode3 (NIKO-touch)374	Color theme setting	Mail
Change size	Character size115	Command navigation key 28	Phonebook 92
Change to videophone call53	Character stamp278	Common phrase display	Still image
Change to voice call54	Chara-den	Common phrase folder list	Data transfer (OBEX)
Channel list	Chara-den display287	Common phrase list	Data while editing 83, 368
Chapter info	Chara-den list	Common phrases	Day of week
Character entry366	Chara-den player 287	Common replay mode147	DC adapter
Bar code reader 149	Chara-den recording display 289	Communication setup files 399	DCMX
Candidate display 370	Chara-den setup73	Connect to other devices 398	Deco-mail
Candidate display size 370	Charge sound97	Connector terminal	Template
Change input mode 370	Charging41	Contents info	Decomail-pictograph 270
Character set time	Charging terminals 27	Continuous mode	Delete attached file 192, 208
Common phrases 369	Chat group	Continuous scroll	Delete cookies
Copy	Chat group address confirmation	Continuous shooting140	Delete data
Cut	display	Cookie261	Desktop holder
Full pitch	Chat group list223	Cookie setting	Desktop icon
Half pitch369	Chat mail	Copy	Desktop icon list
Help370	Chat mail display220, 221	Copy from UIM	
			474

Detailed chat group display 223	Display size (Picture)	Equalizer (PC movie) 267	Forward specified calls to specified
Detailed data display295	Display SMS report	Error messages443	destination
Detailed dialed call display 55	Display software info231	Export administration regulations	Forward specified calls to voice mail
Detailed display	DoCoMo certificate		center
Detailed kisekae tool display 293	DoCoMo keitai datalink400		Forwarding guidance 381
Detailed mail group display 212	Document display settings 316	◆◇◆ F ◆◇◆	Forwarding image 310
Detailed message R/F display216	Document info	Feel settings	Frame 258, 278
Detailed phonebook display 87	Document list	_	Full browser
Detailed received call display 55	Document viewer	Feel * Mail	Full browser settings 260
Detailed received mail display	Download	Feel * Talk	Full-pitch character 367
	Download dictionary	FeliCa mark	Fullsong ring tone 335
Detailed redial display55	Download remain	File info	Function list 412
Detailed schedule display351	DPOF setting317	File property	Function menu
Detailed screen memo display 165	Draft	File restriction	
Detailed sent mail display 199, 201	Draft list	File size setting	◆◇◆ G ◆◇◆
Detailed sent message	DTMF tone off	Finder display 135, 140, 143	G guide program list
Detailed template display 189	Dual network383	FirstPass center	remote-controller 240
Detailed ToruCa file display		Flash	Group setting85
	♦○♦ E ♦○◆	Flat-plug earphone/microphone with	Guide
Dialed call list	Earphone/microphone	switch	Guide display
Dialed calls	·		Guide display
Dictionary info373	Earpiece volume	Flicker correction146	, ,
Dictionary info	Earpiece volume	Flicker correction	• H • •
Dictionary info         .373           Direct selection         .35           Display         .26, 29	Earpiece volume         .66           Edit 6 motion         285           Edit 6 motion display         285	Flicker correction.       146         Focus.       75, 146         Folder info.       244	Half-pitch character
Dictionary info       .373         Direct selection       .35         Display       .26, 29         Display call/receive number       .115	Earpiece volume       .66         Edit ∄ motion       .285         Edit ∄ motion display       .285         Edit phonebook       .87	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316	<b>Half-pitch character</b>
Dictionary info       .373         Direct selection       .35         Display       .26, 29         Display call/receive number       .115         Display during dialing       .52	Earpiece volume       .66         Edit ∄ motion       .285         Edit ∄ motion display       .285         Edit phonebook       .87         Edit picture       .277	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280	Half-pitch character
Dictionary info       .373         Direct selection       .35         Display       .26, 29         Display call/receive number       .115         Display during dialing       .52         Display during videophone calls       .50	Earpiece volume       .66         Edit ∄ motion       .285         Edit ∄ motion display       .285         Edit phonebook       .87         Edit picture       .277         Edit picture display       .277	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290	Half-pitch character
Dictionary info	Earpiece volume       .66         Edit ∄ motion       .285         Edit ∄ motion display       .285         Edit phonebook       .87         Edit picture       .277         Edit picture display       .277         End stand-by display       .244	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312	Half-pitch character
Dictionary info	Earpiece volume       .66         Edit ∄ motion       .285         Edit ∄ motion display       .285         Edit phonebook       .87         Edit picture       .277         Edit picture display       .277         End stand-by display       .244         End stand-by info       .244	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273	Half-pitch character
Dictionary info	Earpiece volume	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273         Folder list (SD other files)       301	Half-pitch character
Dictionary info         373           Direct selection         .35           Display         .26, 29           Display call/receive number         .115           Display during dialing         .52           Display during videophone calls         .50           Display for incoming calls         .64           Display message R/F         .216           Display mode setting         .257           Display phonebook image         .103	Earpiece volume       .66         Edit ∄ motion       .285         Edit ∄ motion display       .285         Edit phonebook       .87         Edit picture       .277         Edit picture display       .277         End stand-by display       .244         End stand-by info       .244	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273	Half-pitch character
Dictionary info	Earpiece volume	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273         Folder list (SD other files)       301         FOMA antenna       27	Half-pitch character 367 Hands-free 62 Hands-free with videophone 76 Header/signature 214 Headset switch to call 363 Headset usage setting 98 History info 266 Holding 67 Holding (during a call) 67
Dictionary info       373         Direct selection       35         Display       26, 29         Display call/receive number       115         Display during dialling       52         Display during videophone calls       50         Display for incoming calls       64         Display message R/F       216         Display mode setting       257         Display phonebook image       103         Display setting       101         Display size (Camera)       147	Earpiece volume	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273         Folder list (SD other files)       301         FOMA antenna       27         FOMA communication environment	Half-pitch character
Dictionary info       .373         Direct selection       .35         Display       .26, 29         Display call/receive number       .115         Display during dialing       .52         Display during videophone calls       .50         Display for incoming calls       .64         Display message R/F       .216         Display mode setting       .257         Display phonebook image       .103         Display setting       .101         Display size (Camera)       .147         Display size (Chara-den)       .288	Earpiece volume	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273         Folder list (SD other files)       301         FOMA antenna       27         FOMA communication environment       check application       240	Half-pitch character 367 Hands-free 62 Hands-free with videophone 76 Header/signature 214 Headset switch to call 363 Headset usage setting 98 History info 266 Holding 67 Holding (during a call) 67
Dictionary info       373         Direct selection       35         Display       26, 29         Display call/receive number       115         Display during dialling       52         Display during videophone calls       50         Display for incoming calls       64         Display message R/F       216         Display mode setting       257         Display phonebook image       103         Display setting       101         Display size (Camera)       147	Earpiece volume	Flicker correction       146         Focus       75, 146         Folder info       244         Folder list (Document file)       316         Folder list (i-motion)       280         Folder list (Melody)       290         Folder list (PDF)       312         Folder list (Picture)       273         Folder list (SD other files)       301         FOMA antenna       27         FOMA communication environment check application       240         FOMA PC setup software       399	Half-pitch character

<b>◆◇◆</b> ◆◇	<b>•</b>	Image stabilizer146
i-αppli	230	គួ menu156
Automatic start	242	គ្លី menu in English
Download	230	i-mode156
Power saver	233	i-mode (Chaku-uta full®) folder list
Run	231	
Software info	233	i-mode FeliCa
Start up	231	i-mode mail182
Upgrade	233	Compose
appli(microSD)	244	Forward196
i-αppli banking	240	Receive
i-αppli mail	231	Reply196
age -oppli settings	242	Reply with quote 196
i-αppli stand-by display		Save
i-αppli to function		Send
IC card	246	i-mode menu
IC card content	232	i-mode password
IC card list	232	i-mode settings
IC card lock	254	i-mode trouble diagnosis site 453
IC lock (power-off)	254	i-motion176
iC transfer service	246	គ្លី motion auto-play
iC transmission	311	⊞ motion info
Receive all data files	312	i-motion player 280
Receive one data file	311	Inbox198
Send all data files	311	Inbox folder list 198, 200
Send one data file	311	Inbox list
i-Channel	178	In-call ring tone 64
lcon1	42, 144, 147	In-car hands-free63
Icon color	103	Info
lcons	31	Info notice setting
iD setting application	241	Infrared data exchange307
IDD prefix setting	61	Receive all data files310
Illumination		Receive one or multiple data files
Image quality	106, 145	
Image size		Send all data files
-		

	)
Infrared data port26	ò
Infrared remote-controller	)
Initial setting	;
Initialize364	ļ
Intellectual property rights 21	ı
International call access code 404	ļ
International calls	)
International dial (International	
roaming)406	ò
International dial assist	)
International prefix number for	
the universal number405	5
International roaming	2
International videophone call 60	)
Internet	
ISP connection communication173	3
JAN code	
	)
Japanese display	
Japanese display	1
Japanese display	1
Japanese display	1
Japanese display       .44         ★○★       K         Key guide       .75         Keypad dial lock       .126	1 5
Japanese display       .44         ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★       Key guide       .75         Keypad dial lock       .126         Keypad sound       .97	1 5 6
Japanese display       .44         ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★	5 6 7 8
Japanese display       .44         ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★ ★       Key guide       .75         Keypad dial lock       .126         Keypad sound       .97	5 6 7 8
Japanese display	5 6 7 8
Japanese display       .44         Key guide       .75         Keypad dial lock       .126         Keypad sound       .97         Kisekae tool       .107, 293         Kisekae tool list       .293	1 5 6 7 3 8
Japanese display       .44         Key guide       .75         Keypad dial lock       .126         Keypad sound       .97         Kisekae tool       .107, 293         Kisekae tool list       .293         L          Last URL       .160	1 5 6 7 8 3
Japanese display       .44         Key guide       .75         Keypad dial lock       .126         Keypad sound       .97         Kisekae tool       .107, 293         Kisekae tool list       .293	1 5 6 7 8 3

data files	Light sensor 26, 104
309	Line feed
	Links with AV equipment 441
ler	List of characters assigned to keys
	(NIKO-touch input method) 430
364	List of characters assigned to keys
hts21	(2-touch input method) 429
s code404	List of characters assigned to keys
59	(5-touch input method) 428
national	List setting (Mail) 206
	Listening (i-motion) 283
60	Listening (MUSIC player) 337
nber for	Listening (Music&Video channel)
405	
	Listening (PC movie) 267
ne call60	Listing (i-motion) 282
162	Listing (Kisekae tool) 293
inication173	Listing (PC movie) 267
	Listing (PDF)
<b>*</b> > <b>*</b>	Lock all
149	Low battery alarm 43
44	
	◆◇◆ M ◆◇◆
<b>^</b> ^	Mail
<b>◆◇◆</b>	Mail auto-receive
	Mail group 212
126	Mail group address confirmation
97	display
107, 293	Mail group list 212
293	Mail list display 213
	Mail menu 200
<b>♦</b> ♦	Mail/message ring time 97
160	Mail security 128, 204
	Mail settings 010
	Mail settings 213

Main menu	microSD memory card	Music&Video channel playback	Obtaining completion display
i-mode group343	File name	display	(Download dictionary) 169
Mail group	Folder configuration303	My documents	Obtaining completion display
Setting group	Inserting/removing294	My menu 161	(i-motion)
Tool group343	Using with a personal computer	My picture 273	Obtaining completion display
Maintenance services452			(Kisekae tool) 168
Making a call50	microSD memory card slot	◆◇◆ N ◆◇◆	Obtaining completion display
Making a call (International roaming)	microSD reader/writer	Navigation displays 28	(Melody)
	Missed calls70	NEGA/POSI mode	Obtaining completion display
Making a videophone call 50	Mojiris hexagon235	Network search mode 407	(PC movie) 263
Making a videophone call	Movable contents	Network search mode	Obtaining completion display
(International roaming) 405	Move to microSD300	Network services	(Template)
Manner mode	Move to phone	Night mode	Obtaining completion display
Manner mode set	Movie memo	Noise reduction 62	(ToruCa)
Map application236	Movie mode	Notice call cost	Obunsha kanji test application for P
Mark	Movie type set147	Notification icon	
Add mark314	Moving image	Notify caller ID	OFFICEED 393
Marker stamp	Moving image list	Notify switchable mode	Omakase lock 123
Melody call setting 96	Moving image shoot	No. of phonebook 88	On hold 67
Melody info	Multi number	Nuisance call blocking	One-push open 43
Melody list	Multiaccess	Number of entered characters 367	One-push open button27
Melody playback display 290	Multiaccess combination patterns	Number of protectable items 463	Operation mode
Melody player		Number of remaining characters	Operations during manner mode
Menu function	Multiple windows257		
Menu icon	Multitask	Number of savable items 463	Operator name display 408
Menu icon setting	Multitask combination patterns438	Number of storable items 463	Options 24, 441
Menu number selection	Music folder list	Numeric keys	Original
Message composition display 182	Music info		Original animation 279
Message display213	Music list	•◇• O •◇•	Original animation list 279
Message display settings 58	Music list of a playlist		Osaifu-Keitai 246
Message entry display 182	MUSIC player	Obtain i-motion movie 177	Osaifu-Keitai compatible i-oppli 247
Message R/F215	MUSIC player playback display331	Obtain ToruCa files 248	Outbox
Message R/F list216	Music&Video channel	Obtaining completion display	Outbox folder list 199, 201
microSD file display 295	Music&Video channel display	(Chaku-uta full®) 326	Outbox list 199, 201
microSD format		Obtaining completion display	Out-of-service-area indication
microSD info		(Chara-den)	

Own dictionary	Picture275	Position to play	Pull down menu 158
Own number 47, 75, 355	Picture info	Positioning	
Own number display47, 355	Picture viewer273	Post view display 140, 141, 143	• <b>⋄• Q •</b> ⋄•
	PIN1 code121	Power on/off	QR code
•◇• P •◇•	PIN1 code entry set	Power saver mode	Quality alarm
Packet communication 396	PIN2 code121	Prediction conversion at reply 214	Quick manual
Page info	Play background	Prefer Chaku-moji58	Quick record message
Page info on/off		Preferred tone242	Quick silent
Page layout	Play/erase messages	Prefix setting	Quotation marks
Palette	Play/erase videophone messages	Preparation flow for data	Quotation marks 213
Passwords		communication399	<b>p</b>
Paste	Play mode setting (MUSIC player)	Preparation flow for data	
Pause dial		transfer (OBEX)	Radio button 158
PC mode	Play mode setting	Priority order	Radio waves reception level 29
PC movie	(Music&Video channel) 324	Alarm348	Rakuoku exhibition application 2
PC movie auto-play	Played history list	Answer message71	
PC movie folder list	Player menu display	Auto-sort	Read aloud output 345
PC movie list	Playing back record messages 72	Call receiving image	Read aloud settings 344
PC movie player	Playlist (i-motion) 284	Illumination110	Read aloud speed 345
PC movie type selection display	Play back playlist285	Nuisance call prevention 132	Read aloud valid setting 345
	Store playlist	Ring tone95	Read aloud volume 345
PDF	Playlist (Melody) 290	Substitute image 73, 74	Reading aloud
PDF file list	Edit playlist	Vibrator	Reason for no caller ID 129
PDF viewer	Play back playlist290	Private menu	Receive mail/call at open 104
Personal data lock	Playlist (MUSIC player)337	Private menu list	Receive option 195
Personal information	Create playlist	Private menu setting354	Receive option setting 195
Phone mode	Play back playlist338	Private window	Receive ToruCa 253
Phone to function	Playlist list (i-motion) 284	Program folder list322	Received address 209
Phonebook80	Playlist list (MUSIC player)338	Program info	Received address list 209
Phonebook image sending 92	PLMN setting	Program list	Received call list 55
Phonebook list	Point ring tone335	Protect on (Mail)	Received calls54
Photo auto display	Portrait rights21, 133	Protect on (MessageR/F) 217	Receiving a call 63
Photo mode	Position memory (i-motion) 281	Protect on (Screen memo) 165	Receiving a call
Photo-sending	Position memory	Public mode (Drive mode)68	(International roaming) 406
Pictograph list	Position memory (PC movie) 265	Public mode (Power off) 69	Receiving a videophone call 63
i lotograpii list	Position memory 266, 267	PUK (PIN unblock code)121	
	1		175

Receiving a videophone call	Restrictions	Secret data only 127	Set hold tone 68
(International roaming) 406	Retouch	Secret mail display 127	Set 🖁 oppli to
Receiving display (Mail) 214	Ring time	Secret mode 127	Set image display 172, 260
Receiving display (ToruCa) 253	Ring volume	Security error 233	Set 🖁 motion
Reception result display	Roaming guidance	Security scan function	Set in-call arrival act 385
194, 218, 225	Rotate	(Scanning function) 460	Set roaming guidance 408
Recharge battery display 43		Security settings 119, 131	Set scan
Recognition mode154		Select image 76, 77	Set time 45
Reconnect signal 62	"S" icons	Select language 44	Setting when folded66
Record Chara-den	SAR	Select ring tone 94	Setting when opened66
Record display set	Save an i-motion movie	Select storage 251, 266, 306, 335	Shichida method! memory ear
Record message list	Scanned code result display	Selecting multiple items 35	application 235
Record message setting70	Scanned text confirmation display	Self mode	Shoot with frame 146
Record voice memo		Send DTMF tone	Shot interval 147
Recorded file restriction	Scanned text result display	Send substitute images 74	Shot number 147
Redial	Scanning code display	Sent address 209	Shutter sound 146
Redial list	Scanning function	Sent address list 209	Side keys guard126
Referer	Scanning result	Sent/received phonebook data list	Signature 214
Referer setting261	Scanning text display		Simple menu
Reject unknown	Schedule	Serial number of mobile	Site display for the FirstPass
Reject videophone	Schedule list	phones/UIMs	center
Related equipment	Screen memo	Service numbers 384	Slideshow
Releasing PIN lock	Screen memo folder list	Services available overseas 402	Smiley
Reload	Screen memo list	Services available with FOMA	SMS 224
Remaster (i-motion)	Script setting	phones 440	Compose
Remaster (MUSIC player) 337	Scroll	Set as ring tone	Forward 196
Remaster (Music&Video channel)	Scroll selection	(Chaku-uta full®)	Receive
	SD-Audio	Set as ring tone (Melody) 291	Reply 196
Remaster (PC movie)	SD other file list	Set as stand-by (Camera) 144	Save
Remote control	SD other files	Set auto-update	Send224
Reserve update459	SD-PIM	(Scanning function) 461	SMS center selection 227
Reset last URL 160, 260	Search by i-mode	Set auto-update	SMS composition display 224
Reset learned words373	Search phonebook	(Software update)455	SMS input character 227
Reset settings	Search phonebook display 85	Set check new message 214	SMS report request 226
Reset total cost&duration	Secret code89	Set connection timeout 172	SMS settings 226
Restrict dialing128		Set display 142, 274	SMS validity period 226
4=0			

Software for playing back moving
images44
Software info233
Software list 23
Software setting
Change melody/image 233
Icon info
Network set
See phonebook/history233
Stand-by net 244
Stand-by set
View ToruCa233
Software update 454
Software update display45
Sound effect setting 172
Speakers
Specific absorption rate 464
Specifications
SSL certificate 173
Stand-by display44
Stand-by set (i-oppli) 243
Status icon
Status in the area408
Still image275
Still image list 273
Still image shoot140
Store in
Sub-address setting 62
Substitute image
Summer time
Super silent
Switch image display positions 74
Symbol candidate list 433
Symbol list
•

◆◇◆ T ◆◇◆	Į
Template189	ι
Template list	Į
Terminal security code	Į
Text box	Į
Text memo	Į
Text memo info360	Į
Text reader	ι
Text reader list	Į
Ticker on/off	Į
Timer lock on at close 125	Į
Title name275	ı
ToDo353	
ToruCa	
ToruCa file list	ı
ToruCa folder list 249	
ToruCa settings253	١.
ToruCa viewer	6
Total calls	١
Total calls duration	١
Trace info	١
Trademarks	١
Trim away279	١
Trim for mail	١
Trim for picture	١
Trim \$\frac{1}{6}\$ motion	١
Troubleshooting	١
Two-touch dial	١
Type list	١
	١
◆◇◆ U ◆◇◆	١
UIM (FOMA card)	١
Differences	١
Insert/remove	١
UIM operation361	١

	UIM restrictions38
9	UIM setting
9	Update (Pattern data)
0	Update now
8	Update ToruCa
0	Upload258
0	URL history
2	URL history list
3	USB mode setting302
9	Use phone information
5	User authentication397
5	User certificate
3	Request issue/download 174
8	Request revocation
1	Uta-hodai
9	
3	◆◇◆ V ◆◇◆
9	"V" icons
9	Version
9	Vibrator
2	Videophone record message list72
1	Videophone settings
9	Videophone while packet 78
6	View blind
6	
6	Visual preference
	Visual preference
2	•
0	Voice announce
	Voice announce
0	Voice announce
0	Voice announce
0	Voice announce 96 Voice call auto redial 77 Voice dial 90 Voice dial setting 90 Voice earphone dial 91
9	Voice announce 96 Voice call auto redial 77 Voice dial 90 Voice dial setting 90 Voice earphone dial 91 Voice mail 376, 409
0 9	Voice announce         .96           Voice call auto redial         .77           Voice dial         .90           Voice dial setting         .90           Voice earphone dial         .91           Voice mail         .376, 409           Voice memo         .356

<b>◆◇◆</b>	w	<b>*</b> > <b>*</b>		
Wake-up display				102
Warranty				452
Web mail				227
Web to function.				171
White balance			75,	145
Window open gu	ard			260
WMA file				327
WMA list				330
WORLD CALL				. 59
World time watch				. 46
WORLD WING .				402
<b>.</b>	Z	<b>•</b> ◇•		
Zoom		75,	144,	260
Zoom in			313,	317
Zoom out			313,	317
◆◇◆ Nui	meri	cs ·	<b>\</b>	
184				. 47
186				. 47
2in1				387
3GPP				. 50

## **Quick Manual**

#### **How to Use Quick Manual**

 
Cut out Quick Manual interleaved into this manual along the cutout line, and then fold it as shown below:

Take Quick Manual "For Overseas Use" with you for using an international roaming service (WORLD WING) overseas.

#### ■How to cut

Cut out Quick Manual along the cutout line. You can place a ruler on the cutout line and cut as illustrated below.


• Be careful not to cut yourself when using scissors.



#### ■How to fold

Fold Quick Manual along the dotted line so that the cover faces upwards as illustrated below.

 • To use Quick Manual, put the first sheet on top of the second and third sheets in the order, and fold them together.



## FOMA P705i μ/PROSOLID μ

#### **Quick Manual**

#### General inquiries < DoCoMo Information Center>

(In English)

0120-005-250 (toll free)

Can be called from mobile phones and PHSs.

(In Japanese only)

(No prefix) 151 (toll free)

Can be called only from DoCoMo mobile phones and PHSs.

#### Repairs

(In Japanese only)

(No prefix) 113 (toll free)

Can be called only from DoCoMo mobile phones and PHSs. (In Japanese only)

0120-800-000 (toll free)

Can be called from mobile phones and PHSs.

· Please confirm the phone number before you dial. . For further information, refer to the "Nationwide Service Station List" included with your FOMA terminal and other Storing in Phonebook (FOMA Phone)

(for at least one second) → Phone

Enter a name.

R →Edit a reading.

Group> → Select a group.

<Phone number> → Enter a phone number →Select an icon. (up to four numbers)

✓ <Mail address> → Enter a mail address →Select an icon, (up to three addresses)

→Enter a postal address.

<Birthday>→Enter a birthday→ON or OFF

= <Memo>→Enter a memo.

<Image> → Select an item. Select image . . . . Store a still image in Data Box.

Shoot image . . . . Store a still image shot by the camera. (This function is not available for PROSOLID (/.)

Memory No.>

→Enter a three-digit memory number→ [\sime]

2

## Store from Redial, Dialed Calls, or Received Calls

Adding Data to the FOMA phone Bring up the redial item, dialed call record, or received call record→ in

→Add to phonebook→Phone→Add

→Select a search method →Search the Phonebook

→Select a destination Phonebook entry

#### **Edit Phonebook Entries**

Bring up the detailed Phonebook display

→ MENU → Select an item to be edited

→Edit the contents→(☑)→YES

Character Entry Display Edit text memo

**Character Entry** 



Character Entry Mode

abc .. Alphabets 123 .. Numerals

漢.... Kanji/Hiragana

カナ.... Katakana

■ Selecting Character Input Method

MENU → Settings → Other settings →Character input method→Input mode→

Put a check mark for Mode 1 (5-touch) Put a check mark for Mode 2 (2-touch)

Put a check mark for Mode 3 (NIKO-touch)

→(M)→Select the mode you use with priority.

■ Entering "` " and "° " Enter a character→Press (★) several times.

■ Entering "、" and "。" Press # several times.

Switching "Alphabet" (abc), "Numerals" (123),

"Kanii/Hiragana" (漢), and "Katakana" (カナ) Press (☑) several times.

- Line Feed Press 🔯
- Entering a Space
- Deleting Characters Use to move the cursor→(CLR)

■ Switching to Uppercase/Lowercase Enter a character→

# Music Playback

- Playing Back a Music&Video Channel Program MENU → MUSIC → Music & Video Channel →Select a program.
- MENU → Data box → Music & Video Channel →Downloaded program or Saved program
- →Select a program. ■ Playing Back by MUSIC Player
- MENU)→MUSIC→MUSIC Player →All tracks→Select a music file.

#### Enter "タダの菓子" into a Text Memo

- Bringing up the Character Entry (Edit) display
- MENU → Stationery → Text memo →Select <Not recorded>→Press (☑) a few
- times to switch to Kanji/Hiragana input mode.
- Entering Hiragana characters <Mode 1>
- tc→Press 4 once and once.
- だ→Press 4 once and ★ once.
- $\mathcal{O} \rightarrow \text{Press} (5)$  five times.
- か→Press 2 once.
- U→Press 3 twice.
- Converting the Characters
  - Use lo to move the cursor to "O"→ \overline{\overline{\text{\tilde{\text{\te}\text{\texi}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\texi}\text{\text{\text{\texi}\text{\texit{\texi}\texit{\texit{\texit{\texi}\texitt{\texi\texit{\texit{\texi}\texit{\texit{\texit{\texi}\tiint{\texit{ →Use (つ) to highlight "タダの" and press (□)
  - →Fix the rest of characters in the same way.

## Making and Receiving a Videophone Call

- Making a Videophone Call Enter the other party's phone number
  - → Press To end the call after talking.
- Receiving a Videophone Call The ring tone sounds and the Call/Charging indicator flickers→ 💪 or 💿
- →Press ( to end the call after talking. ■ Switching to Hands-free
  - During a call, dialing, or connecting→

#### Camera

The camera function is not available for PROSOLID II.

- Shooting a Still Image
- (७)→(०)→(०)
- Continuous Shooting
- $[a] \rightarrow [a] \rightarrow [a] \rightarrow [a]$
- →Select a still image and press () → \*This is the procedure to select and save one still image for continuous shooting.
- Shooting a Moving Image

# i-mode Mail

## Compose and Send i-mode Mail



Select the address field→Select an entering method→Enter or select an address.

Select the subject field→Enter a subject.

Select the text field→Enter text.

Send a mail by pressing [\sigma] →After sending, press

#### **Attach Files**

- Image/Melody/i-motion movie/ToruCa file/PDF file/Phonebook entry/Schedule event/ToDo item/Bookmark/Document file/Other files Bring up the Message Composition display
- →Select the attachment field
- →Select a file type to be attached
- →Select a folder→Select a file. Selecting methods differ depending on the file.

#### Receive i-mode Mail

" (white)" blinks → The Reception Result display appears → Select "Mail"

→Select an i-mode mail message to be displayed.

#### **Check New Message**

(for at least one second)

**Other Mail Functions** 

■ Replying

Select or bring up a mail message to be replied →(ix)→Reply/forward

→Reply, or Reply with quote

→Select the text field→Enter text→[\D] →After sending, press .

■ Forwarding

Select or bring up a mail message to be forwarded→(i=x)→Reply/forward→Forward

→Select the address field

→Select an entering method

→Enter or select an address→ 🖾

→After sending, press .

12

13

14

#### **Function List**

	Menu	Function name
		Inbox
		Outbox
		Draft
		Compose message
		Template
		Web mail
		Check new message
Mail		Compose SMS
		Check new SMS
		Chat mail
		Receive option
		Mail settings
		SMS settings
		Area mail settings

	Menu
	Bookmark
	Screen memo
	Last URL
	Go to location
គ្គ -mode	Message R/F
_	응 -Channel
	Check new message
	Operate certificate
	∃ -mode settings
	Full Browser
	Software list(phone)
	Contivate iist(priorie)
	ි -oppli(microSD)
a -αppli	_ " ,

	Sound	
	13	Select ring tone
	50	Ring volume
Settings	30	Keypad sound
	64	Position to play
	51	Headset usage setting
	68	Mail/Msg. ring time

15

16

17

	IC card lock		
	Timer lock ON at close		
19			
	Videophone		
	Visual preference		
	Select image		
	Hands-free w/ V. phone		
	Voice call auto redial		
	Notify switchable mode		
	Reject videophone		
Cottings	Feel settings		
Settings	Feel * Talk		
	Feel * Mail		
	Network setting		
	Prefix setting		
	Int'l roaming		
	Int'l dial assist		
	Status in the area		
	Melody Call Setting		

Secret mode Secret data only Keypad dial lock Reject unknown Call setting w/o ID Change security code UIM setting Scanning function IC lock(power-off) Call data Reset total cost&dura. Notice call cost CLR max cost icon Set time World time watch Summer time Auto power ON/OFF Alarm setting 20

18

Incoming call 54 Vibrator 20 Manner mode set Answer setting Setting when opened Record display set Disp. PH-book image Disp. call/receive No. 90 Ring time Settings Info notice setting V-phone while packet Auto answer setting Talk Volume Setting when folded 18 Set hold tone 76 Noise reduction 75 Quality alarm 77 Reconnect signal

Other settings Side keys guard Character input method Battery Pause dial Sub-address setting Settings Headset switch to call Voice settings USB mode setting Reset settings Initialize Software update

21 22 23

	- 40	
1	46	My picture
		MUSIC
		Music&Video Channel
		motion
	16	Melody
Data box		My documents
		Kisekae Tool
		Chara-den
		PC Movie
		Document viewer
		SD other files
		Bar code reader*
	79	Receive Ir data
		SD-PIM
LifeKit		Camera**
LiteKit		Text reader <sup>®</sup>
	55	Rec. msg/voice memo
		Voice recorder
		Data Security Service
*This functi	ion is not	available for PROSORID $\mu$ .

not available for PROSORID	μ.
2/	

	17	Caller ID notification
		Voice mail
		Call waiting
		Call forwarding
		Nuis. call blocking
		Caller ID request
		2in1 setting
		Multi number
		Arrival call act
Service		Set in-call arrival act
		Remote control
		Dual network
		English guidance
		Set Roaming guidance
		Additional service
		Service numbers
		OFFICEED
		Chaku-moji

25

Phonebook		Add to phonebook	
		Search phonebook	
		UIM operation	
	24	Dialed/recv. calls	
	0	Own number	
		Group setting	
		Restrictions	
	26	Phonebook settings	
		No. of phonebook	
	44	Alarm	
	45	Schedule	
	95	ToDo	
Stationery	42	Text memo	
,	85	Calculator	
		Guide	
	38	Common phrase/dic.	
		MUSIC Player	
MUSIC		Music&Video Channel	

26

Osaifu Keitai	IC card content DCMX ToruCa IC card lock set.
Osaifu Keitai	Settings
	Search by 🖁 -mode

- Public Mode (Drive Mode)

  (★)(for at least one second)
- Manner Mode
  During standby/During a call
  → # (for at least one second)

#### **Network Services**

#### **Voice Mail Service**

- Activating
  - YES→ Enter a ring time (seconds).
- Deactivating
  - MENU → Service → Voice mail → Deactivate
  - →YES
- Playing Back Messages
  - MENU → Service → Voice mail
  - → Play messages → YES
  - $\rightarrow$  Operate following the voice guidance.

## **Call Waiting Service**

- Activating
- →Service→Call waiting→Activate
  →YES
- Deactivating
- MENU → Service → Call waiting → Deactivate → YES
- Answering an Incoming Call during a Call
  - A call comes in during a call→ ⊆ Each time you press ⊆, you can switch the parties you talk with.

## **Call Forwarding Service**

Activating

MENU → Service → Call forwarding → Activate → Register fwd number→Enter the phone number of the forwarding destination

→Set ring time→Enter a ring time (seconds)→ Activate→YFS

Deactivating MENU → Service → Call forwarding

→Deactivate → YES

30

## (white): i-mode mail is held at the i-mode Center.

(white): Messages R/F are held at the i-mode Center.

: i-mode mail is held at the i-mode Center (While Receive Option Setting is set to "ON").

: During Lock All

: During Personal Data Lock

: During Keypad Dial Lock

: During Secret Mode or Secret Data Only

: During IC Card Lock

While Timer Lock ON At Close is set

While Vibrator is set to other than "OFF" (See page 21)

#### Services Available with FOMA Phone

Available service	Phone number
Directory assistance service (Charges apply: guidance fee + call fee)	(No prefix) 104
*Listed phone numbers only can be given.	(110 promit)
Telegrams (Telegram charges apply)	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	City code of the desired area+ 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charge apply)	(No prefix) 171
Collect calls (Charges apply: guidance fee + call fee)	(No prefix) 106

31

: While Ring Volume is set to "Silent" or Mail/Msg. Ring Time is set to "OFF"

During Manner Mode (See page 27)

: During Public Mode (Drive Mode) (See page 27)

While Side Keys Guard is set to "ON"

(See page 23)

#### **Major Icons**



= : Battery level (estimate)

: Radio waves reception level (estimate)

5Elf: During Self Mode

(white): Unread i-mode mail or SMS messages exist.

RF(white): Unread Messages R/F exist

## <Emergency Contact Number for Loss Etc.>

### **Omakase Lock**

\*Omakase Lock is a pay service. However, you are not charged. if you apply for this service at the same time as applying for the suspension of the use or during the suspension.

Setting/Releasing Omakase Lock

010 0120-524-360 Business hours: 24 hours

## **Other Emergency Calls**

< Phone number:

< Phone number:

< Phone number:

Please confirm the phone number before you dial.

## Loss or theft of FOMA terminal or payment of cumulative cost overseas

<DoCoMo Information Center> (available 24 hours a day) From a DoCoMo mobile phone

International call access code for -81-3-5366-3114\*

the country you stay (Table 1) (toll free)

\*You are charged a call fee to Japan when calling from a landline phone, etc.

+81-3-5366-3114 (to dial "+", press and hold the "0" key for at least one second).

From a landline phone

<Universal number>

International prefix number for the -800-0120-0151 universal number (Table 2)

\*You might be charged a domestic call fee according to the call rate for the country you stay.

\*See page 16 and page 20 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).

#### Failures encountered overseas

<Network Technical Operation Center> (available 24 hours a day)

From a DoCoMo mobile phone

International call access code for -81-3-6718-1414\* the country you stay (Table 1) (toll free)

\* You are charged a call fee to Japan when calling from a landline phone, etc.

※If you use P705i μ/PROSOLID μ, you should dial the number +81-3-6718-1414 (to dial "+", press and hold the "0" key for at least one second).

From a landline phone

<Universal number>

International prefix number for the -800-5931-8600\* universal number (Table 2)

\*You might be charged a domestic call fee according to the call rate for the country you stay.

See page 16 and page 20 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).

. If you lose your FOMA phone or have it stolen, immediately take the steps necessary for suspending the use of the FOMA phone.

 If the FOMA phone you purchased malfunctions, bring your FOMA phone to a repair counter specified by DoCoMo after you return to Japan.

#### **Preparing for Overseas Use**

#### Setting of i-mode

Setting in Japan

ਡਿਕ → ਨ Menu→English iMenu→Options

→International Settings

→i-mode services Settings→Select "Yes"

→Enter your i-mode password→Select

Setting Overseas

**I** ■ R Menu→English iMenu→Options

→International Settings

→i-mode services Settings→Select "Yes"

→Enter your i-mode password→Select

2

#### **Remote Control**

Setting in Japan

MENU → Service → Remote control → Activate →YES

Setting Overseas

MENU → Settings → Network setting

→Int'l roaming→Remote control (Int.)

→YES→Operate following the voice guidance.

#### **Set Time**

MENU)→Settings→Clock→Set time

→Auto time adjust ON

#### **Communication Systems and Available Services**

Communication Service	3G
Voice call	0
Videophone call	0
i-mode	0
i-mode mail	0
SMS	0
i-Channel	0
Packet communication by connecting with a personal computer	0

O: Available

The 64K data communication is not available overseas.

#### Setting a Search Method of Carrier

MENU → Settings → Network setting

→Int'l roaming→Network search mode

→Select an item.

Auto . . . . . Automatically re-connect to another carrier. The setting is completed.

Manual.... Connects manually to the listed carrier.

Network re-search

. When set to "Auto", automatically switches to an available carrier. The setting is completed. When set to "Manual", displays the list of carriers.

→Select a carrier.

3

# **Preferentially Connect to**

MENU → Settings → Network setting → Int'l roaming

→PLMN setting→(i) →PLMN list select

→Select a carrier → • → M → YES

**Selecting Carrier to** 

## Displaying the Carrier on the Stand-by Display

MENU → Settings → Network setting

→Int'l roaming→Operator name display

→Display ON or Display OFF

## Make a Call to a Phone in the **Country You Stay**

Enter a destination phone number→ (4)/ Press (☑) to make a videophone call.

■ Making a Call Using Phonebook Bring up the detailed Phonebook display → 🍊 /( 🗊 → "Original phone No."

## Make a Call to a Person who is Staving Overseas and Using WORLD WING

When you make a call to a person who is also internationally roaming, make the call in the same way as to make international calls to Japan even if he/she is in the country you stay.

#### Receive a Call

Press ( ) when a call comes in.

#### Display

The name of carrier you are using is displayed.



### **Setting after Returning to Japan**

After you return to Japan, the FOMA network is automatically searched and connected.

 When you have set to switch networks manually MENU → Settings → Network setting → Int'l roaming

→Network search mode→Manual→DoCoMo

#### **Using Network Services**

To use network services overseas, you need to set "Remote control" beforehand.

■ Set Roaming Guidance

You need to set this function in Japan.

MENU → Service → Set Roaming guidance

■ Call Barring

 This setting might not be available depending on the overseas carrier

MENU → Settings → Network setting

→Int'l roaming→Call barring

■ Voice Mail (International)

MENU → Settings → Network setting →Int'l roaming→Voice mail (Int.)

## Make a Call to Outside the Country You Stay (Including Japan)

Making/Receiving a Call

Making an International Call to Japan Using Phonebook

Bring up the detailed Phonebook display

→ 🐔 / 📵 → Dial

Press (

) to make an international videophone call.

■ Making an International Call Using "+"

O (for at least one second) → Enter "Country code - Area code (City code) -Destination phone number"→ 🍒 /( 💿

Press (☑) to make an international videophone call. Enter "81" as a country code when you make an

international call to Japan.

When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.

■ Call Forwarding (International)

MENU → Settings → Network setting →Int'l roaming→Call forwarding (Int.)

■ Roaming Guidance (International)

MENU → Settings → Network setting →Int'l roaming→Roaming guidance (Int.)

■ Caller ID request

MENU → Settings → Network setting →Int'l roaming→Caller ID reg. (Int.)

## **Country Codes for Major** Countries

Use the following country codes when you make international calls or when you set Int'l Dial Assist.

	(As of December 2007)
Service area	Country code
Australia	61
Belgium	32
Brazil	55
Canada	1
China	86
Czech Republic	420
Denmark	45
Finland	358
France	33

Service area	Country code
Germany	49
Greece	30
Hong Kong	852
Hungary	36
India	91
Indonesia	62
Ireland	353
Italy	39
Luxembourg	352
Macau	853
Malaysia	60
Monaco	377
Netherlands	31

13

Service area	Country code
New Zealand	64
Norway	47
Philippines	63
Poland	48
Portugal	351
Russia	7
Singapore	65
South Korea	82
Spain	34

14

Service area	Country code
Sweden	46
Switzerland	41
Taiwan	886
Thailand	66
Turkey	90
United Arab Emirates	971
United Kingdom	44
United States of America	1
Vietnam	84

※For the code for the countries other than listed in the table, or for details, refer to the DoCoMo Global Service web page.

International Call Access Codes
international Call Access Codes
for Major Countries (Table 4)
for Major Countries (Table 1)

(1	As of August 2007	
(As of August 2007		
Service area	Access code	
Australia	0011	
Belgium (	00	
Brazil (	0041/0014	
Canada (	011	
China (	00	
Czech Republic 0	00	
Denmark (	00	
Finland (	00	
France (	00	
Germany (	00	

Service area	Access code	
Greece	00	
Hong Kong	001	
Hungary	00	
India	00	
Indonesia	001	
Ireland	00	
Italy	00	
Luxembourg	00	
Macau	00	
Malaysia	00	
Monaco	00	
Netherlands	00	

15

00

New Zealand

			,
		ġ	1
		į	
		ì	•

Access code
00
00
00
00
810
001
001
00
00
00
002
001
00

18

Service area	International prefix number
France	00
Germany	00
Hong Kong	001
Hungary	00
Ireland	00
Israel	014
Italy	00
Luxembourg	00
Malaysia	00
Netherlands	00
New Zealand	00
Norway	00
Peru	00
Philippines	00

Service area	Access code
United Arab Emirates	00
United Kingdom	00
United States of America	011
Vietnam	00

19

Service area	International prefix number
Portugal	00
Singapore	001
South Africa	09
South Korea	001
Spain	00
Sweden	00
Switzerland	00
Taiwan	00
Thailand	001
United Kingdom	00
United States of America	011

# International Prefix Numbers for the Universal Number (Table 2)

(As of August 2007)

Service area	International prefix number
Argentina	00
Australia	0011
Austria	00
Belgium	00
Brazil	0021
Bulgaria	00
Canada	011
China	00
Colombia	009
Denmark	00
Finland	990

20

## Inquiries

For lost, stolen, and cost settlement, or malfunction of your FOMA phone overseas, refer to "Loss or theft of FOMA terminal or payment of cumulative cost overseas" on cover page of Quick Manual "For Overseas Use", or "Failures encountered overseas" on page 1.

- You need to add the "international call access code (Table 1)" that is assigned to the country you stay or "international prefix number for the universal number (Table 2)" to the head of each phone number for inquiries.
- Note that, in many cases, the universal number may not be used from a mobile phone, public phone, or hotel phone, etc.

Access DoCoMo e-site for procedures to change your address or billing plan and for request of Information materials.

From i-mode

i Menu ▶ 料金&お申込・設定 (Charges & Applications/Setting) ▶ 各種手続き (ドコモeサイト)

[Application procedure (DoCoMo e-site)]

Packet communication charges free

From PC

My DoCoMo (http://www.mydocomo.com/) ▶

- You will need your "network ID" to access e-site from i-mode.
- No packet communication charges are incurred when accessing e-site from i-mode.
   Accessing from overseas will incur chages.
- You will need your "DoCoMo ID/password" to access e-site from PC.

▶ 各種手続き (ドコモeサイト) [Application procedure (DoCoMo e-site)]

- If you do not have or you have forgotten your "network ID" or "DoCoMo ID/password", contact the DoCoMo Information Center listed below.
- DoCoMo e-site may not be available depending upon the content of your subscription.
   You may not be able to access some e-site services due to system maintenance, etc.

## Don't forget your FOMA phone ... or your manners!

#### In the following cases, be certain to turn off the power.

#### ■Where use is prohibited

Be sure to turn off the power to your FOMA phone in airplanes and in hospitals.

- ※Persons with electronic medical equipment are in places other than the actual wards. Make sure you have the power switched off even if you are in a lobby or waiting room.
- ■When in crowded places such as packed trains, where you could be near a person with an implanted cardiac pacemaker or implanted defibrillator

The implanted cardiac pacemaker or implanted defibrillator operation can be affected by radio emissions from the FOMA phone.

#### In the following cases, be certain to set Public Mode.

#### ■While driving

Using the mobile phone in your hand while driving is subject to punishment.

\*\*If you answer a call out of necessity, tell the caller with Hands-free that you will call him/her back, park your car to somewhere safe, and then dial.

■When in theaters, movie theaters, museums, and similar venues

If you use your FOMA phone where you are supposed to be quiet, you will disturb those around you.

#### Adjust the volume of your voice and ring tone according to where you are.

- If you use the FOMA phone in quiet places such as restaurants and hotel lobbies, keep the volume of your voice and other sounds down.
- ■Do not block thoroughfares when using the FOMA phone.

#### Respect the privacy.

Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

#### These functions help you keep your manners in public.

Handy functions are available such as for setting the response to incoming calls and setting the tones to silent.

- Public Mode (Drive Mode/Power Off) (Page 68 and page 69)
  The guidance that you are currently driving or in a place where you should refrain from using a mobile phone or the guidance that you are in a place where you should turn off the power is played back to the caller. Then the call is disconnected.
- Record Message function (Page 70)
   Callers can record a message when you cannot come to the phone.
- ●Vibrator (Page 96)

When the vibrator is set, it vibrates for incoming calls.

•Manner Mode/Super Silent/Original Manner (Page 98) In Manner Mode or Super Silent, the keypad sound, ring tone and other sounds from the FOMA phone are silenced.

In Original Manner, you can set whether or not to activate the Record Message function, and can change the settings for the vibrator and ring tone.

\*The shutter sound cannot be silenced.

Optional services are also available, such as Voice Mail Service (page 376) and Call Forwarding Service (page 380).

This manual was produced in such a way as to allow easy recycling. Please recycle this manual when it is no longer needed.

# General inquiries <DoCoMo Information Center>

Loss or theft of FOMA terminal or payment of cumulative cost overseas

<DoCoMo Information Center> (available 24 hours a day)

-800-0120-0151\*

\*See page 404 and page 405 for international call access codes for major countries (Table 1) and

(In English)

(toll free)

PHSs

000 0120-005-250

\* Can be called from mobile phones and

From a DoCoMo mobile phone

\* You are charged a call fee to Japan when calling from a landline phone, etc.

(to dial "+", press and hold the "0" key for at least one second).

international prefix numbers for the universal number (Table 2).

If you use P705iu/PROSOLID u. you should dial the number +81-3-5366-3114.

You might be charged a domestic call fee according to the call rate for the country you stay.

International call access code for

From a landline phone

<Universal number>

International prefix number for the

universal number (Table 2)

the country you stay (Table 1)

כ

(No prefix) **15**1

(toll free)

-81-3-5366-3114\* (toll free)

\* Can be called only from DoCoMo mobile phones and PHSs.

(In Japanese only)

(In Japanese only)
(No prefix) 113
(toll free)

phones and PHSs.

(In Japanese only)

(toll free)

\* Can be called from mobile phones and PHSs

· Please confirm the phone number before you dial.

\* Can be called only from DoCoMo mobile

 For further information, refer to the "Nationwide Service Station List" included with your FOMA terminal and other devices.

Repairs

#### Failures encounterd overseas

<Network Technical Operation Center> (available 24 hours a day)

From a DoCoMo mobile phone

International call access code for the country you stay (Table 1)

-81-3-6718-1414\* (toll free)

\* You are charged a call fee to Japan when calling from a landline phone, etc. \*If you use P705iu/PROSOLID u. you should dial the number +81-3-6718-1414

(to dial "+", press and hold the "0" key for at least one second).

From a landline phone

<Universal number>

International prefix number for the universal number (Table 2)

<sup>\*</sup>-800-5931-8600\*

\* You might be charged a domestic call fee according to the call rate for the country you stay.

\*\*See page 404 and page 405 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).

If you lose your FOMA phone or have it stolen, immediately take the steps necessary for suspending the use of the FOMA phone.

off the FOMA phone you purchased malfunctions, bring your FOMA phone to a repair counter specified by DoCoMo after you return to Japan.



Do not forget your cellular phone ... or your manners!

When using your portable phone in a public place, do not forget to show common courtesy and consideration for others around you.

Sales: NTT DoCoMo Group

NTT DoCoMo Hokkaido, Inc. NTT DoCoMo Tohoku, Inc. NTT DoCoMo, Inc. NTT DoCoMo Tohoku, Inc. NTT DoCoMo Hokuriku, Inc. NTT DoCoMo Kansai, Inc. NTT DoCoMo Chuqoku, Inc. NTT DoCoMo Shikoku, Inc. NTT DoCoMo Kyushu, Inc.

Manufacturer: Panasonic Mobile Communications Co., Ltd.



To prevent damage to the environment, bring used battery packs to an NTT DoCoMo service counter, an NTT DoCoMo agent or a recycle center.





January '08 (Ver.1.1) 3TR100013AAA F1207F0

# FOMA® P705iμ/PROSOLID μ

# Manual for PC connection setting

Data Communicatio	on Available from FOMA Phone	1
		1
Preparation Flow fo	or Data Transfer (OBEX™ Communication)	4
Preparation Flow fo	or Data Communication	4
For Using Windows		
Installing FOMA Co	ommunication Setup Files (Driver)	5
	oftware	8
Communication Set	etting by FOMA PC Setup Software	9
Installing FOMA PC	C Setup Software	9
	ation	11
Carrying Out Set Co	ommunication	16
Uninstalling FOMA	PC Setup Software	17
Communication Set	etup Optimization	18
Access Point Name	e (APN) Setting	19
Setting Dial-up Netv	work	20
Making Dial-up Con	nnection	28
Using FirstPass PC	C Software	29
<b>For Using Windows</b>	: Vista	
	ommunication Setup Files (Driver)	31
	oftware	33
	etting by FOMA PC Setup Software	33
	C Setup Software	34
	ation	35
	ommunication	40
	PC Setup Software	40
	e (APN) Setting	41
	work	42
	nnection	44
• •	C Software	46
•		70
Using AT Command		
		47
AT Command List		48

#### About Manual for PC connection setting

This manual explains the items required for making data communication using FOMA P705i  $\mu$ / PROSOLID  $\mu$  as well as how to install "FOMA communication setup files"/"FOMA PC setup software" on the CD-ROM.

Some procedures and displays may differ depending on your operating environment. Further, "PROSOLID  $\mu$ " may be displayed as "P705iCL".

# Data Communication Available from FOMA Phone

The data communication services you can use by connecting the FOMA phone to a personal computer are classified as follows: packet communication, 64K data communication, and data transfer (OBEX™
Communication).

The FOMA phone is equipped with the adapter function for packet communication.

- To perform the packet communication overseas, perform it via the IP connection. (You cannot perform the packet communication via the PPP connection.)
- 64K data communication is not available overseas.

#### Data Transfer (OBEX<sup>™</sup> Communication)

You can exchange data files such as images, music files, Phonebook entries and mail messages with another FOMA phone or a personal computer.





FOMA USB Cable with Charge Function 01 microSD memory card DoCoMo keitai datalink

#### Packet Communication

This service requires a communication fee according to the amount of data you sent and received. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps) It uses an access point which supports FOMA packet communication such as DoCoMo Internet access service "mopera U"/"mopera".

To use this service, connect the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option), and then carry out settings. The packet communication is suitable for using applications which require the high-speed communication.

To carry out the settings and connection, see page 4 and after.

- The packet communication is charged according to the amount of data you sent and received. Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files.
- The data is sent/received at the maximum speed of 384 kbps outside the FOMA High-speed Area.
- When you use the packet communication with "sigmarion III", "sigmarion II", or "musea" of DOCoMo's PDA, the data is sent/ received at the maximum speed of 384 kbps. High-speed communication for FOMA High-speed Area is not supported.

#### 64K Data Communication

synchronous 64K access point.

This service requires a communication fee according to the duration of connection. By connecting the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option), you can execute communication. To use this service, connect to an access point which supports FOMA 64K data communication such as DoCoMo Internet access service "mopera U"/"mopera", or an ISDN-

To carry out the settings and connection, see page 4 and after

 The 64K data communication is charged according to the duration of connection. Note that a communication fee becomes expensive if you use this service for a long time.

#### Information

- The FOMA phone does not support Remote Wakeup.
- The FOMA phone does not support the FAX communication.
- You can perform data communications by connecting the FOMA phone with DoCoMo's PDA "sigmarion II", "sigmarion III", or "musea". When you use "sigmarion II" or "musea", the update is required. For details such as how to update them, refer to the DoCoMo web page.

#### **Before Using**

#### Charge of Internet service provider

To use the Internet, you need to pay the charge for the Internet service provider you use. Besides the FOMA service fee, you need to directly pay this charge to the Internet service provider. For details on the charge, contact the Internet service provider you use.

You can use the DoCoMo Internet access service, "mopera U"/"mopera". To use "mopera U", subscription (charged) is required. To use "mopera", subscription and monthly charge are not required. However, the maximum communication speed of sending/receiving data is limited to 384 kbps.

# Setting access point (Internet service provider, etc.)

The access points for the packet communication and 64K data communication differ. To use the packet communication, connect to an access point which supports packet communication. To use the 64K data communication, connect to an access point which supports FOMA 64K data communication or ISDN-synchronous 64K.

You cannot connect to the DoPa access point.

# About user authentication for accessing network

User authentication (ID and password) may be required at connection to some access points. In this case, enter your ID and password on the communication software (dial-up network). ID and password are specified by the Internet service provider or network administrator of the access point. For details, contact the provider or network administrator.

# About access authentication for using browser

If you need FirstPass (user certificate), install the FirstPass PC software from the provided CD-ROM and make the setting.

For details, see "FirstPassManual" (PDF format) in the "FirstPassPCSoft" folder of the CD-ROM.

# Conditions of packet communication and 64K data communication

To carry out the communication using the FOMA phone in Japan, the following conditions are required:

- The personal computer to be used can use the FOMA USB Cable with Charge Function 01 (option).
- The PDA to be used should support FOMA packet communication and 64K data communication.
- · Within the FOMA service area
- For packet communication, the access point should support packet communication of the FOMA.
- For 64K data communication, the access point should support the FOMA 64K data communication or ISDNsynchronous 64K.

Even when these conditions are satisfied, if the base station is congested or the radio wave conditions are bad, you may not carry out the communication.

#### About Operating Environment

For the data communication, the following operating environment is required for your personal computer:

Item	Description
PC main unit	PC/AT compatible model
	When using the FOMA USB Cable with Charge Function
	01 (option): USB port (Universal Serial Bus Specification Rev1.1 compliant)
	Display resolution 800 x 600 dots, high color 16 bits or more recommended.
OS	Windows 2000, Windows XP, Windows Vista
	(Japanese version in each)
Memory	Windows 2000: 64 Mbytes or more
requirements	Windows XP: 128 Mbytes or more
	Windows Vista: 512 Mbytes or more
	(Japanese version in each)
Hard disk	Unused memory space of 5 Mbytes or more
space size	

- The operation on the upgraded OS is not guaranteed.
- The memory requirements and hard disk space size may vary depending on the system environment.
- The recommended environment that the Menu operates is Microsoft<sup>®</sup> Internet Explorer 6.0 or later. When the Menu does not appear after you set the CD-ROM, operate as follows:
- <For Windows XP or Windows 2000>

Refer to the CD-ROM from "マイコンピュータ (My computer)", then double-click "index.html".

<For Windows Vista>

Refer to the CD-ROM from "コンピュータ (Computer)", then double-click "index.html".

For Windows Vista, the recommended environment is Microsoft<sup>®</sup> Internet Explorer 7.0 or later.

When you set the CD-ROM on your personal computer, an alert message might appear on the display as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your comp

Click "はい (YES)".

\*\*The example message below is for when you use Windows XP. The message might differ depending on the environment of the computer you use.



#### **Necessary Devices**

The following hardware and software are required besides the FOMA phone and personal computer:

- · FOMA USB Cable with Charge Function 01 (option) or FOMA USB Cable (option)
- · Provided "FOMA P705i μ/PROSOLID μ CD-ROM"

#### Information

- Use a dedicated FOMA USB Cable with Charge Function 01 or FOMA USB Cable. The USB cable for personal computers cannot be used because the shape of the connector differs.
- In this manual, operations are described for the case of using FOMA USB Cable with Charge Function 01.
- . If you use a USB hub, the devices may not work correctly.

#### **Connect FOMA phone to Other Devices**

The following two ways are available for connecting the FOMA phone to another device:

## Use FOMA USB Cable with Charge Function 01

Connect the FOMA phone to a personal computer provided with the USB port using the FOMA USB Cable with Charge Function 01 (option). (See page 4) This way of connection applies to all types of communications such as packet communication, 64K data communication, and data transfer.

- Set "USB mode setting" to "Communication mode" for data communication.
- Operate "(www) ➤ Settings ➤ Other settings ➤ USB mode setting ➤ Communication mode".
- You need to install the FOMA communication setup files (driver) before use.

#### Use Infrared Data Exchange

By using infrared rays, you can send/receive data between your FOMA phone and another FOMA phone, mobile phone, or personal computer provided with the infrared data exchange function.

This applies to data transfer only.

#### ■Glossary of Terms

#### APN

The abbreviation of Access Point Name, which is used to identify an Internet service provider or Intranet LAN system you access for packet communication. For example, "mopera U" is expressed with character string "mopera.net".

#### • cid

The abbreviation of Context Identifier, which is a registration number of the APN that is registered in the FOMA phone in advance for packet communication. In the FOMA phone, you can register up to 10 cid numbers (1 to 10).

#### Administrator right

Means the right with which the user can access all functions of Windows XP, Windows 2000, or Windows Vista system, in this manual. Generally, the user in the administrators group has this right. Users without the administrator right can use only specific functions of the system; therefore, the operation such as installing the FOMA communication setup files (driver) results in an error. For the setting of the PC administrator right, contact the maker of your personal computer, or Microsoft Corporation.

#### DNS

The abbreviation of Domain Name System, which converts an easy-to-understand name for people, for example, "nttdocomo.co.jp", into an address indicated by an easy-to-manage number for computers.

#### • HSDPA

The abbreviation of High Speed of Downlink Packet Access, which is a standard that increased the speed of data communication of the third generation (3G) mobile telecommunication systems "W-CDMA".

#### QoS

The abbreviation of Quality of Service, which indicates the quality of network services. For the QoS setting of the FOMA phone, you can specify a connection either at a free baud rate or only at the maximum baud rate (upload: 384 kbps, download: 3.6 Mbps). (After connection, the baud rate is variable.) For details, see page 55.

#### Communication setup optimization

A TCP parameter used to maximize the TCP/IP transmission capability when carrying out the packet communication in the FOMA network. To maximize the communication performance of the FOMA phone under the "Wireless", "W-CDMA", or "Windows" environment, you need to optimize the TCP parameter.

#### • W-CDMA

One of the third-generation mobile phone communication systems (IMT-2000) authorized as the global standards.

The FOMA phone conforms to the W-CDMA standard.

# Preparation Flow for Data Transfer (OBEX<sup>™</sup> Communication)

The following outline shows a preparation flow to use the DoCoMo keitai datalink by connecting the FOMA phone to a personal computer.

Download or install the FOMA communication setup files. (See page 5 and page 31)

- Install the FOMA communication setup files from the provided CD-ROM.
  - or
- Download the FOMA communication setup files from the DoCoMo web page and install.



Data transfer

#### **Preparation Flow for Data Communication**

The following outline shows a preparation flow to use the packet communication by connecting the FOMA phone to a personal computer.

Connect a personal computer to the FOMA phone using the FOMA USB Cable with Charge Function 01 (option).



#### Download or install the FOMA communication setup files. (%1)

- Install the FOMA communication setup files from the provided CD-ROM.
  - or
- Download the FOMA communication setup files from the DoCoMo web page and install.



Check the setting after installation. (%2)



Set the access point by using the FOMA PC setup software. (\*3)

Set the access point and dial-up network without using the FOMA PC setup software. (※4)



Connect. (%5)

\*1-5: Depending on the OS of the personal computer, the reference page for the preparation differs.

OS of the personal	Reference				
computer	<b>%</b> 1	<b>%</b> 2	<b>%</b> 3	<b>※</b> 4	<b>※</b> 5
Windows XP/	P.5	P.7	P.8	P.20	P.16
Windows 2000				P.29	P.28
Windows Vista	P.31	P.32	P.33	P.42	P.40
Williaows Vista				P.45	P.44


#### ■Provided "FOMA P705i µ/PROSOLID µ CD-ROM"

When connecting the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 for packet communication, install the "FOMA communication setup files" (driver) from the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" onto the personal computer. You are advised to install "FOMA PC setup software" for establishing the APN or dial-up setting easily when you communicate.

#### Connect the FOMA Phone to a PC

The following steps explain how to connect the FOMA USB Cable with Charge Function 01 (option).

- Check the direction of the connector terminal of the FOMA phone, then straight insert the external connector of the FOMA USB Cable with Charge Function 01 until it clicks.
- Connect the USB connector of the FOMA USB Cable with Charge Function 01 to the USB terminal of the personal computer.

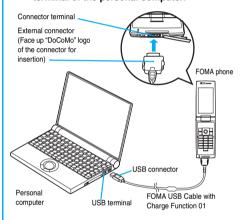


#### Information

- Do not forcibly insert the FOMA USB Cable with Charge Function 01. Malfunction may result. Insert each connector in the correct direction at the correct angle; otherwise, you will fail connection. When the direction and angle are correct, you can insert a connector smoothly without the strong force. If you fail to insert a connector, check its shape and direction once more without inserting a connector forcibly.
- Use a dedicated FOMA USB Cable with Charge Function 01. (The USB cable for personal computers cannot be used because the shape of the connector differs.)



#### Removing

- While holding down the release buttons of the external connector of the FOMA USB Cable with Charge Function 01, straight pull out the connector.
- 2. Pull out the FOMA USB Cable with Charge Function 01 from the USB terminal of the personal computer.

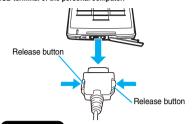

#### Information

- Do not disconnect the FOMA USB Cable with Charge Function 01 forcibly. Malfunction may result.
- Do not disconnect the FOMA USB Cable with Charge Function 01 during data communication. Erroneous operation or malfunction of the personal computer or FOMA phone, or loss of data could result.
- Do not connect/disconnect the FOMA USB Cable with Charge Function 01 in succession. Once you connect the cable, wait for a while, then disconnect it and vice versa.

# For Using Windows XP/ Windows 2000

# Installing FOMA Communication Setup Files (Driver)

Installing the FOMA communication setup files (driver) is required when you connect the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 (option) for the first time.

• Operate as the user who has the PC administrator right.

#### For Windows XP

- Connect the FOMA phone and the FOMA USB Cable with Charge Function 01. (See page 4)
- 2 Start Windows, then set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into the personal computer.


- Click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".
  - If this display appears during installation of the "FOMA communication setup files" (driver), close the display.



4 Click "インストール (Install)" under "FOMA通信設定ファイル (USBドライバ) [FOMA communication setup files (USB driver)]".



- Double click "FOMAinst.exe" in opened folder.
- 6 Read "ソフトウェア使用許諾契約書 (Software licensing contract)", and click "同意する (Agree)".

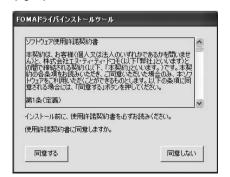

Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

Installation starts

Pop-up message "新しいハードウェアが見つかりました (New hardware was found)" appears for a few seconds from the indicator of the task bar.

After you complete the installation, pop-up message "新しいハードウェアがインストールされ、使用準備ができました。(New hardware is installed, and the system is ready.)" appears for a few seconds from the indicator of the task bar.

- ■When the installation does not start automatically, and the pop-up message "新しい\―トウェアの検索ウィザードの開始 (The wizard for finding new hardware starts)" appears Install by following steps.
- Select "いいえ、今回は接続しません (No, do not connect now)" and click "次へ (Next)". (The display may not appear depending on the personal computer you use.)
- Select "一覧または特定の場所からインストールする(詳細) [Install from the list or a specific place (details)]", then click "次へ(Next)".
- 3. Select "次の場所で最適のドライバを検索する (Search the place below for the appropriate driver)", and uncheck "リムーバブルメディア(フロッピー、CD-ROMなど)を検案 [Search the removable media (floppy disk, CD-ROM, etc.)]". Then check "次の場所を含める (Include the place below)".
- 4. Click "参照 (Browse)", specify "<CD-ROM drive name>¥ USB\_Driver¥P705i \(\mu\) Drivers¥Win2k\_XP" or "<CD-ROM drive name>¥USB\_Driver¥PROSOLID \(\mu\) Drivers¥Win2k\_XP", then click "次へ (Next)".

(The CD-ROM drive name varies depending on the personal computer you use.)

5. Click "完了 (Complete)".

Click "インストールする(推奨)[Installing (recommended)]".

Then install the FOMA byte counter.
Install by following the onscreen instructions.

 $\bullet$  When you do not install the FOMA byte counter, go to step 9.



Q Click "完了 (Complete)".

Next, confirm that the "FOMA communication setup files" (driver) are installed correctly. (See page 7)

#### For Windows 2000

- Connect the FOMA phone and the FOMA USB Cable with Charge Function 01. (See page 4)
- 2 Start Windows, then set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into the personal computer.

- Click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".
  - If this display appears during installation of the "FOMA communication setup files" (driver), close the display.



4 Click "インストール (Install)" under "FOMA通信設定ファイル(USBドライバ)[FOMA communication setup files (USB driver)]".



- Double click "FOMAinst.exe" in opened folder
- Read "ソフトウェア使用許諾契約書 (Software licensing contract)", and click "同意する (Agree)".



Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

Installation starts

Pop-up message "新しいハードウェアが見つかりました (New hardware was found)" appears for a few seconds from the indicator of the task bar.

After you complete the installation, pop-up message "新しいハードウェアがインストールされ、使用準備ができました。(New hardware is installed, and the system is ready.)" appears for a few seconds from the indicator of the task bar.

# Click "インストールする(推奨)[Installing (recommended)]".

Then install the FOMA byte counter.

Install by following the onscreen instructions.

• When you do not install the FOMA byte counter, go to step 9.



🚺 Click "完了 (Complete)".

Next, confirm that the "FOMA communication setup files" (driver) are installed correctly. (See page 7)

#### Confirm Installed Driver

Confirm that the "FOMA communication setup files" (driver) are installed correctly.


- <For Windows XP>
  - "スタート (Start)" ▶ Open "コントロールパネル (Control panel)" ▶ "パフォーマンスとメンテナンス (Performance and maintenance)"
  - ▶Open "システム (System)".

<For Windows 2000>

- "スタート (Start)"▶"設定 (Setting)"
- ▶ Open "コントロールパネル (Control panel)"
- ▶ Open "システム (System)".
- Click the "ハードウェア (Hardware)" tab
  - ▶ Click "デバイスマネージャ (Device manager)".

# Click each device, then confirm the installed driver names.

Confirm that all driver names are displayed under "ポート (COMとLPT) [Port (COM/LPT)]", "モデム (Modem)", and "USB (Universal Serial Bus) コントローラ [USB (Universal Serial Bus) controller!".

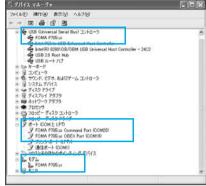

For Windows XP



For Windows 2000

\*\*The COM port number varies depending on the personal computer you

The following drivers are installed by installation of the "FOMA communication setup files" (driver):

Device name	FOMA communication setup file (driver) name		
ポート (COMとLPT) [Port (COM/ LPT)]	- FOMA P705i   Command Port or FOMA P705iCL Command Port  FOMA P705i   OBEX Port or FOMA P705iCL OBEX Port		
モデム (Modem)	· FOMA P705i $\mu$ or FOMA P705iCL		
USB (Universal Serial Bus) コントローラ [USB (Universal Serial Bus) controller]	· FOMA P705i $\mu$ or FOMA P705iCL		

To set an access point with the "FOMA PC setup software", see page 9. To set an access point without the "FOMA PC setup software", see page 20 or page 29.

# Uninstall FOMA Communication Setup Files (Driver)

When uninstalling the "FOMA communication setup files" (driver) is necessary (such as when upgrading the version), perform the operation below. The operation here explains how to uninstall the FOMA communication setup files using Windows XP as an example.

- Operate as the user who has the PC administrator right.
- If the FOMA phone is connected to a personal computer via the FOMA USB Cable with Charge Function 01 (option), disconnect the FOMA USB Cable with Charge Function 01.
- 2 "スタート (Start)"▶"コントロールパネル (Control panel)"▶Open "プログラムの追加と 削除 (Add and delete programs)".
- 3 Select "FOMA P705i  $\mu$  USB" or "FOMA P705iCL USB" and click "変更と削除 (Change and delete)".
- Click "OK".
- 「Click "はい (Yes)" to restart Windows.

The uninstallation is then completed.

• If you click "いいえ (No)", restart Windows manually.

#### Information

• If you remove the FOMA USB Cable with Charge Function 01 from the personal computer while installing the "FOMA communication setup files" (driver) or click the "キャンセル (Cancel)" button to stop installation, the "FOMA communication setup files" (driver) may not be installed correctly. In this case, open "USB\_Driver" → "P705i µDrivers" or "PROSOLID µDrivers" → "Win2k\_XP" inside "FOMA P705i µDrivers" or "P705cUID. # CD-ROM", and execute "p705iuun.exe" or "p705cUn.exe" to delete the "FOMA communication setup files" (driver), and then install the files again.

#### **FOMA PC Setup Software**

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication. Using the "FOMA PC setup software", you can easily carry out the settings below. If required, you can set the packet communication and 64K data communication without using the "FOMA PC setup software". (See page 20 and page 29)

#### ■Easy setting

You can easily carry out "dial-up creation for FOMA data communication" and "Communication setup optimization" by following the guidance.

#### ■Communication setup optimization

Before using "FOMA packet communication", optimize communication settings in your personal computer.

To maximize the communication performance, communication setup optimization is needed.

#### ■Access point name (APN) setting

You can set an access point name (APN) required for packet

The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication.

You need to register an access point name (APN) in the FOMA phone in advance, and specify the registration number (cid) in the access point number field for connection.

By the default, "mopera.ne.jp", the access point name (APN) of "mopera", is registered in cid\*1, and "mopera.net", that of "mopera U", is registered in cid\*3. To connect to another service provider or Intranet LAN, however, you need to set the access point name (APN).

\*\*"cid" is the abbreviation of "Context Identifier", the number for storing the packet communication access point name (APN) to the FOMA phone

#### Information

● If the old-version "W-TCP設定ソフト (W-TCP setup software)", the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)" or the older version than this "FOMA PC設定ソフト (FOMA PC setup software)" (older than version 4.0.0) is installed, uninstall it in advance.

# Communication Setting by FOMA PC Setup Software



#### STEP1 Install Software

#### Install the "FOMA PC setup software".

See page 9 for installation.

If the older version than this "FOMA PC setup software" (version 4.0.0) is already installed, you cannot install this "FOMA PC setup software", so uninstall it in advance. See page 11 if the display appears to indicate that the old-version "W-TCP設定ソフト (W-TCP setup software)", or the old-version "FOMA"一夕通信設定ソフト (FOMA data communication setup software)" is installed.



## STEP2 Prepare for Setup

#### Prepare for setup.

Before setup, confirm that the FOMA phone is connected to your personal computer and correctly recognized by the personal computer. See page 4 for how to connect the FOMA USB Cable with Charge Function 01 (option).

If the FOMA phone is not correctly recognized by the personal computer, you cannot carry out settings and communication. See page 7 for confirming whether the FOMA phone is correctly recognized by the personal computer.

See page 5 through page 8 for how to install the "FOMA communication setup files" (driver).



## STEP3 Setting Operation

# Carry out the appropriate setting for the communication you use.

Setting the packet communication from "Easy Setting"
When using "mopera U" or "mopera" as an access point

page 12 When using a provider other than "mopera U" or "mopera"

Setting the 64K data communication from "Easy Setting"

When using "mopera U" or "mopera" as an access point

When using a provider other than "mopera U" or "mopera"

See page 18 for optimizing the packet communication performance. See page 19 for setting an access point name (APN).



Connect to the Internet.

#### Installing FOMA PC Setup Software

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication.

Using the "FOMA PC setup software", you can easily set up dial-up, communication setup optimization, and access point name (APN).

Operate as the user who has the PC administrator right.

# Notes for Installing FOMA PC Setup Software

# Confirm that the FOMA phone is correctly recognized by your personal computer

Before installing the "FOMA PC setup software", you need to register the "FOMA communication setup files" (driver) correctly on the device of the personal computer. (See page 7)

# ■When you connect the FOMA phone to your personal computer for the first time

The wizard shown below starts.

To use the FOMA data communication, you need to register the FOMA phone in your personal computer as a communication device.

See page 5 through page 8 for installation of the "FOMA communication setup files" (driver).



#### Install FOMA PC Setup Software

The explanation here uses the displays for when installing the FOMA PC setup software on Windows XP. The displays are slightly different depending on the personal computer you use.

Set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into your personal computer.

## To install the "FOMA PC setup software", click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".

 If this display appears during installation of the "FOMA PC setup software". close the display.



Click "インストール (Install)" under "FOMA PC 設定ソフト (FOMA PC setup software)".



When you click "インストール (Install)", an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

● When the "ファイルのダウンロード ー セキュリティの警告 (File download - Security alert)" window appears: Click "実行 (Execute)".



インターネットのファイルは内に立ちますが、このファイルの種類はエンピュータに問題を起こす可能 性があります。信頼する発行元のソフトウェアのみ、実行してくどだい。他独性の説明

東行する(P) 東行しない(D)

見行元 Macrovision Corporation

◎ 退加オプシェンの表示(0)

// Click "次へ (Next)".

Before starting setup, check that no other programs are currently running. If any program is running, click " $\pm v 2 U U$  (Cancel)" to save and exit the program, then restart installation.

- See page 11 if the display appears to indicate that the old-version "W-TCP設定ソフト (W-TCP setup software)", old-version "FOMA アータ通信設定ソフト (FOMA data communication setup software)" or old-version "FOMA PC設定ソフト (FOMA PC setup software)" is installed.
- 5 Confirm the displayed contract contents.
  If you agree with the contents, click "はい (Yes)".
- Select a setup type.

After setup, you can select whether "Communication setup optimization" resides on the task tray. To make it reside, check "タスクトレイに常駐する (Reside on the task tray)" and click "次へ (Next)", then continue installation.

 Even if you do not check "タスクトレイに常駐する (Reside on the task tray)", you can select "メニュー (Menu)" ー 通信設定最適化を タスクトレイに常駐させる (Make the communication setup optimization reside on the task tray)" on the "FOMA PC setup software" to modify settings.



The "W-TCP" icon appears on the task tray at the bottom right (ordinarily) of the desk top.



# 7 Confirm the installation destination, then click "次へ (Next)".

To change the installation destination, click "参照 (Browse)"; specify any installation destination; then click "次へ (Next)". (You can install the FOMA PC setup software in a different drive, however, proceed without changing unless you have a problem on



# 8 Confirm the program folder name, then click "次へ (Next)".

To change the program folder name, enter a new one, then click "次 ^ (Next)".



## 🚺 Click "完了 (Complete)".

After setup is completed, the "FOMA PC setup software" operation display appears.

#### ■Displays at installation of the "FOMA PC setup software"

When the old-version "W-TCP設定ソフト (W-TCP setup software)" is installed

A warning display appears.

From "アプリケーションの追加と削除 (Add and delete application)", uninstall the old-version "W-TCP設定ソフト (W-TCP setup software)".

When the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)" is installed

A warning display appears.

From "アプリケーションの追加と削除 (Add and delete application)", uninstall the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)".

When the older version than this "FOMA PC設定ソフト (FOMA PC setup software)" (version 4.0.0) is installed

A warning display appears.

From "アプリケーションの追加と削除 (Add and delete application)", uninstall the old-version "FOMA PC設定ソフト (FOMA PC setup software)".

When you click "キャンセル (Cancel)" during the installation A confirmation display appears when you click "キャンセル (Cancel)" or "しいえ (No)" utring the setup operation. To continue the installation, click "いいえ (No)". To intentionally cancel, click "はい (Yes)" and "完了 (Complete)".

#### ■Checking the version information about "FOMA PC setup software"



Select "メニュー (Menu)"  $\rightarrow$  " バージョン情報 (Version information)" from the menu of the "FOMA PC setup software".

The version information about the "FOMA PC setup software" is displayed.

#### **Setting Communication**

The operation below explains how to carry out various settings related to the packet communication and 64K data communication.

There are "auto setting" for easy operation and "manual setting" for the user familiar with personal computers. Before setting, confirm that the FOMA phone is connected to your personal computer.


"スタート (Start)"▶"すべてのプログラム (All programs)"▶"FOMA PC設定ソフト (FOMA PC setup software)"▶ Open "FOMA PC設定ソフト (FOMA PC setup software)".

<For Windows 2000>

Select "スタート (Start)"→"プログラム (Programs)"→"FOMA PC設定ソフト (FOMA PC setup software)"→Open "FOMA PC設定ソフト (FOMA PC setup software)"

Using this PC setup software, you can easily create FOMA dial-up setting by answering (selecting and entering) the displayed questions according to "the information of connected provider" and "connection method" you selected.

- ・ See page 12 for setting the packet communication from "かんたん 設定 (Easy Setting)".
- ・See page 14 for setting the 64K data communication from "かんたん設定 (Easy Setting)".
- See page 18 for executing "通信設定最適化 (communication setup optimization)".
- · See page 19 for setting "接続先 (APN) 設定 [access point name (APN) setting]".

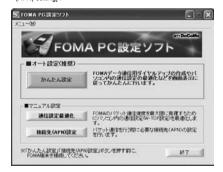

## **Specify Communication Port**

- 1 "メニュー (Menu)" of "FOMA PC setup software" ➤ Select "通信設定 (Communication setup)".
  - · 自動設定(推奨)[Auto-setup (recommended)]
    The connected FOMA phone is automatically specified. Usually, select "Auto-setup".
  - ・COMポート指定 (Specifying COM port)
    When specifying a COM port number, specify the COM port number (COM1 through 99) the FOMA phone is connected to.
  - See page 20 for how to check the COM port number.



Click "OK".

The settings are applied.

## Select Packet Communication from "かんたん設定 (Easy Setting)"

### Using "mopera U" or "mopera" as an access point

This section explains how to make settings for a high-speed packet communication of 3.6 Mbps maximum. This setting is for when you use DoCoMo Internet connection service "mopera U" or "mopera" as a provider.

 
High-speed packet communication:

You are charged according to the amount of data sent/ received. You can execute data communication without worrying about time.

High-speed packet communication of up to 3.6 Mbps for receiving and up to 384 kbps for sending is available.

Note that a communication fee becomes expensive if you send/receive a large amount of data such as by browsing web pages having many images, or by downloading the data.

- The communication speed for both sending and receiving is up to 384 kbps for "mopera" connection.
- <mark>↑</mark> Click "かんたん設定 (Easy Setting)".



Select "パケット通信(HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminal))", then click "次へ (Next)".

Confirm that "パケット通信(HIGH-SPEED対応端末)(Packet communication (HIGH-SPEED compatible terminal))" is checked, then click "次へ (Next)".

## Select "『mopera U』への接続 (Connect to mopera U)" or "『mopera』への接続 (Connect to mopera)", then click "次へ (Next)".

To use "mopera U", select " [mopera U] への接続 (Connect to mopera U)". To use "mopera", select " [mopera] への接続 (Connect to mopera)".

When "「mopera U」への接続 (Connect to mopera U)" is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click "はい (YES)".

 See page 13 for using a provider other than "mopera U" or "mopera".

### Click "OK".

 The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

## 5 Enter an access point name, then click "次へ (Next)".

You can specify any name for the currently created connection. Enter a plain name in the "接続名 (Connection name)" field.

- You cannot enter the following half-pitch characters:
   ¥, /, :, \*, ?, !, <, >, !, and ".
- For the setting of "発信者番号通知 (caller ID notification)", select "設定しない(推奨)[Not set (recommended)]" for overseas use.
- "mopera U" supports connection types of both "PPP接続 (PPP connection)" and "IP接続 (IP connection)". For overseas use, select "IP接続 (IP connection)".



ら Click "次へ (Next)".

If the access point is "mopera U" or "mopera", you can connect even if the "ユーザ名 (user name)" and "パスワード (password)" fields are blank.

- · Select a user optionally.
- 7 Put a check mark for "最適化を行う (Optimize)", then click "次へ (Next)".
  - If optimized already, the confirmation display to optimize does not appear.
- Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.

### Click "OK".

The setting is completed.



 To make the optimization valid, you need to restart the personal computer.

## Using a provider other than "mopera U" or "mopera" as an access point

The packet communication is a communication system you are charged according to the amount of data you sent and received, regardless of the communication time and distance. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps)
To use a provider other than "mopera", you may need to separately apply for the service and sign a contract with the provider.

**1** Click "かんたん設定 (Easy Setting)".



- 2 Select "パケット通信(HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminall))", then click "次へ (Next)". Confirm that "パケット通信 (HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminall)" is checked, then click "次へ (Next)".
- 3 Select "その他 (Others)", then click "次へ (Next)".

Confirm that "その他 (Others)" is checked, then click "次へ (Next)".

- Click "OK".
  - The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

### Enter an access point name.

You can specify any name for the currently created connection. Enter a plain name in the "接続名 (Access point name)" field.

- You cannot enter the following half-pitch characters:
   ¥, /, ∴, \*, ?, !, <, >, I, and ".
- In the "接続先 (APN) の選択 [Select an access point name (APN)]" field, "mopera.ne.jp (PPP接続) [mopera.ne.jp (PPP connection)]" is displayed as the default. Go to the "接続先 (APN) 設定 [Set an access point name (APN)]" display.
- For the setting of "発信者番号通知 (caller ID notification)", follow the information from the provider and others. For overseas use, select "設定しない (Not set)"



## Click "接続先 (APN) 設定 [Set an access point name (APN)]".

"mopera.ne.jp" is registered in "cid1" and "mopera.net" is registered in "cid3" by default. Click "追加 (Add)", then enter the correct access point name (APN) for FOMA packet communication on the "接続先 (APN) の追加 [Add an access point name (APN)]" display. Click "OK". The "パケット通信設定" (Packet communication setting)" display returns. Select the access point name (APN) you specified newly. If it is ok, click "OK".

 For a provider access point name (APN) or supported connection types, contact your provider.



## 7 Click "詳細情報の設定 (Set detailed information)".

The display for specifying "IP $\mathcal{P}$ " FV $\mathcal{L}$  (IP address)" and " $\mathcal{L}$ — $\mathcal{L}$  (IP. address)" and " $\mathcal{L}$ — $\mathcal{L}$  (IP. address)" appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click "OK".

Click "次へ (Next)".

# Specify "ユーザー名 (User name)" and "パスワード (Password)", then click "次へ (Next)".

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.

· Select a user optionally.



## 1 Put a check mark for "最適化を行う (Optimize)", then click "次へ (Next)".

 If optimized already, the confirmation display to optimize does not appear.

## 11 Confirm the set information, then click "完了 (Complete)".

 
The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.

## 19 Click "OK".

The setting is completed.

for communication. (See page 16)




 To make the optimization valid, you need to restart the personal computer.

## Select 64K Data Communication from "かんたん設定 (Easy Setting)"
 
#### Using "mopera U" or "mopera" as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) You can use the DoCoMo Internet access service, "mopera U"/"mopera".

**1** Click "かんたん設定 (Easy Setting)".



2 Select "64Kデータ通信 (64K data communication)", then click "次へ (Next)".

Confirm that "64Kデータ通信 (64K data communication)" is checked, then click "次へ (Next)".

3 Select "『mopera U』への接続 (Connect to mopera U)" or "『mopera』への接続 (Connect to mopera)", then click "次へ (Next)".

To use "mopera U", select " [mopera U] への接続 (Connect to mopera U)". To use "mopera", select " [mopera] への接続 (Connect to mopera)".

When "[mopera U] への接続 (Connect to mopera U)" is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click "はい (YES)".

- See page 15 for using a provider other than "mopera U" or "mopera".
- Enter an access point name, then click "次へ (Next)"

You can specify any name for the currently created connection. Enter a plain name in the "接続名 (Access point name)" field. Confirm that "FOMA P705i $\mu$ " or "PROSOLID  $\mu$ " is displayed in the "干了 $\omega$ D $\widetilde{x}$ RY (Select a modem)" field.

- You cannot enter the following half-pitch characters:  $\pm$ , /, :,  $\pm$ , ?, !, <, >, I, and ".
- Set whether to notify your caller ID for dial-up connection. You need to notify your caller ID for connecting to "mopera U" or "mopera".



Click "次へ (Next)".

If the access point is "mopera U" or "mopera", you can connect even if the "ユーザ名 (user name)" and "パスワード (password)" fields are blank.

Select a user optionally.

## Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.

#### Click "OK"

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 16)

## Using a provider other than "mopera U" or "mopera" as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) To use a provider other than "mopera", you may need to separately apply for the service and sign a contract with the provider.

Click "かんたん設定 (Easy Setting)".



Select "64Kデータ通信 (64K data communication)", then click "次へ (Next)".

Confirm that "64Kデータ通信 (64K data communication)" is checked, then click "次へ (Next)".

Select "その他 (Others)", then click "次へ (Next)".

Confirm that "その他 (Others)" is checked, then click "次へ (Next)".

## Enter dial-up information.

When connecting to a provider supporting ISDN-synchronous 64K other than "mopera U" or "mopera", register the following items when creating the dial-up.

- ①"接続名 (Access point name)" (arbitrary)
- ②"モデムの選択 (Select a modem)" (FOMA P705i μ or PROSOLID μ) ③"電話番号 (Phone number of provider access)"
- 4 Set whether to notify your caller ID for dial-up connection.
- Correctly enter these items according to the provider information.
- For the setting of the caller ID notification, follow the instructions from the provider you use.
- You cannot enter the following half-pitch characters in the "接続名 (Access point name)" field: ¥, /, :, \*, ?, !, <, >, I, and ".



#### Click "詳細情報の設定 (Set detailed 5 information)".

The display for specifying "IPアドレス (IP address)" and "ネームサー バー (name server)" appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click "OK".

- Click "次へ (Next)". ĥ
- Specify "ユーザー名 (User name)" and "パス ワード (Password)", then click "次へ (Next)".

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.

· Select a user optionally.



## Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "常了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.

### Click "OK".

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 16)

### **Carrying Out Set Communication**

The operation below explains how to make a dial-up connection using Windows XP as an example. Perform the operation on page 4 to connect the FOMA phone to your personal computer.

## Double-click the dial-up shortcut icon on the desktop.



Open the FOMA connection shortcut icon created at communication setting; the connection display for starting communication appears.

- Bring up the icon by the following operations if it is not displayed:
   For Windows XP>
  - "スタート (Start)"→"すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communications)"→"ネットワーク接続 (Network connection)"
  - <For Windows 2000>
  - "スタート (Start)"→"プログラム (Program)"→"アクセサリ (Accessories)"→"通信 (Communications)"→"ネットワークとダイヤルアップ接続 (Network and dial-up connections)"

## 2 Enter "ユーザー名 (User name)" and "パスワード (Password)", then click "ダイヤル (Dial)".

- For "mopera U" or "mopera", you can connect even if the "ユーザー名 (User name)" and "パスワード (Password)" fields are blank.
- When you put a check mark for "次のユーザーが接続するとき使用するために、 このユーザー名とバスワードを保存する (Save this user name and the password for the next user to use for connecting)", this user or all users do not need to enter them from the next time.



# Click the dial-up icon on the task tray to check for the connection.



 You can start the browser software to browse web pages, use e-mail. and so on.



### Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.

- " " (Communicating, data sending)
- " 4" (Communicating, data receiving)
- " (Communicating, no data sending/receiving)
- " " (Outgoing or being disconnected)
- " " (Incoming or being disconnected)
- During 64K data communication, "F" appears on the FOMA phone.



## Disconnecting

Click the dial-up icon on the task tray.



🤈 Click "切断 (Disconnect)".

#### Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

## Uninstalling FOMA PC Setup Software

### Before Uninstalling

Before uninstalling the "FOMA PC setup software", reset the contents modified for the FOMA phone to the default.

## Exit the currently running programs.

● Exit the "通信設定最適化ソフト (Communication setup optimization software)". Right click "通信設定最適化ソフト (Communication setup optimization



software)" on the task tray at the bottom right of the display, and select "終了 (Exit)".



- Exit the "FOMA PC setup software".
   Click "終了 (Exit)" at the bottom right of the FOMA PC setup software.
- If you try to uninstall during running of the "FOMA PC setup software" or "Communication setup optimization software", the display below appears. Stop the uninstallation processing, and exit those programs.





#### Uninstall

The explanation here uses the displays for when you uninstall the software on Windows XP. The displays differ depending on the personal computer you use.

- Operate as the user who has the PC administrator right.
- 1 "スタート (Start)"▶"コントロールパネル (Control panel)"▶Open "プログラムの追加と 削除 (Add and delete programs)".

<For Windows 2000>

"スタート (Start)"▶"設定 (Setting)"▶"コントロールパネル (Control panel)"▶"アプリケーションの追加と削除 (Add and delete applications)"

2 Select "NTT DoCoMo FOMA PC設定ソフト (NTT DoCoMo FOMA PC setup software)", then click "削除 (Delete)".




3 Confirm the name of the program you want to delete, then click "はい (Yes)".

The uninstallation starts, and applications (programs) are deleted.

✓ Click "完了 (Finish)".

Uninstalling the "FOMA PC setup software" is completed.

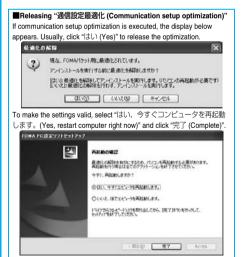

## **Communication Setup Optimization**

## Role of Communication Setup Optimization

The "通信設定最適化 (Communication setup optimization)" is a "TCP parameter setup" tool used to optimize the TCP/IP transmission capability at packet communication via the FOMA network. To maximize the communication performance of the FOMA phone, you need to optimize the communication setting by this software. If you put a check mark for "最適化を行う (Optimize)" in "かんたん設定 (Easy Setting)" to create dial-up information, you do not need to carry out the optimization here.

 When you perform PC connection overseas, release the communication setup optimization before the connection.

## **Optimization Setting and Its Deletion**

#### For Windows XP

For Windows XP, you can set optimization for each dial-up information. For HIGH-SPEED communication, however, all the communication settings are optimized.

1 <Operating from the "FOMA PC設定ソフト (FOMA PC setup software)">

Start "FOMA PC設定ソフト (FOMA PC setup software)", then click "通信設定最適化 (Communication setup optimization)" in "マニュアル設定 (Manual setup)".



<Operating from the task tray>

Click the "Communication setup optimization icon" on the task tray to start the program.



2 <If the system setting is not optimized> Click "最適化を行う (Optimize)".

Select "FOMA HIGH-SPEED对応端末(受信最大3.6Mbps) [FOMA HIGH-SPEED compatible terminal (Maximum download speed: 3.6 Mbps)]". The confirmation display appears asking whether to optimize all the communication settings for the FOMA HIGH-SPEED compatible terminal, then click "は以 (Yes)".

<Releasing the optimization>

Click "最適化を解除する (Release optimization)".

When releasing the setting to carry out communication via a device other than the FOMA phone, release the optimization.

Click "OK".

【 Click "はい (Yes)".

To make the settings valid, restart the personal computer.

#### For Windows 2000

<Operating from the "FOMA PC設定ソフト (FOMA PC setup software)">

Start "FOMA PC設定ソフト (FOMA PC setup software)", then click "通信設定最適化 (Communication setup optimization)" in "マニュアル設定 (Manual setup)".



<Operating from the task tray>

Click the "Communication setup optimization icon" on the task tray to start the program.



<If not optimized>

Click "最適化を行う (Optimize)".

When you select "FOMA HIGH-SPEED対応端末(受信最大 3.6Mbps) [FOMA HIGH-SPEED compatible terminal (Maximum download speed: 3.6 Mbps)]", click "はい (Yes)". <If ootimized>

Click "最適化を解除する (Release optimization)".

When releasing the setting to carry out communication via a device other than the FOMA phone, release the optimization.

Click "OK".

// Click "はい (Yes)".

To make the settings valid, restart the personal computer.

## Access Point Name (APN) Setting

The operation below explains how to set an access point name (APN) for packet communication.

The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication. For each access point, register an access point name (APN) in the FOMA phone beforehand, then specify the registration number (cid) in the access point phone number field for connection. "cid" is the abbreviation of "Context Identifier", the number for storing the packet communication access point name (APN) in the FOMA phone. (See page 22)

1 Start the "FOMA PC設定ソフト (FOMA PC setup software)", then click "接続先 (APN) 設定 [Access point name (APN) setting]" in "マニュアル設定 (Manual setup)".



Olick "OK".

When you click "OK", the system automatically accesses the connected FOMA phone and reads the registered "access point name (APN) setting". You can obtain the setting information also from "ファイル (File)"→"FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)" on the menu in step 3.

Set an access point name (APN).

• If the FOMA phone is not connected, this display does not appear.



## Adding, editing, and deleting an access point name (APN)

- $\cdot$  To add an access point name (APN), click "追加 (Add)".
- · To edit (correct) a registered access point name (APN), click "編集 (Edit)".
- · To delete a registered access point name (APN), select the target access point name (APN), then click "削除 (Delete)".
  - ※You cannot delete the access point name (APN) registered in "cid1" and "cid3". (Even if you select "cid3" and click "削除 (Delete)", it is not deleted actually and "mopera.net" returns.)

#### Saving data into a file

From the menu, select "ファイル (File)"→"上書き保存 (Overwrite and save)" or "名前を付けて保存 (Rename and save)"; you can back up the access point name (APN) setting registered in the FOMA phone or save the currently edited access point name (APN) setting.

#### Reading data from a file

From the menu, select " $\mathcal{I}\mathcal{I}\mathcal{I}$  (File)"  $\rightarrow$  " $\mathbb{H} \zeta$  (Open)"; you can obtain the access point name (APN) setting saved in the personal computer.

## Reading access point name (APN) information from the FOMA phone

From the menu, select "ファイル (File)"→"FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)"; you can obtain the access point name (APN) setting from the FOMA phone.

## Writing access point name (APN) information to the FOMA phone

Click "FOMA端末へ設定を書き込む (Write the setting to the FOMA phone)"; you can write the displayed access point name (APN) setting to the FOMA phone.

You cannot write the IP information to the FOMA phone which does not support the IP connection.

#### Dial-up information creation function

Select an access point name (APN) you add or edit on the access point name (APN) setting display, then click "ダイヤルアップ作成 (Create dial-up information)"; you can create dial-up information for packet communication. If the access point name (APN) setting is not written to the FOMA phone, the FOMA phone setting writing confirmation display then appears, then click "はい (Yes)". After writing ends, the "パケット通信ダイヤルアップ作成画面 (packet communication dial-up information creation display)" appears. Enter any access point name, then click "アカウント・パスワードの設定 (Specify account and password)". (You can leave it blank to connect to "mopera U" or "mopera.")

Enter the user name and password, select the authorized user, and then click "OK".

If your Internet service provider instructs you to specify IP and DNS information, click "詳細情報の設定 (Set detailed information)", and register the required information. Then click "OK".

After entering information, click "OK". Dial-up is created. See page 12 for using "mopera U" or "mopera".

See page 13 for using a provider other than "mopera U" or "mopera".

#### Information

- The access point name (APN) is information to be registered in the FOMA phone, so if you connect another FOMA phone, you need to register the access point name (APN) again.
- To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA phone.

### **Setting Dial-up Network**

#### Set Packet Communication

The operation below explains how to set a connection for packet communication without using the "FOMA PC setup software".

The packet communication uses AT commands to carry out the settings from a personal computer. To specify settings, communication software to enter AT command is required. "Hyper Terminal", which is attached to Windows as the standard software, is used here for explanation.

When using DoCoMo Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN) (see page 21).

You can set "caller ID notified/not notified" (see page 23) as required. (You need to set "caller ID notified" when using "mopera U" or "mopera".)

<Packet communication setting flow using AT commands>

Confirm the COM port number (See page 20)



Start the communication software that enables the entry of AT commands (See step 3 of "Set an Access Point Name (APN)" on page 21)



Set an access point name (APN) (See step 7 on page 22)



Set "caller ID notified/not notified"
(See step 2 of "Set Caller ID Notified/Not Notified" on page 23)



Set others (See page 47)



Exit the communication software (See step 9 on page 22)

#### AT commands

- The AT commands are used to control a modem. The FOMA phone, which conforms to the AT commands, supports some extended commands and unique AT commands.
- By entering AT commands, you can carry out detailed setting for packet communication and FOMA phone, and confirm (display) the setting contents.
- If the entered AT command is not displayed, enter "ATE1 ...".

#### Confirm COM Port Number

To manually carry out the communication setting, you need to specify a COM port number, which is assigned to "FOMA P705i  $\mu$ "/"PROSOLID  $\mu$ " (modem) embedded after you install the "FOMA communication setup files" (driver).

The confirmation method varies depending on the operating system of your personal computer.

• When using DoCoMo Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN); therefore, you do not need to confirm the modem.

#### For Windows XP

- 1 "スタート (Start)" ▶ Open "コントロールパネル (Control panel)".
- Prom "プリンタとその他のハードウェア (Printer and the other hardware)" in "コント ロールパネル (Control panel)", open "電話とモ デムのオプション (Phone and modem options)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".
- Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P705i $\mu$ " or "PROSOLID  $\mu$ ", then click "OK".
  - The COM port number you confirmed is used to set an access point name (APN) (see page 21).
  - The contents on the property display and COM port number vary depending on the personal computer you use.



#### For Windows 2000

- 1 "スタート (Start)"▶"設定 (Setting)"▶Open "コントロールパネル (Control panel)".
- Open "電話とモデムのオプション (Phone and modem options)" in "コントロールパネル (Control panel)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番 (City code)", then click "OK".
- Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ ", then click "OK".
  - The COM port number you confirmed is used to set an access point name (APN) (see page 21).
  - The contents on the property display and COM port number vary depending on the personal computer you use.



## Set an Access Point Name (APN)

The operation below explains how to set an access point name (APN) for packet communication. You can register up to 10 access point names (APNs), which are managed with cid1 to cid10 (see page 22).

When using "mopera U" or "mopera", you do not need to set the access point name (APN).

The operation below is the example where you use "XXX.abc" as the access point name (APN) and use the FOMA USB Cable with Charge Function 01 (option). For the actual access point name (APN), contact your Internet service provider or network administrator. The setting here will be the access point number for dial-up network setting (see page 23).

### For Windows XP

- Connect the FOMA USB Cable with Charge Function 01 to the FOMA phone.
- Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.
- Start Hyper Terminal.

"スタート (Start)"→"すべてのプログラム (All programs)"→"アクセ サリ (Accessories)"→"通信 (Communications)"→Open "ハイパー ターミナル (Hyper Terminal)".

After starting Hyper Terminal, when the message "「既定のTelnet」プログラムにしますか? (Select the specified Telnet program?)" is displayed, set as desired. Contact the maker of your personal computer and Microsoft Corporation for the setting contents.

- For Windows 2000, "スタート (Start)"→"プログラム (Programs)" →"アクセサリ (Accessories)"→"通信 (Communications)"→Open " ハイパーターミナル (Hyper Terminal)".
- Enter any name in the "名前 (Name)" field, then click "OK".

Here, "Sample" is entered as an example.



### Select the connection method.

<When you can select the COM port number of "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ ">

Select the COM port number with which you install the "FOMA P705i $\mu$ " or "PROSOLID  $\mu$ " in the "接続方法 (Connection method)" field, then click "OK".

Then, go to step 6.

 Here, "COM3" is selected as an example. See page 20 for the COM port number of "FOMA P705i μ" or "PROSOLID μ" you should actually select in the "接続方法 (Connection method)" field.



## <When you cannot select the COM port number of "FOMA P705i $\mu$ " or "PROSOLID $\mu$ ">

Click "キャンセル (Cancel)" to close the "接続の設定 (Set a connection)" display, then perform the following operations:
(1) "ファイル (File)" menu→Select "プロパティ (Properties)".

- (2) Select "FOMA P705i μ" or "PROSOLID μ" in the "接続方法 (Connection method)" field of the "接続の設定 (Set a connection)" tab on the "Sampleのプロパティ (Sample
- properties)" display. (3) Uncheck "国/地域番号と市外局番を使う (Use country/region code and city code)".
- (4) Click "OK".

Then, go to step 7.



# The properties of the COM port number appear on the display, then click "OK".

 This display appears when you select a COM port number in step 5.

## 7 Set an access point name (APN).

Enter an access point name (APN) in the following format: AT+CGDCONT = cid, "PDP\_type", "APN"

cid: Enter 2 or any number from 4 through 10.

%If you have already specified cid, be careful that its contents are overwritten by the access point name you enter here.
"PDP type": Enter "PPP" or "IP".

"APN": Enclose an access point name (APN) in double quotation marks (").

(Example: When specifying APN "XXX.abc" in cid2)

AT+CGDCONT=2."PPP"."XXX.abc"

Enter this character string, then press . If "OK" appears, the APN setting is completed.

To confirm the current APN setting, enter "AT+CGDCONT? [...]".
 The set APNs are listed on the display.



## Confirm that "OK" appears on the display.



# 9 "ファイル (File)" menu▶ Select "ハイパーターミナルの終了 (Exit Hyper Terminal)" to exit Hyper Terminal.

- If the message "現在、接続されています。切断してもよろしいですか? (Currently connected. Do you want to disconnect this line?") appears, select "はい (Yes)".
- The message "セッションXXXを保存しますか? (Do you want to save session XXX?)" then appears. You do not need to especially save that session.

#### Information

- The access point name (APN) is information to be registered in the FOMA phone, so if you connect another FOMA phone, you need to register the access point name (APN) again.
- To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA phone.
- If the entered AT command is not displayed, enter "ATE1 ..."

#### ■cid (Registration number)

The FOMA phone has registration numbers, cid1 through cid10. cid1 contains "mopera.ne.jp" and cid3 contains "mopera.ne" as an access point name (APN) by default. To connect to a provider other than "mopera U" or "mopera", you need to set the access point name (APN) to one of cid2 or cid4 through cid10 as specified by the provider or network administrator.

#### Default cid contents

Registration No. (cid)	Access point name (APN)
1	mopera.ne.jp (mopera)
2	Not set
3	mopera.net (mopera U)
4 to 10	Not set

## ■"Phone number" for connecting to an access point name (APN) you register in cid

"\*99\*\*\*<cid No.>#"

(Example) When connecting to the access point name (APN) you register in cid2, enter the following: \*99\*\*\*2#

↑99↑↑↑Z#

### ■Resetting/Confirming the access point name (APN) settings

You can use AT commands to reset/confirm the access point name (APN) settings.

#### Resetting access point name (APN)

The access point name (APN) for cid=1 returns to "mopera.ne.jp" (default), and for cid=3 returns to "mopera.net" (default); the settings for cid=2 and cid=4 through cid10 are reset to being unregistered if you reset them.

(Entry method)

AT+CGDCONT= (When resetting all the cid contents)

AT+CGDCONT=<cid> (When resetting only a specific cid)

#### Confirming access point name (APN)

The currently specified access point name appears on the display. (Entry method)

AT+CGDCONT?

### Set Caller ID Notified/Not Notified

For packet communication, you can specify whether to notify your caller ID (caller ID notified/not notified). The caller ID is your important information; so, take a great care to notify your caller ID. You can use AT commands (\*DGPIR command) to specify "caller ID notified/not notified" before dial-up connection.

- Start the communication software such as "Hyper Terminal".
  - See page 21 for details on how to operate "Hyper Terminal".
- 2 Use the \*DGPIR command (see page 49) to specify "caller ID notified/not notified".
  - To automatically add "184 (not notify)" for outgoing or incoming call, enter the following:
    - AT∗DGPIR=1 🚚
  - To automatically add "186 (notify)" for outgoing or incoming call, enter the following:

AT\*DGPIR=2



Confirm that "OK" appears on the display.



#### Information

- When using DoCoMo Internet access service "mopera U" or "mopera", you need to set your caller ID to be "notified".
- If the entered AT command is not displayed, enter "ATE1 ...".

#### ■Specifying "caller ID notified/not notified" in dial-up network

Also by dial-up network setting (see page 23), you can add "186 (notify)" or "184 (not notify)" to each access point number.

When you specify "186 (notify)" or "184 (not notify)" using both the \*DGPIR command and dial-up network setting, the caller ID is set as follows:

Dial-up r setting (	cid = 3) setti	er ID notification ng by *DGPIR mand	Notify/Not notify caller ID
*99***	3# Not	set	Notify
	Not	notify	Not notify
	Noti	fy	Notify
184*99*	**3# Not	set	Not notify
	Not	notify	("184" specified in the dial-up
	Noti	fy	network has a priority)
186*99*	**3# Not	set	Notify
	Not	notify	("186" specified in the dial-up
	Noti	fy	network has a priority)

• To connect to "mopera U" or "mopera", you need to notify your caller ID.

### Set Dial-up Network for Windows XP

- 1 "スタート (Start)" ▶ "すべてのプログラム (All programs)" ▶ "アクセサリ (Accessories)"
  - ▶ "通信 (Communications)"▶ Open "新しい接続ウィザード (New connection wizard)".
- When the "新しい接続ウィザード (New connection wizard)" display appears, click "次へ (Next)".



- Select "インターネットに接続する (Connect to the Internet)", then click "次へ (Next)".
- 4 Select "接続を手動でセットアップする (Manually set up the connection)", then click "次へ (Next)".

- Select "ダイヤルアップモデムを使用して接続する (Use a dial-up modem for connection)", then click "次へ (Next)".
- f the "デバイスの選択 (Select a device)" display appears, check "FOMA P705iμ" or "PROSOLID μ" only, then click "次へ (Next)".
  - The "デバイスの選択 (Select a device)" display appears only when you have registered two or more modems.



- Enter any name in the "ISP 名 (ISP name)" field, then click "次へ (Next)".
  - Here, "SAMPLE" is entered as an example.



- Enter an access point number in the "電話番号 (Phone number)" field, then click "次へ (Next)".
  - When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.
     See page 22 for access point numbers other than "mopera U".



- Enter the user name and password supplied from your Internet service provider or network administrator in the "ユーザー名 (User name)", "パスワード (Password)" and "パスワードの確認入力 (Confirm the password)" fields. Then click "次へ (Next)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.



- 1 Click "完了 (Complete)".
- 11 スタート (Start)"▶ "すべてのプログラム (All programs)"▶ "アクセサリ (Accessories)"
  ▶ "通信 (Communications)"▶ Open "ネットワーク接続 (Connect to network)".
- 12 Select the dial-up icon; then "ネットワークタ スク (Network task)"▶ Select "この接続の設定 を変更する (Modify this connection setting)".

Here, click the icon of the name you entered in step 7.



## Click the "全般 (General)" tab to confirm the setting contents.

When two or more modems are connected to your personal computer, confirm that "モデム (Modem) - FOMA P705i  $\mu$ " or "モデム (Modem) - PROSOLID  $\mu$ " is checked in the "接続方法 (Connection method)" field. If it is not checked, check it. If two or more modems are checked, click the Dutton to position the priority level of "T デム (Modem) - FOMA P705i μ" or "モデム (Modem) - PROSOLID μ " to the top or uncheck modems other than "モデム (Modem) - FOMA P705i $\mu$ " or " $\mp \vec{r} \bot$  (Modem) - PROSOLID  $\mu$ ".

When "ダイヤル情報を使う (Use dial information)" is checked,

- ullet The COM port number allocated to "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ " varies depending on the personal computer you use.
- When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number

See page 22 for access point numbers other than "mopera U".



## ✓ Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "呼び出すダイヤルアップサーバーの種類 (Type of calling dial-up server)" field, select "PPP: Windows 95/98/NT4/2000, Internet". In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル (TCP/IP) [Internet protocol (TCP/IP)]".

You cannot modify the setting of the "QoS パケットスケジューラ (QoS packet scheduler)" field; so use the default setting as it is. Next, click "設 定 (Setting)".

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.



5 Uncheck all the items, then click "OK".



Return to the display in step 14, then click "OK"

### Set Dial-up Network for Windows 2000

- "スタート (Start)"▶"プログラム (Programs)" ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)" ➤ Open "ネットワークとダ イヤルアップ接続 (Network and dial-up connections)".
- Double-click "新しい接続の作成 (Create a new connection)" in 新しい接続の "ネットワークとダイヤルアップ接 続 (Network and dial-up connections)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番 (City code)", then click "OK".
  - The "所在地情報 (Address information)" display appears only when you first start "新しい接続の作成 (Create a new connection)" in step 2.

孠

- At the second time or after, the "ネットワークの接続ウィザード (Network connection wizard)" display appears instead of this display. Go to step 5.
- When "電話とモデムのオプション (Phone and modem options)" appears, click "OK".
- When the "ネットワークの接続ウィザード (Network connection wizard)" display appears, click "次へ (Next)".



- 6 Select "インターネットにダイヤルアップ接続す る (Dial-up connect to the Internet)", then click "次へ (Next)".
- Select "インターネット接続を手動で設定する か、またはローカルエリアネットワーク (LAN) を使って接続します [Connect to Internet manually or via the local area network (LAN)]", then click "次へ (Next)".

- Select "電話回線とモデムを使ってインターネットに接続します (Connect to Internet via a phone line and modem)", then click "次へ (Next)".
- Confirm that "FOMA P705i μ" or "PROSOLID μ" is displayed in the "インターネットへの接続に使うモデムを選択する (Select a modem for connection to Internet)" field. Then click "次へ (Next)".
  - If "FOMA P705i μ" or "PROSOLID μ" is not selected in that field, select it.
  - The display below may not appear depending on the operating environment of your personal computer. In this case, go to step 10.



- 10 Enter an access point number in the "電話番号 (Phone number)" field.
  - Leave the "市外局番 (City code)" field blank.
  - Uncheck "市外局番とダイヤル情報を使う (Use city code and dial information)".
  - When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.

See page 22 for access point numbers other than "mopera U".




↑↑ Click "詳細設定 (Detailed setting)".

## 12 Specify the items in the "接続 (Connection)"

Enter "接続の種類 (Connection type)" and "ログオンの手続き (Logon procedure)" according to the information supplied from your Internet service provider or network administrator.
Confirm the contents you entered, then click the "アドレス (Address)" tab.

 Contact your Internet service provider or network administrator for the setting contents of "接続 (Connection)" tab.

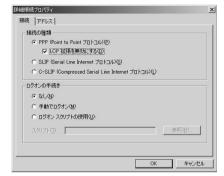

# 13 Specify IP address and DNS (domain name service) address.

Enter "IPアドレス (IP address)" and "ISPによるDNS(ドメインネームサービス)アドレスの自動割り当て [Automatically allocate a DNS (domain name service) address by ISP]" according to the information supplied from your Internet service provider or network administrator.

After you finish entering all the items, click "OK". The display in step 10 returns; then click "次へ (Next)".

 Contact your Internet service provider or network administrator for the setting contents of IP address and DNS address.



- 4 Enter the user name and password supplied from your Internet service provider or network administrator, in the "ユーザー名 (User name)" and "パスワード (Password)" fields. Then click "次へ (Next)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank. In this case, two displays "ユーザー名を空白のままにしておきますか? (Do you want to make the user name blank?)" and "パスワードを空白のままにしておきますか? (Do you want to make the password blank?)" appear. Click "はい (Yes)" on each display. Then go to step 15.



- 15 Enter any name in the "接続名 (Connection name)" field, then click "次へ (Next)".
  - · Here, "SAMPLE" is entered as an example.



- <mark>16</mark> Select "いいえ (No)", then click "次へ (Next)".
  - When setting the Internet mail, select "はい (Yes)".
  - Contact your Internet service provider or network administrator for details on the setting.
- 17 Then, carry out the "TCP/IP" setting.
  - If the display below appears, uncheck "今すぐインターネットに接続するにはここを選び「完了」をクリックしてください (To connect to the Internet right now, select here, then click "Complete"). Then click "完了 (Complete)".



- 18 "スタート (Start)"▶ "プログラム (Programs)" ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)"▶ Open "ネットワークと ダイヤルアップ接続 (Network and dial-up connections)".
- 19 Select the icon of the access point name you entered in step 15; then "ファイル (File)" menu Select "プロパティ (Properties)".



- 20 Click the "全般 (General)" tab to confirm the setting contents.
  - When two or more modems are connected to your personal computer, confirm that " $\mp \mathcal{F} \Delta$  (Modem) FOMA P7051 $\mu$ " or " $\mp \mathcal{F} \Delta$  (Modem) PROSOLID  $\mu$ " is checked in the " $\frac{1}{2}$ % in the " $\frac{1}{2}$ % (Connection method)" field. If it is not checked, check it.
  - Confirm that "ダイヤル情報を使う (Use dial information)" is unchecked. If it is checked, uncheck it.
  - $\bullet$  The COM port number allocated to "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ " varies depending on the personal computer you use.
  - When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.
     See page 22 for access point numbers other than "mopera U".



## 21 Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "呼び出すダイヤルアップサーバーの種類 (Type of calling dial-up server)" field, select "PPP: Windows 95/98/NT4/2000, Internet".

For the component, check only "インターネットプロトコル (TCP/IP) [Internet protocol (TCP/IP)]".

Then click "設定 (Setting)".



79 Uncheck all the items, then click "OK".



Return to the display in step 21, then click "OK".

### **Making Dial-up Connection**

The operation below explains how to make a dial-up connection using Windows XP as an example. Perform the operation on page 4 to connect the FOMA phone to your personal computer.

- To perform a connection via packet communication, it is recommended that you optimize the communication performance by "Communication Setup Optimization" on page 18. By optimizing data, you can maximize the high-speed communication capability in the FOMA network. To execute the optimization, install "FOMA PC setup software" (see page 8).
- When you perform 64K data communication, do not optimize the communication performance by "Communication setup optimization".
- 1 "スタート (Start)"▶"すべてのプログラム (All programs)"▶"アクセサリ (Accessories)"
  ▶"通信 (Communications)"▶ Open "ネットワーク接続 (Network connection)".

## Open the access point to be used.

Select the access point icon of the ISP name (see page 24) you specified in "Set Dial-up Network", then "ネットワークタスク (Network task)"→"この接続を開始する (Start this connection)". Otherwise, double-click the access point icon.



- Confirm the contents and click "ダイヤル (Dial)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



## The connection is completed.

After the connection is completed, the message below appears from the indicator of the task bar for a few seconds.

- You can start the browser software to browse web pages, use e-mail and so on.
- If this message does not appear, confirm the setting of the access point again.



# III

#### Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.
  - " 

    " (Communicating, data sending)
  - " 4" (Communicating, data receiving)
  - " (Communicating, no data sending/receiving)
- " (Outgoing or being disconnected)
- " " (Incoming or being disconnected)



#### Disconnecting

Click the dial-up icon on the task tray.



🤈 Click "切断 (Disconnect)".

#### Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

### When you cannot connect to network

If you cannot connect to network (if you fail a dial-up connection), confirm the following items:

If this error occurs	Confirm those:
Your personal	· Confirm whether your personal computer satisfies
computer cannot	the operating environment (see page 2).
recognize "FOMA	· Confirm whether "FOMA communication setup
P705i $\mu$ " or	files" (driver) is installed in your personal computer.
"PROSOLID $\mu$ "	· Confirm whether the FOMA phone is connected to
	your personal computer and powered on.
	· Confirm whether the FOMA USB Cable with
	Charge Function 01 (option) is securely connected.
You cannot connect	· Confirm whether the ID (user name) and password
to the access point	are correct.
	· When you need to notify your caller ID such as
	when using "mopera U" or "mopera", make sure
	"184" is not prefixed to the phone number.
	・Confirm that "フロー制御を使う (Use the flow
	control)" is checked in the modem properties.
	· If you cannot connect to the access point even
	after confirming above, contact your Internet
	service provider or network administrator for the
	setting method, and so on.

#### **Set 64K Data Communication**

The operation below explains how to set the 64K data communication without using "FOMA PC setup software".

#### Setting dial-up connection and TCP/IP

The setting of dial-up connection and TCP/IP for the 64K data communication is the same as for the packet communication (see page 20).

Take care of the following points:

- In the 64K data communication, you do not need to set an access point name (APN). For the access point of the dial-up connection, enter the phone number of the access point specified by your Internet service provider or network administrator. (To connect to "mopera U", enter "\*8701" in the phone number field. To connect to "mopera", enter "\*9601" in the phone number field.)
- Set "caller ID notified/not notified" and "others" as required.
   (When connecting to "mopera U" or "mopera", you need to notify your caller ID.)
- Contact your Internet service provider or network administrator for details on the setting contents.

#### **Connecting and Disconnecting**

You can operate in the same way as for the packet communication. Perform the operations on page 16 or page 28.

## Using FirstPass PC Software

The FirstPass PC software is to access the FirstPass site from the web browser of your personal computer using the user certificate obtained by the FOMA phone supporting FirstPass.

### Notes for Installing FirstPass PC Software

#### Confirm the operating environment

Use the FirstPass PC software under the following operating environment:

Item	Required environment
PC main unit	PC/AT compatible model
OS	Windows 2000, Windows XP (Japanese version in each)
Memory	Windows 2000: 32 Mbytes or more <sup>₩</sup>
requirements	Windows XP: 128 Mbytes or more <sup>®</sup>
Hard disk space size	Unused memory space of 10 Mbytes or more <sup>™</sup>
Browser	Microsoft® Internet Explorer 5.5 or higher
	Microsoft® Internet Explorer 6.0 or higher when
	using Windows XP

<sup>\*\*</sup>The memory requirements and hard disk space size may vary depending on the system environment.

### Before installing

See "FirstPassManual" (PDF format) in the "FirstPassPCSoft" folder of the CD-ROM before installing the FirstPass PC software.

#### Install FirstPass PC Software

The explanation here uses the displays for when installing the FirstPass PC software on Windows XP. The displays are slightly different depending on the personal computer you use.

- Set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into your personal computer.
- **2** To install the FirstPass PC software, click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".



3 Click "インストール (Install)" under "FirstPass PCソフト (FirstPass PC software)".

Then, perform the operations described in "簡易操作マニュアル (Easy operation manual)" (PDF format).





## For Using Windows Vista

## Installing FOMA Communication Setup Files (Driver)

Installing the FOMA communication setup files (driver) is required when you connect the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 (option) for the first time.


- . Operate as the user who has the PC administrator right.
- Connect the FOMA phone and the FOMA USB Cable with Charge Function 01. (See page 4)
- Start Windows, then set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into the personal computer.
- Click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".
  - If this display appears during installation of the "FOMA communication setup files" (driver), close the display.



Click "インストール (Install)" under "FOMA通信設定ファイル(USBドライバ)[FOMA communication setup files (USB driver)]".



- Double click "FOMAinst.exe" in opened folder.
- 6 Read "ソフトウェア使用許諾契約書 (Software licensing contract)", and click "同意する (Agree)".

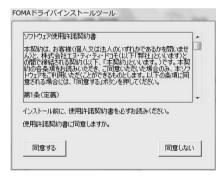

Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

Installation starts.

Pop-up message "新しいハードウェアが見つかりました (New hardware was found)" appears for a few seconds from the indicator of the task bar.

After you complete the installation, pop-up message "デバイスを使用する準備ができました。デバイス ドライバ ソフトウェアが正しくインストールされました。(The system is ready to use the device. The device driver software was installed correctly.)" appears for a few seconds from the indicator of the task bar.

## 8 Click "インストールする(推奨)[Installing (recommended)]".

Then install the FOMA byte counter.

Install by following the onscreen instructions.

When you do not install the FOMA byte counter, go to step 9.



Click "完了 (Complete)".


Next, confirm that the "FOMA communication setup files" (driver) are installed correctly. (See page 32)

### Confirm Installed Driver

Confirm that the "FOMA communication setup files" (driver) are installed correctly.

- 1 "☑ [スタート (Start)]" ➤ Open "コントロールパネル (Control panel)" ➤ "システムとメンテナンス (System and maintenance)"
- Open "ハードウェアとデバイスを表示 (Show hardwares and devices)"
  - ▶Click "続行 (Continue)".
- Click each device, then confirm the installed driver names.

Confirm that all driver names are displayed under "ポート (COMとLPT) [Port (COM/LPT)]", "モデム (Modem)", and "ユニバーサル シリアル バス コントローラ (Universal serial bus controller)".

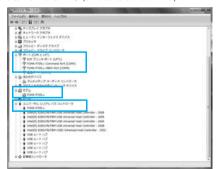

\*\*The COM port number varies depending on the personal computer you use.

The following drivers are installed by installation of the "FOMA communication setup files" (driver):

Device name	FOMA communication setup file (driver) name
ポート (COMとLPT) [Port (COM/ LPT)]	$\cdot$ FOMA P705i $\!\mu$ Command Port or FOMA P705iCL Command Port
	$\cdot$ FOMA P705i $\mu$ OBEX Port or FOMA P705iCL OBEX Port
モデム (Modem)	$\cdot$ FOMA P705i $\mu$ or FOMA P705iCL
ユニバーサル シリアル バス コントローラ (Universal serial bus controller)	· FOMA P705i $\mu$ or FOMA P705iCL

To set an access point with the "FOMA PC setup software", see page 34. To set an access point without the "FOMA PC setup software", see page 42 or page 45.

## Uninstall FOMA Communication Setup Files (Driver)

When uninstalling the "FOMA communication setup files" (driver) is necessary (such as when upgrading the version), perform the operation below.

- Operate as the user who has the PC administrator right.
- If the FOMA phone is connected to a personal computer via the FOMA USB Cable with Charge Function 01 (option), disconnect the FOMA USB Cable with Charge Function 01.
- 2 "[☑] [スタート (Start)]" ▶ "コントロールパネル (Control panel)" ▶ Open "プログラムのアンインストール (Uninstall programs)".
- 3 Select "FOMA P705i  $\mu$  USB" or "FOMA P705iCL USB" and click "アンインストールと変更 (Uninstall and change)"
  ▶ Click "続行 (Continue)".
- / Click "OK".
- 「Click "はい (Yes)" to restart Windows.

The uninstallation is then completed.

• If you click "いいえ (No)", restart it manually.

#### Information

• If you remove the FOMA USB Cable with Charge Function 01 from the personal computer while installing the "FOMA communication setup files" (driver) or click the "キャンセル (Cancel)" button to stop installation, the "FOMA communication setup files" (driver) may not be installed correctly. In this case, open "USB\_Driver" → "P705iµ/Drivers" or "PROSOLID µDrivers" → "WinVista32" inside "FOMA P705iµ/PROSOLID µ CD-ROM", and execute "p705iuun.exe" or "p705clun.exe" to delete the "FOMA communication setup files" (driver), and then install the files again.

## **FOMA PC Setup Software**

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication. Using the "FOMA PC setup software", you can easily carry out the settings below. If required, you can set the packet communication and 64K data communication without using the "FOMA PC setup software". (See page 42 and page 45)

#### Easy setting

You can easily carry out "dial-up creation for FOMA data communication" by following the guidance.

#### ■Access point name (APN) setting

You can set an access point name (APN) required for packet communication.

The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication.

You need to register an access point name (APN) in the FOMA phone in advance, and specify the registration number (cid) in the access point number field for connection.

By the default, "mopera.ne.jp", the access point name (APN) of "mopera", is registered in cid\*1, and "mopera.net", that of "mopera U", is registered in cid\*3. To connect to another service provider or Intranet LAN, however, you need to set the access point name (APN).

\*\*"cid" is the abbreviation of "Context Identifier", the number for storing the packet communication access point (APN) to the FOMA phone.

#### Information

● If the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)" or the older version than this "FOMA PC Setup software)" (older than version 4.0.0) is installed, uninstall it in advance.

## Communication Setting by FOMA PC Setup Software



#### STEP1 Install Software

### Install the "FOMA PC setup software".

See page 34 for installation.

If the older version than this "FOMA PC setup software" (version 4.0.0) is already installed, you cannot install this "FOMA PC setup software", so uninstall it in advance. See page 35 if the display appears to indicate that the old-version "FOMAデータ通信設定ソフト(FOMA data communication setup software)" is installed.



## STEP2 Prepare for Setup

#### Prepare for setup.

Before setup, confirm that the FOMA phone is connected to your personal computer and correctly recognized by the personal computer. See page 4 for how to connect the FOMA USB Cable with Charge Function 01 (option).

If the FOMA phone is not correctly recognized by the personal computer, you cannot carry out settings and communication. See page 32 for confirming whether the FOMA phone is correctly recognized by the personal computer.

See page 31 through page 32 for how to install the "FOMA communication setup files" (driver).



## STEP3 Setting Operation

## Carry out the appropriate setting for the communication you use.

Setting the packet communication from "Easy Setting"

When using "mopera U" or "mopera" as an access point

When using a provider other than "mopera U" or "mopera"

a" ... page 37

Setting the 64K data communication from "Easy Setting"
When using "mopera U" or "mopera" as an access point

nage 38

When using a provider other than "mopera U" or "mopera"

.... page 39

See page 41 for setting an access point name (APN).



STEP4 Connection

Connect to the Internet.

## **Installing FOMA PC Setup Software**

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication.

Using the "FOMA PC setup software", you can easily set up dial-up and access point name (APN).

. Operate as the user who has the PC administrator right.

## Notes for Installing FOMA PC Setup Software

## Confirm that the FOMA phone is correctly recognized by your personal computer

Before installing the "FOMA PC setup software", you need to register the "FOMA communication setup files" (driver) correctly on the device of the personal computer. (See page 32)

#### ■When you connect the FOMA phone to your personal computer for the first time

The wizard shown below starts.

To use the FOMA data communication, you need to register the FOMA phone in your personal computer as a communication device.

See page 31 through page 32 for installation of the "FOMA communication setup files" (driver).



### Install FOMA PC Setup Software

The displays are slightly different depending on the personal computer you use.

- Set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into your personal computer.
- To install the "FOMA PC setup software", click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".
  - If this display appears during installation of the "FOMA PC setup software", close the display.



**3** Click "インストール (Install)" under "FOMA PC 設定ソフト (FOMA PC setup software)".



When you click " $ext{T} \mathcal{N} \mathcal{N} \mathcal{N}$ " (Install)", an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

● When the "ファイルのダウンロード ー セキュリティの警告 (File download - Security alert)" window appears: Click "実行 (Execute)".



## / Click "続行 (Continue)"▶Click "次へ (Next)".

Before starting setup, check that no other programs are currently running. If any program is running, click " $\pm v \nu t \nu$  (Cancel)" to save and exit the program, then restart installation.

- See page 35 if the display appears to indicate that the old-version "FOMAデータ通信認定ソフト (FOMA data communication setup software)" or old-version "FOMA PC設定ソフト (FOMA PC setup software)" is installed.
- 5 Confirm the displayed contract contents.
  If you agree with the contents, click "はい (Yes)".
- 6 Confirm the installation destination, then click "次へ(Next)".

To change the installation destination, click "参照 (Browse)"; specify any installation destination; then click "次へ (Next)".

(You can install the FOMA PC setup software in a different drive, however, proceed without changing unless you have a problem on hard disk space, etc.)



## 7 Confirm the program folder name, then click "次へ (Next)".

To change the program folder name, enter a new one, then click "次 ^ (Next)".



## Q Click "完了 (Complete)".

After setup is completed, the "FOMA PC setup software" operation display appears.

#### ■Displays at installation of the "FOMA PC setup software"

When the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)" is installed

A warning display appears.

From "プログラムのアンインストール (Uninstall programs)", uninstall the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)".

#### When you click "キャンセル (Cancel)" during the installation

A confirmation display appears when you click "キャンセル (Cancel)" or "いいえ (No)" during the setup operation. To continue the installation, click "いいえ (No)". To intentionally cancel, click "はい (Yes)" and "完了 (Complete)".





Select "メニュー (Menu)"→"バージョン情報 (Version information)" from the menu of the "FOMA PC setup software".

The version information about the "FOMA PC setup software" is displayed.

### **Setting Communication**

The operation below explains how to carry out various settings related to the packet communication and 64K data communication.

There are "auto setting" for easy operation and "manual setting" for the user familiar with personal computers. Before setting, confirm that the FOMA phone is connected to your personal computer.

" [スタート (Start)]" ▶ "すべてのプログラム (All programs)" ▶ "FOMA PC設定ソフト (FOMA PC setup software)" ▶ Open "FOMA PC設定ソフト (FOMA PC setup software)".

Using this PC setup software, you can easily create FOMA dial-up setting by answering (selecting and entering) the displayed questions according to "the information of connected provider" and "connection method" you selected.

- ・See page 36 for setting the packet communication from "かんたん 設定 (Easy Setting)".
- ・See page 38 for setting the 64K data communication from "かんたん設定 (Easy Setting)".
- · See page 41 for setting "接続先 (APN) 設定 [access point name (APN) setting]".



## **Specify Communication Port**

- 1 "メニュー (Menu)" of "FOMA PC setup software" ➤ Select "通信設定 (Communication setup)".
  - · 自動設定 (推奨) [Auto-setup (recommended)]
    The connected FOMA phone is automatically specified. Usually, select "Auto-setup".
  - · COMボート指定 (Specifying COM port)
    When specifying a COM port number, specify the COM port number (COM1 through 99) the FOMA phone is connected to.
  - See page 42 for how to check the COM port number.



Olick "OK".

The settings are applied.

## Select Packet Communication from "かんたん設定 (Easy Setting)"

## Using "mopera U" or "mopera" as an access point

This section explains how to make settings for a high-speed packet communication of 3.6 Mbps maximum. This setting is for when you use DoCoMo Internet connection service "mopera U" or "mopera" as a provider.

High-speed packet communication:

You are charged according to the amount of data sent/ received. You can execute data communication without worrying about time.

High-speed packet communication of up to 3.6 Mbps for receiving and up to 384 kbps for sending is available.

Note that a communication fee becomes expensive if you send/receive a large amount of data such as by browsing web pages having many images, or by downloading the data.

- The communication speed for both sending and receiving is up to 384 kbps for "mopera" connection.
- **1** Click "かんたん設定 (Easy Setting)".



2 Select "パケット通信 (Packet communication)", then click "次へ (Next)".

Confirm that "パケット通信 (Packet communication)" is checked, then click "次へ (Next)".

## Select "『mopera U』への接続 (Connect to mopera U)" or "『mopera』への接続 (Connect to mopera)", then click "次へ (Next)".

To use "mopera U", select "「mopera U」への接続 (Connect to mopera U)". To use "mopera", select "「moperal への接続 (Connect to mopera)". When "「mopera U」への接続 (Connect to mopera U)" is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click "はし\(YES\)".

• See page 37 for using a provider other than "mopera U" or "mopera".

#### Click "OK".

 The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

## 5 Enter an access point name, then click "次へ (Next)".

You can specify any name for the currently created connection. Enter a plain name in the "接続名 (Access point name)" field.

- You cannot enter the following half-pitch characters:
   ¥, /, :, \*, ?, !, <, >, !, and ".
- For the setting of "発信者番号通知 (caller ID notification)", select "設定しない (推奨) [Not set (recommended)]" for overseas use.
- "mopera U" supports connection types of both "PPP接続 (PPP connection)" and "IP接続 (IP connection)". For overseas use, select "IP接続 (IP connection)".



ら Click "次へ (Next)".

If the access point is "mopera U" or "mopera", you can connect even if the "2- "4" (user name)" and "1" (2 2 1" (password)" fields are blank.

## **7** Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.
- Click "OK".

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for

starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 40)

## Using a provider other than "mopera U" or "mopera" as an access point

The packet communication is a communication system you are charged according to the amount of data you sent and received, regardless of the communication time and distance. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps) To use a provider other than "mopera", you may need to separately apply for the service and sign a contract with the provider.

**1** Click "かんたん設定 (Easy Setting)".



- 2 Select "パケット通信 (Packet communication)", then click "次へ (Next)".

  Confirm that "パケット通信 (Packet communication)" is checked.
- **3** Select "その他 (Others)", then click "次へ (Next)". Confirm that "その他 (Others)" is checked, then click "次へ (Next)".
- ✓ Click "OK".

then click "次へ (Next)".

- The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.
- Enter an access point name.

You can specify any name for the currently created connection. Enter a plain name in the "接続名 (Access point name)" field.

- You cannot enter the following half-pitch characters:

  \*\( \( \) \: \\* \? \. \| \< \> \| \| \) and ".
- In the "接続先 (APN) の選択 [Select an access point name (APN)]" field, "mopera.ne.jp (PPP接続) [mopera.ne.jp (PPP connection)]" is displayed as the default. Go to the "接続先 (APN) 設定 [Set an access point name (APN)]" display.
- For the setting of "発信者番号通知 (caller ID notification)", follow the information from the provider and others. For overseas use, select "設定しない (Not set)".



## 6 Click "接続先 (APN) 設定 [Set an access point name (APN)]".

"mopera.ne.jp" is registered in "cid1" and "mopera.net" is registered in "cid3" by default. Click "追加 (Add)", then enter the correct access point name (APN) for FOMA packet communication on the "接続先 (APN) の追加 [Add an access point name (APN)]" display. Click "OK". The "パケット通信設定" (Packet communication setting)" display returns. Select the access point name (APN) you specified newly. If it is ok. click "OK".

 For a provider access point name (APN) or supported connection types, contact your provider.



7 Click "詳細情報の設定 (Set detailed information)".

The display for specifying "IP $\mathcal{P}$   $\mathbb{F}$   $\mathbb{F}$   $\mathbb{F}$  (IP address)" and " $\mathbb{F}$   $\mathbb{F}$   $\mathbb{F}$  (name server)" appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click "OK".

- R Click "次へ (Next)".
- 9 Specify "ユーザー名 (User name)" and "パスワード (Password)", then click "次へ (Next)".

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.



## 10 Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了(Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.

#### 11 Click "OK".

The setting is completed.


Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 40)

## Select 64K Data Communication from "かんたん設定 (Easy Setting)"

### Using "mopera U" or "mopera" as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) You can use the DoCoMo Internet access service, "mopera U"/"mopera".
 
<mark>↑</mark> Click "かんたん設定 (Easy Setting)".



- 2 Select "64Kデータ通信 (64K data communication)", then click "次へ (Next)".
  - Confirm that "64K $\vec{r}$ -夕通信 (64K data communication)" is checked, then click "次 $^{\circ}$  (Next)".
- 3 Select "「mopera U」への接続 (Connect to mopera U)" or "「mopera」への接続 (Connect to mopera)", then click "次へ (Next)".

To use "mopera U", select "「mopera U] への接続 (Connect to mopera U)". To use "mopera", select "「mopera", 一の接続 (Connect to mopera"). When "「mopera U」への接続 (Connect to mopera U)" is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click "はい (YES)".

 $\bullet$  See page 39 for using a provider other than "mopera U" or "mopera".

## 4 Enter an access point name, then click "次へ (Next)".

You can specify any name for the currently created connection. Enter a plain name in the "接続名 (Access point name)" field. Confirm that "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ " is displayed in the "干テ」公項罪代 Select a modem)" field.

- You cannot enter the following half-pitch characters: \*, /, :, \*, ?, !, <, >, |, and ".
- Set whether to notify your caller ID for dial-up connection. You need to notify your caller ID for connecting to "mopera U" or "mopera".



## 「Click "次へ (Next)".

If the access point is "mopera U" or "mopera", you can connect even if the "ユーザ名 (user name)" and "パスワード (password)" fields are blank.

## Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.

#### 7 Click "OK".

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 40)

## Using a provider other than "mopera U" or "mopera" as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) To use a provider other than "mopera", you may need to separately apply for the service and sign a contract with the provider.

← Click "かんたん設定 (Easy Setting)".



2 Select "64Kデータ通信 (64K data communication)", then click "次へ (Next)".

Confirm that "64Kデータ通信 (64K data communication)" is checked, then click "次 $^{\circ}$  (Next)".

3 Select "その他 (Others)", then click "次へ (Next)".

Confirm that "その他 (Others)" is checked, then click "次へ (Next)".

Enter dial-up information.

When connecting to a provider supporting ISDN-synchronous 64K other than "mopera U" or "mopera", register the following items when creating the dial-up.

- ①"接続名 (Access point name)" (arbitrary)
- ②"モデムの選択 (Select a modem)" (FOMA P705i $\mu$  or PROSOLID  $\mu$ ) ③"電話番号 (Phone number of provider access)"
- (4) Set whether to notify your caller ID for dial-up connection.

Correctly enter these items according to the provider information.

- For the setting of the caller ID notification, follow the instructions from the provider you use.
- You cannot enter the following half-pitch characters in the "接続名 (Access point name)" field: ¥, /, :, \*, ?, !, <, >, I, and ".



う Click "詳細情報の設定 (Set detailed information)".

The display for specifying "IP $\mathcal{P}$ " F $\cup$  $\mathcal{N}$  (IP address)" and " $\overset{*}{\mathcal{N}}$ — $\overset{*}{\mathcal{N}}$ — $\overset{*}{\mathcal{N}}$ —(name server)" appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click "OK".

- Click "次へ (Next)".
- 7 Specify "ユーザー名 (User name)" and "パスワード (Password)", then click "次へ (Next)".

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.



## Confirm the set information, then click "完了 (Complete)".

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click "完了 (Complete)".

- To change the set contents, click "戻る (Back)".
- If "デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)" is checked, a dial-up shortcut will be created on the desktop.
- Click "OK".

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for

starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 40)

### **Carrying Out Set Communication**

Perform the operation on page 4 to connect the FOMA phone to your personal computer.

- <mark>1</mark> "優】[スタート(Start)]"
  - ▶ Open "接続先 (Access point)", select an access point and click "接続 (Connect)".
  - Open the FOMA connection shortcut icon created at communication setting; the connection display for starting communication appears. Bring up the icon by the following operations if it is not displayed:
    - " [スタート (Start)]"→"コントロールパネル (Control panel)"
    - →"ネットワークとインターネット (Network and Internet)"
  - →"ネットワークと共有センター (Network and sharing center)"
  - → "ネットワーク接続の管理 (Management of network connection)" Enter "ユーザー名 (User name)" and "パスワー

## Enter "ユーザー名 (User name)" and "パスワ-ド (Password)", then click "ダイヤル (Dial)".

- For "mopera U" or "mopera", you can connect even if the "ユーザー 名 (User name)" and "パスワード (Password)" fields are blank.
- When you put a check mark for "次のユーザーが接続するとき使用するために、このユーザー名とバスワードを保存する (Save this user name and the password for the next user to use for connecting)", this user or all users do not need to enter them from the next time.



## 3 Check for the connection, then click "閉じる (Close)".

 You can start the browser software to browse web pages, use e-mail, and so on.



#### Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.
- " 7" (Communicating, data sending)
- " 4" (Communicating, data receiving)
- " (Communicating, no data sending/receiving)
- " " (Outgoing or being disconnected)
- " " (Incoming or being disconnected)
- During 64K data communication, " property appears on the FOMA phone.



### Disconnecting

- 1 "[スタート (Start)]"
  - ▶Open "接続先 (Access point)".
- 2 Select the icon which is communicating, then click "切断 (Disconnect)"
  - ▶Click "閉じる (Close)".

#### Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

## **Uninstalling FOMA PC Setup Software**

## **Before Uninstalling**

Before uninstalling the "FOMA PC setup software", reset the contents modified for the FOMA phone to the default.

### 1 Exit the currently running programs.

- Click "終了 (Exit)" at the bottom right to exit the "FOMA PC setup software".
  - If you try to uninstall during running of the "FOMA PC setup software", the display below appears. Stop the uninstallation processing, and exit the program.



### Uninstall

The displays differ depending on the personal computer you use.

• Operate as the user who has the PC administrator right.

- 1 "[[スタート (Start)]" → "コントロールパネル (Control panel)" → Open "プログラムのアンインストール (Uninstall programs)".
- 2 Select "NTT DoCoMo FOMA PC設定ソフト (NTT DoCoMo FOMA PC setup software)", then click "アンインストール (Uninstall)" ▶ Click "続行 (Continue)".



? Click "はい (Yes)".

The uninstallation starts, and applications (programs) are deleted.

✓ Click "完了 (Finish)".

Uninstalling the "FOMA PC setup software" is completed.

### Access Point Name (APN) Setting

The operation below explains how to set an access point name (APN) for packet communication. The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication. For each access point, register an access point name (APN) in the FOMA phone beforehand, then specify the registration number (cid) in the access point phone number field for connection. "cid" is the abbreviation of "Context Identifier", the number for storing the packet communication access point name (APN) in the FOMA phone.

1 Start the "FOMA PC設定ソフト (FOMA PC setup software)", then click "接続先 (APN) 設定 [Access point name (APN) setting]" in "マニュアル設定 (Manual setup)".



Olick "OK".

When you click "OK", the system automatically accesses the connected FOMA phone and reads the registered "access point name (APN) setting". You can obtain the setting information also from "ファイル (File)" ¬FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)" on the menu in step 3.

## Set an access point name (APN).

• If the FOMA phone is not connected, this display does not appear.



## Adding, editing, and deleting an access point name (APN)

- · To add an access point name (APN), click "追加 (Add)".
- · To edit (correct) a registered access point name (APN), click "編集 (Edit)".
- · To delete a registered access point name (APN), select the target access point name (APN), then click "削除 (Delete)".
  - ※ You cannot delete the access point name (APN) registered in "cid1" and "cid3". (Even if you select "cid3" and click "削除 (Delete)", it is not deleted actually and "mopera.net" returns.)

#### Saving data into a file

From the menu, select "ファイル (File)"→"上書き保存 (Overwrite and save)" or "名前を付けて保存 (Rename and save)"; you can back up the access point name (APN) setting registered in the FOMA phone or save the currently edited access point name (APN) setting.

#### Reading data from a file

From the menu, select " $\mathit{TpTHD}$  (File)"  $\rightarrow$  " $\mathit{HS}$  (Open)"; you can obtain the access point name (APN) setting saved in the personal computer.

## Reading access point name (APN) information from the FOMA phone

From the menu, select "ファイル (File)"→"FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)"; you can obtain the access point name (APN) setting from the FOMA phone.

## Writing access point name (APN) information to the FOMA phone

Click "FOMA端末へ設定を書き込む (Write the setting to the FOMA phone)"; you can write the displayed access point name (APN) setting to the FOMA phone.

You cannot write the IP information to the FOMA phone which does not support the IP connection.

#### Dial-up information creation function

Select an access point name you add or edit on the access point name (APN) setting display, then click "ダイヤルアップ作成 (Create dial-up information)"; you can create dial-up information for packet communication. If the access point name (APN) setting is not written to the FOMA phone, the FOMA phone setting writing confirmation display then appears, then click "はい (Yes)". After writing ends, the "パケット通信ダイヤルアップ作成画面 (packet communication dial-up information creation display)" appears.

Enter any access point name, then click "アカウント・パスワードの 設定 (Specify account and password)". (You can leave it blank to connect to "mopera U" or "mopera.")

Enter the user name and password, select the authorized user, and then click "OK".

If your Internet service provider instructs you to specify IP and DNS information, click "詳細情報0設定" (Set detailed information)", and register the required information. Then click "OK".

After entering information, click "OK". Dial-up is created.

See page 36 for using "mopera U" or "mopera".

See page 37 for using a provider other than "mopera U" or "mopera".

#### Information

- The access point name (APN) is information to be registered in the FOMA phone, so if you connect another FOMA phone, you need to register the access point name (APN) again.
- To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA phone.

## **Setting Dial-up Network**

### **Set Packet Communication**

The operation below explains how to set a connection for packet communication without using the "FOMA PC setup software".

The packet communication uses AT commands to carry out the settings from a personal computer. To specify settings, communication software to enter AT command is required.

When using DoCoMo Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN) (See page 43).

You can set "caller ID notified/not notified" (see page 43) as required. (You need to set "caller ID notified" when using "mopera U" or "mopera".)

<Packet communication setting flow using AT commands>

Confirm the COM port number



Start the communication software that enables the entry of AT commands



Set an access point name (APN)



Set "caller ID notified/not notified"



Set others



Exit the communication software

#### ■AT commands

- The AT commands are used to control a modem. The FOMA phone, which conforms to the AT commands, supports some extended commands and unique AT commands.
- By entering AT commands, you can carry out detailed setting for packet communication and FOMA phone, and confirm (display) the setting contents.
- If the entered AT command is not displayed, enter "ATE1 [\_\_]".

### Confirm COM Port Number

To manually carry out the communication setting, you need to specify a COM port number, which is assigned to "FOMA P7051  $\mu$ "/"PROSOLID  $\mu$ " (modem) embedded after you install the "FOMA communication setup files" (driver).

The confirmation method varies depending on the operating system of your personal computer.

- When using DoCoMo Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN); therefore, you do not need to confirm the modem.
- " [スタート (Start)]" ➤ Open "コントロー ルパネル (Control panel)".
- From "ハードウェアとサウンド (Hardware and sound)" in "コントロールパネル (Control panel)", open "電話とモデムのオプション (Phone and modem options)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".
- Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ ", then click "OK".
  - The COM port number you confirmed is used to set an access point name (APN) (see page 43).
  - The contents on the property display and COM port number vary depending on the personal computer you use.
  - Windows Vista does not support "Hyper Terminal". For Windows
    Vista, set by using a software program which supports Windows
    Vista. (Follow the settings of the software program you use.)



## Set an Access Point Name (APN)

The operation below explains how to set an access point name (APN) for packet communication. You can register up to 10 access point names (APNs), which are managed with cid1 to cid10.

When using "mopera U" or "mopera", you do not need to set the access point name (APN).

The operation below is the example where you use "XXX.abc" as the access point name (APN) and use the FOMA USB Cable with Charge Function 01 (option). For the actual access point name (APN), contact your Internet service provider or network administrator. The setting here will be the access point number for dial-up network setting (see page 43).

### Set Caller ID Notified/Not Notified

For packet communication, you can specify whether to notify your caller ID (caller ID notified/not notified). The caller ID is your important information; so, take a great care to notify your caller ID. You can use AT commands (\*DGPIR command) to specify "caller ID notified/not notified" before dial-up connection.

### Set Dial-up Network

- 4 "
  (スタート (Start)]"
  - ▶ "接続先 (Access point)"
  - ▶ Click "接続またはネットワークをセットアップします (Setup the connection or network)".
- Select "ダイヤルアップ接続をセットアップします (Setup the dial-up connection)", then click "次へ (Next)".



- If the display for selecting a modem appears, click "FOMA P705i $\mu$ " or "PROSOLID  $\mu$ ".
  - The display for selecting a modem appears only when you have registered two or more modems.
- Enter any name in the "接続名 (Connection name)" field.
  - · Here, "SAMPLE" is entered as an example.



- 5 Enter an access point number in the "ダイヤル アップの電話番号 (Phone number for dial-up)" field.
  - When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.
- Enter the user name and password supplied from your Internet service provider or network administrator in the "ユーザー名 (User name)" and "パスワード (Password)" fields. Then click "接続 (Connect)"
  - ► Click "スキップ (Skip)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
  - Only confirm the setting contents without connecting here.
- **7** Click "接続をセットアップします (Setup the connection)" ▶ Click "閉じる (Close)".
- 8 "[スタート (Start)]" → "接続先 (Access point)" ➤ Highlight the access point which is finished with connection, and select "プロパティ (Property)" after the right click.

## Glick the "全般 (General)" tab to confirm the setting contents.

When two or more modems are connected to your personal computer, confirm that "モデム (Modem) - FOMA P705i $\mu$ " or "モデム (Modem) - PROSOLID  $\mu$ " is checked in the "接続方法 (Connection method)" field. If it is not checked, check it. If two or more modems are checked, click the  $\blacksquare$  button to position the priority level of "モデム (Modem) - FOMA P705i $\mu$ " or "モデム (Modem) - PROSOLID  $\mu$ " to the top or uncheck modems other than "モデム (Modem) - FOMA P705i $\mu$ " or "モデム (Modem) - PROSOLID  $\mu$ ".

When "ダイヤル情報を使う (Use dial information)" is checked, uncheck it.

- ullet The COM port number allocated to "FOMA P705i  $\mu$ " or "PROSOLID  $\mu$ " varies depending on the personal computer you use.
- When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.



# Tick the "ネットワーク (Network)" tab, then carry out respective settings.

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル バージョン4 (TCP/IPv4) [Internet protocol version 4 (TCP/IPv4)]". You can set the "QoS パケットスケジューラ (QoS packet scheduler)" if necessary.

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.



11 Click the "オプション (Option)" tab, then click "PPP設定 (PPP settings)". 19 Uncheck all the items, then click "OK".



Return to the display in step 10, then click

### **Making Dial-up Connection**

Perform the operation on page 4 to connect the FOMA phone to your personal computer.

- " (スタート (Start)]" > Open "接続先 (Access point)".
- Select access point and click "接続 (Connect)".



- **Q** Confirm the contents and click "ダイヤル (Dial)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



## ス After the connection is completed, click "閉じる (Close)".

 You can start the browser software to browse web pages, use e-mail and so on.



#### Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.
- " 

  " (Communicating, data sending)

  " 

  " (Communicating, data receiving)
- " (Communicating, no data sending/receiving)
- "| i'v " (Outgoing or being disconnected)
- " is " (Incoming or being disconnected)
- During 64K data communication, " prapears on the FOMA phone.



### Disconnecting

Click the dial-up icon on the task tray.



2 Select "接続または切断 (Connect or disconnect)", then click "切断 (Disconnect)" ▶ Click "閉じる (Close)".

#### Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

### When you cannot connect to network

If you cannot connect to network (if you fail a dial-up connection), confirm the following items:

If this error occurs	Confirm those:
Your personal	· Confirm whether your personal computer satisfies
computer cannot	the operating environment (see page 2).
recognize "FOMA	· Confirm whether "FOMA communication setup
P705i $\mu$ " or	files" (driver) is installed in your personal computer.
"PROSOLID μ"	· Confirm whether the FOMA phone is connected to
	your personal computer and powered on.
	· Confirm whether the FOMA USB Cable with
	Charge Function 01 (option) is securely connected.
You cannot connect	· Confirm whether the ID (user name) and password
to the access point	are correct.
	· When you need to notify your caller ID such as
	when using "mopera U" or "mopera", make sure
	"184" is not prefixed to the phone number.
	・Confirm that "フロー制御を使う (Use the flow
	control)" is checked in the modem properties.
	· If you cannot connect to the access point even
	after confirming above, contact your Internet
	service provider or network administrator for the
	setting method, and so on.

### Set 64K Data Communication

The operation below explains how to set the 64K data communication without using "FOMA PC setup software".

### Setting dial-up connection and TCP/IP

The setting of dial-up connection and TCP/IP for the 64K data communication is the same as for the packet communication (see page 42).

Take care of the following points:

- In the 64K data communication, you do not need to set an access point name (APN). For the access point of the dial-up connection, enter the phone number of the access point specified by your Internet service provider or network administrator. (To connect to "mopera U", enter "\*8701" in the phone number field. To connect to "mopera", enter "\*9601" in the phone number field.)
- Set "caller ID notified/not notified" and "others" as required.
   (When connecting to "mopera U" or "mopera", you need to notify your caller ID.)
- Contact your Internet service provider or network administrator for details on the setting contents.

#### **Connecting and Disconnecting**

You can operate in the same way as for the packet communication. Perform the operations on page 40 or page 44.

## Using FirstPass PC Software

The FirstPass PC software is to access the FirstPass site from the web browser of your personal computer using the user certificate obtained by the FOMA phone supporting FirstPass.

## Notes for Installing FirstPass PC Software

### Confirm the operating environment

Use the FirstPass PC software under the following operating environment:

Item	Required environment
PC main unit	PC/AT compatible model
OS	Windows Vista (Japanese version)
Memory requirements	512 Mbytes or more*
Hard disk space size	Unused memory space of 10 Mbytes or more*
Browser	Microsoft® Internet Explorer 7.0 or higher

<sup>\*\*</sup>The memory requirements and hard disk space size may vary depending on the system environment.

#### Before installing

See "FirstPassManual" (PDF format) in the "FirstPassPCSoft" folder of the CD-ROM before installing the FirstPass PC software.

#### Install FirstPass PC Software

The displays are slightly different depending on the personal computer you use.

- Set the provided "FOMA P705i  $\mu$ /PROSOLID  $\mu$  CD-ROM" into your personal computer.
- To install the FirstPass PC software, click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".



3 Click "インストール (Install)" under "FirstPass PCソフト (FirstPass PC software)".

Then, perform the operations described in "簡易操作マニュアル (Easy operation manual)" (PDF format).



When you click "インストール (Install)", an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

 When the "ファイルのダウンロード ー セキュリティの警告 (File download - Security alert)" window appears: Click "実行 (Execute)".



●When the "Internet Explorer ー セキュリティの警告 (Internet Explorer - Security alert)" window appears: Click "実行する (Execute)".



## **Using AT Command**

#### **AT Command**

AT commands are used to specify and modify the functions of the FOMA phone on the personal computer. \*\*The following abbreviations are used in the AT command list:

- % The following abbreviations are used in the AT command list: [AT]: Commands which are available at the FOMA P705i  $\mu$
- Command Port or PROSOLID  $\mu$  Command Port. [M]: Commands which are available in the FOMA P705i  $\mu$ (modem) or PROSOLID  $\mu$  (modem).
- [&F]: Commands whose settings are initialized by the AT&F
- [&W]: Commands whose settings are saved by the AT&W command. The set value can be recalled by the ATZ command.

 
#### Information

 When you make a call from an external device or make an AT command call, the call is made from Number A in A Mode or Dual Mode of 2in1, and the call is made from Number B in B Mode of 2in1.

### **Entry Format of AT Command**

To enter an AT command, use the terminal mode display of the communication software. Be sure to enter half-pitch alphanumeric characters.

Entry example



 You need to enter an AT command on one line, including a parameter (digits and symbols) which follows the command.

#### Information

 The terminal mode enables you to operate a personal computer as one communication terminal. Using this mode, you can send characters you have entered from the keyboard to a line connected to the communication port.

## Switch between Online Data Mode and Online Command Mode

There are following two methods of switching the FOMA phone between the online data mode and online command mode:

- · Enter the "+++" command or enter the code specified in the "S2" register.
- · Set the ER signal of the RS-232C\*\* off when "AT&D1" is set
- To switch the online command mode to the online data mode, enter "ATO []".
- \*\*The RS-232C signal line, which is emulated via the USB interface, is controlled by a communication application.

#### ■Saving the setting contents

Please be careful that the setting contents with AT commands are initialized when the FOMA phone is turned off and on or the external device is removed, except for the access point name (APN) setting with the AT+CGDCONT command, QoS setting with the AT+CGEQMIN or AT+CGEQREQ command, incoming call acceptance/rejection setting with the AT\*DGAPL, AT\*DGARL, or AT\*DGANSM command, phone number notification/no notification setting (for packet communication) with the AT\*DGPIR command and caller ID notification restriction setting with the AT+CLIR command. For commands with [&W], you can enter "AT&W \[ \] " (after setting) to save the setting contents and other set values with [&W] at the same time. If necessary, you can restore these set values by entering in "ATZ \[ \] " even after the power is turned off and on.

# AT Command List

AT command	Outline	Parameter/Explanation	Command execution
		Farameter/Explanation	example
A/	Re-executes the last executed	_	Α/
n n	command. No carriage return is		ОК
[M] AT%V	required.		AT%V
A1%V	Displays the version of the FOMA phone.	_	Ver1.00
[M]	FOMA phone.		OK
AT&Cn	Selects the operating conditions	n=0: CD is always ON.	AT&C1
[M]	of the circuit CD signal sent to	n=1: CD varies according to the carrier of the other	OK
[&F][&W]	the DTE.	party's modem. (default)	
AT&Dn	Selects an operation to be	n=0: Ignores the ER status. (Always assumed to be	AT&D1
	performed when the circuit ER	ON.)	ок
	signal received from the DTE	n=1: Sets the online command state when the ER	
	transits from ON to OFF.	changes from ON to OFF.	
[M]		n=2: Sets the offline command state when the ER	
[&F][&W]		changes from ON to OFF. (default)	
AT&En	Selects the speed display	n=0: Displays communication speed between radio	AT&E0
	specification for connection.	wave blocks.	OK
[M]		n=1: Displays DTE serial communication speed.	
[&F][&W] AT&Fn	Returns all registers to the	(default) Only n=0 is specifiable. (Can be omitted)	
AT&FN	default. Performs line	Only n=0 is specifiable. (Can be offitted)	_
	disconnection processing if you		
	enter this command during		
[AT][M]	communication.		
AT&Sn	Specifies the control of the data	n=0: DR is always ON. (default)	AT&S0
[M]	set ready signal to be output to	n=1: DR is set to ON at connection of the line (at	ок
[&F][&W]	the DTE.	establishment of a communication call).	
AT&Wn	Stores the current set values.	Only n=0 is specifiable. (Can be omitted)	-
[M]			
AT*DANTE	Shows the number of antenna	=0: Antenna shows the out of the service area	AT*DANTE
	bars. (0 to 3)	=1: Zero antenna bars or a single antenna bar	*DANTE:3
		=2: Two antenna bars	OK
		=3: Three antenna bars	AT*DANTE=?
[ A T1[ A1			*DANTE:(0-3)
[AT][M] AT*DGANSM=n	Coto the arrivat/array to atting	. 0.	OK AT∗DGANSM=0
AT*DGANSM=n	Sets the reject/accept setting	n=0: Invalidates the incoming call reject/accept setting. (default)	OK
	mode for the packet incoming call.	n=1: Validates the incoming call reject setting	OK AT*DGANSM?
	The setting with this command is	(AT*DGARL).	*DGANSM:0
	valid for incoming calls in packet	n=2: Validates the incoming call accept setting	OK
	communication after you enter	(AT*DGAPL).	
[M]	the setting command.	AT*DGANSM?: Displays the current setting.	
AT*DGAPL=n	Sets the APN of which packet	n=0: Adds the APN defined by <cid> to the incoming call</cid>	AT*DGAPL=0,1
[,cid]	incoming call is to be accepted.	accept list.	ок
	To specify the APN, use the	n=1: Deletes the APN defined by <cid> from the</cid>	AT*DGAPL?
	<cid> parameter defined in</cid>	incoming call accept list.	*DGAPL:1
	AT+CGDCONT.		ок
		Applied to all the cid contents if <cid> is omitted.</cid>	AT*DGAPL=1
			ок
		AT*DGAPL?: Displays the incoming call accept list.	AT*DGAPL?
[M]	Out the ADM of the	O A LL III ADNI I C. III  OK	
AT*DGARL=n	Sets the APN of which packet	,	
[,cid]	incoming call is to be rejected.	reject list.	OK AT∗DGARL?
	To specify the APN, use the <cid> parameter defined in</cid>	n=1: Deletes the APN defined by <cid> from the</cid>	*DGARL? *DGARL:1
	+CGDCONT.	incoming call reject list.	*DGARL:1 OK
	+GGDCONT.	Applied to all the cid contents if <cid> is omitted.</cid>	AT*DGARL=1
		Applied to all the cid contents it <cid> is offlitted.</cid>	OK
		AT*DGARL?: Displays the incoming call reject list.	AT*DGARL?
[M]		Transport Let. Displays the incoming can reject list.	OK
11			Jo.,

47	0.415	Barranto (Frankrika)	Command execution
AT command	Outline	Parameter/Explanation	example
AT*DGPIR=n		n=0: Uses the APN as it is. (default)	AT*DGPIR=0
	receiving calls.	n=1: Adds "184" to the APN. (always not notify)	ок
	In the dial-up network setting,	n=2: Adds "186" to the APN. (always notify)	AT*DGPIR?
	you can add "186" (notify) or	AT*DGPIR?: Displays the current setting.	*DGPIR:0
	"184" (not notify) to the phone		ОК
	number of the access point.		
[M]	(See page 23 or page 43)		
AT*DRPW	Displays the output power index	-	AT*DRPW
	for receiving.		*DRPW:0
	(0: minimum value to 75:		ок
[AT][M]	maximum value)		
+++	Changes to the online command	-	_
	state without disconnecting the		
	line when the escape sequence		
[M]	is executed in the online mode.		
AT+CAOC	Displays the charging	Result: +CAOC:"n"	AT+CAOC
	information for now or latest call.	n: Displays the charging information in a hexadecimal	+CAOC:"00001E"
[M]		number.	ок
AT+CBC	Displays the battery level.	Result: +CBC:n,m	AT+CBC
		n=0: FOMA phone is powered by the battery.	+CBC:0,80
		n=1: During charging	ок
		n=2: The battery is not connected.	
		n=3: Power-supply error	
[M]		m=0~100: Battery level	
AT+CBST=n,1,0	Sets the bearer service to be	n=116: 64000 bps (bit transparent) (default)	AT+CBST=116,1,0
A1+0001-11,1,0	used.	n=134: 64000 bps (multimedia)	OK
	useu.	11-154. 04000 bps (maintedia)	AT+CBST?
[M]			+CBST:116.1.0
			OK
[&W][&F] AT+CDIP=n	Sets whether to display	n=0: Does not display "Received sub-address" when	AT+CDIP=0
AT+CDIP=N	' '	1	OK
	"Received sub-address" on your	you receive a call. (default)	7
	personal computer when you	n=1: Displays "Received sub-address" when you	AT+CDIP?
	receive a call.	receive a call.	+CDIP:0,1
		Result: +CDIP: <n>,<m></m></n>	OK
		m=0: Not signed up for Multi Number	
[M][AT]		m=1: Signed up for Multi Number	
[&F][&W]		m=2: Unknown	
AT+CEER	Displays the reason why the	<report></report>	AT+CEER
	preceding call was disconnected.	Disconnection reason list (See page 56)	+CEER:36
[M]			ок
AT+CGDCONT	Sets the access point name	See page 55.	See page 55.
	(APN) for when dialing for packet		
[M]	communication.		<u> </u>
AT+CGEQMIN	Registers the reference value to	AT+CGEQMIN=[parameter]	See page 55.
	judge whether the system	See page 55.	
	permits QoS (Quality of service)	AT+CGEQMIN=?	
	reported from the network at	Lists the settable values.	
	establishment of the packet	AT+CGEQMIN?	
[M]	communication.	Displays the current setting.	
AT+CGEQREQ	Sets QoS (Quality of service) to	AT+CGEQREQ=[parameter]	See page 55.
	be requested to the network at	See page 55.	1
	dialing of the packet	AT+CGEQREQ=?	
	communication.	Lists the settable values.	
		AT+CGEQREQ?	
[M]		Displays the current setting.	
AT+CGMR	Displays the version of the	=	AT+CGMR
	FOMA phone.		1234512345123456
[M]	. 2 p		OK
i			···

	2		Command execution
AT command	Outline	Parameter/Explanation	example
AT+CGREG=n	Sets whether the network	n=0: Not notified. (default)	AT+CGREG=1
	registration state is notified.	n=1: Notified at switching between the inside and	ОК
	Displays whether you are inside	outside of the service area.	(set to "Notified")
	or outside the service area	(Inquiry)	AT+CGREG?
	according to the returned	AT+CGREG?	+CGREG:1,0
	notification.	+CGREG: <n>,<stat></stat></n>	ОК
		n: Set value	(means the outside of the service
		stat:	area)
		0: Outside packet area	
		1: Inside packet area	(when moved from the outside to
[M]		4: Unknown	the inside of the service area)
[&F][&W]		5: Inside packet area (during roaming)	+CGREG: 1
AT+CGSN	Displays the serial number of the	_	AT+CGSN
	FOMA phone.		123456789012345
[M]			ок
AT+CLIP=n	Enables to display the other	n=0: Does not notify. (default)	AT+CLIP=0
	party's caller ID on the personal	n=1: Notifies.	ок
	computer at reception of 64K		AT+CLIP?
	data communication or	Result: +CLIP: <n>,<m></m></n>	+CLIP:0,1
	videophone calls.	m=0: NW setting not to notify caller ID at calling	ок
[AT][M]		m=1: NW setting to notify caller ID at calling	
[&F][&W]		m=2: Unknown	
AT+CLIR=n	Sets whether to notify your	n=0: Notifies (does not notify) caller ID according to	AT+CLIR=0
	phone number to do 64K data	CLIR service.	ок
	communication or to make	n=1: Does not notify the other party of your caller ID.	AT+CLIR?
	videophone calls.	n=2: Notifies the other party of your caller ID. (default)	+CLIR:0,1
		Result: +CLIR: <n>,<m></m></n>	ок
		m=0: CLIR is not launched. (always notify)	AT+CLIR=?
		m=1: CLIR is launched. (always not notify)	+CLIR:(0-2)
		m=2: Unknown	ок
		m=3: CLIR temporary mode (not notify, default)	
[M]		m=4: CLIR temporary mode (notify, default)	
AT+CMEE=n	Sets how the FOMA phone	n=0: Uses the ordinary ERROR result. (default)	AT+CMEE=0
	shows an error report.	n=1: +CME ERROR: Uses the <err> result code. <err></err></err>	ок
		indicates a numeric value.	AT+CNUM
		n=2: +CME ERROR: Uses the <err> result code. <err></err></err>	ERROR
		indicates characters.	AT+CMEE=1
		AT+CMEE?: Displays the current setting.	ок
		Command execution examples on the right are for when	
		the FOMA phone or connection has abnormality.	+CME ERROR: 10
		Below listed are the +CME ERROR result codes.	AT+CMEE=2
		1: no connection to phone	OK
		10: SIM not inserted	AT+CNUM
		15: SIM wrong	+CME ERROR: SIM
[M]		16: incorrect password	not inserted
[&F][&W]		100: unknown	
AT+CNUM	Displays the own phone number	number: Phone number (In B Mode of 2in1, Number B	AT+CNUM
	of the FOMA phone.	is displayed.)	+CNUM:,"+8190123
	S. GIO I OMIT PHONE.	type: 129 or 145	45678",145
		129: Does not include the IDD prefix code (+).	OK
		145: Includes the IDD prefix code (+).	
[AT][M]		Result: +CNUM:, <number>,<type></type></number>	
[, , , ][ini]	1	riodan. Polyowi, Shumberz, Stypez	1

AT command	Outline	Parameter/Explanation	Command execution
		·	example
AT+COPS=n,2,m	Selects the carrier to be	n=0: Automatic (searches the network and switches the	
	connected.	network operator automatically) (default)	OK
		n=1: Manual (connects to the network operator	
		specified in "m")	
		n=2: Disconnects the connection to the network operator	
		n=3: Mapping is not performed.	
		n=4: Manual/Automatic (if the connection to the network	
		operator specified in "m" fails, works as automatic	
		mode.)	
		m: Country code (MCC) and operator code (MNC) are	
		displayed in a hexadecimal number.	
		The format is as follows:	
		Digit 1 of MCC · · · octet 1 bits 1 to 4.	
		Digit 2 of MCC · · · octet 1 bits 5 to 8.	
		Digit 3 of MCC · · · octet 2 bits 1 to 4.	
		Digit 3 of MNC · · · octet 2 bits 5 to 8.	
ra en		Digit 2 of MNC · · · octet 3 bits 5 to 8.	
[M] AT+CPAS	Displays whether to send the	Digit 1 of MNC · · · octet 3 bits 1 to 4.  Result: +CPAS:n	AT+CPAS
ATTORAG	control signals to the FOMA	n=0: Can send/receive control signals to/from the	+CPAS:0
	phone.	FOMA phone.	OK
	priorie.	n=1: Cannot send/receive control signals to/from the	OI C
		FOMA phone.	
		n=2: Unknown (control signal sending/receiving is not	
		assured).	
		n=3: Can send/receive control signals to/from the	
		FOMA phone, and currently receiving.	
		n=4: Can send/receive control signals to/from the	
[M]		FOMA phone, and currently communicating.	
AT+CPIN=n,m	Enters the UIM password (PIN1		AT+CPIN="1234"
	or PIN2).	or PIN2 code n: PIN1/PIN2	OK AT. CDIN. #10245679# #1024#
		When the UIM is in a state waiting for the entry of PUK	AT+CPIN="12345678","1234" OK
		due to failure in unblocking PIN1 or PIN2 code	AT+CPIN?
		n: PUK	+CPIN:SIM PIN
		m: New PIN1 or PIN2	OK
		AT+CPIN?: Displays the state of code entry requested	
		about current SIM.	
		Result: +CPIN: <state></state>	
		<state>=READY: Code entry not requested</state>	
		<state>=SIM PIN: PIN1 code entry waited</state>	
		<state>=SIM PIN2: PIN2 code entry waited</state>	
		<state>=SIM PUK: PUK entry waited due to failure in</state>	
		unblocking PIN1 code	
[M][AT]		<state>=SIM PUK2: PUK entry waited due to failure in unblocking PIN2 code</state>	
AT+CR=n	Displays the bearer service type	n=0: Does not display. (default)	AT+CR=1
	before the CONNECT result	n=1: Displays.	OK
	code appears at connection of	<serv>: Displays only "GPRS" that means packet</serv>	ATD*99***1#
	the line.	communication.	+CR: GPRS
		(Displays "SYNC", "AV32K", or "AV64K",	CONNECT
[M]		depending on the line type.)	
[&F][&W]		AT+CR?: Displays the current set value.	
AT+CRC=n		n=0: Does not use +CRING. (default)	AT+CRC=0
	code is used at reception.	n=1: Uses +CRING. <type>.</type>	OK AT. OBGG
		AT+CRC?: Displays the current setting.	AT+CRC?
		The +CRING format is as follows:	+CRC: 0 OK
[M][TA]		+CRING: <type> During PPP packet ringing</type>	UK .
[AT][M] [&F][&W]		+CRING: GPRS "PPP",,, <apn></apn>	
[~. 1[~]	1	TOTAL OF HOTH HIS ALLEY	L

AT command	Outline	Parameter/Explanation	Command execution
	Guine	T drameten/Explanation	example
AT+CREG=n	Sets whether the result is	n=0: Not notified. (default)	AT+CREG=1
	displayed about the inside and	n=1: Notified at switching between the inside and	ОК
	outside of the service area.	outside of the service area.	(set to "Notified")
		(Inquiry)	AT+CREG?
		AT+CREG?	+CREG: 1,0
		+CREG: <n>,<stat></stat></n>	OK
		n: Set value	(means the outside of the service
		stat:	area)
		0: Outside voice call area	
		1: Inside voice call area	(when moved from the outside to
[AT][M]		4: Unknown	the inside of the service area)
[&F][&W]		5: Inside voice call area (during roaming)	+CREG: 1
AT+CUSD=n," <str>",0</str>	Sets or checks the additional	n=0: Does not display mid result. (default)	AT+CUSD=0,
	service for network.	n=1: Displays mid result.	OK
		<str>: Service code</str>	AT+CUSD=1,"*148*1*0000#",0
		Mid result: m," <str>",0</str>	+CUSD:0,"148*7#",0
[M]		m=0: Shows the setting is completed.	ОК
[&F][&W]		m=1: Shows the network requires the information.	
AT+FCLASS=n	Sets communication class	n=0: Data communication (default)	AT+FCLASS=0
	in the FOMA phone.		ОК
[M]			
[&F][&W]			
AT+GCAP	Displays the AT command	Result +GCAP: n	AT+GCAP
	supported by FOMA phone.	n=+CGSM: Some or all GSM commands are supported	+GCAP:+CGSM,+FCLASS,+W
		n=+FCLASS: +FCLASS command is supported.	ОК
[M]		n=+W: +W command is supported.	
AT+GMI	Displays the manufacturer name	_	AT+GMI
	(Panasonic).		Panasonic
[M]	, ,		ОК
AT+GMM	Displays the product name (FOMA	_	AT+GMM
	P705imyu or P705iCL) of the		FOMA P705imyu or P705iCL
[M]	FOMA phone.		ОК
AT+GMR	Displays the version of the	_	AT+GMR
	FOMA phone.		Ver1.00
[M]	·		ок
AT+IFC=n,m	Selects the flow control method.	n: DCE by DTE	AT+IFC=2,2
		m: DTE by DCE	ок
		0: No flow control	
		1: XON/XOFF flow control	
		2: RS/CS (RTS/CTS) flow control	
[M]		Default: n, m = 2.2	
[&F][&W]		AT+IFC?: Inquires the set value.	
AT+WS46=n	Selects the wireless	Returns "ERROR" for the mode setting because the	AT+WS46=22
	communication network of the	wireless communication network is not selected on the	ERROR
	FOMA phone.	FOMA phone by this command.	AT+WS46?
		n=12: GSM/GPRS	25
[M]		n=22: W-CDMA (Wideband CDMA)	ок
[&F][&W]		n=25: Automatic	
ATA	Performs the receiving process in	_	RING
]	the mode when the FOMA phone		ATA
[M]	received the incoming call.		CONNECT
ATD	Performs the automatic outgoing	<cid>: 1 to 10</cid>	ATD*99***1#
	process to the FOMA phone	Displays the APN defined by +CGDCONT.	CONNECT
	according to the contents	When calling cid1, you can omit the phone number like	1
	specified in the parameter and	"ATD*99***#."	
[M]	dial parameter.		
ATEn	Sets whether echo-back is	n=0: Issues no echo-back.	ATE1
[M]	issued to the DTE in the	n=1: Issues echo-back. (default)	OK
[&F][&W]	command mode.	11-1. Ioodeo Joho-baok. (deladit)	
ATHn		n=0: Disconnects the line. (can be omitted)	(During packet communication)
7 T T T T T T T T T T T T T T T T T T T	on-hook state.	11-0. Disconnects the line. (can be offitted)	(During packet communication)
	OITTIOUR SIAIG.		ATH
ran			NO CARRIER
[M]			INO CANNIEN

AT command	Outline	Parameter/Explanation	Command execution
			example
ATIn	Displays the ID code.	n=0: Displays "NTT DoCoMo".	ATI0
		n=1: Displays the product name. (same as +GMM)	NTT DoCoMo
		n=2: Displays the version of the FOMA phone. (same as	OK
		+GMR)	ATI1
		n=3: Displays ACMP information element. n=4: Displays the details of the function available for	FOMA P705imyu or P705iCL OK
[AT][M]		communication on the FOMA phone.	OK .
ATOn	Returns from the online command	n=0: Returns from the online command mode to the	ATO
711011	mode to the online data mode	online data mode. (can be omitted)	CONNECT
[M]	during communication.	(,	
ATQn	Sets whether the result code is to	n=0: Displays the result code. (default)	ATQ0
	be displayed for the DTE.	n=1: Does not display the result code.	ок
			ATQ1
[M]			("OK" is not returned at this
[&F][&W]			time.)
ATS0=n	Sets the number of rings	n=0: Does not automatically receive an incoming call.	ATS0=0
	required until the FOMA phone	(default)	ок
	automatically receives an	n=1 to 255: Automatically receives an incoming call with	ATS0?
	incoming call.	the specified number of rings.	000
		(when n≥10, does not automatically receive a packet	OK
		(PPP) incoming call, then the line is disconnected after	
[M]		about 30 seconds.)	
[&F][&W]		ATS0?: Inquires the set value.	
ATS2=n	Sets the escape character.	n=43: Default	ATS2=43
		n=127: Makes escape processing invalid.	OK
			ATS2?
[M]		ATS2?: Inquires the set value.	043
[&F]			OK
ATS3=n	Sets the carriage return (CR)	n=13: Default (n=13 only specifiable)	ATS3=13
	character.	ATOM I will be a live of the l	OK
ram.		ATS3?: Inquires the set value.	ATS3? 013
[M] [&F]			OK
ATS4=n	Sets the line feed (LF) character	n=10: Default (n=10 only specifiable)	ATS4=10
71104=11	octo the line leed (Er ) character.	in-10. Beladit (in-10 only opcollable)	OK
		ATS4?: Inquires the set value.	ATS4?
[M]			010
[&F]			OK
ATS5=n	Sets the back space (BS)	n=8: Default (n=8 only specifiable)	ATS5=8
	character.		ок
		ATS5?: Inquires the set value.	ATS5?
[M]			008
[&F]			ок
ATS30=n	Sets the inactive timer (minute).	n=0 to 255 (default=0) (unit: minute)	ATS30=0
	When no user data is sent or		ок
	received, the connection is cut		
	after the set time has elapsed.		
	This command is for only 64K data		
	communication. When 0 is set, the		
[M][&F]	inactive timer turns to OFF.		
ATS103=n	Selects characters to pause for	n=0: *(asterisk)	ATS103=0
71 F7 6 F7	incoming sub-address.	n=1: / (slash) (default)	OK
[M][&F]		n=2: ¥ or back slash	AT0404 0
ATS104=n	Selects characters to pause for	n=0: # (sharp)	ATS104=0
IMITS ET	outgoing sub-address.	n=1: % (percentage) (default)	OK
[M][&F] ATVn	Sets all the result codes in the	n=2: & (and) n=0: Returns the result code in a numeric value.	ATV1
[M]	numeric or alphabetical notation.	n=1: Returns the result code in a humeric value.	OK
[W] [&F][&W]		(default)	
ATXn	Sets whether to display the	n=0: Dial tone not detected; busy tone not detected;	ATX1
	speed in the CONNECT display	speed not displayed.	OK
	at connection.	n=1: Dial tone not detected; busy tone not detected;	
	Detects busy tone and dial tone.	speed displayed.	
		n=2: Dial tone detected; busy tone not detected; speed	
		displayed.	
		n=3: Dial tone not detected; busy tone detected; speed	
L_		displayed.	
ITA AT	Í.	In 4: Dial tone detected, busy tone detected, anead	1
[M] [&F][&W]		n=4: Dial tone detected; busy tone detected; speed displayed. (default)	

AT command	Outline	Parameter/Explanation	Command execution
AT command	Outline	Parameter/Explanation	example
ATZ	Resets the setting to the	_	(In online)
	contents of the nonvolatile		ATZ
	memory. If this command is		NO CARRIER
	entered during communication,		(In offline)
	the line is disconnected.		ATZ
[M]			OK
AT¥S	Displays the contents of the each	_	AT¥S
	command and S register		E1 Q0 V1 X4 &C1
	currently set.		&D2 &S0 &E1 ¥V0
			S000=000
			S002=043
			S003=013
			S004=010
			S005=008
			S006=005
			S007=060
			S008=003
			S010=001
			S030=000
			S103=000
			S104=000
[M]			ОК
AT¥Vn	Selects the response code	n=0: Does not use the extended result code. (default)	AT¥V0
[M]	specifications at connection.	n=1: Uses the extended result code.	ок
[&F][&W]			

\*The following commands do not result in an error even if specified; however, they do not function as commands.

- · AT (AT only entered.)
- · ATP (Pulse setting)
- · ATS8 (Setting the pause time by comma dialing)
- · ATT (Tone setting)
- · ATS6 (Setting the pause time taken for dialing)
- · ATS10 (Setting the automatic disconnection delay time)

# Supplementary Explanation of AT Commands

· Command name:

+CGDCONT

[M]

Outline

This command sets an access point name (APN) for when dialing for nacket communication

+CGDCONT=[<cid>[,"<PDP\_type>"[,"<APN>"]]]

Explanation of parameters

You set an access point name (APN) for when dialing for packet

See the example below for command instructions.

<cid>%: 1 to 10

<PDP\_type>: PPP or IP

<APN>%: Arbitrary

\*<cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA phone. You can register 1 to 10 in the FOMA phone. "mopera.ne.jp" is registered to <cid>=1, and "mopera.net" is registered to <cid>=3, each at purchase, so register 2 or 4 through 10.

<APN> indicates any character string for each access point name.

· Operation at omission of parameters

: Sets all the <cid> contents to the default. +CGDCONT= +CGDCONT=<cid> : Sets the specified <cid> to the default. +CGDCONT=? : Lists the specifiable values. +CGDCONT? : Displays the current setting.

· Command execution example AT+CGDCONT=2,"PPP","abc"

The command used to register an APN name, abc (cid=2)

\*This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either

+CGEQMIN=[parameter] Command name:

This command registers the reference value to judge whether the system permits QoS (Quality of service) reported from the network at establishment of the packet communication.

You can specify four setting patterns described in the command execution example below.

Outline

+CGEQMIN=[<cid>[,,<Maximum bitrateUL>[,<Maximum bitrate DL>]]]

· Explanation of parameters

: 1 to 10

<Maximum bitrate UL>\* : None (default) or 384 <Maximum bitrate DI > \* : None (default) or 3648 \*<cid> is a number used to manage an access point name (APN) for

packet communication, which is registered in the FOMA phone. You can register 1 to 10 in the FOMA phone. "mopera.ne.jp" is registered to <cid>=1 and "mopera.net" is registered to <cid>=3, each at purchase, so register 2 or 4 through 10.

<Maximum bitrate UL> and <Maximum bitrate DL> are used to specify the minimum baud rates (kbps) for upload and download between the FOMA phone and base station. "None" (default) accepts all baud rates; however, 384 and 3648 do not accept a baud rate other than 384 kbps and 3648 kbps. If you specify 384 and 3648, you may not establish packet communication.

Operation at omission of parameters

+CGEQMIN= : Sets all the <cid> contents to the default. +CGEQMIN=<cid> : Sets the specified <cid> to the default.

Command execution example

You can specify only the following four setting patterns:

(The setting in (1) is defined in each cid as the default.)

(1)Command that accepts all the baud rates for both upload and download (cid=2)

AT+CGEQMIN=2

(2)Command that accepts 384 kbps for upload and 3648 kbps for download (cid=3)

AT+CGEQMIN=3,,384,3648

ΟK

(3)Command that accepts 384 kbps for upload and all baud rates for download (cid=4)

AT+CGEQMIN=4..384

ΟK

(4)Command that accepts all baud rates for upload and 3648 kbps for download (cid=5)

AT+CGEQMIN=5,,,3648

ΟK

\*This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

• Command name: +CGEQREQ=[parameter] [M]

Outline

This command sets QoS (Quality of service) to be requested to the network at dialing of the packet communication.

You can specify only one setting pattern described in the command execution example below, which is set as the default,

Format

+CGEQREQ=[<cid>]

Explanation of parameter

<cid>is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA phone.

You can register 1 to 10 in the FOMA phone. "mopera.ne.jp" is registered to <cid>=1 and "mopera.net" is registered to <cid>=3, each at purchase, so register 2 or 4 through 10.

Operation at omission of parameter

+CGEOREO= : Sets all the <cid> contents to the default. +CGEQREQ=<cid> : Sets the specified <cid> to the default.

Command execution example

You can specify only the following one pattern:

(This setting is defined in each cid as the default.)

(1)Command that requests a connection at 384 kbps for upload and 3648 kbps for download (cid=3)

AT+CGEQREQ=3

OK

\*This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

Command name: +CLIP

Outline

The result for "AT+CLIP=1" is displayed in the following format:

+CLIP: <number> <type>

· Command execution example

AT+CLIP=1

OK

RING

+CLIP: "09012345678",49

## Disconnection Reason List

#### 64K Data Communication

Value	Reason
1	The specified number does not exist.
16	The line was normally disconnected.
17	Cannot communicate because the other party is communicating.
18	Dialed but no response has come in within the specified duration.
19	Cannot communicate because the other party is dialing.
21	The other party rejected to receive the call.
63	The network service and options are not valid.
65	The specified transmission performance is not provided.
88	Dialed to or received the call from the phone with different properties.

#### ■ Packet Communication

Value	Reason
27	No APN was found; or an invalid APN was specified.
30	The line was disconnected from the network.
33	You have not applied for the service option you requested.
36	The line was normally disconnected.

#### Result Codes

#### Result Code List

Numeric notation	Character notation	Meaning
0	OK	Processing has been executed normally.
1	CONNECT	The line has been connected to the other party.
2	RING	An incoming call has arrived.
3	NO CARRIER	The line has been disconnected.
4	ERROR	The system can receive no command.
6	NO DIALTONE	The system can detect no dial tone.
7	BUSY	The system is detecting the busy tone.
8	NO ANSWER	The connection completed; timeout
100	RESTRICTION	The network is restricted.
101	DELAYED	Within restricted redialing time

#### ■Extended Result Code List

For &EC

Connection speed between the FOMA phone and the base station is displayed.

Numeric notation	Character notation	Connection speed
121	CONNECT 32000	32,000bps
122	CONNECT 64000	64,000bps
125	CONNECT 384000	384,000bps
133	CONNECT 3648000	3,648,000bps

For &E1

Numeric notation	Character notation	Connection speed
5	CONNECT 1200	1,200bps
10	CONNECT 2400	2,400bps
11	CONNECT 4800	4,800bps
13	CONNECT 7200	7,200bps
12	CONNECT 9600	9,600bps
15	CONNECT 14400	14,400bps
16	CONNECT 19200	19,200bps
17	CONNECT 38400	38,400bps
18	CONNECT 57600	57,600bps
19	CONNECT 115200	115,200bps
20	CONNECT 230400	230,400bps
21	CONNECT 460800	460,800bps

#### Information

- Result codes are displayed in the character notation (default) when the ATVn command (see page 53) is set to n=1 and displayed in the numeric notation when it is set to n=0.
- The baud rate is displayed to keep the compatibility with a conventional modem connected via RS-232C. However, the FOMA phone and personal computer are connected via the FOMA USB Cable with Charge Function 01 (option); so, the baud rate is different from the actual connection speed.
- "RESTRICTION" (numeric notation: 100) means that the communication network is congested. If this result code appears, wait for a while, then connect the line again.

#### ■Communication Protocol Result Code List

Numeric notation	Character notation	Meaning
1	PPPoverUD	Connected by 64K data communication
2	AV32K	Connected by 32K videophone
3	AV64K	Connected by 64K videophone
5	PACKET	Connected by packet communication

#### Result Code Display Examples

When ATX0 is set:

CONNECT only appears at completion of the connection, regardless of the contents specified in the AT¥V command (see page 54).

Example in character notation: ATD\*99\*\*\*1#
CONNECT

Example in numeric notation: ATD\*99\*\*\*1#

When ATX1 is set\*:

· If ATX1 and AT¥V0 are set (default):

A result code appears in the following format at completion of the connection: CONNECT<br/>baud rate between the FOMA phone and PC>

Example in character notation: ATD\*99\*\*\*1#

CONNECT 460800 Example in numeric notation: ATD\*99\*\*\*1#

1 21

· If ATX1 and AT¥V1 are set\*:

A result code appears in the following format at completion of the connection: CONNECT<br/>baud rate between the FOMA phone and PC>PACKET<br/>access point name (APN)<br/>/<maximum baud rate for upload (the FOMA phone → wireless base station)<br/>>> tautory<br/>tautory<br/>Example in character notation: ATD<br/>×9××+1#

CONNECT 460800 PACKET mopera.ne.jp /384/3648 (Indicates that the FOMA phone connected to mopera.ne.jp at maximum 384 kbps for upload and maximum 3648 kbps for download.)

Example in numeric notation: ATD\*99\*\*\*1#

ATD\*99\*\*

 $\%\,\mbox{lf}$  you specify ATX1 and AT¥V1 at the same time, you may not be

able to correctly carry out the dial-up connection.

You are advised to use only AT¥V0.

April '08 (Ver.2.0) F1207F1038

# FOMA® P705iμ/PROSOLID μ

# **Kuten Code List**

## <How to read Kuten Code List>

# First enter the number for "Kuten digit 1 to 3", and enter the number for "Kuten digit 4".

• Some characters in Kuten Code List may appear different on the display.

Kuten	Kuten digit 4	Kuten Kuten digit 4	Kuten Kuten digit 4
digit 1 to 3	0 1 2 3 4 5 6 7 8 9	digit 1 to 3 0 1 2 3 4 5 6 7 8 9	digit 1 to 3 0 1 2 3 4 5 6 7 8 9
010 011 012 013 014 015 016 017 018 019 020		130 ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ 131 ① ① ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ 132 ② I I II II V V VI VI VI VI 133 X ※ 『 * 『 デ 仁 だ だ ※ ※ 134 だ だ ※ ※ 134 だ だ ※ ※ 136 で m cm km mg kg cc m n 136	209 旗 概 概 報 報 報 報 報 報 報 報 報 報 報 報 報 報 報 報 報
021 022 023 024 026 027	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	160	220 供快 使 僑 兇
028 029 031 032 033 034 035	Å ‰ # b ♪ f ‡ ¶  O 1 2 3  4 5 6 7 8 9  A B C D E F G  H I J K L M N O P Q  R S T U V W X Y Z	165   成財性意図   根   表   表   表   表   表   表   表   表   表	C
036 037 038 039 040 041 042 043	a b c d e f g h i i k l m n o p z a b c x x y y z a b x ええだげぜて かかさだち すつ ごった だてでた	171	232
045 046 047 048 050 051	ひぼはなる       ック         へもれ       ウグ         ぶおりり       イギ         ボカらん       イギ         アカオコ       オコ	178 艶 苑 薗 遠 鉛 鴛 塩 178	240     (株 在 本 子 大 前 遺 銀 )       241     (株 在 本 子 大 前 遺 銀 )       242     (基 )       243     (基 )       244     (基 )       245     (基 )       246     (基 )       247     (基 )       248     (基 )       249     (基 )       240     (基 )       241     (基 )       242     (基 )       243     (基 )       244     (基 )       245     (E )       246     (E )       247     (E )       248     (E )       249     (E )       240     (E )       241     (E )       242     (E )       243     (E )       244     (E )       245     (E )       246     (E )       247     (E )       248     (E )       249     (E )       240     (E )       241     (E )       242     (E )       243     (E )       244     (E )       245     (E )       246     (E )       247     (E )       248     (E )       249     (E )
052 053 054 055 056 057 058	ゴゾトヒポュロ サタドピポーコワ カチニフミラン カチニフミラン カチニフミラン カカカカカカカカカカカカカカカカカカカカカカカカカカカカカカカカカカカカ	Ta2	245 糊顧 的 的 的 的 的 的 的 的 的 的 的 的 的 的 的 的 的 的
060 061 062 063 064 065	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	189 / 恢	253 江洪法海衛語 中華 皇 情 標 書
070 071 072 073 074 075 076 077	АБВГДЕЁЖЗ ИЙКЛМНОПРС ТУФХЦЧШЩЪЫ БЭЮЯ  6 ВГДЕЁЖЗИЙ КЛМНОПРСТУ ФХЦЧШЩЪЫ БЭ	196	261   1   261   261   261   261   262   263   264   265   266   266   266   267   268   266   267   268
080 081	N	204   学 管 簡 緩 缶 翰 肝 艦 売 観 表	266 載際 剤 在 材

Kuten			L	Cuten	diai	t D			1	Kuten				K.	uten	diait	14				Kuten				K.	ıten	digit	4			
digit 1 to 3	0	2		4	-	6	7	8	9	digit 1 to 3	0	1	2		4	uigii 5	6	7	8	9	digit 1 to 3	0	1	2		4	uigit 5	6	7	8	9
273			受餐			残	′	o	J	1103	ľ	-	た	J	Ţ	J	υ	1	o	J	400	U	函	箱	硲	箸	肇	箸	櫨	幡	肌
	Ĩ	ī		]	_	/20				343	他	多	太	汰	詑	唾	堕	妥	惰	打	401	畑	畠	Л	鉢	溌	発	醗	髪	伐	罰
273	/it ±	al =	9	93	LLD.	_	仕始		伺次	344	柁代	舵	楕	陀台	駄能	難	体麸	堆奏	対滞	耐	402 403	抜业	筏	閥	鳩	噺	塙	蛤垢	隼	伴	判监
274 275	使素子				四思	士指	始支		姿斯	345 346	岱腿	帯苔	待袋	怠貸	態退	戴逮	替隊	泰黛	滞鯛	胎代	403 404	半犯	反班	叛畔	帆繁	搬般	斑藩	板販	氾範	汎釆	版煩
276	施旨				応氏	獅	祉		糸	347	脸 台	大	衣第	見醒	題	巡鷹	滝	黒瀧	卓	啄	405	犯頒				番		蚁磐	蕃	へ 蛮	炽
277	紙	だ 服	き 脂	至	視	詞	詩	試	誌	348	宅	托	択	拓	沢			託	鐸	濁		Ĩ	- 200	ΰ		ī		_	_	_	
278	諮貨				歯	事	似	侍	児	349	諾	茸	凧	蛸	只	-	n> /	27	E	S. 1.	405	prins.	_		-		==	_	ш.	444	匪
279 280	字号	与恋			璽	Œ	T.t.t.	=	<del></del>	350 351	棚	叩谷	但狸	達鱈	辰樽	奪誰	脱丹	巽単	竪嘆	辿坦	406 407	卑比	否泌	妃疲	庇皮	彼碑		扉緋	批罷	披肥	斐被
281	耳首				鹿	痔式	磁識		血	352	担	口探	圧	敷	愕淡			短短		箪	408	誹	<b>沙</b>	避	非					尼尾	微微
282	軸ラ		₹ t	; 叱	執	失	嫉	室	悉	353	綻	耽	胆	蛋	誕	鍛		壇		断	409	枇	毘	琵	眉	美		/	111.3	, _	,,,
283	湿透				蔀	篠	偲		芝	354	暖	檀	段	男	談						410		鼻	柊	稗	兀		髭	彦	膝	菱
284 285	屡る社				射遮	捨蛇	赦邪		煮勺	354	ľ		ち		1	値	知	地	弛	恥	411 412	肘	弼謬	必俵	畢彪	筆標		桧漂	姫瓢	媛票	紐表
286	尺木				釈	錫	岩岩		弱	355	智	池	痴	稚	置	12 致	蜘蜘	遅	馳	築	413	百評	彩豹	廟	描	惊病		点	錨	赤鋲	公蒜
287	惹主	E 取	刁	'手	朱	殊	狩	珠	種	356	畜	竹	筑	蓄	逐	秩	窒	茶	嫡	着	414	蛭	鰭				浜			實	頻
288	腫丸				受	呪	寿	授	樹	357	中	仲	宙	忠	抽	昼	柱	注		衷	415		瓶								
289 290	綬 票	界 区 款			愁	拾	洲	秀	秋	358 359	註丁	酎兆	鋳凋	駐喋	樗寵	瀦	猪	苧	著	貯	415	ľ		ふ不	付	埠	夫	婦	富	富	布
291	終新				蒐	衆	襲		蹴	360	J	帖	帳	庁	弔	張	彫	徴	懲	挑	416	府	怖	扶	敷	斧		泙	义	符	腐
292	輯追	<b>司</b> 芭	前酬	集	醜	什	住	充	+	361	暢	朝	潮	牒	町	眺	聴	脹	腸	蝶	417	膚	芙	譜	負	賦	赴	阜	附	侮	撫
293	従刃				獣	縦	重		叔	362	調	諜	超油	跳	銚			鳥	勅	捗	418	武	舞	葡	蕪	部品	封	楓	風,	葺	蕗
294 295	夙循述				粛竣	塾舜	熟酸		術循	363	直【	朕	沈っ	珍	賃】	鎮	陳				419 420	伏	副福	復腹	幅複	服覆	淵	典	払	泄	仏
296	旬机				潤	盾	純		1個 遵	363	L		7		1			津	墜	椎	421	物	鮒	分	吻	優噴					1公奮
297	醇川	頁 処	1 初	所	暑	曙	渚	庶	緒	364	槌	追	鎚	痛	通	塚		掴	槻	佃	422	粉		紛	雰	文	聞	,~e			
298	署言		藷	諸	助	叙	女		徐	365	漬	柘	辻	蔦	綴	鍔	椿	潰	坪	壷	400	[		^		1		_	ω,	_	
299 300	恕釒				哨	商	唱	嘗	奨	366	嬬【	紬	爪て	吊	釣】	鶴					422 423	幣	平	弊	柄	並	蔽	丙閉	併陛	兵米	塀頁
301	妾 如				少	尚	庄		殿廠	366	L		٠		1		亭	低	停	偵	424	帝僻	壁	癖	智	別			箆	不偏	只変
302	彰				捷	昇	昌		晶	367	剃	貞	呈	堤	定	帝	底	庭	廷	弟	425	片									弁
303	松札				消	涉	湘		焦	368	悌	抵	挺	提	梯	汀	碇	禎	程	締	426	鞭				,					
304 305	照组紹育				祥衝	称裳	章訟		粧詔	369 370	艇	訂邸	諦鄭	蹄釘	逓鼎	泥	擠	规	敵	滴	426	ľ	保	舗舗	鋪	圃	捕	步	市	油	輔
306	詳彰				鍾	表鐘	弘 障	<b>証</b>	当上	371	的	笛	適	剪鏑	淵溺	泥哲	摘徹	擢撤	轍	选	427	穂	味夢	墓	期慕	世戊		少母	甫簿	補菩	触做
307	丈 2	乘 至	€ Л	剰	城	場	壌	孃	常	372	鉄	典	填	天	展	店	添	纏		貼	428	俸	包	呆	報	奉		峰	峯	崩	庖
308	情报				状	畳	穣	蒸	譲	373	転	顛	点	伝	殿			電			429	抱	捧	放	方	朋	wa	n/-	+.+	<b>#</b>	75
309 310	酿金	定帽式框			織	職	色	触	食	373	[		۲		1				兎	吐	430 431	蜂	法褒	泡訪	烹豐	砲邦	縫鋒	胞飽	芳鳳	萌鵬	逢乏
311	蝕馬				侵	唇唇	姤		審	374	堵	塗	妬	屠	徒	斗	杜	渡	登	英	432	年亡	※ 傍	剖	並坊	妨妨		応	忙	勝房	を 暴
312	心情				森	榛	浸	深	申	375	賭	途	都	鍍	砥	砺	努	度	土	奴	433	望	某	棒		紡		膨	謀	貌	貿
313	疹厚				臣	芯	薪		診	376	怒	倒	党	冬	凍	刀	唐	塔	塘	套	434	鉾	防	吠	頬	北	僕	1	墨		朴
314 315	身品				人	仁陣	刃靭	塵	壬	377 378	岩次	島淘	嶋	悼涛	投灯	搭燈	東	桃痘	梼姞	棟	435 436	牧木	睦	穆口	釦分	勃	没	殆	堀	幌	奔
515	尋し	호 경		訊】	ŢŢĻ	PF	判			379	盗答	海筒	湯糖	海統	灯到	炄	当	痘	祷	等	430	本【	田竹	凡ま	盆	1					
315	•	,		,				笥	諏	380		董	蕩	藤	討	謄	豆	踏	逃	透	436	•		~		摩	磨	魔	麻	埋	妹
316	須酉				吹		帥	推	水	381	鐙	陶	頭	騰	闘	働	動	同	堂	導	437	昧			哩	槙	幕	膜	枕	鮪	柾
317 318	炊暖				遂収	酔っ	錐雛		随だ	382 383	憧鴇	撞匿	洞得	瞳徳	童洁	胴焅	萄奴	道禾	銅笙	峠書	438 439	鱒繭	桝麿	亦	俣慢	又満	抹	末	沫	迄	侭
318	瑞體相當				枢	趨	錐	据	10	383	<b></b> 独	造読	得栃	偲橡	涜 凸	特突	督椴	禿届	篤鳶	毒苫	439	附	/ 陰 漫	万蔓	逻	/向					
320	3	登播								385	寅	酉	瀞	噸	屯	停		沌	豚	遁		[	,,,	み		]					
000	[	t	<u>t</u>	1			_	\	ا	386	頓	吞	曇	鈍							440							E		岬	密
320 321	泰丸 九	+ 37	E /h4	世	瀬	畝敷	是		制捷	386	[		な			±17	ф	乍	匝	茄	441	蜜	湊	蓑む	稔	脈】	妙	粍	民	眠	
322	勢如				政盛	整精	星聖		棲製	387	謎	灘	捺	鍋	奈楢	那馴	内縄		凪南	薙楠	441	ľ		v		1					務
323	西割	或 誓			醒	青	静		税	388	軟		汝	~~							442	夢	無	牟	矛	霧	鵡	椋	婿	娘	,,,
324	脆鱼		15 惜	戚	斥	昔	析	石	積	000	[		ſこ	_	1	-/-	\ <u></u>	_	0-	-	440	[		め		]					
325 326	籍制				跡	蹟	碩		拙土	388 389	фΤ	++		251 —		弐	迩	包	賑	肉	442 443	Þ	_	DD	88	244	<b>4</b> 0	巾白	₩	HL	冥
327	接担	見 折			節宣	説専	雪尖		舌戦	390	虹	廿如	日尿	乳韮	入任	奸	忍	認			444	名免	命棉	明綿			銘麺	帰	姪	牝	滅
328	扇掛						染		煎		ľ	.'H	ぬ		Ī	,_	,_,					Ĩ	1712	ŧ	-1, 3146	Ī	~=				
329	煽力	复第	育 能	線						390									濡		444	_						摸		茂	妄
330 331		就 莎						賎		390	[		ね		1					-jeas	445 446						耗			木	黙
331	選え				鮮	刖	普	漸	灬	390	袮	靈	茐	猫	埶	年	念	拎	揪	愀	446		坐 門		断	儿	戻	砂	貝		ŵ
	T 1	7	- "	]						392	粘	,	101	JIII	NA		۱	J/C/\	37111	79111		Ī	, ,	ř		1					
332						塑		措		000	[	_	ص ت	_	]	_		1011	Jul-	40	447		_				夜				
333 334	曽魚					祖	租劍		素業	392 393	B:V		廼農			襄	悩	濃	納	能	448 449	矢鑓	厄	役	約	楽	訳	羅	靖	柳	数
335	組倉				鼠宋	僧層	創匝		叢想	030	脳【	版	辰は	呪	重】						773	追【		ф		1					
336	搜找	吊 揖	1 掻	操	早	曹	巣	槍	槽	393	•								覇	杷	449	•		愈		癒					
337	漕炸	梨	9 痩	相	窓	糟	総	綜	聡	394	波		琶			罵	芭	馬	俳	廃	450	h-	諭	輸	唯	佑	優			宥	
338 339	草類霜				装	走	送	遭	鎗	395 396		排培	敗雄	杯梅	盃桿	牌煤				配賠	451 452						湧郵				由
340		虫 頂			促	側	則	即	息	397		垣這					伯		売博	短 拍	-J2	仙	тП	よ	UI	Ī	#1)	仙土	KR	J	
341	捉身	1 浿	」足	速	俗	属	賊	族	続	398	柏	泊	白	箔	粕		薄				452										予
342	卒者	由其	1 捕	存	孫	尊	損	村	遜	399	爆	縛	莫	駁	麦						453	余	与	誉	輿	預	傭	幼	妖	容	庸

	Kuten				K:	ıten	diai	t 4				Kuten				K:	ıten	diai	4				Kuten				K	uten	diait	1 4			
595		0	1	2					7	8	Q		0	1	2			-		7	8	Q		0	1	2					7	8	Q
505   105																													5	U	′	0	9
503   1																								1000					椒	椄	棗	棣	椥
4565   1	456	養	慾		欲	沃	浴	翌	翼																		椨						
456   458   458   459	450	[		5		1																											
1		₩BB	÷⊞	T I	±±	お西	( <del>-1</del> -	347	44	古井																							
528										洛	出台																						
5299   5299			912		11249		ш	1940	晃									奕	奐														
5511	458	•		-		•				利	吏	529				奬							607										
5522   1532   1532   1532   1532   1532   1533		履					-																						橦	橈	樸	樢	檐
4663   4644   4646   4666		745																						檍					133	∔r¢a	150	描	160
466    466    466    466    467    466    467    466    467    466    467    467    468    468    468    469    473    473    473    473    473    473    480    580																								畑									
4646   18																																	
537	464											535			孕		孛	孥					613										
5466	465		林		燐		臨	輪	隣	鱗	麟																						
666   667   666   666   667   666   666   667   667   667   668   667   668   667   668   667   668   667   668   667   668   667   668   667   668   667   668   667   668   667   668   667   668	166		(00)		<b>=</b>																												
4666 467 468 469 470 2 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	400		솔		糸													NI/	色グ	儿	旭	Γ											
467 468 469 470 470 470 470 470 470 470 470 470 470	466	١.		7.0		1	令	伶	例	冷	励		٠.					ш	山,	屶	屹	岌											
543   1470   47							鈴	隷	零	霊	麗			岔	妛	岫	岻	岶	岼	岷	峅	岾			泝	沮	沱	沾					
□							烈	裂	廉	恋	憐													20									
5-54   1-54		湕				聯																											
470 472 472 473 474 475 476 476 476 477 478 477 478 477 478 477 478 477 478 477 478 477 478 477 478 477 478 477 478 479 480 477 478 479 480 481 479 480 481 481 481 481 481 481 481 481 481 481	-7.0	ľ	浬		业术	1																											
473 473 473 473 473 473 473 473 473 473		•		_			魯	櫓	炉	賂	路												624										
473						弄	朗	楼						帛	帶	帷				幎				渙	湲	湟	渾	渣	湫	渫		湍	渟
1473					老	聾	蝋	郎	六	麓	禄							并	幺	麼	广	庠											
474 475 476 477 478 476 477 478 478 479 480 552 552 552 554 477 478 479 480 555 554 482 677 478 480 677 478 480 677 478 480 677 478 480 677 480 677 480 677 480 677 480 677 480 677 480 677 480 677 480 677 480 677 480 677 480 680 680 680 680 680 680 680 680 680 6	4/3		録			,							則					Time 1	感	iden.	1027	लिंग											
474 475 476 477 477 478 479 479 479 480 481 27 477 480 481 481 482 481 482 481 482 483 484 485 484 485 486 487 486 487 487 488 488 487 488 488 488 488 488	473	ı		1)	倭		話	歪	聐	脇	或		雷													浩滯			/隹	爬	/ōT	位	38
477 478 479 480 481 479 480 481 482 482 482 482 482 483 484 485 485 486 687 487 487 488 489 480 487 487 480 687 487 488 489 480 687 487 488 489 480 687 488 489 480 687 588 489 688 489 689 689 680 680 680 680 680 680 680 680 680 680		枠	鷲	亙																				15					潺	潸	澁	加加	潯
478		碗	腕																														
479 480 481 481 482 482 483 484 484 486 487 488 486 487 488 487 488 487 488 488 557 558 558 558 558 558 558 558 558 5																																	
480																																	
481 金叉																																	
483	480		#		丕	$\uparrow$	IJþ	\		J													636				烝						
484													悁																				
485													_																熾	燒	燉	燔	燎
485 有466 486 487 (中保 (中保 (中保 (中保 (中保 (中保 (中保 (中保 (中保 (中保																								煗					相用	樂	4	MP.	至
486 (487 ) 566 (487 ) 566 (487 ) 642 (487 ) 642 (487 ) 644 (488 ) 644 (489 ) 644 (489 ) 644 (489 ) 644 (491 ) 649 (491 )																								爲									
488																																	
189		倅																															
490							偈	做	偖	偬	偸																						
491 僅屬 (		1宠					佶	俉	査	扶	紩							焙煙															
492		偣																惟	惟	ІНН	75%	~											
494   194   195	492	儡	儺	儷	儼	儻	儿		兒	兌	兔	570	1	戞	戡	截	戮						648	瑁	瑜	瑩	瑰	瑣					
195																								璧						T-	T/\		
496																								2/2									
497																																	
499	497		刧	刪	刮	刳	刹	剏	剄	剋	剌	575			捏	掖	掎	掀	掫	捶			653		畤	畧		畭					
578		剞	剔	剪	剴	剩					劔		掉	掟	掵	捫	捩	掾	揩	揀				疊		疂	疔	疚		疥	疣	痂	
101   101		劒					4	777.L			***																						
502 旬匍匐空上		書か																荢	搏	摻	攬	撕											
503							Hill						1元					控	壁	擂	擱	學											
504							弄						舉										659						m-0X	/1-2g	INC	7.15%	/Æ
506			夘	卻	卷	Γ.	厖	厠	10000	厥				攀	擽	攘	攜	攅	攤	攣		攴			癲	74			皀				皎
507																																	
586																																	
599																																	
510	509		咬	哄	哈	咨		ľ	_			587	昜	晏	晄	晉	晁	睎	晝	晤	晧	晨	665	瞎	瞋	瞑	瞠	瞞	瞰	瞶	瞹	瞿	
12		02-				咾		哘	哥									暎	睴	暄	暘	瞑						矗	矚	矜	矣		
513					哭凇								些				警曄	DEE:	Dr.t-	뺘	-					儼		傾					
1514													#		原 朏														ΝSI	1155	Νij	加左	1DFC
515 嘔 嗷 噴 嗾 嗽 嘛 嗹 噎 噐 營 593 杜 杰 杰 抒 杪 枌 枋 枦 枡 枡 671 礫 祀 祠 祗 崇 祚 祕 祓 祺 禄 春 594 柏 桢 村 村 村 672 禊 禝 藒 齍 禪 禮 藏 禹 禹 禹 禹 禹 禹 禹 禹 禹 爾 嚼 嚼 嚼 嚼 嚼 屬 醫 595 杜 柢 柮 柏 柆 柧 椊 椊 样 档 桷 桿 674 東 禀 稍 稻 藁 稷 移 穰 覆 穿 窈 窗 窕 第 章 音 舒 卷 785 卷 596 荣 樗 格 枢 栎 棒 样 梅 桿 674 東 東 稍 稻 藁 稷 移 養 稷 移 養 愛 穿 窈 窗 窕 章																								MIK					礇	礒	礑	礙	礬
517   嚀 嚊 嚠 嚔 啑 嚥 嚮 嚶 嚴 鵥 595   柢 柮 枹 柎 柆 杠 檜 琹 框 栩 673   秕 秧 秬 秡 秣 稈 稍 稘 稙 稠 1518   嚼 囁 噼 嚇 暋 嘣 囑 囓 口 囮 596   矣 桍 栲 垤 梳 栫 桙 档 桷 桿 674   稟 禀 稱 稻 稾 稷 穃 穗 棲 稽 597   梟 枯 籹 梔 條 梛 梃 椿 梹 桴 674   稟 薫 稱 程 藻 寶 窈 窕 霓 窕 霓							嘛		噎				枉	杰	枩	杼	杪	枌	枋	枦	枡	枅			祀	酮	祗	祟	祚	祕	祓		
518																																	
519 图 图 图 图 图 图 图 图 图 图 图 图 图 图 图 图 图 图 图															他	州杯	位統			米					伏宣	沿	似經	休高	伊规				
520 圏 國 園 圓 團 圖 嗇 園 圦 598 梵 梠 梺 椏 梍 桾 椁 棊 椈 棘 676 窖 窩 竈 窰 窶 竅 鼠 窿 邃 竇							7/88	12590	-42	П					梭	梔	條	梛	梃						無	龝	穰	弯	穽	窈			
							専	몶	嗇	寰	圦				梺	椏	梍	桾	椁				676		窩		窰	窶	竅	鼠			

Kuten	Kuten digit 4	Kuten	Kuten digit 4 Kuten Kuten digit 4
digit	•	digit	digit
1 to 3 677	8 1 2 3 4 5 6 7 8 9 8 計 竏 竕 竓 站 竚 竝 竡 竢	1 to 3 755	0
678	棘蝎蟬笂笏笊笆笳笘笙	756	說 諫 諳 諧 諤 諱 謔 諠 諢 諷 834 麋 麌 麒 麕 麑 麝 麥 麩 麸 影
679	笞 笵 笨 笶 筐	757	諞 諛 謌 謇 謚 諡 謖 謐 謗 謠 835 麭 靡 覺 黎 黏 黐 黔 黜 點 點
680	筐 笄 筍 笋 筌 筅 筵 筥 筴	758	謳 鞫 謦 謫 謾 謨 譁 譌 譏 譎 836 點 黥 黨 黯 黴 黶 黷 黹 黻 [
681	9	759	證 譜 譜 譚 諡 837 黽 鼇 鼈 皷 鼕 鼡 鼬 鼾 齊
682 683	新 箋 箒 箏 箏 箙 篋 篁 篌 篏 ***********************************	760 761	操 譬 譯 譴 譽 讀 讌 讎 讒 838
684	箴 篆 篝 篩 簑 簑 篦 篥 籠 簀 簇 簓 篳 篷 簗 簍 篶 簀 簧	762	讓 讖 謹 讚 谺 豁 谿 豈 豌 豎   839   齲 齶 龕 龜 龠   豐 豕 豢 豬 豸 豺 貂 貉 貅 貊   840   蘄 堯 槇 遙 瑤 凜 熙
685	<b>節 華 達 案 要 焉 員 夷 智</b> <b>簟 簷 簫 簽 籌 籃 籔 籏 籀 籐</b>	763	理 貎 貔 豼 貘 戝 貭 貪 貽 貲
686	廉 籟 籤 籤 籥 離 籵 粃 粐 粤	764	貳 貮 貶 賈 賁 賤 賣 賚 賽 賺
687	粭 粢 粫 粡 粨 粳 粲 粱 粮 粹	765	賻 贄 贅 贊 瀆 羸 贍 贐 齎 贓
688	粽 糀 糅 糂 糘 糒 糜 糢 鬻 糯	766	脏 贔 贖 赧 赭 赱 赳 趁 趙 跂
689	網糴糶糺紆	767	趾 趺 跏 跚 跖 趺 跛 跋 跪 跫
690 691	村 紜 紕 紊 絅 紘 紮 紲 紿 紵 絆 絳 絖 絎 絲 絨 絮 絏 絣	768 769	跟 跣 跼 疎 踉 跿 踝 踞 踐 踟 蹂 踵 踰 踴 蹊
692	經 綉 條 綏 絽 綛 綺 綮 綣 綵	770	塞 蹉 蹌 蹐 蹈 蹙 蹤 蹠 踪
693	緇綽綫總綢綯縣綸綟綰	771	蹣 蹕 蹶 蹲 蹼 躁 躇 躅 躄 躋
694	緘 緝 緤 緞 緻 緲 緡 縅 縊 縣	772	躊 躓 躑 躔 躙 躏 躡 躬 躰 軆
695	縡 縒 縱 縟 縉 縋 縢 繆 繦 縻	773	<b>躲 躾 軅 軈 軋 軛 軣 軼 軻 軫</b>
696	<b>漫縹繃縷縲縺繧繝繖繞</b>	774	軾 輊 輅 輕 輒 輙 輓 輺 輟 輛
697 698	繙線繹繪繩繼繻續絡編 辦鑑額續續經纐纓纔纖	775 776	輔 輦 輳 輻 輹 轅 皸 輾 轌 轉 轆 轎 轗 轜 轢 轣 轤 辜 辟 辣
699	纖囊纜缸缺	777	辭辯 : 迚 迥 迢 迪 迯 邇 迴
700	罅罌罍罐网罕罔罘	778	逅迹 迺逑 逕逡逍 逞 逖 逋
701	罟 罠 罨 罩 罧 罸 羂 羆 羃 羈	779	逧 逶 逵 逹 迸
702	羇 羌 羔 羞 羝 羚 羣 羯 羲 羹	780	遏遐違遒逎遉逾遖遘
703	<b>羹 羶 羸 譱 翅 翆 翊 翕 翔 翡</b>	781	速速速速速速速速
704 705	翦翩翳翹飜耆耄耋耒耘耙 粗 糊 耨 耿 耻 聊 聆 聒 聘	782 783	漫邊選邨邯邱邵郢郤扈
706	聚智定聨聳聲聰聶聹聽	784	所 酩 醋 酲 醋 醉 醂 醢 醫 醯
707	聿 肄 肆 肅 肛 肓 肚 肭 冐 肬	785	醪 醵 醴 醺 醸 釁 釉 釋 釐 釖
708	胛胥胙胝胄胚胖脉膀胱	786	釟 釜 釛 釼 釵 釶 鈞 釿 鈔 鈬
709	脛 脩 脣 脯 腋	787	鈕 鈑 鉞 鉗 鉅 鉉 鉤 鉈 銕 鈿
710 711	隋 腆 脾 腓 腑 胼 腱 腮 腥	788 789	鉋 新 街 銖 銓 話 鉚 鋏 銹 銷
712	腦胖膃膈膊膀膂膠膕膤	790	<ul><li>笠 錏 鋺 鍄 錮</li><li>錙 錢 錚 錣 錺 錵 錻 鍜 鍠</li></ul>
713	臂膺臉臍臑臙臘臈臚臟	791	鍼 鍮 鍖 鎰 鎬 鎮 鎔 鎹 鑒 鏗
714		792	鏨 鏥 鏘 鏃 鏝 鏐 鏈 鏤 鐚 鐔
715	舍 舐 舖 舩 舫 舸 舳 艀 艙 艘	793	缴 鐃 鐇 鐐 鐶 鐫 鐡 鐡 鐺 鑁
716	館 艚 艟 艤 艢 艨 艪 艫 舮 艱	794	鑒 鑄 鑛 鑠 鑢 鑞 鉦 鈩 錀 鑵
717 718	艷 艸 艾 芍 芒 芫 芟 芻 芬 苡 苣 苟 苒 苴 苳 苺 莓 范 苻 苹	795 796	量 鑚 鑚 鑼 鐢 鏤 鑿 閂 閇 閊 閔 閖 閘 閙 閏 閏 閧 閭 閼 閻
719	苞 茆 苜 茉 茁	797	
720	茵茴茶茲茱葡茹荐荅	798	關闡 闢 阡 阨 阮 阯 陂 陌
721	茯 茫 茗 茘 莅 莚 莪 莟 莢 莖	799	陏陋陷陜陞
722	莫莎莇莊荼莵荳荵莠莉	800	陝 陟 陦 陲 陬 隍 隘 隕 隗
723 724	<b>莨菴萱菫菎菽萃菘萋菁</b>	801 802	險 隧 隱 隲 隰 隴 隶 隸 佳 睢
725	蒂 萇 菠 菲 萍 萢 萠 莽 萸 蔆 菻 葭 萪 萼 蕚 蒄 葷 葫 蒭 葮	803	馬 雉 雍 襍 雜 霍 雕 雹 霄 霆 霈 霓 霎 霑 霏 霖 霙 霤 霪 霰
726	带葩葆萬葯葹萵蓊葢蒹	804	アン・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス・ス
727	蒿 蒟 蓙 蓍 蒻 蓚 蓐 蓁 蓆 篦	805	靤 靦 靨 勒 靫 靱 靹 鞅 靼 鞁
728	蒡 蔡 蓿 蓴 蔗 蔘 蔬 蔟 蔕 蔔	806	靺 鞆 鞋 鞏 鞐 鞜 鞨 鞦 鞣 鞳
729	蓼棘蕣蕘蕈	807	鞴 韃 韆 韈 韋 韜 韭 齏 韲 竟
730 731	蕁 蘂 蕋 蕕 薀 薤 薈 薑 薊 売 蕭 薔 薛 藪 薇 薜 蕷 蕾 薐	808 809	韶 韵 頏 頌 頸 頤 頡 頷 類 類
732	華 華 藏 薑 藐 藕 藝 藥 藜 藹	810	顧額顧風鬼 雕
733	蘊 蘓 蘋 藾 藺 蘆 蘢 蘚 蘰 蘿	811	飆 飩 飫 餃 餉 餒 餔 餘 餡 餝
734	<b>虎 馬 虔 號 虧 虱 蚓 蚣 蚩 蚪</b>	812	餞 餤 餠 餬 餮 魄 餾 饂 饉 饅
735	纳 蚌 蚶 蚯 蛄 蛆 蚰 蛉 蠣 蚫	813	<b>饐 饋 饑 饒 饌 饕 馗 馘 馥 馭</b>
736	蛔蛞蛩蛬蛟蛛蛯蜒蜆蜈	814	馬取駅駅開展開展開展
737 738	蜀 蜃 蛻 蜑 蜉 蜍 蛹 蜊 蜴 蜿 蜷 蜻 蜥 蜩 蜚 蝠 蝟 蝸 蝌 蝎	815 816	M
739	蝴蝗蝨蝮蝙	817	驅 験 驤 驩 驫 驪 忻 骰 骼 髀
740	蝓蝣蝪蠅螢螟螂螯蟋	818	腰 髑 髓 體 髞 髟 髢 髣 髩 髯
741	螽 蟀 蟐 雖 螫 蟄 螳 蟇 蟆 螻	819	髫 髮 髴 髱 髷
742	蟯 蟲 蟠 蠏 蠍 蟾 蟶 蟷 蠎 蟒	820	髻鬆 鬘 鬚 鬟 鬢 鬣 鬥 鬧
743 744	蠑蠖蠕蠢蠡盛蠶蠹蠹鑾	821 822	関 関 闘 鬯 鬲 魄 魃 魏 魍 魎 鯨 厭 針 鮓 鮃 魚 紅 鮫
744	衄 衂 衒 衙 衞 衢 衫 袁 衾 袞 衵 衽 袵 衲 袂 袗 袒 袮 袙 袢	823	魎 魑 魘 魴 鮓 鮃 鮑 鮖 鮗 鮟 鮠 鮨 鮴 鯀 鯊 鮹 鯆 鯏 鯑 鯒
746	抱 袤 袰 袿 袱 裃 裄 裔 裘 裙	824	鯣 鯢 鯤 鯔 鯡 鯵 鯲 鯱 鯰 鰕
747	裝 裹 褂 裼 裴 裨 裲 褄 褌 褊	825	鰔 鰉 鰓 鰌 鰆 鰈 鰒 鯟 鰄 鰮
748	褓 襃 褞 褥 褪 褫 襁 襄 褻 褶	826	鰛 鰥 鰤 鰡 鰰 鱇 鰲 鱆 鰾 鱚
749	樓 襌 禅 襠 襞	827	鱠 鱧 鱶 鱸 鳧 鳬 鳰 鴉 鴈 鳫
750 751	襦 襤 襭 襪 襯 襴 襷 襾 罩 覈 覊 覓 覘 覡 覩 覦 覬 覯 覲	828 829	駅 鴻 鴻 鴦 鶯 鴣 鴟 鵄 鴕 鴒 鵁 鴿 鴾 鵆 鵈
751	殷 輔 見 妃 蜺 覠 腕 豉 靚 甄 覺 覽 覿 觀 觚 觜 觝 觧 觴 觸	830	現 6 4 6 B B B B B B B B B B B B B B B B B
753	計 訖 訐 訌 訛 訝 訥 訶 詁 詛	831	鶇 鵯 鵺 鶚 鶤 騖 鶲 鷄 鷀 鶻
754	治 詆 詈 詼 詭 詬 詢 誅 誂 誄	832	弱 鶴 鵙 鷂 騺 鷓 鷭 鷦 鷭