



Manual for FOMA® P905i '07.11



Easy Search/Contents/
Precautions

Before Using the Handset

Voice/Videophone Calls

PushTalk

Phonebook

Sound/Screen/Light
Settings

Security Settings

Camera

i-mode/i-motion/i-Channel

Mail

i-appli

Osaifu-Keitai/ToruCa

GPS Function

One Seg

Full Browser/PC Movie

Data Display/Edit/
Management

Music&Video Channel/
Music Playback

Other Convenient Functions

Character Entry

Network Services

PC Connection

Overseas Use

Appendix/External Devices/
Troubleshooting

Index/Quick Manual



DoCoMo W-CDMA•GSM/GPRS system

Thank you for selecting the “FOMA P905i”.

Before or during use of the FOMA P905i, make sure that you read this manual and the separate manuals such as for the battery pack thoroughly so that you can use the FOMA P905i correctly. If you feel any inconvenience in reading the manual, contact the DoCoMo Information Center listed on the back page of this manual.

The FOMA P905i is designed to be your close partner. Treat it carefully at all times to ensure long-term performance.

Before using your FOMA phone

- Because the FOMA phones use radio waves, they cannot be used in places where radio waves do not reach, such as inside tunnels, underground, or in buildings; or the outside where radio waves are weak or out of the FOMA service area. They may not be used in the high-rise buildings even when the antennas are unobstructed. You may also experience interruption of calls even when using without moving while the radio waves are strong enough for the three antennas to appear on the display.
- Use the FOMA phone carefully to avoid disturbing other people when in public, or in crowded or quiet places.
- Since the FOMA phones use radio waves as the medium of telecommunication, calls may be tapped by the third party. However, the W-CDMA•GSM/GPRS system automatically supports tapping prevention, so your conversation will be incomprehensible to the third party.
- The FOMA phones change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice may sound different from the actual original voice.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL. Neither DoCoMo nor the certifiers as listed herein make any representation and warranty as for the security in the use of SSL. In the event that the user shall sustain damage or loss due to the use of SSL, neither DoCoMo nor the certifiers shall be responsible for any such damage or loss.
Certifiers: VeriSign Japan K.K., Cybertrust, Inc., GlobalSign K.K., RSA Security Inc., and SECOM Trust Systems Co., Ltd.
- This FOMA phone supports FOMA Plus-Area and FOMA High-Speed Area.
- The FOMA terminal can be used only via the FOMA network provided by DoCoMo and in DoCoMo's roaming area.
- It is recommended that you make separate notes of the information (such as Phonebook entries, schedule events, text memos, record messages, voice memos, movie memos) stored in the FOMA phone and keep them in a safe place. Note that we cannot be held responsible for the unlikely event of loss of the stored contents due to a malfunction, repair, change of your model, or other mishandling of the FOMA phone.
- You are advised to save your important data files to the microSD memory card. If you have a personal computer, you can transfer and save the information such as Phonebook entries, mail messages, schedule events, and others to the personal computer by using DoCoMo keitai dataink.

For Using This Manual

This FOMA phone supports Kisekae Tool (page 109). If you use Kisekae Tool to change the design of the Menu display, some menu configurations change according to the usage frequency depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply.

In that case, you cannot operate as described in this manual, so you are advised to switch to the basic structure menu (page 109), or reset menu settings (page 109).

You can download the latest information about this manual from the following DoCoMo web site:

•User's Manual (PDF file) Download

(<http://www.nttdocomo.co.jp/english/support/manual/index.html>)

※The URL and the content of the web site might be modified without notice.

How to Read/Refer to This Manual

In this manual, illustrations and symbols are used in the explanations so that you can easily understand how to use the FOMA phone correctly.

- The operating procedures and displays in this manual are described with the default settings of the “White” handset. However, they are described also with “Menu icon setting” set to “Pink gold”, and “Stand-by display” of “Display setting” set to “OFF”.
- Unless otherwise specified, the descriptions of the operating procedures in this manual start from the Stand-by display.
- Operations are described in the method of “Scroll Selection” (see page 31).
- Displays and illustrations described in this manual are for reference. The actual ones might differ.
- In this manual, “Osaifu-Keitai compatible i-appli which supports the IC card function” is described as “Osaifu-Keitai compatible i-appli”.

How to Refer to This Manual

By the following search methods, you can find pages where your desired functions and services are described:

From the Index

Search from the index when you know the names of functions or services.

From Easy Search

Search from keywords for the functions you frequently use or the functions that are convenient if you can know any.

From the Tabs on the Cover

Search from the tabs printed on the cover.

See the next page for details.

From the Contents

▶▶ P.6

Search from the contents that categorize functions.

From the Main Functions

▶▶ P.8

Search from the main functions when you want to use.

From the Function List

▶▶ P.394

Search from the function list.

From Quick Manual

▶▶ P.458

Quick Manual gives you a clear, brief description about basic functions. You can take it when you go out.





Further, Quick Manual “For Overseas Use” is attached, so refer to it when you use the FOMA phone overseas.

Illustrations for keys

- In this manual, the illustrations for keys are simplified.

For the illustration for keys used in this manual, see “Phone Parts and Functions” on page 24.

- For the description of the operating procedures in this manual, see page 31.

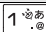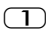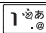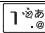Actual key	Illustration in this manual
 (Body color: Black/White)	
 (Body color: Red)	
 (Body color: Pink gold)	

- Note that “FOMA P905i” is referred to as “FOMA phone” in this manual.
- The functions which use a microSD memory card are described in this manual; however, you need to obtain a microSD memory card separately to make these functions available. See page 293 for the microSD memory card.
- It is prohibited to copy all or part of this manual without permission.
- The instructions contained in this manual may be changed without notice.

How to search for “Alarm” is explained here as an example of search method.

From the Index

▶▶ P.450

Search for a function or a service name as shown below.



Add to a phonebook entry	87
Add to phonebook (Phone)	84, 87
Add to phonebook (UIM)	84, 87
Additional service	378
Additional guidance	378
Address link function	164
Alarm	335
Alarm setting	341
Answer setting	62
Antenna	25
Any key answer	62
cPower saver	220
Area mail	202

Go to page 335 where “Alarm” is explained.

From Easy Search

▶▶ P.4

Search for the function you frequently use or that is convenient if you can know any as shown below.

Other things you can do	
To reduce the battery consumption	107 <Power Saver Mode>
To scan QR codes or Bar codes	146 <Bar Code Reader>
To check the location where you are, or the surroundings	232 <GPS Function>
To use the microSD memory card	293 <microSD Memory Card>
To exchange information using infrared rays	303 <Infrared Data Exchange>
To listen to music	323 <MUSIC Player>
To use the FOMA phone as an alarm clock	335 <Alarm>
To use the FOMA phone as a calculator	345 <Calculator>
To use the FOMA phone overseas	386 <International Roaming>
To bring software programs up to date	434 <Software Update>
To bring security up to date	440 <Scanning Function>

Go to page 335 where “Alarm” is explained.

From the Tabs on the Cover


▶▶ Cover page

Search for the function you want to set in the order of “Cover” → “First page of Chapter” → “Description page” as shown below.

One Seg
Full Browser/PC Movie
Data Display/Edit/Management
Music&Video Channel/Music Playback
Other Convenient Functions
Character Entry
Network Services
PC Connection
Overseas Use

Multitaccess	332
Multitask	332
Informing You of an Incoming Call/Mail Message by Voice	333
Turning Power On/Off Automatically at a Specified Time	335
Using Alarm	335
Using Calendar to Manage Schedule	337
Using ToDo to Manage Schedule	340
Setting Operating Conditions of Alarm	341
Using Your Original Menu	341
Storing Your Name, Mail Address and Other Information	342
Recording Voice during a Call or Standby as Voice Memo	343
Recording Images during a Videophone Call as a Movie Memo	343

Go to page 335 where “Alarm” is explained.

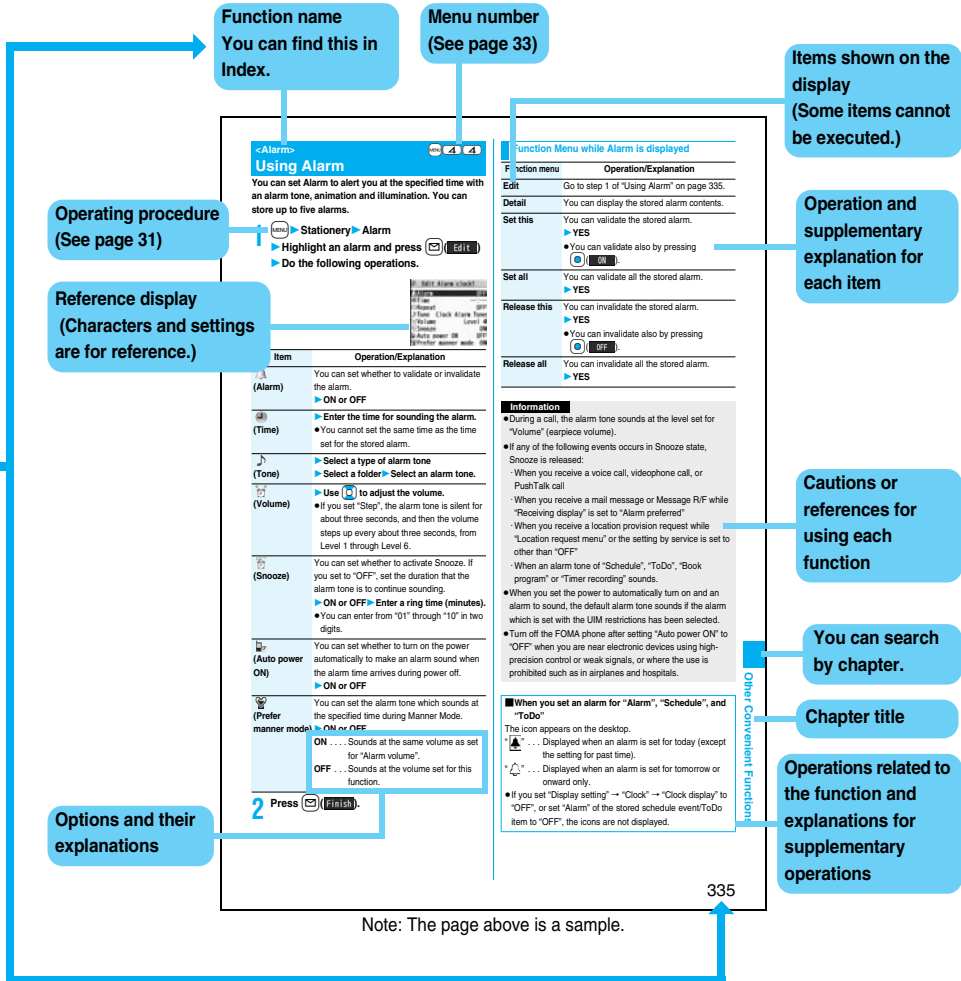

Function name
You can find this in Index.

Menu number
(See page 33)

Items shown on the display
(Some items cannot be executed.)

Operating procedure
(See page 31)

Reference display
(Characters and settings are for reference.)

Operation and supplementary explanation for each item

Cautions or references for using each function

You can search by chapter.

Chapter title

Operations related to the function and explanations for supplementary operations

<Alarm> ☰ ⌂ 🔍

Using Alarm

You can set Alarm to alert you at the specified time with an alarm tone, animation and illumination. You can store up to five alarms.

Stationery Alarm
 Highlight an alarm and press **Ⓜ** **Edit**
 Do the following operations.

Item	Operation/Explanation
(Alarm)	You can set whether to validate or invalidate the alarm. ▶ ON or OFF
(Time)	▶ Enter the time for sounding the alarm. • You cannot set the same time as the time set for the stored alarm.
(Tone)	▶ Select a type of alarm tone ▶ Select a folder ▶ Select an alarm tone.
(Volume)	▶ Use ⏮ to adjust the volume. • If you set "Sleep", the alarm tone is silent for about three seconds, and then the volume steps up every about three seconds, from Level 1 through Level 6.
(Snooze)	You can set whether to activate Snooze. If you set to "OFF", set the duration that the alarm tone is to continue sounding. ▶ ON or OFF ▶ Enter a ring time (minutes). • You can enter from "01" through "10" in two digits.
(Auto power ON)	You can set whether to turn on the power automatically to make an alarm sound when the alarm time arrives during power off. ▶ ON or OFF
(Prefer manner mode)	You can set the alarm tone which sounds at the specified time during Manner Mode. ▶ ON or OFF
	You can set the alarm tone at the same volume as set for "Alarm volume". OFF ... Sounds at the volume set for this function.

2 Press **Ⓜ** **Finish**.

Function Menu while Alarm is displayed

Function menu	Operation/Explanation
Edit	Go to step 1 of "Using Alarm" on page 335.
Detail	You can display the stored alarm contents.
Set this	You can validate the stored alarm. ▶ YES • You can validate also by pressing Ⓜ ON .
Set all	You can validate all the stored alarm. ▶ YES
Release this	You can invalidate the stored alarm. ▶ YES • You can invalidate also by pressing Ⓜ OFF .
Release all	You can invalidate all the stored alarm. ▶ YES

Information

- During a call, the alarm tone sounds at the level set for "Volume" (earpiece volume).
- If any of the following events occurs in Snooze state, Snooze is released:
 - When you receive a voice call, videophone call, or PushTalk call
 - When you receive a mail message or Message R/F while "Receiving display" is set to "Alarm preferred"
 - When you receive a location provision request while "Location request menu" or the setting by service is set to other than "OFF"
 - When an alarm tone of "Schedule", "ToDo", "Book program" or "Timer recording" sounds.
- When you set the power to automatically turn on and an alarm to sound, the default alarm tone sounds if the alarm which is set with the UIM restrictions has been selected.
- Turn off the FOMA phone after setting "Auto power ON" to "OFF" when you are near electronic devices using high-precision control or weak signals, or where the use is prohibited such as in airplanes and hospitals.

When you set an alarm for "Alarm", "Schedule", and "ToDo"

The icon appears on the desktop.

- 🔔** ... Displayed when an alarm is set for today (except the setting for past time).
- 🔔** ... Displayed when an alarm is set for tomorrow or onward only.

- If you set "Display setting" → "Clock" → "Clock display" to "OFF", or set "Alarm" of the stored schedule event/ToDo item to "OFF", the icons are not displayed.

Other Convenient Functions

335

Note: The page above is a sample.

Easy Search

To retrieve the operation for the desired function with simple words, refer to the following:

To know convenient functions for making calls

- To/Not to notify your phone number to the other party ... 47 <Caller ID Notification>
- To switch to a videophone call during a voice call... 52 <Switch to Videophone Call>
- To change a volume level of the other party's voice63 <Volume>
- To put a call on hold during a call..... 64 <Holding>



To do the following when you cannot answer calls

- To put an incoming call on hold before answering64 <On Hold>
- To convey the message that you need to refrain from talking on the phone 65 <Public Mode (Drive Mode)>
- 66 <Public Mode (Power Off)>
- To record voice/video messages..... 67 <Record Message Setting>



To change melody or illumination

- To adjust the ring volume 64 <Ring Volume>
- To change ring tones according to callers..... 84 <Add to Phonebook>
- To change ring tones..... 98 <Select Ring Tone>
- To know incoming calls by vibrator..... 100 <Vibrator>
- To silence the keypad sound..... 101 <Keypad Sound>
- To activate Manner Mode..... 102 <Manner Mode>
- To change colors/lighting patterns of Call indicator for incoming calls..... 111 <Illumination>



To change/know display settings

- To know the meaning of marks (icons) on the display 28 <Display>
- To change the menu display 35 <Simple Menu>
- To change the Stand-by display (Wallpaper) 104 <Display Setting>
- To display a calendar on the Stand-by display..... 104 <Calendar>
- To change the character size 115 <Character Size>



To make full use of mail

- To send Deco-mail 175 <Deco-mail>
- To send images 179 <Attachments>
- To sort and save mail automatically 196 <Auto-sort>



To make full use of camera	
To shoot with the photo light.....	143 <Photo Light>
To change the shooting size.....	143 <Image Size>
To save to the microSD memory card.....	144 <Storage Setting (Store In)>
To display shot images.....	274 <Picture Viewer>



To use the FOMA phone with a sense of security	
To lock the FOMA phone from away when it gets lost	120 <Omakase Lock>※1
To keep Phonebook entries from prying eyes	126 <Secret Mode>
To reject calls without a caller ID.....	128 <Call Setting without ID>
To reject calls from the phone numbers not in the Phonebook	129 <Reject Unknown>
To separately store Phonebook and other data files in preparation for their erasure	129 <Data Security Service>※2



※1 This is a pay service.

※2 This is a pay service which is available on a subscription basis.

To make full use of One Seg	
To watch One Seg.....	247 <Activate 1Seg>
To record One Seg programs.....	252 <Record Video><Record Still Images>
To book/To set timer recording for One Seg programs	253 <Book Program><Timer Recording>
To change settings of video and audio.....	256 <User Settings>



Other things you can do	
To reduce the battery consumption	107 <Power Saver Mode>
To scan QR codes or Bar codes	146 <Bar Code Reader>
To check the location where you are, or the surroundings	232 <GPS Function>
To use the microSD memory card.....	293 <microSD Memory Card>
To exchange information using infrared rays	303 <Infrared Data Exchange>
To listen to music.....	323 <MUSIC Player>
To use the FOMA phone as an alarm clock	335 <Alarm>
To use the FOMA phone as a calculator	345 <Calculator>
To use the FOMA phone overseas.....	386 <International Roaming>
To bring software programs up to date.....	434 <Software Update>
To bring security up to date	440 <Scanning Function>



● The operating procedures for frequently used functions are summarized in Quick Manual. (See page 458)

Contents

How to Read/Refer to This Manual.....	1	Safety Precautions.....	12
Easy Search	4	Notes on Handling	17
Contents	6	Intellectual Property Rights	20
Main Functions of FOMA P905i.....	8	Accessories and Main Options.....	22
Making Full Use of FOMA P905i!.....	10		

Before Using the Handset 23	Phone Parts and Functions, Styles, Display, Method for Selecting Menu, Simple Menu, Guide, UIM (FOMA Card), Battery, Charging, Power ON/OFF, Select Language, Initial Setting, Set Time, World Time Watch, Caller ID Notification, Own Number, etc.
Voice/Videophone Calls 49	Making a Call/Videophone Call, Switching between a Voice Call and Videophone Call, Call Records, Chaku-moji, WORLD CALL, Hands-free, Receiving a Call/Videophone Call, Answer Setting, Volume, Ring Volume, Public Mode (Drive Mode), Public Mode (Power Off), Record Message Setting, Chara-den, etc.
PushTalk 75	What is PushTalk?, Making a PushTalk Call, Add Member, Receiving a PushTalk Call, PushTalk Phonebook, Setting PushTalk Calling/Receiving, etc.
Phonebook 83	Available Phonebooks, Add to Phonebook (FOMA phone/UIM), Group Setting, Search Phonebook, No. of Phonebook, Two-touch Dial, Voice Dial, Data Security Service, etc.
Sound/Screen/Light Settings 97	Select Ring Tone, Vibrator, Manner Mode, Display Setting, Private Window, Backlight, Color Theme Setting, Menu Icon Setting, Kisekae Tool, Feel Settings, Illumination, Desktop Icon, Font, Character Size, etc.
Security Settings 117	Passwords, Change Security Code, UIM Setting, Releasing PIN Lock, Lock All, Omakase Lock, Self Mode, Personal Data Lock, Keypad Dial Lock, Secret Mode, Mail Security, Restrictions, Call Setting without ID, Reject Unknown, etc.
Camera 131	Before Using Cameras, Still Image Shoot, Moving Image Shoot, Settings for Shooting Images, Setting Image Size/Image Quality, Bar Code Reader, Text Reader
i-mode/i-motion/i-Channel 151	What is i-mode?, Menu, Last URL, My Menu, Change i-mode Password, Enter URL, Bookmark, Screen Memo, Download, i-mode Settings, SSL Certificate, Client Certificate, What is i-motion?, What is i-Channel?, etc.
Mail 171	i-mode Mail, Deco-mail, Template, Attachments, Photo-sending, Mail Auto-receive, Receive Option, Check New Message, Inbox, Outbox, Draft, Auto-sort, Message R/F, Area Mail, Chat Mail, SMS, Web Mail, etc.
i-appli 209	What is i-appli?, i-appli Download, i-appli Run, Appli Settings, Starting i-appli Automatically, i-appli Stand-by Display, Appli(microSD)
Osaifu-Keitai/ToruCa 223	What is Osaifu-Keitai?, What is iC Transfer Service?, Osaifu-Keitai Compatible i-appli, What is ToruCa?, Obtain ToruCa Files, ToruCa Viewer, ToruCa File List/Detailed ToruCa File Display, ToruCa Settings, IC Card Lock

GPS Function 231	About Using GPS Function, Position Location, GPS compatible i-øppli, Provide Location, Notify of Location, Location History, Service Settings, GPS Settings
One Seg 243	What is One Seg?, Before Using One Seg, Channel Setting, Activate 1Seg, Program Guide i-øppli, Data Broadcasting, TVlink, Recording One Seg, Book Program/Timer Recording, User Settings
Full Browser/PC Movie 259	Full Browser, Full Browser Settings, What is PC Movie?, Downloading PC Movies, PC Movie Player
Data Display/Edit/Management 271	Data Box, Picture Viewer, i-motion Player, Video Player, Chara-den, Melody Player, Kisekæ Tool, microSD Memory Card, Managing Folders, Infrared Data Exchange, iC Communication, PDF Viewer, Document Viewer, AV Output, etc.
Music&Video Channel/Music Playback 315	What is Music&Video Channel?, Setting Programs, Playing Back/Operating Programs, Playing Back Music, Saving Music Files, MUSIC Player, Playlist
Other Convenient Functions 331	Multiaccess, Multitask, Reading Aloud, Alarm, Schedule, ToDo, Private Menu Setting, Own Number, Voice Memo, Movie Memo, Call Data, Calculator, Text Memo, UIM Operation, Bluetooth, Reset Settings, Initialize, etc.
Character Entry 355	Character Entry, Mode 1 (5-touch), Common Phrases, Cut/Copy/Paste, Own Dictionary, Learned Words, Download Dictionary, Mode 2 (2-touch), Mode 3 (NIKO-touch)
Network Services 363	Check New Messages, Voice Mail, Call Waiting, Call Forwarding, Nuisance Call Blocking, Caller ID Request, Dual Network, English Guidance, Service Numbers, Arrival Call Act, Remote Control, Multi Number, 2in1, OFFICEED, Additional Service
PC Connection 379	Available Data Communication, Before Using, Preparation Flow for Data Communication, AT Command, CD-ROM, DoCoMo Keitai Datalink
Overseas Use 385	Outline of International Roaming (WORLD WING), Available Services, Confirmation for Using, Making a Call from the Country You Stay, Receiving a Call, Switch 3G/GSM, Network Search Mode, Operator Name Display, Set Roaming Guidance, Network Services, etc.
Appendix/External Devices/Troubleshooting 393	Function List, Options and Related Equipment, Troubleshooting, Error Messages, Warranty and Maintenance Services, i-mode Trouble Diagnosis Site, Software Update, Scanning Function, Specifications, Number of Savable/Storable/Protectable Items, SAR, Export Administration Regulations, etc.
Index/Quick Manual 449	Index, Quick Manual, Quick Manual "For Overseas Use"

Main Functions of FOMA P905i

FOMA (Freedom Of Mobile multimedia Access) is the name of the DoCoMo service based on the W-CDMA format, authorized as one of the world's standards for third-generation mobile telecommunication systems (IMT-2000).

Remarkable i-mode!

i-mode is an online service that enables you to get useful information from i-mode menu sites (programs) or i-mode web pages. This service also enables you to send or receive mail messages with ease.

◆ i-mode mail/Deco-mail/ Decomail-pictograph ▶▶ P.172, P.175, P.272

Besides mail text, you can attach up to 2 Mbytes of files or 10 files (JPEG, ToruCa, PDF, etc.) in total. The FOMA phone supports Deco-mail/Decomail-pictographs, so you can change the character color, character size, and background color of mail text, and insert images and moving pictographs.

◆ Mega i-oppai/Intuitive Games ▶▶ P.210

By downloading i-oppai programs from sites, you can enjoy playing games or have stock price information or weather forecasts updated automatically. As the large capacity mega i-oppai is supported, you can enjoy playing high-resolution 3D games and full-length role playing games.

In addition, the intuitive games are supported, which you can play by inclining or swinging your FOMA phone as you sense. As the voice recognition is supported by P905i, the operation responding to your voice is also available.

◆ High-Speed Area Supported ▶▶ P.380

FOMA High-Speed Area is supported so that high speed communication is available with download speed of up to 3.6 Mbps and upload speed of up to 384 kbps.

◆ International Roaming ▶▶ P.386

You can use your FOMA phone, phone number, and mail address overseas as they are. (Supported in GSM/3G area) Voice calls, videophone calls, i-mode, i-mode mail, SMS, and network services are available.

“しゃべって翻訳 for P (Speech Translation for P)”, which translates spoken Japanese into English and spoken English into Japanese, is pre-installed.

◆ GPS ▶▶ P.232

You can use the location information obtained by GPS to search for a map of your location and information of the surrounding area, notify of your location by attaching to mail, and navigate yourself to your destination. The pre-installed “地図アプリ (Map Application)” enables you to easily use the highly accurate map.

◆ Chaku-uta Full®/Uta-hodai/ Music&Video Channel※/Video Clips ▶▶ P.168, P.316, P.321, P.323

This FOMA phone supports Chaku-uta Full® that enables you to download a whole music file and Uta-hodai that enables you to enjoy listening music as much as you like at a flat rate.

This FOMA phone also supports Music&Video Channel that, just by setting up beforehand, automatically downloads music programs in the night. You can watch programs containing moving images on your P905i. Further, this FOMA phone supports up to 10 Mbytes of i-motion movies, so it also supports Video Clip that enables you to enjoy a whole music clip file.

- “Chaku-uta Full” is a registered trademark of Sony Music Entertainment Inc.

※ This is a pay service which is available on a subscription basis.

◆ Osaifu-Keitai/ToruCa ▶▶ P.224, P.225

By downloading Osaifu-Keitai compatible i-oppai, you can replenish electronic money from a site into the IC card in the FOMA phone and check your account for the balance and usage details. In addition, the “DCMX” i-oppai program that provides the DoCoMo credit service is pre-installed. Further, “iC transfer service” is supported so that you can easily move data from the existing IC card to a new one when you replace your FOMA phone such as at the time of phone model change.

ToruCa is an electronic card that you can obtain from scanning devices or sites and can easily exchange using mail or infrared data exchange.

◆ Kisekai Tool ▶▶ P.109, P.292

By downloading the displays of your favorite characters from an i-mode site, you can change the Stand-by display or Menu display at a time.

You can change the order of displayed menus according to the frequency of use to customize the Menu display as you like.

◆Bluetooth ▶▶ P.348

The wirelessly-connected FOMA phone and a Bluetooth device enable you to talk or listen to music while you are carrying the FOMA phone in your bag.

◆Feel * Talk/Feel * Mail ▶▶ P.109

Animation of 45 characters and illumination reproduces the atmosphere of conversation or mail messages. Pleasant animation appears or illumination lights according to the contents of the conversation or new mail message.

◆Wide VGA Display

You can display still or moving images in the wide VGA (480 dots x 854 dots) display of approx. 3.0 inches, and you can enjoy watching One Seg programs on the impressive display.

Also, the light sensor automatically adjusts the backlight in accordance with the ambient brightness, and the LCD AI compensates the image quality in accordance with the brightness.

◆Horizontal Open Style ▶▶ P.26

You can watch One Seg programs and videos in the wide horizontal display in Horizontal Open Style. Further, you can see the Internet web pages with Full Browser without scrolling sideways. Work with Style enables you to activate One Seg just by switching styles.

◆Security Settings ▶▶ P.117

Various settings such as the lock functions and security settings for "safety" are available.

■Omakase Lock ▶▶ P.120

When you have lost the FOMA phone, you can lock the FOMA phone and release it by contacting DoCoMo.

For inquiries, see the back page of this manual.

Omakase Lock is a pay service*.

※You are not charged if you apply for this service at the same time as applying for the suspension of the use or during the suspension.

●Note that Omakase Lock might be activated by an offer from the contractor of the FOMA phone when the contractor and the user of the FOMA phone differ.

■Data Security Service ▶▶ P.129

This service enables you to save Phonebook entries, images, and mail messages from your FOMA phone to the Data Storage Center, and restore the saved data, when you lost your FOMA phone or in other cases, to your FOMA phone from the Data Storage Center. Further, you can edit or manage data held at the Data Storage Center using your personal computer and can reflect the edited data to your FOMA phone.

For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode]". For inquiries, see the back page of this manual. Data Security Service is a pay service that is available on a subscription basis.

◆Network ▶▶ P.363

- Voice Mail Service (Charged)
 - A separate subscription is required.
- Dual Network Service (Charged)
 - A separate subscription is required.
- SMS (Free)
 - No subscription is required.
- Call Waiting Service (Charged)
 - A separate subscription is required.
- Multi Number (Charged)
 - A separate subscription is required.
- Call Forwarding Service (Free)
 - A separate subscription is required.
- 2in1 (Charged)
 - A separate subscription is required.

◆One-push Open ▶▶ P.26

■One-push Answer ▶▶ P.63

When a call comes in, just press the one-push open button, and you can open the FOMA phone to answer the call.

■Recv. Mail/Call at Open ▶▶ P.106

When a missed call or new mail message is found, just press the one-push open button, and you can open the FOMA phone to display the detailed Missed Call display or the Inbox List.

◆Mail Blind ▶▶ P.198

You can show the characters on the detailed mail display and Message Composition display in gray to make them hard to see from persons around you. (The characters on the Character Entry display are not shown in gray.)

◆Image Stabilizer ▶▶ P.144

Owing to the Image Stabilizer function, you can shoot still images or moving images with less blur by the outside camera.

◆Document Viewer ▶▶ P.310

On your FOMA phone, you can display Microsoft Word files, Microsoft Excel files, and Microsoft PowerPoint files created by personal computers.

Making Full Use of FOMA P905i!


◆ Videophone ▶▶ P.50

You can talk with a person who is away from you, seeing each other.
 By the default setting, the voice of the other party is set to be output from the speakers, so you can start talking immediately.
 You can switch, without disconnecting, from an ordinary voice call to a videophone call.


◆ PushTalk ▶▶ P.76

You can communicate with multiple persons (up to five persons including yourself) just by selecting them from the PushTalk Phonebook and pressing the PushTalk key.

Talk between two persons

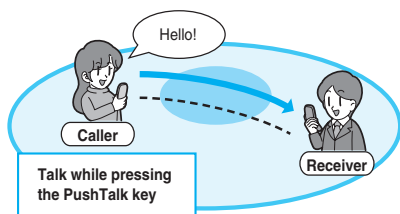

Talk with multiple persons

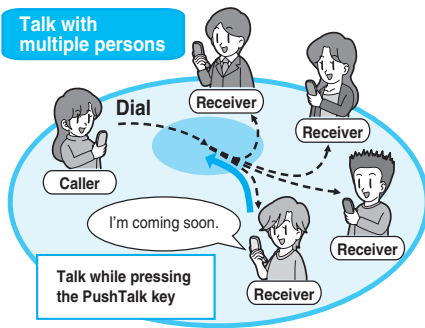


◆ i-Channel ▶▶ P.169

i-Channel distributes graphical information such as news or weather forecast.

By selecting a channel you want to see from the Channel List, you can obtain detailed expressive information created by Flash (see page 154).

- This is a pay service which is available on a subscription basis.
- The service is provided only in Japanese.

Before contract

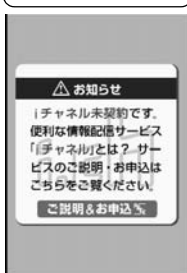

After contract



◆ One Seg ▶▶ P.244


You can watch One Seg (terrestrial digital TV broadcasting service for mobile objects) programs. You can display captions and data broadcasting, record video or still images from a program being broadcasted. Moreover, you can book the One Seg programs you want to watch or set timer recording. While watching a One Seg program, you can compose i-mode mail messages or check the sent/received i-mode mail messages by using multiple windows as well.



◆2in1 ▶▶P.372

This service enables you to have two numbers/two mail addresses on your single FOMA phone and to use your FOMA phone as if you were using two sets, by using the dedicated mode function. You can sort Phonebook entries, mail boxes, dialed/received call records, and Stand-by displays into “A mode” and “B mode” to manage them separately. You can also use “Dual mode” to simultaneously manage both A and B modes.

- This is a pay service which is available on a subscription basis.

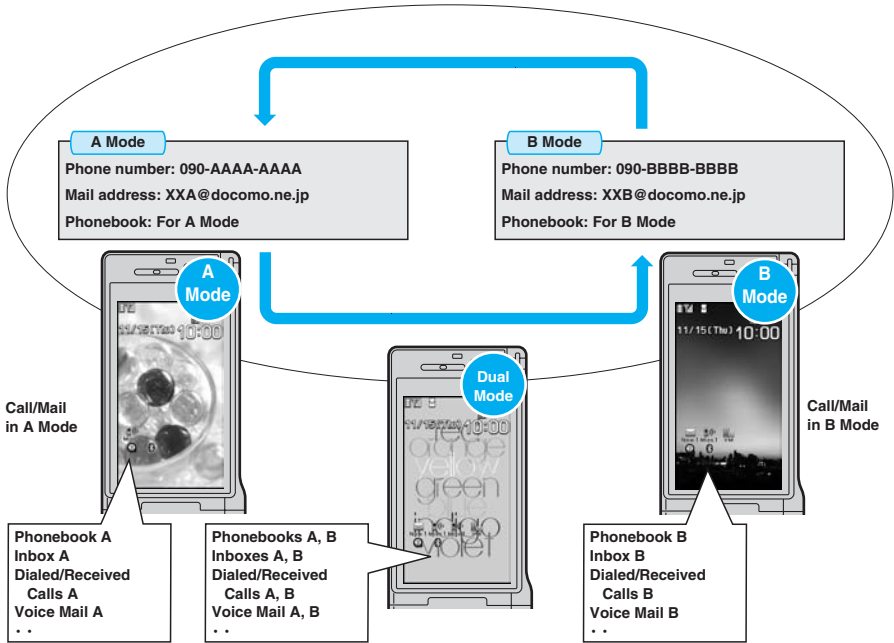

◆MUSIC Player ▶▶P.323

On a single player, you can play back and enjoy Chaku-uta Full® music files, Windows Media® Audio (WMA) files, and SD-Audio files.

You can download Chaku-uta Full® music files from sites and may be able to display their images and lyrics while playing them back.

In the case of SD-Audio or WMA files, you can obtain your favorite music files from music CDs or Internet web pages and save them on the microSD memory card by using your personal computer. You can save music files also by using the Napster® application program.



◆Chaku-moji ▶▶P.55

While calling up the other party, you can have your message displayed on his/her Call Receiving display. The receiving end can know your subject/feeling by reading the message before answering the call.

Safety Precautions

Always follow the safety precautions.

- Before using the FOMA phone, read these safety precautions carefully so that you can use it correctly. After reading the precautions, keep them in a safe place.
- Be sure to observe these safety precautions because they are designed to protect you or those around you from causing injury and to avoid unnecessary damage to the property.
- The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed.

	Danger	This symbol indicates that incorrect handling will almost certainly cause death or serious injury.
	Warning	This symbol indicates that incorrect handling poses a risk of causing death or serious injury.
	Caution	This symbol indicates that incorrect handling poses a risk of causing injury or damage to the product or property.

- The following symbols show specific directions:

	Denotes things not to do. (Prohibition)	
Don't		
	Do not disassemble	
	Not wet hands	
	Avoid Water	Denotes not to use where it could get wet or not to wet it.

	Do	Denotes mandatory instructions (matters that must be complied with).
	Pull the power plug out	Denotes to pull the power plug out of the outlet.

- “Safety Precautions” are divided into the following six sections:

General precautions for FOMA phone, batteries, adapters/chargers, and UIM.....	P.13
Precautions for FOMA phone.....	P.13
Precautions for batteries	P.15
Precautions for adapters/chargers.....	P.16
Precautions for UIM	P.17
Notes on using near electronic medical equipment	P.17

General precautions for FOMA phone, batteries, adapters/chargers, and UIM



Danger



Don't

Do not use, store or leave the FOMA phone and its accessories in places with a high temperature such as near fire or places exposed to direct sunlight, or in cars under the blazing sun.

The devices could be deformed or malfunction, or the battery may leak, overheat, burst, or catch fire, thus resulting in the deterioration of performance and shortening of the life of devices. Also, part of the case could get heated, causing bare skin burns.



Do not disassemble

Do not disassemble, modify or solder the FOMA phone or accessories.

Accidents such as fire, injury, or electric shock, or malfunction may result. The battery may leak, overheat, burst or catch fire.



Avoid Water

Do not wet the FOMA phone or accessories.

If liquids such as water or pet urine get onto them, overheating, electric shock, fire, malfunction, injury or others may result. Pay attention to the place of use and the way of handling.



Do

Use only the batteries and adapters/chargers approved by DoCoMo for your FOMA phone.

If you use any type of battery, adapter or charger other than the specified one, your FOMA phone, battery or other accessories may leak, overheat, burst, catch fire or malfunction.

Battery Pack P15

FOMA AC Adapter 01/02

FOMA AC Adapter 01 for Global use

FOMA DC Adapter 01/02

Desktop Holder P24

FOMA Dry Battery Adapter 01

FOMA Portable Charging Adapter 01

FOMA USB Cable with Charge Function 01

※For other compatible products, contact a handling counter such as a DoCoMo shop.



Warning



Don't

Do not place the batteries, the FOMA phone, adapters/chargers, or UIM in cooking appliances such as microwave ovens or high-pressure containers.

The battery may leak, overheat, burst, or catch fire. The FOMA phone or the adapter/charger may overheat, smoke, or catch fire, or its circuit parts may become damaged.



Don't

Do not throw the FOMA phone or accessories, or subject them to severe shocks.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Don't

Be careful not to let electroconductive materials (metal pieces, pencil leads etc.) contact with the charging terminals or connector terminal. Also, make sure that those are not entered into the inside of the FOMA phone.

Short-circuit could cause fire or malfunction of the FOMA phone.



Do

When you are in a place such as a gas station where flammable gas is generated, turn off the FOMA phone, and never do charging.

Otherwise, catching fire may result.

Ensure that you use Osafu-Keitai with the FOMA phone turned off when you are in the vicinity of the gas station. (When IC Card Lock is set, turn off the power with the lock released.)



Do

If odor, overheat, discoloration, or deformation is detected during use, battery charge, or storage, immediately observe the following:

1. Pull the power plug out of the outlet or cigarette lighter socket.

2. Turn off the power to the FOMA phone.

3. Remove the battery pack from the FOMA phone.

If you use the FOMA phone and its accessories as they are, overheat, burst, or catching fire could result or the battery could leak.



Caution



Don't

Do not place the FOMA phone or accessories on unstable locations such as wobbly tables or slanted locations.

The FOMA phone or accessories may fall, resulting in injury or malfunction.



Don't

Do not store in humid or dusty places, or in high temperature environments.

Malfunction may result.



Do

If children use the FOMA phone or accessories, a guardian should explain the safety precautions and correct operations.

The guardian should also make sure that the instructions are followed during use.

Otherwise, injury may result.



Do

Keep out of the reach of babies and infants.

Accidental swallowing or injury may result.



Do

Be especially careful when you use the FOMA phone for a long time with the adapter/charger connected.

If you use i-oppli programs, talk on the videophone, watch One Seg programs and so on for a long time during charging, the temperature of the FOMA phone, battery pack, or adapter/charger might rise.

If you directly touch the part of high temperature continuously, redness, itching, rash, or low-temperature bare skin burns may result depending on your physical conditions or predisposition.

Precautions for FOMA phone



Warning



Don't

Do not directly point the infrared data port at someone's eyes during transmission.

His/her eyes may possibly be affected. Other infrared devices may operate erroneously if the infrared data port is pointed at them during transmission.



Don't

Do not shine the photo light close to eyes.

Doing so can damage eyesight. Also, accidents such as injury might occur if someone is startled or dazzled by the light.



Don't

Do not put the FOMA phone in the place where it could be affected by an expanded airbag, e.g., on the dashboard.

If the airbag expands, the FOMA phone could hit you and others, causing accidents such as injury and the FOMA phone could malfunction and become damaged.



Don't

If you have any implanted electronic medical equipment, do not place your FOMA phone in a chest pocket or inner pocket.

If the FOMA phone is positioned close to electronic medical equipment, it may cause that equipment to malfunction.



Don't

Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the UIM or microSD memory card slot of the FOMA phone.

Fire, electric shock or malfunction may result.



Don't

Do not turn on the photo light to drivers of cars, and others.

It disturbs driving, and accidents may result.



Do

Turn off the FOMA phone in places where use is prohibited such as in airplanes and hospitals.

Otherwise, electronic devices and electronic medical appliances may be adversely affected. If the Auto Power ON function is set, deactivate the setting, then turn the power off.

For use inside medical facilities, make sure that you comply with their regulations.

You may be punished for using the FOMA phone in airplanes, which is prohibited by law.



Do

When talking with the FOMA phone set to Hands-free, be sure to keep the FOMA phone away from your ear.

Further, when you play games or play back music with the earphone/microphone connected, adjust the sound volume to moderate volume.

The excessive sound volume impairs your hearing. Further, accidents may result due to the hardness of hearing of surrounding sound.



Do

For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully.

Those functions may cause an effect on the heart.



Do

If thunder starts to rumble while you are using the FOMA phone outdoors, house the antenna, turn off the power, and move to a safe place.

Otherwise, you could be struck by lightning or suffer an electric shock.



Do

Turn off the FOMA phone when near electronic devices using high-precision control or weak signals.

The FOMA phone may possibly cause these devices to malfunction.

※Electronic devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.

If you use an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



Do

If the display part or camera lens is broken, be careful about broken glasses or the exposed interior of the FOMA phone.

Plastic panels are used for the surfaces of the display part and camera lens so that glasses do not easily get scattered, however, pay attention not to erroneously touch the broken part or interior. Otherwise, injury may result.

**Caution**

Don't

Do not swing the FOMA phone by its antenna or strap.

The FOMA phone may hit you or persons around you, and accidents such as injury or malfunction and damage may result.



Don't

Do not use in places crowded with people.

The antenna may hit against others, causing injury.



Don't

Do not use the FOMA phone with the damaged antenna.

If the damaged antenna comes in contact with your skin, injury such as a burn could be caused.



Don't

When using the motion tracking, ensure that you check around you for safety, securely take hold of your FOMA phone, and do not swing to an extent more than necessitated.

The motion tracking is the function to incline or swing the FOMA phone for operation. If you excessively swing your FOMA phone, it might happen that it hits against persons or objects, resulting in critical accidents or damage.



Don't

When a metallic strap is attached to your FOMA phone, be careful that it does not hit against persons or objects when using the motion tracking.

Accidents such as injury or malfunction and damage may result.



Don't

Do not place magnetic cards or similar objects near the FOMA phone or between phone parts.

Information on magnetic cards such as cash cards, credit cards, telephone cards and floppy disks may be deleted.



Don't

Do not bring magnetic substances close to your FOMA phone.

Strong magnetic items might cause in erroneous operation.



Don't

If you erroneously break the display part and then crystal liquid get leaked, never take or suck the liquid to or into your mouth, or apply to skin.

If the crystal liquid gets into the eyes or mouth, immediately cleanse with clean water and then seek medical attention. When it adheres to your skin or clothes, immediately wipe it away with alcohol etc., and then cleanse with soap.

Otherwise, the loss of eyesight or injury to your skin may result.



Don't

Do not bring your ears close to the speakers while a ring tone sounds or a melody is played back from the FOMA phone.

Otherwise, your hearing could be impaired.



Don't

Do not open the FOMA phone by pressing the one-push open button near persons around you or your face.

The FOMA phone may hit you or persons around you, causing accidents and injuries.



Don't

Do not use the FOMA phone with the hook for Horizontal Open Style protruded.

Otherwise, injury may result.



Do

Electronic devices in some types of cars can be affected by use of the FOMA phone.

For safety's sake, make sure not to use the FOMA phone inside such cars.



Do

Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the FOMA phone immediately, and then seek medical attention.

Metals are used for the following parts:

Where it is used	Material	Finishing
Charging terminal	Phosphor bronze	Gold-plated finish with nickel-plated ground
Metal part of the One Seg antenna	Brass	Chrome-plated finish with nickel-plated ground
Hook for Horizontal Open Style	Stainless steel	Chrome-plated finish with nickel-plated ground
Command Navigation key	Polycarbonate	Steam pressed aluminum, Hard coat
"P905" logo panel on the Private window side	ABS	Steam pressed tin, Hard coat
Metal part of the one-push open button	Aluminum	—



Do

Be careful not to get your finger or a strap caught between the FOMA phone when you close or open it.

Accidents such as injury or damage may result.



Do

When you watch a One Seg program, watch in a place bright enough taking a certain distance from the display.

Otherwise, your visual acuity could be reduced.

Precautions for batteries

■ Check the description on the label of the battery pack for the type of battery.

Description	Type
Li-ion	Lithium-ion battery



Danger



Don't

Do not let any metal object such as a wire come in contact the battery terminals. Also do not carry or store the battery together with any metal objects like a necklace.

The battery may leak, overheat, burst or catch fire.



Don't

Do not use excessive force to attach the battery to the FOMA phone even when you cannot attach it successfully. Also, check that the battery is the right way round when you attach it.

The battery may leak, overheat, burst or catch fire.



Don't

Do not throw the battery into fire.

The battery may leak, overheat, burst or catch fire.



Don't

Do not pierce it with nails, hit it with a hammer, or step on it.

The battery may leak, overheat, burst or catch fire.



Do

If the battery fluid gets into your eyes, do not rub them. Flush your eyes with clean water and seek medical attention immediately.

Otherwise, the loss of eyesight may result.



Warning



Do

If charging is not completed at the end of the specified charging time, stop charging.

Otherwise, the battery may leak, overheat, become damaged or catch fire.



Do

Immediately stop using the FOMA phone and keep it away from fire if the battery leaks or emits an odor.

The leaked battery fluid may ignite, causing fire or burst.



Do

When any abnormality due to external shock such as the deformation or scratches by dropping is found on the battery pack, immediately stop using it.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Do

Be careful that your pets do not bite into the battery pack.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Don't

Do not place something heavy on the adapter/charger cord and power cord.

Electric shock or fire may result.



Not wet hands

Do not touch the power cord of the adapter/charger, or power outlet with wet hands.

Electric shock may result.



Do

Use the adapter/charger at the specified V AC.

If you use it at a wrong voltage, fire or malfunction may result. When using the FOMA phone overseas, use FOMA AC adapter available overseas.

AC adapter: 100 V AC

DC adapter: 12/24 V DC

[For negative (-) grounded vehicles only]

AC adapter available overseas: 100 V to 240 V AC

[Connect only to household AC outlet]



Do

If a fuse of the DC adapter has blown, replace it with a specified fuse.

If you use an unspecified fuse, fire or malfunction may result. For the specified fuse, refer to each instruction manual.



Do

Keep the power plugs dust-free.

Otherwise, fire may result.



Do

When pulling the AC adapter into the power outlet, firmly plug it in, taking care not to contact with metal straps or the like.

Otherwise, electric shock, short-circuit or fire may result.



Do

When removing the adapter/charger out of the outlet or cigarette lighter socket, do not forcibly pull the adapter/charger cord or power cord, instead take hold of the power plug and then pull.

If you pull the plug out by the cord, the cord may be damaged, which could result in electric shock or fire.



Pull the power plug out

When the adapter/charger is not to be used for a long period of time, unplug the power cord from the outlet.

Otherwise, electric shock, fire, or malfunction may result.



Pull the power plug out

If liquids such as water get in the charger, unplug the power cord immediately from the outlet or cigarette lighter socket.

Otherwise, electric shock, smoke or fire may result.



Pull the power plug out

Before cleaning, pull the power plug out of the outlet or cigarette lighter socket.

Otherwise, electric shock may result.



Caution

An exhausted battery should not be disposed of with other waste.

The battery may catch fire or damage the environment. After insulating the battery terminals with tape, take it to a handling counter such as a DoCoMo shop or dispose of it in accordance with local waste disposal regulations.



Don't

Do not charge the wet battery.

The battery pack may overheat, catch fire, or burst.



Don't



Do

If the battery fluid comes in contact with skin or clothes, immediately stop using, then rinse it out thoroughly with clean water.

Skin injury may result.

Precautions for adapters/chargers



Warning

Do not use a damaged adapter/charger cord or power cord.

Electric shock, overheating or fire may result.



Don't

Do not use the AC adapter and desktop holder in steamy places such as a bathroom.

Electric shock may occur.



Don't

The DC adapter is for use only in a negative (-) grounded vehicle. Do not use it in a positive (+) grounded vehicle.

Fire may result.



Don't

If it starts to thunder, do not touch the FOMA phone and adapter/charger.

You might be struck by lightning or suffer an electric shock.



Don't

Never short-circuit the charging terminals when the adapter is plugged into the power outlet or cigarette lighter socket. Also, never touch the charging terminals with fingers or other bare skin.

Fire, malfunction, electric shock or injury may result.



Don't

Place the charger and desktop holder on a stable location during charging. Do not cover or wrap the charger and desktop holder in cloth or bedding.

The FOMA phone may drop off, or the charger and desktop holder may overheat, causing fire or malfunction.



Don't

Precautions for UIM



Caution



Do

Be careful not to touch the cut surface of the UIM (IC portion) when removing it.
You may hurt your hand or fingers.

Notes on using near electronic medical equipment

- The description below meets “Guidelines on the Use of Radio-communication Equipment such as Cellular Telephones – Safeguards for Electronic Medical Equipment” by the Electromagnetic Compatibility Conference Japan.



Warning



Do

Comply with the following in hospitals or health care facilities:

- Do not carry the FOMA phone into operating rooms, intensive care units (ICU) or coronary care units (CCU).
- Turn off the FOMA phone in hospital wards.
- If there is any electronic medical equipment near you, turn off the FOMA phone even when in a location such as a lobby.
- Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.
- If the Auto Power ON function is set, deactivate the setting, then turn the power off.



Do

Turn off the FOMA phone in crowded areas such as inside trains during rush hour, as someone with an implanted cardiac pacemaker or implanted defibrillator may be near you.

Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



Do

If you use an implanted cardiac pacemaker or implanted defibrillator, use the mobile phone 22 cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



Do

Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

Operation of electronic medical equipment can be affected by radio waves.

Notes on Handling

General notes

- **Do not wet the equipment.**

The FOMA phone, battery, adapter/charger, and UIM are not waterproofed. Do not use them in environments, which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them against your body, they become moist due to perspiration and the internal parts may become corroded, causing malfunction. If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible. This may be repaired at a cost if repairs are possible.

- **Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.**

● The screen of the FOMA phone sometimes has a special coating so that they are easier to see. If you rub it roughly with a dry cloth, it might be scratched. Take care of the way of handling, and use only a dry, soft cloth such as the one for cleaning glasses. If the screen is left with water drop or stain adhered, smear may be generated or the coating might peel off.

● Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.

- **Occasionally clean the terminals of the equipment using a dry cotton swab.**

If the terminals become soiled, the connection might deteriorate so that the power turns off or the battery does not charge fully. Wipe the terminals with a dry cloth or cotton swab.

- **Do not place the FOMA phone near an air conditioner outlets.**

Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.

- **Do not apply excessive force onto the FOMA phone and battery pack.**

If you put the FOMA phone in a bag along with many other articles or sit with the FOMA phone in a clothes pocket, the display, internal circuitry and the battery pack could be damaged or malfunction. Also, if your FOMA phone is left with an external device connected to the connector terminal or Earphone/Microphone/AV output terminal, the connector could be damaged, or malfunction.

- **Carefully read each instruction manual attached to the FOMA phone, battery pack, adapter/charger, or desktop holder.**

- **Do not rub or scratch the display part with metals.**

Doing so might cause damage to the part, resulting in trouble or malfunction.

Notes on handling the FOMA phone

- **Avoid using in extremely high or low temperatures.**

The FOMA phone should be used within a temperature range of 5°C to 35°C and a humidity range of 45% to 85%.

- **The FOMA phone, if operated near landline phones, television sets, radios or other devices that are in use, may affect them. You should operate your FOMA phone as far away from such equipment as possible.**

- It is recommended that you make separate notes of the information stored in the FOMA phone and keep such notes in a safe place.

We take no responsibility for any loss of the stored data items.

- Do not insert an external device to the connector terminal or Earphone/Microphone/AV output terminal at a slant when connecting, and do not pull it out when it is inserted.

Malfunction or damage may result.

- Make sure that nothing, such as a strap, gets caught between the parts of the FOMA phone when you close it.

Otherwise, malfunction or damage may result.

- The FOMA phone becomes warm during use or charging but this is not an abnormality. Use the FOMA phone as it is.

- Do not leave the camera in places exposed to direct sunlight.

Pixels may be discolored or burns may result.

- Usually, use the FOMA phone with the covers of the Earphone/Microphone/AV output terminal and connector terminal mounted.

Dust or water might enter into the FOMA phone, causing malfunction.

- Do not use the FOMA phone with the back cover left removed.

The battery pack might come out, or malfunction or damage may result.

- Do not apply an excessively thick sticker onto the surfaces of the display, keys, or buttons.

Malfunction may result.

- While you are using the microSD memory card, never take it off or turn off the power to the FOMA phone.

Data may be erased or malfunction may result.

Notes on handling batteries

- Batteries have a limited life.

Though it varies depending on the usage state, you are advised to replace the battery if its usable time is extremely short even when you fully charge it. Make sure that you buy the specified battery.

- Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.

- Make sure that the battery is charged when you use the FOMA phone for the first time or have not used it for a long period of time.

- The usable time of the battery differs depending on the usage environment or its remaining life.

- Depending on how the battery pack is used, it might swell as its operating life becomes short, but this is not a problem.

- Do not store or leave the empty battery pack.

The performance and operating life of the battery pack might be lowered or shortened.

Notes on handling chargers/adapters

- Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.

- Charge the battery where:

- There is very little humidity, vibration, and dust.
- There are no landline phones, television sets or radios nearby.

- During charging, the adapter/charger may become warm. This is not an abnormality, so continue charging.

- Do not use the DC adapter for charging the battery when the car engine is not running.

The car battery could go flat.

- When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.

- Do not give a strong shock. Also, do not deform the charging terminals or terminal guide.

Malfunction may result.

Notes on handling the UIM

- Never use more force than necessary when inserting/removing the UIM.

- The UIM may become warm during use, but this is not a sign of a malfunction. Continue using it as it is.

- The warranty does not cover damage caused by inserting the UIM into some other types of IC card reader/writer.

- Always keep the IC portion clean.

- Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.

- It is recommended that you make separate notes of the information stored on the UIM and keep such notes in a safe place.

We take no responsibility for any loss of the stored data items.

- For the environmental protection, bring any unneeded UIMs to a handling counter such as a DoCoMo shop.

- Avoid using in extremely high or low temperatures.

- Do not damage, carelessly touch, or short-circuit the IC.

Data might be lost or malfunction may result.

- Do not drop the UIM or subject it to strong impacts.

Malfunction may result.

- Do not bend the UIM or place something heavy on it.

Malfunction may result.

- Into the FOMA phone, do not insert the UIM with a label or sticker pasted.

Malfunction may result.

Notes on handling the camera

- You may be imposed punishment according to the law and rule (such as the nuisance prevention ordinance) if you use the FOMA phone to give a remarkable nuisance and misdeed to the public.



Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

Notes on using Bluetooth function

- FOMA phone supports the security function that meets the Bluetooth Specification for the security during connection using Bluetooth. However, the security may not be sufficient depending on the configuration. Take care of the security while making connection using Bluetooth.
- Note that even if any leak of data or information occurs while making connection using Bluetooth, we take no responsibility.
- With the FOMA phone, you can use the following: Headset, Hands-Free, Audio, Dial-up Communication, Object Push, and Serial Port. With Audio, you might be able to use Audio Video Remote Control. (Only with the compatible Bluetooth devices)

Supported version

Bluetooth Specification Ver. 1.2 compliant※1

Supported profiles※2 (Supported services)

HSP

Headset Profile

HFP

Hands-Free Profile

A2DP

Advanced Audio Distribution Profile

AVRCP

Audio Video Remote Control Profile

DUNP

Dial-up Networking Profile

OPP

Object Push Profile

SPP

Serial Port Profile

※1 The FOMA phone and all Bluetooth function-installed devices have ensured that they conform to the Bluetooth Specification according to the rules the Bluetooth SIG defines, and are all authenticated. However, operating methods might differ, or data might not be exchanged even when they are connected wirelessly, depending on the features or specifications of connecting devices.

※2 Standardizes the connecting procedures of Bluetooth per feature of a device.

Radio frequencies

The radio frequencies the Bluetooth function of the FOMA phone uses are as follows:

2.4 FH 1



2.4 : Indicates radio facilities that use 2400 MHz frequencies.

FH : Indicates the modulation system is the FH-SS system.

1 : Indicates that a supposed coverage distance is 10 meters or less.

: Indicates that all radio frequencies 2400 MHz through 2483.5 MHz are used, and that the frequencies for mobile object identifiers shall not be avoided.

■ Cautions on Using Bluetooth Devices

Bluetooth operates at radio frequencies assigned to the in-house radio stations for a mobile object identifier that have to be licensed and is used in production lines of a factory, specific unlicensed low power radio stations, and amateur radio stations (hereafter, referred to “another radio station”) in addition to scientific, medical, or industrial devices such as microwave ovens.

1. Before using this product, make sure that “another radio station” is not operating nearby.
2. If radio interference between this product and “another radio station” occurs, move immediately to another place or stop radio transmission to avoid interference.
3. Contact the following for further details:

DoCoMo Information Center:



0120-005-250 (in English, toll free)

0120-800-000 (in Japanese, toll free)


※ Can be called from mobile phones and PHSs.

Notes on handling the FeliCa reader/writer

- The FeliCa reader/writer function on the FOMA phone uses very weak radio waves which do not require to be licensed as radio stations.
- The FeliCa reader/writer is operated on the 13.56 MHz frequencies. When you use another reader/writer nearby, take enough distance between your FOMA phone and the reader/writer. Further, ensure that there are no radio stations that use the same frequencies.

Caution

- Do not use the modified FOMA phone. Using a modified FOMA phone infringes the Radio Law.

The FOMA phones are granted technical regulations conformity certification as the specified radio equipment under the Radio Law and bear a “technical conformity mark ” on the nameplate as evidence of conformity. Unscrewing the FOMA phone and modifying internal components void the technical regulations conformity certification. Do not use the FOMA phone in this state, which infringes the Radio Law.

- Be especially careful not to operate the FOMA phone while driving.

You will be imposed punishment if you use the mobile phone in your hand while driving. If you answer a call out of necessity, tell the caller with Hands-free that you will call him/her back, park your car to somewhere safe, and then dial.

- Use the Bluetooth functions in Japan only.

The Bluetooth functions on the FOMA phone have been authorized in compliance with the radio transmission standards in Japan.

You might be imposed punishment if you use it overseas.

- Use the FeliCa reader/writer functions in Japan only.

The FeliCa reader/writer functions on the FOMA phone have been authorized in compliance with the radio transmission standards in Japan.



You might be imposed punishment if you use it overseas.

Intellectual Property Rights

Copyrights and Portrait Rights



You have no right to copy, modify, or distribute the contents such as text, images, music, or software programs downloaded from web pages on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law. Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait rights.

Trademarks

- "FOMA", "mova", "PushTalk", "PushTalkPlus", "i-mode", "i-oppli", "i-oppliDX", "i-motion", "Deco-mail", "Chaku-motion", "Chara-den", "ToruCa", "mopera", "mopera U", "WORLD CALL", "Dual Network", "FirstPass", "visualnet", "V-live", "i-Channel", "DCMX", "iD", "Security Scan", "i-shot", "i-motion mail", "i-area", "Short Mail", "WORLD WING", "Public mode", "DoPa", "sigmarion", "musea", "IMCS", "OFFICEED", "2in1", "Chokkan Game", and the logos of "FOMA", "i-mode", "i-oppli", "DCMX", "iC", "iD", "Music&Video Channel", "HIGH-SPEED" and "WORLD WING" are trademarks or registered trademarks of NTT DoCoMo, Inc.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates. 
- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- NAVIDIAL and NAVIDIAL logo mark are trademarks of NTT Communications Corporation.
- Microsoft®, Windows®, and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- Windows Media® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Powered by JBlend™ Copyright 2002-2006 Aplx Corporation. All rights reserved.  JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplx Corporation in Japan and other countries.
-  is a registered trademark of FeliCa Networks, Inc.

- The microSD logo is a trademark. 
- The microSDHC logo is a trademark. 
- "Multitask" is a registered trademark of NEC Corporation.
- QR code is a registered trademark of Denso Wave Inc.
- 使いかたナビ® is a registered trademark of CANNAC, Inc.
- "VIERA" is a registered trademark of Matsushita Electric Industrial Co., Ltd.
- Java and Java related trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
- The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by NTT DoCoMo, Inc. is under license. Other trademarks and trade names are those of their respective owners.
- Powered by Mascot Capsule®/Micro3D Edition™ Mascot Capsule® is a trademark of HI CORPORATION.
- The image stabilization technology utilized is PhotoSolid®, a product of Morpho, Inc. PhotoSolid® is the registered trademark of Morpho, Inc. in Japan and other countries.
- Napster is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
- Other company names and product names described in the text are trademarks or registered trademarks of those companies.

Others

- This product contains NetFront Sync Client of  ACCESS CO., LTD. Copyright © 2007 ACCESS CO., LTD. All rights reserved. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.
- This product contains IrFront software of ACCESS CO., LTD. Copyright © 1996-2007 ACCESS CO., LTD. ACCESS and IrFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.
- Contains Flash® Lite™ and Adobe® Reader® technology by Adobe Systems Incorporated.  Flash Lite copyright © 1995-2007 Adobe Macromedia Software LLC. All rights reserved. Adobe Reader copyright © 1984-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Flash, Flash Lite and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.



 
- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307	5,504,773	5,109,390
5,535,239	5,267,262	5,600,754
5,416,797	5,490,165	5,101,501
5,511,073	5,267,261	5,568,483
5,414,796	5,659,569	5,056,109
5,506,865	5,228,054	5,544,196
5,337,338	5,657,420	5,710,784
5,778,338		
- This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc.
For more details, see "readme.txt" in the "GPL・LGPL等について" folder on the bundled CD-ROM. ("readme.txt" is only available in Japanese version.)
- Advanced Wnn V2 of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.
"Advanced Wnn V2" © OMRON SOFTWARE Co., LTD. 1999-2007 All Right Reserved.
- This product is loaded with Bluetooth® Stack for Embedded Systems Spec 1.2 developed by Toshiba Corp.
- This product contains "Sense", the voice analysis technology of Alegria Corporation for Feel* Talk.
- This product is licensed under the MPEG-4 patent portfolio license for the personal and non-commercial use of a consumer to
 - (i) encode video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or
 - (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider.
 No license is granted or implied for any other use.
Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.
- This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to
 - (i) encode video in compliance with the AVC Standard ("AVC Video") and/or
 - (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video.
 No license is granted or shall be implied for any other use.
Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.
- This product is licensed under the VC-1 patent portfolio license for the personal and non-commercial use of a consumer to
 - (i) encode video in compliance with the VC-1 Standard ("VC-1 Video") and/or
 - (ii) decode VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide VC-1 Video.
 No license is granted or shall be implied for any other use.
Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.
- Copyright 2001 Seiko Epson Corporation.
All Rights Reserved. PRINT Image Matching is a trademark of Seiko Epson Corporation.
The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.
- This product is manufactured or sold under license from InterDigital Technology Corporation.
- This product uses GestureTek's technology.
Copyright © 2006, GestureTek, Inc. All Rights Reserved.
- The abbreviations used for respective operating systems (Japanese version) in this manual are as shown below:
Windows Vista is the abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, and Ultimate).
Windows XP is the abbreviation of Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.
Windows 2000 is the abbreviation of Microsoft® Windows® 2000 Professional operating system.
- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.

Accessories and Main Options

<Accessories>

- **FOMA P905i Handset**
(With Warranty and Back Cover P22)



- **FOMA P905i CD-ROM**
The PDF versions of "Manual for PC connection setting" and "Kuten Code List" are included.




- **Instruction Manual**
Quick Manual included (See page 458)




<Main Options>

- **FOMA AC Adapter 01/02**
(With Warranty and Instruction Manual)

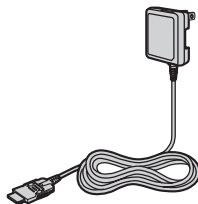

- **Desktop Holder P24**
(With Instruction Manual)

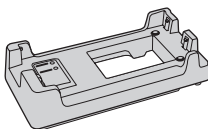

- **Battery Pack P15**
(With Instruction Manual)




Other Options → See page 421

Before Using the Handset



Phone Parts and Functions	24
Styles	26
Navigation Displays and Key Operations	27
Display	28
Displaying Description of Icons..... <Icons>	30
Private Window	30
Method for Selecting Menu	31
Using Simple Menu	35
When You do not Remember Key Operation	<Guide> 36
Using UIM (FOMA Card)	38
Attaching/Removing Batteries	41
Charging FOMA Phone	42
Checking Battery Level	<Battery Level> 44
Turning Power On/Off	<Power ON/OFF> 44
Switching to English	<Select Language> 45
Executing Initial Settings	<Initial Setting> 45
Setting Date and Time	<Set Time> 46
Displaying World Time	<World Time Watch> 47
Notifying the Other Party of Your Phone Number	<Caller ID Notification> 47
Checking Your Own Number	<Own Number> 48


Phone Parts and Functions

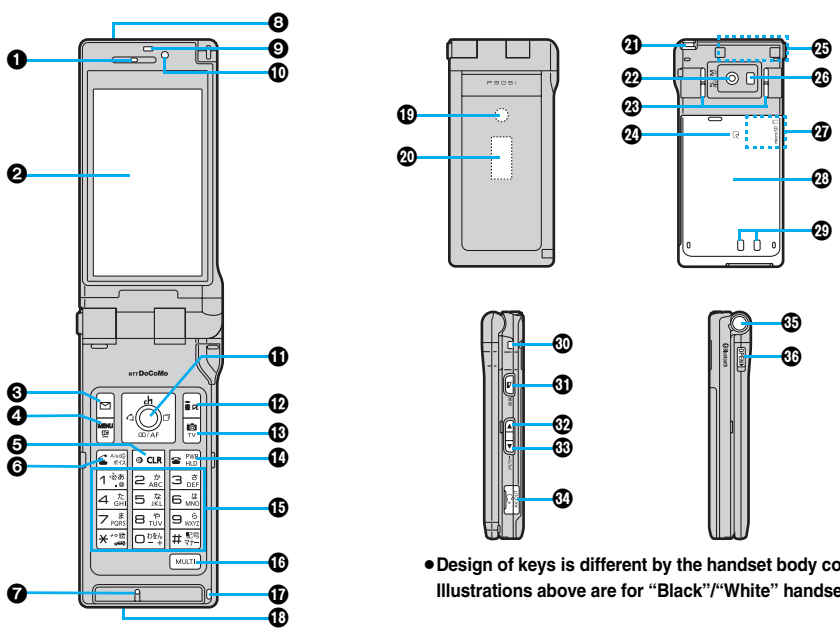

● Design of keys is different by the handset body color. Illustrations above are for "Black"/"White" handset.

■ For inserting or pulling the Flat-plug Earphone/Microphone with Switch (option)

Take hold of the plug and insert or pull it straight into or out. Be careful not to take hold of the cover and plug together when you pull it out.

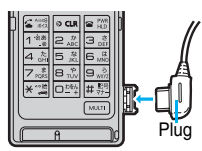

- 1 Earpiece**
 - For listening to the other party's voice
- 2 Display**
 - (See page 28)
- 3 Mail key**
 - For showing the Mail menu (See page 187)
 - For operating the function corresponding to the navigation displays (See page 27)
 - <Press and hold for at least one second>**
 - For checking new mail messages (See page 183)
- 4 MENU Menu key/IC Card Lock key**
 - For showing Main Menu (See page 31)
 - For operating the function corresponding to the navigation displays (See page 27)
 - <Press and hold for at least one second>**
 - For locking the IC card (See page 230)
- 5 CLR Clear key**
 - For returning to the previous operation
 - For clearing entered text or a phone number
 - <Press and hold for at least one second>**
 - For resetting Main Menu (See page 109)

- 6 Send/Answer key, Hands-free key**
 - For making/receiving calls (See page 50 and page 60)
 - For talking with Hands-free (See page 60)
 - <Press and hold for at least one second>**
 - For accessing a voice dial entry (See page 94)
- 7 Microphone**
 - For speaking to the other party
- 8 Infrared data port**
 - Used for infrared data exchange and the infrared remote-controller. (See page 303 and page 306)
- 9 Light sensor**
 - For sensing brightness (See page 107)
- 10 Inside camera**
 - For shooting photos of yourself (See page 133)
 - For catching sight of yourself during a videophone call
- 11 Command Navigation key**
 - For operating functions and menus (See page 27)

12  **i-mode key/i-appli key**

- For showing the i-mode menu (See page 152)
- For operating the function corresponding to the navigation displays (See page 27)

<Press and hold for at least one second>

- For showing the i-appli Software List (See page 211)

13  **Camera key/One Seg key**

- For activating a camera in "Photo mode" (See page 139)
- For switching the camera mode while a camera is activated (See page 143)
- For operating the function corresponding to the navigation displays (See page 27)

<Press and hold for at least one second>

- For starting One Seg (See page 247)

14  **Power/End key**

- For ending calls · For ending respective functions
- For turning on the power (for at least one second)/For turning off the power (for at least two seconds) (See page 44)

15 **Numeric keys**

- For entering phone numbers and text
- **#** (for at least one second)
For activating Manner Mode (See page 102)
- **X** (for at least one second)
For activating Public Mode (Drive Mode) (See page 65)
- **1** (for at least one second)
For measuring your current location and executing the GPS function (See page 232)
- **5** (for at least one second)
For switching the backlight on/off (See page 107)

16  **Multi key**

- For showing the Multitask menu (See page 333)

<Press and hold for at least one second>

- For showing the display for setting "Switch 3G/GSM" (See page 390)
- For switching functions, when multiple functions are running (See page 333)

17 **Hook for Horizontal Open Style****18** **Connector terminal**

- For connecting the AC adapter (option), DC adapter (option), or FOMA USB Cable with Charge Function 01 (option)

19 **Call/Charging indicator**

- Flickers for incoming calls/mail and during a call. (See page 111)
- Lights in red during charging.

20 **Private window**

- (See page 30)

21 **One Seg antenna**

- For receiving One Seg broadcasting (See page 245)

22 **Outside camera**

- For shooting portraits and/or landscapes (See page 133)
- For catching sight of persons and/or landscapes during a videophone call

23 **Speakers**

- For sounding ring tone
- For listening to the other party's voice through this speaker when Hands-free is activated (See page 60)

24 **FeliCa mark**

- The IC card is mounted.
- Use the IC card function placing this mark over the scanning device. You cannot dismount the IC card. (See page 225)

25 **FOMA antenna**

- The FOMA antenna is embedded in the FOMA phone. Do not cover the antenna with your hand for better communication.

26 **Photo light**

- Flickers when you shoot with a camera.
- Used for shooting in a dark place. (See page 143)

27 **microSD memory card slot**


- For inserting microSD memory card (See page 293)

28 **Back cover**

- Remove this when attaching/removing the battery pack, UIM, and microSD memory card. (See page 38, page 41 and page 293)
- Do not peel off the black sticker on the back of the back cover. If you peel it off, you might not be able to read and write the IC card.

29 **Charging terminals****30** **Strap hole****31**  **PushTalk key**

- For making/receiving PushTalk calls (See page 76 and page 78)
- For showing the PushTalk Phonebook (See page 79)
- <Press and hold for at least one second>**
- For activating "MUSIC Player" (See page 323)

32  **Side upper key**

- For scrolling up page by page

<Press and hold for at least one second with the FOMA phone opened>

- For activating 2in1 (See page 372)

33  **Side lower key**

- For scrolling down page by page
- For using Record Message (See page 68)
- For checking for missed calls and new mail (See page 112)

<Press and hold for at least one second with the FOMA phone closed>

- For activating Manner Mode (See page 102)

34 **Earphone/Microphone/AV output terminal**

- (See page 312 and page 346)

35 **One-push open button**

- (See page 26)

36 **Horizontal open lever**

- (See page 26)


Styles

The P905i comes with two styles.

Normal Style

You can open the FOMA phone easily by one-push key operation. (One-push Open)


- You can open it also manually without using the button.
- You need to close the FOMA phone manually. If it does not close, open it fully and then close it.

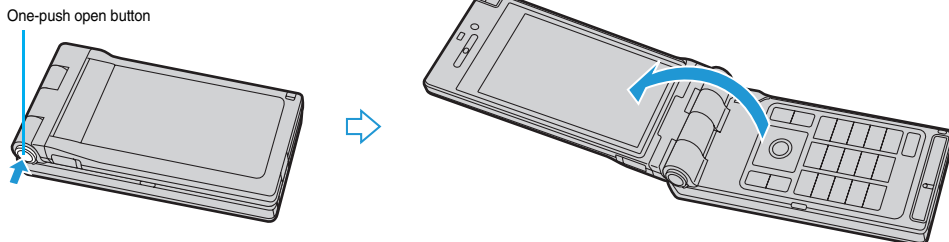

Horizontal Open Style

Hold down the part A and open the display part with the horizontal open lever slid into the direction B. You can watch One Seg programs and use Full Browser in a wide horizontal display.

- You can use most functions in Horizontal Open Style even if they are not shown in a wide horizontal display.
- If the FOMA phone is not in state of C when you open the display, re-open the FOMA phone after closing it once.

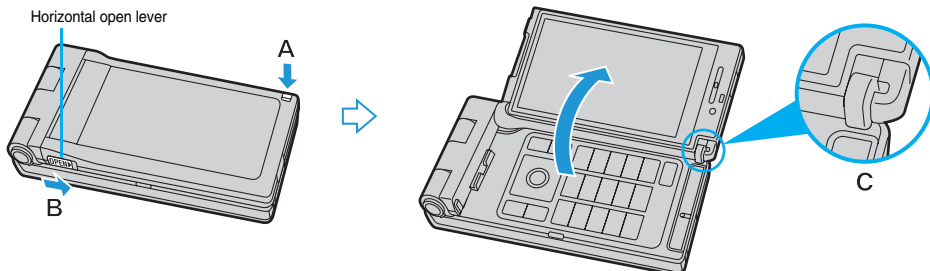

Information

- When you open the FOMA phone by pressing the one-push open button, it might not open fully depending on its direction.
- When you open the FOMA phone by pressing the one-push open button, be careful not to drop it by its rebound.
- When you press the one-push open button in Horizontal Open Style, the FOMA phone will open in Normal Style after it is closed.
- Before switching the styles, be sure to completely close the FOMA phone. If you operate the horizontal open lever in Normal Style or with the display part unlatched, malfunction or damage may result.

Work with Style

When you open the FOMA phone in Horizontal Open Style, a One Seg program automatically starts in synchronization with the style.







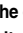

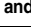
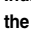
1 ► Settings ► Other settings ► Work with style ► 1Seg or OFF


- Even when "1Seg" is set, a One Seg program does not start if a display other than the Stand-by display is shown.

Navigation Displays and Key Operations

When you want to execute an operation on the display, press the corresponding key as below.

Basic display examples and key assignments

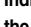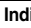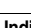1	Indicates the operation you can perform with the  key.	Finish 
2	Indicates the operation you can perform with the  key.	Edit Store
3	Indicates the operation you can perform with the  key.	Select Set
	Indicates the direction in which you can scroll and select items with the  key.	  
4	Indicates the operation you can perform with the  key.	FUNC Set
5	Indicates the operation you can perform with the  key.	Change Detail

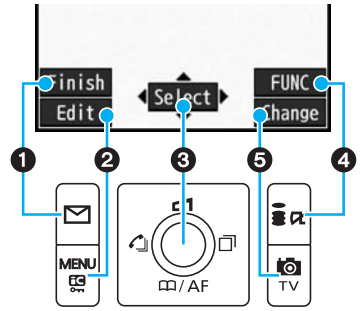

Operating Command Navigation key

Up

- Moves the cursor or highlighted display up. (Press and hold to scroll continuously.)
- Scrolls the display while a site or mail text is displayed.
- Press from the Stand-by display to bring up the Channel List. (See page 170)
- Converts entered characters to katakana, kanji or other characters. (See page 357)

Right/Redial

- Moves the cursor to the right.
- Press from the Stand-by display to bring up the Redial List. Press and hold for at least one second to bring up the Sent Address List. (See page 53 and page 195)
- Scrolls forward page by page. (Press and hold to scroll continuously.)
- Moves to the next page while displaying a site.

Left/Received Calls

- Moves the cursor to the left.
- Press from the Stand-by display to bring up the Received Call List. Press and hold for at least one second to bring up the Received Address List. (See page 54 and page 195)
- Scrolls back page by page. (Press and hold to scroll continuously.)
- Returns to the previous page while displaying a site.

Down

- Moves the cursor or highlighted display down. (Press and hold to scroll continuously.)
- Scrolls the display while a site or mail text is displayed.
- Press from the Stand-by display to bring up the Search Phonebook display. Press and hold for at least one second to store a Phonebook entry. (See page 84 and page 89)
- Converts entered characters to kanji, katakana or other characters. (See page 357)





OK key


- Fixes the operation.

Key operations in Horizontal Open Style




You can operate the keys in the same way as in Normal Style while the vertical display is shown.

While the horizontal display is shown, the Navigation icons do not appear and the key operation might differ depending on the function.

In this manual, the Command Navigation keys (   ) for the horizontal display are described corresponding to the horizontal display.

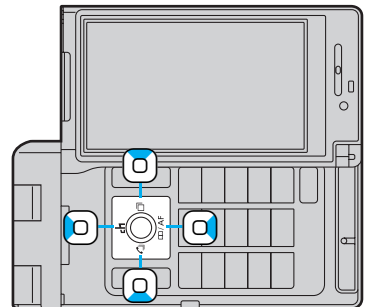

Display

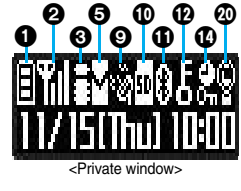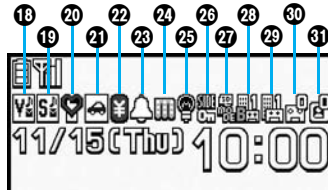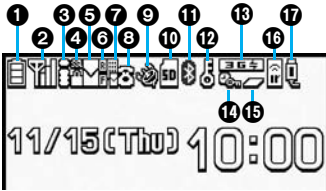


	Battery level (estimate) (See page 44)
	Radio waves reception level (estimate) Strong ← → Weak
	You are out of the FOMA service area or radio waves do not reach.
	During Self Mode (See page 121)
	During i-mode (See page 152)
	During i-mode communication (See page 152)
	During packet communication (The icon differs depending on the communication status.)
	During PushTalk communication (See page 76)
	You get out of the service area while Network Search Mode is set to "Manual". (See page 390)
	During SSL communication (See page 153)
	Unread i-mode mail or an SMS message exists. (See page 182 and page 207)
	The area for i-mode mail and SMS messages in the FOMA phone is full. (See page 182 and page 207)
	The area for SMS messages on the UIM (FOMA card) is full.
	Unread mail exists, and the area for SMS messages on the UIM (FOMA card) is full.
	Both the FOMA phone and UIM (FOMA card) are full.
	Area Mail exists. (See page 202)
	Unread Messages R/F exist. (See page 200)
	The area for Messages R/F in the FOMA phone is full. (See page 200)
	i-mode mail is held at the i-mode Center. (See page 183)
	The box for i-mode mail at the i-mode Center is full. (See page 182)
	Messages R/F are held at the i-mode Center. (See page 200)
	The box for Messages R/F at the i-mode Center is full. (See page 200)

	i-mode mail is held at the i-mode Center while Receive Option Setting is set to "ON". (See page 183)
	During a voice call
	During a videophone call (64K)
	During a videophone call (32K)
	During 64K data communication
	During measuring the current location (See page 232)
	Location Request Menu is set to "ON" or "Permission schedule", and it is within the validity period. (See page 240)
	Location Request Menu is set to "Permission schedule" and it is out of the validity period. (See page 240)
	A microSD memory card is inserted. (See page 294)
	Data is being read to/written from the microSD memory card.
	A write-protected microSD memory card is inserted. (See page 294)
	The inserted microSD memory card cannot be used. (See page 294)
	A microSD memory card is inserted, and the FOMA USB Cable with Charge Function 01 (option) is connected in microSD Mode. (See page 300)
	A microSD memory card is inserted, and the FOMA USB Cable with Charge Function 01 (option) is connected in MTP Mode. (See page 300)
	A Bluetooth device is connected. (See page 350 and page 351)
	A Bluetooth device is connected and power consumption is low. (See page 350)
	During Lock All (See page 120)
	During Personal Data Lock (See page 121)
	During Keypad Dial Lock (See page 125)
	During Secret Mode or Secret Data Only (See page 126)

	During IC Card Lock (See page 230)
	Both Keypad Dial Lock and Personal Data Lock are set.
	Both Keypad Dial Lock and Secret Mode/Secret Data Only are set.
	Both IC Card Lock and Lock All are set.
	Both IC Card Lock and Personal Data Lock are set.
	Both IC Card Lock and Keypad Dial Lock are set.
	Both IC Card Lock and Secret Mode/Secret Data Only are set.
	IC Card Lock, Keypad Dial Lock, and Personal Data Lock are simultaneously set.
	IC Card Lock, Keypad Dial Lock, and Secret Mode/Secret Data Only are simultaneously set.
13	
	Type of in-use network (See page 387)
	You are in the OFFICEED area. (See page 378)
14	
	Timer Lock At Close is set. (See page 122)
15	
	During Multitask (See page 332)
	Multiple functions are activated. (See page 332)
	During watching a One Seg program (See page 247)
	During music playback (See page 324)
	During music pause (See page 324)
16	
	During infrared data exchange (See page 303 and page 306)
17	
	The FOMA USB Cable with Charge Function 01 (option) is connected in Communication Mode.
	The FOMA USB Cable with Charge Function 01 (option) is connected in microSD Mode. (See page 300).
	During talk or communication through a USB Hands-free compatible device (See page 60)
	A USB Hands-free compatible device is connected. (See page 60)

	A USB Hands-free compatible device is connected in microSD Mode. (See page 60)
18	
	Vibrator is set. (See page 100)
19	
	Ring Volume is set to "Silent" or Mail/Msg. Ring Time is set to "OFF". (See page 64 and page 101)
20	
	During Manner Mode (See page 102)
	Remote Monitoring is set to "ON". (See page 73)
21	
	During Public Mode (Drive Mode) (See page 65)
22	
	The call cost has exceeded the specified limit. (See page 344)
23	
	An alarm is set. (See page 255 and page 336)
24	
	A Music&Video Channel program is booked. (See page 316)
25	
	Backlight is set to "OFF". (See page 107)
26	
	Side Keys Guard is set to "ON". (See page 125)
27	
	USB Mode Setting is set to "microSD mode". (See page 300)
	USB Mode Setting is set to "MTP mode". (See page 300)
28	
	Voice mail messages for Number B are held at the Voice Mail Center in Dual Mode of 2in1. (See page 377)
29	
	Voice mail messages are held at the Voice Mail Center. (See page 364)
30	
	The number of record messages (See page 67)
31	
	The number of videophone record messages (See page 67)

 - For the horizontal display, icons from **1** through **17** appear at the lower left of the display.
- The clock at the upper right of the display (at the lower center of the horizontal display) does not appear when icon **16** or **17** is displayed.
- When the Stand-by display is shown, the notification icon or desktop icon appears. (See page 112)






Information

- Some characters and symbols on the display and Private window might be modified or abbreviated. In addition, the Private window is displayed in monochrome.
- The color liquid crystal display uses high-precision production technology. The slightest change in the environment or other factors may result in unlit or permanently lit pixels, but this is not a manufacturing defect.
- The color display is shown in black and white in this manual, so the color tone of the actual display looks different.

<Icons>
Displaying Description of Icons





The symbols at the top of the display (such as , , and ) are called icons. You can check the meanings of the selected icons on the display.

1  ► Settings ► Display ► Icons ► Use  to highlight an icon.

Private Window


Various information is displayed on the Private window like the following examples:


Press /▼ or  with the FOMA phone closed to display information on the Private window for about 15 seconds.



■ When a missed call is found

When the FOMA phone is closed, "Missed call" appears.


Press  to display the missed call record. The name is displayed for the missed call coming from the party stored in the Phonebook.


When there are multiple missed calls, up to three missed call records are displayed each time you press .


- If you have received 30 or more incoming calls after a missed call, the missed call record disappears.
- Missed call records might not be displayed while another function is activated.
- After you display a missed call record, "Missed call" disappears.


■ When a new mail message or Message R/F is received

When the FOMA phone is closed, a Feel * Mail image is played back, and then "New mail" appears.

When you press , the latest Feel * Mail image is played back. (For Messages R/F, the Feel * Mail image is not played back.)

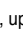When "Mail" on page 106 is set to "ON", the received date/time, sender's address (name), and subject of the mail or the received date/time and subject of the Message R/F are displayed. The sender's name is displayed for the mail coming from the party stored in the Phonebook. When multiple mail messages or Messages R/F are received, up to three mail messages or Messages R/F appear each time you press  with "New mail" displayed.

- Press  to end the playback of the Feel * Mail image or to clear the received date/time, and others.
- For the mail messages and Messages R/F sorted to the box or folder with security set, the Feel * Mail images, received date/time, and others are not played back/displayed.
- When a mail message or Message R/F comes in while "Receiving display" is set to "Operation preferred" and a display other than the Stand-by display is shown, "New mail" appears without showing any information.
- Depending on the setting of "Auto-display", "New mail" appears without showing any information when a Message R/F comes in.
- After you display the received date/time and others of the received mail or Message R/F, "New mail" disappears.
- When a mail message or Message R/F comes in during a voice call or a videophone call, information is not displayed even when "Receiving display" is set to "Alarm preferred".
- When you set "Secret mail display" to "OFF" and you receive a secret mail message in Normal Mode, a Feel * Mail image is not played back.

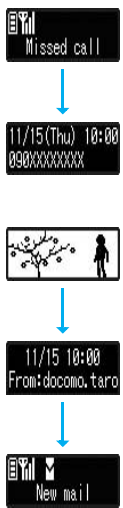

■When i-Channel is received

When “i-Channel ticker” on page 106 is set to “ON” and the FOMA phone is closed, tickers flow on the Private window.

- Press / or to end the tickers' flow.

あすの天気:東京

Change Clock Display

You can change displayed contents by pressing while clock is shown.



Method for Selecting Menu

Press of the FOMA phone to bring up Main Menu so that you can execute, set, or check respective functions.

- Some functions can be selected also by the operation other than pressing . In this manual, the operation by the easier way is described.

- You can also switch to Simple Menu focusing on only basic functions for easy operation. (See page 35)

- This FOMA phone supports Kisekae Tool (see page 109). If you use Kisekae Tool to change the design of the Menu display, some menu configurations change according to the usage frequency depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply.

In that case, you cannot operate as described in this manual, so you are advised to switch to the basic structure menu (see page 109), or reset menu settings (see page 109).

When you set “Menu icon setting” by “ドコモダケ_P905i (DoCoMo-dake_P905i)” of Kisekae Tool, you can temporarily restore to the normal menu structure by selecting “基本メニュー呼び出し (Display basic menu)” from the main menu items.

When you set “ドコモダケ_P905i (DoCoMo-dake_P905i)” of Kisekae Tool for Main Menu, the main menu items and sub-menu items are displayed in Japanese even if “Select language” is set to “English”.

■Scroll Selection

Main Menu is composed of 12 main menu icons indicating each function.

- If you select a main menu icon, the Sub-menu Item Selection display appears. If you further select a sub-menu item, the Lower Sub-menu Item Selection display appears.
- By repeating selecting, you can set and check the function.

■Menu Number Selection

You can display some functions by pressing + the menu number (see page 394).


■Multitask is Supported

- You can simultaneously use some functions in Main Menu. (See page 332)

Scroll Selection

In this manual, the description of the command navigation key operation (selection of top/bottom/left/right, and press of after selecting/entering a function item) is omitted. Scroll selection is explained below using the example of selecting the function “Quality alarm”:

Description Example of Steps

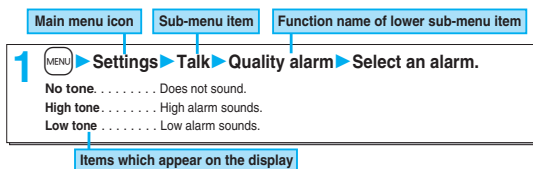


STEP

1

Select a main menu icon from the menu function

Select "Settings" from Main Menu. Main Menu at purchase differs depending on the body color. (See page 397)

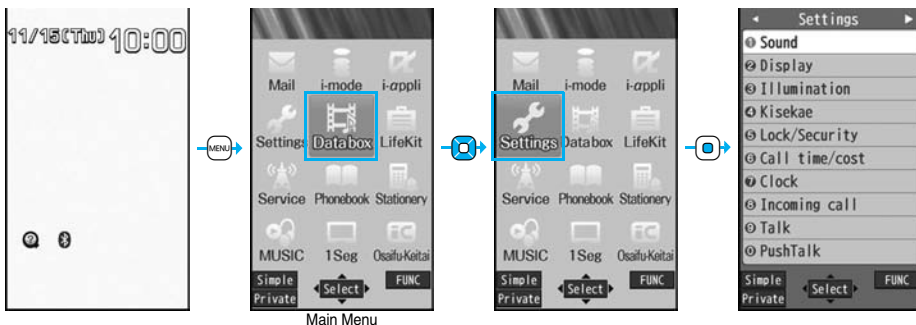


- Press to highlight the icon. Press and hold to scroll the icons continuously.
- If you have not touched any keys for at least 15 seconds, the Stand-by display returns.

STEP

2

Select a sub-menu item from the menu function

Select "Talk" from "Settings".

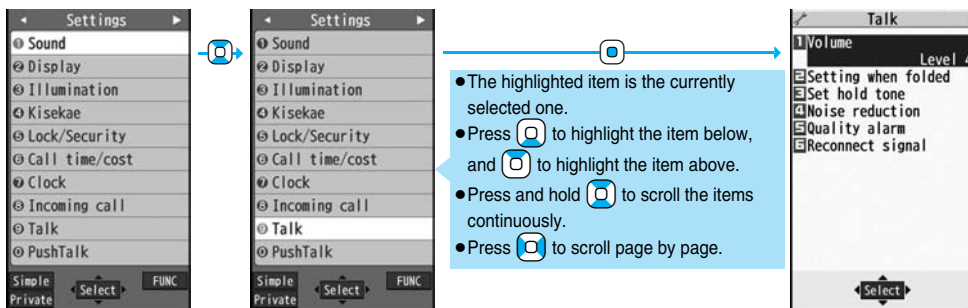


- The highlighted item is the currently selected one.
- Press to highlight the item below, and to highlight the item above.
- Press and hold to scroll the items continuously.
- Press to scroll page by page.

STEP

3

Select a desired lower sub-menu item (function)

Select "Quality alarm" from "Talk".

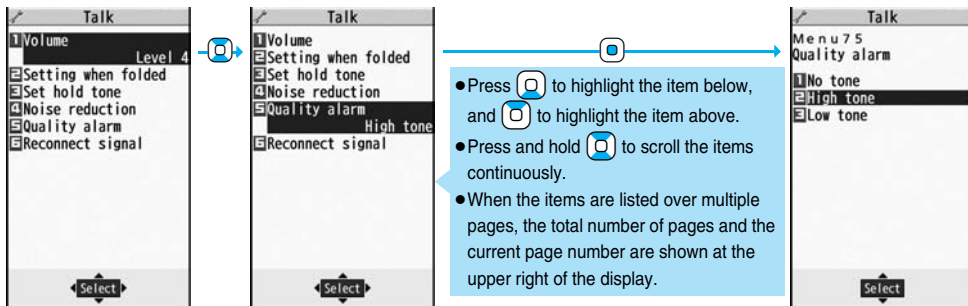

- Press to highlight the item below, and to highlight the item above.
- Press and hold to scroll the items continuously.
- When the items are listed over multiple pages, the total number of pages and the current page number are shown at the upper right of the display.

STEP

4

Set or check the function

Some menu items have even more detailed menus.

The example below shows how to set “Low tone” for “Quality alarm”.

The first screenshot shows the 'Talk' menu with 'Quality alarm' selected. The second screenshot shows the 'Quality alarm' sub-menu with 'Low tone' selected. The third screenshot shows the 'Quality alarm' sub-menu with 'Low tone' selected and a 'Select' button at the bottom.

- The highlighted item is the currently selected one.
- Press to highlight the item below, and to highlight the item above.
- Press and hold to scroll the items continuously.

Menu Number Selection

Menu Number Selection is explained below using the following example:

Description Example of Menu Number

Menu number

<Quality Alarm> MENU 7 5

Sounding Alarm when a Line is Likely to be Disconnected

STEP

1

Bring up the function using the menu number


From the Stand-by display, press 7 5.

The first screenshot shows the Stand-by display with the date and time. The second screenshot shows the application menu with the 'MENU' key pressed. The third screenshot shows the 'Quality alarm' sub-menu with 'Low tone' selected.

Function Menu


If you press **[FUNC]** when “**FUNC**” appears at the lower right of the display, the Function menu including selectable items such as “Save”, “Edit” or “Delete” in each operation appear on the display. The contents of the Function menu depend on the display from which you bring up the Function menu.

- When the items are listed over multiple pages, the total number of pages and the current page number are shown at the upper right of the Function Menu display.

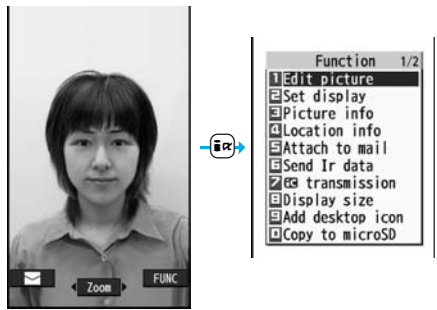


Description Example for Function Menu

 In this manual, the operation of the Function menu is described as follows:



An actual operation is done as follows:

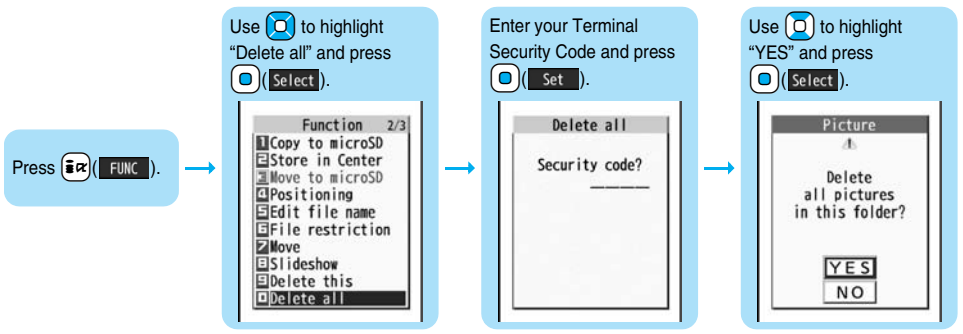

■ To select items quickly <Direct selection>
Press the numeric key corresponding to the displayed item number.

■ Item scroll
When menu items are listed over multiple pages, you can show the previous/next page by pressing **[PAGE UP]** with the uppermost/lowermost item highlighted. You can press **[PAGE DOWN]** to scroll through page by page. When **Page ▲/Page ▼** is displayed on the display, you can scroll through page by page also by pressing **[MENU] (Page ▲)/[OK] (Page ▼)**.

- Depending on the display being shown, such as lower sub-menu items, you might be able to scroll through page by page also by pressing **[UP]/[DOWN]** instead of **[PAGE UP]**.

■ Check box

With the functions you can select multiple items, put a check mark for check boxes to select them.

Each time you press (Select), "" and "" switches.

With some functions, you can put or clear check marks at a time by pressing (FUNC) and selecting "Select all/Release all" or by pressing (SEL all/RLS all).

- "" is placed to the selected item depending on the function.



■ After finishing the operation


The Lower Sub-menu Item Selection display is shown. When you press , the Stand-by display returns (except during Multitask). The Stand-by display or the former display automatically returns depending on the function.

■ To cancel the operation midway

Press . The contents of the setting are abandoned and the Stand-by display or the former display returns. The confirmation display appears asking whether to abandon the setting contents depending on the function. You can press to return to the previous operation.

■ When the "YES/NO" selection display appears

Press to highlight "YES" or "NO", then press (Select).

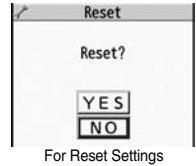

Using Simple Menu

Simple Menu is a menu focusing on only basic functions for easy operation.

- This manual describes the operating procedures in Normal Main Menu only. For how to operate in Simple Menu, see the respective pages of each function.
- You cannot use the Multitask function. (See page 332)





Switch to Simple Menu

You can switch between Normal Main Menu and Simple Menu.

From the Stand-by display, press (MENU).



Normal Main Menu

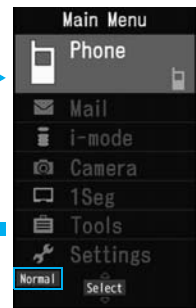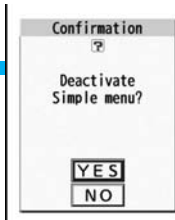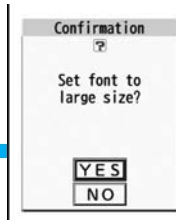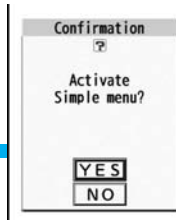

Simple Menu

※Select "YES" to set every item of "Character size" on page 115 to "Large". Even when you release Simple Menu, either of the settings does not return. When "Large" has already been set, the confirmation display does not appear.

Configuration of Simple Menu

Phone	Mail	i-mode	Camera
1Seg	Tools	Settings	

<Guide>

When You do not Remember Key Operation

You can search for the functions you want to know and use, and then check the operating methods. You can execute some functions from “使いかたナビ (Guide)”. This function is available in Japanese Mode only.

1 ▶ ステーションナリー (Stationery) ▶ 使いかたナビ (Guide) ▶ Select an item.

基本の操作 (Basic operations) . . . Displays the basic functions. Go to step 4.

おすすめ機能 (Recommendable functions)

. Displays the recommendable functions. Go to step 4.


機能検索 (Function search) Searches for a function.

ボイス検索 (Search by voice) Searches by vocalizing a keyword. Go to step 2 on page 37.

検索履歴 (Search history) Displays up to 30 search histories. Go to step 4.

- Highlight each item and press (); then the detailed operating methods are displayed.

- The 使いかたナビ (Guide) display appears also by selecting the 使いかたナビ (Guide) icon “ ” pasted on the desktop at purchase.

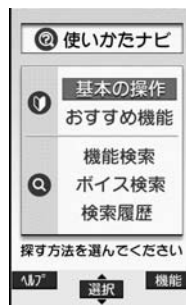

使いかたナビ (Guide) display

2 Select a search method if you select “機能検索 (Function search)” in step 1.

文字入力キーワード検索 (From your words) . . . Enter a keyword and retrieve.

索引検索 (From index) Retrieves functions with Japanese syllabic order. You can display the preceding or following row by pressing .
Go to step 4.

機能一覧検索 (From Function List) Retrieves from the function list. Go to step 4.

- Highlight each item and press (); then the detailed operating methods are displayed.

If you highlight “文字入力キーワード検索 (From your words)” and press (), select “文字入力キーワード検索 (From your words)” or “文字入力のしかた (How to input words)”.

3 Enter a keyword.

Up to 50 search results are displayed.

- You can enter up to 24 full-pitch/48 half-pitch characters.





4 Select a function ▶ Select an item.

機能の説明 (Description) Displays explanations for the function.

操作のしかた (How to operate) Displays the operating method.

この機能を使う (Operate function) Executes the function. Operate each function.

関連機能 (Relevant function) Displays up to 10 relevant functions. Repeat step 4.

- For some functions, press  (選択) several times for selection.
- If you select “基本の操作 (Basic operations)” in step 1, the description about the function is displayed when that function is selected. Press  (実行) to execute the function.
- You can display explanations about the function also by pressing  (説明) while highlighting the function.
- To delete search history, press  (機能) and select “1件削除 (Delete this)” or “全削除 (Delete all)”, then select “YES”.

Search by Voice

You can search for a function by vocalizing a keyword. Set “Search by voice” of “Read aloud settings” to “ON” to hear voice guidance for operations.

1 使いかたナビ (Guide) display ▶ ボイス検索 (Search by voice)

- You can display the detailed operating methods by pressing  (音声検索) and selecting “ボイス検索 (Search by voice)” or “音声入力のかた (How to input voice)”.

2 Vocalize a keyword when the voice recognition start tone sounds.

Start vocalizing the keyword within four seconds after the voice recognition start tone sounds.

Up to nine detected results are displayed.

- You cannot change the sound volume of the voice recognition start tone. It does not sound during Manner Mode.
- The keywords you can input by voice are limited to the ones that have been pre-installed to the FOMA phone. If the vocalized keyword is not recognized easily, vocalize a different word.
- See page 94 for voice input.

3 Select a detected result ▶ Select an item.

このキーワードで検索 (Search from this) Retrieves with the keyword you have selected. Up to 50 searched results are displayed.

Go to step 4 on page 37.

キーワードの追加 (Add keywords) Add a new keyword. Repeat step 2 and step 3.

Using UIM (FOMA Card)

The UIM is an IC card that holds your information such as phone numbers. It can hold data such as Phonebook entries and SMS messages as well. By sharing a UIM, you can operate multiple FOMA phones for multiple purposes.

You cannot use the FOMA phone for communication such as voice and videophone calls, i-mode, sending/receiving mail, or packet communication unless the UIM is inserted.

For details on how to use the UIM, refer to the UIM instruction manual.

When inserting or removing the UIM, take care not to accidentally touch or scratch the IC.


Insert/Remove UIM

You need to turn off the power and then remove the battery before you insert the UIM. (See page 41)

Inserting


1 Pull the claw to pull the tray out.

- Pull out the tray straight until it clicks.

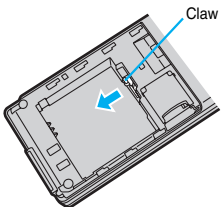


2 Place the UIM on the tray with its IC-side facing up.

- Fit the cut corner of the UIM and tray in place.

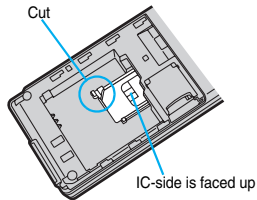


3 Push the tray inwards.

- Push the tray inwards firmly until it is fixed.

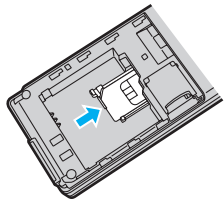


Removing

1 Follow step 1 of "Inserting" to pull out the tray and remove the UIM.

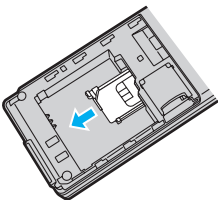

If the tray is disengaged

Fit and push it straight into the guide rail.

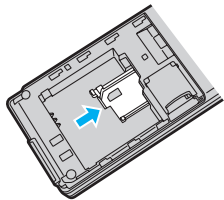

Information

- Make sure that you insert/remove the UIM with the FOMA phone closed and held in your hand.
- Take care not to force the UIM into place because this can break it. And take care not to force the tray into place because it can brake the tray and the guide rail.
- Take care not to lose the UIM once you remove it.
- When you replace your UIM (except during Omakase Lock), you need to enter the four- to eight-digit Terminal Security Code after turning on the power. When you enter the correct Terminal Security Code, the Stand-by display appears. If you enter the incorrect Terminal Security Code five times in succession, the power turns off. (However, you can turn on the power again.)

About Password of UIM

You can set two passwords, PIN1 and PIN2, for a UIM. (See page 118)

UIM Restrictions


The FOMA phone has the UIM restriction function as a security function to protect your data and files.


If you obtain data and files by the method below with the UIM inserted, UIM restrictions are automatically set to them.

- When downloading images or melodies and so on, from sites or Internet web pages
- When receiving i-mode mail with file attachments

The data or files with the UIM restrictions can be browsed, played back, started, edited, attached to mail, or transferred via infrared rays only when the UIM used for obtaining is inserted. When the UIM used for obtaining the data or files is not inserted, or when another UIM is inserted, these functions are not operable.

- In the explanation hereafter, the UIM used to obtain data and files is referred to as “your UIM” and other UIMs as “another person’s UIM”.

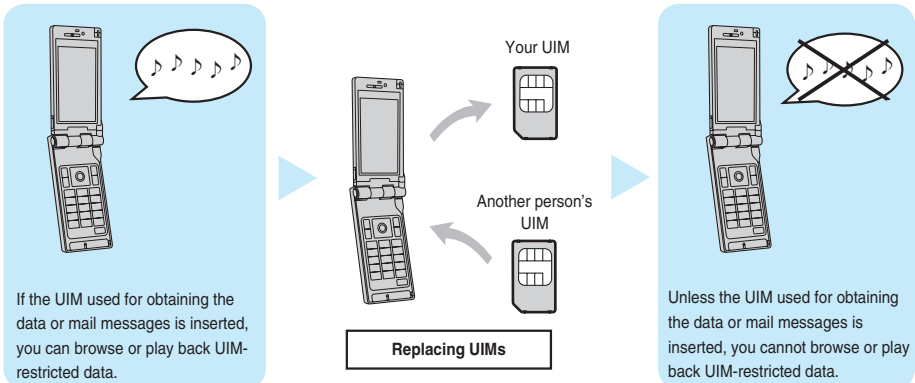

- When the UIM is not inserted or when another person’s UIM is inserted, the following types of data and files are displayed with the restrictions symbol, “”:

- Videophone record messages
 - i-αpli programs
 - Chaku-uta®/Chaku-uta Full® music files
 - Files attached or pasted to i-mode mail in the Inbox
 - Files attached to i-mode mail in the Outbox/Draft (except the data shot or edited with the FOMA phone)
 - Messages R/F with files (melodies or images) attached or pasted
 - Images inserted into Deco-mail text
- Movie memos
 - Chara-den images
 - Templates
- Melodies
 - PDF files
 - Downloaded dictionaries
- Images
 - Kisekai Tool files
 - Screen memos

※ This function applies to the pre-installed i-αpli programs, Chara-den images, Decomail-pictographs, etc. if they are reinstalled (upgraded) from a site.

※ “Chaku-uta” is a registered trademark of Sony Music Entertainment Inc.

- The data set with the UIM restrictions appear on the preview display as shown on the right.



Information

- When the UIM restrictions are set for data and files, you cannot set those data and files for the functions such as “Display setting” and “Select ring tone” when another person’s UIM is inserted instead.
- If you have set the data and files with the UIM restrictions for the functions such as “Display setting” and “Select ring tone”, these will work with their default settings if you remove your UIM or insert another person’s UIM. If you insert your UIM again, then your settings will be enabled again.
- UIM restrictions are not set for the data received using the infrared data exchange function or data transmission (OBEX) function or the still images/moving images shot or edited with the FOMA phone.
- Even when another person’s UIM is inserted, data and files set with the UIM restrictions can be moved or deleted.
- The settings of the following functions are stored on the UIM:
 - SMS validity period · SMS center selection · Select language · PLMN setting
 - Validating/Invalidating DoCoMo Certificate 1 and user certificate · PIN1 code, PIN2 code · PIN1 code entry set

Differences of UIM (FOMA Card)

If you use the blue UIM with your FOMA phone, note that following specifications differ from those of the green/white UIM:

Functions	UIM (blue)	UIM (green/white)	Reference
Number of digits of the phone number that can be stored in the UIM Phonebook	20 max.	26 max.	P.85
Operation of user certificate to use FirstPass	Cannot be used	Can be used	P.165
Use of WORLD WING※	Cannot be used	Can be used	P.386
Use of Service Numbers for “DoCoMo repair counter” and “General inquiries <DoCoMo Information Center>”	Cannot be used	Can be used	P.370


- ※ WORLD WING is the DoCoMo FOMA international roaming service that enables you to use the current phone number overseas for making and receiving calls using the UIM (green/white) and service compatible mobile phone.
- ※ You do not need to subscribe to WORLD WING if you have subscribed to the FOMA service after September 1, 2005. If you offered that you did not need WORLD WING at the time you signed up for the FOMA service, or when you have midway canceled WORLD WING, you are required to take the procedures to newly subscribe to WORLD WING.
- ※ If you have signed up for the FOMA service before August 31, 2005, and have not yet subscribed to WORLD WING, you are required to subscribe to it.
- ※ This service is not available with some billing plans.
- ※ If you lose your UIM (green/white) or have it stolen overseas, immediately contact DoCoMo to take the steps necessary for suspending the use of the UIM. For inquiries, see “DoCoMo Information Center” on the back page of this manual. Note that you are still charged the call and communication fees incurred after you lose it or have it stolen.

Attaching/Removing Batteries


Use the FOMA phone's dedicated Battery Pack P15.

■ Attaching


1 While pressing the “○” part in the direction A, slide the back cover (2 mm or more) in the direction B to unlock.

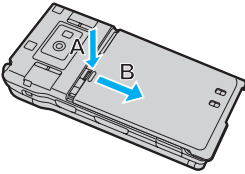

2 With the arrow mark facing up, fit the tab side of the battery pack to the FOMA phone securely, and then push the battery pack into the direction B while pressing it against the direction A.

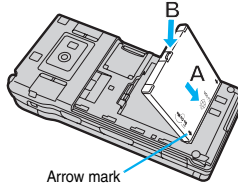


3 Slide the back cover in the direction of the arrow and attach it in place.

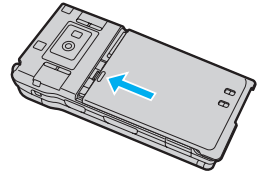


■ Removing

1 While pressing the “○” part in the direction of A, slide the back cover (2 mm or more) in the direction of B to unlock.

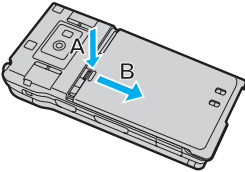

2 Take hold of the projection of the battery pack to lift it up.

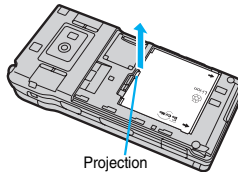

Information

- Make sure that you attach/remove the battery with the FOMA phone closed and held in your hand after you turn off the power. Also, make sure not to press the one-push open button when you attach/remove the battery.
- Make sure that the tray for the UIM is not drawn out when attaching the battery. If the tray is drawn out, the battery cannot be attached. Note that if the battery is forcibly attached, the UIM or tray may be damaged.
- If you try to force the battery into place, you could damage the charging terminals of the FOMA phone.
- For details, refer to the instruction manual for Battery Pack P15.

Charging FOMA Phone

Use the FOMA phone's dedicated Battery Pack P15.

Life of battery pack

- Battery packs are consumables. The usable time shortens slightly each time they are charged.
- When the usable time of the battery pack becomes half the time it was purchased, replacing is recommended because the battery pack is nearing the end of its life. Depending on the use conditions, the battery pack may swell as it nears the end of its life, but this is not a problem.
- The life of the battery pack may shorten if you use i-appli programs, talk on the videophone, watch One Seg programs and so on for a long time during charging.

For environmental protection, bring the exhausted battery pack to an NTT DoCoMo, dealer, or recycle shop.



Charging

- For details, refer to the instruction manuals for the FOMA AC Adapter 01/02 (option), FOMA AC Adapter 01 for Global use (option), and FOMA DC Adapter 01/02 (option).
- The FOMA AC Adapter 01 supports 100 V AC only. The FOMA AC Adapter 02 and FOMA AC Adapter 01 for Global use support from 100 V AC through 240 V AC.
- The shape of the plug for the AC adapter is for 100 V AC (for domestic use). To use the AC adapter that supports from 100 V AC through 240 V AC overseas, you need to have a conversion plug adapter that is compatible with the voltage of the country you stay. Do not use a transformer for overseas travel to charge the battery pack.
- Even during charging, you can still answer calls if the FOMA phone is turned on. This will consume the charged amount so that charging will take longer. Also, the standby time or talk time might be shorter if you charge the battery pack with your FOMA phone open.
- If you have a long time videophone call during charging, the temperature in the FOMA phone may rise and charging may be suspended. In such a case, wait for a while and try charging again.
- Do not watch One Seg programs for a lengthy time during charging as the operating life of the battery might be shortened.
- Remove and insert the connector slowly and carefully, without using unnecessary force.
- Do not remove the battery pack during charging.

Do not charge for long periods of time (several days) with the FOMA phone turned on.

- If you leave the FOMA phone powered on for long periods of time during charging, you may not be able to use the FOMA phone for long duration as expected and the low battery alarm may sound soon, because the FOMA phone receives the power from the battery pack after charging is completed. If this happens, charge the battery pack correctly. When charging the battery pack again, first remove the FOMA phone from the AC adapter (or desktop holder) or DC adapter and then set it again.

Estimated usable time for battery pack

(The usable time for the battery pack varies with the charging time and the remaining life of the battery pack.)

Network	Switch 3G/GSM	Continuous standby time	Continuous talk time	One Seg watching time
FOMA/3G	3G	In motion: Approx. 410 hours	Voice call: Approx. 200 minutes	Approx. 270 minutes (In ECO Mode: Approx. 400 minutes)
	Auto	In motion: Approx. 400 hours Standstill: Approx. 580 hours	Videophone call: Approx. 110 minutes	
GSM	Auto	Standstill: Approx. 260 hours	Voice call: Approx. 190 minutes	

- ※ The continuous talk time is the estimated time that the FOMA phone can be used for calls when radio waves can be sent and received normally.
- ※ The continuous standby time is the estimated time when radio waves can be received normally. The standby time could be about half of this estimate depending on the charge level of the battery pack, function settings, other ambient conditions such as temperature, and the status of radio waves in the area (weak or no radio waves, for instance). When you use i-mode communication, the talk/communication time and standby time will be shorter. Further, even if you do not make calls or not execute i-mode communication, the talk/communication time and standby time will be shorter if you watch One Seg programs, compose i-mode mail, start up a downloaded i-appli program or the i-appli Stand-by display, execute data communication or Multiaccess, use a camera, play back music, or use Bluetooth connections.
- ※ The continuous talk time and the continuous standby time may be shortened depending on the network environment in the country you stay.
- ※ The continuous standby time for standstill is the average number of hours you can use the FOMA phone in standstill status when it is closed and can receive radio waves normally.
- ※ The continuous standby time for in motion is the average number of hours you can use the FOMA phone in the combined status of "standstill" "moving" and "out of the service area" when it is closed, in an area where it can receive radio waves normally.
- ※ The One Seg watching time is the estimated time for when radio waves can be received normally with the Flat-plug Stereo Earphone Set P01 (option) connected. The watching time might be shortened depending on the charge level of the battery pack, function settings, other ambient conditions such as temperature, and the status of radio waves in the area (weak or no radio waves, for instance).

Estimated time for charging battery pack

AC adapter	Approx. 130 minutes	DC adapter	Approx. 130 minutes
------------	---------------------	------------	---------------------

- ※ The charging time is an estimate of time for when empty battery pack is charged with the FOMA phone turned off. The charging time will be longer if you charge the battery pack with the power of the FOMA phone turned on.

Charge with AC Adapter and Desktop Holder

- 1** Connect the AC adapter (option) to the desktop holder (option).
- 2** Insert the AC adapter's plug into a power socket.
- 3** Put the bottom of the FOMA phone into the stopper of the desktop holder (A) to fit the head to the lock claw, and then depress the FOMA phone until it clicks (B).

Check that the Call/Charging indicator lights in red.


When the Call/Charging indicator flickers, dismount the AC adapter and battery pack from the FOMA phone and then re-mount them for charging.

If the symptom persists, troubles with the AC adapter, desktop holder or battery pack may be involved, so consult a handling counter such as a DoCoMo shop.

- The charging confirmation tone (see page 101) sounds when charging starts and ends. However, it does not sound when the power is off or during Manner Mode or Public Mode (Drive Mode).
- Be sure to set the FOMA phone firmly onto the desktop holder. Also, be careful that the connector cover or a commercial strap is not caught between the FOMA phone and desktop holder.
- Charging can be done even when the FOMA phone is open.


- 4** When charging is completed, hold the desktop holder and lift up the head of FOMA phone to remove.

- Unplug the AC adapter from the power socket when you are not going to use it for a long time.

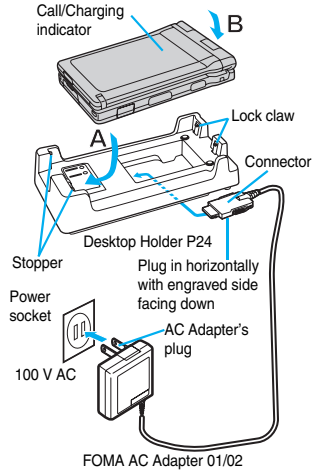

When charging with the AC adapter only

Insert the connector with the engraved surface facing up until it clicks. Pull straight the connector out while pressing the release buttons.

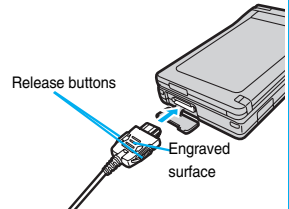

※ Check the facing direction (front or rear) of the AC adapter plug and then insert or pull it horizontally into or out of the FOMA phone. Malfunction could result if you try to pull it forcibly.

Indicator and display during charging and when charging is completed

	Call/Charging indicator	"☎" display
Charging	Lights in red	Blinks
Charging completed	Off	Lights

- When the FOMA phone is turned off, "☎" does not appear. If you start charging with the battery flat, the Call/Charging indicator might not light immediately; however, charging itself has started.

DC adapter (option)

With the DC adapter, you can use a cigarette lighter socket (12 V/24 V) of cars to charge the FOMA phone with the battery pack attached.

For details, refer to the instruction manual for the FOMA DC Adapter 01/02.

Information

- If the fuse blows off when charging with the DC adapter, be sure to use a 2A fuse. The 2A fuse is consumables, so purchase at auto parts stores in your neighborhood.

<Battery Level>

Checking Battery Level

When the FOMA phone is turned on, an estimate of the battery level is indicated by the icon.

- Almost full
- Getting low
- Almost empty
- Charge the battery when it is almost empty.

Check by Display and Tone

You can check an estimate of the battery level by the display and sound.

- 1 ► Settings ► Other settings ► Battery ► Battery level

<p>Almost full</p> <p>Full charge</p>	<p>Getting low</p> <p>Partial charge</p>	<p>Almost empty</p> <p>Low charge</p>
Three beeps	Two beeps	One beep


※Almost empty.
Charge the battery.

- The pictograph disappears after about three seconds.

■ When the battery is running out

The display on the right appears and the low battery alarm sounds for about 10 seconds. To stop this alarm, press any key other than and . About one minute later, the FOMA phone will be turned off.

- During a call, a beeping tone from the earpiece notify you of the low battery. About 20 seconds later your call will be cut and then one minute later the FOMA phone will be turned off.

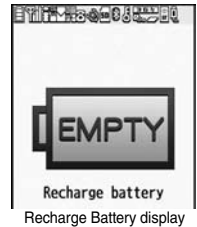

<Power ON/OFF>

Turning Power On/Off

Turn Power On

- 1 Press and hold for at least one second.

After the Wake-up display (see page 105) is displayed, the Stand-by display appears.

- If you have stored many Phonebook entries or mail messages, it may take a while for the display to appear.
- If Set Time is set, the current date and time are shown.
- When is displayed, the FOMA phone is out of the service area or in the place where the radio waves do not reach. Move to a location where disappears.
- If "Starting System Wait a minute" is displayed, wait for a while and then proceed.



Stand-by display

■When your UIM is replaced (except during Omakase Lock)

Enter the four- to eight-digit Terminal Security Code after turning on the power. When you enter the correct Terminal Security Code, the Stand-by display appears. If you enter the incorrect Terminal Security Code five times in succession, the power turns off. (However, you can turn on the power again.)

■When “PIN1 code entry set” of “UIM setting” is set to “ON”

Enter the four- to eight-digit PIN1 code after you turn on the power. When you enter the correct PIN1 code, the Stand-by display appears. See page 118 for PIN1 code.

■When “Auto reset setting” of “Notice call cost” is set to “ON” (except during Omakase Lock)

Enter the four- to eight-digit PIN2 code after you turn on the power. When you enter the correct PIN2 code, the Stand-by display appears. If you press (CLR) or () without entering the correct PIN2 code, “Auto reset setting” is set to “OFF” and the Stand-by display appears. See page 118 for PIN2 code.

Information

- Each entry display appears in the order of “PIN1 code” → “Terminal Security Code” → “PIN2 code”.

Turn Power Off**1 Press and hold () for at least two seconds.**

The exit display appears and the power turns off.

- You cannot turn on the power immediately after turning off the power. Wait a few seconds.

<Select Language>

MENU 1 5

Switching to English**1 (MENU) ▶ 設定 (Settings) ▶ ディスプレイ (Display) ▶ バイリンガル (Select language) ▶ Japanese (日本語) or English (英語)**

- The following functions are different between Japanese display and English display:

Functions	Japanese	English
Info Notice Setting	電子音 (Electrical tone) ボイス (Voice) OFF	ON Not available OFF
“Clock” of Display Setting → “Day of week”	Available	Not available
使いかたナビ (Guide) Voice Guidance	Available	Not available

Information

- When you insert the UIM, the “バイリンガル (Select language)” setting is stored on the UIM.


<Initial Setting>

Executing Initial Settings

If the date and time, Terminal Security Code, Keypad Sound, Caller ID Setting, or Location Request Menu is not set, the Initial Setting display appears when the power is turned on. You can set the initial settings also from each menu function separately.

1 Turn on the power ▶ YES

- When the display for entering your Terminal Security Code, PIN 1 code, or PIN 2 code appears, follow the operation on page 45.

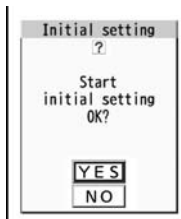**2 Set the date and time.**

You can select “Auto time adjust ON” or “Auto time adjust OFF” for setting the time. (See page 46)

3 Set your Terminal Security Code.

You can set your Terminal Security Code required for setting functions. (See page 118)

1. Enter "0000" ▶ Enter your new Terminal Security Code (four to eight digits) ▶ YES

4 Set Keypad Sound.

You can set the keypad whether to make a sound. (See page 101)

1. ON or OFF

5 Set Location Request Menu.

You can set whether to notify your current location for when a GPS location provision request arrives. (See page 240)

6 Set the size of characters.

You can set the size of characters on the display at a time. (See page 115)

Information

- When an unset function is found, the Initial Setting display for an unset function appears each time you turn on the power.
- The completed settings are valid even when total setting is interrupted by an incoming call or canceled by pressing or midway.
- When the power is automatically turned on by alarm notification, the Initial Setting display does not appear even if there is any unset function.
- When you finish the initial settings, the confirmation display appears telling that updating software is executed automatically. This display appears only at the first time, and after that, does not appear until you execute Reset Settings or Initialize.

<Set Time>

MENU 3 1

Setting Date and Time

You can select whether to correct the time automatically or set it manually. The time is set/displayed on the 24-hour basis.

1 Settings ▶ Clock ▶ Set time ▶ Auto time adjust ON or Auto time adjust OFF

Auto time adjust ON . . . Corrects the date/time automatically. The setting is completed.

If the time is not automatically corrected such as when is displayed and the date/time has not been set, the display for manually correcting the time appears. Follow step 2 to set the date/time.

Auto time adjust OFF . . . Sets the date/time manually.

- When "Notice call cost" is set to "ON", you need to enter your Terminal Security Code.

2 Enter year, month, date and time.

Use to move the cursor and enter numbers by the numeric keys.

- To enter one-digit numeral for the date and time, enter two digits beginning with "0" as in "01" through "09".
- Highlight "time zone" and press () to set the time zone. Use to select a region and press () .



■ About date/time correction function

The time displayed on the FOMA phone is corrected according to the clock information obtained from the network.

The time is corrected when you show the Stand-by display with "Auto time adjust ON" set. If you want to set the time with a lag, set the time manually.

- Some few second errors might occur. You might not be able to correct the time depending on the radio wave conditions, or the i-øppli program set for the i-øppli Stand-by display.
- When you receive the clock information overseas and the time difference correction information differs from the previously received one, "Time is adjusted" is displayed and the time difference is corrected automatically. Press "OK" to update the time and show Redial, Dialed Calls, Received Calls, sent/received mail messages and others in local time.
- When the time difference is corrected overseas, the sub clock (Japanese date/time, etc.) is displayed below the clock on the Stand-by display.
- Depending on the networks overseas, the time difference might not be corrected.

Information

- Unless Set Time is set, the functions which use the clock such as Schedule do not work correctly. Further, the date/time for redial items and received call records are not stored.
- The FOMA phone has an internal backup battery. The set time is stored in the internal backup battery so is kept even when you change the battery. However, the time could be reset if the battery is detached for two or more weeks. In this case, charge the FOMA phone and then set the clock again. Also, when using the FOMA phone for the first time after purchase, attach the battery to the FOMA phone and then charge it. This charges the internal backup battery as well.
- The sub clock is not displayed while "Set time" is set to "Auto time adjust OFF" or in Japan.
- This function supports clock settings from 00:00 on January 1, 2007 through 23:59 on December 31, 2037.

<World Time Watch>

Displaying World Time

You can display the time of the specified area under the Stand-by display clock.

- 1  ► **Settings** ► **Clock** ► **World time watch** ► **ON or OFF**
► Use  to select an area and press  (**Select**).

Information

- World Time Watch does not appear when "Display setting" → "Clock" → "Clock display" is set to "OFF", or when you use the FOMA phone overseas.

Summer Time

You can advance the time displayed for the overseas country you stay and for a region of World Time Watch by one hour.

 
- 1  ► **Settings** ► **Clock** ► **Summer time** ► **ON or OFF**

<Caller ID Notification>

Notifying the Other Party of Your Phone Number

You can set the FOMA phone to send your phone number to the called party's phone when dialing. Your phone number is important information, so take utmost care when notifying your phone number.

This function is available only when the other party's phone supports Caller ID.

Set Caller ID Notification to Network


You can set whether to notify your caller ID on the network.

- 1  ► **Service** ► **Caller ID notification** ► **Do the following operations.**

Item	Operation/Explanation
Activate	► ON or OFF
Check setting	You can check the setting contents of "Activate".

Set Caller ID Notification when Making a Call

Each time you dial out, you can set whether to notify your caller ID.



- 1 **Enter a phone number**
or
bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.
- 2  (**FUNC**) ► **Notify caller ID** ► **Don't notify or Notify caller (OFF or ON)**


- To release "Notify caller ID", select "Cancel prefix". Whether to notify or not follows the setting for "Activate" of "Caller ID notification".

Set “Notify/Not Notify” by Entering “186/184”



You can select whether to notify the other party of your phone number also by entering “186”/“184” before the other party’s phone number.


To notify your caller ID

1 186→Destination phone number  or  (Dial)


- Press  (V. phone) to make a videophone call.

Not to notify your caller ID

1 184→Destination phone number  or  (Dial)

- Press  (V. phone) to make a videophone call.

Information

- When you make a call and hear the guidance requesting your caller ID (see page 369), follow the steps of “To notify your caller ID” to enter “186” and redial.
- When you make a PushTalk call, “Activate” of “Caller ID notification” or “Notify caller ID” is valid, but “notify/not notify” by adding “186”/ “184” is invalid.
- You cannot set “Caller ID notification” while “” is displayed.

<Own Number>




Checking Your Own Number

- Your phone number (own number) is stored on the UIM.




1  ► Phonebook ► Own number

You can press  to switch the tabs.

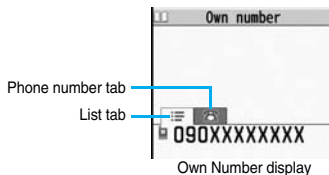- See page 342 for storing/displaying personal data.



Information

- In Dual Mode of 2in1, you can switch between Number A and Number B by pressing  (Change) from the Own Number display. “” appears for Number A, and “” appears for Number B.
- When you replace a UIM with another one (2in1 contractor → 2in1 contractor) while using 2in1, perform “2in1 function OFF” (see page 373) and then set “2in1 setting” to “YES”, or perform “Auto acquire No. B” (see page 342), to acquire the correct Number B. When you replace a UIM with another one (2in1 contractor → 2in1 non-contractor), perform “2in1 function OFF” as well to update the owner’s information to the correct one.

Voice/Videophone Calls

Making Calls/Videophone Calls

About Videophone	50
Making a Call/Videophone Call	50
Switching between a Voice Call and Videophone Call	52
Using Call Records	53
Setting Chaku-moji	55
Sending Touch-tone Signals Quickly	57
International Calls	57
Setting for International Calls	58
Storing Numbers to be Added to the Beginning of a Phone Number	59
Making a Call with Specified Sub-address	59
Setting Alarm for Reconnecting	59
Reducing Surrounding Noise to Make Voice Clear	59
Switching to Hands-free	60
Using Hands-free Compatible Devices	60

Receiving Calls/Videophone Calls

Receiving a Call/Videophone Call	60
Switched between a Voice Call and Videophone Call by the Other Party	62
Setting Response of Key Operation for Answering Incoming Calls	62
Setting Response for when Opening FOMA Phone during Ringing	63
Setting Response for when Closing FOMA Phone during a Call	63
Adjusting Earpiece Volume	63
Adjusting Ring Volume	64

When You Cannot or Could not Answer the Call

Putting an Incoming Call on Hold when You cannot Answer at Once	64
Putting a Call on Hold during a Call	64
Setting Hold Tone	65
Using Public Mode (Drive Mode)	65
Using Public Mode (Power Off)	66
If You could not Answer an Incoming Call	67
Recording Voice/Video Messages when You cannot Answer the Call	67
Recording Voice/Video Messages when You cannot Answer the Call during Ringing	68
Playing Back/Erasing Record Messages/a Voice Memo/Videophone Record Messages/Movie Memos	68

Making Full Use of Videophone Calls

Using Chara-den	69
Useful Functions for Videophone Calls	70
Setting Videophone Hands-free	71
Setting Image Quality for Videophone Calls	71
Changing Image Displays for Videophone Calls	71
Redialing as a Voice Call when a Videophone Call cannot be Connected	72
Setting for Switching between a Voice Call and a Videophone Call	72
Selecting Response to Incoming Videophone Calls during i-mode	72
Connecting FOMA Phone to External Devices to Use Videophone Function	73
Checking inside the Room when You are Out	73

About Videophone

You and the other party can talk viewing each other's images.

DoCoMo videophones conform to 3G-324M, standardized by the international standard 3GPP. You cannot connect to the videophone that uses a different format.

●3GPP (3rd Generation Partnership Project):

This is the regional standards organization for developing common technical specifications for third-generation mobile telecommunication systems (IMT-2000).

●3G-324M:

This is the international standard for the third generation of mobile videophones.

- The P905i supports only 64 kbps communication speed of videophone dialing. You can talk but cannot make a videophone call at 32 kbps communication speed.

■Display during videophone calls

- 1 Receiving image (Image through the other party's camera or substitute image)
- 2 Sending image (Image through your camera or substitute image)
- 3 Call duration
- 4 Status



- : 64K communicating
- : 32K communicating
- : Voice sending/receiving
- : Voice sending/receiving failed*1
- : Image sending/receiving
- : Image sending/receiving failed*2
- : Camera image sending
- : Substitute image sending
- : Chara-den talking
- : Hands-free activated
- : AV output
- : Bluetooth communicating
- : Portrait
- : Close-up
- : Landscape
- : Night Mode
- : Chara-den Whole Action Mode
- : Chara-den Parts Action Mode
- : DTMF Transmission Mode

*1 When voice sending fails, the other party cannot hear your voice.

When voice receiving fails, you cannot hear the other party's voice.

*2 When image sending fails, the sending image is not displayed at the other end.

When image receiving fails, the receiving image is not displayed.

When voice or image sending/receiving fails, it does not recover automatically. You need to make a videophone call again.

 
Making a Call/Videophone Call

1 Enter the other party's phone number, starting with the city code.

- When 27 or more digits are entered, the lower 26 digits only are displayed.
- To store an entered phone number in the Phonebook, press (). Go to step 2 of "Storing Displayed Phone Number/Mail Address in Phonebook" on page 88.
- Even when you are dialing within the same area, you need to enter the city code before the phone number.



<Example>




- To make calls to mobile phone
 Other party's phone number (11 digits)
- To make calls to PHS
 Other party's phone number (11 digits)

2 When Making a Voice Call

Press or .

- "📞" blinks during dialing, and lights during a call.

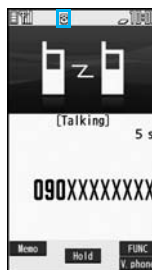

When Making a Videophone Call

Press .

- "📞" blinks during dialing and lights during the call.
- During a videophone call, you can press () to display the substitute image at the other party. To resume the image through your camera, press () again.




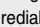
The digital communication charging starts from this display.

3 Press to end the call after talking.

Information

- If you hear the guidance requesting your caller ID (see page 369), follow the steps of "To notify your caller ID" on page 48 to enter "186" and redial.
- When the Flat-plug Earphone/Microphone with Switch (option) is connected, you can hear the other party's voice from the earphone. (See page 346)
- If you close the FOMA phone during a call, the FOMA phone works in accordance with the setting of "Setting when folded". (See page 63)
- If you switch to Horizontal Open Style during a call, the FOMA phone is set to "No tone". (See page 63)
- You can press numeric keys to send touch-tone signals during a call. During a Chara-den call, you need to switch to DTMF Transmission Mode. (See page 71)
- You cannot make a call in Horizontal Open Style. However, when the Flat-plug Earphone/Microphone with Switch (option) is connected, you can make a call in Horizontal Open Style.
- In Dual Mode of 2in1, you can make a call after selecting Number A or Number B. (See page 374)

<For Voice Calls>

- You can make a voice call also by pressing  and then entering the party's phone number. If you enter a wrong number, press  to clear the display and then redial.

<For Videophone Calls>


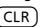
- Just after purchase, Hands-free is automatically activated by "Hands-free w/ V. phone" (see page 71). However, Hands-free is deactivated during Manner Mode regardless of "Hands-free w/ V. phone".
- When you make a videophone call with substitute image, note that you will still be charged for the digital communication, not the voice calls.
- If you make a videophone call at 110/119/118 from the FOMA phone, it is automatically dialed out as a voice call.
- During a videophone call, you can send a Chara-den image to the other party instead of the image through your camera. (See page 69)
- The international videophone call is available using the DoCoMo international call service "WORLD CALL". (See page 57)




■ Display during dialing

The other party's name and icon will be displayed if the party's phone number and name are stored in the Phonebook. However, the image will not be displayed, even if it is stored in the Phonebook.

- If the same phone number is stored with multiple names in the Phonebook, the name that comes first in the search order (see page 89) is displayed.
- The phone number instead of the name will be displayed if the Phonebook entry has been stored as secret data, or if Personal Data Lock is activated.

■ If you entered a wrong phone number

Each time you press , the digit on the far right is cleared. If you press and hold  for at least one second, all the digits are cleared and the Stand-by display returns.

- Press  to move the cursor to the digit you want to clear, and then press  to clear it. To clear all the digits on and to the right of the cursor, press and hold  for at least one second.

■ If a videophone call could not be connected

The reason why it could not be connected is displayed. (The displayed reason might not be the same as the actual reason depending on the type of the other party's phone and contract for network services.)

Messages	Reasons
Check number, then redial	You have dialed a non-existent phone number.
Busy	The other party is busy. (Depending on the receiver's phone, this message might be displayed during packet communication as well.)
Busy with packet transmission	The packet communication is progress at the other end.
Out of service area/power off	The other party's phone is out of the service area or turned off.
Set caller ID to ON	Your caller ID is not notified. (when dialing "visualnet", etc.)
Your call is being forwarded	During forwarding
Redial using voice call	The other party activates Call Forwarding Service but the forwarding destination phone does not support videophone calls.
Upper limit has been exceeded Connection failed	The upper limit for the plan with the limit function (Type Limit, Family Wide Limit) is exceeded.
Please make your call from the i-mode web page	You did not make a videophone call from the IP (Information Provider) site among i-mode official sites (at dialing to V-live).
Connection failed	Redial after setting "Activate" of "Caller ID notification" to "ON". · This may appear in the case other than above.

Auto-redialing

If "Voice call auto redial" is set to "ON", and a videophone call is not connected, a voice call is automatically made.

- Videophone calls cannot be connected to the phones that do not support the videophone function, or to the phones that are out of the service area or turned off even if they are videophones. If you have set "Voice call auto redial" to "ON" and attempt to dial a phone that does not have the videophone function, the number will be redialed as a voice call. However, this operation might not work if you call an ISDN-synchronous 64K or PIAFS access point or an ISDN videophone that does not support 3G-324M (as of October 2007), or if you dial the wrong number. Note that you could be charged for the communication.
- Once the videophone call has started communications, redialing as a voice call will not be made.

Function Menu while Entering Phone Number

Function menu	Operation/Explanation
Notify caller ID	See page 47.
Prefix numbers	See page 59.
Int'l dial assist	See page 58.
Select image	See page 72.
Multi number	You can select a phone number to be notified to the other party. (See page 372.)
Add to phonebook	See page 87.
Compose message	You can compose a mail message to send to the phone number set as the destination address. Go to step 3 on page 172.
Chaku-moji	See page 55.

Switching between a Voice Call and Videophone Call

You (caller) can switch between a voice call and a videophone call. This function is available for the mobile phones that can switch between a voice call and a videophone call.

Switch from a Voice Call to Videophone Call

When the other party's phone has a function to switch between the calls, "V. phone" is displayed on your phone and you can switch from the voice call to videophone call.

- 1 During a voice call ▶  (V. phone) ▶ Change



- When you select an image to be sent to the other party, select "Select image". Go to step 2 of "Set by Call" on page 72.
- When "Cancel" is selected, the FOMA phone cancels switching and returns to the voice call.
- While switching, the voice guidance is played back.

Switch from a Videophone Call to Voice Call

When the other party's phone has a function to switch between the calls, you can switch from the videophone call to voice call by selecting "CHG to voice call" from the Function menu.

- 1 During a videophone call ▶  (FUNC) ▶ CHG to voice call ▶ YES



- Select "NO" on the confirmation display to stop switching and to resume the videophone call.
- While switching, the voice guidance is played back.

Information

- You can switch between a voice call and a videophone call repeatedly.
- When i-mode or packet communication is in progress, the communication is disconnected and then the voice call is switched to the videophone call.

Information

- When packet communication is in progress at the other end, the message to the effect that the communication cannot be switched is displayed and the voice call continues without switching to the videophone call.
- You cannot switch from the voice call to the videophone call while “Multi calling” is displayed during the call if you have signed up for Call Waiting Service.
- It takes about five seconds to switch. Switching may take a longer time depending on the radio wave conditions.
- Depending on how the caller’s phone is working or on the radio wave conditions, switching between a voice call and videophone call may fail and the connection may be cut off.
- If you switch between the voice call and videophone call during a call, the call duration and call cost are counted respectively for the calls. You are not charged while “Changing” is displayed.
- You cannot switch between the videophone call and voice call unless “Notify switchable mode” is set to “Indication ON” at the other end. See page 72 for “Notify switchable mode”.
- When you switch a videophone call to voice call, Hands-free is deactivated.

<Redial> <Dialed Calls> <Received Calls>
Using Call Records

The FOMA phone can store the other party’s phone number and date/time you have dialed or received. You can call back to the other party.

■ Redial

Up to 30 records of dialed voice calls, videophone calls and PushTalk calls are stored in total, and the older record of dialing to the same phone number is deleted. However, the dialing by PushTalk is retained in Redial separately from that of the voice call or videophone call even if you dial to the same phone number.

■ Dialed Calls





Up to 30 records of dialed voice calls, videophone calls and PushTalk calls are stored in total, and up to 30 records of 64K data and packet communications are stored in total as well. The older records of dialing to the same phone number are also retained.























■ Received Calls

Up to 30 records of incoming voice calls, videophone calls and PushTalk calls are stored in total, and up to 30 records of 64K data and packet communications are stored in total as well. The older records coming from the same phone number are also retained.

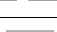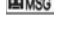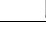- When a call is switched between a voice call and a videophone call, the call that is dialed/received first is stored.
- When more than 30 calls are dialed, the older records are automatically deleted. Even if you turn off the FOMA phone, call records are not deleted.
- In Dual Mode of 2in1, up to 60 redial items, 90 dialed call records, and 120 received call records for Number A and Number B are stored in total.

■ Icons for Redial, Dialed Calls, and Received Calls

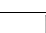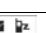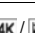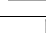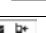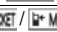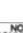 / 	Dialed and received calls/missed calls of voice call
 / 	Dialed and received calls/missed calls of videophone call

 / 	Dialed and received calls/missed calls of PushTalk
 / 	Dialed and received group calls/missed group calls of PushTalk
 / 	Dialed and received calls/missed calls of PushTalk via server’s phonebook
	Voice/Video messages are recorded on Record Message
	Incoming calls of Remote Monitoring
 / 	Dialed and received calls/missed calls of international call
 / 	Dialed and received calls/missed calls of international videophone call
	Dialed calls of 64K data communication
 / 	Received calls/missed calls of 64K data communication
	Dialed calls of packet communication
 / 	Received calls/missed calls of packet communication
	Received calls of 64K data communication and packet communication when no external device is connected
	Received Chaku-moji message
	Records with time difference corrected
	Records for Number B (only in Dual Mode of 2in1)

※ The unchecked missed call icons are highlighted.

Use Redial/Dialed Calls





1 When Using Redial


Press .

When Using Dialed Calls

 ▶ Phonebook ▶ Dialed/rcv. calls
▶ Dialed calls

The list for call records is displayed.

- For redial items of PushTalk, press  to show the Redial List of the group.
Highlight a party and press  to make a PushTalk call. If you do not highlight any party and press , you can make a group call.
- Press  (Change) to display the Sent Address List.

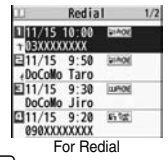

2 Select a call record.

The detailed display for the call record is displayed.





- When the other party is stored in the Phonebook, the phone number, name, and icon are displayed. If the same phone number is stored with multiple names in the Phonebook, the name and icon that come first in the search order (see page 89) are displayed.



Use Received Calls

MENU 2 4

1 Press .

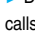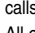- You can display the Received Call List also by  Phonebook  Dialed/recv. calls  Received calls  All calls or Missed calls. All calls







... All the records including missed calls

Missed calls

... The records of missed calls only

In Dual Mode of 2in1, the number of missed calls for Number A and Number B is displayed respectively. (If unchecked missed calls are found, the number of them is displayed.)





- For received call records of PushTalk, press  (Select) to show the Received Call List of the group with "★" mark added to the caller. Highlight a party and press  to make a PushTalk call. If you do not highlight any party and press , you can make a group call.
- Press  (Change) to display the Received Address List.

2 Select a received call record.



- The caller ID is displayed if it was provided; and if this caller has been stored in the Phonebook, the phone number, name, and icon are displayed. If the same phone number is stored with multiple names in the Phonebook, the name and icon that come first in search order (see page 89) are displayed. If there was a call for packet communication, the sender's access point name (APN) is displayed. When the other party's phone number is not notified, the reason for no caller ID is displayed.
- For missed calls, the ring time is displayed on the right of the received date/time.
- When a Chaku-moji message is received, it is displayed.

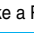

■ To make a call to a displayed redial item, dialed call record, or received call record

Press  to make a voice call. You can make a voice call also by pressing  (Dial) from the detailed display. Press  (Phone) to make a videophone call and press  to make a PushTalk call.


Information

- You can make a voice call to the most recently dialed or received number by pressing  from the Stand-by display and then .

Information

- When you make/receive a call with an additional number of Multi Number, the stored name for the additional number is displayed below the phone number on the detailed display. If you store a phone number for "Number setting" of "Multi number", the phone number is displayed as well.
- The dialed call records of 64K data communication are stored only when the FOMA USB Cable with Charge Function 01 (option) is connected.
- Even if you make a voice call (or videophone call) to the phone number in a received call record with a Chaku-moji message displayed, the received Chaku-moji message is not sent.
- When a call comes in from a party who uses a dial-in phone number, a different phone number might be displayed.

Function Menu while Redial/Dialed Calls/Received Calls is Displayed

Function menu	Operation/Explanation
Notify caller ID	See page 47.
Prefix numbers	See page 59.
Int'l dial assist	See page 58.
2in1 dial	You can select a phone number to be notified to the other party in Dual Mode of 2in1. (See page 374)
Multi number	You can select a phone number to be notified to the other party. (See page 372)
Chaku-moji	See page 55.
Character size	You can switch the character size for the list between Large and Standard. <ul style="list-style-type: none"> The setting here applies to "Dialed/recv. calls" of "Character size".
Add to phonebook	See page 87. <ul style="list-style-type: none"> You can store the phone number in the Phonebook also by pressing  (Store) from the detailed display. Go to step 2 of "Storing Displayed Phone Number/Mail Address in Phonebook" on page 88.
Feel * Talk	See page 110.
Ring time	You can display the ring time for missed calls. [Received Call List only] Even if you have set "Missed calls display" of "Ring time" to "Not display", the missed calls which stopped ringing within the ring start time and their ring times are displayed.
Add desktop icon	See page 114.
Compose message	You can compose a mail message to send to the phone number set as the destination address. Go to step 3 on page 172.
Compose SMS	You can compose an SMS message to send to the phone number set as the destination address. Go to step 3 of "Composing SMS Messages to Send" on page 206.

Function menu	Operation/Explanation
Sent address [Redial/Dialed Calls only]	See page 195.
Received address [Received Calls only]	See page 195.
Delete this	▶ YES
Delete selected	▶ Put a check mark for redial items, dialed call records, or received call records to be deleted ▶ (Finish) ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES
Select image	See page 72.
Store in P-Talk PB	▶ YES
Store P-Talk group	▶ Select a group. ● When members who are not stored in the PushTalk Phonebook are found, the confirmation display appears asking whether to store them. ▶ Enter a group name. ● You can enter up to 16 full-pitch/32 half-pitch characters.

Information

<Delete this> <Delete selected> <Delete all>

- If you execute “Delete all” from the Function menu of Redial/Dialed Calls, all records in both Redial and Dialed Calls are deleted. Even if you execute “Delete this” or “Delete selected” of Redial, the records are not deleted from Dialed Calls and they are retained. To delete the dialed call records, delete them from the Function menu while “Dialed calls” is displayed.

<Store in P-Talk PB>

- You cannot store from the call record for the party who is not stored in the Phonebook.

<Store P-Talk group>

- You cannot store in a PushTalk group unless all the members are stored in the FOMA phone's Phonebook.


<Chaku-moji> Setting Chaku-moji

When making a voice call or videophone call, you can send your text message to tell the subject during calling.

- For details on Chaku-moji or compatible models, refer to DoCoMo web page or “Mobile Phone User's Guide [Network Services]”.
- The sending end is charged, but the receiving end is not charged.

■ When a Chaku-moji message is received

A Chaku-moji message is displayed below a caller. The Chaku-moji message is stored in Received Calls as well.

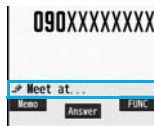

- The Chaku-moji message is displayed only during ringing. It is not displayed during a call.
- Even when a Chaku-moji message comes in within the ring start time set by “Ring time”, it is received and recorded in Received Calls.
- The Chaku-moji message is displayed on the Private window when “Chaku-moji” of “Called” on page 106 is set to “ON”.
- The Chaku-moji message is not displayed during Lock All, Omakase Lock, or Personal Data Lock. However, you can check the Chaku-moji message from Received Calls after the lock is released.

Store Chaku-moji Messages

You can store up to 10 Chaku-moji messages in the Message List.


- 1 ▶ Service ▶ Chaku-moji ▶ Create message
▶ Highlight <Not stored> and press (Edit)
▶ Enter a message.
● To edit a stored message, highlight it and press (Edit).
● You can enter up to 10 characters regardless of whether they are pictographs, symbols, or full-pitch/half-pitch characters.

Make a Call with a Chaku-moji Message

- 1 Enter a phone number
or
bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.
- 2 (FUNC) ▶ Chaku-moji
▶ Do the following operations.

Function menu	Operation/Explanation
Create message	You can create a Chaku-moji message just before dialing. ▶ Enter a message. ● You can enter up to 10 characters regardless of whether they are pictographs, symbols, or full-pitch/half-pitch characters. ● The Chaku-moji message created using this function is not stored in the Message List.
Select message	From the Message List, you can select the stored Chaku-moji message. ▶ Select a message.
Sent messages	From the Sent Message List, you can select a Chaku-moji message to be sent. Up to 10 sent Chaku-moji messages only are stored in the Sent Message List. If you send the same Chaku-moji message, the older one is deleted. When the number of sent Chaku-moji messages exceeds 10, the messages are deleted from the oldest one. ▶ Select a sent message.

3 Press or (Dial).

- Press  (V. phone) to make a videophone call.
- The Chaku-moji message being sent is displayed during dialing.

Information


- When a Chaku-moji message has arrived at the other party's phone, "Transmission completed" is displayed, and you are charged a transmission fee.
- When a Chaku-moji message does not arrive at the other party's phone such as when the other party's phone is not a Chaku-moji compatible mobile phone or the call is not allowed by "Message disp. settings" at the receiving end, "Transmission failed" is displayed. In this case, you are not charged a transmission fee.
- Depending on the radio wave conditions, the transmission result may not be displayed at the sending end even if a Chaku-moji message has arrived at the other party's phone. In this case, you are charged a transmission fee.
- Even if you make a call sending a Chaku-moji message, the Chaku-moji message is not displayed and you are not charged a transmission fee (the call is not recorded in Received Calls at the receiving end) when the other party's phone is out of the service area, turned off, during Public Mode (Drive Mode), or the ring time for Record Message Setting is set to zero seconds. Also, the transmission result is not displayed at the sending end.
- When a videophone call is not connected and automatically dialed as a voice call, the Chaku-moji message is resent as well.
- Chaku-moji does not support PushTalk.
- You cannot send/receive Chaku-moji messages overseas.


Detailed Sent Message


Up to 10 sent Chaku-moji messages are stored in Sent Messages, and you can check for the other party's phone number and the date/time the Chaku-moji messages were sent. Older messages sent to the same phone number are also retained.



- In Dual Mode of 2in1, up to 10 records for Number A and Number B can be displayed in total.


1 **Service** ▶ Chaku-moji ▶ Sent messages

 ... Chaku-moji message successfully sent

 ... Chaku-moji message unsuccessfully sent


 ... Chaku-moji message for Number B (only in Dual Mode of 2in1)

 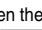- When the transmission result is not displayed, " OK" or " NG" is not displayed.
- Depending on the radio wave conditions, the transmission result might not be displayed correctly.




2 Select a sent message.

- When the other party's phone number is stored in the Phonebook, the phone number, name, and icon are displayed.

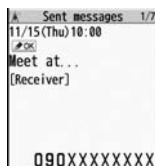

Function Menu while Detailed Sent Message is Displayed

Function menu	Operation/Explanation
Store	You can store a sent Chaku-moji message in the Message List. ▶ <Not stored> • You can store also by pressing  (Store).
Delete this	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Message Display Settings

You can set how incoming Chaku-moji messages are displayed.

1 **Service** ▶ Chaku-moji ▶ Message disp. settings ▶ Select an item.

Display all messages

... Displays Chaku-moji messages from all callers.

Numbers stored in PB

... Displays Chaku-moji messages only from the callers stored in the Phonebook.

Calls with callerID

... Displays Chaku-moji messages only from the caller notifying his/her phone number.

Hide all messages

... Does not display Chaku-moji messages.

Information

- When you set to "Numbers stored in PB", you cannot receive Chaku-moji messages from the callers stored in the Phonebook B in A Mode of 2in1 (and vice versa).

Prefer Chaku-moji

You can set how your FOMA phone works for incoming Chaku-moji messages for when "Setting when opened" is set to "Answer".

1 **Service** ▶ Chaku-moji ▶ Prefer Chaku-moji ▶ ON or OFF

ON ... Does not answer by opening the FOMA phone during ringing, so you can check a Chaku-moji message.

OFF ... Answers by opening the FOMA phone during ringing.

Sending Touch-tone Signals Quickly

You can send touch-tone signals from your FOMA phone to use services such as reserving tickets, checking bank balance, etc.

Store Pause Dial

You need to store a number string to be sent as a touch-tone signal in the Pause Dial List. If you have inserted a pause (p), you can send a number string breaking at the point where the pause is inserted.

- 1 Settings > Other settings > Pause dial > (Edit)

- When a number string is already stored, it is displayed.
- To delete a stored pause dial, press (FUNC) and select "Delete", then select "YES".

2 Enter a number string.

- Enter the pause (p) by pressing and holding for at least one second.
- You can use only through , , to enter a number string and the pause (p).
- You can enter up to 128 digits.
- You cannot enter a pause (p) at the beginning and end of a number string, or enter it consecutively.

Send Pause Dial

- 1 Settings > Other settings > Pause dial > (Send) > Enter a phone number > or (Dial)

A voice call is made. Once the line is connected, a number string stored in Pause Dial is displayed up to the first pause (p).

- When the other party's phone number is stored in the Phonebook, you can retrieve it selecting from the Search Phonebook display by pressing .
- You can search for the phone number also from Received Calls by pressing or from Redial by pressing .

2 Check that the line is connected

- ▶ or (Send)

A number string up to the first pause (p) is sent, and a number string up to the next pause (p) is displayed. A number string up to the pause (p) is sent each time you press or (Send).

When you have finished sending the last number, the "Talking" display appears.

- To send multiple pieces of a number string at a time, press and hold for at least one second, and select "Send at one time".

Information

- During a call, you can send a number string also by displaying the Function menu of the Pause Dial display.
- Some devices on the receiving end cannot receive signals.
- You cannot send a number string with pauses during a videophone call.

<WORLD CALL>

International Calls

WORLD CALL is the international call service available from DoCoMo mobile phones.

When you have signed up for FOMA service, you have contracted to use "WORLD CALL" (except those who have applied not to use it).

- You can call about 240 countries and regions.
- The WORLD CALL charges are added to your monthly FOMA bill.
- The application/monthly fee is free of charge.
- Changes in procedures for international call "My Line" service is not available for mobile communications such as mobile phones, so cannot be used with WORLD CALL. However, in conjunction with the launch of "My Line" service, the dialing procedure for international calls from mobile phones has changed. Note that the old way of dialing (the way without "010" from the operation of "Enter a Phone Number to Make an International Call") no longer works.
- The service is not available with some billing plans.
- Contact "DoCoMo Information Center" on the back page of this manual for inquiries about WORLD CALL.
- When using international carriers other than DoCoMo, contact them.

■About international videophone calls

You can make international videophone calls to the other party who uses a specific 3G mobile phone overseas. Press (V phone) instead of or (Dial) in the steps of "Enter a Phone Number to Make an International Call".


(See page 58)

- For the information about connectable countries and telecommunications carriers, refer to the DoCoMo Global Service web page.
- Images sent from the other party may blur on your FOMA phone or you may not be able to connect, depending on the other party's phone used for the international videophone call.


Enter a Phone Number to Make an International Call

- 1 Enter numbers in order of 009130→010→country code→area code (city code)→destination phone number

▶  or  (Dial)



- When the area code (city code) begins with “0”, enter it except for the “0”. However, include “0” when making a call to some countries or regions such as Italy.
- Press  (V. phone) to make an international videophone call.

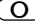
Use “+” to Make an International Call

When you enter a phone number for dialing or storing it in the Phonebook, press and hold  for at least one second to enter “+”. You can use “+” to make international calls without entering an international call access code such as 009130-010.

- If you set “Auto assist setting” of “Int'l dial assist” to “ON”, an international call access code of “IDD prefix setting” is automatically entered.

- 1  (for at least one second)

▶ Enter numbers in order of country code→area code (city code)→destination phone number▶  or  (Dial)▶ Dial

- When the area code (city code) begins with “0”, enter it except for the “0”. However, include “0” when making a call to some countries or regions such as Italy.
- Press  (V. phone) to make an international videophone call.
- When you select “Dial with orig. No.”, you can make a call without adding an international call access code.

International Dial Assist

You can make a call adding a country code or international call access code to a phone number. (Except for some countries and regions, if the phone number starts with “0”, the “0” at the beginning is automatically deleted.)


- 1 Enter a phone number
or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

- 2  (FUNC)▶ Int'l dial assist

▶ Select a country name▶ Select a name


▶  or  (Dial)

- Press  (V. phone) to make an international videophone call.
- When the beginning of the phone number is “+”, you can select only an international call access code.
- When “Japan” is selected as a country name, the display for selecting a name is not displayed.

<International Dial Assist> Setting for International Calls

Auto Assist Setting



You can set whether to replace “+” at the beginning of a phone number with an international call access code for when you make an international call from Japan.

- 1 ▶ Settings▶ Network setting
▶ Int'l dial assist▶ Auto assist setting
▶ ON or OFF▶ Select a country name
▶ Select a name.

- When no country code or international call access code is stored, the confirmation display appears asking whether to store it. Select “YES” and go to step 2 of “Country Code Setting” on page 58 for a country code, and go to step 2 of “IDD Prefix Setting” on page 58 for an international call access code.

Country Code Setting

You can store up to 27 country codes to be added for making international calls from overseas.

- 1 ▶ Settings▶ Network setting
▶ Int'l dial assist▶ Country Code set.
▶ Highlight <Not recorded> and press  (Edit).



- If you select a stored country name, you can check the stored contents.

- 2 Enter a country name▶ Enter a country code.

- You can enter a country name of up to 8 full-pitch/16 half-pitch characters.
- You can enter a country code of up to 5 digits. But you cannot use #, *, and +.

IDD Prefix Setting

You can store up to three international call access codes to be added to the beginning of a phone number for making an international call.

- 1 ▶ Settings▶ Network setting
▶ Int'l dial assist▶ IDD prefix setting
▶ Highlight <Not recorded> and press  (Edit).

- If you select the stored item, you can check the stored contents.

- 2 Enter a name▶ Enter an international call access code.

- You can enter a name of up to 8 full-pitch/16 half-pitch characters.
- You can enter an international call access code of up to 16 digits.

Function Menu while Country Code Setting/IDD Prefix Setting is Displayed

Function menu	Operation/Explanation
Edit	Go to step 2 of "Country Code Setting" on page 58 for Country Code Setting, and go to step 2 of "IDD Prefix Setting" on page 58 for IDD Prefix Setting. <ul style="list-style-type: none"> You can edit the item also by pressing (Edit).
Delete this	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Information

<Delete this> <Delete all>

- You cannot delete the country code or international call access code set by "Auto assist setting".

<Prefix Setting> Storing Numbers to be Added to the Beginning of a Phone Number

You can store prefix numbers such as international call access codes or "186"/"184" and add them to the phone number for dialing. You can store up to seven prefix numbers.

- ▶ Settings ▶ Network setting ▶ Prefix setting ▶ Highlight <Not recorded> and press (Edit).

- If you select a stored prefix, you can check the stored contents.
- To delete a stored prefix, press (FUNC) and select "Delete this" or "Delete all" then select "YES". If you select "Delete all", you need to enter your Terminal Security Code.

2 Enter a name ▶ Enter a prefix number.

- You can enter a name of up to 8 full-pitch/16 half-pitch characters.
- You can enter a prefix number of up to 16 digits. The keys for entry are limited to through , , and .

Prefix Numbers

You can add a prefix number to the beginning of phone number when you make a call.

- Enter a phone number
or
bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

2 (FUNC) ▶ Prefix numbers

- Select a name ▶ or (Dial)

- Press (V.phone) to make a videophone call and press to make a PushTalk call.
- For making a PushTalk call, adding a prefix number such as "186" or "184" to the beginning of the phone number is disabled.

<Sub-address Setting> Making a Call with Specified Sub-address

You can set whether to regard the numbers after "X" of a phone number as a sub-address to access the specified phones or data terminals.

- The sub-address is a number assigned to identify each ISDN terminal connected to an ISDN line. It is also used for selecting contents on "V-live".

- ▶ Settings ▶ Other settings ▶ Sub-address setting ▶ ON or OFF

Information

- Even if you set "Sub-address setting" to "ON", "X" at the top of phone numbers and "X" immediately after the prefix number or "186"/"184" are not regarded as sub-address mark-off symbols.

<Reconnect Signal> Setting Alarm for Reconnecting

You can set an alarm that sounds until a voice call, videophone call, or PushTalk communication is reconnected after disconnected owing to bad radio wave conditions.

- ▶ Settings ▶ Talk ▶ Reconnect signal ▶ Select an alarm.

Information

- The reconnectable time differs depending on the usage status and radio wave conditions. An estimate is about 10 seconds and the call charge is applied also for that duration.
- While you are disconnected, no sound is transmitted to the other party.


<Noise Reduction> Reducing Surrounding Noise to Make Voice Clear

- ▶ Settings ▶ Talk ▶ Noise reduction ▶ ON or OFF


<Hands-free>

Switching to Hands-free

When you switch to Hands-free, sound such as the other party's voice is audible over the speaker.

1 During a call 

When Hands-free is activated, "" is displayed.

- You can activate/deactivate Hands-free during a call. For videophone calls and PushTalk calls, you can activate/deactivate also during dialing or connecting.
- Press  again to deactivate Hands-free.
- The sound volume during a Hands-free call follows the setting specified by "Volume" (earpiece volume).
- You can switch to Hands-free even during Manner Mode. Also, you will still hear voice through the speaker even when you activate Manner Mode during a Hands-free call.

Information

- While the Flat-plug Earphone/Microphone with Switch (option) is connected, you cannot hear voice through the speaker even if you switch to Hands-free.
- Keep the FOMA phone well away from your ear during a Hands-free call. Otherwise you could affect or damage your hearing.
- Talk into the FOMA phone within a distance of about 50 cm.

<In-Car Hands-free>

Using Hands-free Compatible Devices

You can make or receive voice calls from a Hands-free compatible device such as In-Car Hands-Free Kit 01 (option) or a car navigation system by connecting with your FOMA phone.

You can connect your FOMA phone to a Hands-free compatible device using two ways of connections as follows:

• Connect using a cable (USB connection):


To use/charge via the In-Car Hands-Free Kit 01 (option), you need to have the FOMA In-Car Hands-Free Cable 01 (option).

• Connect using Bluetooth (wireless):


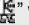
To connect to a Bluetooth compatible Hands-free device, you need to register and connect it to the FOMA phone.

※ For how to operate Hands-free compatible devices, refer to the respective instruction manuals.

Information


- To connect using a cable (USB connection), set "USB mode setting" to "Communication mode".
- "" appears while you are talking or communicating using a USB Hands-free compatible device.

Information

- "" might appear while the FOMA phone is connected to a USB Hands-free compatible device, and "" while "USB mode setting" is set to "microSD mode", depending on the Hands-free device connected.
- The display or ring tone for incoming calls follows the settings of the FOMA phone.
- When the sound is set to output from a Hands-free compatible device, the ring tone sounds from that device even when Manner Mode is activated or "Ring volume" of the FOMA phone is set to "Silent".
- The receiving operation in Public Mode (Drive Mode) works in accordance with the "Public (Drive) mode" setting.
- The receiving operation while Record Message is activated works in accordance with the "Record message setting" setting.
- When the sound is set to output from the FOMA phone, the FOMA phone works in accordance with "Setting when folded" if it is closed during a call. When the sound is set to output from a Hands-free device, the communication state does not change regardless of "Setting when folded" even if you close the FOMA phone.

Receiving a Call/Videophone Call

1 When you receive a call, the ring tone sounds and the Call/Charging indicator flickers.

- To vibrate the FOMA phone for incoming calls, set "Phone" or "Videophone" of "Vibrator" to other than "OFF".
- When receiving a videophone call, "Incoming V.phone" is displayed.
- "" is displayed at the upper right of the phone number for incoming international calls.




Chaku-moji message
(See page 55)


For Answering a Voice Call


Press  or  (**Answer**) to answer the call.

**For Answering a Videophone Call**

Press  or  (**Answer**) to answer the videophone call.

You can send the image through your camera to the other party.

Press  (**Subst.**) to take a videophone call, and the substitute image is sent to the other party. (Substitute image answering)

- Press  during a call to switch between the image through your camera and substitute image for sending to the other party.




Press  to end the call after talking.

Information


- If you close the FOMA phone during a call, the FOMA phone works in accordance with the setting of "Setting when folded". (See page 63)
- You might hear beeps (in-call ring tone) during a call. If you have signed up for any of Voice Mail Service, Call Waiting Service, or Call Forwarding Service and set "Arrival call act" to "Answer", the beeps (in-call ring tone) will sound for another incoming call, enabling you to do the following operations:
 - Voice Mail Service
 - ... Transfer the call to the Voice Mail Service Center. (See page 365)
 - Call Waiting Service
 - ... Put your current call on hold and answer the incoming call. (See page 366)
 - Call Forwarding Service
 - ... Transfer the call to the registered forwarding destination. (See page 368)
- You can set "Reject unknown" not to accept calls from the phone numbers not stored in the Phonebook.

Information

- You cannot answer a call in Horizontal Open Style. However, when the Flat-plug Earphone/Microphone with Switch (option) is connected, you can answer a call in Horizontal Open Style.
- <For Voice Calls>**
- When "Answer setting" is set to "Any key answer", the call is placed on hold if you answer the call by pressing  with the FOMA phone closed. If you have set "Setting when folded" to "No tone" or "End the call", the other party hears nothing, and if you have set "Setting when folded" to "Tone on", the call hold tone is played back. You can start talking by opening the FOMA phone.
- <For Videophone Calls>**
- Just after purchase, Hands-free is automatically activated during a videophone call as "Hands-free w/ V. phone" has been set to "ON". (See page 71) However, Hands-free is deactivated during Manner Mode regardless of "Hands-free w/ V. phone".
 - Even if Call Forwarding Service is set to "Activate", the call is not forwarded unless the forwarding destination is a phone compatible with the videophone conforming to 3G-324M (see page 50). Check the phone you are forwarding the call to and then activate the service. The videophone caller does not hear the guidance to the effect that the call is forwarded. (The message to the effect that the call is to be forwarded appears, depending on the receiver's FOMA phone.)
 - If a videophone call comes in from the phone number to be rejected by Nuisance Call Blocking Service, the video guidance for Call Rejection is played back and the call is disconnected.
 - You can send a Chara-den image to the other party instead of the image through your camera. (See page 69)

■ Display for incoming calls**When a caller's phone number is provided**

If you store the caller's name, phone number, and image in the Phonebook, the name, phone number, and icon (or image) are displayed.

- If the same phone number is stored with multiple names in the Phonebook, the name that comes first in the search order (see page 89) is displayed.
- The phone number but not the name is displayed during Personal Data Lock.
- For a forwarded call, the forwarder's phone number is displayed below the caller. (It might not be displayed in the case of some forwarders.)
- When you receive a call to an additional number of Multi Number, the stored name for the additional number is displayed below the caller. (With a forwarded call, you can press  (**Change**) to switch to display of the forwarder.)

When a caller's phone number is not provided

The reason for no caller ID is displayed. (See page 128)

Function Menu while a Call is Ringing	
Function menu	Operation/Explanation
Call rejection	You can disconnect the call without answering.
Call forwarding	See page 368.
Voice mail	See page 365.

Switched between a Voice Call and Videophone Call by the Other Party

When you have set “Notify switchable mode” to “Indication ON”, the caller (the other party) can switch between a voice call and videophone call.

- You (receiving end) cannot switch between a voice call and videophone call.

Switched from a Voice Call to Videophone Call by the Other Party

1 The display for switching to a videophone call appears during a voice call.

YES . . .Sends the image through your camera to the caller.

NO . . .Sends a pre-installed substitute image to the caller.

- While switching, the message to that effect is displayed and the voice guidance is played back.



Switched from a Videophone Call to Voice Call by the Other Party

When the caller (the other party) switches a videophone call to a voice call, the message telling that the call is being switched appears, the voice guidance is played back, and then the call is switched to a voice call.

<Answer Setting> Setting Response of Key Operation for Answering Incoming Calls

MENU 5 8

You can set to start talking (Any key answer) or to stop the ring tone (Quick silent) by pressing a key besides , , (for videophone call) or (for PushTalk call) for when a call or PushTalk call comes in.

- ▶ Settings ▶ Incoming call ▶ Answer setting ▶ Select a key operation.

Any key answer

You can start talking by pressing any key shown below:

Voice call※1	, , through , , , , , ※2, ,
PushTalk call	, , , through , , , , , , ,

- When receiving a videophone call, you can start talking by pressing , or .

Quick silent

The following are the keys you can press to stop the ring tone, vibrator or voice guidance:

When “Setting when opened” is set to “Keep ringing”, you can open the FOMA phone in Normal Style to stop the ring tone, vibrator or voice guidance. Even if you stop it, the other party hears a calling tone.

Voice call	through , , , , , ※2, ,
Videophone call	through , , , , ※2, ,
PushTalk call	through , , , , , , ,

- After you stop the ring tone, vibrator or voice guidance by the key operation above, you can press , or (for videophone call), or press (for PushTalk call) to start talking.

OFF

You can start talking by pressing a key shown below:

Voice call	,
Videophone call	, ,
PushTalk call	, ,


※1 You can start talking also by pressing when five record messages have already been recorded.

※2 While “Change” is displayed, you cannot start talking or stop the ring tone, vibrator or voice guidance.

Information

- While the Flat-plug Earphone/Microphone with Switch (option) is connected, you can press the switch to start talking, regardless of "Answer setting". (See page 347)

<Setting when Opened> Setting Response for when Opening FOMA Phone during Ringing

- 1  **Settings** ▶ **Incoming call**
 - ▶ **Setting when opened**
 - ▶ **Select an incoming type**
 - ▶ **Keep ringing or Answer**

Information

- If you receive a videophone call with "Answer" set, the still image set for "Substitute image" of "Select image" is sent to the other party.
- You cannot answer calls by opening the FOMA phone in Horizontal Open Style even when "Answer" is set.


<Setting when Folded> Setting Response for when Closing FOMA Phone during a Call

Set Response for when Closing FOMA Phone during a Voice Call/Videophone Call

- 1  **Settings** ▶ **Talk** ▶ **Setting when folded**
 - ▶ **Phone/Videophone** ▶ **Select an item.**

No tone The voice is muted. The hold tone does not sound. The setting is completed.

Tone on The other party hears the hold tone set for "Holding tone" of "Set hold tone" while the FOMA phone is closed.

End the call . . . The call is finished. This is the same operation as pressing  during a call. The setting is completed.

2 **Speaker ON or Speaker OFF**

Speaker ON . . . The hold tone sounds from the speaker.

Speaker OFF . . . The hold tone does not sound from the speaker.

Set Response for when Closing FOMA Phone during PushTalk

- 1  **Settings** ▶ **Talk** ▶ **Setting when folded**
 - ▶ **PushTalk** ▶ **Speaker call or End the call**






Information

- This function is disabled when the Flat-plug Earphone/Microphone with Switch (option) is connected. The communication state does not change even if you close the FOMA phone during a voice call or PushTalk communication. If you close the FOMA phone during a videophone call, the substitute image is sent to the other party with the line connected.
- If you close the FOMA phone during a videophone call with "No tone" activated, a substitute image is sent to the other party. When "Tone on" is set, the still image set for "Holding" of "Select image" is sent.
- If you set to "No tone" or "Tone on", "Holding" is displayed on the Private window when the FOMA phone is closed.
- Even when "End the call" has been set, the call does not end if you close your FOMA phone from Horizontal Open Style. "No tone" works for a voice call/videophone call, and "Speaker call" works for a PushTalk call.

<Volume> Adjusting Earpiece Volume

- 1  **Settings** ▶ **Talk** ▶ **Volume** ▶ **Use**  or  or  to adjust the earpiece volume.

Adjust the earpiece volume to Level 1 (minimum) through Level 6 (maximum).

- During a call, PushTalk call, or calling, you can press  or  to adjust the volume, and while entering phone number, you can press and hold  (for at least one second) to adjust it. Press  or  within two seconds to adjust it.

Information

- The earpiece volume adjusted during a call is retained even after the call ends.
- When you adjust the earpiece volume, the sound volume during a Hands-free call or speaker call for PushTalk is also adjusted.

<Ring Volume>

MENU 5 0

Adjusting Ring Volume


You can adjust the ring volume for incoming calls and mail.


1 Settings ▶ Sound ▶ Ring volume


▶ Select an incoming type

▶ Use  to adjust the volume.




• Following icons are displayed on the Stand-by display while the ring volume is set to "Silent":

: The ring volume for voice calls, PushTalk calls or videophone calls is "Silent".

: The ring volume for mail, chat mail or Messages R/F is "Silent".

: The ring volume for voice calls, PushTalk calls, or videophone calls is "Silent" and the ring volume for mail, chat mail, or Messages R/F is "Silent".

• If you have set "Step", the ring tone is silent for about three seconds, and then the volume steps up every three seconds, from Level 1 through Level 6.

• During ringing of a voice call or videophone call, you can adjust the ring volume also by pressing  or by pressing and holding / for at least one second.

However, you cannot adjust the ring volume in the following cases:

- Ring Volume is set to "Step".
- "Answer setting" is set to "Quick silent" and you stop the ring tone or voice guidance.
- During Manner Mode
- Incoming calls within the ring start time specified by "Ring time"

<On Hold>

Putting an Incoming Call on Hold when You cannot Answer at Once


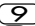

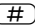








1

The FOMA phone makes three rapid beeps for confirmation and the call is put on answer-hold (On Hold).



• The confirmation tone does not sound while Manner Mode is activated or when "Phone" of "Ring volume" is "Silent".


• The other party hears the hold tone set for "On hold tone" of "Set hold tone". For videophone calls, the still image set for "On hold" of "Select image" is displayed.

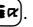2 Press (Answer) or to release hold and answer the call.


• If "Answer setting" is set to "Any key answer", you can release hold of voice calls by pressing any key of  through , , , , , , , , , , or .

• If a videophone call is on hold, the image through your camera is sent to the other party by pressing

 (Answer) or  to release hold. If you press

 (Subst.) to release hold, the substitute image is sent.

Information

- The caller is charged for the call even during answer-hold (On Hold).
- If you press  during answer-hold (On Hold), the call will be disconnected.

<Holding>

Putting a Call on Hold during a Call



1 During a call (Hold)


• The other party hears the hold tone set for "Holding tone" of "Set hold tone". For videophone calls, the still image set for "Holding" of "Select image" is displayed.

• You can put the call on hold by closing the FOMA phone during the call if you have set "Setting when folded" to "Tone on".

2 Press (Answer) or to release hold and answer the call.

• If a videophone call is on hold, the image through your camera is sent to the other party by pressing

 (Answer) or  to release hold. If you press

 (Subst.) to release hold, the substitute image is sent.

• If you have set "Setting when folded" to "Tone on" and put the call on hold by closing the FOMA phone, open the FOMA phone or connect the Flat-plug Earphone/Microphone with Switch (option) to answer the call. If you connect the Flat-plug Earphone/Microphone with Switch to answer the videophone call, the substitute image is sent to the other party.

Information

- The caller is charged for the call even while the call is on hold.
- If a new call comes in while the current call is put on hold, the hold (Holding) is released.

Setting Hold Tone

You can set the guidance the other party hears during on hold.

- 1 Settings > Talk > Set hold tone
 - ▶ On hold tone or Holding tone
 - ▶ Select a hold tone.

Tone 1/2

... The caller hears the pre-installed guidance in Japanese.

JESU JOY OF MAN'S

... The caller hears the melody. You can set this for "Holding tone" only.

Voice announce

... The caller hears the sound recorded by "Voice announce". If it has not been recorded, this is not displayed.

- Press (Play) to play back a hold tone. Press to end the demo playback.

Using Public Mode (Drive Mode)

Public Mode is an auto-answer service that puts importance on manners in public spaces. Once you activate Public Mode, the guidance is played back telling that you cannot answer the call as you are currently driving or in a place (a train, bus, movie theater, etc.) where you should refrain from answering the call. Then the call is disconnected.

- 1 Press and hold for at least one second.

Public Mode is activated and is displayed.

When a call comes in, the guidance "The person you are calling is currently driving or in an area where cell phone should not be used. Please try again later." is played back for incoming calls.

- To deactivate Public Mode, perform the same operation. Then, Public Mode is deactivated and disappears.

Information

- You can activate/deactivate Public Mode only from the Stand-by display. You can activate/deactivate Public Mode even when is displayed.
- You can make calls as usual even during Public Mode.
- If you make an emergency call at 110/119/118, Public Mode is released.
- When Public Mode and Manner Mode are activated simultaneously, Public Mode has priority.
- If a "User unset" call comes in while "Caller ID request" is set to "Activate", the Caller ID Request guidance is played back. (The Public Mode guidance is not played back.)
- You cannot use this function during data communication.

■ When Public Mode (Drive Mode) is activated

- Even when a call comes in, the ring tone does not sound. The "Missed call" icon appears on the display and the call is stored in "Received calls". The guidance is played back to the caller to the effect that you are currently driving or in an area where mobile phones should not be used. Then the call is disconnected. When a PushTalk call comes in, no answer is made and the message "Connection failed" appears on the caller's display. For the talk among three or more members, the message to the effect that you are driving is conveyed to them. However, when the power is off or is displayed, the caller hears the out-of-service area guidance instead of the Public Mode guidance.
- The ring tone does not sound and the Call/Charging indicator does not flicker even when mail or a message comes in. In addition, the set vibrator does not work.
- The ring tone for 64K data communication, alarm tone, and charging confirmation tone do not sound, and a melody while i-cplli is running is not played back.
- The tickers of i-Channel are not displayed.
- The Call/Charging indicator does not light for "Illum. when folded".

■ Relations between incoming calls during Public Mode (Drive Mode) and respective services

Service	Responses to Incoming Voice Calls	Responses to Incoming Videophone Calls
Voice Mail Service ^{**}	Plays back the Public Mode guidance, and then the call is connected to the Voice Mail Service Center.	Does not play back the video guidance for Public Mode, and the call is connected to the Voice Mail Service Center.
Call Forwarding Service ^{**}	Plays back the Public Mode guidance, and then the call is forwarded to the forwarding destination. Whether the guidance is played back or not depends on the guidance setting of Call Forwarding Service. If "Plays guidance" is set, plays back the Public Mode guidance. If "Does not play guidance" is set, does not play back the guidance.	Does not play back the video guidance for Public Mode, and the call is forwarded to the forwarding destination. If the destination does not support videophone calls, the call is disconnected.
Call Waiting Service	Plays back the Public Mode guidance, and then the call is disconnected.	Plays back the video guidance for Public Mode, and then the call is disconnected.

Service	Responses to Incoming Voice Calls	Responses to Incoming Videophone Calls
Nuisance Call Blocking Service	For the call from the phone number registered to be rejected, plays back the Call Rejection guidance, and then the call is disconnected.	For the call from the phone number registered to be rejected, plays back the video guidance for Call Rejection, and then the call is disconnected.
Caller ID Display Request Service	For the caller without a caller ID, plays back the Caller ID Request guidance, and then the call is disconnected. For the caller with a caller ID, plays back the Public Mode guidance, and then the call is disconnected.	For the caller without a caller ID, plays back the video guidance for Caller ID Request, and then the call is disconnected. For the caller with a caller ID, plays back the video guidance for Public Mode, and then the call is disconnected.

※ When the ring time is set to 0 seconds, the FOMA phone is out of the service area, or the power is off, the Public Mode guidance is not played back, but Voice Mail Service or Call Forwarding Service works. Note that in this case the call is not notified by the "Missed call" icon and not stored in "Received calls".

<Public Mode (Power Off)> Using Public Mode (Power Off)

Public Mode (Power Off) is an auto-answer service that puts importance on manners in public spaces. Once you activate Public Mode (Power Off), the guidance is played back telling that you cannot answer the call as you are currently in a place (hospital, airplane, around priority seat in a train, etc.) where use is prohibited. Then the call is disconnected.

1 Enter "✖25251"

- Public Mode (Power Off) is set. (Nothing is changed on the Stand-by display.)
After setting Public Mode (Power Off) and turning off the power, the guidance "The person you are calling is currently in an area where use is prohibited. Please try again later." is played back for incoming calls.
- To release Public Mode (Power Off), dial "✖25250".
 - To check the setting for Public Mode (Power Off), dial "✖25259".

■ When Public Mode (Power Off) is activated
The setting stays activated until you dial "✖25250" to deactivate Public Mode (Power Off). You cannot deactivate the setting just by turning on the power.
The guidance is played back to the caller telling that you are currently in a place where you should turn off the power. Then the call is disconnected. When a PushTalk call comes in, no answer is made and the message "Connection failed" appears on the caller's display. For the talk among three or more members, the message to the effect that you do not participate is conveyed to them.
The Public Mode (Power Off) guidance is played back even when you are out of the service area or out of reach of radio waves.

■ Relations between incoming calls during Public Mode (Power Off) and respective services

Service	Responses to Incoming Voice Calls	Responses to Incoming Videophone Calls
Voice Mail Service	Plays back the Public Mode (Power Off) guidance, and then the call is connected to the Voice Mail Service Center.*	Does not play back the video guidance for Public Mode (Power Off), and the call is connected to the Voice Mail Service Center.
Call Forwarding Service	Plays back the Public Mode (Power Off) guidance, and then the call is forwarded to the forwarding destination.* Whether the guidance is played back or not depends on the guidance setting of Call Forwarding Service. If "Plays guidance" is set, plays back the Public Mode (Power Off) guidance. If "Does not play guidance" is set, does not play back the guidance.	Does not play back the video guidance for Public Mode (Power Off), and the call is forwarded to the forwarding destination. If the destination does not support videophone calls, the call is disconnected.
Nuisance Call Blocking Service	For the call from the phone number registered to be rejected, plays back the Call Rejection guidance, and then the call is disconnected.	For the call from the phone number registered to be rejected, plays back the video guidance for Call Rejection, and then the call is disconnected.

Service	Responses to Incoming Voice Calls	Responses to Incoming Videophone Calls
Caller ID Display Request Service	For the caller without a caller ID, plays back the Caller ID Request guidance, and then the call is disconnected. For the caller with a caller ID, plays back the Public Mode (Power Off) guidance, and then the call is disconnected.	For the caller without a caller ID, plays back the video guidance for Caller ID Request, and then the call is disconnected. For the caller with a caller ID, plays back the video guidance for Public Mode (Power Off), and then the call is disconnected.

※ When the ring time is set to 0 seconds, the Public Mode (Power Off) guidance is not played back, but Voice Mail Service or Call Forwarding Service works.

<Missed Call> If You could not Answer an Incoming Call

When you could not answer calls (Missed calls), the “Notification icon” appears on the Stand-by display. You can check Received Calls by selecting the icon.



Notification icon

- Press or **CLR** to return to the former display.
- When multiple icons are found, use to highlight an icon and press (**Select**).
- See page 30 for when the FOMA phone is closed.

<Record Message Setting>

Recording Voice/Video Messages when You cannot Answer the Call

By activating Record Message, you can play back an answer message to incoming calls and record callers' voice/video messages when you cannot answer them even if you have not signed up for Voice Mail Service. You can record up to five messages for voice calls and up to two messages for videophone calls. Each message can be recorded for up to 20 seconds.

Activate Record Message


- 1 ► **LifeKit** ► **Rec. msg/voice memo**
► **Record message setting** ► **ON or OFF**
► **Select an answer message.**

- Press (**Play**) to play back the answer message. Press **CLR** to end the demo playback.
- When “Japanese 1”, “Japanese 2”, or “English” is set, a beep sounds after playing back the answer message to the other party. If “Voice announce” is set, the beep does not sound.

2 Enter a ring time (seconds).

- Enter from “000” through “120” in three digits.
- You cannot set the same ring time for Remote Monitoring, Auto Answer Setting and Record Message Setting. Set a different time for each.
- While Record Message is activated, “”~“” (the number of recorded messages for voice calls) and “”~“” (the number of recorded messages for videophone calls) are displayed.

■ Incoming calls when Record Message Setting is set to “ON”

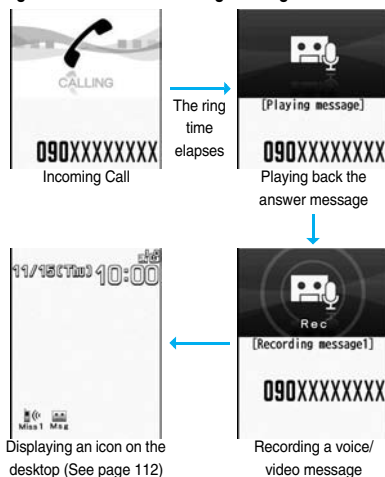

For videophone calls, the still image set for “Preparing” of “Select image” is displayed on the other party’s display while playing back the answer message, and the still image set for “Record message” of “Select image” is displayed while recording.

- To answer a call while the answer message is played back or a voice/video message is recorded, press (**Answer**) or .

For videophone calls, press (**Answer**) or to send the image through your camera, or press (**Subst.**) to send a substitute image.

You can answer a call also by pressing the switch on the Flat-plug Earphone/Microphone with Switch (option). For videophone calls, the image through your camera is sent to the other party.

Information

- Record Message does not work when "☎" is displayed.
- When Public Mode (Drive Mode) and Record Message are simultaneously activated, the former has priority and the latter does not work.
- The priority order of answer messages is as follows: "Setting for Phonebook entry" → "Group setting" → "Record message setting".
- If "Voice announce" selected as an answer message is deleted, the answer message will be set to "Japanese 1".
- When Voice Mail Service or Call Forwarding Service is set at the same time as Record Message, the priority depends on the ring time set for Voice Mail Service or Call Forwarding Service. To give Record Message priority, set the ring time for Record Message Setting shorter than that for Voice Mail Service or Call Forwarding Service. Even when you do this, Voice Mail Service or Call Forwarding Service will work if there are already five record messages for voice calls and two record messages for videophone calls.
- You cannot receive a call from a third party while a voice/video message is being recorded. The third party will hear the busy tone.

<Quick Record Message>



Recording Voice/Video Messages when You cannot Answer the Call during Ringing




Even if a call comes in while Record Message is not activated, you can record the caller's voice/video message just for that incoming call.

1 During ringing   or 

Manner Mode is also activated.


The caller will hear the answer message and then can leave you a voice/video message.

- Record Message does not work when five messages for voice calls and two messages for videophone calls have already been recorded or when a PushTalk call comes in. Only Manner Mode is set when you operate by pressing .
- When "Side keys guard" is set to "ON", you cannot activate Record Message by pressing  with the FOMA phone closed.




  

<Play/Erase Messages>
<Play/Erase Videophone Messages>
Playing Back/Erasing Record Messages/a Voice Memo/Record Messages/Movie Memos


Play Back/Erase Record Messages/a Voice Memo

- 1**  **LifeKit** ▶ **Rec. msg/voice memo**
▶ **Play/Erase msg.**
▶ **Select a record message or voice memo.**


A beep sounds and playback starts.

- On the Record Message List, recorded items are indicated by "★".
- It is played back at the volume set for "Volume" (earpiece volume).
- When playback ends, a double-beep sounds and the message "Playing" is cleared from the display.
- The date and time the message/memo was recorded are displayed during playback. When a caller's phone number is provided, it is displayed. If the caller is stored in the Phonebook, his/her name is also displayed. However, the name is not displayed and the phone number only is displayed in the following cases:
 - When you play back a record message from the caller stored as secret data in Normal Mode
 - When you play back a record message for Number A in B Mode (or vice versa) while using 2in1
- If the caller's phone number is displayed during playback, you can make a voice call to that phone number by pressing . Press  (V. phone) to make a videophone call and press  to make a PushTalk call.

**To play back using** 

From the Stand-by display, press  to play back the latest record message. When record messages are not recorded, a voice memo is played back.

To skip to next message

Each time you press  during playback, messages are played back in the following order: the next new record message → the oldest record message → a voice memo.

To cancel playback midway

Press  (Stop) or  (CLR).

Play Back/Erase Videophone Record Messages/Movie Memos

- 1 ▶ **LifeKit ▶ Rec. msg/voice memo**
▶ **Play/Erase VP msg. ▶ Select a videophone record message or movie memo.**

- On the Videophone Record Message List, recorded items are indicated by "★".
- It is played back at the same volume of the playback sound of i-motion movies.
- The date and time the message/memo was recorded are displayed during playback.



■ To play back using

From the Stand-by display, press and hold for at least one second to play back the latest videophone record message. When videophone record messages are not recorded, the latest movie memo is played back.

■ To cancel playback midway

Press or .

Function Menu of the Record Message List/ Videophone Record Message List

Function menu	Operation/Explanation
Play	You can play back a message.
Erase this	▶ YES ● You can erase a message/memo also by pressing (Erase) during playback.
Erase rec. msg.	You can erase all record messages from the Record Message List, and can erase all videophone record messages from the Videophone Record Message List. ▶ YES
Erase movie memo [Videophone Record Message List only]	You can erase all movie memos. ▶ YES
Erase all	You can erase all record messages and a voice memo from the Record Message List, and can erase all videophone record messages and movie memos from the Videophone Record Message List. ▶ YES

Using Chara-den

You can send a Chara-den image instead of the image through your camera.

- See page 288 for Chara-den images.

Set by Call

You can set a Chara-den image to be sent to the other party for making a videophone call.

1 Chara-den display/Chara-den List

- ▶ (**phone**)

Enter the destination phone number and press

(**phone**) to make a videophone call.

- When the other party's phone number is stored in the Phonebook, you can retrieve it selecting from the Search Phonebook display by pressing .
- You can search for the phone number also from Received Calls by pressing or from Redial by pressing .

Information

- The priority order of substitute images to be sent to the other party is as follows: "Setting by call" → "Setting for Phonebook entry" → "Group setting" → "Select image".

Substitute Image

You can set a Chara-den image for "Substitute image" of "Select image".

1 Chara-den display/Chara-den List/Chara-den Recording display ▶ (**FUNC**)

- ▶ **Substitute image**

- From the Chara-den List, you can set it also by pressing (**Subst**).

Chara-den Setup

You can perform settings for a Chara-den call. These settings are effective only for during a videophone call.

1 During a Chara-den call ▶ (**FUNC**)

- ▶ **Chara-den setup**
▶ **Do the following operations.**

Item	Operation/Explanation
Switch Chara-den	▶ Select a Chara-den image. ● If you switch Chara-den images, the action mode switches to Whole Action Mode.
Action list	You can display the list for actions that you can operate. ● Highlight an action and press (Select) to execute the action. Press (Detail) to check the details of the action. ● You can display the Action List also by pressing (X).

Item	Operation/Explanation
Change action	You can switch the action mode between
At videophone start-up	Whole Action Mode (📞) and Parts Action Mode (👤).
Whole Action Mode	<ul style="list-style-type: none"> You can switch modes also by pressing .

SW substitute img. You can switch a substitute image to be sent to the other party to the still image set for “Pre-installed” of “Select image”.

SW org. subst. img. You can switch a substitute image to be sent to the other party to the still image set for “Original” of “Select image”.

Useful Functions for Videophone Calls

Switching Cameras

At videophone start-up	Inside camera
------------------------	---------------

You can switch images to be sent to the other party from through the inside camera to through the outside camera.

- During a videophone call ▶ (OUT)
 - Press (IN) again to switch to the image through the inside camera.
 - The setting here is effective only for the current videophone call.

Send Substitute Images

You can switch images to be sent to the other party from the image through your camera to the still image or Chara-den image set as the substitute image. See page 288 for Chara-den.

- During a videophone call ▶ (Subst.)

The substitute image is sent to the other party. “” is displayed while the still substitute image is being sent, and “” is displayed if you have set a Chara-den image as a substitute image (during a Chara-den call).

 - Press (Me) again to switch from the substitute image to the image through your camera.


Information

- The priority order of substitute images to be sent to the other party is as follows: “Setting by call” → “Setting for Phonebook entry” → “Group setting” → “Select image”. Note that “Setting for Phonebook entry” and “Group setting” are disabled when a videophone call comes in without notifying the caller ID.
- Even when you make a videophone call sending a substitute image, you are charged for the digital communication.

Switch Image Display Positions

You can switch the display locations of the receiving image and the sending image.

- During a videophone call, press (Change).

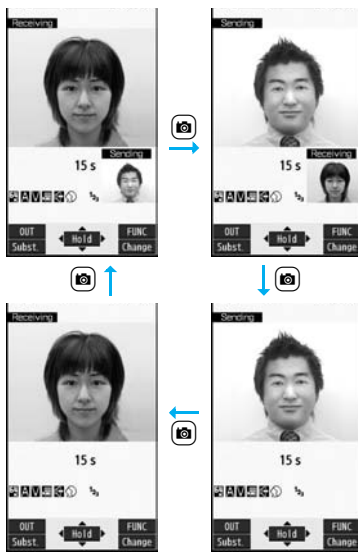

- Each time you press (Change), the displays switch.

Zoom

At videophone start-up	Wide
------------------------	------

You can adjust the magnification for the camera image to be sent to the other party. During a videophone call, the maximum magnification is about 3.3 times for the inside camera and about 5.5 times for the outside camera.

- During a videophone call ▶ Use to adjust the magnification.
 - The former zoom setting returns when the videophone call ends.

Function Menu during Videophone Call

Function menu	Operation/Explanation
CHG to voice call	See page 52.
Photo light	You can turn on the photo light when sending the image through the outside camera to the other party. ▶ ON or OFF
At videophone start-up	OFF
Talk on BT/Phone	You can set whether to communicate through the FOMA phone or a Bluetooth device. (See page 352)

Function menu	Operation/Explanation				
Send DTMF tone/DTMF tone OFF	<p>During a Chara-den call, you can switch to the DTMF Transmission Mode that enables you to enter the data from the numeric keys and to send DTMF (touch-tone signals). You can operate it only during a Chara-den call.</p> <ul style="list-style-type: none"> •“Send DTMF tone” is displayed when the mode is not DTMF Transmission Mode and “DTMF tone OFF” is displayed in DTMF Transmission Mode. •In DTMF Transmission Mode, you cannot operate the action of Chara-den images. •The DTMF tone may not be received depending on the device of a receiving end. 				
V.phone settings (Visual preference)	See page 71.				
V.phone settings (Brightness)	<p>You can adjust the brightness of the camera image to be sent to other party to -3 (dark) through +3 (bright).</p> <p>▶ Brightness ▶ Select a brightness level.</p> <table border="1"> <tr> <td>At videophone start-up</td> <td></td> </tr> <tr> <td>0</td> <td></td> </tr> </table>	At videophone start-up		0	
At videophone start-up					
0					
V.phone settings (White balance)	<p>You can adjust the colors of the camera image to be sent to the other party, to make the colors look more natural.</p> <p>▶ White balance ▶ Select an item.</p> <table border="1"> <tr> <td>At videophone start-up</td> <td></td> </tr> <tr> <td>Automatic</td> <td></td> </tr> </table> <p>Fine weather For talking outdoors in fine weather</p> <p>Cloudy weather For talking in cloudy weather or in the shade</p> <p>Automatic For adjusting white balance automatically</p> <p>Light bulb For talking under incandescent light</p>	At videophone start-up		Automatic	
At videophone start-up					
Automatic					
V.phone settings (Color mode set)	<p>You can switch the color tone of the camera image to be sent to the other party.</p> <p>▶ Color mode set ▶ Select a color tone.</p> <table border="1"> <tr> <td>At videophone start-up</td> <td></td> </tr> <tr> <td>Normal</td> <td></td> </tr> </table>	At videophone start-up		Normal	
At videophone start-up					
Normal					
V.phone settings (Night mode)	<p>You can lengthen the camera’s exposure time to make the camera image to be sent clear in a dark place.</p> <p>▶ Night mode ▶ ON or OFF</p> <table border="1"> <tr> <td>At videophone start-up</td> <td></td> </tr> <tr> <td>OFF</td> <td></td> </tr> </table>	At videophone start-up		OFF	
At videophone start-up					
OFF					
V.phone settings (Focus)	<p>You can set the focus for the outside camera during a videophone call.</p> <p>▶ Focus ▶ Close-up or Landscape</p> <ul style="list-style-type: none"> •The focus for the inside camera is fixed to “Portrait” (suitable mode to shoot portraits), so you cannot change the setting. 				
Chara-den setup	See page 69.				
Backlight	<p>You can select whether to light the display constantly or light for about 15 seconds after an operation.</p> <p>▶ Constant light or 15 seconds light</p>				
LCD AI	See page 107.				
Own number	You can display your phone number.				
Key guide	You can display the guide of key operation during a videophone call.				

<Hands-free with Videophone> Setting Videophone Hands-free

You can set whether to switch to Hands-free automatically for when a videophone call starts.

-  ▶ Settings ▶ Videophone ▶ Hands-free w/ V. phone ▶ ON or OFF

- See page 60 for the operation while Hands-free is activated and how to switch to Hands-free.

<Visual Preference> Setting Image Quality for Videophone Calls

You can set the quality of both the receiving image and sending image on the display.

-  ▶ Settings ▶ Videophone ▶ Visual preference ▶ Select an image quality.

- “Prefer motion spd” is effective for moving images. When there is little motion, the quality becomes better if you set to “Prefer img qual”.
- If you operate from the Function menu during a videophone call, the setting is effective only for the current videophone call.

Information

- If the radio wave conditions weaken during a videophone call, the image may appear like a mosaic.

<Select Image> Changing Image Displays for Videophone Calls

You can set an image to be sent to the other party instead of the camera image.

-  ▶ Settings ▶ Videophone ▶ Select image ▶ Select an item.



- On hold** Sets an image for during answer-hold (On hold).
- Holding** Sets an image for while a call is on hold (Holding).
- Substitute image** Sets a substitute image (still image or Chara-den) for when a camera is off.
- Record message** Sets an image while recording a record message.
- Preparing** Sets an image for while playing back an answer message.
- Movie memo** Sets an image for while recording a movie memo.

2 Select an image.

Pre-installed . . . For sending a pre-installed still image to the other party.

Original For sending an appropriate message with a still image stored using "Set display".

Chara-den For sending a Chara-den image selected by "Substitute image". (See page 69)
(Displayed only when "Substitute image" has been selected in step 1.)

- Press  **Play** to play back a demo to check the still image or Chara-den image.
- To change the setting of "Original" or "Chara-den", press  **FUNC**, select "Change setting", then select a still image or Chara-den image. If you have selected "Original", select a still image after selecting a folder. See "Set display" for settable still images.

Information

- Even if you delete the still image selected from "Original", that still image is displayed to the other party. To change, set by "Change setting" or "Set display".

Set by Call

You can set an image to be sent to the other party for making a videophone call.

1 Enter a phone number

or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

2 **FUNC** ▶ Select image ▶ Me or Chara-den

- The setting is completed when you select "Me".
- To cancel the setting by call, select "Release". The setting is completed.

3 Select a Chara-den image.

<Voice Call Auto Redial> Redialing as a Voice Call when a Videophone Call cannot be Connected

If a videophone call cannot be connected, it will be automatically redialed as a voice call.

1 **MENU** ▶ Settings ▶ Videophone ▶ Voice call auto redial ▶ ON or OFF

Information

- The charges for calls once switched to voice calls are billed at the rates for the voice calls.

Information

- Voice Call Auto Redial does not work when a videophone call cannot be connected such as when the line is busy or the other party's phone is in Public Mode (Drive Mode). However, Voice Call Auto Redial works when you make a videophone call to a phone that does not support the videophone function.

<Notify Switchable Mode> Setting for Switching between a Voice Call and a Videophone Call

You can let the other party know that your FOMA phone can switch between a voice call and videophone call.

This function is set to "Indication ON" at the time of contract. When "Notify switchable mode" is set to "Indication ON", the caller can switch between the videophone call and voice call.

- You cannot operate "Notify switchable mode" when you are out of the service area or radio waves do not reach, or during a call.

1 **MENU** ▶ Settings ▶ Videophone ▶ Notify switchable mode ▶ Do the following operations.

Item	Operation/Explanation
Indication ON	▶ YES ▶ OK
Indication OFF	▶ YES ▶ OK
Check indication	You can check the setting of the function.

<Videophone while Packet> Selecting Response to Incoming Videophone Calls during i-mode

1 **MENU** ▶ Settings ▶ Incoming call ▶ V-phone while packet ▶ Select an item.

V-phone priority

. . . Shows the Videophone Call Receiving display. When you answer the videophone call, packet communication is disconnected.

Packet downld priority

. . . Rejects the videophone call and continues the communication.

V-phone answerphone

. . . Connects the incoming videophone call to the Voice Mail Service Center.

Call forwarding

. . . Forwards the incoming videophone call to the forwarding destination.

Information

- If you have not signed up for Voice Mail Service or Call Forwarding Service, "Packet downld priority" works even if you set to "V-phone answerphone" or "Call forwarding".

Connecting FOMA Phone to External Devices to Use Videophone Function

You can operate your FOMA phone from an external device such as your personal computer for making or receiving videophone calls by connecting them using the FOMA USB Cable with Charge Function 01 (option).

To use this function, you need to install a videophone application program on a dedicated external device or personal computer, and further, you need to prepare equipment (commercial item) such as an earphone/microphone or USB compatible web camera.


- For operating environments for a videophone application program and how to set or operate it, refer to the instruction manual or other literature for an external device.

- You can use "ドコモテレビ電話ソフト (DoCoMo Videophone Software)" for the application program that supports this function.

Download it from the DoCoMo Videophone Software web site.

(For details such as operating environment for the personal computers, refer to the support web page.)

<http://videophonesoft.nttdocomo.co.jp/> (Japanese only)

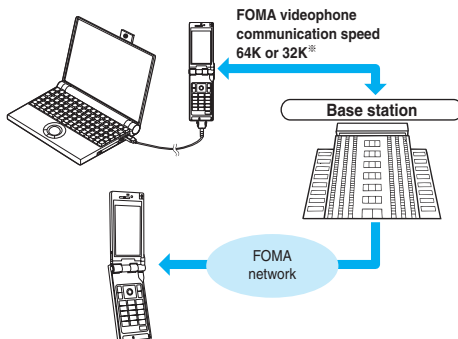

※ You cannot make a videophone call at 32 kbps communication speed.

Information

- You cannot make a videophone call from the external device during a voice call.
- When you have signed up for Call Waiting Service, an incoming videophone call from an external device during a voice call is recorded as a missed call in Received Calls. The same applies for an incoming voice call, videophone call, and 64K data communication during a videophone call from an external device.

<Remote Monitoring> Checking inside the Room when You are Out

You can use the inside camera of the FOMA phone as a monitoring camera to observe the remote location from a phone that has the videophone function based on 3G-324M. While "Remote monitoring" is set to "ON", the FOMA phone automatically starts Remote Monitoring when it receives a videophone call from a phone number stored as "Other ID" of "Remote monitoring". (The FOMA phone needs to be set to Normal Style.)

1 [MENU] ▶ Settings ▶ Videophone

▶ Remote monitoring

▶ Enter your Terminal Security Code.

- To release Remote Monitoring, select "Set", then select "OFF".

2 Other ID ▶ <Not recorded>

▶ Enter a phone number.

- To change, select the stored phone number.

- You can store up to five phone numbers that can enter up to 26 digits by using numerals, #, *, or +.

- To return to the setting display for Remote Monitoring, press [CLR] from the Other ID List after storing phone number.



3 Ring time ▶ Enter a ring time (seconds).

- You can enter the time from "003" through "120" in three digits until Remote Monitoring starts after receiving a videophone call.
- You cannot set the same ring time for Remote Monitoring, Auto Answer Setting and Record Message Setting. Set a different time for each.

4 Set ▶ ON

- When receiving videophone calls from the phone numbers stored as "Other ID", the FOMA phone automatically answers to start Remote Monitoring after the ring time elapses.
- "☎" is displayed while this function is set to "ON".
- You cannot set to "ON" in Manner Mode.

Function Menu of the Other ID List

Function menu	Operation/Explanation
Look-up address	You can call up a phone number in the Phonebook, Dialed Calls, or Received Calls to enter it. ▶ Select an item.
Phonebook	Call up a Phonebook entry and select a phone number.
Dialed calls	Highlight a phone number and press [Select].
Received calls . . .	Highlight a phone number and press [Select].
Delete this	▶ YES

Function menu	Operation/Explanation
Delete all	▶ YES

Information

<Delete this> <Delete all>

- If you delete all phone numbers stored as "Other ID", "Remote monitoring" is set to "OFF".

Perform Remote Monitoring




1 Make a videophone call from a stored phone number.


After the ring time set for "Remote monitoring" elapses, Remote Monitoring automatically starts.

- The image through the receiving end's camera appears on the display and the sound comes out of the speaker.
- You cannot set Voice-only Remote Monitoring.
- Make a videophone call notifying your caller ID. If the caller ID is not notified, Remote Monitoring will not start and the call will be handled as an ordinary incoming videophone call.

2 Remote Monitoring ends when the calling end or receiving end presses .

■ For answering a videophone call without starting Remote Monitoring at the receiving end

Press  (Answer) or  before the FOMA phone answers a videophone call automatically. If you press  (Subst.), the videophone call starts sending the substitute image to the other party.

- When a remote monitoring call comes in, "Setting when opened" is disabled.
- If you press  when a remote monitoring call comes in, the call will be cut and Remote Monitoring will not start.

Information

- When your FOMA phone is used for the receiving end, an image through the caller's camera appears, and sound comes out. (You cannot switch to a substitute image.)
- Remote Monitoring does not start during Manner Mode and Public Mode (Drive Mode). However, it starts even during Lock All.
- When Remote Monitoring is set to "ON" and a videophone call comes in from the phone number set as "Other ID", Remote Monitoring starts after the set ring time, even when "Ring time", "Auto answer setting", or "Record message setting" is set and regardless of their ring times.
- When Remote Monitoring is not performed, it is recorded in Received Calls as a missed videophone call.
- If the Flat-plug Earphone/Microphone with Switch (option) is connected when a remote monitoring call comes in, the ring tone will sound from both the earphone and the speaker, even when "Headset usage setting" is set to "Headset only".

Information

- The ring tone for Remote Monitoring sounds. (You cannot change the ring tone for Remote Monitoring.)
The ring tone sounds at the volume set for "Videophone" of "Ring volume", but at "Level 2" if you have set "Step", "Level 1" or below.
The flickering color is "Gradation", and its flickering pattern is "Standard", regardless of the Illumination setting.
- You cannot put incoming remote monitoring calls on answer-hold (On Hold).
- If you set both Call Forwarding Service and Remote Monitoring, and give priority to Remote Monitoring, set its ring time shorter than that for Call Forwarding Service.
- To use Call Forwarding Service for Remote Monitoring, store the phone number of dialing side as "Other ID" and set a 3G-324M videophone as the forwarding destination.
- **You may be imposed punishment according to the law and rule (such as the nuisance prevention ordinance) if you use the FOMA phone to give a remarkable nuisance and misdeed to the public.**



Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

PushTalk



What is PushTalk?	76
Making a PushTalk Call	76
Adding a Member during PushTalk Communication	77
Receiving a PushTalk Call	78
Storing in PushTalk Phonebook	79
Making a PushTalk Call Using PushTalk Phonebook	80
Deleting PushTalk Phonebook Entries	80
Making Full Use of PushTalk Phonebook	81
Setting PushTalk Calling/Receiving	81

What is PushTalk?

You can communicate with multiple persons (up to five persons including yourself); press the PushTalk key to access the PushTalk Phonebook, select the persons you want to talk with, and press the PushTalk key. You are charged a PushTalk communication fee each time you press (talk) the PushTalk key.

- For details on PushTalk or compatible models, refer to DoCoMo web page or "Mobile Phone User's Guide [Network Services]".

■ PushTalkPlus*

This service enables you to have a PushTalk call with up to 20 persons including you. You can use the shared Phonebook on the network, and can check the members for their status, thus PushTalk becomes more useful.

- *You need to subscribe separately.
- For details such as how to operate, refer to the booklet which is supplied at subscription.

Making a PushTalk Call

1 Enter the other party's phone number ▶


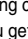






When you are dialing, a confirmation tone for starting a PushTalk call sounds for a few seconds, and then the same ring tone as the voice (videophone) call sounds.

- You can make a group call to multiple persons using the PushTalk Phonebook. (See page 79 and page 80)



2 When the other party answers, talk while pressing .


When the other party answers, a confirmation tone for starting communication sounds.

- "" blinks during dialing and lights during communication.
- When you get the talker's right, the talker's right obtained tone sounds. The other party hears your voice only while you are pressing  and having the talker's right. When you release , the talker's right is released, and a confirmation tone sounds.
- You cannot get the talker's right and an error tone sounds even if you press  when another member has it.
- Press  ( Add) or press  () and select "Add member" to add a member. Go to step 1 on page 77.






3 Press to end the communication after talking.

A tone to notify the disconnection of communication sounds at the other end.


- When the call you made is a group call, the PushTalk communication itself continues even if you press , and the icon indicating that you are not participating appears on each member's display and a confirmation tone sounds. However, when all the members exit, the PushTalk communication itself ends.

Information

- The talker is charged a communication fee from when he/she presses  and the talker's right obtained tone sounds.
- You cannot make emergency calls at 110/119/118 from PushTalk.
- The duration you can talk per talker's right is limited. The talker's right release notice tone sounds before the limited time arrives, and the talker's right is released. In addition, the PushTalk communication itself ends when no one gets the talker's right in a certain period of time.
- Just after purchase, Hands-free is automatically activated by "Hands-free w/ PushTalk". (See page 81) However, Hands-free is deactivated during Manner Mode regardless of "Hands-free w/ PushTalk".
- The FOMA phone works according to "Setting when folded" if you close it during communication. You can set also by pressing  () and selecting "Set. when folded". (See page 63)
- Whether to notify others of your phone number when you make PushTalk calls follows the setting for "Activate" of "Caller ID notification" (see page 47). However, when you set "Notify caller ID" from the Function menu for dialing, or when "Notify"/"Not notify" is displayed in the detailed Redial/Dialed Call/Received Call display, each of those settings will work.
- When you make a PushTalk call with your phone number notified, your phone number as well as all members' phone numbers are notified to all members including added members. When you make a PushTalk call without notifying your phone number, "User unset" appears in the caller's and member's fields on the displays of all the members including added members. Your phone number is very important information, so take the utmost care to notify it to others.
- If you make a PushTalk call during i-mode communication, the i-mode communication is disconnected.
- You cannot use PushTalk by Number B of 2in1.

■ Making/Receiving a PushTalk group call

You can use the PushTalk Phonebook or Redial/Dialed Calls/Received Calls to communicate with multiple members.

While making or receiving a PushTalk group call, the group name and the members in the group are displayed. Press  to confirm other members. When a call is received with the other party's phone number not provided, "User unset" is displayed.


■ Re-participating or participating midway in PushTalk communication

Use Redial/Dialed Calls/Received Calls to make a PushTalk call so long as the PushTalk communication continues among other members.

- If the PushTalk communication has already been finished, your call is dialed as a new PushTalk call.

■ Display while dialing/communicating

1 The phone number of the member who has the talker's right is displayed, and the state of the talker's right is displayed in color of the round icon at the upper left. When the name of that member, phone number, and image are stored in the Phonebook, his/her name and image are displayed. However, when you cannot receive a member's information correctly, "?" is displayed.

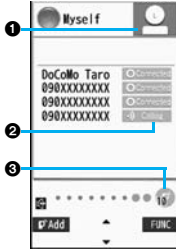

During group communication

When the FOMA phone is closed, the phone number (name) of the member who has the talker's right is displayed on the Private window.

Color of the round icon at the upper left	State of the talker's rights
Blue	Calling
Green	You can get the talker's right.
Blinking in green	You have the talker's right.
Blinking in yellow	Another member has the talker's right.
Blinking in green and red	The talker's right will be released automatically in a few seconds because it has long been retained (A release notice tone sounds).

2 The state of members is shown by icons during dialing or communicating. (Characters other than shown below might appear.)

Icon	State of members
Calling ※	Calling
Connected	Has participated in the PushTalk call.
不参加 ※	Does not answer, has ended the PushTalk call, out of the service area, or the power is off.
Driving ※	Has activated Public Mode (Drive Mode).

※ Displayed only for the PushTalk communication among three or more members.

3 The number of times you have got the talker's right is the total of the number of "●" and the number shown in "●". When 999 times are exceeded, the counting is reset to 0.

Adding a Member during PushTalk Communication

You can make a PushTalk call to another member during PushTalk communication and add that member to the communication.

You can add a person to the members by accessing the PushTalk Phonebook, Phonebook, or Dialed Calls/Received Calls, or by directly entering a phone number. You can add up to five members (including yourself), and can repeat adding up to that number.

- Members can be added from the calling end only.
- You can add even the members who use the PushTalk compatible models which do not have this function.
- If you have already made a call to four members, you cannot add a new member though you can call up a member who has exited the call again.
- The added members are not stored in Redial/Dialed Calls.

1 During PushTalk communication

▶ (P Add) ▶ Do the following operations.



Item	Operation/Explanation
View PushTalk PB	You can call up a PushTalk Phonebook entry to make a PushTalk call. (See page 80) Instead of pressing , press to call. ● Press to switch between the PushTalk Phonebook List and PushTalk Group List.
View phonebook	You can call up a Phonebook entry to make a PushTalk call. ▶ Call up a Phonebook entry ▶ Highlight a phone number and press .
Direct input	You can enter a phone number to make a PushTalk call. ▶ Enter a phone number ▶
View call records	You can call up Dialed Calls/Received Calls to make a PushTalk call. ▶ Dialed calls or Received calls ▶ Select a record ▶ Select a phone number ▶

Information

- The caller cannot add members if he/she uses a PushTalk compatible model which does not have this function.
- For a member who uses a PushTalk compatible model which does not have this function, the members added during PushTalk communication are not shown and a confirmation tone does not sound.


Receiving a PushTalk Call







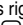
1 When a PushTalk call comes in, “PushTalk call” is displayed, the ring tone sounds, and the Call/Charging indicator flickers.

- “PushTalk group call” is displayed for an incoming group call.
- To reject a call, press  (FUNC) during ringing and select “Call rejection”. You can reject the call also by pressing .




2 Press to answer a PushTalk call

▶ Talk while pressing .

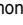
- You can answer also by pressing  or  (Answer) instead of pressing . You can answer also by pressing  with the FOMA phone closed.
- When you get talker’s right, the talker’s right obtained tone is played back. The other party hears your voice only while you are pressing  and having the talker’s right. When you release , the talker’s right is released and a confirmation tone sounds.
- You cannot get the talker’s right and an error tone sounds, even if you press  when another member has it.
- “Setting when opened” and “Record message setting” become invalid.





3 Press to end the communication after talking.

- A tone for confirming the end of communication sounds at the other end.
- When the call you received is a group call, the PushTalk communication itself continues even if you press , and the icon indicating that you are not participating appears on each member’s display and a confirmation tone sounds. However, when all the members exit, the PushTalk communication itself ends.

Information

- The talker is charged a communication fee from when he/she presses  and the talker’s right obtained tone sounds.
- The duration you can talk per talker’s right is limited. The talker’s right release notice tone sounds before the limited time arrives, and the talker’s right is released. In addition, the PushTalk communication itself ends when no one gets the talker’s right in a certain period of time.

Information

- Just after purchase, Hands-free is automatically activated by “Hands-free w/ PushTalk”. (See page 81) However, Hands-free is deactivated during Manner Mode regardless of “Hands-free w/ PushTalk”.
- The FOMA phone works according to “Setting when folded” if you close it during communication. You can set also by pressing  (FUNC) and selecting “Set. when folded”. (See page 63)
- You cannot use “On hold” or “Holding” function for PushTalk.
- A PushTalk call that comes in during a voice call, a PushTalk call that comes in during Public Mode (Drive Mode), and a voice call (when “PushTalk arrival act” is set to other than “Answer”), a videophone call, data communication, or a PushTalk call that comes in during PushTalk communication are recorded as missed calls in Received Calls.
- A PushTalk call that comes in during a videophone call or during data communication does not work and is not recorded in Received Calls.
- After you finish PushTalk communication or when you cannot answer to a PushTalk call, you can use a received call record to make a PushTalk call and to re-participate or participate midway in the communication so long as the PushTalk communication continues among other members. If the PushTalk communication among other members has already been finished, your call is dialed as a new PushTalk call.
- When a caller adds members during PushTalk communication, the added members are not stored in Received Calls.
- See page 82 for how to respond to the PushTalk call during i-mode communication.
- When the caller is defined as the one to be rejected, the call is rejected. The setting of call rejection applies to the setting for both voice calls and videophone calls.
- When a PushTalk call comes in during Lock All or Omakase Lock, “ Miss 1” appears after the lock is released.

<Store in PushTalk Phonebook>

Storing in PushTalk Phonebook

From the items stored in a FOMA phone's Phonebook entry, you need to store a name (reading) and a phone number in the PushTalk Phonebook. You can store up to 1,000 entries in the PushTalk Phonebook.



▶ Do the following operations.

- You can store also by selecting <New>.
- If you store multiple phone numbers from a Phonebook entry, the phone number previously stored in the PushTalk Phonebook is overwritten.



Item	Operation/Explanation
View phonebook	<p>You can access an entry already stored in the FOMA phone's Phonebook and store it in the PushTalk Phonebook.</p> <p>▶ Call up a Phonebook entry ▶ Select a phone number ▶ YES</p>
Direct input	<p>You can store the entry in the PushTalk Phonebook after storing it in the FOMA phone's Phonebook.</p> <p>▶ Phone ▶ Select a storing method. New . . . Go to step 2 on page 84. Add . . . Go to step 3 of "Storing Displayed Phone Number/Mail Address in Phonebook" on page 88.</p> <ul style="list-style-type: none"> • When multiple phone numbers are stored in a Phonebook entry, press (Finish) and select the phone number you want to store in the PushTalk Phonebook. The "★" mark is added to the phone number that has already been stored in the PushTalk Phonebook.
View call records	<p>You can access a dialed call record or received call record to store it in the PushTalk Phonebook. You cannot store in the PushTalk Phonebook from the dialed/received call record of the party who is not stored in the FOMA phone's Phonebook.</p> <p>▶ Dialed calls or Received calls ▶ Select a record ▶ Select a phone number ▶ YES</p>

Information

 
- In the PushTalk Phonebook, you cannot store the Phonebook entries set to B by Phonebook 2in1 Setting.

Store in Group

You can store PushTalk Phonebook entries in groups. You can store up to 19 members per group and create up to 10 groups.


1 PushTalk Phonebook List

- Press (**Member**) to show the PushTalk Phonebook List.



2 Select a group

▶ Put a check mark for members to be stored

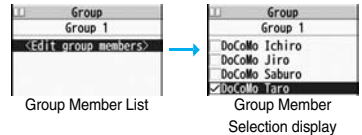

- You can store also by selecting <Edit group members> from the Group Member List.

Function Menu of the Group Member Selection Display

Function menu	Operation/Explanation
Members to store	<p>You can display only members applied with a check mark.</p> <ul style="list-style-type: none"> • Press (Store) to store the members to the group.
Search	<p>▶ Select a search method. Reading? . . . See page 89. Group? See page 89.</p> <p>▶ Select a member. You can display the Group Member Selection display with the searched members selected.</p>


Making a PushTalk Call Using PushTalk Phonebook

You can make a group call to up to four members using the PushTalk Phonebook or PushTalk group.

1 PushTalk Phonebook List

▶ Put a check mark for members you want to make a call to ▶ or (Dial)

- Press (Group) to show the PushTalk Group List.
- When you do not check any members, the call is made to the highlighted member.

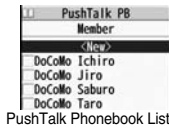


Make a Call from PushTalk Group

1 PushTalk Group List

▶ Select a group.

 - Select a group and press or (Dial) to make a call to all the members in the group.
- Press (Member) to show the PushTalk Phonebook List.



2 Put a check mark for members you want to make a call to

▶ or (Dial)

- When you do not check any members, the call is made to the highlighted member.



Information

- When five or more members are stored in a group, you cannot make a call to all the members by selecting the group.

<Delete from PushTalk Phonebook> Deleting PushTalk Phonebook Entries

1 PushTalk Phonebook List

▶ (FUNC)

- ▶ DEL from P-Talk PB
- ▶ Do the following operations.

Item	Operation/Explanation
Delete this	▶ Select a deleting method. DEL from P-Talk PB ...Deletes an entry in the PushTalk Phonebook only. Does not delete the entry in the FOMA phone's Phonebook. DEL from all PBs ...Deletes an entry in both the PushTalk Phonebook and FOMA phone's Phonebook. ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES • The FOMA phone's Phonebook entries are not deleted.

Delete from PushTalk Group

1 PushTalk Group List

▶ (FUNC)

- ▶ DEL from PT group ▶ YES

Delete Group Members

1 Group Member List

▶ (FUNC)

- ▶ DEL group members
- ▶ Do the following operations.

Item	Operation/Explanation
Delete this	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Information

- Even when you delete PushTalk groups or group members, the PushTalk Phonebook entries and FOMA phone's Phonebook entries are not deleted.

Making Full Use of PushTalk Phonebook

Function Menu of the PushTalk Phonebook List/ PushTalk Group List/Group Member List

Function menu	Operation/Explanation
Members to call	When the PushTalk Phonebook List or Group Member List is displayed, you can display the checked members only. <ul style="list-style-type: none"> ● Press or to make a PushTalk call. ● Press (FUNC) to select "Notify caller ID" and then you can select whether to notify your phone number. When "Cancel prefix" is selected, the FOMA phone works according to the setting by "Caller ID notification".
Search PushTalk PB [Phonebook List only]	<p>▶ Select a search method. Reading? . . . See page 89. Group? See page 89.</p> <p>▶ Select a member. You can display the PushTalk Phonebook List with the searched members selected.</p>
Store in P-Talk PB [Phonebook List only]	See page 79.
DEL from P-Talk PB [Phonebook List only]	See page 80.
Edit group members [Group List/Member List]	You can edit the members in the group. Go to step 2 on page 79.
Edit group name [Group List only]	<p>▶ Enter a group name. ● You can enter up to 16 full-pitch/32 half-pitch characters.</p>
DEL from PT group [Group List only]	See page 80.
DEL group members [Member List only]	See page 80.
Auto answer set.	See page 81.
Ring time setting	See page 81.
Hands-Free	See page 81.

Function menu	Operation/Explanation
Set. when folded	See page 63.
i-mode arrival act	See page 82.
P-Talk arrival act	See page 81.
Network connection	You can connect to the network to use PushTalkPlus. This is available only when you have signed up for PushTalkPlus. (See page 76)

Setting PushTalk Calling/Receiving



- 1 ▶ **Settings** ▶ **PushTalk**
 ▶ **Do the following operations.**

Item	Operation/Explanation
Auto answer setting	<p>▶ Select an item. ON Automatically answers immediately after receiving regardless of "Ring time setting". OFF Does not answer automatically.</p>
Ring time setting	<p>▶ Enter a ring time (seconds). ● Enter two digits from "01" through "60". ● "Disconnected" is displayed at the other end after the ring time has elapsed.</p>
Hands-free w/ PushTalk	<p>You can set whether to hear the other party's voice from the speaker or from the earpiece for when PushTalk communication starts.</p> <p>▶ ON or OFF ● See page 60 for how the FOMA phone works while Hands-free is activated and how to switch to Hands-free during communication.</p>
PushTalk arrival act	<p>▶ Select an item. Voice mail . . . Connects an incoming voice call to the Voice Mail Service Center. Call forwarding . . . Forwards an incoming voice call to the forwarding destination. Call rejection . . . Rejects an incoming voice call and does not answer. Answer . . . Shows the Voice Call Receiving display.</p>

Information**<Auto answer setting>**

- When you set to "ON", calls are automatically answered even when the FOMA phone is closed regardless of "Setting when folded".
- When you set to "ON", calls are automatically answered after switching to Hands-free regardless of "Hands-free w/ PushTalk".
- When you set to "ON", the ring tone, vibrator, Call/Charging indicator, and backlight do not work. Calls are not automatically answered during Manner Mode.
- Even when "ON" is set, Hands-free is deactivated if you open the FOMA phone after you answer a call with the FOMA phone closed.

<PushTalk arrival act>

- If you press  for an incoming voice call while "Answer" is set, the Call Receiving display appears after you finish the PushTalk communication, and then you can answer the voice call. To continue the PushTalk communication, press  (FUNC) and select "Call rejection", "Call forwarding", or "Voice mail".

i-mode Arrival Act

You can set whether to show the PushTalk Call Receiving display for when a PushTalk call comes in during i-mode communication.

- 1  **i-mode settings** ▶ **i-mode arrival act**
▶ Select an item.


PushTalk preferred

... Ends i-mode communication and brings up the PushTalk Call Receiving display.

i-mode preferred

... Rejects receiving a PushTalk call and continues i-mode communication. The call is not recorded in Received Calls.

Phonebook



Phonebooks Available for FOMA Phone	84
Storing Phonebook Entries	84
Storing Displayed Phone Number/Mail Address in Phonebook	87
Setting Groups	88
Dialing from Phonebooks	89
Editing Phonebook Entries	90
Deleting Phonebook Entries	91
Checking Number of Phonebook Entries	91
Making Full Use of Phonebooks	91
Making a Call with a Few Touches	93
Accessing Phonebook Entries by Voice	93
Saving (Restoring/Updating) Phonebook to Data Storage Center	95

Phonebooks Available for FOMA Phone

You can use two types of Phonebook, namely the Phonebook in the FOMA phone itself, and the Phonebook on the UIM.

Use them fully for Phonebook management.

		FOMA phone	UIM	
Number of entries		1,000 entries	50 entries	
Contents of Phonebook	Basic item	Name (Reading)	○	
		Group	19 groups	10 groups
		Phone number	4 phone numbers	1 phone number
		Phone number icon	○	×
		Mail address	3 mail addresses	1 mail address
		Mail address icon	○	×
		Address	○	×
		Location information	○	×
		Birthday	○	×
		Memo	○	×
		Image	100 images	×
		Memory No.	From 000 to 999	×
		Contents of Phonebook	Setting item	Ring tone
Vibrator	○			
Illumination	○			
Picture	○			
Chara-den	100 Chara-den images			×
Mail ring tone	○			
Mail vibrator	○			
Mail illumination	○			
Answer message	○			
Restrictions	Restrict dialing			
	Call rejection			
	Call acceptance	○	×	
	Call forwarding			
	Voice mail			
Secret code		○	×	
Storage in Secret Mode or Secret Data Only		○	×	


		FOMA phone	UIM
Contents of Group	Name	○	○
	Ring tone		
	Vibrator		
	Illumination		
	Picture		
	Chara-den	○	×
	Mail ring tone		
	Mail vibrator		
	Mail illumination		
	Answer message		

○: Can be stored. ×: Cannot be stored.

● You can set your UIM into another FOMA phone and use the UIM Phonebook entries.


<Add to Phonebook> Storing Phonebook Entries

You can store Phonebook entries in the FOMA phone (Phone) or on the UIM.

1  (for at least one second) ▶ Phone or UIM


The Edit Name display appears. Go to step 2 and enter a name.

2 Do the following operations.

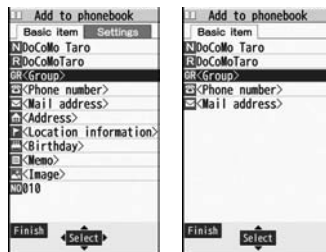







For the FOMA phone




For the UIM







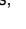


● You can press  to switch between the “Basic item” tab and “Settings” tab on the FOMA phone’s Phonebook.





Item	Operation/Explanation
N <Name>	<p>You can enter the name of the person or company in kanji, hiragana, katakana, alphabetic characters, or numerals.</p> <p>▶ Enter a name.</p> <ul style="list-style-type: none"> ● For the FOMA phone, you can enter up to 16 full-pitch/32 half-pitch characters. You can enter pictographs and symbols as well. ● For the UIM, you can enter up to 10 full-pitch characters/21 half-pitch alphanumeric characters. (Half-pitch katakana characters cannot be entered.) When the entry contains both full-pitch and half-pitch characters, you can store up to 10 characters from the beginning regardless of full-pitch or half-pitch characters.








Item	Operation/Explanation
 <Reading>	<p>You can enter the reading in half-pitch katakana, alphabetic characters, or numerals.</p> <p>▶ Enter a reading.</p> <ul style="list-style-type: none"> ● For the FOMA phone, you can enter up to 32 half-pitch characters. You can enter half-pitch symbols as well. ● For the UIM, you can enter up to 12 full-pitch characters/25 half-pitch alphanumeric characters. (Half-pitch katakana characters cannot be entered.) When the entry contains both full-pitch and half-pitch characters, you can store up to 12 characters from the beginning regardless of full-pitch or half-pitch characters. ● If the displayed reading is acceptable, you do not need to edit it. However, depending on the characters entered for names or entering method, they are not reflected in the reading. ● If you enter “わ (reduced size)” or “ワ (reduced size)” for a name, “ワ (half-pitch, regular size)” (for the FOMA phone) and “ワ (regular size)” (for the UIM) are displayed in the reading field.
 <Group>	<p>In the FOMA phone, 19 groups are available. On the UIM, 10 groups are available.</p> <p>▶ Select a group.</p> <ul style="list-style-type: none"> ● When the storage is completed with no group selected, the Phonebook entry is stored in “No setting”.

Item	Operation/Explanation
 <Phone number>	<p>You can store up to four phone numbers per Phonebook entry in the FOMA phone. You can set an icon for each phone number to categorize mobile phone numbers, office phone numbers, and so on. You can store only one phone number per Phonebook entry on the UIM.</p> <p>▶ Enter a phone number.</p> <ul style="list-style-type: none"> ● Enter from the city code for the phone numbers. ● You can enter up to 26 digits. However, you can enter up to 20 digits for blue UIMs. ● Press and hold  for at least one second to insert a pause (p) into the phone number you store. However, you cannot insert the pause (p) to the beginning of phone number or insert it consecutively. The pause (p) inserted to the end of phone number is not stored. ● If you insert “*” in the middle of a phone number, you cannot make a call. However, the phone number is recorded in Redial or Dialed Calls. ● You can store the phone number which includes “#” such as that for information service as well. <p>▶ Select an icon.</p> <ul style="list-style-type: none"> ● If you have stored a phone number in the FOMA phone, another “ <Phone number>” will appear in the Add-to-Phonebook display. To store another phone number, select “ <Phone number>”.

 <Mail address>	<p>You can store up to three mail addresses per Phonebook entry in the FOMA phone. You can set an icon for each mail address to categorize mobile phone addresses, home addresses, and so on. You can store only one mail address per Phonebook entry on the UIM.</p> <p>▶ Enter a mail address.</p> <ul style="list-style-type: none"> ● The mail address can consist of up to 50 half-pitch alphabets, numerals or symbol characters. ● When the mail address is “phone number@docomo.ne.jp”, store the phone number only. ● For the FOMA phone, you can set a secret code as well. (See page 93) <p>▶ Select an icon.</p> <ul style="list-style-type: none"> ● If you have stored a mail address in the FOMA phone, another “ <Mail address>” will appear in the Add-to-Phonebook display. To store another mail address, select “ <Mail address>”.
---	--

Item	Operation/Explanation
 <Address>	<p>▶ Enter a ZIP code</p> <p>▶ Enter a postal address.</p> <ul style="list-style-type: none"> • You can enter up to 7 digits for the zip code. • You can enter up to 50 full-pitch/100 half-pitch characters for the postal address. Further, you can enter pictographs as well. • You cannot enter “〒” or “-” (hyphen) in the zip code.
 <Location information>	<p>▶ Select an item.</p> <p>By position loc.</p> <p>... Measures the current location and store the location information. After checking the location information, press  (Set).</p> <p>From loc. history</p> <p>... Select a piece of location information from Location History and store it.</p> <p>Attach from image</p> <p>... Stores the location information from an image. Select a folder, then the image.</p> <ul style="list-style-type: none"> • To delete the stored location information, select “Delete location info”. • When you press  (Use) during measuring the current location, the confirmation display appears asking whether to display the result obtained so far from the location information. • To cancel measuring the current location, press  (CLR) or  (Cancel). • Press  (Retry) from the confirmation display for the location information to restart measuring in “Quality mode”.
 <Birthday>	<p>▶ Enter a birthday.</p> <ul style="list-style-type: none"> • You can enter the birthday from January 1, 1800 through December 31, 2099.
 <Memo>	<p>▶ Enter a memo.</p> <ul style="list-style-type: none"> • You can enter up to 100 full-pitch/200 half-pitch characters. Further, you can enter pictographs as well.

Item	Operation/Explanation
 <Image>	<p>The stored still image is displayed when you call up the Phonebook entry.</p> <p>▶ Select an item.</p> <p>Select image</p> <p>... You can store a still image in Data Box.</p> <p>Shoot image</p> <p>... You can store the shot still image.</p> <p>Perform step 2 through step 3 of “Shoot a Still Image” on page 139.</p> <ul style="list-style-type: none"> • To release the stored still image, select “Release image”. • The size of a still image you can store is Stand-by (480 x 854) or smaller and up to 300 Kbytes in JPEG format or GIF format. • If you store a still image larger than 72 x 54 dots, it is displayed shrunk on the detailed Phonebook display. • If you store a still image larger than 240 x 180 dots, it is displayed shrunk on the Call Receiving display. • When “Disp. PH-book image” is set to “ON”, the stored still image is displayed for an incoming call. However, when another image is stored in the “Picture” field, that image is preferentially displayed for the incoming call.
 <Memory No.>	<p>▶ Enter a memory number.</p> <ul style="list-style-type: none"> • Enter a three-digit number of “000” through “999”. • The lowest empty memory number “010” through “999” is entered in advance. If “010” through “999” are all occupied, the lowest empty memory number from “000” through “009” is entered.
 <Ring tone>	<p>You can set a ring tone for when a voice call or videophone call comes in from the person stored in the Phonebook.</p> <p>▶ Select ring tone</p> <p>Go to step 2 on page 98.</p> <ul style="list-style-type: none"> • To release the stored ring tone, select “Release ring tone”.
 <Vibrator>	<p>You can set a vibration pattern for when a voice call or videophone call comes in from the person stored in the Phonebook.</p> <p>▶ Select vibrator</p> <p>▶ Select a vibration pattern.</p> <ul style="list-style-type: none"> • To release the stored vibrator, select “Release vibrator”.

Item	Operation/Explanation
 <Illumination>	<p>You can set an illumination color for when a voice call or videophone call comes in from the person stored in the Phonebook.</p> <p>▶ Select illumination ▶ Select a color.</p> <ul style="list-style-type: none"> ● To release the stored illumination, select "Release illumination".
 <Picture>	<p>You can set an image to be displayed for when a call comes in from the person stored in the Phonebook.</p> <p>▶ Select picture ▶ Select a type of image</p> <p>▶ Select a folder ▶ Select an image.</p> <ul style="list-style-type: none"> ● To release the stored image, select "Release picture".
 <Chara-den>	<p>The stored Chara-den image is displayed as a substitute image for videophone calls with the person stored in the Phonebook.</p> <p>▶ Select Chara-den</p> <p>▶ Select a Chara-den image.</p> <ul style="list-style-type: none"> ● To release the stored Chara-den image, select "Release Chara-den".
 <Mail ring tone>	<p>You can set a ring tone for when a mail message comes in from the person stored in the Phonebook.</p> <p>▶ Select ring tone</p> <p>Go to step 2 on page 98.</p> <ul style="list-style-type: none"> ● To release the stored mail ring tone, select "Release ring tone".
 <Mail vibrator>	<p>You can set a vibration pattern for when a mail message comes in from the person stored in the Phonebook.</p> <p>▶ Select vibrator</p> <p>▶ Select a vibration pattern.</p> <ul style="list-style-type: none"> ● To release the stored mail vibrator, select "Release vibrator".
 <Mail illumination>	<p>You can set an illumination color for when a mail message comes in from the person stored in the Phonebook.</p> <p>▶ Select illumination ▶ Select a color.</p> <ul style="list-style-type: none"> ● To release the stored mail illumination, select "Release illumination".
 <Answer message>	<p>You can set an answer message for Record Message by Phonebook entry.</p> <p>▶ Select answer message</p> <p>▶ Select an answer message.</p> <ul style="list-style-type: none"> ● To release the stored answer message, select "Release answer message".

3 Press (Finish).

- If you have not entered any name, "Finish" is not displayed and you cannot store the entry.

■ The Phonebook entries while editing

When the low battery alarm sounds

The Phonebook entry you are editing is saved automatically. The confirmation display appears asking whether to resume editing when you continue editing after charging the battery or when you operate step 1 on page 84 and select the storage location for the interrupted Phonebook entry after changing to a charged battery.

Recall . . . You can resume editing the Phonebook entry.

New. . . . You can edit a new Phonebook entry. In this case, the interrupted data is retained. If you execute "Add to phonebook" after storing the new Phonebook entry, the confirmation display appears again.

- Only the most recently interrupted entry is retained.
- If you resume editing the data but then cancel editing without storing it, that data will be abandoned. Once you recall the data, be sure to store it.

If you receive a call or mail

You can respond if leaving the edited data as it is, thanks to the Multitask function.

To return to the Phonebook Edit display, press and hold **(MULTI)** for at least one second to switch the menu. You can return to the Phonebook Edit display also by ending the call or mail function.

Storing Displayed Phone Number/ Mail Address in Phonebook

You can store the displayed or selected phone number, mail address, and still image in the FOMA phone's or UIM's Phonebook.

Operation	Storable items
While a phone number is entered	Phone number
While a redial item, dialed call record, or received call record is displayed	Phone number
While Sent Address or Received Address is displayed	Phone number/ Mail address
While a site or screen memo is displayed	Phone number/ Mail address
While the text of Message R/F or mail is displayed	Phone number/ Mail address
While the data scanned by Bar Code Reader or Text Reader is displayed	Phone number/ Mail address
While a ToruCa file is displayed	Phone number/ Mail address
While your current location or location history is displayed	Location information
While a registered LCS client is displayed	Name/ Phone number
While the Still Image List or a still image is displayed	Still image

1 Bring up/Select an item to be stored

▶ (FUNC) ▶ Add to phonebook

- To store the address of the sender (or of another recipient of simultaneous mail) of the received mail or the destination address of the sent mail into the Phonebook, select "Store address".
When the addresses of the sender and another recipient of simultaneous mail are found or the multiple destination addresses are found, the display for selecting an address appears. Use () to select the mail address or phone number you want to store.
- To store the results scanned by Text Reader in a Phonebook entry, select "Store phone No." or "Store mail add."
- To store a still image in the Phonebook, select "Phonebook" from "Set display".
- When "Add to phonebook" is displayed on the Scanned Code Result display for Bar Code Reader, select "Add to phonebook"; then other information in the scanned code than the phone number or mail address is entered into each field.

2 Phone or UIM ▶ Select a storing method.

New . . . Go to step 2 on page 84.

Add . . . Adds data to the existing Phonebook entry. When storing data on the UIM, "Overwrite" is displayed.

3 Select a search method

▶ Search the Phonebook

▶ Select a Phonebook entry to be stored

▶ (Select)



The phone number or mail address is entered automatically.

- See step 2 on page 84 to edit other items in the Phonebook entry.
- When you store into the FOMA phone's Phonebook, you can remain the original entry and store a new entry into a different location by changing the memory number.

4 (Finish) ▶ YES

- If you store the entry in the UIM Phonebook, select "Overwrite" to overwrite the original entry, or select "Add" to store it as a new entry.

Information

- The Phonebook entry does not store the information of "Notify caller ID" included in Redial/Dialed Calls. To set Caller ID Notification, add "186"/"184" to the phone number and store it.
- Characters that cannot be stored may be replaced by spaces or deleted, and then stored.
- You may not be able to store the information from some sites into the Phonebook.

<Group Setting> Setting Groups

You can sort Phonebook entries into groups such as "Company", "Friend" etc. according to your relationship, or "Baseball", "Ceramic art" etc. according to your interest. You can use the sorted Phonebook entries as separate Phonebooks for easy access to the entry you want to search for. You can set a ring tone, vibration pattern, or illumination by group.

1 (MENU) ▶ Phonebook ▶ Group setting

- The groups on the UIM are indicated by " ".
- To reset the group names and respective settings by group, which have already been stored, press (FUNC), select "Reset group", and then select "YES".

2 Highlight a group and press (Edit) ▶ Select an item to be set ▶ Set the contents.

- When you select "GR Group name", enter a group name. You can store up to 10 full-pitch/21 half-pitch characters. However, you can store only up to 10 characters (regardless of full-pitch or half-pitch characters) when you enter both full-pitch and half-pitch characters for a UIM group name.
- See step 2 on page 84 for the operations of the other items. However, you cannot set for groups on the UIM.
- Select a stored group, or press (FUNC) and select "Check setting" to check its settings. However, you cannot check the settings of the groups on the UIM.


3 Press (Finish).

Dialing from Phonebooks

You can retrieve stored Phonebook entries by eight search methods.

1 Do the following operations.

- The display for the same search method as the previous one appears once you have carried out a search. Press **(CLR)** to show the Search Phonebook display.

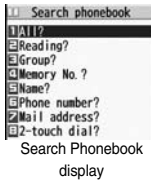

Item	Operation/Explanation
All?	You can bring up all Phonebook entries. <ul style="list-style-type: none"> • The tabs appear on the top of the Phonebook List. (See page 90)
Reading?	You can enter the reading of the other party's name from the first character and search. You do not need to enter the full reading. <ul style="list-style-type: none"> ▶ Enter a part of the reading • The tabs appear on the top of the Phonebook List. (See page 90)
Group?	You can bring up Phonebook entries stored in the specified group. <ul style="list-style-type: none"> ▶ Select a group. • The tabs appear on the top of the Phonebook List. (See page 90) • If you press (FUNC) on the Group List, the Function menu for "Group setting" is displayed.
Memory No.? [FOMA phone only]	You can search for the entry by the memory number assigned when it was stored in the Phonebook. <ul style="list-style-type: none"> ▶ Enter the memory number. • Enter from "000" through "999" in three digits. • The tabs appear on the top of the Phonebook List. (See page 90) • From the Stand-by display, you can press and then press to display the Memory No. Dial display. From there you can make a voice call by entering the memory number of the phone number.
Name?	You can enter the other party's name from the first character and search. You do not need to enter the full name. <ul style="list-style-type: none"> ▶ Enter a part of the name
Phone number?	You can enter a part of the other party's phone number and search. You can search for the entry even from the middle of phone number. <ul style="list-style-type: none"> ▶ Enter a part of the phone number • You can display the Phonebook List also by entering a part of the phone number from the Stand-by display or the "Talking" display, and pressing .

Item	Operation/Explanation
Mail address?	You can enter a part of the other party's mail address and search. You can search for the entry even from the middle of mail address. <ul style="list-style-type: none"> ▶ Enter a part of the mail address
2-touch dial? [FOMA phone only]	You can bring up the list of Phonebook entries in memory number 000 through 009. <ul style="list-style-type: none"> • Phonebook entries not yet stored or being set with secret are displayed as <--->.

2 Select an entry or (Dial)

- When the entry contains multiple phone numbers, or when you searched by "Mail address?", press from the detailed display to select a phone number.
- You can make a videophone call by pressing (V. phone) or PushTalk call by pressing .

Information

- In a search method other than "Group?" and "2-touch dial?", enter nothing and press ; then you can search all through the Phonebook.
- When no Phonebook entry is found that matches the condition you entered by "Reading?" or "Memory No.?", the entry that is the closest to the condition is displayed.

Search order

The Phonebook entries are searched in the order of readings you entered for storing, as follows:
 "Space at the beginning of the reading" → "Japanese syllabary (ア、イ、ウ、エ、オ、...ン)" → "Alphabet (A, a, B, b, ...Z, z)" → "Numerals (0 through 9)" → "Symbols" → "No reading".
 For "All?" and "Reading?", searching is done in the following order:
 "Japanese syllabary (ア、イ、ウ、エ、オ、...ン)" → "Alphabet (A, a, B, b, ...Z, z)" → "Space at the beginning of the reading" → "Numerals (0 through 9)" → "Symbols" → "No reading".
 ※ The Memory No. Search searches in the order of the memory numbers.

■ About Phonebook List

When you search from “All?”, “Reading?”, “Group?”, or “Memory No.?”, the tabs appear on the top of the Phonebook List. With “All?” and “Reading?”, the entries are sorted by every column of reading, with “Memory No.?” by every 100 of the memory number, and with “Group?” by every group. Press **[Left/Right]** to display the Phonebook entries in the tab at left or right. However, when there are 12 or more Phonebook entries in a tab, pressing **[MENU]** (Page **▲**), **[MENU]** (Page **▼**), or **[Up/Down]** brings up the previous or next page.



● After you search by “Reading?”, you can move the cursor to the “ア” through “ワ”, “英”, and “他” tab by pressing each numeric key from the List. When you successively press the same numeric key, you can move the cursor within the same column.

<Example> Press **[5]** to display the “ナ” tab. Each time you press **[5]**, the cursor moves to the top of “一” “又” and so on.

● After you search by “Group?”, you can move the cursor to the top of each column in the tab by pressing each numeric key from the List. When you successively press the same numeric key, you can move the cursor within the same column.

<Example> Press **[5]** to move the cursor to the top of the “ナ” column. Each time you press **[5]**, the cursor moves to the top of “一” “又” and so on.

● After you search by “Memory No.?”, you can move the cursor to the “000~” to “900~” tab by pressing each numeric key from the List.


<Example> Press **[5]** to move the cursor to the “500~” tab.

● You can make a voice call to the phone number stored for the name highlighted on the Phonebook List, by pressing **[Phone]**. Also, press **[V. phone]** to make a videophone call and press **[PushTalk]** to make a PushTalk call. When multiple phone numbers are stored for the name, the one stored first will be dialed.

● “**[A]**” appears for the Phonebook entries set to A by Phonebook 2in1 Setting, “**[B]**” appears for the Phonebook entries set to B, and “**[C]**” appears for the Phonebook entries set to common data. (Only in Dual Mode)

■ About the detailed display

Use **[Left/Right]** to highlight a tab, then the detailed contents are displayed.

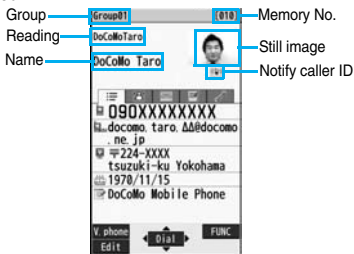

Detailed Phonebook display (Item List)

- For the Phonebook entry stored on the UIM, “**[UIM]**” is displayed on the memory number field.
- When Notify Caller ID is set to “Notify caller”, “**[Notify]**” appears, and when set to “Don’t notify”, “**[No]**” appears.
- Under the still image, “**[A]**” appears for the Phonebook entries set to A by Phonebook 2in1 Setting, “**[B]**” appears for the Phonebook entries set to B, and “**[C]**” appears for the Phonebook entries set to common data. (Only in Dual Mode)
- When a Phonebook entry contains the setting for Multi Number or Chaku-moji, the set contents are displayed in the Item List/Phone Number display.

[List] Item list

The first stored phone number, mail address, postal address, birthday, and memo are displayed.

[Phone] Phone number

[Mail] Mail address

● When you select the item, you can compose an i-mode mail message with that mail address entered into the address field.

[Info] Personal information

● When you select a postal address, memo, or still image, the full display appears. Press **[Left/Right]** (**[Exit]**) or **[CLR]** to return to the former display.

When you select the location information, the Function menu of the location information appears. (See page 232)

[Tools] Settings

● When you select each item, a demo is played back. Press **[Left/Right]** (**[Stop]**) or **[CLR]** to end the demo.

<Edit Phonebook>

Editing Phonebook Entries

1 Detailed Phonebook display **[MENU]** (**[Edit]**)

▶ Select an item to be edited

▶ Edit the contents.

- See step 2 on page 84 for how to edit the Phonebook entry.
- Even if you edit the Phonebook entry in the FOMA phone (Phone), you can remain the original contents in the original location and store the edited contents in the different location by changing the memory number.

2 (Finish) ▶ YES

- If you edited the UIM Phonebook entry, select “Overwrite” to overwrite the original contents, or “Add” to save the contents as a new entry.


<Delete Data>

Deleting Phonebook Entries

Delete from the Detailed Phonebook Display

1 Detailed Phonebook display ▶ (FUNC) ▶ YES


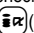
▶ Delete data ▶ Select an item ▶ YES

- You can delete an item highlighted by pressing  from the detailed display or delete the Phonebook entry.

Delete from the Phonebook List

1 Phonebook List ▶ (FUNC) ▶ YES

▶ Delete data ▶ Do the following operations.

Item	Operation/Explanation
Delete this	▶ YES
Delete selected	<p>▶ Put a check mark for Phonebook entries to be deleted ▶  (Finish) ▶ YES</p> <ul style="list-style-type: none"> ● You can check or uncheck all items by pressing  (FUNC) and selecting “Select all in tab/Select all/Release all in tab/Release all”. ● Perform the same operation as that of “Delete all” when you have selected all Phonebook entries including secret ones.
Delete all in tab	<p>You can delete all the Phonebook entries for the displayed tab.</p> <p>▶ YES</p>
Delete all	<p>You can delete all Phonebook entries including secret entries.</p> <p>▶ Enter your Terminal Security Code ▶ YES ▶ YES</p>

Information

- When you delete a Phonebook entry that is stored in the PushTalk Phonebook, the PushTalk Phonebook entry is also deleted.

<No. of Phonebook>

Checking Number of Phonebook Entries

1 ▶ Phonebook ▶ No. of phonebook

Phone

Phonebook . . . The number of Phonebook entries stored in the FOMA phone (Phone)


Secret The number of Phonebook entries stored as secret data during Secret Mode or Secret Data Only


Image The number of Phonebook entries in which still images are stored

Chara-den . . . The number of Phonebook entries in which Chara-den images are stored

PushTalk The number of Phonebook entries stored in the PushTalk Phonebook

Voice dial The number of Phonebook entries set as voice dial entries

Rest  : The number of phone numbers that can still be stored

 : The number of mail addresses that can still be stored

UIM


Phonebook . . . The number of Phonebook entries stored on the UIM


Information

- While you are using 2in1, the number of displayable Phonebook entries for each mode is displayed. (See page 375)

Making Full Use of Phonebooks

Function Menu of the Phonebook List

Function menu	Operation/Explanation
New	<p>You can store a new Phonebook entry.</p> <p>Go to step 1 on page 84.</p>
Sort	<p>You can change the display order.</p> <p>▶ Select a type of order.</p> <ul style="list-style-type: none"> ● You can sort Phonebook entries in reverse order by selecting “Ascending” or “Descending”. ● You cannot sort on the Phonebook List with tabs displayed.
Attach to mail	<p>You can send an i-mode mail message with the Phonebook entry attached.</p> <p>Go to step 2 on page 172.</p>
Send Ir data (Send phonebook)	See page 305.
Send Ir data (Send all phonebook)	See page 305.
 transmission (Send phonebook)	See page 306.

Function menu	Operation/Explanation
 transmission (Send all phonebook)	See page 307.
Send to Bluetooth (Send phonebook)	You can send the Phonebook entry using Bluetooth. ▶ Send phonebook ▶ Select a Bluetooth device to be sent ▶ YES <ul style="list-style-type: none"> When no Bluetooth devices are registered, the confirmation display appears asking whether to search. See page 350 for registering and connecting Bluetooth devices.
Send to Bluetooth (Send all phonebook)	You can send all Phonebook entries using Bluetooth. ▶ Send all phonebook ▶ Select a Bluetooth device to be sent ▶ Enter your Terminal Security Code ▶ YES <ul style="list-style-type: none"> When "Session number setting" of "Bluetooth settings" is set to "ON", enter your Terminal Security Code and then a session number. When no Bluetooth devices are registered, the confirmation display appears asking whether to search. See page 350 for registering and connecting Bluetooth devices.
Copy to microSD	See page 295.
Connect to Center	See page 95.
Delete data	See page 91.
Character size	You can switch the character size for the list between Large and Standard. <ul style="list-style-type: none"> The setting here applies to "Phonebook" of "Character size".
Set secret/Release secret	You can activate/deactivate Secret for the Phonebook entry. <ul style="list-style-type: none"> If you select "Set secret" in ordinary mode (not in "Secret mode" or "Secret data only"), enter your Terminal Security Code.



Information



<Send to Bluetooth>

- You cannot send Phonebook entries from the UIM.
- See page 348 for the Bluetooth.

Function Menu of the Detailed Phonebook Display

Function menu	Operation/Explanation
Notify caller ID	See page 47.
Prefix numbers	See page 59.

Function menu	Operation/Explanation
Int'l dial assist	See page 58.
2in1 dial	You can select a phone number to be notified to the other party in Dual Mode of 2in1. (See page 374)
Multi number	You can select a phone number to be notified to the other party. (See page 372)
Chaku-moji	See page 55.
Restrictions	See page 127.
Edit data	Go to step 1 on page 90.
Delete data	See page 91.
Store in P-Talk PB	You can store the phone number in the PushTalk Phonebook.
Add desktop icon	See page 114.
Compose message	You can compose an i-mode mail message to send to the mail address. Go to step 3 on page 172.
Compose SMS	You can compose an SMS message to send to the phone number set as the destination address. Go to step 3 of "Composing SMS Messages to Send" on page 206.
Attach to mail	You can send an i-mode mail message with the Phonebook entry attached. Go to step 2 on page 172.
Send Ir data (Send phonebook)	See page 305.
Send Ir data (Send all phonebook)	See page 305.
 transmission (Send phonebook)	See page 306.
 transmission (Send all phonebook)	See page 307.
Send to Bluetooth (Send phonebook)	See page 92.
Send to Bluetooth (Send all phonebook)	See page 92.
Copy to microSD	See page 295.
Connect to Center	See page 95.
Copy name	<ul style="list-style-type: none"> You can paste the copied text to a mail message and others.

Function menu	Operation/Explanation
Copy phone number/ Copy mail add./ Copy address/ Copy location info/ Copy birthday/ Copy memo	<ul style="list-style-type: none"> From the detailed display, press  to highlight an item to be copied. The items in the Function menu differ depending on the highlighted items in the Phonebook entry. You can paste the copied text to a mail message and others.
Secret code	<p>You need to add the recipient's secret code when sending i-mode mail to anyone who has registered a secret code. Once you set the secret code for the mail address in the Phonebook entry, it will be added automatically whenever you send mail to that address.</p> <p>▶ Enter your Terminal Security Code</p> <p>▶ Set code</p> <ul style="list-style-type: none"> From the detailed display, press  to highlight a phone number or mail address to be set with a secret code. To check the secret code, select "Check code". To release the secret code, select "Release code". <p>▶ Enter a four-digit secret code ▶ YES</p> <ul style="list-style-type: none"> In the Function menu, "Secret code" is indicated by "★", after it is set. Enter a four-digit number for secret code. You cannot set "0000".
Character size	See page 92.
Set secret/ Release secret	See page 92.
Copy to UIM/ Copy from UIM	See page 346.
Select image	See page 72.


Information

<Secret code>

- You cannot set secret codes for UIM Phonebook entries.
- The secret code can be added only when the recipient's mail address is in the form of "phone number" or "phone number@docomo.ne.jp". It cannot be added to any other form of mail address.
- If you have stored the mail address as "phone number + secret code@docomo.ne.jp", you cannot reply to mail messages from the party of that mail address. After changing the mail address to "phone number@docomo.ne.jp", set the secret code.



<Two-touch Dial>

Making a Call with a Few Touches

When the entry is stored in memory number "000" through "009" in the FOMA phone's Phonebook, you can dial the phone number just by pressing the lowest one digit of memory number and .

1 Numeric key (0 to 9)

▶  or  (Dial)

- You can make a videophone call by pressing  (V. phone) or a PushTalk call by pressing .

Information

- When the Phonebook entry contains multiple phone numbers, the first phone number will be dialed.
- When you set "Restrict dialing" to a Phonebook entry of memory number 000 through 009, set it to the first phone number in the Phonebook entry.
- When you store a Phonebook entry of memory number from 000 through 009 as secret data, make a call to that entry in Secret Mode or Secret Data Only.

<Voice Dial>

Accessing Phonebook Entries by Voice



Just vocalize the other party's voice dial name and then the Phonebook entry is accessed for making a call.

Voice Dial Setting

 2 6

You can store up to 100 voice dial entries selecting from among the Phonebook entries stored in the FOMA phone (Phone).

1 ▶ Phonebook ▶ Phonebook settings ▶ Voice dial setting ▶ <New>

- You can edit the stored voice dial name by pressing  (Edit). Go to step 3.
- To delete the stored voice dial entry, press  (FUNC) and select "Delete" or "Delete all" and then select "YES".

2 Search the Phonebook

▶ Select a Phonebook entry.

The display for search method you used last time appears.

- The “★” mark is added to the Phonebook entry stored in the Voice Dial List.

3 Enter a voice dial name.

- You can enter up to 22 half-pitch katakana characters.
- The reading (katakana only) of the Phonebook entry is displayed as the voice dial name. Correct the name to the easy-to-identify words.

Information

- The voice dial name set by this function is effective only for calling up a voice dial entry. For the voice guidance function, the reading (name) stored in the Phonebook is read aloud.
- When multiple similar voice dial names are stored or when the voice dial name is short, the recognition rate lowers and a wrong voice dial entry (Phonebook entry) might be accessed. In this case, rename the existing voice dial name and store it.
- You cannot store “ボイスケンサク (Boisukensaku)” and “ボイスセツテイ (Boisusettei)” as a voice dial name.

Dial from Phonebook by Voice

By your voice, you can access the Phonebook entry you set in the Voice Dial List. When “Read aloud settings” is set to “ON” and “Voice dial” is checked, the operation is guided by the voice guidance.

1 (for at least one second) ▶ As soon as the voice recognition start tone sounds, vocalize the voice dial name.






Start vocalizing within four seconds after the voice recognition start tone sounds.

Once the voice is recognized as a voice dial entry, the detected result is displayed.

- You cannot change the volume of the voice recognition start tone. The voice recognition start tone does not sound during Manner Mode.
- If you say the word “ボイス検索 (Boisukensaku)”, “使いかたナビ (Guide)” starts up. Go to step 2 on page 37.
- If you say the word “ボイス設定 (Boisusettei)”, the display of “Voice settings” appears. (See page 95)
- When “Auto voice dial” is set to “ON”, the display for Auto Voice Dial appears after the voice is recognized as a voice dial entry. Then about two seconds later, the FOMA phone automatically dials out.

2 Highlight a detected result and press or (Dial).

The first phone number in the selected Phonebook entry is dialed.

- You can bring up the detailed Phonebook display by pressing  (Detail). Highlight a phone number and press  or  (Dial) to make a voice call. Also, you can make a videophone call by pressing  (V.phone) or a PushTalk call by pressing .

Information



- When you vocalize, keep your mouth away from the microphone about 10 cm. If your voice is too distant, it may be difficult to recognize your voice.
- Pronounce the voice dial name as clearly as possible.
- Before and after voice production, avoid making the sounds unrelated to the voice dial name such as clearing your throat, clicking your tongue, noisy breathing or other noise.
- Vocalize in quiet, noise-free locations.
- While vocalizing, do not put your fingers over the microphone, or press or brush the keys.

To access a voice dial entry using the Flat-plug Earphone/Microphone with Switch

You need to set “Voice earphone dial” to “ON” and open the FOMA phone in advance.

1 Press and hold the switch of the Flat-plug Earphone/Microphone with Switch (option) for at least one second.

2 Perform the operations in step 1 and step 2 of “Dial from Phonebook by Voice” on page 94.


- You can make a call also by pressing the switch of the Flat-plug Earphone/Microphone with Switch instead of pressing  or .

To access a voice dial entry using a Bluetooth device

You can access a voice dial entry with the FOMA phone closed as well. You need to set “Voice earphone dial” to “ON” in advance, and connect with the Bluetooth device using the Headset service or Hands-free service.

- For using the Hands-free service, the Bluetooth device needs to support a voice recognition function.


1 Press the switch of the Bluetooth device.

- Press and hold the switch of the Bluetooth device or  of the FOMA phone for at least one second when the FOMA phone is closed.

2 Access a voice dial entry following the voice guidance.

- Once the voice is recognized as a voice dial entry, the detected result is displayed on the Private window.
- The FOMA phone automatically dials out about two seconds after the voice guidance to that effect finishes.

Voice Settings

- 1  ► **Settings** ► **Other settings**
 ► **Voice settings**
 ► **Do the following operations.**

Item	Operation/Explanation
Auto voice dial	You can automatically make a call to the phone number accessed by voice. ► ON or OFF
Voice earphone dial	You can access the voice dial entries by using the Flat-plug Earphone/Microphone with Switch (option) or Bluetooth Headset F01 (option). ► ON or OFF
Read aloud settings	See page 333.
Read aloud volume	See page 333.
Read aloud speed	See page 334.
Read aloud output	See page 334.
Read aloud valid set.	See page 334.

<Data Security Service> Saving (Restoring/Updating) Phonebook to Data Storage Center

You can save the Phonebook stored in your FOMA phone to the Data Storage Center. By accessing the Data Storage Center, you can restore/update the Phonebook to your FOMA phone. Data Security Service is a pay service that is available on a subscription basis.

- You cannot use Data Security Service when you are out of the service area.
- For details on Data Security Service, refer to “Mobile Phone User’s Guide [i-mode]”.

- 1  ► **LifeKit** ► **Data Security Service**
 ► **Do the following operations.**

Item	Operation/Explanation
Connect to Center	► Enter your Terminal Security Code ► YES
Sent/recv. PB data list	You can display the records of communication such as saving the Phonebook, mail messages, or images to the Data Storage Center. ► Select a record. ● Select a communication completion time in the list to switch to the detailed display.

Item	Operation/Explanation
PB image sending	You can set whether to save images set for the Phonebook entries to the Data Storage Center. ► ON or OFF

Information

<Connect to Center>

- You cannot save the UIM Phonebook.
- When the Phonebook entries saved to the Data Storage Center exceeds the number of Phonebook entries storable in the FOMA phone’s Phonebook, the excess entries cannot be updated.

<Sent/recv. PB data list>

- Up to 30 records are saved. When more than 30 records are saved, the older records are overwritten.

<PB image sending>



- You cannot save the images whose output from FOMA phone is prohibited.

Auto-update

On the site of the Data Storage Center, you can set so as to periodically update and save the Phonebook entries in your FOMA phone to the Data Storage Center.

- For details, refer to “Mobile Phone User’s Guide [i-mode]”.

Information

- The Phonebook is not automatically updated while another function is working at the time of Auto-update.
- If the Phonebook cannot be updated, the notification icon of “ Update” (PB in Center updated) appears on the Stand-by display. Select “ Update”, and the update display appears if Auto-update is set. If Auto-update is not set, the update display appears after you enter your Terminal Security Code.



Sound/Screen/Light Settings



Sound Settings

Changing Ring Tone of FOMA Phone	⟨Select Ring Tone⟩	98
Setting Sound Effects of Ring Tone or Melody	⟨Melody Effect⟩	99
Informing You of an Incoming Call by Vibration	⟨Vibrator⟩	100
Using Recorded Sound as Ring Tone	⟨Voice Announce⟩	100
Changing Calling Tone	⟨Melody Call Setting⟩	100
Setting Keypad Sound	⟨Keypad Sound⟩	101
Setting Charging-start/end Tones	⟨Charge Sound⟩	101
Sounding Alarm when a Line is Likely to be Disconnected	⟨Quality Alarm⟩	101
Setting Ring Time for Mail and Messages R/F	⟨Mail/Message Ring Time⟩	101
Sounding Ring Tone from Earphone Only	⟨Headset Usage Setting⟩	101
Silencing Tones	⟨Manner Mode⟩	102
Selecting Manner Mode Type	⟨Manner Mode Set⟩	103

Screen/Light Settings

Changing Displays	⟨Display Setting⟩	104
Displaying an Image Stored in Phonebook during Ringing	⟨Display Phonebook Image⟩	106
Setting Displays for Private Window	⟨Private Window⟩	106
Displaying Arrival Information by Opening FOMA Phone	⟨Received Mail/Call at Open⟩	106
Setting Lights for Display and Keypad	⟨Backlight⟩	107
Adjusting Quality of Display Automatically	⟨LCD AI⟩	107
Setting Quality of Display	⟨Image Quality⟩	107
Setting Color Combination for Display	⟨Color Theme Setting⟩	108
Setting Display of Main Menu	⟨Menu Icon Setting⟩	108
Using Kisekae Tool	⟨Kisekae Tool⟩	109
Using Feel Function	⟨Feel Settings⟩	109
Setting Color of Call/Charging Indicator and Others	⟨Illumination⟩	111
Checking Missed Calls and New Mail by Tone and Call/Charging Indicator	⟨Info Notice Setting⟩	112
Using Icons on Desktop	⟨Desktop Icon⟩	112
Changing Character Font	⟨Font⟩	114
Changing Character Size	⟨Character Size⟩	115
Setting Clock Display		116

<Select Ring Tone>

MENU 1 3

Changing Ring Tone of FOMA Phone

You can set ring tones by incoming type.
If you select an i-motion movie, the i-motion movie and sound are played back for incoming calls/messages. (Chaku-motion)

- The ring tone is the PCM sound source, chord of 128 tones, and ADPCM compliant.
- See "Add to Phonebook" for setting a ring tone by Phonebook entry, and see "Group Setting" for setting it by group.

■ Ring Tone List (pre-installed)

Display	Title	The Name of Lyricist/Composer
Pattern 1	—	—
Pattern 2	—	—
Pattern 3	—	—
Pattern 4	—	—
Pattern 5	—	—
YOU RAISE ME UP※1	YOU RAISE ME UP	Composer: LOVLAND ROLF
THIS LOVE※1	THIS LOVE	Composer: ANGELA AKI
EL COLIBRI	EL COLIBRI	Composer: SAGRERAS JULIO S
LA FILLE AUX CHEVEUX※1	LA FILLE AUX CHEVEUX DE LIN	Composer: DEBUSSY CLAUDE ACHILLE
SOMEDAY MY PRINCE	SOMEDAY MY PRINCE WILL COME	Composer: CHURCHILL FRANK E
POLET SHMAJA	POLET SHMAJA	Composer: RIMSKIJ KORSAKOVICH NICOLAS ANDR
RHAPSODY ON A THEME	RHAPSODY ON A THEME OF PAGANINI OP 43	Composer: RACHMANINOFF SERGEI
JAZZ※1	—	—
3D tone 1※1	—	—
3D tone 2※1	—	—
3D tone 3※1	—	—
3D tone 4※1	—	—
bubble	—	—
waterdrop	—	—
Mail 1	—	—
Mail 2	—	—
美ら海 カクレマミ※2	美ら海 カクレマミ (CHURAUMI KAKUREKUMANOMI)	—

※1 3D sound supported. See page 99 for 3D sound.

※2 i-motion movie

(Note) Uppercases of Roman alphabet are used for titles, lyricists, and composers.

The name of lyricists and composers are described conforming to the JASRAC web page.

Whole part of long titles may not be displayed due to restriction of the display size.



License No. T-0790001

1 [MENU] ▶ Settings ▶ Sound ▶ Select ring tone ▶ Select an incoming type.

- Select an item and press (Play) to check the contents actually played back or displayed.

2 Select ring tone ▶ Select a type of ring tone.

- Melody** Sets a melody as a ring tone.
- MUSIC** Sets a Chaku-uta Full® music file as a ring tone.
- i motion** Sets an i-motion movie as a ring tone. (Chaku-motion/Chaku-uta®)
- Voice announce** Sets the sound recorded by "Voice announce" as a ring tone. The setting is completed.
- OFF** Sets a ring tone off. The setting is completed.


3 Select a folder ▶ Select a ring tone.

- If you select "MUSIC" in step 2, select "Fullsong ring tone" or "Point ring tone". (See page 327)
- See page 162 when you select "Search by i-mode".

Information

- You can set the Call Receiving display by selecting "Phone" or "Videophone", and then by selecting "Select calling disp.". Go to step 2 on page 105.
- You can set the Mail Receiving display by selecting "Mail", "Chat mail", "MessageR" or "MessageF", and then by selecting "Select receiving disp.". Go to step 2 of "Set Stand-by Display" on page 104.
- The priority order of ring tones is as follows: "Read aloud settings" → "Setting for Phonebook entry" → "Group setting" → "Select ring tone". When a call comes in to the additional number, the ring tone specified by "Set as ring tone" of "Multi number" sounds. If a call comes in to Number B while using 2In1, the priority order of the ring tones is as follows: "Read aloud settings" → "Setting for Phonebook entry" → "Group setting" → "Ringtone set. for No. B" (see page 373).
- The ring tone or images set at purchase might be played back or displayed for incoming calls or messages, depending on the combination of this function and "Display setting".

Information

- See “ motion info” to check whether the i-motion movie can be set for a ring tone.
- When you set an i-motion movie containing video and sound for a mail ring tone, you can press **(CLR)** or others to stop the ring tone.
- When you set an i-motion movie containing video and sound for a ring tone (Chaku-motion), it is played back taking priority over “Display setting”. However, if you set a voice-only i-motion movie for the ring tone, the image set by “Display setting” is displayed.
- When you set an i-motion movie containing video and sound for “Select calling disp.”, the i-motion movie is played back taking priority over this function for incoming calls. However, if you set an i-motion movie containing only video for “Select calling disp.”, the ring tone selected for this function is played back for incoming calls.
- You cannot set an i-motion movie which contains video as a PushTalk ring tone.
- When different types of mail — i-mode mail, SMS messages, chat mail, or Messages R/F — are received at the same time, the priority order of ring tone as follows: “Chat mail” → “i-mode mail/SMS” → “MessageR” → “MessageF”. If you receive the same type of mail simultaneously, the ring tone corresponding to the mail you have received last works.
- For the melody downloaded from a site or attached to mail, or the melody prohibited to attach to mail or output from the FOMA phone, a playing part may be specified in advance. When the play-part-specified melody is set for the ring tone, only the specified part is played back.

Item	Operation/Explanation
Position to play	<p>Sets the play start position of the melody that has been set for the ring tone or alarm tone.</p> <p>▶ Select an item.</p> <p>Play all</p> <p>... Plays back from the beginning of the melody.</p> <p>Play portion</p> <p>... Plays back from the start position set for the melody.</p>

3D Sound

3D Sound is a function that creates the stereophonic sound and the sound moving through the space, using the stereo-speakers (or stereo-earphone set). 3D Sound compatible i-appli games, ring tones, and i-motion movies enable you to enjoy live-like feeling of sounds. To enjoy the powerful 3D Sound and to get the best performance, keep the FOMA phone about 40 cm away from you, holding it in front of you. Note that the sound effects may be weakened if you hold the FOMA phone to the left or right from the front or if it is too close to or too far from you even in front of you.

Information

- Stereognostic sense might differ depending on the person. If you feel strange, switch “Stereo&3DSound” to “OFF”.

<Melody Effect>



Setting Sound Effects of Ring Tone or Melody

You can set whether to add stereophonic sound effects to the playback tone of melodies and i-motion movies, ring tones, and effect tones.

- 1**  ▶ **Settings** ▶ **Sound** ▶ **Melody effect**
▶ Do the following operations.

Item	Operation/Explanation
Stereo&3DSound	<p>Plays back 3-dimensional sound from the stereo-speakers.</p> <p>Effective for the i-appli effect tones or ring tones.</p> <p>▶ ON or OFF</p>

<Vibrator>

MENU 5 4

Informing You of an Incoming Call by Vibration

You can set the vibrator to notify you of incoming calls and mail.

1 MENU ▶ Settings ▶ Incoming call ▶ Vibrator

▶ Select an incoming type

▶ Select a vibration pattern.

Pattern 1 Alternates between vibration on (about 0.5 second) and off (about 0.5 second).

Pattern 2 Alternates between vibration on (about 1 second) and off (about 1 second).

Pattern 3 Alternates between vibration on (about 3 seconds) and off (about 1 second).

Melody linkage . . . Vibrates in time with the vibration pattern stored in the melody.

OFF Does not vibrate.

• While you are selecting a pattern, the FOMA phone vibrates by the selected pattern for confirmation. However, it does not vibrate if you select "Melody linkage".

• The following icons are displayed on the Stand-by display while the vibrator is set:

: Vibrates for incoming voice calls, PushTalk calls or videophone calls.

: Vibrates for incoming mail, chat mail or Messages R/F.

: Vibrates for incoming voice calls, PushTalk calls or videophone calls, and vibrates for incoming mail, chat mail or Messages R/F.

Information

- The priority order of vibrators is as follows: "Setting for Phonebook entry" → "Group setting" → "Vibrator".
- The vibrator vibrates at a regular strength, regardless of the ring volume level.
- Even when "Melody linkage" is set, the FOMA phone vibrates with "Pattern 2" if an i-motion movie or melody with no vibration pattern is set for the ring tone.
- Be careful not to leave the FOMA phone on a desk or similar places with the vibrator activated; when a call comes in, the FOMA phone might move and fall by vibration.

<Voice Announce>

MENU 5 5

Using Recorded Sound as Ring Tone

You can set the sound you recorded with the FOMA phone for a ring tone (including a ring tone for Number B of 2in1), On hold tone/Holding tone, alarm for "Alarm", "Schedule", "ToDo", and "Book program", and an answer message for Record Message.

You can record only one item for about 15 seconds.

1 MENU ▶ LifeKit ▶ Rec.msg/voice memo

▶ Voice announce ▶ Record

- To suspend recording midway, press (Stop), (Phone), or (CLR). The contents recorded to that point are saved.
- The tone beeps about 5 seconds before the recording time (for about 15 seconds) ends. When recording ends, the tone beeps twice, and the former display returns.
- The recording is suspended when a call comes in, when an alarm for "Alarm", "Schedule", "ToDo", "Book program", or "Timer recording" sounds, or when you switch displays using Multitask during recording. (The contents recorded to that point are saved.)
- To play back the recorded sound, select "Play". To suspend playback midway, press (Stop), (Phone), or (CLR).
- To erase the recorded sound, select "Erase", then select "YES".

<Melody Call Setting>

Changing Calling Tone

Melody Call is a service that changes the ringing tone phone callers hear, to a melody you like.

For details, refer to "Mobile Phone User's Guide [Network Services]".

- Melody call is a pay service which is available on a subscription basis.

1 MENU ▶ Settings ▶ Melody Call setting ▶ YES

▶ Follow the instructions on the display.



Information

- Melody Call is not available for incoming videophone calls and PushTalk calls.
- When you select "YES" from the confirmation display asking whether to connect to the site, the line is connected to the i-mode site. You are not charged a packet communication fee for connecting to the site for settings, however, you are charged for connecting to the IP site, i-mode menu site, and free melody corner.

Setting Keypad Sound

- 1 (MENU) ▶ Settings ▶ Sound ▶ Keypad sound
 - ▶ ON or OFF

Information

- The sound volume for keypad sound cannot be changed.
- If you set this function to "OFF", the battery level tone (see page 44) and respective warning tones do not sound.
- The keypad does not make a sound when you press , during ringing, or during playback of a moving image or i-motion movie.
- When you press  with your FOMA phone closed, the FOMA phone works according to "Info notice setting" on page 112.

Setting Charging-start/end Tones

The confirmation tone sounds twice when charging starts/ends.

- 1 (MENU) ▶ Settings ▶ Other settings ▶ Battery
 - ▶ Charge sound ▶ ON or OFF

Information

- The sound volume for charge sound cannot be changed.
- The charging confirmation tone does not sound when a display other than the Stand-by display is shown or during Manner Mode or Public Mode (Drive Mode).

Sounding Alarm when a Line is Likely to be Disconnected

When a call is liable to be disconnected midway because of bad radio wave conditions, an alarm sounds to inform you right before possible disconnection.

- 1 (MENU) ▶ Settings ▶ Talk ▶ Quality alarm
 - ▶ Select an alarm.

No tone . . . Does not sound.

High tone . . . High alarm sounds.

Low tone . . . Low alarm sounds.

Information

- You might be disconnected without hearing an alarm if radio wave conditions deteriorate suddenly.
- An alarm for "Quality alarm" sounds only from the earpiece during a videophone call.

Setting Ring Time for Mail and Messages R/F

You can set the duration of the ring tone which sounds for incoming i-mode mail, SMS messages, Chat mail and Messages R/F.

- 1 (MENU) ▶ Settings ▶ Sound ▶ Mail/Msg. ring time
 - ▶ Select a type of mail or message
 - ▶ ON or OFF ▶ Enter a ring time (seconds).
 - Enter in two digits from "01" through "30".

Sounding Ring Tone from Earphone Only

You can set where you make the ring tone and alarm sound from for when you connect the Flat-plug Earphone/Microphone with Switch (option).

- 1 (MENU) ▶ Settings ▶ Sound
 - ▶ Headset usage setting
 - ▶ Headset + speaker or Headset only

Information

- Even when you set "Headset only", the ring tone sounds from both the earphone and speaker about 20 seconds after ringing starts. However, the tone does not sound from the speaker but sounds from the earphone only even after 20 seconds have elapsed if the tone sounds for the operations other than incoming calls, incoming mail, and alarm notification.
- Even when you set "Headset only", the tone sounds from the speaker when you do not connect the Flat-plug Earphone/Microphone with Switch or when you start shooting still or moving images.
- In the following cases, the tone sounds from the earphone when the Flat-plug Earphone/Microphone with Switch is connected, and from the speakers when it is not connected, regardless of this setting.
 - During watching a One Seg program
 - During playback of a melody
 - During playback of an i-motion movie
 - During playback of a video file
 - While i-appli is running
 - During playback of a music file by MUSIC Player
 - During playback of a Music&Video Channel program
- Do not wind the cord of the Flat-plug Earphone/Microphone with Switch around the FOMA phone.
- The FOMA phone may pick up noise if you take the cord of the Flat-plug Earphone/Microphone with Switch close to the FOMA phone during a call.

<Manner Mode>

Silencing Tones

When you do not want the FOMA phone to make any sound, you can just press one key to switch off the ring tone, keypad sound and any other sound from the speaker.

You can use "Manner mode set" to select Manner Mode functions from three types; "Manner mode", "Super silent", or "Original".

While "Manner mode" or "Super silent" is activated, or while "Mic sensitiv." is set to "Up" in "Original", you can talk softly on the phone but your voice can still be heard clearly at the other end.

1 During standby/During a call

▶ (for at least one second)

Manner mode selected in "Manner mode set" is set.

- When FOMA phone is closed, press and hold for at least one second to activate Manner Mode.
- During Manner Mode, "" is displayed. The settings you selected for "Manner mode set" are also displayed.

: Indicates that "Vibrator" will work to notify events.

/ / : Indicate that "Ring volume" has been set to "Silent".

Information

- If you activate Manner Mode during a call or calling, the message to that effect appears.
- The recording start tone sounds even in Manner Mode when you shoot still images or moving images.
- In Manner Mode, if you try to play back a melody, the confirmation display appears asking whether to play it back. Select "YES" to play back the melody at the volume set for "Phone" or "Ring volume". If the setting is "Silent" or "Step", the volume is Level 2.
- In Manner Mode, if you do the following operations, the confirmation display appears asking whether to play back voice or music.
 - Watching a One Seg program
 - Playing back an i-motion movie
 - Playing back a video file
 - Playing back a music file by MUSIC Player
 - Playing back a Music&Video Channel program
 Select "YES" to play it back at the volume set for each player. When you change the volume level, it is played back at the set volume for the next time.
- When a Flat-plug Earphone/Microphone with Switch (option) is connected, the sound comes out of the earphone. The confirmation display asking whether to play back sound or music files during Manner Mode does not appear. Further, the playback tone does not sound from the speakers even if you unplug the Flat-plug Earphone/Microphone with Switch during playing back sound or music files by each player.

■ To release Manner Mode

Press and hold for at least one second. During a call or calling, two beeps sound and the message that is released appears.

- When FOMA phone is closed, press and hold for at least one second to release Manner Mode.

■ To activate Manner Mode during ringing

Press or .

Manner Mode is activated and Record Message is simultaneously activated so that the caller can leave a voice/video message.

Even when "Record message setting" has not been set to "ON", the Record Message function works.

Press or (Answer) to answer a voice call, or press (Answer), or (Subst.) to answer a videophone call.

- When five messages for voice calls and two messages for videophone calls have already been recorded, or when a PushTalk call comes in, Record Message does not work. Manner Mode specified by "Manner mode set" will work.
- When the call finishes, Manner Mode is still activated.

Selecting Manner Mode Type

You can select one of three types of operations for Manner Mode.

■ Operations during Manner Mode

	Manner Mode	Super Silent	Original
Record message	Set value of Record message		ON or OFF
Vibrator※1	ON		ON or OFF
Phone volume	Silent		Silent through Level 6 and step ①
Mail volume	Silent		Silent through Level 6 and step ②
Alarm volume※2	Silent		Silent through Level 6 and step
VM tone	ON	OFF	ON or OFF ③
Keypad sound	OFF		ON or OFF ④
Microphone sensitivity	Up		Normal or Up
Low voltage alarm tone (Low battery alarm)	OFF		ON or OFF When "LVA tone" is set to "ON", it works with the same set value as ①.※3
Confirmation tone for selecting ring tone	Silent		Works with the same set value as ① · ②.
On hold tone	Silent		Works with the same set value as ①.※4
Holding tone	Silent		Works with the same set value as ①.※5
ToruCa obtained tone and ToruCa failed-to-obtain tone	Silent		Works with the same set value as ①.
Confirmation tone for recording voice announce	ON	OFF	Works with the same set value as ③.
Battery level tone	Silent		Silent
Voice recognition start tone	Silent		Silent
Confirmation tone for checking missed calls and new mail	Silent		Works with the same set value as ①.※6
Warning tones	Silent		Works with the same set value as ④.
Schedule alarm	Silent		Works with the same set value as ①.
Alarm for Book program	Silent		Works with the same set value as ①.
Alarm for Timer recording	Silent		Works with the same set value as ①.※7
Start tones for shooting still and moving images	Level 4		Level 4
Confirmation tone for selecting shutter sound	OFF		Works with the same set value as ③.
Switching to Hands-free by "Hands-free w/ V. phone" or "Hands-free w/ PushTalk"	OFF		OFF
Read aloud volume	Silent		Works with the same set value as "Read aloud volume" on page 333.

※1 Vibrator works instead of (or with) the following tones:

Ring tone and alarm for "Alarm", "Schedule", "ToDo", "Book program" and "Timer recording"

The vibration pattern will be the same as the setting described on page 100. However, if the setting described on page 100 is "OFF", "Pattern 2" will be activated.

Confirmation tone for checking missed calls and new mail

- Vibrates for about 1 second when you have missed calls or new mail messages.
- Vibrates for about 0.2 second when you have no missed calls and new mail messages.

※2 When "Prefer manner mode" on page 335 is set to "OFF", the alarm tone sounds at the volume set for Alarm.

※3 The tone sounds at Level 1 when ① is "Silent".

※4 The tone sounds at Level 2 when ① is "Step".

※5 The tone sounds at Level 1 when ① is not "Silent".

※6 The tone sounds at Level 6 when ① is not "Silent".

※7 The tone does not sound when ① is "Step".

You can select from among standard “Manner mode” to inform you of incoming calls or mail by the vibrator, “Super silent” to erase sounds including confirmation tones from the earpiece, or “Original” to customize operations.

1 Settings ▶ Incoming call

- ▶ Manner mode set
- ▶ Manner mode, Super silent or Original
- ▶ Do the following operations.

Item	Operation/Explanation
Record msg.	<p>▶ ON or OFF</p> <ul style="list-style-type: none"> • Even if you select “ON”, the ring time is fixed to about 13 seconds and cannot be changed when “Record message setting” on page 67 is set to “OFF”. • See page 67 for Record Message Setting.
Vibrator	<p>You can set the FOMA phone to vibrate for incoming calls and mail.</p> <p>▶ ON or OFF</p> <ul style="list-style-type: none"> • See page 100 for Vibrator.
Phone vol.	<p>You can adjust the ring volume for incoming voice calls, videophone calls and PushTalk calls.</p> <p>▶ Use to adjust the volume.</p> <ul style="list-style-type: none"> • See page 64 for Ring Volume.
Mail vol.	<p>You can adjust the ring volume for i-mode mail, SMS messages, and Messages R/F.</p> <p>▶ Use to adjust the volume.</p> <ul style="list-style-type: none"> • See page 64 for Ring Volume.
Alarm vol.	<p>▶ Use to adjust the volume.</p> <ul style="list-style-type: none"> • See page 335 for Alarm.
VM tone	<p>You can set the FOMA phone to sound a confirmation tone when a record message is played back, a voice memo is recorded or played back, and a movie memo is recorded.</p> <p>▶ ON or OFF</p>
Keypad sound	<p>▶ ON or OFF</p> <ul style="list-style-type: none"> • See page 101 for Keypad Sound.
Mic sensitiv.	▶ Normal or Up
LVA tone	<p>▶ ON or OFF</p> <ul style="list-style-type: none"> • See page 44 for LVA Tone (low battery alarm).

2 Press (Finish).

Changing Displays

Set Stand-by Display

You can set an image for the Stand-by display. You can set also i-motion movies shot by the FOMA phone or downloaded from sites for the Stand-by display.

1 Settings ▶ Display ▶ Display setting

▶ Stand-by display ▶ Select a type of image.


- If you select “Calendar”, select a display format, and then select “BG image ON” or “BG image OFF”. If you select “BG image OFF”, the setting is completed.
- If you select “ appli display”, select an i-appli program. The setting is completed.

2 Select a folder ▶ Select an image.

- When the image is larger than the Stand-by display, the overall image is displayed with the dimensions shrunk and proportional ratio retained. The image smaller than the Stand-by display is displayed in equivalent dimensions.
- See page 162 when you select “Search by i-mode”.

■ When Calendar is set

The calendar in the set format appears on the Stand-by display. You can check the calendar for the previous or next month or set schedule events (see page 337) with ease.

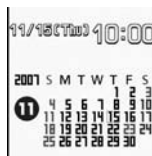

- From the Stand-by display, press and then to display the previous calendar, or press to display the next calendar.

When a desktop icon is pasted on the Stand-by display, pressing highlights the desktop icon previously used or the calendar.

Highlight the calendar, press (Select) and use to display the previous or next calendar.

Press (Select) again to set “Schedule”.


■ When an original animation or animation GIF is set



It is played back when you display the Stand-by display, press from the Stand-by display, or open the FOMA phone. The first frame is displayed as the Stand-by display.

■ When a Flash movie is set

It is played back when you display the Stand-by display, press from the Stand-by display, or open the FOMA phone. The image stopped such as by your first operation is displayed as the Stand-by display.

■When an i-motion movie is set

It is played back when you display the Stand-by display, press  from the Stand-by display, or open the FOMA phone. The first frame is displayed as the Stand-by display.

- Press  or  during playback to adjust the volume.

Press , , , , , ,  or  to end the playback.

- If you play back an i-motion movie during Manner Mode, the sound is not played back.

Information

- Some i-motion movies might not be correctly displayed.
- You cannot set a still image in excess of Stand-by (480 x 854) size or 300 Kbytes for the Stand-by display.
- You cannot set some images or i-motion movies for the Stand-by display.
- The sound of Flash movies cannot be played back.

Set the Wake-up Display

You can set an image or message to be displayed for when the power is turned on.

1 Settings ▶ Display ▶ Display setting ▶ Wake-up display ▶ Select a type of image.

- If you select "Message", enter a message. You can enter up to 50 full-pitch/100 half-pitch characters.
- If you select "My picture" or "i-motion", go to step 2 of "Set Stand-by Display" on page 104.
- See page 162 when you select "Search by i-mode".



Information

- You cannot set some images or i-motion movies for the Wake-up display.
- The sound of Flash movies cannot be played back.

Set Displays for Dialing/Calling and Others

You can set an image for the Dialing/Call Receiving display, Mail Sending/Mail Receiving display, and Checking display.

1 Settings ▶ Display ▶ Display setting ▶ Select a type of display.

- When "Incoming call" or "Videophone incoming" is selected, select "Select calling disp."
- When "Mail receiving" is selected, select "Select receiving disp." and go to step 2 of "Set Stand-by Display" on page 104.
- If you select "Dialing", "Videophone dialing", "Mail sending", "Check new message", or "Mail/msg. rcpt result", go to step 2 of "Set Stand-by Display" on page 104.
- Select "Incoming call", "Videophone incoming" or "Mail receiving" and press  () to check the contents actually displayed or played back.

2 Select a type of image.


Go to step 2 of "Set Stand-by Display" on page 104.

Information



- When you select "Incoming call", "Videophone incoming", or "Mail receiving", select "Select ring tone" to set the ring tone. Go to step 2 on page 98.
- The priority order of displays for call receiving is as follows: "Setting for Phonebook entry" → "Group setting" → "Disp. PH-book image" → "Display setting". However, when "Incoming call" or "Videophone incoming" of "Read aloud settings" is set to "ON", the default image is displayed. The same order applies if a call comes in to Number B while using 2in1. However, when you set an i-motion movie containing video and sound for a ring tone (Chaku-motion) by "Ringtone set. for No. B", it is played back as Chaku-motion, taking priority over this function.
- When you set an i-motion movie containing video and sound for a ring tone (Chaku-motion), it is played back for incoming calls, taking priority over this function. However, if you set a voice-only i-motion movie, the image set by this function is displayed.
- When you set an i-motion movie containing video and sound for "Select calling disp.", the i-motion movie is played back taking priority over "Select ring tone" of "Incoming call" for incoming calls. However, if you set an i-motion movie containing only video for "Select calling disp.", the ring tone selected for "Select ring tone" of "Incoming call" is played back.
- The images or ring tone set at purchase might be displayed or played back for incoming calls or messages, depending on the combination of this function and "Select ring tone".
- You cannot set some images for "Display setting".
- The sound of Flash movies is not played back.

Set Battery Icon and Antenna Icon

You can set the icons for battery level and radio wave reception level that appear on the display.

- 1  **Settings** ▶ **Display** ▶ **Display setting**
 - ▶ **Battery icon or Antenna icon**
 - ▶ **Select a pattern.**

Information

- You cannot change icons such as “” or “.

<Display Phonebook Image> Displaying an Image Stored in Phonebook during Ringing

If the caller ID notified by the caller matches the phone number stored in the Phonebook, the still image stored in the Phonebook is displayed.

- 1  **Settings** ▶ **Incoming call**
 - ▶ **Disp. PH-book image** ▶ **ON or OFF**

Information

- The priority order of displays for call receiving is as follows: “Picture for Phonebook entry” → “Picture for group” → “Image for Phonebook entry” → “Display setting”. However, when “Incoming call” or “Videophone incoming” of “Read aloud settings” is set to “ON”, the default image is displayed.

<Private Window> Setting Displays for Private Window

 9 3

- 1  **Settings** ▶ **Display** ▶ **Private window**
 - ▶ **ON or OFF** ▶ **Do the following operations.**

Item	Operation/Explanation
Clock	You can set the display pattern of the clock. ▶ Pattern 1, Pattern 2 or Pattern 3
Orientation	You can set the direction of the clock to be displayed. ▶ Pattern 1 or Pattern 2
Brightness	You can adjust the brightness to Level 1 (dark) through Level 3 (bright). ▶ Select a brightness level.

Item	Operation/Explanation
Called	You can display the phone number (name when stored in the Phonebook) of the caller during ringing. ▶ ON or OFF You can set whether to display a Chaku-moji message. ▶ ON or OFF
Mail	You can display the received date/time and others of the mail message or Message R/F. (See page 30) ▶ ON or OFF ● The received date/time and others of the mail messages or Messages R/F in the box or folder with security set are not displayed.
i-Channel ticker	▶ ON or OFF ● You can set for each mode of 2in1. When 2in1 is deactivated, it becomes common to the setting in A Mode.
Disp. connection	You can set whether to display animations/characters during communication. ▶ ON or OFF

<Received Mail/Call at Open> Displaying Arrival Information by Opening FOMA Phone

When you have a missed call, new mail message, new chat mail message, or new Message R/F, the detailed Missed Call display/Inbox List/Chat Mail display/Message R/F List is displayed at opening the FOMA phone.

- 1  **Settings** ▶ **Display**
 - ▶ **Recv. mail/call at open** ▶ **ON or OFF**

Information

- When a call comes in while you are using Simple Menu, the detailed Received Call display appears.
- When multiple newly received messages/missed calls are found, the display for the last message/call appears.
- When a new mail message, chat mail, Message R/F are simultaneously received, the messages are displayed in the order of the chat mail message, i-mode message, Message R, and Message F.

Setting Lights for Display and Keypad

- 1 **MENU** ▶ Settings ▶ Display ▶ Backlight
▶ Do the following operations.

Item	Operation/Explanation
Lighting	<p>You can set whether to light the backlight in ordinary time.</p> <p>▶ ON or OFF</p> <ul style="list-style-type: none"> ● If you set to "OFF", "💡" appears on the Stand-by display. <p>Also, you can set whether to activate Power Saver Mode for the main display.</p> <p>▶ ON or OFF ▶ Enter a light time (seconds).</p> <ul style="list-style-type: none"> ● Enter from "015" through "999" in three digits.
Charging	<p>▶ Standard or Constant light</p> <p>Standard</p> <p>... Lights during charging in the same setting as it lights in ordinary time.</p> <p>Constant light</p> <p>... Always lights during battery charge.</p>
Area	<p>You can set the range the backlight lights in.</p> <p>▶ LCD+Keys or LCD</p>
Brightness	<p>You can adjust the brightness of the backlight for the main display to Level 1 (dark) through Level 5 (bright).</p> <p>▶ Select a brightness level.</p> <ul style="list-style-type: none"> ● When "Auto setting" is set, the backlight set by "Area" is automatically adjusted according to the ambient brightness that has been detected by the light sensor.
Soft light	<p>You can set whether to light the backlight for the main display softly.</p> <p>▶ ON or OFF</p>

■ **To switch the backlight on/off by pressing one key**
Press and hold (5) for at least one second.

Information

- When "Lighting" is set to "ON", the backlight stays lit while a call is coming in and the area specified by "Area" lights for about 15 seconds when you turn on the power, touch the keys, or open the FOMA phone. The backlight stays lit while the camera is activated or a moving image/i-motion movie is played back. When "OFF" is set, it does not light. However, it stays lit during recording of a moving image regardless of the "Lighting" setting.
- See page 71 for Backlight during a videophone call.
- See page 257 for Backlight during watching a One Seg program.

Information

- If the power is supplied from external power sources such as an AC adapter (option), the setting for "Charging" applies, regardless of the on/off setting of the backlight for "Lighting".
- When you display the text of i-mode mail or Messages R/F, the lighting time varies according to the length of the text.
- If you set "Power saver mode" to "ON", the display switches to Power saver mode and goes off after the specified time elapses with no operation on the Stand-by display. When you set "Illumination in talk" of "Illumination" to "OFF", the display during a voice call also goes off.
- When an image other than still image is set for the Stand-by display, the Stand-by display shifts to Power Saver Mode after the image is played back and a standby time elapses.
- The FOMA phone does not switch to Power Saver Mode during data communication or charging, or while the i-appli Stand-by display is running.
- The receiving display does not appear when you receive a call in Public Mode (Drive Mode).

<LCD AI> Adjusting Quality of Display Automatically

You can set whether to automatically adjust the brightness of the display backlight and to compensate the image quality according to that brightness during playback of i-motion movies, PC movies, Music&Video Channel programs, or video files, during a videophone call, or during watching a One Seg program.

- 1 **MENU** ▶ Settings ▶ Display ▶ LCD AI
▶ **ON or OFF**

- If you operate the setting from the Function menu during a videophone call or watching a One Seg program, the setting is effective only for the current videophone call or One Seg program.

Information

- If you set to "ON", the brightness is adjusted within the level specified for "Brightness" of "Backlight". The brightness is adjusted also while you are selecting a menu item.
- This function is disabled during Play Background.

<Image Quality> Setting Quality of Display

- 1 **MENU** ▶ Settings ▶ Display ▶ Image quality
▶ **Select an item.**

- Normal** Normal image quality
- Vivid** Vivid image quality
- Dynamic** Dynamic image quality in which motion is emphasized

<Color Theme Setting>

MENU 8 6

Setting Color Combination for Display

You can set the display color pattern of characters and backgrounds, and so on.

1 MENU ▶ Settings ▶ Display

▶ Color theme setting ▶ Select a color theme.

- While a color theme is selected, the selected color theme appears on the display for confirmation.

Information

- You cannot change the color for icons and images displayed in multiple colors, the DoCoMo pictographs, and the Internet web pages (sites) supporting i-mode.

<Menu Icon Setting>


MENU 5 7

Setting Display of Main Menu

You can change the icons and the background images of Main Menu.

1 MENU ▶  (FUNC) ▶ Menu icon setting

▶ Select a pattern.

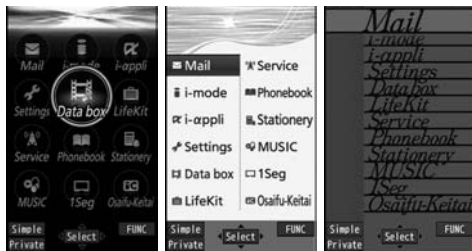

Black

White

Red



Pink gold


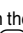
Enlarge menu

Normal

2 When you select “Customize” in step 1, select a menu icon or background image to be changed ▶ Select a folder

▶ Select an image.

Repeat step 2 and set menu icons and a background image.

- While selecting a menu icon or background image, press  (Play) to confirm the currently set image.
- To reset the menu icon and background image set to “Customize” to “スタンダード” (Standard) in the “Pre-installed” folder, press  (FUNC) and select “Reset” or “All reset”, then select “YES”.
- See page 162 when you select “Search by i-mode”.



Information

- The image you can customize is a JPEG or GIF image whose size is Stand-by (480 x 854) or smaller and up to 300 Kbytes. Perform “Change size” or “Trim away” for other images.
- When a customized image is deleted, “スタンダード” (Standard) in the “Pre-installed” folder returns.
- When Personal Data Lock is activated while “Customize” is set, the default image is displayed.
- When you set “Customize”, the main menu icons do not switch even if you switch “Select language”.

Using Kisekae Tool

You can use Kisekae Tool to change the ring tone, Stand-by display, menu icons and others at a time.

- See page 161 for details on how to download Kisekae Tool files.

Items that can be set with Kisekae Tool

- Select ring tone
 - Display setting
 - Color theme setting
 - Menu icon setting
 - "Clock" and "Orientation" of Private window
 - Illumination
 - Illumination in talk
 - Side key illumination
 - Posit. tone/illum.
 - Tone
- Items that can be set differ depending on the Kisekae Tool file.
 - The setting change of phone/videophone ring tones, mail ring tone, and Stand-by display is applied only to the A Mode of 2in1. The other changes are applied to the all modes of 2in1.

- 1  **Settings**  **Kisekae**
 **Set**  **YES**

- The "★" is added to the collectively set current Kisekae Tool file.
- Depending on the selected Kisekae Tool file, the confirmation display might appear asking whether to change the character size.

Information

- For the functions set by Kisekae Tool, each setting display is shown with "Follow Kisekae Tool" highlighted. You can separately change each setting, however, if you want to reset to the setting by Kisekae Tool, you need to perform collective settings again. You cannot select "Follow Kisekae Tool".
- If you use Kisekae Tool to change the design of the Menu display, some menu configurations change according to the usage frequency depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply.
In that case, you cannot operate as described in this manual, so you are advised to show Main Menu of "Normal" by "Disp. default MENU", or reset Main Menu by "Reset menu screen".
- When you set "ドコモダケ_P905i (DoCoMo-dake_P905i)" of Kisekae Tool for Main Menu, the main menu items and sub-menu items are displayed in Japanese even if "Select language" is set to "English".


Function Menu of Main Menu

Function menu	Operation/Explanation
Menu icon setting	See page 108.

Function menu	Operation/Explanation
Change launcher	You can manually replace the items on Main Menu. ▶ Select the menu item to sort ▶ YES
Disp. default MENU	You can temporarily show Main Menu of "Normal". • Once you close Main Menu of "Normal", the currently set Main Menu returns.
Reset	See page 109.

Reset Changed Design

You can reset the items changed by Kisekae Tool.

- 1   **Reset**
 ▶ Enter your Terminal Security Code
 ▶ Select an item.

Reset disp. /sound

... Resets all of "Items that can be set with Kisekae Tool" to the default.

Reset menu screen

... Resets Main Menu to the default. You can reset also by pressing and holding **(CLR)** for at least one second from the Stand-by display and selecting "YES".

Reset menu log

... Resets the operation records of Main Menu to the default.




Information

- Even if you perform "Reset disp. /sound" or "Reset menu screen", you cannot reset "Character size".

<Feel Settings>

 
Using Feel Function

The Feel function reproduces the atmosphere of "communications" or "mail" by actions of 45 types of animated characters.

- To end the playback, press  or **(CLR)**.
- When the FOMA phone is closed, press  or  to end the playback.



After ending a call




After receiving a mail message

Feel * Talk

Once you activate Feel * Talk, a Feel * Talk image is played back when a call ends. You can play it back also from the Redial List, Dialed Call List, Received Call List, or each detailed display.

You can make the Call/Charging indicator light/flicker in synchronization with Feel * Talk when you close your FOMA phone after ending a call.

- You cannot use Feel * Talk for videophone calls and PushTalk communications.

- 1  **Settings ▶ Feel settings**
▶ **Feel * Talk ▶ Do the following operations.**


Item	Operation/Explanation
Display after talk	A Feel * Talk image is played back on the Stand-by display when a call ends. ▶ ON or OFF ● When this function is set to "OFF", a Feel * Talk icon does not appear on each record display even while "Disp. /play in history" is set to "ON".
Disp. /play in history	A Feel * Talk icon appears on each record display. ▶ ON or OFF
Illumination	At the first time of closing the FOMA phone after a call ends, the Call/Charging indicator lights/flickers in synchronization with Feel * Talk. ▶ ON or OFF ● The Call/Charging indicator lights/flickers regardless of the setting of "Illum. when folded".

Information

- A Feel * Talk image is played back even if you end a call after switching between a videophone call and voice call.

Feel * Mail


Once you activate Feel * Mail, a Feel * Mail image is played back on the Private window after you receive an i-mode mail/SMS message. You can play it back also from the Received Address List or detailed display.

- 1  **Settings ▶ Feel settings**
▶ **Feel * Mail ▶ Do the following operations.**

Item	Operation/Explanation
Disp. /play new one	A Feel * Mail image is played back on the Private window after you receive an i-mode mail/SMS message. ▶ ON or OFF ● When this function is set to "OFF", a Feel * Mail icon does not appear on each record display, the Received Address List, the Inbox List, and the detailed Received Mail display even while "Disp. /play in history" is set to "ON".
Disp. /play in history	A Feel * Mail icon appears on each record display, the Received Address List, the Inbox List, or the detailed Received Mail display. ▶ ON or OFF

Play Back Feel * Talk/Feel * Mail Image from Each Record Display

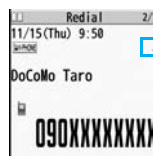

- 1 Select a record item which contains a Feel * Talk or Feel * Mail icon from Redial, Dialed Calls, Received Calls, or the Received Address List, or show each detailed display.



- A Feel * Talk/Feel * Mail icon moves when it is selected or shown.

- 2 Press  ().

The Feel * Talk/Feel * Mail image is played back.

- To end the playback, press **CLR**.
- When you display the record display from another function, you cannot play back the Feel * Talk/Feel * Mail image by pressing  (.

Setting Color of Call/Charging Indicator and Others

1 Settings > Illumination

▶ Do the following operations.

Item	Operation/Explanation
All illum. setting	You can set all illumination items at one time. ▶ Select a pattern.
Illumination	See page 111.
Illumination in talk	You can set the flickering color of the Call/Charging indicator for during a call. ▶ Use to select a color. ● The Call/Charging indicator flickers for confirmation while you are selecting. ● It flickers in the same color as it flickers during a call, while Record Message is working, during answer-hold (On Hold), or while a call is on hold (Holding).
Miss/unread illum.	The Call/Charging indicator flickers for missed calls, new mail messages, or new Messages R/F at about 5-second interval for about 30 minutes. ▶ ON or OFF
Music&Video ch illum.	The Call/Charging indicator flickers when obtaining Music&Video Channel programs is completed at about 5-second interval for about 30 minutes. ▶ ON or OFF
Illum. when folded	The Call/Charging indicator lights when the FOMA phone is closed. ▶ ON or OFF
Hourly illumination	You can be notified of the specified time (every hour at 0 minutes) by the tone and light of the Call/Charging indicator. ▶ Select a pattern. ● "Hourly illumination" does not work while a display other than the Stand-by display is shown, or Lock All or Omakase Lock is activated. ● Time tone sounds at the volume set for "Phone" of "Ring volume". If "Step" is set, it sounds at Level 2.
MUSIC illumination	The Call/Charging indicator flickers for about 15 seconds when you start playback by MUSIC Player. ▶ ON or OFF
Bluetooth illumination	The Call/Charging indicator flickers during connecting to Bluetooth devices. ▶ ON or OFF ● It flickers at about 5-second interval for about 5 minutes when the connection is completed.
IC card illumination	The Call/Charging indicator lights/flickers when you place the FOMA phone over an IC card scanning device or during IC communication. ▶ ON or OFF ● It does not light/flicker during IC Card Lock.

Item	Operation/Explanation
PushTalk illumination	The Call/Charging indicator lights/flickers when you try to get the PushTalk talker's right, or when a member's state changes to "Connected". ▶ ON or OFF
Side key illumination	You can set the lighting color of the Call/Charging indicator for when you press with the FOMA phone closed. ▶ Use to select a color. ● The Call/Charging indicator lights for confirmation while you are selecting. ● The lighting duration differs depending on the illumination.
Check settings	You can check the setting contents for "Illumination", "Illumination in talk", "Hourly illumination" and "Side key illumination".

Illumination

8 9

You can set the flickering color of the Call/Charging indicator according to the incoming type.

1 Settings > Illumination > Illumination
▶ Do the following operations.

Item	Operation/Explanation
Set color	▶ Select an incoming type ▶ Use to select a color. ● To make the indicator light in colors "Color 1" to "Color 12" in order, select "Gradation". ● The Call/Charging indicator lights for confirmation while you are selecting.
Set pattern	You can set the flickering pattern of the Illumination. ▶ Select a pattern. Standard Flickers in the same pattern repeatedly. Melody linkage . . . Flickers with the ring tone.
Color setting (Edit color name)	▶ Edit color name ▶ Select a color ▶ Enter a name. ● You can edit "Color 1" through "Color 12" only. ● You can enter up to 10 full-pitch/20 half-pitch characters.
Color setting (Adjust color tone)	▶ Adjust color tone ▶ Select a color ▶ Adjust the color tone. ● You can adjust the color tone of "Color 1" through "Color 12" only. ● Use to select a color and use to change the color tone.

Information

<Set color>

- The priority order of illumination is; "Setting for Phonebook entry" → "Group setting" → "Set color".

Information

<Set pattern>

- Even when "Melody linkage" is set, the Call/Charging indicator flickers by "Standard" in the following cases:
 - When "Set color" is set to other than "Color 1" through "Color 12" and "Gradation"
 - When an i-motion movie or melody with no flickering pattern is set for the ring tone

<Info Notice Setting>



Checking Missed Calls and New Mail by Tone and Call/Charging Indicator

When the FOMA phone is closed, you can press to check for missed calls, new mail, new chat mail, new Messages R/F, record messages, and voice mail messages. To use this function, you need to set "Side keys guard" to "OFF" in advance.

- 1 **Settings** **Incoming call**
Info notice setting **Select an item.**

ON ... Notifies you whether there are missed calls, new mail, new chat mail, or new Messages R/F by the electronic sound and flickering of the Call/Charging indicator.

OFF ... Turns off the information notice.

※ When "Select language" is set to "日本語 (Japanese)", you can select "電子音 (electronic sound)" or "ボイス (voice)". With "ボイス (voice)", Japanese electronic voice and flickering of the Call/Charging indicator notify you of new chat mail, new mail, missed calls, record messages and voice mail messages in this order.

■ If you press while the FOMA phone is closed when you have a missed call, new mail, new chat mail, or new Message R/F

(When the "Missed call" icon, "New mail" icon, "Chat mail", or "Message R/F" icon is displayed on the Stand-by display.)

If "Info notice setting" is set to "ON", a double-beep tone sounds and the Call/Charging indicator lights for about five seconds.

If "Info notice setting" is set to "ボイス (voice)" in Japanese display, a beep tone sounds and a voice message announces that you have new mail, a missed call, and so on, and the Call/Charging indicator lights for about five seconds.

- When "Info notice setting" is set to "ボイス (voice)" in Japanese display, and a new Message R/F comes in, a voice message announces that you have new mail.
- If you press again while the voice is being played back, you can stop it.

When you have no missed calls, new mail, new chat mail, or new Message R/F

If "Info notice setting" is set to "ON", or "ボイス (voice)" in Japanese display, a triple-beep tone sounds, and the Call/Charging indicator flickers for about five seconds.

Even when "Info notice setting" is set to "ボイス (voice)" in Japanese display, the notice is not made by voice.

Information

- You cannot check for the mail messages held at the i-mode Center by this function.
- The confirmation function might not work depending on the function being activated.
- The sound volume for electronic sound cannot be changed.
- "ボイス (voice)" sounds at the volume set for "Phone" of "Ring volume". If "Step" is set, the sound volume is Level 2.
- The missed call, new mail, and new chat mail are informed by both the Call/Charging indicator and the vibrator unless "Phone" of "Vibrator" has been set to "OFF".
- The vibrator notifies the information as follows:
 - Vibrates for about 1 second when you have a missed call, new mail, or new chat mail message.
 - Vibrates for about 0.2 second when you have no missed calls, new mail, or new chat mail message.
- If you open the FOMA phone during notification, it stops.

<Desktop Icon>
















Using Icons on Desktop

If you could not answer a call (missed call) or when you have new mail, icons notify you of the call or mail on the Stand-by display. (Notification icons)




Also, you can paste the phone numbers, mail addresses or other items you frequently use as icons. (Desktop icons)






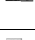













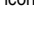

■ Operation when a notification icon is selected

Miss 1	Missed call Shows the Missed Call List. (See page 54)
Miss 1	Missed call to Number B of 2in1 Shows the Missed Call List. (See page 54)
Msg	Record message Shows the Record Message List. (See page 68)
Msg	Videophone record message Shows the Videophone Record Message List. (See page 69)
New 1	New i-mode mail or SMS Shows the Inbox List. (See page 186)
New 1	New chat mail Starts Chat Mail. (See page 205)
New 1	New Message R/F Shows the Message R/F List. (See page 201)
Notrun	When i-appli did not start automatically Shows the i-appli Auto Start Info. (See page 221)
New	When a ToruCa file is obtained from a scanning device Shows the ToruCa File List. (See page 226)

	When a security error occurred on the i-oppli Stand-by display Shows the Security Error History. (See page 212)
	Success in downloading a Music&Video Channel program Activates Music&Video Channel. (See page 316)
	Failure in downloading a Music&Video Channel program Activates Music&Video Channel. (See page 317)
	Missed alarm Shows the contents of the alarm that could not be notified. (See page 337)
	Missed program Shows the contents of the booked program that could not be notified. (See page 256)
	When timer recording was completed Shows the contents and results of the timer recording. (See page 256)
	When Messages are held at the Voice Mail Center Shows the display for Voice Mail. (See page 364)
	When the Phonebook could not be updated by Data Security Service Shows the update display for Data Security Service. (See page 95)
	When Provide Location was executed automatically Shows Location History. (See page 238)
	When Provide Location could not be executed automatically Shows Location History. (See page 238)
	When you did not respond to a location provision request Shows Location History. (See page 238)
	When Software Update is needed Starts Software Update. (See page 437)
	When Software Update was executed Shows the Update Completion display or the reason for not completing. (See page 436)
	When Software rewriting is possible Shows the rewriting confirmation display. (See page 435)
	When pattern data was updated automatically Shows the updated result. (See page 441)
	When the FOMA phone and a personal computer are connected by the FOMA USB Cable with Charge Function 01 (option) Shows the display for setting "USB mode setting". (See page 300)

■ Operation when a desktop icon is selected

	Phone number Shows the Dialing display with the phone number entered. (See page 50 and page 76)
	URL of site Shows the site of that URL. (See page 152)
	URL for Full Browser Shows the site of that URL by Full Browser. (See page 260)

	Sender's/Destination address of i-mode mail Shows the Message Composition display with the mail address entered. (See page 172)
	Sender's/Destination address of SMS Shows the SMS Composition display with the mail address entered. (See page 206)
	i-oppli[※] Starts the i-oppli program. (See page 211)
	Picture[※] Shows it on the Picture viewer. (See page 274)
	i-motion movie[※] Plays it back by the i-motion player. (See page 280)
	Video file[※] Plays it back by the Video player. (See page 286)
	Chara-den image[※] Plays it back by the Chara-den player. (See page 288)
	Melody[※] Plays it back by the Melody player. (See page 290)
	PDF file[※] Shows it on the PDF viewer. (See page 307)
	ToruCa file[※] Shows it on the ToruCa viewer. (See page 226)
	使いかたナビ (Guide) Shows the 使いかたナビ (Guide) display. (See page 36)
	Camera menu Shows the Camera menu. (See page 139 and page 141)
	Bar Code Reader Shows the Bar Code Reader menu. (See page 147)
	Text Reader Shows the Text Reader menu. (See page 149)
	Music&Video Channel Shows the Music&Video Channel display. (See page 316)
	Ir data receiving function Shows the Ir Data Receiving display. (See page 305 and page 306)
	Schedule Shows the Calendar display. (See page 338)
	ToDo Shows the ToDo List. (See page 340)
	Bluetooth function Shows the Bluetooth Function Selection display. (See page 350, page 351, and page 353)
	Private menu Shows the Private menu. (See page 341)
	Text memo Shows the Text memo. (See page 345.)

※When the original data is deleted or overwritten, the desktop icon is disabled.

Paste Icons to Desktop

You can paste up to 15 desktop icons of such as phone numbers, mail addresses, etc.

1 The display for an item to be pasted

▶ (FUNC) ▶ Add desktop icon ▶ YES


- When the addresses of the sender and another recipient of simultaneous mail are found or the multiple destination addresses are found, select a mail address or phone number to be pasted.

Information


- You may not be able to paste the URL to the desktop depending on the site.
- You can store the title for URL of up to 16 full-pitch/32 half-pitch characters. When the number of characters for the title exceeds that much, the characters in excess are deleted. If no title exists for a site, up to 22 half-pitch characters of the URL excluding "http://" or "https://" is displayed.
- Some files and data might not be pasted to the desktop.

Proceed to Respective Functions from Icons on Desktop

1 Press .

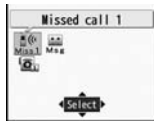

2 Use to highlight an icon, and press .

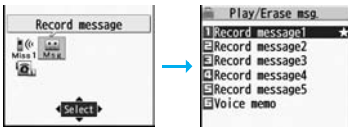

When a record message icon is selected

- Up to five "Desktop icons" are displayed. If there are six or more icons, "◀" and "▶" are displayed.
- A "Notification icon" is deleted when each function is executed. To delete all "Notification icons", press and hold for at least one second from the display in step 1.


Information

- When the notification icon of "Messages are held at the Voice Mail Center" () appears while you are overseas, you cannot operate the Voice Mail function from the notification icon. Follow the steps of "Operate Voice Mail Service from the Country You Stay" on page 392.

Check Details of Desktop Icon MENU 6 3

1 ▶ Settings ▶ Display ▶ Desktop icon

The list of desktop icons pasted to the desktop is displayed.

 

2 Select the icon whose details are to be displayed.

Function Menu of the Desktop Icon List

- You can bring up the Function menu also by pressing (FUNC), while highlighting a desktop icon from the Stand-by display.

Function menu	Operation/Explanation
Edit title	▶ Enter a title. <ul style="list-style-type: none"> • You can enter up to 16 full-pitch/32 half-pitch characters. However, the number of characters for the title displayed when you highlight the icon is up to 11 full-pitch/22 half-pitch characters from the beginning of the title.
Reset desktop	The desktop icons are reset to the default. <ul style="list-style-type: none"> ▶ YES
Delete this	▶ YES
Delete all	▶ YES

 MENU 6 6

Changing Character Font

1 ▶ Settings ▶ Display ▶ Font ▶ Font 1 or Font 2

Information

- Some characters such as Kanji are displayed in "Font 1" regardless of this function.
- You cannot change the font of a phone number entry or clock display.

Change Character Font of Phone Numbers

You can set the font of phone numbers displayed on the following display:

- Dialing/Call Receiving display
- Detailed Dialed/Received Call display
- Detailed Redial display
- Detailed Sent Chaku-moji Message display
- When you use 2in1, the setting here applies to the font for Number A. To specify the font for Number B, operate “Set call/receive No. (Disp. call/receive No.)” of “2in1 setting”.

- 1 (MENU) ▶ Settings ▶ Incoming call ▶ Disp. call/receive No. ▶ Select a font.

<Character Size> Changing Character Size


- 1 (MENU) ▶ Settings ▶ Display ▶ Character size ▶ Do the following operations.

Item	Operation/Explanation
Enlarge font display	<p>You can set all the items of “Character size” at a time.</p> <p>▶ Large, Standard, or Small</p> <ul style="list-style-type: none"> ● The confirmation display might appear asking whether to change the character size of the menu as well. If you select “YES”, the menu icons are set to “Enlarge menu” when you have set to “Large”, and they return to the default when you have set “Standard” or “Small”. ● When you select “Small”, “Phonebook”, “Dialed/recv. calls” and “Character input (Character size)” are set to “Standard”.
Mail	<p>You can set the character size for the text of the detailed mail display or detailed Message R/F display.</p> <p>▶ Large, Standard, or Small</p> <ul style="list-style-type: none"> ● The setting here applies to “Character size” of Mail Settings. ● While a sent or received mail message is displayed, press (3), or press (FUNC) to select “Display”, and then select “Character size”. ● You cannot change the character size of Decomail-pictographs. ● While the mail text is displayed, you can change character size also by pressing and holding (C) for at least one second. (See page 182 and page 207) In this case, the setting here also changes. ● When you set to “Large”, the characters on the Folder List and the Inbox/Outbox/Draft List are displayed in large size as well.

Item	Operation/Explanation
i-mode	<p>You can set the character size displayed on sites and screen memos.</p> <p>▶ Large, Standard, or Small</p> <ul style="list-style-type: none"> ● The setting here applies to “Character size” of i-mode Settings.
Phonebook	<p>You can set the character size for the Phonebook display.</p> <p>▶ Large or Standard</p> <ul style="list-style-type: none"> ● You can set also by (MENU) ▶ Phonebook ▶ Phonebook settings ▶ Character size ▶ Phonebook.
Dialed/recv. calls	<p>You can set the character size for the Redial/Dialed Call/Received Call/Sent Address/Received Address List.</p> <p>▶ Large or Standard</p> <ul style="list-style-type: none"> ● You can set also by (MENU) ▶ Phonebook ▶ Phonebook settings ▶ Character size ▶ Dialed/recv. calls.
Character input (Character size)	<p>You can set the character size for the character entry display, Message Composition display, or SMS Composition display.</p> <p>▶ Character size ▶ Large or Standard</p>
Character input (Candid. disp. size)	<p>You can set the character size of the conversion candidate list that is shown below the Character Entry (Edit) display.</p> <p>▶ Chandid. disp. size ▶ Large, Standard, or Small</p> <ul style="list-style-type: none"> ● The setting here applies to “Candid. disp. size” of the Function menu while entering (editing) characters.

■ When the character size is set, the display appears as shown below:

<For mail>

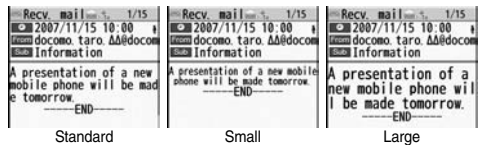

Information

- If you select “YES” from the confirmation display asking whether to enlarge the font when switching to Simple Menu, “Large” is set.
- When “Large” is set, some item names displayed for each operating procedure differ from the ones displayed when “Standard” or “Small” is set.

Setting Clock Display

You can set whether to display the clock on the Stand-by display and can set its display pattern.

- 1 **MENU** ▶ **Settings** ▶ **Display** ▶ **Display setting**
 ▶ **Clock** ▶ Do the following operations.

Item	Operation/Explanation
Clock display	▶ Big, Small, or OFF <ul style="list-style-type: none"> • The setting here does not change the clock size on the Private window, World Time Watch, or the sub clock.
Day of week	When "Select language" is set to "日本語 (Japanese)", you can select "日本語 (Japanese)" or "英語 (English)". <ul style="list-style-type: none"> • The setting here applies also to the clock display on the Private window. • If you set to "英語 (English)", region names of World Time Watch are also displayed in English.
Position	▶ Select a pattern.
Color	▶ Black or White

Information

<Position>

- Even if you set any of "Pattern 3" through "Pattern 13", the clock is displayed in "Pattern 2" in the following cases:
 - When you set the calendar for the Stand-by display
 - When World Time Watch or the sub clock is displayed under the clock on the Stand-by display*
 - When a carrier name is displayed on the Stand-by display by "Operator name display"
 - When "time zone" of "Set time" is not set to "GMT +9".*
 - During Lock All
 - During Omakase Lock
- ※ Even if you set to "Pattern 1", the clock is displayed in "Pattern 2".
- If you set "Pattern 1", the settings of "Clock display" and "Day of week" are invalid.

Security Settings

Passwords

Passwords	118
Changing Terminal Security Code	⟨Change Security Code⟩ 119
Setting PIN Code	⟨UIM Setting⟩ 119
Releasing PIN Lock	119

Restricting Operations or Functions

Locking your Phone to Prevent Use by Others	⟨Lock All⟩ 120
Using Omakase Lock	⟨Omakase Lock⟩ 120
Using Self Mode	⟨Self Mode⟩ 121
Locking Functions Regarding Personal Information	⟨Personal Data Lock⟩ 121
Setting a Variety of Locks	⟨Lock Setting⟩ 122
Using Face Reader	⟨Face Reader Setting⟩ 123
Locking Keypad Dial	⟨Keypad Dial Lock⟩ 125
Preventing Side Key Operation Errors	⟨Side Keys Guard⟩ 125

Restricting Outgoing/Incoming Calls or Messages

Setting not to Display Redial/Received Calls	⟨Record Display Set⟩ 125
Protecting Phonebook Entries and Schedule Events from Prying Eyes	⟨Secret Mode⟩ ⟨Secret Data Only⟩ 126
Applying Secret for Mail in Outbox/Inbox	⟨Secret Mail Display⟩ 126
Setting not to Display Mail in Outbox/Inbox without Permission	⟨Mail Security⟩ 126
Setting Restrictions on Phonebook Entries	⟨Restrictions⟩ 127
Setting Response to Incoming Calls without Caller ID	⟨Call Setting without ID⟩ 128
Delaying Start of Ringing Operation	⟨Ring Time⟩ 128
Rejecting Calls from Phone Numbers which are not Stored in Phonebooks	⟨Reject Unknown⟩ 129
What is Data Security Service?	129

Other “Security Settings”

Other “Security Settings”	130
---------------------------------	-----

Passwords

For some functions of the FOMA phone, you need to enter your password. In addition to the Terminal Security Code for operating respective mobile phone functions, the Network Security Code to use network services, and i-mode password are available. These passwords help you utilize your FOMA phone.


■ Cautions on passwords

- You should avoid using the numbers for passwords such as denoting your birth date, part of your phone number, local address number, room number, "1111" or "1234" that is easily decoded by a third party. Also make sure that you take a note of the passwords you have selected just in case you forget them.
- Take care not to let others know your passwords. Even if your passwords are known and used by a third party, we at DoCoMo take no responsibility in any event for the resultant loss.
- Note that we at DoCoMo will never make any inquiries about your passwords.
- If you do not remember your respective passwords, you need to bring an identification card such as your driver's license, the FOMA phone and UIM to the handing counter of a DoCoMo shop.


For details contact "DoCoMo Information Center" on the back page of this manual.

Terminal Security Code

The Terminal Security Code is set to "0000" at purchase but you can change it by yourself. (See page 119)

When the display for entering the Terminal Security Code appears, enter your four- to eight-digit code and press .

- When you enter your Terminal Security Code, the entered numbers are indicated by "_" and not displayed.
- If you have entered wrong numbers or nothing for about 15 seconds, a warning tone sounds and a warning message is displayed; then the display prior to entering the Terminal Security Code returns. Check the correct code and retry entering numbers.

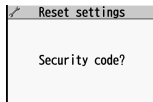

Network Security Code

The Network Security Code is a four-digit number for procedures on DoCoMo e-site or for using network services. This is determined at the time of contract but can be changed by yourself.

If you have "DoCoMo ID/Password" for "My DoCoMo", the overall support site for personal computers, you can use a personal computer to take proceedings of changing your Network Security Code to new one. Also, you can change it by yourself from "各種手続き (procedures)" on DoCoMo e-site by using the i-mode phone.

※ For "My DoCoMo" and "DoCoMo e-site (ドコモeサイト)", see the back page of this manual.


i-mode Password

You need to enter the four-digit "i-mode password" for registering or deleting My Menu, applying for or canceling Message Services, i-mode pay service, and so on.

(Some information providers may provide you with their specific password.)

The i-mode password is "0000" at the time of your contract, but you can change it by yourself. (See page 156)

From i-mode, you can change the i-mode password by following operation:

" Menu" → "English iMenu" → "Options" → "Change i-mode Password"

PIN1 Code/PIN2 Code

For the UIM, you can set the two security codes, namely the PIN1 code and PIN2 code.

These security codes are "0000" at the time of your contract, but you can change them by yourself. (See page 119)


The PIN1 code is the four- to eight-digit number for checking the user each time the UIM is inserted into the FOMA phone or each time the FOMA phone is turned on, so that you can prevent the third party from using your UIM. By entering your PIN1 code, you can make or answer calls, or use functions in the FOMA phone.

The PIN2 code is the four- to eight-digit number for executing Reset Total Cost, using the user certificate or applying for the issue of it, etc.

- If you purchase a new FOMA phone and use the existing UIM with the new FOMA phone, use the PIN1 code and PIN2 code you have set previously.

When the PIN1 Code/PIN2 Code Entry display appears, enter your four- to eight-digit PIN1 code/PIN2 code and press .

- The entered PIN1 code/PIN2 code is displayed as "_".
- If you enter a wrong PIN1 code/PIN2 code three times in succession, it is locked and the FOMA phone cannot be used. (The remaining number of times you can enter appears on the display.)

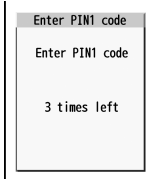

For PIN1 code


When you enter the correct PIN1 code/PIN2 code, the remaining number of times you can enter will return to three times.

PUK (PIN Unblock Code)

The PUK (PIN unblock code) is the eight-digit number for releasing the PIN1 code and PIN2 code lock state.

You cannot change this code by yourself.

- If you enter a wrong PUK (PIN unblock code) 10 times in succession, the UIM is locked.

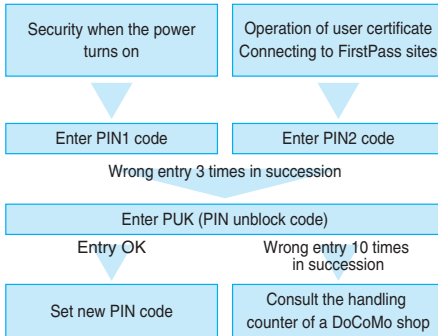

<Change Security Code>

MENU 2 9

Changing Terminal Security Code

Change the default for the Terminal Security Code required for operating functions to your own four- to eight-digit code so that you can make full use of the FOMA phone. Make sure you take a note of the security code you have changed just in case you forget it.

- 1 **Settings** ▶ Lock/Security
▶ Change security code
▶ Enter the current Terminal Security Code.
 - If you enter the code for the first time, enter "0000".
- 2 Enter a new Terminal Security Code (four to eight digits) ▶ YES

<UIM Setting>

Setting PIN Code

PIN1 Code Entry Set

You can set the FOMA phone not to work unless you enter your PIN1 code when turning on the power.

- 1 **Settings** ▶ Lock/Security ▶ UIM setting
▶ Enter your Terminal Security Code
▶ PIN1 code entry set ▶ ON or OFF
▶ Enter the PIN1 code.
 - See page 118 for the PIN1 code.

Change PIN1 Code/Change PIN2 Code


You need to have set "PIN1 code entry set" to "ON" to change the PIN1 code.

- 1 **Settings** ▶ Lock/Security ▶ UIM setting
▶ Enter your Terminal Security Code
▶ Change PIN1 code or Change PIN2 code
▶ Enter the current PIN1 code/PIN2 code.
 - See page 118 for the PIN1 code/PIN2 code.
- 2 Enter a new PIN1 code/PIN2 code (four to eight digits).
 - The entered PIN1 code/PIN2 code is displayed as " _".
- 3 Enter the new PIN1 code/PIN2 code again.

Releasing PIN Lock

If you enter a wrong PIN1 code/PIN2 code three times in succession on the display requiring its entry, it is locked and the FOMA phone cannot be used. In this case, release the PIN1 code/PIN2 code lock and set a new PIN1 code/PIN2 code.

- 1 Enter the PUK (PIN unblock code) (eight digits).
 - The entered unblock code is displayed as " _".
- 2 Enter a new PIN1 code/PIN2 code (four to eight digits).
 - The entered PIN1 code/PIN2 code is displayed as " _".
- 3 Enter the new PIN1 code/PIN2 code again.

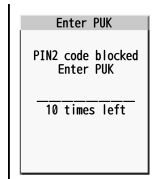

Locking your Phone to Prevent Use by Others




If you set Lock All, you can do no operations other than answering calls and turning on/off the power.

- 1  Settings ▶ Lock/Security ▶ Lock all
▶ Enter your Terminal Security Code.

“” and “Lock all” appear and Lock All is set.

- To release Lock All, enter your Terminal Security Code from the Stand-by display. Even if you turn off the power, Lock All will not be released.

Information

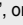- You cannot make calls during Lock All. However, you can make emergency calls at 110/119/118. Select “YES” from the confirmation display for dialing.
- You can receive calls, but the callers’ data such as their names and images stored in the Phonebook are not displayed except for their phone numbers. Further, the ring tone sounds in “Pattern 1”.
- GPS Location Provision is available even during Lock All.
- If you fail to release Lock All five times in succession, the power to the FOMA phone turns off. However, you can turn it on again.
- You can receive mail messages or Messages R/F during Lock All; however, the Receiving or Reception Result display for incoming mail messages and Messages R/F does not appear. The icons such as “”, “”, or “” appear after Lock All is released.
- The desktop icon disappears during Lock All. When Lock All is released, the icon reappears.
- The tickers of i-Channel are not displayed during Lock All.
- The default Wake-up display appears during Lock All even when an i-motion movie has been set for the Wake-up display.
- Even if you set Lock All, IC Card Lock is not activated.

Using Omakase Lock

When you have lost your FOMA phone or in other cases, you can use this service to remotely lock your FOMA phone by contacting DoCoMo or by operating from My DoCoMo. Your privacy and Osaifu-Keitai are protected.

To release the lock, contact DoCoMo by phone, etc.

- ※ Omakase Lock is a pay service. However, you are not charged if you apply for this service at the same time as applying for the suspension of the use or during the suspension.
- ※ Even during Omakase Lock, your FOMA phone corresponds to the location provision request of GPS function if “Location request menu” is set to “ON”.

Setting/Releasing Omakase Lock

 0120-524-360 Business hours: 24 hours

- ※ You can set/release also from My DoCoMo site via a personal computer or other devices.

- For details on Omakase Lock, refer to “Mobile Phone User’s Guide [Procedures and After-Sales Service]”.

“Omakase lock” is displayed on the Stand-by display and Omakase Lock is set.



- Omakase Lock is the service that locks the FOMA phone in which your contracted UIM is inserted.
- During Omakase Lock, all the key operations are locked and respective functions (including IC card functions) are disabled, except for answering voice calls/videophone calls, putting them on answer-hold (On Hold), turning on/off the power, adjusting the earpiece volume and adjusting the ring volume.
- You can receive voice calls and videophone calls (except PushTalk calls), but the callers’ data such as names and images stored in the Phonebook are not displayed except for their phone numbers. In addition, the ring image, ring tone, and vibrator are reset to the default. When you release Omakase Lock, the former settings return.
- Mail messages received during Omakase Lock are held at the Mail Center.
- You can turn on/off the power, however, Omakase Lock is not released by turning off the power.
- GPS Location Provision is available even during Omakase Lock.
- Note that neither the UIM nor the microSD memory card is locked.

Information

- Even while another function is working, Omakase Lock applies after finishing that function.
- Omakase Lock can be set even when another lock function is set. However, if you have set Public Mode (Drive Mode) before setting Omakase Lock, you cannot receive voice calls and videophone calls.
- Omakase Lock cannot be set when the FOMA phone is out of the service area, turned off, or during Self Mode.

Information

- When you have signed up for Dual Network Service and are using the mova phone, Omakase Lock cannot be set.
- Omakase Lock is a service that is activated by an offer from the contractor of the UIM inserted in the FOMA phone. Even when the contractor and the user of the FOMA phone differ, the FOMA phone will be locked if the contractor offers to DoCoMo.
- You can release Omakase Lock only when the UIM of the same phone number at locking is inserted in your FOMA phone. If you cannot release it, contact "DoCoMo Information Center" on the back page of this manual.

<Self Mode>

Using Self Mode

You can disable all phone calls and communication functions.

During Self Mode, the caller hears the guidance to the effect that radio waves do not reach or the power is turned off. If you use DoCoMo Voice Mail Service or Call Forwarding Service, you can use these services in the same way as when the FOMA phone is turned off.

1  Settings ▶ Lock/Security ▶ Self mode
▶ YES ▶ OK

"Self" appears and Self Mode is set.

- To release Self Mode, perform the same operation.

Information

- You can make emergency calls at 110/119/118 even during Self Mode. In this case, Self Mode is released.
- You cannot receive mail messages, Area Mail messages, or Messages R/F during Self Mode.
- Even if a call comes in during Self Mode, the "Missed call" icon does not appear after releasing Self Mode.

<Personal Data Lock>


Locking Functions Regarding Personal Information

To prevent other people from reading or tampering with your personal information, you can set the following functions not to be used:

- Record message
- Play/Erase msg.
- Select image
- Remote monitoring
- PushTalk phonebook
- Add to phonebook
- Group setting
- No. of phonebook
- Phonebook settings
- Search phonebook
- Voice dial
- Voice announce
- Kisekae tool
- Feel image playback
- Desktop
- Restrictions
- Reject unknown
- Camera
- Bar code reader
- Text reader
- i-mode
- Bookmark
- i-Channel
- Mail
- Photo-sending
- Mail group
- Chat group
- i-appli
- IC card content
- ToruCa
- GPS function
- One Seg
- Full browser
- PC movie
- Still image
- Moving image
- Video
- Chara-den
- Melody
- microSD memory card
- Infrared data exchange
- iC communication
- PDF viewer
- Document viewer
- Music&Video Channel
- MUSIC
- MUSIC player
- Alarm
- Schedule
- ToDo
- Alarm setting
- Own number
- Voice memo
- Movie memo
- Text memo
- UIM operation
- Reset settings
- Initialize
- "Number setting" and "Set as ring tone" for Multi number
- Data transfer


1  Settings ▶ Lock/Security
▶ Personal data lock

▶ Enter your Terminal Security Code.

"" appears and Personal Data Lock is set.



- To release Personal Data Lock, perform the same operation. When you set to "Timer lock at close", the display for releasing Personal Data Lock appears also by opening the FOMA phone.
When you set "PIM/IC security mode" to "Face reader", follow the operation of "Use Face Reader to Release Lock" on page 124.
When you set to "Double security", enter your Terminal Security Code after the operation on the page 124.

To temporarily release Personal Data Lock

When you select a function which cannot be used during Personal Data Lock, the display for entering your Terminal Security Code appears depending on the function. When you enter your Terminal Security Code, “” is cleared and you can temporarily use the function.

- When you show the Stand-by display while no menu function is activated, Personal Data Lock is set again.


Information


- You can automatically receive Messages R/F, i-mode mail messages, chat mail messages, and SMS messages during Personal Data Lock; however, the Receiving or Reception Result display does not appear. Further, the receiving operation such as ringing/vibration does not work, so you are not notified of receiving. The icons such as “”, “”, or “” appear after Personal Data Lock is released.
- During Personal Data Lock, the “Notification icon” and “Desktop icon” such as “New mail”, “Missed alarm”, “Phone number”, “URL” and “Mail address” do not appear, however, they reappear when you release Personal Data Lock.
- During Personal Data Lock, you cannot check a missed call or new mail by pressing  with the FOMA phone closed.
- During Personal Data Lock, the “Pre-installed” substitute image is sent to the other party if you send the substitute image during a videophone call.
- If you set “Lock all” during Personal Data Lock, “” is cleared and “” appears instead.

<Lock Setting>

Setting a Variety of Locks**Timer Lock ON at Close**

You can set “Timer lock at close” that automatically activates Personal Data Lock or IC Card Lock when the specified time has elapsed after closing your FOMA phone.

- 1  **Settings** ▶ **Lock/Security**
 - ▶ **Lock setting** ▶ **Timer lock ON at close**
 - ▶ **Enter your Terminal Security Code**
 - ▶ **Personal data lock or IC card lock**
 - ▶ **Select an elapse time.**

If you set to other than “OFF”, “” appears and then Timer Lock At Close is activated. After the lock is activated, the Lock Release display appears when you open the FOMA phone.

Information


- When the Stand-by display is not shown, or when another function is working with the Stand-by display shown, the lock is not activated even after the specified time elapses. However, when another function ends after closing the FOMA phone, the lock is activated after the specified time elapses.

Information

- When a call or mail message comes in after closing the FOMA phone, or when you open it, the elapsed time counter returns to 0 seconds.
- When this function is activated, the lock is temporarily released if you release each lock. However, it is re-locked when the specified time elapses after closing the FOMA phone.

PIM/IC Security Mode

You can set the way to release Personal Data Lock and IC Card Lock.

- 1  **Settings** ▶ **Lock/Security**
 - ▶ **Lock setting** ▶ **PIM/IC security mode**
 - ▶ **Enter your Terminal Security Code**
 - ▶ **Select a security mode.**

Security code

... Enter your Terminal Security Code to release the lock. The setting is completed.

Face reader

... Use Face Reader authentication to release the lock.

Double security

... Enter your Terminal Security Code to release the lock after using Face Reader authentication. The setting is completed.

2 YES**Information**

- You cannot change PIM/IC Security Mode when the face data files stored by Face Reader Setting are fewer than three, or during Personal Data Lock or IC Card Lock.

Using Face Reader

You can store your face data files in Face Reader and use it for authentication when releasing IC Card Lock or Personal Data Lock. To use Face Reader, you need to store three or more face data files and set "PIM/IC security mode" to either "Face reader" or "Double security".

■ Notes on using Face Reader


- The dirty camera might result in erroneous operation. Use this function after wiping it with a soft cloth to clean the dirt off.
- In environment where the face is exposed to strong light and the brightness significantly differs depending on the region of the face, the face will not be recognized easily. In this case, storing might become difficult or the recognition rate (the rate of correct identification) might be lowered. Adjust so that the face is exposed to even light.
- The face might not be recognized normally when its entire part is exposed to the light and becomes white.
- Storing the face might become difficult or the recognition rate might be lowered when the face conditions are as described below:
 - When the features of the face (eyes, mouth, nose, and eyebrows, etc.) are hard to see as they are covered by hair, glasses, or a mask
 - When the brightness significantly differs depending on the region of the face such as when you are under the light in a dark place
- The recognition rate might rise by reacting in accordance with the face conditions such as by raising the hair so that the eyes, nose, mouth, and eyebrows are clearly visible (taking the glasses and mask off) or moving to a place where the face is exposed to even light. The recognition rate rises also by storing the face data file additionally.
- The face authentication technology does not completely guarantee that you are recognized as yourself. Accordingly, we are not at all responsible for damages resulting from the use of this product by a third party or when the damages are caused by what you could not use the function because of wrong authentication by Face Reader.

Store

To use Face Reader, store 3 or more face data files.

You can store up to 10 face data files.

- 1 **MENU** ▶ **Settings** ▶ **Lock/Security**
 - ▶ **Lock setting** ▶ **Face reader setting**
 - ▶ **Enter your Terminal Security Code** ▶ **Store**
 - ▶ **OK**

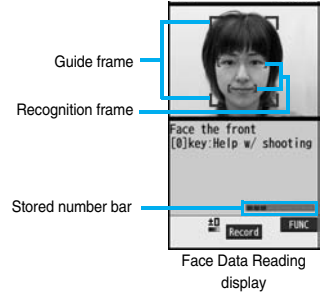

Face to the front, and locate the face within the guide frame. You can prevent the failure in authenticating the face data file, which results from the difference in the position of the face at storing and authenticating the data. When your face is recognized, the recognition frame for the eyes and mouth is displayed and the guide frame becomes green. When the recognition frame is not displayed or it comes off your eyes and mouth, place your face off the frame; then change the facing direction of your face to correctly display the recognition frame.

- The number of face data files is displayed by the bar on the Face Data Reading display.

- 2 Press **Record**.
- The face data file is shot.

- 3 Press **Store**.
 - The face data file you have shot is stored. Repeat step 1 through step 3 to store three or more face data files.
 - When the third face data file is stored, the message appears telling that Face Reader can be more easily used by adding face data file.
 - When you press **CLR**, the confirmation display appears asking whether to delete the face data file.
 - If you try to store the face data file in the same environment, you might not be able to store it. Change the direction of the face or the place for shooting.

Information

- At shooting, the Call/Charging indicator flickers in red and the shutter tone sounds regardless of the Manner Mode setting. The sound volume for shutter tone cannot be changed. Furthermore, the shutter tone does not sound during playback of a music file by MUSIC Player, or playback of a program by Music&Video Channel, or in pause state.

Function Menu of the Face Data Reading Display

Function menu	Operation/Explanation
Brightness	You can adjust to -3 (dark) through +3 (bright).
At Face reader start-up ▶ Select a brightness level. ±0	<ul style="list-style-type: none"> You can adjust brightness also by pressing (3) from the Face Data Reading display.
Help	You can check the cautions for shooting. <ul style="list-style-type: none"> You can bring up Help also by pressing (O) from the Face Data Reading display.

Delete Stored Images

You can reset all the face data files stored in Face Reader.

- (MENU)** ▶ Settings ▶ Lock/Security
 - ▶ Lock setting ▶ Face reader setting
 - ▶ Enter your Terminal Security Code
 - ▶ Delete stored images ▶ YES

Information

- You cannot reset the face data files during Personal Data Lock or IC Card Lock.
- When you reset the face data files, "PIM/IC security mode" is set to "Security code".

Recognition-failed Image

The images not judged as yourself by Face Reader recognition operation are saved. You can use these images to specify who tried to illegally access your data.

The image is overwritten every time recognition-failed image is made.

- (MENU)** ▶ Settings ▶ Lock/Security
 - ▶ Lock setting ▶ Face reader setting
 - ▶ Enter your Terminal Security Code
 - ▶ Recog. failed image ▶ Select an image.

- To delete the recognition-failed images, press **(F) (Fn/IC)**, select "Delete this", and then select "YES".

Face Reader Security

You can set Face Reader to additionally recognize blinking of the eyes.

- (MENU)** ▶ Settings ▶ Lock/Security
 - ▶ Lock setting ▶ Face reader setting
 - ▶ Enter your Terminal Security Code
 - ▶ Face reader security ▶ Normal or High

- Normal** . . . Does not recognize blinking of the eyes.
- High** Recognizes blinking of the eyes.

Change Security Code

You can set a password to be entered instead of the Face Reader authentication for when "PIM/IC security mode" is set to "Face reader" or "Double security".


- (MENU)** ▶ Settings ▶ Lock/Security
 - ▶ Lock setting ▶ Face reader setting
 - ▶ Enter your Terminal Security Code
 - ▶ Change security code ▶ Enter the current Face Reader Security Code.
 - If you enter the code for the first time, enter "0000".
- Enter a new Face Reader Security Code (four to eight digits) ▶ YES

Use Face Reader to Release Lock

When "PIM/IC security mode" is set to "Face reader", use Face Reader to release the lock instead of using your Terminal Security Code.

When it is set to "Double security", use Face Reader for authentication and then enter your Terminal Security Code to release the lock.

- Display for releasing Personal Data Lock/IC Card Lock ▶ Match the face to the guide frame and press **(O) (Start)**.

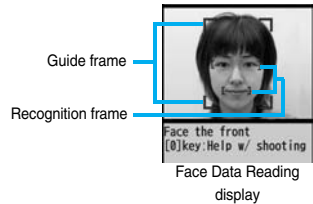

Face to the front, and locate the face within the guide frame. The recognition frame for the eyes and mouth is displayed, and the guide frame becomes green. When the recognition frame is not displayed or it comes off, place your face off the frame; then change the facing direction of your face to correctly display the recognition frame.

- Perform the operation for authentication with the same facial expression as when you stored the face data file.
- Press **(M) (ScrttyCd)** and enter your Face Reader Security Code; then you can operate to authenticate instead of using Face Reader.

For the Face Reader Security Code, see page 124.

■ If you failed to be authenticated

When additional storing of the face data file is possible, select "OK" to bring up the confirmation display asking whether to store additional face data file. Select "YES", enter your Terminal Security Code; then you can store additional face data file. When you cannot store any more face data files, select "OK" to show the Face Data Reading display. If the shot face is judged as another person, a shutter tone sounds and the recognition-failed image is saved. Select "OK" to show the Face Data Reading display. Try authentication using Face Reader again.

- When 10 face data files are stored and a new data file is added, the oldest data file is overwritten.

■ When "Face reader security" is set to "High"

After you are successfully authenticated by Face Reader, your eye blinking is checked. Repeat blinking your eyes slowly. When the detection of eye blinking fails, the authentication also fails.

- Even in the same environment as that for the authentication by Face Reader, the detection of eye blinking may fail. Change the place or the direction of your face, and then operate.

<Keypad Dial Lock>

Locking Keypad Dial

You can lock dialing from the numeric keys. When using the FOMA phone for business purposes, private use of the FOMA phone can be prevented.

■ Unavailable operations

- Dialing from the numeric keys
- Initial setting
- Phonebook (storing, editing, deleting, copying from the microSD memory card, sending/receiving using Infrared rays, sending/receiving using iC communication, and sending/receiving using Bluetooth communication)
- Phone To/AV Phone To function
- Mail To function

■ Available operations

- Dialing from the Phonebook or Voice Dial
- Dialing from Redial, Dialed Calls, Received Calls, Sent Address, or Received Address (Only phone numbers stored in the Phonebook)

1  **Settings ▶ Lock/Security****▶ Keypad dial lock****▶ Enter your Terminal Security Code.**

"" is displayed and Keypad Dial Lock is set.

- To release Keypad Dial Lock, perform the same operation.

Information




- You can make emergency calls at 110/119/118 using numeric keys even during Keypad Dial Lock.

Information


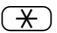
- If you set Keypad Dial Lock, you can send mail only when the address is called up from the Phonebook and when the address stored in the Phonebook is called up from Sent Address or Received Address.


<Side Keys Guard>

Preventing Side Key Operation Errors

You can disable the side keys , , and  for when the FOMA phone is closed.



You can prevent operation errors in a bag.

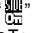1  **▶  (for at least one second)**

"" appears and "Side keys guard" is set to "ON".

- To set to "OFF", perform the same operation.

Information

- Even when "Side keys guard" is set to "ON", you can answer an incoming PushTalk call by pressing . You can get the talker's right by pressing  during the PushTalk communication.
- When an external device such as the Flat-plug Earphone/Microphone with Switch (option) is connected, the function of the side keys is valid regardless of this setting.

<Record Display Set>

Setting not to Display Redial/Received Calls**1**  **▶ Settings ▶ Incoming call****▶ Record display set****▶ Enter your Terminal Security Code****▶ Select an item.**

Received calls Sets whether to display Received Calls and Received Address.

Redial/Dialed calls . . . Sets whether to display Redial, Dialed Calls and Sent Address.

 
2 ON or OFF

- When you set "Received calls" to "OFF", you cannot play back record messages of voice calls, either.

<Secret Mode> <Secret Data Only> Protecting Phonebook Entries and Schedule Events from Prying Eyes

In ordinary mode, you cannot access/refer to Phonebook entries or schedule events stored as secret data. In Secret Mode, you can select whether to store the stored/edited Phonebook entries/schedule events as secret data or as ordinary data. The Phonebook entries/schedule events you have stored/edited in Secret Data Only are stored as secret data. You can access/refer to all the data files in Secret Mode but can access/refer to only the secret data files in Secret Data Only.

Activate Secret Mode Activate Secret Data Only



1 [MENU] ▶ Settings ▶ Lock/Security

- ▶ Secret mode or Secret data only
- ▶ Enter your Terminal Security Code.

When "Secret mode" is selected, "☎" appears and Secret Mode is activated.

When "Secret data only" is selected, "☎" blinks, the number of stored secret data items is displayed, and then Secret Data Only is activated.

- If you call up a Phonebook entry or schedule event in Secret Mode, "☎" stays lit for ordinary data and "☎" blinks for secret data.
- To deactivate Secret Mode or Secret Data Only, perform the same operation or press [END] from the Stand-by display.

■ To change secret data to an ordinary Phonebook entry or schedule event

In Secret Mode or Secret Data Only, select "Release secret" from the Function menu of the Phonebook entry or schedule event to be released.

Information

- You can store FOMA phone's Phonebook entries only as secret data.
- When you make a call to the party stored as secret data, his/her name is not displayed but the phone number is displayed on the Dialing/Talking display.
- If you call up a secret entry to make a call or send mail, the record is not stored in "Redial", "Dialed calls" or "Sent address".
- If you simultaneously activate "Lock all" and "Secret mode" or "Secret data only", deactivating "Lock all" deactivates "Secret mode" or "Secret data only".

<Secret Mail Display> Applying Secret for Mail in Outbox/Inbox

You can set whether to display the mail (secret mail) message from the sender or to the destination address that matches secret data in the Phonebook.

- 1 [MAIL] ▶ Mail settings ▶ Secret mail display
 - ▶ Enter your Terminal Security Code
 - ▶ ON or OFF

Information

- Even when "Secret mail display" is set to "OFF", you can check secret mail in Secret Mode or in Secret Data Only.
- When "Secret mail display" is set to "OFF", and any secret address is included in addresses of simultaneous mail, that mail message is not displayed.
- When "Secret mail display" is set to "OFF", and any secret member is included in chat members, chat mail messages of all chat members are not displayed.
- When "Secret mail display" is set to "OFF", Area Mail messages are not displayed in Secret Data Only.

<Mail Security> Setting not to Display Mail in Outbox/Inbox without Permission

You can set the security function for the Inbox, Outbox and Draft of the Mail menu.

You need to enter your Terminal Security Code to display the mail messages in security-activated boxes.

- 1 [MAIL] ▶ Mail settings ▶ Mail security
 - ▶ Enter your Terminal Security Code
 - ▶ Put a check mark for boxes to be set
 - ▶ [MAIL] (Finish)

- When security is set, "☎" is added to the icon of the set box in the Mail menu.

Information

- If you set security for the Outbox and Inbox, mail addresses are not stored in Sent Address and Received Address.

Setting Restrictions on Phonebook Entries

Restrict Dialing

You can disable making voice calls, videophone calls, and PushTalk calls to phone numbers other than specified ones. When you use the FOMA phone for business use, this function is useful for preventing the private use. Bring up the specified Phonebook entry and press or (Dial) to make a voice call. (To make a videophone call, press , and to make a PushTalk call, press) You can specify up to 20 phone numbers.

Call Rejection

You can reject voice calls, videophone calls, and PushTalk calls from specified phone numbers. You can set only the calls you do not want to receive to be rejected. The caller hears a busy tone. You can specify up to 20 phone numbers. This function is valid only when the other party notifies his/her phone number. It is advisable to activate "Caller ID request" and "Call setting w/o ID" simultaneously.

Call Acceptance

You can receive voice calls, videophone calls, and PushTalk calls only from specified phone numbers. You can set only the calls you want to accept to be connected. You can specify up to 20 phone numbers. This function is valid only when the other party notifies his/her phone number. It is advisable to activate "Caller ID request" simultaneously.

Restrict Dialing/Call Rejection/Call Acceptance

- Detailed Phonebook display (FUNC)
 - Restrictions Enter your Terminal Security Code Select an item.

Restrict dialing You can dial the specified phone numbers only.

Call rejection You can reject calls from the specified phone numbers.

Call acceptance . . . You can accept calls from the specified phone numbers only.

Call forwarding See page 368.

Voice mail See page 365.

The set item is indicated by "★".

- When a Phonebook entry contains multiple phone numbers, press on the detailed display to highlight the phone number you will set Restrictions for.

- To set Restrict Dialing for multiple phone numbers, first set Restrict Dialing and press (CLR) to return to the detailed Phonebook display; to highlight the phone number to be set for Restrict Dialing and continue the operation.

If you press to return to the Stand-by display, additional settings cannot be done. To do additional settings, release Restrict Dialing for the set phone number and activate Restrict Dialing again, including the released phone number.

- To release Restrictions, perform the same operation.

Information


- You cannot set this function for Phonebook entries stored as secret data, and in the UIM Phonebook.
- If you activate "Personal data lock" while "Call rejection" or "Call acceptance" is set, you can accept all incoming calls.
- You cannot operate the following while "Restrict dialing" is set:
 - Calling up/Referring to phone numbers other than specified
 - Keypad dial (except for the calls to the specified phone numbers)
 - Dialing from Received Calls (except for the calls from the specified phone numbers)
 - Storing/Editing/Deleting Phonebook entries, copying Phonebook entries from the microSD memory card, and copying Phonebook entries to the UIM
- You can make emergency calls at 110/119/118 even if you set "Restrict dialing".

Information

- When a call comes in from the phone number set with “Call rejection”, or from other than the phone number set with “Call acceptance”, the call is stored in “Received calls” as a missed call record and the icon of “Missed call” appears on the Stand-by display. Also, the caller hears a busy tone even if you have set Voice Mail Service or Call Forwarding Service to “Activate”. However, if you set the ring time for Voice Mail Service or Call Forwarding Service to 0 seconds, when the FOMA phone is out of the service area, or when the power is turned off, the busy tone will not be played back, activating Voice Mail Service or Call Forwarding Service.
- You can receive SMS messages or i-mode mail messages regardless of the setting of “Call rejection” or “Call acceptance”.

Check/Release Restrictions on Phonebook Entries**1**  **Phonebook ▶ Restrictions**

- ▶ Enter your Terminal Security Code
- ▶ Select an item.

- The set item is indicated by “★”.
- To release all the Phonebook entries set with Restrictions, press  (FUNCTION), select “Release”, and then select “YES”.

2 **Select a Phonebook entry.**

The phone number set with Restrictions is displayed.

- To release “Restrictions” per phone number, select the phone number you want to release by following the same steps above, and select “YES”.

<Call Setting without ID>**Setting Response to Incoming Calls without Caller ID**

You can set whether to receive (accept) or not to receive (reject) a voice call, videophone call, and PushTalk call depending on the reason for no caller ID. There are three reasons; “Unavailable”, “PublicPhone”, and “User unset”.

1  **Settings ▶ Lock/Security**

- ▶ Call setting w/o ID
- ▶ Enter your Terminal Security Code
- ▶ Select an item.

Unavailable

... Calls from the other party who cannot notify his/her phone number such as calls from overseas or from landline phones via call forwarding services.

(However, the caller ID might be notified depending on the telephone companies the calls go through.)

PublicPhone

... Calls from public phones, etc.

User unset

... When the caller has set the caller ID not to be notified.

2 **Accept or Reject**

- If you select “Accept”, go to step 2 on page 98 to select a ring tone.
If you select “Same as ring tone”, the ring tone will be the one selected in “Phone” of “Select ring tone”.

Information

- If you select “Reject”, the ring tone does not sound even if a call comes in, the call is stored in “Received calls” as a missed call record and the “Missed call” icon appears on the Stand-by display. Also, the caller hears a busy tone even if you have set Voice Mail Service or Call Forwarding Service to “Activate”. However, if you set the ring time for Voice Mail Service or Call Forwarding Service to 0 seconds, when the FOMA phone is out of the service area, or when the power is turned off, the busy tone will not be played back, activating Voice Mail Service or Call Forwarding Service.
- You can receive SMS messages or i-mode mail messages regardless of this setting.

<Ring Time>**Delaying Start of Ringing Operation****1**  **Settings ▶ Incoming call ▶ Ring time**

- ▶ Do the following operations.

Item	Operation/Explanation
Ring start time	You can set the FOMA phone not to start ringing operation immediately for when a voice call, videophone call, or PushTalk call comes in from the party whose phone number is not stored in the Phonebook. This function is effective as a countermeasure for blocking nuisance calls such as one ring phone scam (one-giri). ▶ ON or OFF ▶ Enter a start time (seconds). • Enter from “01” through “99” in two digits.
Missed calls display	You can set whether to display the call disconnected within the time specified for “Ring start time” in Received Calls. ▶ Display or Not display

Information

- When a call comes in from the party whose phone number is stored in the Phonebook, the FOMA phone starts ringing as soon as the call comes in even if “186” / “184” is added to the phone number. However, during Personal Data Lock, or for the call from the party whose phone number is stored as secret data, ringing starts according to the setting of this function.
- If the ring start time is longer than the ring time for Record Message Setting, the ringing operations do not start, activating Record Message instead. To activate Record Message after starting the ringing operations, set the longer ring time for Record Message Setting than the ring start time. The same applies to the ring time for Voice Mail Service, Call Forwarding Service, and Auto Answer Setting.

Rejecting Calls from Phone Numbers which are not Stored in Phonebooks

You can reject voice calls, videophone calls, and PushTalk calls from the party whose phone number is not stored in the Phonebook. This function is valid only when the other party notifies his/her phone number. It is advisable to activate "Caller ID request" and "Call setting w/o ID" simultaneously.



Settings > Lock/Security

- ▶ Reject unknown
- ▶ Enter your Terminal Security Code
- ▶ Accept or Reject

Information


- If a call comes in from the party whose phone number is stored as secret data, the call is not rejected, regardless of this setting.
- If you simultaneously activate "Reject unknown" and "Call acceptance" of "Restrictions", the latter has priority.
- When a call comes in from anyone whose phone number is not stored in the Phonebook while you set this function to "Reject", the call is stored in "Received calls" as a missed call record, and the notification icon of "Missed call" appears on the Stand-by display. Also, the caller hears a busy tone even if you have set Voice Mail Service or Call Forwarding Service to "Activate". However, if you set the ring time for Voice Mail Service or Call Forwarding Service to 0 seconds, when the FOMA phone is out of the service area, or when the power is turned off, the busy tone will not be played back, activating Voice Mail Service or Call Forwarding Service.
- Even when this function is set to "Reject", your FOMA phone follows the settings specified by "Call setting w/o ID" if each setting of "Call setting w/o ID" is set to "Accept".
- You can receive SMS messages or i-mode mail regardless of this setting.
- You cannot set "Reject unknown" to "Reject" while "Ring start time" or "Ring time" is set to "ON".

What is Data Security Service?

Data Security Service enables you to save the Phonebook entries, images, and mail messages stored in your FOMA phone (saved data files) to the DoCoMo Data Storage Center.

You can restore the saved data files even when the FOMA phone is lost or exposed to water, to your new FOMA phone from the Data Storage Center by operating i-mode. Also, you can periodically and automatically update Phonebook entries on the FOMA phone to the latest information. Further, you can easily edit the saved data files stored at the Data Storage Center from My DoCoMo page via a personal computer, and can store the edited saved data files in the FOMA phone.

- For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode]".

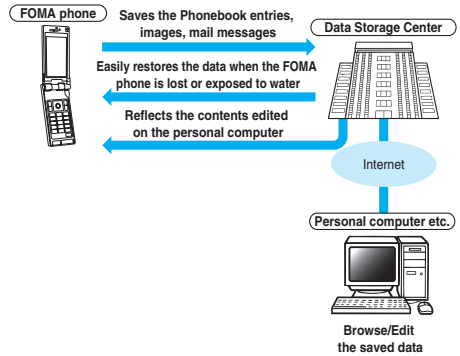

- Data Security Service is a pay service that is available on a subscription basis. (You need to subscribe to i-mode to apply for Data Security Service.)

Other “Security Settings”

Other than introduced in this chapter, the following functions/services for the Security Settings are available:

If you want	Functions/ Service name	Reference page
To prevent crank calls or vicious sales calls from incoming	Nuisance Call Blocking Service	P.368
To prevent the incoming call that does not notify a caller ID	Caller ID Request	P.369
To ensure safe and reliable data communication by using electronic certificate services ※Limited to FirstPass sites	FirstPass	P.165
To protect the IC card function from being used illegally	IC Card Lock	P.230
To update software programs in the FOMA phone when necessary	Software Update	P.434
To protect the FOMA phone from data liable to cause trouble	Scanning Function	P.440
To receive necessary mail only from among the large volume of incoming mail	Receive Option	P.183

If you want	Functions/ Service name	Reference page
To store/check safety information using i-mode when a disaster occurs	i-mode Disaster Message Board Service	※
To change/confirm the mail address	Change/Confirm Mail Address	
To reject mail with URL	Spam Mail Prevention (Reject Mail with URL)	
To accept or reject mail from the specified domain	Spam Mail Prevention (Reject/Receive Mail Settings)	
To accept or reject mail between i-mode mobile phones only		
To accept or reject mail from the specified address		
To reject SMS messages	Spam Mail Prevention (SMS Rejection Settings)	
To reject the 200th and succeeding i-mode mail messages sent from a single i-mode phone on the same day	Reject Mass i-mode Mail Senders	
To reject advertising mail that is sent unilaterally	Reject Unsolicited Ad Mail	
To restrict the file size of incoming mail	Limit Mail Size	
To confirm the settings for the mail function	Confirm Settings	
To stop the mail function temporarily	Suspend Mail	
To check whereabouts of lost mobile phone	Keitai-Osagashi Service	

※Refer to “Mobile Phone User’s Guide [i-mode]”

Information

- The priority order of functions simultaneously set to prevent nuisance calls is as follows: “Nuisance Call Blocking Service” → “Call rejection” → “Reject unknown/Call setting w/o ID” → “Ring time”.

Camera



Before Using Cameras	132
Shooting Still Images	139
Shooting Moving Images	141
Changing Settings for Shooting Images	142
Setting Image Size and Image Quality	143
Using Bar Code Reader	146
Using Text Reader	149

■ Copyrights and Portrait Rights

You have no right to copy, modify, or distribute the contents of which a third party holds the copyright such as text, image, music, or software programs downloaded from web pages on the Internet, or recorded using this product, without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law.

Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use.

Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this may violate portrait rights.



- You may be imposed punishment according to the law and rule (such as the nuisance prevention ordinance) if you use the FOMA phone to give a remarkable nuisance and misdeed to the public.



Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

Before Using Cameras

Notes for when Shooting Images

- Check the lens for any stain before shooting. If the lens is stained, clean the lens with a soft cloth. If the lens is stained with fingerprints or something oily, you will not be able to focus on a subject, or the stains are reflected on still or moving images you shoot.
- Make sure that you do not let fingers, hairs, or the strap overlap the lens when shooting.
- Make sure that you hold the FOMA phone securely with your hands so that it does not move when shooting. Otherwise, the image may be blurred, especially in a dark place.
- Do not leave the FOMA phone with the lens pointing direct to the sunlight. Pixels may be discolored or burns may result.
- If you shoot under a fluorescent lamp, mercury lamp, or sodium lamp flickering at high speeds, “flicker symptom”, horizontal stripes flow from top to bottom or left to right of the display, may result. The color tone for the image may vary depending on a shooting timing.
- If you shoot a subject containing an area of an extremely high brightness such as the reflection of sun light, the bright area might be black-spotted but this is not a malfunction.
- Images shot by the cameras might differ from actual subjects in color tone and brightness.
- When the battery level is low, you may not be able to save still or moving shot images.
- A slight time lag is found between when you press  (Record) and when you actually shoot. Therefore, if you shoot a fast moving subject, the subject might be shot with its position slightly away from the one you see it when you press  (Record).
- Do not remove the microSD memory card while saving files to it. The FOMA phone or microSD memory card could malfunction.
- If you turn off the power while saving a file, an incomplete file may be saved.
- If the battery pack is removed off while saving a file to the FOMA phone or microSD memory card, that data becomes contingent.
- You need to obtain a microSD memory card separately to use the functions related to the microSD memory card. The microSD memory card is available at mass retailers for home electric appliances, etc.
(See page 293)

Use Cameras

You can use the cameras to shoot still or moving images.












 

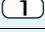
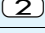
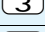
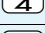
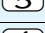

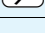
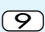
You can switch between the front (inside camera) and the back (outside camera).


The outside camera comes with the automatic focusing function to automatically focus on subjects. (See page 143)

The Image Stabilizer function enables you to shoot images with less blur. (See page 144)

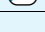You can easily operate the main functions for shooting not only from the Function menu but also by operating the keys.

■ Keys used for shooting

Icon menu operation	
Function menu access	
Photo light (when the outside camera is used) ●Each time of pressing switches between "ON" and "OFF".	
Shutter/Save	
Tele	
Wide	
Switch settings for Focus (when the outside camera is used) ●Each time of pressing switches in order of "Auto"→ "Close-up"→"Landscape".	
Autofocus (when the outside camera is used)	
Change camera-mode ●Each time of pressing switches in order of "Photo mode" →"Movie mode"→"Continuous mode".	
Switch displays for Icons	
Brightness	
White balance	
Photo mode	
Image quality	
Image size	
Image stabilizer	
Auto timer	
Switch settings for Store in ●Each time of pressing switches between "Phone" and "microSD".	
Switch cameras ●Each time of pressing switches between inside camera and outside camera.	
End camera (in ordinary time) Release focus lock (when focus is locked)	
End camera	

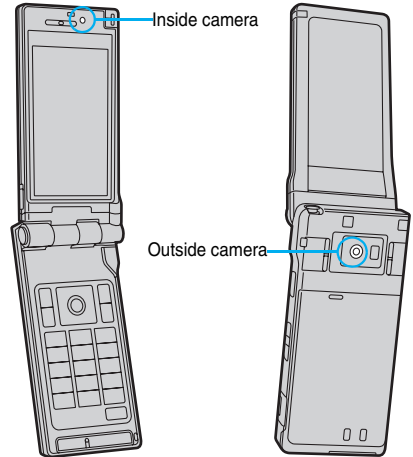


Information






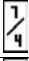
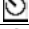


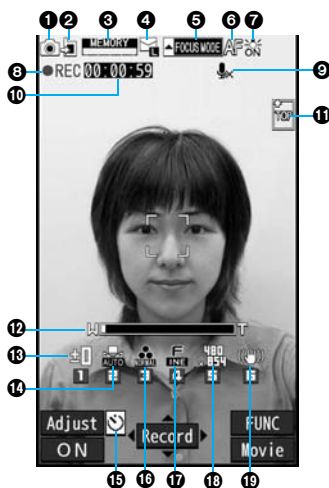
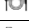













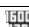
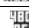
- While the camera is activated, the photo light flickers. You cannot turn off flickering.
- You cannot change or silence the volume of the shutter sound. You cannot set a downloaded melody for the shutter sound, either.
- If no key operation is done on the Finder display, the camera is automatically deactivated after about three minutes.
- When you shoot in a dark place, ensure to set "Photo mode" of "Camera settings" to "Night mode".
- You can operate the following by the Icon menu: "Brightness", "White balance", "Photo mode", "Image quality", "Image size", "Img. stabilizer".

Camera Setting and Finder Display

On the Finder display, the settings are indicated by bars and icons.

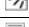

Icon/bar name	Icon	Description	Page
❶ Camera mode		Photo mode	P.139
		Movie mode	P.141
		Continuous mode (Auto, Manual, Auto bracket)	P.139
❷ Store in		Phone: Stores in the FOMA phone.	P.144
		microSD: Stores on the microSD memory card.	
❸ Number of recordable image Memory capacity bar	—	Number of remaining recordable still images Up to 999 images are displayed.	—
		Memory usage state (estimate) in Movie mode Displayed in red when the memory space reaches maximum.	—
❹ File size setting		Mail restrict'n (S): Up to 500 Kbytes can be saved.	P.143
		Mail restrict'n (L): Up to 2 Mbytes can be saved.	
		Long time: Long time recording is possible.	
❺ Focus guide		Focus guide	—
❻ Focus		Auto	P.144
		Close-up	
		Landscape	
❼ Photo light		Photo light on	P.143
❽ Shooting status		During moving image recording	P.141
❾ Movie type set		Records only the video.	P.145
❿ Recordable time	—	Recordable time (estimate) for moving images	—
⓫ Top icon		Shows the vertical direction of the still or moving image.	—
⓬ Zoom bar		Zooming status	P.142
⓭ Brightness		Brightness of shot image	P.143

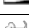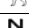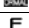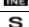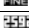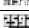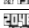Icon/bar name	Icon	Description	Page				
⑩ White balance		Auto: For adjusting white balance automatically	P.143				
		Fine: For shooting outdoors in fine weather					
		Cloudy: For shooting in cloudy weather or in the shade					
		Light bulb: For shooting under incandescent light					
		Fluorescent light: For shooting under fluorescent light					
⑪ Number of frames for continuous shooting		Number of frames at "Manual" shooting in "Continuous mode"	P.145				
	Auto timer		Auto timer ON	P.146			
⑫ Photo mode		Normal	P.144				
		Portrait					
		Sports					
		Food					
		Scenery					
		Night mode					
		Backlight					
		Character					
		Snow					
		Sunset					
		Pet					
⑬ Image quality		Normal: Standard quality	P.143				
		Fine: Fairly high quality					
		Super fine: High quality					
⑭ Image size (Photo mode/ Continuous mode)		Outside camera photo	5M (2592 x 1944)	P.143			
			3.7M Wide (2592 x 1456)				
			3M (2048 x 1536)				
			2M Wide (1920 x 1080)				
			2M (1600 x 1200)				
			Stand-by (480 x 854)				
		Inside camera photo	Continuous shot		VGA (640 x 480)		
					CIF (352 x 288)		
					QVGA (240 x 320)		
					QCIF (176 x 144)		
					Sub-QCIF (128 x 96)		
						Movie mode	VGA (640 x 480)
							HVGA Wide (640 x 352)
							QVGA (320 x 240)
QCIF (176 x 144)							
Sub-QCIF (128 x 96)							
	Sub-QCIF (128 x 96)						
⑮ Image stabilizer		Image stabilizer (Auto or OFF)	P.144				

Specifications for Still Image Shooting

File format	JPEG
Compression format	Baseline format
Pixels	Photo: 5M (2592 x 1944), 3.7M Wide (2592 x 1456), 3M (2048 x 1536), 2M Wide (1920 x 1080), 2M (1600 x 1200), Stand-by (480 x 854), VGA (640 x 480), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), Sub-QCIF (128 x 96) Continuous shooting: VGA (640 x 480), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), Sub-QCIF (128 x 96)
Extension	jpg
Title	Automatically set according to the date and time the image was saved and the number of shot frames (when the 1st frame was shot at 10:00 on November 15, 2007) "2007/11/15 10:00"
File name	Automatically set according to the date and time the image was saved and the number of shot frames (when the 1st frame was shot at 10:00 on November 15, 2007) "2007111510000000" (Store in: Phone) "P1000001" (Store in: microSD)
Maximum file size	1.8 Mbytes
Mail attachment/Output	Can be attached to mail or output from the FOMA phone by using the microSD memory card.
Memory capacity	Approx. 101.6 Mbytes (Phone)

Estimate of the number of storable still images

The number of files that can be saved varies depending on shooting environments.

※The number of files that can be saved to the FOMA phone and microSD memory card has limit.

■ The number of files that can be saved to P905i

Image quality Image size	Super fine (Approx.)	Fine (Approx.)	Normal (Approx.)
5M (2592 x 1944)	54	74	97
3.7M Wide (2592 x 1456)	81	97	121
3M (2048 x 1536)	97	120	137
2M Wide (1920 x 1080)	139	191	237
2M (1600 x 1200)	139	191	237
Stand-by (480 x 854)	649	880	1,080
VGA (640 x 480)	950	1,131	1,320
CIF (352 x 288)	1,697	2,160	2,500
QVGA (240 x 320)	1,980	2,500	2,500
QCIF (176 x 144)	2,500	2,500	2,500
Sub-QCIF (128 x 96)	2,500	2,500	2,500

■ The number of files that can be saved to the microSD memory card (64 Mbytes)

Image quality Image size	Super fine (Approx.)	Fine (Approx.)	Normal (Approx.)
5M (2592 x 1944)	34	47	62
3.7M Wide (2592 x 1456)	51	62	77
3M (2048 x 1536)	62	77	87
2M Wide (1920 x 1080)	89	122	152
2M (1600 x 1200)	89	122	152
Stand-by (480 x 854)	411	563	691
VGA (640 x 480)	608	724	845
CIF (352 x 288)	1,087	1,383	1,902
QVGA (240 x 320)	1,268	1,691	2,174
QCIF (176 x 144)	2,536	3,044	3,805
Sub-QCIF (128 x 96)	3,805	5,073	5,073

●The number of files that can be saved is an estimate.

Specifications for Moving Image Shooting

File format	MP4, ASF
Coding system	Video: MPEG4 Voice: AMR, G.726
Pixels	VGA (640 x 480), HVGA Wide (640 x 352), QVGA (320 x 240), QCIF (176 x 144), Sub-QCIF (128 x 96)
Extension	3gp, mp4, asf
Title	Automatically set according to the date and time the image was recorded (when shot at 10:00 on November 15, 2007) "2007/11/15 10:00"
File name	Automatically set according to the date and time the image was recorded (when shot at 10:00 on November 15, 2007) "200711151000" (Store in: Phone) "MOL001" (Store in: microSD)
Maximum file size	2 Mbytes (Store in: Phone) Can be limited to the size which can be attached to i-motion mail when shooting. (See page 143)
Mail attachment/Output	Can be attached to mail or output from the FOMA phone by using the microSD memory card.
Memory capacity	Approx. 101.6 Mbytes (Phone)

Estimate of recordable time

The recordable time varies depending on shooting environments. Take reference to the recordable time and memory capacity which appears on the Finder display.

Recordable time to P905i

Image size	File size setting	Movie type set	Recordable time per recording (Approx.)			Total recordable time (Approx.)		
			Image quality			Image quality		
			Super fine	Fine	Normal	Super fine	Fine	Normal
VGA (640 x 480)	Mail restriction (S)	Normal	2 sec	4 sec	8 sec	349 sec	11 min	22 min
		Video	2 sec	4 sec	8 sec	351 sec	11 min	22 min
		Voice	305 sec			957 min		
	Mail restriction (L)	Normal	8 sec	16 sec	30 sec	349 sec	11 min	22 min
		Video	8 sec	16 sec	30 sec	351 sec	11 min	22 min
		Voice	20 min			957 min		
HVGA Wide (640 x 352)	Mail restriction (S)	Normal	3 sec	5 sec	10 sec	464 sec	15 min	29 min
		Video	3 sec	5 sec	10 sec	468 sec	15 min	30 min
		Voice	305 sec			957 min		
	Mail restriction (L)	Normal	11 sec	20 sec	40 sec	464 sec	15 min	29 min
		Video	11 sec	20 sec	40 sec	468 sec	15 min	30 min
		Voice	20 min			957 min		
QVGA (320 x 240)	Mail restriction (S)	Normal	4 sec	5 sec	15 sec	11 min	15 min	44 min
		Video	4 sec	5 sec	15 sec	11 min	15 min	45 min
		Voice	305 sec			957 min		
	Mail restriction (L)	Normal	16 sec	20 sec	59 sec	11 min	15 min	44 min
		Video	16 sec	20 sec	60 sec	11 min	15 min	45 min
		Voice	20 min			957 min		
QCIF (176 x 144)	Mail restriction (S)	Normal	10 sec	35 sec	69 sec	29 min	108 min	213 min
		Video	10 sec	39 sec	78 sec	30 min	121 min	243 min
		Voice	305 sec			957 min		
	Mail restriction (L)	Normal	39 sec	141 sec	279 sec	29 min	108 min	213 min
		Video	40 sec	159 sec	318 sec	30 min	121 min	243 min
		Voice	20 min			957 min		
Sub-QCIF (128 x 96)	Mail restriction (S)	Normal	19 sec	62 sec	122 sec	57 min	194 min	380 min
		Video	20 sec	78 sec	156 sec	60 min	243 min	487 min
		Voice	305 sec			957 min		
	Mail restriction (L)	Normal	75 sec	254 sec	497 sec	57 min	194 min	380 min
		Video	80 sec	318 sec	10 min	60 min	243 min	487 min
		Voice	20 min			957 min		

●The recordable time is an estimate.

■ Recordable time to microSD memory card (64 Mbytes)

Image size	File size setting	Movie type set	Recordable time per recording (Approx.)			Total recordable time (Approx.)		
			Image quality			Image quality		
			Super fine	Fine	Normal	Super fine	Fine	Normal
VGA (640 x 480)	Long time	Normal	227 sec	447 sec	14 min	227 sec	447 sec	14 min
		Video	231 sec	462 sec	15 min	231 sec	462 sec	15 min
		Voice	180 min			240 min		
HVGA Wide (640 x 352)		Normal	301 sec	577 sec	18 min	301 sec	577 sec	18 min
		Video	308 sec	10 min	20 min	308 sec	10 min	20 min
		Voice	180 min			240 min		
QVGA (320 x 240)		Normal	447 sec	577 sec	26 min	447 sec	577 sec	26 min
		Video	462 sec	10 min	30 min	462 sec	10 min	30 min
		Voice	180 min			240 min		
QCIF (176 x 144)	Normal	18 min	60 min	96 min	18 min	60 min	96 min	
	Video	20 min	80 min	160 min	20 min	80 min	160 min	
	Voice	180 min			240 min			
Sub-QCIF (128 x 96)	Normal	34 min	96 min	137 min	34 min	96 min	137 min	
	Video	40 min	160 min	180 min	40 min	160 min	320 min	
	Voice	180 min			240 min			

● The recordable time is an estimate.



Shooting Still Images

You can shoot still images by using the camera. The shot still images are saved to a folder within the “My picture” folder in the FOMA phone or to the microSD memory card.

- See “Storage setting (Store in)” and “Select storage” for selecting a storage location.
- See page 274 for how to display saved still images.

Shoot a Still Image

1 Press .

- The Camera menu is displayed by  LifeKit  Camera. You can start also by selecting “Photo mode” from the Camera menu.
- You can paste the Camera menu to the desktop. (See page 114)
- Change the direction of the FOMA phone according to the direction of the Top icon.



Finder display



2 Press (Record).

A still image is shot. The Post View display for confirmation appears.

- When you shoot with the outside camera with “Focus” set to “Auto”, shooting starts after the subject is focused on.
- The image appears horizontally reversed (mirrored) when you shoot with the inside camera; however the image is correctly displayed when played back.
- When you set “Auto save set” to “ON”, the Post View display does not appear; the still image is automatically saved. Go to step 4.

3 (Save) Select a destination folder.

The still image you shot is saved.

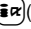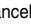- To save the still image as an mirrored image (horizontally reversed), press  (FUNC) and select “Mirror save”.
- When you set “Store in” to “microSD”, the still image is saved to the folder selected by “Select storage”.
- Press  to cancel the shot still image and return to the Finder display.



Post View display

4 Press to end the camera.

Continuous Shooting

You can continuously shoot still images. You can set the number of frames, and shooting interval for auto-shooting. (See page 144)

1 (Movie) (Cont.)

- The camera starts in the mode you used last time, “Auto”, “Manual”, or “Auto bracket”. To change Continuous Mode, see “Continuous mode” of “Cont. shooting set.”




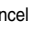

Finder display

2 Press (Record).

Continuous shooting starts.


If you set “Continuous mode” to “Manual”, press

 (Record) the number of times of shooting frames. The Post View display for confirmation appears.

- When you shoot with the outside camera with “Focus” set to “Auto”, shooting starts after the subject is focused on.
- To cancel shooting midway, press . If you shoot in the “Auto” or “Auto bracket” mode of “Continuous mode”, you can cancel also by pressing  (Quit). You can cancel shooting also by closing the FOMA phone.
- The image appears horizontally reversed (mirrored) when you shoot with the inside camera; however the image is correctly displayed when played back.
- When you set “Auto save set” to “ON”, the Post View display does not appear; the still images are automatically saved. Go to step 5.

To select a still image and save it

Select a still image and press (Detail)

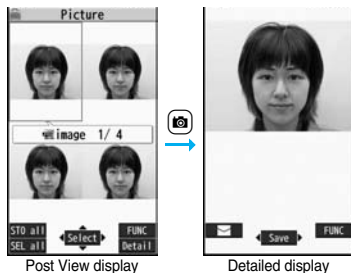

- Press from the detailed display to show the previous or next still image.
- To save the still image as a mirrored image (horizontally reversed), press (FUNC) and select "Mirror save".

To select multiple still images and save them

Put a check mark for still images to be saved

**To save all still images**

- Press from the Post View display to cancel the shot still image and return to the Finder display.

Select a destination folder.

- When you set "Store in" to "microSD", the still image is saved to the folder selected by "Select storage".

Press to end the camera.**Information**

- The image quality may be coarse depending on "Image size" or "Display size".
- When you shoot, the tone selected for "Shutter sound" sounds regardless of the settings such as Manner Mode. The sound volume for shutter tone cannot be changed.
- Even when a mail message comes in while shooting, the shooting operation continues. Though unread message icon is displayed, the Mail Receiving display is not displayed.
- If you end the camera function by using Multitask while shooting, unsaved still images are deleted.
- When shooting, hold the FOMA phone securely to avoid blurred images.
- While you are shooting in Photo Mode or "Manual" of Continuous Mode, the photo light flickers. In "Auto"/"Auto bracket" of Continuous Mode, it lights.

Function Menu of the Post View Display in Photo Mode/Detailed Display in Continuous Mode

Function menu	Operation/Explanation
Save	See page 139 and page 140.
Mirror save	See page 139 and page 140.
Attach to mail	<p>You can save the still image you shot and attach it to an i-mode mail message.</p> <p>▶ Select a folder.</p> <p>Go to step 2 on page 172.</p> <ul style="list-style-type: none"> • You can compose an i-mode mail message also by pressing ().
Attach location	<p>▶ Select an item.</p> <p>By position loc.</p> <p>... Measures the current location and store the location information. After checking the location information, press (Set).</p> <p>From loc. history</p> <p>... Select a piece of location information from Location History and store it.</p> <ul style="list-style-type: none"> • When you press (Use) during measuring the current location, the confirmation display appears asking whether to display the result obtained so far from the location information. • To cancel measuring the current location, press (CLR) or (Cancel). • Press (Retry) from the confirmation display for the location information to restart measuring in "Quality mode".
Set display	<p>You can paste the still image to the Stand-by display and others for displaying. This is available only in Photo Mode.</p> <p>▶ Select a folder.</p> <p>Go to "Set display" on page 274.</p> <ul style="list-style-type: none"> • Even when "Store in" is set to "microSD", the still image is saved to the FOMA phone.
Change frame	<p>You can replace the frame added to the shot still image by new one. This is available only in Photo Mode.</p> <p>▶ Select a frame.</p> <ul style="list-style-type: none"> • Press to bring up the previous or next frame. • To reselect a frame, press (Cancel). <p>▶ (Set)</p> <ul style="list-style-type: none"> • You cannot release the frame.
Normal display/ Mirror display	You can switch between a correct image and a mirrored image (horizontally reversed).
Store in	See page 144.
Display size	See page 145.
File restriction	See page 146.
Icon	<p>You can set whether to display icons.</p> <p>▶ ON or OFF</p>

Function menu	Operation/Explanation
Cancel	You do not save the shot still image.

Function Menu of the Post View Display in Continuous Mode

- If you select a still image from the Post View display and press (Select), “” is added. Press (Select) again to release the selection.

Function menu	Operation/Explanation
Save	See page 140.
Store all/animat'n	You can save all the shot still images to store as an original animation. <ul style="list-style-type: none"> ▶ Save <ul style="list-style-type: none"> ● To save as a mirrored image (horizontally reversed), select “Mirror save”. ▶ Select a folder > <New>
Store in	See page 144.
Normal display/ Mirror display	You can switch between a correct image and a mirrored image (horizontally reversed).
File restriction	You can set the file restrictions on the image on the Post View display. <ul style="list-style-type: none"> ▶ File unrestricted or File restricted ● See page 146 for the file restrictions.
Cancel	You do not save the shot still images.

Information

<Store all/animat'n>

- When “Store in” is set to “microSD”, this function is not available.
- If you have shot a single still image only, this function is not available.

<Moving Image Shoot>

Shooting Moving Images

You can shoot moving images by using a camera. The shot moving images are saved to a folder within the “ motion” folder in the FOMA phone or to the microSD memory card.

- For selecting a storage location, see “Store in” and “Select storage”.
- See page 280 for playing back the saved moving images.

1 ▶ (Movie)

- The Camera menu is displayed by ▶ LifeKit ▶ Camera. You can start also by selecting “Movie mode” from the Camera menu.
- You can paste the Camera menu to the desktop. (See page 114)



Finder display

2 Press (Record).

Recording starts.

- When you shoot with the outside camera with “Focus” set to “Auto”, shooting starts after the subject is focused on. While shooting, the subject is automatically focused regardless of the setting of “Focus”.
- When you shoot with the inside camera, the horizontally reversed (mirrored) image is displayed, but it is displayed normally when played back.

3 Press (Stop).

Recording ends. The Post View display for confirmation appears.

- Recording automatically ends when a call comes in, the low battery alarm sounds, or the FOMA phone is closed during recording.
- When you set “Auto save set” to “ON”, or set “File size setting” to “Long time”, the Post View display does not appear; the moving image is automatically saved. When you set “Store in” to “microSD”, the moving image is saved to the folder set by “Select storage”. Go to step 5.

4 ▶ Select a destination folder.

The moving image you shot is saved.

- Press to cancel the shot moving image and return to the Finder display.



Post View display

5 Press to end the camera.

■ If recording ends or the image quality deteriorates while shooting

When you use a microSD memory card that you repeatedly save/delete data files to/from, the writing speed slows down, recording might end midway or the image quality might deteriorate.

Do the following operations to improve such symptoms:

1. Copy all the data files from the microSD memory card onto your personal computer as they are.

- When your personal computer is set so as to hide folders and files, change the settings to display those folders and files, and then operate. For how to change the settings, refer to the operating manual or Help on the personal computer you use.
- Do not change the names of folders and files copied to the personal computer.

2. Use the personal computer to delete all the data files on the microSD memory card.

- Do not format the microSD memory card. The data files might not be played back.

3. Copy the data files copied in step 1 back to the microSD memory card.

- Be sure to copy them back to the same microSD memory card. Even if you save the copyrighted data files on another microSD memory card, you cannot play them back.

Information

- The shutter tone set by “Shutter sound” sounds when shooting starts and ends regardless of the settings such as Manner Mode. The sound volume for shutter tone cannot be changed.
- If you do key operations while recording, the operation sound may be picked up.
- The photo light lights during recording.
- When you switch the subject you are shooting to a subject with a difference in perspective, it takes time to focus on the new subject.
- When you have difficulty focusing on a subject, switch to another subject. Then the subject might come into focus.
- The operating speed of Autofocus is slowed down in a dark place.

Function Menu of the Post View Display in Movie Mode

Function menu	Operation/Explanation
Play	See page 280.
Save	See page 141.
Attach to mail	You can save the recorded moving image and attach it to an i-mode mail message. ▶ Select a folder. Go to step 2 on page 172. ● You can compose an i-mode mail message also by pressing (✉) (✉).
Set as stand-by	You can save the recorded moving image and set it for the Stand-by display. ▶ Select a folder.
Store in	See page 144.

Function menu	Operation/Explanation
Display size	See page 145.
File restriction	See page 146.
Icon	You can set whether to display icons. ▶ ON or OFF
Cancel	You do not save the recorded moving image.

Information

<Set as stand-by>

- Some moving images might not be displayed correctly.
- See page 105 for playback of the moving image set for the Stand-by display.

Changing Settings for Shooting Images

You can set a camera when shooting images.

Use Zoom

You can display the image through the camera in “Wide” or “Tele”.

The maximum magnification for each size is as follows:

■ Outside camera

Camera mode	Size	Level of zoom	The maximum magnifications (Approx.)
Photo	5M (2592 x 1944)	1 level	1.0 times
	3.7M Wide (2592 x 1456)	1 level	1.0 times
	3M (2048 x 1536)	6 levels	1.2 times
	2M Wide (1920 x 1080)	6 levels	1.3 times
	2M (1600 x 1200)	11 levels	1.6 times
	Stand-by (480 x 854)	11 levels	1.5 times
	VGA (640 x 480)	31 levels	3.0 times
	CIF (352 x 288)	31 levels	5.5 times
	QVGA (240 x 320)	31 levels	8.1 times
	QCIF (176 x 144)	31 levels	11.0 times
Continuous	Sub-QCIF (128 x 96)	31 levels	15.1 times
	VGA (640 x 480)	11 levels	1.9 times
	CIF (352 x 288)	21 levels	2.7 times
	QVGA (240 x 320)	31 levels	3.8 times
	QCIF (176 x 144)	31 levels	5.5 times
Movie (Image stabilizer: Auto)	Sub-QCIF (128 x 96)	31 levels	7.5 times
	VGA (640 x 480)	11 levels	1.6 times
	HVGA Wide (640 x 352)	11 levels	1.6 times
	QVGA (320 x 240)	21 levels	2.4 times
	QCIF (176 x 144)	31 levels	4.4 times
Movie (Image stabilizer: OFF)	Sub-QCIF (128 x 96)	31 levels	6.0 times
	VGA (640 x 480)	11 levels	1.9 times
	HVGA Wide (640 x 352)	11 levels	1.9 times
	QVGA (320 x 240)	21 levels	3.0 times
	QCIF (176 x 144)	31 levels	5.5 times
Sub-QCIF (128 x 96)	31 levels	7.5 times	


■ Inside camera

Camera mode	Size	Level of zoom	The maximum magnifications (Approx.)
Photo/ Continuous	VGA (640 x 480)	1 level	1.0 times
	CIF (352 x 288)	11 levels	1.6 times
	QVGA (240 x 320)	11 levels	1.5 times
	QCIF (176 x 144)	31 levels	3.3 times
	Sub-QCIF (128 x 96)	31 levels	5.0 times
Movie	VGA (640 x 480)	1 level	1.0 times
	HVGA Wide (640 x 352)	1 level	1.0 times
	QVGA (320 x 240)	21 levels	2.0 times
	QCIF (176 x 144)	31 levels	3.5 times
	Sub-QCIF (128 x 96)	31 levels	5.0 times

1 Finder display

▶ Use  to adjust the magnification.

Information

- The image quality may slightly change when you select “Wide” or “Tele”.
- “Tele” is released in the following cases:
 - When you press  to end the camera
 - When a size is changed
 - When camera mode is switched


Use Autofocus

You can shoot with the outside camera after confirming the focus conditions. You can use Autofocus, even if “Focus” is set to “Close-up” or “Landscape”.


1 Finder display

When the subject is focused, a confirmation tone sounds, then the frame becomes green and the focus is locked.

When the subject is not focused, the frame becomes red.

- Press  to focus again.

2 Press (Record).

- If “Focus” is set to “Auto”, the subject is automatically focused on and shot when you press  (Record) from the Finder display.

Information

- If “Movie type set” is set to “Voice” in Movie Mode, you cannot use Autofocus.

Photo Light

You can light the photo light as a spare light for when you use the outside camera to shoot in a dark place. In Photo Mode, the photo light flashes strong at the instant the shutter is pressed.

1 Finder display (FUNC) ▶ Photo light ON or OFF

- The photo light returns to the flickering state when you do not operate for about 30 seconds. Further, it goes off when you show the Post View display.

Information

- You cannot use the photo light when “Movie type set” is set to “Voice” in Movie Mode.

Information

- You cannot use the photo light when the battery level shows very low.

Setting Image Size and Image Quality

Function Menu of the Finder Display

Function menu	Operation/Explanation	
Inside camera/ Outside camera	You can switch between the inside camera and outside camera.	
CHG camera-mode	▶ Select a mode. • When you select “Continuous mode”, the camera starts in the mode you used last time, “Auto”, “Manual”, or “Auto bracket”.	
Image size	▶ Select an image size. • When you shoot a photo for sending during a voice call, you can select only “QCIF (176 x 144)” and “Sub-QCIF (128 x 96)”.	
File size setting [Movie Mode only]	▶ Select an item. Mail restrict'n (S) ... You can shoot up to 500 Kbytes. Mail restrict'n (L) ... You can shoot up to 2 Mbytes. Long time ... You can shoot for a long time. The moving image is saved to the microSD memory card.	
Image quality	You can set the image quality for saving. ▶ Select an image quality.	
Camera settings (Brightness) [At Camera start-up]	You can adjust to -3 (dark) through +3 (bright). ▶ Brightness ▶ Select a brightness level. <table border="1" data-bbox="589 885 705 917"> <tr> <td>±0</td> </tr> </table>	±0
±0		
Camera settings (White balance) [At Camera start-up]	You can adjust the coloring of the image on the Finder display to create a natural color tone. ▶ White balance ▶ Select an item. Auto ... For adjusting white balance automatically Fine ... For shooting outdoors in fine weather Cloudy ... For shooting in cloudy weather or in the shade Light bulb ... For shooting under incandescent light Fluorescent light ... For shooting under fluorescent lighting	
Camera settings (Color mode set) [At Camera start-up]	▶ Color mode set ▶ Select a color mode. Normal ... Shoots in normal color. Sepia ... Shoots in sepia color. Monochrome ... Shoots in monochrome. Vivid ... Makes the contours vivid, raises the saturation, and then shoots. Natural ... Makes the contours smooth, lowers the saturation, and then shoots. Whitening ... Shoots faces in bright color. Suntan ... Shoots faces in dark color.	

Function menu	Operation/Explanation
Camera settings (Photo mode)	You can set a photo mode suitable for the place.
At Camera start-up Normal	▶ Photo mode ▶ Select a photo mode.
	Normal Standard mode
	Portrait For shooting portraits
	Sports For shooting moving subjects such as athletes
	Food For shooting dishes
	Scenery For shooting scenery
	Night mode For shooting in dark places such as in nighttime
	Backlight For shooting against the sun (from behind)
	Character For shooting characters
	Snow For shooting in snowy places
	Sunset For shooting in sunset
	Pet For shooting pets, etc.
Camera settings (Focus)	You can set the focus of the outside camera.
At Camera start-up Auto	▶ Focus ▶ Select an item.
	Auto For focusing automatically before shooting (See page 143)
	Close-up For focusing on a subject in a short distance
	Landscape For focusing on a landscape in a long distance
Camera settings (Shutter sound)	You can set a shutter sound. You can set a shutter sound each for Photo Mode (Continuous Mode) and Movie Mode.
	▶ Shutter sound ▶ Select a shutter sound.
	● While you are selecting, the shutter tone sounds for confirmation.
Camera settings (Flicker correction)	You can suppress blur on the Finder display for when shooting with the outside camera.
	▶ Flicker correction
	▶ Auto, Mode 1 (50Hz) or Mode 2 (60Hz)

Function menu	Operation/Explanation
Storage setting (Store in)	You can set the storage location for the still or moving images you shot.
	▶ Store in ▶ Phone or microSD
Storage setting (Auto save set)	You can set whether to automatically save the image after shooting. When "Store in" is "Phone", the image is saved to the "Camera" folder. When "Store in" is "microSD", the image is saved to the folder set by "Select storage".
	▶ Auto save set ▶ ON or OFF
Storage setting (File restriction)	See page 146.
Img. stabilizer [Photo/Movie Mode]	You can correct camera shake for when shooting with the outside camera.
	▶ Auto or OFF
Photo light	See page 143.
Auto timer	See page 146.
Shooting effect (Shoot with frame)	You can shoot a still image with a frame.
	▶ Shoot with frame ▶ ON or OFF
	▶ Select a frame.
At Camera start-up OFF	
[Photo Mode only]	
Shooting effect (Cushy mark)	You can shoot a person's face with a cushy mark pasted. The cushy mark is automatically pasted in an appropriate position.
At Camera start-up OFF	
[Photo/Movie Mode]	
	▶ Cushy mark ▶ ON or OFF
	▶ Select a cushy mark.
Cont. shooting set. (Continuous mode)	▶ Continuous mode ▶ Select a mode.
	Auto
	. . . Shoots automatically at an interval and with the number of frames as specified by "Shot interval" and "Shot number".
[Continuous Mode only]	Manual
	. . . Shoots one by one manually with the number of frames specified by "Shot number".
	Auto bracket
	. . . Shoots automatically nine still images at an interval of about 0.3 second while changing the brightness and color tone one by one.
	● Select "Manual" to display the number of frames for continuous shooting.
Cont. shooting set. (Shot interval)	▶ Shot interval ▶ Select a shooting interval.
	● You can set this only in "Auto" of Continuous Mode.
[Continuous Mode only]	

Function menu	Operation/Explanation
Cont. shooting set. (Shot number) [Continuous Mode only]	<p>▶ Shot number</p> <p>▶ Enter the number of photos.</p> <ul style="list-style-type: none"> ● When "Image size" is set to "VGA (640 x 480)" or "CIF (352 x 288)", you cannot change "Shot number". ● You can set this only in "Auto" or "Manual" of Continuous Mode.
Movie type set At Camera start-up Normal [Movie Mode only]	<p>You can select whether to record both the video and voice, or one of them when you shoot the moving image.</p> <p>▶ Normal, Video, or Voice</p>
Display size	<p>You can set whether to display a moving image or still image in the original size (Actual size) or to fit to the screen size on the Finder display.</p> <p>▶ Actual size or Fit in display</p>
Common replay mode [Movie Mode only]	<p>You can set a shooting size appropriate for attaching to i-mode mail.</p> <p>▶ YES</p> <ul style="list-style-type: none"> ● Image Size is set to "QCIF", File Size Setting is set to "Mail restrict'n (S)", and Image Quality (Movie Mode) is set to "Normal".
Icon	<p>You can set whether to display icons.</p> <p>▶ ON or OFF</p>
Memory info	<p>You can display the used memory space (estimate)/number of stored items.</p>

Information

<Inside camera/Outside camera>

- When "Image size" is set to larger than "Stand-by (480 x 854)", and you switch to the inside camera, the camera starts up in "VGA (640 x 480)".

<File size setting>

- When the "File size setting" is set to "Long time", "Store in" is set to "microSD".

<Camera settings>

- Note that the image may blur in Night Mode because the exposure takes a longer time.
- If you set "Flicker correction" to "Auto", it may take a while to automatically adjust the image quality. In this case, switch to Mode 1 or Mode 2 according to the power frequency provided in the shooting location.
- Even if you change the setting of "Brightness", "White balance", "Color mode set", or "Focus", the setting appropriate for each "Photo mode" applies when you change "Photo mode".

<Storage setting>

- See "Select storage" for how to set a storage location on the microSD memory card.
- If you change "File size setting" to "Long time", "Store in" is set to "microSD" and "Storage setting" cannot be operated.
- When "Auto save set" is set to "ON", the image is saved to the latest folder if "Select storage" is not set or the folder set as a destination folder is deleted.

Information

<Img. stabilizer>

- This function is only for decreasing the degree of camera shake, so its effect differs depending on the subject or condition.
- Image Stabilizer might not work effectively in the following cases:
 - When the camera shakes to a great extent
 - When zooming is in use
 - When shooting moving subjects
- When "Photo mode" of "Camera settings" is set to "Sports", "Night mode", or "Pet" in Photo Mode, "Img. stabilizer" becomes invalid.
- Residual images might remain in the area where the subject is moving, or noise might be found in overall area. In that case, set this function to "OFF".
- In Movie Mode, the shooting range varies depending on the "Auto" or "OFF" setting because peripheral pixels are used for the processing by Image Stabilizer.
- When this function is activated in Photo Mode, the processing time after shooting might be longer about two seconds due to the processing by Image Stabilizer.
- You cannot use Image Stabilizer for the inside camera.

<Shooting effect>

- When "Image size" is set to larger than "2M (1600 x 1200)", you cannot shoot with a frame.
- If you shoot a still image with a frame using the inside camera and save it, the frame is also horizontally reversed when the still image is automatically reversed as a correct image.
- You cannot save the still image shot with a frame as the mirrored image.
- When "Image size" is set to larger than "Stand-by (480 x 854)", cushy marks cannot be pasted in Photo Mode.

<Cont. shooting set.>

- The number of shots that can be set differs depending on the image size. The number of shots that can be set is as follows:
 - VGA (640 x 480): 4
 - CIF (352 x 288): 4
 - QVGA (240 x 320): 5 through 10
 - QCIF (176 x 144): 5 through 20
 - Sub-QCIF (128 x 96): 5 through 20

<Display size>

- When you set "Image size" to a size larger than "HVGA Wide (640 x 352)", "Fit in display" always applies.
- When you set "Image size" to "QCIF (176 x 144)" or "Sub-QCIF (128 x 96)", the image is enlarged two times at both lengthwise and sidewise when it is displayed in "Actual size".
- The setting on the Finder display is reflected on the Post View display; however the setting on the Post View display is not reflected on the Finder display.

<Common replay mode>

- You cannot operate when you set "File size setting" to "Long time".

File Restriction

You can set the file restrictions for when you save the shot still or moving image. The operation of attaching to i-mode mail is disabled at the receiving end who has received the image as the first distribution.

1 Finder display ▶ (FUNC)

▶ Storage setting ▶ File restriction


or

Post View display in Photo Mode, Movie Mode or Photo sending/Detailed display in Continuous Mode ▶ (FUNC)


▶ File restriction

2 File unrestricted or File restricted

■ For "File unrestricted"

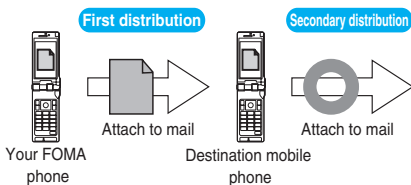

■ For "File restricted"

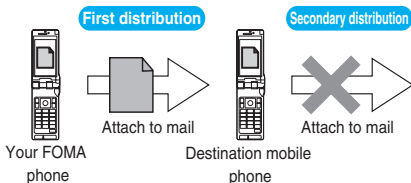

Information

- Even when you set "File restriction" to "File restricted", the still or moving images can be output from the destination mobile phone by transmitting the images using infrared data exchange or by copying them to the microSD memory card.
- After saving, you can use "File restriction" on page 275 to change the settings.
- When you set "File size setting" to "Long time" in Movie Mode, "File restriction" becomes "File unrestricted".

Auto Timer

At Camera start-up	OFF
--------------------	-----

1 Finder display ▶ (FUNC) ▶ Auto timer ▶ ON or OFF ▶ Enter a delay time (seconds).

- Enter from "01" through "15", in two digits.

■ When Auto Timer is set to "ON"

"" appears on the Finder display.

If you press (Record), a confirmation tone sounds and "" blinks. The photo light flickers every about 1 second until about 5 seconds before shooting. From about 5 seconds before shooting, the photo light flickers every about 0.5 second, and the confirmation tone sounds every about 1 second. Shooting takes place after the set delay time has elapsed.

- To cancel shooting, press (Quit) or (CLR) while the photo light is flickering. Even if you cancel shooting, "Auto timer" stays set to "ON".
- You can shoot immediately by pressing (Record) before the delay time has elapsed.
- When you shoot, a confirmation tone sounds regardless of the settings such as Manner Mode. The sound volume for the confirmation tone cannot be changed.

Information

- You cannot use Auto Timer in "Manual" of Continuous Mode.
- Auto Timer will be set to "OFF" when shooting ends.


<Bar Code Reader>

Using Bar Code Reader

You can use the outside camera to scan JAN codes and QR codes and store them as data.

From the scanned data, you can make calls, compose i-mode mail messages, and access Internet web pages, and so on.

■ When scanning with Bar Code Reader

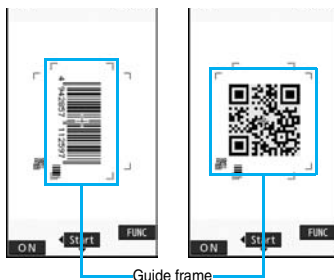

- Take the character strings as large as possible within the guide frame.
- Autofocus works when you scan a code about 10 cm or more away from it. When you scan a code in the out-of-focus state, the recognition rate lowers.
- Scan so that the camera is in parallel with the code.

■ JAN Code

JAN Code is a bar code that denotes numerals with the vertical bars of a different width.

You can scan 8-digit (JAN8) and 13-digit (JAN13) JAN codes.

- "4942857112597" is displayed when you scan this bar code with the FOMA phone.



■ QR Code

QR Code is one of the 2-dimensional codes that denotes data in the vertical and horizontal directions.

Kanji, katakana, alphanumeric characters, and pictographs are displayed when you scan it.

Some QR codes have image or melody information.

- “株式会社NTTドコモ (NTT DoCoMo, Inc.)” is displayed when you scan this QR code with the FOMA phone.



Scan a Code

At Bar Code Reader start-up	Photo light: OFF Brightness: ±0 Zoom: Magnified view
-----------------------------	--

You can store up to 5 scanned codes.

You can scan up to 16 divided QR codes.

1 LifeKit ▶ Bar code reader ▶ Scan code

The Bar Code Reader menu is displayed.

- You can paste the Bar Code Reader menu to the desktop. (See page 114)

2 Fit a code to be scanned to the guide frame and press .

When the focus is locked, a confirmation tone sounds and the cross mark becomes green.

- Press to set the photo light to “ON” or “OFF”.
- Press and select “Brightness”; then you can adjust brightness to -3 (dark) through +3 (bright).
- Press to show the reduced display, and press to return to the former display.



Scanning Code display

3 Press (Start).

The code is scanned. (The shutter tone does not sound.)

- To cancel scanning, press or .
- When scanning is completed, the scanning completion tone sounds and the Call/Charging indicator lights. The sound level is fixed and cannot be changed. However, the tone does not sound in Manner Mode or while “Phone” of “Ring volume” is set to “Silent”.
- “” is displayed for melody files and “” or “” is displayed for incompatible or damaged files.
- While you are entering (editing) characters, the Scanned Code Result display does not appear; the Text Data Confirmation display of the scanned code appears. To enter the scanned code, press (Set). To discard it, press (Cancel) or . The characters that cannot be displayed are replaced by half-pitch spaces. When the code containing no text data has been scanned, the code is not correctly displayed.
- If scanning is not completed in a certain period, the scanning is suspended and the Scanning Code display returns.
- When the scanned code is part of divided QR codes, select “OK” to repeat step 2 and step 3 for scanning the rest of codes.

4 (FUNC) ▶ Save result ▶ OK

The scanned data is stored.






Scanned Code Result display


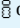
Information

- You cannot scan bar codes or 2-dimensional codes other than JAN codes or QR codes.
- Scanning may take a long time. Hold the FOMA phone securely with your hands during scanning.
- You may not be able to scan codes correctly depending on scratch, dirt, damage, the quality of printed material, light reflection, or QR code version.
- You cannot scan some codes depending on the type or size.

Function Menu of the Scanned Code Result Display

Function menu	Operation/Explanation
Save result	See page 147.
Display list	You can bring up the Bar Code Reader List when one or more files are stored.
Internet	You can connect to the highlighted URL via i-mode or Full Browser. ▶ i-mode or Full Browser ▶ YES ● You can connect to the URL also by highlighting the URL and pressing (Select).

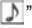Function menu	Operation/Explanation
Compose message	<p>You can compose an i-mode mail message to send to the highlighted mail address. Go to step 3 on page 172.</p> <ul style="list-style-type: none"> You can compose it also by highlighting the mail address and pressing  (Select). When you select "Compose message" from the Scanned Code Result display, the data on the Scanned Code Result display is entered into the address, subject, and text field.
Dialing	<p>You can make a voice call, videophone call, or PushTalk call to the highlighted phone number.</p> <p>▶ Select a dialing type.</p> <ul style="list-style-type: none"> When you select "Select image", select an image to send to the other party during the videophone call. When you select "Compose SMS", you can compose an SMS message to send to the phone number set as the destination address. Go to step 3 of "Composing SMS Messages to Send" on page 206. You can make a call also by highlighting the phone number and pressing  (Select). <p>▶ Dial</p> <ul style="list-style-type: none"> To make an international call, select "Int'l dial assist". (See page 58) To set Caller ID Notification, select "Notify caller ID". (See step 2 on page 47)
Add to phonebook	See page 87.
Add bookmark	<p>You can bookmark the site name and URL.</p> <p>▶ YES</p> <ul style="list-style-type: none"> Select "Page title" to edit the title. <p>▶ OK ▶ Select a destination folder.</p>
Save image	<p>You can save the scanned image data to set to the Stand-by display or other displays.</p> <p>▶ Select a destination folder.</p> <p>Go to step 3 on page 159.</p> <ul style="list-style-type: none"> See page 162 when images are stored to the maximum.
Save melody	<p>You can save the scanned melody data to set it as a ring tone or other tones.</p> <p>▶ YES ▶ Select a destination folder.</p> <p>Go to step 2 on page 160.</p> <ul style="list-style-type: none"> Select  to play back the melody. See page 162 when melodies are stored to the maximum.

Function menu	Operation/Explanation
Save ToruCa	<p>You can save the scanned ToruCa file.</p> <p>▶ Select a destination folder.</p> <ul style="list-style-type: none"> Select  to display the ToruCa file. See page 162 when ToruCa files are stored to maximum.
Start  i-appli	<p>You can start up i-appli from the scanned data.</p> <p>▶ YES</p>
Copy	<p>▶ Select a start point for copying</p> <p>▶ Select an end point for copying.</p> <ul style="list-style-type: none"> You can copy codes of up to 5,000 full-pitch/10,000 half-pitch characters. See page 361 for pasting copied characters.

Information

<Internet>

- URL can be displayed in up to 512 half-pitch characters by Bar Code Reader and up to 256 half-pitch characters by Text Reader.

<Compose message>

- If the scanned data contains nonenterable characters, you cannot enter it as a mail address, and those characters may become spaces in the text field.

<Dialing>

- You cannot make emergency calls by scanning "110", "119" or "118".

<Add bookmark>

- You can display up to 512 half-pitch characters for a URL and can store up to 256 characters from the beginning.

<Save image>

- The file name and title for the saved image are "imageXXX" (XXX are numerals).

<Save melody>

 
- The file name for the saved melody is "melodyXXX" (XXX are numerals).
- For the melody with no title, the file name is displayed as the title.
- When playing back the melody, it is played back at the sound volume set for "Phone" of "Ring volume".

Display the Saved Data List

1 ▶ **LifeKit** ▶ **Bar code reader** ▶ **Saved data**

The titles for stored data are displayed from the latest one.

- Select a title to show the Scanned Code Result display.



Bar Code Reader List

Information

- The titles for the scanned data are as follows:
(Example) When the scanned data is saved at 10:00 on November 15, 2007;
Title name: 20071115_1000_0000
- If you store multiple data items for the same date and time, the lower four-digit numbers increase up to "9999".

Function Menu of the Bar Code Reader List

Function menu	Operation/Explanation
Edit title	<ul style="list-style-type: none"> ▶ Enter a title. • You can enter up to 9 full-pitch/18 half-pitch characters.
Result	You can bring up the Scanned Code Result display for stored data.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete all)	<ul style="list-style-type: none"> ▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

<Text Reader>

Using Text Reader

You can scan printed phone numbers, mail addresses or alphanumeric characters such as URLs using the outside camera, and store them as text information. Use the text information to make calls, compose i-mode mail, connect to the Internet, and so on.

■ When scanning with Text Reader

- Take the character strings as large as possible within the guide frame.
- Autofocus works when you scan characters about 10 cm or more away from them. When you scan characters in the out-of-focus state, the recognition rate lowers.
- Scan the character string with the camera set in parallel.



Guide frame

Scan Text

At Text Reader start-up	Photo light: OFF Zoom: Magnified view
-------------------------	--

You can store eight scanned data files of up to 256 half-pitch characters per item.

The number of characters you can scan at a time is up to 50 half-pitch characters, and you can scan the increased characters in parts.

1 (MENU) ▶ LifeKit ▶ Text reader ▶ Scan text


The Text Reader menu is displayed.

- You can paste the Text Reader menu to the desktop.
(See page 114)

2 Fit the characters to be scanned to the guide frame and press (O).

When the focus is locked, a confirmation tone sounds and the guide frame becomes green.

- Press (MENU) to set the photo light to "ON" or "OFF".
- Press (O) to show the reduced display, and press (O) to return to the former display.

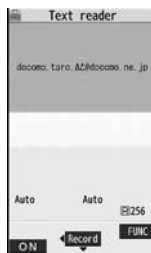

Scanning Text display

3 Press (Record).


The characters are scanned. (The shutter tone does not sound.)

- To cancel scanning, press (CLR).
- When scanning is completed, the scanning completion tone sounds and the Call/Charging indicator lights. The sound level is fixed and cannot be changed. However, the tone does not sound in Manner Mode or while "Phone" of "Ring volume" is set to "Silent".

4 Confirm the scanned result.

The scanned characters are underlined. Confirm the scanned characters for mistakes.

- Press (CLR) to restart scanning.
- To store the characters without correcting, go to step 7.

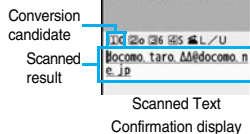

Conversion candidate

Scanned result

Scanned Text Confirmation display

5 Press (O) to highlight a character to be corrected ▶ Press the number of the conversion candidate.

- Conversion candidates are displayed up to four kinds for each character.
- When you want to correct the character to other than the conversion candidate, highlight a character to be corrected and press (Mode), then enter a character after switching to "Alphabet entry mode" or "Numeric entry mode". However you cannot enter characters such as ".ne.jp" or ".co.jp" by pressing (X).

6 Press (Set).


The scanned characters are set.

- To link characters, repeat step 2 through step 6.
- To release the set characters, press (CLR).

7 (FUNC) ▶ Store

The scanned characters are stored.

- When scanned text contains "tel", "@", or "http://", you can execute Phone To or Web To function by selecting the text. (See page 163) You can select only first item even if multiple items are found.
- Press (Overwrite) to overwrite the scanned characters and activate Text Reader. Go to step 2.

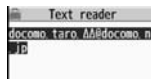


Scanned Text Result display

Information



- Hold the FOMA phone securely with your hands during scanning so that you can scan characters correctly.
- Characters you can scan are alphabet letters (uppercase and lowercase), numerals, and symbols (#, &, (,), -, ., /, :, @, [,], _ , ~, ?, =, %, and +). You cannot scan kanji and hiragana characters. You might not be able to scan those correctly depending on the surroundings such as lighting.
- You cannot scan handwritten characters correctly.
- You might not be able to scan the following:
Characters received by a FAX/Copied characters/Designed characters/Characters having no certain space between characters/Characters difficult to identify from the background.

Display the Saved Data List**1**  **LifeKit** **Text reader** **Saved data**

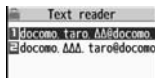Up to 22 half-pitch characters are displayed for each stored data.



Text Reader List


- Select a data item to show the Scanned Text Result display.
- Press   to compose an i-mode mail message to send to the characters in the item set as a mail address. (See step 3 on page 172)

Function Menu of the Scanning Text Display/ Scanned Text Confirmation Display

Function menu	Operation/Explanation
Store	See page 149.
Edit	You can edit and store the scanned character string. ▶ Edit the text.
Recognition mode	You can set this mode according to the type of the character string you want to scan. ▶ Select an item. Auto setting . . . Automatically recognizes the type of characters. URL Select this when you scan a URL. "http://" or "https://" is automatically entered to the head of the character string when it is stored. Mail address . . . Select this when you scan a mail address. Phone number . . . Select this when you scan a phone number. Number Select this when you scan numerals. Free character . . . Select this when you scan alphabetic characters that are not especially specified.
At Text Reader start-up	▶ Select an item.
Auto setting	Auto setting . . . Automatically recognizes printing conditions. Positive fix Select this when deep color characters are printed over faint color ground. Negative fix Select this when faint color characters are printed over deep color ground.

Function menu	Operation/Explanation
NEGA/POSI mode	You can set this mode to fit to the printing conditions of the character string you want to scan. ▶ Select an item. Auto setting . . . Automatically recognizes printing conditions. Positive fix Select this when deep color characters are printed over faint color ground. Negative fix Select this when faint color characters are printed over deep color ground.

Function Menu of the Scanned Text Result Display/Text Reader List

Function menu	Operation/Explanation
Edit	▶ Edit the text.
Internet	See page 147.
Compose message	You can compose an i-mode mail message to send to the scanned mail address as a destination address. Go to step 3 on page 172.
Dialing	See page 148.
Store mail add.	See page 87.
Store phone No.	See page 87.
Add bookmark	You can bookmark the URL you have scanned. ▶ OK ● Select "Page title" to edit the title. ▶ Select a destination folder.
Search phonebook	You can search for Phonebook entries using the scanned phone number or mail address. ▶ Select a search method  The Phonebook List that corresponds to the phone number or mail address is displayed.
Display detail/ Display list	You can switch between the Scanned Text Result display and Text Reader List.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

i-mode/i-motion/i-Channel



What is i-mode?	152
Displaying Sites	
Accessing Sites..... <Menu>	152
How to View/to Operate Sites.....	153
Displaying Most Recently Accessed Site..... <Last URL>	155
Using My Menu..... <My Menu>	156
Changing i-mode Password..... <Change i-mode Password>	156
Displaying Internet Web Pages..... <Enter URL>	156
Bookmarking Web Pages or Sites for Quick Access..... <Bookmark>	157
Saving Site Contents..... <Screen Memo>	158
Downloading Images or Melodies from Sites	
Downloading Files or Data Items from Sites.....	159
Convenient Functions of i-mode	
Operations from Highlighted Information.....	163
Setting Functions of i-mode	
Setting i-mode..... <i-mode Settings>	164
Setting Connection Timeout..... <Set Connection Timeout>	164
Changing a Host from i-mode (ISP Connection Communication)..... <Host Selection>	165
Using Certificates	
Operating SSL Certificates..... <SSL Certificate>	165
Setting FirstPass..... <Client Certificate>	165
Changing a CA Center..... <Certificate Host>	167
Using i-motion	
What is i-motion?	168
Obtaining i-motion Movies from Sites..... <Obtain i-motion Movie>	168
Setting Automatic Replay of i-motion Movies..... <i-motion Auto-play>	169
Using i-Channel	
What is i-Channel?	169
Using i-Channel.....	170
Setting How Ticker is Displayed..... <Ticker ON/OFF>	170

What is i-mode?

i-mode is the service that makes use of the display of the FOMA phone supporting i-mode (i-mode phone) to enable you to use online services such as site (program) access, Internet access, and i-mode mail.

- i-mode is a pay service that is available on a subscription basis.
- For details on i-mode, refer to the "Mobile Phone User's Guide [i-mode]".


■ Before Using i-mode

- Contents of sites (programs) and web pages (Internet web pages) are generally protected by copyrights law. Data such as text and images that you obtained to the i-mode phone from sites (programs) and Internet web pages can be used for personal entertainment but cannot be used in whole or in part, as it is or after modification, for commercial purposes or sent as e-mail attachments or output from your i-mode phone to other devices, unless you have permission from the copyright holders.
- If you replace the UIM with another one or turn on the power with the UIM not inserted, you cannot display/play back files depending on the model, such as still images/moving images/melodies obtained from sites, attached files (still images/moving images/melodies and other files) sent/received by mail, screen memos, or Messages R/F.
- When the file whose display and/or playback is restricted by the UIM is set for the Stand-by display or specified ring tone, the FOMA phone works with the default contents when you replace the existing UIM with new one or turn on the power with the UIM not inserted.

Accessing Sites



You can use a variety of services offered by IPs (Information Providers). From the display of the FOMA phone, you can check your bank balance, reserve tickets, and do similar tasks. (IPs offer different types of services. Some of them need to be applied for separately.)

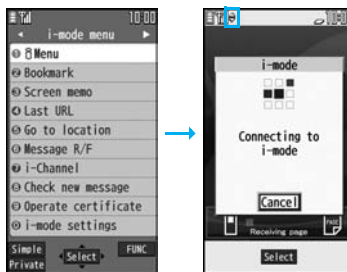1 Menu









i-mode menu

While you are online, "i-mode" blinks.

- "i-mode" blinks while you are using the i-mode service (during i-mode standby).
- To cancel during the connection, select "Cancel". To cancel while obtaining a page, press  (Quit).
- To end i-mode, press  and select "YES" while the site is displayed. "i-mode" goes off and i-mode ends. It may take longer to end i-mode.

2 Select an item (link).

Repeat selecting items (links) to display the desired site.


- You can select underscored items on the displayed site. When you select an item, it is highlighted.
- If there is a number at the head of the item showing the link, you can connect to that link directly by pressing the numeric key corresponding to that number. (Some sites cannot be connected.)
- While the site is displayed, press  to scroll through line by line. Press   /  (Page) or  /  to scroll through page by page.

To obtain an SSL site (SSL pages)

The display on the right appears.

When obtaining is completed, the SSL page appears and "SSL" lights.

- To cancel during authentication, select "Cancel". To cancel obtaining the SSL page after authentication, press (Quit).

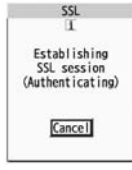

To return to a non-SSL site

The display on the right appears.

Select "YES" to display the ordinary site; "SSL" goes off.



Information

- Depending on the site, you may need to apply for the service in writing separately, or to pay information fees to use it.
- The maximum display size of the images on the site is 1400 x 480 dots. If an image is larger than 1400 x 480 dots, it is displayed shrunk with a proportional ratio retained.
- Depending on the site, "SSL" might be displayed when the image is not correctly displayed.
- Depending on the site or data, you might not be able to download or save melodies, PDF files, software programs, and others.
- With some Internet web pages (sites) supporting i-mode, the color setting might make the text difficult or impossible to see.
- When you are asked from the site to send information about music you have played back on the FOMA phone, the confirmation display appears for about sending your music information. Select "YES" to send the information (title names, artist names, and played dates) of the music played back on the FOMA phone. The sent music information is used for the IP (information provider) to provide customized information to you.

Change to Menu in English

The Menu can be displayed in English.

1 Menu English iMenu

Menu in English will be displayed.

- To change back to the Japanese display, select "日本語 (Japanese)".



Information

- The Menu in English differs slightly from the Menu in Japanese.
- Items such as Tokusuru Menu and News are not shown on the English Menu.
- Generally, "What's New" site will be updated every other Monday.
- English sites are displayed after entering Menu List (sites differ from Japanese version).

Information

- Access news from DoCoMo and usage regulations on "What's New".

How to View/to Operate Sites


Basic operating methods while a site is displayed are explained.

Return to Obtained Previous Page/Go to Obtained Next Page

The FOMA phone saves the files such as the displayed Internet web pages to a temporal storage area called a cache. By pressing , you can bring up the page stored in the cache without communicating.

- When you bring up a page that exceeds the cache size on the FOMA phone or a page that is configured (created) to always read its latest information, the FOMA phone starts communication.
- When i-mode ends, the cache is cleared.


- Press to return to the previous page.
Press to go to the next page.

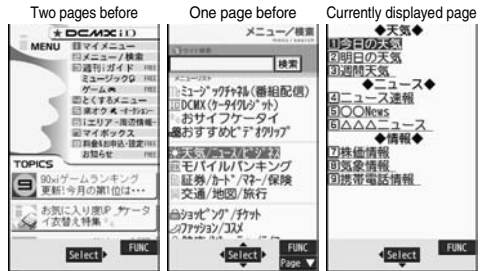

To turn pages

You can move back up through the pages that you have displayed so far by pressing repeatedly. However, if you display a different page ("D") from the previous page ("B"), you cannot return to "C" from "D" even when you press twice. Instead, the pages are displayed in the order of "D" → "B" → "A".

<When pages have been displayed in the order of "A" → "B" → "C" → "B" → "D">

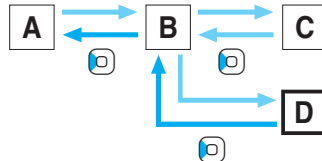



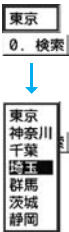




- ...Sequence of page display
- ...Sequence when previous page from the display "D" has been displayed

Information

- When you display a page stored in cache, you cannot display text or settings you entered when connected before.
- When Flash movies are displayed, the site behavior might differ from the one for ordinary sites.

Select/Enter Information on Sites

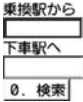In sites, you may use the displayed radio buttons, check boxes, text boxes, and pull down menus.

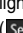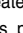Name	Display example	Operation/Explanation
Radio button	<input type="radio"/> : Not selected <input checked="" type="radio"/> : Selected	Radio buttons are for selecting one from multiple choices.
Check box	<input type="checkbox"/> : Not selected <input checked="" type="checkbox"/> : Selected	Check boxes are for selecting one or more items from multiple choices.
Text box		You can enter characters. Highlight a text box and press  (Select) to show the Character Entry display.
Pull down menu		You can select an item from the option list. Highlight a pull-down menu and press  (Select) to show the option list. • You might be able to select multiple items from pull-down menus. Each time you use  to highlight an item and press  (Select), you can select/release items repeatedly. After selecting items, press  (Finish).

Information

- Depending on the site, the display authenticating your user ID or password might appear.
Enter your user ID and password, and then select “OK”.




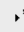
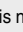

Flash Function

Flash is an animation technology using pictures and sound. Flash movies make the sites more attractive. You can download Flash movies to your FOMA phone and play them back or set them for the Stand-by display.

Information

- The maximum display size of the Flash movies on the site is 700 x 480 dots. If a Flash movie is larger than 700 x 480 dots, it is displayed shrunk with a proportional ratio retained.
- Some Flash movies refer to the phone-information data in your FOMA phone. To permit the use of the information in your FOMA phone, set “Use phone information” to “YES”. (“YES” is set at purchase.)
- Effect tones sound for some Flash movies. To silence them, set “Sound effect setting” (or “Sound effect”) to “OFF”.

Information





- The effect tone and vibrator for the Flash movie set for the Stand-by display do not work.
- The effect tone for Flash movies does not sound during Play Background.
- Some Flash movies may vibrate the FOMA phone while they are being played back. The FOMA phone vibrates regardless of the setting of “Vibrator”.
- When you play back a Flash movie after saving to Data Box, microSD memory card, or Screen Memo, it might look different depending on the saving location.
- Some Flash movies might not work correctly.
- You cannot save the Flash movies if an error occurs while they are being played back.
- You can operate some Flash movies by using  or . Flash movies can be operated sometimes even when “   ” is not displayed.
- When Flash movies are displayed, the behavior might differ from ordinary sites.

Serial number of mobile phones/UIMs

When you select an item, the confirmation display might appear asking whether to send the serial number of mobile phone/UIM.

- The “serial number of your mobile phone/UIM” to be sent is used by an identifying the user, providing customized information, and for judging if the contents the IP (Information Provider) offers are available on your mobile phone.
- The “serial number of your mobile phone/UIM” is sent to the IPs (Information Providers) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IPs (Information Providers) or others, by this operation.

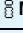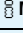Function Menu while Site is Displayed

Function menu	Operation/Explanation
 Menu	You can return to “  Menu”.
Bookmark (Add bookmark)	See page 157.
Bookmark (Bookmark)	 Bookmark Go to step 1 of “Display Web Pages or Sites from a Bookmark” on page 157.
Screen memo (Add screen memo)	See page 158.
Screen memo (Screen memo list)	 Screen memo list Go to step 2 on page 158.

Function menu	Operation/Explanation
Internet (Enter URL)	<p>You can enter a URL to display an Internet web page.</p> <p>▶ Enter URL ▶ Select the text box.</p> <p>Go to step 2 of "Displaying Internet Web Pages" on page 156.</p> <ul style="list-style-type: none"> •The URL of the displayed site is input beforehand.
Internet (Switch to FB)	See page 262.
Reload	The site contents will be updated with the latest information.
Save image	See page 159.
Compose message	<p>You can compose an i-mode mail message with the URL/image of a displayed site/screen memo pasted or attached.</p> <p>▶ Select an item.</p> <p>Attach URL Pastes a URL to the text of an i-mode mail message.</p> <p>Attach image. . . Select an image to attach it to an i-mode mail message.</p> <p>Insert dec. mail Select an image to paste it to a Deco-mail message.</p> <p>Go to step 2 on page 172.</p> <ul style="list-style-type: none"> •See page 175 for Deco-mail.
Add to phonebook	See page 87.
Add desktop icon	See page 114.
Others (Change CHR code)	<p>When characters are not correctly displayed, you can convert them to the correct ones.</p> <p>▶ Change CHR code</p> <ul style="list-style-type: none"> •This setting is valid only for the site and Internet web page being displayed.
Others (Title)	<p>You can display the title of the displayed site.</p> <p>▶ Title</p>
Others (URL)	<p>You can display the URL of the displayed site.</p> <p>▶ URL</p>
Others (Certificate)	<p>You can check the subject name, author, validity period and serial number of the certificate used in SSL communication. Up to five certificates are displayed.</p> <p>▶ Certificate</p>
Others (Set image display)	See page 164.
Others (Sound effect)	See page 164.

Function menu	Operation/Explanation
Others (Retry)	<p>You can play back the animation or Flash movie from the beginning.</p> <p>▶ Retry</p> <ul style="list-style-type: none"> •When a part of the Flash movie is outside the display area, the Flash movie might not be played back.

Information

<Compose message>

- The number of characters of the URL you can paste to the text is up to 256 half-pitch characters. If the URL contains 256 half-pitch characters or more, you cannot paste it.
- You may not be able to attach or paste some images to i-mode mail.

<Others (Change CHR code)>

- When characters are not correctly displayed, repeat the operation. However, the previous character is displayed if you repeat the operation four times.
- Even when you repeat this operation, the correct character might not appear.
- If you change the character code when the correct characters are displayed, wrong characters might appear instead.

<Others (Title)>

- Up to 128 half-pitch/64 full-pitch characters can be displayed for a title.

<Last URL> Displaying Most Recently Accessed Site

Display Last URL


When you end i-mode, the URL of the page displayed last is stored as "Last URL".
You can display the page you viewed last time by selecting "Last URL" from the i-mode menu.

1  ▶ Last URL

Information

- Some pages cannot be stored as "Last URL", such as pages whose URLs contain more than 2,048 half-pitch characters, the Obtaining Completion display for melodies or i-motion movies, etc. and FirstPass Center pages.

Reset Last URL

You can initialize the URL of the page you viewed last time to the  Menu URL.

1  ▶ i-mode settings ▶ Reset last URL
▶ YES

<My Menu>

Using My Menu

If you register frequently used sites in My Menu, you will be able to access them easily.
You can register up to 45 sites.

Register Sites in My Menu



- 1 Bring up a page to be registered
 - ▶ Register My Menu
 - The page configuration differs depending on the site.

- 2 Select the i-mode password text box
 - ▶ Enter the i-mode password ▶ 決定 (OK)
 - The entered i-mode password is displayed as “*”.
 - See page 118 for the i-mode password.

Information

- Some sites cannot be registered in My Menu.
- When you subscribe to a pay site in メニュー／検索(Menu/Search) and Menu List, it will be registered in My Menu automatically.

Access Sites from My Menu

- 1  ▶  Menu ▶ English iMenu ▶ My Menu
 - ▶ Select a site to be accessed.



Information

- If you are using Dual Network Service, you might not be able to use My Menu registered by the mova phone using the FOMA phone, or My Menu registered by the FOMA phone using the mova phone.

<Change i-mode Password>

Changing i-mode Password

The i-mode password (four digits) is required to subscribe to and unsubscribe from message services and i-mode pay sites, and to do i-mode mail settings.
Be sure not to let others know your i-mode password.

- 1  ▶  Menu ▶ English iMenu ▶ Options
 - ▶ Change i-mode Password
 - ▶ Select the “Current Password” text box
 - ▶ Enter the i-mode password (four digits).
 - If you enter the i-mode password for the first time, enter “0000” (four zeros) which is set at a time of your contract.
 - The entered numeral is displayed as “*”.


- 2 Select the “New Password” text box
 - ▶ Enter a new i-mode password (four digits).
 - Enter your own i-mode password.
- 3 Select the “New Password (Confirmation)” text box
 - ▶ Enter the new i-mode password (four digits) ▶ Select
 - Enter the same number that you entered in step 2.

Information

- Note that if you do not remember the i-mode password, you need to bring an identification card such as your driver's license to the handling counter of a DoCoMo shop.

<Enter URL>

Displaying Internet Web Pages

- 1  ▶ Go to location ▶ <NEW>
 - 2 Enter a URL ▶ OK
 - You can enter up to 256 half-pitch alphanumeric characters and symbols (up to 512 half-pitch characters for Full Browser).
 - For Full Browser, the confirmation display appears telling that the web page might not be displayed.

Information

- For i-mode, Internet web pages not supporting i-mode or some type of internet web pages to be connected might not be displayed correctly.
- When the file size of the page you have received exceeds the maximum obtainable size of a page, receiving is suspended. The data obtained so far might be displayable by selecting “OK”.

Displaying Web Pages from URL History

Up to 10 entered URLs can be stored in URL History.

- 1  ▶ Go to location
 - ▶ Select a URL to be displayed ▶ OK
 - Excluding “http://” and “https://”, up to 22 half-pitch characters can be displayed.
 - You can edit the URL by selecting the URL's text box.






Information

- When the entered URLs exceed 10 items, the URL histories are overwritten automatically, starting from the oldest one.

Information

- When you newly enter a URL to access a site, that URL is saved as a different record even if you access the same URL.

Function Menu of the URL History List

Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message with the highlighted URL pasted to the text. Go to step 2 on page 172. <ul style="list-style-type: none"> You can compose it also by pressing  ().
Add desktop icon	See page 114.
Set as home URL	You can store the site as Home URL of Full Browser. <ul style="list-style-type: none"> ▶ YES You can operate this only from the URL History List of Full Browser.
Delete [Delete (Delete this)]	▶ Delete (Delete this) ▶ YES
Delete (Delete selected)	▶ Delete selected ▶ Put a check mark for URL histories to be deleted ▶  (Finish) ▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES


<Bookmark>

Bookmarking Web Pages or Sites for Quick Access

Add Bookmark

Once you bookmark a frequently accessed site, you can display the page directly. You can register 100 bookmarks each for i-mode and Full Browser.

1 From the page to be registered

-  (FUNC) ▶ **Bookmark** ▶ **Add bookmark**
- ▶ YES** ▶ **Select a destination folder.**

Information

- URLs containing up to 256 half-pitch characters can be registered (up to 512 half-pitch characters for Full Browser). URLs longer than this cannot be registered.
- Up to 12 full-pitch/24 half-pitch characters are stored for a title. For longer titles, the excess characters are deleted. If no title is entered, the URL without "http://" or "https://" is registered.
- The contents entered in the site are not saved to the bookmark.
- Some pages cannot be bookmarked.

Display Web Pages or Sites from a Bookmark

-  ▶ **Bookmark** ▶ **Select a folder**
▶ **Select a bookmark to be displayed.**





- After you use a bookmark to display a page, that bookmark will be displayed at the top of the Bookmark List.

Function Menu of the Bookmark Folder List

Function menu	Operation/Explanation
Operate folder (Add folder)	You can add a new folder. You can add up to nine folders in addition to each "Bookmark" folder/"Screen memo" folder. <ul style="list-style-type: none"> ▶ Add folder ▶ Enter a folder name. You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder (Edit folder name)	▶ Edit folder name ▶ Edit the folder name. <ul style="list-style-type: none"> You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder (Delete folder)	You can delete the folder and all bookmarks and screen memos in the folder. You cannot delete the "Bookmark" folder/"Screen memo" folder. <ul style="list-style-type: none"> ▶ Delete folder ▶ Enter your Terminal Security Code ▶ YES
Ir/ transmission (Send all Ir data)	See page 305.
Ir/ transmission (All transmission)	See page 307.
No. of bookmarks	You can check the number of bookmarks stored in all folders.
Delete all	The folders will not be deleted. <ul style="list-style-type: none"> ▶ Enter your Terminal Security Code ▶ YES

Function Menu of the Bookmark List

Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message with the highlighted URL pasted to the text. Go to step 2 on page 172. <ul style="list-style-type: none"> You can compose it also by pressing  ().

Function menu	Operation/Explanation
Attach to mail	You can send an i-mode mail message with the bookmark attached. Go to step 2 on page 172.
Move	You can move bookmarks or screen memos to another folder. ▶ Select a destination folder ▶ Put a check mark for bookmarks or screen memos to be moved ▶ [Finish] ▶ YES
Edit title	▶ Edit the title. <ul style="list-style-type: none"> • For Bookmark, you can edit the title also by pressing [Edit] on the listing display or detailed display. • You can enter up to 12 full-pitch/24 half-pitch characters for a bookmark. If you press [Set] with a blank, the URL without "http://" or "https://" is registered. • You can enter up to 11 full-pitch/22 half-pitch characters for a screen memo. If you press [Set] with a blank, the screen memo is registered as "No title".
Copy (Copy URL)	You can copy the URL of the bookmark. ▶ Select a start point for copying ▶ Select an end point for copying. • See page 361 for how to paste copied characters.
Copy (Copy to microSD)	See page 295.
Set as home URL	You can store the site as Home URL of Full Browser. ▶ YES <ul style="list-style-type: none"> • You can operate this only from the Bookmark List of Full Browser.
Add desktop icon	See page 114.
Ir/📠 transmission (Send Ir data)	See page 305.
Ir/📠 transmission (📠 transmission)	See page 306.
No. of bookmarks	You can display the number of bookmarks stored in the displayed folder.
Delete [Delete (Delete this)]	▶ Delete (Delete this) ▶ YES
Delete (Delete selected)	▶ Delete selected ▶ Put a check mark for bookmarks or screen memos to be deleted ▶ [Finish] ▶ YES
Delete (Delete all)	You can delete all bookmarks or screen memos stored in the folder. ▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

<Screen Memo>

Saving Site Contents

Save as a Screen Memo

You can save a displayed page as a screen memo to the FOMA phone. You can display the page saved as a screen memo without connecting to i-mode.

You can save up to 100 screen memos, however, the number of screen memos you can save decreases depending on the data volume.

- 1 From a page to be saved ▶ **[FUNC]**
 - ▶ **Screen memo** ▶ **Add screen memo** ▶ **YES**
 - ▶ **Select a destination folder.**

 
- See page 162 when screen memos are stored to the maximum.

Information

- Up to 11 full-pitch/22 half-pitch characters are stored for a title. For longer titles, the excess characters are deleted.
- If you save the Obtaining Completion display, its data file is saved as well. (The Obtaining Completion display for Chaku-uta Full® music files, for i-motion movies with playable deadline, or for the ToruCa files whose output from the FOMA phone is prohibited cannot be saved.) Some Obtaining Completion displays cannot be saved as screen memos. The display except the Obtaining Completion display is saved with a URL of that page of up to 256 half-pitch characters.
- When you save SSL pages, their SSL certificates are saved as well.
- The contents entered in the text box, or selected with the pull-down menu, check box, or radio button are not saved to screen memos.
- You can save up to 100 Kbytes per page. However, you can save up to 500 Kbytes of the i-motion Obtaining Completion display, up to 200 Kbytes of the Template Obtaining Completion display, up to 1 Kbyte of the ToruCa Obtaining Completion display, and up to 20 Kbytes of the Download Dictionary Obtaining Completion display.


Display a Screen Memo

- 1 ▶ **Screen memo**



Screen Memo Folder List

- 2 **Select a folder** ▶ **Select a screen memo.**

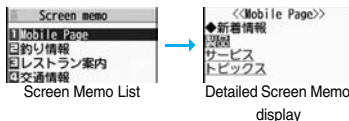


- Use to check other screen memos.


Information

- The page saved as a screen memo has the information at the time it was saved. This might differ from the latest information on the site.



Function Menu of the Screen Memo Folder List

Function menu	Operation/Explanation
Operate folder (Add folder)	See page 157.
Operate folder (Edit folder name)	See page 157.
Operate folder (Delete folder)	See page 157.
Security ON/ OFF	You can set the folder to open only when you enter your Terminal Security Code. ▶ Enter your Terminal Security Code ▶ YES The folder changes to “  ”. ● To release it, perform the same operation.
No. of memos	You can display the number of stored screen memos and protected screen memos in all folders.
Delete all	You can delete all screen memos. The folders will not be deleted. ▶ Enter your Terminal Security Code ▶ YES

Function Menu of the Screen Memo List

Function menu	Operation/Explanation
Move	See page 158.
Edit title	See page 158.
Protect ON/ OFF	You can protect screen memos not to be deleted. You can protect up to 50 screen memos, however, the number of screen memos you can protect decreases depending on the data volume. Protected items are indicated by “  ”. ● To release protection, perform the same operation.
No. of memos	You can display the number of stored screen memos and protected screen memos in the displayed folder.
Delete (Delete)	See page 158.
Delete (Delete selected)	See page 158.
Delete (Delete all)	See page 158.

Function Menu of the Detailed Screen Memo Display



Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message also by pressing () (). (See page 155)
Edit title	See page 158.
Protect ON/ OFF	See page 159.
Save image	See page 159.
Add to phonebook	See page 87.
Others (URL)	You can display the URL of the screen memo. ▶ URL
Others (Certificate)	See page 155.
Others (Sound effect)	See page 164.
Others (Retry)	You can play back the animation or Flash movie from the beginning. ▶ Retry ● When a part of the Flash movie is outside the display area, the Flash movie might not be played back.
Delete	▶ YES

Downloading Files or Data Items from Sites

You can download the files such as images and melodies from sites and save them to the FOMA phone. You can save some files directly to the microSD memory card.

Download Image

You can save the image displayed on a site or screen memo, and then set it as the Stand-by display, Wake-up display, or another display. You can save images, frames and marks for Deco-mail as well. You can save up to 3,500 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

- 1** From a site display/Detailed Screen Memo display ▶ () () ▶ **Save image**
▶ **Save image** or **Save BG image**
● When you save an image, select it.
- 2** **YES** ▶ **Select a destination folder.**
● See page 162 when images are stored to the maximum.
- 3** **To set it as a display, select “YES”.**
Go to “Set display” on page 274.

Information

- Up to 36 half-pitch characters are saved for a file name.
When the file name is not specified, a part of the downloaded URL or “imagexxx” (xxx denotes numerals) is saved as the file name.
- Even when an image is displayed on the site, it might not be displayed on the Picture viewer after saving it to the FOMA phone.
- The image satisfying the following conditions is saved as a Decomail-pictograph:
 - GIF or JPEG image
 - Image of 20 x 20 dots
 - Image without file restrictions
 - Image of 6 Kbytes or less
- The image satisfying the following conditions is saved as a frame or a mark:
 - Transparent GIF (except animation GIF)
 - The extension is “ifm”.
 - Image of Stand-by (480 x 854) or smaller
Images of Stand-by (480 x 854), VGA (640 x 480), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), and Sub-QCIF (128 x 96) are saved as frames, and others are saved as marks.
- You can save up to 100 Kbytes per image via i-mode, or 500 Kbytes per image via Full Browser.
- For Full Browser, you cannot save some images. You can save images in BMP format and PNG format only to the microSD memory card.


Download Melody

You can download melodies and set them as a ring tone and other tones. You can save up to 3,500 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

1 Bring up a melody downloadable site

- ▶ Select a melody ▶ Save ▶ YES
- ▶ Select a destination folder.

- See page 290 for operations while a melody is being played back.
- Select “Property” to display the melody information. (See page 291)
- See page 162 when melodies are stored to the maximum.
- See page 158 to save a screen memo.

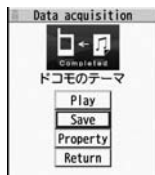

Obtaining Completion display

2 Select “YES” to set the downloaded melody as a ring tone ▶ Select an incoming type.**Information**

- For some melodies, the play part might have been specified. If you set the play-part-specified melody for a ring tone, it is played back according to the setting of “Position to play” of “Melody effect”.
- Some downloaded melodies might not be played back successfully.
- Up to 36 half-pitch characters are saved for a file name.
When the file name is not specified, a part of the downloaded URL or “melodyxxx” (xxx denotes numerals) is saved as the file name.
- Untitled melodies are indicated by “No title” on the Obtaining Completion display or list.
- You can save up to 100 Kbytes per melody.

Download PDF File

You can download PDF files from sites for display. You can save up to 3,500 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

1 Bring up a PDF file downloadable site

- ▶ Select a PDF file.

- With the PDF file that cannot be displayed unless you download all pages, the confirmation display appears asking whether to download all pages. Select “YES” to select the destination folder.
- If you have not downloaded all pages, you can additionally download the remaining pages by using “Download remain”.
- See page 310 for how to save the displayed PDF file to the FOMA phone. You can save the PDF file containing pages that have not been downloaded or the PDF file of which download was suspended midway as well.
- The password entry display might be displayed depending on the PDF file. Enter the password, and then select “OK”.
- See page 307 for operations while PDF file is displayed.

Information

- The file size of the PDF file you can download from i-mode sites is up to 2 Mbytes. You cannot download the PDF file in excess of 2 Mbytes.
- You might be able to display the failed-to-download PDF file by re-downloading.

Download Kisekae Tool File


You can download Kisekae Tool files from the site to change the ring tone, Stand-by display, icons, and others at a time. You can save up to 3,500 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

- You can download the pre-installed Kisekae Tool file from the "P-SQUARE" site. (See page 163)

1 Bring up a Kisekae Tool downloadable site

- ▶ Select a Kisekae Tool file ▶ Save
- ▶ YES ▶ Phone or microSD

- When you save a Kisekae Tool file to your FOMA phone, the confirmation display appears asking whether to set the Kisekae Tool file at a time.
- Select "Property" to display the Kisekae Tool information. (See page 292)
- See page 162 when Kisekae Tool files are stored to the maximum.
- See page 158 to save a screen memo.

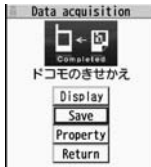

Obtaining Completion display

■ When downloading Kisekae Tool file is suspended

When you press (Ⓜ) (Quit) to suspend downloading or when downloading is suspended by an incoming call, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the Obtaining Completion display. When you select "Save pt.", select "Phone" or "microSD" to save. You can re-download the rest of the partially saved file from "Kisekae Tool" in "Data box".

Information

- You can save up to 2,078 Kbytes per Kisekae Tool file.


Download ToruCa File

You can download ToruCa files from sites. You can save up to 495 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

1 Bring up a ToruCa file downloadable site

- ▶ Select a ToruCa file ▶ Save ▶ YES
- ▶ Select a destination folder.

- Select "Display" to preview the ToruCa file. You can save the ToruCa file also by pressing (Ⓜ) (Save) while it is previewed.
- See page 162 when ToruCa files are stored to the maximum.
- Press (Ⓜ) (FUNC) and select "Add screen memo" to save the display as a screen memo. (See page 158)

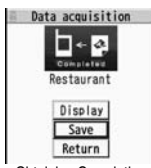

Obtaining Completion display

Download Template


You can download templates for Deco-mail from sites. You can save up to 100 templates including the pre-installed ones, however, the number of templates you can save decreases depending on the data volume.

- You can download the pre-installed templates from the "P-SQUARE" site. (See page 163)

1 Bring up a template downloadable site

- ▶ Select a template ▶ Save ▶ YES

- Select "Property" to display the information about the template. (See page 179)
- See page 178 for how to check the stored template.
- See page 162 when templates are stored to the maximum.
- See page 158 to save a screen memo.

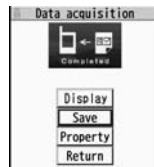

Obtaining Completion display

Information

- When no decoration is set for the template, you cannot save it.
- When a file is attached to the template, that file is deleted.
- When the image whose output from the FOMA phone is prohibited is inserted, the inserted image is deleted when no decoration is found, you cannot save the template.
- The title of the downloaded template takes the name of "YYYY/MM/DD hh:mm". (Y: year, M: month, D: date, h: hour, m: minute)
- You can download up to 200 Kbytes per template file, but when the number of characters used for the mail text exceeds 5,000 full-pitch characters or 10,000 half-pitch characters, or when the total of the image size inserted exceeds 90 Kbytes, you cannot save that template file.

Download Dictionary


You can download dictionaries from sites. You can save up to 10 dictionaries including the pre-installed ones.

- You can download the pre-installed dictionaries from the "P-SQUARE" site. (See page 163)

1 Bring up a dictionary downloadable site

▶ Select a dictionary ▶ Save ▶ YES

- Select "Property" to display the information about the dictionary. (See page 362)
- See page 158 to save a screen memo.

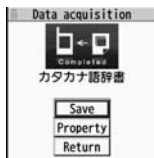

Obtaining Completion display

2 <Not stored> ▶ To set it as a dictionary file, select "YES".

- See page 361 for how to operate the downloaded dictionary.

Information

- You can save up to 20 Kbytes per dictionary.
- Depending on the site, you might not be able to download dictionaries.

Download Chara-den Images

You can download Chara-den images from sites.


You can save up to three Chara-den images including the pre-installed ones.

- You can download the pre-installed chara-den images from the "P-SQUARE" site. (See page 163)

1 Bring up a Chara-den image downloadable site

▶ Select a Chara-den image ▶ Save ▶ YES

- Select "Property" to display the information about the Chara-den image. (See page 288)
- See page 162 when Chara-den images are stored to the maximum.
- See page 158 to save a screen memo.

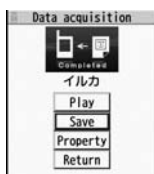

Obtaining Completion display

Information

- You can save up to 100 Kbytes per Chara-den image.

Search by i-mode

You can look for your favorite files on the site and download them. The number of files you can save differs depending on the files you download. You cannot change the site.

1 Each selection display ▶ Search by i-mode

▶ YES ▶ Select a file.

- The way of downloading differs depending on the file.

Information

- You are separately charged a packet communication fee.

■ When the data files are stored to the maximum

If the maximum number of data files is stored or there is not enough memory when you try to save the data files, the confirmation display appears asking whether to delete the unnecessary file and save new one.

- Perform this operation to save the following data:

- Images · i-motion movies · Melodies
- Chara-den images · Programs
- Chaku-uta Full® music files · PDF files
- i-oppli programs · ToruCa files · Templates
- Screen memos · Kisekai Tool files

1. YES ▶ Put a check mark for data files to be deleted

▶ (Finish) ▶ YES

As the data files except Chara-den images, templates, and screen memos are stored in the same storage area, you can select other files when deleting files. Select a folder and put a check mark for the files to be deleted. "*" appears on the folder which contains the checked files. "Finish" appears when you put it for the files whose amount of data is equal to memory shortage.

- You can put or clear check marks at a time by pressing (Func) (FUNC) and selecting "Select all in page/Release in page".
- Each time you press (Home) or (Memory), or each time you press (Func) (FUNC) and select "Change disp. mode", you can switch display/nondisplay of the folder size or data volume.
- When selecting a file in "MUSIC", you can show the lower level folders by pressing (Mail) (MAIL).
- Each time you press (CLR), the upper level folder returns.
- For programs, you need to delete many files when deleting other files because the data volume per program is large.
- If the maximum number of programs are stored when you execute "Move program" or try to save an i-oppli program or ToruCa file, you need to delete at least one file which belongs to the same type.
- If there is a security-applied folder for screen memos, the confirmation display appears asking whether to enable you to select screen memos in that security-applied folder. When you select "YES", you need to enter your Terminal Security Code.
- The file set for another function is indicated by "★".
- See page 214 for deleting mail-linked i-oppli.
- If you operate this when moving an i-oppli program from the microSD memory card to the FOMA phone, you cannot delete the i-oppli program with its data file on the IC card.

■About "P-SQUARE"

You can download the pre-installed Kisekai Tool file, templates, dictionaries, and Chara-den images from the "P-SQUARE" site (Japanese only).
 ☰ Menu → メニュー／検索 (Menu/Search) → ケータイ電話メーカー (Mobile Phone Maker) → P-SQUARE



QR code for accessing the site

Operations from Highlighted Information

You can easily make a call, send mail, display Internet web pages, start One Seg, book programs, and set timer recordings using highlighted information (phone numbers, mail addresses, URLs, melodies, images, and so on) displayed on sites and in mail.

- The Web To, Phone To/AV Phone To, Mail To, i-ϕpli To, Media To and Address Link functions might not be available depending on the mail sent from a personal computer or the site.
- You might be able to use the Web To, Phone To/AV Phone To, Mail To, or i-ϕpli To function using highlighted information other than a phone number, mail address or URL.
- In B Mode of 2in1, the Mail To function is not available.

Phone To/AV Phone To Function

You can make voice calls, videophone calls or PushTalk calls by using phone numbers or similar information displayed on sites and in mail.

- The Phone To function to make a videophone call is called the AV Phone To function.

1 Select a phone number or similar information ▶ Select a dialing type.

- When you select "Select image", select an image to be sent to other party during a videophone call.
- Select "SMS" to compose an SMS message to send to the phone number set as the destination address. Go to step 3 of "Composing SMS Messages to Send" on page 206.
- The choices for dialing types may not be displayed when the phone number is prefixed by "tel:" or "tel-av:". Go to step 2.

2 Dial

- To make an international call, select "Int'l dial assist". (See page 58)
- To set Caller ID Notification, select "Notify caller ID". (See step 2 on page 47)

Information

- You cannot make a call in Horizontal Open Style.

Mail To Function

You can send mail by using mail addresses or similar information displayed on sites and in mail.

1 Select a mail address or similar information.

The destination mail address is already entered in the address field.

Go to step 3 on page 172.

Web To Function

You can access Internet web pages, via i-mode or Full Browser, from URL or similar information displayed on sites or in mail.

1 Select a URL or similar information

▶ i-mode or Full Browser ▶ YES

- When the URL or similar one contains the information of i-mode or Full Browser, you are connected via the function which corresponds to the information.
- To cancel during connection, select "Cancel". To cancel while obtaining a page, press (Quit).

i-ϕpli To Function

You can start i-ϕpli programs from URLs (links) displayed on sites and in mail.

1 Select i-ϕpli information ▶ YES

i-ϕpli starts.

Information

- Even if i-mode mail text contains a link to start an i-ϕpli program, you cannot quote the link when forwarding or replying to. Also, you cannot quote it when using DoCoMo keitai datalink or infrared data exchange function.

Media To Function

You can start One Seg, book programs, or set timer recordings from the information (links) displayed on sites and in mail.

1 Select One Seg information ▶ YES

One Seg or the program booking/timer recording starts.

- When the program booking/timer recording function starts, press (Finish) to book a program or set timer recording.

To change contents you want to book/set, go to step 1 of "Book Program" on page 253 or step 1 of "Timer Recording" on page 253.

Information

- You may not be able to use the Media To function even if information is highlighted.

Address Link Function

You can bring up a map from the postal address shown in a site or others or can use the location information on the GPS compatible *i-appli* program. You can send the location information by *i-mode* mail as well.

1 Select the location information such as postal address ▶ Select an item.

- Run** *i-appli* Selects and starts a GPS compatible *i-appli* program.
- Read a map** Connects to the map site and displays a map.
- Paste to mail** Converts the location information into a URL and composes an *i-mode* mail message with the URL pasted to the text.
- Location info (Check loc. info)**
 Displays the details of the selected location information.

<i-mode Settings> Setting i-mode

1 ▶ i-mode settings ▶ Do the following operations.

Item	Operation/Explanation
Scroll	You can set the number of lines that are scrolled for when you use while displaying a site or screen memo. ▶ Select the number of lines.
Character size	See page 115.
Set image display	You can set whether to display images or Flash movies included on sites or in screen memos. ▶ ON or OFF
Set connection timeout	See page 164.
Host selection	See page 165.
motion auto-play	See page 169.
Use phone information	To display a Flash movie while a site or screen memo is displayed, the information in the FOMA phone may be used. You can select whether to permit the information to be used for that case. ▶ YES or NO
Sound effect setting	You can set whether to make an effect tone sound for when you display a Flash movie while a site or screen memo is displayed. ▶ ON or OFF
Doc. display settings	See page 310.
i-mode arrival act	See page 82.

Item	Operation/Explanation
Check settings	You can check each of "i-mode settings".
Reset last URL	See page 155.

Information

<Set image display>

- Even when "ON" is set, images might not be displayed correctly. In this case, "" is displayed.
- When "OFF" is set, "" is displayed and the data file is not received.
- If you change this setting, "Set image display" of "User settings" of One Seg is also changed.

<Use phone information>

- The available information is as follows:
 - Date and time set by "Set time"
 - Reception level of radio waves
 - Battery level
 - Sound volume set by "Phone" of "Ring volume"
 - Language selected by "Select language"
 - Model name and serial number of FOMA phone

<Sound effect setting>

- Even when "ON" is set, the effect tones may not sound depending on Flash movies.

<Set Connection Timeout> Setting Connection Timeout

It may take long to obtain some sites. You can set the time to wait before canceling obtaining. Obtaining is not canceled automatically when "Unlimited" is set.

1 ▶ i-mode settings ▶ Set connection timeout ▶ Select a timeout.

Information

- Even when you have set "Unlimited", you may be disconnected owing to radio wave conditions.

Changing a Host from i-mode (ISP Connection Communication)

※Normally, you do not need to change this setting.

You can set the host (APN) to use for receiving services other than i-mode (DoCoMo).

If you change this setting, you will not be able to use i-mode.

- 1 > i-mode settings > Host selection > Highlight <Not recorded> and press (Edit) > Enter your Terminal Security Code.

- If you select a stored host, the setting is changed to the selected one.
- To delete the stored host, press (FUNC), select "Delete", enter your Terminal Security Code, and then select "YES".

2 Do the following operations.

Item	Operation/Explanation
Host name	▶ Enter a host name. ● You can enter up to 9 full-pitch/18 half-pitch characters.
Host number	▶ Enter a host number. ● You can enter up to 99 half-pitch alphanumeric characters.
Host address	▶ Enter a host address. ● You can enter up to 30 half-pitch alphanumeric characters.
Host address 2	▶ Enter a host address 2. ● You can enter up to 30 half-pitch alphanumeric characters.

3 Press (Finish).

Information

- If you set any other host than i-mode, "Pake-Houdai" or "Pake-Houdai Full" are not applied.

Operating SSL Certificates

- 1 > Operate certificate > Certificate > Highlight a certificate and press (FUNC) > Do the following operations.

Item	Operation/Explanation
Certificate info	The subject name, author, validity period, and serial number of the certificate are displayed. ● You can check the certificate also by pressing (Select) instead of (FUNC).

Item	Operation/Explanation
Valid/Invalid	The selected item is invalidated; then " " changes to " ". ● When you select an invalid certificate, it will be validated. ● If you set a certificate to invalid, you cannot display the sites with that SSL certificate. ● You cannot set "DoCoMo Cert 2" to "Invalid".

■ Certificates used for SSL communication

Certificate

... Certificates issued by the authenticating company and stored in the FOMA phone at purchase.

DoCoMo Certificate

... Certificates required for connecting to the FirstPass Center or FirstPass sites; they are stored on the UIM (green/white).

User Certificate

... Certificates downloaded from the FirstPass Center by selecting "Client certificate" from the i-mode menu; they are stored on the UIM (green/white).

Setting FirstPass

User certificates verify that you have subscribed to the FOMA service. Downloaded user certificates are stored on the UIM for the use on FirstPass sites. When you cannot display a FirstPass site because the user certificate on the UIM has expired or the required user certificate is not stored on the UIM, you can request the issue and download the user certificate from the FirstPass Center.


- You can request and download user certificates from the FirstPass Center.
- This function is not available with the blue UIM.
- The display and operating method displayed in the FirstPass Center site are subject to change.
- To show FirstPass sites, you can use Full Browser as well.
- You cannot send/receive mail or receive Messages R/F while connected to the FirstPass Center.
- Set the date and time using "Set time" beforehand to connect to the FirstPass Center.
- This function is not available overseas.


■Client Authentication

- With the FOMA phone, server authentication and client authentication are performed for safer data exchange. The site and your FOMA phone exchange certificate, check the other party's certificate and verify each other for safer communication service. By getting client authentication, you can enjoy more secure communication services.
- Client authentication is available via the Internet communication from the FOMA phone or via the Internet communication with the FOMA phone connected to a personal computer. To use the personal computer for the client authentication, you need to install the FirstPass PC software from the provided CD-ROM.
For details, refer to "FirstPassManual (PDF format)" in the "FirstPassPCsoft" folder on the CD-ROM. Adobe® Reader® (version 6.0 or higher is recommended) is required to see "FirstPassManual (PDF format)". If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it.
For details such as how to use it, refer to Adobe® Reader® Help.

Access FirstPass Center

You can perform user certificate operations on the site of the FirstPass Center site.

- 1  ▶ Operate certificate ▶ Client certificate ▶ English

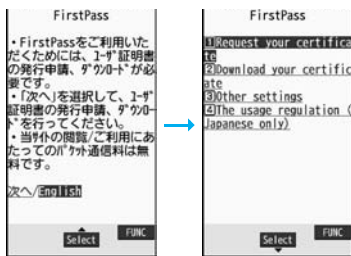

Site display for the FirstPass Center

Information

- Before using the FirstPass Center, select "The usage regulation (Japanese only)" and carefully read the regulation.
- You are not charged a packet communication fee for connecting to the FirstPass Center.

Request Issue of User Certificate for Download

You need to request the issue of the user certificate before you download it. When requesting the issue of your user certificate is completed, download the user certificate. After the downloading is completed, it is saved on the UIM and the FirstPass sites will be displayable.

- 1 Site display for the FirstPass Center ▶ Request your certificate ▶ Continue

- For an update, the message "Updating user certificate" is displayed.
- When you have already requested the issue of the user certificate, select "Download" from the site display for the FirstPass Center, go to step 3.



- 2 Enter your PIN2 code.

- Enter your PIN2 code within 60 seconds. When the code is not entered within 60 seconds, the connection is cut off as an error entry.
- See page 118 for PIN2 code.



- 3 Download ▶ Continue

- If you do not download the user certificate immediately, select "Menu". From the confirmation display asking whether to close the SSL page, select "YES" to return to the site display for the FirstPass Center.

Information

- Before downloading a new or an updated certificate, be sure to request the user certificate to be issued. User certificates cannot be downloaded until the request for issue has been made.

Access Sites with User Certificate

You can connect to FirstPass sites with your user certificate.

- 1 Bring up a FirstPass site ▶ Select an item ▶ YES

- 2 Enter your PIN2 code.

- Enter your PIN2 code within 60 seconds. When the code is not entered within 60 seconds, the connection is cut off as an error entry.
- See page 118 for PIN2 code.

Information

- If you try to connect to the FirstPass site without the user certificate or when its available period is expired, the confirmation display appears asking whether to continue connecting to the site. Select “NO” to return to the previous page. Download or update the user certificate from the FirstPass Center site and then access the site again.
- The packet communication fee for accessing the FirstPass site is included in Pake-Houdai or Pake-Houdai Full.


Request Revocation of User Certificate

You can revoke the downloaded user certificate.

1 Site display of the FirstPass Center

- ▶ Other settings ▶ Revoke your certificate
- ▶ YES ▶ Enter your PIN2 code.

- Enter your PIN2 code within 60 seconds. When the code is not entered within 60 seconds, the connection is cut off as an error entry.
- See page 118 for PIN2 code.

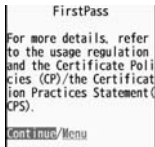2 Continue ▶ Continue ▶ Continue**Information**

- To use FirstPass after revoking a certificate, you need to apply again for your user certificate to be issued and then download it.
- See page 165 for how to view the download user certificate.

<Certificate Host>

Changing a CA Center

※Normally, you do not need to change this setting.

You can set the host for downloading the user certificate.

1 [OK] ▶ Operate certificate ▶ Certificate host

- ▶ Highlight <Not recorded> and press



- If you select a stored host, the setting is changed to that host.
- To delete the stored host, press [FUNK], select “Delete”, enter your Terminal Security Code, and then select “YES”.

2 Enter your Terminal Security Code

- ▶ Do the following operations.

Item	Operation/Explanation
Default URL	▶ Enter a default URL. ● You can enter up to 100 half-pitch alphanumeric characters.
Host address	▶ Enter a host address. ● You can enter up to 99 half-pitch alphanumeric characters.

3 Press [Envelope] (Finish).**Before Using FirstPass**

- FirstPass is DoCoMo's electronic certification service. By using FirstPass, client authentication is enabled, whereby the site and your FOMA phone exchange certificates, check the other party's certificate and perform mutual authentication.
- When requesting issue of a user certificate, carefully read “The usage regulation (Japanese only)” on the display, agree to this, and then make the request.
- You need to enter the PIN2 code to use the user certificate. Once you have entered your PIN2 code, all subsequent operations will be deemed to be done by you, so be careful not to let anyone else use your UIM or PIN2 code.
- If your UIM is lost or stolen, “DoCoMo Information Center” on the back page of this manual can revoke your user certificate.
- DoCoMo bears no obligation or responsibility with regard to the sites and information provided by FirstPass sites. Please solve the problem between you and FirstPass sites.
- DoCoMo and the CA do not guarantee security when you use FirstPass and SSL, so you should use them on your own judgment and responsibility.

What is i-motion?

i-motion movies are composed of video, sound and music, and you can play them back obtaining from i-motion compatible sites into your FOMA phone. You can set the i-motion movie for a ring tone.

Two types of i-motion movies are available as shown below. The type of the obtained i-motion movie differs depending on the site or file.

You can save up to 10 Mbytes per i-motion movie.

Categories		Description
Type	Playback type	
Standard (normal) type (can be saved)	Plays back after obtaining	Plays back after obtaining all the data of an i-motion movie.
	Plays back while obtaining	Plays back while obtaining an i-motion movie. After obtaining, you can play it back in the same way as "Plays back after obtaining".
Streaming type (cannot be saved)	Plays back while obtaining	Plays back while obtaining an i-motion movie. The data is deleted after playback, so you cannot play it back again or save it to the FOMA phone.

<Obtain i-motion Movie>


Obtaining i-motion Movies from Sites

Play Back an i-motion Movie Obtained from a Site

1 Select an i-motion movie from an i-motion obtainable site ▶ Play

See page 281 for the operation during playback.

- If an i-motion movie can be played back during obtaining, it will be played back during obtaining.
- If "i-motion auto-play" is set to "ON", the i-motion movie will be played back automatically after it is obtained.
- Select "Property" to display the i-motion information. (See page 282)
- See page 158 to save a screen memo.

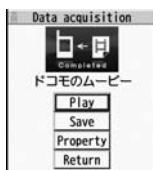

Obtaining Completion display

Information

- See page 281 for the file formats of playable i-motion movies.
- Even when you stop playing back the data of standard (normal) type while obtaining, obtaining still continues.
- Even if "i-motion auto-play" is set to "ON", the data is not automatically played back after obtaining when it is played back while obtaining.
- For an i-motion movie that has restrictions on the number of playbacks, playable period, or playable deadline, "⏸" is displayed at the head of the title. An i-motion movie with the playable period restricted cannot be played back before or after the restriction period. If you remove the battery and keep it aside for a long time, the date/time information in your FOMA phone might be reset. In that case, you cannot play back the i-motion movie that has restrictions on the playable period and playable deadline. See "i-motion info" for checking the playback restrictions.
- "i-motion info" of an i-motion movie and deadline information on the display that notifies you of a playable deadline are shown by date/time with "Summer time" set to "OFF".
- Depending on the line speed, line state, or radio wave conditions, the playback during obtaining might be suspended or the images might be distorted. You can repeatedly play back the standard (normal) type of i-motion movies after obtaining, but cannot play back the streaming type of i-motion movies.

Save an i-motion Movie

You can save the obtained i-motion movie to your FOMA phone and set it for a ring tone, the Stand-by display, and the Wake-up display. You can save up to 101.6 Mbytes of files including other data files. (See page 443)

1 Obtaining Completion display ▶ Save

▶ YES ▶ Select a destination folder.

- See page 162 for when i-motion movies are stored to the maximum.


2 Select "YES" to execute "Set i-motion".

Go to "Set i-motion" on page 282.

Information

- Depending on the accessed site or an i-motion movie, you might not be able to obtain the data or play it back during obtaining, or play it back after obtaining. Also, you cannot obtain an i-motion movie in ASF format.

■ When downloading i-motion movie is suspended

When you press  (Quit) to suspend downloading or when downloading is suspended by an incoming call, the confirmation display appears asking whether to resume downloading.

Select "YES" to resume downloading the remaining part. Select "NO" to show the Obtaining Completion display for a partially savable i-motion file. Select "Save pt." to save that file to any folder in "i-motion" in "Data box".

You can re-download the rest of the partially saved file from "Data box".

- The file name of the partially saved i-motion movie is "movie".
- When the playable period or playable deadline of the partially saved i-motion movie has expired, you cannot download the remaining segments of the file. You can delete the partially saved file when you try to download the file.

Information

- Depending on the i-motion movie, you might not be able to save the obtained data to the FOMA phone.
- Partially saved i-motion movies cannot be played back from Data Box.

<  motion Auto-play >

Setting Automatic Replay of i-motion Movies

You can set whether to play back an i-motion movie automatically, for when you have obtained a standard (normal) type of i-motion movie from a site or have selected a screen memo which contains a standard (normal) type of i-motion movie.

1  i-mode settings  i-motion auto-play
▶ ON or OFF

Information

- Note that a streaming type of i-motion movie is played back automatically even if this function is set to "OFF".

What is i-Channel?

DoCoMo or IPs (Information Providers) distribute news, weather forecast and others as graphical information to i-Channel mobile phones. Information is periodically received and tickers flow on the Stand-by display for the latest information. You can press the i-Channel key to show the Channel List. (See page 170)

In addition, by selecting a channel you want to see on the Channel List, you can obtain detailed information. Also, two types of channels are available, "Basic channel" and "Favorite channel". "Basic channel" is provided by DoCoMo and comes with the FOMA phone, so you can browse that channel as soon as you start using i-Channel. The packet communication fee that is charged for auto-updates of information distributed through "Basic channel" is not charged.



"Favorite channel" is provided by IPs (Information Providers) other than DoCoMo, so you can register and use any channels you like. The packet communication fee that is charged for auto-updates of information distributed through "Favorite channel" is not included in the i-Channel service fee. However, for both "Basic channel" and "Favorite channel", you are charged the i-Channel service fee plus packet communication fee to browse detailed information from the Channel List. Also, the packet communication fee that is charged for auto-updates of information distributed through the Basic channel during international roaming is not included in the i-Channel service fee.

- i-Channel is a pay service which is available on a subscription basis.

(You need to subscribe to i-mode to apply for i-Channel.)

- For details on i-Channel, refer to the "Mobile Phone User's Guide [i-mode]".
- The i-Channel service is provided in Japanese only.

Information


- When the FOMA phone is turned off or if radio wave conditions are bad such as when it is out of the service area, you may not be able to receive information even if you have contracted to the i-Channel service. In that case, select the channel for unsigned subscribers that appears by pressing ; then you can now receive information, and tickers flow on the Stand-by display. If your FOMA phone remains in the default state, you may not be able to receive information. Press , and then information is received and tickers flow on the Stand-by display.
- To receive i-Channel information overseas, you are charged a communication fee by channel (domestic talk-free service does not apply).
- After you cancel the contract for the i-Channel service, the ticker setting is automatically set to off.
- If you cancel the contract for the i-mode service before you cancel the contract for the i-Channel service, the ticker setting remains on.

Using i-Channel

When "Ticker ON/OFF" is set to "ON", up to 10 ticker files for the latest information flow repeatedly on the Stand-by display. If you want to know more about the information, you can obtain the details from the Channel List.

1 Press .

The Channel List appears regardless of the "Ticker ON/OFF" setting.

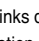

- "" blinks during receiving information.



2 Select an item (link).



Information

- The ring tone does not sound and the vibrator does not work even when information comes in. In addition, the Call/Charging indicator does not light or flicker.
- Tickers are not displayed in the following cases:
 - When the information is automatically updated after that or when you press  to receive the latest information, tickers automatically flow.
 - When the UIM is replaced.
 - When "Host selection" is changed.
 - When "Reset i-Channel" is executed.
 - When "Reset settings" is executed.
 - When "Initialize" is executed.However, the information might not be automatically updated when "Host selection" is changed. To receive the latest information, press  to display the Channel List.
- When "Host selection" is changed, the i-Channel connecting end is also changed. (In ordinary, you do not need to change the setting.)
- Depending on your usage state, you might receive information from i-Channel when you display the Channel List.

<Ticker ON/OFF>

Setting How Ticker is Displayed

1 i-Channel

▶ Do the following operations.

Item	Operation/Explanation
Channel list	You can display the Channel List. Go to step 2 on page 170.
Ticker ON/OFF	You can set whether to display tickers on the Stand-by display. ▶ ON or OFF
Ticker scroll speed	You can set the ticker flowing speed. ▶ Select a speed.
Reset i-Channel	You can initialize the ticker information, set "Ticker ON/OFF" to "ON", and "i-Channel ticker" of "Private window" to "OFF". ▶ Enter your Terminal Security Code ▶ YES


Information

- You can perform "Ticker ON/OFF", "Ticker scroll speed", and "Reset i-Channel" for each mode of 2in1. However, i-Channel information is initialized for all modes. Further, when 2in1 is deactivated, they become common to the settings in A Mode.

<Ticker ON/OFF>

- When "Ticker ON/OFF" is set to "ON" and an animation is set for the Stand-by display, the playback is suspended after five seconds, and tickers start flowing.
- In Public Mode (Drive Mode), or during Lock All, tickers are not displayed.

<Reset i-Channel>

- Tickers are not displayed after you execute "Reset i-Channel". When the information is automatically updated after that or when you press  to receive the latest information, tickers automatically flow.

Mail



What is i-mode Mail?	172
Composing i-mode Mail/Deco-mail	
Composing i-mode Mail to Send	Compose Message> 172
Composing Deco-mail to Send	175
Composing Deco-mail by Using Template	<Template> 178
Attaching Files.	<Attachments> 179
Using Photo-sending	<Photo-sending> 181
Receiving and Operating i-mode Mail	
Receiving i-mode Mail Automatically	<Mail Auto-receive> 182
Receiving Selected i-mode Mail	<Receive Option> 183
Checking whether Center Holds i-mode Mail	<Check New Message> 183
Replying to Received i-mode Mail	<Reply><Reply with Quote> 184
Forwarding Received i-mode Mail	<Forward> 184
When i-mode Mail with Files Attached/Pasted is Received.	184
Operating Mail Box	
Displaying Mail from Inbox/Outbox/Draft	<Inbox><Outbox><Draft> 186
How to See Inbox/Outbox/Draft List and Detailed Display	187
Managing Mail Messages	191
Using Mail History	
Displaying Sent/Received Mail Record	<Sent Address> <Received Address> 195
Setting Mail Settings	
Sorting Mail Automatically to Each Folder	<Auto-sort> 196
Creating Mail Group	<Mail Group> 197
Setting Mail and Messages R/F	<Mail Settings> 198
Using Message Services	
Receiving Messages R/F Automatically	<Receive Message R/F> 200
Reading Received Messages R/F	<Display Message R/F> 201
Using Area Mail	
What is Area Mail? (Scheduled to be provided)	202
Receiving Area Mail	202
Setting Area Mail	<Area Mail Settings> 202
Using Chat Mail	
Using Chat Mail	<Chat Mail> 203
Creating Chat Group	<Chat Group> 205
Using SMS	
Composing SMS Messages to Send	<Compose SMS> 206
Receiving SMS Messages Automatically	<Receive SMS> 207
Checking whether Center Holds SMS Messages	<Check New SMS> 208
Setting SMS	<SMS Settings> 208
Using Web Mail	
Using Web Mail	<Web Mail> 208

What is i-mode Mail?

Once you subscribe to i-mode, you can exchange e-mails over the Internet as well as with other i-mode phones.

You can attach up to 10 files (JPEG, ToruCa, PDF, etc.) within 2 Mbytes in total besides mail text. The i-mode mail also supports Deco-mail, so you can change the character color, character size, and background color of mail text. Further, a variety of Decomail-pictographs you can insert into text are pre-installed, so you can easily compose pleasant messages to send.

- For details on the i-mode mail, refer to the "Mobile Phone User's Guide [i-mode]".


<Compose Message>

Composing i-mode Mail to Send

You can compose and send i-mode mail messages.

You can save up to 1,000 sent i-mode mail messages including SMS messages to the Outbox.

See page 175 for composing Deco-mail.

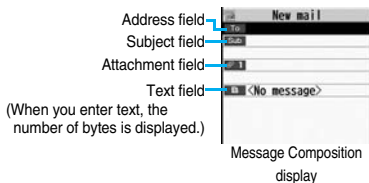

2 Select the address field ▶ Select an item.

Phonebook Call up a Phonebook entry and select a phone number or mail address.

Sent address Select a phone number or mail address and press (Select).

Received address Select a phone number or mail address and press (Select).

Mail group Select a mail group.

Enter address Enter a mail address or phone number.

- You can enter up to 50 half-pitch characters.
- If the destination is an i-mode phone, you can send mail also by entering only the part preceding the "@" mark of a mail address.
- See page 173 for sending to multiple destination addresses.
- See page 173 for deleting an added address.

3 Select the subject field ▶ Enter a subject.


- You can enter up to 100 full-pitch/200 half-pitch characters.

4 Select the attachment field ▶ Select an item.

- See page 179 for how to select an attachment.

5 Select the text field ▶ Enter text.

- You can enter up to 5,000 full-pitch/10,000 half-pitch characters.
- See page 174 for pasting a header or signature.
- You can select a Decomail-picture by pressing and holding for at least one second.

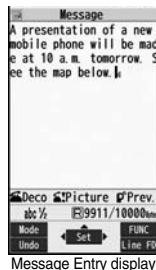

6 Press (Send).

The animation display during transmission appears and the mail message is sent.

- To cancel sending midway, press (Cancel) or press and hold (CLR) (for at least one second). However, the mail message might be sent depending on the timing.

7 OK


Information






- Depending on the radio wave conditions, the characters might not be displayed correctly at the destination.
- If you send an i-mode mail message to other carrier's mobile phone (au/SoftBank/Tu-Ka) with a pictograph entered, the pictograph is automatically converted into a similar pictograph at the receiving end. Depending on the model or function of the receiving end's mobile phone, however, the pictograph might not be correctly displayed or be converted into a character or "=" when no corresponding pictograph is found.
- When the number of sent mail messages exceeds the FOMA phone's storage maximum, they will be overwritten from the oldest one. However, protected sent mail messages cannot be overwritten.
- You cannot compose an i-mode mail message when the number of sent mail messages in the Outbox has reached the maximum and those messages are all protected, or when 20 mail messages are saved to the Draft or the Draft is full. Release the protection for sent mail messages, or send/delete draft mail messages, and then operate again.
- When you select "Compose message" from the Function menu while entering a phone number, the mail address is entered as a destination address if the phone number and mail address are stored in a Phonebook entry. When multiple mail addresses are stored in the Phonebook entry, the first mail address is entered.
- If you try to send the mail whose address is a phone number headed by "184"/"186", the confirmation display appears asking whether to delete prefix numbers and send the mail.


Information

- You cannot send mail to the addresses that include a comma (,).
- You can enter an address in the To, Cc and Bcc fields.
- If the destination address has been stored in the Phonebook with a secret code, the secret code will be added automatically at sending. However, even if a secret code is stored in the Phonebook, the secret code will not be added and the mail will be sent as ordinary i-mode mail unless the address is a phone number or "phone number@docomo.ne.jp".
- If you store the secret code and send mail to a mail address other than that of DoCoMo mobile phones, you might not receive the error message for unknown address.
- The recipients might not be able to receive the full length of the subject depending on their phones.
- You can send up to 2,000 full-pitch characters in text to the i-mode phone of the mova service.
- Each line feed is counted as one full-pitch character, and a space is counted as one full-pitch or half-pitch character.
- The mail message you entered a Decomail-pictograph becomes a Deco-mail message.
- In B Mode of 2in1, you cannot compose i-mode mail.

Function Menu of the Message Composition Display

Function menu	Operation/Explanation
Send	You can send the mail message. Go to step 7 on page 172.
Preview	Check the address, subject, text and attachments before sending. • You can send the mail message by pressing  (Send).
Save	When composing or editing the mail, you can save it to the Draft.

Function menu	Operation/Explanation
Operate receiver (Add receiver)	<p>You can add multiple addresses in the address field to send the same i-mode mail to multiple recipients simultaneously. You can send the same mail to up to five addresses at the same time.</p> <p>▶ Add receiver ▶ Select an item.</p> <p>Phonebook ... Call up a Phonebook entry and select a phone number or mail address.</p> <p>Sent address ... Select a phone number or mail address and press  (Select).</p> <p>Received address ... Select a phone number or mail address and press  (Select).</p> <p>Enter address ... Enter a mail address or phone number.</p> <ul style="list-style-type: none"> • To consecutively add addresses, select <Not entered> and repeat the above steps. • Press  (FUNC) and select "Delete receiver" to delete the selected mail address. Select "YES". • Press  (FUNC) and select "Change rcv. type" to change the type of mail. (See page 173) • Select an entered mail address on the Mail Composition display to show the Address List. <p>▶  (Finish)</p>
Operate receiver (Delete receiver)	<p>You can delete the selected address when there are multiple addresses.</p> <p>▶ Delete receiver ▶ YES</p>
Operate receiver (Change rcv. type)	<p>▶ Change rcv. type ▶ Select a type of address.</p> <p>To This is the direct destination address. "To" recipients are displayed at the receiving ends.*</p> <p>Cc Specify to let parties know the mail contents in addition to the direct recipients. "Cc" recipients are displayed at the receiving ends.*</p> <p>Bcc Specify to hide the recipients from others. "Bcc" recipients are not displayed at the receiving ends.</p> <p>※ They might not be displayed depending on the mobile phone, device, or mail software of the receiving end.</p>
Operate att. file (Activate camera)	<p>You can shoot and attach an image or i-motion movie.</p> <p>▶ Activate camera ▶ Select a shooting mode.</p> <ul style="list-style-type: none"> • See page 139 and page 141 for how to shoot.

Function menu	Operation/Explanation
Operate att. file (Attach file)	See page 179.
Operate att. file (Delete att. file)	See page 180.
Template (Load template)	<p>You can read in a template and compose a Deco-mail message.</p> <p>▶ Load template</p> <ul style="list-style-type: none"> When the text has already been entered, the confirmation display appears asking whether to delete the text. <p>▶ Select a template.</p> <p>The contents of the template are entered into the text.</p> <ul style="list-style-type: none"> While selecting a template, press  (Play) to check the contents of the template. See page 175 for composing Deco-mail.
Template (Save template)	<p>You can save the Deco-mail you are composing as a template.</p> <p>▶ Save template ▶ YES</p> <ul style="list-style-type: none"> See page 162 when templates are stored to the maximum. See page 178 for how to check the stored template.
Add header/ sig.	<p>You can paste a header/signature at the beginning or ending of the text of the i-mode mail message.</p> <p>▶ Add header or Add signature</p> <ul style="list-style-type: none"> You need to store the header/signature beforehand. (See page 199)

Information

<Operate receiver>

- You cannot add any addresses if the address field for "To", "Cc", and "Bcc" already contains five addresses in total or contains no addresses.
- You cannot send i-mode mail if the "To" field is blank.

<Template (Save template)>



- The subject of i-mode mail you are composing will be the title of the template. If no subject is entered, the title takes the name of "YYYY/MM/DD hh:mm".
(Y: year, M: month, D: date, h: hour, m: minute)



Information


<Add header/sig.>

- You cannot paste a header/signature if the text, including the header/signature, would exceed 5,000 full-pitch or 10,000 half-pitch characters.
- If the decoration such as font color or character size is set for the top or end of text, the header or signature will be decorated as well.

Function Menu of the Message Entry Display

Function menu	Operation/Explanation
Decorate mail	See page 176.
Template (Load template)	See page 174.
Template (Save template)	See page 174.
Full pitch/Half pitch	See page 358.
Copy	See page 360.
Cut	See page 360.
Paste	See page 361.
Undo	<p>After entering or deleting characters, pasting data, or operating on a decoration, you can undo your most recent operation. You can do it up to twice.</p> <ul style="list-style-type: none"> You can undo the operation also by pressing  (MENU) ( Undo).
Pictograph/ symbols (Pictograph)	See page 358.
Pictograph/ symbols (Symbols)	See page 358.
Pictograph/ symbols (Space)	See page 358.
Phrase/code/ quote (Common phrases)	See page 358.
Phrase/code/ quote (Kuten code)	See page 359.
Phrase/code/ quote (Input time)	See page 359.
Phrase/code/ quote (Quote phonebook)	See page 359.

Function menu	Operation/Explanation
Phrase/code/ quote (Quote own data)	See page 359.
Phrase/code/ quote (By position loc.)	You can obtain the current location information by using the GPS function, convert that information into the URL, and then paste it to the i-mode mail text. ▶ Paste location ▶ By position loc. ▶  (Set) ▶ YES
Phrase/code/ quote (From loc. history)	You can convert the location information retained in Location History of the GPS function into the URL, and paste it to the i-mode mail text. ▶ Paste location ▶ From loc. history ▶ Select a location record ▶ YES
Phrase/code/ quote (From phonebook)	You can convert the location information stored in the Phonebook into the URL, and paste it to the i-mode mail text. ▶ Paste location ▶ From phonebook ▶ Select a Phonebook entry ▶  (Select) ▶ YES
Phrase/code/ quote (Bar code reader)	See page 146.
Char. input/dict. (Own dictionary)	See page 361.
Char. input/dict. (Learned words)	See page 361.
Char. input/dict. (Change input mode)	See page 359.
Char. input/dict. (Candid. disp. size)	See page 359.
Char. input/dict. (Predict)	See page 358.
Char. input/dict. (Candidate display)	See page 359.
Char. input/dict. (Character set time)	See page 359.
Char. input/dict. (2/NIKO-touch guide)	See page 359.


Function menu	Operation/Explanation
Help	See page 359.
JUMP	See page 359.
Preview	You can check the contents of the text before sending. ● You can preview also by pressing  .

Information

<Undo>

- Once you use "Undo" to return to the previous status, you cannot cancel this by using "Undo" again.
- If you close the Message Entry display, you cannot return to the previous status by using "Undo" when you re-open it. (However, after you have exited "Preview", you can return to the previous status by "Undo".)


<Phrase/code/quote>

- You can paste up to 512 half-pitch characters by Paste Location, and the pasted URL is counted as the number of characters in the mail text.
- "  " is inserted before the URL pasted by Paste Location. However, you can delete it while editing.


Composing Deco-mail to Send

When editing an i-mode mail message, you can change the size of the font and the color of the background as well as inserting images, thus composing your own original mail.

You can compose Deco-mail also using the templates (patterns). (See page 178)

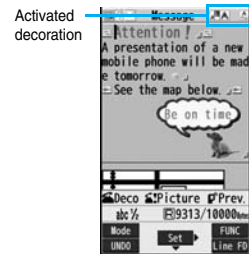

Entering characters

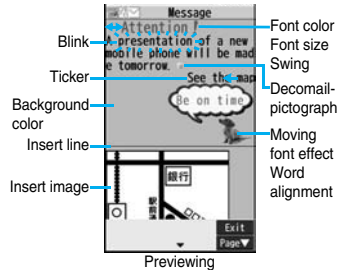

Previewing

- 1 Perform the operations in step 1 through step 3 on page 172.

2 Select the text field

▶ Decorate the text using Palette.

- See page 176 for how to use Palette.

To enter text after selecting decorations




▶ Select one of decorations

▶ Enter text.

To set decorations after entering text

Enter text ▶ ▶ (Select area)


Go to "Select area" on page 177.

- You can enter up to 5,000 full-pitch/10,000 half-pitch characters. (The number of characters you can enter decreases depending on the decoration.)
- Once you decorate the mail text, " " appears.
- You can preview the contents of the text by pressing .
Press  (Exit) to finish previewing and return to the former display.

3 Press (Set).

The Message Composition display is displayed.
Go to step 6 on page 172.

Information

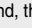- Even if you delete the decorated characters, only the decoration data remain and the number of characters you can enter might decrease. Clear the decoration and then delete the characters. If you delete the characters by pressing and holding  for at least one second, the characters as well as the decoration data are deleted.
- When you reply with quote to the received Deco-mail or you forward it, the decorations or inserted images are displayed at the replying destination or forwarding destination.
- If you use a template containing an image unable to attach to mail for sending, the image is deleted.
- When you send a Deco-mail message in excess of 10,000 bytes to a Deco-mail incompatible model or a Deco-mail compatible model other than the models described below*, it is received at the destination as a mail message with the URL for browsing Deco-mail described. However, depending on the incompatible model, only the mail text without the URL for browsing might be received.
*903i series, 904i series, 905i series, 703i series (except P703i μ), 704i series (except P704i μ)
- Decorations might not be correctly displayed if you send or receive Deco-mail to and from devices such as personal computers.
- The movement of Ticker/Swing, blink and animation playback stop when a certain period has passed.


About Decorations





You can decorate the text of i-mode mail using Palette.

You can set multiple decorations for one point.


- You cannot combine Word Alignment, Ticker, and Swing for one point.
- Lines are inserted by Line Insert with the color specified by Font Color.
- If Word Alignment, Ticker, or Swing is specified, the images and moving font effects are inserted with the specified state.
- You can enter Deco-mail-pictographs using "Insert image", and from "Pictograph" on the Function menu as well.


How to use Palette


Press  from the Message Entry display to display Palette.

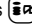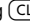- When the cursor is over the decorated character, the Palette appears with the icon for the set decoration depressed. Highlight the depressed icon and press  (Select); then you can change, complete or cancel the decoration. You can release the area selection also by pressing  while the area is selected.
- Press  (Exit) to close Palette. You can close Palette also by pressing  while you are operating on it.

Switch operations

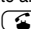



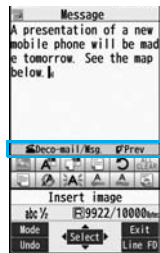








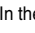







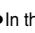


You can switch between the operation of Palette and the operation of entering text, each time you press . You can move the cursor and enter text with Palette displayed.










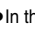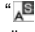


- After you enter text, the text entry operation returns. When you use Palette in succession, press  and operate.



Palette operation

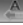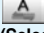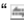■ How to operate Decoration

Function	Operation/Explanation	Function	Operation/Explanation
 (Insert image/Font effect)	<p>You can convert characters to a mark and insert it into the text. The mark animates in various ways and conveys your feelings to the other party.</p> <p>▶  ▶ Select a moving font effect</p> <p>▶ Enter text.</p> <ul style="list-style-type: none"> ● To delete the moving font effect, move the cursor to the moving font effect and press (CLR). 	 (Decorate all reset)	<p>You can release all the decorations.</p> <p>▶ YES</p> <ul style="list-style-type: none"> ● If you have inserted an image, the message “In-line image is deleted” is displayed.
 (Insert image/My picture)	<p>You can insert the image stored in “My picture” into the text of mail.</p> <p>▶  ▶ Select a folder ▶ Select an image.</p> <ul style="list-style-type: none"> ● You can select a Decomail-picture by pressing and holding  for at least one second from the Message Entry display. ● To delete the image, move the cursor to the image and press (CLR). 	 (Select area)	<p>You can set Font Color, Blink, Font Size, Word Alignment, Ticker and Swing over the selected text you have entered. You can also change the set decoration, add another decoration, or cancel Blink, Ticker or Swing.</p> <p>▶ Select a start point.</p> <ul style="list-style-type: none"> ● You can select all text by pressing  (All) and selecting “YES”. <p>▶ Select an end point.</p> <p>Set, change, add or cancel each decoration.</p> <ul style="list-style-type: none"> ● “/SELECT” is displayed at the upper right of the display during selecting decoration area. <p><Set, change, or add decoration></p> <p>▶ Select an icon and set, change, or add decorations.</p> <ul style="list-style-type: none"> ● Select another icon in succession to change the multiple decorations or add decorations. <p>▶ </p> <ul style="list-style-type: none"> ● When Blink, Ticker, or Swing has been set, reselect each icon and complete decorations. <p><Release Blink, Ticker, or Swing></p> <p>▶ Select the icon for Blink, Ticker, or Swing</p> <p>▶ Select the same icon again.</p>
 (Insert image/Camera)	<p>You can insert the image shot by a camera on the spot into the text of mail.</p> <p>▶  ▶ Shoot a still image.</p> <ul style="list-style-type: none"> ● The image size of the camera is Sub-QCIF (128 x 96), QCIF (176 x 144), QVGA (240 x 320) or CIF (352 x 288). ● To delete the image, move the cursor to the image and press (CLR). ● See step 2 and step 3 of “Shoot a Still Image” on page 139 for how to shoot. 		
 (Font color)	<p>You can change the color of characters and lines to be entered.</p> <p>▶ Select a color ▶ Enter text.</p> <ul style="list-style-type: none"> ● In the font color changing mode, “” is displayed at the upper right of the display. ● You can set other decorations in succession. ● When you have selected the area, you do not need to enter text. 		
 (Background color)	<p>You can change the background color of the mail text.</p> <p>▶ Select a color.</p>		
 (Insert line)	<p>You can insert a horizontal line into the mail text.</p> <p>The line feed is inserted automatically, and the line is inserted.</p> <ul style="list-style-type: none"> ● To delete the line, move the cursor to the line and press (CLR). 		
 (Undo)	<p>You can return to the previous status of the set decoration. You can do it up to twice.</p> <ul style="list-style-type: none"> ● You can undo the operation also by pressing (MENU) (Undo). 		
		 (Font size)	<p>You can change the size of characters to be entered.</p> <p>▶ Select a font size ▶ Enter text.</p> <ul style="list-style-type: none"> ● In the font size changing mode, “” or “” is displayed at the upper right of the display. ● You can set other decorations in succession. ● When you have selected the area, you do not need to enter text.
		 (Select blink)	<p>You can make characters to be entered blink.</p> <p>▶ Enter text.</p> <p>The set characters are blinking.</p> <ul style="list-style-type: none"> ● In the blink setting mode, “” is displayed at the upper right of the display. ● You can set other decorations in succession. <p>▶   (Reset blink)</p>

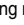Function	Operation/Explanation
 (Select ticker)	<p>You can make characters to be entered and images to be inserted flow (moving from right to left).</p> <p>▶ Enter text.</p> <p>The line feed is inserted automatically and “” is displayed before and after the cursor.</p> <ul style="list-style-type: none"> • In the ticker setting mode, “” is displayed at the upper right of the display. • You can set other decorations in succession. <p>▶   (Reset ticker)</p> <p>The line feed is inserted automatically.</p>
 (Select swing)	<p>You can make characters to be entered and images to be inserted swing (moving to left and right back).</p> <p>▶ Enter text.</p> <p>The line feed is inserted automatically and “” is displayed before and after the cursor.</p> <ul style="list-style-type: none"> • In the swing setting mode, “” is displayed at the upper right of the display. • You can set other decorations in succession. <p>▶   (Reset swing)</p> <p>The line feed is inserted automatically.</p>
 (Word alignment)	<p>You can change the position of characters to be entered and images to be inserted.</p> <p>▶ Select a word alignment ▶ Enter text.</p> <p>The line feed is inserted automatically, and the alignment is set.</p> <ul style="list-style-type: none"> • In the word alignment setting mode, “” is displayed at the upper right of the display. • You can set other decorations in succession. • When you have selected the area, you do not need to enter text.

Information

<Insert image>

- You can insert up to 20 kinds of image within 90 Kbytes in total. However, even if the inserted kinds of image are 20 or fewer, the confirmation display appears for some operations asking whether to re-edit the text because the maximum number of images has exceeded.
- If multiple same images are inserted, they are counted as a single type of file. If you copy/paste the image already inserted, that image is regarded as the same image and handled as a single type of file.

- If you move the cursor to the character for which another color is set, the setting changes to that color.
- The color for pictographs is also subjected to the specified font color. To restore the color to ordinary one, select “指定なし/Default”.
- You cannot change the color of Decomail-pictographs.

Information

<Background color>

- You cannot change the background color when editing the header or signature.

- If you move the cursor to the character for which a different font size is set, the font size is changed to that size of the character.
- You cannot change the size of the Decomail-pictograph.

<Select blink>

- You cannot make Decomail-pictographs blink.

<Template>

Composing Deco-mail by Using Template

Template is form data for Deco-mail for which decorations such as font size and image insertion are already specified.

Other than those pre-installed in the FOMA phone, you can download templates from sites (see page 161). You can also save Deco-mail you sent, received or composed as a template (see page 174 and page 194). You can edit the saved template using Palette.

- You can delete the pre-installed templates. You can re-download them from the “P-SQUARE” site (see page 163). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 39) are set to them.



1 ▶ Template ▶ Select a template.



Template List



Detailed Template display

- Press  () to compose Deco-mail using the contents of the template. Go to step 2 on page 172.
- Even if you set “Header/signature” to automatically paste the header or signature, you cannot paste it.
- See page 162 when you select “Search by i-mode”.

Function Menu of the Template List

Function menu	Operation/Explanation
Compose message	<p>You can compose a Deco-mail message using the contents of the template.</p> <p>Go to step 2 on page 172.</p>

Function menu	Operation/Explanation
Sort	You can change the order of displayed templates. ▶ Select an order.
Edit title	▶ Enter a title. ● You can enter up to 15 full-pitch/30 half-pitch characters.
Info	You can display the file size, saved date and time of the template, and whether it contains images.
No. of messages	You can display the number of stored templates.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected)	▶ Delete selected ▶ Put a check mark for templates to be deleted ▶ (Finish) ▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

Function Menu of the Detailed Template Display

Function menu	Operation/Explanation
Compose message	You can compose a Deco-mail message using the contents of the template. Go to step 2 on page 172.
Edit	You can edit the contents of the template and save it. ▶ Edit the text ▶ (Save) ▶ YES or NO YES . . . Overwrites and saves. NO . . . Saves as a separate file. ● See step 2 through step 3 on page 176 for how to edit the text. ● See page 162 when the templates are stored to the maximum.
Save insert image	You can save images inserted into the template or Deco-mail text, and set them as the Stand-by display and Wake-up display. ▶ Select an image ▶ YES ▶ Select a destination folder. Go to step 3 on page 159. ● See page 162 when images are stored to the maximum.

Information

<Edit>

- The title name when saved as a separate file takes “YYYY/MM/DD hh:mm”
(Y: Year, M: Month, D: Date, h: hour, m: minute).

<Save insert image>

- Decomail-pictographs are saved to the “お気に入り (Favorite)” folder in the “Decomail-pictograph” folder.

<Attachments>

Attaching Files

You can send an i-mode mail message with files attached.

You can attach following files:

- Still image
- Melody
- Phonebook entry
- Bookmark (i-mode, Full Browser)
- Excel
- Moving image/i-motion movie
- PDF file
- Schedule event
- PowerPoint
- ToruCa file
- ToDo item
- Word
- SD other files


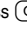



You can attach up to 10 files within 2 Mbytes in total.

- You cannot attach files that are prohibited from being attached to mail or output from the FOMA phone to other devices.
- Regardless of the “File restriction” setting, you can attach the still image or moving image/i-motion movie shot with your FOMA phone or the files received via infrared rays.
- When you attach a file, another attachment field appears on the Message Composition display.
- When the receiving end is not the model described below*, it receives only compatible files within the memory space of that model.
※903i series, 904i series, 905i series, 703i series (except P703iμ), 704i series (except P704iμ)
- It might take a time to send the i-mode mail depending on the size of attached files.

1 Message Composition display

- ▶ **Select the attachment field**
- ▶ **Do the following operations.**

Item	Operation/Explanation
Picture	▶ Select a folder ▶ Select an image. ● Highlight an attached image and press (Select) to display the image. Press (CLR) to return to the former display.
Melody	▶ Select a folder ▶ Select a melody. ● Highlight an attached melody and press (Select) to play back the melody. Press any key to stop the playback.
i motion	▶ Select a folder ▶ Select an i-motion movie. ● Highlight the attached i-motion movie and press (Select) to play back the i-motion movie. Press (CLR) during playback or stop the playback to return to the former display.
ToruCa	When the ToruCa file is a ToruCa file (details), it is attached as a ToruCa file (details). ▶ Select a folder ▶ Select a ToruCa file. ● Highlight the attached ToruCa file and press (Select) to preview it. Press (CLR) to return to the former display.

Item	Operation/Explanation
PDF	<p>▶ Select a folder ▶ Select a PDF file.</p> <ul style="list-style-type: none"> Highlight an attached PDF file and press  (Select) to display the PDF file. Press  to return to the former display.
Phonebook	<p>▶ Select a search method</p> <p>▶ Select a Phonebook entry ▶  (Select)</p> <ul style="list-style-type: none"> When you specified a search method last time, the Phonebook entry is searched by that method.
Schedule	<p>▶ Select a date ▶ Select a schedule event</p> <p>▶  (Select)</p>
ToDo	▶ Select a ToDo item ▶  (Select)
Bookmark	<p>▶ i-mode or Full Browser</p> <p>▶ Select a bookmark.</p>
Document file	<p>You can attach a file of Word, Excel, and PowerPoint.</p> <p>▶ Select a folder ▶ Select a file.</p>
Other	<p>You can attach a file stored in "SD other files".</p> <p>▶ Select a folder ▶ Select a file.</p>

2 Go to step 2 on page 172.

Information

<Picture>

- The images are not sent as the attachments to i-mode phones of the mova service; they are in the form of URLs for browsing images and automatically attached with expiry dates and can be obtained by selecting URLs. The mail text that can be sent to an i-mode phone of the mova service is up to 184 full-pitch characters (369 bytes). (When the acceptable number of characters of the mova phone is "250 full-pitch characters")

When multiple files are attached, the files are deleted and just the mail text is sent.

- The i-mode phone of the mova service cannot receive GIF images.
- You can attach a Flash movie as well.
- The still image might not be received correctly or not be displayed or coarsely displayed depending on the model at the receiving end.

<Melody>

- Melodies stored on the microSD memory card cannot be attached. Copy the melodies to the FOMA phone. (See page 297)
- If the receiving end is other than FOMA P905i, the sent melody might not be played back correctly or the attachment might be deleted.
- You cannot receive the attached melody on the i-mode phone of the mova service.

Information

<i-motion>

- Some i-motion movies cannot be attached to mail or their file sizes may become larger or smaller.
- Moving images stored on the microSD memory card cannot be attached. Copy the moving images to the FOMA phone. (See page 297)
- Depending on the mobile phone of the receiving end, i-motion movies cannot be correctly received/displayed, might become coarse, or might be converted into consecutive still images. When sending moving images to other than the model described below*, it is advisable to shoot them with the following settings: File size setting: Mail restrict'n (S)
Image quality: Normal
*903i series, 904i series, 905i series, 703i series (except P703iμ), 704i series (except P704iμ)

<ToruCa>

- ToruCa files stored on the microSD memory card cannot be attached. Copy the ToruCa files to the FOMA phone. (See page 227)

Delete Attached File

You can delete an attached file you are selecting or all attached files.

1 Message Composition display ▶ (FUNC)

- ▶ **Operate att. file** ▶ **Delete att. file**
- ▶ **Delete this or Delete all** ▶ **YES**

- To delete a single file, highlight the file to be deleted.

Using Photo-sending

You can send photos (still images) to the other party during a voice call. The photo is sent as the attachments of i-mode mail, and the receiving end can view it during a call.

To send photos during a voice call, you need to store the phone number and mail address of the other party in the same Phonebook entry beforehand.

Depending on the model of other party's phone, the other party might not be able to view the photo during a call.

Shoot and Send Photos

During a voice call, you can send photos (still images) you shoot on the spot.

- 1 During a voice call ▶ ()
▶ Shoot/send photo ▶ Photo mode

The camera starts up.

- 2 Press ().

The photo is shot.

- Press from the Finder display to return to the "Talking" display.
- See page 143 for how to operate on the Finder display.

- 3 () ▶ Select a folder
▶ Select a mail address.

The photo is saved and sent.

- You can send it also by pressing () and selecting "Save & send".
- You can set "Set display" and "File restriction" by pressing (). (See page 140 and page 146)
- When multiple mail addresses are stored, select the mail address you send the mail message to.
- When you select "Quit", the photo is saved to the Draft as the image-attached mail.

Information

- The image sizes of the camera are QCIF (176 x 144) and Sub-QCIF (128 x 96).

Select and Send Photos

You can send the saved photos (still images).

- 1 During a voice call ▶ ()
▶ Shoot/send photo ▶ My picture

- 2 Select a folder ▶ Select a photo
▶ Select a mail address.

The photo is sent.

- You can select a photo (still image) of QCIF (176 x 144) and Sub-QCIF (128 x 96).
- When multiple mail addresses are stored, select the mail address you send the mail message to.

■ When you received a photo (still image)

When "Photo auto display" is set to "ON", the photo is automatically displayed.

If you have received multiple photos during a voice call, you can press to switch them.

- You can display the received photo during a voice call by pressing () and selecting "Display photo".
- You can also execute "Check new msg." during a voice call by pressing (). (See page 183)

Information

- Photo-sending is not available in the following cases:
 - When the phone number and mail address of the other party on the phone are not stored in the same Phonebook entry
 - When the phone number and mail address of the other party on the phone are stored as secret data in the Phonebook
 - When a caller ID is not notified to the receiving end (User unset, PublicPhone, Unavailable etc.) (However, you can send from the calling end.)
 - When "Restrict dialing" is not set for the phone number of the other party on the phone during "Restrict dialing"
 - When the number of sent mail messages in the Outbox has reached the maximum and those messages are all protected, or when 20 mail messages are saved to the Draft or the Draft is full (You cannot send.)
 - When the Inbox is full of unread or protected mail (You cannot receive.)
 - During Call Waiting
 - In B Mode of 2in1
- You cannot send Flash movies by Photo-sending.
- You cannot send some photos (images) during a voice call.
- A photo sent/received during a voice call is saved to the Outbox or Inbox as a file attachment of the image mail (the subject is the phone number).

Receiving i-mode Mail Automatically

 
When the FOMA phone is in the service area, you can receive i-mode mail, SMS messages and SMS reports automatically. (See page 183 for receiving i-mode mail after selecting it.)

When a mail message comes in, “ (white)” appears at the top of the display.

You can save up to 2,500 received i-mode mail messages including SMS messages.

1 When i-mode mail arrives, “ (white)” blinks and the receiving message is displayed.

When receiving is completed, the display shows the number of received i-mode mail messages and Messages R/F.



Reception Result display

- You can display the Inbox List by selecting “Mail”.
- To cancel receiving midway, select “Cancel” or press and hold **CLR** for at least one second while “Mail Receiving...” is displayed. However, the mail message might be received depending on the timing.
- If no keys are pressed for about 15 seconds, “ ” (see page 112) appears on the desktop and the former display returns. (The transit time varies depending on the setting for “Mail/Msg. ring time”.) Press **OK**, highlight “ ”, and press **SELECT** to display the Inbox List.
- See page 30 for when the FOMA phone is closed.

Information

- You can automatically receive up to 100 Kbytes of an i-mode mail message including attached files. You can manually obtain the attached files in excess of 100 Kbytes from the i-mode Center. (See page 185)
- When the total number or size of received messages stored in the FOMA phone has reached the maximum, the mail messages will be overwritten in the priority order of mail in the “Trash box” folder and older received mail. However, unread or protected mail is not overwritten.
- When the total number of unread or protected mail messages in the Inbox has reached the maximum, no new mail can be received and “ (black)” is displayed. To receive i-mode mail, delete received mail or read unread mail or release protection of mail until “ (black)” clears, and then perform “Check new message”.
- You can receive i-mode mail with melodies, still images, or other files attached. You can receive incompatible attached files but you cannot display them.
- When you receive mail from a device that can set To, Cc and Bcc, you can check whether the message was sent to you as To, Cc or Bcc.


Information

- Mail Messages for you are held at the i-mode Center in the following cases:
 - When the power is off
 - During a videophone call
 - During Self Mode
 - During infrared data exchange
 - During Omakase Lock
 - During iC communication
 - When you are out of the service area
 - While connecting to the FirstPass center
 - During PushTalk communication
 - While copying to the microSD memory card
 - While connecting to the Data Storage Center
 - When the space of the Inbox is full with protected or unread messages
- When i-mode mail messages are held at the i-mode Center, “ (white)” appears, and when they are held to the maximum, “ (black)”, appears.

Display Newly Received i-mode Mail

1 Reception Result display ▶ Mail ▶ Select an i-mode mail message to be displayed.

- Press and hold **OK** for at least one second from the detailed i-mode mail display to change the size of text characters. When you set to “Large”, the characters on the Folder List and the Inbox/Outbox/Draft List are displayed in large size as well.

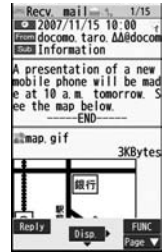


Information

- Undisplayable characters are replaced by spaces, etc.
- When the number of characters in the text of received i-mode mail exceeds the maximum, “?” or “/” is inserted at the end of the text and the excess part is deleted automatically.
- The still image automatically displayed at opening might not be correctly displayed. When the image is larger than the screen size, it is displayed shrunk with a proportional ratio retained.
- Some decorations inserted into the decorated mail (HTML mail) sent from a personal computer might not be displayed correctly.

Receiving Selected i-mode Mail

You can check the titles of i-mode mail messages held at the i-mode Center and select them to receive, or delete them at the Center before receiving.

To use this function, set "Receive option setting" to "ON" beforehand.


When "Receive option setting" is set to "ON", you cannot receive i-mode mail messages automatically. When a mail message comes in the i-mode Center,  is displayed.




Receive Option Setting

You can set whether to select and receive necessary i-mode mail only.


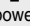
- 1  ▶ Mail settings ▶ Receive option setting
▶ ON or OFF

Select and Receive Mail Messages

- 1  ▶ Receive option
▶ Operate following the procedure described in "Mobile Phone User's Guide [i-mode]".


- When "Receive option setting" is set to "OFF", the display to the effect that it will be set to "ON" appears. Press  (Select) to set "Receive option setting".
- You can bring up the Receive Option display also by  ▶  Menu ▶ メニュー／検索 (Menu/Search)
▶ メール選択受信 (Receive Option).


Information

- Even when Receive Option Setting is set to "ON", you will still receive all mail messages if you execute "Check new message". If you do not want to receive all mail messages, remove a check mark from "Mail". (See page 199)
- When you bring up the Receive Option display, the  icon goes off. Also, the  icon goes off if you turn the power off or bring up the mail display.
- You cannot select SMS messages for receiving.




Checking whether Center Holds i-mode Mail

i-mode mail messages and Messages R/F arriving at the i-mode Center are automatically sent to your FOMA phone. However, the messages will be held at the i-mode Center if your FOMA phone cannot receive mail because it is turned off or out of the service area, or when Receive Option Setting is set to "ON".

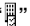
When  (white) is displayed, receive mail by checking the i-mode Center.

See "Receive option" when  is displayed.



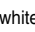



- 1 Press and hold  for at least one second.

 (white) and  (white)/ (white) will blink, the message "Checking..." will be displayed, and the i-mode mail and Messages R/F will be delivered.

On the results of checking, the numbers of the received i-mode mail and Messages R/F are shown.

- To cancel receiving midway, press and hold  for at least one second. However, the mail message might be received depending on the timing.

Information

- When icons such as  (black),  (black)/ (black) or  (black) are displayed, the FOMA phone cannot receive any more i-mode mail or Messages R/F. Delete unnecessary mail and messages, or read unread mail and messages, or release protection. (Read and unprotected mail and messages are overwritten automatically from the oldest one.)
- Even when i-mode mail messages are held at the i-mode Center, the  (white) icon to that effect, or the  (black) icon telling that messages are held to the maximum at the i-mode Center might not appear.
(This happens if mail arrives at the Center when, for instance, your FOMA phone is off.)
- You can select items to be checked by "Set check new message".
- You cannot use this function to receive SMS messages. Use "Check new SMS" to receive them.

<Reply> <Reply with Quote>

Replying to Received i-mode Mail

You can reply to the sender. With “Reply with quote”, you can quote the original text in your received i-mode mail and reply to it. You cannot use “Reply with quote” for SMS messages.

1 Inbox List/Detailed Received Mail display

(FUNC) ▶ Reply/forward

▶ Reply or Reply with quote

- You can reply also by pressing (Reply).
- If other recipients of the simultaneous mail are found, you can choose whether to reply to the sender only or to all addresses.
Select “To sender” or “To all”.
- Just one quotation mark (see page 199) is added to the beginning of the text in the i-mode mail to be replied with quote.

2 Enter a subject and text and send.

When you have selected i-mode mail, go to step 3 on page 172.

When you have selected an SMS message, go to step 4 of “Composing SMS Messages to Send” on page 206.

After you send mail, “” changes to “”.

Information

- For the sender’s address that cannot be replied to (such as when the mail address exceeds 50 half-pitch characters), “” is displayed.
- “Re:” is prefixed to the subject of the mail message to be replied or replied with a quotation. When the subject exceeds 100 full-pitch characters, the excess part is deleted. (When “Re:” has already been prefixed, it changes to “Re2:” and will be counted up to “Re99:”.)
- Even if the i-mode mail text contains pasted data, you cannot quote it in your reply. Also, you cannot quote it when using the DoCoMo keitai datalink or infrared data exchange function. See page 188 for pasted data.
- If the text of Deco-mail contains images that are prohibited from being attached to mail or being output from the FOMA phone to other devices, such images will be deleted when you reply to it.

<Forward>

Forwarding Received i-mode Mail

You can forward the i-mode mail or SMS messages to others.

1 Inbox List/Detailed Received Mail display

(FUNC) ▶ Reply/forward ▶ Forward

- You can forward also by pressing (Forward) from the Inbox List.

2 Enter an address and send the mail.

When you have selected an i-mode mail message, go to step 2 on page 172.

When you have selected an SMS message, go to step 2 on page 206.

After you send mail, “” changes to “”.

Information

- “Fw:” is prefixed to the subject of the mail message to be forwarded. When the subject exceeds 100 full-pitch characters, the excess part is deleted. (When “Fw:” has already been prefixed, it changes to “Fw2:” and will be counted up to “Fw99:”.)
- When you forward an i-mode mail message with a file you have not obtained yet, the file information is deleted.
- Even if the i-mode mail text contains pasted data, you cannot quote it in your forwarding mail. Also, you cannot quote it when using the DoCoMo keitai datalink or infrared data exchange function. See page 188 for pasted data.
- When a mail message is forwarded and a ToruCa file (details) that contains data whose output from the FOMA phone is prohibited is attached to the mail message, the attached file returns to a ToruCa file before obtaining details.
- When a mail message on the microSD memory card is forwarded, the attached file is deleted.
- When you “Forward” a mail/SMS message received to Number B/Address B in Dual Mode of 2in1, the sent mail message is retained in the Outbox or Draft, even if you switch to A Mode.

When i-mode Mail with Files Attached/Pasted is Received

You can receive up to 2 Mbytes of the attached files on your FOMA phone. However, you receive only the attached file information for the files in excess of 100 Kbytes, so you need to manually obtain those attached files from the i-mode Center.

The FOMA phone supports following files:

- Still image
- Moving image/i-motion movie
- Melody
- PDF file
- PC movie
- ToruCa file
- Phonebook entry
- Schedule event
- ToDo item
- Bookmark (i-mode, Full Browser)
- Word
- Excel
- PowerPoint

You cannot play back or display the files other than above. You can save them to any folder in “SD other files”, or use the i-mode mail to forward them.

You can use “Attachment preference” to select the files to be received.


- When multiple data items are pasted, they might not be displayed.

Obtain Receive Option Attached Files

You can obtain the receive option attached files held at the i-mode Center.

1 Detailed Received Mail display ▶ Select an attached file which has not been obtained.

After obtaining is completed, files are played back/displayed.

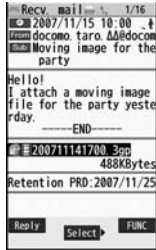

Information

- You cannot obtain the attached files when the unused memory space in the Inbox is smaller than the files.

Play Back/Display Attached or Pasted Files

You can play back or display the attached/pasted files already obtained.

1 Detailed Sent Mail display/Detailed Received Mail display ▶ Select an attached file.

The file is played back or displayed.

- For a PC movie or document file, the confirmation display appears telling that you cannot play it back/display it. Play it back/display it after saving it to the microSD memory card.
- For the Phonebook entries, schedule events, ToDo items, bookmarks, and files not supported by the FOMA phone, the confirmation display appears asking whether to save them.

Information

- When the sender's device is other than FOMA P905i, the received melodies might not be played back correctly.
- When the first attached file is an obtained still image, that still image only is automatically displayed when the mail message is opened. The size of a still image displayed automatically is up to 5M (2592 x 1944) size.
- When the image size is larger than the screen, it is displayed shrunk.
- You cannot play back a melody in excess of 100 Kbytes.
- You cannot play back a Flash movie in excess of 100 Kbytes.
- You cannot display a ToruCa file in excess of 1 Kbyte and ToruCa file (details) in excess of 100 Kbytes.

Save Attached or Pasted Files

You can save the attached or pasted files that you have obtained. You can set some files for a ring tone, or an image on the Stand-by display, Wake-up display, or other displays.

1 Detailed Sent Mail display/Detailed Received Mail display/Detailed Message R/F display

▶ Highlight an attached file and press

 **FUNC** ▶ Operate file

▶ Save attached file ▶ YES

- PC movies are saved to the destination folder in "microSD" folder of "PC Movie".
- Document files are saved to the destination folder in "Document viewer".
- The files not supported by the FOMA phone are saved to the destination folder in "SD other files".
- Even if the files are supported by the FOMA phone, some of them cannot be saved to the FOMA phone depending on the file such as an invalid data file or whose size is too large. In that case, the confirmation display appears asking whether to save it to the microSD memory card. When you save it, it is saved to a destination folder in "SD other files".
- The confirmation display might appear telling that a part of the file cannot be saved depending on the attached file.

2 Select a destination location or folder.

For melodies, go to step 2 on page 160.

For still images, go to step 3 on page 159.

For i-motion movies, go to step 2 on page 168.

- Bookmarks are saved according to each information of i-mode or Full Browser.
- If the maximum number of files has already been saved to the microSD memory card or there is no usable memory space when you save SD other files, PC movies, or document files, the confirmation display appears asking whether to delete unnecessary files and to save new files. Select "YES" to list the files in Data Box, then select unnecessary files and delete them. See page 162 for when files other than SD other files, PC movies, or document files are stored to the maximum.

Information

- You cannot save a melody in excess of 100 Kbytes to the FOMA phone.
- You cannot save a Flash movie in excess of 100Kbytes to the FOMA phone.
- You cannot save a ToruCa file in excess of 1 Kbyte and ToruCa file (details) in excess of 100 Kbytes to the FOMA phone.

<Inbox> <Outbox> <Draft>

Displaying Mail from Inbox/ Outbox/Draft

Display Mail from Inbox

You can save up to 2,500 received i-mode mail messages including SMS messages.

You can save up to 30 Area Mail messages separately from i-mode mail messages and SMS messages.


You can check the received i-mode mail messages, SMS messages, and Area Mail messages.

1 [Envelope] ▶ Inbox ▶ Select a folder.

- See page 201 for displaying Messages R/F.



2 Select a mail message.

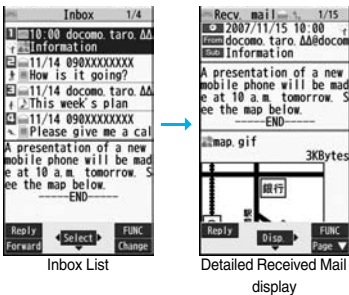


- When you select an unread mail message, “ [Envelope] ” (pink) changes to “ [Envelope] ”.
- Use [Envelope] to check other mail messages.
- When the mail text is long, use [Page Up] to scroll the display to check it. Also, you can press [MENU] [Page Up] / [Page Down] or [Page Down] / [Page Up] to scroll page by page.
- When a melody is attached, it is played back automatically. (You can change this setting by “Auto melody play”.)
- See page 110 for Feel * Mail.

Display Mail from Outbox


You can save up to 1,000 sent i-mode mail messages including SMS messages.

You can check the sent i-mode mail messages and SMS messages.

 1 [Envelope] ▶ Outbox ▶ Select a folder.



2 Select a mail message.

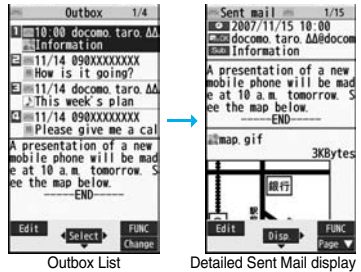


- Use [Envelope] to check other mail messages.
- When the mail text is long, use [Page Up] to scroll the display to check it. Also, you can press [MENU] [Page Up] / [Page Down] or [Page Down] / [Page Up] to scroll page by page.

Display Mail from Draft

You can edit and send i-mode mail messages and SMS messages in the Draft. You can save up to 20 i-mode mail messages including SMS messages.

1 [Envelope] ▶ Draft

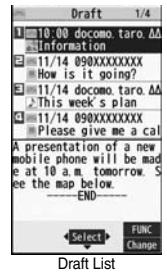

2 Select a mail message.

When you have selected i-mode mail, go to step 2 on page 172. When you have selected an SMS message, go to step 2 on page 206.

Information


- When you select the i-appli mail folder, the mail-linked i-appli that supports the folder starts.

How to See Inbox/Outbox/Draft List and Detailed Display

Mail menu

Icons might have the following marks:

	Unread mail messages or messages are saved in the Inbox.
	Failed-to-send mail messages are saved in the Outbox. Draft mail messages are saved in the Draft.
	"Mail security" is activated. (displayed also for chat mail)

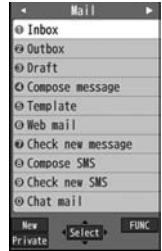


Inbox Folder List

1 Folder status

"NEW" appears when unread messages are found, and "🔑" appears when Mail Security is activated.

	Ordinary folder
	i-oppli mail folder
	Message R folder
	Message F folder
	Trash box folder

 




2 Folder name

Inbox List and detailed Received Mail display

1 Mail status and type

"🔒" appears when protection is set.

	Unread mail
	Read mail
	Forwarded mail
	Replied mail
	Area Mail
	Type of the received mail (for detailed display only)

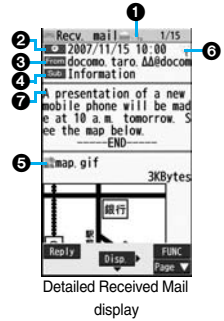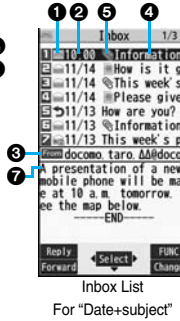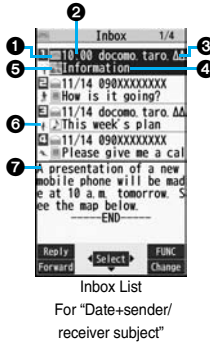

2 Received date and time

The Inbox List shows the time for the mail received today, and shows the date for the mail received until yesterday.

The detailed display shows the date and time the mail was received. The Japanese date and time the mail was received from the Center is displayed.



3 Phone number or mail address of the sender or of another recipient of simultaneous mail

	Sender's mail address (for detailed display only)
	Sender's mail address that cannot be replied to (for detailed display only)
	Recipient's mail addresses of simultaneous mail (for detailed display only)
	Recipient's mail addresses of simultaneous mail that cannot be replied to (for detailed display only)

4 Subject

When "Mail list display" is set to "Date+sender/receiver subject", the subject is displayed up to 11 full-pitch/22 half-pitch characters. When set to "Date+subject", it is displayed up to 7 full-pitch/14 half-pitch characters, however, for a mail message with files attached, it is decreased by 1 full-pitch/2 half-pitch character/s as the icon is added at the top. For SMS messages or Area Mail messages, the beginning of the text is displayed. ("SMS" or "Area Mail" is displayed on the detailed display.)

In Dual Mode of 2in1, "☒" is displayed at the end of the subject or sender's address of SMS/i-mode mail messages received to Number B/Address B.










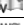
 (blue)	SMS messages in the FOMA phone
	SMS messages on the UIM











5 Attached or pasted data

The detailed display shows the data volume as well.



<For Inbox List (Date+sender/receiver subject) and detailed Received Mail display>


"☒" is added to each icon when you execute "Delete att. file" (for detailed display only).

	Melody file
	Image file
	Inserted image file (for List only)
	i-motion movie file
	PC Movie file
	ToruCa file
	PDF file
	Document file
	Phonebook entry file
	Schedule event or ToDo item file

	Bookmark file
	Other files
	Attached file before obtaining (for detailed display only)
	Attached file suspended to be obtained (for detailed display only)
	Attached file failed to be obtained (for detailed display only)
	i-appli start information (for List only)
	i-appli mail (for List only)
	Multiple files (for List only)
	Multiple pasted files
	File set with the UIM restrictions

<For Inbox List (Date+subject) (Date+sender/receiver)>

	Attached file
	i-appli mail

	File set with the UIM restrictions
---	------------------------------------

6 Feel * Mail icon

See page 110 for Feel * Mail.


7 Text of mail

■ Outbox Folder List

① Folder status

“” appears when Mail Security is activated.


	Ordinary folder		i-oppli mail folder
---	-----------------	---	---------------------

 









② Folder name

■ Outbox List and detailed Sent Mail display

 ① Mail status


“” appears when protection is set.

	Mail successfully sent
	Mail failed to be sent
	Simultaneous mail successfully sent to all addresses
	Simultaneous mail sent to some addresses
	Simultaneous mail failed to be sent to all addresses

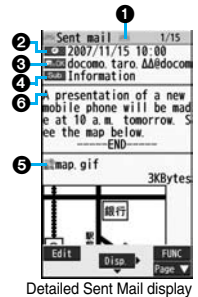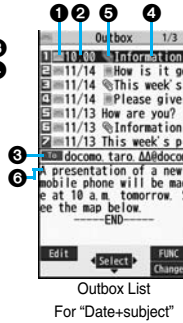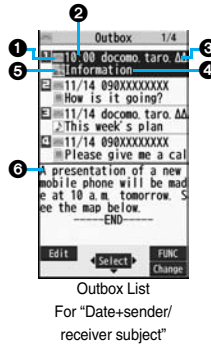







② Sent date and time

The Outbox List shows the time for the mail sent today, and shows the date for the mail sent until yesterday.

The detailed display shows the date and time the mail was sent. “” appears when the date/time is corrected.




③ Recipient's phone number or mail address

			Mail address successfully sent (for detailed display only)
			Mail address failed to be sent (for detailed display only)

④ Subject

When “Mail list display” is set to “Date+sender/receiver subject”, the subject is displayed up to 11 full-pitch/22 half-pitch characters. When set to “Date+subject”, it is displayed up to 7 full-pitch/14 half-pitch characters, however, for a mail message with files attached, it is decreased by 1 full-pitch/2 half-pitch character/s as the icon is added at the top.

For SMS messages, the beginning of the text is displayed. (“SMS” is displayed on the detailed display.)














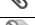

	(blue)	SMS messages in the FOMA phone		SMS report received [for List (Date+sender/receiver subject) and detailed display only]
		SMS messages on the UIM		

⑤ Attached data




The detailed display shows the data volume as well.

<For Outbox List (Date+sender/receiver subject) and detailed Sent Mail display>

“” is added to each icon when you execute “Delete att. file” (for detailed display only).

	Melody file		Phonebook entry file
	Image file		Schedule event or ToDo item file
	Inserted image file (for List only)		Bookmark file
	i-motion movie file		Other files
	PC Movie file		i-oppli mail (for List only)
	ToruCa file		Multiple files (for List only)
	PDF file		File set with the UIM restrictions
	Document file		

<For Outbox List (Date+subject) (Date+sender/receiver)>

	Attached file		File set with the UIM restrictions
	i-oppli mail		

⑥ Text of mail

■ Draft List

① Mail status

(pink) Ordinary mail	Simultaneous mail
----------------------	-------------------

② Saved date and time

The Draft List shows the time for the mail saved today, and shows the date for the mail saved until yesterday. “” appears when the date/time is corrected.

③ Recipient's phone number or mail address


When the phone number or mail address is stored in the Phonebook, the name stored in the Phonebook is displayed.

④ Subject

When “Mail list display” is set to “Date+sender/receiver subject”, the subject is displayed up to 11 full-pitch/22 half-pitch characters. When set to “Date+subject”, it is displayed up to 7 full-pitch/14 half-pitch characters, however, for a mail message with files attached, it is decreased by 1 full-pitch/2 half-pitch character/s as the icon is added at the top.

For SMS messages, the beginning of the text is displayed.

(blue) SMS messages

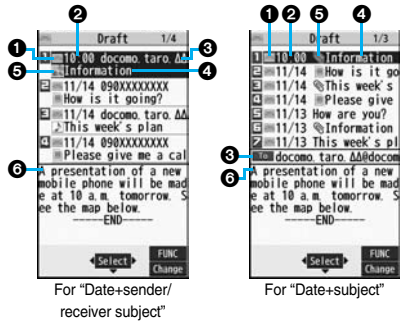

⑤ Attached data

<For Date+sender/receiver subject>

	Melody file
	Image file
	Inserted image file
	i-motion movie file
	PC Movie file
	ToruCa file
	PDF file

	Document file
	Phonebook entry file
	Schedule event or ToDo item file
	Bookmark file
	Other files
	Multiple files (for List only)
	File set with the UIM restrictions

<For (Date+subject) (Date+sender/receiver)>

	Attached file
	File set with the UIM restrictions






⑥ Text of mail

Information

- See “Mail list display” on page 198 to change a method to display the Inbox/Outbox/Draft List.
- When “Name in phonebook” of “Mail list display” is checked, the name stored in the Phonebook is displayed as sender or recipient. However, when the sender's mail address is “phone number@docomo.ne.jp”, the name is not displayed even when “phone number@docomo.ne.jp” is stored in the mail address field in a Phonebook entry. Store the phone number part only to display the name. When a sender's/recipient's phone number or mail address matches a Phonebook entry stored as secret data, the name is not displayed. It is displayed in Secret Mode or Secret Data Only. Even when a sender's/recipient's phone number or mail address matches a Phonebook entry not stored as secret data, the name is not displayed in Secret Data Only. Switch to Secret Mode or release Secret Data Only to display the name.
- When “Message” of “Mail list display” is not checked, the text does not appear on the Inbox/Outbox/Draft List.

Managing Mail Messages

Function Menu of the Inbox Folder List/Outbox Folder List

Function menu	Operation/Explanation
Operate folder (Add folder)	You can add a new folder. You can add up to 22 folders to each of "Inbox" and "Outbox". ▶ Add folder ▶ Enter a folder name. ● You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder (Edit folder name)	You can edit the names of the added folders only. ▶ Edit folder name ▶ Edit the folder name. ● You can enter up to 10 full-pitch/20 half-pitch characters.
Operate folder (Sort folder)	You can sort folders. You can sort only the added folders and the i-oppli mail folders. ▶ Sort folder ▶ Use  to sort the order of the folders ▶  Select
Operate folder (Delete folder)	All the mail messages including secret mail in the folder will be deleted as well. ▶ Delete folder ▶ Enter your Terminal Security Code ▶ YES
Open folder	You can display the mail messages in the i-oppli mail folder without running mail-linked i-oppli.
Read all [Inbox Folder only]	You can change unread mail in the folder to read mail. ▶ YES
Sort (Auto-sort)	See page 196.
Sort (Re-sort)	You can resort mail messages following the sorting conditions specified by "Auto-sort". ▶ Re-sort ▶ YES ● When the folder applied with Mail security (see page 191) is found, you need to enter your Terminal Security Code.
Mail security	You can set the folder to open only when you enter your Terminal Security Code. ▶ Enter your Terminal Security Code ▶ YES ● To release it, perform the same operation.
lr/  transmission (Send all lr data)	See page 305.
lr/  transmission (All  transmission)	See page 307.

Function menu	Operation/Explanation
No. of messages	You can display the number of stored received mail messages, Messages R/F, and sent mail messages.
Delete (DEL all read mails) [Inbox Folder only]	You can delete all the read mail messages including secret mail in all Inbox folders. All the read SMS messages on the UIM are deleted as well. ▶ DEL all read mails ▶ YES
Delete (DEL all recv. mails) [Inbox Folder only]	You can delete all the mail messages including secret mail in all Inbox folders. All the received SMS messages on the UIM are deleted as well. ▶ DEL all recv. mails ▶ Enter your Terminal Security Code ▶ YES
DEL all sent mails [Outbox Folder only]	You can delete all the mail messages including secret mail in all Outbox folders. All sent SMS messages on the UIM are deleted as well. ▶ Enter your Terminal Security Code ▶ YES

Information

<Operate folder (Delete folder)>

- You cannot delete an i-oppli mail folder if corresponding mail-linked i-oppli exists.

If the software program does not exist, you can delete the i-oppli mail folder, but this will delete both folders created in the Outbox Folder List and Inbox Folder List.

<Sort (Re-sort)>


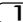




- You cannot re-sort the mail messages in the "Chat" folder and "Trash box" folder.
- Mail messages which are not applied with "Auto-sort" are sorted into the "Inbox" folder.



<Mail security>

- You can neither delete the Mail-Security-activated folder nor edit its name.

Function Menu of the Inbox List/Outbox List/Draft List

Function menu	Operation/Explanation
Reply/forward (Reply) [Inbox only]	See page 184.
Reply/forward (Reply with quote) [Inbox only]	See page 184.
Reply/forward (Forward) [Inbox only]	See page 184.

Function menu	Operation/Explanation
Edit [Outbox only]	You can re-edit the sent mail message and send it again. When you have selected an i-mode mail message, go to step 2 on page 172. When you have selected an SMS message, go to step 2 on page 206.
Protect (Protect ON/OFF) [Inbox/Outbox]	You can protect the mail message so that it is not overwritten and deleted. You can protect all the received and sent messages. (2,500 received messages, 1,000 sent messages) The protected one is indicated by “  ”. ▶ Protect ON/OFF ● To release protection, perform the same operation. ● You can switch between protected and unprotected also by pressing () from the detailed Received Mail display or detailed Sent Mail display.
Protect (ProtectSLCT. ON/OFF) [Inbox/Outbox]	▶ ProtectSLCT. ON/OFF ▶ Put/Remove a check mark for mail messages to be protected/unprotected ▶  (Finish) ● A check mark is placed to the mail already protected.
Move/copy (Move) [Inbox/Outbox]	▶ Move ▶ Select a destination folder ▶ Put a check mark for mail messages to be moved ▶  (Finish) ▶ YES
Move/copy (Move to trash) [Inbox only]	You can move mail messages to the “Trash box” folder. The mail messages moved to the “Trash box” folder are preferentially overwritten (deleted). ▶ Move to trash ▶ Put a check mark for mail messages to be moved to the trash box ▶  (Finish) ▶ YES
Move/copy (UIM operation) [Inbox/Outbox]	You can copy or move the mail message to the UIM or FOMA phone. (See page 346)
Move/copy (Copy to microSD)	See page 295.
Move/copy (Store in Center)	You can save mail messages stored in FOMA phone to the Data Storage Center. Data Security Service is a pay service that is available on a subscription basis. ▶ Store in Center ▶ Enter your Terminal Security Code ▶ Put a check mark for mail messages to be saved ▶  (Finish) ▶ YES ● You can select up to 10 mail messages. ● You do not need to put a check mark for the mail messages on the detailed Received Mail display and detailed Sent Mail display.

Function menu	Operation/Explanation
Search/sort (Search sender/Search receiver) [Inbox/Outbox]	You can retrieve mail messages with a mail address or phone number of a sender or recipient. “Search sender” for received mail and “Search receiver” for sent mail are displayed respectively. ▶ Search mail ▶ Search sender or Search receiver ▶ Select an item. Phonebook ... Call up a Phonebook entry and select a phone number or mail address. Received address ... Select a phone number or mail address and press ( (Select)). Sent address ... Select a phone number or mail address and press ( (Select)). Enter address ... Enter the mail address or phone number. ● You can enter up to 50 half-pitch characters.
Search/sort (Search subject) [Inbox/Outbox]	You can retrieve mail messages with a subject. ▶ Search mail ▶ Search subject ▶ Enter a subject. ● You can enter up to 100 full-pitch/200 half-pitch characters.
Search/sort (Search subject+msg) [Inbox/Outbox]	You can retrieve mail messages with a subject or text. ▶ Search mail ▶ Search subject+msg ▶ Enter a part of a subject or text. ● You can enter up to 100 full-pitch/200 half-pitch characters.
Search/sort (Sort) [Inbox/Outbox]	You can change the order of displayed mail messages. ▶ Sort ▶ Select an order.
Search/sort (Filter) [Inbox/Outbox]	You can display the mail messages only that satisfy the condition. ▶ Filter ▶ Select a type.
Search/sort (Display all) [Inbox/Outbox]	You can re-display all mail messages in “By date ↑” order after using Search Mail, or the Sort or Filter function. ▶ Display all

Function menu	Operation/Explanation
Mail history [Inbox/Outbox]	<p>You can display the history of sent/received mail from the sender or to the recipient being selected or displayed. Up to 1,000 histories are displayed in the chronological order from the most recent one.</p> <p>▶ Select a sender's or destination address. The target sent/received mail histories are displayed.</p> <p>◀ ... Sent mail ▶ ... Received mail</p> <ul style="list-style-type: none"> ● Select a history; then you can bring up the detailed Received Mail display or detailed Sent Mail display. Press (CLR) to return to the former display. ● You can display also by pressing (Z) on the detailed Received Mail display or detailed Sent Mail display.
Color label [Inbox/Outbox]	<p>You can color the characters on the Inbox List and Outbox List for classifying mail. Select "Default" to set ordinary character color.</p> <p>▶ Select a color.</p>
List setting	<p>You can select the item to be displayed on the List. You can also switch between the name stored in the Phonebook and the mail address/phone number for the display in the sender's/destination address field.</p> <p>You can list the mail messages by the subject depending on the setting of "Mail list display".</p> <p>▶ Select an item to be displayed.</p> <ul style="list-style-type: none"> ● You can switch each time you press (Change).
Ir/ iC transmission (Send Ir data)	See page 305.
Ir/ iC transmission (Send all Ir data) [Draft only]	See page 305.
Ir/ iC transmission (iC transmission)	See page 306.
Ir/ iC transmission (All iC transmission) [Draft only]	See page 307.
No. of messages	You can display the number of stored received mail messages, sent mail messages and draft mail messages.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected)	▶ Delete selected ▶ Put a check mark for mail messages to be deleted ▶ (Finish) ▶ YES

Function menu	Operation/Explanation
Delete (Delete read mails) [Inbox only]	<p>You can delete all the read mail messages in the folder.</p> <p>▶ Delete read mails ▶ YES</p>
Delete (Delete all SMS-R) [Inbox only]	<p>You can delete all the SMS reports. While displaying SMS reports using the Search Mail function or Filter function, only the displayed SMS reports are deleted.</p> <p>▶ Delete all SMS-R</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Delete (DEL all frm folder) [Inbox/Outbox]	<p>You can delete all mail messages in the folder.</p> <p>▶ DEL all frm folder</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Delete (Delete all) [Draft only]	<p>You can delete all the mail messages in Draft.</p> <p>▶ Delete all</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>

Information
<p><Edit></p> <ul style="list-style-type: none"> ● To use "Mail group" for destination addresses, delete all the entered addresses, press (Finish) to complete the deletion, and then re-select the address field.
<p><Protect></p> <ul style="list-style-type: none"> ● You cannot protect mail messages in the "Trash box" folder. ● If you protect all the sent messages which are stored to the maximum, you can no longer compose i-mode mail messages.
<p><Move/copy (Move to trash)></p> <ul style="list-style-type: none"> ● If you move unread mail to the Trash box, it changes to read mail.
<p><Move/copy (Store in Center)></p> <ul style="list-style-type: none"> ● You cannot save the SMS messages stored on the UIM. ● You cannot save the files attached to mail. ● You cannot use Data Security Service when you are out of the service area. ● When you have not signed up for Data Security Service, the message to that effect appears. ● You can download the mail messages saved to the Data Security Center from its site to your FOMA phone. For details, refer to "Mobile Phone User's Guide [i-mode]".
<p><Search/sort></p> <ul style="list-style-type: none"> ● Even if you set "No title" for "Search subject" of "Search mail", you cannot search for the i-mode mail whose subject is not entered and displayed as "No title".
<p><Color label></p> <ul style="list-style-type: none"> ● Color Label applied to the mail messages is released when they are copied to the microSD memory card, copied/moved to the UIM, copied/moved from the UIM or sent via infrared rays or iC transmission. ● Color Label applied to the SMS messages on the UIM is released when the UIM is dismounted and then mounted.

Function Menu of the Detailed Received Mail Display/Detailed Sent Mail Display

Function menu	Operation/Explanation
Reply/forward (Reply) [Received Mail only]	See page 184.
Reply/forward (Reply with quote) [Received Mail only]	See page 184.
Reply/forward (Forward) [Received Mail only]	See page 184.
Edit [Sent Mail only]	See page 192.
Resend [Sent Mail only]	You can re-send the sent mail message. ▶ YES
Protect ON/OFF	See page 192.
Move/copy (Copy)	▶ Copy ▶ Select an item to be copied. ● See page 360 for how to copy. ● When the addresses of the sender and another recipient of simultaneous mail are found or the multiple destination addresses are found, select a mail address or phone number to be copied.
Move/copy (Move)	▶ Move ▶ Select a destination folder.
Move/copy (Move to trash) [Received Mail only]	You can move the mail to the "Trash box" folder. The mail messages moved to the "Trash box" folder are preferentially overwritten (deleted). ▶ Move to trash ▶ YES
Move/copy (UIM operation)	You can copy or move the mail to the UIM or FOMA phone. (See page 346)
Move/copy (Copy to microSD)	See page 295.
Move/copy (Store in Center)	See page 192.
Operate file (Save attached file)	See page 185.
Operate file (Save insert image)	See page 179.

Function menu	Operation/Explanation
Operate file (Save D-pictograph) [Received Mail only]	You can save Decomail-pictographs in the mail text at once. You can save up to 20 of them. ▶ Save D-pictograph ▶ YES ● See page 162 for when the Decomail-pictographs are stored to the maximum. ● See page 274 for how to check the stored Decomail-pictographs.
Operate file (Save as template)	You can save the sent/received Deco-mail as a template. ▶ Save as template ▶ YES ● See page 162 for when the templates are stored to the maximum. ● See page 178 for how to check the stored template.
Operate file (Property)	You can display the file name and file size of the image inserted into the text. ▶ Property ▶ Select an image.
Operate file (Delete att. file)	▶ Delete att. file ▶ YES
Store (Store address)	See page 87.
Store (Add to phonebook)	See page 87.
Store (Auto-sort)	You can store a sender or subject as a sort condition. (See page 196)
Store (Add desktop icon)	See page 114.
Mail history	See page 193.
Color label	See page 193.
Display (Name/address)	You can display the sender's/destination address by the name stored in the Phonebook or by the mail address/phone number. ▶ Name/address ● You can switch also by pressing (5) .
Display (Scroll)	See page 198.
Display (Character size)	See page 115.
Display SMS report [Sent Mail only]	You can check the result of the SMS message you sent, or the date and time it arrived at the destination. To receive the SMS report, set "SMS report request" to "ON".

Function menu	Operation/Explanation
Ir/FC transmission (Send Ir data)	See page 305.
Ir/FC transmission (FC transmission)	See page 306.
Delete	<p>▶ YES</p> <ul style="list-style-type: none"> You can delete the mail message also by pressing (O).

Information

<Resend>

- If you re-send a failed-to-send mail message, it is saved as the sent mail message. If you re-send the failed-to-send simultaneous message to all addresses, it is saved as the sent mail message.

<Sent Address> <Received Address>

Displaying Sent/Received Mail Record

Sent and received i-mode mail messages and SMS messages are stored in Sent Address and Received Address, up to 30 messages each. You can check the List for the mail addresses and phone numbers. When you exchange mail messages with the same mail address or phone number, the older one is stored.


- In Dual Mode of 2in1, up to 60 records for Number A/ Address A and Number B/Address B are stored in Received Address in total.

1

When Using Sent Address

Press and hold (O) for at least one second.

- SMS :SMS message successfully sent
- MAIL :i-mode mail successfully sent
- SMS :SMS message failed to be sent

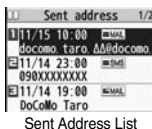

- MAIL :i-mode mail failed to be sent
- :Time-difference corrected time

- Press (MENU) (Change) from the Sent Address List to display Redial. When the Sent Address List is displayed from Dialed Calls, you can press (MENU) (Change) to display Dialed Calls.

When Using Received Address

Press and hold (O) for at least one second.

- SMS :SMS message
- MAIL :i-mode mail
- :Time-difference corrected time
- SMS/i-mode mail message received to Number B/



- Address B (only in Dual Mode of 2in1)
- Press (MENU) (Change) on the Received Address List to display Received Calls.

2 Select a record to be displayed.

The detailed display of the Address List is displayed.

- With an SMS message for which the other party's phone number is not notified, the reason for no caller ID is displayed.
- To send i-mode mail to the displayed address, press (O) (MAIL) and go to step 3 on page 172. To send an SMS message to the displayed phone number, press (O) (MAIL) and go to step 3 of "Composing SMS Messages to Send" on page 206.
- To store in the Phonebook, press (MENU) (Store). Go to step 2 of "Storing Displayed Phone Number/Mail Address in Phonebook" on page 88.

Function Menu while Sent/Received Address is Displayed

Function menu	Operation/Explanation
Character size	<p>You can switch the character size for the list.</p> <ul style="list-style-type: none"> The setting here applies to "Dialed/recv. calls" of "Character size".
Feel * Mail [Received Address only]	See page 110.
Add to phonebook	See page 87.
Add desktop icon	See page 114.
Compose message	<p>You can compose an i-mode mail message. The mail address is entered in the address field. Go to step 3 on page 172.</p>
Compose SMS	<p>You can compose an SMS message. The phone number is entered into the address field. Go to step 3 of "Composing SMS Messages to Send" on page 206.</p>
Dialing	<p>If the mail address has been stored in a Phonebook entry, you can make a voice call, videophone call or PushTalk call to the phone number stored in the Phonebook.</p> <p>▶ Select a dialing type.</p> <ul style="list-style-type: none"> When you select "Select image", select an image to be sent to the other party during a videophone call. To cancel the setting, select "Release". When multiple phone numbers are stored in a Phonebook entry, you can dial the first phone number. <p>▶ Dial</p> <ul style="list-style-type: none"> To make an international call, select "Int'l dial assist", select an international call access code, and follow the procedure above after selecting "Dialing" from the Function menu. (See page 58) To set Caller ID Notification, select "Notify caller ID". (See step 2 on page 47)

Function menu	Operation/Explanation
Redial/ Dialed calls [Sent Address only]	You can display the Redial List or the Dialed Call List.
Received calls [Received Address only]	You can display the Received Call List. All received calls (all calls) are displayed.
Delete this	► YES
Delete selected	► Put a check mark for records to be deleted ► (Finish) ► YES
Delete all	► Enter your Terminal Security Code ► YES

<Auto-sort>

Sorting Mail Automatically to Each Folder

You can automatically save the mail messages that satisfy the set conditions to the specified folder. This function applies to only the added folders and i-appli mail folders.

1 Inbox Folder List/Outbox Folder List

► (FUNC) ► Sort ► Auto-sort

Follow the operation of the Function menu list on page 196 to set "Auto-sort".

If you select a folder for which Auto-sort conditions have been set, the Auto-sort Setting display appears.

Auto-sort Storing

You can specify a sort condition and folder from the detailed Sent/Received Mail display.

1 Detailed Sent Mail display/Detailed Received Mail display

► (FUNC) ► Store
► Auto-sort ► Do the following operations.

Item	Operation/Explanation
Address sort	You can set the displayed sender's/recipient's address for a sorting condition. ► Select a folder. • When multiple addresses are found, select an address.
Subject sort	You can edit the displayed subject and set it for a sorting condition. ► Edit the subject ► Select a folder.

■ To change the condition

The confirmation display appears asking whether to replace or overwrite.
Select "YES" to replace the set condition with the new one.

■ When the same condition is set for another folder

The confirmation display appears asking whether to change. Select "YES" to release the condition set for another folder and to set for the selected folder.

- You cannot change the setting for a Mail-Security-activated folder.

■ When storing another address for the folder set for "Address sort"



The confirmation display appears asking whether to add the address.

Information

- You can store a total of 700 addresses in all folders.
- When multiple conditions match, sorting is done in the priority below.
 - ① Sort all
 - ② Subject sort
 - ③ Reply impossible/Send impossible
 - ④ Address sort (Look-up address/Enter address)
 - ⑤ Address sort (Look-up mail group)
 - ⑥ Address sort (Look-up group)
- Mail messages sent simultaneously to multiple members cannot be sorted by "Address sort" or "Send impossible".
- Area Mail messages are not sorted by "Address sort".

Function Menu of the Auto-sort Setting Display

Function menu	Operation/Explanation
Address sort (Look-up address)	You can look up a mail address or phone number in the Phonebook or Sent/Received Address and set it to the folder for sorting. ► Look-up address ► Select an item. Phonebook ... Call up a Phonebook entry and select a phone number or mail address. Sent address ... Select a phone number or mail address and press (Select). Received address ... Select a phone number or mail address and press (Select).
Address sort (Look-up group)	You can set a group to be sorted into the folder. ► Look-up group ► Select a group.
Address sort (Look-up mail group)	You can set a mail group to be sorted into the folder. ► Look-up mail group ► Select a mail group.


Function menu	Operation/Explanation
Address sort (Enter address)	<p>You can directly enter a mail address or phone number to be sorted into the folder.</p> <ul style="list-style-type: none"> ▶ Enter address ▶ Enter a mail address or phone number. • You can enter up to 50 half-pitch characters. • When the mail address is “phone number@docomo.ne.jp”, enter the phone number only. You can sort SMS messages as well if you enter the phone number only.
Subject sort	<p>You can enter the subject of i-mode mail messages to be sorted into the folder. One subject can be set per folder.</p> <ul style="list-style-type: none"> ▶ Enter a subject. • You can enter up to 100 full-pitch/200 half-pitch characters.
Reply impossible	<p>You can set reply-disabled mail messages to be sorted. You can set for only one folder.</p>
Send impossible	<p>You can set failed-to-send mail messages to be sorted. You can set for only one folder.</p>
Sort all	<p>You can sort all mail messages into the i-appli mail folder. You can set for only one i-appli mail folder each in the Inbox and Outbox. When “Sort all” is set, other sort settings are disabled.</p> <ul style="list-style-type: none"> ▶ YES
Edit addr/subj	<p>You can edit and store the mail address, phone number, and subject set for the folder.</p> <ul style="list-style-type: none"> ▶ Edit the mail address, phone number or subject.
List setting	<p>You can switch whether to display the destinations by the name stored in the Phonebook or by the mail address or phone number.</p> <ul style="list-style-type: none"> ▶ Name or Address • You can switch also by pressing  (Change).
Release (Release this)	<p>You can release the sort condition. (The item is deleted from the Auto-sort Setting display.)</p> <ul style="list-style-type: none"> ▶ Release this ▶ YES
Release (Release selected)	<p>You can select mail addresses or phone numbers, and release the sort condition for them. (The items are deleted from the Auto-sort Setting display.)</p> <ul style="list-style-type: none"> ▶ Release selected ▶ Put a check mark for mail addresses or phone numbers to be released ▶  (Finish) ▶ YES
Release (Release all)	<p>You can release all sort conditions. (The items are deleted from the Auto-sort Setting display.)</p> <ul style="list-style-type: none"> ▶ Release all ▶ YES

Information

<Address sort (Look-up group)>

- On the Auto-sort Setting display, “**GR**” is added to the front of group name.
- You cannot set groups on the UIM.
- The secret mail messages received in ordinary mode (not in “Secret mode” or “Secret data only”) are not sorted into the folder.

<Address sort (Look-up mail group)>

- On the Auto-sort Setting display, “” is added to the front of mail group name.

<Subject sort>

- When the subject matches sort conditions for multiple folders, it is sorted to the folder nearest to the “Inbox” folder or “Outbox” folder.
- Even if you set “No title”, the i-mode mail titled with “No title” because of no entry cannot be sorted.
- SMS messages cannot be sorted by subject.

<Sort all>

- You cannot sort SMS reports or SMS messages that have been directly received on the UIM.

<Mail Group>

MENU 2 6

Creating Mail Group

You can store mail addresses by group. You can send mail to regular destinations.

You can store up to five addresses per group, and up to 20 groups.

-  ▶ **Phonebook ▶ Phonebook settings ▶ Mail group ▶ Select a Mail group to be stored.**

 - When mail addresses are stored in a Mail group, “” appears at the lower left of the display. Press  () to compose i-mode mail to a selected Mail group set as the destination address. Go to step 3 on page 172.

Mail Group List
- Highlight <Not stored> and press  (Edit).**

 - If you select a stored mail address, the Mail Group Address Confirmation display appears.




Detailed Mail Group display
- Enter a mail address.**

 - You can enter up to 50 half-pitch characters. Repeat step 2 and step 3 to store multiple mail addresses.

Function Menu of the Mail Group List

Function menu	Operation/Explanation
Compose message	You can compose an i-mode mail message to the Mail group. Go to step 3 on page 172.
Edit group name	▶ Enter a name of the Mail group. ● You can enter up to 10 full-pitch/20 half-pitch characters.
Reset group name	You can reset the name of Mail group to the default. ▶ YES


Function Menu of the Detailed Mail Group Display/ Mail Group Address Confirmation Display


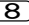




Function menu	Operation/Explanation
Edit address	Go to step 3 on page 197. ● You can edit the address also by pressing  (Edit).
Look-up address	You can call up a phone number or mail address in the Phonebook, Sent Address, or Received Address to enter it. ▶ Select an item. Phonebook ... Call up a Phonebook entry and select a phone number or mail address. Sent address ... Select a phone number or mail address and press  (Select). Received address ... Select a phone number or mail address and press  (Select).
Delete this	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES



<Mail Settings>

Setting Mail and Messages R/F

- 1**  ▶ **Mail settings**
▶ **Do the following operations.**

Item	Operation/Explanation
Scroll	You can set the number of lines that are scrolled at a time for when you press  on the detailed mail display, detailed Message R/F display, Message Composition display and preview display. ▶ Select the number of lines.
Character size	See page 115.

Item	Operation/Explanation
Mail list display	You can set items to be displayed on the Inbox/Outbox/Draft List by using radio buttons or check boxes. ▶ Select a display format ▶  (Finish)
Message display	You can set whether to display received mail in standard display (from the top) or from the text. ▶ Standard or From message
Mail blind	You can show the characters on the detailed mail display and Message Composition display in gray to make them hard to see from persons around you. (The characters on the Character Entry display are not shown in gray.) ▶ ON or OFF ● Press and hold  for at least one second while sent or received mail is displayed.
Mail security	See page 126.
Secret mail display	See page 126.
Auto color label	You can specify the text color of the sender, received date/time and others on the Inbox List by mail address. You can store up to 10 items. ▶ <Not stored> ▶ Select an item. Phonebook ... Call up a Phonebook entry and select a phone number or mail address. Sent address ... Select a phone number or mail address and press  (Select). Received address ... Select a phone number or mail address and press  (Select). Enter address ... Enter a mail address or phone number. ● To change the set color, press  (FUNC) and select "Select color". ● To delete the set item, press  (FUNC) and select "Delete" → "Delete this" or "Delete all" and select "YES". If you select "Delete all", you need to enter your Terminal Security Code. ▶ Select a color.
Pred. conv. at reply	You can set whether to preferentially display the words contained in the subject and text of the received mail message as conversion candidates when you reply to, reply with quote to, or forward it. ▶ ON or OFF

Item	Operation/Explanation
Header/signature	See page 199.
Set check new message	<p>You can select items to be checked from among i-mode mail, Message R and Message F, for when you perform "Check new message".</p> <p>▶ Put a check mark for the items to be checked  (Finish)</p>
Auto-display	See page 200.
Receiving display	<p>You can set whether to display the Message Receiving and Reception Result displays, even during operation of another function.</p> <p>▶ Alarm preferred or Operation preferred</p> <p>Alarm preferred ... Prioritizes the Message Receiving and Reception Result displays when you have new mail.</p> <p>Operation preferred ... Prioritizes the display of the current operation when you have new mail.</p>
Receive option setting	See page 183.
Attachment preference	<p>You can set whether to receive the attached file with an i-mode mail message. The attached files for which you remove a check mark are held at the i-mode Center. (The file in excess of 100 Kbytes is held at the i-mode Center, even if you put a check mark for it.)</p> <p>▶ Put a check mark for items to be received ▶  (Finish)</p> <ul style="list-style-type: none"> Put a check mark for "Tool data" to receive Phonebook entries, schedule events, ToDo items, and bookmarks. Put a check mark for "Other" to receive PC movies, document files, and files unsupported by the FOMA phone.
Auto melody play	<p>You can set whether to play back the attached or pasted melodies automatically for when you display the text of received mail, or message R/F.</p> <p>▶ ON or OFF</p>
Photo auto display	<p>You can set whether to automatically display the photo (still image) received during a call.</p> <p>▶ ON or OFF</p>
Chat setting	See page 205.
Check settings	You can check each of "Mail settings".

Information

<Message display>

- Even if "From message" is set, the message might not be displayed from the text depending on the number of characters in the text.

<Mail blind>

- Deco-mail messages are not displayed in gray.

<Auto color label>

- Even when you set this function, the text color of the mail message already received does not change.

<Set check new message>

- If you do not want to receive Messages R and Messages F by "Check new message", change these settings to "".



<Auto melody play>

- You cannot play back attached or pasted melodies during Play Background regardless of the setting of "Auto melody play".

Header/Signature

You can store a header, signature and quotation mark. Also, you can set whether to automatically paste the header or signature.

- 1  ▶ **Mail settings** ▶ **Header/signature**
▶ **Do the following operations.**

Item	Operation/Explanation
Header	<p>The header is the sentence such as greeting at the beginning of the text.</p> <p>▶ Select the header field ▶ Enter a header ▶  (Finish)</p> <ul style="list-style-type: none"> You can enter up to 5,000 full-pitch/10,000 half-pitch characters. If you do not want the header to be pasted automatically, select "Insert" to change "<input checked="" type="checkbox"/>" to "<input type="checkbox"/>". See page 174 for adding a header by mail message.
Signature	<p>The signature is your name and other information, placed at the end of the text.</p> <p>▶ Select the signature field ▶ Enter a signature ▶  (Finish)</p> <ul style="list-style-type: none"> You can enter up to 5,000 full-pitch/10,000 half-pitch characters. If you do not want the signature to be pasted automatically, select "Insert" to change "<input checked="" type="checkbox"/>" to "<input type="checkbox"/>". See page 174 for adding a signature by mail message.
Quotation marks	<p>The quotation mark is the symbol indicating a quotation from received mail for when you reply to mail.</p> <p>▶ Enter a quotation mark.</p> <ul style="list-style-type: none"> You can enter up to 10 full-pitch/20 half-pitch characters.

Information

- You can set decorations in a header and signature.

Information



- Even if you have put a check mark for "Insert", the header and signature cannot be pasted when you compose i-mode mail for Photo-sending during a call or from a template or i-øpli.
- You cannot paste headers, signatures or the quotation marks to SMS messages.

<Receive Message R/F>

Receiving Messages R/F Automatically

Message services automatically deliver information you want to your FOMA phone.

 
When your FOMA phone is in the service area, it receives Messages R/F automatically from the i-mode Center.

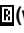
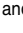




" (white)" or " (white)" appears at the top of the display when a Message R/F is delivered.

You can save up to 100 each of received Messages R/F.


1 When you receive a Message R/F, the " (white)" or " (white)" blinks and the message for receiving the Message R/F appears.

After the message is received, the number of received mail messages and Messages R/F is displayed.



- You can display the Message R/F List by selecting "MessageR" or "MessageF".
- If "Auto-display" is set to other than "OFF", the contents of received Message R/F are displayed automatically. They are displayed for 15 seconds when "Mail/Msg. ring time" is set to 0 through 10 seconds, or for the specified duration plus 5 seconds when it is set to 11 seconds or longer.
- If no keys are pressed for the specified duration, " " or " " (see page 112) appears on the desktop and the former display returns. (The transit time varies depending on the setting for "Mail/Msg. ring time".) Press , highlight " " or " ", and press  to display the Message R/F List.
- See page 30 for when the FOMA phone is closed.







■ When unread Messages R/F are found

" " is added to "Message R/F" of i-mode menu.

Information

- Received Messages R/F are not displayed automatically while displaying the screen other than the Stand-by display, while i-øpli is running, or during Public Mode (Drive Mode), Lock All, or Personal Data Lock.
- When the number of Message R/F exceeds the maximum of storage, they will be overwritten starting from the oldest Message R/F. Unread or protected Messages R/F are not overwritten.

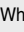Information

- When the FOMA phone cannot receive any more Messages R/F, " (black)" or " (black)" is displayed. Delete unnecessary Messages R/F, read unread Messages R/F or release protection.
- When the icon " (white)" or " (white)" is displayed, the i-mode Center holds Messages R/F. When the icon " (black)" or " (black)" is displayed, the i-mode Center can hold no more Messages R/F. Perform "Check new message" to receive them.
- After being displayed automatically, Messages R/F are still displayed as unread ones in the Message R/F List. However, if you scroll through the messages while they are being displayed automatically, they will be indicated as read.
- Messages R/F for you are held at the i-mode Center in the following cases:
 - When the power is off
 - During a videophone call
 - During Self Mode
 - When you are out of the service area
 - During infrared data exchange
 - While connecting to the FirstPass Center
 - During PushTalk communication
 - During Omakase Lock
 - During iC communication
 - During copy to microSD
 - While connecting to the Data Storage Center
 - When the space for Messages R/F is full with protected or unread messages

Auto-display

You can set how to automatically display Messages R/F received during standby.


- ### 1 ▶ Mail settings ▶ Auto-display
- ▶ Select an option for automatic display.

Information

- The Messages R/F are not displayed automatically when "Mail security" is set for "Inbox", or when "Mail security" is set for "MessageR" folder or "MessageF" folder.


Reading Received Messages R/F

- 1 **Inbox** ▶ **MessageR or MessageF**
▶ **Select a Message R/F to be displayed.**

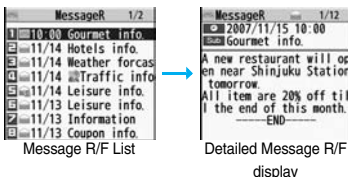

- You can display Messages R/F also by ▶ **Message R/F** ▶ **MessageR or MessageF**.
- When you select an unread Message R/F, “” (pink) changes to “”.
- Use to check other Messages R/F.
- When the text of Message R/F is long, use to scroll the display to check it. Also, you can press (MENU) (Page)/ (Page) or / to scroll page by page.

■ Message R/F List and Detailed Message R/F Display

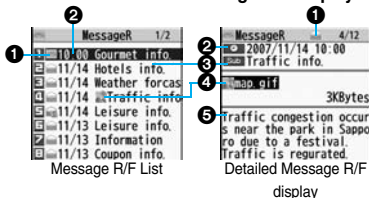

① Status of Message R/F

“” appears when protection is set.

	Unread Message R/F
	Read Message R/F

② Received date and time

The list shows the time for the Message R/F received today, and shows the date for the Message R/F received until yesterday. The detailed display shows the date and time the Message R/F was received.

③ Subject

④ The data attached or pasted

The detailed display shows the data volume.

	Valid melody file
	Valid image file
	Valid ToruCa file
	Multiple attached files
	Multiple pasted files
	File set with the UIM restrictions

⑤ Text of message

The phone number stored in the Phonebook is displayed by the name stored in the Phonebook.

Function Menu of the Message R/F List

Function menu	Operation/Explanation
Protect (Protect ON/OFF)	You can protect a Message R/F not to be overwritten or deleted. You can protect up to 50 messages (Message R and Message F each). Protected messages are indicated by “”. ▶ Protect ON/OFF • To release protection, perform the same operation.
Protect (Unprotect all)	▶ Unprotect all ▶ YES
Search/sort (Sort)	You can rearrange the displaying order. ▶ Sort ▶ Select a displaying order.
Search/sort (Filter)	You can display only Messages R/F that satisfy the condition. ▶ Filter ▶ Select a displaying type.
Search/sort (Display all)	After you execute “Sort” or “Filter”, you can reset it and list all Messages R/F by “By date ↑”. ▶ Display all
No. of messages	You can display the total number of Messages R/F stored in the FOMA phone, as well as the number of unread messages and protected messages.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected)	▶ Delete selected ▶ Put a check mark for Messages R/F to be deleted ▶ (Finish) selected) ▶ YES
Delete (Delete read mails)	You can delete all read Messages R/F. ▶ Delete read mails ▶ YES
Delete (DEL all frm folder)	You can delete all Messages R/F. ▶ DEL all frm folder ▶ Enter your Terminal Security Code ▶ YES

Information

<Search/sort>

- To return to the former status, execute “Display all”.
- If you close the List and re-open it, you can return to the List of all items.

Function Menu of the Detailed Message R/F Display

Function menu	Operation/Explanation
Protect ON/OFF	See page 201.
Operate file (Save attached file)	You can save attached or pasted files.(See page 185)

Function menu	Operation/Explanation
Operate file (Save insert image)	You can save the attached image and set it as the Stand-by display, Wake-up display, or another display. (See page 179)
Operate file (Save BG image)	▶ Save BG image ▶ YES ▶ Select a destination folder. Go to step 3 on page 159.
Operate file (Save D-pictograph)	You can save the all Decomail-pictographs inserted into the text. (See page 194)
Add to phonebook	See page 87.
Delete	▶ YES

What is Area Mail?

(Scheduled to be provided)

This service enables you to receive reports such as emergency earthquake alerts distributed from the Japan Meteorological Agency.

- You can receive Area Mail messages without i-mode contract.
 - You need to set "Receive setting" to receive Area Mail messages.
 - ※ See page 202 for "Receive setting" of Area Mail.
 - You might not be able to receive Area Mail messages in the following cases:
 - During a call (voice call/videophone call)
 - During packet communication (i-mode communication, data communication, PushTalk communication)
 - During updating software program
 - You cannot receive Area Mail messages in the following cases:
 - During Omakase Lock
 - During international roaming
 - During Self Mode
- ※ When you could not receive the messages by the reasons above, you cannot receive them again.



Receiving Area Mail

When you receive an Area Mail message, the ring tone for Area Mail sounds. The "Ring volume", "Ring time", and "Vibrator" settings follow that of "Mail".

When you receive an emergency earthquake alert, a dedicated buzzer (alarm) sounds, and the vibrator works to notify you. "Ring volume" is fixed to "Level 4", and "Vibrator" is fixed to "Pattern 2", so you cannot change their settings. You can use "Area mail settings" to set "Beep time".

Up to 30 Area Mail messages are saved separately from i-mode mail messages and SMS messages in the Inbox.

1 When an Area Mail message arrives, "Area Mail" blinks and the message telling its arrival appears.

- If you press any key, the former display returns.
- The details of some Area Mail messages might be displayed when you receive them. To clear it, press , **(CLR)**, or .



Reception Result display

- See page 186 for displaying Area Mail messages.

Information


- The buzzer sounds when you receive an emergency earthquake alert with "Original" set to sound any of the following tones:
 - Mail volume
 - Phone volume
 - Alarm volume
 - VM tone
 - Keypad sound
- Even when "Vibrator" of "Original" is set to "OFF", the vibrator works if you receive an emergency earthquake alert.
- When you receive a new Area Mail message with 30 Area Mail messages saved, the read messages are overwritten from the oldest. When all 30 messages are not read, they are overwritten from the oldest one in order.
- Whether the details of a received Area Mail message are displayed or not depends on the setting by the Area Mail message provider.

<Area Mail Settings>

Setting Area Mail

1  ▶ **Area mail settings**

▶ **Do the following operations.**

Item	Operation/Explanation
Receive setting	You can set whether to use Area Mail. ▶ Read exemption clause thoroughly ▶ Yes or No
Receive entry	You can register Message IDs for the reports to be received other than emergency information. You can register up to 20 IDs. ▶ <New> ▶ Enter your Terminal Security Code ▶ Enter a registration name ▶ Enter a Message ID. <ul style="list-style-type: none"> ● To edit a registered Message ID, highlight it, press  (Edit), and then enter your Terminal Security Code. ● You can enter up to 15 full-pitch/30 half-pitch characters for a registration name, and enter 4 half-pitch characters for a Message ID. ● You can edit also by selecting "Edit" from the Function menu. Select "Delete this" to delete the Message ID, and select "Delete all" and enter your Terminal Security Code to delete all Message IDs. ● You cannot edit/delete "Emergency information".
Beep setting	You can set whether to make the beep sound for when you receive an Area Mail message that beeps. ▶ ON or OFF <ul style="list-style-type: none"> ● When you set "OFF", the dedicated ring tone for Area Mail sounds.
Beep time	You can set the duration the beep sounds. ▶ Enter a beep time (seconds). <ul style="list-style-type: none"> ● Enter it in two digit, from "01" through "30".

Using Chat Mail

 
You can send or receive chat mail messages to and from multiple persons on a single display. To use Chat Mail, you need to store chat members. You can easily store them by creating chat groups.

Store Chat Members

You can store up to six chat members including the user (yourself).

- 1 Chat mail **Chat member** <Not recorded> **Enter a mail address.**

- To edit a stored member, select the member.
- When the mail address is "phone number@docomo.ne.jp", store the phone number only.
- You can enter up to 50 half-pitch characters.



Information

- If you edit the mail address of the stored member, the member's name and image are changed.


Function Menu of the Chat Member List

Function menu	Operation/Explanation
Edit	You can edit the mail address. Go to step 1 of "Store Chat Members" on page 203.
Refer address	You can look up a phone number or mail address in the Phonebook, Received Address, or Sent Address to enter it. Select an item. Phonebook ... Call up a Phonebook entry and select a phone number or mail address. Sent address ... Select a phone number or mail address and press (Select).
	Received address ... Select a phone number or mail address and press (Select).

Function menu	Operation/Explanation
Change member (Chat group)	You can store the members stored in a chat group as chat members. Chat group Group list Member list Group list ... You can select members by chat group. Member list ... You can select members from all the members stored in chat groups. <ul style="list-style-type: none"> • If you select "Group list", select a chat group. The members from the selected group are stored. • If you select "Member list", check the members you want to store and press (Finish). • If you have already stored chat members, the confirmation display appears asking whether to replace all the chat members.
Change member (Mail group)	You can store the mail addresses stored in Mail group as chat members. Mail group Select a Mail group. <ul style="list-style-type: none"> • If you have already stored chat members, the confirmation display appears asking whether to replace all the chat members.
Display setting	You can check the chat member's name, image, background color, and mail address. <ul style="list-style-type: none"> • You can press to switch members. • The mail address of the user (yourself) is not displayed.
Delete (Delete this)	Delete this YES
Delete (Delete all)	Delete all YES

Exchange Chat Mail Messages

 
- 1 Chat mail



Chat Mail display

- 2 **Select** **Enter characters.**

 - You can enter up to 250 full-pitch/500 half-pitch characters.



3 Press (Send).

The chat mail message is sent.
The sent chat mail message is displayed at the top of the Chat Mail display.



4 The display for receiving chat mail appears and a chat mail message is received.

The received chat mail message is displayed at the top of the Chat Mail display.




Repeat step 2 through step 4 to send and receive chat mail messages.

5 YES or NO

YES You can delete read and sent chat mail message from the “Chat” folder.

NO You do not delete read and sent chat mail message from the “Chat” folder.

Chat Mail ends.

- You can end Chat Mail also by pressing .
- When no sent and received chat mail messages are found, the confirmation display does not appear.

■ Chat Mail display

1 Image

The image you have stored in Chat Group is displayed.



2 Member name

The chat member's name store in the chat group is displayed. Also, the name is displayed with a specified background color.

- When the name is not stored in the chat group, up to eight half-pitch characters from the beginning of the mail address are displayed. When the mail address is stored in the Phonebook, up to four full-pitch/eight half-pitch characters from the beginning of the name are displayed.


3 Broadcast mark

Displayed when the chat mail message set with multiple addresses is received.

-  (blue): All addresses are stored in Chat Member
-  (dark blue): Addresses that are not stored in Chat Member are found



4 Sent/Received date and time

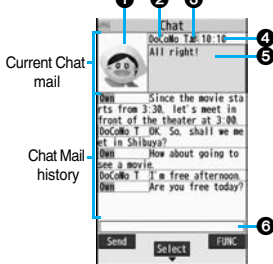The date and time the chat mail message was sent/received are displayed. The time is displayed for the chat mail messages sent/received today and the date for the chat mail messages sent/received until yesterday.



5 Text

The text of chat mail message is displayed. The number of characters of the text to be displayed is up to 250 full-pitch/500 half-pitch characters.

If the text exceeds four lines,  is displayed and you can switch the pages by pressing .

- You cannot switch the page of the text on the Chat Mail history.
- The text of the chat mail message successfully sent is displayed in black. The text of the chat mail message failed to be sent is displayed in gray.

6 Input box


Entered characters (characters to send) are displayed from the beginning by a factor of one line.

Information

- The communication fee for when you send chat mail messages to multiple chat members is the same as for sending a chat mail message to one member. (However, the data for the added address fields will involve a higher charge.)
- When “Receive option setting” is set to “ON”, you cannot execute Chat Mail.
- When the Inbox is full of unread or protected mail messages, you cannot execute Chat Mail. Delete unnecessary mail messages or read unread mail messages, or release the protection and then operate.
- Attached files or pasted data are not displayed.
- Sent/Received chat mail messages are saved to the “Chat” folder. (You can change the setting from “Auto-sort”.)
- The subject of a sent chat mail message is “チャットメール (chat mail)” (half-pitch characters).
- Even when the chat mail text on the Chat Mail display contains the phone number, mail address, or URL, the Phone To/AV Phone To, Mail To, and Web To functions are not available. However, those functions will be available when Chat Mail is finished and chat mail message is brought up from the “Inbox” or “Outbox”.
- During playing back a music file by MUSIC Player, a tone for the chat mail message does not sound.


If You Receive Chat Mail during Standby

If you receive a chat mail message during standby,

“ New 1” appears on the desktop.

Press , highlight “ New 1”, and press  (Select); then Chat Mail starts up.

Information

- Messages are recognized as chat mail messages in the following cases:
 - When the sender's address or destination address is stored in Chat Member or in a chat group
 - When the subject contains “チャットメール (chat mail)” (all full-pitch or all half-pitch characters)
- Even when you receive a chat mail message from a member of a chat group other than Chat Member while Chat Mail is running, “ New 1” appears.

■ If you start Chat Mail from the desktop or Chat Group

If you start Chat Mail from a mail address or from a chat group that is not stored in Chat Member, the confirmation display appears asking whether to delete stored member and start Chat Mail. Select "YES"; then the current chat members are deleted and the sender's mail address or chat group members are stored in Chat Member.

If you start Chat Mail from the desktop

The sender's mail address is stored in Chat Member. When the sender's mail address has been stored in a chat group, the members in that chat group are stored in Chat Member. However, the mail address selected as the destination is only the mail address of the sender.

If you start Chat Mail from Chat Group

The chat group members are stored in Chat Member. All members of the group are selected as the destination.

Function Menu of the Chat Mail Display

Function menu	Operation/Explanation
Send	You can send the chat mail message.
Select receiver	From among chat members, you can select destination addresses to send the chat mail messages to. ▶ Put a check mark for destination addresses to send the messages to (Finish)
Chat member	You can store chat members. (See page 203)
Broadcast address	You can check the destination addresses you have simultaneously sent a chat mail message to. ● When there are destination addresses that are not stored in Chat Member, the confirmation display appears asking whether to store them in Chat Member. If you store them in Chat Member, select "YES" and put a check mark for the destination addresses to be stored and press (Finish).
Reload	You can receive chat mail messages that you could not automatically receive. If you receive a new chat mail message, the Chat Mail display is updated.
View first line	You can display the latest chat mail message.
View last line	You can display the oldest chat mail message.
Delete read mails	You can delete all the received read chat mail messages and sent chat mail messages including secret mail and chat mail messages failed to send. ▶ YES

Information

<Broadcast address>

- You can store up to six members (including yourself) in Chat Member.

Chat Setting

- ▶ Mail settings ▶ Chat setting
▶ Do the following operations.

Item	Operation/Explanation
Sound setting	You can set a tone for when you send/receive a chat mail message on the Chat Mail display. ▶ Select a folder ▶ Select a tone. ● The tone does not sound when a chat mail message comes in from a member not stored in Chat Member.
Chat image	You can set whether to display images on the Chat Mail display. ▶ ON or OFF
User setting	You can set the name and image of the user (yourself). ▶ Select the name field ▶ Enter a user name. ● You can enter up to four full-pitch/eight half-pitch characters. ● If you do not change the user name, go to the next step. ▶ Select the image field ▶ Select a folder ▶ Select an image.

<Chat Group>

MENU 2 6

Creating Chat Group

You can store the mail addresses you want to exchange chat mail per group.

By storing multiple members in a group, you can set them as chat members at a time.

You can store up to five mail addresses per group. You can create up to five groups.

- ▶ Phonebook ▶ Phonebook settings
▶ Chat group ▶ Select a chat group to be stored.


- When the selected chat group has any member, "CHAT" appears at the lower left of the display.

If you press (CHAT), Chat group members are stored in Chat Member and Chat Mail starts. Go to step 2 on page 203.



- Highlight <Not stored> and press (Edit).

- If you select a stored mail address, the Chat Group Address Confirmation display appears.

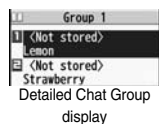




3 Enter a mail address.


- You can enter up to 50 half-pitch characters.
 - When the entered mail address is stored in the Phonebook, and the image is stored in the Phonebook, the image is also set.
 - When the mail address is “phone number@docomo.ne.jp”, store the phone number only.
- Repeat step 2 and step 3 to store multiple mail addresses.

Function Menu of the Chat Group List

Function menu	Operation/Explanation
Activate chat	The members in the chat group are stored as chat members and Chat Mail starts. Go to step 2 on page 203.
Edit group name	▶ Enter a chat group name. • You can enter up to 10 full-pitch/20 half-pitch characters.
Reset group name	You can reset the name of the chat group to the default. ▶ YES

Function Menu of the Detailed Chat Group Display/Chat Group Address Confirmation Display

Function menu	Operation/Explanation
Edit	You can edit the mail address. Go to step 3 of “Creating Chat Group” on page 206. • You can edit also by pressing () (Edit) .
Refer address	You can look up a phone number or mail address in the Phonebook, Sent Address, or Received Address to enter it. ▶ Select an item. Phonebook Call up a Phonebook entry and select a phone number or mail address. Sent address Select a phone number or mail address and press () (Select) . Received address Select a phone number or mail address and press () (Select) .
Change member	You can store members from a Mail group in the chat group. ▶ Mail group ▶ Select a Mail group. • If you have already stored members in the chat group, the confirmation display appears asking whether to replace all the members.

Function menu	Operation/Explanation
Member setting	You can set the member's name and image. You can switch members by pressing () . ▶ Select the member name field ▶ Enter a member's name. • You can enter up to four full-pitch/eight half-pitch characters. • Not to change the member's name, go to the next step. ▶ Select the picture field ▶ Select a folder ▶ Select an image.
Delete	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

<Compose SMS>

 
Composing SMS Messages to Send

You can compose and send SMS messages.




You can save up to 1,000 sent SMS messages including i-mode mail messages to the Outbox.

- You can send and receive SMS messages to and from subscribers of overseas carriers other than DoCoMo. For the countries and overseas carriers available for the service, refer to the DoCoMo Global Service web page.
- You can move/copy the sent SMS messages to the UIM. (See page 345)

1 ▶ Compose SMS



2 Select the address field ▶ Select an item.

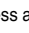- Phonebook** Call up a Phonebook entry and select a phone number.
- Sent address** Select a phone number and press () (**Select**) .
- Received address** Select a phone number and press () (**Select**) .
- Enter address** Enter a phone number. Only one address can be specified.
- You can enter up to 21 digits (including “+”).
- When the address is that of overseas carriers other than DoCoMo, enter “+” (press and hold () for at least one second), “country code”, and “destination mobile phone number” in that order. When the mobile phone number begins with “0”, enter the phone number except for the “0”. Also, you can enter “010”, “country code”, and “destination mobile phone number” in that order to send SMS messages. (When you reply to SMS messages received from overseas, enter “010”.)

3 Select the text field ▶ Enter text.

- The number of characters you can enter differs depending on the “SMS input character”.

4 Press .



The animation display during transmission appears and mail is sent.

5 OK

Information

- Depending on the radio wave conditions, the characters might not be sent successfully to the destination.
- When the number of sent mail messages exceeds the maximum number of storage, they will be overwritten starting from the oldest sent mail. However, protected sent mail cannot be overwritten.
- You cannot compose an SMS message when the number of sent mail messages in the Outbox has reached the maximum and those messages are all protected, or when 20 mail messages are saved to the Draft or the Draft is full. Release the protection for sent mail messages, or send/delete draft mail messages, and then operate again.
- Even if "Activate" of "Caller ID notification" is set to "OFF", the caller ID is notified to the other party you send an SMS message to. If you attempt to send an SMS message to the phone number headed by "184"/"186", the confirmation display appears asking whether to delete prefix numbers and send the mail.
- If you set "SMS report request" to "ON", you cannot send SMS messages to the i-mode phone of the mova service.
- "+" is valid only at the beginning of the address.
- You cannot send the message to addresses that include any characters other than numbers, "x", "#", and "+".
- You cannot start a new line while editing the text.
- The special symbols (see page 414) are replaced by half-pitch spaces.
- Each space is counted as a character.
- You cannot reply to the SMS message whose sender is User unset/PublicPhone/Unavailable.
- In B Mode of 2in1, you cannot compose SMS messages.

Function Menu of the SMS Composition Display

Function menu	Operation/Explanation
Send	You can send the SMS message. Go to step 5 on page 207.
Preview	Before sending, you can check the address and the text contents. <ul style="list-style-type: none"> Press   to send the SMS message.
Save	You can save the SMS message you are composing or editing to the Draft. <ul style="list-style-type: none"> You cannot save the message when the address field and text field are blank.

Function menu	Operation/Explanation
SMS report req.	See page 208.
SMS valid. per.	See page 208.
SMS input char.	See page 208.

<Receive SMS>

 
Receiving SMS Messages Automatically

You can save up to 2,500 received SMS messages including i-mode mail messages.





- You can move/copy the received SMS messages to the UIM. (See page 345)

1 When an SMS message arrives, " (white)" lights and the receiving message is displayed.



When receiving ends, the display shows the number of received SMS messages.



Reception Result display


- You can display the Inbox List by selecting "Mail".
- If no keys are pressed for about 15 seconds, " " (see page 112) appears on the desktop and the former display returns. (The transit time varies depending on the setting for "Mail/Msg. ring time".) Press , highlight " ", and press  (Select) to display the Inbox List.
- See page 30 for when the FOMA phone is closed.


Information

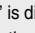- When the number of unread or protected messages in the Inbox has reached the maximum, no new messages can be received and " (black)" is displayed. To receive SMS messages, delete mail in the Inbox or read unread mail or release protection until " (black)" clears, and then perform "Check new SMS".

Display Newly Received SMS Messages

1 Reception Result display Mail ▶ Select an SMS message to be displayed.

 
- Press and hold  for at least one second from the detailed SMS display to change the size of text characters. When you set to "Large", the characters on the Folder List and the Inbox/Outbox/Draft List are displayed in large size as well.



Information

- Spaces will be displayed in the received SMS message depending on the entered characters.

Information

- While the sender's address (phone number) is highlighted in the displayed SMS message, you can press  (Select) to make a voice call, videophone call, or PushTalk call to the displayed number (the Phone To/AV Phone To function). Further, if the sender's phone number is stored in the Phonebook, the stored "name" is highlighted. In this case, you can dial the phone number in the same way.
- A Short Mail is received as an SMS message on the FOMA phone. When the sender does not notify the phone number, the reason is displayed in the sender's field.

<Check New SMS>

Checking whether Center Holds SMS Messages

When SMS messages arrive at the SMS Center, they are automatically sent to your FOMA phone, but will be held at the SMS Center if your FOMA phone cannot receive messages such as when it is off or out of the service area.



You can receive the messages by "Check new SMS".

1 Check new SMS

2 Return

If the Center holds SMS messages, the FOMA phone automatically receives them.

Information

- Some SMS messages are not delivered immediately after checking.
- When  (black) or  (black), etc. are displayed, you cannot receive any more SMS messages. Delete unnecessary mail, read unread mail, or release protection. (Read and unprotected messages are overwritten automatically from the oldest one.)
- You cannot use this function to receive i-mode mail or Messages R/F. Use "Check new message" to receive i-mode mail or Messages R/F.

<SMS Settings>

Setting SMS

SMS Report Request

You can set whether to request an SMS report for when sending an SMS message.

The SMS report lets you know that your SMS message was delivered to the destination.

You can check received SMS reports in the "Inbox" folder.

1 SMS settings ▶ SMS report request ▶ ON or OFF

- When you operate from the Function menu of the SMS Composition display, the setting is effective only for the SMS message you are composing.

SMS Validity Period

You can set the period that the SMS Center holds an SMS message sent but unsuccessfully delivered due to the out-of-service area, etc.

1 SMS settings ▶ SMS validity period ▶ Select a holding period.

- If you select "None", the stored SMS message is re-sent after a certain period of time and deleted from the SMS Center.
- When you operate from the Function menu of the SMS Composition display, the setting is effective only for the SMS message you are composing.

SMS Input Character

You can set the characters you can enter into the text of SMS messages. You can set to enter only half-pitch alphanumeric characters and half-pitch symbols.

1 SMS settings ▶ SMS input character ▶ Select an item.

Japanese (70char.)

... You can enter full-pitch and half-pitch characters. You cannot enter pictographs except "♥" and "☎" (see page 411). You can enter up to 70 characters for the text.

English (160char.)

... You can enter only half-pitch alphanumeric characters and half-pitch symbols. You can enter up to 160 characters for the text.

- When you operate from the Function menu of the SMS Composition display, the setting is effective only for the SMS message you are composing.

SMS Center Selection

※ Normally, you do not need to change this setting.

You can set the address and "Type of number" for the SMS Center.

This setting is for getting any service other than SMS Service you currently use.

1 SMS settings ▶ SMS center selection ▶ User setting ▶ Enter an address.

- You can enter up to 20 half-pitch characters.
- You can reset User Setting to "DoCoMo" by Reset ▶ Enter your Terminal Security Code ▶ YES.

2 International or Unknown

- If "X" or "#" is included in the entered address, you cannot set it for "International".

<Web Mail>

Using Web Mail

You can send mail messages or browse received mail messages on the i-mode site.

- You can use only in B Mode or Dual Mode of 2in1.
- For details on Web mail, refer to "Mobile Phone User's Guide [2in1]".

1 Web mail ▶ Follow the instructions on the display.

i-appli



What is i-appli?	210
Downloading i-appli from Sites	210
Starting i-appli	211
Setting i-appli	220
Starting i-appli Automatically	221
Operating i-appli Stand-by Display	221
Displaying i-appli Data Files on the microSD Memory Card	222

What is i-oppai?

By downloading i-oppai from i-mode sites, i-mode phone becomes more convenient. For example, you can enjoy various games downloaded to your i-mode phone, and can also use the i-oppai which enables you to directly store the data into the Phonebook or Schedule, or the i-oppai which links to Data Box, enabling you to save or obtain images.

- For details on the i-oppai, refer to the "Mobile Phone User's Guide [i-mode]".

<i-oppai Download>

Downloading i-oppai from Sites


You can download software programs from sites to the FOMA phone. You can save up to 100 files including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

1 Bring up an i-oppai downloadable site

- ▶ Select a software program.



2 Select "OK" when downloading ends.



- See page 162 when i-oppai programs are stored to the maximum.
- When downloading ends, the display for Software Setting (Network Set, Stand-by Set, Location Usage, or Program Guide Key) might appear. Press  (Finish) after the setting is completed. These settings can be done also from the Software List.

3 YES or NO

YES . . . Starts i-oppai.

NO . . . Returns to the site display.

■ When downloading is suspended

When you press  or  to suspend downloading an i-oppai program of 100 Kbytes or more, or when downloading is suspended by the radio wave conditions, the confirmation display appears asking whether to resume downloading. Select "YES" to resume downloading the remaining part. Select "NO" to show the confirmation display asking whether to save the file downloaded halfway. Select "YES" to partially save the file.




You can re-download the rest of the partially saved i-oppai program from the Software List.

■ When you downloaded mail-linked i-oppai

An i-oppai mail folder is created automatically each in the Inbox/Outbox Folder List, and the title of the downloaded mail-linked i-oppai becomes the name of the folder.

- You can save up to five mail-linked i-oppai programs.
- You cannot download the software program if the mail-linked i-oppai using the same folder is already in the Software List.
- You cannot download mail-linked i-oppai while Mail Security is set.
- You cannot download mail-linked i-oppai if the Inbox/Outbox Folder List contains five i-oppai mail folders.
- When re-downloading mail-linked i-oppai whose folder only remains, the confirmation display appears asking whether to use the existing i-oppai mail folder. If you select "YES", the existing folder is used. If you select "NO" because you do not use it, the confirmation display appears asking whether to delete an existing folder and create a new one. You cannot download mail-linked i-oppai without creating a new folder.

Information

- You can download pre-installed i-oppai programs from the "P-SQUARE" site (Japanese only).
 Menu→メニュー／検索 (Menu/Search)
→ケータイ電話メーカー (Mobile Phone Maker)→P-SQUARE
- 
- QR code for accessing the site
- Downloading is not available at some accessed sites.
 - Some i-oppai programs can automatically connect to the i-mode Center after they are downloaded. However, to use this service, you need to set it in advance in "Software setting (Network set)".
 -  appears at the top of the display while software information or a software program is being downloaded from SSL pages.
 - At downloading, the confirmation display might appear asking whether to send the "serial number of your mobile phone/UID". Select "YES" to start downloading. In this case, the "serial number of your mobile phone/UID" is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Provider) or others by this operation.

Information

- If you attempt to re-download the software program that was downloaded using a different UIM, the confirmation display appears asking whether to overwrite the software program. With the Osaifu-Keitai compatible i-appli, the confirmation display appears telling that the data on the IC card is to be deleted. Select "YES" to start downloading. When downloading ends, the software program that was downloaded using a different UIM and the data on the IC card are deleted.
- You cannot download some software programs while the IC card function is working or IC Card Lock is activated.
- Some software programs that start immediately after downloading cannot be saved.
- Depending on the data volume on the IC card, you might not be able to download Osaifu-Keitai compatible i-appli even if there is still available space for software storage. Delete the displayed software programs following the confirmation display, and then download it again. (Some software programs might not be targeted for deletion, depending on the software type to be downloaded.) Depending on the software program, you need to start it and delete the files on the IC card before deleting the software program itself.
- You can save up to 1 Mbyte per i-appli program.
- "i-appli mail" is the mail sent and saved by mail-linked i-appli and mail received as mail-linked i-appli. i-appli mail is automatically saved to the i-appli mail folder.
- The 3D polygonal※ engine enables cubic images to be displayed in i-appli.
 - ※By combining polygons, a deep, cubic image is displayed.

Display Software Info

You can display software information when downloading i-appli.

- 1 **i-appli** **i-appli settings**
 - ▶ **Disp. software info** ▶ **Display or Not display**

<i-appli Run>

Starting i-appli

- 1 (for at least one second)
 - ▶ **Select a software program to be started.**



Software List



- : GPS compatible i-appli
- : Osaifu-Keitai compatible i-appli
- : Management information i-appli
- : microSD memory card compatible i-appli
- : Vertical full display compatible i-appli
- : Horizontal display compatible i-appli (incompatible with full display)
- : Horizontal full display compatible i-appli
- : i-appli DX
- : Mail-linked i-appli
- : Partially saved i-appli
- : Set for Auto Start
- : Set for the i-appli Stand-by display
- : Set for both Auto Start and the i-appli Stand-by display
- : Can set for the i-appli Stand-by display
- : Downloaded from an SSL page
- : Downloaded or upgraded by using a different UIM

- You can display the Software List on the microSD memory card by **i-appli** **i-appli(microSD)** ▶ **SW list(microSD)**.
- Each time you press (**Change**) from the Software List in the FOMA phone, the display format changes.
- When you start an i-appli DX program or while it is running, the confirmation display might appear asking whether to permit the i-appli DX program to use the FOMA phone's information and functions.
- When you select a partially saved i-appli program, you can download the remaining part of it.
- " " or " " is displayed while i-appli is running.
- To end i-appli, press and hold (CLR) for at least one second or press ; then select "YES".
- The software program you started last time comes at the top of the list. You cannot manually change the order of software programs.
- See page 162 when you select "Search by i-mode".

Bring up IC Card List

You can list up Osaifu-Keitai compatible i-ϕpli programs.

1 [MENU] ▶ Osaifu-Keitai ▶ IC card content



- See page 162 when you select “Search by i-mode”.





Information

- When a software program to be started is not specified, select a software program.
- To start up i-ϕpli DX, set the data and time by “Set time” beforehand.
- When a software program is running, melodies are played back at the volume set for “Phone” of “Ring volume”. However, melodies are not played back during a call.
- You may need to set the communication setting while a software program is running.
- When communicating frequency is extremely high in a certain period of time while i-ϕpli is running, the confirmation display appears asking whether to continue communicating.
- With some software programs, you can use the Web To function and the Phone To/AV Phone To function from i-ϕpli. However, you cannot use them while the software program is running as the i-ϕpli Stand-by display.
- If you start a camera from i-ϕpli, the shot images are not saved with ordinary images, but are saved as part of i-ϕpli for its usage.
- If you start a camera from i-ϕpli, you can specify the image size or image quality for some i-ϕpli programs.
- You can scan QR codes and JAN codes from i-ϕpli using the camera. The scanned data is saved and used by the software program.
- Images[※] that are used by i-ϕpli and data you have entered might be sent over the Internet to the server automatically.

※i-ϕpli uses the following types of images:

- Images shot by the camera after it is started from a camera-linked application program
- Images obtained by the infrared data exchange function of i-ϕpli
- Images downloaded from sites or Internet web pages
- Images obtained from Data Box by i-ϕpli
- i-ϕpli mail running under mail-linked i-ϕpli might not be displayed correctly.
- Some i-ϕpli programs save the various information used on i-ϕpli when you finish it. However, the information might not be saved if the low battery alarm sounds or the battery pack is removed while i-ϕpli is running. If the battery level indicates “”, either press  or end i-ϕpli in accordance with the operation of each software program.

Information

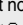- You can save the data files of some software programs to the microSD memory card, but you might not be able to use them for another model. You can check “ ϕpli(microSD)” for the software programs that use the microSD memory card.
- Some IPs (Information Providers) may access the software program stored in your mobile phone and have it directly halted, depending on the software program. In that case, you will not be able to start or upgrade the software program, or use it for the Stand-by display. You can delete it or display the software information. To resume running the software program, you need to receive the communication to cancel the software halting state. Contact the IP (Information Provider) to inquire about that.
- Some IPs (Information Providers) might send data to the software program stored in your mobile phone depending on the software program.
- When the IP (Information Provider) requests to halt or re-open the software program or sends data to it, the mobile phone communicates and “” is displayed. In this case, you are not charged a communication fee.
- To creators of i-ϕpli
If you encounter an error while creating a software program, the Trace Information display might help identify the problem.
For how to check the trace information, see “Trace Information” on page 212.

Trace Information

You can check the details when a software program malfunctions.


1 [MENU] ▶ i-ϕpli ▶ ϕpli info ▶ Trace info

- When the memory space for Trace Info becomes full, the information is overwritten from the oldest one.
- You can operate “Copy info” and “Delete info” from the Function menu.

Security Error History

You can check the details when an i-ϕpli program ends because of a security error.

1 [MENU] ▶ i-ϕpli ▶ ϕpli info ▶ Security error history

- You can operate “Copy info” and “Delete info” from the Function menu.
- You can display the security error history also by selecting “ Error” on the desktop.

Function Menu of the Software List/IC Card List

Function menu	Operation/Explanation
Set i-appli To	<p>You can set whether to permit the i-appli program to start from links on sites or mail. You can also set whether to start the i-appli program when you place the FOMA phone over an IC card compatible scanning device. You can set this for each software program.</p> <p>▶ Put a check mark for items to be set</p> <p>▶ (Finish)</p> <ul style="list-style-type: none"> Some items might not be set depending on the software program.
Auto start time	See page 221.
Software setting (Stand-by set)	See page 221.
Software setting (Network set)	<p>You can set whether to communicate while i-appli is running.</p> <p>▶ Network set</p> <p>▶ ON, OFF or Check every start</p> <p>▶ (Finish)</p> <ul style="list-style-type: none"> If you select "Check every start", the confirmation display appears each time you start it.
Software setting (Stand-by net)	See page 222.
Software setting (Icon info)	<p>You can set whether to permit the i-appli to use information of icons for the i-mode mail, SMS messages, Messages R/F, battery level, Manner Mode and the service area/out-of-service area.</p> <p>▶ Icon info ▶ ON or OFF ▶ (Finish)</p>
Software setting (Change mld./img.)	<p>You can set whether to permit the i-appli to change the setting for ring tones or the Stand-by display. This function is available only for i-appli DX.</p> <p>▶ Change mld./img.</p> <p>▶ ON, OFF or Check every change</p> <p>▶ (Finish)</p> <ul style="list-style-type: none"> If you select "Check every change", the confirmation display appears each time you change the setting for ring tones and the Stand-by display from i-appli.
Software setting (See P. book/hist.)	<p>You can set whether to permit the i-appli to refer to the Phonebook, Redial, and Received Calls. This function is available only for i-appli DX.</p> <p>▶ See P. book/hist. ▶ ON or OFF</p> <p>▶ (Finish)</p>
Software setting (View ToruCa)	<p>You can set whether to permit the i-appli to refer to ToruCa files. This function is available only for i-appli DX.</p> <p>▶ View ToruCa ▶ ON or OFF ▶ (Finish)</p>

Function menu	Operation/Explanation
Software setting (Location usage)	<p>You can set whether to permit the i-appli to use location information. This function is available only for i-appli DX.</p> <p>▶ Location usage ▶ ON or OFF</p> <p>▶ (Finish)</p>
Software setting (Program guide key)	<p>You can set the software program for the Program Guide i-appli that starts up from One Seg. You can set this for only the i-appli DX that links to One Seg.</p> <p>▶ Program guide key ▶ ON or OFF</p> <p>▶ (Finish)</p>
Software info	You can display the software name and version of the i-appli.
Upgrade	▶ YES
Add desktop icon	See page 114.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected)	<p>▶ Delete selected ▶ Put a check mark for software programs to be deleted</p> <p>▶ (Finish) ▶ YES</p>
Delete (Delete all)	<p>▶ Delete all</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Move to microSD	See page 298.
Move to phone	See page 298.
Power saver	<p>You can set whether to validate Power Saver Mode for each i-appli program for when "Power saver" is set to "ON".</p> <p>▶ ON or OFF</p>

Information

<Software setting (Icon info)>

- When you set "Software setting (Icon info)" to "ON" for the i-appli Stand-by display, the icon information for unread mail/message, battery level, Manner Mode, radio wave strength and out-of-service area can be sent to the IP (Information Provider) over the Internet in the same way as the serial number of your mobile phone/UIM, and can be deciphered by third parties.
- When the software program needs "Software setting (Icon info)", the software program might not run if "OFF" is selected.

Information

<Upgrade>

- Depending on the software program, you can upgrade it at start.
- At upgrading, the confirmation display might appear asking whether to send the “serial number of your mobile phone/ UIM”. Select “YES” to start upgrading. In this case, the “serial number of your mobile phone/UIM” is sent to the IP (Information Provider) over the Internet, so could be deciphered by third parties. However, your phone number, address, age, and gender are not notified to the IP (Information Provider) or others by this operation.
- You cannot upgrade the mail-linked i-αpli in the following cases:
 - While details of the corresponding i-αpli mail folder are displayed
 - While Mail Security is set
 - When Mail Security is set for the corresponding i-αpli mail folder

■ When you delete mail-linked i-αpli

The confirmation display appears asking whether to delete the i-αpli mail folder as well. If you do not delete it, you can check the text of mail from the Outbox/Inbox List.

YES Deletes both the software program and the i-αpli mail folder.

NO Deletes the software program only and the i-αpli mail folder is left.

Cancel Does not delete both the software program and i-αpli mail folder; the former display returns.

● You can delete neither the i-αpli program nor the i-αpli mail folder even if you select “YES”, in the following cases:

- While displaying details of the folder
- While Mail Security is set
- While the folder is set with security
- When the folder contains protected mail

■ When you delete an i-αpli program whose files are on the microSD memory card

The confirmation display appears asking whether to delete files on the microSD memory card as well.

YES Deletes both the software program and files on the microSD memory card. Press “YES” again on the confirmation display. You need to enter your Terminal Security Code to execute “Delete” or “Delete selected”.

NO Deletes the software program only and the files are left.

Cancel Does not delete both the software program and files on the microSD memory card, and the former display returns.

■ When you delete Osaifu-Keitai compatible i-αpli

The confirmation display appears telling that the files on the IC card will be deleted.

- You might not be able to delete the Osaifu-Keitai compatible i-αpli unless you delete the files on the IC card after starting the Osaifu-Keitai compatible i-αpli.
- You might not be able to delete the Osaifu-Keitai compatible i-αpli while the IC card function is working or IC Card Lock is set.

Pre-installed i-αpli Programs

The following i-αpli programs are pre-installed:

- You can delete the pre-installed i-αpli programs except for “Gガイド番組表リモコン (G Guide Program List Remote-controller)”. You can re-download them from the “P-SQUARE” site (see page 163). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 39) are set to them.
- Deadlines for re-download services
 - “リッジレーサーズモバイル (Ridge Racers Mobile)”: the end of October, 2011
 - “ぶよぶよ〜ん&COLUMNS (PuyoPuyo & COLUMNS)”: the end of October, 2011
 - “英語辞典 (English Dictionary)”: the end of October, 2011
 - “カウントダウントレインGPS (Countdown Train GPS)”: the end of November, 2010
 - “しゃべって翻訳 for P (Speech Translation for P)”: the end of September, 2011
- The re-download service might be halted or closed without notice even in the service period.
- Deadlines for downloading i-αpli additional data
 - “リッジレーサーズモバイル (Ridge Racers Mobile)”: the end of October, 2011
 - “英語辞典 (English Dictionary)”: the end of October, 2011
 - “カウントダウントレインGPS (Countdown Train GPS)”: the end of December, 2010
 - “しゃべって翻訳 for P (Speech Translation for P)”: the end of October, 2011

リッジレーサーズモバイル (Ridge Racers Mobile)

That popular racing game has now appeared as a mobile phone game! You can play the game to the very limit in the full horizontal display.



© 2004-2007 NBGI

1 Software List

▶ リッジレーサーズモバイル (Ridge Racers Mobile)

When you activate this i-αpli program in Normal Style, the confirmation display appears telling that you are advised to play the game in Horizontal Open Style.

2 Read “お知らせ (Information)” thoroughly

▶ はい (YES)

- If you select “いいえ (NO)”, “お知らせ (Information)” does not appear when you start the program next time.

3 Select a menu.

- ARCADE** For having auto racing among all 12 vehicles
- DUEL** For having a racing match one against one
- SURVIVAL** For having auto racing among 4 vehicles. The vehicle ranked lowest is disqualified by each round.
- TIME ATTACK** For driving only your own vehicle around the course to attain the best time
- HELP** For displaying how to operate the game
- OPTIONS** For selecting a key operation type or transmission, setting the volume level or vibrator, and setting the intuitive operation (motion tracking)
- RECORD** For displaying past records
- DOWNLOAD** For adding courses and vehicles by satisfying the certain conditions
- INFORMATION** For connecting to the site which contains the latest information and walk-through guide
- EXIT** For ending the application program
 - If no keys are pressed for certain period of time from the menu display, the title display appears.
 - If no keys are pressed for certain period of time from the title display, a demo display appears.
 - The additional data of the courses and vehicles are saved to the microSD memory card.

■ What is the motion tracking?

It is a way of operating i-oppli programs (by inclining or swinging the FOMA phone) through the recognition technology of the inside camera.

- It might not work in the following cases:
 - When the lens of the inside camera is dirty
 - When the clothes you are wearing are similar to the background
 - When the background is not stable such as when you are moving
 - When you are in a dark or too bright place

Information


- This application program is the game played by inclining or swinging the FOMA phone. If you excessively swing your FOMA phone, it might happen that it hits against persons or objects, resulting in accidents or damage. When playing the game, securely take hold of your FOMA phone, do not swing to an extent more than necessitated, and check around you for safety.

ぷよぷよ〜ん&COLUMNS(PuyoPuyo & COLUMNS)

This is the transplanted version of “ぷよぷよ〜ん (PuyoPuyo)” and “コラムス (COLUMNS)”, the puzzle games that become a massive hit for game consoles.

They support the matches using the Bluetooth function and widen the ways of playing.

1 Software List ▶ ぷよ&コラ(ぷよ) (PuyoPuyo) or ぷよ&コラ(コラ) (COLUMNS) ▶ or

- Select “ぷよ&コラ (ぷよ) (PuyoPuyo)” for playing “ぷよぷよ〜ん (PuyoPuyo)”, or select “ぷよ&コラ (コラ) (COLUMNS)” for playing COLUMNS.
- Press  to adjust the sound volume.

2 Select a game.

- ぷよぷよ〜ん (PuyoPuyo)** You can play “ぷよぷよ〜ん (PuyoPuyo)”.
- COLUMNS** You can play COLUMNS.

- オプション (Option)** You can set the sound volume or vibrator on/off of the application program. You can also initialize data files.

- 終了 (End)** You can end the application program.
 - Even by selecting the game you did not start in step 1, you can play it.

■ ぷよぷよ〜ん (PuyoPuyo)

1 Select a menu item.



© SEGA

- ひとりでぷよぷよ (Hitori de PuyoPuyo)** Play in the VS computer mode. When you have won whole 10 rounds, you beat the game. Select “最初から (from the beginning)”. When a data file saved halfway is found, you can select “続きから STAGEXX (from STAGEXX)”.

※XX denotes the stage number.

- ふたりでぷよぷよ (Futari de PuyoPuyo)** Play in the mode in which you can use the Bluetooth communication to have a match against others. For a Bluetooth match, see “About a Bluetooth match” on page 216.

- とことんぷよぷよ (Tokoton PuyoPuyo)** Play in the score attacking mode. First select the size of “ぷよ (Puyo)” and the level of difficulty. The number of colors for “ぷよ (Puyo)” differs depending on the level of difficulty.

- ハイスコア (High-score)** Displays the high score of the “とことんぷよぷよ (Tokoton PuyoPuyo)” mode.

- BGMへんこう (Change BGM)** Change BGM.

- ヘルプ (Help)** Displays how to play “ぷよぷよ〜ん (PuyoPuyo)”.

1 Select a menu item.



© SEGA

VS CPU . . . Play in the VS computer mode. When you have won whole 10 rounds, you beat the game. Select “最初から (from the beginning)”. When a data file saved halfway is found, you can select “続きから STAGEXX (from STAGEXX)”.

※XX denotes the stage number.

VS HUMAN

. Play in the mode in which you can use Bluetooth communication to have a match against others. For a Bluetooth match, see “About a Bluetooth match” on page 216.

エンドレス (Endless)

. Play in the score attacking mode. First select the level of difficulty. The starting level, score, and color of jewels vary depending on the level of difficulty.

ハイスコア (High-score)

. Displays the high score of the “エンドレス (Endless)” mode.

BGM変更 (Change BGM)

. Change BGM.


ヘルプ (Help)

. Displays how to play COLUMNS.


■ About a Bluetooth match

When you select “ふたりでぶよぶよ (Futari de PuyoPuyo)” on the “ぶよぶよ〜ん (PuyoPuyon)” menu, or when you select “VS HUMAN” on the COLUMNS menu, you need to do the following to connect to your opponent using Bluetooth:

To have a match with an unregistered player (first time)

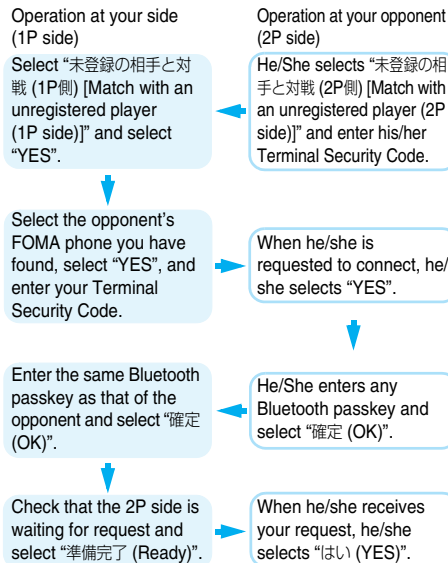

To have a match with a registered player

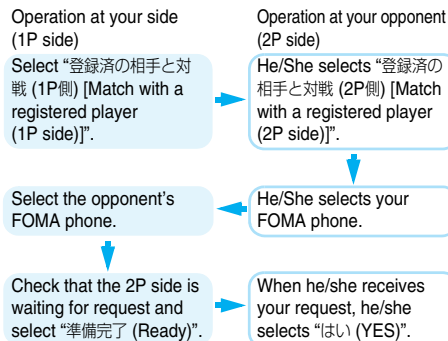

- Information**
- When “登録済の相手と対戦 (1P側) [Match with a registered player (1P side)]” or “登録済の相手と対戦 (2P側) [Match with a registered player (2P side)]” is selected with no Bluetooth device registered, the confirmation display appears asking whether to search for another player. When “YES” is selected, see “To have a match with an unregistered player (first time)”.
 - When you select a Bluetooth device other than a FOMA phone, the connection results in an error.
 - See page 348 for Bluetooth.

英語辞典 (English Dictionary)

You can use three volumes of dictionaries, “英会話とっさのひとこと辞典 (Spur-of-the-moment English conversation dictionary)”, “英和辞典 (English-Japanese dictionary)”, and “和英辞典 (Japanese-English dictionary)”. Voice data of the Spur-of-the-moment English conversation dictionary, and dictionary data of the English-Japanese dictionary and Japanese-English dictionary are saved to a microSD memory card.



- You are charged a packet communication fee to download voice data of Spur-of-the-moment English conversation dictionary or dictionary data of Japanese-English dictionary or English-Japanese dictionary. As the size of voice data or dictionary data is bulky, you are advised to subscribe to Pake-Houdai.
- While accessing the microSD memory card, wait until the operation ends without operating the keys. Depending on the number of voice data files on the microSD memory card, it may take long to access it.

1 Software List ▶ 英語辞典 (English dictionary) ▶ Read “ご利用の前に (Before use)” thoroughly ▶ OK

- To set the size of characters on the display, select “大 (Large)”, “中 (Medium)”, or “小 (Small)”.
- If you put a check mark for “次回からこの画面を表示しない。(Does not show this display from the next time.)”, “ご利用の前に (Before use)” does not appear when you start the program next time.

2 Select a dictionary to be used.

英会話とっさのひとこと辞典

(Spur-of-the-moment English conversation dictionary)

... The Spur-of-the-moment English conversation dictionary starts. Check the English expressions by specifying a scene or keyword you encounter or use in your daily life. Further, you can confirm those English expressions with audio, or enjoy the conversation in a quiz style.

旺文社監修英和辞典

(English-Japanese dictionary supervised by Obunsha)

... The English-Japanese dictionary starts. Enter the English spelling you want to check into the input box. When the English-Japanese dictionary is not downloaded, the confirmation display appears telling that it will be downloaded. Select “OK” to download.

旺文社監修和英辞典

(Japanese-English dictionary supervised by Obunsha)

... The Japanese-English dictionary starts. Enter the Japanese readings you want to check into the input box. When the Japanese-English dictionary is not downloaded, the confirmation display appears telling that it will be downloaded. Select “OK” to download.

文字サイズ変更 (Change character size)

... Changes the character size. Select a character size and press .

- You can bookmark the results you looked up in each dictionary. Press (機能) and select “お気に入り登録 (Bookmark)” to store.

カウントダウントレインGPS (Countdown Train GPS)

You can download the time schedule of trains, and can count down the departure time of the train you want to catch on a minute/second basis. The alarm function is also provided to notify you of 5 to 30 minutes before the departure. You can update the time schedule from the menu so the latest one is always available. Further, you can search for the nearest station using the GPS function.



Powered by
JR Travel Navigator

- For details, refer to “ヘルプ (Help)” in the menu.

1 Software List ▶ カウントダウントレイン-P (Countdown Train-P)

2 Read “免責事項 (Exemption clause)” thoroughly ▶ (次へ) ▶ はい (YES)

3 (メニュー) ▶ 最寄駅検索 (GPS) [Search the nearest station (GPS)] or 駅名入力検索 (Search by entering station name)

最寄駅検索 (GPS) [Search the nearest station (GPS)]

... Measures your current location and searches the surroundings for a station.

駅名入力検索 (Search by entering station name)

... Enter a station name, and press (決定). You do not need to enter the whole station name.

4 Select a station name ▶ Select a line and destination ▶ Highlight a train and press (保存) ▶ はい (YES)

しゃべって翻訳 for P (Speech Translation for P)

Just by speaking a phrase to be translated into your FOMA phone, this application program translates it from Japanese to English and vice versa.



© FueTrek Co.,Ltd. 2007

- You may be separately charged a packet communication fee for using.

1 Software List ▶ しゃべって翻訳_P (Speech Translation_P)

2 Read “しゃべって翻訳とは (What is Speech Translation?)” and “ご利用規約 (Usage rules)” thoroughly ▶ 同意する (Agree)

- You need to agree with “ご利用規約 (Usage rules)” for the first time.


3 Read “ご利用注意事項 (Cautions in use)” thoroughly ▶ OK ▶ はい (YES)

- If you select “いいえ (NO)”, “しゃべって翻訳とは (What is Speech Translation?)”, “ご利用規約 (Usage rules)”, and “ご利用注意事項 (Cautions in use)” do not appear when you start the program next time.

4 はい (YES) ▶ OK

- “i アプリの使い方 (How to use i-appli)” appears at the first startup.

5 Select a menu item.

- Translation** Starts translation.
- Profile editing** . . . Edit your name, gender, and age.
- History** Displays translation history.
- Menu** Confirm/Change the settings.
- Press  to switch between Japanese and English.

地図アプリ (Map Application)

By using the GPS function and map, you can check the map for where you are currently in or for the place you specify, or check your nearby area for details. You can then navigate yourself to the destination by vehicle, on foot, or by car.

Further, you can easily get train information by voice input.

- You are separately charged a packet communication fee.
- You are advised to use Pake-Houdai/Pake-Houdai Full for using this software program.



- If you delete this software program and then when you want to resume it, download it from “i エリアー周辺情報— (i-area-Local Information-)”.
- This software program is a mail-linked i-appli program, so it is not available when the mode of 2in1 is set to B Mode.
- Note that we are not held responsible for the accuracy and promptness of the map and route information.
- While driving, ensure that a person other than the driver operates this application program.
- See page 233 for details on operations.

楽オク出品アプリ2 (Rakuoku Exhibition Application 2)

“楽オク出品アプリ2 (Rakuoku Exhibition Application 2)” enables you to easily exhibit your goods on Rakuoku whenever you want wherever you are. Even if you are a beginner, an instruction guides you through exhibition procedures, so you can use it easily. The convenient functions such as shooting/editing photos and saving records are available so that you can exhibit your goods in a shorter time than you do on sites.

● You need to agree with “利用規約 (Usage rules)” for the first time.

- You are separately charged a packet communication fee.
- For details on Rakuoku, refer to “Mobile Phone User’s Guide [i-mode]”.
- To exhibit on Rakuoku, you need to register with the Rakuten membership and exhibitor membership.
- For the information about Rakuoku, refer to i-mode site:

☰ Menu → 楽オク  -オークション- (Rakuoku  -Auction-)

i-mode site:



QR code for accessing the site

i アプリバンキング (i-appli Banking)

This is an i-appli program that enables you to conveniently use mobile banking. Mobile banking enables you to use your FOMA phone to check the account balance, check the deposits/withdrawals, and transfer/shift money whenever you want and wherever you are. By entering your specified password at the start of this application program, you can use the mobile banking services for up to two banks.

● To use mobile banking, you need to have the bank account and subscribe to the mobile banking service of each bank.

- You are separately charged a packet communication fee.
- For details on the i-appli Banking, refer to “Mobile Phone User’s Guide [i-mode]”.
- For the information about i-appli Banking, refer to i-mode site:

☰ Menu → メニュー / 検索 (Menu/Search)
→ モバイルバンキング (Mobile Banking)
→ i アプリバンキング (i-appli Banking)



※ The display is for reference. The actual one may differ.



QR code for accessing the site


Gガイド番組表リモコン (G Guide Program List Remote-controller)

This is a convenient application program that bundles the TV program list and AV remote-controller function and the monthly charge is free.

Anytime and anywhere you are, you can easily obtain the terrestrial digital, terrestrial analog or BS digital TV program information for the desired time zone. You can know about titles, contents, and start/end times of TV programs. Further, you can start a One Seg program from the program list and vice versa.

If there is any program you want to watch, you can set timer recordings of the program on a DVD hard disk recorder over the Internet. (You need to have a DVD hard disk recorder that supports the remote timer recording function. And you need to perform initial settings of this application program.) Further, you can search for the program information by keywords such as program genres or celebrities you like. You can also remote-control a TV, video recorder, and DVD player. (Some models are not supported.)

- See “Using Infrared Remote-controller Function” on page 306 for details on the infrared remote-controller.
- You need to make the initial settings and to agree with the usage rules for the first time.
- You are separately charged a packet communication fee.
- To use this application program overseas, set the date/time for the FOMA phone to Japan time.
- For details, refer to “Mobile Phone User’s Guide [i-mode]”.
- You cannot delete “Gガイド番組表リモコン (G Guide Program List Remote-controller)”.
- “Gガイド番組表リモコン (G Guide Program List Remote-controller)” is a mail-linked i-oppli program, so you cannot use it in B Mode of 2in1.

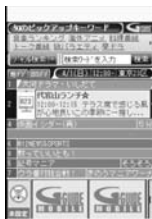

※ The display is for reference.
The actual one differs.
Local programs according to your region appear on your display.

■ About program booking function

You can select and book a program you want to watch from the program list of this application program.

How to book a program

1. Software List▶ Gガイド番組表リモコン (G Guide Program List Remote-controller)▶ Highlight a program to be booked and press **[iD]** (**[X-1]**)▶ 視聴予約 (Book program)
▶ 予約実行 (Execute booking)▶ Follow the instructions on the display.

■ About timer recording function

You can select a program you want to record and set a timer recording from the program list of this application program.

How to set a timer recording

1. Software List▶ Gガイド番組表リモコン (G Guide Program List Remote-controller)▶ Highlight a program to be set for a timer recording and press **[iD]** (**[X-1]**)▶ #ワンセグ録画予約 (One Seg timer recording)▶ 予約実行 (Execute booking)▶ Follow the instructions on the display. (You can set a timer recording also by highlighting a program and pressing **[#]**.)

■ About remote timer recording function

If you have a DVD hard disk recorder that supports the remote timer recording function, you can set timer recordings from the program list of this application program over the Internet even if you are away.

For remote timer recording, you need to make initial settings of this application program.

How to make initial settings

1. Set the Internet connection for the DVD hard disk recorder (Refer to the instruction manual of the DVD hard disk recorder you use.)
2. Software List▶ Gガイド番組表リモコン (G Guide Program List Remote-controller)▶ **[iD]** (**[メニュー]**)▶ リモート録画予約 (Remote timer recording)
▶ Operate following the guidance.

How to set timer recordings

After the initial settings, specify your desired program and select “リモート録画予約 (Remote timer recording)”. Then, the DVD hard disk recorder specified on this application program is connected via the Internet, and you can set timer recordings.

- You are separately charged a packet communication fee.

iD設定アプリ (iD Setting Application)

Chargeless electronic money “iD” is a service that enables you to do shopping by placing your Osaisu-Keitai or a credit card with “iD” mounted over a scanning device. You can do shopping easily and conveniently without signing.

Depending on the card publishing company, cashing is also supported.

- For using “iD”, you need to subscribe to a card publishing company that supports “iD” as well as to have Osaisu-Keitai on which specified settings have been completed by the iD application program and card application program provided by the card publishing company, or a credit card on which “iD” is mounted.
- When you use “iD” on Osaisu-Keitai, start the iD application program, agree with “ご利用上の注意 (Cautions in use)”, and then complete the specified settings at the iD application program end. Then download or start the card application program, and perform the specified settings at the card application program end.
- The expense (annual fees, etc.) charged for the iD service differs depending on the card publishing company.
- You are charged a packet communication fee for downloading the iD application program, and the card application program.
- For the information about “iD”, refer to the i-mode site:
Menu→メニュー／検索 (Menu/Search)
→ [iD]



※ The display is for reference.
The actual one may differ.



QR code for
accessing the site

DCMXクレジットアプリ (DCMX Credit Application)

“DCMX” is a credit service that supports “iD” and offered by NTT DoCoMo Group. DCMX provides DCMX mini that enables you to use up to ¥10,000 per month and respective DCMX services that enable you to use more amount and save up DoCoMo points. With “DCMX mini”, you can easily make a subscription from this application program and immediately use Mobile Phone Credit.



※ The display is for reference. The actual one may differ.

Subscribing for membership/Screening ※1

Setting card information

Use

No troublesome deposit is required!
Just by placing the setup completed mobile phone over the scanning device at a shop, you can enjoy shopping without signing※3.

Check ※2

You can check, on the application program, the balance for the current month and detailed account!

Change

When updating your card or changing models, you can apply from the application program.

※1 The online screening is conducted at your subscription for DCMX mini. For subscribing to a service other than “DCMX mini”, you are connected to the subscription page for i-mode.

※2 The checking function for usage status and others is available for “DCMX mini” only.

※3 You might be required to enter your pin number under certain conditions.

●For service contents and details of subscriptions, refer to the i-mode site of DCMX.

· i-mode site: Menu→DCMX iD



QR code for accessing the site

Information

- To start this application program for the first time, you need to agree with “ご利用上の注意 (Cautions in use)”.
- You are charged a packet communication fee for settings and operations.

■Cautions on Osaifu-Keitai compatible i-oppli

Note that we take no responsibility for any information set on your IC card.

FOMA 通信環境確認アプリ (FOMA Communication Environment Check app)

“FOMA 通信環境確認アプリ (FOMA Communication Environment Check app)” enables you to check whether the FOMA phone is available in the FOMA High-Speed Area.



※ The display is for reference. The actual one may differ.

- Use FOMA Communication Environment Check app with your consent to “ご利用の注意 (Cautions in use)”.
- Depending on the communication environment (such as weather, radio wave conditions, network congestion state) at communication environment check, the different result or “out of service” might appear even in the same area or at the same period of time.
- You might not be able to check correctly if you use another function while using this application program.

< appli Settings >

Setting i-oppli

- i-oppli appli settings
▶ Do the following operations.

Item	Operation/Explanation
Auto start setting	See page 221.
Disp. software info	See page 211.
Preferred tone	You can set which sound to be output preferentially, from MUSIC or i-oppli program, for when you start an i-oppli program during music playback. ▶ MUSIC or appli
αBacklight	You can set the backlight operation for when an i-oppli program is running. ▶ Select an item. Depend on system ... Follows the setting of “Backlight”. Depend on software ... Follows the setting of each software program. Constant light ... Lights constantly.
αPower saver	You can set to Power Saver Mode to decrease battery consumption by suspending the i-oppli program temporarily for when you close the FOMA phone during i-oppli running. ▶ ON or OFF ● This setting is valid from when an i-oppli program starts until it closes. ● Even when this function is set to “ON”, Power Saver Mode becomes invalid if “Power saver” that can be set for each i-oppli program is set to “OFF”.

Item	Operation/Explanation
αVibrator	<p>You can set the vibrator operation for when an i-αppli program is running.</p> <p>▶ Depend on system or Depend on software</p> <p>Depend on system</p> <p>... Does not work regardless of the setting of "Vibrator". With some software programs, the vibrator works.</p> <p>Depend on software</p> <p>... Follows the setting of each software program.</p>
Check settings	You can check each of "α appli settings".

Information

<αBacklight> <αVibrator>

- With some software programs, the backlight and vibrator settings are "OFF". Consequently, if you set "Depend on software", the backlight and vibrator will not work; if you want them to work, set "Depend on system".

Starting i-αppli Automatically

You can make an i-αppli program start automatically at the set date and time. Set the date and time for automatic start using Auto Start Time.

Auto Start Setting

You can set whether to enable automatic start of i-αppli programs.

- 1 ▶ i-αppli ▶ ▶ **Auto start setting ▶ ON or OFF**

Auto Start Time

You can set the date and time for automatic start. You can set for up to three software programs.

- 1 **Software List/IC Card List** ▶ ▶ **FUNC** ▶ **Auto start time**
- 2 **Put a check mark for an item to be set** ▶ **(Finish)**
Time interval set
 ... Starts at an interval specified by the software program. The setting is completed.
Start time set
 ... Starts at the set start time automatically.
- 3 **Select start time**
 ▶ **Enter the date and time to be set.**
- 4 **1 time ▶ Select a type of repeat.**
 - If you select "1 time", the automatic start is not repeated.
 - If you select "Weekly", put a check mark for days of the week to be set and press **(Finish)**.
- 5 **Press** **(Finish)**.

Auto Start Info

You can check whether a software program has started automatically and properly. Also, you can check the information of start failure from IC card. Up to three records of automatic start, a record of automatic start set by i-αppli, and a record of start failure from IC card are stored.

- 1 ▶ i-αppli ▶ ▶ **Auto start info**
StartO ... Started automatically and properly.
StartX ... Did not start automatically. When "Start" is displayed, you can press **(Start)** to start the software program.
Start- ... Has not started yet.

Information

- Software programs do not start automatically in the following cases:
 - When the FOMA phone is turned off
 - When the date and time are not set
 - When another function is working
 - During Lock All
 - During Personal Data Lock
 - While animation/Flash movie is being played back
 - When the time set for automatic start is identical to the reserved time set for "Software update", or the time set for an alarm of "Alarm", "Schedule" or "ToDo", "Book program" or "Timer recording"
 - When a start time has been specified to the same software program within 10 minutes from the previous auto-start
- If automatic start fails, "Notrun" appears on the desktop. Select the icon to bring up the Auto Start Info.

<i-αppli Stand-by Display>

Operating i-αppli Stand-by Display

Software Setting (Stand-by Set)

You can set an i-αppli program for the Stand-by display. Once set, the i-αppli Stand-by display automatically appears each time you bring up the Stand-by display.

- 1 **Software List/IC Card List** ▶ ▶ **FUNC** ▶ **Software setting ▶ Stand-by set**
 ▶ **ON or OFF** ▶ **(Finish)**
 "α" is displayed for the software program set as the Stand-by display. "α" or "α" is displayed while an i-αppli Stand-by display is running.

■ To operate an i-opp1 program as a normal i-opp1 program when an i-opp1 Stand-by display is running

From the i-opp1 Stand-by display, press **(CLR)**. “**☐**” or “**☐**” changes to a blinking “**☐**” or “**☐**” and then you can operate the i-opp1 program as a normal one.

- To return to the i-opp1 Stand-by display, press and hold **(CLR)** for at least one second or press **(☐)**; then select “Ended”. To release the i-opp1 Stand-by display, select “Terminated”, and select “YES”.

Information

- If you turn off the FOMA phone while the i-opp1 Stand-by display is running, the confirmation display appears asking whether to start the i-opp1 program when you turn on the power again.
- You can set only one software program for the i-opp1 Stand-by display.
- Some i-opp1 programs cannot be set for the Stand-by display.
- With some software programs set as the i-opp1 Stand-by display, you can press a key to go from the normal i-opp1 status to the i-opp1 Stand-by display status. However, you cannot return to the i-opp1 Stand-by display if another menu function is running.
- Note that you might not be able to receive timely information if you have set “Software setting (Stand-by net)” to “OFF”.
- You cannot use the Web To function and the Phone To/AV Phone To function from the i-opp1 Stand-by display.
- If the software program which connects to the network is set for the i-opp1 Stand-by display, it might not operate successfully because of radio wave conditions or other factors.
- When you bring up the Stand-by display while a menu function is operating, the image set for “Stand-by display” of “Display setting” will be displayed, even when the i-opp1 Stand-by display is set.
- When communicating frequency is extremely high in a certain period of time while an i-opp1 program is running as the i-opp1 Stand-by display, the confirmation display appears. When you press **(CLR)**, the confirmation display appears asking whether to continue communication.
- If you set Lock All or Personal Data Lock when the i-opp1 Stand-by display is shown, the i-opp1 Stand-by display will end. If you set Lock All, the image set for “Stand-by display” of “Display setting” will be displayed and if you set Personal Data Lock, the default Stand-by display will be displayed. The i-opp1 Stand-by display will return when you release each lock.

Software Setting (Stand-by Net)

You can set whether to permit communication for when the i-opp1 Stand-by display is running.

- 1 **Software List/IC Card List** ▶ **(☐)** **(FUNC)**
 - ▶ **Software setting** ▶ **Stand-by net**
 - ▶ **ON or OFF** ▶ **(☐)** **(Finish)**

End Stand-by Display

You can temporarily end the running i-opp1 Stand-by display. Also, you can release the i-opp1 Stand-by display.

- 1 **(MENU)** ▶ **Settings** ▶ **Display** ▶ **Display setting**
 - ▶ **Stand-by display** ▶ **End** **(☐)** **opp1 display**
 - ▶ **End or Terminate**
 - When you select “Terminate”, select “YES”.

End Stand-by Info

When the i-opp1 Stand-by display does not end successfully, you can check the date/time and its reason.

- 1 **(MENU)** ▶ **i-opp1** ▶ **(☐)** **opp1 info**
 - ▶ **End stand-by info**
 - When “**FUNC**” is displayed on the End Stand-by Info display, press **(☐)** **(FUNC)**, and select “Copy info” to copy the information. Select “Delete info”, and select “YES” to delete the information.

< **(☐)** opp1(microSD)>

Displaying i-opp1 Data Files on the microSD Memory Card

Depending on the i-opp1 program, you can save its data files on the microSD memory card.

You can display the i-opp1 data files saved on the microSD memory card.

- 1 **(MENU)** ▶ **i-opp1** ▶ **(☐)** **opp1(microSD)**
 - ▶ **(☐)** **opp1(microSD)**

Function Menu while i-opp1 Data File is Displayed

Function menu	Operation/Explanation
Folder info	You can display the information of the software program that uses the selected folder, available/unavailable for folder usage, and the reason if unavailable.
Delete folder	You can delete the selected folder and files in the folder. ▶ Enter your Terminal Security Code ▶ YES

Osaifu-Keitai/ToruCa



What is Osaifu-Keitai?	224
What is iC Transfer Service?	224
Starting Osaifu-Keitai Compatible i-oppli	224
What is ToruCa?	〈ToruCa〉 225
Obtaining ToruCa Files	〈Obtain ToruCa Files〉 226
Displaying ToruCa Files	〈ToruCa Viewer〉 226
How to See ToruCa File List/Detailed ToruCa File Display	228
Setting about ToruCa	〈ToruCa Settings〉 230
Locking IC Card Function	〈IC Card Lock〉 230

What is Osaifu-Keitai?

The convenient i-mode function which uses the IC card function of the i-mode phone (i-mode FeliCa), or the i-mode phone with the IC card mounted is called "Osaifu-Keitai".

FeliCa is one of the non-contact IC technologies that enables you to read and write data just by placing it over a scanning device.

Just by placing Osaifu-Keitai over the scanning device in a shop, you can pay by electronic cash or use it as an air ticket or reward card. Mobile phones have become one of easy-to-use tools.

Further, different from the existing FeliCa compatible non-contact IC card, the new one enables you to deposit electronic money by using the communication into the IC card inside the Osaifu-Keitai or to check your account for balance or usage details.

※To use Osaifu-Keitai compatible service, you need to make the settings from i-opppli (IC application) program which supports the IC card function [for details, inquire of IP (Information Provider)].

※For cautions on using each Osaifu-Keitai compatible service, refer to "Mobile Phone User's Guide [i-mode]".

●Data on the IC card might be lost or deformed owing to the malfunction of Osaifu-Keitai. (When we keep your Osaifu-Keitai for repair, we cannot keep it with data files left, so the data files shall be deleted beforehand by yourself as a rule.) Use the backup service of the IP (Information Provider) for supports such as reissue, restoration, temporary storage or transfer of data files, except for the data transfer by iC transfer service. The availability of backup services and their usage conditions (necessary applications, charges, etc.) and the support availability of iC transfer service differ depending on the service. Contact the IP (Information Provider) beforehand. For your important data files, be sure to use the service with backup support.

●In any case including malfunction or model change, we cannot be held responsible for the loss or deformation of data on the IC card or other losses caused regarding Osaifu-Keitai compatible services.

●If your Osaifu-Keitai has been stolen or lost, inquire of the provider for Osaifu-Keitai compatible service you use about ways of dealing with the trouble, immediately. With this FOMA phone, you can use Omakase Lock or IC Card Lock. (See page 120, and page 230)

What is iC Transfer Service?

iC transfer service^{※1} is the service for transferring the data files on the IC card at a time^{※2} to your new Osaifu-Keitai mobile phone^{※3} when you replace your Osaifu-Keitai mobile phone such as at the time of model change or malfunction. After completing the transfer of data files on the IC card, just download an Osaifu-Keitai compatible i-opppli program, and then you can easily use the Osaifu-Keitai services.

iC transfer service is available at the service counters such as a DoCoMo shop nearby.

For details, refer to "Mobile Phone User's Guide [i-mode]".

※1 You are charged a handling fee for using iC transfer service. (You might not be charged at times.)

In addition, you are charged a packet communication fee for downloading iC application programs and respective settings.

※2 Some Osaifu-Keitai services are not supported. The services that are not supported are deleted when you use iC transfer service, so ensure that you use a backup service for the Osaifu-Keitai services or delete them in advance.

※3 iC transfer service is available when new Osaifu-Keitai mobile phone is iC transfer service compatible model.

Starting Osaifu-Keitai Compatible i-opppli

Read and Write Data inside the IC Card

You can start the Osaifu-Keitai compatible i-opppli from the Software List or IC Card List. By using Osaifu-Keitai compatible i-opppli, you can read/write the data inside the IC card and use convenient functions such as depositing electronic money or traffic tickets, or checking your account for the balance and usage details on the mobile phone.

●Take care of your Terminal Security Code and password used for each service not to reveal to anyone.

●When you start or download the Osaifu-Keitai compatible i-opppli program for the first time, the message "Use IC card for current UIM?" appears. When you select "YES", you cannot use the IC card function afterward unless you insert the same UIM.

To use the IC card function with another UIM, insert the currently supported UIM first and then deleted all the Osaifu-Keitai compatible i-opppli programs. Otherwise, you cannot use it.


●Reading and writing data from the software program and to the IC card is suspended in the following cases:
In that case, the read or written data is discarded. The operation after the communication ends differs depending on the service you use.

- When a call comes in while i-opppli is running
- When the battery goes flat

1 (for at least one second) ▶ Select an Osaifu-Keitai compatible i-appli program.


The Osaifu-Keitai compatible i-appli program starts up.


Use Osaifu-Keitai

Place the FeliCa mark “

- During a call or i-mode connection, you can use Osaifu-Keitai by placing the FeliCa mark over the scanning device, however, you cannot start the Osaifu-Keitai compatible i-appli.

1 Place the FeliCa mark “ - The Call/Charging indicator lights when you bring your FOMA phone close to a scanning device and communication becomes ready.

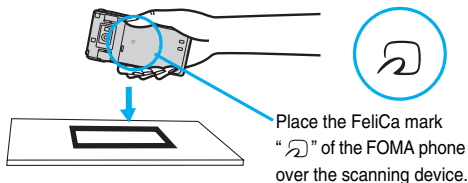

- Mount the battery pack to use Osaifu-Keitai. Even when the power is turned off or when the battery has gone flat, you can use Osaifu-Keitai by placing the FeliCa mark over the scanning device, however, you cannot start the Osaifu-Keitai compatible i-appli. You might not be able to use Osaifu-Keitai if you have left the battery unused for a long period or not charged it after the low battery alarm sounds. Charge the battery.
- When the FeliCa mark “

<ToruCa>

What is ToruCa?


ToruCa is an electronic card that you can obtain with Osaifu-Keitai for use as fliers, restaurant cards, and coupon tickets.

You can obtain ToruCa files from scanning devices or sites and can easily exchange them using mail, infrared ray, or a microSD memory card.


The obtained ToruCa files are saved to “ToruCa” of “Osaifu-Keitai”.

- Available on the ToruCa compatible model. For details, refer to “Mobile Phone User’s Guide [i-mode]”.

Flow for using ToruCa

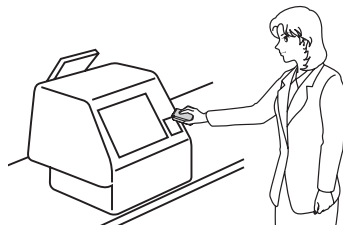


Place your Osaifu-Keitai over a scanning device to obtain a ToruCa file.

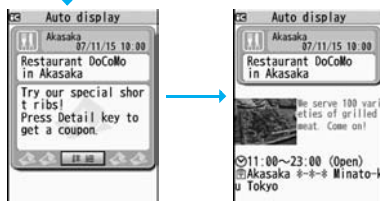

You can view more detailed information by using “詳細 (Details)” key.

Sources of ToruCa files

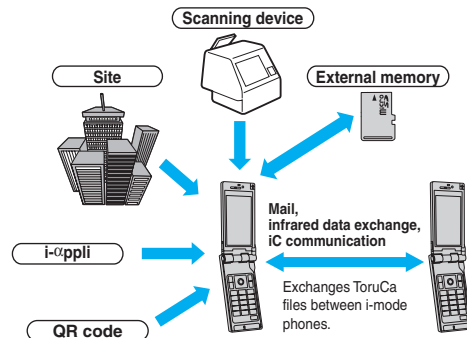



Obtaining ToruCa Files

Obtain from Scanning Device

You can obtain the ToruCa file from a scanning device using the IC card function. By obtaining detailed information, a ToruCa file becomes a ToruCa file (details) which has more pieces of information.

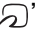


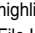
- For a ToruCa file (details), you can download up to 100 Kbytes per file, and for a ToruCa file before obtaining the details, you can download up to 1 Kbyte per file.

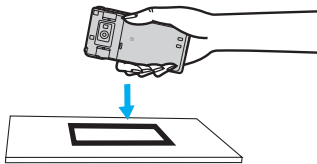1 Place the FeliCa mark “” of the FOMA phone over the scanning device.



■When the ToruCa file is obtained

A ToruCa obtained tone sounds, the Call/Charging indicator flickers.

- When “Receiving display” is set to “ON”, detailed display of obtained ToruCa file appears.
- For a ToruCa file before obtaining detailed information, the confirmation display appears asking whether to connect to a site to download detailed information. Select “YES” to display a ToruCa file (details) with detailed information obtained. Select “NO” to display a ToruCa file without detailed information.
- If no keys are pressed for about 15 seconds or “Receiving display” is set to “OFF”, “” appears on the desktop. Press , highlight , and press  (Select); then the ToruCa File List appears.



■About Auto-reading Function of ToruCa

If you set “Auto reading” to “Accept” to use the ToruCa files by placing the FOMA phone over the scanning device, the available ToruCa files are automatically recognized. The used ToruCa files are converted into “Used” and then moved to the “Used ToruCa” folder. Up to 20 used ToruCa files are saved, and when the number of the files exceeds 20, the files are deleted from the one downloaded at the oldest date.

- Even if “Auto reading” is set to “Reject”, the confirmation display might appear asking whether to use “Auto reading” when you place the FOMA phone over the scanning device. To use ToruCa files, select “YES”, and then set “Auto reading” to “Accept”.

Information

- When you fail to obtain the ToruCa file, a ToruCa failed-to-obtain tone sounds, Call/Charging indicator lights.
- A ToruCa obtained tone and a ToruCa failed-to-obtain tone sound at the volume set for “Phone” of “Ring volume”.
- Depending on the settings by IPs (Information Providers), you might not be able to update ToruCa files or send them by mail or infrared rays.


<ToruCa Viewer>

 
Displaying ToruCa Files

You can display the ToruCa file obtained using the IC card function, or from sites or mail.


1  ▶ Osaifu-Keitai ▶ ToruCa

▶ Select a folder.

- Each time you press  from the ToruCa Folder List, you can switch folders between the FOMA phone and the microSD memory card.
- When the folder contains unread ToruCa files, “NEW” appears.



2 Select a ToruCa file.

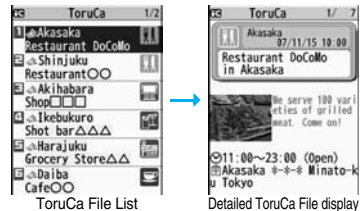

■When obtaining detailed information from a ToruCa file




A ToruCa file before obtaining detailed information itself does not show the detailed information. Select “詳細 (Details)” on the ToruCa file display and select “YES” to connect to the site to obtain more detailed information. After obtaining the detailed information, the ToruCa file is overwritten and saved.




Information




- You are charged the ordinary packet fee for obtaining.

Function Menu of the ToruCa Folder List

Function menu	Operation/Explanation
Operate folder (Add folder)	You can create a user folder. You can create up to 20 folders.
	▶ Add folder ▶ Enter a folder name.
	• You can enter up to 10 full-pitch/20 half-pitch characters for the FOMA phone.
	• You can enter up to 31 full-pitch/63 half-pitch characters for the microSD memory card.

Function menu	Operation/Explanation
Operate folder (Edit folder name)	<p>You can edit the folder name for the user folder.</p> <p>▶ Edit folder name ▶ Enter a folder name.</p> <ul style="list-style-type: none"> You can enter up to 10 full-pitch/20 half-pitch characters for the FOMA phone. You can enter up to 31 full-pitch/63 half-pitch characters for the microSD memory card.
Operate folder (Delete folder)	<p>All ToruCa files in the folder are deleted.</p> <p>▶ Delete folder</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Search all folders	<p>You can search through all ToruCa files in the FOMA phone (except ToruCa files stored in the "Used ToruCa" folder) by specifying a search condition.</p> <p>▶ Select a search condition.</p> <p>Genre Select a genre. Press  (Detail) to display a list of category icons belonging to the genre.</p> <p>Title Enter characters to be searched for, from those in the title.</p> <p>Index Enter characters to be searched for, from those in location data.</p> <ul style="list-style-type: none"> You can enter up to 20 full-pitch/40 half-pitch characters for the Title search, and up to 10 full-pitch/20 half-pitch characters for the Index search.
Auto-sort	<p>You can set a ToruCa file that matches the condition to be automatically sorted and saved to the folder when you obtain the ToruCa file from the scanning device.</p> <p>▶ Select a sorting condition.</p> <p>Genre Put a check mark for the genre to sort into and press  (Finish). You can put it for multiple genres.</p> <p>Title Enter characters from those in the title, to be a sorting condition.</p> <p>Index Enter characters from those in the location data, to be a sorting condition.</p> <p>Release Select "YES" to release the sorting condition you specified.</p> <ul style="list-style-type: none"> You can enter up to 20 full-pitch/40 half-pitch characters for the Title sort, and up to 10 full-pitch/20 half-pitch characters for the Index sort. When a sorting condition is already specified for the folder, it is displayed. Press  (FUNC) to set a sorting condition again.

Function menu	Operation/Explanation
Copy (Copy to microSD)	<p>You can copy the ToruCa files together with the folder from the FOMA phone to the microSD memory card.</p> <p>▶ Copy to microSD</p>
Copy (CPY all to microSD)	<p>You can copy all the ToruCa files together with the folder from the FOMA phone to the microSD memory card.</p> <p>▶ CPY all to microSD</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Copy (Copy to phone)	<p>You can copy the ToruCa files together with the folder from the microSD memory card to the FOMA phone.</p> <p>▶ Copy to phone</p>
Copy (Copy all to phone)	<p>You can copy all the ToruCa files together with the folder from the microSD memory card to the FOMA phone.</p> <p>▶ Copy all to phone ▶ Add or Overwrite</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Ir/  transmission (Send all Ir data)	See page 305.
Ir/  transmission (All  transmission)	See page 307.
Memory info	You can display the used memory space (estimate)/the number of saved files.
Delete all	<p>You can delete all the ToruCa files stored in the FOMA phone.</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Select storage	<p>You can set a destination folder for when copying from the FOMA phone to the microSD memory card.</p> <p>▶ YES</p>


Information
<p><Auto-sort></p> <ul style="list-style-type: none"> " " is displayed when the Genre sort is set, " " is displayed when the Title sort is set, and " " is displayed when the Index sort is set. When a file satisfies multiple conditions, it is sorted into the top of the folder in the ToruCa Folder List. <p><Copy (Copy to microSD)></p> <ul style="list-style-type: none"> The ToruCa file (details) is copied as a ToruCa file before obtaining details if it contains data which is prohibited to output from the FOMA phone or set with UIM restrictions. <p><Copy (CPY all to microSD)></p> <ul style="list-style-type: none"> The ToruCa files in the "ToruCa" folder within the FOMA phone are saved to "SD ToruCa" on the microSD memory card.

Information

<Copy (Copy all to phone)>

- The ToruCa files in “SD ToruCa” on the microSD memory card are added or overwritten and then saved to the “ToruCa” folder in the FOMA phone.


<Select storage>

- “” is displayed for the folder set as a destination.
- When you execute Check microSD, or create or edit a folder by using a personal computer, the destination folder on the microSD memory card might be changed. When the setting is changed, set the destination folder again.


How to See ToruCa File List/ Detailed ToruCa File Display



ToruCa File List

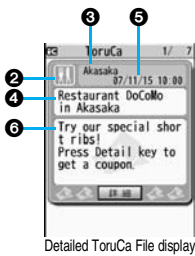

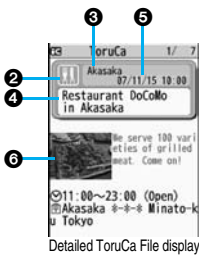


Detailed ToruCa File display
(for ToruCa file)





Detailed ToruCa File display
(for ToruCa file (details))

1 Indicates the state of ToruCa file

	※1 Unread ToruCa file
	Read ToruCa file
	※2 FOMA phone incompatible ToruCa file

※1 Does not apply to the ToruCa file downloaded from a site.

※2 Appears for only the ToruCa file on the microSD memory card.

- “” is add to the expired ToruCa file.
- “” is add to the ToruCa file whose output from the FOMA phone is prohibited.

2 Indicates the category

Displays a category icon that matches the contents of the ToruCa file.

3 Indicates the Index file

Displays the location data of the publisher that publishes the information about the ToruCa file.




4 Indicates the title





5 Indicates the date and time the ToruCa file was obtained


6 Indicates the ToruCa information

Simple explanation and the “詳細 (Details)” key are displayed for a ToruCa file. Information about the publisher is displayed for a ToruCa file (details).

Function Menu of the ToruCa File List/Detailed ToruCa File Display

Function menu	Operation/Explanation
Attach to mail	You can compose an i-mode mail message with the ToruCa file attached. Go to step 2 on page 172. • You can compose it also by pressing  ().
Move	▶ Select a destination folder. • You cannot select the “Used ToruCa” folder.
Search/sort (Search) [List only]	You can search through ToruCa file in the folder by specifying a search condition. ▶ Search ▶ Select a search condition. Genre Select a genre. Press  (Detail) to display a list of category icons belonging to the genre. Title Enter characters to be searched for, from those in the title. Index Enter characters to be searched for, from those in location data. • You can enter up to 20 full-pitch/40 half-pitch characters for the Title search, and up to 10 full-pitch/20 half-pitch characters for the Index search.
Search/sort (Sort) [List only]	You can change the order of displayed files. ▶ Sort ▶ Select an order.
Copy (Copy)	You can copy the displayed or highlighted ToruCa file to another folder. ▶ Copy ▶ Select a destination folder. • You cannot select the “Used ToruCa” folder.
Copy (Copy to microSD)	The files are copied to the folder as specified by “Select storage” on page 227. ▶ Copy to microSD
Copy (Copy to phone)	You can copy the ToruCa file from the microSD memory card to the ToruCa folder in the FOMA phone. ▶ Copy to phone

Function menu	Operation/Explanation
Multiple-choice [List only]	You can select multiple ToruCa files and operate. ▶ Put a check mark for ToruCa files to be selected ▶  (FUNC) ▶ Select an item. Move See page 228. Copy See page 228. Copy to microSD See page 228. Copy to phone See page 228. Send Ir data See page 305. Select all Selects all files. Release all Releases all selections.
Update ToruCa [Detailed display only]	You can re-obtain the information about the ToruCa file. The re-obtained ToruCa file (details) is automatically overwritten and then saved. ▶ YES ● You cannot update some ToruCa files. ● See page 162 for when ToruCa files are stored to the maximum.
Operate image (Save image) [Detailed display only]	You can save the image displayed on the ToruCa file and set it for the Stand-by display or Wake-up display. ▶ Save image ▶ Select an image ▶ YES ▶ Select a destination folder. Go to step 3 on page 159. ● See page 162 for when images are stored to the maximum.
Operate image (Save BG image) [Detailed display only]	You can save the background image of the ToruCa file and set it for the Stand-by display or Wake-up display. ▶ Save BG image ▶ YES ▶ Select a destination folder. Go to step 3 on page 159. ● See page 162 for when images are stored to the maximum.
Operate image (Retry) [Detailed display only]	You can play back an animation image or Flash movie in the ToruCa file from the beginning. ▶ Retry ● When a part of the Flash movie is outside the display area, the Flash movie might not be played back.
Add to phonebook [Detailed display only]	See page 87.
Add desktop icon	See page 114.
Ir/  transmission (Send Ir data)	See page 305.
Ir/  transmission ( transmission)	See page 306.

Function menu	Operation/Explanation
Memory info [List only]	You can display the used memory space (estimate)/the number of saved files.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete selected) [List only]	▶ Delete selected ▶ Put a check mark for ToruCa files to be deleted ▶  (Finish) ▶ YES
Delete (Delete all) [List only]	You can delete all ToruCa files in the folder. ▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

Information

<Attach to mail>

- The ToruCa file (details) that contains data whose output from the FOMA phone is prohibited is attached as a ToruCa file before obtaining details.
- You might not be able to attach the ToruCa file to i-mode mail depending on its file size.

<Copy (Copy)>

- You cannot copy ToruCa files whose output from the FOMA phone is prohibited.

<Copy (Copy to microSD)>

- The ToruCa file (details) that contains data whose output from the FOMA phone is prohibited or the data set with the UIM restrictions is copied as a ToruCa file before obtaining details.
- When the number of files in the destination folder on the microSD memory card is full, a new folder is automatically created and ToruCa files are saved to that folder. When copying is completed, the message "This folder is set for storage XXXXXX" (XXXXXX denotes a folder name) appears.
- The name of copied ToruCa file is TORUCXXX (XXX denotes a numeral).
- When no folder is set as a destination folder on the microSD memory card, a new folder is created automatically and the file is saved to the folder. After saving, the newly created folder is set as the destination folder.
- You might not be able to execute "Copy to microSD" for the ToruCa file depending on its file size.

<Copy (Copy to phone)>

- You might not be able to execute "Copy to phone" for the ToruCa file depending on its file size.

<Operate image>

- The images that satisfy the following conditions are saved as frames or stamps:
 - The transparent GIF file that is not an animation GIF file
 - The file extension is "ifm".
 - The image size is Stand-by (480 x 854), VGA (640 x 480), CIF (352 x 288), QVGA (240 x 320), QCIF (176 x 144), or Sub-QCIF (128 x 96) for frames; and Stand-by (480 x 854) or smaller except frames for stamps.

Setting about ToruCa

- 1  ► **Osaifu-Keitai** ► **Settings**
► Do the following operations.

Item	Operation/Explanation
Receive ToruCa	You can set whether to obtain ToruCa file from a scanning device using the IC card function. ► Accept or Reject
Receiving display	You can set whether to display the detailed ToruCa File display when you obtain a ToruCa file while the Stand-by display is shown. ► ON or OFF
Check same data	You can set whether to check the same ToruCa file is already obtained before obtaining a ToruCa file from a scanning device. ► ON or OFF ON . . . Checks and does not obtain a new ToruCa file if the same ToruCa file is already obtained. OFF . . . Does not check. Obtains even the same ToruCa file.
Auto reading	You can set whether to have the available ToruCa files automatically recognized for when you place the FOMA phone over the scanning device. ► Accept or Reject

Information

<Check same data>

- The ToruCa files stored in “Used ToruCa” or expired ToruCa files are not included as target files.

<Auto reading>


- If “Auto reading” is set to “Reject”, you might not be able to use ToruCa files.

Locking IC Card Function

To prevent the IC card function from being used by others, you can set the Osaifu-Keitai, obtained ToruCa, or IC communication disabled.

- If the battery runs out when the IC card is locked, the IC card stays locked.

- 1 Press and hold  for at least one second.

“” appears and IC Card Lock is set.

- To release IC Card Lock, perform the same operation and enter your Terminal Security Code. When you set Timer Lock At Close, the display for releasing IC Card Lock appears also by opening the FOMA phone. When you set “PIM/IC security mode” to “Face reader”, follow the operation of “Use Face Reader to Release Lock” on page 124. When you set it to “Double security”, enter your Terminal Security Code after the operation on page 124.

IC Lock (Power-off)

You can set whether to lock the IC card function while the power is turned off.

- 1  ► **Settings** ► **Lock/Security**
► **Lock setting**

or

- 1  ► **Osaifu-Keitai** ► **IC card lock set.**

- 2 **IC lock (power-off)**

- **Enter your Terminal Security Code**
- **Select an item.**

Setting before OFF

. Follows the setting at just before the power-off.

Lock Sets IC Card Lock.

GPS Function



About Using GPS Function	232
Checking Your Location	⟨Position Location⟩ 232
Using GPS Compatible i- appli	⟨GPS Compatible i- appli ⟩ 233
Providing Location Information upon Request	⟨Provide Location⟩ 237
Notifying Location Information	⟨Notify of Location⟩ 238
Displaying Location Information History	⟨Location History⟩ 238
Configuring GPS Service Settings	⟨Service Settings⟩ 239
Setting GPS	⟨GPS Settings⟩ 239

About Using GPS Function

- GPS is operated by the United States Department of Defense, so the GPS radio wave conditions might be controlled (accuracy deterioration, radio wave supply suspension, etc.) depending on the defense strategy of the United States Department of Defense.
- Note that we do not take any responsibility for a loss such as pure economic loss resulting from the facts that you have missed the chance to check the measurement (communication) results, which have been caused by external factors such as malfunctions, erroneous operations, troubles, or power failure (including battery shortage) on the FOMA phone.
- You cannot use the FOMA phone as a navigating system for aircraft, vehicles, and people. Therefore, note that we are not held responsible for any damage resulting from the use of the location information for navigation.
- You cannot use GPS as a high-accuracy measuring device. Note that we do not take any responsibility for the damage caused by an error in the location information.
- You cannot use the GPS function when the FOMA phone is out of the service area (or overseas).

Information


- You cannot use the GPS function in the following cases:
 - During Lock All[※] · During Self Mode
 - During Omakase Lock[※]
 - While the UIM is not inserted
 - ※ Provide Location is available.
 - As GPS uses radio waves transmitted from the satellites, note that you cannot or might have difficulty to receive radio waves in the following conditions:
 - In a building or right under it
 - In the basement, tunnel, ground, water
 - In a bag or case
 - In densely crowded areas with buildings and houses
 - In densely crowded trees and right under them
 - Close to high-tension wires
 - In a car or train
 - In bad weather such as heavy rain and snow
 - When there are obstacles (persons and articles) around the FOMA phone.
 - When you cover the displays, keys, microphone, or speakers of the FOMA phone with your hand.
- In these cases, an error in the obtained location information might become 300 meters or more.

<Position Location>

Checking Your Location

You can measure your current location and display it. You can display a map of the location, and send the location information by mail as well.

- 1 (MENU) ▶ LifeKit ▶ GPS ▶ Position location

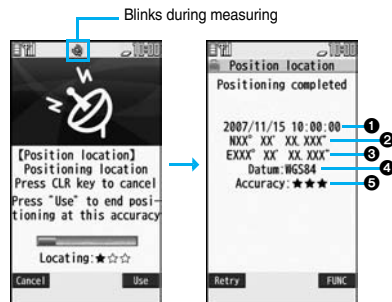

The current location is displayed by the latitude and longitude.

- 1 Measurement date
- 2 Latitude
- 3 Longitude
- 4 Geographic datum
- 5 Accuracy

★★★: Almost accurate location information
(Error is about less than 50 meters)

★★☆: Relatively accurate location information
(Error is less than about 300 meters)

★☆☆: Approximate location information
(Error is about 300 meters or more)

The accuracy is an estimate. It might differ from actual one depending on the radio wave conditions in the surrounding area.

- Press (Ⓜ) (Retry) to measure again in “Quality mode” (see “Positioning Mode” on page 239).
- When “Use” is displayed at bottom right of the display during measuring, press (Ⓜ) and select “OK” to display the location using the information during measuring.
- You can measure the location also by pressing and holding (1) for at least one second from the Stand-by display. After measuring, the FOMA phone works according to the setting of “GPS Button Setting” (see page 239).

Function Menu while Current Location is Displayed

Function menu	Operation/Explanation
Read a map	You can display a map by connecting a map site. ▶ YES ● After displaying the map, you can use “i-area” to search for the surrounding information. For details about “i-area”, refer to the DoCoMo web site.
Run i-oppli	You can use the current location information on a GPS compatible i-oppli program. ▶ Select an i-oppli program.

Function menu	Operation/Explanation
Paste to mail	You can compose an i-mode mail message with the URL converted from the current location information pasted to the text. ▶ YES Go to step 2 on page 172. ● The URL of the location information to be sent is displayed on i-mode compatible phones only.
Add to phonebook	You can store the current location information in the Phonebook. ▶ YES Go to step 2 of “Storing Displayed Phone Number/Mail Address in Phonebook” on page 88.
Attach to image	You can store the current location information in the image. ▶ Select a folder ▶ Select an image ▶ YES or NO YES . . . Overwrites and saves. NO . . . Saves as a separate file.

<GPS Compatible i-ϕpli>

Using GPS Compatible i-ϕpli

1 (MENU) ▶ LifeKit ▶ GPS ▶ ϕpli

The list of i-ϕpli programs that support GPS is displayed. Select an i-ϕpli program to start it.

- See page 211 for the Software List.

Information

- When you use a GPS compatible i-ϕpli program, the location information is sent to the information provider of the i-ϕpli program you use.
- You need to set “Location usage” of “Software setting” to “ON” when you use the GPS function on a GPS compatible i-ϕpli program.

Using “地図アプリ (Map Application)”

The pre-installed “地図アプリ (Map Application)” enables you to check the map of the place you are currently in or the place you specify, or check your nearby area for details by using the GPS function and map. You can then navigate yourself to the destination by vehicle, on foot, or by car.

Further, you can easily get transfer information by voice input.

- You are separately charged a packet communication fee. You are advised to subscribe to Pake-Houdai/Pake-Houdai Full for using “地図アプリ (Map Application)”.
- If you delete this software program and then when you want to resume it, download it from “i エリアー周辺情報 - (i-area -Local Information-)”.
- This software program is a mail-linked i-ϕpli program, so it is not available when the mode of 2in1 is set to B Mode.
- Note that we are not held responsible for the accuracy and promptness of the map and route information.
- While driving, ensure that a person other than the driver operates “地図アプリ (Map Application)”.

Standard and optional services

The standard and optional services are available with this software program.

Standard service: Provided by DoCoMo (charge free).

Optional service: Provided by ZENRIN DataCom (charged).

You can use the optional services charge free except traffic information for up to 90 days from when you have started this software program for the first time. To use the optional services from 91 days on, you need to register yourself as a member of “ゼンリン 地図+ナビ (ZENRIN/map+navi)” (charged) provided by ZENRIN DataCom.

Even when you register yourself as a member while you are using this software program, you do not need to re-download it. You can use this software program as it is.

Menu	Descriptions	Up to 90 days	From 91 days on
今いる場所 (Current point)	<ul style="list-style-type: none"> ● You can use GPS to see the map you are currently in, or send the map by i-mode mail. ● You can leave your footprint on the map where you are currently in, check your traces, and see other people's footprints. 	Free	Free
周辺を調べる (Check nearby area)	<ul style="list-style-type: none"> ● You can check the details of shops, facilities, or iD member stores in the area where you are currently in or you specify, and can obtain coupons from gourmet information. ● You can check nearby weather status or spare spaces in parking lots. 	Free	Free
地図を見る (See map)	<ul style="list-style-type: none"> ● You can enter a keyword, a genre, address, or phone number to see the map. ● You can check the points stored in this software program, on the server, or in the Phonebook, or check the map for the points retrieved by the previous search. ● After the storage on the server, the stored points can be shared with your personal computer as well. 	Free	Charged
ナビをする (Navigate)	<ul style="list-style-type: none"> ● You can navigate yourself to the destination by vehicle, on foot, or by car. ● You can navigate yourself easily to your home you have stored. 	Free	Charged
乗換案内 (Transfer guide)	<ul style="list-style-type: none"> ● You can check the train transfer guides and timetables. ● You can check the map for train routes and set an alarm before your departure. 	Free	Charged
おしゃべり検索 (Voice search)	<ul style="list-style-type: none"> ● By voice input, you can easily check the details of your nearby area or see the map. ● By voice input, you can easily get transfer information. 	Free	Free
設定/直感 (Settings/Intuition)	<ul style="list-style-type: none"> ● You can move the map or 3D map by inclining the FOMA phone. ● You can set how to show the map or navigation, and check how to use them. 	Free	Free

■Top menu display and its operation

The respective menus are displayed on the TOP display. When you close the menu, the map retrieved by the last search appears.

- The displays are for reference, so the actual ones might differ.
- At the first start-up, the usage rules and caution items on use are displayed.




TOP display

◆When 91 days have passed without registering yourself as a member

At the first start-up after 91 days, the message telling that your privilege to use the functions is limited, and the message that refers to the registration site appear. The same messages appear when you select a menu for optional services.

※To register yourself as a member, access “ゼンリン 地図+ナビ (ZENRIN/map+navi)” via this software program.

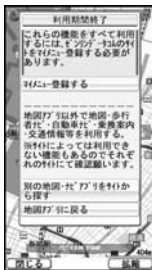

■Map display and its operation



Map View display

© ZENRIN DataCom CO.,LTD. 2007

◆Key operation when the map appears

Key operation	Action
[メニュー] (Menu)	Shows the menu.
[]	Shows the quick access menu.
[拡大/縮小] (Enlarge/Reduce)	Shows the bar that shows reduced scale. To enlarge and display the map, press [], and to display the details, press []. Press [閉じる] (close) to fix the reduced scale, and then to clear the bar.
[]	Moves the map up, down, left, and right.
[CLR]	Closes the menu, or returns to the point retrieved by the first search.
[*]	Turns the map to the left.
[O]	Turns the map northward.
[#]	Turns the map to the right.

◆Key operation when the quick access menu appears

Key operation	Action
[] [周辺を調べる] (Check nearby area)	Checks the details of the nearby area mainly on the displayed map.
[] [ココへナビ] (Navi to)	Specifies the start point and searches the route to the center of the map.
[] [ココを送信] (Send here)	Sends the URL for the displayed map via i-mode mail.
[] [ココを登録] (Store here)	Stores the positional information of the center of the map in this software program, on the server, or in the Phonebook. When you store it on the server, the stored point can be shared with your personal computer as well.
[] [地図へ (To map)]	Closes the quick access menu.
[1] [3D/パノラマ] (3D/Panorama)	Shows the point from where 3D intersection or panoramic images can be viewed. Select the point to display 3D intersection and panoramic images.
[2] [ビル/テナント] (Building/Tenant)	Shows the buildings around and can click to check the tenants in the buildings if any.

■The Search Result display for the nearby area details and its operation

- The display is for reference, so the actual one might differ.
- The display and operation are for when you show the search result on the map, not for when you select it on the list.

◆The Search Result display for the nearby area details



© ZENRIN DataCom CO.,LTD. 2007

◆Key operation when the Search Result display for the nearby area is shown

※When the cursor is not placed over the shop retrieved by the search, the quick menu appears.

Key operation	Action
[]	Confirms detailed information about search results.
[]	Moves the map up, down, left, and right.
[5]	Re-searches the center area of the map being displayed.
[4]	Shows the previous search results.
[6]	Shows the next search results.
[メニュー] (Menu)	Shows the menu.

Key operation	Action
[拡大 (Enlarge)/Reduce]	Shows the bar that shows reduced scale. To enlarge and display the map, press , and to display the details, press . Press [閉じる (close)] to fix the reduced scale, and then to clear the bar.

Searching Route and Navigating Yourself to Destination by Voice and on Display

You can specify the start point and destination, and search the route. The route you can go through on foot, by public transportation, or by car are displayed. After you search the route, the voice and display navigate you to your destination.

1 Map View display▶ [メニュー (Menu)] ▶ ナビをする (Navigate)▶ ナビをする (Navigate)

2 出発地 (Start point)▶ Select a setting method.

- 現在地 (GPS) [Current location (GPS)]
 - ... Measures and sets the current location.
- フリーワード検索 (Keyword search)
 - ... Searches and sets the start point by keywords.
- 地図上で指定 (Specify on map)
 - ... Specifies the start point on the map.
- TEL/〒検索 (TEL/ZIP code search)
 - ... Searches and sets the start point by the phone number or zip code.
- 住所一覧から (From address list)
 - ... Selects the address and sets the start point.
- ジャンルから (From genre)
 - ... Selects a genre and sets the start point.
- 履歴から (From record)
 - ... Sets the start point on the map previously displayed.
- 登録地点から (From stored point)
 - ... Sets the start point from the location information stored in this software program, on the server, or in the Phonebook.
- 自宅 (Home)
 - ... Sets the start point from the location information of your home.
- 出発地の確認 (Confirm start point)
 - ... Confirms information about the start point.

3 目的地 (Destination)▶ Select a setting method.

- フリーワード検索 (Keyword search)
 - ... Searches and sets the destination by keywords.
- 地図上で指定 (Specify on map)
 - ... Specifies the destination on the map.
- TEL/〒検索 (TEL/ZIP code search)
 - ... Searches and sets the destination by the phone number or zip code.
- 住所一覧から (From address list)
 - ... Selects the address and sets the destination.
- ジャンルから (From genre)
 - ... Selects a genre and sets the destination.
- 履歴から (From record)
 - ... Sets the destination on the map previously displayed.
- 登録地点から (From stored point)
 - ... Sets the destination from the location information stored in this software program, on the server, or in the Phonebook.
- 自宅 (Home)
 - ... Sets the destination from the location information of your home.
- 目的地の確認 (Confirm destination)
 - ... Confirms information about the destination.

4 時間指定 (Specify time)▶ Select an item.

- 現時刻で検索 (Search by current time)
 - ... Searches the route by the current time.
- 出発時刻指定 (Specify start time)
 - ... Specifies the start time and searches the route.
- 到着時刻指定 (Specify arrival time)
 - ... Specifies the arrival time and searches the route.
- 終電を利用 (Use last train)
 - ... Searches the route by the last train of the day.

5 条件設定 (Set conditions)

- ▶ Select a condition.
 - 乗換条件 (Transfer conditions)
 - ... Select transfer condition from “早い (Fast)”, “安い (Cheap)”, and “楽々 (Easy)”.
 - 徒歩ルート (Foot route)
 - ... Select a foot route from “おまかせ (Free)”, “屋根多い (Many roofs)”, and “階段少ない (Less stairs)”.
 - 特急利用 (Use special express)
 - ... Select whether to use special expresses for even when the total distance is less than 100 km.
 - 通常利用車種 (Ordinary type of vehicles)
 - ... Select a type of vehicle.

6 上記で設定 (Fix as specified above)

7 ルートを検索 (Search the route)


- You can search the route by “ で検索 (Search by) of Total Navi, or “ のみで検索 (Search by only)” that searches only routes by car. Up to six routes are displayed as search results. When the routes using different transportation are found, the characteristics of the routes are displayed by the icons shown below:
 - 早 (Fast): Arrival time is early.
 - 安 (Cheap): Fare is cheap.
 - 楽 (Easy): Transfer is less.
 - オススメ (Recommendable): Route provided with three conditions, “早 (Fast)”, “安 (Cheap)”, and “楽 (Easy)”.
 - 有料 (Charged): Route by car using toll roads
 - 一般 (Ordinary): Route by car using ordinary roads
 - To store the route, select “ルートを登録 (Store route)”.

8 ルートを選択 (Select a route)

- ▶ ナビ・ルート確認 (Navi/Confirm route)
- ▶ ナビ (Navi) or ナビ (省電力) [Navi (power saver)]
- Navigation to the destination starts.
 - To confirm the route, select “ルート確認 (Confirm route)”.
 - To check the timetable, select “時刻表 (Timetable)”.

Route (Car)/Navigation (Car) View display and its operation

- The displays are for reference, so the actual ones might differ.

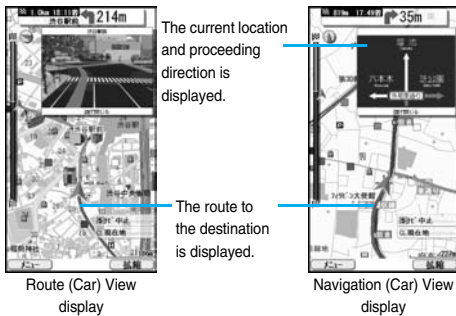

© ZENRIN DataCom CO.,LTD. 2007

◆ Key operation when using Navigation

Key operation	Action
[Menu] (Menu)]	Ends the Navigation program and shows the TOP menu.
[Quick Access Menu]	Shows the quick access menu.
[Enlarge/Reduce] (Enlarge/Reduce)]	Shows the bar that shows reduced scale. To enlarge and display the map, press [Enlarge], and to display the details, press [Reduce]. Press [Close] to fix the reduced scale, and then to clear the bar.
[Map Movement]	Moves the map up, down, left, and right.
[CLR]	Returns to the current location.
[2]	Switches to the intersection mode.
[5]	Pauses or starts the Navigation program.
[*]	Turns the map to the left.
[0]	Turns the map northward.
[#]	Turns the map to the right.

◆ Key operation when the quick access menu appears

Key operation	Action
[Result & Settings] (Result&Settings)]	Shows the search result of the route (time and fare, and others), or sets the Navigation program.
[Set Point] (経由地を設定) (Set point)]	Sets up to three points you go through on the way to the destination and searches.
[Re-route] (リルート) (Re-route)]	Re-searches for the route from the current location to the destination.
[Clear route] (ルート消去) (Clear route)]	Clears the route being displayed.
[Switch mode] (モード切替) (Switch mode)]	Switches to the intersection mode.
[Traffic jam information] (渋滞情報) (Traffic jam information)]	Shows the traffic jam information linked to the map being displayed.

※ Only for car route

Using おしゃべり検索 (Voice search)

By voice input, you can easily check the details of your nearby area, get transfer information, or see the map from the Voice search menu.

<Example> When using おしゃべり検索 (Voice search) to check the details of your nearby area


1 TOP display ▶ おしゃべり検索 (Voice search) ▶ 周辺を調べる (Check nearby area)

How to input your voice is displayed.

2 Explanatory display for voice input ▶ 音声入力開始 (Start voice input)

The display for voice input appears. After the Voice Input display appears, speak in Japanese about the details of nearby area you want to search for.

Example: "Konohen-no Konbin" (nearby convenience store)

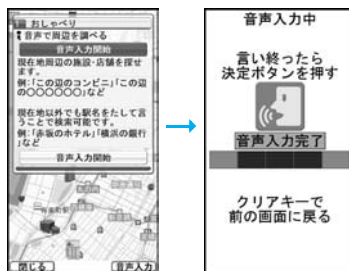

The confirmation display appears after your voice is recognized.

When the recognition is wrong, select "音声再入力(Re-input voice)".



1 TOP display ▶ 設定／直感★ (Settings/ Institution★) ▶ 設定・ヘルプ (Settings/Help) ▶ Select an item.

Item	Action
会員情報確認 (Confirm member information)	You can check whether you are registered as a member of “ゼンリン 地図+ナビ (ZENRIN/map+navi)”.
α基本設定 (α Standard settings)	You can perform the overall settings of the software program such as specifying map display color or font size.
ナビ設定 (Navi settings)	You can perform the overall settings of the navigation program such as re-routing or the sound level of voice guide.
🏠 自宅設定 (Home setting)	You can register the location of your home.
履歴系クリア (Clear records)	Clears the records of the map or Navigation used.
使い方の説明／よ くある質問／利用 規約 (Explanation about how to use/ FAQ/Usage rules)	You can get explanation about how to use, FAQ, and usage rules.

<Provide Location>

Providing Location Information upon Request

You can provide your location information upon the request from others. Depending on the service you use, you need to set GPS service settings beforehand. (See page 239) Also, you need to set “Location request menu” to “ON” or set the permitted period by “Permission schedule” beforehand.

<When the setting by service is “毎回確認 (Check every time)”>

1 When a location provision request arrives ▶ YES or NO

YES ... Measures the current location and sends the location information.

NO ... Rejects to provide the location information.


- If no keys are pressed for about 20 seconds, the former display returns without providing your current location.



<When the setting by service is “許可 (Accept)”>

1 When a location provision request arrives ▶ OK

- When you select “OK” or about three seconds elapse, the current location provision starts.
- The information of the service provider might not be displayed.
- Press (CLR) to stop providing information. However, your location information might be sent depending on the timing.

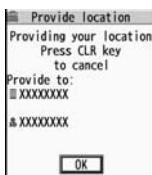


- If no keys are pressed for about 15 seconds from the Position Location Result display or the Failure display, the former display returns.
- To use “imadoco-search”, you need to set “位置情報利用設定 (イマドコサーチ設定) [Location Information Usage Setting (imadoco-search Setting)] of “オプション設定 (Options)” of “料金&お申込・設定 (Bill & Subscription/Setting)” on ☐ Menu.
- To use Provide Location, you might need to subscribe to a service provider which supports the Provider Location function or to pay the service fee.
- Even when you send your location information, it might not be delivered to the service provider depending on the radio wave conditions.
- When “Location request menu” is set to “OFF”, the location information is not displayed, and the request is rejected.
- When you set, by GPS service settings, the location request to be checked every time, the location information is not provided on the location provision request during Public Mode (Drive Mode).
- When you set, by GPS service settings, the location request to be accepted, the location information is provided with a display during Public Mode (Drive Mode) but the positioning tone, vibrator, and illumination do not work.
- When you are requested to provide your location information from the other party using “imadocokantan search”, the confirmation display appears asking whether to send the current location information each time you receive a request. Select “YES” to immediately send the rough position location result. After selecting “YES”, the GPS Measuring display appears and the precise position location result is notified after GPS measuring. The rough position location result is notified even if you suspend the location providing during GPS measuring. In this case, it is stored in Location History but the location information is not displayed.
- Regardless of the mode of 2in1, the location information can be searched for Number A only. When the other party searches you by your Number B, your current location is not provided and the searcher is notified that the search has failed.
- A fee is not charged for using the Provide Location function.
- For using the service, refer to the information on your service provider or the DoCoMo web page.

<Notify of Location>

Notifying Location Information

You can notify a service provider of your current location.

- 1 (MENU) ▶ LifeKit ▶ GPS ▶ Notify of location
 - ▶ Direct input ▶ Enter a party to be notified
 - ▶ YES

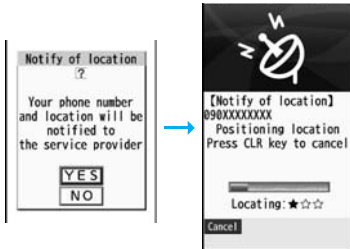

- You can enter up to 12 digits by using numerals, # and *.
- If you have stored LCS clients by "Reg. LCS client" beforehand, you can select an LCS client from "View service clients".
- You can press (Cancel) to stop measuring, but your current location might be notified depending on the timing.

2 OK

Information

 
- Even when you send your location information, it might not be delivered to the service provider depending on the radio wave conditions.
- You are charged a fee for using the function to notify your current location.
- To use Notify Of Location, you might need to subscribe to a service provider that supports Notify Of Location. Further, you might be charged a fee for using the service.
- You cannot enter any digits during Keypad Dial Lock.
- Regardless of the mode of 2in1, your location information is notified by Number A.
- For using the service, refer to the information on your service provider or the DoCoMo web page.

<Location History>

Displaying Location Information History

Up to 50 histories of Position Location, Notify Of Location, and Provide Location are stored.

- 1 (MENU) ▶ LifeKit ▶ GPS ▶ Location history
 - ▶ Select a location history.



Information

- When the location histories exceed 50, they are automatically overwritten from the oldest one.

Information

- The location information and accuracy stored in Location History may differ from the ones sent to the location provision requester or LCS client depending on the radio wave conditions, and others.
- When you cancel Position Location midway, you fail to measure your current location, or you set "Location request menu" to "OFF", its history is not stored in Location History.
- Even when the histories of Provide Location or Notify Of Location are stored, they might not have been delivered to your service providers.
- You cannot operate a failed-to-measure history of Provide Location or Notify of Location for other than "Compose message", "Dialing", "Delete this", and "Delete all".
- When Provide Location was used, the name of the location provision requester is checked against the Phonebook entries which appear in each mode of 2in1 and then shown.
- "▶" is displayed for the records of successful positioning.

Function Menu while Location History is Displayed

Function menu	Operation/Explanation
Read a map	See page 232.
Run (i-appli)	You can use the location information on a GPS compatible i-appli program. (See page 232)
Paste to mail	You can compose an i-mode mail message with the URL converted from the location information pasted to the text. (See page 233)
Add to phonebook	You can store the location information in the Phonebook. (See page 233)
Attach to image	You can store the location information in the image. (See page 233)
Compose message	You can compose an i-mode mail message to your location provision requester. Go to step 3 on page 172.
Dialing	See page 148.
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES

<Service Settings>

Configuring GPS Service Settings

By connecting to GPS service settings (a host set by “Host selection”), you can configure the settings for the Provide Location service such as the permission for location information search and password.

1 [MENU] ▶ LifeKit ▶ GPS ▶ Service settings

- See page 153 for operations while a site is displayed.

Information

- You cannot use the Bookmark or Screen Memo function.

<GPS Settings>

Setting GPS

GPS Button Setting

You can set an operation for after measuring your location by pressing and holding **[1]** for at least one second from the Stand-by display.

1 [MENU] ▶ LifeKit ▶ GPS ▶ GPS settings

- ▶ GPS button setting ▶ Select an operation.

- Read a map** Displays a map by connecting to a map site.
- Run i-oppli** Displays a list of GPS compatible i-oppli programs.
- Paste to mail** Converts the current location information into a URL and compose an i-mode mail message with the URL pasted to the text.
- Add to phonebook** Stores the current location information in the Phonebook.
- Attach to image** Stores the current location information in the image.
- Confirm every session** Selects an operation each time you measure the location.

Positioning Tone/Illumination

You can select a tone to sound for when you check your current location or when you are requested to provide location information. You can set a color of the Call/Charging indicator and the vibration pattern as well.

1 [MENU] ▶ LifeKit ▶ GPS ▶ GPS settings

- ▶ Posit. tone/illum.
- ▶ Select an operation to be set
- ▶ Do the following operations.

Item	Operation/Explanation
Select posit. ring tone	▶ Select a folder ▶ Select a ring tone. ● While selecting, the selected tone sounds for confirmation.

Item	Operation/Explanation
Ring time setting	You can set a ring time for positioning ring tone. ▶ Enter a ring time (seconds). ● Enter two digits from “00” through “30”. For “Location req./Confirm”, however, enter two digits from “00” through “20”. If you set to 0 seconds, the tone does not sound.
Select vibrator	▶ Select a vibration pattern. ● If you select “Melody linkage”, the FOMA phone vibrates in time with ring tone. ● While selecting, the FOMA phone vibrates by the selected pattern for confirmation.
Select illumination	▶ Select a color. ● While selecting, the Call/Charging indicator lights in the selected color for confirmation.

Positioning Mode

Select a mode for measuring the current location from either “Standard mode” or “Quality mode”.

When you select “Quality mode”, it takes a longer time for measuring, but the measuring accuracy might be improved as a result.

You can set a measuring mode for Position Location, Notify Of Location, and Provide Location respectively.

1 [MENU] ▶ LifeKit ▶ GPS ▶ GPS settings

- ▶ Positioning mode
- ▶ Select an operation to be set
- ▶ Standard mode or Quality mode

Register LCS Client

If you have stored LCS clients, you can select an LCS client when you notify of your current location. Further, you can automatically notify of your current location when you make a call to the stored phone number.



You can store up to five LCS clients.

1 [MENU] ▶ LifeKit ▶ GPS ▶ GPS settings

- ▶ Reg. LCS client ▶ Highlight <Not stored> and press **[Envelope]** (**Edit**) or **[Circle]** (**Select**)
- ▶ Do the following operations.

- If you select a stored LCS client, you can confirm the stored contents.

Item	Operation/Explanation
Service client name	▶ Enter a service client name. ● You can enter up to 16 full-pitch/32 half-pitch characters.
Service client ID	▶ Enter a service client ID. ● You can enter up to 12 digits by using numerals, # and *. ● Enter the service client ID specified by your service provider.





Item	Operation/Explanation
Phone number	<p>▶ Enter a phone number.</p> <ul style="list-style-type: none"> You can enter up to 26 digits. Highlight the phone number field, press  (), and select "Enter from PB" to call up a phone number from the Phonebook and enter it. If you enter a phone number by "Enter from PB" with "Service client name" not entered, the name for the Phonebook entry is entered.
Notify when dialing	<p>You can set whether to notify of your current location for when you make a voice call or videophone call to the stored phone number.</p> <p>▶ ON, OFF or Confirm every dial</p> <ul style="list-style-type: none"> To check each time you make a call, select "Confirm every dial".

2 Press  ().

Information


- Even if "Notify when dialing" is set to "ON" or to "Confirm every dial", you cannot notify of your current location when you make a call without notifying of your caller ID.

Function Menu while LCS Client is Displayed



Function menu	Operation/Explanation
Delete (Delete this)	▶ Delete this ▶ YES
Delete (Delete all)	▶ Delete all ▶ Enter your Terminal Security Code ▶ YES
Add to phonebook	You can store the service client name and phone number stored in "Reg. LCS client" into the Phonebook. (See page 233)
Edit	Go to step 1 of "Register LCS Client" on page 239. • You can edit also by pressing  ().
Send Ir data	See page 305.
Send all Ir data	See page 305.
 transmission	See page 306.
All  transmission	See page 307.

Location Request Menu

You can set whether to accept a location provision request (provide location information). You can set validity period as well.

- 1**  ▶ LifeKit ▶ GPS ▶ GPS settings
▶ Location request menu
▶ Enter your Terminal Security Code
▶ ON, OFF or Permission schedule

2 Do the following operations.

Item	Operation/Explanation
Permit from	▶ Enter the time for starting permission.
Permit to	▶ Enter the time for ending permission.
Repeat	<p>▶ Select a repeat type.</p> <ul style="list-style-type: none"> When you select "1 time", the permission period does not repeat. When you select "Select day", put a check mark for days of the week to be repeated, then press  ().
Validity period	<p>When you set to "Repeat", you can set the period to be valid.</p> <p>▶ ON or OFF ▶ Enter a validity date (from) ▶ ON or OFF ▶ Enter a validity date (to).</p>

3 Press  ().

Information

- You can set "Location request menu" also by "Initial setting" (see page 45).
- When "ON" is set, the location information might be sent without any operation on the FOMA phone, and might be notified to the searcher.
- When "OFF" is set, the location provision is rejected even if its location provision request is received. The history is not stored.
- You can specify from January 1, 2007 through December 31, 2037 for "Permission schedule".

Operations when the validity period for location provision is specified

Example: When the current date and time are 12:00/15/Nov/2007 and you set 14:00 as the start time and 21:00 as the end time

Repeat	Validity period	Period of location provision
1 time	-	14:00/15/Nov/2007 through 21:00/15/Nov/2007

Repeat	Validity period	Period of location provision
Daily	Start date: 20/Nov/2007 End date: 30/Nov/2007	Every day 14:00 through 21:00 from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	Every day 14:00 through 21:00 from 15/Nov/2007 through 30/Nov/2007
	OFF	Every day 14:00 through 21:00 on and after 15/Nov/2007
Select day	Start date: 20/Nov/2007 End date: 30/Nov/2007	14:00 through 21:00 of the specified days of the week from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	14:00 through 21:00 of the specified days of the week from 15/Nov/2007 through 30/Nov/2007
	OFF	14:00 through 21:00 of the specified days of the week on and after 15/Nov/2007

Example: When the current date and time are 12:00/15/Nov/2007 and you set 10:00 as the start time and 21:00 as the end time

Repeat	Validity period	Period of location provision
1 time	-	12:00/15/Nov/2007 through 21:00/15/Nov/2007
Daily	Start date: 20/Nov/2007 End date: 30/Nov/2007	Every day 10:00 through 21:00 from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	12:00/15/Nov/2007 through 21:00/15/Nov/2007, every day 10:00 through 21:00 from 16/Nov/2007 through 30/Nov/2007
	OFF	12:00/15/Nov/2007 through 21:00/15/Nov/2007, every day 10:00 through 21:00 on and after 16/Nov/2007
Select day	Start date: 20/Nov/2007 End date: 30/Nov/2007	10:00 through 21:00 of the specified days of the week from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	If 15/Nov/2007 is the specified day; 12:00/15/Nov/2007 through 21:00/15/Nov/2007, 10:00 through 21:00 of the specified days of the week from 16/Nov/2007 through 30/Nov/2007
	OFF	If 15/Nov/2007 is the specified day; 12:00/15/Nov/2007 through 21:00/15/Nov/2007, 10:00 through 21:00 of the specified days of the week on and after 16/Nov/2007

Example: When the current date and time are 12:00/15/Nov/2007 and you set 14:00 as the start time and 10:00 as the end time

Repeat	Validity period	Period of location provision
1 time	-	14:00/15/Nov/2007 through 10:00/16/Nov/2007
Daily	Start date: 20/Nov/2007 End date: 30/Nov/2007	14:00 through 10:00 of the next day from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	14:00 through 10:00 of the next day from 15/Nov/2007 through 30/Nov/2007
	OFF	14:00 through 10:00 of the next day on and after 15/Nov/2007
Select day	Start date: 20/Nov/2007 End date: 30/Nov/2007	14:00 through 10:00 of the next days of the specified days of the week from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	14:00 through 10:00 of the next days of the specified days of the week from 15/Nov/2007 through 30/Nov/2007
	OFF	14:00 through 10:00 of the next days of the specified days of the week on and after 15/Nov/2007

Example: When the current date and time are 12:00/15/Nov/2007 and you set 10:00 as the start time and 10:00 as the end time



Repeat	Validity period	Period of location provision
1 time	-	12:00/15/Nov/2007 through 10:00/16/Nov/2007
Daily	Start date: 20/Nov/2007 End date: 30/Nov/2007	10:00/20/Nov/2007 through 10:00/1/Dec/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	12:00/15/Nov/2007 through 10:00/1/Dec/2007
	OFF	12:00/15/Nov/2007 through 10:00/16/Nov/2007, every day 10:00 through 10:00 of the next day on and after 16/Nov/2007
Select day	Start date: 20/Nov/2007 End date: 30/Nov/2007	10:00 through 10:00 of the next days of the specified days of the week from 20/Nov/2007 through 30/Nov/2007
	Start date: 10/Nov/2007 End date: 30/Nov/2007	If 15/Nov/2007 is the specified day; 12:00/15/Nov/2007 through 10:00/16/Nov/2007, 10:00 through 10:00 of the next days of the specified days of the week from 16/Nov/2007 through 30/Nov/2007
	OFF	If 15/Nov/2007 is the specified day; 12:00/15/Nov/2007 through 10:00/16/Nov/2007, 10:00 through 10:00 of the next day of the specified days of the week on and after 16/Nov/2007

Host Selection

※Normally, you do not need to change this setting.

You can use this setting for changing the host for Service Settings.

1  ► **LifeKit** ► **GPS** ► **GPS settings**
► **Host selection** ► **Highlight <Not stored>**
and press  ().

- If you select a stored host, the setting is changed to that host.
- To delete a stored host, press  (), select "Delete" and select "YES".

2 Do the following operations.

Item	Operation/Explanation
Host name	► Enter a host name. <ul style="list-style-type: none">• You can enter up to 9 full-pitch/18 half-pitch characters.
Host number	► Enter a host number. <ul style="list-style-type: none">• You can enter up to 99 half-pitch alphanumeric characters.
Host address	► Enter a URL. <ul style="list-style-type: none">• You can enter up to 100 half-pitch alphanumeric characters.

3 Press  (.

One Seg



What is One Seg?	244
Before Using One Seg	244
Setting Channels.....	245
<Channel Setting>	
Watching One Seg Programs.....	247
<Activate 1Seg>	
Using Program Guide i- oppli	250
<Program Guide i- oppli >	
Using Data Broadcasting	250
<Data Broadcasting>	
Using TV Links	251
<TVlink>	
Recording a One Seg Program while Watching.....	252
Booking Programs or Setting Timer Recording of One Seg	
.....	
<Book Program><Timer Recording>	253
Settings for One Seg.....	256
<User Settings>	

What is One Seg?

One Seg is the terrestrial digital TV broadcasting service for mobile objects, and it broadcasts data as well as video and audio. Further, by using i-mode, you can obtain the detailed information, can participate in quiz programs or can have fun with TV shopping.

For details on the One Seg service, browse to the web page as follows:

社団法人 デジタル放送推進協会

(The association for Promotion of Digital Broadcasting)

From personal computers:

<http://www.dpa.or.jp/>

From i-mode:

<http://www.dpa.or.jp/1seg/k/> (Japanese only)

Using One Seg

- The One Seg broadcasting is a service provided by television entrepreneurs (broadcasting stations).
- The subscription is not required to receive video, audio and data broadcasting transmitted on the airwaves for the One Seg service, and its charge is free.
- The information displayed in the data broadcasting area contains "Data broadcasting" and "Data broadcasting site". "Data broadcasting" is displayed on airwaves together with video and audio, and "Data broadcasting site" is displayed by connecting from the information of data broadcasting to the sites provided by television entrepreneurs (broadcasting stations). Also, it might be connected to "i-mode site", etc. When connecting to sites, you need to subscribe to i-mode separately.
- You are charged a packet communication fee for browsing "Data broadcasting site" and "i-mode site". You might be charged an information fee for using some sites (i-mode pay sites).

Radio waves

One Seg is one of the broadcasting services receiving radio waves (broadcasting waves) different from that used for the FOMA services. Accordingly, you cannot watch the broadcasting when you are out of reach of the broadcasting waves, or when the broadcasting is suspended regardless of whether you are in or out of the FOMA service area.





Even when you are in the terrestrial digital TV broadcasting service area, reception condition might be deteriorated or you might not be able to receive programs in the following places:

- Where the radio tower that transmits broadcasting waves is far away
- Where the radio waves are blocked by geographical features such as mountains or valleys of high-rise buildings
- Where the radio waves are weak or do not reach, such as in tunnels, underground, or recesses of buildings

To improve reception conditions, fully extend the One Seg antenna. Also the reception conditions might be improved by changing the direction of the antenna facing in, moving your FOMA phone away from or close to you, or moving yourself to another place.

Message shown in the display when you use One Seg for the first time

When you use One Seg for the first time after purchase, the Exemption Clause Confirmation display appears.

Press  or  and then press  ().

If you select "NO" from the succeeding confirmation display, the same confirmation display does not appear afterward.

- The Exemption Clause Confirmation display also appears when you replace the UIM with another one.

What is broadcasting storage area?

The broadcasting storage area is a storage area inside the terminal that is exclusive for One Seg. The information you input according to the instruction on the data broadcasting program is saved to that broadcasting storage area following the settings of television entrepreneurs (broadcasting stations). The information to be saved might contain answers for quiz, and personal information such as membership number, gender, age, or occupation.

The saved information might be displayed, or be sent to television entrepreneurs (broadcasting stations) without your re-input when you browse to the data broadcasting site.

- See page 257 to erase information in the broadcasting storage area.

When you replace the UIM with another one, the confirmation display appears asking whether to reset the broadcasting storage area. Select "YES", and reset it. If you select "NO", the services using the broadcasting storage area are not available.

Message on the display when the information in the broadcasting storage area is read out

When the information in the broadcasting storage area is used while you are watching a program, the message "Use saved information? It may include information used by the same broadcasting group" is displayed.

If you select "YES", the confirmation display asking whether to read out the stored information while watching the same program does not appear after that. Further if you select "YES (confirm once)," the same confirmation display does not appear afterward.

Before Using One Seg

How to Watch a One Seg Program

<Example> When you watch a One Seg program for the first time

STEP

1

Channel Setting

Store the channel list for the area you use.

(See page 245)

STEP

2

Activating One Seg


Extend the One Seg antenna, and activate One Seg.

(See page 247)

■ One Seg antenna

When you watch a One Seg program, fully extend the One Seg antenna.

- When you change the direction of the One Seg antenna, do not force it.

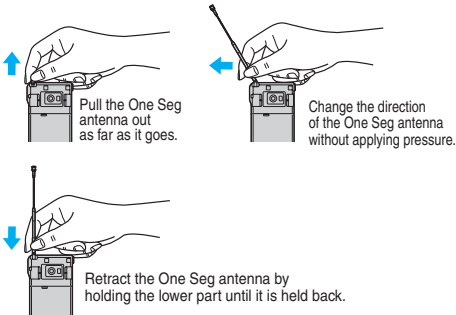

■ Battery level

If you try to start One Seg with the battery level low, the battery alert tone sounds, and the confirmation display appears asking whether to start it. Also, when the battery level becomes low while you are watching or recording a One Seg program, the battery alert tone sounds, and the confirmation display appears asking whether to end One Seg.

- When you do nothing from the confirmation display for about one minute, One Seg automatically terminates.
- While “Rec. when low battery” is set to “ON”, the confirmation display does not appear during recording. (See page 256)
- If the battery level becomes low during recording and recording ends, the video recorded up to that point is automatically saved.
- During Multitask, the battery alert tone sounds but the confirmation display does not appear. Switch to the Viewer display and then operate.

■ When calls etc. come in while you are watching or recording a One Seg program

When the events shown below occur while watching or recording a One Seg program, the video and audio are suspended, and each function works. Recording is not suspended.

After you finish each function, you can resume watching a One Seg program. See page 250 for receiving i-mode mail or SMS messages.

- Incoming voice call
- Incoming video-phone call
- Incoming PushTalk call
- Receiving i-mode mail, SMS, Message R/F (when “Receiving display” is set to “Alarm preferred”)
- Notification of Alarm, Schedule, ToDo, Book Program (when “Alarm setting” is set to “Alarm preferred”)
- Notification of Timer Recording (When the start date/time comes, the FOMA phone works according to the setting of “Priority.”)

Information

- When you have not inserted the UIM, when you have canceled the contract with DoCoMo, or when you have temporarily suspended using the FOMA service, you cannot watch One Seg programs.
- Even when you have inserted the UIM contracted with DoCoMo, you might be disabled to start One Seg if you repeatedly watch One Seg programs in the condition the FOMA phone cannot communicate such as when you are out of the service area. In that case, try to start One Seg in the condition the FOMA phone can communicate such as by moving into the FOMA service area.
- When you watch a One Seg program for the first time, start One Seg in the FOMA service area.
- One Seg is not available while “USB mode setting” is set to “microSD mode” or “MTP mode” and the FOMA phone is connected to a personal computer.
- One Seg might automatically start when you end a call by closing the FOMA phone during a call. In such a case, be careful not to use the FOMA phone close to your ear because audio is played back at the sound volume for One Seg.
- The life of battery pack may shorten if you watch One Seg programs for a long time during charging.

<Channel Setting>

Setting Channels

To watch One Seg programs, you need to execute Channel Setting and to select a channel list in advance. You can store up to 10 channel lists.

- The broadcasting stations you can receive are different depending on the local area. If you register a channel list of the area for travelling or business trip, you can watch programs in the area just by selecting the channel list.
- The remote-control numbers you use with channel selections are previously set for respective broadcasting stations.
- You cannot execute Channel Setting during recording a One Seg program.

Auto Channel Setting

You can automatically search for the broadcasting stations that you can currently watch in your area, and then register them to the channel list.




- Perform the setting with the One Seg antenna extended within the terrestrial digital TV broadcasting service area.

1 ► 1Seg ► Channel setting
► Auto channel setting ► YES

Searching takes place.

- From the Channel List display or Viewer display, press (F.W.I.C.), select “Channel setting”, and select “Auto channel setting”.

2 YES ▶ Enter a title.

- You can enter up to 11 full-pitch/22 half-pitch characters.
- When you press  without entering a title, the title name takes the name of "YYYY/MM/DD hh:mm". (Y: year, M: month, D: date, h: hour, m: minute)
- To cancel searching midway, press  or ; then select "YES". You can register the searched broadcasting stations in a channel list.


Information

- When the multiple broadcasting stations which have the same remote-control number are retrieved, the message to the effect that the remote-control number is doubled appears. Select "OK" and select your area from the Local Area Selection display. The channels in the area you select are preferentially assigned to remote-control numbers 1 to 12, and channels in the area you do not select are assigned to remote-control numbers 13 onward.
- The time to search channels requires for about 30 to 60 seconds. However, it differs depending on the number of broadcasting stations or airwave condition, and 60 seconds might be exceeded.

Select Area

You can register the broadcasting stations set by prefecture to a channel list.

1 ▶ 1Seg ▶ Channel setting ▶ Select area ▶ Select an area ▶ Select a prefecture ▶ YES

- From the Channel List display or Viewer display, press , select "Channel setting", and select "Select area".


Information

- Depending on the area, you may not be able to correctly register the broadcasting stations by "Select area". In that case, search for the broadcasting stations by "Auto channel setting".


Select Channel List

You can select a channel list to set the broadcasting stations you receive. Also, you can edit the channel list already registered.

1 ▶ 1Seg ▶ Channel list ▶ Select a channel list.

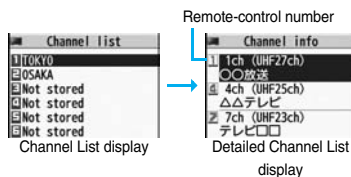


The channel list you receive is set, and the detailed display appears.

- Select a broadcasting station to watch a One Seg program.
- When you select "Channel list" from the Function menu of Viewer display, the Viewer display returns by selecting a channel list.
- You can watch a One Seg program also by pressing  from the Channel List display and selecting a broadcasting station.

Function Menu of the Channel List Display

Function menu	Operation/Explanation
Channel setting	See page 245.
Edit title	▶ Enter a title. You can enter up to 11 full-pitch/22 half-pitch characters.
Delete this	▶ YES • You cannot delete the channel list currently set.

Function Menu of the Detailed Channel List Display

Function menu	Operation/Explanation
Remote control No.	You can change the broadcasting station set for the remote-control number. ▶ Select a broadcasting station you want to change ▶ Select the remote-control number to be set. • If any broadcasting station has already been set for the specified remote-control number, the broadcasting stations switch positions. Repeat the operation to set a broadcasting station for a remote-control number. ▶  ▶ YES
Delete this	▶ YES • When you delete all the broadcasting stations in the channel list, the channel list itself is deleted. • You cannot delete the broadcasting station in the channel list currently set.


<Activate 1Seg>


Watching One Seg Programs

Just change the style to automatically switch between the vertical display and horizontal display when you are watching.

- When you use One Seg for the first time, the Exemption Clause Confirmation display appears. (See page 244)
- You can start One Seg also by using the channel information displayed in the Program Guide i-appli, sites, or mail.
- You can play back the audio from One Seg programs via a commercial Bluetooth device. (See page 352)


1 Press and hold for at least one second.

One Seg starts from the channel you watched last time.  is displayed while watching a One Seg program.


- When you have not registered any channel list, the confirmation display appears. Select "OK" and execute Channel Setting. (See page 245)
- You can start One Seg also by switching to Horizontal Open Style while the display for selecting One Seg function is displayed in Normal Style.
- While "Work with style" is set to "1Seg", you can start One Seg also by switching to Horizontal Open Style from the Stand-by display.
- To end watching, press  and select "YES".

■ About Viewer display

(When "Switch display" is "V. img+Caption+DBC.")

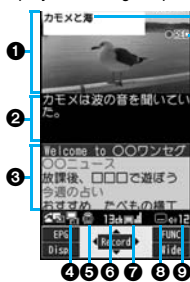


Vertical display

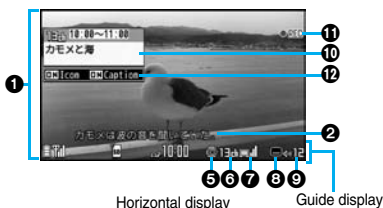

Horizontal display

Guide display

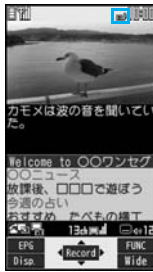


Viewer display

① Video ② Caption ③ Data Broadcasting

④ Operation Mode


 Video Mode:

Operates the video or audio. (See page 247)

 Data Broadcasting Mode:

Operates the data broadcasting. (See page 250)

⑤ ECO Mode


 appears during ECO Mode.

⑥ Channel (remote-control number)


⑦ Airwave Reception Level (estimate)

(Strong) \longleftrightarrow (Weak)

 appears out of the broadcasting area.

⑧ Reception of Caption

 is displayed while caption information is being recorded.

⑨ Sound Volume


⑩ Program Information (outline)

The program name is displayed in the vertical display.

The channel, start/end time, and program name are displayed in the horizontal display.

This is displayed when you operate keys or switch styles.

⑪ Record video

 "REC" appears during recording video.

 "REC" appears during recording video by Timer Recording.

⑫ Icon/Caption








Icon: "ON/OFF" of "Icon"

Caption: "ON/OFF" of Caption

This is displayed when you operate keys or switch styles.

- After you select a channel using Channel Search, the channel (remote-control number) might not be displayed.
- While "Icon" is set to "OFF" in the horizontal display, the guide display appears when you operate keys or switch styles.

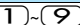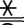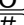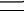■ Channel switching operation (in Video Mode only)

Operation	Key operation
Direct channel selection	Remote control No.1~9 . . . 
	Remote control No.10 . . . 
	Remote control No.11 . . . 
	Remote control No.12 . . . 
Sequential channel selection	
Channel search	 (for at least one second)
	<ul style="list-style-type: none"> • Each time of pressing switches channels by searching receivable broadcasting stations in order of frequency. •  (Cancel) or CLR to suspend

Operations while watching a One Seg program

Operation	Key operation
Sound volume adjustment	※1 or <ul style="list-style-type: none"> ● Press and hold to adjust the sound volume sequentially. ● Setting from Level 0 (Silent) through 25 is available.
Mute	※1 <ul style="list-style-type: none"> ● ※1 or adjust volume to play back sound
Start program guide i-opp	※2
Program info	(for at least one second) ※2
Program info (outline)	
Switch display	while displaying program information (outline) <ul style="list-style-type: none"> ● Each time of pressing switches "ON/OFF" of "Icon" and "Caption" in the horizontal display.
Vertical/Horizontal display	※1 ※2 ※3 <ul style="list-style-type: none"> ● Each time of pressing switches the display direction.
Record video	※1 or (for at least one second) <ul style="list-style-type: none"> ● ※1 or to stop
Record still image	
Switch TV/data BC	※2 <ul style="list-style-type: none"> ● Each time of pressing switches between Video Mode and Data Broadcasting Mode.

※1 In Data Broadcasting Mode, you cannot operate.

※2 You cannot operate in Horizontal Open Style.

※3 When you close the FOMA phone, the vertical display returns. In Horizontal Open Style, the horizontal display automatically appears; the vertical display does not appear.

Information

- Even when you switch the display by using Multitask while you are watching a One Seg program, the audio from the One Seg program is played back. (Play Background) The audio might not be played back, however, depending on the function or program. (See page 419)
- When "TV sound while closed" is set to "ON", the audio is played back even if you close the FOMA phone while you are watching a One Seg program. You cannot do anything other than adjusting the volume when your FOMA phone is closed.
- The following might occur depending on the radio wave conditions:
 - The audio is interrupted.
 - The data broadcasting is not operable.
 - Block-shaped noise appears on the display or playing stops.
 - The video or the data broadcasting is not displayed. (A dark screen appears.)
- The caption might not be displayed depending on the program.
- The data broadcasting cannot be displayed in the horizontal display.
- If you move, the receivable airwaves or broadcasting stations might change being affected by mountains or buildings. If reception on One Seg goes bad after moving, perform "Auto channel setting"; then reception might be improved via different airwaves or you might be able to watch programs of other broadcasting stations.

Information

- If you use Channel Search to select a channel after you move, etc., you might be able to find the channel you could not register by "Auto channel setting". Execute "Add to ch. list" to register the channel you found, and then you can watch the channel from the next time.
- When starting One Seg or switching channels, it takes a while before you can watch a One Seg program.

Function Menu of Viewer display

Function menu	Operation/Explanation				
Channel info	You can display the detailed display of the selected channel list. Select a broadcasting station to switch to it.				
Program info	You can display information of the program you are watching. <ul style="list-style-type: none"> ● When you have not obtained program information, it is not displayed. 				
Channel list	Go to step 1 of "Select Channel List" on page 246.				
Channel setting	See page 245.				
Add to ch. list	You can add the broadcasting station you are currently watching to the channel list. <p>▶ YES</p> <ul style="list-style-type: none"> ● The broadcasting station is registered to the lowest number of an unoccupied remote-control number from 13 onward. 				
Program guide	See page 250.				
Switch display	You can switch the contents of the Viewer display. <p>▶ Select an item.</p> <ul style="list-style-type: none"> ● If you set to "Enlarged V. img+DBC", the video in the vertical display is enlarged. However, the sides of the video might be cut depending on the program. ● Even if you set to "Data broadcasting", the audio from One Seg programs is played back. 				
Switch TV/data BC	You can switch between Video Mode and Data Broadcasting Mode while watching a One Seg program in the vertical display. <table border="1" data-bbox="565 901 672 1117"> <tr> <td>At One Seg start-up</td> <td>When "Caption" is set to "ON": V. img+Caption+DBC</td> </tr> <tr> <td></td> <td>When "Caption" is set to "OFF": Visual image+DBC</td> </tr> </table>	At One Seg start-up	When "Caption" is set to "ON": V. img+Caption+DBC		When "Caption" is set to "OFF": Visual image+DBC
At One Seg start-up	When "Caption" is set to "ON": V. img+Caption+DBC				
	When "Caption" is set to "OFF": Visual image+DBC				
Icon	See page 257.				
Compose message	See page 249.				

Function menu	Operation/Explanation		
Settings (Brightness)	You can set the brightness of the display light to Level 1 (dark) through 5 (bright). ▶ Select a brightness level. ● If you set to "Auto setting", it is adjusted automatically in accordance with the ambient brightness sensed by the light sensor. ● The setting here is valid until you finish watching the One Seg program. The setting at One Seg start-up follows the setting specified by "Brightness" of "Backlight" on page 107.		
Settings (Image quality)	See page 256.		
Settings (LCD AI)	See page 107.		
Settings (Auto volume)	See page 256.		
Settings (Remaster)	See page 256.		
Settings (Listening)	See page 256.		
Settings (Equalizer)	See page 256.		
Settings (Main/sub sound)	▶ Sound ▶ Main/sub sound ▶ Main sound, Sub sound, or Main+sub sound <table border="1" style="margin-left: 20px;"> <tr> <td>At One Seg start-up</td> </tr> <tr> <td>Main sound</td> </tr> </table>	At One Seg start-up	Main sound
At One Seg start-up			
Main sound			
Settings (Switch audio data)	▶ Sound ▶ Switch audio data ▶ Sound 1 or Sound 2 ● You can switch only when audio that can be switched is found.		
Settings (TV sound w/ closed)	See page 256.		
Settings (ECO mode)	See page 257.		
Data broadcasting (Reload contents)	You can reload the data broadcasting site being displayed. ▶ Reload contents ● The confirmation display appears asking whether to re-send the data you entered, depending on the site.		
Data broadcasting (Certificate)	See page 155.		
Data broadcasting (Set image display)	See page 164.		

Function menu	Operation/Explanation
Data broadcasting (Sound effect)	See page 257.
Data broadcasting (Reset settings)	See page 257.
Back to data BC	You can stop browsing the data broadcasting site and return to the data broadcasting.
Tune service	You can select a program to watch when the same broadcasting station is broadcasting multiple services (programs). ▶ Select a channel.
TVlink list	You can display the TVlink List. (See page 251)
AV output	See page 313.


Send i-mode Mail while Watching

You can compose and send i-mode mail messages while you are watching a One Seg program. (Multiple Windows)

When you send an i-mode mail message to the FOMA phone supporting the "Media To" function by "Recom. channel mail", the receiving end can start One Seg by using the "Media To" function.

- You cannot operate One Seg while the Message Composition display is shown. You cannot display the caption and data broadcasting, either.
- When you switch to Horizontal Open Style while the Message Composition display is shown, the Viewer display only is displayed horizontally.
- You can compose SMS messages while watching a One Seg program.

1 Viewer display ▶  (FUNC)
▶ **Compose message** ▶ **Compose message or Recom. channel mail**

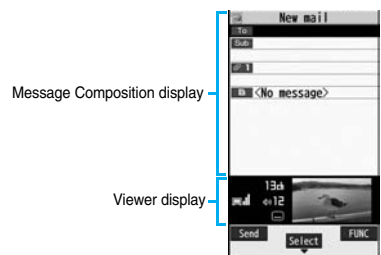

Compose message. . . . You can compose a new i-mode mail message.

Go to step 2 on page 172.

Recom. channel mail . . . You can compose an i-mode mail message whose text contains the information of the channel you are watching. Go to step 2 on page 172.

Information

- Even when you show the Message Composition display/ detailed Sent Mail display by Multitask while you are watching a One Seg program, the display appears in multiple windows.

Information


- Only the audio is played back from a One Seg program without showing the Viewer display if you select "Mail history" from the Function menu of the Inbox/Outbox/Draft List or a detailed mail display by Multitask while watching a One Seg program and show the detailed Sent Mail display of a mail message sent to a person whose mail address is not stored in the Phonebook.
- When "☰" appears at the lower left of the display, switch to Horizontal Open Style or do something to switch to the Viewer display and then operate.
- In B Mode of 2in1, you cannot compose/send i-mode mail message. (See page 372)

Receive i-mode Mail while Watching

When an i-mode mail message comes in from the person whose mail address is stored in the Phonebook, you can open the detailed Received Mail display while you are watching a One Seg program. (Multiple Windows)

- You cannot operate One Seg while the detailed Received Mail display is shown. You cannot display the caption and data broadcasting, either.
- When you switch to Horizontal Open Style while the detailed Received Mail display is shown, the Viewer display only is displayed horizontally.
- You can display SMS messages while watching a One Seg program.

- 1 **Receive i-mode mail while Viewer display is shown ▶ Reception Result display ▶ Mail ▶ Select an i-mode mail message to be displayed ▶ OK**

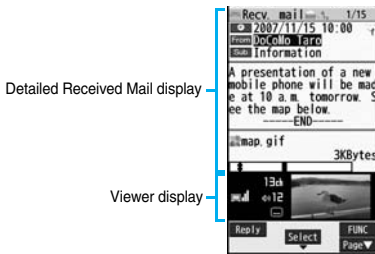**Information**

- Even when you show the detailed Received Mail display by Multitask while you are watching a One Seg program, the display appears in multiple windows.
- You cannot show the Viewer display and only the audio from a One Seg program is played back when you display a mail message from a person whose mail address is not stored in the Phonebook.
- When the display is shown in multiple windows, or when only audio from a One Seg program is played back with the detailed Received Mail display shown, you cannot press to show other messages. However, you can press to show other messages when you select "Mail history" from the Function menu of the Inbox/Outbox/Draft List or the detailed mail display by Multitask while watching a One Seg program.

Information

- When "☰" appears at the lower left of the display, switch to Horizontal Open Style or do something to switch to the Viewer display and then operate.

<Program Guide i-appli>**Using Program Guide i-appli**

By using the Program Guide i-appli, you can start One Seg by selecting a program from the program guide, book programs, and set timer recordings. (See page 219)

1 ▶ 1Seg ▶ Program guide

"Gガイド番組表リモコン (G Guide Program List

Remote-controller)" starts.

- Press (TV番組) from the display of "Gガイド番組表リモコン (G Guide Program List Remote-controller)" to watch the program currently broadcast on the selected channel.
- For details, refer to "Mobile Phone User's Guide [i-mode]".

**Information**

- You can set the Program Guide i-appli by "Program guide key" of "Software setting".
- When you use "Gガイド番組表リモコン (G Guide Program List Remote-controller)" for the first time, you need to do initial settings.
- "Gガイド番組表リモコン (G Guide Program List Remote-controller)" is a mail-linked i-appli program, so you cannot use it in B Mode of 2in1.


<Data Broadcasting>**Using Data Broadcasting**

One Seg enables you to use the data broadcasting in addition to the video and audio. Various information including still/moving images is available from the site linked with TV programs.

1 Viewer display (Video Mode)


Video Mode switches to Data Broadcasting Mode and "" appears.

- Audio from a One Seg program is played back even during Data Broadcasting Mode.
- You can display only data broadcasting when you press (FUNC) from the Viewer display and select "Data broadcasting" of "Switch display".

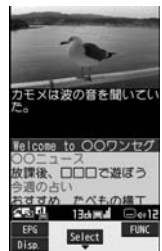**2 Select an item (link).**

- The confirmation display appears asking whether to connect to i-mode depending on the data broadcasting and data broadcasting site.
- See page 153 for the operation while a site is displayed.

Information

- Each time you press , Video Mode and Data Broadcasting Mode are switched.
- If you change a channel during Data Broadcasting Mode, Video Mode returns.
- You cannot display the data broadcasting in the horizontal display.
- You cannot enter pictographs when you enter characters on data broadcasting or data broadcasting site.
- The audio might be played back depending on the program while the i-mode site is displayed. The One Seg video does not appear, however.
- When you display the data broadcasting or data broadcasting site, a tone might be output depending on the program. In that case, the playback of the One Seg audio temporarily stops, and the tone of the data broadcasting is preferentially output.
- While the data broadcasting or data broadcasting site is displayed, the confirmation display might appear asking whether to send the contents you entered on the site or whether to permit obtaining mobile phone information.
- When you select "YES (confirm once)" from the confirmation display for data broadcasting, the information on data broadcasting might be automatically updated, and you might be charged a packet communication fee. (See page 257)
- If you move in a place where the airwave is unstable while watching a One Seg program, the video, data broadcasting, and data broadcasting site may be automatically updated. In that case, the top page of the data broadcasting appears, and the information you have entered into the connected data broadcasting or data broadcasting site is cleared. Ensure that you watch the data broadcasting and data broadcasting site in a place where the airwave is stable.

Use Highlighted Information for Various Operations

You can use the highlighted information in the data broadcasting site to easily use the functions such as making calls, or sending mail.

Select an item (link) and use the Phone To/AV Phone To or Mail To function. (See page 163)

Information

- Depending on the data broadcasting or data broadcasting site, the function of composing i-mode mail or storing the Phonebook entries might be automatically used. The confirmation display asking whether to use each function appears.

<TVlink>

Using TV Links

Some data broadcasting programs might contain TV links which lead to the details of the programs or related information site.

From the TV links, you can store the site address information in the TVlink List and can easily call them up for browsing later.

Register to TV Links

When you select the item (link) that can be registered to the TVlink List, the confirmation display appears asking whether to register it to the TVlink List.

You can register up to 50 TV links.

1 In Data Broadcasting Mode, select an item (link) that can be registered to the TVlink List ▶ YES

- When you try to register the same URL or memo information, the confirmation display appears asking whether to overwrite it.
- When the maximum number of TV links has already been registered to the TVlink List, the confirmation display appears asking whether to register after deleting.

 
Information

- Validity period is set for some links. If the validity period is expired, you cannot register it.
- The number of characters that can be registered for a URL is up to 60 half-pitch characters. When the number of characters used for a URL exceeds that, you cannot register it.
- You can register a title of up to 20 full-pitch/40 half-pitch characters. When the number of characters exceeds that, the excess is deleted. When the title is not found, the URL is displayed in the List display.
- The contents you entered in the site is not registered to the TVlink.




Bring Up a Registered TV Link

1 ▶ 1Seg ▶ TVlink ▶ Select a TV link to be displayed.


- When the confirmation display appears asking whether to connect to i-mode, select "YES".
- For a link whose validity period is expired, the confirmation display appears asking whether to delete it.
- After you brought up a site using a TV link, the TV link is displayed at the top of the TVlink List next time.



Icons in the TVlink List

Icon	Format	Description
	Memo information	Displays memo information.
	Link communication contents	Connects to the data broadcasting site. (Video and caption are not displayed.)
	i-mode contents	Connects to the i-mode site.

Function Menu of the TVlink List

Function menu	Operation/Explanation
Display detail	Displays the title, URL, outline, content type, and validity period of the TV link.
No. of TVlink	Displays the number of the registered TV links.
Delete this	▶ YES
Delete selected	▶ Put a check mark for TV links to be deleted ▶  (Finish) ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Recording a One Seg Program while Watching

You can save the program as video or still images while you are watching.

- The copy control signals such as “Copy never”, “Copy once”, and “Copy free” are incorporated into One Seg. The copy control signals are determined by each broadcasting station.
- You cannot record the programs of “Copy never”. Further, when the copy control signal is changed to “Copy never” during recording, the recording session is closed, and the video recorded up to that point is saved.




Record Video

The recorded video is saved to the microSD memory card (“Data box”→“1Seg”→“Video”→“microSD”). You can record up to 2 Gbytes per item.

- See page 286 for playing back the recorded video.
- You cannot save the recorded video to the FOMA phone.


1 Viewer display (for at least one second)

The confirmation tone sounds, “● REC” appears, and recording starts.

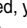- You can start recording also by pressing  in Video Mode.
- When the airwave reception level indicates “”, you cannot record video. Even if “” is indicated, you might not be able to record it depending on the radio wave conditions.
- You cannot change the channel during recording.

2 Press .

The confirmation tone sounds and recording ends, and video is saved.


- You can save the video also by pressing  (Stop) in Video Mode.
- When the file size is larger than 2 Gbytes, or the storage location becomes full, the recording automatically ends, and then the video recorded up to that point is saved.

■ Estimate of the number of saved files and recordable time

The maximum savable number	99
The maximum recordable time (total)	Approx. 740 minutes

- The savable number of video files decreases depending on the data volume.
- The maximum recordable time is an estimate for microSD memory card of 2 Gbytes, and it is an estimate for 224 kbps of video, 48 kbps of audio, and 52 kbps of data (including captions). The recordable time varies depending on the broadcasting station or program.

Information

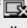- The playing time of the saved data might become shorter than the recording time depending on the radio wave conditions.
- The recording is not suspended even when you switch displays by Multitask or when a call comes in during recording.
- When the airwave conditions are changed to indicate “” during recording, recording continues but video and audio during that period are not saved.
- If you remove the battery pack or pull out the microSD memory card during recording, the recorded data is saved as the file that cannot be played back.
- Depending on the broadcasting station or program, video and audio might be saved a few seconds after your recording operation.
- You cannot record when the video storage area is full. Also, you might not be able to record when the unused space in the storage area is not enough. Delete unnecessary video files and try again.
- The file name and title name of the saved video are as follows:
File name: “PRGXXX”
Title name: “YYYY/MM/DD hh:mm”
(X: numerals, Y: year, M: month, D: date, h: hour, m: minute)
- You cannot set the recorded video for the Stand-by display, ring tone or Call Receiving display.
- Data broadcasting cannot be saved as video.
- You cannot save video during AV output.

Record Still Images

The recorded still images are saved to your FOMA phone ("Data box"→"1Seg"→"Image" folder). You can save up to 3,500 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

- See page 274 for displaying the recorded still image files.
- You cannot save still images to the microSD memory card.

1 Viewer display

A confirmation tone sounds, and the still image is saved.

- When the airwave reception level indicates "", you cannot record still images.

Information

- The file name and title name of the saved still image are as follows:
File name: "YYYYMMDDhhmmXXXX"
Title name: "YYYY/MM/DD hh:mm"
(Y: year, M: month, D: date, h: hour, m: minute, X: numeral)
- You cannot set the recorded still image for the Stand-by display or the Call Receiving display.
- See page 162 for when images are stored to the maximum.
- Data broadcasting and caption cannot be saved as still images.
- You cannot record still images during AV output.

<Book Program><Timer Recording>

Booking Programs or Setting Timer Recording of One Seg

You can book programs or set timer recordings of One Seg. At the specified date/time, an alarm sounds to notify you of the start of the program.

- You can book programs or set timer recordings also by using the channel information displayed in the Program Guide i-appli, sites, or mail.

Book Program

You can book programs by setting the date/time, channel, and program name. You can book up to 100 programs.

1 ▶ 1Seg ▶ Book program ▶ (New)

▶ Do the following operations.

- Select a booked program to check the contents, and you can edit it by pressing (Edit).

Item	Operation/Explanation
 (Start date setting)	Enter a date/time for starting watching. ▶ Select an item. Enter date Enter a date/time directly. Choose date Select a date from the Calendar and enter a time.
 (Channel)	▶ Select a channel.

Item	Operation/Explanation
 (Edit title)	▶ Enter a program name. • You can enter up to 48 full-pitch/96 half-pitch characters.
 (Repeat)	▶ Select a type of repeat. • If you select "1 time", the booking is not repeated. • If you select "Select day", put a check mark for days of the week to be set and press (Finish). • The program booking set with repetition is counted as one booking.
 (Alarm)	▶ Select an alarm method. ON Alerts you at the time set for the start date/time comes. The setting for alarm notification is completed. ON/Set time . . . Alerts you at the time set as the prenotification. OFF Does not alert. The setting for alarm notification is completed. ▶ Select how many seconds (minutes) before the specified time to be alerted.
 (Alarm tone)	▶ Select a type of alarm tone ▶ Select a folder ▶ Select an alarm tone.
 (Volume)	▶ Use to adjust the volume. • If you set to "Step", the alarm tone is silent for about three seconds, and then the volume steps up every about three seconds, from Level 1 through Level 6.
 (Activate TV w/ alarm)	If you set to "ON", you can start One Seg directly from the Booking Alarm Notification display. ▶ ON or OFF

2 Press (Finish).

Timer Recording







You can set timer recordings by setting the date/time, channel, and program name. You can set up to 100 timer recordings.

1 ▶ 1Seg ▶ Timer recording ▶ (New)

▶ Do the following operations.

- Select a set timer recording to check the contents, and you can edit it by pressing (Edit).
- You can display the used memory space (estimate) by pressing (Memory).

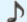Item	Operation/Explanation
 (Start date setting)	Enter a date/time for starting or ending recording. The booking alarm notification is made about one minute before the starting time. ▶ Select an item.
 (End date setting)	Enter date Enter a date/time directly. Choose date Select a date from the Calendar and enter a time.

Item	Operation/Explanation
ch (Channel)	▶ Select a channel.
N (Edit title)	▶ Enter a program name. <ul style="list-style-type: none"> You can enter up to 48 full-pitch/96 half-pitch characters.
 (Repeat)	▶ Select a type of repeat. <ul style="list-style-type: none"> If you select "1 time", the recording is not repeated. If you select "Select day", put a check mark for days of the week to be set and press  (Finish). The timer recording set with repetition is counted as one event.
 (Alarm)	You can set whether to make the alarm tone for the booking alarm notification. ▶ ON or OFF <ul style="list-style-type: none"> Regardless of the setting of "Alarm", the vibrator works in Manner Mode.
 (Volume)	▶ Use  to adjust the volume. <ul style="list-style-type: none"> You cannot set the volume to "Step".
 (Priority)	You can set a recording operation for when the start date/time arrives while operating a function which cannot be started up simultaneously. ▶ Recording or Operation Recording ... Suspends and terminates the function being operated, and starts recording. ▶ Operation ... The confirmation display appears asking whether to start recording. Select "YES" to suspend and terminate the function being operated and start recording. <ul style="list-style-type: none"> For while operating a function which can be started up simultaneously, recording starts by the Multitask function. When the start time arrives during a call (including dialing and ringing), recording starts after you end the call. When you are using another function during a call, recording starts after you end the call and the function.


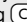
2 Press (Finish).

- When the confirmation display appears asking whether to set the timer recording, select "YES". If you select "YES (confirm once)", the same confirmation display does not appear afterward.


Information

- You can book programs or set timer recordings also by using the program information displayed in the Program Guide i-opppli, sites, or mail. In that case, the registration display might appear with the start date/time, end date/time, channel, and program name entered.

Information


- When you booked multiple programs whose booking alarm notification is made at the same date/time, the notification for the program set for the earliest start date/time is preferentially made. When the start date/time of the programs is the same, the notification set for the program booked in the last is preferentially made.
- You cannot set multiple timer recordings whose recording time overlaps. If you set two timer recordings and the recording end time of one program is the same as the recording start time of the other, recording of the first program ends about one minute earlier.
- You cannot book programs or set timer recordings of which starting date/time or alarm notification date/time (for Timer Recording, about one minute before) is over.
- The program bookings and timer recordings of which alarm notification date/time is over are automatically deleted. However, the bookings set to be repeated, program bookings for which "Alarm" is set to "OFF" are not deleted. Also the bookings are not deleted if you were operating the program booking/timer recording function on the notification date/time.
- When no channel lists are set, you cannot book programs and set timer recordings.
- When you have set "Priority" of "Recording" to "Operation" and the confirmation display is shown, the recording does not start even at the recording start time and starts at the time you select "YES". However, the recording is not executed if the recording end time is over.
- The title of the recorded video file takes the program name booked for the timer recording.
- " REC" appears in the Viewer display during recording video by Timer Recording.
- The audio from a One Seg program is not played back during recording that has been started by Timer Recording. You can play back the audio by pressing  or adjusting the sound volume, however.


Function Menu while Book Program or Timer Recording is Displayed

Function menu	Operation/Explanation
New	Go to step 1 of "Book Program" on page 253 for Book Program. Go to step 1 of "Timer Recording" on page 253 for Timer Recording.
Edit	Go to step 1 of "Book Program" on page 253 for Book Program. Go to step 1 of "Timer Recording" on page 253 for Timer Recording.
Sort	You can change the display order. ▶ Select an order.
Delete this	▶ YES
Delete past	You can delete the program bookings and timer recordings whose start date/time or end date/time is set for the past date/time. ▶ YES
Delete selected	▶ Put a check mark for program bookings or timer recordings to be deleted ▶  (Finish) ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES
Memory info [Timer Recording only]	You can display the used memory space (estimate).

■ When you set an alarm for “Book program” or “Timer recording”

The icon appears on the desktop.

“” Displayed when an alarm is set for today (except the setting for past time).

“” Displayed when an alarm is set for tomorrow or onward only.

- If you set “Display setting”→“Clock”→“Clock display” to “OFF”, or set “Alarm” to “OFF” for a program booking, the icons are not displayed.

■ When the time specified for “Book program” or “Timer recording” comes

<Book Program>

The alarm sounds for about five minutes, and illumination lights. The vibrator works as you set for “Phone” of “Vibrator”. The set start date/time, channel, program name and an animation appear on the display.

<Timer Recording>

About one minute before starting time, the alarm sounds for about two seconds, and illumination lights. The vibrator works as you set for “Phone” of “Vibrator”. The set start date/time, end date/time, channel, program name and an animation appear on the display, then the Viewer display appears.

- During a call

The alarm sounds from the earpiece.

- During operations

<Book Program>

When “Alarm setting” is set to “Operation preferred,” the booking alarm notification is made only when the Stand-by display is shown. When it is set to “Alarm preferred”, the booking alarm notification is made even while you are operating another function or during a call. (See page 341)

<Timer Recording>

Timer Recording works according to the setting of “Priority” (see page 254). However, Timer Recording might not work when you are reading to/writing from the microSD memory card, or accessing the Data Storage Center.

- When the booking alarm notification for a program booking or timer recording is set to the same time of “Alarm”, “ToDo”, or “Schedule”

The notification is made in the priority order of “Alarm” → “Timer recording” → “ToDo” → “Schedule” → “Book program”. A missed program booking or timer recording is notified by the icon on the desktop.

- When the power is turned off

The booking alarm notification is not made. For Timer Recording, you cannot record a One Seg program unless the power has been set to “ON” one minute before the start date/time.

The icon does not appear on the desktop even after turning on the power.

- In Manner Mode

The vibrator, message display, and illumination light notify you. The alarm sounds at the volume set for Manner Mode. (See page 103)

- During Lock All, Personal Data Lock or Omakase Lock

The booking alarm notification is not made. You cannot record a One Seg program unless each lock is released one minute before the start date/time.

After releasing each lock, the icon appears on the desktop to inform you.

- During infrared data exchange, during iC communication, or while SD-PIM is operated

The booking alarm notification is not made. You cannot record a One Seg program unless each function is finished one minute before the start date/time.

After each function is finished, the icon appears on the desktop to inform you.

- While updating software program

The booking alarm notification is not made. You cannot record a One Seg program unless software update is finished one minute before the start date/time.

When the specified time comes during updating software program, the icon does not appear on the desktop even after updating is completed.



Information

- When you book programs or timer recordings with “Alarm setting” set to “Alarm preferred”, and the booking alarm time arrives while you are dialing, the alarm sounds after you have called up the other party. When booking alarm time arrives during ringing, the alarm sounds after communication has started.
- You might not be able to set some Chaku-uta Full[®] music files for an alarm for a program booking.
- When a Chaku-uta Full[®] music file is set for an alarm for a program booking, only the audio is played back at the specified time. The illumination for when you play back a demo to select an alarm tone differs from for when you are notified by an alarm.

■ To clear alarm tone/booking alarm message, and animation for Book Program

The alarm tone stops by pressing any of the keys, but the animation becomes a still image, and the booking alarm message stays displayed. When “Activate TV w/ alarm” is set to “OFF”, press any key again to clear. However, you cannot clear the booking alarm message by pressing a side key, with the FOMA phone closed. When a call comes in, the alarm stops.

■ When “Activate TV w/ alarm” of Book Program is set to “ON”

Press  () and select “YES” from the Booking Alarm Notification display; then One Seg starts, and you can watch the booked program. If you start watching the booked program during recording, the video recorded up to that point is automatically saved; then the booked program appears.

■When “Booking Alarm Notification” is not executed or recording is completed

The icon appears on the desktop. You can check that icon for the contents of the missed booking alarm (booking information) or recording result.

The booking information or recording result is the latest missed one.

 
- When “Activate TV w/ alarm” is set to “ON”, you can start One Seg also by pressing (TV) from the display of booking Information.
- When recorded video is stored, you can play back the video also by pressing (Play) from the display of recording result.

Recording Result

You can display up to 20 recording results from the latest one.

- ▶ 1Seg ▶ Recording result**
▶ Select a recording result.

- To delete all recording results, press (DEL all), enter your Terminal Security Code, and select “YES”.



<User Settings>

Settings for One Seg

- ▶ 1Seg ▶ User settings**
▶ Do the following operations.

Item	Operation/Explanation
Caption	You can set whether to display the caption for when watching starts. ▶ ON or OFF
Rec. when low battery	You can set whether to continue recording when the battery runs short during recording. ▶ ON or OFF ONThe confirmation display does not appear and recording continues. OFFThe confirmation display appears asking whether to end recording.
Image quality	You can change the image quality. ▶ Select an item. Standard . . . The average image quality SportsThe image quality suitable for sports programs CinemaThe image quality suitable for movies Dynamic . . . The dynamic image quality by accentuation

Item	Operation/Explanation
Sound (Auto volume)	You can set whether to turn up the sound volume so that it will be more audible. ▶ Sound effect ▶ Auto volume ▶ ON or OFF
Sound (Remaster)	You can bring the sound from an earphone or Bluetooth device to the original sound by complementing high-pitch range lost at data compression. ▶ Sound effect ▶ Remaster ▶ ON or OFF
Sound (Listening)	You can set sound effect for listening. ▶ Sound effect ▶ Listening ▶ Select an item. SurroundMakes the sound natural and stereophonic. Natur 1/2Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste. OFFSets Listening to “OFF”. ●“Natur 1/2” is effective for the sound from an earphone or Bluetooth device.
Sound (Equalizer)	You can change the quality of sound from an earphone or Bluetooth device. ▶ Sound effect ▶ Equalizer ▶ Select an item. NormalReproduces normal sound quality. DynamicMakes the sound dynamic by accentuation. VoiceMakes conversation audible. TrainMinimizes abnormal sound that causes sound leakage.
Sound (TV sound while closed)	You can set whether to continue outputting audio for when you close the FOMA phone while watching a One Seg program. ▶ TV sound while closed ▶ ON or OFF ●When the setting is “OFF”, audio is silenced when you close the FOMA phone. Audio is played back again when you open the FOMA phone and select “OK”.

Item	Operation/Explanation
ECO mode	<p>You can set ECO Mode which fixes some settings and reduces the battery consumption.</p> <p>▶ YES</p> <ul style="list-style-type: none"> ● To release ECO Mode, perform the same operation. ● Once ECO Mode is set, the following settings are fixed and cannot be changed. However, if you release ECO Mode, settings return. Image quality: Standard Remaster: OFF Listening: OFF Equalizer: Normal
Display light	<p>You can set the period of time of the display lights while you are watching a One Seg program.</p> <p>▶ Constant light or Lighting duration</p> <p>▶ Enter a lighting duration (minutes).</p> <ul style="list-style-type: none"> ● Enter from "01" through "30" in two digits.
Data broadcasting (Set image display)	<p>You can set whether to display images of the data broadcasting site. (See page 164)</p>
Data broadcasting (Sound effect setting)	<p>You can set whether to sound an effect tone of the data broadcasting and the data broadcasting site.</p> <p>▶ Sound effect setting ▶ ON or OFF</p>
Data broadcasting (Reset settings)	<p>If you select "YES (confirm once)" from the confirmation display for data broadcasting, the same confirmation display does not appear afterward. The confirmation display resumes after you reset settings.</p> <p>▶ Reset settings ▶ YES</p>
Icon	<p>You can set whether to always display guide (see page 247) in the horizontal display.</p> <p>▶ ON or OFF</p> <ul style="list-style-type: none"> ● Even if you set "Icon" to "OFF" and "Receiving display" to "Operation preferred", the icon such as "☑", "☒" or "☐" appears when you receive a mail message or Message R/F.
Check TV settings	<p>You can check each of "User settings".</p>
Reset channel setting	<p>You can delete all channel lists.</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Reset storage area	<p>▶ (☑) (FUNC) ▶ Delete this or Delete all</p> <p>Delete this . . . Deletes only the information of the affiliated broadcasting stations you selected, from the broadcasting storage area.</p> <p>Delete all . . . Deletes the information of all affiliated broadcasting stations created in the broadcasting storage area.</p> <p>▶ YES</p> <ul style="list-style-type: none"> ● If you select "Delete all", you need to enter your Terminal Security Code.

Item	Operation/Explanation
Reset TV settings	<p>You can reset each of "User settings" to the default.</p> <p>See "Function List" for the items to be reset. (See page 394)</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>

Information

<Sound (TV sound while closed)>

- When "TV sound while closed" is set to "ON", the information about the data broadcasting might be automatically updated, and you might be charged a packet communication fee.
- Regardless of the setting of this function, the audio is played back even if your FOMA phone is closed when you switch displays by Multitask, or when the display appears in multiple windows.

<ECO mode>

- AV output is not available during ECO Mode.
- When you switch to the horizontal display from the vertical display in ECO Mode, the information about the data broadcasting is discarded. Switch to the vertical display to receive the data broadcasting again.

<Data broadcasting (Set image display)>

- If you change this setting, "Set image display" of "i-mode settings" is also changed.

<Data broadcasting (Reset settings)>

- You cannot reset the confirmation display at the start of One Seg (see page 244) and at the time of Timer Recording (see page 254).

<Icon>

- The guide display might appear even if "Icon" is set to "OFF" when the radio wave conditions have got worse.



Full Browser/PC Movie



Displaying Web Pages Designed for PC	«Full Browser»	260
Setting Full Browser	«Full Browser Settings»	263
What is PC Movie?		265
Downloading PC Movies.		265
Playing Back PC Movies from Data Box	«PC Movie Player»	266

Displaying Web Pages Designed for PC

You can browse Internet web pages designed for PCs using the Full Browser function. You can display even the Internet web pages that cannot be correctly displayed by i-mode. However, you cannot display or correctly display some Internet web pages.

If you change the style while running Full Browser, the display automatically switches between the vertical display and the horizontal display. However, the display might not switch automatically during data communication or while a message is shown. When you switch it manually, select "CHG wide scr. mode" from the Function menu.

- The data such as Home URL or Bookmarks registered via Full Browser cannot be used via i-mode. The contents set by Full Browser are invalid for i-mode, either.
- Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files. For details on the packet communication fee, refer to "Mobile Phone User's Guide [i-mode]".
- You can browse Internet web pages composed of frames. You can select a frame to display it as well. (See page 261)
- You can display SSL/TLS*-compatible pages via Full Browser.

*SSL and TLS are the methods of safer data communication using authentication/encryption technology to protect your privacy. SSL/TLS pages prevent eavesdropping and information alteration during communication by exchanging encrypted data files. Further, server authentication prevents web spoofing, thus making your personal information such as credit card number or postal address exchanged safer.

1 [Full Browser] Select an item.

- Home** Displays an Internet web page set as Home URL.
- Bookmark** Displays an Internet web page stored in Bookmark. (See page 157)
- Last URL** Displays an Internet web page you viewed last time.
- Go to location** Displays an Internet web page by entering a URL. (See "Displaying Internet Web Pages" on page 156)
- Full Browser settings** Configures Full Browser settings. (See page 263)


- When "Access setting" is set to "No", the confirmation display appears asking whether to start Full Browser. Highlight "Yes" and select "OK" to switch setting of "Access setting", then Full Browser starts up.
- To end Full Browser, press [End] with an Internet web page displayed and select "YES".
- When no Home URL is stored and you select "Home", the message appears telling that no Home URL is stored. Select "OK", then the Home URL Storage display appears. (See page 263)

Information

- It may take long to display some Internet web pages.
- You cannot use the following functions on Full Browser:
 - Phone To function
 - Screen memos
 - Flash movies
 - PDF files

Full Browser Display

- 1 [Multiple Windows] : Displaying in multiple windows
- 2 [Window Number] : Window number/Number of windows
- 3 [Another Window] : During communication in another window
[Another Frame] : During communication in another frame
- 4 [Phone Mode] : Phone Mode
[PC Mode] : PC Mode
- 5 [Enlarged Frame] : Displaying an enlarged frame

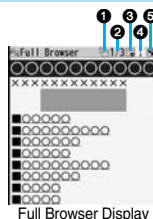


Operations for the Full Browser display

Operation	Key operation	
	Phone Mode	PC Mode
Return to previous page	[Back] or [1]	[1]
Forward to next page	[Forward] or [3]	[3]
Scroll display	[Back]	[Forward]
Scroll display page by page	[Up]/[Down] or [MENU] (Page [Up])/[Camera] (Page [Down]) • To scroll to the top/end of the page, [Up]/[Down] (for at least one second), [MENU] (Page [Up])/[Camera] (Page [Down]) (for at least one second) or [X]/[#]	
Reload	[2]	
Enlarge/Reduce display size	[7] to reduce the display size [8] to display in standard size [9] to enlarge the display size	
Display Bookmark List	[O]	

Switch Display Mode

Two modes, “Phone mode” and “PC mode”, are available for the Full Browser display.

- 1  **Full Browser** ▶ **Full Browser settings**
▶ **Display Mode setting**
▶ **Phone mode or PC mode**

Phone mode


... Displays an Internet web page to fit in the display width of the FOMA phone. You do not need to scroll sideways; you can browse Internet web pages by scrolling upward and downward.



PC mode

... Displays an Internet web page in the same format as when it is displayed on your personal computer in 800 (width) x 600 (height) dots. You can browse Internet web pages by scrolling upward, downward, and sideways.

- Each time you select “Change disp. mode” from the Function menu with an Internet web page shown, the display modes switches.
- When displaying in the horizontal display, “PC mode” is set automatically, and you cannot change the setting.

Use Operation Mode

Press  (**Op.**) from the Full Browser display to switch to “Operation mode”. The operation palette is displayed by switching to Operation Mode, then you can move to the previous/next page or enlarge/reduce the display size.


-  : Moves to the previous/next page.
-  : Enlarges/reduces the display size.



Open Multiple Windows

You can simultaneously open up to five Internet web pages via Full Browser.

- You can switch the simultaneously opened Internet web pages to show one by one.

- 1 **Full Browser display**  (**FUNC**)
▶ **Open new window** ▶ **Select an item.**

Bookmark ... Opens a new window to show an Internet web page stored in Bookmark. (See page 157)

Enter URL ... Opens a new window to show an Internet web page by entering a URL. (See “Displaying Internet Web Pages” on page 156)

Home ... Opens a new window to show an Internet web page set as Home URL.

Link ... Opens a new window to show a page of the link highlighted on the Full Browser display.

- See page 262 for how to switch or close the window.


Information

- Some Internet web pages have links configured to open in new windows. When you open such a link, the new window opens even if you do not perform above operations.

Display a Page Composed of Frames


You can display Internet web pages composed of frames. You can select a frame, and enlarge each selected frame for displaying.

- 1 From an Internet web page composed of frames ▶ Press  to highlight a frame, and press  (**Select**).

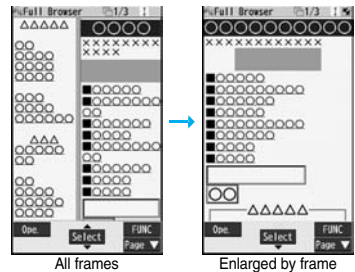

- To return to the display for all frames, press **(CLR)** or select “All frames” from the Function menu.

Information

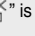- When an Internet web page has many divided frames, you might not be able to open all frames. “” is added to the frames that you could not open.

Upload Images

You can upload JPEG or GIF images stored in the FOMA phone to an Internet web page.

- Procedure for uploading images differs depending on the Internet web page. Follow the instructions on the display.

Information

- When the total size of the selected images exceeds 80 Kbytes, or when the total size of the selected image and other files exceeds 100 Kbytes, you cannot upload the images.
- You may not be able to upload images depending on the Internet web page.
- You cannot upload the images whose output from FOMA phone is prohibited.

Switch from i-mode to Full Browser


You can switch to Full Browser to show the Internet web pages incorrectly displayed by i-mode.










- 1 While a page to be shown in Full Browser is displayed  (FUNC)  Internet
 Switch to FB  OK

Information

- You cannot correctly display some Internet web pages.

Function Menu of Full Browser Display

Function menu	Operation/Explanation
Add bookmark	See page 157.
Bookmark	See page 157.
Enter URL	You can enter a URL to display an Internet web page.  Select a text box. Go to step 2 of "Displaying Internet Web Pages" on page 156. <ul style="list-style-type: none"> ● The URL of displaying site is entered beforehand.
Reload	The contents on the Internet web page is updated to the latest ones.
Change disp. mode	See page 261.
CHG wide scr. mode	The image is displayed horizontally by rotating the display 90 degrees to the right. <ul style="list-style-type: none"> ● When it is already displayed horizontally, the vertical display returns.
Open new window	See page 261.

Function menu	Operation/Explanation
Change window	You can switch the windows while displaying the Internet web pages in multiple windows.  Select a window.
Close window	You can close the window while displaying the Internet web pages in multiple windows.  YES
Save image	See page 159.
Add desktop icon	See page 114.
Compose message	You can compose an i-mode mail message with the URL of the displayed Internet web page pasted to the text. Go to step 2 on page 172.
Home (Set as home URL)	You can set the displayed Internet web page as Home URL.  Set as home URL  YES
Home (Display home)	You can display the Internet web page set as Home URL.  Display home
Scroll (Speed)	See page 263.
Scroll (Focus while scroll)	See page 263.
Zoom	See page 263.
All frames	You can return to the display for all frames from the display for the enlarged frame.
Retry	You can play back the displayed animation from the beginning.
Page info	You can display information of the displayed Internet web page.  URL or Title
Others (Set image display)	You can set whether to display images.  Set image display See page 263.
Others (Change CHR code)	See page 155.
Others (Cookie setting)	You can set whether to validate cookies.  Cookie setting Go to step 1 of "Cookie Setting" on page 264.
Others (Delete Cookies)	You can delete cookies.  Delete Cookies Go to step 1 of "Delete Cookies" on page 264.

Function menu	Operation/Explanation
Others (Referer setting)	You can set whether to send a referer. ▶ Referer setting Go to step 1 of "Referer Setting" on page 264.
Others (Certificate)	See page 155.

Information

<Compose message>

- The number of characters of the URL you can paste to the text is up to 512 half-pitch characters. If the URL contains 512 half-pitch characters or more, you cannot paste it.

<Full Browser Settings>

Setting Full Browser

- 1  ▶ **Full Browser** ▶ **Full Browser settings**
▶ Do the following operations.

Item	Operation/Explanation
Display Mode setting	See page 261.
Scroll (Speed)	You can set scroll speed. ▶ Speed ▶ High speed or Low speed
Scroll (Focus while scroll)	You can set whether to highlight links while scrolling. ▶ Focus while scroll ▶ ON or OFF
Zoom	You can set the display size of the Internet web page. From the Function menu of the Full Browser display, you can enlarge/reduce the display size by each page. ▶ Select a display size. • In PC Mode, you can select a display area by "Select disp. area" from the Function menu of the Full Browser display.
Access setting	You can set whether to use Full Browser. Yes . . . Uses Full Browser. No . . . Displays the cautions at the start of Full Browser. Check the cautions, highlight "Yes" and then select "OK", then the setting switches to "Yes", and Full Browser becomes available.
Home URL	You can set Home URL. ▶ Select the URL field ▶ Enter a URL ▶ OK
Set image display	You can set whether to display images. ▶ ON or OFF

Item	Operation/Explanation
PC Movie auto-play	You can set whether to automatically play back the downloaded type of PC movies while obtaining. ▶ ON or OFF

Cookie setting See page 264.

Delete Cookies See page 264.

Referer setting See page 264.

Script setting You can set whether to validate JavaScript. JavaScript is a simple program language that runs on Internet web pages. It is widely used to create Internet web pages with movements.
When "Valid" is set, you can use the JavaScript function to browse Internet web pages on Full Browser.
▶ **Valid or Invalid**

Window Open Guard You can set whether to prevent a new window from opening automatically by JavaScript.
▶ **Valid or Invalid**

Check settings You can check respective Full Browser settings.



Reset last URL You can erase the URL of the Internet web page you viewed last.
▶ **YES**

Information

<Access setting>

- If you replace the UIM with a new one when "Yes" is set, the setting switches to "No".

<Set image display>

- Even when "ON" is set, images might not be displayed correctly. In this case,  is displayed.
- When "OFF" is set,  is displayed and the data file is not received.

<Script setting>

- Some Internet web pages may not be displayed correctly unless "Valid" is set.
- Even when "Valid" is set, it might not work depending on JavaScript.

Cookie

By using cookies, you can effectively access the Internet web pages you have accessed once. A cookie is the system to temporarily save personal information such as the date/time or number of times you accessed an Internet web page. The information from the server is written into the FOMA phone, temporarily saved, and used for content services.

- If a cookie is sent, the information such as the date/time or number of times you accessed an Internet web page is also sent to the web page. Note that even if your information is detected by a third party by sending a cookie, we cannot be held responsible for that. However, you may not be able to correctly display or use some Internet web pages or content services unless the cookie setting is valid.

Cookie Setting

You can set whether to validate cookies.

- 1  **Full Browser** ▶ **Full Browser settings**
▶ **Cookie setting** ▶ **Select an item.**

Valid Always validates cookies. The confirmation display does not appear before a cookie is sent or received.

Invalid . . . Always invalidates cookies.

Notify (sending)

. Validates cookie's sending/receiving. The confirmation display appears each time before a cookie is sent.

Notify (receiving)

. Validates cookie's sending/receiving. The confirmation display appears each time before a cookie is received.

Notify (send/recv.)

. The confirmation display appears asking whether to permit a cookie to be sent or received each time before a cookie is sent or received.

- When you replace a UIM with another one, "Invalid" is set. If you change the setting with the another one, the display for entering your Terminal Security Code might appear.

Information

- When "Notify" is set, the confirmation display might consecutively appear asking whether to send/receive (update) cookies depending on the Internet web page.

Delete Cookies

- 1  **Full Browser** ▶ **Full Browser settings**
▶ **Delete Cookies**
▶ **Enter your Terminal Security Code** ▶ **YES**

Referer

The referer denotes the link source information. When a referer is sent, the information about from which page you have accessed it is sent to the site.

Note that even if your information is detected by a third party by sending a referer, we cannot be held responsible for that.

Referer Setting

You can set whether to send a referer while an Internet web page is open.

- 1  **Full Browser** ▶ **Full Browser settings**
▶ **Referer setting** ▶ **Select an item.**

Send Sends a referer.

Unsend . . . Does not send a referer.

Notify When a referer is sent, the confirmation display appears asking whether to send it.

Information

- When "Notify" is set, the confirmation display might consecutively appear asking whether to send a referer depending on the Internet web page.

What is PC Movie?

By using high speed communication, you can play back smooth and high-quality PC movies provided by portal sites, movie specialty sites and other sites on the Internet.

- PC Movie Player supports playback of Windows Media® Video.
- When downloading or streaming a PC movie, you might receive a bulky size of file. Note that you are charged a high packet communication fee for a bulky sent/received file such as a streaming type file whose size is not limited. For the details of the packet communication fee and billing plan, refer to “Mobile Phone User’s Guide [i-mode]”.

Categories		Description
Type	Playback type	
Streaming type (cannot be saved)	Plays back while obtaining	You can play back a PC movie while obtaining it. A long time playback is available.
Download type (can be saved)	Plays back while obtaining	When “PC Movie auto-play” is set to “ON”, you can play back a PC movie while obtaining it. You can save it to the microSD memory card after download and play it back without re-connection. Up to 10 Mbytes of a file can be downloaded.
	Plays back a file saved to the microSD memory card	To the microSD memory card, you can save not only data files obtained by the FOMA phone but also PC movies obtained or created on a personal computer, and then play them back. You can save a bulky file of up to the space size of microSD memory card.


- The distribution server for streaming type supports Windows Media Services 9 only. You cannot play back a streaming type of PC movie distributed from other than Windows Media Services 9.
- Some sites check the operating environment (browser type, OS type, etc.) are checked and you might not be able to play back PC movies.
- See page 267 for the supported file format of PC movies.

Downloading PC Movies

Playing Back a Streaming Type of PC Movie

1 Select a PC movie from a PC movie obtainable site ▶ YES

See page 266 for the operation during playback.

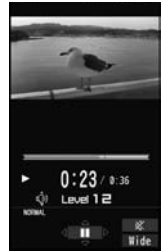

■ About license (Windows Media DRM)


- Among the PC movies protected by the license, you can play back the streaming type of PC movies only. You cannot play back the download type of PC movies protected by the license.
- You might not be able to play back PC movies depending on the license setting of the PC movies.
- If files are stored to the maximum when you try to obtain a license to save it to the FOMA phone, the confirmation display appears asking whether to delete currently stored licenses to save a new one. Select “YES” to delete all the stored licenses to save it. You need to obtain a license again to play back a PC movie whose license is deleted.

Playing Back a Download Type of PC Movie

1 Select a PC movie from a PC movie obtainable site ▶ YES

See page 266 for the operation during playback.

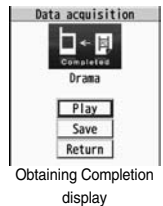

- If “PC Movie auto-play” is set to “ON”, a PC movie is played back during obtaining. If “OFF” is set, you can play it back by selecting “Play” from the Obtaining Completion display.
- When you obtain a download type of PC movie from a site, the file is obtained while it is played back, and obtaining itself continues even when you suspend the playback midway.





■When obtaining a PC movie is suspended



Depending on the type of a PC movie being obtained or the reason why the obtaining is suspended, the operation differs.

Streaming type

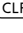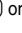

After the suspension by an incoming call, alarm notification, or disconnection of communication, the obtaining will be in pause state. Press  () to resume playback from the suspended point.

The display before playback returns when you suspend obtaining by pressing  or .

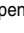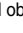Download type

After the suspension by an incoming call, alarm notification, or disconnection of communication, the Obtaining Completion display appears. However, when it is played back while obtaining, the display in pause state appears. Select "Play" to play back the obtained segments of the file. Select "ResumeDL" to resume obtaining from the suspended point. The confirmation display appears asking whether to discard the data when you suspend obtaining by pressing  or .



- For download type of PC movies, the downloading is continued during suspension if it is suspended by an incoming voice call, receiving a mail message or Message R/F, or alarm notification.
- Depending on the PC movie or the site you are connecting to, you cannot resume from the suspended point even by pressing  () or selecting "ResumeDL". In that case, the obtaining resumes from the top of the file.

Information

- Note that there is no upper size limit for a streaming type of PC movie, you might exchange the files of no size limit. When obtaining it, the confirmation display appears asking whether to play it back.
- Depending on the site or PC movie you are connecting to, you might not be able to obtain a file, play it back during obtaining, or play it back after obtaining.
- Depending on the line speed, line state, or radio wave conditions, the playback during obtaining might be suspended or the images might blur. You can repeatedly play back the download type of PC movies after obtaining but cannot play back the streaming type of PC movies.
- If the PC movie has the restrictions on the playable period, you cannot play it back before and after that period. If you leave your FOMA phone with the battery pack removed for a long time, the date/time information retained in the FOMA phone might be reset. In that case, you cannot play back the PC movie that has the restrictions on the playable period or playable deadline. See "Contents info" for checking the playback restrictions.
- "Contents info" of a PC movie and deadline information on the display that notifies you of a playable deadline are shown by the date/time with "Summer time" set to "OFF".

Saving PC Movies

You can save the obtained PC movies to the microSD memory card. However, you cannot save the streaming type of PC movies.

1 Obtaining Completion display ▶ Save ▶ YES

The PC movie is saved to the folder selected by "Select storage".

- When the maximum number of files has already been saved to the microSD memory card or memory space is full, the confirmation display appears asking whether to delete unnecessary files to save new one. Select "YES" to list the files in Data Box, and select the unnecessary files to delete them. Before deleting, you can play back PC movies on the microSD memory card for confirmation, but cannot display the previous or next files.


 
Information



- You cannot attach the saved PC movie to an i-mode mail message for sending.

<PC Movie Player>**Playing Back PC Movies from Data Box**

You can play back moving images published on the Internet for personal computers or PC movies saved to the microSD memory card via a personal computer, etc.

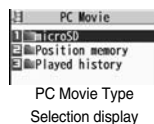





- You can play back the sound of moving images from a commercial Bluetooth device. (See page 352)













1  ▶ Data box ▶ PC Movie**2 microSD ▶ Select a folder ▶ Select a file.**

- When you press and hold  for at least one second during playback, pause, or halt, or press , PC Movie Player ends. It ends even when you play back during obtaining.

■Operations while playing back a PC movie

- See page 269 for when you operate from the Function menu.

Operation	Key operation
Pause※1	  or    or  to play back

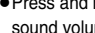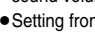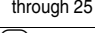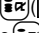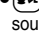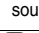Operation	Key operation
Fast forward※1	 ●  to play back
Display next file※2※3	
Display previous file※2※3	 ※4
Select position to play※1※5	Press and hold  .
Sound volume adjustment	 ● Press and hold to adjust the sound volume sequentially. ● Setting from Level 0 (Silent) through 25 is available.
Mute	 ●  or adjust the sound volume to play back sound
Switch vertical display/horizontal display※6※7	 ● Each time of pressing switches display direction.
Remaster	 ● Each time of pressing switches between "ON" and "OFF".
Listening	 ● Each time of pressing switches in order of "OFF" → "Surround" → "Natur1" → "Natur2".
Equalizer	 ● Each time of pressing switches in order of "Normal" → "S-XBS1" → "S-XBS2" → "Train".

- ※1 You might not be able to operate this for some PC movies.
 ※2 You cannot operate this for a streaming type of PC movie, or when you are playing back a PC movie while obtaining it. You cannot operate this when you play back an obtained but unsaved PC movie from the Obtaining Completion display, either.
 ※3 The files are displayed in the order on the PC Movie List. You can operate this when you play back from the PC Movie List. However, PC movies in WVX, ASX, and WAX formats are skipped.
 ※4 When three seconds have elapsed after starting playback, this operation returns the position to the beginning of the file. However, you might not be able to operate this for a streaming type of PC movie or when you are playing back a PC movie while obtaining it.
 ※5 You cannot operate this during fast-rewinding.
 ※6 The horizontal display is valid only for the current playback. When you close the playback display, the vertical display returns.
 ※7 You cannot operate this for PC movies with incompatible video data or voice-only PC movies.
- If you resume playback in the horizontal full display from the pause state, the display might become dark, however, the video appears soon after the playback resumes.

You can perform the following operations when you play back or pause a PC movie using the Flat-plug Stereo Earphone Set (option) or Flat-plug Earphone/Microphone with switch.

Operation	Switch operation
Pause	Press the switch once. To play back, press it again.
Play back next file	Press the switch twice in succession.
Play back previous file	Press the switch three times in succession. When playback time is over three seconds, this operation returns the position to the beginning of the file.

■ Specification for PC movie playback

File format	WMV, WMA, WVX, WAX, ASF, ASX	
Extension	wmv, wma, wvx, wax, asf, asx	
Codec	Video	Windows® Media Video 8 through 9
	Audio	Windows® Media Audio 2 through 9
Bit rate	Video only	512 kbps
	Voice only	192 kbps
	Video + Voice	512 kbps + 64 kbps
Video size	QVGA (sidewise 320 dots x lengthwise 240 dots)	
Frame rate	30 fps	





You might be able to play back the files that exceed the bit rates described above.



- Even when the file format is supported, you might not be able to obtain files, play back during obtaining, or play back after obtaining depending on the file.
- If the file format of either video or audio is not supported, the file might be played back with the supported format only.

Information

- Files with the extension of wvx, wax, asx are the files for which the URL of a PC movie on the Internet is specified. When you select those files saved on the microSD memory card, streaming or downloading playback starts from the specified URL.

■ Icons on the PC Movie List

Icon	File format
	WMV, ASF
	WVX, ASX
	WMA
	WAX

Icon	Description
	Resides on the Internet.
	Saved to the microSD memory card.

- Above icons are displayed only for "Position memory" or "Played history".

■When you select “Position memory” from the PC

Movie Type Selection display

The Position Memory Selection display appears. When you select “Marker to resume” or “Position memory1 through 9”, the PC movie is played back from the stored position.

Marker to resume	This is stored automatically when a call comes in, an alarm operates, or the battery level goes flat during playback of a PC movie, or when you terminate the PC Movie player during playback.
Position memory	You can store in any optional position in a PC movie, and create up to nine position memories. (See page 269)

- You can display information about the position memory by pressing (FUNC) and selecting “Posit. memory info”.
- To delete “Position memory”, press (FUNC) and select “Multiple-choice”, “Delete this”, or “Delete all”. You cannot delete “Marker to resume”.
- When a PC movie with a position memory has been deleted or moved to another folder, or when its file name has been edited, you cannot play it back.
- Even when you play back a PC movie from a position memory, it may be played back from the beginning, depending on the PC movie.

■When you select “Played history” from the PC Movie Type Selection display

When you play back a PC movie, the URL or storage location of that file is stored as a history. Up to 30 histories are stored, and when those are exceeded, the oldest history is

Played history	
Sports	[11/15 10:38]
News	[11/15 10:25]
Drama	[11/15 10:00]

Played History List

- overwritten. Select a played history to play back the PC movie according to the history information.
- When a PC movie stored in a played history has been deleted or moved to another folder, you cannot play it back.
 - When you play back an obtained but unsaved PC movie from the Obtaining Completion display, it is not stored in Played History.

Function Menu of the PC Movie Folder List

Function menu	Operation/Explanation
Add folder	▶ Enter a folder name. • You can enter up to 31 full-pitch/63 half-pitch characters.
Edit folder name	▶ Enter a folder name. • You can enter up to 31 full-pitch/63 half-pitch characters.
Delete folder	▶ Enter your Terminal Security Code ▶ YES
Select storage	You can set a destination folder for saving downloaded PC movies to the microSD memory card. ▶ YES

Information

<Select storage>

- “” is displayed for the folder set as a destination folder.

Function Menu of the PC Movie List/Played History List

Function menu	Operation/Explanation
Contents info	You can display the file title, file name, and others of the PC movie.
Move	You can move the PC movie to another folder. ▶ Select a destination folder.
Edit title (Edit title)	▶ Edit title ▶ Enter a title. • You can enter up to 18 full-pitch/36 half-pitch characters.
Edit title (Reset title)	You can reset the title to the default. ▶ Reset title ▶ YES
Copy	You can copy the PC movie to another folder. ▶ Select a destination folder.
History info	You can display information of the played history.
Position memory	You can store the URL information of the PC movie stored in Played History to a position memory. When you play back the file from the position memory, it is played back from the beginning. ▶ Select a position memory number to be registered. • You cannot select “Marker to resume”.
Multiple-choice	You can select multiple files and operate them. ▶ Put a check mark for files to be operated ▶ (FUNC) ▶ Select an item. Delete See “Delete this” on page 268. Copy See page 268. Move See page 268.
Description	You can display the lyric or description of the PC movie. ▶ The words view or Description view • Up to 1,024 full-pitch/2,048 half-pitch characters can be displayed in each.
Memory info	You can display the used memory space (estimate).
Delete this	▶ YES
Delete all	You can delete all the files in the folder. ▶ Enter your Terminal Security Code ▶ YES
Listing	You can change the display format of PC Movie List. ▶ Title or File name

Function Menu during Pause/at the End of Playback

Function menu	Operation/Explanation
Fast	The PC movie is played back fast. ●To cancel it, press ().
Rewind	The PC movie is played back fast in the opposite direction. ●To cancel it, press ().
Stop	You can end playback.
Position to play	You can set the start position for playing back the PC movie. ▶ Use to move the cursor position of the time bar and press (). ●To cancel, press .
Sound effect (Remaster)	You can bring the sound from an earphone or Bluetooth device to the original sound by complementing high-pitch range lost at data compression. ▶ Remaster ▶ ON or OFF
Sound effect (Listening)	You can set sound effect for listening. ▶ Listening ▶ Select an item. Surround Makes the sound natural and stereophonic. Natur 1/2 Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste. OFF Sets Listening to "OFF". ●"Natur 1/2" is effective for the sound from an earphone or Bluetooth device.
Sound effect (Equalizer)	You can change the quality of sound from an earphone or Bluetooth device. ▶ Equalizer ▶ Select an item. Normal Reproduces normal sound quality. S-XBS1 Enhances bass sound. S-XBS2 Enhances bass sound more deeply than S-XBS1. Train Minimizes abnormal sound that causes sound leakage.
Contents info	You can display the PC movie title, file name and others.
Position memory	You can store a position memory in the PC movie. Operate it at the desired position in pause state. ▶ Select a position memory number to be stored. ●You cannot select "Marker to resume".
Description	See page 268.

Function menu	Operation/Explanation
Copy URL	While playing back a PC movie published on the Internet, you can copy the URL of that PC movie. ●You can copy up to 512 half-pitch characters for the URL.
Display size	You can set the display whether to display a PC movie in the original size (Actual size) or to fit to the display size. ▶ Actual size or Fit in display ●Even if you set to "Actual size", the PC movie in excess of the display size is reduced to the display size.

Information

<Position to play>

- You might not be able to select the position to play depending on the PC movies.

<Sound effect>

- Even if an earphone or Bluetooth device is not connected, the respective setting contents are displayed on the display.

<Position memory>


- You might not be able to store the position memory depending on the PC movies.

<Display size>

- Depending on the image size, the image might be displayed with the right or bottom side cut off.



Data Display/Edit/Management

	
About Data Box	272
Making Full Use of Still Images	
Displaying Images	274
Editing Still Images	277
Creating Animations	280
Making Full Use of Moving Images	
Playing Back Moving Images/i-motion Movies	280
Using Playlist	284
Editing Moving Images/i-motion Movies	284
Making Full Use of Video	
Playing Back Video	286
Making Full Use of Chara-den	
What is Chara-den?	288
Displaying/Operating Chara-den Images	288
Recording Chara-den Images	289
Making Full Use of Melodies	
Playing Back Melodies	290
Making Full Use of Kisekae Tool	
Checking Kisekae Tool	292
Making Full Use of microSD Memory Card	
About microSD Memory Card	293
Inserting/Removing microSD Memory Card	293
Displaying Data Items on microSD Memory Card	294
Copying Still Images, Moving Images, etc.	296
Moving Copyrighted Files	298
Managing Unsupported Files	298
Formatting microSD Memory Card	299
Checking microSD Memory Card	299
Displaying Capacity of microSD Memory Card	299
Using a microSD Memory Card with a Personal Computer	299
Folder Configuration on microSD Memory Card	300
Making Full Use of Data	
Managing Folders	302
Making Full Use of Infrared Data Exchange	
About Infrared Data Exchange	303
Sending/Receiving One or Multiple Data Files	305
Sending/Receiving All Data Files	305
Using Infrared Remote-controller Function	306
Communication Setting	306
Making Full Use of iC Communication	
About iC Communication	306
Sending/Receiving One Data File	306
Sending/Receiving All Data Files	307
Making Full Use of PDF Viewer	
Displaying PDF Files	307
Making Full Use of Document Viewer	
Displaying Word, Excel, and PowerPoint Files	310
Printing Still Images	
Printing Saved Images	311
Displaying Images on TV	
Displaying Still Images, Moving Images/i-motion Movies on TV	312

About Data Box

Data Box contains the items and folders as listed below. Data is saved to respective folders according to the contents.

My picture		
i-mode		Downloaded still images, etc.
	Search by i-mode	Connects to the data site.
Camera		Still images shot by the camera, shot Chara-den images, etc.
Decomail-picture		Still images to be used for composing Deco-mail
	Search by i-mode	Connects to the data site.
Decomail-pictograph	お気に入り※1 (Favorite)	Pictographs to be used for composing Deco-mail
	絵文字※1 (pictograph)	<p>● You can delete the pre-installed Decomail-pictographs. You can re-download them from the "P-SQUARE" site (see page 163). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 39) are set to them.</p>
	装飾※1 (Decoration)	
	ハート・キラキラ※1 (Heart/Sparkling)	
	天気・季節※1 (Weather/Season)	
	移動・生活※1 (Transfer/Life)	
	電話・メール※1 (Phone/Mail)	
	食べ物※1 (Food)	
	キャラクター※1 (Cartoon character)	
	文字※1 (Character)	
	Search by i-mode	Connects to the data site.
Pre-installed		Pre-installed still images
User folder※2		Still images in the user folder
Original animation		The function of displaying still images continuously
Frame		Still images to be used for frames
Stamp		Still images to be used for marker stamps and cushy marks
Search by i-mode		Connects to the data site.
micro SD	Picture	Still images shot by the camera, and images in JPEG format and GIF format that conform to the DCF standard and were copied from the FOMA phone
	Image Box	Animation images in GIF format copied from the FOMA phone, and images in JPEG format that do not conform to the DCF standard
	Movable contents	Copyrighted still images moved from the FOMA phone
	Decomail-pictograph	Decomail-pictographs copied from the FOMA phone

MUSIC		
i-mode	Initial folder	Chaku-uta Full® music files obtained from sites
	Search by i-mode	Connects to the data site.
	User folder※2	Chaku-uta Full® music files in the user folder
	Search by i-mode	Connects to the data site.
	microSD	Copyrighted Chaku-uta Full® music files downloaded or moved from the FOMA phone
WMA		WMA files obtained from personal computer
Music&Video Channel		
Downloaded program		Programs downloaded via Music&Video Channel
Saved program		Programs saved to the FOMA phone
i motion		
i-mode		i-motion movies obtained from sites, etc.
	Search by i-mode	Connects to the data site.
Camera		i-motion movies recorded by the camera, shot Chara-den movies, etc.
Pre-installed		Pre-installed i-motion movies
User folder※2		i-motion movies in the user folder
Playlist		Playback of playlist
Position memory		Playback of marker position
Search by i-mode		Connects to the data site.
micro SD	Movie	Moving images shot by the camera or copied from the FOMA phone
	Movable contents	Copyrighted moving images moved from the FOMA phone
	Other contents	Voice-only i-motion movies※3 recorded by using the camera function, voice-only i-motion movies※3 copied from the FOMA phone, or video-unplayable i-motion movies※3 copied from the FOMA phone
Melody		
i-mode		Downloaded melodies, etc.
	Search by i-mode	Connects to the data site.
Pre-installed		Pre-installed melodies
User folder※2		Melodies in the user folder
Voice announce		Data files recorded by using "Voice announce"
Playlist		Playback of playlist
Search by i-mode		Connects to the data site.
micro SD	Melody	Melodies copied from the FOMA phone
	Movable contents	Copyrighted melodies moved from the FOMA phone
My documents		
i-mode		Downloaded PDF files, etc.
microSD		PDF files downloaded or copied from the FOMA phone
Kisekai Tool		
Search by i-mode		Connects to the data site.
microSD		Kisekai Tool files downloaded, or moved from the FOMA phone

Chara-den		
Pre-installed or downloaded Chara-den images		
PC Movie		
microSD	PC movies downloaded, or saved by personal computer	
Position memory	Playback of marker position	
Played history	Playback histories of PC movies	
iSeg		
Image	Still images recorded by One Seg	
Video	microSD	Video recorded by One Seg, and copyright-protected and One Seg compatible moving images made with other AV devices
	Position memory	Playback of marker position
Document viewer		
Document files saved from mail (attached files)		
SD other files		
SD others	Incompatible files saved from mail (attached files), or files in BMP or PNG format downloaded by Full Browser	


※1 The folder names can be changed by “Edit folder name”.

Decomail-pictographs are directly saved to these folders, and files other than Decomail-pictographs cannot be saved to them.

※2 The folder names you have entered for “Add folder” are displayed.

※3 Includes the music files in AAC format.

■ Icons in the File List

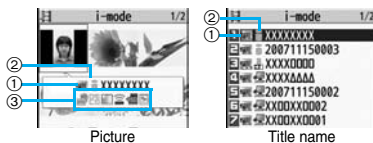

① File Type

Icon	Type	File format
	Still image	JPEG
	Still image with location information	JPEG
	Still image	GIF
	Frame	GIF
	Marker stamp	GIF
	Cushy mark	GIF
	Flash movie	SWF
	i-motion movie	MP4(AMR)
	i-motion movie	MP4(AAC)
	i-motion movie	MP4(AAC+[HE-AAC])
	i-motion movie	MP4(Enhanced aacPlus)
	i-motion movie	ASF

Icon	Type	File format
	Video	MPEG2-TS
	Partially saved i-motion movie	—
	Melody	SMF
	Melody	MFi
	Complete PDF file	PDF
	Partial PDF file	PDF
	Incomplete PDF file	PDF
	Damaged PDF file	PDF
	Kisekae Tool file	—
	Partially saved Kisekae Tool file	—
	Chara-den image	—
	Word file	WORD
	Excel file	EXCEL
	PowerPoint file	POWERPOINT
	Incompatible file	—

● For the file with the file restrictions, “” is added to each icon.

● Some files have restrictions on the number of playbacks, playable period, or playable deadline. “” is added to the icon of the file with playback restrictions and “” is added to the icon of the file with playback restrictions expired.

② Acquired source

Icon	Description
	Obtained from sites or i-mode mail attachment
	Files shot by the FOMA phone
	Obtained from infrared data exchange or iC communication or microSD memory card
	Files of recorded Chara-den images
	Files of recorded One Seg programs

※ For the copyrighted file movable to the microSD memory card, “” is displayed.


③ Available operation




Icon	Description
	Attach to i-mode mail
	Insert image into Deco-mail
	Set display
	Send Ir data, iC transmission
	Copy to microSD memory card
	Upload

Displaying Images

You can display the still images saved to the FOMA phone or the microSD memory card.

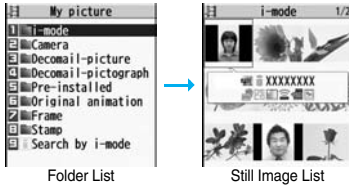- 1 **MENU** ▶ **Data box** ▶ **My picture**
- ▶ **Select a folder** ▶ **Select a file.**









- Each time you press **MENU** from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 302 for the Function menu on the Folder List.
- The image on the right is displayed when you cannot display a preview image: 
- For folders, the preview images on the right are displayed.   Set as a destination folder
- When selecting folders or still images by another function, some folders or still images may not be displayed depending on the function. You may at times be able to confirm the still image by pressing **Play** while you are selecting it.
- See page 162 when you select "Search by i-mode".

Display Images Recorded by One Seg

- 1 **MENU** ▶ **Data box** ▶ **1Seg** ▶ **Image**
- ▶ **Select a file.**

- **Operations when playing back still images**
- See page 277 for when you operate from the Function menu.

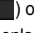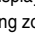Operation	Key operation
Display the next file ^{※1}	
Display the previous file ^{※1}	
Zoom (Enlarge/Reduce) ^{※2}	 Zoom <ul style="list-style-type: none"> •  + or  - to display enlarge/reduce during zooming •  Return to return to the former file

※1 Files are displayed in the order on the Still Image List.
 ※2 You cannot operate depending on the image size or file format.

Specifications for playing back still image files

File format	JPEG ^{※1} , GIF, Flash
Extension	jpg, gif, swf, ifm
Pixels	Files of 5M (2592 x 1944) size or smaller ^{※2}
File size	Still images of 2 Mbytes or less










※1 The types of JPEG file you can play back are Baseline and Progressive of the Exif/CIFF/JFIF format.








※2 For the file in the progressive format, you can display the file of VGA (640 x 480) size or smaller.

- You cannot display some files even if their file formats are supported.

Function Menu of the Still Image List

Function menu	Operation/Explanation
Edit picture	See page 277.
Edit title	<ul style="list-style-type: none"> ▶ Enter a title. • For a file in the FOMA phone, you can enter up to 9 full-pitch/18 half-pitch characters. • For a file on the microSD memory card, you can enter up to 18 full-pitch/36 half-pitch characters.
Display picture	You can display the image.
Set display	<p>You can paste the image to the Stand-by display and other displays for displaying. See "Positioning" for the position to which you paste the still image.</p> <ul style="list-style-type: none"> ▶ Select the display you paste it to. • "★" is displayed for the pasted items but not for the videophone related items other than "Videophone dial" or "V.phone incoming" even if already pasted. • If you select the videophone related items other than "Videophone dial" or "V.phone incoming", an appropriate message is displayed at the center of the still image.
Picture info	<p>You can display the still image title, file name and others.</p> <ul style="list-style-type: none"> • The item of "Set display" only is displayed for "Picture info" of original animations.

Function menu	Operation/Explanation
Location info (Attach location)	<p>▶ Attach location ▶ Select an item. By position loc.</p> <p>... Measures the current location and store the location information. After checking the location information, press  (Set).</p> <p>From loc. history</p> <p>... Select a piece of location information from Location History and store it.</p> <p>From phonebook</p> <p>... Select a Phonebook entry which contains the location information for storing.</p> <ul style="list-style-type: none"> ● To delete the stored location information, select "Delete loc. info". ● When you press  (Use) during measuring the current location, the confirmation display appears asking whether to display the result obtained so far from the location information. ● To cancel measuring the current location, press  (CLR) or  (Cancel). ● Press  (Retry) from the confirmation display for the location information to restart measuring in "Quality mode".
Location info (Delete loc. info)	<p>You can delete the location information stored in the image.</p> <p>▶ Delete loc. info ▶ YES</p>
Location info (Details)	<p>You can check the location information detail.</p> <p>▶ Details</p> <ul style="list-style-type: none"> ● If you press  (FUNC) while displaying the detail, the Function menu for the location detail is displayed. (See page 232)
Attach to mail	<p>Go to step 2 on page 172.</p> <ul style="list-style-type: none"> ● You can compose an i-mode mail message also by pressing  ().
Decorate mail	<p>You can compose Deco-mail using data in the "Decomail-picture" folder or "Decomail-pictograph" folder.</p> <p>Go to step 2 on page 172.</p> <ul style="list-style-type: none"> ● See page 175 for Deco-mail.
Send Ir data	See page 305.
 transmission	See page 306.
Add desktop icon	See page 114.
Copy to microSD	See page 296.

Function menu	Operation/Explanation
Store in Center	<p>You can save the still image stored in the FOMA phone to the Data Storage Center. Data Security Service is a pay service that is available on a subscription basis.</p> <p>▶ Enter your Terminal Security Code ▶ Put a check mark for still images to be saved  (Finish) ▶ YES</p> <ul style="list-style-type: none"> ● You can select up to 10 still images. ● You can switch between "Picture" and "Title name" by pressing  (FUNC). ● While a still image is displayed, you do not need to put a check mark for the still image.
Copy to phone	See page 297.
Move to microSD	See page 298.
Move to phone	See page 298.
Positioning	<p>You can set the position for when you paste the still image to the Stand-by display, etc. See page 274 for "Set display".</p> <p>▶ Select a position for displaying.</p>
Edit file name	<p>▶ Enter a file name.</p> <ul style="list-style-type: none"> ● You can enter up to 36 half-pitch alphanumeric characters.
File restriction	<p>If you set "File restricted" for the file, the operation of attaching to i-mode mail is disabled at the receiving end who receives the image as the first distribution.</p> <p>▶ File unrestricted or File restricted</p> <ul style="list-style-type: none"> ● See page 146 for the file restrictions.
DPOF setting	See page 311.
Slideshow	<p>All still images are consecutively displayed starting from the still image selected in the folder. You can select the speed the still image switches at.</p> <p>▶ Normal or Slow</p> <p>Press  (Stop) to stop Slideshow. Press  (Resume) again to resume Slideshow.</p>
Copy	<p>You can copy the still image, moving image, PDF file, document file, or SD other file on the microSD memory card to another folder on the microSD memory card.</p> <p>▶ Select a destination folder.</p>
Move	<p>You can move the still image, moving image, PDF file, document file, Kisekae Tool file, or SD other file to another folder.</p> <p>▶ Select a destination folder.</p> <ul style="list-style-type: none"> ● Press  () to display folders at the second-tier level or lower, if they exist. Press  (CLR) to return to the upper level.
Delete this	▶ YES

Function menu	Operation/Explanation
Delete all	You can delete all files in the folder. ▶ Enter your Terminal Security Code ▶ YES
Multiple-choice	You can select multiple files and operate them. ▶ Put a check mark for the files to be operated ▶ (FUNC) ▶ Select an item. Picture/Title name/Listing See page 276, page 293 and page 308. Delete See "Delete this" on page 275. DPOF setting See page 311. Copy See page 275. Move See page 275. Copy to microSD ... See page 296. Copy to phone See page 297. Send Ir data See page 305. Select all Selects all files. Release all. Releases all selected files.
Memory info	You can display the used memory space (estimate)/number of stored items.
Sort	You can change displayed order. ▶ Select an order. ● You cannot sort the files on the microSD memory card.
Picture/ Title name	You can switch the lists of still images. ● You can switch the lists also by pressing (Change) from the Still Image List.

Information

<Edit title>

- You may not be able to edit the title when the unused space on the microSD memory card is short.
- You may not be able to edit the title depending on the file.
- You cannot edit the titles of the pre-installed images in the "Decomail-picture", "Frame", "Stamp", and images in "Pre-installed" folders.

<Display picture>

- You may not be able to execute Display Picture depending on the file.
- Flash movies are played back at the volume set for "Phone" of "Ring volume". When "Phone" of "Ring volume" is set to "Step", they are played back at "Level 2".

Information

<Set display>

- Flash movies can be pasted only to "Stand-by display", "Wake-up display", "Dialing", "Calling", "Videophone dial", "V.phone incoming", "Mail sending", "Mail receiving", "Checking", and "Mail/msg. rcpt result".
- Animation GIF images cannot paste to the videophone related items other than "Videophone dial" or "V.phone incoming".
- The displayed size might differ from the actual size depending on the image size or the display pasted to.
- You cannot execute "Set display" for some image files.

<Attach to mail>

- You may not be able to compose i-mode mail depending on the image.
- See page 146 for attaching a file set with the file restriction to mail.

<Decorate mail>

- When an image size is larger than Sub-QCIF (128 x 96) size, the display for selecting how to convert the image size appears. The converted still image is saved as a separate new file.
Select "Attach directly"; then the image size does not change.
Select "Sub-QCIF scale down"; then the image size is scaled down to Sub-QCIF (128 x 96) size or smaller with its proportional ratio retained.
Select "Sub-QCIF trim away"; then the image size is scaled down or cut out to Sub-QCIF (128 x 96) size or smaller with its proportional ratio retained.
If the file size exceeds the maximum size to create Deco-mail, its size is converted to the maximum size to create Deco-mail or less.
- Even if you scale down or cut out the still image to Sub-QCIF (128 x 96) size, you can again scale down or cut it out by pressing (Cancel) or pressing (FUNC) and selecting "Cancel". When you press (FUNC) and select "Set", the Message Composition display appears.
- You may not be able to create Deco-mail depending on the image.

<Store in Center>

- You cannot save the following still images:
 - Images whose sizes exceed 100 Kbytes
 - Images whose output from the FOMA phone is prohibited
 - Images other than in JPEG or GIF format
- You cannot use Data Security Service when you are out of the service area.
- When you have not signed up for Data Security Service, the message to that effect appears.
- You can download the saved still images from the Data Storage Center site to your FOMA phone. For details, refer to "Mobile Phone User's Guide [i-mode]".

Information

<Positioning>

- You cannot set "Positioning" for Flash movies.
- The set display position is valid for "Stand-by display", "Wake-up display", the displays for "Dialing", "Calling", "Videophone dial", "V.phone incoming", "Mail sending", "Mail receiving", and "Checking". However, the set display position might not work on some images depending on their sizes.

<Edit file name>

- You may not be able to edit the file name depending on the file.
- You cannot use half-pitch space for the file name.

<File restriction>

- You may not be able to set the file restrictions depending on the file.

<Slideshow>

- Flash movies are not displayed.
- The time interval to show the images might differ depending on the image.

<Copy> <Move>

- If a call comes in while copying/moving multiple files, copying/moving is canceled even midway.

<Delete this> <Delete all>

- If you delete the files set for other functions, the setting returns to the default. However the image set for the videophone related items except "Videophone dial" or "V.phone incoming" does not change.
- Even if you delete the source still image of the attached still image, you cannot delete the still image attached to mail.
- If a call comes in while deleting multiple files, deleting is canceled.
- The video whose recording time is long might take a long time to be deleted. Further, during deleting, the FOMA phone is placed in the same status as it is out of the service area.
- When deleting the video whose recording time is long, make sure that the remaining battery is full enough.
- You might not be able to delete the video containing data that does not support the FOMA phone.
- You cannot delete the pre-installed images in the "Decomail-picture", "Frame", "Stamp", and "Pre-installed" folders.

<Multiple-choice>


- You can select up to 3,500 still images, moving images, melodies, PDF files and Kisekai Tool files, and up to 100 videos, document files and SD other files.

<Picture/Title name>

- When you use "Picture" to display still images, some images may appear different.

Function Menu while Playing Back Still Image

Function menu	Operation/Explanation
Edit picture	See page 277.
Set display	See page 274.
Picture info	See page 274.


Function menu	Operation/Explanation
Location info (Attach location)	See page 275.
Location info (Delete loc. info)	See page 275.
Location info (Details)	See page 275.
Attach to mail	See page 275.
Decorate mail	See page 275.
Send Ir data	See page 305.
 transmission	See page 306.
Display size	You can set whether to display the still image in original size (normal size) or to fit to the display size. ▶ Normal or Fit in display ● Even if you set to "Normal", the still image in excess of the display size is reduced to the display size. Also, when the still image is QCIF (176 x 144) size or smaller, it is doubled at both lengthwise and sidewise to be displayed.
Add desktop icon	See page 114.
Copy to microSD	See page 296.
Store in Center	See page 275.
Copy to phone	See page 297.
Positioning	See page 275.
DPOF setting	See page 311.
Delete	See "Delete this" on page 275.
Retry	You can play back the animation or Flash movie from the beginning.

<Edit Picture>

Editing Still Images

1 Still Image List/Still image in play

▶ (FUNC) ▶ Edit picture

- When the still image, which is not the Stand-by size, is larger than VGA size, it is reduced to VGA size.
- When the still image to be edited is larger than the display size, use  to scroll it.



Edit Picture display

2 (FUNC) ▶ Edit the still image.




See page 278 to page 280 for how to operate.

3 (Save) ▶ YES or NO

YES . . . Overwrites the image to save.

NO Saves the image as a new still image.

The edited still image is saved.

- To edit and save an edited still image on the microSD memory card, press  (Save) in step 3; then it is saved to the “i-mode” folder anew.
- Not to save the edited still image, press  or ; then select “YES”.
- See page 162 when images are stored to the maximum.

■ The size of still image you can edit

Edit menu	5M 3M 2M VGA CIF QVGA QCIF Sub-QCIF	3.7M Wide 2M Wide	Stand-by	Other sizes smaller than VGA
Marker stamp	○	○	○	○
Frame	○	×	○	×
Character stamp	○	○	○	○※1
Cushy mark	○	○	×	○
Change size	○	○	○	○
Trim away	○	○	○	○※2
Retouch	○	○	×	○
Rotate	○	○	○	○
Brightness	○	○	○	○
Attach to mail	○	○	○	○

○: Editing picture is enabled. ×: Editing picture is disabled.

※1 You cannot edit the still image smaller than 24 x 24 dots.

※2 You cannot edit the still image of Chat Picture (80 x 80) size or smaller.

- You can edit the still images of 1920 x 1440 dots, 1616 x 1212 dots, 1632 x 1224 dots, and 1280 x 960 dots as well.







Information

- You can execute “Edit picture” only for the “File unrestricted” files of still images shot by the cameras, obtained by data communication, downloaded from sites, or retrieved from i-mode mail.
- You may not be able to execute “Edit picture” depending on the still image.


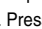
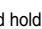
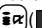
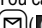
Information

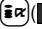- If you repeat editing image such as pasting frames or marker stamps to the shot still image, the image quality may deteriorate or the file size may become larger.
- You cannot edit some still images as you like.
- If you change the size of a still image, some still images cannot be allowed to edit picture.
- If the battery runs out during editing, the edited contents are discarded.
- The file name, title, storage location, and acquired source of the newly saved still image are as follows:
 - File name: “YYYYMMDDhhmmnnnn”
(Y: year, M: month, D: date, h: hour, m: minute, n: number)
 - Title: “YYYY/MM/DD hh:mm”
(Y: year, M: month, D: date, h: hour, m: minute)
 - Storage location: Folder the source file is saved to (Still images on the microSD memory card are saved to the “i-mode” folder.)
 - Acquired source: The same as the source file

Function Menu of the Edit Picture Display

Function menu	Operation/Explanation
Marker stamp	<p>You can add the marker stamp in the “Stamp” folder.</p> <p>▶ Select a marker stamp.</p> <ul style="list-style-type: none"> ● You can rotate the marker stamp by pressing  (FUNC) and selecting “90° to right/90° to left/180°”. Select “Scale up/ Scale down” to enlarge or shrink the marker stamp. ● You can reselect a marker stamp by pressing  (Cancel). <p>▶ Use  to position the marker stamp and press  (Put).</p> <ul style="list-style-type: none"> ● You can add a marker stamp by pressing  (Add). <p>▶  (Set)</p>

Frame

- ▶ **Select a frame** ▶  (Set)
- You can add the frame whose size is the same as the size of the image you are editing.
 - You can display the previous or next frame by pressing . Press and hold  for at least one second to display sequentially.
 - You can rotate the frame by pressing  (FUNC) and selecting “180° rotation”.
 - You can reselect a frame by pressing  (Cancel).

Function menu	Operation/Explanation
Character stamp	<p>You can add text.</p> <p>▶ Enter characters.</p> <p>You can enter up to 15 full-pitch/30 half-pitch characters. However, the number of characters you can enter decreases depending on the size of the still image.</p> <ul style="list-style-type: none"> ● Press (FUNC) and select "Character color" to select a color; then, you can change the color of characters. You can switch between "16 Color" and "256 Color" by pressing (Change). <p>Select "Font" to change the character fonts. Select "Character size" to enlarge or shrink characters. Select "Character input" to edit entered characters.</p> <p>▶ Use to position the characters and press (Put) ▶ (Set)</p> <ul style="list-style-type: none"> ● You can reselect a position by pressing (Cancel).
Cushy mark	<p>You can compound a cushy mark in the "Stamp" folder. The person's facial region is automatically recognized and the cushy mark is pasted to an appropriate position.</p> <p>▶ Select a cushy mark.</p> <ul style="list-style-type: none"> ● Press (FUNC) and select "Scale up/Scale down" to enlarge or shrink the cushy mark. ● To cancel, press (Cancel). <p>▶ Use to position the cushy mark and press (Put).</p> <ul style="list-style-type: none"> ● The cushy mark that comes out of the still image is cut off. ● You can add a cushy mark by pressing (Add). <p>▶ (Set)</p>
Change size	<p>▶ Select an image size to change to.</p> <ul style="list-style-type: none"> ● If you select the size different in proportional ratio from the source still image, the still image is enlarged or shrunk so that it does not exceed the selected size with its proportional ratio retained. <p>▶ (Set)</p> <ul style="list-style-type: none"> ● You can reselect a size by pressing (Cancel).

Function menu	Operation/Explanation
Trim away	<p>You can trim the still image to a certain size.</p> <p>▶ Select an image size to trim to.</p> <ul style="list-style-type: none"> ● You cannot select a trimming frame larger than the still image you are editing. ● When you select "Dial/recv. PIC (480 x 288)" or "VGA (640 x 480)", the still image you are editing or the trimming frame are halved at both lengthwise and sidewise to be displayed. <p>▶ Use to select a part to be trimmed and press (Set).</p> <ul style="list-style-type: none"> ● You can reselect a size to trim by pressing (Cancel). <p>▶ (Set)</p> <ul style="list-style-type: none"> ● You can reselect a part to be trimmed by pressing (Cancel).
Retouch	<p>You can set texture and color tone of the still image.</p> <p>▶ Select an item.</p> <p>Sharp Stresses the outline.</p> <p>Blur Softens the outline.</p> <p>Sepia Makes the color tone sepia.</p> <p>Emboss Makes the still image rugged.</p> <p>Negative Reverses the color tone.</p> <p>Horizontal flip Flips the image horizontally.</p> <p>Super clear shadow Makes the dark still image clear.</p> <p>Memory color Corrects the color and contrast.</p> <p>▶ (Set)</p> <ul style="list-style-type: none"> ● You can reselect an effect by pressing (Cancel).
Rotate	<p>▶ 90° to right, 90° to left or 180°</p> <p>▶ (Set)</p> <ul style="list-style-type: none"> ● You can reselect the rotation angle by pressing (Cancel).
Brightness	<p>You can adjust the brightness to -3 (dark) through +3 (bright).</p> <p>▶ Select a brightness level.</p>
Attach to mail	See page 275.
Save	See page 278.

Information

<Marker stamp>

- You cannot select the marker stamp with following sizes:
 - When the size is larger than the still image to be edited
 - CIF (352 x 288)
 - VGA (640 x 480)
 - QVGA (240 x 320)
 - QCIF (176 x 144)
 - Sub-QCIF (128 x 96)
- You cannot enlarge a marker stamp to the size larger than the still image you are editing.

<Character stamp>

- You cannot set some character colors depending on the image to be edited. In that case, select another color.

<Cushy mark>

- You cannot select a cushy mark larger than VGA (640 x 480) size.
- You can enlarge or shrink a cushy mark up to three times, but cannot enlarge it to the size larger than VGA (640 x 480) size.
- Person's face or outline might not be recognized correctly. When multiple persons' faces are found, a single person's face only is recognized.

<Original Animation>

Creating Animations

You can select up to 20 JPEG files (20 frames) of Stand-by (480 x 854) size or smaller from the "i-mode" folder, "Camera" folder and user folders, and play them back as an animation. You can store 20 original animations.

- 1** **[MENU]** ▶ **Data box** ▶ **My picture** ▶ **Original animation** ▶ **<New>**

- To change, select an original animation you have set.



- 2** **Select a frame position from <1st> to <20th>.** ▶ **Select a folder** ▶ **Select a still image.**

- To release the stored still image, select "Release this".

- 3** **Repeat step 2** ▶ **[Finish]**

Function Menu of the Original Animation List

Function menu	Operation/Explanation
Edit title	▶ Enter a title. • You can enter up to 9 full-pitch/18 half-pitch characters.
Org. animation	Go to step 2 on page 280.
Display picture	You can play back the original animation.
Set display	See page 274.
Picture info	See page 274.
Release animation	▶ YES

Function Menu while Playing Back Original Animation

Function menu	Operation/Explanation
Set display	See page 274.
Display size	See page 277.
Retry	You can play back the original animation again.

Information

- If you delete a still image stored in an original animation, the original animation which contains the still image is released.

<i-motion Player>

Playing Back Moving Images/ i-motion Movies

You can play back moving images saved to the FOMA phone or the microSD memory card.

- You can play back the sound of moving images from a commercial Bluetooth device. (See page 352)

- 1** **[MENU]** ▶ **Data box** ▶ **motion** ▶ **Select a folder** ▶ **Select a file.**



- Each time you press **[MENU]** from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 302 for the Function menu on the Folder List.
- See page 162 when you select "Search by i-mode".
- The following images are displayed when you cannot display the preview images:



Cannot be played back



No preview images



Playback restrictions have expired, and the like.



Incomplete download

- When you select a folder or i-motion movie from another function, some folders or i-motion movies may not be displayed depending on the function. You may be able to confirm the i-motion movie by pressing **[Play]** while selecting an i-motion movie.
- Depending on the i-motion movie, you can play back by selecting a chapter set for the i-motion movie. (See page 282)

■ Operations when playing back moving image

● See page 282 for when you operate from the Function menu.

Operation	Key operation
Quick View	(See page 283)
Mute	<ul style="list-style-type: none"> ● or adjust the sound volume to play back sound
Pause**1	<ul style="list-style-type: none"> ● to resume
Play back frame by frame**2	during pause <ul style="list-style-type: none"> ● Each time of pressing proceeds frame by frame.
Sound volume adjustment	or <ul style="list-style-type: none"> ● Press and hold to adjust the sound volume sequentially. ● Setting from Level 0 (Silent) through 6 is available.
Display next file or chapter**3	
Display previous file or chapter**3	**4
Search (fast forward)**2	Press and hold .
Search (fast rewind)**2	Press and hold .
Change vertical disp./horizontal disp./full disp.	(Wide) <ul style="list-style-type: none"> ● Each time of pressing switches display format.
Remaster	<ul style="list-style-type: none"> ● Each time of pressing switches between "ON" and "OFF".
Listening	<ul style="list-style-type: none"> ● Each time of pressing switches in order of "OFF" → "Surround" → "Natur1" → "Natur2".
Equalizer	<ul style="list-style-type: none"> ● Each time of pressing switches in order of "Normal" → "S-XBS1" → "S-XBS2" → "Train".

**1 You cannot operate this for a streaming type of i-motion movie.

**2 You cannot operate this for a streaming type of i-motion movie, or when you are playing back an i-motion movie while obtaining it. Further, you might not be able to operate this depending on the i-motion movie.

**3 Moving images having no chapters are switched in the order on the Moving Image List. This operation is available when you play back from the Moving Image List. Moving images having chapters are switched in the order that the chapters are stored.

**4 When three seconds have elapsed after starting playback, this operation returns the position to the beginning of the file. (A moving image having chapters returns to the top of the chapter.)

■ Specifications for moving image playback

File format	MP4, ASF	
Coding system	MP4 file	Image: MPEG4, H.263, H.264 Audio: AMR, AAC, AAC+ (HE-AAC), Enhanced aacPlus
	ASF file	Image: MPEG4 Audio: G.726
Pixels	MPEG4: Files of VGA (640 x 480) size or smaller	
	H.263: Files of Sub-QCIF (128 x 96) or QCIF (176 x 144) size only	
	H.264: Files of QVGA (240 x 320) size or smaller	
Extension	sdv, 3gp, mp4, asf	

● Even when the file format is supported, you might not be able to play back some files.

■ When you select "Position memory" from the Moving Image Folder List

The display for selecting Position Memory appears. When you select "Marker to resume" or "Position memory 1/2", the moving image is played back from the stored position.

Marker to resume	This is stored automatically when a call comes in, an alarm operates, or the battery level goes flat during playback of a moving image, or when you terminate the i-motion player during playback.
Position memory	You can store in any optional position in a moving image, and create up to two position memories. (See page 283)

- To delete "Position memory", press (**FUNC**) and select "Delete". You cannot delete the "Marker to resume".
- When the moving image with a position memory has been deleted or moved to another folder, you cannot play it back.

Information

- While searching (fast forward or fast rewind) a moving image or playing it back frame by frame, it does not sound. You can search (fast forward or fast rewind) while pausing or playing back the moving image (including slow and quick view).
- If you receive mail or a Message R/F when playing back an i-motion movie, the video or sound might be interrupted.

Function Menu of the Moving Image List

Function menu	Operation/Explanation
Edit	See page 284.
Edit title	See page 274.
Set (Ring tone)	You can set a moving image for a ring tone. ▶ Ring tone ▶ Select an incoming type ▶ (Finish) ● The set item is indicated by “★”.
Set (Stand-by display)	You can set a moving image to Stand-by display. ▶ Stand-by display ▶ YES ▶ (Finish)
Set (Wake-up display)	You can set a moving image to Wake-up display. ▶ Wake-up display ▶ YES ▶ (Finish)
motion info	You can display the i-motion movie title, file name and others.
Attach to mail	You can compose an i-motion mail message with the file attached. Go to step 2 on page 172. ● You can compose it also by pressing ().
Send Ir data	See page 305.
transmission	See page 306.
Copy to microSD	See page 296.
Copy to phone	See page 297.
Move to microSD	See page 298.
Move to phone	See page 298.
Copy	See page 275.
Move	See page 275.
Add desktop icon	See page 114.
Edit file name	See page 275.
File restriction	See page 275.
Reset title	You can reset the title to the default. ▶ YES
Delete this	See page 275.
Delete all	See page 276.
Multiple-choice	See page 276.
Memory info	You can display the used memory space (estimate).
Sort	See page 276.

Function menu	Operation/Explanation
Listing	You can change the displayed contents for Moving Image List. You can select whether the title or file name is displayed in the microSD Memory Card List. ▶ Select a display format. Title . . . The titles or file names are listed. Title + Image The title or file name, and image are displayed at a time. The displayed image is the first frame of moving image. Title/File name You can select whether to display the title or file name. ● In the case of the microSD Memory Card List, “Title” is displayed as “Name”, and “Title + Image” is displayed as “Name + Image”. ● You can switch the lists also by pressing (Change) from the Moving Image List.

Information

<Set	● You cannot set the i-motion movie whose acquired source is “” as a ring tone. ● See “ motion info” to check whether the i-motion movie can be set for a ring tone or receiving display.
<Attach to mail>	● When the file size is larger than 2 Mbytes, the confirmation display appears asking whether to cut it out to the mail size. Select “YES” to cut out the i-motion movie from the beginning to the about 2-Mbyte point. ● You may not be able to compose i-mode mail depending on the i-motion movie. ● Depending on the i-motion movie, its file size may become larger or smaller. ● You cannot attach an i-motion movie in excess of 2 Mbytes to mail from the Edit motion display. See “Trim for mail” for how to cut out the i-motion movie for attaching to i-motion mail.

Function Menu during Pause/at the End of Playback

Function menu	Operation/Explanation
Normal play	The moving image is played back at the normal speed.
Chapter list	You can display the list of chapters stored in the moving image and select a chapter to be played back. ▶ Select a chapter to be played back.
Slow	The moving image is played back at half the normal speed. ● To cancel Slow playback, press (), or perform “Normal play”.

Function menu	Operation/Explanation
Quick View (1.25x)	The moving image is played back at the speed 1.25 times the normal speed. <ul style="list-style-type: none"> ● Press to play back the moving image at twice the normal speed. Press to play back at the normal speed.
Quick View (2x)	The moving image is played back at twice the normal speed. <ul style="list-style-type: none"> ● To cancel Quick View, press or perform "Normal play".
Stop	You can end playback.
Position to play	You can set the start point for playing back the moving image. <ul style="list-style-type: none"> ▶ Use to move the cursor position of the time bar and press (Set). ● To cancel, press (CLR).
Sound effect (Remaster)	You can bring the sound from an earphone or Bluetooth device to the original sound by complementing high-pitch range lost at data compression. <ul style="list-style-type: none"> ▶ Remaster ▶ ON or OFF
Sound effect (Listening)	You can set sound effect for listening. <ul style="list-style-type: none"> ▶ Listening ▶ Select an item. Surround . . . Makes the sound natural and stereophonic. Natur 1/2 . . . Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste. OFF Sets Listening to "OFF". ● "Natur 1/2" is effective for the sound from an earphone or Bluetooth device.
Sound effect (Equalizer)	You can change the quality of sound from an earphone or Bluetooth device. <ul style="list-style-type: none"> ▶ Equalizer ▶ Select an item. Normal . . . Reproduces normal sound quality. S-XBS1 . . . Enhances bass sound. S-XBS2 . . . Enhances bass sound more deeply than S-XBS1. Train Minimizes abnormal sound that causes sound leakage.
Position memory	You can store a position memory in the moving image. Store it at the desired position in pause state. <ul style="list-style-type: none"> ▶ Position memory1 or Position memory2
Edit motion	See page 284.
Attach to mail	See page 282. <ul style="list-style-type: none"> ● You can compose an i-mode mail message also by pressing from the end of playback display.
Set motion	See page 282.
 motion info	See page 282.
Send Ir data	See page 305.

Function menu	Operation/Explanation
 transmission	See page 306.
Copy to phone	See page 297.
Add desktop icon	See page 114.
Display size	You can set the display whether to display a moving image in the original size (Actual size) or to fit to the display size. <ul style="list-style-type: none"> ▶ Actual size or Fit in display ● Even if you set to "Actual size", the moving image in excess of the display size is reduced to the display size. Also, when the moving image is QCIF (176 x 144) size or smaller, it is doubled at both lengthwise and sidewise to be displayed.
Change to full	You can change the display format of moving images. Each time of selecting the item switches in order of playback on the vertical display → playback on the horizontal display fitted to the display size → playback on the enlarged full size display.

Information

<Chapter list>

- When restrictions on chapter forward are applied, you cannot select chapters after the one you are currently playing back. When restrictions on chapter rewind are applied, you cannot select chapters before the one you are currently playing back.

<Slow>

- No sound is output during slow playback.
- You cannot slow-play the following i-motion movie:
 - A streaming type of i-motion movie
 - An i-motion movie being played back while obtaining data
 - An i-motion movie played back from the Stand-by display

<Quick View>

- You cannot execute Quick View for some i-motion movies.
- You cannot execute Quick View for the following i-motion movies:
 - A streaming type of i-motion movie
 - An i-motion movie being played back while obtaining data
 - An i-motion movie played back from the Stand-by display
- i-motion movies are not played back in stereo sound during Quick View.
- It may be hard to hear sound during Quick View.

<Position to play>

- You might not be able to select the position to play depending on the moving image/i-motion movie.

<Sound effect>

- Even if an earphone or Bluetooth device is not connected, the respective setting contents are shown on the display.
- When audio format of the i-motion movie is AMR or G.726, sound effect might be unavailable.

<Position memory>

- You might not be able to store the position memory depending on the moving image/i-motion movie.

Information**<Display size>**

- Depending on the image size, the image might be displayed with the right or bottom side cut off.

<Change to full>

- The moving image of QCIF (176 x 144) size or smaller is not played back in full display.
- Depending on the image size, the image might be displayed with the right or bottom side cut off.

Using Playlist

You can store moving images in a playlist, and continuously play them back in the order you like. You can create up to five playlists, and can store up to 30 moving images per playlist.

Store Playlist

- 1** **[MENU]** ▶ **Data box** ▶ **i-motion** ▶ **Playlist**
▶ **Select Playlist 1 through 5.**



- 2** **Select <1st> through <30th>**
▶ **Select a folder** ▶ **Select a moving image.**

- 3** **Repeat step 2** ▶ **[Finish]**
 - To release a stored moving image, press **[FUNC]** and select "DEL one from list". Select "DEL all from list", then you can release all the stored moving images.
 - To change the order of stored moving images, press **[FUNC]** and select "Order to play", and select a moving image whose position to be changed. Then, select the destination position to change the order.

Information

- You cannot store partially saved i-motion movies to the playlist.

Play Back Playlist

- 1** **Playlist List**
▶ **Highlight a playlist and press [Play].**

Function Menu of the Playlist List

Function menu	Operation/Explanation
Play	See page 284.
Edit playlist	You can edit the playlist. Go to step 2 of "Store Playlist" on page 284.
Release playlist	You can release all moving images stored in the playlist. ▶ YES

Function menu	Operation/Explanation
Edit playlist name	You can edit the name of the playlist. ▶ Edit a playlist name. • You can enter up to 10 full-pitch/20 half-pitch characters.

<Edit i-motion>**Editing Moving Images/i-motion Movies**

You can edit the moving image/i-motion movie. The moving image/i-motion movie you edited is saved to the folder containing the source moving image/i-motion movie.

- 1** **Moving Image List/During pause/At the end of playback** ▶ **[FUNC]** ▶ **Edit i-motion**
• Use **[Up]** or **[Down]** to adjust the sound volume.



Edit i-motion display


- 2** **[FUNC]** ▶ **Edit the moving image/i-motion movie.**
See page 285 for how to operate.
- 3** **Press [Save].**
• Not to save the edited moving image/i-motion movie, press **[CLR]** or **[Cancel]**; then select "YES".
- 4** **YES**
The edited moving image/i-motion movie is saved.
• See page 162 for when i-motion movies are stored to the maximum.

Operations during editing an i-motion movie or demo playback











Operation	Key operation
Pause	[Pause] • Press [Play] to resume play back.
Fast forward	Press and hold [Fast Forward] .
Fast rewind	Press and hold [Fast Rewind] .
Forward frame by frame	During pause, press [Next Frame] .
Rewind frame by frame	During pause, press [Previous Frame] .
Sound volume adjustment	[Up] or [Down]





- You cannot do some operations depending on the state.

Information

- You cannot edit the following moving images/i-motion movies:
 - The files with "File restriction" and "Replay restriction" obtained from sites or i-mode mail
 - The files other than VGA (640 x 480), HVGA Wide (640 x 352), QVGA (320 x 240), QCIF (176 x 144) and Sub-QCIF (128 x 96) size
 - The files saved to the microSD memory card
- You might not be able to edit some i-motion movies.
- The image quality may deteriorate or the file size may become larger or smaller by executing "Edit  motion".
- When a call comes in, the battery level goes flat, or you close the FOMA phone while editing, the confirmation display appears asking whether to save the fixed edited contents.

Function Menu of the Edit motion Display

Function menu	Operation/Explanation
Trim  motion	<p>You can cut out a certain range from an i-motion movie.</p> <p>▶ Use  to display a start frame and press  (Start).</p> <p>The start frame is set and the moving image/i-motion movie is played back.</p> <p>▶ Press  (II) at the position you want to cut out.</p> <p>Playing back the moving image/i-motion movie pauses.</p> <p>▶ Use  to display an end frame and press  (End).</p> <p>The cut out range is played back.</p> <ul style="list-style-type: none"> • When the file size reaches about 10 Mbytes, the end frame is automatically set. <p>▶ Press  (Set).</p> <ul style="list-style-type: none"> • Press  (Play) to play back a demo to check the edited moving image/i-motion movie.
Trim for picture	<p>You can cut out the still image and save it.</p> <p>▶ Use  to display a frame and press  (Set) ▶ YES ▶ Select a folder.</p> <ul style="list-style-type: none"> • See page 162 for when images are stored to the maximum.


Function menu	Operation/Explanation
Trim for mail	<p>You can cut out the moving image/i-motion movie to the size attachable to i-mode mail.</p> <p>▶ Mail size (S) or Mail size</p> <p>Mail size (S) . . . Cut out to the size of about 500 Kbytes or less.</p> <p>Mail size Cut out to the size of about 2,048 Kbytes or less.</p> <p>▶ Use  to display a start frame and press  (Start).</p> <p>The moving image/i-motion movie is played back. When the file size reaches about 500 Kbytes, about 2,048 Kbytes, or at the end of playback, the playback stops automatically.</p> <p>▶  (Set)</p> <ul style="list-style-type: none"> • Press  (Play) to play back a demo and you can check the edited moving image/i-motion movie.

Attach to mail See page 282.



File restriction See page 275.

Information

<Trim motion>

- If you execute "Trim  motion", the file size may become larger.

Function Menu while i-motion Movie is Edited or Demo Playback is in Pause

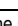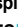Function menu	Operation/Explanation
Normal play	You can play back at the normal speed.
Slow	You can play back at half the normal speed.
Quick View (1.25x)	You can play back at the speed 1.25 times the normal speed.
Quick View (2x)	You can play back at twice the normal speed.
Starting point	You can set the start frame for "Trim  motion" and "Trim for mail".
Ending point	You can set the end frame for "Trim  motion".
Determine	You can set the frame for "Trim for picture".
Stop	You can stop playing back.


Playing Back Video

You can play back the video saved to the microSD memory card.

Video is played back in the horizontal display in Horizontal Open Style. You can switch the style during playback.

- You can play back the sound of video from a commercial Bluetooth device. (See page 352)

1 ► Data box ► 1Seg ► Video ► microSD
► Select a file.

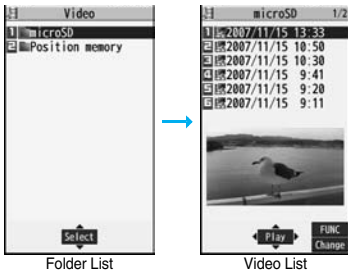

- The image on the right is displayed when you cannot display a preview image:



Operations when playing video

- See page 287 for when you operate from the Function menu.

Operation	Key operation
Quick View	(See page 283)
Mute	 • or adjust the sound volume to play back sound
Pause	 • to resume
Play back frame by frame	during pause • Each time of pressing proceeds frame by frame.
Sound volume adjustment	or • Press and hold to adjust the sound volume sequentially. • Setting from Level 0 (Silent) through 25 is available.
Displays next video ^{※1}	
Displays previous video ^{※1}	^{※2}
30 second skip (fast forward) ^{※3}	(for at least one second) or during playback or pause
30 second skip (fast rewind) ^{※3}	(for at least one second) or during playback or pause
Program title	 • Icons and the time bar appear in the horizontal display.

Operation	Key operation
Caption	while displaying program title • Each time of pressing in the horizontal display switches ON/OFF of "Icon" and Caption. • Each time of pressing in the horizontal display switches also the position of the time bar regardless of whether Caption is displayed or not.
Vertical/Horizontal display	^{※4} ^{※5} • Each time of pressing switches the display directions.

- ※1 Displayed in the stored order on the Video List.
- ※2 When playback time is over 10 seconds, it reaches the beginning of the file being played back.
- ※3 You cannot operate a file of playback time of under 30 seconds.
- ※4 You cannot operate this in Horizontal Open Style.
- ※5 Close the FOMA phone to return to the vertical display. In Horizontal Open Style, the display automatically appears in the horizontal display and the vertical display does not appear.

When you select "Position memory" from the Video Folder List

The display for selecting Position Memory appears. When you select "Marker to resume" or "Position memory 1/2", the video is played back from the stored position.

Marker to resume	This is stored automatically when a call comes in, an alarm operates, or the battery level goes flat during playback of a video, or when you terminate the Video player during playback.
Position memory	You can store in any optional position in a video, and create up to two position memories. (See page 287)

- To delete "Position memory", press and select "Delete". You cannot delete the "Marker to resume".
- When the video with a position memory has been deleted or moved to another folder, you cannot play it back.

Information

- No sound is output during playback of a video frame by frame.
- No sound is output during 30-second skipping. Further, captions are not displayed.
- The displayed time bar is for reference.
- The part of video that was not correctly recorded owing to the bad radio wave conditions is not displayed and skipped to the position where it can be displayed correctly. In that case, the video might not be played back for a few seconds, or might be distorted. Further, the time bar might not be displayed correctly.
- If you try to play back a video with a low battery level, the battery alert tone sounds, and the confirmation display appears asking whether to play it back. When the battery becomes short during playback, the playback pauses, the battery alert tone sounds, and the confirmation display appears asking whether to finish the playback.

Information

- If you edit (divide) the video using a mobile phone or personal computer that supports the edit function, you might not be able to correctly play it back on the FOMA phone.

Function Menu of the Video List

Function menu	Operation/Explanation
Edit title	▶ Enter a title. ● You can enter up to 18 full-pitch/36 half-pitch characters.
File property	You can display the channel name, the program name, etc.
Add desktop icon	See page 114.
Reset title	You can reset the title to the default. ▶ YES
Delete this	See page 275.
Delete selected	You can select multiple videos and delete. ▶ Put a check mark for videos to be deleted ▶ (Finish) ▶ YES
Delete all	See page 276.
Memory info	You can display the used memory space (estimate).
Listing	You can change the displayed contents for Video List. ▶ Select a display format. Title The title names are displayed. Title + image The title name and image are displayed at a time. The displayed image is the first frame of video.

Information

- <Listing>
- The video that was not recorded correctly owing to the bad radio wave conditions might not be played back.

Function Menu during Pause/at the End of Playback

Function menu	Operation/Explanation
Normal play	The video is played at the normal speed.
Slow	The video is played back at half the normal speed. ● To cancel Slow play, perform "Normal play".
Quick View (1.25x)	The video is played back at the speed 1.25 times the normal speed. (See page 283)
Quick View (2x)	The video is played back at twice the normal speed. (See page 283)
Stop	You can end playback.

Function menu	Operation/Explanation
Position to play	You can set the start point for playing the video. ▶ Use to move the cursor position of the time bar and press (Set). ● To cancel, press (CLR).
Position memory	You can store a position memory in the video. Store it at the desired position in pause state. ▶ Position memory1 or Position memory2
File property	See page 287.
Add desktop icon	See page 114.
Icon	You can select whether to display Icons during playback in the horizontal display. ▶ ON or OFF ● Even if you set "Icon" to "OFF" and "Receiving display" to "Operation preferred", the icon such as , or appears when you receive a mail message or Message R/F.
Image quality	You can change the image quality. ▶ Select an item. Standard The average image quality Sports The image quality suitable for sports programs Cinema The image quality suitable for movies Dynamic The dynamic image quality by accentuation
Sound (Auto volume)	You can set whether to turn up the sound volume so that it will be more audible. ▶ Sound effect ▶ Auto volume ▶ ON or OFF
Sound (Remaster)	You can bring the sound from an earphone or Bluetooth device to the original sound by complementing high-pitch range lost at data compression. ▶ Sound effect ▶ Remaster ▶ ON or OFF
Sound (Listening)	You can set sound effect for listening. ▶ Sound effect ▶ Listening ▶ Select an item. Surround . . . Makes the sound natural and stereophonic. Natur 1/2 . . . Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste. OFF Sets Listening to "OFF". ● "Natur 1/2" is effective for the sound from an earphone or Bluetooth device.

Function menu	Operation/Explanation		
Sound (Equalizer)	<p>You can change the quality of sound from an earphone or Bluetooth device.</p> <p>▶ Sound effect ▶ Equalizer</p> <p>▶ Select an item.</p> <p>Normal Reproduces normal sound quality.</p> <p>Dynamic Makes the sound dynamic by accentuation.</p> <p>Voice Makes conversation audible.</p> <p>Train Minimizes abnormal sound that causes sound leakage.</p>		
Sound (Main/sub sound)	<p>▶ Main/sub sound</p> <p>▶ Main sound, Sub sound, or Main+sub sound</p>		
<table border="1"> <tr> <td>At player start-up</td> </tr> <tr> <td>Main sound</td> </tr> </table>	At player start-up	Main sound	
At player start-up			
Main sound			
Caption	<p>You can set whether to display the caption.</p> <p>▶ ON or OFF</p>		

Information

<Slow>

● No sound is output during slow playback.

<Position to play>

- You might not be able to select the position to play depending on the videos.
- When you have selected the part that was not recorded correctly owing to bad radio wave conditions, the start point moves to the part where you can play back the video correctly.

<Chara-den>

What is Chara-den?

Chara-den is an animation character representing yourself. You can send it as your image during videophone calls. You can use the Chara-den player to play back and shoot them.


- You can delete the pre-installed Chara-den image. You can re-download it from the "P-SQUARE" site (see page 163). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 39) are set to it.
- Some Chara-den images synchronize their movement with your voice spoken into the microphone.

<Chara-den Player>

Displaying/Operating Chara-den Images

You can display stored Chara-den images. You can press keys to make the Chara-den image move.

- 1 **[MENU] ▶ Data box ▶ Chara-den**
▶ **Select a Chara-den image.**

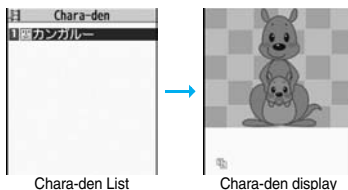

■ Key assignment of operating Chara-den

You can use the Action List to check the actions that you can operate.

- The number of actions you can operate differs depending on the Chara-den image.

Key operation	Details
<p>[1] ~ [9]</p> <p>[#] [1] ~ [#] [9] ※1 ※2</p> <p>(Whole Action Mode)</p>	Whole action: expresses an action with whole of the body.
<p>[1] [1] ~ [9] [9] ※1</p> <p>(Parts Action Mode)</p>	Parts action: expresses an action with a part of the body.
[O]	Suspends the running action.
[MENU]	Displays the Action List.
[Envelope]	Makes a videophone call.
[Camera]	Records Chara-den images.

※1 You cannot operate for the pre-installed Chara-den image.

※2 Press [#] again to cancel the first [#].

Function Menu of the Chara-den List

Function menu	Operation/Explanation
Chara-den call	See page 69.
Substitute image	See page 69.
Rec. Chara-den	See page 289.
Edit title	<p>▶ Enter a title.</p> <ul style="list-style-type: none"> ● You can enter up to 18 full-pitch/36 half-pitch characters.
File property	You can display the title, file name, and others of the Chara-den image.
Memory info	You can display the used memory space (estimate).

Function menu	Operation/Explanation
Add desktop icon	See page 114.
Delete	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES <ul style="list-style-type: none"> This operation deletes the pre-installed Chara-den image as well.
Multiple-choice	You can select and delete multiple Chara-den images. <ul style="list-style-type: none"> ▶ Put a check mark for Chara-den images to be deleted ▶ (FUNC) ▶ Delete ▶ YES
Display size	You can set whether to display the Chara-den image in "Actual size" or "Fit in display". <ul style="list-style-type: none"> ▶ Actual size or Fit in display
Reset title	You can reset the title to the default one. <ul style="list-style-type: none"> ▶ YES

Information

<File property>

● "Rec. file restriction" denotes whether to restrict the operation such as attaching still images/moving images created by "Rec. Chara-den" to mail, saving them to microSD memory card, or editing them.

<Delete> <Delete all> <Multiple-choice>

● If you delete a Chara-den image set for the substitute image except "カンガルー (kangaroo)", "カンガルー (kangaroo)" is set for the substitute image. If you delete "カンガルー (kangaroo)", a pre-installed substitute image will be sent.

Function Menu of the Chara-den Display

Function menu	Operation/Explanation
Chara-den call	See page 69.
Substitute image	See page 69.
Rec. Chara-den	See page 289.
Add desktop icon	See page 114.
Action list	You can display the list for actions that you can operate. <ul style="list-style-type: none"> ● Highlight an action, and press (Select) to run the action; and press (Detail) to check the details of the action. ● You can display the Action List also by pressing (MENU).
Change action	You can switch the action modes between Whole <div style="border: 1px solid black; padding: 2px; display: inline-block;">At Chara-den display</div> Action Mode () and Parts Action Mode (). <div style="border: 1px solid black; padding: 2px; display: inline-block;">Whole Action Mode</div>
File property	See page 288.
Display size	See page 289.

<Record Chara-den>

Recording Chara-den Images

You can shoot the displayed Chara-den image as a still image or moving image.

- 1 (MENU) ▶ Data box ▶ Chara-den
 - ▶ Select a Chara-den image to be shot



- You can select "Rec. Chara-den" also from the Function menu of the Chara-den List or Chara-den display for recording.



Chara-den Recording display

Shoot Still Images

- 1 Display on the Chara-den Recording display and press (Record).

A still image of the displayed Chara-den image is shot.

- While is displayed, press (Photo) to display .

- 2 Press (Save).

The still image you have shot is saved to the "Camera" folder.

Record Moving Images

- 1 Display on the Chara-den Recording display and press (Record).

Recording of the displayed Chara-den image starts.

- While is displayed, press (Movie) to display .

- 2 (Stop) ▶ (Save)

The recorded moving image is saved to the "Camera" folder.

Information

- The image size is fixed to QCIF (176 x 144).
- In Manner Mode or when "Phone" or "Mail" of "Ring volume" is set to "Silent", the recording confirmation tone, the recording start tone, and the recording end tone do not sound.
- When "Recording type" is set to "Video + voice", the voice is recorded as well. [When a Flat-plug Earphone/Microphone with Switch (option) is connected, the voice is recorded via the Earphone/Microphone.]

Function Menu of the Chara-den Recording Display

Function menu	Operation/Explanation
Switch Chara-den	Select a Chara-den image to be displayed.
Substitute image	See page 69.
Action list	See page 289.
Change action	See page 289.
Display size	See page 289.
Recording size	You can set the size of the image for recording and saving a still Chara-den image. You can set only in Photo Mode. ▶ QCIF (176 x 144) or Small (117 x 96)
Recording type	You can set whether to record video or voice for recording and saving moving Chara-den images. You can set only in Movie Mode. ▶ Video + voice or Video
Recording quality	You can set the image quality for saving a moving Chara-den image. You can set only in Movie Mode. ▶ Normal, Prefer image quality, or Prefer motion speed

Information

<Switch Chara-den>

- If you switch Chara-den images, the action mode switches to Whole Action Mode.

<Melody Player>

Playing Back Melodies

1 (MENU) ▶ Data box ▶ Melody


- Each time you press (MENU) from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 302 for the Function menu on the Folder List.



2 Select a folder ▶ Select a melody.



Melody List

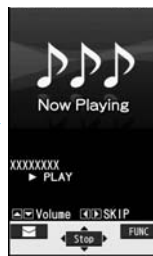

Melody Playback display

- When selecting folders and melodies by another function, some folders or melodies may not be displayed depending on the function. Some melodies may be played back for confirmation while being selected, or you may at times be able to play back the melody by pressing (Play).
- See page 162 when you select "Search by i-mode".

Play Back Playlist

You can repeatedly play back the melodies selected by "Edit playlist".

1 (MENU) ▶ Data box ▶ Melody ▶ Playlist

■ Operation while playing back a melody

Operation	Key operation
Halt	(Stop), (Home), (Power) through (Search), (Cancel), (#), (Mail), (Camera), (Phone)
Sound volume adjustment	(Volume Up) or (Volume Down) ※1 • Press and hold to adjust the sound volume sequentially. • Setting from Level 0 (Silent) through 6 is available.
Replay next file※2	(Next)
Replay previous file※2	(Previous)




※1 If the FOMA phone is closed, playback is halted.





※2 Valid when played back from the Melody List.

Information


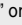
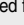
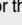
 

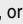
 
 
- The melodies are played back at the volume set for "Phone" of "Ring volume". When "Phone" of "Ring volume" is set to "Silent" or "Step", they are played back at "Level 2". However, the melody played back when it is selected does not sound.
- Even if you change the volume while playing back, the volume set for "Phone" of "Ring volume" returns when you exit the Melody player.

Function Menu of the Melody List

Function menu	Operation/Explanation
Edit title	<p>▶ Edit the title.</p> <ul style="list-style-type: none"> ● For a file in the FOMA phone, you can enter up to 31 full-pitch/63 half-pitch characters. ● For a file on the microSD memory card, you can enter up to 18 full-pitch/36 half-pitch characters.
Edit file name	<p>▶ Edit the file name.</p> <ul style="list-style-type: none"> ● You can enter up to 36 half-pitch alphanumeric characters (except extension).
Play melody	See page 290.
Set as ring tone	<p>▶ Select an incoming type.</p> <ul style="list-style-type: none"> ● “★” indicates the set item.
File restriction	<p>You can set the file restrictions on the selected melody.</p> <p>▶ File unrestricted or File restricted</p> <ul style="list-style-type: none"> ● See page 146 for the file restrictions.
Add desktop icon	See page 114.
Attach to mail	<p>You can compose an i-mode mail message with the selected melody attached.</p> <p>Go to step 2 on page 172.</p> <ul style="list-style-type: none"> ● You can compose it also by pressing  ().
Send Ir data transmission	See page 305.
Copy to microSD	See page 306.
Melody info	See page 296.
Melody info	You can display the melody title, file name and others.
Copy to phone	See page 297.
Move to phone	See page 298.
Copy	<p>You can copy the melody from a folder on the microSD memory card to another folder on the microSD memory card.</p> <p>▶ Select a destination folder.</p>
Memory info	You can display the used memory space (estimate).
Reset title	<p>You can reset the title to the default.</p> <p>▶ YES</p>
Delete (Delete this)	<p>You can delete the melody stored in the FOMA phone.</p> <p>▶ Delete this ▶ YES</p>
Delete (Delete selected)	<p>You can select and delete multiple melodies stored in the FOMA phone.</p> <p>▶ Delete selected ▶ Put a check mark for melodies to be deleted ▶  (Finish) ▶ YES</p>

Function menu	Operation/Explanation
Delete (Delete all)	<p>You can delete all melodies stored in the selected folder in the FOMA phone.</p> <p>▶ Delete all</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Delete this	<p>You can delete the melody stored on the microSD memory card.</p> <p>▶ YES</p>
Delete all	<p>You can delete all melodies stored in the selected folder on the microSD memory card.</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Multiple-choice	<p>You can select multiple melodies stored on the microSD memory card and operate them.</p> <p>▶ Put a check mark for the melodies to be operated ▶  (FUNC) ▶ Select an item.</p> <p>Delete See “Delete this” on page 291.</p> <p>Copy See page 291.</p> <p>Move See page 291.</p> <p>Select all You can select all melodies.</p> <p>Release all You can release all selected melodies.</p>
Sort	<p>You can change displayed order.</p> <p>▶ Select an order.</p> <ul style="list-style-type: none"> ● You cannot sort the files on the microSD memory card.
Move	<p>You can move the melody to another folder.</p> <p>▶ Select a destination folder</p> <p>▶ Put a check mark for melodies to be moved ▶  (Finish) ▶ YES</p> <ul style="list-style-type: none"> ● Press  () to display folders at the second-tier level or lower, if they exist. Press (CLR) to return to the upper level. ● For the microSD memory card, you do not need to put a check mark for the melodies.
Move to microSD	See page 298.

Information

- <Edit file name>**
- When the icon of the acquired source is “” or “” and the icon such as “” or “” is displayed for that melody, you cannot change the file name.
 - You cannot use some characters such as symbols for a file name.
- <File restriction>**
- You can set the file restrictions only to the melody with the acquired source icon “”.
 - When the melody file exceeds 100 Kbytes by applying the restriction, you cannot set the file restrictions.
- <Attach to mail>**
- You cannot attach the melody with “” or “”, or the melody in excess of 100 Kbytes, whose acquired source icon is “” or “”.

Information

<Melody info>

- You may not be able to attach to i-mode mail even when the file restriction in the melody information is "File unrestricted".

<Delete>

- When a melody set for another function is deleted, the setting returns to the default. (When the melody is set for an alarm tone of "Schedule", "ToDo", or "Book program", or for "Alarm", it switches to "Clock Alarm Tone".)
- You cannot delete the pre-installed melody.

Function Menu of the Melody Playback Display

Function menu	Operation/Explanation
Set as ring tone	See page 291.
Add desktop icon	See page 114.
Attach to mail	See page 291.
Melody info	See page 291.
Copy to microSD	See page 296.
Copy to phone	See page 297.
Play all/ Play portion	You can temporarily switch the play start positions of the melody.


<Kisekai Tool>

Checking Kisekai Tool

You can check the details on Kisekai Tool files.


- You can delete the pre-installed Kisekai Tool file. You can re-download it from the "P-SQUARE" site (see page 163). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 39) are set to it.

- 1 **[MENU]** ▶ **Data box** ▶ **Kisekai Tool**
▶ **Select a Kisekai Tool file** ▶ **Select an item.**

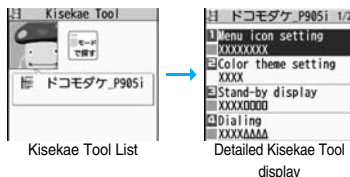


Selected image, ring tone or illumination are played back as a demo. If you select a color theme, the display is displayed in selected color theme.

- Each time you press **[MENU]** from the Kisekai Tool List, you can switch between the List in the FOMA phone and the microSD memory card. In the Folder List on the microSD memory card, you can display the Kisekai Tool List by selecting a folder.
- See page 302 for the Function menu on the Folder List.
- The image on the right is displayed when you cannot display a preview image.



Cannot be played back




No preview images
- When you select a Chara-den image in a Kisekai Tool file, you can press **[FUNC]** to use the Function menu of the Chara-den display (see page 289).
- See page 162 when you select "Search by i-mode".

Information

- You cannot set Kisekai Tool files on the microSD memory card at a time.
- Clock display cannot be played back as a demo.

Function Menu while Kisekai Tool File is Displayed

Function menu	Operation/Explanation
Edit title	See page 274.
Preview	You can preview the Kisekai Tool file.
Set at one time	You can set the Kisekai Tool file at one time. (See page 109) <ul style="list-style-type: none"> ● You can set the Kisekai Tool file at one time also by pressing [M].
File info	You can display the title, file name, and others of the Kisekai Tool file.
Move to microSD	See page 298.

Function menu	Operation/Explanation
Move to phone	See page 298.
Reset title	You can reset the title to the default. ▶ YES
Move	See page 275.
Delete this	See page 275.
Delete all	You can delete all files in the folder. ▶ Enter your Terminal Security Code ▶ YES
Multiple-choice	See page 276.
Memory info	You can check the used memory space (estimate)/number of stored items.
Sort	See page 276.
Listing	You can change the displayed contents for the Kisekai Tool List. ▶ Title or Image ● You can switch the lists also by pressing  (Change) from the Kisekai Tool List.

About microSD Memory Card

You need to obtain a microSD memory card separately to use the functions related to the microSD memory card. The microSD memory card is available at mass retailers for home electric appliances etc.

- FOMA P905i supports a commercial microSD memory card of up to 2 Gbytes and microSDHC memory card of up to 4 Gbytes (As of October 2007).

For the latest operation check information such as the memory capacity and manufacturers of microSD memory cards, access the following sites (Japanese only). Note that the microSD memory cards other than published in the sites might not correctly work.

- From i-mode to P-SQUARE (As of October 2007)

☎ Menu → メニュー / 検索 (Menu/Search)
→ ケータイ電話メーカー (Mobile Phone
Maker) → P-SQUARE


- From personal computers
<http://panasonic.jp/mobile/>



QR code for
accessing the site

Note that the published information is the result obtained

from the operation check, which does not necessarily guarantee all performances of those microSD memory cards.

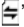- During processing of the card,  is displayed. During processing of the card, never remove the microSD memory card, or turn off the FOMA phone. Check that processing of the card does not go on before turning off the FOMA phone, and then remove the microSD memory card.
- Folders and files on the microSD memory card are recognized up to about 65,500 items.
- When the FOMA phone or microSD memory card has many data files, it may take longer to access the files.
- The microSD memory card has an operating life. If you use the microSD memory card for a long time, you may not be able to write new data on it, or the card may be disabled.

- With the FOMA phone, you can save the downloaded still images, i-motion movies, melodies, Kisekai Tool files, Chaku-uta Full® music files, and i-oppli programs with the file restrictions to the microSD memory card. You cannot save the files if the Information Providers do not permit.

Information

- You may not be able to use the microSD memory card formatted using a personal computer and other devices. Be sure to use the microSD memory card formatted with FOMA P905i.
- Note that formatting deletes all the contents on the microSD memory card.
- If you read/write data from/on a microSD memory card using a device other than this FOMA phone, the microSD memory card might become unusable depending on the device or operations.
- When you insert a microSD memory card which has been used with another device such as a personal computer into FOMA P905i, new files and folders to be used in FOMA P905i are created.


Inserting/Removing microSD Memory Card

■ Inserting

1 Remove the back cover. (See page 41)

2 Face the front surface of the microSD memory card upwards and insert the memory card.

- Push it until it clicks.

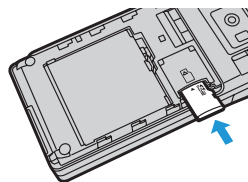


3 Attach the back cover. (See page 41)


■ Removing

1 Remove the back cover and push the microSD memory card until it stops.

- Pushing the microSD memory card inside pops up the card.

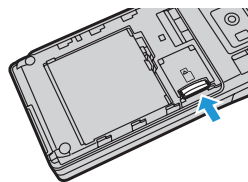

2 Remove the microSD memory card.

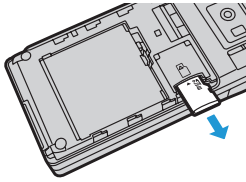

Icons on the display

The following icons appear when you insert the microSD memory card:

- : You can save and read data.
- : The microSD memory card is write-protected. You cannot save data, and execute "Check microSD" and "microSD format".
- : You cannot use the microSD memory card. Remove the microSD memory card and then insert it again. If "" is still displayed, execute "Check microSD" or "microSD format".

Information

- Do not insert or remove the microSD memory card with the FOMA phone turned on. It may damage the microSD memory card or its data.
- Note that microSD memory card may pop out when you insert or remove it.
- Check the direction of the microSD memory card, and then insert or remove it straight. If you obliquely insert the microSD memory card into the slot, the microSD memory card may be damaged.
- It may take long to initially read or write data after inserting the microSD memory card.

<SD-PIM>

Displaying Data Items on microSD Memory Card

You can display the Phonebook entries, schedule events, ToDo items, mail messages, text memos, and bookmarks (i-mode/Full Browser) stored on the microSD memory card.

- You can operate in the same way on the detailed Phonebook display, detailed Mail display, and detailed Bookmarks display as when you display data stored in your FOMA phone.

See page 92 for detailed operations of the Phonebook.

See page 194 for detailed operations of mail.


See page 157 for detailed operations of bookmarks.

1 LifeKit ▶ SD-PIM ▶ Select a category.



- If you select "Schedule", ToDo items are also displayed.

2 Select a file ▶ Select a data item.

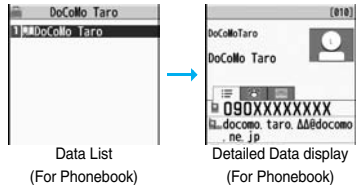

Function Menu of the Category List/microSD File Display/Data List/Detailed Data Display

Function menu	Operation/Explanation
Edit title	▶ Enter a title. • You can enter up to 15 full-pitch/31 half-pitch characters.
Add to phone	See page 296.
Overwrite to phone	See page 296.
Add one to phone	See page 295.
Add all to phone	See page 295.
Overwr. all to ph.	See page 296.
Copy to microSD	See page 295.

Function menu	Operation/Explanation
Delete this	▶ YES
Delete all	You can delete all files in the currently displayed category. ▶ Enter your Terminal Security Code ▶ YES
microSD info	See page 299.
Property	You can display the detailed data display.
microSD format	See page 299.
Check microSD	See page 299.

Information

<Delete this> <Delete all>

- When the access right is set for read only by devices such as a personal computer, the confirmation display appears asking whether to delete the data.

Copy Data Items in the FOMA Phone to the microSD Memory Card

You can copy the Phonebook entries, schedule events, ToDo items, mail messages, text memos, and bookmarks stored in the FOMA phone to the microSD memory card.

Copy one to microSD

You can copy a single file from the FOMA phone onto the microSD memory card. A copied data item is saved as a single file.


You cannot copy the secret code stored in a Phonebook entry.

- 1 Display for a data item to be copied
▶  (FUNC) ▶ Copy to microSD ▶ YES

Copy all to microSD

You can copy the data items of the category selected on the Category List or of the category displayed on the microSD File display from the FOMA phone to the microSD memory card. The copied data items are all saved as a single file.

You cannot copy secret codes or voice dial entries stored in the Phonebook entries.

- 1 Category List/microSD File display
▶  (FUNC) ▶ Copy to microSD
▶ Enter your Terminal Security Code ▶ YES

- To copy scheduled events, select "Schedule", "ToDo", or "All" (Schedule and ToDo).
- To copy bookmarks, select "i-mode", "Full Browser", or "All" (i-mode and Full Browser).

Information

- When you copy a file stored as secret data, the file is copied as an ordinary file.
- When you copy all files, the files stored as secret data are also copied.
- When you copy all the Phonebook entries, the information from the PushTalk Phonebook entry and the contents of "Own number" are also copied.
- For copying mail, some files attached to mail may be deleted depending on file format.
- When you copy mail containing links to start an i-appli program, the information about starting the i-appli program in that mail is deleted.
- During copying, the FOMA phone is placed in the same status as it is out of the service area.


Copy Data Items on the microSD Memory Card to the FOMA Phone

You can copy the Phonebook entries, schedule events, ToDo items, mail messages, text memos, and bookmarks (i-mode/Full Browser) stored on the microSD memory card to the FOMA phone.

- See page 301 for the number of data items that can be saved to the microSD memory card.

Add one to phone



You can copy the data item selected on the Data List or displayed on the detailed Data display to the FOMA phone.

- 1 Data List/Detailed Data display ▶  (FUNC)
▶ Add one to phone or Copy to phone ▶ YES

Add all to phone

You can copy all data items in all files of the category selected on the Category List or all data items in all files displayed on the microSD File display to the FOMA phone.

The copied data items are added to the FOMA phone.

- 1 Category List ▶  (FUNC) ▶ Add all to phone
▶ Enter your Terminal Security Code ▶ YES
or
microSD File display ▶  (FUNC)
▶ Add all to phone
▶ Enter your Terminal Security Code ▶ YES

Add to phone

You can copy all data items in a file selected on the microSD File display or all data items displayed on the Data List to the FOMA phone.

The copied data items are added to the FOMA phone.

1 microSD File display (FUNC)

- ▶ Add to phone
- ▶ Enter your Terminal Security Code ▶ YES

or

- Data List  (FUNC) ▶ Add all to phone
- ▶ Enter your Terminal Security Code ▶ YES

Overwrite all to phone

You can copy all data items in all files of the category selected on the Category List or all data items in all files displayed on the microSD File display to the FOMA phone.

Note that the data items already stored in the FOMA phone are overwritten and deleted.

1 Category List (FUNC) ▶ Overwr. all to ph.

- ▶ Enter your Terminal Security Code ▶ YES
- ▶ YES

or

microSD File display (FUNC)

- ▶ Overwr. all to ph.
- ▶ Enter your Terminal Security Code ▶ YES
- ▶ YES

Overwrite to phone

You can copy all data items in a file selected on the microSD File display or all data items displayed on the Data List to the FOMA phone.

Note that the data items already stored in the FOMA phone are overwritten and deleted.

1 microSD File display (FUNC)

- ▶ Overwrite to phone
- ▶ Enter your Terminal Security Code ▶ YES
- ▶ YES

or

- Data List  (FUNC) ▶ Overwr. all to ph.
- ▶ Enter your Terminal Security Code ▶ YES
- ▶ YES

Information

- If the memory capacity of the FOMA phone runs short during copying, copying is suspended midway; however, the data already copied is stored.

Information

- When you perform “Add one to phone” for a Phonebook entry, any group is not set if the group number or group name stored in the microSD file differs from that stored on the FOMA phone.
- The copied Phonebook entries are also stored in the PushTalk Phonebook. When you overwrite the Phonebook entries, the contents of the PushTalk group are also overwritten.
 - When you execute “Add one to phone”, the confirmation display appears asking whether to store it. Select “YES” (select a phone number when multiple phone numbers are stored) to store the entry also to the PushTalk Phonebook.
- When you overwrite the Phonebook entries, the voice dial entries are deleted.
- If you try to overwrite the Phonebook entries, the confirmation display appears asking whether to set the first data as “Own number”.
- When you copy a mail message with the Outbox or Inbox full, the oldest unprotected mail message is overwritten (the read one for the Inbox).
- When you execute “Add all to phone”, you cannot copy the following data:
 - Schedule events set for the same date and time
 - Bookmarks of the same URL
- If the number of files stored on the microSD memory card increases, it may take long to read or write data.
- During copying, the FOMA phone is placed in the same status as it is out of the service area.

Copying Still Images, Moving Images, etc.

Copy Files from the FOMA Phone to the microSD Memory Card

File name and the destination folder are as follows:

Still image (DCF standard)	The destination folder in the “Picture” folder PXXXXXXX (X denotes a numeral.)
Still image (Non DCF standard)	The destination folder in the “Image Box” folder STILXXXX (X denotes a numeral.)
Still image (Decomail-pictograph)	The destination folder in the “Decomail-pictograph” folder DIMGXXXX (X denotes a numeral.)
Moving image (With video)	The destination folder in the “Movie” folder MOLXXX (X denotes an alpha-numeral.)
Moving image (With only sound)	The destination folder in the “Other contents” folder MMFXXXX (X denotes a numeral.)
Melody	The destination folder RINGXXXX (X denotes a numeral.)
PDF file	The destination folder PDFCXXX (X denotes a numeral.)

- When you copy or move a file between the FOMA phone and the microSD memory card, its file format might change.

1 Still Image List/Still image in play/Moving Image List/Melody List/Melody during playback/PDF File List (FUNC)

▶ Copy to microSD

- When you have selected "Multiple-choice" to select the files to be copied, you can copy multiple files at a time.

Information

- You can copy JPEG, GIF, SWF, MP4, MFi, SMF and PDF files in the "i-mode" folder, "Camera" folder, "Decomail-picture" folder, "Decomail-pictograph" folder and a user folder.
- You can copy multiple JPEG, GIF, SWF and MP4 files at a time but not others.
- When the files in the destination folder are stored to the maximum, a new folder is automatically created and files are saved to that folder.
For the files other than still images, the message "Storage is changed to XXXXXXX" (XXXXXXX denotes a folder name) appears when copying is completed.
- You cannot copy the following files:
 - Files that you shot Chara-den models whose "Rec. file restriction" is "File restricted"
 - Files whose output from the FOMA phone is prohibited
 - Pre-installed Decomail-pictures
 - Files set with playback restrictions
 - Partially saved i-motion movies or Chaku-uta Full® music files
 - PDF files partially downloaded page by page
- If you copy the file to the microSD memory card, the image quality may deteriorate or the file size becomes larger.

Copy Files from the microSD Memory Card to the FOMA Phone

You can copy files from the microSD memory card to the i-mode folder in the FOMA phone.

(Decomail-pictographs are copied to the "お気に入り (Favorite)" folder in the "Decomail-pictograph" folder.)

1 Still Image List/Still image in play/Moving Image List/Moving image in pause/Moving image at the end of playback/Melody List/Melody during playback/PDF File List, which is on the microSD memory card

▶ (FUNC) ▶ Copy to phone

- When you have selected "Multiple-choice" to select the files to be copied, you can copy multiple files at a time.
- See page 162 when images/i-motion movies/Melodies/PDF files are stored to the maximum.

Information

- Do not pull out the microSD memory card during copying.

Information




- You can copy JPEG, GIF, SWF, MP4, MFi, SMF and PDF files. However, you cannot copy a melody and a SWF file in excess of 100 Kbytes.
- You can copy multiple JPEG, GIF, SWF and MP4 files only at a time. However, you cannot copy multiple moving images of ASF format, VGA (640 x 480) and HVGA Wide (640 x 352) size, or in excess of 10 Mbytes.
- When you copy moving images, the images are cut out, converted or shrunk; therefore the image quality may deteriorate or the file size may become larger or smaller. However, a moving image whose video codec is H.264 is copied without being converted or shrunk.
- When you copy VGA (640 x 480) size or HVGA Wide (640 x 352) size of a moving image, the image is converted into QVGA (320 x 240) size. When you copy VGA (640 x 480) size or HVGA Wide (640 x 352) size of a moving image, ASF file, or the file in excess of 10 Mbytes, it might take a longer time.
- You cannot copy the moving image in excess of 10 Mbytes in the following cases:
 - When the video codec is H.264
 - When the audio codec is AAC, AAC+ (HE-AAC), or Enhanced aacPlus
 - When the bit rate of the moving image is in excess of the restriction
 - When searching (fast forward or fast rewind) is disabled
 - When the moving image size is other than VGA (640 x 480), HVGA Wide (640 x 352), QVGA (320 x 240), QCIF (176 x 144) or Sub-QCIF (128 x 96)Some moving images cannot be copied in the conditions other than the above.
- Playing back a copied ASF file may take a longer time.
- The file after copying takes the title of the one set on the microSD memory card. When no title is set on the microSD memory card or the default title is unknown, the file name will be the title.

Moving Copyrighted Files


Move Files in the FOMA Phone to the microSD Memory Card

You can move the copyrighted file obtained from a site to the microSD memory card after encoding. The moved file is then saved to the destination folder in the "Movable contents" folder (the specified destination folder for Chaku-uta Full® music files).

Some files you moved to the microSD memory card can be operated only with the UIM you used when moving, and some files can be operated with the UIM and the phone you used when moving.



1 Still image List/Moving image List/Melody List/Kisekai Tool List/Chaku-uta Full® Music List  **FUNC**  **Move to microSD**  **OK**

Information

- You can move a file to the microSD memory card only when the acquired source icon is .
- Partially saved i-motion movies, Chaku-uta Full® music files and Kisekai Tool files cannot be moved to the microSD memory card.
- The setting is released if you move a file set for another function.

Move Files from the microSD Memory Card to the FOMA Phone

You can move a copyrighted file from the microSD memory card to the "i-mode" folder in the FOMA phone.

1 Still Image List/Moving Image List/Melody List/Kisekai Tool List/Chaku-uta Full® Music List, which is on the microSD memory card  **FUNC**  **Move to phone**

Information

- You can move a copyrighted file (with file restriction) to the FOMA phone only if its property for "Moved to phone" is "Available" or "Available (Same model)". In addition, you cannot move a file of "Available (Same model)" to the FOMA phone other than P905i. See "Picture info", "i-motion info", "Melody info", "File info", or "Music info" to check whether the file is "Available", "Unavailable" or "Available (Same model)".
- The setting is released if you move a file set for another function.
- The moved files are saved to the "i-mode" folder. However, the Kisekai Tool files are saved to the "Kisekai Tool" folder and Chaku-uta Full® music files are saved to the "Initial folder" in Data Box.

Move i-appli in the FOMA Phone to the microSD Memory Card

Some i-appli programs can be moved to and saved to the microSD memory card.

You cannot start the i-appli program moved to the microSD memory card. Move it back to your FOMA phone to start. However, some i-appli programs can be operated only with the UIM you used when moving, and some other programs can be operated only with the UIM and the phone you used when moving.

1 Software List/IC Card List  **FUNC**  **Move to microSD**  **YES**

Move i-appli from the microSD Memory Card to the FOMA Phone

You can move an i-appli program from the microSD memory card to the FOMA phone.

1 Software List  **FUNC**  **Move to phone**  **YES**

<SD Other Files>

Managing Unsupported Files

You can save a variety of files which are not supported by the FOMA phone, or files in BMP and PNG format obtained by Full Browser, to the microSD memory card. (See page 185 and page 262)



You can attach the saved files to an i-mode mail message to send, or check them on a personal computer.

1  **MENU**  **Data box**  **SD other files**  **Select a folder.**



- See page 302 for the Function menu on the Folder List.
- You cannot display the contents of the file using the FOMA phone.

Function Menu of the SD Other File List

Function menu	Operation/Explanation
Edit title	See page 274.
File info	You can display the name and type of files.
Attach to mail	You can compose an i-mode mail message with the file attached. Go to step 2 on page 172. • You can compose it also by pressing   .

Function menu	Operation/Explanation
Copy	See page 275.
Move	See page 275.
Delete this	See page 275.
Delete all	See page 276.
Multiple-choice	See page 276.
Memory info	You can display the used memory space (estimate).

<microSD Format>


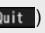
Formatting microSD Memory Card

When you use the microSD memory card for the first time, you need to format (initialize) it. Be sure to use FOMA P905i for formatting. The microSD memory card formatted using other devices such as personal computers may not be used properly.

Note that formatting deletes all the contents on the microSD memory card.

- 1  LifeKit   
 - ▶ microSD format
 - ▶ Enter your Terminal Security Code ▶ YES

Information

- Do not remove the microSD memory card during formatting. Malfunction of the FOMA phone or microSD memory card could result.
- If you press  (Quit) or , or receive a voice call or videophone call while formatting the microSD memory card, formatting is canceled. Format it again.
- Files that have been saved to the microSD memory card whose formatting is suspended becomes unfixed.
- You cannot format the incompatible memory card.
- Required folders are automatically created when you save data to the microSD memory card after formatting.



<Check microSD>

Checking microSD Memory Card

You can check and recover the microSD memory card.

- 1  LifeKit   
 - ▶ Check microSD ▶ YES

Information

- Do not remove the microSD memory card during Check microSD. Malfunction of the FOMA phone or microSD memory card could result.
- You cannot execute Check microSD for the unformatted microSD memory card or incompatible memory card.
- When you execute Check microSD, the microSD memory card may not be recovered correctly, the data existed before executing Check microSD may be deleted, or the microSD memory card itself may be initialized depending on the condition of the microSD memory card.
- If you press  (Quit) or , or receive a voice call or videophone call during Check microSD, Check microSD is canceled.
- If you cancel Check microSD midway, data not recovered may remain. In this case, try Check microSD again.
- It may take long to complete Check microSD depending on the data volume stored on the microSD memory card.

<microSD Info>

Displaying Capacity of microSD Memory Card

You can display the used and unused memory space (estimate) on the microSD memory card.

- See page 276 for checking the used memory space for the still images or moving images.

- 1  LifeKit   
 - ▶ microSD info

Information

- As the microSD memory card contains the system files for the card, the memory space is smaller than that described on the microSD memory card even if it contains no data.

Using a microSD Memory Card with a Personal Computer

By connecting the microSD memory card to the microSD memory card adapter, you can use the microSD memory card on a personal computer which supports SD memory card.

The microSD memory card adapter is available at mass retailers for home electric appliances etc.

For installing the microSD memory card adapter, refer to the instruction manual for the microSD memory card adapter.


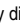
Use FOMA Phone as microSD Reader/Writer

With a microSD memory card inserted, connect the FOMA phone to a personal computer; then you can read the data from or write the data onto the microSD memory card.

The following equipment is required:




- Connector Cable:
FOMA USB Cable with Charge Function 01 (option)
- Personal Computer:
Personal computer having the USB port (Universal Serial Bus Specification Rev 1.1 compliant) that can be connected with the FOMA USB Cable with Charge Function 01 (option)
- Compatible Operating Systems:
Windows 2000, Windows XP, Windows Vista (Japanese version in each)

1 Settings > Other settings > USB mode setting > microSD mode

- When you set to “microSD mode”, “” appears on the Stand-by display.
- To save WMA files from your personal computer to the microSD memory card, set to “MTP mode”. When you set to “MTP mode”, “” appears on the Stand-by display.
- To use the FOMA phone for packet communication, 64K data communication, data sending/receiving (OBEX), and for calls with USB Hands-free compatible device, set mode to “Communication mode”.

2 Connect the FOMA phone to a personal computer using the FOMA USB Cable with Charge Function 01 (option).

The personal computer recognizes the microSD memory card.

- “” appears on the desktop, and “” appears on the Stand-by display. Also, “” is displayed while the microSD memory card is in the FOMA phone.


Information

- If the FOMA phone and personal computer are not correctly connected, or the remaining battery level of the FOMA phone shows very low or goes flat, you cannot send or receive data. In addition, you may lose data.
- While data is being read or written, do not pull the FOMA USB Cable with Charge Function 01 off. Not only you cannot send or receive data, but also you may lose the data.
- While data is being read or written, you cannot set this function. Further, make sure that you do not “Reset settings” or “Initialize” during reading/writing. Malfunction of the microSD memory card could result.
- You cannot read from/write to a personal computer while reading from/writing to the FOMA phone, and vice versa.
- To use the DoCoMo keitai datalink, set it to “Communication mode”.

Folder Configuration on microSD Memory Card

The FOMA phone creates the following folders on the microSD memory card to save data files. To write files to the microSD memory card from a personal computer, you need to write the following configuration and file names.

- DCIM (Folder for DCF standard still images)
 - △△△△_PANA
 - P△△△zzzz.### (Extension is JPG, or GIF.)
- MISC [DPOF folder (This folder is created automatically when “DPOF Setting” on page 311 is set.)]
- SD_VIDEO (Folder for moving images)
 - PRL◇◇◇◇ (Folder for movies)
 - MOL◇◇◇◇.### (Extension is 3GP, SDV, ASF, or MP4.)
 - MGR_INFO (Folder for video management information)
 - PRG◇◇◇◇ (Folder for videos)
- PRIVATE
 - DOCOMO
 - STILL (Folder for non-DCF standard still images)
 - SUD□□□
 - STILzzzz.### (Extension is JPG, GIF, or SWF.)
 - DOCUMENT (Folder for PDF files)
 - PUD□□□
 - PDFC□□□.PDF
 - RINGER (Folder for melodies)
 - RUD□□□
 - RINGzzzz.### (Extension is MLD, or SMF.)
 - TORUCA (Folder for ToruCa files)
 - TRC□□□
 - TORUC□□□.TRC
 - MMFILE [Folder for non-SD-VIDEO standard moving images (include music data of AAC format)]
 - MUD□□□
 - MMFzzzz.### (Extension is 3GP, SDV, ASF, or MP4.)
 - WM_SYSTEM
 - WM
 - DECOIMG (Folder for Decomail-pictographs)
 - DUD□□□
 - DIMGzzzz.### (Extension is JPG, or GIF.)
 - OTHER (Folder for SD other files)
 - LOUD□□□
 - OTHER□□□.### (Extension is up to three-digit half-pitch alphabets that the FOMA phone cannot recognize.)
 - MOVIE (Folder for PC movie files)
 - MVUD□□□
 - MOVIE□□□.### (Extension is WMV, WMA, WAV, WAX, ASF, or ASX.)
 - TABLE (Folder for additional information)

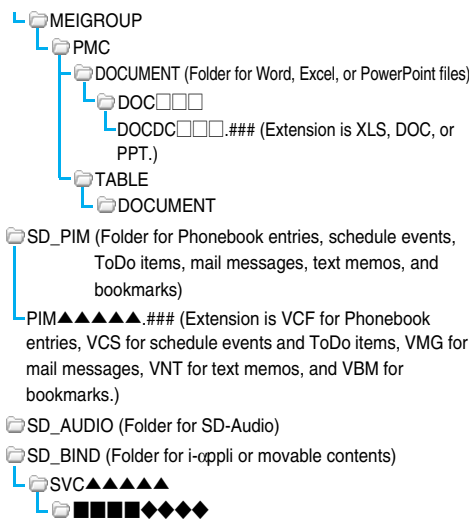

△△△: A three-digit half-pitch numeral of 100 through 999 (Use the same numerals for the folder name, and for the file name saved to that folder.)

□□□: A three-digit half-pitch numeral of 001 through 999

◇◇◇: A hexadecimal numeral* of 001 through FFF using half-pitch numerals of 0 through 9 and half-pitch alphabets of A through F

▲▲▲▲: A five-digit half-pitch numeral of 00001 through 65535

■ and ◆: Hexadecimal numerals* of 0001 through FFFF using half-pitch numerals of 0 through 9 and half-pitch alphabets of A through F

zzzz: A four-digit half-pitch numeral of 0001 through 9999

###: Extension

*: The hexadecimal numerals are carried up every 16, unlike the way the decimal numerals are carried up every 10.

● Using a personal computer, you can write a file name of 64 (including extension) free characters, regardless of full-pitch/half-pitch, for a PDF file, SD other file, PC movie file, Word file, Excel file and PowerPoint file. However, the file name might change when the file is copied or moved in the FOMA phone.

■ **The number of files and time that can be saved to the microSD memory card**

File	Folder	Number of savable files/time
Still image (DCF standard)	DCIM	See page 136.
Still image (Non-DCF standard)	STILL	Approx. 58,390
Moving image (Movie)	SD_VIDEO	See page 138.
Moving image (Video)	SD_VIDEO	99
Moving image (Non-SD-VIDEO standard)	MMFILE	Approx. 58,390
PC movie file	MOVIE	Approx. 58,390
Melody	RINGER	Approx. 58,390
PDF file	DOCUMENT	Approx. 58,390


File	Folder	Number of savable files/time
Word, Excel, PowerPoint file	PMC	Approx. 58,390
SD-Audio	SD_AUDIO	999
ToruCa file	TORUCA	Approx. 58,390
Decomail-pictograph	DECOIMG	Approx. 58,390
SD other file	OTHER	Approx. 58,390
Phonebook entry, schedule event, ToDo item, mail message, text memo, bookmark	SD_PIM	Approx. 58,390
i-oppli	SD_BIND	Approx. 58,390
Movable contents	SD_BIND	

- The number of savable files and time for saving vary depending on the memory capacity of the microSD memory card. You can save more files by adding folders to save files to.
- You might not be able to save the maximum number of files depending on the file size.
- You can check used and unused space of the microSD memory card by "microSD info".

Information


- Folder and file names may be displayed in lowercase characters depending on the personal computer you use.
- When the personal computer is set not to display extensions and hidden folders, change the setting and then operate. For how to change the setting, refer to the instruction manual for your personal computer or Help.
- Do not use the personal computer to delete or move the folders on the microSD memory card. The microSD memory card might not be read by FOMA P905.
- You cannot see the files in the "SD_AUDIO", "SD_BIND" and "PRG◇◇◇" folders on a personal computer, as they are encrypted.
- When you save data in the "PRG◇◇◇" folder by using a personal computer, you might not be able to delete the video using the FOMA phone.
- When you delete, overwrite, or write a file on a personal computer, ensure that you do not use the same file name you have once used. Even when you have deleted that file, use a different file name.
- On the FOMA phone, you might not be able to display or play back a data item which was saved to the microSD memory card from other devices. On other devices, you might not be able to display or play back a data item which was saved to the microSD memory card from the FOMA phone.
- To procure a microSD reader/writer or PC card read adapter, inquire respective manufacturers for the operation of microSD memory card beforehand.

Managing Folders

My picture, MUSIC,  motion, Melody, My documents, Kisekae Tool (SD), PC Movie, Document viewer, and SD other files in Data Box manage files in the respective folders.

- See page 327 for folder operations of MUSIC.
- Even when the files in the "Movable contents" folder are listed, the Function menu in the Folder List is displayed.

Function Menu of the Folder List

Function menu	Operation/Explanation
Add folder	<p>You can create a user folder.</p> <p>▶ Enter a folder name.</p> <ul style="list-style-type: none"> • You can enter up to 10 full-pitch/20 half-pitch characters in the FOMA phone. • You can enter up to 31 full-pitch/63 half-pitch characters on the microSD memory card. You can enter up to 10 full-pitch/20 half-pitch characters for a folder in the "Movable contents" folder.
Edit folder name	<p>You can edit the name of a user folder, or a folder in the "Decomail-pictograph" folder in the FOMA phone.</p> <p>▶ Enter a folder name.</p> <ul style="list-style-type: none"> • You can enter up to 10 full-pitch/20 half-pitch characters in the FOMA phone. • You can enter up to 31 full-pitch/63 half-pitch characters on the microSD memory card. You can enter up to 10 full-pitch/20 half-pitch characters for a folder in the "Movable contents" folder.
Delete folder	<p>You can delete a user folder and all files in the folder.</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Delete all image [My picture only]	<p>You can delete all the files in "My picture" and "Image" folder in "1Seg".</p> <p>▶ Enter your Terminal Security Code ▶ YES</p> <ul style="list-style-type: none"> • You cannot delete the pre-installed files. (However, Decomail-pictographs are deleted.) The files on the microSD memory card are not deleted, either.
Edit playlist [Melody only]	<p>You can select up to 10 melodies and program them in order as you like. This is displayed while you are selecting "Playlist".</p> <p>▶ Select a playing order from <1st> through <10th> ▶ Select a folder</p> <p>▶ Select a melody.</p> <ul style="list-style-type: none"> • To release a programmed melody, select "Release this". <p>▶ Repeat the operations and complete the playlist editing ▶  (Finish)</p>

Function menu	Operation/Explanation
Release playlist [Melody only]	<p>You can release all the programmed melodies from the playlist. This is displayed while you are selecting "Playlist".</p> <p>▶ YES</p>
Select storage	<p>You can set the destination folder for when you save the shot still/moving images or the melodies and PDF files obtained by downloading or data communication to the microSD memory card.</p> <p>▶ YES</p>

Information

<Add folder>

- You can add up to 20 folders in the FOMA phone.
- You cannot add folders on the microSD memory card in the following cases:
 - When the "Picture" folder contains 900 folders
 - When the "Image Box" folder contains 999 folders
 - When the "Decomail-pictograph" folder contains 999 folders
 - When the "Movie" folder contains 4,095 folders
 - When the "Melody" folder contains 999 folders
 - When the "Other contents" folder contains 999 folders
 - When the "My documents" folder contains 999 folders
 - When the "Document viewer" folder contains 999 folders
 - When the "Kisekae Tool" folder contains 999 folders
 - When the "SD other files" folder contains 999 folders

<Edit folder name>

- You cannot edit the folder name for "SD image", "SD Decomail-pictograph", "Other contents", "SD melody", "SD-PC Movie", and "SD others" folder.

<Delete folder> <Delete all image>

- Even if you delete the source still image of the attached image, you cannot delete the image attached to mail.
- You cannot delete the "SD image" folder in "Image Box", the "SD Decomail-pictograph" folder in "Decomail-pictograph", "Other contents", "SD melody", "SD-PC Movie", and "SD others" folder.
- You cannot delete the folder that contains incompatible files.
- When a melody set for another function is deleted, the setting returns to the default. (When the melody is set for an alarm tone of "Schedule", "ToDo" or "Book program", or for "Alarm", it switches to "Clock Alarm Tone".)

<Edit playlist>

- If you change or delete the file name, title, or contents of the melody stored in the playlist, all the melodies are released from the playlist.

Information

<Select storage>

- The following icons are displayed for the folder set as a destination folder:
 - “”... The folders in the “Picture” folder and “Movie” folder
 - “”... The folders in “My documents”, “Document viewer”, and “SD other files”
The folders in the “Decomail-pictograph” folder, “Image Box” folder, and “Melody” folder
 - “”... The folders in the “Movable contents” and “Kisekai Tool” folder
 - “”... The folders in the “Other contents” folder
- When you execute Check microSD, or create or edit a folder by using a personal computer, the destination folder on the microSD memory card might be changed. When the setting is changed, set the destination folder again.


About Infrared Data Exchange

The FOMA phone conforms to IrMC version 1.1.

You can exchange data files with the devices supporting the infrared data exchange function.

However, you cannot exchange some files depending on the other party's device.

- The distance for infrared data exchange should be within about 20 cm. Do not move the FOMA phone with the infrared data port pointed to the receiving end until data transfer ends.
- Hold the FOMA phone with your hands securely so that it does not move.
- If you expose the FOMA phone to direct sunlight or put it under fluorescent lights or near an infrared equipment, you may not be able to transmit infrared ray normally due to their influence.
- First set at the receiving end and begin sending data from the sending end within 30 seconds.
- During exchange, the FOMA phone is placed in the same state as it is out of the service area, so you cannot make/receive voice calls, videophone calls or PushTalk calls, use packet communication such as i-mode or mail, or do data communication.

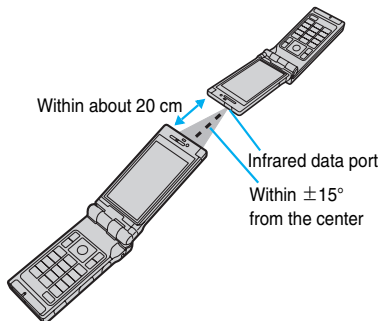

List of data files you can transfer

Transferable data	Transfer terms	One item	Multiple items	All items
Phonebook (Own number)		○	×	Up to 1,000 items
Schedule**1		○	×	Up to 1,000 items
ToDo		○	×	Up to 100 items
Received mail**2		○	×	Up to 2,500 items
Sent mail		○	×	Up to 1,000 items
Draft mail		○	×	Up to 20 items
Text memo		○	×	Up to 20 items
Melody**3, **4		○	×	×
Still image file**4, **5, **6		○	○	×
Moving image file**4, **7		○	○	×
PDF file**3, **4, **8		○	×	×
ToruCa file**4		○	○	Up to 495 items
Bookmark (i-mode/Full Browser)**9		○	×	Up to 100 items each for i-mode and Full Browser
LCS client information		○	×	Up to 5 items

○: Can be transferred ×: Cannot be transferred

- **1 You cannot send/receive holidays and anniversaries.
- **2 You can send/receive up to 30 Area Mail messages separately. (2,530 messages in total)
- **3 You cannot send/receive some files.
- **4 The file is sent/received after being converted to the vnt file.
- **5 Includes Flash movies.
- **6 You cannot send/receive original animations and still images recorded by One Seg.
- **7 You cannot send/receive ASF files and videos recorded by One Seg.
- **8 The i-mode bookmarks may be deleted.
- **9 When sending/receiving bookmarks, the folder-sort setting may not be reflected.

Storage location and order of received files

Data		Storage location/Order
Phone book (Own number)	receive one data	The phone number is stored to the lowest empty memory number in “010” through “999” in the Phonebook. If all memory numbers “010” through “999” are occupied, the phone number is stored to the lowest empty memory numbers in “000” through “009” (two-touch dial).
	receive all data	Stored in the same memory number as that of the sender.
Schedule	receive one data	Stored with the starting date/time of the schedule event.
	receive all data	Stored with the same date and time as those of the sender.

Data		Storage location/Order
ToDo	receive one data	Stored on the top in the ToDo list.
	receive all data	Stored in the same order as that of the sender.
Received mail	receive one data	Stored in the "Inbox" folder on the Inbox Folder List with the same date and time as that of the sender.
	receive all data	Stored in the same folder as that of the sender with the same date and time.
Sent mail	receive one data	Stored in the "Outbox" folder on the Outbox Folder List with the same date and time as that of the sender.
	receive all data	Stored in the same folder as that of the sender with the same date and time.
Draft mail	receive one data	Stored with the same date and time as that of the sender.
	receive all data	Stored with the same date and time as that of the sender.
Text Memo	receive one data	Stored in the first <Not recorded>.
	receive all data	Stored in the same order as that of the sender from the top of the list.
Melody	receive one data	Stored on the top in the "i-mode" folder in "Melody" inside "Data box".
Still Image file	receive one data/receive multiple data	Stored on the top in the "i-mode" folder in "My picture" inside "Data box".
Moving Image file	receive one data/receive multiple data	Stored on the top in the "i-mode" folder in "i-motion" inside "Data box".
PDF file	receive one data	Stored on the top in the "i-mode" folder in "My documents" inside "Data box".
ToruCa file	receive one data/receive multiple data	Stored on the top in the "ToruCa" folder.
	receive all data	Stored in the same folder as that of the sender in the same order.
Bookmark	receive one data	Stored on the top in the "Bookmark" folder each for i-mode and Full Browser.
	receive all data	Stored in the same folder as that of the sender in the same order.
LCS client information	receive one data	Stored in the first <Not stored>.
	receive all data	Stored in the same order as that of the sender from the top of the list.

Information

- You cannot send the following files:
 - Files whose output from the FOMA phone is prohibited
 - Partially saved files
 - Pre-installed Decomail-pictures
 - Phonebook entries and SMS messages on the UIM
- You cannot send the files on the microSD memory card. Copy or move to the FOMA phone and then send.
- You can send and receive up to 9 full-pitch/18 half-pitch characters for a title of a still image, moving image, or PDF file, or up to 31 full-pitch/63 half-pitch characters for a title of a melody.
- When you send a mail message, the file attached to the mail message is also sent. However some files cannot be sent depending on the file type.
- Depending on the mobile phone at the receiving end, subjects of i-mode mail messages cannot be received completely.
- The mail message with an attached file which has not been obtained, or the mail message containing the link information for starting an i-appli program is sent after the file or information is deleted.
- When the maximum number of storable received mail messages (see page 444) is exceeded, the messages are overwritten in the following order; messages in the "Trash box" folder → the oldest received message.
- When the maximum number of storable sent mail messages (see page 444) is exceeded, the oldest unprotected mail message in the Outbox folder is overwritten.
- When you send a ToruCa file (details) using infrared rays, the confirmation display appears asking whether to forward the file including the detailed information. In this case, select "YES" to send it with the detailed information, or select "NO" to send the ToruCa file as a file before obtaining the detailed information.
- The ToruCa file (details) that contains data whose output from the FOMA phone is prohibited is sent as a ToruCa file before obtaining the detailed information.
- You cannot receive Phonebook entries while Restrict Dialing is activated. At sending, you can send only the Phonebook entries set with Restrict Dialing and data of Own Number.
- It may take long to forward data or you might not be able to receive data depending on the data size.
- You cannot store a still image in excess of 2 Mbytes, moving image in excess of 10 Mbytes, melody in excess of 100 Kbytes, PDF file in excess of 2 Mbytes, ToruCa file in excess of 1 Kbyte, or ToruCa file (details) in excess of 100 Kbytes.
- If the FOMA USB Cable with Charge Function 01 (option) is connected to the FOMA phone, you may not be able to perform infrared data exchange.
- You cannot send files that are not supported by the device at the receiving end.

Sending/Receiving One or Multiple Data Files

You can send/receive the data files one by one using infrared rays.

You can send/receive multiple still images, moving images, and ToruCa files at a time.



■ Notes on sending/receiving

- In Secret Mode, you can send secret data as well. However, in Secret Data Only, you can send only the secret data.
- If you receive a Phonebook entry stored as secret data in “Secret mode” or “Secret data only”, the Phonebook entry is stored as an ordinary one.
- When sending a Phonebook entry, you cannot send the stored secret code and voice dial entry.

Send One or Multiple Data Files

1 Display for a data item to be sent

▶  (FUNC) ▶ Send Ir data

- To send a Phonebook entry, select “Send Ir data” from the Function menu and select “Send phonebook”.
- To send a mail message, ToruCa file or bookmark, select “Ir/  transmission” from the Function menu and select “Send Ir data”.
- To send multiple files, select the files you want to send by “Multiple-choice”. Press  (FUNC) to select “Send Ir data”.

2 YES

- To send multiple files, select “YES” by a factor of selected number of files, and send them.

Receive One or Multiple Data Files



1 ▶ LifeKit ▶ Receive Ir data

- You can paste the Ir data receiving function to the desktop. (See page 114)

2 Receive ▶ YES

- When you receive Phonebook entries, the confirmation display appears asking whether to store them also in the PushTalk Phonebook.
- The confirmation display appears asking whether to continue receiving after receiving one data file. When you received multiple files, select “YES”.

Information

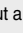- When you receive an instruction for starting a software program, and you have already downloaded a compatible software program, that software program starts. If you have not put a check mark for “Ir  appli To” of “Set  appli To”, the software program does not start up automatically.

Sending/Receiving All Data Files

You can send/receive the following data files all at once using infrared rays: the Phonebook entries, schedule events, ToDo items, text memos, bookmarks, mail messages, ToruCa files, and LCS client information. To send all data files, enter a session number (any four-digit number). The receiving end needs to enter the same session number.

■ Notes on sending/receiving all data files


- Receiving all data files deletes all data you have stored including the secret data and protected data, and the received data overwrites the existing data. The data you have stored in “Secret mode” is deleted as well. Check that no important data is stored before receiving all data files.
- If you send all Phonebook entries, the “Own number” data is also sent. All the data of “Own number” at the receiving end is overwritten except the own number. Mail address is also overwritten by sender’s address, so change it at the receiving end.
- If you send all Phonebook entries, PushTalk Phonebook entries are also sent. Information of voice dial entries are not sent.
- The Phonebook entries stored as secret data are sent not only during Secret Mode but also any other time. The sent secret data is stored as secret data at the receiving end, too.
- The group names in the Phonebook you have received are stored, so the data set in “Group setting” is also overwritten.
- Note that the schedule events at the receiving end are all deleted if you send all ToDo items to the phone that does not support ToDo.
- You can send/receive the protected sent/received mail messages.

Send All Data Files

1 Display for a data item to be sent

▶  (FUNC) ▶ Send all Ir data

▶ Enter your Terminal Security Code.

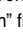- To send the Phonebook entries, select “Send Ir data” from the Function menu and select “Send all phonebook”.
- To send mail messages, ToruCa files or bookmarks, select “Ir/  transmission” from the Function menu and select “Send all Ir data”.

2 Enter the session number ▶ YES

- Enter any four-digit number as the session number.

Receive All Data Files



1 LifeKit > Receive Ir data

- You can paste the Ir data receiving function to the desktop. (See page 114)

2 Receive all > Enter your Terminal Security Code > Enter the same session number as that entered at the sending end > YES > YES

The stored data is deleted, then receiving starts.

Information

- When you receive Phonebook entries in which still images are stored or mail to which files are attached, and the multiple same still images or files are found, only one image or file is stored.


Using Infrared Remote-controller Function

You can use the FOMA phone as a TV remote-controller by starting the i-appli program.

- To use remote-control devices, you may need to download the software program for those devices. [The pre-installed “Gガイド番組表リモコン (G Guide Program List Remote-controller)” supports the infrared remote-controller function.] The key operation for the remote-controller differs depending on the software program.
- This function does not work with some devices.
- Communication might be affected by compatible devices and the ambient light.
- You cannot use the infrared remote-controller during Self Mode.

Infrared Remote-controller

- Turn the FOMA phone's Infrared data port to the front of a device to be operated. You can operate within about 4 meters away from the device.
- The radiation angle of the infrared rays is within $\pm 15^\circ$ from the center.

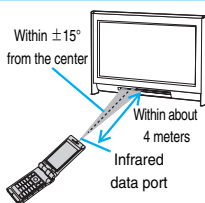

<Forwarding Image>



Communication Setting

For when you forward Phonebook entries using infrared rays, iC communication, SD-PIM, or DoCoMo keitai datalink, you can specify whether to forward the stored still images together.


1 Phonebook > Phonebook settings > Forwarding image > ON or OFF

<iC Transmission>

About iC Communication

iC communication is the function that enables you to send/receive data files to/from another FOMA phone using the FeliCa reader/writer function. You can send/receive data files by overlapping the FeliCa “” mark of your FOMA phone with that of another FOMA phone supporting the iC communication function.

- The type of files and conditions of forwarding are the same as those of infrared data exchange. (See page 303)
However, you cannot send multiple files at a time.
- You cannot execute iC communication while “iC card lock” is activated.
- You might have difficulty in sending or receiving files depending on the destination FOMA phone. In that case, move a FeliCa mark “” close to or away from the other FeliCa mark or move each side up, down, left, or right.

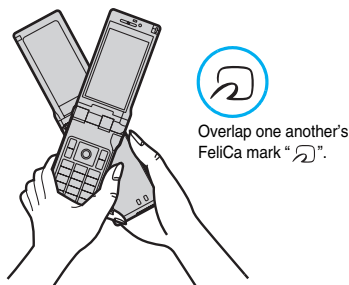

Sending/Receiving One Data File

You can send/receive the data files one by one using iC communication.

- See “Notes on sending/receiving” on page 305 as well.

Send One Data File

- You cannot use this function during charging.

1 Display of the data to be sent > (FUNC) > transmission

- To send a Phonebook entry, select “ transmission” from the Function menu and select “Send phonebook”.
- To send a mail message, ToruCa file or bookmark, select “Ir/ transmission” from the Function menu and select “ transmission”.

2 YES

Receive One Data File

1 Overlap the FeliCa mark “” at the sending end with that of your FOMA phone while the Stand-by display is shown > YES

- When you receive a Phonebook entry, the confirmation display appears asking whether to store it also in the PushTalk Phonebook.

Sending/Receiving All Data Files

You can send/receive the following data files all at once using iC communication: Phonebook entries, schedule events, ToDo items, text memos, bookmarks, mail messages, ToruCa files, and LCS client information. To send all data files, enter a session number (any four-digits number). The receiving end needs to enter the same session number.

- See “Notes on sending/receiving all data files” on page 305 as well.

Send All Data Files

- You cannot use this function during charging.

1 Display of the data to be sent

- ▶ (FUNC) ▶ All transmission
- ▶ Enter your Terminal Security Code.

- To send the Phonebook entries, select “ transmission” from the Function menu and select “Send all phonebook”.
- To send mail messages, ToruCa files or bookmarks, select “lr/ transmission” from the Function menu and select “All transmission”.

2 Enter the session number ▶ YES

- Enter any four-digits number as the session number.

Receive All Data Files

1 Overlap the FeliCa mark “” at the sending end with that of your FOMA phone while the Stand-by display is shown.

2 YES ▶ Enter your Terminal Security Code

- ▶ Enter the same session number as that entered at the sending end.

The stored data is deleted, and then receiving starts.

Information

- When you receive Phonebook entries in which still images are stored, and the multiple same still images are found, only one image is stored.

Displaying PDF Files

You can display the PDF files saved by downloading from sites.

- 1 ▶ Data box ▶ My documents
 - ▶ Select a folder ▶ Select a PDF file.



- Each time you press from the Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- See page 302 for the Function menu on the Folder List.
- If you cannot display a preview image, any of the following images are displayed:



Cannot be displayed



Does not support (PDF file displayed as “ ” or “ ”)



Does not support (PDF file displayed as “ ”)

- See page 160 when the PDF file is set with a password.

Operations when displaying a PDF file

- See page 308 for when you operate from the Function menu.

Operation	Key operation	Operation	Key operation
Upper scroll		Next page	
Lower scroll		Previous page	
Left scroll		Search	(5)
Right scroll		Search next	(6)
Bring up key operation guide		Search previous	(4)
Zoom in	(3)	Bring up bookmark list	(8)
Zoom out	(1)	Add bookmark	(8) (for at least one second)
Fit page	(2)		





Information

- When many files are stored in the FOMA phone or the microSD memory card, it may take long to access them. It may take long to display the PDF file depending on the PDF file.
- A PDF file that contains the complicated design or in the format not compatible with the PDF viewer might not be correctly displayed.

Information

- When you try to display undownloaded pages while the PDF file partially downloaded is displayed, downloading of the page starts.
- When you download the pages which you have not downloaded yet, if the PDF file has been updated at the server's end, the confirmation display appears asking whether to download from the first page.

Function Menu of the PDF File List



Function menu	Operation/Explanation
Edit title	See page 274.
Document info	You can display the PDF file name, saved date/time, etc.
Attach to mail	You can compose an i-mode mail message with the PDF files attached. Go to step 2 on page 172. ● You can compose it also by pressing  ().
Send Ir data	See page 305.
Ir transmission	See page 306.
Copy to microSD	See page 296.
Copy to phone	See page 297.
Copy	See page 275.
Move	See page 275.
Add desktop icon	See page 114.
Delete this	See page 275.
Delete all	See page 276.
Multiple-choice	See page 276.
Memory info	You can display the used memory space (estimate)/number of stored items.
Sort	See page 276.
Listing	You can change the displayed contents of the PDF File List. ▶ Title or Image ● You can switch the lists also by pressing  () from the PDF File List.



Information

<Listing>

- When you use "Image" to display PDF files, they might appear different from the actual images depending on the PDF files.

Function Menu while PDF File is Displayed

Function menu	Operation/Explanation
Zoom in	You can zoom in the PDF file. You can zoom in the PDF file up to 1,000%.
Zoom out	You can zoom out the PDF file. You can zoom out the PDF file up to 8%.
Go to	You can move to another page of the PDF file. ▶ Select the page you want to move to. ● If you select "Specified page", enter the page number you want to move to in the page number field, and select "OK"; then you can access to the specified page.
Search	You can display the screen in which the specified character string is contained. The point that matches the specified character is marked in yellow green. ▶ Search ▶ Select the search string field ▶ Enter a character string to be searched for. ● You can enter up to 8 full-pitch/16 half-pitch characters. ▶ Put a check mark for search conditions to be specified ▶  () ● If you select "Search next" or "Search prev.", you can continue to search under the same condition.
Bookmark/mark (Disp. bookmark)	See page 309.
Bookmark/mark (Add bookmark)	You can set a bookmark (i-mode bookmark) for the page currently displayed and can display the desired page easily by selecting the bookmark. You can set up to 10 bookmarks. ▶ Add bookmark ▶ YES ▶ Select the title field ▶ Enter a title ▶ OK ● You can enter up to 64 full-pitch/128 half-pitch characters. ● See page 310 when bookmarks are stored to the maximum.
Bookmark/mark (Display mark)	See page 310.
Bookmark/mark (Add mark)	You can store the currently displayed page number and the position within the page as the mark. You can use the stored mark as the sign of the reference point. You can set up to 10 marks. ▶ Add mark ▶ YES ● See page 310 when marks are stored to the maximum.

Function menu	Operation/Explanation
View types (View mode)	<p>You can change display format of the PDF file.</p> <p>▶ View mode ▶ Select a display format.</p> <ul style="list-style-type: none"> • If you select "User defined", enter the magnification value in the magnification specification field, and select "OK"; then you can display the page at the specified magnification. • The magnification you can specify is 8 through 1,000%. • If you save a file after changing the display format, it is displayed at the saved magnification next time.
View types (Rotate view)	▶ Rotate view ▶ 90° to right or 90° to left
View types (Page layout)	<p>You can change the layout the PDF file is displayed.</p> <p>▶ Page layout</p> <p>▶ Single page, Continuous or Continuous-facing</p>
At Viewer start-up Single page	
View types (Display link)	<p>You can display links set in the PDF file.</p> <p>Internal links (links set in the PDF file displayed), Web To, Mail To, and Phone To/AV Phone To are available for the links.</p> <p>▶ Display link ▶ Select a link.</p> <ul style="list-style-type: none"> • When multiple links are found in the display, you can select a link by pressing . • When you select an internal link, you can move to the linked page in the PDF file. See page 163 for another link.
View types (Page info ON/OFF)	<p>You can set whether to display the zoom magnification, page number, and scroll bar for displaying the PDF file.</p> <p>▶ Page info ON/OFF</p> <p>▶ Select an item ▶ Display or Not display</p>
At Viewer start-up Display	
View types (Document info)	See page 308.
Save	See page 310.
Download remain	<p>You can download all pages of the PDF file which you have not completely downloaded yet such as partially downloaded page by page or failed to be downloaded owing to disconnection of communication midway.</p> <p>▶ YES</p>
Capture screen	<p>You can cut out a part of the display and save it as JPEG image.</p> <p>▶  (Select) ▶ YES ▶ Select a folder.</p> <ul style="list-style-type: none"> • See page 162 when images are stored to the maximum.
Attach to mail	<p>You can compose an i-mode mail message with the PDF files attached.</p> <p>Go to step 2 on page 172.</p>

Information

<Search>

- The search conditions work as shown below:

Match case:

Identifies between uppercase and lowercase for search.

Whole words only:

Searches for character strings that completely match by unit of a word.

Search upward:

When you do "Search next", you can search backwards to the first page from the start page.

Search '?' as wildcard:

"?" mark (half-pitch) entered in the search string field is set for a search condition as a random character.

Search in this page:

Searches in the currently displayed page only.

<Bookmark/mark (Add bookmark)>

- If you do not enter the title, this is stored with "無題 (No title)".

<View types (View mode)>

- At Viewer start-up, the page is displayed in the size set for "Doc. display settings".

<View types (Page layout)>

- You cannot change the layout of the partial PDF file.

<Capture screen>

- You might not be able to cut out the display depending on the security setting of the PDF file.

Display Bookmark

You can list the bookmarks set for the PDF file and the i-mode bookmarks additionally set.


By selecting a bookmark, you can display the page for which the bookmark is set.

1 While a PDF file is displayed ▶ (FUNC)


▶ **Bookmark/mark** ▶ **Disp. bookmark**

▶ **Bookmark or i-mode bookmark**

▶ **Select a bookmark.**

- Some bookmarks that have been set beforehand are categorized into tier-levels. Press  (Next) to display the bookmarks at the lower level. However, all the bookmarks at the third-tier level or lower are displayed at the third-tier level.


Function Menu while i-mode Bookmark is Displayed

Function menu	Operation/Explanation
Edit title	<p>▶ Enter a title.</p> <ul style="list-style-type: none"> • You can enter up to 64 full-pitch/128 half-pitch characters.
Delete (Delete)	▶ Delete ▶ YES
Delete (Delete selected)	<p>▶ Delete selected</p> <p>▶ Put a check mark for bookmarks to be selected</p> <p>deleted ▶  (Finish) ▶ YES</p>
Delete (Delete all)	<p>▶ Delete all</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>


Display Mark

You can list the marked pages and positions stored in the PDF file.

When you select a mark, you can display the page in which the mark is stored.

- While a PDF file is displayed  (FUNC)
 - ▶ Bookmark/mark ▶ Display mark
 - ▶ Select a mark.

Function Menu while the Mark List is Displayed

Function menu	Operation/Explanation
Delete	▶ YES
Delete selected	▶ Put a check mark for marks to be deleted ▶  (Finish) ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Save

You can save the PDF files. You can save the newly downloaded pages and added bookmarks/marks. You can save up to 3,500 files in total including other data files, however, the number of files you can save decreases depending on the data volume. (See page 444)

- While a PDF file is displayed  (FUNC)
 - ▶ Save ▶ YES

The PDF file once saved to the FOMA phone or microSD memory card is overwritten each time you save it. (The operation in step 2 is not required.)

The PDF file that is not saved to the FOMA phone or microSD memory card is newly saved.

- With the PDF file that was re-downloaded from the first page owing to updating at the server's end, the confirmation display appears asking whether to overwrite the current data. Select "YES" to overwrite it. Select "NO" to newly save.

- Select a destination folder.

- See page 162 when PDF files in the FOMA phone are stored to the maximum.

■ When bookmarks or marks are set to the maximum

If you try to add a bookmark or mark to the PDF file for which 10 bookmarks or marks have been set, or if you try to save the PDF file for which 11 or more bookmarks or marks have been set, the confirmation display appears asking whether to add/save the bookmark or mark after unnecessary ones are deleted.

- YES
- Select bookmarks/marks to be deleted ▶ YES

or


Put a check mark for bookmarks/marks to be deleted

▶  (Finish) ▶ YES

- Continue putting a check mark until "Finish" appears.

Document Display Settings

You can set a display format for when the PDF files are displayed from sites.

-  ▶ i-mode settings
 - ▶ Doc. display settings
 - ▶ Select a display format.

<Document Viewer>

Displaying Word, Excel, and PowerPoint Files

You can display the Microsoft Word, Microsoft Excel and Microsoft PowerPoint files saved to the microSD memory card.


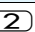









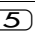

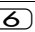
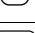
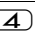
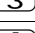
-  ▶ Data box ▶ Document viewer
 - ▶ Select a folder ▶ Select a file.





- See page 302 for the Function menu on the Folder List.

■ Operations when displaying a document file



- See page 311 for when you operate from the Function menu.

Operation	Key operation	Operation	Key operation
Upper scroll		Fit page	
Lower scroll		Next page	  
Left scroll		Previous page	  
Right scroll		Search	
Bring up key operation guide		Search next	
Zoom in		Search previous	
Zoom out			

Function Menu of the Document List

Function menu	Operation/Explanation
Edit title	See page 274.
File info	You can display the name and type of files.
Attach to mail	You can compose an i-mode mail message with the document file attached. Go to step 2 on page 172. <ul style="list-style-type: none"> You can compose it also by pressing  ().
Copy	See page 275.
Move	See page 275.
Delete this	See page 275.
Delete all	See page 276.
Multiple-choice	See page 276.
Memory info	You can display the used memory space (estimate).

Function Menu while Document File is Displayed

Function menu	Operation/Explanation
Zoom in	You can zoom in the file. You can zoom in the file up to 1,000%.
Zoom out	You can zoom out the file. You can zoom out the file up to 8%.
View types	You can change display format of the file. <ul style="list-style-type: none"> Select a display format. If you select "User defined", enter the magnification value in the magnification specification field, and select "OK"; then you can display the page at the specified magnification. The magnification you can specify by "User defined" is 8 through 1,000%.
Go to	You can move to another page or sheet of the file. <ul style="list-style-type: none"> Select the page or the sheet you want to move to. If you select "Specified page" for the Microsoft Word file or Microsoft PowerPoint file, enter the page number you want to move to in the page number field, and select "OK"; then you can move to the specified page.
Search	You can display the screen in which the specified character string is contained. The point that matches the specified character string is highlighted. <ul style="list-style-type: none"> Search ▶ Select the search string field ▶ Enter a character string to be searched for. You can enter up to 8 full-pitch/16 half-pitch characters. <ul style="list-style-type: none"> Put a check mark for search conditions to be specified  (. If you select "Search prev." or "Search next", you can continue to search under the same condition.

Function menu	Operation/Explanation
Zoom & page	You can set whether to display the zoom magnification and page number for displaying the file. <ul style="list-style-type: none"> Display or Not display
Scroll bar	You can set whether to display the scroll bar for displaying the file. <ul style="list-style-type: none"> Display or Not display
Rotate view	▶90° to right or 90° to left
Document info	You can display the name and type of files.

Information

<Search>

- The search conditions work as shown below:

Whole words only:

Searches for character strings that completely match by unit of a word.

Match case:

Identifies between uppercase and lowercase for search.

Search in this page (Excel file only):

Searches in the currently displayed page only.

Search in this file (Excel file only):

Searches in the whole file.

Printing Saved Images

Select a Method to Print the Images Saved in the microSD Memory Card

DPOF is the format for recording the print information about the still image you shot with a digital camera. You can input the information into the still image on the microSD memory card about whether to print it out and how many copies you print out. You can take the card to DPE service shops or use a DPOF compatible printer to print photos as you specify.


1 Still image in play/Still image List

▶  (FUNC) ▶ DPOF setting ▶ Print

▶ Enter the number of copies to be printed out.

- Enter "01" through "99" in two digits.
- To cancel printing the selected still image, select "Print OFF". To cancel printing all still images, select "All print OFF".

Information

- The classification icon of the images set DPOF Setting is .
- You can set DPOF Setting for up to 999 image files.
- You cannot set DPOF Setting for the image in excess of 2 Mbytes or 5M (2592 x 1944) size.
- DPOF Setting by other devices such as personal computers is disabled except the information about the number of copies to be printed out.

Information

- If unused space on the microSD memory card is not enough, DPOF Setting might not be set. (The icon and Picture Information, however, indicate DPOF is set.) Delete unnecessary files, make memory space, and then try again.
- Still images shot by P905i also support PRINT Image Matching III. You can accurately reproduce the conditions at shooting and your intention when you print the still image out from a PRINT Image Matching compatible printer, or when you process it by using a compatible software program. Some functions are not reproduced by the compatible printer of earlier version than PRINT Image Matching III.


<AV Output>

Displaying Still Images, Moving Images/i-motion Movies on TV

When you connect the FOMA phone to a TV using the Flat-plug AV Output Cable P01 (option), you can display still images, moving images/i-motion movies, and images during a videophone call, video from One Seg and from i-appli on the TV. You cannot display any other images.

Connect FOMA Phone to TV

Open the cover of the Earphone/Microphone/AV output terminal on the FOMA phone and connect the Flat-plug AV Output Cable to it. Then connect the Flat-plug AV Output Cable to the video/audio input terminal on the TV.

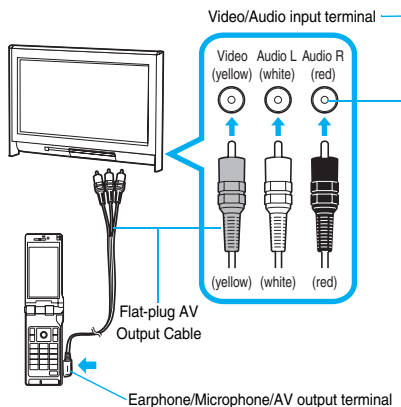

Information

- You can connect to the devices other than TV sets for output.
- When connecting the Flat-plug AV Output Cable, make sure that you firmly insert it. Do not pull the cable forcibly, twist it by the plug, or apply an excessive force.
- Before connecting or disconnecting the Flat-plug AV Output Cable to and from the device such as a TV, turn off the sound volume of the connected device.

Information

- To pull the plug out, take hold of the plug and then pull it out softly.

Display Still Images on TV

1 Play back a still image while the Flat-plug AV Output Cable is connected

or

connect the Flat-plug AV Output Cable while a still image is being played back.

- Press **MENU** (**Screen**) to switch the display size.
- You can press **Auto** to start a slide show. You can press **Stop** again to stop it.
- You can press **Left/Right** to display a previous or next still image.
- Each time you press **Rotate**, you can rotate the still image clockwise by 90 degrees.
- See page 274 for how to display still images.
- To cancel AV output, pull the Flat-plug AV Output Cable off of the FOMA phone. When the playback ends, or when another function starts up, AV output is canceled as well.



Information

- AV output is not available in the following cases:
 - When playing back a still image from any other than the Still Image List or icon pasted to the desktop
 - When playing back a still image from any other than the "i-mode" folder, "Camera" folder, user folders, "Picture" folder (microSD), and "Image Box" folder (microSD)
 - When displaying a still image whose acquired source icon is " " or " ", and whose "File restriction" is "File restricted"
 - When playing back a Chara-den picture you shot a Chara-den model whose "Rec. file restriction" is "File restricted"
 - When playing back a still image in the actual size or by slide show
 - When playing back a Flash movie
- When a still image is larger than the VGA (640 x 480) size, it is reduced to VGA (640 x 480) or smaller with its proportional ratio retained for displaying on the TV.
- On some TVs, still images may not be displayed correctly when the display size is switched.

Display Moving Images/i-motion Movies on TV

1 Play back a moving image/i-motion movie while the Flat-plug AV Output Cable is connected

or

connect the Flat-plug AV Output Cable while a moving image/i-motion movie is being played back.

- Press **MENU** (Screen) to switch the display size.
- See page 280 for how to play back moving images/i-motion movies and how to operate during playback.
- To cancel AV output, pull the Flat-plug AV Output Cable off of the FOMA phone. When another function starts up, AV output is canceled as well.



Information

- AV output is not available in the following cases:
 - When the image is played back from any other than the Moving Image List or icon pasted to the desktop
 - When playing back a moving image/i-motion movie whose acquired source icon is " " or " ", and whose "File restriction" is "File restricted"
 - When playing back a Chara-den movie you shot a Chara-den model whose "Rec. file restriction" is "File restricted"
 - When a moving image/i-motion movie in the "Pre-installed" folder, or "Movable contents" folder (microSD) is played back
- On some TVs, moving images/i-motion movies may not be displayed correctly when the display size is switched.

Display Images during a Videophone Call on TV

1 Make a videophone call while the Flat-plug AV Output Cable is connected

or

connect the Flat-plug AV Output Cable during a videophone call.

- " " appears during AV output.
- To cancel AV output, pull the Flat-plug AV Output Cable off of the FOMA phone. When the videophone call ends, or another function starts up, AV output is canceled as well.



Information

- You cannot execute AV output for the images of Remote Monitoring.
- The sensitivity of the microphone is improved during AV output.

Information

- " " (Hands-free icon) does not appear during AV output. However, the voice is output from the connected device. You cannot switch to Hands-free.

Display Video from One Seg

At One Seg start-up

Released

1 Watch a One Seg program while the Flat-plug AV Output Cable is connected

or

connect the Flat-plug AV Output Cable during watching a One Seg program.

2 (FUNC) ▶ AV output ▶ YES

- To cancel AV output, perform the same operation or pull the Flat-plug AV Output Cable off of the FOMA phone. When watching One Seg programs ends, or when another function starts up, AV output is canceled.



Information

- When "TV sound while closed" is set to "ON", AV output still continues even if you close the FOMA phone.
- The caption and data broadcasting are not displayed on TV.
- AV output is unavailable during recording or in ECO Mode.
- AV output is unavailable for video or still images recorded by One Seg.
- The sound during AV output is output from a connected device, so adjusting the sound volume of the FOMA phone cannot change the output sound volume.

Display video from i-appli

1 Start an i-appli program while the Flat-plug AV Output Cable is connected

or

connect the Flat-plug AV Output Cable while an i-appli program is activated.

- To cancel AV output, pull the Flat-plug AV Output Cable off of the FOMA phone. When an i-appli ends, or when another function starts up, AV output is canceled.

Information

- AV output still continues even if you close the FOMA phone. However, AV output is not available during pause in Power Saver Mode.



Music&Video Channel/Music Playback



Music&Video Channel

What is Music&Video Channel?.....	316
Setting Programs	316
Playing Back/Operating Programs	317

MUSIC Player

Playing Back Music.....	320
Saving Music Files	321
Using MUSIC Player	323
Using Playlist.....	329

■ Handling Music Files

You can use music files saved on the microSD memory card for personal use only. Before using, give enough consideration not to infringe on the third party's intellectual property rights or other rights such as copyright.

What is Music&Video Channel?

Music&Video Channel is a service which automatically delivers up to about one-hour programs at night by just setting your favorite music programs in advance. Further, you can enjoy high-quality moving image program of up to about 30 minutes. Programs are updated periodically and you can enjoy the delivered programs at your convenient time such as on commuting.

■ Before using Music&Video Channel

- Music&Video Channel is a pay service which is available on a subscription basis. (You need to subscribe to i-mode and Pake-Houdai/Pake-Houdai Full to apply for it.)
- Other than the service fee for using Music&Video Channel, you might be separately charged an information fee depending on the program.
- For the details on Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode]".
- If you insert the UIM to the Music&Video Channel incompatible FOMA phone after you subscribe to Music&Video Channel, you cannot use Music&Video Channel Service. Note that the service fee applies unless you cancel the Music&Video Channel subscription.
- You cannot obtain or set programs during international roaming, as Pake-Houdai/Pake-Houdai Full is not applied. When you try to obtain or set programs, note that you are charged a packet communication fee for the i-mode communication. Take procedures to halt the distribution of programs before departure to overseas. Then, after homecoming, resume receiving distribution.

Setting Programs

If you previously set a program that you want to watch, the FOMA phone automatically downloads the program data at night.

1 MUSIC ▶ Music&Video Channel




Music&Video Channel display

2 **Set program ▶ Follow the instructions on the display to set a program.**


For details, refer to "Mobile Phone User's Guide [i-mode]".

- See page 162 when data files are stored to the maximum.




■ When a program is set


" " appears on the Stand-by display 12 hours before the time the program obtaining starts. However, it does not appear if you have inserted a UIM which is different from the one you used to set the program.



Programs are automatically obtained at night. The display for obtaining programs does not appear but " Update

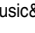

" appears on the desktop when they are successfully obtained. Press , highlight " Update", and press  (Select) to display the Music&Video Channel display.

When obtaining fails, " Fail

Information

- When the communication is disconnected during obtaining a program, re-obtaining is automatically tried up to five times by an interval of about three minutes. When a display for obtaining a program is shown, however, the confirmation display appears asking whether to re-obtain the program.
- The ring tone does not sound and the vibrator does not work to notify that obtaining programs starts or is completed. When you set "Music&Video ch illum." of "Illumination" to "ON", the Call/Charging indicator flickers when obtaining programs is completed. (See page 111)
- You can set up to two programs at once.
- Note that a newly obtained program overwrites a saved program and you can no longer play back that saved program afterward. To avoid overwriting, perform "Move program" to move the program to the "Saved program" folder.
- You cannot save the obtained program to the microSD memory card.
- To set programs, you need to register the site which offers Music&Video Channel programs to your My Menu. (See page 156)
- If you have not subscribed to Music&Video Channel, select "About this service" to see the Music&Video Channel introduction page.
- When the programs could not be obtained due to "power off" or "low battery" at the start time of program obtaining, re-obtaining is performed at night of the following day.
- It may take a time to obtain programs, so fully charge the battery and operate in the good radio wave conditions.
- You cannot perform the setting operation and automatic obtaining of the program selected on the Music&Video Channel display or the program in use.
- When you cancel Music&Video Channel, the programs other than those moved by "Move program" are deleted.
- If you insert a UIM which is different from the one you used to set programs, programs cannot be automatically obtained. Set the programs again from the Music&Video Channel display.

Information

- When you select a service menu for Music&Video Channel and the message “Confirm set up information?” appears, select “YES” to delete the programs that have already been distributed. However, they are not deleted while the distribution of programs is halted.
- If you insert the UIM of the FOMA phone that you have already set programs into another Music&Video Channel compatible FOMA phone, the programs cannot be obtained automatically. Select “Set program” again from the Music&Video Channel display to automatically update the program setting on the FOMA phone, then the programs can be obtained automatically.

Check/Cancel the Set Program


1 Music&Video Channel display ▶ Set program ▶ Follow the instructions on the display.

You can check or cancel the set program. For details, refer to “Mobile Phone User’s Guide [i-mode]”.

Information

- Even if the setting of a program is canceled, My Menu is not deleted.

Obtain a Program Manually

“ ” appears on the Stand-by display when the automatic program obtaining fails or the program is not updated even after the program distribution date. When the automatic obtaining fails, you can manually obtain the program.

1 Music&Video Channel display ▶ Select a program ▶ YES

- For a partially obtained program, select “Play” to play it back.
- For a program which has not been updated, select “Play” to play it back.



Information

- When obtaining of a program is suspended, the part of the program obtained up to that point is saved. To obtain remaining part, you can manually obtain it except in some time zones. When a program has been updated or switched to another program, obtaining starts not from the suspended point but from the beginning.
- You cannot re-obtain the program whose playable deadline has expired. Such a program cannot be updated until the next distribution date.
- You may not be able to manually obtain programs depending on the time zone.


Playing Back/Operating Programs


- You can enjoy playing back programs in stereo sound by connecting the Flat-plug Stereo Earphone Set (option). Also, you can enjoy playing back programs wirelessly by using a commercial Bluetooth device. (See page 352)

1 ▶ MUSIC ▶ Music&Video Channel ▶ Select a program.

“” is displayed while Music&Video Channel is activated, and “” is displayed when the program shifts to pause state during Play Background.

• When information of the previously played program exists, playback starts from the position and/or in the mode accordingly.

• Highlight a program and press  (Chapter); then the Chapter List is displayed.

• Highlight a program and press  (To site) to connect to the URL of the program URL information.

• Any of the following images are displayed when you cannot display the preview images:



Cannot be played back





No preview images



Playback restrictions have expired, and the like.



Updating program

• When you press and hold  for at least one second or press  during playback or pause, playing back program ends.

• You can use mail functions, display sites, and so on, while listening to music using Music&Video Channel (Play Background). (See page 419)

Operate Music&Video Channel from Data Box

You can play back programs also from Data Box. From Data Box, you can play back currently distributed programs as well as the programs that have been distributed in the past and moved to the “Saved program”.


1 ▶ Data box ▶ Music&Video Channel ▶ Downloaded program or Saved program ▶ Select a program.




Program Folder List



Program List

• You can switch display format each time you press  (Change) from the Program List.

About Music&Video Channel Playback display

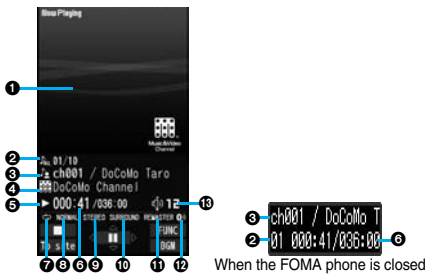

When the FOMA phone is closed

- 1...Program image* or program video
 - 2...Chapter number/The number of chapters
(Chapter number only on the Private window)
 - 3...Chapter name/Artist name
 - 4...Program name 5...Playback state
 - 6...Playback time/Total playback time
 - 7...Play mode (No indication for "Normal")
 : Repeat
 - 8...Equalizer
 : Normal : S-XBS1
 : S-XBS2 : Train
 - 9...Stereo/Monaural
 : Stereo : Monaural
 - 10...Listening (No indication for "OFF")
 : Surround : Natur1
 : Natur2
 - 11...Remaster (No indication for "OFF")
 : ON
 - 12...Icon of Bluetooth connection
(No indication for not connected)
 : Being connected
 - 13...Sound volume
- * When no images are stored, an animation appears.

Operation while playing back a Music&Video Channel program

Operation	Key operation
Halt	()
Pause	or or to play back
Sound volume adjustment	or • Press and hold to adjust the sound volume sequentially. • Setting from Level 0 (Silent) through 25 is available.
Replay next chapter	or (for at least one second)
Replay previous chapter*1	or (for at least one second) • When playback time is over three seconds, this operation returns the position to the beginning of the file.
Search (fast forward)*2	Press and hold .
Search (fast rewind)*2	Press and hold .
Connect to site	()
Play background	()
Display next image	()
Display previous image	()
Remaster	() • Each time of pressing switches between "ON" and "OFF".
Listening	() • Each time of pressing switches in order of "OFF" → "Surround" → "Natur1" → "Natur2".
Equalizer	() • Each time of pressing switches in order of "Normal" → "S-XBS1" → "S-XBS2" → "Train".

*1 This operation returns the position to the beginning of the music file when no previous chapter is found.

*2 You cannot operate during pause.

From the Music&Video Channel Playback display, you can do the following operations by using the switch of the Flat-plug Stereo Earphone Set (option) or the Flat-plug Earphone/Microphone with Switch (option):

• You can operate them when the FOMA phone is closed as well.

Operation	Switch operation
Pause	Press once. • To play back, press again.
Replay next chapter	Press twice in succession.
Replay previous chapter*	Press three times in succession. • When playback time is over three seconds, this operation returns the position to the beginning of the file.

* This operation returns the position to the beginning of the music file when no previous chapter is found.

■ Icons on the Music&Video Channel display/the Program List

The icons on the Music&Video Channel display indicate the download status.

Icon	Description
	Successfully obtained program
	Broken program
	Partially obtained program or unsuccessfully obtained program

- “NEW” is added to the newly obtained program.
- Some programs have restrictions on the number of playbacks, playable deadline, or playback period. “⌚” is added to the icon of the program with playback restrictions and “⌚” is added to the icon of the program with restrictions expired. You can check the playback restrictions for the program by “Program info”.
- Some programs have restrictions on operation. “⊞” is added to the icon of the program with operation restrictions.
- Depending on the program, its playable time zone is fixed. “🌐” is added to the icon of the program with time zone restrictions. The time follows the time information obtained from the network.
- When obtaining a periodically-updated program fails, “🔄” appears to tell the program has not been updated. “🔄” disappears when obtaining the program starts.
- The file restriction is set to all the Music&Video Channel programs. See page 146 for the file restrictions.

Information

- The information of the previously played program is erased if you do the following operations:
 - When you turn on/off the FOMA phone
 - When you update the program
 - When you delete or move the previously played program
- If you try to play back a program with a low battery, the confirmation display appears asking whether to play it back. When the battery becomes low during playback, the playback pauses, and the confirmation display appears asking whether to finish the playback.
- In the following cases, playback pauses and resumes after you finish each operation:
 - When you make/receive a voice call, videophone call, or PushTalk call
 - When you receive a mail message or Message R/F while “Receiving display” is set to “Alarm preferred” or the Stand-by display is shown
 - When an alarm tone of “Alarm”, “Schedule”, “ToDo”, “Book program” or “Timer recording” sounds

Depending on the function which occurred, the confirmation display might appear asking whether to end the Music&Video Channel program.
- If a black display appears after you play back a program having time zone restrictions, playback starts at the next playable time zone.
- “Program info” of a Music&Video Channel program and deadline information on the display that notifies you of a playable deadline are shown by date/time with “Summer time” set to “OFF”.

Function Menu of Music&Video Channel display/ Program Folder List/Program List

Function menu	Operation/Explanation
Chapter list	You can display the list of chapters set for the program. Select a chapter to play back the selected chapter and afterward. <ul style="list-style-type: none"> ● Press (FUNC) and select “Chapter info” to display the information about the chapter title, playback time, etc.
Play mode setting	<p>▶ Normal or Repeat</p> <p>Normal . . . Plays back the program once in the order of the chapters.</p> <p>Repeat . . . Plays back the program repeatedly in the order of the chapters.</p>
Program info	You can display the program title, distribution source, playback restrictions, etc.
Move program	Programs currently distributed are updated to new programs on the next distribution date. You can save the current programs by moving them to the “Saved program” folder before the distributed program is updated. You can check “Memory info” for unused memory space you can save to. You can save up to 10 programs sharing the memory space with other data files, however, the number of programs you can save decreases depending on the data volume. (See page 444) <ul style="list-style-type: none"> ▶ YES ● See page 162 when programs are stored to the maximum.
Add desktop icon	See page 114.
Edit title	<p>▶ Enter a title.</p> <ul style="list-style-type: none"> ● You can enter up to 31 full-pitch/63 half-pitch characters.
Reset title	You can reset the title to the default. <ul style="list-style-type: none"> ▶ YES
Multiple-choice	You can select and delete multiple programs stored in “Saved program” folder. <ul style="list-style-type: none"> ▶ Put a check mark for programs to be deleted ▶ (FUNC) ▶ Delete
Connect to URL	You can access the URL when the program has the URL information. <ul style="list-style-type: none"> ▶ YES
Display image	You can display the program images stored in the program. <ul style="list-style-type: none"> ● Press (CLR) to return to the List.
Memory info	You can display the used memory space (estimate).

Function menu	Operation/Explanation
Delete/Delete this	You can delete the program. ▶ YES ● When you delete a currently distributed program, "Setting program" continues to be displayed on the Music&Video Channel display of MUSIC until the next program distribution. "No program" is displayed when no program is set.
Delete all	You can delete all the programs stored in the "Saved program" folder. ▶ Enter your Terminal Security Code ▶ YES

Information	
<Play mode setting>	
● The playable mode setting is invalid for the programs having the time zone restrictions.	
● Even if you set to "Repeat", the program is not played back repeatedly if it has no time zone restrictions but has restrictions on the number of playbacks.	
<Move program>	
● You cannot move the program when its obtaining is not completed, or the move restriction or time zone restriction is set for the program.	
<Edit title>	
● When the next program is delivered, the edited title is overwritten by the new title.	
<Multiple-choice> <Delete/Delete this> <Delete all>	
● Even when you delete the program, the program setting is not released.	

Function Menu during Playback/Pause	
Function menu	Operation/Explanation
Chapter list	See page 319.
Play mode setting	See page 319.
Sound effect (Remaster)	You can bring the sound from an earphone or Bluetooth device to the original sound by complementing high-pitch range lost at data compression. ▶ Remaster ▶ ON or OFF
Sound effect (Listening)	You can set sound effect for listening. ▶ Listening ▶ Select an item. Surround . . . Makes the sound natural and stereophonic. Natur 1/2 . . . Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste. OFF Sets Listening to "OFF". ● "Natur 1/2" is effective for the sound from an earphone or Bluetooth device.

Function menu	Operation/Explanation
Sound effect (Equalizer)	You can change the quality of sound from an earphone or Bluetooth device. ▶ Equalizer ▶ Select an item. Normal Reproduces normal sound quality. S-XBS1 Enhances bass sound. S-XBS2 Enhances bass sound more deeply than S-XBS1. Train Minimizes abnormal sound that causes sound leakage.
Program info	See page 319.
Chapter info	You can display the title, play time, etc. of the chapter currently played back.
Connect to URL	See page 319.
Previous image	You can display a previous image.
Next image	You can display a next image.
Change to full	The image is played back in the horizontal display by rotating it 90 degrees to the right. ● When it is already played horizontally, the vertical display returns.

Information	
<Sound effect>	
● Even if an earphone or Bluetooth device is not connected, the respective setting contents are displayed on the display.	
<Previous image> <Next image>	
● You can display up to three images, however, you may not be able to display them depending on the program.	

Playing Back Music

You can play back music files on your FOMA phone by using MUSIC Player or i-motion player.

■ MUSIC Player (See page 323)

By "MUSIC Player" of "MUSIC", you can play back Chaku-uta Full® music files or music files saved from music CDs to the microSD memory card via a personal computer.

■ i-motion Player (See page 280)

From the "i motion" folder in "Data box", you can play back the voice-only i-motion movie (including music data of AAC format) or AAC format files stored on the microSD memory card.

● You can display mail, sites, and so on, while listening to music by MUSIC Player (Play Background). (See page 419)

Saving Music Files

Download Chaku-uta Full® Music Files



You can download Chaku-uta Full® music files from sites. You can save up to 101.6 Mbytes of files including other data files. (See page 443)

1 Bringing up a Chaku-uta Full® music file downloadable site ▶ Select a Chaku-uta Full® music file ▶ Save ▶ YES


- Select “Play” to play back the Chaku-uta Full® music file. See page 325 for operations while a Chaku-uta Full® music file is being played back.
- Select “Property” to display the Chaku-uta Full® music file information. (See page 327)
- See page 162 when Chaku-uta Full® music files are stored to the maximum.



2 Select a destination folder.

- Press  () to display folders at the second-tier level or lower, if they exist. Press **CLR** to return to the upper level.

■ When downloading Chaku-uta Full® music file is suspended

When you press  (**Quit**) to suspend downloading or when the downloading is suspended by an incoming call, the confirmation display appears asking whether to resume downloading. Select “YES” to resume downloading the remaining part. Select “NO” to show the Obtaining Completion display. Select “Save pt.” to save it to a folder in “i-mode” folder in “MUSIC” in “Data box”.

You can re-download the rest of the partially saved file from “Data box”.


- The title name of the partially saved Chaku-uta Full® music file takes the date and time when it is downloaded.
- When the playable period or playable deadline of the partially saved Chaku-uta Full® music file has expired, you cannot download the remaining segments of the file. Further, the partially saved file is deleted when you perform obtaining operation.

■ About Uta-hodai

Uta-hodai files are the Chaku-uta Full® music files you can play back just for a period of the contract with a content provider. The playable deadline is specified in the license information that is downloaded together with the music file. Even when the playable deadline has expired, you can play back the music file by updating the license.

- When a music file (Chaku-uta Full® music file downloaded on the membership service basis) whose playable deadline has expired is found at the start of MUSIC Player, the confirmation display appears asking whether to update the playable deadline. Select “YES” to update the file (Packet communication fee is charged). Select “NO” not to use the music file. See page 323 for starting MUSIC Player.
- Some Uta-hodai music files are applied with surplus playable days even after the playable deadline has passed. During this period, you can play back files without updating the playable deadline information. When the surplus playable days are over, you cannot play back the files. Also if you download a music file with playable period not updated, you cannot play it back before it is saved.
- When the upper limit of the (membership) music services you can register is exceeded, the confirmation display appears asking whether to overwrite them. Select “YES” to overwrite a music service whose playable deadline is the oldest. You can no longer play back the music files downloaded from the overwritten service.
- Packet communication fee charged for updating a playable deadline during international roaming is not supported by Pake-Houdai and Pake-Houdai Full.
- If you insert the UIM with a phone number different from the one you used to download Uta-hodai music files, you cannot download/play back the files. When you use Uta-hodai with a new UIM, execute “Initialize” (see page 354).

Information

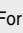- You can save up to 5 Mbytes per Chaku-uta Full® music file.
- When the Uta-hodai music file set for the ring tone or alarm tone needs to be updated because the playable deadline has expired, the default tone sounds when a call comes in, or an alarm sounds/vibrates.
- For a Chaku-uta Full® music file that has restrictions on the number of playbacks, playable period, or playable deadline, “” is displayed at the head of the title. If you remove the battery and keep it aside for a long time, the date/time information in the FOMA phone might be reset. In that case, you cannot play back the Chaku-uta Full® music file that has restrictions on the playable period or playable deadline. See “Music info” for checking the playback restrictions.
- “Music info” of a Chaku-uta Full® music file and deadline information on the display that notifies you of a playable deadline are shown by the date/time with “Summer time” set to “OFF”.
- Partially saved Chaku-uta Full® music files cannot be played back from Data Box.

Save WMA Files

You can use Windows Media Player 10/11 to save Windows Media® Audio (WMA) files from a personal computer to the microSD memory card.

You can save up to 600 WMA files.

- As well as music files, you can save playlists, jacket images, and license keys.

STEP

1 Prepare devices required for saving WMA files

First, prepare the devices required for saving WMA files.

- FOMA P905i
- microSD memory card
- FOMA USB Cable with Charge Function 01 (option)
- Personal computer with Windows Media Player 10 (10.00.00.3802 or later)/11 installed
 - When you use Windows Media Player 10/11 in Windows XP, use Windows XP Service Pack 2 or later. When you use Windows Vista, use Windows Media Player 11.
- Before connecting the FOMA phone to a personal computer, you need to check the version of Windows Media Player.

STEP

2 Use the FOMA phone as reader/writer

Set "USB mode setting" to "MTP mode". (See page 300)

STEP

3 Save music files to the microSD memory card

Start Windows Media Player 10/11 and save WMA files to the microSD memory card.

- You cannot save WMA files to the FOMA phone.
- For how to operate Windows Media Player 10/11, refer to Help for Windows Media Player 10/11.
- When you finish saving, remove the FOMA USB Cable with Charge Function 01 from the FOMA phone.
When you remove the FOMA USB Cable with Charge Function 01, remove it after finishing the software in use.

■ About the Napster® Application

You have the ability to save music files using the Napster® application.

- Please download the Napster® application from the following web page:
<http://www.napster.jp/> (Japanese only)
- If you have any questions about the Napster® application, refer to the following web page:
<http://www.napster.jp/support/> (Japanese only)

Information

- Do not remove the microSD memory card during saving a file. You may lose the file.
- Music files and jacket images are saved to PRIVATE/ DOCOMO/MMFILE/WM/ on the microSD memory card.

Information

- You cannot play back the saved files on other FOMA phones. (You might be able to play them back depending on your license key.)
- When you insert the microSD memory card which contains WMA files, the WMA files saved by other than P905i are not displayed.
- If you have saved WMA data files by another FOMA phone, you need to delete the "WM" folder and "WM_SYSTEM" folder on the microSD memory card by a personal computer or other devices before using.
- When you add or delete the WMA files on the microSD memory card repeatedly, the size of license files might become large, and memory space on the microSD memory card might become low. In this case, you can delete the license files. After you perform "DEL all licenses" for WMA files, connect your FOMA phone to your personal computer and update the license files. You cannot play back the WMA files unless you update the license files.
- When unused memory space on the microSD memory card becomes 200 Kbytes or less, the card might not be recognized by a personal computer. Check the unused memory space on the microSD memory card, and delete unnecessary data files if the unused memory space is 200 Kbytes or less, then connect to the personal computer after setting "USB mode setting" to "MTP mode".

Save Music Files by Using SD-Audio

By using SD-Jukebox (commercial item), you can save the music files on the music CDs to the microSD memory card as AAC format data.

- By using the microSD memory card adapter (option), you can save music files to the microSD memory card directly from a personal computer as well.
- ※ The following steps are an example for when the FOMA phone is used as a microSD reader/writer for saving music files.

■ About SD-Jukebox

You can purchase SD-Jukebox from the web page below:
http://www.sense.panasonic.co.jp/PanaSense/special/soft/sd_jukebox/ (Japanese only)

- For details about operating environments, refer to the web page below:
<http://panasonic.jp/support/software/sdjbl/> (Japanese only)

STEP

1 Prepare devices required for saving music files

First, prepare the devices required for saving music files.

- FOMA P905i
- microSD memory card
- FOMA USB Cable with Charge Function 01 (option)
- Personal computer (Windows XP, Windows 2000, or Windows Vista)
- SD-Jukebox (commercial item)
- Music CD you want to save

STEP

2 Install SD-Jukebox

Install SD-Jukebox on the personal computer.

STEP

3 Use the FOMA phone as reader/writer

Set "USB mode setting" to "microSD mode".
(See page 300)

STEP

4 Save music files to the microSD memory card

Start SD-Jukebox and set a music CD on the personal computer. Then use SD-Jukebox to save music files to the microSD memory card.

- For how to operate SD-Jukebox, refer to Help for SD-Jukebox.
- When you finish saving, remove the FOMA USB Cable with Charge Function 01 from the FOMA phone.

<MUSIC Player>

Using MUSIC Player

You can play back Chaku-uta Full® music files obtained from sites or music files saved to the microSD memory card.

To play back music files, select "MUSIC Player" from "MUSIC" on Main Menu. Play Background is available so that you can use mail functions, display sites, and so on, while listening to music.

To manage folders or data files, select "MUSIC" from "Data box" on Main Menu.

- Note that battery consumption will be faster when you use MUSIC Player.
- You can enjoy playing back music in stereo sound by connecting the Flat-plug Stereo Earphone Set (option). Also, you can enjoy listening to music wirelessly by using a commercial Bluetooth device. (See page 352)
- If the number of stored files increases, it may take long to start MUSIC Player.

Play Back Music Files

1 Press and hold [P] for at least one second.

The Player Menu display appears.

- You can play back the top of the All tracks list by pressing and holding [P] for at least one second with the FOMA phone closed.
- The playback display (in pause state) of the previously played music file appears when the information about it remains.
- The "★" mark is added to the playlist which is currently played back or was previously played back.



2 Select an item.

All tracks

..... Displays all the music files saved on the FOMA phone and microSD memory card.

Artist

..... Displays all the artist names.
Highlight the name of the artist you want to listen to and press [Select], then all the album names of the selected artist are displayed. (Go to Album)

Album


..... Displays all the albums.
Highlight the name of the album you want to listen to and press [Select].

Genre

..... Displays all the genres.
Highlight the genre you want to listen to and press [Select].

Playlist/SD-Audio

..... Displays all the playlists created by the FOMA phone and personal computer.
See page 330 for the playback of playlists.

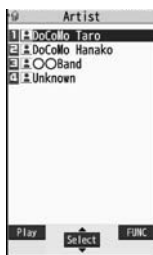


Type List (For Artist)



Music List

 - When you select "Artist", "Album", or "Genre", and press [Play] from the Type List, all the music files stored in the selected item are played back.
- You can switch display format each time you press [Change] from the Music List.
- When "Player" is displayed on the Type List or the Music List, you can display the playback display of previously played back music file or music file in-play by pressing [Player].
- You might not be able to display all the stored music files depending on their file size.
- Any of the following images are displayed when you cannot display the preview image:



3 Select a music file.

Playback starts from the selected music file in the order listed on the Type List or playlist. "🎵" is displayed while MUSIC Player is activated, and "🎵" is displayed when the music shifts to pause state during Play Background.

- The "★" mark is added to the music file which is currently played back or was previously played back.
- Playback continues even if you close the FOMA phone during playback.
- When you press and hold [P] for at least one second during playback, pause, or halt, or press [END], MUSIC Player ends.
- When you press [MENU] [List] during playback, the former Music List is displayed.


Manage Folders or Music Files

1 [MENU] ▶ Data box ▶ MUSIC



2 Select an item.

- MUSIC Player** . . . MUSIC Player starts. (See page 323)
- i-mode** Displays the i-mode (Chaku-uta Full®) Folder List. Select a folder.
- WMA** Displays the WMA List.

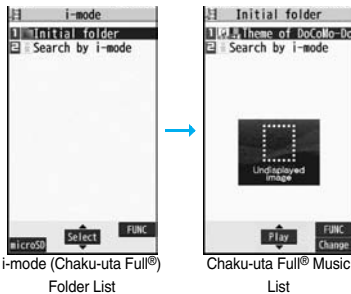

- Some WMA files have playable license (number/period/ deadline).
- Each time you press [MENU] from the i-mode (Chaku-uta Full®) Folder List, you can switch between the folders in the FOMA phone and the microSD memory card.
- You can switch display format each time you press [Change] from the Chaku-uta Full® Music List and WMA List.
- See page 323 when you cannot display a preview image.
- See page 162 when you select "Search by i-mode".




3 Select a Chaku-uta Full® music file or WMA file.

Only the selected music file is played back as a demo.

- When you close the FOMA phone during playback, the playback stops.
- To terminate playback, press and hold [P] for at least one second or press [END] during playback or pause.
- You might be able to play back a Chaku-uta Full® music file by pressing [Play] or selecting "Play" from the Function menu while selecting it on another function.
- Chaku-uta Full® music files are shown by titles ("Title - Artist name" in default title) for control when you display them from the "i-mode" folder. When you operate them from "MUSIC Player", titles are shown.

■ About playback display during using MUSIC Player

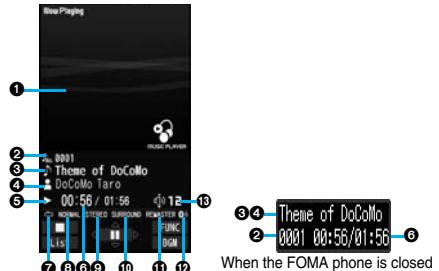

- 1 . . . The image*1 which is stored in the music file
- 2 . . . Track number
- 3 . . . Title
- 4 . . . Artist name
- 5 . . . Playback state
- 6 . . . Playback time/Total playback time
- 7 . . . Play mode (No indication for "Normal")
 - [Left Arrow] : Play only one
 - [Repeat] : Repeat one
 - [Repeat All] : Repeat all
 - [Random] : Random
 - [Random Play & Repeat] : Random play & repeat
- 8 . . . Equalizer
 - [NORMAL] : Normal
 - [S-XBS1] : S-XBS1
 - [S-XBS2] : S-XBS2
 - [TRAIN] : Train
- 9 . . . Stereo/Monaural
 - [STEREO] : Stereo
 - [MONO] : Monaural
- 10 . . . Listening (No indication for "OFF")
 - [SURROUND] : Surround
 - [NATUR1] : Natur1
 - [NATUR2] : Natur2
- 11 . . . Remaster (No indication for "OFF")
 - [REMASTER] : ON
- 12 . . . Icon of Bluetooth connection (No indication for not connected)
 - [Bluetooth Icon] : Being connected
- 13 . . . Sound volume

*1 When no images are stored, an animation appears.
 *2 Displayed only in demo playbacks.

■ Operations of MUSIC Player in use

Operation	Key operation
Halt	() ● () or to play back
Pause	() or () ● () or to play back
Sound volume adjustment	or / ● Press and hold the key to adjust the sound volume sequentially. ● Setting from Level 0 (Silent) through 25 is available.
Replay next file	or (for at least one second)
Replay previous file*1	or (for at least one second) ● When playback time is over three seconds, this operation returns the position to the beginning of the file.
Search (fast forward)*2	Press and hold .
Search (fast rewind)*2	Press and hold .
Display list	()
Play background	()
Display image/ Display lyric	2 ● Each time of pressing switches between jacket image and lyric image.
Display next image	3
Display previous image	1
Remaster	9 ● Each time of pressing switches between "ON" and "OFF".
Listening	8 ● Each time of pressing switches in order of "OFF" → "Surround" → "Natur1" → "Natur2".
Equalizer	7 ● Each time of pressing switches in order of "Normal" → "S-XBS1" → "S-XBS2" → "Train".

*1 This operation returns the position to the beginning of the music file when "Random" or "Random play&repeat" is set or no previous music file is found.

*2 You cannot operate during halt or pause.

● You cannot use some operations during playback of a demo.

From the playback display during using MUSIC Player, you can operate the following by using the switch of the Flat-plug Stereo Earphone Set (option) or the Flat-plug Earphone/Microphone with Switch (option):

● You can operate them when the FOMA phone is closed as well.

Operation	Switch operation
Pause	Press once. ● To play back, press again.
Replay next file	Press twice in succession.
Replay previous file*	Press three times in succession. ● When playback time is over three seconds, this operation returns the position to the beginning of the file.

* This operation returns the position to the beginning of the music file when "Random" or "Random play&repeat" is set or no previous music file is found.

■ Playback specifications of Chaku-uta Full® music files

File format	MP4
Codec	MPEG-4 AAC MPEG-4 AAC+ (HE-AAC) Enhanced aacPlus
Bit rate	8 to 128 kbps
Extension	3gp

■ Playback specifications of SD-Audio files and number of storable files

File format	MPEG-2 AAC, MPEG-2 AAC+SBR
Bit rate	32 to 128 kbps
Maximum number of storable files	999 files
Maximum number of playlist	99 files (Up to 99 files can be stored in a single playlist.*)












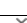
* Except "All tracks".

■ Playback specifications of WMA files and number of storable files

File format	WMA (Windows Media Audio 9 Standard)
Bit rate	32 to 192 kbps
Maximum number of storable files	Maximum 600 files
Maximum number of playlist	100 files (Up to 250 files can be stored in a single playlist.)



Icons on the Music List

When you select a music file from "MUSIC→MUSIC Player", the following icons are displayed:

Icon	Description
	Stored in the FOMA phone
	Stored on the microSD memory card
	SD-Audio file type
	Chaku-uta Full® file type
	WMA file type
	UIM restrictions function
	Chaku-uta Full® music file with playback restrictions
	Chaku-uta Full® music file with playback restrictions expired
	Playable Uta-hodai music file
	Uta-hodai music file which needs to be updated because the playable deadline has expired
	Uta-hodai music file not permitted to play back
	File with file restrictions

Icons on the Chaku-uta Full® Music List

When you select a Chaku-uta Full® music file from "Data box→MUSIC", the following icons are displayed:


Icon	Audio format	Type
	AAC, AAC+(HE-AAC), Enhanced aacPlus	MP4 file
	—	Partially saved Chaku-uta Full® music files

● Some Chaku-uta Full® music files and Uta-hodai music files have restrictions on the number of playbacks, playable deadline, or playable period. The following icons are added.

- File with playback restrictions "🔒"
- File with playback restrictions expired "🔒🕒"
- Playable Uta-hodai music file. "🎵🕒"
- Uta-hodai music file which needs to be updated because the playable deadline has expired "🎵🕒🔒"
- Chaku-uta Full® music file or Uta-hodai music file not permitted "✖"

You can check the playback restrictions for the file by "Music info".

● All Chaku-uta Full® music files are set with file restrictions. See page 146 for file restrictions.

Icon	Acquired source
	Sites

※ For the copyrighted file movable to the microSD memory card, "📁" is displayed.

Information

- Even when the file format is supported, you might not be able to play back some files.
- The information of the previously played music file is erased if you do the following operations:
 - When you remove/insert the microSD memory card
 - When you turn on/off the FOMA phone
 - When you execute "Reset settings" or "Initialize"
 - When you delete the previously played music file
 - When you delete the previously played playlist
 - When you do not insert the microSD memory card on which the previously played music file is stored
 - When you set "USB mode setting" to "microSD mode" or "MTP mode" and connect to a personal computer
 - When you played back a music file from other than a playlist last time, and then when you perform "Edit music info" or "Reset music info", or when you newly download, save or delete a Chaku-uta Full® music file
 - When the music file previously played is an Uta-hodai music file which needs to be updated because the playable deadline has expired
 - When the previously played music file is a WMA file and when you delete all the WMA licenses
 - When the WMA license becomes invalid
- Partially saved Chaku-uta Full® music files are not displayed when you operate from MUSIC Player.
- Note that the battery is consumed sooner if you perform the fast-forward and other similar operations frequently.
- In the following cases, the playback pauses and resumes after you finish each operation:
 - When you make/receive a voice call, videophone call, or PushTalk call
 - When you receive a mail message or Message R/F while "Receiving display" is set to "Alarm preferred" or the Stand-by display is shown
 - When an alarm tone of "Alarm", "Schedule", "ToDo", "Book program" or "Timer recording" sounds
 Depending on the event which occurred, the confirmation display might appear asking whether to end MUSIC Player.
- When a music file is switched to the previous or next one, the music file whose playable deadline or playable period has expired, or WMA file whose WMA license is deleted is skipped. When the Chaku-uta Full® music file has restrictions on the number of playbacks, the confirmation display appears asking whether to play it back regardless of the remaining number of playbacks. However, the music file whose number of playbacks has finished is skipped.

Function Menu of the Music Folder List/i-mode (Chaku-uta Full®) Folder List/Player Menu Display

Function menu	Operation/Explanation
Play mode setting	<p>▶ Select a play mode.</p> <p>Normal ... Plays back the music files sorted by type or in the playlist in order as listed. Finishes after the last music file is played back.</p> <p>Play only one ... Plays back the selected music file once.</p> <p>Repeat one ... Plays back the selected music file repeatedly.</p> <p>Repeat all ... Plays back the music files sorted by type or in the playlist in order as listed repeatedly.</p> <p>Random ... Plays back the music files sorted by type or in the playlist at random. Finishes after all the music files are played back.</p> <p>Random play&repeat ... Plays back the music files sorted by type or in the playlist at random repeatedly.</p>
Add folder	<p>▶ Enter a folder name.</p> <ul style="list-style-type: none"> • You can enter up to 10 full-pitch/20 half-pitch characters. • You can create a total of 25 folders at each level up to the second-tier level in the FOMA phone. You can create folders at each level up to the seventh-tier level on the microSD memory card.
Edit folder name	<p>▶ Enter a folder name.</p> <ul style="list-style-type: none"> • You can enter up to 10 full-pitch/20 half-pitch characters.
Delete folder	<p>You can delete a user folder and all Chaku-uta Full® music files in the folder.</p> <p>▶ Enter your Terminal Security Code ▶ YES</p>
Select storage	<p>You can set the destination folder for when you move the Chaku-uta Full® music file to the microSD memory card. You can set it for up to seventh-tier-level folders.</p> <p>▶ YES</p>
Memory info	<p>You can display the used memory space (estimate)/number of stored items.</p>

Information

<Add folder>


- You cannot create a user folder in the WMA folder.

<Delete folder>



- If you delete the Chaku-uta Full® music file set for another function, the setting returns to the default.

Information

<Select storage>

- “” is displayed for the folder set as a destination.
- When you execute Check microSD, or create or edit a folder by using a personal computer, the destination folder on the microSD memory card might be changed. When the setting is changed, set the destination folder again.

Function Menu of the Chaku-uta Full® Music List/ Type List/Music List/WMA List


Function menu	Operation/Explanation
Player menu	You can show the Player Menu display from the Type List or Music List.
Play mode setting	See page 327.
Set as ring tone	You can set a full piece of Chaku-uta Full® music file as a ring tone.
(Fullsong ring tone)	<p>▶ Fullsong ring tone ▶ Select an item.</p> <ul style="list-style-type: none"> • For the Chaku-uta Full® music files on the microSD memory card, the confirmation display appears asking whether to move it to the FOMA phone.
Set as ring tone	You can set a part of Chaku-uta Full® music file as a ring tone.
(Point ring tone)	<p>▶ Point ring tone ▶ Select a range to be set ▶ Select an item.</p> <ul style="list-style-type: none"> • You can check the range to be set by pressing  (Play). • For the Chaku-uta Full® music files on the microSD memory card, the confirmation display appears asking whether to move it to the FOMA phone.
Music info	<p>You can display the title, artist name, playback time, etc.</p> <ul style="list-style-type: none"> • Press  (FUNC) with the music information of Chaku-uta Full® music file displayed and select “Edit music info”; then you can edit the information contents. Select a desired item and then edit it. To return the edited information to the unedited one, select “Reset music info”. Select a desired item and select “YES”.

Add to playlist ▶ Select a storing method.

Add one to P-list

... You can store the music file.

Add some to P-list

... Select the music files to be stored, and press  (Finish).

- The music files are stored in the displayed order.

▶ Select a playlist you store music files to.

- If you create a new playlist and store music files to, select “New playlist”, then enter a playlist name.

Function menu	Operation/Explanation
Move	You can move the Chaku-uta Full® music file in the FOMA phone to another folder inside it, or can move the Chaku-uta Full® music file on the microSD memory card to another folder inside it. ▶ Select a destination folder. ● Press () to display folders at the second-tier level or lower, if they exist. Press (CLR) to return to the upper level.
Move to microSD	You can move the Chaku-uta Full® music file to the microSD memory card. (See page 298)
Move to phone	You can move the Chaku-uta Full® music file on the microSD memory card to the FOMA phone. (See page 298)
Edit title	You can edit the title of Chaku-uta Full® music file. ▶ Enter a title. ● For a Chaku-uta Full® music file in the FOMA phone, you can enter up to 9 full-pitch/18 half-pitch characters. ● For a Chaku-uta Full® music file on the microSD memory card, you can enter up to 18 full-pitch/36 half-pitch characters.
Reset title	You can reset the title of Chaku-uta Full® music file to "Title - Artist name". ▶ YES
Add folder	See page 327.
Edit folder name	See page 327.
Delete folder	See page 327.
Multiple-choice	You can select multiple Chaku-uta Full® music files and operate them. ▶ Put a check mark for Chaku-uta Full® music files to be operated ▶ () ▶ Select an item. Delete See "Delete this" on page 328. Move See page 328.
Connect to URL	You can access the URL when the Chaku-uta Full® music file has the URL information. ▶ YES
Display image	You can display jacket images stored in the music file. ● When multiple jacket images are stored, press to display a previous or next jacket image. ● When the image is storable, press (Save) and select "YES", then select any destination folder to save it.
Display lyric	You can display lyric images stored in the Chaku-uta Full® music file. ● When multiple lyric images are stored, press to display a previous or next lyric image. You can display up to seven lyric images. ● When the image is storable, press (Save) and select "YES", then select any destination folder to save it.

Function menu	Operation/Explanation
Select storage	See page 327.
Memory info	You can display the used memory space (estimate)/number of stored items.
DEL all licenses	You can delete the WMA license files. ▶ Enter your Terminal Security Code ▶ YES
Delete this	▶ YES
Delete all	You can delete all Chaku-uta Full® music files or WMA files in the folder. ▶ Enter your Terminal Security Code ▶ YES ● If there is a user folder in a folder, you cannot delete the user folder or Chaku-uta Full® music files in the user folder.

Information

<Set as ring tone>	<ul style="list-style-type: none"> When an Uta-hodai music file set for a ring tone cannot be played back, needs to be updated because the playable deadline has expired, or is set with UIM restrictions, the default ring tone returns. See "Music info" for checking whether to be set as ring tone.
<Add to playlist>	<ul style="list-style-type: none"> You cannot add music files to the playlist created using a personal computer.
<Reset title>	<ul style="list-style-type: none"> If there is no title or artist name, it is displayed as "Unknown" in each.
<Display image>	<ul style="list-style-type: none"> Some images may not be displayed correctly.
<Delete this> <Delete all>	<ul style="list-style-type: none"> If you delete the Chaku-uta Full® music file set for another function, the setting returns to the default. If you delete the WMA file stored in the WMA playlist, it is released from WMA playlist.

Function Menu during Playback/Pause/Halt

Function menu	Operation/Explanation
Player menu	You can show the Player Menu display from the playback display during using MUSIC Player. ● Playback state continues even when you show the Player Menu display.
Play mode setting	See page 327.
Sound effect (Remaster)	You can bring the sound from an earphone or Bluetooth device to the original sound by complementing high-pitch range lost at data compression. ▶ Remaster ▶ ON or OFF

Function menu	Operation/Explanation
Sound effect (Listening)	<p>You can set sound effect for listening.</p> <p>▶ Listening ▶ Select an item.</p> <p>Surround Makes the sound natural and stereophonic.</p> <p>Natur 1/2 Complements the cooped-up feeling specific to earphones and plays back natural sound. Select 1 or 2 according to your taste.</p> <p>OFF Sets Listening to "OFF".</p> <p>● "Natur 1/2" is effective for the sound from an earphone or Bluetooth device.</p>
Sound effect (Equalizer)	<p>You can change the quality of sound from an earphone or Bluetooth device.</p> <p>▶ Equalizer ▶ Select an item.</p> <p>Normal Reproduces normal sound quality.</p> <p>S-XBS1 Enhances bass sound.</p> <p>S-XBS2 Enhances bass sound more deeply than S-XBS1.</p> <p>Train Minimizes abnormal sound that causes sound leakage.</p>

Music info See page 327.

Connect to URL See page 328.

Display image/Display lyric You can display jacket images or lyric images stored in the music file.

Previous image/Previous lyric You can display a previous jacket image or lyric image.

Next image/Next lyric You can display a next jacket image or lyric image.

Information

<Sound effect>

- Even if an earphone or Bluetooth device is not connected, the respective setting contents are displayed on the display.

<Display image/Display lyric> <Previous image/Previous lyric> <Next image/Next lyric>

- For Chaku-uta Full® music files, you can display up to 3 jacket images and up to 7 lyric images.
- For SD-Audio files saved by SD-Jukebox, you can display up to 20 jacket images, and for WMA file, you can display up to 2 image buried in a file. When you use the Napster® application program, you can display 1 image stored as a jacket image. There are no lyric images for them.

Using Playlist

You can create the list of music files you want to listen to, and play them back in the order you like. You can play back using the playlists created by the FOMA phone or Windows Media Player, or the SD-Audio playlists created by SD-Jukebox.

- The maximum number of playlists that can be created and the number of music files that can be stored per playlist are as follows:

Creating source	Number of playlist	Number of music files that can be stored per playlist
Playlists created by FOMA phone	Maximum 30 (Except "All tracks")	100
Playlists created by Windows Media Player	Maximum 100	250
SD-Audio playlists created by SD-Jukebox	Maximum 99 (Except "All tracks")	99

- When you create a playlist on the FOMA phone, you can store the Chaku-uta Full® music files saved on the FOMA phone or microSD memory card, the WMA files saved by Windows Media Player, and the SD-Audio files saved by SD-Jukebox into the same playlist.

Icons on the Playlist List

Icon	Type
	All tracks
	All tracks for SD-Audio
	FOMA playlist
	SD-Audio playlist
	WMA playlist

Create Playlist

1 **Player Menu display** ▶ **Playlist/SD-Audio**



2 (FUNC) ▶ **Create playlist**

▶ **Select a type and display the Music List**

▶ **Put a check mark for music files to be stored** ▶ (Finish)

- The music files are stored in the displayed order.

3 Enter a playlist name.

- You can enter up to 18 full-pitch/36 half-pitch characters.


Information

- In a playlist, you cannot store partially saved Chaku-uta Full® music files or files with playback restrictions expired.

Play Back Playlist


1 Playlist List ▶ Select a playlist


▶ Select a music file.

- Press  (Play) from the Playlist List to play back the music files from the top one in the selected playlist.
- You cannot play back a playlist from "MUSIC" of Data Box.



Function Menu of the Playlist List

Function menu	Operation/Explanation
Player menu	You can show the Player Menu display.
Play mode setting	See page 327.
Create playlist	See page 329.
Copy playlist	<p>▶ Enter a playlist name.</p> <ul style="list-style-type: none"> • You can enter up to 18 full-pitch/36 half-pitch characters. • When you copy the SD-Audio playlist or WMA playlist, it is copied to the FOMA phone as the FOMA playlist.
Edit playlist name	<p>You can edit the name of the FOMA playlist.</p> <p>▶ Edit the playlist name.</p> <ul style="list-style-type: none"> • You can enter up to 18 full-pitch/36 half-pitch characters.
Add	<p>You can add the music files to the FOMA playlist.</p> <p>▶ Select a type and display the Music List</p> <p>▶ Put a check mark for the music files to be added ▶  (Finish)</p> <ul style="list-style-type: none"> • The music files are stored at the end of the list in the displayed order.





Function menu	Operation/Explanation
Delete playlist	<p>You can delete the FOMA playlist.</p> <p>▶ Select a deleting method.</p> <p>Delete this</p> <p>... You can delete the playlist.</p> <p>Delete selected</p> <p>... Select the playlists to be deleted, and press  (Finish).</p> <p>Delete all</p> <p>... Enter your Terminal Security Code.</p> <p>▶ YES</p>

Information

<Copy playlist>

- You cannot copy the WMA playlist with no music files stored.

Function Menu of the Music List of a Playlist

Function menu	Operation/Explanation
Player menu	<p>You can display the Player Menu display.</p> <ul style="list-style-type: none"> • Playback state continues even when you show the Player Menu display.
Play mode setting	See page 327.
Music info	See page 327.
Add	See page 330.
DEL from playlist	<p>You can release the music files from the FOMA playlist.</p> <p>▶ Select a deleting method.</p> <p>DEL one from list</p> <p>... You can release the music file.</p> <p>DEL some from list</p> <p>... Select the music files to be released, and press  (Finish).</p> <p>DEL all from list</p> <p>... You can delete the whole playlist.</p> <p>▶ YES</p>
Order to play	<p>You can change the order of playlist created on the FOMA phone.</p> <p>▶ Select a file whose position is to be changed ▶ Use  to change the position of the music file ▶  (Select)</p> <p>Repeat the above procedure to change the order of the music files.</p> <p>▶  (Set)</p>
Add to playlist	See page 327.
Display image	See page 328.
Display lyric	See page 328.

Information

<DEL from playlist>

- You cannot release music files from the playlists created on a personal computer.

Other Convenient Functions



Multiaccess	⟨Multiaccess⟩	332
Multitask.....	⟨Multitask⟩	332
Informing You of an Incoming Call/Mail Message by Voice	⟨Reading Aloud⟩	333
Turning Power On/Off Automatically at a Specified Time.....	⟨Auto Power ON/OFF⟩	335
Using Alarm.....	⟨Alarm⟩	335
Using Calendar to Manage Schedule	⟨Schedule⟩	337
Using ToDo to Manage Schedule	⟨ToDo⟩	340
Setting Operating Conditions of Alarm.....	⟨Alarm Setting⟩	341
Using Your Original Menu	⟨Private Menu Setting⟩	341
Storing Your Name, Mail Address and Other Information.....	⟨Own Number⟩	342
Recording Voice during a Call or Standby as Voice Memo	⟨Voice Memo during a Call⟩ ⟨Voice Memo⟩	343
Recording Images during a Videophone Call as a Movie Memo	⟨Movie Memo⟩	343
Checking Call Duration and Cost	⟨Call Data⟩	343
Resetting Total Duration/Total Cost	⟨Reset Total Cost&Duration⟩	344
Setting Call Cost Limit	⟨Notice Call Cost⟩	344
Using Calculator	⟨Calculator⟩	345
Making Text Memos	⟨Text Memo⟩	345
Copying/Deleting Data Items in FOMA Phone or UIM	⟨UIM Operation⟩	345
Making/Receiving Calls Using Flat-plug Earphone/Microphone with Switch		346
Selecting a Call Destination when Earphone is Connected	⟨Headset Switch to Call⟩	347
Answering a Call Automatically when Earphone is Connected	⟨Auto Answer Setting⟩	347
Using Bluetooth.....	⟨Bluetooth⟩	348
Resetting Function Settings.....	⟨Reset Settings⟩	354
Deleting Stored Data All at Once.....	⟨Initialize⟩	354

<Multiaccess>

Multiaccess

Multiaccess enables you to simultaneously connect to three lines; a voice call, packet communication, and SMS. To switch the displays, press and hold **(MULTI)** for at least one second; or press **(MULTI)** to switch from TASK MENU. (See page 333)

See page 418 for details on combination of Multiaccess.

Voice call	Single line
i-mode, i-oppki, i-mode mail, packet communication via PC	Single line
SMS	Single line

Information

- You are charged a fee for each line during Multiaccess.

Make a Voice Call during i-mode or during Packet Communication

You can make a voice call without disconnecting i-mode or packet communication.

1 During i-mode or packet communication

▶ **(MULTI)** ▶ Stand-by display

The Stand-by display appears.

2 Make a call.

- If you make a videophone call during i-mode, i-mode is disconnected and the videophone call is made. After you finish the videophone call, the i-mode display returns.

Receive a Voice Call during i-mode or during Packet Communication

You can receive a voice call without disconnecting i-mode or packet communication.

1 The Call Receiving display appears when a call comes in ▶ Press **(CALL)** to answer the call.

- To return to the display for i-mode or packet communication without answering the call, press and hold **(MULTI)** for at least one second. Press and hold **(MULTI)** for at least one second again to return to the Call Receiving display. The caller hears not a message but a ringing tone.

Use Communication during Voice Call

You can use i-mode, send/receive i-mode mail, etc. without disconnecting a voice call.

1 During a voice call ▶ **(MULTI)** ▶ **(MENU)** ▶ **(Menu)**

Select an icon to operate each function.

Information

- When a mail message or Message R/F comes in during a call, the ring tone does not sound and illumination does not flicker regardless of the "Receiving display" setting.

Information

- A ring tone sounds and the Receiving Result display appears when "Receiving display" is set to "Alarm preferred" except for the following cases:
 - During a call
 - While a camera is activated
 - When an i-oppki program set for the Stand-by display is running as an ordinary i-oppki program
- When you perform packet communication via a personal computer, make a call-out operation from the personal computer during a voice call.

<Multitask>

Multitask

The FOMA phone supports "Multitask" that enables you to use up to three functions such as menu functions (see page 31) at the same time. By combining Multiaccess and Multitask, you can use following functions simultaneously (see page 419 for the combination patterns of Multitask):

■ Mail group

i-mode mail and SMS functions

■ i-mode group

Menu functions inside "i-mode group" on Main Menu

■ Setting group


Menu functions inside "Setting group" on Main Menu

■ Tool group

Menu functions inside "Tool group" on Main Menu

■ Other functions which do not belong to the groups


Voice call, videophone call, 64K data communication, etc.

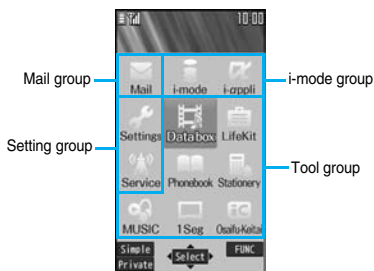

Start Another Function

1 When a function is running ▶ **(MULTI)** ▶ **(MENU)** ▶ **(Menu)** ▶ Start another function.

For the icon of the group in use, "∨" or another mark is added. When a single function is used, "☐" is displayed. When multiple functions are used, "☐" is displayed.

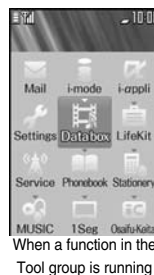

When a function in the Tool group is running

■ If another menu function in the same group has already been called up

The confirmation display appears asking whether to switch the functions. Select "YES" to close the current menu function and the new menu function will be called up.

Information

- You are charged a call fee even when you are running other functions during a call.
- If a call comes in while another function is working, the call might not be received correctly. In that case, "Record message" or "Call Forwarding Service" may start in a shorter time than the ring time specified for them.
- If you use Multitask to switch functions while executing another function whose load of processing is high, delay may occur in displaying operation, and so on.

 
Switch Displays

When multiple menu functions are working, you can switch the displays by pressing and holding **(MULTI)** for at least one second. The display switches from the latest one in chronological order.

■ To display the menu list for functions in use

Press **(MULTI)**.

You can switch functions by selecting a function from the list. Select "Open Menu" to show Main Menu, and select "Stand-by display" to show the Stand-by display.



Information

- Even if you press **(MULTI)** to switch the displays, neither menu function in use is closed nor the call is disconnected. Also, even when you switch the Character Entry display (see page 356) to another menu and use that menu for editing text, you can continue editing the previous text if you switch tasks.
- If you press and hold **(MULTI)** for at least one second from the Stand-by display while another function is not working, the setting display for "Switch 3G/GSM" appears.

Exit a Function

To close a menu function, press **(END)** with the menu function displayed.

- Press **(END)** from TASK MENU, and select "YES" to close all menu functions and to return to the Stand-by display.
- When you press **(END)** from the Stand-by display during Play Background, the confirmation display appears asking whether to end the menu function.

<Reading Aloud>

Informing You of an Incoming Call/Mail Message by Voice

You can set to be notified of incoming calls by voice instead of a ring tone, or to have the mail contents automatically read aloud. Further, the voice guidance instructs you through the operations of Voice Dial or Search by Voice. This function is available in Japanese Mode only.

Read Aloud Settings

- (MENU)** ▶ Settings ▶ Other settings
▶ Voice settings ▶ Read aloud settings
▶ ON or OFF ▶ Put a check mark for items to be read aloud ▶ **(Finish)**

Voice dial

... Instructs you through the Voice Dial operation by voice guidance.

Search by voice

... Instructs you through the Voice Search operation by voice guidance.

Incoming call

... Notifies you of the caller information by voice while a voice call is coming in.

Videophone incoming

... Notifies you of the caller information by voice while a videophone call is coming in.

Number of mails/msgs.

... Notifies you of the number of mail messages/ Messages R/F by voice at reception. The setting of "Mail/Msg. ring time" is invalid.

Mail list

... Reads aloud the sender/destination address and subject on the Inbox/Outbox List.

Displaying mail

... Reads aloud the sender/destination address, subject, and text on the detailed mail display. However, the voice guidance is not provided when a melody is automatically played back while "Auto melody play" is set to "ON".

Send mail preview


... Reads aloud the destination address and text when previewed.

- You can stop the voice guidance for a mail message midway by pressing any key. However, it continues if you scroll the display.
- The voice guidance for a mail message is not provided while the audio from a One Seg program is played back or when you display a mail message stored on the microSD memory card.

Read Aloud Volume

- (MENU)** ▶ Settings ▶ Other settings
▶ Voice settings ▶ Read aloud volume
▶ Use **(Volume)** to adjust the volume.

Read Aloud Speed

- 1  ► **Settings** ► **Other settings**
► **Voice settings** ► **Read aloud speed**
► **Select a speed.**

Read Aloud Output

You can set whether to play back the voice guidance from the speaker or hear it from the earpiece.


- 1  ► **Settings** ► **Other settings**
► **Voice settings** ► **Read aloud output**
► **Speaker or Earpiece**

Information

- The voice guidance of “Incoming call”, “Videophone incoming” and “Number of mails/messages.” is output from the speaker even when this function is set to “Earpiece”.
- When the Flat-plug Earphone/Microphone with Switch (option) is connected, the voice guidance is output according to the setting of “Headset usage setting”. However, when “Read aloud output” is set to “Earpiece” and “Headset usage setting” is set to “Headset + speaker”, the voice guidance is output from the earphone except for “Incoming call”, “Videophone incoming” and “Number of mails/messages”.
- From a Hands-free device, the voice guidance for “Incoming call” and “Videophone incoming” only might be provided.
- You might not be able to stop the voice guidance even by pressing the switch of the Flat-plug Earphone/Microphone with Switch (option).

Read Aloud Valid Setting

You can set the voice guidance to be provided only when the Flat-plug Earphone/Microphone with Switch (option) is connected.

- 1  ► **Settings** ► **Other settings**
► **Voice settings** ► **Read aloud valid set.**
► **Normal or Earphone**

Normal . . . Always provides the voice guidance.

Earpiece . . . Provides the voice guidance only when the Flat-plug Earphone/Microphone with Switch is connected.

Information

- When you set to “Earpiece”, the voice guidance continues even if you remove the Flat-plug Earphone/Microphone with Switch during the voice guidance. When a call comes in while the Flat-plug Earphone/Microphone with Switch is removed, the voice guidance does not start even if you connect it.

Rules of Voice Guidance

The contents of Phonebook entries and mail messages are read aloud generally according to the rules as described below:

- They may not be read aloud as specified in the following rules depending on the function you use:

<Numerics>

- A numeric string up to 16 digits is read aloud as a number. When a numeric string begins with “0” or it is identified as a URL or mail address, it is read aloud digit by digit.
- When numerals are separated by “/” or “.”, they are read aloud as dates.
- “1日” is differently read aloud for the meaning of the date (1st date of a month) and for others. The kanji characters of dates other than “1日” are always read aloud as for the dates.
- When numerals are separated by “:”, they are read aloud as time.
- “-”, “(” and “)” contained in a phone number or zip code are not read aloud, and numbers only are read aloud.
- When a numeric string begins with “¥”, “\$”, “Φ”, or “£”, it is read aloud as the meaning of money amount. When “.” is used, the numeric string before “.” is identified as money amount and that after “.” is identified as a number, unless it is separated by every three digits.
- “(Numeral) 分の (numeral)” is read as a fraction.

<Alphabet>

- Alphabetical letters are read aloud according to the voice guidance dictionary pre-installed in the FOMA phone.
- When a word consists of four or more letters and can be read in romaji-reading, it is read aloud in romaji-reading.
- The alphabetical letters after a numeral might be read aloud as a unit.
- “M”, “T”, “S”, and “H” before a date are converted to the Japanese era name and then read aloud.
- Alphabetical letters other than above are read aloud in alphabetical reading.

<Symbol>

- Symbols are read aloud according to the Symbol List. When the same symbol continues three times or more, that symbol is not read aloud.
- “ハンシ” is read aloud for the following character strings: “Re:”, “Re>”, “Re2:”, “Re2>” and “Re2”
- “テンソ” is read aloud for the following character strings: “Fw:”, “Fw>”, “Fw2:”, “Fw2>”, “Fw2””, “Fwd:”, “Fwd>”, “Fwd2:”, “Fwd2>” and “Fwd2”
- When symbols for “Reply” or “Forward” are consecutively repeated, they are read aloud only once.

<Pictograph>

- Pictographs are read aloud according to the Pictograph List.

<Smiley>

- Smileys are read aloud according to the voice guidance dictionary pre-installed in the FOMA phone. When they are identified as a URL or mail address, however, they are read aloud as symbols.

<Other items>

- Texts are read aloud separated by punctuation marks and symbols such as “!” or “?”.
- When the kanji character that expresses the day of the week is put between “(” and “)”, it is read aloud as the day of the week.
- Words might not be correctly read aloud depending on the context of the text (especially place names and proper nouns).

Turning Power On/Off Automatically at a Specified Time

1 [MENU] ▶ Settings ▶ Clock ▶ Auto power ON/OFF

▶ Auto power ON or Auto power OFF

▶ Select an item.

OFF . . . Does not set Auto Power ON/OFF. The setting is completed.

1 time . . . Sets to turn on/off the power automatically at the specified time only once.

Daily . . . Sets to turn on/off the power automatically at a specified time everyday repeatedly.

2 Enter a time.

Information

- When you set "Auto power ON" and "Auto power OFF" to the same time, and the specified time arrives, the FOMA phone will turn on if it is turned off, and the FOMA phone will turn off, if it is turned on.
- When you set "Auto power OFF" to the same time of an alarm, schedule alarm, or others, those alarms preferentially work.
- Even when you set "Auto power OFF", the power does not turn off at the specified time if other than the Stand-by display is displayed. The power turns off after the function in working is finished. When you set a Flash movie as the Stand-by display, the power might not be turned off while the Flash movie is moving.
- Turn off the FOMA phone after setting "Auto power ON" to "OFF" when you are near electronic devices using high-precision control or weak signals, or where the use is prohibited such as in airplanes and hospitals.


Using Alarm

You can set Alarm to alert you at the specified time with an alarm tone, animation and illumination. You can store up to five alarms.

1 [MENU] ▶ Stationery ▶ Alarm

▶ Highlight an alarm and press [Edit]

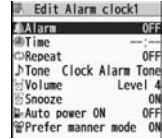

▶ Do the following operations.





Item	Operation/Explanation
(Alarm)	You can set whether to validate or invalidate the alarm. ▶ ON or OFF
(Time)	▶ Enter the time for sounding the alarm. • You cannot set the same time as the time set for the stored alarm.
(Repeat)	▶ Select a type of repeat. • If you select "1 time", the alarm is not repeated. • If you select "Select day", put a check mark for days of the week to be set and press [Finish].
(Tone)	▶ Select a type of alarm tone ▶ Select a folder ▶ Select an alarm tone.
(Volume)	▶ Use [Volume] to adjust the volume. • If you set "Step", the alarm tone is silent for about three seconds, and then the volume steps up every about three seconds, from Level 1 through Level 6.
(Snooze)	You can set whether to activate Snooze. If you set to "OFF", set the duration that the alarm tone is to continue sounding. ▶ ON or OFF ▶ Enter a ring time (minutes). • You can enter from "01" through "10" in two digits. • See page 336 for how Snooze works.
(Auto power ON)	You can set whether to turn on the power automatically to make an alarm sound when the alarm time arrives during power off. ▶ ON or OFF
(Prefer manner mode)	You can set the alarm tone which sounds at the specified time during Manner Mode. ▶ ON or OFF ON . . . Sounds at the same volume as set for "Alarm volume" on page 103. OFF . . . Sounds at the volume set for this function.

2 Press (Finish).

The following icon appears on the display depending on the setting:

- : Repeats daily.
- : Repeats on the specified day of the week.

Function Menu while Alarm is displayed


Function menu	Operation/Explanation
Edit	Go to step 1 of "Using Alarm" on page 335.
Detail	You can display the stored alarm contents.
Set this	You can validate the stored alarm. ▶ YES ● You can validate also by pressing  .
Set all	You can validate all the stored alarm. ▶ YES
Release this	You can invalidate the stored alarm. ▶ YES ● You can invalidate also by pressing  .
Release all	You can invalidate all the stored alarm. ▶ YES


Information

- If the alarm tone sounds during a call, press any key to stop it. Once again press any key to end the alarm including Snooze. If the other party on the phone hangs up, an alarm including Snooze ends.
- During a call, the alarm tone sounds at the level set for "Volume" (earpiece volume).
- If any of the following events occurs in Snooze state, Snooze is released:
 - When you receive a voice call, videophone call, or PushTalk call
 - When you receive a mail message or Message R/F while "Receiving display" is set to "Alarm preferred"
 - When you receive a location provision request while "Location request menu" or the setting by service is set to other than "OFF"
 - When an alarm tone of "Schedule", "ToDo", "Book program" or "Timer recording" sounds.
- When you set the power to automatically turn on and an alarm to sound, the default alarm tone sounds if the alarm which is set with the UIM restrictions has been selected.
- Turn off the FOMA phone after setting "Auto power ON" to "OFF" when you are near electronic devices using high-precision control or weak signals, or where the use is prohibited such as in airplanes and hospitals.

■ When you set an alarm for "Alarm", "Schedule", and "ToDo"

The icon appears on the desktop.

 . . . Displayed when an alarm is set for today (except the setting for past time).


 . . . Displayed when an alarm is set for tomorrow or onward only.

- If you set "Display setting"→"Clock"→"Clock display" to "OFF", or set "Alarm" of the stored schedule event/ToDo item to "OFF", the icons are not displayed.

■ When the time specified for "Alarm", "Schedule" or "ToDo" comes

The alarm sounds for about five minutes (in the case of "Alarm", the alarm sounds for specified time), and illumination lights. The vibrator works as you set for "Phone" of "Vibrator". The set alarm message and an animation or i-motion movie linking to the selected icon appear on the display.

- If you set "Snooze" of "Alarm" to "ON"

The alarm sounds for about one minute at an interval of five minutes, up to six times, until Snooze is released by pressing .

- During a call

The alarm sounds from the earpiece three times repeatedly.

- During operations

The FOMA phone works according to the setting of "Alarm setting". (See page 341)

- When you set an alarm to the time of another alarm

The alarm sounds in the following priority order of "Alarm" →"Timer recording"→"ToDo"→"Schedule"→"Book program". A missed schedule event or ToDo is notified by the "Missed alarm" icon.

- When the power is turned off
<Alarm>

When "Auto power ON" is set to "ON", the power automatically turns on to make an alarm notification sound. When the auto-power setting is set to "OFF", an alarm does not sound with the power stayed off. Even after turning the power on, the "Missed alarm" icon is not displayed.

<Schedule/ToDo>

The alarm does not sound.

The "Missed alarm" icon is not displayed even after turning the power on.

- In Manner Mode


The vibrator and illumination light notify you. For Schedule/ToDo, a message is also displayed. The alarm sounds at the volume set for Manner Mode. (See page 103)

- During Lock All, Personal Data Lock or Omakase Lock
The alarm does not sound.
After releasing each lock, the “Missed alarm” icon is displayed to inform you of the missed alarm. Further, if the power is turned off, the power does not turn on and the “Missed alarm” icon does not appear even after releasing each lock.
- While SD-PIM is activated, during infrared data exchange, or during iC communication
The alarm does not sound.
After each function is finished, the “Missed alarm” icon is displayed.
- While updating a software program
The alarm does not sound.
When the specified time comes during rewriting the software program, the “Missed alarm” icon is not displayed even after updating is completed.

Information

- If you set “Alarm setting” to “Alarm preferred” and the alarm time has come when you are dialing, the alarm sounds after calling up the other party. If the alarm time has come when receiving a call, the alarm sounds after starting communication.
- You might not be able to set some i-motion movies or Chaku-uta Full® music files for the alarm.
- Some i-motion movies set for the alarm might be played back only with sound at the specified time.
- The Chaku-uta Full® music file set for the alarm is played back only with sound at the specified time.
The illumination for when you play back a demo to select an alarm tone might differ from for when you are notified by an alarm.

■ To clear alarm tone/alarm message, and animation/i-motion movie from the display

Press any key to stop the alarm tone but the animation/i-motion movie changes to a still image and the alarm message remains displayed. Press any key again (press  if you set “Snooze” of “Alarm” to “ON”) to clear the display. However, you cannot clear the alarm message for the schedule event or ToDo item by pressing a side key, with the FOMA phone closed. When a call comes in, the alarm stops sounding.

■ When “Alarm” did not work

“Missed alarm” icon is displayed on the desktop. You can check that icon for the contents of the missed alarm (Missed alarm information).

The latest missed alarm information that could not be notified is displayed.

Using Calendar to Manage Schedule

You can display the calendar by month or week to check the stored schedule events.

You can display or store from January 1, 2000 through December 31, 2037.







- See page 336 for how alarm works.

Store Schedule Events

When the specified date and time come, an alarm tone, an illumination, alarm message (summary or contents of the schedule event) and an animation corresponding to the set icon notify you of the schedule event.

You can store up to 1,000 schedule events.

- 1  ▶ Stationery ▶ Schedule ▶  (New)  ▶ Schedule ▶ Do the following operations.

Item	Operation/Explanation
 (Edit summary)	<p>▶ Select an icon.</p> <ul style="list-style-type: none"> ● When the alarm tone alerts you, the animation corresponding to the selected icon is displayed. <p>▶ Enter the summary of the schedule event.</p> <ul style="list-style-type: none"> ● You can enter up to 20 full-pitch/40 half-pitch characters. ● A summary corresponding to the selected icon is entered in advance.
 (Whole day)	<p>You can set whole day schedule without entering starting and ending date/time.</p> <p>▶ OFF or ON</p> <ul style="list-style-type: none"> ● If you set to “ON”, the alarm sounds at 12 a.m.
 [Date (from)]	▶ Enter the date and time for starting the schedule.
 [Date (to)]	▶ Enter the date and time for ending the schedule.
 (Repeat)	<p>▶ Select a type of repeat.</p> <ul style="list-style-type: none"> ● If you select “1 time”, the alarm is not repeated. ● If you select “Select day”, put a check mark for days of the week to be set and press  (Finish). ● The schedule event set with repetition is counted as one event.

Item	Operation/Explanation
(Alarm)	<p>▶ Select an alarm method.</p> <p>ON . . . Alerts you at the time of the starting date/time you set. The setting for alarm notification is completed.</p> <p>ON/Set time Alerts you at the time set as the prenotification.</p> <p>OFF . . . Does not alert. The setting for alarm notification is completed.</p> <p>▶ Enter how many minutes before the specified time to be alerted.</p> <ul style="list-style-type: none"> You can enter from "01" through "99" in two digits.
(Tone)	<p>▶ Select a type of alarm tone</p> <p>▶ Select a folder ▶ Select an alarm tone.</p>
(Contents)	<p>▶ Enter schedule contents.</p> <ul style="list-style-type: none"> You can enter up to 256 full-pitch/512 half-pitch characters.

2 Press (Finish).

- The following icons appear on the display depending on the setting:

- : Alarm sounds.
- : Repeats daily.
- : Repeats on the specified day of the week.
- : Repeats monthly.
- : Repeats yearly.

■ When you attempt to set two schedule events to the same date and time

You can set the schedule events to the same setting time only by a combination of "1 time" and "Daily/Select day/Monthly/Yearly" for "Repeat". When both two events are set to "1 time" or "Daily/Select day/Monthly/Yearly", the confirmation display appears asking whether to overwrite on each.

When one event is set to "1 time" and the other is set to "Daily/Select day/Monthly/Yearly", the confirmation display appears telling that "1 time" has priority.

Information

- If you enter a date on or after 29th in "Date (from)" and set "Repeat" to "Monthly", the schedule event is set on the last day of the month when the month does not have the specified date.
- If you enter February 29 of the leap year in "Date (from)" and set "Repeat" to "Yearly", the schedule event is set on February 28 when the year is not the leap year.
- For the schedule event stored as secret data, an animation for secret data appears when the alarm sounds in ordinary mode (not in "Secret mode" or "Secret data only"). An alarm message is not displayed.
- During standby, the alarm tone sounds at the level set for "Phone" of "Ring volume". During a call, the alarm tone sounds at the level set for "Volume" (earpiece volume).

Store Holidays/Anniversaries

You can store up to 100 holidays and anniversaries; one each per day.

- ▶ **Stationery** ▶ **Schedule** ▶ (New)
 - Holiday or Anniversary**
 - Do the following operations.**

Item	Operation/Explanation
(Date setting)	▶ Enter the date.
(Repeat)	<p>▶ Select a type of repeat.</p> <ul style="list-style-type: none"> If you select "1 time", the holiday/anniversary is not repeated. The holiday or anniversary set with repetition is counted as one event.
(Contents)	<p>▶ Enter the contents of the holiday or anniversary.</p> <ul style="list-style-type: none"> You can enter up to 10 full-pitch/20 half-pitch characters.


2 Press (Finish).

- The holiday () or anniversary () you set is stored.
- : Repeats yearly.


Check Schedule Events

You can check the details of schedule events, holidays, or anniversaries.

1 ▶ **Stationery** ▶ **Schedule**

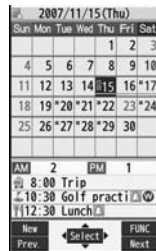

Calendar display
(Monthly display)

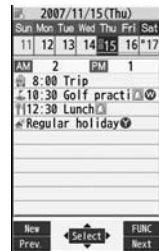

Calendar display
(Weekly display)

The Calendar display appears.

- Today and the selected date are highlighted and the number of stored schedule events and the contents of the day are displayed at the bottom of the display.
- Display on the calendar
 - (blue): Schedule set for a.m.
 - (orange): Schedule set for p.m.
 - : Schedule continues two days or more
- Holidays are displayed in red, and anniversaries are marked with a red circle.
- If you press (Prev) or (Next) from the monthly display, the calendar for the previous or next month is displayed.
- If you press (Prev) or (Next) from the weekly display, the calendar for the previous or next week is displayed.

2 Select a date.

The Schedule List for the selected date is displayed.



3 Select a schedule event, holiday, or anniversary.



Detailed Schedule display

Information

- National holidays on the calendar are conformance with “Law on National Holidays and the partially amended version of the Elder Law” (up to No.43, 2005). Spring Equinox Day and Autumn Equinox Day are announced on the official gazette of February 1 in the previous year, therefore, they may differ from the days on the calendar. (As of October 2007)

Function Menu of the Calendar Display

Function menu	Operation/Explanation
New	<p>▶ Select an item.</p> <p>Schedule Go to step 1 on page 337.</p> <p>Holiday Go to step 1 of “Store Holidays/Anniversaries” on page 338.</p> <p>Anniversary Go to step 1 of “Store Holidays/Anniversaries” on page 338.</p>
Monthly display/	You can switch the Calendar displays.
Weekly display	▶ Monthly display or Weekly display
Icon display	<p>▶ Select an icon to be displayed.</p> <p>The Schedule Event List for the selected icon is displayed.</p> <ul style="list-style-type: none"> ● Select a schedule event to display the details.
No. of schedules	You can display the number of schedule events, holidays, and anniversaries. You can display the number of the schedule events stored as secret data during Secret Mode or Secret Data Only.
Add desktop icon	See page 114.
Send all Ir data	See page 305.
All transmission	See page 307.

Function menu	Operation/Explanation
Delete past	You can delete the schedule events, holidays or anniversaries stored for up to a preceding day of the selected day. ▶ Select an item to be deleted ▶ YES
Delete all	You can delete all the schedule events, holidays or anniversaries. ▶ Enter your Terminal Security Code ▶ Select an item to be deleted ▶ YES ● When you delete all holidays, the setting for national holidays will be reset.
Reset holiday	You can restore the national holidays you deleted to its default. You cannot reset the holidays you have set. ▶ YES

Information

<Icon display>

- On the Icon display, the schedule set with repetition is displayed as a single event. For the date, the nearest date of the schedule event is displayed.

Function Menu of the Schedule List/Detailed Schedule Display

Function menu	Operation/Explanation
New	<p>▶ Select an item.</p> <p>Schedule Go to step 1 on page 337.</p> <p>Holiday Go to step 1 of “Store Holidays/Anniversaries” on page 338.</p> <p>Anniversary Go to step 1 of “Store Holidays/Anniversaries” on page 338.</p> <ul style="list-style-type: none"> ● You can store also by pressing (New) from the Schedule List.
Edit	<p>Go to step 1 on page 337 for the schedule event. Go to step 1 of “Store Holidays/Anniversaries” on page 338 for the holiday and anniversary.</p> <ul style="list-style-type: none"> ● You can edit also by pressing (Edit) from the detailed Schedule display. ● You cannot edit national holidays.
Copy	<p>You can copy the schedule event, holiday or anniversary and store it for another date.</p> <p>▶ Enter the date and time you are pasting to.</p> <p>Go to step 1 on page 337 for the schedule event. Go to step 1 of “Store Holidays/Anniversaries” on page 338 for the holiday and anniversary.</p> <ul style="list-style-type: none"> ● Even if “Repeat” of the copy source is set to “Daily/Select day/Monthly/Yearly”, the pasted one is set to “1 time”. ● You cannot copy national holidays.
Calendar display	You can return to the Calendar display from the Icon display. You can operate this only when the Icon display is displayed.
Icon display	See page 339.

Function menu	Operation/Explanation
Set secret/Release secret	You can have the schedule event set to or release from secret. ▶ YES ● When you select "Set secret" in ordinary mode (not in "Secret mode" or "Secret data only"), enter your Terminal Security Code.
Compose message	You can compose an i-mode mail message whose text contains the date and contents of the schedule event. Go to step 2 on page 172.
Attach to mail	You can attach the schedule event to an i-mode mail message to send. Go to step 2 on page 172. ● You can attach it to an i-mode mail message also by pressing () from the detailed Schedule display.
Send lr data	See page 305.
Send all lr data	See page 305.
transmission	See page 306.
All transmission	See page 307.
Copy to microSD	See page 295.
Delete this	▶ YES ● If you delete a schedule event, holiday or anniversary set for repeat, the all data items set for repeat will be deleted. ● You can delete national holidays only by "Delete this".
Delete past	See page 339.
Delete select	▶ Put a check mark for schedule events to be deleted ▶ (Finish) ▶ YES
Delete all	You can delete all schedule events, holidays or anniversaries. You can operate this only when the Icon display is displayed. (See page 339)

<ToDo> MENU 9 5 Using ToDo to Manage Schedule

You can manage your schedule events in the list and make an alarm tone sound when the specified time comes. You can store up to 100 ToDo items to manage your schedule.

● See page 336 for how alarm works.

1 ▶ **Stationery** ▶ **ToDo** ▶ (**New**)

▶ Do the following operations.

- You can check the stored contents by selecting a stored ToDo item, and you can edit it by pressing (**Edit**).

Item	Operation/Explanation
(Edit ToDo)	▶ Enter ToDo contents. ● You can enter up to 100 full-pitch/200 half-pitch characters.

Item	Operation/Explanation
(Due date)	▶ Select an item. Enter date Enter the date (due date) directly. Choose date Select a date (due date) from the calendar. Check the date and press (Set). No date ... Does not set the date (due date). The alarm does not work.
(Priority)	▶ Select a priority. ● If you sort the items in due date order, the items for the same date are displayed from the higher priority.
(Category)	▶ Select a category.
(Alarm)	▶ Select an alarm method. ON ... Alerts you at the set time. The setting for alarm notification is completed. ON/Set time Alerts you at the time set as the prenotification. OFF ... Does not alert you. The setting for alarm notification is completed. ▶ Enter how many minutes before the specified time to be alerted. ● You can enter from "01" through "99" in two digits.
(Tone)	▶ Select a type of alarm tone ▶ Select a folder ▶ Select an alarm tone.

2 Press (**Finish**).

: Priority high

: Priority low

- If you do not enter the contents, "Finish" is not displayed, and you cannot store the ToDo item.

Function Menu while ToDo Item is Displayed

Function menu	Operation/Explanation
New	Go to step 1 on page 340.
Edit	Go to step 1 on page 340. ● To edit "Completion date" of the ToDo item set with "Completion", select "", and perform the same operation as in "Due date" of step 1 on page 340.
Change status	The set status icons are displayed on the ToDo List. ▶ Select a status. ● The status icons switch from blue to red after the due date. ● If you select "Completion", perform the same operation as in "Due date" of step 1 on page 340.

Function menu	Operation/Explanation
Category display	<ul style="list-style-type: none"> ▶ Select a category. ● Select a ToDo item to display the details of it.
Sort/Filter	<p>You can sort ToDo items for display. You can also list them up by the specified status.</p> <ul style="list-style-type: none"> ▶ Select the order or state you want to display.
Add desktop icon	See page 114.
Attach to mail	<p>You can attach the ToDo item to an i-mode mail message to send.</p> <p>Go to step 2 on page 172.</p> <ul style="list-style-type: none"> ● You can attach it to an i-mode mail message also by pressing (✉) (✉) while checking the stored contents of the ToDo item.
Send Ir data	See page 305.
Send all Ir data	See page 305.
transmission	See page 306.
All transmission	See page 307.
Copy to microSD	See page 295.
Delete this	▶ YES
Delete select	▶ Put a check mark for ToDo items to be deleted ▶ (✉) (Finish) ▶ YES
Delete completed	<p>You can delete the “Completion” ToDo items.</p> <p>▶ YES</p>
Delete all	▶ Enter your Terminal Security Code ▶ YES

Information

- During standby, the alarm tone sounds at the level set for “Phone” of “Ring volume”. During a call, the alarm tone sounds at the level set for “Volume” (earpiece volume).

<Alarm Setting>

Setting Operating Conditions of Alarm

You can set whether to make an alarm notification of “Alarm”, “Schedule”, “ToDo” and “Book program”, for when operating another function.

- 1 (MENU) ▶ Settings ▶ Clock ▶ Alarm setting
▶ Operation preferred or Alarm preferred

Operation preferred

... Alerts you only during the Stand-by display.

Alarm preferred

... Alerts you even when you are operating the FOMA phone or during a call.

Information

- When you could not be alerted, the “Missed alarm” icon appears on the desktop.

<Private Menu Setting>

Using Your Original Menu

You can store frequently used functions in the Private menu. You can store a total of 12 items from respective functions in Main Menu (see page 394).

Select a Function from the Private Menu

- 1 (MENU) ▶ (MENU) (Private)
 - Private menu is displayed.
 - Press (Set) (Set) to display the Private Menu List.
 - If you have not touched any keys for at least 15 seconds, the Stand-by display returns.




Private menu

- 2 Select an icon.

The display for the selected function is displayed.

Display the Private Menu List

- 1 (MENU) ▶ Settings ▶ Display
▶ Private menu setting

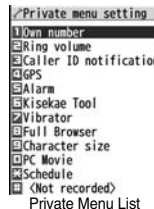

Function Menu of the Private Menu List

Function menu	Operation/Explanation
Add to menu	<p>You can store the frequently used function in the Private menu.</p> <ul style="list-style-type: none"> ▶ Select a function to be stored. ● Press (OK) to display the storable functions by main menu item or sub-menu item. Press (OK) to highlight the function you store.
Change BG image	▶ Select a folder ▶ Select an image.
Add desktop icon	See page 114.

Function menu	Operation/Explanation
Reset menu	You can reset the Private menu to the default. ▶ YES
Release this	▶ YES
Release all	▶ YES

Information

<Add to menu>

• For “i-mode”, “ oppli”, and “Mail”, you can store only the main menu items of the menu function. Functions in the main menu items cannot be stored.

<Change BG image>

• The image you can set is a JPEG or GIF image whose size is Stand-by display (480 x 854) or smaller and up to 300 Kbytes. Perform “Change size” or “Trim away” for other images to set. However, when you set a GIF animation, the first frame is displayed.

<Own Number>

Storing Your Name, Mail Address and Other Information




In addition to the phone number (own number) you have signed up, you can store your personal information such as your name, reading of your name, phone numbers (up to three), mail addresses (up to three), a postal address, a birthday, memorandums, and a still image.

If you change the mail address or register a secret code, change the mail address in this function as well.

1 ▶ Phonebook ▶ Own number

▶ (Edit)

▶ Enter your Terminal Security Code.

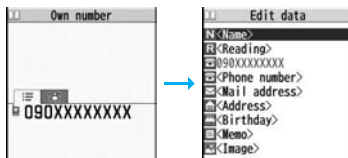

Own Number display

Perform the operation in step 2 on page 84 to store personal information.

- You cannot change or delete own number.
- If you have already entered your Terminal Security Code by operating another function such as “Display all data”, the display for entering your Terminal Security Code does not appear.

2 Press (Finish).

Information

• The items other than own number are displayed even if you use another UIM, because they are stored in the FOMA phone.

Information

- The mail address you can change using this function is limited to the mail address displayed by “Own number”. You cannot change the actual mail address.

Function Menu of the Own Number Display

Function menu	Operation/Explanation
Edit	Go to step 1 on page 342.
Character size	See page 92.
Display all data	You can display all the stored phone numbers and mail addresses. ▶ Enter your Terminal Security Code. Use to display each item.
Copy name	You can copy a name.
Copy phone number/	You can copy each item.
Copy mail add./	• The items in the Function menu differ depending on the displayed item.
Copy address/	
Copy birthday/	
Copy memorandums	
Send Ir data	See page 305. • You can send data via infrared data exchange also by pressing (Ir).
iC transmission	See page 306. • You can send data via iC transmission also by pressing (iCtrans).
Copy to microSD	See page 295.
Erase phone number/	You can delete each item. ▶ YES
Erase mail add./	• When the display for entering your Terminal Security Code appears, enter the code.
Erase address/	• The items in the Function menu differ depending on the displayed item.
Erase birthday/	
Erase memorandums/	
Delete image	
Reset	You can reset (delete) all the stored personal data such as phone numbers or mail addresses except own number. ▶ YES • When the display for entering your Terminal Security Code appears, enter the code.
Auto acquire No. B	You can check if the 2in1 service is contracted. When it has been contracted, Number B is stored.

Recording Voice during a Call or Standby as Voice Memo

Two types of Voice Memo are available; one is "Voice memo" (during a call) for recording the other party's voice during a call and the other is "Record voice memo" for recording your own voice during standby. You can record either one of "Voice memo" (during a call) or "Voice memo" for about three minutes.

- See page 68 for playing back/erasing "Voice memo" (during a call) or "Voice memo".

Record Other Party's Voice during a Call

1 During a voice call

▶ (for at least one second) or (Memo).

A beep sounds and recording starts.

- To suspend the recording midway, press (Stop) or (CLR), or press and hold (for at least one second).
- Press to end the recording and the call.
- A beep sounds about five seconds before the recording time (for about three minutes) ends.
- The beep sounds twice when the recording ends and the "Talking" display returns.

Information

- If you record a voice memo when either "Voice memo" (during a call) or "Voice memo" has already been saved, the old one is overwritten regardless of whether you have played back or not.
- You cannot record a voice memo while operating each item in the Function menu.

Record Your Voice during Standby

1 ▶ LifeKit ▶ Rec. msg/voice memo
▶ Voice memo ▶ YES

A beep sounds and recording starts. Speak into the microphone.

- To suspend the recording midway, press (Stop), (CLR) or .
- A beep sounds about five seconds before the recording time (for about three minutes) ends.
- The beep sounds twice when the recording ends and the former display returns.

Information

- The recording is suspended when a call comes in, when an alarm for "Alarm", "Schedule", "ToDo", "Book program", or "Timer recording" sounds, or when you switch the displays by Multitask.

Recording Images during a Videophone Call as a Movie Memo

During a videophone call, you can record the receiving images along with voice.

You can record up to five items for about 20 seconds per item.

- See page 69 for playing back/erasing "Movie memo".

1 During a videophone call

▶ (for at least one second)

A beep sounds and recording starts. "●REC" is displayed during recording.

- A still image specified by "Movie memo" of "Select image" is shown on the other party's display.
- To suspend the recording midway, press (Stop) or press and hold (for at least one second).
- Press to end the recording and the call.
- A beep sounds about 5 seconds before the recording time (for about 20 seconds) ends.
- The beep sounds twice when the recording ends and the "Talking" display returns.

Information

- If you record a movie memo when five movie memos have already been recorded, the oldest movie memo is overwritten regardless of whether you have played it back or not.
- You cannot record a movie memo while operating each item in the Function menu.

Checking Call Duration and Cost

You can confirm the last and accumulated call duration and cost for voice calls and videophone calls.

- Displayed call duration and cost are for reference and might differ from the actual ones. In addition, the consumption tax is not included in the call cost.
- Both the voice call duration and digital communications duration (videophone call duration + 64K data communication duration) are displayed and both incoming and outgoing calls are included in the duration.
- The call cost is for the outgoing calls only. However, "¥0" or "¥***" is displayed for toll free calls such as Free Dial or for Directory Assistance Service (104), etc.
- The call cost is accumulated on the UIM. Therefore, when you replace the UIM, the charge accumulated on the UIM in use is displayed. (accumulation from December 2004)
※ You cannot display the accumulated cost on the UIM using the FOMA phones that were released before the 901i series. (The cost is accumulated on the UIM.)
- You can reset the displayed call duration and call cost.

1 [MENU] ▶ Settings ▶ Call time/cost ▶ Call data

Last call duration

Talk: Displays the call duration of the latest voice call.

Videophone: Displays the call duration of the latest videophone call.

Non-limiting digital: Displays the call duration of the latest 64K data communication.

Last call cost

Talk: Displays the call cost for the latest voice call.

Videophone: Displays the call cost for the latest videophone call.

Non-limiting digital: Displays the call cost for the latest 64K data communication.

Total calls duration

Talk: Displays the call duration of voice calls from the time Reset Total Duration was executed to the current time.

Digital: Displays the call duration of videophone calls and 64K data communication from the time Reset Total Duration was executed to the current time.

Total calls

Displays the call cost from the time Reset Total Cost was executed to the current call.

Calls reset

Displays the date and time when Reset Total Duration was executed last time.

Cost reset

Displays the date and time when Reset Total Cost was executed last time.

Information

- When Last Call Duration exceeds "19 hours 59 minutes 59 seconds", or Total Calls Duration exceeds "199 hours 59 minutes 59 seconds", "0 s" returns to re-count the time.
- If you switch between the voice call and videophone call during a call, the call duration and call cost are counted respectively for the calls. You are not charged while "Changing" (see page 52) is displayed.
- The duration/charge for PushTalk, i-mode communication and packet communication are not counted. For how to check the i-mode fee, refer to "Mobile Phone User's Guide [i-mode]" which is supplied on your i-mode contract.
- The charge for Chaku-moji is not counted.
- The international call fee for using WORLD CALL is counted. The fees for using other international call services are not counted.
- The duration for ringing and calling is not counted as call duration.
- If you turn off the power or remove the UIM, Last Call Duration is reset to "0 s"; and Last Call Cost is reset to "¥*:*)"".

<Reset Total Cost&Duration>

Resetting Total Duration/Total Cost

- 1 [MENU] ▶ Settings ▶ Call time/cost
 - ▶ Reset total cost&dura.
 - ▶ Enter your Terminal Security Code
 - ▶ Do the following operations.

Item	Operation/Explanation
Reset total duration	You can reset Last Call Duration and Total Calls Duration to "0 s". ▶ YES
Reset total cost	You can reset Last Call Cost and Total Calls to "¥0". ▶ YES ▶ Enter the PIN2 code. • See page 118 for PIN2 code.

<Notice Call Cost>

Setting Call Cost Limit

You can set the call cost limit for Total Calls and can be notified when it is exceeded. If you set "Auto reset setting" to "ON", the call cost is reset at midnight on the 1st of the month and "¥" is deleted.

- 1 [MENU] ▶ Settings ▶ Call time/cost
 - ▶ Notice call cost
 - ▶ Enter your Terminal Security Code
 - ▶ ON or OFF ▶ Enter a max cost.
 - You can set from ¥10 through ¥100,000 in unit of ¥10.
- 2 Select a method to alert ▶ ON or OFF
 - ▶ Enter the PIN2 code.
 - See page 118 for PIN2 code.

■ When Total Calls has exceeded the max cost

"¥" appears. When "Icon + alarm" is set as a notice method and the Stand-by display returns, the message to the effect that the call cost has exceeded the maximum cost is displayed, and a warning tone sounds from the speakers.

Clear Max Cost Icon

You can clear "¥" displayed by Notice Call Cost.

- 1 [MENU] ▶ Settings ▶ Call time/cost
 - ▶ CLR max cost icon
 - ▶ Enter your Terminal Security Code.

Information

- "¥" is cleared also by executing Reset Total Cost, Reset Settings, or Initialize.
- To be re-notified of the set limit after the maximum cost is exceeded, reset Total Calls.

Using Calculator

You can display Calculator to make the four rules of calculation (+, -, ×, ÷). You can display up to 10 digits.

1 **MENU** ▶ Stationery ▶ Calculator ▶ Follow the operation below to make a calculation.

	+		×
	-		÷
	=		Decimal point
	%		
CLR	C (Clear): Clears the numeral you have entered last.		
	AC (All clear): Clears all the calculations you entered.		



Information

- You cannot enter a minus sign while you are performing calculation.
- When the calculated result exceeds 10 digits or invalid calculation like "divided by 0" is performed, "E" is displayed.

Making Text Memos

You can store up to 20 text memos.

1 **MENU** ▶ Stationery ▶ Text memo ▶ Select <Not recorded> ▶ Enter a text memo.

- You can enter up to 256 full-pitch/512 half-pitch characters.
- You can check the stored contents by selecting a stored text memo, and you can edit it by pressing (Edit).

Function Menu while Text Memo is Displayed

Function menu	Operation/Explanation
Edit	Go to step 1 of "Making Text Memos" on page 345.
Compose message	You can compose an i-mode mail message containing the contents of the text memo. Go to step 2 on page 172. • You can compose it also by pressing (Compose).
Edit schedule	You can create a schedule event containing the contents of the text memo. ▶ Schedule Go to step 1 on page 337.
Add desktop icon	See page 114.
Send Ir data	See page 305.

Function menu	Operation/Explanation
Send all Ir data	See page 305.
Transmission	See page 306.
All transmission	See page 307.
Copy to microSD	See page 295.
Text memo info	You can display the date and time when the text memo was created, the date and time of the latest update, and the category.
Category	You can classify text memos by category. ▶ Select a category. • If you do not set, the category is set to "None".
Delete this	▶ YES
Delete selected	▶ Put a check mark for text memos to be deleted ▶ (Finish) ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Copying/Deleting Data Items in FOMA Phone or UIM

You can exchange the Phonebook entries or SMS messages between the FOMA phone and the UIM. You can also delete the Phonebook entries or SMS messages stored in the FOMA phone or the UIM. You can save a total of 20 received and sent SMS messages to the UIM.

Copy/Delete Data Items

1 **MENU** ▶ Phonebook ▶ UIM operation ▶ Enter your Terminal Security Code.

When you enter your Terminal Security Code, "" appears, and you cannot use phone and mail functions.

- When a call comes in just before entering your Terminal Security Code, UIM Operation ends.

2 **Copy or Delete** ▶ Select a copy end or delete source ▶ **Phonebook or SMS**

Phonebook

Search the Phonebook to list the entries.

SMS

Inbox . . . Copies or deletes the data in the Inbox.

Outbox . . . Copies or deletes the data in the Outbox. Select a folder and show the list.

- When copying or moving data items to the UIM, the confirmation display appears telling that 2in1 management information will be deleted if 2in1 is activated.

3 Put a check mark for data items to be copied or deleted (Finish) YES

Function Menu while the Phonebook List or SMS List is Displayed


Function menu	Operation/Explanation
Start copy/ Start deletion	You can start copy or deletion.
Select this	You can select the data item.
Select all in tab	You can select all the Phonebook entries in the displayed tab.
Select all	You can select all data items.
Release this	You can release the selection.
Release all in tab	You can release all the selected Phonebook entries in the displayed tab.
Release all	You can release all selections.
Detail	You can display the detailed Phonebook display or the detailed SMS display.

Copy from the Function Menu of Phonebook

1 Detailed Phonebook display (FUNC) Copy to UIM or Copy from UIM YES

Move or Copy from the Function Menu of Mail

1 Outbox List/Detailed Sent Mail display/Inbox List/Detailed Received Mail display (FUNC) Move/copy UIM operation Select a move method or copy method YES

 (blue)" indicates an SMS message in the FOMA phone.

 " indicates an SMS message on the UIM.

Information

- The number of phone numbers/mail addresses you can store in a single Phonebook entry differs between the FOMA phone and the UIM. Therefore, you cannot copy the second or later phone numbers/mail addresses stored in the FOMA phone to the UIM. You cannot copy the data that cannot be stored on the UIM such as a postal address, either.
- The types of character fonts you can use differ between the FOMA phone and the UIM; therefore a pictograph is converted into a space.
- When you copy Phonebook entries from the FOMA phone to the UIM, the name of up to 10 full-pitch/21 half-pitch characters and the reading of up to 12 half-pitch characters are converted to full-pitch katakana characters and copied. The rest characters are not copied.

Information


- Phonebook entries stored as secret data cannot be copied to the UIM even in Secret Mode or Secret Data Only.
- If you set the same group name in the FOMA phone and the UIM, the group settings for the Phonebook are retained. If you set different group names in the FOMA phone and the UIM, the group settings are not retained.
- You can neither move nor copy SMS reports.
- You cannot protect SMS messages you have moved or copied to the UIM. If you copy or move protected SMS messages to the UIM, SMS messages on the UIM are unprotected. Also, the reply and forward icons become the read icons.
- If SMS messages are moved or copied from the FOMA phone to the UIM, you can check them in the "Inbox" or "Outbox" folder. While you use 2in1, all the SMS messages are saved as the ones for Number A, regardless of the current mode.
- When you move or copy SMS messages from the UIM to the FOMA phone, they are moved or copied to the "Inbox" or "Outbox" folder.

Making/Receiving Calls Using Flat-plug Earphone/Microphone with Switch

Open the cover of the Earphone/Microphone/AV output terminal (see page 25) and insert the connecting plug of the Flat-plug Earphone/Microphone with Switch (option).

Make Calls Using Flat-plug Earphone/Microphone with Switch

1 Enter a phone number
or
bring up a Phonebook entry, redial item, dialed call record, or received call record.

2 Press and hold the switch of the Flat-plug Earphone/Microphone with Switch for at least one second  Start talking when the other party answers.

A beep sounds and you are connected.

•You can use this function even in Horizontal Open Style. However, you cannot make a videophone call by pressing the switch of Flat-plug Earphone/Microphone with Switch.

•You can make a call also by operating the FOMA phone.


3 After talking, press and hold the switch of the Flat-plug Earphone/Microphone with Switch for at least one second to end the call.

A beep sounds twice and you are disconnected.

Receive Calls Using Flat-plug Earphone/Microphone with Switch

1 During ringing ▶ Press the switch of the Flat-plug Earphone/Microphone with Switch.

A beep sounds and you are connected.


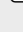
With a videophone call, a camera image is sent to the other party. You can switch between the camera image and the substitute image by pressing  during the videophone call. (See page 70)

- You can use it also with the FOMA phone closed or in Horizontal Open Style. If you receive a videophone call in Horizontal Open Style, substitute image is sent to the other party.
- You can answer calls also by operating the FOMA phone.
- When “Auto answer setting” is set to “ON”, a call is answered automatically after the ring time elapsed.

2 After talking, press and hold the switch of the Flat-plug Earphone/Microphone with Switch for at least one second to end the call.

A beep sounds twice and you are disconnected.

Information



- Regardless of the setting for “Keypad sound”, a tone for connecting and disconnecting the line sounds.
- Note that you might be connected if you try to connect the Flat-plug Earphone/Microphone with Switch after the ring tone sounds.
- To release hold, press the switch of the Flat-plug Earphone/Microphone with Switch during answer-hold (On Hold) and while a call is on hold (Holding). (When a videophone call is put on hold, the camera image is sent and the videophone call starts.)
- Do not press or release the switch of the Flat-plug Earphone/Microphone with Switch in succession. You might be automatically connected.
- If you have signed up for Call Waiting Service and “Multi calling” is displayed during a call, you can switch two calls by pressing and holding the switch of the Flat-plug Earphone/Microphone with Switch for at least one second. However, you cannot use the switch to end the call.
- You can adjust the earpiece volume by pressing  (raise) or  (lower) during a call.

<Headset Switch to Call>

Selecting a Call Destination when Earphone is Connected

When “Headset switch to call” is set to “Voice call” and the Stand-by display is shown, you can press the switch on the Flat-plug Earphone/Microphone with Switch (option) to make voice calls.

1 ▶ Settings ▶ Other settings ▶ Headset switch to call ▶ Voice call or OFF

- You can check the currently set phonebook entry by pressing  ().

2 Search the Phonebook ▶ Select an entry.

Information

- When the Phonebook entry contains multiple phone numbers, the first phone number is set.
- If you delete the set Phonebook entry, the Phonebook entry stored in the memory number 999 is automatically set to Headset Switch to Call.

<Auto Answer Setting>


Answering a Call Automatically when Earphone is Connected

If a call comes in while the Flat-plug Earphone/Microphone with Switch (option) is connected, the FOMA phone automatically answers the call after the specified ring time elapses.

1 ▶ Settings ▶ Incoming call ▶ Auto answer setting ▶ ON or OFF ▶ Enter a ring time (seconds).

- Enter from “001” through “120” in three digits.
- You cannot set the same ring time for Remote Monitoring, Auto Answer Setting and Record Message Setting. Set a different time for each.

Information

- When the FOMA phone automatically answers a videophone call, a substitute image is sent to the other party. You can switch between the substitute image and the camera image by pressing  during the videophone call. (See page 70)
- If you activate Voice Mail Service or Call Forwarding Service together with Auto Answer Setting and want to give priority to Auto Answer Setting over the service, set its ring time shorter than that for Voice Mail Service or Call Forwarding Service.
- Even if you connect the Flat-plug Earphone/Microphone with Switch while ringing, Auto Answer Setting does not work. However, if you disconnect it while ringing, Auto Answer Setting works.
- During 64K data communication or connecting the Flat-plug AV Output Cable (option), Auto Answer Setting does not work.

Using Bluetooth

You can connect between Bluetooth devices wirelessly. When you connect, for an example, your FOMA phone to a Bluetooth headset (commercial item) using Bluetooth, you can talk on the phone or listen to music with your FOMA phone carried in a bag.

- Note that battery consumption will be faster when you use Bluetooth connection.
- Wireless communications with all the Bluetooth devices are not necessarily guaranteed.

What You can Do with Bluetooth

With your FOMA phone, the following six services are available:

Headset, Hands-free, Audio, Dial-up Communication, Object Push and Serial Port services. Also, the Audio/Video remote control service might be available when you use the Audio service. (Only with compatible Bluetooth devices)

Supported version
Bluetooth Specification Ver. 2.0 + EDR compliant
Supported profiles (Supported services)
HSP: Headset Profile HFP: Hands-Free Profile A2DP: Advanced Audio Distribution Profile AVRCP: Audio Video Remote Control Profile DUNP: Dial-up Networking Profile OPP: Object Push Profile SPP: Serial Port Profile

■ Talk through Headset

When you connect Bluetooth Headset F01 (option) or a Bluetooth headset (commercial item) to the FOMA phone using Bluetooth, you can talk wirelessly.

- Use the Headset service.

■ Talk Hands-free

When you connect a Bluetooth device such as a car navigation system (commercial item) to the FOMA phone using Bluetooth, you can communicate hands-free using the microphone and speaker on the car navigation system.

- Use the Hands-free service.

■ Play back on Audio Equipment

When you connect Wireless Earphone Set P01 (option) or Bluetooth audio equipment (commercial item) to the FOMA phone using Bluetooth, you can play back a stereophonic high-quality sound wirelessly.

However, the devices that support audio of One Seg programs or video files are limited. (For details, see "Information" of "Play Back Audio of One Seg Programs Using Bluetooth Device".

- Use the Audio service.

■ Communicate wirelessly

When you connect a Bluetooth compatible personal computer to the FOMA phone using Bluetooth, you can perform packet communication or 64K data communication using the FOMA phone as a modem.

- Use the Dial-up Communication service.
- For details, refer to the PDF version of "Manual for PC connection setting".

■ Send Phonebook via Bluetooth

You can send the Phonebook entries by connecting the Bluetooth device to the FOMA phone using Bluetooth. You can send them from the Function menu of the Phonebook.

- Use the Object Push service.

■ Use Bluetooth from i-ϕpli

By connecting the FOMA phone with another mobile phone or Bluetooth compatible device using Bluetooth, you can play a match game with your friends or manage data files on an i-ϕpli program.

- Use the Serial Port service.

■ Tone from Bluetooth devices

	Connected service		
	HSP	HFP	A2DP
Voice call dial tone	○	○	—
Voice/Videophone call ring tone	○※1, ※2	○※2	—
Calling tone at voice/videophone call	○	○	—
The other party's voice at voice/videophone call	○	○	—
Caller's voice from Record Message at voice call	○	○	—
One Seg audio	—	—	○
i-motion playback tone	—	—	○※3
Video playback tone	—	—	○
PC movie playback tone	—	—	○
MUSIC Player playback tone	—	—	○
Music&Video Channel playback tone	—	—	○
Alarm tone	Alarm preferred	○※4	○※4
	Operation preferred	—※5	—※5
Mail ring tone	Alarm preferred	—	○※6
	Operation preferred	—※5	—※5

	Connected service		
	HSP	HFP	A2DP
PushTalk ring tone	—	—	○※6

○: Output from the Bluetooth device.

—: Not output from the Bluetooth device, instead it is played back from the FOMA phone.

※1 The ring tone sounds from both the Bluetooth device and FOMA phone when "Headset usage setting" is set to "Headset + speaker".

※2 The ring tone sounds from the FOMA phone when "Forward ring tone" is set to "OFF".

※3 The tone does not sound for i-motion movies played back while being obtained from sites.

※4 The alarm tone sounds from the Bluetooth device only during a call. The alarm tone that sounds from the Bluetooth device is not the one set for Alarm. It beeps.

※5 The alarm tone/mail ring tone does not sound when a display other than the Stand-by display is shown.

※6 The tone sounds only during music playback.

● Some Bluetooth devices might not work as specified in the table above.

Information

● Refer to the instruction manual for a Bluetooth device as well.

Notes on using Bluetooth devices

■ Observe the following to make a good connection:

● The distance between your mobile phone and another Bluetooth device must be within 10 meters under line-of-sight conditions. The allowable connection distance may be shorter, depending on the ambient environment (such as walls or furniture) and the structure of a building. When there are any obstructions between the FOMA phone and Bluetooth device, the allowable connection distance may also be shorter. Particularly, if there is a wall or floor of reinforced concrete between them, they may be unable to connect with each other. Above mentioned connection distance is not guaranteed.

● During connection, keep Bluetooth devices as possible as away from other electric devices (such as home electric appliances, AV devices, OA devices). (The Bluetooth device is liable to be adversely affected by a microwave oven so keep as possible as away from the microwave oven.) Otherwise, normal connection cannot be performed when electric devices are powered on or Bluetooth devices may cause noises or a reception failure on a television or radio set (television images may degrade for particular channels of UHF or satellite broadcasting).

● If there is a broadcast station or radio near a Bluetooth device to which you want to connect, your FOMA phone may be unable to connect with the Bluetooth device. In such a case, move the Bluetooth device to a place where connection is possible. Strong radio waves may prevent connection between Bluetooth devices.

● With a Bluetooth device put in your bag or pocket, you can make a wireless connection. However, if the Bluetooth device and FOMA phone is separated by your body, communication speed might be lowered or noise could result.

■ Radio interference with wireless LANs

Bluetooth devices use the same frequency band (2.4GHz) as wireless LANs (IEEE802.11b/g). Therefore, if a Bluetooth device is used near a wireless LAN device, radio interference may cause lowering of the communication speed, noise or connection fail. In this case, take the following measures:

- Keep your FOMA phone and the wireless connection-target Bluetooth device away from the wireless LAN device 10 meters or more.
- When you use them within a distance of 10 meters, turn off the power to the wireless LAN device.

■ Radio waves generated from the Bluetooth device may possibly give an adverse effect on electronic medical appliances.

As an accident could result in some cases, make sure that you turn off the power to the FOMA phone and Bluetooth devices in places as shown below:

- On trains · In airplanes · In hospitals
- Nearby automatic doors or fire alarms
- In places such as gas stations where flammable gas is generated

Bluetooth Usage Flow

For a Bluetooth device to be available, you need to register the Bluetooth device to your FOMA phone beforehand and connect them using a service that supports each function.
<Example> For connecting Wireless Earphone Set P01 (option)

Register Wireless Earphone Set P01 to the FOMA phone.
(See page 350)



Connect using the compatible service for the desired function. (See page 350)

To talk on the phone using Bluetooth

To play back the audio of One Seg, audio of moving images or video files, or music files using Bluetooth



Connect using the Hands-free service.

Connect using the Audio service.



Make a call using Wireless Earphone Set P01. (See page 351)

Play back the audio of One Seg using Wireless Earphone Set P01. (See page 352)

Play back the audio of moving images or video files, or music files using Wireless Earphone Set P01. (See page 352)

Register Bluetooth Device

You can register a Bluetooth device to the FOMA phone. You can register up to 10 Bluetooth devices.

1 LifeKit ▶ Bluetooth ▶ Device list ▶ YES

The Bluetooth devices around the FOMA phone are searched.

You need to place the Bluetooth device to be registered on standby for registration beforehand.

Up to 20 searched devices are listed on the Device List.



• You can search for Bluetooth devices also by pressing from the Device List.

• When any Bluetooth devices have already been registered, Device List is displayed and those registered ones are displayed.

2 Select a Bluetooth device to be registered ▶ YES ▶ Enter your Terminal Security Code.

3 Select the text box for entering the Bluetooth passkey

▶ Enter the Bluetooth passkey ▶ Set

• You can enter up to 16 half-pitch alphanumeric characters.

• For the Bluetooth passkey, refer to the instruction manual for the Bluetooth device.



4 Select a service to be connected.

The Bluetooth device is connected and “ (blue)” blinks. When no communication with the Bluetooth device is made for a certain period



of time, your FOMA phone is placed in low power consumption mode, and “ (black)” stays on.

• When you use the Bluetooth device which is able to connect multiple services, the confirmation display appears asking whether to connect another service in succession.

• “ (blue)” is displayed during connection, (gray)” is displayed on standby for connection next to the service name.

• If you select “Dial-up”, the FOMA phone is placed on standby for connection.

• To disconnect, select the connected service and select “YES”.

• See “Place the Bluetooth Devices on Standby for Connection” on page 351 for how to cancel the service on standby.

Information

- When 10 Bluetooth devices have already been registered, the confirmation display appears asking whether to overwrite them. When you select “YES”, the Bluetooth device that is not protected, or not set for “Preferred device” and with the oldest communication date/time, except in communicating or in standby state, is overwritten.
- You cannot activate Bluetooth during Self Mode.

Connect to Bluetooth Device

You can connect the registered Bluetooth device to the FOMA phone.

1 LifeKit ▶ Bluetooth ▶ Device list ▶ Select a Bluetooth device to be connected ▶ Select a service to be connected.




- See step 4 on page 350 for details.

Device List

1 Device class

Following icons are displayed according to the type of Bluetooth device:

“”, “”, “”, “”, “”, “”, “”, “”, “”

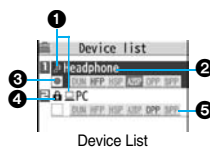

2 Device name

The name of Bluetooth device is displayed.

When no name is detected by search, the Bluetooth address is displayed.

3 Connecting status

- : Being connected
- : Not connected
- : Not detected
- : Not registered

4 Protect

Displayed when the registered contents are protected.

5 Profile state

The state of each profile is displayed in color.

Mark	Character color	Background color	Frame color	Status
	Blue	Gray	None	Not connected (unregistered)
	Blue	Gray	Blue	Not connected (registered)
	White	Green	None	Being connected
	Green	White	Green	Standby for connection
	White	Light green	None	Preferred device
	Gray	Gray	None	Not supported

Information

- When the Bluetooth device is turned off or when the Bluetooth device does not respond while a connection is being established or being disconnected, it takes maximum about 110 seconds for processing.

Information

- When your FOMA phone is connected using the Headset service, Hands-free service, Audio service, or Dial-up Communication service, and is disconnected from the Bluetooth device, the FOMA phone is placed on standby for connection. Also, your FOMA phone is placed on standby for connection the next time the power is turned on after the FOMA phone is turned off while it is connected or is on standby for connection.

Function Menu of the Device List

Function menu	Operation/Explanation
Register devices	▶ Enter your Terminal Security Code. Go to step 3 on page 350.
Preferred device	You can set a Bluetooth device to be connected taking priority over other devices when a call comes in. You can set this for the Headset service compatible Bluetooth device only. <ul style="list-style-type: none">When you already set another Bluetooth device for "Preferred device", that setting is canceled, and the selected Bluetooth device is set for the priority device.To release it, perform the same operation.
Protect/release	You can protect the registered Bluetooth device so that it is not deleted or overwritten. You can protect up to five devices. <ul style="list-style-type: none">To release it, perform the same operation.
Change device name	You can change the name of the registered Bluetooth device. <ul style="list-style-type: none">▶ Enter a device name.You can enter up to 16 full-pitch/32 half-pitch characters.
Delete	You can delete the registered Bluetooth device. <ul style="list-style-type: none">▶ YES
Description	You can display the device name, Bluetooth address, device class, and supported profile.
Add desktop icon	See page 114.

Information

<Register devices>

- When you select a registered Bluetooth device, the registered profile is updated. (When the device name has been changed, the profile is retained as it is.) When you select a profile that is different from the registered one, the profile is added and then registered.

<Preferred device>

- Even when Preferred Device is set, you cannot connect that device unless the Headset service is placed on standby for connection. When other Bluetooth device is connected with the Headset service, the Bluetooth device that is being connected has priority.

<Delete>

- You cannot delete when the status of Bluetooth device is during connection or on standby for connection.

Place the Bluetooth Devices on Standby for Connection

You can place the connecting state of all the registered Bluetooth devices on standby for connection.

- 1** **[MENU] ▶ LifeKit ▶ Bluetooth ▶ Accept registered ▶ Put a check mark for the services to be placed on standby ▶ [Finish]**
 - To release, remove the check mark and press **[Finish]**.
 - During standby, "ⓑ (blue)" lights.

Suspend the Bluetooth Function of the FOMA Phone

You can suspend services that are connecting, or are on standby for connection, and can turn off the Bluetooth function of the FOMA phone.

- 1** **[MENU] ▶ LifeKit ▶ Bluetooth ▶ Bluetooth power OFF ▶ YES**
 - You can activate the previously-used standby for Bluetooth connection by **[MENU] ▶ LifeKit ▶ Bluetooth ▶ Activate Bluetooth.**

Accept Dialup Devices

You can talk or communicate by connecting the FOMA phone wirelessly with a Bluetooth compatible personal computer or car navigation system and others. For details, refer to "Preparing Bluetooth Communication" on the PDF version of "Manual for PC connection setting".


Make a Call Using Bluetooth Device

You can make a call wirelessly when the FOMA phone is connected to a Bluetooth device using Headset service or Hands-free service.

- 1** **Connect a Bluetooth device using Headset service or Hands-free service.**
 - See page 350 for connecting a Bluetooth device.
- 2** **Make/Receive a call via the Bluetooth device.**
 - "ⓑ" is displayed during a call via the Bluetooth device.
 - For operations from a Bluetooth device, refer to the instruction manual for the Bluetooth device.


■ When using Wireless Earphone Set P01 (option)

- 1** Press the key during ringing to answer a call. Press and hold it for at least one second from the Stand-by display, a call is made to the party stored in the Phonebook with memory number 000.

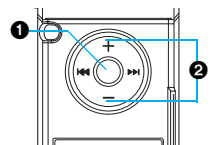

- 2** Press the key to adjust the earpiece volume during a call. You can adjust the volume consecutively by pressing and holding it.
 - For detailed operations, refer to the instruction manual for Wireless Earphone Set P01.

■ Selecting whether to talk over the FOMA phone or a Bluetooth device

Press and hold  for at least one second during a call.

- During a call with the FOMA phone while connecting using Headset service, you can switch only from the Bluetooth device.
- For operations from the Bluetooth device, refer to the instruction manual for the Bluetooth device you use.
- You cannot talk over a Bluetooth device while USB Hands-free compatible device or Flat-plug Earphone/Microphone with Switch (option) or Flat-plug AV Output Cable (option) is connected even if you switch to the Bluetooth device.
- You cannot switch to a Bluetooth device while Remote Monitoring is activated.

Information

- When a call comes in while the Bluetooth device is connected using Headset service or Hands-free service, the ring tone sounds from the Bluetooth device even if Manner Mode is activated or "Ring volume" is set to "Silent" on the FOMA phone.
- During a call on the Bluetooth device, you cannot adjust the sound volume of the Bluetooth device by adjusting that on your FOMA phone.
- During a call on the Bluetooth device, the call state does not change by closing the FOMA phone regardless of the setting of "Setting when folded".
- When the Bluetooth is disconnected during a call on the Bluetooth device, the call state follows the setting of "Disconnection settings". However, when it is disconnected while the FOMA phone is closed and "Disconnection settings" is set to "Continue on the phone", the call shifts to the state as specified by "Setting when folded". When "Setting when folded" is set to "End the call", the call shifts to "No tone" state.

Play Back Audio of One Seg Programs Using Bluetooth Device

When you connect your FOMA phone to a Bluetooth device using Audio service, you can output the audio of One Seg programs from the Bluetooth device.

1 Connect a Bluetooth device using Audio service.

See page 350 for connecting a Bluetooth device.

2 Watch a One Seg program.

The sound is output from the Bluetooth device.

- When the confirmation display appears asking whether to start the output to the Bluetooth device, select "YES".
- For operations from a Bluetooth device, refer to the instruction manual for the Bluetooth device.

■ When using Wireless Earphone Set P01 (option)


1 Select the next channel.

2 Select the previous channel.

3 Adjust the sound volume.

You can adjust the volume consecutively by pressing and holding it.

- For detailed operations, refer to the instruction manual for Wireless Earphone Set P01.

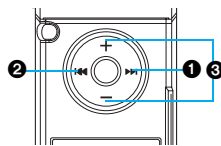

Information

- You can play back the audio of One Seg programs only on an A2DP compatible Bluetooth device that supports copyrighting by the SCMS-T. Open first the One Seg Viewer display, and then operate Wireless Earphone Set P01. If you have been operating Wireless Earphone Set P01 before you open the display, the audio might not be played back.
- While you are playing back the audio from a One Seg program via a Bluetooth device, you cannot adjust the sound volume of the Bluetooth device by adjusting that on your FOMA phone.
- You cannot play back the audio from the Bluetooth device when the Flat-plug Stereo/Earphone Set (option) or Flat-plug Earphone/Microphone with Switch (option) is connected.
- If the audio from a One Seg program stops while it is played back on the Bluetooth device, check your FOMA phone as the possible causes are as follows:
 - When the Bluetooth device is disconnected
 - When a location provision request of GPS comes in
 - When a mail message or Message R/F comes in
 - When a PushTalk call comes in
 - When the low battery alarm sounds
 - When an alarm for "Alarm", "Schedule", "ToDo", "Book program" or "Timer recording" soundsIn these cases, the Audio service might be disconnected depending on the Bluetooth device. To resume playback on the Bluetooth device, you need to re-connect the Audio service.

Play Back Sound/Music of Moving Image or Video Using Bluetooth Device

When you connect your FOMA phone to a Bluetooth device using Audio service, you can output the sound of moving images or video, music via MUSIC Player, etc., from the Bluetooth device.

1 Connect a Bluetooth device using Audio service.

- See page 350 for connecting a Bluetooth device.
- If you connect using Audio service from the Bluetooth device while placing an Audio service on standby for connection, MUSIC Player starts automatically. However, it might not start automatically when a display other than Stand-by display is shown or another function is activated. Further, you cannot connect using Audio service from Wireless Earphone Set P01.

2 Play back a moving image, video or music file.

The sound is output from the Bluetooth device.

- When the confirmation display appears asking whether to start output to the Bluetooth device, select "YES".
- Once you connect the FOMA phone to the Bluetooth device using Audio service, a connection history is stored. When the connection history is found, the FOMA phone tries to connect to the Bluetooth device automatically for playing back a file even if it is not connected using Audio service. When the connection is successfully completed, the sound is output from the Bluetooth device. When the connection fails, the confirmation display appears asking whether to output sound from the FOMA phone.

The connection history is overwritten each time the Bluetooth device is connected using Audio service.

- For operations from the Bluetooth device, refer to the instruction manual for the Bluetooth device you use.

■ When using Wireless Earphone Set P01 (option)

1 Play back or pause

Repeat playback and pause each time you press the key. Press and hold it for at least one second to halt.

2 Play back a next file or music file.


3 Play back a previous file or music file.

When playback time is over three seconds (over 10 seconds for video), this operation returns the position to the beginning of the file.

4 Adjust the sound volume.

You can adjust the volume consecutively by pressing and holding it.

- For detailed operations, refer to the instruction manual for Wireless Earphone Set P01.

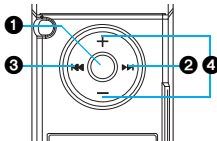

Information

- You can play back the audio of video file only on an A2DP compatible Bluetooth device that supports copyrighting by the SCMS-T. Open first the Video Playback display, and then operate Wireless Earphone Set P01. If you have been operating Wireless Earphone Set P01 before you open the display, the sound might not be played back.
- While you are playing back the sound of a moving image, video, or music file from a Bluetooth device, you cannot adjust the sound volume by adjusting that on your FOMA phone.
- Even when you are using Play Background for MUSIC Player or Music&Video Channel, the remote-control operation for Bluetooth is available.
- You cannot play back the audio from the Bluetooth device when the Flat-plug Stereo/Earphone Set (option) or Flat-plug Earphone/Microphone with Switch (option) is connected.

Information

- If the sound of a moving image, video, or music file stops while it is played back on the Bluetooth device, check your FOMA phone as the possible causes are as follows:
 - When the Bluetooth device is disconnected
 - When a location provision request of GPS comes in
 - When a mail message or Message R/F comes in
 - When a PushTalk call comes in
 - When the low battery alarm sounds
 - When an alarm for "Alarm", "Schedule", "ToDo", "Book program" or "Timer recording" sounds
 In these cases, the Audio service might be disconnected depending on the Bluetooth device. To resume playback on the Bluetooth device, you need to re-connect the Audio service.

Bluetooth Settings


1 LifeKit ▶ Bluetooth

▶ Bluetooth settings

▶ Do the following operations.

- You cannot operate during a call or data communication.

Item	Operation/Explanation
Set authentications	You can set whether to set authentication when sending a Phonebook entry via a Bluetooth device. If you set to "ON", set whether to encrypt the data. ▶ ON or OFF ▶ ON or OFF
Session number setting	You can set whether to enter the password for sending all Phonebook entries. ▶ ON or OFF
Time-out to search	You can set the time for searching for Bluetooth devices around the FOMA phone. ▶ Enter a device search time (seconds). ● Enter two-digit numerals as in "05" through "20".
Forward ring tone	You can set whether to send a ring tone for the voice call and videophone call to the connected Headset or Hands-free device. When the device is specified as "Preferred device", connection is made to send the ring tone even if the device is on standby. ▶ ON or OFF
Disconnection settings	You can select whether to end talking or continue talking on the FOMA phone when Bluetooth is disconnected while talking through the Headset or Hands-free device. ▶ End the call or Continue on the phone
Dial from headset	You can set whether to make a call by pressing the switch on the Headset. ▶ Valid or Invalid

Item	Operation/Explanation
Bluetooth info	<p>You can display the device name, Bluetooth address, device class, and supported profiles of Bluetooth mounted on the FOMA phone. You can change the device name.</p> <ul style="list-style-type: none"> To change the device name, press  (Edit), enter the device name. You can enter up to 16 full-pitch/32 half-pitch characters.

Information

<Set authentications>

- While a Bluetooth device to which Phonebook entries are sent is connected using a service other than Object Push, the Phonebook entries are sent with authentication and with encryption regardless of this setting.
- You cannot set this function while a Bluetooth device is connected or on standby for connection.

<Forward ring tone>

- You cannot set this function while a Bluetooth device using the Headset service or Hands-free service is connected or on standby.


<Bluetooth info>

- If you select a pictograph for the device name, it might not be correctly displayed depending on the destination Bluetooth device.

<Reset Settings>



Resetting Function Settings


You can reset the items indicated by  of "Function List" to their default. (See page 394)

1 Settings ▶ Other settings

▶ Reset settings

▶ Enter your Terminal Security Code ▶ YES

Information

- You cannot execute "Reset settings" while a Bluetooth device is connected or on standby for connection.
- You cannot execute "Reset settings" during IC Card Lock while "PIM/IC security mode" is set to "Face reader" or "Double security".
- After you execute "Reset settings", the tickers are not displayed. Then, when the information is automatically updated or you press  to receive the latest information, the tickers automatically flow.

<Initialize>

Deleting Stored Data All at Once

You can delete the stored data and reset the setting contents of each function to the default.

See "Function List" for the setting at purchase. (See page 394)


- You cannot delete the pre-installed data. However, all downloaded dictionaries are deleted including the pre-installed dictionaries.

- You cannot delete the pre-installed i-ϕpli programs.
- You can delete the data stored in the pre-installed i-ϕpli programs. However, you cannot delete the data stored in the Osaifu-Keitai compatible i-ϕpli programs.
- The protected data is also deleted.
- All the stored data files are deleted regardless of the mode of 2in1.
- Even if you have deleted the pre-installed Deco-mail templates, Chara-den images, Kisekake Tool files, PDF files, or Decomail-pictographs, they are restored when you execute "Initialize". However, if you delete the pre-installed i-ϕpli programs, they are not restored.
- Charge the battery full before initializing the FOMA phone. When the battery level is not enough, you may not be able to initialize the FOMA phone.
- During initialization, never turn off the power of the FOMA phone.
- You cannot use other functions during initialization. Also, you cannot receive calls or mail messages.

1 Settings ▶ Other settings ▶ Initialize ▶ Enter your Terminal Security Code ▶ YES ▶ YES

When initializing ends, the power automatically turns off and then turns on and the "Initial setting" display appears.

Information

- You cannot execute "Initialize" while a Bluetooth device is connected or on standby for connection.
- You cannot execute "Initialize" during IC Card Lock while "PIM/IC security mode" is set to "Face reader" or "Double security".
- You cannot delete the data saved to, stored in, or set for the UIM or the microSD memory card.
- You cannot delete the setting of data communication set by a personal computer.
- To restore the downloaded dictionaries and i-ϕpli programs, download them from the "P-SQUARE" site. For downloading, you are charged an additional communication fee.
- After you execute "Initialize", the tickers are not displayed. Then, when the information is automatically updated or you press  to receive the latest information, the tickers automatically flow.
- After you initialize the FOMA phone, you cannot automatically obtain Music&Video Channel programs. Access the Setting Confirmation display from the Music&Video Channel menu to reflect the program setting.
- Initialization may take a while if the data to be deleted is bulky.

Character Entry



Entering Characters	⟨Character Entry⟩	356
Entering Characters in Mode 1 (5-touch)	⟨Mode 1 (5-touch)⟩	356
Using Common Phrases	⟨Common Phrases⟩	360
Cutting/Copying/Pasting Characters		360
Storing Words in Own Dictionary	⟨Own Dictionary⟩	361
Checking Learned Words		361
Using Downloaded Dictionary	⟨Download Dictionary⟩	361
Entering Characters in Mode 2 (2-touch)	⟨Mode 2 (2-touch)⟩	362
Entering Characters in Mode 3 (NIKO-touch)	⟨Mode 3 (NIKO-touch)⟩	362

For details on “Kuten Code List”, refer to the PDF version of “Kuten Code List” on the provided CD-ROM. Set “FOMA P905i CD-ROM” on your personal computer, and click “MANUAL”, and then “Kuten Code List (PDF File)”.

To see the PDF version of “Kuten Code List”, you need to have Adobe® Reader® (version 6.0 or higher recommended).

If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it. For details such as how to use it, refer to Adobe® Reader® Help.

Entering Characters

The FOMA phone is provided with many functions that require to enter characters such as when creating the Phonebook or composing mail messages.

Character Entry Display

On the Character Entry (Edit) display, the information of character input method, input mode, and the remaining number of characters and others are displayed.

1 Character input method

- 2 : Mode 2 (2-touch)
- ☐ : Mode 3 (NIKO-touch)
- Not displayed in Mode 1 (5-touch).

2 Input mode


- abc : Alphabet input mode
- 123 : Numerical input mode
- 漢 : Kanji/Hiragana input mode
- か : Katakana input mode

3 Full/Half-pitch

- 1/1 : Full-pitch input mode
- 1/2 : Half-pitch input mode

4 Remaining/Maximum bytes that can be entered

- "Number of entered characters" might be displayed depending on the function.

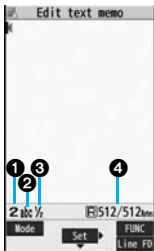

Select Character Input Method MENU 3 5

Three types of character input methods are available as shown below:

Mode 1 (5-touch) See page 356

Multiple characters are assigned to a single key. Each time you press the key, characters switch.

Mode 2 (2-touch) See page 362

Enter characters by pairs of numerals.

Mode 3 (NIKO-touch) See page 362

Enter characters by pairs of numerals.

- Settings > Other settings**
 - Character input method > Input mode
 - Put a check mark for modes to be used
 - (Finish)

● Select at least two modes.

2 Select a priority mode.

- Select a mode you use preferentially from modes selected in step 1.

Switching modes on the Character Entry (Edit) display

Press and hold (Mode) for at least one second, or select "Char. input/dict." and then select "Change input mode" from the Function menu.

Entering Characters in Mode 1 (5-touch)

In the step for entering characters, press (Mode) to switch input modes. You might not be able to switch to some modes depending on the function you enter.

Enter Characters

You can enter characters by using Prediction Conversion which converts the entered few words into the predicted ones and Context Forecast which displays the next conversion candidates inferred from the relation between words.

- The FOMA phone increases prediction conversion candidates and context forecast candidates by learning characters.

<Example> Enter "タダの菓子" into a text memo.

- Stationery > Text memo**
Select <Not recorded>.

The Character Entry (Edit) display appears in prediction conversion mode when "Predict" is set to "ON", and appears in ordinary conversion mode when set to "OFF".

2 Enter hiragana characters in Kanji/Hiragana input mode.

- た → Press once and once.
- だ → Press once and once.
- の → Press five times.
- か → Press once.
- し → Press twice.

- You can enter up to 24 characters at a time. However, when "Predict" is set to "ON", if you enter 6 or more characters, the conversion mode is automatically switched to the ordinary conversion mode.
- When a character on the same key comes after a character, press to move the cursor, and enter the next character.



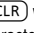
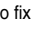
If you set "Character set time", you can omit the operation to move the cursor.

- To switch between uppercase and lowercase, press after you have entered characters.
- Each time you press (Rev), characters are displayed in reverse order.
- If you set "Predict" to "ON", each time you press , ordinary conversion mode and prediction conversion mode switch.
- You can press (Kana) to display the candidate list of alphanumeric or katakana characters. Depending on the entered character, the conversion candidates for date/time are displayed.
- To fix a character as it is without conversion, press (Set).

3 Use to move the cursor onto "の".


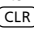
- The conversion mode is automatically switched to the ordinary conversion mode.

4 Use to move the cursor onto the candidate list ▶ Use to highlight “タダの” and press (Select).

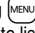- By pressing  (Prev.) /  (Next), you can scroll the candidate list page by page.
- When you press  while you are selecting a conversion candidate, the Character Entry (Edit) display returns.
- Press  (Set all) to fix the whole paragraph.

5 Use to move the cursor onto the candidate list ▶ Use to highlight “菓子” and press (Select).

The selected characters are fixed.

- When the character strings that are assumed to be the context forecast candidates are found after fixing the characters, that context forecast candidates are displayed. Press  to move the cursor onto the candidate list to enter the context forecast candidates.
- When you press  while you are selecting the context forecast candidates, the Character Entry (Edit) display returns.

Information

- The learning function stores up to 1,000 words, and the character of a high conversion rate goes up in the character order list.
- The candidate character strings are displayed from characters converted as usual and from a dictionary downloaded from sites.
 - Only a small number of character strings are registered by default so candidate characters might not be displayed in some cases. By doing the character conversion as usual, the converted characters are added to the candidate characters.
 - You can download a dictionary from sites and add candidate characters from the dictionary. However, when you delete the downloaded dictionary, the added candidate characters are also deleted from the existing candidate characters. (See page 162 and page 361)
- You can use Prediction Conversion and Context Forecast with 2-touch and NIKO-touch in Kanji/Hiragana input mode.
- The number of kanji characters that you can convert to is limited so you might not be able to convert to some kanji characters. You can use Kuten Code to enter kanji characters that you cannot convert to. The number of characters you can enter is 6355 in the JIS level-1 and level-2 kanji sets.
- Part of a complicated kanji character is deformed or left out.

■ Numbers of remaining characters and entered characters

On the Character Entry display, the number of remaining characters and the maximum number of characters you can enter are displayed in bytes. (The number of entered characters is displayed by unit of characters, depending on the function such as entering SMS text.)

The number of characters in the Character Entry (Edit) display is counted according to the following rules:

- One half-pitch character is counted as one byte and one full-pitch character as two bytes.
- Full pitch: あいうえお 5 characters (counted as 10 bytes)
Half pitch: アイウエオカキク 10 characters (counted as 10 bytes)



■ Combination of characters






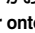
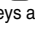
When entering characters, pay attention to the combination of characters.

<Example> When you are entering “ドコエ” in half-pitch Katakana input mode and “の携帯電話” in Kanji/Hiragana input mode

ド コ エ の 携 帯 電 話
1 1 1 1 2 2 2 2 2

- The number of characters that appears on the display is 9 and counted as 14 bytes that equal 14 half-pitch characters.
- Half-pitch character “ ” and “ ” are counted as one character.

Other Entry Functions

Item	Operation/Explanation
Katakana input	Press  (Mode) a few times to switch to Katakana input mode ▶ Press keys to enter characters.
Alphanumeric input	Press  (Mode) a few times to switch to Alphabet input mode ▶ Press keys to enter characters.
Numeral input	Press  (Mode) a few times to switch to Numeral input mode ▶ Press keys to enter numerals.
Line feed	Press  (Line Fe). ● When the cursor is at the end of text and characters are fixed, you can press  to break a line.
Smiley input	Enter “かお” ▶ Use  to move the cursor onto the candidate list ▶ Use  to select a smiley. ● Smileys are stored in the pre-installed common phrases.

Information


<Line feed>


- A line feed is counted as one full-pitch character.
- You cannot break a line depending on the function such as editing in the text box for i-mode.

Correct Characters

1 Move the cursor to the left of the character you want to correct ▶

The character at the right of the cursor is deleted.

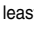Press and hold  for at least one second to delete all characters on and after the cursor.

- When no character is found to the right side of the cursor, the character to the left side of the cursor is deleted. Press and hold  for at least one second to delete all characters.

2 Enter a correct character.

The character is entered in the position of the cursor.

■Data you are editing


When the battery alarm sounds

The data you have been editing is automatically fixed and saved. Charge the battery or replace it with a new charged battery to resume editing. However, you cannot save the unfixed data being converted.




When you press

The confirmation display appears asking whether to discard the data you are editing.

When a call or mail comes in

The Multitask function works, so the data you are editing is retained, and you can answer the call or receive the mail. You can return to the edit display by switching menu, by pressing and holding  for at least one second. You can return to the edit display also by ending the call or mail function.




Predict


You can set whether to display the prediction conversion/context forecast candidates in the candidate list.

-  **Settings** **Other settings**
 - Character input method** **Predict**
 - ON or OFF**

Intelligent with Secret



  

You can set whether to store the characters converted in Secret Mode or Secret Data Only as learned words.

-  **Settings** **Other settings**
 - Character input method** **Int.with secret**
 - Enter your Terminal Security Code**
 - ON or OFF**














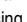




Function Menu while Entering (Editing) Characters



- See page 174 for the Function menu of the Message Entry display.


Function menu	Operation/Explanation
Full pitch/Half pitch	You can switch between full pitch and half pitch.
Copy	See page 360.
Cut	See page 360.
Paste	See page 361.
Undo	You can undo the fixed, deleted, cut, or pasted text. You can undo the operation up to 10 times. However, you can undo the fixing of characters only once. <ul style="list-style-type: none"> You can undo the operation also by pressing  .

Function menu

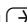Operation/Explanation

Pictograph/symbols (Pictograph)	<p>You can enter pictographs while seeing them on the display.</p> <p>▶ Pictograph ▶ Highlight a pictograph and press  .</p> <p>Repeat the above step and enter other pictographs consecutively.</p> <ul style="list-style-type: none"> You can display the Pictograph List also by pressing  in Kanji/Hiragana input mode. Press  to switch the pictograph lists in order of "Pictograph 1" → "Pictograph 2" → "Decomail-pictograph" [お気に入り (Favorite) through 文字 (Characters)]. However, you can enter "Decomail-pictograph" [お気に入り (Favorite) through 文字 (Characters)] only while editing the i-mode mail text. Press  to switch them in the reverse order. You can select a pictograph also by pressing a column number (number to the left) and then a row number (number at the top). Press   to display the Symbol List. <p>▶  (Select)</p> <p>The selected pictograph is entered and the Character Entry (Edit) display returns.</p>
Pictograph/symbols (Symbols)	<p>You can enter symbols while seeing them on the display.</p> <p>▶ Symbols ▶ Highlight a symbol and press  .</p> <p>Repeat the above step and enter other symbols consecutively.</p> <ul style="list-style-type: none"> You can display the Symbol List also by pressing and holding  for at least one second. Press  to switch the symbol lists in order of Half-pitch symbols → Full-pitch symbols. Press  to switch them in the reverse order. You can select a symbol also by pressing a column number (number to the left) and then a row number (number at the top). Press   to display the Pictograph List. <p>▶  (Select)</p> <p>The selected symbol is entered and the Character Entry (Edit) display returns.</p>
Pictograph/symbols (Space)	<p>You can enter a full-pitch space in full-pitch input mode, and a half-pitch space in half-pitch input mode.</p> <p>▶ Space</p> <ul style="list-style-type: none"> When the cursor is at the end of text, you can enter a space also by pressing .
Phrase/code/quote (Common phrases)	<p>▶ Common phrases ▶ Select a folder ▶ Select a common phrase.</p> <ul style="list-style-type: none"> In the mode other than numeral input mode, you can bring up the folder list for common phrases also by pressing and holding  for at least one second.

Function menu	Operation/Explanation
Phrase/code/quote (Kuten code)	You can enter characters, numerals, and symbols on the Kuten Code List (see the PDF version of "Kuten Code List" on the provided CD-ROM). You can operate in Kanji/Hiragana input mode. ▶ Kuten code ▶ Enter a four-digit Kuten code. A character that matches the entered Kuten code is displayed, and the former input mode returns. ● When a character that matches the entered Kuten code is not found, a space is inserted.
Phrase/code/quote (Input time)	▶ Input time ▶ Select a format for entering the date/time ▶ Enter the date/time. ● You can enter the date/time using the numeric keys. ● You can enter years 1800 through 2099.
Phrase/code/quote (Quote phonebook)	You can access and quote Phonebook entries. The following are the items you can quote: <Inside FOMA phone> Name, reading, phone number, mail address, postal address, birthday, memorandums <Inside UIM> Name, reading, phone number, mail address ▶ Quote phonebook ▶ Search the Phonebook ▶ Select a Phonebook entry ▶ Put a check mark for items to be quoted ▶  (Finish)
Phrase/code/quote (Quote own data)	You can access and quote your personal information. The following are the items you can quote: Name, reading, phone number, mail address, postal address, birthday, memorandums ▶ Quote own data ▶ Enter your Terminal Security Code ▶ Put a check mark for items to be quoted ▶  (Finish)
Phrase/code/quote (Bar code reader)	You can start Bar Code Reader. (See page 146) ▶ Bar code reader
Char. input/dict. (Own dictionary)	You can store the words in own dictionary. (See page 361) ▶ Own dictionary
Char. input/dict. (Learned words)	See page 361.
Char. input/dict. (Change input mode)	You can switch the character input methods. ▶ Change input mode ▶ Select an input mode. ● You cannot select the input mode that is not selected in "Input mode" of "Character input method" (see page 356).

Function menu	Operation/Explanation
Char. input/dict. (Candid. disp. size)	You can set the character size of conversion candidates. ▶ Candid. disp. size ▶ Large, Standard, or Small ● The settings here applies to "Character size" → "Character input" → "Candid. disp. size".
Char. input/dict. (Predict)	See page 358.
Char. input/dict. (Candidate display)	You can select whether to use context forecast candidates. ▶ Candidate display ▶ ON or OFF
Char. input/dict. (Character set time)	You can select whether to automatically fix the entered characters while you are entering characters in Mode 1 (5-touch). In addition, you can specify the time until characters are fixed. You can omit the operation of pressing  to move the cursor for the entry of characters on the same key. ▶ Character set time ▶ Fast, Normal, Slow, or OFF
Char. input/dict. (2/NIKO-touch guide)	You can select whether to list character conversion candidates at the lower part of the display when you press the first-digit key while you are entering characters in Mode 2 (2-touch) or Mode 3 (NIKO-touch). ▶ 2/NIKO-touch guide ▶ ON or OFF
Help	You can check the operating procedures for entering characters. ▶ Select an item.
JUMP	You can move the cursor to the top or end of text. ▶ To beginning or To end ● When the Character Entry (Edit) display ranges over multiple pages, the cursor moves to the beginning or end of the page.

Information

<Full pitch/Half pitch>


- When you switch to half-pitch mode in Kanji/Hiragana input mode of NIKO-touch, the input mode switches to half-pitch Katakana input mode.

<Pictograph/symbols (Pictograph)>

- You might not be able to enter pictographs depending on the Character Entry (Edit) display.
- Once you have entered pictographs, "History" appears first.
- Up to 27 records of the pictographs entered in Pictograph 1 and Pictograph 2 and up to 36 records of Decomail-pictograph are displayed on "History". However, up to 18 records are displayed when the One Seg Viewer display appears below the Message Composition display.
- You can enter up to 20 Decomail-pictographs. When you insert other images, however, the number of Decomail-pictographs that can be entered is reduced by the number of inserted images.

Information

<Pictograph/symbols (Symbols)>

- You can enter “+” by pressing and holding  for at least one second in Numeral input mode.
- You might not be able to enter some symbols depending on the Character Entry (Edit) display.
- Once you have entered symbols, “History” appears first.
- Up to 27 records of the symbols entered in half-pitch and up to 36 records in full-pitch are displayed on “History”. However, up to 18 records are displayed when the One Seg Viewer display appears below the Message Composition display.

<Phrase/code/quote (Common phrases)>

- You might not be able to enter common phrases depending on the Character Entry (Edit) display.
- In Japanese Mode, the called-up contents of common phrases pre-installed in the FOMA phone differ depending on the input mode.

<Phrase/code/quote (Quote phonebook)>

- When you quote a postal address, you cannot quote “〒” or “.” of the postal code.

<Phrase/code/quote (Quote own data)>

- When you quote a postal address, you cannot quote “〒” or “.” of the postal code.
- The personal data of Number A is quoted in A Mode of 2in1, the personal data of Number B is quoted in B Mode, and the personal data of both Number A and Number B is quoted in Dual Mode.

<Char. input/dict. (Character set time)>

- You might not be able to enter characters as you like depending on this setting and your speed of operating keys.

<Common Phrases>

MENU 3 8

 
Using Common Phrases

You can call up and enter, on the Character Entry (Edit) display, the common phrases pre-installed in the FOMA phone, or your own created common phrases.


The common phrases are sorted into five folders and each folder contains 10 of them. You can edit the pre-installed common phrases to save as your own common phrases.

Display Common Phrases

- 1  **Stationery** ▶ Common phrase/dic.
▶ Common phrases ▶ Select a folder.



- 2 Select a common phrase.

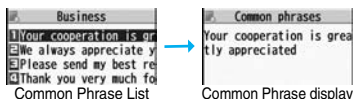


Information

- Do not use half-pitch katakana characters and pictographs for your own common phrases used for composing mail. They might not be correctly displayed. (Pictographs can be used between i-mode mail messages.)
- In Japanese Mode, the common phrases pre-installed in the “あいさつ (Greeting)” and “ビジネス (Business)” folders are called up as kanji/hiragana common phrases in Kanji/Hiragana input mode and called up as half-pitch katakana common phrases in other input mode.

Function Menu of the Common Phrase Folder List

Function menu	Operation/Explanation
Edit folder name	▶ Enter a folder name. ● You can enter up to 10 full-pitch/20 half-pitch characters. ● When you delete all the characters entered as a folder name, the folder name is reset to the default.
Reset name	You can reset the folder name to the default. ▶ YES

Function Menu of the Common Phrase List/ Common Phrase Display

Function menu	Operation/Explanation
Edit	▶ Enter a common phrase. ● You can enter up to 64 full-pitch/128 half-pitch characters. ● When you delete all the characters in a common phrase, the common phrase is reset to the default. ● You can edit a common phrase by pressing  (Edit).
Reset this	You can reset the common phrase to the default. ▶ YES
Reset all	You can reset all the common phrases in the folder to the default. ▶ Enter your Terminal Security Code ▶ YES

Cutting/Copying/Pasting Characters

Cut/Copy

You can cut or copy up to 5,000 full-pitch/10,000 half-pitch characters.

- 1 **Character Entry (Edit) display** ▶  (FUNC)
▶ **Cut or Copy** ▶ Select a start point.
● You can press  (All) to select all characters.
- 2 Select an end point.

Information

- If you copy/cut the Deco-mail text during composing and paste it, the information about the decoration is pasted as well.
- You might not be able to cut or copy data such as Deco-mail text because the memory space runs short.

Paste

You can paste cut or copied characters.

1 Character Entry (Edit) display

- ▶ Move the cursor to a start position for pasting ▶ (FUNC) ▶ Paste

<Own Dictionary>

MENU 3 8

Storing Words in Own Dictionary

In Own Dictionary, you can store up to 100 frequently used words with your favorite reading.

1 ▶ Stationery ▶ Common phrase/dic. ▶ Own dictionary ▶ <New> ▶ Enter a word.

- Select a stored Own dictionary to check the stored contents.
- You can enter up to 10 full-pitch/20 half-pitch characters. However, you cannot enter line feeds.

2 Enter a reading.

- You can enter up to 10 hiragana characters. Also, you cannot store symbols other than “Long vowel (—)”. However, you can store “ ” or “ ” for the words to which “ ” or “ ” can be attached.
- Even if you enter a space, the word is stored with the space automatically deleted.

Function Menu while Own Dictionary is Displayed

Function menu	Operation/Explanation
New	Go to step 1 of “Storing Words in Own Dictionary” on page 361.
Edit	Go to step 1 of “Storing Words in Own Dictionary” on page 361. ● You can edit also by pressing (Edit).
Delete this	▶ YES
Delete selected	▶ Put a check mark for own dictionaries to be deleted ▶ (Finish) ▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Information

<Delete this> <Delete all>

- When you display Own Dictionary from the Function menu of the Character Entry (Edit) display, select “Delete” from the Function menu, then select “Delete this” or “Delete all”.

Information

<Delete selected>

- “Delete selected” does not appear when you display Own Dictionary from the Function menu of the Character Entry (Edit) display.

Checking Learned Words

The character strings once you entered are automatically stored and displayed as the conversion candidates of learned words.

1 Function menu while entering (editing) characters ▶ Char. input/dict.

- ▶ Learned words ▶ Select a column
- ▶ Select a record.

- To delete learned words, press (FUNC) and select “Delete this” or “Delete all”, then select “YES”. If you select “Delete all”, you need to enter your Terminal Security Code.

Reset Learned Words

MENU 3 5

You can reset the learned words.

1 ▶ Settings ▶ Other settings

- ▶ Character input method
- ▶ Reset learned words
- ▶ Enter your Terminal Security Code ▶ YES

<Download Dictionary>

MENU 3 8

Using Downloaded Dictionary

You can make dictionaries downloaded (see page 162) from sites valid.

1 ▶ Stationery ▶ Common phrase/dic. ▶ Download dictionary ▶ Select a downloaded dictionary.

The downloaded dictionary you have selected is validated and indicated by “★”.

- To invalidate a downloaded dictionary, perform the same operation.
- You can validate up to five downloaded dictionaries.
- You can delete the pre-installed dictionaries. You can re-download them from the “P-SQUARE” site (see page 163). When you use a UIM other than the one used for downloading, the UIM restrictions (see page 39) are set to them.

Function Menu while Downloaded Dictionary is Displayed

Function menu	Operation/Explanation
Edit title	▶ Edit the title. ● You can enter up to 10 full-pitch/20 half-pitch characters.
Set dictionary	You can set the dictionary valid/invalid. Each time you operate, valid and invalid switch.

Function menu	Operation/Explanation
Dictionary info	You can display the dictionary title and version.
Delete this	▶ YES
Delete all	▶ Enter your Terminal Security Code ▶ YES

Information

<Edit title>

- If you delete all the characters entered as a title, the title is reset to the default.

<Mode 2 (2-touch)>


Entering Characters in Mode 2 (2-touch)

When you press two numeric keys to enter two-digit numerals, a character (symbol) that corresponds to the numerals is entered. Press the first key to list candidate characters (symbols) at the lower part of the display.

To list candidate characters, you need to set “2/NIKO-touch guide” to “ON” in advance.


- See page 411 for how characters are assigned to the numeric keys (2-touch).
- See page 356 for switching to “2-touch”.

Switch Input Modes (2-touch)

Press  (Mode) from the Character Entry (Edit) display to switch input modes. You might not be able to switch to some modes depending on the function you enter.



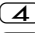
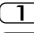
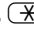
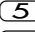

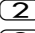
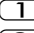
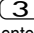

Enter Characters





<Example> Enter “タダの菓子” into a text memo.

-  ▶ Stationery ▶ Text memo
▶ Select <Not recorded>.

The Character Entry (Edit) display appears.

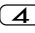- Enter hiragana characters in Kanji/Hiragana input mode.

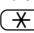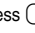た →  
 だ →  , 
 の →  
 か →  
 し →  

- To enter “” or “” , enter the character and then press .
- Press   to switch between uppercase and lowercase. You can switch uppercase and lowercase also by entering the character that can be switched between uppercase and lowercase and pressing .

After entering hiragana characters, go to step 3 on page 356.

<Mode 3 (NIKO-touch)>


Entering Characters in Mode 3 (NIKO-touch)

When you press two numeric keys to enter two-digit numerals, a character (symbol) that corresponds to the numerals is entered. Press the first key to list candidate characters (symbols) at the lower part of the display.

To list candidate characters, you need to set “2/NIKO-touch guide” to “ON” in advance.


- See page 412 for how characters are assigned to the numeric keys (NIKO-touch).
- See page 356 for switching to “NIKO-touch”.

Switch Input Modes (NIKO-touch)

Press  (Mode) from the Character Entry (Edit) display to switch input modes. You might not be able to switch to some modes depending on the function you enter.












Enter Characters



<Example> Enter “タダの菓子” into a text memo.

-  ▶ Stationery ▶ Text memo
▶ Select <Not recorded>.

The Character Entry (Edit) display appears.

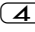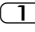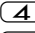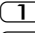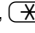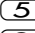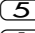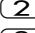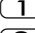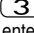- Enter hiragana characters in Kanji/Hiragana input mode.

た →  
 だ →  , 
 の →  
 か →  
 し →  

- To enter “” or “” , enter the character and then press .
- Enter the character that can be switched between uppercase and lowercase and press ; then you can switch.

After entering hiragana characters, go to step 3 on page 356.

Network Services

Checking New Voice Mail Messages	◀Check New Messages▶	364
Using Voice Mail Service	◀Voice Mail▶	364
Using Call Waiting Service	◀Call Waiting▶	366
Using Call Forwarding Service	◀Call Forwarding▶	367
Using Nuisance Call Blocking Service	◀Nuisance Call Blocking▶	368
Using Caller ID Display Request Service	◀Caller ID Request▶	369
Using Dual Network Service	◀Dual Network▶	369
Switching Guidance Language between Japanese and English	◀English Guidance▶	370
Using Service Numbers	◀Service Numbers▶	370
Selecting Response to Incoming Calls during a Call	◀Arrival Call Act▶	370
Setting Remote Control	◀Remote Control▶	371
Setting Additional Number	◀Multi Number▶	371
Using 2in1	◀2in1▶	372
Using OFFICEED	◀OFFICEED▶	378
Using Additional Services	◀Additional Service▶	378

■ Available Network Services

The following are the DoCoMo network services available from the FOMA phone.

For the outline and usage method of each service, see the reference page in the table below.

- The network services are not available when you are out of the service area or out of reach of radio waves.
- For details, refer to “Mobile Phone User’s Guide [Network Services]”.
- For subscriptions and inquiries, contact “DoCoMo Information Center” on the back page of this manual.

Service	Application	Monthly fee	Reference
Voice Mail Service	Required	Charged	P.364
Call Waiting Service	Required	Charged	P.366
Call Forwarding Service	Required	Free	P.367
Nuisance Call Blocking Service	Not required	Free	P.368
Caller ID Notification Service	Not required	Free	P.47
Caller ID Display Request Service	Not required	Free	P.369
Dual Network Service	Required	Charged	P.369

Service	Application	Monthly fee	Reference
English Guidance	Not required	Free	P.370
Multi Number	Required	Charged	P.371
2in1	Required	Charged	P.372
Public Mode (Drive Mode)	Not required	Free	P.65
Public Mode (Power Off)	Not required	Free	P.66
OFFICEED	Required	Charged	P.378
Melody Call	Required	Charged	P.100








- “Deactivate” does not mean that the contract for Voice Mail Service, Call Forwarding Service or other services is canceled.
- You can store new network services in the menu when they are provided by DoCoMo. (See page 378)
- In this manual, a brief outline for each network service is described following the procedure using the menus of the FOMA phone.

Checking New Voice Mail Messages


You can check whether any message is held at the Voice Mail Service Center.

- 1  **Service** ▶ **Voice mail**
- ▶ **Check new messages** ▶ **OK**

■ About checked results

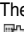- If any voice mail message is held, the "Voice mail" icon () and another Voice Mail icon such as "  " appear to inform you of the held message.
- To erase the Voice Mail icon such as "  ", dial at the Voice Mail Service Center for saving or erasing the voice mail message or follow the operations of "Erase icon".
- The Voice Mail icons switch among , , , etc., and  (6 or more messages) according to the number of the messages held at the Voice Mail Service Center. The displayed number is the number of messages informed by the guidance when you play back new messages. Saved messages are not included.
- If you set "Message notification", the ring tone sounds each time a message is added.
- See page 365 for how to play back voice mail messages.

■ When " " appears

You cannot check voice mail messages. Move to a place where "  " is cleared.

Using Voice Mail Service

This service provides an answer message for incoming voice calls/videophone calls and then holds voice mail messages on behalf of you when you are in a place where radio waves do not reach, the power is turned off, or you cannot answer calls.

- When Record Message (see page 67) is simultaneously activated and you want to give Voice Mail Service priority, set its ring time shorter than that for Record Message.
- When you do not answer an incoming voice call or videophone call while Voice Mail Service is set to "Activate", the call is recorded as a missed call in "Received calls", and the "Missed call" desktop icon appears on the Stand-by display.
- Voice Mail Service is valid for voice calls and videophone calls.
- A voice mail message can be recorded for up to three minutes. Twenty messages can be recorded respectively for voice calls and videophone calls and held at the Center for up to 72 hours.
- When a voice mail message of a videophone call is retained at the Voice Mail Service Center, you are notified by an SMS message.
- Make a voice call at "1412" to change the Voice Mail setting for videophone calls.
- When a Chara-den call is connected to the Voice Mail Service Center, DTMF operation is not available. Switch to "Send DTMF tone" on the Function menu. (See page 71)
- When a call comes in while Voice Mail Service is set to "Activate", the ring tone (specified by "Select ring tone") will sound. (You can change the ring time for incoming calls. See page 365.) If you answer the call within the specified time, you can start talking. If you do not answer, the call is connected to the Voice Mail Service Center.
- You can just press keys to connect an incoming call to the Voice Mail Service Center. Also, you can connect the call that comes in during a call to the Center.

Basic Flow of Voice Mail Service

Step 1: Set the service to "Activate".

Step 2: The caller records a voice/video message.*

Step 3: Play back the message.

* If the caller wants to skip playback of the answer message and record a message such as when in a hurry, he/she can immediately switch to the recording mode by pressing "#" while the answer message is played back.

Use Voice Mail Service

1 ► **Service** ► **Voice mail**

► **Do the following operations.**

Item	Operation/Explanation
Play messages	You can play back messages recorded as the Voice Mail. ► YES ► Operate following the voice guidance.
Activate	► YES ► YES ► Enter a ring time (seconds). ● Enter from "000" through "120" in three digits.
Deactivate	► YES
Set ring time	You can set the ring time until the call is connected to the Voice Mail Service Center. ► Enter a ring time (seconds). ● Enter from "000" through "120" in three digits.
Check setting	You can check the setting contents of Voice Mail Service.
Setting	You can switch the setting contents of Voice Mail Service. ► YES ► Operate following the voice guidance.
Check new messages	See page 364.
Message notification	You can set the ring tone to sound when a new message is recorded. The ring tone set for "Mail" of "Select ring tone" sounds for about five seconds. ► YES or NO
Erase icon	You can erase the Voice Mail icons (such as) from the Stand-by display. ► YES
Activate notice call	When you are out of reach of radio waves or the power is turned off, you are informed of the received call records by SMS messages. Up to five received call records per SMS message are notified. ► Select an item. All calls ... Informs you of all received calls. Calls w/ caller ID ... Informs you of only the calls that notified the phone number. ► YES
Deactivate notice call	► YES
Notice call status	You can check the setting contents of notice call.

Information

<Play messages> <Setting>

- You cannot operate during a call.
- If you press through , , or following the voice guidance, you may not be able to end the call by pressing . In this case, press again.

<Set ring time>

- If "Set ring time" is set to 0 seconds, the calls are not recorded in Received Calls.

<Erase icon>

- Even if you erase the Voice Mail icons, the messages held at the Voice Mail Service Center are not erased.

<Activate notice call>

- Even when you set to reject all SMS messages, you are informed by SMS message of the received call records.

Forward an Incoming Call to Voice Mail Service Center during Ringing

You can connect an incoming call to the Voice Mail Service Center just by a simple key operation. Even if you do not set Voice Mail Service to "Activate", the service will be available using this function.

1 **During ringing** () ► **Voice mail**

- You can connect the incoming call to the Voice Mail Service Center also by pressing (), and pressing .

Forward Specified Calls to Voice Mail Center

You can automatically connect the calls coming from the phone numbers stored in the Phonebook to the Voice Mail Service Center regardless of the Activate/Deactivate setting for the Service.

You can specify up to 20 phone numbers.

This setting is valid only when the caller notifies his/her phone number.

It is advisable to activate "Caller ID request" at the same time.

1 **Detailed Phonebook display** ()

► **Restrictions** ► **Enter your Terminal Security Code** ► **Voice mail**

"Voice mail" is indicated by "★".

- To release "Voice mail", perform the same operation.

Information

- When a call comes in from the phone number set with this function, the ring tone sounds for about one second and then the call is connected to the Voice Mail Service Center. You will be notified of the call by the icons on the desktop (see page 67 and page 112) and "Received calls".
- Even if you set this function, all incoming calls are not connected to the Voice Mail Service Center when you set "Personal data lock" while Voice Mail Service is deactivated.

<Call Waiting>



Using Call Waiting Service

When a call comes in during a call, this service notifies you of it by the ring tone in call, and enables you to place the current call on hold to answer the new call. Further, you can make a call to another person putting the current call on hold.

- To use Call Waiting Service, set "Arrival call act" (see page 370) to "Answer" in advance. When another option is set, you cannot answer a voice call during a voice call even if you set "Call waiting" to "Activate".

Use Call Waiting Service

- 1  **Service**  **Call waiting**  **Do the following operations.**


Item	Operation/Explanation
Activate	 YES
Deactivate	 YES
Check setting	You can check the setting contents of Call Waiting Service.

Answer an Incoming Call during a Call

You can answer another call putting the current call on hold.


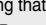
- 1 **Another call comes in during a call** 

The current call is automatically put on hold so that you can receive another call.

- "Multi calling" is displayed when there is the party on hold.
- Each time you press , you can switch the parties you can talk with.



Information

- For an incoming call or communication that is not supported by Call Waiting, press  from the Call Receiving display to show the confirmation display telling that you can answer a new call if you end the current call. Press  to end the current call, and then the Call Receiving display appears. When you select "OK", the Call Receiving display during a call returns.

Information

- If a call comes in during a videophone call, the FOMA phone operates as follows:
 - The moving image, i-motion movie or Flash movie set as the image for incoming calls is not displayed.
 - A "Pre-installed" substitute image is sent to the other party of the current call.
 - The vibrator does not work.
- When a voice call comes in while dialing 117, you hear an in-call ring tone but cannot answer that call. The call is recorded as a missed call in Received Calls.


End a Call to Answer Another Call

You can answer another call after finishing the current call.

- 1 **Another call comes in during a call** 

The ring tone sounds. You can answer the new call.

Continue the Current Call

- 1 **Another call comes in during a call**  **Do the following operations.**

Function menu	Operation/Explanation
Call rejection	You can reject a new incoming call and resume the current call.
Call forwarding	You can forward a new incoming call to the forwarding destination and resume the current call.
Voice mail	You can connect a new incoming call to the Voice Mail Center and resume the current call.

Information

- Incoming calls are rejected during a videophone call, Remote Monitoring or answer-hold (On Hold), or while Record Message is working. The "Missed call" icon appears when the current call ends, and the call is recorded in Received Calls. (The "Missed call" icon might not appear and the received call record might not be recorded depending on the contracts and setting for Voice Mail, Call Waiting, and Call Forwarding Services.)


Hold a Call to Make a New Call

You can make a call to another party putting the current call on hold.

- 1 **Enter another party's phone number during a call** 

You can talk with the party you have dialed.

The call with the first party is automatically put on hold.

- "Multi calling" is displayed when there is the party on hold.
- Each time you press , you can switch the parties you can talk with.




End a Call to Answer the Held Call

You can answer the held call after finishing the current call.

1 During Multi calling

The ring tone sounds.

2 Press or (Answer).


●When the other party you have been talking with ends the call, press  to talk with the party on hold.

End a Held Call

1 During Multi calling (FUNC)

▶ End held call

Information

- When another call comes in while the current call is put on hold, the held call is released.
- When another call comes in during Multi-calling, the Call Receiving display appears. Press  (FUNC) and select “End held call” to end the held call. If you select “End talk”, you can end the current call.

<Call Forwarding>

Using Call Forwarding Service

This service forwards incoming voice calls/videophone calls when you are in a place where radio waves do not reach, the power is turned off, or you do not answer calls within a specified time.

- When Record Message (see page 67) or Remote Monitoring (see page 73) is simultaneously activated and you want to give Call Forwarding Service priority, set its ring time shorter than that for “Record message setting” or “Remote monitoring”.
- When you do not answer an incoming voice call or videophone call while Call Forwarding Service is set to “Activate”, the call is stored as a missed call in “Received calls”, and the “Missed call” desktop icon appears on the Stand-by display.
- When a call comes in while Call Forwarding Service is set to “Activate”, the ring tone (specified by “Select ring tone”) will sound. (You can change the ring time for incoming calls. See page 367.) If you answer the call within the specified time, you can start talking.
- You can just press keys to forward incoming calls. Also, you can forward the call that comes in during a call.

Basic Flow of Call Forwarding Service

Step 1: Store the phone number of forwarding destination.



Step 2: Set Call Forwarding Service to “Activate”.

Step 3: A call comes into your FOMA phone.

Step 4: The call is automatically forwarded to the specified destination if you do not answer.

Use Call Forwarding Service

1 ▶ Service ▶ Call forwarding ▶ Do the following operations.

Item	Operation/Explanation
Activate	<p>▶ Register fwd number ▶ Enter the phone number of forwarding destination.</p> <ul style="list-style-type: none"> ●Press  to select the phone number from the Search Phonebook display. (See page 89) <p>▶ Set ring time</p> <p>▶ Enter a ring time (seconds).</p> <ul style="list-style-type: none"> ●Enter from “000” through “120” in three digits. <p>▶ Activate ▶ YES</p>
Deactivate	▶ YES
Change	<p>▶ Enter the phone number of forwarding destination ▶ Select an item.</p> <p>Change No.</p> <p>... Select this when Call Forwarding Service is activated.</p> <p>Change No. +Activate</p> <p>... Select this while Call Forwarding Service is deactivated and you want to activate the Service as soon as the forwarding destination is changed.</p> <ul style="list-style-type: none"> ●Press  to select the phone number from the Search Phonebook display. (See page 89)
Setting if fwd. No. busy	<p>You can set an incoming call to be connected to the Voice Mail Service Center when the forwarding destination is busy.</p> <p>You need to subscribe to Voice Mail Service to use it.</p> <p>▶ YES</p>
Check setting	You can check the phone number and ring time of forwarding destination.

Information

- If you answer the call while ringing, the call is not forwarded; you can talk.
- If you are out of reach of radio waves or the power is turned off, the ring tone does not sound and the call is automatically forwarded. The call fee from the forwarder to the forwarding destination is charged for the forwarder who has subscribed for the service.
- If the ring time for Call Forwarding Service is set to 0 seconds, the calls are not recorded in Received Calls.

Set On/Off of Forwarding Guidance

1 ▶

▶ Operate following the voice guidance.

- For details, refer to “Mobile Phone User’s Guide [Network Services]”.

Forward an Incoming Call during Ringing

You can forward an incoming call to the phone number you specified as a "Forwarding number" by a simple key operation. Even if you do not set Call Forwarding Service to "Activate", the service will be available using this function.

- 1 During ringing  ()
▶ Call forwarding



Forward Specified Calls to Specified Destination

You can automatically forward the calls from the specified phone numbers stored in the Phonebook after the ring tone sounds for about one second, regardless of the Activate/Deactivate setting for Call Forwarding Service.

You can specify up to 20 phone numbers.

This setting is valid only when the caller notifies his/her phone number.

It is advisable to activate "Caller ID request" at the same time.

- 1 Detailed Phonebook display  ()
▶ Restrictions ▶ Enter your Terminal Security Code ▶ Call forwarding

"Call forwarding" is indicated by "★".

- To release "Call forwarding", perform the same operation.

Information

- Even if you set this function, all incoming calls are not forwarded when you set "Personal data lock" while Call Forwarding Service is deactivated.
- If you have not signed up for Call Forwarding Service or have not set the forwarding destination, the call will be a missed call.

<Nuisance Call Blocking>

Using Nuisance Call Blocking Service

You can register so as not to receive "nuisance calls" such as crank calls.

Once you register a phone number for rejection, calls from that phone number is automatically rejected and the guidance answers the caller.




- When a call comes in from the phone number stored for rejection, the ring tone does not sound. The call is not recorded in Received Calls, either.

■ Relation between each Service and incoming calls while Nuisance Call Blocking Service is activated

Service	Handling of incoming calls from the caller rejected as Register Caller
Voice Mail Service	Call Rejection guidance is played back. (Message is not held.)
Call Forwarding Service	Call Rejection guidance is played back. (Not forwarded to forwarding destination.)
Call Waiting Service	Call Rejection guidance is played back.
Caller ID Display Request Service	Call Rejection guidance is played back.
Public Mode (Drive Mode)	Call Rejection guidance is played back. [Public Mode (Drive Mode) guidance is not played back.]

For details, refer to "Mobile Phone User's Guide [Network Services]".

- 1  ▶ Service ▶ Nuis. call blocking
▶ Do the following operations.

Item	Operation/Explanation
Register caller	You can register the phone number of the call that arrived last for rejection. ▶ YES ▶ OK
Register selected No.	You can register the specified phone number for rejection so that the call from that phone number does not come in. ▶ Enter a phone number ▶ YES • Press  to select the phone number from the Search Phonebook display, and press  to select from the Dialed Call List, and press  to select from the Received Call List.
Delete last entry	You can delete the phone number registered last. Repeat the same procedures to delete phone numbers one by one from the one registered last. ▶ YES ▶ OK
Delete all entries	▶ YES ▶ OK
Check No. of entries	You can check the number of phone numbers registered for rejection.

<Caller ID Request>

Using Caller ID Display Request Service

This service provides the guidance asking the caller ID notification against incoming voice calls/videophone calls without caller IDs, and then automatically disconnects the call.

- The call rejected by Caller ID Display Request Service is not stored in "Received calls", and the "Missed call" desktop icon does not appear.

■ Relation between each Service and incoming calls while Caller ID Display Request Service is activated

Service	Handling incoming call from the caller who does not notify a caller ID
Voice Mail Service	Caller ID Request guidance is played back. (Message is not held.)
Call Forwarding Service	Caller ID Request guidance is played back. (Not forwarded to the forwarding destination.)
Call Waiting Service	Caller ID Request guidance is played back.
Nuisance Call Blocking Service	For the call from the number registered to be rejected, the Call Rejection guidance is played back.
Public Mode (Drive Mode)	Caller ID Request guidance is played back. [Public Mode (Drive Mode) guidance is not played back.]

- 1  ▶ **Service ▶ Caller ID request**
▶ Do the following operations.

Item	Operation/Explanation
Activate	▶ YES ▶ OK
Deactivate	▶ YES ▶ OK
Check setting	You can check the setting contents of Caller ID Display Request Service.

Information

- If you activate this service while you set "Call setting w/o ID" to "Reject", this service has priority.
- You can set and confirm this setting from the FOMA phone with your own UIM inserted. You cannot remote-control the setting from landline phones, public phones, and other mobile phones.

<Dual Network>

Using Dual Network Service

You can use a mova phone with the phone number for your FOMA phone. You can use either your FOMA phone or mova phone depending on the service area.

- You cannot use your FOMA phone and mova phone at the same time.
- You need to operate Dual Network Switching from the phone which is not using the service.







- 1  ▶ **Service ▶ Dual network**
▶ Do the following operations.

Item	Operation/Explanation
Dual network switching	You can switch to the FOMA phone so that you can use it. Operate when the FOMA is in the FOMA service area. ▶ YES ▶ Enter your Network Security Code. • See page 118 for the Network Security Code.
Check setting	You can check the setting contents of Dual Network Service.

Dual Network Service by Key Operations

You can press a few keys to use Dual Network Service instead of using the menu function in the FOMA phone.

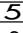


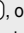
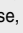

■ To switch the phones (from the phone which is not using the service)

     → Enter your Network Security Code → Guidance for switching → 

■ Check network status (from the phone you want to check)

     → Check → 

Information

- For details, refer to "Mobile Phone User's Guide [Network Services]".
- If you press  through , , or  following the voice guidance, you may not be able to end the call by pressing . In this case, press  again.

Switching Guidance Language between Japanese and English

You can set the guidance for network services such as “Voice mail” or the voice guidance such as for the out-of-service area, to be played back in English.

■ Outgoing (Guidance to yourself)

Language	Description
Japanese	Plays back the guidance in Japanese.
English	Plays back the guidance in English.

■ Incoming (Guidance to the caller)

Language	Description
Japanese	Plays back the guidance in Japanese.
Japanese+English	Plays back the guidance first in Japanese and then in English.
English+Japanese	Plays back the guidance first in English and then in Japanese.

1  **Service** ▶ **English guidance**
▶ Do the following operations.

Item	Operation/Explanation
Guidance setting	▶ Select an item. Outgoing+Incoming ... Sets the guidance for outgoing and incoming calls at a time. Outgoing call ... Sets the guidance for outgoing calls. Incoming call ... Sets the guidance for incoming calls. ▶ Select a guidance language to be set ▶ YES ● If you select “Outgoing+Incoming”, set the guidance for outgoing calls, and then set the guidance for incoming calls.
Check setting	You can check the setting contents of the English guidance.

Information




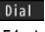
- You can set and confirm this setting from the FOMA phone with your own UIM inserted. You cannot remote-control the setting from landline phones, public phones, and other mobile phones.

Using Service Numbers

You can make calls to the DoCoMo Information Center or DoCoMo repair counter.

- Depending on the UIM you use, the displayed items might differ or no items are displayed.

1  **Service** ▶ **Service numbers**
▶ Do the following operations.

Item	Operation/Explanation
ドコモ故障問合せ (DoCoMo repair counter)	  Dialing 113 starts.
ドコモ総合案内受付 (DoCoMo Information Center)	  Dialing 151 starts.

Selecting Response to Incoming Calls during a Call

You can set how to manage a voice call/videophone call or 64K data communication that comes in during a call when you have signed up for “Voice mail”, “Call forwarding” or “Call waiting”.

- When you have not signed up for “Voice mail”, “Call forwarding”, or “Call waiting”, you cannot answer calls that come in during a call.
- To use “Arrival call act”, you need to set “Set in-call arrival act” to “Activate”.

1  **Service** ▶ **Arrival call act**
▶ Do the following operations.

Item	Operation/Explanation
Voice mail	You can connect voice calls or videophone calls that come in during a call to the Voice Mail Service Center, regardless of the setting for “Call waiting” or “Voice mail”.
Call forwarding	You can forward voice calls or videophone calls that come in during a call to the forwarding destination, regardless of the setting for “Call waiting” or “Call forwarding”.
Call rejection	You can reject voice calls, videophone calls, or 64K data communication that come in during a call.

Item	Operation/Explanation
Answer	<p>If you have set "Call waiting" to "Activate" and receive a voice call during a voice call, you can use "Call waiting". Any of the following operations is available during a voice call (when "Call waiting" is set to "Deactivate"), during a videophone call, or during 64K data communication.</p> <ul style="list-style-type: none"> ● You can answer incoming voice calls, videophone calls, or 64K data communication after finishing the current voice call, videophone call or 64K data communication. ● From the Function menu, you can manually operate voice calls, videophone calls, or 64K data communication that come in during a call. ● When "Voice mail" or "Call forwarding" is set to "Activate", your FOMA phone follows that setting.

Set In-call Arrival Act

You can activate/deactivate the functions you selected in Arrival Call Act and can check the setting contents.

- 1  **Service** ▶ **Set in-call arrival act**
▶ Do the following operations.

Item	Operation/Explanation
Activate	▶ YES
Deactivate	▶ YES
Check setting	You can check the setting contents of In-call Arrival Act.

Information

- You can set and confirm this setting from the FOMA phone with your own UIM inserted. You cannot remote-control the setting from landline phones, public phones, and other mobile phones.

<Remote Control>

Setting Remote Control

You can set "Voice mail" or "Call forwarding" to be operated from touch-tone landline phones, public phones, DoCoMo mobile phones, or others.

- To use "Voice mail" or "Call forwarding" overseas, you need to set "Remote control" to "Activate" in advance.

- 1  **Service** ▶ **Remote control**
▶ Do the following operations.

Item	Operation/Explanation
Activate	▶ YES
Deactivate	▶ YES

Item	Operation/Explanation
Check setting	You can check the setting contents of Remote Control.

Information

- You can set and confirm this setting from the FOMA phone with your own UIM inserted. You cannot remote-control the setting from landline phones, public phones, and other mobile phones.

<Multi Number>

Setting Additional Number



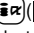
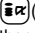
You can add and use the additional number 1 and 2 at maximum as the phone numbers of your FOMA phone besides the basic number.

- When you remove or replace the UIM, the multi number settings (name, phone number, etc.) stored in the FOMA phone might be erased. In this case, store them again.
- The name that corresponds to each multi number (Basic Number/Additional Number1/Additional Number2) appears on the Dialing display/Call Receiving display.
- When you make a call from Redial, Dialed Calls, or Received Calls, the multi number of the call you dialed/received at that time appears and is dialed.

Number Setting

You can edit the registration name for the basic number, register additional numbers, and edit the registration names for them.

- 1  **Service** ▶ **Multi number**
▶ **Number setting** ▶ **Select a phone number.**

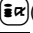- You can register/edit also by pressing  (**FUNC**) and selecting "Edit" or by pressing  (**Edit**).
- Select the basic number or registered additional number to check the registration name and phone number.
- To reset the registration name of the basic number, press  (**FUNC**) and select "Reset BasicNo. name", then select "YES".
- To delete the registered additional number, press  (**FUNC**) and select "Delete this" or "Delete all", then select "YES".

- 2 **Enter a registration name**
▶ **Enter a phone number.**

- You can enter up to 8 full-pitch/16 half-pitch characters for a registration name.
- You cannot edit the phone number of the basic number.

Set Multi Number

By switching this setting, you can make all calls from a specified phone number.

-  **Service** ▶ **Multi number** ▶ **Set multi number** ▶ **Select a phone number.**

Basic Number

...Dials by the contracted phone number.

Additional Number1/2

...Dials by an additional number.

- When the registration name is changed, each registration name is displayed. However, the registration name is not displayed during Personal Data Lock.

2 YES

Set Own Phone Number when Making a Call

Before making a call, you can select a phone number to be notified to the other party from the Function menu, and then make a call.

1 Enter a phone number

or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

2 **Multi number** ▶ **Select a phone number.**

- To cancel the additional number, select "Cancel prefix".
- When you have not signed up for Multi Number, your basic number is used for dialing even if you select an additional number.

Information

- If you select "Basic Number" or "Additional Number1/2", "X590 #", "X591 #", or "X592 #" is added after the phone numbers.

Check Setting

You can check a phone number set for "Set multi number".

1 **Service** ▶ **Multi number** ▶ **Check setting**

Set as Ring Tone

You can set a ring tone for calls that come in to the additional number.

1 **Service** ▶ **Multi number** ▶ **Set as ring tone** ▶ **Select an additional number.**

Go to step 2 on page 98.

When the ring tone is set to "Same as ring tone", the ring tone will be the one set for "Phone" or "Videophone" of "Select ring tone".

<2in1>

Using 2in1

You can use two phone numbers/mail addresses on your single FOMA phone. By using respective modes, you can operate your FOMA phone as if you are using two sets of them.

The following three modes are available with 2in1:

A Mode

You can use your phone number (Number A) to make calls and your i-mode mail address (Address A) to send/receive mail messages, and can browse their related data.

B Mode

You can use your 2in1 phone number (Number B) to make calls and access the sites for Web mail (Address B), and can browse their related data.

Dual Mode


This mode has the functions of both A Mode and B Mode.

- For details on 2in1, refer to "Mobile Phone User's Guide [2in1]".
 - Address B is used to send/receive mail messages via the dedicated Web mail site.
 - You can use packet communication even in B Mode if you subscribe to i-mode.
 - You can subscribe to either 2in1 or Multi Number.
 - When you replace a UIM with another one (2in1 contractor → 2in1 contractor) while using 2in1, perform "2in1 function OFF" (see page 373) and then set "2in1 setting" to "YES", or perform "Auto acquire No. B" (see page 342), to acquire the correct Number B.
- When you replace a UIM with another one (2in1 contractor → 2in1 non-contractor), perform "2in1 function OFF" as well to update the owner's information to the correct one.
- See page 375 for how this service works for each mode.

Activate 2in1

1 **Service** ▶ **2in1 setting** ▶ **Enter your Terminal Security Code** ▶ **YES**

When you activate 2in1, the 2in1 Menu display appears.




- This display appears also by pressing and holding  for at least one second with the FOMA phone open and entering your Terminal Security Code.




Configure 2in1 Setting

1 2in1 Menu display

▶ Do the following operations.

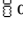Item	Operation/Explanation
Mode switching	<p>You can switch to the mode you use.</p> <p>▶ Select a mode.</p> <ul style="list-style-type: none"> When 2in1 is activated, the display for selecting the mode appears also by pressing and holding  for at least one second with the Stand-by display shown, and entering your Terminal Security Code. When "Mode link" is activated, the confirmation display appears telling that the setting for "Receive avoidance set." is also changed.
Phonebook 2in1 setting	<p>You can change Phonebook 2in1 Setting for the Phonebook entry stored in the FOMA phone.</p> <p>▶ Select an item.</p> <p>Set to A Sets as the Phonebook entry for A. You can use it in A Mode and Dual Mode.</p> <p>Set to B Sets as the Phonebook entry for B. You can use it in B Mode and Dual Mode.</p> <p>Set to Common Sets as the common Phonebook entry for A and B. You can use it in all modes.</p> <p>▶ Select a setting method.</p> <p>Set one Sets a Phonebook entry you call up.</p> <p>Set some . . . Select multiple Phonebook entries from the Phonebook List you call up, then press  (Finish).</p> <p>Set group. . . Sets a Phonebook group you call up.</p>
Stand-by display	<p>You can set the Stand-by display that appears in Dual Mode or B Mode.</p> <p>▶ Select a mode ▶ Set the Stand-by display.</p> <ul style="list-style-type: none"> See page 104 for how to set the Stand-by display. However, "  appli display" is not displayed. If you select "Release", the setting returns to the default.
Set call/receive No. (Disp. call/receive No.)	<p>You can set the character font of phone numbers displayed on the Dialing/Call Receiving display, detailed Dialed/Received Call display, detailed Redial display, and detailed Sent Chaku-moji Message display for when you make/receive calls by Number B.</p> <p>▶ Pattern 1 or Pattern 2</p>

Item	Operation/Explanation
Set call/receive No. (Ringtone set. for No. B)	<p>You can set a ring tone for Number B and a mail ring tone for Address B.</p> <p>▶ Select an item.</p> <p>Phone Sets a ring tone for voice calls.</p> <p>Video-Phone Sets a ring tone for videophone calls.</p> <p>Mail Sets a ring tone for i-mode mail messages and SMS messages.</p> <p>▶ Select a type of ring tone.</p> <p>Go to step 3 on page 98.</p> <ul style="list-style-type: none"> If you select "Release", the setting returns to the default.
2in1 function OFF	<p>You can deactivate 2in1.</p> <p>▶ YES</p>
Receive avoidance set. (Change recv. avoid.)	<p>You can set Receive Avoidance Set. manually for number A and number B.</p> <p>▶ Change recv. avoid. ▶ A number or B number ▶ Select an item.</p> <p>Unchange Does not change Receive Avoidance Set.</p> <p>Receive Receives the calls to the selected phone number.</p> <p>Avoid. Avoids the calls to the selected phone number.</p> <p>▶  (Finish)</p> <ul style="list-style-type: none"> When "Mode link" is activated, the confirmation display appears telling that it is necessary to deactivate it.
Receive avoidance set. (Check recv. avoidance)	<p>You can check Receive Avoidance Set.</p> <p>▶ Check recv. avoidance</p>
Receive avoidance set. (Mode link)	<p>You can activate/deactivate Mode Link. When you activate it, Receive Avoidance Set. automatically changes by linking to switching of the mode of 2in1; You can receive a call only to Number A when in A Mode, only to Number B when in B Mode, and to both Number A and B when in Dual Mode.</p> <p>▶ Mode link ▶ YES</p>
Receive avoidance set. [Recv. avoid. (abroad)]	<p>You can operate Receive Avoidance Set. from overseas.</p> <p>▶ Recv. avoid. (abroad) ▶ YES ▶ Operate following the voice guidance.</p> <ul style="list-style-type: none"> When "Mode link" is activated, the confirmation display appears telling that it is necessary to deactivate it.

Information

<Stand-by display>

- See “Set Stand-by Display” on page 104 to set the Stand-by display in A Mode.

<Set call/receive No. (Disp. call/receive No.)>

- The setting is retained during Personal Data Lock.
- See “Change Character Font of Phone Numbers” on page 115 to set the font of phone numbers displayed for when you make/receive calls by Number A.

<Set call/receive No. (Ringtone set. for No. B)>

- See “Select Ring Tone” on page 98 to set a ring tone for Number A and a mail ring tone for Address A.
- If a call comes in to Number B without notifying his/her caller ID, the ring tone set by “Call setting w/o ID” sounds.

Make a Call in Dual Mode

In Dual Mode, Number A dialing is the default setting when you make a call from the Phonebook entry of A/ common setting or the dialed/received call record of Number A, and Number B dialing is the default setting when you make a call from the Phonebook entry of B setting or the dialed/received call record of Number B. Further, you can select a phone number to be notified to the other party before making a call by the following operations.

When Entering a Phone Number to Make a Call

1 Enter a phone number



2 Number A or Number B

- To cancel, select “Cancel”.

When Selecting Your Caller ID from Phonebook or Call Records

1 Bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

2 (FUNC) ▶ 2in1 dial

▶ Number A or Number B

- To cancel, select “2in1 dial OFF”.

■ Services available to each mode

● The items whose operations differ depending on the mode are listed. (Items that work the same way as with A Mode are omitted.)

Item		A Mode	B Mode	Dual Mode
Voice call	Dialing	Number A	Number B	Selectable when dialing ^{**1}
Videophone call	Receiving	Receiving all calls ^{**2}		
Phonebook ^{**3}	Displaying ^{**4}	Phonebook entries with A setting/common setting	Phonebook entries with B setting/common setting	All Phonebook entries
	Changing to name ^{**5}	Phonebook entries with A setting/common setting	Phonebook entries with B setting/common setting	All Phonebook entries
	2in1 setting when newly storing	Phonebook entries with A setting	Phonebook entries with B setting	Phonebook entries with A setting
	Receiving all entries using infrared rays/iC or from microSD memory card	Copying sender's 2in1 setting ^{**6}		
	Receiving one entry using infrared rays/iC or from microSD memory card	Phonebook entries with A setting	Phonebook entries with B setting	Phonebook entries with A setting
	"Copy to UIM"	At the time of "Copy to UIM", 2in1 setting becomes common		
	"Copy from UIM"	Phonebook entries with A setting	Phonebook entries with B setting	Phonebook entries with A setting
Redial Dialed calls Received calls Received address records Detailed sent Chaku-moji message	Displaying	Records for Number A/ Address A	Records for Number B/ Address B	All records
Mail/SMS	Displaying ^{**7}	<ul style="list-style-type: none"> ● Sent/Received mail messages for Address A ● Sent/Received SMS messages for Number A 	<FOMA phone> <ul style="list-style-type: none"> ● Received mail messages saved to the FOMA phone for Address B [mail messages you performed "端末に保存 (save to the FOMA phone)" on Web mail site], notification mail for new mail, and alarm notification mail ● Received SMS messages for Number B <Web mail site> Sent/Received mail messages for Address B	<FOMA phone> <ul style="list-style-type: none"> ● Sent/Received mail messages for Address A, received mail messages saved to the FOMA phone for Address B, notification mail for new mail, and alarm notification mail ● Sent/Received SMS messages for Number A ● Received SMS messages for Number B <Web mail site> Sent/Received mail messages for Address B

Item		A Mode	B Mode	Dual Mode
Mail/SMS	Sending	<ul style="list-style-type: none"> ● Mail messages from Address A ● SMS messages from Number A 	<FOMA phone> Unable to send mail/SMS messages <Web mail site> Mail messages from Address B	<FOMA phone> <ul style="list-style-type: none"> ● Mail messages from Address A**8 ● SMS messages from Number A <Web mail site> Mail messages from Address B
	Receiving	Mail messages to Address A/ SMS messages to Number A (with ring tone/vibration) Mail messages to Address B that you performed the saving operation to the FOMA phone/ Notification mail for new mail or alarm notification mail/SMS messages to Number B (without ring tone/vibration)	Mail messages to Address A/ SMS messages to Number A (without ring tone/vibration) Mail messages to Address B that you performed the saving operation to the FOMA phone/ Notification mail for new mail or alarm notification mail/SMS messages to Number B (with ring tone/vibration)	Mail messages to Address A/ SMS messages to Number A (with ring tone/vibration) Mail messages to Address B that you performed the saving operation to the FOMA phone/ Notification mail for new mail or alarm notification mail/SMS messages to Number B (with ring tone/vibration)
	Receiving all messages using infrared rays/iC or from microSD memory card	Copying sender's state**6		
	Receiving one message using infrared rays/iC or from microSD memory card	Mail for Address A/SMS messages for Number A		
	"Copy to UIM" (SMS only)	SMS messages for Number A		
	"Copy from UIM" (SMS only)	SMS messages for Number A	Undisplayable	SMS messages for Number A
	PushTalk	Dialing	Number A	Unusable
Receiving		Number A		
PushTalk Phonebook		Displayable	Undisplayable	Displayable
i-oppli	All usable	Usable**9	Usable**10	
Own number	Number A	Number B	Number A/Number B	
Voice mail	Recording voice mail messages	Recording all voice mail messages**11		
	Connection number for the service**12	Number A	Number B**13	Selectable when dialing
Call forwarding	Forwarding to the forwarding destination	Forwarding all calls		
	Connection number for the service**12	Number A	Number B**14	Selectable when dialing

**1 The Phonebook entry with A setting or common setting is dialed by Number A and the Phonebook entry with B setting is dialed by Number B by default.


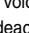
**2 When you set "Call acceptance" in A (B) Mode, you can receive calls only from the specified phone numbers in A/Dual (B/Dual) Mode, but you receive calls from all phone numbers in B (A) Mode.
 When you set "Call rejection" in A (B) Mode, you can reject calls only from the specified phone numbers in A/Dual (B/Dual) Mode, but you receive calls from all phone numbers in B (A) Mode.

**3 When you set a Phonebook entry as secret data, secret mode has priority.

**4 Regardless of the mode, all the Phonebook entries on the microSD memory card are displayed.

**5 This function checks the phone number/mail address with the Phonebook, and changes it to the name of the Phonebook entry for displaying when the caller's phone number, receiver's phone number, sender's phone number, sender's mail address, or receiver's mail address is stored in the Phonebook.

**6 When the sender's model does not support 2in1, all data files are set with A setting.

- ※7 In B Mode, mail messages and SMS messages on the microSD memory card are not displayed if they do not have B Mode attribute information.
- ※8 When you compose a mail message in Dual Mode, you can select a receiver's mail address from the Phonebook entries set with B setting, however, note that the mail message is sent from Address A.
- ※9 Except message application programs, mail-linked i-øpli programs, and the i-øpli Stand-by display.
- ※10 Except the i-øpli Stand-by display.
- ※11 Up to 20 voice mail messages for Number A and Number B can be recorded in total.
The icon such as  appears when the voice mail messages for Number A are recorded, and the icon such as  appears when the voice mail messages for Number B are recorded.
- ※12 You can activate/deactivate the service and make other settings for Number A and Number B respectively.
- ※13 When you execute "Check setting" of "Voice mail", the confirmation display appears asking which number you use for dialing, Number A or Number B.
- ※14 When you execute "Check setting" of "Call forwarding", the confirmation display appears asking which number you use for dialing, Number A or Number B.

Information

- When you delete an image or melody set to a Phonebook entry with B setting or move it to the microSD memory card in A Mode (or a Phonebook entry with A setting in B Mode), the message telling that the file is set to another function does not appear.
- In B Mode, you cannot use the following mail functions:

· Composing i-mode mail/SMS messages	· Templates	· Photo-sending
· Receive option	· Forward	· Reply/Reply with quote
· Mail settings	· Chat mail	· Displaying Outbox/Draft
· Mail To function	· i-øpli To function from i-mode mail text	
- In Dual Mode, you cannot compose i-mode mail/SMS messages, make a PushTalk call, and use Photo-sending from a redial item/dialed call record for Number B, and received call record for Number B.
- In Dual Mode, you cannot execute "Reply" and "Reply with quote" from the mail/SMS message sent to Number B/Address B.
- When you perform following operations in Dual Mode, calls are made from Number A:
 - When you make a call from Pause Dial
 - When you make a call from Record Message
 - When you make an emergency call at 110/119/118 during Lock All
- When you make a call/AT command call from an external device, the call is made from Number A in A Mode and Dual Mode, and from Number B in B Mode.
- Regardless of the current mode, you can save up to 2,500 i-mode mail messages including SMS messages in the Inbox.
- The i-mode mail/SMS messages sent to Address B/Number B cannot be replied to, however, they are not saved to the folder set to "Reply impossible".
- "DEL all read mails", "DEL all recv. mails", "Delete read mails", "Delete all SMS-R", "DEL all frm folder", and "Delete all" apply to all the i-mode mail/SMS messages.
- Regardless of the current mode, "Delete all" of the Phonebook applies to all the Phonebook entries.

<OFFICEED>

Using OFFICEED

“OFFICEED” is an in-group fixed bill service that applies to the specified IMCS (In-building Mobile Communication System). The separate subscription is required for use.

For details, check the DoCoMo-enterprise-oriented web page (<http://www.docomo.biz/d/212/>). (Japanese only)

Use OFFICEED Out-of-Area Forwarding Function

You can use the OFFICEED out-of-area forwarding function to forward OFFICEED calls to out-of-OFFICEED area.

- 1  **Service** ▶ **OFFICEED**
▶ Do the following operations.



Item	Operation/Explanation
Area display setting	You can set whether to display “OFFICEED” while you are in the OFFICEED area. ▶ ON or OFF • If you select “ON”, the confirmation display appears asking whether to set Area Display Setting to “ON”.
Activate forwarding	You can activate the OFFICEED out-of-area forwarding function. ▶ YES
Deactivate forwarding	You can deactivate the OFFICEED out-of-area forwarding function. ▶ YES
Check	You can check the setting of the OFFICEED forwarding set, out-of-area forwarding function.



<Additional Service>

Using Additional Services

When a new network service is provided by DoCoMo, you can register that service in the menu to use it.

Add New Service

- 1  **Service** ▶ **Additional service**
▶ **Additional service**
▶ **Highlight <Not stored> and press**
 **(FUNC)** ▶ **Add new service**

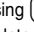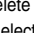- You can change the setting for the registered service by pressing  **(FUNC)** and selecting “Edit”.
- To delete the registered service, press  **(FUNC)** and select “Delete this” or “Delete all”, then select “YES” → “OK”.
- You can register up to 10 network services.

- 2 **Enter a service name**
▶ **Enter number or Enter USSD number**

Select either “Enter number” or “Enter USSD number” according to the service contents you add.

- You can enter up to 10 full-pitch/20 half-pitch characters.

- 3 **Enter either a special number or a service code (USSD number)** ▶ **YES**

Information

- You need to check and enter “Special number” or “Service code” supplied by DoCoMo for using the services.


Special number

..... Number for connecting the Service Center.

Service code (USSD number)

..... With the FOMA phone, enter it as USSD. The code is for notifying to the Service Center.



Use Registered Service



- 1  **Service** ▶ **Additional service**
▶ **Additional service** ▶ **Select a service**
▶  **(Send)**

Dialing to the Service Center starts.

Register Additional Guidance

For when you execute the additional services, you can register up to 10 additional guidance items which correspond to the codes (USSD) that are returned from the Service Center. The additional guidance name is displayed when the registered command is returned as a reply.

- 1  **Service** ▶ **Additional service**
▶ **Additional guidance**
▶ **Highlight <Not stored> and press**
 **(FUNC)** ▶ **Add new guidance**

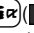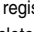- You can check the setting by selecting the registered guidance.
- You can change the setting of the registered guidance by pressing  **(FUNC)** and selecting “Edit”.
- To delete the registered guidance, press  **(FUNC)** and select “Delete this” or “Delete all”, then select “YES” → “OK”.

- 2 **Enter a command.**

- Enter the code (USSD) provided by DoCoMo.

- 3 **Enter an additional guidance name** ▶ **YES**

- You can enter up to 10 full-pitch/20 half-pitch characters.

PC Connection



Data Communication Available from FOMA Phone	380
Before Using	380
Preparation Flow for Data Communication	382
AT Command	383
About CD-ROM	383
Introduction of DoCoMo Keitai Datalink	383

For details on data communication, refer to the PDF version of “Manual for PC connection setting” on the provided CD-ROM.

Set “FOMA P905i CD-ROM” in your personal computer, and click “MANUAL”, and then “Manual for PC connection setting (PDF File)”.

To see the PDF version of “Manual for PC connection setting”, you need to have Adobe® Reader® (version 6.0 or higher recommended).

If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it. For details such as how to use Adobe® Reader®, refer to Help.

Data Communication Available from FOMA Phone

The data communication services you can use by connecting the FOMA phone to a personal computer are classified as follows: packet communication, 64K data communication, and data transfer (OBEX). The FOMA phone is equipped with the adapter function for packet communication.

- You might not be able to activate or operate other functions during data communication. See "Multiaccess Combination Patterns" on page 418 for details.
- 64K data communication are not available overseas.

Packet Communication

This service requires a communication fee according to the amount of data you sent and received. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps) It uses an access point which supports FOMA packet communication such as DoCoMo Internet access service "mopera U"/"mopera".

To use this service, connect the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option) or Bluetooth, and then carry out settings. The packet communication is suitable for using applications through the high-speed communication.

- The packet communication is charged according to the amount of data you sent and received. Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files.
- The data is sent/received at the maximum speed of 384 kbps outside the FOMA High-speed Area.
- When you use the packet communication with "sigmarion II", "sigmarion III", or "musea" of DoCoMo's PDA, the data is sent/received at the maximum speed of 384 kbps. High-speed communication for FOMA High-speed Area is not supported.

64K Data Communication

This service requires a communication fee according to the duration of connection. By connecting the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option) or Bluetooth, you can execute communication.

To use this service, connect to an access point which supports FOMA 64K data communication such as DoCoMo Internet access service "mopera U"/"mopera", or an ISDN-synchronous 64K access point.

- The 64K data communication is charged according to the duration of connection. Note that a communication fee becomes expensive if you use this service for a long time.

Data Transfer (OBEX)

This service sends/receives data using infrared rays or the FOMA USB Cable with Charge Function 01 (option). By infrared data exchange, you can exchange data with another FOMA phone or a device having the infrared data exchange function such as a personal computer. To perform data transfer (OBEX) between the FOMA phone and personal computer via the FOMA USB Cable with Charge Function 01, install the DoCoMo keitai datalink (see page 383).

Information

- You cannot use PHS services such as PIAFS (32K/64K data communication) from the FOMA phone.
- The FOMA phone does not support Remote Wakeup.
- The FOMA phone does not support the FAX communication.
- You can perform data communications by connecting the FOMA phone with DoCoMo's PDA "sigmarion II", "sigmarion III", or "musea". To use "sigmarion II" or "musea", the update is required. For details such as how to update them, refer to the DoCoMo web page.

Before Using

Charge of Internet service provider

To use the Internet, you need to pay the charge for the Internet service provider you use. Besides the FOMA service fee, you need to directly pay this charge to the Internet service provider. For details on the charge, contact the Internet service provider you use.

You can use the DoCoMo Internet access service, "mopera U"/"mopera".

To use "mopera U", subscription (charged) is required. To use "mopera", subscription and monthly charge are not required. However, the maximum communication speed of sending/receiving data is limited to 384 kbps.

Setting access point (Internet service provider, etc.)

The access points for the packet communication and 64K data communication differ. To use the packet communication, connect to an access point which support packet communication. To use the 64K data communication, connect to an access point which supports FOMA 64K data communication or ISDN-synchronous 64K.

- You cannot connect to the DoPa access point.
- You cannot connect to PHS 64K/32K data communication access point such as PIAFS.

About user authentication for accessing network

User authentication (ID and password) may be required at connection to some access points. In this case, enter your ID and password on the communication software program (dial-up network). ID and password are specified by the Internet service provider or network administrator of the access point. For details, contact the provider or network administrator.

About access authentication for using browser

If you need FirstPass (user certificate), install the FirstPass PC software from the provided CD-ROM and make the setting.

For details, refer to “FirstPassManual” (PDF format) in the “FirstPassPCSoft” folder on the CD-ROM.

Adobe® Reader® (version 6.0 or higher is recommended) is required to see “FirstPassManual” (PDF format). If it is not installed in your personal computer, install Adobe® Reader® from the provided CD-ROM to see it.

For details such as how to use it, refer to Adobe® Reader® Help.

Conditions of packet communication and 64K data communication

To carry out the communication by using the FOMA phone in Japan, the following conditions are required:

- The personal computer to be used can use the FOMA USB Cable with Charge Function 01 (option).
- When connecting using Bluetooth, the personal computer should support Dial-up Networking Profile of Bluetooth Specification Ver. 1.1 or Ver. 1.2.
- The PDA to be used should support FOMA packet communication and 64K data communication.
- Within the FOMA service area
- For packet communication, the access point should support packet communication of the FOMA.
- For 64K data communication, the access point should support the FOMA 64K data communication or ISDN-synchronous 64K.

Even when these conditions are satisfied, if the base station is congested or the radio wave conditions are bad, you may not carry out the communication.

About Operating Environment

For the data communication, the following operating environment is required for your personal computer:

■ PC main unit

PC/AT compatible model

When using the FOMA USB Cable with Charge Function 01 (option):

USB port (Universal Serial Bus Specification Rev1.1 compliant)

When using Bluetooth:

Bluetooth Specification Ver. 1.1 or Ver. 1.2 compliant (Dial-up Networking Profile)

Display resolution 800 x 600 dots, High Color 16 bits or more recommended.

■ OS

Windows 2000, Windows XP, Windows Vista (Japanese version in each)

■ Memory requirements

Windows 2000: 64 Mbytes or more

Windows XP: 128 Mbytes or more

Windows Vista: 512 Mbytes or more

■ Hard disk space size

Unused memory space of 5 Mbytes or more

- The operation on the upgraded OS is not guaranteed.
- The memory requirements and hard disk space size may vary depending on the system environment.

Necessary Devices

The following hardware and software programs are required besides the FOMA phone and personal computer:

- FOMA USB Cable with Charge Function 01 (option) or FOMA USB Cable (option)*
 - Provided “FOMA P905i CD-ROM”
- ※ For USB connection

Information

- Use a dedicated “FOMA USB Cable with Charge Function 01” or “FOMA USB Cable”. The USB cable for personal computers cannot be used because the shape of the connector differs.
- In this manual, operations are described for the case of using FOMA USB Cable with Charge Function 01.
- If you use a USB hub, the devices may not work correctly.

Connect FOMA Phone to Other Devices

The following three ways are available for connecting the FOMA phone to another device:

Use FOMA USB Cable with Charge Function 01

Connect the FOMA phone to a personal computer provided with the USB port using the FOMA USB Cable with Charge Function 01 (option).

This way of connection applies to all types of communications such as packet communication, 64K data communication, and data transfer.

- Set "USB mode setting" to "Communication mode". (See page 300)
- You need to install the "FOMA communication setup files" (driver) before use.

Use Bluetooth

Connect a Bluetooth compatible personal computer wirelessly to the FOMA phone.

This way of connection applies to packet communication and 64K data communication.

- When you perform data communication by using Bluetooth, the high speed communication is applied to the FOMA phone. However, you may not be able to communicate at the maximum speed because of the limit of communication speed of Bluetooth.
- Use a Bluetooth-linked standard modem or a Bluetooth modem provided by the Bluetooth maker. Contact the maker of your personal computer or Bluetooth maker for how to install and to set up.

Use Infrared Data Exchange

By using infrared rays, you can send/receive data between your FOMA phone and another FOMA phone, mobile phone, or personal computer provided with the infrared data exchange function. (See page 303)

This applies only to data transfer.

Preparation Flow for Data Communication

The following outline shows a preparation flow for packet communication or 64K data communication: For details, refer to the PDF version of "Manual for PC connection setting".

For USB connection

Connect a personal computer to the FOMA phone using the FOMA USB Cable with Charge Function 01 (option).

For Bluetooth connection

Connect a personal computer wirelessly to the FOMA phone using Bluetooth.

Install the "FOMA communication setup files" (driver).

Check the setting after installation.

Check the modem.

Install the "FOMA PC setup software".

Carry out the setting manually without using the "FOMA PC setup software".

Connect.

■ When installing "FOMA communication setup files" (driver)

Use the provided "FOMA P905i CD-ROM". You are advised to install "FOMA PC setup software" for establishing the APN or dial-up setting easily when you communicate.

Install FOMA Communication Setup Files (Driver)

Installing the FOMA communication setup files (driver) is required when you connect the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 (option) for the first time.

Prepare Bluetooth Communication

You can make data communication by connecting a Bluetooth compatible personal computer wirelessly to your FOMA phone.

- See page 348 for details on Bluetooth.

FOMA PC Setup Software

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings for the communication. By using the “FOMA PC setup software”, you can easily carry out the settings. If required, you can set the packet communication and 64K data communication without using the “FOMA PC setup software”.

AT Command

AT commands are used to specify and modify the functions of the FOMA phone on the personal computer.

About CD-ROM

The provided CD-ROM contains the software programs for using data communication on your FOMA phone, “Manual for PC connection setting” and “Kuten Code List” (PDF file). For details, refer to the provided CD-ROM.

<Contained software programs/PDF>

- FOMA通信設定ファイル
(FOMA Communication Setup Files)
- FOMA PC設定ソフト (FOMA PC Setup Software)
- FOMA/バイトカウンタ (FOMA byte counter)
- ドコモケータイ datalinkのご案内
(DoCoMo keitai datalink information)
- FirstPass PCソフト (FirstPass PC Software)
- mopera Uのご案内 (mopera Uかんたんスタート/Uかんたん接続設定ソフト/Uオリジナルデータ取得ソフト/FOMA/バイトカウンタ)
[mopera U information (mopera U start up tool/mopera U connection & setting tool/mopera U requesting original data/ FOMA byte counter)]
- ナップスター®のご案内 (Napster® information)
- PDF version of “パソコン接続マニュアル”
“Manual for PC connection setting”
- PDF version of “区点コード一覧”/“Kuten Code List”
- Adobe®Reader®


■When a warning message appears

When you set the CD-ROM on your personal computer, an alert message might appear on the display as shown below. This alert message appears depending on the security settings of Internet Explorer, however, you can use your computer without any problem.

Click “はい (YES)”.

※The display below is for when you use Windows XP.

It might differ depending on the environment of the computer you use.

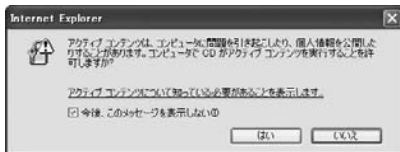

Introduction of DoCoMo Keitai Datalink

“DoCoMo keitai datalink” is the software program that enables you to back up your Phonebook entries and i-mode mail messages to your personal computer and edit them. The software program is distributed from the DoCoMo web page. For details and how to download, refer to the web page below. You can access the web page below from the provided CD-ROM as well.

<http://datalink.nttdocomo.co.jp/> (Japanese only)

- For details on how to download, transferable data, operating environments such as compatible OS, installation method, operating method, and restrictions, refer to the web page above. For operations after installation, refer to Help contained in the software program. To use the DoCoMo keitai datalink, you need to separately have the USB Cable (option).



Overseas Use



Outline of International Roaming (WORLD WING)	386
Services Available Overseas	386
Confirmation for Using	387
Making a Call from the Country You Stay	389
Receiving a Call	390
Setting a Network to Use	Switch 3G/GSM 390
Setting a Search Method of Carrier	Network Search Mode 390
Setting a Carrier to Preferentially Connect to	PLMN Setting 391
Displaying a Carrier on the Stand-by Display	Operator Name Display 391
Confirming a Communication System	Status in the Area 391
Setting Guidance during Roaming	Set Roaming Guidance 391
Setting Your FOMA Phone to Reject Calls during Roaming	Call Barring 392
Using Network Services during Roaming	392

Outline of International Roaming (WORLD WING)

International Roaming (WORLD WING) is a service that enables you, using local carrier's networks, to make calls or to communicate in foreign countries where are out of the service area of the FOMA network.

- There are following three communication systems for network services overseas:

3G Network

Third generation mobile communications system that conforms to the world standard specifications, 3GPP (Third Generation Partnership Project).*

※ This is the regional standards organization for developing common technical specifications for third-generation mobile telecommunication systems (IMT-2000).

GSM (Global System for Mobile Communications) Network

The most widespread 2G digital mobile standard system available worldwide.

GPRS (General Packet Radio Service) Network

A 2.5G mobile standard system enabling high-speed packet communications by GPRS using GSM communication method.

- At the time of purchase, the FOMA phone is set to automatically switch networks in foreign countries. (See page 390)
- You are advised to read the following booklets to use your FOMA phone overseas:

Booklet title	Contents
Mobile Phone User's Guide [International Services]	Describes the details of International Roaming Service such as the contents of the service, billing, and cautions.
Mobile Phone User's Guide [Network Services]	Describes the contents of each local network service and cautions.

Information

- Quick Manual "For Overseas Use" is attached to the end of this manual. Refer to it when you use the FOMA phone overseas.
- For the country codes, international call access codes, and international prefix numbers for the universal number, refer to "Mobile Phone User's Guide [International Services]" or the DoCoMo Global Service web page.
- Overseas use fee is added to your monthly bill. You might be requested, however, to pay according to the invoice for the following month on and after depending on the overseas carrier of your stay. Note that the invoice for the total of the fees to be paid for the month might be separately issued.

Services Available Overseas

Communication Service	3G	GSM	GPRS
Voice call ※1 In the country you stay, you can use the phone number as used in Japan to make or take local calls, or to make international calls to Japan or to other countries.	○	○	○
Videophone call ※1 You can make international videophone calls to users of the specified 3G mobile phone carriers overseas and FOMA users.	○	×	×
i-mode Perform the overseas usage settings. For details, refer to "Mobile Phone User's Guide [i-mode]".	○	×	○
i-mode mail You can send/receive i-mode mail overseas by the same address as used in Japan.	○	×	○
SMS	○	○	○
i-Channel ※2	○	×	○
Packet communication by connecting with a personal computer	○	×	○

○: Available ×: Not available

※1 In B Mode or Dual Mode of 2in1, you cannot make calls from Number B.

※2 Auto-updates are automatically suspended when you are connected to an overseas carrier. To resume the auto-updates of i-Channel, you need to make the i-Channel settings again. When you use i-Channel overseas, the communication fee for auto-updates of the basic channel also applies. (In Japan, the fee is included in the monthly service bill.)

- The GPS functions and 64K data communications are not available overseas.
- Some services are not available depending on the carrier or network. For connectable countries, regions, and carriers, refer to the DoCoMo Global Service web page.

Confirmation for Using

Confirmation before Departure

Confirm below in Japan before you use the FOMA phone overseas.

■ About contract

- You do not need to subscribe to WORLD WING if you have subscribed to the FOMA service after September 1, 2005. If you offered that you do not need WORLD WING at the time you signed up for the FOMA service, or when you have canceled WORLD WING midway, you are required to newly subscribe to WORLD WING.
- If you have signed up for the FOMA service before August 31, 2005, and have not yet subscribed to WORLD WING, you are required to subscribe to it.
- Insert the UIM (other than blue one) that supports "WORLD WING" into the FOMA phone. (See page 38)
- This service is not available with some billing plans.

■ About charging batteries

- See page 18 for cautions for handling AC adapter.
- See page 42 and page 43 for charging batteries using AC adapter.

■ About the setting of network service

When you have signed up for network services, you can operate to activate/deactivate the network services from overseas except some operations.

- Even with the network services that you can operate to activate/deactivate, you might not be able to use the services depending on the overseas carrier. Also, some network services are available only in Japan.

To use network services overseas, refer to "Mobile Phone User's Guide [International Services]" or "Mobile Phone User's Guide [Network Services]" before departure.





■ About SMS

Even during international roaming, you can send/receive SMS messages to and from the other party who uses the FOMA phone in Japan or overseas or who uses overseas carriers.

- As the destination address for sending SMS to the other party who is using an overseas carrier, enter "+" and a country code to the head of the destination phone number. When the destination phone number begins with "0", however, enter the phone number except for the "0". However, include "0" when making a call to some countries or regions such as Italy.
- When the text of an SMS message sent to the other party who is using an overseas carrier contains characters that do not support those on the destination phone, the characters might not be correctly displayed. For details, refer to "Mobile Phone User's Guide [International Services]" or "Mobile Phone User's Guide [Network Services]".

Check Required at the Country You Stay

After you arrive at the country overseas, once turn the power off and then turn on to automatically set an available carrier in that country.

- The network system you are currently using appears at the upper side of the display.
 -  : 3G network that supports packet communication by connecting with a personal computer
 -  : 3G network that does not support packet communication by connecting with a personal computer
 -  : GSM network
 -  : GPRS network
- When "Operator name display" is set to "Display ON", the connected carrier appears on the Stand-by display.
- When "Network search mode" is set to "Auto", and you move out of the service area of the network you are connected to, the available network of another carrier is automatically searched for and you are re-connected to it.

■ About inquiries

For lost, stolen, and cost settlement, or malfunction of your FOMA phone overseas, refer to "Loss or theft of FOMA terminal or payment of cumulative cost overseas" or "Failures encountered overseas" on the back page of this manual. Note that you are still charged the call and communication fees incurred after you lose it or have it stolen.

- You need to add "international call access code for the country you stay" or "international prefix number for the universal number" that is assigned to the country you stay, to the head of the phone number for inquiries.
- For the latest information about the international call access codes and international prefix numbers for the universal number, refer to the DoCoMo Global Service web page.

■ International call access codes for major countries (Table 1)

The international call access codes for major countries are listed below. (As of August 2007)

Service area	Access code	Service area	Access code
Australia	0011	Monaco	00
Belgium	00	Netherlands	00
Brazil	0041/ 0014	New Zealand	00
		Norway	00
Canada	011	Philippines	00
China	00	Poland	00
Czech Republic	00	Portugal	00
Denmark	00	Russia	810
Finland	00	Singapore	001
France	00	South Korea	001
Germany	00	Spain	00
Greece	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	002
India	00	Thailand	001
Indonesia	001	Turkey	00
Ireland	00	United Arab Emirates	00
Italy	00	United Kingdom	00
Luxembourg	00	United States of America	011
Macau	00		
Malaysia	00	Vietnam	00

■ International prefix numbers for the universal number (Table 2)

The international prefix numbers for the universal number for major countries are listed below. (As of August 2007)

Service area	Inter-national prefix number	Service area	Inter-national prefix number
Argentina	00	Malaysia	00
Australia	0011	Netherlands	00
Austria	00	New Zealand	00
Belgium	00	Norway	00
Brazil	0021	Peru	00
Bulgaria	00	Philippines	00
Canada	011	Portugal	00
China	00	Singapore	001
Colombia	009	South Africa	09
Denmark	00	South Korea	001
Finland	990	Spain	00
France	00	Sweden	00
Germany	00	Switzerland	00
Hong Kong	001	Taiwan	00
Hungary	00	Thailand	001
Ireland	00	United Kingdom	00
Israel	014	United States of America	011
Italy	00		
Luxembourg	00		

- The numbers are not available in some areas.
- You can use the universal numbers only in countries listed in the table above.
- When making a call from a hotel, you may be separately charged the phone usage fee from the hotel. (You are responsible for the fee.) You should check with the hotel before making a call.
- Note that, in many cases, the universal number may not be used from a mobile phone, public phone, or hotel phone, etc.

Check Required after Homecoming

After you return to Japan, the FOMA network is automatically searched and connected.

Set "Switch 3G/GSM" to "Auto" or "3G".

Set to the FOMA network (DoCoMo) with "Network search mode" set to "Auto" or "Manual".

Making a Call from the Country You Stay

You can make voice calls or videophone calls from overseas using international roaming service.

Make a Call to Outside the Country You Stay (Including Japan)

Use Phonebook to Make an International Call to Japan

When you make an international call from the country you stay to a landline phone or mobile phone in Japan, you can operate from the Phonebook easily.

- This is available only when the phone number stored in the Phonebook begins with "0". You need to set "Auto assist setting" of "Int'l dial assist" to "ON" and to "Japan (81)" in advance. (Setting at purchase)

1 Detailed Phonebook display



- Press (V. phone) to make an international videophone call.

2 Dial

"0" at the head of the phone number is replaced with "+81" when dialed.

- When you select "Original phone No.", the phone number is dialed as stored in the Phonebook.

Information

- From a redial item or dialed call record, or by entering phone number directly, you can make an international call by the same operation.

Use "+" to Make an International Call

Press and hold for at least one second, then you can enter "+" when dialing.

By using "+", you can make international calls from the country you stay to the countries such as Japan.

1 (for at least one second) ▶ Enter numbers in order of country code → area code (city code) → destination phone number



- Enter "81" as a country code when you make an international call to Japan.
- When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.
- Press (V. phone) to make an international videophone call.

International Dial

If you have stored a country code by Country Code Setting (see page 58), you can make international calls from the country you stay to the country such as Japan. The following are the procedures for overseas.

1 Enter a phone number

or

bring up the detailed display of a Phonebook entry, redial item, dialed call record, or received call record.

2 ▶ Int'l dial assist ▶ Select the name of the country you make a call to

 


- Press (V. phone) to make an international videophone call.

Make a Call to a Phone in the Country You Stay

In the same way as you do in Japan, you can make a voice call or videophone call by entering the destination's phone number.

1 Enter a destination phone number



- Press (V. phone) to make a videophone call.
- To make a call in the country you stay using the Phonebook, select "Original phone No." in step 2 of "Make a Call to Outside the Country You Stay (Including Japan)" on page 389.

Make a Call to a Person who is Staying Overseas and Using WORLD WING

When you make a call to a person who is also internationally roaming, make the call in the same way as to make international calls to Japan even if he/she is in the country you stay.

Receiving a Call

In the same operation as you do in Japan, you can answer voice calls and videophone calls overseas. (See page 60)

■ **Having calls to your FOMA phone made from Japan**
You can receive international calls from Japan by just having your phone number entered in the same way as the callers usually do in Japan.

Making a call entering "090-XXXX-XXXX"

or

Making a call entering "080-XXXX-XXXX"

■ **Having calls to your FOMA phone made from countries other than Japan**

Regardless of the country you stay, you receive calls via Japan; therefore, have the caller enter "international call access code of his/her country" and "81" (Japan) in the same way as the caller makes a call to Japan and then enter your phone number whose "0" is excluded from the head.

Making a call entering "international call access code of the country of the caller-81-90-XXXX-XXXX"

or

Making a call entering "international call access code of the country of the caller-81-80-XXXX-XXXX"

Information

- Even for incoming calls, you are charged a receiving fee including an international forwarding fee, depending on the country or region.
- Even when a caller tried to notify of his/her caller ID, it might not be notified depending on the overseas carrier. Also, a different number from the other party's caller ID might be notified depending on the caller's network.
- While you use the FOMA phone overseas, "Call setting w/o ID", "Reject unknown", and "Restrictions (except Restrict Dialing)" might not work. In addition, it might work as "Answer" regardless of the setting of "Arrival call act".
- When a call comes in during international roaming, the call is forwarded from Japan regardless of whatever country the call is from. The caller is charged a call fee to Japan and the receiver is charged a receiving fee including an international forwarding fee.

<Switch 3G/GSM>

Setting a Network to Use

1 (MULTI) (for at least one second)

▶ **Select a network type.**

Auto Uses 3G, GSM, or GPRS network.
(3G network has priority.)

3G Uses 3G network.

GSM/GPRS . . . Uses GSM or GPRS network.

Information

- If you set to "Auto" or "3G", FOMA network is used in Japan. If you set to "GSM/GPRS", you cannot connect to FOMA network, the FOMA phone is placed in out-of-service-area state.
- While another menu function is activated, the setting display for this function is not displayed by pressing and holding (MULTI) for at least one second from the Stand-by display, but the display for the menu function in use is displayed.

<Network Search Mode>

Setting a Search Method of Carrier

You can set whether to automatically search a network and connect to another carrier when you move out of the service area.

1 (MENU) ▶ **Settings** ▶ **Network setting**

▶ **Int'l roaming**

▶ **Network search mode** ▶ **Select an item.**

Auto

. . . Automatically re-connects to another carrier. The setting is completed.

Manual

. . . Connect manually to a carrier on the list. "×" is displayed for unavailable carriers.

Network re-search

. . . When set to "Auto", automatically switches to an available carrier. The setting is completed.

When set to "Manual", displays the list of carriers.

2 **Select a carrier.**

• The displayed carrier varies depending on the setting of "Switch 3G/GSM".

• Press (Update) to display the list of carriers again.

Information

- You cannot set this function if the UIM is not inserted.
- When you move out of the service area while this function is set to "Manual", "Ⓜ" appears.
- When you have set this function to "Manual" and turn off and on the FOMA phone out of the service area, select a carrier again in the service area.

<PLMN Setting>

Setting a Carrier to Preferentially Connect to

You can specify the priority order of carriers you are connected to for when "Network search mode" is set to "Auto". You can store up to 20 carriers.

- 1 ► Settings ► Network setting ► Int'l roaming ► PLMN setting

- You can select the stored carrier to check the stored contents.

- 2 (FUNC) ► PLMN list select

- To search for a carrier by a name of country, press (Search) and select a country name. You can search also by pressing (Search) again from the Country List and entering a country name.

- 3 Select a carrier ► (Set) ► Select a network type ► (Finish) ► YES

- The following icons appear according to the network type:

: 2G and 3G (including GPRS)

: 3G

: GSM/GPRS

Function Menu while PLMN Setting is Displayed

Function menu	Operation/Explanation
Set VPLMN to UPLMN	You can store the carrier you are currently connected to. ► (Finish) ► YES
PLMN list select	See "Setting a Carrier to Preferentially Connect to" on page 391.
PLMN manual select	You can store a carrier by entering a country code and operator code. You can store carriers not found in the list. ► Enter a country code (3 digits) and operator code (2 to 3 digits) ► Select a network type ► (Finish) ► YES
Change priority	► Select a number to change to. ► (Finish) ► YES
Delete this	► YES ► (Finish) ► YES
Delete all	► YES ► (Finish) ► YES

Information

- When the "DoCoMo" network is available, you are preferentially connected to it regardless of this setting.
- This setting is stored on the UIM.
- You cannot set this function if the UIM is not inserted.

<Operator Name Display>

 
Displaying a Carrier on the Stand-by Display

You can select whether to display, on the Stand-by display, the carrier you are currently connected to.

- 1 ► Settings ► Network setting ► Int'l roaming ► Operator name display ► Display ON or Display OFF

■ When you set to "Display ON"

The carrier's name is displayed on the Stand-by display. However, when you use the "DoCoMo" network, the carrier is not displayed.



<Status in the Area>

Confirming a Communication System

You can display whether the carrier you are currently connecting to supports the circuit switching (CS)*1 and packet switching (PS)*2.

*1 The communication system used for voice calls, videophone calls, SMS, etc.

*2 The communication system used for i-mode, i-mode mail, etc.

- 1 ► Settings ► Network setting ► Status in the area

<Set Roaming Guidance>

Setting Guidance during Roaming

For an incoming voice call or videophone call during international roaming, you can have the voice guidance played back to the caller to that effect.

- Even when you activate Roaming Guidance, the caller may hear the guidance in a foreign language depending on the overseas carrier.
- Even when you deactivate Roaming Guidance, the caller hears a calling tone set by the overseas carrier.
- You need to set this function in Japan.


- 1 ► Service ► Set Roaming guidance ► Do the following operations.

Item	Operation/Explanation
Activate	► YES
Deactivate	► YES
Check setting	You can check the setting contents of "Set Roaming guidance". ► YES

<Call Barring>

Setting Your FOMA Phone to Reject Calls during Roaming

- This setting might not be available depending on the overseas carrier.

- 1  ► Settings ► Network setting
 - Int'l roaming ► Call barring
 - Do the following operations.


Item	Operation/Explanation
Activate	<ul style="list-style-type: none">► Select an item.Bar all incoming<ul style="list-style-type: none">..... Bars all calls including voice calls and videophone calls.Bar VP call/data ex.<ul style="list-style-type: none">..... Bars only videophone calls.► YES ► Enter your Network Security Code.• See page 118 for the Network Security Code.
Deactivate	<ul style="list-style-type: none">► YES ► Enter your Network Security Code.• See page 118 for the Network Security Code.
Check setting	<p>You can check the setting contents of "Call barring".</p> <ul style="list-style-type: none">► YES

Using Network Services during Roaming


You can use some network services such as Voice Mail Service or Call Forwarding Service from overseas. You can set Roaming Guidance as well.

- See page 373 for "Receive avoidance set." of 2in1.


Operate Voice Mail Service from the Country You Stay

- 1  ► Settings ► Network setting
 - Int'l roaming ► Voice mail (Int.)
 - Select an item ► YES
 - Operate following the voice guidance.


Operate Call Forwarding Service from the Country You Stay

- 1  ► Settings ► Network setting
 - Int'l roaming ► Call forwarding (Int.)
 - Select an item ► YES
 - Operate following the voice guidance.


Operate Roaming Guidance from the Country You Stay

- 1  ► Settings ► Network setting
 - Int'l roaming
 - Roaming guidance (Int.) ► YES
 - Operate following the voice guidance.

Operate Remote Control from the Country You Stay

- 1  ► Settings ► Network setting
 - Int'l roaming ► Remote control (Int.) ► YES
 - Operate following the voice guidance.

Operate Caller ID Request Service from the Country You Stay

- 1  ► Settings ► Network setting
 - Int'l roaming ► Caller ID req. (Int.) ► YES
 - Operate following the voice guidance.

Information


- When you use those services from overseas, you are charged an international call fee of the country you stay.
- You need to set "Remote control" beforehand.
- For the details on network services, refer to "Mobile Phone User's Guide [International Services]" and "Mobile Phone User's Guide [Network Services]".

Appendix/External Devices/Troubleshooting




Function List	394
List of Characters Assigned to Keys (5-touch Input Method)	410
List of Characters Assigned to Keys (2-touch Input Method)	411
List of Characters Assigned to Keys (NIKO-touch Input Method)	412
Symbol List	413
Pictograph List	415
Common Phrase List	417
Multiaccess Combination Patterns	418
Multitask Combination Patterns	419
Services Available with FOMA Phones	420
Introduction of Options and Related Equipment	421
Interfacing to External Devices	
Introduction of Software for Playing Back Moving Images	421
Links with AV Equipment	421
Troubleshooting	
Troubleshooting	422
Error Messages	423
Warranty and Maintenance Services	432
i-mode Trouble Diagnosis Site	433
Updating Software	434
Protecting FOMA Phone from Data Causing Failure	440
Specifications	443
Number of Savable/Storable/Protectable Items in FOMA Phone	444
SAR Certification Information and Other Information	445
Export Administration Regulations	447

Function List

Execute “Reset settings (all reset)” on page 354 for the items indicated by , and “Reset TV settings” on page 257 for the items indicated by ✖, to return to the respective defaults.

If you execute “Initialize” on page 354, all items return to the defaults.

- When you execute “Initialize”, the downloaded dictionaries including pre-installed ones are all deleted.
- Even if you execute “Initialize”, the pre-installed i-oppli programs you have deleted are not restored.

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Mail	Inbox		No mail messages, messages R/F (except inside the UIM) User created folder: None i-oppli mail folder: None	P.186	
	Outbox		No mail messages (except inside the UIM) User created folder: None i-oppli mail folder: None	P.186	
	Draft		No mail messages (except inside the UIM)	P.186	
	Compose message		—	P.172	
	Template		Pre-installed data only	P.178	
	Web mail		—	P.208	
	Check new message		—	P.183	
	Compose SMS		—	P.206	
	Check new SMS		—	P.208	
	Chat mail		 Chat member: Not recorded (except “Own”)	P.203	
	Receive option		—	P.183	
	Mail settings	Scroll		1 line	P.198
		Character size		Standard	P.115
Mail list display			List display: Date+sender/receiver subject Message: Checked Name in phonebook: Checked	P.198	
Message display			Standard	P.198	
Mail blind			OFF	P.198	
Mail security			All Unchecked	P.126	
Secret mail display			ON	P.126	
Auto color label			Not stored	P.198	
Pred. conv. at reply			ON	P.198	
Header/signature			Header: Blank Insert: Checked	P.199	
			Signature: Blank Insert: Checked	P.199	
			Quotation marks: >	P.199	
Set check new message			All Checked	P.199	
Auto-display			MessageR preferred	P.200	
Receiving display			Alarm preferred	P.199	
Receive option setting			OFF	P.183	
Attachment preference			All Checked	P.199	
Auto melody play			ON	P.199	
Photo auto display			ON	P.199	
Chat setting			Sound setting: Alarm 1	P.205	
		Chat image: ON	P.205		
		User setting Name: Own Image: Apple	P.205		
Check settings		—	P.199		
SMS settings	SMS report request		OFF	P.208	
	SMS validity period		3 days	P.208	

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference		
Mail	SMS settings	SMS input character	Japanese (70char.)	P.208		
		SMS center selection	DoCoMo	P.208		
	Area mail settings	Receive setting	No	P.202		
		Receive entry	Emergency information	P.202		
		Beep setting	ON	P.202		
		Beep time	10 seconds	P.202		
i-mode	Menu		–	P.152		
	Bookmark		Not stored User created folder: None	P.157		
	Screen memo		Not stored User created folder: None	P.158		
	Last URL		Menu	P.155		
	Go to location		No URL histories	P.156		
	Message R/F		No messages	P.201		
	i-Channel	Channel list		–	P.170	
		Ticker ON/OFF		ON	P.170	
		Ticker scroll speed		Normal	P.170	
		Reset i-Channel		–	P.170	
	Check new message		–	P.183		
	Operate certificate	Client certificate		–	P.166	
		Certificate		All Valid	P.165	
		Certificate host		DoCoMo	P.167	
	i-mode settings	Scroll		1 line	P.164	
		Character size		Standard	P.115	
		Set image display*		ON	P.164	
		Set connection timeout		60 seconds	P.164	
		Host selection (Menu number: 81)		i-mode	P.165	
		Motion auto-play		ON	P.169	
		Use phone information		YES	P.164	
		Sound effect setting		ON	P.164	
		Doc. display settings		Fit page	P.310	
		i-mode arrival act		PushTalk preferred	P.82	
		Check settings		–	P.164	
		Reset last URL		–	P.155	
		Full Browser	Home		Set URL http://www.google.co.jp	P.260
			Bookmark		P905i おすすめ動画! (P905i Recommended movies!) User created folder: None	P.157
	Last URL		None	P.260		
	Go to location		No URL histories	P.156		
	Full Browser settings		Display Mode setting: Phone mode		P.261	
			Scroll Speed: High speed Focus while scroll: OFF		P.263	
			Zoom: 100%	P.263		
			Access setting: No	P.263		
			Home URL: Set URL http://www.google.co.jp	P.263		
			Set image display: ON	P.263		
			PC Movie auto-play: ON	P.263		
			Cookie setting: Valid (No cookies)	P.264		
			Referer setting: Send	P.264		
			Script setting: Valid	P.263		
			Window Open Guard: Invalid	P.263		

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
i- appli	Software list(phone)		Pre-installed i- appli only	P.211
			Display: Icon display	P.211
		FUNC	Auto start time: All Unchecked	P.221
		FUNC	Power saver: ON	P.213
	appli(microSD)	SW list(microSD)	—	P.211
		appli(microSD)	—	P.222
	appli info	End stand-by info	No information	P.222
		Security error history	No histories	P.212
		Auto start info	No information	P.221
		Trace info	No histories	P.212
	appli settings	Auto start setting	OFF	P.221
		Disp. software info	Not display	P.211
		Preferred tone	MUSIC	P.220
		Backlight	Depend on system	P.220
		Power saver	OFF	P.220
		Vibrator	Depend on system	P.221
	Check settings	—	P.221	
Settings	Sound	Select ring tone (Menu number: 13)	Phone/PushTalk/Videophone: Pattern 1 Mail/Chat mail: Pattern 2 MessageR/MessageF: Pattern 3	P.98
		Ring volume (Menu number: 50)	All Level 4	P.64
		Keypad sound (Menu number: 30)	ON	P.101
		Melody effect (Menu number: 64)	Stereo&3DSound: ON Position to play: Play all	P.99 P.99
		Headset usage setting (Menu number: 51)	Headset + speaker	P.101
		Mail/Msg. ring time (Menu number: 68)	All ON Ring time: All 5 seconds	P.101

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Settings	Display	Display setting (Menu number: 56)	Stand-by display "black" for body color "Black" "white" for body color "White" "red" for body color "Red" "pink gold" for body color "Pink gold"	P.104
			Clock Clock display: Big Day of week: Unavailable Position "Pattern 11" for body color "Black" "Pattern 2" for body color "White"/"Pink gold" "Pattern 12" for body color "Red" Color "White" for body color "Black"/"White"/"Pink gold" "Black" for body color "Red"	P.116
			Dialing, Incoming call, Videophone dialing, Videophone incoming, Mail sending, Mail receiving, Check new message, Mail/msg. rcpt result "Standard" for body color "Black"/"White" "Red" for body color "Red" "Pink Gold" for body color "Pink gold"	P.105
			Battery icon/Antenna icon "Pattern 1" for body color "Black"/"White" "Pattern 2" for body color "Red" "Pattern 3" for body color "Pink gold"	P.106
			Wake-up display: Wake up	P.105
		Backlight (Menu number: 70)	Lighting: ON Power saver mode: ON Light time: 120 seconds	P.107
			Charging: Standard	P.107
			Area: LCD+Keys	P.107
			Brightness: Auto setting	P.107
			Soft light: ON	P.107
		Color theme setting (Menu number: 86)	"Black" for body color "Black"/"Red" "White" for body color "White" "Pink" for body color "Pink gold"	P.108
			Menu icon setting (Menu number: 57)	"Black" for body color "Black" "White" for body color "White" "Red" for body color "Red" "Pink gold" for body color "Pink gold"
		Private menu setting (Menu number: 52)	Own number, Ring volume, Caller ID notification, GPS, Alarm, Kisekae Tool, Vibrator, Full Browser, Character size, PC Movie, Schedule	P.341
			FUNC Change BG image: Normal	P.341
		Desktop icon (Menu number: 63)	Guide (使いかたナビ), Bluetooth	P.112

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Settings	Display	Private window (Menu number: 93)	ON Clock "Pattern 2" for body color "Black" "Pattern 1" for body color "White"/"Pink gold" "Pattern 3" for body color "Red" Orientation: Pattern 2 Brightness: Level 3 Called: ON Chaku-moji: OFF Mail: OFF i-Channel ticker: OFF Disp. connection: ON	P.106
		Font (Menu number: 66)	Font 1	P.114
		Character size	All Standard	P.115
		Select language (Menu number: 15)	Japanese (日本語)	P.45
		Recv.mail/call at open	OFF	P.106
		Image quality	Dynamic	P.107
		LCD AI	ON	P.107
		Icons (Menu number: 36)	—	P.30
	Illumination	All illum. setting	"Pattern 1" for body color "Black" "Pattern 2" for body color "White" "Pattern 3" for body color "Red" "Pattern 4" for body color "Pink gold"	P.111
		Illumination (Menu number: 89)	Set color Body color "Black" Phone/Videophone: Pattern A-1 PushTalk: Pattern A-5 Mail/Chat mail/MessageR/MessageF: Pattern A-2 Body color "White" Phone/Videophone: Pattern B-1 PushTalk: Pattern B-5 Mail/Chat mail/MessageR/MessageF: Pattern B-2 Body color "Red" Phone/Videophone: Pattern C-1 PushTalk: Pattern C-5 Mail/Chat mail/MessageR/MessageF: Pattern C-2 Body color "Pink gold" Phone/Videophone: Pattern D-1 PushTalk: Pattern D-5 Mail/Chat mail/MessageR/MessageF: Pattern D-2	P.111
			Set pattern: Standard	P.111
			Color setting: All Default	P.111
		Illumination in talk	OFF	P.111
		Miss/unread illum.	ON	P.111
		Music&Video ch illum.	OFF	P.111



Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Settings	Illumination	Illum. when folded	ON	P.111
		Hourly illumination	OFF	P.111
		MUSIC illumination	ON	P.111
		Bluetooth illumination	ON	P.111
		IC card illumination	ON	P.111
		PushTalk illumination	ON	P.111
		Side key illumination	"Pattern A-3" for body color "Black" "Pattern B-3" for body color "White" "Pattern C-3" for body color "Red" "Pattern D-3" for body color "Pink gold"	P.111
	Check settings	—	P.111	
	Kisekae		—	P.109
	Lock/Security	Self mode	Released	P.121
		Lock all	Released	P.120
		Personal data lock	Released	P.121
		IC card lock	Released	P.230
Secret mode (Menu number: 40)		Released	P.126	
Secret data only (Menu number: 41)		Released	P.126	
Keypad dial lock		Released	P.125	
Reject unknown		Accept	P.129	
Call setting w/o ID (Menu number: 10)		All Accept Select ring tone: All Same as ring tone	P.128	
Change security code (Menu number: 29)		0000	P.119	
UIM setting		—	P.119	
Scanning function		Set scan: All Valid	P.440	
Lock setting		Timer lock ON at close: All OFF	P.122	
		PIM/IC security mode: Security code	P.122	
		IC lock(power-off): Setting before OFF	P.230	
		Face reader setting: Not stored	P.123	
		Face reader security: Normal Change security code: 0000		
Call time/cost	Call data (Menu number: 61)	Last call duration/Total calls duration: 0 seconds Last call cost: ¥** Calls reset/Cost reset: -/- -:-	P.343	
	Reset total cost&dura. (Menu number: 60)	—	P.344	
	Notice call cost	OFF Max cost: ¥0 (when "Notice call cost" is set to "ON") Method to alert: Icon (when "Notice call cost" is set to "ON") Auto reset setting: OFF (when "Notice call cost" is set to "ON")	P.344	
	CLR max cost icon	—	P.344	


Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Settings	Clock	Set time (Menu number: 31)	Auto time adjust ON	P.46	
		World time watch	OFF	P.47	
		Summer time	OFF	P.47	
		Auto power ON/OFF	All OFF	P.335	
		Alarm setting	Alarm preferred	P.341	
	Incoming call	Vibrator (Menu number: 54)	All OFF	P.100	
		Manner mode set (Menu number: 20)	Manner mode when "Original" is set Record msg.: OFF Vibrator: ON Phone vol.: Silent Mail vol.: Silent Alarm vol.: Silent VM tone: ON Keypad sound: OFF Mic sensitiv.: Up LVA tone: OFF	P.103	
		Answer setting (Menu number: 58)	Any key answer	P.62	
		Setting when opened	All Keep ringing	P.63	
		Record display set	All ON	P.125	
		Disp. PH-book image	ON	P.106	
		Disp. call/receive No.	Pattern 1	P.115	
		Ring time (Menu number: 90)	Ring start time: OFF Start time: 1 second (when "Ring start time" is set to "ON")	P.128	
			Missed calls display: Display	P.128	
		Info notice setting (Menu number: 65)	ON	P.112	
		V-phone while packet	V-phone priority	P.72	
		Auto answer setting (Menu number: 94)	OFF Ring time: 6 seconds (when "Auto answer setting" is set to "ON")	P.347	
		Talk	Volume	Level 4	P.63
			Setting when folded (Menu number: 18)	Phone/Videophone: End the call PushTalk: Speaker call	P.63 P.63
	Set hold tone		On hold tone: Tone 1 Holding tone: JESU JOY OF MAN'S DESIRING	P.65	
	Noise reduction (Menu number: 76)		ON	P.59	
	Quality alarm (Menu number: 75)		High tone	P.101	
	Reconnect signal (Menu number: 77)		High tone	P.59	
	PushTalk		Auto answer setting	OFF	P.81
		Ring time setting	30 seconds	P.81	
		Hands-free w/ PushTalk	ON	P.81	
		PushTalk arrival act	Answer	P.81	

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Settings	Videophone	Visual preference	Normal	P.71	
		Select image	On hold: Pre-installed Holding: Pre-installed Substitute image: Chara-den [カンガルー (Kangaroo)] Record message: Pre-installed Preparing: Pre-installed Movie memo: Pre-installed	P.71	
		Hands-free w/ V. phone	ON	P.71	
		Voice call auto redial	OFF	P.72	
		Remote monitoring	Other ID: Not recorded	P.73	
			Ring time: 5 seconds	P.73	
			Set: OFF	P.73	
		Notify switchable mode	—	P.72	
		Feel settings	Feel * Talk	All ON	P.110
			Feel * Mail	All ON	P.110
	Network setting	Prefix setting	WORLD CALL (009130010)	P.59	
		Int'l roaming	Network search mode: Auto	P.390	
			Operator name display: Display ON	P.391	
			Switch 3G/GSM: Auto	P.390	
		Int'l dial assist	Auto assist setting: ON	P.58	
			Country Code set.: Japan (81)	P.58	
	IDD prefix setting: WORLD CALL (009130010)		P.58		
	Status in the area	—	P.391		
	Melody Call setting		—	P.100	
	Other settings	Work with style	1Seg	P.26	
		Side keys guard	OFF	P.125	
		Character input method (Menu number: 35)	Input mode: All Checked	P.356	
			Priority input method: Mode 1 (5-touch)	P.358	
			Predict: ON	P.358	
			Int.with secret: ON	P.358	
		Battery	Charge sound: ON	P.101	
		Pause dial (Menu number: 84)	Not stored	P.57	
		Sub-address setting	ON	P.59	
		Headset switch to call	OFF	P.347	
		Voice settings	Auto voice dial: OFF	P.95	
			Voice earphone dial: OFF	P.95	
			Read aloud settings: OFF	P.333	
			Read aloud volume: Level 4	P.333	
Read aloud speed: Normal			P.334		
Read aloud output: Speaker			P.334		
Read aloud valid set.: Normal			P.334		
USB mode setting	Communication mode	P.300			
Reset settings (Menu number: 23)	—	P.354			
Initialize	—	P.354			
Software update	Set auto-update: Auto-update Date: Default Time: 3:00	P.435			

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Data box	My picture (Menu number: 46)		Pre-installed data only User created folder: None	P.274	
			Original animation: Not stored	P.280	
		FUNC	Edit picture Character stamp Character color: 16 Color, Black Font: Font 1 Character size: Standard size	P.279	
		FUNC	Set display: All Released	P.274	
		FUNC	Positioning: Center	P.275	
		FUNC	Sort: By date ↑	P.276	
		FUNC	Picture/Title name: Picture	P.276	
		FUNC	Display size: Normal	P.277	
		MUSIC		No data User created folder: None	P.324
			Display: Title + Image	P.324	
			Volume: Level 12	P.325	
	FUNC		Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	P.328	
	Music&Video Channel			No data	P.317
				Information of previously played program: None	P.317
			Display: Title + Image	P.317	
			Volume: Level 12	P.318	
		FUNC	Play mode setting: Normal	P.319	
		FUNC	Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	P.320	
	motion		Pre-installed data only User created folder: None	P.280	
			Playlist: Not stored	P.284	
			Position memory: All Not stored	P.281	
			Volume: Level 4	P.281	
		FUNC	Set motion: All Released	P.282	
		FUNC	Sort: By date ↑	P.276	
		FUNC	Listing: Title + Image	P.282	
		FUNC	Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	P.283	
		FUNC	Display size: Fit in display	P.283	
FUNC		Change to full: Vertical display playback	P.283		
Melody (Menu number: 16)			Pre-installed data only User created folder: None	P.290	
		Playlist: Not stored	P.302		
	FUNC	Set as ring tone: All Released	P.291		
	FUNC	Sort: By date ↑	P.291		
	My documents		No data	P.307	
FUNC		Sort: By date ↑	P.276		
FUNC		Listing: Image	P.308		

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Data box	Kisekae Tool		Pre-installed data only	P.292	
		FUNC	Sort: By date ↑	P.276	
		FUNC	Listing: Image	P.293	
	Chara-den			Pre-installed data only	P.288
		FUNC		Substitute image: カンガルー (Kangaroo)	P.69
		FUNC		Rec. Chara-den Camera mode: Photo mode Recording size: QCIF (176 x 144) Recording type: Video + voice Recording quality: Normal	P.289
		FUNC		Display size: Fit in display	P.289
	PC Movie			Position memory: All Not recorded	P.268
				Played history: No histories	P.268
				Volume: Level 12	P.267
		FUNC		Listing: Title	P.268
		FUNC		Sound effect Remaster: OFF Listening: OFF Equalizer: Normal	P.269
		FUNC		Display size: Actual size	P.269
	1Seg			Position memory: All Not stored	P.286
				Volume: Level 12	P.286
		FUNC		Listing: Title + image	P.287
		FUNC		Icon: OFF	P.287
		FUNC		Image quality: Dynamic	P.287
		FUNC		Sound Sound effect Auto volume: ON Remaster: OFF Listening: OFF Equalizer: Normal	P.287
		FUNC		Caption: ON	P.288
			Document viewer	—	—
	SD other files	—	—	P.298	
LifeKit	Bar code reader	Scan code	—	P.147	
		Saved data	Not stored	P.148	
	Receive Ir data (Menu number: 79)	Receive	—	P.305	
		Receive all	—	P.306	
	SD-PIM	Phonebook	—	P.294	
		Schedule	—	P.294	
		Inbox	—	P.294	
		Outbox	—	P.294	
		Draft	—	P.294	
		Text memo	—	P.294	
	Bookmark	—	P.294		

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
LifeKit	Camera	Photo mode/ Movie mode	FUNC Inside camera/Outside camera: Outside camera	P.143	
			FUNC Image size Photo mode: Stand-by (480 x 854) Continuous mode: VGA (640 x 480) Movie mode: QVGA (320 x 240)	P.143	
			FUNC File size setting: Mail restrict'n (L)	P.143	
			FUNC Image quality Photo mode/Continuous mode: Fine Movie mode: Normal	P.143	
			FUNC Camera settings Shutter sound: Sound 1 Flicker correction: Auto	P.144	
			FUNC Storage setting Store in: Phone Auto save set: OFF File restriction: File unrestricted	P.144	
			FUNC Img. stabilizer: Auto	P.144	
			FUNC Cont. shooting set. Continuous mode: Auto Shot interval: 0.5 second Shot number VGA (640 x 480)/ CIF (352 x 288): 4 shots (Fixed) QVGA (240 x 320)/ QCIF (176 x 144)/ Sub-QCIF (128 x 96): 5 shots	P.144	
			FUNC Display size: Actual size	P.145	
			FUNC Icon: ON	P.145	
			My picture	Same as "My picture" in "Data box"	P.402
			 motion	Same as "  motion" in "Data box"	P.402
			Bluetooth	Device list	Not stored
	FUNC Preferred device: Not set	P.351			
	Activate Bluetooth/ Bluetooth power OFF	—		P.351	
	Accept registered	—		P.351	
	Accept dialup devices	—		P.351	
	Bluetooth settings	Set authentications: OFF		P.353	
		Session number setting: OFF		P.353	
		Time-out to search: 5 seconds		P.353	
		Forward ring tone: ON		P.353	
		Disconnection settings: End the call		P.353	
		Dial from headset: Valid	P.353		
Bluetooth info Device name: P905i		P.354			

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
LifeKit	GPS	Position location	—	P.232	
		Notify of location	—	P.238	
		Location history	No histories	P.238	
		 app list	Pre-installed i-apple programs only	P.233	
		Service settings	—	P.239	
		GPS settings	GPS button setting: Read a map	—	P.239
			Posit. tone/illum.	—	P.239
			Select posit. ring tone: "Position location" OFF	—	
			"Notify of location" Pattern 1	—	
			"Location req./Accept" Pattern 2	—	
			"Location req./Confirm" Pattern 2	—	
	Ring time setting: All 3 seconds		—		
	Select vibrator: All OFF	—			
	Select illumination: All Color 5	—			
	Positioning mode: All Standard mode	—	P.239		
	Reg. LCS client: Not stored	—	P.239		
	Location request menu: OFF	—	P.240		
	Host selection: Default	—	P.242		
	Text reader	Scan text	—	P.149	
		Saved data	Not stored	P.150	
	Rec. msg/voice memo (Menu number: 55)	Play/Erase msg.	Not recorded	P.68	
		Play/Erase VP msg.	Not recorded	P.69	
		Record message setting	OFF	P.67	
Answer message: Japanese 1 (when "Record message setting" is set to "ON")		—			
Ring time: 13 seconds (when "Record message setting" is set to "ON")		—			
Voice memo	Not recorded	P.343			
Voice announce	Not recorded	P.100			
Data Security Service	Connect to Center	—	P.95		
	Sent/recv. PB data list	No histories	P.95		
	PB image sending	OFF	P.95		
Service	Caller ID notification (Menu number: 17)	Activate	—	P.47	
		Check setting	—	P.47	
	Voice mail	Play messages	—	P.365	
		Activate	—	P.365	
		Deactivate	—	P.365	
		Set ring time	—	P.365	
		Check setting	—	P.365	
		Setting	—	P.365	
		Check new messages	—	P.364	
		Message notification	YES	P.365	
		Erase icon	—	P.365	
		Activate notice call	—	P.365	
	Deactivate notice call	—	P.365		
	Notice call status	—	P.365		
	Call waiting	Activate	—	P.366	
		Deactivate	—	P.366	
		Check setting	—	P.366	

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Service	Call forwarding	Activate	—	P.367	
		Deactivate	—	P.367	
		Change forwarding No.	—	P.367	
		Setting if fwd. No. busy	—	P.367	
		Check setting	—	P.367	
	Nuis. call blocking	Register caller	—	P.368	
		Register selected No.	—	P.368	
		Delete last entry	—	P.368	
		Delete all entries	—	P.368	
		Check No. of entries	—	P.368	
	Caller ID request	Activate	—	P.369	
		Deactivate	—	P.369	
		Check setting	—	P.369	
	2in1 setting		Deactivated		P.372
			Mode switching: Dual mode Stand-by display Dual mode: RAINBOW COLOUR B mode: MORNING GLOW Set call/receive No. Disp. call/receive No.: Pattern 2 Ringtone set. for No. B Phone/Video-Phone: Pattern 4 Mail: Pattern 5 Receive avoidance set. Mode link: Deactivated		
	Multi number	Set multi number	—	P.372	
		Check setting	—	P.372	
		Number setting	Not stored	P.371	
		Set as ring tone	All Same as ring tone	P.372	
	Arrival call act		Answer		P.370
	Set in-call arrival act	Activate	—	P.371	
		Deactivate	—	P.371	
		Check setting	—	P.371	
Remote control	Activate	—	P.371		
	Deactivate	—	P.371		
	Check setting	—	P.371		
Dual network	Dual network switching	—	P.369		
	Check setting	—	P.369		
English guidance	Guidance setting	—	P.370		
	Check setting	—	P.370		
Set Roaming guidance	Activate	—	P.391		
	Deactivate	—	P.391		
	Check setting	—	P.391		
Additional service	Additional service	Not stored	P.378		
	Additional guidance	Not stored	P.378		
Service numbers	ドコモ故障問合せ (DoCoMo repair counter)	—	P.370		
	ドコモ総合案内・受付 (DoCoMo Information Center)	—	P.370		
OFFICEED	Area display setting	—	P.378		
	Activate forwarding	—	P.378		
	Deactivate forwarding	—	P.378		
	Check forwarding set.	—	P.378		

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Service	Chaku-moji	Create message	Not stored	P.55
		Message disp. settings	Calls with callerID	P.56
		Sent messages	No records	P.56
		Prefer Chaku-moji	OFF	P.56
Phonebook	Add to phonebook	Phone	Not stored	P.84
		UIM	—	P.84
	Search phonebook	All?	—	P.89
		Reading?	—	P.89
		Group?	—	P.89
		Memory No.?	—	P.89
		Name?	FUNC Sort: Reading order	P.91
		Phone number?	FUNC Sort: Reading order	P.91
		Mail address?	FUNC Sort: Reading order	P.91
		2-touch dial?	—	P.89
	UIM operation	Copy	—	P.345
		Delete	—	P.345
	PushTalk phonebook		Not stored	P.79
	Dialed/recv. calls (Menu number: 24)	Dialed calls	No records	P.53
			FUNC Sent address: No records	P.195
		Received calls	No records	P.54
			FUNC Received address: No records	P.195
	Own number (Menu number: 0)	Not stored (except "Own number" for Number A)		P.342
	Group setting		FUNC Edit group Group name: Group 01 to 19 (except inside the UIM) Settings: None	P.88
	Restrictions	Restrict dialing	All Released	P.128
		Call rejection	All Released	P.128
		Call acceptance	All Released	P.128
		Call forwarding	All Released	P.128
		Voice mail	All Released	P.128
	Phonebook settings (Menu number: 26)	Character size	All Standard	P.115
		Voice dial setting	Not stored	P.93
		Mail group	Not stored	P.197
			FUNC Edit group name: Mail group 1 to 20	P.198
		Chat group	Not stored	P.205
			FUNC Edit group name: Group 1 to 5	P.206
	Forwarding image	ON	P.306	
	No. of phonebook		—	P.91
Stationery	Alarm (Menu number: 44)	Not stored	P.335	
		Alarm: All OFF	P.335	
	Schedule (Menu number: 45)	Not stored	P.337	
		FUNC Monthly display/Weekly display: Monthly display	P.339	
	ToDo (Menu number: 95)	Not stored	P.340	
		FUNC Category display: All	P.341	
		FUNC Sort/Filter: By entered time	P.341	
	Text memo (Menu number: 42)	Not recorded		P.345
	Calculator (Menu number: 85)	—		P.345
Guide	—		P.36	

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference	
Stationary	Common phrase/dic. (Menu number: 38)	Common phrases	All Default	P.360	
		Own dictionary	Not stored	P.361	
		Download dictionary	Pre-installed data only	P.361	
			FUNC Set dictionary: All Valid	P.361	
MUSIC	MUSIC Player	No data		P.323	
		Playlist: Not stored		P.329	
		Information of previously played music file: None		P.323	
		Display: Title + Image		P.323	
		Volume: Level 12		P.325	
		FUNC Play mode setting: Normal		P.327	
		FUNC Sound effect	Remaster: OFF		P.328
			Listening: OFF Equalizer: Normal		
		Music&Video Channel	Same as "Music&Video Channel" in "Data box"		P.402
	1Seg	Activate 1Seg	Confirmation display at start ^{**} :	Displays the Exemption Clause Confirmation display	P.244
Confirmation display for the data broadcasting ^{**} :			Displays the Exemption Clause Confirmation display	P.257	
Broadcasting storage area: Not stored				P.244	
Volume: Level 12				P.248	
Program guide		—		P.250	
Book program		Not stored		P.253	
Timer recording		Not stored		P.253	
		Confirmation display at timer recording:	Displays the Exemption Clause Confirmation display	P.254	
Recording result		Not stored		P.256	
TVlink		Not stored		P.251	
Channel list		Not stored		P.246	
Channel setting		Select area	—	P.246	
		Auto channel setting	—	P.245	
User settings		Caption ^{**}	ON	P.256	
		Rec. when low battery ^{**}	ON	P.256	
		Image quality ^{**}	Dynamic	P.256	
		Sound ^{**}	Sound effect		P.256
			Auto volume: ON Remaster: OFF Listening: OFF Equalizer: Normal		
			TV sound while closed: ON		P.256
		ECO mode ^{**}	Released		P.257
		Display light ^{**}	Constant light		P.257
		Data broadcasting ^{**}	Set image display: ON		P.257
			Sound effect setting: ON		P.257
	Icon ^{**}	ON		P.257	
	Check TV settings	—		P.257	
	Reset channel setting	—		P.257	
Reset storage area	—		P.257		
Reset TV settings	—		P.257		

Main menu item	Sub-menu item	Lower sub-menu item	Setting at purchase	Reference
Osaifu-Keitai	IC card content		Pre-installed i-appli only	P.212
	DCMX		—	P.220
	ToruCa		No data	P.226
			User created folder: None	
			FUNC Sort: By date ↑	P.228
	IC card lock set.	IC card lock	Released	P.230
		IC lock(power-off)	Setting before OFF	P.230
	Settings	Receive ToruCa	Accept	P.230
		Receiving display	ON	P.230
		Check same data	ON	P.230
		Auto reading	Accept	P.230
Search by i-mode		—	P.162	
Others	Clock display of Private window		Icons and date/time	P.31
	Redial		No records	P.53
	Public Mode (Drive Mode)		Released	P.65
	Manner mode		Released	P.102
	Videophone		FUNC Backlight: Constant light	P.71
	Photo-sending		FUNC Image size: QCIF (176 x 144)	P.143
	Character input		FUNC Char. input/dict.	P.359
			Learned words: Not stored Candid. disp. size: Standard Candidate display: ON Character set time: OFF 2/NIKO-touch guide: ON	

List of Characters Assigned to Keys (5-touch Input Method)

Key	Display	abc	123	漢	か
		. - @ _ / : ; * 1 1	1	あいうえおあいうえお	アイウエオアイウエオ
		a b c A B C 2	2	かきくけこ	カキクケコ
		d e f D E F 3	3	さしすせそ	サシスセソ
		g h i G H I 4	4	たちつてとっ	タチツテトツ
		j k l J K L 5	5	なにぬねの	ナニヌネノ
		m n o M N O 6	6	はひふへほ	ハヒフヘホ
		p q r s P Q R S 7	7	まみむめも	マミムメモ
		t u v T U V 8	8	やゆよやゆよ	ヤユヨヤユヨ
		w x y z W X Y Z 9	9	らりるれろ	ラリルレロ
		0 □ (space)	0	わをんわー □ (space)	ワヲンワ*1ー □ (space)
		.ne.jp .co.jp .or.jp .com http://www. https://www. @docomo.ne.jp *2	*	* * * *3	* * *
		, ! ? ¥ & () * # " ' = ^ + ;	#	、 。 ・ ! ?	、 。 ・ ! ?

※1: Displayed when entering the character in full pitch.

※2: Displayed when entering the character in half pitch.

※3: Displayed when entering characters consecutively.

If you press after fixing a character, pictographs are displayed.

● If you press after entering a character, characters can be scrolled in the reverse order.

● After entering hiragana, katakana, or alphabetic characters, you can switch uppercase and lowercase characters by pressing .

● You can enter “+” by pressing and holding for at least one second in Numeral input mode.

List of Characters Assigned to Keys (2-touch Input Method)

Kanji/Hiragana input mode

<Uppercase input mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			
	8	や	(ゆ)	よ	*	#		♥	■
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	°	°	6	7	8	9	0

<Lowercase input mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	や		ゆ		よ					■
	9										
	0	わ					,	.			

Katakana input mode

<Uppercase input mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			
	8	ヤ	(ユ)	ヨ	*	#		♥	■
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	°	°	6	7	8	9	0

<Lowercase input mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	ヤ		ユ		ヨ					■
	9										
	0	ワ※1					,	.			

Alphabet input mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	"	\$	%	'	+	a	b	c	d	e
	2	.	.	:	:	<	f	g	h	i	j
	3	=	>	@	[]	k	l	m	n	o
	4	^	-	※1			p	q	r	s	t
	5	}	※1	※2			u	v	w	x	y
	6						z	?	!	-	/
	7						¥	&			
	8		()			*	#			
	9						1	2	3	4	5
	0						6	7	8	9	0

■ : Switches between uppercase input mode and lowercase input mode.

※1: Displayed when entering characters in full pitch.

※2: Displayed when entering characters in half pitch.

Information

- A space is entered if you press keys that correspond to a blank where no character is assigned.
- In Kanji/Hiragana or Katakana input mode, you can enter " " and " ° " also by pressing (✕) just after entering a character. For " ° ", press (✕) once. For " " , press (✕) twice.
- You can enter "+" by pressing and holding (○) for at least one second in Numeral input mode.

List of Characters Assigned to Keys (NIKO-touch Input Method)

Kanji/Hiragana input mode

<Lowercase input>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	.	-	@	_	
	2	か	き	く	け	こ		a	b	c	2
	3	さ	し	す	せ	そ		d	e	f	3
	4	た	ち	つ	て	と	っ	g	h	i	4
	5	な	に	ぬ	ね	の		j	k	l	5
	6	は	ひ	ふ	へ	ほ		m	n	o	6
	7	ま	み	む	め	も	p	q	r	s	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8
	9	ら	り	る	れ	ろ	w	x	y	z	9
	0	わ	を	ん	,	。	-	.	!	?	0

<Uppercase input>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お					
	2	カ			ケ			A	B	C	
	3							D	E	F	
	4			っ			っ	G	H	I	
	5							J	K	L	
	6							M	N	O	
	7						P	Q	R	S	
	8	ゃ	ゅ	ょ	ゃ	ゅ	ょ	T	U	V	
	9						W	X	Y	Z	
	0	わ									

Katakana input mode

<Lowercase input>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	.	-	@	_	
	2	カ	キ	ク	ケ	コ		a	b	c	2
	3	サ	シ	ス	セ	ソ		d	e	f	3
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4
	5	ナ	ニ	ヌ	ネ	ノ		j	k	l	5
	6	ハ	ヒ	フ	ヘ	ホ		m	n	o	6
	7	マ	ミ	ム	メ	モ	p	q	r	s	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8
	9	ラ	リ	ル	レ	ロ	w	x	y	z	9
	0	ワ	ヲ	ン	,	。	-	.	!	?	0

<Uppercase input>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ					
	2							A	B	C	
	3							D	E	F	
	4			ッ			ッ	G	H	I	
	5							J	K	L	
	6							M	N	O	
	7						P	Q	R	S	
	8	ャ	ュ	ョ	ャ	ュ	ョ	T	U	V	
	9						W	X	Y	Z	
	0										

Information

- A space is entered if you press keys that correspond to a blank where no character is assigned.
- You can enter “ ” and “ ” by pressing (✕). For “ ”, press (✕) once. For “ ”, press (✕) twice. In Kanji/Hiragana input mode, you can enter them by pressing the key just after entering a character.
- You can enter “+” by pressing and holding (○) for at least one second in Numeral input mode.

Symbol Candidate List

On the Character Entry (Edit) display, enter “きごう” to convert it to bring up symbol candidates. Further, you can enter characters listed below to convert them into respective symbols.

Input	Conversion
おなじ	//々
から	～
かんま	.
こんま	,
たてせん	
てんでん	…
りーだ	…
しめ	メ
かっこ	“”()[] □ ◇<> [] []
たす	+
ひく	-
ぷらすまいなす	±
かける	×
わる	÷

Input	Conversion
いこーる	=
ふとうごう	<>≤≥
しょうなり	<
だいなり	>
しょうなり	≒
いこーる	≒
だいなり	≒
いこーる	≒
むげんだい	∞
おす	♂
めす	♀
ならば	⇒
どうち	⇔
にありいこーる	≐
ちいさい	≪
おおきい	≫

Input	Conversion
るーと	√
ど	°℃
ぶん	'
びょう	”
どる	\$
せんと	¢
ぼんど	£
せつ	§
ほし	*☆☆
あっと	@
まる	○● ◎○
しかく	◇◆□■
さんかく	△▲▽▼
こめ	※
ゆうびん	〒

Input	Conversion
やじるし	↔←↑↓
うえ	↑
した	↓
みぎ	→
ひだり	←
あすたりすく	*
おんぐすと	Å
ろーむ	
しゃーぷ	#
ふらっと	b
おんぷ	♪
だが一	†
だぶるだが一	‡
だんらく	¶
おーむ	Ω
でんわ	TEL

Pictograph List

When “Read aloud settings” is set to “ON”, pictographs are read aloud.

Pictograph	Voice guidance
♥	ハートマーク
☺	ユレルハートマーク
♥	シツレンマーク
♥	フクスーハートマーク
☺	ワイマーク
×	ブンマーク
☺	ガクマーク
☺	モウヤダーマーク
☺	フラフラマーク
♪	ルンルンマーク
☺	オンセンマーク
☺	カワイイマーク
☺	チュウマーク
☺	ピカピカマーク
☺	ヒラメキマーク
☺	ムカマーク
☺	パンチマーク
☺	バクダンマーク
☺	ムードマーク
zzz	ネムイマーク
!	ビックリマーク
!?	ビックリハテナマーク
!!	ニジュービックリマーク
Σ	ドーンマーク
?	アセアセマーク

Pictograph	Voice guidance
し	アセタラックマーク
ニ	ダッシュマーク
ニ	ウーマーク
♂	ウーンマーク
↑	グッドマーク
↓	パッドマーク
↑	ミギナナメウエヤジルシマーク
↓	ミギナナメシタヤジルシマーク
↑	ヒダリナナメウエヤジルシマーク
↓	ヒダリナナメシタヤジルシマーク
☀	ハレマーク
☺	クモリマーク
☺	アメマーク
8	ユキマーク
8	カミナリマーク
☺	タイフーマーク
☺	キリマーク
↑	コサメマーク
↑	オヒツジザマーク
♂	オウシザマーク
♂	フタゴザマーク
♂	カニザマーク
♂	シシザマーク
♂	オトメザマーク

Pictograph	Voice guidance
Ω	テンビンザマーク
♂	サンリザマーク
♂	イデザマーク
♂	ヤギザマーク
♂	ミスガメザマーク
♂	ウオザマーク
♂	スポーツマーク
♂	ヤキューマーク
♂	ゴルフマーク
♂	テニスマーク
♂	サッカーマーク
♂	スキーマーク
♂	バスケットマーク
♂	モータースポーツマーク
♂	ページャマーク
♂	デンジャマーク
♂	チカテツマーク
♂	シンカンセンマーク
♂	セダンマーク
♂	アールプイマーク
♂	バスマーク
♂	フネマーク
♂	ヒコーキマーク
♂	エレマーク
♂	ビルマーク
♂	ユーピンキョクマーク

Pictograph	Voice guidance
♂	ビョーインマーク
♂	ギンコーマーク
♂	イーティーエムマーク
♂	ホテルマーク
♂	コンビニマーク
♂	ガソリンスタンドマーク
♂	チュウシャジョーマーク
♂	シンゴーマーク
♂	トイレマーク
♂	レストランマーク
♂	キツデンマーク
♂	パーマーク
♂	ビールマーク
♂	ファーストフードマーク
♂	プティックマーク
♂	ビョーインマーク
♂	カラオケマーク
♂	エーガマーク
♂	ユーエンチマーク
♂	オンガクマーク
♂	アートマーク
♂	エンゲキマーク
♂	イベントマーク
♂	チケットマーク
♂	キツエンマーク

Pictograph	Voice guidance
	キンエンマーク
	カメラマーク
	カバンマーク
	ホンマーク
	リボンマーク
	プレゼントマーク
	バースデーマーク
	デンワマーク
	ケータイデンワマーク
	メモマーク
	テレビマーク
	ゲームマーク
	シーディーマーク
	ハートマーク
	スペードマーク
	ダイヤモンドマーク
	クラブマーク
	メマーク
	ミミマーク
	グーマーク
	チョッキマーク
	パーマーク
	アシマーク
	クツマーク
	メガネマーク
	クルママーク
	シゲツマーク
	カケツキマーク
	ハンゲツマーク
	ミカヅキマーク
	マンゲツマーク
	イヌマーク
	エコマーク
	リゾートマーク
	クリスマスマーク
	カチンコマーク
	フクロマーク
	ペンマーク
	ヒトカゲマーク
	イスマーク
	ヨルマーク

Pictograph	Voice guidance
	スーンマーク
	オンマーク
	エンドマーク
	トケーマーク
	デンワヘマーク
	メールマーク
	ファックスヘマーク
	アイモードマーク
	アイモードマーク
	メールマーク
	ドコモキーマーク
	ドコモポイントマーク
	ユーリョーマーク
	ムリョーマーク
	アイディーマーク
	パスワードマーク
	ツギアリマーク
	クリアマーク
	サーチマーク
	ニューマーク
	イチジョーホーマーク
	フリーダイヤルマーク
	シャープダイヤルマーク
	モバキューマーク
	シカクイチ
	シカクニ
	シカクサン
	シカクヨン
	シカクゴ
	シカクロク
	シカクナナ
	シカクハチ
	シカクキュー
	シカクゼロ
	ケツターマーク
	アイアプリマーク

Pictograph	Voice guidance
	アイアプリマーク
	ティーシャツマーク
	ガマガチサイフマーク
	ケショーマーク
	ジーンズマーク
	スノボマーク
	チャペルマーク
	ドアマーク
	ドルブクロマーク
	パソコンマーク
	ラプターマーク
	ランチマーク
	エンピツマーク
	オーカンマーク
	ウビワマーク
	スナドケーマーク
	ジテンジャマーク
	ユノマーク
	ウデドケーマーク
	ムムマーク
	ホッマーク
	ヒヤアセマーク
	ヒヤアセマーク
	ブクマーク
	ポケマーク
	ラプラブマーク
	オーケーマーク
	アッカマーク
	ウィンクマーク
	ウレシイマーク
	ガンマーク
	エコマーク
	ナキマーク
	ナミダマーク
	エヌジーマーク
	クリップマーク
	コピーライトマーク
	トレードマーク

Pictograph	Voice guidance
	ハシルヒトマーク
	マルヒマーク
	リサイクルマーク
	レジストレッドマーク
	キケンマーク
	キンシマーク
	クーシツマーク
	ゴウカクマーク
	マンシツマーク
	サンヨーマーク
	ジョージマーク
	ガッコーマーク
	ナミマーク
	フジサンマーク
	クロパーマーク
	サクランボマーク
	チューリップマーク
	バナナマーク
	リンゴマーク
	ワカバマーク
	モミジマーク
	サクラマーク
	オニギリマーク
	ショートケーキマーク
	トリリマーク
	ドンブリマーク
	パンマーク
	カツツムリマーク
	ヒヨコマーク
	ペンギンマーク
	サカナマーク
	ウマイマーク
	ウッシシマーク
	ウママーク
	ブタマーク
	ウィングラスマーク
	ゲッソリマーク

Information

- Pictographs are all counted as full-pitch characters.
- Pictographs are not correctly displayed if they are sent to mobile phones which do not support i-mode or to personal computers. Further, the pictographs from “㊄” through “㊄” are correctly displayed only when sent to i-mode phones which support those pictographs.

Common Phrase List

No.	Expressions
"Greetings" folder	
1	Good morning
2	Good afternoon
3	Good evening
4	Good night
5	I'm going
6	Have a nice day
7	I'm back
8	Welcome back
9	I'm sorry
10	Good-bye
"Business" folder	
1	Your cooperation is greatly appreciated
2	We always appreciate your business
3	Please send my best regards to everyone
4	Thank you very much for the other day
5	How's everything?
6	I will be late
7	See you later
8	All right
9	Check urgently!
10	Call me

No.	Expressions
"Internet" folder	
1	@docomo.ne.jp
2	.ne.jp/
3	.co.jp/
4	.or.jp/
5	.ac.jp/
6	.com/
7	http://www.
8	https://www.
9	www.
10	.html
"Smiley 1" folder	
1	(* O *)ノ
2	♪(∇∇)ノ"
3	(´Д`)ノ"
4	<<(_ _ :)>>
5	(人)
6	O(≥∇≤)O
7	(p _ q)I-ン
8	(T _ T)
9	Σ(∩_∩*)I E ッ
10	(*≥∇≤*)フッ
"Smiley 2" folder	
1	(` ´ 0 `)」オーイ
2	ツンツン(。° - °)σ
3	∨(・ε・o)オイオイ
4	(・o・)♪了解!
5	(: ￣ ￣) アヤシイ
6	∨(≥∇≤) # ヤダヤダ
7	σ(∇∇)
8	<<(^ ^)>>Iヘン
9	ㄣ(_ _) フッ
10	~~~~~-(・∀・)- フーン

Multiaccess Combination Patterns

Communication event Communication status	Voice call		Videophone call		PushTalk		i-mode	i-mode mail	
	Outgoing	Incoming	Outgoing	Incoming	Outgoing	Incoming	Connecting	Sending	Receiving
Voice call	△※1	△※2	×	×※3	×	×※4	○	○	△※5
Videophone call	×	×※3	×	×※3	×	×※4	×	×	×
PushTalk	×	△※6	×	×※4	×※7	×※4	×	×	×
i-mode	○	○	△※8	△※9	△※8	△※10	×	○	○
i-mode mail	○	○	△※8	△※9	△※8	△※10	○	×	×
SMS	○	○	○	○	○	○	○	×	△※5※11
i-oppli※12	×	○	×	△※9	×	△※10	×	×	△※5
i-oppli software running	○	○	△※8	△※9	△※8	△※10	×	○	△※5
Packet communication (Data communication)	○	○	×	×※4	×	×	×	×	×
64K data communication	×	×※3	×	×※3	×	×	×	×	×

Communication event Communication status	SMS		i-oppli	i-oppli software running	Packet communication (Data communication)		64K data communication	
	Sending	Receiving	Outgoing	Outgoing	Sending	Receiving	Sending	Receiving
Voice call	○	△※5	×	×	○	△※5	×	×※3
Videophone call	×	△※5	×	×	×	×	×	×※3
PushTalk	×	△※5	×	×	×	×	×	×
i-mode	○	○	×	×	×	×	×	×
i-mode mail	×	△※5※11	×	×	×	×	×	×
SMS	×	△※5	○	○	○	△※5	○	△※5
i-oppli※12	×	△※5	×	×	×	×	×	×
i-oppli software running	○	△※5	×	×	×	×	×	×
Packet communication (Data communication)	○	○	×	×	×	×※3	×	×
64K data communication	×	○	×	×	×	×	×	×※3

○: Can start.

△: Can start by condition.

×: Cannot start simultaneously. The current communication continues (the started communication is rejected).

※1: If you have signed up for "Call waiting", you can make another call with the current voice call put on hold.

※2: In the condition of the maximum number of voice line+1, you can activate Voice Mail, Call Waiting, or Call Forwarding.
(See page 364, page 366, and page 367)

※3: If you have signed up for "Call waiting", "Voice mail", or "Call forwarding", you can answer an incoming call after finishing a call or communication. (See page 371)

※4: The call is recorded as a missed call in Received Calls.

※5: "☐(white)" appears to notify of incoming mail.

※6: The FOMA phone works in accordance with the setting of "PushTalk arrival act".

※7: Only when you are the caller, you can make calls to add members.

※8: i-mode communication is cut off, and you can make a call.

※9: The FOMA phone works in accordance with the setting of "V-phone while packet".

※10: The FOMA phone works in accordance with the setting of "i-mode arrival act".

※11: For i-mode mail and SMS, you can use a single line each at a time.

※12: This is the case for when you are upgrading or downloading an i-oppli program.

Multitask Combination Patterns

When the functions in the same group (part in the table) conflict, the display for switching the active function appears. However, it might not appear depending on the operation.

Function in operation	Started function	Voice call	Video phone call	Push Talk	Mail	i-mode group		Setting group		Tool group						Private menu ※2	
						i-mode ※1	i-appli	Settings ※2	Service	Data box ※1	LifeKit ※3	Phone book ※4	Stationery	MUSIC ※5	1Seg ※5		OsaiFu-Keitai ※5
Voice call		×	×	×	○	○	×	○	○※6	×	○※7	○	○※8	×	×	○	○
Videophone call		×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
PushTalk		×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Mail		○	○	○	×	○	○	○	○	○	○	○	○	○	○	○	○
i-mode※1		○	○	○	○	×	×	○	○	○	○	○	○	○	○	○	○
i-appli		○	○	○	○	×	×	○	○	○	○	○	○	×	○※10	○	○
Settings※2		○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○
Service		○	○	○	○	○	○	×	×	○	○	○	○	○	○	○	○
Data box※1※11		○	○	○	○	○	○	○	○	×	×	×	×	×	×	×	×
LifeKit※3		○※12	○※12	○※12	○※13	○	○	○	○	×	×	×	×	×	×	×	×
Phonebook※4		○	○	○	○	○	○	○	○	×	×	×	×	○	×	×	○
Stationery		○	○	○	○	○	○	○	○	×	×	×	×	○※16	×	×	○
MUSIC※5		○※17	○※17	○※17	○※18	○	×	○※10	○	○※19	×	×	×	×	×	×	○
1Seg※5		○※17	○※17	○※17	○※18	○	○	○	○	○	×	×	×	×	×	×	○
OsaiFu-Keitai※5		○	○	○	○	○	○	○	○	×	×	×	×	○	×	×	○

○: Can be activated simultaneously. ×: Cannot be activated simultaneously.

- ※1: While a PDF file is displayed, the i-mode group is in use. However, One Seg programs or "1Seg" in Data Box cannot be activated simultaneously.
- ※2: You cannot use it depending on the function.
- ※3: You cannot use Multitask to start up "Receive Ir data" and "SD-PIM".
- ※4: You cannot use Multitask to start up "UIM operation".
- ※5: The functions not belonging to the Tool group are included.
- ※6: You cannot start up "Caller ID notification" during a call.
- ※7: LifeKit functions you can start up during a call are limited to "Bar code reader", still image shooting of "Camera", "Bluetooth", "GPS", "Text reader", and "Data Security Service".
- ※8: Stationery functions you can start up during a call are limited to "Schedule", "ToDo", "Text memo", "Calculator", and "使いかたナビ (Guide)".
- ※9: During a call, you can receive a GPS location provision request. When each service setting is set to other than "拒否 (Reject)", you can provide your location information.
- ※10: Some i-appli programs can be activated simultaneously with MUSIC.
- ※11: If you use Multitask to switch functions while you are using the Picture viewer (microSD memory card), i-motion player, Video player, Chara-den player, or Melody player, or while playing back a demo from "MUSIC" in Data Box, display or playback ends. You cannot switch functions while you are editing an i-motion movie.
- ※12: Playback/Recording stops when a call comes in while you are playing back "Record message", "Videophone record message", "Voice memo", or "Movie memo", or while recording "Voice memo". When a call comes in while you are scanning data using "Bar code reader" or "Text reader", the data being scanned is discarded.
- ※13: If you set "Receiving display" to "Alarm preferred" and a mail message comes in while you are scanning data using "Bar code reader" or "Text reader", the data being scanned is discarded.
- ※14: You can receive a GPS location provision request. When each service setting is set to other than "拒否 (Reject)", you can provide your location information.
- ※15: You can simultaneously start it with "Bar code reader", "Text reader", "Camera", or "GPS". However, Play Background is not available for the functions other than GPS.
- ※16: You cannot simultaneously start MUSIC with "使いかたナビ (Guide)".
- ※17: Play Background is not available.
- ※18: If you set "Receiving display" to "Alarm preferred" and a mail message comes in, the playback is suspended.
- ※19: You cannot use "2in1 setting" and "Chaku-moji".
- ※20: You cannot simultaneously start "MUSIC Player", "MUSIC", "Music&Video Channel", and "PC Movie".

Services Available with FOMA Phones

Available services	Phone number
Directory assistance service (Charges apply: guidance fee + call fee) ※Listed phone numbers only can be given.	(No prefix) 104
Telegrams (Telegram charges apply)	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	City code of the desired area + 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charges apply)	(No prefix) 171
Collect calls (Charges apply: guidance fee + call fee)	(No prefix) 106

Information

- When using the collect call (106), the recipient is charged a call fee and handling fee ¥90 (¥94.5 with tax) for each call. (As of October 2007)
- When using the directory assistance service (104), you are charged a guidance fee ¥100 (¥105 with tax) plus a call fee. For whom having weak eyesight or handicapped arms, the guidance is available charge free. For more details, dial 116 (NTT inquiry counter) from landline phones. (As of October 2007)
- This FOMA phone supports “Emergency Location Report”.
When you make an emergency call such as at 110/118/119, information about the place where you are dialing from (location information) is automatically notified to emergency-response agencies such as police stations. It might happen that your correct location is not detected by emergency-response agencies depending on the location you dialed or radio wave conditions. When your location information is notified, the name of emergency-response agency is displayed on the Stand-by display. When you do not notify your phone number by call such as by adding “184”, your location information and phone number are not notified. However, when an emergency-response agency has judged that the location information and phone number should be detected because of emergency priority such as protection of human life, they might be notified regardless of your setting.
The region and timing “Emergency Location Report” is introduced vary depending on the preparation of respective emergency-response agencies.
- When you make a call at 110/119/118 from the FOMA phone, tell an operator that you are calling from a mobile phone and then precisely notify your phone number and actual location. Further, remain still while talking to prevent your call from being disconnected. Do not turn off the power immediately after the call, but instead make sure that your phone can receive calls for at least 10 minutes.
- You might not be connected to regional police/fire station depending on the area from where you call. If this happens, use public phones nearby or landline phones.
- If you use “Call Forwarding Service” for the landline phone and specify a mobile phone as the forwarding destination, callers may hear ringing tone even when the mobile phone is busy, out of the service area, or the power is turned off depending on the settings of the landline phone/mobile phone.
- Note that the FOMA phone is not available to 116 (NTT inquiry counter), Dial Q2, Message Dial, and credit call services. (You can use auto credit call to the FOMA phone from landline phones or public phones.)

Introduction of Options and Related Equipment

Combining various options with the FOMA phone, you can realize more versatile use from personal purpose to business purposes. Some products may not be dealt in depending on the area. For details, consult a handling counter such as a DoCoMo shop. For details on options, refer to the user's manuals of respective options and related equipment.

- Battery Pack P15
- Back Cover P22
- FOMA AC Adapter 01/02^{※1}
- FOMA AC Adapter 01 for Global use^{※1}
- FOMA DC Adapter 01/02
- FOMA Portable Charging Adapter 01
- FOMA Dry Battery Adapter 01
- Desktop Holder P24
- FOMA USB Cable with Charge Function 01^{※2}
- FOMA USB Cable^{※2}
- FOMA Indoor Booster Antenna^{※3}
- FOMA Indoor Booster Antenna (Stand Type)^{※3}
- Carry Case L 01
- In-Car Holder 01
- Flat-plug AV Output Cable P01
- Earphone/Microphone with Switch P001/P002^{※4}
- Stereo Earphone Set P001^{※4}
- Earphone Plug Adapter P001
- Flat-plug Earphone/Microphone with Switch P01/P02
- Flat-plug Stereo Earphone Set P01
- Flat-plug Connector/Stereo Mini-jack Conversion Adapter P01
- Bluetooth Headset F01^{※5}
- AC Adapter for Bluetooth Headset F01
- Wireless Earphone Set P01
- Bone conduction microphone/receiver
- In-Car Hands-Free Kit 01^{※6}
- FOMA In-Car Hands-Free Cable 01

※1 See page 42 and page 43 for charging batteries using AC adapter.

※2 If you use a USB hub, the devices may not work correctly.

※3 Use it in Japan only.

※4 Earphone Plug Adapter P001 is required.

※5 AC Adapter for Bluetooth Headset F01 is required.

※6 To use/charge the FOMA phone via cable connection (USB connection), FOMA In-Car Hands-Free Cable 01 is required.

Introduction of Software for Playing Back Moving Images

To play back moving images (MP4 format file) using your personal computer, you need to have QuickTimePlayer (free) ver. 6.4 or higher (or ver. 6.3 + 3GPP) of Apple Computer Inc.

You can download QuickTime from the following web page:

<http://www.apple.com/jp/quicktime/download/> (Japanese only)

Information

- For download, a personal computer connected to the Internet is required. You are charged a communication fee to download.
- For details such as operating environments, how to download, and how to operate, refer to the web page above.

Links with AV Equipment

On the FOMA phone, you may be able to play back some moving images in ASF format, which are saved from another AV equipment to the microSD memory card. Also, you may be able to play back some moving images recorded with the FOMA phone on another AV equipment. For information about links with compatible AV equipment, refer to the following:

<http://panasonic.jp/mobile/> (Japanese only)

Inquiry Center for Links with Compatible AV Equipment

■Panasonic Mobile Communications Customer Service Center

From landline phones: ☎0120-15-8729

Business hours: 9:00 a.m. to 5:00 p.m.

From mobile phones or PHSs: 045-938-4023

(Excluding Saturdays, Sundays, national holidays, and specified holidays)

- Make sure that you dial the correct number.


Troubleshooting

- First of all, check to see if you need to update the software program and then update it if required. See page 434 for how to update software programs.


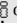



Problem	Check point	Reference
The FOMA phone does not turn on. (Cannot use)	<ul style="list-style-type: none"> ● Make sure the battery is attached to the FOMA phone correctly. ● Make sure the battery is fully charged. ● If the mova is usable in Dual Network Service, the FOMA phone service is not available. Is the FOMA phone usable? For details, refer to "Mobile Phone User's Guide [Network Services]". 	<p>P.41</p> <p>P.42</p> <p>P.369</p>
Cannot dial by pressing numeric keys.	<ul style="list-style-type: none"> ● Make sure Keypad Dial Lock is deactivated. ● Make sure Restrict Dialing is deactivated. ● Make sure Lock All is deactivated. ● Make sure Self Mode is deactivated. 	<p>P.125</p> <p>P.127</p> <p>P.120</p> <p>P.121</p>
Dial but cannot connect; a busy tone sounds.	<ul style="list-style-type: none"> ● Make sure the phone number contains a city code. ● Enter the phone number after you hear the dial tone. ● If "📶" appears, move to a place where it disappears. 	<p>P.50</p> <p>P.44</p>
"📶" appears and a busy tone sounds.	<ul style="list-style-type: none"> ● You may be out of the service area or weak radio waves are being received. 	P.44
"🔒" and "Lock all" are displayed and pressing keys are null.	<ul style="list-style-type: none"> ● This may be because Lock All is activated. 	P.120
Pressing the side keys does not work when the FOMA phone is closed.	<ul style="list-style-type: none"> ● This may be because "Side keys guard" is set to "ON". 	P.125
Alert beeps.	<ul style="list-style-type: none"> ● The battery runs short. You need to charge. 	P.42
Cannot charge. (The Call/Charging indicator of the FOMA phone does not light, or it flickers.)	<ul style="list-style-type: none"> ● Make sure the battery is attached to the FOMA phone correctly. ● Make sure the power plug of the adapter is securely inserted into outlet. ● Make sure the adapter and the FOMA phone is firmly connected. For AC adapter (option), make sure its connector is firmly connected to the FOMA phone or a desktop holder (option). 	<p>P.41</p> <p>P.43</p>
The display grows dark, showing nothing.	<ul style="list-style-type: none"> ● Make sure Power Saver Mode is deactivated. 	P.107
Different ring tones sound for incoming mail.	<ul style="list-style-type: none"> ● This may be the mail from a party whose mail ring tone is set by the setting items in the Phonebook. ● This may be the mail from a party stored in a group set with a mail ring tone by Group Setting. 	<p>P.87</p> <p>P.88</p>
When a call or mail message comes in, the Call/Charging indicator lights/flickers differently.	<ul style="list-style-type: none"> ● This may be the call or mail message from a party for whom you have set "Illumination/Mail illumination" by setting items in the Phonebook. ● This may be the call or mail message from a party stored in a group set with "Illumination/Mail illumination" by Group Setting. 	<p>P.87</p> <p>P.88</p>
Images or melodies selected in the functions are not played back; they are played back at the default setting.	<ul style="list-style-type: none"> ● Make sure the UIM that was inserted when you obtained images or melodies is inserted. 	P.39
Cannot count total calls cost.	<ul style="list-style-type: none"> ● Make sure that total calls cost accumulated on the UIM does not exceed the limit (about ¥16,770,000). Perform Reset Total Cost to return to ¥0. 	P.344
Cannot watch a One Seg program.	<ul style="list-style-type: none"> ● You may be out of the terrestrial digital TV broadcasting service area or weak airwaves are being received. ● Make sure the UIM is inserted. ● Make sure Channel Setting is set. 	<p>P.244</p> <p>P.38</p> <p>P.245</p>
Cannot perform data transfer	<ul style="list-style-type: none"> ● Make sure that you do not use a USB hub. If you use a USB hub, the devices may not work correctly. 	-

Error Messages

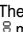●“(numerals)” in error messages are the code sent from the i-mode Center for discriminating the error.

Message	Description	Reference
“Accept serial port devices” failed	An error occurred during the standby for registering the serial port, so the serial port was not placed on standby for registration.	–
Activating	Receive Option Setting is set to “OFF”. Switch the setting to “ON” and try again.	P.183
Activating keypad dial lock	Keypad Dial Lock is activated. Release Keypad Dial Lock and try again.	P.125
Activating mail security Cannot download	Mail Security is activated, so you cannot download. Deactivate Mail Security and try again.	P.126, P.191
Activating personal data lock	Personal Data Lock is set. Release Personal Data Lock and try again.	P.121
Activating personal data lock Send pre-installed substitute image	During Personal Data Lock, a “Pre-installed” substitute image is sent.	–
Activating record display OFF	Record Display Set is set to “OFF”. Switch the setting to “ON” and try again.	P.125
Activating reject unknown	“Reject unknown” is set to “Reject”. Set to “Accept” and try again.	P.129
Activating ring time	“Ring time” is set to “ON”. Set to “OFF” and try again.	P.128
Address is not valid (451)	You could not send the mail correctly. Check the address and try again.	P.172, P.206
All protected Cannot delete	All data items are protected, so cannot be deleted. Release the protection and try again.	P.159, P.192, P.201
Another function is active Cannot connect	The function is not available simultaneously in Multitask. End the functions not in use and try again.	
Another function is active Cannot operate		P.333
Another function is active Cannot switch		
Authentication failed	An authentication error occurred.	–
Authentication type is not supported (401)	Incompatible authentication type, so cannot be connected.	–
Auto time adjust info is not received Unable to play	You have not received the auto time adjust information, so could not play back the file with restrictions on the playable period or playable deadline.	–
Cannot compose because too large data	The size of the recorded moving image is too large to attach to i-mode mail. Use “Trim  motion” or “Trim for mail” to trim the moving image, then compose mail.	P.285
	The size of the shot image is too large to attach to i-mode mail.	–
Cannot dial	An error occurred, so you could not dial.	–
Cannot display	Corresponding software program is running. End the software program and try again.	P.211
Cannot edit message	The attached file reaches 10,000 bytes, so you cannot enter the text.	–
Cannot execute because of other tasks	The function is not available simultaneously in Multitask. End the functions not in use and try again.	P.333
Cannot recognize	The text could not be scanned. Change Recognition Mode or NEGA/POSI Mode, and scan the text again.	P.150
Cannot record	An error occurred, so you could not save.	–
Cannot resend Send after edit	The address is invalid or the text exceeds the size that can be entered, so you cannot re-send. Edit the text again and send.	P.192
Cannot save	The data could not be obtained from a site, so could not be saved.	–
Cannot save some attached files	Full of images, so part of the images could not be stored into the Phonebook.	–
Cannot set holiday and anniversary	The received holiday/anniversary and already stored data are set to the same date, so you cannot store it.	–
Cannot set this anniversary	The received anniversary and already stored data are set to the same date, so you cannot store it.	–
Cannot set this holiday	The received holiday and already stored data are set to the same date, so you cannot store it.	–
Cannot set this schedule	The received schedule event and already stored data are set to the same date and time, so you cannot store it.	–
Cannot start any more functions	The maximum number of functions is already running using Multitask. End the functions not in use and try again.	P.333
Cannot start because use mail folder	Corresponding software program is running. End the software program and try again.	P.211
Cannot use network transmission	“Network set” is set to “OFF”. Set it to “ON” and try again.	P.213
Certificate is rejected	You received an altered SSL/TLS certificate, so could not connect.	–
Certificate is rejected (tampered)		–
Check new message is set all OFF	No check marks are placed to the items for “Set check new message”. Put a check mark for the items to be checked and try again.	P.199

Message	Description	Reference
Check SMS center selection	The SMS Center is not correctly specified by SMS Center Selection. Specify the SMS Center and try again.	P.208
Conditional access Cannot watch	Receiving by limited method, so you cannot watch.	–
Connection failed	Failed to connect to the Bluetooth device while switching the voice to it during the call.	–
	Radio waves are weak, so you cannot connect. Move to a place where radio waves are strong enough and try again.	–
	The destination address set by Host Selection is wrong, so you cannot connect to it. Check the setting and try again.	P.165
	You could not connect because of network trouble. Wait a while and try again.	–
Connection failed (403)	You cannot connect to a site or Internet web page.	–
Connection failed (503)	You could not connect because of network trouble. Wait a while and try again.	–
Connection failed (562)		
Connection failed Check the other side device	The Bluetooth device is not compatible with the service supported by the FOMA phone, so could not be registered.	–
	The service you tried to connect to is invalid for the other end's Bluetooth device, so you could not connect to it.	–
Connection interrupted	Disconnected from the personal computer during data communication.	–
Connection is not valid	The destination address set by Host Selection is not compatible, so you cannot operate. Check the setting and try again.	P.165
	The user certificate is being operated, so you cannot connect. Complete operating the user certificate and try again.	–
Could not add	An error occurred, so you could not store.	–
Could not be found	No response from the Bluetooth device, so you could not store or connect it.	–
Could not find your blinks	Failed to detect your blinks. Change the direction of your face or the place, and then try again.	P.125
Data in IC card is full Unable to download Delete service?	This is displayed when the memory space within the IC card is short for downloading the i-opppli program that supports Osaifu-Keitai. Select "YES" to display the service names of Osaifu-Keitai already registered and the space within the IC card (in bytes). Check the area size for shortage, select the service to delete, start up the i-opppli program, and then delete it.	–
Data is full	The maximum number of anniversaries is stored. Delete unnecessary ones and try again.	
	The maximum number of holidays/anniversaries is stored. Delete unnecessary ones and try again.	P.339, P.340
	The maximum number of holidays is stored. Delete unnecessary ones and try again.	
	The maximum number of Phonebook entries has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary Phonebook entries and try again.	P.91
	The maximum number of schedule events has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary schedule events and try again.	P.339, P.340
	The maximum number of ToDo items has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary ToDo items and try again.	P.341
Data is too long A part is deleted	The maximum number of ToruCa files has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary ToruCa files and try again.	P.229
	Characters for one (or plural) of address, subject, and text of the mail exceeded the maximum, so part of them was deleted.	–
Data not applicable	Received data has an error, so cannot be displayed or saved. The received data is discarded.	–
Data size is too big to save	The file exceeded the maximum storable size by setting "File restriction", so could not be set.	–
Details cannot be saved	The ToruCa detailed data was not supported, so was not saved.	–
Device list is full No device to overwrite	The maximum number of Bluetooth devices is stored, so you cannot store any more. Delete unnecessary Bluetooth devices.	P.351
Downloaded data exists Cannot connect to network	Save the PC movie on the Obtaining Completion display, and then close the Obtaining Completion display.	P.266
Downloading interrupted	Another function was running or an error occurred, so you could not download.	–
Editing now Cannot delete	Being used for another function, so you cannot delete. End the function and try again.	P.333
Enter zoom size	No magnification is entered. Enter the magnification and try again.	P.309
Enter "+" in right position	"+" is wrongly positioned. Enter it to the beginning of the phone number.	P.58
Error	An error occurred, so you could not operate.	–
Error in image Does not work correctly	The Flash movie had an error, so you could not play it back normally.	–

Message	Description	Reference
Failed in  transmission	An error occurred, so you could not perform iC transmission.	–
Failed to authenticate	An authentication error occurred.	–
Failed to get license file	Failed to obtain the license information about the PC movie, so cannot be played back.	–
Failed to read	An error occurred while reading information from the microSD memory card.	–
Failed to read	An error occurred when playing back the moving image.	–
Quitting	The file cannot be read because you tried to play back the file in the "Movable contents" folder with a UIM that was not inserted when that file was saved. Insert the UIM that was inserted when the file was saved, and try again.	P.38
	The microSD memory card was removed while reading the information from it. Insert the microSD memory card and try again.	P.293
Failed to receive channel info	Failed to obtain the i-Channel information because part or all of it could not be obtained.	–
Failed to save	An error occurred, so you could not copy the ToruCa file.	–
	An error occurred, so you could not save.	–
	An error occurred, so you could not store.	–
	You could not save the shot image.	–
Failed to send Ir data	An error occurred, so you could not send the data using infrared rays.	–
Failed to set	An error occurred, so you could not set.	–
Failed to store in PushTalk phonebook	Could not be stored because the phone number was the number that could not be stored in the PushTalk Phonebook.	–
Format error Insert microSD formatted	The format of microSD memory card is incompatible with FOMA P905i. Use FOMA P905i to format it.	P.299
 appli stand-by display terminated due to security error	i-appli DX has forcibly been ended.	P.212
 appli To" function is not set	A check mark is not put for "Set  appli To", so you cannot start up i-appli. Put the check mark and try again.	P.213
IC card function inactive Unable to download	IC card has been locked, so you could not download or upgrade. Release IC Card Lock and try again.	P.230
Image display is OFF Cannot receive	"Set image display" is set to "OFF", so you cannot obtain the image. Set to "ON" and try again.	P.164
Image in message will be deleted	The output-prohibited image from the FOMA phone is attached to the mail text, so deleted.	–
i-mode Center is busy Please try again later (555)	The line facility has trouble or the line is very busy. Wait a while and try again.	–
i-mode mail service is busy Please try again later (553)	The line is very busy. Wait a while and try again.	–
Incomplete data Unable to start	The i-appli program you tried to start up does not start because partial data only is saved. Download the whole i-appli program and try again.	P.210
Input error (205)	The entered contents are wrong. Check the contents and try again.	–
Input too long	Too many entered characters to send. Decrease the number of characters and send again.	P.154
Invalid Cannot resend	The address is invalid or the text exceeds the size that can be entered, so you cannot re-send.	–
Invalid code	The entered USSD is incorrect. Enter the correct one.	P.378
Invalid data	Received data has an error, so cannot be displayed or saved. The received data is discarded.	–
	You cannot play back the following PC movies:	–
	· The data files other than Windows Media files or the files with invalid contents	–
	· The data file whose image size is larger than 320 dots x 240 dots, image bit rate is higher than 2 Mbps, or voice bit rate is higher than 385 kbps	–
	· If the server returns an unidentified response when you try to download a savable data file.	–
	· When the streaming server is not supported by the FOMA phone (the streaming server supported by the FOMA phone is Windows Media Services 9 only)	–
Invalid data (xxx)	Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).	–
Invalid data Data size is not supported (xxx)	Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).	–
Invalid func in this UIM	The function cannot be operated from the inserted UIM.	–
Invalid ID	The entered ID is wrong. Enter the correct ID.	P.239
Invalid UIM auto start not display	You cannot start up the i-appli program because of the UIM restrictions. Insert the UIM which had been inserted when the i-appli program was downloaded and try again.	P.39
Invalid UIM  appli is unable to run		

Message	Description	Reference
Invalid UIM Incorrect display	The screen memo cannot be correctly displayed because of the UIM restrictions. Insert the UIM that had been inserted when the screen memo was saved, and try again.	-
Invalid UIM Requested service not available	You cannot operate because of the UIM restrictions. Insert the UIM which had been inserted when the data or file was obtained and try again.	P.39
Invalid UIM requested service not available		
Invalid UIM Requested software failed to start	You cannot start up the i-oppli program because of the UIM restrictions. Insert the UIM which had been inserted when the data or file was obtained and try again.	P.39
Invalid UIM requested software failed to start		
Invalid UIM Unable to delete	You cannot move, start up, delete, download or upgrade because a UIM different from the one set for the IC card is inserted. Insert the UIM set for the IC card, and try again.	P.39
Invalid UIM Unable to download		
Invalid UIM Unable to move		
Invalid UIM Unable to start		
Invalid UIM Unable to upgrade		
Invalid URL	The URL is invalid, so you cannot connect to the site or the Internet web page.	-
Linked page is not downloaded	The PDF data file has a link but the linked end has not been downloaded, so the linked page could not be displayed.	-
Location provision failed	An error occurred because the FOMA phone is out of the service area or by other reasons, so it failed to measure the current location or to provide the location information. Move to a place where radio waves are strong enough and try again.	-
以下の宛先にはメール送信できませんでした (561) Mails could not be sent to following address. (561) ●●@△△△.ne.jp*	You could not send the mail message correctly to the displayed address. ※The mail address differs depending on the destination.	-
Max cost icon is not displayed	The Max Cost icon is not displayed, so cannot be deleted.	-
Memory full	There is no usable memory space, so you cannot operate.	-
Memory function active Cannot operate	The microSD memory card is in use, so you cannot set.	-
Memory No. : xxx Cannot overwrite	You cannot store in the same memory number with the Phonebook entry stored as secret data. Store in a different memory number. A three-digit numeral is displayed for (xxx).	P.86
Memory shortage	The memory space is not enough, so processing is suspended. If displayed frequently, turn off and on the power.	P.44
Memory shortage Cancel update	The memory space is not enough, so processing is suspended.	
Memory shortage End document viewer		
Memory shortage Failed to create font effect		
Memory shortage Return to Access Setting		
Memory shortage Return to Full Browser menu		
Memory shortage Return to i-mode menu		
Memory shortage Return to ToruCa list		
Network is not found	You cannot connect to the specified network. However, the connection is completed if the antenna icon appears afterward.	-
No channel info	The channel information cannot be downloaded, so recommended channel mail cannot be composed.	-
No data in phonebook Cannot operate	The phone number and mail address of the other party are not stored in the Phonebook. Store them and try again.	P.85
No picture	No frames to fit the size are found.	-
No response	No Bluetooth devices were found around the FOMA phone.	-
	Sending end was not found while using iC communication.	-
No response (408)	No response from the site or Internet web page, so you could not connect to it. Try again.	-

Message	Description	Reference
No set melody	This is displayed when you try to play back melodies with the playlist unprogrammed. Program the melodies and then play them back.	P.302
Not notify phone No. Cannot operate	You could not start up because the other party's phone number was not notified.	–
Not registered	An error occurred, so you could not store.	–
Not secret data Cannot call	You have switched to Secret Data Only, so you cannot access. Release Secret Data Only and try again.	P.126
Notification failed	You failed to notify the current location because you moved out the service area during the notification or by other reasons. Move to a place where the radio waves are strong enough and try again.	–
Operation failed	An error occurred, so you could not set.	–
Operation may not be performed	The microSD memory card is removed while it is in progress or an error occurred, so it might be possible that no operation is done. Check "Movie" folder for the data.	P.280
Other function active Cannot operate	The function is not available simultaneously in Multitask. End the functions not in use and try again.	P.333
Out of service	Radio waves are not received. Move to a place where the radio waves are strong enough and try again.	–
Out of service area		
Page is not found (404)	The site or Internet web page does not exist, or URL is wrong. Check the URL and try again.	P.156
PIN1 code blocked	Three times erroneous entry of the PIN1 code blocks the code. Enter the PUK (PIN unblock code).	P.119
PIN1 code blocked Enter PUK		
PIN1 code not recognized		
Please set "To type" receiver	No address is in the "To" field. Fill in the "To" field and try again.	P.172, P.173
Please wait	The audio line/packet communication facility has trouble or the audio line network/packet communication network is very congested. Wait a while and try again. You can make calls at 110/119/118. However, calls might not be connected by the situation.	–
	The packet communication facility has trouble or the packet communication network is very congested. Wait a while and try again.	–
Please wait for a while	The audio line/packet communication facility has trouble or the audio line network/packet communication network is very congested. Wait a while and try again. You can make calls at 110/119/118. However, calls might not be connected by the situation.	–
Please wait for a while (packet)	The packet communication facility has trouble or the packet communication network is very congested. Wait a while and try again.	–
Positioning failed	An error occurred because the FOMA phone is out of the service area or by other reasons, so it failed to measure the current location or to provide the location information. Move to a place where radio waves are strong enough and try again.	–
Preparing Cannot record	You cannot record just after recording. Wait a while and try again.	–
Protected all Cannot delete	All data items are protected, so cannot be deleted. Release the protection and try again.	P.159, P.192, P.201
Protected Cannot delete	Protected data, so could not be deleted. Release protection and try again.	
Protected mail Cannot delete		P.201
Protected memo Cannot delete		
Protected message Cannot delete		
PUK blocked	Ten times erroneous entry of the PUK (PIN unblock code) blocks the code. Contact the handling counter of a DoCoMo shop.	–
PUK code blocked		
PUK code not recognized		
Read error	An error occurred while reading information from the microSD memory card.	–
Received invalid data	Received data has an error, so it cannot be displayed or saved. The received data is discarded.	–
Receiver cannot save data	The receiving end blocks data.	–
Receiving failed	The destination address set by Host Selection is wrong, so you cannot select and receive. Check the setting and try again.	P.165
Registration is in progress (554)	You cannot operate because the user is being registered. Wait a while and try again.	–
Replace with a new one or check the disk	The microSD memory card formatting is abnormal. Execute Check microSD.	P.299
Replay period has not yet started	Playable date has not come yet, so you cannot play back the file.	–

Message	Description	Reference
Retention period has expired (492)	You could not download attached files held at the i-mode Center because the save period had been over.	-
Return to normal style	Cannot operate in Horizontal Open Style. Switch to Normal Style and try.	P.26
Rewrite failed	Failed to update the software program. Contact a handling counter such as a DoCoMo shop.	-
Root certificate has expired Terminate SSL session	Expiration date of SSL certificate has passed, so the connection is suspended.	-
Root certificate is not valid	The SSL certificate of that server is set to "Invalid" for "Certificate" setting. Set to "Valid" and try again.	P.165
	The SSL/TLS certificate of that server is set to "Invalid" for "Certificate" setting. Set to "Valid" and try again.	P.165
Run software and delete data on IC card Then delete software	Data is left inside the IC card, so you cannot delete the Osaifu-Keitai compatible i-ϕpli. Start up the Osaifu-Keitai compatible i-ϕpli, delete the stored data, and try again.	-
Secret data	You have not switched to Secret Mode or Secret Data Only, so cannot access. Switch to Secret Mode or Secret Data Only and try again.	P.126
Server is busy	The line facility has trouble or the line is very busy. Wait a while and try again.	-
	The line is very busy. Wait a while and try again.	-
Service is used by a previous software Unable to download Delete a service?	When the software program with the service that uses the same IC card has already been downloaded, you cannot download or upgrade a new service unless you delete the existing service that has already been stored. Select "YES" to display the service to be deleted, and then delete that service already stored.	-
Service is used by a previous software Unable to upgrade Delete a service?		-
Service unavailable	The function cannot be operated with the inserted UIM.	-
Setting auto assist Cannot delete	The country code or international call access code set by Auto Assist Setting cannot be deleted. Change/Cancel the setting and try again.	P.58
Setting auto assist Cannot delete all		
Setting IC card lock	IC Card Lock is set. Release IC Card Lock and try again.	P.230
Setting receive option Cannot start	Receive Option Setting is set to "ON", so you cannot start up. Switch to "OFF" and try again.	P.183
Size of data is not supported	Data size exceeded the maximum, so you could not download normally.	-
Size of page is not supported	The size of site or Internet web page is large, so obtaining is suspended, and only obtained portion is displayed.	-
Size of this page is not supported		-
Software for this folder deleted Refer to Open folder	The corresponding mail-linked i-ϕpli has been deleted.	-
Software for this folder exists Cannot delete	The corresponding mail-linked i-ϕpli is contained, so you cannot delete.	-
Software terminated due to security error	i-ϕpli DX has forcibly been ended.	P.212
Software update active Cannot operate	You could not start up during updating the software program. After the software update is completed, try again.	-
Software update is aborted Please retry	The FOMA phone was turned off during updating the software program. Try updating it again.	P.434
Software upgraded	The target software program is not updated, so you cannot execute.	-
Some addresses are not valid	Some addresses are incorrect. Enter the addresses correctly and send.	P.172, P.206
Some data could not be copied	The selected files contained ones that could not be copied, so you could not copy some data.	-
Some data could not be moved	The selected files contained ones that could not be moved, so you could not move some data.	-
Some data could not be saved	The selected files contained ones that could not be copied to the FOMA phone or microSD memory card, so you could not save some data.	-
Sort is full Cannot add	The maximum number of settings is already set. Release unnecessary settings and try again.	P.197
Specified page number is not valid	The entered page number is invalid. Enter the correct page number and try again.	P.308
Specify max cost within ¥10-100,000	Set the limit of Notice Call Cost to ¥10 through ¥100,000.	P.344
SSL session cannot be established	Either an altered SSL certificate was received or an SSL error occurred, so you could not connect.	-
SSL session failed	An authentication error occurred at the server, so you cannot connect.	-
SSL/TLS session cannot be established	Either an altered SSL/TLS certificate was received or a SSL/TLS error occurred, so you could not connect.	-

Message	Description	Reference
SSL/TLS session failed	An authentication error occurred at the server, so you cannot connect.	–
Switch to normal style to answer	Cannot answer in Horizontal Open Style. Switch to Normal Style and try again.	P.26
Syntax error	Received data has an error, so cannot be displayed or saved. The received data is discarded.	–
This certificate has expired Terminate SSL session	Expiration date of SSL certificate has passed, so the connection is suspended.	–
This certificate is not valid for this URL Terminate SSL session	The contents of this SSL certificate do not match, so the connection is suspended.	–
This data is not valid	You are trying to paste characters that cannot be used. Check the characters to be pasted and try again.	P.360
This file is not attachable Cannot resend	The output-prohibited file from the FOMA phone has been attached to the mail, so you could not re-send it.	–
This file is not valid	The file is incompatible, so cannot be displayed.	–
This image is not valid	The image could not be displayed normally, so cannot be saved. Even if normally displayed, it may not be saved depending on the file format.	–
This mail is broken Cannot resend	The size of the mail text is too large or the attachment information about the text is damaged, so you could not re-send.	–
This picture is not valid	The image data is invalid, so cannot be displayed.	–
This site is not certified Terminate SSL session	This SSL certificate was not supported, so the connection was suspended.	–
This software contains an error	The software program contains invalid data, so cannot be downloaded or upgraded.	–
This software contains an error Unable to download		–
This software is currently unavailable for use	You cannot start up the software program because the effective period is expired or the server has put it in unavailable state.	–
This software is not supported by this phone	The software program to be downloaded or upgraded does not support the FOMA phone.	–
This UIM cannot be recognized	An error occurred on the UIM or the PUK (PIN unblock code) is blocked. Contact the handling counter of a DoCoMo shop. Check to see if the correct UIM is inserted.	– P.38
Time out	Disconnected from the other end's Bluetooth device during entering a Bluetooth passkey. No response from the Bluetooth device, so you could not store or connect it. The maximum stand-by time for "Accept dialup devices" had elapsed, so "Accept dialup devices" was deactivated.	– – –
Too much data was entered	Too many entered characters to send. Decrease the number of characters and send again.	P.154
ToruCa is full	The maximum number of ToruCa files has been stored in the FOMA phone, so you could not receive a new one. Delete unnecessary ToruCa files and try again.	P.229
ToruCa limit reached Unable to copy Delete ToruCa	The maximum number of ToruCa files is stored, so you cannot copy them. Delete unnecessary ToruCa files.	P.229
ToruCa limit reached Unable to download Delete ToruCa	The maximum number of ToruCa files is stored, so you cannot store any more. Delete unnecessary ToruCa files.	P.229
ToruCa limit reached Unable to receive Delete ToruCa	The maximum number of ToruCa files is stored, so you cannot obtain any more. Delete unnecessary ToruCa files.	P.229
Transmission failed	You could not send the mail correctly. A three-digit numeral is displayed for (xxx).	–
Transmission failed (552)		–
Transmission failed (XXX)		–
Unable to activate 1Seg. Please activate the application after moving to FOMA coverage	You repeatedly watched One Seg programs out of the service area where you cannot connect to, so you cannot start One Seg. Move yourself into the FOMA service area where you can connect to, and then try to start One Seg again.	–
Unable to change title	You could not edit the title because entering no characters or entering only space is disabled while editing the title. Enter characters and try again.	P.274
Unable to combine/bind	You could not concatenate the scanned data. The scanned data up to now is discarded.	–
Unable to compose	You could not compose i-mode mail because the FOMA phone was reading data. Wait a while and try again.	–
Unable to compose message		–
Unable to dial Switch to normal style to dial	Cannot dial in Horizontal Open Style. Switch to Normal Style and try again.	P.26

Message	Description	Reference
Unable to download	Another function was activating or an error occurred, so you could not download.	–
	The data is invalid, so cannot be downloaded.	–
Unable to download Cancel update	Another function was activating or an error occurred, so you could not download.	–
Unable to download Data exceeds maximum size	You tried to download the PDF data file exceeding the maximum size, so could not download it.	–
Unable to download Data exceeds maximum size (452)	You tried to receive data exceeding the maximum size, so could not receive it.	–
Unable to download remaining data Delete data	An error occurred when downloading the remaining data of the file that was partially saved, so the data was deleted.	–
Unable to edit file name	You cannot change the file name to the one starting with a period or containing prohibited characters except half-pitch alphanumeric characters. Enter the correct file name and try again.	P.275
Unable to input because of exceeding maximum size	You could not enter the Decomail-pictograph because it exceeded the maximum size of the images to be inserted.	–
Unable to move	The i-appli is the one that cannot be moved to the FOMA phone, so could not be moved from the microSD memory card to the FOMA phone.	–
Unable to perform AV output	An error occurred, so the AV output is suspended.	–
Unable to play because of wrong UIM or license info	This music file cannot be played back due to UIM restrictions. Insert the UIM you used for obtaining the Chaku-uta Full® music file, and try again. If the UIM is the one inserted for obtaining the Chaku-uta Full® music file, the license information of the music file in the FOMA phone is invalid, so cannot be played back. Perform "Initialize" and try again.	P.354
Unable to retrieve the requested URL (504)	No response from the server, so you cannot connect.	–
Unable to save	The data could not be obtained from a site, so could not be saved.	–
Unable to search any available channels	No broadcasting station was found that can receive programs currently in the area.	–
Unable to search any channels		
Unable to select	When selecting the end point for "Trim Ⓜ motion", you tried to select the point before the start point or the same point as the start point. So, the end point could not be selected. Reselect the start point again, then proceed.	P.285
Unable to send all Ir data	All the selected files were output-prohibited from the FOMA phone, so could not be sent.	–
Unable to set	An error occurred, so you could not set.	–
Unable to set auto-update	An error occurred, so you could not set "Set auto-update".	–
Unable to set for storage	There are no unoccupied memory numbers within the folder, so you cannot set.	–
Unable to support this card	The inserted memory card cannot be used on FOMA P905i. Use FOMA P905i compatible microSD memory card.	P.293
Unable to switch audio data	There is only one audio, so you cannot switch.	–
Unable to upgrade	An error occurred, so you could not upgrade.	–
Unable to use B address history	You cannot make a PushTalk call from Number B/Address B while using 2in1. Switch to A Mode or Dual Mode, or make a PushTalk call from Number A/Address A.	
Unable to use PushTalk from call logs of Number B		P.373
Unable to use PushTalk in B mode		
Unable to use this function	The function cannot be operated with the inserted UIM.	–
Unable to write	You cannot write on the microSD memory card because it is write-protected. Use external devices to unlock the protection and try again.	–
Unsupported contents exist	The data that the FOMA phone does not support is contained.	–
Update pattern definitions	An error occurred, so you cannot use Scanning Function. Update the pattern data and try again.	P.441
Updating program	The program of Music&Video Channel is updating, so you cannot download or play it back. Wait a while and try again.	–
URL address is not valid	Received data has an error, so cannot be displayed or saved. The received data is discarded.	–
URL address is not valid (xxx)	Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).	–
Usage is currently restricted Try again later	When a Pake-Houdai/Pake-Houdai Full user communicates a large amount of data within a certain duration, the connection might be restricted for a certain duration. Wait a while and try again.	–

Message	Description	Reference
Using mail folder Cannot delete	Corresponding software program is running. End the software program and try again.	
Using mail folder Cannot download		P.211
Using mail folder Cannot start		
Wait for a while to retry	Currently, it is placed inactive. Wait a while and try again.	–
Wrong PIN1 code	The entered PIN1 code is wrong. Enter the correct one.	P.118
Your HTTP version is not supported (xxx)	Received data has an error, so cannot be displayed or saved. The received data is discarded. A three-digit numeral is displayed for (xxx).	–

Warranty and Maintenance Services

Warranty

- Make sure that you have received a warranty card provided at purchase. After checking the contents of the warranty card as well as “Shop name and date of purchase”, keep the warranty card in a safe place. If you notice that necessary items of the warranty card are not filled in, immediately contact the shop where you purchased the FOMA phone. The term of the warranty is one year from the date of purchase.
- All or part of this product including the accessories may be modified for improvement without notice.
- Data stored in the Phonebook and others might be changed or lost owing to a malfunction, repairs, or other mishandling of your FOMA phone. You are advised to take a note of Phonebook entries and other files in preparation for such incidents. After we repair your FOMA phone, we cannot move, with some exceptions, the information downloaded by using i-mode or i-appli to your repaired FOMA phone because of the copyright law.
 - ※ You can save data files such as Phonebook entries from the FOMA phone to the microSD memory card.
 - ※ From your FOMA phone to the microSD memory card, you can move the data files that i-motion or i-appli uses.
 - ※ You can use Data Security Service (pay service that is available on a subscription basis) to save the data files such as Phonebook entries from the FOMA phone to the Data Storage Center.
 - ※ If you have a personal computer, you can transfer and save the data files from the Phonebook to your personal computer by using the DoCoMo keitai datalink (see page 383) via the FOMA USB Cable with Charge Function 01 (option) or FOMA USB Cable (option).

Maintenance Services

◎ When there is a problem with the FOMA phone

Before asking repairs, check “Troubleshooting” in this manual.

If the problem remains unsolved, contact the “Repairs” counter listed on the back page of this manual for malfunction and consult them.

◎ When repairs are necessitated as a result of consultation:

Bring your FOMA phone to a repair counter specified by DoCoMo. Note that your FOMA phone is accepted for repair during the repair counter’s business hours. Also, make sure that you will bring the warranty card with you to the counter.

■ In warranty period

- Your FOMA phone is repaired charge free in accordance with the terms of warranty.
- Make sure that you bring the warranty card to the counter for the repair. If you do not show the warranty card, or when troubles or malfunctions are regarded to be caused by your mishandling, the repair cost is charged even within the warranty period.
- The cost for troubles caused by the use of devices and consumables other than those specified by DoCoMo is charged even within the warranty period.
- For the damages of liquid crystal display, connector, etc. after purchase, the repair cost is charged.

■ Repairs may not be performed in the following cases:

When wet-detecting sticker is colored; when corrosion due to soaking, dew condensation, or perspiration was found by the test; when the internal parts are damaged or deformed, repair may not be feasible. Even if repair is feasible, repair due to the reasons above is not covered by the warranty, so the repair cost is charged.

■ After the warranty period

We will repair your FOMA phone on request (charges will apply).

■ Spare parts availability period

The minimum storage period of the performance spare parts (parts required for maintaining performance) for the FOMA phone is basically six years after the closure of its production. Note, however, that your FOMA phone might not be repaired depending on the parts because of shortage of the spare parts. Even after the storage period, some FOMA phones can be repaired depending on the troubled portions. Contact the “Repairs” counter listed on the back page of this manual.

◎Other points to note

- Make sure not to modify the FOMA phone or its accessories.
 - Catching fire, giving injury, or causing malfunctions may result.
 - For the repair of devices that the modification is applied to, we accept it if you agree to have the modification reset. Further, we might reject to repair depending on the conditions of the modification.
 The following might be regarded as modifications:
 - To put stickers, etc. onto the liquid crystal display or keys
 - To decorate the FOMA phone using adhesives
 - To replace the coverings etc. with those of other than DoCoMo genuine
 - Repairs of troubles or malfunctions resulting from the modifications are charged even within the warranty period.
- Do not peel the nameplate off the FOMA phone.

The nameplate is a certificate for ensuring the technological standard. If someone intentionally peel off the nameplate or replace it, the contents described in the nameplate cannot be checked, as we cannot verify the conformity of the product to the technical standard. Note that we may refuse repair for some malfunctions in this case.
- The information such as function settings and Total Calls Duration, etc. might be reset depending on troubles or repairs, or the way you handle the FOMA phone. Set the settings again.
- The following parts of the FOMA phone uses the parts generating magnetic field: Note that if you put a card such as cash card liable to be influenced by magnetic field close to it, the card might be adversely affected.

Using parts: speaker, earpiece
- If the FOMA phone gets wet or becomes moist, immediately turn off the power and remove the battery pack; then visit a repair counter. The FOMA phone may not be repaired depending on its condition.

◎Memory dial (Phonebook function) and downloaded information

- It is recommended to take a note of the information you have stored in the FOMA phone and keep it in a safe place. We are not responsible for any change in or loss of information.
- When replacing or repairing your FOMA phone, the data you created, obtained from external devices, or downloaded may be changed or lost. We do not take any responsibility for the loss or change incurred to the data. We may replace your FOMA phone with a new one instead of repairing, for our convenience sake. With this FOMA phone, we move the files including the images and ring melodies downloaded to the FOMA phone or the files you created to the new FOMA phone so far as your existing FOMA phone is troubled or repaired. (We cannot move some files. Also, some files might not be movable depending on the degree of malfunction.)
 - ※It may take a while to move files, or it might occur that moving files is not possible depending on the memory size of the files stored in the FOMA phone.

i-mode Trouble Diagnosis Site

You can check on your FOMA phone whether sending/receiving mail messages, downloading images/melodies, and others are normally working.

- To connect to “i モード故障診断サイト (i-mode Trouble Diagnosis Site)”

i-mode site:

☎ Menu→お知らせ (News)

→サービス・機能 (Services & Functions)


→i モード (i-mode)

→i モード故障診断 (i-mode Trouble Diagnosis) (Japanese only)


- A packet communication fee for connecting to the i-mode Trouble Diagnosis Site is free. (When you access it from overseas, you are charged the fee.)
- The test items differ by model of FOMA phones. Further the test items might be changed.
- When you check operations of your FOMA phone according to each test item, read the cautions on the site thoroughly and then perform the test.
- When you connect to the i-mode Trouble Diagnosis Site and test on sending mail messages, the proper information about your FOMA phone (model name, mail address, etc.) is automatically sent to the server (i-mode Trouble Diagnosis Server). We never use the sent information for other purposes than for the i-mode trouble diagnosis.
- When you think your FOMA phone is in trouble as a result of your check, contact the “Repairs” counter listed on the back page of this manual.



QR code for accessing the site

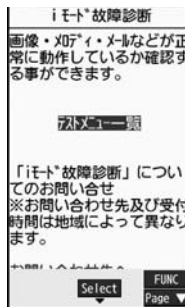

Top display

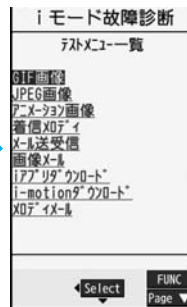

Test Menu List

Updating Software

This function is to check whether you need to update software programs in the FOMA phone by connecting to the network, and if necessary, you can download some parts of software programs using packet communication, and can update the software programs.

※You are not charged a packet communication fee for updating software programs.

If you need to update the software programs, the DoCoMo web page and “お知らせ (News)” in ☰ Menu let you know about it.

“Auto-update”, “Update Now” and “Reserve Update” are available for updating software programs.

[Auto-update] : Automatically downloads new software programs, and updates at the time you specified beforehand.

[Update Now] : If you want to, immediately update.

[Reserve Update] : Reserve the date and time for updating software programs, and they are automatically updated at the reserved date and time.

- Do not remove the battery pack while updating software programs. You may fail to update.
- You can update software programs with the Phonebook entries, images shot by the camera, or downloaded data retained in the FOMA phone; however note that data may not be protected depending on the conditions (such as malfunction, damage, or drench) your FOMA phone is placed in. You are advised to backup important data. Note that some data such as downloaded ones might not be backed up.

■ Before Using Software Update

- You can update software programs even when you set “Host selection” to a user designated destination.
- Fully charge the battery before updating software programs.
- You cannot update software programs in the following cases:
 - When the FOMA phone is off
 - Out of the service area
 - During Self Mode
 - While connecting to external devices such as a personal computer
 - When date and time are not set
 - During PIN1 code lock
 - While using other functions
 - During a call
 - During Omakase Lock
 - When the UIM is not inserted
- It may take time to update (download or rewrite) software programs.
- You cannot make/receive calls, use communication functions, and use other functions while updating software programs. (You can receive voice calls, forward calls or operate Record Message during download.)
- When updating, the FOMA phone is connected to the server (DoCoMo site) using SSL communication. You need to validate the SSL certificate. (Setting at purchase: Valid See page 165 for how to set.)
- It is recommended to update software programs when radio wave is strong enough with the three antennas displayed and while you are not moving.
 - ※ If radio wave conditions get worse while downloading software programs, or download is suspended, move to a place with good radio wave conditions and try again to update software programs.
- If you check Software Update with the software programs already updated, the message “No update is needed Please continue to use as before” is displayed.
- When “Receive option setting” is set to “ON” and mail comes in during software update, the display for notifying you of the arrival of mail may not be displayed after software update is completed.
- When updating software programs, the proper information about your FOMA phone (model name or serial number, etc.) is automatically sent to the server (DoCoMo-managed server for Software Update). We at DoCoMo never use the sent information for other purposes than for updating software programs.
- If you fail to update software programs, “Rewrite failed” is displayed and you cannot do all the operations. In that case, you are kindly requested to come to a repair counter specified by DoCoMo.
- You cannot use Software Update overseas.


Update Software Programs Automatically <Set Auto-update>

You can download new software programs automatically, then the updating is operated at the time you specified beforehand.

When the rewriting state is ready, the “Rewrite notification” icon appears. Then you can confirm the rewrite time and select whether to change the rewrite time or rewrite the program immediately.


- You cannot change “Set auto-update” when the notification icon of software update is displayed on the Stand-by display. In that case, select the notification icon, and clear that icon without confirming whether the software update is required. You are then able to change “Set auto-update”.

1 Set the date/time of updating.

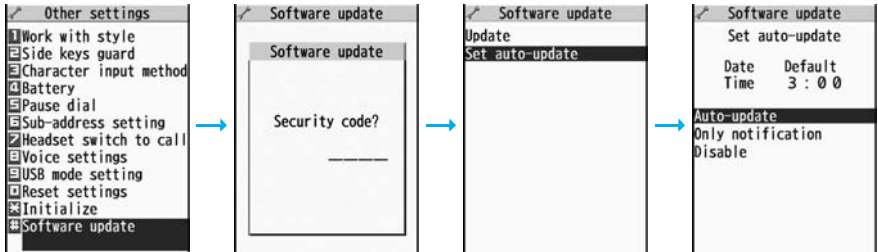

2 Select the “Rewrite notification” icon on the Stand-by display, and select “OK”, “Change time” or “Now rewrite”.

- ※ The “Rewrite notification” icon notifies you that rewriting starts at the set time. (It is cleared when you check it.)

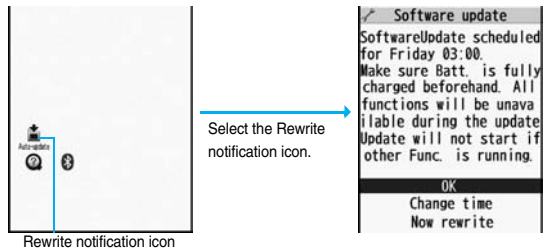


When you select “OK”

- ※ After you select it, the Stand-by display returns, and then rewriting starts at the set time.




When you select “Change time”

You can set day of a week and time for rewriting.

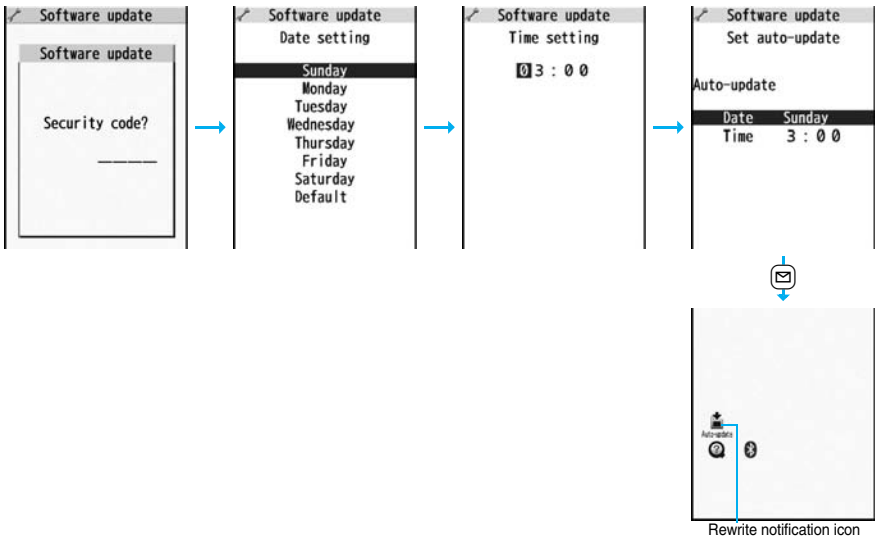

When you select “Now rewrite”

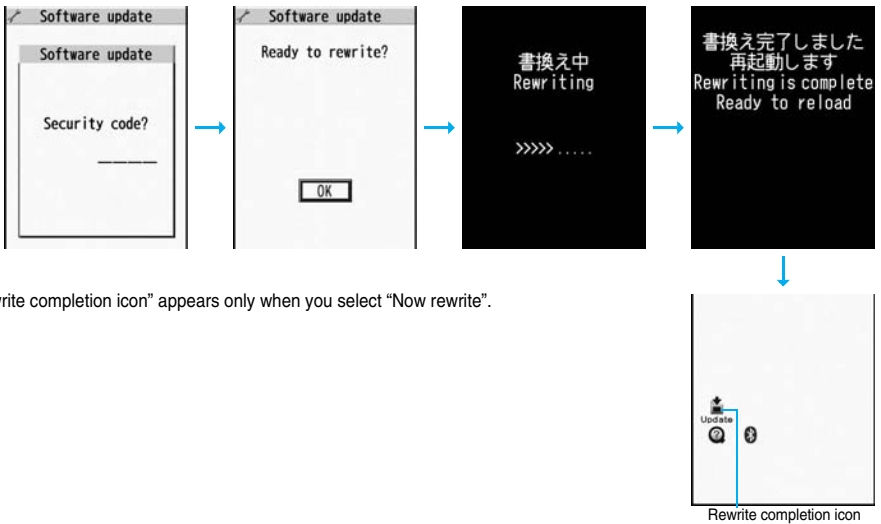

※“Rewrite completion icon” appears only when you select “Now rewrite”.

Start Software Update


If you select “Only notification” of “Set auto-update”, “Update notification icon” notifies you when software update is necessary.

You can start Software Update by selecting “Update notification icon”, or from the Menu display.

Start Software Update by Selecting “Update notification Icon”


1 Select “Update notification icon” on the Stand-by display.

- If you select “No”, the confirmation display appears asking whether to delete the notification icon.
- “Update notification icon” appears in the following cases:
 - When notification is provided by DoCoMo
 - When “Update is needed” is displayed in step 3 on page 437
 - When you fail to update software programs during updating in Reserve Update
 - When you cancel the reservation for the software update

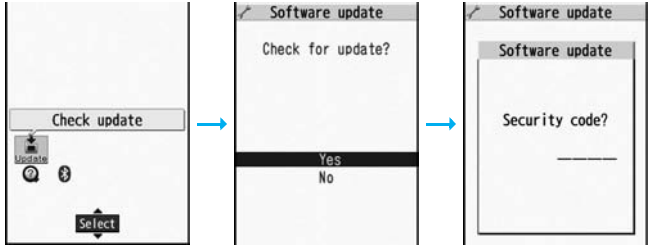

2 Check whether the software programs need to be updated.

- You can answer voice calls during check.

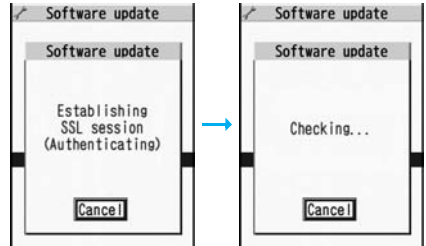

3 When updating is not necessary, “No update is needed” is displayed. Use the FOMA phone as it is. When updating is necessary, “Update is needed” is displayed. You can select either “Now update” or “Reserve”.




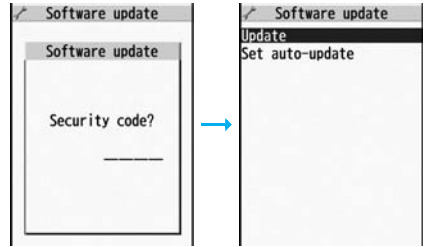
Software Update display

※When updating is not necessary

※The display for when the software update is unavailable because of the server congestion. (Wait for a while and then start the software update again.)

Start Software Update from Menu

- 1  Settings ▶ Other settings ▶ Software update
▶ Enter your Terminal Security Code ▶ Update




- 2 Go to step 2 on page 437.

Update Software Now (Update Now)

- 1 When you select “Now update”, “Start download” is displayed and downloading starts after a while. (Select “OK” to start downloading right now.)

- You can answer voice calls during download.
- If you cancel downloading midway, the data downloaded up to that point is deleted.
- Once downloading starts, updating proceeds automatically; you do not need to select menu items.

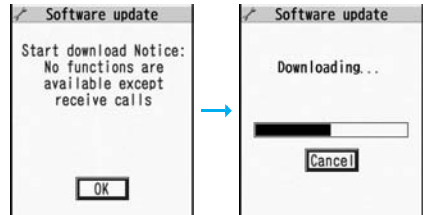

- 2 When downloading is completed, rewriting the software programs starts. (Select “OK” to start rewriting right now.)

When rewriting is completed, your FOMA phone automatically restarts.

- It may take a while to start rewriting.
- You cannot even answer calls while rewriting.



※While rewriting the software programs, all key operations are disabled. You cannot even stop updating.
Also, charging temporarily stops even if the AC adapter (option) is connected.

3 After confirming the update completion, select “OK”.




Reserve Date and Time for Updating Software (Reserve Update)

When downloading takes time or the server is busy, you can set in advance the date and time for starting the software update by communicating with the server.

1 Select “Reserve” from the Software Update display.

The date and time which can be reserved are displayed.

- The server's time table appears for the software update reservation.

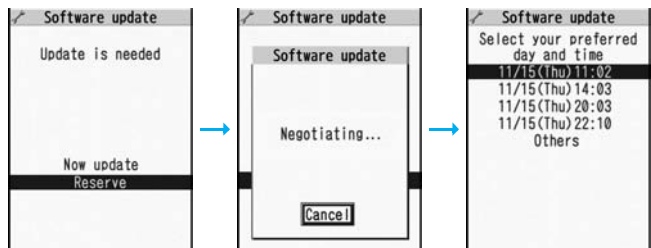


When you select “Others”

After communicating with the server, you can select the date and time you want. The availability of each time zone is displayed on the time selection display as follows:

○: Available, △: Almost full, ×: Not available

When you select one time zone you want, you can communicate with the server again to display candidates for reserving time.


2 Confirm the date and time you selected. Select “YES”. Your FOMA phone communicates with the server again and then the reservation is completed.

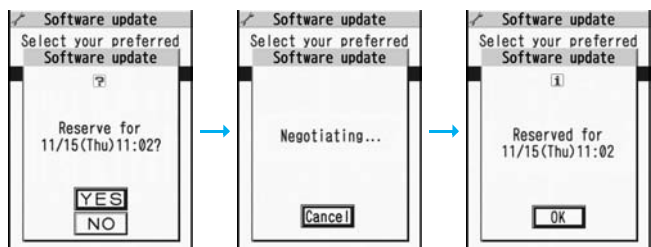

■ When the reserved time comes

The display on the right appears and about five seconds later the software update starts automatically.

Before the reserved time, fully charge the battery pack, place the FOMA phone with the Stand-by display shown in a place within reach of radio wave.

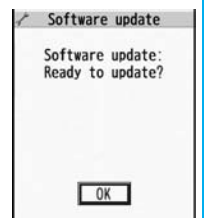


Information

- Note that updating may not start even when the reserved time arrives if you are using another function.
- The software update may not be started if an alarm is activated.
- If you execute "Initialize" on page 354 after completing the reservation, the software update does not start even when the reserved time arrives. Make a reservation for the software update again.

Check, Change, or Cancel the Reserved Date and Time

Select "Software update" from the setting menu, then enter your Terminal Security Code and select "Update"; then you can confirm the reserved time.

You can change or cancel the reserved date and time from the display for checking reservation. To change, select "Change". To cancel, select "Cancel".

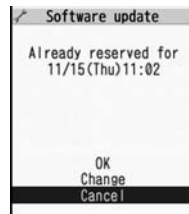

End Software Update

If you select "NO" or "Cancel" from each display, the display for ending the operation appears.

Select "YES"; then the software update ends and the Stand-by display returns. To return to the previous display, select "NO".

Information

- If the battery level points "⚡" during operation, the software rewriting is not done and the operation ends.

<Scanning Function>

Protecting FOMA Phone from Data Causing Failure

First of all, update the pattern data to make it the latest.

Regarding data and programs downloaded or obtained from sites, i-mode mail messages or SMS messages to the FOMA phone, you can detect data that might cause failure, can delete it, and can stop starting an application program.

- Use the pattern data for checking. Update the pattern data, because it is upgraded each time new trouble is found. (See page 441)
- The scan function is for filtering out the data that causes failure to mobile phones at the time of browsing web pages or receiving mail messages. Note that this function works only when the pattern data for each failure has been downloaded to your mobile phone and when the pattern data for each failure is found.
- The data contained in the pattern data varies depending on the mobile phone model. Therefore, note that we may stop distributing the pattern data to mobile phones that have been on the market for three years or more.

Set Scanning Function <Set Scan>

If you set "Scan" to "Valid", data or a program can be automatically checked when you try to run it.

In addition, if you set "Message scan" to "Valid", a received SMS message can be automatically checked when you display it.

1  Settings ▶ Lock/Security ▶ Scanning function ▶ Set scan ▶ Select an item.

Scan Sets whether to run the scanning function.

Message scan . . . Sets whether to run the scanning function when displaying an SMS message.

- While "Scan" is set to "Invalid", you cannot set "Message scan".

2 Valid or Invalid ▶ YES

- When the scan function is set, an alert is shown by five levels if data that might cause failure is detected. (See page 442)

Information

- The scanning is not available for the SMS message which notifies you of receiving mopera mail or of incoming calls for Voice Mail Service.

Update Pattern Data <Update>

1 Settings ▶ Lock/Security ▶ Scanning function ▶ Update ▶ YES ▶ YES

- To cancel during i-mode connection, select "Cancel".

2 OK

- When pattern data update is not necessary, "Pattern definitions are up-to-date" is displayed. Use the pattern data as it is.



Information

- When updating the pattern data, the proper information about your FOMA phone (model name, serial number, etc.) is automatically sent to the server (DoCoMo-managed server for the scanning function). We at DoCoMo never use the sent information for other purposes than for the scanning function.
- Set the date (year/month/date) for the FOMA phone correctly in advance.
- The pattern data is not updated in the following cases:
 - When the date/time is not set
 - During a call
 - Out of the service area
 - When the UIM is not inserted
 - During Lock All
 - While another function is working
 - When connecting to external devices such as personal computers
 - While Self Mode is activated
- If you cancel downloading midway, the data downloaded up to that point is deleted.

Update Pattern Data Automatically <Set Auto-update>




You can set whether to update the pattern data inside your FOMA phone when the pattern data is created anew.

1 Settings ▶ Lock/Security ▶ Scanning function ▶ Set auto-update ▶ ON or OFF

2 YES ▶ OK

- When you select "ON" in step 1, the confirmation display appears telling that your mobile phone information is sent at auto-update.
- To cancel during i-mode connection, select "Cancel".

Information


- When setting auto-update or updating automatically, the proper information about your FOMA phone (model name, serial number, etc.) is automatically sent to the server (DoCoMo-managed server for the scanning function). We at DoCoMo never use the sent information for other purposes than for the scanning function.
- When auto-update is completed, the notification icon of " " (Update completed) appears on the Stand-by display. If it is failed, " " (Pattern update failed) appears. Select " " to display the update result.

Displays for Scanning Result

About the display for scanned problem elements

A warning display appears when problematic data is found. Select “Detail” from the warning display to bring up the name of the problem element.

- When six or more problem elements are found, the sixth and later problem element names are omitted.
- “Detail” might not appear depending on the detected problem element.

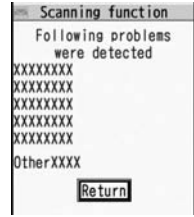


The displays for scanning result

Alert level 0	Alert level 1	Alert level 2
OK..... Continues the operation.	YES....Stops and ends the operation. NOContinues the operation.	OKStops and ends the operation.
Alert level 3	Alert level 4	
YES... Deletes the data and ends the operation. NO..... Stops and ends the operation.	OK.....Deletes the data and ends the operation.	

- The alert displays for when displaying i-mode mail messages or SMS messages may differ from the ones above.

Check Pattern Data Version <Version>

- Settings ▶ Lock/Security ▶ Scanning function ▶ Version**

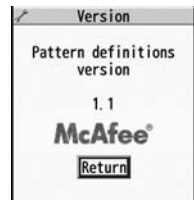

Specifications

Model		FOMA P905i	
Dimensions (when closed)		Height: 106 mm Width: 49 mm Depth: 18.5 mm	
Weight (with the battery pack attached)		Approx. 137 g	
Continuous standby time	FOMA/3G network	Switch 3G/GSM [3G]	In motion: Approx. 410 hours
		Switch 3G/GSM [Auto]	In motion: Approx. 400 hours Standstill: Approx. 580 hours
	GSM network	Switch 3G/GSM [Auto]	Standstill: Approx. 260 hours
Continuous talk time	FOMA/3G network		Voice call: Approx. 200 minutes Videophone call: Approx. 110 minutes
	GSM network		Voice call: Approx. 190 minutes
One Seg watching time		Approx. 270 minutes (in ECO Mode: Approx 400 minutes)	
Charging time		AC adapter: Approx. 130 minutes DC adapter: Approx. 130 minutes	
LCD	Type	Display: TFT 262,144 colors Private window: Organic EL one color	
	Size	Display: Approx. 3.0 inches Private window: Approx. 0.8 inches	
	Number of pixels	Display: 409,920 pixels (480 dots x 854 dots) Private window: 2,400 pixels (96 dots x 25 dots)	
Image pickup device	Type	Inside camera: CMOS	Outside camera: CMOS
	Size	Inside camera: 1/8.0 inches	Outside camera: 1/2.8 inches
Camera	Number of effective pixels	Inside camera: Approx. 330,000 pixels Outside camera: Approx. 5,100,000 pixels	
	Number of recording pixels (maximum)	Inside camera: Approx. 310,000 pixels Outside camera: Approx. 5,000,000 pixels	
	Zooming (digital)	Inside camera: Approx. 5.0 times max. Outside camera: Approx. 15.1 times max.	
Recording	Number of recordable still images	Approx. 3,500 (When stored in the FOMA phone) ^{※1}	
	Number of still images for continuous shooting	VGA: 4 CIF: 4 QVGA: 5 through 10	
	Still image file format	QCIF: 5 through 20 Sub-QCIF: 5 through 20	
	Moving image recording time	Phone: Approx. 497 seconds ^{※2} microSD memory card (64MB): Approx. 137 minutes ^{※3}	
	Moving image file format	Phone: MP4 microSD memory card: ASF	
Music playback	Continuous playback time ^{※4}	SD-Audio file (supports Play Background): Approx. 4,560 minutes ^{※5} Chaku-uta Full [®] music file (supports Play Background): Approx. 4,150 minutes ^{※5} i-motion movie (including Chaku-uta [®] music file): Approx. 890 minutes ^{※5} WMA file (supports Play Background): Approx. 3,240 minutes Music&Video Channel program (supports Play Background) Music: Approx. 4,150 minutes Video: Approx. 250 minutes	
Memory capacity	Chaku-uta[®]	Approx. 101.6 Mbytes ^{※6}	
	Chaku-uta Full[®]		

※1: Image size: Sub-QCIF (128 x 96), Image quality: Normal, File size: 10 Kbytes

※2: The maximum recording time per moving image which can be saved to the FOMA phone with the following conditions:
Image size: Sub-QCIF (128 x 96), File size restriction: Mail restriction (L), Image quality: Normal, Type: Video + voice

※3: The maximum recording time per moving image which can be saved to the microSD memory card with the following conditions:
Image size: Sub-QCIF (128 x 96), File size restriction: Long time, Image quality: Normal, Type: Video + voice

※4: The continuous playback time is the estimated time that the FOMA phone can play back using the Flat-plug Stereo Earphone Set P01 (option) with the FOMA phone closed.

※5: File format: AAC

※6: Shares with still images, i-motion movies, melodies, PDF files, Music&Video Channel programs, Kisekae Tool files, ToruCa files, and i-appli programs.

Number of Savable/Storable/Protectable Items in FOMA Phone

		Number of savable/storable items	Number of protectable items	Reference page
Phonebook		1,000※1	—	P.84
One Seg	TVlink	50	—	P.251
	Book program	100	—	P.253
	Timer recording	100	—	P.253
Schedule	Schedule	1,000	—	P.337
	Holiday	100	—	P.338
	Anniversary	100	—	P.338
ToDo		100	—	P.340
Text memo		20	—	P.345
Mail (total of SMS messages and i-mode mail)	Received mail	2,500 max. ※2, ※3, ※4	2,500 max. ※2	P.186
	Sent mail	1,000 max. ※2, ※4, ※5	1,000 max. ※2	P.186
	Draft mail※6	20 max. ※2	—	P.186
	User created folder (Inbox)	22	—	P.191
	User created folder (Outbox)	22	—	P.191
Area mail		30	—	P.186
Template		100 max. ※2, ※7	—	P.178
Message	Message R	100 max. ※2	50 max. ※2	P.201
	Message F	100 max. ※2	50 max. ※2	P.201
Bookmark (i-mode)	Bookmark	100	—	P.157
	Bookmark folder	10 (incl. "Bookmark")	—	P.157
Bookmark (Full Browser)	Bookmark	100	—	P.157
	Bookmark folder	10 (incl. "Bookmark")	—	P.157
Screen memo	Screen memo	100 max. ※2	50 max. ※2	P.158
	Screen memo folder	10 (incl. "Screen memo")	—	P.159
Still image		3,500 max. ※2, ※8, ※10	—	P.274
	User created folder	20	—	P.302
Moving image/i-motion movie		3,500 max. ※2, ※9, ※10	—	P.280
	User created folder	20	—	P.302
Melody		3,500 max. ※2, ※9, ※10	—	P.290
	User created folder	20	—	P.302
Chara-den		3※7	—	P.288
PDF file		3,500 max. ※2, ※10	—	P.307
Music&Video Channel	Downloaded program	2	—	P.317
	Saved program	10 max. ※2, ※10	—	P.317
Kisekai Tool		3,500 max. ※2, ※9, ※10	—	P.292
ToruCa		495 max. ※2, ※10	—	P.225
	User created folder	20	—	P.226
i-oppli		100 max. ※2, ※10	—	P.210
	Mail-linked i-oppli	5	—	P.210

※1: Up to 50 Phonebook entries can be stored on the UIM.

※2: The number of savable, storable, or protectable items may decrease depending on the data volume.

※3: Includes mail in the "Chat" folder, "Trash box" folder and the i-oppli mail folder.

※4: In addition, a total of 20 received and sent SMS messages can be saved to the UIM. (See page 345)

※5: Includes mail in the "Chat" folder and the i-oppli mail folder.

※6: Can save unsent mail you are composing.

※7: Includes pre-installed data.

※8: Among pre-installed data, only the Deco-mail-pictographs are included as the savable/storable items.

※9: Does not include pre-installed data.

※10: Still images, i-motion movies, melodies, PDF files, music files, Music&Video Channel programs, Kisekai Tool files, ToruCa files, and i-oppli programs share the number of savable/storable items and memory space.

SAR Certification Information and Other Information

SAR Certification Information

This model phone FOMA P905i meets the MIC's* technical regulation for exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)** averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP***.

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone is 0.345 W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the following web pages:

World Health Organization (WHO)	http://www.who.int/peh-emf/
ICNIRP	http://www.icnirp.de/
MIC	http://www.tele.soumu.go.jp/e/ele/body/index.htm
TELEC	http://www.telec.or.jp/ENG/Index_e.htm
NTT DoCoMo	http://www.nttdocomo.co.jp/english/product/
Panasonic Mobile Communications Co., Ltd.	http://panasonic.jp/mobile/ (Japanese only)

* Ministry of Internal Affairs and Communications

** The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

*** International Commission on Non-Ionizing Radiation Protection

European RF Exposure Information

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was 0.513 W/kg.**

While there may be differences between the SAR* levels of various phones and at various positions, they all meet* the EU requirements for RF exposure.**

* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

***Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Declaration of Conformity

The product "FOMA P905i" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on <http://panasonic.co.jp/pmc/products/en/support/index.html>.

※The European RTTE approval of this product is limited to the use of the P905i handset, Battery Pack and FOMA AC Adapter for Global use (100 to 240 V AC) only. Other accessories are not part of the approval.

FCC Notice

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.456 W/kg, and when worn on the body, is 0.323 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at <http://www.fcc.gov/oet/fccid> after search on FCC ID UCE207002A.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

* In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

Important Safety Information

AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices:

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration Regulations

This product and its accessories follow the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). To export this product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry.



Index/Quick Manual



Index	450
Quick Manual	458

How to refer to Index

- The Index contains the terms and terminologies summarizing the descriptive contents by sorting in alphabetical order. If you cannot find the term or terminology you want to know, search for it using a different term or terminology.

<Example: To set the i-oppli Stand-by display using “Software setting” on i-oppli>

Software setting	213	Specifications	443	i-oppli mail	211
Change melody/image	213	Speech translation for P	217	i-oppli settings	220
Icon info	213	SSL certificate	165	i-oppli stand-by display	104, 221
Location usage	213	Stand-by display	44	i-oppli to function	163
Network set	213	Stand-by set (i-oppli)	221	IC card	224
Program guide key	213	Status in the area	391	IC card content	212
See phonebook/history	213	Still image	274	IC card list	212
Stand-by net	222	Still image list	274	IC card lock	230
Stand-by set	221	Still image shoot	139	IC lock (power-off)	230

◆◆◆ A ◆◆◆

αBacklight	220
AC adapter	43
Accept dialup devices	351
Accept registered (Bluetooth)	351
Access authentication	381
Access setting	263
Accessories	22
Action list	69, 289
Activate TV with alarm	253
Activating 1Seg	247
Add desktop icon	114
Add member (PushTalk)	77
Add to a phonebook entry	87
Add to phonebook (Phone)	84, 87
Add to phonebook (UIM)	84, 87
Additional service	378
Additional guidance	378
Address link function	164
Alarm	335
Alarm setting	341
Answer setting	62
Antenna	25
Any key answer	62
αPower saver	220
Area mail	202
Area mail settings	202
Arrival call act	370
AT command	383
Attach bookmarks	180
Attach document files	180
Attach i-motion movies	179
Attach melodies	179
Attach PDF files	180
Attach phonebook entries	180
Attach pictures	179
Attach schedule events	180
Attach SD other files	180
Attach ToDo items	180
Attach ToruCa files	179
Attachment preference	199
Attachments	179, 184

Auto answer setting	347
Auto answer setting (PushTalk)	81
Auto assist setting	58
Auto channel setting	245
Auto color label	198
Auto melody play	199
Auto power on/off	335
Auto reading	230
Auto save set	144
Auto start info	221
Auto start setting	221
Auto start time	221
Auto timer	146
Auto voice dial	95
Auto volume (One Seg)	256
Auto volume (Video)	287
Auto-display	200
Autofocus	143
Auto-sort (Mail)	196
Auto-sort (ToruCa)	227
Auto-sort setting display	196
AV output	312
AV phone to function	163
αVibrator	221

◆◆◆ B ◆◆◆

Back cover	25
Backlight	107
Bar code reader	146
Bar code reader list	148
Battery level	44
Battery pack	41
Attaching/removing	41
Charging	42
Charging time	42
Usable time	42
Bluetooth	348
Bluetooth info	354
Bluetooth power off	351
Bluetooth settings	353
Bluetooth usage flow	349

Book program	253
Bookmark	157
Bookmark (PDF)	309
Add bookmark	308
Bookmark folder list	157
Bookmark list	157
Brightness	71, 124, 143, 249, 279
Broadcasting storage area	244

◆◆◆ C ◆◆◆

Cache	153
Calculator	345
Calendar	104, 337
Calendar display	338
Call acceptance	127
Call barring	392
Call/charging indicator	25
Call data	343
Call forwarding	367, 392
Call rejection	62, 127
Call setting without ID	128
Call waiting	366
Answer an incoming call during a call	366
Continue the current call	366
End a call to answer another call	366
End a call to answer the held call	367
End a held call	367
Hold a call to make a new call	366
Caller ID notification	47
Caller ID request	369, 392
Camera	132
Number of storable still images	136
Recordable time	137
Specifications for moving image shooting	137
Specifications for still image shooting	136
Camera menu	139, 141
Caption (One Seg)	256
Caption (Video)	288
Capture screen	309
Category list	294
Certificate	165

◆◆◆ N ◆◆◆

Navigation displays	27
NEGA/POSI mode	150
Network search mode	390
Network security code	118
Network services	363
Night mode	71
Noise reduction	59
Normal style	26
Notice call cost	344
Notification icon	67, 112
Notify caller ID	47
Notify of location	238
Notify switchable mode	72
No. of phonebook	91
Nuisance call blocking	368
Number of entered characters	357
Number of protectable items	444
Number of remaining characters	357
Number of savable items	444
Number of storable items	444
Numeric keys	25

◆◆◆ O ◆◆◆

Obtain i-motion movie	168
Obtain ToruCa files	226
Obtaining completion display (Chaku-uta full [®])	321
Obtaining completion display (Chara-den)	162
Obtaining completion display (Download dictionary)	162
Obtaining completion display (i-motion)	168
Obtaining completion display (Kisekae tool)	161
Obtaining completion display (Melody)	160
Obtaining completion display (PC movie)	265
Obtaining completion display (Template)	161
Obtaining completion display (ToruCa)	161
OFFICEED	378
Omakase lock	120
On hold	64
One Seg	244
One Seg antenna	25, 245
One-push open	26
One-push open button	25
Operation mode	261
Operations during manner mode	103
Operator name display	391
Options	22, 421
Original	104
Original animation	280
Original animation list	280
OsaiFu-Keitai	224
OsaiFu-Keitai compatible i-oppli	224
Other ID list	73
Outbox	186

Outbox folder list	186, 189
Outbox list	186, 189
Out-of-service-area indication	28, 44
Outside camera	25, 133
Own dictionary	361
Own number	48, 71, 342
Own number display	48, 342

◆◆◆ P ◆◆◆

Packet communication	380
Page info	262
Page info on/off	309
Page layout	309
Palette	176
Passwords	118
Paste	361
Pause dial	57
PC mode	261
PC movie	265
PC movie auto-play	263
PC movie folder list	266
PC movie list	266
PC movie player	266
PC movie type selection display	266
PDF	307
PDF file list	307
PDF viewer	307
Perform remote monitoring	74
Permission schedule	240
Personal data lock	121
Personal information	342
Phone mode	261
Phone to function	163
Phonebook	84
Phonebook image sending	95
Phonebook list	90
Photo auto display	199
Photo light	25, 70, 143
Photo mode	139, 144
Photo-sending	181
Pictograph list	415
Picture	276
Picture info	274
Picture viewer	274
PIM/IC security mode	122
PIN1 code	118
PIN1 code entry set	119
PIN2 code	118
Play background	248, 317, 320, 325, 443
Play/erase messages	68
Play/erase videophone messages	69
Play mode setting (MUSIC player)	327
Play mode setting (Music&Video channel)	319
Played history list	268
Player menu display	323
Playing back record messages	68
Playlist (i-motion)	284
Play back playlist	284

Store playlist	284
Playlist (Melody)	290
Edit playlist	302
Play back playlist	290
Playlist (MUSIC player)	329
Create playlist	329
Play back playlist	330
Playlist list (i-motion)	284
Playlist list (MUSIC player)	329
PLMN setting	391
Point ring tone	327
Portrait rights	20, 131
Position location	232
Position memory (i-motion)	281
Position memory	283
Position memory (PC movie)	268
Position memory	268, 269
Position memory (Video)	286
Position memory	287
Positioning	275
Positioning mode	239
Positioning tone/illumination	239
Post view display	139, 140, 141
Power on/off	44
Power saver mode	107
Prediction conversion at reply	198
Prefer Chaku-moji	56
Preferred device	351
Preferred tone	220
Prefix setting	59
Preparation flow for data communication	382
Priority	254
Priority order	
Alarm	255, 336
Answer message	68
Auto-sort	196
Call receiving image	105, 106
Illumination	111
Nuisance call prevention	130
Ring tone	98, 99
Substitute image	69, 70
Vibrator	100
Private menu	341
Private menu list	341
Private menu setting	341
Private window	25, 28, 30, 106
Program folder list	317
Program guide i-oppli	250
Program info	248, 319
Program list	317
Protect (Bluetooth)	351
Protect on (Mail)	192
Protect on (MessageR/F)	201
Protect on (Screen memo)	159
Provide location	237
Public mode (Drive mode)	65
Public mode (Power off)	66
PUK (PIN unblock code)	119
Pull down menu	154
PushTalk	76
PushTalk arrival act	81
PushTalk group list	79

PushTalk phonebook list	79
PushTalkPlus	76
PuyoPuyon & COLUMNS	215

◆◆◆ Q ◆◆◆

QR code	147
Quality alarm	101
Quick manual	458
Quick record message	68
Quick silent	62
Quotation marks	199

◆◆◆ R ◆◆◆


Radio button	154
Radio waves reception level	28
Rakuoku exhibition application 2	218
Read a map	232, 238
Read aloud output	334
Read aloud settings	333
Read aloud speed	334
Read aloud valid setting	334
Read aloud volume	333
Reading aloud	333
Reason for no caller ID	128
Receive mail/call at open	106
Receive option	183
Receive option setting	183
Receive ToruCa	230
Received address	195
Received address list	195
Received call list	54
Received calls	53
Receiving a call	60
Receiving a call (International roaming)	390
Receiving a PushTalk call	78
Receiving a videophone call	60
Receiving a videophone call (International roaming)	390
Receiving display (Mail)	199
Receiving display (ToruCa)	230
Reception result display	182, 202, 207
Recharge battery display	44
Recognition mode	150
Recognition-failed image	124
Recommend channel mail	249
Reconnect signal	59
Record Chara-den	289
Record display set	125
Record message list	68
Record message setting	67
Record still images	253
Record video	252
Record voice memo	343
Record when low battery	256
Recorded file restriction	289
Recording result	256
Redial	53

Redial list	53
Referer	264
Referer setting	264
Register Bluetooth device	350
Register LCS client	239
Reject unknown	129
Related equipment	421
Releasing PIN lock	119
Reload	155, 262
Reload contents	249
Remaster (i-motion)	283
Remaster (MUSIC player)	328
Remaster (Music&Video channel)	320
Remaster (One Seg)	256
Remaster (PC movie)	269
Remaster (Video)	287
Remote control	371, 392
Remote control number	246
Remote monitoring	73
Reserve update	439
Reset channel setting	257
Reset last URL	155, 263
Reset learned words	361
Reset settings	257, 354
Reset storage area	257
Reset total cost&duration	344
Reset TV settings	257
Restrict dialing	127
Restrictions	127
Retouch	279
Ridge racers mobile	214
Ring time	128
Ring time setting (PushTalk)	81
Ring volume	64
Roaming guidance	392
Rotate	279
◆◆◆ S ◆◆◆	
"S" icons	64
SAR	445
Save an i-motion movie	168
Scanned code result display	147
Scanned text confirmation display	149
Scanned text result display	149
Scanning code display	147
Scanning function	440
Scanning result	442
Scanning text display	149
Schedule	337
Schedule list	339
Screen memo	158
Screen memo folder list	158
Screen memo list	158
Script setting	263
Scroll	34, 164, 198, 263
Scroll selection	31
SD-Audio	322
SD other file list	298
SD other files	298

SD-PIM	294
Search by i-mode	162
Search by voice	37
Search phonebook	89
Search phonebook display	89
Secret code	93
Secret data only	126
Secret mail display	126
Secret mode	126
Security error	212
Security scan function (Scanning function)	440
Security settings	117, 130
Select area	246
Select image	71, 72
Select language	45
Select ring tone	98
Select storage	227, 268, 302, 327
Selecting multiple items	35
Self mode	121
Send DTMF tone	71
Send substitute images	70
Sent address	195
Sent address list	195
Sent/received phonebook data list	95
Serial number of mobile phones/UIMs	154
Service numbers	370
Service selection display	350
Service settings	239
Services available overseas	386
Services available with FOMA phones	420
Session number setting (Bluetooth)	353
Set as ring tone (Chaku-uta full®)	327
Set as ring tone (Melody)	291
Set as stand-by (Camera)	142
Set authentications (Bluetooth)	353
Set auto-update (Scanning function)	441
Set auto-update (Software update)	435
Set check new message	199
Set connection timeout	164
Set display	140, 274
Set hold tone	65
Set appli to	213
Set image display	164, 263
Set motion	282
Set in-call arrival act	371
Set roaming guidance	391
Set scan	440
Set time	46
Setting when folded	63
Setting when opened	63
Shoot with frame	144
Shot interval	144
Shot number	145
Shutter sound	144
Side keys guard	125
Signature	199
Simple menu	35
Site display for the FirstPass center	166
Slideshow	275

Smiley	357, 417
SMS	206
Compose	206
Forward	184
Receive	207
Reply	184
Save	207
Send	206
SMS center selection	208
SMS composition display	206
SMS input character	208
SMS report request	208
SMS settings	208
SMS validity period	208
Software for playing back moving images	421
Software info	213
Software list	211
Software setting	213
Change melody/image	213
Icon info	213
Location usage	213
Network set	213
Program guide key	213
See phonebook/history	213
Stand-by net	222
Stand-by set	221
View ToruCa	213
Software update	434
Software update display	437
Sound effect setting	164, 257
Speakers	25
Specific absorption rate	445
Specifications	443
Speech translation for P	217
SSL certificate	165
Stand-by display	44
Stand-by set (-appli)	221
Status in the area	391
Still image	274
Still image list	274
Still image shoot	139
Store in	144
Store in PushTalk phonebook	79
Styles	26
Sub-address setting	59
Substitute image	69, 70
Substitute image answering	61
Summer time	47
Super silent	104
Switch audio data	249
Switch cameras	70, 143
Switch display	248
Switch image display positions	70
Switch TV/data BC	248
Switch 3G/GSM	390
Symbol candidate list	415
Symbol list	413

◆◆◆ T ◆◆◆

Template	178
Template list	178
Terminal security code	118
Text box	154
Text memo	345
Text memo info	345
Text reader	149
Text reader list	150
Ticker on/off	170
Time-out to search (Bluetooth)	353
Timer lock at close	122
Timer lock on at close	122
Timer recording	253
Title name	276
ToDo	340
ToruCa	225
ToruCa file list	226, 228
ToruCa folder list	226
ToruCa settings	230
ToruCa viewer	226
Total calls	344
Total calls duration	344
Trace info	212
Trademarks	20
Trim away	279
Trim for mail	285
Trim for picture	285
Trim  motion	285
Troubleshooting	422
Tune service	249
TV sound while closed	256
TVlink	251
TVlink list	251
Two-touch dial	93
Type list	323

◆◆◆ U ◆◆◆

UIM (FOMA card)	38
Differences	40
Insert/remove	38
UIM operation	345
UIM restrictions	39
UIM setting	119
Update (Pattern data)	441
Update now	438
Update ToruCa	229
Upload	262
URL history	156
URL history list	156
USB mode setting	300
Use phone information	164
User authentication	381
User certificate	165
Request issue/download	166
Request revocation	167
User settings	256
Uta-hodai	321

◆◆◆ V ◆◆◆

"V" icons	100
Version	442
Vibrator	100
Video	286
Video list	286
Video player	286
Videophone record message list	69
Videophone settings	71
Videophone while packet	72
Viewer display	247
Visual preference	71
Voice announce	100
Voice call auto redial	72
Voice dial	93
Voice dial setting	93
Voice earphone dial	95
Voice mail	364, 392
Voice memo	343
Voice memo during a call	343
Voice settings	95

◆◆◆ W ◆◆◆

Wake-up display	105
Warranty	432
Web mail	208
Web to function	163
White balance	71, 143
Window open guard	263
WMA file	322
WMA list	324
Work with style	26
WORLD CALL	57
World time watch	47
WORLD WING	386

◆◆◆ Z ◆◆◆

Zoom	70, 142, 263
Zoom in	308, 311
Zoom out	308, 311

◆◆◆ Numerics ◆◆◆

184	48
186	48
2in1	372
3D sound	99
3G network	386
3GPP	50
3G-324M	50
64K data communication	380

Quick Manual

How to Use Quick Manual


Cut out Quick Manual interleaved into this manual along the cutout line, and then fold it as shown below:
Take Quick Manual "For Overseas Use" with you for using an international roaming service (WORLD WING) overseas.

How to cut

Cut out Quick Manual along the cutout line.

You can place a ruler on the cutout line and cut as illustrated below.


- Be careful not to cut yourself when using scissors.

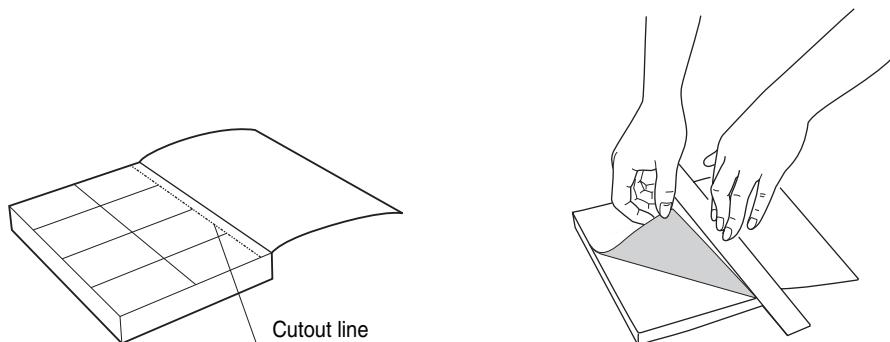

How to fold

Fold Quick Manual along the dotted line so that the cover faces upwards as illustrated below.

- Fold the second sheet of Quick Manual so that "Function List" (page 16) will be the cover.

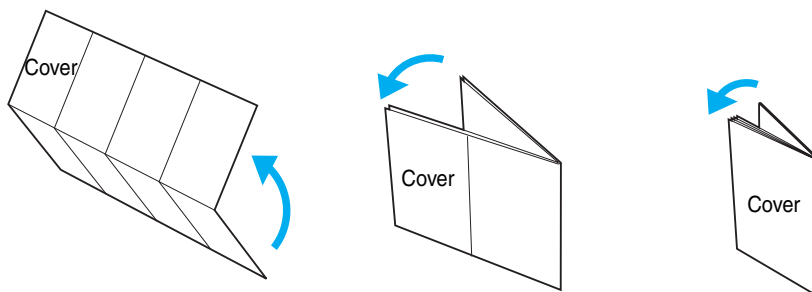

Quick Manual

General Inquiries > DoCoMo Information Center >

(In English)

☎ 0120-005-250 (toll free)

- Can be called from mobile phones and PHSs.

(In Japanese only)

(No prefix) 151 (toll free)

- Can be called only from DoCoMo mobile phones and PHSs.

Repairs

(In Japanese only)

(No prefix) 113 (toll free)

- Can be called only from DoCoMo mobile phones and PHSs.

(In Japanese only)

☎ 0120-800-000 (toll free)

- Can be called from mobile phones and PHSs.

- Please confirm the phone number before you dial.

- For further information, refer to the "Nationwide Service Station List" included with your FOMA terminal and other devices.



Character Entry

Character Entry Display

Character Entry Mode

- abc... Alphabets
- 123... Numerals
- 漢... Kanji/Hiragana
- ひ... Katakana

4

Storing in Phonebook (FOMA Phone)

☎ (for at least one second) → Phone

Enter a name.

R → Edit a reading.

GR <Group> → Select a group.

☎ <Phone number> → Enter a phone number
→ Select an icon. (up to four numbers)

✉ <Mail address> → Enter a mail address
→ Select an icon. (up to three addresses)

📍 <Address> → Enter a zip code

→ Enter a postal address.

1

Selecting Character Input Method

☰ → Settings → Other settings

→ Character Input method → Input mode →

Put a check mark for Mode 1 (5-touch)

Put a check mark for Mode 2 (2-touch)

Put a check mark for Mode 3 (Mix/On-touch)

→ **☑** → Select the mode you use with priority.

Entering "a" and "A"

→ Enter a character → Press **✕** several times.

Entering "、" and "。"

Press **☞** several times.

Switching "Alphabet" (abc), "Numerals" (123),
"Kanji/Hiragana" (漢), and "Katakana" (ひ)

Press **☑** several times.

5

<Location Information> → Select an item.

By position loc.

... Measures the current location and store the location information

→ Check the location information → **☑**

From loc. history

... Select a picture of location information from Location History and store it.

Attach from image

... Store the location information from an image

→ Select a folder → Select an image.

📅 <Birthday> → Enter a birthday.

📄 <Memo> → Enter a memo.

📷 <Image> → Select an item.

Select image ... Store a still image in Data Box.

Shoot image ... Store a still image shot by the camera.

📄 <Memory No.>

→ Enter a three-digit memory number → **☑**

2

Entering Pictographs

📷 → Pictograph/symbols → Pictograph

→ Select a pictograph.

Entering Symbols

📷 → Pictograph/symbols → Symbols

→ Select a symbol.

Line Feed

Press **☑**.

Entering a Space

📷 → Pictograph/symbols → Space

Deleting Characters

Use **☑** to move the cursor → **CLR**

Switching to Upper/case/overcase

Enter a character → **☑**

6

Store from Redial, Dialed Calls, or Received Calls

Adding Data to the FOMA phone

Bring up the redial item, dialed call record, or received call record → **📷**

→ Add to phonebook → Phone → Add

→ Select a search method

→ Search the Phonebook

→ Select a destination Phonebook entry

→ **☑** → YES

Edit Phonebook Entries

Bring up the detailed Phonebook display

→ **☑** → Select an item to be edited

→ Edit the contents → **☑** → YES

3

Enter "オオの菓子" into a Text Memo

Bring up the Character Entry (Edit) display

☑ → Stationery → Text memo

→ Select <Not recorded> → Press **☑** a few times to switch to Kanji/Hiragana input mode.

Entering Hiragana characters <Mode 1>

た → Press **☑** once and **☑** once.

て → Press **☑** once and **☑** once.

の → Press **☑** five times.

か → Press **☑** once.

し → Press **☑** twice.

Converting the Characters

Use **☑** to move the cursor to "の" → **☑**

→ Use **☑** to highlight "オオの" and press

☑ → Fix the rest of characters in the same way.

7

Function List

Menu	Function name
Mail	Inbox
	Outbox
	Draft
	Compose message
	Template
	Web mail
	Check new message
	Compose SMS
	Chat mail
	Other SMS
Area mail settings	
I-mode	Menu
	Bookmark
	Screen memo
	Last URL
	Go to location
	Message H/F
	I-Q channel
	Check new message
	I-mode settings
	Full Browser

16

Settings	Ring time setting	
	Hands-free w/ PushTalk	
	PushTalk arrival act.	
	Visual preference	
	Speaker preference	
	Hands-free w/ V. phone	
	Voice call auto redial	
	Remote monitoring	
	Notify switchable mode	
	Feel settings	
Feel *Talk		
Feel *Mail		
Network setting	Perik setting	
	Int'l roaming	
	Int'l dial assist	
	Status in the area	
	Melody Call setting	Work with style
		Shut keys guard
		Character input method
		3S
		Paused dial
		84
Sub-address setting		
Header switch to call		
Voice settings		
USB mode setting		

20

I-apply	Software list(phone)	
	app1(memoSD)	
	app1 into	
	app1 settings	
	Sound	Select ring tone
		13
		Ring and sound
		30
		Keypad effect
		64
Melody effect		
51		
Header usages setting		
68		
MailMsg. ring time		
Display	Display setting	
	56	
	Backlight	
	70	
	Color theme setting	
	86	
	Menu icon setting	
	57	
	Private menu setting	
	52	
Desktop icon		
63		
Private window		
66		
Font		
66		
Character size		
15		
Select language		
Recrystal/call at open		
Integer quality		
LOGI AI		
36		
Icons		
Illumination	All illum. setting	
	89	
Illumination	Illumination	

17

Settings	Reset settings
	23
	Initialize
	46
	Multi structure
	MUSIC
	MUSIC/Video Channel
	6
	Melody
	16
My documents	
Kisakae Tool	
Chan-den	
PC Move	
13Seg	
Document viewer	
SD other files	
SD other files	
79	
Bar code reader	
Receive Ir data	
SD-PIM	
Camera	
Bluetooth	
GPS	
IR text reader	
Rec. msg/clock memo	
55	
Doc. Serv. Status	
Doc. Serv. Status	
17	
Caller ID notification	
Voice mail	
Call waiting	
Call forwarding	
Nuis. call blocking	
Service	

21

Settings	Illumination rTalk
	Mission rTalk
	Misc/Video on illum.
	illum. when tobed
	Hourly illumination
	10
	MUSIC illumination
	Bluetooth illumination
	IC card illumination
	PushTalk illumination
Slide key illumination	
Check settings	
Kisakae	Self mode
	Lock all
	Personal data lock
	IC card lock
	40
	Secret mode
	Secret data only
	41
	Keypad data lock
	Reject unknown
Call setting w/o ID	
10	
Change security code	
29	
MIM setting	
Local function	
Local setting	
Call function	
61	
Call data	
60	
Reset total configuration.	

18

Service	Caller ID request
	2:mi setting
	Multi number
	Miscellaneous
	Miscellaneous
	Multi call act
	Set the custom act
	Remote control
	Dual network
	English guidance
Set. Reaming guidance	
Additional services	
Service numbers	
OFF/CEED	
Chara-mng	
Add to phonebook	
Search phonebook	
UM operation	
UM operation	
24	
PushTalk phonebook	
Dial/recv. calls	
0	
Own number	
Group setting	
Restrictions	
28	
Misc. phonebook settings	
Misc. phonebook	
44	
Attn. schedule	
45	
Schedule	
TDPO	
36	
Text memo	
42	
Calculator	
85	

22

Settings	Notice call cost
	CLR max cost icon
	31
	Set time
	World time watch
	Startup time
	Auto power ON/OFF
	Alarm setting
	Alarm setting
	54
Vibrator	
20	
Memo mode set	
Answer setting	
58	
Setting when opened	
Record display set	
Disp. Pch-hook image	
Disp. call/recv. No.	
90	
Ring time	
65	
Info notice setting	
V. phone while packet	
Auto answer setting	
94	
Talk	Volume
	18
	Setting when folded
	Set hook tone
	76
	Noise reduction
	75
	Reconnect signal
	77
	Auto answer setting
PushTalk	Guide
	39
	Common phrasebook
	MUSIC/river
	MUSIC/Video Channel
	6
	PushTalk
	Book program
	Book program
	Time recording
Recording result	
TVLink	
Channel list	
Channel setting	
User settings	
IC card content	
DDIAX	
ToruCa	
ToruCa	
IC card lock set.	
Settings	
Search by mode	


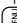
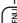
19

Stationery	MUSIC
	39
	Guide
	Common phrasebook
	MUSIC/river
	MUSIC/Video Channel
	6
	PushTalk
	Book program
	Book program
Time recording	
Recording result	
TVLink	
Channel list	
Channel setting	
User settings	
IC card content	
DDIAX	
ToruCa	
ToruCa	
IC card lock set.	
Settings	
Search by mode	
Public Mode (Drive Mode)	
Manner Mode	
During standby/During a call	
During standby/During a call	

23

Network Services






Voice Mail Service

- **Activating**
 → Service → Voice mail → Activate → YES
 → YES → Enter a ring time (seconds).
- **Deactivating**
 → Service → Voice mail → Deactivate → YES
- **Playing Back Messages**
 → Service → Voice mail → Play messages → YES
 → Operate following the voice guidance.

24





Major Icons



-  : Battery level (estimate)
-  : Radio waves reception level (estimate)
-  : During Self Mode
-  (white): Unread i-mode mail or SMS messages exist.
-  (white): Unread Messages R/F exist



28

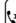Call Waiting Service

- **Activating**
 → Service → Call waiting → Activate → YES
- **Deactivating**
 → Service → Call waiting → Deactivate → YES
- **Answering an Incoming Call during a Call**
 A call comes in during a call → 
 Each time you press , you can switch the parties you talk with.

25

Call Forwarding Service

- **Activating**
 → Service → Call forwarding → Activate → Register fwd number → Enter the phone number of the forwarding destination
 → Set ring time → Enter a ring time (seconds) → Activate → YES
- **Deactivating**
 → Service → Call forwarding → Deactivate → YES

26

Services Available with FOMA Phone

Available service	Phone number
Emergency assistance service (Charges apply; guidance fee + call fee) ※ Listed phone numbers only can be given.	(No prefix) 104
Telegrams (Telegram charges apply)	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	City code or the desired area + 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charge apply)	(No prefix) 171
Collect calls (Charges apply; guidance fee + call fee)	(No prefix) 106

 
27

Emergency Contact Number for Loss Etc.>

Omakase Lock

※ Omakase Lock is a pay service. However, you are not charged if you do not apply for this service at the same time as applying for the suspension of the use or during the suspension.

Setting/Releasing Omakase Lock



Business hours: 24 hours

Other Emergency Calls


- <Phone number: >
- <Phone number: >
- <Phone number: >


● Please confirm the phone number before you dial.


31

Emergency Contact Number for Loss Etc.>


 : During Timer Lock At Close

 : While Vibrator is set to other than "OFF" (See page 19)

 : While Ring Volume is set to "Silent" or Mail/Msg. Ring Time is set to "OFF"

 : During Manner Mode (See page 23)

 : During Public Mode (Drive Mode) (See page 23)


 : While Side Keys Guard is set to "ON" (See page 20)

25

Emergency Contact Number for Loss Etc.>


 (white): i-mode mail is held at the i-mode Center.


 (white): Messages R/F are held at the i-mode Center.


 : i-mode mail is held at the i-mode Center (While Receive Option Setting is set to "ON").

 : During Lock All

 : During Personal Data Lock

 : During Keypad Dial Lock

 : During Secret Mode or Secret Data Only

 : During IC Card Lock

29

<Cutout line>

Quick Manual "For Overseas Use"

Loss or theft of FOMA terminal or payment of cumulative cost overseas

- ▶DocoMo Information Center* (available 24 hours a day)
- ▶From a DocoMo mobile phone
International call access code for **-81-3-5366-3114***
the country you stay (Table 1) (toll free)
- *You are charged a call fee to Japan when calling from a landline phone, etc.
- *If you use P905i, you should dial the number -81-3-5366-3114 (to dial "+", press and hold the "0" key for at least one second).
- ▶From a landline phone
- ▶Universal number-
International prefix number for the universal number (Table 2) **-900-0120-0151***
- *You might be charged a domestic call fee according to the call rate for the country you stay.
- ※ See page 13 and page 14 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).

Communication Systems and Available Services

Communication Service	3G	GSM	GPRS
Voice call	○	○	○
Video phone call	○	×	×
i-mode	○	×	○
i-mode mail	○	×	○
SMS	○	○	○
i-Channel	○	×	○
Packet communication by connecting with a personal computer	○	×	○

- : Available ×: Not available
- The GPS functions and e4K data communications are not available overseas.

Failures encountered overseas

- ▶Network Technical Operation Center* (available 24 hours a day)
- ▶From a DocoMo mobile phone
International call access code for **-81-3-6718-1414***
the country you stay (Table 1) (toll free)
- *You are charged a call fee to Japan when calling from a landline phone, etc.
- ※ If you use P905i, you should dial the number -81-3-6718-1414 (to dial "+", press and hold the "0" key for at least one second).
- ▶From a landline phone
- ▶Universal number-
International prefix number for the universal number (Table 2) **-900-5931-8600***
- *You might be charged a domestic call fee according to the call rate for the country you stay.
- ※ See page 13 and page 14 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).
- If you lose your FOMA phone or have it stolen, immediately take the steps necessary for suspending the use of the FOMA phone.
- If the FOMA phone you purchased malfunctions, bring your FOMA phone to a repair counter specified by Docomo after you return to Japan.

Setting a Search Method of Carrier

- [MENU]**→Settings→Network setting
- i-nt'l roaming→Network search mode
- Select an item.
- Auto..... Automatically re-connect to another carrier.
The setting is completed.
- Manual..... Connects manually to the listed carrier.
Network re-search
..... When set for "Auto", automatically switches to an available carrier. The setting is completed.
When set to "Manual", displays the list of carriers.
- Select a carrier.

Preparing for Overseas Use

- Setting of i-mode
- [iR]** → **[i]** Menu → English Menu → Options
- International Settings
- i-mode services Settings →Select "Yes"
- Enter your i-mode password →Select
- Setting Overseas
- [iR]** → **[i]** Menu → English Menu → Options
- International Settings
- i-mode services Settings →Select "Yes"
- Enter your i-mode password →Select

Selecting Carrier to Preferentially Connect to

- [MENU]**→Settings→Network setting→i-nt'l roaming
- PLMN setting→**[iR]** →PLMN list select
- Select a carrier→**[i]** →Select a network type
- [iR]** →YES

Displaying the Carrier on the Stand-by Display

- [MENU]**→Settings→Network setting
- i-nt'l roaming→Operator name display
- Display ON or Display OFF

Remote Control

- Setting in Japan
- [MENU]**→Service→Remote control→Activate
- YES
- Setting Overseas
- [MENU]**→Settings→Network setting
- i-nt'l roaming→Remote control (Int.)→YES
- Operate following the voice guidance.

Set Time

- [MENU]**→Settings→Clock→Set time
- Auto time adjust ON

Display

The type of network you are using is displayed.



Setting after Returning to Japan

- After you return to Japan, the FOMA network is automatically searched and connected.
- When you have set to switch networks manually
- [MENU]**→Settings→Network setting→i-nt'l roaming
- Network search mode→Manual→DocoMo

Making/Receiving a Call

Make a Call to Outside the Country You Stay (Including Japan)

- Making an international call to Japan Using Phonebook
Bring up the detailed Phonebook display
→ → Dial

Press to make an international videophone call.

- Making an international call Using “+”
 (for at least one second) → Enter “Country code - Area code (City code) - Destination phone number” →

Press to make an international videophone call.
Enter “81” as a country code when you make an international call to Japan.

When the area code (city code) begins with “0”, enter it except for the “0”. However, include “0” when making a call to some countries or regions such as Italy.

8

Make a Call to a Phone in the Country You Stay

Enter a destination phone number → to make a videophone call.

- Making a Call Using Phonebook
Bring up the detailed Phonebook display
→ → “Original phone No.”

Make a Call to a Person who is Staying Overseas and Using WORLD WING

When you make a call to a person who is also internationally roaming, make the call in the same way as to make international calls to Japan even if he/she is in the country you stay.

Receive a Call

Press when a call comes in.
(For videophone call, press .)

9

Country Codes for Major Countries

Use the following country codes when you make international calls or when you set Int'l Dial Assist.

(As of October 2007)

Service area	Country code	Service area	Country code
Australia	61	Monaco	377
Belgium	32	Netherlands	31
Brazil	55	New Zealand	64
Canada	1	Norway	47
China	86	Philippines	63
Czech Republic	420	Poland	48
Denmark	45	Portugal	351
Finland	358	Russia	7
France	33	Singapore	65
Germany	49	South Korea	82
Greece	50	Spain	34
Hong Kong	852	Sweden	46
India	91	Switzerland	41
Indonesia	62	Taiwan	886
Ireland	353	Thailand	66
Italy	39	Turkey	90
Japan	81	United Arab Emirates	971
Luxembourg	352	United Kingdom	44
Malaysia	60	United States of America	1
		Vietnam	84

12

Using Network Services

To use network services overseas, you need to set “Remote control” beforehand.

Set Roaming Guidance

- You need to set this function in Japan.
 → Service → Set Roaming guidance

Call Barring

- This setting might not be available depending on the overseas carrier.
 → Settings → Network setting → Int'l roaming → Call barring

Voice Mail (International)

- → Settings → Network setting → Int'l roaming → Voice mail (Int.)

10

Call Forwarding (International)

- → Settings → Network setting → Int'l roaming → Call forwarding (Int.)

Roaming Guidance (International)

- → Settings → Network setting → Int'l roaming → Roaming guidance (Int.)

Caller ID Request

- → Settings → Network setting → Int'l roaming → Caller ID req. (Int.)

11

Inquiries

For lost, stolen, and cost settlement, or malfunction of your FOMA phone overseas, refer to “Loss or theft of FOMA terminal or payment of cumulative cost overseas” on cover page of Quick Manual “For Overseas Use”, or “Failures encountered overseas” on page 1.

- You need to add the “international call access code (Table 1)” that is assigned to the country you stay or “international prefix number for the universal number (Table 2)” to the head of each phone number for inquiries.

- Note that, in many cases, the universal number may not be used from a mobile phone, public phone, or hotel phone, etc.

15

International Prefix Numbers for the Universal Number (Table 2)

(As of August 2007)

Service area	International number	Service area	International number
Argentina	00	Luxembourg	00
Australia	0011	Malaysia	00
Austria	00	Netherlands	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Bulgaria	00	Peru	00
Canada	011	Philippines	00
China	00	Portugal	00
Colombia	009	Singapore	001
Denmark	00	South Africa	09
Finland	990	South Korea	001
France	00	Spain	00
Germany	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	00
Ireland	00	Thailand	00
Israel	014	United Kingdom	001
Italy	00	United States of America	011

14

※ For the code for the countries other than listed in the table, or for details, refer to the DoCoMo Global Service web page.

International Call Access Codes for Major Countries (Table 1)

(As of August 2007)

Service area	Access code	Service area	Access code
Australia	0011	Monaco	00
Belgium	00	Netherlands	00
Brazil	00417	New Zealand	00
Canada	011	Norway	00
China	00	Philippines	00
Czech Republic	00	Poland	00
Denmark	810	Portugal	00
Finland	00	Russia	810
France	00	Singapore	001
Germany	00	South Korea	001
Greece	00	Spain	00
Hong Kong	001	Sweden	00
Hungary	002	Switzerland	00
India	001	Taiwan	002
Indonesia	00	Thailand	001
Ireland	001	Turkey	00
Italy	00	United Arab Emirates	00
Luxembourg	00	United Kingdom	00
Malaysia	00	United States of America	011
Malta	00	Vietnam	00

13

Don't forget your FOMA phone ... or your manners!

In the following cases, be certain to turn off the power.

■ **Where use is prohibited**

Be sure to turn off the power to your FOMA phone in airplanes and in hospitals.

※ Persons with electronic medical equipment are in places other than the actual wards.

Make sure you have the power switched off even if you are in a lobby or waiting room.

■ **When in crowded places such as packed trains, where you could be near a person with an implanted cardiac pacemaker or implanted defibrillator**

The implanted cardiac pacemaker or implanted defibrillator operation can be affected by radio emissions from the FOMA phone.

In the following cases, be certain to set Public Mode.

■ **While driving**

Using the mobile phone in your hand while driving is subject to punishment.

※ If you answer a call out of necessity, tell the caller with Hands-free that you will call him/her back, park your car to somewhere safe, and then dial.

■ **When in theaters, movie theaters, museums, and similar venues**

If you use your FOMA phone where you are supposed to be quiet, you will disturb those around you.

Adjust the volume of your voice and ring tone according to where you are.

■ **If you use the FOMA phone in quiet places such as restaurants and hotel lobbies, keep the volume of your voice and other sounds down.**

■ **Do not block thoroughfares when using the FOMA phone.**

Respect the privacy.



Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

These functions help you keep your manners in public.

Handy functions are available such as for setting the response to incoming calls and setting the tones to silent.

● **Public Mode (Drive Mode/Power Off) (Page 65 and page 66)**

The guidance that you are currently driving or in a place where you should refrain from using a mobile phone or the guidance that you are in a place where you should turn off the power is played back to the caller. Then the call is disconnected.

● **Record Message function (Page 67)**

Callers can record a message when you cannot come to the phone.

● **Vibrator (Page 100)**

When the vibrator is set, it vibrates for incoming calls.

● **Manner Mode/Super Silent/Original Manner (Page 102)**

In Manner Mode or Super Silent, the keypad sound, ring tone and other sounds from the FOMA phone are silenced.

In Original Manner, you can set whether or not to activate the Record Message function, and can change the settings for the vibrator and ring tone.

※ The shutter sound cannot be silenced.

Optional services are also available, such as Voice Mail Service (page 364) and Call Forwarding Service (page 367).

Access DoCoMo e-site for procedures to change your address or billing plan and for request of Information materials.

From i-mode i Menu ▶ 料金&お申込・設定 (Charges & Applications/Setting) ▶ 各種手続き (ドコモeサイト)
[Application procedure (DoCoMo e-site)] **Packet communication charges free**

From PC My DoCoMo (<http://www.mydocomo.com/>) ▶ 各種手続き (ドコモeサイト)
[Application procedure (DoCoMo e-site)]

- You will need your "network ID" to access e-site from i-mode.
- No packet communication charges are incurred when accessing e-site from i-mode. Accessing from overseas will incur charges.
- You will need your "DoCoMo ID/password" to access e-site from PC.
- If you do not have or you have forgotten your "network ID" or "DoCoMo ID/password", contact the DoCoMo Information Center listed below.
- DoCoMo e-site may not be available depending upon the content of your subscription.
- You may not be able to access some e-site services due to system maintenance, etc.

General inquiries <DoCoMo Information Center>

(In English)

 **0120-005-250** (toll free)

* Can be called from mobile phones and PHSs.


(In Japanese only)

 (No prefix) **151** (toll free)

* Can be called only from DoCoMo mobile phones and PHSs.

Repairs

(In Japanese only)

 (No prefix) **113** (toll free)

* Can be called only from DoCoMo mobile phones and PHSs.

(In Japanese only)

 **0120-800-000** (toll free)

* Can be called from mobile phones and PHSs.

- Please confirm the phone number before you dial.
- For further information, refer to the "Nationwide Service Station List" included with your FOMA terminal and other devices.

Loss or theft of FOMA terminal or payment of cumulative cost overseas

<DoCoMo Information Center> (available 24 hours a day)

From a DoCoMo mobile phone

International call access code for the country you stay (Table 1) **-81-3-5366-3114*** (toll free)

* You are charged a call fee to Japan when calling from a landline phone, etc.

※ If you use P905i, you should dial the number +81-3-5366-3114 (to dial "+", press and hold the "0" key for at least one second).

From a landline phone

<Universal number>

International prefix number for the universal number (Table 2) **-800-0120-0151***

* You might be charged a domestic call fee according to the call rate for the country you stay.

※ See page 388 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).

● If you lose your FOMA phone or have it stolen, immediately take the steps necessary for suspending the use of the FOMA phone.

● If the FOMA phone you purchased malfunctions, bring your FOMA phone to a repair counter specified by DoCoMo after you return to Japan.

Failures encountered overseas

<Network Technical Operation Center> (available 24 hours a day)

From a DoCoMo mobile phone

International call access code for the country you stay (Table 1) **-81-3-6718-1414*** (toll free)

* You are charged a call fee to Japan when calling from a landline phone, etc.

※ If you use P905i, you should dial the number +81-3-6718-1414 (to dial "+", press and hold the "0" key for at least one second).

From a landline phone

<Universal number>

International prefix number for the universal number (Table 2) **-800-5931-8600***

* You might be charged a domestic call fee according to the call rate for the country you stay.

※ See page 388 for international call access codes for major countries (Table 1) and international prefix numbers for the universal number (Table 2).



Do not forget your cellular phone ... or your manners!

When using your portable phone in a public place, do not forget to show common courtesy and consideration for others around you.

Sales: NTT DoCoMo Group

NTT DoCoMo Hokkaido, Inc.

NTT DoCoMo Tohoku, Inc.

NTT DoCoMo, Inc.

NTT DoCoMo Tokai, Inc.

NTT DoCoMo Hokuriku, Inc.

NTT DoCoMo Kansai, Inc.

NTT DoCoMo Chugoku, Inc.

NTT DoCoMo Shikoku, Inc.

NTT DoCoMo Kyushu, Inc.

Manufacturer: Panasonic Mobile Communications Co., Ltd.



To prevent damage to the environment, bring used battery packs to an NTT DoCoMo service counter, an NTT DoCoMo agent or a recycle center.

Li-ion



Utilizing 70% post-consumer recycled paper pulp



This manual is printed using an ink based on soy bean oil.

November '07 (Ver.1.2)



3TR005235AAA
F1007F0 - (A)

FOMA® P905i

Manual for PC connection setting

Data Communication Available from FOMA Phone	1
Before Using	1
Preparation Flow for Data Communication	3
For Using Windows XP/Windows 2000	
Installing FOMA Communication Setup Files (Driver)	4
Preparing Bluetooth Communication (Dial-up Communication Service)	7
FOMA PC Setup Software	8
Communication Setting by FOMA PC Setup Software	9
Installing FOMA PC Setup Software	9
Setting Communication	11
Carrying Out Set Communication	16
Uninstalling FOMA PC Setup Software	17
Communication Setup Optimization	18
Access Point Name (APN) Setting	19
Setting Dial-up Network	20
Making Dial-up Connection	28
Using FirstPass PC Software	30
For Using Windows Vista	
Installing FOMA Communication Setup Files (Driver)	31
Preparing Bluetooth Communication (Dial-up Communication Service)	33
FOMA PC Setup Software	34
Communication Setting by FOMA PC Setup Software	34
Installing FOMA PC Setup Software	35
Setting Communication	36
Carrying Out Set Communication	41
Uninstalling FOMA PC Setup Software	41
Access Point Name (APN) Setting	42
Setting Dial-up Network	43
Making Dial-up Connection	46
Using FirstPass PC Software	47
Using AT Command	
AT Command	48
AT Command List	49

About Manual for PC connection setting

This manual explains the items required for making data communication using FOMA P905i as well as how to install "FOMA communication setup files"/"FOMA PC setup software" on the CD-ROM.

Some procedures and displays may differ depending on your operating environment.

Data Communication Available from FOMA Phone

The data communication services you can use by connecting the FOMA phone to a personal computer are classified as follows: packet communication, 64K data communication, and data transfer (OBEX™ Communication).

The FOMA phone is equipped with the adapter function for packet communication.

- To perform the packet communication overseas, perform it via the IP connection. (You cannot perform the packet communication via the PPP connection.)
- 64K data communication is not available overseas.

Packet Communication

This service requires a communication fee according to the amount of data you sent and received. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps) It uses an access point which supports FOMA packet communication such as DoCoMo Internet access service "mopera U"/"mopera".

To use this service, connect the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option) or Bluetooth, and then carry out settings. The packet communication is suitable for using applications which require the high-speed communication.

To carry out the settings and connection, see page 3 and after.

- The packet communication is charged according to the amount of data you sent and received. Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files.
- The data is sent/received at the maximum speed of 384 kbps outside the FOMA High-speed Area.
- When you use the packet communication with "sigmarion III", "sigmarion II", or "musea" of DoCoMo's PDA, the data is sent/received at the maximum speed of 384 kbps. High-speed communication for FOMA High-speed Area is not supported.

64K Data Communication

This service requires a communication fee according to the duration of connection. By connecting the FOMA phone to a personal computer via the FOMA USB Cable with Charge Function 01 (option) or Bluetooth, you can execute communication.

To use this service, connect to an access point which supports FOMA 64K data communication such as DoCoMo Internet access service "mopera U"/"mopera", or an ISDN-synchronous 64K access point.

To carry out the settings and connection, see page 3 and after.

- The 64K data communication is charged according to the duration of connection. Note that a communication fee becomes expensive if you use this service for a long time.

Data Transfer (OBEX™ Communication)

This service sends/receives data using infrared rays or the FOMA USB Cable with Charge Function 01 (option). By infrared data exchange, you can exchange data with another FOMA phone or a device having the infrared data exchange function such as a personal computer.

To perform data transfer (OBEX™ Communication) between the FOMA phone and personal computer via the FOMA USB Cable with Charge Function 01, install the DoCoMo keitai datalink.

Information

- The FOMA phone does not support Remote Wakeup.
- The FOMA phone does not support the FAX communication.
- You can perform data communications by connecting the FOMA phone with DoCoMo's PDA "sigmarion II", "sigmarion III", or "musea".
When you use "sigmarion II" or "musea", the update is required. For details such as how to update them, refer to the DoCoMo web page.

Before Using

Charge of Internet service provider

To use the Internet, you need to pay the charge for the Internet service provider you use. Besides the FOMA service fee, you need to directly pay this charge to the Internet service provider. For details on the charge, contact the Internet service provider you use.

You can use the DoCoMo Internet access service, "mopera U"/"mopera". To use "mopera U", subscription (charged) is required. To use "mopera", subscription and monthly charge are not required. However, the maximum communication speed of sending/receiving data is limited to 384 kbps.

Setting access point (Internet service provider, etc.)

The access points for the packet communication and 64K data communication differ. To use the packet communication, connect to an access point which supports packet communication. To use the 64K data communication, connect to an access point which supports FOMA 64K data communication or ISDN-synchronous 64K.

- You cannot connect to the DoPa access point.

About user authentication for accessing network

User authentication (ID and password) may be required at connection to some access points. In this case, enter your ID and password on the communication software (dial-up network). ID and password are specified by the Internet service provider or network administrator of the access point. For details, contact the provider or network administrator.

About access authentication for using browser

If you need FirstPass (user certificate), install the FirstPass PC software from the provided CD-ROM and make the setting.

For details, see "FirstPassManual" (PDF format) in the "FirstPassPCSoft" folder of the CD-ROM.

Conditions of packet communication and 64K data communication

To carry out the communication using the FOMA phone in Japan, the following conditions are required:

- The personal computer to be used can use the FOMA USB Cable with Charge Function 01 (option).
- When connecting using Bluetooth, the personal computer should support Dial-up Networking Profile of Bluetooth Specification Ver. 1.1, Ver. 1.2 or Ver.2.0+EDR.
- The PDA to be used should support FOMA packet communication and 64K data communication.
- Within the FOMA service area
- For packet communication, the access point should support packet communication of the FOMA.
- For 64K data communication, the access point should support the FOMA 64K data communication or ISDN-synchronous 64K.

Even when these conditions are satisfied, if the base station is congested or the radio wave conditions are bad, you may not carry out the communication.

About Operating Environment

For the data communication, the following operating environment is required for your personal computer:

Item	Description
PC main unit	PC/AT compatible model When using the FOMA USB Cable with Charge Function 01 (option): USB port (Universal Serial Bus Specification Rev1.1 compliant) When using Bluetooth: Bluetooth Specification Ver. 1.1, Ver. 1.2 or Ver.2.0+EDR compliant (Dial-up Networking Profile) Display resolution 800 x 600 dots, high color 16 bits or more recommended.
OS	Windows 2000, Windows XP, Windows Vista (Japanese version in each)
Memory requirements	Windows 2000: 64 Mbytes or more Windows XP: 128 Mbytes or more Windows Vista: 512 Mbytes or more (Japanese version in each)
Hard disk space size	Unused memory space of 5 Mbytes or more

- The operation on the upgraded OS is not guaranteed.
- The memory requirements and hard disk space size may vary depending on the system environment.
- The recommended environment that the Menu operates is Microsoft® Internet Explorer 6.0 or later. When the Menu does not appear after you set the CD-ROM, operate as follows:
<For Windows XP or Windows 2000>
Refer to the CD-ROM from “マイコンピュータ (My computer)”, then double-click “index.html”.
<For Windows Vista>
Refer to the CD-ROM from “コンピュータ (Computer)”, then double-click “index.html”.
※For Windows Vista, the recommended environment is Microsoft® Internet Explorer 7.0 or later.

When you set the CD-ROM on your personal computer, an alert message might appear on the display as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

Click “はい (YES)”.

※The example message below is for when you use Windows XP. The message might differ depending on the environment of the computer you use.



Necessary Devices

The following hardware and software are required besides the FOMA phone and personal computer:

- FOMA USB Cable with Charge Function 01 (option) or FOMA USB Cable (option)※
- Provided “FOMA P905i CD-ROM”

※For USB connection

Information

- Use a dedicated FOMA USB Cable with Charge Function 01 or FOMA USB Cable. The USB cable for personal computers cannot be used because the shape of the connector differs.
- In this manual, operations are described for the case of using FOMA USB Cable with Charge Function 01.
- If you use a USB hub, the devices may not work correctly.

Connect FOMA phone to Other Devices

The following three ways are available for connecting the FOMA phone to another device:

Use FOMA USB Cable with Charge Function 01

Connect the FOMA phone to a personal computer provided with the USB port using the FOMA USB Cable with Charge Function 01 (option). (See page 4)
This way of connection applies to all types of communications such as packet communication, 64K data communication, and data transfer.

- Set “USB mode setting” to “Communication mode” for data communication.
Operate **[MENU]** ▶ Settings ▶ Other settings ▶ USB mode setting ▶ Communication mode”.
- You need to install the FOMA communication setup files (driver) before use.

Use Bluetooth

Connect a Bluetooth compatible personal computer wirelessly to the FOMA phone. (See page 7 or page 33)
This way of connection applies to packet communication and 64K data communication.

- When you perform data communication by using Bluetooth, the high speed communication is applied to the FOMA phone. However, you may not be able to communicate at the maximum speed, because of the limit of communication speed of Bluetooth.
- Use a Bluetooth-linked standard modem or a Bluetooth modem provided by the Bluetooth device maker. Contact the maker of your personal computer or Bluetooth device maker for how to install and to set up.

Use Infrared Data Exchange

By using infrared rays, you can send/receive data between your FOMA phone and another FOMA phone, mobile phone, or personal computer provided with the infrared data exchange function. This applies to data transfer only.

■ Glossary of Terms

● APN

The abbreviation of Access Point Name, which is used to identify an Internet service provider or Intranet LAN system you access for packet communication. For example, "mopera U" is expressed with character string "mopera.net".

● cid

The abbreviation of Context Identifier, which is a registration number of the APN that is registered in the FOMA phone in advance for packet communication. In the FOMA phone, you can register up to 10 cid numbers (1 to 10).

● Administrator right

Means the right with which the user can access all functions of Windows XP, Windows 2000, or Windows Vista system, in this manual. Generally, the user in the administrators group has this right. Users without the administrator right can use only specific functions of the system; therefore, the operation such as installing the FOMA communication setup files (driver) results in an error. For the setting of the PC administrator right, contact the maker of your personal computer, or Microsoft Corporation.

● DNS

The abbreviation of Domain Name System, which converts an easy-to-understand name for people, for example, "nttdocomo.co.jp", into an address indicated by an easy-to-manage number for computers.

● HSDPA

The abbreviation of High Speed of Downlink Packet Access, which is a standard that increased the speed of data communication of the third generation (3G) mobile telecommunication systems "W-CDMA".

● QoS

The abbreviation of Quality of Service, which indicates the quality of network services. For the QoS setting of the FOMA phone, you can specify a connection either at a free baud rate or only at the maximum baud rate (upload: 384 kbps, download: 3.6 Mbps). (After connection, the baud rate is variable.) For details, see page 56.

● Communication setup optimization

A TCP parameter used to maximize the TCP/IP transmission capability when carrying out the packet communication in the FOMA network. To maximize the communication performance of the FOMA phone under the "Wireless", "W-CDMA", or "Windows" environment, you need to optimize the TCP parameter.

● W-CDMA

One of the third-generation mobile phone communication systems (IMT-2000) authorized as the global standards. The FOMA phone conforms to the W-CDMA standard.

Preparation Flow for Data Communication

The following outline shows a preparation flow for packet communication or 64K data communication.

For USB connection

Connect a personal computer to the FOMA phone using the FOMA USB Cable with Charge Function 01 (option).

For Bluetooth connection

Connect a personal computer wirelessly to the FOMA phone using Bluetooth. (※1)

Install the "FOMA communication setup files" (driver). (※2)

Check the setting after installation. (※3)

Check the modem. (※4)

Install the "FOMA PC setup software". (※5)

Carry out the setting manually without using the "FOMA PC setup software". (※6)

Connect. (※7)

※1-7: Depending on the OS of the personal computer, the reference page for the preparation differs.

OS of the personal computer	Reference						
	※1	※2	※3	※4	※5	※6	※7
Windows XP/Windows 2000	P.7	P.4	P.6	P.8	P.8	P.20 P.29	P.16 P.28
Windows Vista	P.33	P.31	P.32	P.33	P.34	P.43 P.47	P.41 P.46


■ Provided "FOMA P905i CD-ROM"

When connecting the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 for packet communication, install the "FOMA communication setup files" (driver) from the provided "FOMA P905i CD-ROM" onto the personal computer. You are advised to install "FOMA PC setup software" for establishing the APN or dial-up setting easily when you communicate.

Connect the FOMA Phone to a PC

The following steps explain how to connect the FOMA USB Cable with Charge Function 01 (option).

- 1 Check the direction of the connector terminal of the FOMA phone, then straight insert the external connector of the FOMA USB Cable with Charge Function 01 until it clicks.
- 2 Connect the USB connector of the FOMA USB Cable with Charge Function 01 to the USB terminal of the personal computer.

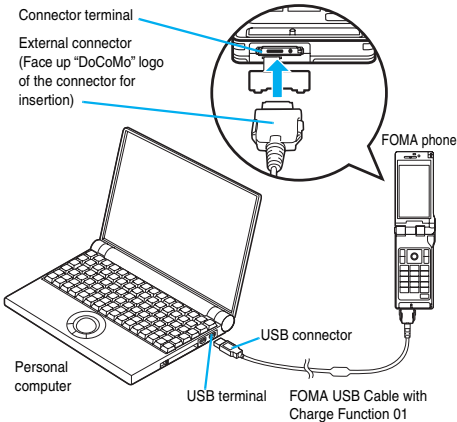


Information

- Do not forcibly insert the FOMA USB Cable with Charge Function 01. Malfunction may result. Insert each connector in the correct direction at the correct angle; otherwise, you will fail connection. When the direction and angle are correct, you can insert a connector smoothly without the strong force. If you fail to insert a connector, check its shape and direction once more without inserting a connector forcibly.
- Use a dedicated FOMA USB Cable with Charge Function 01. (The USB cable for personal computers cannot be used because the shape of the connector differs.)
- Symbol "📶" appears on the FOMA phone when the FOMA phone recognizes the connection with the personal computer after you install the FOMA communication setup files (driver) for packet communication or 64K data communication. Before you install the FOMA communication setup files (driver), the FOMA phone does not recognize the connection with the personal computer, and symbol "📶" does not appear.

Removing

1. While holding down the release buttons of the external connector of the FOMA USB Cable with Charge Function 01, straight pull out the connector.
2. Pull out the FOMA USB Cable with Charge Function 01 from the USB terminal of the personal computer.

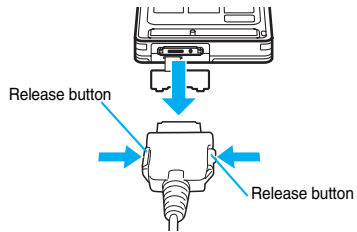

Information

- Do not disconnect the FOMA USB Cable with Charge Function 01 forcibly. Malfunction may result.
- Do not disconnect the FOMA USB Cable with Charge Function 01 during data communication. Erroneous operation or malfunction of the personal computer or FOMA phone, or loss of data could result.
- Do not connect/disconnect the FOMA USB Cable with Charge Function 01 in succession. Once you connect the cable, wait for a while, then disconnect it and vice versa.

For Using Windows XP/ Windows 2000

Installing FOMA Communication Setup Files (Driver)

Installing the FOMA communication setup files (driver) is required when you connect the FOMA phone to your personal computer via the FOMA USB Cable with Charge Function 01 (option) for the first time.

- When connecting wirelessly using Bluetooth, you do not need to install the FOMA communication setup files (driver).
- Operate as the user who has the PC administrator right.

For Windows XP

- 1 Connect the FOMA phone and the FOMA USB Cable with Charge Function 01. (See page 4)
- 2 Start Windows, then set the provided "FOMA P905i CD-ROM" into the personal computer.

3 Click “データリンクソフト・各種設定ソフト (Data link software/Setup software)”.

- If this display appears during installation of the “FOMA communication setup files” (driver), close the display.




4 Click “インストール (Install)” under “FOMA通信設定ファイル (USBドライバ) [FOMA communication setup files (USB driver)]”.



5 Double click “FOMInst.exe” in opened folder.

6 Read “ソフトウェア使用許諾契約書 (Software licensing contract)”, and click “同意する (Agree)”.

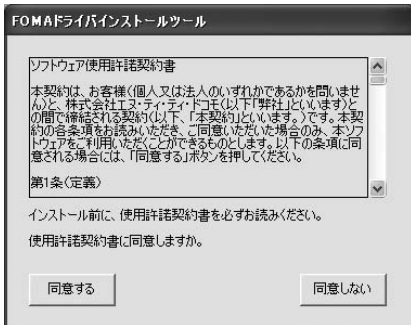

7 Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

Installation starts.

Pop-up message “新しいハードウェアが見つかりました (New hardware was found)” appears for a few seconds from the indicator of the task bar.


After you complete the installation, pop-up message “新しいハードウェアがインストールされ、使用準備ができました。(New hardware is installed, and the system is ready.)” appears for a few seconds from the indicator of the task bar.

8 Click “インストールする (推奨) [Installing (recommended)]”.

Then install the FOMA byte counter.

Install by following the onscreen instructions.

- When you do not install the FOMA byte counter, go to step 9.

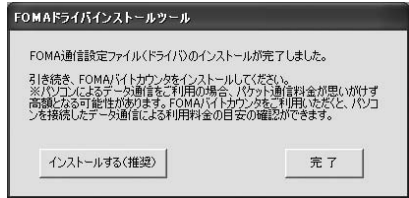

9 Click “完了 (Complete)”.

Next, confirm that the “FOMA communication setup files” (driver) are installed correctly. (See page 6)

For Windows 2000

1 Connect the FOMA phone and the FOMA USB Cable with Charge Function 01. (See page 4)


2 Start Windows, then set the provided “FOMA P905i CD-ROM” into the personal computer.

3 Click “データリンクソフト・各種設定ソフト (Data link software/Setup software)”.

- If this display appears during installation of the “FOMA communication setup files” (driver), close the display.




4 Click “インストール (Install)” under “FOMA通信設定ファイル (USBドライバ) [FOMA communication setup files (USB driver)].”

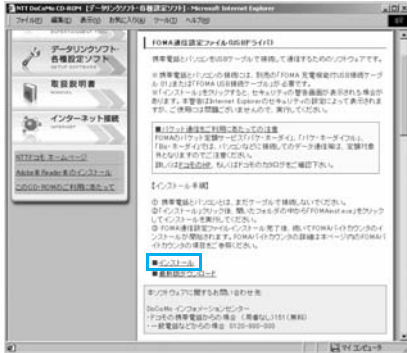

5 Double click “FOMAINst.exe” in opened folder.

6 Read “ソフトウェア使用許諾契約書 (Software licensing contract)”, and click “同意する (Agree)”.

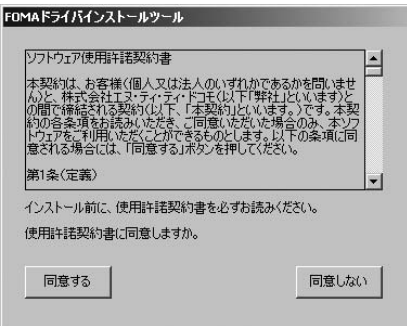


7 Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

Installation starts.
Pop-up message “新しいハードウェアが見つかりました (New hardware was found)” appears for a few seconds from the indicator of the task bar.
After you complete the installation, pop-up message “新しいハードウェアがインストールされ、使用準備ができました。 (New hardware is installed, and the system is ready.)” appears for a few seconds from the indicator of the task bar.

8 Click “インストールする (推奨) [Installing (recommended)].”

Then install the FOMA byte counter.
Install by following the onscreen instructions.
● When you do not install the FOMA byte counter, go to step 9.

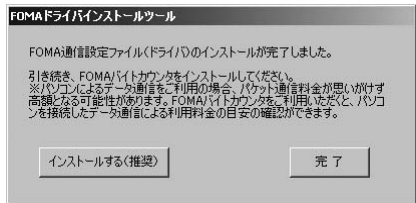

9 Click “完了 (Complete)”.


Next, confirm that the “FOMA communication setup files” (driver) are installed correctly. (See page 6)

Confirm Installed Driver


Confirm that the “FOMA communication setup files” (driver) are installed correctly.

- 1** <For Windows XP>
“スタート (Start)” ▶ Open “コントロールパネル (Control panel)” ▶ “パフォーマンスとメンテナンス (Performance and maintenance)”
▶ Open “システム (System)”.
- <For Windows 2000>
“スタート (Start)” ▶ “設定 (Setting)”
▶ Open “コントロールパネル (Control panel)”
▶ Open “システム (System)”.
- 2** Click the “ハードウェア (Hardware)” tab
▶ Click “デバイスマネージャ (Device manager)”.
- 3** Click each device, then confirm the installed driver names.

Confirm that all driver names are displayed under “ポート (COMとLPT) [Port (COM/LPT)], “モデム (Modem), and “USB (Universal Serial Bus) コントローラ [USB (Universal Serial Bus) controller].”

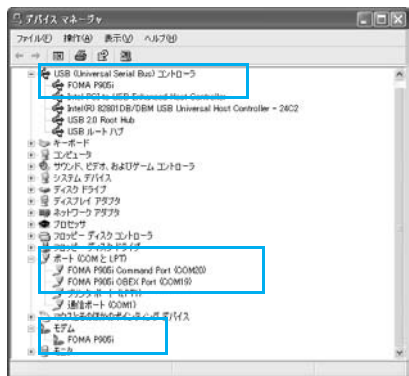

For Windows XP

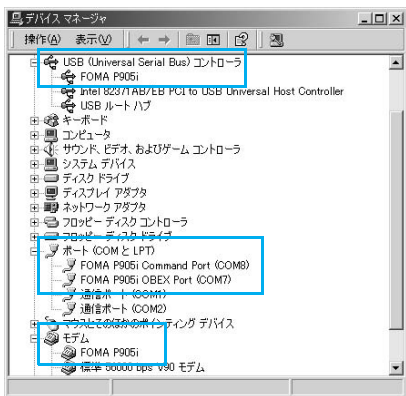

For Windows 2000

※The COM port number varies depending on the personal computer you use.

The following drivers are installed by installation of the “FOMA communication setup files” (driver):

Device name	FOMA communication setup file (driver) name
ポート (COMとLPT) [Port (COM/LPT)]	・ FOMA P905i Command Port ・ FOMA P905i OBEX Port
モデム (Modem)	・ FOMA P905i
USB (Universal Serial Bus) コントローラ [USB (Universal Serial Bus) controller]	・ FOMA P905i

To set an access point with the “FOMA PC setup software”, see page 9.
To set an access point without the “FOMA PC setup software”, see page 20 or page 29.

Uninstall FOMA Communication Setup Files (Driver)

When uninstalling the “FOMA communication setup files” (driver) is necessary (such as when upgrading the version), perform the operation below. The operation here explains how to uninstall the FOMA communication setup files using Windows XP as an example.

● Operate as the user who has the PC administrator right.

- 1 If the FOMA phone is connected to a personal computer via the FOMA USB Cable with Charge Function 01 (option), disconnect the FOMA USB Cable with Charge Function 01.
- 2 “スタート (Start)” ▶ “コントロールパネル (Control panel)” ▶ Open “プログラムの追加と削除 (Add and delete programs)”.
- 3 Select “FOMA P905i USB” and click “変更と削除 (Change and delete)”.
- 4 Click “OK”.

5 Click “はい (Yes)” to restart Windows.

The uninstallation is then completed.

- If you click “いいえ (No)”, restart Windows manually.

Information

- If you remove the FOMA USB Cable with Charge Function 01 from the personal computer while installing the “FOMA communication setup files” (driver) or click the “キャンセル (Cancel)” button to stop installation, the “FOMA communication setup files” (driver) may not be installed correctly. In this case, open “USB Driver” → “Win2k_XP” inside “FOMA P905i CD-ROM”, and execute “p905i_un.exe” to delete the “FOMA communication setup files” (driver), and then install the files again.

<Dial-up Communication Service>

Preparing Bluetooth Communication

You can make data communication by connecting a Bluetooth compatible personal computer wirelessly to your FOMA phone.

Connect to Personal Computer for the First Time

To connect a personal computer to the FOMA phone for the first time, register the personal computer to the FOMA phone.

- 1 ▶ LifeKit ▶ Bluetooth
▶ Accept dialup devices


2 Enter your Terminal Security Code.

- To cancel, press in standby. When no connection is made for five minutes in standby, the connection is automatically released.
- During standby, “ (blue)” lights.

3 Search and register the Bluetooth device from the personal computer.

- Register the device from the personal computer while the FOMA phone is in standby.
- Refer to the operating manual of your personal computer for the details of how to operate it.
(Depending on the personal computer you use, “探索 (search)” or “サーチ (search)” is used instead of “検索 (search)”, and “ペアリング (pairing)” is used instead of “機器登録 (register devices)”.)

4 When the display for connection request appears, select “YES”.

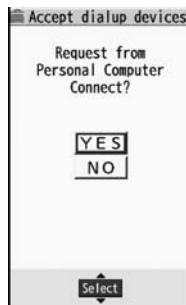

5 Select the text box for a Bluetooth pass key

▶ Enter the Bluetooth pass key ▶ Set

- You can enter 1 through 16 half-pitch alphanumeric characters for the Bluetooth pass key.
- Enter the same Bluetooth pass key for both the FOMA phone and personal computer.

6 The personal computer is registered and a wireless connection starts.

When the connection is completed,  (blue) blinks.

Information

- You cannot place the devices using the Headset service or Hands-free service in the state of "Accept registered" while the FOMA phone is in the state of "Accept dialup devices".
- When the personal computer found multiple devices for registering the FOMA phone on the personal computer, identify the FOMA phone by the device name. When the personal computer found multiple devices having the same device names, identify the FOMA phone by the device address.
- In the state of "Accept dialup devices", searches are made from all the Bluetooth devices around, however, you cannot connect to any service other than the Dial-up Communication service.

■ To connect to the registered personal computer

When you connect to the FOMA phone from a registered personal computer, place "Dial-up" in the state of "Accept registered". Then you can make a connection from the personal computer to the FOMA phone by operating from the personal computer. You can connect even in the state of "Accept dialup devices".

Confirm the Modem

Before setting communication, confirm the name and COM port number of the modem used for connecting the dial-up service.

1 <For Windows XP>
"スタート (Start)" ▶ Open "コントロールパネル (Control panel)" ▶ "パフォーマンスとメンテナンス (Performance and maintenance)" ▶ Open "システム (System)".

<For Windows 2000>
"スタート (Start)" ▶ "設定 (Setting)" ▶ Open "コントロールパネル (Control panel)" ▶ Open "システム (System)".

2 Click the "ハードウェア (Hardware)" tab
▶ Click "デバイスマネージャ (Device manager)".

3 Click each device, then confirm the modem name or COM port number.

The modem name or COM port number is displayed under "ポート (COM&LPT) [Port (COM/LPT)]" and "モデム (Modem)".

To set an access point with the "FOMA PC setup software", see page 9.
To set an access point without the "FOMA PC setup software", see page 20 or page 29.

Have Dial-up Communication Service Closed

You can close the Dial-up Communication service that is connected.

1  ▶ LifeKit ▶ Bluetooth ▶ Device list

2 Select the Bluetooth device that is connected.

3 Dial-up ▶ YES

The Dial-up Communication service is closed.

FOMA PC Setup Software

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication. Using the "FOMA PC setup software", you can easily carry out the settings below. If required, you can set the packet communication and 64K data communication without using the "FOMA PC setup software". (See page 20 and page 29)

■ Easy setting

You can easily carry out "dial-up creation for FOMA data communication" and "Communication setup optimization" by following the guidance.

■ Communication setup optimization

Before using "FOMA packet communication", optimize communication settings in your personal computer.

To maximize the communication performance, communication setup optimization is needed.

■ Access point name (APN) setting

You can set an access point name (APN) required for packet communication.

The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication.

You need to register an access point name (APN) in the FOMA phone in advance, and specify the registration number (cid) in the access point number field for connection.

By the default, "mopera.ne.jp", the access point name (APN) of "mopera", is registered in cid*1, and "mopera.net", that of "mopera U", is registered in cid*3. To connect to another service provider or Intranet LAN, however, you need to set the access point name (APN).

※ "cid" is the abbreviation of "Context Identifier", the number for storing the packet communication access point name (APN) to the FOMA phone.

Information

- If the old-version "W-TCP設定ソフト (W-TCP setup software)", the old-version "FOMAデータ通信設定ソフト (FOMA data communication setup software)" or the older version than this "FOMA PC設定ソフト (FOMA PC setup software)" (older than version 4.0.0) is installed, uninstall it in advance.

Communication Setting by FOMA PC Setup Software

STEP1 Install Software

Install the “FOMA PC setup software”.

See page 9 for installation.

If the older version than this “FOMA PC setup software” (version 4.0.0) is already installed, you cannot install this “FOMA PC setup software”, so uninstall it in advance. See page 11 if the display appears to indicate that the old-version “W-TCP設定ソフト (W-TCP setup software)”, or the old-version “FOMAデータ通信設定ソフト (FOMA data communication setup software)” is installed.

STEP2 Prepare for Setup

Prepare for setup.

Before setup, confirm that the FOMA phone is connected to your personal computer and correctly recognized by the personal computer. See page 4 for how to connect the FOMA USB Cable with Charge Function 01 (option).

See page 7 for how to connect the Bluetooth devices.

If the FOMA phone is not correctly recognized by the personal computer, you cannot carry out settings and communication. See page 6 for confirming whether the FOMA phone is correctly recognized by the personal computer.

See page 4 through page 7 for how to install the “FOMA communication setup files” (driver).

STEP3 Setting Operation

Carry out the appropriate setting for the communication you use.

Setting the packet communication from “Easy Setting”

When using “mopera U” or “mopera” as an access point page 12

When using a provider other than “mopera U” or “mopera” page 13

Setting the 64K data communication from “Easy Setting”

When using “mopera U” or “mopera” as an access point page 14

When using a provider other than “mopera U” or “mopera” page 15

See page 18 for optimizing the packet communication performance.

See page 19 for setting an access point name (APN).

STEP4 Connection

Connect to the Internet.

Installing FOMA PC Setup Software

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication.

Using the “FOMA PC setup software”, you can easily set up dial-up, communication setup optimization, and access point name (APN).

● Operate as the user who has the PC administrator right.

Notes for Installing FOMA PC Setup Software

Confirm that the FOMA phone is correctly recognized by your personal computer

Before installing the “FOMA PC setup software”, you need to register the “FOMA communication setup files” (driver) correctly on the device of the personal computer. (See page 6)

■ When you connect the FOMA phone to your personal computer for the first time

The wizard shown below starts.

To use the FOMA data communication, you need to register the FOMA phone in your personal computer as a communication device.

See page 4 through page 7 for installation of the “FOMA communication setup files” (driver).



Install FOMA PC Setup Software

The explanation here uses the displays for when installing the FOMA PC setup software on Windows XP. The displays are slightly different depending on the personal computer you use.

1 Set the provided “FOMA P905i CD-ROM” into your personal computer.

2 To install the “FOMA PC setup software”, click “データリンクソフト・各種設定ソフト (Data link software/Setup software)”.

- If this display appears during installation of the “FOMA PC setup software”, close the display.



3 Click “インストール (Install)” under “FOMA PC 設定ソフト (FOMA PC setup software)”.



When you click “インストール (Install)”, an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

- When the “ファイルのダウンロード - セキュリティの警告 (File download - Security alert)” window appears: Click “実行 (Execute)”.



- When the “Internet Explorer - セキュリティの警告 (Internet Explorer - Security alert)” window appears: Click “実行する (Execute)”.



4 Click “次へ (Next)”.

Before starting setup, check that no other programs are currently running. If any program is running, click “キャンセル (Cancel)” to save and exit the program, then restart installation.

- See page 11 if the display appears to indicate that the old-version “W-TCP設定ソフト (W-TCP setup software)”, old-version “FOMA データ通信設定ソフト (FOMA data communication setup software)” or old-version “FOMA PC設定ソフト (FOMA PC setup software)” is installed.

5 Confirm the displayed contract contents.

If you agree with the contents, click “はい (Yes)”.

6 Select a setup type.

After setup, you can select whether “Communication setup optimization” resides on the task tray. To make it reside, check “タスクトレイに常駐する (Reside on the task tray)” and click “次へ (Next)”, then continue installation.

- Even if you do not check “タスクトレイに常駐する (Reside on the task tray)”, you can select “メニュー (Menu)” → “通信設定最適化をタスクトレイに常駐させる (Make the communication setup optimization reside on the task tray)” on the “FOMA PC setup software” to modify settings.



The “W-TCP” icon appears on the task tray at the bottom right (ordinarily) of the desk top.



7 Confirm the installation destination, then click “次へ (Next)”.

To change the installation destination, click “参照 (Browse)”; specify any installation destination; then click “次へ (Next)”.

(You can install the FOMA PC setup software in a different drive, however, proceed without changing unless you have a problem on hard disk space, etc.)



8 Confirm the program folder name, then click “次へ (Next)”.

To change the program folder name, enter a new one, then click “次へ (Next)”.



9 Click “完了 (Complete)”.

After setup is completed, the “FOMA PC setup software” operation display appears.

■Displays at installation of the “FOMA PC setup software”

When the old-version “W-TCP 設定ソフト (W-TCP setup software)” is installed

A warning display appears.

From “アプリケーションの追加と削除 (Add and delete application)”, uninstall the old-version “W-TCP 設定ソフト (W-TCP setup software)”.

When the old-version “FOMA データ通信設定ソフト (FOMA data communication setup software)” is installed

A warning display appears.

From “アプリケーションの追加と削除 (Add and delete application)”, uninstall the old-version “FOMA データ通信設定ソフト (FOMA data communication setup software)”.

When the older version than this “FOMA PC 設定ソフト (FOMA PC setup software)” (version 4.0.0) is installed

A warning display appears.

From “アプリケーションの追加と削除 (Add and delete application)”, uninstall the old-version “FOMA PC 設定ソフト (FOMA PC setup software)”.

When you click “キャンセル (Cancel)” during the installation

A confirmation display appears when you click “キャンセル (Cancel)” or “いいえ (No)” during the setup operation. To continue the installation, click “いいえ (No)”. To intentionally cancel, click “はい (Yes)” and “完了 (Complete)”.

■Checking the version information about “FOMA PC setup software”



Select “メニュー (Menu)”→“バージョン情報 (Version information)” from the menu of the “FOMA PC setup software”.

The version information about the “FOMA PC setup software” is displayed.

Setting Communication

The operation below explains how to carry out various settings related to the packet communication and 64K data communication.

There are “auto setting” for easy operation and “manual setting” for the user familiar with personal computers. Before setting, confirm that the FOMA phone is connected to your personal computer.


1 “スタート (Start)”▶ “すべてのプログラム (All programs)”▶ “FOMA PC 設定ソフト (FOMA PC setup software)”▶ Open “FOMA PC 設定ソフト (FOMA PC setup software)”.

<For Windows 2000>

Select “スタート (Start)”→“プログラム (Programs)”→“FOMA PC 設定ソフト (FOMA PC setup software)”→Open “FOMA PC 設定ソフト (FOMA PC setup software)”

Using this PC setup software, you can easily create FOMA dial-up setting by answering (selecting and entering) the displayed questions according to “the information of connected provider” and “connection method” you selected.


- See page 12 for setting the packet communication from “かんたん設定 (Easy Setting)”.
- See page 14 for setting the 64K data communication from “かんたん設定 (Easy Setting)”.
- See page 18 for executing “通信設定最適化 (communication setup optimization)”.
- See page 19 for setting “接続先 (APN) 設定 [access point name (APN) setting]”.

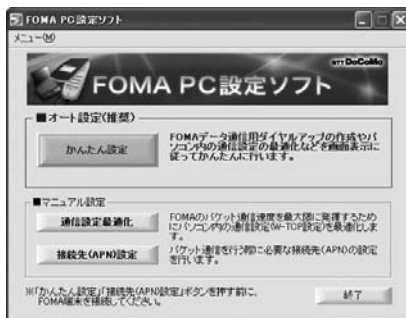

Specify Communication Port

1 “メニュー (Menu)” of “FOMA PC setup software” ▶ Select “通信設定 (Communication setup)”.

- ・自動設定 (推奨) [Auto-setup (recommended)]
The connected FOMA phone is automatically specified. Usually, select “Auto-setup”.
- ・COMポート指定 (Specifying COM port)
When specifying a COM port number, specify the COM port number (COM1 through 99) the FOMA phone is connected to.
- If you could not connect the FOMA phone by “Auto-setup” for connecting wirelessly using Bluetooth, specify the COM port number.
- See page 20 for how to check the COM port number.

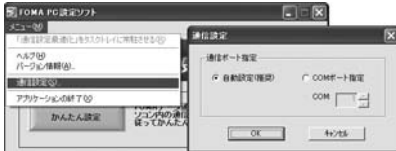

2 Click “OK”.

The settings are applied.

Select Packet Communication from “かんたん設定 (Easy Setting)”

Using “mopera U” or “mopera” as an access point

This section explains how to make settings for a high-speed packet communication of 3.6 Mbps maximum. This setting is for when you use DoCoMo Internet connection service “mopera U” or “mopera” as a provider.


High-speed packet communication:
You are charged according to the amount of data sent/received. You can execute data communication without worrying about time.

High-speed packet communication of up to 3.6 Mbps for receiving and up to 384 kbps for sending is available.

Note that a communication fee becomes expensive if you send/receive a large amount of data such as by browsing web pages having many images, or by downloading the data.

- The communication speed for both sending and receiving is up to 384 kbps for “mopera” connection.

1 Click “かんたん設定 (Easy Setting)”.

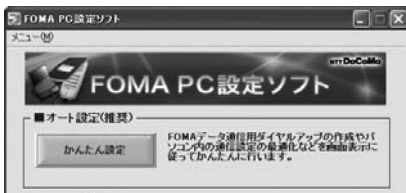

2 Select “パケット通信 (HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminal))”, then click “次へ (Next)”.

Confirm that “パケット通信 (HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminal))” is checked, then click “次へ (Next)”.

3 Select “『mopera U』への接続 (Connect to mopera U)” or “『mopera』への接続 (Connect to mopera)”, then click “次へ (Next)”.

To use “mopera U”, select “『mopera U』への接続 (Connect to mopera U)”. To use “mopera”, select “『mopera』への接続 (Connect to mopera)”.

When “『mopera U』への接続 (Connect to mopera U)” is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click “はい (YES)”.

- See page 13 for using a provider other than “mopera U” or “mopera”.

4 Click “OK”.

- The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

5 Enter an access point name, then click “次へ (Next)”.

You can specify any name for the currently created connection.

Enter a plain name in the “接続名 (Connection name)” field.

- You cannot enter the following half-pitch characters:

¥, /, :, *, ?, !, <, >, |, and “”.

- When connecting wirelessly using Bluetooth, “モデム名 (Modem name)” becomes the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- For the setting of “発信者番号通知 (caller ID notification)”, select “設定しない (推奨) [Not set (recommended)]” for overseas use.
- “mopera U” supports connection types of both “PPP接続 (PPP connection)” and “IP接続 (IP connection)”. For overseas use, select “IP接続 (IP connection)”.



6 Click “次へ (Next)”.

If the access point is “mopera U” or “mopera”, you can connect even if the “ユーザ名 (user name)” and “パスワード (password)” fields are blank.

- Select a user optionally.

7 Put a check mark for “最適化を行う (Optimize)”, then click “次へ (Next)”.

- If optimized already, the confirmation display to optimize does not appear.

8 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

9 Click “OK”.

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 16)

- To make the optimization valid, you need to restart the personal computer.




Using a provider other than “mopera U” or “mopera” as an access point

The packet communication is a communication system you are charged according to the amount of data you sent and received, regardless of the communication time and distance. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps)

To use a provider other than “mopera”, you may need to separately apply for the service and sign a contract with the provider.

1 Click “かんたん設定 (Easy Setting)”.

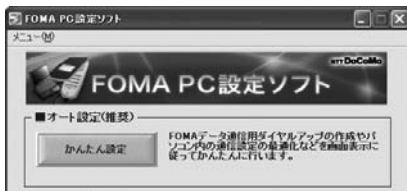

2 Select “パケット通信 (HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminal))”, then click “次へ (Next)”.

Confirm that “パケット通信 (HIGH-SPEED対応端末) (Packet communication (HIGH-SPEED compatible terminal))” is checked, then click “次へ (Next)”.

3 Select “その他 (Others)”, then click “次へ (Next)”.

Confirm that “その他 (Others)” is checked, then click “次へ (Next)”.

4 Click “OK”.

- The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

5 Enter an access point name.

You can specify any name for the currently created connection.

Enter a plain name in the “接続名 (Access point name)” field.

- You cannot enter the following half-pitch characters: ¥, /, ., *, ?, !, <, >, |, and “.”.
- In the “接続先 (APN) の選択 [Select an access point name (APN)]” field, “mopera.ne.jp (PPP接続) [mopera.ne.jp (PPP connection)]” is displayed as the default. Go to the “接続先 (APN) 設定 [Set an access point name (APN)]” display.
- When connecting wirelessly using Bluetooth, “モデム名 (Modem name)” becomes the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- For the setting of “発信者番号通知 (caller ID notification)”, follow the information from the provider and others. For overseas use, select “設定しない (Not set)”.



6 Click “接続先 (APN) 設定 [Set an access point name (APN)]”.

“mopera.ne.jp” is registered in “cid1” and “mopera.net” is registered in “cid3” by default. Click “追加 (Add)”, then enter the correct access point name (APN) for FOMA packet communication on the “接続先 (APN) の追加 [Add an access point name (APN)]” display. Click “OK”. The “パケット通信設定 (Packet communication setting)” display returns. Select the access point name (APN) you specified newly. If it is ok, click “OK”.

- For a provider access point name (APN) or supported connection types, contact your provider.



7 Click “詳細情報の設定 (Set detailed information)”.

The display for specifying “IPアドレス (IP address)” and “ネームサーバー (name server)” appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click “OK”.

8 Click “次へ (Next)”.

9 Specify “ユーザー名 (User name)” and “パスワード (Password)”, then click “次へ (Next)”.

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.

- Select a user optionally.



10 Put a check mark for “最適化を行う (Optimize)”, then click “次へ (Next)”.

- If optimized already, the confirmation display to optimize does not appear.

11 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

12 Click “OK”.

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 16)

- To make the optimization valid, you need to restart the personal computer.




Select 64K Data Communication from “かんたん設定 (Easy Setting)”

Using “mopera U” or “mopera” as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) You can use the DoCoMo Internet access service, “mopera U”/“mopera”.

1 Click “かんたん設定 (Easy Setting)”.

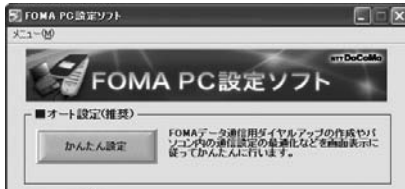

2 Select “64Kデータ通信 (64K data communication)”, then click “次へ (Next)”.

Confirm that “64Kデータ通信 (64K data communication)” is checked, then click “次へ (Next)”.

3 Select “『mopera U』への接続 (Connect to mopera U)” or “『mopera』への接続 (Connect to mopera)”, then click “次へ (Next)”.

To use “mopera U”, select “『mopera U』への接続 (Connect to mopera U)”. To use “mopera”, select “『mopera』への接続 (Connect to mopera)”.

When “『mopera U』への接続 (Connect to mopera U)” is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click “はい (YES)”.

- See page 15 for using a provider other than “mopera U” or “mopera”.

4 Enter an access point name, then click “次へ (Next)”.

You can specify any name for the currently created connection.

Enter a plain name in the “接続名 (Access point name)” field.

Confirm that “FOMA P905” is displayed in the “モデムの選択 (Select a modem)” field.

- You cannot enter the following half-pitch characters: ¥, /, :, *, ?, !, <, >, |, and “”.
- When connecting wirelessly using Bluetooth, select the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “モデムの選択 (Select a modem)” field.
- Set whether to notify your caller ID for dial-up connection. You need to notify your caller ID for connecting to “mopera U” or “mopera”.



5 Click “次へ (Next)”.

If the access point is “mopera U” or “mopera”, you can connect even if the “ユーザー名 (user name)” and “パスワード (password)” fields are blank.

- Select a user optionally.

6 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

7 Click “OK”.

The setting is completed.


Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 16)



Using a provider other than “mopera U” or “mopera” as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) To use a provider other than “mopera”, you may need to separately apply for the service and sign a contract with the provider.

1 Click “かんたん設定 (Easy Setting)”.

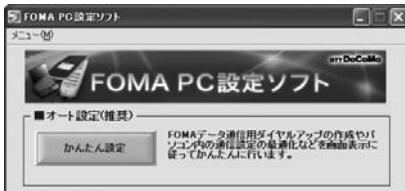

2 Select “64Kデータ通信 (64K data communication)”, then click “次へ (Next)”.

Confirm that “64Kデータ通信 (64K data communication)” is checked, then click “次へ (Next)”.

3 Select “その他 (Others)”, then click “次へ (Next)”.

Confirm that “その他 (Others)” is checked, then click “次へ (Next)”.

4 Enter dial-up information.

When connecting to a provider supporting ISDN-synchronous 64K other than “mopera U” or “mopera”, register the following items when creating the dial-up.

- ① “接続名 (Access point name)” (arbitrary)
- ② “モデムの選択 (Select a modem)” (FOMA P905i)
- ③ “電話番号 (Phone number of provider access)”
- ④ Set whether to notify your caller ID for dial-up connection.

Correctly enter these items according to the provider information.

- For the setting of the caller ID notification, follow the instructions from the provider you use.
- You cannot enter the following half-pitch characters in the “接続名 (Access point name)” field: ¥, /, ;, *, ?, !, <, >, |, and “.”.
- When connecting wirelessly using Bluetooth, select the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “モデムの選択 (Select a modem)” field.



5 Click “詳細情報の設定 (Set detailed information)”.

The display for specifying “IPアドレス (IP address)” and “ネームサーバー (name server)” appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click “OK”.

6 Click “次へ (Next)”.

7 Specify “ユーザー名 (User name)” and “パスワード (Password)”, then click “次へ (Next)”.

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.

- Select a user optionally.



8 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

9 Click “OK”.

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 16)



Carrying Out Set Communication

The operation below explains how to make a dial-up connection using Windows XP as an example. Perform the operation on page 4 to connect the FOMA phone to your personal computer.

1 Double-click the dial-up shortcut icon on the desktop.

Open the FOMA connection shortcut icon created at communication setting; the connection display for starting communication appears.

- Bring up the icon by the following operations if it is not displayed:

<For Windows XP>

“スタート (Start)”→“すべてのプログラム (All programs)”→“アクセサリ (Accessories)”→“通信 (Communications)”→“ネットワーク接続 (Network connection)”

<For Windows 2000>

“スタート (Start)”→“プログラム (Program)”→“アクセサリ (Accessories)”→“通信 (Communications)”→“ネットワークとダイヤルアップ接続 (Network and dial-up connections)”



2 Enter “ユーザー名 (User name)” and “パスワード (Password)”, then click “ダイヤル (Dial)”.

- For “mopera U” or “mopera”, you can connect even if the “ユーザー名 (User name)” and “パスワード (Password)” fields are blank.
- When you put a check mark for “次のユーザーが接続するとき使用するために、このユーザー名とパスワードを保存する (Save this user name and the password for the next user to use for connecting)”, this user or all users do not need to enter them from the next time.



3 Click the dial-up icon on the task tray to check for the connection.


- You can start the browser software to browse web pages, use e-mail, and so on.



Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.

- During packet communication, the communication state appears on the FOMA phone.

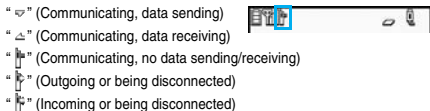

- During 64K data communication, “” appears on the FOMA phone.

Disconnecting

1 Click the dial-up icon on the task tray.



2 Click “切断 (Disconnect)”.

Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.

- The baud rate displayed on your personal computer may be different from the actual one.

Uninstalling FOMA PC Setup Software


Before Uninstalling

Before uninstalling the “FOMA PC setup software”, reset the contents modified for the FOMA phone to the default.



1 Exit the currently running programs.

- Exit the “通信設定最適化ソフト (Communication setup optimization software)”.

Right click “通信設定最適化ソフト (Communication setup optimization software)” on the task tray at the bottom right of the display, and select “終了 (Exit)”.

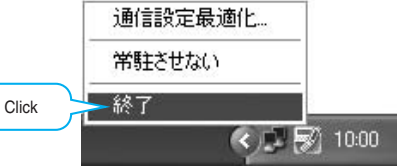

- Exit the “FOMA PC setup software”. Click “終了 (Exit)” at the bottom right of the FOMA PC setup software.
- If you try to uninstall during running of the “FOMA PC setup software” or “Communication setup optimization software”, the display below appears. Stop the uninstallation processing, and exit those programs.

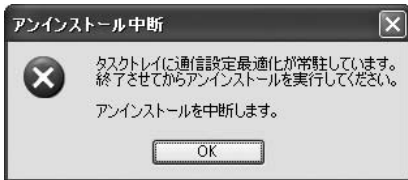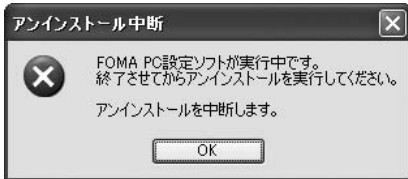

Uninstall

The explanation here uses the displays for when you uninstall the software on Windows XP. The displays differ depending on the personal computer you use.

- Operate as the user who has the PC administrator right.

1 “スタート (Start)”▶“コントロールパネル (Control panel)”▶Open “プログラムの追加と削除 (Add and delete programs)”.

<For Windows 2000>
“スタート (Start)”▶“設定 (Setting)”▶“コントロールパネル (Control panel)”▶“アプリケーションの追加と削除 (Add and delete applications)”

2 Select “NTT DoCoMo FOMA PC設定ソフト (NTT DoCoMo FOMA PC setup software)”, then click “削除 (Delete)”.



3 Confirm the name of the program you want to delete, then click “はい (Yes)”.


The uninstallation starts, and applications (programs) are deleted.

4 Click “完了 (Finish)”.

Uninstalling the “FOMA PC setup software” is completed.

■Releasing “通信設定最適化 (Communication setup optimization)”

If communication setup optimization is executed, the display below appears. Usually, click “はい (Yes)” to release the optimization.

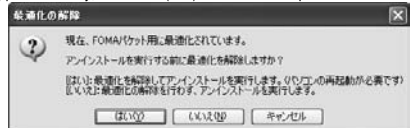

To make the settings valid, select “はい、今すぐコンピュータを再起動します。(Yes, restart computer right now)” and click “完了 (Complete)”.



Communication Setup Optimization

Role of Communication Setup Optimization

The “通信設定最適化 (Communication setup optimization)” is a “TCP parameter setup” tool used to optimize the TCP/IP transmission capability at packet communication via the FOMA network. To maximize the communication performance of the FOMA phone, you need to optimize the communication setting by this software. If you put a check mark for “最適化を行う (Optimize)” in “かんたん設定 (Easy Setting)” to create dial-up information, you do not need to carry out the optimization here.

- When you perform PC connection overseas, release the communication setup optimization before the connection.

Optimization Setting and Its Deletion

For Windows XP

For Windows XP, you can set optimization for each dial-up information. For HIGH-SPEED communication, however, all the communication settings are optimized.

- 1 <Operating from the “FOMA PC設定ソフト (FOMA PC setup software)”>
Start “FOMA PC設定ソフト (FOMA PC setup software)”, then click “通信設定最適化 (Communication setup optimization)” in “マニュアル設定 (Manual setup)”.



<Operating from the task tray>


Click the “Communication setup optimization icon” on the task tray to start the program.



- 2 <If the system setting is not optimized>
Click “最適化を行う (Optimize)”.
Select “FOMA HIGH-SPEED対応端末 (受信最大3.6Mbps) [FOMA HIGH-SPEED compatible terminal (Maximum download speed: 3.6 Mbps)]”. The confirmation display appears asking whether to optimize all the communication settings for the FOMA HIGH-SPEED compatible terminal, then click “はい (Yes)”.
<Releasing the optimization>
Click “最適化を解除する (Release optimization)”.
When releasing the setting to carry out communication via a device other than the FOMA phone, release the optimization.
- 3 Click “OK”.
- 4 Click “はい (Yes)”.
To make the settings valid, restart the personal computer.

For Windows 2000

- 1 <Operating from the “FOMA PC設定ソフト (FOMA PC setup software)”>
Start “FOMA PC設定ソフト (FOMA PC setup software)”, then click “通信設定最適化 (Communication setup optimization)” in “マニュアル設定 (Manual setup)”.

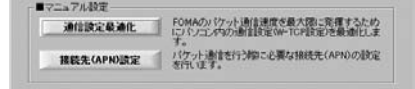

<Operating from the task tray>

Click the “Communication setup optimization icon” on the task tray to start the program.



- 2 <If not optimized>
Click “最適化を行う (Optimize)”.
When you select “FOMA HIGH-SPEED対応端末 (受信最大3.6Mbps) [FOMA HIGH-SPEED compatible terminal (Maximum download speed: 3.6 Mbps)]”, click “はい (Yes)”.
<If optimized>
Click “最適化を解除する (Release optimization)”.
When releasing the setting to carry out communication via a device other than the FOMA phone, release the optimization.
- 3 Click “OK”.
- 4 Click “はい (Yes)”.
To make the settings valid, restart the personal computer.

Access Point Name (APN) Setting

The operation below explains how to set an access point name (APN) for packet communication.

The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication. For each access point, register an access point name (APN) in the FOMA phone beforehand, then specify the registration number (cid) in the access point phone number field for connection. "cid" is the abbreviation of "Context Identifier", the number for storing the packet communication access point name (APN) in the FOMA phone. (See page 22)

- 1 Start the "FOMA PC設定ソフト (FOMA PC setup software)", then click "接続先 (APN) 設定 [Access point name (APN) setting]" in "マニュアル設定 (Manual setup)".



- 2 Click "OK".

When you click "OK", the system automatically accesses the connected FOMA phone and reads the registered "access point name (APN) setting". You can obtain the setting information also from "ファイル (File)"→"FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)" on the menu in step 3.

- 3 Set an access point name (APN).

• If the FOMA phone is not connected, this display does not appear.



Adding, editing, and deleting an access point name (APN)

- To add an access point name (APN), click "追加 (Add)".
- To edit (correct) a registered access point name (APN), click "編集 (Edit)".
- To delete a registered access point name (APN), select the target access point name (APN), then click "削除 (Delete)".
※ You cannot delete the access point name (APN) registered in "cid1" and "cid3". (Even if you select "cid3" and click "削除 (Delete)", it is not deleted actually and "mopera.net" returns.)

Saving data into a file

From the menu, select "ファイル (File)"→"上書き保存 (Overwrite and save)" or "名前を付けて保存 (Rename and save)"; you can back up the access point name (APN) setting registered in the FOMA phone or save the currently edited access point name (APN) setting.

Reading data from a file

From the menu, select "ファイル (File)"→"開く (Open)"; you can obtain the access point name (APN) setting saved in the personal computer.

Reading access point name (APN) information from the FOMA phone

From the menu, select "ファイル (File)"→"FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)"; you can obtain the access point name (APN) setting from the FOMA phone.

Writing access point name (APN) information to the FOMA phone

Click "FOMA端末へ設定を書き込む (Write the setting to the FOMA phone)"; you can write the displayed access point name (APN) setting to the FOMA phone.

You cannot write the IP information to the FOMA phone which does not support the IP connection.

Dial-up information creation function

Select an access point name (APN) you add or edit on the access point name (APN) setting display, then click "ダイヤルアップ作成 (Create dial-up information)"; you can create dial-up information for packet communication. If the access point name (APN) setting is not written to the FOMA phone, the FOMA phone setting writing confirmation display then appears, then click "はい (Yes)". After writing ends, the "パケット通信ダイヤルアップ作成画面 (packet communication dial-up information creation display)" appears. Enter any access point name, then click "アカウント・パスワードの設定 (Specify account and password)". (You can leave it blank to connect to "mopera U" or "mopera.")

Enter the user name and password, select the authorized user, and then click "OK".

If your Internet service provider instructs you to specify IP and DNS information, click "詳細情報の設定 (Set detailed information)", and register the required information. Then click "OK".

After entering information, click "OK". Dial-up is created.

See page 12 for using "mopera U" or "mopera".

See page 13 for using a provider other than "mopera U" or "mopera".

Information

- The access point name (APN) is information to be registered in the FOMA phone, so if you connect another FOMA phone, you need to register the access point name (APN) again.
- To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA phone.

Setting Dial-up Network

Set Packet Communication

The operation below explains how to set a connection for packet communication without using the “FOMA PC setup software”.

The packet communication uses AT commands to carry out the settings from a personal computer. To specify settings, communication software to enter AT command is required. “Hyper Terminal”, which is attached to Windows as the standard software, is used here for explanation.

When using DoCoMo Internet access service “mopera U” or “mopera”, you do not need to set an access point name (APN) (see page 21).

You can set “caller ID notified/not notified” (see page 23) as required. (You need to set “caller ID notified” when using “mopera U” or “mopera”.)

<Packet communication setting flow using AT commands>

Confirm the COM port number (See page 20)



Start the communication software that enables the entry of AT commands (See step 3 of “Set an Access Point Name (APN)” on page 21)



Set an access point name (APN) (See step 7 on page 22)



Set “caller ID notified/not notified” (See step 2 of “Set Caller ID Notified/Not Notified” on page 23)




Set others (See page 48)



Exit the communication software (See step 9 on page 22)

■AT commands

- The AT commands are used to control a modem. The FOMA phone, which conforms to the AT commands, supports some extended commands and unique AT commands.
- By entering AT commands, you can carry out detailed setting for packet communication and FOMA phone, and confirm (display) the setting contents.
- If the entered AT command is not displayed, enter “ATE1” .

Confirm COM Port Number

To manually carry out the communication setting, you need to specify a COM port number, which is assigned to “FOMA P905i” (modem) embedded after you install the “FOMA communication setup files” (driver). The confirmation method varies depending on the operating system of your personal computer.

- When using DoCoMo Internet access service “mopera U” or “mopera”, you do not need to set an access point name (APN); therefore, you do not need to confirm the modem.

For Windows XP

- 1 “スタート (Start)” ▶ Open “コントロールパネル (Control panel)”.
- 2 From “プリンタとその他のハードウェア (Printer and the other hardware)” in “コントロールパネル (Control panel)”, open “電話とモデムのオプション (Phone and modem options)”.
- 3 If the “所在地情報 (Address information)” display appears, enter “市外局番/エリアコード (City code/Area code)”, then click “OK”.
- 4 Open the “モデム (Modem)” tab, confirm the COM port number in the “接続先 (Access point)” field of “FOMA P905i”, then click “OK”.

- When connecting wirelessly using Bluetooth, confirm the COM port number of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “接続先 (Access point)” field.
- The COM port number you confirmed is used to set an access point name (APN) (see page 21).
- The contents on the property display and COM port number vary depending on the personal computer you use.



For Windows 2000

- 1 “スタート (Start)”▶“設定 (Setting)”▶Open “コントロールパネル (Control panel)”.
- 2 Open “電話とモデムのオプション (Phone and modem options)” in “コントロールパネル (Control panel)”.
- 3 If the “所在地情報 (Address information)” display appears, enter “市外局番 (City code)”, then click “OK”.
- 4 Open the “モデム (Modem)” tab, confirm the COM port number in the “接続先 (Access point)” field of “FOMA P905i”, then click “OK”.

- When connecting wirelessly using Bluetooth, confirm the COM port number of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “接続先 (Access point)” field.
- The COM port number you confirmed is used to set an access point name (APN) (see page 21).
- The contents on the property display and COM port number vary depending on the personal computer you use.



Set an Access Point Name (APN)

The operation below explains how to set an access point name (APN) for packet communication. You can register up to 10 access point names (APNs), which are managed with cid1 to cid10 (see page 22).

When using “mopera U” or “mopera”, you do not need to set the access point name (APN).

The operation below is the example where you use “XXX.abc” as the access point name (APN) and use the FOMA USB Cable with Charge Function 01 (option). For the actual access point name (APN), contact your Internet service provider or network administrator. The setting here will be the access point number for dial-up network setting (see page 23).

For Windows XP

- 1 Connect the FOMA USB Cable with Charge Function 01 to the FOMA phone.
- 2 Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

- 3 Start Hyper Terminal.

“スタート (Start)”→“すべてのプログラム (All programs)”→“アクセサリ (Accessories)”→“通信 (Communications)”→Open “ハイパーターミナル (Hyper Terminal)”.

After starting Hyper Terminal, when the message “ [既定のTelnet] プログラムにしますか? (Select the specified Telnet program?)” is displayed, set as desired. Contact the maker of your personal computer and Microsoft Corporation for the setting contents.

- For Windows 2000, “スタート (Start)”→“プログラム (Programs)”→“アクセサリ (Accessories)”→“通信 (Communications)”→Open “ハイパーターミナル (Hyper Terminal)”.

- 4 Enter any name in the “名前 (Name)” field, then click “OK”.

Here, “Sample” is entered as an example.




5 Select the connection method.

<When you can select the COM port number of "FOMA P905i">

Select the COM port number with which you install the "FOMA P905i" in the "接続方法 (Connection method)" field, then click "OK". Then, go to step 6.

- Here, "COM3" is selected as an example. See page 20 for the COM port number of "FOMA P905i" you should actually select in the "接続方法 (Connection method)" field.

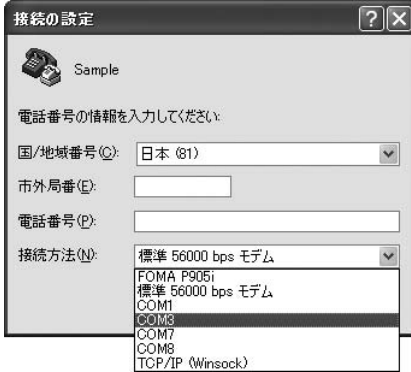

<When you cannot select the COM port number of "FOMA P905i">

Click "キャンセル (Cancel)" to close the "接続の設定 (Set a connection)" display, then perform the following operations:

- (1) "ファイル (File)" menu → Select "プロパティ (Properties)".
- (2) Select "FOMA P905i" in the "接続方法 (Connection method)" field of the "接続の設定 (Set a connection)" tab on the "Sample"のプロパティ (Sample properties)" display.
- (3) Uncheck "国/地域番号と市外局番を使う (Use country/region code and city code)".
- (4) Click "OK".

Then, go to step 7.



6 The properties of the COM port number appear on the display, then click "OK".

- This display appears when you select a COM port number in step 5.

7 Set an access point name (APN).

Enter an access point name (APN) in the following format:

AT+CGDCONT = cid, "PDP_type", "APN"

cid: Enter 2 or any number from 4 through 10.

※If you have already specified cid, be careful that its contents are overwritten by the access point name you enter here.

"PDP_type": Enter "PPP" or "IP".

"APN": Enclose an access point name (APN) in double quotation marks ("").

(Example: When specifying APN "XXX.abc" in cid2)


AT+CGDCONT=2,"PPP","XXX.abc"

Enter this character string, then press [Enter]. If "OK" appears, the APN setting is completed.

- To confirm the current APN setting, enter "AT+CGDCONT?" [Enter]. The set APNs are listed on the display.



8 Confirm that "OK" appears on the display.

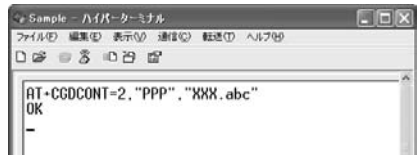

9 "ファイル (File)" menu ▶ Select "ハイパーターミナルの終了 (Exit Hyper Terminal)" to exit Hyper Terminal.

- If the message "現在、接続されています。切断してもよろしいですか?" (Currently connected. Do you want to disconnect this line?) appears, select "はい (Yes)".
- The message "セッションXXXを保存しますか?" (Do you want to save session XXX?) then appears. You do not need to especially save that session.

Information

- The access point name (APN) is information to be registered in the FOMA phone, so if you connect another FOMA phone, you need to register the access point name (APN) again.
- To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA phone.
- If the entered AT command is not displayed, enter "ATE1 [Enter]".

■cid (Registration number)

The FOMA phone has registration numbers, cid1 through cid10. cid1 contains "mopera.ne.jp" and cid3 contains "mopera.net" as an access point name (APN) by default. To connect to a provider other than "mopera U" or "mopera", you need to set the access point name (APN) to one of cid2 or cid4 through cid10 as specified by the provider or network administrator.

Default cid contents

Registration No. (cid)	Access point name (APN)
1	mopera.ne.jp (mopera)
2	Not set
3	mopera.net (mopera U)
4 to 10	Not set

■“Phone number” for connecting to an access point name (APN) you register in cid

“*99**<cid No.>#”

(Example) When connecting to the access point name (APN) you register in cid2, enter the following:
*99**2#

■Resetting/Confirming the access point name (APN) settings

You can use AT commands to reset/confirm the access point name (APN) settings.

Resetting access point name (APN)

The access point name (APN) for cid=1 returns to “mopera.ne.jp” (default), and for cid=3 returns to “mopera.net” (default); the settings for cid=2 and cid=4 through cid=10 are reset to being unregistered if you reset them.

(Entry method)

AT+CGDCONT=? (When resetting all the cid contents)

AT+CGDCONT=<cid> (When resetting only a specific cid)

Confirming access point name (APN)

The currently specified access point name appears on the display.

(Entry method)

AT+CGDCONT? ()

Information

- When using DoCoMo Internet access service “mopera U” or “mopera”, you need to set your caller ID to be “notified”.
- If the entered AT command is not displayed, enter “ATE1 ()”.

■Specifying “caller ID notified/not notified” in dial-up network

Also by dial-up network setting (see page 23), you can add “186 (notify)” or “184 (not notify)” to each access point number.

When you specify “186 (notify)” or “184 (not notify)” using both the *DGPIR command and dial-up network setting, the caller ID is set as follows:

Dial-up network setting (cid = 3)	Caller ID notification setting by *DGPIR command	Notify/Not notify caller ID
*99**3#	Not set	Notify
	Not notify	Not notify
	Notify	Notify
184*99**3#	Not set	Not notify
	Not notify	(“184” specified in the dial-up network has a priority)
	Notify	Notify
186*99**3#	Not set	Notify
	Not notify	(“186” specified in the dial-up network has a priority)
	Notify	Notify

- To connect to “mopera U” or “mopera”, you need to notify your caller ID.

Set Caller ID Notified/Not Notified

For packet communication, you can specify whether to notify your caller ID (caller ID notified/not notified).

The caller ID is your important information; so, take a great care to notify your caller ID. You can use AT commands (*DGPIR command) to specify “caller ID notified/not notified” before dial-up connection.

1 Start the communication software such as “Hyper Terminal”.

- See page 21 for details on how to operate “Hyper Terminal”.

2 Use the *DGPIR command (see page 50) to specify “caller ID notified/not notified”.

- To automatically add “184 (not notify)” for outgoing or incoming call, enter the following:
AT+DGPIR=1 ()
- To automatically add “186 (notify)” for outgoing or incoming call, enter the following:
AT+DGPIR=2 ()



3 Confirm that “OK” appears on the display.



Set Dial-up Network for Windows XP

- 1 “スタート (Start)” ▶ “すべてのプログラム (All programs)” ▶ “アクセサリ (Accessories)” ▶ “通信 (Communications)” ▶ Open “新しい接続ウィザード (New connection wizard)”.
- 2 When the “新しい接続ウィザード (New connection wizard)” display appears, click “次へ (Next)”.



- 3 Select “インターネットに接続する (Connect to the Internet)”, then click “次へ (Next)”.
- 4 Select “接続を手動でセットアップする (Manually set up the connection)”, then click “次へ (Next)”.

5 Select “ダイヤルアップモデムを使用して接続する (Use a dial-up modem for connection)”, then click “次へ (Next)”.

6 If the “デバイスの選択 (Select a device)” display appears, check “FOMA P905i” only, then click “次へ (Next)”.

- When connecting wirelessly using Bluetooth, put a check mark for only the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- The “デバイスの選択 (Select a device)” display appears only when you have registered two or more modems.



7 Enter any name in the “ISP 名 (ISP name)” field, then click “次へ (Next)”.

- Here, “SAMPLE” is entered as an example.



8 Enter an access point number in the “電話番号 (Phone number)” field, then click “次へ (Next)”.

- When connecting to “mopera U”, enter “*99**3#” as the access point number.
See page 22 for access point numbers other than “mopera U”.



9 Enter the user name and password supplied from your Internet service provider or network administrator in the “ユーザー名 (User name)”, “パスワード (Password)” and “パスワードの確認入力 (Confirm the password)” fields. Then click “次へ (Next)”.

- When connecting to “mopera U” or “mopera”, you can leave the user name and password fields blank.



10 Click “完了 (Complete)”.


11 スタート (Start) ▶ “すべてのプログラム (All programs)” ▶ “アクセサリ (Accessories)” ▶ “通信 (Communications)” ▶ Open “ネットワーク接続 (Connect to network)”.

12 Select the dial-up icon; then “ネットワークタスク (Network task)” ▶ Select “この接続の設定を変更する (Modify this connection setting)”.

Here, click the icon of the name you entered in step 7.



13 Click the “全般 (General)” tab to confirm the setting contents.

When two or more modems are connected to your personal computer, confirm that “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” is checked in the “接続方法 (Connection method)” field. If it is not checked, check it. If two or more modems are checked, click the  button to position the priority level of “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” to the top or uncheck modems other than “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker”.

When “ダイヤル情報を使う (Use dial information)” is checked, uncheck it.

- The COM port number allocated to “FOMA P905i” or “the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” varies depending on the personal computer you use.
 - When connecting to “mopera U”, enter “*99***3#” as the access point number.
- See page 22 for access point numbers other than “mopera U”.



14 Click the “ネットワーク (Network)” tab, then carry out respective settings.

In the “呼び出すダイヤルアップサーバーの種類 (Type of calling dial-up server)” field, select “PPP: Windows 95/98/NT4/2000, Internet”.


In the “この接続は次の項目を使用します (Use the following items for this connection)” field, select “インターネットプロトコル (TCP/IP) [Internet protocol (TCP/IP)]”.

You cannot modify the setting of the “QoS パケットスケジューラ (QoS packet scheduler)” field; so use the default setting as it is. Next, click “設定 (Setting)”.

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.



15 Uncheck all the items, then click “OK”.

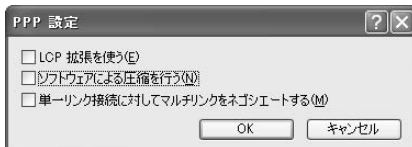

16 Return to the display in step 14, then click “OK”.

Set Dial-up Network for Windows 2000

- 1 “スタート (Start)” ▶ “プログラム (Programs)” ▶ “アクセサリ (Accessories)” ▶ “通信 (Communications)” ▶ Open “ネットワークとダイヤルアップ接続 (Network and dial-up connections)”.

- 2 Double-click “新しい接続の作成 (Create a new connection)” in “ネットワークとダイヤルアップ接続 (Network and dial-up connections)”.



3 If the “所在地情報 (Address information)” display appears, enter “市外局番 (City code)”, then click “OK”.

- The “所在地情報 (Address information)” display appears only when you first start “新しい接続の作成 (Create a new connection)” in step 2.
- At the second time or after, the “ネットワークの接続ウィザード (Network connection wizard)” display appears instead of this display. Go to step 5.

4 When “電話とモデムのオプション (Phone and modem options)” appears, click “OK”.

5 When the “ネットワークの接続ウィザード (Network connection wizard)” display appears, click “次へ (Next)”.



6 Select “インターネットにダイヤルアップ接続する (Dial-up connect to the Internet)”, then click “次へ (Next)”.

7 Select “インターネット接続を手動で設定するか、またはローカルエリアネットワーク (LAN) を使って接続します [Connect to Internet manually or via the local area network (LAN)]”, then click “次へ (Next)”.

8 Select “電話回線とモデムを使ってインターネットに接続します (Connect to Internet via a phone line and modem)”, then click “次へ (Next)”.

9 Confirm that “FOMA P905i” is displayed in the “インターネットへの接続に使うモデムを選択する (Select a modem for connection to Internet)” field. Then click “次へ (Next)”.

- If “FOMA P905i” is not selected in that field, select it.
- When connecting wirelessly using Bluetooth, select the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- The display below may not appear depending on the operating environment of your personal computer. In this case, go to step 10.



10 Enter an access point number in the “電話番号 (Phone number)” field.

- Leave the “市外局番 (City code)” field blank.
- Uncheck “市外局番とダイヤル情報を使う (Use city code and dial information)”.
- When connecting to “mopera U”, enter “*99**.*3#” as the access point number.
See page 22 for access point numbers other than “mopera U”.




11 Click “詳細設定 (Detailed setting)”.

12 Specify the items in the “接続 (Connection)” tab.

Enter “接続の種類 (Connection type)” and “ログオンの手続き (Logon procedure)” according to the information supplied by your Internet service provider or network administrator. Confirm the contents you entered, then click the “アドレス (Address)” tab.

- Contact your Internet service provider or network administrator for the setting contents of “接続 (Connection)” tab.

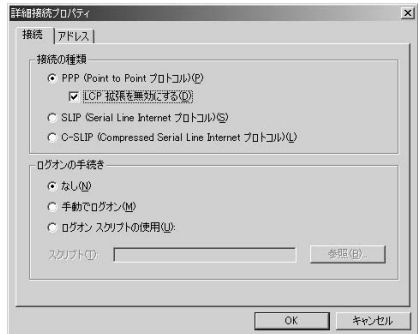


13 Specify IP address and DNS (domain name service) address.

Enter "IPアドレス (IP address)" and "ISPによるDNS (ドメインネームサービス) アドレスの自動割り当て" [Automatically allocate a DNS (domain name service) address by ISP] according to the information supplied from your Internet service provider or network administrator.

After you finish entering all the items, click "OK". The display in step 10 returns; then click "次へ (Next)".

- Contact your Internet service provider or network administrator for the setting contents of IP address and DNS address.

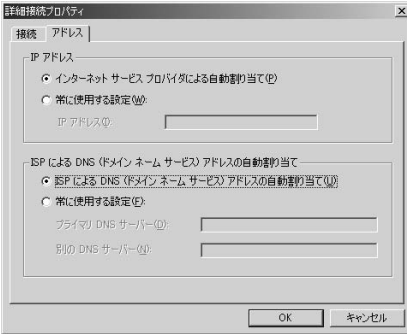

14 Enter the user name and password supplied from your Internet service provider or network administrator, in the "ユーザー名 (User name)" and "パスワード (Password)" fields. Then click "次へ (Next)".

- When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank. In this case, two displays "ユーザー名を空白のままにしておきますか?" (Do you want to make the user name blank?) and "パスワードを空白のままにしておきますか?" (Do you want to make the password blank?) appear. Click "はい (Yes)" on each display. Then go to step 15.



15 Enter any name in the "接続名 (Connection name)" field, then click "次へ (Next)".

- Here, "SAMPLE" is entered as an example.



16 Select "いいえ (No)", then click "次へ (Next)".

- When setting the Internet mail, select "はい (Yes)".
- Contact your Internet service provider or network administrator for details on the setting.

17 Then, carry out the "TCP/IP" setting.

- If the display below appears, uncheck "今すぐインターネットに接続するにはここを選び「完了」をクリックしてください" (To connect to the Internet right now, select here, then click "Complete"). Then click "完了 (Complete)".



18 "スタート (Start)" ▶ "プログラム (Programs)" ▶ "アクセサリ (Accessories)" ▶ "通信 (Communications)" ▶ Open "ネットワークとダイヤルアップ接続 (Network and dial-up connections)".

19 Select the icon of the access point name you entered in step 15; then "ファイル (File)" menu ▶ Select "プロパティ (Properties)".



20 Click the “全般 (General)” tab to confirm the setting contents.

- When two or more modems are connected to your personal computer, confirm that “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” is checked in the “接続方法 (Connection method)” field. If it is not checked, check it.
- Confirm that “ダイヤル情報を使う (Use dial information)” is unchecked. If it is checked, uncheck it.
- The COM port number allocated to “FOMA P905i” or “the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” varies depending on the personal computer you use.
- When connecting to “mopera U”, enter “*99**3#” as the access point number.
See page 22 for access point numbers other than “mopera U”.




21 Click the “ネットワーク (Network)” tab, then carry out respective settings.

In the “呼び出すダイヤルアップサーバーの種類 (Type of calling dial-up server)” field, select “PPP: Windows 95/98/NT4/2000, Internet”.

For the component, check only “インターネットプロトコル (TCP/IP) [Internet protocol (TCP/IP)]”.

Then click “設定 (Setting)”.

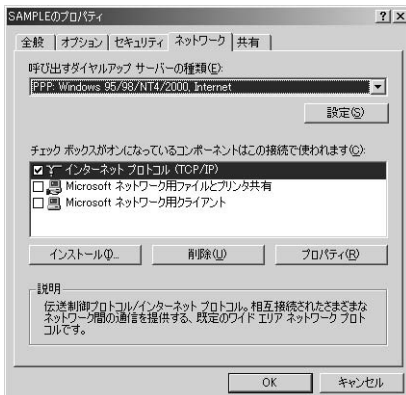

22 Uncheck all the items, then click “OK”.



23 Return to the display in step 21, then click “OK”.

Making Dial-up Connection

The operation below explains how to make a dial-up connection using Windows XP as an example. Perform the operation on page 4 to connect the FOMA phone to your personal computer.

- To perform a connection via packet communication, it is recommended that you optimize the communication performance by “Communication Setup Optimization” on page 18. By optimizing data, you can maximize the high-speed communication capability in the FOMA network. To execute the optimization, install “FOMA PC setup software” (see page 8).
- When you perform 64K data communication, do not optimize the communication performance by “Communication setup optimization”.

1 “スタート (Start)” ▶ “すべてのプログラム (All programs)” ▶ “アクセサリ (Accessories)” ▶ “通信 (Communications)” ▶ Open “ネットワーク接続 (Network connection)”.

2 Open the access point to be used.

Select the access point icon of the ISP name (see page 24) you specified in “Set Dial-up Network”, then “ネットワークタスク (Network task)” → “この接続を開始する (Start this connection)”. Otherwise, double-click the access point icon.



3 Confirm the contents and click “ダイヤル (Dial)”.

- When connecting to “mopera U” or “mopera”, you can leave the user name and password fields blank.

4 The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



5 The connection is completed.


After the connection is completed, the message below appears from the indicator of the task bar for a few seconds.

- You can start the browser software to browse web pages, use e-mail and so on.
- If this message does not appear, confirm the setting of the access point again.



Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.
 - “↔” (Communicating, data sending)
 - “△” (Communicating, data receiving)
 - “📶” (Communicating, no data sending/receiving)
 - “📶” (Outgoing or being disconnected)
 - “📶” (Incoming or being disconnected)
- During 64K data communication, “📶” appears on the FOMA phone.

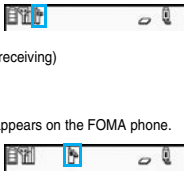

Disconnecting

- 1 Click the dial-up icon on the task tray.



- 2 Click “切断 (Disconnect)”.

Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

When you cannot connect to network

If you cannot connect to network (if you fail a dial-up connection), confirm the following items:

If this error occurs	Confirm those:
Your personal computer cannot recognize “FOMA P905i”	<ul style="list-style-type: none"> • Confirm whether your personal computer satisfies the operating environment (see page 2). • Confirm whether “FOMA communication setup files” (driver) is installed in your personal computer. • Confirm whether the FOMA phone is connected to your personal computer and powered on. • Confirm whether the FOMA USB Cable with Charge Function 01 (option) is securely connected. • Confirm whether the Bluetooth device is connected using the Dial-up service.
You cannot connect to the access point	<ul style="list-style-type: none"> • Confirm whether the ID (user name) and password are correct. • When you need to notify your caller ID such as when using “mopera U” or “mopera”, make sure “184” is not prefixed to the phone number. • Confirm that “フロー制御を使う (Use the flow control)” is checked in the modem properties. • If you cannot connect to the access point even after confirming above, contact your Internet service provider or network administrator for the setting method, and so on.

Set 64K Data Communication

The operation below explains how to set the 64K data communication without using “FOMA PC setup software”.

Setting dial-up connection and TCP/IP

The setting of dial-up connection and TCP/IP for the 64K data communication is the same as for the packet communication (see page 20).

Take care of the following points:

- In the 64K data communication, you do not need to set an access point name (APN). For the access point of the dial-up connection, enter the phone number of the access point specified by your Internet service provider or network administrator. (To connect to “mopera U”, enter “*8701” in the phone number field. To connect to “mopera”, enter “*9601” in the phone number field.)
- Set “caller ID notified/not notified” and “others” as required. (When connecting to “mopera U” or “mopera”, you need to notify your caller ID.)
- Contact your Internet service provider or network administrator for details on the setting contents.

Connecting and Disconnecting

You can operate in the same way as for the packet communication. Perform the operations on page 16 or page 28.

Using FirstPass PC Software

The FirstPass PC software is to access the FirstPass site from the web browser of your personal computer using the user certificate obtained by the FOMA phone supporting FirstPass.

Notes for Installing FirstPass PC Software

Confirm the operating environment

Use the FirstPass PC software under the following operating environment:

Item	Required environment
PC main unit	PC/AT compatible model
OS	Windows 2000, Windows XP (Japanese version in each)
Memory requirements	Windows 2000: 32 Mbytes or more* Windows XP: 128 Mbytes or more*
Hard disk space size	Unused memory space of 10 Mbytes or more*
Browser	Microsoft® Internet Explorer 5.5 or higher Microsoft® Internet Explorer 6.0 or higher when using Windows XP

*The memory requirements and hard disk space size may vary depending on the system environment.

Before installing

See “FirstPassManual” (PDF format) in the “FirstPassPCSoft” folder of the CD-ROM before installing the FirstPass PC software.

Install FirstPass PC Software

The explanation here uses the displays for when installing the FirstPass PC software on Windows XP. The displays are slightly different depending on the personal computer you use.


1 Set the provided “FOMA P905i CD-ROM” into your personal computer.

2 To install the FirstPass PC software, click “データリンクソフト・各種設定ソフト (Data link software/Setup software)”.



3 Click “インストール (Install)” under “FirstPass PCソフト (FirstPass PC software)”.

Then, perform the operations described in “簡易操作マニュアル (Easy operation manual)” (PDF format).

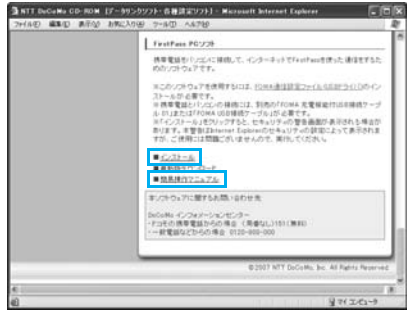

When you click “インストール (Install)”, an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

●When the “ファイルのダウンロード - セキュリティの警告 (File download - Security alert)” window appears: Click “実行 (Execute)”.



●When the “Internet Explorer - セキュリティの警告 (Internet Explorer - Security alert)” window appears: Click “実行する (Execute)”.



For Using Windows Vista

Installing FOMA Communication Setup Files (Driver)

Installing the FOMA communication setup files (driver) is required when you connect the FOMA phone with your personal computer via the FOMA USB Cable with Charge Function 01 (option) for the first time.

- When connecting wirelessly using Bluetooth, you do not need to install the FOMA communication setup files (driver).
- Operate as the user who has the PC administrator right.

- 1 Connect the FOMA phone and the FOMA USB Cable with Charge Function 01. (See page 4)
- 2 Start Windows, then set the provided “FOMA P905i CD-ROM” into the personal computer.
- 3 Click “データリンクソフト・各種設定ソフト (Data link software/Setup software)”.


- If this display appears during installation of the “FOMA communication setup files” (driver), close the display.



- 4 Click “インストール (Install)” under “FOMA通信設定ファイル (USBドライバ) [FOMA communication setup files (USB driver)]”.



- 5 Double click “FOMAinst.exe” in opened folder.
- 6 Read “ソフトウェア使用許諾契約書 (Software licensing contract)”, and click “同意する (Agree)”.

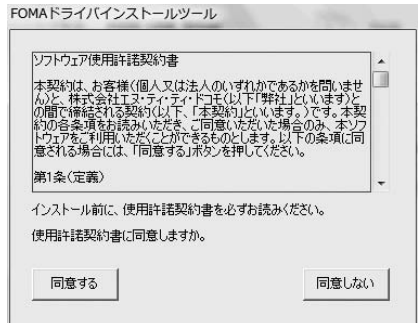

- 7 Turn on the power to the FOMA phone, then connect the FOMA USB Cable with Charge Function 01, which is already connected to the FOMA phone, to the personal computer.

Installation starts.

Pop-up message “新しいハードウェアが見つかりました (New hardware was found)” appears for a few seconds from the indicator of the task bar.


After you complete the installation, pop-up message “デバイスを使用する準備ができました。デバイスドライバソフトウェアが正しくインストールされました。(The system is ready to use the device. The device driver software was installed correctly.)” appears for a few seconds from the indicator of the task bar.

8 Click “インストールする (推奨) [Installing (recommended)]”.

Then install the FOMA byte counter.

Install by following the onscreen instructions.

- When you do not install the FOMA byte counter, go to step 9.

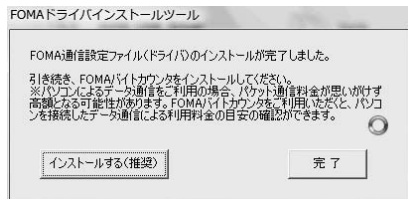


9 Click “完了 (Complete)”.

Next, confirm that the “FOMA communication setup files” (driver) are installed correctly. (See page 32)

Confirm Installed Driver


Confirm that the “FOMA communication setup files” (driver) are installed correctly.

1 “ [スタート (Start)]” ▶ Open “コントロールパネル (Control panel)” ▶ “システムとメンテナンス (System and maintenance)”

2 Open “ハードウェアとデバイスを表示 (Show hardware and devices)”
▶ Click “続行 (Continue)”.

3 Click each device, then confirm the installed driver names.

Confirm that all driver names are displayed under “ポート (COMとLPT) [Port (COM/LPT)]”, “モデム (Modem)”, and “ユニバーサル シリアルバス コントローラ (Universal serial bus controller)”.

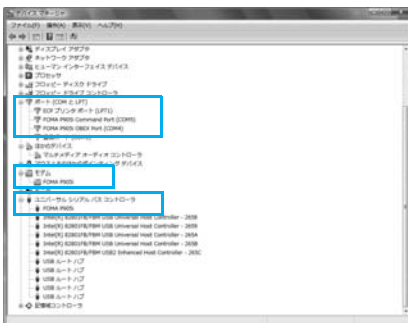

※The COM port number varies depending on the personal computer you use.

The following drivers are installed by installation of the “FOMA communication setup files” (driver):

Device name	FOMA communication setup file (driver) name
ポート (COMとLPT) [Port (COM/LPT)]	・ FOMA P905i Command Port ・ FOMA P905i OBEX Port
モデム (Modem)	・ FOMA P905i
ユニバーサル シリアルバス コントローラ (Universal serial bus controller)	・ FOMA P905i


To set an access point with the “FOMA PC setup software”, see page 35.
To set an access point without the “FOMA PC setup software”, see page 43 or page 47.

Uninstall FOMA Communication Setup Files (Driver)

When uninstalling the “FOMA communication setup files” (driver) is necessary (such as when upgrading the version), perform the operation below.

- Operate as the user who has the PC administrator right.

1 If the FOMA phone is connected to a personal computer via the FOMA USB Cable with Charge Function 01 (option), disconnect the FOMA USB Cable with Charge Function 01.

2 “ [スタート (Start)]” ▶ “コントロールパネル (Control panel)” ▶ Open “プログラムのアンインストール (Uninstall programs)”.

3 Select “FOMA P905i USB” and click “アンインストールと変更 (Uninstall and change)”
▶ Click “続行 (Continue)”.

4 Click “OK”.

5 Click “はい (Yes)” to restart Windows.

The uninstallation is then completed.

- If you click “いいえ (No)”, restart it manually.

Information

- If you remove the FOMA USB Cable with Charge Function 01 from the personal computer while installing the “FOMA communication setup files” (driver) or click the “キャンセル (Cancel)” button to stop installation, the “FOMA communication setup files” (driver) may not be installed correctly. In this case, open “USB Driver” → “WinVista32” inside “FOMA P905i CD-ROM”, and execute “p905i_un.exe” to delete the “FOMA communication setup files” (driver), and then install the files again.

Preparing Bluetooth Communication



You can make data communication by connecting a Bluetooth compatible personal computer wirelessly to your FOMA phone.

Connect to Personal Computer for the First Time

To connect a personal computer to the FOMA phone for the first time, register the personal computer to the FOMA phone.

1  LifeKit ▶ Bluetooth
▶ Accept dialup devices


2 Enter your Terminal Security Code.

- To cancel, press  (Power) in standby. When no connection is made for five minutes in standby, the connection is automatically released.
- During standby, “ (blue)” lights.

3 Search and register the Bluetooth device from the personal computer.

- Register the device from the personal computer while the FOMA phone is in standby.
- Refer to the operating manual of your personal computer for the details of how to operate it.
(Depending on the personal computer you use, “探索 (search)” or “サーチ (search)” is used instead of “検索 (search)”, and “ペアリング (pairing)” is used instead of “機器登録 (register devices)”.)


4 When the display for connection request appears, select “YES”.

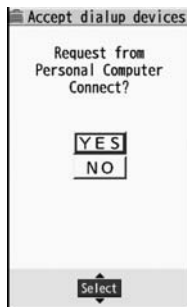

5 Select the text box for a Bluetooth pass key
▶ Enter the Bluetooth pass key ▶ Set

- You can enter 1 through 16 half-pitch alphanumeric characters for the Bluetooth pass key.
- Enter the same Bluetooth pass key for both the FOMA phone and personal computer.

6 The personal computer is registered and a wireless connection starts.

When the connection is completed, “ (blue)” blinks.

Information


- You cannot place the devices using the Headset service or Hands-free service in the state of “Accept registered” while the FOMA phone is in the state of “Accept dialup devices”.
- When the personal computer found multiple devices for registering the FOMA phone on the personal computer, identify the FOMA phone by the device name. When the personal computer found multiple devices having the same device names, identify the FOMA phone by the device address.
- In the state of “Accept dialup devices”, searches are made from all the Bluetooth devices around, however, you cannot connect to any service other than the Dial-up Communication service.

■ To connect to the registered personal computer

When you connect to the FOMA phone from a registered personal computer, place “Dial-up” in the state of “Accept registered”. Then you can make a connection from the personal computer to the FOMA phone by operating from the personal computer. You can connect even in the state of “Accept dialup devices”.

Confirm the Modem

Before setting communication, confirm the name and COM port number of the modem used for connecting the dial-up service.

1  [スタート (Start)] ▶ Open “コントロールパネル (Control panel)” ▶ “システムとメンテナンス (System and maintenance)”

2 Open “ハードウェアとデバイスを表示 (Show hardware and devices)”
▶ Click “続行 (Continue)”.

3 Click each device, then confirm the modem name or COM port number.

The modem name or COM port number is displayed under “ポート (COM & LPT) [Port (COM/LPT)]” and “モデム (Modem)”.

To set an access point with the “FOMA PC setup software”, see page 35.
To set an access point without the “FOMA PC setup software”, see page 43 or page 47.

Have Dial-up Communication Service Closed

You can close the Dial-up Communication service that is connected.

1  LifeKit ▶ Bluetooth ▶ Device list

2 Select the Bluetooth device that is connected.

3 Dial-up ▶ YES

The Dial-up Communication service is closed.

FOMA PC Setup Software

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication. Using the “FOMA PC setup software”, you can easily carry out the settings below. If required, you can set the packet communication and 64K data communication without using the “FOMA PC setup software”. (See page 43 and page 47)

■ Easy setting

You can easily carry out “dial-up creation for FOMA data communication” by following the guidance.

■ Access point name (APN) setting

You can set an access point name (APN) required for packet communication.

The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication.

You need to register an access point name (APN) in the FOMA phone in advance, and specify the registration number (cid) in the access point number field for connection.

By the default, “mopera.ne.jp”, the access point name (APN) of “mopera”, is registered in cid*1, and “mopera.net”, that of “mopera U”, is registered in cid*3. To connect to another service provider or Intranet LAN, however, you need to set the access point name (APN).

※“cid” is the abbreviation of “Context Identifier”, the number for storing the packet communication access point (APN) to the FOMA phone.

Information

- If the old-version “FOMAデータ通信設定ソフト (FOMA data communication setup software)” or the older version than this “FOMA PC設定ソフト (FOMA PC setup software)” (older than version 4.0.0) is installed, uninstall it in advance.

Communication Setting by FOMA PC Setup Software

STEP1 Install Software

Install the “FOMA PC setup software”.

See page 35 for installation.

If the older version than this “FOMA PC setup software” (version 4.0.0) is already installed, you cannot install this “FOMA PC setup software”, so uninstall it in advance. See page 36 if the display appears to indicate that the old-version “FOMAデータ通信設定ソフト (FOMA data communication setup software)” is installed.

STEP2 Prepare for Setup

Prepare for setup.

Before setup, confirm that the FOMA phone is connected to your personal computer and correctly recognized by the personal computer. See page 4 for how to connect the FOMA USB Cable with Charge Function 01 (option).

See page 33 for how to connect the Bluetooth devices.

If the FOMA phone is not correctly recognized by the personal computer, you cannot carry out settings and communication. See page 32 for confirming whether the FOMA phone is correctly recognized by the personal computer.

See page 31 through page 32 for how to install the “FOMA communication setup files” (driver).

STEP3 Setting Operation

Carry out the appropriate setting for the communication you use.

Setting the packet communication from “Easy Setting”

When using “mopera U” or “mopera” as an access point page 37

When using a provider other than “mopera U” or “mopera” page 38

Setting the 64K data communication from “Easy Setting”

When using “mopera U” or “mopera” as an access point page 39

When using a provider other than “mopera U” or “mopera” page 40

See page 42 for setting an access point name (APN).

STEP4 Connection

Connect to the Internet.

Installing FOMA PC Setup Software

To connect the FOMA phone to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication.

Using the "FOMA PC setup software", you can easily set up dial-up and access point name (APN).

- Operate as the user who has the PC administrator right.

Notes for Installing FOMA PC Setup Software

Confirm that the FOMA phone is correctly recognized by your personal computer

Before installing the "FOMA PC setup software", you need to register the "FOMA communication setup files" (driver) correctly on the device of the personal computer. (See page 32)

■When you connect the FOMA phone to your personal computer for the first time

The wizard shown below starts.

To use the FOMA data communication, you need to register the FOMA phone in your personal computer as a communication device.

See page 31 through page 32 for installation of the "FOMA communication setup files" (driver).




Install FOMA PC Setup Software

The displays are slightly different depending on the personal computer you use.

- 1 Set the provided "FOMA P905i CD-ROM" into your personal computer.
- 2 To install the "FOMA PC setup software", click "データリンクソフト・各種設定ソフト (Data link software/Setup software)".
 - If this display appears during installation of the "FOMA PC setup software", close the display.



- 3 Click "インストール (Install)" under "FOMA PC 設定ソフト (FOMA PC setup software)".

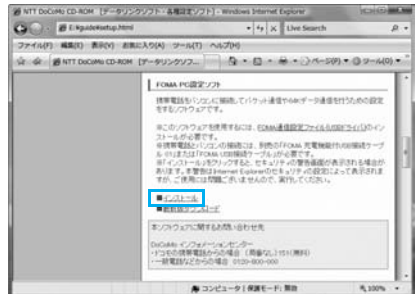

When you click "インストール (Install)", an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

- When the "ファイルのダウンロード - セキュリティの警告 (File download - Security alert)" window appears: Click "実行 (Execute)".



4 Click “続行 (Continue)” ▶ Click “次へ (Next)”.

Before starting setup, check that no other programs are currently running. If any program is running, click “キャンセル (Cancel)” to save and exit the program, then restart installation.

- See page 36 if the display appears to indicate that the old-version “FOMAデータ通信設定ソフト (FOMA data communication setup software)” or old-version “FOMA PC設定ソフト (FOMA PC setup software)” is installed.

5 Confirm the displayed contract contents.

If you agree with the contents, click “はい (Yes)”.

6 Confirm the installation destination, then click “次へ (Next)”.

To change the installation destination, click “参照 (Browse)”; specify any installation destination; then click “次へ (Next)”.

(You can install the FOMA PC setup software in a different drive, however, proceed without changing unless you have a problem on hard disk space, etc.)



7 Confirm the program folder name, then click “次へ (Next)”.

To change the program folder name, enter a new one, then click “次へ (Next)”.



8 Click “完了 (Complete)”.

After setup is completed, the “FOMA PC setup software” operation display appears.

■Displays at installation of the “FOMA PC setup software”

When the old-version “FOMAデータ通信設定ソフト (FOMA data communication setup software)” is installed


A warning display appears.

From “プログラムのアンインストール (Uninstall programs)”, uninstall the old-version “FOMAデータ通信設定ソフト (FOMA data communication setup software)”.

When you click “キャンセル (Cancel)” during the installation

A confirmation display appears when you click “キャンセル (Cancel)” or “いいえ (No)” during the setup operation. To continue the installation, click “いいえ (No)”. To intentionally cancel, click “はい (Yes)” and “完了 (Complete)”.

■Checking the version information about “FOMA PC setup software”

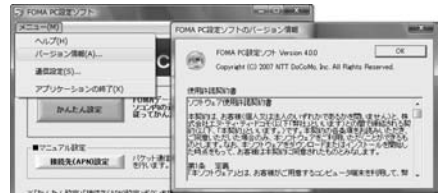

Select “メニュー (Menu)”→“バージョン情報 (Version information)” from the menu of the “FOMA PC setup software”.

The version information about the “FOMA PC setup software” is displayed.

Setting Communication


The operation below explains how to carry out various settings related to the packet communication and 64K data communication.

There are “auto setting” for easy operation and “manual setting” for the user familiar with personal computers. Before setting, confirm that the FOMA phone is connected to your personal computer.

1 “[スタート (Start)]” ▶ “すべてのプログラム (All programs)” ▶ “FOMA PC設定ソフト (FOMA PC setup software)” ▶ Open “FOMA PC設定ソフト (FOMA PC setup software)”.

Using this PC setup software, you can easily create FOMA dial-up setting by answering (selecting and entering) the displayed questions according to “the information of connected provider” and “connection method” you selected.

- See page 37 for setting the packet communication from “かんたん設定 (Easy Setting)”.
- See page 39 for setting the 64K data communication from “かんたん設定 (Easy Setting)”.
- See page 42 for setting “接続先 (APN) 設定 [access point name (APN) setting]”.

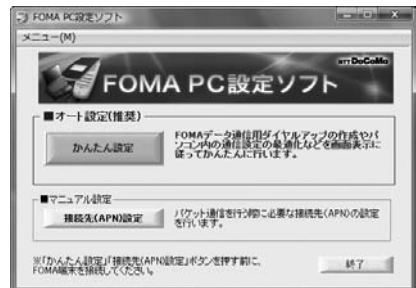

Specify Communication Port

1 “メニュー (Menu)” of “FOMA PC setup software” ▶ Select “通信設定 (Communication setup)”.

- ・自動設定 (推奨) [Auto-setup (recommended)]
The connected FOMA phone is automatically specified. Usually, select “Auto-setup”.
- ・COMポート指定 (Specifying COM port)
When specifying a COM port number, specify the COM port number (COM1 through 99) the FOMA phone is connected to.
- If you could not connect the FOMA phone by “Auto-setup” for connecting wirelessly using Bluetooth, specify the COM port number.
- See page 43 for how to check the COM port number.



2 Click “OK”.

The settings are applied.

Select Packet Communication from “かんたん設定 (Easy Setting)”

Using “mopera U” or “mopera” as an access point

This section explains how to make settings for a high-speed packet communication of 3.6 Mbps maximum. This setting is for when you use DoCoMo Internet connection service “mopera U” or “mopera” as a provider.

High-speed packet communication:


You are charged according to the amount of data sent/received. You can execute data communication without worrying about time.

High-speed packet communication of up to 3.6 Mbps for receiving and up to 384 kbps for sending is available.

Note that a communication fee becomes expensive if you send/receive a large amount of data such as by browsing web pages having many images, or by downloading the data.

- The communication speed for both sending and receiving is up to 384 kbps for “mopera” connection.

1 Click “かんたん設定 (Easy Setting)”.

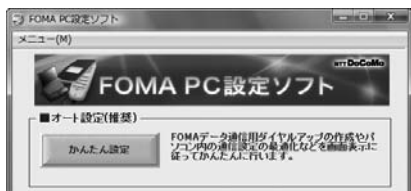

2 Select “パケット通信 (Packet communication)”, then click “次へ (Next)”.

Confirm that “パケット通信 (Packet communication)” is checked, then click “次へ (Next)”.

3 Select “『mopera U』への接続 (Connect to mopera U)” or “『mopera』への接続 (Connect to mopera)”, then click “次へ (Next)”.

To use “mopera U”, select “『mopera U』への接続 (Connect to mopera U)”. To use “mopera”, select “『mopera』への接続 (Connect to mopera)”. When “『mopera U』への接続 (Connect to mopera U)” is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click “はい (YES)”.

- See page 38 for using a provider other than “mopera U” or “mopera”.

4 Click “OK”.

- The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

5 Enter an access point name, then click “次へ (Next)”.

You can specify any name for the currently created connection. Enter a plain name in the “接続名 (Access point name)” field.

- You cannot enter the following half-pitch characters: ¥, /, ;, *, ?, !, <, >, !, and “.”.
- When connecting wirelessly using Bluetooth, “モデム名 (Modem name)” becomes the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- For the setting of “発信者番号通知 (caller ID notification)”, select “設定しない (推奨) [Not set (recommended)]” for overseas use.
- “mopera U” supports connection types of both “PPP接続 (PPP connection)” and “IP接続 (IP connection)”. For overseas use, select “IP接続 (IP connection)”.



6 Click “次へ (Next)”.

If the access point is “mopera U” or “mopera”, you can connect even if the “ユーザ名 (user name)” and “パスワード (password)” fields are blank.

7 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

8 Click “OK”.

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 41)




Using a provider other than “mopera U” or “mopera” as an access point

The packet communication is a communication system you are charged according to the amount of data you sent and received, regardless of the communication time and distance. (Maximum download speed: 3.6 Mbps, Maximum upload speed: 384 kbps)

To use a provider other than “mopera”, you may need to separately apply for the service and sign a contract with the provider.

1 Click “かんたん設定 (Easy Setting)”.

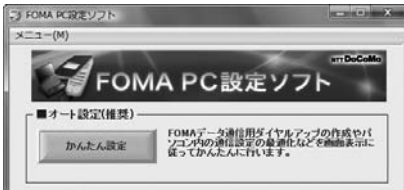

2 Select “パケット通信 (Packet communication)”, then click “次へ (Next)”.

Confirm that “パケット通信 (Packet communication)” is checked, then click “次へ (Next)”.

3 Select “その他 (Others)”, then click “次へ (Next)”.

Confirm that “その他 (Others)” is checked, then click “次へ (Next)”.

4 Click “OK”.

• The system obtains the access point name (APN) setting from the FOMA phone connected to the personal computer. Wait for a while.

5 Enter an access point name.

You can specify any name for the currently created connection. Enter a plain name in the “接続名 (Access point name)” field.


- You cannot enter the following half-pitch characters: \backslash , /, :, *, ?, !, <, >, |, and “”.
- In the “接続先 (APN) の選択 [Select an access point name (APN)]” field, “mopera.ne.jp [PPP接続] [mopera.ne.jp (PPP connection)]” is displayed as the default. Go to the “接続先 (APN) 設定 [Set an access point name (APN)]” display.
- When connecting wirelessly using Bluetooth, “モデム名 (Modem name)” becomes the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- For the setting of “発信者番号通知 (caller ID notification)”, follow the information from the provider and others. For overseas use, select “設定しない (Not set)”.



6 Click “接続先 (APN) 設定 [Set an access point name (APN)]”.

“mopera.ne.jp” is registered in “cid1” and “mopera.net” is registered in “cid3” by default. Click “追加 (Add)”, then enter the correct access point name (APN) for FOMA packet communication on the “接続先 (APN) の追加 [Add an access point name (APN)]” display. Click “OK”. The “パケット通信設定 (Packet communication setting)” display returns. Select the access point name (APN) you specified newly. If it is ok, click “OK”.

- For a provider access point name (APN) or supported connection types, contact your provider.

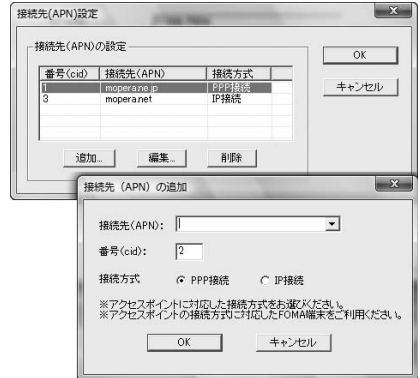


7 Click “詳細情報の設定 (Set detailed information)”.

The display for specifying “IPアドレス (IP address)” and “ネームサーバー (name server)” appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click “OK”.

8 Click “次へ (Next)”.

9 Specify “ユーザー名 (User name)” and “パスワード (Password)”, then click “次へ (Next)”.

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.

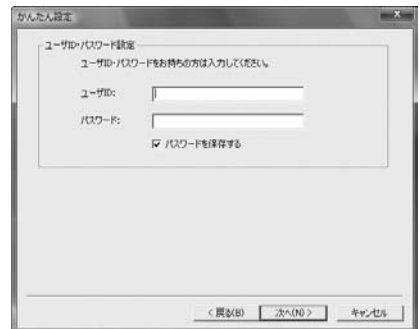

10 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

11 Click “OK”.

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 41)




Select 64K Data Communication from “かんたん設定 (Easy Setting)”

Using “mopera U” or “mopera” as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) You can use the DoCoMo Internet access service, “mopera U”/“mopera”.

1 Click “かんたん設定 (Easy Setting)”.

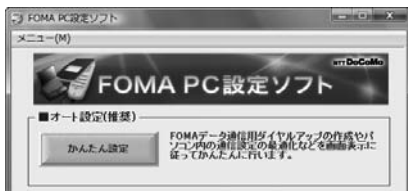

2 Select “64Kデータ通信 (64K data communication)”, then click “次へ (Next)”.

Confirm that “64Kデータ通信 (64K data communication)” is checked, then click “次へ (Next)”.

3 Select “『mopera U』への接続 (Connect to mopera U)” or “『mopera』への接続 (Connect to mopera)”, then click “次へ (Next)”.

To use “mopera U”, select “『mopera U』への接続 (Connect to mopera U)”. To use “mopera”, select “『mopera』への接続 (Connect to mopera)”. When “『mopera U』への接続 (Connect to mopera U)” is selected, the confirmation display appears asking whether you have signed up for it. If you have signed up, click “はい (YES)”.

- See page 40 for using a provider other than “mopera U” or “mopera”.

4 Enter an access point name, then click “次へ (Next)”.

You can specify any name for the currently created connection.

Enter a plain name in the “接続名 (Access point name)” field.

Confirm that “FOMA P905” is displayed in the “モデムの選択 (Select a modem)” field.

- You cannot enter the following half-pitch characters: ¥, /, ;, *, ?, /, <, >, |, and “”.
- When connecting wirelessly using Bluetooth, select the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “モデムの選択 (Select a modem)” field.
- Set whether to notify your caller ID for dial-up connection. You need to notify your caller ID for connecting to “mopera U” or “mopera”.



5 Click “次へ (Next)”.

If the access point is “mopera U” or “mopera”, you can connect even if the “ユーザ名 (user name)” and “パスワード (password)” fields are blank.

6 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

7 Click “OK”.

The setting is completed.


Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 41)



Using a provider other than “mopera U” or “mopera” as an access point

The 64K data communication is a communication system you are charged according to the duration of connection. (Maximum communication speed: 64 kbps) To use a provider other than “mopera”, you may need to separately apply for the service and sign a contract with the provider.

1 Click “かんたん設定 (Easy Setting)”.

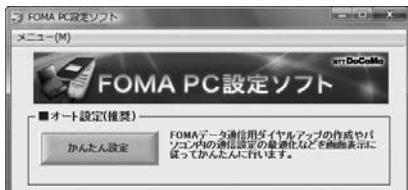

2 Select “64Kデータ通信 (64K data communication)”, then click “次へ (Next)”.

Confirm that “64Kデータ通信 (64K data communication)” is checked, then click “次へ (Next)”.

3 Select “その他 (Others)”, then click “次へ (Next)”.

Confirm that “その他 (Others)” is checked, then click “次へ (Next)”.

4 Enter dial-up information.

When connecting to a provider supporting ISDN-synchronous 64K other than “mopera U” or “mopera”, register the following items when creating the dial-up.

- ① “接続名 (Access point name)” (arbitrary)
- ② “モデムの選択 (Select a modem)” (FOMA P905i)
- ③ “電話番号 (Phone number of provider access)”
- ④ Set whether to notify your caller ID for dial-up connection.

Correctly enter these items according to the provider information.

- For the setting of the caller ID notification, follow the instructions from the provider you use.
- You cannot enter the following half-pitch characters in the “接続名 (Access point name)” field: ¥, /, :, *, ?, !, <, >, |, and “”.
- When connecting wirelessly using Bluetooth, select the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “モデムの選択 (Select a modem)” field.




5 Click “詳細情報の設定 (Set detailed information)”.

The display for specifying “IPアドレス (IP address)” and “ネームサーバー (name server)” appears. When entering dial-up information for the provider you have subscribed or Intranet LAN system, specify addresses according to the entry instruction information, then click “OK”.

6 Click “次へ (Next)”.

7 Specify “ユーザー名 (User name)” and “パスワード (Password)”, then click “次へ (Next)”.

When specifying the user name and password, correctly enter the information supplied from your Internet service provider, taking care of uppercase and lowercase letters and so on.

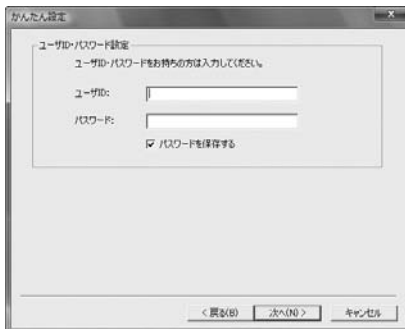

8 Confirm the set information, then click “完了 (Complete)”.

The set contents are listed on the display. Confirm that there is no problem on the set contents, then click “完了 (Complete)”.

- To change the set contents, click “戻る (Back)”.
- If “デスクトップにダイヤルアップのショートカットを作成する (Create a dial-up shortcut on the desktop)” is checked, a dial-up shortcut will be created on the desktop.

9 Click “OK”.

The setting is completed.

Open the dial-up shortcut icon automatically created on the desktop; then the connection display for starting communications appears. After confirming that the connection starts, you can start the Internet browser or mail browser for communication. (See page 41)



Carrying Out Set Communication

Perform the operation on page 4 to connect the FOMA phone to your personal computer.

1 “ [スタート (Start)]”

▶ Open “接続先 (Access point)”, select an access point and click “接続 (Connect)”.

- Open the FOMA connection shortcut icon created at communication setting; the connection display for starting communication appears. Bring up the icon by the following operations if it is not displayed:

→ “ [スタート (Start)]” → “コントロールパネル (Control panel)”
→ “ネットワークとインターネット (Network and Internet)”
→ “ネットワークと共有センター (Network and sharing center)”
→ “ネットワーク接続の管理 (Management of network connection)”

2 Enter “ユーザー名 (User name)” and “パスワード (Password)”, then click “ダイヤル (Dial)”.

- For “mopera U” or “mopera”, you can connect even if the “ユーザー名 (User name)” and “パスワード (Password)” fields are blank.
- When you put a check mark for “次のユーザーが接続するとき使用する” (Save this user name and the password for the next user to use for connecting), this user or all users do not need to enter them from the next time.




3 Check for the connection, then click “閉じる (Close)”.

- You can start the browser software to browse web pages, use e-mail, and so on.



Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.

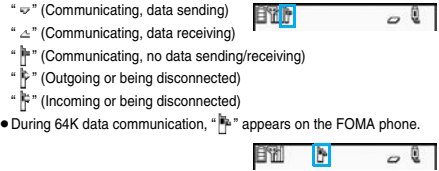

Disconnecting

1 “ [スタート (Start)]”

▶ Open “接続先 (Access point)”.

2 Select the icon which is communicating, then click “切断 (Disconnect)”

▶ Click “閉じる (Close)”.

Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.


Uninstalling FOMA PC Setup Software

Before Uninstalling

Before uninstalling the “FOMA PC setup software”, reset the contents modified for the FOMA phone to the default.

1 Exit the currently running programs.


- Click “終了 (Exit)” at the bottom right to exit the “FOMA PC setup software”.
- If you try to uninstall during running of the “FOMA PC setup software”, the display below appears. Stop the uninstallation processing, and exit the program.

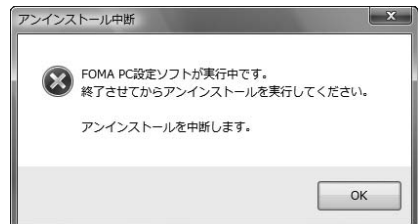


Uninstall

The displays differ depending on the personal computer you use.

- Operate as the user who has the PC administrator right.

1 “ [スタート (Start)]”▶“コントロールパネル (Control panel)”▶Open “プログラムのアンインストール (Uninstall programs)”.

2 Select “NTT DoCoMo FOMA PC設定ソフト (NTT DoCoMo FOMA PC setup software)”, then click “アンインストール (Uninstall)”▶Click “続行 (Continue)”.

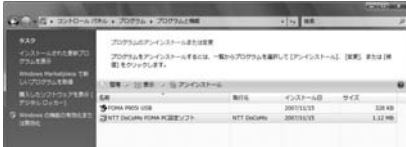

3 Click “はい (Yes)”.

The uninstallation starts, and applications (programs) are deleted.

 
4 Click “完了 (Finish)”.

Uninstalling the “FOMA PC setup software” is completed.

Access Point Name (APN) Setting

The operation below explains how to set an access point name (APN) for packet communication. The FOMA packet communication does not use an ordinary phone number as an access point unlike the 64K data communication. For each access point, register an access point name (APN) in the FOMA phone beforehand, then specify the registration number (cid) in the access point phone number field for connection. “cid” is the abbreviation of “Context Identifier”, the number for storing the packet communication access point name (APN) in the FOMA phone.

1 Start the “FOMA PC設定ソフト (FOMA PC setup software)”, then click “接続先 (APN) 設定 [Access point name (APN) setting]” in “マニュアル設定 (Manual setup)”.



2 Click “OK”.

When you click “OK”, the system automatically accesses the connected FOMA phone and reads the registered “access point name (APN) setting”. You can obtain the setting information also from “ファイル (File)”→“FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)” on the menu in step 3.

3 Set an access point name (APN).

- If the FOMA phone is not connected, this display does not appear.



Adding, editing, and deleting an access point name (APN)

- To add an access point name (APN), click “追加 (Add)”.
- To edit (correct) a registered access point name (APN), click “編集 (Edit)”.
- To delete a registered access point name (APN), select the target access point name (APN), then click “削除 (Delete)”.
- ※ You cannot delete the access point name (APN) registered in “cid1” and “cid3”. (Even if you select “cid3” and click “削除 (Delete)”, it is not deleted actually and “mopera.net” returns.)

Saving data into a file

From the menu, select “ファイル (File)”→“上書き保存 (Overwrite and save)” or “名前を付けて保存 (Rename and save)”; you can back up the access point name (APN) setting registered in the FOMA phone or save the currently edited access point name (APN) setting.

Reading data from a file

From the menu, select “ファイル (File)”→“開く (Open)”; you can obtain the access point name (APN) setting saved in the personal computer.

Reading access point name (APN) information from the FOMA phone

From the menu, select “ファイル (File)”→“FOMA端末から設定を取得 (Obtain the setting from the FOMA phone)”; you can obtain the access point name (APN) setting from the FOMA phone.

Writing access point name (APN) information to the FOMA phone

Click “FOMA端末へ設定を書き込む (Write the setting to the FOMA phone)”; you can write the displayed access point name (APN) setting to the FOMA phone.

You cannot write the IP information to the FOMA phone which does not support the IP connection.

Dial-up information creation function

Select an access point name you add or edit on the access point name (APN) setting display, then click “ダイヤルアップ作成 (Create dial-up information)”; you can create dial-up information for packet communication. If the access point name (APN) setting is not written to the FOMA phone, the FOMA phone setting writing confirmation display then appears, then click “はい (Yes)”. After writing ends, the “パケット通信ダイヤルアップ作成画面 (packet communication dial-up information creation display)” appears.

Enter any access point name, then click “アカウント・パスワードの設定 (Specify account and password)”. (You can leave it blank to connect to “mopera U” or “mopera.”)

Enter the user name and password, select the authorized user, and then click “OK”.

If your Internet service provider instructs you to specify IP and DNS information, click “詳細情報の設定 (Set detailed information)”, and register the required information. Then click “OK”.

After entering information, click “OK”. Dial-up is created.

See page 37 for using “mopera U” or “mopera”.

See page 38 for using a provider other than “mopera U” or “mopera”.

Information

- The access point name (APN) is information to be registered in the FOMA phone, so if you connect another FOMA phone, you need to register the access point name (APN) again.
- To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA phone.

Setting Dial-up Network

Set Packet Communication

The operation below explains how to set a connection for packet communication without using the “FOMA PC setup software”.

The packet communication uses AT commands to carry out the settings from a personal computer. To specify settings, communication software to enter AT command is required.

When using DoCoMo Internet access service “mopera U” or “mopera”, you do not need to set an access point name (APN) (See page 44).

You can set “caller ID notified/not notified” (see page 44) as required. (You need to set “caller ID notified” when using “mopera U” or “mopera”.)

<Packet communication setting flow using AT commands>

Confirm the COM port number



Start the communication software that enables the entry of AT commands



Set an access point name (APN)



Set “caller ID notified/not notified”



Set others



Exit the communication software


■ AT commands

- The AT commands are used to control a modem. The FOMA phone, which conforms to the AT commands, supports some extended commands and unique AT commands.
- By entering AT commands, you can carry out detailed setting for packet communication and FOMA phone, and confirm (display) the setting contents.
- If the entered AT command is not displayed, enter “ATE1 []”.

Confirm COM Port Number

To manually carry out the communication setting, you need to specify a COM port number, which is assigned to “FOMA P905i” (modem) embedded after you install the “FOMA communication setup files” (driver). The confirmation method varies depending on the operating system of your personal computer.

- When using DoCoMo Internet access service “mopera U” or “mopera”, you do not need to set an access point name (APN); therefore, you do not need to confirm the modem.

- 1 “ [スタート (Start)]”▶ Open “コントロールパネル (Control panel)”.
- 2 From “ハードウェアとサウンド (Hardware and sound)” in “コントロールパネル (Control panel)”, open “電話とモデムのオプション (Phone and modem options)”.
- 3 If the “所在地情報 (Address information)” display appears, enter “市外局番/エリアコード (City code/Area code)”, then click “OK”.
- 4 Open the “モデム (Modem)” tab, confirm the COM port number in the “接続先 (Access point)” field of “FOMA P905i”, then click “OK”.

- When connecting wirelessly using Bluetooth, confirm the COM port number of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the “接続先 (Access point)” field.
- The COM port number you confirmed is used to set an access point name (APN) (see page 44).
- The contents on the property display and COM port number vary depending on the personal computer you use.
- Windows Vista does not support “Hyper Terminal”. For Windows Vista, set by using a software program which supports Windows Vista. (Follow the settings of the software program you use.)



Set an Access Point Name (APN)

The operation below explains how to set an access point name (APN) for packet communication. You can register up to 10 access point names (APNs), which are managed with cid1 to cid10.

When using “mopera U” or “mopera”, you do not need to set the access point name (APN).


The operation below is the example where you use “XXX.abc” as the access point name (APN) and use the FOMA USB Cable with Charge Function 01 (option). For the actual access point name (APN), contact your Internet service provider or network administrator. The setting here will be the access point number for dial-up network setting (see page 44).

Set Caller ID Notified/Not Notified

For packet communication, you can specify whether to notify your caller ID (caller ID notified/not notified).

The caller ID is your important information; so, take a great care to notify your caller ID. You can use AT commands (*DGPIR command) to specify “caller ID notified/not notified” before dial-up connection.

Set Dial-up Network

1 “ [スタート (Start)]”

▶ “接続先 (Access point)”

▶ Click “接続またはネットワークをセットアップします (Setup the connection or network)”.

2 Select “ダイヤルアップ接続をセットアップします (Setup the dial-up connection)”, then click “次へ (Next)”.




3 If the display for selecting a modem appears, click “FOMA P9051”.

- When connecting wirelessly using Bluetooth, put a check mark for only the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker.
- The display for selecting a modem appears only when you have registered two or more modems.

4 Enter any name in the “接続名 (Connection name)” field.

- Here, “SAMPLE” is entered as an example.

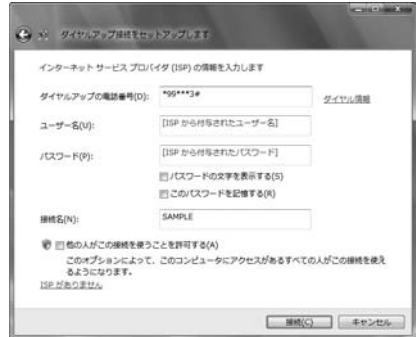

5 Enter an access point number in the “ダイヤルアップの電話番号 (Phone number for dial-up)” field.


- When connecting to “mopera U”, enter “*99***3#” as the access point number.

6 Enter the user name and password supplied from your Internet service provider or network administrator in the “ユーザー名 (User name)” and “パスワード (Password)” fields. Then click “接続 (Connect)”


▶ Click “スキップ (Skip)”.

- When connecting to “mopera U” or “mopera”, you can leave the user name and password fields blank.
- Only confirm the setting contents without connecting here.

7 Click “接続をセットアップします (Setup the connection)” ▶ Click “閉じる (Close)”.

8 “ [スタート (Start)]” ▶ “接続先 (Access point)” ▶ Highlight the access point which is finished with connection, and select “プロパティ (Property)” after the right click.

9 Click the “全般 (General)” tab to confirm the setting contents.

When two or more modems are connected to your personal computer, confirm that “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” is checked in the “接続方法 (Connection method)” field. If it is not checked, check it. If two or more modems are checked, click the  button to position the priority level of “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” to the top or uncheck modems other than “モデム (Modem) - FOMA P905i” or “モデム (Modem) - the name of the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker”.

When “ダイヤル情報を使う (Use dial information)” is checked, uncheck it.

- The COM port number allocated to “FOMA P905i” or “the in-use Bluetooth-linked standard modem or Bluetooth modem provided by a Bluetooth device maker” varies depending on the personal computer you use.
- When connecting to “mopera U”, enter “*99***3#” as the access point number.



10 Click the “ネットワーク (Network)” tab, then carry out respective settings.


In the “この接続は次の項目を使用します (Use the following items for this connection)” field, select “インターネットプロトコルバージョン4 (TCP/IPv4) [Internet protocol version 4 (TCP/IPv4)]”. You can set the “QoS パケットスケジューラ (QoS packet scheduler)” if necessary.

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.



11 Click the “オプション (Option)” tab, then click “PPP設定 (PPP settings)”.

12 Uncheck all the items, then click “OK”.

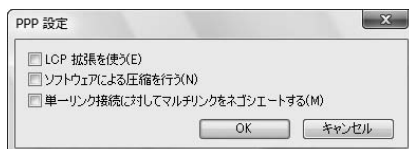

13 Return to the display in step 10, then click “OK”.

Making Dial-up Connection

Perform the operation on page 4 to connect the FOMA phone to your personal computer.

1 “ [スタート (Start)]” ▶ Open “接続先 (Access point)”.

2 Select access point and click “接続 (Connect)”.



3 Confirm the contents and click “ダイヤル (Dial)”.

- When connecting to “mopera U” or “mopera”, you can leave the user name and password fields blank.

4 The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.









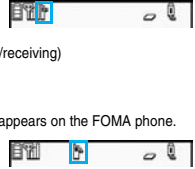
5 After the connection is completed, click “閉じる (Close)”.

- You can start the browser software to browse web pages, use e-mail and so on.

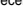

Information

- Use the FOMA phone with the dial-up setting completed for dial-up connection. To connect another FOMA phone, you may need to reinstall the FOMA communication setup files (driver).
- The power consumption of the FOMA phone increases during communication.
- During packet communication, the communication state appears on the FOMA phone.
 - “” (Communicating, data sending)
 - “” (Communicating, data receiving)
 - “” (Communicating, no data sending/receiving)
 - “” (Outgoing or being disconnected)
 - “” (Incoming or being disconnected)
- During 64K data communication, “” appears on the FOMA phone.



Disconnecting

1 Click the dial-up icon on the task tray.



2 Select “接続または切断 (Connect or disconnect)”, then click “切断 (Disconnect)”
▶ Click “閉じる (Close)”.

Information

- The communication line may not be disconnected by only exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

When you cannot connect to network

If you cannot connect to network (if you fail a dial-up connection), confirm the following items:

If this error occurs	Confirm those:
Your personal computer cannot recognize “FOMA P905i”	<ul style="list-style-type: none"> • Confirm whether your personal computer satisfies the operating environment (see page 2). • Confirm whether “FOMA communication setup files” (driver) is installed in your personal computer. • Confirm whether the FOMA phone is connected to your personal computer and powered on. • Confirm whether the FOMA USB Cable with Charge Function 01 (option) is securely connected. • Confirm whether the Bluetooth device is connected using the Dial-up service.
You cannot connect to the access point	<ul style="list-style-type: none"> • Confirm whether the ID (user name) and password are correct. • When you need to notify your caller ID such as when using “mopera U” or “mopera”, make sure “184” is not prefixed to the phone number. • Confirm that “フロー制御を使う (Use the flow control)” is checked in the modem properties. • If you cannot connect to the access point even after confirming above, contact your Internet service provider or network administrator for the setting method, and so on.

Set 64K Data Communication

The operation below explains how to set the 64K data communication without using “FOMA PC setup software”.

Setting dial-up connection and TCP/IP

The setting of dial-up connection and TCP/IP for the 64K data communication is the same as for the packet communication (see page 43).

Take care of the following points:

- In the 64K data communication, you do not need to set an access point name (APN). For the access point of the dial-up connection, enter the phone number of the access point specified by your Internet service provider or network administrator. (To connect to “mopera U”, enter “*8701” in the phone number field. To connect to “mopera”, enter “*9601” in the phone number field.)
- Set “caller ID notified/not notified” and “others” as required. (When connecting to “mopera U” or “mopera”, you need to notify your caller ID.)
- Contact your Internet service provider or network administrator for details on the setting contents.

Connecting and Disconnecting

You can operate in the same way as for the packet communication. Perform the operations on page 41 or page 46.

Using FirstPass PC Software

The FirstPass PC software is to access the FirstPass site from the web browser of your personal computer using the user certificate obtained by the FOMA phone supporting FirstPass.

Notes for Installing FirstPass PC Software

Confirm the operating environment

Use the FirstPass PC software under the following operating environment:

Item	Required environment
PC main unit	PC/AT compatible model
OS	Windows Vista (Japanese version)
Memory requirements	512 Mbytes or more*
Hard disk space size	Unused memory space of 10 Mbytes or more*
Browser	Microsoft® Internet Explorer 7.0 or higher

*The memory requirements and hard disk space size may vary depending on the system environment.

Before installing

See “FirstPassManual” (PDF format) in the “FirstPassPCSoft” folder of the CD-ROM before installing the FirstPass PC software.

Install FirstPass PC Software

The displays are slightly different depending on the personal computer you use.

- 1 Set the provided “FOMA P905i CD-ROM” into your personal computer.
- 2 To install the FirstPass PC software, click “データリンクソフト・各種設定ソフト (Data link software/Setup software)”.



- 3 Click “インストール (Install)” under “FirstPass PCソフト (FirstPass PC software)”.

Then, perform the operations described in “簡易操作マニュアル (Easy operation manual)” (PDF format).




When you click “インストール (Install)”, an alert message might appear in the screen as shown below. This alert message appears depending on the security settings of Internet Explorer, but you can use your computer without any problem.

- When the “ファイルのダウンロード - セキュリティの警告 (File download - Security alert)” window appears: Click “実行 (Execute)”.



- When the “Internet Explorer - セキュリティの警告 (Internet Explorer - Security alert)” window appears: Click “実行する (Execute)”.

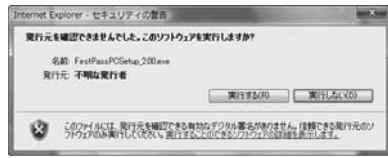

Using AT Command

AT Command

AT commands are used to specify and modify the functions of the FOMA phone on the personal computer.

※ The following abbreviations are used in the AT command list:

[AT]: Commands which are available at the FOMA P905i Command Port.

[M]: Commands which are available in the FOMA P905i (modem).

[&F]: Commands whose settings are initialized by the AT&F command.

[&W]: Commands whose settings are saved by the AT&W command. The set value can be recalled by the ATZ command.

Information

- When you make a call from an external device or make an AT command call, the call is made from Number A in A Mode or Dual Mode of 2in1, and the call is made from Number B in B Mode of 2in1.

Entry Format of AT Command

To enter an AT command, use the terminal mode display of the communication software. Be sure to enter half-pitch alphanumeric characters.

- Entry example

ATD*99**1#

- You need to enter an AT command on one line, including a parameter (digits and symbols) which follows the command.

Information

- The terminal mode enables you to operate a personal computer as one communication terminal. Using this mode, you can send characters you have entered from the keyboard to a line connected to the communication port.

Switch between Online Data Mode and Online Command Mode

There are following two methods of switching the FOMA phone between the online data mode and online command mode:

- Enter the “+++” command or enter the code specified in the “S2” register.
- Set the ER signal of the RS-232C※ off when “AT&D1” is set.
- To switch the online command mode to the online data mode, enter “ATO”.

※ The RS-232C signal line, which is emulated via the USB interface, is controlled by a communication application.

■ Saving the setting contents

Please be careful that the setting contents with AT commands are initialized when the FOMA phone is turned off and on or the external device is removed, except for the access point name (APN) setting with the AT+CGDCONT command, QoS setting with the AT+CGEQMIN or AT+CGEQRREQ command, incoming call acceptance/rejection setting with the AT+DGAPL, AT+DGARL, or AT+DGANSMS command, phone number notification/no notification setting (for packet communication) with the AT+DGPPIR command and caller ID notification restriction setting with the AT+CLIR command. For commands with [&W], you can enter “AT&W” (after setting) to save the setting contents and other set values with [&W] at the same time. If necessary, you can restore these set values by entering in “ATZ” even after the power is turned off and on.

AT Command List

AT command	Outline	Parameter/Explanation	Command execution example
A/ [M]	Re-executes the last executed command. No carriage return is required.	—	A/ OK
AT%V [M]	Displays the version of the FOMA phone.	—	AT%V Ver1.00 OK
AT&Cn [M] [&F]&W]	Selects the operating conditions of the circuit CD signal sent to the DTE.	n=0: CD is always ON. n=1: CD varies according to the carrier of the other party's modem. (default)	AT&C1 OK
AT&Dn [M] [&F]&W]	Selects an operation to be performed when the circuit ER signal received from the DTE transits from ON to OFF.	n=0: Ignores the ER status. (Always assumed to be ON.) n=1: Sets the online command state when the ER changes from ON to OFF. n=2: Sets the offline command state when the ER changes from ON to OFF. (default)	AT&D1 OK
AT&En [M] [&F]&W]	Selects the speed display specification for connection.	n=0: Displays communication speed between radio wave blocks. n=1: Displays DTE serial communication speed. (default)	AT&E0 OK
AT&Fn [AT][M]	Returns all registers to the default. Performs line disconnection processing if you enter this command during communication.	Only n=0 is specifiable. (Can be omitted)	—
AT&Sn [M] [&F]&W]	Specifies the control of the data set ready signal to be output to the DTE.	n=0: DR is always ON. (default) n=1: DR is set to ON at connection of the line (at establishment of a communication call).	AT&S0 OK
AT&Wn [M]	Stores the current set values.	Only n=0 is specifiable. (Can be omitted)	—
AT* DANTE [AT][M]	Shows the number of antenna bars. (0 to 3)	=0: Antenna shows the out of the service area =1: Zero antenna bars or a single antenna bar =2: Two antenna bars =3: Three antenna bars	AT* DANTE * DANTE:3 OK AT* DANTE=? * DANTE:(0-3) OK
AT* DGANSM=n [M]	Sets the reject/accept setting mode for the packet incoming call. The setting with this command is valid for incoming calls in packet communication after you enter the setting command.	n=0: Invalidates the incoming call reject/accept setting. (default) n=1: Validates the incoming call reject setting (AT* DGARL). n=2: Validates the incoming call accept setting (AT* DGAPL). AT* DGANSM?: Displays the current setting.	AT* DGANSM=0 OK AT* DGANSM? * DGANSM:0 OK
AT* DGAPL=n [cid] [M]	Sets the APN of which packet incoming call is to be accepted. To specify the APN, use the <cid> parameter defined in AT+CGDCONT.	n=0: Adds the APN defined by <cid> to the incoming call accept list. n=1: Deletes the APN defined by <cid> from the incoming call accept list. Applied to all the cid contents if <cid> is omitted. AT* DGAPL?: Displays the incoming call accept list.	AT* DGAPL=0,1 OK OK AT* DGAPL? * DGAPL:1 OK AT* DGAPL=1 OK AT* DGAPL? OK
AT* DGARL=n [cid] [M]	Sets the APN of which packet incoming call is to be rejected. To specify the APN, use the <cid> parameter defined in +CGDCONT.	n=0: Adds the APN defined by <cid> to the incoming call reject list. n=1: Deletes the APN defined by <cid> from the incoming call reject list. Applied to all the cid contents if <cid> is omitted. AT* DGARL?: Displays the incoming call reject list.	AT* DGARL=0,1 OK OK AT* DGARL? * DGARL:1 OK AT* DGARL=1 OK AT* DGARL? OK

AT command	Outline	Parameter/Explanation	Command execution example
AT+*DGPIR=n [M]	This command is valid at dialing/receiving calls. In the dial-up network setting, you can add "186" (notify) or "184" (not notify) to the phone number of the access point. (See page 23 or page 44)	n=0: Uses the APN as it is. (default) n=1: Adds "184" to the APN. (always not notify) n=2: Adds "186" to the APN. (always notify) AT+*DGPIR?: Displays the current setting.	AT+*DGPIR=0 OK AT+*DGPIR? *DGPIR:0 OK
AT+*DRPW [AT][M]	Displays the output power index for receiving. (0: minimum value to 75: maximum value)	—	AT+*DRPW *DRPW:0 OK
+++ [M]	Changes to the online command state without disconnecting the line when the escape sequence is executed in the online mode.	—	—
AT+CAOC [M]	Displays the charging information for now or latest call.	Result: +CAOC:"n" n: Displays the charging information in a hexadecimal number.	AT+CAOC +CAOC:"00001E" OK
AT+CBC [M]	Displays the battery level.	Result: +CBC:n,m n=0: FOMA phone is powered by the battery. n=1: During charging n=2: The battery is not connected. n=3: Power-supply error m=0~100: Battery level	AT+CBC +CBC:0,80 OK
AT+CBST=n,1,0 [M] [&W][&F]	Sets the bearer service to be used.	n=116: 64000 bps (bit transparent) (default) n=134: 64000 bps (multimedia)	AT+CBST=116,1,0 OK AT+CBST? +CBST:116,1,0 OK
AT+CDIP=n [M][AT] [&F][&W]	Sets whether to display "Received sub-address" on your personal computer when you receive a call.	n=0: Does not display "Received sub-address" when you receive a call. (default) n=1: Displays "Received sub-address" when you receive a call. Result: +CDIP:<n>,<m> m=0: Not signed up for Multi Number m=1: Signed up for Multi Number m=2: Unknown	AT+CDIP=0 OK AT+CDIP? +CDIP:0,1 OK
AT+CEER [M]	Displays the reason why the preceding call was disconnected.	<report> Disconnection reason list (See page 57)	AT+CEER +CEER:36 OK
AT+CGDCONT [M]	Sets the access point name (APN) for when dialing for packet communication.	See page 56.	See page 56.
AT+CGEQMIN [M]	Registers the reference value to judge whether the system permits QoS (Quality of service) reported from the network at establishment of the packet communication.	AT+CGEQMIN=[parameter] See page 56. AT+CGEQMIN=? Lists the settable values. AT+CGEQMIN? Displays the current setting.	See page 56.
AT+CGEQREQ [M]	Sets QoS (Quality of service) to be requested to the network at dialing of the packet communication.	AT+CGEQREQ=[parameter] See page 56. AT+CGEQREQ=? Lists the settable values. AT+CGEQREQ? Displays the current setting.	See page 56.
AT+CGMR [M]	Displays the version of the FOMA phone.	—	AT+CGMR 1234512345123456 OK

AT command	Outline	Parameter/Explanation	Command execution example
AT+CGREG=n [M] [&F][&W]	Sets whether the network registration state is notified. Displays whether you are inside or outside the service area according to the returned notification.	n=0: Not notified. (default) n=1: Notified at switching between the inside and outside of the service area. (Inquiry) AT+CGREG? +CGREG: <n>,<stat> n: Set value stat: 0: Outside packet area 1: Inside packet area 4: Unknown 5: Inside packet area (during roaming)	AT+CGREG=1 OK (set to "Notified") AT+CGREG? +CGREG:1,0 OK (means the outside of the service area) (when moved from the outside to the inside of the service area) +CGREG: 1
AT+CGSN [M]	Displays the serial number of the FOMA phone.	—	AT+CGSN 123456789012345 OK
AT+CLIP=n [AT][M] [&F][&W]	Enables to display the other party's caller ID on the personal computer at reception of 64K data communication or videophone calls.	n=0: Does not notify. (default) n=1: Notifies. Result: +CLIP:<n>,<m> m=0: NW setting not to notify caller ID at calling m=1: NW setting to notify caller ID at calling m=2: Unknown	AT+CLIP=0 OK AT+CLIP? +CLIP:0,1 OK
AT+CLIR=n [M]	Sets whether to notify your phone number to do 64K data communication or to make videophone calls.	n=0: Notifies (does not notify) caller ID according to CLIR service. n=1: Does not notify the other party of your caller ID. n=2: Notifies the other party of your caller ID. (default) Result: +CLIR: <n>,<m> m=0: CLIR is not launched. (always notify) m=1: CLIR is launched. (always not notify) m=2: Unknown m=3: CLIR temporary mode (not notify, default) m=4: CLIR temporary mode (notify, default)	AT+CLIR=0 OK AT+CLIR? +CLIR:0,1 OK AT+CLIR=? +CLIR:(0-2) OK
AT+CMEE=n [M] [&F][&W]	Sets how the FOMA phone shows an error report.	n=0: Uses the ordinary ERROR result. (default) n=1: +CME ERROR: Uses the <err> result code. <err> indicates a numeric value. n=2: +CME ERROR: Uses the <err> result code. <err> indicates characters. AT+CMEE?: Displays the current setting. Command execution examples on the right are for when the FOMA phone or connection has abnormality. Below listed are the +CME ERROR result codes. 1: no connection to phone 10: SIM not inserted 15: SIM wrong 16: incorrect password 100: unknown	AT+CMEE=0 OK AT+CNUM ERROR AT+CMEE=1 OK AT+CNUM +CME ERROR: 10 AT+CMEE=2 OK AT+CNUM +CME ERROR: SIM not inserted
AT+CNUM [AT][M]	Displays the own phone number of the FOMA phone.	number: Phone number (In B Mode of 2in1, Number B is displayed.) type: 129 or 145 129: Does not include the IDD prefix code (+). 145: Includes the IDD prefix code (+). Result: +CNUM:,<number>,<type>	AT+CNUM +CNUM:,"+8190123 45678",145 OK

AT command	Outline	Parameter/Explanation	Command execution example
AT+COPS=n,2,m [M]	Selects the carrier to be connected.	n=0: Automatic (searches the network and switches the network operator automatically) (default) n=1: Manual (connects to the network operator specified in "m") n=2: Disconnects the connection to the network operator n=3: Mapping is not performed. n=4: Manual/Automatic (if the connection to the network operator specified in "m" fails, works as automatic mode.) m: Country code (MCC) and operator code (MNC) are displayed in a hexadecimal number. The format is as follows: Digit 1 of MCC . . . octet 1 bits 1 to 4. Digit 2 of MCC . . . octet 1 bits 5 to 8. Digit 3 of MCC . . . octet 2 bits 1 to 4. Digit 3 of MNC . . . octet 2 bits 5 to 8. Digit 2 of MNC . . . octet 3 bits 5 to 8. Digit 1 of MNC . . . octet 3 bits 1 to 4.	AT+COPS=1,2,"44F001" OK
AT+CPAS [M]	Displays whether to send the control signals to the FOMA phone.	Result: +CPAS:n n=0: Can send/receive control signals to/from the FOMA phone. n=1: Cannot send/receive control signals to/from the FOMA phone. n=2: Unknown (control signal sending/receiving is not assured). n=3: Can send/receive control signals to/from the FOMA phone, and currently receiving. n=4: Can send/receive control signals to/from the FOMA phone, and currently communicating.	AT+CPAS +CPAS:0 OK
AT+CPIN=n,m [M][AT]	Enters the UIM password (PIN1 or PIN2).	When the UIM is in a state waiting for the entry of PIN1 or PIN2 code n: PIN1/PIN2 When the UIM is in a state waiting for the entry of PUK due to failure in unblocking PIN1 or PIN2 code n: PUK m: New PIN1 or PIN2 AT+CPIN?: Displays the state of code entry requested about current SIM. Result: +CPIN: <state> <state>=READY: Code entry not requested <state>=SIM PIN: PIN1 code entry waited <state>=SIM PIN2: PIN2 code entry waited <state>=SIM PUK: PUK entry waited due to failure in unblocking PIN1 code <state>=SIM PUK2: PUK entry waited due to failure in unblocking PIN2 code	AT+CPIN="1234" OK AT+CPIN="12345678", "1234" OK AT+CPIN? +CPIN:SIM PIN OK
AT+CR=n [M] [&F]&W]	Displays the bearer service type before the CONNECT result code appears at connection of the line.	n=0: Does not display. (default) n=1: Displays. <serv>: Displays only "GPRS" that means packet communication. (Displays "SYNC", "AV32K", or "AV64K", depending on the line type.) AT+CR?: Displays the current set value.	AT+CR=1 OK ATD*99**1# +CR: GPRS CONNECT
AT+CRC=n [AT][M] [&F]&W]	Sets whether the extended result code is used at reception.	n=0: Does not use +CRING. (default) n=1: Uses +CRING.<type>. AT+CRC?: Displays the current setting. The +CRING format is as follows: +CRING: <type> During PPP packet ringing +CRING: GPRS "PPP",,<APN>	AT+CRC=0 OK AT+CRC? +CRC: 0 OK

AT command	Outline	Parameter/Explanation	Command execution example
AT+CREG=n [AT][M] [&F][&W]	Sets whether the result is displayed about the inside and outside of the service area.	n=0: Not notified. (default) n=1: Notified at switching between the inside and outside of the service area. (Inquiry) AT+CREG? +CREG: <n>,<stat> n: Set value stat: 0: Outside voice call area 1: Inside voice call area 4: Unknown 5: Inside voice call area (during roaming)	AT+CREG=1 OK (set to "Notified") AT+CREG? +CREG: 1,0 OK (means the outside of the service area) (when moved from the outside to the inside of the service area) +CREG: 1
AT+CUUSD=n,"<str>",0 [M] [&F][&W]	Sets or checks the additional service for network.	n=0: Does not display mid result. (default) n=1: Displays mid result. <str>: Service code Mid result: m,"<str>",0 m=0: Shows the setting is completed. m=1: Shows the network requires the information.	AT+CUUSD=0, OK AT+CUUSD=1,"*148*1*0000#",0 +CUUSD:0,"148*7#",0 OK
AT+FCLASS=n [M] [&F][&W]	Sets communication class in the FOMA phone.	n=0: Data communication (default)	AT+FCLASS=0 OK
AT+GCAP [M]	Diaplays the AT command supported by FOMA phone.	Result +GCAP: n n=<CGSM>: Some or all GSM commands are supported. n=<FCLASS>: +FCLASS command is supported. n=<W>: +W command is supported.	AT+GCAP +GCAP:<CGSM>,<FCLASS>,<W> OK
AT+GMI [M]	Displays the manufacturer name (Panasonic).	—	AT+GMI Panasonic OK
AT+GMM [M]	Displays the product name (FOMA P905i) of the FOMA phone.	—	AT+GMM FOMA P905i OK
AT+GMR [M]	Displays the version of the FOMA phone.	—	AT+GMR Ver1.00 OK
AT+IFC=n,m [M] [&F][&W]	Selects the flow control method.	n: DCE by DTE m: DTE by DCE 0: No flow control 1: XON/XOFF flow control 2: RS/CS (RTS/CTS) flow control Default: n, m = 2,2 AT+IFC?: Inquires the set value.	AT+IFC=2,2 OK
AT+WS46=n [M] [&F][&W]	Selects the wireless communication network of the FOMA phone.	Returns "ERROR" for the mode setting because the wireless communication network is not selected on the FOMA phone by this command. n=12: GSM/GPRS n=22: W-CDMA (Wideband CDMA) n=25: Automatic	AT+WS46=22 ERROR AT+WS46? 25 OK
ATA [M]	Performs the receiving process in the mode when the FOMA phone received the incoming call.	—	RING ATA CONNECT
ATD [M]	Performs the automatic outgoing process to the FOMA phone according to the contents specified in the parameter and dial parameter.	<cid>: 1 to 10 Displays the APN defined by +CGDCONT. When calling cid1, you can omit the phone number like "ATD*99**.*#."	ATD*99**.*1# CONNECT
ATEn [M] [&F][&W]	Sets whether echo-back is issued to the DTE in the command mode.	n=0: Issues no echo-back. n=1: Issues echo-back. (default)	ATE1 OK
ATHn [M]	Places the FOMA phone into the on-hook state.	n=0: Disconnects the line. (can be omitted)	(During packet communication) +++ ATH NO CARRIER

AT command	Outline	Parameter/Explanation	Command execution example
ATIn [AT][M]	Displays the ID code.	n=0: Displays "NTT DoCoMo". n=1: Displays the product name. (same as +GMM) n=2: Displays the version of the FOMA phone. (same as +GMR) n=3: Displays ACMP information element. n=4: Displays the details of the function available for communication on the FOMA phone.	ATI0 NTT DoCoMo OK ATI1 FOMA P905i OK
ATOn [M]	Returns from the online command mode to the online data mode during communication.	n=0: Returns from the online command mode to the online data mode. (can be omitted)	ATO CONNECT
ATQn [M] [&F]&W]	Sets whether the result code is to be displayed for the DTE.	n=0: Displays the result code. (default) n=1: Does not display the result code.	ATQ0 OK ATQ1 ("OK" is not returned at this time.)
ATS0=n [M] [&F]&W]	Sets the number of rings required until the FOMA phone automatically receives an incoming call.	n=0: Does not automatically receive an incoming call. (default) n=1 to 255: Automatically receives an incoming call with the specified number of rings. (when $n \geq 10$, does not automatically receive a packet (PPP) incoming call, then the line is disconnected after about 30 seconds.) ATS0?: Inquires the set value.	ATS0=0 OK ATS0? 000 OK
ATS2=n [M] [&F]	Sets the escape character.	n=43: Default n=127: Makes escape processing invalid. ATS2?: Inquires the set value.	ATS2=43 OK ATS2? 043 OK
ATS3=n [M] [&F]	Sets the carriage return (CR) character.	n=13: Default (n=13 only specifiable) ATS3?: Inquires the set value.	ATS3=13 OK ATS3? 013 OK
ATS4=n [M] [&F]	Sets the line feed (LF) character.	n=10: Default (n=10 only specifiable) ATS4?: Inquires the set value.	ATS4=10 OK ATS4? 010 OK
ATS5=n [M] [&F]	Sets the back space (BS) character.	n=8: Default (n=8 only specifiable) ATS5?: Inquires the set value.	ATS5=8 OK ATS5? 008 OK
ATS30=n [M][&F]	Sets the inactive timer (minute). When no user data is sent or received, the connection is cut after the set time has elapsed. This command is for only 64K data communication. When 0 is set, the inactive timer turns to OFF.	n=0 to 255 (default=0) (unit: minute)	ATS30=0 OK
ATS103=n [M][&F]	Selects characters to pause for incoming sub-address.	n=0: *(asterisk) n=1: / (slash) (default) n=2: ¥ or back slash	ATS103=0 OK
ATS104=n [M][&F]	Selects characters to pause for outgoing sub-address.	n=0: # (sharp) n=1: % (percentage) (default) n=2: & (and)	ATS104=0 OK
ATVn [M] [&F]&W]	Sets all the result codes in the numeric or alphabetical notation.	n=0: Returns the result code in a numeric value. n=1: Returns the result code in alphabetical characters. (default)	ATV1 OK
ATXn [M] [&F]&W]	Sets whether to display the speed in the CONNECT display at connection. Detects busy tone and dial tone.	n=0: Dial tone not detected; busy tone not detected; speed not displayed. n=1: Dial tone not detected; busy tone not detected; speed displayed. n=2: Dial tone detected; busy tone not detected; speed displayed. n=3: Dial tone not detected; busy tone detected; speed displayed. n=4: Dial tone detected; busy tone detected; speed displayed. (default)	ATX1 OK

AT command	Outline	Parameter/Explanation	Command execution example
ATZ [M]	Resets the setting to the contents of the nonvolatile memory. If this command is entered during communication, the line is disconnected.	—	(In online) ATZ NO CARRIER (In offline) ATZ OK
AT+VS [M]	Displays the contents of the each command and S register currently set.	—	AT+VS E1 Q0 V1 X4 &C1 &D2 &S0 &E1 ¥V0 S000=000 S002=043 S003=013 S004=010 S005=008 S006=005 S007=060 S008=003 S010=001 S030=000 S103=000 S104=000 OK
AT+Vn [M] [&F][&W]	Selects the response code specifications at connection.	n=0: Does not use the extended result code. (default) n=1: Uses the extended result code.	AT+V0 OK

※ The following commands do not result in an error even if specified; however, they do not function as commands.

- AT (AT only entered.)
- ATP (Pulse setting)
- ATS8 (Setting the pause time by comma dialing)
- ATT (Tone setting)
- ATS6 (Setting the pause time taken for dialing)
- ATS10 (Setting the automatic disconnection delay time)

Supplementary Explanation of AT Commands

- **Command name:** +CGDCONT [M]
 - Outline

This command sets an access point name (APN) for when dialing for packet communication.
 - Format


```
+CGDCONT=[<cid>[,<PDP_type>[,<APN>]]]
```
 - Explanation of parameters

You set an access point name (APN) for when dialing for packet communication.

See the example below for command instructions.

<cid>※: 1 to 10
<PDP_type>: PPP or IP
<APN>※: Arbitrary

※ <cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA phone. You can register 1 to 10 in the FOMA phone. "mopera.ne.jp" is registered to <cid>=1, and "mopera.net" is registered to <cid>=3, each at purchase, so register 2 or 4 through 10.

<APN> indicates any character string for each access point name.
 - Operation at omission of parameters


```
+CGDCONT= : Sets all the <cid> contents to the default.
+CGDCONT=<cid> : Sets the specified <cid> to the default.
+CGDCONT=? : Lists the specifiable values.
+CGDCONT? : Displays the current setting.
```
 - Command execution example


```
AT+CGDCONT=2,"PPP","abc"
OK
※ The command used to register an APN name, abc (cid=2)
※ This command, which is a setting command, is not stored in the nonvolatile memory written by [∧W], and is not reset by [∧F] and [Z], either.
```
- **Command name:** +CGEQMIN=[parameter] [M]
 - Outline

This command registers the reference value to judge whether the system permits QoS (Quality of service) reported from the network at establishment of the packet communication.

You can specify four setting patterns described in the command execution example below.
 - Format


```
+CGEQMIN=[<cid>[,<Maximum bitrate UL>[,<Maximum bitrate DL>]]]
```
 - Explanation of parameters


```
<cid>※ : 1 to 10
<Maximum bitrate UL>※ : None (default) or 384
<Maximum bitrate DL>※ : None (default) or 3648
```

※ <cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA phone. You can register 1 to 10 in the FOMA phone. "mopera.ne.jp" is registered to <cid>=1 and "mopera.net" is registered to <cid>=3, each at purchase, so register 2 or 4 through 10.

<Maximum bitrate UL> and <Maximum bitrate DL> are used to specify the minimum baud rates (kbps) for upload and download between the FOMA phone and base station. "None" (default) accepts all baud rates; however, 384 and 3648 do not accept a baud rate other than 384 kbps and 3648 kbps. If you specify 384 and 3648, you may not establish packet communication.
 - Operation at omission of parameters


```
+CGEQMIN= : Sets all the <cid> contents to the default.
+CGEQMIN=<cid> : Sets the specified <cid> to the default.
```

- Command execution example

You can specify only the following four setting patterns: (The setting in (1) is defined in each cid as the default.)

 - (1) Command that accepts all the baud rates for both upload and download (cid=2)


```
AT+CGEQMIN=2
OK
```
 - (2) Command that accepts 384 kbps for upload and 3648 kbps for download (cid=3)


```
AT+CGEQMIN=3,384,3648
OK
```
 - (3) Command that accepts 384 kbps for upload and all baud rates for download (cid=4)


```
AT+CGEQMIN=4,,384
OK
```
 - (4) Command that accepts all baud rates for upload and 3648 kbps for download (cid=5)


```
AT+CGEQMIN=5,,3648
OK
```

※ This command, which is a setting command, is not stored in the nonvolatile memory written by [∧W], and is not reset by [∧F] and [Z], either.
- **Command name:** +CGEQREQ=[parameter] [M]
 - Outline

This command sets QoS (Quality of service) to be requested to the network at dialing of the packet communication.

You can specify only one setting pattern described in the command execution example below, which is set as the default.
 - Format


```
+CGEQREQ=[<cid>]
```
 - Explanation of parameter


```
<cid>※: 1 to 10
```

※ <cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA phone. You can register 1 to 10 in the FOMA phone. "mopera.ne.jp" is registered to <cid>=1 and "mopera.net" is registered to <cid>=3, each at purchase, so register 2 or 4 through 10.
 - Operation at omission of parameter


```
+CGEQREQ= : Sets all the <cid> contents to the default.
+CGEQREQ=<cid> : Sets the specified <cid> to the default.
```
 - Command execution example

You can specify only the following one pattern: (This setting is defined in each cid as the default.)

 - (1) Command that requests a connection at 384 kbps for upload and 3648 kbps for download (cid=3)


```
AT+CGEQREQ=3
OK
```

※ This command, which is a setting command, is not stored in the nonvolatile memory written by [∧W], and is not reset by [∧F] and [Z], either.
- **Command name:** +CLIP
 - Outline

The result for "AT+CLIP=1" is displayed in the following format:

```
+CLIP: <number> <type>
```
 - Command execution example


```
AT+CLIP=1
OK
RING
+CLIP: "09012345678",49
```

Disconnection Reason List

64K Data Communication

Value	Reason
1	The specified number does not exist.
16	The line was normally disconnected.
17	Cannot communicate because the other party is communicating.
18	Dialed but no response has come in within the specified duration.
19	Cannot communicate because the other party is dialing.
21	The other party rejected to receive the call.
63	The network service and options are not valid.
65	The specified transmission performance is not provided.
88	Dialed to or received the call from the phone with different properties.

Packet Communication

Value	Reason
27	No APN was found; or an invalid APN was specified.
30	The line was disconnected from the network.
33	You have not applied for the service option you requested.
36	The line was normally disconnected.

Result Codes

Result Code List

Numeric notation	Character notation	Meaning
0	OK	Processing has been executed normally.
1	CONNECT	The line has been connected to the other party.
2	RING	An incoming call has arrived.
3	NO CARRIER	The line has been disconnected.
4	ERROR	The system can receive no command.
6	NO DIALTONE	The system can detect no dial tone.
7	BUSY	The system is detecting the busy tone.
8	NO ANSWER	The connection completed; timeout
100	RESTRICTION	The network is restricted.
101	DELAYED	Within restricted redialing time

Extended Result Code List

For &E0

Connection speed between the FOMA phone and the base station is displayed.

Numeric notation	Character notation	Connection speed
121	CONNECT 32000	32,000bps
122	CONNECT 64000	64,000bps
125	CONNECT 384000	384,000bps
133	CONNECT 3648000	3,648,000bps

For &E1

Numeric notation	Character notation	Connection speed
5	CONNECT 1200	1,200bps
10	CONNECT 2400	2,400bps
11	CONNECT 4800	4,800bps
13	CONNECT 7200	7,200bps
12	CONNECT 9600	9,600bps
15	CONNECT 14400	14,400bps
16	CONNECT 19200	19,200bps
17	CONNECT 38400	38,400bps
18	CONNECT 57600	57,600bps
19	CONNECT 115200	115,200bps
20	CONNECT 230400	230,400bps
21	CONNECT 460800	460,800bps

Information

- Result codes are displayed in the character notation (default) when the ATVn command (see page 54) is set to n=1 and displayed in the numeric notation when it is set to n=0.
- The baud rate is displayed to keep the compatibility with a conventional modem connected via RS-232C. However, the FOMA phone and personal computer are connected via the FOMA USB Cable with Charge Function 01 (option) or Bluetooth; so, the baud rate is different from the actual connection speed.
- "RESTRICTION" (numeric notation: 100) means that the communication network is congested. If this result code appears, wait for a while, then connect the line again.

Communication Protocol Result Code List

Numeric notation	Character notation	Meaning
1	PPPOverUD	Connected by 64K data communication
2	AV32K	Connected by 32K videophone
3	AV64K	Connected by 64K videophone
5	PACKET	Connected by packet communication

Result Code Display Examples

- When ATX0 is set:

CONNECT only appears at completion of the connection, regardless of the contents specified in the ATV command (see page 55).

Example in character notation: ATD*99***1#
CONNECT

Example in numeric notation: ATD*99***1#
1

- When ATX1 is set**:

- If ATX1 and ATV0 are set (default):

A result code appears in the following format at completion of the connection: CONNECT<baud rate between the FOMA phone and PC>

Example in character notation: ATD*99***1#
CONNECT 460800
Example in numeric notation: ATD*99***1#
1 21

- If ATX1 and ATV1 are set**:

A result code appears in the following format at completion of the connection: CONNECT<baud rate between the FOMA phone and PC>-PACKET<access point name (APN)>-<maximum baud rate for upload (the FOMA phone → wireless base station)>-<maximum baud rate for download (the FOMA phone ← wireless base station)>

Example in character notation: ATD*99***1#
CONNECT 460800 PACKET
mopera.ne.jp /384/3648
(Indicates that the FOMA phone connected to mopera.ne.jp at maximum 384 kbps for upload and maximum 3648 kbps for download.)

Example in numeric notation: ATD*99***1#
1215

**If you specify ATX1 and ATV1 at the same time, you may not be able to correctly carry out the dial-up connection.
You are advised to use only ATV0.

FOMA® P905i

Kuten Code List

