

my213X

ENGLISH



You have just purchased a SAGEM phone, we congratulate you; it is recommended that you read this handbook carefully in order to use your phone efficiently and in the best conditions.

Your phone can be used internationally in the various networks (GSM 900 MHz and DCS 1800 MHz) depending on the roaming arrangements with your operator.

We remind you that this phone is approved to meet European standards.

WARNING

Depending on the model, network configuration and associated subscription cards, certain functions may not be available.

Your phone is identified by its IMEI number. Write this number down, and do not keep it with your phone, because you may be asked for it if your phone is stolen, in order to prevent it from being used, even with a different SIM card. In order to display the IMEI on your phone's screen, type: *#06#.

SAGEM is a trademark of Sagem Communication, SAFRAN group.
AT is a registered trademark of Hayes Microcomputer Products Inc.
Hayes is a registered trademark of Hayes Microcomputer Products Inc.

T9® is protected by one or more of the following US patents: 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554 and other patents are being applied for worldwide.

The WAP navigator and some message softwares (i-mode™) are under licence Openwave.

The WAP navigator and the softwares included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these softwares.

Wellphone™ and SmartCom™ are registered trademarks owned by SmartCom SARL France.

Contents

Menus	7
Description.....	8
Principles of navigation.....	11
Initial screen	12
Activating your phone.....	13
Information on the SIM card.....	13
Installing the SIM card and the battery	14
Getting started	15
PIN number	15
Setting time and date	16
Network.....	17
First call.....	17
Receiving a call.....	18
Switching off.....	18
Using your phone	19
Freeing the antenna.....	19
Increase the efficiency of your phone	19
Charging the battery	20
Phonebook.....	22
Using the phonebook	22
Storing a new contact	23
Contacts menu.....	23
Options from a contact saved	24
Sending a vCard	25
Receiving a vCard.....	25

Messages	26
Compose SMS.....	26
Compose MMS.....	29
Receiving messages.....	30
Inbox.....	30
Outbox.....	31
Sentbox.....	31
Drafts.....	31
Sending options.....	32
Memory.....	33
Local information.....	33
Call Voice Mail.....	33
Multimedia	34
My Pictures.....	34
My Sounds.....	34
Memory.....	34
WAP	35
The WAP Menu.....	35
Configuring WAP parameters.....	36
WAP Logging on.....	37
Downloading objects.....	38
WAP Logging off.....	38
GPRS.....	38
Games	39
ToDo	40
Sending a vCal.....	40
Receiving a vCal.....	41
Exchange of data with a PC.....	41
Applications	42
Recorder.....	42
Calculator.....	42
Converter.....	42
Alarm.....	43
Timer.....	43
Contents.....	5

Organizer	44
Calendar menu	44
Sending a vCal.....	45
Receiving a vCal.....	45
Settings	46
Sounds.....	46
Display	47
Languages	48
Calls	48
Security.....	50
Networks.....	53
Others	53
Shortcuts.....	54
Date / Time	54
Connectivity	55
Technical features	56
Conformance Document	57
Care and safety information	58
SAR.....	58
Advice for limiting exposure to radiofrequency (RF) fields.....	59
Safety.....	59
Environment.....	61
Warranty	62
End User Licence Agreement (EULA), for the software ..	67
Troubleshooting	74
Customer care	79
Index	80

Menus



Games



WAP



Messages

- Compose
- Inbox
- Outbox
- Drafts
- Options
- Memory
- Local info.
- Call Voice Mail



Multimedia

- My Pictures
- My Sounds
- Memory



Organizer

- See month
- See week
- See today
- See date
- Calendar menu



Phonebook

- Contacts menu



Settings

- Sounds
- Display
- Languages
- Calls
- Security
- Networks
- Others
- Shortcuts
- Date / Time
- Connectivity




ToDo



Applications

- Timer
- Recorder
- Calculator
- Converter
- Alarm

Description

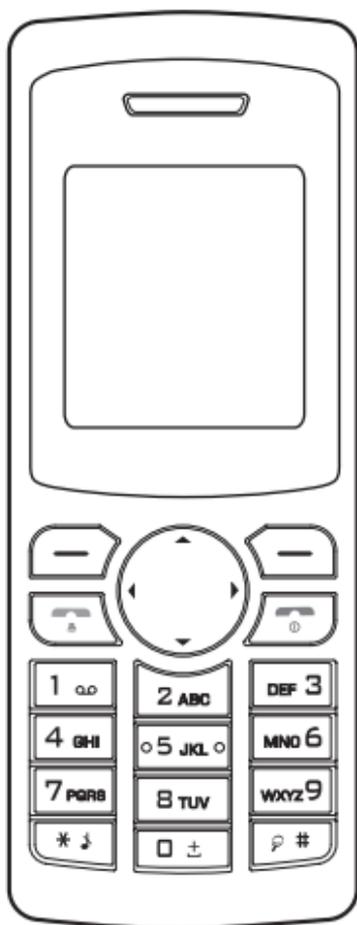

Programmable keys and Shortcut keys



Hold down: Switch off

Short press: Switch on

In a call context: Rejects a call - hangs up

In menus: Return to home page.



Short press: Activate/Deactivate hands-free mode

(**WARNING**: in this mode do not bring the phone up to your ear)

In call context: Call - receiving a call



Left programmable key:

In home page: Access to certain functions (shortcuts)

In menus: Access to the selection shown on screen in the tab (*)

During a call: Reduces the volume



Right programmable key:

In home page: Access to certain functions (shortcuts)

In menus: Access to the selection shown on screen in the tab (*)

During a call: Increases the volume



Up key: Previous choice / increase value / top



Down key: Down choice / reduce value / down



Left key: Up input field / move left



Right key: Down input field / move right



*** Key** :

Hold down: *In home page*: Silent mode

Short press + [OK] (**left programmable key**) activates or deactivates keypad locking

In call reception mode: Short press stops ring tone

In ring tone setting mode: Activates/deactivates ring tone

When composing a message:

Short press: upper case/lower case

☞ # Hold down: # Key: Zoom mode (see **Messages** and **WAP** menus)

When composing a message:

Short press: access to the symbol table

(*) *In this manual, when a function is chosen by pressing on this key, square brackets are used (e.g.: **[Save]**).*

Principles of navigation

These basic principles bring a great deal of intuitiveness to your phone.

Accept by pressing the **left programmable key** .

Cancel by pressing the **right programmable key** .

The tabs on the sides at the bottom of the screen refer to the **Programmable keys**.

In the menus a title bar indicates the down higher level.

The **up** and **down** ▲ ▼ arrows are used to navigate from a menu to the other (or from one a sub-menu to the other).

The **left programmable key**  is used to go from a menu to a sub-menu.

The **right programmable key**  is used to go from a sub-menu to a menu.

The  key (press briefly) is used to return to the home page (current function is abandoned).

Initial screen

The initial screen contains the following information:

1 - The title bar icons:

	Battery
	Calls forwarded
	Call (establishing the call)
	Call (hands free)
	Message (reception of a message, message memory full)
FAX	FAX communication
DATA	DATA communication
	Silent mode
	Message in answering machine
	WAP (@) communication
GPRS	GPRS
	Home zone
R	Roaming
	Keypad locking
	Protected WAP logon
	Protected WAP logon icon with certificate
	Signal strength level (5 bars).

2 - Date and time, in digital or analog mode

3 - Network provider

4 - Thumbnail centred on bottom line:

the main « Menu » thumbnail shows that the menu can be accessed via the ▼ ▲ ◀ or ▶ keys.

The following information may also be displayed:

« 1 message received »; or « 1 call ».

They can be deleted by pressing  key briefly.

Activating your phone

Information on the SIM card



To use your phone, you need a card called SIM card. It contains personal information that you can modify: Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to protect access to your SIM card and phone.






- Phonebook,
- Messages,
- How special services work.

WARNING

This card must be handled and stored with care in order not to be damaged. If you should lose your SIM card, contact your network provider or your SMC (Services Marketing Company) immediately.

Please keep your SIM card out of reach of young children.

Installing the SIM card and the battery

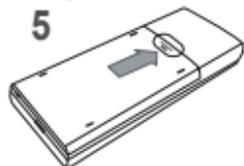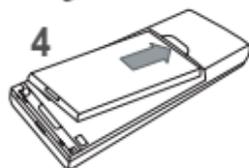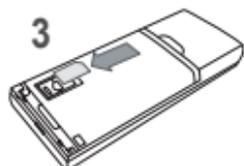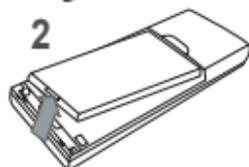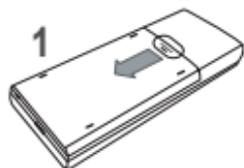

Switch off your phone and disconnect the charger.

The SIM card is inserted beneath the phone's battery.

- 1 Turn your phone and slide the back cover downwards.
- 2 Take out battery if already installed.
- 3 Slide the SIM card, with cut corner as shown on the phone, into the card holder with fold face down.
- 4 Place the battery by first inserting the upper section into the opening.
- 5 Replace the back cover, making it slide.

Getting started

You are now ready to use your phone for the first time.

Switch on the phone by pressing the  key. A short display appears.

When you switch on your phone for the first time, you must configure it with various settings that will remain by default until you choose to modify them (depending on model).

After entering your PIN code and the date and time, make your choice for the following settings: time zone, daylight savings, skin, wallpaper, screensaver, ring tone, volume, vibrate and voicemail number.

If there are contacts saved in your SIM card, you are invited, if you wish, to copy them in the phone contacts memory.

PIN number

This is your SIM's secret code.

If access to the SIM card is protected, the device prompts you to enter the PIN number:

Enter the code between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

Press the  key to validate.

If your phone indicates that the SIM is missing, press the  key to switch off your phone and check that the SIM card is correctly installed.

Warning

If a wrong PIN number is entered three times in succession, your SIM card is blocked. You must then:

- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.
- Enter your PIN number and validate.
- Enter your PIN number again and validate.

After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitely locked. You must then contact your operator or your SMC to obtain a new card.

Setting time and date

When you use your phone for the first time, you need to set the date and time.

In due course, when the battery is completely discharged, or if it has been removed, you will be prompted systematically to confirm date and time.

Setting the date:

Set the date by entering it directly in numerical form or by using the ▼ ▲ keys to increase or decrease the default values.

Use the ► key (or ◀ key) to access the **next** (or last) data input field.

Once the date is correct, press the  key to validate.

Setting the time:

Same procedure as for setting the date.

Network

From now on the phone hunts for a network on which it can make calls. If it finds one, it displays the name of the network on the screen. You are then ready to send or receive a call..

If the network icon appears, calls are possible on your operator's network.

If the letter R and a network name are displayed, calls are possible on the network of a different operator.

If the letter E is displayed without any network name, only the emergency services are accessible (ambulance, police, fire brigade).

If the network icon flashes, the phone is in permanent search mode. There is no network available. The signal strength indicator received allows you to display the quality of reception. If it indicates less than three bars, search for better reception in order to call in good conditions.

First call

Dial the number of your correspondent.

Press the  key.

During the call, the call in progress icon flashes on screen and tones may indicate the establishment of the call.

Once communication has been established, the call icon stops flashing.

You can adjust the sound level (volume) using the   keys.

At the end of the conversation press the  key to hang up.

International call

Press 0 (hold down) to display « + », then dial the country code without waiting for the dial tone, then the number of the called party.

Emergency services

Depending on the operators you can obtain the emergency service with or without SIM card or when the keypad is locked. It is enough to be in an area served by a network.

To obtain the international emergency service, dial **112** then press the  key.

Receiving a call

When you receive a call, the number of your correspondent is displayed when it is presented by the network.

Press the  key or the  key to answer, and speak.

To refuse the call, press the  key or the  key.

To stop the ring tone or the vibrate, without refusing the call, press the  # key.

Hands-free mode

To change to hands-free mode during a call, make a short press on the  key then press **[Yes]** to confirm activation of the amplified mode.

WARNING: in this mode do not bring the phone up to your ear.

All the numbers corresponding to incoming and outgoing calls are logged in the list of recent calls.


Switching off

Press the  key for one second.

The end message is displayed. The phone switches off.

Using your phone

Freeing the antenna

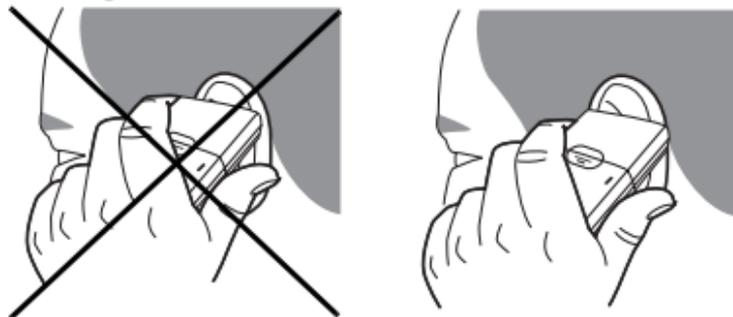

The antenna is integrated in your phone, under the back cover at the top.

Avoid putting your fingers on this area when the phone is switched ON.

If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.

Non ionising radiation

To obtain maximum satisfaction from your phone, use it in a vertical position. Your personal safety can only be improved by doing so.

Increase the efficiency of your phone

- Don't press the keys when not necessary: each keypress activates the backlight, and uses much power.
- Don't obstruct the antenna with your fingers.

Charging the battery



Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any calls in order not to be cut off in the middle of a call.

To recharge the battery

Connect the charger to a socket.

Plug the end of the cable into the bottom connector of the phone.

The phone is then charging up. The battery icon is scrolling up and down to indicate that it is charging. When the battery is fully charged, the charging stops on its own. Disconnect the cable.

When charging, the battery may warm up, this phenomenon is normal.

WARNING

There is danger of explosion if the battery is placed in an incorrectly way or if it is exposed to fire.

Do not short circuit it.

The battery does not have any part that you can change.

Do not try to open the battery casing.

Use only the appropriate chargers and batteries as shown in the phone manufacturer's catalogue.

The use of other types of chargers or batteries may be dangerous or invalidate the warranty.

Used batteries must be disposed of in the appropriate places.

We advise you to take the battery out if you plan not to use the phone for extended periods.

You are strongly advised not to connect your phone to the charger if it doesn't contain a battery.

The charger is a safety step-down transformer, it is forbidden to modify, alter or replace it by another component (power supply plug, etc.).

If the battery has entirely discharged, the phone cannot start.

Plug the phone to the charger. The phone will switch on after a few minutes of charge. You can use the phone again when the

Start option is displayed on the screen.

Phonebook



The phonebook allows you to store numbers that you call regularly. These numbers can be stored in the SIM card or in the phone.

To store a contact in the phone memory, the following fields can be filled: last name, first name, numbers, email, URL, address, company, comments, ringtone, photo.

To store a contact in the SIM card, only the last name and number fields must be filled.

The storage capacity will depend on the SIM card. Please contact your network provider to get that information.

Using the phonebook

Display the **Phonebook** menu.

If you are using your phone and SIM card for the first time, the phonebook list will be empty, only the **Contacts menu** function will be available.

If contacts have already been stored, when a contact is selected, an icon is displayed in the title bar:



contact stored in the SIM card



contact stored in the phone



contact stored in the Fixed Dialling. See **PIN2 number** and **Fixed dialling** in **Security** menu for more details about this activation.

Storing a new contact

- Select the **Contacts menu** then **Add contact**.
- Select the memory where you want to store the contact (**Telephone** or **SIM card**).
- Enter the last name.
- Enter the number.
- Fill in other fields if you want.
- Press [**Save**] to store it.

Contacts menu

Call groups

A call group allows you to send a same message to several recipients at the same time.

- Select the **Contacts menu**.
- Select **Call groups/Call groups menu/Create group**.
- Enter a name.
- Select the icon, the ring tone and vibrate mode that you want to allocate to this group.

Memory

Select **Memory** and validate. Select SIM or Phone and validate.

Phone: the screen displays the amount of memory used. The memory capacity is shared between the phonebook and various other features. If you lack memory, check if you can free some space from another feature.

SIM: available memory only for contacts.

My numbers

You can create the entries corresponding to your own numbers in order to consult them when necessary.

Select **My numbers** and validate. Enter the different details and validate.

Options from a contact saved

To display the different options, select a contact from the list using the ▼ ▲ keys and press [**Options**].

See contact

Select a contact from the list using the ▼ ▲ keys then **See contact**. The name and the number are displayed.

Note: By directly pressing one character, the phone will display the first contact saved in the phonebook, starting with it.

Modify contact

Modify what you want and validate then select **Save** once the modifications completed.

Copy to SIM / Copy to mobile

This allows you to copy your phonebook entries from one memory to the other. Only the name and the first phone number will be copied.

Delete

Validate deletion of entry.

Send message

To send a message (SMS or MMS) (see chapter **Messages**).

Send by SMS

To send a contact details by SMS (see chapter **Messages**).

Calling a contact

Several ways:

- Select a contact. Press the  key to start the call.
- Select a contact, press [**Options**]/**Call** to start the call.
- Direct call from the initial screen (only for the contacts stored in the SIM card memory): type the number with which the contact was saved then * ↓ (example : 21 * ↓) or the number then ♪ # , the number is displayed, confirm.

Sending a vCard

It is possible to send a vCard from each contact stored in the phonebook.

vCards can be sent to another phone supporting vCard.

On a contact in the phonebook, please select the **Send by** option menu item (SMS or MMS).

If the vCard is sent successfully, an information message is displayed.

vCards can be sent as an attachment to an SMS or MMS message. See **Compose MMS** on page 29.

Receiving a vCard

When a vCard is received enclosed to an SMS or MMS message, the message « You have received 1 message » is displayed.

Open the MMS from the inbox. Press [**Options**] and select **Extract**; select the vCard among the list of objects attached to this MMS, and add this contact to the phonebook by pressing [**OK**]. A message is displayed to confirm the action.

Messages



From this menu, you are able to send SMS and MMS. MMS is a Multimedia Message Service, which allows you to enclose audio files, images and others rich contents to your messages; these messages can even be composed of several slides. MMS are differently invoiced than SMS are. Please contact your network provider to get more information on their cost.

This menu has been compiled in collaboration with magic4™.

magic4

Compose SMS

On the **Messages** menu, please select the **Compose** menu and validate. Choose the **SMS** option.

The language used is the one selected on the display of the phone (if the language selected is not compatible with the Easy Message T9®, the English language will be automatically selected).

When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen (depending on model). This counter is not displayed if an icon or sound is inserted into the SMS.

When the text has been entered, [**Options**] is used to access the functions offered:

- **Send** is used to send the message by entering the correspondent's number or selecting it in the phonebook.
- **ABC mode** (see page 28).
- **123 mode** (see page 28).
- **T9 options** (see page 27).
- **Save** is used to save a draft in memory.
- **Send options** is used to select various send options (see page 32).
- **Cancel** is used to delete all text entered and quit.
- **Activate/deactivate zoom** is used to modify size of characters.
- **Formatting** is used to enrich a text.
- **Insert** to insert an image or sound into your message (see page 29).

The Easy Message T9® mode helps you to easily write your short messages.

Using T9 Mode



Press once the key corresponding to the letter chosen and compose the word by continuing to press the keys corresponding to the various letters without paying attention to the display: the word is highlighted.

If you agree on the word proposed on the screen, press the **0** key to validate it (the **0** key inserts a space), and go on writing the next word.

However, the same sequence of keys pressed can correspond to several words, existing on the dictionary. If the word that appears is not the word you expected, press the **▼▲** keys to scroll through the words corresponding to this key sequence.

Once you agree on the word proposed on the screen, press the **0** key to validate it (the **0** key inserts a space), and go on writing the next word.

If the word you are expected is not proposed, please add characters until you get the message **Add the word?** Press [**Yes**] and validate if the word displayed suits you or modify this word before adding it in the dictionary.

Input modes

When composing a message:

The navigation keys assume the following functions:

-  **key**: Last word
-  **key**: Next word
-  **key**: Previous line
-  **key**: Next line
-  **key**: Deletes last letter
-  **key**: Message options
-  # **key (long press)**: Zoom mode (changes size of characters)
-  # **key (short press)**: Access to symbol table

In the input screen, the  key is used to access other input options.

The mode in which you type the text is displayed at the right top of the screen. A short press of the *  key switches from one mode to another.

The **ABC mode** is used to write words that do not exist in the dictionary. To get a particular character, please press the corresponding key several times: the characters will scroll down on your screen.

Mode 123 is used to add numbers.

Insert mode is used to add symbols, animations, call group icons and tunes. Images and sounds can be of two types: pre-defined or customized. Pre-defined images and sounds are smaller, especially suited to exchanging messages.

Upper/Down case

A long press of the *  key will display the next letter in upper case ( icon).

Punctuation characters

Punctuation characters are obtained thanks to key **1** (except in **123 mode**), or with the help of **Insert mode** (fast access by briefly pressing the  # key).

Accented characters

Accented characters are generated automatically in T9 mode.

In ABC mode accented characters are available by pressing the key supporting the non-accented character in succession.

Compose MMS

On the **Messages** menu, please choose the **Compose** menu and validate. Select the **MMS** option.

When the text has been entered, [**Options**] is used to access the functions offered:

- **Send** is used to send the message by entering the correspondent's number or selecting it in the phonebook.
- **Insert** to insert multimedia objects such as images, animations and sounds into your message.
- **ABC mode** (see page 28).
- **123 mode** (see page 28).
- **T9 options** (see page 27).
- **Save** is used to save a draft in memory.
- **Cancel** is used to delete all text entered and quit.
- **Slide** to compose a slideshow of the multimedia objects.
- **Preview** to see a presentation of the multimedia objects.

Saving the message

Select **Save**. It is saved in the **Drafts** menu.

Sending the message

- Once the text entered, press [**Options**] and select **Send**.
- Enter the receiver's number (or take it in your phonebook pressing [**Contacts**])

You can enter an e-mail address.

Note: It is possible that the voice message format (.amr) is not supported by some PC. See your PC provider.

Warning: some message sendings may fail if the message content is too big.

Pressing [**Options**] before sending the message gives access to different options:

- **Send options:** can be used to indicate the period of validity, activate/deactivate a request delivery report, a priority, a delivery time or a sender visibility.
- **Subject:** this option allows you to add a subject to the message.

Receiving messages

When you receive a message, the phone plays the ring tone that you selected, and the message icon  comes on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is blinking when the download of your message is in progress.

Note that you have two different possibilities for receiving MMS: automatically or manually; if « manual mode » is activated, then you will receive only a notification in your Inbox, meaning that a MMS is available on the MMS Server; select Retrieve in the options when you want to retrieve the MMS from the server.

For more details about automatic and retrieval modes, see « Sending options » on page 32.

Please contact your network provider to get more information on icons, backgrounds or tunes downloading.

Received messages are stored in the SIM card or in the phone until you choose to delete them.

Inbox

On the **Messages** menu, please choose the **Inbox** menu and [**Select**].

Each message shows the presence of any attachments, the time and date the message was received and its size.

Messages are listed in chronological order, the latest one being displayed first.

The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

Select a message. Choose one of the options given.

Enclosures (pictures or sounds), which you receive, can be extracted in order to be used later on (stored...).

You can consult them in the corresponding menus (WAP bookmarks in **WAP**, ring tones in **Sounds**, wallpapers in **Display**).

Outbox

This menu displays the messages that have not been sent. You can therefore send them again.

Sentbox

The **Sentbox** menu is used to store all your sent messages if you activated the option **Store sent messages** in the **Options** menu (see page 32).

Too many messages saved will quickly fill up the available memory and no further messages will be received.

For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.

Select a message.

Choose one of the options given: Read, Modify, Forward, Delete, Delete all.

Drafts

When you store a composed message, it is stored among the drafts.

On the **Messages** menu, please choose the **Drafts** menu.

Select a message and press [**Options**]. The options are: Delete, Read, Modify, Send.

If you want to send it, select **Modify** then press [**Options**] and select **Send**.

Sending options

Several sending options are offered.

On the **Messages** menu, please choose **Options** and [**Select**].

Choose one of the options given: SMS or MMS.

The SMS sending options are: message centre number, store sent message, acknowledgment, period of validity (during that period, the network provider will try to send the message), message format.

The MMS options are:

- **Store sent messages:** (it is highly recommended that you keep this function deactivated, in order to avoid a full memory),
- **Retrieval mode:** if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the retrieve later option.
- **Priority:** selection of a priority to send a message.
- **Request delivery report:** request of a delivery report when sending a message.
- **Period of validity:** during that period, the network provider will try to send the message

Advanced settings:

- **Send delivery report:** sending a delivery report when receiving a message.
- **MMS ignore:** if you want to deactivate the reception of any MMS in your phone.
- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Sender visibility:** you choose to display or not your phone number on the receiver's phone screen, with that message.
- **Maximum size:** if you want to activate/deactivate the option of maximum size supported for the MMS.

Memory

You may know the memory available for saving messages.

On the **Messages** menu, please select the **Memory** option and **[Select]**.

Choose one of the options given: SMS or MMS.

The SMS screen displays the memory available either on the SIM card or on the phone.

The MMS screen displays how much memory is used in Kbytes.

Local information

This menu is used to activate reception of local information broadcast by the network.

You can choose whether you want to receive this information or not (please contact your network provider).

On the **Messages** menu, please select the **Local info.** menu and **[Select]**.

Call Voice Mail

This function allows you to call your voicemail.

On the **Messages** menu, please select the **Call Voice Mail** option and **[Select]**.

Note: if your voicemail number has not been entered yet, you must enter it in the menu **Settings/Calls/Voicemail**.

Multimedia



My Pictures

This menu gives you access to your pictures.

On the **Multimedia** menu, please select the **My Pictures** menu and **[Select]**.

The pictures stored are displayed on the screen. Please, use the ▼ ▲ keys to select one of them.

Once you have selected a picture, press **[Options]**.

Select one of the options in the list with the ▼ ▲ keys and validate.

- **Use as:** allows you to use the picture as a wallpaper or screen saver.
- **Delete:** allows you to delete a picture.
- **Rename:** allows you to rename a picture.
- **Properties:** properties of the picture selected.

The **Pictures menu** allows you to delete all the pictures.

My Sounds

This menu gives you access to your sounds.

To access your sounds, use the same procedure as for your pictures (see the **My Pictures** menu).

You can import or export sounds to or from a computer using My Pictures And Sounds (MPAS), available from www.planetsagem.com.

Memory

This menu indicates the memory size used by the different features of your phone.

On the **Multimedia** menu, please select the **Memory** menu and **[Select]**.

Use the ▼ ▲ keys to select the different features using memory. You can see the memory capacity used by each individual feature.

WAP



WAP (Wireless Application Protocol): a protocol that translates the Internet language into WML and HTML languages that can be read by a phone. The WAP function allows you to log onto certain Internet sites. You can log onto sites that allow you to download ringtones, icons, animated screensavers to your phone.

The WAP Menu

The WAP navigator is under licence:



© 1995-2001

RSA Data Security



The WAP navigator and the softwares included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these softwares.

The **Services** menu, a dropdown menu, can be accessed at all times when navigating through WAP pages pressing the  key.

You can activate the magnifying glass to increase the size of the characters by holding down the  # key.

It contains the following sub menus:

Welcome: logs onto the home page, (carries the name of your access provider)

Bookmarks: is used to save in a phonebook the names and addresses of Internet sites in order to make the access easy.

You can receive bookmarks from messages and add them to this list (see chapter on SMS). You can also send messages by SMS: select a bookmark, press [**Options**], then select **Send by message**.

Go to URL: this menu allows you to input an Internet address directly.

Inbox: this menu allows you to check the messages sent by the Internet site.

Save items: is used to save a WAP site items.

Snapshots: takes a snapshot of the currently displayed page.

History: backward and forward navigation of the pages displayed are kept in memory.

Reload: refreshes the current page.

Reset cache: clears the stored information on previous connections.

Advanced...: choose one of the following advanced settings

- Settings
- Show URL
- Disconnect
- Circuit prompt (if user wants to confirm each logon)
- Security (is used to access information on making WAP connections secure).
- Delete Cookies
- View Title Region

Exit: returns to the phone's home page.

Configuring WAP parameters

Select the **Advanced...** menu, then the **Settings** menu.

Profiles is used to select or modify your access provider's logon parameters or configure the parameters of other access providers.

The active profile is preceded with a star.

The **Menu** is used to add a new profile or to display the memory size available.

Configuration of GSM and GPRS parameters:

All information to be entered in the parameters are provided by your operator or access provider.

On a profile in the list, press [**Options**], select **Modify**. The different parameters are: Provider title, Home page, Preferred connections (see next page), GSM parameters and GPRS parameters (see next page).

Preferred connections:

GSM if not GPRS (by default): the logon to WAP services uses the GPRS as a priority. However, in the event of unavailability of the GPRS network, the GSM network is used to establish the link.

GPRS: the logon to WAP services uses the GPRS network exclusively.

GSM: the logon to WAP services uses the GSM network exclusively.

GSM parameters:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Dial-up number
- Mode (digital, analog or automatic)

GPRS parameters:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- APN: if no APN has been defined, press [**Options**] then the APN menu. Select or add an APN.

Once all the settings have been entered, you can activate the chosen access provider. Select him from the list. Validate your choice.

Linger timer is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.

WAP Logging on

The connection to a WAP service on the GPRS network is not cut if an incoming call is received. You can answer the call.

Using the **Welcome** menu, you can log onto your access provider's WAP site by pressing the  key.

If you are logging onto the GSM or GPRS network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.

Downloading objects

Some WAP sites allow you to download ringtones, icons, animated screensavers, games. Once downloaded, they are stored in your phone's memory. You can then save them in your phone (same operation as used for downloading using messages).

WAP Logging off

To log off, press the  key. The logoff happens automatically after a few seconds of inactivity if you forget to log off. This period is defined by the linger time setting.

GPRS

A flashing icon indicates that the phone is logging onto a GPRS network.

A non-flashing icon indicates that the GPRS network is available; if the icon is dark, it indicates that the phone is logged onto the GPRS network: see page 36 for the attachment options.

This icon is not displayed if the GPRS network is not available or if the SIM card inserted in your phone does not include the GPRS service. It may also disappear when accessing WAP services if the connection uses the GSM network instead of the GPRS network.

Games



Depending on model, your phone is supplied with one or two games.

ToDo



ToDo menu

This menu allows you to add ToDo's, access category-based Todo management and delete all the ToDo's.

- **Create ToDo (written or vocal):** allows you to add ToDo of the text or voice type. Fill in the different items. Save the ToDo.
- **Memory:** allows you to view the memory used by the different functions of your ToDo.
- **Categories:** allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category and see them.
- **Delete all:** allows you to delete all the ToDo's from your ToDo.

Actions possible on any ToDo

To display the different options, press **[Options]**.

- **See/Listen ToDo:** allows you to display the ToDo.
- **Delete:** allows you to delete the ToDo.
- **Modify ToDo:** allows you to modify the ToDo properties.

Sending a vCal

You can send a vCal from each Todo task. Yet, this function is available only on certain models of phone.

You can send vCals to another phone using MMS depending on your phone and the recipient's phone.

On the task list (ToDo main menu), please select **a task** and in the ToDo task actions menu list select **Send**.

When sending MMS, please select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

Receiving a vCal

By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it. You can assign a different beep to each Todo task.

You can also assign a different ring tone to each Todo task category.

Exchange of data with a PC

Working from a PC, you can save/edit contacts, events and tasks stored in your phone.

To do this, you will need to connect your phone to the PC by means of a suitable data cable (serial or USB).

Next, you will have to install the Wellphone software available from <http://www.wellphone.com>. This software will also enable you to save your contacts, events and tasks by means of copy/paste.

Working from a PC, you can save/edit photos and ring tones not copyrighted stored in your phone.

To do this, you will need to connect your phone to the PC by means of a suitable data cable (serial or USB).

Next, you will have to install the "My Pictures and Sounds" software (available from www.planetsagem.com site).

Note: If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re-started.

Applications



Recorder

These menu allows you to record you own melody.

Pressing **[Start]** record your melody or your voice by means of the microphone then save it.

Give it a name and validate. The new tone is saved in the list of ringtones and in **Multimedia/My Sounds**.

Calculator

This menu allows you to use your phone as a calculator.

You can use the calculator thanks to the following keys:

- ▲ **Up key:** Add
- ▼ **Down key:** Subtract
- ► **Right key:** Multiply
- ◀ **Left key:** Divide
-  **Left programmable key:** Equals or convert
-  **Right programmable key:** Delete
- * ↓ ↵ # *** key or #:** Decimal point.

*If no calculations are being run, pressing **[Convert]** allows you to use the value in the **converter** directly.*

Converter

This menu allows you to convert one currency to another.

Enter a value and press the ▲ key to convert from one currency to another, **or** the ▼ key to convert back.

Pressing **[Options]** allows you to use the following options:

Rapid exchange

If the Rapid exchange is activated, the converter will work in the initial screen by entering the desired numbers and pressing the ▲ ▼ keys to convert.

Exchange rate

Enter the exchange rate corresponding to the chosen currency.

Currency

Enter the two types of currency to be converted.

Go to calculator

This option allows you to use immediately the value converted in the **calculator**.

Alarm

This menu allows you to set and activate the alarm.

Activate or **Deactivate** the alarm and validate.

Set the wake-up time by entering the numbers directly or using the ▼ ▲ keys and validate.

 *The alarm icon appears on the initial screen.*

The alarm works even when the phone is switched off.

Timer

This menu is used to set and activate the timer.

Activate or **Deactivate** the alarm and validate.

Set the duration (hours/minutes) by entering the numbers directly or using the ▼ ▲ keys and validate.

 *The alarm icon appears on the initial screen.*

Organizer



This menu gives you access to your diary and get to a day, week, month or specific date. It lets you add events, access the global actions for all the events and manage them by event category.

Calendar menu

This menu lets you add events, manage events by category, see the available memory and delete all the events.

From the **Organizer** menu, select the **Calendar** menu.

- **Categories:** allows you to see the different event categories, assign a specific ring tone to each individual category, know the number of events in each category and see them.
- **Add event/Add event:** allows you to add events according to their categories. Select one type of event and validate. Fill in the different items. Save the event.
- **Clean up:** allows you to schedule the deletion of events that took place more than one day, week or month ago.
- **Memory:** allows you to view the memory capacity used by the different functions of your diary.
- **Delete all:** allows you to delete all the events from your diary.

The other menus are:

- **See date:** allows you to access events at a specific date.
- **See today:** allows you to access the events for the current day and the actions possible on any event (see, modify, delete and send).
- **See week:** allows you to access events on a week-by-week basis.
- **See month:** allows you to access events on a month-by-month basis.

Sending a vCal

You can send a vCal from each diary event. Yet, this function is available only on certain models of phone.

You can send vCals to another phone using MMS depending on your phone and the recipient's phone.

On the See today list, please select an event and in the Todo event actions menu list, select Send.

Then choose between MMS or serial link for the type of sending and confirm.

For MMS deliveries, you should in addition select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

Receiving a vCal

By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.

You can assign a different beep to each diary event.

You can also assign a different ring tone to each diary event category.

Settings



This menu allows you to set your phone.

Sounds

This menu allows you to customize the ring tones on your phone and to activate beep and vibrate modes.

Volume and ring tone

This menu allows you to allocate a ring tone to different functions.

Select the function on which you want to choose a ring tone.

Select the **ring tone** from the proposed list and validate.

Adjust the **volume** using the ▼ ▲ keys and validate.

You can deactivate the sound by pressing the ☎ # key.

Vibrate

This menu allows you to activate the vibrate mode for calls.

Select the vibrate mode from the proposed choices and validate.

Silent mode

This menu allows you to switch to Silent mode.

Activate or **deactivate** Silent mode and validate.

Silent mode can also be accessed via the initial screen by holding down the * 3 key.

When the phone is in silent mode, the relevant icon appears on the initial screen.

In this mode, the ring tone will not function, except for the alarm clock.

Note: if you have activated the silent mode, it does not remain after switching off your phone.

Beeps

This menu allows you to activate a beep for the battery, the keypad or the network.

Select the type of beep you want to allocate from the proposed choices (Key beep, Network beep or Battery beep) and validate. Activate or deactivate the beep and validate.

If you select key beeps, different options are given.

Recorder

These menu allows you to record you own melody.

Pressing **[Start]** record your melody or your voice by means of the microphone then save it.

Give it a name and validate. The new tone is saved in the list of ringtones and in **Multimedia/My Sounds**.

Display

This menu allows you to customize your screen by choosing a different presentation.

Skins

This menu allows you to choose the skin of your phone, i.e. define its look (text font, colors, default animation, background image...).

Select the desired skin and validate.

Skins are not downloadable but you can download screensavers and boot mode animations without changing those included by default with the skin.

Wallpaper

This menu allows you to display the background picture you want on your phone.

Select the wallpaper and **[Visualise]**. The picture appears in the background of the screen.

Press **[OK]** to validate this choice, or **[Back]** to go back to choice.

Note: the **Diaporama** option allows you to display a wallpaper scrolling different pictures in a random way.

Screensaver

This menu allows you to display an animation when the phone is in standby mode.

Select one of the screensavers given and [**Visualise**].

The chosen screensaver appears on the screen, validate it.

Greeting message

This menu allows you to select a text to display when switching on your phone (depending on model).

Languages

This menu allows you to choose your phone's display language.

Select your language and validate.

If you select **Automatic**, the language used will be the one relative to your SIM card.

Calls

*The **Calls** menu allows you to manage all the calls functions (call forward, displaying numbers, call waiting, voicemail number, etc.).*

Call forward

Depending on your subscription, this service allows you to forward incoming calls to a different number or to the voice mailbox.

Choose the type of forwarding you want from the options available.

View last calls

This menu allows you to access the list of last numbers used.

For every phone call are displayed on the screen:

- its characteristics (shown with an icon),
- the time (or date),
- its duration.

Select a call from the list and validate.

Select one of the options given: Call, Store in your phonebook, Send a message, Delete, Delete all.

You can also make the call by pressing the  key.

Fast access to the list of calls from the initial screen: press the  key.

Counters

This menu allows you to consult the duration of the up calls. It can also be used to check the volume of data exchanged in GPRS. Select one of the options given.

Display number

This menu allows you to modify the status of the display number function.

Select one of the options given: Anonymous mode, My number, Callers' number.

Anonymous mode

You have the facility to mask your number on the phone of the person you are calling.

- Preset: network default mode.
- No: you choose not to activate anonymous mode and then to display your number.
- Yes: you choose to active anonymous mode and then not to display your number.

Call waiting

During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's identity is displayed on the screen (name or number).

(Operator-dependent service)

You can **activate**, **deactivate**, or **consult the status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

Automatic redial

This menu allows you to call back a caller you have not managed to reach.

You can set the redial function to inactive, on request or systematic. If you choose **On demand**, your phone will offer to redial your caller automatically if his number is busy.

Blacklist

The blacklist is used to limit failures on automatic calls (calls generated by the automatic redial function or by applications: data, fax for example).

When several automatic calls failed with a number (number busy or unknown), this number is put in the blacklist and no automatic call will be done with this number any more until you delete it from the blacklist.

Note: this function does not apply to the calls performed manually.

Vicemail

This function is used to record your answer phone number.

This number will be used during a call to the voice mailbox using the programmable keys.

Enter your answer phone number and validate.

Security

This menu allows you to configure your phone's security settings.

Keypad locking

This menu allows you to lock the keypad to avoid unwanted key presses.

Select **Activate** or **deactivate** and validate.

 The lock icon appears on the initial screen.

*This function is also available in the initial screen pressing * 3 and [OK].*

PIN number

This menu allows you to activate and modify your phone's PIN.

To modify the PIN, select **Modify** and **[Select]**.

Enter old PIN and validate.

Enter new PIN twice and validate.

To activate or deactivate the PIN, select the **Check PIN** menu and **[Select]**.

Enter PIN and validate.

Select **Activate** or **Deactivate** and validate.

PIN2 number

You have a second PIN number to allow you to access certain functions ().*

Proceed as above in order to activate, deactivate or modify PIN number 2 of your phone.

Phone code

The Phone code menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated, for example to protect the phone if stolen.

To activate or deactivate the phone code, select the **Phone code** menu and validate.

Enter 0000 (the factory code, by default) and validate.

Select **Activate** or **Deactivate** and validate.

To modify the phone code, select **Modify** and validate.

Enter old phone code and validate.

Enter new phone code and validate.

Enter phone code again to confirm it and validate.

(*) *These SIM functions may or may not be available depending on your SIM card.*

Confidentiality

The Confidentiality function is used to delete numbers stored in View last calls and the SMS stored in the memory when a new SIM card is inserted into the phone.

This menu allows the activation of automatic deletion, after power off/on, for messages and/or calls stored in the phone.

Select **Activate** or **Deactivate** and validate.

Operator

This menu allows you to modify the call barring.

Access to this service depends on your type of subscription.

Call barring

Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).

This menu allows you to block the sending or reception of certain calls.

Before you can use this service, a password will be provided by your operator when you take out your subscription.

Select **Activate** or **Deactivate** and validate.

Access to this service depends on your subscription type.

Fixed dialling

This menu allows you to restrict the outgoing calls.

The availability of this menu depends on your SIM.

Enter PIN2 number and validate.

Select **Activate** or **Deactivate** and validate.

Proceed as for any other phonebook.

When activating this function, only the numbers stored in the fixed dialling can be called.

This phonebook is linked to the SIM card, and its size depends on the card's capacity.

Cost

This menu allows you to control the cost of your calls ().*

The **Cost** menu (*) lets you check the cost of the last call you made and of all the calls you made since you last deleted them.

The **Delete costs** menu (*) lets you delete the cost of your last call and reset the cost counter after entering your PIN 2 code.

Networks

This menu allows you to configure network preferences.

Choose **Preferred** to view all the pre-registered networks.

Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area in which you are located.

Choose **GPRS** to select the way you want to be attached on the GPRS network: always, or only when needed (when launching a data connection).

Others

Car kit

This menu allows you to configure your phone with a car kit.

Choose one of the options given: Automatic response, Switch off, Kit volume.

Contrast

This menu is used to adjust screen contrast.

Adjust the contrast using the Up ▲ or Down ▼ keys.

- (*) **WARNING** - Depending on how the networks and associated subscription cards are configured, some functions may be unavailable (these are marked out with *).

Energy saving

Backlight

This function is used to deactivate the screen and the keypad backlight and consequently increase the battery life of your phone. For backlight two options are available: screen only and Full backlight.

Economic mode

The screen goes out (standby mode). To quit this mode, press the  key.

Shortcuts

This menu allows you to allocate functions to the programmable keys. (Function available depending on model)

This menu allows you to customize the settings of your phone to make it as convenient as possible for you to use.

Select the key that you wish to modify and validate.

Choose the function that you want to allocate to this key and validate.

Date / Time

Set Date/Time

This menu allows you to set the date and time of your phone.

- **Date:** set the date by entering it directly in digital form or by using the ▼ ▲ keys.
 - Use the ► (or ◀) key to access the next (or previous) entry field.
 - Once the date is correct, validate it.
- **Time:** same procedure as for setting the date.

Automatic update

This menu allows you to choose manual or automatic updating of date and time (after switch off of your phone or when going abroad for instance) (service depending on the operator).

Please select Automatic, Manual or On demand and press [OK].

Display

This menu allows you to select the date and time display type.
In the list that appears, select the desired display type between: Analog, Digital, None, by using the ▼ ▲ keys and validate.

Time zone

This menu allows you to change time in relation to the GMT time.
Choose the time of the country desired by calculating the time from the GMT time.

Daylight savings

This menu allows you to set your phone to the summer/winter time.
Select 1 h, 2 h **Summer time** or **Winter time** depending on the season, and validate.

Connectivity

You can also connect it to your computer in order to receive data or fax through GSM or GPRS network (depending on subscription).

Serial Speed

The **Speed** menu enables you to select the speed to be used for data exchanges via your phone's serial port. Except for specific requirements, it is advisable to stick to the default setting: **Automatic**.

Technical features

- Weight: 76 g
- Size: 102.4 x 42.6 x 15.3 mm
- Original battery: Li-ion 700 mAh
- Battery life calls/standby: up to 3 h 50 mn/255 h (these values are theoretical ones and given for information only)
- Formats:
 - audio: PCM, ADPCM, iMELODY 1.2, midi (16 tones)
 - graphic: wbmp, bmp, png
- Size of memory available for messages: > 10 messages
- Size of memory available for the phonebook: > 100 contacts
- Maximum size of each message: 160 characters

Using temperature: from - 10°C to + 55°C

Déclaration CE de Conformité

Fabricant **Sagem Communication**
Manufacturer

Adresse **Le Ponant de Paris**
Address 27 rue Leblanc - 75512 Paris cedex 15 - FRANCE

Declares under our sole responsibility that our product

Nom du produit GSM/DCS A2006SC++ 128 E3 (my213X)
Product Name

est conforme aux exigences des directives européennes suivantes :
conforms to the requirements of the following EEC directives:

EEC Directive 1999/5/CE

Sécurité (Safety) **EN 60950**

CEM (EMC) **EN 301 489-1**
 EN 301 489-7

Réseau (Network) **3GPP TS 51.010-1 v 7.1.0 avec GCF-CC v 3.21.1 inclus**
(3GPP TS 51.010-1 v 7.1.0 selected with GCF-CC v 3.21.1 included)
EN 301 511 V9.0.2

Santé (Health) **EN 50360, EN 50361**

Place and date of issue

Cecy Sr Christophe - June 9th 2006


Signature

Care and safety information

SAR

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.12 W/kg (*). As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide (**).

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>).

(*) *The tests are carried out in accordance with international guidelines for testing.*

(**) *Please see the Distance of operation section about body worn operation, on page 61.*

Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice: Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's' RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than -10°C and higher than +55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetisation, do not let electronic devices close to your phone for a long time.

Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:

- **against the ear:** place or receive a phone call and hold the phone as you would a wireline telephone,
- **body worn:** when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 1.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 1.5 cm from your body,
- **data operation:** when using a data feature, position the phone a minimum of 1.5 cm from your body for the whole duration of the data transmission.

Environment

Packaging

To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

Batteries

Spent batteries must be deposited at the designated collection points.

The product



The crossed-out waste bin mark affixed to the product (including its accessories) means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. Sagem Communication declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use. The software program developed by SAGEM remains the exclusive property of Sagem Communication. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

Use precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example). For this reason, Sagem Communication rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, Sagem Communication states that a failure caused by receiving downloaded data that do not comply with the specifications set by Sagem Communication is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, Sagem Communication does not guarantee the accuracy nor the quality of any content that you download.

You alone are responsible for the content that you download to your mobile phone and how you use it. Sagem Communication cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by Sagem Communication, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by Sagem Communication.

Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are not in any way affected by this guarantee.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

2.

All faulty phones under warranty will be replaced or repaired free of charge at Sagem Communication's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the Sagem Communication after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, Sagem Communication does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall Sagem Communication accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

3.

The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by Sagem Communication on request. The responsibility of Sagem Communication cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

Sagem Communication may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work Sagem Communication reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of Sagem Communication.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

4.

The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of Sagem Communication, to a servicing fault, as described in the documentation supplied with the phone, to lack of supervision or care, to poor environmental conditions of the phone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the phone) or to servicing done by personnel not approved by Sagem Communication.

Damage resulting from inadequate packaging and/or poor packing of the phone sent back to Sagem Communication.

Normal wear and tear of the phone and accessories.

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).
Change of parameters of the cellular network made after the phone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of Sagem Communication.

Faults or disruptions resulting from the use of products or accessories not compatible with the phone.

Phones returned to Sagem Communication without having complied with the return procedure specific to the phone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the phone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

5.

In the cases of warranty exclusion and of expiry of the warranty period, Sagem Communication shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

End User Licence Agreement (EULA), for the software

CONTEXT AND ACCEPTATION OF THE AGREEMENT

You have acquired a Mobile Phone device ("DEVICE"), manufactured by Sagem Communication (SAGEM), that includes software either developed by SAGEM itself or licensed third party Software suppliers ("SOFTWARE COMPANIES") to SAGEM with the rights to sub-license it to the purchaser of the device. Those installed software products whatever their company of origin, and wherever the name of the company of origin is indicated or not in the DEVICE documentation, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT SAGEM FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and Software contained on the CD-ROM disk ("Companion CD"), if any is supplied with the product.

GRANT OF SOFTWARE LICENCE

This EULA grants you the following licence:

DEVICE Software. You may use the DEVICE Software as installed on the DEVICE. All or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

COMPANION CD. If any is supplied, additional software for your personal computer is included with your DEVICE. You may install and use the software component(s) contained in the Companion CD only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

Security Updates. The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request manufacturers or SOFTWARE SUPPLIERS to provide security related updates to the DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through the SOFTWARE or third party applications that utilise the DRM. You therefore agree that, if you elect to download a licence from the Internet which enables your use of Secure Content, Suppliers may, in conjunction with such licence, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that SOFTWARE SUPPLIERS distribute. SAGEM and SOFTWARE SUPPLIERS will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by SAGEM or the SOFTWARE SUPPLIERS. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by SAGEM and the SOFTWARE SUPPLIERS

Limitations on Reverse Engineering, Decompilation and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Single DEVICE. The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in the memory of the DEVICE may only be used as part of the DEVICE.

Single EULA. The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.

Software Transfer. You may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software or Companion CD, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.

Software Rental. You may not rent or lease the SOFTWARE.

Speech/Handwriting Recognition. If the SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; and that errors can occur in the component's recognition of your handwriting or speech, and the final conversion into text.. Neither SAGEM nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

NOTICE REGARDING THE MPEG-4 VISUAL STANDARD. The SOFTWARE may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303 331.1880; FAX 303 331.1879

Termination. Without prejudice to any other rights, SAGEM may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

Consent to Use of Data. You agree that SOFTWARE SUPPLIERS may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. SOFTWARE SUPPLIERS may use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

Internet Gaming/Update Features. If the SOFTWARE provides, and you choose to utilise, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorise SOFTWARE SUPPLIERS to use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

Internet-Based Services Components. The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that SOFTWARE SUPPLIERS may automatically check the version of the SOFTWARE and/or its components that you are utilising and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

Links to Third Party Sites. The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of SAGEM. Neither SAGEM nor its affiliates are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites.

If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by SAGEM or its affiliates.

Additional Software/Services. The SOFTWARE may permit SAGEM to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

If SAGEM provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply. SAGEM reserves the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments.

UPGRADES AND RECOVERY MEDIA

- **DEVICE Software.** If the DEVICE Software is provided by SAGEM separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labelled "For Upgrade Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.
- **COMPANION CD.** If any Companion CD component(s) is provided by SAGEM separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labelled "For Upgrade Purposes Only" , you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

RESPONSIBILITIES

SUPPORT AND INFORMATION Should you have any questions concerning this EULA, or if you desire to contact SAGEM]for any other reason, please refer to the address provided in the documentation for the DEVICE.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, SAGEM SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

Troubleshooting

The phone won't start and/or won't take a charge

The battery has completely lost its charge.

Connect the phone to the charger for between 5 and 30 minutes. The phone will only switch on after it has been charging for a few minutes.

You may use the phone again when the Start option is displayed on the screen.

If the phone still won't start after 30 minutes' charging, contact customer service.

Battery status unknown

The phone does not recognize the battery. Please check the position of the battery.

LOW BATTERY

This message is displayed when the battery becomes too weak. The phone switches itself off automatically. Put the phone on charge.

SIM not present

Check if the SIM card is present and properly positioned / inserted. Check the condition of the SIM card. If damaged, please go back to the operator's shop for advice. Contact your after-sales service if the message persists.

Incorrect PIN code

An incorrect PIN code has been entered. Be careful! Three incorrect PIN codes will block the SIM Card.

PIN BLOCKED

If a wrong PIN number is entered three times in succession, your SIM card is blocked. You must then:

- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.
- Enter your PIN number and validate.
- Enter your PIN number again and validate.

After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitely locked. You must then contact your operator to obtain a new card.

SIM LOCKED

In certain cases, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not fit with the phone. Take the SIM card out, and switch it back on. If the message **SIM not present** appears on the screen, you will need to check its compatibility next to the place where you bought it. If not, please contact your after-sales service.

No call connection

Check that the number you have dialled is correct.

If the letter R is displayed on the top right corner of the screen, without any network name displayed, only emergency services can be called.

Check the status of your credit.

Check that the SIM Card you are using offers the service you are requesting ; check if its validity has not expired.

Check and deactivate the outgoing calls restriction when necessary. The network could be saturated. Try later.

If the problem persists, please contact your Technical Helpdesk.

No receiving calls

Try to make a call in order to check that the phone and the networks are operational.

Check and deactivate the permanent call forwarding (permanent call forwarding icon displayed on the screen).

Check and deactivate the incoming calls restriction when necessary. If the problem persists, please contact your Technical Helpdesk.

Quality reception when calling

Avoid placing your fingers on the top of the phone, where the aerial is integrated: the phone will have to use full strength to establish a quality transmission.

Impossible to send message

Check that the message centre number is correctly entered.

To do so, please select the menu **Messages**, select **Options**, select **MSG centre n°** and check the number entered. Please contact your network provider to get this number.

No answer phonebox

Check that the SIM card does offer this service.

Program the call to be forwarded to answer phone using the information provided by the operator.

Check that the SIM card used offers this service. Try to make a call to check that phone and network are operational.

Check if the answer phone number is properly configured. To do so, go to the **Calls** menu, select **Voicemail** and check the number. Otherwise, enter your operator's answer phone centre number.

If answer phone icon flashing

Call the answer phone and listen to the new messages to make it disappear.

In WAP context: SERVER NOT ANSWERING message

Switch off and then switch phone back on.

Logon to home page impossible

In the **WAP** menu, **Clear the cache**.

How do I (un)lock the keypad?

Press the * ↵ key, then [OK].

How do I switch to silent mode?

Hold the * ↵ key down unless ring tone sounds, when a short touch is enough.

How do I activate zoom?

Can be activated only in SMS, MMS and WAP screens; hold down the ⌕ # key.

How do I delete the envelop that appears on the screen?

If you have received a voice mail, please call your voice mailbox and follow the instructions given.

How do I delete the answer phone that appears on the screen?

This answer phone means that you have received a voice mail: please call your voice mailbox and listen to it. Please follow the instructions given.

How do I remove the written message at the bottom of the home page (1 call)

Press the  key to go back to the initial page without messages.

How do I download ring tones?

Logon to one of the following site via your computer: www.planetsagem.com. These site offer to send ring tones to your phone in the form of an SMS. You can also logon to your operator's site. Once the SMS has been received, all you have to do is save it: validate the option « Save messages », the tune will then be added to your list. In addition, you can logon to some sites by phone.

How do I free up memory to download my objects (sounds, images)

Go into the **Multimedia** menu, select **My Pictures** or **My Sounds** then delete some objects.

How do I free up memory to receive new messages?

Manage your Outbox carefully. It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received. To delete them, please go into the **Messages** menu, select **Outbox** then delete some messages. Manage your **Inbox** carefully also.

How do I free up memory to store new contacts in my Phonebook?

It is highly recommended to manage your Phonebook carefully. If you have received pictures enclosed to a Vcard, please save or delete them.

How can I increase the efficiency of my phone?

The most efficient actions are as follows:

Please keep your phone safely in order to avoid pressing the keys unnecessarily: every time a key is pressed the screen lights up.

You can deactivate the screensaver or select the activation time to be more than every 300 s (the screensaver uses processing power).

Make sure that you don't obstruct the antenna with your fingers when using the phone (see page 19).

Customer care

Austria	01 36 02 77 16 64
Belgium	02 62 77 016
France	0 892 701 799 (0,34 €/mn)
Germany	01805 843 850
Greece	0800 44 14 20 38
Hungary	06 1 7774 839
Ireland	0 160 58 355
Italy	800 800 485
Netherlands	020 65 45 724
Poland	0801 801 101
Romania	0800 89 45 21
Russia	495 258 54 33
South Africa	011 369 7870
Spain	91 375 3376
Switzerland	02 25 67 53 99
United Kingdom	0870 24 05 613

Customer Care e-mail address: support.mobiles@sagem.com

Web sites: www.sagem.com/mobiles
www.planetsagem.com
www.sagem-online.com

Index

A

Activating your phone	13
Alarm	43
Anonymous mode	49

B

Backlight	54
Battery	
Charging the battery	20
Installing the battery	14
Beeps	47

C

Calculator	42
Calendar	44
Call barring	52

Calls

Automatic redial	50
Call forward	48
Call waiting	49
Counters	49
Display number	49
View last calls	48

Car kit	53
---------	----

Charger	20, 59
---------	--------

Confidentiality	52
-----------------	----

Contact	23
---------	----

Add contact	23
-------------	----

Call	24
------	----

Call group	23
------------	----

Delete	24
--------	----

Display contact	24
-----------------	----

Modify	24
--------	----

Contacts	15
----------	----

Contrast	53
----------	----

Converter	42
-----------	----

Cost	53
------	----

Currencies	43
------------	----

Customer care	79
---------------	----

D

Date / Time	16, 54
-------------	--------

Description	9
-------------	---

Display	47
---------	----

E

Energy saving	54
---------------	----

F

Fax	55
-----	----

Fixed dialling	22, 52
----------------	--------

G

Games	39
-------	----

GPRS	36, 37, 38, 53
------	----------------

Greeting message	48
------------------	----

GSM	36, 37
-----	--------

I

Icon	12
------	----

Initial screen	12
----------------	----

Input modes	28
-------------	----

IP address	37	Picture	34
K		PIN number	51
Keypad locking	9, 50	PIN2 number	51
L		Principles of navigation	11
Languages	48	Programmable keys	9, 54
Local information	33	R	
M		Recorder	42, 47
Memory	33, 34	Ring tones	41, 46, 76
Menus	7	S	
Messages		Safety information	58
Compose MMS	29	Screensaver	48
Compose SMS	26	Security	50
Drafts	31	Sending options	32
Inbox	30	Sentbox	31
Outbox	31	Serial Speed	55
Receiving messages	30	Shortcut keys	9, 54
Sending options	32	Silent mode	46
MMS	25	SIM card	13, 14, 22, 33, 52
N		Skins	47
Networks	53	SMS	24, 25, 26
O		Sounds	31, 34, 46
Operator	52	T	
P		T9	27
Phone code	51	Timer	43
Phonebook		ToDo	40
Contacts menu	23	Troubleshooting	74
Memory	24	V	
New contact	23	vCal	40, 45
Using the phonebook	22	vCard	25
		Vibrate	46
		Voicemail	50

Volume 46

W

Wallpaper 47

WAP 35, 37, 38

 Configuring WAP parameters 36, 37

 Downloading objects 38

 Services menu 35

 WAP logging off 38

 WAP logging on 37

Warranty 62



* 2 5 2 9 9 3 5 2 3 *



Sagem Communication

SAFRAN Group

Mobile Communication Business Group

www.sagem.com/mobiles

Le Ponant de Paris - 27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE

Société Anonyme

Capital 300 272 000 € - 480 108 158 RCS PARIS