



SGH-X668

User's Guide





Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.



Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press  .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Use of authorised software

Use only Samsung-authorised software. The use of any unauthorised software could damage your phone.

Qualified service


Only qualified service personnel may repair your phone.

 
For more detailed safety information, see "Health and safety information" on page 76.

About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
- Indicates that you can get more information on the referenced page.
- Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [] Indicates a key on the phone. For example, [OK/⏏].
- < > Indicates a soft key, whose function is displayed on the phone screen. For example, <Menu>



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.

Special features of your phone



- **IrDA**

Send and receive Phonebook and calendar data via an infrared port.



- **Web browser**

Access the wireless web to get current information and up-to-the-minute a wide variety of media content.



- **Get personal with photo caller ID**

See who's calling you when their very own photo displays.



- **Name card**

Create name cards with your number and profile.

- **Multimedia Message Service (MMS)**

Send and receive MMS messages with a combination of text, images, video, and audio.



- **Java**

Enjoy Java™-based embedded games and download new games.



- **Calendar**

Keep track of your daily, weekly, and monthly schedule.



- **Voice recorder**

Record memos or sounds.



- **Alarm**

Use your phone as an alarm clock to wake you up in the morning or notify you of an impending event.



- **Timer and stopwatch**

Count down to a specific event or measure the time it takes to do your exercise or work.

Contents

Unpack 6

Make sure you have each item

Your phone 6

Buttons, features, and locations

Get started 7

First steps to operating your phone

Install and charge the phone 7

Power on or off 8

Keys and display 9

Access menu functions 11

Customise your phone 12

Make/Answer calls 14

Step outside the phone 14

Begin with your camera, web, and other special features

Use the camera 14

Browse the web 15

Use Contacts 16

Send messages 17

View messages 18

Enter text 19

Pinyin, PTI, Stroke, Quick English, English, Number, and Symbol modes

Call functions 24

Advanced calling features

Menu functions 28

All menu options listed

Solve problems 74

Help and personal needs

Health and safety information 76

Overview of menu functions

To access Menu mode, press **<Menu>** in Idle mode.

1 Call log	▶ p. 28	3 Applications	▶ p. 34	5 Messages	▶ p. 41	8 Camera	▶ p. 58
1 Recent contacts	▶ p. 28	1 Java world	▶ p. 34	1 Create message	▶ p. 41		
2 Missed calls	▶ p. 28	2 Voice recorder	▶ p. 35	2 My messages	▶ p. 43		
3 Dialled calls	▶ p. 28	3 World clock	▶ p. 36	3 Templates	▶ p. 47		
4 Received calls	▶ p. 29	4 Alarm	▶ p. 36	4 Delete all	▶ p. 48		
5 Delete all	▶ p. 29	5 Calculator	▶ p. 37	5 Settings	▶ p. 48		
6 Call time	▶ p. 29	6 Converter	▶ p. 37	6 Memory status	▶ p. 50		
7 Call cost*	▶ p. 29	7 Timer	▶ p. 38				
		8 Stopwatch	▶ p. 38	6 File manager	▶ p. 51		
		9 SIM AT*	▶ p. 38	1 Images	▶ p. 51		
2 Phonebook	▶ p. 30			2 Videos	▶ p. 52		
1 Contact list	▶ p. 30	4 Browser	▶ p. 39	3 Sounds	▶ p. 53		
2 Add new contact	▶ p. 30	1 Home	▶ p. 39	4 Other files	▶ p. 53		
3 Group	▶ p. 31	2 Fun club	▶ p. 40	5 Memory status	▶ p. 54		
4 Speed dial	▶ p. 32	3 Bookmarks	▶ p. 40				
5 My namecard	▶ p. 32	4 http://	▶ p. 41	7 Calendar	▶ p. 54		
6 Own number	▶ p. 33	5 WAP profile	▶ p. 41				
7 Management	▶ p. 33	6 Clear cache	▶ p. 41				
8 Service number*	▶ p. 33						
						9 Settings	▶ p. 64
						1 Time and date	▶ p. 64
						2 Phone settings	▶ p. 64
						3 Display settings	▶ p. 66
						4 Sound settings	▶ p. 67
						5 Network services	▶ p. 68
						6 Security	▶ p. 71
						7 Connection settings	▶ p. 72
						8 Reset settings	▶ p. 73

* Shows only if supported by your SIM card.

Unpack

Make sure you have each item



Phone



Travel Adapter



Battery



User's Guide


You can obtain various accessories from your local Samsung dealer.



- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Buttons, features, and locations

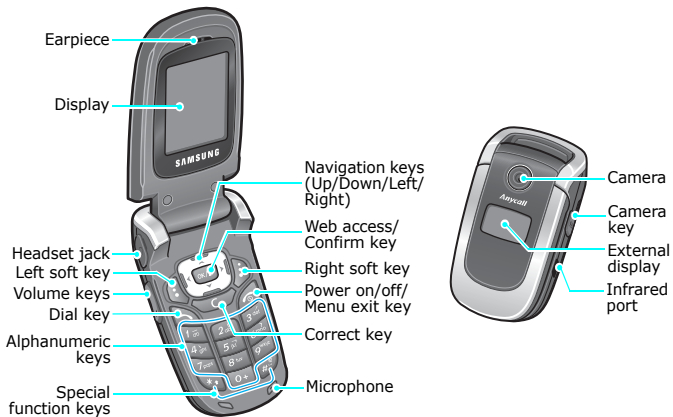

Get started

First steps to operating your phone

SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.


Install and charge the phone

- 1** Remove the battery.



✓ If the phone is already on, first turn it off by holding [⏻].

- 2** Insert the SIM card.

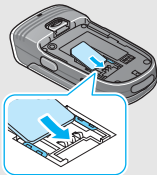

✓ Make sure that the gold-coloured contacts on the card face down into the phone.

- 3** Install the battery.



- 4** Plug the travel adapter into the phone.



- 5** Plug the adapter into a standard AC wall outlet.


- 6** When the phone is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

7 Remove the adapter from the phone.



Low battery indicator

When the battery is low:


- a warning tone sounds,
- the low battery message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

Power on or off

Switch on

1. Open the phone.


2. Press and hold [] to turn on the phone.

Do not turn on the phone when mobile phone use is prohibited.

3. If necessary, enter the PIN and press <OK>.

Switch off

1. Open the phone.

2. Press and hold [].

Keys and display

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, access your favourite menus directly. ► p. 65
In Menu mode, scroll through menu options.



In Idle mode, launch the web browser.
In Menu mode, select the highlighted menu option or confirm input.



Send or answer a call.
In Idle mode, retrieve the recent numbers dialled, missed, or received.



Delete characters from the display.



End a call.
Press and hold to switch the phone on or off.
In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.
In Idle mode, press and hold [1] to access your voicemail server. Press and hold [0] to enter an international call prefix.



Enter special characters.
In Idle mode, press and hold [#] to activate or deactivate Quiet mode. Press and hold [*] to enter a pause between numbers.



Adjust the phone volume.
In Idle mode, with the phone open, adjust the keypad tone volume. With the phone closed, press and hold to turn on the backlight.



In Idle mode, press and hold to turn on the camera.
In Camera mode, take a photo or record a video.

Display

Layout



Icons

display various icons.








Text and graphics




 



 

 
display messages, instructions, and information you enter.

Soft key function indicators

show the current functions assigned to the soft keys.

Icons*

-  Received signal strength
-  Call in progress
-  Out of your service area; you cannot make or receive calls
-  GPRS network
-  Roaming network
-  New message
-  New voicemail


-  Call diverting feature active
-  Home Zone, if registered for the appropriate service
-  Office Zone, if registered for the appropriate service
-  Infrared port active
-  Call ringer set to vibrate
-  Quiet mode (Vibration)
-  Quiet mode (Mute)
-  Mute mode, during a call
-  Alarm set
-  Battery power level

* Depending on your country or service provider, the icons shown on the display may vary.

Access menu functions

Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

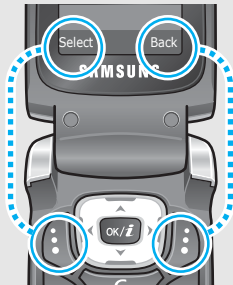

Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>**, **<OK>**, or [OK/i] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods.
 - Press **<Back>** to move up one level.
 - Press [↶] to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want.

Customise your phone

Display language

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

Call ringer melody

1. In Idle mode, press <Menu> and select **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
2. Select a ringtone category.
3. Select a ringtone.
4. Press <Save>.

Idle mode wallpaper

You can set wallpaper for the idle screen on each display.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Wallpaper** → **Main display**.
2. Select an image or a video clip category.
3. Select an image or a video clip.
4. Press <Select>.
5. Press <Save>.

Menu mode skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.

Menu shortcuts

You can set the Navigation keys as shortcuts to access your favourite menus.

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Quiet mode

You can switch the phone to Quiet mode to avoid disturbing other people.

Press and hold [#] in Idle mode.



Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.



1. In Idle mode, press <**Menu**> and select **Settings** → **Security** → **Change password**.
2. Enter the default password, **00000000**, and press <**OK**>.
3. Enter a new 4- to 8-digit password and press <**OK**>.
4. Enter the new password again and press <**OK**>.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press <**OK**>.

Make/Answer calls



Make a call

1. In Idle mode, enter an area code and phone number.
2. Press [.
3. To end the call, press [.

Answer a call

1. When the phone is ringing, press [.
2. To end the call, press [.

Adjust the volume during a call

 

Press [/.

Step outside the phone

Begin with your camera, web, and other special features

Use the camera




Take a photo

1. Open the phone.
2. In Idle mode, press and hold [] to turn on the camera.
3. Aim the lens at the subject and adjust the image.
4. Press [] to take a photo. The photo is saved automatically.
5. Press <**Preview**> to take another photo.

View a photo

1. In Idle mode, press <**Menu**> and select **File manager** → **Images** → **Photos**.
2. Select the photo you want.

Record a video

1. In Idle mode, press and hold [] to turn on the camera.
2. Press [**1**] to switch to Record mode.
3. Press [] to start recording.
4. Press [] to stop recording. The video is saved automatically.
5. Press <**Preview**> to record another video.

 
Play a video

1. In Idle mode, press <**Menu**> and select **File manager** → **Videos** → **Video clips**.
2. Select the video you want.


Browse the web

Using a built-in web browser, you can get easy access to the wireless web to get a variety of up-to-date services and information and to enjoy downloads of web content.

Launch the web browser

In Idle mode, press [] and select **WWW Services**.

 Navigate with the web browser

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [].
- To return to the previous page, press <**Options**> and select **Back**.
- To access browser options, press <**Menu**>.

Use Contacts

Add an entry

To the phone's memory:

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → **Phone** → a number type.
3. Specify contact information: Last name, First name, Mobile, Home, Office, Fax, Other, Email, Caller ID, Ringtone, Group, and Memo.
4. Press [OK/↵] to save the entry.

To the SIM card:

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → **SIM**.
3. Enter a name.
4. Press [OK/↵] to save the entry.

Find an entry

1. In Idle mode, press **<Contacts>**.
2. Select an entry.
3. Scroll to a number and press [↵] to dial, or press **<Options>** to access options.

Create and send a name card

1. In Idle mode, press **<Menu>** and select **Phonebook** → **My namecard**.
2. Specify your contact information.
3. Press **<Save>** to save the name card.
4. To send the name card to other people, press **<Options>** and select **Send via** → a sending method.

Send messages

Send a text message (SMS)

1. In Idle mode, press <Menu> and select **Messages** → **Create message** → **Text message**.
2. Enter the message text.
3. Press <Options> and select **Save and send** or **Send only**.
4. Enter destination numbers.
5. Press [OK/↵] to send the message.

Send a multimedia message (MMS)

1. In Idle mode, press <Menu> and select **Messages** → **Create message** → **Multimedia message**.
2. Select **Subject**.
3. Enter the message subject and press [OK/↵].

4. Select **Image and video** or **Sound**.
For **Image and video**, select **Add image** or **Add video** and add an image or video clip.
For **Sound**, select **Add sound** and add a sound clip.
5. Select **Message**.
6. Enter the message text and press [OK/↵].
7. Press <Options> and select **Send**.
8. Enter destination numbers or addresses.
9. Press [OK/↵] to send the message.

View messages

View a text message

When a notification appears:

1. Press <**View**>.
2. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select an SMS message (✉).

View a multimedia message

When a notification appears:

1. Press <**View**>.
2. Press <**Options**> and select **Retrieve**.
3. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select an MMS message (📎).

Enter text

Pinyin, PTI, Stroke, Quick English, English, Number, and Symbol modes

You can enter text for some features, such as Messages, Contacts, or Calendar, using Pinyin, PTI, and Stroke modes for Chinese, and Quick English and English modes for English. You can also use Number mode and Symbol mode.

Changing the text input mode

- Press the right soft key and select the text input mode you want.

Pinyin (**T9 拼**)

PTI (**T9 词**)

Chinese S Stroke (**T9 笔**)

Chinese T Stroke (**T9 笔**)

Quick English (**T9 Ab**)

English (**ABAb**)

Number (**1 2 3**)

Symbolic (No indicator)

- Press and hold [*****] to quickly switch to Symbol mode.

Using Chinese Pinyin mode

Pinyin is a system to enter Chinese words by spelling them phonetically (how they sound) using the Latin alphabet. With the Pinyin input method, you can enter Chinese characters by keying in the Pinyin string using the phone's keypad.

Entering characters in Pinyin mode

- Press the keys corresponding to the phonetic spelling, referring to the letters printed on the keys.

Example: To enter “你,” press [**6**] and [**4**] to enter “ni.”

- Press [Left] or [Right] to select alternative pinyins for the keys you have pressed.
- If you cannot find the character you want from the display, press [Up] or [Down] to scroll through the word choices.
- Press [**1**] to activate the character selection field. A number, from 1 to 5, is added to each character.
- Press the number key corresponding to the character you want.

Rapid character entry

To enter the word “zhong guo (中国)”, enter the first character using the following keystrokes; [9], [4], [6], [6], [1], and [1]. You do not have to complete the Pinyin spelling to include “guo (国).” The character displays automatically.

Tips for using Pinyin mode

- Press [#] to insert a space between characters.
- Press and hold [#] to move the cursor down one line.
- Press [Left] or [Right] to move the cursor.
- Press [C] to clear letters one by one. Press and hold [C] to clear the entire display.

Using Phrasal Text Input mode

Phrasal Text Input (PTI) is an advanced Pinyin mode which predicts not only words, but phrases for your key presses. Using PTI mode, you can also add new words or phrases to the PTI dictionary.

Entering characters in PTI mode

Entering characters in PTI mode is basically the same as in Pinyin mode except that you can enter phrases. Refer to “Using Chinese Pinyin mode.”

Adding words or phrases to the PTI dictionary

Once you have assigned words or phrases to the PTI dictionary, the words or phrases will be the first choices for the corresponding key presses.

1. Press <Options> and select **Add to new phrases** to add the word or the phrase you want to the PTI dictionary.
2. Enter the word or the phrase you want.
3. Press <OK> to insert it into your text.

Using Chinese Stroke mode

This mode allows you to enter individual Chinese strokes, in written order, from top to bottom, and from left to right.

Using Quick English mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in Quick English mode

1. Press [**2**] to [**9**] to start entering a word. Press each key once for each letter.

Example: Press [**4**], [**3**], [**5**], [**5**], and [**6**] to enter *Hello*.

T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting the characters.
3. When the word displays correctly, go to step 4. Otherwise, press [**0**] to display alternative word choices for the keys that you have pressed.
For example, *Of* and *Me* use [**6**] and [**3**].
4. Press [**#**] to insert a space and enter the next word.

Tips for using Quick English mode

- Press [**1**] to enter periods or apostrophes automatically.
- Press [*****] to change case.
- Press [**#**] to insert a space between characters.
- Press and hold [**#**] to move the cursor down one line.
- Press the Navigation keys to move the cursor.
- Press [**C**] to clear letters one by one. Press and hold [**C**] to clear the entire display.

Adding a new word to Quick English mode

1. Enter the word that you want to add.
2. Press [**0**] to display alternative words for your key presses. When there are no more alternative words, **Add** appears on the bottom line.
3. Press **<Add>**.
4. Enter the word you want using English mode and press **<OK>**.

Using English mode

Press the appropriate key until the character you want appears on the display.

Key	Characters in order displayed	
	Upper case	Lower case
1	. , - ? ! @ : () / # _ ~ 1	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space + = < > € £ \$ % & ¥ ¤ 0	

Tips for using English mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.
- Press [#] to insert a space between characters.

- Press and hold [#] to move the cursor down one line.
- Press [*] to change case.
- Press the Navigation keys to move the cursor.
- Press [C] to clear letters one by one. Press and hold [C] to clear the entire display.

Using Number mode

Number mode enables you to enter numbers.

Press the keys corresponding to the digits you want.

Using Symbol mode


Symbol mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].
select a symbol	the corresponding number key.
clear the entered symbols	[C].
insert the symbols	<OK>.

Call functions

Advanced calling features


Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [].





- Press [**C**] to clear the last digit or press and hold [**C**] to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold [*****] to enter a pause between numbers.

Making an international call

1. In Idle mode, press and hold [**0**]. The **+** character appears.
2. Enter the country code, area code, and phone number, then press [].

Redialling recent numbers

1. In Idle mode, press [] to display the list of recent numbers.

2. Scroll to the number you want and press [].


Making a call from Contacts

Once you have stored a number in Contacts, you can dial the number by selecting it from Contacts.


► p. 30

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ► p. 32

You can quickly dial a number from the SIM card using its location number assigned when stored.

1. In Idle mode, enter a location number and press [**#**].
2. Press [Left] or [Right] to scroll through other numbers.
3. Press **<Dial>** or [] to dial the number you want.

Ending a call

Close the phone or press [].

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.

Press <**Accept**> or [↶] to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key, except for <**Reject**>, [▲/▼], or [📞]. ▶ p. 65
- When **Active flip** is active, you can simply open the phone. ▶ p. 65
- Press <**Reject**> or [📞] to reject a call.
- Press and hold [▲/▼] to reject a call or mute the ringer, depending on the **Volume Key** setting. ▶ p. 65

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <**View**>.
2. If necessary, scroll through the missed calls.
3. Press [↶] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the left side of the phone. The button on the headset works as listed below:

To	Press
redial the last call	and hold the button twice.
answer a call	the button.
end a call	the button.

Options during a call

You can access a number of functions during a call.

Adjusting the volume during a call

Use [▲/▼] to adjust the earpiece volume during a call.


Press [▲] to increase the volume level and [▼] to decrease the volume level.

Placing a call on hold/Retrieving

Press <**Hold**> or <**Retrieve**> to place a call on hold or retrieve the call.


Making a second call

You can make another call if your network supports it.

1. Press <**Hold**> to put the call on hold.
2. Make the second call in the normal way.
3. Press <**Swap**> to switch between the calls.
4. Press <**Options**> and select **End held call** to end the call on hold.
5. To end the current call, press [].

Answering a second call


You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature. ► p. 69

1. Press [>] to answer the call. The first call is automatically put on hold.
2. Press <**Swap**> to switch between the calls.
3. Press <**Options**> and select **End held call** to end the call on hold.

4. To end the current call, press [].

Using the Speakerphone feature

Use your phone as a speaker phone to talk and listen with the phone a short distance away.

Press [] to activate the Speakerphone feature. Press the key again to switch back to the earpiece.

Using In-call options

Press <**Options**> to access the following options during a call:

- **Speaker on/Normal:** turn on the Speakerphone feature or switch back to Normal mode.
- **Menu:** access the phone's menu functions.
- **Voice on/Voice off:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.
- **Mute keys/Send keys:** switch the key tones on or off.



To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **Contacts:** access the contact list.
- **End held call:** disconnect the call currently on hold.
- **Transfer:** transfer the currently active call to a caller on hold. The two callers can talk to each other, but you are disconnected from the call.

Making a multi-party call

Use this feature to allow as many as six people to join a multi-party call, or conference call.

Your service provider must support multi-party calls for you to use this feature.

Setting up a multi-party call


1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.

3. Press <**Options**> and select **Join**. The first participant is added to the multi-party call.
4. If desired, call another person or answer an incoming call.
5. Press <**Options**> and select **Join**.
6. Repeat steps 4 and 5 as desired.

Having a private conversation with one participant

1. Press <**Options**> and select **Private**.
2. Select a name or number from the participant list.
You can talk privately with that person, while the other participants converse with each other.
3. To return to the multi-party call, press <**Options**> and select **Join**.

Disconnecting one participant

1. Press <**Options**> and select **Remove**.
2. Select a name or number from the participant list.
The participant is dropped from the call, but the call continues with the other parties.
3. Close the phone or press [] to end the multi-party call.

Menu functions

All menu options listed

Call log *(Menu 1)*

Use this menu to view the calls you have dialled, received, or missed, and the length of calls. You can also check the cost of your calls, if your SIM card supports this function.

To access this menu, press <**Menu**> in Idle mode and select **Call log**.

Recent contacts *(Menu 1.1)*

This menu displays the most recent calls dialled, received, or missed.

Accessing a call record

1. Press [Left] or [Right] to move to another call type.
2. Press [Up] or [Down] to scroll through the call list.

3. Press [**OK/↵**] to view the details of a call, or [**↶**] to dial a number.

Using call record options

While viewing the call list, press <**Options**> to access the following options:

- **Detail:** show the details of the selected call.
- **Paste:** edit the number.
- **Save contact:** save the number to Contacts.
- **Send message:** send an SMS or MMS message to the selected number.
- **Delete:** delete the selected call record or all records.

Missed calls *(Menu 1.2)*

This menu displays the most recent calls you did not answer.

Dialled calls *(Menu 1.3)*

This menu displays the most recent calls you have dialled.

Received calls (Menu 1.4)

This menu displays the most recent calls you have received.

Delete all (Menu 1.5)

Use this menu to delete all of the records in each call type.

1. Press [**OK/↓**] to check the call types to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Call time (Menu 1.6)

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time:** check the length of your last call.
- **Total dialled calls:** check the total length of all the calls you have dialled.
- **Total received calls:** check the total length of all the calls you have received.

To reset the call timers, press <**Reset**>. You need to enter the phone password.



The password is preset to **00000000**. You can change this password. ► p. 71

Call cost (Menu 1.7)

This network feature displays the cost of calls. This menu is available only if supported by your SIM card. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all of your calls. If the total cost exceeds the maximum cost set in **Set max cost**, you must reset the counter before you can make another call.
- **Max cost:** check the maximum cost limit set in **Set max cost**.
- **Reset counters:** reset the cost counters.
- **Set max cost:** set the maximum cost authorised for your calls.
- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

Phonebook (Menu 2)

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Contacts.

To access this menu, press **<Menu>** in Idle mode and select **Phonebook**.

Contact list (Menu 2.1)

Use this menu to search for numbers in Contacts.

Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name from the list.
3. Scroll to a number and press [****] to dial, or [**OK/↵**] to view contact information.

Using Contacts options

While viewing the contact list or the contact details, press **<Options>** to access the following options:

- **View**: view the contact.

- **Edit**: edit contact information.
- **Send message**: send an SMS or MMS message to the selected number.
- **Add new contact**: add a new contact to contacts.
- **Copy to**: copy the contact to the phone's memory or to the SIM card.
- **Send via**: send the contact via SMS or MMS message infrared port.
- **Delete**: delete the selected contact.
- **Add new phrases**: add the entered word or phrase to the PTI dictionary.
- **Cancel**: return to the previous level.

Add new contact (Menu 2.2)

Use this menu to add a new contact to Contacts.

Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.
 - **Last name/First name**: assign a name.

- **Mobile/Home/Office/Fax/Other:** add a number in any type.
 - **Email:** assign an e-mail address.
 - **Caller ID:** assign an image to alert you to a call from the person.
 - **Ringtone:** assign a ringtone to alert you to a call from the person.
 - **Group:** assign the contact to a caller group.
 - **Memo:** add a memo about the person.
3. Press **<Save>** to save the contact.

Storing a number on the SIM card

1. Select **SIM**.
2. Enter information about the contact.
 - **Name:** assign a name.
 - **Phone number:** add a number.
 - **Location:** assign a location number.



To assign a caller ID image, ringtone, or group, the contact must be saved to the phone's memory.

3. Press **<Save>** to save the contact.

Group (Menu 2.3)

Use this menu to organise your contacts in caller groups.

Creating a new caller group

1. Press **<Options>** and select **Add**.
2. Enter a name for the group.
3. Select the **Caller ID** line and set an image.
4. Select the **Ringtone** line and set a melody.
5. Press **<Save>** to save the group.

Adding members to a caller group

1. Select a group.
2. Press **<Add>**.
3. Press [**OK/↓**] to select specific contacts you want to add to the selected group and press **<Select>**.
4. To add more members, press **<Options>** and select **Add → a contact**.
5. Repeat step 4 as desired.

Managing caller groups

While viewing the group list, press <**Options**> to access the following options:

- **View:** display the members of the selected group.
- **Add:** add a new group.
- **Edit:** change the group properties.
- **Send message:** send an SMS or MMS message to the group members you want.
- **Delete:** delete the selected group or all groups. Group members, however, will not be deleted from Contacts.

Speed dial *(Menu 2.4)*

Use this menu to assign a speed dial number (2 to 9) for 8 of your most frequently called numbers.

Assigning speed dial numbers

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select a contact from the contact list.
3. Select a number, if the contact has more than one number.

Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Add:** assign a number to an unassigned key.
- **View:** check the name and number assigned to a key.
- **Change:** assign a different number to a key.
- **Remove:** clear the speed dial setting for a key.

Dialling speed dial entries

In Idle mode, press and hold the appropriate key.

My namecard *(Menu 2.5)*

Use this menu to create a name card and send it to other people.

Saving your name card

The procedure for creating your name card is the same as the one for saving a phone number in the phone's memory. ► p. 30

Using name card options

After saving your name card, press <**Options**> to access the following options:

- **Edit:** edit the name card.
- **Send via:** send the name card via SMS, MMS message or infrared port.
- **Delete:** delete the name card.

Own number *(Menu 2.6)*

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.

Management *(Menu 2.7)*

Use this menu to manage Contacts entries.

- **Saving location:** select a default memory location for saving contacts. If you select **Ask on saving**, the phone will ask you to select a memory location each time you save a number.

- **Copy all to phone:** copy all of the contacts stored on the SIM card to the phone's memory, or vice versa.
- **Delete all:** delete all of the contacts from your phone's memory, your SIM card, or both.
- **Memory status:** check the number of contacts you have stored in the phone's memory and on the SIM card.

Service number *(Menu 2.8)*

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and numbers for directory enquiries. This menu is available if your SIM card supports SDN.

1. Scroll to the number you want and press <**View**>.
2. Press <**Dial**> or [**↵**].

Applications (Menu 3)

Use this menu to play Java games, record voice memos, set time zone, or use convenient features, such as an alarm clock, calculator, converter, timer, and stopwatch. You can also synchronise Contacts or calendar data in the phone's memory with a PC.

To access this menu, press **<Menu>** in Idle mode and select **Applications**.

- ☑ Your phone may not support certain sound formats. This may affect the play of some downloaded content, such as certain Java games or sound files.

Java world (Menu 3.1)

Use this menu to access the embedded Java games and downloaded Java applications.

Accessing an embedded game

1. Select **Downloads** → a game.
2. Press [OK/↵].

Using Java application options

From the application list, press **<Options>** to access the following options:

- **Launch:** launch the selected application.
- **Delete:** delete the selected application or all applications, except for the standard games.
- **Properties:** access the application properties.
- **Upgrade:** upgrade the application to the latest version.
- **Protection:** lock the application to protect it from being deleted, or unlock the application.
- **Send information:** send the URL containing the application via SMS.

Changing Java settings

You can select a connection profile to be used for applications requiring network access.

From the **Java world** menu, select **Settings** → a profile.

- ☑ You can add or edit a profile using the **Connection settings** menu. ▶ p. 72

Checking memory status

You can view the amount of used and available memory for Java games. You can also view the number of downloaded games.

From the **Java world** menu, select **Memory status**.

Voice recorder (Menu 3.2)

Use this menu to record voice memos.

Recording a voice memo

1. Press [OK/⏏] to start recording.
2. Speak into the microphone.
Press [OK/⏏] to pause or resume recording.
3. Press <Stop> or [Down] to end recording. The voice memo is saved automatically.
4. Press [Up] to record another voice memo, or press <Options> to access the following options:
 - **Play:** play back the voice memo.
 - **Record:** record a new voice memo.
 - **Go to voice recorder files:** go to the **Voice recording list** folder.
 - **Send via MMS:** send the voice memo via MMS message.
 - **Delete:** delete the voice memo.
 - **Rename:** change the name of the voice memo.
 - **Protection:** protect the voice memo from being deleted.

- **Details:** access the properties of the voice memo.

Playing the voice memo

1. From the Voice recorder screen, press <Options> and select **Go to voice recorder files**.
2. Select a voice memo. The memo plays.
During playback, use the following keys:

Key	Function
OK/⏏	Pauses or resumes playback.
Left	Moves backward in a memo.
Right	Moves forward in a memo.
Down	Stops playback.
▲/▼	Adjusts the volume.

During playback, press <Stop> and then <Options> to access the following options:

- **List:** display the voice memo list.
- **Send via MMS:** send the voice memo via MMS message.

- **Delete:** delete the voice memo.
- **Rename:** change the name of the voice memo.
- **Move to Favourite sounds:** go to the **Favourite sounds** folder.
- **Protection:** protect the voice memo from being deleted.
- **Details:** access the properties of the voice memo.

Using voice memo options

From the Voice recorder screen, press <Options> to access the following options:

- **Record:** record a new voice memo.
- **Go to voice recorder files:** go to the **Voice recording list** folder.

World clock (Menu 3.3)

Use this menu to set your local time zone and find out what time it is in another part of the world.

Viewing world time

1. From the world map, press [Left] or [Right] to scroll to the city you want. As the time line moves, the time and date of the given zone display.
2. Press [OK/↵] to save the city as your local time zone.

Applying daylight savings time

1. From the world map, press <Options> and select **Set daylight saving time**.
2. Press [OK/↵] to check the time zones you want.
3. Press <Save>.

Alarm (Menu 3.4)

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings. A wake-up alarm is not affected by your sound settings.

Setting an alarm

1. Select the type of alarm.
2. Set each alarm option:
 - **Alarm:** activate the alarm.
 - **Alarm time:** enter the time for the alarm to ring.
 - **AM/PM:** Set **AM** or **PM** in 12-hour format.
 - **Repeat:** select a repeat unit.
 - **Alarm tone:** select an alarm tone.
3. Press **<Save>**.

Stopping an alarm

- For an alarm, press **<Exit>** or any key.
- For a Morning call alarm, press **<Confirm>** or **[OK/↵]**.
Press **<Snooze>** or any key, except **<Confirm>** and **[OK/↵]** to cause it to sound again after 5 minutes. You can do this a maximum of 5 times.

Setting the alarm to ring even if the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to ring, the phone switches on and sounds the alarm.

Calculator (Menu 3.5)

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

1. Enter the first number.
 - Press left soft key to insert a decimal point or bracket.
 - Press **[*]** or **[#]** to move the cursor.
2. Press one of the Navigation keys to access the math function you want.
3. Enter the second number.
4. Press **[OK/↵]** to view the result.
5. If necessary, repeat from step 2 to continue the calculation.

Converter (Menu 3.6)

Use this menu for common conversions, such as currency and temperature.

1. Select a converter.

2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted and press [Down].
 - Press [*] to insert a decimal point.
 - Press [#] to change the temperature to above zero (+) or below zero (-).
4. Press [Left] or [Right] to select the unit to which you want to convert.
The equivalent value for the amount you entered displays.

☒ For the currency converter, you can view and set currency rates by pressing <View rate>.

Timer (Menu 3.7)

Use this menu to set a period of time for the phone to count down. The phone will sound an alarm when the specified period of time has expired.

Starting the timer

1. Press <Set>.
2. Enter the length of time you want to count down and press <OK>.

3. Press [OK/↓] to start counting down.

Stopping the timer

- Press <Exit> or any key when the timer rings.
- Press [OK/↓] on the Timer screen to stop the timer before it rings.

Stopwatch (Menu 3.8)

Use this menu to measure elapsed time. The maximum time is 10 hours.

1. Press [OK/↓] to start the stopwatch.
2. Press [OK/↓] to check an interval. You can repeat this step for a total of 4 intervals.
3. To reset the stopwatch, press <Reset>.

SIM AT (Menu 3.9)

This menu is available if you use a SIM AT card that supports SIM Application Tool kit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

Browser (Menu 4)

The Wireless Application Protocol (WAP) browser on your phone allows you to access the wireless web.

From the wireless web, you can access up-to-date information and a wide variety of media content, such as games, wallpapers, ringtones, and music files.

To access this menu, press **<Menu>** in Idle mode and select **Browser**.

Home (Menu 4.1)

Use this menu to connect your phone to the network and load the homepage of the wireless web service provider. You can also press [OK/Enter] and select **WWW Services** in Idle mode.

Navigating the web browser

To	Press
scroll through browser items	[Up] or [Down].
select a browser item	<Options> and select Select .

To	Press
return to the previous page	<Options> and select Back .


Using page options

From any web page, press **<Menu>** to access the following options:



- **Bookmarks:** bookmark the current page or access the bookmark list.
- **Reload:** reload the current page with updated information.
- **Home:** return to the homepage.
- **Go to URL:** enter a URL address manually.
- **Show URL:** display the URL address of the current web page. You can also set the current page as the homepage for the web browser or a bookmark.
- **Clear cache:** clear the cache. A cache is a temporary memory that stores recently accessed web pages.
- **Inbox:** access push messages in the web browser.

- **Show images:** display images on the current page.
- **Certificates:** access certificate information.

Exiting the browser

Press [>] to end the network connection and exit the browser.

Fun club (Menu 4.2)

Use this menu to access Samsung Fun Club, the preset web site providing Samsung mobile phone users with attractive download services of updated ringtones and wallpapers. You can also press [/>] and select **Fun club** in Idle mode.

You can download:

- images and ringtones via SMS.
- 4-level greyscale and colour images.
- polyphonic melodies.
- information and electronic catalogues for Samsung Electronics products.

SFC home (Menu 4.2.1)

Selecting this menu loads the Samsung Fun Club homepage.



When you access Samsung Fun Club for the first time, please launch the web browser first, then access Samsung Fun Club. This service requires WAP subscription and may be unavailable depending on your local system and services.

Service area (Menu 4.2.2)

Each time you move to China or HongKong, you need to change this setting to use the SFC service, according to the area where you are.

Bookmarks (Menu 4.3)

Use this menu to save URL addresses in order to quickly access web pages.

Adding a bookmark

1. Select an empty location.
2. Enter a title for the bookmark and press [Down].
3. Enter a URL address and press <**Save**>.

Accessing a bookmarked page

Selecting a bookmark item launches the web browser and access the associated web page.

Using bookmark options

After saving an item, press <**Options**> to access the following options:

- **Go to URL:** access the bookmarked web page.
- **Edit:** edit the URL address and title of the bookmark.
- **Delete:** delete the selected bookmark or all bookmarks.

http:// (Menu 4.4)

Use this menu to manually enter a URL address and access the associated web page.

WAP profile (Menu 4.5)

Use this menu to select a connection profile to be used for accessing the wireless web. You can also add or edit a profile. ► p. 72

Clear cache (Menu 4.6)

Use this menu to clear information stored in the cache.

Messages (Menu 5)

Use the **Messages** menu to send and receive text messages and multimedia messages. You can also use push message and cell broadcast message features.

To access this menu, press <**Menu**> in Idle mode and select **Messages**.

Create message (Menu 5.1)

Use this menu to create and send messages.

Text message (Menu 5.1.1)

Short Message Service (SMS) allows you to send or receive text messages that may include simple pictures, animated images, and melodies.

1. Enter your message.

☒ The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

2. Press **<Options>** to access the following options for creating a message:

- **Save and send:** both save a copy of the message and send the message.
- **Send only:** send the message.
- **Insert:** add a template, Contacts entry, or bookmark.
- **Add image/Add animation/Add melody:** attach a simple image, animated image, or melody.
- **Attach:** attach a name card or calendar data as a data format attachment.
- **Save to:** save the message in the **Drafts** box or one of the folders you have created.
- **Add new phrases:** add the entered word or phrase to the PTI dictionary.
- **Cancel:** return to the previous level.

3. When you have finished, press **<Options>** and select **Save and send** or **Send only**.

4. Enter a destination number.

To send the message to more than one recipient, fill in additional destination fields.

5. Press [**OK/↓**] to send the message.

Multimedia message (Menu 5.1.2)

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Select the **Subject** line.
2. Enter the message subject and press [**OK/↓**].
3. Select the **Image and video** or **Sound** line and add an image, a video, or a sound file.

- ☒ • The maximum size allowed for a message can differ, depending on your service provider.
- Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

4. Select the **Message** line
5. Enter the message text and press [**OK/↓**].

6. Press **<Options>** to access the following options for editing the message:
 - **Add**: add a subject or text to your message.
 - **Edit**: edit the subject or text of your message.
 - **Add image/Add video/Add sound**: add photos, videos, or sounds to the message.
 - **Change image/Change video/Change sound**: replace an added item.
 - **Preview**: display the message you have created.
 - **Send**: send the message.
 - **Save to**: save the message in the **Drafts** box or one of the folders you have created.
 - **Add page**: add pages. Move to each page by pressing [Left] or [Right].
 - **Delete page**: delete an added page.
 - **Edit page**: change the duration of page display or move the page forward among the other pages.
 - **Attach**: attach Contacts entry as name cards or calendar data as data format attachments.
 - **Clear subject/Clear message**: clear the subject or text.

- **Remove media/Remove sound**: remove an added item.

7. When you have finished, press **<Options>** and select **Send**.
8. Enter a phone number or e-mail address.
To send the message to more than one recipient, fill in additional destination fields.
9. Press [**OK/✓**] to send the message.

My messages (Menu 5.2)

Use this menu to access messages you have received, sent, or which have failed in sending.

Inbox (Menu 5.2.1)









This folder stores all of the messages you have received.

Viewing a message

The following icons may appear on the message list to show the message type:

-  SMS
-  MMS

Menu functions

-  MMS notification ( : Being retrieved,  : Failed to retrieve)
 -  Voicemail
 -  Push message from web servers.
 -  Configuration message, containing network parameters from the service provider.
 -  CB (Cell broadcast) message from your service provider
 -  Delivery report for your sent messages
- ☒
 - Depending on the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded.
 - A ! icon next to a message means that the message is of high priority. A grey-coloured message icon indicates low priority.

While viewing the message list, press <**Options**> to access the following options:

- ☒ Options may vary depending on your service provider.

- **View**: open the message.
- **Retrieve**: retrieve the MMS message from the server.

- **Delete**: delete the message.
- **Move to My folder**: move the message to one of the folders you have created.
- **Sort by**: change the sort order of the messages.
- **Protection**: protect the message from being deleted.
- **Block number**: add the sender's number to the Block list to reject the messages from the sender.
- **Details**: access the message properties.

Using message options

While viewing a message, press <**Options**> to access the following options:

SMS messages

- **Reply via**: reply to the sender via SMS or MMS message.
- **Forward**: forward the message to other people.
- **Delete**: delete the message.
- **Move to phone/Move to SIM**: move the message between the SIM card and the phone's memory.
- **Copy entry**: extract URLs, e-mail addresses, or phone numbers from the message.

- **Copy media:** save media content from the message to your phone's memory.
- **Protection:** protect the message from being deleted. You can protect only those messages stored in the phone's memory.
- **Block number:** add the sender's number to the Block list to reject the messages from the sender.

MMS messages/MMS notifications

- **Retrieve:** retrieve the MMS message from the MMS server.
- **Reply via text message:** reply to the sender via SMS.
- **Reply via multimedia message to:** reply to the sender via MMS.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Copy media:** save media content from the message to your phone's memory.
- **Protection:** protect the message from being deleted.
- **Details:** access the message properties.

Configuration messages

- **Install:** apply the configuration specified in the message to your phone.
- **Delete:** delete the message.
- **Protection:** protect the message from being deleted.

Push messages

- **Go to URL:** connect to the URL specified in the message.
- **Delete:** delete the message.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Protection:** protect the message from being deleted.

CB messages

- **Save:** save the message to the phone's memory.
- **Delete:** delete the message.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.

Delivery reports

- **Delete:** delete the report.
- **Copy entry:** extract URL, e-mail addresses, or phone numbers from the report.
- **Protection:** protect the report from being deleted.

Drafts (Menu 5.2.2)

This folder stores messages you have saved to send at a later time.



While viewing the message list, press <**Options**> to access the following options:

- **Edit:** edit the message.
- **Delete:** delete the message or all messages.
- **Move to My folder:** move the message to one of the folders you have created in the **My folders** menu.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Details:** access the message properties.

Outbox (Menu 5.2.3)

This folder stores messages that the phone is attempting to send or has failed to send.

The following icons shows the message status:

-  Being sent
-  Failed to send

While viewing the message list or a message, press <**Options**> to access the following options:

- **View:** display the message.
- **Delete:** delete the selected message or all messages.
- **Move to My folder:** move the message to one of the folders you have created.
- **Sort by:** change the sort order of the messages.
- **Send again:** retry sending the message.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Protection:** protect the message from being deleted.
- **Details:** access the message properties.

Sent messages (Menu 5.2.4)

This folder stores messages that you have sent.

While viewing the message list, press <**Options**> to access the following options:

- **View:** open the message.
- **Forward:** forward the message to other people.
- **Send:** send the message.
- **Copy entry:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Move to my folder:** move the message to one of the folders you have created in the **My folders** menu.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Details:** access the message properties.

My folders (Menu 5.2.5)

Use this menu to create new folders and organise your messages.

Creating a new folder

1. Press <**Yes**>.
2. Enter a folder name and press [**OK**/**✓**].
3. 3. To add more folders, press <**Options**> and select **Add folder**.
4. Repeat step 3 as desired.

Using folder options

On the folder list, press <**Options**> to access the following options:

- **Open:** open the selected folder.
- **Add folder:** add a new folder.
- **Rename folder:** change the folder name.
- **Delete:** delete the selected folder.

Templates (Menu 5.3)

Use this menu to create SMS templates with the sentences you use frequently so that you can retrieve and insert them when composing an SMS message.

Creating a template

1. Select an empty location.
2. Enter a message, press <**Options**> and select <**OK**>.

Using template options

From the template list, press <**Options**> to access the following options:

- **Edit:** edit the selected template.
- **Send message:** create and send a new message.
- **Delete:** delete the selected template.
- **Add new:** add a new template.

Delete all (Menu 5.4)

Use this menu to delete messages in each message folder all at once.

1. Press [**OK/↓**] to check the message folders to be cleared.
Pressing the key twice displays the message types so that you can specify the ones to be cleared.
2. Press <**Delete**>.
3. Press [**OK/↓**] to select the check box to delete protected messages, and then press <**Yes**>.
4. Press <**Yes**> to confirm the deletion.

Settings (Menu 5.5)

Use this menu to set up various options for using the messaging service.

Text message (Menu 5.5.1)

You can configure SMS settings.

- **Send settings:** set up the options for sending SMS messages:
 - Reply path:** allow recipients to reply to you through your SMS server.
 - Delivery report:** set the network to inform you when your messages have been delivered.
 - Bearer selection:** select either **GSM** or **GPRS preferred**, depending on your network.
- **Block number:** store the phone numbers from which you want to reject messages.
- **Current profile:** select an SMS setting profile.
- **Profile settings:** set the properties of each profile.
 - Service centre:** store or change the number of your SMS server.

Default destination: enter the default destination.

Default type: set the default message type. The network can convert the messages into the selected format.

Default validity: set the length of time your messages are stored in the SMS server.

Setting name: enter a profile name.

Multimedia message (Menu 5.5.2)

You can configure MMS settings.

- **Sending settings:** set up the options for sending MMS messages:

Delivery report: set the network to inform you when your messages have been delivered.

Hide address: set your address to be hidden from the recipient's phone.

Read reply: send a read-reply request along with your messages.

Priority: set the priority level of messages.

Expiry date: set the length of time messages are stored in the MMS server.

Delivery time: set a time delay before messages are sent.

- **Retrieve settings:** set up the options for receiving MMS messages:

Reject unknown sender: reject messages from unknown senders.

Allow adverts: accept advertisements.

Allow information: accept information messages.

Allow personal: accept personal messages.

Allow reports: set the network to inform the sender when a message has been delivered to you.

Recep. in home network: determine if your phone retrieves new messages automatically when you are in your home service area.

Reception when abroad: determine if your phone retrieves new messages automatically when you are roaming on another network.

Reception within home network or abroad has the following options:

- **Manual:** the phone displays notifications. Use the **Retrieve** option to manually download new messages.
- **Automatic:** the phone automatically retrieves messages from the server.
- **Reject:** the phone rejects all messages.
- **Profile:** select a connection profile to be used for MMS. You can also add or edit a profile. ► p. 72

Push message (Menu 5.5.3)

You can change the settings for receiving push messages from the wireless web server.

- **Receive:** set how your phone receives push messages.
- **Black list:** manage blocked server addresses.

Broadcast (Menu 5.5.4)

You can change the settings for receiving CB messages.

- **Receive:** select to receive CB messages, or not.

- **Channel list:** indicate the channels from which you wish to receive CB messages. Please contact your service provider for further details.
- **Language:** select the preferred languages in which CB messages display.


Memory status (Menu 5.6)

Use this menu to view the maximum memory and available memory for each message type. You can also view the memory currently in use in each folder.

File manager *(Menu 6)*

The **File manager** menu allows you to access image, video, and sound files stored in the phone's memory.

To access this menu, press <**Menu**> in Idle mode and select **File manager**.

- ☒ According to the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded. They are indicated by the  icon.

Images *(Menu 6.1)*

This menu displays photos you have taken and images you have downloaded or received in messages.

- ☒ Depending on the image size or format, the thumbnail of the image may not display on the list.

Viewing an image

1. Select an image folder.
2. Select an image.

Viewing a slide show

You can view your photos as a slide show, a sequential presentation of each photo in the current folder.

1. Select an image folder.
2. Press <**Options**> and select **Slide show**.
3. Select an interval option.
The slide show begins.
4. Press <**Stop**> to stop the slide show.

Using image options

While viewing an image or image list, press <**Options**> to access the following options:

- **List:** return to the image list.
- **View:** display the image.
- **Send via MMS:** send the file via MMS message.
- **Set as:** set the image as wallpaper for the display or as a caller ID image for a Contacts entry.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Move to Photos:** move the file to the **Photos** folder.

- **Move to Downloaded images:** move the file to the **Downloaded images** folder.
- **Move to Favourite images:** move the file to the **Favourites** folder.
- **Slide show:** display all image files in turn as a slide show. You can select the rate at which the images cycle.
- **Protection:** protect the file from being deleted.
- **Details:** access the file properties.

Videos (Menu 6.2)


This menu displays video clips you have recorded, downloaded, or received in messages.

- ☒ Video clips recorded on other devices, such as camcorders, may not play correctly.

Playing a video clip

1. Select a video folder.
2. Select a video clip.

During playback, use the following keys:

Key	Function
OK/ 	Pauses or resumes playback.
Down	Stops playback.
▲/▼	Adjusts the volume.

Using video options

While viewing the video or video list, press <Options> to access the options.

- **List:** return to the video clip list.
- **Play:** play the video clip.
- **Send via MMS:** send the file via MMS message.
- **Set as wallpaper:** set the video clip, if saved as a 3gp file, as wallpaper for the display.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Move to Favourite videos:** move the file to the **Favourites** folder.
- **Move to Video clips:** move the file to the **Video clips** folder.

- **Move to Downloaded videos:** move the file to the **Downloaded videos** folder.
- **Protection:** protect the file from being deleted.
- **Details:** access the file properties.

Sounds *(Menu 6.3)*

This menu displays voice memos you have recorded, and sound files you have downloaded or received in messages.

Playing a sound clip

1. Select a sound folder.
2. Select a sound clip. For a voice memo, see **Voice recorder**. ► p. 35

Using sound options

From a sound screen, press <Options> to access the following options:

- **List:** return to the sound list.
- **Play:** play the sound clip.
- **Send via MMS:** send the file via MMS message.
- **Set as:** set the file, if downloaded, as your ringtone or as a caller alert melody for a Phonebook entry.

- **Delete:** delete the file.
- **Rename:** change the file name.
- **Move to Favourite sounds:** move the file to the **Favourites** folder.
- **Move to Voice recorder files:** move the file to the **Voice recoding list** folder.
- **Move to Downloaded sounds:** move the file to the **Downloaded sounds** folder.
- **Protection:** protect the file from being deleted.
- **Details:** access the file properties.

Other files *(Menu 6.4)*

Files that you have received but which are not supported by your phone are stored in this folder. You cannot open these files on the phone. Unsupported file formats include *.doc, *.ppt, and *.txt.

While viewing the file list, press <**Options**> to access the following options:

- **Delete:** delete the selected file or all files.
- **Rename:** change the file name.
- **Protection:** protect the file from being deleted.
- **Details:** access the file properties.

Memory status (Menu 6.5)

Use this menu to view memory information for media items in each folder. Press [Left] or [Right] to view the memory status by size or number of items.

- ☒ The size of the media item displayed on the phone may be different from the exact size.


Calendar (Menu 7)

The **Calendar** menu enables you to keep track of your schedule.






To access this menu, press <**Menu**> in Idle mode and select **Calendar**.

Consulting the calendar

When you access the **Calendar** menu, the calendar in Month view appears with today's date indicated by a blue box. The calendar also displays the date in lunar calendar reckoning. In addition, it displays which of the 24 solar divisions corresponding to the day. You can also view national holidays in Day view.

The number of solar divisions and national holidays for the selected month appears at the bottom of the calendar with the icon, .

The number of events for the selected day appears at the bottom of the calendar. The following icons indicate the type of event:

-  Scheduled event
-  Anniversary
-  To do item
-  Memo
-  Festival

Press <**Options**> to access the following options:

- View mode:** change the view mode of the calendar. ▶ p. 57
- Create:** add a new event. ▶ next section
- Go to:** select today's date or enter a specific date.
- Sort by:** sort items by type of event.
- Delete:** delete the items stored on the calendar by using various deleting options.

- ☒ You can delete recurring events in Day view only.

- Missed alarm events:** view events whose alarms you have missed.

- **Memory status:** access memory information for the event items stored on the calendar.

Creating an event

You can store scheduled events, anniversaries, memos, and To do items on the calendar. More than one event per day can be stored.

Entering a new scheduled event

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Schedule**.
3. Enter information or change the settings:
 - **Subject:** enter a title for the event.
 - **Details:** enter event details.
 - **Start date** and **Start time:** enter the starting date and time for the event.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **End date** and **End time:** enter the ending date and time for the event.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.

- **Location:** enter information about the event location.
- **Alarm:** set an alarm for the event.
- **Before:** set how long before the event the alarm is to alert you.
- **Alarm tone:** select an alarm tone.
- **Repeat:** set the event to recur and select a repeat unit.
- **Until:** set the ending date, if the event will recur.

4. Press <**Save**> to save the event.

Entering a new anniversary

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Anniversary**.
3. Enter information or change the settings:
 - **Occasion:** enter information about the anniversary.
 - **Date:** enter the date.
 - **Alarm:** select to set an alarm for the anniversary.

- **Before:** set how long before the event the alarm is to alert you.
- **Alarm time:** enter the time for the alarm to ring.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Alarm tone:** select an alarm tone.
- **Repeat every year:** set the phone to remind you of the anniversary every year.

4. Press <**Save**> to save the event.

Entering a memo

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Memo**.
3. Enter a memo.
4. Press <**Options**> and select **Save**.

Entering a To do item

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **To do**.
3. Enter information or change the settings:
 - **To do:** enter information about the item.
 - **Start date:** enter the starting date.

- **Due date:** enter the ending date.
- **Select priority:** select a priority level.

4. Press <**Save**> to save the event.

Viewing an event

Square brackets on a calendar date indicate the following type of events scheduled for that day:

- Blue: scheduled event
- Orange: anniversary
- Red: to-do item
- Green: memo

1. Select a date on the calendar to display the events for the day.
2. Select an event to view its details.

While viewing an event, press <**Options**> to access the following options:

- **View:** display the event details
- **Edit:** edit the event
- **Create:** add a new event.
- **Send via:** send the event via SMS, MMS message or Infrared port.
- **View mode:** change the view mode of the calendar.

- **Sort by:** sort items by the type of event.
- **Delete:** delete item(s) stored on the calendar by using various deleting options.
- **Missed alarm events:** view events whose alarms you have missed.
- **Memory status:** view the memory status for items stored in the phone's memory.





Viewing an event in a different mode

You can change the calendar display to Day view or Week view. Press <**Options**> and select **View mode** → a view mode.

Day view

You can view events for the selected date. Select an event to view its details.

The following icons may display to indicate the event status:

-  Alarm set
-  Recurring event
-  To do priority (●: high, ●: normal, ○: low)
-  Completed To do item

Week view

You can view events (only for items stored for Schedule) for the selected week.

A cell on the timetable indicates the presence of event information.

Select the cell that contains the event you want.

Viewing a missed alarm event

When you are unable to acknowledge an alarm, the phone displays a missed alarm notification.

- Press <**View**> to view the corresponding event.
- Press <**Exit**>.

Accessing missed event alarm

1. Press <**Options**> and select **Missed alarm events**.
2. Select an event.
3. Press <**Confirm**> to confirm and delete the event.

From the event list, press <**Options**> to access the following options:


- **View**: display the event details.
- **Delete**: delete the event.
- **Delete all**: delete all events.

Memory status

You can check the total amount of memory for calendar items and the amount of memory currently in use in each item.

Camera *(Menu 8)*

You can use the camera module embedded in your phone to take photos and record videos.




To access this menu, press <**Menu**> in Idle mode and select **Camera**, or press and hold [.

- ✓ Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Taking a photo


You can take photos in various modes. The camera produces JPEG photos.

- ✓ When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.


1. Access the **Camera** menu or press and hold [] to turn on the camera.
2. Adjust the image to be captured.
 - Press <> to access camera options. ▶ next section.
 - Use the keypad to change the camera settings or switch to other modes. ▶ p. 59
3. Press [> to take a photo. The photo is saved in the **Photos** folder.

To	Press
access photo options	< Options >. ▶ p. 60
delete the photo	[C] and then < Yes >.
return to Capture mode	< Preview >.

Using camera options in Capture mode

In Capture mode, press <  > to access the following options:

- **Record video:** switch to Record mode.
- **Shooting mode:** take a photo in the following modes:
Single shot: take a photo in normal mode. You can select whether or not the camera automatically saves a photo.
Multi-shot: take a series of action stills. You can select the number of photos the camera will take and the shutter speed.
Mosaic shot: take several stills and save them in one frame. You can select the layout.
- **Effects:** change the colour tone or apply a special effect.
- **Frames:** apply a decorative frame.
- **Timer:** set a time delay before the camera takes a photo.
- **Go to photos:** access the **Photos** folder.

- **Settings:** change the default settings for taking a photo.
Size: select an image size.
Quality: select an image quality setting.
Viewfinder: select a preview screen.
Shutter sound: select the sound that you hear when you press the shutter release, [].
Zoom sound: turn the sound effect for zooming on or off.
Brightness sound: turn the sound effect for brightness adjustment on or off.
- **Short cuts:** view the functions of the keys you can use in Capture mode.

Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Key	Function
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.

Key	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
1	Switches to Record mode. ► p. 61
2	Changes the image size.
3	Changes the image quality.
4	Changes the shooting mode.
5	Changes the colour tone or applies a special effect.
7	Selects a decorative frame.
8	Sets the timer.
9	Goes to the Photos folder. ► p. 51
*	Changes the preview screen.

Using photo options

After saving a photo, press <**Options**> to access the following options:

- **View**: access one of the multi-shot photos.

- **Take another**: return to Capture mode.
- **Send via MMS**: send the file via MMS message.
- **Set as**: set the photo as wallpaper for the display or as a caller ID image for a Contacts entry.
- **Delete**: delete the file.
- **Rename**: change the file name.
- **Go to photos**: access the **Photos** folder.
- **Protection**: protect the file from being deleted.
- **Details**: access the file properties.

Viewing a photo

1. In capture mode, press the left soft key and select **Go to photos**.
2. Scroll to a photo and press [OK/↵].

While viewing a photo or the photo list, press <**Options**> to access the following options:

- **List**: return the screen to the photo list.
- **View**: view the photo on the full screen.
- **Send via MMS**: send the photo via MMS message.
- **Set as**: set the photo as your wallpaper for the displays or as a caller ID image for a Phonebook entry.

- **Delete:** delete the selected photo or all of the photos.
- **Rename:** change the name of the photo.
- **Move to Favourite images:** move the photo to the **Favourite images** folder.
- **Slide show:** display all photos in turn as a slide show. You can select the rate at which the photos cycle.
- **Protection:** protect the photo from being deleted.
- **Details:** view the properties of the photo.

Taking a photo with the phone closed

1. Press and hold [].
2. Press [] to flip the image vertically, or [] to view the mirror image.
3. Press [] to take a photo. The photo is automatically saved.

Recording a video

You can record a video of what is displayed on the camera screen and save it.

- ☒ The size limit of videos to be attached to MMS messages is 95 KB.

1. In Capture mode, press [**1**].
2. Adjust the image to be captured.
 - Press <> to access camera options. ► next section.
 - Use the keypad to change the camera settings or switch to other modes. ► p. 62
3. Press [] to start recording.
4. Press [] or the right soft key to stop recording. The video is automatically saved in the **Video clips** folder.

To	Press
play back the video clip	[/Z].
access video options	< Options >. ► p. 63
delete the video clip	[C] and then < Yes >.
return to Record mode	< Preview >.

Using camera options in Record mode

In Record mode, press <> to access the following options:

- **Take photo:** switch to Capture mode.

- **Effects:** change the colour tone or apply a special effect.
- **Timer:** set a time delay before the camera starts recording.
- **Go to videos:** access the **Video clips** folder.
- **Settings:** change the following settings for recording a video:
 - Size:** select a frame size.
 - Viewfinder:** select a preview screen.
 - Audio record:** record audio with a video clip.
 - Zoom sound:** turn the sound effect for zooming on or off.
 - Brightness sound:** turn the sound effect for brightness adjustment on or off.
- **Short cuts:** view the functions of the keys you can use in Record mode.

Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode:


Key	Function
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.
▲	Flips the image vertically.
▼	Shows the mirror image.
1	Switches to Capture mode. ► p. 58
2	Changes the frame size.
5	Changes the colour tone or applies a special effect.
7	Mutes or unmutes audio.
8	Sets the timer.
9	Goes to the Video clips folder. ► p. 52
*	Changes the preview screen.


Using video options

After saving a video clip, press <**Options**> to access the following options:

- **Record another:** return to Record mode.
- **Send via MMS:** send the file via MMS message.
- **Set as wallpaper:** set the video clip as wallpaper for the main display.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Go to videos:** access the **Video clips** folder.
- **Protection:** protect the file from being deleted.
- **Details:** access the file properties.

Playing a video clip

1. In Record mode, press the left soft key and select **Go to videos**.
2. Scroll to a video clip and press [].
During playback, use the following buttons on the display:

Keys	Function
	Pauses/resumes playback.

Keys	Function
Down	Stops playback.
▲/▼	Adjusts the volume.

3. Press <**Options**> to access the following options:
 - **List:** return to the video clip list.
 - **Send via MMS:** send the video clip via MMS message.
 - **Set as wallpaper:** set the video clip as wallpaper for the main display.
 - **Delete:** delete the video clip.
 - **Rename:** change the name of the video clip.
 - **Move to Favourite videos:** move the video clip to the Favourite videos folder.
 - **Protection:** protect the video clip from being deleted.
 - **Details:** view the properties of the video clip.

Settings (Menu 9)

The **Settings** menu provides you with various setting options to customise the phone to your preferences and needs. You can also reset the settings to their default status.

To access this menu, press <**Menu**> in Idle mode and select **Settings**.

Time and date (Menu 9.1)

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in the **World time** menu.

► p. 36

- **Set time:** enter the current time.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select a time format.
- **Set date:** enter the current date.
- **Date format:** select date format.
- **Calendar starting day:** set which day of the week the calendar starts with.

Phone settings (Menu 9.2)

Many different features of your phone's system can be customised to suit your preferences.

Language (Menu 9.2.1)

Use this menu to select one of several languages for the display text.

Greeting message (Menu 9.2.2)

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

Activate infrared (Menu 9.2.3)


Use this menu to send and receive data through the infrared port.




You cannot use the IrDA feature while using multimedia features such as voice recorder and camera, or vice versa.

The use an infrared connection, you must do the following:

- Configure and activate an IrDA-compliant infrared port on the other device.

- Activate the infrared feature on your phone (the IrDA icon  displays on the top line).
- Align the IrDA port on the phone with the IrDA port on the other device.

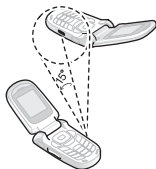

If there is no communication between your phone and the other IrDA-compliant device, it is automatically deactivated.

Shortcuts (Menu 9.2.4)

You can use the Navigation keys as shortcuts to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

Assigning a shortcut menu

1. Select a key to be used as a shortcut key.
2. Select a menu to be assigned to the key.

Using shortcut options

Press <**Options**> to access the following options:

- **Change:** assign or change a shortcut menu.

- **Remove:** deactivate the shortcut assignment to the selected key.
- **Remove all:** deactivate all shortcut assignments.


Volume Key (Menu 9.2.5)

Use this menu to set how the Volume key acts when a call comes in.

- **Mute:** mute the ringer by holding down the key.
- **Reject:** allow you to reject calls by holding down the key.

Extra settings (Menu 9.2.6)

You can turn the automatic redialling or answering feature on or off.

- **Auto redial:** set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Active flip:** answer an incoming call by opening the phone.
- **Anykey answer:** answer an incoming call by pressing any key, except <**Reject**>, [**▲/▼**], and [].

Display settings (Menu 9.3)

Use this menu to change settings for the display and backlight.

Wallpaper (Menu 9.3.1)

You can set up the idle screen on both displays.

- **Main display:** select an image or video clip to be displayed on the main display.
- **Text position:** select a text position. If you don't want to display text in Idle mode, select **Off**.
- **Text mode:** select a font style.
- **Text colour:** select a font colour.
- **Graphic logo:** set the phone to display a graphic icon instead of the service provider's logo on the idle screen. This is only available if a graphic icon has been received in a message.

Skin (Menu 9.3.2)

You can select a skin colour pattern for Menu mode.

Brightness (Menu 9.3.3)

You can adjust the brightness of the display for varying lighting conditions.

Contrast (Menu 9.3.4)

You can adjust the contrast of the display for varying lighting conditions.

Back light (Menu 9.3.5)

You can select the length of time the backlight stays on or the length of time the display stays on in Dim mode, in which the backlight is off.

- **Main display normal:** select the length of time the backlight stays on.
- **Main display dim:** select the length of time the display stays on in Dim mode after the backlight turns off. After a specified time, the display turns off.

Dialling display (Menu 9.3.6)

Use this menu to select a font colour for the numbers entered while dialling.

Show caller information (Menu 9.3.7)

Use this menu to set the phone to display missed call notifications with the most recently missed caller's information. To set the external display to show caller information, select **With Cover Display**.

Sound settings (Menu 9.4)

Use this menu to customise various sound settings.

Incoming call (Menu 9.4.1)

Use this menu to change the sound settings for incoming calls.

- **Ringtone:** select a ringtone to be used for the call ringer.
- **Volume:** select a ringtone volume.
- **Alert type:** specify how you are to be informed of incoming calls.

Keypad tone (Menu 9.4.2)

Use this menu to select the tone that the phone sounds when you press a key.

- ☒ You can adjust the keypad tone volume using [▲/▼] in Idle mode.

Message tone (Menu 9.4.3)

Use this menu to change the sound settings for incoming SMS messages, MMS messages, and CB messages individually.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed when a message comes in.
- **Repetition:** specify how often the phone informs you of a new message.

Power on/off (Menu 9.4.4)

Use this menu to select the melody that the phone sounds when it is switched on or off.

Flip tone (Menu 9.4.5)

Use this menu to select the tone that the phone sounds when you open or close the phone.

Ontime alarm (Menu 9.4.6)

Use this menu to set the phone to sound an alert every hour on the hour.

Quiet mode (Menu 9.4.7)

Use this menu to set how the phone acts to alert you to a specific event while in Quiet mode.

Extra tones (Menu 9.4.8)

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when it connects to the system.
- **Alert on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Indicative tone:** set the phone to beep when you have made a mistake or something wrong happens on the phone.

Network services (Menu 9.5)

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting (Menu 9.5.1)

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
 - **Divert always:** divert all calls.
 - **Busy:** divert calls when you are on another call.
 - **No reply:** divert calls when you do not answer the phone.
 - **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel all:** cancel all call diverting options.
2. Select the type of calls to be diverted.
3. Select **Activate**. To deactivate call diverting, select **Deactivate**.
4. Move to the **Divert to** line.

5. Enter the number to which calls are to be diverted.
6. If you selected **No reply**, move to the **Seconds** line and select the length of time the network delays before diverting a call.
7. Press <**Select**>.

Call barring (Menu 9.5.2)

This network service allows you to restrict your calls.

1. Select a call barring option:
 - **All outgoing calls**: prohibit all outgoing calls.
 - **International**: prohibit international calls.
 - **International except home**: only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **All incoming calls**: prohibit incoming calls.
 - **Incoming while abroad**: prohibit incoming calls when you use your phone outside of your home country.
 - **Cancel all**: cancel all call barring settings, allowing calls to be sent and received normally.
 - **Change barring password**: change the call barring password obtained from your service provider.

2. Select the type of calls to be barred.
3. Select **Activate**. To deactivate call barring, select **Deactivate**.
4. Enter the call barring password supplied by your service provider and press <**Select**>.

Call waiting (Menu 9.5.3)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which call waiting option will apply.
2. Select **Activate** and press <**Select**>. To deactivate call waiting, select **Deactivate**.

Network selection (Menu 9.5.4)

This network service allows you to either automatically or manually select the network to be used while roaming outside of your home area. You can select a network other than your home network only if there is a valid roaming agreement between the two.

Caller ID *(Menu 9.5.5)*

This network service allows you to prevent your phone number from being displayed on the phone of the person being called. If you select **Default**, the phone will use the default setting provided by the network.

- ☒ Some networks may not allow you to change this setting.

Voice mail server *(Menu 9.5.6)*

Use this menu to store the number of the voicemail server and access your voicemails.

- ☒ You must store the voicemail server number before accessing the server. Your service provider can give you the number.

- **Connect to voice server:** connect to the voicemail server to listen to your messages.
- **Voice server number:** enter the voicemail server number.

Closed user group *(Menu 9.5.7)*

Use this menu to set incoming and outgoing calls to be restricted to a selected user group. For details about how to create a closed user group (CUG), contact your service provider.

- **Index list:** add, delete, or activate CUG index numbers.
- **Outside access:** enable calls to numbers other than those in the closed user group. This feature depends on the nature of your CUG subscription.
- **Default group:** enable the default CUG, if you have set one with your service provider. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.
- **Deactivate:** deactivate the CUG function, if the default group is enabled or a CUG index is selected.

Band selection *(Menu 9.5.8)*

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of the following types of networks: GSM 1900 and Combined GSM 900/1800.

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you may need to change to an appropriate band.

Security *(Menu 9.6)*

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- ☒ If you enter an incorrect PIN/PIN2 three times in succession, the SIM card is blocked. To unblock it you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your service provider.

PIN check *(Menu 9.6.1)*

The 4- to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change PIN code *(Menu 9.6.2)*

Use this menu to change your PIN. The PIN check feature must be enabled to change the PIN.

Phone lock *(Menu 9.6.3)*

Use this menu to lock the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change password** menu.

Change password *(Menu 9.6.4)*

Use this menu to change your phone password.

Privacy (Menu 9.6.5)

Use this menu to lock access to messages, files, or all menu functions on the phone, except for call functions.

When a privacy option is enabled, you must enter the phone password to access the locked items or functions.

SIM lock (Menu 9.6.6)

This menu allows your phone to work only with the current SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

Fixed dialling mode (Menu 9.6.7)

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

Change PIN2 code (Menu 9.6.8)

If supported by your SIM card, use this menu to change your current PIN2.

Connection settings (Menu 9.7)

Use this menu to create and customise the profiles containing the settings for connecting your phone to the network. You need these settings to use the web browser or send MMS messages.

- ☒ Your phone is suited for connecting to the network by default. If you change the settings without first checking with your service provider, the web browser, and MMS may not work properly.

Creating a profile

1. Press **<New>**. If a profile has already been saved, press **<Options>** and select **Add new connection**.
2. Specify each information:
 - **Profile name**: enter a profile name.
 - **Homepage URL**: enter the URL address of the page to be used as your homepage.
 - **Proxy**: activate or deactivate the proxy server.
 - **IP address**: enter the IP address of the proxy server.
 - **Port**: enter the port number of the proxy server.

- **DNS:** activate or deactivate the DNS (Domain Name Server) addresses.
- **DNS1** and **DNS2:** enter the primary and secondary DNS addresses.
- **Bearer:** select the network bearer type.
- **Advanced settings:** change the advanced options. Depending on the bearer setting, available options vary.

*When the bearer is set to **GPRS**:*

APN: enter the access point name.

Login ID: enter the login ID.

Password: enter the login password.

*When the bearer is set to **GSM**:*

Dial number: enter the PPP phone number.

Login ID: enter the login ID.

Password: enter the login password.

Data call type: select a call type for data transmission.

3. Press **<Save>** to save the profile.

Using profile options

Press **<Options>** to access the following options:

- **Edit:** edit the selected profile.
- **Delete:** delete the profile.
- **Add new connection:** add a new profile.

Reset settings (Menu 9.8)

Use this menu to reset the phone's settings you have changed.

1. Press [**OK/↓**] to check the setting categories to be reset.
2. Press **<Reset>**.
3. Press **<Yes>** to confirm the reset.
4. Enter the phone password and press **<OK>**.

☒ The password is preset to **00000000**. You can change this password. ► p. 71

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

"Insert SIM"

- Be sure that the SIM card is correctly installed.

"Enter password"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

"Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.

"Enter PUK"

- The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.

"No service," "Network failure," or "Not done" displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialled

- Be sure that you have pressed [↵].
- Be sure you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([📶] pressed for more than one second.)

- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.




Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and “Warning. Low battery” flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (). The number of bars indicates the signal strength from strong () to weak (.
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Contacts entry

- Use the **Contacts list** menu to ensure the number has been stored correctly.
- Re-store the number, if necessary.

The battery doesn't charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and safety information

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0W/kg.*

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and - terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [↵].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may inadvertently damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.

Health and safety information

- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-07951A
English. 11/2005. Rev. 1.0