



Thank you for purchasing Spice S-501 mobile phone. Your phone provides short messaging service, access to which can be locked to protect your privacy. With your phone, you can also challenge yourself or your friends to the funny games.

Special Features:

- ✍ Mobile Tracker
- ✍ Speaker Phone
- ✍ Singtones
- ✍ 16 polyphonic ring tones
- ✍ Speed Dial
- ✍ Ring tone/Vibrator
- ✍ Auto power-on/off
- ✍ STK
- ✍ Phbook manager
- ✍ SMS Security

Declaration

Copyright © 2008 Spice Mobiles Ltd. **All rights** reserved.

All contents herein are protected under copyright law. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Spice is prohibited.

Spice has proofread the contents in this document, but there still may be mistakes or omissions.

Spice reserves the right to make changes and improvements to any of the products described in this document and to revise this document without prior notice.

This document is provided as a user guide on Spice mobile phones only and does not constitute any explanation about the hardware and software configuration of the products described in this document. The availability of particular products and enhancements may vary by region. Please check with the Spice dealer nearest to you.

Some certain functions referred in this document may be network services and require support by your network operator or service provider. Please check with your network operator or service provider for more details.

This device may contain commodities, technology or software subject to export laws and regulations from India. Diversion contrary to law is prohibited.

For your safety, please read "**For your safety**" and "**Safety information**" in this document before you use this device.

Symbols that may occur in this document are defined as below:

< > stands for soft keys; " " stands for display information on phone screen; [] stands for menus.

Contents

Special Features:	1
For your safety	VII
1.Your Phone	1
Keys and parts.....	1
Front view	1
Display and icons.....	2
2.Get Started	3
Install the SIM card and battery	3
Charge the battery	4
Use the travel charger	4
Battery strength indicator	5
Switch on/off your phone.....	5
Switch the phone on.....	5
Switch the phone off.....	6
Use the shortcut keys.....	6
3.Call Functions	9
Make a call	9
Make an international call.....	9
Hold a call and make another (Network-dependent)	9
Switch calls (Network-dependent)	9
Use search entry	10
Use hands-free function	10
Redial your last numbers.....	10
Listen to your voice mail	10

Make an emergency call	10
Make a call with extension number	10
Adjust call volume.....	10
Answer or reject a call	11
Answer a call	11
Reject a call	11
Options during a call	11
Hold a call and answer another (network-dependent)	12
Conference call (Network-dependent)	12
End a call	13
4.Call History	14
Missed Calls.....	14
Received Calls	14
Dialled Calls	14
Call Time	15
5.Entering Text.....	16
Change input methods.....	16
Use Multipress mode.....	16
To enter text in Multipress mode	16
Use T9 mode.....	17
To enter text in T9 mode	17
Use numeric mode	17
Insert a symbol.....	18
Others	18
6.Menu	19
Access the menu.....	19

7.Phbook.....	20
Contacts.....	20
Search	20
Search Entry.....	20
Search for a contact in smart dial	21
Options	21
Add New Entry.....	21
Add to SIM.....	21
Add to Phone	22
Speed Dial	23
Assign a speed dial number	23
Cancel a speed dial assignment.....	23
Copy.....	23
Delete.....	24
Own Number	24
Memory Status.....	24
8.Messages.....	25
Write Messages	25
Create a new message:	25
Inbox	26
Drafts.....	27
Outbox.....	27
Memory Status.....	27
Message Settings	27
Voice Mail	28
Listen to your voice messages	28

Voice mailbox number.....	28
9.Profiles	29
Customize	29
Tone Setup	29
Volume	29
RingType	29
Vibrate Type	29
View	29
Reset	30
10.Display.....	31
Wallpaper	31
Show Time	31
Text Display.....	31
Backlight Brightness	31
Backlight Time	31
Contrast	31
11.Game	32
Snake.....	32
12.Alarm	33
Alarm Settings	33
Alarm Status	33
Alarm Time	33
Repeat	33
Alarm Ring	33
Clear All.....	33
13.Call History	34

14.Settings	35
Time & Date.....	35
Phone Setup.....	35
Scheduled Power ON/OFF.....	35
Language.....	35
Automatic Keypad lock.....	36
Call Setup.....	36
Ear Piece Volume.....	36
Call Divert.....	36
Answer Mode.....	37
Call Waiting.....	37
Call Time Alert.....	37
Send Own Number.....	37
Network.....	38
Network Selection.....	38
Select Net Sequence.....	38
Security.....	38
Pin check.....	38
SIM Lock.....	38
Mobile Tracker.....	39
SMS Password Protect.....	39
Change Password.....	39
Restore Factory Setting.....	40
15.STK	41
16.Care and Maintenance	42
17.Troubleshooting	43

Your phone cannot be switched on	43
Your phone switches itself off	43
PIN/PUK codes locked	43
The call quality is poor	44
Your caller cannot reach you.....	44
You cannot make calls.....	45
The call volume is too low.....	45
Your correspondent cannot hear you speaking.....	45
The phone doesn't ring for an incoming call	46
The battery does not charge properly.....	46
Network failure	47
18.Safety Information	48
Operating environment	48
Medical devices.....	48
Pacemaker	48
Hearing aid.....	49
Emergency calls	49
Make an emergency call	49
Access Codes	49
Phone password.....	49
PIN code	50
PIN2 code	50
PUK code	50
PUK2 code	50
Charging and discharging	50
Precautions when using batteries	51
Precautions when using enhancements	52

For your safety

Read these simple guidelines before using the phone. Not following them may be dangerous or illegal. Refer to "Safety information" on page 48 for further information.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



SWITCH OFF WHEN REFUELING

Do not use the device at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.



PROTECT THE ENVIRONMENT

Do not dispose of batteries in a fire or as household trash. Obey any local battery recycling laws or environment protection policy.



CONNECTING TO OTHER DEVICES



PROTECT THE CHILDREN

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information.

Do not store any small parts of the phone such as a memory card where children may access them.



EMERGENCY CALLS

Ensure the phone function of the device is switched on and in service. Enter the emergency number, then press the Talk key. Give your location. Do not end the call without permission.

1. Your Phone

Keys and parts

Front view

Loudspeaker

Display screen

Left soft key
In standby mode, press to enter the main menu.

Talk key
1. Dial or answer a call.
2. In standby mode, press to access your outgoing calls.

*** key**
1. While dialing an international call, press and hold the * + key to enter the "+" symbol.
2. When entering text, press the * + key to access the symbol list.

Navigation key

Phbook
Write Messages

OK key
Confirm your selection or input

Right soft key
In standby mode, press this key to enter the [Search Entry].

End key
1. End a call.
2. When the phone is off, press this key to switch it on; when the phone is on, press and hold this key to switch it off.




Note:

Read "Use the shortcut keys" on page 6 for the use of shortcut keys.

Display and icons

Spice S-501 has a 26.10mm(H)*28.15mm(W) 1.5 inch 65K color CSTN display screen.

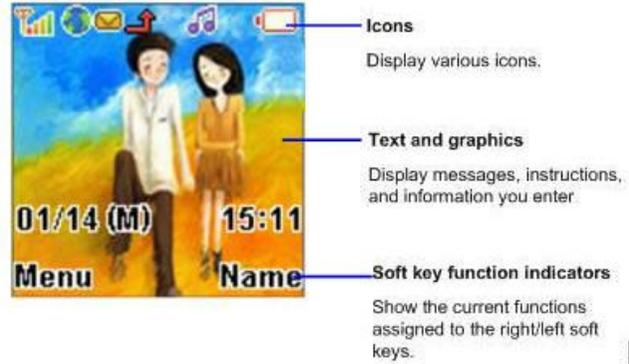

Icons	Meaning	Icons	Meaning
	Signal strength.		Ringer on.
	Battery level.		Vibrator on.
	New text message. When your SMS inbox is full, this icon		Ringer off.

	blinks.		
	Vibrate&Ring		Pending alarm.
	Roaming		Missed calls

2. Get Started

Before you begin, you need to prepare your phone by installing the SIM card, which is supplied by your service provider.




Warning:

1. The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card. Follow the user guide provided by the SIM card vendor.
2. Keep all SIM cards out of the reach of small children.



Install the SIM card and battery

- (1) Press and hold  key for about two seconds to switch off the phone.
- (2) Slide the rear cover as the picture shows, and remove it.
- (3) Take out battery.
- (4) Insert the SIM card into the holder as shown, non-beveled corner first, with the gold colored contacts on the SIM card facing down.
- (5) Position the battery so the gold colored contacts match up with those on the phone. Insert the battery, contact end first into the slot. Snap the other end of the battery into place. Buckle down the bottom end of the battery cover first, and then slide your finger along the cover towards the top of the phone to lock the cover into place.

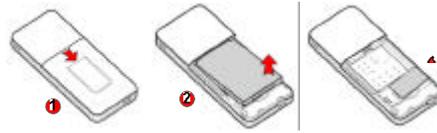

(1) Coloque el chip SIM en el compartimiento designado.
 (2) Presione el botón de la cámara para cerrar el compartimiento.
 (3) Presione el botón de encendido para encender el teléfono.

Para insertar el chip SIM:
 Conecte el cable USB al puerto USB del teléfono. Encienda el teléfono y asegure el chip SIM en el compartimiento.

Para insertar el chip SIM:
 Conecte el cable USB al puerto USB del teléfono. Encienda el teléfono y asegure el chip SIM en el compartimiento.

- (4) If your phone is on, the battery power indicator appears on the screen and starts scrolling.
- (5) When battery charge is complete, disconnect the charger from the standard wall outlet first and then from the phone.



Note:

1. If the battery power is completely used up, the battery power indicator appears 2 or 3 minutes after you start charging. In general, the charging time should be 2 to 5 hours.
2. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. It's suggested that each of the first two or three charging times lasts for over 10 hours. Don't charge the battery until the battery charge gets too low to operate the phone.
3. When the phone battery is removed or the battery power gets too low, reinstall a new one or charge the battery as soon as possible; otherwise, the phone time will be reset.



Warning:

Use batteries and chargers approved by Spice for use only. Using unapproved batteries or chargers may cause explosion.

When the battery charge is complete, the battery bar stops scrolling.



Battery strength indicator

When the battery is low, the empty battery icon  blinks, the "Low battery" message displays on the screen and a warning tone sounds.

When the battery charge level is too low for operation, the phone switches itself off and any data that is not saved may be lost.

Switch on/off your phone

Switch the phone on

Press  key to switch on the phone.



Warning:
Do not switch the phone on or activate any auto power-on function when wireless phone use is prohibited or when it may cause interference or danger.



Warning:
Your phone has a built-in antenna. Do not touch the antenna unnecessarily when the phone is switched on; otherwise, it may affect call quality and may cause the phone to operate at a higher power level than otherwise needed.

- ✎ If the phone asks for a PIN code, enter the PIN code.
- ✎ If you enter an incorrect PIN code three times in succession, PIN code is locked. You need to enter a PUK code to unlock it. Read “**Safety information**” on page 48 for more details.

Switch the phone off

Press and hold  key for about two seconds to switch off the phone. You can also set a time for the phone to automatically switch itself off by using [**Scheduled Power ON/OFF**] menu. Read “**Scheduled Power ON/OFF**” on page 35 for details.

Use the shortcut keys

You can use some shortcut keys to access specific menus directly from standby mode. Refer to the table below for shortcut keys available with your S-501 phone.

Shortcut keys	Action	Functions
	Press	Access your outgoing calls.
Left Soft Key	Press	Enter main menu.
Right Soft Key	Press	Enter [Search Entry] menu
1 	Press and hold	Enter voice mail
2 	Press	Enter numbers and characters
	Press and hold	Enter corresponding speed dial
# 	Press and hold	Switch to Meeting mode from normal mode. Press and hold it again to switch to normal mode.
* +	Press and hold	Enter "+" symbol

In the standby mode, you can press  key to enter **[Shortcut list]**. There are ten preset shortcut menus for you, such as **[Search]**, **[Alarm]**, **[Add New Entry]**, etc. Select the preferred shortcut menu, and press **OK** key to enter the corresponding menu, while selecting **Left Soft Key <Options>** to enter the following options:

- ✎ **New:** Create a new shortcut menu. You can create up to 10 shortcut menus. When the menu has been in **[Shortcut list]**, the phone will prompt: "Already exist" on the screen.
- ✎ **Delete:** Delete the selected shortcut menu.
- ✎ **Move up:** Move the selected shortcut menu up to the previous one.

- ✎ **Move down:** Move the selected shortcut menu down to the next one.
- ✎ **Move to top:** Move the selected shortcut menu to the top one.
- ✎ **Move to bottom:** Move the selected shortcut menu to the bottom one.

3. Call Functions

Make a call

Before making a call, check the signal strength to make sure you are in a place with a strong enough signal for communication.

- (1) In standby mode, enter the phone number (including the area code).
- (2) Press  key to dial.



Note:

When dialing a phone number with an extension, press and hold  key to insert a Pause (P) symbol before the extension number. The extension number will be sent a few seconds after the switchboard number is sent.

Make an international call

Enter the country code, area code and phone number. Then, press

 key to dial. If necessary, press and hold  key to insert a Plus (+) sign before entering the country code.

Hold a call and make another (Network-dependent)

You can hold the currently active call to make another call.

- (1) When you are on a call, use the keypad to enter another phone number.
- (2) Press  key to make the second call and the previous call is automatically put on hold.

Switch calls (Network-dependent)

When you have one active call and one on-hold call, you can press **Left Soft Key** and select [**Swap**] to 'shuttle' between the two calls.

Use search entry

In the standby mode, enter a phone number and press **Left Soft Key** to access the following options:

✍ **Append number:** Enter the [**Search Entry**] menu.

✍ **Send message:** Edit a message to be sent to the phone number you entered.

✍ **Guide:** Turn on or off the Search Entry guide.

Use hands-free function

While in a call, you can press **OK** key to turn on or turn off the speaker.

Redial your last numbers

In standby mode, press **OK** key and select [**Call History? Dailed Calls**] to access your outgoing calls. Select your desired number

and press  key to redial. Refer to "Call History" on page 14 for more details.

Listen to your voice mail

When your phone receives a new voice message, a warning tone sounds. You can dial the voice mail box number to listen to the voice message received.

In the standby mode, press and hold **1 00** key to dial the voice mailbox number.

Make an emergency call

Enter the emergency number and press  key to dial.

Make a call with extension number

- (1) Enter switchboard number, press and hold  key to insert a pause "P", and then enter extension number.
- (2) Press  key to dial the number. The extension number will be dialed after getting through the switchboard.

Adjust call volume

During a call, you can press  key to increase volume and  key to decrease volume. You can also enter main menu and select [**Settings? Call Setup? Ear Piece Volume**], and then press  /  keys to adjust the call volume.

Answer or reject a call

When your service provider supports caller ID and it is enabled, your phone shows the caller's phone number when it receives an incoming call. If the caller's phone number is stored in your Contacts, your phone shows the name assigned to the phone number.

Answer a call

You can answer a call in the following ways.

 **Answer key:** When you select [**Settings? Call Setup?**

Answer Mode? Answer Key], press  key or **Left Soft Key** to answer a call.

 **Any key answer:** When select [**Settings? Call Setup?**

Answer Mode? Any key answer], you can press any key

except  key or **Right Soft Key** to answer a call.

≠ **Auto answer:** When you select [**Settings? Call Setup? Answer Mode? Auto Answer**] and a hands-free kit is used, the phone itself will answer the call in around 3 seconds.

You can also press  key to answer the call before the phone automatically answers it.

Reject a call

≠ Press  key to reject a call.

≠ Select <**Reject**> to reject a call.

Options during a call

When you are on a call, press **Left Soft Key** to access the options. Some options that you can use during a call are network services.

Options	Functions
Hold	Put the active call on hold to answer another call.
Mute	Mute the microphone so that the other party cannot hear you speaking.
Call History	Enter the [Call History] menu. Refer to " Call History " on page 14 for details.
Phbook	Enter the [Phbook] menu. Refer to " Phbook " on page 20 for more details.
Messages	Enter the [Messages] menu.

Hold a call and answer another (network-dependent)

If you have activated call waiting function, your phone gives off a warning tone when you have another incoming call during an active call. You can:

Press  key to answer the new call, with the previous call on hold.

Press  key to reject the new call and continue with the current call.

Conference call (Network-dependent)

Conference calling is a network service that allows up to six persons to take part in a conference call. Call waiting function should be activated to use the conference calling service. Refer to “**Call Waiting**” on page 37 for more details.

- (1) When you are on a call with the first participant and a new participant is trying to reach you, answer the new call with the first one on hold.
- (2) Press **Left Soft Key** and select [**Add to conference**] to connect the calls. All possibly available options when you press **Left Soft Key** are as follows:

Options	Functions
Swap	Switch between the active and on-hold calls.
End Current Call	End the current call.
End All Calls	End the conference call.
Add to Conference	Connect the conference call.

Mute	Refer to “ Options during a call ” on page 9 for more details.
Call History	Enter the [Call History] menu. Read “ Call History ” on page 14 for more details.
Phbook	Enter the [Phbook] menu. Read “ Phbook ” on page 20 for details.
Messages	Enter the [Messages] menu. Refer to “ Messages ” on page 25 for more details.

- (3) If you want to drop a participant from the conference call, press **Left Soft Key** to select [**End Current Call**] and select the participant to quit.



Notice:

Before using this function, please activate call waiting function. Please refer to “Call Waiting” on page 37 for details.

End a call

To end a call, press  key.

4. Call History

Your phone keeps up to 30 records of your missed, received and dialed calls. For the [Call History] to work properly, your service provider must support caller ID and it must be enabled, your calls cannot be blocked, and your phone must be on and within the service area.

Missed Calls

This menu stores your missed calls. In the standby mode, press **Left Soft Key** or **OK** key and select [Call History? Missed Calls] to view your missed calls. Refer to “Dialled Calls” on page 14 for more details.

Received Calls

This menu stores your received calls. In the standby mode, press **Left Soft Key** or **OK** key and select [Call History? Received Calls] to view your incoming calls. Refer to “Dialled Calls” on page 14 for more details.

Dialled Calls

This menu stores your dialed calls. You can enter the [Dialled Calls] menu in the following ways:

- ↗ In the standby mode, press **Left Soft Key** or **OK** key to enter main menu and select [Call History? Dialled Calls].
- ↗ In the standby mode, press  key to enter.
 - ↗ Select your desired dialed call record and press **OK** key to view the detailed information.

☞ Select your desired dialed call record and press **Left Soft Key** to access the following options:

Options	Functions
Call Number	Dial the selected number.
Edit Before Call	Edit the selected number and dial.
Add To SIM	Save the selected number to SIM.
Add To Phone	Save the selected number to the phone.
Send Message	Send a message to the selected number.
Delete	Delete the selected number.
Delete all	Clear all outgoing call records.

Call Time

Use this menu to view the duration of your last call, answered calls, outgoing calls and all calls.

In the standby mode, press **Left Soft Key** or **OK** key and select **[Call History? Call Time]** to enter the menu.

☞ **Last Call:** Shows the duration of your last call.

☞ **Received Calls:** Shows total duration of all your received calls.

☞ **Dialled Calls:** Shows total duration of all your dialed calls.

☞ **Total Time:** Shows total duration of all calls.

5. Entering Text

You can enter text and numbers by using the keypad. The phone supports three input modes for entering text and numbers: Multipress, T9 and Numeric. Multipress and modes are used for entering text, and Numeric mode is used for entering numbers.

The status indicator on the bottom-right side of the display screen shows the input mode that you are currently using.

Abc	Multipress text input mode, uppercase
abc	Multipress text input mode, lowercase
ABC	Multipress text input mode, caps lock
Eng	T9 text input mode, uppercase
eng	T9 text input mode, lowercase
ENG	T9 text input mode, caps lock
123	Numeric input mode

Change input methods

In text entry mode, press  key to switch the input methods.

Use Multipress mode

In Multipress mode, you enter a character by pressing the numeric key on which the character appears.

To enter text in Multipress mode

☞ To enter the first character on the numeric key, press once. To enter the second character on the numeric key, press twice, and so on.

☞ To enter a character that is on the same numeric key, pause after you enter the first character.



Tip:

Press **#*0000** key to switch between uppercase, lowercase and capslock.
(Abc: uppercase; abc: lowercase, ABC: caps lock)

Use T9 mode

To form a word in T9 mode, press the numeric keys that contain the letters you want. As you enter letters, T9 analyzes your key presses and attempts to complete the word. For example, to enter the word "hello", press **40#**, **30#**, **5#**, **5#** and **6#**.

To enter text in T9 mode

(1) Press **#*0000** to switch to [Eng].

(2) Do any of the following:

☞ Enter letters by pressing the keys on which the letters appear. Press a key only once for each letter. If there is more than one choice in the T9 dictionary for your entry, a list of available words is displayed.

☞ Press **◀ / ▶** keys to select your desired one and press **OK** key to confirm.

 **Tip:**
 Press  key to switch between uppercase, lowercase and capslock.
 (Eng:uppercase; eng: lowercase, ENG:caps lock.

 **Use numeric mode**

Press the keys corresponding to the digits you want.

 **Insert a symbol**

While at any text entry screen, press  + key to display symbols available. To insert a symbol, press the corresponding number above the symbol. If you don't see your desired symbol on the current symbol bar, press  /  keys to go to other bars. Press the  key to enter the common used symbols (. , - ? ! ' @ : # \$ / _ 1) when editing a SMS,

There are two ways to insert blank:

- (1) Select blank symbol in symbol list.
- (2) When use Eng and Abc input method, you can press  key to insert blank symbol.

 **Others**

In text entry mode, you can press **Left Soft Key** to access the following options:

Options	Functions
Template	The phone has several preset message templates that you can insert quickly into your message.

Insert Contact No.	With this option, you can select a phone number from the Phbook to insert.
Help	Get some information and tips about text entry.

6.Menu

The menu is a starting point from which you can open all applications in the phone. You can also customize some functions to suit your special needs.

Access the menu

In the standby mode, you can select <Menu> or press **OK** key to enter the main menu and press the four-way navigation keys **▲** / **▼** / **◀** / **▶** keys to navigate menus.

7. Phbook

You can store phone numbers in your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phbook.

Contacts

- ⌘ **Phone contacts:** You can save up to 300 contact entries in the phone. Each entry can contain a name, mobile phone number, work phone number and home phone number.
- ⌘ **SIM card contacts:** Each contact entry in SIM card can contain a name and a number. The amount of entries that you can save in SIM card depends on the memory of your SIM card.

Search

⌘ **Search in [Phbook]:**

In the standby mode, press **Left Soft Key** to enter the [**Search Entry**] to search. Read "**Search Entry**" on page 20 for more details.

Search Entry

- ⌘ In the standby mode, press **▶** key to enter [**Phbook**], and then select [**Search Entry**] menu.

OR,

- ⌘ In the standby mode, press **Left Soft Key** or **OK** key to enter [**Phbook**] and then select [**Search Entry**]. You can know the storage location of an entry by the icon to the left of such entry.

Icon	What does it mean?
	The contact entry is saved in the SIM.
	The contact entry is saved in the phone.

Search for a contact in smart dial

In the [**Search Entry**] menu, you can search for a contact entry by entering in sequence each letter of the entry name. For example, to find 'John', just input the four letters j-o-h-n in sequence.

Options

With a contact entry found in [**Search Entry**] screen, you can:

- ✎ Select <**Detail**> to view detailed information of the selected entry.
- ✎ Press **Left Soft Key** to access the following options:
 - ✎ **Edit**: Edit the selected contact entry.
 - ✎ **Delete**: Delete the selected contact entry.
 - ✎ **Copy**: Copy the selected contact entry from phone to SIM and vice versa.
 - ✎ **Add New Entry**: Read "Add New Entry" on page 21 for more details.
 - ✎ **Call Number**: Dial the selected number.
 - ✎ **Send Message**: Edit a message and send to the selected number.
 - ✎ **Edit Before Call**: Change the selected number and dial.

Add New Entry

In the standby mode, press **Left Soft Key** or **OK** key to enter

main menu and select **[Phbook]** menu. Select **[Add New Entry]** to create a new contact entry.

You can select **[Add To Phone]** or **[Add To SIM]** by pressing **▲ / ▼** keys and press **OK** key to edit the contact entry.

Add to SIM

⚡ Each contact entry saved in the SIM can only contain a name and a mobile number. Select **<Edit>** to enter information about the new contact and press **Left Soft Key** to save. Name and phone number are both compulsive. You can only save one number for an entry.



Note:

The amount of entries that you can save in SIM card depends on the memory of your SIM card.

Add to Phone

Each entry saved in the phone can contain a name, mobile phone number, work phone number and home phone number. You can save up to 300 contact entries in the phone. To add a contact to the phone, you should:

Press **▲ / ▼** keys to select the type of information you want to enter and then select **<Edit>** to enter. When finished, select **<OK >** to save your entering. After entering all information, press **Left Soft Key** to save or **Right Soft Key** to quit current entering.



Note:

When saving a new contact to the phone without assigning a name, the phone automatically names it "No name".

Speed Dial

Use this menu to assign speed dial numbers (2-9) to eight of your most frequently dialed numbers. Key 1 is reserved for [Voicemail].

Assign a speed dial number

- (1) In the standby mode, press **▶** key to enter [Phbook] and then select [Speed Dial] to speed dial list.
- (2) Press **▲** / **▼** keys to select your desired speed dial number.
- (3) Select <Edit>.
- (4) Enter a phone number by using the keypad or select <Names> to select a phone number from the Phbook.

Cancel a speed dial assignment

In the [Speed Dial] menu, select a speed dial number and press **Left Soft Key** and then select <Yes > to delete the speed dial assignment.



Copy

You can copy your contacts from the phone to the SIM card and vice versa. You can choose any of the following ways to copy:

- ⌘ **One By One:** Copy your selected contacts one by one.
- ⌘ **All:** Copy all contact entries from SIM to phone or from phone to SIM.



Notes:

1. When you select [**One By One**] to copy an entry that has the same name and phone number with another entry in the target memory, the phone asks "**Same entry. Copy?**". However, if you use [**All**], the phone copies all entries without asking even if there are same entries between the copying memory and target memory.
2. When the phone asks "**No enough space, Copy?**", you can select **<Yes>** to continue copying until the target memory is full.
3. When copying an entry from phone to SIM, only the name and phone number are copied. An entry saved in the phone with multi-numbers will be saved as several entries with the same name in the SIM.

Delete

Use this menu to delete contacts from the SIM or the phone. You can delete individual contact by selecting [**One by one**] or delete all contacts by selecting [**All**]. Refer to "**Copy**" on page 23 for more details.

Own Number

This menu allows you to check your own phone number.

Memory Status

This menu allows you to check the number of contacts you have stored and maximum number of contacts you can store in the phone's memory and in the SIM card.

8. Messages

You can read, write, send and save text messages with your S-501 phone. You can save up to 200 messages in the phone's memory. The number of messages that you can save in the SIM depends on the type of the card.



Note:

When you lock the access to [Messages] menu, your phone asks for the phone password each time you are trying to enter the menu. The phone allows countless wrong phone password input. Once you enter the correct password, your access to [Messages] and any of its submenus will be permitted. Read "Security" on page 38 for more details.



Write Messages



Note:

Before you can send a message, you need to save the right SMS service center number that can be obtained from your service provider. Go to [Messages? Message Settings? Service Center] to save the number.

In the standby mode, press ◀ key to enter the Write Messages screen to create a new message. A message can contain up to 480 characters.

Create a new message:

- (1) In the text entry screen, select your desired text input method. Read "Entering Text" on page 16 for details.
- (2) When creating a message, press **Left Soft Key** to access the following options:

✍ **Template:** Select your desired template to insert.

✍ **Insert Contact No.:** Select your desired phone number from the Phbook to insert.

✍ **Help:** Get help information about entering text.

When you finish with a new message creation, select <OK> to input the target phone number. You can input the number from the keypad or select a number from the **[Phbook]**.

With the target phone number entered, select <Send> to send the message, or press **Left Soft Key** to access options listed in the following table:

Options	Functions
Phbook	Pick a target phone number from [Phbook] .
Save	Save the message to [Drafts] .
Send and Save	Send the message and save it in [Outbox] .

Inbox

The Inbox stores messages that you received. Icon that precedes the title of a received message indicates the status of it.

Icons	What it means?
	Unread message.
	The message is saved in the SIM.
	The message is saved in the phone.

In the standby mode, press **▲** key to enter **[Inbox]**. In the inbox, the

senders' names are displayed if you have saved the senders' information in your [Phbook]; otherwise, senders' phone numbers are displayed.

When reading a message, you can press ▲ / ▼ keys to page up/down, or press ◀ / ▶ keys to read the previous or next message.

In the inbox list, select a message and then select <Read> to read details of the selected message.

When reading a message, you can:

✍ Select <Reply> to reply.

✍ Press **Left Soft Key** to access the following options:

✍ **Forward:** Forward the selected message to others. Before forwarding the message, you can also re-edit it. Read "Write Messages" on page 25 for more details.

✍ **Delete:** Delete the message.

✍ **Use Number:** Extract the sender's phone number and any 2-20 digit number contained in the message. You can extract up to 10 numbers. With a number extracted, you can select <Call> to dial.

✍ **Save to Phone/SIM:** Transfer the message to the phone's memory if it's saved in the SIM and vice versa.

Drafts

When you finish with a message and select <Save>, the message will be saved in the [Drafts]. Besides, the draft box also stores messages that are unsuccessfully sent. Read "Inbox" on page 26 for more details.

Outbox

If you select [Send and Save] when sending a message, the

message will be saved in **[Outbox]** after it's successfully sent. Read "**Inbox**" on page 26 for more details.

To make sure that sent messages are saved in **[Outbox]**, you must first select **[On]** in **[Messages? Message Settings? Save Sent Message]**.

Memory Status

Use this menu to check the numbers of messages that are saved and maximum numbers of messages that you can save in the SIM and the phone.

Message Settings

- ✎ **Service Centre:** SMS center numbers are usually supplied with the SIM cards. You can use, change or delete the number as necessary. If you don't have the number, contact your service provider.
- ✎ **Status Report:** When you select **[On]**, the network will inform you by displaying an informing message when your messages are successfully delivered.
- ✎ **Save Sent Message:** When you select **[On]**, messages that are successfully sent will be saved in the **[Outbox]**.
- ✎ **Preferred Storage:** Select a preferred memory to save the messages after your phone receives them. When you select **[Mobile]**, all messages received are saved in the phone until the phone memory is full. The default one is **[SIM]**.
- ✎ **Message validity:** Set a validity period for your SMS.

Voice Mail

Voice mail is a network service that allows your callers to leave messages when you are not able to answer their calls. When you

subscribe to voice mail, your service provider furnishes you with a voice mailbox number. You need to save this number to your phone so as to use voice mail. When you receive a voice message, your phone lets you know by sending you a text message.



Notes:

You can use [Call Divert] menu to forward calls to your voice mailbox. Read "Call Divert" on page 36 for more details.

Listen to your voice messages

You need to dial the voice mailbox number to listen to your voice messages.

Voice mailbox number

Use this menu to save or change your voice mailbox number supplied by your service provider.



Note:

Voice mail is a network service and you need a subscription before you can use it. Contact your service provider for more details.

9. Profiles

Profiles define how your phone reacts when you receive a call or a message, how your keypad sounds when you press a key, and more.

The profiles available are General, Outdoor, Indoor and Meeting. Ringing options, keypad tones and other settings for each of the five available profiles can be left at their default settings or customized to suit your preferences. Refer to the table below for default settings for each profile.

Customize

You can customize the currently selected profile in a variety of ways.

Tone Setup

You can select the desired ringing tone preset in the phone. Your phone supports 16 polyphonic ring tones in MIDI and Singtone formats. This menu enables you to change the **[Ring tone]** and **[SMS tone]** and set the sound effect for **[Keypad Tones]** and **[Delivery Report Tone]**.

Volume

This menu enables you to decrease or increase the volume by pressing **▲ / ▼ / ◀ / ▶** keys.

RingType

You can select **[On]**, **[Off]** or **[Increasing]**.

Vibrate Type

Turn on or off the vibrator for an incoming call or message.

 **View**

View all settings for the currently selected profile. In **[View]** menu, select **<Edit>** to enter Edit window. View **“Customize”** on page 29 for more details.



Note:

1. Settings for Silent mode cannot be reset.
2. Insert the headset before you select the Earphone mode.

 **Reset**

Reset all settings for the currently selected profile to default.

10. Display

You can set your phone to display a background picture (wallpaper) on the standby screen.

Wallpaper

Select an image stored in the phone as the background picture on the standby screen. Your phone supports image in .bmp format. With an image selected, press **Left Soft Key** to view in full screen.

Show Time

Select [**On**] to display a clock on the standby screen.

Text Display

When you set text display for the phone, your operator name will be replaced by the text you have set on the standby screen. You can enter 14 characters at most. The phone provides the following three options for you:

- ↵ **Off:** Hide the network operator's name or the text you input from the standby screen.
- ↵ **Network Name:** Display the network operator's name on the standby screen.
- ↵ **Text:** Display the text you input on the standby screen.

Backlight Brightness

Press ◀ / ▶ keys to adjust the backlight level.

 **Backlight Time**

Select the length of time the backlight stays on. You can set the preferred backlight time as [5S], [10S], [20S] or [60S], then select <OK> to finish your setting.

 **Contrast**

Press ◀ / ▶ keys to adjust the contrast ratio of the display screen.

11. Game

Challenge yourself or a friend to one of the fun games in your phone!

Snake

- ⌘ **New Game:** Start to play the game.
- ⌘ **Game level:** Set the difficulty level of the game.
- ⌘ **Scores:** View the top five game scores.
- ⌘ **Help:** Get tips or rules on how to play the game.

12. Alarm

Use this menu to set alarms to sound at specific times. You can set three alarms with your phone.

In the standby mode, press **Left Soft Key** or press **OK** key to enter the main menu and select [**Toolbox?** **Alarm**].

Alarm Settings

For example, if you set [**Alarm1**].

Alarm Status

You can select [**On**] or [**Off**], then press <**OK**> to activate or deactivate the alarm clock. An activated alarm has an  icon on the right.

Alarm Time

Use the keypad to enter the time for the alarm to sound.

Repeat

You can select [**EveryDay**],[**WorkDay**] or [**Define**]. For instance, when you select [**EveryDay**], the alarm rings at the specified alarm time every day.

Alarm Ring

Use this menu to select your desired alarm tone.

Cancel All

Use this menu to deactivate all alarms.

13. Call History

Only when your service provider supports caller ID can your phone record your outgoing calls, incoming calls and missed calls.

In the standby mode, press **Left Soft Key** or press **OK** key to enter the main menu and select [**Call History**] to enter the menu.

For more details, read "**Call History**" on page 14.

14. Settings

You can customize your phone's settings to suit your preferences. In standby mode, press **Left Soft Key** or press **OK** key to enter the main menu and select [**Settings**] to enter.

Time & Date

Use this menu to change the time and date displayed on your phone.

⌵ **Set time:** Change the time.

⌵ **Time Format:** Select [**12 Hour**] or [**24 Hour**] as the time format.



Note:

When [**12 Hour**] is selected, you need to select am or pm when setting the time.

⌵ **Set date:** Change the date.

⌵ **Date Format:** Select [**D/M/Y**], [**M/D/Y**] or [**Y/M/D**] as the date format.

Phone Setup

Many different features of your phone's system can be customized to suit your preferences.

Scheduled Power ON/OFF

This menu enables your phone to automatically switch itself on or off at your preset time. For your notice, if your phone is not in the standby mode at your specified power-off time, it doesn't switch itself off.

There are four options available to set, they are [**Auto On**], [**Power On Time**], [**Auto Off**], [**Power Off Time**].

Language

Use this menu to view the available language of the phone. S-501 defaults as [**English**].

Automatic Keypad lock

Use this menu to enable or disable the auto keypad lock function on your phone.

When enabled, select your desired time period and your phone will automatically lock its keypad if it's left inactive for the specified amount of time. The default time period for automatic keypad lock is [**60S**].



Note:

1. You can also press **Right Soft Key**, and then press **#**#** key to manually lock or unlock the keypad in the standby mode.

Call Setup

Ear Piece Volume

Press **▶** key to increase the call volume and **▶** key to decrease.

Call Divert

- ⌘ **Divert for All calls:** Forward all incoming calls to your specified number.
- ⌘ **Divert if Busy:** Forward incoming calls when you are on another call and incoming calls that are rejected by you.

- ⌘ **Divert if no answer:** Forward incoming calls in a specified deferred time when you do not answer the phone.
- ⌘ **Divert if not reachable:** Forward incoming calls when you are not in your service area or when your phone is switched off.
- ⌘ **Cancel All:** Cancel all call forwarding options.
- ⌘ **Check Status:** Check if any forwarding option has been selected.



Note:

Call diverting is network service. Contact your service provider for details.

Answer Mode

Use this menu to select the desired way for answering a call. There are three answer modes available: **[Answer Key]**, **[Any key answer]** and **[Auto Answer]**. Read **"Answer a call"** on page 11 for more details.

Call Waiting

Call waiting function enables you to hold one call and answer another.

Enter this menu and you will have the following three options:

- ⌘ **Activate:** Your phone informs you when someone is trying to reach you while you are on another call. You can hold the currently active call to answer the new incoming call.
- ⌘ **Deactivate:** Deactivate call waiting function.
- ⌘ **Check Status:** Check whether call waiting function is activated or deactivated.

Call Time Alert

[**Call Time Alert**] alerts you before your phone minutes run out via text message and email. Your phone minutes are continuously monitored and you are sent an alert as soon as you hit the minute threshold that *you* set. You can set the preferred alert time as [**45S**], [**50S**], [**55S**] or [**60S**].

Send Own Number

⌘ **Activate CLIR:** Show your phone number to the person you are calling.

⌘ **Deactive CLIR:** Hide your phone number from the person you are calling.

⌘ **Set by net:** Your phone uses the default setting provided by the network.



Note:

Some networks do not allow the user to change this setting. Please consult your network operator for details.

Network

Network Selection

This menu allows you to search for a new network in the following two ways:

⌘ **Automatic:** Select this option to let your phone automatically search for and register a new network according to the network list stored in your SIM card.

⌘ **Manual:** Select this option to manually search for a new network currently available. When search is finished, the phone automatically displays the networks found. You can press ▲ /

▼ keys to view and press **OK** key to register.

Select Net Sequence

Use this menu to define the order in which your phone searches for a new network under Automatic search mode when you use your phone outside of your home service network. The number of networks that you can store in the list depends on the type of SIM card used. Select a network and press **OK** key to access the following options:

- ⌘ **Replace with...:** Replace the currently selected network with another one from the list.
- ⌘ **Network Code:** After you enter the country code and network code, select <OK> to add to your desired network number.
- ⌘ **Delete:** Delete the selected network.
- ⌘ **Move Position:** Move the selected network to your desired position.

Security

Pin check

PIN code protects the SIM card against unauthorized use. The code can be a 4-8 digit number.

- ⌘ **Active:** PIN code is requested each time your phone is switched on.
- ⌘ **Deactivate:** No need to enter PIN code when your phone is switched on.

SIM Lock

This menu allows your phone to work only with the current SIM card by assigning a SIM lock code. The SIM lock code is preset to 1122.

Mobile Tracker

This function is used to protect your phone from unauthorized use by other people. In the event of the phone being stolen or lost, every time when the other users change a SIM card but not enter the correct password, a SMS will be sent to the Track Number which has been set by the legal user, so your phone can detect if the SIM card has been changed and send you the new number allowing you to ring or track the device. [Tracker] function runs upon device startup and remains active in the background at all times.

☞ **Active:** Select to open the Mobile Tracker function.

☞ **Deactivate:** Select to close the Mobile Tracker function.

☞ **Track Number:** This is the number who will receive the Mobile Tracker SMS. Press **OK** key <Phbook> to select a number from [Phbook]. Tracker number cannot be empty if the Tracker is on,



Note:

You should input password before turning on/off the Mobile Tracker function and setting the tracker number. This PWD is 4 digit number and it is the same as phone PWD

SMS Password Protect

Use this menu to lock access to message menus. When this function has been set to [Active], you must enter the phone password before you can access the Message menus.

Change Password

Use this menu to change the phone password, PIN code and PIN2 code.

⌵ **Change Password:** Use this menu to change your phone password.



Note:

The phone password is preset to 1122. To prevent unauthorized access to your phone, make sure to change the preset password as soon as possible after your purchase.

⌵ **Change PIN:** Use this menu to change your PIN. The PIN code feature must be enabled to change the PIN. Refer to "**PIN check**" on page 38 for more details.



Warning:

If you enter an incorrect PIN three times in succession, the SIM card is blocked. To unblock it, you need to enter the PUK code supplied by your service provider. If you enter an incorrect PUK ten times in succession, the SIM card is permanently blocked and cannot be used anymore.

⌵ **Change PIN2:** Use this menu to change your PIN2 code.



Warning:

If you enter an incorrect PIN2 three times in succession, the code is blocked. To unblock it, you need to enter your PUK2 supplied by your service provider.



Restore Factory Setting

Use this menu to reset the phone's settings you have changed and clear all data you have added. You need to enter your phone password to reset the settings. The original password is 1122. To change password, please refer to "Change Password" on page 39.

15. STK

This menu includes some value-added services. Different operator provides different services. Please consult your network operator for details.



Note:

Some SIM cards do not support STK function.

16. Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your phone for many years.

- ⚡ Keep your phone and its enhancements out of reach of small children.
- ⚡ Keep your phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your phone does get wet, remove the battery immediately and take the phone to your nearest authorized service center for help.
- ⚡ Do not use or store the phone in dusty or dirty areas. Its moving parts and electronic components can be damaged.
- ⚡ LCD display screen is susceptible to damage. Do not drop or shake the phone or touch the screen with sharp object.
- ⚡ Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- ⚡ Do not store the phone in cold areas. When the phone returns to its normal temperature, moisture can form inside the phone and damage electronic circuit boards.
- ⚡ Do not drop, knock or shake the phone. Rough handling can break internal circuit boards and fine mechanics.
- ⚡ Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Clean your phone with a soft fabric dipped with suds if necessary.
- ⚡ Do not paint the phone. Paint can clog the moving parts and prevent proper operation.

⚠ Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

17. Troubleshooting

If your phone does not work properly, read the following guidelines to see if you can find a useful solution. If none of them helps, contact your nearest service center for help.

Your phone cannot be switched on

Possible reason	What should you try?
The battery power is used up.	Charge the battery.
The battery is improperly installed.	Reinstall the battery.

Your phone switches itself off

Possible reason	What should you try?
The auto power-off function is set to On.	Deactivate auto power-off function.
The battery charge is too low.	Charge the battery.

PIN/PUK codes locked

Possible reason	What should you try?
-----------------	----------------------

Wrong PIN/ PUK codes are entered.	If PIN code is locked, enter PUK code to unlock. But if you enter an incorrect PUK code ten times in succession, SIM card will be permanently blocked and cannot be used anymore. Then ask your service provider or SIM card vendor for a new one.
-----------------------------------	--



Note:

1. If you enter an incorrect PIN code for three times in succession, many functions of the SIM card will be disabled. Read "Safety Information" on page 48 for more details.
2. If you are not sure about PIN/PUK codes, contact your service provider.

The call quality is poor

Possible reason	What should you try?
You are in a fast moving vehicle, for example, train or bus.	Check the signal strength indicator on the screen. Try the call again when the signal is stronger.
You are in a weak signal area.	Move to an open area and try again.

Your caller cannot reach you

Possible reason	What should you try?
Call diverting function is set to On.	Deactivate call diverting settings.

You cannot make calls

Possible reason	What should you try?
Your phone is switched off.	Switch on your phone.
You are in a weak signal area.	Move and try again.
The SIM card is not properly installed.	Reinstall the SIM card.
The SIM card is unusable.	Change the SIM card.

The call volume is too low

Possible reason	What should you try?
The call volume is set too low.	Increase the volume.

Your correspondent cannot hear you speaking

Possible reason	What should you try?
The microphone is muted.	Unmute the microphone in the options during a call.
The microphone is too far	Hold the phone close enough to

away from your mouth.	your mouth.
-----------------------	-------------

The phone doesn't ring for an incoming call

Possible reason	What should you try?
The ringing tone is muted.	Press and hold * button in the standby mode to unmute.
The ringing tone is set too low.	Increase the ringing tone volume.
Call forwarding is set to On.	Deactivate Call forwarding settings.

The battery does not charge properly

Possible reason	What should you try?
The battery is stored for too long time after the battery power was used up last time.	Change the battery. Remember to charge the battery as soon as possible when the battery charge gets low.
The battery is not properly installed with the phone.	Reinstall the battery.
The charger is not properly connected to the phone.	Reconnect the charger plug to the phone connector until you see the charging icon on the phone screen.
The battery or charger	Contact the authorized service center

is damaged.	for help.
The phone is in too hot or too cold areas.	Move the phone to room temperature and try again.

 **Network failure**

Possible reason	What should you try?
The SIM card is not properly installed.	Reinstall the SIM card.
The contacts on the SIM card or the phone are dirty or dusty.	Clean the contacts.
The SIM card is unusable.	Change the SIM card.
You are in a weak signal area.	Move to somewhere with strong enough signal and try again.

18. Safety Information

Operating environment

Remember to follow any special regulations in force in any area where you use your phone.

- ⚠ Switch off your phone near a refueling point, bunker, chemical plant or blasting. Follow any restrictions. Not following them may cause an explosion or even death.
- ⚠ Your phone can cause interference and danger in aircraft. Therefore, ensure that your phone is switched off during the flight.
- ⚠ Put your phone at a special rack while driving. Do not put it at the seat or any places where it may drop. Do not use your wireless phone while driving. If you do need to use it, then use the hands-free car kit or park your vehicle first.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemaker

Pacemaker manufacturers recommend that a minimum separation of 6 inch (15.3cm) be maintained between a wireless phone and a

pacemaker to avoid potential interference with the pacemaker.

To minimize the potential for interference, persons with pacemakers should:

- ⚡ Always keep the phone more than 6 inches (15.3cm) from their pacemaker when the phone is switched on.
- ⚡ Not carry the phone in a breast pocket.
- ⚡ Hold the phone to the ear opposite to the pacemaker.



Warning:

If you have any reason to suspect that interference is taking place, switch off the phone immediately. Consult the physician for more information.

Hearing aid

Your phone may interfere with some hearing aids. If interference occurs, consult the manufacturer of the hearing aids.



Emergency calls

Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

Make an emergency call

- (1) If the phone is not on, switch it on. Check for adequate signal strength.
- (2) Enter the official emergency number for your present location. Emergency numbers vary by location.
- (3) Press  key to dial.

**Important:**

When making an emergency call, give all the necessary information as accurately as possible. Your wireless phone may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so

 **Access Codes**

Phone password

This code, supplied with the phone, protects your phone against unauthorized use. The phone password is preset to 1122. After you buy the phone, reset the phone password as soon as possible.

PIN code

This code, supplied with the SIM card, protects the card against unauthorized use. When PIN-check is enabled on your phone, the code is required each time the phone is switched on.

**Warning:**

If you enter an incorrect PIN code three times in succession, the SIM card is blocked. You must enter the PUK code to unblock the SIM card and set a new PIN code. If you do not have the PUK code, contact your service provider or SIM card vendor immediately. Do not enter characters at random.

PIN2 code

This code is supplied with some SIM cards and is required to access some certain special functions of the card. If you enter an incorrect PIN2 code three times in succession, PIN2 code is blocked and you will be asked for the PUK2 code to unblock it.

PUK code

This code may be supplied with the SIM card. If you do not have the code, contact your service provider or SIM card vendor. If you enter an incorrect PUK code ten times in succession, SIM card is void and cannot be used anymore. Ask your service provider or SIM card vendor for a new one. PUK code is unchangeable.

PUK2 code

This code may be supplied with the SIM card. If you enter an incorrect PUK code ten times in succession, some certain functions will be inactivated. If necessary, ask your service provider or SIM card vendor for a new one. PUK2 code cannot be changed. If you lost the code, contact your service provider or SIM card vendor.

 **Charging and discharging**

Your phone is powered by a rechargeable li-ion battery. Standby and talk times may vary, depending on the operating environment and settings in the phone.

- ⚡ Use only Spice approved batteries and chargers. Spice takes no responsibility for any damage caused by using unapproved batteries or chargers.
- ⚡ When your phone is on and charging is in progress, the battery bar appears on the screen and starts scrolling. When you charge the battery with your phone off, an animation indicating that charging is in progress appears on the screen.



Note:

If the battery power is completely used up, the battery bar appears 2 or 3 minutes after you start charging. The charging time should be 2-5 hours.

- ⚡ Do not touch the battery or charger with wet hands when

charging is in progress to avoid any potential danger.

- ⌘ When charging is complete, the battery bar stops scrolling. Unplug the charger from the wall outlet and the phone.



Tips:

The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. It's suggested that each of the first two or three charging times lasts for over 10 hours.

Precautions when using batteries

- ⌘ Never use any charger or battery that is damaged in any way.
- ⌘ If you use the phone near the network's base station, it uses less power. Standby and talk times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ⌘ Battery charging time depends on the remaining battery charge, the type of battery and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, buy a new one.
- ⌘ Using unapproved batteries and chargers may cause an explosion. Unplug the charger from the wall outlet and the phone when not in use. Do not leave the battery connected to a charger for over one week. Overcharging may shorten the battery's lifetime. If left unused, even a fully charged battery will lose its charge over time.
- ⌘ Placing the batteries into the fire, squeezing or colliding the batteries may cause an explosion.
- ⌘ When installing the battery, do not reverse the positive (+) and negative (-) terminals.

- ⚡ Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep or use the battery in normal temperature.
- ⚡ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as coin, clip or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- ⚡ Do not dispose of batteries in a fire. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.
- ⚡ If your phone, battery or charger gets wet, do not try to dry them in a heating device such as a drier or microwave oven etc. Doing so may cause burning, expansion or explosion of the phone, battery, charger or the heating device used.

It is hereby declared that Spice is not liable for any direct or indirect damage occurred owing to any of the above misoperation.



Precautions when using enhancements

- ⚡ Keep all enhancements (SIM card, memory card or battery etc.) out of reach of small children.
- ⚡ Ensure that your phone is switched off and is not connected to a charger before you remove the battery.
- ⚡ Your phone and its enhancements are not water-resistant, keep them dry.
- ⚡ When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

If your phone, battery or charger does not work properly, contact the

nearest authorized service facility for service.

 **Additional safety information**

- ⚠ When left unused, switch off your phone and remove the battery to save power and eliminate radiation.
- ⚠ To avoid damage to your hearing, do not increase the volume too high when using the phone.
- ⚠ DO NOT attempt to disassemble the phone and its battery by any nonprofessional persons.