

SPICE S-5330

User's Manual

PN: 5839002079

Spice Mobiles Ltd. ©2009. All rights are reserved. No part of this document may be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or by statements of any kind in this manual, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect your environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User's Manual is Just to guide the user about the functionality of the phone. This dose not seems any certificate of technology. Some functions may very due to modifications and up gradations of software or due to print mistake.

SAFETY PRECAUTIONS

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones where blasting is in progress. Follow any regulations and rules strictly.
	Do not use mobile phones at a refueling point. Don't use near fuel or chemicals
	Follow any regulations or rules in hospital and health care facilities. Switch phone off near medical equipment.
	All wireless devices may get interference that could affect performance.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use only in normal position. Do not expose your phone to extreme high temperatures above +60°C (+140°F) . Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

Table of Content

GENERAL INFORMATION.....	1
Antenna.....	1
Network Service.....	1
Accessories.....	1
Privacy.....	Error! Bookmark not defined.
KNOW YOUR MOBILE PHONE.....	2
Positions of Phone Keys.....	2
Functions of Keys.....	3
Display Screen.....	4
Status Icons.....	4
Back Light.....	5
GETTING STARTED	6
First Call.....	6
Mounting the SIM Card.....	6
Mounting the T-Flash Memory Card.....	7
Charging the Battery.....	8
Switching Your Phone On/Off.....	9
Using the Personal Handsfree Handset.....	9
CALLING	10
Making Calls.....	10
Answering Calls.....	11
Options in Call.....	11
GUIDE TO MENU OPERATIONS.....	12
Phone Book.....	12
Messages.....	15
Call History.....	19
Settings.....	20
Media Center.....	26
User profiles.....	32

Organizer.....	34
Services.....	35
Fun Spice	36
IMPORTANT INFORMATION	41
Use of Passwords.....	41
Battery Information	42
Usage & Maintenance	44
Emergency Calls	45
APPENDIX.....	46
Appendix A: Guidance On Entry Methods	46
Appendix B: Troubleshooting	48
Appendix C: Available Accessories	49
Appendix D: FCC Statement.....	49
Appendix E: The Usage of Card-Reader	49

GENERAL INFORMATION

Antenna

Use of other antenna devices could damage your mobile phone and reduce performance. Your phone has a built-in antenna. Don't touch the antenna area unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Network Service

A lot of features described in this manual are called network service. They are special services provided by wireless service providers. You should subscribe to these services from your home service provider and learn instructions on uses before you select the network you want to use.

Accessories

Li-Ion battery is the manufacturer-approved rechargeable battery available for your phone. May be some batteries performs best after several full charge/discharge cycles.

Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular model. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

Please consult with your dealer for availability of approved accessories.

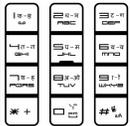
KNOW YOUR MOBILE PHONE



Positions of Phone Keys

- | | |
|----------------------------|--|
| 1. Earpiece | 7. End and Power On/Off key |
| 2. Screen | 8. Number keys |
| 3. Selection key | 9. T-FLASH card Slot |
| 4. Soft keys | 10. Charger and accessories connector |
| 5. OK key | 11. Cord hole |
| 6. Call/Pick up key | 12. Battery Cover |

Functions of Keys

Key	Name	Description
	Call/Pick Up Key	Making or answering a call. In the standby mode, press this key to access the Call Logs.
	End/ Pwr On/off Key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return the standby mode and cancel current operations.
	Soft Keys	Use the left/right soft keys to execute to functions indicated at the left/right of the prompt bar on the screen.
	Selection Key/ OK key	Scrolling options in the function list or the phone book. In the edit mode, it is used for moving the cursor. In the standby mode, press Selection Key to activate a specified function, press OK key to activate the Audio player.
	Numeric Keys	Used to enter numbers, letters and some special characters. In the standby mode, press and hold the # key to activate Silent mode, press and hold the Numeric key 0 to activate FM function. In the edit mode, you can press the # key to switch the input method, press the * key to display the symbols.

Display Screen

Your mobile phone has a single LCD display, which consists of three main areas:

The First line displays status icons, which indicate the signal strength, the remaining power of the battery, etc.

The Middle lines display text and graphics, including numbers, text, animated icons and the information you enter.

The Last line displays the currently available operations assigned to the left or right soft key.

Status Icons

	Network Signal
	Connecting GPRS and using GPRS
	Connecting GPRS but no data alternating
	Divert all Voice Calls
	Auto Keypad Lock
	Alarm Clock is activated
	Battery Status
	Missed Calls
	New Message or Message Memory Full
	MMS is busy
	New MMS
	Roaming Startup
	WAP Message
Sound Status	
	Ring
	Vib. only
	Vib. then Ring
	Vib. and Ring
	Silent

Back Light

You can set the Back Light for the display and keypad through options in the menu. The backlight will be off automatically without any key operation after a while.

GETTING STARTED

First Call

- Insert a SIM card (Switch off your phone at first, and then remove the battery). Enter the area code and the phone number and press Pick Up Key.
Tip: Before you get started, you must insert a valid SIM card in your phone and charge the battery first.
- SIM Card: Please refer to “Mounting the SIM Card” for more reference on installation.
- Charging the battery: please refer to “Charging the Battery” for more details.

Mounting the SIM Card

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

Note: This particular phone model only supports the SIM cards of 1.8V and 3V.

- Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.
- The SIM card and its contacts can be damaged by scratches or bending easily, so be careful while handling, inserting or removing the card.
- Keep all miniature SIM cards out of children's reach.

Note: Always make sure the phone is switched off before you insert or remove the SIM card, otherwise it may damage the SIM card.

Mounting

1. Remove the battery cover by sliding it.

2. Insert the SIM card, with the notch at the bottom right and the gold contacts face down, into the card slot.



3. Replace the battery and close the cover tightly.

Note:

- If the SIM Card is installed improperly or damaged, the prompt words "Insert SIM" will display on the screen after you switch on your phone. Remove the SIM Card and check the way that performs as pictures show, and then mount it again.
- If "Insert SIM" still appears on the screen after you have inserted the SIM correctly. Please ensure there is no stain on the surface of the SIM card. If there are some stains on it, please clean away them with rubber carefully and then try again.
- If the screen displays that the SIM card is locked permanently, please consult with your network operator.

Mounting the T-Flash Memory Card

Please follow steps described as below:

Open the rubber cap from the memory card slot, and then insert the T-Flash memory card into the slot until snaps into the place completely. Align the card to the arrow sign as the following picture shows:



Note:

Please plug the T-Flash card when the phone is power off. Otherwise the phone is needed to restart to guarantee normal function of the

T-Flash card. Do not plug the T-Flash card when phone is power on, as abusing may cause abnormal circumstances.

Charging the Battery

Note: Please always keep your phone connector and charger dry.

1. Connect the connector of the travel adapter to the phone.



2. Plug the travel adapter into a proper AC wall outlet.
3. When your phone indicates that the battery is fully charged, please pull the travel adapter out from the I/O socket of the phone.



Tip: 1. If the battery is totally empty or not enough, it may take a few minutes before the charging indicator appears on the screen.

2. You can turn on/off, and use the phone while charging.

Warning: Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

Switching Your Phone On/Off

- Press and hold Power Key for a few seconds to switch your phone on.
- **If the phone ask for a phone lock code:**
Enter the phone lock code, and press OK.
- **If the phone ask for a PIN code:**
Enter the PIN code, and press OK. The PIN code is usually supplied with the SIM card. Please consult your network operator for more information.
- **Access the standby mode.**
Press and hold Power Key for a few seconds to switch your phone off.

Using the Personal Handsfree Handset

Connect the handsfree handset to your mobile phone, you can still answer calls and use the microphone without holding the phone.

CALLING

Making Calls

1. Enter the phone number (with the area code)
2. Press Call Key to make a call.
3. Press End Key to end a call.

Making International Calls

1. Press the * key twice for the international prefix symbol +.
2. Enter the country code, area code and phone number.
3. Press Pick up Key to make a call.

Making Extension Calls

1. Enter the host number, and press the * key three or four times for the extension prefix symbol **P** or **W**.
2. Enter the extension number, and press Pick up Key to make a call.

Clear Wrong Enters

Press right soft key to delete the last character on the screen. Hold right soft key will clear all you entered.

Making a call from the Phone Book

Method 1:

1. Press right soft key to access the **Phone Book List**. Scroll to search the desired number. (Enter the first letter or more of the name and press the selection key Up/Down to reach the desired name.)
2. Press Pick up Key to call the number.

Method 2:

1. Select " Menu > **Phonebook**".
2. Select " Quick Search" to find the number you wants, and presses Pick up Key to call the number.

Last Number Redial

1. In the standby mode, press Pick up Key to access the **Call Logs**.
2. Press the Up/Down key to reach the desired number or name and press Pick up Key.

Speed Dialing

You can save 8 Speed Dial Numbers you often dial to positions titled with number keys from “2” to “9” respectively. Select “Settings > Call Setup > Speed Dial > Set Number”, and then set “Enable Speed Dial” on. In the standby mode, press and hold one of the number keys from “2” to “9” until the call is started.

Adjusting the Sound Volume

During a call, you can press the Up/Down Key to adjust the earpiece volume.

Answering Calls

1. To answer an incoming call, press Pick up Key or left soft key.
2. To end or reject an incoming/ongoing call, press Hang up Key.

Options in Call

Your phone provides a number of functions that you can use during a call.

During a call, you can access Hold/End single call, New Call, Phone Book, Message center, Sound Recorder and other functions.

GUIDE TO MENU OPERATIONS

All function options about the mobile phone are listed as below with brief descriptions.

Phone Book

You can save many phone numbers in your mobile phone. The capacity of your SIM card decides how many phone numbers can be saved in. You can access the Phone Book to search all records saved in this mobile phone and your SIM card.

Quick Search

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person's name, and related records about it will display in the middle of the screen. Please use the Up/Down key to select the number as desired, and then press Pick Up Key to make a call.

Search Contact

You can find the desired phone number from the phone book easily and quickly. In the standby mode, press left soft key to access **Menu > Phone Book > Search contact**. Please follow steps described as below:

1. In the **Name** box, enter all letters of the name or the initial letters of the name.
2. Press left soft key to access **Options > Search > Phone Book List**, and then all related information of the desired contact will be listed. Please use the Up/Down key to browse all entries, and then press Pick Up Key to make a call.
3. Press left soft key to access **Entry Options**, and then you can perform following operations for each entry:
 - **Call**: Take the number to make a call.
 - **Send SMS**: Send messages to the selected number.
 - **View**: Check the record for the selected number.

- **Edit:** Edit the selected entry.
- **Delete:** Delete the entry from the Phone Book.
- **Copy:** All entries can be copied alternately from the SIM card to the phone or from the phone to the SIM card. i.e. SIM to Phone Copy or Phone to SIM Copy.
- **Move:** All entries can be moved alternately from the SIM card to the phone or from the phone to the SIM card.
- **Duplicate:** Entries saved in the SIM card can be copied to the SIM card, and entries saved in the phone can be copied to the phone. i.e. Local Copy.
- **Send by SMS:** Send messages to the selected number.
- **Send vCard:** Send your phone number by SMS/ MMS or Save to file.

Tip: Pressing one of the number keys from 2 to 9, the first one of the entries whose names is initialized by the letter corresponding to the key you pressed will be highlighted at once. For example, in order to search for the record of someone whose name is initialized with C, please press the key 2 quickly for 3 times, and then the cursor skip to the first entry of the contacts whose name are initialized with C.

Add New Contact

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described as below:

1. From the Phone Book menu, press left soft key to select **Add New contact > To SIM/To Phone**.
2. If the **To SIM** is selected, press the left key to select OK to start to edit the contact's name and phone number.
3. If the **To Phone** is selected, you can add the contact's name, phone number, home number, company name, email address, office number, fax number, birthday and so on.

Tip: This mobile phone offers you several input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi

ABC), Smart abc (eZi abc) and so on. Please refer to "Appendix A: Guidance of Entry Methods" for more details.

Copy All

This function enable you copy all entries both from the SIM card and the phone.

Note: If the capacity of this phone book is different from the SIM card's, the copy content takes the smaller one as standard.

Move All

This function enables you move all entries from the SIM card or the phone.

Delete

You can select delete entries form the SIM card, the Phone or one by one.

Phone Book Backup

This application allows easy transfer and backup of contacts stored in your phone/SIM. It supports import and export of VCF files.

Caller Groups

You can set group name, associated sound, associated picture and member list for different caller group.

Extra Number

You can set Owner Number, Service dialing number, SOS Number.

- Owner Number: You can enter 2 groups of a number and a name and can also edit or erase it.
- Service dialing number: You can enter Service dialing number.
- SOS Number: You can enter five groups of SOS numbers.

Note: If the keypad is locked, you can dial SOS numbers that you edit.

Settings

- Memory status: display the occupied storage and the total storage.
- Preferred Storage: select the SIM or Phone as the preferred storage for the new number.

- Fields: select the desired option when you add a new number.
- My vCard: can edit and send my card.
- Papat PHB Reader: You can set On or Off.

Caller Picture

- To New contact: select the picture to the new entry.
- To Selected contact: select the picture to the selected entry.
- To Caller Group: select the picture to the caller group.

Messages

SMS

Short Message Service (SMS) is a kind of network service. Your home network may not support the service. Please consult your home network operator for more information.

1. Enter the **Menu**, and select **Messages**.
2. Press the left soft key to enter the function.

Write Message

1. Please press the # to switch input methods while editing a message. You can enter letters and numbers, and insert pictures and rings. (Support EMS service)
2. Edit your message, and press the * to insert special symbols.
3. Select **Options**, and then you can do: Done, Insert Phonebook, Use Templates, Insert Object and so on.
4. When you select **Done**, you can choose the way to send, save, save and send, send to many, send by groups.

Inbox

The icon  means an unread message or the message box is full. You won't receive new messages once the message box is full. Please delete unnecessary messages.

1. Select the unread message, and press the left soft key to read.
2. Select **Options**, and then you can do: reply, delete, forward and so on.

Outbox

The screen will display the message list once you select the **Outbox**.

1. Select "OK" to read the current messages.
2. Select **Options**, and then you can send, edit or select other operations.

Message Templates

Your mobile phone saves many messages in common use. You can edit, erase, Write Message.

SMS Settings

You can set the default information about SMS properties with:

- 1> **Profile Settings:** You can set Profile Name, SC Address, Validity Period and Message Type as desired. Please consult your network operator for the number.
- 2> **Common Settings:** You can set Delivery Report and Reply Path. Delivery Report function enables you to receive the status report on whether short messages are sent out successfully or not. Please consult your network operator to obtain the function.
- 3> **Memory Status:** Check the rate of the SIM card and the phone's capacity compared to the total capacity. The exact capacity depends on the message content, the phone and the SIM card.
- 4> **Preferred Storage:** You can select the SIM card or Phone to save.
- 5> **Pref. Connection:** You can select Prefer GPRS, Prefer GSM or GSM Only.

Schedule SMS

Press the left soft key to access the Add or Options > Add, and then you can set the date, time, message and Phone number. Press Done and Save the message will sent out the message to the number as your desire.

MMS

Please consult your network operator to obtain the MMS services.

Write Message

While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

- **To:** the phone number or E-mail address are both OK.
- **Cc:** send the MMS to others at the same time. Phone numbers or E-mail addresses are both OK
- **Bcc:** send the MMS to others secretly at the same time. Phone numbers or E-mail addresses are both OK.
- **Subject:** edit the Subject of the MMS.
- **Edit content:** enter the text or add picture, audio and so on.

Inbox

The phone saves the received MMS into the inbox.

All received Messages display in the inbox, and the icon  means the MMS is unread. Use the Down/Up key to scroll the cursor to check the list, and the sender's name and number will display. If the MMS has been read, the icon will change to the read icon. Please press the left soft key to access **Options**, and then you can do: view, reply, delete and so on.

Outbox

In the **Outbox**, please select **Options**, and then you can send or select other operations.

Drafts

In the **Drafts**, please select **Options**, and then you can send, edit or select other operations.

Templates

User defined: you can save many MMS in it.

Default: You mobile phone saves many MMS in it.

And what you can do for those MMS are View, Write Message and Properties.

MMS Settings

Please follow steps described as below:

1. **Compose:** You can configure Creation Mode, Image Resizing, and Auto Signature.
2. **Send:** You can configure Validity period, Delivery Report, Read Report, Priority, Slide Timing, and Delivery Time.
3. **Retrieve:** You can configure Home Network, Roaming, Read Report, and Delivery Report.
4. **Filter:** You can configure Anonymous and Advertisement.
5. **Server Profile:** You can select one profile from 10 Profiles to activate or edit.
6. **Memory Status:** You can check the Usage, Used space and Free space.

Chat

Use this function to chat with the sender by sending messages.

- **Chat room info:** select one chat room to set My Nickname and Remote Number.
- **Start new:** enter words and start to chat with the preset number.

Voice Mail Server

Scroll the Up/Down key to select **SIM1 Voice Mail Server** in the **Messages** menu, and select **Options** to access **Voice Mail Server**.

- **Edit:** Input or modify the number of voice mailbox.
- **Connect to Voice:** You can hear messages in the voice mailbox.

Note: This service is supplied by the network, such as the message machine service. It enables the caller to leave messages when you can't or unwill answer the coming call. Your number for the voice mailbox is saved in this phone. In standby mode, hold the number key 1 to dial the number of the voice mailbox after the number is configured. Please consult your network operator for more details.

Broadcast Message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Until now, there

are several networks afford the service in this world. Please consult your network operator for more reference.

- **Receive Mode:** Turn on or off the Cell Broadcast.
- **Read Message:** Scroll the Up/Down Key to select the message.
- **Languages:** Select the desired language to display the broadcast message.
Note: Your network operator decides whether the language is supported or not.
- **Channel Settings:** You can choose Select, Add, Edit or Delete to receive the Broadcast information.

Call History

In the standby mode, press left soft key to access **Menu > Call History**.

Missed Calls

With this function, you can check recent missed calls.

1. Scroll the Up/Down key to select a missed call.
2. Press left soft key to access **Missed Call Information**, and you can do: Delete, Save to Phone book, Call, Edit and so on.

Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Call, Edit and so on.

Received Calls

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Call, Edit and so on.

Delete Call Log

You can delete all records of missed calls, dialed calls or received calls with this function or Delete all folders drastically.

Call Time

- **Last Call time:** The last call time can be checked.
- **Total Sent:** The total time for all dialed calls can be checked.
- **Total Received:** The total time for all received calls can be checked.

- **Reset All Time:** Reset the counters.

SMS Counter

- **Sent:** You can check and clear the number of sent messages.
- **Received:** You can check and clear the number of received messages.

Note: This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

GPRS Counter

You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

Settings

In the standby mode, press left soft key to access **Menu > Settings**.

Style Setting

You can set MainMenu Style, Menu Style, and Screen Style.

Phone Setup

Time And Date

- **Set Home City:** Select the desired home city.
- **Set Time / Date:** Enter the current time and date.
- **Set Format:** Select a time and a date format.

Schedule Power On / Off

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

Note: Please disable the Schedule Power On function before you board an airplane.

Language

Select the desired language for the display text.

Preferred Input Methods

Select the desired input method for the default input method.

Greeting Text

Set On, input words as your greeting text once you switch the phone on.

Shortcuts

You can set shortcuts for those functions you often use.

Dedicated key

You can configure short cut functions for the Up, Down, Left and Right key respectively. In the standby mode, press any one of them to access the appointed function.

Flight Mode

You can set the normal mode, flight mode and Query When Power On.

LCD backlight

You can set the LCD backlight.

Display Characteristic

With this function you can configure the basic status of display characteristics including Wallpaper, Screen saver, Power On Display, Power Off Display, Main menu style, Show date and time, Show owner number, Keypad light setting.

Call setup

- **Caller ID:** You can select Set By Network, Hide ID or Send ID. The default status is the Set by Network.

Note: This function is related with your network. Select Hide ID may cause failure to dial. Please test the calling function is ok before you enable Hide ID.

- **Call Waiting:**

1> **Activate:** The mobile phone will connect to the network when Call Wait is enabled. After a while, the network will take a response by sending messages to ensure your operation. If Call Wait is enabled, the network will warn you. At the same time, another coming call number will display on the screen when the first call is ongoing and a new call is coming.

- 2> **Deactivate:** If you cancel Call Waiting, the network won't warn you when the first call is ongoing and a new call is coming.
- 3> **Query Status:** With this function, you can inquire about the current status from the network.
- **Call Divert:** This function allows your phone divert coming calls to another phone.
 - 1> **Divert All Voice Calls:** When this function is enabled, all coming calls will be diverted to another phone. Set it On or Off, the phone will connect to the network. After a while, the network will take a response and tell you the result on operation.
 - 2> **Divert If Unreachable:** When this function is enabled, the coming call will be diverted to another phone number if the phone is unreachable.
 - 3> **Divert If No Answer:** When this function is enabled, the coming call will be diverted to another phone number if there is no answer in some time.
 - 4> **Divert If Busy:** When this function is enabled, the coming call will be diverted to another phone number if the phone number you dialed is busing.
 - 5> **Divert All Data Calls:** You can divert all data calls with the need of your network operator's support.
 - 6> **Cancel All Divert:** Use to cancel all diverting functions.
- **Call Barring:**

This function makes use of Call Barring to limit some selected calls. When you configure this function, you should consult your network operator for the password. If the password is wrong, the phone will prompt the fault message. After the desired number is selected, please continue to select On or Off. After a while, the network will take a response and tell you the result.
- 1> **Outgoing Calls:**
 - **All Calls:** When this option is enabled, you can't make any calls.

- **International Calls:** When this option is enabled, you can't make any international calls.
 - **International Calls Except to Home PLMN:** When this option is enabled, you can only make local calls when you are abroad or dial to the country in which the network provider is.
- 2> Incoming Calls:**
- **All Calls:** When this option is enabled, you can't make any calls.
 - **When Roaming:** When this option is enabled, you can't receive any incoming calls if you are out of reach of the network service.
- 3> Cancel All:** Cancel the call barring. It also needs the Call barring password provided by the network operator.
- 4> Change Barring Password:** Use to modify the Call barring password. It needs to input the original password before you modify.
- **Auto Redial:** You can set the Auto Redial function On or Off. When set it ON, the phone will automatically redial the last called number after a while if you fail to connect to the number. The times for auto redial are up to 10 times. You can't make any other calls when the Auto Redial is ongoing. Press Cancel to end Auto Redial.
 - **Speed Dial:** Set the status on, and then you can set 8 groups for the speed dial. (Corresponding number keys are 2 to 9). In the standby mode, press and hold the number key to dial the corresponding number.
 - **More**
 - 1) **Call Time Display:** You can set Call Time Display On or Off. The call time will display when set it on, .The call time won't display when set it off.
 - 2) **Call Time Reminder:** In order to save the call cost, this function prompts you to end the call in time. You can select Off, Single, or Periodic. There is no prompt when Off is selected. You should

enter a specific time between 1 and 3000 seconds when Single is selected. The phone will ring once when the time is up. You should enter a specific time between 30 and 60 seconds when Periodic is selected. The phone will ring once automatically at the specific time before the integral minute is up.

- 3) **Line Switching:** Switch to Line 1 or Line 2, the default is Line 1.
Note: If Line 2 is selected, making calls from Line 2 depends on the network operator.
- 4) **Closed user group:** Press the left soft key to access Group List, and then select Add to input the group's name. Press the left soft key to select Done, and then add the number. Press the left key to finish. Select Option to Edit, Add, Activate, Deactivate or Delete the existent group.

Network Setup

Please contact the network operator for the following network service.

1. Network Selection

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

2. Preferred Networks

Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Options** to perform the following operations:

- **Add From List:** Display all PLMN list.
- **New:** Create a new network and set the network priority.
- **Change Priority:** Reset the selected Network Priority.
- **Delete:** Delete the current preferred network.

3. GPRS Connection

You can set it when needed or Always to GPRS connection.

Security Setup

SIM Lock

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. Three times wrong PIN input, it's asked to input PUK. PUK is used to release and modify the locked PIN. If PUK isn't provided or missed, please consult your network operator.

Phone Lock

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is 1122.

Fixed Dial

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

Note: If you enter PIN2 after the phone is switched on, PIN2 is not required before the phone is switched off. Therefore, please switch the phone off and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

Barred Dial

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

Change Password

You can change PIN, PIN2, Phone Password and Tracker Password.

1> PIN

- The original PIN is required before change the PIN.
- Enter the new PIN. 4-8 numbers can be used for PIN.
- Enter new PIN to ensure the New PIN.

2> PIN2

- The original PIN2 is required before change PIN2.

- Enter the new PIN2. 8 figures can be used for PIN2.
 - Enter the new PIN2 again to ensure the new PIN2.
- 3> Phone Password
- The current phone password is required before change the phone password.
 - Enter the new phone password.
 - Enter the new phone password again to ensure the new phone password.
- 4> Tracker Password
- The current Tracker password is required before change the Tracker password.
 - Enter the new Tracker password.
 - Enter the new Tracker password again to ensure the new Tracker password.

Restore Factory Settings

Access **Settings** to select **Restore Factory Settings**, and press OK. All settings can be restored to factory settings with this function. The default password is 1122.

Media Center

Audio Player

The Play, Stop, Back, Forward functions correspond to the Up, Down, Left and Right Key respectively. The available music formats. Select **List** to access the **Play List**, and then select **Options** to perform the following functions: play, details, add to rings, refresh list, settings.

Note: To enjoy non-stop music, please download music to the "My Music" folder of phone or the memory card recognized as a USB disk on your PC. The Audio Player of the phone will automatically play music files from the **My Music** folder. You may need to refresh it manually from the settings in case you have earlier opted for manual refresh settings.

Warning: Make sure that the volume is appropriate for your hearing while using the audio player.

Sound Recorder

The mobile phone supports WAV, AMR recording formats. You can record conversations, which may be saved to the **Audio** folder under the **Phone** folder. If there is a record, press left soft key you can do: Record, Play, Append, Rename, Delete, Delete All files, Settings and Forward.

Note: If a call is incoming while recording, the record will abort and the data will be saved into the record folder automatically. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

FM radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector. Select **FM Radio** in the **Menu** to access the radio controls.

1. Press the Up key to Power on/ off the FM radio.
2. Press the down key besides "search" on the screen to change the color of dot of red or green alternately.
3. Press the Left/ right key to step down/up to the next FM station.
4. Press the * key and the # key to adjust radio volume.
5. Press **Options** to access the following options: channel list, manual input and so on.

Tip: Long press of the Numeric key 0 in idle screen activates the FM function.

Schedule FM Record

With this function, your phone can record the FM program as the schedules. You can set off or on, the date and time, repeat style, channel settings and record settings.

Melody Composer

The mobile phone enables you to compose your favorite music as the tune of the incoming call, alarm.

Note: The phone can save multiple tones edited by you according to the volume of tones.

When the Tune Editing List is blank, you can edit your favorite tunes by pressing "Add". After you have finished editing, press **Options** to select a music instrument or playing speed to play the editing tunes. You also can save the editing tunes.

Select the edited music, and press **Options** to perform the following operations:

- **Play:** You can play the specified self-edit tunes.
- **Edit:** You can edit the specified self-edit tunes.
- **Add:** You can add new self-edit tunes.
- **Note:** A maximum of 150 notes can be edited with a piece of self-edit tune.
- **Rename:** You can modify the name of the selected self-edit tune.
- **Delete:** You can delete the selected self-edit tune.
- **Delete All Files:** You can delete all self-edit tunes.
- **Forward:** You can send the self-edit tones to User Profile, MMS, and EMS.

In the window of Tone Editing, press **Options** to perform the following operations:

- **Play:** You can preview the edited tone.
- **Play Speed:** You can set the playing speed of the current editing tone.
- **Select Instrument:** You can select the music instrument playing the tone.
- **Save:** You can save the tone.

The rules by which the tone is composed as follows:

0: Insert one pause;

1: Insert Do;

- 2: Insert Re;
- 3: Insert Mi;
- 4: Insert Fa;
- 5: Insert So;
- 6: Insert La;
- 7: Insert Si;
- 8: Insert a vibration note;
- 9: Insert a backlight;
- *: Modify the playing rhythm of the current tone;
- #: Modify the current note with halftone;
- ↑: Modify the tone of current note (high, middle, low);
- ↓: Modify the tone of current note (high, middle, low).

File Manager

You can use the function to manage all types of files saved in the phone or memory card. Please access **Menu > File Manager**, and then select

Options.

Phone

There are all of files saved in your phone. You can do Open, New Folder, or Format.

1> **Open**

Use the function to access the root directory. It will list the default folders in system, the folder created by user and user files. (There are only system default folders at the first time of power on condition that the user never changes the root directory).

- If the specified one is 'folder', press **Options** to perform the following operations:
 - **Open:** You can open the specified folder.
 - **New Folder:** You can create a new folder in the specified folder.
 - **Rename:** You can rename the specified folder.
 - **Delete:** You can delete the specified folder.

- **Sort by:** You can sort all files in the specified folder of root directory and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
- Press **Options** if the specified item is a file. For different kinds, you can perform the following operations:
 - **View (Play):** to browse or play the music/photo file.
 - **Forward:** to send the audio file to User Profile or MMS, Or send the picture file to the wallpaper, screen saver or Phone Book and so on.
 - **Details:** to list the date and size of the appointed file.
 - **Rename:** to rename the appointed file.
 - **Copy:** to copy any types of authorized files on your phone/card as the phone's memory is recognized as a removable Drive by your PC/Laptop. Press "Back" to cancel the Copy function. If the space is not enough to finish the operation of Copy, the phone will prompt you.
 - **Move:** to move the specified file to a specified place.
 - **Delete:** to delete the specified file.
 - **Delete All Files:** to delete all the files subject to the list that the specified file locates.
 - **Sort by:** to sort all files in the Removable disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
- 2> **New Folder:** Use the function to create a new folder at a specified place.
- 3> **Format:** Use the function to format all data in the Removable disk. The system will recreate a new folder. The formatted data cannot be recovered, so please use this function carefully.

Memory Card (Only for the card inserted)

There are all of files saved in your T-Flash Memory Card. You can do Open, New Folder, Format.

1> Open

Use the function to access the root directory of the memory card. It will list the folder created by user and user files.

If the specified one is 'folder', press **Options** to perform the following operations:

- **Open:** You can open the specified folder.
- **New Folder:** You can create a new folder in the specified folder.
- **Rename:** You can rename the specified folder.
- **Delete:** You can delete the specified folder.
- **Sort by:** You can sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.

Press **Options** if the specified item is a file. For different kinds, you can perform the following operations:

- **View (Play):** to browse or play the music/photo file.
- **Forward:** to send the audio file to User Profile etc. or send the picture file to the wallpaper, screen saver or Phone Book and so on.
- **Details:** to list the date and size of the appointed file.
- **Rename:** to rename the appointed file.
- **Copy:** to copy any types of authorized files on your memory card as the card's memory is recognized as a USB Drive by your PC/Laptop. Press "Back" to cancel the Copy function. If the space is not enough to finish the operation of Copy, the phone will prompt you.
- **Move:** to move the specified file to a specified place.
- **Delete:** to delete the specified file.
- **Delete All Files:** to delete all the files subject to the list that the specified file locates.
- **Sort by:** to sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.

- 2> **New Folder:** Use the function to create a new folder at a specified place.
- 3> **Format:** Use the function to format all data in the memory card. The system will recreate a new default folder. The formatted data cannot be recovered, so please use this function carefully.

User profiles

Normal

1. Activate

2. Customize

- **Tone Setup:** Includes Incoming Call, Message Tone and so on. You can select built-in ring tones, or the tones composed by yourself.
- **Volume:** Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.
- **Alert Type:**
 - Ring: Just ringing, no vibration.
 - Vib. Only: Just Vibrating, no ringing.
 - Vib. and Ring: Vibrating and ringing.
 - Vib. then Ring: Ringing after vibration.
 - Silent: No ring or vibration
- **Popat Call Alert:** You can set Off or On.
- **Ring Type:**
 - Single: Rings once when a call is coming.
 - Repeat: Rings continuously when a call is coming.
 - Ascending: Rings continuously and the volume increases gradually.
- **Extra Tone:**
 - Warning: If necessary, you will be warned by the prompt tone.
 - Error: You will be warned by a tone if you make a mistake.
 - Camp On: A prompt tone will be heard after searching the network successfully.

- Connect: A prompt tone will be heard after getting through to the dialed number.

- **Answer Mode:**

You can select Cover Answer or Any Key.

Silent

Please refer to “Normal” for more details.

Note: Press and hold the # key to enable or cancel the silent mode. In the meeting mode you can't hear any sounds except the vibration indicates a call or a SMS/MMS is coming.

Outdoor

Please refer to “Normal” for more details.

Indoor

Please refer to “Normal” for more details.

Headset

Insert the earphone and access the Headset mode automatically. This mode has no Activate option. Please refer to “Normal” for more details.

Organizer

Calendar

You can view and edit the memo of a specified date with this function.

1. **View Tasks:** You can view or edit the daily arrangement of the day. Please refer to the "To Do List" for details
2. **Add Task:** You can select task types: Reminder, Meeting, Course, Date, Call and Anniversary.
3. **Jump to Date:** Skip to the specified date to view or edit the daily arrangements of the day.
4. **Go To Weekly/Monthly View:** Go to the specified date to check which week/Month it is.

To Do List

You can View, Add, Edit, Delete, Delete All and Send vCalendar as desired. Start up the **To do list** and press OK. Press **Options** to access to add a new memo.

Alarm

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select "Edit" to set the current alarm.

Stopwatch

The stopwatch has two modes - Split Timing and Lap Timing, and you can view the records of both the modes.

Units Converter

You can make the units conversion for weight and length. Enter the number into the column, and then press "OK" to get the result.

Currency Converter

You can make currency conversions. Press **OK** after enter the exchange rate, and then enter the number of the currency, and press **OK** to get the result.

World Clock

Scroll to browse every city's time zones in the world map. The related date and time will display at the bottom of the screen.

Health

Provides the reference of body mass index (height, weight and sex).

Services

STK Service

This service is offered as the SIM card service provided by the network operator.

WAP

WAP enable you tour around the Internet world easily and pleasantly. Please follow the steps described as below:

1. **Homepage:** The default Internet Web Address.
2. **Bookmarks:** Save the Web address you often use.
3. **Recent Pages:** Records after you browse the Website.
4. **Offline Pages:** You can view offline pages which you saved.
5. **Input Address:** Press the left soft key to access Enter Address, and then input the web address to go to the Internet.
6. **Service Inbox:** Messages sent to users from the Web site.
7. **Settings:** You can configure Edit Profile, Browser Options, Service Message Settings, Clear Cache, Clear Cookies and Trusted Certificates.

Data Account

Press the left soft key to perform following steps:

1. **GSM Data:** Edit the GSM account.
2. **GPRS:** Edit the GPRS account.

Fun Spice

The newly launched Fun corner from Spice Mobiles for its customers.

SpiceGang

It is a wap portal from where user can download Ringtones, Wallpapers, Animations, and other kind of content.

Step1: Check the GPRS settings for your operator.

Step2: Initiate SpiceGang wap portal to browse and download the content.

Step3: Charges for download apply as per operator pricing.

Explore the whole world of Entertainment with SpiceGang.

Reuters

Reuters India gives you the latest India, World and Business news and more. Also, get the latest stock market information along with tools like the currency converter and weather in your city on your mobile phone.

The services pre loaded on Spice Phones are Latest News, Weather Check, Currency Details and Free News Alerts

Please ensure that you have GPRS settings in your phone to open Reuters. Contact your operator for GPRS settings.

Ibibo

Now connect with the ibibo community on Spice Mobiles. Go and create your profile, search for people based on their age, sex & location, make new friends and send or receive blurbs. Invite your existing friends to join your new community.

The services pre loaded on Spice Phones are Make New Friends, Cool Stuff, Cricket Updates and Free SMS

Please check your GPRS settings before accessing Ibibo.

Voice Zone

Sangeet

Spice Mobiles presents Sangeet Portal – One Touch Access to the huge library of songs comprising of 17 languages and over 1 lakh tracks!

Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Bhakti Sangeet

Spice Mobiles present Bhakti Sangeet on IVR. Use this portal to listen to your favorite devotional songs at the click of a button, virtually, anytime and from anywhere.

Bhakti Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Suno Sunao

Spice Mobiles brings SUNO SUNAO to its customers. It gives the anonymity, thrill, excitement and above that a chance to speak and listen to the Chat friend!

SUNO SUNAO is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Popat

After select, you have the following options:

1. Popat PHB Reader: You can set On or Off. With this function you can listen any stored no. in the Phone Book.
2. Popat Call Alert: You can set On or Off. With this function you can listen the no. of incoming call.
3. Popat Keypad tone: You can On or Off. With this function you can activate the voice tone for keypad.

MGurujee

MGurujee is India's leading M-Learning portal delivering unique anytime anywhere mobile phone based learning experience with access to a wide variety of quality knowledge content from market leaders.

NOTE: Please check your GPRS settings before accessing MGurujee.

Email2SMS

Emergic Email2SMS is a product of Netcore Solutions Pvt. Ltd. provided by Spice Mobiles. Email2SMS allows you to receive email on your phone via SMS without GPRS. You can Read, Reply, Compose and Forward your emails via SMS. This service is only available for Gmail, Indiatimes and Corporate Account Holders. Spice Mobiles offers FREE subscription for one month.

1. Just send SPICE START <Location> to 575758 to register for Email2SMS service.

For composing new mail type NEW <Receiver's Email-Id> S: <Subject> B:<Message> and send it to 575758.

2. For replying to any mail type REPLY <Message-Id> <Message> and send it to 575758.

3. For replying to all in the mail type REPLY <Message-Id> <Message> and send it to 575758.

4. For forwarding the mail type FWD <Message-Id> <Receiver's Email-Id> <Message> and send it to 575758.

5. For reading the remaining part of mail type READ <Message-Id> and send it to 575758.

NOTE: Message-Id is the number which you get at the end of SMS. i.e., 01,02,03,04

For more details contact Customer Support: Phone: +91 22 6662 8130, Email: cs@m3m.in,

Chat ID: e2sms.support@gmail.com, e2sms.support@hotmail.com, e2sms.supp@yahoo.com.

Dazzle Ringtone or Ringtone Shuffle

Abb Har Bar Naya Gana Bajega! You like lot of songs and also like to set those all songs to be a ring tone of your mobile phone?? For this you have to change ring tone every time with new song.

Not anymore. S-5330 gives you the facility of Dazzle/ Shuffle Ringtones. Where you can set up to 10 songs in one time as your ring tone.

Now whenever a new call will come every time a new song will play as your ring tone.

Games

There are several interesting games in the phone. Please refer to instructions from the game menu for more details.

Tip: The game menu includes Start Game, Game Level, Best Grades and Game Help.

Others

AfterSpice

AfterSpice is a chain of Spice Service Stations to deliver complete customer satisfaction. Spice is offering SMS based service on 56300 in which you can know the address of your nearest service station by sending a SMS.

Premium SMS charges apply! Please check with your operator

Dear Customer, Congratulations for being a proud owner of a SPICE Mobile phone.

With a view to facilitate search and discovery of mobile content, SPICE Mobile has introduced an SMS short code which is 56300.

Just type SPHELP ("SP" here stands for SPICE) and send the SMS to 56300 to discover content menu available.

Alternatively, listed below are some of the exciting infotainment services which are readily available on 56300. So what are you waiting for! Just go ahead and Spice Up your mobi-life.

1. SPJOKE: Kick start your day in relaxed & light mood by receiving our jokes in your mobile through SPJOKE service. User type SPJOKE & send to 56300.

2. SPCRIC: Know minute by minute Cricket score of your favorite Teams through our Live SPCRIC service. User type SPCRIC & send to 56300.

3. SPNEWS: Be the first to know what is happening all around the world through our SPNEWS service. User type SPNEWS & send to 56300

4. SPOSHO: Get Osho Quotes & change your existing mind block & get guidance to achieve inner peace through our SPOSHO service. User type SPOSHO & send to 56300

5. **SPWORD:** Carry dictionary in your mobile & get word powered daily through our SPWORD service. User type SPWORD & send to 56300
6. **SPHORO:** Janiye apne grahon ki dasa through our SPHORO Service. User type SPHORO & send to 56300
7. **SPEXAM:** Get tips on how to attempt your test questions and score more through our SPEXAM service. User type SPEXAM & send to 56300
8. **SPGK:** Know interesting facts of this world & enhance your knowledge through our SPGK Service. User type SPGK & send to 56300
9. **SPPAGE3:** Who is dating Akshay these days know all the Bollywood happenings through our SPPAGE3 service. User type SPPAGE3& send to 56300

Mobile Tracker

Now be sure of your mobile phones with Mobile Tracker offered by Spice Mobiles. This feature allows users to track their phone if they are lost or stolen. Switch on Mobile Tracker application and whenever a new SIM is inserted in your phone you will receive a SMS on pre defined numbers.

TIP: This function requires your network support. When you set Tracker Mode OFF, and then you can set the tracker number you want.

Panic Button

Step1: Switch on Panic Button mode

Step2: Enter the message that you would like to go at the time of Panic or Emergency. The number of characters must be less than 140

Step3: Add the Mobile Number(s) which will receive the message (that you defined in Step2) at the press of Panic Button. The total numbers cannot exceed 5

Step4: Come out of the application.

Now whenever you feel uneasy or in case of any emergency long press of 5 key will send the panic message to the mobile numbers defined by you.

IMPORTANT INFORMATION

Use of Passwords

Your mobile phone and SIM card have various passwords. Those passwords avoid unauthorized use of your phone and SIM card. You can change PIN, PIN2 and phone password in the "Settings > Security Setup > Change Password".

Phone Code

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 1122. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

PIN (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on.

Three times wrong PIN input, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

PUK (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

PIN2 (4 to 8 digits)

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not.

Three times wrong PIN2 code input, the SIM card will be locked and you will need to use the PUK2 to unlock it.

1. Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.
2. If you are prompted to enter the new PIN2 again, enter it and press **OK**.

PUK2 (8 digits)

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

Barring Code

To activate call barring, you need a Barring Code. You obtain the password from your service provider.

Battery Information**Charging and Discharging**

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.
- Use only batteries approved by the phone manufacturer and recharge your battery only with the charges approved by the manufacturer.
- We strive to produce products in compliance with global environmental standards

- The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.
- When the battery level is low, "Low Battery" will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.
- Temperature extremes will affect the ability of your battery to charge.

Tips for Battery

- Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.
- Do not let the metal contacts on the battery touch another metal contact. It could short-circuit and damage the battery. Use the battery only for its intended purpose.
- Do not disassemble or modify the battery by yourself.
- Do not clean the battery with water or any organic solvent.
- Always keep the battery dry.
- The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.
- Do not short-circuit the battery.
- Turn off mobile phone before removing the battery.
- Do not dispose of batteries in fire.
- If you smell anything strange from the battery or find that the battery is overheated, you should stop using it immediately and contact the authorized After Service Center in your region.

- If you don't use the battery for a long time, please fully charge the battery before you store it.



Batteries should never be placed in municipal waste. Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

Usage & Maintenance

To keep your product working well, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.
- Always treat your products with care and keep it in a clean and dust-free place.
- Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.
- Do not expose your product to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your product.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it.
- Keep anything magnetic, such as credit cards, far away from your product.
- If you find that the battery has any crack, deformation or anything else, you should stop using the battery immediately.
- If the electrolyte leak out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the

electrolyte spatters into your eyes, you must use the clean water to wash your eyes thoroughly and go to the hospital immediately.

- If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel there will assist you, and if necessary, arrange for service.
- If the power system often works astatically, please use a regulated power supply when you are going to get charge.

Emergency Calls

This phone, like any wireless phones, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

To make an emergency call:

1> Switch your phone on.

Some networks may require that a valid SIM card is properly inserted in the phone

2> Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call, please remember to give all information as particularly as possible. Never hand off the call please until you are given permission to do so.

APPENDIX

Appendix A: Guidance On Entry Methods

This phone provides several input methods which can be used in editing the Phone Book, short messages, memos, greetings, alarms and other text applications.

The Icons of Input Methods

After entering different kinds of edit windows (including edit phonebook, short messages. etc.), the icons of input are as follows:

“**123**”: The Entry method of Numeric appears as: “123”

“**ABC**”: The entry method of Multitap ABC appears as: “ABC”

“**abc**”: The entry method of Multitap abc appears as: “abc”

“**eZi ABC**”: The entry method of eZiText®Smart ABC appears as: “eZi ABC”

“**eZi abc**”: The entry method of eZiText® Smart abc appears as: “eZi abc”

“**HI**”: The entry method of Multitap Hindi appears as: “HI”

“**BE**”: The entry method of Multitap Bengali appears as: “BE”

“**TE**”: The entry method of Multitap Telugu appears as: “TE”

How to Switch Between the Input Methods

Press the # key to switch the input methods.

e.g.: If the current input is Smart ABC the screen will show “eZi ABC”.

Press the # key, to go to Smart abc, and the screen will show “eZi abc”.

Numeric, Multitap ABC and Multitap abc Input Methods

Numeric

When the icon of the input method is “123”, press the number keys to enter the numbers directly.

Multitap ABC and Multitap abc

When the icon is “ABC” or “abc”, press the number keys (2 to 9) repeatedly until desired letters appear in the text area. Press the

number key once for the first letter. Press twice for the second letter. So, press number keys to reach the desired letter in the same way. Press 0 key to enter a blank space or "0".

Note: while using the Numeric entry, please switch to the method of Multitap ABC and Multitap abc first if a blank space is required, and then press 0 to enter a blank space.

How to Input Special Symbols

If you want to input special symbols, such as ". ! ? = < >", Etc., please following steps as below:

Press the * key to display the symbols. Press the Up/Down, or Left/Right Key to move the cursor in the symbol table, and select one symbol. Press the right soft key to cancel the symbols selection.

Appendix B: Troubleshooting

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

Problems	Solutions
Can not answer or make a call	Make sure that the phone has been switched on. Make sure that the battery is charged. Make sure that the signal intensity is high enough. Make sure the own number function in the call setting is system preset or number sending. Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function. Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.
Low voice	Check if the volume has been set too low.
No ring	Check whether you have set up the "Vibrating Only" option. Check whether the ring volume is not too low Move away from a noisy place to check if you can hear the phone ringing. Check whether you have set up call diverts.
LCD unclear	Check whether the contrast has been set too low.
T-Flash card detect slowly	Format your T-Flash card with your phone. Note: To protect your files from getting lost, please backup the important information into the safe place before you formatting card.

Appendix C: Available Accessories

Dual Stereo Personal Hands Free Handset

The Dual Stereo Personal Hands Free Handset allows you listen to music or to make conversations with hands free comfort.

Travel Charger

You can charge the phone with the Travel Charger when you are on the move.

Note: Please use approved accessories to get the most out of your phone.

Appendix D: FCC Statement

This device has been tested and found to comply with Part 15 of the FCC rules. Performance is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the manufacturer or authorized service center could void the user's authority to operate this equipment.

Appendix E: The Usage of Card-Reader

A memory card reader is a device used for communication with a smart card or a flash memory card.

1. Remove the cover of the card-reader by sliding it and put the logo "**spice**" face up.
2. Insert the T-Flash card, with the notch at the upper and the logo "**spice**" face up, into the card-reader slot.
3. Insert the card-reader into the **USB** interface of the computer or other equipments which can identify it.



Warning: Please make sure the logo “spice” face of the card-reader and the memory card at the same side, or you may spoil your card-reader.