

**SPICE MOBILE PHONE  
S570**

**LET THE WORLD ENJOY  
THE VOICE FROM SPICE**

© 2007. All rights are reserved. No part of this document may be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or by statements of any kind in this manual, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect your environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

## SAFETY PRECAUTIONS

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones where blasting is in progress. Follow any regulations and rules strictly.
	Do not use mobile phones at a refueling point. Don't use near fuel or chemicals
	Follow any regulations or rules in hospital and health care facilities. Switch phone off near medical equipment.
	All wireless devices may get interference that could affect performance.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use only in normal position. Do not expose your phone to extreme high temperatures above +60°C (+140°F) . Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

# Table Of Content

<b>GENERAL INFORMATION.....</b>	<b>1</b>
Antenna .....	1
Network Service.....	1
Accessories .....	1
Phone Lock Code .....	1
<b>KNOW YOUR MOBILE PHONE .....</b>	<b>2</b>
Positions of Phone Keys.....	2
Functions of Keys .....	2
Display Screen.....	4
Status Icons .....	4
Back Light.....	5
<b>GETTING STARTED.....</b>	<b>6</b>
First Call.....	6
Mounting The SIM Card.....	6
Charging The Battery.....	7
Switching Your Phone On/Off .....	8
Using The Personal Handsfree Handset .....	9
<b>CALLING .....</b>	<b>10</b>
Making Calls .....	10
Answering Calls .....	11
Options In Call .....	11
<b>GUIDE TO MENU OPERATIONS .....</b>	<b>14</b>
Phone Book .....	14
Messages .....	17
Call History .....	25
Settings.....	27
Media Center .....	34
Fun & Games.....	40
User Profiles .....	41

Organizer .....	42
Services .....	44
<b>IMPORTANT INFORMATION .....</b>	<b>46</b>
Use of Passwords .....	46
Battery Information .....	47
Usage & Maintenance .....	49
Emergency Calls .....	50
<b>APPENDIX .....</b>	<b>51</b>
Appendix A: Guidance On Entry Methods .....	51
Appendix B: Troubleshooting .....	52
Appendix C: Available Accessories .....	53
Appendix D: FCC Statement .....	54
Appendix E: Menu Index .....	54

## GENERAL INFORMATION

### ***Antenna***

Use of other antenna devices could damage your mobile phone and reduce performance. Your phone has a built-in antenna. Don't touch the antenna area unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### ***Network Service***

A lot of features described in this manual are called network service. They are special services provided by wireless service providers. You should subscribe to these services from your home service provider and learn instructions on uses before you select the network you want to use.

### ***Accessories***

Li-Ion battery is the manufacturer-approved rechargeable battery available for your phone. May be some batteries performs best after several full charge/discharge cycles.


Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular model. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

Please consult with your dealer for availability of approved accessories.

### ***Phone Lock Code***

The factory setting for the phone lock code is 1122. To avoid unauthorized use of your phone, you can change the code in the Settings > Security Setup > Change Password. Remember your new code and write down in a safe place.

# KNOW YOUR MOBILE PHONE

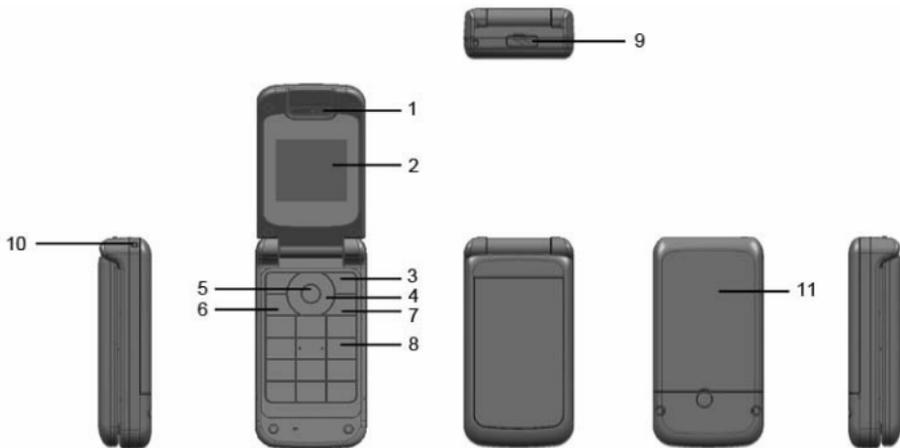

## ***Positions of Phone Keys***

- |                   |                                      |
|-------------------|--------------------------------------|
| 1. Earpiece       | 7. Hang up and Power key             |
| 2. Screen         | 8. Number keys                       |
| 3. Soft keys      | 9. Charger and accessories connector |
| 4. Direction keys | 10. Cord hole                        |
| 5. OK key         | 11. Battery Cover                    |
| 6. Pick up key    |                                      |

## ***Functions of Keys***

Key	Name	Description
	Pick Up Key	Making or answering a call. In the standby mode, press this key to access the Call Logs.
	Hang Up Key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return the standby mode and cancel current operations. Press this key to stop the alarm ringing once the alarm rings.
	Soft Keys	Use the left and right soft keys to execute to functions indicated at the left/right of the prompt bar on the screen.
	Selection Keys	Scrolling options in the function list or the phone book. In the edit mode, direction keys are used for moving the cursor. In the standby mode, press direction keys to activate a specified function. In the standby mode, press the OK key to access the main menu.
	Numeric Keys	Used to enter numbers, letters and some special characters. In the standby mode, press and hold the # key to activate Silent mode. In the edit mode, you can press the # key to switch the input method. In the Audio Player mode, press *, # key to adjust volume.

## ***Display Screen***

Your mobile phone has a single LCD display, which consists of three main areas:

The First line displays status icons, which indicate the signal strength, the remaining power of the battery, etc.

The Middle lines display text and graphics, including numbers, text, animated icons and the information you enter.

The Last line displays the currently available operations assigned to the left or right soft key.

## ***Status Icons***



Network Signal



Connecting GPRS and using GPRS



Connecting GPRS but no data alternating



Divert all Voice Calls



Auto Keypad Lock



Alarm Clock is activated



Battery Status



Missed Calls



New Message or Message Memory Full



MMS is busy



New MMS



Mute Startup during call



Roaming Startup



Stopwatch Startup



WAP Message

### Sound Status



Ringing



Vibrating



Vibrating then Ringing



Vibrating and Ringing

## ***Back Light***

You can set the Back Light for the display and keypad through options in the menu. The backlight will be off automatically without any key operation after a while.

# GETTING STARTED

## *First Call*

- Insert a SIM card (Switch off your phone at first, and then remove the battery). Enter the area code and the phone number and press Pick Up Key .
- **Tip:** Before you get started, you must insert a valid SIM card in your phone and charge the battery first.
- SIM Card: Please refer to “Mounting The SIM Card” for more reference on installation.
- Charging the battery: please refer to “Battery and Charging” for more details.

## *Mounting The SIM Card*

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

**Note:** This particular phone model only supports the SIM cards of 1.8V and 3V.

- Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.
- The SIM card and its contacts can be damaged by scratches or bending easily, so be careful while handling, inserting or removing the card.
- Keep all miniature SIM cards out of children's reach.

**Note:** Always make sure the phone is switched off before you insert or remove the SIM card, otherwise it may damage the SIM card.

## Mounting

1. Remove the battery cover by sliding it, as the following picture shows:



2. Inert the SIM card, with the notch at the upper left and the gold contacts face down, into the card slot.



3. Replace the battery and close the cover tightly.

### **Note:**

- If the SIM Card is installed improperly or damaged, the prompt words “Insert SIM” will display on the screen after you switch on your phone. Remove the SIM Card and check the way that performs as pictures show, and then mount it again.
- If “Insert SIM” still appears on the screen after you have inserted the SIM correctly, there may be something wrong with your SIM card. Please ask the network operator to repair it.
- If the screen displays that the SIM card is locked permanently, please consult with your network operator.

## ***Charging The Battery***

**Note:** Please always keep your phone connector and charger dry.

1. Connect the connector of the travel adapter to the phone.



2. Plug the travel adapter into a proper AC wall outlet.
3. When your phone indicates that the battery is fully charged, please pull the ravel adapter out from the I/O socket of the phone.



- Tip:**
1. If the battery is totally empty or not enough, it may take a few minutes before the charging indicator appears on the screen.
  2. You can turn on/off, and use the phone while charging.

**Warning:** Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

## ***Switching Your Phone On/Off***

- Press and hold Power Key for a few seconds to switch your phone on.
- **If the phone ask for a phone lock code:**  
Enter the phone lock code, and press OK.
- **If the phone ask for a PIN code:**  
Enter the PIN code, and press OK. The PIN code is usually supplied with the SIM card. Please consult your network operator for more information.
- **Access the standby mode.**  
Press and hold Power Key for a few seconds to switch your phone off.

## ***Using The Personal Handsfree Handset***

Connect the handsfree handset to your mobile phone, you can still answer calls and use the microphone without holding the phone.

# CALLING

## ***Making Calls***

1. Enter the phone number (with the area code)
2. Press  to make a call.
3. Press  to end a call.

## **Making International Calls**

1. Press  twice for the international prefix symbol +.
2. Enter the country code, area code and phone number.
3. Press  to make a call.

## **Making Extension Calls**

1. Enter the host number, and press  three or four times for the extension prefix symbol **P** or **W**.
2. Enter the extension number, and press  to make a call.

## **Clear Wrong Enters**

Press  to delete the last character on the screen. Hold  will clear all you entered.

## **Making a call from the Phone Book**

1. Press  twice to access the Phone Book.
2. Select “Search Entry” to find the number you wants, and press  to call the number.

## **Last Number Redial**

1. In the standby mode, press  to access the **Call Logs**.

2. Press the Up/Down key to reach the desired number or name and press .

## **Speed Dialing**

You can save 8 Speed Dial Numbers you often dial to positions titled with number keys from “2” to “9” respectively. Select “Settings > Phone Setup > Speed Dial > Set Number”, and then set “Enable Speed Dial” on. In the standby mode, press and hold one of the number keys from “2” to “9” until the call is started.

## **Adjusting the Sound Volume**

During a call, you can press the Side Key to adjust the earpiece volume.

## **Answering Calls**

1. To answer an incoming call, press  or .
2. To end or reject an incoming/ongoing call, press  or .

### **Tip:**

If the caller can be identified, the caller’s name and phone number will display. If the caller can’t be identified, the screen will only display the caller’s number. When you use the function list or Phone Book, you can also answer a call.

## **Options In Call**

Your phone provides a number of functions that you can use during a call.

### **Call Waiting**

If the network supports the service and you have activated the Call Waiting, you will hear a beep when you have a second incoming call.

- Press  or , the first call is put on hold. (Refer to “Hold/Switch” for more details)
- Press  or  to reject the second incoming call and continue the first call.

- Press  to select **End** to end the current call and switch to the incoming call.

## Hold/Switch

When you have a call on hold and another one in progress:

- You can press  to switch between the two calls.
- Press  to select End Call to end the current call or hold the call.  
Press  to end the current call.
- Press  to select End All to end both calls at the same time.

## Call Hold

If the network supports Call Holding, you can make another call while you have a call in progress:

### Method 1:

1. Enter the phone number directly or press  to access the Phone Book to reach the desired number, or press  to select New Call and enter the number, and then press  to make the second call.
2. The first call is put on hold automatically.

### Method 2:

1. Press  to select Mute to hold on the current call, and then make another call.
2. One call is in progress and another one is put on hold. You can switch between the two calls. (Refer to “Hold/Switch” for more details)

## Mute/Unmute

You can turn off/on the microphone and connect any other microphones. The “Mute” function can prevent others from hearing your voice.

During a call, you can press  to access Option > Mute/Unmute” to turn on/off the function.

### **Other Options In-call**

During a call, you can access Phone Book, SMS, Sound Recorder and other functions. (Please refer to Menu Guidance for details.)

# GUIDE TO MENU OPERATIONS

All function options about the mobile phone are listed as below with brief descriptions. Please refer to “Appendix E: Menu Index” if you want to browse these functions.

## ***Phone Book***

You can save many phone numbers in your mobile phone. The capacity of your SIM card decides how many phone numbers can be saved in. You can access the Phone Book to search all records saved in this mobile phone and your SIM card.

### **Quick Search**

You can fast locate the number of the person you want to contact. Please enter the initial letter of the person’s name, and related records about it will display in the middle of the screen. Please use the Up/Down key to select the number as desired, and then press  to make a call.

### **Search Entry**

You can find the desired phone number from the phone book easily and quickly. In the standby mode, press  to access **Menu > Phone Book > Search Entry**. Please follow steps described as below:

1. In the **Name** box, enter all letters of the name or the initial letters of the name.
2. Press  to access **Option > Search > Phone Book List**, and then all related information of the desired contact will be listed. Please use the Up/Down key to browse all entries, and then press  to make a call.
3. Press  to access **Entry Option**, and then you can perform following operations for each entry:
  - **Send SMS:** Send messages to the selected number.

- **Send MMS:** Send MMS message to the selected number.
- **View:** Check the record for the selected number.
- **Edit:** Edit the selected entry.
- **Delete:** Delete the entry from the Phone Book.
- **Copy:** All entries can be copied alternately from the SIM card to the phone or from the phone to the SIM card. i.e. SIM to Phone Copy or Phone to SIM Copy.
- **Move:** All entries can be moved alternately from the SIM card to the phone or from the phone to the SIM card.
- **Duplicate:** Entries saved in the SIM card can be copied to the SIM card, and entries saved in the phone can be copied to the phone. i.e. Local Copy.
- **Send vCard:** Send your phone number by SMS or MMS, or send to file.

**Tip:** Pressing one of the number keys from 2 to 9, the first one of the entries whose names is initialized by the letter corresponding to the key you pressed will be highlighted at once. For example, in order to search for the record of someone whose name is initialized with C, please press the key 2 quickly for 3 times, and then the cursor skip to the first entry of the contacts whose name are initialized with C.

## Add New Entry

You can add a new contact entry to the Phone Book, both for the SIM card and your phone. Steps described as below:

1. From the Phone Book menu, press  to select **Add New Entry > To SIM/To Phone**.
2. If the **To SIM** is selected, press the left key to select OK to start to edit the contact's name and phone number.
3. If the **To Phone** is selected, you can add the contact's name, phone number, home number, company number, email, and so on.

**Tip:** This mobile phone offers you 5 input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi ABC), Smart

abc (eZi abc), etc. Please refer to “Appendix A: Guidance of Entry Methods” for more details.

### **Copy All**

This function enables you copy all entries both from the SIM card and the phone.

**Note:** If the capacity of this phone book is different from the SIM card's, the copy content takes the smaller one as standard.

### **Move All**

This function enables you move all entries from the SIM card or the phone.

### **Delete**

You can select delete entries form the SIM card, the Phone or one by one.

### **Caller Group**

You can set group name, associated sound, associated picture, and members for different caller group.

### **Extra Number**

You can set Owner Number, Service Dial Number and SOS Number.

- Owner Number: You can enter a group of a number and a name and can also edit or erase it.
- Service Dial Number: Only for your SIM Card supports this function.
- SOS Number: You can enter five groups of SOS numbers.

**Note:** If the keypad is locked, you can dial SOS numbers that you edit.

### **Settings**

- Memory Status: display the occupied storage and the total storage.
- Preferred Storage: select the SIM or Phone as the preferred storage for the new number.
- Fields: select the desired option when you add a new number.
- My vCard: can edit and send my card.

## Caller Picture

- To New Entry: select the picture to the new entry.
- To Selected Entry: select the picture to the selected entry.
- To Caller Group: select the picture to the caller group.

## Caller Ring Tone

- To New Entry: select the ring tone to the new entry.
- To Selected Entry: select the ring tone to the selected entry.
- To Caller Group: select the ring tone to the caller group.

## Messages

### SMS

#### Inbox

The icon  means unread messages or the message box is full. You won't receive new messages once the message box is full. Please delete unnecessary messages.

1. If the message is an unread text message, press  to read. Select **Option**, and then you can do the following operations:
  - **Reply:** to reply the message.
  - **Delete:** to delete the message.
  - **Edit:** to edit the message.
  - **Forward:** to forward the message to the purpose.
  - **Copy to phone/SIM:** to copy the message to the phone/SIM card.
  - **Move to phone/SIM:** to move the message to the phone/SIM card.
  - **Chat:** to chat with the sender.
  - **Delete All:** to delete all messages in the inbox.
  - **Copy all:** to copy all messages both from the SIM card and the phone's memory.

- **Move all:** to move all messages both from the SIM card and the phone's memory.
- **Use Number:** to obtain the phone numbers from the message, and save it to the SIM Card or the phone.
- **Use URL:** to obtain the URL from the message.
- **Use Email Address:** to obtain the email address from the message.

## Outbox

In the **Outbox**, please select **Option**, and then you can send, edit or select other operations. Please refer to **Inbox** for more information.

## Write Message

Please consult your home network operator for the SMS service.

1. Please press  to switch input methods while editing a message. You can enter letters and numbers, and insert pictures, rings and so on. (Support EMS service)
2. Edit your message, and press  to insert special symbols.
3. Select **Option**, and then you can do the following operations:
  - **Done:** to complete the message.
  - **Message Templates:** to insert the predefined templates.
  - **Insert Object:** to insert picture, animation, melody, and ring.
  - **Insert Phonebook Number:** to insert the desired number from the phone book list.
  - **Insert Phonebook Name:** to insert the desired name from the phone book list.
  - **Insert Bookmark:** to insert the desired bookmark.
  - **Input Method:** to select the input method.

When you select **Done**, you can do the following operations:

- **Send Only:** to send messages.
- **Save:** to save the message to Drafts without sending it out.

- **Save and Send:** to save the message to Outbox and send it out.
- **Send To Many:** to send messages to many people at one time.
- **Send By Group:** to send messages to one group.

## Message Templates

Your mobile phone saves many messages in common use. You can edit or erase them.

## Message Settings

- **Profile Setting:** You can set Profile Name, SC Address, Valid Period and Message Type as desired. Please consult your network operator for the number.
- **Common Setting:** You can set Delivery Report and Reply Path. Delivery Report function enables you to receive the status report on whether short messages are sent out successfully or not. Please consult your network operator to obtain the function.
- **Memory Status:** Check the rate of the SIM card and the phone's capacity compared to the total capacity. The exact capacity depends on the message content, the phone and the SIM card.
- **Preferred Storage:** You can select the SIM card or Phone to save.

## MMS

### Write Message

Please consult your network operator to obtain the MMS service.

While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

- **To:** the phone number or E-mail address are both OK.
- **Cc:** send the MMS to others at the same time. Phone numbers or E-mail addresses are both OK
- **Bcc:** send the MMS to others secretly at the same time. Phone numbers or E-mail addresses are both OK.
- **Subject:** edit the Subject of the MMS.

- **Edit content:** enter the text or add image, audio, attachment etc.

## **Inbox**

The phone saves the received MMS into the inbox.

All received Messages display in the inbox, and the icon  means the MMS is unread. Use the Up / Down key to scroll the cursor to check the list, and the sender's name and number will display. If the MMS has been read, the icon will change to the read icon. Please press the left soft key to access **Option**, and follow steps described as below:

- **View:** to read this MMS.
- **Properties:** to check details for this MMS.
- **Reply:** to reply the sender.
- **Reply to all:** to reply all senders.
- **Forward:** to forward this MMS to others.
- **Delete:** to delete this MMS.
- **Delete All:** to delete all MMS in the inbox.
- **Use Number:** to obtain the phone numbers from the message, and save it to the SIM Card or the phone.

## **Outbox**

In the **Outbox**, please select **Option**, and then you can send, edit or select other operations. Please refer to **Inbox** for more information.

## **Drafts**

In the **Drafts**, please select **Option**, and then you can send, edit or select other operations. Please refer to **Inbox** for more information.

## **Message Templates**

Your mobile phone saves many MMS in common use. What you can do for those MMS are View, Properties, and Write Message.

## **Message Settings**

**Multimedia Message:** follow steps described as below:

- **Compose:** You can configure Creation Mode, Image Resizing, and Auto Signature.

- **Send:** You can configure Validity period, Delivery Report, Read Report, Priority, Slide Timing, and Delivery Time.
- **Retrieval:** You can configure Home Network, Roaming, Read Report, and Delivery Report.
- **Filter:** You can configure Anonymous and Advertisement.
- **Edit Profile:** You can select any one of Profiles to activate or edit.
- **Memory Status:** You can check the Usage, Used Space and Free Space.

## E-mail

This E-mail function can receive and send emails supported not only by WAP but also POP3, IMAP and any other ordinary E-mail servers. Please read the following related information carefully before you use the function:

**Email:** Please log on some Internet web to apply an email account. That email account is just the "Email" referred in your manual. It belongs to the email server computer system provided from the network operator. Emails you received and sent are transferred by that email server.

**Email Server:** is a computer that supplies the email service from the network operator. Please consult your network operator to obtain the server name. POP3 and IMAP are common use servers in our life:

1. **POP3:** is a client/server protocol in which e-mail is received and held for you by your Internet server. Once you connect the web and enable the email, your phone will automatically download the new email from POP3 email server to the phone's inbox, and then delete those emails from the server. If you want to save those emails, please select the "Leave a copy of messages on server" option in "Email Setting".
2. **IMAP:** (Internet Message Access Protocol) is a standard protocol for accessing e-mail from your local server. IMAP provides the user more capabilities for retaining e-mail on the server and for organizing it in folders on the server. IMAP can be thought of as a remote file server.

Note: Please consult your network operator to ensure which type your email is.

**User Name:** The name you enter when you applied the email account. When you log on the email, the server should verify your identity.

**Password:** The code you enter when you applied the email account. The email server will verify whether you are the only user for the email account or not according to the user name and password you input.

**Email Address:** This is the address used in Internet. According to the address, people send emails to your mailbox. The address is assigned by the system when you apply the email, so you can't modify the address.

### **Send and Receive**

You can read sent and received emails.

### **Write Email**

- **To:** edit the receiver E-mail address.
- **CC:** edit others E-mail address which used to send the E-mail to others at the same time.
- **BCC:** edit others E-mail address which used to send the E-mail to others secretly at the same time.
- **Subject:** edit the Subject of the E-mail.
- **Attachment:** attach 3 files saved in the phone. The default mail size is up to 30K.
- **Priority:** you can select Normal, Low or High.
- **Content:** enter the text and press “#” to switch input methods.

When you select **Done**, you can do the following operations:

- Send: to send the email.
- Send and Save: to save the email to Sent and send it out.
- Save to Drafts: to save the email to Drafts without sending it out
- Quit without Saving: to exit the Email Option without saving the email.

## Inbox

All received emails display in the inbox, and the icon  means the email is unread. Use the Down/Up key to scroll the cursor to check the list, and the subject and time will display. If the email has been read, the icon will change to the read icon. Please press  to access **Option**, and follow steps described as below:

- **Reply:** to reply the sender.
- **Reply to all:** to reply all senders.
- **Forward:** to forward this email to others.
- **Delete:** to delete this email.

## Unsent

The email is failed to send out and saved into the Unsent. Press  to access **Option**, you can do Send, Send and Save, Edit, Move to Drafts, Mark as Deleted or Delete.

## Sent

After the email is sent out successfully, you will be asked to save the email into the Sent or not. Please refer to the Unsent for more details.

## Drafts

Emails in Inbox, Sent or Unsent and the email unfinished can all be saved into the Drafts. Please select **Option**, and then you can do Edit, Mark as Deleted or Delete.

## Delete All Folders

Use the function to delete emails in Inbox, Sent, Unsent or Drafts respectively.

## Delete All Mark

Use the function to delete emails with the deleted mark in Inbox, Sent, Unsent or Drafts respectively.

## Email Profile

Please select one mode from them. After you edited the mode, please activate it to use the E-mail function.

- **Profile Setting:**
  - 1> Profile Name: user define
  - 2> Data Account: user define
  - 3> Protocol: POP3
  - 4> Check Interval: Off
  - 5> Download Size: 102400
- **Outgoing Server:**
  - 1> Outgoing Server Address: user define
  - 2> Outgoing Port: 25
  - 3> Display Name: user define
  - 4> E-Mail Address: user define
  - 5> Username: user define
  - 6> Password: user define
- **Incoming Server:**
  - 1> Incoming Server Address: user define
  - 2> Incoming port: 110
  - 3> Username: user define
  - 4> Password: user define
  - 5> Download Option: Download All
  - 6> Copy on Server: Off
- **Signature:** You can set Auto Signature, Signature Image and Signature Text.

Tip: the word "user define" may indicate what you enter or select should consider the local network condition, please consult your network operator and the local dealer for more information.

## Chat

Use this function to chat with the sender by sending messages.

- **Chat Room Information:** select one chat room to set My Nickname and Remote Number.
- **Start New:** enter words and start to chat with the preset number.

## Voice Mail Server

Scroll the Up/Down key to select **Voice Mail Server** in the **Messages** menu, and select **OK** to access **Voice Mail Server**.

- **Edit:** Input or modify the number of voice mailbox.
- **Connect to Voice:** You can hear messages in the voice mailbox.

**Note:** This service is supplied by the network, such as the message machine service. It enables the caller to leave messages when you can't or unwilling answer the coming call. Your number for the voice mailbox is saved in this phone. In standby mode, hold the number key 1 to dial the number of the voice mailbox after the number is configured. Please consult your network operator for more details.

## Broadcast Message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Until now, there are several networks afford the service in this world. Please consult your network operator for more reference.

- **Receive Mode:** Turn on or off the Cell Broadcast.
- **Read Message:** Scroll the Up/Down Key to select the message.
- **Languages:** Select the desired language to display the broadcast message.

**Note:** Your network operator decides whether the language is supported or not.

- **Channel Setting:** You can choose Select, Add, Edit or Delete to receive the Broadcast information.

## Call History

In the standby mode, press  to access **Menu > Call History**.

## Missed Calls

With this function, you can check recent missed calls.

1. Scroll the Up/Down key to select a missed call.

2. Press  to access **Missed Call Information**, and you can do:
- **Delete:** Delete the number from the missed calls list.
  - **Save to Phone book:** Save the selected numbers to the SIM card or the phone.
  - **Dial:** Dial the selected phone number.
  - **Edit:** Edit the selected number and save it to the SIM card or the phone.
  - **Send SMS:** Send a SMS to the selected number.
  - **Send MMS:** Send a MMS to the selected number.

## Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Dial, Edit, Send SMS, or Send MMS. Please refer to **Missed Calls** for more details.

## Received Calls

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Dial, Edit, Send SMS, or Send MMS. Please refer to **Missed Calls** for more details.

## Delete Call Log

You can remove all records of missed, dialed or received calls with this function.

## Call Time

- Last Call time: The last call time can be checked.
- Total Sent: The total time for all dialed calls can be checked.
- Total Received: The total time for all received calls can be checked.
- Reset All Time: Reset the counters.

## Call Cost

- Last Call Cost: You can check the last call's fee.
- Total Cost: You can check the whole call's fee.

- **Reset Cost:** You can modify the call's fee, and reset the cost to 0. PIN2 code is required while modifying.
- **Max Cost:** You can check and modify the upper limit. PIN2 code is required while modifying.
- **Price Per Unit:** You can check and modify the call's rate. PIN2 code is required while modifying.

**Note:** This function is related with the SIM card. Some SIM cards don't support the function. PIN2 is provided from the network operator. Please consult your network operator to obtain the number.

## **SMS Counter**

- **Sent:** You can check and clear the number of sent messages.
- **Received:** You can check and clear the number of received messages.

**Note:** This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

## **GPRS Counter**

You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

## **Auto Quick End**

You can set it On or Off and the auto quick end time 1~9999 seconds.

## **Settings**

In the standby mode, press  to access **Menu > Settings**.

## **Phone Setup**

### **Time and Date:**

- **Set Home City:** Select the desired home city.
- **Set Time/Date:** Enter the current time and date.
- **Set Format:** Select a time and a date format.

**Schedule Power On/Off:** You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

**Note:** Please disable the Schedule Power On function before you board an airplane.

**Language:** Select the desired language for the display text.

**Preferred Input Methods:** Select the desired input method for the default input method.

**Display Characteristic:**

- **Wallpaper:** You can select the default pictures that are available in the phone or also download pictures from the web by yourself.
- **Screen Saver:** First set Setting Status to be on, and then set the waiting time. At last, select a picture for the Screen Saver. You can download pictures for the Screen Saver or use the pictures provided in the phone.
- **Power On Display:** Besides the pictures provide in the phone, you can also download pictures for the Power On Display.
- **Power Off Display:** Besides the pictures provide in the phone, you can also download pictures for the Power Off display.
- **MainMenu Style:** You can select a display style for the main menu screen.
- **Themes:** You can select the background color as desired. For each of color, you can do Activate, Update Period, and Set Order.
- **Show Date and Time:** Time and date will display on the standby frame when set it ON.
- **Show Owner Number:** The Owner Number will display on the standby screen when set it ON (It can't apply to the Analog Clock Wallpaper).

**Note:** The phone number will be displayed only if you have edited the name or call of the phone number, and line 1 and line 2 are corresponding to the two sets of phone numbers respectively.

**Contrast:** Use the left/right direction key to adjust the LCD contrast.

**Greeting Text:** If you set the status ON, greetings will display when power ON.

**Speed Dial:** Set the status on, and then you can set 9 groups for the speed dial. (Corresponding number keys are 2 to 9). In the standby mode, press and hold the number key to dial the corresponding number.

**Shortcuts:** You can set shortcuts for those functions you often use.

**Dedicated Key:** You can configure short cut functions for the Up, Down, Left and Right key respectively. In the standby mode, press any one of them to access the appointed function.

**Auto update of date and time:** It can be set to ON or OFF.

**Flight Mode:** You can set the normal mode, flight mode and Query When Power On.

**LCD Backlight:** You can set different brightness according to various lighting conditions and how long the backlight can last.

**Keypad light set:** You can set the scope of the keypad light time.

**Note:** Whether Auto Time Update is supported or not depends on the network operator.

## Call Setup

- **Caller ID:** You can select Set By Network, Hide ID or Send ID. The default status is the Set by Network.

**Note:** This function is related with your network. Select Hide ID may cause failure to dial. Please test the calling function is ok before you enable Hide ID.

- **Call Waiting:**

1> **Activate:** The mobile phone will connect to the network when Call Wait is enabled. After a while, the network will take a response by sending messages to ensure your operation. If Call Wait is enabled, the network will warn you. At the same time, another coming call number will display on the screen when the first call is ongoing and a new call is coming.

2> **Deactivate:** If you cancel Call Waiting, the network won't warn you when the first call is ongoing and a new call is coming.

- 3> **Query Status:** With this function, you can inquire about the current status from the network.
- **Call Divert:** This function allows your phone divert coming calls to another phone. In Settings, select **Call Setup > Call Divert:**
  - 1> **Divert All Voice Calls:** When this function is enabled, all coming calls will be diverted to another phone. Set it On or Off, the phone will connect to the network. After a while, the network will take a response and tell you the result on operation.
  - 2> **Divert If Unreachable:** When this function is enabled, the coming call will be diverted to another phone number if the phone is unreachable.
  - 3> **Divert If No Answer:** When this function is enabled, the coming call will be diverted to another phone number if there is no answer in some time.
  - 4> **Divert If Busy:** When this function is enabled, the coming call will be diverted to another phone number if the phone number you dialed is busing.
  - 5> **Divert All Data Calls:** You can divert all data calls with the need of your network operator's support.

**Note:** Five operations described as above:

- Activate: Activate it after input the diverting number.
- Deactivate: Cancel the function.
- Query Status: Used to inquire about the current status for some diverting function from the network. The phone will connect to the network. After a while, the network will take a response and tell you the result.

6> **Cancel All Divert:** Use to cancel all diverting functions.

- **Call Barring:**

This function makes use of Call Barring to limit some selected calls. When you configure this function, you should consult your network operator for the password. If the password is wrong, the phone will prompt the fault message. After the desired number is selected, please continue to select

On or Off. After a while, the network will take a response and tell you the result.

1> **Outgoing Calls:**

- **All Calls:** When this option is enabled, you can't make any calls.
- **International Calls:** When this option is enabled, you can't make any international calls.
- **International Except Home:** When this option is enabled, you can only make local calls when you are abroad or dial to the country in which the network provider is.

2> **Incoming Calls:**

- **All Calls:** When this option is enabled, you can't make any calls.
- **When Roaming:** When this option is enabled, you can't receive any incoming calls if you are out of reach of the network service.

**Note:** Five operations described as above:

- **Activate:** Activate it after input the barring number.
- **Deactivate:** Cancel the barring function.
- **Query Status:** Use to inquire about the current status for some barring function from the network. The phone will connect to the network. After a while, the network will take a response and tell you the result.

3> **Cancel All:** Cancel the call barring. It also needs the bar password provided by the network operator.

4> **Change Barring PW:** Use to modify the bar password. It needs to input the original password before you modify.

- **Line Switching:** Switch to Line 1 or Line 2, the default is Line 1.

**Note:** If Line 2 is selected, making calls from Line 2 depends on the network operator.

- **Call Time Reminder:**

In order to save the call cost, this function prompts you to end the call in time. You can select Off, Single, or Periodic. There is no prompt when Off

is selected. You should enter a specific time between 1 and 3000 seconds when Single is selected. The phone will ring once when the time is up. You should enter a specific time between 30 and 60 seconds when Periodic is selected. The phone will ring once automatically at the specific time before the integral minute is up.

- **Call Time Display:**

You can set Call Time Display On or Off. The call time will display when set it on, .The call time won't display when set it off.

- **Auto Redial:**

You can set the Auto Redial function On or Off. When set it ON, the phone will automatically redial the last called number after a while if you fail to connect to the number. The times for auto redial are up to 10 times. You can't make any other calls when the Auto Redial is ongoing. Press Cancel to end Auto Redial.

- **Closed User Group:**

Press the left soft key to access Group List, and then select Add to input the group's name. Press the left soft key to select Done, and then add the number. Press the left key to finish. Select Option to Edit, Add, Activate, Deactivate or Delete the existent group.

**Note:** This service needs the network support.

- **Black List:** In the Blacklist, you can set five numbers (at best 20 digits for each number). When this Blacklist is enabled, you won't receive the calls from the numbers entered in the Blacklist.

## **Network Setup**

Please contact the network operator for the following network service.

### **1. Network Selection**

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

### **2. Preferred Networks**

Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Option** to perform the following operations:

- **Add From List:** Display all PLMN list.
- **Create New:** Create a new network and set the network priority.
- **Change Priority:** Reset the selected Network Priority.
- **Delete:** Delete the current preferred network.

### 3. **GPRS Connection**

You can set it when needed or Always to GPRS connection.

## **Security Setup**

### ▪ **SIM Lock:**

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. Three times wrong PIN input, it's asked to input PUK. PUK is used to release and modify the locked PIN. If PUK isn't provided or missed, please consult your network operator.

### ▪ **Phone Lock:**

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password.

### ▪ **Fixed Dial:**

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

**Note:** If you enter PIN2 after the phone is switched on, PIN2 is not required before the phone is switched off. Therefore, please switch the phone off and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

### ▪ **Barred Dial:**

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

### ▪ **Change Password:**

You can change PIN, PIN2, and phone lock password.

1> PIN

- The original PIN is required before change the PIN.
- Enter the new PIN. 4-8 numbers can be used for PIN.
- Enter New PIN to ensure the New PIN.

2> PIN2

- The original PIN2 is required before change PIN2.
- Enter the new PIN2. 8 figures can be used for PIN2.
- Enter the New PIN2 again to ensure the new PIN2.

3> Phone Lock Password

- The current phone password is required before change the phone password.
- Enter the new phone password.
- Enter the new phone password again to ensure the new phone password.

## Restore Factory Settings

Access **Settings** to select **Restore Factory Settings**, and press OK. All settings can be restored to factory settings with this function.

## Sound Effect

Set the sound effect to customize your phone. Select Equalizer, and then select a sound effect.

## Media Center

### Tune Player

The Play, Stop, Back, Forward functions correspond to the Up, Down, Left and Right Key respectively. The available music formats include: MP3, WAV, AMR, MIDI, and IMY. Select **List** to access the **Play List**, and then select **Option** to perform the following functions:

**Note:** The current system does not support some MP3s with a non-standard format.

1. **Play:** You can play the specified music;

2. **Detail:** Filename, Channel, Quality, Size, Time and so on;
3. **Add to Rings:** You can use the ring tone for incoming calls.
4. **Refresh List:** You can refresh the music file list of phone.
5. **Settings:**
  - **List Auto Gen:** You can select On or Off. When you select Off, press "Option" in Play List, and the system will show the options of Add, Remove and Remove All besides the above functions (but the Refresh List function will not be provided).
  - **Skin:** Select a skin type.
  - **Repeat:** You can select Off, One or All
  - **Shuffle:** You can select On/Off.
  - **Background Play:** When set it ON, the music will continue to play even if you exit the Playing Screen (music will stop when a call is coming) Press  or  to adjust the volume. When set it OFF, the music will stop playing when you exit the Playing Screen.
  - **Equalizer:** Select equalizer.

**Note:** To enjoy non-stop music, please download music to the "Music" folder of phone's internal memory or the memory card recognized as a USB disk on your PC. The Audio Player of the phone will automatically play music files from the "Music" folder. You may need to refresh it manually from the settings in case you have earlier opted for manual refresh settings.

**Warning:** Make sure that the volume is appropriate for your hearing while using the audio player.

## Sound Recorder

The mobile phone supports two recording formats: WAV and AMR. You can record conversations, which may be saved to the **Audio** folder under **File**

**Manager**. If there is a record, press  you can do: Record, Play, Append (only for AMR), Rename, Delete, Delete All, Forward and Settings.

**Note:** If a call is incoming while recording, the record will abort and the data will be saved into the record folder automatically. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

## FM Radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector. Select **FM Radio** in the **Multimedia** to access the radio controls.

1. Press the Up key to change the icon  or  alternately.
2. When the screen display the icon , you can press the Left/Right key to search and set the previous or next active FM station.
3. When screen display the icon , you can press Left/Right key to step down/up to the next frequency setting.
4. Press the Down key to turn on or off the radio.
5. Press  and  to adjust radio volume.
6. Press **Option** to access the following options:
  - **Channel List:** you can save 9 FM channels. Save a channel: select edit to enter the channel name and frequency, press done to save. Delete a channel: select edit, press right soft key to clear name and frequency, then press "done".
  - **Manual Input:** you can set the channel and receive the channel directly.
  - **Preset Auto Search:** the phone can search the useful channel automatically and reset the channel list.
  - **Settings:** Includes the "Skin", "Background Play Mode" and "Loud Speaker" setting. If you set the "Background Play Mode" on, you can listen to the FM broadcast when you use other function of the phone. If you set the "Loud Speaker" on, it will become an amplifier. You can listen to the FM broadcast without fitting the earphone over your ears.

- **Record:** select this function to start recording the radio.
- **Append:** append the radio you are listening to into the selected audio file.
- **File list:** displays sound and radio record files.

## Schedule FM Record

This function is used to set when and how to enable the radio function and save the radio record to your phone or card. Select one schedule to edit:

7. Select On or Off.
8. Set the date and time.
9. Set the Repeat type: Once, Everyday or Days.
10. Set the frequency you want to listen in.
11. Record Setting:
  - Select AMR or WAV.
  - Select Phone or Card to save the radio record.
  - Select the record file: New file or Append file.

## Melody Compose

The mobile phone enables you to compose your favorite music as the tune of the incoming call, alarm or memo.

**Note:** The phone can save multiple tones edited by you according to the volume of tones.

When the Tune Editing List is blank, you can edit your favorite tunes by pressing "Add". After you have finished editing, press **Option** to select a music instrument or playing speed to play the editing tunes. You also can save the editing tunes.

Select the edited music, and press **Option** to perform the following operations:

- **Play:** You can play the specified self-edit tunes.
- **Edit:** You can edit the specified self-edit tunes.
- **Add:** You can add new self-edit tunes.

**Note:** A maximum of 150 notes can be edited with a piece of self-edit tune.

- **Rename:** You can modify the name of the selected self-edit tune.
- **Delete:** You can delete the selected self-edit tune.
- **Delete All Files:** You can delete all self-edit tunes.
- **Forward:** You can send the self-edit tones to User Profile, MMS, E-Mail or EMS.

In the window of Tone Editing, press **Option** to perform the following operations:

- **Play:** You can preview the edited tone.
- **Play Speed:** You can set the playing speed of the current editing tone.
- **Select Instrument:** You can select the music instrument playing the tone.
- **Save:** You can save the tone.

The rules by which the tone is composed as follows:

0: Insert one pause;

1: Insert Do;

2: Insert Re;

3: Insert Mi;

4: Insert Fa;

5: Insert So;

6: Insert La;

7: Insert Si;

8: Insert a vibration note;

9: Insert a backlight;

\*: Modify the playing rhythm of the current tone;

#: Modify the current note with halftone;

↑: Modify the tone of current note (high, middle, low);

↓: Modify the tone of current note (high, middle, low)

## File Manager

You can use the function to manage all types of files saved in the phone or memory card. Please access **Menu > Multimedia > File Manager**, and then select **Option**.

### Phone

There are all of files saved in your phone. You can do Open, Create Folder, or Format.

#### 1> **Open**

Use the function to access the root directory of USB disk. It will list the default folders in system, the folder created by user and user files. (There are only system default folders at the first time of power on or on condition that the user never changes the root directory).

- If the specified one is 'folder', press **Option** to perform the following operations:
  - **Open:** You can open the specified folder.
  - **Create Folder:** You can create a new folder in the specified folder.
  - **Rename:** You can rename the specified folder.
  - **Delete:** You can delete the specified folder.
  - **Sort:** You can sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
- Press **Option** if the specified item is a file. For different kinds, you can perform the following operations:
  - **View (Play):** to browse or play the music/photo file.
  - **Edit:** to edit the music/photo file
  - **Forward:** to send the audio file to User Profile or send the picture file to the wallpaper, screen saver or Phone Book and so on.
  - **Detail:** to list the date and size of the appointed file.
  - **Rename:** to rename the appointed file.

- **Copy:** to copy any types of authorized files on your phone as the phone's memory is recognized as a USB Drive by your PC/Laptop. Press "Back" to cancel the Copy function. If the space is not enough to finish the operation of Copy, the phone will prompt you.
  - **Move:** to move the specified file to a specified place.
  - **Delete:** to delete the specified file.
  - **Delete All Files:** to delete all the files subject to the list that the specified file locates.
  - **Sort:** to sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
- 2> **Create Folder:** Use the function to create a new folder at a specified place.
- 3> **Format:** Use the function to format all data in the USB disk. The system will recreate a new folder. The formatted data cannot be recovered, so please use this function carefully.

## **DRM Rights**

DRM (Digital Rights Management) is a system to protect media files authority. The folder "DRM Rights" in File Manager is used to save DRM jurisdiction files. One DRM jurisdiction file is usually corresponding to a DRM media file. Generally speaking, when you download a DRM media file from the network and the DRM media file has a corresponding DRM jurisdiction file, please save it in the folder "DRM Rights" and confirm that you are the user.

## ***Fun & Games***

### **Games**

Select **Games** from the **Fun & Games**.

There are several interesting games in the phone. Please refer to instructions from the game menu for more details.

**Tip:** The game menu includes Start Game, Game Level, Best Grades and Game Help.

### **Game Setting**

This function includes the settings of BGM, Sound Effect and Game Vibration.

**Tip:** BGM (back ground music) is only available for Jet game.

## ***User Profiles***

### **Normal**

#### **1. Activate**

#### **2. Customize**

- **Tone Setup:** Includes Incoming Call, Power On, Power Off, Cover Open, Cover Close, Message Tone, and Keypad Tone. You can select built-in ring tunes, or the tunes composed by yourself.
- **Volume:** Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.
- **Alert Type:**
  - Ring: Just ringing, no vibration.
  - Vibration Only: Just Vibrating, no ringing.
  - Vibra and Ring: Vibrating and ringing.
  - Vibra Then Ring: Ringing after vibration.
- **Ring Type:**
  - Single: Rings once when a call is coming.
  - Repeat: Rings continuously when a call is coming.
  - Ascending: Rings continuously and the volume increases gradually.

**Tip:** Human singing tone cannot be played in Ascending Ring.
- **Extra Tone:**
  - Warning: If necessary, you will be warned by the prompt tone.
  - Error: You will be warned by a tone if you make a mistake.

- Camp On: A prompt tone will be heard after searching the network successfully.
- Connect: A prompt tone will be heard after getting through to the dialed number.
- **Answer Mode:**
  - Any Key: Press any key to answer a call (Except of Hang Up Key and Right Soft Key)

## **Silent**

Please refer to “General” for more details.

## **Outdoor**

Please refer to “General” for more details.

## **Indoor**

Please refer to “General” for more details.

## **Headset**

Insert the earphone and access the Headset mode automatically. This mode has no Activate option. Please refer to “General” for more details.

**Note:** Press and hold the  key to enable or cancel the silent mode. In the Silent mode you can't hear any sounds except the vibration indicates a call or a SMS is coming.

## **Organizer**

### **Calendar**

You can view and edit the memo of a specified date with this function.

1. **View Tasks:** You can view or edit the daily arrangement of the day. Please refer to the “Memo” for details
2. **Add Task:** You can select task types: Reminder, Meeting, Course, Date, Call and Anniversary.
3. **Jump to Date:** Skip to the specified date to view or edit the daily arrangements of the day.

4. **Go To Weekly View:** Go to the specified date to check which week it is.

## To Do List

You can View, Add, Edit Task, Delete Task, Delete All and Send vCalendar as desired. Start up the **Memo** and press OK. Press **Option** to access to the next step to add a new memo.

1. Set the date of activating the To Do List.
2. Set the time of activating the To Do List.
3. Input the note text of the To Do List.
4. Start up the alarm and set the way of ringing.
5. Input the location address and set the Priority.
6. When you have finished, press "Done".

## Alarm

The mobile phone provides several alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select "Edit" to set the alarm:

1. Select On.
2. Set the time of activating alarm.
3. Select the ringing option as you need: Once, Everyday, Days.
4. Select the Audio Options: Tone or FM Radio.
5. Select the snooze time: Default, 1~10 Mins.
6. Select the Alert Type: Ring, Vibration Only and Vibra and Ring.
7. Press "Done".

## Calculator

The calculator can add, subtract, multiply and divide. To use the calculator:

1. Press  to enter the decimal point
2. Press the up, down, left and right key and OK key to select +, -, ×, ÷, = respectively.
3. Press **Clear** to delete the figure.

## **Units Converter**

You can make the units conversion for weight and length. Enter the number into the column, and then press “OK” to get the result.

## **Currency Converter**

You can make currency conversions. Press **OK** after enter the exchange rate, and then enter the number of the currency, and press **OK** to get the result.

## **World Clock**

Scroll to browse every city’s time zones in the world map. The related date and time will display at the bottom of the screen.

## **Health**

This function provides the reference of body mass index.

## **Stopwatch**

The stopwatch has two modes - Split Timing and Lap Timing, and you can view the records of both the modes.

## **Services**

### **STK Service**

This service is offered as the SIM card service provided by the network operator.

### **WAP**

WAP enable you tour around the Internet world easily and pleasantly. Please follow the steps described as below:

1. **HomePage:** The default Internet Web Address.
2. **BookMarks:** Save the Web address you often use.
  - Goto: Press the left soft key to connect the Internet.
  - Edit: Modify the title and address.
  - Send: Send the bookmark via SMS, MMS and Email.
  - Delete: Delete this bookmark.

- Delete all: Delete all bookmarks.
  - Add BookMark: Add a new bookmark.
3. **Recent Pages:** Records after you browse the Website.
  4. **Enter Address:** Press the left soft key to access Enter Address, and then input the web address to go to the Internet.
  5. **Service Inbox:** Messages sent to users from the Web site.
  6. **Settings:** You can configure Edit Profile, Browser Options, Service Message Settings, Clear Cache, and Clear Cookies options.

## **Data Account**

Press the left soft key to perform following steps:

1. **GSM Data:** Edit the GSM account.
2. **GPRS:** Edit the GPRS account.

# IMPORTANT INFORMATION

## *Use of Passwords*

Your mobile phone and SIM card have various passwords. Those passwords avoid unauthorized use of your phone and SIM card. You can change PIN, PIN2 and phone password in the “Settings > Security Settings > Change Password”.

## **Phone Code**

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 1122. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

## **PIN (4 to 8 digits)**

The PIN (Personal Identification Number) code protects your SIM card unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on.

Three times wrong PIN input, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

## **PUK (8 digits)**

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

## **PIN2 (4 to 8 digits)**

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not. Three times wrong PIN2 code input, the SIM card will be locked and you will need to use the PUK2 to unlock it.

1. Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.
2. If you are prompted to enter the new PIN2 again, enter it and press **OK**.

## **PUK2 (8 digits)**

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

## **Barring Code**

To activate call barring, you need a Barring Code. You obtain the password from your service provider.

## ***Battery Information***

### **Charging and Discharging**

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.
- Use only batteries approved by the phone manufacturer and recharge your battery only with the charges approved by the manufacturer.
- We strive to produce products in compliance with global environmental standards

- The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.
- When the battery level is low, “Low Battery” will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.
- Temperature extremes will affect the ability of your battery to charge.
- Technical specifications:

Adapter	Input: AC 100-240 V / 50-60 Hz / 0.15 A Output: DC 5 V / 500 mA Caution: the network voltage is classified as a hazard by the criteria of this standard.
---------	--

## Tips for Battery

- Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.
- Do not let the metal contacts on the battery touch another metal contacts. It could short-circuit and damage the battery. Use the battery only for its intended purpose.
- Do not disassemble or modify the battery by yourself.
- Do not clean the battery with water or any organic solvent.
- Always keep the battery dry.
- The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.
- Do not short-circuit the battery.

- Turn off mobile phone before removing the battery.
- Do not dispose of batteries in fire.
- If you smell anything strange from the battery or find that the battery is overheated, you should stop using it immediately and contact the authorized After Service Center in your region.
- If you don't use the battery for a long time, please fully charge the battery before you store it.



Batteries should never be placed in municipal waste. Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

## ***Usage & Maintenance***

To keep your product working well, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.
- Always treat your products with care and keep it in a clean and dust-free place.
- Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.
- Do not expose your product to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your product. Only authorized personnel should perform service.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it.

- Keep anything magnetic, such as credit cards, far away from your product.
- If you find that the battery has any crack, deformation or anything else, you should stop using the battery immediately.
- If the electrolyte leak out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the electrolyte spatters into your eyes, you must use the clean water to wash your eyes thoroughly and go to the hospital immediately.
- If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel there will assist you, and if necessary, arrange for service.

## ***Emergency Calls***

This phone, like any wireless phones, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

To make an emergency call:

- 1> Switch your phone on.  
Some networks may require that a valid SIM card is properly inserted in the phone
- 2> Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call, please remember to give all information as particularly as possible. Never hand off the call please until you are given permission to do so.

# APPENDIX

## **Appendix A: Guidance On Entry Methods**

This phone provides input methods of Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi ABC), Smart abc (eZi abc), etc. which can be used in editing the Phone Book, short messages, memos, greetings, alarms and other text applications.

### **The Icons of Input Methods**

After entering different kinds of edit windows (including edit phonebook, short messages. etc.), the icons of input are as follows:

“**123**”: The Entry method of Numeric appears as: “123”

“**ABC**”: The entry method of Multitap ABC appears as: “ABC”

“**abc**”: The entry method of Multitap abc appears as: “abc”

“**eZi ABC**”: The entry method of eZiText®Smart ABC appears as: “eZi ABC”

“**eZi abc**”: The entry method of eZiText® Smart abc appears as: “eZi abc”

### **How to Switch Between the Input Methods**

Press  key to switch the input methods.

e.g.: If the current input is Smart ABC the screen will show “eZi ABC”.

Press  key, to go to Smart abc, and the screen will show “eZi abc”.

### **Numeric, Multitap ABC and Multitap abc Input Methods**

#### **Numeric**

When the icon of the input method is “123”, press the number keys to enter the numbers directly.

Multitap ABC and Multitap abc

When the icon is “ABC” or “abc”, press the number keys (2 to 9) repeatedly until desired letters appear in the text area. Press the number key once for

the first letter. Press twice for the second letter. So, press number keys to reach the desired letter in the same way.

Press 0 to enter a blank space or "0".

**Note:** while using the Numeric entry, please switch to the method of Multitap ABC and Multitap abc first if a blank space is required, and then press 0 to enter a blank space.

## How to Input Special Symbols

If you want to input special symbols, such as ". ! ? = < >", Etc., please following steps as below:

Press  to access **Menu** for the **Insert Symbols** in the **Entry method** or press  to display the symbols. Press the Up/Down, or Left/Right Key to move the cursor in the symbol table, and select one symbol. Press  to cancel the symbols selection.

## ***Appendix B: Troubleshooting***

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

<b>Problems</b>	<b>Solutions</b>
Can not answer or make a call	<p>Make sure that the phone has been switched on.</p> <p>Make sure that the battery is charged.</p> <p>Make sure that the signal intensity is high enough.</p> <p>Make sure the own number function in the call setting is system preset or number sending.</p> <p>Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function.</p> <p>Check whether you have set up call diverts.</p> <p>Check whether you have inserted the proper SIM card correctly.</p>
Low voice	Check if the volume has been set too low.
No ring	<p>Check whether you have set up the "Vibrating Only" option.</p> <p>Check whether the ring volume is not too low</p> <p>Move away from a noisy place to check if you can hear the phone ringing.</p> <p>Check whether you have set up call diverts.</p>
LCD unclear	Check whether the contrast has been set too low.

## ***Appendix C: Available Accessories***

### **Dual Stereo Personal Hands Free Handset**

The Dual Stereo Personal Hands Free Handset allows you listen to music or to make conversations with hands free comfort.

## **Travel Charger**

You can charge the phone with the Travel Charger when you are on the move.

**Note:** Please use approved accessories to get the most out of your phone.

## **Appendix D: FCC Statement**

This device has been tested and found to comply with Part 15 of the FCC rules. Performance is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the manufacturer or authorized service center could void the user's authority to operate this equipment.

## **Appendix E: Menu Index**

### **A**

Add New Entry 15  
Auto Quick End 27  
Alarm 43

### **B**

Broadcast Message 25

### **C**

Copy All 16  
Caller Group 16  
Caller Picture 17  
Caller Ring Tone 17  
Chat 24  
Call Time 26  
Call Cost 26

Call Setup 29

Calendar 42

Calculator 43

Currency Converter 44

### **D**

Delete 16

Dialed Calls 26

Delete Call Log 26

Data Account 45

### **E**

Extra Number 16

E-mail 21

### **F**

FM Radio 36  
File Manager 39  
    Phone 39  
    DRM Rights 40

**G**  
GPRS Counter 27  
Games 40  
    Game Setting 41

**H**  
Headset 42  
Health 44

**I**  
Indoor 42

**M**  
Move All 16  
MMS 19  
Missed Calls 25  
Melody Compose 37

**N**  
Network Setup 32  
Normal 41

**O**  
Outdoor 42

**P**  
Phone Setup 27

**Q**  
Quick Search 14

**R**  
Received Calls 26  
Restore Factory Settings 34

**S**  
Search Entry 14  
Settings 16  
SMS 17  
SMS Counter 27  
Security Setup 33  
Sound Effect 35  
Sound Recorder 35  
Schedule FM Record 36  
Silent 42  
Stopwatch 44  
STK Service 44

**T**  
To Do List 43  
Tune Player 35

**U**  
Units Converter 44

**V**  
Voice Mail Server 25

**W**  
World Clock 44

WAP 44