

S-6005 is a GSM mobile phone (hereafter referred to as “phone” or “phoneset”) with 262K color TFT display, 64 polyphonic ringtones, MP3/Video player and 2.0 mega pixels camera, WAP service, many VAS applications in Fun Spice, and can be used as a USB mass storage.

Note: In this user manual, to “press” a key means to press shortly; to “long press” a key means to press and hold for a while (> 2 seconds).

- 2 Please carefully read this manual before you use the phone.
- 2 For a newly bought phone, charge it for 4 hours before the first time of use, and charge the second time only after the power has been used up. Repeat this several times, and the battery will reach the best use effect.
- 2 This manual is for illustration purposes only. The phone and its accessories are subject to update without notice.
- 2 This user manual is being provided along with the phone for better understanding of the functions and applications. Spice will not take any responsibility of any printing mistake / error in this user manual.

Table of Contents

1	Welcome	1
2	Safety	6
2.1	Notice to the Use of Phone.....	6
2.2	Notice to the Use of Battery and Charger.....	7
3	Introduction	9
3.1	Phone and Accessories.....	9
3.2	Specifications.....	9
3.3	Standby Time / Max. Talk Time.....	9
3.4	Name and Functions of the Parts of the Phone.....	9
3.5	Description of Display Contents.....	12
3.6	About SIM Card and the Battery.....	12
3.7	To switch on and off.....	16
3.8	Standby Operation.....	16
4	Phone Book	17
4.1	To add name cards.....	17
4.2	To search the Phone Book.....	17
4.3	Contact Item Options.....	17
4.4	To delete/copy contact entries by batch.....	17
4.5	To set Caller Group.....	17
4.6	To import/export Contact entries.....	18
4.7	Set Owner number.....	18
4.8	Phone Book settings.....	18
4.9	Set caller picture/ringtone.....	18
5	Calling	19
5.1	To make call.....	19
5.2	To make an Emergency Call.....	19
5.3	To answer a call.....	19
5.4	To reject a call.....	20
5.5	To send SMS when a call is incoming.....	20
5.6	To dial international numbers.....	20
5.7	To insert a pause symbol when dialing.....	20
5.8	Speed Dialing.....	20
5.9	Fixed Dial.....	21
5.10	Dialing from the Location in SIM Card.....	21
5.11	To redial.....	21
5.12	To dial from the Phone Book.....	21
5.13	To mute during a call.....	22

5.14	To record the call.....	22
5.15	To adjust the volume during a call	22
5.16	To search a phone number during a call.....	22
5.17	To activate/deactivate Speaker	22
5.18	DTMF (Dual Tone Multi Frequency) Tone.....	22
5.19	Call Divert.....	22
5.20	Call Hold	22
5.21	Call Waiting.....	22
5.22	Three-party Calling.....	23
5.23	Restrict Calls	23
6	Messages.....	24
6.1	Send SMS	24
6.2	SMS Inbox.....	24
6.3	SMS Outbox	25
6.4	SMS Draftbox.....	25
6.5	SMS Templates.....	25
6.6	SMS Settings.....	25
6.7	Send MMS	26
6.8	MMS Notify.....	26
6.9	MMS Inbox.....	26
6.10	MMS Sentbox.....	27
6.11	MMS Draftbox.....	27
6.12	MMS Templates.....	27
6.13	MMS Setting.....	28
6.14	Chat	28
6.15	Voice Mail	28
6.16	Broadcast Message	29
7	Call History.....	30
7.1	Missed calls/Dialed calls/Received calls.....	30
7.2	Delete Call Logs	30
7.3	Call times.....	30
7.4	SMS Counter	30
7.5	GPRS Counter.....	30
8	Settings.....	31
8.1	Customized Phone setup	31
8.2	Safety	32
8.3	Restore factory default.....	32
9	Fun Spice.....	34

9.1	SpiceGang	34
9.2	Ibibo	34
9.3	Ngpay	34
9.4	Opera Mini.....	35
9.5	Email2SMS.....	36
9.6	Reuters.....	36
9.7	MGurujee.....	36
9.8	ContactsBackup	37
9.9	Utilities	37
9.10	Voice Zone.....	37
9.11	Games & Applications.....	38
9.12	AfterSpice.....	38
10	File Manager	39
11	Shortcuts.....	40
12	Multimedia and Entertainment	41
12.1	Taking Photo.....	41
12.2	Image Viewer	41
12.3	Video Recorder.....	42
12.4	Video Player.....	42
12.5	Audio Player.....	42
12.6	Sound Recorder	43
12.7	Java.....	43
12.8	FM Radio.....	44
12.9	Schedule FM Recording.....	44
13	User Profiles.....	45
14	Organizer.....	46
15	Extra	47
16	Services.....	49
16.1	STK Services	49
16.2	WAP Browser	49
16.3	WAP Setup	49
16.4	Connection setup.....	49
17	Maintenance	50
18	Troubleshooting.....	51
19	After Services.....	52
20	Inputting Text.....	53
20.1	Keypad mapping.....	53

20.2	ABC/abc Input Method.....	53
20.3	To input digits.....	54
20.4	To input symbols.....	54
20.5	T9 Input Method.....	54
21	Spice Mobiles SMS Services.....	55

2.1 Notice to the Use of Phone

- | Before you use the phone, please carefully read this section to grasp the correct method of use and ensure the safety of the holder, others and properties.
- | All the screens in this manual are for reference only, and some contents actually displayed may depend on the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your phone, please follow your phone.
- | The specifications and appearance of this product are subject to change due to improvement of functions without notice.
- | For GSM service-related problems, consult your GSM service provider.
- | Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to misoperation, poor signal or power cut, etc.
- | Do not use the phone in an environment of extremely high or low temperature, otherwise, malfunctions may be caused. Use the phone in temperatures between 5°C and 35°C and a humidity of 35% to 85%.
- | Using the phone in an environment of moist or high humidity may cause malfunctions of the phone, the charger and the battery.
- | Do not drop or strongly impact the phone, otherwise, malfunctions may be caused and the phone can't be used.
- | Turn your phone off when you are near electrical blasting caps, in a blasting area, or at the gas station. Obey all signs and instructions.
- | Do not use the phone near any electronic device vulnerable to interference. Otherwise, malfunctions of electronic device may be caused. Such electronic devices include medical electronic devices, such as hearing aids and pacemaker, fire alarms, auto doors and other automatic equipment. If you have to use the phone near such devices, please first consult the manufacturers and dealers of these devices to avoid interference.
- | Switch off the phone when you are on the plane or in the hospital where the use of mobile phones is prohibited to avoid interfering with electronic and medical equipment. If you have to use the phone in such places, please follow the regulations of the sites.
- | Don't use your phone while driving, as this is dangerous and could cause a traffic accident. Pull over and park in a safe place before making or answering a call. Use hands-free operation, if available.
- | The phone has an internal antenna. When switched on, do not hold the antenna area on the top of the phone, otherwise, the quality of connection and the performance of the antenna may be influenced, and the max. talk time may be reduced.
- | To avoid degaussing, do not put financial cards, phone cards or other magnetic cards near the charger and the phone to avoid failure of use due to the cards.
- | Do not place the phone and the battery under direct sunlight or in a car under burning sun or other places of high temperature to avoid injury due to overheating, leakage, cracking, distortion, or even fire of the battery.

- | Do not put the phone in a place with excessive dust or vibration (which may cause failure) to avoid malfunctions of the phone.
- | Do not take apart the phone, the charger and the battery, or modify the internal structure without permission to avoid malfunctions and accidents.
- | Do not let children fiddle with the phone or the accessories to avoid injuring themselves or others, or damaging the phone or the accessories. The phone or the accessories may contain small removable components which may easily cause suffocation of children.
- | If the phone is contaminated, please wipe it with a dry cloth. Do not use organic solvent such as gasoline to wipe the phone to avoid causing damages of the outer surface.
- | If smoke or peculiar smell is produced during use, please immediately switch off the phone and remove the battery. Please have the phone repaired as arranged by the store where you bought the phone. Do not continue to use to avoid causing injury.
- | Do not dispose the phone as urban waste. For details, please refer to the local regulations for the disposition of waste electronics.

2.2 Notice to the Use of Battery and Charger

- | The time for using the battery is an estimated time under 25°C and stable signal. If used in a place with weak signal, extremely high or low temperature, or outside the service area, the consumption of battery power will be faster, thus the standby time and max. talk time may be reduced.
- | Please use the accessories, such as battery and charger, specified by the company to avoid risks due to overheating, leakage, explosion, or even fire of the battery caused by non-compliance with the specifications. You can consult the label attached to the battery or charger for specifications.
- | The battery should be put in a cool, ventilative and sunlight-free place. If the battery is in the exhausting status for a long time, it can't be charged. Therefore, if you do not use the phone for long, please charge the battery periodically.
- | The battery is expendable goods. All the batteries have a certain life. If the performance of the battery can't be improved after repeated charging, the battery may be discarded as useless and must be replaced with a new one.
- | Please fully charge the battery before you use the newly bought phone.
- | Do not charge the battery in a place with direct sunlight, a temperature equaling to or below 0°C or equaling to or above 45°C, high humidity, excessive dust or vibration (which may cause failure), or a place near TV or radio (as it may produce noise interference to video or sound signal).
- | Please switch off the phone and wait over 2 seconds before removing the battery.
- | Do not dismantle the phone and the charger for modification without permission to avoid malfunctions or injury.
- | Do not strongly impact or throw the phone or the battery to avoid leakage or overheating of the battery, or malfunctions of the phone.
- | Do not short the two polarities of the battery to avoid leakage, overheating, fire or explosion of the battery.
- | If leakage of the battery enters the eyes accidentally, please immediately wash the eyes with fresh water and go to a doctor. If it is not treated quickly, it may cause

serious injury, such as blindness.

- | If the battery is contaminated with liquid, it may cause burn or malfunctions due to overheating of the battery. The charger may also cause overheating, damages, electric shock and malfunctions. If the charger is accidentally sunk in water, or smoke or peculiar smell is produced during charging, please immediately switch off the phone and unplug the AC cable from the socket. Please have the phone repaired as arranged by the store where you bought the phone. Do not continue to use to avoid causing injury.
- | Do not put the charger and the AC cable in a place with flame or ovens to avoid causing injury due to overheating, leakage or fire of the battery.
- | Do not touch the charger, the power cable and the plug of AC power supply with wet hands to avoid electric shock or malfunctions.
- | Do not strongly pull the wire of the charger, or put heavy objects on the power cable, or change the power cable optionally, otherwise, electric shock or fire may be caused.
- | When the battery is fully charged, please unplug the charger from the socket.
- | Do not dispose the used battery together with daily waste. Please dispose the used battery in accordance with the regulations issued by the local authority.
- | Battery should be fully charged for minimum 4 hours before you start using the handset. Once charged, you should use the handset till the time battery is fully discharged. Now charge again fully and use the handset till the time it is fully discharged again. This cycle to be repeated again and again to get the peak performance of battery.

3.1 Phone and Accessories

Open the packing box of the phone and check that you have the phone, charger and user manual. If anything is missed, or any mistake is found in the user manual, such as missing pages, please contact the local dealer. Please follow MRP sticker on the box for complete details of accessories.

3.2 Specifications


Network	GSM/GPRS: 900/1800/1900MHz
Battery	Rechargeable Li-ion Battery 750 mAh 3.7V
Dimension	116.5(L) X 49.2(W) X 10(D) mm
Weight	About 69.5 g (battery included)

3.3 Standby Time / Max. Talk Time

Standby time(maximum)*	Up to 225 hours
Talk time(maximum)*	Up to 400 minutes

*Standby and talk times are estimates and only possible under optimal network conditions. Actual times vary depending on SIM cards, operating temperature, battery age and condition, network conditions, features selected, and many other factors, and may be remarkably shorter than those mentioned above.

3.4 Name and Functions of the Parts of the Phone

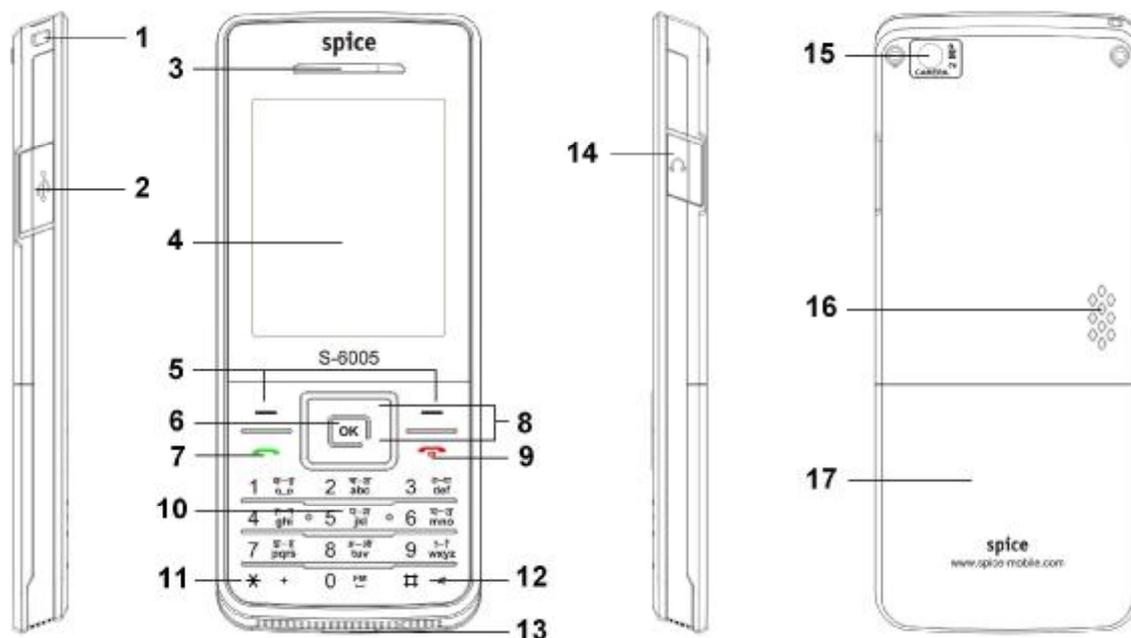

	Parts of the Phone	Description of Functions
1	Strap Hole	
2	USB/charger interface	
3	Receiver/ Speaker	
4	Display	
5	Left/Right Soft-key	<ul style="list-style-type: none"> Execute the operation illuminated at down-left/down-right side of the screen under the operating window.
6	OK key	<ul style="list-style-type: none"> In idle, press this key to enter Audio Player. Long press the key to begin voice recording in idle screen. On call, long press the key to record the call.
7	Send key	<ul style="list-style-type: none"> To answer a call. To dial a number. Enter Call Logs in idle. To snap the screen display in video playing.
8	Navigation key (Up, Down, Left, Right)	<ul style="list-style-type: none"> To move the cursor. To perform the operation designated to the navigation key in idle. In the music playback mode, press Navigation key (Left/Right) to switch between the previous and next tracks (press and hold for rewind or fast-forward); press Navigation key (Up) to play/pause; or press Navigation key (Down) to stop. In Camera/Video recorder mode, press Navigation key (Up/Down) to adjust the Digital Zoom Ratio. Press and hold Navigation key (Left/Right) for rewind or fast-forward in Video playback. In the calculator mode, to input “+”, “-”, “x” and “÷” respectively; Press the key twice to perform “M+”, “M-”, “MC” and “MR” respectively. Press Navigation key (Left/Right) to return to the previous level of folder or enter the next level of folder.
9	End key(Power key)	<ul style="list-style-type: none"> Long press for Power on/off. Quickly return to standby mode. To end a call.
10	Number/letter keys	<ul style="list-style-type: none"> To input phone numbers, text, symbols or select functions. In Video player, press 1 key to rotate the screen clockwise by 90° to realize full-screen play or restore the normal status.
11	* key	<ul style="list-style-type: none"> When dialing in idle, press the key once to input “*”; press it twice to input “+”; press it thrice to input “P”; or press it 4 times to input “W”.

		<ul style="list-style-type: none"> In the edit screen, to open the list of symbols. To switch between camera and video recording modes. To decrease the volume.
12	# key	<ul style="list-style-type: none"> To switch between input methods. To input a radix point. In idle, long press to activate the Silent mode with vibration or return to the previous mode. To increase the volume.
13	Mic	
14	Earphone interface	
15	2.0 M Camera	
16	Speaker	
17	Battery cover	

3.5 Description of Display Contents

The table below lists the icons that may appear on the status bar according to the current priority of the phone.

Icons	Description
	Shows the signal strength. More bars means a stronger signal.
Indicates the current residual battery power:	
	The power is full.
	The power is moderate.
	The power is low.
	The power is used up.
	Appears when the phone is set to mute during a call.
	Indicates that the phone is roaming on other network.
	Appears when the GSM Divert All Calls function is activated.
	You have received a text message. If the message capacity is full, this icon will blink.
	You have received an MMS message. If the message capacity is full, this icon will blink.
Indicates the current profile:	
	The alert is set to Ring.
	The alert is set to Vibration only.
	The alert is set to Vibrate and ring.
	The alert is set to Vibrate then ring.
	The alert is set to Light only. It means the phone will alert with light only, without sound and vibration.
	GPRS is in use.
	GPRS connection is set to "Always". If it is set to "When needed", the icon will not appear.
	Earphone is plugged in.
	The Alarm clock has been set and activated.
	Phone lock is activated.
	You have a missed call.
	You have an unread voice message.
	The stopwatch is counting.
	Chat room 1 is in use.
	Chat room 2 is in use.
	Audio Player is activated.
	Bluetooth is activated.

3.6 About SIM Card and the Battery


Please store the cards out of the reach of children.

The cards and the contacts are vulnerable to damages due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.


Be sure to switch off the phone before you insert or remove the battery or the cards, otherwise, the phone may be damaged.

To insert Micro SD card, SIM card and battery

1. Open the protective slot cover and place the memory card with the metal pins facing downward into the slot in the direction indicated by the arrow, then replace the slot cover.

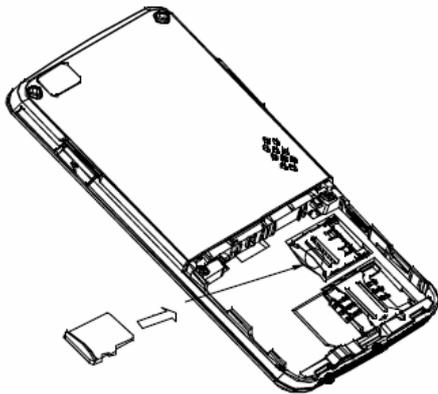

2. Place the SIM card's metal contact point face down, match to the correct contact position in the SIM slot.

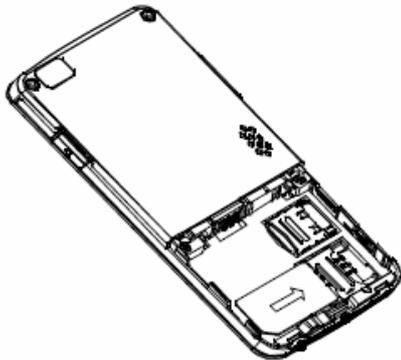

3. Match the battery's metal contact points with the corresponding spring pins in the battery slot, and then press the battery down into position.



4. Put the clip on the two ends of battery cover to groove of the back shell, and then


place the battery cover into the back shell.




Tip: Be sure to use the original battery.

To remove the battery, SIM card and Micro SD card


1. Press **Power key** until the phone turns off.
2. Remove the battery cover.

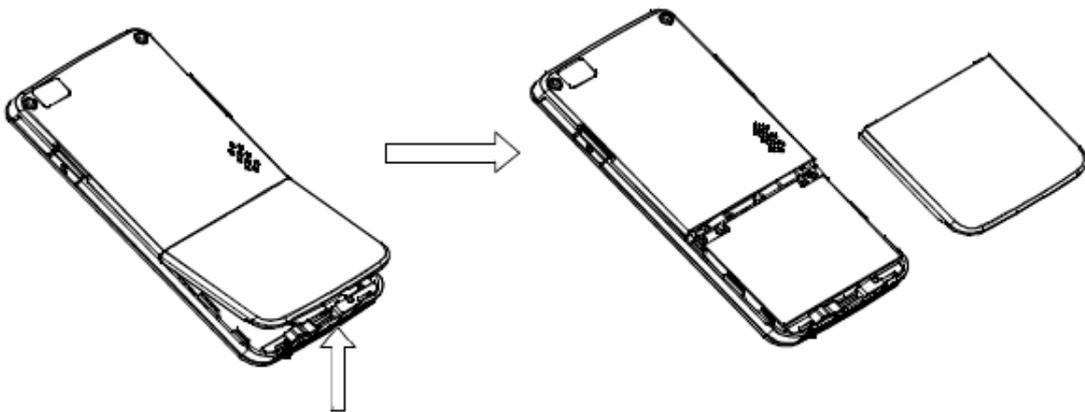


3. Remove the battery.

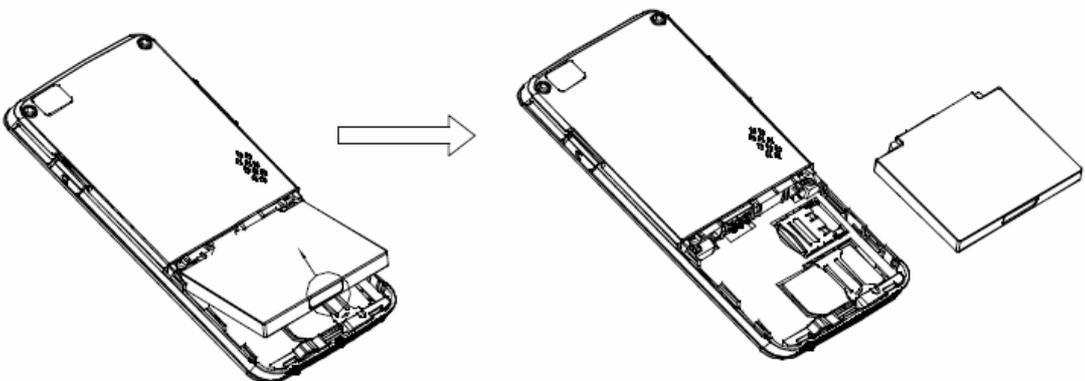

4. To remove the SIM card, gently press and slide card out from the SIM slot.

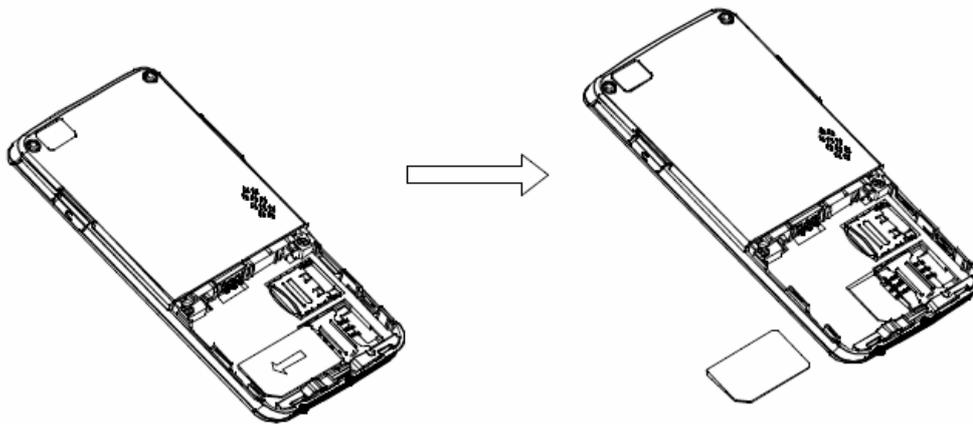


5. Open the protective slot cover and remove the memory card.

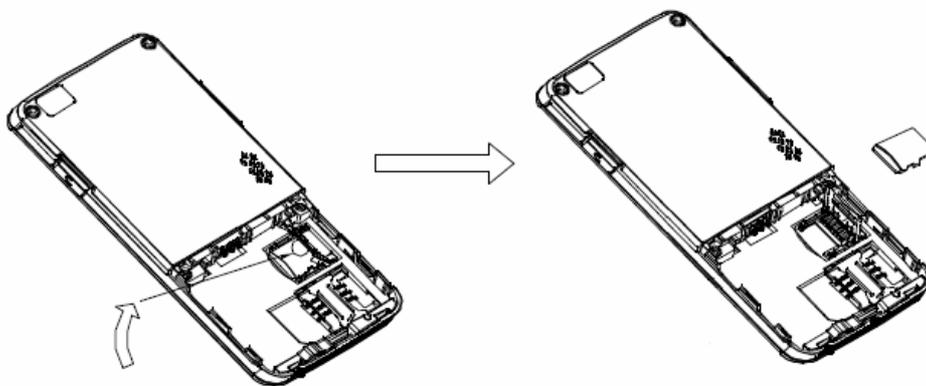

To charge the battery

Your mobile phone battery has been charged to 50% capacity and can be used immediately. However, it is best to charge it for 4 hours before the first time of use, and charge the second time only after using the phone until the battery has been fully discharged. Repeat this full charge/discharge cycle several times, and the battery will reach peak performance.

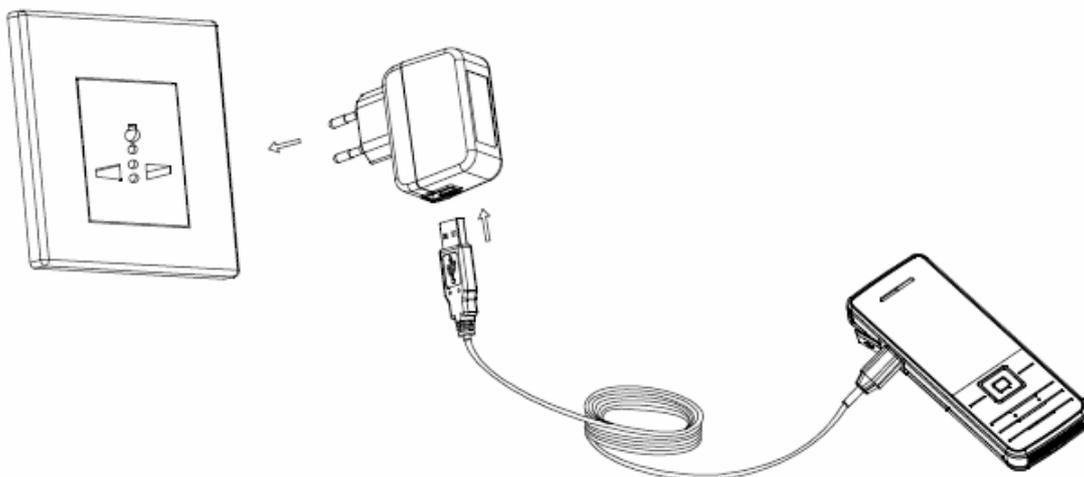

1. Plug the charger into a power outlet.
2. Connect the charger cable to the jack on the side of the phone. The battery power

icon will blink.

3. The red light of keypad is lit during charging. When the battery power icon stops blinking or the green light is lit, it indicates the battery is fully charged.
4. When not charging, please unplug the charger from the AC power supply and disconnect the phone from the charger.

Tips:

The battery icon  displayed on the screen indicates that the battery power is low. Please charge the battery following the steps above.

Charging when the phone is in the ON mode will not influence the normal dialing and answering. If the phone is used continuously under low battery, charging will take longer than normal.

We suggest you recharge the battery when the power is used up so as to prolong the life of the battery.

3.7 To switch on and off

To switch on: Long press **Power key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to input the 4-8 digits password to unlock. (The preset unlock code is 1122.)

If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to input the 4-8 digits password to unlock.

Warning: If you input three wrong PIN codes in a row, the SIM card will be locked and you need to input the PUK code to unlock. Both the PIN code and PUK code are provided by your service provider.

To switch off: In the standby mode, long press **Power key**.

3.8 Standby Operation

The so-called "standby state" refers to the standard mode where the phone has been normally switched on and logged in the network, but no calls are in process or no menu is used.

In the standby state:

Menu > Main Menu

Navigation key > Go to dedicated functions.

Press **Send key** to show call history.

Press **RSK** then **#** to lock/unlock the keypad.

Tip: The function of each **Navigation key** can be modified in **Settings > Phone setup > Dedicated Key**.

You can store names and phone numbers either on the phone's internal memory or on the SIM card. The phone memory stores up to 500 entries, each of which can contain name, 4 phone numbers, company name, e-mail address and birthday. You can set photo caller ID, ringtone and groups for each entry. For SIM card memory storage, the maximum number of saved contacts depends on the SIM card.

Menu > Phone Book

4.1 To add name cards

Input the phone number in idle, then select **Options > Save** to select the location for saving.

Or: **Menu > Phone Book > Add new contact**

You can edit the name and other related information of each contact.

You may set the number of columns in **Phone Book > Settings > Fields**.

4.2 To search the Phone Book

Functions	Description
Quick Search	Menu > Phone Book > Quick search To filter by contact name, enter the first few letters of the contact's name. All the matching entries will be shown as you type.
Search by name	Menu > Phone Book > Search contact Enter the name of contact to search. If there is no matching entry, the cursor will be placed on the entry most similar to the characters input.

4.3 Contact Item Options

Choose the required entry in the Contact list, and then press "Options". You can choose the following operations in the options menu: **Call, View, Edit, Delete, Copy** (to another storage location, e.g. SIM→phone), **Move, Duplicate** (create a duplicate in the same storage location), **Send vCard**.

4.4 To delete/copy contact entries by batch

Menu > Phone Book > Mark / Unmark: Select more than one entry to delete or copy.

4.5 To set Caller Group

Menu > Phone Book > Caller groups

This phone provides 5 kinds of groups: Friends, Family, VIP, Business and Others, with various icons and group-specific ring tones.

Select the group to be set. You can select group members from the entries stored in the phone memory only.

4.6 To import/export Contact entries

Enter Contacts, and then select "Import & Export". You can export contact entries by batch to File manager or import them in .vcf format.

Export to file:

To export all the entries stored in the phone memory and SIM cards to the "Contacts" folder under File manager. The existing data in this folder will be deleted before exporting.

Import from file:

To import all the entries from the "Contacts" folder under File manager to the Phone Book of the phone memory. The entries can't be imported to SIM cards.

4.7 Set Owner number

Menu > Phone Book > Owner number

4.8 Phone Book settings

Menu > Phone Book > Settings

You can see memory status, set preferred storage, fields and so on.

4.9 Set caller picture/ringtone

Menu > Phone Book > Call picture / Caller ringtone

You can browse a picture or ringtone under File Manager, and add it to a new contact, an existing contact or a caller group.

5.1 To make call

If  is displayed on the screen, you can make or answer calls. The signal strength may influence the quality of connection.

Press	To
1 numerical keys	input the phone number to be dialed
2 Clear	delete the last digit if the number is incorrect press and hold to clear the entire number
3 Send key	dial the number
4 End key	end the call

Tip: When you enter a telephone number, use the international number format: Press * **key** twice to display “+”, then enter your country code and the phone number.

5.2 To make an Emergency Call

Enter 112 (the international emergency number) and press **Send key**. The call will be sent out. (This 112 number can be used in any country whether a SIM card is available or not, as long as you are included in a GSM network).

5.3 To answer a call

When the phone prompts that a call is coming in:

Press	To
Mute	turn off the ring/vibration
Send key/Answer	answer the call
END key	reject the call.

When a call comes in, if an entry in the Phone Book corresponds to the number, the related information will be matched.

If the number has been saved in the Phone Book and has a name, the screen will display the name when a call from the number comes in.

If the number has been saved in the Phone Book and belongs to a caller group, the ringtone and picture corresponding to the group will be played or displayed when the number comes in.

If the number has been saved in the Phone Book and belongs to a caller group, but you have specified a photo call ID or ringtone for this entry, then the specified photo call ID or ringtone will be displayed or played when the number comes in.

Tip: If you have plugged the earphones in the phone, you need to long press the button on the earphones to answer the incoming call (except when you have set to automatic answering). To end a call, you also need to long press the same button.

5.4 To reject a call

When the phone prompts that a call is coming in:

Press	To
End key	reject the incoming call

5.5 To send SMS when a call is incoming

If it is not convenient for you to answer an incoming call, you can send an SMS to the caller.

From the incoming call screen, after you press “Mute”, the Right Soft Key will be “Reply”. Press “Reply” to open the message template list, and then send the desired phrase.

You can define the phrases of template list, such as “I m busy cant take call,pls sms or call later”.

5.6 To dial international numbers

You need to insert the local international connection code “+”.

Press * **key** twice to input “+”, then enter your country code and the phone number.

5.7 To insert a pause symbol when dialing

There are two methods to dial an extension number with a pause symbol: to dial the extension number automatically (the pause time is controlled automatically); to switch manually (the pause time is controlled manually). The phone supports both of the two applications of the pause symbol.

To dial the extension number by automatic switching:

Input a phone number in idle.

Press * **key** thrice to input the pause symbol **P**.

Input the extension number.

Press **Send key** to dial the phone number, then the phone will dial the extension number after **P** automatically.

Tip: The pause time depends on the number of “**P**” input.

To dial the extension number by manual switching:

Input a phone number in idle.

Press * **key** four times to input the pause symbol **W**.

Input the extension number.

Press **Send key** to dial the phone number, then the phone will prompt whether to continue dialing the extension number after **W**.

Tip: This lets you select whether to dial an extension number by pressing a key when appropriate.

5.8 Speed Dialing

You can specify speed dial numbers to frequently used phone numbers.

Long press the number keys **2-9** on the idle screen to dial the phone number. (The **1 key** correspond with Voice Mailbox.)

Tip: You must have set a speed dial number for that **number key**, and the Speed Dial function has been activated.

5.9 Fixed Dial

You can set limitations on the numbers you can call. SIM PIN2 is required to activate it.

When the Fixed Dial function is activated, from the Fixed Dial List, you can only see the entries in the SIM cards that have been set in the Fixed Dial section.

When the Fixed Dial function is activated, you can still dial emergency numbers.

To activate or deactivate the Fixed Dial function:

Menu > Settings > Security setup > Fixed dial

Switch on/off about this Fixed dial function and edit the fixed-dial numbers.

5.10 Dialing from the Location in SIM Card

In idle, Input the location serial number of the contact stored in the SIM card, and press **# key** to display the entry corresponding to the location. Press **Send key** to dial.

If you want to dial according to the location serial number:

Press	To
1 numerical keys	input the location serial number of the contact stored in the SIM card
2 # key	display the entry corresponding to the memory location
3 Send key	dial the number

Tips:

If you have input a location serial number outside the storage range of the SIM card or exceed the allowable numeration (1-999) of the phone, the phone will not find any entry.

5.11 To redial

Press	To
1 Send key	show call logs
2 Navigation key (Up/Down)	highlight the desired phone number
3 Send key	dial the number

5.12 To dial from the Phone Book

Access Phone Book to select a contact from the entry list and press the **Send key** to dial. If the entry contains more than one number, the number selection screen will be displayed. You can select one number to dial.

5.13 To mute during a call

During a call, you can prevent the other party from hearing you:

Options > Mute > On/ Off

5.14 To record the call

During a call, long press **OK key** to record the call.

5.15 To adjust the volume during a call

During a call, select **Options > Volume**, then press **Navigation key (Up/Down)** to adjust.

5.16 To search a phone number during a call

You can search for a phone number from Phone Book during a call:

Options > Phone Book

5.17 To activate/deactivate Speaker

During a call, press **(H-Free)** to activate handsfree.

To deactivate handsfree, press **(H-Held)**.

5.18 DTMF (Dual Tone Multi Frequency) Tone

During a call, you can select to turn on or off the DTMF tone. When the DTMF tone is turned off, the digits input will not be regarded as a DTMF signal response.

During a call:

Options > DTMF > On / Off

5.19 Call Divert

With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not any extensions of a fixed telephone:

Menu > Settings > Call Settings > Call divert

5.20 Call Hold

During a call:

Options > Hold single call / Retrieve single call

Tip: The function needs the support from the local network.

5.21 Call Waiting

This function allows you to put the current call on hold and then answer a second one. This function needs the support from the local network. In some areas, you can use the function only after you apply with the local network service provider.

Menu > Settings > Call Settings > Call waiting

If, during a call, a new call comes in, you will hear a special alert sound and the screen will display the number of the new incoming call.

To answer the new call: Press **Send key** or select **Answer**

To reject the new call: Press **Reject** or press **End key**

To end the current call: Select **Options > Replace**

If you answer the new call, the first call will be held and you will hear the hold alert sound.

To switch between calls: Press **Send key** or select **Options > Swap**

To end the select call: Select **Options > End single call**

To end the current call: Press **End key**

To end both calls: **Options > End all calls**

5.22 Three-party Calling

Three-party Calling, also called a multiparty call or a conference call, is a service based on call waiting. This function needs support from the local network. In some areas, you can use the function only after you apply with the local network service provider.

During a call, you may dial other numbers without hanging up the current call, and use the functions provided during the call to connect new parties and make a three-way call. You may conduct a three-way call with up to five parties:

1. Ask the other party of the current call not to end, and select **Options > hold single call** to hold the current call.
2. Select **Options > New call** to input and dial a new number, then talk with him/her after he/she answers your call.
3. Select **Options > Conference** to connect all the parties and form a conference.
4. Continue to dial new numbers, and repeat the steps above to add more parties to the conference.

Tip: After a conference is formed, if you press **End key**, you will end all the calls.

5.23 Restrict Calls

This function is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the Call barring settings, please contact your network operator to obtain the password for enabling this service.

Menu > Settings > Call settings > Call barring

6.1 Send SMS

Menu > Messages > SMS > Write message

Write the content of the SMS, **Options >**

Use templates: select a phrase from the list and insert it to the SMS.

Insert object: insert an object and insert it to the SMS.

Format text: embellish the characters of text.

Insert number: select the number from Phone Book to insert it in the SMS.

Insert name: select the name from Phone Book to insert it in the SMS.

Input method: switch the input method.

After writing the content, press **Options > Done**

Send and save: Send the message and save it to outbox.

Send only: Send the message.

Save: Save the message to outbox.

Send to many: Send the message to more than ten recipients.

Send by group: Select a group to send.

6.2 SMS Inbox

Menu > Messages > SMS > Inbox

To read a message, move to the entry and press **OK**

When reading a SMS, you can select **Options >**

Reply: reply the entry.

Delete: delete the message.

Edit: edit the message.

Forward: forward the entry to others.

Copy to phone/SIM: copy the SMS stored in SIM/phone to the phone/SIM.

Move to phone/SIM: move the SMS stored in SIM/phone to the phone/SIM.

Chat: To enter the chat room and chat with the sender (if you have set the number of the sender as the number of the person you chat with in the Chat Room Setup).

Delete all: delete all the messages from the Inbox.

Copy all: copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.

Move all: move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

Use number: extract the number of the sender and the number(s) contained in the SMS into a list (up to 6 numbers), and select to dial or save it/them in the Phone Book.

Save objects: view and save the objects contained in the SMS.

6.3 SMS Outbox

Outbox stores messages that have been sent.

Menu > Messages > SMS > Outbox

To read a message, move to the entry and press **OK**

When reading a SMS, you can select **Options >**

Send: To select how to send.

Edit: edit the message.

Delete: delete the message.

Copy to phone/SIM: copy the SMS stored in SIM/phone to the phone/SIM.

Move to phone/SIM: move the SMS stored in SIM/phone to the phone/SIM.

Delete all: delete all the messages from the Outbox.

Copy all: copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.

Move all: move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

Use number: extract the number of the receiver and the number(s) contained in the SMS into a list (up to 6 numbers), and select to dial or save it/them in the Phone Book.

6.4 SMS Draftbox

Menu > Messages > SMS > Drafts

This allows you to read the Messages that failed to send and those saved during editing, the same available operations as Outbox in 7.3 above.

6.5 SMS Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing SMS. Preset phrases may be modified.

Menu > Messages > SMS > Templates

6.6 SMS Settings

Menu > Messages > SMS > SMS settings

Profile settings

- I Edit the number of the message service center. With the SIM card inserted, the phone automatically searches for the number. You need to make sure the number is correct before sending and receiving the message.
- I Select the period for the message saved. It is the time the service center's attempt to send the message. Please contact the network operator for more information.
- I Select the format of the message to be sent. Please contact the network operator for more information.

Common settings

- I Delivery Report: Get the delivery report when the message is successfully delivered to

the recipient.

I Reply Path: Whether to use the service center which send the message to reply.

Memory status

I Check the message memory status of the SIM and the phone.

Preferred storage

I Select preferred storage.

6.7 Send MMS

MMS, which contains text, picture, video and ringtone, is sent through the MMS center to another mobile phone or an e-mail account.

The phone supports sending and receiving MMS by GPRS, and multiple-sending.

Menu > Messages > MMS > Write MMS

Select **Option**:

Add Text: write text. You can also select and insert a phrase to the text. The preset phrases may be modified. (**Menu > Messages > MMS > Templates**)

Add Audio: select an Audio from File manager and add to the MMS.

Add Image: select an image from File manager and add to the MMS.

Add Video: select a Video from File manager and add to the MMS.

Insert New Frame: add a new page.

Delete Frame: delete the frame you are editing.

Previous Frame / Next Frame: edit Previous/next frame.

Save: save the MMS to Draft.

Edit Number: enter the number edit screen.

Send: send the MMS.

Tip: The phone supports multiple-sending (up to 20 numbers). If you input more than one numbers, you need to input "comma" between the numbers for separation.

6.8 MMS Notify

Menu > Messages > MMS > MMS Notify

When a new MMS arrives, if you set to delay it, or set to receive it at once but the network is busy or the memory card is not exist currently, you will receive a notice.

Select an entry to browse, the phone will start receiving. When the reception is ok, the notice will be deleted automatically. For an overdue MMS, the phone will prompt relevant remark after the receiving is finished, and then store the remark to Inbox. The notice will be deleted.

6.9 MMS Inbox

Menu > Messages > MMS > Inbox > Option

View: read the highlighted MMS.

Delete: delete the highlighted MMS.

Select and Delete: select MMS to delete.

Delete All: delete all the MMS from the Inbox.

When reading a MMS, you can select **Option > Previous/Next Frame**: View Previous/next frame.
Auto Play: To activate or deactivate the auto play function.
Reply: reply the MMS.
Call Back: dial the number of the sender.
Forward: forward the MMS to others.
View Objects: view, Play and save the objects contained in the MMS.
Save Phone Number: save the number of the sender in the Phone Book.
Delete: To delete the MMS.

6.10 MMS Sentbox

MMS which have been sent or can't be sent are stored in the Outbox.

Menu > Messages > MMS > Sentbox > Option
View: To read the highlighted MMS.
Delete: To delete the highlighted MMS.
Select and Delete: select MMS to delete.
Delete All: To delete all the MMS from the Outbox.

When reading a MMS, you can select **Option > Previous/Next Frame**: View Previous/next frame.
Resend: To send the MMS again.
Forward: To edit and forward the MMS to others.
Delete: To delete the MMS.
View Objects: To view the objects contained in the MMS.
View to: To view the detailed information on the sender.

6.11 MMS Draftbox

MMS saved during editing are stored in the Draft.

Menu > Messages > MMS > Draftbox > Option
View: To read the highlighted MMS.
Delete: To delete the highlighted MMS.
Select and Delete: select MMS to delete.
Delete All: To delete all the MMS from the Draft.

When reading a MMS, you can select **Option > Previous/Next Frame**: View Previous/next frame.
Edit: To edit the MMS.
Delete: To delete the MMS.
View Objects: To view the objects contained in the MMS.

6.12 MMS Templates

The phone has preset frequently used phrases which may be selected and added to the

text when you are editing MMS. Preset phrases may be modified.

Menu > Messages > MMS > Templates

6.13 MMS Setting

Menu > Messages > MMS > MMS Setting

1. Set **Data Service Type**.
2. Set **Service Center**.
3. Set **MMS Access** to always On, or always Off, or receive MMS only after you have registered with the network.
4. Set, when a MMS arrives, to receive at once, or delay receiving, or reject receiving.
5. Set whether to receive anonymous MMS. (This needs the support from the network service provider.)
6. Set whether to receive advertisement. (This needs the support from the network service provider.)
7. **Expiry Period:** To set the period during which the MMS is stored at the service center. (For details, consult your network service provider.)

6.14 Chat

The phone provides two chat rooms for SMS. The contents of chat will be sent as SMS. If the receiver's mobile phone does not support the chat function, the chat messages you send will be received as common SMS.

Menu > Messages > Chat

Select either chat room and enter the setup screen. Edit **My Nickname**. During the chat, this nickname will be used and sent with the text to the person you chat with. Edit the number of the person you want to chat with.

After setting, you can begin chatting. The chat contents between you and the other party will be displayed in lines on the screen, and the screen will also display the number of the other party.

In the chat screen, select **Options >**

Reply: To reply a message to the person you are chatting with.

Use number: To extract the number of the person you are chatting with and the number(s) contained in the chat contents into a list, and select to dial or save it/them in the Phone Book.

Clear chat: To clear the contents from the chat room.

Temp leave: Leave the chat room for a while. If you do not switch off the phone, you can come back and select to continue chatting.

Quit: To end the chat.

Chat room Info: To enter the setup screen of the chat room in use.

6.15 Voice Mail

The phone supports Voice Mail.

Menu > Messages > Voice mail server

Set the voice mail numbers. When connecting, you can call and listen to the voice mail.

Tip: If you have set the voice mail number, press and hold **1 key** on idle screen to dial the corresponding number.

6.16 Broadcast Message

Menu > Messages > Broadcast message

The phone supports Broadcast Message. It is supported by GSM network. Broadcast messages are single-way messages sent to the users of the network operators by the message service center. For the contents and channel setup of broadcast messages, consult your network service provider.

You need to set Receive Broadcast Message to **On** before you can use Broadcast Message.

7.1 Missed calls/Dialed calls/Received calls

The phone registers the phone numbers of missed, received, dialed calls and call time. You can select one number to dial or check specific info through Call History in the options menu.

Menu > Call history > Missed calls / Dialed calls / Received calls

7.2 Delete Call Logs

Menu > Call history > Delete call logs

Choose to delete Missed Calls, Dialed Calls or Received Calls individually or Delete All.

7.3 Call times

Menu > Call history > Call times

Shows Last Call Time for sent calls, received calls and can reset timers.

7.4 SMS Counter

Menu > Call history > SMS counter

View the number of short messages you have sent and received.

7.5 GPRS Counter

Menu > Call history > GPRS counter

Shows the amount of data sent and received via GPRS.

Menu > Settings >

8.1 Customized Phone setup

Functions	Description
Set time and date	Phone setup > Time and date
Schedule power on/off	Phone setup > Schedule power on/off To set whether to activate/deactivate, switch on/off, and time in turn.
Select language	Phone setup > Language
Set display characteristic	Menu > Settings > Phone setup > Display Settings > Wallpaper/Screen saver/Show date and time/ Show owner number/Show operator name
Set greeting text	Phone setup > Greeting Text
Specify the dedicated key	Phone setup > Dedicated key By default: Navigation key (Up) > FUN Spice; Navigation key (Down) > Shortcuts; Navigation key (Left) > Write message; Navigation key (Right) > Camera
Auto update of date and time	Phone setup > Auto update of date and time It can be set to On or Off.
Set Flight mode	Phone setup > Flight mode Flight Mode is used to make sure safety on plane, and it can be set as three models: Normal Mode, Flight Mode and Query When Power On.
Set Signal LED and LCD Backlight	Phone setup > Misc.settings > 7 Light keypad effect / LCD backlight
Set whether to send the owner number	Call Settings > Caller ID
Set call waiting	Call Settings > Call waiting
Set call divert	Call Settings > Call divert Tip: You can select Cancel all divert to cancel all the divert settings.
Set Call barring	Call Settings > Call barring Restrict Calls is a GSM network service. Please contact your network operator to obtain the password for opening this service.
Turn on/off the speed dial function	Call Settings > Speed dial Set the status to ON . Set the speed dial codes, each of which corresponds to the number key 2 - 9 .
Activate / deactivate the Call times display	Call Settings > Call time display > On / Off

Activate / deactivate the talk time alert	Call Settings > Call time reminder You can select Single or Periodic .
Activate / deactivate Auto Call Disconnect	Call Settings > Auto Call Disconnect
Select network	Network Setup > Network selection New Search: The phone will select a new network automatically. Select Network: The phone will search and display the list of known networks for you to select the desired one, after which, the phone will try to log in the selected network. If the selected network is registered successfully, it will prompt so. Selection Mode: To switch search methods.
Select preferred network	Network setup > Preferred networks The phone will search and display up to 10 available preferred networks, with the serial number 1 indicating the highest level of priority. You can add new network names, or delete the existing ones, or change the priority of the networks.
Set information of GPRS Connection	Network setup > GPRS connection You can set it when needed or Always to GPRS connection.

8.2 Safety

Functions	Description
PIN code request	Security setup > SIM lock Warning: If you input three wrong PIN codes in a row, you need to input the PUK code to unlock. PIN code and PUK code are provided by the network operator.
Phone lock	Security setup > Phone lock The preset password is 1122.
Auto keypad lock	Security setup > Auto keypad lock > Select the time for the auto keylock.
Set fixed Dial	Security setup > Fixed dial Switch on/off about this fixed dial function and edit the fixed-dial numbers.
Set Call Filter	Security setup > Blacklist & Whitelist White List: You can set 20 numbers. When this White list is enabled, the phone will reject calls from all numbers except those in the White List. Black List: You can set 20 numbers. When this Black list is enabled, the phone will reject calls from numbers in the Black List.
Change password	Security setup > Change password

8.3 Restore factory default

Menu > Settings > Restore factory settings

You need to input the phone password when you want to restore factory default. The

preset phone password is **1122**. Please bear your password in mind. If you have forgotten, contact the local dealer or an authorized service center.

The newly launched Fun corner from Spice Mobiles for its customers.

9.1 SpiceGang

SpiceGang is a wap portal from where user can download Ringtones, Wallpapers, Animations, Videos and other kind of content.

Step1: Check the GPRS settings for your operator

Step2: Initiate SpiceGang wap portal to browse and download the content

Step3: Charges for download apply as per operator pricing

Explore the whole world of Entertainment with SpiceGang.

9.2 Ibibo

Now connect with the ibibo community on Spice Mobiles. Go and create your profile, search for people based on their age, sex & location, make new friends and send or receive blurbs. Invite your existing friends to join your new community.

The services pre loaded on Spice Phones are Make New Friends, Cool Stuff, Cricket Updates and Free SMS

Please check your GPRS settings before accessing Ibibo.

9.3 Ngpay

What is ngpay?

ngpay is India's first mobile marketplace.

You can use ngpay to buy air & rail tickets, pay your bills, buy movie tickets, shop for books & gifts, do banking, make payments and more from your mobile phone in a fast, simple and secure fashion.

ngpay offers a range of services from it's network of partners view current list. In a simple, consolidated menu, you can discover and choose merchants, banks, or service providers with whom you want to transact.

How can I use ngpay?

Step 1: Register with ngpay

Register with ngpay by providing a few details - name, mobile no & address and a 6 digit ngpay PIN.3

Step 2: Create your “My Services” List

Create a list of your favorite ngpay partners and services. You can always update this list.

Step 3: Transact with your favorite partners

Select any partner from your favorite list and go through the intuitive steps. Once you reach the pay screen while transacting with any partner, pay using a variety of payment instruments. Currently, your regular Visa/MasterCard credit cards and HDFC Bank Account are supported.

Step 4: Retrieve Transaction details

Your transaction details get stored in the ngpay History under the My Profile menu. In addition, ngpay also sends you a SMS and an email with the transaction details.

How safe is Ngpay?

ngpay transactions offer security levels similar to ATM transactions. Once you become a ngpay user, for your security you will need to enter your unique 6-digit PIN, every time you make a payment transaction. This PIN number is NOT stored on your handset, so hacking your stolen handset will not put you at risk.

ngpay's Mobile Wallet is a tamper-proof digital wallet on your phone and it stores your Bank account/card details in an encrypted form. Even if you lose your phone, unauthorized users cannot access ngpay or your payment/banking transactions without your unique ngpay PIN. What's more, you can simply call ngpay Customer Care @ +91 80 67004000 or SMS <your message> to +91 99009 06677, and block ngpay on your phone.

ngpay respects your privacy. ngpay does not store your card / bank information on its servers, neither do we share your personal information with any third party - other than those ngpay Partners that you have selected to use. These Partners may contact you directly for service related issues.

If your mobile goes off during a transaction due to either low battery charge or bad connectivity, rest assured that your credit card will not be debited. Charges are debited to your credit card only on the successful completion of a payment transaction.

For the technically - minded...

ngpay provides 128-bit end-to-end financial grade security from user's handset, through to the application servers. It uses an innovative approach based on the concept of application layer security and has been independently certified for financial transactions.

Note: Please ensure that you have GPRS settings on your phone to use Ngpay application. Contact your operator for GPRS settings.

9.4 Opera Mini

Opera Mini is a fast and compact web browser that allows you to access the Internet on your phone. With Opera Mini, you can use your cell phone to access web sites and

content, including your mail, community sites, news, blogs and more.

Please ensure that you have GPRS settings in your phone to use Opera Mini. Contact your operator for GPRS settings.

9.5 Email2SMS

Emergic Email2SMS is a product of Netcore Solutions Pvt. Ltd. provided by Spice Mobiles. Email2SMS allows you to receive email on your phone via SMS without GPRS. You can Read, Reply, Compose and Forward your emails via SMS. This service is only available for Gmail, Indiatimes and Corporate Account Holders. Spice Mobiles offers FREE subscription for one month.

1. Just send SPICE START <Location> to 575758 to register for Email2SMS service. For composing new mail type NEW <Receiver's Email-Id> S:<Subject> B:<Message> and send it to 575758
2. For replying to any mail type REPLY <Message-Id> <Message> and send it to 575758
3. For replying to all in the mail type REPLY <Message-Id> <Message> and send it to 575758
4. For forwarding the mail type FWD <Message-Id> <Receiver's Email-Id> <Message> and send it to 575758
5. For reading the remaining part of mail type READ <Message-Id> and send it to 575758

NOTE: Message-Id is the number which you get at the end of SMS. i.e., 01,02,03,04

For more details contact Customer Support : Phone : +91 22 6662 8130, Email : cs@m3m.in, Chat ID : e2sms.support@gmail.com, e2sms.support@hotmail.com, e2sms.supp@yahoo.com

9.6 Reuters

Reuters India gives you the latest India, World and Business news and more. Also, get the latest stock market information along with tools like the currency converter and weather in your city on your mobile phone.

The services pre loaded on Spice Phones are Latest News, Weather Check, Currency Details and Free News Alerts.

Please ensure that you have GPRS settings in your phone to open Reuters. Contact your operator for GPRS settings.

9.7 MGurujee

MGurujee is India's leading M-Learning portal delivering unique anytime anywhere mobile phone based learning experience with access to a wide variety of quality knowledge content from market leaders.

The services pre loaded on Spice Phones are Sample Papers, Education Search, Job

Search and Calculator.

Please check your GPRS settings before accessing MGurujee.

9.8 ContactsBackup

This application allows easy transfer and backup of contacts store in your phone / SIM. You can export contact entries by batch to File manager or import them in .vcf format.

Export to file: To export all the entries stored in the phone memory and SIM cards to the "Contacts" folder under File manager. The existing data in this folder will be deleted before exporting.

Import from file: To import all the entries from the "Contacts" folder under File manager to the Phone Book of the phone memory. The entries can't be imported to SIM cards.

9.9 Utilities

Panic Button

Step1: Switch on Panic Button mode.

Step2: Enter the message that you would like to go at the time of Panic or Emergency. The number of characters must be less than 140.

Step3: Add the Mobile Number(s) which will receive the message (that you defined in Step2) at the press of Panic Button. The total numbers cannot exceed 5.

Step4: Come out of the application.

Now whenever you feel uneasy or in case of any emergency long press of 5 key will send the panic message to the mobile numbers defined by you.

Mobile Tracker

Now be sure of your mobile phones with Mobile Tracker offered by Spice Mobiles. This feature allows users to track their phone if they are lost or stolen. Switch on MTracker application and whenever a new SIM is inserted in your phone you will receive a SMS on pre defined numbers.

9.10 Voice Zone

You can use Bhakti Sangeet, Sangeet and Suno Sunao. Please refer to instructions from the menu for more details.

Bhakti Sangeet

Spice Mobiles present Bhakti Sangeet on IVR. Use this portal to listen to your favorite devotional songs at the click of a button, virtually, anytime and from anywhere.

Bhakti Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Sangeet

Spice Mobiles presents Sangeet Portal – One Touch Access to the huge library of songs comprising of 17 languages and over 1 lakh tracks!

Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Suno Sunao

Spice Mobiles brings SUNO SUNAO to its customers. It gives the anonymity, thrill, excitement and above that a chance to speak and listen to the Chat friend!

SUNO SUNAO is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

9.11 Games & Applications

MSudookoo

Have plenty of time with you? Play MSudookoo – the famous game that you used to play in Newspapers - on Spice Phones. It has multiple levels for you. Start with Easy to get a feel of the game and once you get in full flow move to the Hard level.

UFO & Fruit and Game Settings

You can also play other 2 games (UFO and Fruit) in the phone, and change the Game Settings (Sound Effect, etc). Before play, you can view Best grades / scores. You can learn how to play the game from the Game Help menu.

9.12 AfterSpice

AfterSpice is a chain of Spice Service Stations to deliver complete customer satisfaction. Spice is offering SMS based service on 56300 in which you can know the address of your nearest service station by sending a SMS.

Premium SMS charges apply! Please check with your operator.

Use this function to manage the files and folders in extended card storage. Handset does not have internal memory for user. Items can be saved in Memory Card.

- I The files in various formats must be placed in the designated folders, otherwise a failure of the relevant application program will occur:

- E-book files: \Ebook

- Video files: \Video

- Music files such as MP3, midi: \My Music

- Photos and images: \Photos

- Voice records: \Audio

- Bluetooth files: \Received

- I The Ring Tone file formats supported by your phone are MIDI, AMR, WAV, AWB, AIF, AAC and MP3. Ring Tone files can be set as rings for both incoming calls and alarms. The supported picture file formats are BMP, JPG and GIF. Pictures can be used as Wallpaper, Screen Saver, and Photo Caller ID.
- I The supported video file formats are MP4 and 3GP.
- I The supported E-Book file formats are txt and pdb.
- I Downloads options include:
 - Ø Open: Open folders and files.
 - Ø New Folder: Create a new folder.
 - Ø Format: Format the selected disk, phone or memory card.

Tip: The Format function will delete the data you have created and saved. Please back up important data and keep them properly.

Menu > Shortcuts

You can set shortcuts for those functions you often use, and then press **Navigation key (Down)** on idle screen to select a function from the list.

12.1 Taking Photo

The camera function allows you to use the screen as a viewfinder and capture photos by pressing the **OK Key**. The default folder for saving pictures is the “Photos” folder under File manager. If in weak light, such as night or indoor scene, the ISO Sensitivity may increase, which will cause noise or mottle.

Menu > Media Center > Camera:

When the camera is activated, the phone enters the view finding status. Before shooting, you can set the following as needed. Select **Options >**

Image viewer: enter the photos.

Camera settings: set shutter sound, EV, Banding, delay timer, and cont. shot.

Image settings: set the size and quality of photos.

White balance: set White Balance.

Scene mode: set scene mode.

Effect settings: set the special effects of photos, such as Grayscale, Sepia, Sepia Green, etc.

Add frame: select whether to add a frame for a photo. It is valid only when the photo size is 176*220 pixels.

Restore default: restore default settings.

Tip: Some settings above-mentioned are displayed on the view finding screen with icons, such as .

12.2 Image Viewer

Menu > Media Center > Image viewer

Or on the view finding screen, select **Options > Image viewer**

The phone will automatically read the entries with the format supported by the phone under the folder “Photos” of File manager and display a list of entries. If there is no entry, the list is blank.

On the Image viewer list screen, select **Options>**

View: view the highlighted photo.

Browse style: select the style of viewing.

Use: set the highlighted photo as wallpaper, screen saver, or the photo caller ID of a Phone Book entry.

Send: send the photo by MMS or Bluetooth.

Rename: rename the highlighted file.

Delete: delete the highlighted file.

Delete all files: delete all the files from the list.

Sort by: sort the files in the list.

12.3 Video Recorder

With this function you can easily create your own video clips. If in weak light, such as night or indoor scene, the ISO Sensitivity may increase, which will cause noise or mottle.

Menu > Media Center > Video recorder

On the view finding screen, press **Navigation key (Left/Right)** to adjust the EV value (0 ~ +/-4); press **Navigation key (Up/Down)** to adjust the Optical Zoom Ratio (1.0 ~ 4.0).

Press **OK Key or 0 key** to record. When recording, press **Ok Key or 0 key** to pause the recording, and press **OK Key or 0 key** again to resume recording.

Before recording, you can set the following as needed. Select **Options >**

To player: enter video player.

Recording settings: set White Balance, EV, Night Mode and Banding.

Video settings: set the Video Quality, File size limit/Rec time limit, and record audio.

Effect settings: set the special effects, such as Grayscale, Sepia, and Sepia Green etc.

Restore default: restore default settings.

12.4 Video Player

Menu > Media Center > Video player

Or, on the view finding screen, select **Options > To player**

The phone will automatically read the entries with the format supported by the phone under the folder "Video" of the File manager and display a list of entries. If there is no entry, the list is blank.

On the video player list screen, select **Options >**

Play: To enter the play screen of the highlighted file.

I Press **Ok key** to begin playing; press **Stop** to end the playing. When playing, press **OK key** to pause/resume the playing.

I Press ***/# key** to adjust the volume; press **Navigation key (Up/Down)** to adjust playing speed; press **Navigation key (Left/Right)** to adjust the progress, press **Send key** to snap the screen and save the picture automatically; press **1 key** to rotate the screen clockwise by 90° to realize full-screen play or restore the normal status.

I Select **Option > Video Settings** to set brightness, contrast and repeat mode for video.

I Select **Option > Bluetooth Settings** to set whether to active BT Stereo Output, and select BT Stereo Headset.

Send: send the video by MMS or Bluetooth.

Rename: rename the highlighted file.

Delete: delete the highlighted file.

Delete all files: delete all the files from the list.

Sort by: sort the files in the list.

12.5 Audio Player

The Audio Player can play audio files in MP3/AWB/AMR/WAV/MIDI/AIF/AAC format stored in "My Music" folder under File manager.

Menu > Media Center > Audio player

Create Play list

Before enjoying music for the first time, you need to create a playlist. You may create a playlist with either Auto Update or Manual Update:

I **Auto Update**

1. In Player Settings, set List Auto Gen On.
2. On the playlist screen, select Options > Refresh List.
3. The phone will search in the "My Music" folder under File manager and add supported audio files to the playlist automatically.

I **Manual Update**

1. In Player Settings, set List Auto Gen Off.
2. On the playlist screen, select **Options > Add/Remove/Remove All**.
3. Add new tracks from File manager, or delete tracks from the playlist.

How to play

The Play, Stop, Back, Forward functions correspond to the **Navigation key (Up, Down, Left, Right)** respectively. Select **List** to access the play list, and then select **Options** to perform the following functions: play, view details, add to ringtones, settings and so on.

Tip: Press the **Navigation key (Left, Right)** to skip to the previous/next song. For rewind or fast-forward, you need to press and hold these two keys.

Add to Ringtones

Rings are the list of ringtones selectable in the profile mode setup. You can select a single track and add it to the Rings.

On the play list screen, select a track and select **Options > Add to ringtones**

12.6 Sound Recorder

Menu > Media Center > Sound recorder

On the Sound Recorder list screen, you can select:

Record: begin recording. The recordings will be saved in the folder "Audio" under the File manager automatically.

Play: play the highlighted recording.

Append: continue to record the highlighted recording. (The format must be AMR, VM or AWB).

Rename: rename the highlighted recording.

Delete: delete the highlighted recording.

Delete all files: delete all the recordings from the list.

Settings: set the format of the recording.

Use: send the highlighted record to the ringtone list of profiles.

Send: send the highlighted record by MMS or bluetooth.

12.7 Java

You can install Java applications to enhance the multimedia capability of your phone.

- I Download the applications via the phone's WAP browser and the system will automatically install the software. Choose **Menu > Media Center > Java > Run Java > Run Java** to find and run it.
- I You can also download the applications to a PC and transfer them to your phone via

the USB data cable. Then enter File manager to select an application and choose **Options > Install**. After installation is complete, you can choose **Menu > Media Center > Java > Run Java** to find and run it.

12.8 FM Radio

Menu > Media Center > FM radio

The Headset needs to be plugged in for using the FM Radio.

Edit the channel list manually:

Options > Channel list

Options > Edit

Edit the channel list automatically:

Options > Auto Tunning

Play on the background

Options > Settings

Set the function **On** or **Off**.

Listen in by speaker:

Options > Settings

Set the speaker **On**.

When Playing:

Navigation key (up): Play/Stop.

Navigation key (Left/Right): search for the previous/next channel on search mode or adjust the frequency length by length.

Navigation key (down): Set the search mode **on** or **off**.

12.9 Schedule FM Recording

Menu > Media Center > Schedule FM recording

This phone provides 4 FM recording schedules. Set your desired recording times in the display menus. The phone will start recording FM at the time you have scheduled. The recordings will be stored in "Audio" folder under File manager.

Menu > User profiles > Desired mode

1. **Activate**

2. **Customize**

I Tone setup: Includes Incoming Call, Event alarm, Power on, Power off, Message Tone, Keypad tone. You can select built-in ring tunes, or the tunes composed by yourself.

I Volume: Includes the volume setting of Ring tone and Key tone. The volume degree is from 1 to 7.

I Alert type: Ring, Vibrate Only, Vibrate and Ring, Vibrate then Ring, Light Only.

I Ring type: Single, Repeat, and Ascending.

I Extra tone:

-- Warning: If necessary, you will be warned by the prompt tone.

-- Error: You will be warned by a tone if you make a mistake.

-- Camp On: A prompt tone will be heard after searching the network successfully.

-- Connect: A prompt tone will be heard after getting through to the dialed number.

I Answer Mode:

-- Any key: Press any key to answer a call (Except of **End key** and **Right soft key**)

-- Auto answer: When using the Headset, Auto Answer can be selected. The phone will answer the incoming call automatically.

Tip1: When you insert the earphones, the earphone mode will be activated automatically.

Tip2: On idle screen, long press # **key** can activate the silent mode or return to the previous mode.

Tip3: The phone has preset 8 religious profiles, and cannot be deleted. Whenever you switch on your phone, you can choose whether to activate religious profile or not. If a certain religious profile is activated, the corresponding God's wallpaper will become default wallpaper, the background image of UI will also become them and the corresponding Singtone will become default Signtone.

Tip4: You can also create your own Profile, and it will be CUSTOMIZABLE but NON-DELETABLE profile. You can add a new picture and singtone from the File Manager.

14 Organizer

Functions	Description
View the calendar	Menu > Organizer > Calendar
Add To do	Menu > Organizer > To do Options > Add Or: Menu > Organizer > Calendar Options > Add task
View the events in the To do	Menu > Organizer > To do Options > View Or: Menu > Organizer > Calendar Options > View tasks
Set the Alarm	Menu > Organizer > Alarm > Edit
World Clock	Menu > Organizer > World clock

Calculator	Menu > Extra > Calculator
Currency Converter	Menu > Extra > Currency converter Input the exchange rate and Press OK . Select the exchange rate, input the figure and press OK .
Stopwatch	Menu > Extra > Stopwatch > Typical stopwatch > Split timing/Lap timing / View record Menu > Extra > Stopwatch > nWay stopwatch
E-Book Reader	Menu > Extra > E-Book reader You can select this option to read text. This text reader only supports TXT format. The default one is "txt format file" under the "Ebook" folder in the memory card.

Menu > Extra > Bluetooth

- I Your phone includes built-in Bluetooth technology compliant with Bluetooth Specification 2.0 supporting the following profiles: Hands-free Profile, SPP Profile, OPP Profile, FTP Profile, A2DP Profile, AVRCP Profile, and HID Profile.
- I You can connect wirelessly to other compatible devices with Bluetooth technology. Compatible devices may include hands-free Bluetooth devices, Bluetooth-compatible PCs or other Bluetooth phones. Via a Bluetooth connection, you can exchange images, music and sound clips, video clips, and vCards or vCalendars.
- I The usage of Bluetooth may discharge the phone's battery more quickly than normal usage.
- I You can choose the following Bluetooth operations in the options menu:
 - ∅ Power: To activate and deactivate Bluetooth. Highlight it and select On or Off.
 - ∅ Inquiry audio device: Search and select the Bluetooth device externally connected. If your phone can find any available device, the list of found devices will be displayed on the screen. You can select one of them for connection and pairing. While pairing, you need to exchange password. After successful pairing, this device will be added to the device list.
 - ∅ Remote control: Use your phone as a remote control device to control computer applications such as a media player or Microsoft PowerPoint presentations. Your computer must support Bluetooth HID Profile.
 - ∅ My device: You can select this option to view the previously paired devices. All paired devices will be listed here to enable you to have the following operations: Connect, Rename, Authorize, Delete, Delete all, Service all. To search for a new device, select **Inquiry new device**.
 - ∅ Active devices: All Bluetooth devices at connecting will be shown in this list. Users can choose any one of the devices to disconnect it.
 - ∅ Settings:
 - Visibility: Enable other Bluetooth devices to find your phone; other Bluetooth devices may not be able to detect your phone if you deactivate it.

- Change device name: Define the name of your phone, which will be displayed in other Bluetooth devices when connected.
 - Authentication: If you have no active pairings in the "My Device" list and Authentication is activated, the password is required when transmitting files between your phone and other devices or when the phone is connected to other devices as the FTP server (that is sharing files with other devices via FTP)
 - Audio path: To choose the call voice through the phone or the BT headset.
 - Block list: In My device, if you set one device to "Always reject", it will be listed here.
 - FTP settings: Set the share your phone's folders and the access permissions of other Bluetooth devices.
- Ø About: Shows information on using Bluetooth. The device name, the device address and the supported services will be displayed.
- I Send objects through Bluetooth: After you select to send files through Bluetooth, your phone will automatically search for available Bluetooth devices. Select the target device in the list and begin data transmission. The Bluetooth will be automatically disconnected after the transmission is completed.
 - I Receive data through Bluetooth: When other Bluetooth devices need to transmit data to your phone, the phone will give out a prompt asking whether you agree to receive the data, and then it will save the data to the preset directory. The Bluetooth will be automatically disconnected after the transmission is completed.

16.1 STK Services

If your SIM card supports STK, you may use the corresponding value-added services.

16.2 WAP Browser

Menu > Services > WAP

You need to make the relevant settings in WAP Setup before you use the WAP browser to surf the web.

When the WAP browser is activated, if a homepage is set in WAP Setup, the phone will link the website indicated by the homepage; otherwise, you may input a website and the phone will connect to it.

When surfing the web, select **Options >**

Refresh: To refresh the web page.

Stop: To stop loading a web page.

Forward/Backward: To turn to the next /previous page.

Homepage: To link the homepage.

Input URL: input a website.

Add Bookmark: Add to bookmark.

Set Homepage: set the URL as homepage.

Advance: Show URL info, Bookmark, Save item.

Exit: To exit the browser.

16.3 WAP Setup

WAP settings are required for surfing the web with WAP.

Menu > Services > WAP Setup

You can set the following:

Account: To select from the GPRS connection list.

Connection type: To set WSP or HTTP connection mode.

Home page: To set the address of the homepage. The phone has a default and you can modify it.

16.4 Connection setup

Edit the relevant information about GPRS (network services). You have at most 10 accounts available to be set.

17 Maintenance

Use a dry soft cloth to wipe general dirt. For a large amount of dirt, use a soft towel soaked with neutral scour and twisted to gently wipe the dirt and use a dry soft cloth to wipe the phone.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched, change color or fade.

18 Troubleshooting

If any problem occurs in your phone, please refer to the help information in the table below. If the problem continues, contact the dealer.

Problem	Possible Causes	Solutions
Unable to switch on	Is the battery power low?	Charge the battery.
	Do you press Power key for adequate time?	Press Power key for over 2 seconds.
	Is the battery inserted correctly?	Insert the battery correctly.
Unable to make a call	Is the phone outside of the service area?	Move to a place where signal can be received strongly.
	Is the phone number correct?	Check that the number is correct.
Communication interrupted suddenly	Are you in a place with weak signal?	Move to a place with strong signal.
	Is there any object around that obstructs signal transmission?	Go to another place.
	Are you moving in high speed during conversation?	The signal will interrupt when the phone switch between 2 cell station. Please move in low speed.
Unable to charge the battery	Is the charger plugged to the phone correctly?	Plug the charger to the phone correctly.
	Is the power cable of the charger disconnected from the socket?	Check the connection.
	Is the battery too old?	Contact the seller to replace the phone with a new battery.
Insert the SIM card	Do you insert the SIM card correctly?	Please insert the SIM card correctly.
	Is the SIM card connector dirty?	Please clean the SIM card.
	Is the SIM card damaged?	Please check the SIM card and return it to the service provider.

19 After Services

For details, see the After Sales Service List provided with the phone.

20 Inputting Text

This handset supports 2 languages – English and Hindi. The phone provides several input methods including ABC input, abc input, T9ABC input, T9abc input, 123 input and Hindi input. Press # key to switch input methods.

20.1 Keypad mapping

Input method	key	Characters or functions
abc/ABC	1	Display frequently used symbols
	2	a/b/c/2 (A/B/C/2)
	3	d/e/f/3 (D/E/F/3)
	4	g/h/i/4 (G/H/I/4)
	5	j/k/l/5 (J/K/L/5)
	6	m/n/o/6 (M/N/O/6)
	7	p/q/r/s/7 (P/Q/R/S/7)
	8	t/u/v/8 (T/U/V/8)
	9	w/x/y/z/9 (W/X/Y/Z/9)
	0	space, 0 Display frequently used symbols
	*	Display symbols
	#	Switch input methods
123	0~9	0~9
	*	Display symbols
	#	Switch input methods
T9abc/T9ABC	2~9	Multitap input, display dynamic English words for your choice.
	*	Display symbols
	#	Switch input methods
Hindi	1~9	Enter hindi characters
	0	space, 0
	*	Display symbols
	#	Switch input methods

20.2 ABC/abc Input Method

We now describe how to input “OK” with ABC input method.

1. Press # key to switch to ABC input method.

2. Press **6** thrice to input "O".
3. Press **5** twice to input "K".

20.3 To input digits

Press **# key** to switch to 123 (Digits) input method. Press the corresponding number keys to input digits.

20.4 To input symbols

Press *** key** to enter the symbol list.

When ABC/abc/T9ABC/T9abc input method is used, you can press **1** to input frequently used symbols and press **1** repeatedly to select symbols.

20.5 T9 Input Method

1. Press **# key** to switch to T9 input method (T9 ABC/T9abc).
2. Press the key corresponding to the letter you want to input (press a key only once for each letter), and T9 will match the most similar words and highlight the letter being input. If, after the last letter is input, T9 has matched words, the edit section will display the words normally and the **Left Soft-key** will be changed to **Select** for you to confirm inputting. Use **Navigation key (Left/Right)** to switch the various words for the input letters.
3. When the input letters match a word correctly, press **Select** to confirm inputting the word. You can also press **0 key** to add a space and begin the next word.

21 Spice Mobiles SMS Services

Dear Customer, Congratulations for being a proud owner of a SPICE Mobile phone.

With a view to facilitate search and discovery of mobile content, SPICE Mobile has introduced an SMS short code which is 56300.

Just type SPHELP ("SP" here stands for SPICE) and send the SMS to 56300 to discover content menu available.

Alternatively, listed below are some of the exciting infotainment services which are readily available on 56300. So what are you waiting for! Just go ahead and Spice Up your mobi-life.

1. **SPJOKE:** Kick start your day in relaxed & light mood by receiving our jokes in your mobile through SPJOKE service. User type SPJOKE & send to 56300.
2. **SPCRIC:** Know minute by minute Cricket score of your favorite Teams through our Live SPCRIC service. User type SPCRIC & send to 56300.
3. **SPNEWS:** Be the first to know what is happening all around the world through our SPNEWS service. User type SPNEWS & send to 56300
4. **SPOSHO:** Get Osho Quotes & change your existing mind block & get guidance to achieve inner peace through our SPOSHO service. User type SPOSHO & send to 56300
5. **SPWORD:** Carry dictionary in your mobile & get word powered daily through our SPWORD service. User type SPWORD & send to 56300
6. **SPHORO:** Janiye apne grahon ki dasa through our SPHORO Service. User type SPHORO & send to 56300
7. **SPEXAM:** Get tips on how to attempt your test questions and score more though our SPEXAM service. User type SPEXAM & send to 56300
8. **SPGK:** Know interesting facts of this world & enhance your knowledge through our SPGK Service. User type SPGK & send to 56300
9. **SPPAGE3:** Who is dating Akshay these days know all the Bollywood happenings through our SPPAGE3 service. User type SPPAGE3& send to 56300