

# **Trium**

## **MONDO**

### *Pocket PC*

## Directions for use

**ENGLISH**

This guide describes the operation of GSM or GSM/GPRS Trium Mondo telephones.  
Edition 1, 2001.

© Mitsubishi Electric Telecom Europe, 2001

Whilst every effort has been made to ensure the accuracy of the instructions contained in this guide, Mitsubishi Electric reserves the right to make improvements and changes to the product described in this guide and/or to the guide itself, without prior notice.

Microsoft® Windows® Powered Pocket PC

Microsoft, ActiveSync, Outlook, Pocket Outlook, Expedia, AutoRoute Express, MapPoint, Windows, and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.









## Table of contents

• <b>Composition of the Mondo pack</b>	<b>4</b>	• <b>Use of the stylus and the jog wheel</b>	<b>17</b>
• <b>Presentation of the unit</b>	<b>5</b>	- Regular use of the stylus	17
• <b>Introduction</b>	<b>8</b>	- Additional uses of the stylus	17
• <b>General safety</b>	<b>8</b>	- Use of the jog wheel	18
• <b>Vehicle safety</b>	<b>9</b>	• <b>Power supply - Batteries</b>	<b>19</b>
• <b>Care and maintenance</b>	<b>9</b>	- Battery charge indicators	19
• <b>Your responsibility</b>	<b>9</b>	- Recharging the battery	19
• <b>Security codes</b>	<b>10</b>	- Replacing a discharged or used battery	21
• <b>Code supplied by the airtime service provider</b>	<b>10</b>	- Replacing the backup battery	22
• <b>Code supplied by the manufacturer</b>	<b>10</b>	- Use of the batteries and safety instruction	23
• <b>Emergency calls</b>	<b>11</b>	• <b>The Telephone Application</b>	<b>24</b>
• <b>Disposing of waste packaging</b>	<b>11</b>	1- First steps	24
• <b>Battery use and safety information</b>	<b>11</b>	2- Data transfer	30
• <b>Battery disposal</b>	<b>11</b>	3- SMS	35
• <b>Commissioning</b>	<b>12</b>	• <b>MICROSOFT Applications</b>	<b>43</b>
- Insertion of the SIM card and the battery	12	- Addition and deletion of Applications	44
- Insertion of the backup battery	13	- Connection to the Internet	44
- Initial charging of the battery	14	- Infrared data transfer	44
- Alignment of the touch screen	15	• <b>Appendix</b>	<b>45</b>
- Use of the stylus	15	- Accessory: The Personal Handsfree	45
- Location and time zone	16	- Trouble shooting	46
- Opening / closing the Telephone application	16	- Guarantee	46
- Standby / reactivation of the screen	16	- Declaration of compliance	48

# Composition of the Mondo pack


- 1- The Mondo and its stylus.
- 2- Backup battery.
- 3- Battery.
- 4- AC adaptor.

- 5- Desk top support.
- 6- Personal Handsfree.
- 7- Protective carry case.

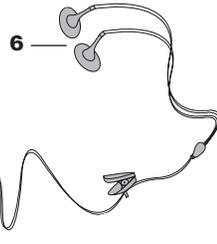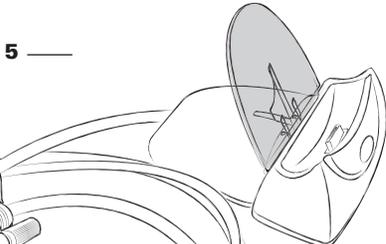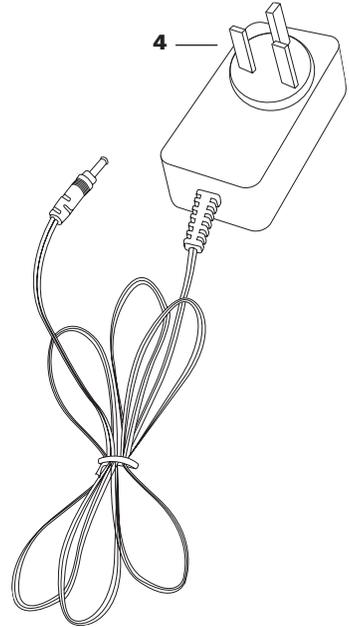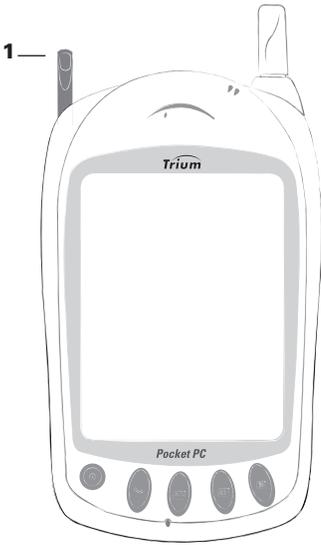

## Presentation of the unit

Figure 1 :

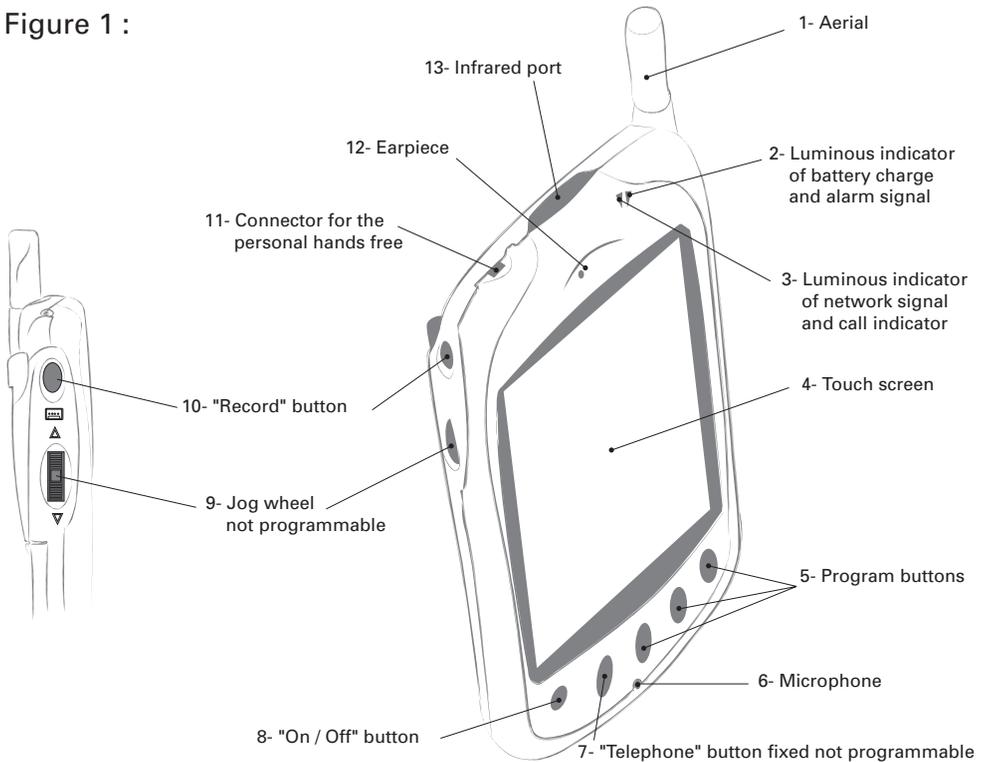

1- Aerial.

2- Luminous indicator of battery charge and alarm signal:

- **Flashing orange (rapid):** battery recharging in progress.
- **Continuous orange:** recharging finished.
- **Flashing green (rapid):** alarm signal from the diary (wake-up, reminder, etc.).

3- Luminous indicator of network signal and call indicator:

- **No light:** the Telephone application is closed.
- **Flashing red (slowly):**  
the Telephone application is open, but you are not receiving any signals from the GSM network. It is impossible to make or receive a call from where you are.
- **Flashing green (slowly):**  
the Telephone application is open. You are receiving a network signal. You may make or receive a call.
- **Flashing orange (slowly):**  
a person is calling you, you have not replied to the call, or you have received a message (voice or SMS).

#### 4- Touch screen.

#### 5- Program buttons:

These buttons enable you to have rapid access to your three favourite applications. The applications programmed by default are **Microsoft Inbox** (left hand button), **Microsoft Diary** (centre button) and **Microsoft Contacts** (right hand button).

If you wish, you may modify the initial programming of these three buttons.

#### 6- Microphone.

#### 7- "Telephone" button fixed not programmable:

##### ➤ When the telephone is not in use:

Press for a short time to open the Telephone application.

Press for a long time to close the Telephone application.

##### ➤ When you receive a call (whether password protection is enabled or disabled):

Press briefly to take the call.

##### ➤ When connected:

Press briefly to hang up.

#### 8- "On / Off" button:

To close down or reactivate the screen of your Mondo.

#### 9- Jog wheel not programmable:

##### ➤ When you receive a call:

Press the wheel to take the call if you want to.

Push the wheel upwards to refuse the call.

Push the wheel downwards to stop the ringing tone before answering.

##### ➤ During the call:

Press the wheel to hang up when you want to end the call.

Push the wheel upwards to increase the volume of reception.

Push the wheel downwards to decrease the volume of reception.

##### ➤ When the screen saver of the telephone application is displayed (outside of a call):

Press the jog wheel to see the list of the last 10 numbers dialled.

##### ➤ In all other cases:

Push the jog wheel upwards or downwards to scroll through the menus or the folders.

Press the wheel to make your selection or to call the telephone number entered or selected.

#### 10- "Record" button:

##### ➤ Press the button for a short time to take written notes.

##### ➤ Keep the button pressed down to carry out a voice recording, or to record a telephone call (recording stops when you release the button).

#### 11- Connector for the Personal Handsfree:


Allows your Mondo to be connected to a personal hands free.

#### 12- Earpiece.

#### 13- Infrared port:

To exchange data with other Windows applications at the speed of 115.2 Kb per second.

Figure 2 :

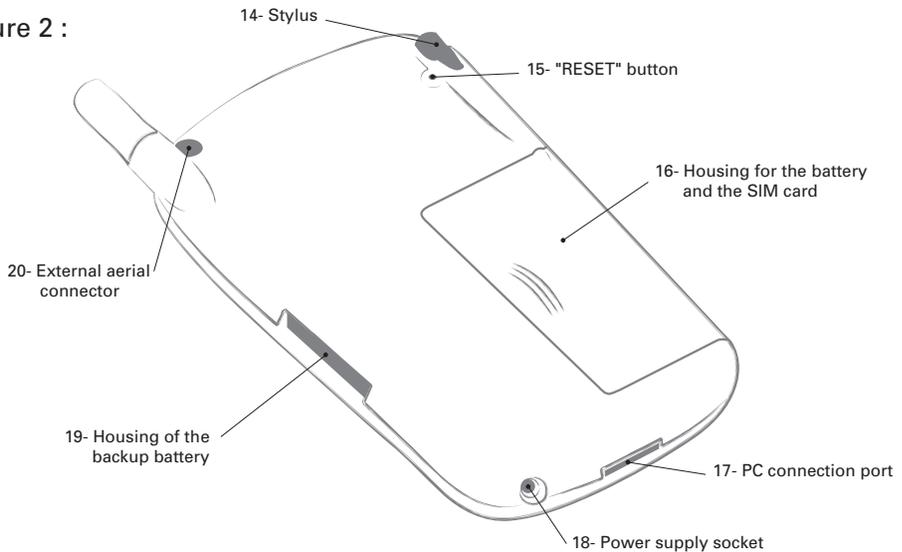

**14- Stylus:**

For selecting items in the lists which are displayed on the screen, validate your selections, move objects or write on the touch screen.

When the stylus is in its housing, the cover of the battery compartment is locked.

Use your fingernail to extract the stylus from its housing.

**15- "RESET" button:**

If required, press on this button with the point of the stylus to re-initialise your Mondo.

**16- Housing for the battery and the SIM card:**

Remove the stylus from its housing to unlock the cover and gain access to the battery.

**17- PC connection port:**

For connecting your Mondo to the desk top support (supplied) and / or to your computer.

**18- Power supply socket:**

For recharging the battery of your Mondo with an AC adaptor (supplied).

**19- Housing of the backup battery:**

If your main battery should become completely discharged, this backup battery avoids you losing your data while waiting to re-establish the power supply.

**20- External aerial connector.**

## Introduction

Thank you for purchasing a GSM or GSM/GPRS Trium Mondo telephone. The mobile telephone described in this guide is approved for use on both the GSM 900 and 1800 networks. Services and display messages may be different dependant upon your operators implementation.

As with all types of radio transceivers this mobile telephone and PDA emits electromagnetic waves and conforms to international regulations if it is used under normal conditions and in accordance with the safety and warning messages given below and on pages 10, 11, 12 and 17.

## General safety

It is important to follow any special regulations regarding the use of radio equipment, due to the possibility of radio frequency, RF, interference.

Please follow the safety advice given below.



Before boarding an aircraft, close the Telephone application of your Mondo and activate the **Safety mode** (for more details, see page 29). The use of mobile telephones in an aircraft may endanger the operation of the aircraft, disrupt the cellular mobile phone network and is illegal. Failure to observe this instruction may lead to suspension or denial of mobile telephone services to the offender, or legal action, or both.



Close the Telephone application of your Mondo when at any refuelling point or near inflammable material.



Close the Telephone application of your Mondo and activate the **Safety mode** (see page 29) in hospitals and any other place where medical equipment may be in use.



Respect restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress.



There may be a hazard associated with the operation of your Mondo (with the Telephone application activated) close to inadequately protected personal medical devices such as hearing aids and pacemakers. Consult your doctor or the manufacturers of the medical device to determine if it is adequately protected.



The use of the Telephone application of your Mondo close to other electronic equipment may also cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers recommendations.



Avoid prolonged contact between the aerial and your skin while the Telephone application of your Mondo is open.

This apparatus is intended for use only when supplied with power from AC/DC adaptor chargers (MA0506, MA0567), desk top charger (MA0519), and cigar lighter charger (MA0566).

Use of any other charger or adaptors will invalidate any approval given to this apparatus and may be dangerous.

## Vehicle safety

- Respect national regulations on the use of mobile telephones in vehicles.
- Road safety always comes first! Always give your full attention to driving.
- Do not use a handheld phone whilst driving. If you don't have a handsfree car kit, stop and park your vehicle safely before using your phone.
- If incorrectly installed in a vehicle the operation of mobile telephones could interfere with the correct operation of the vehicle electronics, such as ABS anti-lock brakes or air bags. To avoid such problems ensure that only qualified personnel carry out the installation. Verification of the protection and operation of the vehicle electronics should form part of the installation. If in doubt consult with the manufacturer.
- Do not place the phone on the passenger seat or where it could break loose during sudden braking or a collision. Always use the holder.
- The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

## Care and maintenance

This mobile telephone and PDA is the product of advanced engineering, design and craftsmanship and should be treated with care. The suggestions below will help you to enjoy this product for many years.

- Do not expose the phone to any extreme environment where the temperature or humidity is high.
- Do not expose or store in cold temperatures. When the phone warms up after switch on, to its normal temperature, moisture can form inside where it may damage the electrical parts.
- Do not attempt to disassemble the phone. There are no user serviceable parts inside.
- Do not expose the phone to water, rain or spilt beverages. It is not waterproof.
- Do not abuse this phone by dropping, knocking or violent shaking. Rough handling can damage it.
- Do not clean the phone with strong chemicals or solvents. Wipe it only with a soft, slightly dampened cloth.
- Do not place the telephone alongside computer discs, credit or travel cards or other magnetic media. The information contained on discs or cards may be affected by the phone.
- Do not connect incompatible products. The use of third party equipment or accessories, not made or authorised by Mitsubishi Electric, may invalidate the warranty of your phone and may be a safety risk.
- Do not remove the labels. The numbers on it are important for service and other related purposes.
- Do contact an authorised service centre in the unlikely event of a fault.

## Your responsibility

This GSM mobile telephone and PDA is under your responsibility. Please treat it with care respecting all local regulations. It is not a toy therefore keep it in a safe place at all times and out of the reach of children.

Try to remember the phonelock and PIN codes associated with the use of this phone. Become familiar with and use the security features to block unauthorised use if your phone and/or SIM card are lost or stolen. Call your service provider immediately to prevent illegal use.

When you are not using the telephone, close the Telephone application of your Mondo and activate the **Safety mode** if necessary.

## Security codes

The phone and SIM card are delivered to you pre-programmed with codes that protect the phone and SIM card against unauthorised use.

When requested to enter any of the codes, key in the number (appears as \* asterisks in the display) and click on **ok**.

Keying mistakes can be erased by pressing **Clear**.

If you enter the wrong code an appropriate message will be displayed.

### Codes supplied with the SIM card are:

#### ➤ PIN and PIN2 codes (4-8 digits)

The PIN (Personal Identity Number) is supplied with all SIM cards and protects the card against unauthorised use.

The PIN2 code, supplied with some SIM cards, is required to gain access to some features in the phone (such as fixed dialling numbers) for which another level of security is required.

If **Enter PIN:** appears in the display, enter the code and click on **ok**.

Entering the wrong PIN code three times in succession will disable the SIM card and the message **SIM Blocked. Enter PUK:** will appear in the display. To unblock the SIM you will need the PUK (PIN Unblock Key) code, obtainable only from your service provider.

#### ➤ PUK and PUK2 codes (8 digits)

The PUK code is supplied with the SIM card and is used to unblock a disabled SIM card.

When requested enter the PUK code and click on **ok**. You will be requested to reset the PIN code. Follow the instruction in the display.

The PUK2 code is required to unblock the PIN2 code.

## Code supplied by the airtime service provider

#### ➤ Call barring password (4 digits)

This password is used to bar various types of calls, made or received, from the phone.

#### ➤ Voice mail password

This password protects you against unauthorised access to your voice mail.

## Code supplied by the manufacturer

#### ➤ Phonelock code (4 digits)

This code is set to all zeros on delivery and is user re-settable. Once changed it cannot be identified by the manufacturer over the phone.

It is strongly recommended that you remember and make yourself familiar with the purpose and operation of these codes.

## Emergency calls

In Europe, provided the phone has GSM service, emergency calls can be made using the European standard emergency number, **112**. Emergency calls can even be made if the phone is PIN or electronically locked or call barred. In some countries local emergency numbers can still be used for emergency purposes but the phone may have to contain a valid SIM card.

When making an emergency call remember to give all the necessary information as accurately as possible. The phone may be the only means of communication at the scene of an emergency therefore do not cut off the call until told to do so.

Mobile phones rely on wireless and landline networks which cannot be guaranteed in all conditions. Therefore you should never rely solely on wireless phones for essential emergency communications.

## Disposing of waste packaging

The packaging used for this phone is made of recyclable materials and as such should be disposed of in accordance with your national legislation on the protection of the environment.

Please take care to separate the cardboard and plastic elements and to dispose of them in the correct manner.

## Battery use and safety information

- A battery can be charged hundreds of times but will gradually wear out. When the operating time (standby and talk time) is noticeably shorter than normal it is time to buy a new battery.
- Do not leave batteries connected to a charger longer than necessary, overcharging will shorten battery life.
- Disconnect battery chargers from the power source when not in use.
- Do not expose batteries to high temperatures or humidity.
- Do not dispose of the batteries in fire. They may explode.
- Avoid putting the batteries into contact with metal objects which may short circuit the battery terminals (e.g. keys, paper clips, coins, chains etc).
- Do not drop or subject the batteries to strong physical shocks.
- Do not try to disassemble any of the battery packs.
- Use only the recommended battery chargers (see page 8).
- If the battery terminals become soiled, clean them with a soft cloth.
- It is normal for batteries to become warm during charging.
- Old batteries must be returned to the place of sale or to a place where used batteries are properly disposed of. Do not dispose of old batteries together with household waste.

## Battery disposal

In compliance with European environmental protection directives, used batteries must be returned to the place of sale, where they will be collected free of charge.

Don't throw away your batteries in your household waste.

Mitsubishi Electric is not responsible for the data stored in the product and is not responsible for the loss of data stored in the product during repairs.  
You must save your data before sending the product for After Sales Service.

## Commissioning

You have just acquired your Mondo.

Before using it, you must first carry out the following operations, in the order in which they are listed below:

### • Insertion of the SIM card and the battery

1- Remove the stylus from its housing (fig.1).

*This operation is necessary to unlock the cover of the battery housing.*

2- Remove the battery housing cover (fig.2).

3- Open the SIM card holder (fig.3).



4- Insert the SIM card into its holder (fig.4).


▣ **PLEASE NOTE:** The SIM card must be positioned in its holder with the gold contacts downwards and the cut corner on the right, as shown in figure 3.

5- Close the SIM card holder (fig.5).

6- Insert the battery in its housing (fig.6).

7- Replace the battery housing cover (fig.7).

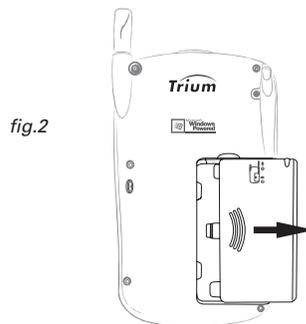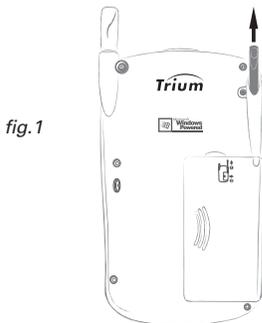

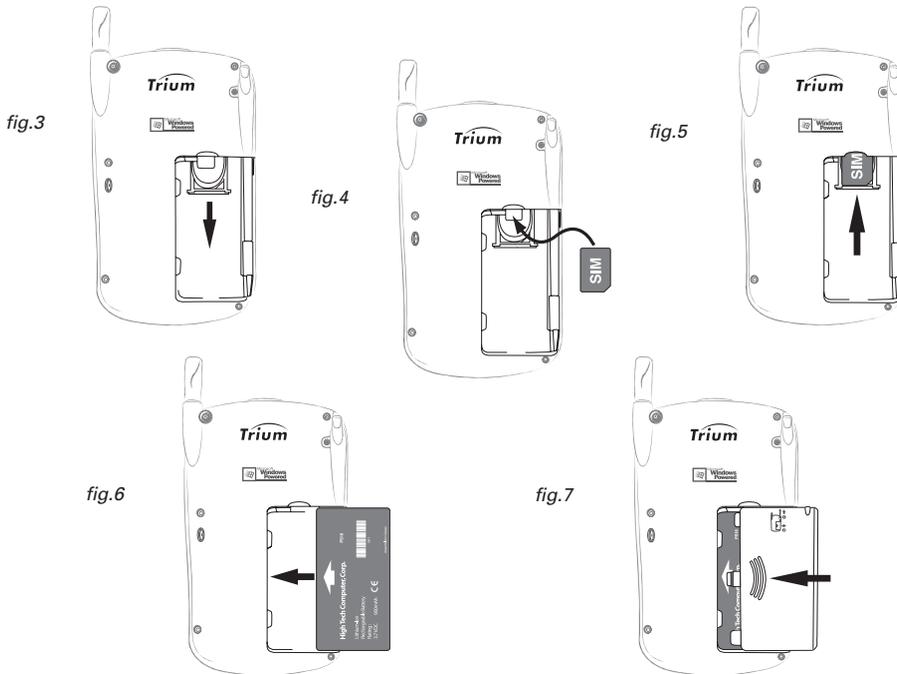

## • Insertion of the backup battery


◆ **IMPORTANT:** This operation must only be carried out **after** the insertion of the battery (see above).

1- With the point of the stylus, lift up the cover of the backup battery housing (fig.1).

2- Insert the backup battery in its housing (fig.2).

■ **PLEASE NOTE:** The positive pole (+) of the battery must be turned towards the front face of the Mondo.

3- Close the cover and return the stylus to its housing.

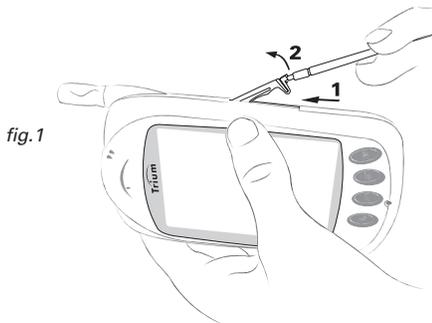

## • Initial charging of the battery


▣ **PLEASE NOTE:** The instructions below only apply to the first time the battery is charged. To find out how to proceed for later recharges, see the corresponding section of this manual, on page 19.

The initial charging of the battery may be carried out by means of the AC adaptor on its own, or with the desk top support (supplied).

◇ We recommend that you wait for the battery to be fully charged (3 to 4 hours) before using your Mondo for the first time.

### - To charge the battery of your Mondo using the AC adaptor on its own:

1- Insert the plug (a) of the AC adaptor into the power supply socket (b) of the Mondo (fig.1).

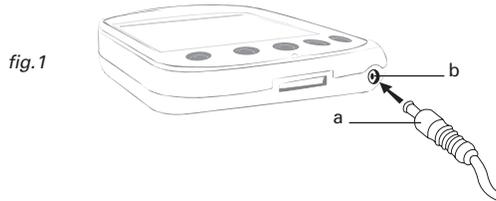

2- Connect the AC adaptor to a mains socket and switch on.  
*The luminous battery charge indicator will flash orange.*



3- When the indicator becomes **continuous orange**, the battery is charged.  
*Do not forget to switch off the mains and unplug the AC adaptor from the mains.*

### - To charge the battery of your Mondo using the desk top support:

1- Insert the plug (a) of the AC adaptor into the power supply socket (b) of the desk top support (fig.2).

2- Insert your Mondo into the desk top support (fig.3).

▣ **PLEASE NOTE:** The desk top support supplied is fitted with a serial cable and plug which you may connect to your computer to exchange data (for more details, see page 43). For the moment, there is no need to make this connection.

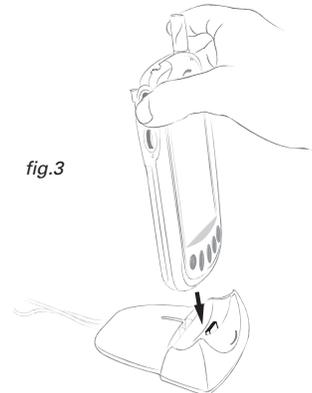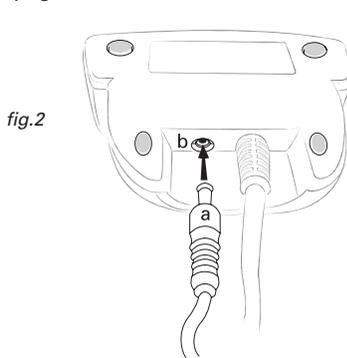

3- Connect the AC adaptor to a mains socket and switch on.  
*The luminous battery charge indicator will flash orange.*

4- When the indicator becomes **continuous orange**, the battery is charged.  
*Do not forget to switch off the mains and unplug the AC adaptor from the mains.*

### - States of the charge indicator of the Mondo (reminder):

- **Flashing orange:** Charging is in progress.
- **Continuous orange:** Charging is finished.

### **Safety instructions:**

- Do not leave your Mondo connected to the AC adaptor any longer than necessary.
- Unplug the AC adaptor from the mains when you are no longer using it.
- Do not expose the battery to extremes of temperature and humidity.
- Avoid putting the battery into contact with metal objects (such as keys, paper clips, coins, chains, etc.). These might cause short circuits across the battery terminals.
- Avoid dropping the battery or subjecting it to violent physical shocks.
- Do not try to open or disassemble the battery itself.
- Only use the recommended AC adaptors (MA0506 or MA0567).
- If the battery terminals are stained, clean them with a soft cloth.

■ **PLEASE NOTE:** *It is normal for the battery to heat up during charging.*

## • **Alignment of the touch screen**

After the initial charging of the battery is finished. The battery indicator light will be on (**continuous orange**).

- 1- Press the button  situated in the lower part of your Mondo, to activate the screen.
- 2 - Tap with your stylus on any area of the screen.  
*If you are using your Mondo for the first time, a message will appear asking you to carry out the alignment of the touch screen.*
- 3- Tap in the centre of the crosses which appear in turn, firstly in the middle of the screen, then in each corner of the display zone.

## • **Use of the stylus**

When you have finished the screen alignment procedure, your Mondo offers to teach you how to use the stylus.

Take the time to read the information displayed, then click on the **Next** key at the bottom of the screen.

Follow the instructions which are displayed on the screen to carry out a short exercise. In the event, it involves learning how to move text in a diary.

- 1- Tap and hold your stylus on the zone indicated by the arrow to select the text to be moved and display the menu of possible operations.
- 2- Lift up your stylus, then tap on **Cut** in the menu displayed.  
*The text is placed in memory and is temporarily deleted from the screen.*
- 3- Tap and hold your stylus on the zone indicated by the arrow to select the position to which you wish to transfer the text and display the menu of possible operations.
- 4- Lift up your stylus, then tap on **Paste** in the menu displayed.  
*The text is displayed in the required position.*
- 5- Tap on the **Next** key at the bottom of the screen.

## • Location and time zone

A town will be selected by default. Its name will appear in the first field.  
If this town corresponds to your country or your region, just tap on the **Next** key at the bottom of the screen to validate the selection.

If not :

- 1- Tap with your stylus on the arrow at the right hand edge of the **Town** field to display the list of towns.
- 2- Tap and hold your stylus on the up or down black arrows to scroll through the list of towns.
- 3 - Tap on the town which corresponds to your country or your region.

*The time zone of the selected town will be displayed automatically in the lower field. You do not have to change it.*

- 4- Tap on the **Next** key at the bottom of the screen.

- 5 - To quit, tap with your stylus on any zone of the screen.

*The screen saver for the Telephone application will appear (for more details about this screen, see page 25).*

■ **PLEASE NOTE:** If your SIM card is protected by a PIN code, the message **Enter the PIN code:** will appear on the screen before the Telephone application is opened.

In this case you must :

a- Enter your PIN code using the alphanumeric keys of the virtual keyboard.

b- Then tap on the **Validate** function key (for more details about the PIN code, see page 10).

### You may now use your Mondo.

To discover all the functions of your Mondo and know how to use them, see the table of contents or go directly to the sections of this manual which follow.

## • Opening / closing the Telephone application

To open the Telephone application:

- Press again (briefly) on the program button .

*If your PIN code is requested, enter it, then tap on the **Validate** function key.*

If you wish to close the Telephone application:

- Press for a long time on the program button  situated in the lower part of your Mondo.

## • Standby / reactivation of the screen

If you wish to put the screen of your Mondo on standby:

- Press the button  situated in the lower part of your Mondo.

△ **WARNING:** The applications opened remain active, even when the screen of your Mondo is on standby. Don't forget to **close the Telephone application** in places where it is requested that mobile telephones are switched off (such as aircraft, hospitals, etc.).

To reactivate the screen of your Mondo:

- Press once more on the button .

## Use of the stylus and the jog wheel

### • Regular use of the stylus

Use your fingernail to extract the stylus from its housing (situated on the back of your Mondo).

The stylus is specially designed not to dirty or damage the touch screen of your Mondo. You are strongly recommended to use it for navigating through the menus or tapping on the keys of the virtual keyboard.

There are many ways of using the stylus:

- **Tap on the touch screen with the stylus**, briefly touch a determined zone of the touch screen with the point of the stylus.  
*For example, this operation enables you to open menus, select items from the menus, validate your selections, enter telephone numbers, etc.*
- **Tap and hold the stylus pressed on the touch screen**, apply the point of the stylus for 2 to 3 seconds on a determined zone of the touch screen, before lifting it off.  
*For example, this operation enables you to exit from the Telephone application menus in one gesture, to make a call using rapid dialling, to display context menus in diary applications, etc.*
- **Tap and drag the stylus over the touch screen**, apply the point of the stylus to a determined zone of the touch screen, then drag the stylus over the screen without lifting it off.  
*For example, this operation enables you to select several items simultaneously from a list or from a text zone.*
- Write or draw on the touch screen.

### • Additional uses of the stylus

- To re-initialise your Mondo (if necessary):
  - Press with the point of your stylus on the "Reset" button situated on the back of the unit.
- To change the backup battery (if necessary):
  - Use the point of your stylus to lift up the cover of the backup battery housing.
- To lock the cover of the battery housing:
  - You must withdraw the stylus from its housing to be able to remove the cover and gain access to the battery.

## • Use of the jog wheel

### 1- When you receive a call (Telephone application open):

- Press on the wheel to answer if you want to take the call.  
*You may also tap with your stylus on the  key of the virtual keyboard in the Telephone application or press briefly the  button on your Mondo.*
- Push the wheel upwards to refuse the call.  
*You may also tap with your stylus on the  key of the virtual keyboard in the Telephone application.*
- Push the wheel downwards to cut off the ringing tone before answering.  
*You may also tap with your stylus on the **Silence** function key of the virtual keyboard in the Telephone application.*

### 2- During a call:

- Press the wheel to hang up when you want to end the call.  
*You may also tap with your stylus on the  key of the virtual keyboard in the Telephone application or press briefly the  button on your Mondo.*
- Push the wheel upwards or downwards to increase or decrease the volume.  
*You may also tap with your stylus on the  ou  arrows of the virtual keyboard in the Telephone application.*

### 3- When the Telephone application screen saver is displayed (outside of a call):

Press the jog wheel to see a list of the last 10 numbers dialled.

### 4- In all other cases:

- Push the jog wheel upwards or downwards to scroll through menus or folders.  
*When you are using the Telephone application, you may also tap on the  ou  arrows.*
- Press the wheel to make your selections or call the telephone number entered or selected.  
*To make your selections, you may also tap with your stylus on the selected item (whatever the application being used), or use the **Ok** or **Validate** function keys (when you are using the Telephone application).  
*To call the telephone number entered or selected, you may also tap on the  key.**

## Power supply - Batteries

### • Battery charge indicators

When the battery is almost discharged, your Mondo will warn you in several ways at once:

- The message **Battery low!** will appear on the screen.
- A warning tone will sound.
- The  symbol flashes on the screen (depending on the model).

If you are using your Mondo (for example, you are having a telephone conversation or you are consulting your diary):

1- Close the applications in use immediately.

*If you are connected to a computer, don't forget to save your data before closing the applications in use.*

2- Then recharge the battery or replace it with a charged battery (see the instructions below).

**⚠ WARNING:**

- If you must replace the battery, make sure that all the applications have really been closed before removing the used battery from its housing. Otherwise, you risk losing the data recorded in the SIM card.
- Do not try to use your Mondo before starting to recharge its battery or replacing it with a charged battery.
- To extend the life of your battery, we recommend that you wait until the warning **Battery low!** appears on the screen before recharging it.
- When the message **Battery low!** is displayed, the battery of your Mondo is still able to save your data for 24 hours. After this, you risk losing your recorded data.

### • Recharging the battery

The battery may be recharged using the AC adaptor on its own, or with the desk top support (supplied).

**■ PLEASE NOTE:**

- The average time for recharging a battery is three and a half hours.
- You can still use your Mondo while its battery is being charged, but this will extend the time taken for recharging.
- It is normal for the battery to become warm during recharging.

**- To recharge the battery of your Mondo using the AC adaptor on its own:**

- 1- Insert the plug (a) of the AC adaptor into the power supply socket (b) of the Mondo (fig.1).

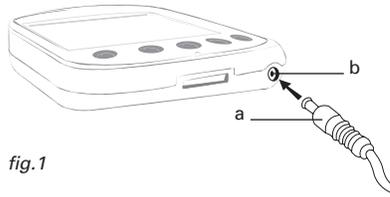


fig.1

- 2- Connect the AC adaptor to a mains socket and switch on.  
*The luminous battery charge indicator will flash orange.*
- 3- When the charge indicator becomes **continuous orange**, the battery is charged.  
*Do not forget to switch off the mains and unplug the AC adaptor from the mains.*

**- To recharge the battery of your Mondo using the desk top support supplied:**

- 1- Insert the plug (a) of the AC adaptor into the power supply socket (b) of the desk top support (fig.2).

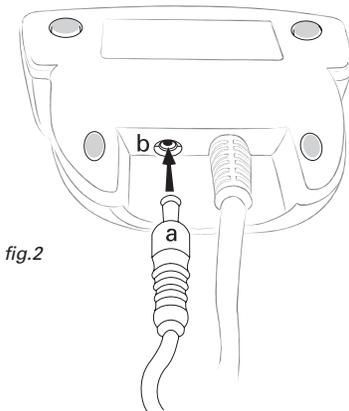


fig.2

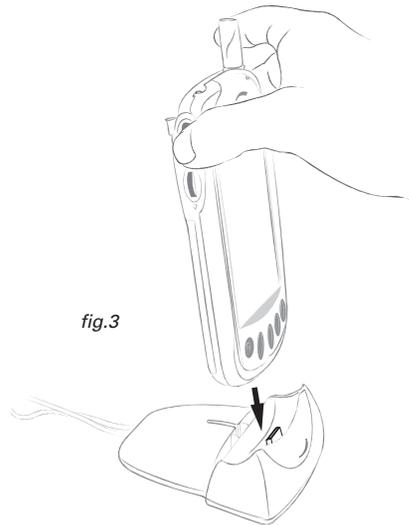


fig.3

- 2- Insert your Mondo into the desk top support (fig.3).
- 3- Connect the AC adaptor to a mains socket and switch on.  
*The luminous battery charge indicator will flash orange.*
- 4- When the indicator becomes **continuous orange**, the battery is charged.  
*Do not forget to switch off the mains and unplug the AC adaptor from the mains.*


**- States of the charge indicator of the Mondo (reminder):**

- **Flashing orange:** Charging is in progress.
- **Continuous orange:** Charging is finished.

## • Replacing a discharged or used battery

⚠ **WARNING:** Make sure that all the applications have properly been closed before removing the battery from your Mondo. If you are connected to a computer, don't forget to save your data before closing the applications in use.

- 1- Remove the stylus from its housing (fig.1).  
*This operation is necessary to unlock the cover of the battery housing.*
- 2- Remove the battery housing cover (fig.2).
- 3- Remove the discharged battery from its housing (fig.3).
- 4- Insert the charged battery (fig.4).
- 5- Replace the battery housing cover (fig.5).
- 6- Return the stylus to its housing.

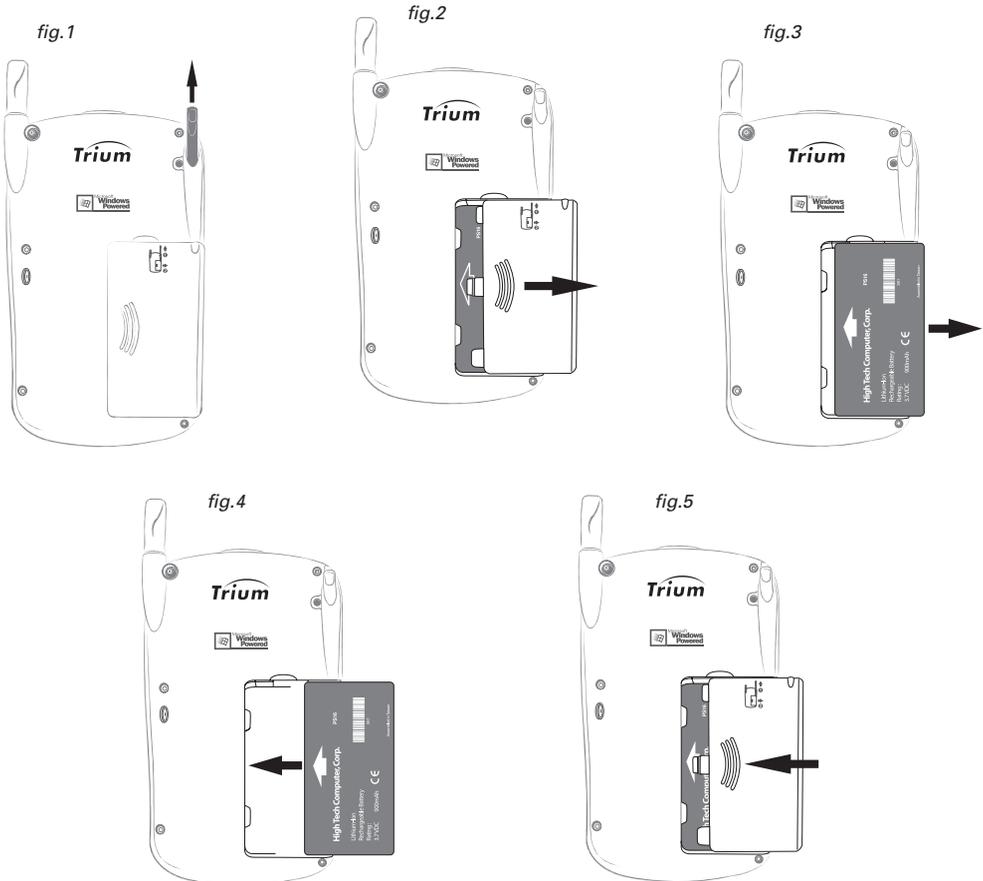

## • Replacing the backup battery



◇ **IMPORTANT** : To carry out this operation, it is essential for the main battery of your Mondo to be in position and sufficiently charged.

When the backup battery is used up, a message will appear on the screen inviting you to replace it. When this occurs:

- 1- Close all the applications in use.
- 2- Remove the stylus from its housing (fig.1).
- 3- With the point of the stylus, lift up the cover of the backup battery housing (fig.2).
- 4- Remove the used battery from its housing.
- 5- Insert the new battery in its housing (fig.3).

▣ **PLEASE NOTE**: The positive pole (+) of the battery must be turned towards the front face of the Mondo.

- 6- Close the cover of the backup battery housing and return the stylus to its housing.

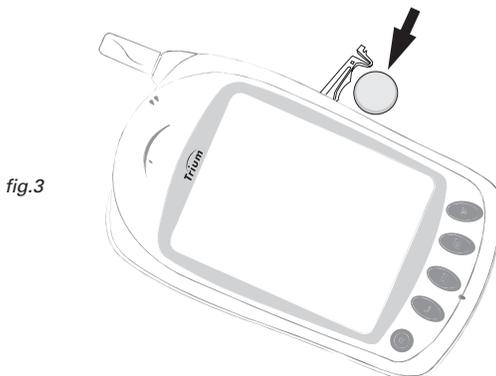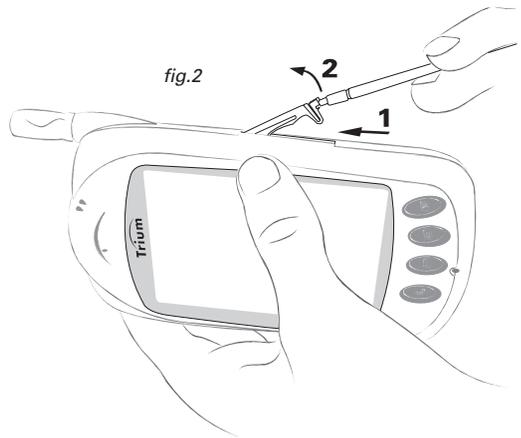

## • Use of the batteries and safety instructions

### - Batteries compatible with your Mondo:

The Mondo will only operate with standard Lithium ion batteries (MA0570).

### - Lifetime of the batteries:

A battery may be recharged several hundred times. However, it will wear out progressively. If you find that its performance (on standby or in communication) has clearly decreased compared to normal operation, you must consider replacing it with a new battery.

### **Safety instructions:**

- Do not leave the Mondo connected to the AC adaptor any longer than necessary; overcharging decreases the lifetime of the batteries.
- Unplug the AC adaptor from the mains when you are no longer using it.
- Do not expose the batteries to extremes of temperature and humidity.
- Do not throw a battery into a fire, as it may explode.
- Avoid putting the batteries into contact with metal objects (such as keys, paper clips, coins, chains, etc.). These might cause short circuits across the battery terminals.
- Avoid dropping the batteries or subjecting them to violent physical shocks.
- Do not try to disassemble or open the batteries.
- Only use the recommended AC adaptors (MA0506 or MA0567).
- If the battery terminals are stained, clean them with a soft cloth.

▣ **PLEASE NOTE:** *It is normal for the batteries to heat up during recharging.*

### - Disposal of used batteries:

- Don't throw away your batteries in your household waste.
- In compliance with European environmental protection directives, used batteries must be returned to the place of sale, where they will be collected free of charge, or to any other service capable of destroying them in an appropriate manner.

# The Telephone Application

## 1- First steps

### • Opening the Telephone application

To open the Telephone application, just press the program button , situated in the lower part of your Mondo.

- If the screen of your Mondo is on standby, it activates itself automatically when you press the program button ; you do not need to press the button .
- If another application is already open on the screen, you may also launch the Telephone application by selecting it with your stylus from the  **Start** menu.
- Your Mondo always keeps in memory the last application that you used before putting it on standby. If this was the Telephone application, it will automatically reappear when you press the button .

If your SIM card is protected by a PIN code, the message **Enter the PIN code:** will appear on the screen when you open the Telephone application. In this case you must:

- 1- Enter your PIN code using the alphanumeric keys of the virtual keyboard.
- 2- Then tap on the **Validate** function key (for more details about the PIN code, see page 10).

■ **PLEASE NOTE:** *If you are launching the Telephone application for the first time, the message **Import SIM directory** will appear in the standby screen.*


*Tap on **YES** if you want to copy the numbers in the directory of your SIM card to the directory of your Mondo. If you do not, tap on **NO**.*

### • Presentation of the Telephone application screen saver

The Telephone application screen saver will be displayed in the following cases:

- When you open the Telephone application by pressing the  program button situated in the lower part of your Mondo.
- When you select the Telephone application with your stylus from the  **Start** menu.
- When you reactivate the screen of your Mondo by pressing the button , if the last application used was the Telephone application.
- When you receive a telephone call (whatever the application being used, provided that the telephone application was opened beforehand).

- The normal appearance of this screen is as follows:

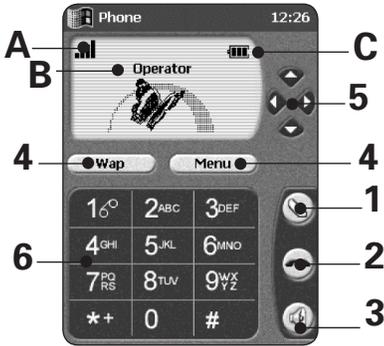

- 1- "Answer" key.
  - 2- "Hang up" key.
  - 3- "Hands free" key.
- ⚠ **WARNING:** Do not put the receiver to your ear when you are telephoning in hands-free mode.

4- Function keys:

The function of these keys may vary depending on the information displayed in the screen situated above. These function keys enable a WAP connection to be launched directly, or access to the main Telephone application menu.

5- "Up / Down" and "Right / Left" navigation arrows:

- Tap on the or arrows to scroll vertically through the menus or folders displayed on the screen. You may also use the jog wheel, or your stylus (for more details, see page 17).
- Tap on the arrow to go to the main menu of the telephone application or make your selections.
- Tap on the arrow to go to your folder or return to the previous screen.

6- Alphanumeric keys:

Tap on these keys to enter figures, symbols or letters, or display pre-recorded telephone numbers.

❗ **PLEASE NOTE\*:** If the **Mode of Operation** is set at **Modem** and if your Mondo is connected to a GPRS network, the small Telephone screen situated in the upper left hand corner of the screen of your Mondo will be presented with the following appearance:



\* Mondo GSM/GPRS only.

A- GSM signal quality indicator (or GPRS\*).

A high number of vertical bars (maximum 4) shows you that the reception of the signal is of good quality. This indicator does not appear if the zone in which you are situated is not covered by the network.

B- Name of the network and / or the operator.

C- Battery charge indicator (depending on the model).

The battery charge indicator is displayed continuously to indicate the battery charge when the Telephone application is started.

Four levels may be displayed: fully charged, medium charge, battery low. When your battery is nearly flat, the symbol flashes on the screen.

❗ **PLEASE NOTE:** The Telephone application may close automatically if the battery is too low.

Symbols can appear in the navigation bar to show you the connection state of your Mondo\*:

: Appears when your Mondo is connected to the GPRS network.

: Appears when communication is in progress (voice calls or data transfer).

: Appears when your Mondo is connected to the GPRS network via one of the GPRS 1, GPRS 2 or GPRS 3 remote connections, or even via a WAP connection with a Data type profile.

\* Mondo GSM/GPRS only.

Depending on individual cases, special symbols may be displayed on the Telephone screen saver:

 : SIM memory used.

 : Mondo memory used.

 : **Roaming**. This appears when your Mondo is connected to a network other than its local network.

 : **Short text messages (SMS)**. This appears when one or more short text messages ( SMS ) have been received and have not been read.  flashes when the storage capacity of the SIM card is not sufficient for recording new messages. Access to the **SMS** function depends on your operator.

 : **Voice mail**. This appears when one or more voice messages have been received and recorded by the voice message centre of the network. Access to the **Voice mail** function depends on your operator.

 : **Call diverting**. This appears when the calls received are diverted permanently. Access to the **Call diverting** function depends on your operator.

 : **Cursor arrows**. These appear during the consultation of menus to indicate that you may have access to additional options by dragging your stylus towards the top or the bottom of the menu displayed on the screen, or by tapping on the  or  arrow on the virtual keyboard. The screen may display both arrows at once.

 : **Line 2**. This appears when communication is established on your second line. Access to the **Second line** function depends on your operator and your subscription.

 : **Unanswered call**. This tells you that a call received has remained unanswered.

 : **Vibrate alert icon**. This appears when the vibrate alert mode is activated.

 : **Silent mode**. This appears when all the modes of alert by ringing tone have been de-activated.

 : **Mute icon**. This appears when the microphone of your Mondo has been de-activated. It allows you to confer privately with people nearby without being heard by the other party.

 : **WAP™ connection** activated (this symbol only appears in the WAP screen).

 : **WAP™ connection** activated, in **secure** mode (this symbol only appears in the WAP screen).

 : **GPRS service**. This appears on the screen of your Mondo (GSM/GPRS only) when the data parcel (GPRS) services are available.

## • Making a telephone call

### - Required conditions:

- The battery of your Mondo must be sufficiently charged.

*When the level of charge is too low, the message **Battery low!** is displayed on the screen and you hear a warning sound. If this happens, close the Telephone application and recharge the battery (for more details, see page 19).*

- Your Mondo must be fitted with a valid SIM card.

- Your Mondo must be in a zone that is covered by the GSM network.  
*If the place in which you find yourself is covered by the GSM network, the network signal indicator light will **flash green (slowly)**. If not, this indicator will **flash red (slowly)** and the telephone screen (situated in the upper right part of the screen of your Mondo) will remain blank.*

## - Making a call:

- 1- If the telephone application is closed, press the  program button situated in the lower part of your Mondo.

*An animated display will appear on the screen and a warning sound lets you know that the connection to the GSM network is established. Then the Telephone application screen saver is displayed (for more details about this screen, see page 25).*

■ **PLEASE NOTE:** *If another application is open on the screen, you may also open the Telephone application by selecting it with your stylus from the  **Start** menu.*

- If your SIM card is protected by a PIN code.  
*The message **Enter the PIN code:** will appear on the screen as soon as the telephone application is opened. In this case :*

*1- Enter your PIN code using the alphanumeric keys of the virtual keyboard.*

*2- Then tap on the **Validate** function key.*

*For more information about the PIN code, see the corresponding section of this manual, on page 10.*

- 2- Enter the telephone number you wish to call using the alphanumeric keys of the virtual keyboard.

If you make an error during entry:

- To delete the last number entered, tap on the **Delete** function key.
- To delete all of the numbers entered, tap and hold your stylus pressed on the **Delete** function key.

■ **PLEASE NOTE:** *International calls may be preceded by **00** or by **+**. To enter the sign + in front of a number, tap and hold your stylus pressed on the  key. You may enter a maximum of 47 figures and / or symbols.*

- 3- Tap on the  key of the virtual keyboard or press the jog wheel of your Mondo.

*The number you have entered is displayed on the screen, as well as .*

- If the number you have entered corresponds to a number recorded in the folder of your Mondo, the name will be displayed instead of a telephone number.
- If the number you have entered is not authorised in the fixed list numbers to call, the message **Prohibited (Fixed numbers)** is displayed on the screen.

- 4- If the caller's line is engaged, the message **Engaged** is displayed on the screen. If you have activated the **Automatic recall** function, your Mondo will try to recall the number.

- 5- If your call is successful, you will hear a ringing tone in the earpiece of your Mondo and a call time counter will appear on the screen.

➤ If your caller answers, the duration of your call will be displayed on the screen. Continue your call normally.

➤ If the call is established on your second line, the symbol  will be displayed on the screen (for more details, see page 26).

### - To end the call:

- Press the jog wheel of your Mondo. You can also click on the  key on the soft keyboard or press briefly the  button on your Mondo.

*The call time counter will stop, and then disappear, as will the symbol . After a few seconds, the Telephone application screen saver will be displayed once more.*

*You can speed up the display of the screen saver by tapping on the **Exit** function key as soon as you hang up.*

## • Receiving of a telephone call

### - Required conditions:

- The battery of your Mondo must be sufficiently charged.  
*When the level of charge is too low, the message **Battery low!** is displayed on the screen and you hear a warning sound. If this happens, close the Telephone application and recharge the battery of your Mondo (for more details about the procedure to follow, see the corresponding section of this manual, on page 19).*
- Your Mondo must be fitted with a valid SIM card.
- Your Mondo must be situated in a zone that is covered by the GSM network.  
*If the place in which you find yourself is covered by the GSM network, the network signal indicator light will **flash green (slowly)**. If not, this indicator will **flash red (slowly)** and the telephone screen (situated in the upper right part of the screen of your Mondo) will remain blank.*
- The telephone application must be open (whether or not the screen of your Mondo is on standby).

### - When you receive a call:

- Your Mondo will ring (unless you have set the volume of the ringing tone to zero, or activated the **Vibrate alert** mode).
- The screen backlight lights up for a short time.
- The indicator light situated at the top of the Mondo will **flash orange**.
- The incoming call screen of the telephone application will be displayed automatically.
- The symbol  will flash on the screen.

#### **From this moment, you may:**

- ⇒ Answer the call immediately by pressing the jog wheel of your Mondo or tapping on the  key on the virtual keyboard.
- ⇒ **Stop the ringing tone** (for example, to take the time to leave a room) by pushing the jog wheel **downwards**, or by tapping on the **Silence** function key on the virtual keyboard, before taking the call as shown below.
- ⇒ Refuse the call (and send the caller an engaged tone) by pushing the jog wheel upwards or by tapping on the  key on the virtual keyboard.

### - To answer a call:

Press the jog wheel of your Mondo. You can also click on the  key on the soft keyboard or press briefly the  button on your Mondo.

The symbol  will be displayed on the screen, as well as the duration of the call. Continue the call normally.

- **PLEASE NOTE:** *if you want to stop the ringing tone (for example, to take the time to leave a room), turn the jog wheel **downwards** or tap on the **Silence** function key on the virtual keyboard before answering.*

- If the caller's number is accessible, and if it corresponds to a number recorded in the folder of your Mondo, the **name** associated with this number will be displayed on the screen.
- If the caller's number is accessible, and if it does not correspond to any **number** recorded in the folder of your Mondo, the number will be displayed on the screen.
- If the caller's number cannot be determined, the message **Number unknown** will be displayed on the screen during the presentation of the call. The message **Call 1** will then be displayed when you answer.
- If the caller does not want his number to be known, the message **Number withheld** will be displayed on the screen during the presentation of the call. The message **Call 1** will then be displayed when you answer.
- If the call is established on your second line, the symbol  will be displayed on the screen (for more details, see page 26).

#### - To end the call:

- Press the jog wheel of your Mondo. You can also click on the  key on the soft keyboard or press briefly the  button on your Mondo.

*The symbol  will disappear. After a few seconds, the Telephone application screen saver will be displayed once more. You may speed up the display of the screen saver by tapping on the **Exit** function key.*

*If it is accessible, the number of the caller will be automatically recorded in the journal of calls received.*

#### - To refuse the call:

 **PLEASE NOTE:** *This action sends an engaged tone back to the caller.*

When your Mondo indicates an incoming call (by presenting you, possibly, with the number or the name of the caller), you may refuse the call as follows:

- Push the jog wheel upwards or tap on the  key on the virtual keyboard.

## • Emission of sound recordings during communication

To play a recording to your correspondent, select a sound file (Wave, MP3 or WMA) from the file explorer, then validate the operation. The recording is emitted and the microphone on your Mondo is cut (it is recommended to set the volume to 3/4). To resume the conversation with your correspondent, click on .

## • Closing the Telephone application

 **WARNING:** *If the telephone application is open, it remains active even when you press the  button to put the screen of your Mondo on standby.*

*It is essential that you **close the Telephone application** in places where it is requested to switch off mobile telephones (such as aircraft, hospitals, etc.).*

To close the Telephone application:

- Press for a long time on the  program button situated in the lower part of your Mondo.

## • **Safety mode**

In places where it is requested to switch off mobile telephones, you can lock the closure of the telephone application by activating **Safety mode**.

When **Safety mode** is activated, you can use other applications or manipulate your Mondo without any risk of opening the Telephone application by mistake.

### - **To activate Safety Mode:**

- 1- Tap on  **Start** in the navigation bar.
- 2- Tap on **Parameters** in the list proposed to you.
- 3- Tap on **Safety mode** in the list of parameters.
- 4- Tap on **Activated** to activate the **Safety mode**.

### - **To de-activate the Safety mode:**

- 1- Press the  program button.

*A message will immediately be displayed on the screen to ask you if you want to de-activate the Safety mode.*

- 2- Tap on **YES** to de-activate safe mode (or on **NO** to cancel).

■ **PLEASE NOTE:** You may also de-activate the safety mode by means of the  **Start** menu, using the same procedure as that described above.

## **2- Data transfer**

*For data transfer on the GPRS network, refer to the CD-ROM or online help section "Your Mondo and the GPRS".*

## • **Using your Mondo's built-in modem**

Your Mondo has a built-in modem and a telephone application which enables you to send and receive telephone calls via your GSM operator's network.

This built-in modem can also be used to surf on Internet or send e-mails using other applications such as **Microsoft Internet Explorer** and **Microsoft Inbox**.

In order to use your Mondo's modem with these applications, you must first set the parameters for the pre-programmed **Mondo GSM** connection. The procedure is described in the section **Setting the pre-programmed Mondo GSM connection parameters**.

To find out how to run the **Mondo GSM** connection from the  **Start** menu or from **Microsoft Internet Explorer** or **Microsoft Inbox**, refer to the section **Using the pre-programmed Mondo GSM connection**.

## • **Setting the pre-programmed Mondo GSM connection parameters**

Your Mondo has a modem connection pre-programmed for the built-in GSM telephone. This connection is called **Mondo GSM**. The name of the modem used for this connection is **Trium Mondo**.

Before you can use this connection, you must set the parameters using the information provided by your Internet Service Provider (ISP).

Ask your ISP for the following details:

- The server **telephone number**.
- Your **user name** and your **password** for connecting to the network.

- The name of the incoming mail server.
- The name of the outgoing mail server.
- Your e-mail user name and password.

When you have these details, you can start to set the parameters for the Mondo GSM connection, following the instructions given below.

➤ **Stage 1: Setting the ISP telephone number parameters.**

- 1- Click on  **Start** to access the main menu.
- 2- Click on **Parameters**.
- 3- Click on the **Connections** tab at the bottom of the screen.
- 4- Click on **Modem**.
- 5- Click on **Mondo GSM**.
- 6- Click on **Next**.
- 7- Type in the your ISP's **Telephone number** (NB: use the international format "+..." to avoid any connection problems when you call from abroad).
- 8- Click on **Next**.
- 9- Click on **End**.

*The basic connection parameters have now been defined.*

*We strongly recommend that you do not change the other parameters.*

➤ **Stage 2: Selecting the Dial from location.**

- 1- Click on  **Start** to access the main menu.
- 2- Click on **Parameters**.
- 3- Click on the **Connections** tab at the bottom of the screen.
- 4- Click on **Modem**.
- 5- Click on the **Dial** tab at the bottom of the screen.
- 6- Select **Mondo** in the **Dial from** field.

■ **PLEASE NOTE:** The **Mondo** location must be selected when setting the parameters for any connection using the built-in GSM telephone as a modem.

- 7- Click on ok.

➤ **Stage 3: Recording the user name and password.**

- 1- Click on  **Start** to access the main menu.
- 2- Click on **Programs**.
- 3- Click on **Connections**.
- 4- Click on **Mondo GSM**.
- 5- Type in your **User name**.
- 6- Type in your **Password**.
- △ **WARNING:** Leave the **Domain** field blank.
- 7- Check the **Save password** box if you wish (if you do not check this box you will be asked for the password each time you connect).

■ **PLEASE NOTE:** If you want to save your user name and password, you must confirm this by clicking on **Connect** to connect and then disconnect by clicking on **Cancel**.

➤ **Stage 4: Selecting the Mondo GSM connection as default connection for Microsoft Internet Explorer.**

- 1- Click on  **Start** to access the main menu.

- 2- Click on **Internet Explorer**.
- 3- Click on **Tools** at the bottom of the screen.
- 4- Click on **Options**.
- 5- Click on the **Connections** tab at the bottom of the screen.
- 6- Select **Mondo GSM** in the **Type** field.

*The **Mondo GSM** connection will be selected automatically when you connect to Internet.*

- 7- Click on ok.

■ **PLEASE NOTE:** *If you do not set the Mondo connection as the default connection, you cannot disconnect from Internet Explorer.*

➤ **Stage 5: Setting the Inbox application parameters for Mondo GSM connection.**

- 1- Open the **Inbox** application.
- 2- Click on **Tools**.
- 3- Click on **Options**.
- 4- Click on the service required (other than SMS).  
*If you wish to create a new service, click on **New...***
- 5- In the **Server** frame: type in the **POP server name** or **IMAP** given to you by the ISP associated with the **Mondo GSM** connection.
- 6- In the **User name** field, type in your e-mail **User name**.
- 7- In the **Password** field, type in your e-mail **Password**.
- 8- Check **Save password** (if required).
- 9- Click on **Next**.  
△ **WARNING:** *Leave the **Domain (Windows NT)** field blank.*
- 10- In the **SMTP host** field for sending the message, type in the details provided by your ISP.
- 11- In the **Return address** field: Type in a **second e-mail address** if you wish to receive replies to your messages or messages to be sent to another e-mail address.
- 12- Click on **Next**.  
*If necessary, change the parameters in the window which is displayed.*
- 13- Click on **Next**.  
*If necessary, change the parameters in the window which is displayed.*
- 14- Click on **End**.

The parameters for your **Mondo GSM** connection have now been set and stored in your Mondo. You can surf on Internet and send and receive e-mails.

If you wish, you can create several **Mondo GSM** connections. You just need to set the parameters for other connections as described above, giving them different names.

■ **PLEASE NOTE:** *Make sure that the back-up battery is fitted and is operating correctly. If it is not you may lose all the information on the connection parameters if your Mondo battery goes flat or if the battery is overcharged.*

## • Using the pre-programmed Mondo GSM connection

The Mondo GSM connection may be established in several ways.

■ **PLEASE NOTE:** *The modem can only be used if the Telephone application is open and connected to your telephone operator's network.*

### - From the Start menu:

- 1- Click on  Start to access the main menu.
- 2- Click on **Programs**.
- 3- Click on **Connections**.
- 4- Click on **Mondo GSM**.
- 5- Click on **Connect**.

*An information window is displayed during connection. When connection has been established, click on **Hide status** to close the information window.*

### To disconnect from the Start menu:

- 1- Click on  Start to access the main menu.
- 2- Click on **Today**.
- 3- Click on  at the bottom right of the screen to display the connection status.
- 4- Click on **Disconnect** to disconnect.

*An audible signal indicates that your Mondo is no longer connected.*

### - From Microsoft Inbox :

- 1- Run **Microsoft Inbox**.
- 2- Click on **Services**.
- 3- Select the service required, other than SMS.
- 4- Click on **Connect**.
- 5- Type in your **User name** and your **Password**, if necessary.
- 6- Click again on **Connect**.

*An audible signal indicates that communications have been established.*

### To disconnect:

- 1- Click on **Services**.
- 2- Click on **Disconnect**.

*An audible signal indicates that your Mondo is no longer connected.*

### - From Microsoft Internet Explorer :

- 1- Run **Microsoft Internet Explorer**.
- 2- Click on **Tools**.
- 3- Click on **Connect**.
- 4- Type in your **User name** and your **Password**, if necessary.
- 5- Click again on **Connect**.

*An audible signal indicates that communications have been established.*

### To disconnect:

- 1- Click on **Tools**.
- 2- Click on **Disconnect**.

*An audible signal indicates that your Mondo is no longer connected.*

■ **NB** : When the connection has been established, using any application, you can no longer make or receive telephone calls. Your callers will be redirected to your ansaphone (depending on the operator). You can disconnect at any time by clicking on  in the telephone application.

## • Restoring the Mondo GSM connection

If you accidentally delete the **Mondo GSM** connection, it can be restored as follows:

- 1- Close the Telephone application.
- 2- Open it again.

This simple operation is all that is required to restore the **Mondo GSM** connection. However, you then need to reset the parameters for this connection using the information supplied by your ISP.

The procedure is described in the section "**Setting the pre-programmed Mondo GSM connection parameters**".

## • Trouble shooting

Problem	Solution
It is not possible to connect.	<p>Check that the Telephone application is enabled and that you are in an area covered by your operator's network.</p> <p>Check the modem connection parameters, in particular the number dialled.</p> <p>Check the dialling mode.</p> <p>Check the user name and connection password.</p> <p>Check that the "domain" field is blank.</p>
I have accidentally deleted my Mondo GSM connection.	<p>Close the Telephone application. Then open it again. The <b>Mondo GSM</b> connection is restored immediately.</p> <p>However, you need to reset the parameters for this connection following the instructions in the section "Setting the parameters for the Mondo GSM connection".</p>
My user name and password have not been saved.	<p>You have not checked the <b>Save password</b> box. Or you clicked on [<b>Cancel</b>] immediately afterwards.</p> <p>Refer to the section "Setting the Mondo GSM connection parameters" to find out how to save your password.</p>
All my connection parameters have disappeared.	<p>You do not have a back-up battery and you have removed the battery from your Mondo for too long a time. Reconnect the supply to your Mondo, then reset the Mondo GSM connection parameters following the instructions in the section "Setting the Mondo GSM connection parameters").</p>
When I click on "Disconnect", the system does not disconnect.	<p>Check that you are disconnecting using the application you used to connect. Otherwise:</p> <ol style="list-style-type: none"> <li>1- Select the application <b>Today</b> in the  <b>Start</b> menu.</li> <li>2- Click on  at the bottom of the screen to display the connection status.</li> <li>3- Click on <b>Disconnect</b>.</li> </ol> <p><i>An audible signal indicates that your Mondo is no longer connected.</i></p>

## 3- SMS

### • Description of the SMS service

The SMS service allows you to send and receive "mini-messages" (or "short messages"). These messages are forwarded to other subscribers to the GSM network or are received from various sources, depending on the operators of the network.

To access this service, you must use the **Microsoft Mailbox application** (in order to configure, write, read and store the messages) and the Telephone application (in order to be able to send and receive messages via the GSM network). These two applications are pre-installed in your Mondo.

❏ **PLEASE NOTE:** Due to the fact that the SMS service operates in conjunction with the GSM network, it is only possible to send and receive messages if:

- the Telephone application of your Mondo is active and
- you are situated in the area covered by your operator's GSM network.

Before you can send or receive SMS messages on your Mondo, you must configure the SMS service (for details of the procedure, refer to the relevant section in this Manual).

### • Opening the mailbox application

You can do this in various ways:

#### ➤ Direct access:

Press the  program button on the lower part of your Mondo.

#### ➤ Access from the main menu of your Mondo:

- 1- Click on  **Start** in the navigation bar.
- 2- Click on **Programs**.
- 3- Click on **Mailbox**.

#### ➤ Access from the Telephone application (only if you have received new SMS messages):

Click on the **Read** function key of the Telephone application.

### • Configuring the SMS service

#### 1- Composition of a message template (Microsoft "stationery"):

Certain information relating to the messages to be sent (**Message template**, **Acknowledgement** and **Reply requested**) must be defined beforehand in order to ensure that the messages are correctly handled.

Each message template contains the following information:

- **The number of the messaging centre:** This information is provided by your operator. The messaging centre is a transit area where your messages are temporarily stored if the contact cannot be contacted (either because his telephone is switched off or because he is outside the area covered by the network or for other reasons).
- **The message format:** This information is used by the network in order to adjust the format of the message to the capacities of the receiver. The predefined formats are: **Text** (the default format), **Voice**, **Fax G3**, **X-400** and **Paging**. Use of the **Text** format (the most commonly used format) is strongly recommended.
- **The period of validity of the message:** This information is used by the network in order to delete messages which have been stored in the messaging centre for an excessive long time. At the end of the indicted period, the message is considered to be obsolete and it is discarded.

The predefined periods are **12 hours**, **1 day**, **2 days** and **Maximum** (the maximum period permitted by the operator).

■ **PLEASE NOTE:** *By creating a number of different templates, you can send messages in different formats by using different messaging centres.*

## 2- Viewing or modifying a template from the SIM card:

Message templates can be pre-programmed by your operator on your SIM card. In this case, the templates are displayed under the names "**SIM card Template 1**", "**SIM card Template 2**", etc. (according to the information displayed on the SIM) and are preceded by the  symbol.

### - To view or modify these templates:

- 1- Open the **Mailbox** application.
- 2- Click on **Tools**.
- 3- Click on **Options**.
- 4- Click on **SMS\*** in the list of services.
- 5- Click on the SIM card template you wish to view or modify.  
*The Modify/View screen for this template is displayed.*
- **PLEASE NOTE:** *You cannot change the **Name** of the SIM card templates (they are always **Template 1**, **Template 2**, etc..).*
- 6- If necessary, change the **Number** of the messaging centre.
- 7- If necessary, select a different message **Format** from the displayed list of options.
- 8- If necessary, select a different **Period of validity** from the displayed list of options.
- 9- Click on **ok**.  
*The display then reverts to the **Short message settings** screen.  
If you have made any changes, they are now stored in the SIM card.*

## 3- Viewing or modifying a template from the Mondo:

The message templates defined in your Mondo are displayed under their name, preceded by the  symbol.

### - To view or modify these templates:

- 1- Open the **Mailbox** application.
- 2- Click on **Tools**.
- 3- Click on **Options**.
- 4- Click on **SMS\*** in the list of services.
- 5- Click on the Mondo template you wish to view or modify.  
*The Modify/View screen for this template is displayed.*
- 6- If necessary, change the **Name** of the template.
- 7- If necessary, change the **Number** of the messaging centre.
- 8- If necessary, select a different message **Format** from the displayed list of options.
- 9- If necessary, select a different **Period of validity** from the displayed list of options.
- 10- Click on **ok**.  
*The display then reverts to the **Short message settings** screen.  
If you have made any changes, they are now stored in your Mondo.*

#### 4- Creating a new message template:

- 1- Open the **Mailbox** application.
- 2- Click on **Tools**.
- 3- Click on **Options**.
- 4- Click on **SMS\*** in the list of services.
- 5- Click on **New...**  
*The **Message template** screen is displayed.*
- 6- Enter the **Name** of the template you wish to create.  
**■ PLEASE NOTE:** *You must choose a different name from the names already allocated to the existing templates.*
- 7- Enter the **Number** of the messaging centre.
- 8- Select a message **Format** from the displayed list of options.
- 9- Select a **Period of validity** from the displayed list of options.
- 10- Click on **ok**.  
*The display then reverts to the **Short message settings** screen. Your new message template has been stored and its name will appear in the list of templates.*

#### 5- Choosing a template for sending messages:

The template which has been most recently modified or viewed is selected by default for sending messages. This template remains active until you decide to select a different one.

##### - If you wish you use a different template:

- 1- Open the **Mailbox** application.
- 2- Click on **Tools**.
- 3- Click on **Options**.
- 4- Click on **SMS\*** in the list of services.
- 5- Click on the template of your choice.  
*Details of the template are displayed.*
- 6- Click on **ok**.  
*The display then reverts to the **Short message settings** screen.  
The template of your choice is now selected in the list of templates.*
- 7- Click on **ok**.  
*The display then reverts to the **Services** tab on the **Options** screen.*
- 8- Click on **ok**.  
*The display reverts to the **Mailbox** screen.*

#### 6- Deleting a message template:

- 1- Open the **Mailbox** application.
  - 2- Click on **Tools**.
  - 3- Click on **Options**.
  - 4- Click on **SMS\*** in the list of services.
  - 5- Click and hold on the name of the template you wish to delete.  
*The prompt **Delete** is displayed.*
  - 6- Click on **Delete**.  
*You will be asked to confirm that you wish to delete the template.*
  - 7- Click on **YES** to confirm.  
*The display then reverts to the **Short message settings** screen.  
The selected template has now been deleted from the list of templates.*
- PLEASE NOTE:** *For security reasons, it is not possible to delete a message from the SIM card.*

## 7- The "Acknowledgement" and "Reply requested" options:

These options are common to all template messages:

- **Acknowledgement:** This option is used to obtain information about the result of your transmission. The message may have been forwarded to the contact or it may have been discarded by the network if its period of validity has expired or due to an overload in the network.
- **Reply requested:** This option is used to ask the contact to reply to the message you have forwarded to him. In this case, the cost of the reply will be charged to you.

### - To activate or deactivate these options:

- 1- Open the **Mailbox** application.
- 2- Click on **Tools**.
- 3- Click on **Options**.
- 4- Click on **SMS\*** in the list of services.
- 5- Use the checkboxes to activate or deactivate **Reply requested** and **Acknowledgement** options.

■ **PLEASE NOTE:** *Your choice is applicable to all your SMS messages, regardless of which template you have used.*

## • Receiving and reading new incoming messages

You can be notified of the arrival of new SMS messages in several different ways:

- Your Mondo emits an audible signal (bleep).
- The screen back-lighting is temporarily activated.
- The message indicator lamp at the top of the Mondo emits a **series of (slow) orange flashes**.
- The standby screen of the Telephone application is displayed (if it is open).
- The  symbol is displayed on the screen. This symbol is followed by a figure indicating the number of SMS messages received.

### - To read the new received SMS messages:

- 1- Click on the **Read** function key in the standby screen of the Telephone application.
- 2- Click on the header of the message you wish to read.

## • Composing and sending a new SMS message

### - To compose a new message:

- 1- Open the **Mailbox** application.
- 2- If the SMS message mailbox does not automatically open on the screen, click on **Services** at the base of the screen, then click on **SMS** in the list of optional services.
- 3- Click on **New**, on the left at the base of the screen, in order to display the screen for composing the new message.
- 4- Either enter the telephone number of the contact in the **To:** field or select the number from your address book by clicking on  at the base of the screen (the address book only shows contacts with one or more completed e-mail fields. Select the contacts who have a mobile telephone number in the **E-mail3** field).

■ **PLEASE NOTE:** *If you wish to send your message to a number of contacts, insert a **semicolon** between their telephone numbers.*

- 5- If you wish, enter the subject of your message in the **Subj:** field (if it is left blank, the beginning of your message will automatically be entered in the field).

6- If you wish to send copies of your message to other contacts, click on the arrow  on the right of the screen to display the **Cc:** and **Cci:** fields.

■ **PLEASE NOTE:** *In this case, the message will be forwarded in successive transmissions (as many transmissions as there are contacts).*

7- Click on the text area, then enter the text of your message.

■ **PLEASE NOTE:** *The maximum length of a message text is 160 characters. If you enter a longer text, it will be separated into as many messages as necessary, which will then be transmitted in succession.*

#### - **To send your message:**

When you have finished composing your message, click on **Send** in the top left corner of the screen.

■ **PLEASE NOTE:**

- *If the Telephone application is closed or if you have not received a signal from the network, your message is stored in the **Outbox** folder.*
- *If the Telephone application is open and if you are situated in an area which is covered by the network, your message is sent immediately. An information window opens to indicate the progress of the transmission.*
- *If several contacts have been selected and/or if the message text contains more than 160 characters, your message will be forwarded in a series of successive transmissions.*
- *In order to avoid overloading the network, try to limit the number of contacts and the size of your messages.*

#### - **To save your message without sending it:**

When you have finished composing your message, click on **ok** in the top right corner of the screen.

*Your message is then saved in the **Inbox** folder.*

*If you wish, you can view the message, amend it and send it at a later time or date.*

### • **Selecting contacts from the address book**

When you are ready to send a message, you can select the mobile telephone number of the contact from your address book, instead of entering it manually in the **To:** field.

1- Click on **New** in the bottom left corner of the screen to open the page for composing a new message.

2- Click on  at the base of the screen.

*The list of contacts stored in your address book which have entries in the **E-mail** field are displayed on the screen.*

3- Use the checkboxes to select the number of the contact.

*If you wish to send your message to several contacts, check as many boxes as necessary.*

4- Click on **ok**.

*The display now reverts to the page for composing your message. The telephone number of the recipient of your message is displayed in the **To:** field.*

### • **Replying to a received message**

There are ways of replying to a message.

#### - **From the list of received messages:**

1- Click and hold on the header of the message to which you wish to reply.

2- Click on **Reply** to send your reply only to the originator of the received message or on **Reply to All** to send your reply to the originator of the received message and to all the contacts listed under **Copy to:** (if any are listed).

**- From the Read screen of the opened message:**

- 1- Click on  at the base of the screen.
- 2- Click on **Reply** or on **Reply to All**.

*In both cases, the page for composing your message is displayed on the screen. The telephone number of the contact is displayed in the **To:** field, so you do not have to enter it manually. The header and the text of the original message are displayed in the text field (you can hide these if you wish).*

- 3- Input your reply.
- 4- Click on **Send** in the top left corner of the screen if you wish to send your reply immediately.

*If you are not ready to send your reply, click on **ok** to save it in the **Inbox** folder.*

**• Forwarding a received message**

There are two ways of forwarding a message.

**- From the list of received messages:**

- 1- Click and hold on the header of the message to which you wish to transfer.
- 2- Click on **Next** to forward the message to one or more contact(s) of your choice.

**- From the Read screen of the opened message:**

- 1- Click on  at the base of the screen.
- 2- Click on **Next**.

*In both cases, the page for composing your message is displayed on the screen. The text of the message to be forwarded is displayed in the text field (you can supplement or amend the text if you wish).*

- 3- Enter the mobile telephone number of the contact(s) in the **To:** field or select it (or them) in your address book.
- 4- Click on **Send** in the top left corner of the screen if you wish to forward the message immediately.

*If you are not ready to forward the message, click on **ok** to save the message to be forwarded in the **Inbox** folder.*

**• Managing messages**

**1- The folders used in the SMS service**

**- The "SMS" folder:**

This is the general folder of the SMS service.

Initially, it comprises five folders which can neither be renamed nor deleted:

- **Inbox.**
- **Outbox.**
- **Sent Items.**
- **Deleted Items.**
- **SIM SMS.**

In order to ensure that your messages are managed efficiently, you can create other folders (which you can delete). All the messages contained in the SMS service folders can be copied or moved as you wish.

**- The "Inbox" folder:**

This folder contains all the received messages which have not been deleted or moved, together with the message you have composed but which you have not yet sent. Of course, any new incoming messages will be stored in this folder.

**- The "Outbox" folder:**

This folder contains all the messages which are currently being transmitted or are ready to be sent.

If the Telephone application is open when a message is being sent, it is only temporarily stored in the **Outbox** folder. It is then transferred to the **Sent Items** folder as soon as the transmission has been completed.

If the Telephone application is closed when a message is being sent, the message cannot be sent. It is then stored in the **Outbox** folder and must be sent at a later time or date (when the Telephone application is open).

**- The "Sent Items" folder:**

This folder contains all the messages you have already sent and which have either been deleted nor moved.

**- The "Deleted Items" folder:**

This folder contains all the messages you have deleted from the other folders.

**- The "SIM SMS" folder:**

This folder contains copies of all the SMS messages stored in your SIM card. Any message copied in this folder is also copied in the SIM card. Any message moved or deleted from this file is also deleted from the SIM card.

## **2- To access the folder of your choice**

- 1- Open the **Microsoft Mailbox** application by pressing the corresponding program button or by clicking on **Mailbox** in the **Programs** menu.

*By default, an SMS folder opens. Its name is displayed in the top left corner of the screen, just below the navigation bar. This name may not be displayed in full: for example, "Outb..." signifies **Outbox**.*

- 2- If the folder opened by default is not the folder you wish to access, click on the arrow to the right of the name of the folder.
- 3- Then click on the name of the folder you wish to access.

## **3- To copy or move a message**

In the list of messages (regardless of which folder is open):

- 1- Click and hold on the header of the message you wish to copy or move.
- 2- Click on **Copy To...** or on **Move To ...** to copy or move your message to another folder.

■ **PLEASE NOTE:** *Unlike the **moved** message, the **copied** message is not deleted from the original folder.*

- 3- Click on the name of the folder to which you wish to copy or move the message.
- 4- Click on **ok** to confirm your choice.

■ **PLEASE NOTE:** *If you move a message to the **Outbox** folder, if this message contains more than one contact in the **To:** field and if the Telephone application is open and connected to the network, the message is transmitted as soon as you click on **ok**.*

## **4- Deleting a message**

- **To delete a message from a folder while keeping the option of retrieving it at a later date:**

■ **PLEASE NOTE:** *This operation does not apply to messages stored in the **Deleted Items** folder.*

- 1- Click and hold on the header of the message you wish to delete.
- 2- Click on **Delete** to move the message to the **Deleted Items** folder.

■ **PLEASE NOTE:** *The messages stored in the **Deleted Items** folder can be viewed, amended, moved or sent, just like the other messages.*

**- To permanently delete a message:**

- 1- Open the **Deleted Items** folder.
- 2- Click and hold on the header of the message you wish to permanently delete.  
*A prompt is displayed, asking you to confirm that you wish to permanently delete the selected message.*
- 3- Click on **Yes** to permanently delete the message or **No** to save it.

## • **Trouble shooting**

- **An audible signal (bleep) has notified me that a message has arrived, but it does not appear in my mailbox.**

If the Telephone application is open, you can receive SMS messages even if a connection is in progress (this may be a telephone call, a data download or even an Internet or WAP™ connection).

These messages, which are temporarily stored in the Telephone application, have not yet been transferred to your Inbox and this is why you cannot see them.

Once the connection has been terminated, you can transfer these messages to your Inbox by clicking on the **Read** function key of the Telephone application.

- **I can open a message but I cannot amend it.**

This happens if you open a message which has been received or already sent. Only messages which are awaiting transmission or are currently being composed can be directly amended. To amend received messages or messages which have already been sent (before re-transmitting them, for example), **copy** the text and then **paste** it into the text area of a new message (you can then amend it as you wish).

- **I cannot send attachments.**

The SMS service does not support the addition of attachments to your messages.

- **I press on "Send" but the message is not transmitted.**

This must be because the Telephone application is closed: the message has been stored in the **Outbox** folder. When the Telephone application is open again and connected to the network, it will offer to send this message for you. Click on **Yes** to send the message straight away (it will then be transferred to the **Sent Items** folder). Click on **No** to delay sending the message (you will be able to send this message later from the **Outbox** folder).

- **When I open my address book to select a contact, there are no contacts listed.**

The **Microsoft Mailbox** application can only display contacts for which at least one of the **E-mail** fields has been completed. It is possible that you have not completed any of these fields in your address book. You should therefore manually enter the mobile telephone number of your contact in the **To:** field so that you can send your message.

- **PLEASE NOTE:** *SMS messages can only be sent to GMS mobile telephones. When you record a new contact in your address book, do not forget to enter his mobile telephone number in the **Mobile Tel.:** field and, where necessary, in the **E-mail3:** field (the numbers entered in the **Mobile Tel.:** fields are automatically copied to the **E-mail3:** fields when you open the Telephone application, unless they have already been recorded there).*

## MICROSOFT Applications

You can access all the Microsoft applications on your Mondo by selecting them from the menu , or by pressing the corresponding program buttons. These program buttons enable you to have rapid access to your three favourite applications.

The applications that are programmed by default are **Microsoft Inbox** (left hand button), **Microsoft Calendar** (centre button) and **Microsoft Contacts** (right hand button).

■ **PLEASE NOTE:** *you may personalise the list of applications that you wish to see in the menu , and the three program buttons.*

### ➤ **Microsoft Inbox**

This application enables you to send and receive electronic messages by connecting directly to a mail server via an Internet Access Provider or a network. You can also carry out a synchronisation with the Microsoft Exchange or Microsoft Outlook applications on your desk top computer.

### ➤ **Microsoft Calendar**

To monitor your appointments and organise your meetings.

You can view your appointments in a variety of different formats (Diary, Day, Week, Month and Year) and move easily from one view to another.

### ➤ **Microsoft Contacts**

To save and recall easily information concerning your friends and colleagues, and make telephone calls.

### ➤ **Microsoft Notes**

To create handwritten or typed notes, reminders, drawings and voice recordings rapidly. You can include voice recordings in your notes.

### ➤ **Microsoft Pocket Excel**

This application is similar in function to the Microsoft Excel software installed on your desk top computer. It enables you to have easy access to copies of your files. You can create new files on your Mondo or copy files from your desk top computer to your Mondo.

### ➤ **Microsoft Pocket Word**

This application is similar in function to the Microsoft Word software installed on your desk top computer. It enables you to have easy access to copies of your files. You can create new files on your Mondo or copy files from your desk top computer to your Mondo.

### ➤ **Microsoft Pocket Internet Explorer**

This application enables you to connect to the Internet via an access provider or a network, and then to browse on the Web.

When not connected to the Internet, you can consult Web pages, favourites or mobiles channels which have been downloaded to your Mondo.

### ➤ **Microsoft Money**

For entering and viewing your financial transactions, check your balances and monitor your investments.

➤ **Microsoft Reader**

For reading electronic books on your Mondo.

Download books to your Mondo from your desk top computer or your favourite Web site for electronic books. Then use Microsoft ActiveSync to copy the book files to your Mondo, then use Microsoft Reader to read them.

➤ **Microsoft Tasks**

For monitoring tasks that need completing within a specified time period. Tasks which have not been done on time are displayed in heavy print within the list.

➤ **Microsoft ActiveSync**

For synchronising the information contained in the Microsoft Outlook, Microsoft Schedule+ or Microsoft Exchange applications on your desk top computer with those contained in the corresponding applications on your Mondo.

At each synchronisation, ActiveSync compares the modifications carried out on your Mondo and on your desk top computer and updates both units with the most recent information.

➤ **Microsoft File Explorer**

For finding files in your Mondo and filing them in directories.

➤ **Microsoft Windows Media Player**

For listening to your MP3 or Media Player digital audio files which have been downloaded beforehand from an Internet site or from your computer.

■ **PLEASE NOTE:** *This list of Microsoft applications is not exhaustive. Other Microsoft applications may also be installed on your Mondo.*

## • **Addition and deletion of Applications**

The applications installed on your Mondo in the factory are stored in ROM ( Read Only Memory ). You can not delete or modify these applications, and there is no risk of losing the content of the ROM by accident.

The applications and / or data files that you install yourself on your Mondo after factory calibration are stored in RAM (Random Access Memory).

You may install any compatible application on your Mondo, if sufficient memory is available. See the **Extras** folder on the **ActiveSync** CD to know what additional applications you can install on your Mondo.

## • **Connection to the Internet**

You can connect to the Internet using the **Trium Mondo** modem incorporated in your Mondo, using one of the pre-installed remote methods, GSM or GPRS.

See the Trium Mondo CD-ROM for further information.

## • **Infrared data transfer**

By means of the infrared port, you can exchange information such as contacts, appointments, files or documents with other units equipped with an infrared port. You can also connect to the Internet via an infrared modem.

## Appendix

### Accessory:

#### - The Personal Handsfree

##### Connection (fig.1):

Insert the jack (a) of the Personal Handsfree into the audio socket (b) of your Mondo.


##### Use (fig.2):

1- Place the earphones (c) in your ears.

*The microphone (d) is then situated at the level of your mouth.*

2- Attach the clip (e) to your clothing.

3- Adjust the sound volume of your Mondo, as required.

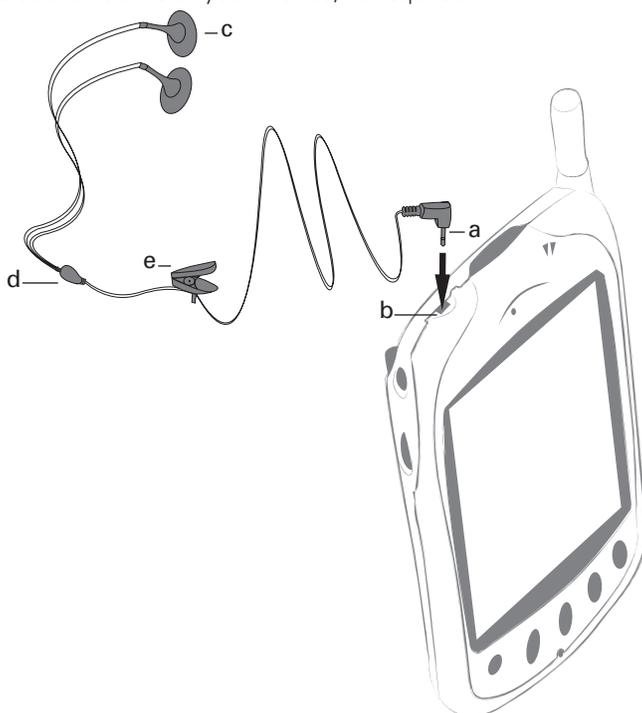

❏ **PLEASE NOTE:** In addition to the jack (a) provided in Personal handsfree, the audio connector (b) can accept a 2.5 mm male adapter jack to the 3.5 mm female stereo jack. With this adapter, you can connect your Mondo to a wide range of audio devices which are compatible with a 3.5 mm stereo connector jack. Devices of this kind include, for example, hi-fi systems, hi-fi headsets, car radios, etc. In this application, the entire output from the Mondo is routed to the connected audio device. During a telephone conversation, the active microphone is the Mondo microphone. It is recommended that the volume control should be set to 3/4 when an audio device is connected. You should connect your Mondo to a "Line", "Aux", "CD", or "Video" input.

## Trouble shooting

Problem	Possible cause and solution
Impossible to activate the screen of your Mondo.	Check that the battery is fully charged and correctly connected to the phone. The setting of the contrast of the display is perhaps too low. Adjust the contrast.
The flashing orange charge indicator is not on and the flashing battery icon is not displayed.	A charging or battery problem. De-activate and disconnect the charger. Reconnect it and try again. There may be no mains supply. Check mains supply. The AC/DC charger may be faulty. Return to your dealer and try substitution with another Mitsubishi adaptor. If faulty contact your dealer.
Short standby and talk times.	Cell broadcast is permanently on, using more battery power. Phone is in a poor signal area and therefore always on full power. Incorrect charging and discharging. Always charge and discharge your battery fully. The battery is wearing out. Replace the battery.
Calls cannot be made or received.	Check that you have at least one signal strength bar (level1). Try in a stronger signal strength area. If the name of a network is not displayed, check your SIM is ok, check registration with your network/service provider. Call barring option is turned on. Turn it off. Call cost limit is reached.
Stored telephone numbers cannot be recalled.	Fixed Dialed Number or Call Barring features are turned on. Check features and turn them off.
Flashing 	The storage capacity of the SIM card is not sufficient to record a new SMS message. You must read your new messages to free some space.

## Guarantee

### Pan European Service

If you require service, then in the first instance, you should contact your supplier.

Should you experience any difficulty then please contact your nearest MITSUBISHI location listed below for information on other service centres.

<b>UNITED KINGDOM</b> Tel.: (0800) 912 00 20	<b>SPAIN</b> Tel.: (902) 11 68 58
<b>FRANCE</b> Tel.: (0825) 86 82 83	<b>ITALY</b> Tel.: (800) 27 59 02
<b>GERMANY</b> Tel.: (01803) 33 71 84	<b>IRELAND</b> Tel.: (1800) 92 70 12

To obtain Warranty Service, you will require your original equipment purchase invoice or irrefutable proof of purchase.

Please see warranty terms and conditions for in warranty service.

## **Pan-european GSM End-user Guarantee Conditions**

1. You can benefit from this guarantee only if you are the original end-user purchaser.
2. MITSUBISHI guarantees that for a period of twelve (12) months from the date of purchase from your dealer, the Product shall be free from defects in materials and workmanship. Subject to the conditions below, Mitsubishi will indemnify you against all cost of parts and labour for repairs to or replacement of the product or parts (which may include equipment of similar type) where conducted by an authorised MITSUBISHI GSM service centre. MITSUBISHI shall be entitled to retain product which has been replaced.
3. Any claims must be made to an authorised MITSUBISHI GSM service centre in the countries mentioned in the service card enclosed with the product. In case of difficulty you can contact the Mitsubishi companies listed in the service card to obtain details of your nearest authorised MITSUBISHI GSM service centre. As a condition of this guarantee, the date of your purchase must be confirmed by producing your original invoice from your supplier or your sales receipt, showing the serial number, together with the service card. Final determination of guarantee claim eligibility shall be made by MITSUBISHI. MITSUBISHI shall not be liable for shipment costs to and from an authorised GSM MITSUBISHI service centre ; the product travels at your risk.
4. This guarantee does not cover:
  - a) battery defects of any nature;
  - b) non-compliance with directions for use;
  - c) installation or removal charges where the product is installed in a vehicle;
  - d) defects or failures caused by accident, misuse, improper installation or improper repair by an unauthorised repairer, alteration or modification, neglect, failure to use for normal purpose, Acts of God, water ingress, use in adverse environmental conditions (humidity or temperature);
  - e) cost of or performance of modifications to product to adapt or adjust to conform to national or local safety laws, where such safety laws go beyond harmonised European Union standards;
  - f) loss of use of the product or consequential loss of any nature;
  - g) loss of use of air-time, loss of use of any loaned equipment or ancillary equipment;
  - h) provision of incorrect or insufficient signal on air-time network, upgrading of product software to changes in network operating parameters, mains supply voltage fluctuations, incorrect SIM card (memory card) parameters for connection to airtime retailer;
  - i) damage caused by non-MITSUBISHI accessories.
5. Any guarantee claim or service does not extend the original guarantee period unless so required by prevailing national law.
6. This guarantee is valid only if the product is purchased and used in the European Union, Norway, Iceland or Switzerland.

**THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS.**

## DECLARATION OF COMPLIANCE

Name : **Mitsubishi Electric Telecom Europe S.A.**  
RCS Nanterre B 307 593 129  
Address : **25, boulevard des Bouvets**  
Town : **Nanterre Cedex**  
Postal code : **92741**

### Identification of the product

Nature : **Mobile Cell Telephone**  
Type : **Dual band GSM 900/DCS 1800 phase 2+**  
Sales reference : **MT-750**  
Other information :

### Identification of the notified organization

Name : **Autorité de Régulation des Télécommunications (ART)**  
Identification number : **0165**  
Procedure followed : **Annex III of the directive 1999/5/CE**

Declares under its entire responsibility that the product described above complies with the following basic applicable requirements (and in particular those in the 1999/5/CE directive):

Article 3.1a: (health protection and user safety)  
73/23/CEE, ES 59005

Article 3.1b: (protection requirements concerning electromagnetic compatibility)  
89/336/CEE, ETS 300 342-1

Article 3.2: (proper use of the radio-electric spectrum so as to avoid damaging interference)  
91/263/CEE, CTR/TBR 19, CTR/TBR 20, CTR/TBR 31, CTR/TBR 32

To this effect, declares that all the radio test series have been carried out.

11 October 2000,



Claude Bertin  
Directeur Général