

© Vodafone Group 2010. Vodafone and the Vodafone logos are trade marks of the Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.



User Manual Vodafone 543





Notice.....

Copyright © 2010 TCT Mobile Limited

All Rights Reserved

Your phone is made exclusively for Vodafone by TCT.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of TCT.

Trademarks

VODAFONE, the Vodafone logos are trade marks of the Vodafone Group. Other product and company names mentioned herein may be trade marks of their respective owners.

TCT is a trademark of TCT.

 eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.

Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Opera Mini™ The WAP navigator and some message software (i-mode™) are under licence Opera or Teleca. The WAP navigator and the software included are the exclusive property of Opera or Teleca. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these software programs.

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. Bluetooth® QDID (Qualified Design ID): B016328.

microSD™ is a trade mark of SD Card Association.

PC suite copyright © 2010 Chengdu Singularity Software Co.,Ltd.

Windows is a trademark of Microsoft Corporation.

• Licences

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Vodafone 543 Bluetooth QD ID B016328

Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety precautions and safety informations carefully to ensure that you use wireless device in a correct and safe manner.

TCT Mobile Limited Address:

TCT Mobile Europe SAS, 165, Boulevard de Valmy, 92707 Colombes, France.

Website: <http://www.alcatel-mobilephones.com>



Table of contents

Product Safety Information	7
1 Your mobile	16
1.1 Keys.....	17
1.2 Main screen icons.....	18
2 Getting started	20
2.1 Set-up.....	20
2.2 Power on your phone.....	23
2.3 Power off your phone.....	23
3 Idle screen and usage	24
3.1 Idle screen look.....	24
3.2 Usage.....	25
4 Calling	26
4.1 Making a call.....	26
4.2 Calling your voicemail.....	26
4.3 Receiving a call.....	27
4.4 During a call.....	28
4.5 Conference calls.....	29
4.6 Line switching.....	29
5 Main menu	30
6 Messaging	31
6.1 Create text/multimedia message.....	31
6.2 Inbox.....	32
6.3 Sent.....	33
6.4 Outbox (Unsent).....	33
6.5 Drafts.....	33
6.6 WAP Alerts.....	33

6.7 Voicemail.....	33
6.8 Templates.....	33
6.9 Settings.....	34
7 Contacts	36
7.1 Consulting your contacts list.....	36
7.2 Adding a contact.....	37
8 Calls	38
8.1 Call log.....	38
8.2 My numbers.....	38
8.3 Balance indicator.....	38
8.4 Billing.....	38
8.5 Call settings.....	39
9 Applications	41
9.1 Music.....	41
9.2 Radio.....	42
9.3 Image Viewer.....	43
9.4 Weather.....	44
9.5 Fun.....	45
10 Web	45
11 Camera	47
11.1 Camera.....	47
11.2 Video.....	47
12 My Files	48
12.1 My audios.....	48
12.2 My images.....	48
12.3 My videos.....	49
12.4 My creations.....	49
12.5 Others.....	49
12.6 Memory card.....	49



12.7	Managing audios, images, videos and pictures.....	50
12.8	Formats and compatibility.....	52
12.9	Memory status.....	52
13	Tools.....	53
13.1	Alarm.....	53
13.2	Bluetooth.....	53
13.3	Calendar.....	54
13.4	Calculator.....	54
13.5	Memo.....	55
13.6	World clock.....	55
13.7	Services.....	53
14	Settings.....	56
14.1	Profiles.....	56
14.2	Touch Settings.....	56
14.3	Display.....	56
14.4	Time and date.....	57
14.5	Languages.....	57
14.6	Headset mode.....	57
14.7	Screen lock.....	58
14.8	Speed dial.....	58
14.9	Input mode.....	58
14.10	Vocabulary.....	58
14.11	Security.....	59
14.12	Network.....	59
14.13	Connectivity.....	60
15	Making the most of your mobile.....	61
15.1	PC suite.....	61
16	Latin input mode/character table.....	62
17	Telephone warranty.....	65

18	Accessories.....	67
-----------	-------------------------	-----------



Product Safety Information.....

Pictograms and Graphic Symbols

-  Read the Safety Information section of this user guide on page 8
-  Do not use while re-fuelling
-  Do not use hand-held while driving
-  This device may produce a bright or flashing light
-  For body-worn operation maintain a separation of 1.5 cm
-  Do not dispose of in a fire
-  Small parts may cause a choking hazard
-  Avoid contact with magnetic media
-  This device may produce a loud sound
-  Avoid extreme temperatures
-  Keep away from pacemakers and other personal medical devices
-  Avoid contact with liquid, keep dry
-  Switch off when instructed in hospitals and medical facilities
-  Do not try to disassemble
-  Switch off when instructed in aircrafts and airports
-  Do not rely on this device for emergency communications
-  Switch off in explosive environments
-  Only use approved accessories

Product Safety Information

• RF Exposure

General Statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.08 W/kg ⁽¹⁾. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide ⁽²⁾.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits. "The highest SAR value for this mobile phone when tested for use at the body and compliance against the standard is 0.56 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure"

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

⁽¹⁾ The tests are carried out in accordance with IEC standard PT62209-1.

⁽²⁾ Please see page 8 about body worn operation.



Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

Regulatory information

The following approvals and notices apply in specific regions as noted.

TCT Mobile
TCT Mobile Europe SAS
165, Boulevard de Valmy
92707 Colombes Cedex, France
+33 1 48 52 81 00

EC declaration of conformity

Product: GSM dual band handheld station with bluetooth technology and FM radio

Product Identification: Vodafone 543 type Prince

We: TCT Mobile Europe SAS
165 boulevard de Valmy
92707 Colombes Cedex
FRANCE

declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test suites have been carried out. Conformity assessment procedure : annex IV of the directive.

Applied standards :

- Item 3.1.a (protection of the health and of the safety of the user)
 - EN 60 950-1 (2006)
 - EN 50 340 (2001), Council recommendation 1999/S19/EC (July 99)
- Item 3.1.b (protection requirements with respect to electromagnetic compatibility)
 - EN 301 489-1 v.1.8.1 (2008-04), EN 301 489-7 v.1.3.1 (2005-11), EN 301 489-17 v.1.3.2 (2008-04)
- Item 3.2 (effective use of spectrum so as to avoid harmful interferences)
 - EN 301 511 v.9.2 (2003-03), EN 300 328 v.1.7.1 (2006-10)

- This product also conforms to the applicable requirements of the directive 2004/108/EC (electromagnetic compatibility).

- EN 55013:2001 + A2:2004
- EN 55020:2007

Conformity of this product has been reviewed by the following Notified body

AMERICAN TCB, INC.
Suite C110, Whittier Avenue #731, 22101 McLean, Virginia, United States
Identification number: 1588

Date: 05/10
Signature: 
Christophe Benoit
TCT Mobile Europe SAS, Operations Director duly authorized

CE 1588

TCT Mobile Europe SAS - Siège social: 165, boulevard de Valmy 92707 Colombes, France
SAS au capital de 33 031 072 euros - RCS Nanterre B 440 088 222 - Siret 440 088 222 80009



• Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

• Product Handling

General Statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use. You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
 - Do not expose your phone or its accessories to open flames or lit tobacco products.
 - Do not expose your phone or its accessories to liquid, moisture or high humidity.
 - Do not drop, throw or try to bend your phone or its accessories.
 - Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
 - Do not paint your phone or its accessories.
 - Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
 - Do not expose your phone or its accessories to extreme temperatures, minimum -10 and maximum +50 degrees Celsius.
 - Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic discharge (ESD)


Do not touch the SIM card's metal connectors.





Antenna

Do not touch the antenna unnecessarily.

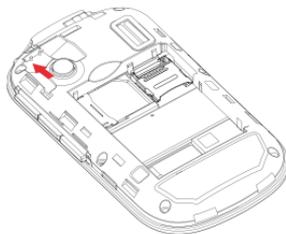

Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.



Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

Seizures/Blackouts

This phone is capable of producing bright flashing lights.

Repetitive Motion Injuries

To minimise the risk of RSI, when Texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use only headphones recommended.

Bright Light

This phone is capable of producing flash of light, do not use it too close to the eyes.

Phone Heating

Your phone may become warm during charging and during normal use.

• Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel must service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre.





Battery Handling & Safety

Always switch the device off and disconnect the charger before removing the battery. Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous. Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery. Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

• Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

• Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

CE1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

• Protection against theft ⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

• Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

⁽¹⁾ Contact your network operator for service availability.






In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

1 Your mobile

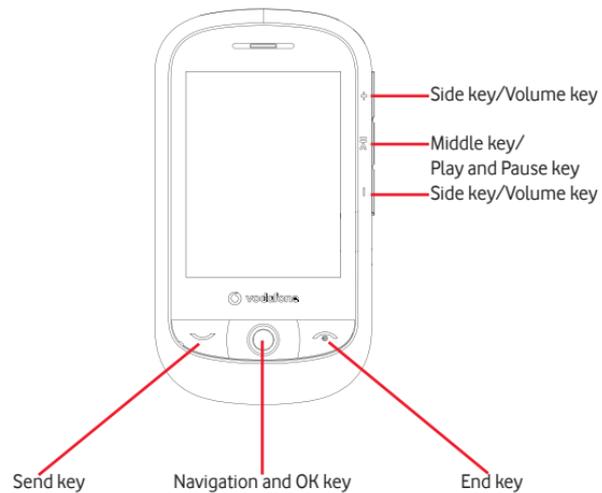



1.1 Keys

Send Key (↵)

- Access call log from idle
- Accept an incoming call
- To dial the number focused on the screen

End Key (⏻)

- Power on (long press)
- Return back to idle from any other state
- Turn off the backlight and lock the screen (short press in idle screen)
- Long press in idle to access 'quick profile + power off'

Navigation keys (in idle screen):

- Up to create new Messages
- Down to Camera
- Left to Alarm
- Right to Bluetooth menu

Central key (⊙)

- Open Main Menu in idle
- Confirm/ok/select in other state

Play/pause key (side middle key ⏮)

- Play/pause music

Volume keys (side keys ⏮/⏭)

- Adjust general volume (short press)
- Go or return to previous/next song (long press)

1.2 Main screen icons ⁽¹⁾



Battery charge level.



Vibrate alert: your phone vibrates, but does not ring or beep with the exception of the alarm (see page 56).



Bluetooth status (Blue - Activated).



Bluetooth status (Connected to an audio device).



Headset connected.



Keypad locked.



Call forwarding activated: your calls are forwarded (see page 39).



Alarm clock or appointment(s) (see page 53).



Level of network reception.



Voicemail message arrived.



Unanswered calls.



Radio is on.



WAP alerts ⁽²⁾.



Roaming.



Memory card scanning in progress.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.





-  **Memory card scanning completed.**
-  **Line switching** ⁽¹⁾; indicates the selected line.
-  **GPRS attached.**
-  **GPRS connecting.**
-  **Music player active.**
-  **Message receipt in progress.**
-  **Sending a message.**
-  **Silence mode:** your phone does not ring, beep or vibrate.
-  **Message unread.**
-  **Message list is full:** your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
-  **Flight mode.**
-  **Bluetooth headset connected.**

⁽¹⁾ Contact your network operator to check service availability.

2 Getting started.....

2.1 Set-up

Removing or installing the back cover



Inserting and removing the SIM card ⁽¹⁾

Please insert your SIM card to make phone calls.




Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out. Please power off your phone before you remove the SIM card.

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.






Installing and removing the battery

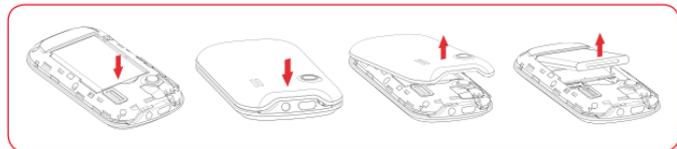

Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery.


Removing and install front case

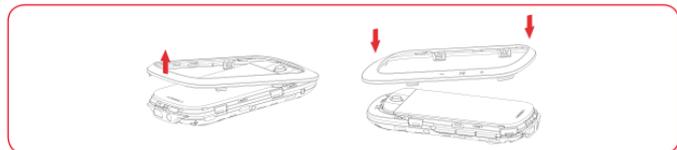

To dress up your mobile phone, we also provide the colorful front and back cases⁽¹⁾, you may change them easier.

⁽¹⁾ Depending on market.

Charging the battery

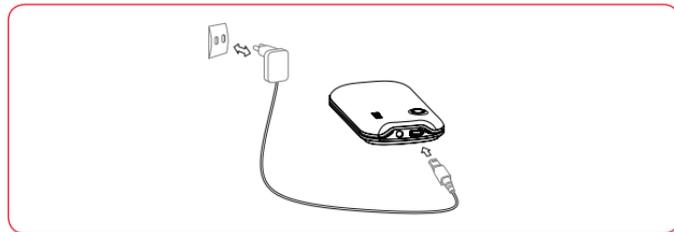

Connect the battery charger

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). Keep terminal connected to charger until the  icon is shown.





The charge is complete when the animation stops. Only use manufacturer chargers.

2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary. The main screen is displayed.



If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, touch the screen to browse through them or press the power  key to return to the main screen.

While the phone is searching for a network, **"Searching/Emergency"** will be displayed.


In the power on screen, you also have access to the functions of **"Radio"**, **"Camera"**, **"Music"**, etc. even if there is no SIM card inserted.

2.3 Power off your phone

Hold down the  key until the pop-up **"Profile tab"** appears, then select **"Power off"** and confirm.

3 Idle screen and usage

3.1 Idle screen look

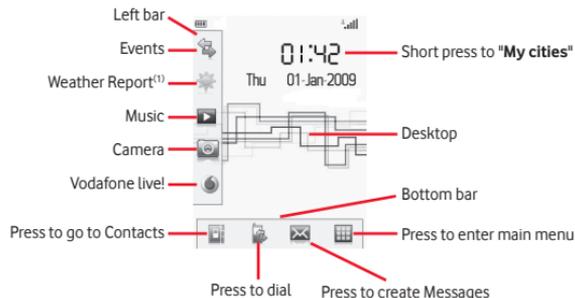

⁽¹⁾ Depending on local operator.



3.2 Usage

The function associated to the icons of left widget bar can be opened by swiping in the center part.

Events widget: Display the number of missed calls/messages in "Inbox" and "Missed calls" when dragged to the desktop. Short press to read them.

Weather Report Widget: Display Weather information when you drag it to the desktop.

Music Widget: Display simple Music when you drag and drop it to the desktop. Short press bottom part of the Player to go directly to the Music application.

Camera Widget: Display Camera and Video when you drag it to the desktop. Short press to go directly to the Camera application.

Vodafone live! Widget: Displays Web with Bookmark and link to search * option when you drag it to the desktop. Select Long press to go directly to the web homepage.



You may customize the widget by accessing "Settings/Display/Idle Widgets".

4 Calling

4.1 Making a call



Dial

In Dial Interface, dial the desired number then press the key. If you make a mistake, you can delete the incorrect digits by pressing . If you input some digits, press to save the numbers. If you did not input any digital, press to enter into Contacts.

Making an emergency call

If your phone has network coverage, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code⁽²⁾.

4.2 Calling your voicemail⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down key.



To use your voicemail service from abroad, contact your network operator before leaving.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depends on local regulations.



4.3 Receiving a call

When you receive an incoming call, press the key and hang up using .

Even if your phone is locked, you can click **"Answer"** or **"Reject"** to complete the operation or click key to answer a call and key to reject call.

If the icon is displayed, the vibrator is activated and there is no ringtone. If the icon is displayed, the phone does not ring or vibrate.



The caller's number is displayed if it is transmitted by the network⁽¹⁾.

Muting the ringtone

Hold down the volume **"-"** key for Mute.

⁽¹⁾ Contact your network operator to check service availability.

4.4 During a call

Available functions

During a call, you can press **"Options"** to use your contacts, diary, short messages etc. without losing your caller.

- Call on hold
- Ongoing call
- Handsfree
WARNING: move the handset away from your ear while using the "handsfree" option because the amplified volume might cause hearing damage.
- Contacts
- Messages
- Memo
- Services ⁽¹⁾
- Sound recorder (record your current call).

You can switch the audio speech from handset to BT device when connected.

Adjusting the volume

You can adjust the sound level during a call using the Volume **"+"** **"-"** key.

Handling two calls

- Answering a second call (ensure that **"Call waiting"** is activated, see page 39).
- To call a second party during a call, dial the number directly.

⁽¹⁾ Contact your network operator to check service availability.





4.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to five). If you are on a two party call, press "**Options**" and select "**Conference**". If a third call comes in, answer it by pressing the "**Answer**" and speak with your new caller.

This caller becomes a member of the conference if you press "**Options**" and select "**Add to conference**". Pressing "**End**" disconnects the current call.

To end the conference call, press "**Options**" and select "**End conf.**".

4.6 Line switching ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under "**Calls**", choose "**Line switching**" and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use either of the two lines.



The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.

5

Main menu

Press  or  key in idle interface to access into main menu.

- Web
- Camera
- Applications
- Contacts
- Messaging
- My Files
- Tools
- Calls
- Settings



6 Messaging.....



You can create, edit and receive SMS and MMS with this mobile phone.

MMS enables you to send images, photos, animations and sounds to other compatible mobiles.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 31).

6.1 Create text/multimedia message⁽¹⁾

You can click  in idle interface to create a message. Or select **"Messaging"** from the Main Menu to create text/multimedia messages.

The message contains up to 8 pages of text.

You can type a message, but you can also modify a predefined message in **Templates** or customise your message by adding pictures, photos, sounds, titles, etc. (only available while editing an MMS). While writing a message, select **"Options"** to access all the messaging options.

⁽¹⁾ Depending on your network operator.



You can save standard messages to **Drafts** or **Templates** (MMS only).



A SMS message of more than 160 characters (the number of characters depends on your language) will be charged as several SMS. A MMS message containing photos and/or sounds may also be billed as more than one message.

6.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message:  unread SMS in phone,  unread SMS in SIM card,  read SMS in phone,  read SMS in SIM card,  unread MMS in phone,  read MMS in phone,  message reception in progress and  message sending in progress.

Receiving and reading SMS/MMS

When you receive a new message, a beep sounds and the  icon showing the number of new messages will appear on the screen.

Click the  icon to read your messages directly in the main screen.

Grouped by sender

Messages can be grouped by sender ("**Option/Grouped by sender**"). You are able to quick search the messages by pressing the key associated with the first letter of sender's name.



6.3 Sent

All sent messages.

6.4 Outbox (Unsent)

All messages failed to send.

6.5 Drafts

All draft messages.

6.6 WAP Alerts

Store Web push messages.

6.7 Voicemail

View and edit the voice mail number.

6.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined multimedia messages.

6.9 Settings

6.9.1 Text message

- Profile settings**
- Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
- General**
- Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾ show reply path.
 - Enables the definition of SMS data coding for SMS sending.
- Alphabet management**
- Memory status**
- Memory used on the phone.
- Preferred storage**
- Select default message storage, SIM or phone.
- Preferred bearer**
- Bearer preference.

⁽¹⁾ Depending on your network operator.



6.9.2 Multimedia message

- Edit**
 - Set edit mode, image size and signature.
- Sending**
 - Set the values for validity period, Read report, etc.
- Retrieve**
 - Set the values for Home network, Roaming network, etc.
- Filter**
 - You may choose Allow/Reject Anonymous and Advertisement.
- Profiles**
 - Follow the same procedure as for setting your Web connection.
- Memory status**
 - Memory used on the phone.

6.9.3 Broadcast SMS ⁽¹⁾

- Receive mode**
 - Enable to receive broadcast SMS.
- Languages**
 - Language selection.
- Channel setting**
 - Add/Edit channels.

⁽¹⁾ Depending on your network operator.

7 Contacts



7.1 Consulting your contacts list

In Idle interface, click  icon to access the **contacts**.

You have 4 directories:

-  General
-  SIM directory
-  Phone directory
-  Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

Searching for a contact

You can search for a contact by multi-pressing the keys associated with the first letters and the other ones of their names.

Viewing a contact

Select a name from your contacts, then click to read the contact details.



Sending vCard via Bluetooth

Selecting the vCard you wish to transfer ("Options\Send vCard\By Bluetooth").

Making a call

Press  key after selecting name.



Information in the directory and the diary may be sent to and received from a computer using the PC suite.

7.2 Create contact

Select the contacts list in which you wish to add a contact to, press the "Options" softkey, select "Create contact" then **OK**.

When you create a new contact in the product directory, at least one of the following fields must be filled in:  First name,  Last name,  Group,  Mobile,  Home,  Ringtone,  Image,  Video,  Work,  Fax,  Email,  Birthday,  Company,  URL.

You can move from one field to another using the  key.



If you use your phone abroad, store the numbers in your directories in international format "+**" followed by the country code (see page 26).**

8

Calls



8.1 Call log

You can access your call memory by pressing  from the idle screen. Choose the option of the desired list:

-  Missed calls
-  Outgoing calls (Redial)
-  Answered calls

Select a number from the call memory and press the "Options" softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

8.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by clicking. Your telephone number is usually written on your SIM card.

8.3 Balance indicator ⁽¹⁾

Your account balance is displayed and allows you as well to top up your account.

- Top up** You may choose charge "**Own number**" or "**Other Mobile no.**"
- Scale setting** You may control or monitor your balance by "**Scale setting**".

8.4 Billing

You can access different items with this option:

⁽¹⁾ This service may not be available for all countries.





- Amount**
 - You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
- Duration**
 - You can view the total duration of all outgoing calls or reset it.
- GPRS counter**
 - Management of the volume of data communications charged for (in kilobytes).
- Beep duration**
 - You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by click).

8.5 Call settings ⁽¹⁾

8.5.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

8.5.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The ↗ icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

8.5.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

- Outgoing calls**
 - The following configurations are possible:
 - All calls
 - International calls
 - International except home
 - All outgoing calls are barred.
 - Outgoing international calls are barred.
 - Outgoing international calls except those to your country of subscription are barred.
- Incoming calls**
 - The following configurations are possible:
 - All calls
 - Roaming
 - All incoming calls are barred.
 - Incoming calls are barred when you are abroad.
- Cancel all barring**
 - Deactivate all call barring.
- Change barring PW**
 - Change the original PW for activating call barring.

8.5.4 Caller ID

Set by network/Hide number/Send number.

8.5.5 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

⁽¹⁾ Contact your network operator to check service availability.



9 Applications.....

9.1 Music ⁽¹⁾

Access to main menu "**Applications**" and select "**Music**". You will have full flexibility of managing music both on your mobile and memory card.

You can have access to your music files through one of the following:

- All songs**
 - Contains all songs both on phone memory and memory card.
- My star list**
 - You can simply add your favorite songs to "**My star list**" by holding down  during playing music (max 100).
- Folders**
 - Category of songs in folder.
- Update songs**
 - Update the information of songs saved in phone or memory card.
- Album/Artist/Genre**
 - Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "**Unknown files**".

Use keys to manage Music player:



-  Set volume level
-  Place the current song in my star list
-  Repeat all
-  Repeat current
-  Normal play mode
-  Repeat shuffle
-  Shuffle

⁽¹⁾ Only music files in mp3 format will be visible in Music player.

9.2 Radio

Your phone is equipped with FM radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

Available options:

- Channel list**
 - Open the list of saved stations.
- Save channel**
 - Save the current tuned station to the "**Channel list**".
- Auto search**
 - Start auto search and stations will be automatically saved to "**Channel list**".
- Enter the frequency**
 - Enter the frequency manually.

Your phone is provided with FM transmission functionality too. You can share your music with your friends by setting same frequency between your phone and separate FM Radio: access "**Broadcast**" in Options when playing songs, entering a frequency, then set same frequency in separate FM Radio.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.



Record

- Record the radio and files will be automatically saved to "Memo".

Settings

Activate loudspeaker/Play in headset

- Use  navigation keys to manage settings.
- Listen to the radio using loudspeaker or headset.

Activate mono mode/stereo mode

- Switch between mono and stereo mode.

Update station name ⁽¹⁾

- Save RDS information as station name in the channel list.

Optimise audio frequency

- Optimise the audio quality.

Turn off

- Stop playing the radio.

9.3 Image viewer

A library links to the pictures in "My creations" and "My images" in phone to be shown in list, slide, or thumbnail, set as **Wallpaper, Screen saver, Power on/off display, and Contact ID**, or **sent by MMS, Bluetooth**.

⁽¹⁾ Availability on RDS information detected.

9.4 Weather ⁽¹⁾

Your phone is equipped with a weather function for consulting the forecast of favourite cities up to 3 days in advance.

To access this function, select  in main Screen.

You are able to **view** a list of cities, **add** or **delete** cities, or **set your favourite city**.

To view weather information for other cities. Press  key up or down.

To display today's weather information in full screen, Select "View" in "Option".

Available options:

More info

- Search more weather info online.

Forecast

- Display 3-day weather forecast.

Update

- Refresh weather information.

My cities

- List all my cities, you can add new city, set default city, delete the selected city, etc via "My cities\Options".

Settings

- Set unit, update mode and network.

9.5 Fun

9.5.1 Java settings

The "Java" menu allows you to manage Java settings, in which you may set Java audio, vibration, network and identify how much Heap size is available.

⁽¹⁾ May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.





9.5.2 Download

You can download new Java™ applications in the "Fun" menu by selecting "Download". The list of available Web bookmarks dedicated to the application download will then be displayed.

Select the appropriate bookmark for the desired Web page.



Internet is a mobile internet portal service which allows you to obtain information such as weather conditions, news, sport and download new ringtones, wallpapers, music.

Opera Mini

Opera Mini lets you have the full Web everywhere. It recognize and suggest completions for you based on your Bookmarks and browsing history, lets you save pages for offline viewing, gives your phone a virtual mouse, Scroll at warp speed using your phone keypad and is build for speed by compressing Web page up to 90%.

Find things faster

The new Opera Mini lets you search for text within a Web page so you can get to the information you need even quicker than before.

Get to your Web sites faster

When typing Web addresses, Opera Mini will recognize and suggest completions for you based on your Bookmarks and browsing history, making address input faster, easier and much more intuitive.

Save it for later

Opera Mini lets you save pages for offline viewing so you can quickly access and read your desired Web content, even when you're on a plane, in the subway, or in other places where you can't get network reception. Depending on your phone, you may need to choose a destination folder for storing pages for offline viewing.

Obigo Browser⁽¹⁾

You may access to Web service by Obigo Browser.

You may launch the Web browser with the homepage of the default profile. Access your favorite website, enter the URL of Web site and something else configuration same as most handset browser have.

- Homepage**
 - Launch the Web browser with the homepage of the default profile.
- Bookmarks**
 - Access your favorite sites.
- Go to URL**
 - Enter the URL of Web site.
- Recent pages**
 - Pages which you recently browsed.
- Offline pages**
 - Pages available for offline viewing.
- Profiles**
 - Customise your Web access.

⁽¹⁾ Not valid for all country, it depends on markets.





11 Camera

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them in your "My Files".
- send them in a multimedia message (MMS) to a mobile phone or an email address (except videos).
- customise your main screen (see page 57).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.
- modify your photos by adding frames (see page 48).

11.1 Camera

Select  to access the function from main menu:

11.1.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object in the viewfinder and click viewfinder directly to take the picture and the pictures will be automatically saved. If you do not want the picture to be kept, you may directly delete it by click left softkey "Delete".

11.2 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.



We strongly advise you to change the default folder to "Memory card" to store your photos and videos.

12 My Files

You will have access to all audio and visual files stored in phone or memory card in "My Files".

12.1 My audios

Choose an audio for the Power on/off screen, for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The "My audios" album contains the following folders ⁽¹⁾:

- **Music:** full track music.
- **Melodies:** melodies that can be set as ringtone.
- **Recorded:** all recorded sounds.
- **General:** contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

12.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.



The images will be displayed in alphabetical order.

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.





12.3 My videos

The "My videos" album contains all video clips recorded by the user, originally embedded in the phone and downloaded to the phone or memory card.

Contains all video clips both in phone and memory card and enables you to **Play, Send (by Bluetooth), Delete, Delete all, Rename, Sort (by name, type, time or size)** and **Copy** or **Move** the video/videos, and to **Download/Capture** new video clips.

12.4 My creations

This feature stores all the photos captured by your mobile phone.

12.5 Others

Store files of unsupported format.

12.6 Memory card

You can access all files stored in memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

Inserting or removing the memory card



Remove back cover and battery, push outside and lift slot cover, put the MicroSD card into the slot as his shape, then lay down slot cover and push inside.

Available options

- Create folder**
 - Create more folders.
- Empty folder**
 - Delete all files in one folder.
- Memory card**
 - To format or to query its memory status.

12.7 Managing audios, images, videos and pictures

According to the item chosen, you can access some of the functions below:

- View**
 - View the selected image. If you want to view all the pictures in your folder in a slideshow hold down ◀▶ on the current picture.
- Play**
 - Play the selected video.
- Send ⁽¹⁾**
 - Send the audio/image.
- Delete**
 - Delete the audio/image/video selected (not applicable for embedded items).

⁽¹⁾ Files marked with 🔒 cannot be sent.





Set as

- - Image→wallpaper, screen saver, switch Power on/off, assign it to a contact.
- Sound→ringtone, message beep, switch Power on/off, assign it to a contact.
- Video→assign it to a contact.

Edit

- Modify an image ⁽¹⁾.

Download

- Download new items.

Rename

- Rename the audio/image/video.

Sort

- Sort the files by name, type, time and size.

Move to phone/ memory card

- Move a file from the product memory to the memory card and vice-versa.

Properties

- Display part of the ID3 Tag content of an MP3 file.

Activate

- DRM file option.

Copy to phone/ memory card

- Copy a file to the phone memory or the memory card.

Delete all

- Delete all the files except the embedded ones.

Capture

- Access "Camera" function directly.

12.8 Formats and compatibility ⁽¹⁾

- Sounds: MP3, MIDI, WAV, AMR
- Images: JPG, GIF
- Videos: 3GP, M-JPEG

12.9 Memory status

Indicates how much space is used and how much is currently free on your phone and memory card (if any).

⁽¹⁾ Only applies to images that can be cleared but not for copyrighted files.

⁽¹⁾ Depending on your product and market.





13 Tools

13.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- Repeat**
- You may select Once (default)/Every day/Days.
- Snooze**
- The alarm will repeat at regular intervals. You may snooze it by shaking your phone.

13.2 Bluetooth

Access this feature by selecting "Tools" from the main menu, then click "Bluetooth".

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "Bluetooth\Activation\On" option. Then enter the "Inquiry Audio Device" menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press the "Options" softkey to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.

13.3 Calendar

Once you enter this menu from "Tools", there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

Available options:

- View today's appointment** • See today's appointments.
- All appointments** • See all the created appointments.
- Jump to date** • Input the required date and it will be immediately highlighted.
- Create** • Create an appointment.

13.4 Calculator

Access this feature by selecting "Calculator" from the main menu.

Enter a number, select the type of operation to be performed, and enter the second number, then press = key to display the result.

Once an operation is complete, you can select  to clear numbers and carry out a new operation.

To return to the main screen, click  area.





13.5 Memo

You can create a **Text note** or **Voice memo** by accessing "**Memo**".

13.6 World clock

The World clock shows current local time and the time in different cities. You may view up to 3 cities at one time (**Options\Set as my city**). Also, you can add a maximum of 10 new cities to the list (**Options\Add**).

13.7 Services⁽¹⁾

⁽¹⁾ Contact your network operator to check service availability.

14 Settings.....



From the main menu, select the menu icon  and select the function of your choice in order to customise your telephone.

14.1 Profiles

With this menu, you may personalise ringtones for different events and environments. Press "**Settings**" in main menu and choose "**Profiles**" with below options: **General/Meeting/Outdoor/Silence/Flight mode**.

14.2 Touch Settings

To calibrate the touch screen, click anywhere on the screen to start calibration. You have two options: Calibration & Touch vibration.

14.3 Display

14.3.1 Idle widgets

You may select anyone of below widgets as your prefer in idle interface: **Vodafone live!, Events, Weather, Music, Camera, Wallpaper, Balance indicator, Calendar**.

14.3.2 Wallpaper

The wallpaper is displayed when you switch on your telephone.

By selecting "**Wallpaper**" you can customise it by replacing the default image or animation displayed on your telephone.



When you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and number of events will be displayed on your Widget Bar allowing you to consult them directly.





14.3.3 Screen saver

After timing, the screensaver is displayed then the screen is switch off (for autonomy's saving).

14.3.4 Power On/Off ⁽¹⁾

You can customise your welcome animation or image that appears when you switch on your phone. You can also customise your OFF screen with an image or animation.

14.3.5 Brightness

You may adjust the white balance with respect to LCD display.

14.3.6 Backlight

You may choose backlight time for screen.

14.4 Time and date

Allows you to display date and time settings including 12/24h format. Also you can set the daylight saving adjustment.

14.5 Languages ⁽¹⁾

Display language for messages. The "Automatic" option selects the language according to the home network (if available).

14.6 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between Headset only and Phone & Headset.

⁽¹⁾ Contact your network operator to check service availability.

14.7 Screen lock

14.7.1 Auto lock

Your screen is locked automatically or can be locked manually by short pressing  key.

14.7.2 Unlock before answering call

You can choice unlock Screen before you answer a call. When making a call the screen is locked automatically. You need to select "answer" before ending the call or enter Option.

14.8 Speed dial

These keys have predefined functions, which vary from one model to another (operator services, games access, or Games & Applications ...). You can customise⁽¹⁾ them, assigning the functions, numbers from directory and URL you wish to each key.

14.9 Input mode

Please see chapter "Latin input mode" (page 62). In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

14.10 Vocabulary

You have a dictionary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your dictionary, you can add, modify or erase words by using the "Options" softkey.

⁽¹⁾ Depending on your network operator.





14.11 Security

Activate PIN

- The SIM card protection code is requested each time the phone is powered on if the code is activated.

Change PIN

- Change PIN code.

Change PIN2

- A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be required if you attempt to access it, when they code is activated. Select to update it with a new one (between 4 and 8 digits).

Activate phone code

- If the code is activated it will be required each time the phone is powered on.

Change phone code

- Change phone password, default is 1234.

Fixed dial number

- Allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain.

14.12 Network

Network selection

- Preferred
 - List of networks to which you wish to be connected in order of priority.
- Select network
 - The choice of network connection is left up to the user.
- Search mode
 - Network connection can be switched between "**Manual**" and "**Automatic**".

GPRS connection⁽¹⁾

- When needed
 - GPRS mode active depending on connection requirements.
- Always
 - GPRS mode continuously active.

14.13 Connectivity

A set of profile settings for messaging (MMS) and WAP connection.

⁽¹⁾ Depending on network availability.





15 Making the most of your mobile

15.1 PC suite

There is a PC-Suite available, which you can download for free from the web at LINK:
<http://www.alcatel-mobilephones.com/global/global/downloads>

The PC suite includes:

- Backup/restore
 - You can backup the important data in your mobile and restore them when needed.
- GPRS Modem
 - Use your mobile phone to connect PC to the internet.
- Multimedia Personalization
 - Customize your mobile with images, animations and melodies.
- Music management
 - Create and transfer playlists with music files and provide lyrics editing.
- Messaging
 - You can compose SMS/MMS easily on your PC and transfer them to phone.

Supported Operating Systems

- Windows 2000/XP/Vista

16 Latin input mode/character table ⁽¹⁾

To write messages, there are two writing methods:

- Normal
- Predictive with the Zi mode

Normal

This mode allows you to type text by choosing a letter or a sequence of characters.

Predictive Zi mode

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

⁽¹⁾ For specific languages as Chinese, please see specific input leaflets.




Standard visual keypad

Sym	ABC	DEF
GHI	JKL	MNO
PQRS	TUV	WXYZ
A/a	□	C
Option	Ok	↵

-  Short press to show Symbol table
Long press to input number 1
-  Short press to switch to capitalization or number
-  Short press to input blank
Long press to input number 0
-  Clear

Symbol table

Short press the  key to display the symbols table; the cursor is positioned in the centre. Touch and confirm to select.

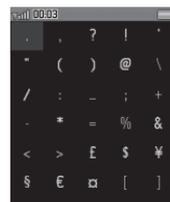



17 Telephone warranty.....

WARRANTY TERMS AND CONDITIONS

1. Vodafone undertakes the warranty of this Mobile Phone for a period of two (2) years from the date of Purchase by the original owner (not transferable) under normal use.
2. The Battery has a limited warranty for twelve (12) months, and Charger for twentyfour (24) months against manufacturing defects. Other accessories have a limited warranty for twenty-four (24) months against manufacturing defects.
3. This Warranty does not cover damage resulting from;
 - a) Normal wear & tear of the equipment;
 - b) Defects and damages due to the equipment being used other than its normal and customary manner;
 - c) An unauthorized disassembly, repair, alteration or modifications being carried out;
 - d) Misuse, abuse, negligence or accident howsoever caused;
 - e) Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification;
 - f) Defects or damage due to spillage of food or liquids, corrosion, rust or the use of wrong voltage;
 - g) Scratches or damage to plastic surfaces and all other externally exposed parts that are due to normal customer use;

4. The Handset requiring service/repair must be delivered at the user's cost.
5. This warranty will be null and void in any of the following events:
 - a) If the serial number or warranty seal on the equipment has been defaced or removed.
 - b) If any term contained in this warranty has been altered or modified in any way without prior written consent of Vodafone.
6. The limited warranty extends only to customer who purchase the product in one of the countries (or areas) set forth at the end of this document. The limited warranty is only valid in Vodafone's intended country (or area) of sale of the Product.
7. If the product is returned to Vodafone after the expiration of the warranty period, Vodafone's normal service policies shall apply and the Consumer will be charged accordingly.
 - a) Vodafone neither assumes for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
 - b) All warranty information, product features and specifications are subject to change without notice.
8. THIS WARRANTY IS IN LIEU OF ANY AND OTHER WARRANTIES EXPRESSED OR IMPLIED, SPECIFICALLY INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VODAFONE ASSUMES NO LIABILITY FOR THE BREACH OF THE WARRANTY BEYOND CORRECTING THE BREACH IN THE MANNER DESCRIBED ABOVE. IN NO EVENT SHALL VODAFONE BE LIABLE FOR CONSEQUENCES.





18 Accessories ⁽¹⁾


The latest generation of Vodafone GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



Standard charger



Stereo headset

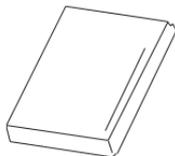

Battery



Only use your telephone with manufacturer batteries, chargers and accessories compatible with your model.

⁽¹⁾ Pictures for reference only.

CJA21COVDAAA

