



TMPublic Mobile, Everybody Talk and the Public Mobile logo are trade-marks of Public Mobile Inc. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permission. Public MobileSM, À vous la parole et le logo Public Mobile sont des marques de commerce de Public Mobile Inc. Android est une marque de commerce de Google Inc. L'utilisation de cette marque est assujettie aux autorisations de Google.



Simply **unlimited.**
Tout simplement **illimité.**

ZTE N762 Mobile Phone User Manual
Guide de l'utilisateur du téléphone mobile ZTE N762

ZTE中兴

ZTE Canada Inc. 4711 Yonge Street, North York, Ontario M2N 6K8

ZTE N762

User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Version No.: R1.0

Edition Time: September 2011

Contents

For Your Safety	9
General Safety	9
FCC Compliance	10
Radio Frequency (RF) Energy	11
Distraction	12
Driving	12
Operating Machinery	12
Product Handling	13
General Statement on Handling and Use	13
Small Children	14
Demagnetization	14
Antenna	14
Normal Use Position	14
Air Bags	15
Seizures/ Blackouts	15
Repetitive Motion Injuries	15
Emergency Calls	16
Loud Noise	16
Phone Heating	16
Electrical Safety	16
Accessories	16
Connection to a Car	16
Faulty and Damaged Products	16
Interference	17
General Statement on Interface	17
Pacemakers	17

Hearing Aids.....	17
Medical Devices.....	17
Hospitals	18
Aircraft.....	18
Interference in Cars	18
Explosive Environments.....	18
Gas Stations and Explosive Atmospheres	18
Blasting Caps and Areas.....	19
Getting Started.....	20
Overview	20
Keys Explained	21
Starting up.....	21
Installing the microSD Card and Battery.....	21
Removing the microSD Card	23
Charging the Battery	23
Switching Your Phone On/Off	23
Setting Up Your Phone for the First Time	23
Switching to Sleep Mode	24
Waking up Your Phone.....	24
Getting Around	24
Touch Control.....	24
Home Screen	25
Status and Notification Icons	27
Applications and Settings Preview.....	29
Phone Calls	34
How to Make Calls	34
Calling from the Dialer	34

Calling from Your Contacts	34
Calling from Your Call History	34
Calling from a Text Message.....	34
Using Speed Dial	35
How to Receive Calls	35
Answering a Call	35
Rejecting a Call.....	35
Ending a Call.....	36
Adjusting Your Call Settings	36
Contacts	37
Importing and Exporting Contacts	37
Sharing Contacts Information.....	37
Creating a Contact	37
Adding a Contact to Favorites.....	38
Searching for a Contact	38
Creating a New Group	38
Entering Text.....	39
Android Keyboard	39
XT9 Text Input	40
Choosing Touch Input Settings.....	42
Messaging	43
The Message Box	43
Sending a Message	43
Changing Message Settings	44
Email	46
Creating an Email account	46
Receiving Emails.....	47

















Composing and sending an Email	47
Replying to or Forwarding an Email	47
Deleting an Account	48
Email Settings	48
Getting Connected to the Internet	49
Turning on Wi-Fi	49
Connecting to a Wi-Fi Network	49
Checking the Wi-Fi Network Status	50
Browsing the Internet.....	51
Browsing Options	51
Using Bookmarks	52
Editing a Bookmark.....	52
Deleting a Bookmark.....	53
Changing Browser Settings.....	53
Opening Links in Web Pages.....	53
Bluetooth®	54
Making the Most of Multimedia	55
Taking Pictures with Your Camera	55
Adjusting Camera Settings	55
Shooting Video with Your Camcorder.....	55
Adjusting Your Video Settings.....	56
Listening to Your FM Radio	56
Playing Your Music.....	57
Creating Playlists	58
Managing Playlists	58
Setting a Song as Ringtone	59

Playing Your Videos	59
Opening Your Gallery	59
Making Memorable Memos	60
Using Your Google™ Applications	61
Gmail	61
Using Google Calendar	62
Using Google Talk	62
Opening Google Talk	62
Adding a New Friend	62
Changing Your Online Status	62
Starting a Chat	63
Places	63
Latitude	63
Sorting out Your Phone Settings	65
Changing Display Settings	65
Sound Settings	65
Language Settings	66
Mobile Network Services	66
Security Settings	66
Protecting Your Phone with a Screen Unlock Pattern... ..	67
Protecting Your Phone with a PIN or Password	67
Disabling Screen Unlock Security	68
Setting up Credential Storage	68
Managing Your Device Memory	69
Privacy: Reset to Factory Settings	69
Managing Applications	69
How to Install an Application	70

Managing Other Settings	70
Search Settings.....	70
Voice Interaction	71
Accessibility	71
About Phone	71
Other Applications	72
Alarms	72
Note Pad	72
Calculator	72
Task Manager.....	72
Stopwatch	72
Facebook	73
Twitter.....	73
Easy WiFi	73
Specifications	74

For Your Safety

General Safety

	Don't make or receive handheld calls or text while driving.		Don't use at gas stations.
	Keep your phone at least 15mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.



Don't rely on your phone as a primary device for emergency communications.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.03 W/kg and when worn on the body, as described in this user guide, is 0.872 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of vari-

ous phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on

FCC ID: Q78-ZTEN762.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

 
They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.


Antenna

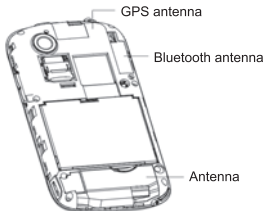

Do not touch the antenna unnecessarily.

Normal Use Position

 When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

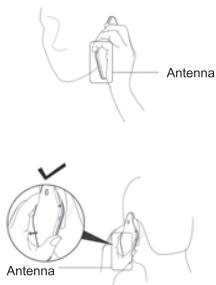

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.

- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its

accessories.

If your phone or its accessories have been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken them to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to deter-

mine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage

 
facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas where you are told to power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Getting Started

Overview

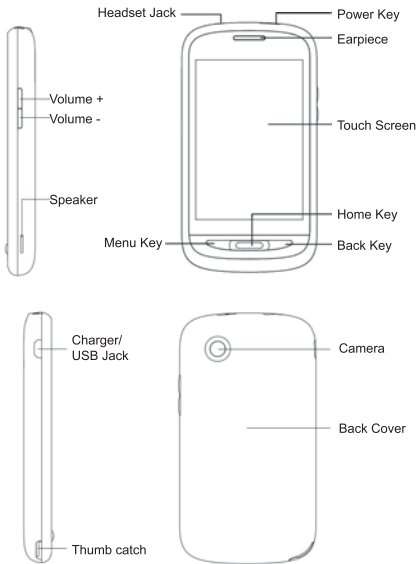

Keys Explained

Key	Function
Power Key	<ul style="list-style-type: none">• Hold to select phone modes: Silent, Airplane or Power off.• Press to switch your phone to Sleep mode.• Press to wake up your phone.
Home Key	<ul style="list-style-type: none">• Press to return to the Home Screen from any application or screen.• Hold to see recently used applications.
Menu Key	<ul style="list-style-type: none">• Press to get the options for the current screen.
Back Key	<ul style="list-style-type: none">• Press to go to the previous screen.
Volume Keys	<ul style="list-style-type: none">• Press Volume + to turn the volume up.• Press Volume - to turn the volume down.

Starting up

 
Installing the microSD Card and Battery


Switch off your phone before installing or replacing the battery.

1. Remove the back cover.



2. Open the microSD card holder, hold your microSD card by the cut corner end and slide it in.



The microSD logo  is a trade mark of the SD Card Association.

3. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down the battery until it clicks into place.



4. Press the cover gently back into place until you hear a click.

Removing the microSD Card

Open the microSD card holder. Slide the microSD card down gently and remove it.

Charging the Battery

When you first get your new phone you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.



2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

Make sure the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see [Sorting out Your Phone Settings](#)

– Privacy: Reset to Factory Settings), you need to adjust some settings before using it.


1. Tap **Change language** to change the language you want to use, if needed.
2. Tap the Android robot on the screen.
3. **Create** a Google Account or **Sign in** your account.
You can also tap **Skip** to set up an account later.
4. Configure the Google location options and tap **Next**.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time, which you can set in **Settings > Display > Screen timeout**.

Press **Power Key** to switch to Sleep Mode.

Waking up Your Phone

1. Press **Power Key** to activate your screen display.
2. Drag the  icon to the right.

NOTE: If you have set an unlock pattern, PIN or password for your phone (see Sorting out Your Phone Settings – Security Settings) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around

Touch Control

You can use finger gestures to control your phone. The controls on your touch screen change dynamically depending on the

 
tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Keep your finger on an item to see the available options.
3. Flick the screen to scroll up, down, left or right.
4. Point, drag and drop to move particular items across the screen.
5. Pinch with two fingers or double-tap the screen, to zoom in/out on a web page or an image.

NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side.

Home Screen

You choose what is shown on your Home Screen. Set your own wallpaper, add widgets or application shortcuts you need, or remove them as you like.

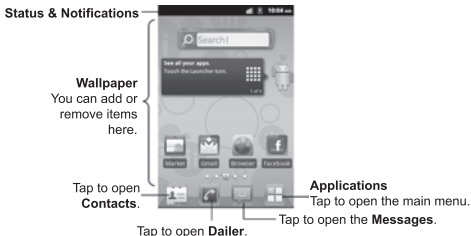

Extended Home Screen

The Home Screen extends beyond the screen width, giving you more space to add more stuff. Simply slide your finger to the left or right to see the extended Home Screen.



Choosing Your Wallpaper

 
1. Tap **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **Wallpaper**.
3. Select the wallpaper you want to use from **Gallery**, **Live wallpapers**, or **Wallpapers**.
4. Tap **Save** or **Set wallpaper**.

Adding Things to Your Home Screen

1. Tap **Home Key** to return to the Home Screen.
2. Slide left or right to find a part of the Home Screen with free space.
3. Tap **Menu Key** and select **Add**.
You can also tap and hold the blank area of the Home Screen to get the **Add to Home screen** menu.
4. Select a category and the item you want to add to the Home Screen.

Removing Things from Your Home Screen



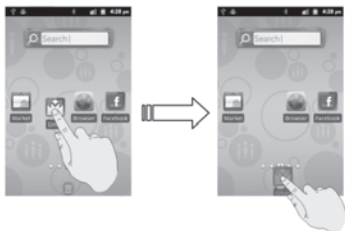



















1. Tap **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the  icon appears on the screen.
3. Drag the item to  and release your finger when the item turns red.




Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

	Signal strength		Phone speaker off
	New Wi-Fi network detected		Phone microphone off
	Error or warning		GPS on
	USB connected		Recording phone call
	Battery flat		Connected to a Wi-Fi network
	Battery very low		Alarm set

	Battery low		Wired microphone headset
	Battery partially drained		Bluetooth on
	Battery full		Speaker on
	Battery charging		Problem with SMS/MMS delivery
	Syncing		New instant message
	Vibrate mode		Sending data
	Airplane mode		Song is playing
	New mail		Downloading data
	New SMS/MMS/voicemail		Content downloaded and installed successfully
	New Gmail message		Call in progress
	Missed call		Roaming

 Using the Notification Panel

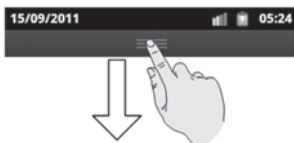

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new messages, and current settings – such as call status. From here you can also open new messages, reminders, etc.

TIPS: You can also open the Notification Panel by tapping **Menu Key > Notifications** from the Home Screen.

Applications and Settings Preview

Programs Preview


Your phone has lots of functions. Tap  to see the following.

Applications	Description
Alarm	Set alarms.
Browser	Browse the internet.
Calculator	Do basic calculation.
Calendar	Schedule appointments and events.
Call log	Show the history call information.
Camcorder	Shoot video clips.

Camera	Take some great pictures.
Downloads	View your downloaded files.
Email	Send and receive emails.
Facebook	Connect to Facebook.
Filer	Manage files on your microSD card and your phone.
FMRadio	Search, listen to and save radio channels.
Gallery	Manage multimedia files.
Gmail	Access your Google Mail account and check your emails on your mobile phone.
Google Search	Search for information online or on your phone.
Latitude	See your friends' locations on the map and share yours with them.
Maps	Track your current location, view real-time traffic, and receive detailed directions to your destination.
Market	Access useful applications and fun games which you can download and install on your phone.
Music	Browse your audio files and listen to them in Music player.

Navigation	Use Google Maps Navigation which is an internet-connected GPS navigation system.
News&Weather	Check out the latest news and weather forecast.
Note pad	Create text notes.
Places	Use the online map to search for the places such as restaurants, hotels, bars, etc.
Public Mobile	Access Public Mobile's Info Portal.
Easy WiFi	Automatically connect to free WiFi networks.
Settings	Adjust phone settings.
Sound Recorder	Capture audio clips.
Stopwatch	Measure exactly how long it takes to do something.
Talk	Use Google Talk to send and receive instant messages.
Task Manager	Manage all the programs running on your phone.
Twitter	Connect to Twitter.
Videos	Browse and watch video files.
Voice Search	Use your voice to search, control, and communicate.
YouTube	Watch YouTube videos.

Checking Your Settings

To change or view your phone's settings, from the Home Screen tap  > **Settings**. or tap **Menu Key** > **Settings**.

Wireless & networks	Configure and manage wireless connections, such as Wi-Fi, Bluetooth [®] , mobile networks, and Virtual Private Networks. You can also select Airplane mode from here.
Call settings	Set up voicemail, speed dial, call waiting, TTY mode, DTMF tones, Plus code dialing setting, etc.
Sound	Set sound settings, such as ringtones and notifications.
Display	Display settings, such as screen brightness.
Location & security	Create your screen unlock pattern, or manage the phone's credential storage. You can also select the sources to use when determining locations from My Location .
Applications	Manage your applications and installation of new ones.
Accounts & sync	Manage your accounts and configure synchronization settings.
Privacy	Configure privacy settings, such as back-up settings, and personal data.
Storage	Check available memory on the external card and the internal phone storage.

Language & keyboard	Set operating system language and region, plus text input options.
Voice input & output	If you have installed a text-to-speech (voice data) application, you can choose the settings.
Accessibility	Choose accessibility options.
Date & time	Set the date and time format.
About phone	View phone status, battery use, and legal information, etc.

Open Recently Used Applications




1. Hold **Home Key** from any screen. The phone will display icons of applications you used recently.
2. Tap the application you want to open.

Phone Calls

How to Make Calls


There are many ways to make a call with your phone. And they're all easy to do.


Calling from the Dialer

1. Tap  on the Home Screen.
2. Enter the phone number with the on-screen keypad.
Tap  to delete wrong digits.
3. Tap .

TIPS: To make international calls, hold  to enter the “+”.

Calling from Your Contacts

1. Tap  on the home screen.
2. Slide your finger to scroll the contacts list and tap the contact you want to call.

You can search for a contact by tapping  and entering the contact name.



3. Tap .

Calling from Your Call History

1. Tap **Home Key** >  > **Call log**.
2. Tap  next to the number you want to call.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.


1. Tap  on the Home Screen.
2. Tap the conversation and then the message that contains the phone number you need.
3. Tap the number.
4. Tap  .

Using Speed Dial

Press and hold 1 - 9 key from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

Assigning a speed dial key:

1. Tap **Menu Key > Settings > Call settings > Speed dial** from the Home Screen.
2. Tap a speed dial key.
3. Enter a phone number or tap  to select one from the contacts list.
4. Tap **OK**.

How to Receive Calls

Answering a Call

Drag  to the right to answer the call.



Rejecting a Call

Drag  to the left to reject the call.

Ending a Call

Drag  to the right to finish the call.


Adjusting Your Call Settings

From the Home Screen, you can open the call settings menu by going from **Menu Key > Settings > Call settings**.

Voicemail service	Select a voicemail service provider.	
Voicemail settings	Specify a voicemail number.	
TTY mode	Select TTY mode.	
DTMF tones	Set the length of DTMF tones.	
Plus Code Dialing Setting	Set Plus Code dialing number.	
Speed dial	Set speed dialing keys and numbers.	
Additional settings	Call waiting	See new incoming calls while you're on another call.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact synchronizing.


To see your contacts, tap  from the Home Screen. From there, you can tap the tabs on the top to quickly switch to dialer, call log, favorite contacts, or contact groups.

Importing and Exporting Contacts

You can import/export contacts from/to your microSD card.

1. Tap **Menu Key > Import/Export** from the Contacts Screen.
2. Choose to import or export contacts. If you want to import contacts from the microSD card, you should have vCard files saved in the microSD card. If there's more than one vCard file, you need to select the vCard file and tap **OK**.

Sharing Contacts Information

1. Tap  /**Menu Key > Import/Export > Share visible contacts** from the Contacts Screen. Your phone will export all information of the contacts in the Contact Screen to a temporary vCard file.
2. Choose how you want to send the vCard file. You can either send it via Bluetooth to another device, or as an attachment in an Email, Gmail or a message.

Creating a Contact

1. Tap  or  /**Menu Key > New contact** from the Contacts Screen.


2. Enter the contact name and phone numbers, emails, IM accounts, postal addresses, etc.
3. Tap **Done** to save the contact.

Adding a Contact to Favourites




1. In the Contact Screen, tap and hold the contact you want to add to **Favourites**.
2. Tap **Add to favourites** from the pop-up menu.


TIPS: You can also tap a contact and then tap  next to the contact's name to add it to **Favourites**.

Searching for a Contact

1. Tap  at the bottom of the Contacts Screen.
 2. Input the contact name you want to search for.
- The contacts matched will be listed.

Creating a New Group

1. Tap the **Groups** tab from the Contacts Screen.
2. Tap  at the bottom of the screen.
3. Enter the group name and tap **Done**.
4. Tap the new group and tap  to add group members.
5. Tick the check boxes next to the contacts you want. Then tap .

To send messages to the group members, you can tap  next to the group and select message recipients from the listed group members.

Entering Text

When you enter a field that needs text or numbers, a keyboard automatically appears on the screen. Hold the input box and select **Input method** from the pop-up menu to change input method.







Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape.

To use the landscape keyboard, just tick the **Auto-rotate screen** check box in **Settings > Display**. (The landscape QWERTY keyboard is not supported in all applications.)



- Tap the alphabetic keys to enter letters. Tap and hold the keys to enter associated accented letters or numbers. For example, to enter È, tap and hold **E** and the available accented letters and number 3 appear. Then slide to choose È.
- Tap **↵** to use uppercase or lowercase. This key also changes to indicate the current case you are using: **↵** for lowercase, **↵** for uppercase, and **↵** when locked in uppercase.

- Tap  to delete any text you have entered.
- Tap  to select numbers and symbols. You can then tap  to find more. Also, often used symbols are displayed on top of the keyboard. Flick left or right to find the one you need and tap to enter.
- Tap  to enter a smiley face; hold the key and swipe to choose more emoticons.
- Tap  to change input method or set up Android keyboard.
- Tap  to use Google's networked voice input.

XT9 Text Input

XT9 Text Input can speed up text input by replacing the key tapping motion of input with a tracing gesture where you move your finger from letter to letter without lifting the finger until you reach the end of the word.

XT9 offers three keyboard layouts, Keyboard, Reduced keyboard, and Phone keypad.

• Keyboard

Tap to switch between uppercase and lowercase. Tap twice to lock on uppercase.

Tap to select digits and symbols.



 
Delete text before the cursor.

Tap or hold to input emoticons.


Move your finger from letter to letter to trace a word without lifting the finger until you reach the end of the word.

The trace feature is also available in the Reduced keyboard layout and Phone keypad layout.


Move your finger on the letters without lifting it up.

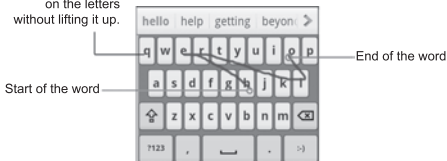


- **Reduced keyboard**

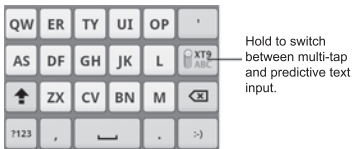 


- **Phone keypad**

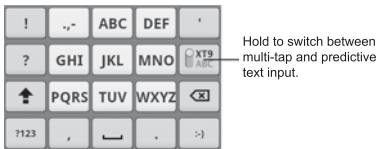 

Using the toolbar

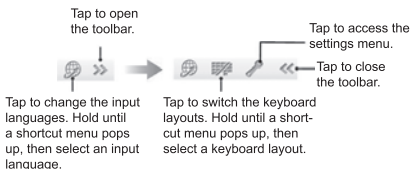 

Notes:

The  icon is available when more than one language is activated. You can select more input languages by pressing **Menu Key > Settings > Language & keyboard > XT9 Text Input > Languages and settings** from Home Screen.

Tips for using XT9 Text Input:


- Ignore double letters – XT9 Text Input will figure those out for you automatically.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Choosing Touch Input Settings

Choose the touch input settings by tapping **Menu Key > Settings > Language & keyboard** from Home Screen.

In the **Keyboard settings** section, you can choose the settings for Android keyboard and XT9.

Messaging


Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in  from the home screen.

The Message Box

Instead of an inbox and outbox, your phone organizes all messages you sent and received into one box, where messages exchanged with the same party are grouped into a message thread in the Messaging Screen. You can tap a message thread to see the conversation you have had with someone.

Message threads are sorted in chronological order with the latest one on top.

Sending a Message

1. Tap  from the home screen.
2. Tap **New message**.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient.
4. Tap **Type to compose** and type your message.
 - Tap **Menu Key** to insert Quick Text, signature, smiley, or contact.
 - If you are sending an MMS, tap **Menu Key >Attach** to attach pictures, videos, audio, or slideshows.
5. Tap **Send** to send your text.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments from an MMS, it'll automatically become a text message.

Changing Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messages Screen.

Storage settings:

- **Delete old messages:** Select to delete old messages when your storage limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text message (SMS) settings:

- **Delivery reports:** Request a delivery report for every text message you send.
- **SMS validity:** Set the validity time limit for outgoing text messages.
- **SMS priority:** Set the priority of outgoing messages.

Multimedia message (MMS) settings:

- **Delivery reports:** Request a delivery report for every MMS message you send.
- **Read reports:** Request a read report for every MMS message you send.
- **Auto-retrieve:** Automatically retrieve MMS messages.
- **Roaming auto-retrieve:** Automatically retrieve MMS messages when you're roaming.
- **MMS validity:** Set the validity time limit for outgoing multimedia messages.

- **MMS Priority:** Set the priority of outgoing multimedia messages.
- **MMS creation mode:** Select MMS creation restrictions. An MMS created under restricted mode is more likely to be displayed properly on other devices than those created under free mode.

Notification settings:


- **Notifications:** Show message notifications in the status bar.
- **Select ringtone:** Choose a ringtone for your incoming messages.
- **Vibrate:** Make your phone vibrate when a new message arrives.

Signature settings:

- **Edit signature:** Edit your signature, which can be added automatically to outgoing messages.
- **Add signature:** Add the signature to all outgoing messages.

NOTE: Tap **Menu Key > Restore default settings** to change all the message settings back to the original.

Email

Tap **Home Key** >  > **Email**. You can enter the Email Screen to setup your Email account and exchange Emails.

Creating an Email account

1. When you open **Email** for the first time, enter your Email address and password. Then tap **Next**.
2. Select the type of your account and tap **Next**.
3. Edit the settings for incoming server and outgoing server. Then tap **Next** or **Next [Check]**.

Press **Next [Check]**, and your phone will connect to the Internet and verify the settings before proceeding to the next step. Please contact your mobile service provider and Email service provider for more help.

NOTE: Your phone knows the client settings for many Email service providers. If the Email you use is from those providers, the phone will automatically configure the incoming and outgoing settings after you enter your Email address and password.

4. Set the Email checking frequency, download settings, account name and other settings. Tap **Done** when you finish. Your phone will show the inbox of the Email account and start to download Email messages.

TIPS: To add more Email accounts, open **Email** to get the Inbox screen. Then tap **Menu Key** > **More** > **Accounts** > **Menu Key** > **Add account**.

Receiving Emails

Press **Menu Key > Refresh** to download recent Emails. You can select **Load more messages** at the bottom of the Email list to download earlier messages.

Composing and sending an Email

After creating an Email account, you can compose and send Email messages.

1. Tap **Menu Key > Compose** from the Inbox Screen.
2. Tap **To** field if needed, and enter the recipient's address.
When you enter the address, matching contacts on the phone will be displayed. Separate each recipient with a comma.

TIPS: You can also tap **Menu Key > Add Cc/Bcc** to add more recipients.

3. Enter the subject and the content of your Email. If necessary, change the email priority.
Tap **Menu Key > Add attachment** to add files to the Email.
4. Tap **Send**.

Replying to or Forwarding an Email

1. Open the Email you want to reply to or forward from Inbox Screen.
2. Tap **Reply** or **Menu Key > Forward** to reply to/forward the Email.
You can also tap **Reply all** to reply to all recipients of the Email.
3. Enter the contents/recipients of your Email.
4. Tap **Send**.

Deleting an Account

1. Open the **Email** application. If there is at least one account, tap **Menu Key > More > Accounts** to get the **Accounts** list.
2. Tap and hold the account you want to delete and select **Remove account** from the pop-up menu.
3. Tap **OK** to confirm. All Email messages in the account will be deleted.

Email Settings

Tap the account you want to set from the Email Screen and tap **Menu Key > More > Account settings**. You can get the settings for the Email account. You can also tap **Menu Key > More > System settings** to set up storage, exchange and other settings.

Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the web via your mobile network, or Wi-Fi.

The mobile network connection can be enabled/disabled manually. Just select **Menu Key > Settings > Wireless & networks > Mobile networks** from the Home Screen and tick or clear the **Data enabled** check box.

Turning on Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 meters).

1. Tap **Home Key > Menu Key > Settings > Wireless & networks**.
2. Tick the **Wi-Fi** box to turn it on.

Connecting to a Wi-Fi Network


1. Tap **Home Key > Menu Key > Settings > Wireless & networks > Wi-Fi settings**.

The Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.

2. Tap an access point to connect to it.

If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.




Or tap the access point that the phone is currently connected to in **Wi-Fi settings**. You can then check the network status from the pop-up window.

Browsing the Internet

You can use your phone to get on the Internet via mobile network or Wi-Fi connection.


Tap **Home Key** >  > **Browser**.

There are different ways to open web pages:


- Tap the address bar to enter the website you want to browse. Then tap .
- Tap  beside the address bar or tap **Menu Key** > **Bookmarks**. Select a bookmark to open.
- Tap  beside the address bar or tap **Menu Key** > **Bookmarks**. Choose an item from the **Most visited** tab or **History** tab.

Browsing Options

- **Refresh:** **Menu Key** > **Refresh**.
- **Forward:** **Menu Key** > **More** > **Forward** to browse the next web page.
- **Search:** **Menu Key** > **More** > **Find on page** and enter the search item.
- **Copy:** **Menu Key** > **More** > **Select text** and slide your finger on the page to select the text you want to copy. Your phone automatically copies the selected text to the clipboard.
- **Share pages:** **Menu Key** > **More** > **Share page** to send a page by Bluetooth, Email, Facebook, Gmail, Messages, or Twitter.
- **Downloads/Page info:** **Menu Key** > **More** > **Page info/Downloads**.


- **Landscape browser: Home Key > Menu Key > Settings > Display.** Tick the **Auto-rotate screen** box and rotate your phone sideways to view the landscape browser screen.
- **Open new browser window: Menu Key > New window.** Then tap the address bar to enter the website you want to browse.
- **Switch browser windows:** If you have more than one browser window open, you can switch between these windows by tapping **Menu Key > Windows**. Then tap the page you want to browse. You can also tap  to close a window.

Using Bookmarks


To bookmark a web page, open it and tap  or **Menu Key > Bookmarks**. Then tap **Add**. Give the bookmark a name and tap **OK**.

TIPS: You can press **Menu Key > List view/Thumbnail view** to change how you view bookmarks on your phone screen.

Editing a Bookmark

1. Open a Browser window.
2. Tap  or **Menu Key > Bookmarks**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **OK** to save it.

Deleting a Bookmark

1. Open a Browser window.
2. Tap  or **Menu Key > Bookmarks**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm.

Changing Browser Settings

Tap **Menu Key > More > Settings** from a browser window to change browser settings.

Opening Links in Web Pages

When you're on a web page with a link to another site, either tap the link to open the page, or hold on the link to open the shortcut menu, giving you these options:

- **Open**
- **Open in new window**
- **Bookmark link**
- **Save link**
- **Share link** (by Bluetooth, Email, Facebook, Gmail, Messages, or Twitter.)
- **Copy link URL**

Bluetooth®

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Tap **Home Key > Menu Key > Settings > Wireless & networks** and tap the check box by **Bluetooth** to turn on Bluetooth.

When Bluetooth is on, the  icon will appear in the status bar.


2. Tap **Bluetooth settings > Scan for devices**. Your phone will show all visible Bluetooth devices in range.
3. Tap the device you want to pair with and, if required, enter your PIN and tap **OK**.


If a PIN is required, the same PIN should be entered on the other device. Refer to the document for the other Bluetooth device for information on pairing mode and PIN.

Tick the **Discoverable** check box if the other device tries to pair with your phone.


Making the Most of Multimedia

Taking Pictures with Your Camera

Your phone has a 2-megapixel camera. Open it by tapping **Home Key** >  > **Camera**.

Tap  to take a shot. To view it, just tap the picture in the right corner of the screen. Or select **Menu Key** > **Gallery** to view all your pictures.



Adjusting Camera Settings

From the Camera Screen tap  to set up exposure, picture size/quality, color effect, ISO, anti-banding, saturation, contrast, sharpness, or to restore defaults.


Tap  to choose whether to save photo's geographic location.



Tap  to change white balance.

Tap  to zoom in or out.


TIP: To change quickly from camera to camcorder or vice versa, use the switch  icon. Use the  bar to adjust the brightness.


Shooting Video with Your Camcorder


Open the camcorder by tapping **Home Key** >  > **Camcorder**.

Then select  to start shooting, and  to stop. Select the picture in the right corner of the screen to view the video you've just shot. Or tap **Menu Key** > **Gallery** to see all your video clips.

Adjusting Your Video Settings

From the Camcorder Screen, tap  to adjust color effect, video quality, video/audio encoder, video duration, or to restore defaults.



Tap  to change white balance setting.





Tap  to change video quality, video/audio encoder, and video duration together. And the icon will change to **High**, **Low**, **MMS** or **YouTube**.

Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. A wired headset is required which works as an antenna. Please always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will be turned off.


To tune in, plug your headset into your phone. Tap **Home Key >**

 **> FMRadio**. This  icon will pop up in the status bar.

Tap  or  to scan for available FM channels. If you need to fine tune the radio's reception, tap **Menu Key > Adjust**. Tap  /  change the frequency by +/-0.1 MHz.


Once you get the best reception of a channel, hold the frequency shown until a red box appears on the screen, and then drag it into the box to save, as shown in the next diagram.

 


- Press **Volume Keys** to adjust the volume.
- Tap **Menu Key > Sleep** to set the FM radio sleep timer.
- Tap  to switch off the radio.

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**.

1. Tap **Home Key >  > Music** to open the Music Screen.
2. Select **Artists/Albums/Songs/Playlists** to find the songs you want to play.
3. Tap an item from the list to start playing.
4. Adjust the volume with **Volume Keys**.

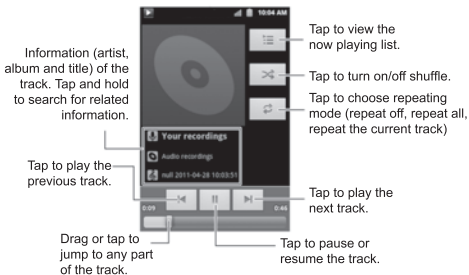

Creating Playlists

Playlists help you organize your music files:

1. Select a music file you want to add to a new playlist.
2. Tap and hold on the file until a shortcut menu pops up.
3. Tap **Add to playlist**.
4. Tap **New**.
5. Type the playlist name and tap **Save**.

Managing Playlists

1. From the Music Screen tap **Playlists** to see them all.
2. Hold on the playlist you want to play or edit until a shortcut menu pops up.
3. Tap **Play**, **Delete** or **Rename**.

Adding a Song to a Playlist


1. Open **Music** and find the song you need under **Artists**, **Albums**, **Songs**, or **Playlists**.

 
2. Hold on the song until a shortcut menu pops up.
3. Select **Add to playlist**.
4. Select a playlist.

Setting a Song as Ringtone

1. Find the music file under **Artists**, **Albums**, **Songs**, or **Playlists**.
2. Hold on the song until a shortcut menu pops up.
3. Select **Use as phone ringtone**.

Playing Your Videos


To play a video file, tap **Home Key** >  > **Videos**. Tap a video file to start playing. Tap on the screen and the control bar will appear as below. So now you can play, pause, fast forward, etc.

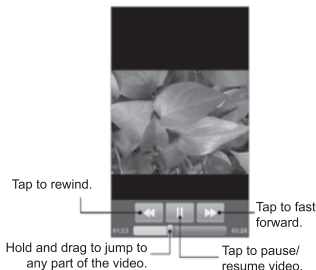

Opening Your Gallery



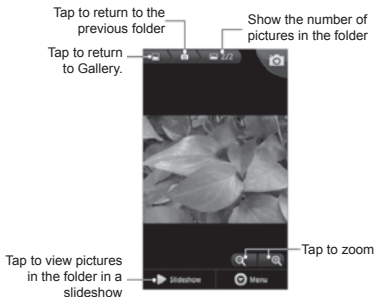 

Gallery helps you view pictures and play videos. You can also


do some basic editing of your pictures – such as setting them as wallpaper or contact icons, and sharing with friends.



Making Memorable Memos

Sound Recorder enables you to record your voice memos. You need a microSD card to use it.

1. Tap **Home Key** >  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.
5. Tap **OK** to save the voice recording, or tap **Discard** to delete the recording.

TIPS: You can find your recordings in **Home Key** >  > **Music** > **Playlists** > **My recordings**.

Using Your Google™ Applications


Signing in to your Google Account lets you synchronize Gmail and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

1. Tap a Google application that need a Google account, such as **Market**.
2. Read the instructions and select **Next**.
3. If you have a Google account, tap **Sign in**. Enter your user name and password. Then tap **Sign in**. (Or tap **Create** if you don't have a Google account.)


Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web.

This is how you create and send a Gmail:

1. Open **Gmail** by tapping **Home Key** >  > **Gmail**.
2. Press **Menu Key** > **Compose**.
3. Enter the email address of the person you're contacting in the '**To**' field. If you're sending the email to several people, separate the email addresses with commas. You can add as many recipients as you want.
4. Enter the email subject, and then write your email.
5. Tap **Menu Key** > **Send**.

Using Google Calendar

Tap **Home Key** >  > **Calendar** to use Google Calendar, Google's time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the screen as scheduled. You can also synchronize appointments to your Google account, which enables you to manage your schedule online on your PC.

Using Google Talk

Google Talk is Google's instant messaging program, which enables you to communicate with other people who also use it.

Opening Google Talk


Tap **Home Key** >  > **Talk**.

Adding a New Friend

You can only add people who have a Google Account.

1. In the Friends list, press **Menu Key** > **Add friend**.
 2. Enter the Google account of the friend you want to add.
- Your friend will receive an invitation from Google. Press **Menu Key** > **More** > **Invites** to see pending invitation.

Changing Your Online Status


1. Tap the Talk status bar above the Friends list.
2. Tap  to change status and then enter your status message in the text box.

Starting a Chat

1. Tap a friend in the Friends list.
2. Chat with your friend by entering text in the message box.
3. Tap **Send**.


Places


Google Places helps you find all kinds of businesses near you.

1. Tap **Home Key > Menu Key > Settings > Location & security** and tick the **Use GPS satellites** or **Use wireless networks** check box.
2. Tap **Home Key >  > Places**. Wait while you are being located. Your location, when found, is shown at the bottom of the screen.
3. Select a business category and the information of that type of business near you will be displayed.
You can also use the **Find places** search box on the top to find the business you need.
4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.

Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends.

Tap **Home Key >  >Latitude** to enable Latitude service.

Each time you launch Maps application, your location will be determined using GPS or the phone network, and your Latitude status will be updated. You can tap **Menu Key > Latitude** in Maps or **Home Key >  > Latitude** to see your status as well as that of your selected friends.

In Latitude, tap **Menu Key** to refresh friends status, see them on Maps, add new friends, or change Latitude settings.

You can also turn off Latitude service by tapping **Sign out of Latitude** in the settings of **Latitude**.

Sorting out Your Phone Settings

Changing Display Settings


By tapping **Home Key > Menu Key > Settings > Display**, you can adjust the display settings as you like:

 
- **Brightness:** Adjust brightness of the screen.
- **Auto-rotate screen:** Rotate the screen display as you rotate the phone.
- **Animation:** Choose window animation.
- **Screen timeout:** Set the delay for the screen to automatically turn off.

Sound Settings

By tapping **Home Key > Menu Key > Settings > Sound**, you can adjust the sound settings, such as setting ringtones and volume, turning on silent mode or vibration, allowing sound feedback for touching keys, making selections, locking the screen and making emergency call.

- **Silence Ringer When Face Down:** Mute an incoming call when you flip the phone over.
- **Phone ringtone / Notification ringtone:** Select the default ringtones for incoming calls and notifications.
- **Haptic feedback:** Vibrate when pressing soft keys or on certain user interface interactions.

To quickly switch to silent mode, press the **Volume – Key** or, if the screen is locked, drag  to the left.

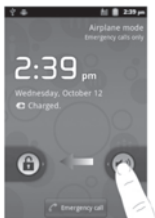

Language Settings

You can change the language of your phone system in two simple steps.

1. Tap **Home Key > Menu Key > Settings > Language & keyboard > Select language.**
2. Select a language from the list given.

Mobile Network Services

Tap **Home Key > Menu Key > Settings > Wireless & networks > Mobile networks** to enable or disable data service, allow data services when roaming, enable always-on mobile data, or change the CDMA roaming mode.

IMPORTANT: Data roaming may incur significant roaming charges.

Security Settings

Here's how to protect your phone from unauthorized use.

Protecting Your Phone with a Screen Unlock Pattern

Creating Your Screen Unlock Pattern

1. Tap **Home Key > Menu Key > Settings > Location & security > Set up screen lock > Pattern.**
2. Read the instructions and tap **Next.**
3. Watch the example pattern and tap **Next.**
4. With a finger, draw your own pattern and tap **Continue.**
5. Draw the pattern again and tap **Confirm.**
6. Press **Power Key** to lock the screen.

TIPS: Clear the **Use visible pattern** box if you want to hide the pattern as you draw it on the screen.

Unlocking the Screen with Your Pattern


1. Press **Power Key** to wake up the screen.
 2. Draw the pattern you set to unlock the screen.
- If you make a mistake, your phone will ask you to try again.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password

1. Tap **Home Key > Menu Key > Settings > Location & security > Set up screen lock.**
2. Tap **PIN or Password.**
3. Enter the numeric PIN or any password you like, and tap **Continue.**
4. Enter it again and tap **OK** to confirm.

Unlocking the Screen with Your PIN or Password

1. Press **Power Key** to wake up the phone.
2. Drag the  icon to the right.
3. Enter the PIN or password you set.

4. Tap **OK**.

Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

1. Tap **Home Key > Menu Key > Settings >Location & security > Change screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created.
3. Tap **None**.

Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Enabling Secure Credentials

1. Tap **Home Key > Menu Key > Settings >Location & security**.
2. Tap **Set password** and create a password for the credential storage.
3. Tick the **Use secure credentials** box.

TIPS: You can also install encrypted certificates from your microSD card by tapping **Install from SD card**.

Deleting Secure Credentials

1. Tap **Home Key > Menu Key > Settings >Location & security**.
2. Tap **Clear storage** to clear credentials.

Managing Your Device Memory

Tap **Home Key > Menu Key > Settings > Storage**.

You can view space information for the microSD card and storage information for the phone storage.

- **Unmount SD card:** You can unmount the card and safely remove it without switching the phone off.
- **Erase SD card:** Erase all data on the memory card.

Privacy: Reset to Factory Settings

Tap **Home Key > Menu Key > Settings > Privacy > Factory data reset > Reset phone > Erase everything**.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.


Managing Applications

Tap **Home Key > Menu Key > Settings > Applications**.


- **Manage applications:** Manage or remove installed applications.
- **Running services:** Check currently running services and stop them if needed.
- **Storage use:** View storage used by applications.
- **Battery use:** View what has been using the battery.
- **Development:** Set options for application development.

Tick the **Unknown sources** check box if you want to installed applications from sources other than the Android Market. Note that you may risk your phone and personal data by installing such applications.

How to Install an Application

You can install an application from the Android Market (**Home Key** >  > **Market**) by selecting the item you want to download and tapping **Install**.

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the microSD memory card and install the card in your phone.
2. Tap **Home Key** >  > **Files**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read and follow the installation instructions that come with the application to complete the setup.

Managing Other Settings

Search Settings

You can manage search settings and search history by opening the **Google Search** application and tapping **Menu Key** > **Search settings**.

- **Google search:** Adjust Google search settings.
- **Searchable items:** When you search for an item on your phone, only the searchable items will be looked for.

You can also clear shortcuts to recently chosen search suggestions.

Voice Interaction

You can set the text-to-speech and voice recognition options by tapping **Home Key > Menu Key > Settings > Voice input & output**.

NOTE: You need to download voice data in order to use the text-to-speech function. Just tap **Install voice data** in **Text-to-speech settings**.

Accessibility


Configure accessibility options for accessibility-related applications.

About Phone

Check system updates, phone status and battery use, or view legal information and software versions.

Other Applications

Alarms

1. Tap **Home Key** >  > **Alarm**.
2. Tap the default alarm to configure it. Or, to create a new alarm, tap **Menu Key** > **Add alarm**.
3. Tick the **Turn on alarm** box and set up **Name**, **Time**, **Repeat**, **Snooze**, **Duration**, **Vibrate**, **Ringtone**, **Volume**, **Volume crescendo**, and **Delay**.

Note Pad

Note pad is for your memos. Tap **Menu Key** to add or delete them, or to export the text to a txt file in the microSD memory card. Hold an existing note to edit, delete, share or export, or to change its title.

Calculator

Tap **Home Key** >  > **Calculator**.

TIPS: Tap **Menu Key** > **Advanced panel** to use scientific calculation.

Task Manager

Tap **Home Key** >  and select **Task Manager** to view or stop applications.

Stopwatch

1. Tap **Home Key** >  > **Stopwatch**.
2. Tap **Start** to start timing, **Pause** to pause time, and **Resume**

to continue.

3. **Reset** will take the stopwatch back to 00:00.0.

Facebook

Tap **Home Key** >  and select **Facebook** to Share and stay connected with your friends.

Twitter

Tap **Home Key** >  and select **Twitter** to get short bursts of timely information.

Easy WiFi

Automatically connect to free WiFi networks.

Specifications

Dimensions		Approx. 114 mm × 56 mm × 12.2 mm
Weight		Approx. 120g (with battery)
Bearer		CDMA/EvDo support
OS		Android 2.3.5
Main display dimension, Resolution		3.5", 480x320 (HVGA)
Back Camera	Sensor type	CMOS
	Still image capture resolution	2M Pixels
Internal memory		ROM: 512MB, RAM: 256MB
Removable memory card		Support microSD card, max. capacity 32GB
Battery	Capacity	1500mAh
	Standby time	Approx. 200 hours (subject to network status)
	Voice talk time	Approx.240 min (subject to network status)
Browser		WWW and WAP browser
Support		Bluetooth, Wi-Fi