



## Display Icons

### Service & Status Icons

	Signal Strength – Your phone's current signal strength. (More bars = stronger signal.)
	No Service – Your phone cannot find a usable signal.
	Data Service (EVDO) Active – Sprint mobile broadband data service (EVDO) is available. When active, the icon is animated.
	Data Service (EVDO) Dormant – Sprint mobile broadband data service (EVDO) is currently dormant.
	Data Service Active – Data service is available. When active, the icon is animated.
	Data Service Dormant – Data service is currently dormant.
	Data Service Unavailable – Data Service is currently unavailable.
	Battery – Your phone's current battery charge level. (The icon to the left shows the battery is fully charged.) The icon is animated while the battery is charging.
	Location On – Your phone's location feature is on and available for location-based services such as GPS Navigation.
	Location Off – Your phone's location feature is off. Your location is available only for 911.
	Silence All – Your phone's sound is turned off.
	Vibrate All – Your phone's sound is turned off but vibrate is turned on.
	Ringer Off – Your phone's ringer is turned off.
	1 Beep – A beep sounds when you receive an incoming call, a message, etc.
	1 Beep and Vibrate – 1 beep and vibrate are set.
	Ringer and Vibrate – The volume level is set to between 1 and 8 and vibrate is turned on.

### Messaging Icons

	Email – You have one or more new email messages waiting.
	Multiple Messages – You have two or more different types of new messages waiting.
	New Messages – You have one or more new messages waiting.
	Voicemail – You have one or more new voicemail messages waiting.
	Urgent Messages – You have one or more new urgent messages waiting.
	Application Alerts – You have alert messages from Java applications activated in the background.

### Bluetooth Icons

	Visible – Your phone is discoverable by (visible to) other Bluetooth devices.
	Connected – Your phone is connected to a Bluetooth device.
	Enable – Your phone's Bluetooth feature is enabled.
	Connected via HFP – Your phone is connected to or communicating with a Bluetooth device via Hands-free Profile (HFP).
	Connected via A2DP – Your phone is connected to or communicating with a Bluetooth device via Advanced Audio Distribution Profile (A2DP).

### Voice Call Icons

	Missed Call – You have one or more missed voice calls.
	Bluetooth Device – A call is in progress using a Bluetooth device.
	Headset – A call is in progress using an optional wired headset.
	Car Kit – A call is in progress using an optional car kit device.

### Others

	Alarm – An alarm or countdown is set.
	Notification – You have event, alarm, or countdown notification(s).
	Multitasking Virtual Machine – Indicates Java applications are running.

## Technical Specifications

### Talk Time

Up to 5.1 hours

### Screen Resolution

Main display: 2.6", QVGA (320 x 240 pixels) TFT LCD, 262K-color  
Sub-display: 1.1" (128 x 64 pixels) glow-thru sub OLED

### Chipset

QSC6075

### Banding

CDMA 1x EVDO, dual-band digital (800, 1900 MHz)

### Size

4.2 x 2.2 x 0.7 in (107 x 55 x 16.6 mm)

### Weight

4.3 ounces (120 grams)

### Battery Type

SANYO 840 mAh Lithium Ion battery

### Bluetooth® (version 2.0 + EDR)

Profiles:

- A2DP/AVRCP (Stereo Bluetooth)
- BPP (Bluetooth Printing)
- FTP (File Transfer Protocol)
- GAVDP (Generic Audio/Video)
- HFP 1.5 (Hands-free car kits)
- HSP (Headsets)
- OPP (vCard transfer)
- PBAP (Phone Book Access)
- SPP, GOEP (General)

## Product Training

[www.kyocera-wireless.com/iteachu/boostmobile](http://www.kyocera-wireless.com/iteachu/boostmobile)

## Product Information

[www.sanyoincognito.com](http://www.sanyoincognito.com)

## Consumer Support

1-800-349-4478

[phone-help@kyocera-wireless.com](mailto:phone-help@kyocera-wireless.com)

## Kyocera Communications, Inc.

10300 Campus Point Drive, San Diego, CA 92121

USA 1-800-349-4188, Outside USA +1-858-882-1400



©2009 Kyocera Communications, Inc. (KCI), San Diego, CA, USA. All rights reserved. KYOCERA is a registered trademark of Kyocera Corporation. "SANYO" is a registered trademark of SANYO Electric Co., Ltd. and is used under license. Incognito is a trademark of KCI. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners. Because its products are subject to continuous improvements, KCI reserves the right to modify design, features and specifications without notice. Certain features may require optional services and may involve additional charges. Screen Images are simulated.

Use only Kyocera Communications, Inc. approved accessories with the Incognito phone. Use of unauthorized accessories may be dangerous or invalidate the warranty if they cause damage to the phone.

Printed in USA 1/10  
TMW0019570

# incognito™



# SANYO



Kyocera manufactures and markets the SANYO line of wireless products.

[www.kyocera-wireless.com/iteachu/boostmobile](http://www.kyocera-wireless.com/iteachu/boostmobile)



# Conceal and reveal.

What you reveal is up to you. The Incognito™ features a concealed external keypad that glows through its mirrored surface on command. Inside, a full QWERTY keyboard, 2.6" display and rich media capabilities allow you to stay connected and entertained.

Messaging
Multimedia Messaging Service (MMS)
Mobile email capable
Threaded Text Messaging
Instant messaging
Camera and Camcorder
2.0 MP camera and camcorder
Picture/video sharing capable
PictBridge capable
Entertainment
Music player
Games – play preloaded or download new
Social networking – Facebook® and MySpace®
Web & Tools
One Click – quick access to features without leaving the main screen
Mobile web (WAP 2.0)
Download ringtones, games and screen savers
Voice memo recorder, alarm clock, calendar, to-do list, calculator, stopwatch, countdown timer, world clock
Navigation capable
Additional Features
Stereo Bluetooth® capable
Speaker-independent voice-activated dialing
Bilingual user interface – English and Spanish supported
TTY & Hearing aid compatible (M4/T4 rating)

Highlights		
1	<b>Earpiece</b>	Lets you hear the caller and automated prompts.
2	<b>Outer Screen</b>	Displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
3	<b>TALK Key</b>	Allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Automatic Speech Recognition (ASR).
4	<b>Power/Lock Button</b>	Lets you turn the phone on or off or lock the glow-thru keypad.
5	<b>Touch-Sensitive Keypad</b>	Lets you enter numbers and letters and select menu items with just a light touch of your fingers.
6	<b>Speaker</b>	Lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
7	<b>Camera Lens</b>	As part of the built-in camera, lets you take pictures and videos.
8	<b>Battery Release Latch</b>	Lets you open the battery cover to replace the battery.
9	<b>BACK Key</b>	Deletes characters from the display in text entry mode. When in a menu, pressing it returns you to the previous menu.
10	<b>OK Key</b>	Lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
11	<b>END Key</b>	Lets you turn the phone off, end a call, or cancel your input and return to standby mode.
12	<b>Outer Navigation Key</b>	Scrolls through the phone's menu options.
13	<b>Headset Jack</b>	Allows you to plug in an optional headset for convenient, hands-free conversations.
14	<b>Micro-USB Connector</b>	Allows you to connect a compatible charging cable or USB data cable (not included).
15	<b>microSD Card Slot</b>	Lets you use a microSD memory card to expand the memory of your phone.
16	<b>Volume Button</b>	Allows you to adjust the ringer volume in standby mode or the voice volume during a call.
17	<b>Side Speaker Button</b>	Lets you place or receive calls in speakerphone mode or turn the speakerphone on and off during a call.



Highlights	
18	<b>Main Screen</b>
Displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.	
19	<b>Microphone</b>
Where the microphone port is located on your phone.	
20	<b>Soft Keys</b>
Lets you select softkey actions or menu items corresponding to the bottom line on the Main screen while the phone is open.	
21	<b>Camera Key</b>
Lets you access the Photos & Videos menu and take pictures and videos with the phone open.	
22	<b>TEXT Key</b>
Provides one-touch access to the phone's messaging feature.	
23	<b>TALK Key</b>
24	<b>END/POWER Key</b>
Lets you turn the phone on or off, end a call, or cancel your input and return to standby mode.	
25	<b>OK Key</b>
26	<b>Navigation Key</b>
27	<b>BACK Key</b>
28	<b>Speaker Key</b>



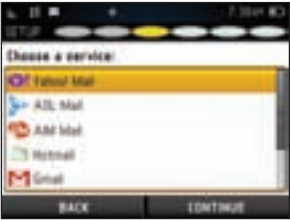
Concealed Keypad
Incognito features a unique external glow-thru keypad that "disappears" when not in use. The settings for this keypad can be adjusted to your preference.
Keyguard
By default, the external keypad is set to on. A spring-loaded switch on the side of the device makes it quick and easy to release.



Backlight
After a period of non-use, the keypad Backlight dims, disabling the touch-sensitive keys and side buttons. To change the Backlight time, select OK > Settings > Display > Backlight > Outer Screen. Select 5, 10, or 30 seconds.
Vibration & Key Beeps
By default, the external keys provide vibration feedback and key beeps when touched. To disable Vibration, select OK > Settings > Volume > Touch Vibrate > Off. To adjust the Key Beeps, select OK > Settings > Volume > Key Beeps.

Touch-Sensitive Keys
> The keys are very responsive. It is not necessary to press hard – just lightly touch the middle of a key with your fingertip.
> When touching the same key two or more times in a row, remove your finger completely from the keypad each time the number is entered.

One Click
One Click lets you customize Incognito to give you quick access to your favorite features.
> Carousel – make it work for you by adding, removing, or rearranging tiles to match how you want to use your phone.
> Tiles – choose from 9 different tiles including Yahoo, MySpace, Facebook, Games, Accuweather, Movie Information, and Things To Do.
> Bubbles – add Date and Time bubbles to your Home screen.

Mobile Email
Incognito supports "push" email from popular sites such as Yahoo!®, Google®, AOL®, MSN® as well as IMAP/POP3 accounts.


Menu & Submenu Items			
Missed Alerts	History	Contacts	Messaging
			1. Voicemail 2. Send Message 3. Messages 4. Email 5. IM
Re-Boost	Get Stuff	Web	My Stuff
			1. Application Manager 2. Games 3. Ringtones 4. Applications 5. Wallpapers 6. Chat Flirt Fun
Music	Pictures	Bluetooth	Settings/Tools
	1. Camera 2. Camcorder 3. My Photos & Videos 4. Other Settings	1. On/Off 2. Visibility 3. Add New 4. Trusted Devices 5. My Bluetooth Info	1. Settings 2. Tools

