

# Part List, Mechanical

Applicable for K550i, K550c, K550im & W610i, W610c







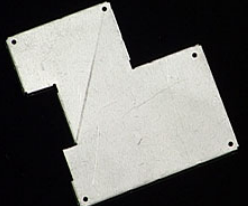 
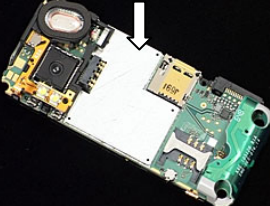 
## CONTENTS

<b>1</b>	<b>General .....</b>	<b>2</b>
<b>2</b>	<b>Parts.....</b>	<b>3</b>
<b>3</b>	<b>Label Part List.....</b>	<b>12</b>
<b>4</b>	<b>Revision History .....</b>	<b>13</b>


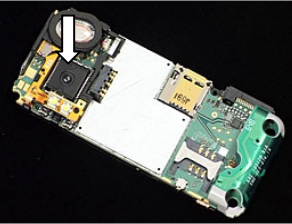 





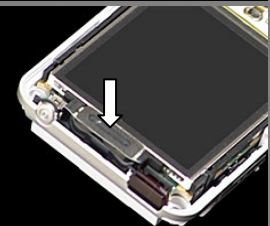 
# 1 General

This Part List includes all parts possible to replace by using the Mechanical Repair Process.  
Parts available to order will be found in the Web Shop.


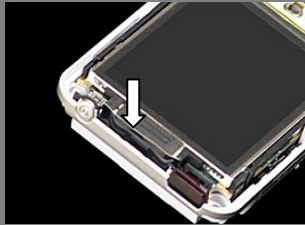 


## 2 Parts

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Antenna Assy	Antenna Assy	SXK1097460	
		Back Cover Complete	Back Cover Complete	SXK1097461 SXK1097569/1 SXK1097569/2	K550 Only W610 Black/Orange W610 Silver/Black
		Battery Cover Assy	Battery Cover Assy	SXK1097513/1 SXK1097513/2 SXK1097570/1 SXK1097570/2	Black K550 White K550 W610 Black/Orange W610 Silver/Black
		Shield Can Lid, BB	Shield Can Lid, BB	SXA1097232	


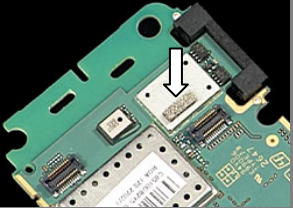 
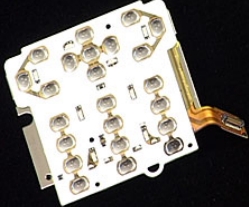 
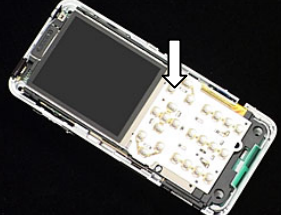 
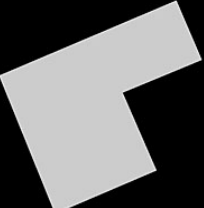 


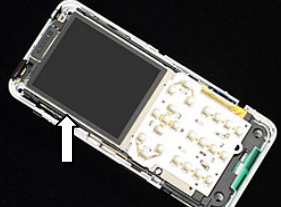 
**Parts continued**

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Camera	Camera	KNC20143	
		Camera Key	Camera Key	SXA1097295 SXA1097485	K550 Only W610 Only
		Co-Brand	Co-Brand	SXA1097311/1 SXA1097311/2 SXA1097311/8 SXA1097311/9 SXA1097311/11 SXA1097473/1 SXA1097473/2 SXA1097473/3 SXA1097473/4	Black Cybershot K550 White Cybershot K550 Black CMCC K550 White CMCC K550 T-Mobile Black K550 Co-Brand/ B/O W610 Co-Brand/ S/B W610 Co-Brand/ B/O CMCCW610 Co-Brand/ S/B CMCCW610
		Ear Speaker "Reciever"	Ear Speaker "Reciever"	RLE90737	


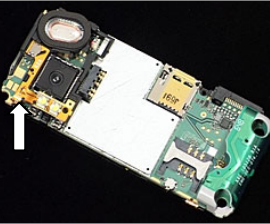 

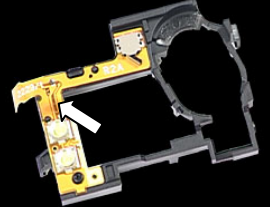 

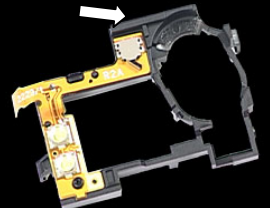 
**Parts continued**

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		ESD Tape	ESD Tape	SXA1097558	
		Front Cover Assy	Front Cover Assy	K550 SXX1097463/Z1 SXX1097463/Z2 SXX1097463/Z3 SXX1097463/Z5 SXX1097463/Z7 SXX1097463/Z9 SXX1097463/Z10 SXX1097463/Z14 SXX1097463/Z39 SXX1097463/Z40  W610 SXX1097567/Z11 SXX1097567/Z12 SXX1097567/Z15 SXX1097567/Z16 SXX1097567/Z21 SXX1097567/Z22 SXX1097567/Z25 SXX1097567/Z26	K550 Latin Black K550 Chinese Black K550 Arabic Black K550 Cyrillic Black K550 Thai Black K550 Latin White K550 Chinese White K550 Bopomofo White K550 Black CMCC K550 White CMCC K550  W610 Black/Orange, Latin Black/Orange, Chinese Black/Orange, Cyrillic Black/Orange, Bopomofo Silver/Black, Latin Silver/Black, Chinese Silver/Black, Cyrillic Silver/Black, Bopomofo




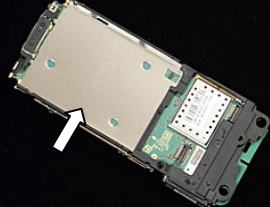 

**Parts continued**

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Gasket on Keypad/LCD		SXA1097428	
		KeyFoil Assy		ROA1282224/1 ROA1282319/1	K550 Only W610 Only
		Label KRH		SVF9302605	
		LCD		RNH80111	

**Parts continued**








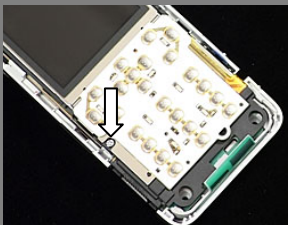 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Socket for FPC & BT	Socket for FPC & BT	SXA1097284 SXA1097458	K550 Only W610 Only
		Flex Assy For Led	Flex Assy For Led	ROA1282223/1 ROA1282320/1	K550 Only W610 Only
		BT Antenna Foil	BT Antenna Foil	KRE105127	

**Parts continued**


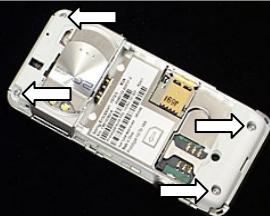 

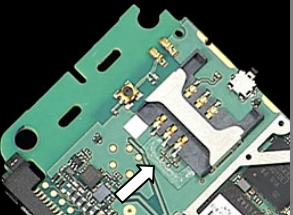 



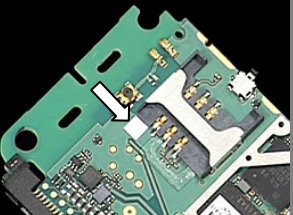 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Loud Speaker	Loud Speaker	RLE90848/1	
		LCD Frame/ Plastic Assy	LCD Frame/ Plastic Assy	SXK1097512	
		Music Player Key	Music Player Key Music Player Key Black&Orange Music Player Key Silver&Black	SXA1097298 SXA1097487/1 SXA1097487/2	K550 W610 W610







**Parts continued**

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Number Keypad	Number Keypad Keypad/W610 B&O Keypad/W610 S&B Keypad/CMCC B&O Keypad/CMCC S&B Keypad/Orange B&O Keypad/Orange S&B	SXA1097400 SXA1097472/1 SXA1097472/2 SXA1097472/3 SXA1097472/4 SXA1097472/5 SXA1097472/6	K550 Only W610 Only W610 Only W610 Only W610 Only W610 Only W610 Only
		Power Key	Power Key	SXA1097296 SXA1097486	K550 Only W610 Only
		RF Cap	RF Cap	SXA1097365	
		Screw M1.4x4	Screw M1.4x4	SXA1095031	

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Screw M1.7x6.5	Screw M1.7x6.5	SXA1095242	
		Protective Tape for SIM Parts	Protective Tape for SIM Parts	SXA1097778	
		Speaker Cover Assy	Speaker Cover Assy Screw Cover, Black/Orange Screw Cover, Silver/Black	SXK1097496/1 SXK1097496/2 SXA1097488/1 SXA1097488/2	Black K550 White K550 W610 W610
		Water Indicator	Water Indicator	SXA1094884	

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Vibrator	Vibrator	BKE90337/2	
		Volume Key	Volume Key Volume key Black&Orange Volume Key Silver&Black	SXA1097294 SXA1097484/1 SXA1097484/2	K550 Only W610 W610

### 3 Label Part List

Pos.	Description	Part Number	Comments
	KRH Label	SVF9302605	
	Printer ribbon	LZK 102 734/1	

## 4 Revision History

Rev.	Date	Changes / Comments
A	2007-02-19	1 <sup>st</sup> Release
B	2007-03-30	W610 Added
C	2007-04-05	W610 Parts Update
D	2007-04-19	W610 Parts Update
E	2007-05-21	W610 Fronts updated
F	2007-05-23	Due to system problem. No changes made on content