



F-05C

INSTRUCTION MANUAL '11.1

docomo STYLE series

DOCOMO W-CDMA System

Thank you for purchasing "docomo STYLE series F-05C" mobile terminal.

Before using F-05C, read this manual to ensure safe use and handling.

 
Instruction manuals for F-05C

The operations of F-05C are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (PDF file).

Instruction manual (this manual)	This manual provides information about screens and operations of basic functions. *  is index term for "使いかたガイド (Guide)". (In Japanese only)
"使いかたガイド (Guide)" (installed in FOMA terminal)	This guide provides overviews and operations of frequently-used functions. (In Japanese only) In F-05C Stand-by display,   LifeKit  Guide  Select a search method
"Instruction manual (detailed version)" (PDF file)	This manual provides detailed information and operations of all the functions. (In Japanese only) <From a PC> This manual can be downloaded from NTT DOCOMO website. http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html * The URL and contents are subject to change without prior notice.

- In this "F-05C INSTRUCTION MANUAL", "F-05C" mobile terminal is usually referred to as "FOMA terminal".
- In this manual, screen images with Kisekai Tool and Color scheme set to "White" are provided.
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits (⇒P31).

Basic package

F-05C (including Back Cover F57 and warranty)	Battery Pack F19	Instruction manual (Japanese version)	CD-ROM for F-05C	Touch pen F01
				
Compatible options ⇒P76				

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

Contents

Introduction

FOMA terminal	2
What you can do with F-05C	3
Part names and functions	4
Precautions (Always follow these directions)	7
Handling precautions	14

Basic Operation



Before Using	17
Screen Explanation	20
Character Entry	23
Sound/Screen Setting	25
Lock/Security	30

Connect



Call Telephone	37
Mail	45
Phonebook	48

Search



i-mode/Full Browser	49
i-Channel	52

Enjoy



Camera	53
1Seg	56
Music	58
i-appli	60
i-motion/Movie	61

More Convenient



Osaifu-Keitai	62
i-concier	63
Convenient tools	64
Data Management	66

Others

Support	70
Appendix	77
Index	88

Introduction

Basic Operation

Connect

Search

Enjoy

More Convenient

Others

FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.

- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier: VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

What you can do with F-05C

i-concier

63

i-concier is a service for supporting your life like a butler or concierge. It stores your data (residential area information, schedule, ToruCa, phonebook, etc.) to deliver matching information for area or location or your preference at the right time. (In Japanese only)



使いかたガイド (Guide)

23

Guide is useful for checking an operating procedure of the function you want to use on FOMA terminal. Without Instruction manual at hand, you can check the operations immediately. (In Japanese only)



International Roaming (WORLD WING)

43


While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G Areas are supported).



Highly-functional camera

53

Camera offers a lot of high functionality like digital camera such as "Tracking focus", "Smile-finder", "Find-me focus" or "Face correction". Approximately 130 pixels (effective pixel) in-camera allows you to shoot yourself finely.

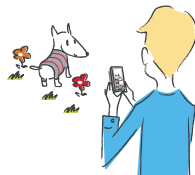

Kid-safe mode


35

You can restrict usable functions, so you can let your child use FOMA terminal without anxiety.




Part names and functions

Part names of F-05C and major functions assigned to each part are as follows. Some keys work for the different function by pressing length. When using function, check the operation with this manual or "使いかたガイド (Guide)" (in Japanese only) installed in the FOMA terminal.

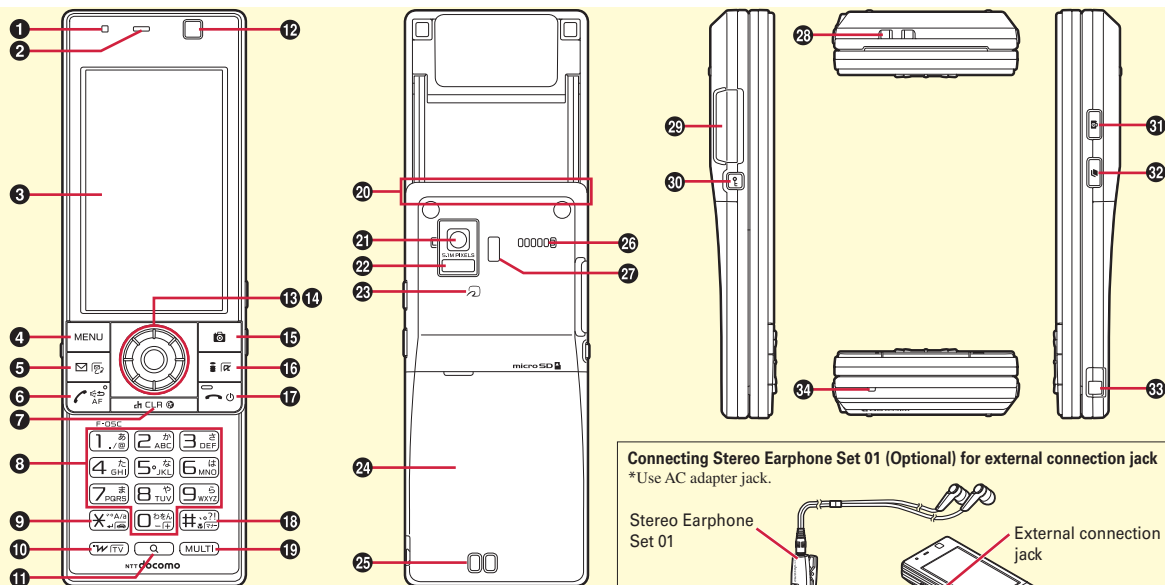

Connecting Stereo Earphone Set 01 (Optional) for external connection jack


*Use AC adapter jack.

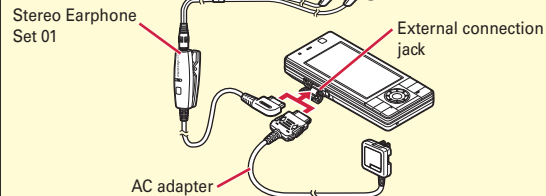

- 1 Light sensor**
* Do not cover the sensor with your hand or a sticker.
- 2 Earpiece**
- 3 Display (Touch panel)⇒P20, 55**
* Used as touch panel only for Graffiti picture.
- 4  MENU key**
Display a menu
- 5  Mail key/Character key**
Display the mail menu or switch input mode
- 6  Start a voice call key**
- 7  ch/Clear key**
Display i-Channel or return to the previous screen
- 8  -  Keypads**
Enter phone number or characters, or select an item
- 9  */Public mode (Drive mode) key**
Enter "*" or voiced/semi-voiced sound, or start/cancel Public mode (Drive mode)
- 10  i-Widget/TV key**
Start/Exit i-Widget or start 1Seg
- 11  Search key**
Activate Quick search
- 12 In-camera**
Shoot yourself or send your image via Videophone
- 13 Light**
Turn on or blink when the battery charges, receiving call, etc.
- 14 Kurukuru-key (Multi-cursor key)⇒P22**
Move the cursor or operate a menu
 -  : Perform an operation.
 -  : Display Scheduler, or adjust the volume.
 -  : Display Phonebook, or adjust the volume.
 -  : Display Received calls.
 -  : Display Redial.
 * Operation in eight directions is available depending on the functions.
- 15  Camera key**
Activate the still camera shooting/Graffiti picture
- 16  i-mode/i-appli key**
Display iMenu or i-appli folder
- 17  Power/End key**
Turn on/off FOMA terminal or exit a function
- 18  #/Silent mode key**
Enter "#" or punctuation, or start/cancel Silent mode
- 19  Multitask key**
Perform another function during call or operation (Multi-access/Multi-task)
- 20 FOMA antenna (built-in)**
* Do not cover it with your hand.
- 21 Out-camera**
Shoot still image/moving picture or send image via Videophone
- 22 Infrared data port**
Use this port for infrared communication or infrared remote control function
- 23  Mark**
Use Osaifu-Keitai or send/receive data by iC transmission
- 24 Back cover**
* To access UIM slot and the microSD card slot, remove the back cover and the battery pack.
- 25 Charging jack**
- 26 Speaker**
Hear ring alert or voice of the caller using the handsfree function
- 27 Light/Shooting light**
Use as camera light for still image shooting or Handy light
- 28 Strap opening**
- 29 External connection jack**
Connect optional AC adapter, DC adapter, FOMA USB Cable with Charge Function 02, Stereo Earphone Set 01 etc.
- 30  Lock key**
Turn the screen off in slide style or activate Operation lock in closed style
- 31  Side camera key**
Stop each alarm sound or vibration, activate quick recording message during incoming call or activate/deactivate Voice memos or movie memo during call, or activate the still camera shooting
- 32  Side multi-key**
Perform another function during call or operation (Multi-access/Multi-task)
- 33 1Seg antenna**
* Extend it when watching for fully reception of the air waves.
- 34 Microphone**
* Do not cover it during use.

Usage style

You can use the FOMA terminal function even when the FOMA terminal is closed.

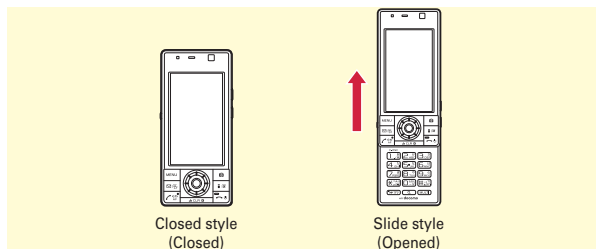

Slide the FOMA terminal upward (open the FOMA terminal) to use in slide style. To use in closed style, slide in the reverse direction (close the FOMA terminal).

Slide style

All key operations are available in slide style.

Closed style

In closed style, vertical and horizontal views can be switched according to tilt of the FOMA terminal by the auto rotation in Motion sensor.

In closed style, menu operations, power ON/OFF operation can be done.

Point

- Do not give excessive force when opening/closing the FOMA terminal. It may cause malfunction or damage of the keypad or the display.
- Do not close the FOMA terminal with the strap held inside. It may cause malfunction or damage.
- Do not put label, sticker, etc. on the back side of the display or the keypad side. It may cause malfunction or damage.
- When you carry the FOMA terminal, close the FOMA terminal and activate Operation lock by pressing  to avoid erroneous key operation and save battery consumption.
- Do not place the terminal with the face of display downward on a desk etc. It may cause scratch on the display surface.
- When you put the terminal in a bag etc., be careful not to have a scrape on the display by solid object. It may cause scratch, malfunction or damage.



Information

- You can set to view editing screen etc. by opening the FOMA terminal 【スライド編集設定 (Slide and edit)】 or answer an incoming voice call by opening the FOMA terminal 【着信オープン応答 (Open and answer)】.

Precautions (Always follow these directions)

- Before using the FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that minor injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter, UIM and touch pen (common)	8
Handling FOMA terminal	9
Handling battery pack	10
Handling adapter	11
Handling UIM	12
Handling touch pen	12
Handling mobile phones near electronic medical equipment	12

Handling FOMA terminal, battery pack, adapter, UIM and touch pen (common)

DANGER



Don't

Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause fire, burns or injuries.



Don't

Do not put the terminal into heating cooking device such as microwave oven or high-pressure container.

May cause fire, burns, injuries, electric shock.



No disassembly

Do not disassemble or remodel the equipment.

May cause fire, burns, injuries, electric shock.



No liquids

Do not let the terminal get wet with water, drinking water, urine of pet animals, etc.

May cause fire, burns, injuries, electric shock.



Do

Use the battery pack and adapter specified by NTT DOCOMO for your FOMA terminal.

Failure to do so may cause fire, burns, injuries, electric shock.

WARNING



Don't

Do not throw the equipment or give hard shock to it.

May cause fire, burns, injuries, electric shock.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.

May cause fire, burns, injuries, electric shock.



Don't

Do not cover or wrap the terminal with a blanket, etc while using or charging.

May cause fire or burns.



Do

Turn FOMA terminal OFF and stop charging before entering a place such as a gas station where flammable gases are generated.

The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

- Remove the power plug from the wall outlet or cigarette lighter socket.
- Turn FOMA terminal OFF.
- Remove the battery pack from FOMA terminal.

Failure to do so may cause fire, burns, injuries, electric shock.

CAUTION



Don't

Do not leave the equipment on unstable or sloping surfaces.

The terminal may fall and cause injuries.



Don't

Do not store the equipment in extremely humid, dusty or hot areas.

May cause fire, burns, electric shock.



Do

Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.

May cause injuries.



Do

Store the equipment out of reach of small children.

May be accidentally swallowed or cause injuries.



Do

Be careful especially when using FOMA terminal connected to the adapter continuously for a long time.

If you use i-appli, a videophone call or 1Seg watching while charging the battery for a long time, FOMA terminal, battery pack and adapter may be heated.

Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

Handling FOMA terminal

WARNING



Don't

Do not direct the infrared data port toward your eye and transmit signals.

May cause harmful effect on eyes.



Don't

Do not direct the infrared data port toward home electric appliances etc. equipped with infrared device when using infrared communication.

May cause an accident because of malfunction of infrared device.



Don't

Do not turn on the light by getting the lighting part closer to other person's eyes.

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.



Don't

Do not put foreign objects such as liquid like water, metal pieces or burnable things into UIM slot or microSD card slot.

May cause fire, burns, injuries, electric shock.



Don't

Do not turn on the light aiming directly at the driver of the car etc.

May disturb driving and cause an accident.



Do

Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.

Failure to do so may cause electronic equipment or electronic medical equipment to fail or malfunction. If the function which automatically turns the power ON is set, cancel the setting before turning the power OFF.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you will be punished according to law.



Do

When you talk by setting handsfree or ring alert is sounding, keep FOMA terminal away from your ear.

And, when connecting the earphone/microphone to FOMA terminal and play a game or music, adjust the volume moderately.

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



Do

If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.

May cause harmful effect on heart.



Do

When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.

May cause harmful effect on electronic medical equipment etc.



Do

Turn FOMA terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.

Failure to do so may cause the equipment to fail or malfunction.

* Examples of electronic equipment to avoid.

Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



Do

When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of FOMA terminal.

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.



Do

To sound the high-pitched alarm, always keep FOMA terminal away from your ears.

Failure to do so may cause hearing defect.

CAUTION



Don't

Do not swing FOMA terminal by its antenna or strap.

May cause accident such as injury to yourself or others by hitting.



Don't

Do not use damaged FOMA terminal.
May cause fire, burns, injuries, electric shock.



Don't

When using the motion tracking or motion sensor, check the safety around you, hold FOMA terminal firmly, and do not shake it unnecessarily.

May cause accident such as injuries.



Don't

If the display part is accidentally broken and liquid crystal leaks out, do not make the liquid contact with your skin of face or hands.

May cause loss of sight or skin problems.
If the liquid gets into your eyes or mouth, rinse it with clean water and see a doctor immediately.

And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.



Do

To use the terminal in car, check with automobile manufacturer or dealer to determine how the device is affected by radio waves before using.

In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction. In that case, stop using the terminal immediately.



Do

Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin problems, stop using the phone immediately, and see a doctor. ⇒ "Material list (P13)"



Do

When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.

May cause accident such as injuries.



Do

When watching the display, take a certain distance from the display in a fully bright place.

May reduce visual acuity.

Handling battery pack

■ **Check that the battery type matches the type displayed on the battery pack label.**

Display	Battery type
Li-ion 00	Li-ion battery

⚠ DANGER



Don't

Do not connect a wire or other metal objects to the jack. And, do not carry or store FOMA terminal with objects like a metal necklace.

May cause battery pack to ignite, burst, heat or leak.



Don't

Check the orientation of battery pack to install it to FOMA terminal, and do not try to force the battery pack onto FOMA terminal if you are having trouble installing it.

May cause battery pack to ignite, burst, heat or leak.



Don't

Do not throw the battery pack into the fire.

May cause battery pack to ignite, burst, heat or leak.



Don't

Do not nail the battery pack, hit with a hammer or step on it.

May cause battery pack to ignite, burst, heat or leak.



Do

If the battery packs fluid etc. contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.

May cause loss of sight.

⚠ WARNING



Don't

If the battery pack seems to have abnormalities such as deformation or scratches due to falling, never use it.

May cause battery pack to ignite, burst, heat or leak.



Do

If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.

The vapors from leaking battery pack fluid may ignite or explode.



Do

Be careful not to let your pet bite the battery pack.

May cause battery pack to ignite, burst, heat or leak.

⚠ CAUTION**Do not discard old battery packs together with other garbage.**

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as docomo Shop. If your local municipality has a battery recycling program, dispose of them as provided for.

**Do not use or charge a wet battery pack.**

May cause battery pack to ignite, burst, heat or leak.

**If fluid etc. leaks out from battery pack, do not make the fluid contact with your skin or face or hands.**

May cause loss of sight or skin problems. If the fluid etc. put into your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water. If the fluid put into the eyes or mouth, immediately see a doctor after flushing.

Handling adapter**⚠ WARNING****Do not use the adapter cord if it gets damaged.**

May cause fire, burns, electric shock.

**Do not use the AC adapter or desktop holder in a bathroom or other highly humid area.**

May cause fire, burns, electric shock.

**Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.**

May cause fire, burns, electric shock.

**When it starts to thunder, do not touch adapter.**

May cause electric shock.

**Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.**

May cause fire, burns, electric shock.

**Do not place heavy objects on the adapter cord.**

May cause fire, burns, electric shock.

**When you insert and remove AC adapter from power outlet, do not contact a metal strap or other metal objects with the jack.**

May cause fire, burns, electric shock.



No wet hands

Do not touch the adapter cord or outlet with wet hands.

May cause fire, burns, electric shock.

**Only use with the specified power source and voltage. When charging FOMA terminal overseas, use AC Adapter for global use.**

If incorrect voltage is used, this may cause fire, burns or electric shock.

AC adapter : AC100V

DC adapter : 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use : Between 100V and 240V AC (Connect to the AC outlet for internal household use)

**If the DC adapter's fuse blows, replace it only with the specified fuse.**

Failure to do so may cause fire, burns, electric shock. For the specified fuse, see the instructions that come with the DC adapter.

**Wipe off any dust that accumulates on the power plug.**

Failure to do so may cause fire, burns, electric shock.

**When you connect the AC adapter to an outlet, do not fail to properly connect to the outlet.**

May cause fire, burns, electric shock.

**When you disconnect the adapter from the outlet or cigarette lighter socket, do not pull the adapter cord with excessive force. Instead, hold the power plug to disconnect.**

May cause fire, burns, electric shock.



Unplug

Always remove the power plug from the outlet or cigarette lighter when not using the adapter for an extended period.

Failure to do so may cause fire, burns, electric shock.



Unplug

Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.

May cause fire, burns, electric shock.



Unplug

Always remove the power plug from the outlet or cigarette lighter socket when cleaning the equipment.

Failure to do so may cause fire, burns, electric shock.

Handling UIM



CAUTION



Do

Be careful of the cut surface when removing UIM.

May cause injuries.

Handling touch pen



WARNING



Don't

Do not point the touch pen at person.

May cause injury or loss of sight by hitting yourself or others.



Don't

Do not swing around the FOMA terminal by the touch pen when the touch pen is attached to the FOMA terminal.

May cause accident such as injury to yourself or others by hitting.

Handling mobile phones near electronic medical equipment

These precautions are based on the guidelines produced at the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.



WARNING



Do

Obey the following rules inside medical facilities.

- Do not bring FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn FOMA terminal OFF in hospital wards.
- Turn FOMA terminal OFF in hospital lobbies and corridors if electronic medical equipment could be nearby.
- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn ON the power is set, cancel the setting before turning the power OFF.



Do

Turn FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

Wearers of implanted pacemakers or defibrillators must carry and use FOMA terminal at least 22 cm away from the implanted device.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.

FOMA terminal's signals may affect the performance of electronic medical equipment.

Material list

Part		Material	Surface treatment
Exterior case	Movable part Display	PA-GF resin	UV hard coating
	Movable part Exterior side surface	ABS resin	UV hard coating
	Movable part Back surface	Stainless steel	UV hard coating
	Movable part Rear surface (top end side)	ABS resin	UV hard coating
	Fixed part Keypad	PC+ABS resin	UV hard coating
	Fixed part Battery	PC+ABS resin	UV hard coating
	Back cover	PC+ABS resin	UV hard coating
	Movable part Screw cap	ABS resin	UV hard coating
Display panel		Acrylic resin+PET sheet	None
Kurukuru-key		PC resin	UV hard coating

Part		Material	Surface treatment
Kurukuru-key cover		PC+ABS resin	UV hard coating
Movable side operation key		PC resin	UV hard coating
Operation keys		PC resin	UV hard coating
Side keys		PC resin	UV hard coating
Lock key		PC resin	UV hard coating
Camera panel		Acrylic resin	UV hard coating
Mobile light panel		Acrylic resin	Wrinkled
Fixed part Screw cap		Silicon rubber	None
External connection jack cap		Elastomer resin (TPEE)	UV hard coating
External connection jack		Stainless steel	Tin plating
Antenna for digital terrestrial broadcasting	Antenna top	PC+ABS resin	Wrinkled
	Pipe	Stainless steel	None
	Root bend section	Nickel titanium	None
	Root rotation part	Stainless steel	Nickel plating

Part		Material	Surface treatment
Battery contacts	Battery contacts connector body	PPS resin	None
	Battery contacts	Beryllium copper	Gold plating
Screw (Battery install recess)		Stainless steel	None
Battery install recess face		PC board	Gold plating
Charging jack		Stainless steel	Gold plating
UIM card tray		POM resin	None
Battery pack	Battery pack	PC resin	None
	Contacts	Beryllium copper	Gold plating

Handling precautions

General

- **Do not get wet.**
 - The FOMA terminal, battery pack, adapter, UIM are not waterproof. Do not use in a bathroom or other highly humid area or do not let rain attached. Or putting the terminal on your body, humidity of sweat may cause internal corrosion and malfunction. Note that malfunctions, which are determined to be caused by such water as result of inspections, are not covered by the warranty. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.
- **Clean FOMA terminal with a dry soft cloth (such as a cloth for eyeglasses).**
 - Rubbing it roughly with a dry cloth may scratch the display.
 - Drops of water or dirt left on the display may cause stains.
 - If FOMA terminal is wiped with alcohol, paint thinner, benzene or detergent, the printing may disappear or color may fade.
- **Clean the jack occasionally with a dry cotton swab etc.**
 - If the jack is soiled, connection gets worse and it may cause power to be turned off or insufficient battery charge, so clean the jack with a dry cotton swab etc. Also, be careful never to damage the jack when cleaning it.
- **Do not place FOMA terminal near an air-conditioner outlet.**
 - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- **When using, be careful not to subject excessive force to FOMA terminal or the battery.**
 - If FOMA terminal is crammed into a brimming bag or placed in a pocket and sat on, display, internal PCBs or battery pack may be damaged or malfunction. And, if external devices are plugged into the external connection jack (earphone/microphone jack), the breakage of the connector or malfunction may result.
- **Do not rub or scrape the display with a metal piece etc.**
 - It may scratch the display, causing malfunction or damage.
- **Carefully read the separate instructions that come with the battery pack, adapter and desktop holder.**

FOMA terminal

- **Do not press the surface of the touch panel strongly or operate it with sharp objects such as a nail, a ballpoint pen and a pin.**
 - It may damage the touch panel.
- **Avoid extreme temperature.**
 - Use the FOMA terminal where the temperature ranges between 5 and 35°C and humidity ranges between 45 and 85%.
- **FOMA terminal may affect land-line phones, TVs or radios in use nearby, so use it as far as possible from these appliances.**
- **Maintain a separate record of the data you saved in your FOMA terminal.**
 - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **Do not drop FOMA terminal or subject it to shocks.**
 - May cause malfunction or damage.
- **Do not plug external devices into the external connection jack (earphone/microphone jack) at a slant, or do not pull it forcibly while it is plugged.**
 - May cause malfunction or damage.
- **Do not close FOMA terminal with the strap etc. held inside.**
 - May cause malfunction or damage.
- **It is normal for FOMA terminal to become warm during use or charging. Continue to use it.**
- **Do not leave FOMA terminal with the camera in areas under strong direct sunlight.**
 - May cause discoloring or burn-in of materials.
- **FOMA terminal should normally be used with the external connection jack cap closed.**
 - Dust and/or water brought into FOMA terminal cause troubles.
- **Do not use FOMA terminal with the back cover removed.**
 - It may cause the battery to come off, or may cause a malfunction or damage.
- **Do not put extremely thick stickers on the key side.**
 - May cause malfunction or damage.

- **Do not put label, sticker, etc. on the back side of the display of FOMA terminal.**
 - Label, stickers, etc. may become lodged when opening or closing FOMA terminal, and may cause malfunction or damage.
- **While microSD card is being used, do not take the card out and do not turn off FOMA terminal.**
 - May cause data loss or malfunction.
- **Do not bring magnetic cards etc. close to FOMA terminal or clip it with the terminal.**
 - Magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
- **Do not bring magnetized objects close to FOMA terminal.**
 - Bringing strong magnetism close may cause malfunction.

Battery pack

- **The battery pack is a consumable part.**
 - Replace the battery pack if FOMA terminal has extremely short operation time on a full charge, though it may vary by operating conditions. Purchase a new battery pack of the specified type.
- **Charge the battery in an area within the proper ambient temperature range (5-35°C).**
- **The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.**
- **The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.**
- **Be careful especially about the following points when preserving the battery pack.**
 - Keeping under the state of the full charge (right after charging ends)
 - Keeping under the state of the empty charge (too exhausted to turn on FOMA terminal)

They may cause the battery pack performance to be degraded or its lifetime to be shortened.

A recommended battery level to preserve the battery pack is the battery icon in 2 cells as a guide.

Adapter

- **Charge the battery in an area within the proper ambient temperature range (5-35°C).**
- **Do not charge the battery in the areas below.**
 - In areas of excessive humidity, dust or vibrations
 - Near land-line phones or TVs/radios
- **It is normal for the adapter to become hot while charging. Continue to use it.**
- **When using the DC adapter for charging, keep the vehicle engine running.**
 - The vehicle's battery could become flat.
- **When using an outlet with a mechanism preventing unplugging, follow the handling instructions for that outlet.**
- **Do not give strong shock. Do not deform the charging jack.**
 - May cause malfunction.

UIM

- **Do not use excessive force to install/remove UIM.**
- **Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using a UIM with another IC card reader/writer.**
- **Always keep UIM ICs clean.**
- **Clean UIM with a soft, dry cloth (such as a cloth for eyeglasses).**
- **Maintain a separate record of the data you saved in UIM.**
 - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **To preserve the environment, bring the old UIM to a sales outlet such as docomo Shop.**
- **Take care not to scratch, touch accidentally or short IC.**
 - May cause data loss or malfunction.
- **Do not drop UIM or subject it to shocks.**
 - May cause malfunction.
- **Do not bend UIM or place heavy objects on it.**
 - May cause malfunction.
- **Do not install UIM into the FOMA terminal with a label or sticker put on UIM.**
 - May cause malfunction.

Touch pen

- **Use the attached touch pen for operating Graffiti picture.**
 - If you use other than specified accessory, it may cause damage or turbidity of the display.
- **Do not use the attached touch pen for another device.**
 - It may cause malfunction or damage of the device.

FeliCa reader/writer

- **FeliCa reader/writer function of FOMA terminal uses weak waves requiring no licenses for radio stations.**
- **It uses 13.56 MHz frequency band. When using other reader/writers in your surroundings, keep FOMA terminal away sufficiently from them. Before using the FeliCa reader/writer, confirm that there are no radio stations using the same frequency band nearby.**

CAUTION


- **Do not use a remodeled FOMA terminal. Using a remodeled terminal violates the Radio Law.**
FOMA terminal is certified according to technical standard conformance of specified wireless equipment based on the Radio Law, and as a proof of it, the "Technical Compliance Mark" is depicted on the engraved sticker of FOMA terminal.
If you remodel FOMA terminal by removing its screws, your certification of technical standard conformance becomes invalid.
Do not use FOMA terminal with its certification of technical standard conformance invalid as it violates the Radio Law.
- **Be careful when you use FOMA terminal while driving a car etc.**
Using a mobile phone while driving is subject to penal regulations.
However, absolutely necessary cases such as rescue of a sick person or maintaining public's safety are exempted.
- **Use FeliCa reader/writer function only in Japan.**
FeliCa reader/writer function of FOMA terminal conforms to Japanese radio standards.
If you use this function overseas, you may be punished.

Attaching UIM/battery pack

After turning power OFF, close FOMA terminal and hold it in your hand so that you can properly attach UIM/battery pack.


❖ Removing Back Cover

Hold the FOMA terminal firmly in one hand not to slide, while pressing the back cover with a thumb of the other hand, slide approximately 3 mm in the direction of the arrow and remove it.

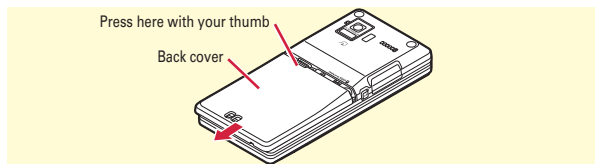

❖ Attaching UIM

Pull the tab with your finger and pull out the tray until it clicks (❶). Hold UIM with the IC side down, align the corner cut with the tray (❷) and push into the tray until it stops (❸).

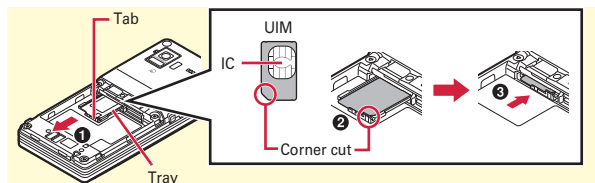


Point

- UIM (blue) is not available for this FOMA terminal. If you have the UIM (blue), bring it to a docomo Shop.


❖ Installing battery pack

With the label side of the battery pack upward, align convex parts of the battery pack with concave parts of FOMA terminal and insert the battery pack in the direction of ❶, press the battery pack in the direction of ❷ to set it in.

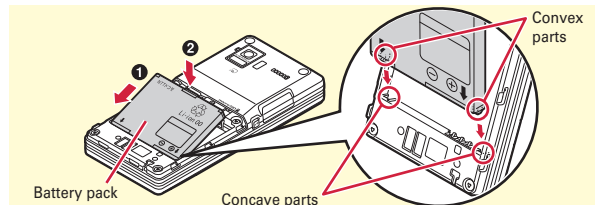

❖ Installing back cover

Align the 6 tabs of the back cover to the notches of the FOMA terminal, press the back cover in the direction of ❶ without forming any gap between the FOMA terminal and back cover and slide it in the direction of ❷ to install.

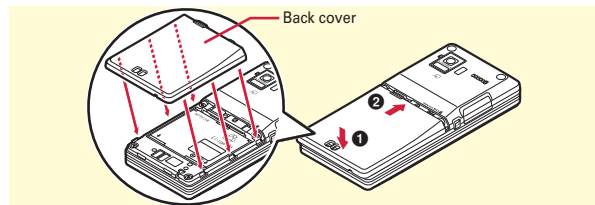


Before Using Charging

The battery pack does not have a full charge at time of purchase. Use AC adapter for FOMA terminal to charge the battery before using FOMA terminal.


Charging using AC adapter

- 1 Open jack cap (❶) of FOMA terminal, hold the connector horizontally with the arrows side upward and insert it to the jack (❷)**
- 2 Unfold the power plug and insert it into a 100V AC outlet**
* Check that the light turns on.
- 3 When charging is over, pull out the power plug from the outlet, and pull out from FOMA terminal horizontally while pressing the release buttons on both sides of the connector**

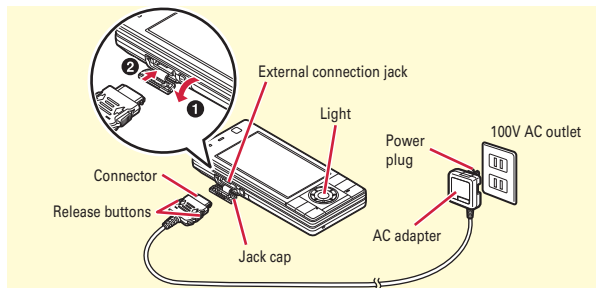

Charging using desktop holder

- 1 Insert the AC adapter connector to the Desktop Holder with the arrow marks side upward**
- 2 Unfold the AC adapter's power plug and insert it into a 100V AC outlet**
- 3 With FOMA terminal closed, insert it into the attached desktop holder**
* Check that the light turns on.
- 4 After charging is completed, remove FOMA terminal from the desktop holder**

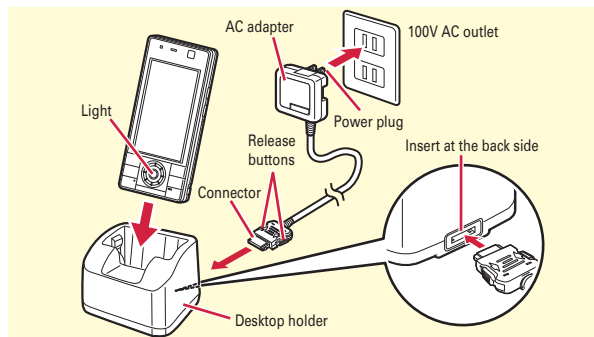

✚ Operations for charging

When charging starts, a charge start alert sounds. While charging, the light turns on and the battery icon on the display blinks. When charging is over, a charge completion alert sounds.

Before Using

Turning power ON - Configuring default setting

Perform the following operations after turning the power ON for the first time.


1  (2 sec. or more)

2 On a confirmation screen of enlarged menu setting, "Yes" or "No"

The screen shown to the right appears.

3 Set required items  [Complete]

Always set Terminal security code. If you exit without setting, Initial setting screen reappears when the power is turned ON the next time.

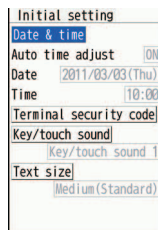

<Initial setting screen>

4 On a confirmation screen of software update function,



The stand-by display appears.

Point

- If no operation is performed, the display light is turned off automatically according to the settings in Light time-out or eco mode. The display light turns on again by any operation (other than rotating Kurukuru-key), incoming call, etc.
- You cannot turn off the power while Operation lock is set.

Turning power off :  (2 sec. or more)

Changing the initial setting :     

Changing screen display to English :      Select "English"

Before Using

User information

Check your own phone number.

For details of checking/changing a mail address, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

1   User information

The screen shown to the right appears.



<User information screen>

Point

- Besides your phone number and mail address, birthday, postal code/address, company name, etc. can be saved in User information.

Editing user information : On User information edit screen,  

Authenticate  Edit 

Checking User information during a call etc. :  or  

 
Screen Explanation

Viewing display


The current state can be checked by the icon appearing on the screen. Major icons are as follows.

Top of the display

Battery level (Battery icon)



Signal strength (Antenna icon)

 

: Self mode ON

: In data transfer mode

: Connecting to i-mode

: Infrared communication in operation

: The total calls cost exceeds the limit

: Communication using handsfree-compatible device in progress

: Handsfree ON

: eco mode ON

: Security lock ON

: Secret attribute is set to phonebook entry or schedule

: High-pitched alarm ON

: Kid-safe mode ON

: Unread Area Mail exists

: Unread i-mode mail exists

: Arrival i-concier information exists

: Unreceived i-mode mail exists in i-mode Center

: Displaying SSL/TLS page etc.

: Auto-send mail exists

: Music&Video Channel program obtaining reservation exists

: During i-appli operation

: i-appli call exists

: Alarm clock ON

: Schedule reminder ON

: In OFFICEED area

: Call alert volume OFF

: Vibrator for voice call ON

: In Public mode (Drive mode)

: Record message ON

: Keypad dial lock ON

: Personal data lock ON

: Music&Video Channel program obtaining failure

: Reading UIM

: IC card lock ON

: Available multi-cursor key

: Performing reserved 1Seg recording

: i-appli Auto start failed

: microSD card installed during Communication mode

: Connected to external device using USB cable

: Pedometer/ACT monitor is set

: Software update rewrite notice

: Auto-update of latest pattern definition failure

Bottom of the display



Arrival information (Starting from the left, missed call, recorded message, voice mail service, unread message, unread ToruCa, i-appli call)

* On the stand-by display with arrival information icon or i-concier information displayed, Info/calendar layout or shortcut icons set, press to change the display to focus mode that allows you to quickly display the related information. To cancel focus mode, press or .

: Silent mode ON

Menu operation

On the stand-by display, press **MENU** and then perform the functions from the menu. You can select a menu item with shortcut operations, which use the keypad, **[X]** and **[#]**, or with multi-cursor operation, which uses the multi-cursor key to move the cursor.

<Example> Selecting "Calculator"

Shortcut operations

1 **MENU** ▶ **7** ▶ **4**

Multi-cursor key operations


1 **MENU** ▶ Move the cursor to "7 Accessory" ▶ **[Select]** ▶ Move the cursor to "4 Calculator" ▶ **[Select]**

Point

- Even when a function is running, you can perform the same operation if "MENU" is displayed on the guide area.
- To return to the previous screen, press **[CLR]**. To return to the stand-by display, press **[Power]**.

Guide area and key operation


Operations that can be performed by pressing **MENU**, **[Envelope]**, **[Select]**, **[Camera]** and **[X]** are displayed in the guide area. To perform an operation in the guide area, press the corresponding key. **[X]** on the guide area corresponds to multi-cursor keys **[8]**.

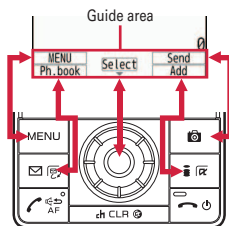

Switching menu screens

You can switch among "Kisekai menu", the design of which can be changed using Kisekai Tool (⇒P29), "Basic menu", which has the fixed menu numbers, and "Custom menu", to which menu items can be saved freely.

A Kisekai menu matched with the color of FOMA terminal is set by default.

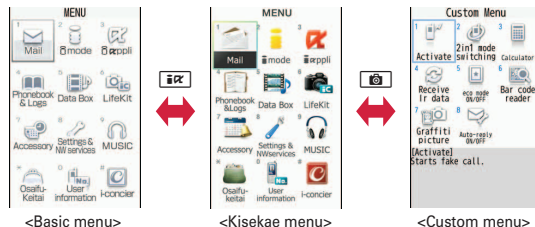

Point

- In some types of Kisekai menus, the menu structure is changed according to usage frequency, or the number assigned to menu item (item number) may not be applicable.
- The menu that appears when **MENU** is pressed on the stand-by display can be changed in Select startup menu. ⇒ P27


Screen Explanation

Kurukuru-key

You can operate menu item, move the cursor, activate function, etc. by rotating Kurukuru-key left or right or pressing up/down/left/right or center (multi-cursor key).

Using as multi-cursor key

Kurukuru-key corresponds to the following multi-cursor key.

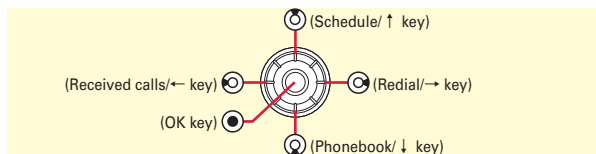

Using by rotating

Rotate Kurukuru-key to move the cursor, scroll the browser screen, adjust each sound volume, adjust camera zoom, stop alarm clock, etc. Rotating operations are according to Kurukuru-key setting.

Direction of motion by rotating corresponds to the cursor motion on the screen as follows.



Kurukuru-key setting

Set rotating operation of Kurukuru-key to be enabled/disabled, activating function by direction of motion or rotation, or rotating speed.

- 1 **[MENU]** ▶ 8 **Settings & NWservices** ▶ 7 **Clock & Other** ▶ * **Kurukuru-key setting** ▶ Set required items ▶ **[Set]**

When you rotate in ultrafast speed on the mail detail screen or browser screen with Maximum speed setting set to "Ultrafast speed",  appears on the top of the display.

Point

- When Stand-by start is set to other than "No setting", set function can be activated by rotating Kurukuru-key on the stand-by display. When it is set to "Navi keys display", the operation guide of multi-cursor key appears.
- Direction of motion setting does not apply to sound volume, camera zoom or some of numerical entries.

使いかたガイド (Guide)

You can check overviews and operations of functions, and troubleshooting. (In Japanese only)

1 MENU ▶ 6 LifeKit ▶ * Guide ▶ Select a search method


目次 (Contents) : Search from a list of functions.

索引 (Index) : Search from a list of words sorted according to Japanese syllabary.

フリーワード検索 (Free word search) : Enter a keyword to search for.

ブックマーク (Bookmark) : Search from a list of registered bookmarks.

困ったときには (Troubleshooting) : Search from lists of troubles or error messages.

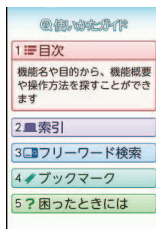

<Guide screen>

Point

- On a description screen, select "この機能を使う (Use this function)" to perform a function. Selecting a link item in "関連機能 (Related functions)", or "→コチラ (See more)" displays a corresponding description screen.
- Terms indicated with in this manual are index terms in "Guide".

Entering characters

There are two methods to enter characters.

Difference of input methods

	5-touch input	2-touch input
Outline	Multiple characters are assigned to each key and the character is switched every time a key is pressed.	A character is entered by pressing a combination of 2 keys.
Character entry (in Hiragana /Kanji mode)	"ろ" : (5 times) "っ" : (3 times) ▶ "ぼ" : (5 times) ▶ (twice) "ん" : (3 times) "ぎ" : (twice) ▶	"ろ" : "っ" : "ぼ" : "ん" : "ぎ" :
Operation during entry	: Return to the previous character. (Example : お⇒え⇒う⇒…) : Delete character : Add voiced sound/semi-voiced sound mark or switch upper/lower case	—

Switching input modes

Each time you press  on the character entry screen, the input mode switches as A "One-byte alphabet" ⇒ 1 "One-byte number" ⇒ 漢 "Hiragana/Kanji" ⇒ 7 "One-byte katakana" ⇒ A "One-byte alphabet" ...

-  switches two-byte or one-byte characters.

Text input

Set a text input method or operation during text entry.

- 1  ▶ 8 **Settings & NWservices** ▶ 7 **Clock & Other** ▶ 3 **Text input** ▶ 5 **Text input method** ▶ Set required items ▶  [Set]

Entering pictograms/smileys


Entering pictograms

- 1 On the character entry screen, when [Pict/Sym] is displayed,  [Pict/Sym]

Type of the current displayed pictogram list.
Pictogram list switches between [Pictogram] and [PictgrmD] each time you press .

Recently used pictograms appear as input logs.

When there are multiple pages, press  [PrevPage] or  [NextPage] to switch pages.
For Pictogram D, press  to switch folders.

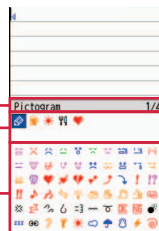

- 2 **Select a pictogram**

Press  to close the pictogram list.

Entering smiley on mail message editing screen

- 1 On the character entry screen,  ▶ 5 **Smiley/Quot/Phrase** ▶ 1 **Smiley** ▶ Select a smiley type ▶ Select a smiley

Entering on the other character entry screen :

-  ▶ 5 3 ▶ Select a smiley type ▶ Select a smiley

Information

- You can save often-used sentences and words. 【 文字入力 (Character Entry) ▶ 定型文登録 | 単語登録 (Save phrase/Save word)】
- You can copy, cut and paste entered characters. 【 文字入力 (Character Entry) ▶ コピー | 切り取り | 貼り付け (Copy/Cut/Paste)】

Sound/Screen Setting

Sound settings

You can set tones, such as changing a ring alert, adjusting the volume, or muting the sound emitted from FOMA terminal.

Setting ring alerts and sound


You can set your favorite melody for a ring alert or alarm.

<Example> Setting Call ring alert (Call ring alert/V.phone ring alert)

- 1 **MENU** ▶ 8 **Settings & NWservices** ▶
1 **Alerts & Sounds** ▶ 1 **Ring alerts & Sounds**

In addition to ring alerts, you can set alerts such as mail ring alert, messages ring alert or i-concier ring alert.

- 2 1 **Call ring alert** ▶ 1 **Call ring alert**
or 2 **V.phone ring alert** ▶ **Set required items** ▶ **[Set]**

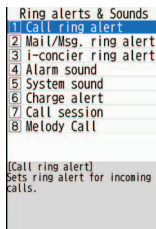

<Sound setting screen>

Point

- When Call ring alert is set, the setting applies to Call alert and Videophone alert.
- Some music or moving pictures/i-motion may not be set to the ring alert.

Information

- You can set a call ring alert and image, a call vibrator operation pattern, and a light alert. 【 電話着信設定 (Call ring alert)】 【 テレビ電話着信設定 (V.phone ring alert)】
- Incoming calls or alarms are notified with vibration, instead of a tone. 【 バイブレーション設定 (Vibrate alert/effect)】

Adjusting volume

You can set the volume of a ring alert, alarm sound, etc.


<Example> Setting Call alert volume

- 1 **MENU** ▶ 8 **Settings & NWservices** ▶
1 **Alerts & Sounds** ▶ 2 **Adjust volume**

In addition to the volume of the ring alert, you can set the volume of the alerts such as mail ring alert, message ring alert and i-concier ring alert.

- 2 1 **Alert/Call volume** ▶ 1 **Call alert volume** ▶ ▶ **[Select]**

The volume can be selected from "Silent", "Level 1" - "Level 6" or "Steptone".

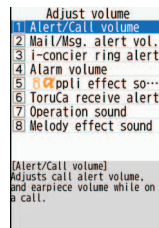

<Volume setting screen>

Point

- appears on the stand-by display when "Silent" is set. appears when a vibrator for Call vibrate alert is also set.

Silent mode

This function mutes the sound emitted from the FOMA terminal such as ring alert, Keypad/Touch sound, Slide sound, Kurukuru-key Sound, Alarm sound, Bar code reading alert, etc. and notify you of an incoming call with the vibrator (vibration). Microphone is sensitized in Silent mode. You can call even in a small voice.

1 (1 sec. or more)

 appears on the stand-by display in Silent mode.

Canceling Silent mode :  (1 sec. or more)

Point

- Countdown sound for shooting or shutter sound is emitted even in Silent mode.

Muting keypad sound

Mute sound emitted when you press keys or perform touch operation in Graffiti picture.

1 **Settings & NWservices** **1 Alerts & Sounds** **1 Ring alerts & Sounds** **5 System sound**

Besides keypad/touch sound, you can mute slide sound or Kurukuru-key sound or change shutter sound.

2 **1 Keypad/Touch sound** **5 OFF**

After a message indicating canceling the keypad/touch sound appears, the screen returns to the one shown in the right.

The tone can be selected from "**1** Key/touch sound 1" - "**4** Sol-fa".

System sound	
1	Keypad/Touch sound
2	Slide sound
3	Shutter sound
4	Movie camera sound
5	Kurukuru-key Sound
[Keypad/Touch sound] Sets sound for keypad operation.	

<System sound
setting screen>



Information

- You can set Silent mode operations to each incoming call and alarm.  オリジナルマナーモード (Personalized silent mode)]

Setting display

Stand-by display

You can change the default stand-by display.

<Example> Setting a preinstalled image to the stand-by display

1 [MENU] ▶ 8 Settings & NWservices ▶ 2 Display ▶ 1

Stand-by display ▶ 1 Image/i-appli ▶ 1 Set image

When Kisekai Tool is set, a confirmation screen for canceling appears.

2 "Yes" ▶ 6 Preinstalled ▶ Select an image ▶ "Yes"

Select startup menu

Set the menu displayed when pressing [MENU] on the stand-by display.

1 [MENU] ▶ 8 Settings & NWservices ▶ 2 Display ▶ 2

Menu preference ▶ 1 Select startup menu ▶ 1

Kisekai menu - 3 Shortcut menu

Font size

You can change a size of the characters in i-mode site, the mail creation screen, phonebook, etc.

<Example> Changing the font sizes collectively

1 [MENU] ▶ 8 Settings & NWservices ▶ 2 Display ▶ 6

Font & Language ▶ 1 Font size ▶ 1 All ▶ 1 Smallest
- 7 Largest

For some font sizes selected, a confirmation screen for changing the font size for menu appears. When pressing "Yes", Kisekai Tool applicable to the selected font size can be selected.

Point

- When you change the font size at once but the items do not support the selected font size, the closest font size is set.



Information

- You can set display/not display the clock on the stand-by display or change the design. 【⌚時計表示設定 (Clock display format)】
- The stand-by display can be divided into several areas, to each of which you can make settings to display arrival information, schedule, calendar, list of notes or contents of a note, step/activity information. 【⌚待受画面設定 (Stand-by display) ▶ カレンダー／待受カスタマイズ (Info/calendar layout)】
- You can set a level of difficulty for the view to be seen. 【🔒プライバシービュー (Privacy view) ▶ レベル設定 (Privacy view level)】

Privacy view

This function allows the display to be less-visible to the people around you. You can start/cancel Privacy view on screens including the stand-by display.

1 **[MULTI]** (1 sec. or more) or **[P]** (1 sec. or more)

Canceling Privacy view : **[MULTI]** (1 sec. or more) or **[P]** (1 sec. or more)

Setting Machi-chara

You can set a character to be displayed on the stand-by display.

1 **[MENU]** ▶ **[8]** **Settings & NWservices** ▶ **[2]** **Display** ▶ **[7]**
Display Machi-chara ▶ **Set required items** ▶ **[Camera icon]** **[Set]**

Point

- Machi-chara does not appear when moving picture/i-motion or i-appli is set for the stand-by display.
- A confirmation message when you make settings can be changed to the speech in Machi-chara talk expression. You can also use Friendly message support Machi-chara that displays a message according to the FOMA terminal condition or content of entered text.

"ドロシヨ様" and "バカボンのパパ" stored by default are the friendly message support Machi-chara.

©Tatsunoko, YTV 2008 designed by DEVILROBOTS

©赤塚不二夫／ぴえろ (Fujio Akatsuka/Pierrot)

Display light time

You can set the duration, for which the display light is turned on.

<Example> Setting "Normal use"

1 **[MENU]** ▶ **[8]** **Settings & NWservices** ▶ **[2]** **Display** ▶ **[4]**
Display & Key light ▶ **[1]** **Display light time**
 2 **[1]** **Normal use** ▶ **[1]** **0 sec** - **[7]** **Always on**

Point

- When setting to "Phone setting" by selecting other than "Normal use" in Step 2, the lighting time set in "Normal use" applies.

Information

- You can adjust brightness of the display light or set when the display light is turned off. You can also turn Keypad light ON/OFF, and select a color of the light. **[照明/キーバックライト設定 (Display & Key light) ▶ 明るさ調整 | 画面オフ時間設定 | キーバックライト設定 (Brightness/Light time-out/Keypad light)]**

Light setting

You can set light alerts for incoming call, receiving mail, missed calls, etc.

Light alert

Set the lighting patterns and colors used for an incoming call, receiving mail or during a call.

<Example> Setting a light alert


1 [MENU] ▶ 8 Settings & NWservices ▶

2 Display ▶ 5 Light alert

Besides for incoming call/receiving mail, you can set light alert during a call or when sliding the FOMA terminal.

2 1 Light alert ▶ Set required items ▶

[Set]

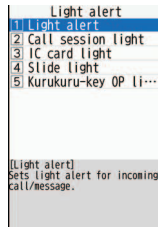

<Light setting screen>

Indicator light

The light notifies you of missed calls, unread messages (i-mode mail or SMS).

1 [MENU] ▶ 8 Settings & NWservices ▶ 2 Display ▶ 3

Color & Action image ▶ 5 Info display & light ▶ 2

Indicator light ▶ 1 ON or 2 OFF

Point

- The light blinks at approximately 10 seconds interval. If you do not confirm arrival information and then turn the FOMA terminal OFF and ON, it blinks at approximately 30 minutes interval.

Kisekai Tool


You can set the stand-by display, menu, incoming/outgoing call screens, etc. at once with a predefined combination.

<Example> Setting a preinstalled Kisekai Tool

1 [MENU] ▶ 5 Data Box ▶ 7 Kisekai Tool ▶ 2 Preinstalled ▶ Move the cursor to a Kisekai Tool ▶ [Set]

To display the details, move the cursor to a Kisekai Tool, and then press [Set].

To enlarge the images of the stand-by display and menu screen, move the cursor to a Kisekai Tool and then press [Set].

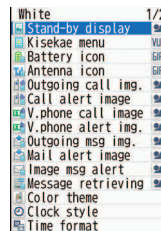

<Detail screen>



<Enlarged image of Style theme>

2 "Yes"



Information

- You can set FOMA terminal so that the stand-by displays switch, or Silent mode or Privacy mode starts at a specified time. 【ライフスタイル設定 (Timed theme)】
- Depending on Kisekai Tool, some Normal menu screens may not be switched to English ones. When you set Kisekai Tool in "Preinstall" folder, a menu screen specifically for English appears.

Sound/Screen Setting

eco mode

Adjust the display light or sound temporarily to save the battery.

1 [MENU] ▶ **8** Settings & NWservices ▶ **2** Display ▶ **8** eco mode ▶ **1** eco mode ON/OFF

Each time you select the option, ON/OFF switches.

When you set it to ON,  appears on the display.

eco mode options

You can set options for eco mode.

1 [MENU] ▶ **8** Settings & NWservices ▶ **2** Display ▶ **8** eco mode ▶ **2** eco mode options ▶ **1** Std. saving or **2** Full saving

Std. saving : Adjust system sound, brightness of the display, keypad light, light alerts, etc. to save the battery.

Full saving : With Std. saving setting applied, restrict use of Motion sensor, Display Machi-chara, Immobile sensor of Security lock, Pedometer/ACT monitor function to save the battery.

Lock/Security

Security codes of FOMA terminal

Security codes vary by functions. A security code is important to protect your personal information. Take extreme care of the security code.

- When setting a security code, do not use a number that can be easily known to others, such as "birth date", "a part of a phone number", "street number or room number", "1111" or "1234". Keep a separate note of the set security code.
- Be careful never to reveal your security code to others. If a security code is known to and misused by others, DOCOMO assumes no responsibility for damages resulted from it.
- If you forget your security codes, you need to bring a document (a driver's license etc.) to identify your subscription, the FOMA terminal and the UIM to a docomo Shop.
For details, contact "General Inquiries" on the last page of this manual.

Terminal security code (Default : 0000)

The code is the security code to be used when changing settings or deleting all the items at once. To change the code, perform the following operation.

- 1 8 **Settings & NWservices** 4 **Security & Locks** 6 **Change security code** **Authenticate**
Enter a new terminal security code **Enter the new terminal security code in New terminal security code-check field** **[Save]**

Point

- If a wrong terminal security code is entered 5 times consecutively, the power is turned OFF.

PIN1/PIN2 code (At subscription : 0000)

You can set 2 security codes to the UIM: PIN1 code and PIN2 code. The PIN1 code is used for identifying the user when attaching UIM or turning on the FOMA terminal.

The PIN2 code is the security code to be used when requesting the issuance of a user certificate, resetting Total calls cost or resetting the total call costs.

To change either code, perform the following operation. When changing PIN1 code, set PIN1 code ON/OFF to "ON".

- 1 8 **Settings & NWservices** 4 **Security & Locks** 5 **UIM** 1 **Change PIN code** or 2 **Change PIN2 code** **Authenticate** **Enter the current PIN code** **Enter the new PIN code in New PIN code and the New PIN code - check fields** **[Save]**

Point

- To display the PIN1 code entry screen when turning power on, 8 4 5 3 1, and then set PIN1 code ON/OFF to "ON".
- Even if PIN2 code is locked by entering incorrect PIN2 code 3 times consecutively, making/receiving calls or sending/receiving mail is available; if PIN1 code is locked by entering incorrect PIN1 code 3 times consecutively, these operations are unavailable.
- If the PIN1/PIN2 code is locked by entering an incorrect code 3 times consecutively, enter the PIN unblocking key (PUK) provided at subscription. If the UIM is locked after entering incorrect PUK code 10 times consecutively, contact a docomo Shop.
- PUK code is written on the subscription form (copy for user) handed to you at subscription in docomo Shop. If you subscribed to FOMA service other than docomo Shop, you need to bring a document to identify your subscription (a drivers license etc.) and the UIM to a docomo Shop, or contact "General Inquiries" on the last page of this manual.

❖ Network security code (At subscription : Set any code)

Network security code is required when DOCOMO identifies the subscriber to accept orders at docomo Shop, docomo Information Center or "お客様サポート (user support)" or when you use Network Services.

To change the code, "iMenu" in i-mode site ⇒ "お客様サポート (User support)" ⇒ "各種設定 (確認・変更・利用) (Settings (Check/Change/Use))" ⇒ "ネットワーク暗証番号変更 (Change Network security code)" by yourself (in Japanese only).

❖ i-mode password (At subscription : 0000)

i-mode password is required to register/delete site in My Menu, use Message Service, subscribe/cancel i-mode charged services, etc.

To change the password, "iMenu" in i-mode site ⇒ "English" ⇒ "Options" ⇒ "Change i-mode Password".

❖ microSD password

You can set a password to microSD card. When using another terminal with the password-protected microSD card installed, setting a password to that terminal is also required. On PCs or terminals that do not have ability to set passwords, data in the microSD card cannot be used and the card cannot be formatted. However, some microSD cards may not support this function.

❖ Password (for children) (Default : 1111)

This password is used as the password for children in Kid-safe mode. When entry of the password is required, you can alternatively enter the terminal security code.

Kid-safe mode ⇒ P35

Lock/Security

Various lock functions

Various lock functions are provided in FOMA terminal. Use them for your purpose.

All lock

Any operations other than answering calls, receiving messages and turning power ON/OFF are unavailable.

Activate : **MENU** ▶ **8** **4** **1** **3** ▶ Authenticate

Deactivate : Enter the terminal security code

Self mode

All functions requiring communication are unavailable.

Activate/Deactivate : **CLR** (1 sec. or more) ▶ "Yes"

Personal data lock

Personal information such as phonebook, messages or schedule is not displayed.

Activate/Deactivate : **MENU** ▶ **8** **4** **1** **4** ▶ Authenticate ▶ **1** or **2**

Keypad dial lock

Calls can be made only by using phonebook.

Activate/Deactivate : **MENU** ▶ **8** **4** **1** **6** ▶ Authenticate ▶ **1** or **2**

Operation lock

The screen display turns off (screen-off) and any key operations can be locked when FOMA terminal is closed. However, you can operate pressing  or pressing  for 1 second or more. During a call with the FOMA terminal closed, pressing  turns off the screen display (screen-off) and pressing  or , pressing  for 1 second or more and rotating Kurukuru-key are locked.

Activate/Deactivate :  (In addition to key operation, it activates when the screen is off)

Security lock

When a set time has passed with no operation after the display is screen-off, key operations can be locked.

Activate :  ►     ► Authenticate ► Set required items ► 

Deactivate temporarily : In screen-off,  ► Authenticate

IC card lock

Osaifu-Keitai, obtainment of ToruCa from IC card reader, iC transmission, etc are unavailable.

Activate :  (1 sec. or more) ► "Yes"

Deactivate :  (1 sec. or more) ► Authenticate

Privacy mode

You can set options for using personal information.

- For the operation, refer to "使いかたガイド (Guide)" installed in this FOMA terminal (in Japanese only).

Omakase Lock

The personal data of phonebook etc. or IC card function of Osaifu-Keitai is locked only by contacting DOCOMO in case FOMA terminal is misplaced etc.



Setting/Canceling Omakase Lock

 0120-524-360 Business hours : 24 hours (open all year round) (In Japanese only)

- * Unavailable from part of IP phones.
- * Omakase Lock can be set/canceled from My docomo site using a PC etc. (in Japanese only).
- For details, refer to "Mobile Phone User's Guide [Basic Usage]".

Data Security Service

This service allows you to back up data saved in the FOMA terminal to Data Center so as to restore the saved data to the FOMA terminal in case of misplacement, mistaken data erasion, etc.

Point

- Note that using Data Security Service overseas may require a higher packet communication fee than in Japan (not covered by i-mode packet flat-rate service).
- For details of Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- Data Security Service is a charged service requiring subscription (Subscription is required subscription of i-mode).

Incoming call restriction

There are some ways to restrict incoming calls.

Specifying Accept/Reject call for each phone number

Set each phonebook, and then activate settings of Accept/Reject call (setting of Specified caller).

When using this function, it is recommended that you use both Caller ID request and Anonymous caller.

- 1  **Search the phonebook** ▶ **Move the cursor to a phonebook entry** ▶  **3 Edit/Settings** ▶ **4 Advanced settings** ▶ **3 Accept/Reject call** ▶ **Authenticate** ▶ **Select a phone number** ▶ **1 Accept call** - **3 No setting**
- 2 **Following the operation above, on the stand-by display,**  **8 Settings & NWservices** ▶ **5 Call & Answer** ▶ **5 Reject/Accept call** ▶ **1 Specified caller** ▶ **Authenticate** ▶ **1 Cancel settings** - **3 Accept call**

Anonymous caller

For each reason for hiding caller ID, you can set a receiving operation.

- 1  **8 Settings & NWservices** ▶ **5 Call & Answer** ▶ **2 Anonymous caller** ▶ **Authenticate** ▶ **1 Anonymous** - **3 Unavailable** ▶ **Set required items** ▶  **[Set]**

Ring alert delay

To prevent prank calls such as one-ring phone scam or calls from anonymous callers, you can set FOMA terminal so that you will not immediately answer calls from the party not saved in phonebook.

- 1  **8 Settings & NWservices** ▶ **1 Alerts & Sounds** ▶ **5 Ring alert delay** ▶ **Set required items** ▶  **[Set]**

Unregistered caller

You can reject calls from phone numbers not saved in phonebook.

- 1  **8 Settings & NWservices** ▶ **5 Call & Answer** ▶ **5 Reject/Accept call** ▶ **2 Unregistered caller** ▶ **Authenticate** ▶ **1 ON or 2 OFF**

Resetting to default

Reset

You can restore functions in **red characters** on the menu list to the default settings. →P77

- 1 8 **Settings & NWservices** ▶ 7 **Clock & Other**
 ▶ 5 **Info & Reset** ▶ 5 **Reset** ▶ **Authenticate** ▶ **Select items to reset** ▶ [Reset] ▶ "Yes"

Delete all data

You can delete the saved or registered data in FOMA terminal, and restore the settings of each function to default.

- 1 8 **Settings & NWservices** ▶ 7 **Clock & Other**
 ▶ 5 **Info & Reset** ▶ 6 **Delete all data** ▶ **Authenticate**
 ▶ "Yes"

All data is deleted while restarting. Do not turn power off until the stand-by display is displayed.

Point

- Even after all data is deleted, the data registered by default is not deleted.
- Among Osaifu-keitai compatible i-αppli, data of which is not saved to the IC card, "iD appli" is restored to the default by deleting all data, but the other i-αppli are deleted.
- i-αppli other than Osaifu-Keitai compatible i-αppli are restored to the default by deleting all data, however, upgraded i-αppli is deleted.

Kid-safe mode

You can restrict available functions so that you can let your children use FOMA terminal without anxiety.

Setting Kid-safe mode

You can set whether to use Kid-safe mode.

When Kid-safe mode is set to "ON", menu operations for PIN code is restricted. If you do not use PIN1 code entry, set PIN1 code ON/OFF to "OFF" in advance.

- 1 8 **Settings & NWservices** ▶ 4 **Security & Locks** ▶ 3 **Kid-safe mode** ▶ **Authenticate** ▶ 1 **Kid-safe mode** ▶ 1 **ON** or 2 **OFF**

When "ON" is set, appears at the top of the display.

Changing password (for children)

Before operating, set Kid-safe mode to "ON". The password that is the same as the terminal security code cannot be set.

- 1 8 **Settings & NWservices** ▶ 4 **Security & Locks** ▶ 6 **Change security code** ▶ **Authenticate** ▶ **Enter a new password** ▶ **Enter the new password in Re-enter password field** ▶ [Save]

Function lock

You can lock outgoing calls, messages, 1Seg, the camera (including shooting for Graffiti picture), i-mode/full browser, i-appli, etc.

Before operating, set Kid-safe mode to "ON".

- 1 **MENU** ▶ 8 **Settings & NWservices** ▶
4 **Security & Locks** ▶ 3 **Kid-safe mode** ▶ **Authenticate** ▶ 2 **Function lock**


The screen shown to the right appears.

2 Set required items

Call/Mail : When "Phonebook contacts" is set, calls/mails can be made/sent only to the parties registered to phonebook.

i-appli : When "Saved only" is set, i-appli cannot be downloaded. Only i-appli in FOMA terminal can be used.

- 3 **[Camera]** **[Set]**

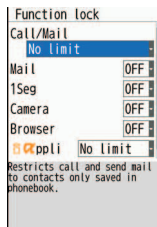

<Function lock screen>

Point

- When Mail is set to "ON", incoming mails are automatically received. In this case, no incoming operation with tones or images is performed, or no arrival information is displayed.

Making a call/videophone call

To specify a phone number to call, you can directly enter a phone number, or select it from Redial/Received calls, Recorded messages, voice memo while talking or phonebook.

Entering a phone number

Always enter area code even when calling from the same city.

- 1 **Enter a phone number (Up to 80 digits)** ▶ (voice call) or (videophone call) ▶ When ending the call,

Using redial/received calls

Up to 30 items are recorded in each of Redial and Received calls. When the maximum is exceeded, older logs are overwritten first.

- 1 (Redial) or (Received calls)
- 2 **Move the cursor to the party** ▶ (voice call) or (videophone call)

To display the details of a party, move the cursor to the party, and then press .

Point

- DOCOMO videophone specifications conform to "3G-324M, an international standard prepared by 3GPP". The connection with the videophones of different specifications cannot be established.




Using phonebook

1 ▶ Search phonebook

The phonebook list of the Show all names can be displayed by default.

Switch lines with or pages with .

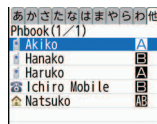

<Phonebook search result screen>

2 **Move the cursor to the party** ▶

To make a videophone call, move the cursor to the party and operate as follows.

From Show all names : ▶ ▶ Select the call method field ▶ ▶

From other search :

Point

- You can make calls using logs of mails, etc if phone numbers are saved in phonebook.
- When mail address is registered to the phonebook, you can create i-mode mail from the phonebook list.

Creating mail from Show all names : ▶ Search phonebook ▶ Move the cursor to the party ▶

Creating mail from other search : ▶ Search phonebook ▶ Move the cursor to the party ▶

International calls

You can make international calls from Japan using WORLD CALL.

✦ WORLD CALL

"WORLD CALL" is the international call service available from DOCOMO mobile phones. You are subscribed to "WORLD CALL" at the time of subscription to the FOMA service (Unless you request not to subscribe to it).

- No subscription or monthly charges apply.
- For details of "WORLD CALL" charges, available charging plans, etc, contact "General Inquiries" on the last page of this manual.
- To use international call services except DOCOMO service, contact the carrier for details.
- For countries and overseas telecommunications carriers available, refer to "Mobile Phone User's Guide [International Services]" or DOCOMO International Services website.
- The image of the other party displayed on FOMA terminal may be distorted or connection may not be established depending on the other party's terminal connected through the international videophone line.

- 1 Enter "010" ▶ Country code ▶ Enter a phone number without the leading "0" of the area code (City code) ▶**



In some countries and areas such as Italy, "0" is required.

Caller ID notification (At subscription : Notify)

You can notify your phone number (caller ID) to the other party's terminal when making a voice call.

- 1** **MENU** ▶ **8** **Settings & NWservices** ▶ **8** **NW Services** ▶
4 **Caller ID** ▶ **1** **Caller ID notification** ▶ **1** **Activate/Deactivate** ▶ **1** **Notify**

Select "**2** Not notify" if you do not want to inform.

Point

- Caller ID is your important personal information. Carefully consider whether you want to include caller ID information when making a call.
- If an announcement of requesting caller ID is heard when making a call, make a call again after setting Caller ID notification or adding prefix "186".



Information

- You can set whether to automatically convert an international call access code, or whether to add a country code for a call made from overseas. Also, you can save/edit international call access codes and country codes. 【 国際ダイヤルアシスト設定 (Int'l call assist)】
- You can notify/hide your caller ID on the other party's terminal for each call. 【 発信者番号通知／非通知 (Caller ID notification/Not notify) ▶ 186/184】
- You can set calling conditions each time you make a call. 【 発信オプション (Call option)】

Receiving a call/videophone call

Below are operations when FOMA terminal receives incoming calls.

1 An incoming call

You are notified of an incoming call with ring alert, light alert, the display, etc. On the display, a phone number appears if it is notified or a name appears when you registered his/her phone number to the phonebook. Also, if the phone number is not notified, a reason (Anonymous, Payphone, Unavailable) appears.

 : Adjust the alert volume

 : Stop ring alert and vibration

2 (voice/videophone call) or (videophone call)

3 When ending the call,

Point

- When you cannot answer an incoming call,  2 (The digit indicates the number of missed calls) appears on the stand-by display. The incoming calls are recorded as missed calls in Received calls.
- To answer a videophone call with substitute image, press  instead of  or .

Information

- You can set FOMA terminal so that you can answer an incoming voice call by pressing any key other than . 【 エニーキーアンサー設定 (Any key answer)】
- There are various ways for restricting incoming calls with conditions set. ⇒ P34
- You can set to answer a voice call by opening FOMA terminal when receiving a call. 【 着信中オープン応答 (Open and answer)】

Operation during a call

You can use useful functions during a call.

On hold

A melody is played while a call is on hold. For a videophone call, the videophone on-hold image is displayed on the phone of the other party and yourself.

1 During a call, [OnHold]

Point

Canceling the voice call on hold :  or 

Canceling the videophone call on hold (send the image before the call was placed on hold) : 

Canceling the videophone call on hold (send the camera image) :  / 

Canceling the videophone call on hold (send the substitute image) : 

Listening volume

You can adjust listening volume during a call.

1 During a call,

Point

- This setting applies to Listen volume in Adjust volume.

Information

- According to the volume of the other party or ambient noise, the other party's voice becomes easier to hear with 【 はっきりボイス (Voice clear)】 , or the voice slows down with 【 ゆっくりボイス (Voice slowing)】 .
- You can record voice/image of the other party by pressing  for 1 second or more during a call. 【 通話中音声メモ / 動画メモ (Voice memo during a call/Movie memo)】

When you cannot answer a call/videophone call

Use an appropriate function according to a situation or place where you cannot answer a call.

Record message

When Record message is set to "ON", a greeting message is played and the caller can record message when you cannot answer the call.

1 4 **Phonebook & Logs** 7 **Record msg.&Voice memo** 1 **Record message** 1 **ON**

appears on the stand-by display.

Point

- You can record up to 4 voice/videophone calls in total, approximately 30 seconds for each call. When reaching the savable number, appears on the stand-by display and Record message does not work. Delete unnecessary recorded messages.
- Even when Record message is not set to "ON", you can activate it only once by pressing for 1 second or more for the incoming call.
- Even when the greeting message is being played or a message is being recorded, a call can be answered by pressing . For videophone call, send your image with or substitute image with . However, the message before the call was answered is not recorded.

Playing a recorded message : 4 7 2 ▶ Select a message ▶ Select whether to delete

Public mode

Public mode is an automatic answering service putting emphasis on manners in a highly public place or when driving a car.

Public mode (Drive mode)

When there is an incoming call, an announcement is played to inform the other party of the reason you cannot answer the call and request to call back before the call ends.

1 (1 sec. or more)

appears on the stand-by display.

Point

- In Public mode (Drive mode), no receiving action is performed, and calls are recorded as Missed call.

Canceling : (1 sec. or more)

Public mode (Power OFF)

When there is an incoming call while you are turning power off, an announcement is played to inform the other party of the reason you cannot answer the call and request to call back before the call ends.

1 **Enter "*25251"** ▶

Even when Public mode (Power OFF) is set, no indicators such as icons appear on the display.

Point

Canceling : Enter "*25250" ▶

Checking the settings : Enter "*25259" ▶

Information

- When you cannot immediately answer a call, press while receiving the call to put it on hold. When the call is put on hold, the other party hears a status message. For a videophone call, the videophone on-hold image is displayed on the phone of the other party and yourself. (応答保留 (On hold))

You can use the DOCOMO network services below with FOMA terminal.

Service	Application	Monthly charge
Voice Mail service	Required	Charged
Call Waiting Service	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking Service	Not required	Free
Caller ID Request Service	Not required	Free
Dual Network Service	Required	Charged
English guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
OFFCEED	Required	Charged
Public mode (Drive mode)	Not required	Free
Public mode (Power OFF)	Not required	Free
Melody Call	Required	Charged

- Network services are not available out of service area or where radio waves are hard to reach.
- For subscription and details of the services, contact "General Inquiries" on the last page of this manual.
- For details, refer to "Mobile Phone User's Guide [Network Services]".
- "OFFCEED" is a service requiring subscription. For details, refer to DOCOMO's business website (<http://www.docomo.biz/html/service/offceed/>) (In Japanese only)).

Setting network service

Below are the procedures of major network services.

Service	Operating procedure
Voice Mail service	[MENU] ▶ 8 Settings & NWservices ▶ 8 NW Services ▶ 1 Voice Mail ▶ 1 Voice Mail service ▶ Perform the following operation Activate : 1 ▶ "Yes" ▶ "Yes" ▶ Enter ring time Deactivate : 3 ▶ "Yes" Play messages : 5 ▶ 1 or 2 ▶ "Yes" ▶ Follow the guidance to operate
Call Waiting	[MENU] ▶ 8 Settings & NWservices ▶ 8 NW Services ▶ 2 Call waiting/forward ▶ 1 Call waiting ▶ Perform the following operation Activate : 1 ▶ "Yes" Deactivate : 2 ▶ "Yes"
Call Forwarding Service	[MENU] ▶ 8 Settings & NWservices ▶ 8 NW Services ▶ 2 Call waiting/forward ▶ 2 Call forwarding ▶ Perform the following operation Activate : 1 ▶ "Yes" ▶ "Yes" ▶ Enter a phone number ▶  ▶ "Yes" ▶ Enter ring time Deactivate : 2 ▶ "Yes"

Point

- When ring time is set to "0sec." for Voice Mail service or Call Forwarding service, incoming calls are not recorded in Received calls.
- To answer a call from another party during a call when call waiting is activated, press . When a party is put on hold, press  to switch the parties to talk to.

Emergency call

The following emergency calls can be made from the FOMA terminal.

Police	110 (no area code)
Fire and ambulance	119 (no area code)
Marine emergencies	118 (no area code)

- This FOMA terminal is applicable to "Emergency Location Report". When making an emergency call to 110, 119, 118, etc., information of your location (location information) is automatically informed to an emergency call receiving organization such as police. For some locations and/or wave reception conditions, the emergency call receiving organization cannot recognize the correct location.

When the caller ID is hidden for the call, i.e., by appending "184" to the dialed number, none of location information or your phone number is notified; however, the organization may acquire the location information and phone number regardless of your settings, if they have determined that such information is necessary for the protection of life etc. The area and timing of implementing "Emergency Location Report" vary by the preparatory state of respective emergency call receiving organizations.

- When calling to 110, 119 or 118 from FOMA terminal, inform them that you are calling from a mobile phone and give your phone number and your current location precisely since the police or fire department has to call you back for confirmation. To make sure that you are not cut off during the call, do not move when making the call and do not turn OFF the phone after the call, but keep it on for about 10 minutes.
- For some areas you are calling from, you are not connected to the local police or fire department. Use a public payphone or land-line phone in that case.
- When Auto redial as voice of Operation is set to "ON", videophone call to 110, 119 or 118 from the FOMA terminal changes automatically to voice call.

Using overseas

You can talk with FOMA terminal and use i-mode overseas.

❖ International Roaming (WORLD WING)

International roaming is a service that allows you to make voice calls and access i-mode using network of DOCOMO affiliated telecommunications carriers even overseas. Before using this service, check its subscription status. For details, contact "General Inquiries" on the last page of this manual.

- The service is available in 3G Network service area. Also, it is available in countries or districts where 3G 850 MHz is applied. Check the service area.
- Refer to the following documents before using the FOMA terminal overseas.
 - "海外ご利用ガイド" preinstalled in My Document in Data Box (In Japanese only)
 - "Mobile Phone User's Guide [International Services]"
 - DOCOMO International Services website

Available services overseas

Available communication services vary by the telecommunications carrier and the network of the country you stay. The icon of the network in use and a name of the connected telecommunications carrier appear on the stand-by display.

— : Unavailable

Communication service	Network		
	3G	GPRS	GSM
		—	—
Voice call	○	—	—
Videophone call	○	—	—
i-mode ^{*1}	○	—	—
i-mode mail	○	—	—
SMS ^{*2}	○	—	—
i-Channel ^{*1, 3}	○	—	—
i-concier ^{*4}	○	—	—
i-Widget ^{*5}	○	—	—
Packet communication (PC connection)	○	—	—

*1 International settings of i-mode are required.

*2 To send to FOMA terminal, enter the party's phone number as well as in Japan.

*3 International settings of i-Channel are required. Packet communication fee is also charged for auto update for Basic channel (included in i-Channel usage fee in Japan).

*4 International Settings of i-concier is required. Packet communication fee is charged each time you receive information.

*5 i-Widget roaming set is required. When multiple Widget Appli communicate, a packet communication fee is charged per one communication.

Making a call from overseas

You can make a call in simple operation using memory No. (Quick dial). When you enter a number within 2-digits overseas to make a call, a screen asking for selecting "Quick dial" or "Call" appears. Select "Call" to call with the number as it is (used for emergency call overseas).

Making an international call (including Japan)

- 1  (1 sec. or more)

"+" is entered.

- 2 **Country code ("81" to Japan) ▶ Enter a phone number without the leading "0" of the area code (City code) ▶**
 (voice call) **or**  (videophone call)

In some countries and areas such as Italy, "0" is required.

Making a call inside the country you stay

- 1 **Enter a phone number ▶**  (voice call) **or**  (videophone call) **▶ "No, use original"**

The call may be made with no message displayed.

Making a call to WORLD WING user overseas

- 1  (1 sec. or more) ▶ **Enter "81" ▶ Enter a phone number without the leading "0" of the area code (City code) ▶**  (voice call) **or**  (videophone call)

Point

- The call is forwarded internationally from Japan even when staying in the same country as the party to be called, so enter "+" and the country code of Japan, "81".

Receiving a call inside the country you stay

- 1 **A call is received ▶**  (voice call) **or**  (videophone call)

Point

- Regardless of the country, from which the call is made, the call is internationally forwarded from Japan. The caller is charged for call fees to Japan, and the receiver is charged for receiving the call.

Setting after returning to Japan

When you turn the FOMA terminal ON, the connection to the FOMA network is established automatically. If connection is not automatically established, set Network search setting to "Auto".

Sending i-mode mail/SMS


Sending i-mode mail

Only by subscribing to i-mode, i-mode mails can be exchanged not only with i-mode terminals but also via Internet.

- For details of i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

1 [Write]

The screen shown below appears.

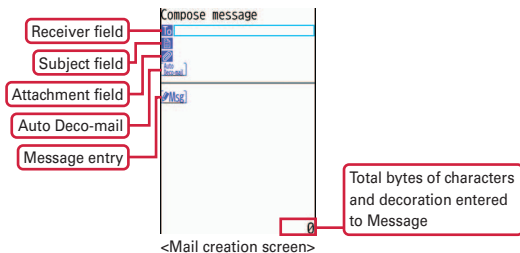

2 Enter an address, title and text [Send]

When sending is completed correctly, the mail is automatically saved in a folder of Outbox.

Point

Adding addresses (Simultaneous sending) : On the mail creation screen, move the cursor to the receiver field .

Attachments

You can attach up to 10 files (images, sound, moving picture files/i-motion, etc.) of up to 2 Mbytes in total to a mail.

1 On the mail creation screen, select the attachment field ▶ Select a file to attach ▶ Edit a mail [Send]

Point

- Sending an attachment file of a big size may take time. After sending such file, a lot of mail in Outbox may be deleted.

Changing attachment : On the mail creation screen, move the cursor to an attachment  ▶ Select a file to attach

Removing attachment : On the mail creation screen, move the cursor to the attachment  ▶ "Yes"

Sending SMS

When you do not know the receiver's address, you can enter his/her phone number as the address to send the mail.

- SMS can be sent to or received from parties using overseas service providers except DOCOMO. For countries and overseas telecommunications carriers available, refer to "Mobile Phone User's Guide [International Services]" or DOCOMO International Services website.

1 ▶ 7 SMS/Area Mail ▶ 1 SMS ▶ 1 Compose SMS ▶ Enter a recipient and message [Send]

Point

- A file cannot be attached to SMS.
- When receiving SMS, it operates the same as receiving i-mode mail (⇒ P47).

Deco-mail/Decome-Anime

You can create amusing mails using decoration or images.

Deco-mail

You can change a font size or background color, or insert still images, Deco-mail picture or Deco-mail pict. To decorate characters, specify decoration and then enter characters, or vice versa.

<Example> Specifying decoration before entering characters

1 On the mail creation screen, select "Msg" ▶  [Deco.]

2 Select a decoration icon ▶ Decorate

Decoration types are as follows.

	Insert image		Change a font color		Change a font size
	Change a background color		Blink		Ticker
	Swing		Word alignment		Insert line

3 Edit a mail ▶  [Send]

Point

- When "Auto Deco-mail" is selected after message entry, the message is automatically decorated according to the message content. Press  to display Deco-mail options one after another.
- On the character entry screen, press **MENU** ▶  to preview the decoration result. The bytes of the remaining data amount you can enter is displayed in the lower-right portion of the preview screen. To return to the previous screen, press .



Information

- You can easily create Deco-mail or Decome-Anime using templates stored by default. **【メールテンプレート (Mail template)】**

Decome-Anime

You can create expressive mails using Flash graphics with messages or images inserted.

1  ▶ 3 **Compose Decome-Anime**

2 "Edit" ▶ **Move the cursor to a template**


To preview, press .

3  [Load]

4 **Edit the text or image**

Changing template : **MENU** ▶ 1 Decome-Anime ▶ "Yes" ▶ Move the cursor to a template ▶ 

5  [Complete] ▶ **Edit a mail** ▶  [Send]

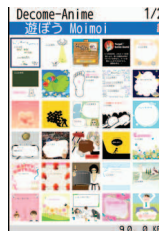

<Decome-Anime template list>

Point

- To preview, load the template, move the cursor to the Decome-Anime text field or the Decome-Anime edit screen, and then press . To return to the previous screen, press .

Receiving i-mode mail


No specific operations or settings are required for receiving mails (mail automatic reception).

1 Receive i-mode mails

The screen shown to the right appears.

2 1 Mail ▶ Select a mail

When multiple mails are received at the same time or the mails are sorted out to Message i-appli folder, a folder list appears.

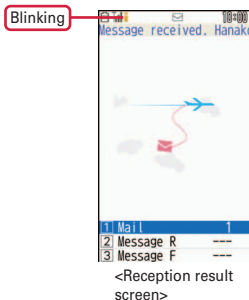

Point

Checking a mail in the mailbox : [Envelope icon] ▶ 1 or 4 or 5 ▶ Select a folder ▶ Select a mail

Checking new messages

You can make inquiry for any i-mode mail delivered while you were out of service area or the power was turned OFF.

1 [Envelope icon] (1 sec. or more)

Replying to mails

- 1 Move the cursor to a mail on the list screen of received mails ▶ [Reply] ▶ 1 Compose Message - 6 OK ▶ Edit a mail ▶ [Send]

Auto-sort method

Sent/Received mails can be automatically sorted.

- 1 [Envelope icon] ▶ 9 Mail settings ▶ 2 Sort method ▶ 1 Auto-sort ON/OFF ▶ Set each option to "ON" ▶ [Set]
- 2 2 Inbox sort or 3 Outbox sort ▶ [Add] ▶ Set sort method ▶ Select a folder to sort ▶ Select a priority

Information

- Folders can be added in each Inbox/Outbox/Unsent messages. You can name added folders. [i モードメール (i-mode mail) ▶ フォルダ作成/削除 (Add/Delete folder)]
- You can check the subject of mail in the i-mode Center and then specify if you receive the mail or delete it without receiving. [メール選択受信設定 (Receive option setting)]

Early warning "Area Mail"

This is a service that you can receive emergency earthquake flash report etc. delivered by the Meteorological Agency. i-mode subscription is not required.

Receiving Area Mail

When received Area Mail,  turns on, and you are notified of reception with light alert, the dedicated buzzer alarm and vibrate alert.

Point

- Area mail cannot be received during a call or when Omakase Lock is activated.

Receive setting

You can set if you receive Area Mail.

-  **7 SMS/Area Mail** **2 Early warning "Area Mail" setting** **1 Receive setting** **Read the notice** **Select the option field** **1 YES or 2 NO**  [Set]

Information

- You can set the beep time, or the alert method when receiving Area Mail in Silent mode or Public mode (Drive mode). **【緊急速報「エリアメール」(Early warning "Area Mail") > 設定 (Settings)**

Adding phonebook entries

There are two types of phonebook: FOMA terminal phonebook and UIM phonebook. Saving to the FOMA terminal phonebook is explained here.


-  **(1 sec. or more)** **Enter a name**

The screen shown to the right appears.

- Set required items**

In addition to items in the screen shown to the right, you can save "URL".

-  **[Save]**

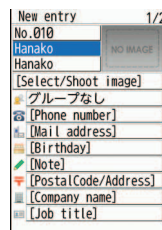

<Phonebook new entry screen>

Point

Saving UIM phonebook entries: **MENU** **4** **4** **Enter a name** **Set required items** 

Adding to phonebook from Redial/Received calls list

-  **(Redial) or**  **(Received calls)** **Move the cursor to the party** **MENU** **5 Add** **1 Add to phonebook or 2 Update phonebook** **1 In phone memory or 2 In UIM**

To update a phonebook entry, select the entry to add a phone number to.

- Set required items**  **[Save]**

Point

Searching phonebook: **MENU** **4** **1** **1 - 7**

Editing phonebook entry:  **Search phonebook** **Move the cursor to a phonebook entry** **MENU** **3** **1** **Select an item and edit**  **"Overwrite" or "New entry"**

Deleting phonebook entry:  **Search phonebook** **Move the cursor to a phonebook entry** **MENU** **4** **1** **or 2** **(for All contacts, authenticate)** **"Yes"**

Displaying i-mode site/website

With i-mode, you can use services such as site connection, Internet connection or i-mode mail by the display of i-mode terminal. You can use Full Browser to display websites created for a PC.

- i-mode is a charged service requiring subscription.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- The contents of sites and Internet websites are generally protected by copyright laws. All or any portion of text, image or other data imported to your i-mode terminal from a site or website cannot be altered except for personal use, and cannot be sold or redistributed in any form without the express permission of the copyright holder.
- When installing a UIM except yours or you turn ON the FOMA terminal without UIM, still images/i-motion/melodies downloaded from sites, attached files sent/received by mail, screen memos and MessageR/F for some models cannot be displayed or played.
- When the stand-by display, ring alert, etc. is set by data with the UIM operation restriction, if you replace the UIM with another one or turn the power ON without UIM, the settings return to default.
- i-mode and Full Browser have different charging systems. It is recommended that you subscribe to i-mode packet flat-rate service because a high packet communication fee is required to use Full Browser according to data communication volume.


Displaying i-mode website

1 Select an item to view

During i-mode communication,  blinks at the top of the display.

To display English menu, scroll down to the bottom of the iMenu screen and select "English".

2 When quitting viewing a site, "Yes"

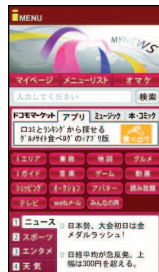

Displaying web pages designed for PC

1 2 i-mode Full Browser Home

A confirmation screen for using Full Browser appears by default.

2 After reading a website, "Yes"

Switching browsers

Switching i-mode to Full Browser : While a site is displayed,   

Switching Full Browser to i-mode : While a website is displayed,

Information

- You can change actions of i-mode and Full Browser in i-mode settings. 【 i モード/フルブラウザ (i-mode/Full Browser) > i モード設定 (i-mode settings)】.

Useful functions

Entering URL

- 1 **MENU** ▶ 2 **i-mode** ▶ 5 **Enter URL** ▶ 1 **Enter URL** ▶
Enter a URL (up to 2,048 one-byte characters) ▶ **Select**
 1 **i-mode Browser** or 2 **Full Browser in the Browser**
type field ▶  **[Connct]**

When you select Full Browser, a confirmation screen for using Full Browser appears. When you select "Yes (default)", the confirmation screen does not appear again.

Bookmark

You can bookmark frequently visited sites or websites to quickly display them the next time you want to visit.

- Saving** : While a site or website is displayed, **MENU** ▶ 1 2 ▶ Enter a title (up to 12 two-byte (24 one-byte) characters) ▶  ▶
 Select a folder where the bookmark is added

Displaying : **MENU** ▶ 2 2 ▶ Select a folder ▶ Select a bookmark

Screen memo

Currently displayed contents of a site or website can be saved as a screen memo or captured image.

- Saving** : While a site or website is displayed, **MENU** ▶ 2 2 ▶ "Yes"
Displaying : **MENU** ▶ 2 3 ▶ Select a screen memo

Point

- To save the captured image only, select "Only displayed" in the last step of saving the screen memo.
- If the site or website disapproves of saving screen memos etc, the screen memo may not be saved.

RSS reader

You can collect the latest information of websites by saving RSS to RSS reader.

Saving : While a website is displayed, **MENU** ▶ 0 2 ▶ **Select RSS** ▶ "Yes"

Displaying : **MENU** ▶ 2 9 ▶ Select a channel ▶ Select an item

Using link functions

You can make calls or send mail from link items.

However, some functions are not available depending on the site, website or mails sent from a PC, etc.

- 1 **Display a site or website** ▶ **Move the cursor to a link item** ▶  **[Select]**

Depending on the selected item, you can perform the following operations :

Phone number (Phone To (AV Phone To)) : Make a call with some conditions.

Mail address (Mail To) : Create an i-mode mail and send it to the selected mail address.

Phone number (SMS To) : Create SMS and send it to the selected phone number.

URL (Web To) : Connect to the site or website.

1Seg information (Media To) : Watch 1Seg or make a recording reservation.

Viewing and operating screen

As with Internet websites on your PC, you can similarly operate sites and websites.

Scrolling up and down* : 

Scrolling up and down

continuously* :  (1 sec. or more)

- * When Display Mode in Full Browser is set to PC layout mode,  /  (1 sec. or more) to scroll right and left/scroll right and left continuously.

Closing a tab/Ending a

browser :  ▶ "Yes"

Switching normal/scroll mode : 

• In normal mode


Changing pages :  [Back]/  [Next]

View history :  [Back] (1 sec. or more)/  [Next] (1 sec. or more)

• In scroll mode

Scrolling up or down :  [▲]/  [▼]

Scrolling up and down continuously :  [▲] (1 sec. or more)/  [▼] (1 sec. or more)

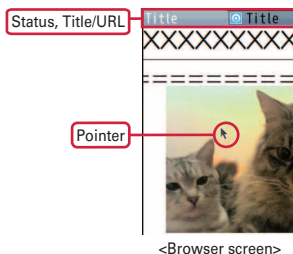

Operating the browser screen

When a site or website is displayed, you can perform operations by pressing  or .

To do	Operation
Connect to the previously displayed page (Last URL)	 ▶  ▶ Select a URL
Connect to iMenu or Full Browser	 ▶ 
Reload information	 ▶  *1 or  *2
Display a URL	 ▶  *1 or  *2 ▶ 
Show/hide the pointer	 ▶   ▶  or 
Show/hide the guide area	 ▶  
Send a URL with i-mode mail	 ▶  ▶  or 
Open/close/switch tabs	 ▶   - 
Switch pages, zoom *2, drag, select text scope or paste, etc	 ▶   -  *1 or  -  *2
Change a font size	 ▶  ▶ Select a font size
Search for a character string	 ▶  ▶ Enter text in the search text entry field (Up to 25 two-byte (50 one-byte) characters) ▶ 
Display the visit history/a list of tabs	 ▶ 
Display PagePilot screen (the entire page)	 ▶ 
Add to phonebook	Move the cursor to a phone number or mail address ▶  ▶  ▶  or 
Save an image	 ▶  ▶  - 

*1 When using i-mode

*2 When using Full Browser

Using i-Channel



This is a service that the information such as news or weather is distributed to terminals compatible with i-Channel. The information is automatically received, and a ticker appears on the stand-by display. You can display the channel list by pressing **[CLR]**. Two types of i-Channel shown below are available. (In Japanese only)

● Basic Channel

The channel is provided by DOCOMO, and the packet communication fee for automatically updating the distributed information is not charged.

● Okonomi (Optional) Channel

The channel is provided by an IP (Information Provider), and the packet communication fee for automatically updating the distributed information is separately charged.

When viewing detail information in Basic Channel or Okonomi Channel, a packet communication fee is separately charged. For overseas use, packet communication fee is charged for both automatic update and viewing detail information.

- i-Channel is a charged service requiring subscription. i-mode subscription is required for the service.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

To view the detail information of the ticker displayed, perform the following operation.

1 On the stand-by display, **[CLR]** ▶ Select a channel

The site is connected and the detail information appears.



Point


- When the detail information of i-Channel is displayed, the same operations as the ones when i-mode sites or websites are available. ⇒ P51



Information

- You can change the display options of the i-Channel ticker. **[i チャネル (i-Channel) > i チャネル設定 (i-Channel setting)]**

Viewing shooting screen

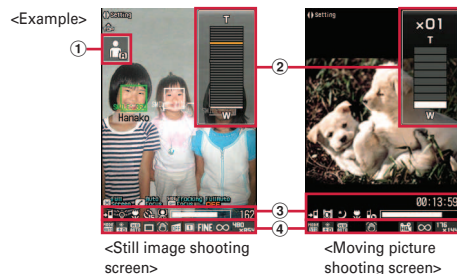

① Auto optimized shooting mode icon	② Zoom ratio • With  , display the zooming adjustment panel to zoom in/out.
③  : Save to  : Recording Type  : Light  : Macro shooting  : Auto timer  : Face detection/Smile finder  : Compatible mode Indicator, Counter	④  : Scene mode/effect  : Brightness  : White balance  : Frame  : Shake reduce  : Skew correction  : Continuous/Panorama shooting  : Quality  : Quality:Movie camera  : Size restrictions  : Image size • You can change the settings by pressing  on the shooting screen.

Shooting still images/moving pictures



You can shoot still images/moving pictures with the camera in FOMA terminal.

Shooting still images

- 1  or  (1 sec. or more)
- 2 Point the camera at the object,  [Shoot] or 
- 3  [Save] or 

Shooting moving pictures

- 1     
- 2 Point the camera at an object,  [Shoot] or 
- 3 When you want to stop shooting,  [Stop] or 
- 4  [Save] or 

Point

- If FOMA terminal is left in a warm place or exposed to direct sunlight for a long time, images to be shot may be deteriorated.
- If no operations are performed for approximately 3 minutes during shooting stand-by, the camera ends.

Switching In-camera/Out-camera : On the shooting screen, 

Shooting still images in various procedures

On the still image shooting screen, you can switch shooting procedures from the submenu.

Followings are major shooting procedures.

Shooting procedure	Effects and procedures
Scene mode/effect	The camera detects a subject, switches to the optimized scene and then focus the subject (Auto optimized shooting mode). Setting scene mode/effect : MENU ▶ 1 1 ▶ Select required items
Smile finder	When a SmileRate of shooting subjects reaches specified rate, a still image is shot. Setting SmileRate : MENU ▶ 3 2 ▶ Select SmileRate
Auto timer	Use this function for not only shooting yourself but also preventing hand shake. Setting the remaining time in seconds before shutter clicks : MENU ▶ 5 ▶ Select seconds
Continuous/4 frames/Panorama shooting	You can specify the number of frames for continuous and 4 frames shooting, and shoot a panorama view using the camera's auto-connecting technology. Selecting a shooting procedure : MENU ▶ 6 ▶ Select a shooting procedure




Information

- Tracking an moving object 【🔍トラッキングフォーカス (Tracking focus)】 and detecting registered person's face 【🔍サーチミーフォーカス (Find-me focus)】, etc. are available.
- You can change various shooting settings such as the image size, image quality, number of images for continuous shooting, auto-save, location to save or shutter tone. 【📷カメラ (Camera) ▶ 静止画詳細設定 (Image settings)]

Viewing still images/moving pictures

Viewing still images after shooting

1 **MENU** ▶ **5** **Data Box** ▶ **1** **My Picture** ▶ **1** **Camera** ▶
Select an image

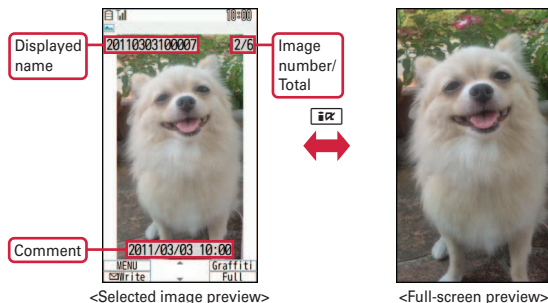

Playing moving pictures after shooting

1 **MENU** ▶ **5** **Data Box** ▶ **4** **i-motion/Movie** ▶ **2** **Camera** ▶
Select a moving picture

Point

Creating a mail with attachment : On the list screen, move the cursor to data ▶



Information

- You can save still images/moving pictures to a microSD card (⇒P67), and sort them in created folders or albums. 【📁フォルダ (Folder) ▶ 追加/削除 (Add/Delete)】
- You can set a still image or a moving picture to the stand-by display (⇒P27). 【📷待受画面設定 (Stand-by display) ▶ 待受画面選択 (Image/i-appli)】

Graffiti picture

Use the attached touch pen to decorate still images. You can create graffiti picture by shooting on the dedicated screen or from saved still images.

Touch panel

You can use the display as touch panel only for creating graffiti picture.


❖ Precautions on using touch panel

- For touch panel operation, use the attached touch pen.
- Touching the touch panel may not work in the following cases. Note that it may cause erroneous operation.
 - Operation with a foreign object on the touch panel
 - Operation with protective sheet or seal on the touch panel
- Do not press with sharp objects such as a nail, a ballpoint pen and a pin or press with the finger strongly.
- Do not press forcibly the frame part around the display. The touch panel may operate erroneously.


Basic touch operations

Touch : Press the screen lightly once and release it

Drag : With pressing the screen lightly, move the touch pen

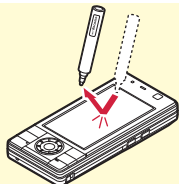

Example: Touch

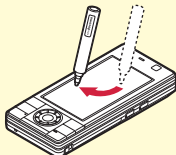

Example: Drag

❖ Attaching/Removing touch pen cap

To remove the cap, hold the cap with your hand and turn the pen counterclockwise.

To attach the cap, hold the cap with your hand and turn the pen clockwise. At this time, make sure to lock it firmly.

Creating graffiti picture

The way of shooting photo to create graffiti picture is explained here.

1 [📷] (1 sec. or more) ▶ Select [はじめから (From the start)]

When you create graffiti picture with saved still image, select [らくがきから (From the graffiti)].

2 According to the onscreen instructions, touch items ▶

Touch [撮影スタート (Start shooting)] or [🔴] or [📷]

Countdown starts and photo is shot after approximately 3 seconds.

3 Check shot still image ▶ Touch [らくがき開始 (Start graffiti)] or [🔴] or [📷] ▶ Edit the still image

On the editing screen, you can draw picture and paste stamps with the touch pen.

4 Touch [完成 (Complete)] ▶ Select a saving location ▶ Select an operation



Information

- If the touched point by touch pen does not match to actual sensed point on the FOMA terminal, you can make correction. [🔍 タッチパネル (Touch panel) ▶ 補正 (Correction)]

Watching 1Seg

● Using 1Seg

1Seg is a service provided by TV broadcasting enterprises (stations), etc. A communication fee for receiving video picture and sound is not required. Contact NHK for details on your NHK viewing fees.

* For viewing "Data broadcasting site", "i-mode site", etc., packet communication fees are charged. Some sites require information fees (i-mode pay sites).

* For details of "1Seg" service, refer to the following websites.

The Association for Promotion of Digital Broadcasting

From a PC : <http://www.dpa.or.jp/english/>

From i-mode : <http://www.dpa.or.jp/1seg/k/> (in Japanese only)

● Airwaves

1Seg is one of the broadcast services and a different type of radio waves (airwaves) from that of FOMA service is received. In the following cases, 1Seg may not work correctly.

- A place far from the tower that the airwaves are sent from
- Mountain-ringed regions or a place between buildings
- Tunnel, underground or far back from a building

* To make the reception condition better, stretch out the 1Seg antenna. To receive stronger radio waves, try changing the direction of the antenna, moving the FOMA terminal closer or further from your body, or moving to another location.

● Screen appearing when using 1Seg for the first time

A confirmation screen for disclaimers appears. If you agree and then select "OK", the confirmation screen does not appear again.

Creating a channel list using preset (for the first-time creation)

To watch 1Seg, create a channel list at the beginning. Loading broadcasting stations and channels that are pre-registered to the FOMA terminal is explained here.

- 1 ► ► ► ► "Yes" ► "Use preset"

"Auto setting" searches for channels that can be received in your current location. Perform Auto setting with extending 1Seg antenna in digital terrestrial broadcasting service area.

- 2 Select an area ► "Yes"

Setting a channel list

When you have multiple channel lists or move to another area, you need to switch the channel lists.

- 1 ► ► ► ► Move the cursor to a channel list ► [Set]

A list of channel numbers appears. To watch a channel, move the cursor to the channel, and then press .

Starting 1Seg

- 1 (1 sec. or more)

Viewing and operating watching screen

You can watch 1Seg in full screen, or divide the screen to watch the data broadcasting.

To watch 1Seg in horizontal display, change to closed style.



<Horizontal display (full-screen)>

Selecting channel : [1] - [9], [X], [0], [≡]

Switching the watching screen : [↶]

Adjusting volume : [✉] [Low]/ [i] [High]

Starting/Stopping video recording : [REC] (1 sec. or more)

- * When you press [END] to end recording, you can select the option to end only watching (recording continues) or the option to end watching/recording.

Recording still images : [CAM]

Point

- Pressing [MENU] while watching displays the submenu, from which you can reserve watching/recording, set OFF timer, turn 1Seg eco mode ON/OFF, etc.

Displaying key function help : While watching, [MENU] [9]

Watching/Recording reservation

You can automatically activate 1Seg watching or recording, or set the alarm to notify you of start of a program.

1 [MENU] [6] LifeKit [9] 1Seg [4] Set/Timer list

2 [MENU] [1] Set new timer ▶ Select timer option ▶ [CAM] [Save]

When selecting "Manual reception" or "Manual recording", you proceed to set the reservation details such as time and date or channel.

Selecting "By program guide" activates program guide i-appli. When you reserve watching or recording a program by selecting it in the program guide i-appli, the reservation information is saved and displayed on the setting screen.

3 [CAM] [Save]

Point

- When recording a long program, specify the saving location that has more free space in "REC setting" on the recording reservation screen.

Playing recorded program

1 [MENU] [5] Data Box [0] 1Seg ▶ Select the location of the recorded program ▶ Select data

Music&Video Channel

Music&Video Channel is a service which automatically distributes a program of up to approximately 1 hour at night. You can also enjoy high-quality video program of up to approximately 30 minutes. (In Japanese only)

- Music&Video Channel is a charged service requiring subscription. Subscriptions to i-mode and i-mode packet flat-rate services are required for the service.
 - Information fee may be required additionally for some programs besides Music&Video Channel service fee.
 - If UIM is used on a Music&Video Channel incompatible FOMA terminal after subscribing to Music&Video Channel, Music&Video Channel cannot be used. Note that the service fee is charged unless Music&Video Channel is unsubscribed.
 - Program setting and downloading are unavailable during international roaming*. Stop distribution of programs before leaving Japan. When you return to Japan, resume distribution of programs.
- * Note that attempting program setting or downloading during international roaming requires packet communication fee for i-mode connection.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Setting programs

To set programs, registering Music&Video Channel program site in My Menu may be required.

1 [MENU] ▶ 9 MUSIC ▶ 2 Music&Video Channel

The screen shown to the right appears.

2 "Set program" ▶ Set a program according to instructions on the screen



<Music&Video Channel screen>

Playing a program

1 [MENU] ▶ 9 MUSIC ▶ 2 Music&Video Channel ▶ Select a program

The following operations are available on the player screen.

Pausing/Playing : [PAUSE/PLAY]

Adjusting the volume : [VOLUME]

Rewinding/Fast forwarding : [REWIND/FAST FORWARD] (1 sec. or more)

Jumping to the beginning of the chapter :

When the chapter is played for 3 seconds or more, [JUMP TO BEGINNING]

Jumping to the previous chapter : When the chapter is played within 3 seconds, [JUMP TO PREVIOUS]

Jumping to the next chapter : [JUMP TO NEXT]



<Music&Video Channel player screen>

MUSIC Player

You can play Chaku-uta full downloaded from a site and Windows Media® Audio (WMA) files imported from music CDs, the Internet, etc. to a PC. And Uta-moji lyrics downloaded from a site can be displayed on the player screen by setting Link lyrics & song.

* For details of MUSIC Player, refer to NTT DOCOMO website. For Windows Media Player, contact the manufacturer of your PC.

Downloading Chaku-uta full

- 1 **Display a site ▶ Select Chaku-uta full ▶ "Save" ▶  [Set]**

Saving a WMA file on a PC to a microSD card

For connection to a PC, FOMA USB Cable (optional) is required. For details, refer to "Manual for PC Connection" in the attached CD-ROM.

- 1 **MENU ▶ 6 LifeKit ▶ 2 Ir/iC/PC connection ▶ 5 USB mode setting ▶ 3 MTP mode ▶ "Yes"**
- 2 **With Windows Media Player activated, connect FOMA terminal to a PC using USB cable ▶ Send WMA file from the PC**

Playing the music data

- 1 **MENU ▶ 9 MUSIC ▶ 1 MUSIC Player ▶ 2 All music - 7 Year ▶ Select music data**

The following operations are available on the player screen.

Pausing/Playing :  [PAUSE/PLAY] or 

Adjusting the volume : 

Rewinding/Fast forwarding :  (1 sec. or more)

Jumping to the beginning of the song :

When the song is played for 3 seconds or more, 

To the previous song : When the song is played within 3 seconds, 

To the next song : 

Adding to Quick playlist :  (twice quickly)

Stopping :  (1 sec. or more)



<MUSIC Player screen>

Point

- When downloading music data from Internet websites etc., check the use conditions.
- Music data saved in FOMA terminal or microSD card is allowed for personal use only. When using the music data, take extreme care not to infringe intellectual property rights of a third party such as copyrights etc.

i-appli is a software for i-mode compatible mobile phones, which updates the information of stock price or weather automatically, or provides games that can be played without connecting to network. i-Widget is a convenient function that allows you to easily access frequently-used contents and tools (Widget Appli) such as calculator, clock or stock price information.

Either i-appli or i-Widget can be downloaded from i-mode site or sites provided by IPs (Information Providers). For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- When downloading or displaying i-Widget screen, etc. a packet communication fee may be separately charged.
- When i-Widget screen is displayed, multiple Widget Appli may communicate.
- A packet communication fee for overseas use differs from the one in Japan.
- DOCOMO assumes no responsibility for the information set in Osaifu-Keitai compatible i-appli (IC card).

Downloading

- 1 **Display a site ▶ Select i-appli ▶ After completion of downloading, "Yes" or "No"**

Downloaded i-appli is saved to "My folder" of Software list. When Message i-appli is downloaded, the folders for Message i-appli are automatically created in the folder list.

Starting i-appli

- 1  (1 sec. or more) ▶ **Select a folder ▶ Select i-appli**

Point

Starting Osaifu-Keitai compatible i-appli : [MENU] ▶  1 ▶ Select i-appli
Starting Map Application : [MENU] ▶ 6 7 2 ▶ Select i-appli

Starting i-Widget

- 1  ▶ **Select Widget Appli**



Information

- If you delete stored i-appli, you can download the software from "@Fケータイ応援団 (@ F mobile phone supporters)" site. "@Fケータイ応援団 (@ F mobile phone supporters)" (as of November, 2010)
 iMenu ⇒ メニューリスト (Menu list) ⇒ ケータイ電話メーカー (Mobile phone manufacturer) ⇒ @Fケータイ応援団 (@ F mobile phone supporters) (In Japanese only)
 *The access method may be changed without previous notice.

QR code for site access



Playing i-motion/movie

You can obtain i-motion/movie (images, sound, etc) from sites or websites.

❖ Playable i-motion

Type	Playing action
Standard type (can be saved*)	While the i-motion data is downloaded, it is played. • The downloaded i-motion can be operated in the same way as the i-motion which is played after entire data is downloaded.
	After the entire i-motion data is downloaded, it is played.
Streaming type (cannot be saved)	While the i-motion data is downloaded, it is played. • After the i-motion data is played, it is deleted.

* Some i-motion cannot be saved.

❖ Playable movies

Type	Distribution method	Playing action
Streaming type (cannot be saved)	Real-time distribution	The movie is distributed in real time. • Pausing/Resuming play/Moving play position are unavailable.
	On-demand distribution	Distribute movies that are prepared in advance.

Downloading i-motion/movies

1 Select i-motion/movie while site or website is displayed

Playback starts while data is downloaded or when the download is completed. When a movie ends playback, it returns automatically to the site screen.

Saving i-motion : "Save" ▶ Enter a display name (Up to 36 characters) ▶

Point

- Note that communication of a large amount of data, such as downloading a movie, requires high charges.

Playing moving picture/i-motion

1 ▶ 5 Data Box ▶ 4 i-motion/Movie ▶ Select a folder ▶ Select a moving picture/i-motion

The following operations are available during playback.

Adjusting the volume :

Rewinding/Fast forwarding :

Pausing/Playing/Playing from the beginning (in stop) :

Setting a bookmark : ▶ "Yes"

Stopping :

Information

- You can set whether to automatically play normal type i-motion while downloading or after it is downloaded. 【動画自動再生設定 (Movie auto play)】
- Up to 100 titles of i-motion that is saved to FOMA terminal without replay restriction applied can be saved to playlist at once. 【動画／i モーション (Movie/i-motion) ▶ プレイリスト作成／削除 (Create/delete playlist)】




Steps for using Osaifu-Keitai

You can start Osaifu-Keitai compatible i-appli to credit money or check the balance or usage. You can use the Osaifu-Keitai services compatible with Osaifu-Keitai Web plug-in from a site.

- 1 **Download Osaifu-Keitai compatible i-appli as necessary**
- 2 **Start Osaifu-Keitai compatible i-appli and make the initial settings of the service**
- 3 **Hold  mark over IC card reader**

In this case, starting Osaifu-Keitai compatible i-appli is not required. If IC card is not detected successfully when you hold  mark of the FOMA terminal over IC card reader, try moving the FOMA terminal back, forth and around.

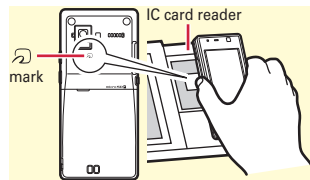

Osaifu-Keitai is equipped with IC card and allows you to pay money or to use coupon, stamp-rally, etc. only by holding FOMA terminal over the IC card reader in stores etc. You can access a site or website, obtain the latest coupon, check credit or payment of electronic money, etc. by holding FOMA terminal over the IC card reader. Various security systems are also equipped. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- The data (including electronic money, points, etc.) in the IC card may be lost or modified because of the malfunction of FOMA terminal (When we take your Osaifu-Keitai for repair etc., as we cannot take it with data remained, you are required to erase the data by yourself). For support such as reissuance, restoration, temporary preservation or transfer of data except transfer by iC transfer service, confirm with Osaifu-Keitai compatible service provider. For important data, be sure to use a service with backup service.
- If the data in the IC card is lost, modified or damaged by any means related to Osaifu-Keitai compatible service such as malfunction or model change, DOCOMO assumes no responsibility for the loss of data.
- If FOMA terminal is stolen or misplaced, immediately contact Osaifu-Keitai compatible service provider for an advice.



Information

- You can disable IC card function. ⇒P33
- When replacing Osaifu-Keitai in such cases as model change or repair, data in an IC card can be transferred collectively to a new Osaifu-Keitai. 【 iC お引っこしサービス (iC transfer service)】
- You can obtain electronic card such as a coupon from IC card reader or site. 【 トルカ (ToruCa)】

Using i-concier

i-concier is a service that a character on the stand-by display (Machi-chara) supports your life like a butler or concierge (in Japanese only). It stores your information such as residential area, schedule, ToruCa, phonebook and delivers you information that suits your area, location or preference at the right time. Also, it can automatically update schedules, ToruCa, etc. stored in FOMA terminal and automatically add useful information such as shop business hours etc. to the phonebook. You can share the stored schedule and images with a group such as friends or family. The stored images can be printed easily.

- i-concier is a charged service requiring subscription (Subscription is required subscription of i-mode).
- If you do not subscribe Data Security Service, when you subscribe i-concier, you subscribe Data Security Service, too.
- A packet communication fee is separately required to receive information except for some information.
- A packet communication fee is separately required to use detail information.
- To use i-concier overseas, International service settings require to be set. For using international roaming services, a packet communication fee is charged for both receiving and viewing detail information (it differs from the charge in Japan).
- Information fee may be additionally required for some contents besides i-concier monthly service fee.
- Automatic updating i-schedule/ToruCa/phonebook, etc. requires a packet communication fee separately.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Receiving information and displaying details

Information is automatically sent. When information is received, the screen shown to the right appears.



1 [MENU] ➤ [i-concier] Select a piece of information

Some pieces of information may have schedule or ToruCa attached or contain a link to a site. To display details, select its icon.



Information

- You can set whether to display information on the stand-by display when i-concier information is received. 【[インフォメーション表示設定 \(Information display\)](#)】

Convenient tools

Scheduler

You can manage schedules with FOMA terminal.


Saving schedule

- 1 **New entry**

The screen shown to the right appears.

- 2 **to switch the screen to set required items**

- 3 **[Save]**

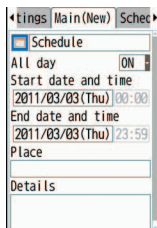

<Schedule new entry screen>

Point

Saving quickly from the stand-by display (Quick schedule) : On the stand-by display, enter the date to save a schedule (for 10:00 on March 3, enter "03031000") Save the schedule

Checking a schedule

- 1 **Select the date on which a schedule is saved** **Select the schedule**

Information

- Two types of schedulers are available : "Normal" in which i-schedule downloaded from i-concier, birthdays saved in the phonebook, etc. can be displayed and "Classic" in which you can scroll and enlarge the calendar. スケジュール帳 (Scheduler) > スケジュール帳表示設定 (Scheduler view type)

Convenient tools

Alarm clock


Alarm clock sounds at a specified time. You can set 1Seg to start after the alarm sounds.

- 1 **(1 sec. or more)** **Select a number**

The screen shown to the right appears.

- 2 **to switch the screen to set required items**

- 3 **[Set]**

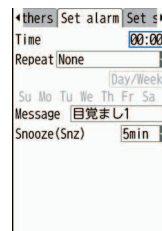

<Alarm setting screen>

Point

- In "Snooze (Snz)", set the intervals, at which the alarm sounds for 30 minutes.
- When "Activate 1Seg" on 1Seg alarm screen is set to "Yes", 1Seg starts when the alarm is turned off or stopped (1Seg alarm clock), and ends at the time specified in "Time out".
- While alarm clock is sounding, it stops or starts snooze with no operations for approximately 1 minute, by pressing a key other than , , and , rotating Kurukuru-key, or performing double-tap. Press to end the alarm clock.

Information

- You can set FOMA terminal so that even when it is turned off, it can be turned on when the alarm sounds. アラーム自動電源ON設定 (Alarm auto power ON)

Bar code reader

You can read and use information of JAN code, QR code, NW7 code, CODE39 code and CODE128 code.

1 [MENU] ▶ **6** LifeKit ▶ **1** Bar code reader

2 Move Out-camera over the code

When scanning is completed, a confirmation sound is heard and the scanned data appears. On the screen after scanning, you can copy or save the data from the submenu. For some data, you can save certain types of data to phonebook, or create mails, or connect to sites or websites.



<Scanning screen>

Point

- Press [⇐] to switch to Macro OFF before scanning large size codes. The readability of code may be raised by pressing [Q] to set zoom to OFF.
- Scratches, dirt, damages, low print quality and the strong reflection of light may disable code reading.
- If the code is not scanned well, try changing the distance between the code and camera, the angle or direction of camera, or using auto focus.
- To read CODE128 code, downloading compatible i-appli is required.

Dictionaries


You can search word meanings, spelling of English word, etc. with Dictionaries.

1 [MENU] ▶ **7** Accessory ▶ **5** Dictionaries

2 **1** Jpn Dic (Gakken Mobile Jpn Dic) - **3** EJ Dic (Gakken Mobile EJ Dic)

3 Enter a word (up to 20 two-byte (40 one-byte))

4 Select a word from the search result list

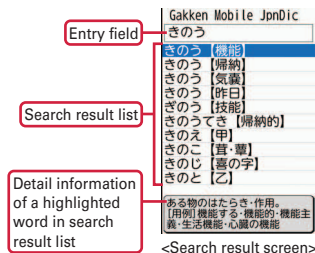

<Search result screen>

Point

- To search "Today's trivia" or "Today in history", press **4** or **5** in Step 2.

Using search history : [MENU] ▶ **7** **5** ▶ **1** - **3** ▶ [MENU] ▶ **1** ▶ Select a word

Using microSD card

You can save still images/moving pictures or melodies, or back up data of phonebook, schedule, etc. in microSD card.

- F-05C supports microSD card of up to 2 Gbytes, and microSDHC card of up to 16 Gbytes (as of November, 2010). For information about latest operation check results, refer to the following sites. Note that information described is the result of operation confirmation and does not guarantee all operations.

From i-mode : iMenu ⇒ メニューリスト
(Menu list) ⇒ ケータイ電話メーカー
(Mobile phone manufacturer) ⇒ メモリーカード対応情報 (Memory card support information) (In Japanese only)

QR code for site access



From PC : FMWORLD (<http://www.fmworld.net/>) ⇒ 携帯電話 (Mobile phone) ⇒ microSD対応状況、microSDHC対応状況 (microSD/microSDHC support report) (In Japanese only)


* The access method may be changed without previous notice.

❖ Notes on using microSD card

- The data saved to microSD card/microSDHC card from another device such as a PC may not be displayed or played in FOMA terminal. Also, the data saved to microSD card/microSDHC card from FOMA terminal may not be displayed or played in another device.

Installing

- 1 Turn FOMA terminal OFF and remove the battery pack
- 2 Insert the microSD card slowly into the slot with metal contacts side down (as shown right), and insert it further until it clicks

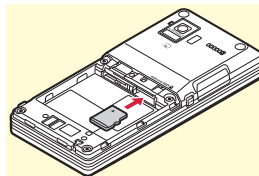

* To remove the microSD card, push it lightly to pop it out, and then pull it out.

Formatting

Format microSD card with FOMA terminal before using.

- 1 [MENU] ▶ [6] LifeKit ▶ [3] microSD ▶ [Camera icon] [Format] ▶ "Regular format" ▶ Authenticate ▶ "Yes"

Point

- You can minimize processing to format a formatted microSD card by selecting "Quick format". Formatting microSD card deletes all the data in the card.

Quick format : Format only data management area. It reduces formatting time by executing minimum processing.

Regular format : Format both data management area and data area.

Exchanging data between the FOMA terminal and microSD card

Save important data in FOMA terminal to microSD card.

Moving/Copying to microSD card

<Example> Moving/Copying one item of My Document

- 1 **MENU** ▶ **5** **Data Box** ▶ **6** **My Document** ▶ **Select a folder**
- 2 **Move the cursor to data** ▶ **MENU** ▶ **3** **Move/Copy** ▶ **4** **Move to microSD** **or** **5** **Copy to microSD** ▶ **1** **One item** **or** **1** **One item** ▶ "Yes"

Point

- You cannot move or copy the data that is inhibited to output from FOMA terminal.

Moving/Copying to FOMA terminal

<Example> Moving/Copying one item of My Document

- 1 **MENU** ▶ **6** **LifeKit** ▶ **3** **microSD** ▶ **3** **My Document** ▶ **Select a folder**
- 2 **Move the cursor to data** ▶ **MENU** ▶ **3** **Move/Copy** ▶ **1** **Move to phone** **or** **2** **Copy to phone** ▶ **1** **One item** **or** **1** **One item** ▶ "Yes"

Information

- The FOMA terminal provides menu for checking the memory status of microSD card or synchronizing the data which was changed, added or deleted in another device correctly. 【microSDカード (microSD card) ▶ 使用状況 | 情報更新 (Memory Status/Sync data info)】
- You can organize still images into album regardless of saved location, and view them. 【マイコレクション (My collection)】

Displaying data in microSD card

- 1 **MENU** ▶ **6** **LifeKit** ▶ **3** **microSD** ▶ **1** **Multimedia** - **8** **Other** ▶ **Select a folder** ▶ **Select data**

Backing up at once

You can back up Phonebook, Schedule, mail, Notepad, Bookmark and setting item data all at once in microSD card. Data is overwritten for the second-time backup or later.

- 1 **MENU** ▶ **6** **LifeKit** ▶ **3** **microSD** ▶ **7** **Backup/Restore** ▶ **1** **Backup to microSD**

- 2 "Yes" ▶ **Authenticate**

When phonebook is not saved, omit Step 3.


- 3 "Yes" **or** "No"

Point

- Some restrictions apply, such as moving pictures saved in phonebook or the part of the attachment files in excess of 100 Kbytes are not backed up.
- Select "2 Restore to phone" at the end of Step 1 to delete the latest data in FOMA terminal and overwrite save it.

Infrared communication/iC transmission

You can send/receive data to/from devices such as FOMA terminal supporting infrared communication function or iC transmission function. Check the locations of the other party's infrared port and  mark, and refer to the following images to establish connection.

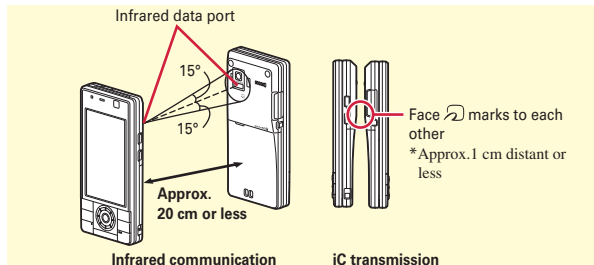

Point

- When sending/receiving all data items, the sender and receiver need to determine a 4-digit authentication password in advance. For infrared communication, the receiver's terminal must be ready for communication first.
- When sending/receiving all data items, the data saved in the receiver is deleted, and the newly received data is saved. However, some data (data in "Preinstalled" folder, etc) may not be deleted, or the saving locations, folder names or the orders of data may be different from those in the sender.
- While charging, sending data by iC transmission is unavailable.

Sending a phonebook entry via infrared communication/iC transmission

- 1 Move the cursor to a phonebook entry  
Send via Ir/iC  Send Ir data   iC transmission 

Sending all items via infrared communication/iC transmission

- 1   LifeKit  Ir/iC/PC connection  Send all Ir data   Send all via iC   Enter an authentication password 

Receiving an item via infrared communication

- 1   LifeKit  Ir/iC/PC connection 
Receive Ir data  Receive  Send data from a sender 

Receiving an item via iC transmission

- 1 Send data item from a sender  After receiving, "Yes"

Receiving all items via infrared communication

- 1   LifeKit  Ir/iC/PC connection 
Receive Ir data  Receive all  Enter an authentication password  Send data from a sender 

Receiving all items via iC transmission

- 1 Send data from a sender   Enter an authentication password  After receiving, "Yes"

Connecting to a PC

You can connect FOMA terminal to a PC to transfer WMA files or images in the microSD card.

Also, connecting to the Internet for data communication is available.

- FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional) is required.

USB mode setting

From a PC, you can operate data in a microSD card in FOMA terminal.

1 **MENU** ▶ **6** **LifeKit** ▶ **2** **Ir/iC/PC connection** ▶ **5** **USB mode setting** ▶ **Select a mode**

Communication mode : Set for packet communication, 64K data communication or data transfer by connecting to a PC.

microSD mode : Set for recognizing the microSD card in FOMA terminal as a drive and operating the data by PC operation.

MTP mode : Set for music data transfer to microSD card using Windows Media Player.

2 **"Yes"**

DOCOMO keitai datalink

DOCOMO keitai datalink is a software for backing up phonebook, mail and other data in your mobile phone to a PC and editing them. It can be downloaded from NTT DOCOMO website. For details and downloading, refer to the following website. You can also access to the site below from the attached CD-ROM.

<http://datalink.nttdocomo.co.jp/>

For details including downloading procedures, data that can be transferred, operating environments, installing procedures and operations, refer to the website above. For operations after installation, see Help in the software.

Point

- To perform data transfer using data communication or DOCOMO keitai datalink, installation of FOMA communication configuration file from the attached CD-ROM. For details, refer to "Manual for PC Connection" in the attached CD-ROM.
- When USB mode is set to "microSD mode" or "MTP mode", installation of FOMA communication configuration file is not necessary.

Check for the necessity of software update first, and update the software if necessary. ⇒P73

When checking the following items not to improve the state, contact "Repairs" on the last page of this manual (in Japanese only) or DOCOMO-specified repair office.

❖ Power supply and charging

● FOMA terminal cannot be turned ON.

- Is the battery pack installed correctly?
- Is the battery exhausted?

● FOMA terminal cannot be charged (the charging light does not turn on).

- Is the battery pack installed correctly?
- Are the adapter and FOMA terminal set correctly?
- Is the AC adapter connector securely inserted to FOMA terminal or to Desktop holder (Optional) when you use AC adapter (Optional)?
- Is AC adapters power plug or cigarette lighter plug inserted to the outlet or cigarette lighter socket correctly?
- Is the charging jack of FOMA terminal dirty when you use desktop holder? If it is dirty, clean with a dry cotton swab etc.
- If you call, perform communication or operate other function for a long time while charging, temperature of FOMA terminal rises and the light may turn off. Charging is stopped in high temperature state due to safety. Wait until the temperature of FOMA terminal drops after using the terminal and charge again.

❖ Terminal operation

● Turning the power off or restarting automatically happens.

If the jack of battery pack is dirty, the contact may become poor and the power may shut OFF. If it is dirty, clean with a dry cotton swab etc.

● No operations are performed even by keypad operation.

Have you activated All lock, Omakase Lock, Operation lock, or Security lock?

● The operation time provided by the battery pack is short.

- Is your terminal left for a long time under the state of out of service area? Out of service area, more power is consumed to search available radio waves.
- The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.
- The battery pack is a consumable part. Each time it is charged, time available with each charging reduces. Even the full charge state, when the operation time is too short, purchase a new battery pack of the specified type.

● The UIM is not recognized.

- Is UIM installed in the right direction?
- Is UIM (blue) inserted?

● FOMA terminal etc. become hot while operating/charging.

While operating or charging, or if you use i-appli, videophone call, 1Seg watching, etc. for a long time while charging the battery, FOMA terminal, battery pack and adapter may become hot. There is no problem about safety and continue to use it.

● Clock is not correct.

In the state of turning on the power over a long period of time, the clock time may become incorrect. Set Auto time adjust of Date and time setting to "ON" and turn off/on the power in a place with strong radio wave conditions.

❖ Calls

● Calls are not connected [Even when moving, "圏外 (out of service area)" does not disappear or although radio waves are enough, making/receiving calls is unavailable].

- Turn the power off and on, or remove and attach battery pack or UIM.
- Even when the signal meter on your FOMA terminal indicates there are strong radio waves, due to the type of radio waves, making/receiving calls may be unavailable. Move to call again.
- Is Specified caller, Anonymous caller or Unregistered caller set?
- Due to the crossing of radio waves, at the crowded public places, calls/emails are crossed and the connection status may not be good. In this case, "Please wait for a while" appears and the caller hears a busy tone. Move to other place or call again at other time.

● Calls cannot be made using the keypads.

Have you activated All lock, Omakase Lock, Self mode, Keypad dial lock, Security lock, or Call/Mail in Function lock of Kid-safe mode?

❖ Osaifu-Keitai

● Osaifu-Keitai function is unavailable.

- Do you hold  mark of FOMA terminal over IC card reader?
- When removing the battery pack, IC card functions are unavailable regardless of the IC card lock settings.
- Have you activated Omakase Lock or IC card lock?

Warranty and After-Sales Service

Warranty

- FOMA terminal is provided with a written warranty. Make sure that you receive it. Check the written contents and items such as "販売店名・お買い上げ日 (Shop name/date of purchase)" and keep it in a safe place. If it does not contain the necessary information, immediately contact the shop where you bought it. The warranty is valid for a period of one year from the date of purchase.
- This product and all accessories are subject to change, in part or whole, for the sake of improvement without prior notice.

After-Sales Service

❖ When problems occur

Before requesting repair, read the section on "Troubleshooting" in this manual or in "使いかたガイド (Guide)" installed in FOMA terminal (in Japanese only). If the problem still persists, contact "Repairs" on the last page of this manual (in Japanese only).

❖ If the result of inquiries indicates that a repair is required

Take your FOMA terminal to DOCOMO-specified repair office. Be sure to check the opening hours of the office before you go. Note that, repair may take longer time depending on the state of damage.

In the warranty period

- FOMA terminal is repaired at no charge subject to the conditions of the warranty.
- The warranty must be presented to receive warranty service. The subscriber is charged for the repair of items not covered in the warranty or repairs of defects resulting from misuse (damage of the liquid crystal or connector, etc), accident, neglect, etc. even during the warranty period.
- The subscriber is charged even during the warranty period for the repair of failures caused by the use of devices or consumable items that are not DOCOMO-specified.

Repairs may not be possible in the following cases.

- When judged as malfunction due to moisture at the repair office (e.g. when detected in a moisture seal reaction)
- When corrosion due to moisture, condensation, perspiration, etc. is detected, or if any of the internal boards are damaged or deformed (repairs may not be possible if external connection jack, earphone/microphone jack or liquid crystal panel is damaged, or the terminal outer case is lifted)
- * Even in case that a repair is possible, since those conditions are outside the range of the warranty, a repair is charged.

After expiration of the warranty

All repairs that are requested are charged.

Replacement parts

Replacement parts (parts required to maintain the product functions) are basically kept in stock for at least 6 years after termination of production. However, repair may not be possible due to lack of repair parts etc.

❖ Notes

- Do not modify FOMA terminal or its accessories.
 - Repair may be refused depending on the nature of modification. The following cases may be regarded as modifications.
 - A sticker etc. is put on the LCD or keypad part
 - FOMA terminal is embellished with adhesive material etc.
 - Exteriors are replaced with other than DOCOMO's genuine parts
 - Repair of failures or damage caused by modification is charged even during the warranty period.
- Do not remove any inscription stickers attached to FOMA terminal. If confirmation of the inscription sticker's content is impossible, determination of whether specific technical standards are satisfied cannot be made. Therefore, repair may be refused.
- Function settings and information such as total calls may be cleared (reset) by malfunctions, repair or other handling of FOMA terminal. Should that happen, set up the functions again.
- Magnetic components are used in the earpiece, speaker, etc. of FOMA terminal. Do not allow cash cards or other devices that are vulnerable to magnetism to come into contact with the phone.
- If the FOMA terminal gets wet or moist, immediately turn the power off, remove the battery pack, and bring the terminal to a repair office as soon as possible. However, repair may not be possible depending on the condition of FOMA terminal.

Support

i-mode fault diagnosis site

Using your FOMA terminal, you can check whether sending/receiving of messages and downloading of images and melodies are normally performed. When FOMA terminal is assumed to have malfunctions as the result of the diagnosis, contact "Repairs" on the last page of this manual (in Japanese only).

Accessing to "i モード故障診断サイト (i-mode fault diagnosis site)"

i-mode site : iMenu⇒お知らせ (Notice)⇒サポート情報 (Support information)⇒お問い合わせ (Inquiries)⇒故障・電波状況お問い合わせ先 (Checking malfunction/radio wave condition)⇒i モード故障診断 (i-mode fault diagnosis site) (In Japanese only)

QR code for site
access



- The access method may be changed without previous notice.
- Accessing from overseas is charged.

Updating software

This function allows you to connect the network and check if software in the FOMA terminal needs to be updated, and if software update is necessary, download a part of software using packet communication and update the software.

Software update information is posted in "お客様サポート (user support)" on NTT DOCOMO website or iMenu (in Japanese only).

Software may be updated in 3 methods: "Auto-update", "Immediate update" and "Reserved update".

- * Software update can be done even when various data, such as a phonebook registered in FOMA terminal, camera images, downloaded data, are remaining; note that data protection sometimes cannot be secured according to the conditions of your FOMA terminal (such as malfunction, damage, or water leak). DOCOMO recommends backing up necessary data. However some data such as downloaded data may not be backed up.

❖ When updating software

- Do not remove the battery pack while updating software. The update may fail.
- Software update should be done with battery fully charged.
- Software update (downloading or rewriting) may take time.
- Making/Receiving calls, communications functions and other functions are disabled during software update (Only incoming voice calls can be answered while downloading.).
- It is recommended that software update be executed in good radio wave conditions with three bars of the antenna icon displayed and the terminal not moved. If radio wave conditions become weaker during software download or the download is stopped, retry software update in a place with strong radio wave conditions.

- When updating software, your private information concerning FOMA terminal (model, serial number, etc.) is automatically sent to the server (the server for software update managed by DOCOMO). DOCOMO does not use the sent information for purposes except software update.
- When software update has failed, "Rewrite failed" appears and all operation becomes unavailable. In that case, please bring FOMA terminal to DOCOMO-specified repair office.

Set auto-update (Default : Auto-update)

Select automatic update of software or alert notification of the necessity of update.

- 1 ▶ 8 ▶ 7 ▶ 4 ▶ **Authenticate** ▶ **"Set auto-update"** ▶ **Set required items** ▶ **[Set]**

When "Auto-update" is set and update is required, the update file is automatically downloaded, and (rewrite notice icon) appears on the stand-by display. Select the icon to confirm or change the start time of update.

When "Only notification" is set and update is required, (update notification icon) appears.

Immediate update

Select  (update notification icon) on the stand-by display or an item on the menu.

Immediate update may not be available when the server is busy.

<Example> Selecting the notification icon to update

- 1  Select  (update notification icon) ▶ "Yes" ▶ Authenticate

- 2 "Now update" ▶ After about 5 seconds, download starts automatically

Canceling download : On the downloading screen, 

When the server is busy, a selection screen prompts you to reserve the update time or cancel update.

- 3 Download is completed and after about 5 seconds, software update starts automatically ▶ When update is completed, restart is automatically made ▶ "OK"

Software Update
Update is needed.



<Software update screen>

Reserved update

When download takes time, or the server is busy, reserve the update time.

<Example> Selecting from displayed options

- 1 On Software Update screen, "Reserve"

Available dates for reservation are shown by the time of the server.

- 2 Select preferred day and time ▶ "Yes" ▶ "OK"

Selecting "Others" allows you to select other date and time options than displayed ones. When setting is completed,  (reservation icon) appears on the stand-by display.

Software Update Select your preferred day and time.	
03/03 (Thu)	10:00
03/03 (Thu)	11:57
03/03 (Thu)	12:07
03/03 (Thu)	13:56
03/03 (Thu)	14:41
03/03 (Thu)	15:39
03/03 (Thu)	16:03
03/03 (Thu)	17:49
03/03 (Thu)	18:53
03/03 (Thu)	19:48
03/03 (Thu)	20:03
Others	

<Preferred date and time selection screen>

Checking software update reservation

You can check or change the reserved date and time.

- 1  ▶ 8 Setting & NWservices ▶ 7 Clock & Other ▶ 4 Software update ▶ Authenticate ▶ "Update"

A reservation confirmation screen appears.

- 2 Check the reservation ▶ "OK"

Point

Changing the reservation : On a reservation confirmation screen, "Change"
▶ Select a date ▶ Select a time period ▶ Select a date and time ▶ "Yes" ▶ "OK"

Canceling the reservation : On a reservation confirmation screen, "Cancel"
▶ "Yes" ▶ "OK"

Scanning function (Security Scan)

For the data or programs that are imported to FOMA terminal, this function detects data and deletes data or inhibits activation of applications that may cause troubles.

- The Scanning function provides a certain countermeasure against invasion of data which causes some trouble in the mobile phone, when viewing website, receiving messages, etc. Note that, if pattern definition corresponding to specific troubles has not been downloaded to the mobile phone or such pattern definition does not exist, this function cannot prevent those troubles from occurring.
- Different pattern definition is used for different FOMA terminal models. Note that DOCOMO may stop distribution of pattern definition for models that have been on the market for 3 years or more.

● Update pattern definition

 
 
Update pattern definition first, then keep the pattern definition up-to-date.

Set auto-update

You can set FOMA terminal so that pattern definitions can be automatically updated.

- 1 **MENU** ▶ 8 **Settings & NWservices** ▶ 4 **Security & Locks** ▶ 7 **Scanning function** ▶ 2 **Set auto-update** ▶ "Enable" ▶ "Yes" ▶ "Yes" ▶ "OK"

When the Auto-updating pattern definitions is completed,  or  appears on the stand-by display.

Warning level	Scan result screen	Actions
0		"OK" : Continue processing of the started application
1		"Yes" : Stop processing of the application that may cause troubles "No" : Continue processing of the started application
2		"OK" : Stop processing of the application that may cause troubles
3		"Yes" : Delete data that may cause troubles "No" : Stop processing of the application that may cause troubles
4		"OK" : Delete data that may cause troubles

* Selecting "Detail" on each screen displays a list of names of the detected problem elements. When 6 or more problem elements have been detected, the names of the 6th and subsequent problem names are omitted.

Introduction of options and related devices

Combining FOMA terminal with optional accessories supports a wide variety of uses from personal use to business use. Some products are unavailable depending on the area. For details, contact a sales outlet such as docomo Shop. For details about the optional devices, refer to the instruction manual for each device.

- FOMA AC Adapter 01/02^{*1}
- FOMA DC Adapter 01/02
- FOMA Dry Battery Adapter 01
- In-Car Hands-Free Kit 01^{*2}
- FOMA In-Car Hands-Free Cable 01
- Battery pack F19
- In-Car Holder 01
- Desktop Holder F33
- Back Cover F57
- Carry Case L 01
- Carry Case 02
- FOMA USB Cable^{*3}
- FOMA USB Cable with Charge Function 02^{*3}
- FOMA Portable Charging Adapter 01/02
- Flat-plug Earphone/Microphone with Switch P01^{*4}/P02^{*4}
- Flat-plug Stereo Earphone Set P01^{*4}
- Earphone Plug Adapter 01
- Earphone Plug Adapter P001^{*4}
- Earphone/Microphone with Switch P001^{*5}/P002^{*5}
- Stereo Earphone Set P001^{*5}
- Earphone/Microphone 01
- Stereo Earphone Set 01

- Remote controller with microphone F01^{*4}
- Earphone Terminal P001^{*5}
- Earphone Plug Adapter for External connector terminal 01
- FOMA AC Adapter 01 for Global use^{*1}
- FOMA Indoor Booster Antenna^{*6}
- FOMA Indoor Booster Antenna (Stand Type)^{*6}
- Bone conduction microphone/receiver 01^{*4}
- Touch pen F01

^{*1} When using FOMA terminal overseas, use the adapter plug that is suitable for use in your travel destination. Also, do not charge the battery with a transformer for overseas travel.

^{*2} FOMA In-Car Hands-Free Cable 01 is required to use/charge F-05C.

^{*3} If you use USB HUB, operations may not be performed correctly.

^{*4} Earphone Plug Adapter for External connector terminal 01 is required to connect to F-05C.

^{*5} Earphone Plug Adapter for External connector terminal 01 and Earphone Plug Adapter P001 are required to connect to F-05C.

^{*6} Use this only in Japan.

Menu list

- Menu list for the case Select startup menu is set to "Basic menu" is described.
- Settings of menus indicated in **red** can be restored to the default in Reset (including the menu whose partial sub content menu will be reset to the default).

■ Mail

Inbox	
Compose message	
Compose Decome-Anime	
Unsent messages	
Outbox	
Check new message	
SMS/Area Mail	SMS
	Early warning "Area Mail" setting
Receive option	
Mail settings	Alert settings
	Sort method
	Signature
	Reply setting
	Auto-reply
	Mail group
	Blog/SNS setting
	Display settings
	Auto save setting when editing
	Check msg. option
Template	Decome
	Decome-Anime

■ i-mode

iMenu Search
Bookmark
Screen memo
Last URL

Enter URL	Enter URL
	URL enter history
i-Channel	i-Channel list
	i-Channel setting
	Reset i-Channel
i-mode settings	i-modeBrowserSetting
	FullBrowser Setting
	Common Setting
	Check i-mode setting
	Reset i-mode setting

Access shortcuts
RSS reader
Full Browser Home
Search engine

■ i-appli

Software list	
i-appli call log	
i-appli settings	Sort software
	Auto-start
	Software info disp.
	Display light time
	Brightness
	Vibrate effect
	Sound effect volume
	i-Widget settings
	i-appli call DL set

Display history

i-appli shortcuts

About i-appli

■ Phonebook & Logs

Phonebook

Phonebook new entry
Add group
Phonebook (UIM) new entry
Received calls
Redial

Record msg.&Voice memo	Record message
	Recorded messages
	Record voice memo
	Voice memos
Mail logs	Sent msg. log
	Received msg. log

User information

■ Data Box

My Picture
MUSIC
Music&Video Channel
i-motion/Movie
Melody
My Document
Kisekai Tool
Machi-chara
Chara-den

My collection	
1Seg	
LifeKit	
Bar code reader	
IriC/PC connection	Receive Ir data
	Send all Ir data
	Send all via iC
	Data exchange settings USB mode setting
microSD	
Camera	Still camera
	Movie camera
Graffiti picture	
Sound recorder	
Data Security	Data check/How to update etc.
	Exchanging history
	Send img in Phonebook
	Backup phonebooks etc./Update
	Backup settings/Update
	Backup images
Map	Show map
	Map appli
	Select Map
Pedometer/ACT monitor	Steps/Activity/Calories info
	Set Pedometer/Activity monitor
1Seg	Activate 1Seg
	Program guide
	1Seg image/video
	Set/Timer list
	Recording result
	TVlink
	Channel list
	User setting

Guide	
Mirror	
Accessory	
Scheduler	
Notepad	
Alarm clock	
Calculator	
Dictionaries	Jpn Dic (Gakken Mobile Jpn Dic)
	JE Dic (Gakken Mobile JE Dic)
	EJ Dic (Gakken Mobile EJ Dic)
	Today's trivia
	Today in history
Countdown timer	
High-pitched alarm	
Fake call	Activate
	Alert&Time settings
Handy light	
Settings & NWservices	
Alerts & Sounds	Ring alerts & Sounds
	Adjust volume
	Vibrate alert/effect
	Silent mode
	Ring alert delay
	Stereo sound effect
	BGM play

Display	Stand-by display
	Menu preference
	Color & Action image
	Display & Key light
	Light alert
	Font & Language
	Display Machi-chara
	eco mode
	Privacy view level
Kisekai/Themes	Kisekai Tool
	Style theme
	Timed theme
Security & Locks	Locks
	Privacy mode
	Kid-safe mode
	Receive display option
	UIM
	Change security code
	Scanning function
	Password manager
Call & Answer	microSD password setting
	Sound & Image
	Anonymous caller
	Any key answer
	Headset
	Reject/Accept call
	Make/Receive call
	Call session
	Self mode
Videophone	V.phone dialing img.
	Videophone alert
	Operation
	Data session arv. act
	Image setting
	External device
	Notify switchable mode

Clock & Other	Slide and edit
	Clock
	Text input
	Software update
	Info & Reset
	Side multi key shortcut
	Motion sensor
	Femtocell setting
	Phone refresh
	Touch panel correction
	Kurukuru-key setting

NW Services	Voice Mail
	Call waiting/forward
	Chaku-moji
	Caller ID
	OFFICEED
	2in1 setting
	Melody Call
	Other
	Overseas network search
	Overseas setting
	Overseas service

■ MUSIC

MUSIC Player
Music&Video Channel

■ Osaifu-Keitai

IC card content	
DCMX	
ToruCa content	
IC card settings	Lock/Unlock
	Lock preference
	Timed lock
	Programed activation
	IC lock(power-off)

ToruCa setting	ToruCa alert
	ToruCa from IC card
	ToruCa auto-read
	ToruCa sort rule
	ToruCa from 1Seg

Check IC owner
Change IC owner
Search by i-mode

■ User information

User information

■ i-concier

i-concier

Main specifications

■ Phone

Product name		F-05C
Size		Approx. 111 mm (H)×50 mm (W)×14.9 mm (T) (thickest part : Approx. 17.1 mm)
Weight		Approx. 128 g (with battery)
Continuous stand-by time ^{*1, 2, 3}	FOMA/3G	Stationary : Approx. 550 H Moving : Approx. 380 H
Continuous call time ^{*2, 3, 4}	FOMA/3G	Voice call : Approx. 220 min. Videophone call : Approx. 100 min.
1Seg watching time ^{*2, 5}		Approx. 240 min. (1Seg eco mode : Approx. 320 min.)
Charging time ^{*6}		AC adapter : Approx. 140 min. DC adapter : Approx. 140 min.
Display	Type	TFT 262,144 colors
	Size	Approx. 3.0 inches
	Number of pixels	409,920 pixels (480 dots×854 dots)
Image pickup device	Type	Out-camera : CMOS In-camera : CMOS
	Size	Out-camera : 1/4.0 inches In-camera : 1/6.0 inches
	Number of effective pixels	Out-camera : Approx. 5,100,000 pixels In-camera : Approx. 1,300,000 pixels
Camera section	Number of recording pixels (Max.)	Out-camera : Approx. 5,000,000 pixels In-camera : Approx. 1,300,000 pixels
	Zoom (digital)	Out-camera : Up to approx. 16.0 x In-camera : Up to approx. 2.0 x

Recording section	Savable still images ^{*7}	Up to approx. 700 images (default)
	Continuous shooting of still images	2-9
	File format for still image	JPEG
	Moving picture shooting time ^{*8}	Up to approx. 57 min. (save to phone/default) Up to approx. 180 min. (save to 2GB microSD card)
	Moving picture file format	MP4
	1Seg recording time	Up to approx. 18 min. (save to phone/default) Up to approx. 640 min. (save to 2GB microSD card)
Playing music	Continuous play time	i-motion : Approx. 1,140 min. ^{*9} Chaku-uta full : Approx. 4,761 min. ^{*9, 10} WMA file : Approx. 4,467 min. ^{*10} Music&Video Channel (sound) : Approx. 4,761 min. ^{*10} Music&Video Channel (moving picture) : Approx. 299 min.
Recording size	Chaku-uta/Chaku-uta full	Approx. 62 MB

^{*1} Continuous stand-by time indicates the estimated time when FOMA terminal is closed and able to receive radio waves normally. Stationary continuous stand-by time indicates the average utilization time FOMA terminal is closed and able to receive radio waves normally remains stationary. Moving continuous stand-by time indicates the average utilization time when FOMA terminal is closed and able to receive radio waves normally with a combination of "stationary", "moving", and "out of service area" status.

^{*2} Call, communication or stand-by time may be reduced to about half, or 1Seg watching time may be reduced due to battery pack charging condition, function settings, operating environment such as ambient temperature, radio wave conditions in the area of use (the radio waves are weak or absent), etc.

- *3 The call, communication or stand-by times are reduced by making i-mode communications, creating i-mode mail, activating downloaded i-appli, making i-appli stand-by display settings, downloading or playing Music&Video Channel program, playing tune with MUSIC Player, activating or recording 1Seg, etc.
- *4 Continuous call time indicates the approximate time that the phone can send or receive radio waves normally.
- *5 1Seg watching time indicates the approximate watching time with receiving radio waves normally and using Stereo Earphone Set 01 (optional).
- *6 Charging time indicates the estimated time for charging an empty battery with FOMA terminal turned OFF. Charging with FOMA terminal turned ON or charging in lower temperature require longer time.
- *7 The number of savable still images is based on Image size "QVGA(240×320)", Quality "Standard" and file size 25 Kbytes.
- *8 The moving picture shooting time means allowable time for one movie. The number is based on Image size "QCIF(176×144)" and Quality "STD(Standard)". Varies depending on the moving picture to be recorded.
- *9 AAC format files.
- *10 Background playing is available.

■ Battery Pack

Quality	Battery pack F19
Battery used	Li-ion battery
Nominal voltage	3.7V
Nominal capacity	820 mAh

Savable/Recordable/Protectable number

Type	Savable/Recordable number	Protectable number
Phonebook ^{*1}	Up to 1,000	—
UIM phonebook	Up to 50	—
Kisekai Tool ^{*1}	Up to 50	—
Mail ^{*1, 2}	Received messages	Up to 2,500
	Sent messages	Up to 500
	Unsent messages	Up to 200
Area Mail	Up to 30	Up to 15
Bookmark ^{*3}	Up to 200	—
Screen memo ^{*1, 3}	Up to 100	Up to 100
Music ^{*1}	Chaku-uta full	Up to 100
	Uta-moji Lyrics	Up to 100
i-appli ^{*1, 4}	Up to 100	—
Images ^{*1}	Up to 3,000	—
Moving picture/i-motion/sound recorded with Sound recorder ^{*1}	Up to 200	—
Melodies ^{*1}	Up to 500	—
1Seg ^{*1}	Video	Up to 10
	Images	Up to 100
Scheduler ^{*5}	Up to 2,600	—
Notepad	Up to 50	—

*1 Depending on the size of data or usage status of common memory space, the actual number of items that can be saved and recorded may be fewer.

*2 The total number of i-mode mail and SMS.

*3 The total number of i-mode and Full Browser.

*4 Total number of i-appli and Message i-appli. Up to 5 items of Message i-appli can be saved.

*5 Total number of schedules, schedules in i-schedule and watching/recording reservation of 1Seg. Up to 100 items of watching/recording reservation of 1Seg in total can be saved.

Specific absorption rate (SAR) of mobile phone

This model F-05C mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves (^{(*)1}) and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.623 W/kg. There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device.

This mobile phone can be used in positions other than against your ear. This mobile phone satisfies the international guidelines when used with a carrying case or a wearable accessory approved by NTT DOCOMO, INC. (^{(*)2}) In case you are not using the approved accessory, please use a product that does not contain any metals, and one that positions the mobile phone at least 1.5 cm away from your body. The World Health Organization has stated that present scientific information does not indicate that there are harmful effects attributed to the use of mobile devices. They recommend that if you are worried about your exposure then you can limit your usage or simply use a hands-free kit to keep the mobile device away from the head and body.

Please refer to the WHO website if you would like more detailed information.
http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website: <http://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses Website: <http://www.arib-emf.org/index02.html> (in Japanese only)

NTT DOCOMO, INC. Website: <http://www.nttdocomo.co.jp/english/product/sar/>

FUJITSU LIMITED Website: <http://www.fmworld.net/product/phone/sar/>

- *1 Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
- *2 Regarding the method of measuring SAR when using mobile phones in positions other than against the ear, international standards (IEC62209-2) were set in March of 2010. On the other hand, technical regulation is currently being deliberated on by national council. (As of November, 2010)

Declaration of Conformity

● ● ● The product "F-05C" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on <http://www.fmworld.net/product/phone/doc/>. ● ● ●

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR^{*} limits^{**} for exposure to radio-frequency(RF) energy, which SAR^{*} value, when tested for compliance against the standard was 0.508W/Kg. While there may be differences between the SAR^{*} levels of various phones and at various positions, they all meet^{***} the EU requirements for RF exposure.

* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

- ** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/Kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- *** Tests for SAR have been conducted using standard operation positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Federal Communications Commission (FCC) Notice

- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :
 - ① this device may not cause harmful interference, and
 - ② this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made in or to the radio phone, not expressly approved by the manufacturer, will void the user's authority to operate the equipment.

FCC RF Exposure Information

This model phone meets the U.S. Government's requirements for exposure to radio waves.

This model phone contains a radio transmitter and receiver. This model phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy as set by the FCC of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions as accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output level of the phone.

Before a phone model is available for sale to the public, it must be tested and certified to prove to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC, when tested for use at the ear, is 0.380W/kg, and when worn on the body, is 0.485W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirements.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Equipment Authorization Search section at <http://www.fcc.gov/oet/ea/fccid/> (please search on FCC ID VQK-F05C).

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and which positions the handset at a minimum distance of 1.5 cm from the body.

* In the United States, the SAR limit for wireless mobile phones used by the general public is 1.6 Watts/kg (W/kg), averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Safety Information

AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers flight mode or similar feature consult airline staff as to whether it can be used on board.

DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pace maker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and does not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices :

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration Regulations

This product and its accessories may be under coverage of the Export Administration Regulations of Japan ("Foreign Exchange and Foreign Trade Control Laws" and the related laws and regulations). When exporting this product and its accessories, take necessary procedures on your responsibility and expense. For details, contact Ministry of Economy, Trade and Industry of Japan.

Intellectual Property Right

Copyrights and portrait rights

Except for the case protected by copyright laws such as personal use, use of FOMA terminal to reproduce, alter, or publicly transmit recorded pictures or sounds, or copyrighted text, images, music or software downloaded from websites without the copyright holder's authorization is prohibited. Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use. Avoid taking pictures of others with FOMA terminal without their consent or disclosing recorded pictures of others without their consent to general public through Internet websites etc., because they may infringe on portrait rights.

Trademarks

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

- "FOMA", "i-mode", "i-appli", "i-motion", "Deco-mail", "Chara-den", "ToruCa", "WORLD CALL", "DCMX", "i-area", "WORLD WING", "OFFICEED", "2in1", "docomo STYLE series" and logos of "docomo web mail", "i-mode", "i-appli", "Music&Video Channel" and "iC" are trademarks or registered trademarks of NTT DOCOMO.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- Contains Adobe® Flash® Lite® and Adobe Reader® Mobile technology by Adobe Systems Incorporated.
Adobe Flash Lite Copyright© 2003-2010 Adobe Systems Incorporated. All rights reserved.
Adobe Reader Mobile Copyright© 1993-2010 Adobe Systems Incorporated. All rights reserved.



Adobe, Adobe Reader, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.



- This product contains NetFront Browser, NetFront Sync Client of ACCESS CO., LTD. ACCESS[™] NetFront[™] ACCESS, the ACCESS logo and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

Copyright© 2010 ACCESS CO., LTD. All rights reserved.

- Powered by JBlend[™] Copyright 2002-2010 Aplix Corporation. All rights reserved.



JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

-  is a registered trademark of FeliCa Networks, Inc.
- FeliCa is a registered trademark of Sony Corporation.
- QR code is a registered trademark of Denso Wave Inc.
- microSDHC Logo is a trademark of SD-3C,LLC.
- "Multitask" is a registered trademark of NEC Corporation.
- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- Microsoft[®], Windows[®], Windows Vista[®] and Windows Media[®] are trademarks or registered trademarks of "Microsoft Corporation" in the US and other countries.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.
 - Windows 7 stands for Microsoft[®] Windows[®] 7 (Starter, Home Basic, Home Premium, Professional, Enterprise Ultimate).
 - Windows Vista stands for Windows Vista[®] (Home Basic, Home Premium, Business, Enterprise and Ultimate).
 - Windows XP indicates the Microsoft[®] Windows[®] XP Professional operating system or Microsoft[®] Windows[®] XP Home Edition operating system.
- Google and Google Map for Mobile are trademarks of Google Inc.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Java and Java-based trademarks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



- ATOK + APOT of Justsystem Corporation is installed in this product as Japanese character conversion function.
- "ATOK" "APOT (Advanced Prediction Optimization Technology)" are registered trademarks of Justsystem Corporation.
- This product contains software licensed by Symbian Foundation Limited. Symbian is a registered trademark of Symbian Foundation Limited.
- "Privacy mode" is a registered trademark of FUJITSU LIMITED.
- "Uni-Type" is a universal designed font jointly-developed by LIM Corp., Ltd. and Faculty of Engineering, Chiba University.
- "Uni-Type" is a registered trademark of LIM Corp., Ltd.
- "丸ゴシック (Maru Gothic)", "レイミン (Reimin)" and "丸フォーク (Maru Fork)" are provided by Morisawa & Company, Ltd. and the copyrights of these font data belong to them. Names of "レイミン" and "丸フォーク" are their trademarks.
- OBEX[™] is a trademark of Infrared Data Association[®].
- Blu-ray Disc and its logo are trademarks.
- Other company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.



Others

- FeliCa is a contactless IC card technology developed by Sony Corporation.
- This product contains a module developed by the Independent JPEG Group.
- This product is equipped with the technologies of GestureTek, Inc. Copyright© 2006-2010, GestureTek, Inc. All Rights Reserved.
- "学研モバイル国語辞典 (Gakken Mobile JpnDic)", "学研モバイル英和辞典 (Gakken Mobile JE Dic)", "学研モバイル英和辞典 (Gakken Mobile EJ Dic)", "今日は何の日 (Today's trivia)" and "今日の歴史 (Today in history)" are copyrighted by GAKKEN CO., LTD.
- This product is licensed based on MPEG-4 Visual Patent Portfolio License. The use of MPEG-4 Video Codec function is allowed for personal and nonprofit use only in the cases below.
 - Recording moving pictures and i-motion that conform to MPEG-4 Visual Standard (hereinafter referred to as MPEG-4 Video)
 - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
 - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA For further utilizing such as promotion, in-house use or profit-making business, please contact MPEG LA, LLC in U.S.
- Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When downloading licenses for protected content, you agree that Microsoft may include a "Revocation List" with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you cannot access a content that requires the upgrade.

Index

A

AC adapter	18
Accept/Reject call	34
Adjust volume	25
After-Sales Service.....	71
Alarm clock	64
All lock	32
Anonymous caller	34
Attachments	45
Auto optimized shooting mode.....	54
Auto timer	54
Auto-sort method	47
Available services overseas	43

B

Back Cover	17
Backup at once	67
Bar code reader	65
Basic menu	21
Battery pack	17
Bookmark	50

C

Call Forwarding Service	41
Call Waiting	41
Caller ID notification	38
Chaku-uta full	59
Channel list	56
Character entry	23
Charging	18
Check new message	47
Closed style	6
Continuous shooting	54

D

Data Security Service	33
Deco-mail	46

Decome-Anime	46
Delete all data	35
Desktop Holder	18
Dictionaries	65
Display light time	28
Displaying i-mode website	49
Displaying phone number	19
Displaying web pages	49
DOCOMO keitai datalink	69

E

Early warning "Area Mail"	48
eco mode	30
eco mode options	30
Emergency call	42
Export Administration Regulations	85

F

FeliCa (Osaifu-Keitai)	62
Focus mode	20
Font size	27
Full Browser	49

G

Graffiti picture	55
Guide	23
Guide area	21

I

i-appli	60
IC card lock	33
iC transmission	68
i-Channel	52
i-concier	63
Immediate update	74
i-mode fault diagnosis site	72
i-mode mail	45, 47
i-mode password	32

i-motion/movie	61
Incoming call restriction	34
Indicator light	29
Information	63
Infrared communication	68
Initial setting	19
Input method	23
Input mode	24
International calls	38
International Roaming (WORLD WING)	43
i-Widget	60

K

Keypad dial lock	32
Keypad/Touch sound	26
Kid-safe mode	35
Kisekae menu	21
Kisekae Tool	29
Kurukuru-key	22
Kurukuru-key setting	22

L

Light alert	29
Listen volume	39

M

Machi-chara setting	28
Making a call/videophone call	37
Menu List	77
Menu operation	21
microSD card	66, 67
microSD password	32
Moving picture display	54
MUSIC Player	59
Music&Video Channel	58

N

Network security code	32
-----------------------------	----

Network service	41
-----------------------	----

O

Omakase Lock	33
On hold	39
Operation lock	33
Options and related devices	76
Osaifu-Keitai	62
Overseas use	43

P

Panorama shooting	54
Password (for children)	32, 35
PC connection	69
Personal data lock	32
Phonebook	37, 48
Phonebook new entry	48
Pictogram	24
PIN1/PIN2 code	31
Playing recorded program	57
Privacy mode	33
Privacy view	28
Public mode	40

Q

QR code	65
Quick dial	44

R

Receive setting	48
Received calls	37
Receiving a call/videophone call	39
Receiving mail	47
Record message	40
Recording reservation	57
Redial	37
Reply	47
Reserved update	74
Reset	35
Restricting usage	36
Ring alert delay	34

Ring alerts & Sounds	25
RSS reader	50

S

SAR	82
Savable/Recordable/Protectable number	81
Scanning function	75
Scene mode/effect	54
Scheduler	64
Screen memo	50
Security code	30
Security lock	33
Security Scan (Scanning function)	75
Select startup menu	27
Self mode	32
Sending mail	45
Sending SMS	45
Set auto-update	73, 75
Shooting moving pictures	53
Shooting still images	53
Shortcut menu	21
Silent mode	26
Slide style	6
Smile finder	54
Smiley	24
Specification	80
Specified caller	34
Stand-by display	27
Still image display	54

T

Terminal security code	31
Text input	24
Touch panel	55
Touch pen	55
Troubleshooting	70

U

UIM	17
Unregistered caller	34
Updating software	73

URL entry	50
USB mode setting	69
User Information	19

V

Videophone call	37, 39
Voice Mail service	41

W

Warranty	71
Watching reservation	57
WMA file	59
WORLD CALL	38
WORLD WING	43

Numeric

1Seg	56
1Seg alarm clock	64
4 frames shooting	54

Please ask checking/changing subscription detail, application of various services and request of various information materials online.

From i-mode iMenu ⇒ お客様サポート (Support) ⇒ お申込・お手続き (Application/Procedures) ⇒ 各種お申込・お手続き
(Various application/Procedures) **No packet communication charges** * In Japanese only

From PCs My docomo (<http://www.mydocomo.com/>) ⇒ 各種お申込・お手続き (Various application/Procedures) * In Japanese only

- * You need your "Network security code" to use the site from i-mode.
- * No packet communication charge applies to access the site from i-mode. Packet communication charge applies to access from overseas.
- * You need "docomo ID/Password" to access the site from your PC.

- * If you do not have or forget "Network security code" or "docomo ID/Password", contact to the numbers for "General Inquiries" on the last page of this manual.
- * You may not use the services depending on your subscription.
- * There are cases where the site may not be available to system maintenance, etc.



Using mobile phone with your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Always turn OFF your FOMA terminal in cases below

- In a place where use of mobile phones is prohibited
 - Always turn OFF your FOMA terminal in an aircraft or hospital.

Always set Public mode in cases below

- When driving
 - Using a mobile phone by holding it with the hand while driving is subject to penalty.
- In public places such as a theater, movie theater or art museum

Consider privacy

- ! Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.



DOCOMO's environmental effort

Fewer pages in the instruction manual

In Japanese version, instruction manual covers instructions only for basic functions to reduce pages and paper usage.
For frequently-used functions and their details, see 使いかたガイド (Guide) (installed in this FOMA terminal, in Japanese only) or visit NTT DOCOMO website.

Recycle of mobile phones



To protect environment and recycle the precious resources, mobile phone and PHS enterprises collect phones, batteries and chargers, regardless of brands and manufacturers, at shops labeled with the mark shown to the left. Bring these devices to your nearest docomo Shop.

General Inquiries <docomo Information Center>

0120-005-250 (toll free)

* Service available in: English, Portuguese, Chinese, Spanish, Korean.

* Unavailable from part of IP phones.

(Business hours : 9:00 a.m. to 8:00 p.m.)

■ From DOCOMO mobile phones
(In Japanese only)

(No prefix) 151 (toll free)

* Unavailable from land-line phones, etc.

(Business hours : 9:00 a.m. to 8:00 p.m. (open all year round))

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website or the i-mode site.

▶ NTT DOCOMO website <http://www.nttdocomo.co.jp/english/>

▶ i-mode site iMenu⇒お客様サポート (user support)⇒ドコモショップ (docomo Shop) * In Japanese only

Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code
for the country you stay

-81-3-6832-6600* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※ If you use F-05C, you should dial the number +81-3-6832-6600 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

Universal number
international prefix

-8000120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※ For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.

● If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.

● If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.



Li-ion 00

To prevent damage to the environment,
bring used battery packs to a docomo
service counter, a docomo agent or a
recycle center.



Don't forget your mobile phone ... or your manners!

When using your mobile phone in a public place, don't forget to
show common courtesy and consideration for others around you.

Repairs

■ From DOCOMO mobile phones
(In Japanese only)

(No prefix) 113 (toll free)

* Unavailable from land-line phones, etc.

(Business hours : 24 hours (open all year round))

■ From land-line phones
(In Japanese only)

0120-800-000 (toll free)

* Unavailable from part of IP phones.

Failures encountered overseas <Network Support and Operation Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code
for the country you stay

-81-3-6718-1414* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※ If you use F-05C, you should dial the number +81-3-6718-1414 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

Universal number
international prefix

-8005931-8600*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※ For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.

Sales: NTT DOCOMO, INC.
Manufacturer: FUJITSU LIMITED

2011.1 (1st Edition)
CA92002-6351

F-05C

Manual for PC Connection

Data Communication	1
Before use	2
Flow of setup for data transfer (OBEX™ communication)	4
Flow of setup for data communication	4
Connecting up PC to the FOMA terminal	5
Installing FOMA communication configuration file (driver)	6
Using DOCOMO Connection Manager	9
Setting communications without using DOCOMO Connection Manager	15
AT command	25

About Manual for PC Connection

This manual describes about data communications using F-05C and how to install "FOMA communication configuration file" and "DOCOMO Connection Manager" contained in CD-ROM.

Depending on the environment of your PC, some of operation procedures and/or screens may be different.

Data Communication


There are 3 communication modes available by connecting FOMA terminal and a PC : data transfer (OBEX™ communication), packet communication and 64K data communication.

- To make packet communications or 64K data communications or edit data such as the phonebook using a PC connected, installation of the software in the attached CD-ROM and various settings are required.
- When performing packet communication overseas, use IP connection (packet communication is unavailable with PPP connection). 64K data communication cannot be used overseas.
- FOMA terminal does not support FAX communication or Remote Wakeup.
- Data communication can be performed connecting with DOCOMO's PDA like sigmarion III. However, FOMA terminal does not support high-speed communication compatible with HIGH-SPEED area.

❖ Data transfer (OBEX™ communication)

You can send and receive data such as image, music, phonebook or mail etc. to/from other FOMA terminals or PCs etc.

- Transferable data varies depending on transfer method. For data that can be transferred by each transfer method, see "Instruction manual (detailed version)" (in pdf format) of the FOMA terminal (in Japanese only).

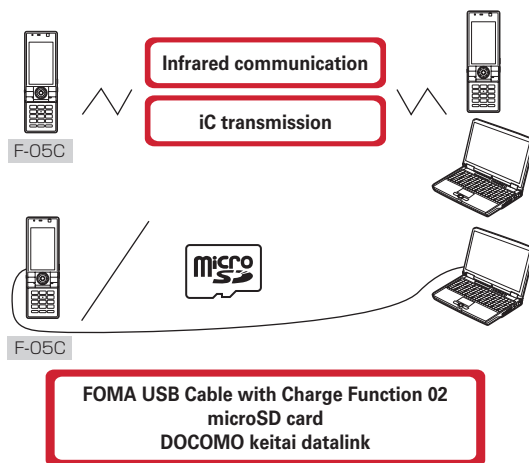

❖ Packet communication

You can connect to the Internet and perform data communication (packet communication).

Packet communication charges are based on the amount of data sent and received, which makes it suitable for high-speed exchange of comparatively small amounts of data as in sending and receiving mail. No communication charges are required when no data are exchanged even if you are connected to the network. Therefore, sending/receiving data as needed while remaining connected to the network is possible.

High-speed packet communication can be performed at a maximum reception speed of 7.2Mbps and a maximum transmission speed of 384kbps by using access points that support FOMA packet communication such as mopera U of DOCOMO's Internet connection service. Best effort method which the actual communication speed varies with the environment and the rate of congestion offers.

Note that communications of large-size data such as viewing websites containing images and downloading will require high charges.

* The communication speed may be slower when connecting out of FOMA HIGH-SPEED area, connecting to access points incompatible with HIGH-SPEED, or using devices incompatible with HIGH-SPEED such as DOCOMO's PDA; sigmarion III.

* Maximum speed of reception 7.2Mbps and transmission 384kbps are the values in technical standards, thus they are not indicated actual communication speed. Actual communication speed varies by the network congestion or environment of communication.

❖ 64K data communication

You can connect to the Internet and perform 64K data communication.

Communication charges are based on the duration of the connection to the network regardless of the volume of data, which makes it suitable for sending and receiving relatively large amounts of data as in downloading multi-media contents.

Access points that support FOMA 64K data communication services such as mopera U of DOCOMO's Internet connection service or ISDN synchronized 64K access points can be used.

Please be careful that a high cost will be charged for long-time communications.

Before use

◆ Operating environment

The operation environment for using data communication is as shown below. They may vary depending on the PC system configurations.

Item	Requirements
Computer	PC/AT compatible computer with USB port (conform to USB specification 1.1/2.0) Recommended 1,024×600 dots (1,024 ×768 dots [*]) or more in display resolution and High Color 16 bits or more
OS (Japanese version)	Windows XP, Windows Vista, Windows 7
Memory requirements	Windows XP : 128MB or more Windows Vista : 512MB or more Windows 7 : 1GB or more for 32-bit, 2GB or more for 64-bit
Hard disk capacity	5MB (10MB [*]) or more free disk space
Web browser[*]	Internet Explorer 6.0 or more
Mailer software[*]	Windows Mail and Outlook Express 6.0

^{*} For operating environment of using DOCOMO Connection Manager.

- For the latest information about operating environment, refer to NTT DOCOMO website.
- DOCOMO will not guarantee operations on upgraded OS or added/changed operating environment.
- Note that utilization may not be possible in certain operating environments. DOCOMO assumes no responsibility for pertaining to operation under conditions other than that described above.
- Recommended environment for operating the menu is Microsoft Internet Explorer 7.0 or later (For Windows XP, Microsoft Internet Explorer 6.0 or later). If no menu appears when CD-ROM is set, take actions given below.

① Under Windows 7, Windows Vista : Click  (Start)→"すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"ファイル名を指定して実行 (Run)".

Under Windows XP : Click "スタート (Start)"→"ファイル名を指定して実行 (Run)".

② Enter as follows in "名前 (Name)" and click "OK".

<CD-ROM drive name> : ¥index.html

^{*} CD-ROM drive name varies depending on a PC to be used.

- When the CD-ROM is inserted into the PC's CD-ROM drive, the warning screen may be displayed. This warning depends on the security settings of Internet Explorer but it is not a problem for use. Click "はい (Yes)".

^{*} Depending on the environment of your PC, the screen may be different.

◆ Devices required

The following devices are required in addition to FOMA terminal and a PC.

- FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional)
- Attached CD-ROM "CD-ROM for F-05C"

✓ INFORMATION

- USB cable for PC is not available because the connector type is different.
- When using USB HUB, it may not operate properly.

◆ Usage precautions

❖ Internet service provider usage charges

When using the Internet on a PC, usage charge to your Internet service provider (hereinafter referred to as Provider) is required. This charge is paid directly to the Provider, and is separated from the FOMA service charge. For details, contact your Provider.

- DOCOMO's Internet connection service mopera U is available. mopera U is a charged service requiring subscription.

❖ Dialup connection (Provider etc.)

Different dialup connections are required for packet communication and 64K data communication. When performing packet communication, use the dialup connection for packet communication. When performing 64K data communication, use the dialup connection for FOMA 64K data communication or ISDN synchronized 64K data communication.

- Connections to DoPa access points are unavailable.
- For service and connection/settings of mopera, refer to mopera website.
<http://www.mopera.net/mopera/index.html>

❖ User authentication

Some dialup connections require user authentication before a connection can be established. If user authentication is required, you must use your communication software or dialup network to enter your ID and password and connect. Your ID and password will be assigned by the network administrator of the connection destination such as your provider or corporate LAN. For details, contact your provider or network administrator.

❖ Access authentication during using PC browser

If FirstPass (user certificate) is required for the access authentication during using PC browser, use FirstPass PC software. It is provided on NTT DOCOMO website. For details and download, refer to the following website. You can also access to the following website from the attached CD-ROM.

Details of the service : <http://www.nttdocomo.co.jp/service/safety/firstpass/>

Download : <http://www.nttdocomo.co.jp/support/utilization/application/foma/utility/firstpass/index.html>

❖ Conditions of packet communication and 64K data communication

To perform data communication in Japan, the following conditions must be satisfied.

- You must be within the FOMA service area.
- Packet communication requires an access point that supports FOMA packet communications.
- 64K data communication requires a dialup connection that supports FOMA 64K data communications or ISDN synchronized 64K.

* Note that even when the above requirements are satisfied, you may not be able to perform data communication if base station traffic is heavy or the radio wave conditions are poor.

◆ Using CD-ROM

The attached CD-ROM includes software to use the data communication with FOMA terminal, "Kuten Code List" in the PDF version, etc.

❖ Introduction of DOCOMO keitai datalink

DOCOMO keitai datalink is software to back up and edit your phone information such as phonebook and mail. It is provided on NTT DOCOMO website. For details and download of this software, refer to the following website. You can also access to the following website from the attached CD-ROM.

<http://datalink.nttdocomo.co.jp/>

- To use DOCOMO keitai datalink, installing FOMA communication configuration file in advance is required.

- For details of downloading procedure, data that can be transferred, operating environments, installing procedure, operation procedure, etc., refer to the website above. For operations after installation, see Help in the software.
- To use DOCOMO keitai datalink, USB cable is required.

Flow of setup for data transfer (OBEX™ communication)

When using FOMA USB Cable with Charge Function 02 (optional), install FOMA communication configuration file in advance.

- Downloading and installing FOMA communication configuration file
- Installing from attached CD-ROM
 - Downloading from DOCOMO website and installing

Data transfer

Flow of setup for data communication

Preparation for using packet communication or 64K data communication is described.

- ① Downloading or installing FOMA communication configuration file→P6
- Installing from attached CD-ROM
 - Downloading from DOCOMO website and installing

② Connecting FOMA terminal to a PC→P5

③ Confirming FOMA communication configuration file→P8

Installing DOCOMO Connection Manager→P11

Setting data communication by DOCOMO Connection Manager*

Setting communications without using
DOCOMO Connection Manager→P15

Performing communication

* For setting of DOCOMO Connection Manager, refer to "ドコモ コネクションマネージャ操作マニュアル (DOCOMO Connection Manager operation manual)".

❖ FOMA communication configuration file

When performing Packet communication or 64K data communication by connecting to a PC with USB cable, install FOMA communication configuration file.

❖ DOCOMO Connection Manager

When DOCOMO Connection Manager (found on the attached CD-ROM) is installed on a PC, a number of settings required for packet communication or 64K data communication can be simply operated from a PC.

◆ Precautions for installation/uninstallation

- Before starting operation, make sure that no other program is running and exit the program if any.
- * Exit any resident programs on Windows including antivirus software.
Example : Right-click the icon displayed in the task bar, click "閉じる (Close)" or "終了 (End)".
- For installing/uninstalling FOMA communication configuration file or DOCOMO Connection Manager, make sure that a user with administrator's privilege performs the operation. Installing/uninstalling the software by other users may produce an error. For details on PC administrator privileges, contact your PC manufacturer or Microsoft Corporation.
- When "ユーザーアカウント制御 (User account control)" screen is appeared, perform the following operations (it does not appear on Windows XP).
 - Windows 7 : Click "はい (Yes)", or enter password and click "OK".
 - Windows Vista : Click "許可 (Permit)" or "続行 (Continue)", or enter password and click "OK".
- For operations of a PC, settings of administrator privileges, etc., refer to the Instructions Manual of the PC.

Connecting up PC to the FOMA terminal

Connecting/disconnecting to PC is explained here. Installing FOMA communication configuration file is described separately. → P6


- If you connect FOMA terminal to a PC before installing FOMA communication configuration file, Windows may automatically detect that USB cable has been inserted, and may request the driver. In such a case, click "キャンセル (Cancel)" on the displayed screen to end.
- The connection should be made with a PC and FOMA terminal both turned ON.
- In this manual, the description takes the case of FOMA USB Cable with Charge Function 02 (optional) for example.

◆ Inserting USB cable

1

Insert the connector of the USB cable into FOMA terminal's external connection jack.


2 Insert the other end of the USB cable connector into the PC USB port.

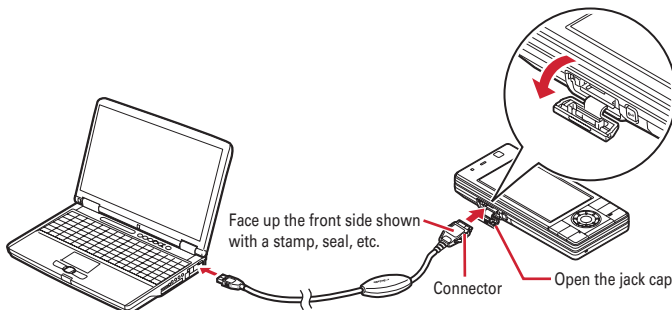

- When a PC and FOMA terminal are connected,  appears on the stand-by display of FOMA terminal.

❖ Removing USB cable

1 Press the USB cable's release buttons on both sides of the connector (①) and remove the connector from FOMA terminal (②).

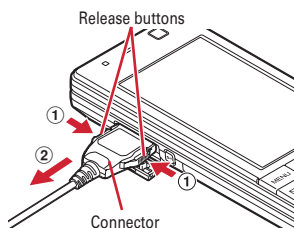

2 Remove the USB cable out from the PC.

✓INFORMATION

- Be careful not to give excessive force to the connector of the USB cable when connecting/disconnecting the cable to/from FOMA terminal.
When disconnecting the connector, be sure to pull it straight while pressing the release button. Applying an excessive force to disconnect the connector may give damage to it.
- Do not remove the USB cable during data communication. The data communication is disconnected and it may cause data loss or malfunction.


Installing FOMA communication configuration file (driver)

To make data communication by connecting FOMA terminal and a PC with USB cable, FOMA communication configuration file (driver) is required. Install the file before connecting FOMA terminal for the first time to the PC.


- Before operating, refer to "Precautions for installation/uninstallation". →P5
- Do not connect FOMA terminal until a message that instructs you to connect FOMA terminal to a PC appears in Step 5.

<Example> Installing under Windows 7

- 1 Insert the CD-ROM into the PC's CD-ROM drive.
- 2 Click "データリンクソフト・各種設定ソフト (Data link software/Configuration software)".

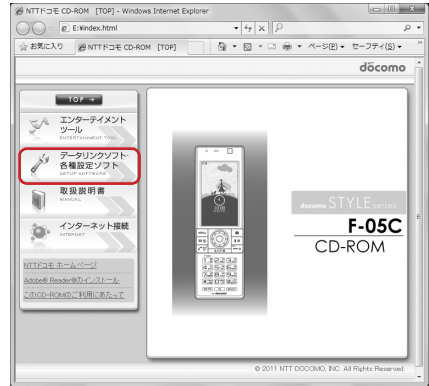

- 3 Click "インストール (Install)" of "FOMA通信設定ファイル (USBドライバ) (FOMA communication configuration file (USB driver))" and double-click "F05Cst.exe" icon from a window displayed.

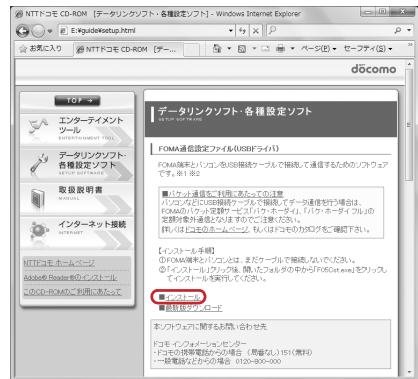

- 4 Click "インストール開始 (Start installation)".
- 5 When a message indicating to connect FOMA terminal to the PC appears, connect FOMA terminal to the PC.

- Connect FOMA terminal while the power is ON.

- 6 On the Installation completion screen, click "OK".

Installing "DOCOMO Connection Manager" → P11

◆ Confirming FOMA communication configuration file

- When a PC does not detect FOMA terminal correctly, settings and communication cannot be performed.

<Example> Checking on Windows 7

- 1** (Start)→"コントロールパネル (Control panel)"→"システムとセキュリティ (System and security)"→"デバイスマネージャー (Device manager)" in the "システム (System)" category.

Under Windows Vista

Click (Start)→"コントロールパネル (Control panel)"→"システムとメンテナンス (System and maintenance)"→"デバイスマネージャ (Device manager)".

Under Windows XP

- ① Click "スタート (Start)"→"コントロールパネル (Control panel)"→"パフォーマンスとメンテナンス (Performance and maintenance)"→"システム (System)".
- ② On the "システムのプロパティ (Property of system)" screen, click "ハードウェア (Hardware)" tab →"デバイスマネージャ (Device manager)".


- 2** Double-click the type of each device→Confirm that the name of the following devices are registered.

- Device types and names are shown as below.
The order to be displayed differs depending on OSs.

-ポート(COMとLPT) (Port (COM and LPT)) :
FOMA F05C Command Port (COMx)*
FOMA F05C OBEX Port (COMx)*

-モデム (Modem) : FOMA F05C
-ユニバーサルシリアルバスコントローラ
(Universal Serial Bus Controller) or USB
(Controller) : FOMA F05C

* Depending on the PC environment, x
represents different numbers.

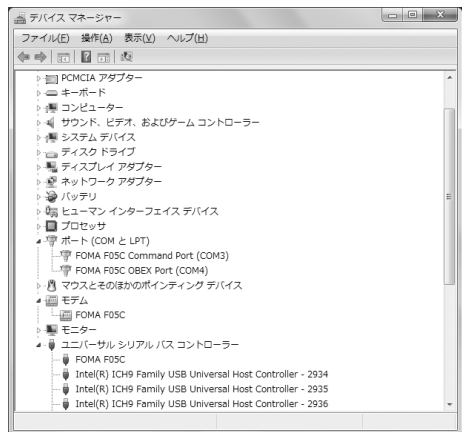

◆ Uninstalling FOMA communication configuration file

- Before operating, refer to "Precautions for installation/uninstallation".→P5
- Before operating, remove FOMA terminal from the PC.

<Example> Uninstalling the driver under Windows 7, Windows Vista

- 1** Click (Start)→"コントロールパネル (Control panel)"→"プログラムのアンインストール (Uninstall programs)" in the "プログラム (Programs)" category.

Under Windows XP

Click "スタート (Start)"→"コントロールパネル (Control panel)"→"プログラムの追加と削除 (Add/delete Programs)".

- 2** Select "FOMA F05C USB" and click "アンインストールと変更 (Uninstall and change)" (for Windows XP, "変更と削除 (Change and delete)").
- 3** Confirm that "FOMA F05C Uninstaller" is displayed and click "はい (Yes)".
The uninstall process starts.
- 4** If the "ドライバを削除しました (Driver deleted)" screen appears, click "OK".

✓INFORMATION

- When "FOMA F05C USB" is not displayed on the deletion screen, execute the operations in "Installing FOMA communication configuration file" again and uninstall.→P6

Using DOCOMO Connection Manager

DOCOMO Connection Manager is convenient software to use flat-rate data communication or pay-as-you-go data communication. You can easily subscribe to mopera U and make a PC setting according to your subscription status.


Also, you can check an estimate of data communication volume or usage fees by the charge counter function.

The method of installing DOCOMO Connection Manager is explained here.

Not displayed in default setting.
For details, refer to ヘルプ (Help)
of ドコモ コネクションマネージャ
"DOCOMO Connection Manager".

Fee counter

Connect/Disconnect button

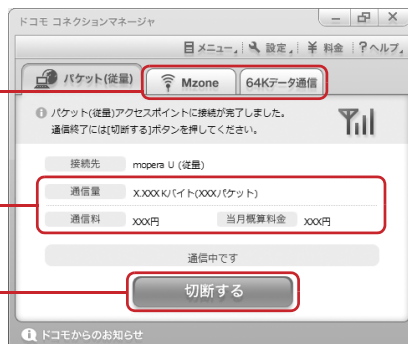

- For Internet connection with FOMA terminal, you need to subscribe to Internet service provider (mopera U etc.) applicable to services and data communication.
For details, refer to NTT DOCOMO website.

✓INFORMATION

Using pay-as-you-go data communication (including i-mode flat-rate packet communication services)

- Note that communications of large-size data such as viewing websites containing images using packet communication and downloading (example: updating of application, music, movie, OS or anti-virus software) will require high charges.

Note that FOMA flat-rate packet services such as Pake-hodai and Pake-hodai full are not applied to the data communication by connecting the FOMA terminal to a PC or another device.

Using flat-rate data plan

- For using of flat-rate data plan, you need to subscribe to Internet service provider applicable to flat-rate data communication charging plan. For details, refer to NTT DOCOMO website.

Using mopera

- For connection/settings of mopera, refer to mopera website.
<http://www.mopera.net/mopera/support/index.html>

◆ Before installing DOCOMO Connection Manager

Before installing DOCOMO Connection Manager, check the items below and perform to change setting of software/uninstall as required.

- Prepare your FOMA terminal, FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional).
- Check the contents of subscription for services and Internet service provider.
- If installing connection software except for DOCOMO Connection Manager, change the setting not to be activated automatically as required.→P10 "Using connection software except for DOCOMO Connection Manager"

❖ Changing setting of Internet Explorer

- Before installing DOCOMO Connection Manager, set to "ダイヤルしない (No dialing)" for connection setting at "インターネットオプション (Internet option)" field of Internet Explorer in advance.

<Example> Changing under Windows 7, Windows Vista

- 1 Click  (Start)→"すべてのプログラム (All programs)"→"Internet Explorer".
Under Windows XP
Click "スタート (Start)"→Select "すべてのプログラム (All programs)" → Click "Internet Explorer".
- 2 Click "ツール (Tool)"→"インターネットオプション (Internet option)".
- 3 Click "接続 (Connection)" tab→Select "ダイヤルしない (No dialing)".



- 4 Click "OK".

❖ Using connection software except for DOCOMO Connection Manager

DOCOMO Connection Manager includes same function as that of software below and using together is not required. Perform to change setting not to be activated or uninstall as required.

- mopera U start up tool
- mopera U connection & setting tool
- FOMA PC configuration software
- FOMA Byte counter

To use Mzone (docomo Public wireless LAN service) by DOCOMO Connection Manager, uninstall the following public wireless LAN connection software. And, when installing all at once, Mzone connection cannot be used by DOCOMO Connection Manager.

- U公衆無線LANユーティリティソフト (U public wireless LAN utility software)
- ドコモ公衆無線LANユーティリティソフト (DOCOMO public wireless LAN utility software)
- ドコモ公衆無線LANユーティティプログラム (DOCOMO public wireless LAN utility program)

◆ Installing DOCOMO Connection Manager

<Example> Installing under Windows 7

- 1 Insert the CD-ROM into the PC's CD-ROM drive.
- 2 Click "インターネット接続 (Internet connection)".



- 3 Click "インストール (Install)" field in Step ③ of "本CD-ROMからのFOMAデータ通信の設定方法 (Setting method of FOMA data communication from this CD-ROM)".

- When the warning screen of security is displayed, click "実行 (Execute)".



- For Windows XP, when the confirmation screen for installing of MSXML6/Wireless LAN API is displayed, click "Install" to install MSXML6/Wireless LAN API. After performing to install MSXML6/Wireless LAN API, reboot Windows to start installation of DOCOMO Connection Manager automatically.


4 Click "次へ (Next)".



5 Confirm "注意事項 (Precautions)" and click "次へ (Next)".




6 Confirm the contents of ソフトウェア使用許諾契約 (Software license agreement) and if you agree to the agreement, select "使用許諾契約の条項に同意します (Agree to the clauses of the agreement)" and click "次へ (Next)".

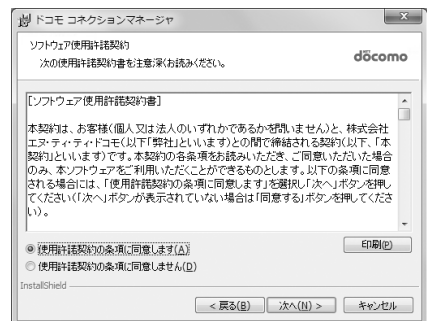

7 Confirm the installing folder and click "次へ (Next)".

- To change the installation destination, click "変更 (Change)" and specify any installation destination.

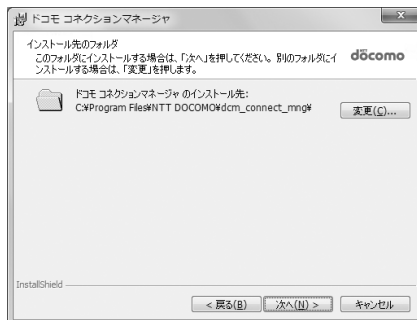

8 Click "インストール (Install)".

Installation starts.



9 When the "InstallShieldウィザードを完了しました (InstallShield wizard is completed)" screen appears, click "完了 (Done)".

Installing DOCOMO Connection Manager is completed.



✓INFORMATION

- Installation may take a few minutes.
- When a message notifying you to reboot Windows is displayed, follow the instruction of screen and reboot.
- Do not install during data communication.

◆ Starting DOCOMO Connection Manager

- Before operating, make sure that a PC and FOMA terminal are properly connected.

<Example> Setting under Windows 7, Windows Vista

- 1 Click  (Start) → "すべてのプログラム (All Programs)" → "NTT DOCOMO" → "ドコモ コネクションマネージャ (DOCOMO Connection Manager)" → "ドコモ コネクションマネージャ (DOCOMO Connection Manager)".

Under Windows XP

Click "スタート (Start)" → Select "すべてのプログラム (All programs)" → "NTT DOCOMO" → "ドコモ コネクションマネージャ (DOCOMO Connection Manager)" and click "ドコモ コネクションマネージャ (DOCOMO Connection Manager)".

DOCOMO Connection Manager starts.

When booting a PC at first time, the setting wizard screen appears automatically.




- According to the setting wizard, perform to set for making data communication connecting to Internet.

After setting, you can perform communication using DOCOMO Connection Manager.

For details, refer to "ドコモ コネクションマネージャ操作マニュアル (DOCOMO Connection Manager operation manual)".

✓ INFORMATION

- Just exiting the Internet browser or mail software may not disconnect communication. When you do not use communication, be sure to disconnect the communication from "切断する (Disconnect)" button of DOCOMO Connection Manager.
- Please note that if auto update is set for OS update etc., the software is updated automatically and high cost may be charged for the packet communication fee.

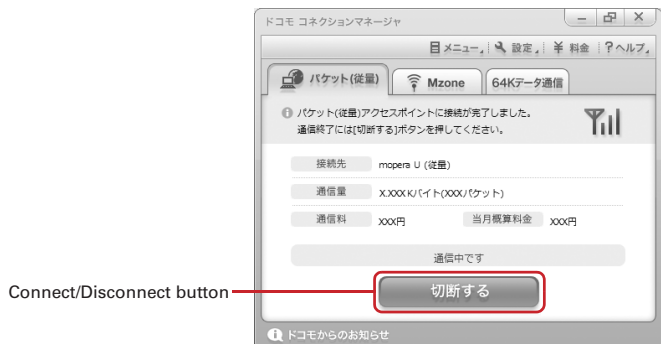

Setting communications without using DOCOMO Connection Manager

The method of dialup connection setup without DOCOMO Connection Manager is explained.

- When using an access point compatible with HIGH-SPEED such as mopera for packet communication, make settings using DOCOMO Connection Manager.

◆ Flow of dialup network setting

- Flow of setup for data communication→P4
- Before operating, make sure that a PC and FOMA terminal are properly connected.

Setting the dialup connection (APN)*→P15

- When the access point is mopera U or mopera, you do not need to set.



Setting Show/Hide caller ID*→P17

- Set as required.



Setting Dialup Network

- Setting for Windows 7, Windows Vista→P18
- Setting for Windows XP→P20

* Set for packet communication.

Communication software to input AT commands is required for settings.

The method of setting using "ハイパーターミナル (Hyper terminal)" that comes with Windows XP is explained here. Windows 7 and Windows Vista do not support "ハイパーターミナル (Hyper terminal)". For Windows 7 and Windows Vista, set using the software supported by Each OS (Follow the method for the software to be used.).

◆ Setting the dialup connection (APN)

❖ The dialup connection (APN) and registration number (cid)

The dialup connections (APN) for packet communication can be set for registration numbers (cid) between 1 and 10 in FOMA terminal. By default, "mopera.ne.jp" (APN) to connect to mopera is registered in cid1, "mopera.net" (APN) to connect to mopera U is registered in cid2 and 3, and "mpr.ex-pkt.net" (APN) to connect in 128K communication is registered in cid4. For connecting to other providers or corporate LANs, register APN for cid5-10.

- For the dialup connections (APN), inquire your provider or network administrator.
- The dialup connection settings can be considered as phonebook entries registered for packet communication. The comparison between dialup connection settings and FOMA terminal phonebook is as shown below.

Connection (APN)	Phonebook item
Registration number (cid)	Registration number (Phonebook No.)
Connection name (APN)	Party's name
*99**<cid># (packet communication)	Party's phone number

- The registered cid become the connection number in the dialup connection numbers setting.

<Example> Setting under Windows XP

1 Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communication)" and click "ハイパーターミナル (Hyper terminal)".


2 Enter the desired dialup connection name in "名前 (Name)"→Click "OK".

- The following characters (one-byte) cannot be used in "名前 (Name)".
¥/: * ? <> | "



3 Enter a fictional phone number (such as "0") for "電話番号 (Phone number)"→Confirm "接続方法 (Connection method)" is set to "FOMA F05C"→Click "OK".

- "市外局番 (Area code)" differs depending on the PC environment. The code does not relate to Dialup connection (APN) setup. So no need to change.

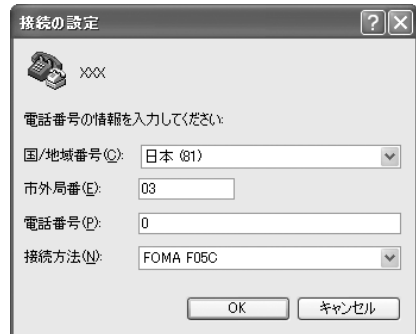

4 Click "キャンセル (Cancel)" on the "接続 (Connect)" screen.


5 Enter the dialup connection (APN) in the format "AT+CGDCONT =<cid>, "<PDP_TYPE>", "<APN>"→

<cid> : Enter any number between 5-10.

<PDP_TYPE> : IP or PPP

<APN> : Dialup connection (APN)

- +CGDCONT command→P32 "Supplement to AT command"
- If nothing is displayed even when AT command is entered, enter ATE1 and press .

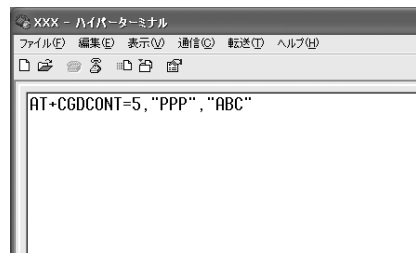

- 6** Confirm that "OK" is displayed and click "ファイル (File)"→Click "ハイパーターミナルの終了 (End HyperTerminal)".
- 7** When confirming disconnection, click "はい (Yes)"→When confirming saving, click "いいえ (No)".

◆ Setting Show/Hide caller ID

You can set to show/hide call ID for packet communication at once.

Caller ID is your important information. Take care when deciding to disclose your caller ID.

- If "Not notify" is set when using mopera U or mopera, connection is unavailable.

<Example> Setting under Windows XP

- 1** Perform Step 1 - 4 in "Setting the dialup connection (APN)".
- 2** Enter notify/not notify of caller ID in the format "AT * DGPIR=<n>" → .
 <n> : 0-2
 0 : Connect directly (Default)
 1 : Connect prefixing 184 (Not notify)
 2 : Connect prefixing 186 (Notify)
 • If nothing is displayed even when AT command is entered, enter ATE1 and press .



- 3** Confirm that "OK" is displayed and click "ファイル (File)"→Click "ハイパーターミナルの終了 (End HyperTerminal)".
- 4** When confirming disconnection, click "はい (Yes)"→When confirming saving, click "いいえ (No)".

❖ Show/Hide caller ID function by dialup network settings

The dialup network settings can also be used to append 186 (Notify)/184 (Not notify) to the dialup connection number.

- The Show/Hide of caller ID when both of the * DGPIR command and dialup network settings are set is as shown below.

Setting made by * DGPIR command Dialup network setting (<cid>=3)	No setting	Caller ID is not sent	Caller ID is sent
99 * *3#	Caller ID is sent	Caller ID is not sent	Caller ID is sent
184*99* * *3#	Caller ID is not sent		
186*99* * *3#	Caller ID is sent		

◆ Setting dialup network

In this manual, the description takes the case of IP connection to mopera U via packet communication for example.

- When connecting to mopera U or mopera via packet communication, enter the following number in the phone number field.
mopera U (PPP connection) : * 99 * * * 2#
mopera U (IP connection) : * 99 * * * 3#
128K communication (PPP connection) : * 99 * * * 4#
mopera (PPP connection) : * 99 * * * 1#
- When connecting to mopera U or mopera via 64K data communication, enter the following number in the phone number field to connect to.
mopera U : * 8701
mopera : * 9601

❖ Setting for Windows 7, Windows Vista

- Click  (Start)→"コントロールパネル (Control panel)"→"ネットワークの状態とタスクの表示 (Network status and tasks)" in the "ネットワークとインターネット (Network and Internet)" category.

Under Windows Vista

Click  (Start)→"接続先 (Dialup connection)".

- Click "新しい接続またはネットワークのセットアップ (Setup new connection or network)".

Under Windows Vista

Click "接続またはネットワークをセットアップします (Set up connection or network)".

- Select "ダイヤルアップ接続をセットアップします (Set up dialup connection)" and click "次へ (Next)".




When the "どのモデムを使いますか？ (Which modem will you use?)" screen is displayed
Click "FOMA F05C".

- 4** Enter the phone number of the dialup connection in "ダイヤルアップの電話番号 (Dialup phone number)" ("*99**<cid>#" for packet communication) with one-byte→Enter "ユーザー名 (User name)"→Enter "パスワード (Password)"→Enter "接続名 (Connection name)" and click "接続 (Connect)".

<cid> : The number registered in P16 "Setting the dialup connection (APN)"

- In "ユーザー名 (User name)" and "パスワード (Password)", enter the user name and password specified by your provider or network administrator.
- When the access point is mopera U or mopera, you do not need to enter "ユーザー名 (User name)" or "パスワード (Password)".
- You cannot use "." (one-byte period) at the beginning of "接続名 (Connection name)". Also, the following characters (one-byte) cannot be used.

¥/:*?<>|

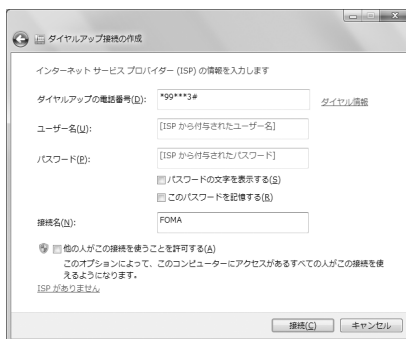

- 5** On the connecting screen, click "スキップ (Skip)".

- Only make settings without connecting to the Internet right away.

- 6** On the "接続の使用準備ができました (Preparation for using is completed)" screen, click "閉じる (Close)".

Under Windows Vista

- ① On the "インターネット接続テストに失敗しました (Failed in Internet connection test)" screen, click "接続をセットアップします (Set up connection)".
- ② Click "閉じる (Close)".

- 7** On the "ネットワークと共有センター (Network and shared center)" screen, click "アダプターの設定の変更 (Change adapter configuration)" appeared on the left of the top.


Under Windows Vista

Click (Start)→"接続先 (Dialup connection)".

- 8** Right-click the dialup connection created and click "プロパティ (Property)".


- 9** Confirm the setting of each item in "全般 (General)" tab.

- When multiple modems are connected, select only "モデム-FOMA F05C (Modem-FOMA F05C)" in "接続の方法 (Connection method)".
- Uncheck () other than selected modem.
- COM port number assigned to the modem displayed at "接続の方法 (Connection method)" field differs by the environment of a PC you use.
- Uncheck () "ダイヤル情報を使う (Use dial information)".

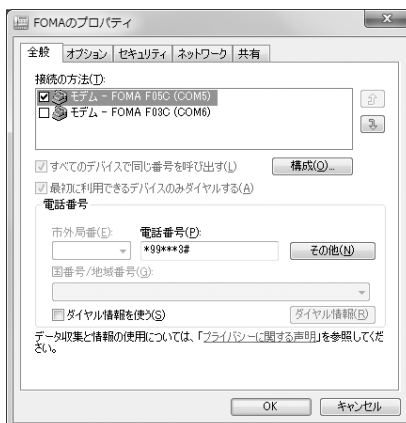


10 Click "ネットワーク (Network)" tab→Set each item as shown below.

- Uncheck (□) "インターネットプロトコルバージョン6 (TCP/IPv6) (Internet Protocol Version 6 (TCP/IPv6))".
- When settings of IP and DNS information have been requested from the provider, etc. select "インターネットプロトコルバージョン4 (TCP/IPv4) (Internet Protocol Version 4 (TCP/IPv4))", click "プロパティ (Property)" and set various information.
- When settings of other items have been requested from the provider, etc., check/uncheck as required.

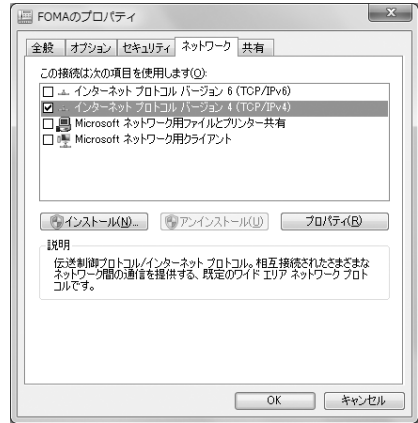

11 Click "オプション (Option)" tab→Click "PPP設定 (PPP settings)".

12 Uncheck all items (□) and click "OK".

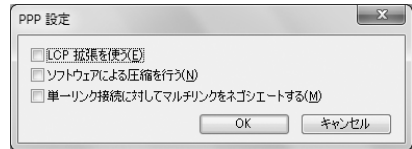

13 Click "OK".

Performing communication→P23

❖ Setting for Windows XP

1 Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communication)" and click "新しい接続ウィザード (New connection wizard)".

2 On the "新しい接続ウィザードの開始 (Start new connection wizard start)" screen, click "次へ (Next)".

3 Select "インターネットに接続する (Connect to Internet)" and click "次へ (Next)".

4 Select "接続を手動でセットアップする (Set up connection manually)" and click "次へ (Next)".

5 Select "ダイヤルアップモデムを使用して接続する (Use dialup modem to connect)" and click "次へ (Next)".

When "デバイスの選択 (Device selection)" screen is displayed

Select "モデム-FOMA F05C (Modem-FOMA F05C)" and click "次へ (Next)".

6 Enter the desired dialup connection name in "ISP名 (ISP name)"→Click "次へ (Next)".

- You cannot use "." (one-byte period) at the beginning of "ISP名 (ISP name)". Also, the following characters (one-byte) cannot be used.
¥/:*?<>|"

7 Enter the phone number of the dialup connection in "電話番号 (Phone number)" (" * 99 * * * <cid>#" for packet communication) with one-byte→Click "次へ (Next)".

<cid> : The number registered in P16 "Setting the dialup connection (APN)"

8 Enter "ユーザー名 (User name)"→Enter "パスワード (Password)"→Enter "パスワードの確認入力 (Password confirmation entry)"→Select all items as shown below and click "次へ (Next)".

- In "ユーザー名 (User name)" and "パスワード (Password)", enter the user name and password specified by your provider or network administrator.
- When the access point is mopera U or mopera, you do not need to enter "ユーザー名 (User name)", "パスワード (Password)" or "パスワードの確認入力 (Password confirmation entry)".

9 On the "新しい接続ウィザードの完了 (New connection wizard is completed)" screen, click "完了 (Done)".

10 Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communication)" and click "ネットワーク接続 (Network connection)".

- 11** Select the created dialup connection icon and click "ファイル (File)"→Click "プロパティ (Property)".



- 12** Confirm the setting of each item in "全般 (General)" tab.

- When multiple modems are connected, select only "モデム-FOMA F05C (Modem-FOMA F05C)" in "接続方法 (Connection method)".
- Uncheck ☐ other than selected modem.
- COM port number assigned to the modem displayed at "接続方法 (Connection method)" field differs by the environment of a PC you use.
- Uncheck ☐ "ダイヤル情報を使う (Use dial information)".



- 13** Click "ネットワーク (Network)" tab→Set each item as shown below→Click "設定 (Settings)".

- When settings of IP and DNS information have been requested from the provider, etc. select "インターネットプロトコル (TCP/IP)" (Internet protocol (TCP/IP)), click "プロパティ (Property)" and set necessary information.
- Since "QoSパケットスケジューラ (QoS packet scheduler)" settings in "この接続は次の項目を使用します (Use these items for this connection)" can not be changed, leave it as is.



14 Uncheck all items (☐) and click "OK".



15 Click "OK".

Performing communication → P23

◆ Performing communication via dialup connection

Starting communication and disconnection are explained here.

<Example> Under Windows 7

1 Connect FOMA terminal to a PC.

For USB cable connection → P5

2 Click (Start) → "コントロールパネル (Control panel)" → "ネットワークの状態とタスクの表示 (Network status and tasks)" in the "ネットワークとインターネット (Network and Internet)" category.

Under Windows Vista

Click  (Start) → "接続先 (Dialup connection)" → Select the dialup connection and click "接続 (Connect)". → Go to Step 4

Under Windows XP

Click "スタート (Start)" → Select "すべてのプログラム (All programs)" → "アクセサリ (Accessories)" → "通信 (Communication)" and click "ネットワーク接続 (Network connection)" → Double-click the connection icon. → Go to Step 4

3 On the "ネットワークと共有センター (Network and shared center)" screen, click "アダプターの設定の変更 (Change adapter configuration)" appeared on the left of the top → Double-click the connection icon.


4 Enter "ユーザー名 (User name)" → Enter "パスワード (Password)" → Click "ダイヤル (Dial)".

- In "ユーザー名 (User name)" and "パスワード (Password)", enter the user name and password specified by your provider or network administrator.
- When using mopera U or mopera, you do not need to enter "ユーザー名 (User name)" or "パスワード (Password)".
- When "ユーザー名 (User name)" was entered or "パスワード (Password)" was saved while settings, these entries are no longer necessary.
- Click "OK" when the connection established screen is displayed.




✓ INFORMATION

- FOMA terminal displays a connecting screen when you execute packet communication or 64K data communication. The following screens are displayed when a connection has been established.

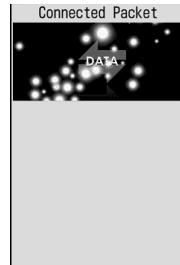

For packet communication

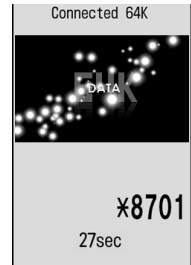

For 64K data communication

- The communication speed displayed on your PC may differ from actual speed.
- The communication is available only with FOMA terminal that was connected when the connection icon was created.

❖ Disconnecting communication

Just exiting the PC browser may not disconnect communication. To ensure disconnection, perform the following operation.

<Example> Under Windows 7

- Click  on the task tray → Connection name to disconnect → "切断 (Disconnect)".

Under Windows Vista

Right-click  in the task tray → Select "切断 (Disconnect)" and click the dialup connection to disconnect.

Under Windows XP

Click dial-up icon in the task tray → Click "切断 (Disconnect)".


AT command

AT commands are commands for setting FOMA terminal functions using a PC. FOMA terminals comply with AT commands and support some extended commands and proprietary AT commands.

❖ AT command input format

"AT" must be entered before each AT command. Commands must be entered in one-byte alphanumeric characters.

<Example> Connecting to mopera U with ATD command

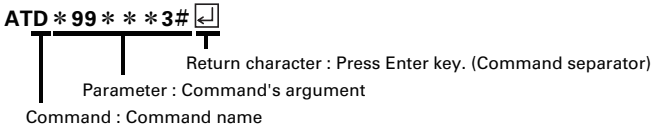

AT commands and their parameters must be entered on a single line. All the characters from the first character until the character directly preceding must be entered on a single line. Each line can be up to 256 characters including "AT".

❖ AT command input mode

To operate FOMA terminal using AT commands, a PC must be in terminal mode. Terminal mode is a mode that lets the PC operate as a single communication terminal. When terminal mode is set, the characters entered from the keyboard are sent directly to the communication port to operate FOMA terminal.

• Offline mode

FOMA terminal is in stand-by. FOMA terminal must be in stand-by status to use AT commands to control it.

• Online data mode

FOMA terminal is communicating. If you enter AT commands when FOMA terminal is performing communication, the sent characters are sent directly to the communication receiver and may cause the receiver's modem to malfunction. Do not enter AT commands while FOMA terminal is performing communication.

• Online command mode

AT commands can be used even when FOMA terminal is in communication mode. These operations make it possible to execute AT commands without interfering with the connection to the communication receiver, and normal communication can continue after the commands have finished executing.

Switching between online data mode and online command mode

To switch FOMA terminal from online data mode to online command mode, you can use either of the following procedures.

- Enter +++ command or code set in the S2 register.
- Turn the RS-232C*ER signal OFF when set in "AT&D1".
 - * The USB interface emulates an RS-232C signal line so RS-232C signal control using communication applications is possible.

To switch from online command mode to online data mode, enter "ATO".

✓INFORMATION

- When making a call or sending an AT command from external device, it is sent from Number A with 2in1 in Dual mode or A mode, and from Number B in B mode.

◆ List of AT command

- The followings are AT command that can be used via the FOMA F05C (Modem).
- Entering "¥" may cause "\" to appear depending on the font setting for a PC or communication software.
- If the battery pack is removed from FOMA terminal before the terminal power is turned off, the setting values may not be recorded.

Upper slot : Command Lower slot : Example	Description
A/	Execute the previously executed command again.
A/ OK	When previous response is "ERROR", "ERROR" is returned.
AT	Use commands on this list by prefixing to commands other than A/ or +++. When using only this command, "OK" is returned with FOMA terminal enabled for using AT commands.
AT ^[↵] OK	
ATA	Perform the receiving process when entered while receiving a packet communication or 64K data communication.
RING ATA ^[↵] CONNECT	The following commands can be entered when receiving a packet communication. ATA184 : Handling of incoming calls : Send caller ID function OFF ATA186 : Handling of incoming calls : Send caller ID function ON
ATD	ATD *99 * * * <cid># : Performs calling process for packet communication.
ATD *99 * * * 1# ^[↵] CONNECT 460800	If <cid> or * * * <cid> is omitted, <cid>=1 is set. ATD [parameter] [phone number] : Perform calling process for 64K data communication. Calling process is not permitted if phone number contains characters other than the following. 0-9, *, #, A, a, B, b, C, c The following characters and a space can be entered but are not recognized in dialing. ,(comma), !, -, @, D, d, P, p, T, t, W, w Setting Show/Hide caller ID is enabled by inserting 186 or 184 after ATD. ATDN or ATDL can be used for redial calling.
ATE<n>*	Set whether FOMA terminal will return echo for command sent from a PC.
ATE1 ^[↵] OK	n=0 : Echo OFF n=1 : Echo ON (default) Normal usage is n=1. If the PC has an echo function, setting this command to n=0 prevents double display of characters.
ATH	Disconnect line when entered during a communication.
ATH ^[↵] NO CARRIER	Execute in online command mode.→P25
ATI<n>	Display the confirmation code.
ATI0 ^[↵] NTT DoCoMo OK	n=0 : "NTT DoCoMo" n=1 : Display model name of FOMA terminal n=2 : Display version of FOMA terminal n=3 : Display elements of ACMP signals n=4 : Display details of functions that can be communicated by FOMA terminal in numeric
ATO	Return from online command mode to online data mode during communication.
ATO ^[↵] CONNECT 460800	
ATQ<n>*	Set whether to display result code.
ATQ0 ^[↵] OK	n=0 : Display (default) n=1 : Not display When ATQ1 is executed, "OK" is not returned.
ATS0=<n>*	Set number of rings until FOMA terminal receives communication automatically.
ATS0=0 ^[↵] OK	n=0 : Not receive automatically (default) n=1-255 : Receive automatically with specified number of rings ATS0? : Display current settings
ATS2=<n>	Set escape character.
ATS2=43 ^[↵] OK	n=0-127 (default : n=43) When n=127 is set, escape is unavailable. ATS2? : Display current settings
ATS3=<n>	Set the carriage return (CR) character that identifies the end of AT command character string. Appended to end of echoed command character string and result code.
ATS3=13 ^[↵] OK	n=13 (fixed value) ATS3? : Display current settings

Upper slot : Command Lower slot : Example	Description
ATS4=<n> ATS4=10  OK	Set the line feed (LF) character. When result code is displayed as alphabetic characters, appends the character after the carriage return (CR) character. n=10 (fixed value) ATS4? : Display current settings
ATS5=<n> ATS5=8  OK	Set the back space (BS) character. When this character is detected during command input, the last character in the input buffer is deleted. n=8 (fixed value) ATS5? : Display current settings
ATS6=<n> ATS6=5  OK	Set pause time (seconds) until dialing commences but do not operate. n=2-10 (default : n=5) ATS6? : Display current settings
ATS8=<n> ATS8=3  OK	Set pause time (seconds) until commas are dialed but do not operate. n=0-255 (default : n=3) ATS8? : Display current settings
ATS10=<n> *1 ATS10=1  OK	Set the delay time (1/10 seconds) for automatic disconnection but do not operate. n=1-255 (default : n=1) ATS10? : Display current settings
ATS30=<n> ATS30=0  OK	Set a period of time (minutes) with no data transmission/reception to terminate the connection for 64K data communications. n=0-255 : (default : n=0, n=0 indicates that inactive timer is set to OFF.) ATS30? : Display current settings
ATS103=<n> ATS103=1  OK	Set the separator of received sub addresses for 64K data communication. n=0 : * n=1 : / (default) n=2 : ¥ or \ ATS103? : Display current settings
ATS104=<n> ATS104=1  OK	Set the separator of sent sub addresses for 64K data communication. n=0 : # n=1 : % (default) n=2 : & ATS104? : Display current settings
ATV<n> *1 ATV1  OK	Set result code display method. n=0 : Number display n=1 : Alphabetical display (default) When ATV0 is executed, "0" is not returned to the same line.
ATX<n> *1 ATX4  OK	Set whether to detect busy or dial tones and whether to display the speed in the "CONNECT" display for the connection. Busy tone detection : Send "BUSY" response when dialup connection is busy. Dial tone detection : Detect whether FOMA terminal is connected. n=0 : No busy tone, no dial tone detected, and no speed is displayed n=1 : No busy tone, no dial tone detected, and speed is displayed n=2 : No busy tone, dial tone detected, and speed is displayed n=3 : Busy tone detected, no dial tone detected, and speed is displayed n=4 : Busy tone detected, dial tone detected, and speed is displayed (default) When n=0 is set, AT&E and AT¥V command will be unavailable.
ATZ *3 ATZ  OK (When in offline mode)	Reset the current setting to the registered state. When this command is executed during communication, the terminal is reset after the line is disconnected (displaying "NO CARRIER").
AT%V AT%V  Ver1.00 OK	Display FOMA terminal version.
AT&C<n> *1 AT&C1  OK	Set the operating conditions of the circuit CD (DCD) for DTE. n=0 : Always ON n=1 : Vary according to line connection status (default) When set to n=0, the CD signal is set to ON directly before sending "CONNECT" when ending connection. The CD signal is set to OFF directly before the line is disconnected and "NO CARRIER" is sent.
AT&D<n> *1 AT&D2  OK	Set the operation performed when circuit ER (DTR) signal received from DTE is switched from ON to OFF while online data mode takes effect. n=0 : Ignore status (status is always considered to be ON) n=1 : Move to online command mode when status changes from ON to OFF n=2 : Disconnect line and move to offline mode when status changes from ON to OFF (default)

Upper slot : Command Lower slot : Example	Description
AT+E<n> ^{*1}	Set the speed display used when connection is made.
AT+E1  OK	n=0 : Display communication speed of wireless zone n=1 : Display communication speed between a PC and FOMA terminal (default)
AT+F	Reset the current setting to the default.
AT+F  OK (When in offline mode)	When this command is executed during communication, the terminal is reset after the line is disconnected (displaying "NO CARRIER").
AT+S<n> ^{*1}	Set control of the data set ready (DR) signal to be output to DTE.
AT+S0  OK	n=0 : Always ON (default) n=1 : ON at time of connection
AT+W	Register the current settings in FOMA terminal.
AT+W  OK	
AT * DANTE	Indicate FOMA terminal reception level in the " * DANTE : <n>" format.
AT * DANTE  * DANTE : 3 OK	n=0 : Out of service area n=1 : Received signal level of FOMA terminal is 0 or 1 antenna. n=2 : Received signal level of FOMA terminal is 2 antennas. n=3 : Received signal level of FOMA terminal is 3 antennas. AT * DANTE=? : Display a list of displayable values
AT * DGANSM=<n> ^{*2}	Set to reject or permit incoming packet communications.
AT * DGANSM=0  OK	n=0 : Reject setting = OFF, Accept setting = OFF (default) n=1 : Reject setting=ON n=2 : Accept setting=ON AT * DGANSM? : Display current settings AT * DGANSM=? : Display a list of assignable values
AT * DGAPL=<n> [<cid>] ^{*2}	Set the dialup connections (APN) to permit incoming packet communications. APN uses <cid> defined by +CGDCONT command.
AT * DGAPL=0,1  OK	n=0 : Add to list of APN permitted for incoming communications n=1 : Delete from list of APN permitted for incoming communications If the <cid> is not defined by the +CGDCONT command, it can still be added to/deleted from the list. If the <cid> is omitted, all the <cid> are added to/deleted from the list. AT * DGAPL? : Display current settings AT * DGAPL=? : Display a list of assignable values
AT * DGARL=<n> [<cid>] ^{*2}	Set the dialup connections (APN) to refuse incoming packet communications. APN uses <cid> defined by +CGDCONT command.
AT * DGARL=0,1  OK	n=0 : Add to list of APN rejected for incoming communications n=1 : Delete from list of APN rejected for incoming communications If the <cid> is not defined by the +CGDCONT command, it can still be added to/deleted from the list. If the <cid> is omitted, all the <cid> are added to/deleted from the list. AT * DGARL? : Display current settings AT * DGARL=? : Display a list of assignable values
AT * DGPIR=<n> ^{*2}	Set Caller ID notification when packet communication connection is being performed. This command is available when a communication is sent or received.
AT * DGPIR=0  OK	n=0 : Connect to APN directly (default) n=1 : Connect to APN prefixing 184 n=2 : Connect to APN prefixing 186 When Show/Hide caller ID is specified by dialup network→P17 AT * DGPIR? : Display current settings AT * DGPIR=? : Display a list of assignable values
AT * DRPW	Indicate an index for the reception power of the radio waves that FOMA terminal receive.
AT * DRPW  * DRPW : 0 OK	AT * DRPW=? : Display a list of displayable values
AT+CAOC	Display last call cost.
AT+CAOC  +CAOC : "000024" OK	
AT+CBC	Display FOMA terminal's battery level in the "+CBC : <bcs>,<bcl>" format.
AT+CBC  +CBC : 0,100 OK	bcs=0 : Powered by the battery pack bcs=1 : Not powered by the battery pack bcs=2 : Battery pack removed bcs=3 : Power-supply error bcl=0 : No battery remained or battery pack removed bcl=1-100 : Battery remained AT+CBC=? : Display a list of displayable values

Upper slot : Command Lower slot : Example	Description
AT+CBST=<n>,1,0 ^{*1}	Set the line to use (Setting of bearer service)
AT+CBST=116,1,0 OK	n=116 : 64K data communication (default) n=134 : 64K videophone AT+CBST? : Display current settings AT+CBST=? : Display a list of assignable values
AT+CDIP=<n> ^{*1}	Set to notify/not to notify the sub address when receiving in packet communication or 64 data communication. And, subscription status of Multi Number can be confirmed.
AT+CDIP=0 OK	n=0 : The information of sub address is not displayed. (default) n=1 : The information of sub address is displayed. m=0 : Multi Number not subscribed. m=1 : Multi Number subscribed. AT+CDIP? : Display the current settings and status in the "+CDIP:<n>,<m>" format AT+CDIP=? : List of the settable values is displayed.
AT+CEER	Display the reason of immediate disconnection.
AT+CEER +CEER : 36 OK	Disconnection reason list→P31
AT+CGDCONT ^{*2}	Set dialup connection (APN) for packet communication.→P32
→P32	
AT+CGEQMIN ^{*2}	Set the criteria for judging whether to permit QoS (Quality of Service) provisioned by the network when packet communication is established.→P33
→P33	
AT+CGEQREQ ^{*2}	Set QoS (Quality of Service) requested to the network at the transmission of packet communication.→P33
→P33	
AT+CGMR	Display FOMA terminal version.
AT+CGMR 1234567890123456 OK	
AT+CGREG=<n> ^{*1}	Set whether to report network service registration status (Within/Out).
AT+CGREG=0 OK	n=0 : Not notified (default) n=1 : When the terminal is moved from Within service area to Out of service area or vice versa, the status is reported in the "+CGREG : <stat>" format. stat=0 : Out of packet service area stat=1 : Within packet service area stat=4 : Unknown stat=5 : Within packet service area (during international roaming) AT+CGREG? : Display the current settings and status in the "+CGREG : <n>,<stat>" format AT+CGREG=? : Display a list of assignable values
AT+CGSN	Display FOMA terminal serial No.
AT+CGSN 123456789012345 OK	
AT+CLIP=<n> ^{*1}	Set whether to display sender's caller ID on a PC when receiving 64K data communication.
AT+CLIP=0 OK	n=0 : Not display result (default) n=1 : Display result m=0 : Network setting not to send caller ID m=1 : Network setting to send caller ID m=2 : Unknown AT+CLIP? : Display the current settings and status in the "+CLIP : <n>,<m>" format AT+CLIP=? : Display a list of assignable values
AT+CLIR=<n> ^{*2}	Set Caller ID notification when sending 64K data communication.
AT+CLIR=2 OK	n=0 : Use the setting in Caller ID notification of FOMA terminal n=1 : Not send n=2 : Send (default) m=0 : CLIR not operating (always sends) m=1 : CLIR operating (never sends) m=2 : Unknown m=3 : CLIR temporary mode (default=does not send) m=4 : CLIR temporary mode (default=sends) AT+CLIR? : Display the current settings and status in the "+CLIR : <n>,<m>" format AT+CLIR=? : Display a list of assignable values
AT+CMEE=<n> ^{*1}	Set whether to display an error report at FOMA terminal.
AT+CMEE=0 OK	n=0 : Display "ERROR" and no result code (default) n=1 : Use result code, displaying reason as number n=2 : Use result code, displaying reason as alphabetic characters Display reasons in the "+CME ERROR : xxxx" format when n=1 or n=2 is set (xxxx = number or alphabetic characters).→P32 "Error messages list" AT+CMEE? : Display current settings AT+CMEE=? : Display a list of assignable values

Upper slot : Command Lower slot : Example	Description
AT+CNUM AT+CNUM [↵] +CNUM : ,"090XXXXXXXX", 129 OK	Display FOMA terminal's own phone number in the "+CNUM : <numbers>,<type>" format. number : Own phone number (With 2in1, display Number B in B mode or Number A in other mode) type=129 : International access code + not included type=145 : International access code + included
AT+COPS=<n>,2,<oper> *2 AT+COPS=0 [↵] OK	Set search method for network operator to connect. n=0 : Auto (default) n=1 : Manual n=3 : No mapping When n=1 is set, set PLMN Number in hexadecimal value for <oper>. AT+COPS? : Display current settings AT+COPS=? : Display a list of assignable values
AT+CPAS AT+CPAS [↵] +CPAS : 0 OK	Display whether FOMA terminal can send and receive AT commands to external devices in "+CPAS : <n>" format. n=0 : Possible n=1 : Impossible n=2 : Status unknown n=3 : Possible and receiving n=4 : Possible and communicating AT+CPAS=? : Display a list of displayable values
AT+CPIN="<pin>",<newpin> AT+CPIN="0000" [↵] OK	Enter these commands for entering PIN1/PIN2 codes or PUK with PIN1 code ON. To enter PUK, enter new PIN1/PIN2 code in <newpin>. Even if entering in <newpin> when entry of PIN1/PIN2 code is request, PIN1/PIN2 code cannot be changed. n=READY : Entry of code not requested n=SIM PIN : Entry of PIN1 code waited n=SIM PIN2 : Entry of PIN2 code waited n=SIM PUK : Entry of PUK waited due to failure in unblocking PIN1 code n=SIM PUK2 : Entry of PUK waited due to failure in unblocking PIN2 code AT+CPIN? : Display the code currently requested in "+CPIN : <n>" format
AT+CR=<n> *1 AT+CR=0 [↵] OK	Set whether to display the communication type before "CONNECT" is displayed during connection. n=0 : Not display (default) n=1 : Display the communication type in the "+CR : <serv>" format serv=GPRS : Packet communication serv=SYNC : 64K data communication serv=AV64K : 64K videophone AT+CR? : Display current settings AT+CR=? : Display a list of assignable values
AT+CRC=<n> *1 AT+CRC=0 [↵] OK	Set whether to use +CRING result codes when communication is received. n=0 : Not use (default) n=1 : Use "+CRING : <type>" result codes type=GPRS "PPP",,"<APN>" : Packet communication type=SYNC : 64K data communication type=AV64K : 64K videophone AT+CRC? : Display current settings AT+CRC=? : Display a list of assignable values
AT+CREG=<n> *1 AT+CREG=0 [↵] OK	Set whether to report network service registration status (Within/Out). n=0 : Not notified (default) n=1 : When the terminal is moved from Within service area to Out of service area or vice versa, the status is reported in the "+CREG : <stat>" format. stat=0 : Out of sound service area stat=1 : Within sound service area stat=4 : Unknown stat=5 : Within sound service area (during international roaming) AT+CREG? : Display the current settings and status in the "+CREG : <n>,<stat>" format AT+CREG=? : Display a list of assignable values
AT+CUSD=<n>,<str> *1 AT+CUSD=0,"012345678" [↵] OK	Set Additional service (Register USSD) of Network Services. Enter Service code provided by DOCOMO in <str>. n=0 : Not answer mid result (default) n=1 : Answer mid result in "+CUSD : <m>,<str>,0" format m=0 : Information not requested m=1 : Information requested AT+CUSD? : Display current settings AT+CUSD=? : Display a list of assignable values
AT+FCLASS=<n> *1 AT+FCLASS=0 [↵] OK	Set communication type supported by FOMA terminal. n=0 : Only data supported (fixed value) AT+FCLASS? : Display current settings AT+FCLASS=? : Display a list of assignable values
AT+GCAP AT+GCAP [↵] +GCAP : +CGSM,+FCLASS, +W OK	Display the range of AT commands supported by FOMA terminal in the "+GCAP : <n>" format. n+=CGSM : Support GSM commands (including the case for supporting a part) n+=FCLASS : Support +FCLASS commands n+=W : Support +W commands

Upper slot : Command Lower slot : Example	Description
AT+GMI AT+GMI FUJITSU OK	Display FOMA terminal manufacturer name.
AT+GMM AT+GMM FOMA F05C OK	Display model name of FOMA terminal.
AT+GMR AT+GMR Ver1.00 OK	Display FOMA terminal version.
AT+IFC=<n,m>* AT+IFC=2,2 OK	Set how to control local flow between a PC and FOMA terminal. n, m=0 : No flow control n, m=1 : Perform XON/XOFF flow control n, m=2 : RS/CS (RTS/CTS) Perform flow control (default) AT+IFC? : Display the current settings and status in the "+IFC : <n>,<m>" format (n is the value of DCE by DTE, and m is the value of DTE by DCE) AT+IFC=? : List of the settable values is displayed
AT+WS46=<n>* 	Display wireless network used when sending communication in n number. When entering AT+WS46=<n>, ERROR is returned because it cannot be changed. n=25 : 3G network (FOMA) (default) AT+WS46? : Display current settings AT+WS46=? : Display a list of assignable values
AT¥S AT¥S E1 Q0 V1 X4 &C1 &D2 &S0 . . . (snip) . . . S104=001 OK	Display the currently set commands and S register settings.
AT¥V<n>* AT¥V0 OK	Set whether to use expanded result codes when connection is made. n=0 : Not use expanded result codes (default) n=1 : Use expanded result codes
+++ +++ (not displayed) OK	Move from online data mode to online command mode when entered during a communication. The escape guard interval is 1 second (fixed value).

*1 Registered in FOMA terminal by &W command.

*2 Not reset by &F and Z commands.

*3 When Z command is executed before the &W command, the terminal is reset to the last status registered in memory, and prior changes are erased.

◆ Disconnection reason list

■ Packet communication

Value	Description
26	APN is not present or is incorrect.
27	
30	Disconnected by network.
33	Terminal does not subscribe to packet communication.
36	Normal disconnection.

■ 64K data communication

Value	Description
1	Specified number does not exist.
16	Normal disconnection.
17	Communication is impossible because remote device is busy.
18	You made a call but did not receive a response within the specified time.
19	The remote device is called but no response.
21	The remote device rejected incoming calls.
63	The service and option of the network are not valid.
65	Unavailable processing speed was specified.
88	You made a call to a terminal or received a call from a terminal with different terminal properties.

◆ Error messages list

No.	Text display	Description
10	SIM not inserted	UIM is not set.
15	SIM wrong	Other than DOCOMO SIM (IC card equivalent to UIM) is inserted.
16	incorrect password	Incorrect password
100	unknown	Unknown error

◆ Supplement to AT command

- <cid> is the number used to control dialup connection (APN) for packet communication to be registered in FOMA terminal. "1-10" can be registered in FOMA terminal.
- By default, the following APNs are registered in cid1-4.
cid1 : mopera.ne.jp (APN mopera, PPP connection)
cid2 : mopera.net (APN mopera U, PPP connection)
cid3 : mopera.net (APN mopera U, IP connection)
cid4 : mpr.ex-pkt.net (APN mopera U, PPP connection, 128K communication)
- <APN> is an optional string for each connection to indicate dialup connection.

■ Command name : +CGDCONT=[parameter]

• Outline

Set dialup connection (APN) for packet communication.

• Format

+CGDCONT= [<cid> [, "<PDP_TYPE>" [, "<APN>"]]]

• Parameter description

<cid> : 1-10

<PDP_TYPE> : IP or PPP

<APN> : Optional

• Example of execution

The command used to register an APN named "abc" for PPP connection (when <cid>=5).

AT+CGDCONT=5,"PPP","abc" 

OK

• Operation performed when parameter is omitted

AT+CGDCONT= : Return all <cid> to the setting by default.

AT+CGDCONT=<cid> : Return the specified <cid> to the setting by default.

AT+CGDCONT? : Display current settings.

AT+CGDCONT=? : Display a list of assignable values.

■ Command name : +CGEQMIN=[parameter]

• Outline

Set the criteria for judging whether to permit QoS (Quality of Service) provisioned by the network when packet communication is established.

• Format

AT+CGEQMIN= [<cid> [,,<Maximum bitrate UL> [,<Maximum bitrate DL>]]]

• Parameter description

<cid> : 1-10

<Maximum bitrate UL> : None (default) or 384

<Maximum bitrate DL> : None (default) or 7,232

* For <Maximum bitrate UL> and <Maximum bitrate DL>, the maximum communication speed (kbps) is set for both upload and download traffic between FOMA terminal and the base station. If the parameter is set to "None (default)", all speeds are permissible. If "384" and "7,232" are set, any connection at a speed less than the above limit is not permitted, and chances are that packet communication will not be connected.

• Example of execution

- Command used to permit all speeds both upload and download (when <cid>=5)

AT+CGEQMIN=5 [↵]

OK

- Command used to permit only 384kbps upload and 7,232kbps download (when <cid>=6)

AT+CGEQMIN=6,,384,7232 [↵]

OK

- Command used to permit only 384kbps upload and all speeds download (when <cid>=7)

AT+CGEQMIN=7,,384 [↵]

OK

- Command used to permit all speeds upload and only 7,232kbps download (when <cid>=8)

AT+CGEQMIN=8,,,7232 [↵]

OK

• Operation performed when parameter is omitted

AT+CGEQMIN= : Returns all <cid> to the setting by default.

AT+CGEQMIN=<cid> : Returns the specified <cid> to the setting by default.

AT+CGEQMIN? : Displays current settings.

AT+CGEQMIN=? : Displays a list of assignable values.

■ Command name : +CGEQREQ=[parameter]

• Outline

Set QoS (Quality of Service) requested to the network at the transmission of packet communication.

• Format

AT+CGEQREQ= [<cid>]

• Parameter description

Only commands that require connection at 64-384kbps upload, 64-7,232kbps download can be set. The contents are set by default for each <cid>.

<cid> : 1-10

• Example of execution

(when <cid>=3)

AT+CGEQREQ=3 [↵]

OK

• Operation performed when parameter is omitted

AT+CGEQREQ= : Returns all <cid> to the setting by default.

AT+CGEQREQ=<cid> : Returns the specified <cid> to the setting by default.

AT+CGEQREQ? : Displays current settings.

AT+CGEQREQ=? : Displays a list of assignable values.

◆ Result codes

- When ATV command is set to n=1 (default), the result code is displayed in alphabetic characters. When the command is set to n=0, the result code is displayed numerically.→P27

■ Result codes

No.	Text display	Meaning
0	OK	Operation performed normally
1	CONNECT	Terminal connected to other party
2	RING	Incoming call
3	NO CARRIER	Line disconnected
4	ERROR	Unable to accept command
6	NO DIALTONE	Unable to detect dial tone
7	BUSY	Detecting the busy tone
8	NO ANSWER	Completed connection Time-out
100	RESTRICTION	Network restriction in place (The communication network is busy. Please wait for a while and retry.)
101	DELAYED	Redial call restricted

■ Extended result code

- When AT&E is set to n=0

No.	Text display	Connection speed between FOMA terminal and base station
122	CONNECT 64000	64000bps
125	CONNECT 384000	384000bps
133	CONNECT 3648000	3648000bps
135	CONNECT 7232000	7232000bps

- When AT&E is set to n=1

No.	Text display	Connection speed between FOMA terminal and a PC
5	CONNECT 1200	1200bps
10	CONNECT 2400	2400bps
11	CONNECT 4800	4800bps
13	CONNECT 7200	7200bps
12	CONNECT 9600	9600bps
15	CONNECT 14400	14400bps
16	CONNECT 19200	19200bps
17	CONNECT 38400	38400bps
18	CONNECT 57600	57600bps
19	CONNECT 115200	115200bps
20	CONNECT 230400	230400bps
21	CONNECT 460800	460800bps

* To retain compatibility with a modem connected via conventional RS-232C, communication speed is displayed, but it differs from the actual connection speed because FOMA terminal is connected to a PC with a USB cable.

■ Communication protocol result code

No.	Text display	Meaning
1	PPPOverUD	Connect via 64K data communication (BC=UDI, +CBST=116,1,0)
3	AV64K	Connect via 64K videophone
5	PACKET	Connect via packet communication

■ Display example of result code

When ATX0 is set

Regardless of the settings of AT¥V command, only "CONNECT" is displayed upon completion of connection.

Text display example : ATD * 99 * * * 1#
CONNECT

Number display example : ATD * 99 * * * 1#
1

When ATX1 is set

- When ATX1, AT¥V0 (default) is set

Upon completion of connection, the result code is displayed in the following format : "CONNECT <speed between FOMA terminal - PC>".

Text display example : ATD * 99 * * * 1#
CONNECT 460800

Number display example : ATD * 99 * * * 1#
1 21

- When ATX1, AT¥V1 is set*1

The code is displayed upon completion of connection in the following format.

"CONNECT<speed between FOMA terminal - PC><Communication protocol><dialup connection (APN)>/<upstream maximum speed (between FOMA terminal→radio base station)>/<downstream maximum speed (between FOMA terminal←radio base station)>"*2

Text display example : ATD * 99 * * * 1#

CONNECT 460800 PACKET mopera.ne.jp/384/7232

(Indicates the terminal is connected to mopera.ne.jp providing a maximum upload speed of 384kbps and a maximum download speed of 7,232kbps.)

Number display example : ATD * 99 * * * 1#
1 21 5

*1 When ATX1 and AT¥V1 are set at the same time, it is likely that dialup connection will fail. It is recommended that only AT¥V0 be used.

*2 When AT¥V1 is set, <dialup connection (APN)> and the following are displayed only when packet is used for connection.

Kuten Code List

For entering characters using code, see "Entering characters using code" in the attached manual.
Note that some characters in the code input list may look different from actual ones.

1st -3rd	4th digit of code									1st -3rd	4th digit of code									1st -3rd	4th digit of code											
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9
010	!	>	<	>	<	〃	〃	〃	〃	〃	081	上	十	一	一	一	一	一	一	一	一	一	203	款	汗	漢	潤	瀧	環	監	看	
011	<	>	<	>	<	〃	〃	〃	〃	〃	082	十	一	一	一	一	一	一	一	一	一	一	204	諫	管	緩	沽	輪	肝	鑑	觀	
012	<	>	<	>	<	〃	〃	〃	〃	〃	083	十	一	一	一	一	一	一	一	一	一	一	205	諫	員	選	岡	閑	閑	閑	閑	
013	<	>	<	>	<	〃	〃	〃	〃	〃												206	館	館	館	館	館	館	館	館	館	
014	<	>	<	>	<	〃	〃	〃	〃	〃	130	①	②	③	④	⑤	⑥	⑦	⑧	⑨		207	廣	雁	頭	願	願	願	願	願	願	
015	<	>	<	>	<	〃	〃	〃	〃	〃	131	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱		208	企	奇	寄	岐	岐	岐	岐	岐	岐	
016	<	>	<	>	<	〃	〃	〃	〃	〃	132	X	I	三	三	三	三	三	三	三		209	基	旗	棋	乘	岐	岐	岐	岐	岐	
017	<	>	<	>	<	〃	〃	〃	〃	〃	133	kg	kg	kg	kg	kg	kg	kg	kg	kg		210	基	旗	棋	乘	岐	岐	岐	岐	岐	
018	<	>	<	>	<	〃	〃	〃	〃	〃	134	kg	kg	kg	kg	kg	kg	kg	kg	kg		211	紀	鬼	機	規	規	規	規	規	規	
019	<	>	<	>	<	〃	〃	〃	〃	〃	135	kg	kg	kg	kg	kg	kg	kg	kg	kg		212	紀	鬼	機	規	規	規	規	規	規	
020	<	>	<	>	<	〃	〃	〃	〃	〃	136	kg	kg	kg	kg	kg	kg	kg	kg	kg		213	紀	鬼	機	規	規	規	規	規	規	
021	<	>	<	>	<	〃	〃	〃	〃	〃	137	kg	kg	kg	kg	kg	kg	kg	kg	kg		214	紀	鬼	機	規	規	規	規	規	規	
022	<	>	<	>	<	〃	〃	〃	〃	〃	138	kg	kg	kg	kg	kg	kg	kg	kg	kg		215	紀	鬼	機	規	規	規	規	規	規	
023	<	>	<	>	<	〃	〃	〃	〃	〃	139	kg	kg	kg	kg	kg	kg	kg	kg	kg		216	紀	鬼	機	規	規	規	規	規	規	
024	<	>	<	>	<	〃	〃	〃	〃	〃												217	紀	鬼	機	規	規	規	規	規	規	
026	<	>	<	>	<	〃	〃	〃	〃	〃	160	kg	kg	kg	kg	kg	kg	kg	kg	kg		218	紀	鬼	機	規	規	規	規	規	規	
027	<	>	<	>	<	〃	〃	〃	〃	〃	161	kg	kg	kg	kg	kg	kg	kg	kg	kg		219	紀	鬼	機	規	規	規	規	規	規	
028	<	>	<	>	<	〃	〃	〃	〃	〃	162	kg	kg	kg	kg	kg	kg	kg	kg	kg		220	紀	鬼	機	規	規	規	規	規	規	
029	<	>	<	>	<	〃	〃	〃	〃	〃	163	kg	kg	kg	kg	kg	kg	kg	kg	kg		221	紀	鬼	機	規	規	規	規	規	規	
031	<	>	<	>	<	〃	〃	〃	〃	〃	164	kg	kg	kg	kg	kg	kg	kg	kg	kg		222	紀	鬼	機	規	規	規	規	規	規	
032	<	>	<	>	<	〃	〃	〃	〃	〃	165	kg	kg	kg	kg	kg	kg	kg	kg	kg		223	紀	鬼	機	規	規	規	規	規	規	
033	<	>	<	>	<	〃	〃	〃	〃	〃	166	kg	kg	kg	kg	kg	kg	kg	kg	kg		224	紀	鬼	機	規	規	規	規	規	規	
034	<	>	<	>	<	〃	〃	〃	〃	〃	167	kg	kg	kg	kg	kg	kg	kg	kg	kg		225	紀	鬼	機	規	規	規	規	規	規	
035	<	>	<	>	<	〃	〃	〃	〃	〃	168	kg	kg	kg	kg	kg	kg	kg	kg	kg		226	紀	鬼	機	規	規	規	規	規	規	
036	<	>	<	>	<	〃	〃	〃	〃	〃	169	kg	kg	kg	kg	kg	kg	kg	kg	kg		227	紀	鬼	機	規	規	規	規	規	規	
037	<	>	<	>	<	〃	〃	〃	〃	〃	170	kg	kg	kg	kg	kg	kg	kg	kg	kg		228	紀	鬼	機	規	規	規	規	規	規	
038	<	>	<	>	<	〃	〃	〃	〃	〃	171	kg	kg	kg	kg	kg	kg	kg	kg	kg		229	紀	鬼	機	規	規	規	規	規	規	
039	<	>	<	>	<	〃	〃	〃	〃	〃	172	kg	kg	kg	kg	kg	kg	kg	kg	kg		230	紀	鬼	機	規	規	規	規	規	規	
040	<	>	<	>	<	〃	〃	〃	〃	〃	173	kg	kg	kg	kg	kg	kg	kg	kg	kg		231	紀	鬼	機	規	規	規	規	規	規	
041	<	>	<	>	<	〃	〃	〃	〃	〃	174	kg	kg	kg	kg	kg	kg	kg	kg	kg		232	紀	鬼	機	規	規	規	規	規	規	
042	<	>	<	>	<	〃	〃	〃	〃	〃	175	kg	kg	kg	kg	kg	kg	kg	kg	kg		233	紀	鬼	機	規	規	規	規	規	規	
043	<	>	<	>	<	〃	〃	〃	〃	〃	176	kg	kg	kg	kg	kg	kg	kg	kg	kg		234	紀	鬼	機	規	規	規	規	規	規	
044	<	>	<	>	<	〃	〃	〃	〃	〃	177	kg	kg	kg	kg	kg	kg	kg	kg	kg		235	紀	鬼	機	規	規	規	規	規	規	
045	<	>	<	>	<	〃	〃	〃	〃	〃	178	kg	kg	kg	kg	kg	kg	kg	kg	kg		236	紀	鬼	機	規	規	規	規	規	規	
046	<	>	<	>	<	〃	〃	〃	〃	〃												237	紀	鬼	機	規	規	規	規	規	規	
047	<	>	<	>	<	〃	〃	〃	〃	〃												238	紀	鬼	機	規	規	規	規	規	規	
048	<	>	<	>	<	〃	〃	〃	〃	〃												239	紀	鬼	機	規	規	規	規	規	規	
050	<	>	<	>	<	〃	〃	〃	〃	〃	179	kg	kg	kg	kg	kg	kg	kg	kg	kg		240	紀	鬼	機	規	規	規	規	規	規	
051	<	>	<	>	<	〃	〃	〃	〃	〃	180	kg	kg	kg	kg	kg	kg	kg	kg	kg		241	紀	鬼	機	規	規	規	規	規	規	
052	<	>	<	>	<	〃	〃	〃	〃	〃	181	kg	kg	kg	kg	kg	kg	kg	kg	kg		242	紀	鬼	機	規	規	規	規	規	規	
053	<	>	<	>	<	〃	〃	〃	〃	〃	182	kg	kg	kg	kg	kg	kg	kg	kg	kg		243	紀	鬼	機	規	規	規	規	規	規	
054	<	>	<	>	<	〃	〃	〃	〃	〃												244	紀	鬼	機	規	規	規	規	規	規	
055	<	>	<	>	<	〃	〃	〃	〃	〃												245	紀	鬼	機	規	規	規	規	規	規	
056	<	>	<	>	<	〃	〃	〃	〃	〃												246	紀	鬼	機	規	規	規	規	規	規	
057	<	>	<	>	<	〃	〃	〃	〃	〃												247	紀	鬼	機	規	規	規	規	規	規	
058	<	>	<	>	<	〃	〃	〃	〃	〃												248	紀	鬼	機	規	規	規	規	規	規	
060	<	>	<	>	<	〃	〃	〃	〃	〃	183	kg	kg	kg	kg	kg	kg	kg	kg	kg		249	紀	鬼	機	規	規	規	規	規	規	
061	<	>	<	>	<	〃	〃	〃	〃	〃	184	kg	kg	kg	kg	kg	kg	kg	kg	kg		250	紀	鬼	機	規	規	規	規	規	規	
062	<	>	<	>	<	〃	〃	〃	〃	〃	185	kg	kg	kg	kg	kg	kg	kg	kg	kg		251	紀	鬼	機	規	規	規	規	規	規	
063	<	>	<	>	<	〃	〃	〃	〃	〃	186	kg	kg	kg	kg	kg	kg	kg	kg	kg		252	紀	鬼	機	規	規	規	規	規	規	
064	<	>	<	>	<	〃	〃	〃	〃	〃	187	kg	kg	kg	kg	kg	kg	kg	kg	kg		253	紀	鬼	機	規	規	規	規	規	規	
065	<	>	<	>	<	〃	〃	〃	〃	〃	188	kg	kg	kg	kg	kg	kg	kg	kg	kg		254	紀	鬼	機	規	規	規	規	規	規	
070	<	>	<	>	<	〃	〃	〃	〃	〃	189	kg	kg	kg	kg	kg	kg	kg	kg	kg		255	紀	鬼	機	規	規	規	規	規	規	
071	<	>	<	>	<	〃	〃	〃	〃	〃	190	kg	kg	kg	kg	kg	kg	kg	kg	kg		256	紀	鬼	機	規	規	規	規	規	規	
072	<	>	<	>	<	〃	〃	〃	〃	〃	191	kg	kg	kg	kg	kg	kg	kg	kg													

1st 3rd	4th digit of code									1st 3rd	4th digit of code									1st 3rd	4th digit of code								
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6
261	さ									332	ぞ									391	祢								
262	左									333	そ									392	粘								
263	差									334	す									393	乃								
264	差									335	全									394	腦								
266	差									336	曾									395	波								
267	差									337	曾									396	波								
268	差									338	曾									397	波								
269	差									339	曾									398	波								
270	差									340	曾									399	波								
271	差									341	曾									400	波								
272	差									342	曾									401	波								
273	さ									343	た									402	の								
274	使									344	他									403	乃								
275	司									345	他									404	乃								
276	司									346	他									405	乃								
277	司									347	他									406	乃								
278	司									348	他									407	乃								
279	司									349	他									408	乃								
280	司									350	他									409	乃								
281	司									351	他									410	乃								
282	司									352	他									411	乃								
283	司									353	他									412	乃								
284	司									354	他									413	乃								
285	司									355	他									414	乃								
286	司									356	他									415	乃								
287	司									357	他									416	乃								
288	司									358	他									417	乃								
289	司									359	他									418	乃								
290	司									360	他									419	乃								
291	司									361	他									420	乃								
292	司									362	他									421	乃								
293	司									363	他									422	乃								
294	司									364	他									423	乃								
295	司									365	他									424	乃								
296	司									366	他									425	乃								
297	司									367	他									426	乃								
298	司									368	他									427	乃								
299	司									369	他									428	乃								
300	司									370	他									429	乃								
301	司									371	他									430	乃								
302	司									372	他									431	乃								
303	司									373	他									432	乃								
304	司									374	他									433	乃								
305	司									375	他									434	乃								
306	司									376	他									435	乃								
307	司									377	他									436	乃								
308	司									378	他									437	乃								
309	司									379	他									438	乃								
310	司									380	他									439	乃								
311	司									381	他									440	乃								
312	司									382	他									441	乃								
313	司									383	他									442	乃								
314	司									384	他									443	乃								
315	司									385	他									444	乃								
316	司									386	他									445	乃								
317	司									387	他									446	乃								
318	司									388	他									447	乃								
319	司									389	他									448	乃								
320	司									390	他									449	乃								
321	世									391	な									450	乃								
322	性									392	な									451	乃								
323	性									393	な									452	乃								
324	性									394	な									453	乃								
325	性									395	な									454	乃								
326	性									396	な									455	乃								
327	性									397	な									456	乃								
328	性									398	な									457	乃								
329	性									399	な									458	乃								
330	性									400	な									459	乃								
331	性									401	な									460	乃								
332	性									402	な									461	乃								
333	性									403	な									462	乃								
334	性									404	な									463	乃								
335	性									405	な									464	乃								
336	性									406	な									465	乃								
337	性									407	な									466	乃								
338	性									408	な									467	乃								
339	性									409	な									468	乃								
340	性									410	な									469	乃								
341	性									411	な									470	乃								
342	性									412	な									471	乃								
343	性									413	な									472	乃								
344	性									414	な									473	乃								
345	性									415	な									474	乃								
346	性									416	な									475	乃								
347	性									417	な									476	乃								
348	性									418	な									477	乃								
349	性									419	な									478	乃								
350	性									420	な									479	乃								
351	性									421	な									480	乃								
352	性									422	な									481	乃								
353	性									423	な									482	乃								
354	性									424	な									483	乃								
355	性									425	な									484	乃								
356	性									426	な									485	乃								
357	性									427	な									486	乃								
358	性									428	な									487	乃								
359	性									429	な									488	乃								
360	性									430	な									489	乃								
361	性									431	な									490	乃								
362	性									432	な									491	乃								
363	性									433	な									492	乃								
364	性									434	な									493	乃								
365	性									435	な									494	乃								
366	性									436	な									495	乃								
367	性									437	な									496	乃								
368	性									438	な									497	乃								
369	性									439	な									498	乃								
370	性									440	な									499	乃								
371	性									441	な									500	乃								
372	性									442	な									501	乃								
373	性									443	な									502	乃								
374	性									444	な									503	乃								
375	性									445	な									504	乃								
376	性									446	な									505	乃								
377	性									447	な									506	乃								
378	性									448	な									507	乃								
379	性									449	な									508	乃								
380	性									450	な									509	乃								
381	性									451	な									510	乃								
382	性									452	な									511	乃								
383	性									453	な									512	乃								
384	性									454	な									513	乃								
385	性									455	な									514	乃								
386	性									456	な									515	乃								
387	性									457	な									516	乃								
388	性									458	な									517	乃								
389	性									459	な									518	乃								
390	性									460	な									519	乃								
391	性									461	な									520	乃								
392	性									462	な									521	乃								
393	性									463	な									522	乃								
394	性									464	な									523	乃								
395	性									465	な									524	乃								
396	性									466	な									525	乃								
397	性									467	な									526	乃								
398	性									468	な									527	乃								
399	性									469	な									528	乃								
400	性									470	な									529	乃								
401	性									471	な									530	乃								
402	性									472	な									531	乃								
403	性									473	な									532	乃								
404	性									474	な									533	乃								
405	性									475	な									534	乃								
406	性									476	な									535	乃								
407	性									477	な									536	乃								
408	性									478	な									537	乃								
409	性									479	な									538	乃								
410	性									480	な									539	乃								
411	性									481	な									540	乃								
412	性									482	な									541	乃								
413	性									483	な									542	乃								
414	性									484	な									543	乃								
415	性									485	な									544	乃								
416	性									486	な									545	乃								
417	性									487	な									546	乃								
418	性									488	な									547	乃								
419	性									489	な									548	乃								
420	性									490	な									549	乃								
421	性									491	な									550	乃								
422	性									492	な									551	乃								
423	性									493	な									552	乃								
424	性									494	な									553	乃								
425	性									495	な									554	乃								
426	性									496	な									555	乃								
427	性									497	な									556	乃								
428	性									498	な									557	乃								
429	性									499	な									558	乃								
430	性									500	な									559	乃								
431	性									501	な									560	乃								
432	性									502	な									561	乃								
433	性									503	な									562	乃								
434	性									504	な									563	乃								
435	性									505	な									564	乃								
436	性									506	な									565	乃								
437	性									507	な									566	乃								
438	性									508	な									567	乃								
439	性									509	な									568	乃								
440	性									510	な									569	乃								
441	性									511	な									570	乃								
442	性									512	な									571	乃								
443	性									513	な									572	乃								
444	性									514	な									573	乃								
445	性									515	な									574	乃								
446	性									516	な									575	乃								
447	性									517	な									576	乃								
448	性									518	な									577	乃								
449	性									519	な									578	乃								
450	性									520	な									579	乃								
451	性									521	な									580	乃								
452	性									522	な									581	乃								
453	性									523	な									582	乃								
454	性									524	な									583	乃								
455	性									525	な									584	乃								
456	性									526	な									585	乃								
457	性									527	な									586	乃								
458	性									528	な									587	乃								
459	性									529	な									588	乃								
460	性									530	な									589	乃								
461	性									531	な									590	乃								
462	性									532	な									591	乃								
463	性									533	な									592	乃								
464	性									534	な									593	乃								
465	性									535	な									594	乃								
466	性									536	な									595	乃								
467	性									537	な									596	乃								
468	性									538	な									597	乃								
469	性									539	な									598	乃								
470	性									540	な									599	乃								
471	性									541	な									600	乃								
472	性									542	な									601	乃								
473	性									543	な									602	乃								
474	性									544	な									603	乃								
475	性									545	な									604	乃								
476	性									546	な									605	乃								
477	性									547	な									606	乃								
478	性									548	な									607	乃								
479	性									549	な									608	乃								
480	性									550	な									609	乃								
481	性									551	な									610	乃								
482																													

1st -3rd	4th digit of code									1st -3rd	4th digit of code									1st -3rd	4th digit of code											
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8	9
447	紋	門	刃								510	咫	哧	哧	哧	哧	哧	哧	哧	哧	哧	588	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											511	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	589	暨	暫	罪	暎	暎	暎	暎	暎	暎	暎
447				也	夜	爺	耶	野	弥		512	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	590	暨	暫	罪	暎	暎	暎	暎	暎	暎	暎
448	矢	厄	役	約	葉	夜	詛	耶	野		513	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	591	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
449	鐘										514	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	592	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											515	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	593	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
449				愈	油	癒	佑	友	有		516	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	594	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
450	偷	偷	偷	偷	偷	偷	偷	偷	偷		517	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	595	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
451	悠	悠	悠	悠	悠	悠	悠	悠	悠		518	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	596	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
452											519	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	597	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											520	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	598	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
452	余	与	譽	與	預	備	幼	妖	容		521	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	599	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
453	揚	搖	耀	耀	耀	耀	耀	耀	耀		522	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	600	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
454	養	搖	耀	耀	耀	耀	耀	耀	耀		523	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	601	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
455	養	搖	耀	耀	耀	耀	耀	耀	耀		524	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	602	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
456											525	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	603	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											526	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	604	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
456	螺	裸	萊	賴	雷	洛	落	落	落		527	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	605	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
457	乱	卵	嵐	欄	藍	藍	藍	藍	藍		528	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	606	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
458											529	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	607	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											530	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	608	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
458	履	李	理	璃	離	離	離	離	離		531	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	609	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
459	厘	理	理	理	理	理	理	理	理		532	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	610	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
460	律	理	理	理	理	理	理	理	理		533	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	611	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
461	律	理	理	理	理	理	理	理	理		534	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	612	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
462	隆	理	理	理	理	理	理	理	理		535	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	613	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
463	隆	理	理	理	理	理	理	理	理		536	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	614	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
464	隆	理	理	理	理	理	理	理	理		537	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	615	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
465											538	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	616	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											539	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	617	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
466	壘	壘	壘	壘	壘	壘	壘	壘	壘		540	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	618	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											541	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	619	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
466	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺		542	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	620	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
467	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺		543	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	621	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
468	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺		544	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	622	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
469	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺		545	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	623	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
470	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺	嶺		546	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	624	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											547	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	625	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
470											548	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	626	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
471	露	勞	婁	魯	魯	魯	魯	魯	魯		549	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	627	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
472	勞	勞	勞	勞	勞	勞	勞	勞	勞		550	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	628	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
473	助	助	助	助	助	助	助	助	助		551	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	629	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											552	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	630	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
473											553	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	631	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
474	杵	互	互	互	互	互	互	互	互		554	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	632	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
475	腕	腕	腕	腕	腕	腕	腕	腕	腕		555	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	633	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
											556	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	634	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
480	乖	乘	丕	丕	丕	丕	丕	丕	丕		557	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	635	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
481	乖	乘	丕	丕	丕	丕	丕	丕	丕		558	咄	哧	哧	哧	哧	哧	哧	哧	哧	哧	636	戾	暫	罪	暎	暎	暎	暎	暎	暎	暎
482	乖	乘	丕	丕	丕	丕	丕	丕	丕		559	咄	哧	哧																		

[illegible]