


# Emergency Services and Safety Precautions


## Emergency Services

To make an emergency call in any country

Press 112 

Ask the operator for the service which you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Services. Give your position and, if possible, remain stationary to maintain phone contact.

The 112 emergency number service is available on every digital network service. The number 999 is an alternative emergency number for the UK only, and can only be used with a valid SIM card.

 *Due to the nature of the cellular system, the success of emergency calls cannot be guaranteed.*

## General Care

A cellphone contains delicate electronic circuitry, magnets, and battery systems. You should treat it with care and give particular attention to the following points.

- Do not allow the phone or its accessories to come into contact with liquid or moisture at any time.
- Do not place anything in the folded phone.
- Do not expose your phone to extreme high or low temperatures.
- Do not expose your phone to naked flame, cigars or cigarettes.
- Do not paint your phone.
- Do not drop or subject your phone to rough treatment.
- Do not place the phone alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the phone.
- Do not leave the phone or the battery in places where the temperature could exceed 60°C; e.g. on a car dashboard or on a window sill, behind glass in direct sunlight, etc.
- Do not remove the phone's battery while the phone is switched on.
- Take care not to allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.
- Do not dispose of battery packs in a fire. Your phone's Li-ion batteries may be safely disposed of at Li-ion recycling points. For more specific battery and power supply information, see page 3.
- Do not put your phone's battery in your mouth as battery electrolytes may be toxic if swallowed.
- Do not attempt to dismantle the phone or any of its accessories.
- This equipment is fitted with an internal battery that can only be replaced by a qualified service engineer. There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of the used battery in accordance with the manufacturer's instructions.
- Using any battery pack, AC adapter, Vehicle power adapter (option) or accessory not specified by the manufacturer for use with this phone creates a potential safety hazard.

- The earpiece may become warm during normal use and the unit itself may become warm during charging.
- Use a damp or anti-static cloth to clean the phone. Do NOT use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the case.
- Remember to recycle: the cardboard packaging supplied with this phone is ideal for recycling.
- Do not leave the battery pack empty or disconnected for a long time, otherwise some data may be initialized.
- Your phone contains metal which may cause you an itch, a rash or eczema depending on your constitution or physical condition.
- Take care not to put your phone in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them malfunction.
- Take care not to hold the Light too close to your or other people's eyes when the Light is lit.
- Do not aim or direct the InfraRed (IR) data port towards your or other people's eyes when using the IR data exchange.
- The foam covers the earpiece of the headset. Do not put any other part of the headset in your ears.

## Aircraft Safety

- Switch off your phone and remove its battery when inside or near aircraft. The use of cellphones in aircraft is illegal. It may be dangerous to the operation of the aircraft and it may disrupt the cellular network. Failure to observe this instruction may lead to suspension or denial of cellphone service to the offender, or legal action, or both.
- Do not use your phone on the ground without the permission of the ground crew.

## Hospital Safety

- Switch off your phone in areas where the use of cellphones is prohibited. Follow the instructions given by the respective medical facility regarding the use of cellphones on their premises.

## General Safety

- Observe 'Turn off 2-way radio' signs, such as those near stores of fuel, chemicals or explosives.
- Do not allow children to play with the phone, charger or batteries.
- Small parts are included in your phone. Keep them out of reach of small children, for whom it could be a choking hazard.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a cellphone is used next to them. Observe any warning signs and manufacturer's recommendations.
- If you have a weak heart, you should take extra precautions when setting functions such as the Vibrator and Ringer volume functions for incoming calls.
- If you set the Vibrator setting to anything other than OFF, be careful that the phone is not near a source of heat (e.g. a heater) and that it does not fall from a desk due to the vibration.

## Road Safety

- You MUST exercise proper control of your vehicle at all times. Give full attention to driving.
- Observe all the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call if driving conditions so require.
- You MUST NOT stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Switch off your phone at a refuelling point, such as a petrol station, even if you are not refuelling your own car.
- Do not store or carry flammable or explosive materials in the same compartment where a radio transmitter, such as a cellphone, is placed.
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not switch on your phone until it has been checked by qualified approved installers.

## Vehicles Equipped with an Air Bag

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by NEC, may invalidate the warranty of your cellphone and also adversely affect the phone's operation. For example use only the NEC mains cable supplied with the AC charger.

## Service

The cellphone, batteries and charger contain no user-serviceable parts. We recommend that your NEC cellphone is serviced or repaired by an NEC authorized service centre. Please contact your Service Provider or NEC for advice.

## Non-ionizing Radiations

The radio equipment shall be connected to the antenna via a non-radiating cable (e.g. coax). The antenna shall be mounted in a position such that no part of the human body will normally rest close to any part of the antenna unless there is an intervening metallic screen, for example, the metallic roof.

Use only an antenna that has been specifically designed for your phone. Use of unauthorized antennas, modifications or attachments could damage your phone and may violate the appropriate regulations, causing loss of performance and radio frequency (RF) energy above the recommended limits.

## Efficient Use

For optimum performance with minimum power consumption, note the following:

- Your phone has the internal antenna. Do not cover part of the internal antenna of the phone with your hands. This affects call quality, may cause the phone to operate at a higher power level than needed and may shorten talk and standby times.

## Radio Frequency Energy

Your phone is a low-power radio transmitter and receiver. When it is turned on, it intermittently receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call controls the power level at which the phone transmits.

## Exposure to Radio Frequency Energy

Your phone is designed not to exceed the limits for exposure to RF energy set by national authorities and international health agencies. \* These limits are part of comprehensive guidelines and establish permitted levels of radio wave exposure for the general population. The guidelines were developed by independent scientific organizations such as ICNIRP (International Commission on Non-ionizing Radiation Protection) through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

\* Examples of radio frequency exposure guidelines and standards that your phone is designed to conform to:

- ICNIRP. "Guidelines for limiting exposure to time-varying electric, magnetic, and electromagnetic fields (up to 300 G Hz)-International Commission on Non-ionizing Radiation Protection (ICNIRP)". Health Physics, vol. 74. pp. 494-522, April 1998.
- 99/519/EC Council Recommendation on the limitation of exposure to the general public to electromagnetic fields 0 Hz-300 GHz, Official Journal of the European Communities, July 12, 1999.
- ANSI/IEEE C95.1-1992. "Safety levels with respect to human exposure to radio frequency electromagnetic fields, 3kHz to 300 GHz". The Institute of Electrical and Electronics Engineers Inc., New York, 1991.
- FCC Report and Order, ET Docket 93-62, FCC 96-326, Federal Communications Commission (FCC), August 1996.
- Radio communications (Electromagnetic Radiation Human Exposure) Standard 2003, Australian Communications Media Authority.

## Declaration of Conformity

- This product complies with the requirements of the R&TTE Directive 1999/5/EC. The 'Declaration of Conformity' leaflet can be found within this box.

## Disposing of your used NEC product



### • In the European Union

EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes mobile telephones or electrical accessories, such as chargers or headsets. When you dispose of such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product. The mark on the electrical and electronic products only applies to the current European Union Member States.

### • Outside the European Union

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority and ask for the correct method of disposal.

## Licenses

- T9® Text Input and the T9 logo are registered trademarks of Tegic Communication.  
\*T9 Text Input is licensed under one or more of the following:  
U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162; 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide\*
- RSA™ is a registered trademark of RSA Data Security Inc.
- OPENWAVE™ is a registered trademark of Openwave Systems Inc.
- USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION ENCODED BY A CONSUMER FOR PERSONAL AND NON-COMMERCIAL USE WITHOUT REMUNERATION; (B) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (C) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.
- Helvetica is a registered Trademark of Heidelberger Druckmaschinen AG which may be registered in certain jurisdictions.
- Powered by Mascot Capsule®/Micro3D Edition™
- ©2002 Music Airport Inc., <http://www.music-airport.com/>
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc in the U.S. and other countries.
- Copyright 2005 Aplix Corporation and eSOL Co., Ltd. All Rights Reserved.
- This Mobile Printing Ready product is designed to provide easy printing from mobile phones. This product follows Mobile Imaging and Printing Consortium (MIPC) guidelines version 1.0 for PictBridge.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by NEC is under license. Other trademarks and trade names are those of their respective owners.
- This product contains ACCESS CO., LTD's IrFront® Infrared communication software. Copyright ©1996-2005 ACCESS CO., LTD

For the purpose of improvement, the specifications for this product and its accessories are subject to complete or partial change without prior notice.


# Before You Start

## User's manual conventions

The instructions in this user's manual make use of the shortcuts selection except special cases.

**The following markers are used throughout the user's manual to attract your attention:**

 This type of paragraph will contain details of where to find information related to the topic in question.


 This type of paragraph will contain information worth noting.

 **This type of paragraph will contain important information.**


 This type of description will contain procedures to operate your phone.

## Menu shortcuts selection

The alternative shortcuts method of selection lets you jump straight to a menu or function without highlighting an icon and scrolling through the intermediate menu options. The selection is made by pressing numbers which relate to the displayed menu options.


 The instructions in this user's manual make use of the shortcuts selection, except in special cases.

## Reading the titles

Some titles in this manual contain information on how to access the functions. In these titles, **M** stands for , the numbers indicate the menu shortcut numbers (see "Overview of menu function" on page x for details) and ... (three periods) indicate that there are more operations described in the paragraph.

## Reading the procedures


**"Highlight"** means to use the four way navigation keys () to move the area emphasized with different colouring.

**"Select"** means to highlight an item and then press .

Procedures are written omitting the verb "press", except in some special cases.

For example,  1 2 means to:

-  Start from the standby screen → Press  to display the Main menu screen
-  Press 1 to display the Settings screen → Press 2 to display the Phone modes screen

Simple procedures are connected by arrows ()

## Check box/Radio button

A check box enables/disables an option out of a set of options, and multiple check boxes can be selected at the same time. On the other hand, selecting a radio button automatically cancels the previous selection, so only one radio button can be selected at one time.

A check box/radio button option can be selected/cancelled by highlighting it and pressing .

### Desktop icon area

This area contains the automatically displayed and the manually created desktop icons. They provide shortcuts to certain items/functions.

### Help area

This area contains clock information and help information appropriate for the current screen (e.g. key presses remaining when composing a message).

### SK1/SK2

This area contains context sensitive descriptions of the Softkeys' functions appropriate for the current screen.

### Status bar area

This area contains icons which indicate the battery strength, new SMS/MMS message(s), signal strength, etc. (see page viii).

### Shortcut number

Press the appropriate number to jump straight to a next menu. The row colour is changed when selected (e.g. to activate/deactivate a facility).

### Menu title



### Shortcut menu number

The current menu number is displayed.

### Page scroll bar

Displayed when you can press ▼ to scroll to the next page.

### Next menu icon


Displayed when you can press ► or the shortcut number to show the next menu.

### Help icons

Displayed when you can use the key represented by these icons (see page viii).





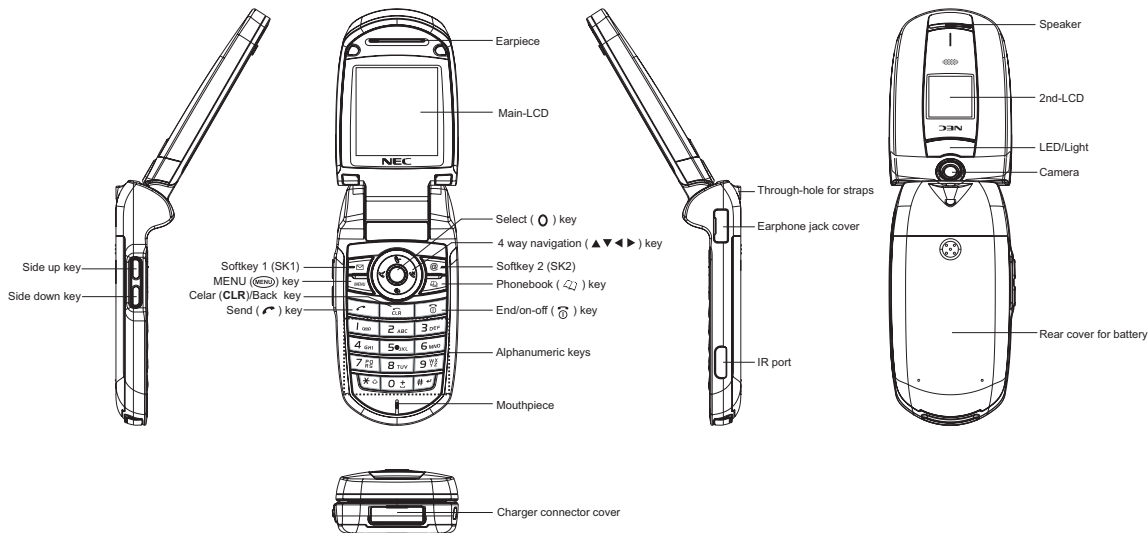






*The Liquid Crystal Displays (LCD) on your phone are manufactured using high-precision technology. Even so, the LCD may contain pixels (dots) that fail to light or that remain permanently lit. Note that this is normal and does not indicate a problem with your display.*



**Be careful not to put your finger or foreign objects in the hinge of the phone when your phone is opened.**

## Keypad shortcuts

The following operations are available from the standby screen.

Key	Operation that involves pressing a key	See page	Operation that involves pressing and holding a key	See page
	Accessing the Main menu screen	x	Setting/Canceling the <b>Side</b> key lock	21
<b>SK1</b>	Accessing the Message screen	28	Accessing the Msg type screen to create a new message	34
<b>SK2</b>	Accessing the Web browser	40	–	–
	Accessing the Phonebook list screen	45	–	–
	Accessing the Phone modes screen	22	Setting the phone to Meeting mode/Returning to the previous mode	22
	Accessing the My data screen	59	Accessing the voice recall	8
	Accessing the received calls list	12	–	–
	Accessing the missed calls list	12	–	–
	Accessing the dialled calls list	12	–	–
	Highlighting a desktop icon	19	–	–
	Ending a call or returning to the standby screen	–	Powering off	5
<b>CLR</b>	Canceling the Cell Broadcast message display	39	Deleting all the automatically displayed desktop icons	19
	Deleting character or returning to the previous screen	–	Deleting all characters when you enter text	–
<b>1</b>	Entering phone numbers	6	Calling the Voice mail centre	52
<b>2 to 9</b>	Entering phone numbers	6	One-touch dial to the corresponding number in the phonebook(SIM)	8
<b>0</b>	Entering phone numbers	6	Entering + when you make an international call	14
<b>#</b>	Entering #	6	Entering a pause	–
<b>*</b>	Entering *	6	Switching the ALS line 1/2 (If the SIM card supports ALS)	21
<b>Side up</b>	Accessing the volume control screen when your phone is open (Use <b>▲ ▼, Side</b> keys or <b>0 to 9</b> keys to adjust the volume.)	21	Accessing the camera view finder screen	53
	Activating the ring silencer function when you receive a call	21		
<b>Side down</b>	Accessing the volume control screen when your phone is open (Use <b>▲ ▼, Side</b> keys or <b>0 to 9</b> keys to adjust the volume.)	21	Turning on the light (To turn it off, press any key or open/close your phone.)	–
	Activating the ring silencer function when you receive a call	21		

## Main-LCD



- 1** Indicates the battery level.  
 Indicates the battery charging status (fast, slow, stop).
- 2** Indicates that there is a new SMS in your phone.  
 Indicates that there is a new SMS on the network.  
 Indicates that the SIM memory is full.  
 Indicates that the Inbox in your phone is full.
- 3** Indicates that there is an MMS on the server.
- 4** Indicates that you have received an alert message.

- 5** Indicates secured communication on WTLS in WAP browsing.
- 6** (pink, blue)  
Pink indicates that PDP Context is activated, and blue indicates the connection with GPRS network.
- 7** Indicates that Bluetooth is set to on, Bluetooth is in operation, IR modem is set to on.
- 8** Indicates the line status (No ALS or ALS Line 1/ ALS Line 2). The icon with displayed in red indicates that the ALS line 1 or 2 is unencrypted/ no ALS.
- 9** Indicates the signal strength level.  
 Appears when you are outside the service area.
- 10** Network name (indicated in orange when using roaming service)
- 11** Desktop icons  
See "Desktop icons" on page 19 for details
- 12** (red, green/red, green)  
Indicates that new voice mail messages are on the network (No ALS or ALS Line 1/ALS Line 1 and 2/ALS Line 2).  
 Indicates the call diversion is set.  
 Indicates the Meeting mode, Pocket mode, Car mode.  
 No icon appears for the Normal mode.

- Java™ application for the standby screen is suspended.
- 13** Date
- 14** Day of week
- 15** Remote time
- 16** Local time
- 17** Indicates that you can use the options menu by pressing .  
 Indicates that you can use the phonebook list by pressing .  
 Indicates that the help display is available by pressing when using SIM toolkit.

### <When the camera/video view finder is in operation>

- 2** Indicates single/burst mode (camera).  
 Indicates the video mode is on or the video is recording.
- 3** Indicates that the self timer is on.
- 4** Indicates the quality of the picture (super fine, fine, normal, economy or super economy).  
 Indicates the quality of the video.
- 5** Indicates the photo/video screen size.
- 6** Indicates the shooting environment.



Indicates the brightness setting. The "+2" setting is the brightest.



Indicates the zoom level.

### <When the video preview is in operation>



Indicates the video mode is set to on, the video is playing, on pause, fast forwarding, or rewinding.



Indicates the track information of the video (the video only, the audio only, and the video and audio).



Indicates the video is played in normal/enlarged screen size.



Displays the current volume level. The 0 is mute and 9 is the maximum.

## 2nd-LCD



7



Indicates the battery level.



Indicates the battery charging status (fast, slow, stop).



Indicates that there is a new SMS in your phone.



Indicates that there is a new SMS on the network.



 
Indicates that the SIM memory is full.



Indicates that the Inbox in your phone is full.



Indicates that there is an MMS on the server.



Indicates that a new voice mail message is on the network (No ALS or ALS Line 1/ALS Line 1 and 2/ALS Line 2).



Indicates the Bluetooth is on, Bluetooth is in active, IR modem is set to on.




Indicates the signal strength level.



Appears when you are outside the service area.



Indicates that the phone is in the Meeting/Pocket/Car mode.

 No icon appears for the Normal mode.

### <When 2nd-LCD is used as the camera view finder screen>



Indicates the battery level.



Indicates the battery charging status (fast, slow, stop).



Indicates single or burst mode of the camera.



Indicates that the video mode is on or the video is recording.



Indicates the photo/video screen size.

 



Indicates that the self timer is on.

## Overview of menu function

Standby screen

Main menu screen

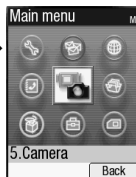

The Main menu has a set of icons for its top levels of options which can be selected either using a combination of the 4-way navigation key (▲▼◀▶) and ○ (menu selection), or just the keypad (shortcuts selection).

- ☞ The title of the selected option will be displayed in the Help area.
- ☞ SIM toolkit icon is displayed only when your SIM card supports this function.
- ☞ With the Main menu screen displayed, 0 to display your own number.

Key	Main menu	Second level menu
1	Settings	Phone Phone modes Main-LCD 2nd-LCD Power saving Calls Security Network Connection profile Reset settings
2	Message	Inbox Drafts Outbox Sent Alert inbox CB Folder1 Folder2

Key	Main menu	Second level menu
3	Web browser	Internet Bookmark Snapshot Alert message Settings
4	Phonebook	Lists Information # Call options
5	Camera	Camera Video recorder
6	My data	Videos Sounds Pictures MP3

Key	Main menu	Second level menu
7	Java™	Applications Network setting Resident setting Storage info
8	Accessory	MP3 player Calculator Clock alarm Scheduler ToDo list Notepad Voice memo Currency External connection Synchronization
9	SIM toolkit	

<i>Getting Started</i>	<i>1</i>
<i>Basic Calls &amp; Phone Use</i>	<i>6</i>
<i>Text Entry</i>	<i>16</i>
<i>Desktop icons</i>	<i>19</i>
<i>Settings (M1)</i>	<i>21</i>
<i>Message (M2)</i>	<i>28</i>
<i>Web browser (M3)</i>	<i>40</i>
<i>Phonebook (M4)</i>	<i>45</i>
<i>Camera (M5)</i>	<i>53</i>
<i>My data (M6)</i>	<i>59</i>
<i>Java™ (M7)</i>	<i>65</i>
<i>Accessory (M8)</i>	<i>67</i>
<i>Bluetooth (M891)</i>	<i>76</i>
<i>IR Data Exchange</i>	<i>79</i>
<i>Index</i>	<i>81</i>

**Emergency Services and Safety Precautions i****Before You Start iv**

User's manual conventions.....	iv
Display information .....	v
Parts and functions .....	vi
LCD and displayed icons .....	viii
Overview of menu function .....	x

**Getting Started 1**

Preparing the phone .....	1
Standby and talk times .....	4
Checking the battery .....	4
Low battery alarm .....	4
Other battery alarms .....	4
Start-up .....	4

**Basic Calls & Phone Use 6**

Making basic calls.....	6
Ending a call .....	6
Receiving an incoming call .....	6
Unsuccessful calls .....	7
Emergency calls .....	7
Last number redial .....	7
One-touch dial .....	8
Fast dialling.....	8
Displaying your own phone number (M0/M416).....	8
Voice recall .....	8
Options menu (during a call).....	9
Putting a call on hold .....	9
Mute.....	9

Call transfer .....	10
Multi-party calls.....	10
Recording a call.....	11
Scratchpad number .....	11
Call options (M43).....	11
Call settings (M16).....	13
International dialling codes .....	14
Roaming .....	15

**Text Entry 16**

Mode change .....	16
T9® English text input.....	16
Normal text input.....	17
Numeric input.....	17
Key allocations.....	18

**Desktop icons 19****Settings (M1) 21**

Phone (M11).....	21
Phone modes (M12) .....	22
Main-LCD (M13) .....	24
2nd-LCD (M14) .....	24
Power saving (M15).....	24
Calls (M16) .....	25
Security (M17) .....	25
Network (M18) .....	26
Connection profile (M19) .....	26
Reset settings (M10).....	27

<b>Message (M2)</b>	<b>28</b>	MP3 (M64) .....	62
Message overview .....	28	File selector Options menu .....	62
Reading a message (M21) .....	29	<b>Java™ (M7)</b>	<b>65</b>
Options menus .....	30	Applications (M71) .....	65
Creating a message .....	34	Network setting (M72) .....	65
Cell broadcast (M26) .....	39	Resident setting (M73) .....	65
<b>Web browser (M3)</b>	<b>40</b>	Storage info (M74) .....	66
What can I download .....	40	<b>Accessory (M8)</b>	<b>67</b>
Web settings .....	40	MP3 player (M81) .....	67
Logging on to WAP site .....	42	Calculator (M82) .....	68
Other features .....	43	Clock alarm (M83) .....	68
NEC Web site .....	43	Scheduler (M84) .....	69
GPRS dial up .....	44	ToDo list (M85) .....	70
<b>Phonebook (M4)</b>	<b>45</b>	Notepad (M86) .....	72
Phonebook types .....	45	Voice memo (M87) .....	73
Accessing your phonebook (M4) .....	46	Currency (M88) .....	74
Phonebook list Options menu .....	47	External connection (M89) .....	74
Personal data Options menu .....	51	Synchronization (M80) .....	75
Voice mail (M417) .....	52	<b>Bluetooth (M891)</b>	<b>76</b>
<b>Camera (M5)</b>	<b>53</b>	Using Bluetooth connection .....	76
Notes on using the camera .....	53	<b>IR Data Exchange</b>	<b>79</b>
Taking a picture (M51) .....	54	Positioning of the phones .....	79
Recording a video (M52) .....	56	IR send .....	79
<b>My data (M6)</b>	<b>59</b>	IR receive (M8921) .....	80
Videos (M61) .....	59	IR modem (M8922) .....	80
Sounds (M62) .....	59	<b>Index</b>	<b>81</b>
Pictures (M63) .....	60		

# Memo

# Getting Started






## Preparing the phone

Before trying to use your phone, make sure that a valid Subscriber Identity Module (SIM) card is inserted and the battery is charged.









### SIM card


Before using your phone, you must sign-up with one of the digital network service providers. In addition to your subscription details you will receive a personal SIM (Subscriber Identity Module) card which is inserted into your phone.

If the SIM card is removed, the phone becomes unusable until a valid SIM card is fitted. It is possible to transfer your SIM card to another compatible phone and resume your network subscription. The screen on your phone will display appropriate messages if no SIM card is fitted.

-  **If the phone, or the SIM card, is lost or stolen then you should contact your service provider immediately in order to bar it from use.**
-  *The phone supports a number of languages and the keyboard symbols have been chosen for world-wide operation.*
-  *The digital technology of your phone helps to ensure that your conversations are kept secure.*
-  *The SIM card contains personal data such as your electronic phonebook, messages (see "Message (M2)" on page 28) and also details of the network services you have subscribed to. The phone will not work (except for emergency calls on some networks) unless a valid SIM card is fitted.*
-  **Be sure to turn the phone off before inserting and removing a SIM card. Otherwise damage to the SIM card can occur.**

### Inserting a SIM card


-  **Be sure to turn the phone off before removing the battery pack.**
  -  While pressing down the areas marked with  of the rear cover as indicated by arrow ①, slide the rear cover about 3 mm in the direction of arrow ② with your finger tip. Then, lift the cover up in the direction of arrow ③ to remove it.
  -  Lift the finger tab of the battery pack up in the direction of arrow ④. Then lift the battery pack out in the direction of arrow ⑤.
  -  With the metal part facing down, insert the straight end of the SIM card under the holder in the direction of arrow ⑥. Slide the SIM card all the way until it reaches the end.
-  **Be careful not to damage electric parts of the SIM holder when inserting a SIM card.**
  -  Insert the two tabs on the battery pack into the slots on the phone in the direction of arrow ⑧, making sure that the tabs on the battery pack fit properly into the slots on the phone. Then, press the battery pack down in the direction of arrow ⑨ to clip it into the phone.
  -  Make sure that the battery pack is securely attached to the phone and align the rear cover with the grooves on the phone so that there is a gap of about 3 mm at the end of the cover. After making sure that there is no gap between the rear cover and the phone body, slide the rear cover in the direction of arrow ⑩ until you hear a click.

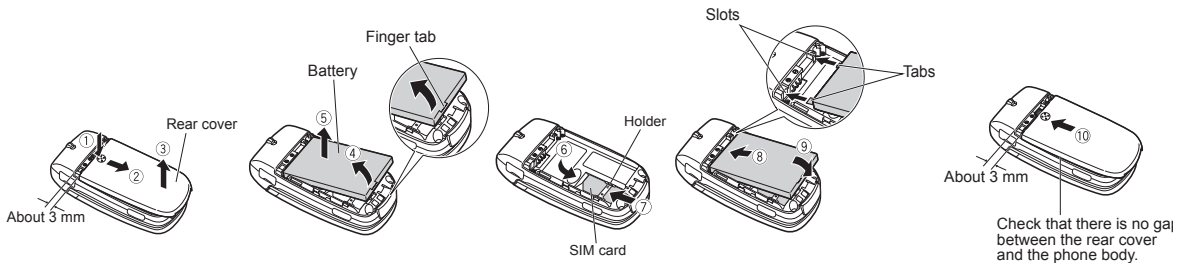


 **If the SIM card is not fully inserted when the battery is replaced, damage to the SIM card can occur.**

 **If the SIM card is already fitted, see “Start-up” on page 4.**

## Removing a SIM card

 With the battery removed, push the short and straight end of the SIM card with your thumb to slide it gently in the direction of arrow ⑦ → Lift the SIM card after it is completely removed from the holder.

 **Be careful not to damage electric parts of the SIM holder when removing a SIM card.**

## Charging the battery

Before trying to use your phone, insert the phone's battery and connect the NEC battery charger (AC adapter) supplied with your phone to a suitable mains power socket.

☞ Pull open the charger connector cover gently.

☞ **Be careful when handling the charger connector cover. Do not pull strongly.**

☞ With the arrow marks of the charger plug facing up, hold the buttons on both sides of the charger plug with your thumb and index finger.

☞ Press the buttons as indicated by the arrow marks on the charger plug and insert the plug into the charger connector.

☞ **Make sure to insert the charger plug with the arrow marks facing up. Otherwise, damage to the charger connector can occur when disconnecting the charger plug.**

☞ If your phone is turned on and charging starts, the battery charging icon will be displayed. LED will turn on in red while charging. When charging is complete, the LED will turn off.


☞ If you are recommended to switch off the phone while charging. If you need to receive calls, your phone can be switched on and left in standby while being charged, although the total time taken to charge is then increased.


☞ After the charging is complete, press the buttons of the charger plug as indicated by the arrow marks on the charger plug (①) and gently pull straight out of the charger connector (②).

☞ **Make sure to press both buttons when disconnecting the charger plug from the charger connector. If you pull the charger plug forcibly without pressing the buttons, damage to the charger connector can occur.**

The icons show the charging status of battery.

 Fast battery charging

 Slow battery charging while the phone is in use

 Battery charging stopped due to overheat

☞ **Using any battery pack, AC adapter, vehicle power adapter (option) not specified by NEC for use with this phone can be dangerous and may invalidate any warranty and approval given to the cellphone. Do not leave the charger connected to the mains supply when it is not in use.**

☞ **Do not try to charge the battery if the ambient temperature is below 5°C (41°F) or above 35°C (95°F).**

☞ **DO NOT connect a charger or any other external DC source until the phone's battery is inserted.**


☞ If the phone does not respond, please wait for a few minutes. The charging will then start.

☞ If you use the phone while charging, handle the phone carefully since the cable or adapter is connected.


☞ If you make/receive a call while charging, the charging may temporarily be interrupted.

☞ Charging takes approximately 3 hours with your phone turned off.

☞ Even if the phone remains connected to the charger, battery residual capacity may decrease when the phone is used for video recording, playing or other battery consuming operation.

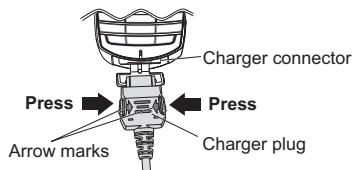

Make sure to hold the charger plug with the arrow marks facing up and press both buttons.

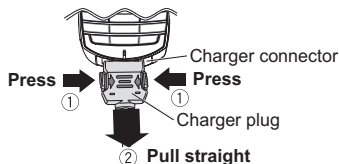

Make sure to press both buttons and gently pull the charger plug straight.



## IMPORTANT BATTERY CHARGING INFORMATION

### Charging a very low battery

The battery's charge continues to drop after the low battery warning is displayed. In extreme cases where the battery is left uncharged for some considerable time after this warning, a trickle charge is used to slowly top-up the battery to the safe level at which the fast charging can begin. The phone can be in trickle charge for a few minutes before the fast charging starts.

## Standby and talk times

Your phone works closely with the network you are using to provide the services you need, and the standby and talk times achieved will depend on how you use the phone and choices made by the network operator.

In particular, factors such as your location within the network, the frequency at which this location is updated, the type of SIM card you have, your reception of area messages or cell broadcast messages and the use of full rate or enhanced full rate speech, will affect both standby and talk times.

## Checking the battery

 Check icon at the top of the standby screen.

The number of blocks on the icon shows the charge of your battery pack.



Full battery power



Partial battery power




Low battery power



Battery empty

## Low battery alarm

When the battery voltage falls below the working level, a low battery warning is displayed on the screen accompanied by LED illumination and a short tone along with an empty battery icon. The phone will automatically power down shortly afterwards.



 Please charge the battery as much as possible when the battery is very low.


## Other battery alarms


Your phone may display warnings when the battery temperature is too high, or the voltage of the battery or the charger is over the appropriate level. Follow the instruction given by these warnings immediately.


## Start-up

### Switching the phone on

 Hold down  for about a second to switch on. The screen will display the selected greeting (if set, see page 24) and the phone is then in standby.

 You may need to charge the battery before using your phone.

 When your phone is turned on, the specified ringer may sound.

 If your phone is accidentally turned off while downloading or deleting Java™ application, it will take longer than usual to start up the phone the next time you turn on the power.

## Switching the phone off


- Hold down  until the display shows the switch off message.


 

## PIN code

The SIM card issued by your service provider has a security feature called PIN code protection. The Personal Identification Number (PIN) is a number put on to the card by your service provider, and is 4 to 8 digits long. Some service providers supply SIM cards which will cause your phone to prompt for a PIN code when it is turned on. If this is the case, enter your code with the phone's keypad. If you insert a SIM card other than your own, information such as call logs may be lost (see "Security (M17)" on page 25 for details).






# Basic Calls & Phone Use

## Making basic calls

You make a simple call in the same way as you would with a normal phone, except that you need to press  after entering the area Subscriber Trunk Dialling (STD) code and the phone number. To make international calls, you must first enter the international dialling code (see page 14).

-  Use the full STD area code even if you are calling to a person in the same town. If the numbers are too long to be displayed within one line, after pressing , excess part is deleted and '...' is added at its end.
-  The main-LCD display shows the strength of the radio signal that links your phone to the network. The maximum signal strength is shown by 4 shaded blocks and the minimum signal strength by 1 block.

## Starting a call




 



-  Key in the phone number. Check the number on the display  or **SK1** to send the input number to start the call
-  Before the other party answers the call, you can end the call by pressing  briefly, pressing **SK2** or closing your phone. When you use the headset, you can also end the call by pressing and holding the button on it.
-  When connecting a wired headset and Bluetooth headset at the same time, the wired headset will not work.

When the call is sent, the screen displays the number called, the name stored in the phonebook and a connection graphic or a Calling Line Identification (CLI) picture that has been allocated to the number called (see page 50).

## Correcting mistakes


Use the  and  to move the cursor and then **CLR** to clear individual digits, or hold down **CLR** to completely clear a phone number.

## Ending a call

-  While talking, **SK2** or  briefly, or close your phone. The phone returns to the standby screen.
-  If  is held down, your phone will turn off.
-  When you use the headset, you can also end a call by pressing and holding the button on it.
-  When connecting a wired headset and Bluetooth headset, the wired headset will not work.
-  You cannot end a call by closing your phone when the headset is connected.

## Receiving an incoming call

When someone calls your number, the ringer will play (if set - see page 23), the LED glows in the specified colour, and the phone number of the caller may be displayed if the calling line identification facility is available and the caller has activated the feature. If the caller's phone number has been related and stored in your phonebook with a name and a CLI picture (see page 50), that name and picture will be displayed. If the caller has withheld their identity, the screen will give a message that the caller's number is being withheld. If the origin of the call cannot be determined, no information is displayed on the screen.

-  You also have options for holding and forwarding calls. These options depend on your network and your subscription arrangements.

## Accepting an incoming call

- While receiving an incoming call, **SK1**
- When you use the headset, you can also accept an incoming call by pressing the button on it.
- When connecting a wired headset and Bluetooth headset, the wired headset will not work.
- When Auto answer function (see page 23) is set to on and a headset is connected to the phone, the incoming call is automatically accepted after several rings.
- You can accept an incoming call by opening your phone, when Fold answer function (see page 21) is set to on.
- You can set your phone to answer a call when any key is pressed (see "Any key answer" on page 21).

## Rejecting an incoming call

- While receiving an incoming call, **SK2** briefly or close your phone.
- When you use the headset, you can also reject an incoming call by pressing and holding the button on it.
- You cannot reject a call by closing your phone when the headset is connected.
- When connecting a wired headset and Bluetooth headset, the wired headset will not work.

If your phone receives a call and you do not answer it, the main-LCD will display a desktop icon of the phone number (or the name if stored) of the caller (if available). If your phone is closed, the 2nd-LCD will also display a missed call icon, and you can display the details by pressing **Side up**. This information is stored in the missed calls list. Up to 20 missed calls are stored in this list.

- If you are making a call, the phone gives priority to receiving a call unless you have already pressed **SK1**.
- See also: "Call diversion (M161)" on page 13 and "Call waiting and holding (M162)" on page 14.
- See also: "Call options (M43)" on page 11.

## Unsuccessful calls

If dialled call is not successfully connected, the display will give an appropriate message.  
If your phone has the auto redial function activated, the number will be automatically called again after a short delay (see page 14).

## Emergency calls

The standard emergency number of 112 can be used.

- Key in **1 1 2** → **SK1** to connect the call to the local emergency services.
- On some networks, emergency calls can be made using the 112 number without a SIM card inserted.

## Last number redial

You can redial the last number you called.

- Ensure that the standby screen is displayed and no phone number is shown → **SK1** twice to dial the last number you called.
- See also: "Call options (M43)" on page 11.

## One-touch dial

One-touch dial for the phonebook (SIM) is available by pressing and holding the number keys between 2 and 9.

- ☞ A number for the One-touch dial corresponds to the location number in the phonebook (SIM).
- ☞ One-touch dial is available only for the phone numbers with the location number 2 to 9 stored in the phonebook (SIM).

## Fast dialling

You can make a call to the phone number in the phonebook (Phone/SIM) with just a few press of button.



To fast-dial the phone number in the phonebook (SIM), use the following procedure:

- ☞ From the standby screen, key in the Location number of a personal data in the phonebook (SIM) → # → The corresponding personal data is displayed.
- ☞ ↶ to dial the phone number.

To fast-dial the phone number in the phonebook (Phone), use the following procedure:

- ☞ From the standby screen, key in the Location number of a personal data in the phonebook (Phone) → \* → The corresponding personal data is displayed.
- ☞ Use the ► and ◀ keys to choose the phone number (if there are more than one), then ↶ to dial the phone number.

## Displaying your own phone number (M0/M416)

- ☞  0 of  4 1 6

## Voice recall

You can store up to 10 voice recall recordings which can be allocated to a personal data stored in the phonebook (Phone). To store the voice recall sound, see "Voice recall functions" on page 50. To use the voice recall function, use the following procedure:

- ☞ Press and hold ▼
- ☞ When you use the headset, you can also activate the voice recall function by pressing and holding the button on it from the standby screen.
- ☞ Within 4 seconds, say the word or words you have recorded to identify the record you wish to recall. If the word or words were recognized, the first phone number of the personal data stored in the phonebook (Phone) will be called automatically.

## Options menu (during a call)

- During a call, **MENU** to display the options menu

No.	Options menu (during a call)	
1	Main menu	Displays the Main menu screen. See "Overview of menu function" on page x for details.
2	Hold/Retrieve	Puts the call(s) on hold or retrieves the call(s).
3	Mute/Unmute	Mutes or unmutes your voice to all active calls.
4	Transfer call	Enables to transfer the call and connect other parties. <b>F</b> After transferring the call, your call will be dropped.
5	Add to conference	Merges calls and makes a multi-party call.
6	Private call	Makes a private call to the highlighted party within the multi-party call.
7	Record call	Records the call while talking.
8	Disconnect party	Disconnects the highlighted party.
9	Switch call to Bluetooth/ Switch call to phone	Switches the audio path state of the call. <b>F</b> You can also switch call to Bluetooth or phone by pressing and holding #. <b>F</b> This option is available only when the Bluetooth device is connected to the phone.
0	Bluetooth On	Activates the Bluetooth device.

**F** Depending on the conditions, some options may be displayed in gray and not be available.

## Putting a call on hold

- To put the received or dialed call on hold, **SK1** or **MENU 2**. To retrieve the call, **SK1** or **MENU 2** again.

## Mute

You can mute the sound from the mouthpiece during a call. When your call is muted, the other party cannot hear any sound from your phone, but you can still hear the sound from the other party.

- To mute the sound during a call, **MENU 3**. To retrieve the sound, **MENU 3** again.


**F** The mute function is automatically released after the call ends.

**F** The mute function is not available while using the headset.

## Call transfer

When you have an active call and a held call, you can transfer the call and connect the two parties, then you can drop from the line while leaving those two calls active.

- ☑ To transfer the call, **(MENU) 4**.

 After dropping from the call with the other two parties, if you have a call waiting, you can proceed the call with it.


 **Call transfer facility is SIM dependent.**

## Multi-party calls


If your SIM card is multi-party enabled, you can make a conference call to more than one caller. To create the multi-party calls, at least 3 parties, including the host, are needed.

### Receiving the second call

- ☑ **SK1** or  to accept the second call → **SK2** or **(MENU) 5** to merge both calls to initiate a multi-party call.

 When you accept the second call, the first call will be put on hold.

### Making the second call

- ☑ **SK1** to put the first call on hold → Key in the phone number → **SK1** or  to make the second call → After the second participant answers, **SK2** or **(MENU) 5** to merge both calls to initiate a multi-party call.

### Putting the multi-party calls on hold

- ☑ **SK1** or **(MENU) 2** to put all calls on hold → To retrieve the call, **SK1** or **(MENU) 2** again.


 You can put the multi-party calls on hold only when you are a host of the multi-party calls.


### Making a private call

While on the multi-party call, you can make a private call to a specific party.

 
- ☑ To make a private call, highlight the desired party you want to make a private call to → **(MENU) 6**

- ☑ To end a private call and return to the normal multi-party call → **(MENU) 5**

 While you are on a private call, other parties can continue with their conversation.

 You can make a private call only when you are a host of the multi-party calls.

### Ending the multi-party calls

- ☑ To end the multi-party calls,  or **SK2**.

- ☑ To disconnect a specific party on a multi-party call, highlight the party you wish to disconnect → **(MENU) 8**

 You can disconnect a specific party on the multi-party calls only when you are a host of the multi-party calls.

 **Multi-party call facilities are network dependent.**

## Recording a call

You can record the conversation during the call.

- During a call, press and hold **▼** or **(MENU) 7** to display the Voice memo screen → **SK1** to start the recording → **SK1** to pause and **SK2** to stop the recording
- To play the recording, see “Recording/playing voice memo or setting speaker” on page 73.

## Scratchpad number

Your phone has a scratchpad facility that enables you to take down a phone number during a call and then make a call to it when you have finished. This scratchpad number can be stored in memory for future use.

### Noting & calling a scratchpad number







- During a call, key in the number to be placed in the scratchpad. It will be shown on your phone's screen → **⏏** when the call is finished. The number will still be displayed → **↶** to dial the displayed number.


## Call options (M43)

From Call options, you can display the list of missed, received and dialled calls, the duration of the last call made and all calls, charge information and the redial blacklist.

- (MENU) 4 3** to display the Call options screen.

No.	Call options	
1	<b>Missed calls</b>	Displays the list of missed calls. You can also access this function by pressing <b>▶</b> from the standby screen.
2	<b>Received calls</b>	Displays the list of received calls. You can also access this function by pressing <b>◀</b> from the standby screen.
3	<b>Dialled calls</b>	Displays the list of dialled calls. You can also access this function by pressing <b>↶</b> from the standby screen.
4	<b>Last call duration</b>	Displays the duration of the last call made on your phone. <ul style="list-style-type: none"><li><b>SK1</b> to reset the display to zero.</li></ul>
5	<b>Total calls duration</b>	Displays the duration of the total calls made on your phone. <ul style="list-style-type: none"><li><b>SK1</b> → <b>1</b> to reset the duration of the total dialled calls, <b>2</b> to reset the duration of the total received calls, or <b>3</b> to reset the duration of all calls.</li></ul>


No.	Call options	
6	<b>Charge info</b>	<p>Displays the charge information (Advice of Charge - AoC).   <b>The AoC facility is SIM card and network dependent.</b>   To reset the display to zero, set the maximum charges or edit the unit price, you may be prompted to enter the PIN2 code.</p>
	<b>1 Total charge</b>	<p>Displays the total charge.   <b>SK1</b> to reset the display to zero.</p>
	<b>2 Maximum charge</b>	<p>Displays the maximum charge.   Key in the maximum number of units allowed → <b>SK1</b></p>
	<b>3 Unit price</b>	<p>Displays the unit price.   Highlight the whole number (integer), the decimal number or the currency field → Key in the required value for the whole number and decimal number fields. For the currency field, key in the currency type using a maximum of three characters → <b>SK1</b></p>
7	<b>Redial blacklist</b>	<p>Displays the numbers in the blacklist.   If dialled call is not successfully connected (e.g. number busy), the auto redial facility will be offered (see page 14). If you have set auto redial and the call still fails 10 times, the number called will be added to the blacklist.</p>

 Depending on the conditions, some options may be displayed in gray and not be available.

### Display missed/received/dialled calls Options menu (M431M/M432M/M433M)

 ► or  **4 3 1** for missed calls, ◀ or  **4 3 2** for received calls, or  or  **4 3 3** for dialled calls.

 Highlight a number in the list → 

No.	Missed calls/Received calls/Dialled calls Options menu	
1	<b>Call</b>	Calls the current number.
2	<b>Create message</b>	Creates a new message to the highlighted phone number.
3	<b>Add to phonebook</b>	<p>Adds the current number to the phonebook.   <b>1</b> to add it as a new personal data, <b>2</b> to add it to an existing personal data → Press the appropriate number for the storage destination → Press the appropriate number for the phonebook data field to copy the current number to.</p>
4	<b>Delete one</b>	Deletes the current number.
5	<b>Delete all</b>	Deletes all the numbers in the list.

No.	Missed calls/Received calls/Dialled calls Options menu	
6	Info	Displays information on the current number.
7	Add desktop icon	Creates a desktop icon of the selected number.
8	Items/Page	Selects either to display 4 or 8 phone numbers in one screen.


 Depending on the conditions, some options may be displayed in gray and not be available.


## Call settings (M16)


From the Calls screen, you can change various call settings: the call diversion, call waiting and holding, auto redial, and line ID.


### Call diversion (M161)

#### Setting Call diversion

 **MENU** 1 6 1 → ◀ or ▶ select the type of call you wish to divert from Speech, Data or Fax.

 There will be a delay while your phone checks its divert status with your network.

 Highlight one of the conditions → When the phone number field of a divert condition is highlighted, either enter the phone number to divert to, or delete any existing phone number.

 If you have made any mistake, highlight the appropriate field → **SK1** to clear any mistakes.

 If the settings are correct, 

 There will be a short delay while the network sends the divert status of your phone.

 There may be an additional charge for this service depending on your network.

 There may be unavailable settings depending on your network.

#### Call diversion edit options menu

 Highlight the required edit field → **MENU**

No.	Call diversion edit options menu	
1	Copy	Copies the number in the edit field.
2	Paste	Pastes the previously copied number.
3	Disable all	Disables the numbers from all the fields.
4	Phonebook	Displays the phonebook to insert a number in the edit field.
5	Add to phonebook	Adds the number to the phonebook as a new personal data or saves the number in an existing personal data.

 Depending on the conditions, some options may be displayed in gray and not be available.

## Call waiting and holding (M162)

This facility informs you that another call is being made to your phone while an existing call is in progress.

### Setting up call waiting

- ☑ **MENU 1 6 2** → 1 1 to activate, 1 2 to deactivate the call waiting, or 2 to check the status of call waiting.

### Using call waiting


- ☑ If you are on a call and another comes in, you will be alerted by a beep in the earpiece → **SK1** to accept the incoming call.
  - ☑ To switch the calls, **SK1**
  - ☑ To merge the calls, **SK2** (see “Multi-party calls” on page 10).
  - ☑ To end the current call, **Ⓜ**
  - ☑ To retrieve the held call **SK1**

## Auto redial (M163)

With the auto redial facility, your phone will redial a number up to 10 times if the first attempt fails. A tone will be heard at each redial attempt. Your phone cannot connect a call if the other party is busy or if there are network problems. Pressing **SK2** during a redial attempt will abort it.

- ☑ **MENU 1 6 3** → 1 to activate or 2 to deactivate the auto redial facility.
- ☑ If the tenth attempt still fails, the number will be added to the blacklist (See “Redial blacklist” on page 12).

## Line ID (M164)

 **The line ID (identification) facility is network dependent.**

The line ID facility enables you to choose whether or not to send your own phone number when you make a call and also whether or not to display a caller's phone number when you receive a call.

- ☑ **MENU 1 6 4** to display the Line ID screen with a ✓ over an activated line and a ✗ over a deactivated line.
- ☑ To set the status of each line (see the table on the right), highlight a line (the line will flash when selected).
- ☑ **SK1** to set the line identification on or off → **☑** to save the current settings.

Line type	Setting
Outgoing	Send own #
	Show connected #
Incoming	Show Incoming #
	Return own #

## International dialling codes

When you make an international call from any country, you must start by dialling a special international access code. Your phone has the facility to prefix a + symbol to the numbers, so that you need not enter the access code for the country that you are calling from.

### Entering international dialling codes

- ☑ Hold down **0**. The 0 character displayed will change to a + character → Key in the country code, area code, and phone number that you wish to call. The UK country code is always 44, no matter what country you are dialling from. For example, a typical UK number of 0131 1234567 is entered as:

International access	country code	area code	phone number
+	44	131	1234567

## Roaming



 **You will be charged for calls forwarded to you while roaming.**

The roaming facility enables you to use your phone in many parts of the world and pay all charges through your normal service provider. Your network operator usually has agreements with named networks in other countries so that automatic roaming can take place with these named networks. The phone also allows you to set network preferences of your own.

When dialling, you will need to add the international access codes if required. So, storing all numbers with the codes (such as +44 for UK) is helpful (see "Entering international dialling codes").

 Before leaving your home country, you should select any preferences such as bar calls or call diversion.

### Setting Automatic or Manual network selection (M181)

  **1 8 1** → **1** to select the automatic mode or **2** to select the manual mode.



 Before you manually select a network, ensure it is covered under the agreement you have with your service provider.




### View new search (M182)


  **1 8 2** to search the available networks → Highlight the desired network →  to connect to it.

### Viewing/editing network list (M183)

 Before editing your network list, please consult with your service provider.

  **1 8 3** to read the network list in the SIM memory → Highlight the required network → 

No.	SIM list Options menu	
1	Add	Adds a new network to the list.
2	Move	Moves the highlighted network within the list.  Use  and  to move the network → <b>SK1</b>
3	Remove	Deletes the highlighted network.

 Depending on the conditions, some options may be displayed in gray and not be available.

### Selecting the frequency band (M184)

You have to select the frequency band to suit the location.

  **1 8 4** → Select the required frequency band.

 Frequency bands must be adjusted to suit the location when roaming (Europe, US, etc.), for the phone to work properly.

# Text Entry

This section describes how you enter text.

## Mode change

- With a text entry screen displayed, **SK1** to change the text entry mode.
- Depending on the Language setting (see “Language” on page 22 for details) the type of text input mode you can use varies:
  - English mode: T9<sup>®</sup> English text, Normal text (ABC), Numeric input

## T9<sup>®</sup> English text input

Your phone incorporates T9<sup>®</sup> Text Input, enabling fast, easy and intuitive text input. For each letter to be keyed in, you only need to press the alphanumeric key once. The screen will display the word you may require based on the internal English dictionary of your phone.

- With a text entry screen displayed, **SK1** until the entry mode is T9<sup>®</sup> English input.

i) For example, to enter “Good”:

- 4 6 6 3**, and then **0** to confirm the word.

ii) To enter “Peter is good”:

- \*** to shift to upper case (for one letter). You will see a green arrow in the Help area.
- 7 3 8 3 7** to display “Peter”, and then **0** to confirm.
- 4 7** to display “is”, and then **0** to confirm.
- 4 6 6 3** to display “good”, and then **0** to confirm and the sentence is completed.

Key	Function
<b>0</b>	Confirms a word and inserts a space.
<b>1</b>	Inserts a period or a single quote as in “Let’s”, “we’re”, “it’s”, etc.
<b>SK1(List)</b>	Displays the list of other matching words.
<b>SK1(Spell?)</b>	Activates the spell mode which temporarily deactivates T9 <sup>®</sup> for you to spell the word in Normal text input. The spell mode ends when you key in 0 to enter a space, or <b>SK1(T9)</b> .
<b>SK2(Dismiss)</b>	Cancels the T9 <sup>®</sup> matching word list.
<b>SK2(Next) or #</b>	Displays the next candidate.
<b>◀ or ▶</b>	Places the cursor.
<b>0 to 9 (press and hold)</b>	Inserts the number.

Key	Function
<b>CLR</b>	Deletes any character.
*	Toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case).
* (press and hold)	Press and hold to activate the highlight mode (see "Highlight mode" on page 38).
#	Activates symbol mode when no word is highlighted.

## Normal text input

- With a text entry screen displayed, **SK1** until the entry mode is Normal text (ABC) input.
- Use alphanumeric keys to enter letters. For example, to enter "e," press **3** twice; to enter "f," press **3** three times. For other functions, see the table below.
- When you are in the Normal text (ABC) input, any word entered that is not in the T9® dictionary will be added automatically.

Key	Function
*	Toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case).
* (press and hold)	Press and hold to activate the highlight mode (see "Highlight mode" on page 38).
<b>0</b>	Inserts a space.
<b>0 to 9</b> (press and hold)	Inserts the number.
<b>CLR</b>	Deletes any character.
◀ or ▶	Places the cursor.
#	Activates symbol mode.


- If you have made a mistake, use ▲ ▼ ◀ ▶ to place the cursor to the left or the right of the incorrect character (depending on the Clear mode setting, see page 39 for details) and then **CLR**.
- When entering normal (ABC) text, and the character you require is displayed, use ▶ to move to the next character position (if you wait for more than 1 second, the cursor will move one character to the right automatically).

## Numeric input

- With a text entry screen displayed, **SK1** until the entry mode is Numeric input.
- You can also press and hold the number key to insert the number in T9®/Normal text input mode.
- Use alphanumeric keys to enter numbers.

## Key allocations

Whenever you need to enter text (for messages, storing names with numbers, etc.), successive presses of an alphanumeric key will display different characters. Pressing \* in T9® English text input or Normal text (ABC) input toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case). When a text entry screen is displayed, pressing **SK1** enables you to select Normal text input (ABC), T9® Text input (T9) or Numeric input (123).

 Depending on the types of text entry screens, not all types of text entry modes are available.

## Symbol mode

In the symbol mode, pressing each key will input a symbol according to its position on the Symbols screen. By pressing or holding # in a text entry mode, the Symbols screen will be displayed. Use ▲ and ▼ to select the row, and then press the appropriate number on the column of the required symbol.

# Desktop icons



Desktop icons are shortcuts to functions or items. You can activate a desktop icon on the standby screen (desktop) in stead of following the menu and pressing the shortcut numbers.

The desktop icons are displayed in two rows on the standby screen. See “LCD and displayed icons” on page viii for the actual location of the desktop icon area.


There are two types of desktop icons: the automatically displayed and the manually created.

## Automatically displayed desktop icons

The following automatically displayed icons are displayed on the upper row of the desktop icon area:













Icon name	Image	Description
Missed call		Displayed when there is a new entry in the Missed calls list.
Missed message		Displayed when there is a new message you have not acknowledged.




 You can delete all the automatically displayed icons by pressing and holding **CLR** on the standby screen.

 If you turn the phone off, all the automatically displayed desktop icons are deleted.

## Manually created desktop icons

The following manually created icons are displayed on the lower row of the desktop icon area



Icon name	Image	Description
Phone number		Displays a dialer screen with the registered phone number displayed.
Message		Creates a new message to the registered phone number or Email address.
Picture		Displays the image file.
Note		Displays the note.
Camera		Displays the camera view finder screen.
Video		Displays the video view finder screen.
MP3 player		Displays the MP3 player screen.
Calculator		Displays the Calculator screen.
Clock alarm		Displays the Set alarm screen.
Scheduler		Displays the Monthly/Weekly calendar screen.
ToDo list		Displays the ToDo list screen.
Notepad		Displays the Add new screen for Notepad.

Icon name	Image	Description
Voice memo recorder		Displays the New record screen for Voice memo.
Currency		Displays the Currency screen.
Bluetooth		Displays the Bluetooth screen.

## Creating a desktop icon manually

- Highlight the required function (Camera/Video/MP3 player/Calculator/Clock alarm/Scheduler/ToDo list/Notepad/Voice memo/Currency/Bluetooth) or display the item (image file/note file/phone number/Email address).
- For functions, **SK1**
- For items, **MENU** to display the Options menu and select Add desktop icon (for an image/note file, this menu is under Use item)
- 📖 For Camera/Video/MP3 player, you can also display the Options menu and select Add desktop icon (for Camera/Video, this menu is under Other settings).
- 📖 You can create up to 10 desktop icons.
- 📖 If you have more than 5 desktop icons, an arrow will be displayed to indicate that you can scroll for more icons.
- 📖 The phone number or Email address desktop icon data will not be updated when the original data is modified. Delete the old desktop icon and create a new one in such a case.
- 📖 When you create a desktop icon of an image file or notepad file, the file will be automatically protected. The default title will be the file name. Even if this title is changed, the original file name will remain the same.
- 📖 Each manually created desktop icon has a title that you can edit.

## Activating a desktop icon

-  → Highlight the required desktop icon → 
- 📖 If you do not press any key for three minutes after highlighting a desktop icon, the highlight is cancelled and the screen goes back to the normal standby screen.
- 📖 If you activate an automatically displayed desktop icon, it will be deleted automatically.

## Desktop icon Options menu





- Highlight a desktop icon → **MENU**

No.	Desktop icon Options menu	
1	<b>Edit title</b>	Edits the title of the highlighted desktop icon.
2	<b>Delete one</b>	Deletes the highlighted desktop icon.
3	<b>Delete all</b>	Deletes all the manually created desktop icons.

# Settings (M1)

## Phone (M11)

  11

No.	Phone
1	<b>Voice volume</b> <p>Adjusts the sound volume output from the earpiece.</p> <ul style="list-style-type: none"><li>Use ▲▼, <b>Side</b> keys or alphanumeric keys (0 to 9) to adjust the volume.</li><li>You can also press the <b>Side</b> keys to display the volume control screen and to adjust the volume setting.</li><li>During a call, you can press the <b>Side</b> keys to adjust the setting of the volume as required.</li><li>When you change this setting while a headset is connected, the changed volume will be valid only when you have a headset connected.</li><li>While using a Bluetooth headset, you cannot change the volume.</li></ul>
2	<b>Answer options</b>
	1 <b>Any key answer</b> <p><b>On:</b> Any key (except , <b>SK2</b>, the <b>Side</b> keys) is valid to answer a call. <b>Off:</b> Only  and <b>SK1</b> are valid to answer a call.</p>
	2 <b>Ring silencer</b> <p><b>On:</b> Pressing one of the <b>Side</b> keys stops the ringer sound and the vibrator while receiving a call with the phone closed.</p> <ul style="list-style-type: none"><li>This function cannot be used if the <b>Side</b> keys are locked.</li></ul>
3 <b>Fold answer</b> <p><b>On:</b> You can answer an incoming call by opening your phone.</p>	
3	<b>Side key</b> <p><b>Disable:</b> Side keys are locked while your phone is folded.</p> <ul style="list-style-type: none"><li>You can also lock/unlock the <b>Side</b> keys by pressing and holding  on the standby screen.</li></ul>
4	<b>ALS setup</b> <p> <b>The Alternate Line Service (ALS) facility is SIM card and network dependent.</b></p> <p>If your SIM card supports ALS, you can setup which line to use for Outgoing call or Voice mail.</p>

No.	Phone		
5	Clock	1	<b>Show clock</b> Sets to display the local time, both the local and remote times or no time on the main-LCD.
		2	<b>Set time</b> Sets the time for the local or remote time.
		3	<b>Set date</b> Sets the date.
		4	<b>Set date format</b> Selects the date display format.
		5	<b>Set time format</b> Selects the time display format from 12 hour or 24 hour.
		6	<b>Set timezone</b> Sets the timezone. (A ✓ is placed on the currently selected timezone.) <ul style="list-style-type: none"> <li>☛ Highlight the required timezone → <b>SK1</b> to save the change.</li> <li>☛ If the highlighted timezone has Daylight Saving, a check box will be displayed at the bottom of the screen. <input type="checkbox"/> to activate (✓)/deactivate the setting.</li> </ul>
		7	<b>Set start day</b> Selects whether to start the week on Sunday or Monday. <ul style="list-style-type: none"> <li>☛ This setting affects the functions related to the day of the week, such as Scheduler. (See "Scheduler (M84)" on page 69 for details.)</li> </ul>
6	<b>Language</b>	Selects the language the phone displays. <ul style="list-style-type: none"> <li>☛ When you have switched the language to be displayed, please wait until the new setting becomes active.</li> <li>☛ Even if you change the language settings, some names, such as that of desktop icons and pre-set folders in My data, do not change.</li> </ul>	
7	<b>LED</b>	Selects the Light Emitting Diode (LED) colour for incoming calls/SMS/MMS (including Email) or during a call. <ul style="list-style-type: none"> <li>☛ If the personal setting or the Group setting for the LED colour is also set in the phonebook, it has priority over this LED setting. (See "Allocating a LED colour" on page 50 for details.)</li> </ul>	
8	<b>Earphone type</b>	Selects the earphone type from Stereo or Monaural, depending on your earphones (headset).	

## Phone modes (M12)

Your phone can be set to one of the following modes: Normal mode, Meeting mode, Pocket mode or Car mode.



**Any changes made to the settings while in a particular mode will be stored and used when that mode is selected again.**

### Selecting your phone mode

☛ ▲ or (MENU) 1 2 → Press the appropriate key for the required mode.

☛ You can also set the Meeting mode or return to the previous mode by pressing and holding ▲ on the standby screen.

### Editing the mode settings

☛ ▲ or (MENU) 1 2 → Highlight the required mode → **SK1** → Press the appropriate number for the required setting in the following table.

For any volume setting, use ▲ ▼, **Side** keys or alphanumeric keys (0 to 9).



When you change any volume setting while a headset is connected, the changed volume will be valid only when you have a headset connected.

No.	Phone mode setting	
1	<b>Ringer</b>	Selects the Sound, Video or MP3 for incoming calls. (See "Sounds (M62)" on page 59, "Videos (M61)" on page 59 or "MP3 (M64)" on page 62 for details.) If the Video is set, it will sound and will be displayed regardless of the CLI picture/video setting for the personal data in Phonebook. (See "Allocating a picture or video as a CLI" on page 50.)
2	<b>Ringer volume</b>	Sets the sound volume for incoming calls. While receiving a call with your phone open, the ringer volume can also be adjusted by pressing the <b>Side</b> keys. While using a wired headset, you can set the volume for the wired headset. The volume settings for the wired headset and the speaker of the phone are saved individually. While using a Bluetooth headset and a Bluetooth hands-free kit, however, the volume setting for the speaker of the phone is used.
3	<b>SMS tone</b>	Selects the ringtone for incoming SMS messages. (See "Sounds (M62)" on page 59 for details.)
4	<b>SMS tone volume</b>	Sets the sound volume for incoming SMS messages.
5	<b>MMS tone</b>	Selects the ringtone for incoming MMS or Email messages. (See "Sounds (M62)" on page 59 for details.)
6	<b>MMS tone volume</b>	Sets the sound volume for incoming MMS or Email messages.
7	<b>Key tone</b>	Turns on/off the key tone.
8	<b>Service tone</b>	Turns on/off the service tone.
9	<b>Alarm volume</b>	Sets the sound volume for Clock alarm and Schedule alarm.
0	<b>Vibrator</b>	Turns on/off the vibrator function.
*	<b>Earphone setting</b>	Selects the sound output from Earphone & Speaker or Earphone. This option affects the wired headset.
#	<b>Auto answer</b>	Selects whether to answer an incoming call automatically. To use the Auto answer function, connect the headset to your phone and set the earphone volume to 1 or higher. If the earphone volume is set to 0, you must turn the vibrator ON to use the Auto answer. The Auto answer function only applies to the first incoming call. When you have another incoming call, you have to answer it manually.

If the selected mode is Car mode, the backlight will always be turned on. This will accelerate the battery consumption.



## Main-LCD (M13)

  1 3

No.	Main-LCD	
1	<b>Greetings</b>	Selects the greeting which is displayed on the main-LCD during phone start-up from No greeting, Text or Animation.  If you select Text greeting, <b>SK1</b> to edit the greeting text. Key in a greeting text and  .
2	<b>Wallpaper</b>	Selects a picture or video file to use as the background for the main-LCD.
3	<b>Main menu style</b>	Selects and resets the background and icons for the Main menu screen.
4	<b>Colour style</b>	Selects the phone's colour theme.

## 2nd-LCD (M14)



  1 4


No.	2nd-LCD	
1	<b>Clock/Event display</b>	Selects which items to display on the 2nd-LCD from Clock & Event, Clock only, Event only or Off.
2	<b>Wallpaper</b>	Selects a picture file to use as the background for the 2nd-LCD.
3	<b>Clock selection</b>	Selects the type of clock to be displayed on the 2nd-LCD.  <i>When selecting Digital 2 clock, no icon will be displayed in the standby screen of the 2nd-LCD.</i>
4	<b>Incoming call No.</b>	Turns on/off the function to display the incoming call number on 2nd-LCD.
5	<b>Contrast</b>	Sets the contrast level of the 2nd-LCD.  Use <b>▲</b> , <b>▼</b> or <b>Side</b> keys to adjust the contrast. The contrast gauge is displayed on the 2nd-LCD.

## Power saving (M15)

  1 5


 If the selected mode is Car mode, this function is displayed in gray and is not available.

No.	Power saving	
1	<b>Level setting</b>	Selects the power saving level from Level 1 (minimum power save setting), Level 2 (moderate) or Level 3 (maximum).  <i>The main-LCD backlight will turn dim and then turn off after a given amount of time with no operation.</i>  <i>When the phone is folded, Power saving level also applies to the 2nd-LCD.</i>

No.	Power saving	
2	Function key LED	Selects whether to flash the LED of <b>SK1</b> and <b>SK2</b> when the main-LCD and its backlight are turned off.  If the selected mode is Car mode or the camera view finder screen is displayed, the main-LCD backlight will always be on.

## Calls (M16)

### 16

 For settings provided on the Calls screen, see “Call settings (M16)” on page 13.

## Security (M17)

### 17

The security settings will help to protect your phone from improper and unauthorized use. You may be required to enter one of the five codes (shown below). When the phone prompts you for one of these codes, key in the appropriate number.

- PIN code (provided by your network service provider to protect your SIM card if it is stolen)
- PIN2 code (provided by your network service provider for charge information and Fixed dialling services protection)
- PUK code (personal unblocking key in case you forget PIN code)
- PUK2 code (personal unblocking key in case you forget PIN2 code)
- Security code

 **If you forget any of these codes, ALWAYS contact your service provider as they are the ONLY source for your codes.**

#### PIN code

Your phone can be set up so that your PIN code must be entered at power up before the phone can be used at all. If the PIN code is not entered, not even incoming calls can be answered. Entering your PIN code incorrectly 3 times (not necessarily in the same session) will invalidate the correct PIN code. In such a case you will have to contact your service provider for a PUK code to unblock your SIM card.











 Some SIM cards are set up so that PIN number entry cannot be turned off.

 When SIM PIN lock is enabled, you can change the PIN code.

#### PIN2 code

Your phone supports advanced feature that may require a PIN2 code to be entered before they can be accessed or modified. Entering your PIN2 code incorrectly 3 times (not necessarily in the same session) will invalidate the correct PIN2 code. In this case you will have to contact your service provider for a PUK2 code.

 **The PIN2 code is SIM card related and may only be available from your service provider.**

No.	Security		
1	<b>Change PINs</b>	Changes the PIN or PIN2 code (PIN activate setting must be turned on to change the PIN code).	
2	<b>PIN activate</b>	Turns on/off the PIN code entry required at starting up the phone.	
3	<b>Change security code</b>	Changes the security code which is used to set some of functions and unlock the Personal Information Manager (PIM) features.  <i>The default setting of the security code is "0000".</i>	
4	<b>Phone lock</b>	Turns on/off the Phone lock function which will lock the phone: you can only make emergency calls or enter the security code. After entering the correct security code, you can use the phone normally.  <i>Upon power-up, you are prompted to enter the security code if the Phone lock was active when the phone was powered down.</i>	
5	<b>Bar calls</b>	You can bar the following calls made/received on your phone: all outgoing (dialled) calls, international outgoing (dialled) calls, international outgoing (dialled) calls except to home, all incoming (received) calls or Incoming (received) calls when roaming.  <b>Bar calls facilities are network services and may require a password.</b>	
	1	<b>Change settings</b>	<ul style="list-style-type: none"> <li> Highlight the type of restriction and the call type, and then   to save changes.</li> <li> Key in your bar calls password to verify user identification to the network → <b>SK1</b> to confirm and save changes to the network.</li> </ul>  <i>The selected settings have red bars over their icons.</i>
	2	<b>Set password</b>	Changes the bar calls password.
6	<b>Fixed dialling</b>	Turns on/off the fixed dialling which restricts the use of dialled number to only the Fixed Dialling Numbers (FDN).  <b>The FDN facility is network dependent.</b>  <i>See also: "Fixed dialling numbers (FDN)" on page 46.</i>	


## Network (M18)

### 18

 For settings provided on the Network screen, see "Roaming" on page 15.

## Connection profile (M19)

### 19

 For settings provided on the Connection profile screen, see "Setting the Connection profiles" on page 41.



This function will reset your phone to its factory settings.



**By restoring the factory settings, any changes you have made to your phone EXCEPT the following will return to the factory settings (the following data/settings will not be reset):**

- **Settings:** Set time for Local time, Set date, Language, all settings in Calls other than Auto redial, all Security settings other than Change security code, SIM list settings in Network.
- **Call options:** Information in Charge info.
- **Phonebook:** All Phonebook entries. The settings for Groups.
- **Accessory:** All Schedule, ToDo, Notepad and Voice memo entries. All the settings other than Clock alarm, Play list for MP3 player, View events for Scheduler, Sort for ToDo, and Timer setting and My phone settings for Bluetooth.
- **Web browser:** All Bookmarks, Saved pages and WAP alerts. All the WAP related settings.
- **Java™:** All the Java™ applications.
- **Message:** All the stored messages. The settings for SMS centre, Validity period for SMS and Language for Cell Broadcast.
- **My data:** All stored files.

# Message (M2)

## Message overview

### Message services

Your phone supports the following messaging services:

- **Short Messaging Service (SMS)** allows you to send short messages (160 half-pitch characters max.) to one or more phone numbers. To send an SMS message, the destination phone number must be a mobile phone with an SMS service subscription. SMS service also supports Enhanced Messaging Service (EMS) for which the maximum length of the message you can send depends on the number of linked messages (maximum of 10 linked messages are available).
- **Email** allows you to send messages with attachments to not only other cellphones but also to PCs and other devices that use Email addresses. Attachable files include texts, sounds, pictures, animation, and videos. There are two types of Email server: POP3 server is used when receiving Email messages and SMTP server is used when sending Email messages.
- **Multimedia Messaging Service (MMS)** is a service that allows you to send messages with multimedia files attached. You can attach image, sound and video files to an MMS message. When you receive an MMS message, you will be notified by a message from the MMS centre. You can either automatically or manually receive the contents of an MMS message.



*The Message Services are network dependent.*

### Sending/Receiving messages

While a message is being sent or received, a name (if a name has been stored with the number in your phonebook) or a number will be displayed. The received messages are stored on the SIM card or in your phone memory. When you receive a message, your phone will ring or beep during a call, the message icon will be shown on your phone's display and its LED will glow.



*Please delete the unnecessary messages in the folders from time to time. The phone cannot receive any messages when the Inbox folder is full.*

### Message screen

- **SK1** or **(MENU) 2** to display the Message screen
- To create a new message, **SK1**
- To check for new Email, **SK2**
- To display the list of messages in each folder, press the appropriate key for the required folder

No.	Message screen menu	
1	<b>Inbox</b>	The received messages are stored here.
2	<b>Drafts</b>	The messages currently being edited are stored here.
3	<b>Outbox</b>	The messages that failed to be sent are stored here.

No.	Message screen menu	
4	Sent	The sent messages are stored here.
5	Alert inbox	The received alert messages are stored here. You can also display the received alert messages by pressing  3 4 1 from the standby screen.
6	CB	The received broadcast messages are saved. See "Cell broadcast (M26)" on page 39 for details.
7, 8	Folder1/Folder2	The messages moved by Move msg (see "Message list Options menu" on page 32) are stored here.

If there is no message in a message list, the list will be displayed in gray and you cannot select it.



## Reading a message (M21)


- To display the Message view screen of a new message, **SK1** or 2 → 1 → Highlight the new message →
- To display the MMS message,
- The new (unread) messages are displayed in bold. If the message cannot be displayed in one page, use and to scroll through the message. The following icons will be displayed.

Icon type	Icons	Descriptions	Icon type	Icons	Descriptions
Message type icons		MMS message with no attachment	Read / Unread status icons		New / Unread message(s)
		MMS message with attachment			Read message(s)
		MMS message on the server	Filtering status icons		SMS messages filtered by status (incomplete)
		MMS delivery report			SMS messages filtered by location (SIM)
		SMS message			SMS messages filtered by location (the phone memory)
		Incomplete SMS message			Filtered SMS messages
		Email message with no attachment			Filtered MMS messages
		Email message with attachment			Filtered Email messages
Sorting status icons		Messages sorted by Date	MMS priority icons		MMS message with high priority
		Messages sorted by Name			MMS message with low priority
		Messages sorted by Read/Unread status	Sent message status icons		Sent but failed message
		Messages sorted by Size			Sent message
		Messages sorted by Ascending order	Storing location icons		Highlighted message stored in SIM
	Messages sorted by Descending order			Highlighted message stored in the phone memory	

## Message Options menu

SK1 or (MENU) 2 → (MENU)

No.	Message Options menu					
1	<b>SMS settings</b>	1	<b>SMS centre</b>	Edits the SMS centre number (this number is saved in the SIM card).		
		2	<b>Auto display</b>	Turns on/off the automatic display function that displays the received SMS messages automatically.		
		3	<b>Receipt request</b>	Selects whether to request a receipt of the sent SMS messages.		
		4	<b>Max linked msgs</b>	Sets the maximum number of linked SMS messages. This function divides an SMS with the message text exceeding the maximum number of characters allowed into multiple messages.		
		5	<b>Validity period</b>	Selects the period of time an SMS message is stored at the SMS centre, while trying to deliver the message.		
2	<b>MMS settings</b>	 To display the <b>Msg settings</b> screen, 1.				
		1	<b>Delivery report</b>	Sets the status of delivery.		
				1	<b>Receipt request</b>	Sets to request a receipt of the sent MMS message.
				2	<b>Auto send</b>	Sets to automatically send out a receipt for the received MMS message.
		2	<b>Auto receive</b>	Selects whether to receive the MMS messages manually or automatically.		
		3	<b>Validity period</b>	Selects the period of time an MMS message is stored at the server, while trying to deliver the message.		
		 To display the <b>MMS profiles</b> screen, 2.				
		-	<b>Connection profile</b>	Sets the Internet connection for sending or receiving MMS messages. See "Setting the Connection profiles" on page 41.		
-	<b>Enter MMS centre</b>	Edits the MMS centre address.				
3	<b>Email settings</b>	Changes the settings for the Email messaging function.				
		1,2	<b>Account1/ Account2</b>	Sets the Email account for two different Email addresses.		
				1	<b>Account details</b>	Sets Mail account, Display name, Email address, or Reply to address.

No.	Message Options menu				
3	Email settings (Continued)	1,2 Account1/ Account2 (Continued)	2 POP3	Sets POP3 server to receive the Email messages.	
				1 POP3 server	Sets POP3 server address to receive Email messages.
				2 POP3 port override	Sets the POP3 port number.
				3 Leave on server	Selects whether to leave the downloaded Email message on the server or not.
			4 Login	Sets the POP3 user ID and password to login to the account.	
			3 SMTP	Sets the SMTP server to send the Email messages.	
				1 SMTP server	Sets the SMTP server address to send Email messages.
				2 SMTP port override	Sets the SMTP port number.
				3 Authentication	Sets the authentication to on or off.
			4 Login	Sets the SMTP user ID and password to login to the account.  You can also set them the same as those of POP3.	
3 Default account	Sets the default accounts for sending and checking the Email messages.				
4 Send option	Selects whether to send an Email message immediately or later.				
5 Received message size	Sets the maximum size to download an Email message.				
6 Connection profile	Sets the Internet connection for sending or receiving Email messages. See "Setting the Connection profiles" on page 41.				
4	CB settings	1 Enable	1 to receive none, 2 to receive all, or 3 to specify a list of Cell Broadcast Message Identifier (CBMI) to receive broadcast from.		
		2 Languages	Selects which language(s) to receive the cell broadcast messages in.		
5	View msg status	Displays the information on the number of messages in the phone, the size of used/free memories, SMS units in the phone/SIM, and complete/incomplete SMS units.			

No.	Message Options menu	
6	<b>Rename folder</b>	Renames Folder1 and Folder2.
7	<b>View all</b>	Displays all the messages in all folders on the same list.
8	<b>Msg filter</b>	Sets the type(s) of messages to be displayed by selecting the desired filter option.



**The receipt request, linking of SMS messages and delivery report facilities are network dependent.**

Depending on the selected folder, some options may be displayed in gray and not be available.

## Message list Options menu

Display the message list in the Inbox, Drafts, Outbox, Sent, Alert inbox, CB, Folder1 or Folder2 →

No.	Message list Options menu	
1	<b>Reply</b>	Replies to the sender of the highlighted message.
2	<b>Reply all</b>	Replies to the sender and all other recipients of the highlighted message.
3	<b>Delete</b>	Deletes the highlighted message.
4	<b>Delete all</b>	Deletes all the messages in the current folder.
5	<b>Forward</b>	Forwards the message text of the highlighted message.
6	<b>Msgs/page</b>	Selects either to display 3 or 7 messages in one screen.
7	<b>Move msg</b>	Moves the highlighted message to Inbox or Folder1/2, or copies to SIM/Phone.
8	<b>Sort msg</b>	<b>By:</b> Sorts the messages by date, name, read/unread status or size. <b>Order:</b> Sorts the messages in ascending or descending order.
9	<b>Search</b>	Searches messages alphabetically.
0	<b>View details</b>	Displays the detailed information on the highlighted message.
-	<b>Add desktop icon</b>	Creates a desktop icon of the sender or recipient of the highlighted message (Inbox, Sent, Folder1/Folder2, and Drafts only).
-	<b>Edit</b>	Edits the highlighted message (Drafts and Outbox only).
-	<b>Resend</b>	Resends the highlighted message in the folder (Outbox only). The entire message or only the packets that failed to reach the recipient(s) can be resent.

Depending on the selected folder, the menu number and available options may vary.

Depending on the selected folder, some options may be displayed in gray and not be available.

## Message view Options menu

- Display the message list in the Inbox, Drafts, Outbox, Sent, Alert inbox, CB, Folder1 or Folder2 → Highlight a message → → (MENU)

No.	Message view Options menu	
1	<b>Reply</b>	Replies to the sender of the highlighted message.
2	<b>Reply all</b>	Replies to the sender and all other recipients of the highlighted message.
3	<b>Delete</b>	Deletes the highlighted message.
4	<b>View details</b>	Displays detailed information on the highlighted message.
5	<b>Forward</b>	Forwards the message text of the highlighted message.
6	<b>Save object</b>	Saves the highlighted object to a folder in My data.
7	<b>Attachments</b>	Displays the list of attached files.
8	<b>Move msg</b>	Moves the highlighted message to Inbox or Folder1/2, or copies to SIM/Phone.
9	<b>Highlight mode</b>	Activates the Highlight mode (see "Highlight mode" on page 38 for details).
0	<b>Option mode</b>	Activates the Option mode to highlight the phone number, Email address, URL or attached file.
*	<b>Add desktop icon</b>	Creates a desktop icon of the sender or recipient of the highlighted message.

Depending on the conditions, some options may be displayed in gray and not be available.

The reply facility uses the phone number of the person who sent the message.

The Save object Options menu will be displayed only if an object is highlighted.

## Option mode Options menu

- Display the message list in the Inbox, Drafts, Outbox, Sent, Alert inbox, CB, Folder1 or Folder2 → Highlight a message → → 0 / /


The columns show the menu numbers for **P**: Phone number highlighted, **E**: Email address highlighted, **U**: URL highlighted and **A**: Attachment highlighted.

When an object in the Email is highlighted, the Message view Options menu with menu No. 0 as View mode is displayed.

P	E	U	A	Option mode Options menu	
1	1	-	-	<b>Add to phonebook</b>	Adds the highlighted phone number or Email address to a phonebook.
2	-	-	-	<b>Dial phone number</b>	Dials the selected phone number.
-	-	1	-	<b>Add to bookmark</b>	Adds the highlighted URL to the bookmarks.
-	-	2	-	<b>Launch browser</b>	Activates the web browser to access the highlighted URL.
3	2	-	-	<b>Create message</b>	Creates a new message with the highlighted phone number/Email address in the To field.

P	E	U	A	Option mode Options menu	
4	3	-	-	<b>Add desktop icon</b>	Creates a desktop icon of the highlighted phone number/Email address.
-	-	-	1	<b>Attachments</b>	Displays the list of attached files.
5	4	3	2	<b>View mode</b>	Deactivates the Option mode.

## Creating a message

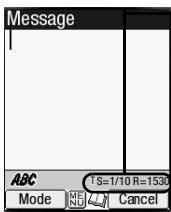

### Help area

This area contains the information on the message. **S** indicates the size of the message equivalent to the number of SMS messages, and **R** indicates the remaining number of characters available.

↑ (green)	Indicates that an upper case letter will be input next.
↑ (red)	Indicates the capital lock.
↵ (no arrow)	Indicates that a lower case letter will be input next.

☛ **SK1** twice/press and hold **SK1**/**(MENU)** **2** and **SK1**

☛ **1** to create a new SMS, **2** to create a new MMS, or **3** to create a new Email

☛ To address the message, highlight the To field → ○ → Input the required phone number or Email address → ○

☛ To scroll the phone numbers in the To field, ◀ or ▶

☛ To key in the message, highlight the Message field → ○ → Key in the message → ○

☛ Pressing **(MENU)** while keying in the To/Message field displays the Message edit Options menu screen.

☛ **SK1** to send the message

☛ When you are in the ABC (normal text) mode, any word entered that is not in the T9® dictionary will be added automatically.

☛ When you are keying in your message, **SK1** to change the text entry mode.

☛ If you display another screen or receive a call while you are editing a message more than 1 character, the message will be saved automatically in Drafts.

## Message composer Options menu





### To/Subject field Options menu


☛ **SK1** twice/press and hold **SK1**/**(MENU)** **2** and **SK1** → **1**, **2**, or **3** → Highlight the To or Subject field → **(MENU)**

☛ The columns show the menu numbers for:


- **To**: The To field highlighted when creating a new SMS/MMS/Email message.
- **S**: The Subject field highlighted when creating a new MMS message.
- **E**: The Subject field highlighted when creating a new Email message.


To	S	E	To/Subject field Options menu	
1	-	-	<b>Add/Edit</b>	Adds or edits a recipient phone number/Email address in the To field.

To	S	E	To/Subject field Options menu																
-	1	1	<b>Edit</b>	Edits the subject of a message.															
2	2	2	<b>Preview msg</b>	Displays the message preview screen.															
3	3	3	<b>Delete</b>	Deletes the highlighted recipient phone number/Email address or subject.															
4	4	4	<b>Delete all</b>	Deletes all the recipients phone numbers/Email addresses.															
5	5	5	<b>Save</b>	Saves the message in Drafts folder.															
6	6	-	<b>Phonebook</b>	Displays the phonebook list to insert a recipient phone number/Email address (To field only).															
7	7	-	<b>Resend list</b>	<p>Inserts a phone number/Email address from the resend list (To field only).</p> <p> You can delete the highlighted phone number from the resend list or the entire resend list by pressing <b>(MENU) 1</b> or <b>(MENU) 2</b> respectively.</p>															
8	8	-	<b>Insert</b>	Inserts a new recipient phone number/Email address.															
9	9	-	<b>Address list</b>	Displays the recipient(s) of the message (To field only).															
-	-	6	<b>Add item</b>	Adds picture, video, sound, or text to the Email message.															
-	-	7	<b>Attachments</b>	Displays the list of attachments. (See "Email Attachments list Options menu" on page 37 for details).															
0	0	8	<b>Msg options</b>	<p> This option is available only when creating an MMS or Email message.</p> <p>When creating an MMS message:</p> <table border="1"> <tr> <td>1</td> <td><b>Priority</b></td> <td>Selects the message priority.</td> </tr> <tr> <td>2</td> <td><b>Delivery date</b></td> <td>Sets the delivery date.</td> </tr> </table> <p>When creating an Email message:</p> <table border="1"> <tr> <td>1</td> <td><b>Send option</b></td> <td>Selects whether to send an Email message immediately or later.</td> </tr> <tr> <td>2</td> <td><b>Send account</b></td> <td>Chooses which account to send the message.</td> </tr> <tr> <td>3</td> <td><b>Priority</b></td> <td>Selects the message priority.</td> </tr> </table>	1	<b>Priority</b>	Selects the message priority.	2	<b>Delivery date</b>	Sets the delivery date.	1	<b>Send option</b>	Selects whether to send an Email message immediately or later.	2	<b>Send account</b>	Chooses which account to send the message.	3	<b>Priority</b>	Selects the message priority.
1	<b>Priority</b>	Selects the message priority.																	
2	<b>Delivery date</b>	Sets the delivery date.																	
1	<b>Send option</b>	Selects whether to send an Email message immediately or later.																	
2	<b>Send account</b>	Chooses which account to send the message.																	
3	<b>Priority</b>	Selects the message priority.																	
*	-	-	<b>Move</b>	<p>Moves the highlighted phone number/Email address to the To/Cc/Bcc field.</p> <p> This option is available only when creating an MMS or Email message.</p> <p> This option is available only when the phone number/Email address is highlighted in the To field list screen.</p>															




 Depending on the conditions, some options may be displayed in gray and not be available.


#### Message/Slide/Attachment field Options menu

 **SK1** twice/press and hold **SK1**/**(MENU) 2** and **SK1** → **1, 2 or 3** → Highlight the Message/Slide/Attachment field → **(MENU)**

 The columns show the menu numbers for:

- **S:** The Message field highlighted when creating a new SMS message.
- **M:** The Slide field highlighted when creating a new MMS message.
- **E:** The Message or Attachment field highlighted when creating a new Email message.


S	M	E	Message/Slide/Attachment field Options menu	
1	1	1	<b>Edit</b>	Edits the message.
2	2	2	<b>Preview msg</b>	Displays the message preview screen.  When previewing an MMS message, it displays the created slides in order from the beginning at the preset playback time for each.
3	3	3	<b>Delete</b>	Deletes the highlighted slide or message.
4	4	4	<b>Delete all</b>	Deletes all the slides or attachments.
5	5	5	<b>Save</b>	Saves the message in Drafts folder.
6	–	–	<b>Phonebook</b>	Displays the phonebook list to insert a recipient phone number/Email address.
7	–	–	<b>Resend list</b>	Inserts a phone number/Email address from the resend list.
–	6	–	<b>Insert object</b>	Inserts Text, Sound, Still image, Animation, Emoticon or Video into the slide.
–	7	–	<b>Copy</b>	Copies the highlighted slide.  Highlight the slide you want to copy → <b>(MENU) 7</b> → Highlight the place you want to copy the slide to → <b>SK1</b>
–	8	–	<b>Move</b>	Moves the highlighted slide.  Highlight the slide you want to move → <b>(MENU) 8</b> → Highlight the place you want to move the slide to → <b>SK1</b>
–	9	–	<b>New slide</b>	Inserts a new slide just before the currently highlighted slide.
–	0	–	<b>Duration</b>	Sets the length of time a slide is displayed in seconds when previewing the MMS message.
–	–	6	<b>Add item</b>	Adds picture, video, sound, or text to the Email message.
–	–	7	<b>Attachments</b>	Displays the list of attachments. (See “Email Attachments list Options menu” on page 37 for details).
–	*	8	<b>Msg options</b>	See “Msg options” on page 35 for details.

 Depending on the conditions, some options may be displayed in gray and not be available.

## Email Attachments list Options menu









SK1 twice/press and hold SK1/**MENU** 2 and SK1 → 3 → Highlight the Attachments/Message field and **MENU** 7 or highlight the attachment field and **MENU** → **MENU**








No.	Email Attachments list Options menu	
1	<b>Add item</b>	Adds picture, video, sound, or text to the Email message.
2	<b>Save item</b>	Saves an attachment of the Email message in a folder.
3	<b>Delete item</b>	Deletes an attachment from the Email message.
4	<b>Delete all</b>	Deletes all attachments of the Email message.
5	<b>Rename item</b>	Renames an attachment of the Email message.
6	<b>Copy item</b>	Copies the highlighted attachment.
7	<b>Copy all</b>	Copies all the highlighted attachments.
8	<b>Move</b>	Moves the highlighted attachment or all the attachment to another field or folder.
9	<b>Create folder</b>	Creates a new folder.
0	<b>Storage detail</b>	Displays the storage information.
*	<b>View detail</b>	Displays detailed information on the highlighted attachment.
#	<b>Options</b>	See "Options" on page 64 in "File selector Options menu" for details.

 Depending on the conditions, some options may be displayed in gray and not be available.

## Message composer icons







The following icons will be displayed at the bottom of the Message composer screen.

Icons	Descriptions	Icons	Descriptions
	The plain MMS message		MMS message with text(s) and video(s)
	MMS message with text(s)		MMS message with text(s), picture(s) and sound(s)
	MMS message with picture(s)		MMS message with picture(s) and sound(s)
	MMS message with sound(s)		Email message with no text(s)


Icons	Descriptions	Icons	Descriptions
	MMS message with video(s)		Email message with text(s)
	MMS message with text(s) and picture(s)		Email message with no attachment(s)
	MMS message with text(s) and sound(s)		Email message with attachment(s) <i> The number in the icon indicates the number of attachments.</i>

## Message edit Options menu

➔ SK1 twice/press and hold SK1  2 and SK1 → 1, 2, or 3 → Highlight To or Message field →  → 

No. Message edit Options menu				
1	<b>Text colour</b>	Selects the colour of text and background.		
2	<b>Text format</b>	Selects the font size (small, normal or large) and font style (bold, italics, underline or strikethrough).		
3	<b>Text alignment</b>	Sets the text alignment (left, centred or right).		
4	<b>Paste</b>	Pastes the text which has been copied onto the clipboard in the Highlight mode.  <i>This function can be used only when text has been copied or cut in the Highlight mode.</i>		
5	<b>Highlight mode</b>	Activates the Highlight mode at the cursor position.  <i>You can also activate the Highlight mode by pressing and holding *.</i>  <i>This function can only be used when text has been entered.</i>  <i>To toggle the Highlight mode on/off, SK1 and to go back to the normal mode, CLR</i>  <i>To display the following Highlight mode Options menu, .</i>		
		1	<b>Text colour</b>	Selects the colour of text and background.
		2	<b>Text format</b>	Selects the font size (small, normal or large) and font style (bold, italics, underline or strikethrough).
		3	<b>Copy</b>	Copies the highlighted part of text onto the clipboard.
		4	<b>Cut</b>	Cuts the highlighted part of text.
		5	<b>Delete</b>	Deletes the highlighted part of text.
		6	<b>Select word</b>	Selects (highlights) the nearest word to the current cursor position.
		7	<b>Select paragraph</b>	Selects (highlights) the nearest paragraph to the current cursor position.
		8	<b>Select all</b>	Selects (highlights) the entire text.
		9	<b>Save to text file</b>	Saves the highlighted part of text as a text file in the list of Notepad.
6	<b>Insert object</b>	Inserts Text, Sound, Still image, Animation, Emoticon, or Video into the message at the cursor position.		
7	<b>T9 Language</b>	Selects the language for T9® text input.		


No.	Message edit Options menu	
8	<b>Edit settings</b>	Sets the Write mode (Insert or Overwrite) and Clear mode (Backspace or Delete).


 Depending on the conditions, some options may be displayed in gray and not be available.

## Cell broadcast (M26)

Cell broadcast (CB) messages (e.g. weather reports, news) are sent by the network to all phones in a certain area.

  2 6

 The Cell broadcast message display on the standby screen is erased by pressing **CLR**.

 **Broadcast messages service is network dependent. Please contact your service provider for details.**

## Web browser (M3)

To access WAP service, you would need to:


- 1 Apply for WAP service before accessing WAP. You can choose General Packet Radio Service (GPRS) or Circuit Switched Data (CSD) as the data bearer for WAP access. The connection speed of GPRS is faster than CSD. For more details or subscription of WAP service, please contact your network service provider.
- 2 Set up WAP service settings in your phone.




### What can I download

Your phone supports the downloading of the following different types of content:

- Sound files (including ringer melodies, video sound, etc.)
- MP3
- Pictures
- Animation
- Video
- Java™ applications

 For the handling of the downloaded data, see "My data (M6)" on page 59.

 For details on downloading Java™ applications, see "Java™ (M7)" on page 65.

 If you have not enough memory left on your phone for the downloaded file, a message will be output and you cannot download the file. Make sure you have enough memory space before downloading any file.







### Web settings

To set up your phone to access WAP information on the Internet, use the following procedures.

#### Setting your connection profile and homepage

Your phone has been preset with a list of GPRS and CSD WAP proxy of different service provider. Also you can set your favourite URL as the homepage.

To display the list of available connections, you can use the following procedure.

-  **MENU** 3 5 1 →  → Highlight the required connection name →  → **SK2**
-  Highlight Enter homepage field →  → Enter the URL → 

 You can also choose which type of connection you require: CSD or GPRS. Please contact your service provider before setting.

 The connection with a  next to its name will be the connection used when you make a WAP connection.

## Setting the Connection profiles

To alter or enter information into a connection (profile), use the following procedure.

☛ **MENU** 3 5 1 → Highlight Connection profiles field → **O** → Highlight a connection name → **MENU** to display the Profile options menu.

☛ You can also display the Profile options menu by **MENU** 1 9 and **MENU**

No.	Profile options menu	
1	<b>Add new</b>	Creates a new profile.
2	<b>Copy</b>	Copies the current profile to use it as a template to create a new profile.
3	<b>Edit</b>	Edits the current profile.
4	<b>Delete</b>	Deletes the current profile.

## Adding a new profile

☛ To add a new profile, **MENU** 3 5 1 → Highlight Connection profiles field → **O** → **SK1** or **MENU** 1

☛ You can also add a new profile by **MENU** 1 9 and **SK1**

☛ Key in the proxy title → **O**

No.	Profiles settings menu	
1	<b>Load preset</b>	Chooses a profile to load the settings from.
2	<b>Profile title</b>	Sets profile's name.
3	<b>IP address</b>	Sets IP address. If you do not have an IP address, please contact your network provider.
4	<b>Bearer type</b>	<b>GPRS:</b> Always connects by GPRS. <b>CSD:</b> Always connects by CSD.
5	<b>GPRS settings</b>	<b>AP name:</b> Edits the address of the external data network you want to connect to, either an IP address or a text string. <b>User name:</b> Edits your user ID to enable you to log on to the external data network. <b>Password:</b> Edits your password to enable you to log on to the external data network. ☛ <i>The GPRS setting will be grayed-out if CSD is set as bearer.</i>
6	<b>CSD settings</b>	<b>Connect type:</b> Selects the connection line type: ISDN or Modem. <b>Dial-up number:</b> Sets the dial-up number. <b>User name:</b> Edits your user ID to log on to the external data network. <b>Password:</b> Edits your password to log on to the external data network. ☛ <i>The CSD setting will be grayed-out if GPRS is set as bearer.</i>

No.	Profiles settings menu (Continued)		
7	<b>DNS address</b>	<b>Dynamic:</b>	Sets to use the dynamic DNS server address.
		<b>Static:</b>	Sets the static DNS server address.
8	<b>Port number</b>	<b>HTTP:</b>	Sets the HTTP port number.
		<b>HTTPS:</b>	Sets the HTTPS port number.
9	<b>Authentication</b>	Selects the authentication type from Normal or Secure.	
0	<b>Usage</b>	Displays the name of the application currently used.	


☛ When you have finished entering or editing the connection information, **SK2**. The connection list will be displayed.

🔒 If you select the *read-only proxy*, *Edit function* is disabled.

🔒 For more details of profile settings, contact your network service provider.

## Setting the CSD linger time

The linger time facility will disconnect a connection that has not been used for a preset amount of time. To set this time delay, use the following procedure.

☛  **3 5 2** → Enter the time delay required → **SK1**


## Web font

You can select the font to be displayed on your phone's screen from Large, Normal and Small.

☛  **3 5 3** → Press the appropriate key for the required font.

## Clear cache

If you start a WAP session using the last page visited, the information will be restored from the phone memory. If, however this page has been updated since your last visit, the updated page will not be displayed. To avoid this possibility, clear the memory by the following procedure:

☛  **3 5 4** → **SK1**

## Logging on to WAP site

There are three types of WAP connection:

- Connect to a specific URL
- Connect to the homepage of the default connection
- Connect to the last web page connected before

## Connect to a specific URL

To connect to a URL specified by yourself, use the following procedure.

☛  **3 1 1** → Key in the desired URL →  to select the typed URL →  to browse the site

## Connect to the Home page of the default connection

- ☛ **(MENU) 3 1 2** (for details, see “Setting your connection profile and homepage” on page 40)

## Connect to the last web page visited

- ☛ **(MENU) 3 1 3**

☞ *When you access the Internet with your phone for the first time or after you cleared the memory, the homepage set for Web/MMS profile will be the page to be accessed.*

## Other features

### Bookmark

- ☛ **(MENU) 3 2**
- ☛ To display the list of bookmarked pages, **1**
- ☛ To reset the bookmarked pages, **2**

### Snapshot

The Snapshot function allows you to store up to 10 web pages and view them offline.

- ☛ **(MENU) 3 3**
  - ☛ To display the list of stored snapshots, **1**
  - ☛ To delete all the stored snapshots, **2**
- ☞ *The above operation is available only when one or more Snapshot data has been stored.*
- ☞ *To take a snapshot, you need to access the Snapshot screen while browsing a WAP site.*
- ☞ *Stored snapshot data can only be used for the snapshot function.*

### Alert message

- ☛ **(MENU) 3 4**
  - ☛ To display the list of received Alert messages, **1**
  - ☛ To delete all those messages, **2**
- ☞ *You can also display the received Alert messages by pressing **(MENU) 2 / SK1 → 5**.*

## NEC Web site

Your phone is also supported by a Web site at [www.necmobile.com](http://www.necmobile.com). Access this site from your phone and you can select and download content from the wide variety available. So, you do not need a PC to take advantages of these great new services.

### Further information


For more details, visit [www.necmobile.com](http://www.necmobile.com) on your PC or your phone.

## *GPRS dial up*

With GPRS dial up service, you can access the Internet or read Emails from your PC through your phone. Use your phone as a modem to connect to a compatible PC through a USB cable (option), Bluetooth or the IR port to enable GPRS Internet dial up service.

For more detailed procedures, please visit our company homepage.

 See also "Bluetooth (M891)" on page 76 and "IR modem (M8922)" on page 80.



 Before using this service, you would be required to subscribe to a GPRS service and buy a USB cable and CD-ROM.


# Phonebook (M4)


## Phonebook types

Your phone can have up to 7 directories stored on your SIM card and in your phone memory:

- Complete (a list of all the numbers stored in the ADN and FDN)
- Personal directories (ADN) in the SIM card
- Personal directories (ADN) in the phone memory
- Service dialling numbers (SDN)
- Fixed dialling numbers (FDN)
- Own number
- Voice mail number

 When viewing any of the directories described, you can switch to the other directories (if your SIM card supports them) by pressing .

 The maximum number of phone numbers that can be stored on a SIM card is the total of the ADN, FDN and SDN directories.

 When you activate the phonebook, the directory which you were referring to the last time will open.

## Personal directory (ADN)

These numbers are known as abbreviated dialling numbers (ADN). There are two types of ADN, one is the phonebook stored in the phone memory (the phonebook (Phone)) and the other is the phonebook stored on the SIM card (the phonebook (SIM)).

### Phonebook (SIM)

- Up to 255 personal data can be stored in the SIM card.
- Each personal data contains a phone number, a name and a location number.

 The number of phone numbers that can be stored on a SIM card depends on the SIM card capability.

### Phonebook (Phone)

Up to 500 personal data can be stored in your phone memory. Each personal data is given a location number (1 to 500), and it can be allocated to a group.


To each personal data, you can set the following:

- Name
- 7 phone numbers (Home, Mobile, Work, Data, Fax, Other phone x 2)
- 2 Email addresses
- 2 descriptive information
- Group, Voice tag, LED colour, Picture/Video, Ringer and Location number

 Up to 10 phone numbers can have a voice recognition recording allocated to them.

## Fixed dialling numbers (FDN)


Fixed dialling numbers are a means of limiting which numbers can be called from your phone. With the FDN feature switched on (see page 26), you can call with your phone the numbers you have stored in this phonebook and the emergency number only.

 **Although FDN is supported by your phone, it must be present on your SIM card - check with your service provider.**

## Service dialling numbers (SDN)

The numbers stored in the SDN directory are pre-installed by your service provider. They will call numbers and services as agreed with your supplier (e.g. customer enquiries, billing information, sportslines, weatherlines, etc.) and cannot be edited by you.



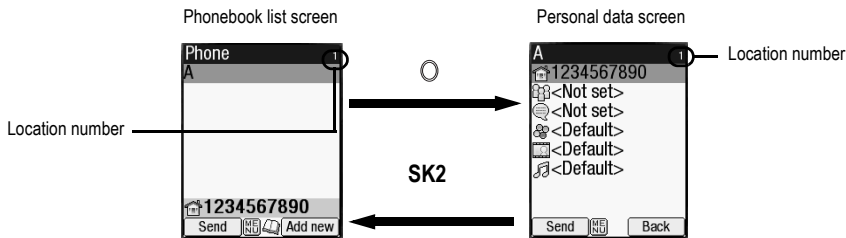


 **Although SDN is supported by your phone, it must be present on your SIM card - check with your service provider.**



## Accessing your phonebook (M4)


You can store personal information in the phonebook of your phone or your SIM card.

### Displaying a personal data (M41)



  4 1 and the appropriate key for the desired directory or  until the required directory is displayed → Highlight the required personal data  
→  

### Displaying information about your phonebook (M42)

  4 2 to display the information about your phonebook.





 This function is SIM dependent.


### Call options (M43)






  4 3 to display the Call options screen.

 For details on the Call options screen, see "Call options (M43)" on page 11.

## Phonebook list Options menu

-   **4 1** and the appropriate key for the desired directory or  until the required directory is displayed → Highlight the required personal data  
→ 

No.	Phonebook list Options menu	
1	<b>Add new</b>	Adds a new personal data to Phone/SIM/FDN.
2	<b>Edit</b>	Displays the data edit screen to edit the currently highlighted personal data.  <i>When editing the data in FDN, you will be prompted to enter PIN2 code.</i>
3	<b>Copy</b>	Copies personal data to another phonebook (see "Copying and moving personal data" on page 51 for details).
		<b>1 Current copy</b> Copies the currently highlighted personal data.
4	<b>Move</b>	<b>2 Package copy</b> Copies the selected data in the list.
		Moves the currently highlighted personal data to SIM, Phone, FDN, Own number or Voice mail number.
5	<b>Delete</b>	Deletes personal data.
		<b>1 Delete current</b> Deletes the currently highlighted personal data.
5	<b>Delete</b>	<b>2 Delete all</b> Deletes all the data in the list.

No.	Phonebook list Options menu																						
6	Groups	<p><b>Editing the group information</b></p> <ul style="list-style-type: none"> <li>➤ Highlight the group you wish to edit → <b>SK1</b> and highlight the required field</li> <li>➤ To rename the group name, select Group name field → Key in the name of the group → <input type="text"/></li> <li>➤ To set information on the selected group, select Info field → Key in the info → <input type="text"/></li> <li>➤ To select the LED colour, select LED field → <b>1</b> → Highlight the desired colour → <input type="text"/></li> <li>➤ To select the CLI picture/video, select Picture/Video field → <b>1</b> for Picture or <b>2</b> for Video → Highlight the desired picture or video → <input type="text"/></li> <li>➤ To select the ringer, select Ringer field → <b>1</b> for Sound, <b>2</b> for Video or <b>3</b> for MP3 → Highlight the desired sound, video or MP3 → <input type="text"/></li> <li>➤ <b>SK1</b> to set the change</li> </ul> <p> <i>If the personal settings for the LED colour, CLI picture/video, or the ringer are also set, they have priority over those of the Group settings.</i></p> <p><b>Group member list screen Options menu</b></p> <ul style="list-style-type: none"> <li>➤ Highlight the group you wish to edit → <input type="text"/> to display the list of group members → Highlight the member → <input type="text"/> (MENU)</li> </ul> <table border="1" data-bbox="274 458 1200 689"> <tbody> <tr> <td data-bbox="274 458 507 487"><b>1</b></td> <td data-bbox="507 458 507 487"><b>Call</b></td> <td data-bbox="507 458 1200 487">Calls the highlighted member.</td> </tr> <tr> <td data-bbox="274 487 507 516"><b>2</b></td> <td data-bbox="507 487 507 516"><b>Create message</b></td> <td data-bbox="507 487 1200 516">Creates a new message to the highlighted member.</td> </tr> <tr> <td data-bbox="274 516 507 545"><b>3</b></td> <td data-bbox="507 516 507 545"><b>Add new</b></td> <td data-bbox="507 516 1200 545">Creates a new phonebook entry to join the group.</td> </tr> <tr> <td data-bbox="274 545 507 574"><b>4</b></td> <td data-bbox="507 545 507 574"><b>Add to group</b></td> <td data-bbox="507 545 1200 574">Adds a phonebook entry to the group.</td> </tr> <tr> <td data-bbox="274 574 507 603"><b>5</b></td> <td data-bbox="507 574 507 603"><b>Remove from group</b></td> <td data-bbox="507 574 1200 603">Removes the highlighted member from the group.</td> </tr> <tr> <td data-bbox="274 603 507 632"><b>6</b></td> <td data-bbox="507 603 507 632"><b>Remove and delete</b></td> <td data-bbox="507 603 1200 632">Removes the highlighted member from the group and delete the phonebook entry at the same time.</td> </tr> <tr> <td data-bbox="274 632 507 662"><b>7</b></td> <td data-bbox="507 632 507 662"><b>Add desktop icon</b></td> <td data-bbox="507 632 1200 662">Creates a desktop icon of the phone number/Email address of the highlighted member.</td> </tr> </tbody> </table>	<b>1</b>	<b>Call</b>	Calls the highlighted member.	<b>2</b>	<b>Create message</b>	Creates a new message to the highlighted member.	<b>3</b>	<b>Add new</b>	Creates a new phonebook entry to join the group.	<b>4</b>	<b>Add to group</b>	Adds a phonebook entry to the group.	<b>5</b>	<b>Remove from group</b>	Removes the highlighted member from the group.	<b>6</b>	<b>Remove and delete</b>	Removes the highlighted member from the group and delete the phonebook entry at the same time.	<b>7</b>	<b>Add desktop icon</b>	Creates a desktop icon of the phone number/Email address of the highlighted member.
<b>1</b>	<b>Call</b>	Calls the highlighted member.																					
<b>2</b>	<b>Create message</b>	Creates a new message to the highlighted member.																					
<b>3</b>	<b>Add new</b>	Creates a new phonebook entry to join the group.																					
<b>4</b>	<b>Add to group</b>	Adds a phonebook entry to the group.																					
<b>5</b>	<b>Remove from group</b>	Removes the highlighted member from the group.																					
<b>6</b>	<b>Remove and delete</b>	Removes the highlighted member from the group and delete the phonebook entry at the same time.																					
<b>7</b>	<b>Add desktop icon</b>	Creates a desktop icon of the phone number/Email address of the highlighted member.																					
7	Sort	<p>Sorts the personal data in the order of alphabets or location number.</p> <p> <i>Sorting may take time depending on the number of personal data entries, the number of characters contained in each entry and the type of language.</i></p> <table border="1" data-bbox="274 772 1200 906"> <tbody> <tr> <td data-bbox="274 772 507 878"><b>1</b></td> <td data-bbox="507 772 507 878"><b>Alphabetic</b></td> <td data-bbox="507 772 1200 878">           Sorts the personal data alphabetically.   <i>You can jump directly to a name beginning with specific characters by pressing the appropriate key (e.g. press 5 once to jump to names beginning with J, or twice to jump to names beginning with K).</i> </td> </tr> <tr> <td data-bbox="274 878 507 906"><b>2</b></td> <td data-bbox="507 878 507 906"><b>Location</b></td> <td data-bbox="507 878 1200 906">Sorts the personal data in memory location number.</td> </tr> </tbody> </table>	<b>1</b>	<b>Alphabetic</b>	Sorts the personal data alphabetically.  <i>You can jump directly to a name beginning with specific characters by pressing the appropriate key (e.g. press 5 once to jump to names beginning with J, or twice to jump to names beginning with K).</i>	<b>2</b>	<b>Location</b>	Sorts the personal data in memory location number.															
<b>1</b>	<b>Alphabetic</b>	Sorts the personal data alphabetically.  <i>You can jump directly to a name beginning with specific characters by pressing the appropriate key (e.g. press 5 once to jump to names beginning with J, or twice to jump to names beginning with K).</i>																					
<b>2</b>	<b>Location</b>	Sorts the personal data in memory location number.																					

No.	Phonebook list Options menu					
8	<b>Location</b>	Searches for the personal data by the location number. <ul style="list-style-type: none"> <li>☛ Key in the desired location number → <b>SK1</b> to display the Phonebook list screen with the selected personal data highlighted.</li> </ul>				
9	<b>Show</b>	Displays phonebook information.				
		<table border="1"> <tr> <td>1</td> <td><b>Summary</b></td> <td>Displays the summary of phonebook contents.</td> </tr> <tr> <td>2</td> <td><b>Voice tag list</b></td> <td>Displays the phonebook entry names with the voice recognition tags recorded.</td> </tr> </table>	1	<b>Summary</b>	Displays the summary of phonebook contents.	2
1	<b>Summary</b>	Displays the summary of phonebook contents.				
2	<b>Voice tag list</b>	Displays the phonebook entry names with the voice recognition tags recorded.				
0	<b>IR send</b>	Sends the currently highlighted personal data to another device through the IR port. <ul style="list-style-type: none"> <li>☛ See also: "IR send" on page 79.</li> </ul>				
*	<b>Add desktop icon</b>	Creates a desktop icon of the highlighted personal data.				

☞ Depending on the conditions, some options may be displayed in gray and not be available.

## Making a call or creating a message from the phonebook list

- ☛ Highlight a desired personal data to display the stored numbers or Email addresses in the help area → Use ◀ and ▶ to display the other stored phone numbers or Email addresses, if any, in the help area.
- ☛ ☎ to make a phone call to the displayed phone number, or **SK1** to send a new message to the phone number or Email address

## Adding a new personal data

- ☛ (MENU) **4 1** and the appropriate key for the desired directory, or ☞ until the required directory is displayed → **SK2** → Select the directory to which you wish to store the personal data → Enter the name and other necessary information → **SK1** (see "Editing an existing personal data" on page 49).

☞ You can also input phone numbers on the standby screen and ☞ to add a new personal data.

☞ It is best to store numbers using the international number format.

## Editing an existing personal data

- ☛ (MENU) **4 1** and the appropriate key for the desired directory or ☞ until the required directory is displayed → Highlight the required personal data → (MENU) **2**

☞ For the phonebook (SIM) and FDN, only the name, phone number and the location number can be added or edited in the following procedures.

☞ For the own number and voice mail number settings, only the name and phone number can be added or edited in the following procedures.

### Adding/editing phone numbers, Email addresses & personal information

- ☛ Highlight the field you wish to edit or add information to → ○
- ☛ Add the required number or information or make necessary changes to the selected field → ○
- ☛ Highlight another field to make further changes, if required

☞ You can edit the Name, Phone number, Email address and Info fields by the above method.

## Allocating a group

- Highlight the Group field → ○ → Highlight the group you wish to add the current personal data to → ○

## Voice recall functions

### Adding a Voice recall recording

- Highlight the Voice tag field → ○ → 1

- Say the name you wish to record as a voice tag → Say the name again for confirmation according to the displayed message.

### Playing a Voice recall recording

- Highlight the Voice tag field → ○ → 2

### Deleting a Voice recall recording

- Highlight the Voice tag field → ○ → 3

*Up to 10 voice tags can be stored.*

*You can check the number of stored voice tag and list of those tags (see “Summary” and “Voice tag list” on page 49).*

## Allocating a LED colour

- Highlight the LED colour field → ○ → 1 → Highlight the desired colour → ○

*The personal setting for the LED colour has priority over the Group setting and phone setting for the LED colour.*

## Allocating a picture or video as a CLI

You can set a picture or video to be displayed on the screen as a Calling Line Identification (CLI) for an incoming call.

- Highlight the Picture/Video field → ○ → 1 to display the picture list screen or 2 to display the video list screen

- Highlight the desired picture/video → **SK1** to preview the picture/video or ○ to select the highlighted picture/video

*A ✓ is displayed on the icon for which the item is currently selected.*

*If an MP3 file is set as a ringer in Phone mode and a CLI video is also set, the default picture, instead of the CLI video, will be displayed with the MP3 file.*

*See also: “Ringer” on page 23 and “Pictures (M63)” on page 60.*

## Allocating sound/video/MP3 as a ringer

You can set a sound, video or MP3 as a ringer for an incoming call. When a video is set, a movie is displayed on the screen with the sound.

- Highlight the Ringer field → ○ → 1 to display the sound list screen, 2 to display the video list screen or 3 to display the MP3 list screen

- Highlight the desired sound, video or MP3 → **SK1** to preview the file or ○ to select the highlighted file

*A ✓ is displayed on the icon for which the item is currently selected.*

*If the video as a ringer is set, it will sound and will be displayed on the screen regardless of the CLI picture/video setting.*

*See also: “Sounds (M62)” on page 59.*





## Allocating a location number

- Highlight the Location number field → ○ → Key in the desired location number → ○


## Saving the edited personal data

- After editing the required field, **SK1** to save the edited data and return to the previous screen.

## Copying and moving personal data

- (MENU)** **4** 1 and the appropriate key for the desired directory or  until the required directory is displayed → Highlight the required personal data/ list of data → **(MENU)** **3** to copy or **(MENU)** **4** to move
- For copying, **1** to copy the highlighted personal data entry or **2** to copy the selected personal data entries in the current list
- Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number)
-  If you copy or move from phonebook (Phone), the Origin number screen will be displayed to choose which phone number to copy or move.
-  When copying the selected personal data entries (Package copy) from phonebook (Phone), you can copy only the first or all the numbers in each entry.
- Key in the desired location number → **0**
-  If you copy or move to phonebook (Phone), the Number type screen will be displayed to choose the phone number type.

## Personal data Options menu


- (MENU)** **4** 1 and the appropriate key for the desired directory or  until the required directory is displayed
- Highlight the required data → **0** → Highlight the required field → **(MENU)**

No.	Personal data Options menu	
1	<b>Call</b>	Calls the highlighted phone number.
2	<b>Create message</b>	Creates a new message to the highlighted phone number or Email address.
3	<b>IR send</b>	Sends the selected personal data to another device through the IR port.
4	<b>Edit</b>	Edits the selected personal data.
5	<b>Copy</b>	Copies the selected phone number(s)/Email address(es). <ul style="list-style-type: none"><li>Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number → <b>0</b></li></ul>
6	<b>Move</b>	Moves the currently highlighted personal data. <ul style="list-style-type: none"><li>Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number → <b>0</b></li></ul>
7	<b>Delete current</b>	Deletes the selected personal data.
8	<b>Add desktop icon</b>	Creates a desktop icon of the selected personal data.


 See also: "Editing an existing personal data" on page 49 and "Copying and moving personal data" on page 51 for the above operations.

## Voice mail (M417)

Voice mail function enables you to forward received calls to the Voice mail centre, and the caller can leave voice messages in your voice mail mailbox. You may be notified by an icon on the standby screen if the caller leaves a voice message.


 **The voice mail service is network dependent. Contact your service provider for details on your voice mail number.**

### Setting the Voice mail number


 This function is available when the Voice mail number has not been set.

  4 1 7 → Highlight the required line →  twice →  → key in the voice mail number →  → **SK1** to save the change.


### Forwarding a call to the Voice mail centre


 Set the voice mail centre number (see “Setting the Voice mail number” for details) → Set up Call diversion (see “Call diversion (M161)” on page 13 for details). When you receive a call set to be diverted, the call will be diverted to the voice mail centre.

### Retrieving a Voice mail

 This function is available when the Voice mail number has been set.

  4 1 7 → Highlight the required line → 

 You can also retrieve a voice mail by pressing and holding 1 from the standby screen.







 To set up the line to call the voice mail centre, see “ALS setup” on page 21 for details.

## Camera (M5)








Camera function enables you to take pictures or record videos and save them as Joint Photographic Expert Group (JPEG) files and 3rd Generation Partnership Project (3GPP) files respectively. You can enjoy the picture and video files in many ways: send them attached to an MMS or Email, set a picture file as the wallpaper for your phone, etc.

### Notes on using the camera



#### Handling the Camera

-  **The camera of your phone is manufactured using high-precision technology. However, there may be dots or lines on the screen that appear darker or brighter than the others. Note also that when you are shooting or recording in dimly-lit places, the amount of noise (such as red and blue dots or horizontal lines) may increase noticeably.**
-  **Be careful not to apply force to the lens when closing your phone. This could damage the lens.**
-  Fingerprints or grease on the lens can result in focusing problems or dark images. Wipe the lens clean with a soft cloth before use.
-  The image quality may be degraded after your phone has been left for a long period in a warm place.
-  Exposing the camera to direct sunlight for a long period could discolour the camera's internal colour filter and cause discoloured images.
-  Camera mode is automatically cancelled if none of the phone's keys are pressed for 3 minutes or longer.

#### Precautions when taking pictures/recording videos

-  You cannot switch the camera's shutter sound off. The shutter makes a clicking sound when you take a picture or start/end a video recording, even when the phone is in Meeting mode.
-  Avoid camera shake. Moving the phone when you take a picture will result in a blurred image. Hold the camera firmly to keep it still when you take a picture, or use the auto timer to take the shot.
-  As there is a slight delay from the time you press  or **Side up** until the picture is actually taken, do not move the camera until you hear the shutter sound.
-  If taking a picture with not enough light, try to hold the phone still as much as possible, and for a longer period of time after the shutter sound: the shutter speed may be slower in a darker environment.
-  Note that if you attempt to shoot directly into a strong light source, such as the sun, another bright light or the high reflecting target with strong light, the image may contain washed-out white highlights or be disrupted.
-  While recording, be careful not to cover the mouthpiece of your phone as it is used as the microphone to record sound along with the video.

#### Copyright information

-  Images and videos shot or recorded on your phone cannot be used in ways that infringe copyright laws without the consent of the copyright holder, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use.
-  Users are also asked to note that the transfer of images protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.



**Be considerate of other people's privacy when you take a picture or record a video using the camera of your phone and send it to others.**

## Taking a picture (M51)






- ☛ To activate the camera function, press and hold **Side up** or **(MENU) 5 1**
- ☞ *When you highlight Camera on the Camera screen, pressing **SK1** creates a desktop icon of the camera function on the standby screen.*
- ☛ Look into the camera view finder screen and adjust the camera position to place the target on the screen.
- ☞ *You can switch the camera view finder screen between the main-LCD and the 2nd-LCD by pressing **\***.*
- ☞ *You can take a picture while the phone is closed.*
- ☛ Hold the phone still → To use the shutter, **○** or **Side up** → Check the picture → If successfully taken, **○** → Saved as a JPEG file in a folder in Pictures
- ☞ *After taking a picture, **SK1** to send the taken picture attached to a message, and **SK2** to discard the picture.*
- ☞ *The default file name for the picture saved in the folder is the date, month, year and sequence number. When you take pictures in burst mode, the saved files will be named by the default file names plus a consecutive two-digit number at the end.*
- ☞ *If a call comes in while you are checking or saving a photographed image, image storage is cancelled. When this occurs, the next time you select camera function a message appears to say that you have an image that was not stored, allowing you to check and store the image.*
- ☞ *Before taking a picture, you can switch to the video camera function by pressing **SK2**. This use of **SK2**, however, is invalid if the self-timer function is activated.*


### Operations when taking a picture

- ☛ To turn the light on or off, **SK1** or **Side down**
- ☞ *Take care not to hold the light too close to your or other people's eyes when the light is lit.*
- ☛ To zoom in and out, **▲** or **▼**
- ☞ *You can also select 1x, 2x, 3x, 4x or 5x magnification from the Zoom setting on the Camera Options menu.*
- ☛ To turn on/off the camera view finder on the full screen, **#**.
- ☞ *Depending on the photo size, there may be parts not seen on the full screen view finder display in the saved picture.*
- ☛ To control the brightness level of the picture, **◀** or **▶**

### Camera Options menu (before taking a picture)

No.	Camera Options menu (before taking a picture)	
1	<b>Single mode/Burst mode</b>	Switches the shooting mode to Single/Burst mode (serial shooting).
2	<b>Shoot environment</b>	Changes the camera settings to suit the environment. Select from Standard, Person, Room or Darkness.
3	<b>Effect</b>	Applies special effect to the picture. Select from Off, Sepia, Monochrome, or Negative film.

No.		Camera Options menu (before taking a picture) (Continued)	
4	<b>Photo size</b>	Sets the picture size to Sub-QCIF (128x96), QCIF (176x144), Main-LCD (176x220), CIF (352x288), VGA (640x480) or SXGA (1280x1024).  You cannot use the Zoom function for VGA and SXGA, and you can select 1x to 2x magnification for Main-LCD and CIF, 1x to 4x magnification for QCIF and 1x to 5x magnification for Sub-QCIF.  You can use the Frame and Burst mode functions for Sub-QCIF, QCIF and Main-LCD.  You cannot use the Full screen function for Sub-QCIF and QCIF.  If you select Main-LCD, CIF, VGA or SXGA, the picture on the camera view finder screen will be displayed as a smaller picture than the actual size. Also on the camera view finder screen, the picture size before shooting differs from the size after shooting.	
5	<b>Image quality</b>	Sets the image quality to Super fine, Fine, Normal, Economy or Super economy.	
6	<b>Frame</b>	Selects whether to use a frame when taking pictures, and sets the desired frame with which a picture will be taken.	
7	<b>Self timer/Self timer cancel</b>	Activates or deactivates the self-timer function.	
8	<b>Sound settings</b>	Selects the Shutter sound and Self timer sound.	
9	<b>Pictures</b>	Opens Pictures in My data.	
0	<b>Other settings</b>	<b>Add desktop icon:</b>	Creates a desktop icon of the camera function on the standby screen.
		<b>Automatic save:</b>	Selects whether to save taken pictures automatically or not.
		<b>Save in:</b>	Selects the folder (preset or created) where the taken picture will be saved.
		<b>Light:</b>	Turns the light on or off.
		<b>Brightness:</b>	Changes the brightness level of the picture between -2 and +2.
		<b>Zoom:</b>	Changes the zoom magnification from 1x, 2x, 3x, 4x or 5x.
		<b>Thumbnail view:</b>	Selects whether to display the pictures taken in the Burst mode as thumbnails or slides.
		<b>Video recorder:</b>	Activates the video function.
		<b>Flicker control:</b>	Selects 50Hz, 60Hz or Auto to prevent flickers when taking a picture under a fluorescent light.
*	<b>Switch finder</b>	Selects whether to display the camera view finder on the main-LCD or the 2nd-LCD.  On the 2nd-LCD view finder, the object appears as a mirrored image.	
#	<b>Full screen</b>	Turns the Full screen on or off.	

 Depending on the conditions, some options may be displayed in gray and not be available.

## Camera Options menu (after taking a picture)

No.	Camera Options menu (after taking a picture)	
1	Save current	Saves the currently displayed picture in the folder selected as Save in setting. In Burst mode, only the highlighted picture is saved.
2	Save all	Saves all pictures taken in Burst mode.
3	Create message	Creates a new message with the file attached.
4	Set as wallpaper	Sets the picture to be the main-LCD or 2nd-LCD wallpaper.
5	Display as normal image/Display as mirror image	Selects whether to display the taken picture as a normal or mirror image on the main-LCD preview screen when you select the 2nd-LCD as a camera view finder in Single mode.
6	Save as mirror image	Saves the picture as a mirror image when you select the 2nd-LCD as a camera view finder in Single mode.
7	Thumbnail view	Selects whether to display the pictures taken in the Burst mode as thumbnails or slides.
8	Automatic save	Selects whether to save taken pictures automatically or not.
9	Save in	Selects the folder (preset or created) where the taken picture will be saved.
0	Pictures	Opens Pictures in My data.

Depending on the conditions, some options may be displayed in gray and not be available.

## Recording a video (M52)

### Recording a video

To record a video, keep your phone open at all time. Unlike taking a picture, you cannot record a video while the phone is closed.

Press and hold **Side up** then **SK2**, or **5 2** → Look into the view finder screen and adjust the camera position.

When you highlight Video recorder on the Camera screen, pressing **SK1** creates a desktop icon of the video function on the standby screen.

You can switch the camera view finder screen between the main-LCD and the 2nd-LCD by pressing **\***.

To start recording, **O** or **Side up** → The progress bar will show the ratio of how much you have recorded already.










While recording, be careful not to cover the mouthpiece of your phone as it is used as the microphone to record sound along with the video.

While recording, the key tones are deactivated.





Move the camera to capture the scenes you want → To stop recording, **O** or the **Side up**.

After the set video file size is reached, the recording automatically stops.

After recording, **SK1** to replay the recorded video, and **SK2** to send the video file attached to a message.

-  While replaying, you can fast forward by pressing **▶** or rewind by pressing **◀**. **▶** / **◀** again to cancel fast forwarding/rewinding and continue to replay.
-  You can discard the recorded video by pressing **⏻** or **CLR**.
-  To save the recorded video, **○**. The recorded video is saved as a 3GPP file in the Videos - My movies folder in My data (see page 59).
-  Pressing **#** before/while playing a video file will enlarge the replay screen size, and pressing **#** will return the screen size to normal for Sub-QCIF only.
-  The default file name for the recorded video saved in the folder is the date, month, year and sequence number.
-  For the operations while replaying the video, see "Videos (M61)" on page 59.
-  For the operations while recording a video, see "Operations when taking a picture" on page 54.
-  If a call comes in while you are checking or saving a video, video storage is cancelled. If this occurs, the next time you select camera function a message appears to say that you have a video that was not stored, allowing you to check and store the video.
-  Before recording a video, you can switch to the camera function by pressing **SK2**. This use of **SK2**, however, is invalid if the self-timer function is activated.


## Operations when recording a video

-  To turn the light on or off, **SK1** or **Side down**
-  Take care not to hold the light too close to your or other people's eyes when the light is lit.
-  To zoom in and out, **▲** or **▼**
-  To control the brightness level of the picture, **◀** or **▶**


## Video recorder Options menu (before recording a video)


No. Video recorder Options menu (before recording a video)	
1	<b>Shoot environment</b> Changes the camera settings to suit the conditions. Select from Standard, Person, Room or Darkness.
2	<b>Effect</b> Applies special effect to the video. Select from Off, Sepia, Monochrome or Negative film.
3	<b>Screen size</b> Sets the video screen size to Sub-QCIF (128x96) or QCIF (176x144).
4	<b>Video file size</b> Sets the video file size to Mail size or Normal size.
5	<b>Quality</b> Sets the video quality to High or Standard.
6	<b>Self timer/Self timer cancel</b> Activates or deactivates the self-timer function.
7	<b>Self timer sound</b> Selects the self timer sound from Sound1, Sound2 or Sound3.
8	<b>Videos</b> Opens Videos in My data.

No.	Video recorder Options menu (before recording a video)	
9	<b>Other settings</b>	<p><b>Add desktop icon:</b> Creates a desktop icon of the video function on the standby screen.</p> <p><b>Save in:</b> Selects the folder (preset or created) where the recorded video will be saved.</p> <p><b>Light:</b> Turns the light on or off.</p> <p><b>Brightness:</b> Changes the brightness level of the video between -2 and +2.</p> <p><b>Zoom:</b> Changes the zoom magnification from 1x to 5x for Sub-QCIF and from 1x to 4x for QCIF.</p> <p><b>Camera:</b> Activates the camera function.</p> <p><b>Flicker control:</b> Selects 50Hz, 60Hz or Auto to prevent flickers when taking a picture under a fluorescent light.</p>
0	<b>Switch finder</b>	Selects whether to display the viewfinder on the Main-LCD or the 2nd-LCD.

 Depending on the conditions, some options may be displayed in gray and not be available.

### Video recorder Options menu (after recording a video)

No.	Video recorder Options menu (after recording a video)	
1	<b>Save</b>	Saves the currently displayed video.
2	<b>Create message</b>	Creates a new message with the file attached.
3	<b>Set as ring tone</b>	Sets the video as the ringtone.
4	<b>Set as wallpaper</b>	Sets the video to be the main-LCD wallpaper.
5	<b>Full screen</b>	<p>Selects whether to enlarge the replay screen size.</p> <p> You cannot use the Full screen function for QCIF.</p>
6	<b>View detail</b>	Displays detailed information on the selected video.
7	<b>Save in</b>	Selects the folder (preset or created) where the recorded video will be saved.
8	<b>Videos</b>	Opens Videos in My data.

 Depending on the conditions, some options may be displayed in gray and not be available.

## My data (M6)

Using My data, you can playback sound and MP3 files, or display pictures and videos downloaded from the Internet or captured with the camera function of your phone.

### Videos (M61)

In the following section, how to playback video files (videos) stored in your phone is described. You can either record videos using your phone, download them from the Internet, receive them attached to messages. There are two pre-set folders: My Movies and Download.

#### Replaying the video files

- ☛ ▼ 1 or (MENU) 6 1 → Highlight a folder → ○ → Highlight a video file you wish to replay → ○ → The video file will be replayed.
- ☞ When the flat view function is activated, the list of folders is not displayed. The list of all the stored video files is displayed.
- ☞ If you wish to move to another hierarchy folder, use ◀ and ▶.
- ☞ Pressing # on the video preview screen will enlarge the replay screen size, and pressing # again will return the screen size to normal for Sub-QCIF only.
- ☞ For the definitions of the icons displayed while replaying, see "LCD and displayed icons" on page viii.

#### Operations while replaying video

- ☛ To stop, SK2
- ☛ To pause, SK1 → While pausing, SK1 again to restart and continue the replay.
- ☛ To fast forward/rewind, ▶ / ◀ → ▶ / ◀ again to cancel fast forwarding/rewinding and continue the replay
- ☛ To enlarge the replay screen size, # for Sub-QCIF only
- ☛ To adjust the volume, Side keys
- ☛ To display the previous/next file, ▲ or ▼
- ☞ You cannot fast forward, rewind or enlarge the screen for video files with only sound but no image.

### Sounds (M62)

In the following section, how to playback sound files stored in your phone is described. There are three pre-set folders: Download, Preset and Voice memo.

#### Selecting and playing sound

- ☛ ▼ 2 or (MENU) 6 2 → Highlight a folder → ○ → Highlight a sound file you wish to replay → ○
- ☞ When the flat view function is activated, the list of folders is not displayed. The list of all the stored sounds files is displayed.
- ☞ If you wish to move to another hierarchy folder, use ◀ and ▶

## Operations while playing sound

- To stop, **SK2**
- To adjust the volume, **Side** keys.
- To replay the previous/next file, **▲** or **▼**

## Pictures (M63)

The Pictures function allows you to display images and animations, which were obtained with the camera function of your phone, received as a file attached to MMS messages, or downloaded from the Internet. The images can also be edited using this function. From the Pictures function you can also attach images and animations to messages you compose. There are five pre-set folders: Photo, Download, Preset, Frame, and Stamp.

### Displaying the Pictures view screen

- **▼ 3** or **(MENU) 6 3** → Highlight a folder → **○** → Highlight an image file you wish to display → **○**
- To display the previous/next image file, **▲** or **▼**

**ℹ** When the flat view function is activated, the list of folders is not displayed. The list of all the stored image file is displayed.

**ℹ** If you wish to move to another hierarchy folder while the Thumbnail view is turned off, use **◀** and **▶**

### Cutting the image

- Highlight or display the image file you wish to edit → **(MENU) 1 3** → Select the image size → A frame indicating the cut area appears on the preview screen.
- Move the frame position → **○** → **SK1** if the image is favorable
- ℹ** When you select Free, a cross indicator appears on the preview screen. Move it to the point to start a frame and **○** to confirm the position. Then, expand the frame into the required size and **○** to confirm.

### Reducing the image size

- Highlight or display the image file you wish to edit → **(MENU) 1 4** → Select the image size → **SK1** if the image is favorable

### Rotating the image

- Highlight or display the image file you wish to edit → **(MENU) 1 5** → **SK1** to rotate the image 90 degrees clockwise.
- Keep pressing **SK1** until the image is at the required angle → **○** to confirm

### Decorating the image with stamps

- Highlight or display the image file you wish to edit → **(MENU) 1 6**
- To apply a marker stamp, **1** → Highlight the required stamp → **○** → The marker stamp position is displayed in centre
- ℹ** If you wish to preview the highlighted stamp, **SK1**. To display the previous/next stamp, **▲** or **▼**.
- To apply a text stamp, **2** → Key in the text → **○** → The text stamp position is displayed in centre
- Move the stamp position → **○** to confirm → The stamp preview is displayed again. Repeat applying if necessary, or **(MENU)** to select another stamp.
- **SK1** when finished applying the stamp (the stamp preview will not be applied this time)

## Adding a frame to the image

- Highlight or display the image file you wish to edit → **(MENU) 17** → Highlight a frame → **○** to preview the resulting image → Scroll through the various frames by **▲** and **▼** → **○** to confirm.

## Saving the edited image

- After any edition, **SK1** or **○** to save the edited image → Select the Save Quality
- ℞ SK1** to check the expected size of the image.
- Edit the name (if required) → **○**

## Printing an image using a printer

You can print an Exif format image file by connecting your phone to a PictBridge compatible printer using a USB cable (option).

- ℞** There may be PictBridge compatible printers that cannot be connected to your phone.
- ℞** Refer to the operation manual of the printer for details on the printing.
- ℞** For some printers, an image file name including characters other than alphanumeric characters (e.g. accentuated characters) may cause an error when printing.
- ☑ ▼ 3** or **(MENU) 6 3** → Highlight a folder → **○** → Highlight an image file you wish to print → **(MENU) 2 4**
- ℞** "Print via USB" may be displayed in gray and unavailable, depending on the image file.
- Connect your phone and the printer with the USB cable → Prepare the printer ready for printing, referring to its manual
- Check the print detail screen displayed
  - To print as seen on the detail screen, **SK1**
  - To edit the print detail and then print, **(MENU)** on the print detail screen to display the Options menu → Edit the detail using the Options menu → **SK1**
- ℞** The Options menu may change depending on the connected printer.
- ℞** If any interruption or error occurs, or the printing is not completed normally, pull out the USB cable and start again from the first step.

No.	Print via USB Options menu	
1	<b>Number of prints</b>	Sets the number of prints to output.
2	<b>Layout detail</b>	Selects the paper size, paper type and layout to print the image file.
3	<b>Print quality</b>	Selects the required quality of printing.
4	<b>File name</b>	Selects whether or not to print the file name on the paper.
5	<b>Date</b>	Selects whether or not to print the date on the paper.

- ℞** If you want to print multiple images on one sheet, set both the settings for Number of prints and N-up on Layout screen under Layout detail. For example, 4 for Number of prints and 2 for N-up will print 2 sheets with 2 half-sized images per sheet.

## MP3 (M64)

In the following section, the procedures to display and play your MP3 files are described. There is one pre-set folder: Download.

### Selecting and playing an MP3 file

☛ ▼ 4 or (MENU) 6 4 → Highlight the MP3 file you want to play → ○

☛ When the flat view function is activated, the list of folders is not displayed. The list of all the stored MP3 files is displayed.

☛ To create your own playlist, see "MP3 player (M81)" on page 67.

### Operations while playing an MP3 file

☛ To stop, **SK2**



☛ To adjust the volume, **Side** keys.


☛ To replay the previous/next file, ▲ or ▼


## File selector Options menu


☛ Display the Videos/Sounds/Pictures/MP3 list screen → Highlight a file → (MENU)

No.	File Selector Options menu	
1	<b>Edit item</b>	<b>Rename item:</b> Edits the file/folder name of the selected file/folder. <b>Set protection:</b> Sets the protection settings of the selected folder or file on/off. <b>Cut:</b> Cuts the selected picture into Sub-QCIF (128x96), QCIF (176x144), Main-LCD (176x220), 2nd-LCD (128x128) or Free. <b>Reduce:</b> Reduces the selected picture to fit within Sub-QCIF (128x96), QCIF (176x144), Main-LCD (176x220) or 2nd-LCD (128x128). <b>Rotate:</b> Rotates the selected picture. <b>Stamp tool:</b> Adds a marker or text stamp on the selected picture. <b>Frame:</b> Sets a frame to the selected picture. ☛ You cannot use the Cut and Rotate functions for SXGA. ☛ You can only use the Stamp tool and Frame functions for Sub-QCIF, QCIF and Main-LCD.
2	<b>Use item (Videos)</b>	<b>Set as ring tone:</b> Sets the selected video to be the ringer tone. <b>Set as wallpaper:</b> Sets the selected video to be the main-LCD wallpaper. <b>IR send:</b> Sends the selected video through the IR port to other devices or a cellphone.

No.	File Selector Options menu	
2	<b>Use item (Sounds)</b>	<p><b>Set as ring tone:</b> Sets the selected sound to be the ring tone.</p> <p><b>Set as SMS tone:</b> Sets the selected sound to be the SMS tone.</p> <p><b>Set as MMS tone:</b> Sets the selected sound to be the MMS tone.</p> <p><b>IR send:</b> Sends the selected sound through the IR port to other devices or a cellphone.</p>
2	<b>Use item (Pictures)</b>	<p><b>Set as wallpaper:</b> Sets the selected image to be the main-LCD or 2nd-LCD wallpaper.</p> <p><b>Add desktop icon:</b> Creates a desktop icon for the selected image on the standby screen.</p> <p><b>IR send:</b> Sends the selected image through the IR port to other devices or a cellphone.</p> <p><b>Print via USB:</b> Prints the selected image file using a PictBridge printer via USB cable (option) (see page 61).</p>
2	<b>Use item (MP3)</b>	<p><b>Set as ring tone:</b> Sets the selected MP3 to be the ring tone.</p> <p><b>IR send:</b> Sends the selected MP3 through the IR port to other devices or a cellphone.</p>
3	<b>Create message</b>	<p>Creates a new message with the file attached.</p> <p> <i>This function is not available for the MP3 files.</i></p>
4	<b>Delete item</b>	Deletes the selected file and folder.
5	<b>Delete all</b>	Deletes all the files in the current list.
6	<b>Copy item</b>	Copies the selected file or folder to the selected folder.
7	<b>Copy all</b>	Copies all the files in the current list to the selected folder.
8	<b>Move</b>	Moves the selected file/folder or all the files in the current list to the selected folder.
9	<b>Create folder</b>	Creates a new folder under the current folder.
0	<b>Storage detail</b>	Displays the current storage information of your phone memory.
*	<b>View detail</b>	<p>Displays the details of the selected folder or file.</p> <p> <i>You can also display the details on the highlighted folder or file by pressing * without displaying the Options menu.</i></p>

No.	File Selector Options menu		
#	Options	<b>Sorting order:</b> <b>Info column:</b>           <b>Thumbnail view:</b> <b>Flat view:</b> <b>List display:</b>   <b>Save options:</b> <b>Reset options:</b>	Sorts the files by date, alphabetically. Sets whether to display the column on the list screen, and the information to be shown there. <b>None:</b> No column showing <b>Size:</b> Approximate size of the file <b>Type:</b> File type  <i>You can also change the information on the column by pressing # without displaying the Options menu.</i>  Displays the files as thumbnails (for Pictures only). Displays the list of all the stored files regardless of the folder hierarchy. Sets whether to display the user title or the file/folder name. <b>Title:</b> Displays the user title. <b>File name:</b> Displays the file/folder name. Saves the current option settings. Resets the option settings.

 Depending on the conditions, some options may be displayed in gray and not be available.

 Depending on the size of the data, file selector operation may take a long time.

 Neither protected data nor preset data and folders can be deleted or moved.

# Java™ (M7)


You can download Java™ applications (games etc.) from WAP sites and run them on your phone.


## Applications (M71)

### How to run software


To run a software (Java™ application), perform the following.

 **(MENU)** 7 → 1 → Highlight an application containing the software you want to run →  or 

 When you display the Java™ applications list screen for the first time after downloading a program(s), it may take a while for your phone to verify the program(s). A message will be displayed during this process, and you may activate the program(s) after it is completed.

 **After downloading the software, always make sure that you check the downloaded program is displayed in the Applications screen. Do not remove the battery while the software is running as data to that point may not be saved.**


### Applications Options Menu

 **(MENU)** 7 → 1 → Highlight an application containing the software you want to run → **SK1**

No.	Applications Options menu	
1	<b>View info</b>	Displays the information of the selected application.
2	<b>Delete current</b>	Deletes the currently highlighted Java™ application.
3	<b>Delete all</b>	Deletes all the applications.
4	<b>Security setting</b>	Displays the security setting of the highlighted application.

## Network setting (M72)

You can select the connection profile for the Java™ application software to connect to the network.

 **(MENU)** 7 → 2 → To display the Web profiles screen, **1**, or to display the Connection profile screen, **2** (see "Setting the Connection profiles" on page 41 for details).

 This setting is only effective for on-line applications.

## Resident setting (M73)

Some Java™ applications can be used on the standby screen. The application will activate automatically after you display the standby screen and not operate the phone for the set the resume time. Then, if you still do not operate the phone after the set suspend time, the application will change to the suspend mode.

## Selecting the resident Java™ application (M7311)

- ☛ **MENU** 7 → To display the Resident On screen, 3 1 → 1 (Application) → Highlight the required software → ○

## Setting the resume/suspend time (M7312/M7313)

- ☛ **MENU** 7 → To display the Resident On screen, 3 1 → 2 (Resume time) or 3 (Suspend time) → Appropriate key for the required time

## *Storage info (M74)*


You can display the number of Java™ applications currently stored in your phone and the size of free memory.

- ☛ **MENU** 7 → To display the Storage info screen, 4



# Accessory (M8)



## MP3 player (M81)

This feature allows you to create a Playlist to play MP3 files in the order you desire. You can add MP3 files saved in your phone to the Playlist (see "MP3 (M64)" on page 62) or change the order of the MP3 files within the Playlist.

-  **8 1** → **SK1** to play → After playing, **SK2** to stop.
- To change the volume, **Side** keys.
- To play the previous/next file, **▲** or **▼**.
- ℞ When there are no MP3 files saved in the Playlist, the Playlist screen will be displayed in stead of the MP3 player screen.
- ℞ When you use a wired headset, you can start or stop playing by pressing the button on it, and play the next file by pressing and holding it.

## MP3 player Options menu

-  **8 1** 


No.	MP3 player Options menu	
1	<b>Playlist</b>	Displays a list of MP3 files in the order in which they are played. ℞ You can save up to 30 MP3 files in the Playlist depending on the size of each file. ℞ The MP3 files that are deleted from MP3 of My data or erroneous MP3 files are displayed in gray and cannot be played. •   to display the Playlist Options menu below, or <b>SK1</b> to add an MP3 file.
		<b>1 Add item</b> Adds an MP3 file in your phone to the Playlist.
		<b>2 Move item</b> Moves the highlighted MP3 file in the Playlist.
		<b>3 Delete item</b> Deletes the highlighted MP3 file from the Playlist.
		<b>4 Delete all</b> Deletes all the MP3 files from the Playlist.
		<b>5 View detail</b> Displays the properties (file name, title, artist name and recording time) of the highlighted MP3 file.
2	<b>Play mode</b>	<b>Normal:</b> Plays all the MP3 files in order from top to bottom of the Playlist once.
		<b>Repeat all:</b> Plays all the MP3 files in the Playlist repeatedly.
		<b>Repeat one:</b> Plays the selected MP3 file repeatedly.
3	<b>Equalizer</b>	Selects from Rock, Jazz, Pop and Off to obtain the desired tone. ℞ The selected Equalizer setting applies to all the MP3 files in the Playlist.
		<b>4 Add desktop icon</b> Creates a desktop icon of the MP3 player function on the standby screen.

- ℞ Depending on the conditions, some options may be displayed in gray and not be available.

## Calculator (M82)







 

You can perform addition, subtraction, multiplication and division with the calculator. It also has a memory function.


 **MENU** 8 2

 The calculator can display a result of up to 9 digits. If a calculation results in a number exceeding the maximum, the screen displays error in the calculation field.

### Calculator Key Assignment

For calculator function, the keys are assigned different functions. The following shows the key assignment:

Key	Operation	Key	Operation
	Addition (+)		Subtraction (-)
	Multiplication ( $\times$ )		Division ( $\div$ )
	Equals to (=)	<b>SK2</b>	Memory Store/Memory Addition
<b>SK1</b>	Memory Recall/Memory Cancel (Press twice)		Percent (%)
<b>MENU</b>	Inversion ( $\pm$ )		Exit calculator
	Decimal Point (.)	<b>CLR</b>	Delete digit (if held, all clear)



 Using the % function, you can calculate  $(100 + x)$  % of a figure (e.g.  $200 + 5\% = 210$ ) and  $(100 - x)$  % of a figure (e.g.  $200 - 5\% = 190$ ).

## Clock alarm (M83)

This feature enables you to switch the clock alarm function on/off and to set the time, repetition and alarm tone.

### Turning the alarm on/off

 **MENU** 8 3

Clock alarm setting	
<b>On/Off</b>	Turns on or off the alarm.
<b>Set time</b>	Sets the time and am/pm (for 12 hour format) at which the alarm will sound.
<b>Set alarm tone</b>	Sets the melody to be played when the alarm occurs. See "Sounds (M62)" on page 59.
<b>Alarm repeat</b>	Selects alarm repeat for once, daily or day of the week.  You can select more than one day of the week at the same time.  You can remove the check by highlighting and pressing <b>O</b> again.
<b>Enter alarm text</b>	Sets the message (e.g. Wake up!) which is displayed when the alarm occurs (optional).

When all settings are done, **SK1** to save the setting.

The selected melody will be played when the alarm occurs if the ringer is turned on based on the current phone mode. If vibration is turned on, you will be notified of the alarm by vibration.

Even if the phone has been switched off, the phone automatically switches itself on and sounds the alarm or vibrates at the specified time.

You can stop the alarm tone or vibration by pressing any key.

## Scheduler (M84)

Scheduler enables you to enter reminders and appointments for particular time and date.

### Adding a new event

**MENU** 8 4 → Highlight the day → **O** to display the day's schedule list screen (if any) → **SK1**

Scheduler setting	
Event date/time	Sets the day, month, year, time and am/pm (for 12 hour format) of the event.
Event end date/time	Sets the day, month, year, time and am/pm (for 12 hour format) of the end of event.
Description	Sets the event description (optional).
Repeat	Selects repeat for One time only, Daily, Weekly or Monthly.
Reminder	Turns on or off the reminder.
Reminder time	Selects the time to set off the reminder prior to the event start time.
Reminder tone	Associates a reminder tone with an event. You can set the reminder tone only when the Reminder is turned on.
Private	Sets the event as a private event. Place a check mark to set the event as a private event. To set the event as a public event, do not place a check mark.

When all settings are done, **SK1** to save the setting.




The selected melody will be played when the scheduled event occurs if the ringer is turned on based on the current phone mode. If vibration is turned on, you will be notified of the event by vibration.

If the phone has been switched off, the phone does not switch itself on to sound the reminder or vibrate at the specified time.

You can stop the reminder tone or vibration by pressing any key.

If the event is a private event, the reminder will sound at the specified time but the entered description will not be displayed. You are prompted to enter the security code to view the details of the private event.




## Viewing the scheduled events




-  **8 4** → Highlight a day (**SK1** to display the previous monthly/weekly view screen or **SK2** to display the next monthly/weekly view screen)
-  to display the day's schedule list screen (To display the previous/next day's schedule list screen, ◀ or ▶).
-  to display the detail screen of the highlighted schedule.


## Setting the reminder again

- When the scheduler reminder is set off, ◀ or ▶ and **SK2** to select the time to remind again.

## Scheduler Options menu

-  **8 4** → Highlight the day →  to display the day's schedule list screen (if any) → Highlight the required scheduled event → 

No.	Scheduler Options menu	
1	<b>Add new</b>	Adds a new entry.
2	<b>Edit</b>	Edits the highlighted event.
3	<b>Copy</b>	Copies the highlighted event.
4	<b>Delete</b>	Deletes event(s). Press the appropriate keys for the event category (the currently selected event, all the public/private events on the day, all the past public/private events, all the public/private events or all the events) to delete.
5	<b>Go to date</b>	Displays the selected date.
6	<b>Monthly calendar/ Weekly calendar</b>	Switches the weekly view screen to the monthly view screen, or the monthly view screen to the weekly view screen.  You can select Sunday or Monday to start the week from "Set start day" on page 22.
7	<b>View summary</b>	Displays the number of used and available entries.
8	<b>View events</b>	Displays the events. Press the appropriate keys for the event category (Public only, Private only or All) to display.  You are required to key in the security code to display the private events or all events.
9	<b>IR send</b>	Sends the selected schedule through the IR port to other devices or a cellphone.  The IR send function is not available during a call.

 Depending on the conditions, some options may be displayed in gray and not be available.

## ToDo list (M85)

This feature allows you to set up to 100 ToDo tasks that should be finished by a certain date. You can choose to display either all ToDo tasks, or those just finished or unfinished. Each task is identified by a description (of up to 256 characters) and its start/due date.

## Adding a new ToDo task

- (MENU) 8 5 → Highlight the list → ○ → SK1

ToDo list setting	
<b>Start date</b>	Sets the day, month and year to start the ToDo task.
<b>Due date</b>	Sets the date to end the ToDo task. Key in the date or press the appropriate key for the date. Ⓜ If you select to key in the date yourself, input the day, month and year of the date to end the ToDo task, then SK1.
<b>Description</b>	Sets the ToDo task description (e.g. Pay the rent).
<b>Category</b>	Sets the category (Business, Personal or Other).
<b>Priority</b>	Sets the priority (Normal, Low or High).
<b>Private</b>	Sets the ToDo task as private.

- When all settings are done, SK1 to save the setting.

## When a ToDo task is completed

- (MENU) 8 5 → Highlight the list → ○ → Highlight the required ToDo task → ○ → (MENU) 1 and 1, or SK2 to save the task as completed.

## Viewing ToDo task details


- (MENU) 8 5 → Highlight the list → ○ → Highlight the required ToDo task → ○ → To view the details of the previous or next ToDo task in the list, ◀ OR ▶
- To edit the currently displayed task, SK1

## ToDo Options menu

- To display the ToDo Options menu, (MENU) 8 5 → Highlight the list → ○ → Highlight the required ToDo task → (MENU)
- To display the ToDo detail Options menu, (MENU) 8 5 → Highlight the list → ○ → Highlight the required ToDo task → ○ → (MENU)

Column L shows the ToDo options menu, and column D shows the ToDo detail Options menu.

L	D	ToDo Options menu	
1	4	<b>Add new</b>	Adds a ToDo task (see "Adding a new ToDo task" on page 71).
-	1	<b>Status</b>	Changes the completion status of the highlighted ToDo task.
2	2	<b>Edit</b>	Edits the highlighted ToDo task (see "Adding a new ToDo task" on page 71).
3	-	<b>Delete</b>	Deletes ToDo task(s). Press the appropriate keys for the ToDo task category (the currently selected ToDo task, all the public/private ToDo tasks, all the completed public/private ToDo tasks or all the ToDo tasks) to delete.
-	3	<b>Delete current</b>	Deletes the current ToDo task.

L	D	ToDo Options menu (Continued)	
4	-	<b>Display filter</b>	Sets the type(s) of ToDo tasks to be displayed by selecting the desired filter option (None, Incomplete or Completed).
5	-	<b>Sort list</b>	Displays a list of ToDo tasks rearranged according to the selected sort key (Due date, Category, Priority, or Status).
6	-	<b>View summary</b>	Displays the number of Incomplete and Completed tasks and how many more tasks can be created.
7	5	<b>IR send</b>	Sends the selected ToDo task through IR port to other devices or a cellphone.  <i>The IR send function is not available during a call.</i>

 Depending on the conditions, some options may be displayed in gray and not be available.

## Notepad (M86)

Notepad function allows you to record and store a note as a text file.

### Creating a new memo (M861)


  8 6 1 → Key in text →  to save the entry as a text file. The first few words are displayed on the text list screen.

### Displaying a memo (M862)

  8 6 2 → Highlight a file → **SK1** to preview, or  to edit

### Notepad Options menu

  8 6 2 → Highlight a file → 

No.	Notepad Options menu	
1	<b>Edit item</b>	Changes the protection settings of the selected file. <b>Rename item:</b> Edits the file/folder name of the selected file/folder. <b>Set protection:</b> Sets the protection settings of the selected folder or file on/off.
2	<b>Use item</b>	<b>Add desktop icon:</b> Creates a desktop icon of the selected file on the standby screen. <b>IR send:</b> Sends the selected file through IR port to other devices or a cellphone.  <i>The IR send function is not available during a call.</i>
3	<b>Create message</b>	Creates a new message with the highlighted text (note).
4	<b>Delete item</b>	Deletes the selected file or folder if it is unprotected.
5	<b>Delete all</b>	Deletes all the notes unprotected from the list.
6	<b>Copy item</b>	Copies the selected note.
7	<b>Copy all</b>	Copies all the notes.

No. Notepad Options menu (Continued)	
8	<b>Move</b> Moves the selected note or all the notes in the current folder to a folder.
9	<b>Create folder</b> Creates a new folder under the current folder.
0	<b>Storage detail</b> Displays the current storage information of your phone memory.
*	<b>View detail</b> Displays the detail of the selected file. You can also display the details on the highlighted folder or file by pressing * without displaying the Options menu.
#	<b>Options</b> <b>Sorting order:</b> Sorts the files by date or alphabetically. <b>Info column:</b> Sets whether to display the column on the list screen, and the information to be shown there. <b>None:</b> No column showing <b>Size:</b> Approximate size of the file <b>Type:</b> File type You can also change the information on the column by pressing # without displaying the Options menu. <b>Flat view:</b> Displays the list of all the stored files regardless of the folder hierarchy. <b>Save options:</b> Saves the current option settings. <b>Reset options:</b> Resets the option settings.

Depending on the conditions, some options may be displayed in gray and not be available.

## Voice memo (M87)

Voice memo function allows you to record up to 60 seconds of sound/voice, using your phone's microphone.

### Recording/playing voice memo or setting speaker

87

No. Voice memo setting	
1	<b>Record</b> Records a voice memo. <b>SK1</b> to start recording. You can finish recording and save the data as a file by pressing <b>SK2</b> even before the recording is completed. To record the conversation during a call, see "Recording a call" on page 11.
2	<b>Play</b> Plays a voice memo or recorded call. Highlight a voice memo →  to start playing and <b>SK2</b> to stop playing.
3	<b>Speaker setting</b> Selects between speaker and earpiece to play the voice memo. <b>1</b> for the Speaker, or <b>2</b> for the Earpiece.



See also: "Sounds (M62)" on page 59.


## Currency (M88)

Currency function allows you to convert an amount of money in one currency to another.


### Converting currency

 **MENU** 8 8

Currency setting	
<b>From</b>	Sets the source currency code.
<b>To</b>	Sets the destination currency code.
<b>Exchange rate</b>	Sets the exchange rate.  If you wish to change the exchange rate, <b>CLR</b> to delete the displayed exchange rate and key in the required number (for decimal point, <b>SK1</b> ) → 
<b>Amount</b>	Sets the amount of money you wish to convert (for decimal point, <b>SK1</b> ).

 If you have made a mistake in entering the exchange rate or amount, **CLR** to delete individual number or **SK2** to cancel the entry and return to the previous screen, and then start again.

### Resetting the currencies

 **MENU** 8 8 and **SK1**

## External connection (M89)

External connection allows you to communicate with other devices (PC, PDA, headset, etc.)

 You cannot use the Infrared and Bluetooth functions at the same time.

### Bluetooth (M891)

Bluetooth function allows you to use your phone as a modem and to talk by using a Bluetooth headset.

 **MENU** 8 9 1

 For details, see "Bluetooth (M891)" on page 76.

### Infrared (M892)

 **MENU** 8 9 2





 For details, see "IR Data Exchange" on page 79.

## Synchronization (M80)

Synchronization function allows you to synchronize data between your phone and your PC. When your phone is connected to your PC via a USB cable (option), you can synchronize phonebook, scheduler or ToDo list data.

 Data should comply with vCard 2.1/vCalendar 1.0 specification

 You cannot synchronize the phonebook data stored in the SIM card.

-  Connect your phone with your PC via a USB cable → Activate the software on PC side and prepare for synchronization (for details, refer to the manuals of the software)
-   **8 0** → Select the data type (Phonebook, Scheduler or ToDo list) → **SK1** or  **1** to start synchronization


# Bluetooth (M891)


Bluetooth function allows you to communicate with the external devices (PC, PDA, headset, hands-free kit, etc.).

This function provides the following service:


- **Dial-up service** - You can use your phone as a modem.
- **Headset/hands-free service** - You can make/receive a call using a Bluetooth headset or hands-free kit.

 When using Bluetooth devices, always refer to their operation manual.

 Depending on the connection status, a Bluetooth device may not function correctly. In such a case, retry operation from the device side, or switch your phone off and on.

 There may be Bluetooth devices that cannot be connected to your phone.

## Using Bluetooth connection

 To use the Bluetooth function, you must perform the Bluetooth settings on your external device beforehand. For details, refer to the operation manual of the device.

 You cannot use the Bluetooth and Infrared functions at the same time.


 **While using the Bluetooth device, the following icons will be displayed in the status bar area of your phone.**

 Indicates that Bluetooth device is set to on.


 Indicates that Bluetooth device is in operation.

## Pairing a Bluetooth device and your phone

 **(MENU) 8 9 1 → 2 → 1** to be searched by other Bluetooth devices or **2** to search other Bluetooth devices



 If the device is found, the list of found Bluetooth devices will be displayed







 Highlight the device from the list →  → Input passcode of the found Bluetooth device


 When pairing, you will be asked to enter a passcode specified by the Bluetooth device to your phone and the device. If no passcode is specified by the device, enter the same arbitrary number to your phone and the device. A passcode is a number from 4 to 16 digits.

## Bluetooth setting



 **(MENU) 8 9 1**

No.	Bluetooth setting
1	<b>Bluetooth On/ Bluetooth Off</b> Activates or deactivates Bluetooth function.  If you switch the phone off while Bluetooth On is set, the next time you switch on, the phone will be in Bluetooth On status again.  If your phone is in Bluetooth On status, it will accelerate the battery consumption.

No.	Bluetooth setting							
2	<b>Pair new device</b>	Registers the external Bluetooth devices.						
		<table border="1"> <tr> <td>1</td> <td><b>Wait for connect</b></td> <td>Standby your phone to wait for other devices to search for it.   Other Bluetooth devices can only detect your phone while your phone is displaying Wait for connect screen.</td> </tr> <tr> <td>2</td> <td><b>Search device</b></td> <td>Searches for the nearby active Bluetooth devices.</td> </tr> </table>	1	<b>Wait for connect</b>	Standby your phone to wait for other devices to search for it.  Other Bluetooth devices can only detect your phone while your phone is displaying Wait for connect screen.	2	<b>Search device</b>	Searches for the nearby active Bluetooth devices.
		1	<b>Wait for connect</b>	Standby your phone to wait for other devices to search for it.  Other Bluetooth devices can only detect your phone while your phone is displaying Wait for connect screen.				
2	<b>Search device</b>	Searches for the nearby active Bluetooth devices.						
3	<b>Device list</b>	Displays and edits the list of paired devices.						
4	<b>My phone</b>	Displays the terminal information of your phone.   to display the Options menu <b>Rename:</b> Edits the terminal name of your phone.  You cannot edit the information during Bluetooth communication.						
5	<b>Active device</b>	Displays the information on the device in connection.						
6	<b>Disconnect</b>	Ends the Bluetooth connection in progress.						

 Depending on the conditions, some options may be displayed in gray and not be available.

## Device list Option menu

  8 9 1 → 3 

No.	Device list Option menu	
1	<b>Rename</b>	Edits the name of the highlighted device.
2	<b>Protect/Un-protect</b>	Protects or unprotects the highlighted device.
3	<b>Delete device</b>	Deletes the highlighted device.
4	<b>Delete all devices</b>	Deletes all the devices listed.

## Device list icons

The following icons will be displayed in the device list screen.



Indicates the device is not registered.



Indicates the device is an audio (a headset or handsfree device).



Indicates the device is a PC.



Indicates the device is a phone



Indicates the device is other than an audio, PC, or phone.



Indicates the device is protected.

## Using your phone as Bluetooth modem

- ℹ For details of dial-up connection settings, consult your Internet service provider.
- ☛ Pair the Bluetooth device and your phone beforehand (see “Pairing a Bluetooth device and your phone” on page 76)
- ☛ **(MENU) 8 9 1 → 1** to activate Bluetooth function → Perform dial-up connection by your PC
- ☛ To end the dial-up connection, disconnect from the PC application
- ℹ You can also end the dial-up connection by pressing **(MENU) 8 9 1 6**

## Connecting Bluetooth headset/hands-free kit






- ℹ When connecting a wired headset and Bluetooth headset at the same time, the wired headset will not work.
- ℹ For some Bluetooth devices, the voice recall function may be activated when a paired headset/hands-free kit is turned on (see “Voice recall” on page 8).
- ☛ Pair the Bluetooth device and your phone beforehand (see “Pairing a Bluetooth device and your phone” on page 76)
- ☛ **(MENU) 8 9 1 → 3 →** Highlight the headset/hands-free kit in the list → **SK1**

## Using Bluetooth headset/hands-free kit






- ☛ To answer the incoming call, press the button on the headset/hands-free kit
- ☛ To switch the headset/hands-free kit call to your handset call during a call, **(MENU) 9**
- ℹ You cannot deactivate Bluetooth during a call.
- ☛ To end the call, **⏏** or end from the headset/hands-free kit


## IR Data Exchange

Your phone is equipped with an InfraRed (IR) data port which enables you to send and receive picture/sound/MP3/video/ToDo list/scheduler/phonebook/note data with cellphones or other devices equipped with IR ports.

-  **Do not aim or direct the IR data port towards your or other people's eyes when using IR data exchange.**
-  **Do not aim or direct the IR data port towards another IR device as this may cause the device to malfunction.**
-  Depending on the other party's cellphone or device, the data may not be received correctly.
-  You cannot use the Infrared and Bluetooth functions at the same time.
-  While sending or receiving data through IR or using your phone as an IR modem, your phone is automatically placed out of service, so phone call, message and WAP access are disabled.



### Positioning of the phones

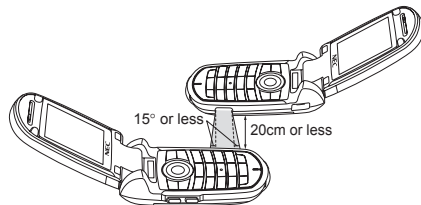-  **Open both sending and receiving phones vertically and place them as their IR ports face each other with less than 20cm of interval.**
-  Do not place anything between IR ports.
-  The angle made of two IR ports must be within 30°.
-  Do not move the phones until the data exchange is complete.
-  The phones may not communicate successfully if they are placed under direct sunlight or fluorescent light, or close to other infrared devices.




 
 






### IR send

You can send picture/sound/MP3/video/ToDo list/scheduler/phonebook/note data as a file through the IR port.

-  This function is not available during a call.
-  Before starting to send data, the other party must be ready to receive data.
 
### Phonebook entry (M413...)

-  You can only send Name, Home, Mobile, Work, Fax, 2 Email addresses and 2 pieces of descriptive information.
-  Your phone sends data according to the vCard 2.1 specification.
  -  To display the phonebook (Phone),  (for required number of times) or  4 1 3 → Highlight a phonebook entry.
  -   0 or   3 → The phonebook entry will be sent through the IR port.

## Video/Sound/Picture/MP3 file (M6...)

- ☛ **MENU 6 1** for Videos, **MENU 6 2** for Sounds, **MENU 6 3** for Pictures or **MENU 6 4** for MP3 → Highlight a folder → **O** → Highlight a file.
- ☛ **MENU 2 3** for Videos/Pictures, **MENU 2 4** for Sounds or **MENU 2 2** for MP3 → The file will be sent through the IR port (see “My data (M6)” on page 59 for details).

## Schedule entry (M84...)

- ☛ **MENU 8 4** → Highlight a date → **O** → Highlight a schedule entry → **O** → **MENU 9** → The schedule entry will be sent through the IR port.

## ToDo entry (M85...)

- ☛ **MENU 8 5** → Highlight Public, Private or All → **O** → Highlight a ToDo entry → **MENU 7** → The ToDo entry will be sent through the IR port.

## Note (M862...)

- ☛ **MENU 8 6 2** → Highlight a note → **MENU 2 and 2** → The note entry will be sent through the IR port.

## IR receive (M8921)

You can standby your phone to receive data (picture/sound/MP3/video/ToDo list/scheduler/phonebook/note) from other devices or a phone of the same model.

### Receiving data through IR (M8921)

- ☛ **MENU 8 9 2 1** → Start sending data from the other end.
- 📖 *Once the transmission completes, your phone automatically judges the type of received data and stores the data accordingly.*
- 📖 *This function is not available during a call.*
- 📖 *If your phone does not have enough space to store the received data, a message will be displayed indicating lack of space. In such a case, delete unnecessary data and try the data exchange again.*
- 📖 *Received picture/video/sound files are stored in the Download folder of My data (see “My data (M6)” on page 59).*

## IR modem (M8922)

You can use your phone as a modem for a PC via the IR port to establish a dial-up connection to an Internet service provider.

### Activating the IR port for modem use (M8922)

- ☛ **MENU 8 9 2 2** → The phone will be in standby status for IR transmission from the external device.
- 📖 *If the IR transmission is not established within a short while, the standby status will end.*
- 📖 *While on active call or connecting to the external device such as USB, IR modem is not available.*
- 📖 *While using your phone as an IR modem, you cannot use network related services, such as making/receiving calls and sending/receiving messages.*
- ☞ **Your phone consumes a lot of battery power when used as a modem. After using your phone as a modem, be sure to deactivate the modem function from your PC or press **Ⓜ** (for the CSD connection only). When the modem function is deactivated, the idle screen will be displayed without the Infrared icon and GPRS icon.**
- 📖 *Check with your service provider to use your phone as a modem to connect to the Internet.*

# Index

- A**
- AC adapter 3
  - Accepting an incoming call 7
  - Accessory 67
  - ADN 45
  - Alarm volume 23
  - Alert message 29, 43
  - ALS 21
  - Animation 60
  - Any key answer 21
  - AoC 12
  - Auto answer 23
  - Auto redial 14
- B**
- Bar calls 26
  - Basic calls & phone use 6
  - Battery charging 3
  - Battery level icons viii, 4
  - Battery pack 1
  - Blacklist 12
  - Bluetooth 76
  - Bookmark 43
- C**
- Calculator 68
  - Call diversion 13
  - Call lists 12
  - Call options 11
  - Call transfer 10
  - Call waiting and holding 14
  - Camera 53
  - Recording a video 56
  - Taking a picture 54
  - Car mode 22
  - CB 39
  - CLI 6, 50
  - Clock 22
  - Clock alarm 68
  - Clock selection 24
  - Clock/Event display 24
  - Colour style 24
  - Connection profile 26
  - Contrast 24
  - Correcting mistakes 6
  - CSD 40
  - Currency 74
- D**
- Date 22
  - Date format 22
  - Desktop icons 19
  - Dialled calls list 12
  - Download 40
- E**
- Earphone setting 23
  - Earphone type 22
  - Email account 30
  - Email messages 28
  - Emergency calls 7
  - Ending a call 6
  - External connection 74
- F**
- Fast dialling 8
  - FDN 26, 46
  - Flicker control 55, 58
  - Fold answer 21
  - Frame 61
  - Frequency band 15
  - Function key LED 25
- G**
- General care i
  - GPRS 40
  - Greetings 24
  - Groups 48
- H**
- Hands-free kit 76
  - Headset 22, 76
  - Highlight mode 33, 38
  - Holding a call 9
  - Homepage 40
- I**
- Icons viii, 29, 37, 76, 77
  - Inbox 28
  - Incoming call No. 24
  - International dialling codes 14
  - IR Data Exchange 79
  - IR modem 80
  - IR receive 80
  - IR send 79
- J**
- Java™ 65
  - JPEG 53
- K**
- Key allocations 18
  - Key tone 23
  - Keypad shortcuts vii
- L**
- Language 22
  - Last call duration 11
  - Last number redial 7
  - LCD v
  - LED 22
  - Line ID 14
  - Logging on to WAP site 42
  - Low battery alarm 4
- M**
- Main menu x
  - Main menu style 24
  - Main-LCD 24
  - Making basic calls 6
  - Meeting mode 22
  - Menu functions x
  - Menu shortcuts selection iv
  - Message 28
  - Missed calls list 12
  - MMS messages 28
  - MMS tone 23
  - MMS tone volume 23
  - MP3 player 67

Multi-party calls	10	<b>R</b>	Starting a call	6	<b>Z</b>		
Mute	9	Reading a message	29	Start-up	4	Zoom	55, 58
My data	59	Received calls list	12	STD	6	<b>0-9</b>	
MP3	62	Receiving an incoming call	6	Switching the phone off	5	2nd-LCD	24
Pictures	60	Recording a call	11	Switching the phone on	4	3GPP	53
Sounds	59	Redial blacklist	12	Synchronization	75	4 way navigation key	vi
Videos	59	Rejecting an incoming call	7	<b>T</b>			
<b>N</b>		Reset settings	27	Text entry	16		
Network selection	15	Ring silencer	21	Mode change	16		
Normal mode	22	Ringer	23	Time	22		
Normal text (ABC) input	17	Ringer volume	23	Time format	22		
Notepad	72	Roaming	15	Timezone	22		
Number type	51	<b>S</b>		ToDo list	70		
Numeric input	17	Scheduler	69	Total calls duration	11		
<b>O</b>		Scratchpad number	11	T9 English text input	16		
One-touch dial	8	SDN	46	<b>U</b>			
Option mode	33	Security	25	Unsuccessful calls	7		
Origin number	51	Security code	25	User's manual conventions	iv		
Own phone number display	8	Service tone	23	<b>V</b>			
<b>P</b>		Setting your connection profile and homepage	40	Vibrator	23		
Parts and functions	vi	Settings	21	Video	53		
Phone lock	26	Shortcuts selection	x	Recording a video	56		
Phone modes	22	Side key lock	21	View mode	34		
Phonebook	45	SIM card	1	Voice mail	52		
PIM	26	SIM card insertion	1	Voice memo	73		
PIN activate	26	SIM card removal	2	Voice recall	8		
PIN code	5, 25	SMS messages	28	Voice volume	21		
PIN2 code	25	SMS tone	23	<b>W</b>			
Pocket mode	22	SMS tone volume	23	Wallpaper	24		
Power saving	24	Snapshot	43	Web browser	40		
Preparing the phone	1	Stamp	60	Web settings	40		
PUK	25	Standby and talk times	4	Web site	43		
		Standby screen	v				