

FOMA® SO705i

ISSUE DATE:

'08.2

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL

Easy Search/Contents/Precautions

Before Using the Handset

Voice/Videophone Calls

Phonebook

Sound/Screen/Light Settings

Security Settings

Camera

i-mode/i-motion/i-Channel

Mail

i-appli

Osaifu-Keitai/ToruCa

Full Browser

Data Display/Edit/Management

Music&Video Channel/
Music Playback

Other Convenient Functions

Character Entry

Network Services

PC Connection

Overseas Use

Appendix/External Devices/
Troubleshooting

Index/Quick Manual

DoCoMo

W-CDMA System

Thank you for choosing FOMA S0705i.

Read this manual carefully before use or during operation as well as separate manuals for other components, and use FOMA S0705i properly. If you have further questions regarding manuals, contact the inquiries number provided on the back of this manual.

FOMA S0705i is your useful companion. Take good care of it for so long a period.

Before using your FOMA terminal

- The FOMA network operates using radio waves. In a place where the reception is very poor, such as in a tunnel, in a building and under the ground, or in an out-of-service area, you cannot make a phone call. You may also have difficulty making a phone call from the upper floors of tall buildings, even if there is no obvious physical obstruction. And even if the reception is good with 3 antenna bars indicated and you do not move during the call, you may still find that your call is cut off.
- When you use your FOMA terminal in public places, particularly where it is crowded or quiet, take care not to disturb the people around you.
- Since the FOMA terminal uses radio waves to communicate, there is always a risk that your call is wiretapped by the third party.
However, the W-CDMA system automatically support the tapping prevention for all calls. Even if a third party succeeds in intercepting your call, only incomprehensible noise will be heard.
- The FOMA terminal communicates via radio waves by converting voices into digital signals. If you move into an area where the reception is poor, the digital signals may not be accurately decoded and what you hear may differ slightly from what it actually is.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DoCoMo nor the certifier as listed herein makes any representation or warranty as for security in the use of SSL/TLS. In the event that the user shall sustain damage or loss due to the use of SSL/TLS, neither DoCoMo nor the certifier shall be responsible for any damage or loss.
Certifier: VeriSign Japan K.K., Cybertrust Co., Ltd., GlobalSign.K.K, RSA Security Inc. and SECOM Trust Systems Co., Ltd.
- This FOMA terminal is available in FOMA Plus-Area and FOMA High-speed area.
- The FOMA terminal can be used only via the FOMA network provided by DoCoMo and DoCoMo's roaming area.
- It is your responsibility to keep a separate record of all data (such as Phonebook, Schedule, Text Memo, Record Message, Voice Memo or VP msg.) stored on your FOMA terminal. Under no circumstances shall NTT DoCoMo be liable for any loss or damage to the data stored on your FOMA terminal, caused by malfunction, repair, model change, etc.
- It is recommended to back up the important data to the microSD memory card. If you own a PC, you can also transfer and save the data such as Phonebook, Mail or Schedule to your PC by using DoCoMo keitai datalink.

Before using this manual

This FOMA terminal supports Kisekai Tool (p.104). When you change the design of the menu display using Kisekai Tool, the menu structure may change in accordance with frequency of using functions. Also, you cannot access some functions entering the menu number assigned to the functions.

In this case, it is not possible to operate it according to this manual, so be sure to switch the main menu to "Standard Menu" (p.34) or reset the menu operation log (p.97).

Latest information regarding to this manual may be downloaded from the DoCoMo website.

· To download "Instruction Manual" (PDF file), access the following site
<http://www.nttdocomo.co.jp/english/support/manual/index.html>

* The URL and the contents are subject to change without notice.

How to Refer to This Manual

In this manual, following methods are available to find the descriptions of functions and services.

Index

➡ p.396

You can find keywords and functions displayed on the display of the FOMA terminal.

Easy Search

➡ p.4

You can find often-used functions and convenient functions in simple terms.

Index on the front cover

➡ Cover

You can find the table of contents for each chapter by using the Index on the front cover.

See the next page for details.

Contents

➡ p.6

You can find descriptions using the Table of Contents which is divided by the function.

Feature Preview

➡ p.8

You can find main functions of the FOMA SO705i, such as new functions and convenient functions.

Menu function List

➡ p.336

You can find menu displayed on the display of the FOMA SO705i and default settings.

Quick Manual

➡ p.408

You can find brief descriptions of the basic functions. You can also remove the pages to take along.

Take Quick Manual (For Overseas Use) when using your FOMA terminal abroad.

- In this manual for FOMA SO705i, the "FOMA SO705i" is described as the "FOMA terminal".
- This manual describes functions that use the microSD memory card. To use these functions, the microSD memory card is required. microSD Memory Card → p.243
- It is prohibited to reprint a part or all of the contents of this manual without permission.
- The contents of this manual may change without prior notification.

How to Refer to This Manual (continued)

Following example shows how to look up the alarm function using “Index”, “Easy Search” and “Index on the front cover”.

Index

➔ p.396

You can find keywords and functions displayed on the display of the FOMA terminal.

Alphabetical/Numerical/Kana		
A		
A mode (2in1)	316	
AC adapter	44	
Accessories/Options	361	
A-Continuous shooting	133	
Add bookmark	152	
Adding a new word (Own dictionary)	305	
Reconnection	61	
Signal quality	91	
Alarm notification actions	285, 291	
Alarm setting	285	
Alarm tone (pre-installed)	88	
Alarm tone (stnn)	286	
Alarm (Timer)	280	
Animation (create)	232	
Animation (playback)	233	
Anniversary (check)	283	
Auto answer setting	295	
Auto Decompile-picture (download)	155	
Auto power ON/OFF	46	
Auto receive (Mail/Message)	173	
Auto redial as voice	71	
Auto reset total cost	290	
Auto save set (Still image)	132	
Auto timer	138	
Auto-display setting	157	

Easy Search

➔ p.4

You can find often-used functions and convenient functions in simple terms.

- Use microSD memory card **p.243**
- Exchange information with PC or other FOMA terminal **p.255**
- Listen to music **p.263** Music&Video Channel/Music Playback
- Use alarm **p.280** **Alarm**
- Use as calculator **p.291** Calculator
- Use FOMA terminal overseas **p.327**
- Update for the latest software **p.374** Software Update
- Update for the latest security settings **p.380** Scanning function

p.255 Infrared data exchange/c communication
p.260 OBEX™ connection



Index on the Cover

➔ Cover

Refer to “Cover”, “Chapter title page” and “Description pages” sequentially to find the descriptions of the function you want to set. You can find the detailed table of contents on the chapter title page.

INSTRUCTION MANUAL	Music&Video channel/ Music Playback
	Other Convenient Functions
	Character Entry
	Network Services

Other Convenient Functions

Multi Access	Multi access	278
Multitask	Multitask	279
Setting the Main Menu	280	
Using the Alarm Function	Alarm	280
Managing Schedule	Schedule	281
Adding To Do List Entries	To Do list	284

* The contents above differ from the actual ones in this manual.

This manual uses illustrations and marks to explain how to operate the function so that you can use the FOMA terminal correctly.

Describes the function name.

Describes the operation on each step.

Describes the screen at the time of the operation. Compare it with the screen when you operate.

Describes the items displayed on the screen (some items cannot be operated depending on the operation).

Describes the explanation of each item.


Describes the necessary settings, notes or useful information about the function.

The function menu title is described with the icon of the function menu and the screen name on which the function menu is displayed.

You can search the chapters using the index.

Page number

Indicates that the descriptions go on to the next page.

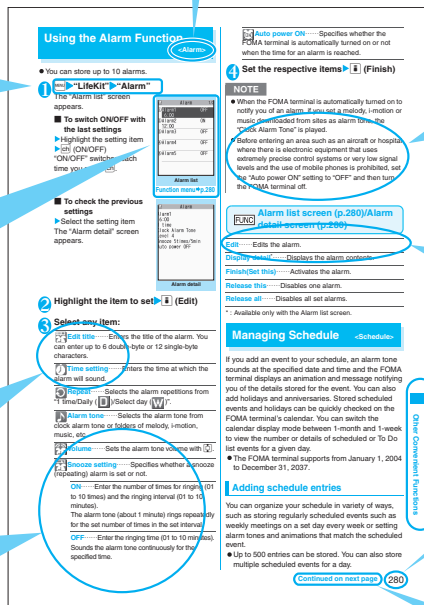

* The contents above differ from the actual ones in this manual.

- The screens shown as examples in this manual are displayed when "English" is set for "バイリンガル" (Select language). Set "English" for "バイリンガル" (Select language) in advance. → p.46
- To view a sample screen easily, this manual adopts the color setting to white as background and black as font with "Stand-by display" set to "OFF". In addition, "Style" is set to "24th clock" and "Size" is set to "Big" as the main clock description.
- Main menu and the screen color pattern are described by the default setting of the terminal in Sugar White (body color).
- Descriptions are basically based on the default settings, and screens displayed on the FOMA terminal may differ from the descriptions in this manual.
- A screen is used as an image in this manual. Some screens are zoomed in for explanation. Therefore they may differ from the actual ones.
- In this manual, "Osaifu-Keitai i-appli compatible with IC card function" is described as "Osaifu-Keitai i-appli".
- In the operation explanation in this manual, simple key illustrations are used to indicate the operation to press the key.

Easy Search

Find out a function with easy words from the Easy Search index below.

Useful functions for talking

- Do/do not notify your party of your caller ID **p.48** Caller ID Notification
- Switch voice/videophone call during call **p.53**
- Adjust the volume during a call **p.64** Volume
- Hold the current call **p.65** Holding



When you cannot answer incoming call

- Hold the ringing call without answering **p.65** On hold
- Notify that you cannot answer the call
- Have your party record voice/videophone message **p.68** Record message

p.65 Public mode (Driving mode) **p.66** Public mode (Power OFF)



Change melody or illumination

- Adjust the ring volume **p.64** Ring volume
- Set ring tone to specify party **p.82** Ring tone/Image
- Change ring tone **p.88** Select ring tone
- Set vibration to notify incoming call or mail **p.90** Vibrator
- Mute keypad tone **p.90** Keypad sound
- Set silent mode **p.92** Manner mode
- Change color or pattern of incoming call lamp **p.99** Illumination



Change/understand display

- Mark (icon) on the display **p.27** Display
- Switch menu display **p.34** Simple Menu
- Change standby screen (wallpaper) **p.94** Display setting
- Display calendar on the standby screen **p.95**
- Change font size **p.100** Font



Master mail

- Send Deco-mail **p.168** Deco-mail
- Send image or melody **p.170** Attach file
- Sort and save mail automatically **p.184** Auto-sort



Master camera

- Change the size of image to shoot **p.130**
- Display the shot **p.227** My picture
- Save image on the microSD memory card **p.249**



Use your phone without worries

- Lock the FOMA terminal from remote location when the FOMA terminal is lost **p.109** Omakase Lock^{*1}
- Prevent others from viewing the phonebook **p.111** Secret mode/Secret data only mode
- Reject unidentified calls **p.122** Call setting w/o ID
- Reject calls from callers who are not stored in phonebook **p.122** Reject unknown
- Save data such as phonebook in case of loss of data **p.123** Data Security Service^{**}

^{*1}: Omakase Lock is a pay service.

^{**}2: Data Security Service is a pay service you need to apply for. (i-mode subscription is necessary to apply for this service.)



Miscellaneous

- Read QR code or bar code **p.138** Bar code reader
- Use microSD memory card **p.243**
- Exchange information with PC or other FOMA terminal **p.255** Infrared data exchange/IC communication
- Listen to music **p.263** Music&Video Channel/Music Playback
- Use alarm **p.280** Alarm
- Use as calculator **p.291** Calculator
- Use FOMA terminal overseas **p.327**
- Update for the latest software **p.374** Software Update
- Update for the latest security settings **p.380** Scanning function



For mode information about other operation guides, see "How to refer to this manual". → p.1
Also, "Quick Manual" instructs you how to operate the functions used often. → p.408

Contents

How to Refer to This Manual	1
Easy Search	4
Contents	6
Feature Preview of the FOMA SO705i	8
Mastering the FOMA SO705i!	10
Precautions	12
Handling with Care	18
Intellectual Property Right	20
Package Contents	22

Before Using the Handset

p.23

- Names and functions • How to view the display
- Selecting the menu • Basic operations • FOMA card (UIM)
- Attaching/removing the battery pack • Charging
- Turning on the FOMA terminal • Initial setting • Set time
- Caller ID notification, etc.

Voice/Videophone Calls

p.49

- Making a voice/videophone call
- Switching between voice/videophone calls • Hands-free
- Redial/Received calls • Chaku-moji • WORLD CALL
- Receiving a voice/videophone call • Volume • Ring volume
- Answer hold • Public mode (Driving mode/Power off)
- Record message • Videophone settings, etc.

Phonebook

p.75

- Add to phonebook • Group setting • Search phonebook
- Editing/deleting phonebook entries
- Ring tone/Image • Choku-Den
- Data Security Service, etc.

Sound/Screen/Light Settings

p.87

- Ring tone • Vibrator • Manner mode • Display setting
- Shield view • Backlight • Display design
- Changing menu display • Indicator display • Illumination set
- Incoming lamp • Kisekai Tool, etc.

Security Settings

p.107

- Security code • PIN code • Dial lock • Omakase Lock
- Secret mode • Secret folder • Original lock • Keypad lock
- IC card authentication • Side key guard • Self mode, etc.

Camera

p.125

- Photo mode • Movie mode • Settings for shooting
- Bar code reader • Text reader, etc.

i-mode/i-motion/ i-Channel

p.145

- What is i-mode? • Viewing sites
- How to view sites and operations • i-mode password
- Internet access • Bookmark
- Phone To/AV Phone To • Mail To • Web To
- Downloading i-motion • Using i-Channel, etc.

Mail

p.165

- What is i-mode mail? • Composing/sending i-mode mail
- Deco-mail • Attaching files • Receiving mails
- Check new messages • Replying/Forwarding mails
- Saving attached files • Using mail boxes • Mail Setting
- Message service • What is Early Warning "Area Mail"?
- SMS, etc.

i-appli

p.195

- What is an i-appli? • Downloading an i-appli
- Launching an i-appli • Pre-installed softwares
- i-appli standby screen • Upgrading an i-appli, etc.

Osaifu-Keitai/ ToruCa p.211	• What is Osaifu-Keitai? • What is iC transfer service? • Using Osaifu-Keitai • What is ToruCa? • Acquiring ToruCa • Viewing ToruCa • IC card lock, etc.
Full Browser p.219	• Displaying website designed for PC • Full Browser settings, etc.
Data Display/Edit/ Management p.225	• Data box • Still image • Movie/i-motion • Chara-den • Melody • Kisekai Tool • microSD memory card • Movable contents • UIM operation • Infrared data exchange/iC communication, etc.
Music&Video Channel/Music Playback p.263	• What is Music&Video Channel? • Downloading Chaku-Uta-Full® • Playing music • Using playlist • Using the Music Player, etc. * "Chaku-Uta-Full" is a registered trademark of Sony Music Entertainment (Japan) Inc.
Other Convenient Functions p.277	• Multi access • Multitask • Alarm • Schedule • To Do list • Alarm setting • My profile • Checking Call data • Calculator • Text memo • Dictionary • Earphone/microphone with switch • Reset settings • Initialize, etc.
Character Entry p.297	• Character entry • 5-touch input • Fixed common phrases • Copying/cutting/pasting text • Own dictionary • Clear learning record • Download dictionary • 2-touch, etc.
Network Services p.307	• Voice Mail service • Call Waiting • Call Forwarding service • Nuisance Call Blocking • Caller ID Request service • Dual Network Service • 2in1, etc.
PC Connection p.321	• Data communication available for the FOMA terminal, etc. * The details are described in "Manual for PC connection setting" (PDF format) in the provided CD-ROM.
Overseas Use p.327	• WORLD WING • Available overseas service • Checking before using overseas • Making/Receiving a call abroad • NW search mode, etc.
Appendix/External Devices/ Troubleshooting p.335	• Menu function list • Character assignment to dial keys • Symbols/pictographs/face marks/fixed common phrases list • Multi access/Multitask combination patterns • Options/Accessories • Troubleshooting • Software Update • Specifications, etc.
Index/Quick Manual p.395	• Index • Quick Manual • Quick Manual (For Overseas Use)

Feature Preview of the FOMA S0705i

FOMA is the name of DoCoMo's service based on the W-CDMA system approved as one of the global standards for third-generation mobile telecommunication systems (IMT-2000).

i-mode

i-mode is an online service that you can use to send e-mail as well as using the useful information from the i-mode menu site (program) and i-mode compatible website.

••••• Features of S0705i •••••

■ i-mode mail/Deco-mail/Decorate PI

→ p.166, 168

In addition to the message body, you can attach up to 2M bytes or up to 10 files (JPEG, ToruCa, etc.). As the FOMA terminal is compatible with Deco-mail/Decorate PI, you can change the character color, size, or background color of the message body or insert images or moving pictographs.

■ Mega i-appli

→ p.195

Downloading an i-appli from a site enables you to enjoy a game or automatically update information such as share prices or weather report. Your FOMA terminal supports large-sized mega i-appli programs that allow you to enjoy high-resolution 3D games and full-length roll-playing games. It also supports the motion control so that you can enjoy programs with touchy-feely operation to tilt or shake the handset.

■ High-speed communication

The data is received at the maximum speed of 3.6 Mbps and sent at the maximum speed of 384 kbps in the FOMA high speed communication area.

■ International roaming

→ p.328

The FOMA terminal, phone number and mail address you use in Japan are also available overseas (only in 3G areas). You can use voice call, videophone call, i-mode, i-mode mail, SMS and network services.

■ Kisekae Tool

→ p.104

Downloading your favorite cartoon character screens from i-mode, and the standby screen or menu screen can be replaced at a time. S0705i enables the change of menu sequence in high use and customization of the menu screen to your favor.

■ Chaku-Uta-Full®/Uta-hodai/Music&Video Channel/Video clip

→ pp.268, 263, 161

*: This is a pay service you need to apply for.

You can download the entire track (Chaku-Uta-Full®) and use another service (Uta-hodai) that you can download the entire track as many as you want with fixed monthly charge.

Music&Video Channel is also available, that you can enjoy the music programs downloaded by the automatic operation at night time only by setting it beforehand. S0705i can enjoy the movie program. The FOMA terminal also supports i-motion up to 10M bytes, you can enjoy music clips of the entire track or video clips.

■ Osaifu-Keitai/ToruCa

→ pp.205, 211

By downloading an Osaifu-Keitai i-appli, you can transmit electric money from the site into the IC card in your FOMA terminal or check the accountant balance or transaction history. The i-appli of the DoCoMo credit service "DCMX" is pre-installed in your FOMA terminal. "iC transfer service" is also supported so that you can easily move your IC card data to a new terminal when replacing your FOMA terminal.

ToruCa can be acquired via a reader/writer unit or websites and easily exchanged via mail or Infrared data exchange.

••••• Security •••••

■ Omakase Lock

→ p.109

You can lock your FOMA terminal if you lost it, and cancel lock on your request. For inquiries, see the back cover of this manual.

* Omakase Lock service is charged. However, it shall be free of charge when you subscribe to this service at the same time or during the period that you suspend the subscription of the FOMA terminal.

* Omakase Lock is a service to lock the FOMA terminal at the subscriber's request. If the subscriber and user are different, the FOMA terminal may be locked on the subscriber's request.

■ Data Security Service

→ p.123

The Data Security Service enables you to store the phonebook entries, images or mails on the FOMA terminal to the Data Security Center and retrieve the data to the FOMA terminal when you lost the FOMA terminal, etc. Moreover, you can edit or manage the data stored at the Data Security Center using a PC and save the edited data on the FOMA terminal. For notes on using the "Data Security Service" and details on how to use the service, refer to "Mobile Phone User's Guide [i-mode] FOMA version" and refer to the back of this manual for the inquiries numbers.

* This is a pay service you need to subscribe to.

■ Camera → p.125

You can shoot still images or record movies using the front or rear cameras. Fulfilling camera functions are provided, such as shooting mode selection and auto-focus feature.

Rear camera: Approx. 2.00 megapixels (effective pixels)
Approx. 1.90 megapixels (Maximum recorded pixels)

Front camera: Approx. 0.33 megapixels (effective pixels)
Approx. 0.31 megapixels (Maximum recorded pixels)

■ microSD memory card → pp.243, 252

Your FOMA terminal supports the microSD memory card where you can copy data such as phonebook entries, mail messages and images from the FOMA terminal storage and view them on the display.

Connecting the FOMA terminal with PC enables you to use it as a reader/writer for the micro SD memory card.

■ Full Browser → p.219

You can access websites for PC to view more information.

■ “POBox Pro” and handy text entry → p.297

The prediction conversion function “POBox Pro” (Predictive Operation Based On eXample Pro) is installed. Pressing [□] for 1 second or longer moves the candidates in “POBox” on a line basis and selects a target word.

Press and hold the dial keys and you can switch the character assigned to the dial keys consecutively such as “a→b→c→A→B→C→2→...”.

■ Stand-by books → p.95

Three Flash contents with a difference are preinstalled. Every time you open the standby screen, various information such as bits of knowledge, general knowledge and picture books appear. select your favorite contents from Data box▶My picture▶Pre-installed and set it to the standby screen for your enjoyment.

■ Infrared data exchange or Infrared remote control → pp.257, 261

You can exchange data with other FOMA terminals using infrared communication. You can also operate the devices such as a TV which supports the infrared remote control.

■ Style-Up® panel

Style-Up® panel is adopted. You can enjoy changing the optional panel to your moods.

Also, it is available to download panel-fit Kisekae Tool from PlayNow by SO.

■ Wide scale display & indicator display

The approximately 2.8-inch high-resolution display is adopted to Main display. This recreates the still images or videos in bright and vivid colors.

Sub display employs an organic light emitting display (organic EL display), which makes indication pop up richly on Style-Up® panel.

■ Multi access → p.278

Voice call and packet communication can be manipulated at the same time. Receiving i-mode mail during a call is available, and vice versa.

••••• Wide variety of network services (→ p.307) •••••

- Voice Mail (charged)*
- Call Waiting (charged)*
- Call Forwarding (free)

- Nuisance Call Blocking (free)
- Caller ID Request (free)
- Dual Network (charged)*

- English Guidance (free)
- Multi Number (charged)*
- 2in1 (charged)

*: You need to apply for.

Mastering the FOMA SO705i!

Send and receive real-time movie while talking Videophone → p.51

You can talk to the other party seeing his/her face.
Your FOMA terminal is set to emit other party's voice through the speaker by default so that you can start talking immediately when making or answering a call. Furthermore, you can change the call mode from voice to videophone without having to end the call.



The telop appears on the standby screen when the latest information is distributed i-Channel → p.163

You can receive news or weather report as graphical information.
You can also select favorite channels on the channel list screen to receive rich, detailed information which was created by Flash (more detail → p.150).

* This is a pay service you need to apply for.

* The screens above are image.
The actual screens will look different.

Before subscription



After subscription




Connect



"Napster®" compatible Music Player → p.273

"Napster®" service provides you of copying songs downloaded from sites or on music CDs to the microSD memory card using a PC and play music on the FOMA terminal. Since "Chaku-Uta-Full®" is supported, you can download the entire track from an online music distribution site to play it. Other functions include BGM playback, which allows you to listen to music while you use other functions, display of album cover images and lyric sheets, and creation of the playlist on the FOMA terminal.
You can also play the i-motion and use Music&Video Channel that downloads the specified program automatically during the night.

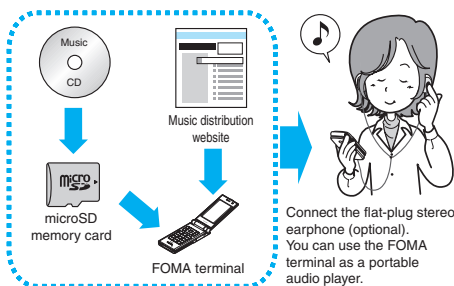


Connect the flat-plug stereo earphone (optional).
You can use the FOMA terminal as a portable audio player.

Use 2 phone numbers and e-mail addresses for your FOMA terminal 2in1 → p.316

You can separately use 2 phone numbers and 2 mail addresses on your FOMA terminal as if you have 2 terminals. You can manage the data in your FOMA terminal, such as Phonebook, Mail boxes, Dialed calls or standby screen, separately in "A mode" and "B mode", or all together of A/B mode in "Dual mode".

* Subscription is required (Charged).

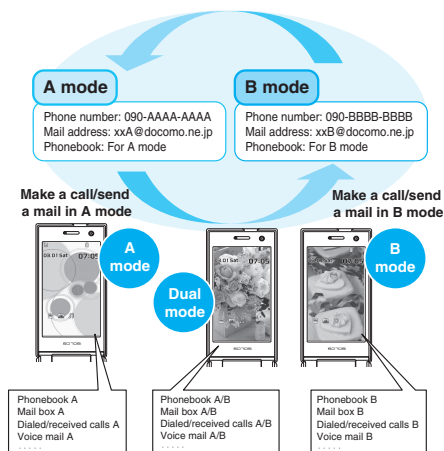

Notify the arrival of your phone call with an animation before answering Chaku-moji → p.58

When calling someone, you can show a message on the screen of the other party's phone. The other party can see your business or feeling from the message before answering the call.



Precautions

(ALWAYS FOLLOW THESE DIRECTIONS)

- To ensure that you use your FOMA terminal correctly, read the Precautions carefully before use. Keep this manual after reading for future reference.
- The precautions must be observed at all times since they contain the information intended to prevent the bodily injuries or the damage to the property.
- The following symbols indicate the different degrees of injuries and damage that may occur if the information provided is not observed and the FOMA terminal is used incorrectly:

 DANGER	Indicates that the death or serious bodily injury may result directly and immediately from the improper use.
 WARNING	Indicates that the death or serious bodily injury may result from the improper use.
 CAUTION	Indicates that the bodily injury and/or damage to the property may result from the improper use.

- The following symbols indicate the specific directions:

 Don't	Indicates that it is prohibited.
 No disassembly	Indicates that it must not be disassembled.
 No wet hands	Indicates that you must not touch it with your wet hand.
 No liquids	Indicates that it must not be used near the water, which means that you must not wet it.
 Do	Indicates that you must do it following the instructions.
 Unplug	Indicates that you must unplug the power cord from the outlet.

- Safety Precautions are explained in the following categories:

1. Handling the FOMA terminal, Battery Pack, Adapter (including the Charger) and FOMA card (Common) 12
2. Handling the FOMA terminal 13
3. Handling the Battery Pack 15
4. Handling the Adapter (including the Charger) 16
5. Handling the FOMA card (UIM) 17
6. Handling Mobile Phones near Electronic Medical Equipment 17

1. Handling the FOMA terminal, Battery Pack, Adapter (including the Charger) and FOMA card (Common)

DANGER



Don't

Do not use, keep or leave the devices in locations subject to high temperatures, such as near the fire or heater, in direct sunlight or inside a car on a hot day.

This may cause the battery pack to leak, overheat, explode or ignite, cause the devices to malfunction or be deformed, or suffer performance loss and a reduced service life. Also, this may cause a part of the case to become hot and burn you.



No disassembly

Do not disassemble or rebuild. Also, do not solder the devices.

This may cause fire, injury, electric shock or malfunction.

This also may cause the battery pack to leak, overheat, explode or ignite.



No liquids

Do not wet the devices.

Exposing the FOMA terminal and other devices to liquids such as water or pet urine may cause overheating, electric shock, fire, malfunction, injury, etc. Be careful where and how you use the devices.



Do

Use the battery pack and adapter (including the charger) specified by NTT DoCoMo Group for the FOMA terminal.

Using the devices other than those specified by NTT DoCoMo Group may cause the FOMA terminal, battery pack and other devices to leak, overheat, explode, ignite or malfunction.

Battery Pack SO03
Desktop Holder SO09
FOMA AC Adapter 01/02
FOMA DC Adapter 01/02
FOMA AC Adapter 01 for Global use
FOMA Dry Battery Adapter 01
FOMA USB Cable with Charge Function 01/02
FOMA Portable Charging Adapter 01

* For the information on other compatible products, contact the NTT DoCoMo shop or service counter.



WARNING



Don't

Do not place the FOMA terminal, battery pack, adapters (including the charger) or FOMA card in cooking appliances such as microwave ovens or in a pressure cooker.

This may cause the battery pack to leak, overheat, explode or ignite, cause the FOMA terminal or adapter (including the charger) to overheat, smoke or ignite, or damage the IC.



Don't

Do not shock or throw the FOMA terminal.

This may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.



Don't

Keep the conductive foreign materials (metal, pencil lead, etc.) away from the charge terminal or external connector. Do not insert those matters inside.

This may result in the short-circuit causing the FOMA terminal to ignite or malfunction.



Do

Turn off the FOMA terminal, when you are near the flammable gas such as at the gas station. Do not also charge. It may cause to ignite to the gas.

Turn off the FOMA terminal, when you use Osaifu-keitai at the gas station (if IC card lock is set, turn the FOMA Terminal off after lock is released).



Do

If you find extraordinary happenings, such as an unusual odor, overheating, discoloration or deformation during the use, charge or storage, make sure to:

1. Unplug the power code from the power outlet or the cigar lighter outlet.
2. Turn off the FOMA terminal.
3. Remove the battery pack from the FOMA terminal.

Continuing to use or charge the FOMA terminal may cause it to overheat, explode, ignite or leak of battery.



CAUTION



Don't

Do not leave the FOMA terminal on a slope or unstable surface.

This may fall the FOMA terminal and cause the injury or malfunction.



Don't

Keep the FOMA terminal away from the humid, dusty or hot places.

This may cause malfunction.



Do

If your child uses the FOMA terminal, instruct him/her how to use it. Make sure that he/she always uses the FOMA terminal correctly as you instruct.

Improper usage could result in the bodily injury.



Do

Keep the FOMA terminal out of young children's reach.

A young child may swallow it or suffer from the injury.



Do

Pay a special attention when you use the FOMA terminal connected to the adapter (including the charger) for a long duration.

If you use i-appli or videophone for a long time while charging the FOMA terminal, the temperature of the FOMA terminal, battery pack or adapter (including charger) may rise.

If you touch the warm part of these devices for a long period of time, it may cause redness, itch, skin irritation, or burns depending on your constitution or physical condition.

2. Handling the FOMA terminal



WARNING



Don't

Do not direct the infrared data port towards your or another person's eyes.

This may cause the eye injury. Do not aim or direct the infrared data port towards another infrared device as this may interfere with the operation of the device.



Don't

Do not put the FOMA terminal on the dashboard, etc. as a problem may occur due to air bag inflation.

The air bag inflation may cause the FOMA terminal to hit you or another person, which may lead to injury, malfunction, breakage, etc.



Don't

If you are wearing electronic medical equipment, do not put the FOMA terminal in your breast pocket or in the inside pocket.

Using the FOMA terminal in close proximity to electronic medical equipment may cause the equipment to malfunction.



Don't

Do not put fluids such as water or objects such as pieces of metal or flammable materials into the FOMA card inserting slots or microSD memory card slots inside of the FOMA terminal.

Such actions could cause fire, electric shock or malfunction.



Do

Turn off the FOMA terminal in a place where it is prohibited to use the mobile phone, such as in an airplane or in a hospital.

This may affect the electric or medical equipment. If the FOMA terminal is set with the Auto power function, make sure to disable the function before turning off the FOMA terminal. Follow the instructions provided by the medical facility about using the mobile phone.

If you use the phone in an airplane, which is prohibited, you may be punished by law.



Do

Make sure to hold the FOMA terminal off your ear and keep enough distance from it when you talk in the handsfree mode. When you also play games or music with an earphone-microphone connected to the FOMA terminal, adjust the volume properly.

If the volume is too high, it may cause an auditory disturbance.

Also, it may cause an accident if you have difficulty in hearing the sound of your surroundings.



Do

If you have a weak heart, take precautions when setting the Vibrator or Ring volume.

This may affect your heart.



Do

If you hear thunder while using the FOMA terminal outdoors, immediately turn off the FOMA terminal and take shelter in a safe location.

There is a risk of being struck by the lightning and suffering an electric shock.



Do

Turn off the FOMA terminal near the electric equipment using the high-precision control or weak signals.

This may interfere with the operation of sensitive electronic equipment.

* Take great care on the following electric devices:

Hearing aids, implantable cardiac pacemakers, implantable cardioverter-defibrillators, and other electronic medical equipment, fire alarms, automatic doors and other equipment controlled by electronic signals.

If you use an implantable cardiac pacemaker, implantable cardioverter-defibrillator or other electronic medical equipment, contact the respective manufacturer or vendor to check whether the operation of the equipment is affected by radio waves.



Do

If the display or camera lens is broken, be careful of the broken glass and the inside of exposed FOMA terminal.

The surface of the display or camera lens is covered by a plastic panel to minimize the possibility of glass scattering. However, touching the broken or exposed parts cause the injury.

CAUTION



Don't

Do not swing the FOMA terminal by its strap or other parts.

The FOMA terminal may strike you or others around you, resulting in body injury, malfunction or damage to the FOMA terminal or other property.



Don't

When you use the motion control, be sure to confirm surrounding safety, grasp the FOMA terminal firmly and do not swing the FOMA terminal more than the necessity.

Motion control is a function to operate the FOMA terminal by inclining and shaking it. It hits the person and others because of the shake too much, and there is a possibility of causing a serious accident and damage.



Don't

With metallic straps or other metallic objects in the FOMA terminal and applying the motion control, be sure to not hit the person or others.

It causes injury, malfunction or breakage.



Don't

Do not let the FOMA terminal come close to or sandwich magnetic cards, etc. between the FOMA terminal.

The magnetic data stored on cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.



Don't

Do not let the FOMA terminal come close to magnetism.

If strong magnetism is brought close, operation may fail.



Don't

If the display is broken and the liquid crystal leaks, do not take it in, draw it in or put it on your skin.

If the liquid crystal comes into your eyes or mouth, immediately rinse your eyes or mouth with clean water and see a doctor. If the liquid crystal adheres to your skin or clothing, immediately wipe it off with alcohol and rinse it off with water and soap.

It may cause a loss of eyesight or damage your skin.



Don't

When the FOMA terminal plays the ring tone or plays a melody, do not bring the speaker close to your ear.

It may cause a hearing defect.



In some types of vehicle, using the FOMA terminal in the vehicle may interfere with the operation of the vehicle's electronic equipment.

Do not use the FOMA terminal if the terminal may impair the safe driving.



Using the FOMA terminal may cause skin irritations such as itch, rashes or eczema. If this occurs, immediately stop using the FOMA terminal and see a doctor.

Metal components are used for the following parts.

Parts	Material	Finish
Multifunction key	Aluminum alloy	Alumite treatment
Charging terminal (contact terminal for desktop holder)	Phosphorus bronze	Nickel + Gold plate



Take care not to pinch your finger or strap when opening or folding the FOMA terminal.

It cause injury or breakage.

3. Handling the Battery Pack

- Refer to the information shown on the battery pack label to check the type of battery pack you have.

Display	Battery type
Li-ion00	Lithium-ion

DANGER



Do not let wire or other metals touch the terminal. Also, do not carry or store the battery pack with metallic necklaces, etc.

This may cause the battery pack to leak, overheat, explode or ignite.



If you have difficulty in attaching the battery pack to the FOMA terminal, do not use the excessive pressure to force the battery into place. Check that the battery pack is facing in the correct direction before you try to attach it.

This may cause the battery pack to leak, overheat, explode or ignite.



Do not throw the battery pack into a fire.

This may cause the battery pack to leak, overheat, explode or ignite.



Do not puncture the battery pack, hit it with a hammer or step on it.

This may cause the battery pack to leak, overheat, explode or ignite.



If battery fluid comes into your eyes, do not rub your eyes but immediately rinse your eyes with clean water and see a doctor.

This may result in loss of eyesight.

WARNING



If a battery pack malfunction is found due to an external shock such as deformation or damage by a fall, immediately stop using the FOMA terminal.

This may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.



If the battery pack is not fully charged after the specified charging time has elapsed, stop charging.

This may cause the battery pack to leak, overheat, explode or ignite.



If the battery pack leaks or emits an unusual odor, stop using it immediately and move it away from any flame or fire.

The battery fluid is flammable and could ignite, causing a fire or explosion.



Be sure that your pet doesn't bite to the battery pack.

This may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.

CAUTION



Do not dispose of used battery packs with ordinary garbage.

This causes a fire and constitute an environmental hazard. Apply insulation tape to the terminal of used battery pack and return it to the NTT DoCoMo shop or service counter, or dispose the battery pack in accordance with your local regulations.



Do not charge the wet battery pack.

This causes the battery pack to overheat, ignite, or explode.



If battery fluid comes into contact with your skin or clothing, stop using the FOMA terminal immediately and rinse it off with clean water.

Battery fluid is harmful to your skin.

4. Handling the Adapter (including the Charger)



WARNING



Do not use the adapter (including charger) of which the cord or power cord is damaged.

Don't This may cause electric shock, overheat or fire.



Do not use the AC adapter or desktop holder in humid locations such as bathroom.

Don't This may cause an electric shock.



The DC adapter must be used only for vehicles with a negative ground. Do not use the adapter in positively grounded vehicles.

Don't This may cause a fire.



Do not touch the FOMA terminal, adapter (including charger) when you hear a crash of thunder.

Don't There is a risk of being struck by the lightning and suffering an electric shock.



Do not short-circuit the charging terminal when the adapter or charger is plugged to the power outlet or the socket in a vehicle. Also, do not let the charging terminal contact with your body (hand, finger, etc.).

Don't This may cause fire, malfunction, electric shock or injury.



Place the charger or desktop holder on a stable surface during charging. Also, do not cover or wrap the charger or desktop holder with clothing or bedding.

Don't This may cause the FOMA terminal to fall out of the charger or heat to build up, resulting in a fire or malfunction.



Do not put heavy objects on the power cord of the adapter (including charger).

Don't This may cause electric shock or fire.



Do not touch the power cords of the adapter (including charger) or the power outlet with wet hands.

No wet hands This may cause an electric shock.



Do

Use the specified power supply and voltage.

Using the adapters with incorrect voltage may cause a fire or malfunction. Use the AC adapter for global use to charge the terminal overseas.

AC adapter: AC 100V

DC adapter:

DC12V/24V (specific to vehicle with negative ground)

AC Adapter for global use:

100V to 240V AC (should be plugged to AC power outlet for home use only)



Do

If the fuse in the DC adapter blows, always replace it with the specified type of fuse.

Using the unspecified fuse may cause a fire or malfunction.

Refer to the respective manuals for the information on the specified fuse.



Do

Wipe off any dust on the plug.

This may cause a fire.



Do

When plugging the AC adapter into a power outlet, make sure that no metallic straps or other metallic objects are caught between the plug and the socket.

This may result in an electric shock, short-circuit or fire.



Do

Always grasp the plug when unplugging the adapter or charger from the power outlet or cigar lighter socket. Do not pull the cord itself.

Pulling the cord may damage the cord and cause an electric shock or fire.



Unplug

Unplug the power cord from the power outlet when it will be left unused for a long period.

This may cause electrical shock, fire or malfunction.



Unplug

If any water or other liquid gets into the adapter or charger, immediately unplug it from the power outlet or socket.

This may cause an electric shock, smoke emission or fire.



Unplug

Unplug the adapter or charger from the power outlet or cigar lighter socket before cleaning.

This may cause an electric shock.

5. Handling the FOMA card

CAUTION



Be careful about a cut surface when dismantling the FOMA card (IC part).
This may injure your hands or fingers.

6. Handling Mobile Phones near Electronic Medical Equipment

- The following precautions conform to the guidelines drawn up during the Electromagnetic Compatibility Conference Japan, regarding how to protect electronic medical equipment from radio waves emitted by mobile phones.

WARNING



Observe the following in hospitals or other medical facilities:

- Do not take your FOMA terminal into operating rooms, ICUs (Intensive Care Units) or CCUs (Coronary Care Units).
- Turn off your FOMA terminal inside hospital wards.
- Turn off the FOMA terminal even if you are in a hospital lobby when electronic medical equipments are in use nearby.
- If a medical facility gives specific instructions prohibiting you from carrying or using mobile phones, follow those instructions.
- If the FOMA terminal is set with the Auto power function, make sure to disable the function before turning off the FOMA terminal.



Turn off the FOMA terminal in crowded places such as rush-hour trains in case somebody nearby is using an implantable cardiac pacemaker or implantable cardioverter-defibrillator.

Radio waves may affect the operation of implantable cardiac pacemakers or implantable cardioverter-defibrillators.



If you use an implantable cardiac pacemaker or implantable cardioverter-defibrillator, keep the FOMA terminal at least 22 cm away from the devices.

Radio waves may affect the operation of implantable cardiac pacemakers or implantable cardioverter-defibrillators.



If you use the electronic medical equipment other than implantable cardiac pacemakers or implantable cardioverter-defibrillators out of the medical facility due to the home treatment, etc., consult the respective manufacturers for the information about the effects of radio waves on the equipment.

Radio waves may affect the operations of the electronic medical equipment.

Handling with Care

General Notes

- **Do not water the devices.**

The FOMA terminal, battery pack, adapter (including the charger) and the FOMA card (UIM) are not water-proof. Do not use them in humid locations such as bathrooms, and avoid exposing them to rain. If you carry your FOMA terminal close to your skin, sweat may cause internal components to corrode and result in a malfunction. If the problem is found to be due to moisture, it will not be covered by the warranty and in some cases may be irreparable. Even if it can be fixed, you will be charged since the damage is not covered by the warranty.

- **Wipe with a soft, dry cloth (such as a cloth for glasses).**

- The surface of the FOMA terminal's LCD has a specific coating to improve the visibility of the color display. Rubbing the LCD of the FOMA terminal with a dry cloth to clean it may scratch the LCD surface. Handle the FOMA terminal carefully and clean it using a soft dry cloth (of a type used for eyeglasses). The LCD coating may peel off or stain if moisture or soiling is left on the surface for a long period.

- Never use chemicals such as alcohol, thinners, benzene or detergents as these agents may erase the printing on the FOMA terminal or cause discoloration.

- **Occasionally clean the connection terminals with a dry cotton bud.**

Soiled connection terminals may result in poor connections and loss of power. Also, as it may cause insufficient charging, clean the terminal with a dry cloth or cotton bud when it is dirty.

- **Do not place the FOMA terminal near an air conditioning vent.**

Condensation may form due to rapid changes in temperature, and this may cause internal corrosion and malfunction.

- **Do not apply an excessive pressure or weight to the FOMA terminal and battery pack.**

Do not put the FOMA terminal in a bag filled with many objects or in the hip pocket of clothing as you sit down. This may result in faults or damage to the LCD, other internal components or battery pack. When an external device is connected to external connector, it may cause connecting breakage or malfunction.

- **Read the separate manuals supplied with the FOMA terminal, adapter and charger carefully.**

- **Do not scabble the display with metallic objects.**

This may cause scratch, malfunction or damage.

Handling the FOMA Terminal

- **Avoid using the FOMA terminal in extremely high or low temperatures.**

Use the FOMA card within a temperature range between 5°C and 35°C with humidity between 45% and 85%.

- **Using the FOMA terminal close to ordinary phones, TVs or radios may affect the operation of such devices. Use the FOMA terminal away from such devices.**

- **It is your responsibility to keep a separate record of all data stored on your FOMA terminal.**

Under no circumstances shall NTT DoCoMo be liable for any loss or damage to the data stored on your FOMA terminal.

- **When connecting an external device to the external connector (Earphone/microphone terminal), do not plug inclined in the connector or pull the code.**

This may cause malfunction or damage.

- **Do not fold the FOMA terminal with its strap caught between the folding parts.**

This may cause malfunction or damage.

- **It is normal for the FOMA terminal to become warm while being used or charged. It is not a malfunction and you can keep on using.**

- **Do not leave the camera exposed to direct sunlight.**

This may discolor or burn the element.

- **Usually fit the external connector cap and microSD memory card slot cap before use.**

Failing to fit these covers may cause the FOMA terminal to malfunction due to the dust or water getting in.

- **Do not use FOMA terminal when the back cover is removed.**

This may cause of removing the battery pack, malfunction or damage.

- **Do not put a sticker with an extreme thickness, etc. on the face of the display or keys.**

This may cause malfunction.

- **Do not remove the microSD memory card or turn off the FOMA terminal when using the microSD memory card.**

Otherwise, loss of data or malfunction may result.

Handling the Battery Pack

- **The battery pack is consumable.**

If the battery pack does not work for enough time even when it is fully charged, it is time to exchange it. Exchange it for a specified new battery pack.

- **Charge the battery pack within the proper ambient temperature range (5°C to 35°C).**

- **Make sure to charge the battery when you use the FOMA terminal for the first time or if you have not used it for a long period of time.**

- The available operating time of the battery pack depends on the conditions in which you use it and the condition of the battery pack itself.
- When the life of the battery pack is near end, the battery pack may expand a little according to the usage condition, but this is not a malfunction.
- Do not keep or leave the battery pack empty.
The performance and life of the battery pack may be deteriorated.
- Do not damage, scratch, touch imprudently, or short circuit the IC.
Otherwise, loss of data or malfunction may result.
- Be careful not to drop the FOMA card or apply an impact to it.
This may cause malfunction.
- Do not bend the FOMA card or place a heavy object on it.
This may cause malfunction.
- Do not attach the FOMA card to the FOMA terminal with a label or sticker is pasted.
This may cause malfunction.

Handling the Adapter (including the Charger)

- Charge the battery pack within the proper ambient temperature range (5°C to 35°C).
- Do not charge the battery pack in the following places:
 - In a humid, dusty or shaky place
 - Near your home phone, TV or radio
- It is normal for the adapter or charger to become warm while being charged. It is not a malfunction and you can keep on using.
- Do not use the DC adapter to charge the battery pack when the car engine is not running.
This may drain the car battery.
- If you use an electrical outlet with a disconnection prevention mechanism, follow the instructions of the user's manual of the outlet.
- Do not shock the adapter or charger. Do not deform the charging terminal.
This may cause malfunction.

Handling the FOMA card

- Do not apply unnecessary force to attach or remove the FOMA card.
- It is normal for the FOMA card to become warm while being used. It is not a malfunction and you can keep on using.
- The warranty does not cover damage caused by inserting the FOMA card into some other type of IC Card reader/writer.
- Always keep the IC part clean.
- Wipe with a soft, dry cloth (such as a cloth for glasses).
- It is the user's responsibility to keep a separate record of all data stored on your FOMA card.
Under no circumstances shall NTT DoCoMo be liable for any loss or damage to the data stored on your FOMA terminal.
- To preserve the environment, take discarded FOMA card to the NTT DoCoMo shop or service counter.
- Avoid using the FOMA card in extremely high or low temperatures.

Handling the FeliCa Reader/Writer

- The FeliCa reader/writer function of the FOMA terminal uses very weak radio waves that require no licensing of radio stations.
- The 13.56MHz frequency band is used. If there is another reader/writer around, keep enough distance between the FOMA terminal and that reader/writer. Also, make sure that there is no radio equipment using the same frequency band nearby.

Caution

- Do not use the altered FOMA terminal.
Using the altered device is a violation of the Radio Law.
The FOMA terminal is certified to conform to technical regulations for specified radio equipments that are based on the Radio Law, and "Technical Conformity Mark" is affixed on the model name seal as the certification. If you remove the screw and alter inside of the FOMA terminal, the technical regulations conformity certification becomes invalid. Do not use the FOMA terminal with the certification invalid, as it is a violation of the Radio Law.
- Be careful when you use the FOMA terminal while driving a vehicle.
The penalty is imposed on using a mobile phone while driving. Unwillingly receiving a call, use the Hands-free to tell the caller that you will call back, then stop the car in a safe place before using the phone.
- Use the FeliCa reader/writer function in Japan.
The FeliCa reader/writer function of the FOMA terminal complies with radio standard in Japan. You may be punished if you use it overseas.
- Use the IC card authentication function in Japan.
The IC card authentication function of the FOMA terminal complies with radio standard in Japan and is certified. You may be punished if you use it overseas.

Intellectual Property Right

Copyright and Portrait Right

It is prohibited to duplicate, modify or publicly transmit content such as text, images, music or software that was photographed using the FOMA terminal or downloaded from Internet website and that is subject to third-party copyright without the permission of the copyright folder, except where the duplication or quoting of the content for personal use is permitted under copyright law.

It may be prohibited to shoot or record the stage performance, entertainment or exhibition even if it is for personal use.

Shooting a photo of someone by the FOMA terminal without his or her permission, or displaying a photo of someone shot by the FOMA terminal on the website without his or her permission is a breach of portrait right.

Trademarks

- "FOMA", "mova", "i-mode", "i-appli", "i-appli DX", "i-motion", "Deco-mail", "Chaku-motion", "Chara-den", "ToruCa", "mopera", "mopera U", "WORLD CALL", "Dual Network", "FirstPass", "visualnet", "V-live", "i-Channel", "DCMX", "iD", "Security Scan", "i-shot", "i-motion mail", "i-area", "Short Mail", "WORLD WING", "Public mode", "DoPa", "sigmarion", "musea", "IMCS", "OFFICEED", "2in1", "FOMA" logo, "i-mode" logo, "i-appli" logo, "ToruCa" logo, "DCMX" logo, "iD" logo and "HIGH-SPEED" logo are trademarks or registered trademarks of NTT DoCoMo, Inc.
 - Free Dial logo mark is a registered trademark of NTT Communications Corporation.
 - "Catch Phone (Call Waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
 - Napster is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
 - McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
 - G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
-
-  is a registered trademark of FeliCa Networks, Inc.
 - QR code is a registered trademark of Denso Wave Inc.
 - The microSD logo is a trademark. 
 - "Multitask" is a registered trademark of NEC Corporation.
 - "Ericle", "Deco-e maker", "Style-Up", "Stand-by books", "Shield View", and "My Shortcut" are trademarks or registered trademarks of Sony Ericsson Mobile Communications Japan, Inc.

- POBox and POBox Pro are trademarks or registered trademarks of Sony Corporation.
- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- Microsoft®, Windows®, Windows Media® and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Java and all Java-related trademarks and logos are trademarks or registered trademarks of US Sun Microsystems, Inc. in the United States and other countries.
- Powered By Mascot Capsule®/Micro3D Edition™ MASCOT CAPSULE® is a registered trademark of HI CORPORATION.
- The other company names and brand names described in this manual are trademarks or registered trademarks of the respective companies.

Others

- This product is licensed complying with MPEG-4 Visual Patent Portfolio License, and you are permitted to use personally and for the nonprofit purpose in the following situations:
 - To record a movie based on the standard of MPEG-4 Visual (MPEG-4 Video)
 - To play MPEG-4 Video recorded by the consumer engaged in the nonprofit activities
 - To play MPEG-4 Video provided by the provider licensed by MPEG-LA
 - When you use it for other purposes, such as promotion, in-house information and profit activity, contact the U.S. corporation MPEG LA, LLC.
 - FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.
 - POBox technology has been developed by Sony Computer Science Laboratories, Inc. and Sony Ericsson Mobile Communications Japan, Inc.
 - Contains Flash® Lite™ technology by Adobe Systems Incorporated.
- Flash Lite copyright© 1995-2007 Adobe Macromedia Software LLC. All rights reserved. Adobe Systems Incorporated. All rights reserved. Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.



- Content owners protect copyrighted intellectual properties by WMDRM (Windows Media digital rights management) technology. This product uses the WMDRM software to access WMDRM-protected contents. If the WMDRM software is unable to protect contents, the content owners request Microsoft to disable the WMDRM function of the software for playing or copying protected contents. No contents other than protected ones are affected by disabling the function. Please note that, if downloading the license to use protected contents, Microsoft may include the revocation list in the license. Content owners may request upgrading of the WMDRM software when you access the contents. If rejecting the upgrade, contents requiring the upgrade cannot be accessed.

- This product contains NetFront Browser and NetFront Sync Client of ACCESS CO., LTD. Copyright© 2007 ACCESS CO., LTD. All rights reserved.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.



- This product contains the module developed by Independent JPEG Group.
- Powered by JBlend™ Copyright 2002-2007 Aplix Corporation. All rights reserved. JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- IrSimple™, IrSS™ or IrSimpleShot™ are trademarks of Infrared Data Association®.
- This product is equipped with IrFront by ACCESS CO., LTD. as the infrared data exchange function. Copyright© 1996-2007 ACCESS CO., LTD.



JBlend™

IrFront®

ACCESS and IrFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and/or other countries.

- Dialog Clarity and WOW technologies are industrialized based on the license from SRS Labs, Inc.



Dialog Clarity, SRS, WOW and the symbol (●) are trademarks of SRS Labs, Inc.

- This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see "readme.txt" in the "GPL · LGPL 等について" folder on the bundled CD-ROM. ("readme.txt" is only available in Japanese version.)
- This product equipped with the font "FontAvenue" product by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.

- This product is anti bacterial-coated. Antibacterial part is Phone body (excluding the display, keys/buttons and terminals) Inorganic antimicrobial agent, coating, JP0122112A0003N

The SIAA logo indicates the quality control and information disclosure for this product follows the guidelines of the Society of Industrial Technology for Antimicrobial Articles (SIAA).



- ©Primeworks
- ©2006 Gameloft
- ©2008 ZENRIN DataCom CO., LTD. ©2008 ZENRIN CO., LTD.
- ©REALFLEET CO., Ltd.
- ©TYCOON GRAPHICS
- ©2008 Hiroshi Kan
- ©Yutanpo Shirane
- ©Voltage Unlimited Inc.

Description of Windows


- In this manual, each OS (Japanese Edition) is described as follows:
 - Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise, Ultimate).
 - Windows XP stands for Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.
 - Windows 2000 stands for Microsoft® Windows® 2000 Professional operating system.

Package Contents

<Main Components>

FOMA SO705i

(Including the warranty and Back Cover SO10)

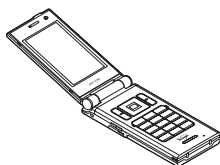

Battery Pack SO03




Manual for FOMA SO705i (This manual)



* The Quick Manual starts on p.408.

CD-ROM for FOMA SO705i

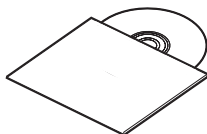

* This CD-ROM contains the PDF files of "Manual for PC connection setting" and "Kuten Code List".

Earphone Plug Adapter for External connector terminal




* Use it when a flat-plug earphone/microphone with switch (optional), etc. is connected.

<Optional Equipment>


FOMA AC Adapter 01/02

(Including warranty and manual)

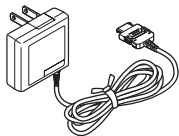

Desktop Holder SO09

(Including manual)

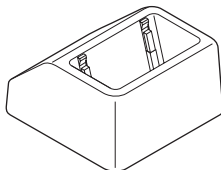


Other options and accessories → p.361

Before Using the Handset

Component Names and Functions	24
Display	27
Sub Display	29
Menu Selection	30
Changing the Main Menu	34
The Basic Operations on the Screens	35
Description of the Operations	37
Function Menu	38
Setting the FOMA Card	40
Attaching/Removing the Battery Pack	42
Charging the FOMA Terminal	43
Checking the Battery Level	Battery level 45
Turning the FOMA Terminal On/Off	Power ON/OFF 46
Switching Between Japanese and English	Select language 46
Setting the Default	Initial setting 47
Setting the Clock	47
Notifying the Other Party of Your Phone Number	Caller ID Notification 48
Checking Your Own Phone Number	My Profile 48

Component Names and Functions

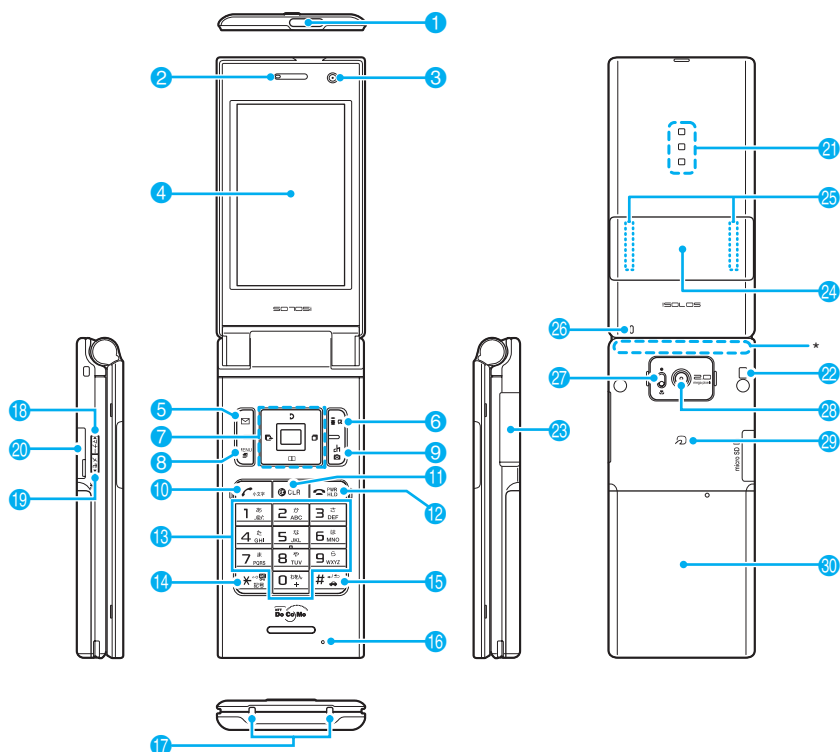

* : The Antenna of the FOMA terminal is built-in. To make calls under better condition, do not cover the antenna part with your hands.

■ Functions

1 Infrared data port → p.257

2 Earpiece

3 Front camera

- Shoots the image of yourself using camera function
- Shoots the movie of yourself during videophone calls

4 Main display

5 Function key 1

- Performs the function displayed (principally the FUNC menu) → p.33
- Displays the mail menu

6 Function key 2

- Performs the displayed function → p.33
- Displays the i-mode menu
- Makes videophone calls → p.50
- Switches the character type when entering characters → p.302

7 Multi-function keys



- Moves the cursor or the displayed contents, etc. up or down (scrolls continuously when the key is held down)
- : Displays Choku-Den → p.84
- : Displays the phonebook



- Moves the cursor to the left or right
- Scrolls the display to the previous or next screens by pages → p.35
- : Displays the Received calls record → p.56
- : Displays the Redial → p.56



- Performs the function displayed ("Select" or "Set", mainly) → p.33

8 **Function key 3**

- Performs the function displayed → p.33
- Displays the main menu/Simple Menu → pp.30, 34
- Displays the task change screen → p.279

9 **Function key 4**

- Performs the function displayed → p.33
- Displays the i-Channel list

10 **Send key**

- Makes voice calls → p.50
- Receives voice/videophone calls → p.62
- Switches the entered character into upper or lower case → p.302

11 **Back (Clear) key**

- Undoes the last step in the operation → p.36
- Puts a call on hold → p.65
- Deletes the entered phone number or characters → pp.50, 303

12 **Power/End of operation/Hold key**

- Turns on the power (1 second or longer)/turns off the power (2 seconds or longer) → p.46
- Ends each function → p.36
- Ends a call → p.51
- Puts an incoming call on hold → p.65

13 **Dial keys**

- Enters phone numbers, characters and numbers

14 **key**

- Sets the IC card lock (for 1 second or longer) → p.217
- Enters " * " or dakuten/handakuten/kutoten → p.302

15 **Public mode (Driving mode) key**

- Sets Public mode (Driving mode) (1 second or longer) → p.65
- Enters "# " or the line feed → p.302
- Returns to the previous reading in 5-touch → p.302

16 **Mouthpiece/Microphone**

17 **Charging terminal**

18 **Volume up key**

- Sets Manner mode (1 second or longer) → p.92
- Raises the earpiece volume during a call → p.64
- Scrolls back the display to the previous screens by pages → p.35
- Connects to the site set as "Home URL" → p.157

- Check the missed call content with the FOMA terminal folded → p.29

19 **Volume down key**

- Lowers the earpiece volume during a call → p.64
- Scrolls the display to the next screens by pages → p.35
- Reads out the current time (Voice clock) → p.68
- Plays recorded messages → p.69

20 **microSD memory card slot**

- Used to insert the microSD memory card → p.244


21 **Speaker (mono)**

22 **Through-hole for strap**

23 **External connector**

- Connects an AC adapter (optional), DC adapter (optional), FOMA USB Cable with Charge Function 01/02 (optional) or Earphone Plug Adapter for External connector terminal* etc.

* : Connects the flat-plug stereo earphone set (optional) or the flat-plug earphone/microphone with switch (optional), etc.

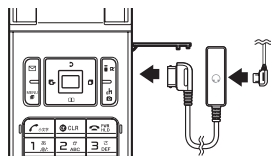

24 **Sub display**

- Displays various information about the FOMA terminal → p.29

25 **Indicator lamp**

- Flashes at an incoming call or mail → p.98
- Flashes at presence of birthday notification → p.98

26 **Incoming call lamp/charging lamp**

- Flashes in the selected color during an incoming call/mail or at presence of a missed call/new mail → p.99
- Lights in red while charging → p.45
- Flashes in red during shooting mode → p.127
- Flashes in blue while the auto timer is activated → p.127

27 **Lens selector switch**

- Switches (Standard)/ (Macro) for the rear camera → p.126

28 **Rear camera**

- Shoots still images and movies
- Shoots the movie of scenery during videophone calls

29 **FeliCa mark**

- Reads the IC card → p.212
- iC communication → p.259

30 **Back cover**

* and are referred to as side keys in this manual.

Functions that involve holding down keys for 1 second or longer


The functions available by holding down each key for 1 second or longer in the standby screen are as follows:

Key	Function	Ref. page
	Displays the Received address list.	p.187
	Displays the Sent address list.	p.187
	Switches the Shield view.	p.96
	Turns the display light on/off.	p.96
	Displays the font setting screen.	p.100
	Sets 2in1.	p.316
	Enters "+".	p.54
	Sets/Releases Public mode (Driving mode).	p.65
	Sets/Releases IC card lock.	p.217

Key	Function	Ref. page
	Adjusts the earpiece volume.	p.64
	Sets/Releases Manner mode.	p.92
	Activates the music player and Quits it when playing BGM.	p.276
	Check new messages	p.175
	Displays the i-appli software list screen.	p.197
	Displays the shooting screen in Phone mode.	p.126
	Clears the advising shortcut icons.	p.101

Display


- The symbols (such as , , , etc.) displayed on the screen are referred to as icons.
- A calendar, etc. can be set to the display. → p.95

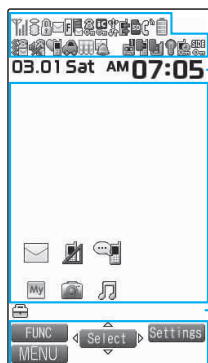


- The status of the FOMA terminal is indicated with icons in this area → p.27
- Clock display → p.100
- Shortcut icon display area
 -  etc. : Advising shortcut icons → p.101
 -  etc. : Pasted shortcut icons → p.100
 -  (My selection),  (Photo mode) and  (Music) are the default settings.
- Task icon display area
 -  etc. : Task icons of the activated functions → p.279
- Function /i-Channel ticker display area → pp.33, 163

Icons that indicates the status of the FOMA terminal

Main display

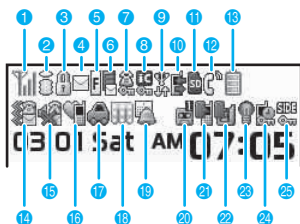

Sub display

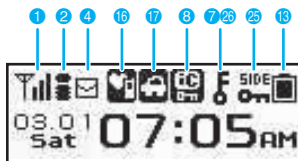

Icon	Description
1 	Signal strength → p.46
	Out of service area/Radio wave does not reach → p.46
	Self mode → p.123
2 	i-mode/i-mode communication in progress → p.146
	Packet communication in progress (no data exchange/sending/receiving)*
	Packet communication in progress (sending/receiving)*
3 	SSL-compatible page displayed → p.148

Icon	Description
4 	Unread mail/Inbox is full → p.173
	SMS in the FOMA card (UIM) is full → p.254
	Unread mail/SMS in the FOMA card (UIM) is full → pp.173, 254
	Inbox is full/SMS in the FOMA card (UIM) is full → pp.173, 254
	Unread Area Mail → p.191
5 	Unread MessageR/Full → p.190
	Unread MessageF/Full → p.190

Icon	Description
	Unread message R and F (in red when each of them is full) → p.190
	Mail kept at the i-mode Center/Full → p.175
	"Receive option setting" is set to "ON" and a mail is kept at the i-mode Center → p.174
	MessageR kept at the i-mode Center/Full → p.190
	MessageF kept at the i-mode Center/Full → p.190
	Dial lock → p.109
	Secret mode/Secret data only mode → p.111
	Original lock/Original lock released temporarily → pp.114, 115
	Secret mode or Secret data only mode and Original lock is set or released temporarily → pp.111, 114
	IC card lock → p.217
	microSD mode/MTP mode set → p.251
	USB cable connected and Communication mode/microSD mode/MTP mode set → p.251
	Handsfree compatible device connected and Communication mode/microSD mode/MTP mode set → pp.61, 251
	USB cable/Handsfree compatible device connected and Communication mode/microSD mode/MTP mode set → pp.61, 251
	Infrared data exchange in progress → p.257
	Infrared remote control operated → p.261
	IC card authentication in progress → p.118
	iC communication in progress (sending/receiving data) → p.259

Icon	Description
	microSD memory card inserted → p.244
	microSD memory card (invalid) inserted → p.244
	microSD reader/writer operated → p.252
	microSD being accessed → p.247
	During a voice call → p.50
	64K data communication in progress
	During a videophone call → p.50
	Switching between voice call and videophone call → pp.53, 63
	Battery level → p.45
	Vibrator → p.90
	Ring volume set to "Silent" → p.64
	Mail/Msg. ring time is set to "OFF" → p.91
	Manner mode → p.92
	Remote monitoring → p.73
	Public mode (Driving mode) → p.65
	Music&Video Channel program reservation set → p.265
	Alarm notification function → p.285
	Voice mail message → p.308
	Record message → p.69
	Record VP message → p.69
	Display light set to "OFF" → p.96
	Shield view set to "ON" → p.96
	Shield view set to "ON", backlight set to "OFF" → p.96
	Keypad being locked/standby (Timer set) → p.118
	Side key guard set to "ON" → p.120

Icon	Description
	During Keypad lock → p.118
	Keypad lock is set during Original lock → p.118
	When setting Original lock for "Dial/sending mail" and "Incoming/Mail disp.", Lock is temporarily released and Keypad lock is set at the same time. → p.118
	Keypad lock is set when Secret mode or Secret data only mode is set. → p.118

Icon	Description
	Keypad lock is set when Original lock and Secret mode/Secret data only mode are set at the same time. → p.118
	When setting Original lock for "Dial/sending mail" and "Incoming/Mail disp.", Lock is temporarily released and Keypad lock as well as Secret mode/Secret data only mode Keypad lock are set. → p.118

* : For details on the icons, refer to the "Manual for PC connection setting" (PDF format) in the provided CD-ROM.

NOTE

- The display adopts state-of-the-art technology; some dots (points) may not light up while others may constantly light up due to its characteristics. Note that this phenomenon is not a failure.
- You can check the name of the displayed icons by selecting "Settings" ▶ "Display" ▶ "Icons".

 
Sub Display

Sub display advises an incoming call/mail or alarm notification.


● Samples



Incoming call



Chaku-moji

 

Mail received

 
Displaying the clock to check time

Press  or  with the FOMA terminal folded and Sub display lights up to show the clock.

- When you press , the clock is displayed and the current time is read out (available in Japanese mode) at the same time (when there is no missed call or new mail, etc.). → p.68

Checking a missed call

If a call is missed, press  with the FOMA terminal folded to check the received date and time, etc.



NOTE

- If one or more missed calls are recorded, the latest one can only be checked.

Menu Selection


You can run, set, and check the FOMA terminal's functions in a variety of ways. There are various methods of the rest though the method of selecting the function from the main menu is general.

Selecting functions from the main menu

You can select the functions of the FOMA terminal from the main menu displayed by pressing **MENU** in the standby screen. The menus are sorted by function. → p.336

<Example: To set "Setting when folded">




1 Press **MENU** on the standby screen to display the main menu

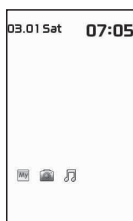

Tip

If you do not press any key for 15 seconds while the main menu is displayed, the main menu is turned off and returns to the previous screen.

2 Use **Left Arrow** to move the highlight, then press **Right Arrow** (Select) to select the displayed menu sequentially

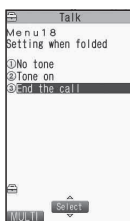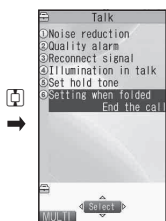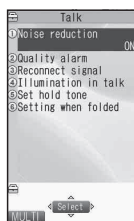

Tip


Holding down **Left Arrow** moves the highlight in sequence.

The highlighted item is displayed in two lines and the current setting is displayed.


Accessing functions with the function keys

On each screen, you can access functions easily by pressing the function keys pre-assigned to the function.


1 Press the function key on the standby screen

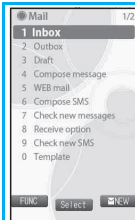


Pressing displays the mail menu. → p.166

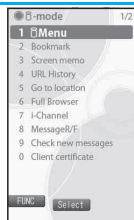


Pressing displays the i-mode menu. → p.146

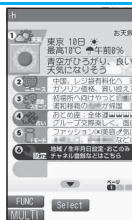

Pressing displays the Channel list. → p.163

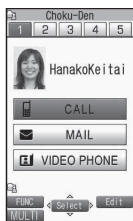

Pressing displays the Choku-Den screen. → p.84

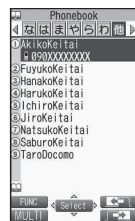

Pressing displays the phonebook list screen. → p.79



Pressing displays the Received calls screen. → p.56



Pressing displays the Redial screen. → p.56

NOTE


- When using the Simple Menu (p.34), pressing or on the standby screen displays the Simple Menu's Mail menu or i-mode menu.

Searching menu items to access functions


Even if you do not know the procedure to access the menu, you can still access the desired function by entering key words to search menu items.

<Example: To access "Select ring tone">

- 1** Press **MENU** on the standby screen, then press **Ⓜ** (FUNC), and highlight "Search", then press **■** (Select)

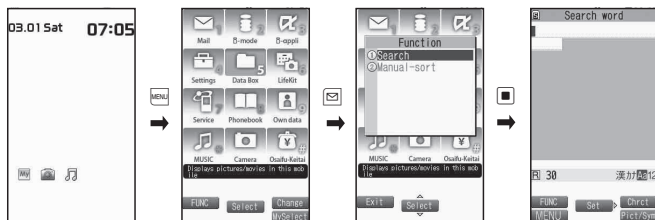

- 2** Enter "ring" and press **■** (Set), then select the displayed menu

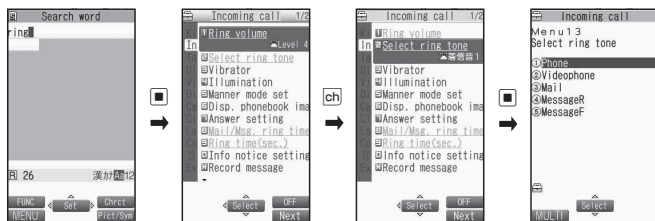

The search result is displayed with an underline.


If there are two or more search results, press **ch** (Next) to move the frame.

Selecting functions from My select

By storing your frequently used functions (p.98), you can access the menus easily.

- 1** Press **MENU** on the standby screen to display the main menu, then press **ch** (MySelect) in sequence

Pressing **ch** switches between the main menu and My select.

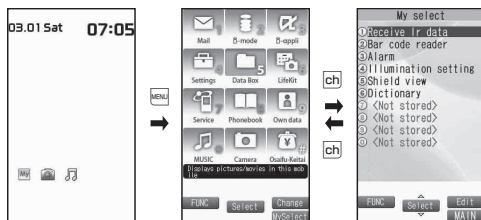


Accessing functions by selecting menu numbers

When the main menu is set to "Standard Menu" (p.34), you can access functions quickly by pressing the keys pre-assigned to the menu numbers (p.336).

<Example: To access "Select ring tone">

1 Press **MENU** on the standby screen, then press **1** **3** in sequence

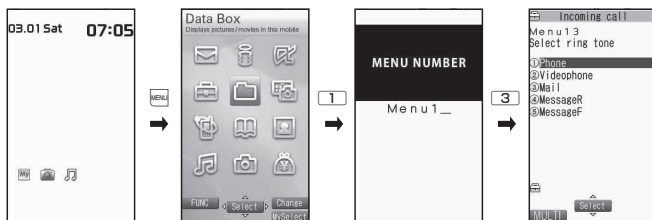

How to use the function keys

The operation icons (Function display) corresponding to , , , , and the direction icons corresponding to are displayed on the screen. Only when the corresponding keys can be used, those icons are displayed.

■ Performing the functions assigned to the function key

Press the key for **1** to **5**, the function is activated.

1 includes (FUNC), (Exit), etc.

When the FUNC key is displayed, press to show the function menu.
→ p.38

The center of **2** includes (Select), (Set), (Play), (Dial) etc.


3 includes (Edit), (Finish), (Chrct) etc.

4 includes (MENU) and (MULTI).

5 includes (ch), (Change), (Ir data), (Pict/Sym) etc.

■ Moving or scrolling the screen

Press in the direction you want to scroll.

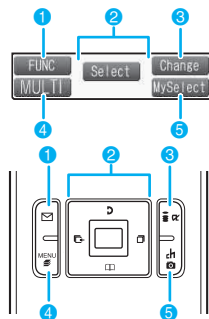

[Notation]

■ Description of the function display


In this manual, operations related to the keys for the function display are generally described with the function display in the parenthesis, such as (Select) and (FUNC).

Changing the Main Menu

You can change the design of the main menu (style for background or icon, etc.) as you want.

- When you change the design of the menu display using Kisekai Tool, the menu structure may change in accordance with frequency of using functions. Also, you cannot access some functions entering the menu number assigned to the functions.

1 Press on the standby screen, then press (Change) in sequence

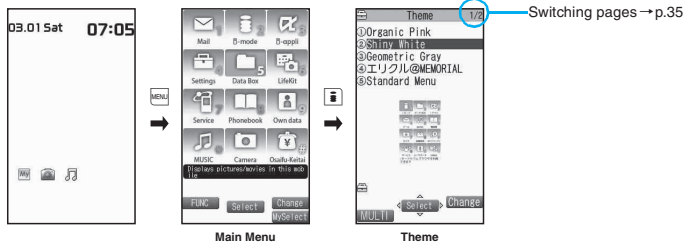

2 Select an item

"Organic Pink" to "Standard Menu"

Switches the display design in each menu. When set to "Standard Menu", you can access functions by entering the menu numbers. → p.33

"Large Menu"

Large-font menu appears.

"Simple Menu"

Simple Menu consists of frequently used menus, and its character size is large and operation procedure is simple. → p.346

Sets the character size of the screens to "X-large" all at once. → p.100

"Original theme" → p.97


You can change the icons and background image used on the main menu. You can also set the picture you shot as the background.

"Kisekai Tool" → p.104

You can change various design of the FOMA terminal such as the main menu all at once with the Kisekai Tool package.

■ Changing the Main Menu temporarily

Highlight an item on the theme screen and press  (Change) to change the main menu temporarily. When the main menu is displayed again, the main menu before it sets is displayed.

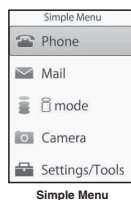

NOTE

- When you set the menu that supports the user customizing, you can sort the menu items by selecting "Manual-sort" by pressing  (FUNC) in the main menu. → p.280

[Notation]

■ Description of the main menu

The menu name may be different depending on the selected theme of Menu display set. In this manual, instructions for menu operations are described as follows:

① Mail	② i-mode	③ i-appli
④ Settings	⑤ Data Box	⑥ LifeKit
⑦ Service	⑧ Phonebook	⑦ Own data
⑧ MUSIC	⑨ Camera	⑩ Osaifu-keitai

The Basic Operations on the Screens

When items appear in multiple pages

1 Press to display other pages

To switch the page, press  (or ) for the previous page and press  (or ) for the next page.

Current page/Total pages




To display other pages using

Pressing  displays the previous page when the highlight is located at the top of the list, and pressing  displays the next page when the highlight is located at the bottom of the list.

Using the dial keys to select items

1 Press to corresponding to the menu numbers

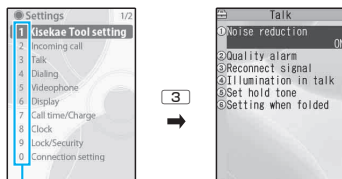

The number corresponding to the dial key


Selecting "YES/NO" or "ON/OFF"

1 Press to move the frame, then press (Select)



● To display an image in the picture list

- 1 Press  to move the frame, then press  (Disp.)

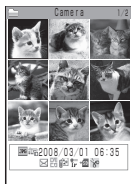

● Entering a security code

- 1 Enter the 4 to 8 digit security code, then press  (Set)



The numbers of the entered security code is displayed as “_”.

 
The detail screen of the function is displayed when the security code is successfully entered.

■ If the entered security code is incorrect

A message notifying that the security code is wrong is displayed. Re-enter the security code from the beginning.

● Entering numbers

- 1 Enter numbers by pressing  to 



To enter a 1-digit number or 2-digit number in a 3-digit number entry screen, press  twice or once before entering a number.

■ To enter “3”

▶   

● To cancel operations, and to return to the standby screen



Press  to cancel the last operation, such as when you select wrong menu item. Though the previous screen appears basically, another screen may appear depending on the function.

 


Press  to complete operations such as settings and to return to the standby screen. Though the function is completed and the standby screen appears basically, another screen may appear depending on the current displayed screen and function. If you press  during setting operation, the setting operation is canceled and the standby screen reappears.

Description of the Operations

In this manual, instructions for menu operations are briefly described in almost all cases as follows:

The example of description of operations and the actual operations



- ①: Press on the standby screen.
- ②: Press to move the highlight to the menu in the double quotation mark, then press (Select).
- ③: Press to move the highlight to the item in the double quotation mark, and then press (Select).
Or, press to for the menu number in the double quotation mark.
- ④: Press to move the highlight.
- ⑤: Press the key for the function displayed in parentheses.

[Notation]

■ Omission of in the “Select” and “Set” operations

- When a target function is selected from the main menu or list, such as example ② and ③, (Select) is omitted.
- In the cases such as “Select an item” or “Enter your security code”, (Select) and (Set) are omitted in the same way.
- When you are supposed to move to the next step without pressing (Select), “Highlight xxx” is used, such as example ④.

■ Easy operations are preferred

- Though the operation of the main menu has been described, this manual gives priority to the operations by short cut keys operations (p.31).
- If you select the menu from the Simple Menu, refer to “Simple Menu function list” (p.346).

■ Omission of the descriptions after completing the operations

- The descriptions for the operations after completing the function are omitted.
- “To cancel operations, and to return to the standby screen” → p.36

■ Brief description of keys and menus

- In this manual, instructions for key illustrations/menu displays/holding down keys are simply described as follows:

	Key	Menu display	Holding down keys
Actual display/operation		Menu	Press and hold down for 1 second or longer
Description in this manual		iMenu	(1 second or longer)

■ Describing multiple menus together

When multiple menus are described together, “ · ” is used between the items as follows:

<Example: Function menu of the Choku-Den screen>

Release this · Release all ····· Releases one or all Choku-Den.

Function Menu


"Function Menu" is one of the menus of the FOMA terminal that can be accessed from the function display. The function menu activates supplementary functions of each screen. For example, you can use the function menu to delete a mail after reading it, or to select the folder to save an image you shot with the camera.

● How to use the function menu

There are mainly three ways to use the function menus. Use the appropriate method depending on the situation.

- ① Refer to the explanation of the function menu items from the reference page stated with the operation screen.
- ② Refer to the explanation of the function menu items from the function menu index.
- ③ Find the procedure to display the operation screen from the reference page of the function menu.

Operation screen with the reference page for the function menu is illustrated in a blue frame and differentiated from others.

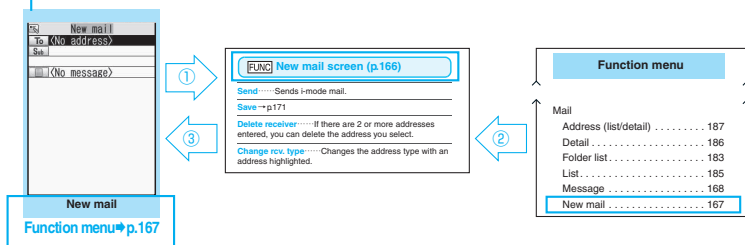


* "Function menu item" and "Function menu index" in the above illustration are only excerpts.

● Operation target on the list screen

In the function menu on the list screen, either data highlighted in the list or all the data in the list is targeted by the function. For example, "Edit title" or "Delete this" targets a highlighted title or data, and "Delete all" targets all the data.

When you select a function menu which targets one data in the list, such as "Edit title" or "Delete this", highlight the data, then press (FUNC).


<Example: To edit the bookmark title on the list screen>

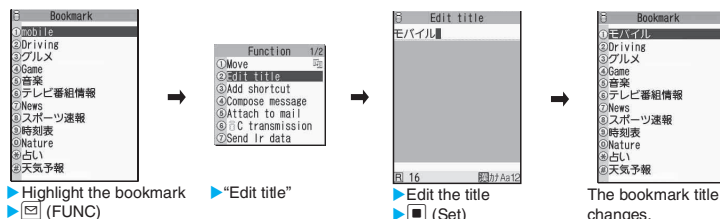

About multiple-choice


When you delete unnecessary data, protect important data or move the data you do not want to be viewed by others to the secret folder, etc., you can select not only one data or all data but also multiple data. In this case, perform the following operation.

<Example: To delete multiple mail on the received mail list screen>

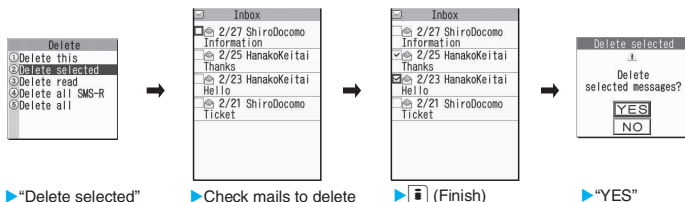

Marking a checkbox

When you use to move the frame to the item to select and press (Select), the checkbox changes from to . This means that the item is selected. Pressing (Select) switches between and . In the picture list, appears when the item is selected. Nothing appears when unselected.

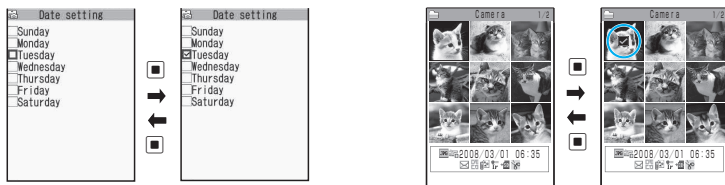


- When "FUNC" appears on the function display area, pressing (FUNC) allows you to use "Select all" or "Release all".

Menus which switch alternately

Depending on the menu, menu items switches alternately as follows:

<Example 1>

 When rear camera is used



<Example 2>

When front camera is used



When the shooting screen is displayed on the FOMA terminal and "Rear camera" is used, "Front camera" appears as in <Example 1>. If you select "Front camera" at this point, the FOMA terminal switches to "Front camera" mode, and "Rear camera" appears the next time the function menu is displayed.

[Notation]

Description of the menus which switch alternately

Such menus are described as "Front camera ⇄ Rear camera".

NOTE

- When the displayed menu contains sub menus, appears on the right.
- The displayed contents of the function menu may vary or you may not be able to select the item of function menu depending on the operating function and settings. The function menu items you cannot select are displayed in gray.


Setting the FOMA Card

The FOMA card is an IC card that contains private information such as your phone number. Before inserting or removing the FOMA card, first turn the power off and remove the battery pack. → p.42 Note also that when you try to insert or remove the FOMA card, keep the FOMA terminal folded and held in your hand.

● Attaching/Removing the FOMA card


The illustration shows how to attach the FOMA card.

1 Put the FOMA card into the card inserting slot with the IC side downward as shown in the illustration

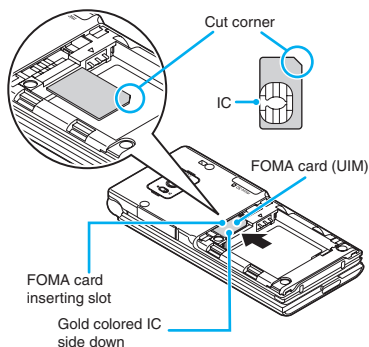

2 Insert the FOMA card until it is fixed

To remove the FOMA card, carefully pull it out straight from the following status.

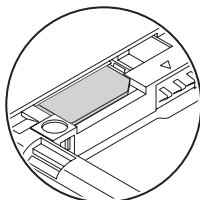

Properly inserted

Security codes for the FOMA card (UIM)

You can set two security codes of PIN1 code and PIN2 code for the FOMA card (UIM). → p.108

FOMA card operational restriction function

The FOMA terminal incorporates the FOMA card operational restriction function, the security function to protect your data and files.


- When you download data or files from sites or receive data attached to mails, the FOMA card operational restriction is automatically set to these data and files.
 - Data and files with this function set are accessible only when the same FOMA card (UIM) used when downloading these data or files is used.
 - Target data and files for the FOMA card operational restriction function are as follows:
 - File attached to i-mode mail (except for ToruCa)
 - Screen memo
 - Image inserted into Deco-mail or signature
 - i-appli (including i-appli standby screen)
 - Image (including the animation and Flash movie)
 - Melody
 - Image of ToruCa (detail)
 - Image downloaded from the Data Security Center
 - Program of the Music&Video Channel
 - Movable contents data
 - i-motion
 - Chara-den
 - Chaku-Uta®/Chaku-Uta-Full®
 - Kisekai Tool
 - Record Videophone message
 - Template including data with operational restrictions
 - DL dictionary
 - MessageR/F with attached file (melody/image)
- * : "Chaku-Uta" is a registered trademark of Sony Music Entertainment (Japan) Inc.
- The FOMA card (UIM) that was inserted when you downloaded or received data or files is referred to as "your FOMA card (UIM)" and other FOMA cards as "other FOMA card (UIM)" hereinafter.



When the inserted FOMA card (UIM) was used to download data or receive mails, you can view or play the data that applies to the FOMA card operational restriction function.



When the inserted FOMA card (UIM) was not used to download data or receive mails, you cannot view or play the data that applies to the FOMA card operational restriction function.

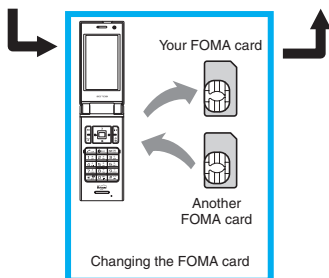

NOTE

- If the FOMA card (UIM) is not attached or you replace the FOMA card (UIM) with another one, “ ” is attached to data and files with this function set and you cannot set these data to “Display setting” or “Select ring tone”.
- Data and files with this function set are only can be moved and deleted with other FOMA cards (UIM).
- If you remove the FOMA card (UIM) or change to other FOMA card (UIM) when data or a file with this function set is set to “Display setting” or “Select ring tone”, these settings are reset to the default settings. When your FOMA card (UIM) is inserted again, the settings return to your settings.

Settings for replacing the FOMA card (UIM)

When you replace the FOMA card (UIM) inserted to the FOMA terminal with other FOMA card (UIM), the following settings are changed:

- Functions of which settings are changed to settings stored on the newly inserted FOMA card (UIM)
 - Select language
 - SMS center selection
 - SMS validity period
 - PIN setting
 - Host selection of Connection setting
- Functions that are reverted to the default setting
 - i-Channel setting
 - Access setting for Full Browser

- Functions that are set to “Invalid”
 - Cookie settings for Full Browser (Cookie information is kept)
- Functions of which current settings of the FOMA card (UIM) become invalid
 - Program setting of the Music&Video Channel (Set the program again)

FOMA card functional differences

The FOMA card (UIM) (blue) has the following functional differences from the FOMA card (green/white).

Function	Blue	Green/White
Max number of digits for phone number to be stored in the FOMA card (UIM) phonebook	20 digits	26 digits
User certificate operation to use FirstPass	Not available	Available
WORLD WING	Not available	Available
Service Numbers	Not available	Available

WORLD WING

WORLD WING is DoCoMo's FOMA international roaming service that you can make or receive a call with your proper phone number even oversea using your FOMA terminal with the FOMA card (UIM) (green/white) and supporting services.

FOMA S0705i is only available in 3G roaming service area. For GSM service area, change your terminal to the GSM-compatible one.

- For the customers who have subscribed to the FOMA service on September 1, 2005 or after, a separate subscription is not necessary. However, customers who declared that they did not require this service at the FOMA service subscription or who unsubscribe from this service need a separate subscription.
- For the customers who have subscribed to the FOMA service on August 31, 2005 or before without subscribing to “WORLD WING”, a separate subscription is necessary.
- This service is not available in some payment plans.
- In case the FOMA card (UIM) (green/white) is lost or stolen in overseas, contact to DoCoMo as soon as possible and take the course of service interruption. Refer to the back of this manual for the inquiries numbers. Note that you are charged for the call and communication even after the FOMA card (UIM) (green/white) is lost or stolen.


Attaching/Removing the Battery Pack

- Make sure to turn the FOMA terminal off before removing the battery pack. Note also that keep the FOMA terminal folded and held in your hand.

● Attaching


1 Remove the back cover

Pressing the back cover in direction ①, slide it in direction ② to remove the back cover.

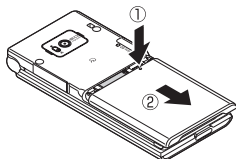


2 Attach the battery pack

With the "A" side of the battery pack facing up, attach the battery pack in direction ③ making sure that the "▲" mark of the battery pack fits the "▲" mark of the FOMA terminal (Phone), then press the battery pack down in direction ④.

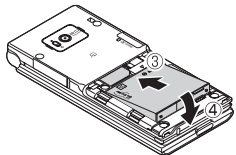

3 Attach the back cover

Lift the back cover about 5 mm and align it to the groove in the FOMA terminal (Phone). Pressing the back cover in direction ⑤, slide it in direction ⑥ and press the back cover until the catch clicks shut.

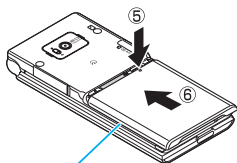


Make sure that there is no space between the Back cover and the FOMA terminal (Phone).

● Removing

1 Remove the back cover

2 Remove the battery pack

Press the tab on the side of the battery pack in direction ①, then lift upwards in direction ② to remove the battery pack.

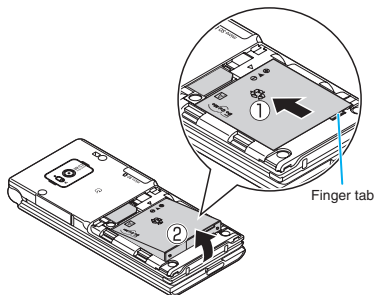

NOTE

- Do not use excessive force when the tip of the back cover is inserted into the FOMA terminal. The finger tab of the back cover may be broken.

Charging the FOMA Terminal

Getting the best out of your battery pack

Use the specified Battery Pack SO03 for the FOMA terminal.

To use the FOMA terminal overseas, the FOMA AC Adapter 02/FOMA AC Adapter 01 for Global Use is required. Check the voltage available in the destination area or country before using the FOMA AC Adapter 02/FOMA AC Adapter 01 for Global Use. → p.361

■ Battery pack life

- The battery pack is consumable. The amount of usable time decreases every time the battery pack is recharged.
- When a fully charged battery pack only lasts half as long as it did at the time of purchase, the battery pack life is almost over, so it is recommended to replace it with a new one. When the life of the battery pack is near end, the battery pack may expand a little according to the usage condition, but this is not a malfunction.
- The battery pack life may be shortened if i-appli or videophone is used for a long time while charging.



Li-ion00

To protect the environment, take used battery packs to NTT DoCoMo, the agency, the recycle shop, etc.

■ Battery pack charging

- For details, refer to the manuals for the FOMA AC Adapter 01/02 (optional), FOMA AC Adapter for Global Use 01 (optional) and FOMA DC Adapter 01/02 (optional).
- FOMA AC Adapter 01 supports voltage of 100V AC only.
- FOMA AC Adapter 02/FOMA AC Adapter 01 for Global Use supports voltage from 100V AC to 240V AC, but the plug shape of the AC adapter is for 100V AC (domestic). For overseas use, the compatible conversion plug adapter is required. Do not charge the battery using the transformer for travel.
- When charging the battery pack, the battery pack must be attached to the FOMA terminal.
- You can receive calls during charging if the FOMA terminal is turned on. However, the battery level will fall during the call and the time required for charging will increase. Charging time also increases when "Charging" of "Backlight" setting is set to "All time ON".

- When plugging in or out the connector, do it slowly and securely not to apply an excessive force.
- When you make a call or perform packet communication during charging in a high-temperature environment, the FOMA terminal's temperature may rise and the charging may be stopped. If this occurs, stop a running function and wait for the temperature or the FOMA terminal to fall before you retry charging.

■ Do not charge the battery pack for a long period of time (several days) with the FOMA terminal turned on

- If you charge the battery pack for a long period of time with the FOMA terminal turned on, power to the FOMA terminal will be supplied from the battery pack once charging ends. As a result, you will only be able to use the FOMA terminal for a short time and the low-voltage alarm may sound immediately. In this case, recharge the battery pack correctly. Disconnect the FOMA terminal from the AC adapter (or desktop holder) or DC adapter, then set it again for recharging.


■ Battery usage rough time (The duration varies depending on the charging time and the deterioration of the battery pack)

Continuous Standby Time	
[FOMA/3G]	Stationary: Approx. 580 hours In transit: Approx. 430 hours
Continuous Talk Time	
[FOMA/3G]	Voice call: Approx. 220 min. Videophone: Approx. 100 min.


- The continuous standby time in stationary is the average usage time when the FOMA terminal is folded and standing still while radio waves can be normally received.
- The continuous standby time in moving is the average usage time when the FOMA terminal is folded under condition of "stationary", "moving", and "out of service area" within the area where radio waves can be normally received.
- Note that the actual continuous talk/standby time may decrease by as much as half depending on the following conditions: the battery pack charging level, the function settings, ambient environment such as temperature, the status of radio waves (out of service area or weak radio waves). It may shorten the talk (communication)/standby time to make i-mode communication, compose i-mode mail, transfer data, execute multi access, activate i-appli or i-appli standby screen, use camera and play movie/i-motion/music.
- Depending on the network condition of the country, talk (communications) and standby time may decrease.

Charging the battery pack with the AC/DC adapter

■ AC adapter (optional)

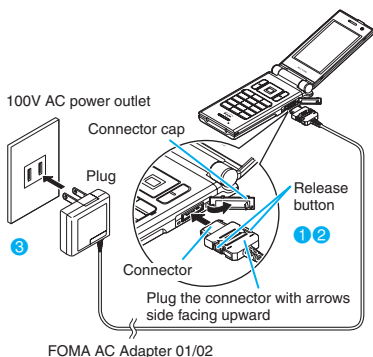

■ DC adapter (optional)

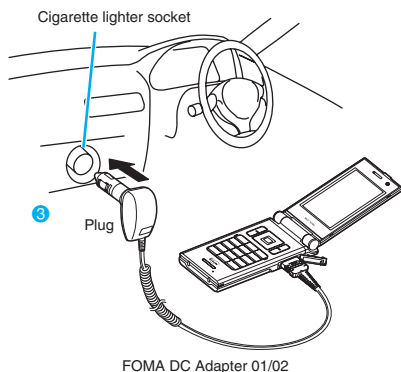

- 1** Open the external connector cap of the FOMA terminal
- 2** Plug the AC/DC adapter connector horizontally into the FOMA terminal's external connector
- 3** Plug the AC adapter into the outlet
Plug the DC adapter into the cigarette lighter socket in your car
Charging starts.


Standard charging time

Approx. 120 min.

- 4** When charging is completed, remove the AC adapter/DC adapter connector horizontally from the FOMA terminal while pressing the release button
Do not pull the connector with excessive force because this may cause a malfunction.

- 5** Unplug the AC adapter from the outlet
Unplug the DC adapter from the cigarette lighter socket in your car
- 6** Close the external connector cap of the FOMA terminal

Charging the battery pack with the desktop holder

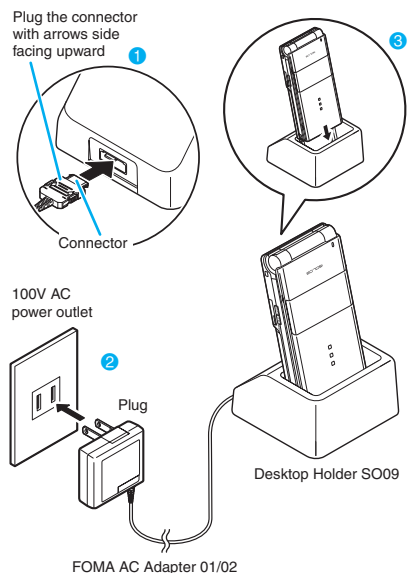


- 1** Plug the connector of the AC adapter (optional) horizontally to the terminal on the back of the desktop holder (optional)
- 2** Plug the AC adapter into the outlet

- 3 Hold down the desktop holder and place the FOMA terminal securely in the direction of the arrow

Standard charging time

Approx. 120 min.

- 4 After charging is completed, hold down the desktop holder, then lift the FOMA terminal up in the direction of the arrow

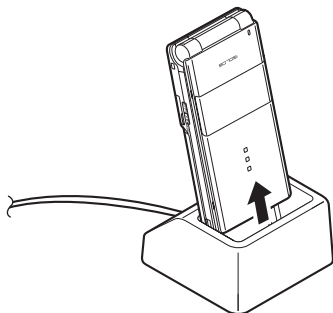

NOTE

- The charge lamp lights up in red during charging. The charge lamp turns off when charging ends (Full charge). If the FOMA terminal is turned on, “” flashes during charging and “” lights when charging ends.
- The battery pack cannot be charged separately. Always charge the battery pack while it is attached to the FOMA terminal.
- If the battery runs out, the charging lamp may not lights up right away, but the charging itself has started.

<AC adapter/DC adapter>

- When the charge lamp of the FOMA terminal (Phone) and “” on the display disappears, and the message “Charge unusual Stop charge” is displayed, disconnect the FOMA terminal from the AC adapter or DC adapter and remove the battery pack. Then set them again for recharging. If the same error occurs again, there may be a problem or fault on the AC adapter or DC adapter. Contact the NTT DoCoMo shop or service counter.
- The DC Adapter uses a 2A fuse. If the fuse (2A) blows, always use a fuse with the same specifications. Fuses (2A) are consumable items. Purchase a replacement fuse at your local car accessory shop, etc.

<Desktop holder>

- Attach the FOMA terminal to the desktop holder securely. Also, take care not to pinch the strap.

Checking the Battery Level

<Battery level>

The battery level is indicated only as a guide.

Checking the battery level with icon

When the FOMA terminal is turned on, the icon indicating the remaining battery level is displayed.



- : Full charge.
- : Partial charge.
- : The battery is almost running out. Recharge the battery.

NOTE

- The icon indicating the remaining battery level of Sub display is displayed → → in order.

Checking the battery level with sound and animation

 
The current battery level is indicated by sound and animation.

1 “Settings” ▶ “Other settings” ▶ “Battery level”

The check screen is displayed, and beeps sound in accordance with the level. The battery level animation disappears in about 3 seconds.

- “3 short beeps” : Full charge.
- “2 short beeps” : Partial charge.
- “1 short beep” : The battery is almost running out. Recharge the battery.

When the battery runs out



The screen as shown on the left appears and the low-voltage alarm sounds. The alarm sounds for about 10 seconds and the power is turned off in about 1 minute. To stop this alarm, press any key (except for side keys).

NOTE

- The recharge battery screen and 3 short beeps sound during a voice call and the recharge battery screen (“Camera Off” message to the other party) appears during a videophone call to notify. Note that the call will be disconnected in about 20 seconds and the power turns off in about one minute.

Turning the FOMA Terminal On/Off

<Power ON/OFF>

Turning the FOMA terminal on

- Before turning the FOMA terminal on, make sure that the FOMA card is inserted correctly.

1 (1 second or longer)

After Wake-up screen appears, the standby screen or initial settings screen appears. If you have just attached the battery pack or you turn the FOMA terminal back on immediately after turning it off, "WAIT A SECOND" message may appear for a short time.

■ When "📶" appears

You are outside the FOMA service area or in a place where radio waves do not reach. Move to a place where the radio reception level icon such as "📶" appears. The reception level is displayed as follows:



Standby



- If the Initial setting screen appears → p.47

- If the PIN1 code/PIN2 code entry screen appears → p.108

NOTE

- When you change the FOMA card (UIM), you have to enter the 4 to 8 digit security code after turning on the FOMA terminal. The standby screen appears when the security code is successfully entered. When you enter wrong security code for 5 times, the FOMA terminal turns off (however, you can turn on the FOMA terminal again).

Turning the FOMA terminal off

1 (2 second or longer)

The shutdown screen "SO705" appears and the power is turned off.

Turning the FOMA terminal on/off automatically

<Auto power ON/OFF>

Set the Auto power function, the power supply automatically on or off at the specified time.

- The FOMA terminal does not turn off during using another function, even if the Auto power OFF set time is reached. In addition, the FOMA terminal does not turn off when the alarm notification time or the i-appli Auto-start time is the same as the Auto power OFF set time. The FOMA terminal turns off after finish the function.
- If the FOMA terminal turns off, the Music&Video Channel program is not downloaded and reserved update of the software is not available. Note above when setting Auto power OFF.

<Example: Turning the FOMA terminal on automatically>

1 "Settings" ▶ "Clock" ▶ "Auto power ON"

■ Turning the FOMA terminal off automatically

▶ "Auto power OFF"

2 "ON" ▶ Enter the time ▶ Select wheter to repeat or not

■ To cancel the Auto power ON/OFF

▶ "OFF"

NOTE

- Before entering an area such as an aircraft or hospital where there is electronic equipment that uses extremely precise control systems or very low signal levels and the use of mobile phones is prohibited, set the "Auto power ON" setting to "OFF" and then turn the FOMA terminal off.

Switching Between Japanese and English

<Select language>

You can switch the languages between Japanese and English to display function names and messages on the display.

1 "Settings" ▶ "Display" ▶ "Select language" ▶ "English"

■ To change from English to Japanese

▶ "日本語"

NOTE

- When the FOMA card (UIM) is inserted, Select language setting is stored on the FOMA card (UIM).

NOTE

- When "Select language" is set to "English", only two options of "ON/OFF" are available for "Info notice setting".

You can switch announcement language between Japanese and English for outgoing and incoming calls in some announcements. → p.312

Setting the Default <Initial setting>

After turning the FOMA terminal on, you can set "Set time", "Change security code", "Character size" and "Keypad sound" as initial settings.

1 Initial setting screen → "YES"

2 Set the main time → p.47

3 Change the security code → p.109

The default setting is "0000" (4 zeros).

4 Set the font size → p.100

5 Set the keypad sound → p.90

6 Check the contents about Software Update, then select "OK"



NOTE

- When you set all functions, the initial setting screen no longer appears when you turn on the FOMA terminal.

Setting the Clock

Set date and time of the main clock using Set time. In the world clock, you can specify the display mode of the sub clock.

Set the main clock

<Set main time>

1 [MENU] → "Settings" → "Clock" → "Set time" → Select any item:

Auto time set ON..... Sets date and time of the main clock in auto correction.

Auto time set OFF..... Sets date and time of the main clock manually.

■ To enter the date and time

Use [←] to move the highlight, then use the dial keys to enter the numbers.

NOTE

- After you set the date and time, you can use functions such as "Alarm" or "Schedule" which manages the date and time.
- The adjustable range of the date and time is between 00:00 on January 1, 2004 and 23:59 on December 31, 2037.

<Auto time set>

- Time is automatically adjusted e.g. when the power is turned on with a FOMA card (UIM) inserted.
- A several-second time lag may occur. Time may not be adjusted depending on the signal status or i-αpli set as the standby screen.

Setting the sub clock

<Set sub clock>

1 [MENU] → "Settings" → "Clock" → "World clock" → Select any item:

Time zone..... Select the time zone

Press [F] (Change) to change the displayed city name. (Some cities cannot be changed depending on the time zone.)

Summer time..... Adds one hour to the world clock to show the time (ON/OFF).

Notifying the Other Party of Your Phone Number

<Caller ID Notification>

The FOMA terminal can send your phone number (caller ID) to the other party's phone (Display) when you make a call.

- Since the phone number is important information, please take care when you send your caller ID.
- You cannot perform the setting when "Service" is displayed.

1 "Service" "Caller ID Notification" ▶ Select any item:

Activate/Deactivate.....Sets whether to send your caller ID or not.

Check setting.....Checks the current Caller ID Notification settings.

Notifying/Withholding your caller ID for individual calls

● Adding the "186"/"184" prefix to the other party's phone number

To provide your caller ID, add the "186" prefix when you dial the phone number. To withhold your caller ID, use the "184" prefix.

■ To provide your phone number

186 - (The other party's phone number) ▶ (voice call) / (V. phone)

■ To withhold your phone number

184 - (The other party's phone number) ▶ (voice call) / (V. phone)

● Selecting to Notify/Withhold your caller ID from the function menu

Select Notify/Withhold your caller ID from the function menu of the detail screen such as "Enter phone number" screen and "Phonebook/Received calls/Dialed calls/Redial".

<Example: To make a voice call from the Enter phone number screen>

1 Enter the phone number of the other party

2 (FUNC) ▶ "Notify Caller ID" ▶ "OFF" or "ON"

■ To cancel "Notify Caller ID"

▶ "Cancel prefix"

When "Cancel prefix" is selected, the "Caller ID Notification" setting is applied.

3 (voice call) / (V. phone)

NOTE

- This function is available only when the other party's phone is capable of displaying the caller ID.
- If you hear a message requesting your caller ID, make a call again after setting your caller ID activated.
- Even if you add "186"/"184" when making an international call, the setting may be disabled. Select "Notify Caller ID" from the function menu.
- If you make a call with the "186"/"184" prefix, the phone number including this prefix is recorded in the Redial/Dialed calls.

Checking Your Own Phone Number

<My Profile>

You can display and check your phone number (own number) stored in your FOMA card (UIM).

1

NOTE

- You can easily quote the information stored in "My Profile" when entering the owner information (such as name or mail address) on websites, etc. → p.303
- You can check your i-mode address by selecting "i-mode menu" ▶ "iMenu" ▶ "English iMenu" ▶ "Options" ▶ "Mail Settings" ▶ "Confirm Settings".
- When 2in1 is in Dual mode, press to switch the My Profile display.
- Reset My Profile in B mode when you exchange the FOMA card (UIM) while using 2in1. → p.287

Voice/Videophone Calls

■ Making a Voice/Videophone Call

Making a Voice/Videophone Call	50
Switching a Voice/Videophone Call During a Call (Caller).....	53
Making International Calls	WORLD CALL 54
Using Handsfree Call During a Call	Hands-free 56
Using the Redial/Dialed Calls/Received Calls Record.....	Redial/Dialed calls/Received calls 56
Using Chaku-moji	Chaku-moji 58
Sending Push Signals Quickly	Pause dial 60
Using the Prefix Function.....	60
Setting Sub-addresses When Making Calls	Sub-address setting 61
Setting the Alarm Used for Reconnection.....	Reconnect signal 61
Blocking Out Ambient Noise	Noise reduction 61
Making Handsfree Calls in the Car	In-car Hands-free 61

■ Receiving a Voice/Videophone Call

Receiving a Voice/Videophone Call	62
When the Other Party Switches a Voice/Videophone Call (Caller).....	63
Using the Dial Keys to Answer a Call.....	Answer setting 63
Ending/Holding Calls with the FOMA Terminal Folded	Setting when folded 64
Adjusting the Earpiece Volume.....	Volume 64
Adjusting the Ring Volume	Ring volume 64

■ Settings for when you cannot take calls

Holding the Ringing/Current Call	Answer hold/Holding 65
Using the Public Mode (Driving Mode)	Public mode (Driving mode) 65
Using the Public Mode (Power OFF)	Public mode (PowerOFF) 66
When You Cannot Answer a Received Call	Missed calls 67
Having the Caller Leave a Message	Record message 68
Having Callers Leave a Message During an Incoming Call	Quick message 69
Playing/Erasing Recorded Messages and Voice Memos	69

■ Setting the Videophone

Using Chara-den.....	70
Setting Functions for the Videophone.....	71
Using the Videophone Connecting to External Devices	73
Setting Remote Monitoring	Remote monitoring 73

Making a Voice/Videophone Call

1 Enter the phone number of the other party

The "Enter phone number" screen appears.
Always start by entering the area code, even for calls within the same area.
You can enter up to 80 digits for the phone number.
However, only the last 26 digits are displayed.



<When you enter a wrong number>

■ To insert a number

Press to move the cursor to the number to the left of the position where you want to insert the number, then enter the number.

■ To delete a number

Press to move the cursor to the number you want to delete, then press .
Hold down for 1 second or longer to delete all the numbers to the left of the cursor and the number in the cursor position.

■ To re-enter the number

Move the cursor to the beginning or end of the number and hold down for 1 second or longer to return to the standby screen.

<Videophone>

■ To make a videophone call with Chara-den

- ▶ (FUNC) ▶ "Select image" ▶ "Chara-den"
- ▶ Select Chara-den

2 (voice call) / (V. phone)

<Voice call>

The "In-call" screen appears.
" " flashes while dialing and lights up during the call.



■ If you hear the busy tone

The line is busy. Call again after a while.

■ If you hear a message saying that the other party cannot be reached

The other party's mobile phone is not turned on or is out of signal range. Call again after a while.

■ If you hear a message requesting your caller ID

Call again with caller ID notification enabled.
→ p.48

<Videophone>

The "Videophone in-call" screen appears.
" " flashes while dialing a videophone call and lights up during the call.



■ If a videophone call is not connected → p.52

■ To switch between camera image and substitute image

▶ (FUNC) ▶ "Substitute image" ⇄ "My side"

■ To send video from the rear camera

▶ (Change)

Each time you press (Change), the front camera/rear camera switches.

■ To switch the main screen

▶ (1 second or longer)
"Change main disp." → p.52

■ To enlarge the image to be sent

▶ Adjust the zoom using .
Zoom → p.137

■ To mute the voice to send

▶ (1 second or longer)

The " " icon is displayed.

Press (1 second or longer) again cancels muting.

- To switch a voice/videophone call during a call → p.53
- To put the current voice/videophone call on hold → p.65
- When the 2in1 is in Dual mode
The Outgoing number selection screen appears.
Select a phone number.

3 after talking

NOTE

<Videophone call>

- If you make a videophone call to an emergency number (110, 119 or 118) from the FOMA terminal, the call is automatically changed to a voice call.
- You cannot receive i-mode mail or a MessageR/F during a videophone call (you can receive SMS). Received mail is kept at the i-mode Center and can be retrieved using "Check new messages" after the videophone call.
- When you are using the videophone with the rear camera during charging, the "Camera Off" message may appear and the camera may turn off depending on the temperature of the FOMA terminal.
- Digital communication charges are still applied to the caller when the substitute image is displayed during a videophone call.

What is the Videophone

You can use the videophone call function between the terminals that support the DoCoMo videophone system.

- DoCoMo videophone conforms to "the 3G-324M"^{*2} standard set down in the international 3GPP^{*1} standards". Your FOMA terminal cannot connect to a videophone terminal that uses a different system from DoCoMo videophones.

^{*1}: 3GPP (3rd Generation Partnership Project)

A regional standardization body established to develop commonly applied technical specifications for 3rd-generation mobile communications systems (IMT-2000).

^{*2}: 3G-324M

An international standard for 3rd-generation mobile videophones.

■ How to view the videophone screen



- ① Main screen (Camera image of the other party is displayed at the time of purchase)
- ② Sub-screen (Your own camera image is displayed at the time of purchase)
- ③ Call duration
- ④ Settings

  : Sending or receiving voice/
Transmission error

  : Sending or receiving video/
Transmission error

  : Sending camera image/Sending
substitute image

  : Hands-free ON/OFF

 : Muting microphone (in silence)

 : Visual check in progress

   : Photo mode (Portrait/Scenery/
Close-up)

   : Key operation mode (DTMF
mode^{*1}/Whole action mode^{*2}/
Parts action mode^{*2})

 : Sending Chara-den

^{*1}: "Send DTMF tone/DTMF tone OFF" → p.52

^{*2}: "Using Chara-den" → p.70



Enter phone number screen (p.50)

Notify Caller ID → p.48

Prefix numbers → p.61

Chaku-moji → p.58

Int'l call → p.55

Multi Number → p.315

Add to phonebook → p.76

Compose message → p.166

Select image Selects the image used during a videophone call from "Me/Chara-den".
Select "Release settings" to cancel the setting.

* : Not available when 2in1 is in B mode.



Videophone in-call screen (p.50)

Substitute image ⇄ **My side** Switches between the camera image and the substitute image.

Rear camera ⇄ **Front camera** Switches between the front and rear cameras.
This setting is only retained during the call.

Change main disp. Changes the main display.
The screen changes in the order of "Displaying the image from the other party's camera on your main screen." → "Displaying the image from your own camera on your main screen." → "Displaying only the image from the other party's camera." → "Displaying only the image from your own camera."

Visual check ⇄ **Visual check off** Checks your appearance with the front camera during a videophone call. Or ends checking. "[]" appears and the substitute image is sent to the other party during the Visual check.

V.phone settings Sets the screen for videophone call.

Visual prefer. Sets the image sent to and received from the other party from "Normal/Preferred img qual/Preferred motion spd".
This setting is only retained during the call.

Brightness Five brightness levels (-2 to 0 to +2) are available.

White balance Sets image color tones. → p.131
This setting is also applied to the equivalent camera functions.

Color mode set Selects the image effect from "Normal/Sepia/Monochrome".
This setting is only retained during the call.

Photo mode Sets modes suited to the scene being shot. → p.131

This setting cannot be set for the front camera.

Chara-den set. You can set the followings when Chara-den is used. This setting cannot be set for the camera images.

Switch Chara-den Selects the character to be displayed.

Action List Checks the available actions and the corresponding keys. You can also view the action list by pressing [*].

Change Action Changes the Action mode.

Switch image Displays the image selected in "Substitute image" (p.71) on the other party's display.

Display light Sets lighting of backlight.

All time ON (default) Turns the backlight on all the time.

10 seconds ON Turns the backlight on for 10 seconds only.

FrontCamera Rev. Sets whether to display your camera image as a mirror image (ON) or normal image (OFF) on the FOMA terminal during a call.

Own number Displays your phone number during a videophone call.

Send DTMF tone ⇄ **DTMF tone OFF** Sets/cancels push signal transmission mode during Chara-den.
Except for Chara-den, videophone calls are always in push signal transmission mode.

Change to voice → p.53

● If a videophone call is not connected

When a videophone call is not connected, the cause of the failure appears.

- The cause may not appear depending on the situation.
- Depending on the type of other party's phone or the possible lack of a network service subscription, the reason may not accurately reflect the other party's actual status.

Display	Cause
Check number then redial	Phone number is not available
Busy	The line is busy
Busy with packet transmission	The other party is using packet communication
Out of service area/power off	The other party is out of service area or the phone is turned off

Display	Cause
Set caller ID to ON	You connected without notifying your caller ID (when dialing into visualnet, etc.)
Your call is being forwarded	The call is being forwarded (A Videophone call is made when the forwarding number is for a 3G-324M-compatible videophone.)
Redial using voice call	The phone for the forwarding number is not compatible with videophone calls.
Please activate caller ID before dialing again	The other party sets the Caller ID request service.
At the user's request, your call cannot be connected	The other party sets the Nuisance call blocking service.
Upper limit has been exceeded Connection failed	The upper limit set for a Limit billing plan (Type Limit and Family Wide Limit) is exceeded.
Connection failed	Set the caller ID notification to "ON" and retry • This message may also appear in other situations.
Please make your call from the i-mode web page	You attempted to make a videophone call to watch V-live without browsing the i-mode official site.

- If the videophone call is not connected, your call is automatically switched to a voice call when you set "Auto redial as voice" to "ON". However, the call may not be handled in this way if you call an ISDN synchronous 64K, ISDN videophone which does not support the 3G-324M standard (as of January, 2008) or if you dial a wrong number. Note that call charge may be applied in some cases.


Switching a Voice/Videophone Call During a Call (Caller)

- You can use this function with the terminals compatible with voice call/videophone call switch.
- You can switch the voice call only when you are the caller.
- To switch the call, the receiver needs to set "Ntfy switch-mode" to notify the switch beforehand.
→ p.72

<Example: To switch a voice call to a videophone call>

1 In-call screen (p.50) ▶ (V. phone) ▶ "YES"

While switching, the screen which indicates that the calls are being switched appears and the voice guidance is played.

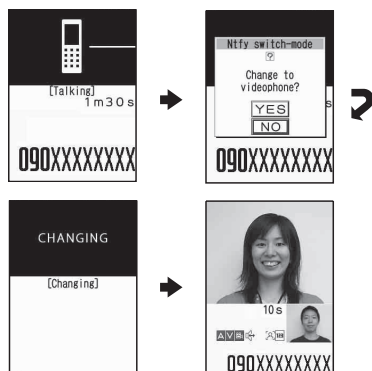

The digital communication fee is charged after the appearance of this screen.

■ To switch a videophone call to a voice call

- ▶ Videophone in-call screen (p.50) ▶ (FUNC)
- ▶ "Change to voice"

NOTE

- It takes about 5 seconds to switch the calls. Note that the signal quality may affect how long it takes.
- You cannot switch the calls during calling in the following cases:
 - When the other party is holding the call
 - When the other party activates Record message
- The displayed call duration is reset to 0 second each time the calls are switched. However, the total time for voice and videophone call is displayed after ending a call.

NOTE

- Depending on the other party's communication conditions or the signal quality, you may not be able to switch the calls and the call may be canceled.
- When the call is switched, the first dialed or received call is registered to the Redial/Dialed calls records or Received calls records.

<When switching from voice call to videophone call>

- If the caller is using i-mode, the i-mode communication is canceled to switch to videophone.
- If the other party is using packet communication (including i-mode), you receive the message "No Switch" meaning you cannot switch the calls.
- You cannot switch the calls when "Call Waiting" is activated.

Making International Calls

<WORLD CALL>

WORLD CALL is an international dialing service that can be used from DoCoMo mobile phones.

FOMA service subscribers are also subscribed to "WORLD CALL" when they subscribe to the FOMA service. (This excludes subscribers who declared that they did not require the service.)

- WORLD CALL can be used to call around 240 countries and regions worldwide.
- The "WORLD CALL" is charged with your monthly call charges.
- In addition to dialing a phone number, you can make an international call by adding "+" or selecting "Int'l call" or "Prefix numbers" from the function menu in the enter phone number screen, Redial/Dialed calls screen, Received calls screen or Phonebook detail screen.
- This service is not available in some payment plans.

Changes of the procedure for international dialing

Because communication from mobile devices such as mobile phones is not covered by the "MYLINE" service, this service cannot be used to access WORLD CALL. Consequently, with the introduction of the "MYLINE" service, the procedure used to make international calls from a mobile phone has changed. Note that the conventional dialing procedure (the procedure described below with "010" removed) can no longer be used.

For additional information regarding WORLD CALL, refer to the contact information provided on the back of the manual.

"International videophone calls" can be made to users of some specific overseas 3G mobile terminals by pressing  (V. phone) to make the call after using the dialing procedure below.

- See the DoCoMo website for information on accessible countries and operators.
- Depending on the other party's terminal, the image of the other party displayed on your FOMA terminal may be distorted or the connection may fail when making a international videophone.

Using dial keys to make international calls

- 1 Dial the number in the following order: 009130 → 010 → Country code → Area code (Long distance code) → The other party's phone number**

If the area code (long distance code) begins with "0", omit the first "0". However, to call to ordinary phones in Italy, "0" is required.



- 2** The international call is made.

Quick and simple procedures for making an international call

- You can store the country codes and IDD prefix codes in "Int'l dial assistance".

Using "+" to make an international call

By using the "+" that is automatically replaced with the "IDD Prefix Code" set in the "Auto int'l call set.", you can make international calls without dialing the IDD prefix code (e.g. 009130-010).

- As "Auto int'l call set." in "Int'l dial assistance" is set to "ON" (automatically added) at the time of purchase, the FOMA terminal automatically dials the IDD prefix code.

- 1 On the standby screen, dial the following; + () (1 second or longer) → Country code → Area code (Long distance code) → The other party's phone number**

If the area code (long distance code) begins with "0", omit the first "0". However, to call to ordinary phones in Italy, "0" is required.

2 "Dial"

The international call is made.

- To make a call without converting "+" into the IDD prefix code

▶ "Original phone No."

* Not available in this terminal.

- To cancel the call

▶ "Cancel"

● Making an international call from the function menu

You can make an international call by adding a country code and IDD prefix code from the function menu.

- You can use the international dial function from the "Enter phone number" screen and the detail screens of "Phonebook/Received calls/Dialed calls/Redial" screens.

<Example: To use the international dial function from the enter phone number screen>

1 Enter the phone number of the other party

2 (FUNC) ▶ "Int'l call" ▶ Select the country code ▶ Select the IDD prefix code

The selected country code and IDD prefix code are added. If the area code (long distance code) begins with "0", the first "0" is automatically deleted (except when "Italy" is selected for the country code).

3

The international call is made.

Making the setting for the international call

<Int'l dial assistance>

You can set the automatic conversion of "+", and also edit and store the country codes and IDD prefix code for international calls.

1 "Settings" ▶ "Dialing" ▶ "Int'l dial assistance" ▶ Select any item:

Auto int'l call set......You can set the automatic conversion of "+" when you make an international call.

▶ "ON" ▶ Select a country code ▶ Select an IDD prefix code

■ When you do not convert automatically

▶ "OFF"

Country Code setting.....

Stores up to 22 country names and country codes used when you make an international call.

See the DoCoMo website for information on country codes.

▶ Highlight an item ▶  (Edit)

▶ Enter the country name ▶

Enter the country code

You can enter up to 8 double-byte or 16 single-byte characters for the country name and 5 digits for the country code.



Country Code setting
Function menu ▶ p.55

IDD Prefix setting.....

 
Stores the IDD prefix name and IDD prefix code used when you make an international call. Up to 3 entries can be stored.

▶ Highlight an item to be stored or changed ▶  (Edit)

▶ Enter the IDD prefix name ▶

Enter the IDD prefix code

You can enter up to 8 double-byte or 16 single-byte characters for the IDD prefix name and 10 digits for the IDD prefix code.



IDD Prefix setting
Function menu ▶ p.61

Country Code setting screen (p.55)

Edit.....Edits the country code.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

Using Handsfree Call During a Call

<Hands-free>

You can hear the other party's voice from the speaker while talking.

1 In-call screen (p.50) ()

"" appears and you can hear other party's voice through a speaker during a handsfree call. While your terminal is ringing, you can switch to handsfree operation by pressing  () / ).



Ex. Voice call



EX. Videophone call

■ To cancel the handsfree operation

▶ Press  () during a handsfree call

"" disappears when you make a voice call.

"" is changed to "" in case of videophone.

● Notes on using the handsfree operation

It is recommended to keep a distance of about 30 cm from the FOMA terminal during a handsfree call. If the distance is longer or shorter than 30 cm, the other party may find it difficult to hear you or your voice may sound differently.

NOTE

- Move to an area where your call will not disturb other people before switching to a handsfree call.
- When a call is finished, the handsfree setting is canceled.

Using the Redial/Dialed Calls/Received Calls Record

<Redial/Dialed calls/Received calls>


Information on dialed or received calls, including the caller's phone number and the date and time are stored in the Redial/Dialed calls/Received calls record. You can make a call to the other party easily by using these records.

- When you make calls to the same phone number repeatedly, the latest entry is stored as the Redial record and separate entries are stored for the Dialed calls record.
- The Redial record can hold up to 30 phone numbers for voice/videophone calls.
- The Dialed calls/Received calls record stores up to 30 voice/videophone call entries and 30 packet communication or 64K data communication entries.
- If the maximum number of logs is exceeded, logs are overwritten starting with the oldest one.

<Example: To make a call from the Redial/Received calls list screen>

1 On the standby screen (Redial)/ (Received calls)

The "Redial screen (list)"/
"Received calls screen (list)" appears.

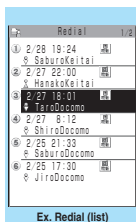

Ex. Redial (list)

Function menu▶p.57

■ To check the Dialed calls


▶  "Own data" ▶ "Dialed calls"

The "Dialed calls screen (list)" appears.

2 Highlight the Redial/Received calls record entry

■ To make a call after checking the details of the Redial/Received calls record

▶ Select the Redial/Received calls record entry
The "Redial screen (detail)" or "Received calls screen (detail)" appears.

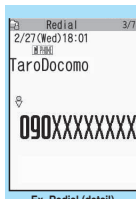

Ex. Redial (detail)

Function menu▶p.57

3 (voice call)/ (V. phone)

● Checking the number of missed calls

■ To confirm only the missed calls from the Received calls record

▶ ▶ Own data ▶ “Received calls”

Total number of received calls, the number of missed calls and the number of unconfirmed missed calls appear.

When you select “Missed calls”, only the missed calls appears.

■ Redial/Dialed calls/Received calls record icons

Icon ^{*1}	Description
/ /	Incoming and outgoing/missed/unconfirmed missed voice calls
/ /	Incoming and outgoing/missed/unconfirmed missed international voice calls
/ /	Incoming and outgoing/missed/unconfirmed missed videophone calls
/ /	Incoming and outgoing/missed/unconfirmed missed international videophone calls
^{*2}	Incoming and outgoing calls to B mode for 2in1 setting
/	Recorded voice record message/videophone message
	Received calls with Chaku-moji
/ /	Outgoing/Incoming/missed/unconfirmed missed packet communication
/ /	Incoming and outgoing/missed/unconfirmed missed 64K data communication
	Incoming remote monitoring calls
	Incoming packet communication or 64K data communication that is received without external device connected

^{*1}: Some icons look different between the detail screen and the list screen.

^{*2}: Displayed only when the 2in1 is in Dual mode.

NOTE

- If you use 2in1, up to 30 records are stored for each phone number. Also, when set to Dual mode, up to 30 Redial/Dialed calls/Received calls records for both phone numbers and total of the 60 records are displayed.

NOTE

- If the same phone number is registered in the multiple phonebook entries with different names, the name retrieved by the phonebook search in the order of reading is displayed in the Redial/Dialed calls/Received calls record. → p.79

<Redial/Dialed calls>

- Setting “Restrict dialing” deletes all the Redial/Dialed calls records.
- If you make a call by selecting Multi number from the function menu, the registered name and number of the additional number are displayed under the phone number in the Redial screen (detail)/Dialed calls record screen (detail). If you make a call without using the function menu, nothing is displayed even when “Set Multi Number” is set to additional number.

<Received calls>

- When “Missed calls display” in the “Ring time(sec.)” is set to “Not display” and you receive a call of which ring tone sounded for shorter time than the time set in the “Set mute seconds”, the call is not displayed on the Received calls record.
- If the caller is using “Dial-in”, a number different from the “Dial-in” number may be displayed.
- When you have subscribed to Multi number and make a call from the Received calls record screen, the phone call is made from the number which received the call regardless of the “Set Multi Number” setting.
- When you receive a call for additional number of Multi number, the registered name of the additional number are displayed under the phone number in the Received calls record screen (detail).

Redial/Dialed calls/Received calls screen (p.56)

Notify Caller ID^{*1} → p.48

Prefix numbers^{*1} → p.61

Chaku-moji^{*1} → p.58

Int'l call^{*1} → p.55

2in1/Multi Num.^{*1}.....When 2in1 is set to ON and Dual mode, selects from “Number A/Number B/Cancel number” (p.319) (not available when A mode or B mode is set).

Selects from “Basic number/Additional number 1/Additional number 2/Cancel number” (p.315) at the Multi Number when 2in1 set to OFF.

Ring time^{*2,3}.....Displays the missed call record entries with the ringing times.

Add to phonebook → p.78

Look-up phonebook.....“Accessing the phonebook from the Redial or Dialed Calls record” → p.80

Add shortcut → p.100

Compose message*4 → p.166

Compose SMS*4 → p.192

Sent address*5*6.....Displays the sent address list.

Received address*2.....Displays the received address list.

Select image.....Selects the image used during a videophone call from "My side/Chara-den".
Select "Release settings" to cancel the setting.

Big font⇔**Standard font***3.....Switches the character size of the displayed name. → p.100

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" → p.39

*1: Available only for the detail screen.

*2: Available only for the Received calls screen.

*3: Available only for the list screen.

*4: Available only when 2in1 is in A mode or Dual mode, and selecting the record screen for the A mode.

*5: Available only for the Redial/Dialed calls screen.

*6: Not available when 2in1 is in B mode.

NOTE

- Selecting "Delete all" from the Redial/Dialed calls record deletes all the Redial and Dialed calls records. Note that selecting "Delete this" or "Delete selected" for the Redial record does not delete the entries of Dialed calls record, and selecting "Delete this" or "Delete selected" for the Dialed calls record does not delete the entries of the Redial record.

<Compose message>

- When the phonebook stores the phone number and the mail address, an address listed first is used as destination to create a message.

Using Chaku-moji

<Chaku-moji>

When making a voice call or videophone call, you can send a message (Chaku-moji) to the other party to show the summary of the call, etc. beforehand.

- 5 Chaku-moji messages are stored at the time of purchase. You can change the pre-installed Chaku-moji messages.
- You can include pictographs or face marks in Chaku-moji, and you can send a message of up to 10 characters including pictograph/symbol/double-byte character/single-byte character.
- For details on Chaku-moji and the compatible models, refer to the DoCoMo website or "Mobile Phone User's Guide [Network services]".

Making a call with a Chaku-moji message

You can add Chaku-moji when making a voice or videophone call from the "Enter phone number" screen and the detail screen of the "Phonebook" or "Redial/Dialed calls/Received calls".

<Example: To make a call with Chaku-moji from the enter phone number screen>

1 Enter phone number screen (p.50)

▶ (FUNC) ▶ "Chaku-moji" ▶ Select any item:

Create message.....Enters Chaku-moji. You can enter up to 10 characters.

Select message.....Selects from the stored Chaku-moji.


You can edit Chaku-moji by pressing (Edit) on the message selection screen.

Sent messages.....Selects from the previously sent Chaku-moji. You can edit Chaku-moji by pressing (Edit) on the sent message screen.

■ To delete the entered Chaku-moji (to make a call without Chaku-moji)

▶ (FUNC) ▶ "Chaku-moji" ▶ "Create message"
▶ Clear all the entered Chaku-moji

2 (voice call) / (V. phone)

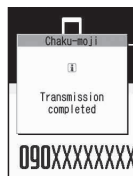

When the other party's terminal receives Chaku-moji, the result "Transmission completed" appears.

NOTE


- Sending Chaku-moji is charged. Receiving Chaku-moji is not charged.
- You can store up to 30 Chaku-moji in the sent messages record (if you use 2in1, up to 30 sent messages records when set to each mode, and up to 30 sent messages records for each and total of the 60 records are stored when set to Dual mode). When you send same Chaku-moji repeatedly, only the latest one is recorded. When the entries exceed the maximum number, entries are overwritten from the oldest entry.

NOTE

- If the receiver's terminal is under conditions such as followings, Chaku-moji cannot be sent. In this case, no sending charges apply.
 - The terminal is not compatible with Chaku-moji ("Transmission failed" appears)
 - Chaku-moji does not appear on the screen of the receiver terminal because of the "MSG display settings" on the receiver terminal ("Transmission failed" appears)
 - When Public mode (Driving mode) is set
 - The ringing time for recording message is set to 0 second.
 - "FOMA" or the FOMA terminal is turned off.
- Depending on the signal status, sending result does not appear on the sender terminal even when the receiver terminal receives Chaku-moji. In this case, sending charges apply.
- You cannot send or receive Chaku-moji when using the FOMA terminal overseas.

When you receive a voice or videophone call with Chaku-moji

The Chaku-moji appears on the ringing screen. The Chaku-moji disappears when you answer the call.

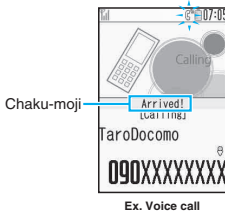

Ex. Voice call

NOTE

- Even when you receive a call whose ring tone sounded for shorter time than the time set in the "Set mute seconds" of "Ring time (sec.)", Chaku-moji is displayed and recorded in the Received calls record.
- Depending on the status of the sender or receiver, Chaku-moji may not be displayed even if you receive a call with Chaku-moji.
- When the Original lock is set to "Chaku-moji", Chaku-moji is not displayed even if you receive a call with Chaku-moji. In this case, Chaku-moji is stored to the Received calls record after releasing the lock.

Displaying Chaku-moji from the Received calls record

When you receive Chaku-moji, the "✎" icon appears on the Received calls record, and you can check the Chaku-moji message on the "Received calls screen (detail)".

NOTE


- Even when you make a call using the Received calls record, the Chaku-moji in the record is not sent.

Editing and setting Chaku-moji

1 MENU ▶ "Service" ▶ "Chaku-moji" ▶ Select any item:

Create message.....Stores or edits frequently used Chaku-moji. You can store up to 30 Chaku-moji (including 5 pre-installed).

Highlight an item to be stored or edited ▶ [Edit] (Edit) ▶ **Enter the Chaku-moji**

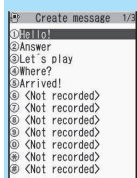

Function menu ▶ p.59

MSG display settings.....Sets the Chaku-moji display setting when you receive a call with Chaku-moji.

Display all messages.....Displays all Chaku-moji messages.

Only number in PH-book.....Displays only the Chaku-moji messages from senders stored in the phonebook.

Calls with Caller ID.....Displays only the Chaku-moji messages from senders providing the caller ID.

Hide all messages.....Hides all Chaku-moji messages.

FUNC

Create message list screen (p.59)

Edit.....Edits Chaku-moji.

Delete.....Selects the deleting method from "Delete this/ Delete selected/ Delete all".

"About multiple-choice" → p.39

NOTE

- You cannot delete the pre-installed Chaku-moji. Even when you change a pre-installed Chaku-moji and delete the Chaku-moji, it is restored to the default.

Sending Push Signals Quickly

<Pause dial>

By sending push signals from the FOMA terminal, you can use services such as ticket ordering and bank balance requests.

Storing dialing data as pause dial record entries

You can store the dialing data used as push signals to Pause dial beforehand. Inserting p (pause) into the dialing data allows you to send data with a separation where a pause lies.


- You can store 1 dialing data, consisting of up to 128 characters.
- You can enter numbers from 0 to 9, the # and * symbols, and p (pause) for dialing data.
- You cannot enter p (pause) in succession or at the beginning of the dialing data.

1 [MENU] ▶ “Settings” ▶ “Dialing” ▶ “Pause dial”

The “Pause dial” screen appears.

■ If there is dialing data already stored

The stored dialing data appears.

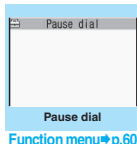

Function menu ▶ p.60

2 [Edit] ▶ Enter the dialing data

Press [0] to [9], [#] and [*] to enter the dialing data.

■ To enter p (pause)

▶ [*] (1 second or longer)

[FUNC] Pause dial screen (p.60)

Edit.....Edits the dialing data.

Send pause dial.....Enters the phone number of the other party and sends the dialing data. Each time you press [END], the dialing data up to p (pause) is transmitted.

Delete.....Deletes the stored dialing data.

Transmitting the dialing data as a pause dial

1 [MENU] ▶ “Settings” ▶ “Dialing” ▶ “Pause dial” ▶ [Send]

2 Dial the phone number of the destination [END]

The FOMA terminal calls the entered phone number and displays the dialing data up to the first p (pause) while the dialed phone is ringing. p (pause) is not displayed.

3 [END]

Each time you press [END], the dialing data up to p (pause) is transmitted. Once the FOMA terminal has finished sending the last number, the in-call screen reappears.

■ To transmit all the dialing data at once

▶ [END] (1 second or longer) ▶ “Send at one time”

It may not be possible to send all the data at once to some recipients.

NOTE

- Some phones may be unable to receive push signals.

Using the Prefix Function

You can store the prefix numbers such as IDD prefix code (WORLD CALL = 009130-010) and 186/184 for notifying/withholding your caller ID beforehand and add these prefix numbers when you make calls.

Storing the prefix numbers

<Prefix setting>

- You can store up to 7 prefix numbers.
- You can enter numbers from 0 to 9 and the #, * and + symbols.


1 [MENU] ▶ “Settings” ▶ “Dialing” ▶ “Prefix setting”

The “Prefix setting” screen appears.

2 Highlight the item to store or change [Edit]

3 Enter the name to be stored

You can enter up to 8 double-byte or 16 single-byte characters.

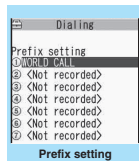

Function menu ▶ p.61

4 Enter the numbers (prefix)

You can enter up to 10 digits.

FUNC

Prefix setting screen (p.60)/IDD Prefix setting screen (p.55)

Edit.....Edits the prefix number or IDD prefix code.

Delete this*1.....Deletes one prefix number.

Delete*2.....Deletes one IDD prefix code.

Delete all.....Deletes all prefix numbers or IDD prefix code.

*1: Available only with the Prefix setting screen.

*2: Available only with the IDD prefix setting screen.

Making a call with the Prefix numbers

<Prefix numbers>

- You can add the prefix numbers from the "Enter phone number" screen and the detail screens of "Phonebook/Received calls/Dialed calls/Redial" screens.

<Example: To make a voice call by adding prefix numbers from the enter phone number screen>

1 Enter the phone number of the other party

2 (FUNC) ▶ "Prefix numbers" ▶ Select the stored name

Setting Sub-addresses When Making Calls

<Sub-address setting>

You can set whether to specify "✱" in the phone number as a separator so that the numbers following "✱" are recognized as a sub-address (ON/OFF).

- Sub-addresses are used in ISDN to identify calls made from specific communications devices and to select content in "V-live".

1 ▶ "Settings" ▶ "Dialing" ▶ "Sub-address setting" ▶ "ON" or "OFF"

NOTE

- In the following cases, "✱" does not function as a sub-address separator. The entered number including "✱" is recognized as an ordinary phone number:
 - When the "✱" is entered at the beginning of a phone number
 - When "✱" immediately follows "186"/"184" at the beginning of a phone number
 - When "✱" immediately follows a number entered using "Prefix numbers"
 - When the phone number contains "✱590#"/"✱591#"/"✱592#"

Setting the Alarm Used for Reconnection

<Reconnect signal>

When the signal quality deteriorates during a voice/video phone call and the call drops out, the FOMA terminal will automatically reconnect the call if the signal quality quickly improves. Set the type of alarm when a call is reconnected for this function.

- The interval for reconnection varies depending on communication conditions or the signal quality. It takes about 10 seconds.

1 ▶ "Settings" ▶ "Talk" ▶ "Reconnect signal" ▶ Select an alarm tone

Select from "No tone/High tone/Low tone".

NOTE

- Call charges apply in the interval (up to about 10 seconds) for reconnection.

Blocking Out Ambient Noise

<Noise reduction>

This function suppresses ambient noise and makes it easier for the other party in a voice or videophone call to hear you.

1 ▶ "Settings" ▶ "Talk" ▶ "Noise reduction" ▶ "ON" or "OFF"

Making Handsfree Calls in the Car

<In-car Hands-free>

You can make or receive voice calls with handsfree compatible devices by connecting the FOMA terminal to handsfree compatible devices such as the In-Car Hands-Free Kit 01 (optional) or a car navigation system.

For information on how to use the handsfree device, refer to the manual provided with the device. The FOMA In-Car Hands-Free Cable 01 (optional) is required to use the In-Car Hands-Free Kit 01 (optional).

NOTE

- To operate from the handsfree device, set the USB mode to "Communication mode".
- The display and ring tones used for incoming calls and mail are as specified in the FOMA terminal settings.

NOTE

- When the handsfree device is set to emit the sound from the handsfree device, the ring tone still sound through the handsfree device even when the FOMA terminal is set to Manner mode or the ring volume is set to "Silent".
- When the Public mode (Driving mode) is set, operation for incoming calls and messages is as specified in the "Public mode (Driving mode)" settings.
- When the Record message is set, operation for incoming calls is as specified in the "Record message" settings.
- When the handsfree device is set to emit the sound from the FOMA terminal, operation when the FOMA terminal is folded during a call is as specified in "Setting when folded". When the handsfree device is set to emit sound from the handsfree device, folding the FOMA terminal does not affect the call status regardless of the "Setting when folded" setting.

Receiving a Voice/Videophone Call

1 Voice/Videophone call is received

The ring tone sounds and the incoming call lamp flashes. The "Ringing" screen/"Videophone ringing" screen appears.

- **When you receive a call with Chaku-moji**
The Chaku-moji appears on the ringing screen/videophone ringing screen. → p.59



Function menu→p.62



Function menu→p.62

- **To put a voice/videophone call on hold while the FOMA terminal is ringing** → p.65

2

The "In-call" screen/"Videophone in-call" screen appears.

- **To answer a videophone call with the substitute image**

▶  (Subst.)

■ Operations during a videophone call

You can perform various operations such as changing the camera image to the substitute image, changing the front camera to rear camera, muting the sound. → p.50

- **When the other party switches a voice/videophone call during a call** → p.63

- **To put the current voice/videophone call on hold** → p.65

3 To end the call, press

Display while receiving a call

- **When the other party's phone number is notified**

The other party's phone number appears on the screen. When the caller is stored in the phonebook, the name stored in the phonebook appears (only the name is displayed while Keypad lock is set). → p.76

- If the same phone number is registered in the multiple phonebook entries with different names, the first name retrieved by the phonebook search in the order of reading appears. → p.79
- If the caller is stored as secret data, the name or other information does not appear and only the phone number appears.
- When you receive a call for additional number of Multi number, the registered name of the additional number is displayed on the ringing screen.

- **When the other party's phone number is not notified**

The reason of not notifying appears.

Ringing screen/Videophone ringing screen (p.62)

Call Rejection..... Terminates the receiving call without answering.

Call Forwarding..... Forwards the call.
The call is forwarded regardless of the "Call Forwarding" setting "Activate/Deactivate".

Voice Mail..... Connects the call to the voice mail service center.

The call is connected to the voice mail service center regardless of the "Voice Mail" setting "Activate/Deactivate".

Change Display..... Switches the display from additional number 1 or 2 to the number from which the call is forwarded. This can be selected when receiving multi number call (for additional number 1 or 2) and the call is forwarded at the same time.

NOTE

- You can receive a call using a flat-plug earphone/microphone with switch (optional). → p.294
- If you have subscribed to the Call waiting, Voice mail or Call forwarding service, activate "Set in-call arrival" and set "Incoming Call Mng" to "Answer", you will hear a short double-beep ("bibip") when you receive a call when you are already on a call.
 - If you subscribe to the Voice mail or Call forwarding service, you can answer the call by ending the current call.
 - If you subscribe to the Call waiting service, you can answer the voice call by putting the current call on hold and you can answer the videophone call by ending the current call.

<Voice call>

- You can set the incoming call management from the caller who is not stored in the phonebook. → p.122
- You can set the incoming call restriction for each phone number stored in the phonebook. → p.120

<Videophone>

- You can also answer the call by pressing  (V. phone).
- It may take a few seconds to switch from a camera image to a substitute image (Chara-den) depending on the Chara-den.

When the Other Party Switches a Voice/Videophone Call (Caller)

When you receive a voice/videophone call, the other party can switch the call between voice call and videophone call.

- The receiver cannot switch a voice call to a videophone call.
- To switch the call, the receiver needs to set "Ntfy switch-mode" to notify the switch beforehand. → p.72
- You can use this function with the terminals compatible with voice call/videophone call switch.

<Example: When the other party switched a voice call to a videophone call>


1 In-call screen (p.50) ▶ The other party switches to a videophone call ▶ "YES"

While switching, the screen which indicates that the calls are being switched appears and the voice guidance is played.

When the voice call is switched to the videophone call, the camera image is sent to the other party.

■ To send substitute image to the caller

▶ "NO"

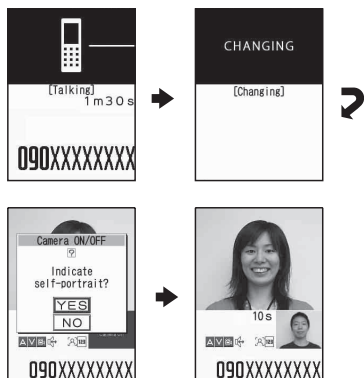

■ When the other party switched a videophone call to a voice call

▶ Videophone in-call screen (p.50) ▶ The other party switches to a voice call
The videophone call is switched to the voice call.

Using the Dial Keys to Answer a Call

<Answer setting>

You can use this setting to turn off the ring tone or answer the phone quickly when you receive a call.

1 "Settings" ▶ "Incoming call" ▶ "Answer setting" ▶ Select any item:

Any key answer.....Valid for voice calls. You can answer the call by pressing any of the following keys.

 (Answer),  to , , , , , 

* For videophone calls, you can answer the call only by ordinary key operations ( (Subst.) or  (V. phone)).

Quick silent.....Pressing any of the following keys or opening the FOMA terminal stops the incoming call reaction while the caller continues to hear the ring tone.

 to , , , ,  or  (for voice calls only)

To answer the call, press  (Answer/Subst.),  (V. phone) (for videophone calls only).

OFF.....You can answer the call only with the ordinary key operations.

 (Answer/Subst.) or  (V. phone) (for videophone calls only)

NOTE

- Even when "Quick silent" is set, the "Any key answer" function is used in Manner mode.

Ending/Holding Calls with the FOMA Terminal Folded

<Setting when folded>

You can set how your FOMA terminal operates when it is folded during a voice or videophone call.

1

“Settings” ▶ “Talk” ▶ “Setting when folded” ▶ Select any item:

No tone.....Mutes the sound. For videophone calls, the "Substitute image" is sent to the other party. The other party does not hear the hold tone.

Tone on.....Puts a call on hold (holding). When the FOMA terminal is folded, the other party hears the hold tone. For videophone calls, the image for holding is sent to the other party.

Speaker ON.....The hold tone is sent to the other party and also plays through the speaker.

Speaker OFF.....Only the other party hears the hold tone.

End the call.....Ends the call. It is the same operation as pressing .

NOTE

- When Manner mode is set, no sound is played through the speaker even if "Speaker ON" is set.
- When a flat-plug earphone/microphone with switch (optional) is connected, this function is disabled.
- Even if the "Tone on" setting is selected, folding the FOMA terminal activates the "No tone" setting if "Call Waiting" is switched on.

Adjusting the Earpiece Volume

<Volume>

1

On the standby screen ▶  (1 second or longer) ▶ Adjust the volume with 



Pressing  (1 second or longer) displays the earpiece volume screen. If no operation is conducted for 2 seconds or longer when the earpiece volume screen is displayed, the earpiece volume screen is expired.

You can adjust the volume in 6 steps from "Level 1" (quietest) to "Level 6" (loudest).

■ To adjust the earpiece volume during a call

During a voice call:  (1 second or longer)

During a videophone call: 

- You can also adjust with  .

NOTE

- If you adjust the volume during a call, the adjusted setting is retained after you end the call.

Adjusting the Ring Volume

<Ring volume>

You can adjust the volume of the ring tone for a incoming call, mail, MessageR/F in 6 steps for each type of call. You can also set to silent or to gradually get louder.

1

“Settings” ▶ “Incoming call” ▶ “Ring volume” ▶ Select an item to adjust its volume

Select "Phone" to adjust the ring tone volume for voice calls and 64K data communication.

Select "Mail" to adjust the ring tone volume for i-mode mail, Area Mail, SMS or packet communication.

2

Use  to adjust the ring volume ▶  (Set)

■ To raise the volume gradually

▶ Press  in "Level 6"

When set to "Step", the ring volume becomes louder and louder in every 3 seconds.

■ To set to silent

▶ Press in "Level 1"

An icon appears in the standby screen to confirm that a "Silent" ring tone is set.

: "Phone" or "Videophone" is set to "Silent"

: "Silent" is set for "Mail", "MessageR" and/or "MessageF".

: Both and are set.

NOTE


- The ring volume setting specified for "Phone" in this function is also applied to the "Select ring tone" setting for a voice call, the alarm tones for "Schedule" and "To Do list".

Holding the Ringing/Current Call

<Answer hold/Holding>

<Example: To put the ringing call on hold>

1 While ringing

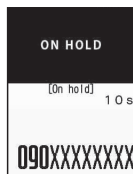

The FOMA terminal makes three rapid beeps and puts the call on hold.

The caller hears a message saying that you cannot answer at the moment and the call is held without hanging up.

■ To put the current call on hold

▶ During a call ▶ [CLR]

■ To end the call during answer hold/holding

▶

2 Press to resume the call

You can also use [CLR] to cancel holding when you put the current call on hold.

NOTE

- Call charges apply while putting the ringing call or current call on hold.

Setting the hold tone

<Set hold tone>

You can set the guidance messages to the other party during the answer hold.

- You cannot change the hold tone that is played during a call.

1 "Settings" ▶ "Talk" ▶ "Set hold tone" ▶ "On hold tone" ▶ Select the hold tone

Select from "Tone 1/Tone 2/Voice announce 1"/Voice announce 2".

* : Not available when no Voice announce is recorded.

Using the Public Mode (Driving Mode)

<Public mode (Driving mode)>

The Public mode is an automatic answering service provided to keep manner in public circumstances. During Public mode, a caller hears a message that you cannot answer the call because you are driving or you are in the place you have to refrain from calling (on the train or bus, in the theater, etc.), then the call ends.

- Public mode can only be set/released from the standby screen. (It can also be set/released when the icon is displayed.)
- You can still make calls when the FOMA terminal is in Public mode.
- This function is not available during data communication.
- When you receive a call of "User unset" while Caller ID Request is set to "Activate", caller ID request message is announced. (The Public mode message is not announced.)

1 On the standby screen ▶ [#] (1 second or longer)



Public mode is set and appears.

When you receive a call, the caller hears the message "I can't answer the call because I am driving or I have to refrain from calling now. Please call back later."

■ To release the Public mode (Driving mode)

▶ On the standby screen ▶ [#] (1 second or longer)

Public mode is canceled and disappears.

NOTE

- The Public mode setting takes priority when "Record message" is "ON".
- The Public mode setting takes priority when Manner mode is set at the same time.
- If you make a voice call to an emergency number (110, 119 or 118) while Public mode is set, Public mode is released.
- The following tones do not sound in Public mode:
 - Ring tone for voice/videophone call
 - Ring tone for mail or message
 - Alarm tone
 - Charge sound
 - Software tone for i-cpli
 - Ring tone for packet communication/64k data communication

● When Public mode (Driving mode) is set

The FOMA terminal does not ring when you receive a voice or videophone call. Calls are logged in the "Received calls" record as "Missed calls" record, and the "Missed call" shortcut icon appears on the standby screen.

- A caller making a voice call hears a message that you cannot answer the call because you are driving or you are in the place you have to refrain from using mobile phones, then the call ends.
- A caller making a videophone call sees the Public mode video message on his or her display, then the call ends.
- If the FOMA terminal is set to Public mode (Driving mode) while network services are activated, voice calls and videophone calls are handled as shown in the **Table 1** (p.67) .
- When you receive a mail, the ring tone does not sound and the "New mail" shortcut icon appears on the standby screen.

NOTE

 
- If the power is off or "OFF" is displayed, the message for "OFF" is announced instead of the Public mode message even when Public mode is set.

Using the Public Mode (Power OFF)

<Public mode (Power OFF)>

The Public mode (Power OFF) is an automatic answering service provided to keep manner in public circumstances. During Public mode (Power OFF), a caller who made a call while the FOMA terminal is turned off hears a message that you cannot answer the call because you are in the place you have to turn off the mobile phone (in the hospital, on the airplane, around the priority seat on the train, etc.), then the call ends.

1 On the standby screen▶




Public mode (Power OFF) is set. (Nothing changes on the standby screen.)

When you receive a call after setting Public mode (Power OFF) and turning off the FOMA terminal, the caller hears the message "The person you are calling is in an area where cell phone should not be used. Please call back later."


■ To cancel the Public mode (Power OFF)

 ▶ On the standby screen▶



■ To check Public mode (Power OFF) setting

 ▶ On the standby screen▶



● When Public mode (Power OFF) is set

The setting is valid until "★25250" is dialed to release the Public mode (Power OFF). The setting is not canceled only by turning on the FOMA terminal. The Public mode (Power OFF) message is announced even when you are in an out-of-service area or where the reception is very poor.

- A caller making a voice call hears a message that you cannot answer the call because you are in the place you have to turn off the mobile phone, then the call ends.
- A caller making a videophone call sees the Public mode (Power OFF) video message on his or her display, then the call ends.
- If the FOMA terminal is set to Public mode (Power OFF) while network services are activated, voice calls and videophone calls are handled as shown in the **Table 1** (p.67).

When You Cannot Answer a Received Call

<Missed calls>

When you cannot answer a received call, the  appears on the standby screen. When you select , you can check the date, time and the caller ID about the call.

- "Advising shortcut icons" → p.101

1 On the standby screen Select

The Received calls list screen appears. → p.56

To check the information with the FOMA terminal folded

When there is a missed call, new mail (i-mode mail, Area Mail and SMS) or the incoming call lamp keeps on flashing. When you press , you can confirm the caller or sender in the voice.

1 Press with the FOMA terminal folded

Notify it with a voice according to the setting of "Info notice setting".

Flashing of the Incoming call lamp

When you have a missed call or new mail, the incoming call lamp keeps on flashing in the following colors.

- Phone/Videophone: Color set for Phone (default: Color 5 (green))
- New mail/Area Mail: Color set for Mail (default: Color 1 (blue))

Flashing color and conditions

- The lamp does not flash when "Missed/Unread info" under "Illumination" is set to "OFF".
- The lamp flashes in the default color when Gradation is set in "Illumination".
- You can set the specified flashing color for each phone number or mail address using "Ring tone/Image".
- The lamp does not flash in Public mode (Driving mode).

To turn off the lamp

- Selects the icon for "Missed call" or "New mail" in the display or push  (1 second or longer) to check the description.

[Table 1] Handling of received calls when network services and Public mode (Driving mode/Power OFF) are set

Service	When a voice call is received	When a videophone call is received
Voice Mail Service	• Connects to the Voice mail service center after announcing the Public mode message.*	• Connects to the Voice mail service center without showing the Public mode video message.
Call Forwarding Service	• Transfers the call to the forwarding number after announcing the Public mode message.* • The Public mode message is announced or not depending on the setting of the call forwarding service.	• Transfers the videophone call to the forwarding number without showing the Public mode video message. • The connection is not established when the videophone for the forwarding number is not compatible with 3G-324M.
Nuisance Call Blocking	• Ends the call after showing the message that the connection could not be established for the barred callers. • Ends the call after announcing the Public mode message for other callers.	• Ends the call after showing the video message that the connection could not be established for the barred callers. • Ends the call after showing the Public mode video message for other callers.
Caller ID Request	• Ends the call after announcing the caller ID request message for the callers who do not provide the caller ID. • Ends the call after announcing the Public mode message for the callers who provide the caller ID.	• Ends the call after showing the caller ID request video message for the callers who do not provide the caller ID. • Ends the call after showing the Public mode video message for the callers who provide the caller ID.

*: If the ring time is set to 0 second, the Public mode message is not announced and the "Voice Mail Service" or "Call Forwarding Service" is applied. In addition, they are not recorded in the "Received calls" record and "Missed call" shortcut icon does not appear.

Setting the Notification Method for Missed Calls

[<Info notice setting>](#)

You can set the notification type when  is pressed.

- The following shows options and actions:

Item	When there is a missed call, new mail, etc.	When there is no missed call, new mail, etc.
ON	"Bibip, bibip" tone.	"Bibip" tone.
OFF	The Confirmation Tone does not sound.	

1 "Settings" ▶ "Incoming call" ▶ "Info notice setting" ▶ "ON" or "OFF"

■ When ボイス (Voice) is selected

If you set "日本語" (Japanese) in "Select language", you can select "電子音" (electronic sound), "ボイス" (voice) and "OFF".

You can set the voice to read out (ON) the name or not (OFF) when the caller is stored in the phonebook or when the recording of the message.

NOTE

- This function alerts you using a "YES" indication when the "Missed call", "New mail", etc. shortcut icon is displayed on the standby screen. → p.101
- You cannot use  (MUSIC) to check for missed calls or new mail in the following cases:
 - When Side key guard is set to "ON"
 - When playing music with the Music player/ Music&Video Channel
- The volume set in the "Phone" in the "Ring volume" setting is used (if "Phone" is set to "Silent" or "Step", the volume is set to "Level 2").
- Opening the FOMA terminal during the notification stops the notification.
- If the reading of caller's name is not stored in the phonebook or the name stored in the phonebook is not displayed, the caller's name is not read out even when "名前通知" (name notification) of "ボイス" (voice) is set to "ON" in Japanese language mode.

Having the Caller Leave a Message

[<Record message>](#)

When you cannot answer a voice or videophone call, this function allows you to record a message from the caller on your FOMA terminal.

- The voice call can record 5 messages up to 20 seconds, and the videophone call can record 2 messages up to 20 seconds for each 1 case.

Setting Record message

1 "Settings" ▶ "Incoming call" ▶ "Record message" ▶ Select any item:

ON.....Select the desired type of answer message from "Japanese 1/Japanese 2/English/Voice announce 1"/Voice announce 2", then set the record message.

OFF.....Cancels the Record message setting.

* : Not available when no Voice announce is recorded.

2 Enter the ringing time (between 000 to 120 seconds in 3 digits)

The record message is set and  and  appear on the standby screen.

NOTE

- To give priority to "Record message" function when "Voice Mail", "Call Forwarding" and "Record message" are set at the same time, set the ringing time of Record message shorter than that of Voice mail and Call forwarding.
- If the mute time set in "Ring time(sec.)" is longer than the ringing time set for the Record message function, the FOMA terminal switches directly to Record message without ringing first. To have the FOMA terminal ring before it records a message, make sure that the ringing time for Record message is longer than the mute time.
- You can use "Ring tone/Image" (for each phonebook entry) to set an answer message for each phone number and "Ring tone/Image" (for the phonebook group) to set an answer message for each group.

When you receive a call with “Record message” set to “ON”

The record message activates when the set time is elapsed.

- To the caller of a voice call, the answer message is played and the recording starts.
- To the caller of a videophone call, the “Preparing” image is sent and the answer message is played, then the “Recording” image is sent and the recording starts.

■ When message recording starts

- The recording screen appears. The caller's voice can be heard through the FOMA terminal earpiece during message recording.



Ex. Voice call

■ To answer the voice call while recording



■ To answer the videophone call while recording

- ▶ to answer with the camera image or (Subst.) to answer with the substitute image

■ When message recording ends



- The original screen reappears and the “Missed call” and “Record message” shortcut icons appear on the standby screen. You can check the contents by selecting the one of the shortcut icons. → p.69
- Number of recordings are displayed with icons on the icon display area at the top of the screen.

to : Recorded voice messages (1 to 5)

/ : Recorded videophone messages (1 or 2)

NOTE

- When Manner mode is set, you cannot hear the caller's voice during a message recording.
- You cannot answer another call while recording a message.

Having Callers Leave a Message During an Incoming Call

<Quick message>

Even when the “Record message” function is not set to “ON”, you can record messages while receiving a call by pressing a key.

1 While ringing

The recording of the message starts.

■ To set Manner mode when recording starts

▶ While ringing

NOTE

- You cannot set “Record message” to “ON” with this operation.
- If a voice/videophone call arrives when full of voices/videos, Record message does not activate but the call keeps ringing (with operational conditions set in “Manner mode set” when is pressed).


Playing/Erasing Recorded Messages and Voice Memos

- When there is a recorded message which has not been played, (for a recorded message) or (for a recorded video message) appears on the standby screen.

<Example: To check the recorded message which has not been played>

1 On the standby screen ▶ Select “” (for a recorded message) or “” (for a recorded video message)

The “Play/Erase msg.” screen or “Play/Erase VP msg.” screen appears. “★” appears for the recorded item.

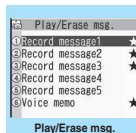

■ To play the recorded message with the menu operation

▶ ▶ “LifeKit” ▶ “Play/Erase. msg.” (voice) or “Play/Erase. VP msg.”

Play/Erase msg.
Function menu ▶ p.70

2 Select the item to play

<Record message/Voice memo>

The FOMA terminal beeps and playback begins. When the playback ends, the FOMA terminal gives 2 short beeps and the "Play/Erase msg." screen reappears.

You can also play the messages by pressing [X] on the standby screen.

■ To play the next message while playing a message



Each time you press [X], the recorded messages are played from the newest one. Voice memos are played last.

■ To stop the playback



The "Play/Erase msg." screen reappears.

<Record Videophone message>

The playback starts. When the playback ends, the "Play/Erase VP msg." screen reappears.

 
■ To play another message while playing a message



■ To adjust volume while playing a message



■ To switch ON/OFF of the speaker while playing a message



■ To pause the playback



To resume playback, press [] (Play).

■ To stop the playback



The "Play/Erase VP msg." screen reappears.

■ To make a voice/videophone call to the phone number displayed while playing a message



■ To erase the playing message



NOTE

- When 2in1 is in A mode or B mode, "★" does not appear for the recorded message recorded in the unused phone number. When set to "Dual mode", "★" appears for the recorded message recorded in the both phone numbers.

FUNC

Play/Erase msg. screen (voice/video) (p.69)

Play.....Plays the message.

Delete this.....Erases one recorded message or voice memo.

Delete rec. msg.*.....Erases all the recorded messages. Voice memos are not erased.

Delete all.....Erases all the recorded messages and voice memos.

* : Available only with the Play/Erase msg. screen.

Using Chara-den

This function sends a cartoon character instead of your own image when you make a videophone call. "What is Chara-den?" → p.237

- You can display your favorite Chara-den if you set "Substitute image" of "Select image" to "Chara-den" beforehand.

You can also use Chara-den by setting Chara-den in the phonebook or Ring tone/Image function.

- To switch from the camera image to Chara-den during a videophone call, select "Substitute image" from the function menu.

1 When you receive a videophone call, press [] (Subst.)

2 Control your character by pressing the dial keys



Pressing a dial key makes the character perform the action assigned to that key. "Using Chara-den characters" → p.238


Chara-den

Illustrations Dick Bruna
© copyright Mercis bv,
1953-2008
www.miffy.com

Setting Functions for the Videophone

1 "Settings" ▶ "Videophone"

The "Videophone settings" screen appears.

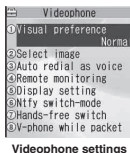

2 Select any item:

Visual preference.....Selects the image quality of videophone calls from "Normal/Prefer img qual/Prefer motion spd".

Select image → p.71

Auto redial as voice.....Sets whether to switch to a voice call when a videophone call cannot be made (ON/OFF).

Remote monitoring → p.73

Display setting.....You can set the image displayed on the main display or how to display your own camera image.

Main display.....Selects the image displayed on the main display from "Other side/My side".

Front camera Reverse.....Sets whether to display your camera image as a mirror image (ON) or normal image (OFF) on your FOMA terminal.

Ntly switch-mode → p.72

Hands-free switch.....Sets whether to switch to Handsfree automatically when starting a videophone call (ON/OFF).

V-phone while packet → p.72

Setting the image sent during videophone calls

[<Select image>](#)

You can select the image sent instead of the camera image.

- You can set a JPEG image whose file size is 100K bytes or less and not larger than 854 dots wide × 854 dots high, or a GIF image whose file size is 100K bytes or less and not larger than 854 dots wide × 480 dots high or 480 dots wide × 854 dots high (except for the files with restrictions).

1 Videophone settings screen (p.71) ▶ "Select image" ▶ Select any item:

On hold.....Sets the image sent for a call on answer hold.

Holding.....Sets the image sent while holding a call.

Substitute image.....Sets the image sent as a substitute image.

Record message.....You can set the image sent while recording videophone messages.

Preparing.....You can set the image sent while preparing for recording videophone messages.

Voice memo.....Sets the image sent while recording the voice memo.

2 Select the image to be sent:

Pre-installed.....Sends only a message.

Original.....Sends an image and a message. To change the image, select an image from My picture from "Change setting" of the function menu.

Chara-den*.....Sends the image selected in "Substitute image".
Function menu of Chara-den list screen → p.238
Priority order for Chara-den setting → p.77
To change the Chara-den, select a Chara-den from Chara-den list from "Change setting" of the function menu.

* : Available only when "Substitute image" is selected.

Setting for Switching between Voice Call and Videophone Call

<Ntfy switch-mode>

You can set whether to notify the other party that your FOMA terminal supports the switch between a voice call and a videophone call.

- The other party cannot switch the call when set to "Indication OFF".
- You cannot set this function during a call or while "📞" appears.

1 Videophone settings screen (p.71) ▶ "Ntfy switch-mode" ▶ Select any item:

Indication ON • Indication OFF.....Activates or deactivates the Ntfy switch-mode.

Check Indication.....Displays the "Ntfy switch-mode" setting.

Setting the answer mode when you receive a videophone call during i-mode

<V-phone while packet>

- As the multi access function cannot be used for videophone, incoming videophone calls during i-mode communication or while sending or receiving mails are handled according to this setting. → p.358

1 Videophone settings screen (p.71) ▶ "V-phone while packet" ▶ Select any item:

V-phone priority.....Switches to the videophone ringing screen. When you answer the incoming videophone, i-mode communication is disconnected.

Packet downld priority.....Rejects the incoming videophone call.

V-phone answerphone.....If you have subscribed to the "Voice Mail Service", the videophone call is connected to the Voice Mail service center regardless of "Activate/Deactivate" setting of Voice Mail. When you have not subscribed to this service, "Packet downld priority" is activated.

Call forwarding.....If you have subscribed to the Call Forwarding Service, the videophone call is forwarded regardless of "Activate/Deactivate" setting of "Call Forwarding". When you have not subscribed to this service, "Packet downld priority" is activated.

NOTE

<Visual preference>

- If the signal quality deteriorates during a videophone call, the image may become grainy or patchy regardless of the settings in "Visual preference".

<Select image>

- If you delete the original still image, the "pre-installed" image is displayed (sent).
- When the Chara-den character set as the substitute image is deleted and the "Chara-den" substitute image cannot be displayed, the pre-installed "ミッフィー (Miffy)" is sent. If you delete the pre-installed "ミッフィー (Miffy)", the "Pre-installed" substitute still image is sent.

<Auto redial as voice>

- When a videophone call is switched and redialed as a voice call, the call is charged as a voice call and digital communication charges are not applied.
- When a call is redialed, only the voice call records are logged in the "Redial/Dialed calls" record.
- Even if "Auto redial as voice" is set to "ON", it may not be possible to redial due to the conditions of the network or the other party, such as busy.

<Hands-free switch>

- The FOMA terminal does not switch to handsfree mode automatically in the following cases even when "Hands-free switch" is set to "ON":
 - While Manner mode is set
 - When a flat-plug earphone/microphone with switch (optional) is connected (however, the microphone operation follows the "Select microphone" setting)
 - When holding a call or Record message is activated for the incoming call

<V-phone while packet>

- Even when set to "V-phone priority", you cannot answer the videophone call if you are using multi access such as using the i-mode communication during a voice call.
- When set to "Packet downld priority", "V-phone answerphone" or "Call forwarding", the received videophone calls are recorded as "Missed calls" in the "Received calls".
- Even when set to "V-phone priority" or "Packet downld priority", "Voice Mail" or "Call Forwarding" service is activated if the ring time for the "Voice Mail" or "Call Forwarding" service is set to 0 second.


Using the Videophone Connecting to External Devices

You can make or receive videophone calls from external devices such as the PC by connecting to the FOMA terminal with the FOMA USB Cable with Charge Function 01/02 (Optional).

To use this function, you have to install a videophone application on the dedicated external device or PC and prepare commercially available devices such as an earphone/microphone and USB compatible Web camera.

- Set the USB mode setting to "Communication mode". There is no specific settings for connecting external devices.
- For details on the operational environment, settings, operations of the videophone application, refer to the manuals supplied with the external terminals.
- "ドコモテレビ電話ソフト (DoCoMo Videophone Software)" (only in Japanese) is available as the application which is compatible with this function. You can download the Software from the website of DoCoMo Videophone Software (only in Japanese). (For details of the PC operating environment, etc., refer to the support website.)

<http://videophonesoft.nttdocomo.co.jp/>

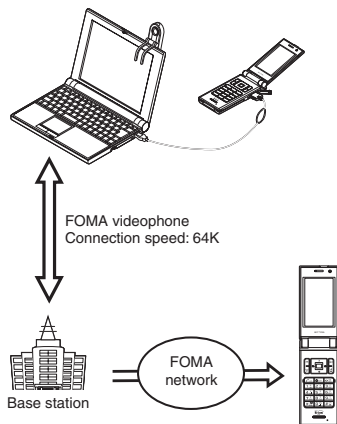

NOTE

- You cannot make a videophone call from the external device during a voice call.

NOTE

- When you have subscribed to either of the Call Waiting service, Voice Mail Service or Call Forwarding and you receive a videophone call from an external device during a voice call, you can answer the call after ending the current call. When you receive a voice call, videophone call or 64K data communication during a videophone call from the external device, you can answer these calls in the same way.

Setting Remote Monitoring

<Remote monitoring>

Remote monitoring is only available between FOMA terminals or between a FOMA terminal and a phone equipped with a 3G-324M-compatible videophone function. The FOMA SO705i can be used as either the dialing or receiving phone for remote monitoring.

 
Preparing the receiving phone

Set the phone number of the dialing phone (Other ID) and the delay until remote monitoring begins (Ringing time) on the phone performing the remote monitoring (receiving phone).

- Up to 5 Other ID can be stored.

- 1 **Videophone settings screen (p.71) ▶ "Remote monitoring" ▶ Enter your security code ▶ "Other ID"**

The "Other ID" screen appears.



Function menu ▶ p.74

- 2 **Select an item to store or change ▶ Enter the phone number of the monitoring phone**
- 3 **Press [CLR] to return to the remote monitoring screen**
- 4 **"Ringing time" ▶ Enter the ring time (003 to 120 seconds in 3 digits)**
The ringing time is set.
- 5 **"Set" ▶ "ON"**
" " appears on the standby screen.




- To turn remote monitoring off
▶ "OFF"

6 Position the FOMA terminal

In remote monitoring, the image from the front camera is sent to the dialing phone. Put the receiving FOMA terminal on the monitoring position, ensuring that it is switched on and unfolded.

If the FOMA terminal is left folded, only the voice is sent and the camera image is not sent. The substitute image is sent with “カメラオフ Camera Off” written on the image.

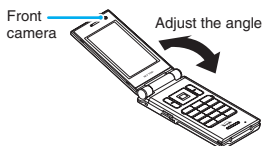

NOTE

- When positioning the FOMA terminal, set “Videophone” in “Vibrator” to “OFF” to prevent the FOMA terminal from moving when receiving calls.
- If the ringing time set for “Voice Mail Service” and “Call Forwarding” on the receiver side is shorter than the ringing time set for remote monitoring, “Voice Mail Service” and “Call forwarding” take priority.

FUNC Other ID screen (p.73)


Look-up address.....Enters the address referring to the phonebook, Dialed or Received calls records.

Delete this • Delete all.....Deletes one or all other ID(s). When all IDs are deleted, the “Set” setting is set to “OFF”.

Starting/ending the remote monitoring

- To perform remote monitoring, you should always make a videophone call with caller ID (phone number) notification provided from the FOMA terminal registered as the other ID on the receiving phone.

1 Make a videophone call to the receiving phone

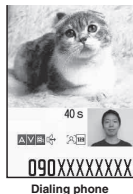

After the ringing time set on the receiving phone has elapsed, remote monitoring begins.

The video image from the receiving phone is displayed and the sound comes from the speaker on the dialing phone.

■ To answer a videophone call on the receiving phone without triggering remote monitoring

▶ Press before the set ringing time is not elapsed

To answer with a substitute image, press (Subst.).

2 To end the call, press

The call duration is displayed and remote monitoring ends. You can also end remote monitoring by pressing on the receiving phone.

NOTE

- Calls can be received as a remote monitoring call even when Dial lock or Omakase Lock is set.
- Remote monitoring is not available when the following functions are set:
 - Public mode (Driving mode)
 - Manner mode
 - Call rejection/acceptation*
 - Reject unknown*
- *: When “Call acceptance” is set for a phone number other than the other ID phone number or “Call rejection” is set for the other ID phone number, or when “Reject unknown” is set and the other ID phone number is not stored in the phonebook
- Specific ring tone for Remote monitoring is used and cannot be modified.
- Ring tone is played at the volume set in “Videophone” in “Ring volume” (if the ring volume is set to “Silent”, “Level 1” or “Step”, the volume is set to “Level 2”).
- You cannot put the call on hold while receiving a call for remote monitoring. Press to end the call.
- You cannot switch cameras from the receiver during remote monitoring.



Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones. Improper use of the FOMA terminal in ways that constitute a serious public nuisance may be punishable under laws or ordinances intended to prevent such behavior (privacy protection laws, etc.).

Phonebook

Phonebooks Available with the FOMA Terminal		76
Adding Information to the Phonebook	Add to phonebook	76
Adding Phonebook Entries from the Redial, Dialed Calls and Other Records		78
Renaming Groups.....	Group setting	78
Making a Call from the Phonebook.....	Search phonebook	79
Editing the Phonebook.....	Edit phonebook	82
Deleting a Phonebook Entry	Delete data	82
Checking the Phonebook Storage Status	No. of phonebook	82
Setting Different FOMA Terminal Actions for Each Phone Number and Mail Address		
.....	Ring tone/Image	82
Using Choku-Den	Choku-Den	84
Using Dialing Shortcuts	Two-touch dialing	85
Storing the Phonebook at the Data Security Center.....	Data security serv.	85

Phonebooks Available with the FOMA Terminal

Your FOMA terminal contains two phonebooks. One is the phonebook in the FOMA terminal (Phone) itself, for which you can set a range of functions, and the other is the UIM (FOMA card) phonebook, which can also be used in other FOMA terminals. Each phonebook can be used differently depending on the purpose.

Differences between the FOMA terminal (Phone) and FOMA card (UIM) phonebooks

■ Phonebook data

Entry	FOMA terminal (Phone)	FOMA card (UIM)
Number of entries	Up to 1,000 entries	Up to 50 entries
Group	No Group, Group 01 to 19	No Group, Group 01 to 10
Phone number storage	4 numbers per entry (4,000 numbers in total in the phonebook)	1 number per entry
	You can select from 23 icons	"☎" only
E-mail address storage	3 addresses per entry (3,000 addresses in total in the phonebook)	1 address per entry
	You can select from 5 icons	"✉" only
Image storage	1 still image and 1 Chara-den per entry (respectively 100 in total in the phonebook)	—
Other data storage	Name, Reading, ZIP code, Address, Birthday, Memo	Name, Reading

■ Features of the FOMA terminal (Phone) phonebook

The following utility functions can be used with entries stored in the FOMA terminal (Phone) phonebook:

- "Choku-Den" → p.84
- "Two-touch dialing" → p.85
- "Ring tone/Image" → p.82
- "Restrictions" → p.120
- Storing as secret data → p.111
- Secret code setting → p.81

■ Features of the UIM phonebook

As phonebook entries are stored on the FOMA card (UIM), you can transfer your phonebook entries to another FOMA terminal simply by switching the FOMA card (UIM). This makes the UIM phonebook very useful when you use multiple FOMA terminals.

Displaying names

■ Voice and videophone calls



When receiving a call with caller ID notified from someone who is stored in the phonebook, the phone number and caller's name is displayed.



When a still image is stored in the phonebook, the image is displayed. However, depending on the size and amount of data of the stored image, it may take time to display the image.

The caller's name is also displayed in the "Received calls", "Dialed calls" and "Redial" records.

■ Displaying names for i-mode mail and SMS

When you send/receive i-mode mail or SMS to/from someone who is stored in the phonebook, his/her name is displayed in the sent/received mail list/detail screen or address list.

Adding Information to the Phonebook

<Add to phonebook>

- The entry cannot be stored unless the "Name" field is filled.

1 MENU ▶ "Phonebook" ▶ [Envelope Icon] (FUNC) ▶ "Add to phonebook" ▶ Select a phonebook ▶ Enter a name

You can enter kanji characters, hiragana, katakana, alphabets, numbers, symbols and pictographs (Phone only).

You can store up to 16 double-byte or 32 single-byte characters for "Phone" and 10 double-byte or 21 single-byte alphanumeric characters only (including some single-byte symbols) for "UIM".

2 Check the reading ▶ [Set Icon] (Set)

■ When the reading is incorrect

Correct the reading using katakana (single-byte for "Phone" and double-byte for "UIM"), single-byte alphabet, numbers and symbols.

You can store up to 32 single-byte characters for "Phone" and 12 double-byte or 25 single-byte alphanumeric characters only (including some single-byte symbols) for "UIM".

3 Select any item:

 **(group)**.....Selects a group number among "Group 01-19" for "Phone" or among "Group 01-10" for "UIM". If no group is selected, the entry is automatically assigned to "No Group".

 **(phone number)**.....Enters the phone number.

- Also select an icon for "Phone". You can enter up to 26 digits for the phone number. Once you have stored the first phone number, the " <Not stored>" option appears on the Phonebook edit screen. Select this option to store an additional phone number.
- You can enter 20 digits for a blue FOMA card (UIM), and 26 digits for a green/white FOMA card (UIM).

 **(mail address)**.....Enters the e-mail address. You can enter up to 50 single-byte alphabets, numbers and symbols.

Also select an icon for "Phone". Once you have stored the first e-mail address, the " <Not stored>" option appears on the Phonebook edit screen. Select this option to store an additional e-mail address.

 **(address)**.....Enters the ZIP code and street address. Enter the 7 single-byte numbers for ZIP codes. You can enter up to 50 double-byte or 100 single-byte kanji characters, hiragana, katakana, alphabets, numbers and pictographs.

 **(birthday)**.....Enters the contact's birthday (year, month and day).

Any year from 1800 to 2099 can be set.

 **(memorandums)**.....Enters a memo (short note). You can enter up to 100 double-byte or 200 single-byte characters which include kanji characters, hiragana, katakana, alphabets, numbers and pictographs.

 **(image)**.....Shoots or selects the image displayed when you receive a call from the contact.

 **(Chara-den)**.....Selects the "Chara-den" character displayed as the substitute image for videophone calls.

 **(memory No.)**.....Memory numbers are automatically assigned when an entry is stored in the phonebook, but can be changed to any number between 000 and 999.

* : Assigned to the available number between 010 to 999 from the smallest number. If no number is available from 010 to 999, it is assigned to the available number between 000 to 009.

4 (Finish)

NOTE

- Phonebook entries stored using symbols or pictographs may not be displayed correctly when data are transferred by the infrared communication, etc.
- Enter the correct domain when storing e-mail addresses. The domain is the part of the address that follows the "@" symbol.
However, if the contact's e-mail address is in the "[phone number]@docomo.ne.jp" format, store just the phone number as the e-mail address.
- "2in1 setting" in Phonebook is specified according to the 2in1 mode at registration. The setting of "Phonebook 2in1 setting" (  ) is displayed on the Phonebook list screen or Phonebook detail screen when 2in1 mode is in Dual mode. However, when attaching the phonebook to a mail or copying it to the UIM phonebook, Phonebook 2in1 setting is not to be sent.

Mode	Phonebook 2in1 setting
Dual mode	A
A mode	A
B mode	B
OFF	A

You can change the Phonebook 2in1 setting in "2in1 setting". → p.318

 
<Chara-den settings priority sequence>

- The priority order for Chara-den settings is as follows:
 - Chara-den setting of Ring tone/Image (for individual)
 - Chara-den setting of Ring tone/Image (for group)
 - Chara-den stored in the phonebook entry
 - Substitute image in Select image

When phonebook editing is interrupted

You can resume editing the phonebook entry which is stopped being edited because of the emit of the low-voltage alarm or activation of a task of Tool groups using Multitask, etc.

-  **"Phonebook"**  **(FUNC)** **"Add to phonebook"** **Select the destination** **"Recall"**



When you are re-editing the entry, if you cancel editing without storing the changes, the data being edited is erased.

- To add a new phonebook entry** **"New"**

Adding Phonebook Entries from the Redial, Dialed Calls and Other Records

You can add information to the phonebook from the "Received calls", "Dialed calls", "Redial", "Received address", "Sent address", "Text reader", Site screen or enter phone number screen, etc.

<Example: Adding information from the "Received calls" record to the FOMA terminal (Phone) phonebook>

1 Received calls screen (p.56) ▶ [FUNC] (FUNC) ▶ "Add to phonebook" ▶ "Phone"

- To add to the FOMA card (UIM) ▶ "UIM"

2 "Add" ▶ Search for the phonebook entry to add the information

Searching the phonebook → p.79

- To add a new phonebook entry ▶ "New"
- To add information to the UIM ▶ "New" or "Overwrite"

3 Display the phonebook detail screen ▶ [Select] (Select)

Phone number is automatically entered and the phonebook editing screen appears.
Editing the phonebook → p.82

4 After completing the changes, press [Finish] (Finish)

- If a message appears asking whether to overwrite existing data ▶ "YES"

NOTE

- The "Notify Caller ID" setting ("Notify" or "Not notify") displayed in the "Dialed calls" and "Redial" records is not stored in the phonebook.

Renaming Groups <Group setting>

You can assign your stored phonebook entries to groups according to the contact role ("Work", "Friends", etc.) or by hobby ("Baseball", "Football", etc.). This allows you to use the phonebook as if it were divided into different volumes according to purpose.

- "No Group" cannot be renamed.

1 Phonebook list screen (p.79) ▶ [FUNC] (FUNC) ▶ "Group setting"


The "Group setting" screen appears.

2 Select a group ▶ Enter the new group name

The "[Group icon]" icon appears next to UIM groups.

You can enter up to 10 double-byte or 21 single-byte characters.

If the same name is used for groups on the FOMA terminal (Phone) and UIM, they are displayed as separate groups.

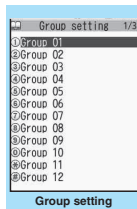

Function menu → p.78

[FUNC] Group setting screen (p.78)

Edit group name Edits the group name.

Ring tone/Image → p.82

Reset group name The changed group name is reset to the default name assigned at the time of purchase.

NOTE


- Resetting the group name does not clear the "Ring tone/Image" setting.

Making a Call from the Phonebook

<Search phonebook>

You can make a call by searching for the phonebook entry from the FOMA terminal (Phone) phonebook or the FOMA card (UIM) phonebook.

- When tabs appear on the phonebook list screen, you can switch the display as follows:
 <Example: To switch tabs from “他 (Others)” to “Ta-column” in the Alphabet display>

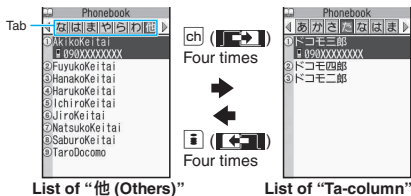

NOTE

- You can use to switch pages within the same tab.
- You cannot switch the tab with when you store to the Choku-Den or compose a message with using the Look-up phonebook.

Searching for the phonebook entry of the person you want to make a call

1 MENU ▶ “Phonebook”

The “Phonebook list” screen appears.

■ To make a voice call from the list screen


- Highlight the phonebook entry you want to call ▶ (voice call)

If the phonebook entry contains multiple phone numbers, the call is made to the first phone number stored for that entry.

■ To switch the tab display

- ▶ (FUNC) ▶ “Change Display”

Select the tab from “Alphabet/Memory No./Group”.

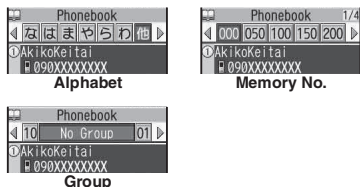

Function menu ▶ p.80

2 Select the phonebook entry you want

The “Phonebook detail” screen appears.

3 Use to display the phone number you want ▶ (voice call) or (V.phone)

■ To send a mail

- ▶ Use to display the e-mail address you want ▶ (MAIL)

“Composing and Sending i-mode Mail” → p.166



Function menu ▶ p.81

NOTE

- Pressing during a call displays the group search screen and pressing displays the column search screen.

Searching for the phonebook entry by specifying the search method

You can search for a phonebook entry using any of 8 search criteria; reading, name, phone number, e-mail address, memory number, group or “column” in Japanese phonetics (a, ka, sa, ta, na, etc.) or all.

- Search results are displayed in the sequence shown below based on the reading entered when the entry was stored (except for memory number search).

katakana → alphabets → numbers → symbols → the reading of caller’s name is not stored

* If a space is placed at the beginning, it is searched first.

1 On the standby screen ▶ (FUNC) ▶ Search phonebook


■ To display your preferred search method first

- ▶ Highlight the search method that you want to display first ▶ (Prefer) ▶ “OK”

“★” appears next to the preferred search method. Pressing on the standby screen displays the phonebook search screen with your preferred method.

■ To cancel your preferred search method setting

- ▶ On the standby screen ▶ ▶ CLR ▶ Highlight the search method with the star “★” ▶ (Reset)

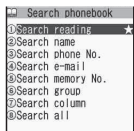

2 Select the search method:

Search reading.....▶ Enter the reading▶

Enter the reading from the beginning. You do not need to enter the entire name.

Search name.....▶ Enter the name▶

Enter the name from the beginning. You do not need to enter the entire name.

Search phone No.....▶ Enter the phone number▶

Enter some digits numbers of the phone number. You can also search the phone number by entering a part of the phone number and press [F] on the "Enter phone number" screen (p.50).

Search e-mail.....▶ Enter the e-mail address▶

You do not need to enter the entire address.

Search memory No.....▶ Enter the 3 digits memory number.

You cannot search the UIM phonebook by memory number.

Search group.....▶ Select the group you want

Note that the UIM phonebook uses different groups from the FOMA terminal (Phone) phonebook.

Search column.....▶ Press the key for the "column" (tab) you want to search

[1]: "a" column	[2]: "ka" column
[3]: "sa" column	[4]: "ta" column
[5]: "na" column	[6]: "ha" column
[7]: "ma" column	[8]: "ya" column
[9]: "ra" column	[0]: "wa" column
[*]: Others (alphabet or number, etc.)	

Search all.....All the stored phonebook entries are displayed in the "Alphabet" tab.

When the search ends, the "Phonebook list" screen that meets the searching conditions appears. " " is displayed for the UIM phonebook.



Phonebook list
Function menu▶p.80

3 Accessing the phonebook from the Redial or Dialed Calls record

You can access the stored phonebook detail screen from the function menu of "Received calls", "Dialed calls", "Redial", "Received address" or "Sent address" screen by selecting "Look-up phonebook".

FUNC Phonebook list screen (p.79)

- The available functions vary depending on the searching method and display method.

Add to phonebook→p.76

Connect to Center.....Stores the phonebook data at the DoCoMo Data Security Center.→p.85

Search phonebook.....Select the search type and call the phonebook entry.→p.79

Sort¹.....Sorts the phonebook list in a selected criteria.

Change Display.....Select from "Alphabet/Memory No./Group".

Ring tone/Image→p.83

Restrictions→p.120

Group setting→p.78

Copy to microSD²→p.248

- When "Copy all" is selected, you can select whether to copy the My Profile data in addition to the phonebook data.

iC transmission²→p.259

iC trans. all²→p.260

Send Ir data²→p.258

Send all Ir data²→p.258

No. of phonebook→p.82

Attach to mail².....Displays a new mail screen with the phonebook data attached.

Big font↔**Standard font**.....Switches the displayed font size between "Big font/Standard font".→p.100

microSD phonebook↔**Original phonebook**.....Refers to the phonebook in the microSD memory card or the FOMA terminal (Phone).

Delete data.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice"→p.39

- "Delete all" deletes the phonebook on the FOMA card (UIM).

*1: Cannot be used in tab display.

*2: Not operate for the phonebook stored in the FOMA card (UIM)

FUNC Phonebook detail screen (p.79)

Edit phonebook → p.82

Notify Caller ID → p.48

Chaku-moji → p.58

Dual setting

Prefix numbers → p.61

Int'l call → p.55

2in1/Multi Num. When 2in1 is set to ON and Dual mode, selects from "Number A/Number B/Cancel number" (p.319) (not available when A mode or B mode is set).

Selects from "Basic number/Additional number 1/Additional number 2/Cancel number" (p.315) at the Multi Number when 2in1 set to OFF.

Select image Selects the image used during a videophone call from "My side/Chara-den". Select "Release settings" to cancel the setting.

Ring tone/Image^{*1} → p.82

Restrictions^{*1} → p.120

Move to top^{*1} Moves the displayed phone number/mail address to the top when multiple phone numbers/mail addresses are stored in one phonebook entry.

Add to Choku-Den^{*1} → p.84

Add shortcut → p.100

Compose message^{*2} → p.166

Attach to mail^{*1,2} Displays a new mail screen with the phonebook data attached.

Compose SMS^{*2} → p.192

IC transmission^{*1} → p.259

IC trans. all^{*1} → p.260

Send Ir data^{*1} → p.258

Send all Ir data^{*1} → p.258

Copy to microSD^{*1} → p.248

Copy

Name Copies the name. The copied name can be pasted into input and other screens. → p.304

Phone number^{*3} Copies the phone number. The copied phone number can be pasted into input and other screens. → p.304

Secret code^{*1} → p.81

Set code Sets the secret code (4 digits).

Check code Confirms the set secret code.

Release settings Cancels the set secret code.

Set secret^{*1,4} → p.111

Copy to UIM^{*5} → p.255

Big font ↔ **Standard font** Switches the displayed font size between "Big font/Standard font". → p.100

Delete data → p.82

^{*1}: Not operate for the UIM phonebook.

^{*2}: Not available when 2in1 is in B mode.

^{*3}: Depending on the selected item, one of "Mail address/Address/Birthday/Memorandums" appears.

^{*4}: "Release secret" when referring to the phonebook of the secret data.

^{*5}: "Copy from UIM" when referring to the UIM phonebook.

NOTE

<Add to Choku-Den>

- When stored to Choku-Den, "★" appears on the function menu.

● Secret code

When the mail address of the other party is "[phone number]@docomo.ne.jp" and he/she sets a secret code, you have to specify "[phone number + secret code]@docomo.ne.jp" as the e-mail address. There are 2 ways to send an e-mail to such a destination.

- Set a secret code for the phonebook entry from the phonebook detail screen function menu (when referring to the mail address, the secret code is automatically added to the mail address in the phonebook).
- Store the mail address with a secret code in the phonebook.

NOTE

- Secret code settings are valid only to mail addresses in "[phone number]@docomo.ne.jp" or "phone number" format.
- You cannot set secret codes for the UIM phonebook.

Editing the Phonebook

<Edit phonebook>

1 Phonebook detail screen (p.79)▶

☐ (FUNC)▶“Edit phonebook”▶Edit the respective items

Edit the required items using the procedure used in “Add to phonebook”.

Adding information to the phonebook→p.76

■ To store in a new memory number

▶Select “No”▶Enter a memory number (000 to 999) that has not already been stored.

The original phonebook entry is left in its pre-edited state and the edited entry is stored as a new phonebook entry with a different memory number.

2 After editing, press ☐ (Finish)▶“YES”

■ To add information to the UIM

☐ (Finish)▶“Overwrite” or “Add”

Selecting “Overwrite” stores the edited information.

Selecting “Add” leaves the original phonebook entry unchanged and stores the edited entry as a new phonebook entry.

NOTE

- When the edited entry is stored to the Choku-Den, the Choku-Den is also changed.

Deleting a Phonebook Entry

<Delete data>

1 Phonebook detail screen (p.79)▶

☐ (FUNC)▶“Delete data”▶Select any item:

Delete phone No......Deletes the selected phone number (e-mail address, address, birthday, memorandums, image or “Chara-den” character).

Delete this.....Deletes the phonebook entry.

*: Depending on the selected item, one of “Delete mail add./Delete address/Delete birthday/Delete memorandums/Delete image/Delete Chara-den” appears.

NOTE

- If you delete a phone number or mail address in the phonebook entry in which multiple phone numbers or mail addresses are stored, the order of the subsequent phone numbers or mail addresses moves up.

Checking the Phonebook Storage Status

<No. of phonebook>

1 Phonebook list screen (p.79)▶

☐ (FUNC)▶“No. of phonebook”

■ Phone (the phonebook stored on the FOMA terminal)

Phonebook : Displays the number of entries stored in the phonebook.

Number of stored data/1,000 (storage limit)

Secret : Displays the number of entries stored as secret data. (This can only be displayed in “Secret mode” or “Secret data only mode”.)

Image : Displays the number of images stored in the phonebook.

Number of stored data/100 (storage limit)

Chara-den : Displays the number of “Chara-den” characters stored in the phonebook.

Number of stored data/100 (storage limit)

■ UIM (the phonebook stored on the FOMA card (UIM))

Phonebook : Displays the number of entries stored in the phonebook.

Number of stored data/50 (storage limit)

Setting Different FOMA Terminal Actions for Each Phone Number and Mail Address

<Ring tone/Image>

You can set different ring tones or answer messages for the Record message depending on groups, phone numbers or e-mail address in the phonebook. This function is useful when you want to distinguish the caller only by the ring tone.

- You cannot set this setting for “No Group” on the FOMA terminal (Phone) or the phonebook or groups on the FOMA card (UIM).
- The Ring tone/Image functions are disabled when the caller does not notify the caller ID. It is recommended to set the “Caller ID Request” service.

1 Phonebook detail screen (p.79)▶

(FUNC)▶“Ring tone/Image”

The “Ring tone/Image” screen appears.

“★” appears next to the selected function.

The available functions vary depending on the item selected in the phonebook detail screen.



Ring tone/Image

To set this function for each group

▶Group setting screen (p.78)▶(FUNC)▶“Ring tone/Image”

2 Select the item to distinguish

Select the item from “Voice call (recv.)/V.phone (dial/recv.)/Mail (recv.)”.

- When “Mail (recv.)” is selected, this function is applied not only i-mode mail but SMS.

3 Select any item:

“★” appears next to the selected function.

To release a selected function

▶Highlight the function with “★”▶(Reset)

The function is released and the “★” disappears.

Ring tone^{*1}.....Sets ring tones to distinguish the caller of the phone or sender of mail.

“Changing the Ring Tone”→p.88

Image^{*1*2}.....Sets images to distinguish the caller of the phone. “Changing the Display”→p.94

Chara-den setup^{*3}.....Selects Chara-den to be displayed as the substitute image for videophone calls.

Set illumination^{*1}.....Sets the color to the flashing incoming call lamp to distinguish the caller of the phone or sender of mail.

“Setting the Flashing Mode of the Incoming Call Lamp for Incoming Calls”→p.99

Vibrator^{*1}.....Sets vibration patterns to distinguish the caller of the phone or sender of mail.

“Setting the Vibration to Notify You of Incoming Calls”→p.90

Answer message^{*2}.....Changes the answer message used when record message^{*4} or quick message starts up depending on the caller.

“Having the Caller Leave a Message”→p.68

*1: You can also distinguish the incoming 64K data communication.

*2: Available only when “Voice call (recv.)” or “V.phone (dial/recv.)” is selected.


*3: Available only when “V.phone (dial/recv.)” is selected.

*4: You need to set “Record message” to “ON” beforehand.

When you set Ring tone/Image

An icon appears in the phonebook detail screen indicating that each item is set.

- : Ring tone (voice/videophone call)
- : Ring tone (mail)
- : Incoming call lamp (voice/videophone call)
- : Incoming message lamp (mail)
- : Vibration (voice/videophone call)
- : Vibration (mail)
- : Image (voice/videophone call)
- : Answer message (voice/videophone call)
- : Chara-den (videophone call)

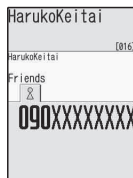

NOTE

- You cannot set this setting for the phonebook stored as the secret data. Even if the setting is made for the group, it is disabled for the phonebook entry stored as the secret data.
- The “Mail (recv.)” setting set for a phone number is activated when you receive an SMS or the sender’s e-mail address is “[phone-number]@docomo.ne.jp”.
- Refer to the following pages for the priority when the Ring tone/Image settings and other settings for incoming calls, etc. are duplicated.
 - Ring tone priority→p.89
 - Vibrator priority→p.90
 - Image priority→p.89
 - Incoming call lamp priority→p.99
 - Chara-den priority→p.77

Checking the Ring tone/Image settings

You can check the phonebook entries or groups set in “Ring tone/Image” by function or item.

1 Phonebook list screen (p.79)▶

(FUNC)▶“Ring tone/Image”

The “Ring tone/Image” screen appears.

“★” appears next to the items to which this function is set.

2 Select the function or item with “★”

▶Highlight the function or item with “★”▶

(FUNC)▶Select any item:

Check settings.....Checks the setting status.

▶Highlight the function or item with “★”▶

Check the phonebook or group which is set

Release settings.....Releases all the settings of the functions marked with "★".

* : The number of the selected items (the number of times  is pressed) varies depending on the function or setting specified.

Using Choku-Den

<Choku-Den>

By storing frequently used phonebook to Choku-Den, you can make a call or send a mail quickly.

- You can store up to 5 Choku-Den by quoting the stored data (such as phone number) from the FOMA terminal (Phone) phonebook.
- When mail addresses are stored to Choku-Den, you can compose i-mode mail to all the members easily.
- You cannot use this function in Secret data only mode.
- You can use this function in Secret mode, but you cannot add the phonebook stored as secret data to Choku-Den.


Adding to Choku-Den

1 On the standby screen

The "Choku-Den" screen appears. When there is a stored data, the Choku-Den screen of the first tab with the stored data appears.

■ To change the location to add

▶ Use  to move the tab
You can also use  to move to the tab of the respective number.

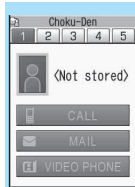

Choku-Den
Function menu → p.84

2 (Store) ▶ Search the phonebook


Searching the phonebook → p.79

■ To change the added contents

▶  (Edit)

3 (Select)

The "Quote phonebook" screen appears.

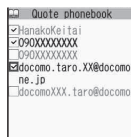

Quote phonebook

4 Use to select a checkbox ()

Select only one phone number and mail address to add respectively.

When a checkbox () is selected, other phone numbers or mail addresses are displayed in gray and the checkbox cannot be selected. To select another checkbox, release the selected checkbox first.

5 (Finish)

NOTE

- The setting of "Phonebook 2in1 setting" is displayed on the Choku-Den screen when 2in1 mode is in Dual mode.
- When an image is stored in the phonebook, the image in the phonebook is added to Choku-Den.

Making a call/composing a mail from Choku-Den

<Example: To make a call>

1 Choku-Den screen (p.84) ▶ Use to display Choku-Den screen to make a call

You can also use  to move to the tab of the respective number.



2 Use to select "CALL"

■ To compose a mail

▶ Use  to select "MAIL"
→ p.166

■ To make a videophone call

▶ Use  to select "VIDEO PHONE"

FUNC Choku-Den screen (p.84)

Store/Edit..... Adds a phonebook to Choku-Den which is not stored or edits the stored Choku-Den. → p.84

Image..... Changes the image displayed in Choku-Den by selecting an image from "My picture".

Broadcast mail..... Displays the new mail screen with all mail addresses stored to Choku-Den are entered to the address. → p.166

Release this • Release all..... Releases one or all Choku-Den.

NOTE

<Image>

- You can add an image whose file size is 100K bytes or smaller and whose width or height is 854 dots or smaller.
- You cannot add images other than JPEG or GIF.

Using Dialing Shortcuts

<Two-touch dialing>

By assigning memory numbers "000" to "009" to phone numbers in the phonebook, you can call those phone numbers only by pressing one of [0] to [9] (last digit of the memory number) and [V].

- 1 [0] to [9] [V] (voice call/ V.phone)

NOTE

- If the phonebook entry contains multiple phone numbers, the call is made to the first phone number stored for that entry.

Storing the Phonebook at the Data Security Center

<Data security serv.>

You can store the FOMA terminal (Phone) phonebook at the DoCoMo Data Security Center. The stored phonebook can be restored to the FOMA terminal or updated by connecting to the Data Security Center.

- Data Security Service is a pay service you need to apply for. If you have not subscribed to the service and try to connect to the Data Security Center, the notification screen appears.
- You cannot use the Data Security Service when "Data Security" appears.
- For details on how to use the Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- 1 [MENU] ▶ "LifeKit" ▶ "Data security serv." ▶ "Connect to Center"

- To set about sending images in the phonebook

▶ "Sndg img in Phonebook" ▶ "ON" (default: "OFF")

The images stored in the phonebook are also stored at the Data Security Center.

- 2 Enter your security code ▶ "YES"

The FOMA terminal connects to the Data Security Center to start saving the phonebook.

- 3 [END] (Finish)

NOTE

- You cannot store the phonebook stored in the FOMA card (UIM) at the Data Security Center.
- Note that a phonebook entry with an image which exceeds 100K bytes cannot be stored or updated.

Restoring/updating the phonebook

The phonebook data stored at the Data Security Center can be stored on the FOMA terminal from the site of the Data Security Center.

You can also edit the phonebook data stored at the Data Security Center from a PC, etc.

For details on how to use, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

NOTE

- Automatic update is not performed when another function is activated while updating the phonebook.
- When the phonebook is not updated, it is notified with "Data Security" shortcut icon.
- When you restore the phonebook data stored at the Data Security Center to the FOMA terminal, icons stored with phone number or mail address may be replaced with "Data Security" or "Data Security".

Checking the communication log with the Data Security Center

- You can check up to 30 communication logs. If the maximum number of logs is exceeded, logs are overwritten starting with the oldest one.
- On the communication log detail screen, the transmission results, dates, transmission details, data sizes, sending results to the Data Security Center, reception results of the mobile phone and number of data files left in the Data Security Center appear.

- 1 [MENU] ▶ "LifeKit" ▶ "Data security serv." ▶ "Exchanging history"

The "Exchanging history" screen appears.

Exchanging history		
1	2008/2/26	12:40:10
2	2008/2/25	12:40:10
3	2008/2/24	12:40:20
4	2008/2/21	13:40:30
5	2008/2/18	15:40:40
6	2008/2/16	12:40:50
7	2008/2/10	15:40:00
8	2008/2/7	12:40:10
9	2008/1/27	18:40:20

Function menu ▶ p.85

- 2 Select the communication log item

[FUNC] Exchanging history screen (p.85)

Delete this • Delete selected • Delete all Select the deleting method. "About multiple-choice" → p.39

Sound/Screen/Light Settings

■ Sound Settings

Changing the Ring Tone	Select ring tone	88
Setting the Vibration to Notify You of Incoming Calls	Vibrator	90
Changing the Ringback Tone	Melody Call setting	90
Setting the Keypad Tone	Keypad sound	90
Setting the Confirmation Tone for Charging	Charge sound	90
Setting the Clock Alarm Tone	Clock Alarm Tone set	91
Setting the FOMA Terminal to Warn You before a Call Drops Out	Quality alarm	91
Setting the Ring Time for Incoming Mail	Mail/Msg. ring time	91
Enabling the Tone to Ring through the Earphone and Speaker	Headset usage setting	91
Switching Off the FOMA Terminal's Tone	Manner mode	92
Modifying Manner Mode	Manner mode set	92

■ Screen/Light Settings

Changing the Display	Display setting	94
Displaying Phonebook Images When You Receive Calls	Disp. phonebook image	95
Setting the Color for Incoming Call Display	Disp. call/receive No.	96
Preventing Others from Peeping the Screen	Shield view	96
Setting the Display and Keypad Lighting	Backlight	96
Changing the Display Design	Display design	97
Changing the Menu Display		97
Setting the Display Mode of Sub Display	Illumination stg.	98
Setting the Flashing Mode of the Incoming Call Lamp for Incoming Calls	Illumination	99
Setting the Flashing Mode of the Incoming Call Lamp During Calls	Illumination in talk	99
Setting the Lamp for IC Card Function	IC card Illumination	99
Changing the Font	Font	100
Setting the Clock Display	Clock display	100
Using Shortcut Icons	My shortcut	100
Selecting the Icons to Display on the Standby Screen	Icons setting	103
Setting the Kisekai Tool	Kisekai Tool setting	104

Changing the Ring Tone

<Select ring tone>

You can set the ring tone and receiving screen in each voice call, videophone call or i-mode mail. You can also set the ring tone for specified phone number, mail address or group of phonebook respectively. → p.82

- Guide to the melody list → p.241
- Setting the sending screen → p.94

1 "Settings" ▶ "Incoming call" ▶ "Select ring tone" ▶ Select an item to set a ring tone:

Select the item from "Phone/Videophone/Mail/MessageR/MessageF".

- When "Phone" is selected, the ring tone for voice calls and 64K data communication is set.
- When "Mail" is selected, the ring tone for i-mode mails, SMS and packet communication is set.

2 "Select ring tone" ▶ Select any item:

Melody.....Select the ring tone or melody.

i-motion.....Select the i-motion/Chaku-Uta[®] downloaded to the FOMA terminal or a movie (i-motion) shot using the camera. When you receive a call, the video or sound for the selected i-motion is played (Chaku-motion).

Music.....Sets the Chaku-Uta-Full[®]. Set any item from the following when the Chaku-Uta-Full[®] contains the portion where the ring tone is specified by the provider:

Fullsong ring tone.....Sets the whole song as the ring tone.

Point ring tone.....Sets a part of the song as the ring tone.

▶ Use  to specify the portion (displayed in orange) to set as the ring tone ▶  (Set) When you select "Movable contents" folder, select "YES" and select the destination folder.

Voice announce.....Sets the message recorded using "Voice announce".

Random melody.....Selects a folder containing stored melodies. When you receive a call or message, one of the melodies stored in the folder played at random.

OFF.....The FOMA terminal plays no ring tone.

■ To set the calling/receiving display

▶ "Select calling disp." or "Select receiving disp." In "Ringing" screen, select an image from the My picture or i-motion.

In "Select receiving disp.", select an image from the My picture.

3 Select the ring tone

When you select a melody, the FOMA terminal plays the melody.

Press , , ,  or  to stop the melody playback.

■ Pre-installed ring tones, melodies and alarms

Track Title	Track Title
着信音 1 to 5	Grand Clock
Go For It!	Elevator
Sophisticated Lady	Whistle
Classy Walts	Piano Man
Kanon	Hand Bell
Forest	Brilliance
Cuckoo Clock	Typewriter
School Chime	Vibe X Vibe

■ Pre-installed Chaku-Uta-Full[®]

Track Title
What Can U Do (Mashup Style)

NOTE

- Some i-motion (i-motion with video only) and Chaku-Uta-Full[®] cannot be specified to the ring tone.
- An i-motion with sound only (an i-motion with no video, such as a singer's voice) cannot be specified as the receiving display.
- Flash movies can be set in the Select calling disp. / Select receiving disp., but the ring tone used is the tone set in "Select ring tone".
- Even if the movie/i-motion can be set as Chaku-motion or image displayed for incoming calls, you cannot set these movie/i-motion in the following cases:
 - When the movie/i-motion is transferred to a PC or other FOMA terminal through infrared data exchange function, IC communication function or DoCoMo keitai datalink (p.326), then returned to the FOMA terminal
 - When the movie/i-motion is copied from a microSD memory card to the FOMA terminal (including the case that the movie/i-motion is copied from the FOMA terminal to a microSD memory card, then copied to the FOMA terminal)
- When you select the i-motion in the Movable contents folder, the selected i-motion is moved to the Inbox folder of "i-motion".

NOTE

- When you select the Chaku-Uta-Full® in the Movable contents folder and "Fullsong ring tone" is set, the selected Chaku-Uta-Full® is moved to the Inbox folder of "Music". When "Point ring tone" is set, the selected portion is clipped as an i-motion and stored in the folder of "i-motion".
- When you set Chaku-Uta-Full® stored on the FOMA terminal as a ring tone with "Point ring tone", it is not clipped as an i-motion and the selected portion is set to the ring tone.
- The ring tone is played at the volume set in "Ring volume" while selecting the ring tone.
- If you set an i-motion that includes both video and sound as the ring tone and receiving display, the FOMA terminal plays the i-motion set as the ring tone.
- If you set something other than an i-motion that includes both video and sound as the ring tone and then set an i-motion that includes both video and sound as the receiving display, the FOMA terminal plays the i-motion set as the receiving display.
- When the i-motion is set to the ring tone for mail, the default ring tone of "Mail" is used for the ring tone of packet communication. The special screen appears when packet communication is received regardless of the incoming screen settings.
- When you set Chaku-Uta-Full® which contains the jacket image as the ring tone, the jacket image is not displayed when you receive a call.
- When multiple mails or MessageR/F are received at the same time, the operation of the ring tone becomes as follows:

Received contents	Operation of the ring tone
Multiple mails are received	The ring tone set for the last received mail is used.
Mail and MessageR/F are received at the same time	
MessageR/F are received at the same time	The ring tone set for MessageR is used.

NOTE

<Ring tone priority for incoming calls>

- When the ring tone settings for incoming calls are duplicated, the priority is assigned as follows:
 - ① Ring tone for Multi number (additional number 1, 2)
 - ② Ring tone for Ring tone/Image (for individual)
 - ③ Ring tone for Ring tone/Image (for group)
 - ④ Ring tone for B mode of 2in1
 - ⑤ Ring tone for Select ring tone/Kisekai Tool setting
- * The priority is assigned as follows in the Ring tone/Image (② above) and the Ring tone/Image (③ above).
 - ① i-motion for Ring tone
 - ② i-motion for Calling display
 - ③ i-motion for Ring tone (i-motion with no video, such as a singer's voice), melody or Chaku-Uta-Full®

<Ring tone priority for mails (including SMS)>

- When the ring tone settings for mails are duplicated, the priority is assigned as follows:
 - ① Ring tone for Ring tone/Image (for individual)
 - ② Ring tone for Ring tone/Image (for group)
 - ③ Ring tone for Select ring tone/Kisekai Tool setting

<Image priority>

- When the image settings for incoming calls are duplicated, the priority is assigned as follows:
 - ① Image setting for Ring tone/Image (for individual)
 - ② Image setting for "Ring tone/Image (for group)"
 - ③ Still image stored in the phonebook
 - ④ Image setting for B mode of 2in1
 - ⑤ i-motion for Select ring tone
 - ⑥ Display setting/Kisekai Tool setting
- * The priority is assigned as follows in the "Ring tone/Image (for individual)" (① above) and the "Ring tone/Image (for group)" (② above):
 - ① i-motion for Ring tone
 - ② i-motion or still image/image for Select calling disp.

Setting the Vibration to Notify You of Incoming Calls <Vibrator>

You can set different vibration patterns to notify you when you receive a voice call, videophone call or mail.

- 1  **“Settings”** ▶ **“Incoming call”** ▶ **“Vibrator”** ▶ Select an item to set the vibration:

Select “Phone” to set the vibration for voice calls and 64K data communication.

Select “Mail” to set the vibration for i-mode mail, Area Mail, SMS and packet communication.

- 2 **Select the vibration pattern:**

Pattern 1-Pattern 3.....Vibrates in each pattern.

When you switch the highlighted item while selecting an item, the FOMA terminal vibrates in the highlighted pattern.

Melody linkage.....The FOMA terminal vibrates in a pattern matched to the melody set as the ring tone.

OFF.....The FOMA terminal does not vibrate.

- **Icons on the standby screen while setting the vibration pattern**

- : The vibration starts when receiving either voice or videophone calls.
- : The vibration starts when receiving either mail/MessageR/F.
- : Both “” and “” are set.

NOTE

- When the vibration is set, take care that the vibration does not move the FOMA terminal towards fire (e.g. on a space heater) or cause it to fall off a table, etc.
- Even when “Melody linkage” is selected, the FOMA terminal not always vibrates to the melody. When no vibration pattern is set for the melody or when an i-motion or Chaku-Uta-Full® is set as the ring tone, the FOMA terminal vibrates in Pattern 2.
- When receiving Area Mail, vibration is linked with the beep sound (when the buzzer sounds) or follows the settings in “Mail” under “Vibrator” (when an incoming Area Mail sounds).

<Vibrator priority>

- When the vibrator settings are duplicated, the priority is assigned as follows:
 - ① Vibrator for “Ring tone/Image (for individual)”
 - ② Vibrator for “Ring tone/Image (for group)”
 - ③ Vibrator setting

Changing the Ringback Tone

<Melody Call setting>

You can set whether to change the tone heard by the other party or not (YES/NO) when you receive a voice call.

- 1  **“Settings”** ▶ **“Incoming call”** ▶ **“Melody Call setting”** ▶ **“YES” or “NO”**

When you select “YES”, accesses the Melody Call i-mode site. By connecting the i-mode site, a packet communication charge is applied (a packet communication charge is not applied for setting sites).

Follow the instructions on the screen to set.

NOTE

- Melody Call is not activated when the other party dial up from a videophone call.

Setting the Keypad Tone

<Keypad sound>

- Setting this function to “OFF” also disables the battery level tone and the warning tone.
- The keypad sound is played at the level set in “Volume” during a call, and fixed at the same level while not talking on the phone.

- 1  **“Settings”** ▶ **“Other settings”** ▶ **“Keypad sound”** ▶ **“ON” or “OFF”**

Setting the Confirmation Tone for Charging

<Charge sound>

This function sets to emit a sound when charging starts or is completed.

- When the screen other than Standby screen is displayed or when Manner mode or Public mode (Driving mode) is set, the charge sound does not ring.

- 1  **“Settings”** ▶ **“Other settings”** ▶ **“Charge sound”** ▶ **“ON” or “OFF”**

Setting the Clock Alarm Tone

<Clock Alarm Tone set>

You can change the clock alarm tone for the alarm, schedule and To Do list.

- 1  ▶ **“Settings”** ▶ **“Clock”** ▶ **“Clock Alarm Tone set”** ▶ **Select any item:**
Select the alarm tone from “Melody/i-motion/Music/Voice announce/OFF”.

Setting the FOMA Terminal to Warn You before a Call Drops Out

<Quality alarm>

The FOMA terminal emits an alarm tone to warn you that the signal quality is deteriorating and the call is likely to drop out.

- The call may drop out without a warning tone if the signal quality worsens very quickly.

- 1  ▶ **“Settings”** ▶ **“Talk”** ▶ **“Quality alarm”** ▶ **Select an alarm tone**
Select the alarm tone from “No tone/High tone/Low tone”.

Setting the Ring Time for Incoming Mail

<Mail/Msg. ring time>

You can set a ring time when you receive mail or a MessageR/F.

- 1  ▶ **“Settings”** ▶ **“Incoming call”** ▶ **“Mail/Msg. ring time”** ▶ **Select an item to set the ring time:**
Select “Mail” to set the ring time for i-mode mail, Area Mail and SMS.

- 2 **“ON”** ▶ **Enter the ring time (01 to 30 seconds in 2 digits)**

- **To turn off the ring tone**
▶ **“OFF”**

When “Vibrator” is activated, the vibration stops.

Enabling the Tone to Ring through the Earphone and Speaker

<Headset usage setting>

You can set the FOMA terminal to play the ring tone or alarm notification through the earphones and speaker when a flat-plug earphone/microphone with switch (optional) is connected.

- 1  ▶ **“Settings”** ▶ **“External connection”** ▶ **“Headset usage setting”** ▶ **“Headset+speaker” or “Headset only”**

NOTE

- If “Ring volume” is set to “Silent”, there is no sound from the earphone or speaker.
- When “Phone vol.” and “Mail vol.” in the Manner mode (Original) is set to other than “Silent”, the ring tone still sound. However, Manner mode (Manner mode and Super silent) is set, the ring tone sounds only from the earphones.

Switching Off the FOMA Terminal's Tone

<Manner mode>

You can set the FOMA terminal not to play the ring tones or keypad tones through the speaker with a single key operation.

- Refer to the **Table 1** (p.93) and **Table 2** (p.93) for details of Manner mode setting.
- In "Manner mode set", you can select "Manner mode/Super silent/Original" as the FOMA terminal operation mode when Manner mode is set.

1 On the standby screen (1 second or longer)



You can set the Manner mode by pressing  (for 1 second or longer) during a voice call.

The FOMA terminal is set to Manner mode, "" appears, and the information specified in "Manner mode set" is displayed.



: The FOMA terminal notifies you using "Vibrator"



: "Ring volume" is set to "Silent"



: "Record message" and "Record VP message" is set to record messages (The number indicates the number of recorded messages)

During a voice call, the FOMA terminal emits a short double-beep ("bibip") and a message appears notifying you that Manner mode is set.

■ To cancel Manner mode

▶ On the standby screen  (1 second or longer)

You can cancel the Manner mode by pressing  (for 1 second or longer) during a voice call. Manner mode is canceled and "" disappears.

During a voice call, the FOMA terminal emits a short double-beep ("bibip") and a message appears notifying you that Manner mode is canceled.

NOTE

- Even in Manner mode, the camera shutter clicks.
- When the vibration is set, take care that the vibration does not move the FOMA terminal towards fire (e.g. on a space heater) or cause it to fall off a table, etc.

 
Modifying Manner Mode

<Manner mode set>

You can select the FOMA terminal operations used in Manner mode.

1 ▶ "Settings" ▶ "Incoming call" ▶ "Manner mode set"

The "Manner mode set" screen appears.



2 Select any item:

Manner mode.....Mutes all tones played through the speaker and uses vibration to notify you of incoming calls, etc. However, confirmation tones played through earpiece (when a voice memo or memo is played) are not muted.

Super silent.....Mutes all tones played through the speaker and confirmation tones played through the earpiece and uses vibration to notify you of incoming calls, etc.

Original → p.94

[Table 1] When you set Manner mode

Item	Manner Mode	Super silent	Original (displays the Original manner mode settings)
Record msg. activation	OFF		"Record msg." setting
Vibrator	ON		"Vibrator" setting
Ring volume for voice/videophone call and 64K data communication	Silent		"Phone vol." setting
Ring volume for mail, packet communication, MessageR/F and Area Mail	Silent		"Mail vol." setting
Alarm volume (including snooze function)	Silent		"Alarm vol." setting
i-appli volume	Silent		"i-appli vol." setting
Schedule/To Do List/Cost limit alarm volume	Silent		"Phone vol." setting
Activation and completion tones for recorded messages, voice memos, etc.	ON	OFF	"VM tone" setting
Keypad sound	OFF		"Keypad sound" setting
Microphone sensitivity during calls	Up		"Mic sensitiv." setting
Holding tone	Silent		"Phone vol." setting Played at "Level 1" when set to other than "Silent"
On hold tone	Silent		"Phone vol." setting Played at "Level 2" when set to "Step"
Low-voltage alarm	OFF		"LVA tone" setting Even when "Phone vol." is set to "Silent", the low-voltage alarm sounds at "Level 1" when "LVA tone" is set to "ON".
Reading out received mails	"Phone" setting of "Ring volume" Played at "Level 2" when set to "Silent" or "Step" Valid only when "Read out message" in the function menu of the received mail detail screen is selected		
Voice clock (Standby, Snoozing) Missed call/new mail confirmation tones when the FOMA terminal is folded	Silent		"Phone vol." setting Played at "Level 2" when set to "Step"
ToruCa acquisition tone	Silent		"Phone vol." setting Played at "Level 4" when set to "Step"

[Table 2] When earphones are connected

Item	Manner Mode	Super silent	Original (displays the Original manner mode settings)
Reading out received mails	"Phone" setting of "Ring volume" Played at "Level 2" when set to "Silent" or "Step"		
Voice clock (during standby or snooze) and missed call/new mail confirmation tones when the FOMA terminal is folded	"Phone" setting of "Ring volume" Played at "Level 2" when set to "Silent" or "Step"		"Phone vol." setting Played at "Level 2" when set to "Step"
Music player volume	Volume setting of the music player (p.274)		

Setting the Original manner

You can set your preferred Manner mode setting.

- The following are the default settings of the “Original” manner mode:
 - Record msg.: OFF
 - Vibrator: ON
 - Phone vol.: Silent
 - Mail vol.: Silent
 - Alarm vol.: Silent
 - i-appli vol.: Silent
 - VM tone: ON
 - Keypad sound: OFF
 - Mic sensitiv.: Up
 - LVA tone: OFF

1 Manner mode set screen (p.92) ▶ “Original” ▶ Select any item:

Record msg......Sets the Record message. → p.68

Vibrator.....Sets the vibrator. → p.90

Phone vol......Sets the ring tone volume for voice/ videophone calls and 64K data communication. → p.64

Mail vol......Sets the ring tone volume for mail, packet communication and MessageR/F. → p.64

Alarm vol......Sets the volume of the alarm. → p.280

i-appli vol......Sets the volume of the i-appli. → p.199

However, “Step” cannot be set.

VM tone.....Sets confirmation tones for “Record msg.”, “Voice memo”, etc.

Keypad sound.....Sets the keypad sound. → p.90

Mic sensitiv......Selects from “Normal/Up” for the microphone sensitivity during calls.

LVA tone.....Sets the low-voltage alarm. “When the battery runs out” → p.45

2 Set the respective items ▶ (Finish)

NOTE

- The record message function set in “Original” starts up after the ringing time set in “Record message” (p.68) (when set to “OFF”, the recording starts after 13 seconds).
- If the microphone sensitivity during calls is set to “Up”, the volume of the voice heard by the other party raises even if you speak quietly. The microphone sensitivity is set to “Normal” when shooting movies in “Camera” mode.

Changing the Display

<Display setting>

You can also set the still images you shot or downloaded images as the standby screen, dialing/calling screen, etc.

1 “Settings” ▶ “Display” ▶ “Display setting”

The “Display setting” screen appears.



Display setting

2 Select any item:

Stand-by display.....Changes the standby screen image. → p.95

Wake-up display.....Specifies a message or image displayed when the FOMA terminal is turned on.

OFF.....Does not display an image, etc.

Message.....Enters a message. You can enter up to 50 double-byte or 100 single-byte characters.

My picture.....Selects an image to be displayed from My picture.

Dialing/Calling/V.phone Dialing/V.phone Calling/

Mail sending/Mail receiving.....Sets the image displayed when making/receiving voice/videophone calls or sending/receiving mails (i-mode mails and SMS).

■ **Dialing/V.phone Dialing/Mail sending setting**
Select from My picture.

■ **Calling/V.phone Calling/Mail receiving setting**
“Changing the Ring Tone (Step 2)” → p.88

Check new messages • Mail rec'd result.....Selects the image displayed for “Check new messages” (i-mode mails and messages), “Check new SMS” or mail received result screen from My picture.

NOTE

- Some i-motion cannot be specified.
- The Flash movie clock time on the standby screen will be adjusted within a minute after playback.

<Priority sequence for standby screen>

- Priority is assigned as follows when standby screen settings are duplicated:
 - ① Standby screen (i-appli)
 - ② Display setting/Kisekai Tool setting

Changing the standby screen image

- Some screens change its image depending on the timing.
- This function sets the standby screen when 2in1 is in A mode or "2in1 setting" is set to OFF. The settings are not applied when set to "B mode" or "Dual mode". Set "Standby display" of "2in1 setting".

1 Display setting screen (p.94) ▶ "Stand-by display" ▶ Select any item:

OFF.....No image is displayed.

Calendar.....Sets a calendar.

Background.....For the background image for the calendar, selects one from My picture.

No background.....Displays the calendar only.

My picture.....Selects the standby screen image. To set "Stand-by books", select "恋の格言" (Love maxim), "花言葉" (Language of flowers) or "ミッフィーおぼけ" (Miffy the boogie man).

i-motion*.....Selects the i-motion to be displayed on the standby screen.

i-appli display.....Sets the i-appli standby screen. → p.208

When the i-appli standby screen is set, "★" is displayed.

Random display.....Displays an image in the specified folder at random each time you open the FOMA terminal or display the standby screen.

* : When you select the i-motion in the Movable contents folder, the content is moved to the Inbox folder of the FOMA terminal, then set.

■ When the screen for setting the display style is displayed

▶ Select the display style ▶ Check the image ▶  (Set)

Following display styles are available:

- Centering disp. (centering an image on the screen)
- Fit in disp. (enlarging/reducing an image size until its height or width fits to the screen)
- Arrange disp. (displaying images from upper left side in order)
- Full-screen disp. (enlarging or clipping an image to fit it into the screen size)

NOTE

- You may not select how to display depends on images you select.
- If a movie or i-motion is set in the standby screen, it is played when you open the FOMA terminal.
- When a Flash movie or GIF animation is set as the standby screen, the movie or animation is played when the following operations are performed (no sound):
 - FOMA terminal is opened
 -  is pressed on the standby screen
 - Return to the standby screen from another screen
 Some Flash movies work as clock. If the clock stops, follow the above procedure to restart the clock. If Keypad lock, etc. is active, Flash movies do not work. Release the lock.
- When "Bigger" is set to "Clock display" and Calendar is also set, "Big" is applied.

● When you set the calendar for the standby screen

The calendar appears on the standby screen. You can quickly and easily refer to previous or next calendar dates or activate the schedule.

■ To check the adjacent months on the calendar

Press  on the standby screen to select the shortcut icons on calendar. After using  to highlight the calendar, press  (Select). The shortcut icons disappear and you can check the calendar of previous or next month with .

■ To activate the schedule function

When the calendar of the previous or the next month can be displayed with  or , press  (Select) to launch the schedule function and store a scheduled event for the displayed month.

Displaying Phonebook Images When You Receive Calls

<Disp. phonebook image>

You can set whether to display a still image when receiving a voice/videophone call from a phone number of which still image is stored in the phonebook (ON/OFF).

1  ▶ "Settings" ▶ "Incoming call" ▶ "Disp. phonebook image" ▶ "ON" or "OFF"

Setting the Color for Incoming Call Display

<Disp. call/receive No.>

You can display names, phone numbers or mail address on the Redial/Received calls screen or sent/received address list screen with their font color changed.

1 "Settings" ▶ "Incoming call" ▶ "Disp. call/receive No." ▶ Select a color

- To revert the setting to the original
▶  (Reset)

NOTE

- Press  (Change) to switch the number of colors to be selected from 16 to 256. The pallet of 16 colors and 256 colors switches each time you press  (Change).
- This setting may change depending on the "Color pattern" setting. To return to the setting corresponding to "Color pattern", press  (Reset) after changing this setting.
- When you use 2in1, information of Number A/Address A are displayed in the color set in this function. To display the information of Number B/Address B in different color, set "Disp. call/receive No." of "2in1 setting".

Preventing Others from Peeping the Screen

<Shield view>

You can make it difficult for others to see the contents on the display.

1 (1 second or longer)

Shield view is set and "" appears.

- To release the setting
▶  (for 1 second or longer)

NOTE

- You cannot set or release shield view during editing the text or i-appli is activated.

Setting the Display and Keypad Lighting

<Backlight>

1 "Settings" ▶ "Display" ▶ "Backlight" ▶ Select any item:

Lighting.....Selects the normal backlight operation and Power saver mode from "ON/OFF".

Enter the waiting time for the Power saver mode (01 to 20 minutes in 2 digits) when you set the Power saver mode to "ON".

- You can also change the backlight operation (ON/OFF) with  (1 second or longer).
- Setting the normal lighting settings for the backlight to "OFF" displays the "" icon on the standby screen.
- If you set the Power saver mode to "ON", the standby screen turns off when the specified waiting time has elapsed. If any key is pressed during the Power saver mode, the Power saver mode is canceled.

Charging.....Selects the backlight operation during charging from "Standard/All time ON".

- When set to "Standard", the backlight lights up with the setting of Lighting ON (not enter Power saver mode).
- When set to "ON", the Illuminance sensor detects the brightness of surroundings and the brightness of the backlight on the screen is automatically adjusted. Turns the keypad light ON/OFF automatically.

Area.....Selects the lighting area of the backlight form "LCD+Keys/LCD".

Brightness.....Selects backlight brightness from "Bright/Middle/Dark".

NOTE

- When "Lighting" is set to "ON", the backlight turns on when a call is received and lights for about 10 seconds when you turn the FOMA terminal on, press one of the keys, or unfold the FOMA terminal. The backlight also stays on while using the camera or playing a movie/i-motion. If you select "OFF", the backlight does not turn on. However, the backlight turns on during movie shooting regardless of the "Lighting" setting.

Changing the Display Design

<Display design>

You can change the text, background and the background pattern for the function keys.

1 ▶“Settings”▶“Display”▶“Display design”▶Select any item:

Color pattern.....Selects the color pattern from “White/Yellow/Blue/Red/Black”.

Icon pattern.....Selects the design for the Battery icon or Antenna icon from Pattern “1” to “5”.

Soft key.....Selects the background pattern for the function keys from Pattern “1” to “3”.

NOTE

- There are some screens or functions that are not affected by the changes made to the settings of this function, such as i-mode sites.

Changing the Menu Display

Setting the menu display mode

<Menu display set>

You can change the display of the branch settings (functions) of “Settings” and the main menu design. You can also set the last one function of the Main Menu and Simple Menu.

1 ▶“Settings”▶“Display”▶“Menu display set”

The “Menu display set” screen appears.



Menu display set

2 Select any item:

Menu display.....Selects the display mode for the branch settings from “List/Detail”.

Theme.....Selects the background or icon for the main menu from “Organic Pink/Shiny White/Geometric Gray/エリクル @MEMORIAL (Eriicle@MEMORIAL)/Standard Menu/Large Menu/Simple Menu/Original theme/Kisekai Tool”.

- When Original theme is selected → p.97
- When Kisekai Tool is selected → p.242

Memory focus.....Sets whether to highlight the last selected function when the Main Menu or Simple Menu is redisplayed (Last one function).

Reset menu op. log.....Resets the menu for the automatically sort of menu items (p.34).

* : Only available on the menu display that supports this function.

NOTE


- Last one function memorize the main menu icon when a branch menu is displayed. The icon is not memorized when the operation is interrupted while sub item is selected.

Changing the main menu screen

You can change the icons and background image used on the main setting selection screen (main menu).

1 Menu display set screen (p.97)▶“Theme”▶“Original theme”

The “Original theme” screen appears.

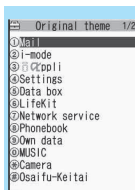

Original theme

Function menu▶p.98

2 Select any item:

Mail • i-mode • i-appli • Settings • Data box • LifeKit • Network service • Phonebook • Own data • MUSIC • Camera • Osaifu-Keitai.....

Selects the icon images for the main menu from My picture.

Background image.....Selects the background image for the main menu from My picture.

NOTE

- You cannot specify images whose file size exceeds 100K bytes.
- If the image is larger than the display area, the size is reduced without changing the aspect ratio, and displayed in the middle if the image is smaller than the display area.

FUNC Original theme screen (p.97)

- This setting is displayed only when you change the Original theme setting.

Reset.....Restores the changed main menu icon or background image to the default settings.

All reset.....Restores all the main menu icons and background image to the default settings.

Creating an My select


<My select>

You can store the frequently used functions as "My select" and easily call them up. → p.32

- You can store up to 10 My select entries.
- You can set the main menu of "Mail", "i-mode" or "i-appli" or each item under "Settings", "Data Box", "LifeKit", "Service", "Phonebook", "Own data", "MUSIC" and "Osai-fu-keitai" as My select.
- You cannot store the same function twice.

1 **ch (MySelect)**

The "My select" screen appears.

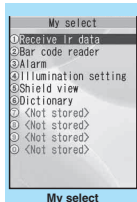2 Highlight an item to be stored or changed **(Edit) Use to select the function**

My select
Function menu → p.98

FUNC My select screen (p.98)

Add to org. menu.....Creates My select.

Sort.....Press  to move the highlighted menu then sort My select.

Add shortcut icon → p.100

Reset my select.....Restores the menu to the default settings.

Release.....Removes one function from My select.

Release all.....Removes all the stored functions from My select.

Setting the Display Mode of Sub Display

<Illumination stg.>

Set the contents on Sub display.

- "Sub Display" → p.29
- Illumination can be downloaded from website. → p.154

Downloaded Illumination is stored in Data Box and check it. → p.226

1 **"Settings" ▶ "Display" ▶ "Illumination stg." ▶ "ON"**

- To display nothing on Sub display
▶ "OFF"

2 Select any item:

Select pattern.....Selects from "Incoming call/Call light/Mail receive/Close phone/Charging start", then selects the animation* to be displayed.

Missed call.....Sets flashing of the Sub display light to "ON" or "OFF" when you have a missed call.

Missed mail.....Sets flashing of the Sub display light to "ON" or "OFF" when receiving a new message (i-mode mail, Area Mail or SMS).

Time signal.....Sets to show the time signal on Sub display from the interval of "30 minutes/60 minutes/OFF". Selects display cycle from "30 minutes/60 minutes" when displaying time signal.

Birthday.....Sets flashing of the Sub display light to "ON" or "OFF" for birthday notification when My Profile stores your birthday.

Called/Mail.....Sets "Called" or "Mail" to "ON"/"OFF". Set "Called" to "ON" to display the number (name) of a caller or Chaku-moji. Set "Mail" to "ON" to display the sender and subject.

* : When selecting an item, move the highlight to press  (Select), then that animation appears on Sub display.

3 Set the respective items **(Finish)**

Setting the Flashing Mode of the Incoming Call Lamp for Incoming Calls

<Illumination>

You can set the color and pattern (flashing pattern) with which the incoming call lamp flashes when you receive voice/videophone calls, mail or MessageR/F.

- You can set different flashing colors respectively for incoming calls and messages from specific phone numbers, e-mail addresses and groups. → p.82

1 **“Settings” ▶ “Incoming call” ▶ “Illumination” ▶ Select any item:**

Select color.....Selects the flash color of the incoming call lamp from “Phone/Videophone/Mail/MessageR/MessageF”.

When you switch the highlighted item while selecting an item, the incoming call lamp lights up in the highlighted color.

Color 1 to 12: The lamp flashes by the selected color.

Gradation: The lamp flashes by the colors of 1 to 12 in the order.

When “Mail” is selected, the incoming call lamp for i-mode mails and SMS is set.

Set pattern.....Selects the incoming call lamp flashing pattern from “Standard/Melody linkage”.

Missed/Unread info.....Sets whether to keep on flashing the incoming call lamp when a missed mail or new mail (i-mode mail, Area Mail or SMS) icon is displayed on the standby screen (The interval of flashing becomes longer in Power saver mode).

NOTE

- If “Melody linkage” is set and no vibration pattern is stored for melody linkage in the ring tones, the “Standard” pattern is used for Chaku-motion or Chaku-Uta-Full®.
- The incoming call lamp for Area Mail operates as follows:
 - Flash color of incoming call lamp: Red (Color 9)
 - Pattern setting: Lights with melody linkage when the buzzer sound beeps or follows the setting in this function when an incoming call sound rings.

NOTE

- When multiple mails or MessageR/F are received at the same time, the operation of the incoming call lamp becomes as follows:

Received contents	Operations of the incoming call lamp
Multiple mails are received	Operates according to the incoming call lamp setting for the last received mail.
Mail and MessageR/F are received at the same time	
MessageR/F are received at the same time	Operates according to the incoming call lamp setting for MessageR.

<Incoming call lamp priority>

- When the incoming call lamp settings are duplicated, the priority is assigned as follows:

- ① Indicator for Ring tone/Image (for individual)
- ② Indicator for Ring tone/Image (for group)
- ③ Incoming call lamp setting

Setting the Flashing Mode of the Incoming Call Lamp During Calls

<Illumination in talk>

You can set the flashing mode of the incoming call lamp during a voice or videophone call.

1 **“Settings” ▶ “Talk” ▶ “Illumination in talk” ▶ Select any item:**

OFF.....The lamp does not flash.

Color 1 to 7.....The lamp flashes by the selected color.

Gradation 1.....The color changes while flashing.

Gradation 2.....The color changes while lighting.

Gradation 3.....The flashing pattern of quick color change is repeated.

Setting the Lamp for IC Card Function

<IC card Illumination>

Set the incoming call lamp lighting/flashing (ON/OFF) while using IC card function.

1 **“Osaifu-keitai” ▶ “Setting” ▶ “IC card Illumination” ▶ “ON” or “OFF”**

Changing the Font

You can change the characters displayed on the screen to your favorite font (typeface).

1 On the standby screen ▶ [7] (1 second or longer) ▶ Select any item:

Font type.....Selects the font type form "Gothic/Ming-cho".

Thickness.....Selects the thickness from "Thin/Bold".

Character size.....Sets the character size for the respective screens.

Standard • X-large.....Sets the character size of the screens to "Standard" or "X-large" all at once.

Separate setting.....Sets the character size of the screens respectively.
"Screens that can be set with Separate setting" → p.100

■ Screens that can be set with Separate setting

Item	Target screen for setting
Char. Input	The character entry screen (Edit), the new mail screen (excluding SMS), the preview screen (excluding he sent SMS, etc)
Mail	Mail list/detail screen, screens displayed when referring to Header/Signature/Template
i-mode	Sites screen, Screen memo, Message list/detail screen
Full brw.	Full Browser screen (except Original layout)
Phonebook	Phonebook list/detail screen, My Profile screen
History data	Redial/Dialed/Received calls screen, Address list screen
i-Channel	i-Channel ticker

NOTE

- The character in the enter phone number screen is not included in this function.
- You can change the character size in the following menus.
Char. Input: CHG input size → p.299
Mail: Font size → pp.187, 188
i-mode: Font size → p.157
Full brw.: Change font size → p.222
Phonebook: Big font ⇄ Standard font → pp.80, 81, 287
History data: Big font ⇄ Standard font → pp.58, 188
i-Channel: Ticker size setting → p.164

Setting the Clock Display

<Clock display>

You can set the Clock display format (12h clock/24h clock), size and character color. You can also set not to display the date or time.

- In the screens other than standby screen, only the time is displayed in small size at the top of the display regardless of this setting.
- The world clock can be displayed when setting "size" to "small".

1 [MENU] ▶ "Settings" ▶ "Clock" ▶ "Clock display" ▶ Select any item:

Style.....Selects from "12h clock/24h clock".

Size.....Selects the display size of date and time from "Bigger/Big/Small/Up Small/OFF".

Color.....Selects the color from "Black/White".

Display type.....Selects the type from "World watch OFF/World watch ON".

NOTE

- The Flash movie clock time on the standby screen cannot be set in this function.
- To change the Flash movie clock time on the standby screen, select an option from "Stand-by display" under "Display setting".

Using Shortcut Icons

<My shortcut>

Pasting frequently phone numbers and functions to the standby screen as shortcut icons provides a quick and simple way of accessing those numbers and functions. When you cannot answer a received call or when you receive a mail, the icon appears on the standby screen.

■ Shortcut icons that can be pasted

Icon	Operation when selected
 1	Phone number: Displays the Enter phone number screen with the phone number entered
 1	Mail address: Displays the New mail screen with the e-mail address entered
 1	SMS address: Displays the New SMS screen with the phone number entered
 1	URL (i-mode): Displays the site
 1	URL (Full Browser): Displays the site
 1	Melody: Plays the melody
 1	Image: Displays the image

Icon	Operation when selected
	Movie or i-motion : Plays the movie or i-motion
	Chara-den : Displays the Chara-den
	i-appli software : Launches the i-appli
	Inbox folder : Displays the Received mail list screen
	Photo mode : Activates the Photo mode
	Movie mode : Activates the Movie mode
	Voice mode : Activates the Voice mode
	To Do list : Displays the To Do list screen
	Schedule : Displays the Schedule screen
	Text memo : Displays the Text memo screen
	Text reader : Activates the Text reader
	Bar code reader : Activates the Bar code reader
	i-Channel : Displays the i-Channel
	Music&Video Channel : Displays the Music&Video Channel screen
	Music : Displays the Music player screen
	Receive Ir data : Displays the Receive Ir data screen
	Dictionary : Displays the Dictionary screen
	My select : Displays My select
	Calculator : Activates the Calculator

* When a shortcut icon is selected, only the first 11 double-byte or 22 single-byte characters of the title are displayed. You can edit the title. → p.102

■ Advising shortcut icons

Icon	Operation when selected
	New mail : Displays received mail detail screen
	New message : Displays the received message detail screen
	New ToruCa : Displays the ToruCa list screen
	Missed call : Displays the missed call screen
	Record message : Displays the play/erase msg. screen
	Record VP message : Displays the play/erase VP msg screen
	Message in the voice mail service center : Displays the voice mail screen
	Missed alarm : Displays the details of the missed alarm
	If i-appli could not be launched automatically : Displays the auto-start info screen

Icon	Operation when selected
	If i-appli standby screen shut down due to an error : Displays the security error history screen
	Receive software update notifications : Updating Software When the software update has been completed : Displays the update results screen after entering your security code When the timer rewriting is set : Displays the install content preview screen
	When accumulated charge exceeds the cost limit set : Displays the alarm information for notify cost limit after entering your security code
	Automatic updating result of the pattern data for the scanning function has been completed : Displays the automatic updating result of the pattern data
	When the updating has not been done successfully or when the new pattern data has been released : The screen prompting you to update the pattern data for the scanning function appears
	When the Data Security Service could not be updated : Displays the screen that allows you to connect to the Data Security Center after you enter your security code
	When the Music&Video channel download has been completed : Displays the Music&Video Channel screen

* The shortcut icon that provides information disappears when it is called from each function or when it is performed.

* To erase the display of the shortcut icon that provides information, hold down **[CLR]** for 1 second or longer (you cannot erase some icons).

Pasting shortcut icons

Select "Add shortcut icon" from the function menu on the screen of the function you want to paste, the list screen or the detail screen of the data.

- (My selection), (Photo mode) and (Music) are pasted at default.
- You can paste up to 15 shortcut icons for Theme 1 to 3 respectively.

<Example: Pasting a phone number from the phonebook>

 
"Add shortcut icon" in the Function menu (Phonebook detail screen) → p.81



Using shortcut icons to retrieve data or functions

1 On the standby screen ▶

The "Shortcut icon" screen appears, and you can select a shortcut icon. The title of the highlighted shortcut icon is displayed in the balloon.



Function menu ▶ p.102

2 Use to select the shortcut icon


■ If there are 6 or more shortcut icons stored

The "

Changing the theme of My shortcut on the standby screen

1 ▶ "Settings" ▶ "Display" ▶ "My shortcut"

The "My shortcut" screen (Theme) appears. The "

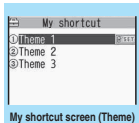

Function menu ▶ p.102

2 Select a theme ▶ "YES"

 
When adding shortcut icons to the standby screen (p.101) after this procedure, you can sort and paste shortcut icons to the selected theme.

■ To check the theme contents

▶ Highlight the theme ▶

 (Detail)

"My shortcut" screen (Detail) appears.



Function menu ▶ p.102

Shortcut icon screen (p.102)/ My shortcut screen (Theme/ Detail) (p.102)

FUNC

- As available functions are different between the Shortcut icon screen and My shortcut screen (Theme/Detail), displayed items vary.

Create icon Selects icons to be pasted from the function name list, then selects the theme.

Sort Changes the position of desktop icons.

Shortcut setting Selects the icon display method from "Display always/Display at use". When set to "Display at use", the desktop icons are displayed only when you press  on the standby screen.

Edit title You can enter up to 16 double-byte or 32 single-byte characters for the icon title, and 11 double-byte or 22 single-byte characters for the theme.

Shortcut icon info Displays the icon title, type, contents, etc.

Copy Selects from "Copy this/Copy selected/Copy all" and copies the icons to another theme.
"About multiple-choice" → p.39

Move Selects from "Move this/Move selected/Move all" and moves the icons to another theme.
"About multiple-choice" → p.39

Reset my shortcut Restores the settings to the default settings ("My selection", "Photo mode" and "Music").

My selection Displays My select. → p.98

Delete Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" → p.39

Setting My shortcut

1 On the standby screen ▶ ▶ (Settings) ▶ Select any item:

Change theme Changes the theme of My shortcut.

Display setting Selects the icon display method from "Display always/Display at use". When set to "Display at use", the Shortcut icons are displayed only when you press  on the standby screen.

Stand-by display Changes the standby screen image. → p.95

Kisekae Tool set. → p.104

Set time Sets the clock on the standby screen.
→ p.100

Selecting the Icons to Display on the Standby Screen

<Icons setting>

You can set whether to use  or not (ON/OFF) for selecting the icons, date or time displayed on the standby screen.

- 1  "Settings" ▶ "Display" ▶ "Icons setting" ▶ "ON" or "OFF"

Selecting displayed icons

- 1 On the standby screen ▶  ▶ Highlight the icon with 




The title of the highlighted icon is displayed.

- 2  (Select)

The setting screen for the selected icon, etc. is displayed.

Icon you can select

Icon	After selected
	Displays "Display design"
	Displays "Display design"
	Displays the screen for releasing "Self mode"
 (Red)	Displays the unread mail list
 (Red)	
	Displays the "Inbox"
 (Red)	Displays "MessageR" or "MessageF"
 (Red)	
 (Red)	Displays the screen for selecting "MessageR" or "MessageF"
 (R: Red)	
 (F: Red)	
 (F: Red)	
	Displays the unread mail list
 (Red)	Performs "Check new messages"
 (Red)	
 (Red)	
	Displays the "Lock function selection" screen

 Icon	After selected
	Displays the screen for releasing "IC card lock setting"
	Displays "USB mode setting"
	Displays the screen for selecting "Vibrator" or "Mail/Msg. ring time"
	When Manner mode is not set : Displays the screen for selecting "Ring volume" or "Mail/Msg. ring time" When Manner mode or Super silent mode is set : Displays the message that the setting is not available When Original manner is set : Displays the screen for selecting "Original" or "Mail/Msg. ring time"
	Displays "Manner mode set"
	Displays "Remote monitoring"
	Displays the screen for selecting "Schedule", "Alarm", "To Do list"
	Displays "Voice Mail"
	Displays a message notifying that nothing is recorded. Or, displays "Play/Erase msg."
	Displays a message notifying that nothing is recorded. Or, displays "Play/Erase VP msg."
	Displays the screen for selecting "Backlight" or "Shield view"
	Displays the screen for setting "Keypad lock"
	Displays "Side key guard"
Date	Displays "Schedule" Displays "Set time" when the time is not set
Main clock	Displays "Alarm" Displays "Set time" when the time is not set
Sub clock	Displays "World watch"

Icon	After selected
	Switches and displays the active tasks

Setting the Kisekai Tool

<Kisekai Tool setting>

You can change various design of the FOMA terminal such as screens and ring tones all at once with the Kisekai Tool package.

- In addition to Kisekai Tool designed for the body color, “エクリル@MEMORIAL”, “ドコモダケ_S0705” and “ミッフィー” are pre-installed at the time of purchase. When set to “ドコモダケ_S0705”, the main menu appears in Japanese.
- You can download the Kisekai Tool package from sites. → p.155
The downloaded packages are stored in Data Box and you can check the contents. → p.227
- The following items can be set all at once.
 - “Display setting”
 - “Select ring tone”
 - “Clock Alarm Tone set”
 - “Menu display set” - “Theme”
 - “i-Channel” - “i-Channel setting” - “Ticker color setting”
 - “Change skin” of the music player
 - “Clock display”
 - “Illumination stg.” - “Select pattern”
 - Display design
- When 2in1 is set, Kisekai Tool set in any mode is applied to all modes/phone numbers/mail addresses except for the following:
 - Standby screen, Voice call ringing screen or Videophone ringing screen are applied only to A mode.
 - Ring tones for voice call and videophone call are applied only to A mode.
 - Ring tone for mail is applied only to A mode.
- When you change the design of the menu display using Kisekai Tool, the menu structure may change in accordance with frequency of using functions. Also, you cannot access some functions entering the menu number assigned to the functions.

Setting a package

- If you store the current settings to “お気に入り” (My favorite) before setting all at once, you can restore the stored setting later. → p.105

1 MENU ▶ “Settings” ▶ “Kisekai Tool setting”

The “Kisekai Tool set” screen appears.



Kisekai Tool set

Function menu ▶ p.104

2 Select an item ▶ “YES”

No item is set in “お気に入り” (My favorite) at the time of purchase.

■ To check the settings

▶ Highlight an item ▶ (Detail) ▶ Highlight an item ▶ (Play)

■ Search the packages by i-mode

▶ “Search by i-mode” ▶ “YES”

NOTE

- Items to be changed vary depending on the package.
- When a package is set, the color of “Disp. call/receive No.” may be changed.
- Highlighting the pre-install package in Kisekai-tool setting list screen displays the color pattern and standby image and the thumbnail of the main menu.

FUNC

Kisekai Tool set list screen (p.104)

Edit title.....Edits the title. You can enter up to 10 double-byte or 20 single-byte characters.

Check Setting info.....Checks the set contents.

Reset Setting info.....Deletes the “お気に入り” (My favorite) settings.


Storing the current setting to “お気に入り” (My favorite)

1 Kisekai Tool set list screen (p.104)▶ Highlight “お気に入り”(My favorite)▶

(Detail)

The “Contents checking” screen appears.

“No data” appears for items with no settings.

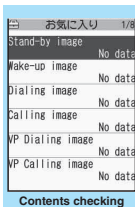

お気に入り 1/8	
Stand-by image	No data
Wake-up image	No data
Dialing image	No data
Calling image	No data
VP Dialing image	No data
VP Calling image	No data

Contents checking
Function menu▶p.105

2 (FUNC)▶“Take Setting info”▶“YES”

● Changing “お気に入り” (My favorite) settings

You can change the items stored in “お気に入り” (My favorite) on the contents checking screen.

1 Contents checking screen (p.105)▶ Select an item▶Change the setting

NOTE

- The details of “i-αppli display” is not stored to “Stand-by image” in “お気に入り” (My favorite).
- If an image, i-motion or melody stored in “お気に入り” (My favorite) is deleted, it is also deleted from “お気に入り” (My favorite) and “No data” appears.

FUNC

Contents checking screen (p.105)

Set all^{*1}/**Finish**^{*2}.....Sets to the currently displayed items all at once.

Take Setting info^{*2}.....Retains the current settings and stores in “お気に入り” (My favorite).

Reset Setting info^{*2}.....Deletes settings stored in “お気に入り” (My favorite) and set all items to “No data”.

^{*1}: Available only for “ドコモダケ_SO705i”, “ミッフィー” and downloaded Kisekai Tool package () from sites.

^{*2}: Displayed only with the data with “  ”

Security Settings

About Your Security Codes

Security Codes Used on the FOMA Terminal	108
Changing Your Security Code.....	Change security code 109
Setting Your PIN Codes	PIN setting 109
Release PIN Lock	109

Restricting the Phone Controls and Functions

Preventing Others from Using Your Terminal.....	Dial lock/Omakase Lock 109
Preventing Others from Viewing Your Phonebook or Schedule Data	Secret mode/Secret data only mode 111
Preventing Others from Viewing Data.....	Secret folder 112
Preventing Others from Viewing Your Personal Information or Performing the Phone/Mail Operations	Original lock 114
Locking the Key Operation Automatically	Keypad lock 118
Using the IC Card Authentication.....	IC card authentic. 118
Disabling the Side Key	Side key guard 120

Restricting Incoming and Outgoing Calls or Transmissions

Preventing Unwanted Mail Display	Mail box lock/Folder lock 120
Restricting Incoming and Outgoing Calls for Specific Phone Numbers	Restrictions 120
Rejecting Calls from Unidentified Callers	Call setting w/o ID 122
Muting Ring Tones for Callers Not Stored in the Phonebook.....	Ring time(sec.) 122
Rejecting Calls from Callers Not Stored in the Phonebook	Reject unknown 122
Disabling Making/Receiving Calls, etc.	Self mode 123

Other Security Settings

Data Security Service	Data Security Service 123
Other Security Settings.....	124

Security Codes Used on the FOMA Terminal

To make the FOMA terminal more convenient and secure, some functions require the security code. In addition to the security code for various FOMA terminal operations, you also have the Network security code for accessing network services and the i-mode password. Make use of the FOMA terminal using an appropriate security code according to the purpose.

Notes on the security codes

- Avoid using a readily predictable number such as "birthday", "part of the phone number", "street address number or room number", "1111" and "1234". Make sure to make a note of the security code you set in case you forget it.
- Take great care not to disclose your security code to others. If your security code is disclosed to others and abused, NTT DoCoMo shall have no liability for any damage due to any unauthorized use of it.
- DoCoMo by no means inquire your security code.
- If you forget any of your security codes, you must bring your official identification providing that you are the subscriber (such as a driver's license), the FOMA terminal, and the FOMA card (UIM) with you to an NTT DoCoMo service counter. For details, contact the inquiries number provided on the back of this manual.

■ Security Code

The security code is set to "0000" (4 zeros) at the time of purchase. You can change the security code by yourself. → p.109

When the security code screen appears, enter the 4 to 8 digit security code and press  (Set).

- The entered security code is displayed as "_" and the numbers are not displayed.
- When you enter a wrong security code or enter nothing for about 15 seconds, a warning tone sounds and a warning message appears.

■ Network Security Code

The network security code is a 4-digit number required for using the DoCoMo e-site or various network services. You can set any number at the time of subscription but you can change it afterwards by yourself. If you have the "DoCoMo ID/Password" for general PC support site "My DoCoMo", you can change the network security code from your PC.



You can also change it by yourself using i-mode, from "各種手続き" (Applications and Procedures) on the DoCoMo e-site. (Only in Japanese)

- * For details of "My DoCoMo" and "DoCoMo e-site", see the back of the back cover of this manual.

■ i-mode Password

The 4-digit "i-mode password" is required when registering/unregistering My Menu, subscribing to/unsubscribing from the message service or the pay services of i-mode (There may be other passwords set independently by the information service providers). The i-mode password is set to "0000" (4 zeros) at the time of subscription. You can change the i-mode password by yourself.

You can change the password using i-mode, by selecting  "iMenu"  "English iMenu"  "Options"  "Change i-mode password".

■ PIN1 Code and PIN2 Code

You can set two security codes of PIN1 code and PIN2 code for the FOMA card (UIM). These security codes are set to "0000" (4 zeros) at the time of subscription. You can change the PIN1/ PIN2 codes by yourself. → p.109
PIN1 code is a 4 to 8 digit number (code) you enter each time you insert the FOMA card (UIM) to the FOMA terminal or you turn on the FOMA terminal. This code identifies you as the user and is designed to prevent improper use of your FOMA card (UIM) by others. When the PIN1 code entry set is set to "ON", entering the PIN1 code enables you to make and receive calls and use the functions of the FOMA terminal.

The PIN2 code is a 4 to 8 digit number that is used for resetting the total cost, using or requesting the user certificates, etc.

- * When you purchase a new FOMA terminal and insert your current FOMA card (UIM), use the PIN1 and PIN2 codes you set to the current card.

When the PIN1 or PIN2 code entry screen appears, enter the 4 to 8 digit PIN1/PIN2 code and press  (Set).

- The entered PIN1/PIN2 code is displayed as "_".
- If you enter a wrong PIN1/PIN2 code three times consecutively, the PIN1/PIN2 code is locked and cannot be used anymore. (The remaining number of times for the entry appears on the screen.) When you enter the correct PIN1/PIN2 code, the number of times for entry is reset to 3.


■ PIN Unlock Code (PUK Code)

The PIN unlock code (PUK code) is an 8-digit number for releasing the lock of PIN1/PIN2 code. You cannot change the PUK code.



- If you enter a wrong PUK code ten times consecutively, the FOMA card is locked.

<When powering on>

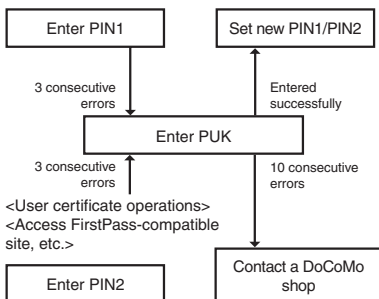

Changing Your Security Code

<Change security code>

- 1 "Settings" ▶ "Lock/Security" ▶ "Change security code" ▶ Enter your current security code ▶ Enter new 4 to 8 digits security code ▶ "YES"

Setting Your PIN Codes

<PIN setting>

You can set PIN1 code and PIN2 code for your FOMA card (UIM). PIN1 code and PIN2 code → p.108

- PIN1 code, PIN2 code and PIN1 code entry set are recorded to the FOMA card (UIM).
- To change your PIN1 code, select "ON" in "PIN1 code entry set".

- 1 "Settings" ▶ "Lock/Security" ▶ "PIN setting" ▶ Enter your security code

The "PIN setting" screen appears.



- 2 Select any item:

Change PIN1 code.....Enter the current PIN1 code (4 to 8 digit) and enter a new PIN1 code 2 times (1 time for confirmation).

Change PIN2 code.....Enter the current PIN2 code (4 to 8 digit) and enter a new PIN2 code 2 times (1 time for confirmation).

 
PIN1 code entry set.....Sets whether PIN1 code to be input when you turn the FOMA terminal on or not (ON/OFF).

Release PIN Lock

If you enter incorrect PIN1 code or PIN2 code 3 times in a row, you must unlock the locked PIN1 code or PIN2 code then set a new PIN1 code or PIN2 code.

<Example: To unlock your PIN1 code>

- 1 Enter the 8 digit PUK code



- 2 Enter a new 4 to 8 digit PIN1 code ▶ Enter the new 4 to 8 digit PIN1 code again

Preventing Others from Using Your Terminal

<Dial lock/Omakase Lock>

To lock your FOMA terminal to prevent others from using, you can set "Dial lock" that can be set on the FOMA terminal and "Omakase Lock" that can be set remotely.

- Dial lock or Omakase Lock is not released even when the power is turned off.
- Available operations and functions when Dial lock or Omakase Lock is set

Function	Dial lock	Omakase Lock
Turning the FOMA Terminal on/off	○	○
Calling emergency numbers (110, 119 or 118)	○	×
Setting/releasing Dial lock	○	×
Setting/releasing Omakase Lock	○	○
Receiving a voice or videophone calls	○	○
Receiving remote monitoring calls	○	○
Updating the Data Security Service data	○	×

○: Available ×: Unavailable

- When Dial lock or Omakase Lock is set, the alarm set in "Alarm", "Schedule", or "To Do list" is not given. Once Dial lock or Omakase Lock is released, the "Missed alarm shortcut icon appears on the standby screen.
- The shortcut icon is not displayed when Dial lock or Omakase Lock is set. Once Dial lock or Omakase Lock is released, these icons reappear.
- Even when you receive calls from the callers stored in the phonebook, only the phone numbers are displayed when Dial lock or Omakase Lock is set.

Setting the Dial lock

- 1 **Settings** ▶ **Lock/Security** ▶ **Lock** ▶ Enter your security code ▶ **Dial lock**

Operations during Dial lock

- "Dial lock" and "🔒" appear on the screen. IC card lock is also set to "ON" and IC card functions become unavailable (Dial lock can be released using the IC card authentication function).
- You can still receive Message R/F, i-mode mail or SMS automatically when Dial lock is set, but the receiving screen or reception results screen does not appear. Once Dial lock is released, the icon for the received message/mail appears on the standby screen.
 - You can still receive the Area Mail automatically and view the contents.



Releasing Dial lock

- If you fail to release Dial lock 5 times in a row, the FOMA terminal turns off. However, you can turn it on again.

- 1 Enter your security code on the screen when Dial lock is set ▶ . Dial lock is released and "🔒" disappears.

■ To release the lock using the IC card authentication → p.118

NOTE

- Even if an incorrect security code is input while releasing Dial lock, no error message appears. Press and input a correct security code again.

Using Omakase Lock

This service enables you to lock the FOMA terminal with remote operation by contacting DoCoMo or from My DoCoMo when you lost your FOMA terminal. This protects your valuable privacy and Osai-fu-Keitai. You can release the lock by calling DoCoMo, etc.

* Omakase Lock is a pay service. If you subscribe to the service at the same time with the subscription of suspending the service or while the service is suspended, no charge applies.

Call Center (for setting/releasing Omakase Lock)

0120-524-360 (Operating time: 24 hours a day) (only in Japanese)

* My DoCoMo is also available to set/release Omakase Lock via a PC, etc.

* For details on Omakase Lock, refer to "Mobile Phone User's Guide [Procedures and After-Sales Service]" or contact the inquiries number provided on the back of this manual.

Operations during Omakase Lock

- "おまかせロック中です" (Omakase Lock set) appears on the display.
- Omakase Lock is the service to lock the FOMA terminal in which the FOMA card (UIM) you subscribed to is inserted.
- During Omakase Lock, all the key operations except for answering voice/videophone calls (the phone number is only displayed instead of the names stored in the phonebook or the images not to be displayed) and turning on/off the FOMA terminal, and other functions (including IC card) become unavailable.
- The FOMA card (UIM) and microSD memory card remain unlocked.
- Mails received when Omakase Lock is set are kept at i-mode center. Area Mail is discarded.
- You can turn the FOMA terminal on/off, but Omakase Lock is not released even when the power is turned off.

NOTE

- When other function is activated, the function is terminated and the FOMA terminal is locked (the editing data may be canceled before terminating).
- You can set Omakase Lock even when other lock function is set. In this case, releasing Omakase Lock returns to the lock setting before Omakase Lock is set (however, Secret or Secret data only mode are released).
- Lock is not set when "🔒", Self mode is set or the FOMA terminal is turned off.



NOTE

- The lock is not set if you subscribed to the "Dual Network" service and are using the mova service.
- Omakase Lock is the service to lock the FOMA terminal by the request from the subscriber of the FOMA card (UIM) inserted in the FOMA terminal. The FOMA terminal is locked if the subscriber requests even if the subscriber and the user of the FOMA terminal are different.
- The lock can be released only when the same FOMA card (UIM) which was used when the lock was set is inserted in the FOMA terminal. If the lock cannot be released, contact the inquiries number provided on the back of this manual.
- If the FOMA terminal is on voice or videophone call when you try to release Omakase Lock, the lock is released after the call ends.

Preventing Others from Viewing Your Phonebook or Schedule Data

<Secret mode/Secret data only mode>

When the phonebook or schedule entries are stored in Secret or Secret data only mode, these entries are stored as secret data and are not displayed in normal mode. To display the secret data, set the FOMA terminal to Secret mode (displays all data including the secret data) or Secret data only mode (displays only the secret data).

- You can also keep the data in "My picture", "i-motion", "Received mails", "Sent mails" and "Bookmark" into the secret folder to prevent others from viewing the data. → p.112

Setting to Secret or Secret data only mode

1 "Settings" ▶ "Lock/Security" ▶ "Secret mode" or "Secret data only mode" ▶ Enter your security code

When setting to Secret mode, "" appears. When setting to Secret data only mode, "" flashes and the number of secret data is displayed for about 2 seconds.

Icons displayed when other lock function is set at the same time → p.27

● Storing/viewing the Secret data and setting the Secret data back to normal data

- You cannot set phonebook entries as secret data on the FOMA card (UIM).
- When making or receiving voice/videophone calls during secret mode or secret data only mode, set mode is released even if you do not answer the call.

■ Setting phonebook entries or schedule entries as secret data

Store the information in Secret or Secret data only mode.

Adding information to the phonebook → p.76

Adding information to your schedule → p.281

■ Setting the stored phonebook entries as secret data

Select "Set secret" from the function menu of the phonebook detail screen.

* If you set the phonebook entry stored to Choku-Den as a secret data, the entry is deleted from Choku-Den.

■ Viewing the secret data

Set the FOMA terminal to Secret or Secret data only mode, then view the phonebook or schedule.

Searching the phonebook → p.79

Checking your schedule → p.283

■ Setting the secret data back to normal data

Set the FOMA terminal to Secret or Secret data only mode, display the "Phonebook detail" screen (p.79) or "Schedule list" screen (p.283) to select "Release secret" from the function menu.

Canceling Secret or Secret data only mode

1 In Secret or Secret data only mode,



Secret or Secret data only mode is canceled and "" disappears.

You can also release the set mode by selecting  ▶ "Settings" ▶ "Lock/Security" ▶ "Secret mode" or "Secret data only mode"

NOTE

- When a secret data is highlighted in the list screen during Secret mode or when the detail screen of a secret data is displayed, the lighting of "" changes to flashing.
- "Phonebook" or "Schedule" entries stored as secret data can only be retrieved, modified, deleted or referred in Secret or Secret data only mode. When the FOMA terminal is in normal mode, you will be notified of schedule events stored as secret data by an alarm, but no alarm message is displayed.

NOTE

- If the caller of the incoming call is stored as secret data and notifies the caller ID, the stored name or image is not displayed and only the phone number is displayed. Only the phone number is displayed in "Received calls" record. Setting Secret mode or Secret data only mode displays the name stored in the "Received calls" record.
- If the Secret mode or Secret data only mode is released when you receive mail from a sender stored as secret data, not the name but the mail address is displayed. The mail address is not stored in "Received address" record.
- If you modify your "Phonebook" or "Schedule" in Secret mode, the modified data becomes secret data. If you modify the phonebook, all the items stored under the modified memory number become secret data.
- If "Dial lock/Omakase Lock" is set at the same time with "Secret mode" or "Secret data only mode", releasing "Dial lock/Omakase Lock" also cancels "Secret mode" or "Secret data only mode".
- When you make a call or send a mail using the phonebook stored as a secret data, it is not recorded in the "Redial", "Dialed calls" or "Sent address" records.

Preventing Others from Viewing Data

<Secret folder>

You can store images, movies, i-motion, received mail, sent mail, and bookmarks you want to prevent others from viewing data, using Secret folder which is displayed only in Secret mode or Secret data only mode.

- You can store the data stored in the FOMA terminal only.
- The maximum number of data records that can be stored in each secret folder is as follows:

My picture	i-motion	Received mail
Approx. 100 (Approx. 2M bytes)	Approx. 10 (Approx. 10M bytes)	Approx. 100 (Approx. 1.2M bytes)
Sent mail	Bookmark (i-mode)	Bookmark (Full Browser)
Approx. 100 (Approx. 1.2M bytes)	Approx. 10 (Approx. 3K bytes)	Approx. 10 (Approx. 6K bytes)

* The data may not be able to be stored up to the maximum number depending on the file size of each data.

<Example: To store an image in My picture into the Secret folder>

- 1 Switch the FOMA terminal to Secret mode or Secret data only mode → p.111
- 2 Image list screen (p.227) ▶ Use  to move the frame of the image ▶  (FUNC) ▶ "Keep in secret"

NOTE

- The Secret folder is already prepared for the FOMA terminal. You cannot create another Secret folder, or delete or rename the existing Secret folder.
- If the secret/secret data only mode is canceled by an incoming call, etc. while displaying the data in the secret folder, the screen returns to the list screen of each folder.

<Received mail><Sent mail>

- When you receive the SMS report for the SMS stored in the Secret folder, you cannot select "Disp. SMS report" from the function menu of the SMS detail screen. You can select after putting out a mail message from the Secret folder.

NOTE

<Shortcut icon>

- When the image, movie or i-motion pasted as a shortcut icon is stored in the Secret folder, it is not displayed even when the shortcut icon is selected.
- Even when the Bookmark, received mail or sent mail pasted as a shortcut icon is stored in the Secret folder, normal operation is performed when the shortcut icon is selected.

Function menu of the Secret folder

Some functions for the folder or data in the folder are restricted in the Secret folder. The table below shows the available functions on the folder list screen, the data list screen, and the data detail screen. For information on "Put out", refer to "Changing a secret data to normal data" (p.114).

Function menu when the Secret folder is highlighted on the folder list screen

My picture (p.253)	i-motion (p.253)
Add folder Delete all image* ¹ Memory info	Add folder Delete all* ¹ Memory info
Received/Sent mail (p.183)	Bookmark (p.152)
Add folder No. of messages* ¹ Open folder iC trans. all* ¹ Send all Ir data* ¹ CopyAll to microSD* ¹ Delete read* ^{1,2} Delete all* ¹	Add folder No. of bookmarks* ¹ iC trans. all* ¹ Send all Ir data* ¹ CopyAll to microSD* ¹ Delete all* ¹

*¹: The data in the Secret folder are not included.

*²: Available only with the Inbox folder list screen.

Function menu (Data list screen)

My picture (p.230)	i-motion (p.235)
Display image Image info Memory info Title name* ¹ Delete Put out	i-motion info Memory info List setting Delete Put out

Received/Sent mail (p.185)	Bookmark (p.153)
Color coding List setting Protect* ² Unprotect* ² Protect ON/OFF* ³ Unprotect all* ³ Mail info* ² No. of messages Delete Put out	No. of bookmarks Delete Put out

*¹: If you select the Title name, "Picture" is displayed.

*²: Available only with the received mail list screen.

*³: Available only with the sent mail list screen.

Function menu (Data detail screen)

My picture (p.230)	i-motion (p.275)
Image info Set image disp. Normal* Retry Delete this	Action setting Play menu Detail Info Select file Help
Received/Sent mail (p.186)	
Protect ON/OFF Scroll Font size Delete Put out	

* : "Full" screen is activated when the normal mode is set.

Changing a secret data to normal data

To change the secret data back to normal data, move the data from the Secret folder to another folder.

<Example: To return an image from the Secret folder of My picture to normal data>

- 1 Switch the FOMA terminal to Secret mode or Secret data only mode → p.111
- 2 Folder list screen (p.227) ▶ “Secret” ▶ Move the frame to an image ▶ (FUNC) ▶ “Put out”
- 3 Select a folder

NOTE

- If you put out a mail message from the Secret folder, the mail turns into a normal mail message. Therefore, an old mail message may be deleted when new mail messages are sent or received. It is recommended to protect the mail message before putting it out from the Secret folder.

Preventing Others from Viewing Your Personal Information or Performing the Phone/Mail Operations

<Original lock>

You can lock the functions which use your personal information such as mails and phonebook to prevent others from viewing these information or altering improperly. You can also restrict making or receiving voice/videophone calls, and sending i-mode mails or SMS.

- You can store the function or data you want to lock to Original lock 1 to 3 individually depending on the usage or purpose.
- Original lock is not released even when the power is turned off.
- Functions and data you can lock are as following Table 1 (p.116). You can specify (customize) whether to lock or not for each group and item. → p.115

Activating Original lock

- 1  ▶ “Settings” ▶ “Lock/Security” ▶ “Lock” ▶ Enter your security code

The “Lock selection” screen appears.

- 2 Select Original lock 1 to 3

The lock is activated and the function or data to be locked is locked.

“” appears on the screen.

Icons displayed when other lock function is set at the same time → p.27



Lock selection

- To change the function or data to be locked → p.115

- To edit the title

▶ Highlight one of Original lock 1 to 3 ▶

(FUNC) ▶ “Edit title” ▶ Enter the title

- To release Original lock

▶ “OFF”

● Operations during Original lock

If you try to use the locked function or data when Original lock is set, you are asked to enter your security code.

- If you enter your security code, the lock is deactivated temporarily and you can use the locked function or data (you cannot use the functions of "Dial/sending mail" and "Incoming/Mail disp." when the lock is released temporarily). When you exit from the activated function and return to the standby screen, the lock is activated again.

<Example: To view an i-mode mail when Original lock is set>

1 On the standby screen

2 Enter your security code

Original lock is released temporarily and the mail menu appears.

3 Read an i-mode Mail

4 Exit the mail menu and return to the standby screen

Original lock is activated and "ALL" appears on the screen.

Customizing the function or data to be locked


- You can store particular settings such as "locking the phonebook only" or "restricting the outgoing calls/emails only" to Original lock 1 to 3 individually depending on the usage or purpose.
- You can set (customize) the lock by each category, group or function such as **Table 1** (p.116).
- The contents of the lock you set (customize) are retained even when Original lock is set or released.

1 Lock selection screen (p.114) ▶ Highlight one of Original lock 1 to 3 ▶

(Detail)

The "Category list" screen appears.

"" appears when any of the item in the category is to be locked and "ALL" appears when all items are to be locked.

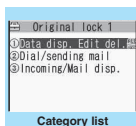


Function menu▶p.118

2 Select the category you want to change the setting

The "Group list" screen appears.

"" appears when any of the item in the group is to be locked and "ALL" appears when all items are to be locked.

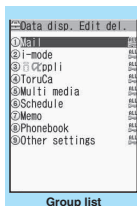

Function menu▶p.118


3 Select the group you want to change the setting

The "Function list" screen appears.

4 Use to select ☐ (checkbox)▶ (Finish)

The checked (☒) item is to be locked.

Deselect items you do not want to lock.

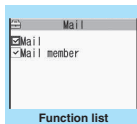

Function menu▶p.118

5 (Finish)▶ (Finish)▶ (Set)

The number of times you press  (Finish) varies depending on the category.

[Table 1] Functions and data for the Original lock

Group	Function	Operations when locked/Notes
Data disp. Edit del.		
Mail	Mail Mail member	Locks the activation of each function. • You can view the Area Mail contents.
i-mode	i-mode	Locks the i-mode function (i-mode, Full Browser and i-Channel).
	Bookmark	Locks the i-mode and Full Browser bookmark list displays.
i-appli	i-appli	Locks the i-appli function or IC card list display. • IC card function is not locked. • When the i-appli standby screen is set, the i-appli standby screen is deactivated when the lock is set.
ToruCa	ToruCa	Locks the display of ToruCa folder list screen. • The ToruCa acquisition is available with a reader/writer unit even when the lock is set, but the "New ToruCa" shortcut icon does not appear (once the lock is released, the "New ToruCa" shortcut icon appears).
Multi media	My picture Music i-motion Melody Kisekae Tool Chara-den Voice announce	Locks the activation of each function. • The data cannot be accessed from other functions. • If the data to be locked is set as the ring tone, receiving screen, standby screen, etc., the default settings are used when the lock is set. • When "My picture" or "Chara-den" is to be locked and an substitute image is sent for a videophone call when the lock is set, the "Pre-installed" substitute image is sent.
	Music&Video Channel Camera Bar code reader Text reader	Locks the activation of each function. • Music&Video Channel programs can be downloaded even when the lock is set.
Schedule	Schedule Alarm To Do list	Locks the activation of each function. • The alarm notification is not given when the lock is set and "Missed alarm" shortcut icon appears.
Memo	Play/Erase msg. Play/Erase VP msg.	Locks the activation of each function (you can set the Record message). • During any lock function is set, and when you press [X] with the FOMA terminal folded, you cannot check "Record message".
	Voice memo Voice memo (in-call)	Locks the activation of each function. • The play/erase a voice memo is not locked (Set the lock for "Play/Erase msg." screen)
Phonebook	Phonebook/ Choku-Den	Locks the activation of the phonebook and Choku-Den (this affects many other functions which use the phonebook). • The stored name is not displayed when the lock is set in the Dialed and Received call or Mail list screen. A phone number or mail address is displayed. • When "MSG display settings" of "Chaku-moji" is set to "Only number in PH-book", a Chaku-moji message is not displayed. • You cannot set "Reject unknown" at the same time. • "Call rejection", "Call acceptance", "Call Forwarding" and "Voice Mail" settings are deactivated. • Even if you press [X] with the FOMA terminal folded while lock is set, the FOMA terminal does not read out the caller or sender's name of a missed call or new mail.
	My profile	Locks the activation of My Profile.
	Dialed calls	Locks the activation of "Dialed calls", "Redial" and "Sent address".
	Received calls	Locks the activation of "Received calls" and "Received address". • Even if you press [X] with the FOMA terminal folded while lock is set, the FOMA terminal does not check a missed call.

Group	Function	Operations when locked/Notes
Other settings	Text memo	Locks the activation of text memo.
	Notice designate calls	No alarm notification is given even when the specified upper cost limit is exceeded. • Once the lock is released, the "Notice designate calls" shortcut icon appears.
	Chaku-moji	Locks the function of editing or setting Chaku-moji, and the function of "Select message" or "Sent messages" when you send the Chaku-moji, and Chaku-moji is not displayed. • You can send or receive the Chaku-moji.
Dial/sending mail		
Keypad dial	Keypad dial	You cannot make calls by dialing the phone number directly (you can make calls using the phonebook, Redial/Dialed calls records and the Received calls record of the recorded party). • You cannot edit or add the phonebook entries (including FOMA card and microSD memory card). • You can still call the emergency numbers (110, 119 or 118).
Sending mail	Input add by keypad	Locks to send i-mode mails or SMS by entering the address directly (you can use only the phonebook, Redial/Dialed calls records, the sent address list, the received calls record or the received address of the recorded party). • You cannot edit or add the phonebook entries (including FOMA card and microSD memory card). • Addresses of all mails in the Draft mailbox and the mails with addresses only are deleted.
	Sending mail	Locks the i-mode mail and SMS.
Incoming/Mail disp.		
Incoming call		Rejects voice and videophone calls and packet communication (these are recorded as missed calls). • Once the lock is released, the "Missed call" shortcut icon appears.
Disp. recv. mail/msg.		You can still receive MessageR/F, i-mode mail or SMS automatically, but the receiving screen or reception results screen does not appear. Also, there is no ring tone or other reaction when a call comes in and you are not notified of a received call. • You can still receive the Area Mail automatically and view the contents. • Once the lock is released, shortcut icons such as "New mail" appear.

* When the data to be locked are pasted as "Shortcut icon" on the standby screen, these shortcut icons are not displayed when the lock is set.



Category list screen (p.115)/ Group list screen (p.115)

Select.....Selects all items in the highlighted item.

Release.....Deselects all selected items in the highlighted item.

Select all.....Selects all items under the displayed item.

Release all.....Deselects all selected items under the displayed item.



Function list screen (p.115)

Select all.....Selects all the displayed items.

Release all.....Deselects all the displayed items.

Locking the Key Operation Automatically

<Keypad lock>

You can lock the key operations automatically when the FOMA terminal is folded or no operation is performed for a certain period of time.

- The incoming call lamp flashes in blue while in Keypad lock.
- Keypad lock is not released even when the power is turned off.

Setting Keypad lock

- 1 **“Settings”** ▶ **“Lock/Security”** ▶ **“Keypad lock”** ▶ **Enter your security code** ▶ **Select any item:**

After folded.....Sets whether to lock the keypad automatically when the FOMA terminal is folded (ON/OFF).

Timer.....Selects the setting from “OFF/ON after 1 minute/ON after 5 minutes/ON after 15 minutes/ON after 30 minutes”.

For example, when set to “ON after 5 minutes”, the lock is set automatically after no operation is performed for 5 minutes. When set to “OFF”, timer is deactivated and no lock is set.

- 2 **Set the respective items** ▶ **(Finish)**

Operations during Keypad lock

- “Keypad lock” and appear on the screen while the Keypad lock is set.
- During Keypad lock, all the key operations are unavailable except for answering voice or videophone calls, turning on/off the FOMA terminal, the operation of IC card authentication function and (check for missed call/new mail).
- While in Keypad lock, the FOMA terminal receives MessageR/F, i-mode mail, SMS and Area mail, but viewing or reading out messages is not available.
 - You can still receive the Area Mail automatically and view the contents.
- Even when Keypad lock is set, alarm notification of “Alarm”, “Schedule” or “To Do list” is given.
- If you can operate the FOMA terminal even when Keypad lock is set (e.g. when receiving a voice call or alarm notification is given), appears under the function display.



NOTE

- Even when keypad lock is set, you can directly dial and make voice calls to emergency numbers (110, 119 and 118).
- The lock may not be set during a call, data communication (such as i-mode) or playback of melody/i-motion/music, or when activating the camera, etc.

Releasing Keypad lock temporarily

- 1 **Enter your security code on the screen when Keypad lock is set** ▶
 - **To release the lock temporarily using the IC card authentication** → p.119

Using the IC Card Authentication

<IC card authentic.>

You can release Dial lock or Keypad lock or you can perform the user authentication without entering your security code on the screen which requires your security code entry only by placing the FOMA terminal on a FeliCa-compatible contactless IC card (external IC card).


- You can use the IC card authentication even when IC card lock is set.
- You can store up to 2 contactless IC cards.

Activating the IC card authentication

You can store the contactless IC card to enable the user authentication.

1 **“Settings” ▶ “Lock/Security” ▶ “IC card authentic.” ▶ Enter your security code**

The “IC card authentic.” screen appears.

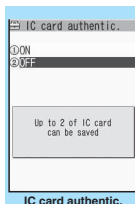

Function menu ▶ p.119

2 **“ON” ▶ “OK”**

■ **To activate the stored contactless IC card**

▶ “ON”

■ **To deactivate the IC card authentication**

▶ “OFF” ▶ “YES” or “NO”

Select “YES” when you delete all the contactless IC card data, and select “NO” when you do not delete them.

3 **Place the contactless IC card on the FeliCa mark “” on the FOMA terminal**

“” disappears when the card is stored.

FUNC **IC card authentic. screen**
(p.119)

New ext. IC card Stores up to 2 contactless IC cards. If 2 cards are already stored, delete the old data to store the card.

Del. ext. IC card Deletes the contactless IC card data.

Using the IC Card Authentication

<Example: Releasing the Dial lock/Keypad lock>

1 **Open the FOMA terminal when Dial lock/Keypad lock is set**


“” appears on the screen and the user authentication is enabled for about 10 seconds. Pressing **[ch]** (iC auth.) on the standby screen also enables the user authentication.

■ **To release the lock with the FOMA terminal folded**

Pressing **[v/v]** (1 second or longer) enables the user authentication for about 10 seconds.

2 **Place the contactless IC card on the FeliCa mark “” on the FOMA terminal**

The lock is released when the user authentication is performed successfully.

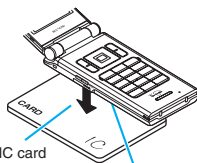

Contactless IC card

Hold the contactless IC card and the FOMA terminal in your hand, and put “” of the back cover close to the IC card.

* Put the IC card close to the FOMA terminal as illustrated.

The FOMA terminal may have difficulty in authentication depending on the IC card. In this case move the card horizontal or vertical.

■ **When entering your security code**

“” appears when the security code entry screen appears and the user authentication is enabled for about 10 seconds. If you place the contactless IC card stored with this function on the FeliCa mark on the FOMA terminal, the user authentication is performed.

NOTE

- Even though the contactless card is compatible with FeliCa, this function may not be available depending on the card.
- When using the IC card authentication, hold the contactless IC card and the FOMA terminal with your hands.
- If you fail 5 times in sequence, the IC card authentication is deactivated and the authentication can be performed only with the security code. After the authentication with your security code is performed successfully, you can use the IC card authentication again.

Disabling the Side Key

<Side key guard>

You can disable the function of the side keys (☰ and ☲) when the FOMA terminal is folded.

 
- In the situations such as followings, the side key is enabled regardless of this setting:
 - When the FOMA terminal is opened
 - When a flat-plug earphone/microphone with switch (optional), etc. is connected

1 [MENU] [✖] (1 second or longer)

The side key operations are disabled (ON) and “” appears.

- To enable the external keys when the FOMA terminal is folded

▶ Repeat step 1
“” disappears.



Preventing Unwanted Mail Display

<Mail box lock/Folder lock>

You can lock your Inbox, Outbox, Draft mailboxes or other folders so that their contents cannot be viewed by other people without your approval. Mail box or folders which is locked cannot be opened without entering a security code.

- Once you enter your security code, it remains valid until the mail task is finished, and you can open mail folders without security code even if the lock is set.
- Icons such as “” appear next to the mail box which is locked.
- For folders that are locked, icons such as “” or “” appear before the folder name on the folder list screen.
- When lock is set to mail box or folder, mail addresses for which lock is set are not recorded in the Sent address and Received address lists.

Setting lock for individual mail boxes

1 [Envelope icon] ▶ “Mail Setting” ▶ “Mail box lock” ▶ Enter your security code

2 Use [Checkbox icon] to select a checkbox () “About multiple-choice” → p.39

3 [Finish icon] (Finish)

Setting lock for individual folders

1 Inbox/Outbox folder list screen (pp.180, 181) ▶ Highlight the folder to be locked ▶ [Envelope icon] (FUNC) ▶ “Folder lock” ▶ Enter your security code ▶ “YES”

- To release the setting

▶ Repeat step 1

Restricting Incoming and Outgoing Calls for Specific Phone Numbers

<Restrictions>

You can restrict incoming and outgoing calls for each phone number stored in the Phonebook to prevent personal phone calls or nuisance calls.

- You can specify restrictions for up to 20 phone numbers in each directory.
- This setting is not available for the FOMA card (UIM) phonebook.
- This function is applied to only calls of which caller ID is notified. It is recommended to set “Caller ID Request” or “Call setting w/o ID” at the same time.
- You cannot set Call rejection and Call acceptance to the same phone number, or Call forwarding and Voice mail to the same number.
- If you set restrictions for the phone number and then edit or delete that phone number, the restrictions on the selected function are released (however, when “Restrict dialing” is set, you cannot edit or delete the phonebook).

Setting restrictions on dialing and receiving for phone numbers

1 Phonebook detail screen (p.79) ▶ [Envelope icon] (FUNC) ▶ “Restrictions” ▶ Enter your security code ▶ Select any item:

Restrict dialing Restricts outgoing calls to the phone numbers that are not specified. To make a call to the specified phone number, call the number from the phonebook.

Call rejection Restricts incoming calls from the specified phone number.

Call acceptance Restricts incoming calls from the phone numbers that are not specified.

Call Forwarding Forwards incoming calls from the specified phone number regardless of the Call forwarding service setting (Activate/Deactivate).

Voice Mail.....Transfers incoming calls from the specified phone number to the Voice mail service center regardless of the Voice mail service setting (Activate/Deactivate).

“★” appears next to the selected function.

■ To release a selected function

▶ Select the function with “★”

The function is released and the “★” disappears.

■ To set restrictions for multiple phone numbers

▶ Press **[CLR]** twice to return to the phonebook list screen ▶ Select the phonebook entry you want ▶ Repeat step 1

Once you press **[END]** to return to the standby screen after setting Restrict dialing, you cannot continue to add restrictions. To add more numbers, release the Restrict dialing that have already been set for the phone number and then set the Restrictions again including the released phone number.

● When Restrict dialing is set

- You cannot dial including the specified phone numbers using the Dialed calls and Received calls records. Also, you cannot call numbers other than the specified ones, add to, edit or delete phonebook, exchange data between the FOMA terminal (Phone) and the FOMA card (UIM), or operate phonebook by “UIM operation”.
- The current records of Redial/Dialed calls and Sent address list are deleted after setting the Restrict dialing. However, you can dial or send mails using the records of Redial/Dialed calls or Sent address list that have been stored after setting.

NOTE

- If you use 2in1, the restrictions on the selected function is operated differently depending on the combination of the current mode setting and phonebook 2in1 setting as shown below.
 - In A mode, the specified phone number in the A or common setting phonebook is applied.
 - In B mode, the specified phone number in the B or common setting phonebook is applied.
 - In Dual mode, the specified phone number in all of the phonebooks is applied.

However, as for Restrict dialing, you cannot call the phone numbers that are not specified regardless of the 2in1 mode setting.

<Restrict dialing>

- You can still make calls to emergency numbers (110, 119 and 118) when the Restrict dialing is set.

NOTE

<Call rejection><Call acceptance>

- The FOMA terminal receives i-mode mail and SMS regardless of this function.
- If you receive a call from a number that is specified on Call rejection or from a number that is not specified on Call acceptance, the number is recorded as “Missed calls” in the received calls records and the “Missed call” shortcut icon is displayed on the standby screen.
- If you receive a call from a phone number for which Call rejection is set or from a phone number other than the number for which Call acceptance is set, the call is rejected even when the “Voice Mail” and “Call Forwarding” services are “Activate”. Note that if the FOMA terminal is turned off or “**[OFF]**” or if the ringing time set for “Voice Mail” or “Call Forwarding” is 0 (zero) second, “Voice Mail” or “Call Forwarding” is enabled.

<Call Forwarding><Voice Mail>

 
- If you receive a call from the specified phone number, the FOMA terminal rings for about 1 second and the call is forwarded to the designated number or connected to the Voice mail service center, and the “Missed call” shortcut icon appears on the standby screen.
- If no call forwarding number is designated or if you have not subscribed to the “Call Forwarding” or “Voice Mail” service, calls from the specified phone number are handled as missed calls.

Checking the restriction settings

1 Phonebook list screen (p.79)▶

[FNC] (FUNC)▶ “Restrictions”▶ Enter your security code

The “Restrictions” screen appears.



Function menu▶p.121

[FNC] Restrictions screen (p.121)

Check settings.....Displays a list of the phonebook entries for which the function is set.

Release settings.....Releases the function and “★” disappears.

Rejecting Calls from Unidentified Callers

<Call setting w/o ID>

You can accept or reject voice/videophone calls from callers who do not provide the caller ID depending on the reason for no caller ID.

- 1  **“Settings”** ▶ **“Lock/Security”** ▶ **“Call setting w/o ID”** ▶ Enter your security code ▶ Select any item:

Unknown.....Specifies whether to accept or reject calls from callers who are unable to provide the caller ID, such as calls from overseas or calls from ordinary phones sent via a call forwarding service. Some phone companies provide caller IDs.

Payphone.....Specifies whether to accept or reject calls dialed from pay phones.

User unset.....Specifies whether to accept or reject calls made by callers who withhold their caller IDs.

- 2 **“Accept” or “Reject”**

■ When “Accept” is selected

- ▶ “Select ring tone” or “Select calling disp.”
- Select the ring tone from “Same as ring tone/ Melody/i-motion/Music/Voice announce/ Random melody/OFF” for “Select ring tone” (when “Same as ring tone” is selected, the “Phone” setting of “Select ring tone” is used).
- Select the calling display from “Same as display/My picture/i-motion” for “Select calling disp.” (when “Same as display” is selected, the “Calling” setting of “Display setting” is used).

■ When “Reject” is selected

The call is rejected and the other party hears the busy tone.

NOTE

- The ring tone or calling display selected in this function is the setting for voice phone calls without caller ID. When you receive videophone calls without the caller ID, “Videophone” of “Select ring tone” or “V.phone Calling” of “Display setting” is used.
- When you receive a call from a caller who is set to “Reject”, the call is rejected even when “Voice Mail” or “Call Forwarding” service is set to “Activate”. However, if the FOMA terminal is turned off or “ ” or if the ringing time set for “Voice Mail” or “Call Forwarding” is 0 (zero) second, “Voice Mail” or “Call Forwarding” is enabled.
- The FOMA terminal receives i-mode mail and SMS regardless of this function.

Muting Ring Tones for Callers Not Stored in the Phonebook

<Ring time(sec.)>

You can set the mute period for the ring tone for voice/videophone calls from the phone number which is not stored in the FOMA terminal (Phone) phonebook or UIM phonebook (Set mute seconds). You can prevent accidentally dialing numbers, such as nuisance calls that only ring for a short period from Received calls record.

- “Set mute seconds” also works when you receive a voice/videophone call without caller ID or when there is another incoming call during a voice/videophone call.
- You cannot set “Set mute seconds” when “Reject unknown” is set to “Reject”.

- 1  **“Settings”** ▶ **“Incoming call”** ▶ **“Ring time(sec.)”** ▶ Select any item:

Set mute seconds

ON.....Enters the time for which the ring tone is muted before starting up (01 to 99 seconds).

OFF.....Sets the time for which the ring tone is muted before starting up to 0 second.

Missed calls display.....Specifies whether to record received calls for which no ring tone sounded to the missed calls record or the shortcut icon.

NOTE

- When you receive a call from someone who is stored in the phonebook as a secret data, the FOMA terminal operates as specified in this function.
- If the mute time is longer than the ringing time for the Record message function, the FOMA terminal switches directly to Record message without ringing first. To have the FOMA terminal ring before it records a message, make sure that the ringing time for Record message is longer than the mute time. The same applies to the ringing times for Voice Mail, Call Forwarding and Auto answer setting.

Rejecting Calls from Callers Not Stored in the Phonebook

<Reject unknown>

You can specify whether to accept or reject calls from callers who are not stored in the phonebook of the FOMA terminal (Phone) or the FOMA card (UIM).

- This function is applied to only calls of which caller ID is notified. It is recommended to set “Caller ID Request” or “Call setting w/o ID” at the same time.

- You cannot set "Reject unknown" when "Set mute seconds" of "Ring time(sec.)" is set to "ON".

1 "Settings" ▶ "Lock/Security" ▶ "Reject unknown" ▶ Enter your security code ▶ "Reject" or "Accept"

NOTE

- When you receive a call from someone who is stored in the phonebook as a secret data, the call is not rejected regardless of this setting.
- When this function is set to "Reject", the caller hears the busy tone even if you have activated "Voice Mail" or "Call Forwarding". Note that if the FOMA terminal is turned off or  or if the ringing time set for "Voice Mail" or "Call Forwarding" is 0 (zero) second, the caller does not hear the busy tone and is connected to the Voice Mail service center or the forwarding number.
- The FOMA terminal receives i-mode mail and SMS regardless of this function.

Disabling Making/Receiving Calls, etc.

<Self mode>

You can set the FOMA terminal not to make or receive voice or videophone calls, use i-mode, or send or receive mails. This is useful when you want to use the FOMA terminal without worrying about interruptions such as incoming voice or videophone calls.

- You can make voice calls to emergency numbers (110, 119 and 118) even when Self mode is set. Note that making a voice call at an emergency number cancels Self mode.

1 "Settings" ▶ "Lock/Security" ▶ "Self mode" ▶ "YES"

Self mode is set and  appears.

■ To cancel Self mode

▶ Repeat step 1

Self mode is canceled and  disappears.

● When Self mode is set

- Received voice or videophone calls are not recorded in the "Received calls" record and the "Missed call" shortcut icon also does not appear on the standby screen.
- MessageR/F or i-mode mails sent to you are kept at the i-mode center and SMS are kept at the SMS center.
- The caller of the voice or videophone call is notified with a guidance or message that the FOMA terminal is in out of signal range or is turned off. When you use the "Voice Mail" or "Call Forwarding" service, you can use the same service provided when the FOMA terminal is turned off.

- Data exchange via Infrared data exchange/IC communication, packet communication or 64K data communication with a PC connected, user authentication by IC card authentication are also unavailable. However, you can read and write data on the IC card using data transfer via USB connection (OBEX™ connection) or Osaifu-Keitai i-appli.


Data Security Service

<Data Security Service>

Data Security Service is a service which you can back up the phonebook, images and mails stored on your FOMA terminal (hereinafter referred to as "stored data") to the DoCoMo Data Security Center. Even if you lost the stored data by losing your FOMA terminal or getting it wet, you can use the i-mode to restore the data stored at the Data Security Center to your new FOMA terminal. The phonebook data in the FOMA terminal and the Data Security Center can be automatically updated for the latest data at set intervals. Besides, you can easily edit the stored data at the Data Security Center on My DoCoMo page on your PC and save the edited data on the FOMA terminal.

* For details on how to use the Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

How the service works

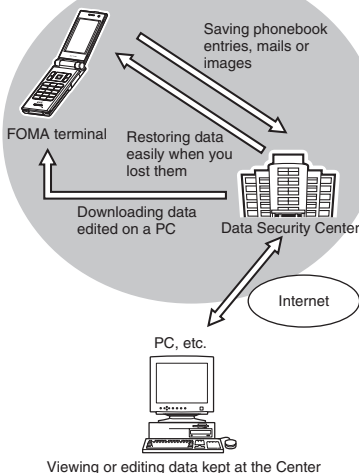

- Data Security Service is a pay service you need subscription (you need to subscribe to i-mode service in advance).
- Refer to the following pages for storing operations of Data Security Service:
 - “Storing the Phonebook at the Data Security Center” → p.85
 - “Storing mails at the Data Security Center” → p.186
 - “Storing images at the Data Security Center” → p.231

Other Security Settings

Apart from those explained in this chapter, there are functions/services relating to security settings as shown below.

Purpose	Function/ Service name
To prevent others from using the IC card functions	IC card lock setting → p.217
To avoid “nuisance phone calls” such as prank phone calls or unsolicited sales phone calls	Nuisance Call Blocking → p.311
To reject calls that has no caller ID	Caller ID Request → p.312
To send data securely by using the user certificate service * Only available on sites that support FirstPass	FirstPass → p.159
To update the FOMA terminal software when necessary	Software Update → p.374
Protecting the FOMA Terminal from Harmful Data	Scanning function → p.380
To accept only necessary mails when receiving i-mode mails	Receive option → p.174
To leave/hear the information about the safety using i-mode at the time of disaster	“i-mode Disaster Message Board” service*
To change your mail address	Change Mail Address*
To reject mails with URLs	Spam Mail Prevention (Reject Mail with URL)*
To accept/reject mail from specified domain	Spam Mail Prevention (Reject/Receive Mail Settings)*
To accept/reject i-mode mail only	
To accept/reject mail from specified address	
To set the recommended settings of Spam Mail Prevention easily	Spam Mail Prevention (かんたんメール設定 (Simple mail setting))*

Purpose	Function/ Service name
To reject i-mode mail from senders who have already sent 500 or more messages from the same i-mode mobile phone in the same day	Spam Mail Prevention (Reject Mass i-mode Mail Senders)*
To reject SMS	Spam Mail Prevention (SMS Rejection Settings)*
To reject advertisements	Spam Mail Prevention (Reject Unsolicited Ad Mail)*
To restrict the size of received mail	Limit Mail Size*
To check the status of the mail function settings	Confirm Settings*
To temporarily stop the mail function	Suspend Mail*

* : Refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

NOTE

- Be careful when calling back to the numbers you do not know. In particular, sending your caller ID to the unknown party may cause unnecessary problems.

<Nuisance Call Blocking priority sequence>

- Priority is assigned when nuisance call barring function is set at the same time:
 - ① Nuisance Call Blocking service
 - ② Reject unknown or Ring time(sec.)/Call setting w/o ID/Call rejection

Camera

Before Using the Camera		126
Shooting Still Images	Photo mode	131
Shooting Movies	Movie mode	135
Capturing Important Scenes	Chance capture	137
Using Voice Mode	Voice mode	137
Changing the Shooting Settings		137
Using the Bar Code Reader	Bar code reader	138
Scanning Text	Text reader	140

Copyright Information

Take care not to infringe on the copyrights when you duplicate or edit the images you shot or recorded using the FOMA terminal. Also take care not to infringe on the portrait rights by using or altering another person's portrait without his or her permission. It may be prohibited to shoot or record the stage performance, entertainment or exhibition even if you only want to enjoy it personally.



Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Before Using the Camera

You can use the FOMA terminal's built-in camera to shoot photos (still images) and movies.

- You cannot activate the camera function or shoot images when the FOMA terminal is folded.

Using the camera

To set to camera mode

There are four ways as follows:

 
- ① Select the shortcut icon () on the standby screen
 - ② Press **ch** (for 1 second or longer) on the standby screen.
 - ③ Select "Camera" from the main menu or Simple Menu.
 - ④ Select "Camera" from "LifeKit" of the main menu
- When there is no key operation for more than about 3 minutes, the camera mode ends automatically.

NOTE

- To paste the shortcut icon again after deleting it, select "Camera" in step ③'s main menu or ④ above and press **☑** (FUNC) to select "Add shortcut".

To switch between the rear camera and front camera

Press **☑** (FUNC) in the shooting screen, then select "Front camera" or "Rear camera" from the function menu.



Rear camera

This camera is useful for taking pictures of other people, animals or scenery. What you see is what you get on the screen (Normal display: photographed as it is displayed on the screen). Suitable for close-up shooting with the functions of the lens selector switch or the close-up in the rear camera.


Front camera

Use this camera to take a picture of yourself. The image is displayed as if you are looking in the mirror (Mirror display). The shot image is reversed from the displayed image. It is unavailable in Continuous mode.

Lens selector switch

- To take a close-up image, set to the close-up mode by moving the lens selector switch to (macro lens). When set to the close-up mode, the camera is focused on an object approx. 6 to 8 cm away from the rear camera.

- To use Bar code reader or Text reader, set to the close-up mode by moving the lens selector switch to (macro lens).
- When you move the lens selector switch, move the switch to the (standard lens) position or the (macro lens) position. Do not leave the switch in the middle of these positions.

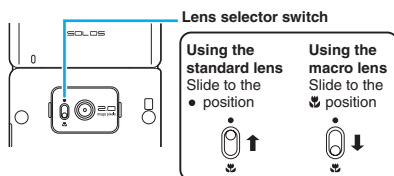

When using the camera

Notes on shooting

- The camera of the FOMA terminal is made with the extremely high-precision technology. However, it may include lines or spots that look dark or bright. Noises such as white lines may also appear on the photographed images particularly when shooting in very poorly lit locations.
- Before shooting, wipe the lens clean with a soft cloth. Fingerprints or grease spots on the lens could prevent the camera from focusing properly and cause blurred images.
- Take care not to press the lens with excessive force when folding the FOMA terminal. This may cause malfunction.
- Image quality may be adversely affected if the FOMA terminal is left in a hot location for a long period of time.
- The color tones and brightness levels in still images and movies shot may differ from those of the actual object.
- Do not leave the camera under the direct sunlight for a long period of time or shoot the sun or a powerful lamp directly. This could lead to the discoloration of the photographed images or cause the camera to malfunction.
- Take care that your fingers, hair, or the strap do not cover the lens when you shoot images.
- The shooting uses a large amount of the battery. It is recommended to turn off the camera immediately after you finish shooting. The screen may look dark or blurred if you shoot images when the battery is low.
- You cannot change or delete the volume of the shutter sound and Auto timer tone. Also, you cannot set the downloaded melody as the shutter sound.
- When shooting a still image, keep the FOMA terminal steady until it emits the shutter sound and finishes loading the shot image.

- When you take pictures indoors, flickering may appear due to the effect of fluorescent lighting, etc. In such a case, changing the "Flicker" setting to the electric wave frequency in the use region additionally may suppress flickering.
- After you display the shooting screen, switch the camera modes or change the camera settings, it may take time for the brightness or color tone to become its best.

■ Flashing of an incoming call lamp or illumination lamp when shooting

- The incoming call lamp lights up or flashes as follows:
 - Shooting screen activated: Flashes in red
 - Shooting still images, M-continuous mode: Lights in red (about 3 seconds)
 - A-continuous mode: Lights in red (when shooting)
 - Shooting movies, recording in Voice mode: Flashes in red
 - Auto timer activated: Flashes in blue → p.138
- Illumination lamp lights up or flashes at the same timing of the incoming call lamp.

■ Saving the still images, movies, etc. you shot

- The images, movies, etc. are saved in the folder specified in "Select to save".
- You can save the still images, movies, etc. you shot automatically when "Auto save set" is set to "ON".
- If the battery is low, you may not be able to save the still images, movies, etc. you shot.
- If the FOMA terminal is turned off or the battery pack is removed while saving the files, incomplete files may be saved.

■ When the shooting is interrupted

- The shooting is interrupted when you receive a voice/videophone or 64K data communication, or alarm notification (Booking program, Alarm, Schedule or To Do list), or operate other functions.
 - When shooting images continuously or shooting movies, the shooting is interrupted and respective screens appear. When you exit from these screens, the camera screen reappears so that you can save the data you shot before receiving calls or alarm notification.
 - When adjusting the zoom or brightness of the camera, the adjusting setting is set and the screen returns to the camera menu.
 - The Auto timer is canceled.

- The shooting is not interrupted in the following cases:
 - When you receive mails or MessageR/F when using the camera (including the case that the shooting screen appears), the reception result screen does not appear and the shooting mode continues regardless of the "Receiving setting".
 - When "Alarm setting" is set to "Operation preferred", you can continue the shooting, make settings or operate the Auto timer without interruption even when the alarm specified time is reached.

■ When using the microSD memory card

- When saving the data on the microSD memory card, "SD" flashes. Do not remove the microSD memory card during this period. This may cause a malfunction to the FOMA terminal or microSD memory card.
- When "microSD" is selected in "Select to save" and there is no folder in the microSD memory card, a folder is created automatically.
- If the number of files in the microSD folder selected in "Select to save" has reached the maximum, you cannot set to the folder.

Image size and maximum number of images/shooting time

The following **Table 1 to 3** (pp.127, 128) shows the image sizes, number of still images and movie shooting time supported by FOMA SO705i.

[Table 1] The image sizes and shooting mode

Image size	Still image		Continuous mode	Movie
	Rear	Front		
2M (1,200 × 1,600)	○	×	×	×
1M (960 × 1,280)	○	×	×	×
VGA (640 × 480)	○	○	×	×
CIF (352 × 288)	○	○	○	×
Screen (240 × 427)	○	○	○	×
QVGA V. (240 × 320)	○	○	○	×
QVGA (320 × 240)	×	×	×	○
QCIF (176 × 144)	○	○	○	○
SubQCIF (128 × 96)	○	○	○	○

[Table 2] The approximate number of still images that can be saved by destination to save

Quality	2M	1M	VGA	CIF	Screen	QVGA V.	QCIF	SubQCIF
Destination: FOMA SO705i (Phone)								
Super Fine	116	140	341	700	1,000			
Fine	140	700		1,000				
Normal	229			1,000				
Destination: microSD (64M bytes)								
Super Fine	99	118	291	542	948	1,897		
Fine	118	542	948		1,897			
Normal	189	948	1,265		3,795			

• The number of images that can be saved varies depending on the shooting environment, etc.


[Table 3] The approximate shooting time that can be saved by destination to save

Image Size	File size	Movie type set	Available shooting time for a single movie				Available total shooting time			
			Quality setting				Quality setting			
			Long dur. mode	Normal	Fine mode	Super Fine mode	Long dur. mode	Normal	Fine mode	Super Fine mode
Destination: FOMA SO705i (Phone)										
QVGA	2MB	Normal	82s	34s	16s	8s	47min.	19min.	9min.	280s
		Video	88s	35s	17s	8s	50min.	20min.	10min.	280s
		Voice	21min.				735min.			
QCIF	500KB	Normal	104s	53s	20s	16s	247min.	125min.	47min.	38min.
		Video	128s	64s	22s	16s	303min.	151min.	52min.	38min.
		Voice	316s				750min.			
	2MB	Normal	428s	219s	82s	63s	249min.	127min.	47min.	37min.
		Video	524s	262s	88s	66s	305min.	152min.	51min.	39min.
		Voice	21min.				735min.			
Sub QCIF	500KB	Normal	176s	67s	29s	20s	418min.	159min.	68min.	47min.
		Video	256s	86s	32s	22s	608min.	204min.	75min.	52min.
		Voice	316s				750min.			
	2MB	Normal	12min.	276s	119s	82s	420min.	161min.	69min.	47min.
		Video	17min.	350s	131s	88s	595min.	204min.	76min.	51min.
		Voice	21min.				735min.			
Destination: microSD (64M bytes)										
QVGA	2MB	Normal	82s	34s	16s	8s	43min.	18min.	512s	256s
		Video	88s	35s	17s	8s	46min.	18min.	544s	256s
		Voice	21min.				672min.			
	Long time	Normal	27min.	11min.	327s	164s	27min.	11min.	327s	164s
		Video	28min.	11min.	331s	165s	28min.	11min.	331s	165s
		Voice	120min.				672min.			
QCIF	500KB	Normal	104s	53s	20s	16s	227min.	115min.	43min.	34min.
		Video	128s	64s	22s	16s	279min.	139min.	48min.	34min.
		Voice	316s				689min.			
	2MB	Normal	428s	219s	82s	63s	228min.	116min.	43min.	33min.
		Video	524s	262s	88s	66s	279min.	139min.	46min.	35min.
		Voice	21min.				672min.			
	Long time	Normal	120min.	71min.	27min.	20min.	228min.	71min.	27min.	20min.
		Video	120min.	86min.	28min.	21min.	279min.	86min.	28min.	21min.
		Voice	120min.				672min.			

Image Size	File size	Movie type set	Available shooting time for a single movie				Available total shooting time			
			Quality setting				Quality setting			
			Long dur. mode	Normal	Fine mode	Super Fine mode	Long dur. mode	Normal	Fine mode	Super Fine mode
Sub QCIF	500KB	Normal	176s	67s	29s	20s	384min.	146min.	63min.	43min.
		Video	256s	86s	32s	22s	558min.	187min.	69min.	48min.
		Voice	316s				689min.			
	2MB	Normal	12min.	276s	119s	82s	384min.	147min.	63min.	43min.
		Video	17min.	350s	131s	88s	544min.	186min.	69min.	46min.
		Voice	21min.				672min.			
	Long time	Normal	120min.	90min.	39min.	27min.	384min.	90min.	39min.	27min.
		Video	120min.	115min.	43min.	28min.	544min.	115min.	43min.	28min.
		Voice	120min.				672min.			

- The time is the approximate time that can be shot with the file size.
- The available shooting time varies depending on the shooting environment, etc.


Key operation for camera mode

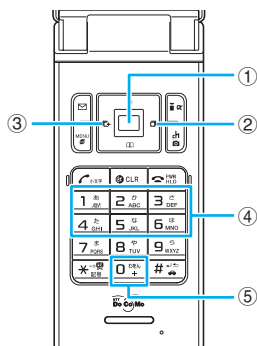

- ① [Shutter] : Shutter
- ② [Zoom in] : Zoom in
- ③ [Zoom out] : Zoom out
- ④ [1] to [6] : Displays the following shooting menu respectively
 - [1] : CHG camera-mode
 - [2] : Select size
 - [3] : Quality setting or File size setting
 - [4] : Photo mode
 - [5] : Brightness
 - [6] : White balance
- Some menus are not displayed depending on the camera mode.
- ⑤ [0] : Displays the explanation of keys

Guide to the shooting screen

The shooting screens display the icons of the Camera settings. Each icon means as follows:

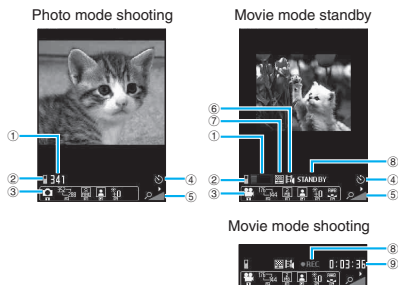

① Remaining storage count/Memory info*1

- [Remaining storage count icon]** The number of images that can be saved
- White: 11 or more
 - Yellow: 10 or less
 - Red: No memory available
- [Available capacity icon]** The available capacity that can be saved against the total capacity
- Blue: 500K bytes or more remaining
 - Yellow: Less than 500K bytes remaining
 - Red: No memory available*2

*1: The displayed count and the capacity are only an approximate figure. This icon does not appear when the destination to save is set to "microSD" and no microSD memory card is inserted.

*2: Shooting is available except when shooting movies with "File size" set to "Long time". The shot is saved or overwrites the data in the FOMA terminal (Phone)/microSD memory card after shooting.

② Select to save (pp.132, 136)

  The destination set to save (FOMA terminal (Phone)/microSD memory card)

③ Shooting menu (p.131)

 The settings of the shooting menu

④ Auto timer (p.138)

 The Auto timer is set

⑤ Zoom (p.137)

 ~  ~  The zoom settings

⑥ Movie type set (p.136)

 Normal (video and voice)
 Video only
 Voice only

⑦ Quality setting (p.136)

 Long dur. mode
 Normal
 Fine mode
 Super Fine mode

⑧ Shooting status


 The movie is being shot
 The movie shooting is in standby mode

⑨ Shooting time

 Remaining time (hour: minutes: seconds)


Selecting the shooting menu

When you display the shooting menu on the screen, you can set various settings only by selecting icons.

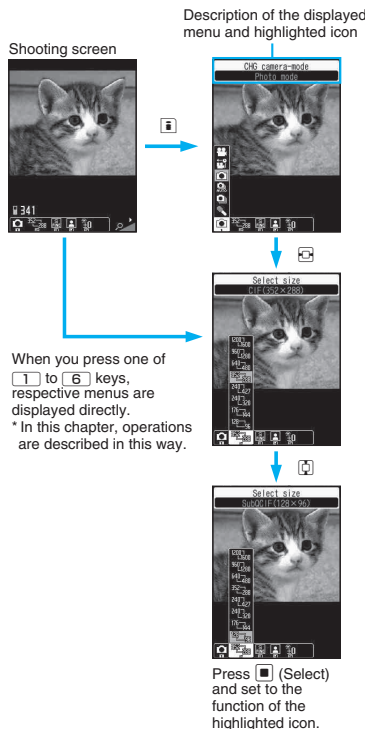

Icons and settings of the shooting menu

 - The selectable items are different depending on the camera mode.
- Some menus are unavailable depending on the shooting condition (when using the camera from other function such as mail function, when using a front camera, etc.)



① CHG camera-mode

- Movie mode.....p.135
- Chance capture.....p.137
- Photo mode.....p.131
- A-Continuous mode.....p.133
- M-Continuous mode.....p.133
- Voice mode.....p.137

② Select size Photo mode (Default: Screen)

12000 to 12800 2M (1,200 × 1,600) to SubQCIF (128 × 96)

Movie mode (Default: QCIF)

2200 to 1280 QVGA (320 × 240) to SubQCIF (128 × 96)

③ Quality setting/File size setting Photo mode (Quality setting)

(Default: Super Fine)

Super Fine.....Super Fine mode (File size: large)

Fine.....Fine mode (File size: medium)

Normal.....Normal mode (File size: small)

Movie mode (File size setting)

(Default: 2MB)

500KB.....Up to 500K bytes

2MB.....Up to 2M bytes

Long time.....Long time (microSD only)

④ Photo mode

Photo mode (Default: Auto)

Movie mode (Default: Portrait)

Auto.....Automatic shooting mode

Portrait.....Suitable for shooting portraits

Scenery.....Suitable for shooting scenery (including night view)

Close-up.....Suitable for close-up shooting

Sports mode.....Suitable for shooting moving objects

Night mode.....Suitable for shooting portraits, etc. in the dark

OFF.....Turns off the shooting effects.

- * Only "Portrait", "Scenery" or "Close-up" can be set for Movie mode.
- * Only "Portrait", "Night mode" or "OFF" can be set for the front camera in Photo mode.
- * The setting is fixed to "Portrait" for the front camera in Movie mode.

⑤ Brightness (When the camera launched: ± 0)

+2 +1 0 -1 -2 Brightness of the image (+2/-2 +1/± 0/-1/-2)

⑥ White balance (Default: Auto)

In Photo mode, this can be set only when "Photo mode" is set to "OFF".

Auto.....Compensates the tone automatically

Fine.....Suitable for shooting outside on a sunny day

Cloudy.....Suitable for shooting outside on a cloudy day or in the shade

Light bulb.....Suitable for shooting under the incandescence

Fluorescent lamp.....Suitable for shooting under the fluorescence


Shooting Still Images

<Photo mode>

① On the standby screen ▶ Select



The "Photo mode shooting" screen appears.

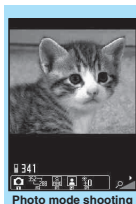

Function menu▶p.132


② Point the camera at the object ▶

■ (Record)

The "Photo mode checking" screen appears.

■ To retake the shot

▶ [CLR] ▶ "YES"

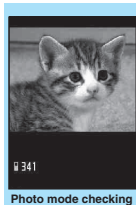

Function menu▶p.132

③ ■ (Save)

NOTE

- Depending on image size, image quality may be degraded.

Photo mode shooting screen (p.131)/Continuous shooting screen (p.133)

FUNC

Front camera ⇄ **Rear camera**^{*1}.....Switches between front camera and rear camera.

CHG camera-mode.....Changes the camera mode.

Select size • Quality setting.....Sets the same setting as the shooting menu (p.131).

Interval/Number^{*2}.....Sets the shooting interval and the number of images you want to take on the continuous mode. → p.134

Camera Settings

Photo mode.....Sets the same setting as the shooting menu (p.131).

Brightness.....Adjusts the brightness for shooting in 5 steps “-2 ~ ±0 ~ +2” using . The brightness is automatically specified if you do not press any key for 2 seconds. “±0” is the default setting when you launch the camera.

White balance.....Sets the same settings as the shooting menu (p.131).

Color mode set.....Selects the effect for the photographed image from “Normal/Sepia/Monochrome”.

Flicker^{*3}.....Avoids the flicker on the shooting screen. Selects from “Auto/Mode 1 (50Hz)/Mode 2 (60Hz)”.

Shutter sound (default: Sound 1).....Sets the shutter sound.

Auto timer.....Sets the auto timer. → p.138

Select frame^{*1}.....Sets the frames for images. → p.134

Auto save set.....Specifies whether to save a shot image to the folder selected in “Select to save” automatically or not (ON/OFF).

Select to save (default: “Camera” of Phone).....Sets the folder to save the shot image.

File restriction (default: File unrestricted).....Specifies whether to allow the redistribution of the shot image. → p.230

Memory info.....Displays the amount of stored images.

Help.....Displays the guide for shooting.

*1: This function is available only for the Photo mode shooting screen.

*2: This function is available only for the continuous shooting screen.

*3: Cannot be operated/set for the front camera.

NOTE

<Shutter sound>

- When Manner mode is set (“VM tone” set to “OFF”), the FOMA terminal does not play the shutter sound for checking.

<Memory info>

- The displayed file size is only an approximation.

FUNC

Photo mode checking screen (p.131)

Save.....Saves the images to the folder specified in “Select to save”.

Mirror save.....Inverts the left and right of the displayed image and saves the image to the folder specified in the “Select to save” setting.

Compose message^{*} → p.135

You can also compose an i-mode mail or Deco-mail by pressing (MAIL) on the Photo mode checking screen.

Edit image.....Adds a frame or effect to the image. “Editing Images” → p.233

Set as display.....Sets the still image to the standby screen, etc.

“Changing the Display” → p.94

“Setting the image sent during videophone calls” → p.71

Change frame.....“Shooting framed images” → p.134

Mirror display ⇄ **Normal display**.....Selects the checking screen display from normal display or mirrored display.

Select to save (default: “Camera” of Phone).....Sets the folder to save the shot image.

File restriction (default: File unrestricted).....Specifies whether to allow the redistribution of the shot image. → p.230

Cancel.....Deletes the photographed image and returns to the photo mode shooting screen.

*: Not available when 2in1 is in B mode.

NOTE

<Edit image>

- Selecting “Edit image” changes the display to the Normal display.
- You cannot edit the image larger than 1M (960 × 1,280).

NOTE

<Set as display>

- You cannot set the image larger than 1M (960 x 1,280). If the file size exceeds 100K bytes, the image cannot be set other than stand-by screen and wake-up display.
- The still images to be set to the standby screen are saved to the folder set in "Select to save". However, when set to "microSD", the images are saved to the Camera folder under My pictures of the FOMA terminal (Phone) (the images is not saved on the microSD memory card).

Shooting continuously <Continuous mode>

You can shoot up to 20 still images continuously with using the rear camera.

There are two types of continuous shooting:

A-Continuous shooting (Auto) and M-Continuous shooting (Manual).


- A-Continuous shooting is the function that automatically shoots images of specified numbers at the set interval once you release the shutter.
- M-Continuous shooting enables you to shoot images for the set number, releasing the shutter for one by one.
- You can enjoy the continuously shot images as an animation after putting them into the Original animation.
- Folding the FOMA terminal terminates the continuous shooting.

1 Photo mode shooting screen (p.131)▶

1 ▶ "AUTO" or "M"

The "Continuous shooting" screen appears.

Shot number/
Max. shot count

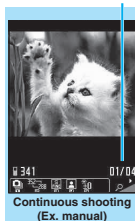

Function menu▶p.132

2 Point the camera at the object▶ ■ (Cont./Record)

■ To stop the continuous shooting

A-Continuous shooting:

▶ [NO]

M-Continuous shooting:

▶ [CLR]

The shooting is finished and the "Continuous shooting checking" screen appears.



Function menu▶p.134

■ To check the images in detail

▶ Use [] to move the frame to the image you want to check▶ [Detail]

Use [] to change the image to check.

■ To save only 1 still image displayed in detail

▶ [Save]



Function menu▶p.134

3 [ch] (L) (R) (For 1 second or longer)▶ "Save" or "Mirror save"

The image is saved to the folder specified in "Select to save".

■ To store selection

▶ Select images you want to save▶ [ch] (L) (R)

▶ "Save" or "Mirror save"

"About multiple-choice"→p.39

■ To store Original animation

▶ [FUNC]▶ "Store all&anime"▶ "Save" or "Mirror save"

NOTE

- If you shoot strong light or moving object in A-Continuous shooting, the interval may become longer than the specified one.

● Setting the shooting interval and number of images

1 Continuous shooting screen (p.133)▶

☑ (FUNC) ▶ "Interval/Number"▶

Select any item:

Shot interval (default: 0.5 seconds).....Selects the interval for shooting images from "0.5 seconds/1.0 seconds/2.0 seconds".

Cannot be set for M-Continuous shooting.

Shot number (default: 5).....Sets the number of images (05 to 20 images in 2 digits).

The maximum number of images varies by the image size. When the image size is CIF (352 × 288), the number of shots is automatically set to 4. When the image size is Screen (240 × 427) or QVGA V. (240 × 320), the number of shots is set to about 5 to 10.

2 After setting is finished, press [CLR]▶

[CLR]

The continuous shooting screen reappears.

FUNC

Continuous shooting checking screen (p.133)

Store selection.....Saves the still image marked with a checkbox (☑).

Store all.....Saves all the still images in normal or mirror display.

Store all&anime.....Saves all the still images you shot in normal or mirror display, and stores as the Original animation.

Select this.....Selects the still image indicated by the frame and marks the checkbox of the image (☑).

Select all.....Selects all the still images you shot and marks the checkboxes of the images (☑).

Release this.....Releases the still image indicated by the frame and releases the checkbox of the image (☐).

Release all.....Releases all the still images and releases the checkboxes of the images (☐).

Mirror display↔**Normal display**.....Selects the checking screen display from Mirror display or Normal display.

Select to save (default: "Camera" of Phone).....Sets the folder to save the shot image.

File restriction (default: File unrestricted).....Specifies whether to allow the redistribution of the image with ☑. → p.230

Restriction all (default: File unrestricted).....Specifies whether to allow the redistribution of all the shot image. → p.230

Cancel.....Deletes all the photographed images and returns to the continuous shooting screen.

NOTE

<Store all&anime>

- When "Select to save" is set to "microSD", the images are saved to the Camera folder under My pictures of the FOMA terminal (Phone) (the images is not saved on the microSD memory card).

FUNC

Continuous shooting detail checking screen (p.133)

Save.....Saves the images to the folder specified in "Select to save".

Mirror save.....Inverts the left and right of the displayed image and saves the image to the folder specified in the "Select to save" setting.

Compose message* → p.135

You can also compose an i-mode mail or Deco-mail by pressing [MAIL] (MAIL) on the Continuous shooting detail checking screen.

Mirror display↔**Normal display**.....Selects the checking screen display from normal display or mirrored display.

File restriction (default: File unrestricted).....Specifies whether to allow the redistribution of the shot image. → p.230

* : Not available when 2in1 is in B mode.

Shooting framed images

<Framed photography>

The image sizes supported by FOMA S0705i is under VGA (640 × 480).

- You can use the downloaded frames in addition to the pre-installed ones.

1 Photo mode shooting screen (p.131)▶

☑ (FUNC)▶ "Select frame"▶ Select a frame

■ To cancel the framed image

▶ "OFF"

2 Point the camera at the object▶

■ (Record)

The "Frame shooting check" screen appears.

■ To change the frame before saving

▶ ☑ (FUNC)▶ "Change frame"

3 ■ (Save)

Composing an i-mode mail message or Deco-mail message using the still image

You can compose an i-mode mail message with the still image you shot attached or insert the still image into the Deco-mail message body.

1 Photo mode checking screen (p.131) ▶ (MAIL) ▶ Select any item:

Attach image^{*1}

Attach mail.....Attaches the image without changing the image size.

QVGA scale down.....Attaches the image by changing the image and file size without changing the aspect ratio.

Insert image^{*2}

Insert mail^{*3}.....Inserts the image without changing the image size.

SubQCIF scale down.....Inserts the image by changing the image and file size without changing the aspect ratio.

*1: When the image is shot with the image size smaller than QVGA V. (240 × 320), the selection screen of "Attach mail/QVGA scale down" does not appear.

*2: When the image is shot with the image size of SubQCIF (128 × 96), the selection screen of "Insert mail/SubQCIF scale down" does not appear.

*3: Cannot be selected when the image size is other than QCIF (176 × 144).

2 Compose the message

Composing and sending i-mode mail → p.166
Composing and sending Deco-mail → p.168

NOTE

- Not available when 2in1 is in B mode.

Shooting Movies

<Movie mode>

- When "File size" is set to "Long time", the shooting ends after saving the shot movie on the microSD memory card.
- The shooting time varies by the conditions.
- You cannot shoot a movie while you are talking on the phone.
- Folding the FOMA terminal terminates the movie shooting.

1 Photo mode shooting screen (p.131)▶



The "Movie mode shooting" screen appears.



Function menu▶p.136

2 Point the camera at the object▶ (Record)

The shooting starts.
You can zoom in/out during the shooting.



- If the file size reaches the limit specified in File size

▶ "OK"

The movie mode checking screen appears.

3 (Stop)

The shooting terminates and the "Movie mode checking" screen appears.


- To play the movie you shot

▶  (Play)

- To retake the shot

▶  "YES"

4 (Save)

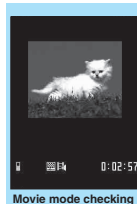

Function menu▶p.136

NOTE

- If you perform a key operation such as zoom in/out during the shooting, the operation sound may be recorded.



Movie mode shooting screen (p.135)

Front camera ↔ **Rear camera** Switches between front camera and rear camera.

CHG camera-mode Changes the camera mode.

Select size • **File size** Sets the same setting as the shooting menu (p.131).

Quality setting (default: Normal) Selects the quality and duration for shooting movies from "Long dur. mode/Normal/Fine mode/Super Fine mode". When set to "Long dur. mode", the shooting time becomes the longest but the image quality becomes the lowest. Contrary, when set to "Super Fine mode", the image quality becomes the highest but the shooting time becomes the shortest.

Camera Settings

Photo mode Sets the same setting as the shooting menu (p.131).

Brightness Adjusts the brightness for shooting in 5 steps "-2 ~ ± 0 ~ +2" using . The brightness is automatically specified if you do not press any key for 2 seconds. "± 0" is the default setting when you launch the camera.

White balance Sets the same settings as the shooting menu (p.131).

Color mode set Selects the effect for the photographed image from "Normal/Sepia/Monochrome".

Flicker Avoids the flicker on the shooting screen. Selects from "Auto/Mode 1 (50Hz)/Mode 2 (60Hz)".

Shutter sound (default: Sound 1) Sets the shutter sound.

Auto timer Sets the auto timer. → p.138

Movie type set

Normal (when the camera is launched) Records video and voice.

Video Shoots a movie without any voice.

Voice Records voice without movies.

Auto save set Specifies whether to save a shot movie to the folder selected in "Select to save" automatically or not (ON/OFF).

Select to save (default: "Camera" of Phone) Sets the folder to save the shot movie or movie with voice only. When saving the movie on the microSD memory card, movie with video is saved in "SD Video folder" and movie with voice only is saved in "Multi media folder".

File restriction (default: File unrestricted) Specifies whether to allow the redistribution of the shot movie. → p.230

Memory info Displays the amount of stored data for movies.

Help Displays the guide for shooting.

* : Cannot be operated/set for the front camera.

NOTE

<Photo mode>

- The Photo mode is fixed to the Portrait for the front camera.

<Shutter sound>

- When Manner mode is set ("VM tone" set to "OFF"), the FOMA terminal does not play the shutter sound for checking.
- You cannot set the downloaded melody as the shutter sound. In addition, you cannot change the volume of the shutter sound.

<Memory info>

- The displayed file size is only an approximation.



Movie mode checking screen (p.135)

Play Plays the movie you shot.

Save Saves the movie to the folder specified in "Select to save".

Compose message Composes an i-mode mail with the shot movie attached. → p.166
You can compose an i-mode mail with the shot movie attached by pressing (MAIL) on the movie mode checking screen.

Set as stand-by Sets the shot movie to the standby screen.

Edit title Edits the movie title. You can enter up to 9 double-byte or 18 single-byte characters.

Select to save (default: "Camera" of Phone) Sets the folder to save the shot movie or movie with voice only. When saving the movie on the microSD memory card, movie with video is saved in "SD Video folder" and movie with voice only is saved in "Multi media folder".

File restriction (default: File unrestricted) Specifies whether to allow the redistribution of the shot movie. → p.230

Cancel Deletes the movie and returns to the movie mode screen.

* : Not available when 2in1 is in B mode.

NOTE

<Set as stand-by>

- The movie to set to the standby screen is saved to the folder set in "Select to save". However, when set to "microSD", the movie is saved to the Camera folder under i-motion of the FOMA terminal (Phone).

Capturing Important Scenes

<Chance capture>

Even if the available shooting time is reached when shooting a movie, you can continue the shooting until the scene you want to shoot comes.

- The movie you shot is saved for the available shooting time (the default is 3 minutes 38 seconds) from the end of the movie with the starting point reset to fit that time. The movie shot before that time is not saved.

1 Photo mode shooting screen (p.131)▶



2 Point the camera at the object▶



The shooting starts.

You can zoom in/out during the shooting.

After the available shooting time is reached, the remaining time display flashes.

3 [Stop]

The shooting is finished.

4 [Save]

Using Voice Mode

<Voice mode>

You can record your voice without movies.

1 Photo mode shooting screen (p.131)▶



The "Recording start" screen appears.

Function menu of the movie mode screen
→ p.136

2 [Record]

The recording starts.

3 [Stop]

The recording finished. The "Recording check" screen appears.

Function menu of the movie mode checking screen → p.136

4 [Save]

Changing the Shooting Settings

You can change the camera settings such as the zoom or Auto timer.

Using the zoom

Using the zoom enables you to adjust the image being shot to your desired size.

- The zoom is digital.

1 Each shooting screen▶ Use to adjust the zoom

The image is zoomed in/out by one step each time you press , and hold down it to zoom in/out continuously.

NOTE

- "1x" is the default setting when you launch the camera. Changing the image size or camera mode also changes the zoom to "1x".

■ Maximum zoom rate for each image size

Image size	Shoot still image	Movie mode
Rear camera (16 steps adjustment)		
2M/1M	—	—
VGA	Approx. 1.8x	—
CIF	Approx. 1.7x	—
Screen	Approx. 1.8x	—
QVGA V.	Approx. 2.4x	—
QVGA	—	Approx. 1.8x
QCIF	Approx. 3.3x	Approx. 3.3x
SubQCIF	Approx. 4.6x	Approx. 4.6x
Front camera (2 steps adjustment)		
VGA	—	—
CIF	Approx. 1.8x	—
Screen	—	—
QVGA V.	Approx. 1.5x	—
QVGA	—	Approx. 2.0x
QCIF	Approx. 2.0x	Approx. 2.0x
SubQCIF	Approx. 2.0x	Approx. 2.0x

Using the auto timer

- The Auto timer is reset to "OFF" each time you finish shooting.

1 Each shooting screen (FUNC) ▶ "Auto timer" ▶ "ON" ▶ Enter the time for the Auto timer (01 to 15 seconds in 2 digits)

"10 seconds" is the default setting.

● If you set the Auto timer

"⏸" appears on the screen to indicate that the Auto timer is set.

Pressing [RECORD] (Record) plays the Auto timer tone and the Auto timer starts.

The incoming call lamp flashes in blue. In addition, the illumination lamp or "⏸" on the screen flashes.

The countdown tone sounds about 5 seconds before the shooting. The incoming call lamp flashes rapidly.

■ To cancel the Auto timer settings

▶ (FUNC) ▶ "Auto timer" ▶ "OFF"

■ To stop the timer while it is running

▶ [QUIT] (Quit) or [CLR]

NOTE

- During the Auto timer countdown, you can shoot manually by pressing [RECORD].
- The Auto timer cannot be used in M-Continuous shooting.

Using the Bar Code Reader

<Bar code reader>

The FOMA terminal can scan JAN codes and QR codes using the rear camera. The scanned data can be used for displaying/copying the text, using the functions of Phone To/AV Phone To, Mail To, Web To, i-appli To, or adding to bookmark/phonebook especially in QR code. The FOMA terminal can also scan the image, melody or ToruCa data to play or save.

- The FOMA terminal can save up to 5 scanned bar codes.
- Hold the FOMA terminal firmly to ensure that it does not shake during the scanning.
- When scanning bar codes, use the rear camera and hold the FOMA terminal about 6 to 8 cm away from the scanned code.

■ JAN codes and QR codes

● JAN code

A bar code consisting of vertical lines (bars) of various widths and spaces to represent numbers. The FOMA terminal can scan 8-digit (JAN8) and 13-digit (JAN13) bar codes.

* When the FOMA terminal scans the JAN code on the right above, it is displayed as "4942857113068".



● QR code

A type of two-dimensional codes consisting of the horizontal and vertical patterns to represent numbers, alphabets, kanji, kana or pictographs. Some QR codes express images or melodies. Some data are divided into several QR codes.

* When the FOMA terminal scans the QR code on the right above, it is displayed as "株式会社NTTドコモ" (NTT DoCoMo, Inc.).



Scanning codes

- Before scanning, set to the close-up mode by moving the lens selector switch to [MACRO] (macro lens). → p.126

1 MENU ▶ "LifeKit" ▶ "Bar code reader"

2 Position the JAN code or QR code inside the recognition field

The scanning starts automatically.

The recognition field is expressed using "┐", "┌", "└", "┘" at the corners of the screen.

Focus the JAN code or QR code so that the entire code is displayed as big as possible inside the recognition field.

It may take time to scan the data.



■ To cancel the scanning

▶ [QUIT] (Quit) ▶ "OK"

■ To adjust the zoom

[ZOOM IN]: Zooms in.

[ZOOM OUT]: Returns to default.

■ To scan the data consisting of several QR codes

▶ "OK" ▶ [READ] (Read) ▶ Position the QR code inside the recognition field

The FOMA terminal can scan up to 16 QR codes expressing one data.

3 Check the scanned data

■ To discard the scanned data

▶ [CLR] ▶ "YES"

4 [FUNC] (FUNC) ▶ "Store" ▶ "YES" ▶ "OK"

The scanned data is saved.

NOTE

- The FOMA terminal cannot scan a code if it is not a JAN code or QR code. You may be unable to scan some bar code, depending on the size.
- The FOMA terminal may fail to scan the code, depending on the scratch, stain, damage, print quality, the reflection of light or the QR code version.
- You can also run the Bar code reader from the text editing screen. The scanned data is entered in the screen.
- Some scanned images cannot be saved depending on the image size or file size.
- You cannot save the scanned data to the microSD memory card.

[FUNC] Scanning screen (p.138)

Reading data list....."Using the scanned data"→p.139

Add shortcut→p.100

Using the scanned data


- You can use the following scanned data:

Item	Description
Add to phonebook	Stores the name, reading, phone number, mail address, birthday, postal code, address and memo to the phonebook→p.76
Compose message	Composes an i-mode mail with the recipient address, subject and message entered→p.166
Add bookmark	Stores the URL and title to the Bookmark→p.152
Activate i-appli	Runs the specified i-appli→p.197
Melody icon	Plays the melody→p.240
Phone number	"Phone To/AV Phone To function"→p.156
ToruCa Icon	Displays the ToruCa→p.214
Mail address	"Mail To function"→p.156
URL	"Web To function"→p.156

1 Scanning screen (p.138)▶ [FUNC] (FUNC)

▶ "Reading data list"

 The "Reading data list" screen appears.




Reading data list

Function menu▶p.139

2 Select the scanned data

The "Reading data detail" screen appears.

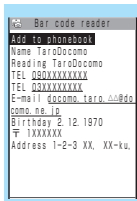

Reading data detail

Function menu▶p.140

3 Select any of the displayed items

NOTE

- If the data you want to scan contains characters that cannot be read by the Bar code reader, those characters are converted to spaces (blanks).
- The title of the scanned data will be:
 - Title: yyyyymmdd_hhmm_xxxx (Year/month/day_time_4-digit number)
 - If the same date and time are set for more than once, the 4-digit numbers are assigned to the data in numerical order.

[FUNC] Reading data list screen (p.139)

Edit title.....Edits the title of the data. You can enter up to 9 double-byte or 18 single-byte characters.

Result.....Displays the Bar code reader reading data detail screen.

Delete this • Delete all.....Deletes one or all scanned data.

Store.....Saves the reading data.

Display list.....Displays the Reading data list screen.
If the displayed data is not stored yet, a message appears asking whether to delete the data.

Internet.....Accesses the site when the URL is highlighted. "Web To function" → p.156

Compose message.....Composes an i-mode mail with the reading data entered when "Compose message" is highlighted.

When the mail address is highlighted, an i-mode mail with the address entered is composed.

Dialing.....Calls the phone number when it is highlighted. "Phone To/AV Phone To function" → p.156

Add to phonebook.....Stores the scanned data to the phonebook when "Add to phonebook" is highlighted. → p.76
When a phone number is highlighted, it is stored to the phonebook.
When a mail address is highlighted, it is stored to the phonebook.

Add bookmark.....Stores the reading data to Bookmark when "Add bookmark" is highlighted. → p.152
When a URL is highlighted, it is stored to Bookmark.

Save image.....Stores the image data to My picture of the Data box.

If you do not set the image to the standby screen, select "NO" after selecting the folder.

Save melody.....Stores the melody data to Melody of the Data box.

If you do not set the melody to the ring tone, select "NO" after selecting the folder.

Save ToruCa.....Stores the ToruCa to the ToruCa folder.

Start i-appli.....Runs the i-appli specified in the scanned data when "Start i-appli" is highlighted.

Copy.....Copies the text included in the scanned data.
→ p.304

* : Not available when 2in1 is in B mode.

NOTE

<Internet> <Add bookmark>

- You cannot use the Web To function or add a bookmark if there are unusable characters in the URL.

<Compose message>

- The address cannot be entered if it includes characters that cannot be entered.

<Dialing>

- As the image settings for videophone are not retained after the dialing or talking is finished, set this item each time you make a call.

Scanning Text

<Text reader>

Using the rear camera, the FOMA terminal can scan printed text then add the scanned text data as a phonebook entry or bookmark, or use the data to compose a mail. You can also make a call or access website using the data.

- The FOMA terminal can save up to 8 scanned bar codes.
- Hold the FOMA terminal firmly to ensure that it does not shake during the scanning.
- When scanning text, hold the rear camera about 6 to 8 cm away from the text.
- The FOMA terminal can scan vertically written Japanese text.

■ Scanning mode

The following are the scan modes. Select the mode suitable for the data to scan:

Item	Description
Card read	Scans the name, phone number, mail address, postal code, address and memo printed on the business card to add to the phonebook.
Compose message	Composes an i-mode message with the scanned recipient address, subject and message entered.
URL	Scans URL, and accesses the site or adds the URL to bookmark.
Mail address	Scans the mail address and composes an i-mode message.
Phone number	Scans the phone number and makes a call.
Free memo	Scans Japanese or English text to save to Text memo.

■ The number of characters that can be scanned


The following table shows the maximum number of characters that can be scanned for each item:

Item		Maximum number of characters that can be scanned
Card read	Name	16 in double-byte, 32 in single-byte
	Phone number	26 in single-byte numbers including #, *, +, p (pause), (,), -
	Mail address	50 in single-byte alphabets, numbers and symbols
	Postal code	7 in single-byte
	Address	50 in double-byte, 100 in single-byte
	Memo	100 in double-byte, 200 in single-byte
Compose message	Receiver	50 in single-byte alphabets, numbers and symbols
	Subject	100 in double-byte, 200 in single-byte
	Message	128 in double-byte, 256 in single-byte
URL		256 in single-byte alphabets, numbers and symbols
Mail address		256 in single-byte alphabets, numbers and symbols
Phone number		256 in single-byte numbers including #, (,), -
Free memo		128 in double-byte, 256 in single-byte
Dictionary*	Japanese	32 in double-byte, 64 in single-byte
	English	64 in single-byte

* : This option is available when the Text reader is launched from Dictionary.

■ Guide to the scanning screen

<Example: Card read mode>

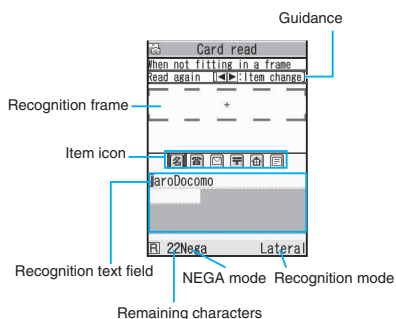

Guidance : Displays the operation.
Recognition frame: Displays the recognition field.
Item icon : Displays the item to scan.

Card read mode: "Name/phone number/mail address/postal code/address/memo"

Compose message mode:

"Receiver/subject/message"

Recognized text field:

Displays the scanned text (The guidance appears on some screens).

Recognition mode:

Displays the recognition mode used for scanning "Kanji (lateral writing/vertical writing)/postal code/phone number/mail address/URL".

Remaining characters:

Displays the remaining number of single-byte characters that can be scanned.

NEGA mode : Appears if the NEGA/POSI mode is set to Negative fix.

 
Scanning text

<Example: To scan text in Card read mode>

- Before scanning, set to the close-up mode by moving the lens selector switch to  (macro lens). → p.126

1 “LifeKit” ▶ “Text reader”

The “Text reader” screen appears.



Text reader

Function menu ▶ p.143

2 “New”

The “Scanning mode selection” screen appears. “Scanning mode” → p.140

3 “Card read”

The “Text reader scanning” screen appears.



Text reader scanning

Function menu ▶ p.143

4 Use to highlight the icon for the item to scan ▶ Display the text in the recognition field

Focus the text so that the entire text appears as large as possible inside the recognition field. If the recognition field cannot display the whole text, the text can be scanned several times.

■ To adjust the zoom

- : Changes from “Normal” to “Large”.
- : Returns from “Large” to “Normal”.

5 (Read)

The FOMA terminal scans the text, and the recognized text appears in red.

■ To rescan the text

▶  ▶ “YES”


If the screen does not display the entire text, press  to check.

Pressing  (Store) stores the scanned text, and then the reading data screen (detail) appears.

The following are the two methods to edit the scanned text:

■ To select the character to edit

▶ Use  to highlight the character to edit ▶ Press the candidate No. Press  to change the cases between upper and lower if it can be changed.

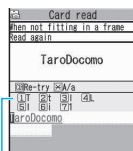

Candidate

 
■ To edit in the text editing

▶  (FUNC) ▶ “Edit” ▶ Edit the text

The text can be edited in the typical text editing.

To return to the candidate selection, press  (FUNC) and select “Select recog. data”.

Go on to Step 6 when you finish editing.



6 (Set)

The entry is fixed as the text.

■ To scan the remaining text

▶ Repeat Steps 4 to 6

Ensure that the last two or more characters of the scanned text are included in the recognition field.

■ To scan another item

▶ Use  to select the icon for the item to scan ▶ Repeat Steps 4 to 6

In Card read mode, you can scan up to 4 phone numbers and up to 3 mail addresses.

7 (FUNC) ▶ “Store”

The Reading data detail screen appears. Press  to return to the Reading data list screen.

NOTE

- Do not move the FOMA terminal while the “Processing” message appears on the screen.
- The FOMA terminal cannot recognize handwritten characters. If the text is faxed or copied, if the fonts are decorated, if the character spaces are not fixed, or if the fonts and background cannot be easily distinguished, the FOMA terminal may fail to recognize the text. Also, the FOMA terminal may not recognize the text correctly depend on the ambient lighting.

Add shortcut → p.100

Using the text data


- You can use the following scanned data:

Item	Description
Add to phonebook	Adds the name, phone number, mail address, postal code, address and memo to the phonebook → p.76
Compose message	Composes an i-mode mail with the recipient address, subject and message entered → p.166

* Select any displayed item such as Phone number or Mail address to edit the data.

1 "LifeKit" → "Text reader" → "Reading data list"

 
The "Reading data screen (list)" appears.



Reading data (list)
Function menu → p.143

2 Select the scanned data

The "Reading data screen (detail)" appears.

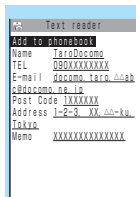

Reading data (detail)
Function menu → p.143

3 Select any of the displayed items

Text reader scanning screen (p.142)/Reading data screen (list/detail) (p.143)

Edit¹.....Edits the scanned text.

Store².....Saves the reading data.

Internet.....Accesses the site of the scanned URL in URL mode. "Web To function" → p.156

Compose message³.....Displays the New mail screen with the reading data entered and composes i-mode mail. The entered data varies depending on the displayed reading data or screen.

Dialing.....Calls or sends the SMS of the phone number in Phone number mode.

"Phone To/AV Phone To function" → p.156

Add to phonebook.....Adds the scanned data to the phonebook. The stored data varies depending on the displayed reading data or screen.

Add bookmark.....Add the URL to the Bookmark in URL mode.

Search phonebook.....Searches the phonebook using the scanned data.

You cannot search the phonebook on the scanning screen, in Card read mode or Compose message mode.

Add to memo.....Adds the scanned data to Text memo. You cannot store the scanned data in Card read mode or Compose message mode.

Reading mode set².....Selects the scanning mode from "Card read/Compose message/URL/Mail address/Phone number/Free memo".

NEGA/POSI mode².....Sets the type of printing.

Auto setting.....Automatically sets the positive or negative.

Positive fix.....Suitable for printing the dark text on the light background.

Negative fix.....Suitable for printing the light text on the dark background.

Guidance OFF ↔ **Guidance ON**².....Sets whether to display the guidance or not.

Vertical writing ↔ **Lateral writing**².....Selects the vertical writing or lateral writing for the Japanese text to scan.

Display detail⁴.....Displays the Reading data screen (detail).

Display list⁵.....Displays the Reading data screen (list).

Copy⁶.....Copies text contained in the scanned data.

Delete this • Delete all*6.....Deletes one or all scanned data.

*1: Unavailable on the Reading data screen (list).

*2: Available only on the Scanning screen.

*3: Not available when 2in1 is in B mode.

*4: Available only on the Reading data screen (list).

*5: Available only on the Reading data screen (detail).

*6: Unavailable on the Scanning screen.

NOTE

- As the image settings for videophone are not retained after the dialing or talking is finished, set this item each time you make a call.

i-mode/i-motion/i-Channel

What is i-mode?	146
■ Viewing sites	
Viewing a Site	i-mode menu/site 146
Viewing and Using Sites	149
Registering My Menu Entries	My Menu 151
Changing Your i-mode Password	Change i-mode Password 151
Viewing Websites	Internet connection 151
Accessing Websites and Sites Quickly	Bookmark 152
Saving Site Contents	Screen memo 153
■ Downloading images and melodies from sites	
Downloading Charged Contents	154
Downloading Images from Sites and Messages	Save image 154
Downloading Melodies from Sites	i-melody 155
Downloading Kisekai Tool from Sites	155
Downloading Various Data from Sites	155
■ i-mode utility functions	
Using the Phone To/AV Phone To, Mail To and Web To Functions	Phone To/AV Phone To, Mail To and Web To 156
Using Location Information	156
■ Specifying your i-mode settings	
Specifying Your i-mode Settings	157
■ Using certificates	
Using SSL Certificates	158
Setting FirstPass	159
Changing the Certificate Host	160
■ Using i-motion	
What is i-motion?	161
Downloading i-motion	Download i-motion 161
Setting Whether to Play an i-motion Automatically	i-motion auto-replay 162
■ Using i-Channel	
What is i-Channel?	163
Viewing Sites from the Channel List	163
Setting i-Channel	i-Channel setting 164

What is i-mode?

The i-mode service enables you to use an i-mode-compatible FOMA terminal (i-mode terminal) display to access online services such as i-mode mail, connecting to the Internet and sites (programs), etc.

- i-mode is a pay service you need to apply for.
- For details on i-modes, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Notes on using i-mode

- Contents on sites (programs) or Internet websites are normally protected by copyright laws. The loaded documents, pictures, and other data from these sites (programs) or websites to your i-mode terminal is permitted only when intended for your personal use only. No data may be copied in part or in whole, whether modified or not, for resale or redistribution without the consent of the copyright holder.
- Note also that when the FOMA card (UIM) is replaced or the mobile phone is turned on with no FOMA card (UIM) inserted, some types of mobile phone may be incapable of viewing or playing melodies, images and movies downloaded from sites, files attached to sent or received mail (images, movies or melodies), screen memos and MessageR/F.
- If a file with restrictions on viewing and playback imposed by the FOMA card (UIM) is set as the standby screen or as a ring tone, the FOMA terminal operates under the default settings if the FOMA card (UIM) is replaced or the FOMA terminal is turned on without the FOMA card (UIM) inserted.

Viewing a Site

<i-mode menu/site>

You can access the services provided by IPs (information service provider). (You may need a subscription.)

- 1  "iMenu"
"i-mode menu" screen appears first, then "iMenu" screen appears.



i-mode menu



iMenu

Select "iMenu" in the i-mode menu screen, then i-mode communication starts.

"" icon flashes while the communication with the i-mode Center is in progress, and "" icon flashes when you are receiving i-mode service (during i-mode).

- 2 Select links and other options to display the site screen you want to view

"Viewing and Using Sites"
→ p.149

- To cancel the download of pages

▶ CLR



Function menu ▶ p.147

- 3 To quit i-mode, press  "YES"
After "" blinks, "" disappears.

NOTE

- The i-mode service area is the same as the FOMA service area (the area in which calls can be made and received).
- Some sites may require you to pay additional information fee.
- The number of colors displayed on certain sites exceeds the maximum number of colors that the FOMA terminal can display. For this reason, the site may not appear as intended.
- On some i-mode-compatible site and websites, some characters may be difficult or impossible to see due to the selected colors.

NOTE

- When you are requested information on music you play by the site, the confirmation screen concerning transmission of music information appears. Select "YES" to send the information (title, artist name and play date) on the music you play in your FOMA terminal. The information is used to offer information that IP (information service provider) customized to the customer.

iMenu in English

English iMenu is available.

1.  "iMenu" Scroll down to the bottom to select "English iMenu"



"English iMenu"



Select "日本語" to return to the Japanese display.

NOTE

- English iMenu is not available for とくするメニュー (tokusuru menu), 楽オク (Rakuten-auction), i エリア (i-area), マイボックス (My Box) and お知らせ (News).
- Generally, the What's New site is updated every other Monday.
- English iMenu sites differ from Japanese version.

Mobile phone/FOMA card (UIM) manufacturer numbers

If you select an item while a site or website is displayed on the FOMA terminal, a message may appear notifying you that the mobile phone/FOMA card (UIM) manufacturer numbers will be sent.

- The disclosure notification message is always displayed before your mobile phone/FOMA card (UIM) manufacturer numbers are sent. Such information is never sent automatically.

NOTE

- The sent information "mobile phone/FOMA card (UIM) manufacturer numbers" is used by the IP (information service provider) to classify customers and provide customized services for you and to confirm that you can use the content the IP is offering.
- The "Mobile phone/FOMA card (UIM) manufacturer numbers" is sent to the IP (information service provider) via the internet and may be disclosed to the third party as a result. However, this operation does not disclose your phone number, address, age and gender to the IP (information service provider), etc.

FUNC Sites screen (p.146)

Add bookmark → p.152

Bookmark → p.152

Add screen memo → p.153

Screen memo list → p.153

Save image → p.154

URL History → p.148

Window

Open new window "Using multi window"
→ p.150

Close window Closes the displayed window.

Change window Switches windows when multiple websites are open.

i-Channel → p.163

Enter URL Enters a URL to connect to the website.

Add to phonebook → p.150

Add shortcut → p.100

Save schedule Stores a scheduled event while browsing the page. → p.281

Refer dictionary Starts the dictionary. → p.292

Home

Set as home URL Stores the URL of the displayed page as home URL. You can only store 1 URL as the home URL.

Display home Displays the page stored as the home URL.

Available when "Home URL" is set to "Valid". → p.157

Reload Refreshes the page.

Compose message Composes i-mode mail or Deco-mail with a URL for the page pasted into the message or the image pasted/attached.

iMenu Displays the iMenu screen.

Site info

Title.....Displays the page title to check.

URL.....Displays the page URL to check. If the entire URL does not appear, press  (Select), then use  to move the cursor to check the rest of the URL. Pressing  (Select) again hides the cursor.

Certificate.....Displays the contents of the SSL certificate when the page is compatible with SSL.

Site settings

Replay.....Plays the Flash movie or animation on the page again from the beginning.

Set image disp......Sets whether to display the images on the page or not. When set to "OFF",  " appears instead of the image which is not displayed.

Sound effect.....Sets whether to play the Flash movie sound effect or not (ON/OFF).

Change CHR code.....Changes the character code to redisplay the page that is not displayed correctly.

Switch to FB.....Switches to the Full Browser to display a website that cannot be displayed in i-mode. → p.220

*: Not available when 2in1 is in B mode.

NOTE

<Certificate>

- When certificates are displayed, the screen scrolls at the regular speed regardless of the "Scroll" setting.

<Change CHR code>

- If text is not displayed correctly, repeat the procedure. Note that when you perform the procedure for the 4th time, the site is displayed in the original character code setting.
- Some sites may not be displayed correctly even when the character code is changed.
- If you change the character code when a site is displayed correctly, the site may not be displayed correctly.

Displaying SSL pages

To view SSL pages, the following certificates are required:

- CA certificate: Issued by a certification organization and stored in your FOMA terminal at the time of purchase.
- DoCoMo CA certificate: Required for connecting to the FirstPass center and stored in the FOMA card (green/white).
- Client certificate: Downloaded from the FirstPass center by selecting "Client certificate" in the i-mode menu and stored in the FOMA card (green/white).

1 Display an SSL page

The SSL page and the  icon appears.

To cancel the authentication

▶ "Cancel"



SSL page

2 Move from the SSL page to an ordinary page▶ "YES"

SSL communication ends and the  icon disappears.

NOTE

- The message "This site is not certified Do you connect?" may appear when you attempt to open an SSL page. This message appears when the SSL certificate for the page has expired or is not supported. In this case, you can continue to view the page by selecting "YES". However, you may not be able to safely send your personal information such as your credit card number or contacts.

Reconnecting to sites you visited before


<URL History>

"URL History" records the last 30 URLs of the sites you visited before. You can reconnect to the website displayed using the "URL History".

1 ▶ "URL History"

The "URL History" screen appears.

2 Select the record

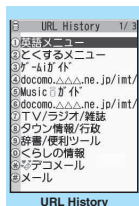

Function menu▶ p.148

FUNC URL History screen (p.148)

Add bookmark → p.152

URL.....Displays the stored URL.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

Viewing and Using Sites

This section describes the operations for viewing sites or websites.

Image display

- The FOMA SO705i can display GIF and JPEG format images and Flash movies (p.150). However, the FOMA terminal may be unable to display some images regardless of the format.
- When a Flash movie is displayed, the display operation may differ from that on a normal site.
- When you play the Flash movie that is stored in Data Box, Screen memo, microSD memory card, the display operation may differ in some stored parts.
- You can specify whether or not images are displayed in the "Set image disp." setting.

■ Displayed image icons

-  (color): Displayed while an image is loaded or when "OFF" is selected in the "Set image disp." setting
-  : Displayed when image loading is failed
-  (B/W): Displayed when image cannot be loaded


Scroll function

When you are viewing a page on a site and the text or a list does not fit in the screen, you can scroll up or down to view the rest of the text.

-  : Scrolls down
-  : Scrolls up
-  : Scrolls down by screens
-  : Scrolls up by screens
- Scroll setting → p.157

Selecting links and other options

When you are using i-mode, you may need to perform operations such as those described below.

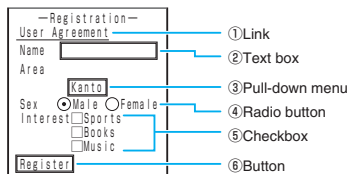

① Link

Select the item to proceed to the linked page.

② Text box

You can enter text directly. When you select a text box, the Character entry (edit) screen appears.

③ Pull-down menu

You can select one option from the list of selectable options. Only a part of the selectable options is displayed but hidden options appear as a list when you select the pull-down menu.

④ Radio button

You can select only one option. ☒ indicates a selected radio button.

⑤ Checkbox

You can select multiple options from a range of options. ☒ indicates a selected checkbox.

⑥ Button


When you select a button, the function assigned to the button is activated.

Jumping to previous/next pages

You can jump forward or back to a page that has been stored in the FOMA terminal's cache. Up to 30 pages are stored in per window (up to 100 pages are stored in all windows).

① Press to jump back to the previous page or to jump forward to the next page

■ When the page display sequence is "A", "B", "C", "B" and "D"

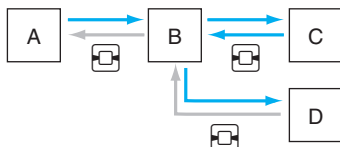

■ : Sequence of viewing pages

■ : Back from the screen "D"

■ To display the pages stored in cache


• Cache refers to an area of memory on the FOMA terminal itself in which data from sites or Internet websites you have visited is temporarily stored. If you press  to move to another page while you are viewing a site or website, the FOMA terminal displays the page stored in cache rather than connecting to the i-mode Center and accessing the page on the actual site. However, if the cache is full or if the page is set to always display the latest information, the FOMA terminal connects to the site even when you press . Also, even when the page is stored in the cache, if the date and time information for that page has been updated, the FOMA terminal connects to the site and displays the latest data.

- When site data is loaded from cache, the text and settings you entered on previous visits is not displayed.
- The cache is cleared when you exit i-mode.
- When you download SSL-compatible pages from cache, the message appears indicating that the SSL page will be displayed.

Using multi window

You can open up to 5 websites (up to 6 websites when including i-Channel).

- You can use the tab to switch pages with  when multiple websites are opened.

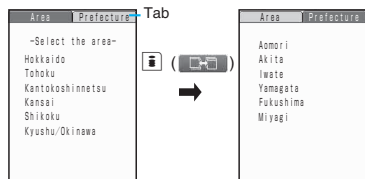

1 Sites screen (p.146) ▶ Highlight the link ▶ (Open)

The page opens with a new window.

■ To close a opened website

▶  ▶ "YES"

• Opening websites other than linked pages

1 Sites screen (p.146) ▶ (FUNC) ▶ "Window" ▶ "Open new window" ▶

Select any item:

Link.....Displays the linked pages in the same way as  (Open).

Bookmark.....Displays the website registered as bookmark.

Enter URL.....Enters a URL to display the website.

Display home.....Displays a website registered as home URL.

NOTE

- You cannot arrange the multi-opened websites side-by-side.

Adding phone number and e-mail address to the phonebook

[◀Add to phonebook▶](#)

You can add a phone number or e-mail address displayed on a site page or screen memo to your phonebook.

<Example: When adding a phone number displayed on a site page>

1 Sites screen (p.146) ▶ (FUNC) ▶ "Add to phonebook" ▶ "YES" ▶ Add the phone number to phonebook

Adding information to the phonebook → p.76

If the name, reading and mail address are attached to phone number, they are also entered to the phonebook together with phone number. Enter remains of necessary items and then save to the phonebook.

Operating the Flash movies

Flash is an animation technique supported by the FOMA terminal that uses both images and sound. Flash gives you access to a wide range of animations and visually exciting sites. You can also download a Flash movie to your FOMA terminal and set it as the standby screen.

- A Flash playing error prevents successful completion of the saving.
- Note that if you play a Flash movie to which vibration is set, your FOMA terminal vibrates regardless of the "Vibrator" setting.
- Some Flash movies may not run correctly.
- You may also be able to control a Flash movie even when  does not appear at the bottom of the screen.
- Flash movies are not displayed if you select "OFF" in "Set image disp."
- Selecting "YES" in "Use phone information" allows you to use the FOMA terminal data (time, date, reception level, battery level, ring volume, language, model type and model info).

NOTE

- Some Flash movies use sound effects. To run a Flash movie without the sound effects, select "Sound effect" and then select "OFF". Even if "Vibrator" is set to "Melody linkage", this setting is invalid for sound effects of Flash movie.
- When a Flash movie is set as a screen such as standby by using "Display setting", the sound effects or vibrator that are set in the Flash movie do not run. "Replay" is also unavailable. → p.148

NOTE

- When some Flash movies are saved or saved as a screen memo, part of the images may not be saved or they may otherwise differ from the way they appear on the site.

Registering My Menu Entries

<My Menu>

My Menu provides you with a quick and convenient way to connect to frequently visited sites.

- You can register up to 45 sites in My Menu.
- Some sites cannot be registered to My Menu.
- To connect quickly to a website, use "Bookmark".

- 1 **Sites screen (p.146) ▶ "My Menu Registration" ▶ Select the "Input password" box ▶ Enter your i-mode password ▶ "Select"**

i-mode password → p.151

NOTE

- Charged sites in the iMenu list are automatically registered to My Menu after subscription.

Viewing sites registered to My Menu

- 1 **iMenu ▶ "English iMenu" ▶ "My Menu" ▶ Select a site**

Changing Your i-mode Password

<Change i-mode Password>

You need a 4-digit "i-mode password" to register or unregister sites in My Menu, to subscribe to or unsubscribe to message services and to set your mail preferences.

- At the time of subscription, it is set to "0000" (4 zeros) by default. Change the i-mode password to your favorite one.
- Take particular care not to disclose your i-mode password to others.
- If you forget your i-mode password, the registered service subscriber must take a form of identification (such as a driver's license) to an NTT DoCoMo service counter.

- 1 **iMenu ▶ "English iMenu" ▶ "Options" ▶ "Change i-mode password"**

- 2 **Select the "Current Password" box ▶ Enter your current i-mode password**

The numbers of the entered password is displayed as "*".

- 3 **Select the "New Password" box ▶ Enter the new i-mode password**

Enter a 4-digit number.

- 4 **Select the "New Password (Confirmation)" box ▶ Enter the new i-mode password again**

Enter the number you entered in step 3.

- 5 **"Select"**

Viewing Websites


<Internet connection>

This function allows you to view website by entering its URL.

- Websites that are not i-mode-compliant may not be displayed properly.
- A website may be displayed differently in your terminal from when it is viewed on PC.
- You can view websites designed for a PC in Full Browser.
- You can enter a URL up to 256 single-byte characters long including "http://" or "https://".

- 1 **iMenu ▶ "Go to location" ▶ "Enter URL"**

The "URL list" screen appears.

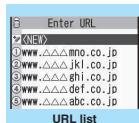

Function menu ▶ p.152

- 2 **"<NEW>" ▶ Enter URL ▶ "OK"**

Viewing sites from the URL history

The FOMA terminal records the last 10 URLs you entered in the URL history.

- 1 **iMenu ▶ "Go to location" ▶ "Enter URL"**

- 2 **Select a URL ▶ "OK"**

■ To edit the selected URL

- ▶ Select the "Internet address" box ▶ Edit the URL

NOTE

- When you enter URLs and connect to sites, visits to the same URL are logged as separate entries.

FUNC URL list screen (p.151)

Add shortcut → p.100

Compose message Composes an i-mode mail with the URL pasted in the message.

Set as home URL Stores a URL as your home URL. You can only store 1 URL as your home URL.

Delete Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

* : Not available when 2in1 is in B mode.

Accessing Websites and Sites Quickly

<Bookmark>

Adding frequently visited websites or sites to your Bookmarks folders allows you to access those sites quickly and easily.

- You can change the titles of your bookmarks and organize the bookmarks into categories by using folders.

Adding bookmarks

- You can bookmark up to 100 sites.
- You can enter up to 256 single-byte characters for a URL.
- Some sites cannot be bookmarked.

<Example: While displaying a site>

1 Sites screen (p.146) > **ⓧ** (FUNC) > "Add bookmark" > "YES" > Select a folder

NOTE


- Bookmark titles can consist of up to 12 double-byte or 24 single-byte characters. Longer titles are truncated when the bookmark is added. If no title is given, the URL is displayed (excluding "http://" or "https://").

Using a bookmark to access a site or website

1 **▶** "Bookmark"

The "Bookmark folder list" screen appears.

When the FOMA terminal is in Secret mode or Secret data only mode, the Secret folder is also displayed.

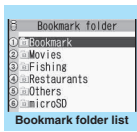

Bookmark folder list
Function menu▶p.152

2 Select a folder

The "Bookmark list" screen appears.

3 Select a bookmark



Bookmark list
Function menu▶p.153

FUNC Bookmark folder list screen (p.152)

- You cannot rename or delete the "Bookmark" folder already created on the FOMA terminal at the time of purchase.

Add folder Enters a folder name to add a folder. You can add up to 9 folders. You can enter up to 10 double-byte or 20 single-byte characters.

Edit folder name Edits the folder name of the added folder. You can enter up to 10 double-byte or 20 single-byte characters.

Sort folder Selects the position to move to and rearranges the folder.

No. of bookmarks Displays the total number of bookmarks in all the folders.

iC trans. all → p.260

Send all Ir data → p.258

CopyAll to microSD → p.248

Delete folder Deletes the folder and bookmarks in the folder.

Delete all Deletes all the bookmarks. However, the bookmark folders are not deleted.

NOTE

<No. of bookmarks>

- The number of data in the microSD folder and Secret folder are not displayed.

Move.....Selects from "Move this/Move selected/Move all" and moves the bookmark to the other folder you select. "About multiple-choice"→p.39

Edit title.....Edits the title. You can enter up to 12 double-byte or 24 single-byte characters.

Add shortcut→p.100

Compose message^{*1}.....Composes an i-mode mail with the URL pasted in the message.

Attach to mail^{*1}.....Composes an i-mode mail with a bookmark attached.

iC transmission→p.259

Send Ir data→p.258

Copy to microSD→p.248

Set as home URL.....Stores a URL as your home URL. You can only store 1 URL as your home URL.

Copy URL.....Copies a bookmarked URL.

►Use to move the cursor to the first character to copy► (Start)►Use to highlight the end of text to copy► (End)

You can paste the copied URL to the Character entry (edit) screen.→p.305

No. of bookmarks.....Displays the total number of bookmarks in the folder.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.39

Keep in secret⇄**Put out**^{*2}....."Preventing Others from Viewing Data"→p.112

Bookmark info^{*3}.....Displays the bookmark information.

^{*1}: Not available when 2in1 is in B mode.

^{*2}: Available only in Secret or Secret data only mode.

^{*3}: Available only for bookmarks stored on the microSD memory card.

Saving Site Contents

<Screen memo>

When you have found some useful information (travel information, etc.), you can save the displayed page on your FOMA terminal as a screen memo for later reference.

- You can save up to 100 screen memos. However, the number you can actually save varies depending on the amount of data on each saved page.

Saving a screen memo


1 Sites screen (p.146) (FUNC)► "Add screen memo"►"YES"

NOTE

- When you save a screen memo of an SSL page, the SSL certificate for that page is also saved.
- If you save the same page twice, it is saved as a new screen memo and is not replaced with the earlier save.
- If you save a site in which an item is already entered in a radio button, checkbox, text box, pull-down menu or selection box as a screen memo, you cannot view the item when displaying the screen memo.
- When you save a screen such as the data acquisition screen, the data for that screen is saved along with the screen. However, the data acquisition screen for i-motion or Chaku-Uta-Ful[®] with set playback period can not be saved as a screen memo.

Displaying a screen memo

1 "Screen memo" The "Screen memo list" screen appears.

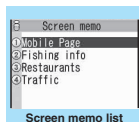

Function menu►p.154

2 Select a screen memo The "Screen memo detail" screen appears.



Screen memo (Screen memo detail)

Function menu►p.154

NOTE

- Information on the screen memo is the one stored and may differ from the latest one.



Screen memo list screen (p.153)

Edit title.....Edits the title. You can enter up to 11 double-byte or 22 single-byte characters.

Protect ON/OFF.....Protects or unprotects screen memo. Protected memo titles are marked with "🔒".

No. of memos.....Displays the numbers of stored and protected screen memos respectively.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice"→p.39

NOTE

<Protect ON/OFF>

- Up to 50 screen memos can be protected. However, the number of screen memos you can protect varies depending on the data size.



Screen memo detail screen (p.153)

Save image.....Saves the images displayed in a screen memo.→p.154

Add to phonebook.....Adds the phone number and e-mail address displayed on the screen memo to the Phonebook.→p.76

Edit title.....Edits the title of the screen memo. You can enter up to 11 double-byte or 22 single-byte characters.

Protect ON/OFF.....Protects or unprotects screen memo. Protected memo titles are marked with "🔒".

Compose message*.....Composes i-mode mail and Deco-mail with the URL for a screen memo pasted into the message or the image pasted/attached.

Save schedule.....Stores a scheduled event by browsing the screen memos.

Refer dictionary.....Starts the dictionary.→p.292

URL.....Displays and checks the screen memo URL.

Certificate.....Displays the SSL certificate details when the screen memo is SSL-compatible.

Sound effect.....Specifies whether the settings for Flash movie sound effects are enabled or not (ON/OFF).

Replay.....Plays the Flash movie or animation in the screen memo again from the beginning.

Delete.....Deletes the screen memo.

* : Not available when 2in1 is in B mode.

Downloading Charged Contents

Some sites may charge you for downloading contents (images, melodies or Chaku-Uta-Full®). When you try to download charged contents, a confirmation message for the purchase and the i-mode password entry screen appears.

NOTE

- You cannot download the contents if more than 2 minutes have passed before starting downloading after you enter the i-mode password. Enter the i-mode password again.

Downloading Images from Sites and Messages <Save Image>

You can save an image, background image or animation displayed or attached to the currently displayed site, screen memo, i-mode mail or MessageR/F, then set the saved image in screens such as standby screen, wake-up display or Sub display.

- You can store up to 1,000 images including the Decomail-pictures, Decorate PI and images that can be set as illumination as well as shot still images (the number of images you can actually store may be reduced depending on the file size).

<Example: When saving a normal image displayed on a site page>

- 1 **Sites screen (p.146) > [] (FUNC) > "Save image" > "Normal image" > Select an image > "YES" > Select a folder**

Position the frame ☐ over the image to be saved.

- **To save the background image**
▶ "Save image" ▶ "Background image" ▶ "YES" ▶ Select a folder

- 2 **"YES" > Select an item**

- **When you do not set the image to the standby screen, etc.**
▶ "NO"

NOTE

- When 2in1 is set to Dual mode or B mode, and also "Setting standby screens for each mode" is set to other than "Same as A Number", the saved image cannot be set to the standby screen. The screen for A mode or OFF in 2in1 mode is applied.

NOTE

- The destination folder cannot be selected when saving animation that can be set as illumination. Animation that can be set as illumination cannot be set on the standby screen.

Downloading Melodies from Sites

<I-melody>

You can set your favorite song, the latest hit song downloaded from a site or a stored melody attached to an i-mode mail as a ring tone on your FOMA terminal.

- You can store up to 200 melodies (the number of melodies you can actually store may be reduced depending on the file size).

<Example: Storing a melody downloaded from a site>

1 Sites screen (p.146) ▶ Select a melody

2 “Save” ▶ “YES” ▶ Select a folder

■ To play a melody

▶ “Play”

■ To display melody information

▶ “Property”

3 “YES” ▶ Select an item

■ When you do not set the melody to the ring tone, etc.

▶ “NO”

NOTE

- Downloaded melodies may be subject to restrictions such that only a pre-designated part of the melody can be played. While a melody of this type is played in full when played back on the FOMA terminal, when it is set as a ring tone, only the designated section is played.

Downloading Kisekai Tool from Sites

You can download Kisekai Tool packages from i-mode sites and save them on your FOMA terminal.

- You can save up to 100 Kisekai Tool packages, including the pre-installed ones (the number of packages that can be saved may be less depending on the size of Kisekai Tool data).

1 Sites screen (p.146) ▶ Select a Kisekai Tool package

■ To cancel the download

▶ [CLR]

You can resume downloading if the message asking whether to do it appears.

Selecting “NO” allows you to save the partly downloaded data.

2 “Save” ▶ “YES”

■ To check the Kisekai Tool package

▶ “Preview”

■ To display the Kisekai Tool package information

▶ “Property”

NOTE

- If the pre-installed Kisekai Tool is deleted, you can download from PlayNow by SO.

“iMenu” ▶ “メニュー／検索” (Menu/search) ▶ “ケータイ電話メーカー” (Mobile phone manufacturer) ▶ “PlayNow by SO”

You can read the QR code on the right and select the displayed URL to access website.



Downloading Various Data from Sites

You can enormously expand the range of uses for your FOMA terminal by downloading additional data such as dictionaries, Decomail-pictures, Template, Chara-den, and ToruCa from sites.

- You can save up to the following number of downloaded data, including the pre-installed data.
 - Dictionary : up to 5
 - Image of Decomail-picture : up to 1000
 - Template : up to 45
 - Chara-den : 10
 - ToruCa : up to 100

* The number of data you can actually store may be reduced depending on the file size.

<Example: Downloading a dictionary from a site>

1 Sites screen (p.146) ▶ Select a data ▶ “Save” ▶ “YES”

■ To display dictionary information

▶ “Property”

■ When the dictionaries are full

▶ Select the dictionary to delete ▶ “YES”

The selected dictionary is overwritten and new dictionary is saved.

NOTE

- If the pre-installed Chara-den is deleted, you can download from PlayNow by SO.
"iMenu"▶"メニュー／検索" (Menu/search)▶"ケータイ電話メーカー" (Mobile phone manufacturer)▶
"PlayNow by SO"
You can read the QR code on the right and select the displayed URL to access website.
- The file name used for Template with no title is "YYYY/MM/DD hh:mm" (Y = year, M = month, D = day, h = hour, m = minute).
- You may not be able to download data depending on sites or the file size.



Using the Phone To/AV Phone To, Mail To and Web To Functions

<Phone To/AV Phone To, Mail To and Web To>

These functions provide quick and simple procedures for making calls, composing SMS, sending mail or viewing websites using information (phone numbers, e-mail addresses, URLs, etc.) displayed in mail or on a site.

- You may not be able to use this function for the mails or sites sent from a PC.
- You may use items in which a phone number, mail address, and URL are not indicated but linked (e.g. "Please contact here").

Phone To/AV Phone To function

You can call or compose an SMS for the phone number in the displayed site or mail.

- You can enter up to 26 digits as a phone number.

<Example: Making a voice call to a number displayed on a site>

1 Sites screen (p.146)▶Select a phone number

■ When the 2in1 is in Dual mode

The Outgoing number selection screen appears.
Select a phone number.

2 "Voice phone"

3 "Dial"

Mail To function

You can send a mail to a mail address displayed on a site, in a mail or the Full Browser screen.

- You cannot use the Mail To function when draft mails are full.
- You may not be able to use the Mail To function when 2 or more e-mail addresses are displayed in sequence.
- You can enter up to 50 single-byte characters as an e-mail address.
- When 2in1 is in B mode, this function is not available.

<Example: Sending mail from the sites screen>

1 Sites screen (p.146)▶Select a mail address

2 Compose and send an i-mode mail → p.166

Web To function

You can display websites in the displayed site or mail.

- You can enter up to 512 single-byte characters as a URL.

<Example: Displaying other website from the sites screen>

1 Sites screen (p.146)▶Select a URL

Using Location Information

Select a link with location information added on a site, use the location information.

<Example: Using the information on a site>

1 Sites screen (p.146)▶Select a link with location information added▶Select any item:

Run i-appli.....Displays the list of i-appli compatible with the location information function (that can use location information).

Read a Map.....Accesses the i-mode site and displays the peripheral map, etc. using the location information.

Paste to mail.....Pastes the location information URL into an i-mode message to compose a new message.

* : Not available when 2in1 is in B mode.

NOTE

- When the location information URL is pasted into the message, "L" is prefixed to the location information URL.
- The number of characters of the pasted location information URL is counted as the number of characters of the message.

Specifying Your i-mode Settings

1 "i-mode settings"

The "i-mode settings" screen appears.



2 Select any item:

Scroll.....Sets the scrolling speed and link display of the detail screen for a site, screen memo or MessageR/F.

Speed (default: High speed).....Selects the scrolling speed from "High speed/Low speed".

During scroll in focus (default: OFF).....Sets whether to highlight the linked pages while scrolling.

Font size (default: Standard).....Selects the character size of the detail screen for a screen memo, MessageR/F or a page on a site, from "Small/Standard/Large/X-large". → p.100

Set image disp. (default: ON).....Sets whether the detail screen for screen memos and pages on a site are displayed or not. If you select "OFF", the "L" icon will be displayed instead of the images not to be displayed.

i-motion auto-replay (default: ON) → p.162

Auto-display setting (default: MessageR preferred).....Sets for the automatic display of MessageR/F.

Start attachment (auto) (default: ON).....Sets whether the attached/pasted melody automatically plays when opening the MessageR/F.

Use phone information (default: Accept) → p.158

Message list display (default: 2 lines).....Sets the number of lines in the message list screen.

Home URL.....Sets for using the home URL display function. When set to "Valid", pressing [F7] on the standby screen displays the screen of the stored URL. You can enter up to 256 single-byte characters for the URL.

Invalid (default).....Disables the home URL display setting.

Valid.....Enables the home URL display setting.

Select the Home URL field and enter a URL to be stored.

Sound effect (default: ON).....Sets whether to play the sound effects for the Flash movies in a site or screen memo.

Open tab setting (default: Open at the back side).....Sets whether to change (Open at the front) or keep (Open at the back side) the current display when you open a website in new window.

Check settings.....Displays the settings set in "i-mode settings".

Reset.....Resets the settings specified in "i-mode settings" to the default settings.

NOTE

<Home URL>

- If a flat-plug earphone/microphone with switch (optional) is connected to the FOMA terminal, pressing the switch in the standby screen will also display the site set as the home.

<Sound effect>

- Even if sound effects are set to "ON", some Flash movies may not make any sound.

Setting the connection timeout

<Set connection timeout>

This option sets time-out duration for which the FOMA terminal automatically stops trying to connect when a site is busy and there is no response.

1 MENU "Settings" ▶ "Connection setting" ▶ "Set connection timeout" ▶ Select any item:

60 seconds.....Automatically stops connecting if there is no response for 60 seconds.

90 seconds.....Automatically stops connecting if there is no response for 90 seconds.

Unlimited.....Does not automatically stop connecting.

Setting a host different from i-mode host (ISP connection)

<Host selection>

- * There is normally no need to change this setting.

You need to select a different host when you want to use a service other than i-mode. If you change the host to a host other than i-mode, you can not use i-mode and i-mode mail.

- You can store up to 10 hosts other than "i-mode".

- 1 "Settings" > "Connection setting" > "Host selection" > Highlight "<Not recorded>" > (Edit) > Enter your security code > Select any item:

Host name.....Sets the host name. You can enter up to 9 double-byte or 18 single-byte characters.

Host number.....Sets the host number. You can enter up to 99 single-byte characters.

Host address.....Sets the host address. You can enter up to 30 single-byte characters.

Host address2.....Sets the host address2. You can enter up to 30 single-byte characters.

- 2 Set the respective items > (Finish)

NOTE

- Note that costs of packet communication while you are connected to a host other than i-mode are not covered by the Pake-Houdai or Pake-Houdai full deal.
- When you change the host, the ticker of i-Channel is turned off. The ticker is turned on again automatically when the information is updated automatically or when is pressed to receive the latest information.
- After changing the host, the i-Channel information may not be updated automatically. To receive the latest information, press to display the channel list screen.

Specifying whether to use terminal data in Flash movies

<Use phone information>

Use this function to specify whether terminal data is used when a Flash movie is running.

- The terminal data may be used depending on the particular Flash movie. Select "Accept" in "Use phone information" of "i-mode settings" so that images use the terminal data. The default setting is "Accept". Such movies may use the following types of terminal data:

• Battery level	• Ring volume setting
• Signal strength	• Select language
• Date and time	• Model data

- 1 i-mode setting screen (p.157) > "Use phone information" > "Accept" or "Reject"

Using SSL Certificates

You can check the details of an SSL certificate or to set to valid/invalid.

- 1 > "Settings" > "Connection setting" > "Certificate"

- 2 Select a certificate > Check the details

- To validate or invalidate SSL certificates > Highlight a certificate > (FUNC) > "Valid/Invalid"

NOTE

- When set to "Valid", appears. When set to "Invalid", appears.
- If you select "Invalid", you cannot view SSL pages with that SSL certificate.

Setting FirstPass


User certificates prove that the user is a proper FOMA service subscriber. Downloaded user certificates are saved on your FOMA card (UIM) and enable you to access client authentication-compliant sites.

Connect to the FirstPass Center

Follow the procedure below to request and download the user certificate.

- You can request a user certificate or download from the FirstPass Center.
- User certificates cannot be used with the FOMA card (blue).
- The FirstPass cannot be used overseas.
- To connect to the FirstPass Center, you must first set the date and time on your FOMA terminal.
→ p.47
- The screens and procedures used at the FirstPass Center are subject to change.

1 "Client certificate" ▶ Check the description ▶ "English"

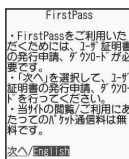

2 "Request your certificate"

■ To apply invalidation

Select "Other settings" and then select "Revoke your certificate".

Enter your PIN2 code and then proceed as directed by the on-screen instructions.

3 Check the description ▶ "Continue"

4 Enter the PIN2 code

PIN2 code → p.108

5 Check the message ▶ "Download" ▶ Check the description ▶ "Continue" ▶ "Menu"

The confirmation message appears.

The FirstPass menu screen reappears after the downloading is completed.

NOTE

- Packet communication charge for connection to the FirstPass Center is free.

NOTE

- Before using the FirstPass Center, select "The usage regulation (Japanese only)" and read the information carefully.
- You cannot use the following function during connection to the FirstPass Center.
 - Sending or receiving i-mode mail (sending and receiving SMS is available)
 - Check new message (Check new SMS is available)
 - Reception of Message/R/F
 - Downloading attached files of mails manually
 - Web To function
- Always send a certificate request before downloading a new or updated user certificate. You cannot download a certificate without first requesting the certificate.
- Once an application for user certificate invalidation has been completed, you can no longer access FirstPass-compliant sites that require that user certificate.
- If you use FirstPass after completion of invalidation, apply issue for the user certification again and download it.

Using a user certificate to connect to a site

1 Sites screen (p.146) ▶ Confirm user certificate transmission ▶ "YES" ▶ Enter your PIN2 code

NOTE

- The Packet communication charge of connecting to FirstPass-compliant sites is covered by the Pake-Houdai or Pake-Houdai full deal.
- FirstPass is also available in Full Browser. However, the packet communication charge for connecting to FirstPass-compliant sites in Full Browser is not covered by the Pake-Houdai or Pake-Houdai full deal.
- If you connect to a FirstPass-compliant site without a user certificate, or if your user certificate has expired, a message appears informing you of that fact. You can still connect to the site and view subsequent pages by selecting "YES" in some cases, but note that it may not be safe to send your personal information (credit card number, contact details, etc.). To disconnect, select "NO", then reconnect the site after downloading the user certificate from the FirstPass Center.

■ Notes on using FirstPass

- FirstPass is DoCoMo's digital authentication service. Using FirstPass enables the client authentication in which the site authenticates the FOMA terminal.
- FirstPass can be used either when the FOMA terminal is directly connected to the Internet or when it is connected via a PC. When the FOMA terminal is connected to the Internet via a PC, the FirstPass PC software included in the provided CD-ROM for FOMA SO705i is required. For more information, refer to the PDF-format "FirstPass-Manual" contained in the "FirstPassPCSoft" folder on the CD-ROM. (The "FirstPass-Manual" is in Japanese only.)

To view the PDF-format "FirstPass Manual", Adobe® Reader® is required.

If this software is not installed on your PC, install the Adobe® Reader® in the provided CD-ROM to view the file.

Refer to the "Adobe Reader ヘルプ" (Help of the Adobe Reader) for details on how to use it.

- When requesting a user certificate, carefully read and agree to the "The usage regulation" of FirstPass displayed on your screen before proceeding with your request.
- To use a user certificate, you will need to enter your PIN2 code (p.108). Take great care to prevent unauthorized persons from using your FOMA card (UIM) or PIN2 code since all the actions performed subsequent to PIN2 code entry will be assumed to have been performed by you.
- If your FOMA card (UIM) is lost or stolen, you can have your user certificates invalidated at NTT DoCoMo Information counter on the back cover of this manual.
- NTT DoCoMo is not responsible for and accepts no liability whatsoever regarding the sites or the content provided by FirstPass-compliant sites. Any disputes are to be resolved between the customer and the FirstPass-compliant site.
- NTT DoCoMo and its authentication company provide no guarantee regarding security or secrecy in the use of FirstPass and SSL certificates. Such certificates are used entirely at the discretion of the user.

Changing the Certificate Host

* There is normally no need to change this setting.

You can set the host for downloading the user certificate.

1  ▶ "Settings" ▶ "Connection setting" ▶ "Certificate host"

2 Highlight "<Not recorded>"  (Edit) ▶ Enter your security code ▶ Select any item:

Default URL Sets the URL of the initial screen for the host. You can enter up to 100 single-byte characters.

Host number Sets the host number. You can enter up to 99 single-byte characters.

3 Set the respective items  (Finish)

NOTE

- To change a stored "User setting host", use the same procedure for storing.
- To delete a stored "User setting host", select "Delete" from the function menu.

What is i-motion?

An i-motion is a file containing video, voice and music data. It can be downloaded from an i-motion site to your FOMA terminal. You can also set an i-motion as a ring tone. Chaku-motion → p.88

i-motion types

i-motion can be broadly divided into 2 types as follows. The type of the i-motion you downloaded depends on the site or data.

Type		Description
Type	Playback type	
Standard type (Can be saved) (Up to 10M bytes)	Playback after downloading	Plays the i-motion after downloading all the data.
	Playback while downloading	Plays the i-motion while downloading the i-motion data.
Streaming type (Cannot be saved) (Up to 10M bytes)	Playback while downloading	Plays the i-motion while downloading the i-motion data. As the data is discarded after the playback, you cannot repeat playback or save the i-motion to the FOMA terminal.

* : May not be saved depending on the i-motion.

Downloading i-motion

<Download i-motion>

1 Sites screen (p.146) ▶ Select i-motion

When data downloading is completed, the "Data acquisition" screen appears.

■ To cancel downloading

▶ CLR

2 "Play"

The downloaded i-motion is played.

"Operations on the music player" screen → p.274



Function menu ▶ p.161

NOTE

- Some sites and i-motion do not allow downloading or the playback during the download.
- For standard type i-motions, the downloading itself continues even if the playback is stopped during downloading.
- Some i-motion is restricted to be played. "⌚" is displayed at the beginning of the title for the i-motion with restrictions on the play count, period or time limit. The i-motion restricted on the playback period cannot be played before or after the period. If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case i-motion restricted on the playback period or time limit cannot be played.
- Some i-motion cannot be correctly played.
- The playback while downloading may be interrupted or the images may be distorted due to the signal reception.

FUNC Data acquisition screen (p.161)

Add screen memo Saves the data acquisition screen to the screen memo. → p.153

Certificate Displays the contents of the SSL certificate when the page is compatible with SSL.

NOTE

- You can also play an i-motion from a "Screen memo" after saving the data acquisition screen as a screen memo.

However, you cannot save the data acquisition screen of:

- i-motion restricted to be played
- Streaming type i-motion
- Incomplete i-motion

Saving i-motion

- Some i-motion cannot be saved on the FOMA terminal.
- You can save up to 100 i-motion, including the movies shot by the camera. The maximum number of i-motion to be stored varies depending on the amount of various stored data.
- i-motion folder → p.226

1 Data acquisition screen (p.161) ▶ “Save” ▶ “YES”

■ To cancel the saving

▶ “NO”

Returns to the data acquisition screen without saving the i-motion.

2 Select a folder

NOTE

- An i-motion without title is listed as “movieXXX” (XXX are numbers).

Viewing i-motion details

You can check the details of the i-motion, including the title, file size and replay restrictions.

1 Data acquisition screen (p.161) ▶ “Property”

The i-motion info screen appears. Use  to scroll the display up or down to check the details such as the remaining count of the replay, the playback period and the time limit.

Setting Whether to Play an i-motion Automatically

<i-motion auto-replay>

- You can set whether to play an i-motion automatically when:
 - Downloading i-motion from the site screen
 - Displaying the Screen memo of the data acquisition screen
- “i-motion auto-replay” setting is activated only for the standard type i-motion. The streaming type i-motion is played back automatically regardless of this setting.
i-motion types → p.161

1 i-mode settings screen (p.157) ▶ “i-motion auto-replay” ▶ Select any item:

ON (default).....Automatically plays the i-motion after downloading. Some i-motion is played while downloading.

OFF.....Displays the data acquisition screen without playing the i-motion automatically after downloading.

What is i-Channel?

i-Channel is a service that DoCoMo and IPs (information service provider) send news and weather information to i-Channel-compatible terminal as graphical information.

You can receive information at a set interval, display the ticker of the latest information on the standby screen, and display it on the channel list screen by pressing i-Channel key (CH) (p.163). You can also select favorite channels on the channel list screen to receive rich, detailed information.

i-Channel is a pay service you need subscription (you need to subscribe to i-mode service).

Channel has two types: "Basic channel" and "Favorite channel", and "Basic channel" is provided by NTT DoCoMo and pre-installed so that you can use i-Channel just after subscription to i-Channel. The packet communication fee to auto-update information for "Basic channel" is not charged. "Favorite channel" is provided by IPs (information service providers) other than NTT DoCoMo, and you can register your favorite channels. The packet communication fee to auto-update information for "Favorite channel" is not included in the i-Channel service fees. However, packet communication charges for viewing detailed information for both "Basic channel" and "Favorite channel" from the channel list are not included in the i-Channel service fees.

Note that the packet communication fee to auto-update information for basic channels during the international roaming is not included in the i-Channel service fees.


For details on i-Channel, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

This service provides only Japanese channels.

- **Ticker on the standby screen**

If you have subscribed to i-Channel, the information is displayed on the standby screen/sub display as a ticker when the information is received.

- “” flashes while i-Channel information is being delivered.
- You can set the ticker display with “i-Channel setting”. → p.164

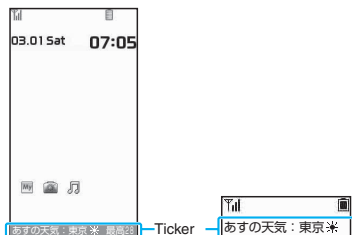

NOTE

- Ticker is displayed even when i-motion or i-appli standby screen is set on the standby screen. Ticker is also displayed when the Self mode is set.
- The ticker does not appear when the FOMA card (UIM) is not inserted, when Public mode (Driving mode) is set or in Power saver mode.

Viewing Sites from the Channel List

You can display channel list screen to access information sites of i-Channel.


You can display up to 15 channels including both “Basic channel” and “Favorite channel” on the channel list.

1 On the standby screen ▶ **ch**

The “Channel list” screen appears.

■ How to display from the i-mode menu

▶ “i-Channel” ▶ “i-Channel
list”

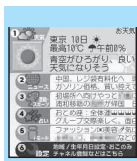

Function menu ➔ p.164

2 Select channel item

NOTE

- Information may be received when the channel list screen is displayed in some cases.
- When information is received, the ring tone will not sound, and the vibrator does not vibrate. Also, the incoming call lamp does not flash.

FUNC Channel list screen (p.163)

Add shortcut → p.100

Replay Displays the channel list screen from the beginning.

Sound effect Sets whether to play the sound effect of the channel list screen or not (ON/OFF).

Window

Open new window "Using multi window"
→ p.150

Close window Closes the displayed i-Channel window.

Change window Switches windows when multiple websites are open.

NOTE

- The setting of "Sound effect" set on the channel list screen is applied to "Sound effect" of "i-mode settings".

Setting i-Channel

<i-Channel setting>

You can set whether i-Channel information is displayed on the standby screen as a ticker or not. You can also set the scroll speed, color/front size of the ticker on the standby screen.

- If the background setting is set to "ON", the following apply:
 - When Ticker display setting is set to "ON", ticker appears twice on the sub display each time new information is received or the FOMA terminal is closed.
 - When Ticker display setting is set to "Receiving", ticker appears twice on the sub display each time new information is received.
 - Power saver mode does not activate while ticker is displayed on the sub display.

1 **"i-Channel" Select any item:**

i-Channel list Displays the channel list.

i-Channel setting

Ticker display setting (default: ON, OFF)
Sets whether the ticker of channel information

is displayed on the standby screen (ON/Receiving/OFF).

If "ON" or "Receiving" is selected, select whether to display ticker on the sub display while the FOMA terminal is closed (ON/OFF).

Ticker speed setting (default: Normal)
Selects the scrolling speed of the ticker from

"Normal/High/Low".

Ticker color setting Selects the ticker color ("White"/"Yellow"/"Blue"/"Red"/"Green").

* : Move the highlight to display the ticker color.

Ticker size setting (default: Standard)
Selects the ticker font size from "Small/

Standard/Large". → p.100

Reset i-Channel Resets the i-Channel settings to the default settings.

NOTE

- The i-Channel setting cannot be changed in Public mode (Driving mode), at the time of purchase (Reset i-Channel) or if the FOMA card (UIM) is not inserted, etc.

<Ticker display setting>

- The ticker display setting remains when you unsubscribe from i-Channel or when you unsubscribe from i-mode service before unsubscribing from i-Channel, but tickers will not be displayed automatically.
- Settings are retained for each mode of 2in1.

<Reset i-Channel>

- i-Channel tickers are not displayed just after resetting i-Channel. The ticker is turned on again automatically when the information is updated automatically or when  is pressed to receive the latest information.

Mail

What is i-mode Mail?		166
■ Composing i-mode mail/Deco-mail		
Composing and Sending i-mode Mail.....	Compose message/Send	166
Composing Deco-mail	Deco-mail	168
Using Templates to Create Deco-mail	Template	169
Attaching Files	Attach file	170
Saving i-mode Mail to Send Later.....	Save i-mode mail	171
Storing Addresses in Mailing Lists.....		172
■ Receiving and using i-mode mail		
When You Receive i-mode Mail		172
Receiving i-mode Mail Selectively	Receive option	174
Checking for i-mode Mail	Check new messages	175
Replying to i-mode Mail	Reply to mail	175
Forwarding i-mode Mail to Other Recipients.....	Forward mail	176
Adding Mail Addresses to Phonebook.....		176
Downloading Attached Files Selectively		176
Checking and Saving the File Attached to i-mode Mail		177
Having the FOMA Terminal Read Out Mail.....		178
■ Using mail boxes		
Displaying Mail in the Inbox and Outbox.....	Inbox/Outbox	180
■ Using mail records		
Using Mail Records.....	Sent address/Received address	187
■ Specifying mail settings		
Setting up the FOMA Terminal Mail Functions	Mail Setting	188
■ Using the message services		
When You Receive a Message		189
Viewing Messages in the Message Box	MessageR/F	190
■ Using Early Warning “Area Mail”		
What is Early Warning “Area Mail”?.....		191
When You Receive Early Warning “Area Mail”	Receive Area Mail	191
Setting Early Warning “Area Mail”	Area Mail setting	192
■ Using SMS		
Composing and Sending SMS.....	Compose SMS/Send	192
When You Receive an SMS.....	Receive SMS	193
Checking for SMS	Check new SMS	194
Specifying the SMS center setting	SMS center selection	194

What is i-mode Mail?

The mail function provided on the FOMA terminal enables you to send and receive i-mode mail and SMS. To use i-mode mail, you must first subscribe to the "i-mode" service.

- You can send and receive SMS (text) with other FOMA terminals without subscribing to i-mode.
→ p.192, 193

● i-mode mail

Subscribing to i-mode enables you to send and receive e-mail messages via the Internet not only between i-mode terminals.

In addition to the message body, you can attach up to 10 files (JPEG image, ToruCa data, etc.) within the total of 2M bytes. As the FOMA terminal is compatible with Deco-mail and provides many pre-installed Decorate PI that can be inserted to mails like pictographs, you can compose and send expressive mail not only by changing the character color, size, or background color of the message body.

- For details on i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Composing and Sending i-mode Mail <Compose message/Send>

 
Use this procedure to compose and send a new i-mode mail message.

- You can change the size and color of the text used in the message body, assign actions to the text and insert images, lines and other decorative features. Deco-mail → p.168
- You can store up to 500 sent mails (i-mode mail and SMS) (the number of mails you can actually store may be reduced depending on the file size).

1 "Compose message"



Mail menu



New mail
Function menu → p.167

The "New mail" screen appears.

2 "To" <No address>" Enter an address

Enter an address to select the mail address input method.

■ Searching in the phonebook

▶ "Phonebook" ▶ Search the phonebook (p.79) ▶ Select a mail address in the phonebook detail screen

■ Searching in the address list

▶ "Sent address" or "Received address" ▶ Select a mail address

■ Using Mail member

▶ "Mail member" ▶ Select a mail member
For information on mail member → p.172

■ Entering a mail address directly

▶ "Enter address" ▶ Enter a mail address
You can enter up to 50 single-byte alphabets, numbers or symbols for a mail address. When you enter a mail address, the new mail address field is displayed below the filled field. You can enter other mail addresses and send a same mail message to multiple recipients. You can enter up to 5 mail addresses.

3 "Enter a subject

The "Subject" screen appears.


You can enter up to 100 double-byte or 200 single-byte characters.

4 "<No message>" Enter the message body

You can enter up to 5,000 double-byte characters.

You can also insert a line feed (hard return) while editing the message. You can also insert a line feed by pressing  at the end of a sentence.  is also counted as 1 double-byte character. Spaces are also counted in the same way as characters. You can also compose Deco-mail. → p.168

You can use Template to compose and send the Deco-mail. → p.169

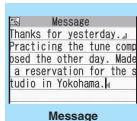

Message
Function menu → p.169, 302

5 (Send)

When you enter the message, number of bytes of the message appears on the upper right corner of the message.

An animation appears while sending a mail. After sending a mail, select "OK" to return to the mail menu screen. After sending a mail, select "OK" to return to the mail menu screen.



■ To cancel the transmission

▶  (Quit) or  (1 second or longer)

Depending on the timing, the i-mode mail may be sent.

- When you are requested to send the mail again

▶ "YES"


Decorate PI input

Decorate PI is an image which fulfills certain conditions including moving pictograph. On the SO705i, you can enter the Decorate PI in the mail message easily because Decorate PI entry is arranged by the categories.

- You can download Decorate PI from websites, in addition to the pre-installed Decorate PI. → p.155
- Mails with Decorate PI are handled as Deco-mails.

Entering Decorate PI

Press and hold **[ch]** (Pict/Sym) for 1 second or longer on the Message screen to display the Pictograph D (Decorate PI) entry screen which is arranged by the categories. Use **[←]** to move the frame and press **[■]** (Select) to enter the Decorate PI.

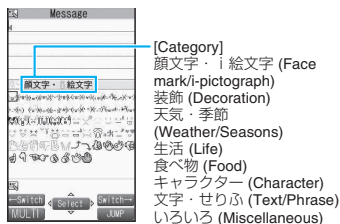

[Other key operations]

- [←]** (Switch): Displays the previous category
- [→]** (Switch): Displays the next category
- [ch]** (JUMP): Displays the category list
- [CLR]**: Quits entering Decorate PI

Composing i-mode mail from the phonebook screen

Locate and display an e-mail address stored in the phonebook and then press **[■]** (MAIL), then the new mail screen with the mail address entered to the address appears.

Searching the phonebook → p.79

WEB mail

Selecting "WEB mail" on the Mail menu (p.166), you can access the WEB mail site and compose and send mail from Address B of 2in1*.

*: For details on 2in1, refer to "Mobile Phone User's Guide [2in1]".

NOTE

- If the storage capacity for sent mails is full when you send a mail, mails are deleted from the oldest one (protected mails and mails in the Secret folder are not deleted).

NOTE

- Some phones may be unable to receive a part of a subject.
- When you use pictographs in the subject or message body and send the mail to the devices of other mobile phone companies (au/SoftBank), the pictographs are automatically converted to similar ones on the other party's device. However, pictographs may not be displayed properly depending on the model or functions of the other party's mobile Phone. When the receiver does not have the corresponding pictographs, the pictographs are converted to characters or "■".
- When the recipient address is a phone number and the number is preceded by the "184" or "186" prefix, a message appears asking whether to delete the prefix before sending the mail when you try to send i-mode mail.
- Depending on the signal quality, the recipient may not be able to display the text correctly. Also, the "Transmission failed" message may appear even after the message has been sent.
- When 2in1 is in B mode, you cannot compose and send i-mode mail.

FUNC New mail screen (p.166)

Send.....Sends i-mode mail.

Save → p.171

Delete receiver.....If there are 2 or more addresses entered, you can delete the address you select.

Change rcv. type.....Changes the address type with an address highlighted.

To.....The recipient's address. The mail address entered in the "To" field is displayed in other recipient's terminals.

Cc.....Broadcasts address. The mail address entered in the Cc field are also displayed to the other recipients. Select this option to send copies of the message sent to the address in the To field to other addresses.

Bcc.....Broadcasts address. The mail address entered in the Bcc field are not displayed to the other recipients.

Template → p.169

Attach file.....Attaches a file such as melody, image or i-motion to an i-mode mail. → p.170

Activate camera.....Activates the camera function to shoot still images or movies.

Photo mode → p.131

Movie mode → p.135

Delete att. file • **Del all att. files**.....Deletes one or all attached file(s).

Add header.....Pastes a header into the i-mode mail message.

Add signature.....Pastes your signature into the i-mode mail message.

Erase message.....Erases the message body in the current i-mode mail message.

Delete.....Deletes the current i-mode mail message.

NOTE

<Change rcv. type>

- E-mail addresses entered in the "To" and "Cc" fields are usually displayed to the recipient. However, depending on the terminal device and mail software used by the recipient, the e-mail addresses may not be displayed.

FUNC Message screen (p.166)

- For the functions other than the followings, refer to the function menu of the "Character entry (edit)" screen (p.302).

Decorate mail....."Decoration menus"→p.168

Select area.....You can decorate, copy or cut the selected text.→p.304

Property.....Displays the file name and size of an image inserted into the message when the cursor is at the left of the image.

Preview.....Displays a preview of the message.

Composing Deco-mail

<Deco-mail>

The Deco-mail function allows you to make your text in the i-mode mail more visually appealing and exciting by changing the size and color of the text, the background color, assigning actions to text, and inserting images into your message.


- If you decorate the message, you can enter fewer characters than in the i-mode mail which is not decorated.
- When decorating text, you can enter text while decorating or you can decorate text after entering.

1 Message screen (p.166) Use to move the frame to select the decoration menu

The "Decoration menu" appears.→p.168

■ Decorating text while entering

Decorated text is entered after decoration menu is selected.

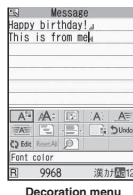

Decoration menu

■ Decorating the entered text

Select  from the decoration menu, specify the text you want to decorate and select decorating menu. The specified text is decorated.


2 Press (Exit) to end the decoration menu

NOTE

- If you forward received Deco-mail or quote Deco-mail in a reply, inserted images and decorations appear as quoted in the message.
- If you quote or forward Deco-mail that includes an image that cannot be sent as mail, the image is deleted.
- When you send Deco-mail exceeding 10,000 bytes to a terminal that does not support Deco-mail, or to a terminal that supports Deco-mail other than the following models, the receiving terminal receives a mail that includes URL for viewing the Deco-mail. However, some terminals that do not support Deco-mail may receive only the message with no URL for viewing the Deco-mail.
*: 905i series, 904i series, 903i series, 705i series, 704i series (except P704iμ), 703i series (except P703iμ), F801i

● Decoration menus

- When decoration applied by lines (ticker/swing/inserting line/alignment) is selected, a line feed is automatically inserted when the menu is selected.
- You can combine multiple decorations (example: changing the color and size of characters and making them blink).

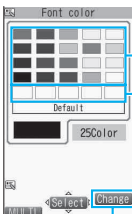Menu	Description
	Changes the character color. You can select the pallet of 25 colors or 256 colors. <25 colors>  Use  to move the frame and select the color to change. The latest 5 colors selected from the pallet of 256 colors are displayed at the bottom. The pallet of 25 colors and 256 colors switches each time you press  (Change).
	Selects the character size from  AAA /  AAA (Large/Standard/Small).
	Selects the image to insert from My picture folder.

Menu	Description
 /  / 	Makes characters "Blink/Scroll from right to left (Ticker)/Scroll from right to left and left to right (Swing)".
 *1 	"Starts" or "Ends" the decoration.
Select Reset *2	"Sets" or "Releases" the decoration of specified area.
	Selects the character alignment position from  /  /  (Left/Center/Right).
 *1	Inserts a line.
 *1	Changes the background color of the message. Select the background color from the pallet in the same way as the character color.
	Return the entered character or message decoration 1 step back.
 *1	Decorates the entered characters, or sets/releases the decoration.
Reset *2	Releases the decoration.
Reset All *1	Releases all the decoration.
	Displays the preview screen of the decoration.

*1: Cannot be selected in the decoration menu when  is selected.

*2: Available in the decoration menu only when  is selected.

NOTE

- Pictographs are also displayed in the specified color.
To return them to their original color, select , specify the area to be changed and then select . However, you cannot specify the character color of Decorate Pl.

- You cannot change the size of Decoration Pl.

<Insert image>

- You can insert up to 20 files, up to 90K bytes, of JPEG or GIF images, or Decoration Pl regardless of the number of bytes of the message body or the file size of the attached file (the maximum number depends on the file size).
- If you insert multiple copies of the same image, they are handled as 1 image. However, if you save or send an image once and then edit the image and insert it again, it is handled as a separate image.
- If you insert an animation, the animation stops once a set time has elapsed.

NOTE

<Blink/Ticker/Swing>

- Blinking, ticker subtitling or swinging stops once a set time has elapsed.

<Edit decoration>

- Even if you delete the decorated text, the decoration data itself may be retained and the number of characters that can be entered may be reduced. You should remove the decorations and then delete the text. If you hold down  for 1 second or longer, all the characters and decoration data are deleted.

Using Templates to Create Deco-mail

<Template>

Template is a form for Deco-mail to which the layout and the ornament are already set. By using a template, you can compose Deco-mail easily.


- You can download Template from sites. → p.155
- When you try to use Template in the following cases, a message appears asking whether to delete the edited content in the message:
 - When text is already entered in the mail message
 - When the header or signature is automatically inserted
 - When there is an attached file

1 "Template"

The "Template list" screen appears.

■ To search templates by i-mode

- ▶ "Search by i-mode"
- ▶ "YES"

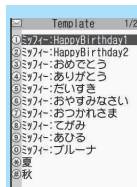


Template list
Function menu → p.170

2 Select Template

The "Template preview" screen appears.

- During preview display, use  to display other templates.

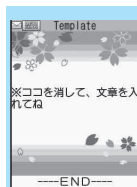

Template preview
Function menu → p.170

3 [i] (MAIL) ▶ Edit the message body

■ To activate Template from the New mail screen (p.166)

▶ [F] (FUNC) ▶ "Template"

▶ "Load template" ▶ Select Template

Saving a template

You can save the Deco-mail you are compose as Template.

- You can save up to 45 files of Template.
- If the message has any attached file other than inserted images, the file is deleted.
- Template is saved in "Template" in the Mail menu.

1 Message-decorated New mail screen

▶ [F] (FUNC) ▶ "Template" ▶ "Save template" ▶ "YES"

NOTE

- The subject of the message being composed is used as Template title. If no subject is entered, "YYYY/MM/DD hh:mm" is used as the title (Y: year, M: month, D: day, h: hour, m: minute).

[F] Template list screen (p.169)

Compose message.....Uses Template to create Deco-mail. → p.169

Sort.....Sorts Template in a selected criteria.

Edit title.....Edits the title of Template. You can enter up to 10 double-byte or 20 single-byte characters.

Info.....Displays Template size, save date and whether or not it includes images.

No. of messages.....Displays the number of saved Template.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

[F] Template preview screen (p.169)

Compose message.....Uses Template to create Deco-mail. → p.169

Edit.....Edits Template.

Save insert image.....Selects the image inserted to Template and saves it on the My picture folder. If the image can be set as the standby screen, you can select whether to set it as the standby screen or not after saving it.

NOTE

- Template is not available when 2in1 is in B mode.

<Edit>

- The title used when the template is saved as a separate file is "YYYY/MM/DD hh:mm" (Y: year, M: month, D: day, h: hour, m: minute).

Attaching Files

<Attach file>

You can send i-mode mails with files attached.

- You can attach the following files:

- Image (still image, image)
- SWF Flash movie
- movie, i-motion
- Melody
- ToruCa, ToruCa (detail)
- Phonebook entry
- My profile data
- Schedule or To Do list entry
- Bookmark
- Other files in the microSD memory card

1 New mail screen (p.166) [ch] (Att.) ▶ Select any item:

Image • i-motion • Melody.....Selects a folder on the Phone or microSD, and then selects data to attach.

The number of selecting folders varies depending on the selected device (Phone/microSD).

ToruCa.....Selects a folder on the Phone or microSD, and then selects data to attach.

The number of selecting folders varies depending on the selected device (Phone/microSD).

Phonebook.....Selects the phonebook on the Phone or microSD, and then searches for a phonebook entry (selects a folder for microSD) to select data to attach.

How to search the phonebook → p.79

My Profile.....Attaches the My Profile data.

Schedule.....Selects the Schedule or To Do list, and then selects data to attach.

Bookmark.....Selects the bookmark on the Phone (i-mode/Full Browser) or microSD, and then selects data to attach.

Other.....Selects other files in the microSD memory card.

■ To send an image to a mova terminal as i-shot

You can send a mail attached with an image to a mova terminal as i-shot.

When you send a mail to a mova terminal, you can attach only 1 JPEG image. If you attach a GIF image downloaded from sites, etc., the attached file is deleted and only the message reaches the recipient.

When you send mail to a mova terminal, unless the recipient has set the incoming message length, he or she can only receive a message up to 184 double-byte characters (369 bytes) long. If the recipient has set the incoming message length, the recipient can receive a message up to 2,000 double-byte characters including the i-shot URL (where the image is kept).

2 Compose and send an i-mode mail

■ To check the attached file

▶Select a file

You cannot play the melody which exceeds 100K bytes or the SWF Flash movie.

■ To delete the attached file

▶Highlight the file▶[F] (FUNC)▶"Delete att. file"▶"YES"

To delete all the attached files, select "Del all att. files".

For details of the subsequent procedure, see "Composing and Sending i-mode Mail" (p.166).

NOTE

- You can attach up to 10 files, up to 2M bytes regardless of the number of bytes of the message body or the file size of the inserted image (the maximum number depends on the file size). When attaching ToruCa, you can attach ToruCa up to 1K bytes and ToruCa (detail) up to 100K bytes for 1 case.
- You cannot attach a file which is forbidden to be sent as a mail attachment or output from your FOMA terminal.
- You can attach images or movies shot with the camera even if "File restriction" is set to "File restricted".
- If you send an attached file which is not supported by the receiving terminal, the attached file may be deleted automatically at the i-mode Center. In this case, the "添付ファイル削除" (Attached file deleted) message is added to the mail message.
- If an image selected for "Image" is larger than 320 dots wide × 240 dots high or 240 dots wide × 320 dots high, "Attach image" appears and you can select "Attach mail" or "QVGA scale down".
- Depending on the recipient's mobile phone model, sent image may be displayed incorrectly or may not be displayed. A coarse image may also be displayed.

NOTE

- When you send an i-motion mail to the terminal which is not compatible with the i-motion mail (i-motion attached i-mode mail), the recipient receives a mail with the URL for viewing the i-motion and can view the i-motion by selecting the URL.
- When you send an i-motion mail, depending on the recipient's mobile phone model, movies may not be received or displayed correctly, may be choppy or converted to continuous still images for viewing. When sending a mail to a terminal other than listed below*, it is recommended to set "File size" to "500KB", "Select size" to "QCIF (176 × 144)" and "Quality setting" to "Fine mode" when shooting movies.
*: 905i series, 904i series, 903i series, 705i series, 704i series (except P704i), 703i series (except P703i), F801i
Playing movies → p.234
- If the recipient is not FOMA S0705i, melodies you send may not be played correctly.

Saving i-mode Mail to Send Later

<Save i-mode mail>

You can save the composing mail on the FOMA terminal temporarily, then edit and send the saved mail afterwards.

Saving i-mode mail


- The Draft mailbox can hold up to 50 i-mode mail and SMS in total.
- You cannot compose i-mode mail when draft mails are full.

1 New mail screen (p.166)▶[F] (FUNC)▶"Save"

The mail which is not edited cannot be saved.

Sending draft i-mode mail

- 1▶[F] (FUNC)▶"Draft"
- The "Draft mail list" screen appears.

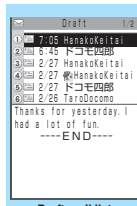

Function menu▶p.172

2 Select a mail ▶ Edit the address, subject or message body and then send the mail

NOTE

- When 2in1 is in B mode, you cannot display the Draft mail list screen.

FUNC Draft mail list screen (p.171)

List setting.....Selects a mail-list format from "Subject/Name/Address".

IC transmission → p.259

Send Ir data → p.258

IC trans. all → p.260

Send all Ir data → p.258

Copy to microSD → p.248

No. of messages.....Displays the number of mails in the Draft mailbox.

Store in Center → p.186

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" → p.39


Storing Addresses in Mailing Lists

By storing addresses in the Mail member, you can easily enter multiple addresses only by selecting the Mail member.

- You can store up to 20 mail members with up to 5 e-mail addresses in each list.

1 **MENU** ▶ "Own data" ▶ "Mail member"


The "Mail member list" screen appears.

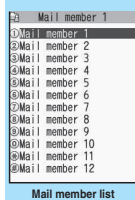

Function menu ▶ p.172

2 Select a mail member

The "Mail member detail" screen appears.

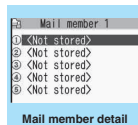

Function menu ▶ p.172

3 Highlight "<Not stored>" ▶ **(Edit)** ▶ Enter the mail address

To store more e-mail addresses, repeat step 3.

FUNC Mail member list screen (p.172)

Compose message.....Composes an i-mode mail message with the members of the mail member pasted into the recipients field.

Edit member name.....Edits the name of the mail member. You can enter up to 10 double-byte or 20 single-byte characters.

Reset member name.....Resets the mail member name to the default name.

FUNC Mail member detail screen (p.172)

Edit address.....Edits the e-mail address.

Look-up address.....Enters the e-mail address by browsing the phonebook, sent address list or received address list.

Delete this • Delete all.....Deletes one or all mail member(s).

When You Receive i-mode Mail


When the FOMA terminal is in a service area, i-mode mail or MessageR/F is automatically sent to the FOMA terminal from the i-mode Center.

- You can store up to 1,000 received mails (i-mode mail and SMS) (the number of mails you can actually store may be reduced depending on the file size).
- You can have the FOMA terminal read out the received mail message. → p.178

Displaying new messages

automatically <Auto receive mail/Message>

- [1] The "Receiving" screen appears when the reception of i-mode mail or Message starts and the "Received result" screen appears when the reception is finished.

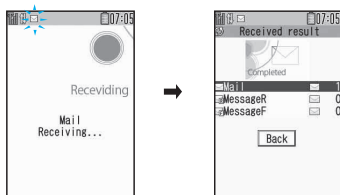

- "✉" flashes while receiving a mail and "✉" stops flashing and lights up when the reception is finished.
 - "✉" or "✉" flashes while receiving a Message.
- [2] The number of received mail or MessageR/F appears on the received result screen.
- The number of mails includes the number of SMS.
 - When you select mail or Message on the received result screen, the Received mail list screen (pp.180, 181) or Message list screen (p.190) appears.
 - If no operation is performed for about 15 seconds while the received result screen is displayed, the previous screen appears for mails and Detail screen appears for Message. The display duration may vary depending on the "Mail/Msg. ring time" setting.
 - Press [Read] (Read) on the received result screen to have the FOMA terminal read out the mail message. → p.178
 - The detail screen of MessageR/F is displayed automatically when the message is received on the standby screen.
 - If no operation is performed for about 15 seconds while the Message detail screen is displayed, the standby screen reappears. However, if you use operations such as scrolling, the detail screen continues to be displayed.
 - You can set the FOMA terminal to display the detail screen of MessageR/F automatically with "Auto-display setting".

■ When you receive a mail exceeds 100K bytes

If the total amount of mail message, inserted image(s) and attached file(s) exceeds 100K bytes, the attached file(s) cannot be automatically received when receiving mail. In this case, receive manually later on.

 
You can download the attached file which exceeds 100K bytes manually from the i-mode Center. → p.176

NOTE

- If the storage capacity for received mails is full when you receive a mail, mails are deleted from oldest read mails (unread or protected mails and mails in the Secret folder are not deleted).
- When the FOMA terminal cannot receive any more mails (because it is full with unread and protected mails), [Red] (red) or [Red] (red) appear. Read the unread mails or unprotect the unnecessary mails.
- When 2in1 is in A mode or B mode and a mail arrives only at address in unspecified mode, the "Mail Receiving..." screen appears, but the receiving results screen and "✉" do not appear. In addition, the mail ring tone does not sound.
- If you receive i-mode mail from a terminal capable of specifying "To", "Cc" and "Bcc" recipients, refer to the mail detail screen to see whether your own address is in the "To", "Cc" or "Bcc" field. → pp.180, 182
- If you receive i-mode mail when the standby screen is not displayed and "Operation preferred" is set in "Receiving setting", the FOMA terminal does not ring. When "Alarm preferred" is selected, the FOMA terminal plays the ring tone and displays the reception results screen.
- If you receive an i-shot service mail sent from a mova terminal, images arrive as attached files.

Viewing a new mail


- 1 On the standby screen ▶ [Select] "✉"



■ To display the unread mail list

- ▶ On the standby screen ▶ [Select] Use [Select] to select "✉"

The "Unread mail list" screen appears.

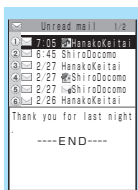

Unread mail list
Function menu▶p.186

NOTE

- Characters that cannot be displayed appear as spaces.
- If the number of characters in the i-mode mail message body exceeds the maximum number of characters that can be received, either "r" or "l" is inserted at the end of the message and the remaining portion is automatically deleted.
- If the size of received i-mode mail exceeds the size set in "Limit Mail Size", the pasted data is deleted at the i-mode Center and you cannot download it.
- If you receive decorated mail (HTML mail) from a PC, the decorations may not be displayed correctly.

Receiving i-mode Mail Selectively

<Receive option>

You can check the subject of i-mode mail kept at the i-mode Center, then select the mail to receive or delete the mail at the i-mode Center without receiving.

- To use this function, set "Receive option setting" to "ON" beforehand. When set to "ON", you cannot receive i-mode mail automatically.

When mail arrives

A message appears saying that mail is kept at the i-mode Center, and "☐" icon is displayed at the top of the screen. When you confirm the message and press any key, the message and icon disappear.

Receiving mail selectively

1 ☐▶ "Receive option"

You can also access "Receive option" as follows:

- ☐▶ "iMenu"▶ "メニュー／検索 (Menu/search)"▶ "メール選択受信" (Receive option)

■ If "Receive option setting" is set to "OFF"

A message appears asking whether you want to enable mail receive options. Select "Receive option setting" to specify the "Receive option" setting. When you set the receive option to "ON", the Mail menu screen reappears.

2 Select and set option for each item of i-mode mail

受信 (Accept): Accepts the selected mail.

削除 (Delete): Deletes the selected mail.

保留 (Hold): Leaves the selected mail at the i-mode Center.

Use "Check new message" to receive the mail.

■ To delete all mails

▶ "削除" (Delete) at the bottom of the page▶ "決定" (OK)

■ When there are multiple pages of mail

▶ "前ページ" (Previous page) or "次ページ" (Next page)▶ Move to other pages and select the mail to be accepted

When you view the 2nd page, your selections on the 1st page remain valid.

The meanings of the icons displayed after "サイズ (Size):XXXバイト (bytes)" are as follows:

📷 : Image file attached

🎵 : Melody file attached

📺 : i-motion attached

📺 : ToruCa attached

📄 : Other file attached

3 "受信／削除" (Receive/Delete)▶ "決定" (OK)

The completion screen appears and mail reception begins.

■ To cancel selective reception

▶ "キャンセル" (Cancel)

■ When there are multiple pages of mail

Selecting "受信／削除" (Receive/Delete) mid-way through the pages applies your options (hold, receive or delete) to the mail up to the selected page and mail on the remaining pages remains kept at the i-mode Center.

NOTE

- If you use "Check new messages", all messages are received even if the receive option setting is set to "ON". Deselect "Mail" in "Set check new messages" if you do not want to receive any mail.
- If you display the receive option screen, the "☐" icon disappears even when you do not receive or delete mail. The "☐" icon also disappears if you turn the FOMA terminal off or display the mail screen.
- When 2in1 is in B mode, you cannot launch the Receive option.

Checking for i-mode Mail

<Check new messages>

The i-mode mail or Messages which the FOMA terminal could not receive are kept at the i-mode Center. You can receive the kept i-mode mail or Messages by checking for i-mode mail at the i-mode Center.

● i-mode mail messages are kept at the i-mode Center in the following cases:

- When the FOMA terminal is turned off
- When “” is displayed
- When the Inbox is full
- When “Receive option setting” is set to “ON”
- During a videophone call/remote monitoring
- When Self mode is set
- When connecting to the FirstPass Center

● Use “Set check new messages” to specify which items are checked for.

1 (1 second or longer)

The check new messages screen appears.

You can also check new messages by following procedures.

-  > “Check new messages”
-  > “Check new messages”

■ To cancel the inquiry

>  (Quit) or  (1 second or longer) during the inquiry

A message may be received depending on the timing of the cancellation.

2 Check for new i-mode mails, Message R/F > “Back”

NOTE

- Depending on the signal reception status, you cannot check for new mails or the checking may be canceled.
- Even when there is i-mode mail kept at the i-mode Center, the “” icon may not be displayed if the mail arrived at the Center while the FOMA terminal is turned off or the “” is displayed.
- You can store up to 100 MessageR/F respectively at the i-mode Center, and stored up to 72 hours. Once the maximum number of stored messages is reached, messages are deleted as a new message arrives, starting with the oldest messages.

Replying to i-mode Mail

<Reply to mail>

You can send a reply to an i-mode mail message. You can also quote the received i-mode mail in your reply.

1 Received mail list screen (p.181)/ Received mail detail screen (p.182) >

(Reply)

■ To reply by quoting the received message

>  (FUNC) > “Reply with quote”

You can select this option on the received mail detail screen.

A single quotation symbol (set to “>” by default) is displayed at the start of the quoted message in the reply.

To edit the quotation symbol → p.189

■ To reply to the sender of mail with multiple addresses

> “Reply” or “Reply with quote” > “To sender”

■ To reply to the sender and all addresses of mail with multiple addresses

> “Reply” or “Reply with quote” > “To all”

If replies cannot be sent to the sender, all the addresses, including the other broadcast addresses, are deleted from the displayed mail reply screen.

If the list of broadcast addresses includes some to which replies cannot be sent, these addresses to which replies cannot be sent are deleted from the displayed mail reply screen.

2 Edit the subject and message body > (Send)

After the reply has been sent the “” icon changes to “”.

NOTE

- When 2in1 is in B mode or Dual mode, you cannot reply or reply with quote an i-mode mail sent to Address B.
- When data such as a melody or specification for activating i-appli is pasted into the mail message, the pasted data is deleted.

Forwarding i-mode Mail to Other Recipients

<Forward mail>

You can forward i-mode mail you have received to other people.

- 1 Received mail detail screen (pp.180, 182) ▶ (FUNC) ▶ “Forward” ▶ “To” <No address> ▶ Enter an address**

You can edit the subject and message body before you send a mail.

- 2 (Send)**
After the reply has been sent the “” icon changes to “”.

NOTE

- If the file which is prohibited to be attached to mails or output from the FOMA terminal is attached to or pasted, the file and its information are deleted.
- When data such as a melody or specification for activating i-appli is pasted into the mail message, the pasted data is deleted.
- When there is any attached file whose downloading is not completed, the file is not attached. → p.176
- When 2in1 is in B mode, you cannot forward the mail.
- When 2in1 is in Dual mode, a forwarded mail to Address B is sent as a mail of Address A.

Adding Mail Addresses to Phonebook

You can add the e-mail address or phone number of the sender of received mail to your phonebook.

- For the received SMS message, the sender's phone number is stored in the Phonebook as a phone number.

<Example: Adding the sender's e-mail address to the phonebook>

- 1 Received mail detail screen (pp.180, 182) ▶ (FUNC) ▶ “Save address”**
 - **When there are multiple e-mail addresses to be added**
 - ▶ On the e-mail address selection screen, select the e-mail address you want to add
 - **To add an e-mail address or phone number included in the body**
 - ▶ Mail detail screen ▶ Highlight an e-mail address or phone number you want to add ▶ (FUNC) ▶ “Add to phonebook”

- 2 “YES” ▶ “Phone” or “UIM”**
Adding information to the phonebook → p.76

Downloading Attached Files Selectively

When the size of a mail including the message body, inserted images and attached files exceeds 100K bytes, you cannot receive the attached files automatically when you receive the mail. In this case, you need to download the attached files, manually.

- You also have to download the files manually for the files that are not checked in “Prefer attachment”.
- On the received mail detail screen, “” appears when the attached file is not downloaded and “” appears when the attached file is downloaded halfway.

- 1 Received mail detail screen (pp.180, 182) ▶ Select the attached file with “” or “” icon**

Data downloading begins.

When data downloading is completed, the screen about data downloading completion appears.

■ To cancel downloading

▶ (ch) (Quit)

The data downloaded halfway is saved. In this case, you can download the rest of the data repeating step 1.

- 2 After downloading the data, contents of the data is displayed according to the file type of the attached file**

NOTE

- When there is any attached file whose downloading is not completed, the data retention period of the attached file is displayed on the “Received mail detail” screen (pp.180, 182). When all the attached files are downloaded, the retention period disappears from the screen. You cannot download the attached file whose retention period is expired.
- When the storage capacity of Inbox is exceeded when you receive an attached file, the received mails are deleted automatically according to the size of the attached file (many received mails may be deleted depending on the size of the attached file). Note that unread or protected received mails and received mails in Secret folder are not deleted. It is recommended to protect mails you want to keep. → p.185

Checking and Saving the File Attached to i-mode Mail

You can check and save the data attached to or pasted into received i-mode mail.

- You cannot save the attached file whose downloading has not completed. To save the data, download the data beforehand. → p.176

Saving melodies

<Save melody>

You can save a melody (🎵) attached to or pasted into received i-mode mail to the FOMA terminal.

- If the sender is not FOMA SO705i, the received melodies may not be played correctly.

1 Received mail detail screen (pp.180, 182) ▶ Highlight the melody ▶

☐ (FUNC) ▶ "Save data" ▶ "YES" ▶

Select a folder

■ To stop the melody

▶ [ch], [🔊], [0] to [9], [✖], [#]

2 "YES" ▶ Select an item

■ When you do not set the melody to the ring tone, etc.

▶ "NO"

NOTE

- If there are multiple pasted files, you may not be able to view the pasted files themselves.
- To prevent melodies from playing automatically when you open mail, set "Start attachment (auto)" to "OFF".

Saving images

<Save image>

You can save images (🖼️) attached to or pasted into received i-mode mail.

Saving the inserted image → p.186

1 Received mail detail screen (pp.180, 182) ▶ Move the frame to the image ▶

☐ (FUNC) ▶ "Save data" ▶ "YES" ▶

Select a folder

■ To change image display to file name display

▶ Select an image

To return to the image display, select the file name.

2 "YES" ▶ Select an item

■ When you do not set the image to the standby screen, etc.

▶ "NO"

Saving i-motion

<Save i-motion>

You can save the i-motion (🎵) attached to received i-mode mail.

1 Received mail detail screen (pp.180, 182) ▶ Highlight an i-motion ▶

☐ (FUNC) ▶ "Save data" ▶ "YES" ▶

Select a folder

Saving ToruCa

<Save ToruCa>

You can save the ToruCa and ToruCa (detail) (🎵) attached to received i-mode mail.

1 Received mail detail screen (pp.180, 182) ▶ Select a ToruCa

The ToruCa appears.

2 ☐ (Save) ▶ Select a folder

You can also save the data by selecting "Save data" from the function menu.

Saving the tool data

You can save the tool data (phonebook, schedule or bookmark) (📁) attached to received i-mode mail.

<Example: Saving the schedule>

1 Received mail detail screen (pp.180, 182) ▶ Select a file

The information of schedule appears.

You can also save the data by selecting "Save data" from the function menu.

2 ☐ (Save)

■ Phonebook

▶ ☐ (Save) ▶ "Phone" or "UIM"

Adding information to the phonebook → p.76

■ Bookmark

▶ ☐ (Select) ▶ Select the destination

For i-mode, "i-mode Browser" and "microSD" can be selected. For the Full Browser, "Full Browser" and "microSD" can be selected.

NOTE

- You cannot save the schedule on the microSD memory card.
- When you save the file which contains multiple data on the FOMA terminal, only the first data is saved (when you save the data on the microSD memory card, all the data is saved).

Saving other files

You can save other files (📎) attached to received i-mode mail.

- Other files are automatically saved to the "Other" folder on the microSD memory card. When the data is saved, the file name is changed. → p.244

- Received mail detail screen (pp.180, 182) ▶ Highlight the other file ▶**
 **(FUNC) ▶ "Save data" ▶ "YES"**

Having the FOMA Terminal Read Out Mail

- The voice may be heard by others while reading out, so move to an area where it will not disturb other people.
- The FOMA terminal reads out at the volume level set in "Phone" in "Ring volume". When set to "Silent" or "Step", messages are read out at the "Level 2" volume.
- A mail is not read out when:
 - "Read out received mail" under "Read out setting" is set to "OFF"
 - During a call or data communication (excluding packet communication)
 - In Manner mode and no equipment such as a flat plug earphone/microphone with switch (optional) is connected
 - Playing music with the Music player

Having the FOMA terminal read out new mail

When the reception results screen appears with receiving the mail or when the checking result screen appears after performing "Check new messages", the FOMA terminal can read out the mail message.

- When "Select language" is set to English, a mail is not read out.

<Example: When Check new messages is performed>

- Press  (Read) while the checking result screen is displayed**

If the sender's name and e-mail address are stored in the phonebook, the message is read out after the voice notification "○○さんからのメール" (This is from ○○).

When reading out mails is completed, the FOMA terminal emits the "pipip" tone and ends the reading out screen.

■ When you receive multiple mail at the same time

The FOMA terminal reads out mails in reverse chronological order of reception date.

When you press  during reading out, the FOMA terminal emits the beep sound before reading out the next mail. If there is no more mail, the FOMA terminal stops the reading out.

Having the FOMA terminal read out mail in the mail box

Messages written in English are spelled out in alphabetic reading.

- Received mail detail screen (pp.180, 182) ▶  (FUNC) ▶ "Read out message"**

■ To cancel reading out

 (Stop)

Press  (PLAY) again to start over reading out.

■ To end reading out

 (Exit)

NOTE

- While a message is being read out, an image appears in the upper half of the screen. When the sent address and image of the received mail are stored in the phonebook, the stored image appears.
- While a message is being read out, press  or  to scroll the message. Pressing any of other keys cancels reading out. However, when you press  or  for 1 second or longer to turn the display light or Shield view function ON or OFF, it does not end reading out.
- If you receive a call while a message is being read out, reading out is canceled and the ringing screen appears.
- If you receive a new mail or message while a message is being read out, the setting in "Receiving setting" is applied. When the specified alarm time is reached while a message is being read out, the setting in "Alarm setting" is applied.
- Mail-linked i-appli mail cannot be read out on the result screen but on the detail screen.
- The FOMA terminal cannot read out SMS report.
- The FOMA terminal may not be able to read out mails received from PCs.

Reading out rules

The read out mail function generally follows the following rules when reading out received mail.

■ Symbols and pictographs

Symbols and pictographs are not read out, except for certain symbols.

* The FOMA terminal may not correctly read out sentences that include symbols and pictographs.

Numbers

The FOMA terminal reads out numbers up to 16 digits long.

Example: 1234 $\rightarrow$ "Sen nihvaku saniu von"

■ Amount of money

If a currency symbol (e.g. “¥” (single-byte or double-byte)) is placed at the beginning of a number up to 16 digits long, the FOMA terminal reads out the number as amount of money.

If commas (,) are used as a delimiting character in an input string, the FOMA will recognize the string as amount of money only if the commas are used every 3 digits.

Example: ¥12345  "Ichiman nisen sanbyaku
yonjuu goen"

■ Phone number

If numbers are delimited by hyphens “-” or parentheses “()” as the phone number for the general phone, the mobile phone or the free dial phone, the FOMA terminal reads them out as phone numbers but not as sequences of digits. The FOMA terminal will also read numbers preceded by “Tel:” as phone numbers.

Example: Tel: 0120-102-... → Teru zeroichinizero
ichizeroni ...

■ Time

Numbers separated by a colon ":" are read out as time. *If the hour component is a 1- or 2-digit number and the minute component is a 2-digit number, the number is read out as time. If "AM" or "PM" is added before or after the number, it is read out before the number.

“Hour” : “Minute” (“Hour” = 0 to 29: “Minute” = 00 to 59)
Example: 23:15 → “Nijusanji jugofun”

AM “Hour” : “Minute” or “Hour” : “Minute” AM
 (“Hour” = 0 to 12: “Minute” = 00 to 59)
 Example: AM 5:05 → “Gozen goji gofun”

* : The time entered in the format of "Hour" : "Minute" : "Second" (e.g. 23:15:10) is not read out.

Date _____

Numbers separated by a slash (/) or a period (.) in the pattern for date are read out as date. If “M”, “T”, “S” or “H” (upper case) is inserted before a date, the corresponding (Japanese) era name (Meiji, Taisho, Showa, Heisei) is read out.

"Year"/"Month"/"Day" or "Year"."Month"."Day"
("Year" = 0 to 9999; "Month" = 1 to 12; "Day" = 1 to 31)

Example: 2008/3/1

2008/3/01

2008.3.1

2008.3.01

tsuitachi”

"H" "Year"/"Month"/"Day" or "H" "Year". "Month". "Day"
("Year" = 0 to 99; "Month" = 1 to 12; "Day" = 1 to 31)

Example: H20.3.1 → “Heisei nijunen sangatsu tsuitachi”

- The above formats for numbers, amount of money, phone numbers, time and date are also used for double-byte characters.
- When amount of money, phone numbers, time or date are read out and the string read out is immediately preceded or followed by any of the characters listed below, the numbers will not be delimited correctly. If you want to have the FOMA terminal read out amount of money, phone numbers, time or date correctly, it is recommended to use a space as the delimiting character before and after the string.
 "0 to 9", "A to Z (upper case)", ":", "¥", "¥", "¥", "¥"
 (double-byte or single-byte)

■ **Symbol**

The FOMA terminal can read out the following symbols when used with numbers.

\$ (dollars) → doru	% (percent) → paasento
¥ (yen) → en	° (degrees) → do
℃ (degrees) → do	¥ (yen) → en
\$ (dollars) → doru	% (percent) → paasento
ミリ (mm) → miri	キロ (kilograms) → kiro
センチ (cm) → senchi	メートル (meters) → meetoru
グラム (grams) → guramu	トン (tons) → ton
ヘクタール (ares) → aaru	ヘクタール (hectares) → hekutaaru
リットル (liters) → rittoru	ワット (watts) → watto
カロリー (calories) → karorii	ドル (dollars) → doru
セン (cents) → sento	パーセント (percent) → paasento
ミリバール (millibars) → miribaaru	ページ (pages) → peeji
mm (millimeters) → mirimeetoru	cm (centimeters) → senchi meetoru

km (kilometers) → kiromeetoru	mg (milligrams) → miriguramu
kg (kilograms) → kiroguramu	CC (cc) → siisii
m ² (square meters) → heihoumeetoru	

■ Others

- Alphabetic characters are read out in alphabet reading, but may be read otherwise in certain combinations.
- Depending on the content of a sentence or description (especially geographic names or proper nouns), the FOMA terminal may not read out the sentence or may read it out incorrectly.
- The voice used to read out is different from natural voice. The pronunciation or accent may be difficult to understand in some cases.
- The FOMA terminal separates sentences to read out when there is punctuation marks (periods and commas), line feeds and spaces, except when a period (.) or comma (,) is preceded and/or followed by numbers. When there is no delimiting punctuation in the text, the sentences are separated automatically.
- Depending on the sentences, it may take time before the FOMA terminal starts reading out. The FOMA terminal may read out incorrectly when there are kanji characters. To ensure that the content of the mail is read out correctly, it is recommended to ask people you frequently correspond to follow the following guidelines:
 - Create message using katakana for nouns, especially and proper nouns such as geographic names and personal names.
 - Create message using punctuation marks.

Displaying Mail in the Inbox and Outbox

<Inbox/Outbox>

- The FOMA terminal can store up to 500 received i-mode mail and SMS in total and up to 400 sent i-mode mail and SMS in total.
- You can protect up to 500 received mails and 250 sent mails.
- The number of the messages the FOMA terminal can store or protect varies depending on the data size. When data with large file size is stored, the number decreases.

Reading i-mode mail messages


<Example: Reading a received mail message>

1 [Mail] ▶ “Inbox” ▶ Select a folder ▶ Select a mail


The Secret folder is displayed in the folder list screen when the FOMA terminal is in Secret mode or Secret data only mode.




Mail menu

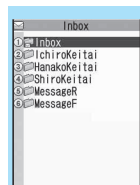

Inbox folder list
Function menu▶p.183

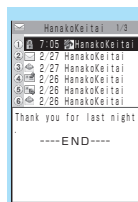

Received mail list
Function menu▶p.185

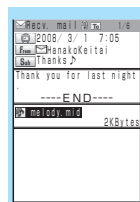

Received mail detail
Function menu▶p.186

Press [F5] on the mail detail screen too view the previous or next mail.

NOTE

- On the received mail detail screen, you can have the FOMA terminal read out the mail message. → p.178
- When 2in1 is in B mode, you cannot display the Outbox folder list screen.

Changing the mail character size or list display mode

● Changing the mail character size


- Press [F5] on the mail detail screen for 1 second or longer to change the character size.

NOTE

- When you change the display mode with the above keypad operation, the settings of “Mail” of “Character size” in “Font” and “Font size” also changes.

● Changing the mail list screen display mode (1line+body/2 lines/1 line)


- You can switch among "1line + body", "2 lines" and "1 line" using the "Mail list disp." setting in "Mail Setting" in the Mail menu.

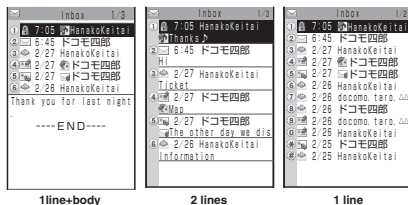

● Changing the mail list screen display mode (Name/Address/Subject)

- Press **[#]** on the mail detail screen for 1 second or longer to switch the "Subject" "Name" "Address".

<Example: "1 line+body">

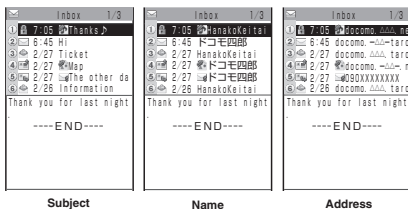


NOTE

- You can also change the display mode by selecting "List setting" from the function menu of the mail list screen, then selecting "Subject", "Name", or "Address".
- The part of Subject/Name/Address may not be displayed properly.

● Display light function

- When you open the FOMA terminal, press a key or send or receive an i-mode mail or SMS, the FOMA terminal's display light is turned on for about 10 seconds (The time for which the backlight stays on varies depending on "Mail/Msg. ring time" setting). However, when an i-mode mail or SMS is displayed, the time for which the backlight stays on varies depending on the length of the message.
- The backlight does not turn on if "Lighting" is set to "OFF" in "Backlight".


Guide to the mail folder list screens

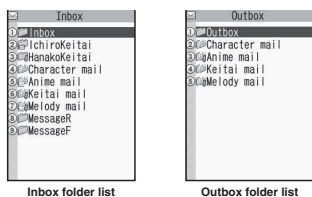

Icon	Description
	Normal folder
	Mail-connected i-appli folder
	Secret folder

- : Contains unread mail
- : Folder lock set
- : Automatic sorting settings (p.184) set

Guide to the mail list screens

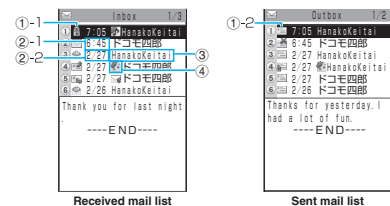

- ① Mail status
 - ①-1 Received mail

Icon	Description
	Unread mail
	Read mail
	Read and protected mail
	Forwarded mail
	Replied-to mail

- : Protected

①-2 Sent mail

Icon	Description
	Mail to one recipient
	Mail to multiple recipients (broadcast mail)

- : Protected
- : Failed to send some mails
- : Failed to send

② Message sent/received time and date

- ②-1 The time is displayed for mail sent/received today
- ②-2 The date is displayed for mail sent/received yesterday or earlier

③ Sender/receiver, subject or information

When there is no subject, "No title" is displayed.

④ Mail type, attached file information

Icon	Description
	SMS in the FOMA terminal
	SMS in the FOMA card
	SMS with SMS report received
	Area Mail
	Mail to Address B of 2in1
	Mail with an attached or pasted melody
	Mail with attached or inserted images
	Mail with an attached i-motion
	Mail with attached ToruCa or ToruCa (detail)
	Mail with attached Tool data (phonebook, schedule or bookmark)
	Mail with attached Other files
	An i-appli can be launched from the message body
	An i-appli cannot be launched from the message body (the mail is moved to the Secret folder)
	Mails sent/received by a mail-connected i-appli
	Mail with undownloaded attached file → p.176

Icon	Description
	Mail with incomplete attached file → p.176
	Mail with undownloadable attached file
	Mail with multiple attached files or mixture of attached files and pasted files
	Mail with multiple pasted data (also displayed when the data is pasted along with i-appli To)
	Mail with the FOMA card operational restriction function (you use the FOMA card different from the one used when the mail is sent/received)


* : Displayed only when the 2in1 is in Dual mode

- : Attached file is deleted (for ToruCa or Flash movie, also displayed when the attached file is deleted by scanning function)
- All the files of multiple files are deleted
- : A part of the file of multiple files is deleted

NOTE

- When you view i-mode mail with an attached image in the received mail detail screen or sent mail detail screen, the screen switches between image display and file name display each time you move the frame to the image and press (Select).
- When 2in1 is in A mode or B mode, a mail arrived at the unused address is not displayed.

Guide to the mail detail screens

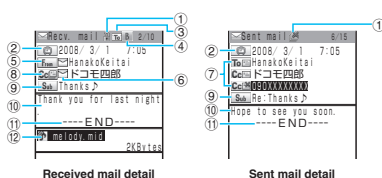

- ① Mail status
Refer to ① of "Guide to the mail list" screen (p.181)
- ② Mail sent/received time and date
- ③ Recipient type (Received mail)

Icon	Description
	The recipient type addressed by the sender → p.167

④ Mail address information of the 2in1 setting

Icon	Description
	Mail to Address B of 2in1

* : Displayed only when the 2in1 is in Dual mode

⑤ Sender (Received mail)

Icon	Description
 	The name or e-mail address of the sender

 : Cannot reply-to

⑥ Icon stored in the phonebook

When the mail address or phone number is stored in the phonebook, the icon stored in the phonebook is displayed.

⑦ Recipient and recipient type (Sent mail)

Icon	Description
     	The name, e-mail address of the recipient and the recipient type → p.167

 : Failed to send

⑧ Recipient and recipient type of broadcast mail (Received mail) Up to 4 recipients can be displayed.

Icon	Description
   	The names, e-mail addresses of the recipients except yourself and the recipient type for broadcast mail → p.167

 : Cannot reply-to

⑨ Subject

If there is no subject, "No title" is displayed.
Displays  at the beginning for received SMS (displays the  when the SMS is on the FOMA card)
When an SMS report has been received,  is also displayed.
Displays "Area Mail" when an Area Mail has been received

⑩ Message body

⑪ Displayed at the end of the message body

⑫ Attached file information

The file name and file size are also displayed.

Icon	Description
	Invalid inserted image

* Other than the above icons, the same icons as the list screen may appear in some cases. Refer to "④ Mail type, attached file information" in p.182.

NOTE

- In the following cases, the e-mail address is displayed instead of "Name", even when the phone number or e-mail address is stored in the phonebook:
 - When "Restrict dialing" is set and the phone number is not designated in the "Restrict dialing" setting
 - When the FOMA terminal is in Secret data only mode and the phone number or e-mail address is not stored as secret data
 - When the FOMA terminal is not in Secret or Secret data only mode and the phone number or e-mail address is stored as secret data
 - When 2in1 is set to A mode and the phonebook is set to B mode, or the mode is set to B mode and the phonebook is set to A mode.

Mail folder list screen (pp.180, 181)

Add folder..... Adds a folder and set the Auto-sort for the new folder. Also, set whether to add the same folder to the Inbox/Outbox.

You can add up to 22 folders.

"Setting Auto-sort" → p.184

Auto-sort → p.184

Edit folder name..... Edits the folder name of the added folder. You can enter up to 10 double-byte or 20 single-byte characters.

Folder lock..... Sets/Releases the folder lock. → p.120

Sort folder..... Selects the position to move to and rearranges the folder.

No. of messages..... Displays the number of messages, unread messages and protected messages in all the folders.

Open folder..... Displays list of the mails in a folder.

Add shortcut* → p.100

IC trans. all → p.260

Send all Ir data → p.258

CopyAll to microSD → p.248

Delete folder..... Deletes a folder.

Delete read..... Deletes all the read mails.

Delete all.....Deletes all mails.

* : This function is available only for the Inbox folder list screen.

NOTE

- You cannot delete, sort or rename the folders (Inbox and Outbox) that are already installed on the FOMA terminal at the time of purchase. You cannot use the Auto-sort function with these folders either.

<Add folder>

- When you download a mail-connected i-appli, an i-appli mail folder is automatically created (up to 5).

<Sort folder>

- You cannot run Sort folder when only one folder is added.

<No. of messages>

- You cannot check the number of the following i-mode mail or SMS messages.
 - Messages in the Secret folder
 - Messages set not to be displayed in the 2in1 setting
- You cannot check the MessageR/F.

<iC trans. all> <Send all Ir data> <CopyAll to microSD>

- The MessageR/F are not included.

<Delete folder>

- You cannot delete an i-appli mail folder if there is a corresponding mail-connected i-appli. You can delete an i-appli mail folder if there is no corresponding software, but the folder created in the Inbox folder screen or Outbox folder screen is also deleted.
- If you delete a folder that is specified in the "Auto-sort" settings, the automatic sorting setting for that folder is also canceled.

<Delete read> <Delete all>

- The following i-mode mail or SMS messages will not be deleted.
 - Protected messages
 - Messages in the Secret folder
- For Delete all, hidden mail messages are also deleted by 2in1 setting.
- The MessageR/F are not deleted.

● Setting Auto-sort

You can sort mail messages into the specified folders by the set criteria such as mail address or subject.

① Mail folder list screen (pp.180, 181)▶ Highlight the destination folder▶

 (FUNC)▶"Auto-sort"▶Set any item from the following

When the sorting is already set, the setting is displayed. Press  (FUNC) again.

■ When Original lock is set to the Phonebook or mail members

When checking auto-sort-set folder conditions, the group name appears as "Group" even after changed, and the mail member name appears as "Mail member" even after changed.

Address sort.....Sets the e-mail address.

Look-up address.....Sets the e-mail address by browsing the phonebook or address list.

Look-up group.....Sets the group of the phonebook.

Look-up member.....Sets the mail member.

Enter address.....Sets a mail addresses by entering it.

Subject sort.....Sets the subject.

Reply impossible (Send impossible).....Sets an e-mail address to which you cannot reply or you could not send a mail as an Auto-sort criteria.

Sort all.....This can only be set for mail-connected i-appli folders. Sorts all mails into a mail-connected i-appli folder.

Edit addr/subj.....Edits a previously specified e-mail address or mail subject.

List setting.....Selects a mail-list format from "Name/Address".

Release.....Releases the Auto-sort criteria by selecting "Release this/Release selected/Release all". "About multiple-choice"→p.39

NOTE

- If received or sent mail meets multiple sort criteria, the priority of the Auto-sort settings is assigned as follows.
 - ① Sort all
 - ② Subject sort
 - ③ Reply/Send impossible
 - ④ Mail address/Phone number
 - ⑤ Mail member
 - ⑥ Phonebook group
- Mail received or sent before the Auto-sort settings are not sorted.
- The mails sent as broadcast message are searched for the sorting criteria in the order of address entered.
- When using 2in1 and setting Auto-sort, select the criteria from "Look-up address (Phonebook/Sent address/Received address list)", "Look-up member", "Direct input", "Subject sort", "Reply impossible", "Sort all", or "Edit addr/subj".
- The Area Mail is not included for "Address sort", "Subject sort" and "Reply impossible".

<Address sort>

- You can set a total of 700 addresses for automatic sorting (more than one setting is available for 1 folder).

NOTE

<Address sort (Look-up group)>

- When you set address sort to the mail address stored as secret data and receive mail from the address, the mail is stored in the "Inbox" folder when the FOMA terminal is not in Secret or Secret data only mode and stored in the sorting destination folder when the FOMA terminal is in Secret or Secret data only mode.

<Address sort (Enter address)>

- Ensure that the e-mail address domain (the part that follows the @ symbol) is entered correctly. However, if the address format is "[phone number]@docomo.ne.jp", simply enter the phone number.

<Subject sort>

- If the subject meets the sort criteria for multiple folders, the mail is sorted into the folder closest to the Inbox or Outbox folder.
- You cannot use this function to sort i-mode mail that has no subject entered and is displayed as "No title" even if you set "No title" as a sort criteria.
- You cannot use this option to sort SMS.

<Reply impossible>

- You cannot use this option to sort SMS reports.
- "Reply impossible" can only be set for 1 folder of Inbox.

<Send impossible>

- "Send impossible" can only be set for 1 folder of Inbox.

<Sort all>

- You cannot use this option to sort SMS reports or SMS received directly to the FOMA card (UIM).
- "Sort all" can only be set for 1 i-appli mail folder for received and sent i-appli mail respectively.

FUNC Mail list screen (pp.180, 181)

Reply^{*1} → p.175

Edit^{*2}.....Edits the recipient, subject or message body of the sent mail. Press  (Send) to send the mail.

Move.....Selects from "Move this/Move selected/Move all" and moves the mail to the other folder you select.
"About multiple-choice" → p.39

Search mail.....Searches for mail using a specified criteria.

Search sender^{*1}/**Search receiver**^{*2}.....Searches for mail by specifying the mail address from the phonebook mail address list or entering the mail address manually.

Search subject.....Enters a subject to search.

Display all.....Returns the search and sort displays or displays that use filter functions to their original display settings (all Chronological ↑).

Sort.....Sorts the mail in a selected criteria.

Filter.....Displays only the mails which meet the selected criteria.

Color coding.....Sets the color coding for the mail from "Default (black)/Red/Blue". You can also change the color by pressing  (1 second or longer) in the mail list screen.

List setting.....Selects a mail-list format from "Subject/Name/Address".

Read all^{*1}.....Marks all the unread mail in the folder as read.

Protect^{*1}.....Selects the protecting method from "Protect this/Protect selected/Protect all"^{*3}.
"About multiple-choice" → p.39

Unprotect^{*1}.....Selects the unprotecting method from "Unprotect this/Unprotect selected/Unprotect all".
"About multiple-choice" → p.39

Protect ON/OFF^{*2}.....Protects or unprotects mail.

Unprotect all^{*2}.....Unprotects all protected mail.

iC transmission → p.259

Send Ir data → p.258

Copy to microSD → p.248

UIM operation....."Moving or copying SMS from the mail screen" → p.255

Mail info^{*1}.....Displays the information such as sender of the mail.

No. of messages.....Displays the total number of mails in the folder.

Store in Center → p.186

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" → p.39

- For received mails, you can delete only read mails or SMS reports at once by selecting "Delete read/Delete all SMS-R".

Keep in secret ⇔ **Put out**^{*4}.....Select the setting from "Keep this/keep selected/keep all".
"About multiple-choice" → p.39
"Preventing Others from Viewing Data" → p.112

*1: Available only with the received mail list screen.

*2: Available only with the sent mail list screen.

*3: Only available in the Secret folder.

*4: Available only in Secret or Secret data only mode.

FUNC Unread mail list screen (p.173)**Reply** → p.175**List setting** Selects a mail-list format from "Subject/Name/Address".**Protect ON/OFF** Protects or unprotects mail.**Delete this** Deletes one mail.**NOTE****<Search mail>**

- You can also search the results of a search.
- You cannot use this function to search i-mode mail that has no subject entered and is displayed as "No title" even if you set "No title" as a criteria for searching by subject.

<Sort><Filter>

- The sort and filter function can be used together. For example, to view only the unread mail in the received mail list screen in chronological order, select "Chronological ↓" in the sort menu and then "Unread" in the Filter menu.
- When you exit from the mail list screen, the sort display and filter function are canceled.

<Read all>

- If you view mail with the filter function and then select "Read all", only the currently displayed mail is marked as read.

<Protect ON/OFF>

- A mail that is not displayed by the setting of 2in1 is not targeted for setting of "Protect all" nor "Unprotect all" even if either of them is selected.

<Keep in secret><Put out>

- A mail that is not displayed by the setting of 2in1 is not targeted for setting of "Keep all" nor "Put out all" even if either of them is selected.

● Storing mails at the Data Security Center

You can store i-mode mails and SMS stored in the FOMA terminal at the Data Security Center.

- Data Security Service is a pay service you need to apply for. If you have not subscribed to the service and try to connect to the Data Security Center, the notification screen appears.

- 1 Mail list screen (pp.171, 180) ▶**
☐ (FUNC) ▶ "Store in Center" ▶ Use ☐ (checkbox) ▶ ☐ (Finish)
 You can select up to 10 mails.

- 2 Enter your security code ▶ "YES"**
 The FOMA terminal connects to the Data Security Center to start saving the mails.

3 (Finish)**NOTE**

- You cannot store SMS stored in the FOMA card at the Data Security Center.
- When saving mails with attached files, the attached files are deleted.
- When saving received mails in which images prohibited to be output from the FOMA terminal are pasted into, these images are deleted.
- The setting of "Color coding" is not saved.

■ To restore the mail

The mail data stored at the Data Security Center can be stored on the FOMA terminal from the site of the Data Security Center. For details on how to use, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

FUNC Mail detail screen (p.180)**Reply** ^{*1,2} → p.175**Reply with quote** ^{*1,2} → p.175**Forward** ^{*1,2} → p.176**Edit** ^{*3} Edits the recipient, subject or message body of the sent mail. Press **☐** (Send) to send the mail.**Resend** ^{*3} Resends the message.**Protect ON/OFF** Protects or unprotects mail.**Move** Selects the destination folder to move a mail message to the folder.**Copy** Copies the message body, subject or e-mail address. The copied text can be pasted into the Character entry screens, etc. → p.304**Save address • Add to phonebook** → p.176**Save data** "Checking and Saving the File Attached to i-mode Mail" → p.177**Save insert image** Selects the image inserted to the Deco-mail and saves it on the My picture folder. After saving the image, you can specify whether to set it as the standby screen.**Add shortcut** → p.100**Save template** Saves an i-mode mail as a template. → p.170**Refer dictionary** Starts the dictionary. → p.292**Property** Selects an image to display the file name and size of an image inserted into the message in Deco-mail.**Read out message** ^{*1} → p.178

Disp. SMS report³.....Displays the SMS report for an SMS.

IC transmission → p.259

Send Ir data → p.258

Copy to microSD → p.248

UIM operation.....“Moving or copying SMS from the mail screen” → p.255

Scroll (default: 1 line).....Selects the number of scrolling lines in a screen from “1 line/3 lines/5 lines”.

Font size (default: Standard).....Selects the font size from “Small/Standard/Large/X-large”. → p.100

Delete att. file • Del all att. files.....Deletes one or all attached file(s).

Delete.....Deletes a mail.

Keep in secret ⇄ Put out⁴.....“Preventing Others from Viewing Data” → p.112

*1: Available only with the received mail detail screen.

*2: Not available when 2in1 is in B mode.

*3: Available only with the sent mail detail screen.

*4: Available only in Secret or Secret data only mode.

NOTE

<Delete att. file><Del all att. files>

- You cannot delete the data pasted into the message body or undownloadable file ().

Using Mail Records

<Sent address/Received address>

When you send or receive mail, the mail addresses are recorded in the Sent address list or Received address list. You can send mail by selecting an address from these address lists.

- Up to 30 i-mode mail address or SMS phone number entries can be stored in the respective Sent address and Received address lists. However, up to 60 received addresses can be stored if you use 2in1.
- When the Mail box lock is set to Inbox or Outbox, the mail address is not recorded in the address list.

Checking an address list

<Example: Viewing the received address screen>

1 On the standby screen (1 second or longer)

The “Received address screen (list)” appears.


■ To display the sent address screen (list)

(for 1 second or longer)

■ Displayed icon on the Address screen (list)

/ : i-mode mail transmission successful/failed

/ : SMS transmission successful/failed

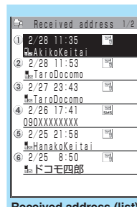

Received address (list)

Function menu → p.187


2 Select a sender

The “Received address screen (detail)” appears.

■ Displayed icon on the Address screen (detail)

/ : i-mode mail transmission successful/failed

/ : SMS transmission successful/failed

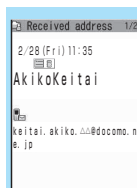

Received address (detail)

Function menu → p.187

3 Check the details

NOTE

- Turning the FOMA terminal off or deleting sent or received mail messages does not delete the entries in the address lists. You should delete the record entries themselves to prevent others from viewing them.
- When 2in1 is set to A mode or B mode, up to 30 message histories arrived at or sent from the used address are displayed. However, if set to B mode, the Sent address list screen cannot be displayed.
- When 2in1 mode is set to Dual mode, “ ” icon appears in Number B/Address B received records.



Address screen (list/detail)
(p.187)

Add to phonebook.....Adds the mail address to the phonebook. → p.176

Look-up phonebook.....Displays the detail screen of the phonebook in which the mail address is stored.

Add shortcut → p.100

Compose message^{*}.....Composes an i-mode mail with the mail address set as the recipient.

Dialing.....Uses the Phone To/AV Phone To function to make a voice/videophone call for the phone number in the phonebook entry that contains the e-mail address.
→p.156

Received calls².....Switches to the Received calls record screen. →p.56

Redial³.....Switches to the Redial screen. →p.56

Big font⇔**Standard font**⁴.....Switches the font size between "Big font/Standard font". →p.100

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice"→p.39

*1: When an SMS is selected, this option changes to "Compose SMS", which composes an SMS with the phone number pasted in as the recipient.

"Composing and Sending SMS"→p.192

*2: This function is available only for the received address screens (list/detail).

*3: This function is available only for the sent address screens (list/detail). If the Sent address screen appears from Dialed calls, "Dialed calls" appears.

*4: Only available on the Address screen (list).

Setting up the FOMA Terminal Mail Functions

<Mail Setting>

1 "Mail Setting"

The "Mail Setting" screen appears.



Mail Setting

2 Select any item:

Scroll (default: 1 line).....Selects the number of lines that are scrolled when you press [F] on the mail detail screen, from "1 line/3 lines/5 lines".

Font size (default: Standard).....Selects the font size displayed on the mail detail screen from "Small/Standard/Large/X-large". →p.100

Mail list disp. (default: 1 line+body).....Sets the number of lines and item to be displayed on the mail list screen. Select the lines to display from "2 lines/1 line/1 line+body" and the format from "Subject/Name/Address".

Message display.....Sets the position from where to start displaying the message body.

Standard (default).....Displays the message from the headers onwards (date and time received/sent).

From message.....Displays the message from the message body onwards.

Start attachment (auto) (default: ON).....Sets whether to automatically play the attached or pasted melody when opening an i-mode mail.

Header/Signature→p.189

Mail box lock→p.120

Receiving setting.....Sets whether to give display priority to the receiving and received result screen if a mail, MessageR/F is received while you are using the FOMA terminal.

Alarm preferred (default).....Displays the receiving and received result screen.

Operation preferred.....Gives priority to the screen being used rather than displaying the receiving and received result screen.

Receive option setting (default: OFF).....Sets whether to receive mails selectively (ON) or automatically(OFF).

Prefer attachment (default: all selected).....Selects the attached file type to receive at the time you receive the mail from "Image/i-motion/Melody/PDF/ToruCa/Tool data (Phonebook, Schedule, Bookmark)/Other". "About multiple-choice"→p.39

Read out setting

Select voice (default: Female 1).....Sets the type of voice used for reading out mail.

Read out received mail (default: ON).....Sets whether to allow the mail to be read out or not when it is received.

SMS settings

SMS report request (detail: OFF).....Sets whether to request an SMS report after sending an SMS.

SMS validity period (default: 3 days).....Selects the storage period of the sent SMS kept at the SMS center from "None/1 day/2 days/3 days". When set to "None", SMS messages are not stored at the SMS center.

SMS input character (default: Japanese (70char.)).....Sets the SMS body character input method. When set to Japanese, you can enter up to 70 characters regardless of double-byte or single-byte. When set to English, you can enter up to 160 single-byte alphanumeric characters.

Area Mail setting→p.192

Check settings.....Allows you to check the settings specified in "Mail Setting".

Reset.....Resets the settings specified in "Mail Setting" to the default settings.

NOTE

- When 2in1 is in B mode, you cannot select "Mail Setting".

<Mail list disp.>

- When set to "X-large", the "Mail list disp." setting is automatically set to "2 lines". When "Mail list disp." is set to "1 line" or "1 line+body" while Font size is set to "X-large", automatically switch it setting to "Large".

<Receiving setting>

- When you are receiving/sending a voice call, during a voice call or using functions such as an i-appli or the camera, the receiving and received result screen may not appear when you receive mail or Message R/F even when set to "Alarm preferred".
- When 2in1 is in A mode or B mode and a mail arrives only at the mail address of the unset mode, the receiving screen appears, but the received result screen does not appear even when set to "Alarm preferred".

<Receive option setting>

- This option applies to i-mode mail only. SMS, MessageR/F are received automatically regardless of this setting.

<Prefer attachment>

- To check the contents of the file, you have to download the file manually afterwards. → p.176

Editing Headers, Signatures and Quotation Marks

By storing your header or signature, you can automatically paste it into an i-mode message. You can also edit the quotation marks when you reply to received mail by quoting the original message.

1 Mail Setting screen (p.188) ▶ "Header/Signature"

2 "Edit header" or "Edit signature" ▶ (Edit)

■ To edit the quotation marks

▶ "Edit Quotation marks"

3 Enter the header or signature ▶ (Finish)

You can enter up to 5,000 double-byte or 10,000 single-byte characters for the header and signature.

You can decorate the header or signature.

→ p.168

■ To enter the quotation marks

▶ Enter the quotation marks

You can enter up to 10 double-byte or 20 single-byte characters.

■ When you add the header or signature automatically

▶ "Insert setting" ▶ Select the checkbox of "Header" and/or "Signature" ▶  (Finish)

Deselect the checkbox when you do not add it automatically.

NOTE

- Even if you select the "Insert setting" checkbox, the header or signature is not pasted into i-mode mail composed using Template. Insertion is also unavailable when sending i-appli mail with mail-linked i-appli.

Specifying which items are checked for in Center inquiries

<Set check new messages>

You can specify which items are checked for "Check new messages" whether to check for "Mail" (i-mode mail), "MessageR" and/or "MessageF".

1 ▶ "Settings" ▶ "Connection setting" ▶ "Set check new messages"

2 Use to select ☐ (checkbox) ▶ (Finish)

A deselected checkbox (☐) denotes that the FOMA terminal will not check for that item.

When You Receive a Message

When the FOMA terminal is in a service area, MessageR/F are automatically sent to the FOMA terminal from the i-mode Center. → p.172

- You can store up to 100 MessageR/F respectively on the FOMA terminal (the number of messages you can actually store may be reduced depending on the file size).
- Perform "Check new messages" when you receive the messages kept in i-mode center. → p.175


NOTE

- If the storage capacity for messages is full when you receive a message, read messages are deleted from the oldest one (unread or protected messages are not deleted).

NOTE

- When the FOMA terminal cannot receive any more messages (because it is full with unread and protected messages), (red)/ (red) appears ((red), (R: red), (F: red) may appear to display the 2 conditions simultaneously). Read the unread messages or unprotect the unnecessary messages.
- When the i-mode center keeps Messages, / appears. Perform "Check new messages" to receive messages. When the messages kept at the i-mode center are full, (red)/ (red) appears.
- Received Message R/F are not automatically displayed when displaying other than the standby screen, an i-appli is running, Public mode (Driving mode) is set, Dial lock is set, or when Original lock is set to "i-mode" or "Mail disp."

How to view the Message R/F screens

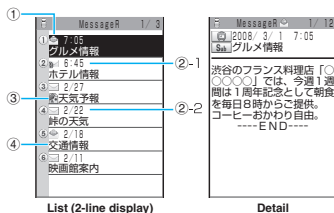

① Message status

Icon	Description
	Unread Message
	Read Message
	Read and protected Message

: Protected

② Message received time and date

- ②-1 The time is displayed for Message received today
- ②-2 The date is displayed for Message received yesterday or earlier

③ Attached file information

<List screen>

Icon	Description
	Message with an attached or pasted melody
	Message with an attached image
	Message with an attached ToruCa
	Message with multiple attached or pasted data

- : One or more data is invalid
- : Invalid data
- : Deleted by the scanning function

<Detail screen>

Icon	Description
	Pasted melody

: Invalid data

④ Subject


Viewing Messages in the Message Box

<Message R/F>

- When a Message R/F from the i-mode Center arrives on the FOMA terminal, the "" or "" icon appears at the top of the screen.

① "Inbox" ▶ "Message R" or "Message F"

The "Message list" screen appears.

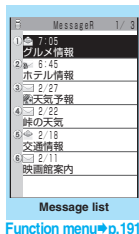


2 Select a message

The "Message detail" screen appears.

To display the next or previous message in the message detail screen, press .

In the message detail screen, press **[CLR]** to return to the message list screen.

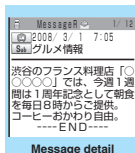

Message detail
Function menu ▶ p.191

[FUNC] Message list screen (p.190)

Display all.....The original display (all Chronological ↑) is reverted from a sorted or filtered display.

Sort.....Sorts the messages in a selected criteria.

Filter.....Displays only the messages which meet the selected criteria.

Protect ON/OFF.....Protects or unprotects MessageR/F.

Unprotect all.....Unprotects all the protected MessageR/F.

No. of messages.....Displays the number of stored MessageR/F, unread messages and protected messages.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete read/Delete all".

"About multiple-choice" → p.39

- When selecting "Delete read", you can delete only the read messages at once.

NOTE

<Sort><Filter>

- The sort display and filter function can be used together. For example, if you want to display the unread messages in chronological order, select "Chronological ↓" in the sort menu, then select "Unread" in the filter menu.
- When you exit from the MessageR/F list screen, the sort and filter are canceled.

[FUNC] Message detail screen (p.191)

Add to phonebook.....Adds the phone number and e-mail address displayed on MessageR/F to the phonebook. → p.76

Save melody.....Saves a melody attached to MessageR/F.

Save image.....Saves an image attached to MessageR/F.

Save ToruCa.....Saves a ToruCa attached to MessageR/F.

Protect ON/OFF.....Protects or unprotects MessageR/F.

Delete.....Deletes the MessageR/F.

NOTE

<Save melody>

- Some saved melodies may not play correctly.

What is Early Warning "Area Mail"?

A service that you can receive the urgent earthquake news flash, etc. delivered by the Meteorological Agency.

- Area Mail is available without subscribing to i-mode.

- To receive Area Mail, the receiving setting is required. → p.192

In the following situations, area mails are not received regardless of this setting.

- During international roaming
- Omakase Lock is set
- When Self mode is set
- Area Mails may not be received when:
 - During a videophone call
 - Data communication in progress

When You Receive Early Warning "Area Mail"

<Receive Area Mail>

When the FOMA terminal is in a service area, the Area Mail is automatically received.

- When you receive Area Mail, the  icon appears at the top of the screen.
- Received Area Mail is stored in Inbox.
- You can store up to 100 Area Mails on the FOMA terminal.

NOTE

- If the storage capacity for Area Mails is full when you receive an Area Mail, Area Mails are deleted from the older read mails first and then the older unread ones in order.

● When you receive the Area Mail for the earthquake early warning

When you receive the Area Mail, you are notified on the description screen with beep and vibration. The screen returns to the previous screen, when you press any of ,  and .

- You cannot change the volume of the beep.

However, you can set the ring time for beep or the beep ON/OFF with setting for "Beep setting" in the "Area Mail setting".

The ring tone for the Area Mail sounds when the beep sound setting is set to "OFF".

- When Manner mode is set, the beep is determined by "Manner mode set".
- Vibrator pattern links to the beep while in beep sounding, and follows the "Mail" setting under "Vibrator" while in incoming mail sounding.

● When you receive the Area Mail other than the earthquake early warning

When you receive the Area Mail, you are notified on the "Receive Area Mail" or the "Description Screen", then notifies them with a beep for the Area Mail (the screen is specified by the provider).

The "Receive Area Mail" screen returns to the previous screen, if no operation is performed or you press any key. The description screen returns to the previous screen, when you press any key ,  and .

NOTE

- The volume of the ring tone is set to the same volume set at "Mail" of "Ring volume".
- The description screen or "Receive Area Mail" screen may not appear when you receive the Area Mail during using functions such as an i-appli or the camera.

Setting Early Warning "Area Mail"

<Area Mail setting>

Make the settings for receiving Area Mail.

① Mail Setting screen (p.188) ▶ "Area Mail setting"

"Area Mail setting" screen appears.



Area Mail setting

② Select any item:

Receive setting (default: No).....Sets whether to receive the Area Mail.

- The confirmation message asking whether to use Area Mail appears before setting, read the given notes carefully and select "YES"/"NO".

Beep setting

Beep setting (default: ON).....Turns the beep ON/OFF.

Beep time (default: 10 seconds).....Sets the beep time between 01 and 30 seconds.

Receive entry.....Registers the name of Area Mail other than the urgent news flash that you want to receive and Message ID. Select "<Not recorded>" at the "Receive entry" screen, and enter "Area Mail name" and "Message ID" after you enter your security code. The urgent news flash is sent regardless of the settings of Receive entry.

Composing and Sending SMS

<Compose SMS/Send>

- Your SMS address is your "subscriber mobile phone number".
- This service allows you to exchange text messages with subscribers to overseas carriers other than DoCoMo. For information on the supported country and the supported overseas carriers, refer to the DoCoMo website.

① ▶ "Compose SMS"

The "New SMS" screen appears.




New SMS
Function menu▶p.193

② "To" <No address> ▶ Enter an address

Select the mail address input method to enter the address.

Sets the e-mail address by browsing the phonebook, received address list or entering text directly → p.166

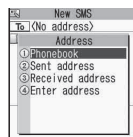

■ If the recipient is using an overseas carrier other than DoCoMo

▶ Enter + () (1 second or longer)), the country code, the other party's mobile phone number

If the mobile phone number begins with zero (0), omit the zero.

You can also send SMS by entering "010", the country code, the other party's mobile phone number in this order. (To reply to received SMS from overseas, enter "010".)

3 ▶ Enter the message body

The numbers and types of characters that can be entered are as specified in the "SMS input character" settings. When set to "Japanese", you can enter up to 70 characters regardless of double-byte or single-byte. When set to "English", you can enter up to 160 single-byte alphanumeric characters and symbols. Spaces are also counted in the same way as characters.

4 (Send)

An animation is displayed while the SMS is being sent.
Entered sent and unsent SMS → pp.185, 186

NOTE

- You cannot send SMS to the entered address when:
 - The address contains the characters other than numbers, "★" or "#"
 - The address contains "+" except for the head of the address
 - The address contains a space
- Depending on the signal quality, types of characters or device of the other party, the recipient may not be able to display the text correctly.
- Even when "Caller ID Notification" is set to "OFF", your caller ID is provided to the recipient during SMS transmission.
- The line feed symbol is counted as 2 characters in Japanese input mode and as 1 character in English input mode.
- You cannot send an SMS from the additional number of multi number. Set the multi number setting to the basic number.
- When 2in1 is in B mode, you cannot compose and send SMS.

FUNC New SMS screen (p.192)

Send.....Sends an SMS.

Preview.....Allows you to check the SMS recipient and message before sending it.

Save→p.171

SMS report req.* (detail: OFF).....Sets whether to request an SMS report after sending an SMS.

SMS valid. per.* (default: 3 days).....Selects the storage period of the sent SMS kept at the SMS center from "None/1 day/2 days/3 days". When set to "None", the SMS is resent and deleted when set time elapses.

SMS input char......Sets the SMS body character input method.

Japanese (default).....You can enter up to 70 characters regardless of double-byte or single-byte.

English.....You can enter up to 160 single-byte alphanumeric characters.

Erase message.....Only the message body is deleted.

Delete.....Deletes the SMS being edited.

* : This function menu is only valid for the current SMS. Set in the "Mail Setting" (p.188) if you want to keep the setting to all SMS.

● SMS reports

<SMS report req.>

SMS reports are the mail to notify you that the other party has received SMS. You can check SMS reports in the Inbox or in the "Disp. SMS report" in the function menu of the sent SMS detail screen. SMS reports are indicated by "SMS report" in the subject line.

When You Receive an SMS

<Receive SMS>

When the FOMA terminal is in a service area, SMS is automatically sent to the FOMA terminal from the SMS Center.

- The operations when SMS is received is same as the operations when i-mode mail is received. Also, the storage capacity and the operation when the storage capacity for received mails becomes full are the same as i-mode mail. → p.172
- SMS in the received mail list screen, the beginning of the message is displayed as the subject.

NOTE

- If you receive Short Mail sent from a mova terminal, etc., the sender's phone number is displayed. If the caller ID is not provided, the reason is displayed.
- If a received SMS includes double-byte characters that are not listed in the Kuten code list, those characters are displayed as blanks (spaces). For the Kuten code list, refer to the PDF format "Kuten Code List" in the provided CD-ROM.
- Pressing  (Select) while the sender of the current SMS is highlighted allows you to make a voice or videophone call to that number, compose SMS or select an image for videophone (Phone To, AV Phone To, and Mail To function). → p.156

Forwarding and replying to received SMS

You can forward SMS and send a reply to the sender.

→ p.175

- You cannot enter a subject.

NOTE

- You cannot reply to an SMS when the sender has withheld his or her caller ID (User unset) or is sending from a pay phone (Payphone) or a phone that does not support caller ID notification (Not supported).
- Even if you reply to or forward an SMS on the FOMA card (UIM), the  remains on the received mail list screen and received mail detail screen and the / "" icon does not appear.
- When 2in1 is in B mode or Dual mode, you cannot reply an SMS sent to Number B.

Checking for SMS <Check new SMS>

The SMS that are not received by the FOMA terminal are kept at the SMS Center. You can receive the kept SMS by checking new SMS.

- SMS are kept in the following cases:
 - When the FOMA terminal is turned off
 - When  is displayed
 - When the Inbox is full
 - When Self mode is set

1 "Check new SMS"

"SMS Checking" appears while you check for new SMS. Press  (Select) after checking for new SMS. The automatic receiving starts if the center keeps any SMS.

The automatic receiving may not start immediately after inquiry.

Specifying the SMS center setting

<SMS center selection>

- Refer to the "SMS settings" (p.188) in the "Mail Setting" screen about the SMS settings other than the SMS center.

* There is normally no need to change this setting.

Use this setting to specify whether the FOMA terminal uses the DoCoMo SMS Center or another provider's SMS center for SMS.

- 1  "Settings" ► "Connection setting" ► "SMS center selection" ► Select any item:

DoCoMo Uses the DoCoMo SMS Center.

User setting Enters SMS center's address, then selects from "International/Unknown" to use the other SMS center.

Reset Deletes the "User setting" data and resets the setting to "DoCoMo".

NOTE

- If the entered SMS Center address includes "#" or "X", you cannot select "International".

i-αppli

What is an i-αppli?	196
Downloading i-αppli from Sites	196
Launching an i-αppli	197
Pre-installed Software.....	200
Launching i-αppli Automatically	207
Launching an i-αppli from a Site or Mail	i-αppli To setting 207
Setting the i-αppli Standby Screen	Set i-αppli stand-by 208
Organizing i-αppli.....	209

What is an i-appli?

Downloading an i-appli from a site enables you to use i-mode terminal in more convenient. For example, you can download a range of games to an i-mode terminal and play them, and there are other i-appli that enables you to store data from the i-appli directly into the phonebook or your schedule and i-appli linked to Data box that enables you to save or download images.

- For details on i-appli, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Downloading i-appli from Sites

You can download software from an i-mode site and run the software on your FOMA terminal.

- The FOMA terminal can store up to 200 downloaded software applications. The maximum number of software applications that can be saved varies depending on the data size. The number includes partly downloaded i-appli.

1 Select software

Press  (Select) when the "Completed" message appears. For the software that is immediately launched from the site, the software starts up without displaying a completion message.

■ To cancel data downloading in progress

▶ During downloading ▶  (Cancel) or 

■ When the software setting screen appears

▶ Set the software ▶ "YES"

Software settings → p.198

2 "YES"

The downloaded software is launched.

■ Not to launch the software

▶ "NO"

● Downloading Mail-connected i-appli

- When you download a mail-connected i-appli, an i-appli mail folder is automatically created in the inbox or Outbox folder. The folder names are assigned by the downloaded mail-connected i-appli and cannot be changed. The FOMA terminal can store up to 5 mail-connected i-appli.
- Mail sent and received using a mail-connected i-appli is automatically sorted into the dedicated folders created when that mail-connected i-appli was downloaded. You can also manually sort received mails.

- You cannot download mail-connected i-appli in the following cases:

- If there are already 5 dedicated folders for mail-connected i-appli
- If there is already saved a mail-connected i-appli that uses the same folder
- Mail box lock is set

NOTE

- To restore deleted software that had been pre-installed, download from PlayNow by SO.
"iMenu" ▶ "メニュー/検索" ▶ "ケータイ電話メーカー" ▶ PlayNow by SO
QR code on the right is also available to select the displayed URL and access the site.
- Some i-appli software automatically opens communication after being downloaded. You can set your terminal not to automatically communicate by using "Network set" in "Software setting".
- If you download an i-appli that uses the terminal data (the stored information or mobile phone/FOMA card (UIM) manufacture numbers) or an i-appli DX, a message appears notifying that the i-appli uses the terminal data. When you select "YES", your terminal information is sent to the IP (information service provider) via the internet and may be disclosed to the third party as a result.
- Depending on the data storage capacity of the IC card, you may not be able to download Osaifu-Keitai i-appli even when there is capacity available in the software storage area. Follow the confirmation screen, delete the displayed software and download again. You may not be able to delete the software depending on the software type you are going to download. Depending on the software, the software itself is deleted after the software is launched and data in the IC card is deleted.
- When 2in1 is set to B mode, the confirmation screen for launching a software may not appear after download, depending on the i-appli.
- To play an i-appli application which you need to tilt or shake, we recommend to use the FOMA terminal in full bright location. When the Original lock is active for Camera, release the lock before use.



■ Warning

- When you play the i-appli with "Inclining" and "Shake", hold the FOMA terminal firmly and do not shake too much considering safety of the surroundings. It hits the person and others because of the shake too much, and there is a possibility of causing a serious accident and damage.

Viewing i-αpli information during downloading

<Disp. Software info>

You can specify whether the software information is displayed for checking when downloading software.

1 "Settings" ▶ "i-αpli settings" ▶ "Disp. Software info" ▶ "Display"

- Not to check information
- ▶ "Not display"

Launching an i-αpli

Launching an i-αpli

1 (1 second or longer)

The "Software list" screen appears at the bottom of the screen.

- Search the i-αpli by i-mode
- ▶ "Search by i-mode" ▶ "YES"



Software list
Function menu▶p.198

Illustrations Dick Bruna
© copyright Mercis bv,
1953-2008
www.miffy.com

2 Select software

When you launch the software, " " or " " appears at the bottom of the screen.

Pre-installed software → p.200

Quitting an i-αpli

1 (1 second or longer) or ▶ "YES"

NOTE

- If you receive a voice or videophone call while launching a software, the software is paused. The software screen reappears when the call ends. However, the setting of "V-phone while packet" is applied during i-αpli communication.
- The i-αpli mail used with mail-connected i-αpli may not be displayed correctly.
- You can save the data you use (i-αpli data (microSD)) to the microSD memory card depending on the software.

NOTE

- Some i-αpli allows you to use the Phone To/AV Phone To or Web To function from the i-αpli. However, you cannot use these functions from the i-αpli standby screen. (You can use these functions when an i-αpli is activated.)
- Images used in i-αpli* and data you enter may be automatically sent to the server via the Internet.
*: Images used in i-αpli refers to images shot by the camera activated by a camera-linked i-αpli, images retrieved using an i-αpli Infrared data exchange or iC communication function, images downloaded by an i-αpli from an i-mode site or website or images loaded by an i-αpli from Data box.
- If the memory used to store trace information is full, the oldest entry is overwritten.
- Some i-αpli software may not make sounds.
- If the camera is activated from an i-αpli, the shot images are saved and used as part of the i-αpli.
- You can use an i-αpli to activate the Bar code reader and read JAN codes and QR codes. The read data are used by the software.
- With some software applications, the IP (information service provider) may access software stored on your FOMA terminal and directly disable the use of the software. In this case, you can no longer launch, upgrade or set the software as the standby screen. You can only delete the software or view the software information. To use the software again, you have to contact the IP and have them send an instruction to re-enable the software.
- With some software applications, the IP (information service provider) may send data to software stored on your FOMA terminal.
- When an IP (information service provider) sends a disable or re-enable instruction or other data to software stored on your FOMA terminal, the " " icon flashes. No communication charges are applied in this case.
- When 2in1 is set to B mode or Dual mode, you may not be able to launch, operate or set an i-αpli depending on the i-αpli.
- You cannot launch an i-αpli:
 - While an image is edited
 - While an i-motion or Chaku-Uta Full® is downloaded
- Some software is displayed on fullscreen, and the remaining battery icon or the signal strength icon may not be displayed.

Software setting.....Specifies the software settings.
Press  (Finish) to finish the setting operation.

Stand-by display → p.208

Network set.....Sets whether to communicate when an i-appli is launched. When "Check every start" is selected, you can select whether to communicate every time you launch an i-appli.

Stand-by net.....Sets whether the i-appli set as standby screen communicates.

Icon info.....Specifies whether the use of unread mail or message icon information is permitted when an i-appli is running.

Change mld/img.....Specifies whether to allow the ring tones for phone calls, mail and messages, images such as those used in the standby screen or when mail is sent or received or menu icon to be changed when an i-appli DX is running. When "Check every change" is set, you can select whether to change the ring tone or image every time an i-appli attempt to change such item automatically.

See P.book/hist.....Sets whether to allow the application to look up the phonebook, the latest Dialed and Received calls records, and the latest unread mail automatically when an i-appli DX is launched.

Power saver.....Sets whether to set the Power saver during i-appli is activated. Sets whether to pause the i-appli when the FOMA terminal is folded during i-appli is activated, or sets whether to pause the i-appli following the setting of "Backlight" in "Settings" when the FOMA terminal is not operated during i-appli is activated.

Software info → p.199

Upgrade → p.209

List setting.....Selects the list display style for i-appli from "Title image+icon/Icon/Software name".

Set i-appli To → p.207

Auto-start time → p.207

Add shortcut icon → p.100

Move to microSD.....Moves one i-appli or i-appli data in the FOMA terminal to the microSD memory card.

"Displaying the i-appli data in the microSD memory card" → p.209

Memory info.....Displays the amount of the stored i-appli.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" → p.39

NOTE

<Software setting (Network set)>

- If you specify "OFF", note that you may not be able to receive timely information.

<Software setting (Icon info)>

- If you set this function to "ON", as information about whether there are unread messages and mail, icons for in/out of service area, the battery level and the status of manner mode are sent to the IP (information service provider) via the Internet in the same way as your mobile phone/FOMA card (UIM) manufacturer numbers, there is a possibility that the information may be disclosed to the third party.
- If this function is set to "OFF", some i-appli that require the icon information may not work.

<Software setting (Power saver)>

- When "After folded" is set to "ON", the software is paused when the FOMA terminal is folded. Note that you may not be able to receive timely information.
- When "Timer" is set to "ON", the software is paused following the setting of "Backlight" in "Settings" when FOMA terminal is not operated during i-appli is activated. Note that you may not be able to receive timely information.

<Move to microSD>

- When i-appli on the FOMA terminal (Phone) is moved to the microSD memory card, the data of i-appli on the FOMA terminal (Phone) is also moved to the microSD memory card.
- Mail-connected i-appli folder in the FOMA terminal is not deleted even if the mail-connected i-appli is moved to the microSD memory card.
- Use "Software info" (p.199) to check whether the i-appli can be saved to the microSD memory card.

<Delete>

- When deleting a mail-connected i-appli, a message appears asking if you also delete the corresponding dedicated folder for the mail-connected i-appli. Select "NO" to delete only the software and select "YES" to delete the folder at the same time. However, even when you select "YES", you cannot delete the folder dedicated for the mail-connected i-appli if it is being used, if the folder is locked, or if the folder contains a protected mail.
- For some Osaifu-Keitai i-appli, the software itself is deleted after the data in the IC card is deleted. After selecting "Delete this" for this kind of software, launch and delete the data in the IC card following the confirmation screen, then delete the software itself. Since "Delete selected" or "Delete all" cannot launch the software, delete the data before deleting the software.
- Some Osaifu-Keitai i-appli cannot be deleted.
- When 2in1 is in B mode, some i-appli cannot be deleted.

Using Background i-appli on the sub display

<Background i-appli>

Turn on/off Background i-appli on the sub display.

- 1 ► “Settings” ► “i-appli settings” ► “Background i-appli” ► “ON” or “OFF”

Adjusting the volume of i-appli

<i-appli vol.>

You can adjust the volume of i-appli.

- 1 ► “Settings” ► “i-appli settings” ► “i-appli vol.”

2 Adjust the volume

NOTE

- You can set the volume depending on the software. However, when “i-appli vol.” is set to “Silent”, there is no sound regardless of the volume setting of the software.
- When Manner mode is set, the volume of the i-appli is set to the Manner mode setting.

Checking the information of i-appli

- 1 **Software list screen (p.197)** ► (FUNC) ► “Software info” ► Check the software information

NOTE

- The software name displayed by this function cannot be changed.
- On the software list screen, software types and settings can be checked by the following icons.

: i-appli DX

: Mail-connected i-appli

: “Auto start time” is set

: “Set i-appli stand-by” is set

: “Auto start time” and “Set i-appli stand-by” are set

: “i-appli To setting” can be set

: “Set i-appli stand-by” can be set

: “i-appli To setting” and “Set i-appli stand-by” can be set

: Software downloaded from an SSL-compatible page

: Software whose data can be saved to the microSD memory card → p.210

: Partially downloaded i-appli

: Osaifu-Keitai i-appli → p.212

NOTE


- When you select partly downloaded i-appli () or i-appli only with management information () on the “Software list” screen (p.197) or “IC card content” screen (p.213), you can download the rest of the data.

Checking the security error history

When an i-appli or i-appli DX attempts to launch a function that is not permitted to run, a security error occurs and the details of the error are recorded in the security error history.

- 1 ► “i-appli” ► “i-appli action info” ► “Security error history”

The “Security error history” screen appears.

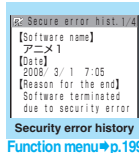

2 Check the details of the security errors

Security error history screen (p.199)

Copy info Copies the security error details.

Delete info Deletes the security error details.

Launching software from another software

You can launch a software from the currently active software. Downloading software that launches the specified software enables you to launch that software without returning to the software list screen.

- If the software to be launched is not specified, specify the software.
- If the software to be launched is specified but is not stored on the FOMA terminal, you must download the software beforehand.

1 Select an item for launching software

Pre-installed Software

9 applications are pre-installed at the time of purchase.

- Note that looking at the display for extended periods of time may cause eye strain.

デコ絵つくーる™ (deco-e maker)

Clip text, face, etc. out of pictures taken with Camera and edit them to use for Deco-mail.

1 Software list screen (p.197) ▶ “デコ絵つくーる” (deco-e maker)

■ To exit

- ▶ (終了 (Exit)) ▶ “はい” (YES)

■ To mute

- ▶ “サウンド：オン” (Sound: On)

■ To see how to play

- ▶ “ヘルプ” (Help)



はじめてのおつかい for SO

Shopping game to buy requested things. Cooperate with fellows to enjoy shopping.

1 Software list screen (p.197) ▶ “はじめてのおつかい”

■ To exit

- ▶ (終了 (Exit))

■ To mute

- ▶ (静音)

■ To see how to play

- ▶ “ヘルプ” (Help)



Illustrations Dick Bruna
© copyright Mercis bv,
1953-2008
www.miffy.com

Map i-appli

“地図アプリ” (Map i-appli) is i-appli that you can get the confirmation at current location with Open i-area, get a map you specify or find the route.

- To use this software, it is recommended that you have subscribed to the Pake-Houdai/Pake-Houdai full.
- To restore this software after deletion, download from “i エリアー周辺情報” (i-area -Surrounding area information-).
- Since this software is i-appli using the mail function, it is not available if 2in1 is in the B mode.
- We are not liable for accuracy and immediacy of the map and route information.
- During driving, a person other than the driver must operate the software.

Basic service and additional service

This software provides the basic service and additional service.

Basic service: Service provided by DoCoMo free of charge

Additional service: Pay service provided by ZENRIN DataCom

The additional services other than traffic information are available free of charge for 90 days from the first launch of this software.

To use additional services thereafter, membership registration (charged) for “ゼンリン 地図+ナビ” (ZENRIN Map + Navi) provided by ZENRIN DataCom is necessary.

If you register membership during the use of this software, you need not download the software again. This software can be used as it is.

Menu	Description	Up to 90 days	91st day and later
このあたりの場所 (Positioning)	Use Open i-area to view the current location or mail the map.	Free	Free
周辺を調べる (Search around)	- Check information including shops (ID-accepted shop as well) or facilities around the current or specified location, and acquire coupons from gourmet information. - Check information of peripheral weather or parking lot.	Free	Free
地図を見る (View Map)	Enter a free word, genre, address, or telephone number to view the map.	Free	Free
	- Check the map of the location stored in this software or the server or the location you previously searched. - Saving location into the server shares its information in PC.	Free	Charged
ルートを探す (Find the route)	- Search the route for the destination by a means of all transportation including vehicle, walk and car. - Easy route search for the home you marked.	Free	Charged
乗換案内 (Transfer guide)	- Check transfer and timetable of the train. - Check the train route by map and set the alarm before departure.	Free	Charged
設定／直感★ (Setting/intuition ★)	Tilt the FOMA terminal to move the map.	Free	Free
	Check the settings and usage of map view.	Free	Free

● Screen and operation for the TOP menu of “Map i-appli”

- The screens shown here are for reference only and may look different from the actual screens.
- Upon the initial activation, the terms of service and precautions on use are displayed.

■ Top screen

Menu list appears on the front top screen. Closing menu returns to the last map accessed.



Top menu

■ If 91 days elapse without membership registration

Message appears to notify limitation of the available function and make inquiry for subscription when using this software first time on 91st day or later.

The similar messages are displayed when the additional service menu is selected.

- * Subscribe on the website of “ゼンリン 地図+ナビ” (ZENRIN Map+Navi) using this software when you register as a member.



● Map view and operations

■ Map view



©ZENRIN DataCom CO., LTD. 2008

■ Key operations in map view

Key operation	Action
(メニュー (Menu))	Displays menu screen.
	Displays easy access menu
(拡大 (Zoom))	A scale slide bar appears. Press and to zoom in and out, respectively. Press (閉じる) to set the scale and clear up the slide bar.
	Moves on the map in all directions.
	Closes menu screen or returns to the location accessed last.
	Rotates the map counterclockwise.
	Sets the north of the map to the north.
	Rotates the map clockwise.

■ Key operations in the easy access menu

Key operation	Action
(周辺を調べる (Search around))	Checks information on the focused area of the map shown and the surrounding area as well.
(ここへのルート (Here))	Searches for a route from a specified starting location to the center of the displayed map.
(ここを送信 (Send here))	Fires off the URL of the displayed map.
(ここを登録 (Save here))	Saves location information on the center of the map into this software or the server. Saving location into the server enables you to share its information in PC as well.
(地図へ (To map))	Exits the easy access menu.
(パノラマ (Panorama))	Displays the point that allows you to browse the panorama image. When the point is selected, you can view the panorama image.
(ビルテナント (Tenant))	Displays buildings in the area and allows you to check the tenants by clicking.

● Screen and operation for the search result for surrounding area information

- The screens shown here are for reference only and may look different from the actual screens.
- The screen and operation are provided when the search result is displayed with the map but not provided as a result of selection from the list.

■ Search result screen for surrounding area information



■ Key operation in the search result screen for surrounding area information

- If the cursor does not hit the shop, etc. as the search result, the easy access menu appears.

Key operation	Action
	Checks detail information of the search result.
	Moves the map in four directions.
(5)	Re-searches with the displayed map as the center.
(4)	Checks the previous search result.
(6)	Checks the next search result.
(メニュー (Menu))	Displays menu screen.
(拡大縮小 (Zoom))	The scale slide bar appears. Press to display a wider range, or to display the detailed map. Press (閉じる) (close) to set the scale and clear up the slide bar.

● Finding the route

Set the start and destination to search for a route.
Displays the route for walk, public transport, and cars.

① Top Menu screen (p.201) ▶ “ルートを探す” (Find the route) ▶ “ルートを探す” (Find the route)

② Select “出発地” (Start) from following items:

このあたり (Here)……Positions and sets the approximate location by Open i-area.

フリーワード検索 (By keyword)……Searches by keyword.

地図上で指定 (From map)……Sets the starting location with map.

TEL / 〒検索 (By number/code)……Searches by phone number or zip code.

住所一覧から (From address list)……Selects an address.

ジャンルから (From genre).....Selects a category.

履歴から (From history).....Selects from previously viewed maps.

登録地点から (From marked point).....Sets from the location information stored in this software or the server.

自宅 (Home).....Sets location information on your home.

出発地の確認 (Check).....Checks information on the starting location.

3 Select “目的地” (Destination) as in Step 2

4 Select “時間指定” (Time specified) from the following item:

現時刻で指定 (Current time).....Checks the route using the current time.

出発時刻指定 (Start time).....Sets the start time to check the route.

到着時刻指定 (Arrival time).....Sets the arrival time to check the route.

終電を利用 (Last train).....Checks the route with the last train of the day.

5 Select “条件設定” (Condition) from the following item▶“上記で設定” (Set above)▶“OK”

乗換条件 (Transfer).....Selects transfer selection criteria from “早い／安い／楽々” (Fast/Cheap/Easy).

徒歩ルート (Walking route).....Selects route selection criteria from “おまかせ／屋根多い／階段少ない” (Recommended/Many roofs/Less up-and-down).

特急利用 (Express).....Selects whether to use an express if the total distance of the route is 100km or shorter.

通常利用車種 (Vehicle type).....Selects the vehicle type to be used.

6 Select the route level

Using a variety of route search “ で検索” (Search by) and a car navigation “ のみで検索” (Search only by car), you can search and find the route. As a search result, a route (up to 6 routes) are displayed. If there is another transfer route, the characteristics of the route are indicated.

Route Level	Meaning
早 (Fast)	Takes a short time
安 (Cheap)	Low cost
楽 (Easy)	Fewer transfer times
オススメ (Recommended)	Meets the above three conditions
有料 (Toll)	Uses toll road (car)
一般 (Open)	Uses open road (car)

■ To register the route

▶“ルートを登録” (Register route)

7 Select the route▶“ルート確認” (Check the route)


■ To check the time table

▶“時刻表” (Time table)

● Screen and operation for Route (car) view

● The screens shown here are for reference only and may look different from the actual screens.

■ Route (car) view

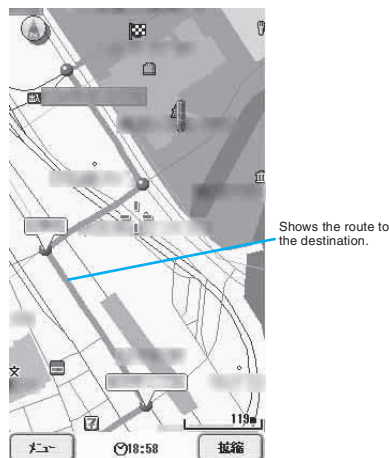

©ZENRIN DataCom CO.,LTD. 2008

■ Key operations in route view

Key operation	Action
(メニュー (Menu))	Exits route view and shows the top menu screen.
	Shows easy access menu
(拡大縮小 (Zoom))	A scale slide bar appears. Press and to zoom in and out, respectively. Press (閉じる) (Close) to set the scale and clear up the slide bar.
	Moves on the map in all directions.
	Returns to the start point.
	Changes to the crossing mode.
	Rotates the map counterclockwise.
	Sets the north of the map to the north.
	Rotates the map clockwise.

■ Key operations in the easy access menu screen

Key operation	Action
(結果&設定 (Search result & Set))	Displays the route search result (time, cost, etc.) or sets route view.
(経由地を設定 (Set route information))	Searches for a route for the destination with up to 3 via points added.
(リルート (Re-search for route))	Re-searches for a route for the destination from the current position.
(1) (ルート消去 (Route clear))	Clears the route map displayed.
(2) (モード切替 (Mode change))	Changes to the crossing mode.

● Using settings/help

① TOP menu screen (p.201)▶Highlight “設定／直感★” (Setting/intuition)▶“設定・ヘルプ” (Setting/help)▶Select any item:

会員情報確認 (Membership information)……Checks your subscription state to “ゼンリン 地図+ナビ” (ZENRIN Map+Navi).

基本設定 (Basic settings)……Sets the options including the map view color over software.

ルート検索設定 (Route search settings)……Sets the options about route search

自宅設定 (Home)……Sets the home location.

履歴系クリア (Clear history)……Clears the history of the route search.

使い方の説明／よくある質問／利用規約 (Usage/FAQ/Terms of service)……Shows usage, FAQ and terms of service.

Gガイド番組表リモコン (G-GUIDE EPG Remote Control)

This is a useful monthly-charge-free application containing the program guide and AV remote control function. You can obtain digital, analog or BS digital TV program information easily anywhere at any time. You can check the program title, contents of program and start/end time, etc.

If you are interested in some program, you can set timer recording via the Internet to record the program on the DVD HD recorder (a DVD hard disk recorder compatible with the online timer recording function is required. To use this function, you need initial settings on this application).

You can also search for the program information with keywords such as TV program genre or your favorite personality. Moreover, the remote control is possible for TV/Video/DVD player (some models do not support this function).

- When you use this application for the first time, agree to the license agreement and set the default settings.
- Packet communication charges will apply.
- When using this software overseas, set “Set time” to the Japanese time.
- For details on Gガイド番組表リモコン (G-GUIDE EPG Remote Control), refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.



* The above is a screen image. The actual screen may look different. The displayed TV guide corresponds to the area where you live.

■ Online timer recording

If you have a DVD HD recorder compatible with the online timer recording, you can set timer recording from the program guide of this application via the Internet while you are away from your house. To use online timer recording, you need initial settings on this application.

● Initial settings

- ① Perform the Internet connection setting on the DVD HD recorder (refer to the manual supplied with the DVD HD recorder).

- ② Launch this application. When you select “リモート録画予約” (Online timer recording) on メニュー (Menu), instructions appear. Follow the instructions to perform initial settings.

● Timer recording

After initial settings completes, specify the program and select リモート録画予約 (Online timer recording) from the menu. You can connect to the DVD HD player set with this application and set the timer recording.

* If a timer recording is already set for the time you set, a message appears on the program guide.

- You are charged for the packet communication.

NOTE

- Not available when 2in1 is in B mode.
- NTT DoCoMo accepts no liability whatsoever regarding the information set on the FOMA terminal.

iD設定アプリ (iD setting application)

The electronic cash “iD” does not need to be charged, it is the credit service which enables you to pay or use a cashing service only by holding the Osaifu-Keitai. You can easily enjoy shopping without leaving signature. The cash service is also available according to the credit card company.



* The above is a screen image. The actual screen may look different.

- To use “iD”, besides a subscription to a company issuing iD-supported credit card, you also need iD application and Osaifu-Keitai for which settings for the card application provided by the card company are completed or a credit card that contains “iD”.
- To use “iD” with the Osaifu-Keitai, you have to agree with “ご利用上の注意” (Notes on using) after launching the iD application and make settings for the iD application, then download or launch the card application and make settings for the card application.
- The cost for using the card compatible with iD (such as annual fee) varies depending on the card company.
- A packet communication charge is applied for downloading the iD application and the card application.
- See the i-mode site of “iD” for information on “iD”.
 - i-mode site (Only in Japanese) : [iMenu](#)▶“メニュー/検索 (Menu/search)”▶“iD”




DCMXクレジットアプリ (DCMX credit application)

DCMX is the iD-compatible credit service provided by the NTT DoCoMo group. DCMX is categorized into DCMX mini that will offer a monthly credit line of 10,000 yen, and DCMX that offers the higher limit than DCMX mini while earning DoCoMo Point. You can easily apply for “DCMX mini” from this application and start the mobile credit service immediately.



* The above is a screen image. The actual screen may look different.

Function

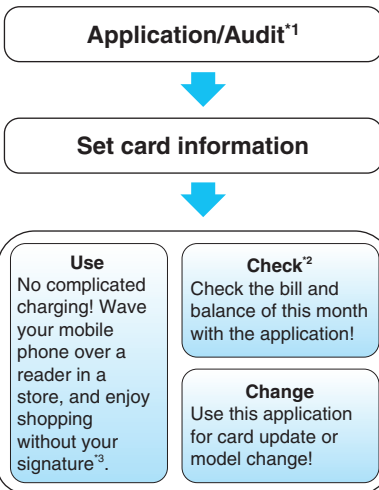

*1: A simple audit will be performed online at the time of application. Applications for other than DCMX mini will be connected to the application page on i-mode.

*2: The check function is only available for DCMX mini.

*3: Security code entry may be required.

- See the i-mode site of DCMX for details on the service contents or how to apply.

- i-mode site (Only in Japanese) : [iMenu](#)▶DCMX iD



NOTE

- When you launch this application for the first time, agree with “ご利用上の注意” (Notes on using the application).
- Packet communication charges are applied for settings or operations.

■ Notes on Osaifu-Keitai i-αppli

- NTT DoCoMo accepts no liability whatsoever regarding the information set on the IC card.

i アプリバンキング (i-αppli banking)

This i-αppli enables you to conveniently use mobile banking. Mobile banking is a service that you can check your bank balance or account activity, or you can transfer money whenever or wherever, by using a mobile phone. You can use Mobile banking for up to 2 banking facilities, only by entering the password you have set when launching the i-αppli.

- To use the mobile banking service, a bank account of the banking facility and application to the mobile banking service is required.



* The above is a screen image. The actual screen may look different.

- You are charged for the packet communication.
- For details on i-αppli banking, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- For information on i-αppli banking, see the i-mode site.
 - i-mode site (Only in Japanese) :
 i▶iMenu▶“メニュー／検索 (Menu/search)”▶モバイルバンキング▶i アプリバンキング



楽オク出品アプリ2 (Rakuten Auction application 2)

楽オク出品アプリ2 (Rakuten Auction application 2) is a useful application that you can easily sell goods at Rakuten Auction site. It provides a guidance display for new users who use the i-αppli for the first time. There are helpful functions such as shooting/editing a photo or saving the history, and you can bring goods to the auction in a shorter time than from a site.

- You need to agree to “利用規約” (Terms and conditions) before you use i-αppli for the first time.
- Packet communication is charged.
- For more information, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- Member subscription and auctioneer registration to Rakuten are required to sell goods on Rakuten Auction.
- For details, see i-mode site (Japanese).

i-mode site: i▶iMenu▶

楽オク▶オークション- (Rakuten Auction)



* The above is a screen image. The actual screen may look different.



FOMA通信環境確認アプリ (FOMA communication environment check application)

FOMA communication environment check application is the application that checks whether the FOMA terminal can use the FOMA High-speed area.

- To use the FOMA communication environment check application, agree with “ご利用上の注意” (Notes on using the application).



* The above is a screen image. The actual screen may look different.

NOTE

- The displayed items may be different or the description that the FOMA terminal is out of service area is displayed depending on the conditions (weather, the signal quality, or network traffic) even if it is the same place and time.
- When you use other functions during this application is activated, the checking may fail.

Launching i-appli Automatically

You can set the software to launch automatically at the specified date and time or interval of time.

Enabling automatic launching

<Auto-start set>

- You can set 3 automatic startup times for each application.

1 ► “i-appli” ► “Auto start set” ► “ON” or “OFF”

Setting the launch date/time

<Auto-start time>

You can specify the date and time to launch the software automatically.

- Software does not start up automatically in the following cases:
 - When the FOMA terminal is turned off
 - When another function is running
 - During calls
 - During communication
 - When the software updating schedule, an alarm, schedule or To Do list is set for the same time as automatic launching
- If the time to launch is set within 10 minutes after the same application is automatically launched for the last time

1 **Software list screen (p.197)** ► (FUNC) ► “Auto-start time” ► Use to select a checkbox (☐)

■ To enable the time interval set for the software

► Check the “Time interval set” checkbox

■ To set the launch date and time

► Check the “Start time set” checkbox

2 (Finish) ► Set the launch date and time

■ To set the launch date and time

► Select a date and time ► Enter the launch date and time

■ To set the automatic launch repetition

► Select the repeat setting item ► “Daily” or “Weekly”

If you select “Weekly”, use to select a checkbox (☐) and press (Finish).

3 (Finish)

Checking whether an i-appli launched automatically

You can check whether an i-appli automatically started up at the specified time.

- You can also check for the software whose launching from the IC card function failed.

1 ► “i-appli” ► “i-appli action info” ► “Auto-start info”

The screen displays information such as the software name, the automatic launch time and whether or not the software was launched. “Start ○” indicates that the software started up automatically, “Start ×” indicates that it did not start up automatically and “Start-” indicates that the time for automatic launch has not yet been reached.

NOTE

- If the software could not be launched automatically, the “” (Not run soft) shortcut icon appears on the standby screen. Select the icon to view the Auto-start info screen. Select the software to launch it.
Shortcut icons that provide information → p.101

Launching an i-appli from a Site or Mail

<i-appli To setting>

You can launch an i-appli from a function other than i-appli, such as an i-mode site or mail.

Enabling software launching with i-appli To

<Set i-appli To>

You can specify whether i-appli software can be launched from i-mode sites, mail, the Infrared data exchange function, Bar code reader, IC card function or ToruCa.

- This setting can be specified separately for each software application.

1 **Software list screen (p.197)** ► (FUNC) ► “Set i-appli To”

2 Use to select ☐ (checkbox) ► (Finish)

Launching i-appli from a site

When an i-appli software launch specification is displayed on an i-mode site, this setting allows the software to be launched from the site.

- This function cannot be used with some sites.

1 Sites screen (p.146) ▶ Select an item for launching the software ▶ “YES”

NOTE

- Unlike ordinary i-appli, some i-appli software is immediately launched from an i-mode site.
 - These i-appli are not stored on the FOMA terminal after downloading from i-mode sites,
 - Some i-appli software cannot be stored on the FOMA terminal.

Launching i-appli from a mail

When an i-appli software launch specification is pasted into a received i-mode mail, this setting allows the software to be launched from the i-mode mail.

1 Received mail detail screen (pp.180, 182) ▶ Select an item for launching the software ▶ “YES”

NOTE

- The i-appli launch specification cannot be quoted even when you reply with a quote or forward the i-mode mail. You cannot quote a launch specification of an i-appli by forwarding mail using the Infrared data exchange function or DoCoMo keitai datalink (p.326), etc.

Launching i-appli from other functions

You can launch an i-appli from various functions such as Infrared data exchange function, Bar code reader, IC card function or ToruCa.

■ Infrared data exchange function

When the FOMA terminal received the i-appli launching signal while Infrared data exchange, i-appli software launches.

■ Bar code reader

When the data scanned by the Bar code reader contains an i-appli software launch specification, you can launch the software from the Bar code reader.

■ IC card function

You can launch the software by holding the FeliCa mark on the FOMA terminal over the reader/writer unit.

■ ToruCa

When an i-appli software launch specification is pasted into an acquired ToruCa, you can launch the software from ToruCa.

NOTE

<IC card function>

- The software is not launched in the following cases:
 - When another function is running
 - During calls
 - When the software you want to launch cannot be found

Setting the i-appli Standby Screen

<Set i-appli stand-by>

You can set a selected i-appli software as the standby screen.

- Some software applications cannot be set as the standby screen.

1 Software list screen (p.197) ▶ (Set) ▶ “Stand-by display” ▶ “ON” ▶ (Finish)

NOTE

- Only 1 i-appli can be set as the i-appli standby screen.
- If software that communicates is set as the standby screen, it may not run correctly when problems such as poor signal quality occur.
- If you select “OFF” for “Stand-by net” in “Software setting”, note that you may not be able to receive timely information.
- If “Dial lock” or “Original lock” is set or 2in1 is set to B mode or Dual mode while the i-appli standby screen is displayed, the i-appli standby screen ends. If “Dial lock” or “Original lock” is released or 2in1 is set to A mode, the i-appli standby screen reappears.
- When you switch tasks and display the standby screen, the screen specified in “Stand-by display” of “Display setting” appears even though the i-appli standby screen is set.

Activating the i-appli standby screen

You can activate the software set as the i-appli standby screen.

1 On the i-appli standby screen ▶ On the i-appli standby screen ▶ or flashes at the bottom of the screen.

Deactivating the i-appli standby screen

<Deactivate i-appli standby screen>

Deactivating the i-appli standby screen while running an i-appli

- 1 While running an i-appli  (1 second or longer) or  Select any item:

Cancel.....Returns to the screen of running the i-appli standby screen.

End.....Returns to the i-appli standby screen.

Terminate.....Deactivates the setting of the i-appli standby screen.

Deactivating the i-appli standby screen while it is displayed


- 1  "Settings" ▶ "i-appli settings" ▶ "End stand-by display"
- 2 "Terminate" ▶ "Yes"
 - To cancel deactivating ▶ "End"

Checking the i-appli standby screen exit information

If an error occurs that causes the i-appli standby screen to be deactivated, you can check the recorded information on the name of the software in which the error occurred, the time of the error and the reason.

- 1  "i-appli" ▶ "i-appli action info" ▶ "End stand-by info"

The "End stand-by info" screen appears.

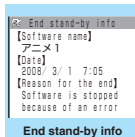

Function menu ▶ p.209

End stand-by info screen (p.209)

Copy info.....Copies the contents of the end stand-by info screen.

Delete info.....Deletes the contents of the end stand-by info screen.

NOTE

- No information is recorded if the i-appli standby screen ends normally (at normal exit).

Organizing i-appli

Upgrading i-appli

<Upgrade>

You can upgrade downloaded software when a new version is available on the site.

- 1 **Software list screen (p.197)**  (FUNC) ▶ "Upgrade" ▶ "YES"

NOTE

- You cannot upgrade mail-connected i-appli that rename mail folders in the following cases:
 - Mail box lock is set
 - Folder lock is set
 - Inbox or Outbox folder for the mail-connected i-appli to be upgraded is being used

Displaying the i-appli software in the microSD memory card

<microSD software>

You can display the i-appli data list which is stored on the microSD memory card.

- 1  "i-appli" ▶ "microSD" ▶ "microSD software"

The "microSD software list" screen appears.
Function menu → p.209

microSD software list screen (p.209)

Software info.....Displays the i-appli software data which is stored on the microSD memory card.

Move to phone.....Moves one i-appli or i-appli data in the microSD memory card to the FOMA terminal.

Memory info.....Displays the amount of the stored i-appli.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

NOTE

- You cannot launch an i-appli from the microSD software list.
- You may not be able to use the i-appli saved on the microSD memory card on the other FOMA terminal.

NOTE

- When i-αpli that is stored on the microSD memory card is moved to the FOMA terminal (Phone), the data of i-αpli that is stored on the microSD memory card is also moved to the FOMA terminal (Phone).
- Use "Software info" (p.199) to check whether the i-αpli can be moved to the FOMA terminal (Phone) from the microSD memory card.

Displaying the i-αpli data in the microSD memory card <microSD data>

You can display the folder name list of the i-αpli data (microSD) stored on the microSD memory card.

1 "i-αpli" ▶ "microSD" ▶ "microSD data"

The "microSD data list" screen appears.
Function menu → p.210

microSD data list screen (p.210)

Display info Displays the maker of the i-αpli, the available software and whether to use the microSD memory card.

Delete this • Delete selected • Delete all Select the deleting method. "About multiple-choice" → p.39

NOTE

- You may not be able to use the i-αpli data saved on the microSD memory card from the software on the other FOMA terminal.
- Use "Software info" (p.199) to check whether the i-αpli data will be saved to the microSD memory card from the software.

Osaifu-Keitai/ToruCa

What is Osaifu-Keitai?	212
What is iC Transfer Service?	212
Launching Osaifu-Keitai i-appli	212
What is ToruCa?	ToruCa 213
Acquiring ToruCa	Acquire ToruCa 214
Viewing ToruCa	ToruCa viewer 214
Making the ToruCa Settings	ToruCa settings 216
Setting Lamp for IC Card Function	IC card Illumination 216
Locking the IC Card Function	IC card lock setting 217

What is Osaifu-Keitai?

“Osaifu-Keitai” refers to a useful IC card function of an i-mode terminal (i-mode FeliCa) or to an i-mode terminal equipped with an IC card.

FeliCa is a type of contactless IC card technology that allows you to read/write data simply by holding the Osaifu-Keitai over a reader/writer unit.

You can pay using electronic cash by holding the Osaifu-Keitai over a reader/writer unit of a store, or use the Osaifu-Keitai as a plane ticket or point card. Osaifu-Keitai makes mobile phones useful more and more.

Osaifu-Keitai is more useful than existing FeliCa-compatible contactless IC card in that you can even transmit electronic cash into the IC card of your Osaifu-Keitai or check the account balance or transaction history.

* To use the Osaifu-Keitai-compatible service, you need to specify settings with i-αpli that supports IC card function (IC application) (Contact IP (Information service provider) for details).

* For details on how to use, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

• Due to malfunction of the Osaifu-Keitai, data on the IC card may be erased or altered (NTT DoCoMo cannot receive the Osaifu-Keitai with data remained when repairing, you will be asked to erase data by yourself). For supports such as reissue or restore of data or temporary keeping or transferring data, use the backup service of IP (Information service provider) except for transferring data using iC transfer service. It is depended on the service whether Backup service is available or compatible with iC transfer service, or usage condition (necessary procedure or charge), confirm them on the IP beforehand. Make sure to use the service which provides backup service for important data.

• By malfunction or model change, etc, or under no circumstances shall NTT DoCoMo be held liable for any loss of or damage to data stored on the IC card, or any loss concerned with Osaifu-Keitai service.

• If you lose or be stolen of your Osaifu-Keitai, immediately contact the provider of the Osaifu-Keitai service you use for measures. You can use Dial lock, Omakase Lock and IC card lock for this FOMA terminal. → pp.109, 217

What is iC Transfer Service?

iC transfer service^{*1} is a service that allows you to move all the IC card data^{*2} to a new Osaifu-Keitai^{*3} when replacing or repairing the Osaifu-Keitai. Once you move the IC card data, you can start using the Osaifu-Keitai services easily by downloading the Osaifu-Keitai i-αpli.

iC transfer service is available at a NTT DoCoMo shop or service counter.

For details, refer to “Mobile Phone User’s Guide [i-mode]”.

^{*1}: Service charge is required for the iC transfer service (except for some services). A packet communication charge is applied for downloading the Osaifu-Keitai i-αpli and for other settings.

^{*2}: Some of the Osaifu-Keitai services are not supported by iC transfer service. Data of the unsupported services will be deleted when using the iC transfer service. Use the backup service of the each Osaifu-Keitai service or delete the service data beforehand.

^{*3}: iC transfer service is available only when the new Osaifu-Keitai supports iC transfer service.


Launching Osaifu-Keitai i-αpli

You can launch the Osaifu-Keitai i-αpli from the software list screen. You can use the Osaifu-Keitai i-αpli to read and write the data in the IC card to use useful functions such as charging electronic money or ticket, or browsing the balance and transaction history on the FOMA terminal.

- Take great care not to disclose your security code and passwords of each service to others.
- The reading/writing of the data from the software to the IC card is interrupted in the following cases. In this case, the read/written data is discarded. The operation after the call varies depending on the service.
 - If you receive a call while launching i-αpli
 - If the battery fails
- When you launch the Osaifu-Keitai i-αpli for the first time or when downloading the Osaifu-Keitai i-αpli, a message “FOMA カード情報とICカードの対応付けを行います” (Matches the FOMA card information and the IC card) appears. After this, you cannot use the IC card function unless the matched FOMA card (UIM) is inserted. If you use another FOMA card (UIM), you cannot use the IC card functions unless you insert the matched FOMA card (UIM) and delete all the Osaifu-Keitai i-αpli first.

1 MENU ▶ “Osaifu-Keitai” ▶ “IC card content”

The “IC card content” screen appears.

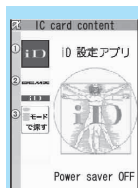

Function menu▶p.198

2 Select the Osaifu-Keitai i-αppli

You can also launch the Osaifu-Keitai i-αppli from the “Software list” screen (p.197).

NOTE

- When 2in1 is set to B mode, you cannot launch an i-αppli which uses the mail function.


Using the Osaifu-Keitai

By holding the FeliCa mark “” on the FOMA terminal over the reader/writer unit, you can pay with the electronic cash or use the FOMA terminal as a ticket. These functions can be used without launching the software.

- Though you cannot launch the Osaifu-Keitai i-αppli during a call, you can use the Osaifu-Keitai by holding the FeliCa mark over the reader/writer unit.

1 Hold the FeliCa mark “” over the reader/writer unit to use the service you want

The incoming call lamp flashes following the “IC card Illumination” setting when you use Osaifu-Keitai.

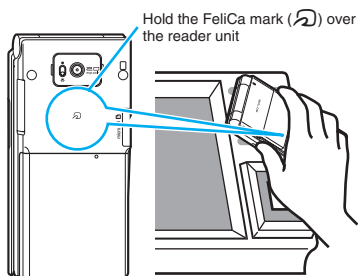

NOTE

- You can use the IC card function by holding the FeliCa mark over the reader/writer unit even when the FOMA terminal is turned off or the battery is low. (You cannot launch the Osaifu-Keitai i-αppli.) However, you may not be able to use this function when the battery pack is not attached, the battery pack is attached but not used for a long period of time, or when the FOMA terminal is left uncharged after the battery alarm sounds, so be sure to charge the battery pack.
- Do not shock the FOMA terminal when holding the FeliCa mark over a reader/writer unit.
- If the FeliCa mark is not recognized, hold the FOMA terminal close to the reader/writer section of the unit, move the FOMA terminal back and forth and around to be parallel to the reader/writer unit.
- The Osaifu-Keitai i-αppli may be launched when you hold the FeliCa mark over the reader/writer unit.

What is ToruCa?


<ToruCa>

ToruCa is the electronic card that can be acquired via Osaifu-Keitai, which can be used as an flyer, restaurant card, coupon, etc.



ToruCa can be acquired via a reader/writer unit or websites, and can be easily exchanged via mail, Infrared data exchange or microSD memory card.

- The acquired ToruCa is stored in “ToruCa” of “Osaifu-Keitai” menu.
- This function is available with ToruCa-compatible models. For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.


ToruCa usage flow

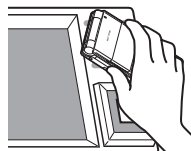

Hold Osaifu-Keitai over the reader unit to acquire ToruCa

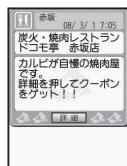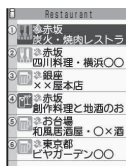


ToruCa

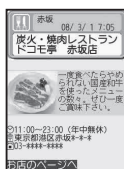


ToruCa (detail)

Select ToruCa from the list. Pressing the “詳細” (Detail) button displays the detailed information.

 How to acquire ToruCa



External memory (microSD memory card)

 

Mail
Infrared data exchange
iC communication



Exchanging ToruCa between i-mode terminals



Website

QR code



i-appli

NOTE

- Packet communication charge is applied when acquiring ToruCa or ToruCa (detail) from sites.
- Depending on settings of the IP (Information service provider), some ToruCa cannot be updated or redistributed using a mail or Infrared data exchange.

Acquiring ToruCa <Acquire ToruCa>

You can acquire ToruCa from the reader/writer unit.

- You can save up to 100* ToruCa on the ToruCa folder. You can save up to 1K bytes for 1 ToruCa. You can save up to 100K bytes for 1 ToruCa (detail).

* : You can save up to 20 ToruCa separately in the used ToruCa folder.

1 Hold the FeliCa mark “” on the FOMA terminal over the reader/writer unit

The incoming call lamp flashes following the “IC card Illumination” setting. ToruCa acquisition tone sounds, and the acquired ToruCa or ToruCa (detail) are displayed for about 15 seconds.

When holding the FOMA terminal over the reader/writer unit → p.213

NOTE

- Acquired ToruCa is not displayed when another function is activated.
- You cannot change the ToruCa acquisition tone. The volume is set to the same volume set at “Phone” of “Ring volume”. When set to “Step”, the tone sounds at the volume of “Level 4”.
- You cannot acquire ToruCa from the reader/writer unit when IC card lock or Omakase Lock is set.

Viewing ToruCa <ToruCa viewer>

1 “Osaifu-Keitai” “ToruCa”

The “ToruCa folder list” screen appears.




ToruCa folder list

Function menu▶p.215


2 Select a folder ▶ Select ToruCa

The “ToruCa display” screen appears.

● Guide to the ToruCa list screens/ToruCa display screen

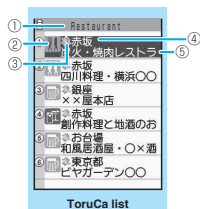

ToruCa list
Function menu▶p.215

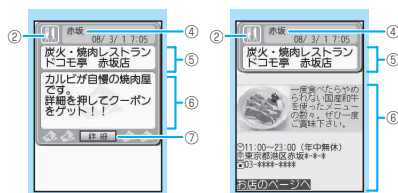

ToruCa display (ToruCa)
Function menu▶p.216

ToruCa display (ToruCa (detail))
Function menu▶p.216

- ① Folder title
- ② ToruCa category icon
- ③ ToruCa status



: Unread ToruCa



: Read ToruCa



: Expired ToruCa

- ④ Location, etc. (index)
- ⑤ ToruCa title
- ⑥ ToruCa contents (you can also use the Phone To/AV Phone To, Mail To, Web To or i-appli To* function)
- *: Available with ToruCa (detail) only
- ⑦ Acquire ToruCa (detail)

NOTE

- You may not be able to use the Phone To/AV Phone To, Mail To, Web To or i-appli To function depending on ToruCa.

FUNC

ToruCa folder list screen (p.214)

Add folder.....Enters a folder name to add a folder. You can add up to 20 folders on the FOMA terminal. For the folders on the FOMA terminal, you can enter up to 10 double-byte or 20 single-byte characters, and for the folder on the microSD memory card, you can enter up to 31 double-byte or 63 single-byte characters.

Edit folder name^{*1}.....Edits the folder name of the added folder.

Search all^{*2}.....Displays the corresponding ToruCa list by selecting the item (Index/Title) and entering the text to search.

Filter all^{*2}.....Displays only the ToruCa which meets the selected criteria.

Display all^{*2}.....Displays all the saved ToruCa after releasing the display arranged by Search all or Filter all function (except for data in the "microSD" or "Used ToruCa" folder).

IC trans. all^{*2}→p.260

Send all Ir data^{*2}→p.258

Delete folder^{*1}.....Deletes the folder.

No. of ToruCa^{*3}.....Displays the number of ToruCa stored on the FOMA terminal.

Delete all.....Deletes all the ToruCa stored on the FOMA terminal.

^{*1}: Unavailable with the folder other than the user-created folders.

^{*2}: Unavailable with the folder in the "microSD" folder.

^{*3}: Except for the data in the "microSD" and "Used ToruCa" folders.

FUNC

ToruCa list screen (p.215)

Move^{*1}.....Selects from "Move this/Move selected/Move all" and moves ToruCa to the other folder you select.

"About multiple-choice"→p.39

Copy^{*1}.....Selects from "Copy this/Copy selected/Copy all" and copies the ToruCa to the other folder you selected. "About multiple-choice"→p.39

Search^{*2}.....Displays the corresponding ToruCa list by selecting the item (Index/Title) and entering the text to search.

Display all in folder^{*2}.....Releases the search, sort or filter result display, and all ToruCa in the folder appear.

- When "Search all", "Filter all" or "Display all" is performed on the ToruCa folder list screen, this item is displays as "Display all".

Sort^{*2}.....Sorts ToruCa in a selected criteria.

Filter^{*2}.....Displays only the ToruCa which meets the selected criteria.

Compose message^{*1*3}.....Composes an i-mode mail with ToruCa attached.

iC transmission^{*2}→p.259

Send Ir data^{*2}→p.258

Copy to microSD^{*2}→p.248

Copy to phone^{*4}→p.249

No. of ToruCa^{*1}.....Displays the number of ToruCa saved in the FOMA terminal.

ToruCa info^{*1}.....Displays the ToruCa information.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice"→p.39

*1: Unavailable in the "used ToruCa" folder.

*2: Unavailable in the "microSD" and "Used ToruCa" folders.

*3: Unavailable when 2in1 is in B mode.

*4: Available only for ToruCa stored on the microSD memory card.

FUNC ToruCa display screen (p.214)

Move.....Selects the destination folder to move a ToruCa to the folder.

Copy.....Selects the destination folder to copy a ToruCa to the folder.

Compose message^{*1}.....Composes an i-mode mail with ToruCa attached.

iC transmission^{*2}→p.259

Send Ir data^{*2}→p.258

Copy to microSD^{*2}→p.248

Copy to phone^{*3}→p.249

Update^{*2*4}.....Updates ToruCa (detail) information.

Save image^{*2*4}.....Saves the ToruCa (detail) image. Selects the setting from "Normal image/Background image".

Add to phonebook^{*2}.....Stores the phone number or mail address displayed on ToruCa.→p.76

Replay^{*2*4}.....Plays the Flash movie or animation of ToruCa (detail) again from the beginning.

Delete.....Deletes 1 ToruCa.

*1: Unavailable when 2in1 is in B mode.

*2: Unavailable in the "microSD" folder.

*3: Available only for ToruCa stored on the microSD memory card.

*4: Available only when ToruCa (detail) stored on the FOMA terminal is displayed.

NOTE

- You may not be able to copy ToruCa, perform attaching ToruCa to mail, iC transmission, Send Ir data, copying to the microSD memory card or updating depending on ToruCa.

Making the ToruCa Settings

<ToruCa settings>

1 **“Osaifu-Keitai”▶“Setting”▶“ToruCa settings”▶Select any item:**

Receive from R/W.....Sets whether to acquire (Accept) ToruCa or not (Reject) when holding the FeliCa mark over a reader/writer unit.

When set to "Accept", set whether to check if the acquired ToruCa is duplicated with those stored on the FOMA terminal (except for "Used ToruCa" folder and expired ToruCa).

Auto reading setting.....Sets whether to automatically read the available ToruCa when holding the FOMA terminal over the reader/writer unit to use ToruCa.

When set to "ON", an available ToruCa on the FOMA terminal (except for "Used ToruCa" folder and expired ToruCa) is recognized automatically and moved to "Used ToruCa" folder.

Scroll.....Selects the number of scrolling lines in a screen from "1 line/3 lines/5 lines".

NOTE

<Receive from R/W>

- When the Repetition check is set to "Yes", you cannot acquire the same ToruCa. If you want to acquire the same ToruCa, set to "No". The default setting is "Yes".

<Auto reading setting>

- If you hold the FOMA terminal over the reader/writer when set to "OFF", a confirmation message about using the auto reading function or a message that the auto reading is not available may appear.

Setting Lamp for IC Card Function

<IC card illumination>

Turn on/off the communication lamp for IC card function.

1 **“Osaifu-Keitai”▶“Setting”▶“IC card illumination”▶“ON” or “OFF”**

Locking the IC Card Function

<IC card lock setting>

You can lock the IC card function to prevent others from using the IC card functions without your consent.

- IC card lock is not released even when the power is turned off.


1 On the standby screen (1 second or longer)

IC card lock is set and " " appears.

■ To release the setting

▶  (1 second or longer)

▶ Enter your security code

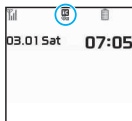

NOTE

- When you remove the battery pack, IC card lock is set automatically. In this case, attaching the battery pack automatically release IC card lock.
- IC card lock is not released even when the power is turned off because the battery runs out when IC card lock is set.
- You may not be able to download, version upgrade or uninstall some Osaifu-Keitai i-appli when IC card lock is set.

Locking the IC card function when the power is turned off

<IC lock (power-off)>

You can lock the IC card function to disable the Osaifu-Keitai when the power is turned off.

1 ▶ "Osaifu-Keitai" ▶ "IC card lock setting" ▶ Enter your security code ▶ "IC lock (power-off)" ▶ Select any item:

Maintain Keeps the same IC card lock setting as before turning off the power.

IC card lock ON The IC card function is locked regardless of the IC card lock setting.

Full Browser

Displaying Website Designed for PC	Full Browser	220
Setting the Full Browser.....	Full Browser settings	223
Cookie.....		223
Referer.....		224

Home URL, bookmark and other data registered in Full Browser are not available for i-mode.
Furthermore, the settings performed in Full Browser are invalid for i-mode.

Displaying Website Designed for PC

<Full Browser>

You can enjoy viewing websites designed for PC with the Full Browser function. Some websites incompatible with i-mode can be displayed correctly.

- Some websites may not be displayed or be displayed incorrectly.
- Note that the communication charge can become expensive if large volumes of data is acquired by viewing websites containing many image data or downloading files. For details on packet communication fee, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can view a website composed of frames*1. You can also select a frame to display it. → p.222
- You can view SSL/TLS*2-compliant websites in Full Browser.

*1: The "frame" used in this chapter refers to each of separated sections that constitute a website page and differs from that used for framed photography.

*2: SSL and TLS are authentication/encryption technology to protect your privacy in data transmissions. Data sent to or received from a SSL/TLS page is encrypted to prevent hackers from eavesdropping data, site spoofing or altering, thus making credit card transactions and the sending of personal information (e.g. address) safer.

Displaying a website

1 "Full Browser"

2 Select any item:

Home.....Displays a website with the URL registered as home URL.

Bookmark.....Displays the website registered as bookmark.

URL History → p.148

Enter URL.....Enters a URL to display the website.

Full Browser settings → p.223


■ When the confirmation message asking whether to use Full Browser appears

The default setting of "Access setting" (setting whether to use Full Browser) is "OFF". When "OFF" is set for "Access setting", the confirmation message asking whether to use Full Browser appears. Read the given notes carefully and perform the setting. When you select "Yes" on the confirmation message, "ON" is set for "Access setting" (p.223) and the setting will be retained.

NOTE

- You cannot save a page displayed in Full Browser as a screen memo.
- Websites displayed in Full Browser cannot be viewed in i-mode.
- The Full Browser does not support Flash movies.
- Be sure to insert the FOMA card (UIM) before setting "Access setting".
- When "Access setting" is set to "ON" and the FOMA card (UIM) is replaced, the "Access setting" changes to "OFF".

● Guide to the Full Browser screen

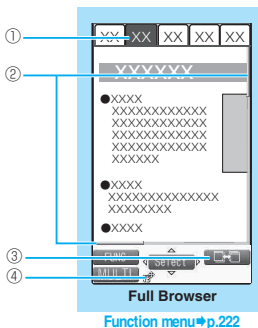

① Tab

- As many tabs and titles as the number of websites displayed simultaneously (if there is no title, the URL is displayed)
- "X" indicating that the selected frame (p.222) appears
- "X" is also displayed when another frame is in communication while the selected frame is displayed (p.222).


② Scroll bar

Current position in the displayed website (Not displayed for Mobile layout)

- ③  Change window icon
Pressing  () switches pages when multiple websites are open.
- ④  or 
Appears during connection to the Internet with Full Browser.
(Displays “” when Mobile layout mode is used)

● Layout

2 display mode are available (Original layout/Mobile layout).

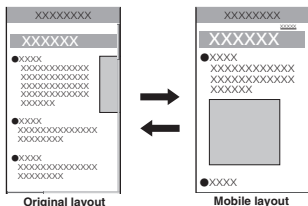

■ Original layout

Websites are displayed in the similar size to the display of 800 dots wide × 600 dots high on a PC. You can view the area not displayed on the screen by scrolling vertically and horizontally.

■ Mobile layout

Websites are displayed in the width of a FOMA terminal display. Only vertical scrolling is required for viewing websites.

■ Switching the display mode

The display mode switches between Original layout and Mobile layout each time you select “Change disp. mode” from the function menu.

- The default mode can be set in “Display mode setting” (p.223) of “Full Browser settings”.
- The display mode is retained when Full Browser is exit. The same display mode is applied when the Full Browser is activated next time.

Operations on the Full Browser screen

● Scrolling

Key	Description
	Scrolls to the direction that the key is pressed. Holding the key scrolls the screen continuously in the same direction.
 	Scrolls up or down by screens.
 (1 second or longer)  (1 second or longer)	Jumps to the top or bottom of the website.

● Useful keys for the Full Browser screen

Key	Description
	Zooms out (Makes the font size smaller in Mobile layout)
	Selecting a desired portion of the entire page, then displaying the designated part. (Not available for the landscape screen)
	Zooms in (Makes the font size bigger in Mobile layout)
	Goes back one page from the current page.
	Displays the Bookmark folder list screen.
	Jump forward to a page that has been stored in the FOMA terminal's cache.
	Displays the website in landscape screen or release the landscape screen (return to the portrait screen).
	Displays a description of an operation assigned to a key.

* : Available only in Original layout.

NOTE

- The function key is available in the landscape screen even though the function screen is not displayed.
- The landscape screen returns to the portrait screen after closing any window while multiple windows are active.

● Displaying a page composed of frames


You can view websites composed of frames that are designed for PC.

1 Full Browser screen (p.220) ▶ Display a website composed of frames



2 Select a frame

The selected frame is displayed.

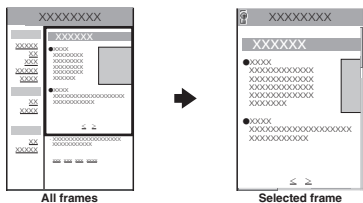

■ To return to the all frames screen

▶ [CLR]

NOTE

- For a website including several frames, all the frames may not be displayed (resulting in frames without characters or images).

● Uploading images

You can upload JPEG or GIF images stored in your FOMA terminal to websites depending on websites.

- Procedure for uploading images depends on websites. Follow the procedure described on the website you visit.

NOTE

- You cannot upload multiple images that exceed 80K bytes in total or data in which the selected image and other data exceed 100K bytes in total.
- Some websites may not support uploading function.
- You cannot upload images that are not allowed to be output to a device outside the FOMA terminal.

FUNC Full Browser screen (p.220)

Add bookmark.....Adds the website to the bookmark. Up to 100 entries can be stored.

Bookmark.....Opens the Bookmark folder list screen. Up to 12 Bookmark folders can be created, and the minimum folders are 3 (including Secret folders).

Save image.....Saves the image on the displayed page.

Enter URL.....Enters a URL to display the website.

URL History→ p.148

Change side mode⇔**Release side mode**^{*1}.....Displays the website in landscape screen or release the landscape screen (return to the portrait screen).

Zoom^{*2}.....Selects the screen size from "Small 2/Small 1/Standard/Large 1/Large 2/Zoom in position".

When you select the "Zoom in position", select a desired portion of the entire page.

Change font size^{*3}.....Selects the font size from "Small/Standard/Large/X-large".→ p.100

Window

Open new window....."Using multi window"
→ p.150

Close window.....Closes the displayed window.

Change window.....Switches windows when multiple websites are open.

All frames.....Returns to the all frames screen from the Selected frame screen

Change disp. mode.....Switches between "Original layout" and "Mobile layout".

Reload.....Refreshes the displayed website.

Compose message.....Pastes the URL of the displayed website to compose an i-mode message.

History back.....Goes back one page from the current page.

History forward.....Returns to the page that had been displayed before performing "History back".

Add shortcut→ p.100

Home

Set as home URL.....Registers the URL of the displayed website as the home URL. Only one URL can be stored.

Display home.....Displays a website registered as home URL.

Site info

Title.....Displays the title of the displayed website.

URL.....Displays the URL of the displayed website.

Certificate.....Displays the SSL/TLS certificate details when the displayed website supports SSL/TLS.

Browser settings

Replay.....Plays an animation in the displayed website from the beginning.

Set image disp. (default: ON).....Sets whether to display images. When "OFF" is set, " " appears instead of images.

Referer setting (default: Send) → p.224

Cookie settings (default: Valid) → p.224

Delete cookies → p.224

Change CHR code.....Changes the character code to redisplay a website that is not displayed correctly.

Help.....Displays a description of an operation assigned to a key.

*1: Unavailable in Mobile layout.

*2: Appears when Original layout mode is used.

*3: Appears when Mobile layout mode is used.

NOTE

<Save image>

- PNG and BMP images are automatically saved in an "OUDXXX" (XXX are numerals) folder under the "OTHER" folder of the microSD memory card.

Setting the Full Browser

<Full Browser settings>

1 "Full Browser" ▶ "Full Browser settings" ▶ Select any item:

Access setting (default: No).....Sets whether to use the Full Browser.

Home URL (default: Google (<http://www.google.co.jp>)).....Sets the home URL.

Scroll

Speed (default: High speed).....Selects the scrolling speed from "High speed/Low speed".

During scroll in focus (default: OFF).....Sets whether to highlight the linked pages while scrolling.

Set image disp. (default: ON).....Sets whether to display images. When "OFF" is set, " " appears instead of images.

Cookie settings (default: Valid) → p.224

Delete cookies → p.224

Referer setting (default: Send) → p.224

Display mode setting (default: Original layout)

Original layout (default: Standard).....Selects the display from "Small 2/Small 1/Standard/Large 1/Large 2".

Mobile layout (default: Standard).....Selects the font size from "Small/Standard/Large/X-large".

Script setting (default: Valid).....Sets whether to validate JavaScript* or not when displaying a page. Some websites may be displayed incorrectly unless "Script setting" is set to "Valid".

Window open guard (default: Invalid).....Sets whether to automatically open a new window by using JavaScript*. When set to "Valid", a window is not opened automatically.

Open tab setting (default: Open at the back side).....Sets whether to switch the screen (Open at the front) or not (Open at the back side) while the current screen is displayed.

Check settings.....Checks the Full Browser settings.

Reset.....Resets the settings specified in "Full Browser settings" to the default settings.

* : JavaScript is a programming language that can be included on web pages to make them more interactive.

Cookie

Using Cookie* enables you to effectively access the websites that you have seen once.

* : Cookie is the mechanism for temporarily saving the date you accessed the website, number of accesses and your other information. The information is sent from server, saved temporarily in your FOMA terminal and used for contents service.

If Cookie is sent, the information such as date you accessed the website and number of accesses is also sent to the site. Please note that NTT DoCoMo is not responsible for any reveal of your information to third parties because of sending Cookie. However, some websites and contents services require you to validate the Cookie settings for their correct display and use.

Setting Cookie

1 “Full Browser” ▶ “Full Browser settings” ▶ “Cookie settings” ▶ Select any item:

Valid Always validates Cookie.

No confirmation is made when Cookie is sent or received.

Invalid Always invalidates Cookie.

Notify (sending) Enables you to choose whether to send Cookie every time you connect to a page. No confirmation is made when Cookie is received and the information is saved in your FOMA terminal.

Notify (receiving) Enables you to choose whether to receive Cookie every time you connect to a page. No confirmation is made when Cookie is sent.

Notify (send/recv.) Enables you to choose whether to send or receive Cookie every time you connect to a page.

NOTE

- Cookies are deleted in the ascending order of no use when the number and size of Cookies exceed the maximum limit.
- Resetting the Full Browser settings deletes Cookies.

Deleting Cookie

You can delete the Cookies for Full Browser stored in your FOMA terminal.

1 “Full Browser” ▶ “Full Browser settings” ▶ “Delete Cookies” ▶ Enter your security code ▶ “YES”

All the Cookies for Full Browser stored in your FOMA terminal are deleted. (You cannot delete them separately.)

Referer

You can set whether to send Referer*.

* : Referer is information of source link. Sending Referer transfers information such as the page from which you access the site.
Please note that NTT DoCoMo is not responsible for any reveal of your information to third parties because of sending Referer.
However, you may not access the linked pages in some websites unless Referer is sent.

Setting Referer

1 “Full Browser” ▶ “Full Browser settings” ▶ “Referer setting” ▶ Select any item:

Send Sends Referer.

Unsend Does not send Referer.

Notify Confirms whether to send Referer.

Data Display/Edit/Management

Data Box		226
■ Mastering still images		
Displaying the Stored Images	My picture	227
Editing Images	Edit image	233
■ Mastering movies		
Playing Movies/i-motion	i-motion	234
Editing Movies	Edit i-motion	237
■ Mastering Chara-den		
What is Chara-den?		237
Saving Chara-den Character as Image or Movie	Rec. Chara-den	239
■ Mastering melodies		
Playing Melodies	Melody	240
■ Mastering Kisekai Tool		
Managing Kisekai Tool	Kisekai Tool	242
■ Mastering Memory Cards		
microSD Memory Card		243
Displaying the Data in the microSD Memory Card		247
Exchanging the Data Between the microSD Memory Card and FOMA Terminal		248
Moving the Copyrighted Data Among the microSD Memory Card and FOMA Terminal	Movable contents	250
Managing the microSD Memory Card		251
Setting the USB Mode	USB mode setting	251
Using the FOMA Terminal as a microSD Reader/Writer		252
Setting How to Print Images Stored on the microSD Memory Card	DPOF setting	252
■ Mastering various data		
Working with Folders and Files		253
Managing the Phonebook and SMS on the FOMA Card	UIM operation	254
■ Transferring data with Infrared data exchange/iC communication/cable connection		
Infrared Data Exchange/iC Communication		255
Forwarding Data with Infrared Data Exchange	Infrared data exchange	257
Forwarding Data with iC Communication	iC communication	259
Forwarding Data by Cable Connection	OBEX™ connection	260
Barring Phonebook Image Forwarding	Forwarding image	261
Using the Infrared Remote Control Function		261

Data Box

In Data Box, still images and movies shot using the FOMA terminal's camera or data downloaded from mails or websites are saved.

Folders

- Following items and folders are prepared and you can categorize the data into the folders depending on the file type.

Folder	Contents
My picture	
Inbox	You can select this folder to save still images shot using the FOMA terminal's camera, and images retrieved from websites, mails or Bar code reader. Images copied from the microSD memory card or forwarded by infrared data exchange are automatically saved to this folder.
Camera	You can select this folder to save same images as Inbox. Images shot with Chara-den shooting are automatically saved to this folder.
Decomail-picture ¹	Images for Deco-mail are pre-installed. You can select this folder to save same images as Inbox.
Decorate PI ²	Decorate PI are stored in the folder which is arranged by the categories. Decorate PI downloaded from website, attached to mails or copied from the microSD memory card are saved.
Pre-installed	Standby screens, wakeup images and animations are pre-installed.
Illumination ³	Animations displayed on the sub display are categorized into each effect timing. Sub display animations downloaded from sites, etc. are automatically stored.
Secret ⁴	Save the images you want to prevent others from viewing.
User-created folder ⁵	You can select this folder to save same images as Inbox.
Original animation	Animations created from continuous shooting and original animations are stored.

Folder		Contents
micro SD	Picture	Still images you shot, JPEG/GIF images copied from the FOMA terminal, JPEG/GIF images stored on the microSD memory card from a PC are saved.
	Decorate PI ²	Decorate PI copied from the FOMA terminal or stored on the microSD memory card from a PC are saved.
	Image Box	GIF animations and SWF Flash movie copied from the FOMA terminal, JPEG images, GIF animations stored and SWF Flash on the microSD memory card from a PC are saved.
Frame		Frames are pre-installed. Frames retrieved from websites are automatically saved to this folder.
Stamp		Marker stamps are pre-installed. Stamps retrieved from websites are automatically saved to this folder.
Music		
Playlist		Playlists created on the FOMA terminal are saved.
Inbox		You can select this folder to save music data.
WMA		Music data transferred from a PC to the microSD memory card is saved.
Movable contents		Music data moved from the FOMA terminal to the microSD memory card is saved.
Pre-installed		Music data is pre-installed.
User-created folder ⁵		You can select this folder to save same the music data as Inbox.
Music&Video Channel		
Delivery program		The stored programs appear.
User-created folder ⁵		You can select this folder to save the programs that is moved from the Delivery program.
i-motion		
Inbox		You can select this folder to save movies shot using the FOMA terminal's camera, movies and i-motion retrieved from websites or mails. Movies/i-motion copied from the microSD memory card or forwarded by infrared data exchange are automatically saved to this folder.
Camera		You can select this folder to save same movies and i-motion as Inbox. Movies shot with Chara-den shooting are automatically saved to this folder.

Folder		Contents
Secret ^{*4}		Save the movies and i-motion you want to prevent others from viewing.
User-created folder ^{*5}		You can select this folder to save same movies and i-motion as Inbox.
micro SD	SD Video ^{*6} Multimedia ^{*7}	Movies you shot, movies/i-motion copied from the FOMA terminal or movies stored on the microSD memory card from a PC are saved.
Movable contents		Movie/i-motion moved from the FOMA terminal to the microSD memory card is saved.
Playlist		This folder is used for playing a movie playlist. → p.236
Melody		
Inbox		You can select this folder to save melodies retrieved from websites, mails or Bar code reader. Melodies copied from the microSD memory card or forwarded by infrared data exchange are automatically saved to this folder.
Pre-installed		Melodies and sound effect are pre-installed.
User-created folder ^{*5}		You can select this folder to save same melodies as Inbox.
Voice announce		Voice recorded using the voice announce function is automatically saved to this folder.
microSD		Melodies copied from the FOMA terminal or stored on the microSD memory card from a PC are saved.
Playlist		This folder is used for playing a melody playlist. → p.242
Chara-den		
Chara-den is pre-installed. Chara-den retrieved from websites are automatically saved to this folder.		
Kisekae Tool		
Packages are pre-installed. Packages retrieved from websites are automatically saved to this folder.		

*1: Images set to functions cannot be saved.

*2: You can save only Decorate PI (20 dots wide × 20 dots high, non-file-restricted JPEG/GIF images, GIF animations) to this folder.

*3: Only can contain animations displayed on the sub display (30K bytes or smaller, 128 dots wide × 36 dots high or smaller, GIF animations specified to appear on the sub display).

*4: Displayed only in Secret or Secret data only mode.

*5: You can create up to 20 folders with "Add folder". Enter the folder name when using "Add folder". You can change the folder name afterwards using "Edit folder name".

*6: Movies/i-motion with video are saved.

*7: Movies/i-motion with sound only (including the music data of AAC format) can be stored.

Displaying the Stored Images


<My picture>

Still images shot using the FOMA terminal's camera or downloaded from websites can be displayed in My picture of the Data Box.

1 MENU ▶ "Data Box" ▶ "My picture"

The "Folder list" screen appears.

Contents of the My picture folder → p.226

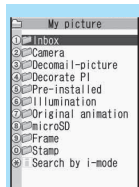

Folder list

Function menu ▶ p.253

2 Select a folder

The "Image list screen (Picture list)" appears.

Image list screen → p.228

■ Search the images by i-mode

▶ "Search by i-mode" ▶
"YES"

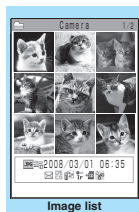


Image list

Function menu ▶ p.230

3 Select an image

The "My picture" screen appears.

Use [Left] to display the previous or next image.

■ To switch the screen mode

▶ [Ch] (Normal/Full)

In the Full screen mode, the oblong image is displayed just as it is, and rectangular image rotates to the right 90 degrees and displayed.

■ To zoom in an image

▶ [Zoom In] (Magnifying Glass)

The image is zoomed in or out by one step each time you press [Zoom In] (+) or [Zoom Out] (-).

Pressing [Actual] (Actual) displays the image in the actual size.

If the image does not fit in the screen, use [Scroll] to scroll the image.

To return to the original zoom, press [Back] (Back).



My picture

Function menu ▶ p.230

NOTE

- Following images cannot be displayed:
 - An image which exceeds 2M bytes
 - An image whose width or height exceeds 2,592 dots or total number of dots exceeds 2,592 × 1,944 dots
 - A progressive JPEG or GIF image whose total number of dots exceeds 854 × 480
- While displaying in the large size, you cannot change to the previous or next image by using  or display the function menu.
- When enlarging an image larger than 1,705 dots wide × 1,705 dots high, you may not be able to display the image in the actual size.
- Original animation, GIF-formatted animation or Flash movie cannot be displayed in the large size.
- Flash movies are played at the volume set in "Phone" in the "Ring volume" settings (if "Step" is set, Flash movies are played at the "Level 2" volume).

Guide to the Picture list and Title name list


● Setting the Image list display mode <Viewer settings>

1 "Settings" ▶ "Display" ▶ "Viewer settings" ▶ Select any item:

Picture (default).....Changes to the picture list.

Title.....Changes to the title list.

● Guide to the Picture list and Title name list

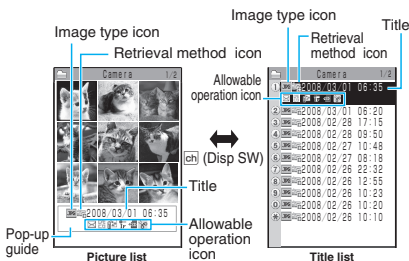

■ Picture

9 images stored on the FOMA terminal appear on the screen.

* Illumination and Original animations are always listed by title name.

■ Title list

The titles of the 11 images are listed and displayed on the screen.

■ Image type icon

Icon	Description
	JPEG format image
	GIF format image
	GIF (IFM) frame, marker stamp
	SWF Flash movie
	MP4 movie/i-motion
 (Blue note)	MP4 i-motion with sound effect
 (Orange note)	ASF i-motion
	MP4 i-motion with playback restriction
	MP4 format i-motion with sound effect and playback restriction
	Partially downloaded i-motion
 (Green note)	i-motion that can be moved to the FOMA terminal (Phone)
 (Blue note)	Sound effected i-motion that can be moved to the FOMA terminal (Phone)
	i-motion that is prohibited to move to the FOMA terminal (Phone)
	AFD Chara-den
	Image to which the FOMA card operational restriction applied

-   : Data that are file-restricted or not allowed to be attached to mails or output from the FOMA terminal
-   : i-motion with playback restriction (" " turns to " " when the playback count, period or limit expires)
-  : Movable only when the FOMA card being used was also used to save the i-motion
-  : Movable only when the model and FOMA card being used were also used to save the i-motion

Retrieval method icon

Icon	Description
No icon	Pre-installed data
	Data downloaded from site, mail, ToruCa or retrieved from i-appli
	Data you shot with camera
	Data acquired via Infrared data exchange, iC communication, the microSD memory card, Bar code reader or PC
	Downloaded frames and marker stamps
	Chara-den shots

Allowable operation icon

Icon	Description
	Movies/i-motion of QVGA size (can be displayed only on the i-motion folder)
	Movies/i-motion data of VGA size (can be displayed only on the i-motion folder)
	Can be attached to i-mode mail (2M bytes or smaller)
	Can be inserted into Deco-mail
	Can be set to the screen
	Can be specified as Ring tone
	Can be set as sub display animation
	Can be transferred via Infrared data exchange and iC communication
	Can be copied to the microSD memory card
	Can be edited
	i-motion data that can be moved to the microSD memory card
	Larger than 10M bytes (10M bytes is not included) (can be displayed only on the microSD folder)

: Movable only when the FOMA card being used was also used to save the i-motion

: Movable only when the model and FOMA card being used were also used to save the i-motion

File format

Folder	File format
My picture	
Inbox	JPEG, GIF, SWF
Camera	
Decomail-picture	
Decorate PI	JPEG, GIF
Pre-installed	JPEG, SWF
Illumination	GIF
Secret	JPEG, GIF, SWF
User-created folder	
Original animation	
microSD	JPEG, GIF, SWF
Frame	IFM
Stamp	
Music	
Playlist	—
Inbox	3GP
WMA	WMA
Movable contents	SB2
Pre-installed	3GP
User-created folder	
Music&Video Channel	
Delivery program	3GP, MP4
User-created folder	
i-motion	
Inbox	MP4
Camera	
Secret	
User-created folder	
microSD	MP4, ASF (ASF is for playback only)
Movable contents	SB1
Playlist	—
Melody	
Inbox	SMF, MFi
Pre-installed	MFi
User-created folder	SMF, MFi
Voice announce	—
microSD	SMF, MFi
Playlist	—
Chara-den	
—	AFD
Kisekae Tool	
—	UCM, UCP

■ Titles and file names

- Still images or movies you shot are automatically titled and named.

Title : yyyy/mm/dd hh:mm (Year/Month/Day Time)

File name : yyyyymmddhhmmxxx

—————Date and time*

(3-digit number is added in the xxx part for still image)

*: The time when the still image is saved or when the movie shooting is finished is used. Note that the time when the movie is saved is used if the "Auto save set" is set to "OFF".

- Original titles are assigned to downloaded i-motion and Chara-den characters.
- The file names and titles are the same for downloaded images.
- The title is displayed on the Image list screen of the FOMA terminal.
- The file name is displayed when the data is transmitted to PC.
- If the file name contains an inappropriate character, the file is automatically renamed to "imagexxx" or "moviexxx".

■ File restriction

This setting specifies whether you allow the receiver's FOMA terminal to redistribute (attach or forward) the image or movie you shot or melody when attaching it to a mail. When set to "File unrestricted", the receiver can redistribute the file freely. However, when set to "File restricted", the receiver cannot redistribute the file.

- You can change the file restriction setting after saving the image or movie. → pp.230, 235, 241



Image list screen (p.227) / My picture screen (p.227)

- The available functions vary depending on the folders, which means that the items listed in the function menu are different.

Edit image → p.233

Edit title¹.....Edits the title of the image.

You can enter up to 9 double-byte or 18 single-byte characters (you can enter up to 18 double-byte or 36 single-byte characters for the microSD memory card).

Display image¹.....Displays the image (displays the My picture screen).

Set as display.....Sets the image for screens as the standby screen.

"★" appears next to the selected item.

"Changing the Display" → p.94

"Setting the image sent during videophone calls" → p.71

Image info.....File name and File save date and time are displayed.

Illumination stg. → p.98

Compose message².....Composes an i-mode mail by selecting either attaching the still image or inserting it in the message. → p.231

IC transmission → p.259

Send Ir data • IrSS → p.258

Set image disp.³.....Sets the display size of images.

Normal (default).....Displays the image in the actual size.

Fit in display.....Displays the image fit in the screen regardless of the image size.

Normal ⇄ **Full screen**³.....In the Full screen mode, the oblong image is displayed just as it is, and rectangular image rotates to the right 90 degrees and displayed. In the Normal mode, the oblong image or the rectangular image is displayed just as it is.

Add shortcut → p.100

Copy to microSD → p.248

Add image to PB.....Saves the image to the phonebook. → p.77

Edit file name¹.....Edits the file name of the image. You can enter up to 36 single-byte alphanumeric characters and symbols (" " and " _ " only).

File restriction¹.....Specifies whether to allow the redistribution of the saved image. → p.230

Move¹.....Selects from "Move this/Move selected/Move all" and moves the image to the other folder you select. "About multiple-choice" → p.39

Memory info¹.....Displays the amount of image stored and available space (the amount of the data of the FOMA terminal does not contain the amount of the secret data).

Sort¹.....Sorts images in a selected criteria.

Title name ⇄ **Picture**¹.....Switches between Title name list and Picture list.

Composite image¹ → p.232

Retry³.....Replays the displayed animation from the beginning.

Store in Center¹ → p.231

Delete¹.....Selects the deleting method from "Delete this/Delete selected/Delete all". "About multiple-choice" → p.39

Delete this³.....Deletes one image.

Keep in secret ⇄ **Put out**¹....."Preventing Others from Viewing Data" → p.112

Copy to Phone⁵ → p.249

DPOF setting⁵ → p.252

Copy*1*5.....Copying the data to the different folder in the microSD memory card" → p.250

- *1: Available only with the Image list screen.
- *2: Not available when 2in1 is in B mode.
- *3: Available only with the My picture screen.
- *4: Available only in Secret or Secret data only mode.
- *5: Available only for images stored on the microSD memory card.

NOTE

<Edit title>

- You may not be able to edit the title when the space is not enough on the microSD memory card.
- You cannot edit the titles of the pre-installed images.

<Set as display>

- You can set the images in Inbox, Camera or User-created folder to the following screens:
 - Standby screen, wake-up display
 - Dialing/calling screens of voice or videophone calls
 - Mail sending/receiving/checking/receiving result
 - Answer hold/on hold/substitute image/record message/preparing message/voice memo for videophone calls
- You cannot specify the following images to the screens:
 - An image whose width or height is larger than 854 dots
 - An image whose file size exceeds 100K bytes (except for standby and wake-up display)

<Normal/Full screen>

- In case of GIF animations and SWF Flash movies, the display does not change even if you switch the Normal mode and Full screen.

<Add image to PB>

- You can add an image whose size is 100K bytes or smaller and whose width or height is 854 dots or smaller.
- You cannot add images other than JPEG or GIF.

<Edit file name>

- You cannot edit the names of the following images:
 - Pre-installed images
 - A still image of Chara-den character with "Rec. File Restriction"
 - Images that is prohibited to be output from your FOMA terminal
- You cannot use single-byte spaces for file names.

<File restriction>

- You cannot restrict an image if it is:
 - Neither JPEG nor GIF
 - A still image of Chara-den character with "Rec. File Restriction"

<Sort>

- "By source" sorts the images in the following order.
 - ① Downloaded images or images acquired from i-appli or ToruCa
 - ② Still images shot by the camera
 - ③ Images retrieved using Infrared data exchange, iC communication or from microSD memory card, etc.
 - ④ Chara-den shots
 - ⑤ Pre-installed images

● Storing images at the Data Security Center

You can store images, etc. stored in the FOMA terminal at the Data Security Center.

- Data Security Service is a pay service you need to apply for. If you have not subscribed to the service and try to connect to the Data Security Center, the notification screen appears.

1 Image list screen (p.227) [FUNC] [Store in Center] [Use] [Select an image] [Finish]

You can select up to 10 images.

2 Enter your security code [YES]

The FOMA terminal connects to the Data Security Center to start saving the images.

3 [Finish]

NOTE

- You cannot save images when the file size for a image exceeds 100K bytes, when it is prohibited to be output from the FOMA terminal, pre-installed Decomail-picture or Decorate PI.

■ To restore images

The image data stored at the Data Security Center can be stored on the FOMA terminal from the site of the Data Security Center. For details on how to use, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

● Attaching or inserting image to compose an i-mode mail or Deco-mail

You can attach the saved still image to an i-mode mail message or insert it in a Deco-mail message.

1 Image list screen (p.227) [FUNC] [Compose message] [Select any item]

Attach image.....Attaches the image that is not larger than 240 dots wide × 320 dots high or 320 dots wide × 240 dots high. Select any of the following item to attach an image that is larger than the image described above.

Attach mail.....Attaches the image without changing the image size.

QVGA scale down.....Attaches image by reducing its image size to 240 dots wide × 320 dots high or 320 dots wide × 240 dots high or smaller without changing its aspect ratio.

Insert image.....Inserts the image that is smaller than 96 dots wide × 128 dots high or 128 dots wide × 96 dots high and its file size is 90K bytes or less to the Deco-mail message. Select any of the following item to attach an image that is larger than the image described above.

Insert mail.....Inserts image by reducing its file size to 90K bytes or less without changing the image size.

SubQCIF scale down.....Inserts image by reducing its image size to 96 dots wide × 128 dots high or 128 dots wide × 96 dots high without changing its aspect ratio. Also, changes the file size if its file size is larger than the maximum.

2 Check the edited image ▶ (Set) ▶ Compose message

■ When you select “Attach mail/Insert mail”
There is no checking operation of the image.
“Composing and Sending i-mode Mail” → p.166
“Composing Deco-mail” → p.168

● Making a composite image from 4 images

- You cannot specify images larger than 352 dots wide × 288 dots high or 288 dots wide × 352 dots high, except the following:
 - VGA (640 × 480), VGA V. (480 × 640)
 - Screen (240 × 427)
 - CIF V. (288 × 352)
 - QVGA V. (240 × 320)

1 Image list screen (p.227) ▶ (FUNC) ▶ “Composite image”

2 Select the position ▶ Select a folder ▶ Select an image ▶ Repeat the step to select 4 images

■ To cancel the specified image
▶ Select the image to cancel ▶ “Release this” on the folder selection screen

3 (Finish) ▶ (Save)

■ To retry creating the composite image
▶  (Cancel)


Creating animations <Original animation>

You can create an animated cartoon made of up to 20 frames using stored images.

- You can specify JPEG images which are 854 dots wide × 854 dots high or smaller as an original animation.
- You can create up to 20 animations.

1 “Data Box” ▶ “My picture” ▶ “Original animation”

The “Original animation list” screen appears.

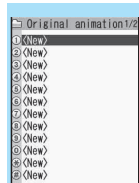

Original animation list
Function menu ▶ p.232

2 “<New>”

3 Select a frame ▶ Select a folder ▶ Select an image ▶ Repeat the step to specify images

■ To cancel the specified image

▶ Select the frame to cancel ▶ “Release this” on the folder selection screen

4 (Finish)

Original animation list screen (p.232)

Edit title.....Edits the title of the original animation. You can enter up to 9 double-byte or 18 single-byte characters.

Org. animation.....Newly creates Original animation when “<New>” is highlighted. Edits the original animation when the existing one is highlighted.

Display image.....Plays the original animation (Displays the original animation playback screen).

Set as display.....Selects the item to which the original animation is set.

Image info.....Checks the destination to save the original animation set in “Set as display”. If there is no setting, “No set” is displayed.

Release animation.....Cancels the original animation.

1 Original animation list screen (p.232) ▶ Select an original animation

The "Original animation playback" screen appears. If there are two original animations or more, use  to play the previous or next animation.



FUNC

Original animation playback screen (p.233)

Set as display.....Selects the item to which the image is set.

Set image disp......Specifies the display mode of an image smaller than the image display area.

Normal (default).....Displays the image in the actual size.

Fit in display.....Enlarges the movie to the display size.

Retry.....Plays the animation from the beginning.

Editing Images

<Edit image>

You can edit the still images you shot, etc.

- The followings are the contents and size you can edit:

[Frame]

- 854 × 480, 480 × 854 dots
- 640 × 480, 480 × 640 dots
- 352 × 288, 288 × 352 dots
- 320 × 240, 240 × 320 dots
- 427 × 240, 240 × 427 dots
- 176 × 144, 144 × 176 dots
- 128 × 96, 96 × 128 dots

[Retouch/Correct backlight/Refresh skin tone]

- Up to 854 × 480, 480 × 854 dots

[Marker stamp/Character stamp/Trim away/
Brightness/Rotate/Change size]

- 2,592 × 1,944, 1,944 × 2,592 dots
- 2,304 × 1,728, 1,728 × 2,304 dots
- 2,048 × 1,536, 1,536 × 2,048 dots
- 1,616 × 1,212, 1,212 × 1,616 dots
- 1,600 × 1,200, 1,200 × 1,600 dots

- 1,280 × 960, 960 × 1,280 dots
 - Up to 854 × 480, 480 × 854 dots
- However, an image larger than 854 × 480 or 480 × 854 dots is scaled down to 640 × 480 or 480 × 640 dots before editing.

* Even if the image size is able to edit in the descriptions above, some image may not support editing function. You can edit only the image with "8". You cannot select the menu that cannot be edited.

- When "Edit image" is selected in the photo mode checking screen function menu, only the "Frame", "Retouch", "Refresh skin tone" and "Correct backlight" are available.

1 My picture screen (p.227) ▶ (FUNC) ▶ "Edit image" ▶ Select any item:

Frame → p.234

Retouch.....Applies effects to the image.

Sharp.....Sharpens the outline of the image.

Blur.....Softens the outline of the image.

Sepia.....Makes the sepia-tone image.

Emboss.....Brings out the image in relief.

Negative.....Makes the negative image.

Horizontal flip.....Reverses the left and right in the image (mirroring).

Marker stamp → p.234

Character stamp → p.234

Trim away.....Trim a constant size.

▶ **Select the image size for trimming** ▶ **Adjust the position to trim with**   (Set)

Brightness.....Selects the brightness in 5 levels from "-2 to ±0 to +2" using .

Rotate.....Selects the angle to rotate the image from "90° to right/90° to left/180°".

Change size.....Selects the image size for changing. The image is enlarged or reduced to fit in the selected size keeping the aspect ratio.

Correct backlight.....Makes the dark part clear, which is caused by the backlight.

Refresh skin tone.....Corrects the skin parts.

Compose message^{*1,2} → p.231

Save^{*1}.....Saves the edited image.

*1: This function is available after editing an image.

*2: Not available when 2in1 is in B mode.

2 Check the edited image ▶ (Set)

3 (Save) ▶ “YES” or “NO”

Selecting “YES” overwrites the original image.
Selecting “NO” saves a new image to the folder where the original is stored.

NOTE

- Editing repeatedly may impair the image quality or increase the file size.

● Adding frames

- You can use the downloaded frames in addition to the pre-installed ones.

1 My picture screen (p.227) ▶ (FUNC) ▶ “Edit image” ▶ “Frame” ▶ Select a frame

The image is displayed in the selected frame.
Use  to change to another frame.

■ To rotate the frame 180°

- ▶  (Rotate)

■ To cancel the selected frame

- ▶  (FUNC) ▶ “Cancel”

NOTE

- If the size of the image that has been trimmed or resized is the same as that of the frame, the image can be framed.

● Pasting marker stamps

- You can use the downloaded marker stamps in addition to the pre-installed ones.
- You can rotate, enlarge or reduce marker stamps.

1 My picture screen (p.227) ▶ (FUNC) ▶ “Edit image” ▶ “Marker stamp” ▶ Select a marker stamp

■ To edit a marker stamp

- ▶  (FUNC) ▶ Select any item:

90° to right Rotates 90° clockwise.

90° to left Rotates 90° counterclockwise.

180° Rotates 180°.

Scale up Doubles the size.

Scale down Reduces the size to half.

2 Adjust the marker stamp position with ▶ (Put)

■ To paste another marker stamp

- ▶  (Add) ▶ Repeat steps 1 to 2

NOTE

- You can only use downloaded stamps of 240 dots wide × 240 dots high or smaller. The stamps larger than the above size are handled as GIF images.

● Pasting character stamps

- You can enter up to 15 double-byte or 30 single-byte characters as a stamp. The number of characters that can be entered differs depending on the image size and character size.
- You can change the character stamp color, font and size.

1 My picture screen (p.227) ▶ (FUNC) ▶ “Edit image” ▶ “Character stamp” ▶ Enter characters

■ To edit a character stamp

- ▶  (FUNC) ▶ Select any item:

Character input Enters the character.

Character color Sets the color.

To use another color palette, press  (Change).

Font type Selects form “Gothic/Ming-cho”.

Font size Selects the size from “Enlargement size/Standard size/Reduction size”.

2 Adjust the character stamp position with ▶ (Put)

NOTE

- The font thickness is specified in the “Font” setting.

Playing Movies/i-motion

 
<i-motion>

You can play movies you have shot and i-motion downloaded from i-mode sites or websites.

1 ▶ “Data Box” ▶ “i-motion”

The “Folder list” screen appears.

i-motion folder → p.226



Function menu ▶ p.253

2 Select a folder

The "Movie list screen (Preview)" appears.

Movie list screen → p.235


■ Search the i-motion by i-mode

▶ "Search by i-mode" ▶
"YES"

■ For partly downloaded i-motion

A confirmation message about downloading the remaining data appears. You cannot play the i-motion unless you download the rest of the data.

- Selecting "YES" starts downloading of the rest of the data.
- Selecting "NO" redisplay the "Movie list" screen.

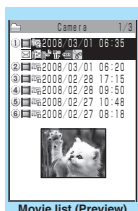

Movie list (Preview)
Function menu → p.235

3 Select a movie

The "Music Player" screen appears and the movie playback starts.

"Guide to music player" screen → p.273


"Operations on the music player" screen → p.274

NOTE

- A movie may not be properly played if it was not shot with FOMA SO705i.
- You can start playback from the point the playback was stopped last time when you receive a call during playback or when the playback is stopped by [CLR] or [END]. However, the playback may not start the precise point the playback was stopped last time.
- For some i-motions, you can also select a chapter to play.

Guide to the Preview screen/Title list

- The icons for image types, retrieval methods and the available settings → p.228
- Titles and file names → p.230

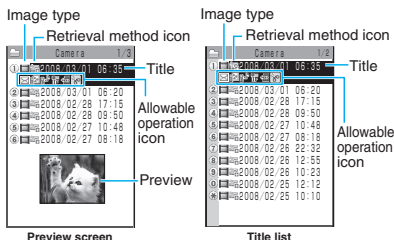

■ Preview screen

The screen displays 6 movies listed by title and a preview image from the selected movie under the titles.

Preview images are not displayed for movies with no video such as a sound only i-motion (an i-motion with no video, such as a singer's voice).

■ Title list

The titles of the 11 movies are listed and displayed on the screen.

FUNC Movie list screen (p.235)

- The available functions vary depending on the folders, which means that the items listed in the function menu are different.

Edit i-motion → p.237

Edit title Edits the movie title.

You can enter up to 9 double-byte or 18 single-byte characters (You can enter up to 18 double-byte or 36 single-byte characters for the microSD memory card).

Select ring tone Sets the movie sound as a ring tone.
→ p.88

Stand-by display Sets the movie to the standby screen.

i-motion info Displays an i-motion file name, a file save date and whether the i-motion can be moved to the microSD memory card.

Compose message*1 Composes an i-mode mail message with the movie attached. → p.166

iC transmission → p.259

Send Ir data → p.258

Copy to microSD → p.248

Move to microSD → p.250

Move Selects from "Move this/Move selected/Move all" and moves the movie to the other folder you select. "About multiple-choice" → p.39

Add shortcut → p.100

Edit file name Edits the file name of the movie.

You can enter up to 36 single-byte alphanumeric characters and symbols ("_" and "." only).

File restriction Specifies whether to allow the redistribution of the saved movie. "File restriction" → p.230

Reset title Resets the title to the default.

Memory info Displays the amount of movie stored and available space (the amount of the data of the FOMA terminal does not contain the amount of the secret data).

Sort Sorts the movies in a selected criteria.

List setting..... Specifies how to list the movies. The displayed menu differs on the FOMA terminal and microSD memory card.

Delete..... Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

Keep in secret ⇔ **Put out** ²..... "Preventing Others from Viewing Data" → p.112

Copy to Phone ³ → p.249

Move to Phone ⁴ → p.250

Copy ³..... "Copying the data to the different folder in the microSD memory card" → p.250

*1: Not available when 2in1 is in B mode.

*2: Available only in Secret or Secret data only mode.

*3: Available only for movies stored on the microSD memory card.

*4: Available only for movies stored on the movable contents folder.

NOTE

<Select ring tone>

- You can only set a movie or i-motion with the Set as ring tone "Available". Refer to the "i-motion info" to check whether it is "Available" or "Unavailable".
- You cannot set the following movie or i-motion to the ring tone:
 - A movie or i-motion without audio
 - i-motion with the playback restriction
 - The size of the movie/i-motion is larger than QVGA (320 × 240) and smaller than VGA (640 × 480)
- If a movie larger than VGA (640 × 480) is set as a ring tone, an i-motion image does not appear on the screen.

<Stand-by display>

- You cannot set the movie to the standby screen when:
 - The movie or i-motion is voice only
 - i-motion with the playback restriction
 - The size of the movie is larger than QVGA (320 × 240)

<Memory info>

- The displayed file size is only an approximation.

<Sort>

- "By source" sorts the images in the following order. Movies or i-motion with the same retrieval icon are arranged in the order in which they were displayed before you selected "By source".
 - ① Downloaded i-motion or i-motion retrieved from i-appli, etc.
 - ② Movies shot by camera
 - ③ Movies retrieved using Infrared data exchange, iC communication or from microSD memory card, etc.
 - ④ Chara-den shots


● Playing movies in your preferred order <Play movie playlist>

You can select and store up to 25 movies or i-motion to play multiple movies in sequence.

- There are 5 Playlist folders.

1 Folder list screen (p.234) ▶ Select "Playlist"

The "Playlist folder list" screen appears.

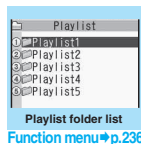

2 Highlight the destination playlist folder ▶ (FUNC) ▶ "Edit playlist"

3 Select No. for the movie ▶ Select a folder ▶ Select a movie ▶ Repeat steps to add

■ To release the added movie

▶ Select the movie to release ▶ Select "Release this" on the folder selection screen ▶ "YES"

4 (Finish)

The i-motion Playlist folder list screen appears. Selecting the Playlist folder starts the playback of the playlist and the stored movie is played repeatedly.

(FUNC)

Playlist folder list screen (p.236)

Edit playlist..... Starts editing the playlist. You can edit a playlist which is already set.

Release playlist..... Deletes the set movies and releases a playlist.

Editing Movies

<Edit i-motion>

- You can edit the movies with “” only.

<Example: Movie list screen for Inbox, Camera or User-created folders>

1 Movie list screen (p.235) (FUNC) “Edit i-motion”

The “Edit i-motion” screen appears.



Edit i-motion

2 (FUNC) Select any item:

Trim i-motion → p.237

Compose message Composes an i-mode mail with the movie attached.

File restriction Specifies whether to allow the redistribution of the trimmed movie with “Trim i-motion”. “File restriction” → p.230

* : Not available when 2in1 is in B mode.

NOTE

- You cannot use the Multitask function while editing movies.
- Editing may impair the movie quality.

Trimming a part of the movie

1 Edit i-motion screen (p.237) (FUNC) “Trim i-motion”

2 “Any size” or “500KB” (Start)

Trimming starts.

■ To start trimming at a scene mid-way through the movie

▶ (Play) ▶ Press (Stop) when it is the first frame you want to trim ▶ (Start)

3 Press (Stop) when it is the last frame you want to trim ▶ (End)

■ When you select “500KB”

Trimming automatically stops once the trimmed size reaches 500K bytes.

4 The trimmed section of the movie is played

The playback stops automatically when it ends.

5 (Set) ▶ (Save) ▶ “YES”

NOTE

- A movie whose size is larger than QCIF (176 × 144) cannot be trimmed away.

What is Chara-den?

 
You can send a cartoon character to your party's FOMA terminal in a videophone call instead of the image from your own FOMA terminal camera.

Displaying Chara-den

- Downloading “Chara-den” characters → p.155

1 “Data Box” ▶ “Chara-den”

The “Chara-den list” screen appears.



Chara-den list

Function menu ▶ p.238

2 Select Chara-den

The “Chara-den player” screen appears.



Chara-den


Function menu ▶ p.238

Illustrations Dick Bruna
© copyright Mercis bv,
1953-2008
www.miffy.com

Guide to the Chara-den list

- The icons for image types, retrieval methods and the available settings → p.228
- Titles and file names → p.230

Image type icon (Chara-den)

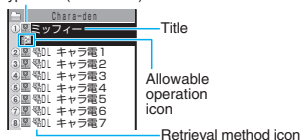

Using Chara-den characters

This function allows you to play a Chara-den character by selecting from pre-installed actions.

1 Chara-den player screen (p.237) ▶ Using Chara-den characters

■ To check the action list



The actions displayed in the list differ depending on the type of character.

The number such as "1" or "#1" displayed on the right of the action indicates that pressing that key during the Chara-den playback will perform the corresponding action.

<To check the action details>

▶ Highlight the action ▶ (Detail) ▶ Check the details ▶ (Exit)

■ To change the Action mode

▶ (Parts/Whole)

This command switches to Parts action mode when is displayed and to Whole action mode when is displayed.

(Whole): The action mode in which the entire Chara-den character moves to express feelings.

(Parts): The action mode in which the parts of the Chara-den character (head, hands, feet, etc.) move.

■ To use the keypad to select actions during the Chara-den playback


The keypad keys that can be pressed to make the displayed character perform actions are as follows:

"Whole": 1 digit number on the right side of the action name (to) or to

"Parts": 2 digit number on the right side of the action name (to)

<Example: Select "おやすみ" (Good night) in Whole action mode>

* The Chara-den is displayed normally (not in mirror).

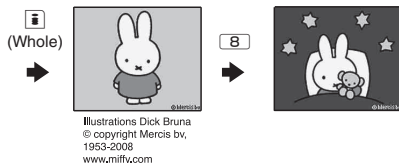

■ To have the character's mouth synchronize your voice

Some Chara-den characters can move the mouth synchronizing your voice as if it is talking. If you use the Function menu or press the key to make the character perform an action, the character performs the selected action rather than moving its mouth.

Chara-den list screen (p.237)/ Chara-den player screen (p.237)



Chara-den call.....Makes a videophone call with the Chara-den character as the substitute image. Use to search for a phone number from the Received calls, Redial or phonebook on the Chara-den dialing screen.

Substitute image.....Sets the Chara-den character as the substitute image for videophone calls.

Rec. Chara-den → p.239

Edit title¹.....Edits the title of the Chara-den.

You can enter up to 18 double-byte or 36 single-byte characters.

Switch Chara-den².....Selects the Chara-den to display.

Action List².....Displays the Action list.

Change Action².....Changes the Action mode.

Chara-den info.....Chara-den file name and file save date and time are displayed.

Memory info¹.....Displays the amount of the stored Chara-den.

Add shortcut → p.100

Set image disp.

Normal.....Displays the image in the actual size.

Fitted in display (default).....Enlarges the image to the display size.

Reset title¹.....Resets the title to the default.


Delete¹.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" → p.39

*1: Available only with the Chara-den list screen.

*2: Available only with the Chara-den player screen.

Saving Chara-den character as Image or Movie <Rec. Chara-den>

■ Guide to the Rec. Chara-den screen

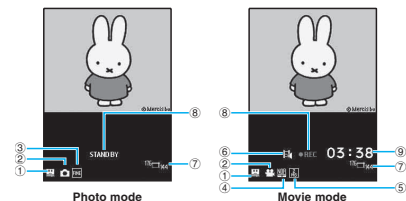

- ① Currently selected action mode
 : Whole
 : Parts
- ② Shooting mode
 : Photo mode
 : Movie mode
- ③ Setting of "Storage setting" (Image)
 : Normal
 : Fine
 : Super Fine
- ④ Setting of "Storage setting" (Movie)
 : Normal
 : Prefer img qual
 : Prefer time
 : Prefer motion spd
- ⑤ Setting of "File size setting"
 : 500KB
 : 2MB
- ⑥ Setting of "Movie type set"
 : Video + voice
 : Video
- ⑦ Indicates the size selected in "Select size"
 : QCIF (176 × 144)
 : Small (117 × 96)
- ⑧ Shooting status
 : Stand-by
 : Shooting
- ⑨ Remaining shooting time in the "min:sec" format (not displayed until shooting starts)

Illustrations Dick Bruna
 © copyright Mercis bv,
 1953-2008
 www.miffy.com

● Shooting Still Images

1 Chara-den player screen (p.237)▶ (FUNC)▶"Rec. Chara-den"

The "Rec. Chara-den (image)" screen appears.

2 Perform an action▶ (Record)

Operation of actions
 → p.238

■ To perform a Parts action

▶ (Parts)

■ To compose an i-mode message with a shot image attached/inserted


▶ (MAIL)▶"Attach image" or "Insert image"

■ To retake the shot

▶ (CLR)

3 (Save)

The shot image is saved to the Camera folder under My picture.

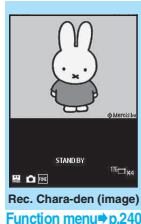

● Shooting movies

1 Rec. Chara-den (image) screen (p.239) (FUNC)▶"Movie mode"

The "Rec. Chara-den (movie)" screen appears.

2 Perform an action▶ (Record)

Operation of actions
 → p.238

■ To perform a Parts action

▶ (Parts)

3 (Stop)

■ To compose an i-mode message with the recorded movie attached

▶ (MAIL)

■ To check the movie

▶ (FUNC)▶"Check w/ playing"

■ To retake the shot

▶ (CLR)

4 (Save)

The movie is saved to the Camera folder under i-motion.



NOTE

- The image size (QCIF (176 × 144)) cannot be changed.
- Performing an action during shooting may record keypad sounds.

FUNC Rec. Chara-den screen (p.239)

Switch Chara-den.....Changes a Chara-den character to shoot.

Substitute image.....Sets the Chara-den character as the substitute image for videophone calls.

Action List.....Displays the Action list.

Change Action.....Changes the Action mode.

Set image display.

Normal.....Displays the image in the actual size.

Fit in display (default).....Enlarges the image to the display size.

Movie mode ⇄ **Photo mode**.....Switches between Movie mode and Photo mode.

Select size^{*1}.....Sets the size of character to shoot. Numbers in parentheses displayed in the menu is the size in dots (width × height).

Movie type set^{*2}

Video + voice (default).....Shoots a movie including sound.

Video.....Shoots a movie without any voice.

Storage setting^{*2}

Normal (default).....Shoots a movie with the normal quality and duration.

Prefer img qual.....Select this option to shoot a movie with higher quality. The available shooting time is shorter than for Normal.

Prefer time.....Select this option to shoot a long movie. The quality is not as high as for Normal.

Prefer motion spd.....Select this option to shoot a movie with smoother motion.

Storage setting^{*1}.....Selects the quality for image shooting from "Normal/Fine/Super Fine".

File size setting^{*2}

500KB.....You can shoot up to 500K bytes.

2MB (default).....You can shoot up to 2M bytes.

^{*1}: Available only in the Photo mode.

^{*2}: Available only in the Movie mode.

NOTE

<Switch Chara-den>

- Changing a Chara-den character sets the action mode to Whole.

 
Playing Melodies

<Melody>

You can play the pre-installed melodies, sound effects or the melodies downloaded from the sites in the "Melody" folder of Data Box.

1 **“Data Box”** → **“Melody”**

The "Folder list" screen appears.
Contents in the Melody folder → p.227



Function menu ▶ p.253


2 **Select a folder**

The "Melody list" screen appears.
Guide to the melody list
→ p.241

■ **Search the melody by i-mode**

▶ "Search by i-mode"


▶ "YES"

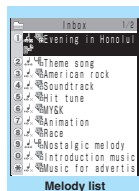

Function menu ▶ p.241

3 **Select a melody**


The "Melody" screen appears and the melody playback begins.
"Operation during the melody playback" → p.241

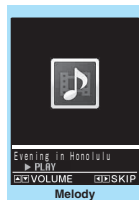

Function menu ▶ p.241

NOTE

- Melodies are played at the volume set in "Phone" under the "Ring volume" settings (played at "Level 2" when "Silent" or "Step" is set).

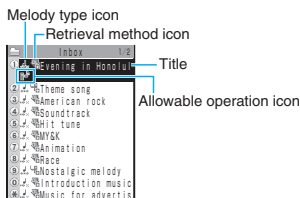

Melody type icon

Icon	Description
	MF/SMF melody

: Data that are file-restricted or not allowed to be attached to mails or output from the FOMA terminal

Retrieval method icon

Icon	Description
No icon	Pre-installed melody
	Melody downloaded from sites
	Melody retrieved through the Infrared data exchange, iC communication, microSD memory card, Bar code reader or PC

Allowable operation icon

Icon	Description
	Can be attached to i-mode mail (2M bytes or smaller)
	Can be specified as Ring tone
	Can be transmitted via infrared data exchange or iC communication
	Can be copied to the microSD memory card

Titles and file names

Original titles are assigned to downloaded melodies. The title is listed on the Melody list screen of the FOMA terminal.

The file name is displayed when the data is transmitted to PC.

If the file name contains an inappropriate character, it is turned to "melodyxxx" (xxx: 3-digit number).

The 3-digit number at the end of the file name is a serial number assigned to distinguish the file from other files.

You can use the following operations during the melody playback:

Key operation	Operation
	Plays the previous or next melody
	Adjusting the volume*
	Stops the playback
	Ends

* : When the melody is finished, the volume is restored to the level specified in "Ring volume".

Melody list screen (p.240)/ Melody screen (p.240)

- The function menu varies depending on the folder containing the melody.

Edit title¹.....Edits the title of the melody.

You can enter up to 25 double-byte or 50 single-byte characters.

Edit file name¹.....Edits the file name of the melody.

You can enter up to 36 single-byte alphanumeric characters and symbols (" " and " _ " only).

Play melody¹.....Plays the melody (Displays Melody screen).

Ring tone.....Selects the item to which the melody is set.

File restriction¹.....Specifies whether to allow the redistribution of the saved melody. → p.230

Set repeat play².....Repeats the playback of the melody in the same folder.

Add shortcut → p.100

Compose message³.....Composes an i-mode mail with the melody attached. → p.166

iC transmission¹ → p.259

Send Ir data¹ → p.258

Copy to microSD → p.248

Copy to Phone⁴ → p.249

Melody info.....Melody file name and file save date and time are displayed.

Memory info¹.....Displays the amount of the stored melody.

Copy⁴....."Copying the data to the different folder in the microSD memory card" → p.250

Reset title¹.....Resets the title to the default.

Sort^{*1}.....Sorts melodies in a selected criteria.

Move^{*1}.....Selects from "Move this/Move selected/Move all" and moves the melody to the other folder you select.
"About multiple-choice"→p.39

Delete^{*1}.....Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.39

*1: Available only with the melody list screen.

*2: Available only with the melody screen.

*3: Not available when 2in1 is in B mode.

*4: Available only for melodies stored on the microSD memory card.

NOTE

<Edit file name>

● You cannot edit the file name of the file-restricted melody. However, you can edit the file name of the melody received by the Infrared data exchange, iC communication or OBEX™ connection.

<Ring tone>

● Some melodies may have restrictions so that only a designated part of the melody will be played. When such melodies are set as a ring tone, only the designated part can be played. Play the melody from the Melody in Data Box to play all the parts of the melody.

<Sort>

● "By source" sorts the melodies in the following order. Melodies with the same retrieval icon are arranged in the order in which they were displayed before you selected "By source":

① Melody downloaded from website or melody retrieved from i-αpli

② Melodies retrieved using Infrared data exchange, iC communication or from microSD memory card, etc.

● Playing melodies in your preferred order <Melody play playlist>

You can select and register up to 10 melodies, and play them in sequence.

1 Folder list screen (p.240)▶Highlight "Playlist"▶[F] (FUNC)▶"Edit playlist"
▶Select the number to which the melody is to be added▶Select a folder▶Select a melody▶Repeat the procedure

■ To release the added melody

▶Select the melody to release▶Select "Release this" on the folder selection screen

2 [F] (Finish)

The "Folder list" screen appears. Selecting the Playlist folder starts the playback of the playlist and the stored melodies are played repeatedly.

NOTE

● The playlist playback is canceled if the registered melody titles or file names are changed or the data is deleted.

Managing Kisekai Tool

<Kisekai Tool>

Check the packages of Kisekai Tool downloaded from sites.

- "ドコモダケ_SO705i" and "ミッフィー" are stored at the time of purchase.
- Downloading from sites→p.155


1 [MENU]▶"Data Box"▶"Kisekai Tool"

The "Package list" screen appears.

Package list screen→p.243

■ Search the packages by i-mode

▶"Search by i-mode"▶
"YES"

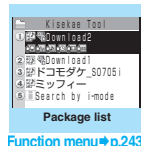

2 Select a package

■ To set the package

▶[F] (FUNC)▶"Set all"

Kisekai Tool package settings→p.104

■ When you select a partially downloaded package


When you attempt to open a partially downloaded package, due to interruption at data acquisition, etc., a message appears asking whether to download the remaining data. To download the remaining data, follow the message to download the data.

When the remaining data is downloaded, the partially downloaded data will be deleted. If the remaining data is invalid, the data downloading cannot be completed. However, if you download the data in this case, partially stored invalid data will be deleted.

NOTE

● Sound-related items such as ring tone are played at the volume set in "Ring volume" while checking (Played at "level 2" when set to "Step", and no sound when set to "Silent"). However, i-motion sounds at "Level 2" when set to "Silent".

Guide to the package list

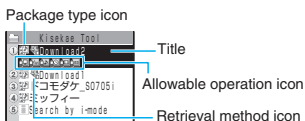

Package type icon

Icon	Description
	All the data have been downloaded
	Only a part of the data has been downloaded
	Subject to the FOMA card operational restriction function

Retrieval method icon

Icon	Description
No icon	Pre-installed Data
	Downloaded data

Allowable operation icon

Icon	Description
	Standby screen, wake-up display
	Dialing screen, etc. (other than standby screen and Wake-up display)
	Ring tone or clock alarm tone
	Menu*
	Clock display
	Color pattern
	Icons such as battery icon
	Background on the music player screen
	Sub display animation

* : also appears if the package contains large-font menu.

FUNC Package list screen (p.242)

Set all.....Sets the Kisekai Tool. → p.104

Edit title.....Edits the package title.

You can enter up to 10 double-byte or 20 single-byte characters.

Kisekai Tool info.....Package file name and file save date and time are displayed.

Reset title.....Resets the title to the default.

Reset screen/sound.....Resets the items that can be set all at once to the default (p.104).

Memory info.....Displays the amount of the stored Kisekai Tool.

Sort.....Sorts packages by the specified criteria.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice" → p.39

microSD Memory Card

FOMA SO705i supports microSD memory cards with up to 2G-byte (commercially available) (As of January, 2008). Visit the following website for the latest operation check information such as the manufacturer or the capacity of the microSD memory card. Note that the microSD card which is not listed on the website may not be operated on the FOMA terminal.

- i-mode: PlayNow by SO
(As of January, 2008)
"iMenu"▶ "メニュー／検索"
(Menu/search)
▶ "ケータイ電話メーカー"
(Mobile phone maker)
▶ "PlayNow by SO"



QR code on the right is also available to select displayed URL and access the site.

- PC (only in Japanese):

Sony Ericsson Mobile Communications
<http://www.SonyEricsson.co.jp/memorycard/>

Note that the information on the website is only the result of the operation check and does not guarantee all the operations.

Notes on handling

- * Make sure to format the microSD memory card on the FOMA SO705i. You may not be able to use the microSD memory card formatted on the other terminal or PC. → p.251

- Insert or remove the microSD memory card after turning off the FOMA terminal.
- Do not paste a label or sticker on the microSD memory card.
- It is your responsibility to keep a separate record of all data saved on the microSD memory card. Under no circumstances shall NTT DoCoMo be liable for any loss or alternation to the saved data.

Inserting/removing the microSD memory card


Insert or remove the microSD memory card after turning off the FOMA terminal.

1 Open the cap of the microSD memory card slot

2 Insert the microSD memory card into the microSD memory card slot and push it until it locks into the place

Insert the microSD memory card straight and slowly with the printed side up.

When fully inserted, the card is locked in the place.

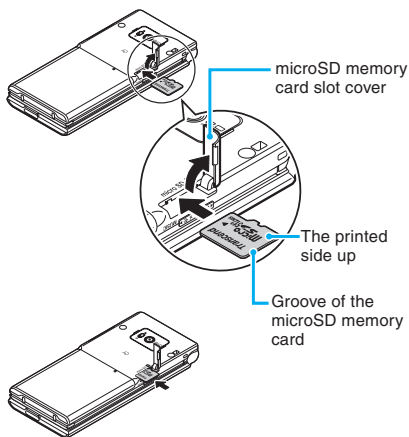

To remove the card

When you push the microSD memory card in and release, the card pops up slightly.

* Note that the card may fly out of the slot.

Grip the groove of the microSD memory card and slowly pull the card out.

3 Close the cap of the microSD memory card slot

When you turn on the FOMA terminal after inserting the microSD memory card, “SD” appears.

NOTE

- Do not insert or remove the microSD memory card with the FOMA terminal turned on. Doing so may damage the microSD memory card or the data on the card.

NOTE

- Note that the microSD memory card may fly out of the slot when inserting or removing the microSD memory card.
- When you remove the microSD memory card, make sure to keep the card in the supplied protective case. You may not be able to use the microSD memory card if the card is kept in different protective case.
- Make sure to insert or remove the microSD memory card straightly in the right direction (inserting the microSD memory card at an angle may damage the card).
- It may take long to read or write data for the first time after the microSD memory card is inserted.

Folder tree on the microSD Memory Card

When you copy the data from the FOMA terminal to the microSD memory card, folders are created as shown in the **Table 1** (p.245) and the data are stored on the respective folders. The folder name and file names are set automatically as shown in the **Table 1**.


- When the data is copied from a PC to the microSD memory card, the folder structure and file name shown in the **Table 1** (p.245) are needed.

NOTE

- When you copy multiple data to the SD_PIM folder, the data is automatically named with year/month/day/hour/minute (yyyy/mm/dd hh:mm).
- You can save a movie with video from a PC to the MMFILE folder, but you cannot play the movie on the FOMA terminal.
- A file edited on a PC then saved to the microSD memory card may not be displayed or played correctly on the FOMA SO705i if you use characters different from the folder/file names shown in Table 1 (p.245).
- When the microSD memory card is formatted and SDVIDEO.DAT, MMFILE.DAT or DCIM.DAT file is deleted, the settings of the destination folder are canceled. In this case, reset the setting of “Select to save”.
- Do not delete or move folders in the microSD memory card on a PC. Doing so may prevent FOMA SO705i from reading the microSD memory card.
- You may not be able to display or play the data on the microSD memory card stored from the other device. Also, you may not be able to display or play the data on the microSD memory card stored from the FOMA terminal on the other device.
- Before purchasing the microSD memory card reader/writer or PC card adapter, ask the manufacturer of the microSD memory card if it is available for the FOMA SO705i.

(Table 1) Folder tree on the microSD Memory Card and storage file (Enclosed in parentheses are file extensions)

Root (microSD memory card)

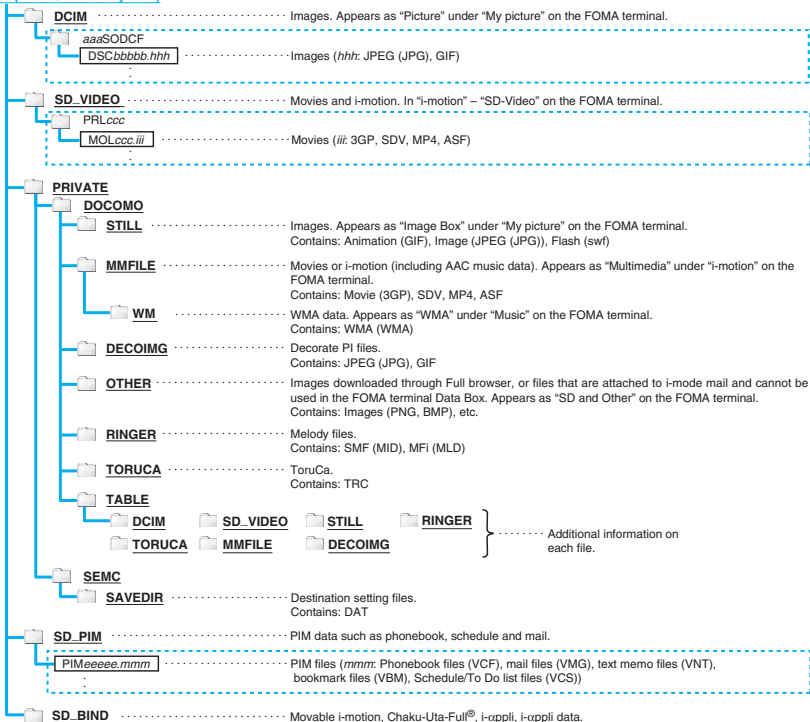

* Alphabets in italic that is no explanation in table mean following single-byte numbers.

aaa: 100 to 999 bbbbbb: 00001 to 09999 ddd: 001 to 999 eeeee: 00001 to 65535 (Decimal numbers)

ccc: 001 to FFF (hexadecimal numbers)

* When you store the data on the microSD memory card from a PC and edit the data on the microSD memory card, follow the instructions of PIMeeee.mmm. The data may not be displayed or played correctly if you use wrong characters.

● Number of files that can be stored on the microSD memory card

The number of files that can be stored on the microSD memory card varies depending on the memory capacity of the microSD memory card. The maximum number of files that can be stored in 1 folder and the maximum number of folders are as follows:

Folder name	Maximum number of folders	Maximum number of files that can be stored in 1 folder
DCIM	900	9,999
SD_VIDEO	4,095	4,095
SD_PIM	1	65,535
STILL	999	9,999
MMFILE	999	9,999
DECOIMG	999	9,999
OTHER	999	999
RINGER	999	9,999
TORUCA	999	999

- You can save more files by adding folders and changing the location to copy. However, you may not be able to store the data to the maximum number depending on the file size.
- You can not copy or move the data when the space is not enough on the microSD memory card.
- When the microSD memory card is full, you cannot add folders or edit titles for still image, image, movies or i-motion.
- Music data cannot move from the FOMA terminal to the microSD memory card.
- When the number of files in the destination folder has reached the maximum, the following rules apply:
 - If copying to other than SD_PIM, a new folder is created automatically and the data is stored in the folder. However, a folder is not created automatically when storing a still image directly on the microSD memory card after shooting with the camera.
 - Data cannot be copied to the SD_PIM folder.

Data that can be exchanged between the FOMA terminal and the microSD memory card

■ PIM data

Data type	Details
Phonebook	Name, Reading, Phone number, Mail address, Memo, Address, Birthday, Image, Memory number ^{*1} , Secret store ^{*2-3} , Group number ^{*3} , Group name ^{*3}
Schedule	Date (from), Date (to), Summary, Contents, Secret store ^{*2-3} , category ^{*4} , Alarm, Repeat

Data type	Details
To Do list	Contents, Category ^{*5} , Completion date, Period, Change status, Priority, Alarm
Text memo	Make date, Last modify date, Category, Contents
Received mail ^{*6} , Sent mail ^{*6} , Draft mail	Unread/Read, Message type, Saved in, Sender, Receiver, Title, Receive/Send date, Message, Attach, 2in1 setting
Bookmark ^{*6-7}	URL, Title

*1: May be assigned to the available number to copy and add.

*2: Secret store indicated whether the data is stored as a secret data.

*3: Can be copied by "Copy all".

*4: Category is the icon information set in the schedule.

*5: Category is the category set in the To Do list.

*6: Folders (folder names) can be transferred by copying all the received mails, sent mails or bookmarks.

*7: When copied from the microSD memory card to the FOMA terminal, i-mode bookmarks are stored in the "Bookmark" folder of "i-mode menu". Full Browser bookmarks are saved to the "Bookmark" folder under "Full Browser".

■ Data in the Data Box

Data type	Details
Still image	JPEG, GIF and SWF data in the Inbox, Camera, Decomail-picture, Decorate PI, microSD or user created folder
Movie	MP4 data in the Inbox, Camera, microSD or user created folder
Melody	MF/SMF melody in the Inbox, microSD or user created folder

■ Other data

Data type	Details
ToruCa	ToruCa in the ToruCa, microSD or user created folder

NOTE


- If a schedule with a user icon is copied, the "Category" information is not copied.
- You cannot copy while microSD memory card being accessed.

Displaying the Data in the microSD Memory Card

Displaying the PIM data on the microSD memory card <microSD manager>


You can display the PIM data such as phonebook, schedule, mail or bookmarks on the microSD memory card.

1. Press **MENU** ▶ **“LifeKit”** ▶ **“microSD manager”**
The “Categories” screen appears.

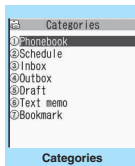


Function menu ▶ p.247

2. Select an item
The “File list” screen appears.

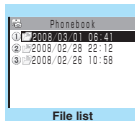


Function menu ▶ p.248

3. Select a file
The “Data list” screen appears.

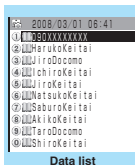

Function menu ▶ p.248

4. Select a data
The “Data detail” screen appears.

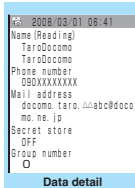

Function menu ▶ p.248

NOTE

- While running microSD manager or displaying the data details, you cannot launch another function.

NOTE

- “” appears for a bookmark added on the i-mode browser screen, and “” for the one added on the Full Browser screen.
- Deco-mails are displayed without decorations.

[FUNC] Categories screen (p.247)

microSD info → p.251

Copy from phone Copies all the item data to the microSD memory card.

- For “Schedule”, you can select from “Schedule/To Do list/All”.
- For “Bookmark”, you can select from “i-mode brow./Full Brow./All”.

microSD format → p.251

Check microSD Checks the microSD memory card and fixes errors.

NOTE

<Check microSD>

- Do not remove the microSD memory card during checking the microSD memory card. This may cause a malfunction to the FOMA terminal or microSD memory card.
- The data may not be recovered depending on the microSD memory card.
- You cannot check the unformatted or incompatible microSD memory card.
- “” flashes during Check microSD.
- When you press **[Quit]** or **[Cancel]** while checking the microSD memory card, the checking is canceled and “” appears.
- When the checking of microSD memory card is interrupted, some data may remain to be recovered. In this case, check the microSD memory card again.
- It may take time to check the microSD memory card depending on the amount of data on the microSD memory card.
- When you check the microSD memory card, the titles of the data in the microSD memory card are renamed to the file names.
Titles and file names → pp.230, 241

FUNC File list screen (p.247)

Edit title..... Edits the file title.

You can enter up to 15 double-byte or 31 single-byte characters.

Copy & add • Copy & overwrite→p.249

Copy from phone.....Copies all the item data to the microSD memory card.

- For "Schedule", you can select from "Schedule/To Do list/All".
- For "Bookmark", you can select from "i-mode brow./Full Brow./All".

microSD info.....Displays the amount of available space and data stored on the microSD memory card.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all". "About multiple-choice"→p.39

FUNC Data list screen (p.247)/Data detail screen (p.247)

Copy & add this • Copy & add all • Copy & OW all.....

- "Copy & add this" copies one data additionally.
 - "Copy & add all" is the same function as "Copy & add" of the function menu of the file list screen.
 - "Copy & OW all" is the same function as "Copy & overwrite" of the function menu of the file list screen.
- "Copying the PIM data to the FOMA terminal"→p.249

microSD info.....Checks the amount of available space and data stored on the microSD memory card.

* : "Copy & add all" and "Copy & OW all" are available only for the data list screen.

 
Displaying other data in the microSD memory card

You can display the data in the Data Box such as images, i-motion or melodies or ToruCa stored on the microSD memory card.

<Example: To display an image in My picture>

1 Folder list screen (p.227)▶"microSD"▶"Picture", "Decorate PI" or "Image Box"

The "microSD folder list" screen appears.



Ex. microSD folder list (Picture)

Function menu▶p.253

2 Select a folder▶Select an image

Exchanging the Data Between the microSD Memory Card and FOMA Terminal

Copying the data on the FOMA terminal to the microSD memory card

1 Copying the data such as the phonebook to the microSD memory card

You can save the phonebook, schedule, To Do list, text memo, mail or bookmarks stored on the FOMA terminal to the microSD memory card.

1 List screen of the data (such as the phonebook list screen)▶ (FUNC)▶"Copy to microSD"▶Select any item:

Copy this • Copy selected • Copy all.....Selects the copying method.

"About multiple-choice"→p.39

* : Only the data in the folder can be copied for copying all the received mails, sent mails or bookmarks. To copy all the data, select "CopyAll to microSD" from the function menu of the folder list screen.

■ Function menu of the detail screen

The function of "Copy to microSD" on the detail screen is same as "Copy this" of the list screen.

■ Function menu of the category screen

The function menu "Copy from phone" of the category list (p.247) is same as "Copy all" of the list screen of the phonebook, schedule, To Do list, draft mail or text memo. Similarly, this function is same as "CopyAll to microSD" of the folder list screen of received mail, sent mail or bookmark.

NOTE

- When you copy the mail with an i-appli software launch specification, the information about launching i-appli in the mail is deleted.
- When you copy one secret data (phonebook or schedule), the secret setting is released when saved.
- When you copy all the data to the microSD memory card, secret data (phonebook or schedule) are also copied. However, the data in the secret folder are not copied.
- When you copy mails, the attached files may be deleted depending on the file type.

NOTE

- Copy all the data of My Profile after operating the "Display all data".

● Copying the data such as images to the microSD memory card

You can copy the data in the Inbox, Camera or user created folder to the microSD memory card.

1 List screen of the data (such as the image list screen) ➤ (FUNC) ➤ "Copy to microSD" ➤ Select any item:

Copy this • Copy selected • Copy all.....Selects the copying method, then selects the destination folder to copy the data to the folder of microSD memory card. "About multiple-choice" → p.39

NOTE

- Pre-installed data cannot be copied to the microSD memory card.
- When you receive a call, mail or alarm notification while copying still images or movies to the microSD memory card, the copying to the microSD memory card is interrupted.
- When the destination folder is full, a new folder is created automatically and the data is stored in the folder.

<Copy image>

- The file name is set as follows after copied:
 - File name: DSC_mmmmm (mmmm = 00001 to 09999)
- You cannot copy the data to the microSD memory card in the following cases:
 - Images other than JPEG, GIF or SWF
 - The file size exceeds 2M bytes when copied
- The file size may increase when copied to the microSD memory card.

<Copy movie>

- The file name is set as follows after copied:
 - File name: MOLxxx (xxx = 001 to FFF: in hexadecimal)

Copying the data on the microSD memory card to the FOMA terminal

● Copying the PIM data to the FOMA terminal

You can copy and add/overwrite the phonebook, schedule, mail or bookmarks stored on the microSD memory card to the FOMA terminal.

- When you copy and overwrite the schedule, the To Do list data is also copied and overwritten (when only one of these data is stored, only the stored data is overwritten).
- Note that when you copy and overwrite data (Copy & OW this/Copy & OW selected/Copy & OW all), the data stored on the FOMA terminal before copying are erased and replaced by the data in the selected microSD memory card.
Check if there is an important data before copying and overwriting the data.

1 File list screen (p.247) ➤ (FUNC) ➤ "Copy & add" or "Copy & overwrite" ➤ Select any item:

Copy & add this • Copy & OW this.....Copies and adds/overwrites all the data of a file.

Copy & add selected • Copy & OW selected.....Copies and adds/overwrites all the data of the selected file. "About multiple-choice" → p.39

Copy & add all • Copy & OW all.....Copies and adds/overwrites all the data of all the files.

■ Function menu of the data list screen/data detail screen

- "Copy & add all" and "Copy & OW all" on the data list screen (p.247) are the same functions as "Copy & add" and "Copy & overwrite" of the file list screen.
- "Copy & add this" of the data list screen/data detail screen (p.247) copies the selected one data additionally.

NOTE

- You cannot copy the phonebook data when "Restrict dialing" is set.
- If Copy & add is selected for the phonebook, group names on the microSD memory card differ from the one of the FOMA terminal, the data is saved to "No Group" in the phonebook.
- When the Inbox or Outbox is full, copying one received mail from the data list screen/data detail screen overwrites the oldest unprotected mail or read mail.

● Copying the other data to the FOMA terminal

You can copy the data such as images stored on the microSD memory card to the folder of the FOMA terminal.

1 List screen of the data (such as the image list screen) [F] (FUNC) ▶ “Copy to phone” ▶ Select any item:

Copy this • Copy selected • Copy all Selects the copying method.
“About multiple-choice” → p.39

NOTE

<Copy image>

- Following images cannot be copied:
 - SWF Flash movie which exceeds 100K bytes
 - An image which exceeds 2M bytes
 - An image whose width or height exceeds 2,592 dots or total number of dots exceeds $2,592 \times 1,944$ dots
 - A progressive JPEG/GIF image whose width or height exceeds 854 dots or total number of dots exceeds 854×480 dots

<Copy movie>

- You cannot copy a movie in the following cases:
 - Movies other than MP4
 - MP4 movies that cannot be played
 - Movies whose file size exceeds 10M bytes
- * You may not be able to copy the movie in other cases depending on the movie.

Copying the data to the different folder in the microSD memory card

You can copy the data in the microSD memory card to the different folder in the microSD memory card.

- You have to create a destination folder beforehand. → p.253

1 List screen of the data (such as the image list screen) [F] (FUNC) ▶ “Copy” ▶ Select any item:

Copy this • Copy selected • Copy all Selects the copying method, then selects the destination folder to copy the data to the other folder.
“About multiple-choice” → p.39

NOTE

- Do not remove the microSD memory card until the copying completes. This may cause a malfunction to the FOMA terminal or microSD memory card.

Moving the Copyrighted Data Among the microSD Memory Card and FOMA Terminal

<Movable contents>

You can move the movable i-motion or Chaku-Uta-Full® with copyrights.

Moving the data on the FOMA terminal to the microSD memory card

- Moved i-motion is saved to the Movable contents folder (p.226) under i-motion.
- The moved Chaku-Uta-Full® are saved to the Movable contents folder (p.226) under Music.

1 Movie list screen (p.235)/Music list screen (p.269) [F] (FUNC) ▶ “Move to microSD” ▶ Select any item:

Move this ▶ Select the destination folder ▶ “Select this folder”

Move selected ▶ Select the destination folder ▶ “Select this folder” ▶ Use [F] to select a checkbox (□) [F] (Finish) ▶ “YES”

Move all ▶ Enter your security code ▶ Select the destination folder ▶ “Select this folder” ▶ “YES”

Moving the data on the microSD memory card to the FOMA terminal

- The moved i-motion are stored to the Inbox folder of i-motion.
- The moved Chaku-Uta-Full® are stored to the Inbox of Music.

1 Folder list screen (pp.234, 269) ▶ “Movable contents” ▶ Select a folder ▶ “View files”

The “Movie list” screen (p.235)/“Music list” screen (p.269) appears.

2 [F] (FUNC) ▶ “Move to phone” ▶ Select any item:

Move this • Move selected • Move all Selects the moving method. “About multiple-choice” → p.39

NOTE

- Do not remove the microSD memory card while moving the data. This may cause a malfunction to the FOMA terminal or microSD memory card.

NOTE

- To check whether the i-motion or Chaku-Uta-Full® can be moved, see “i-motion info” (p.235), “File property” (p.270) or Icons (pp.229, 270).

Managing the microSD Memory Card

Formatting the microSD memory card enables you to use the card on the FOMA terminal or check the usage status.

Formatting the microSD memory card

*** Make sure to format the microSD memory card on the FOMA S0705i. You may not be able to use the microSD memory card formatted on the other terminal or PC.**

- When the memory card is formatted, all the stored data are deleted. Check if there is an important data before formatting.

1 Category screen (p.247) ► [FUNC] ► “microSD format” ► Enter your security code ► “YES”

NOTE

- Do not remove the microSD memory card while formatting. This may cause a malfunction to the FOMA terminal or microSD memory card.
- Data stored on the microSD memory card are not guaranteed if formatting is interrupted.

Checking the microSD memory card usage status

You can display the amount of available space and data stored on the microSD memory card.

- The displayed memory capacity is smaller than the memory capacity indicated on the microSD memory card.
- Number of files that can be stored on the microSD memory card → p.246

1 Category screen (p.247) ► [FUNC] ► “microSD info”


Setting the USB Mode

<USB mode setting>


You can set the USB mode to use various functions by connecting a PC and the FOMA terminal.

- USB mode is categorized into “Communication mode”, “microSD mode” and “MTP mode”.

<Communication mode>

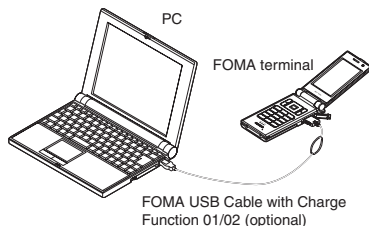

<microSD mode/MTP mode>

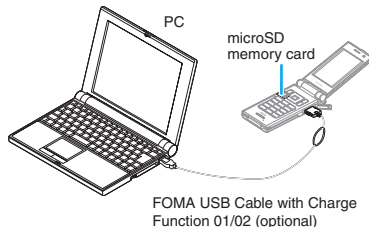

1 [MENU] ► “Settings” ► “External connection” ► “USB mode setting”
The “USB mode setting” screen appears.

2 Select any item:

Communication mode.....Uses the external connector for packet communication, 64K data communication or data exchange via cable connection.

- [Icon]: The FOMA USB Cable with Charge Function 01/02 is connected and data are ready to be exchanged between the FOMA terminal and a PC

microSD mode.....Uses the external connector as a reader/writer of the microSD memory card.

- [Icon]: The FOMA USB Cable with Charge Function 01/02 is not connected
- [Icon]: The FOMA USB Cable with Charge Function 01/02 is connected (You cannot transfer data between the FOMA terminal and the microSD memory card, display data in memory or format the microSD memory card)

MTP mode.....Uses the external connector for WMA data exchange.

- : The FOMA USB Cable with Charge Function 01/02 is not connected
- : The FOMA USB Cable with Charge Function 01/02 is connected

Using the FOMA Terminal as a microSD Reader/Writer

You can connect the FOMA terminal to a PC with the microSD memory card inserted and read/write the data in the microSD memory card.

- To use the FOMA terminal as a microSD reader/writer, following devices are required.

Item	Description
Cable	FOMA USB Cable with Charge Function 01/02 (optional)
PC	PC with USB port (compliant with the Universal Serial Bus Specification Rev1.1) compatible with the FOMA USB Cable with Charge Function 01/02 (optional)
Supported OS	Windows 2000, Windows XP, Windows Vista (Japanese edition)

1 USB mode setting screen (p.251) ▶ “microSD mode”

When set to “microSD mode”,  appears.

2 Connect the FOMA terminal and a PC with the FOMA USB Cable with Charge Function 01/02

The  icon is displayed.

The microSD memory card is displayed in My Computer window on the PC as a storage memory (external storage device).

To remove the FOMA USB Cable with Charge Function 01/02 from the PC, follow the safe removal procedure on each OS.

Important

- Ensure that the FOMA terminal and PC are properly connected. An improper connection could not only prevent data exchange but also result in the loss of data.
- Attempting to exchange data when the FOMA terminal's battery level is low or empty could not only prevent data exchange but also result in the loss of data. Make sure that the FOMA terminal's battery is charged enough. Also, check the power of PC.
- Do not remove the FOMA USB Cable with Charge Function 01/02 when the Communication indicator flashes while copying the data from the PC to the FOMA terminal. This may prevent not only data exchange but also result in the loss of data.

Setting How to Print Images Stored on the microSD Memory Card

<DPOF setting>

You can set DPOF (Digital Print Order Format) to the images stored in the microSD memory card.

- DPOF is a format to print the images shot by digital camera.
- When you save still images shot with the FOMA terminal to a microSD memory card, and specify still images to print, the number of sheets, etc., you can print the images on a DPOF-compatible printer or in a print service shop.

1 Folder list screen (p.227) ▶ “microSD” ▶ “Picture” ▶ Select a folder (FUNC) ▶ “DPOF setting”

■ To use DPOF set One

Move the frame to the image you want to set on the image list screen or select the image to display the My picture screen. When you select the My picture function menu, go to Step 3.

2 Select the setting

DPOF set One.....Sets the print settings for one image.

DPOF set Choice.....Selects images to set DPOF settings. “About multiple-choice” → p.39

3 “Print” ▶ Select any item:

Print Sheets.....Enters the number of sheets (01 to 99) to print.

a date.....Selects whether to stamp the date.

■ To cancel the print setting of the selected image

▶ “Print OFF”

■ To cancel the print setting of all the stored images

▶ "All print OFF"

4 (Finish)

NOTE

- You can set the DPOF setting up to 999 images. However, you cannot print up to the specified number depending on the printer.
- You cannot set the DPOF settings for following images:
 - An image whose width or height exceeds 2,592 dots
 - An image whose total number of dots exceeds $2,592 \times 1,944$ dots
 - An image whose file size exceeds 2M bytes
 - A progressive JPEG image whose width or height exceeds 854 dots
 - A progressive JPEG image whose total number of dots exceeds 854×480 dots
- You may not be able to set the DPOF setting when the space is not enough on the microSD memory card.
- You can check the number of sheets you set in "Image info".

Working with Folders and Files

You can add folders to each folder/microSD folder list screen of the Data Box to organize the files.

■ Movable contents folder

- For Music, you can use the function menus "Add folder", "Edit folder name", "Delete folder" and "Memory info" of the following "[FUNC] Folder list" screen.
- For i-motion, you can use the same function menus as the following "[FUNC] microSD folder list" screen.

Creating, editing and deleting folders

[FUNC] Folder list screen

Add folder.....Enters a folder name to add a folder. You can enter up to 10 double-byte or 20 single-byte characters.

Edit folder name.....Edits the folder name of the added folder.

You can enter up to 10 double-byte or 20 single-byte characters.

Add shortcut*1 → p.100

Delete folder.....You can also delete a folder that stores data.

- For Music, select the deleting method from "Delete this/Delete selected/Delete all" after entering your security code.

"About multiple-choice" → p.39

Delete all*2,3.....Deletes all the stored data. Note that the data saved in the secret folder are not deleted.

Edit playlist*4.....Starts editing the playlist.

"Playing melodies in your preferred order" → p.242

Release playlist*4.....Releases the playlist.

Memory info.....Displays the amount of the stored data.

*1: It is only available in the Music.

*2: "Delete all image" is for My picture, and "Delete all" is for i-motion and Melody.

*3: Not available for Music, movable contents folder of Music and Music&Video Channel.

*4: Available only when the playlist folder of Melody is highlighted.

NOTE

<Add folder>

- The maximum number of folders of the movable contents folder is 65,535 and the maximum number of files that can be stored in a folder is 65,535.

<Delete folder/Delete all image/Delete all>

- If you try to use "Delete folder", "Delete all image" or "Delete all" to delete an image or movie that has been set in a display, original animation or user icon of Schedule, or if you use "Delete folder" or "Delete all" to delete a melody that has been set as a ring tone or alarm or set in a playlist or random melody, the corresponding feature (display, etc.) changes as follows:

- The screens, ring tone and alarm settings are reset to the default.
- The original animation, playlist and random melody are canceled.
- The alarm notification screen for the schedule switches to the screen on which you set "⌚".

[FUNC] microSD folder list screen (p.248)

Edit folder name*1.....Edits the folder title.

You can enter up to 31 double-byte or 63 single-byte characters.*2

Create folder*1.....Enters a folder name to create a folder. You can enter up to 31 double-byte or 63 single-byte characters.*2

Delete folder.....Deletes a folder.

Memory info.....Displays the amount of the stored data.

*1: Not available for "Image Box" or "Decorate PI".

*2: You can enter up to 10 double-byte or 20 single-byte characters for i-motion movable contents folder or Melody.

NOTE

- When you attempt to access the data in the microSD memory card while i-appli saves data to the microSD memory card, a message appears notifying that you cannot operate the card.

<Create folder>

- You cannot create folder in the "Image Box" or "Decorate PI" on the FOMA terminal. You can create these folders on a PC, etc.

When the memory is insufficient or there are too many stored items

When you try to save the photographed still images, movies or downloaded data, a message appears asking whether to delete some unnecessary data to save the new data. To save the new data, delete unnecessary data.

1 Select "YES" on the message

- Not to save the data
- "NO"

2 Select a folder ▶ Select data to be deleted

Some data co-use the storage area, select which data is to be deleted before selecting a folder.

3 (Finish) ▶ "YES"

- (Finish) is not displayed until enough memory is allocated to save the data.

Managing the Phonebook and SMS on the FOMA Card

<UIM operation>

You can exchange phonebook or SMS data between the FOMA terminal (Phone) and the FOMA card (UIM). You can also delete SMS data or phonebook entries stored on the FOMA terminal (Phone) or FOMA card (UIM).

- You cannot send/receive a voice/videophone call or i-mode mail while copying or deleting data. Also, you cannot activate other functions.
- You cannot copy items that cannot be stored in the UIM phonebook.
Items and number of entries that can be copied
→ p.76
- You can save the received SMS and sent SMS up to 20 in total on the FOMA card (UIM).

Copying or deleting the phonebook entry or SMS from the main menu

<Example: To copy the phonebook entry or SMS>

1 MENU ▶ "LifeKit" ▶ "UIM operation" ▶ Enter your security code

When you enter your security code, " " appears and communication such as incoming calls becomes unavailable. If you receive a call or other communication before entering your security code, the UIM operation ends.

2 "Copy"

- To delete
- "Delete"

3 "Phone → UIM" or "UIM → Phone"

- To delete
- "Phone" or "UIM"

4 Select any item:

Phonebook.....Searches and displays the phonebook list screen.

How to search the phonebook → p.79

SMS.....Selects the SMS data.


Inbox.....Displays the Inbox list screen.

Outbox.....Displays the Outbox list screen.

5 Use to select a checkbox () ▶

(Finish) ▶ "YES"

Select "YES" one more time when you copy the phonebook from the FOMA terminal (Phone) to the FOMA card (UIM).

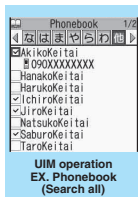

Function menu ▶ p.254

FUNC UIM operation screen (p.254)

- For the phonebook, available functions vary depending on the selected tab, etc.

Start copy¹.....Starts copying operation.

Start deletion².....Starts deleting operation.

Select this.....Selects the data.

Select all.....Selects all the data.

Release this.....Deselects the selected data.

Release all.....Deselects all the data.

Detail.....Displays the data details.

*1: Available only with the copy screen.

*2: Available only with the delete screen.

Copying a phonebook entry from the phonebook detail screen

1 Phonebook detail screen (p.79)▶

 (FUNC)▶“Copy to UIM” or “Copy from UIM”▶“YES”

The menu displayed when  (FUNC) is pressed depends on where to save the phonebook entry (to the FOMA terminal or the FOMA card (UIM)).

Moving or copying SMS from the mail screen

- You can perform the UIM operation on the mail screens from the function menus of received mail list/detail screens and sent mails list/detail screens.

<Example: To move or copy received SMS on the FOMA terminal to the FOMA card (UIM)>

1 Received mail list screen (pp.180, 181)▶ ▶Highlight SMS

2 (FUNC)▶“UIM operation”▶“Move to UIM” or “Copy to UIM”▶“YES”

■ To move or copy received SMS on the FOMA card (UIM)

▶“Move from UIM” or “Copy from UIM”
Move or copy to the “Inbox” folder.

NOTE

<Phonebook>

- Copying the phonebook from the FOMA terminal (Phone) to the FOMA card (UIM) converts “katakana” included in name and reading to double-byte. You can copy up to 10 double-byte or 21 single-byte characters for name and up to 12 double-byte or 25 single-byte characters for reading, and remaining characters are not copied.
- As the number of phone numbers and e-mail addresses that can be stored in a single phonebook entry on the FOMA terminal (Phone) and FOMA card (UIM) is different, the second and subsequent phone numbers/e-mail addresses stored on the FOMA terminal (Phone) cannot be copied to the FOMA card (UIM).
- As the types of characters that can be used on the FOMA terminal (Phone) and FOMA card (UIM) are different, some characters may be converted to spaces or other characters.
- Phonebook entries stored as secret data cannot be copied using this function even when the FOMA terminal is set to “Secret mode” or “Secret data only mode”.
- If the same group names are set on the FOMA terminal (Phone) and the FOMA card (UIM), the phonebook group settings are retained. If there is no group with the same name, the entries are stored in “No Group”.

<SMS>

- Copying the sent SMS will also copy the SMS report saved for the sent SMS. You cannot copy the SMS report only.
- You cannot protect SMS moved or copied to the FOMA card (UIM). If you move or copy protected SMS to the FOMA card (UIM), the protection is removed from the SMS on the FOMA card (UIM). “Replied to” or “Transferred” icon is also changed to “Read”.
- When an SMS for Number B of 2in1 is moved or copied, it is saved as an SMS for Number A.

Infrared Data Exchange/iC Communication

You can exchange the data such as phonebook entries and received mails with other devices with the Infrared data exchange or iC communication function.

- Data exchange function of the FOMA terminal via the Infrared data exchange/iC communication conforms to the IrMC1.1 standard. However, you may not be able to forward data depending on the other party's device or the application even when IrMC1.1 is supported.
- You can forward the data one by one or all data at one time.
- You can forward the data as shown in the **Table 2** (p.256).

Note on forwarding data

- You cannot forward data while Dial lock, Self mode, Omakase Lock or Keypad lock is set. Also, you cannot use the iC communication when IC card lock is set.
- You cannot receive the phonebook data while Restrict dialing is set. However, you can send the phonebook data which is set to "Restrict dialing" and personal data of My Profile when sending the phonebook data.
- You may not be able to forward data depending on the status of the other party's device. Also, depending on the model of the other party's device, it may not reflect the settings of the received mail or bookmark folder tree, or it may not receive the Deco-mail correctly.
- The FOMA terminal is set to Out of Area during the data exchange, which means you cannot make/receive a voice/videophone call or use i-mode, i-mode mail, packet communication or 64K data communication. Also, the FOMA terminal may remain the status of Out of Area for a while after the data exchange.
- It may take time to exchange data depending on the amount of data. Also, you may not be able to receive data.

- The progress bar indicates the number of sent data. A large amount of data may slow down the progress indicator or it may look different between the parties even when the data are being exchanged successfully.

Sent/received data

- The data received on the FOMA terminal is saved as shown in the **Table 2** (p.256).
- The FOMA terminal may not properly receive some symbols or pictographs entered in mail or phonebook.
- You cannot send or receive:
 - UIM phonebook, SMS
 - Frame or stamp data (can be received only)
 - Melody, still image, movie and i-motion with FOMA card operational restriction
 - Data in the Secret folder
- You cannot receive:
 - Neither JPEG, GIF nor SWF Flash movie
 - Movie other than MP4 or 3GP
 - Still image, movie, i-motion and melody whose image size or file size exceeds the capacity of the FOMA SO705i

[Table 2] Where to store the forward and received data

Data	Receive one	Receive all
Still image, melody	The first in the Inbox folder	(Cannot send all at once)
Movie (i-motion)	In date order in Inbox folder	(Cannot send all at once)
ToruCa, ToruCa (detail)	The first in the ToruCa folder	Replaced with ToruCa of the sender
Phonebook, My Profile	The smallest memory number available between "010" and "999" (If none of the numbers above is available, it is saved under the smallest memory number available between "000" and "009")	Replaced with Phonebook of the sender (My Profile data is sent, and the data stored in "My Profile" (except for the phone number) is replaced)
Schedule	In the date order of the received schedules	Replaced with Schedule of the sender
To Do list	The first in the To Do list	Replaced with To Do list of the sender
Received mail, Sent mail	The Inbox/Outbox folder in the date order of mails	Replaced with Outbox/Inbox of the sender
Draft mail	The Draft box in the date order of mails	Replaced with Draft of the sender
Text memo	The first <Not recorded>	Replaced with Text memo of the sender
Common phrases	The first <Not recorded>	Replaced with Common Phrases of the sender
Own dictionary	The first in the Own dictionary	Replaced with Own dictionary of the sender
Bookmark (i-mode, Full Browser)	The first in the Bookmark folder	Replaced with Bookmark of the sender

- You can send/receive up to 9 double-byte or 18 single-byte characters for titles of still images, movies and i-motion, and up to 25 double-byte or 50 single-byte characters for titles of Melody. If the length of the title exceeds the maximum, the exceeding part is deleted.
- If you receive all the still images, all the images stored in the phonebook are deleted.
- Note the following when you transfer the phonebook data:
 - The secret code cannot be forwarded.
 - When you transfer one data of the phonebook stored as the secret data, the secret setting is canceled when transferred.
 - The still images stored in the phonebook you receive are stored in the Inbox folder of "My picture". However, if the amount of data exceeds the storage limit of "My picture", the exceeding images are deleted and the phonebook is stored.
- Note the following when you transfer the mail data:
 - Some phones may be unable to receive a part of a subject.
 - When receiving all the mails, the mails are received after deleting all the mails and user-created folders.
 - If there is not enough space in the Inbox when receiving one received mail, mails are deleted automatically in the order of old received mails. However, unread mails, protected received mails, i-mode mails and SMS in the secret folder are not deleted. It is recommended to protect mails you want to keep.
 - If there is not enough space in the Outbox when receiving one sent mail, the oldest unprotected sent mail in the Outbox is overwritten.
 - When there is an attached file whose downloading is not completed, the mail is sent after the attached file is deleted.
 - When the i-appli launch information or mail-connected i-appli information is pasted into the mail, the mail is sent after the pasted data is deleted. When the data attached to the mail is set to "File restricted", the mail is also sent after the data is deleted. Also, a still image may be deleted depending on the file format. However, when sending sent mails or draft mails, the data received via cable connection or copied from the microSD memory card are sent even when they are set to "File restricted".
 - You cannot transfer the received mail folder and sent mail folder of the mail-connected i-appli. All the mails in the folder are saved to the Inbox or Outbox.

- The setting of "Color coding" set in the received mail list screen or sent mail list screen cannot be transferred.
- When using the Infrared data exchange, a mail larger than 2M bytes may not be sent correctly.
- When original common phrases already fill in Folder 9 ("Original") and fixed common phrases in Folder 1 to 8 have not changed since the time of purchase, received common phrases will be stored in Folder 1 to 8, overwriting the fixed common phrases.
- The data may not be saved in the same order depending on the model of the sender when transferring all bookmarks.

Session number


- Transferring all requires the session number to authenticate the sender and recipient. Before sending or receiving, the sender and recipient should agree on a 4-digit number as the session number and then both enter the same number.

Forwarding Data with Infrared Data Exchange

<Infrared data exchange>

When you forward data by Infrared data exchange

- Place the devices so that the Infrared data ports are aligned on the same level and facing each other.
- Do not move the devices until the confirmation message about completing the exchange appears. Also, do not place anything between the devices or cover the Infrared data ports.
- The devices may not communicate successfully if they are placed in direct sunlight, directly under a fluorescent light, or close to other infrared equipment.

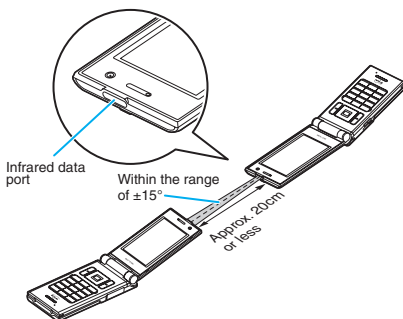

Transferring one data at a time using the Infrared data exchange

<Send/Receive Ir data>

You can exchange one data at a time with other devices using the Infrared data exchange function.

● Sending one data

Select "Send Ir data" from the function menu of Data list screen or detail screen. When you send the data of JPEG, you can select High-speed Ir send (IrSS).

<Example: To send one image>

1 My picture screen (p.227) ► [FUNC] (FUNC) ► "Send Ir data" or "IrSS"

■ IrSS

JPEG image can be also sent by [IrSS] (IrSS).

2 Set the receiving device ready to receive

3 Direct the Infrared data port toward the other part's device ► "YES"

The data transmission starts.

When the data is sent, a notification message about completing the exchange appears.

■ To cancel sending

► "NO"

■ To exit during sending

► [Quit] (Quit)


NOTE

- When you select "IrSS", the sender may be completed correctly even though the other party cannot received the data correctly.

● Receiving one data

1 [MENU] ► "LifeKit" ► "Receive Ir data"

The "Receive Ir data" screen appears.

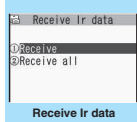

Function menu p.258

2 "Receive" ► Direct the Infrared data port toward the other party's device Receive data from the other party's device

The data reception starts.

3 "YES"

When the received data is saved, a notification message about completing the save appears. The received data is discarded if no operation is performed for about 30 seconds after it is received.

■ To exit during the receiving

► [Quit] (Quit)

■ When you do not save the received data

► "NO"

[FUNC] Receive Ir data screen (p.258)

Add shortcut → p.100

Transferring all data at a time using the Infrared data exchange

<Send/Receive all Ir data>

You can exchange all data at a time with other devices using the Infrared data exchange function.

- When you receive all, all the data on the FOMA terminal is overwritten by the received data and stored data are deleted including protected mails and secret data of the phonebook or schedule. However, frames and secret data in the secret folder are not deleted. Check if there is an important data before receiving all the data.
- Transferring all may change the order of data on the recipient.

● Sending all data at a time

Select "Send all Ir data" from the function menu of Data list screen or detail screen.

<Example: Send all data stored in the phonebook>

1 Phonebook list screen (p.79) ► [FUNC] (FUNC) ► "Send all Ir data"

2 Enter your security code ► Enter session number

"Session number" → p.257

3 Set the receiving device ready to receive

4 Set the receiving device ready to receive ► "YES"

Transmission of all data starts.

When the data is sent, a notification message about completing the exchange appears.

■ To cancel sending all data

► "NO"

■ To exit during sending

► [Quit] (Quit)


● Receiving all data at a time

- 1 **Receive Ir data screen (p.258)▶**
“Receive all”
- 2 **Enter your security code▶Enter session number**
“Session number”→p.257
- 3 **Direct the Infrared data port toward the other part's device▶“YES”**
■ To cancel receiving all Ir data
▶“NO”
- 4 **Select “YES” when the overwrite confirmation screen appears**
■ To cancel receiving all Ir data
▶“NO”
- 5 **Receive all data from other party's device**
All the data reception starts.
When the received data is saved, a notification message appears indicating that the communication is completed.
■ To exit during the receiving
▶ (Quit)

Forwarding Data with iC Communication <iC Communication>

When transferring data using the iC Communication

- Place the FeliCa mark “” on the FOMA terminal (sender) over the FeliCa mark “” on the FOMA terminal (receiver).
- Data transmission may not be smooth depending on the FOMA terminal of the other party. Move FOMA terminals so that the FeliCa marks “” of the sender and the receiver get close or distant, or move them to the right, left, up and down.

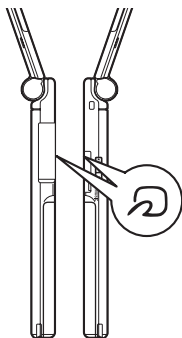

Transferring one data at a time using the iC communication

<iC transmission/Touch to receive data>

You can exchange one data at a time with other devices using the iC communication function.

● Sending one data

Select “iC transmission” from the function menu of Data list screen or detail screen.

<Example: Send one phonebook data>

- 1 **Phonebook detail screen (p.79)▶**
 (FUNC)▶“iC transmission”
- 2 **Put the FeliCa mark “” close to the FeliCa mark “” of the other party▶ “YES”**
The data transmission starts.
When the data is sent, a notification message about completing the exchange appears.
■ To cancel sending
▶“NO”
■ To exit during sending
▶ (Quit)

● Receiving one data

- 1 **Put the FeliCa mark “” close to the FeliCa mark “” of the other party▶ Perform the operation to send the data from the FOMA terminal of the other party**
The data reception starts and the progress bar appears.
- 2 **“YES”**
When the received data is saved, a notification message about completing the save appears. The received data is discarded if no operation is performed for about 30 seconds after it is received.
■ To exit during the receiving
▶ (Quit)
■ When you do not save the received data
▶“NO”

Transferring all data at a time using the iC communication

<iC trans. all/Touch to receive all>

You can exchange all data at a time with other devices using the iC communication function.

● Sending all data at a time

Select "iC trans. all" from the function menu of list screen or detail screen of the data you want to send all.

<Example: Sending all the phonebook data>

1 Phonebook list screen (p.79)▶ ☑ (FUNC)▶ "iC trans. all"

2 Enter your security code▶ Enter session number

"Session number"→ p.257

3 Put the FeliCa mark "📶" close to the FeliCa mark "📶" of the other party▶ "YES"

Transmission of all data starts.

When the data is sent, a notification message appears indicating that the communication is completed.

■ To cancel sending all data

▶ "NO"

■ To exit during sending

▶ (Quit)

● Receiving all data at a time

1 Put the FeliCa mark "📶" close to the FeliCa mark "📶" of the other party

2 Perform the data sending operation of all data from the FOMA terminal of the other party

3 Enter your security code▶ Enter session number

"Session number"→ p.257

4 Select "YES" when the overwrite confirmation screen appears

The data reception starts and the progress bar appears.

When the received data is saved, a notification message appears indicating that the communication is completed.

■ To quit receiving data

▶ "NO"

■ To exit during the receiving

▶ (Quit)

Forwarding Data by Cable Connection

<OBEX™ connection>

By connecting the FOMA terminal and your PC with the FOMA USB Cable with Charge Function 01/02 (optional), you can exchange various data such as phonebook entries or images.

- When you exchange data using the FOMA USB Cable with Charge Function 01/02 (OBEX™ connection), you have to install "ドコモケータイdatalink" (DoCoMo keitai datalink) (p.326) and "FOMA通信設定ファイル" (FOMA Communication Setting File) in the provided CD-ROM.
- For details such as installing the "ドコモケータイdatalink" (DoCoMo keitai datalink), refer to the download page of the software. For details on data exchange, refer to the help files of the software.
- For details on installing "FOMA通信設定ファイル" (FOMA Communication Setting File) and the operational environment, refer to "PC Connection" chapter and "Manual for PC connection setting" (PDF format) in the provided CD-ROM.
- Set "USB mode setting" to "Communication mode" before transferring data.

■ Important

- Ensure that the FOMA terminal and PC are properly connected. An improper connection could not only prevent data exchange but also result in the loss of data.
- Attempting to exchange data when the FOMA terminal's battery level is low or empty could not only prevent data exchange but also result in the loss of data. Make sure that the FOMA terminal's battery is charged enough. Also, check the power of PC.
- All the data on the FOMA terminal may be erased if an error occurs while forwarding all from PC to the FOMA terminal. Before forwarding all, check the cable connection, the battery level of the FOMA terminal and the power of PC.

Barring Phonebook Image Forwarding

<Forwarding Image>

When you use the Infrared data exchange, iC communication, copying to microSD memory card function or data exchange (OBEX™ connection) to transfer phonebook data, you can prevent transferring still images stored in the phonebook.


- 1  "LifeKit" > "Forwarding image" > "OFF"
- To forward
▶ "ON"

Using the Infrared Remote Control Function

- To use the remote controller function, download the software according to the device you use (the key operations of the remote controller vary depending on the software).
- "Gガイド番組表リモコン" (G-GUIDE program guide remote control) is pre-installed at the time of purchase. → p.204
- The remote operation may not be possible depending on the device.
- You cannot use the Infrared Remote Control during the Self mode.

Using remote control

- Point the infrared data port of the FOMA terminal directly at the remote control sensor on the TV, etc. and operate the FOMA terminal as a remote control. The remote control is effective within about 4 meters away from the device. This may vary depending on the ambient light level.

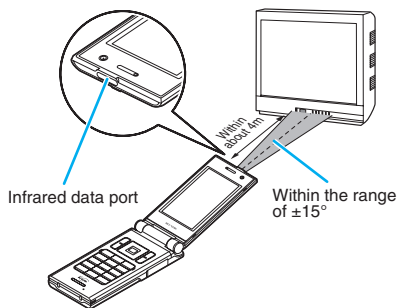

Music&Video Channel/ Music Playback

■ Music&Video Channel

Music&Video Channel	264
Setting Up Program	264
Playing Program	266

■ Music

Downloading and saving Chaku-Uta-Full® from a Site	268
Playing Music	269
Using the Playlist	271
Saving the WMA Data on the microSD Memory Card	272

■ Music Player

Using the Music Player	Music Player 273

Handling the music data

- In this manual, Chaku-Uta-Full® and Windows Media Audio (WMA) file are described as “Audio data”.
- You can play Windows Media Audio (WMA) file and Chaku-Uta-Full® that are protected by the copyright protection function on the FOMA terminal.
- When downloading the music data from websites, carefully read the use condition (permission and prohibition act, etc.).
- Windows Media Audio (WMA) file that is protected by the copyright protection function plays with the specific information to your FOMA terminal. When the specific information in your FOMA terminal is changed caused by malfunction, repair or model change, Windows Media Audio (WMA) file saved before changing information may not be played.
In the above case, transfer WMA files from your PC after deleting all WMA data in the FOMA terminal.
- Note that NTT DoCoMo accepts no liability whatsoever for handling of the copy control CD (CCCD) and the music data that cannot be saved as a Windows Media Audio (WMA) file.
- You can enjoy the music stored in the microSD memory card and the FOMA terminal (Phone) within personal use. Take care not to infringe on the third party's intellectual property right such as copyright. Do not copy or move the music data in the microSD memory card and the FOMA terminal (Phone) on a PC or other media.

Music&Video Channel

Music&Video Channel is a service that a music program of up to 1 hour is automatically distributed during the night only by setting your favorite channel in advance. You can also enjoy the movie programs in high quality of up to 30 minutes. The program is updated regularly and you can enjoy the distributed program anytime such as during commuting time to work or school.

■ Notes on using Music&Video Channel

- Music&Video Channel is a pay service you need subscription (you need to subscribe to i-mode and Pake-Houdai/Pake-Houdai full beforehand).
- Some programs may charge you an information fee besides the Music&Video Channel service charge.
- For details on Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- After you subscribe to the Music&Video Channel service, when inserting the FOMA card to a Music&Video Channel incompatible FOMA terminal, you cannot use the service. Even in this case, note that you would be charged the service fee unless you unsubscribe from the Music&Video Channel.
- You cannot set or download Music Channel during international roaming*. Stop the distribution before you go abroad. Restart the distribution service after you come back. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

* : Note that the packet communication charges for the i-mode connection when you attempt to set or download programs during international roaming.

■ BGM play (Background play)

You can view i-mode sites or mails while playing a Music&Video Channel program. → p.276

Setting Up Program

When you set a desired program beforehand, the program data is automatically delivered at night.

1 MENU ▶ "MUSIC" ▶ "Music&Video Channel"

The "Music&Video Channel" screen appears.



Music&Video Channel
Function menu ▶ p.266

2 "Set program" ▶ Set up a program following the on-screen instructions

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

NOTE

- You can set 2 program for Music Channel at a time.
- You need to add a site providing Music&Video Channel programs to My Menu (p.151) before setting a program.
- When you have not subscribed to the Music&Video Channel service, the message notifies you that the service is not subscribed. When you select "Music&Videoチャンネルのお申し込みへ" (Subscribe to the Music&Video Channel) on the screen, you can subscribe to the Music&Video Channel service.

● Checking/canceling the program setting

1 Music&Video Channel screen (p.264) ▶ "Set program" ▶ Follows the guidance on the screen to operate

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

NOTE

- Resetting the program does not delete the added My Menu.

After setting up the program

- “” appears on the standby screen 12 hours before the downloading starts.



- The program is automatically downloaded at night, and the shortcut icon “” indicating Music&Video Channel is updated appears after successful downloading. The shortcut icon “” indicating Music&Video Channel is not updated appears when the downloading fails. In this case, you can download the program manually. → p.265



NOTE

- If the communication is interrupted, the FOMA terminal attempts to resume the downloading up to 5 times at 3-minute intervals.
- You can save 2 program. When a new program is downloaded, the previously downloaded program is deleted and you cannot play it. Save the program to the Data Box if you do not want to lose. → p.266
- You cannot copy the downloaded program.
- You cannot save the downloaded program to the microSD memory card.
- Since downloading a program may take time, make sure that the FOMA terminal is fully charged and used in an area where the signal status is good.
- Downloading failure is caused by the following reasons: “out of the service area”, “the terminal is turned off”, “no sufficient battery”, or “combination of Multitask/Multi access”, etc. In case that the downloading is failed for those reasons, the FOMA terminal will download the program at the next night. When download is interrupted, the FOMA terminal may not download the program.
- The FOMA terminal cannot download a program automatically when you insert a different FOMA card or after you initialize the terminal. Set programs again from the Music&Video Channel screen.
- When you eject the FOMA card from the FOMA terminal that you set the program, and insert the card into other Music&Video Channel compatible FOMA terminal, the program is not downloaded automatically. When you select “Set program” on the Music&Video Channel screen, the FOMA terminal updates its program settings automatically and the program can be downloaded automatically.
- The program data in the program folder may be deleted when subscription to Music&Video Channel or i-mode is canceled.

Guide to the icons on the Music&Video Channel screen

Icon	Description
	The normal program
	The program corresponding to a synchronized play with a broadcasting wave
	Program downloaded in failure
	The program downloaded from sites
	Program included information for site access (URL)
	The program which has not been played

- : Partially downloaded program
- : Program with playback restriction (the icon turns to more light color overall, and then “ (gray)” turns to “ (red)” when the playback count, period or limit expires)

Downloading a program manually

When the download of Music Channel is failed, you can download the program manually.

1 Music&Video Channel screen (p.264) ▶ Select a program ▶ “YES”

NOTE

- The shortcut icon indicating that update of Music&Video Channel is failed disappears once you display the “Music&Video Channel” screen. You can manually download a program that you failed to download even if the shortcut icon disappears.
- When download is interrupted, the partly downloaded program until the interruption can be saved. You can operate the FOMA terminal to resume downloading for the remaining data except during specific hours.
- You cannot re-download a program whose playback restrictions have expired. You cannot update until the next distribution date.
- During certain hours of a day, you may not be able to download a program manually.

Chapter list.....Displays the list of title, artist and playback time of each chapter.

Select a chapter to play it *1. "Chapter list" → p.266

Move program.....Select a folder, and move the program to the user-created folder of the Music&Video channel in the Data Box*2.

Program info.....Displays the program title, the play count, time limit, or period.

Program image.....Displays the images stored in the program*3.

Connect to URL.....Accesses the site using the Web To function if the URL is included in the program.

Add shortcut → p.100

Delete.....Deletes a program.


*1: You cannot select the chapter of which all of the data are not downloaded.

*2: You can not move the partially downloaded program and the program corresponding to a synchronized play with a broadcasting wave.

*3: When an animation GIF image is stored, the animation is played. You cannot save program images.

● Chapter list

Select "Chapter list" on the function menu of the Music&Video Channel screen to display the chapter list of the program.

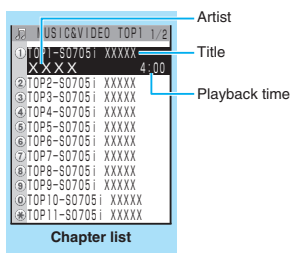

Function menu → p.266

Chapter info.....Displays the chapter title and the playback time.

Chapter image.....Displays the images stored in the chapter*.

Connect to URL.....Accesses the site using the Web To function if the URL is included in the program.

*: When an animation GIF image is stored, the animation is played. If the program is made up of i-motion, the image is not displayed. Note that images stored in the chapters cannot be saved.

Playing Program

1 Music&Video Channel screen (p.264) ▶ Select the program

The "Music player" screen appears and the music playback starts.

"Guide to music player" screen → p.273

"Operations on the music player" screen → p.274

NOTE

- When earphones are connected, the sound comes only from the earphones regardless of the "Headset usage setting".
- When you select the program that you stop the playback last time, the playback starts from the beginning of the chapter where you stop the playback.
- Some programs have playback restrictions. "FOMA" is displayed at the beginning of the title for the program with restrictions on the play count, period or time limit. The program restricted on the playback period cannot be played before or after the period. If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case, the program restricted on the playback period or time limit cannot be played.

● The program corresponding to a synchronized play with a broadcasting wave playback

When you play the program, you can play the same content with a broadcasting wave by accepting the synchronization that flows by the broadcasting wave.

- The program must be downloaded beforehand.
- You can play the program in the same way with a usual program, but it cannot be played before or after the playback period.

NOTE


- The playback time is connected with the time setting by the auto time adjust function, so that the playback time cannot be changed even if you manually change the time and date on the FOMA terminal.
- You cannot play the partially downloaded program.

Playing the program in the Data Box

1 MENU ▶ “Data Box” ▶ “Music&Video Channel”

The “Folder list” screen appears.


The Music&Video Channel folder → p.226

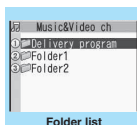

Function menu ▶ p.253

2 Select a folder

The “Program list (Preview)” screen appears.
Guide to the program list screens → p.267

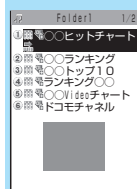


Function menu ▶ p.267

3 Select the program

The “Music Player” screen appears and the program playback starts.

Guide to the Preview screen/Title list

- The icon for the Program list screen → p.265

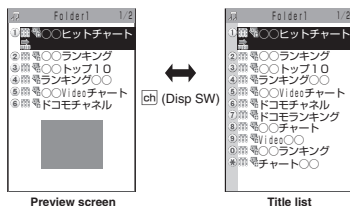

■ Preview screen

The screen displays 6 movies listed by title and a preview image from the selected movie under the titles.

■ Title list

The titles of the 11 programs are listed and displayed on the screen.

FUNC Program list screen (p.267)

Chapter list.....Displays the list of title, artist and playback time of each chapter.

Select a chapter to play it *1. “Chapter list” → p.266

Edit title.....Edits the program title.

Move program *2.....Select a folder, and move the program to the user-created folder.

Move *3.....Selects from “Move this/Move selected/Move all” and moves the program to the other folder you select. “About multiple-choice” → p.39

Program info.....Displays the program title, the play count, time limit, or period.

Program image.....Displays the images stored in the program. *4

Sort.....Sorts programs by the specified criteria.

List setting.....Specifies how to list the programs.

Connect to URL.....Accesses the site using the Web To function if the URL is included in the program.

Memory info.....Displays the amount of the stored program.

Reset title.....Resets the title to the default.

Delete *2.....Deletes a program.

Delete *3.....Selects the deleting method from “Delete this/Delete selected/Delete all”.

“About multiple-choice” → p.39

*1: You cannot select the chapter of which all of the data are not downloaded.

*2: Available only with the program folder.

*3: Available only with the user-created folder.

*4: When an animation GIF image is stored, the animation is played. You cannot save program images.

Downloading and saving Chaku-Uta-Full® from a Site

- You can store up to 100 Chaku-Uta-Full® on the FOMA terminal (the actual number of data to be stored may be lower depending on the stored file size of various data).

1 Sites screen (p.146) ▶ Select Chaku-Uta-Full®

When data downloading is completed, the “Data acquisition” screen appears.

■ To cancel downloading

▶ [CLR]

■ To play the downloaded Chaku-Uta-Full®


▶ “Play”

“Guide to music player” screen → p.273

“Operations on the music player” screen → p.274

■ To display information about Chaku-Uta-Full®

▶ “Property”

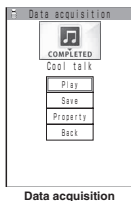

2 Data acquisition screen (p.268) ▶ “Save” ▶ “YES”

■ When only a part of the data can be saved

When downloading is interrupted because of the signal condition or when the downloading is quitted, you may be able to save the downloaded portion only. In such a case, you can save only the downloaded portion.

■ To cancel the saving

▶ “NO”

3 Select a destination folder

NOTE

- Some Chaku-Uta-Full® have the playback restrictions. “⌚” is displayed at the beginning of the title for the Chaku-Uta-Full® with restrictions on the play count, period or time limit. The Chaku-Uta-Full® restricted on the playback period cannot be played before or after the period.
- If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case, Chaku-Uta-Full® restricted on the playback period or time limit cannot be played.
- You cannot download Chaku-Uta-Full® which exceeds 5M bytes or whose size is unknown.

NOTE

- You can save Chaku-Uta-Full® to the “Screen memo” using “Add screen memo” on the function menu of the data acquisition screen (p.268), then start playback from the screen memo. → p.153

● Downloading the remaining data of partially downloaded Chaku-Uta-Full®

When you select Chaku-Uta-Full® which is downloaded partially from the saved folder, a confirmation message about downloading the remaining data appears. Select “YES” to connect to the site and download the remaining data.

When you download and save all data, the partially saved data are deleted.

- Icons in the “Music list” screen indicates the data downloading status. → p.269
- If the playback period or limit of Chaku-Uta-Full® which is partially downloaded is expired, you cannot download the remaining data (except for Uta-hodai tracks). You can delete the partially saved data when downloading the data.

● Updating playback restrictions for Uta-hodai tracks

When you play a playlist or folder contains Uta-hodai tracks whose playback restrictions have expired and can be updated, a message to require the update of the playback restrictions appears. Select “YES” to connect to the site and update the playback restrictions (packet communication charge apply). When you select “NO”, you cannot play the data. When there are two or more Uta-hodai tracks whose playback restrictions can be updated, select an online music distribution site you want to update.

- Uta-hodai is music data that is allowed to play while you subscribe to the service of a contents provider. The playback period is specified by the license information downloaded with the music data. Music data whose playback period has expired can be played back again by updating the license. The license information may include playback extension period in addition to the playback period. You can play the music data without updating the playback period during the playback extension period, but the data cannot be played after the playback extension period has elapsed.
- If you download a music data without updating the playback period, the music data cannot be played until it is saved.
- The packet communication charges for the update of the playback period during international roaming is not covered by Pake-Houdai or Pake-Houdai full.

- When you perform the operation overseas, the time limit may be expired before or after other than the displayed period.
- Icons in the "Music list" screen indicates the status of the playback restrictions. → p.269
- Since updating playback restrictions is performed while connecting a site, packet communication charges will apply.
- It is recommended to initialize your FOMA terminal when you exchange the FOMA card.

NOTE


- When the Uta-hodai track which is set to the ring tone or alarm tone is disabled to be played, the default demo sound, ring tone or alarm tone is played.

Playing Music

- You can store music in a playlist and play your favorite music in your favorite order. → p.271

1 "Data Box" → "Music"

The "Folder list" screen appears.

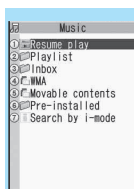

Folder list

Function menu → p.253

2 Select a folder

The "Music list" screen appears.

"Guide to Music list" → p.269

■ Search the music by i-mode

- ▶ "Search by i-mode"
- ▶ "YES"

3 Select a music file

The "Music player" screen appears and the music playback starts.

"Guide to music player" screen → p.273

"Operations on the music player" screen → p.274

■ Chaku-Uta-Full® that is downloaded partially


A confirmation message about downloading the remaining data appears. Select "YES" to download the remaining data. → p.268

NOTE

- When earphones are connected, the sound comes from the earphones even when manner mode is set. If you disconnect earphones when manner mode is set, the playback is paused.
- Some music files have playback restrictions. "⌚" is displayed at the beginning of the title for the music file with restrictions on the play count, period or time limit. The music files restricted on the playback period cannot be played before or after the period.

Guide to Music list

File type icon

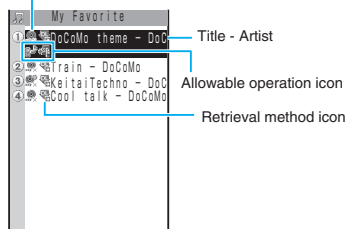

■ File type icon

Icon	Description
	Music stored on the FOMA terminal (Phone)
	Music stored on the microSD memory card and can be moved to the FOMA terminal (Phone)
	Music stored on the microSD memory card and prohibited to be moved to the FOMA terminal (Phone) * Also displayed in the Playlist music list screen of the FOMA terminal (Phone) when the microSD memory card which contains the music file stored in the playlist is not inserted to the FOMA terminal.
	Music that cannot be played or music with playback restrictions which cannot be updated
	WMA music
	Partially downloaded music
	Music to which the FOMA card operational restriction is applied

: Music with the file restriction

: Music with playback restriction ("⌚" turns to "⌚" when the playback count, period or limit expires)

Playback restrictions of music with the pale blue icon can be updated



: Playable only when the FOMA card being used was also used to save the music



: Playable only when the model and FOMA card being used were also used to save the music

Retrieval method icons

Icon	Description
OFF	Pre-installed music
	Music downloaded from a site
	Music downloaded from a PC

Allowable operation icon

Icon	Description
	Music that can be set as a ring tone
	Music that can be moved to the microSD memory card
	Music that can use the Web To function

FUNC Music list screen (p.269)

- The available functions and items listed in the function menu vary depending on the selected folder. The items are also different when searching or sorting.

Add to playlist.....Adds the music to the end of the playlist.

Create playlist→p.271

Move to microSD^{*1}→p.250

Move.....Selects from "Move this/Move selected/Move all" and moves the music to the other folder you select. "About multiple-choice"→p.39

Edit information.....Edits the title, artist name, album name, etc.

Edit disp. title.....Edits the title of music displayed on the music list screen. You can enter up to 9 double-byte or 18 single-byte characters.

Reset info.....Resets the information to the status when the "Music information" was retrieved.

Select ring tone.....Sets the music as a ring tone. →p.88

Fullsong ring tone.....Sets the whole music as a ring tone.

Point ring tone.....Selects the part of the song set as a ring tone using

Search^{*1}.....Searches music in a selected criteria.

Sort^{*1}.....Sorts programs by the specified criteria.

List setting.....Selects a music-list format from "Title/Title+image".

File property.....Display a music file name, a file save date and whether the music can be moved to the microSD memory card.

Lyric.....Displays the lyric of the music. If the lyrics cannot be displayed on a single page, you can switch the page with

Jacket image.....Displays the jacket image of the music. If there are two or more images, use to switch images.

Memory info.....Displays the amount of the stored music.

Repeat setting

OFF (default).....Does not repeat the playback.

All repeat.....Repeats the playback of all music in the folder.

Single repeat.....Repeats the playback of the music which is highlighted.

Shuffle (default: OFF).....Sets ON/OFF of the shuffle playback.

Connect to URL.....Accesses the site using the Web To function if the URL is included in the music.

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all".

"About multiple-choice"→p.39

Move to Phone^{*2}→p.250

^{*1}: Unavailable in the music list screen of the movable contents folder or WMA folder.

^{*2}: Only available for the movable contents folder.

NOTE

<Move to microSD>

- To check whether a Chaku-Uta-Full[®] can be moved, select "File property" to see the music information. Some Chaku-Uta-Full[®] are movable only among the same model.

Using the Playlist

You can store music in a playlist and play your favorite music in your favorite order.

- The number of tracks and playlists you can store on the FOMA terminal (Phone) are as follows:

Tracks	Up to 100
Playlists*	Up to 21 (including a list of all tracks)

*: You can store up to 99 tracks for 1 playlist (except for a list of all tracks).

- You can store the music (Chaku-Uta-Full®) stored on the FOMA terminal (Phone), the music (Chaku-Uta-Full®) stored on the microSD memory card and WMA data in the same playlist.

Creating a Playlist

1 Playlist list screen (p.271)/Music list screen (p.269) ▶ [FUNC] ▶ “Create playlist”

2 Select a folder ▶ Use [F2] to select [] (checkbox) ▶ [F3] (Finish)

Multiple music can be stored to a playlist.

■ Music list screen

▶ Select from “Set this/Set selected/Set all”
“About multiple-choice” → p.39

When selecting “Set all”, stores all music files in the music list screen to a playlist.

3 Enter the playlist name

The playlist is created and the “Playlist music list” screen appears.

■ To start playback

▶ [F4] (Play)

Playing a Playlist

1 Folder list screen (p.269) ▶ “Playlist”

The “Playlist list” screen appears.

■ To play the playlist immediately

▶ Highlight the playlist to play ▶ [F4] (Play)




Function menu ▶ p.271

2 Select a playlist

The “Playlist music list” screen appears.

■ When “All tracks (phone)” is selected

The playlist which contains all music (playable music files) stored on the FOMA terminal (Phone) appears.

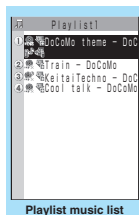

Function menu ▶ p.272

3 [F4] (Play)

The playback of the playlist starts and the music are played in the stored order.

NOTE

- When all music files stored on the playlist are deleted, the playlist is also deleted.

[FUNC] Playlist list screen (p.271)

Create playlist → p.271

Edit playlist name Edits the playlist name. You can enter up to 128 double-byte or 256 single-byte characters.

Copy to playlist Creates a copy of the playlist in the playlist list.

Search Searches music in a selected criteria.

Playlist info Displays the playlist name, number of tracks in the playlist and the playback time of the playlist.

Delete playlist Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice” → p.39

Create playlist → p.271

Edit playlist

Sort playlist Selects the position to move to and rearranges the music.

Add music Selects the playlist to move to and add the music to the last of the other playlist.
"About multiple-choice" → p.39

Release settings Selects from "Release this/Release selected/Release all" to release the music from the playlist.
"About multiple-choice" → p.39

Search Searches music in a selected criteria.

Sort Sorts music in the playlist in a selected criteria.

List setting Selects a list format from "Title/Title+image".

File property Music file name and file save date and time are displayed.

Lyric Displays the lyric of the music. If the lyrics cannot be displayed on a single page, you can switch the page with .

Jacket image Displays the jacket image of the music. If there are two or more images, use  to switch images.

Repeat setting

OFF (default) Does not repeat the playback.

All repeat Repeats the playback of all music in the playlist.

Single repeat Repeats the playback of the playing (paused) music.

Shuffle (default: OFF) Sets ON/OFF of the shuffle playback.

Connect to URL Access the site using the web to function if the URL is included in the music.

NOTE

<Edit playlist>

- Releasing music from the playlist does not delete the original data.

Saving the WMA Data on the microSD Memory Card

"Windows Media Player" enables you to convert the music CD data to WMA data and save it on the microSD memory card.

- The data format, number of playlists and tracks that can be played on the FOMA terminal are as follows:

File format	WMA9 (Windows Media Audio 9 Standard)
Bit rate	32 to 192 kbps
DRM	Windows Media DRM10 for Portable Devices
Tracks	Up to 999
Playlists*	Up to 100 (including a list of all tracks)

* : Up to 999 music files can be stored on one playlist.

● Windows Media Player 10/11

Use Windows XP Service Pack 2 or a later version to use Windows Media Player 10/11. Use Windows Media Player 11 for Windows Vista. For how to operate the software, refer to Windows Media Player 10/11 help.

- If you do not have a microSD memory card, you can purchase one at your local electrical-appliance store.

1 Prepare the followings

- PC which satisfies the operational environment for "Windows Media Player"
- microSD memory card

2 USB mode setting screen (p.251) ▶

"MTP mode"

When set to "MTP mode",  "MTP" appears.

3 Connect the FOMA terminal and a PC with the FOMA USB Cable with Charge Function 01/02

 "MTP" appears when the microSD memory is inserted and the FOMA USB Cable with Charge Function 01/02 is connected during the MTP mode.

4 Launch "Windows Media Player" on the PC and convert the music data such as music CD data to WMA format

It may take some time for "Windows Media Player" to recognize the FOMA terminal.

5 Transfer WMA data stored on the PC to the microSD memory card

6 Disconnect the FOMA USB Cable with Charge Function 01/02 after the data transfer

7 Set the USB mode of the FOMA terminal back to "Communication mode"

NOTE

- You can also use the Napster® application to save the music data.
 - You can download the Napster® application from the following webpage:
<http://www.napster.jp/>
 - For detailed information on the Napster® application, visit the following webpage:
<http://www.napster.jp/support/>
- WMA data moved to the microSD memory card in another FOMA terminal may not be displayed/played on the FOMA S0705i.
- When you use a microSD memory card to which WMA data has been transferred in another FOMA terminal, it may not be recognized by the PC even though you change to MTP mode. In this case, perform "Delete all" in the function menu for WMA folder list screen, or format the microSD memory card (p.251). Note that the all data is deleted when you format the microSD memory card.
- WMA data cannot be set as the ring tone.

Using the Music Player

<Music Player>

Using the music player, you can play Chaku-Uta-Full®, i-motion, the Music&Video Channel program and music stored in the microSD memory card.


- Besides the pre-installed Chaku-Uta-Full®, you can play the i-motion or Chaku-Uta-Full® downloaded from i-mode sites, the Music&Video channel program, or music data transferred from music CDs. "Downloading i-motion" → p.161
"Downloading and saving Chaku-Uta-Full® from a Site" → p.268
"Setting Up Program" → p.264
"Saving the WMA Data on the microSD Memory Card" → p.272
- You can enjoy the stereo sound by connecting the flat-plug stereo earphone set (optional). To connect a flat-plug stereo earphone set to the FOMA terminal, the Earphone Plug Adapter for External connector terminal is required. → p.25
- When earphones are connected, the sound comes only from the earphones regardless of the "Headset usage setting".

■ BGM play (Background play)

You can use mails or display i-mode sites while listening to music with the music player. → p.276

Guide to music player screen

- Function menu for the Music Player screen → p.275
- If setting to play i-motion on the Full screen, i-motion is played on the landscape (full) screen.

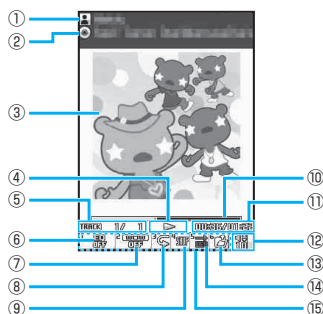

- ① Artist name
Music : Artist name
Music&Video Channel : Program title
i-motion : Creator
- ② Title
Music : Title
Music&Video Channel : Chapter title and Artist name
i-motion : Title
- ③ Image/Movie
Music : Jacket image
Music&Video Channel : Chapter image or Program movie
i-motion : Movie
- ④ Playback status
▶ : During playback
⏸ : During pause
⏭ : During fast forward
⏮ : During rewind
⏩ 5 10 15 : Slow playback
⏮ PLAY : Fast playback
- ⑤ Track
Music : Playing track number/Total number of tracks in the folder
Music&Video Channel : Playing chapter number/Total number of chapters
i-motion : Playing file number/Total number of files in the folder

⑥ Sound quality (Equalizer)

EQ OFF : OFF **Bass** : Bass amplified
Treble : Treble amplified **Treble Reducer** : Treble reduced
Pop **Jazz** **Rock** **Techno** **Classical** : Suitable for each genre

Speech : Suitable for voice

⑦ Sound effects (SRS_WOW)

WOW OFF : OFF
WOW +1 **WOW +2** **WOW +3** : Bass adjusted (+1 to +3)
WOW ((S)) : Surround
WOW +1((S)) **WOW +2((S))** **WOW +3((S))** : Bass adjusted (+1 to +3)/ Surround
WOW User1 **WOW User2** **WOW User3** : User setting 1 to 3

⑧ Repeat

Repeat : All repeat
Single Repeat : Single repeat
 No icon when OFF

⑨ Shuffle

SHUF : ON
 No icon when OFF

⑩ Playback position display


 Displays the marker in the playback position display (moving the marker with  and pressing  (Play) during pause starts playback from the position).

⑪ Elapsed time (minutes: seconds)/Total playback time (minutes: seconds)

⑫ Volume (Level 0 to Level 20)

Displays  in the Manner mode

⑬ Select the music/file/chapter

Change the music/file/chapter to play

⑭ Web To function available

Accesses the URL included in the music or program.

⑮ Setting menu → p.275

NOTE

- The sub display is available for checking the playback status with the FOMA terminal folded.

Operations on the music player screen

- The following function may not occur depending on the type of music, the program of Music&Video Channel and i-motion.

Key operation	Operation
	Pauses/resumes playback.
	Adjusting the volume
	Pray from the beginning Plays the previous music/chapter/movie when pressed within 1 second from the beginning of the music.
	Play the next music/chapter/movie*
 (1 second or longer)	Rewind
 (1 second or longer)	Fast forward
 during pause	Moves the marker in the playback position display.
 	Select the music/file/chapter to play
  	Switches the image when multiple images are stored.
	Ends
	Uses the setting menus → p.275
	Sets the Equalizer
	Sets the SRS_WOW
	Sets the Repeat
	ON/OFF for Shuffle
	Connect to URL
 	Switch the screen mode between Normal and Full screen

* : Plays the previous or next music regardless of the order in the folder or playlist during shuffle playback.

NOTE

- The volume can be selected between Level 0 and Level 20 (default: Level 10), and the setting is retained next time the i-motion is played.
- The volume set for Music Player does not affect the ring volumes set in "Ring volume".
- On the Music&Video Channel program, if some playback operations are restricted, the operations are not available (operation with , mainly).
- Rewind and Fast forward is unavailable depending on the data.

Using the setting menus

1 During Play/Pause/Stop (MENU)

The cursor moves to the setting menu.
"Guide to music player" screen → p.273

2 Use to select the function, then (Select)

You can also set the function using  to .

→ p.274
Press  to return to the play/pause/stop.

When a flat-plug stereo earphone set, etc. is connected

You can use the switch to perform the following operations:

Switch operation	Operation
Once	Play/pause each time you press the switch
Twice in a row during playback	Play the next music/chapter
Three times in a row during playback	Pray from the beginning Plays the previous music/ chapter when pressed within 3 second from the beginning of the music.
1 second or longer during playback	Quits the Music Player

Music Player screen (p.269)

- There is some unavailable functions depending on the type of music, the program of Music&Video Channel and i-motion.

Action setting

Sound effect.....Sets the sound quality and effect.

Equalizer (default: OFF).....Sets the sound quality.

SRS_WOW (default: OFF).....Add the sound effects to the i-motion (i-motion with sound effect can set → p.228).

To select the user setting

 Highlight the user setting 1 to 3

 (Detail)  Set with  (Set)

Repeat setting

OFF.....The FOMA terminal does not repeat the playback.

All repeat.....Repeats the playback of all music in the folder.

Single repeat.....Repeats the playback of the playing (paused) music.

Shuffle.....Turns the shuffle playback ON/OFF.

Screen setting.....Sets how to display the player screen.

Normal screen mode.....Plays on the portrait screen.

Full screen mode.....Plays on the landscape screen (Full screen).

Change skin.....Sets the design of the music player screen.

Set image disp......Sets the display size of images in the normal screen mode.

Normal.....Displays the image in the actual size.

Fit in display.....Displays the image fit in the screen regardless of the image size.

Set repeat play.....Specifies whether to play files continuously in the folder.

Play menu

Fast.....Plays fast. Press  (Play) to return to normal playback.

Slow.....Plays slowly. Press  (Play) to return to normal playback.

Position to play.....Specifies the part of the music moving the marker in the playback position display with  and plays only the part of the music. This function is not available depending on the music.

Chapter list.....Displays the chapter list (p.266).
Select a chapter to play it.

Detail Info

File property.....Displays a music file name, a file save date and whether the music can be moved to the microSD memory card.

i-motion info.....Displays an i-motion file name, a file save date and whether the i-motion can be moved to the microSD memory card.

Chapter info.....Displays the chapter title and the playback time.

Lyric.....Displays the lyric of the music. If the lyrics cannot be displayed on a single page, you can switch the page with .

Jacket image.....Switches the jacket image of the playing music using .

Chapter image.....Displays the images/animations stored in the played chapter.

Image.....Displayed only on i-motion, but displayed in gray and not available.

Connect to URL.....Accesses the site using the Web To function if the URL is included.

Change music.....Changes the track to play.

Select file.....Changes the file to play.

Chapter list.....Changes the chapter to play.

Help.....Displays a description of an operation assigned to a key.

NOTE

<Chapter image>

- Images stored in the chapters cannot be saved.

Using Other Functions During Music Playback

<Switch to BGM>

You can play the music and Music&Video Channel program while using other functions.

- When you connect the flat-plug stereo earphone set (optional) or the flat-plug earphone/microphone with switch (optional), etc. to the FOMA terminal, use the Earphone Plug Adapter for External connector terminal. → p.25
- You cannot use the BGM in the Music&Video Channel programs of i-motion.

1 Music Player screen (p.273) ▶

"Switch to BGM"

The standby screen appears and you can use other functions.

■ To quit the Music Player

▶ "Quit music"/"Quit Music&Video ch"

■ To quit the BGM play

Change a task to the music group, and stop the music player. → p.279

● Functions available during BGM play

Function	Availability
Voice/Videophone Calls	×
Mail	○ ^{*1}
i-mode	○
i-appli	△ ^{*2}
Data Box	△
LifeKit	△
Phonebook	○
Own data	○
Settings	△
Service	△
OsaiFu-Keitai/ToruCa	○

○: Available △: Partially available ×: Unavailable

- *1: When "Receiving setting" of mail is set to "Alarm preferred", the music playback pauses when receiving a mail (even when set to "Operation preferred", the music playback pauses when receiving a mail while the standby screen is displayed). When composing i-mode mail, some functions such as "Activate camera" are not available.

*2: Activating i-appli pauses playback.

● Playing when the FOMA terminal is folded

The side key enables you to operate the music player with the FOMA terminal folded.

- Music tracks and Music&Video Channel programs can be played with the FOMA terminal folded. However, only music tracks can activate with the FOMA terminal folded.

Key operation	Operation
 	■ During playback or pause Adjusting the volume
 (1 second or longer)	■ During playback or pause Pray from the beginning Plays the previous music/chapter when pressed continuously
 (MUSIC) (1 second or longer)	■ During playback or pause Play the next music/chapter ■ While the Music Player is not active Activates the Music Player and plays the music stopped at the last playback ■ During the BGM play (on the standby screen) Quits the Music Player

NOTE

- You cannot activate the music player by  (MUSIC) during Manner mode (however, it is possible when earphones, etc. are connected).
- When the battery is low, the music player with  (MUSIC) is not activated.

Other Convenient Functions

Multi Access.....	Multi access	278
Multitask.....	Multitask	279
Sorting the Main Menu		280
Using the Alarm Function	Alarm	280
Managing Schedule	Schedule	281
Adding To Do List Entries	To Do list	284
Setting the Alarm Mode	Alarm setting	285
Storing Your Own Name and Image	My Profile	286
Recording Your and the Other Party's Voice.....	Voice memo(in-call)/Voice memo	288
Recording and Playing Alarm Tones and On Hold Tones	Voice announce	289
Checking Call Times and Charges	Call data	289
Setting the Upper Limit of Charge to Notify the Alarm	Notice designate calls	291
Using the FOMA Terminal as Calculator.....	Calculator	291
Composing Text Memo	Text memo	292
Using Dictionaries.....	Dictionary	292
Using an Earphone/Microphone with Switch	Earphone/microphone with switch	294
Resetting the Function Settings.....	Reset settings	295
Resetting to the Default Settings of the FOMA Terminal	Initialize	296

Multi Access

<Multi access>

Multi access is a function that allows the 3 communication lines such as voice calls, packet communication and SMS to be conducted at the same time.

"Multi Access Combination Patterns" → p.358

- The FOMA terminal can use the 3 communication lines listed below at a time.

Voice call	1 line
Packet communication connected with i-mode, i-appli, i-mode mail and PC	1 line
SMS	1 line

NOTE

- Communication charges are applied for each of the lines used during Multi access communication.


When you receive a call during communication

● Receiving an i-mode mail during a voice call

When you receive an i-mode mail during a voice call, the in-call screen remains displayed while receiving the i-mode mail. You can then read the i-mode mail without interrupting your call.

- 1 (MULTI) ▶ Select " (Transmission)"
- The reception result screen for the i-mode mail appears.

Switching tasks → p.279

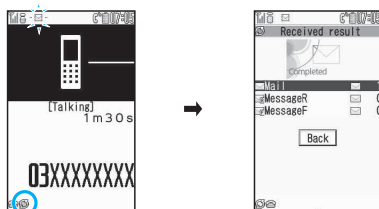

- 2 **Checking the i-mode mail**

Reading i-mode mail → p.180

- 3 (MULTI) ▶ Select " (Talking)"
- The screen changes to the voice call screen.

● Receiving a voice call during i-mode or packet communication

When you receive a voice call while using i-mode, receiving or sending an i-mode mail or using packet communication with the FOMA terminal and PC connected, the voice call ringing screen appears and you can answer the call without ending i-mode or packet communication.

- 1 The In-call screen appears, and you can talk.

■ **To return to the i-mode screen without answering the voice call**

- ▶ (MULTI) ▶ Select " (Browser)"
- The caller hears ringing without a message.

- 2 **To end the call, press**

The call is ended and the i-mode screen reappears.

■ **To return to the i-mode screen without ending a voice call**

- ▶ (MULTI) ▶ Select " (Browser)"

To use other type of communication while communicating

You can use another type of communication without interrupting your current communications.

- To switch screens during Multi access, select the desired function on the task icon display area. → p.279

● Making a voice call during i-mode

While connecting to i-mode or sending/receiving a mail, you can make a voice call without ending i-mode.

- 1 **During i-mode** (MULTI) (1 second or longer)

The standby screen appears.

- 2 **Make a voice call**

Making voice calls → p.50

- 3 **To end the call, press**

The call is ended and the i-mode screen reappears.

■ **To return to the i-mode screen without ending a voice call**

- ▶ (MULTI) ▶ Select " (Browser)"

Multitask

<Multitask>

Multitask enables you to use multiple functions at the same time. Up to 3 functions can be performed at once, one from each of the Main menu groups shown below (excluding Music group).

Group	Main menu item (task)
Mail group	Mail
i-mode group	i-mode
i-appli group	i-appli
Settings group	Settings, Service
Tool group	Data Box, LifeKit, Phonebook, Own data
Music group	MUSIC

* : Multitask Combination Patterns → p.359

- The icon of the running task is displayed on the task icon display area during Multitask. When multiple tasks are active, you can change tasks using this icon.



- While receiving a Music&Video Channel program, 1 function enters the operated mode and the task icon “” appears.
- The voice call charge continues to increase while you are concurrently using another function during a voice call.

Activating tasks (functions)

You can activate new task (function) without finishing the current tasks.

1 While using a task (MULTI)

The “Task change” screen (p.279) appears.

2 (MENU) ▶ Select new task

- To access the Mail menu
▶ (MAIL)
- To access the i-mode menu
▶ (i-mode)
- To access the channel list
▶ (ch)

NOTE

- Some functions are activated as one of another group.

NOTE


- In the following cases, 1 task is added to compose a mail while viewing another mail.
 - Accessing the Mail menu to compose a mail
 - Accessing the Mail menu to compose SMS
 - Using a template to create a Deco-mail
 - Using Reply/Reply with quote/Forward for a received mail
 - Editing a sent mail
 - Editing a draft mail

Operations of the task change screen

When you are running multiple tasks, you can switch them to change an active task or finish all tasks at the same time.

1 While using multiple task (MULTI)

The “Task change” screen appears.

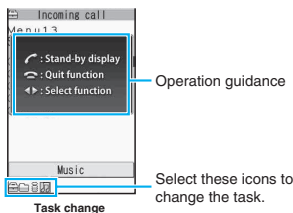

■ To switch the task

- ▶ Select the task icon to change

■ To display the Main Menu

- ▶ (MENU)

■ To Display the stand-by screen

- ▶

The “Task changing” screen appears again when you press during the standby screen is displayed.

* You can display the standby screen without displaying the Task change screen by pressing (1 second or longer) during the task is activated.

■ To end tasks

- ▶ ▶ “Quit selected” or “Quit all function”

Sorting the Main Menu

You can sort the menu that can be customized by yourself. You can also place the sub item.

<Sorting the first hierarchy menu>

- 1 While the menu you can sort is displayed ▶ Highlight the place to be newly allocated ▶ (FUNC) ▶ "Manual-sort" ▶ Select the menu

- 2 "Replace" ▶ "OK"

■ Selecting the sub item

▶ "Select sub item" ▶ Select the menu ▶

"Replace" ▶ "OK"

The menus are changed.

Using the Alarm Function

<Alarm>

- You can store up to 10 alarms.

- 1 ▶ "LifeKit" ▶ "Alarm"


The "Alarm list" screen appears.

■ To switch ON/OFF with the last settings

▶ Highlight the setting item

▶ (ON/OFF)

"ON/OFF" switches each time you press .

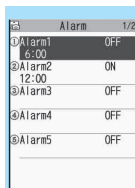


Alarm list

Function menu ▶ p.280

■ To check the previous settings

▶ Select the setting item

The "Alarm detail" screen appears.

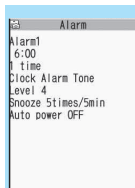

Alarm detail

- 2 Highlight the item to set ▶ (Edit)

- 3 Select any item:

Edit title Enters the title of the alarm. You can enter up to 6 double-byte or 12 single-byte characters.

Time setting Enters the time at which the alarm will sound.

Repeat Selects the alarm repetitions from "1 time/Daily () / Select day ()".

Alarm tone Selects the alarm tone from clock alarm tone or folders of melody, i-motion, music, etc.

Volume Sets the alarm tone volume with .

Snooze setting Specifies whether a snooze (repeating) alarm is set or not.

ON Enter the number of times for ringing (01 to 10 times) and the ringing interval (01 to 10 minutes).

The alarm tone (about 1 minute) rings repeatedly for the set number of times in the set interval.

OFF Enter the ringing time (01 to 10 minutes). Sounds the alarm tone continuously for the specified time.

Auto power ON Specifies whether the FOMA terminal is automatically turned on or not when the time for an alarm is reached.

- 4 Set the respective items ▶ (Finish)

NOTE

- When the FOMA terminal is automatically turned on to notify you of an alarm, if you set a melody, i-motion or music downloaded from sites as alarm tone, the "Clock Alarm Tone" is played.
- Before entering an area such as an aircraft or hospital where there is electronic equipment that uses extremely precise control systems or very low signal levels and the use of mobile phones is prohibited, set the "Auto power ON" setting to "OFF" and then turn the FOMA terminal off.

FUNC Alarm list screen (p.280)/Alarm detail screen (p.280)

Edit Edits the alarm.

Display detail Displays the alarm contents.

Finish(Set this) Activates the alarm.

Release this Disables one alarm.

Release all Disables all set alarms.

* : Available only with the Alarm list screen.

Managing Schedule

<Schedule>

If you add an event to your schedule, an alarm tone sounds at the specified date and time and the FOMA terminal displays an animation and message notifying you of the details stored for the event. You can also add holidays and anniversaries. Stored scheduled events and holidays can be quickly checked on the FOMA terminal's calendar. You can switch the calendar display mode between 1-month and 1-week to view the number or details of scheduled or To Do list events for a given day.

- The FOMA terminal supports from January 1, 2004 to December 31, 2037.

Adding schedule entries

You can organize your schedule in variety of ways, such as storing regularly scheduled events such as weekly meetings on a set day every week or setting alarm tones and animations that match the scheduled event.

- Up to 500 entries can be stored. You can also store multiple scheduled events for a day.
- Schedule alarms → p.285

1 ▶ “LifeKit” ▶ “Schedule”

The “Schedule” screen appears.



Schedule
Function menu ▶ p.281

2 (New) ▶ “Schedule”

3 Select any item:

 **Edit schedule** Enters the scheduled event details and selects an icon. You can enter up to 256 double-byte or 512 single-byte characters. The entered details are displayed during alarm notification.

 **Date setting** Sets the start/end date and time for the scheduled event.

 **Repeat** Selects the schedule repetitions from “1 time/Daily ()/Select day ()”.

 **Alarm** Specifies the alarm notification settings used when the due date is reached from “ON/ON/Set time (01 to 99 minutes)/OFF”.

 **Alarm tone** Selects the alarm tone from clock alarm tone or folders of melody, i-motion, music, etc.

 **Edit summary** Enters the summary of the scheduled event. You can enter up to 20 double-byte or 40 single-byte characters.
The entered summary appears on the screen during alarm notification.

4 Set the respective items (Finish)

NOTE

- When set to “ON/Set time”, the alarm notification is given only at the specified date and time before the scheduled event. The alarm notification is not given at the date and time set for the scheduled event.
- Scheduled events can be stored to notify the alarm at the same date and time only with the setting combination of “Daily”/“Select day” and “1 time” (no repeats). In this case, the scheduled event with the “1 time” setting has priority.
- If the day of the week set as the starting time and the day of the week set in the Repeat setting are different, the day set in the Repeat setting has priority and the scheduled event is added on the first specified day after the starting time.

Schedule screen (p.281)

New “Adding schedule entries” → p.281

“Adding holidays and anniversaries” → p.282

Weekly display ↔ **Monthly display** → p.282

Icon display Selects an icon and displays scheduled event, holiday or anniversary by icon. Repeating scheduled events ( or ) are displayed as a single item.

User icon setting → p.282

Switch To Do list Switches to the To Do list screen (p.284).

No. of schedules Displays the number of stored schedule entries, holidays and anniversaries. In Secret mode/Secret data only mode, you can also check the number of records kept as the secret data.

IC trans. all → p.260

Send all Ir data → p.258

Reset holiday Resets the national public holidays to default.

Delete Selects the deleting method from “Delete selected/Delete all/Delete past”.

“About multiple-choice” → p.39


- When “Delete past” is selected, all the entries before the data with the cursor on the schedule screen are deleted.
- When “Delete all/Delete past” is selected, select the item from “Schedule/Holiday/Anniversary/All”.

NOTE

- Selecting "Holiday" or "All" of "Delete all" resets the holidays to the default settings.

Changing the Schedule display mode

The Schedule can be displayed either as "Monthly display" or "Weekly display". By pressing  to highlight a particular date, you can check icons and the number of scheduled events and To Do list stored for the selected date.

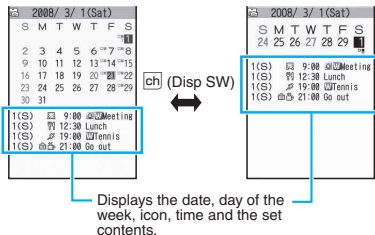

Blue dates: Saturdays

Red dates: Sundays, public holidays and holidays

Pink dates: Anniversaries

_: Today

: Scheduled event stored for the morning

: Scheduled event stored for the afternoon

T: Stored To Do list

The public holidays are set in accordance with the 「国民の祝日に関する法律」(昭和23年法律第178号) 及びその改正法 (平成17年法律第43号までのもの) ("The Public Holiday Law" (Law No. 178, 1948)) and the revised laws (up to Law No. 43, 2005). The Spring and Autumnal Equinox Days are determined by the government on February 1st in the previous year and may differ (as of January, 2008).

Adding holidays and anniversaries

- You can store up to 100 holidays and anniversaries. The national public holidays stored on the FOMA terminal at the time of purchase are not included in this number.
- You can store only 1 holiday or anniversary per day.

<Example: Storing a holiday>

1 Schedule screen (p.281) (New) "Holiday"

■ To add an anniversary

▶ "Anniversary"

2 Select any item:

 **Date setting** Enters the date of the added holiday or anniversary.

 **Repeat** Selects the holiday or anniversary repetitions from "1 time/Annually (Y)".

 **Edit holiday • Edit anniversary** Enters the details of the holiday or anniversary. You can enter up to 10 double-byte or 20 single-byte characters.

3 Set the respective items (Finish)

Setting your favorite image as your user icon

You can set an image or animation stored in My picture as a user icon. Icons set as user icons are displayed as  to  in the icon selection display. When you set a user icon, the selected image or animation is displayed when the alarm notification is given.

- You can store up to 5 user icons.

1 Schedule screen (p.281) (FUNC) "User icon setting" Select an item to store or change

■ To clear all the user icon settings

▶ "Release all" ▶ "YES"

Settings can be cleared only when user icons have already been set.

2 Select a folder

■ To release the icon

▶ "Release this" ▶ "YES"

To release the icon which is not stored in the schedule, "YES" is not available.

3 Select an image

The selected image is previewed, then the screen returns to the user icon list after a while.


Checking scheduled event, holiday or anniversary

You can check scheduled event, holiday or anniversary.

1 Schedule screen (p.281) ▶ Select the date on which the scheduled event, holiday or anniversary is stored

The "Schedule list" screen appears.

In the list display, the stored contents and the settings are described with the following icons.

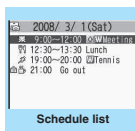

Function menu ▶ p.283



Scheduled event

(Scheduled event icon is displayed)



Holiday



Anniversary



To Do list



Alarm



Daily repeating event



Weekly repeating event on a specified day of the week




Annual repeating event



Scheduled event over a day (0:00 to 23:59)

2 Select an item

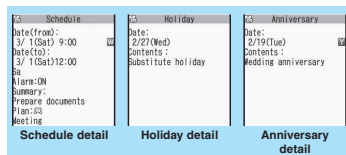

Function menu ▶ p.283

Schedule list screen (p.283)/ Schedule/Holiday/Anniversary detail screen (p.283)

New....."Adding schedule entries"→p.281

"Adding holidays and anniversaries"→p.282

Edit.....Edits the scheduled event, holiday or anniversary.

Copy.....Copies scheduled event, holiday or anniversary. When the copied entry has a repeat setting, the repeat setting is released when the entry is pasted.

Icon display.....Selects an icon and displays scheduled event, holiday or anniversary by icon. Repeating scheduled events (**D** or **W**) are displayed as a single item.

User icon setting→p.282

Switch To Do list.....Switches to the To Do list screen (p.284).

Release secret^{*1}.....Changes the data stored in the Secret mode/Secret data only mode to the normal data. →p.111

Compose message^{*1*2}→p.166

Attach to mail^{*1*2}.....Composes an i-mode mail with the schedule attached.

Add shortcut→p.100

iC transmission^{*1}→p.259

Send Ir data^{*1}→p.258

iC trans. all→p.260

Send all Ir data→p.258

Copy to microSD^{*1}→p.248

Delete.....Selects the deleting method from "Delete this/Delete selected/Delete all/Delete past".

"About multiple-choice"→p.39

- When "Delete past" is selected, all the entries before the displayed data are deleted.
- When "Delete all/Delete past" is selected, select the item from "Schedule/Holiday/Anniversary/All".

^{*1}: Only available for Schedule

^{*2}: Unavailable when 2in1 is set to B mode

Adding To Do List Entries

<To Do list>

You can manage your schedule by adding events to To Do list. You can also set alarms for events.

- You can set from January 1, 2004 to December 31, 2037.

Adding/editing entries

- Up to 100 entries can be stored.
- You must enter "Contents". You cannot store an To Do list entry with no "Contents".
- To Do list alarms → p.285

<Example: To add an entry>

1 [MENU] "LifeKit" ▶ "To Do list"

The "To Do list" screen appears.

2 [FUNC] "New"

■ To edit an entry

▶ [FUNC] ▶ "Edit"

Function key [] displays (New) when no entry is stored and (Edit) when any is stored.



Function menu → p.284

3 Select any item:

[] Edit To do list: Enters the contents for the entry. You can enter up to 100 double-byte or 200 single-byte characters.

[D] Due date Sets the due date for an entry.

Enter date Enters the date and time.

Choose date Selects a date from the calendar, then enters the time.

No date No due date is set.

[P] Priority Selects the priority for the entry from "H" / "L" / "None".

[C] Category Selects a category of the entry from "None/Personal/Holiday/Travel/Business/Meeting".

[A] Alarm Specifies the alarm notification settings used when the due date is reached from "ON/ON/Set time (01 to 99 min.) /OFF".

[T] Alarm tone Selects the alarm tone from clock alarm tone or folders of melody, i-motion, music, etc.

[C] Completion date Sets the completion date for an entry.

Enter date Enters the date.

Choose date Selects a date from the calendar.

No date No completion date is set.

* : Available only when an existing stored entry with a "Status" of "Completion" is edited.

4 Set the respective items ▶ [] (Finish)

NOTE

- When set to "ON/Set time", the alarm notification is given only at the set time before the To Do list event (01 to 99 minutes in advance). The alarm notification is not given at the date and time set for the To Do list event.

[FUNC] To Do list screen (p.284) / To Do list detail screen (p.285)

New • Edit → p.284

Switch schedule Switches to the schedule screen (p.281).

Change status Selects an entry status from "Plan/Acceptance/Request/Provisional plan/Confirmation/Denial/Completion/Substitution". When you select "Completion", set the completion date.

Category display^{*1} Selects entries from "All/None/Personal/Holiday/Travel/Business/Meeting", and displays them by category.

Sort/Filter^{*1} Sorts entries in a specified order or displays only the specified events with the filter function.

Add shortcut^{*1} → p.100

Attach to mail^{*2} Composes an i-mode mail with the entry attached.

IC transmission → p.259

Send Ir data → p.258

IC trans. all^{*1} → p.260

Send all Ir data^{*1} → p.258

Copy to microSD → p.248

Delete Selects the deleting method from "Delete this/Delete selected"/Delete completed^{*1}/Delete all^{*1}. "About multiple-choice" → p.39

- When "Delete Completed" is selected, all the completed entries are deleted.

*1: Available only for the To Do list screen



*2: Unavailable when 2in1 is set to B mode

1 To Do list screen (p.284) ▶ Select an entry

The "To Do list detail" screen appears.

Shows the entry status.
The blue icon turns into red when the specified day has elapsed.

Shows the priority.

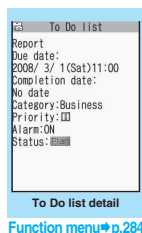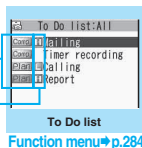

Setting the Alarm Mode

<Alarm setting>

You can select either "Operation preferred" or "Alarm preferred" as the alarm notification setting for "Alarm", "Schedule" or "To Do list".

1 [MENU] ▶ "Settings" ▶ "Clock" ▶ "Alarm setting" ▶ "Operation preferred" or "Alarm preferred"

When set to "Operation preferred", the alarm is given only when the standby screen is displayed. When set to "Alarm preferred", the alarm is given even when operating the FOMA terminal or during talking.

Alarm notification actions

● When you set an alarm

After setting the alarm notification in "Alarm", "Schedule" or "To Do list", the icon appears on the standby screen.



■ Icon display on the standby screen

" " appears and turns to " " on the specified day.

[Table 1] Alarm notification actions

Status	Alarm	Schedule/To Do list /Booking program
On standby screen using i-mode/sending or receiving mail*	Notifies you the alarm with the operation you set. Animations appear on the main display and the sub display.	The alarm tone rings repeatedly about 5 minute. Animations appear on the main display and the sub display.
When Power is OFF	The setting of "Auto power ON" is applied. When you select "OFF" in "Auto power ON", "  (Missed alarm)" shortcut icon does not appear after the FOMA terminal is turned on.	The alarm is not notified. The setting remains effective.
During a call*	The alarm tone rings through the FOMA terminal earpiece. Animations appear on the main display and the sub display.	
Earphone/microphone is connected	Alarm notification is the same as for the "Standby screen displayed". The alarm tone sounds from the earphone or speaker according to the "Headset usage setting".	
Dial lock/Omakase Lock/Original lock is set	The alarm is not notified. "  (Missed alarm)" shortcut icon appears in Original lock, or when Dial lock/Omakase Lock is released.	

* : Operations when "Alarm preferred" is set. When "Operation preferred" is set, the " (Missed alarm)" shortcut icon appears on the standby screen.

When the specified time is reached

Alarm for each function is given as shown in the **Table 1** (p.285).

- When you set i-motion to the alarm, the FOMA terminal notifies the alarm with the movie and the voice (the animation during the alarm notification may be changed depending on the icons and categories you set).

NOTE

- The volume of the "Schedule" and "To Do list" alarms is determined by the "Phone" setting in "Ring volume".
- The volume for the Clock Alarm Tone during a call is same as "Volume" setting level.
- The alarm tone during a call is not played in Snooze even when the Snooze setting is set to "ON".
- Even if an i-motion is set in the "Alarm tone" setting, the alarm is notified with the Clock Alarm tone and the animation for the specified icon and category when i-motion cannot be activated such as during a call.

<Alarm notification priority sequence>

- If "Alarm", "Schedule" and "To Do list" alarms are set at the same time, alarm priority is assigned as follows:
① Alarm ② To Do list ③ Schedule
- If alarm notification is failed, the  (Missed alarm) shortcut icon appears on the standby screen. → p.286

To stop the alarm tone

Alarm

When the Snooze setting is set to "OFF"
Pressing any key stops the alarm tone and the animation/i-motion. Pressing any key again emits the release tone "pipip" and the display disappears.
When the Snooze setting is set to "ON"
Pressing any key stops the alarm tone and the animation/i-motion, an alarm message "Snooze..." appears, then the alarm is notified again in the set ringing interval (minutes). Pressing  while "Snooze..." appears emits the release tone "pipip" and the snooze is canceled.

Other alarm tones

Pressing any key stops the alarm tone, freezes the animation or i-motion and the alarm message remains displayed. Pressing any key again clears the alarm message. However, if you press the side key when the FOMA terminal is folded, the alarm notification display is not cleared.

If you receive a call during alarm notification

Alarm notification stops and the FOMA terminal receives the call. The "Alarm" Snooze setting is also canceled.

Checking alarm details when notification fails

If the alarm notification fails, the  (Missed alarm) shortcut icon appears on the standby screen. You can check the details of the missed alarm (Missed alarm info) from the shortcut icon.

1 On the standby screen Select the "Missed alarm"

The Missed alarm info appears.

To clear

 (CLR) (1 second or longer)

Once you clear , you can no longer check the missed alarm information.

2 Check the details

The standby screen reappears by pressing , and the  (Missed alarm) shortcut icon disappears.

Storing Your Own Name and Image

<My Profile>

You can store your own personal information such as your name, home phone number and e-mail address. Stored personal information provides the FOMA terminal with a way of confirming that you are the owner and can also be quoted in the Character entry (edit) screen.

- You cannot change or delete the FOMA terminal's own phone number.
- Items other than Own name are stored on the FOMA terminal. If you insert another FOMA card (UIM), the data stored on the FOMA terminal are displayed.

Displaying My Profile

When this function is activated, it displays only your name, the FOMA terminal's own phone number and the first e-mail address.

1 "LifeKit" ▶ "My Profile"

The "My Profile" screen appears.
If you have stored your personal data such as your home phone number or address, you can display all the data by selecting "Display all data" from the function menu and entering security code.



Function menu ▶ p.287

NOTE

- When 2in1 mode is in Dual mode, you can switch the information of Number A and Number B to press  in the My profile screen.
- Reset My Profile in B mode when you exchange the FOMA card (UIM) while using 2in1. → p.287

My Profile screen (p.286)

Edit → p.287

Display all data Use  to check the details.

Copy name Copies the name stored in My Profile. The copied name can be pasted into input and other screens. → p.304

Copy phone number^{*1} Copies the currently displayed phone number. The copied phone number can be pasted into input and other screens. → p.304

Attach to mail^{*2} Composes an i-mode mail with the My Profile data attached.

IC transmission → p.259

Send Ir data → p.258

Copy to microSD → p.248

Big font ⇄ **Standard font** Switches the character size of the displayed name. → p.100

Check 2in1^{*3} Obtains information on Number B and stores it in the My Profile screen of Number B.

Reset Resets (deletes) My Profile except for your Own number and restores the default settings set at the time of purchase.

Delete phone No.^{*4} Deletes the currently displayed phone number.

^{*1}: Depending on the selected item, one of "Copy mail add./ Copy address/Copy birthday/Copy memorandums" appears.

^{*2}: Available only when displaying all data.

^{*3}: Available only while My Profile screen of Number B in 2in1 is displayed.

^{*4}: Depending on the selected item, one of "Delete mail add./ Delete address/Delete birthday/Delete memorandums/ Delete image" appears.

Storing My Profile

1 My Profile screen (p.286) (Edit) ▶ Enter your security code

2 Select any item:

 **Edit name Last** Enters your last name. You can enter up to 16 double-byte or 32 single-byte characters which include kanji characters, hiragana, katakana, alphabets, numbers, pictographs and

 .

 **Edit reading Last** As the reading is entered automatically when you enter your last name, change it if necessary. You can enter up to 32 characters including single-byte katakana, alphabets, numbers, symbols and reading of the first name.

 **Edit name First** Enters your first name in the same way as your last name.

 **Edit reading First** As the reading is entered automatically when you enter your first name in the same way as your last name, change it if necessary.

 **Edit phone number** Adds a phone number other than the FOMA terminal's own number and selects an icon. You can enter up to 26 digits for the phone number.

When you store a new phone number, the " <Not stored>" option appears in the My Profile edit screen. Select this option to store an additional phone number. Up to 3 phone numbers can be added.

 **Mail Address** Enters the e-mail address and selects an icon. You can enter up to 50 single-byte alphabets, numbers and symbols.

If the mail address is not stored, you can acquire the set mail address from the i-mode Center automatically by selecting "Acquire Automatically" (the secret code is automatically retrieved when the secret code is stored in the mail address).

Once you have stored the first e-mail address, the " <Not stored>" option appears on the My Profile edit screen. Select this option to store an additional e-mail address. Up to 3 mail addresses can be stored.

 **Edit address** Enters a zip code and address (prefecture/city/street/apartment name). Enter the 7 single-byte numbers for ZIP codes. You can enter up to 50 double-byte or 100 single-byte kanji characters, hiragana, katakana, alphabets, numbers and pictographs for the address other than the Zip code.

 **Enter birthday** Enters the contact's birthday (year, month and day). Any year from 1800 to 2099 can be set.

 **Edit memorandums**.....Enters a memo (short note). You can enter up to 100 double-byte or 200 single-byte characters which include kanji characters, hiragana, katakana, alphabets, numbers and pictographs.

 **Set image**.....Shoots a still image with the camera or select an image from My picture to display it on the My Profile. Select "Release this" to release the set still image.

3 Set the respective items (Finish)

NOTE

- When you change your own e-mail address or store a secret code, also change the mail address of this function (it is not changed automatically).

Quoting the personal information (My Profile)

Storing personal information allows you to identify your FOMA terminal and quote the stored information on the Character entry (edit) screen or i-mode.

<Example: To quote personal data on the i-mode site>

The items to select vary depending on the site.

1 Display a site to quote the personal information ▶ Select "Quote My Profile" ▶ Enter your security code

The list of quotable items appears.

■ To select items to quote

- ▶ Deselect checkboxes of items not to be quoted with 

■ When the 2in1 is in Dual mode

- ▶ "My Profile A" or "My Profile B"



2 (Finish)

The items to be quoted are entered automatically.

NOTE

- When you quote a street address on the Text entry or i-mode site, a space may be entered between items.
- When you quote the My Profile, the data except the items entered automatically are not quoted.

Recording Your and the Other Party's Voice

<Voice memo(in-call)/Voice memo>

There are 2 types of Voice memo. "Voice memo(in-call)" allows you to record the other party's voice during a voice or videophone call. "Voice memo" allows you to record your own voice while the standby screen is displayed.

- You can record either 1 voice memo(in-call) or 1 voice memo, which overwrites the existing memo.
- You can record voice up to about 20 seconds.
- For information on playing and erasing recorded voice memo → p.69

Recording the other party's voice during a call

1 During a call (1 second or longer)

The FOMA terminal beeps and recording begins. The FOMA terminal beeps 5 seconds before the recording time (about 20 seconds) ends. When recording ends, the FOMA terminal gives a short double-beep and the "Recording" display returns to the in-call screen.

■ To stop recording in progress

- ▶  (Stop) or  (1 second or longer)

Recording your own voice in standby mode

1 "LifeKit" ▶ "Voice memo" ▶ "YES" ▶ Record the voice memo

When the FOMA terminal beeps, begin speaking into the mouthpiece. The FOMA terminal beeps 5 seconds before the recording time (about 20 seconds) ends. When recording ends, the terminal gives a short double-beep and the "Recording" screen changes back to the "LifeKit list" screen.

■ To stop recording in progress

- ▶  (Stop)

NOTE

- When you receive a call, the "Alarm", "Schedule" or "To Do list" alarm is notified or operate other function while recording a voice memo, the recording stops.

NOTE

<Voice memo(in-call)>

- You cannot record voice while a videophone call is on hold or while you are using a Function menu option.
- When 2in1 is in A mode or B mode and you record the other party's voice received at the unused number, "★" does not appear on the Play/Erase msg. screen and you cannot play the voice memo.

Recording and Playing Alarm Tones and On Hold Tones

<Voice announce>

You can record the voice and set it as original ring tone or answer message.

- You can make 2 voice recordings: "Voice announce 1" and "Voice announce 2".
- You can record voice up to about 15 seconds.
- "★" appears in the "Voice announce" screen when "Voice announce" is recorded.
- Voice recordings made using this function can be set in the following functions:
 - Ring tone (voice call, videophone call, mail, MessageR/F, Call setting w/o ID, Multi Number, Number B of 2in1)
 - Alarm tone (Alarm, Schedule, To Do list, Clock Alarm Tone, Notice designate calls)
 - On hold tone
 - Answer message (Record message)

Recording voice

- 1 ▶ "LifeKit" ▶ "Voice announce" ▶ Select an item ▶ "YES" ▶ Record the voice

Speak into the mouthpiece. The FOMA terminal beeps 5 seconds before the recording time (about 15 seconds) ends. When recording ends, the FOMA terminal gives a short double-beep and the "Recording" screen returns to the previous screen.



- To stop recording in progress
- ▶ (Stop)

NOTE

- When you receive a voice/videophone call, the "Alarm", "Schedule" or "To Do list" alarm is notified or operate other function while recording a voice, the recording stops.

Playing voice announce recordings

- 1 ▶ "LifeKit" ▶ "Voice announce" ▶ Select an item
 - To stop playback in progress
 - ▶ (Stop)

Voice announce screen (p.289)

Record.....Records voice.

Play.....Plays the recorded voice.

Erase.....Erases the recorded voice.

Checking Call Times and Charges

<Call data>

You can check the previous or total call time/charge for voice/videophone calls, etc.

- The following items can be checked.

Item	Displayed contents
Last call duration	Displays the duration of the last call
Last call cost	Displays the charge for the last call (voice calls, videophone calls and 64K data communication) *
Total calls duration	Displays the total duration of all the calls made since the last reset (voice calls, videophone calls and 64K data communication) *
Total calls cost	Displays the total calls cost of all the calls made since the last reset (voice calls, videophone calls and 64K data communication)
Total duration reset	Displays the date and time of the last call reset
Total cost reset	Displays the date and time of the last charge reset

* : "Digital (AV)" for videophone calls and "Digital (UD)" for 64K data communication are displayed.

- When you switch between voice call and videophone call, the total call time of voice and videophone calls is displayed in the last duration area, and the charges of voice and videophone calls are displayed separately in the last charge area. The displayed charge may differ from the actual charge.
- The call time is displayed for both voice calls and digital calls and communication (videophone calls and 64K data communication). Times for both calls made and received calls are counted.
- Charges are only displayed for dialed calls. However, if you call at toll free number such as directory assistance (104), “¥0” or “¥**” is displayed.
- As charges are accumulated on the FOMA card (UIM), the accumulated charge (starting from December 2004) is displayed on the Charge line when you change your FOMA card (UIM).
* Charges are accumulated on FOMA cards (UIM) in FOMA terminals released before the 901i series, but they cannot be displayed.
- You can reset displayed call times and charges.
- Displayed call times and charges may differ from the actual figures. Consumption tax is not included in the call charges.
- If you have subscribed to the 2in1, the total amount of Number A/B appears as the Total calls duration and Total calls cost.

1 “Settings” ▶ “Call time/Charge” ▶ “Call data”

NOTE

- If the last or total voice or digital calls duration exceeds “199h59m59s”, the call count returns to “0s”.
- The time and charge of i-mode or packet communication, and the charge of sending Chaku-moji are not counted. To check i-mode communication charges, see the “Mobile Phone User’s Guide [i-mode] FOMA version” provided at the time of contract.
- The time taken to pick up a call, or for the other party to pick up a call, and the time for switching a voice call and a videophone call are not counted.
- When the FOMA terminal is turned off, the duration and charge for the last call reverts to “0s” and “¥**” respectively.
- Turning the FOMA terminal off does not affect the total duration and charge.
- The international call charge for WORLD CALL is counted. For other international call services, the charge is not counted.

Resetting the total call time and total call charges

[<Reset total>](#)

You can reset the Total calls duration or Total calls charge displayed in the “Call data” to zero.

1 ▶ “Settings” ▶ “Call time/Charge” ▶ “Reset total” ▶ Enter your security code ▶ Select any item:

Reset total duration Resets the accumulated duration.

Reset total cost Enters PIN2 code and resets the accumulated charge.
PIN2 code → p.108

Resetting charges automatically

[<Auto reset total cost>](#)

You can set the FOMA terminal to reset the Total calls cost displayed in “Call data” to zero automatically on the 1st day every month, at 0:00.

1 ▶ “Settings” ▶ “Call time/Charge” ▶ “Auto reset total cost” ▶ Enter your security code

2 “Auto reset” ▶ “ON” ▶ Enter PIN2 code PIN2 code → p.108

- Not to set Auto reset
- ▶ “OFF”

NOTE

- Setting Auto reset total cost to “ON” and changing the month in “Set time” resets the Total calls cost.
- The Auto reset total cost is reset to “OFF” when:
 - The FOMA terminal is turned on without the FOMA card (UIM) inserted
 -  is pressed on the PIN2 code input screen which appears when the FOMA terminal is turned on
 - The PIN2 code is locked → p.108
 - An error occurs on the FOMA card (UIM)

Setting the Upper Limit of Charge to Notify the Alarm

<Notice designate calls>

When accumulated charge displayed at "Call data" exceeds the cost limit set in this function, you are notified on the standby screen or with alarms.

- The alarm notification works only once when the accumulated charge exceeds the set cost limit.
- Exceeding the limit does not prevent you from making a call.

1 "Settings" > "Call time/Charge" > "Notice designate calls" > Enter your security code

2 Select any item:

Cost limit setting.....Sets the cost limit between 10 and 100,000 by 10 units.

Notify setting

Notify cost limit.....Specifies whether to notify the cost limit.

Alarm tone.....Selects an alarm tone.

Volume.....Sets the alarm tone volume with .

3 Set the respective items > (Finish)

NOTE

- The charges for i-mode or packet communication, and the charges for sending Chaku-moji are not included in this function. To check i-mode communication charges, see the "Mobile Phone User's Guide [i-mode] FOMA version" provided at the time of contract.

Alarm notification actions

After ending a call, the function notifies you with the following methods when accumulated charges exceed the cost limit.

■ When Notify cost limit is set to "ON" and alarm tone is set to other than "OFF"

When the accumulated charge exceeds the preset cost limit, the alarm tone sounds for about 5 minutes starting 3 seconds after finishing the call, and the notification screen appears. To stop the alarm tone, press any key. After the notification, pressing or displays (Notice designate calls) shortcut icon on the standby screen.



■ When Notify cost limit is set to "ON" and alarm tone is set to "OFF"

When the accumulated charge exceeds the preset cost limit, (Call billing) shortcut icon appears on the standby screen.

● Checking details of (Notice designate calls)

The details of Notify cost limit is displayed by selecting (Notice designate calls) shortcut icon on the standby screen.

1 On the standby screen > > Select (Notice designate calls) > Enter your security code

The details of "Notice designate calls" are displayed.

2 Check the details > (OK)

The standby screen reappears and (Notice designate calls) disappears.

Using the FOMA Terminal as Calculator

<Calculator>

You can use the FOMA terminal to perform 4 different types of arithmetical calculations (addition, subtraction, multiplication and division).

- The number can be displayed up to 10 digits. Below the decimal point, up to 9 digits can be displayed.
- If the result of a calculation exceeds 10 digits, "E" is displayed.

1 "LifeKit" > "Calculator" > Calculate


■ To calculate "23 + 57"

+ =

■ To use negative numbers in a calculation

To calculate using negative amounts, simply insert "-" before the first digit.

- + =

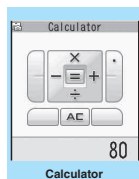

Function menu > p.292

NOTE

- [CLR] ([AC] or [C]) can be used in the following cases.
 - After pressing +, -, ×, ÷, =, [AC] is displayed. You can start calculation from the beginning by pressing [CLR].
 - While inputting numbers or decimal points, [C] is displayed. You can delete wrong numbers or decimal points by pressing [CLR].

FUNC Calculator screen (p.291)

Add shortcut → p.100

Composing Text Memo


<Text memo>

You can write short messages in the form of text memos. You can paste a composed text memo into your schedule or mail message.

- You can store up to 10 text memos.
- You can enter up to 256 double-byte or 512 single-byte characters for a text memo.

1 [MENU] ▶ “LifeKit” ▶ “Text memo”

The “Text memo” screen appears.

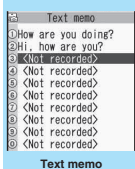

Text memo

Function menu ▶ p.292

2 Highlight the item to store or change ▶ [Edit]

3 Write the memo

FUNC Text memo screen (p.292)

Edit.....Edits the text memo.

Compose message → p.166

Edit schedule → p.281

Add shortcut → p.100

IC transmission → p.259

Send Ir data → p.258

IC trans. all → p.260

Send all Ir data → p.258

Copy to microSD → p.248

Text memo info.....Displays the creation date/time and category.

Category.....Selects a category to categorize from “None/Personal/Holiday/Travel/Business/Meeting”.

Delete.....Selects the deleting method from “Delete this/Delete selected/Delete all”.

“About multiple-choice” → p.39


Using Dictionaries

<Dictionary>

- You can use dictionaries from the function menu of each text entry screen. → p.293

1 [MENU] ▶ “LifeKit” ▶ “Dictionary”

The “Dictionary” screen appears.

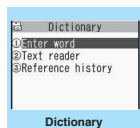

Dictionary

Function menu ▶ p.293

2 Select any item:

Enter word.....Enters a word. You can enter up to 32 double-byte or 64 single-byte characters.

Text reader.....Enters a word from the Text reader. → p.142

Reference history.....Searches the dictionary using the history of previously retrieved words.


“Using reference history” → p.293

3 Select the dictionary type

The “Reference result (list)” screen appears. When the searched word is not in the dictionary, the cursor is placed at the similar word.

■ To display the previous or next list

▶ Reference result (list) screen ▶ [Previous/Next]

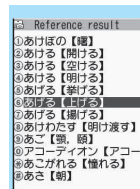

Reference result (list)


Function menu ▶ p.293

4 Select a word

The "Reference result (detail)" screen appears.

■ To display the previous or next word

▶ Reference result (detail) screen ▶

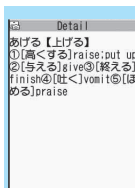

Reference result (detail)

Function menu▶p.293

FUNC Dictionary screen (p.292)

Add shortcut→p.100

FUNC Reference result (list/detail) screen (p.292)

Change window*.....Switches the screen between Reference result and Text edit (available only when it can be switched).

Copy.....Copies the word.

List screen: Copies the word in [] of the reference result for Japanese-English or Japanese dictionary, and copies the word of the reference result for English-Japanese dictionary

Detail screen: Copies the text by selecting the range.

The copied word can be pasted into text entry screens, etc.
→p.304

Search from detail*.....Search for another word from the reference result (detail) screen.

▶■ (Start) on the first character of the string▶Use
to highlight to the end of the string and press
■ (End)▶Select the dictionary type▶Select a word

Refer dic......Searches for the retrieved word in another dictionary.

Refer edit.....Edits text referring to the Reference result (available only when Refer edit is available).


"Divided" screen→p.299

* : Available only for the reference result (detail) screen.

Using reference history

1 Dictionary screen (p.292)▶"Reference history"

The "Reference history" screen appears.

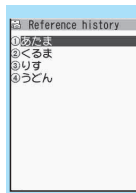

Reference history

Function menu▶p.293

2 Select a word

FUNC Reference history screen (p.293)

Delete this • Delete all.....Deletes one or all reference history (histories).

Using dictionaries from other functions

Select "Refer dic." from the respective function menus in the following screens:

- The text edit screen, mail detail screen or message screen for i-mode mail
- Pages on sites and while a screen memo is displayed

■ **When activating a dictionary from the text edit screen, mail detail screen or message screen for i-mode mail**

You can select "Enter word", "Select area" or "Reference history".

Selecting "Select area" allows you to specify the range of the words you want to look up.

■ **When you activate the dictionary from a site or from a screen memo**


You can select "Enter word", "Site refer (enter)" or "Reference history".

Selecting "Site refer (enter)" allows you to enter the word you want to look up while referring to a screen memo or a page on a site.

● Guide to the dictionary reference screen

When you select "Refer edit" or "Site refer (enter)", the display is split into top and bottom halves.

Each time you select "Change window" from the function menu, the window you can use switches between ① and ②.

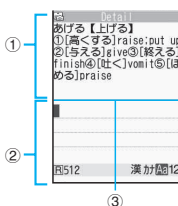

■ When you selected "Refer edit" from the Reference result (detail) screen

- ① Dictionary detail screen
- ② Text edit screen
- ③ Separation line

To exit the dictionary, select "Quit dic." from the function menu or switch to window ① and press (End).

■ When you selected "Site refer (enter)" from a screen memo or a page on a site

- ① Site page or screen memo screen
- ② Search term entry screen
- ③ Separation line

Enter the search term and press (Set). The dictionary selection display appears with the search term entered.

Using an Earphone/Microphone with Switch

<Earphone/microphone with switch>

You can make or receive a call by using a flat-plug earphone/microphone with switch (optional).

- Use the Earphone Plug Adapter for External connector terminal to connect a flat-plug stereo earphone set (optional) or flat-plug earphone/microphone with switch (optional) to the FOMA terminal. → p.25
- The tone of the switch operation for receiving or ending the call sounds regardless of the "Keypad sound" setting.
- Do not wrap the FOMA terminal with the cord of the flat-plug earphone/microphone with switch. This may interfere with signal reception. Also, if you move the cord of the flat-plug earphone/microphone with switch closer to the FOMA terminal while talking, you may hear the noise.
- You can make and receive a phone call with the FOMA terminal folded.

Using the switch to make calls

1 Enter the phone number ▶ Press the switch for 1 second or longer

You can also make a phone call from the phonebook, Redial/Dialed calls/Received calls.

■ To not enter the phone number

The FOMA terminal makes a call to a phone number set at "Headset sw to dial".

2 When you finish talking, hold down the switch for 1 second or longer

The FOMA terminal emits a short double-beep and ends the call.

Using the switch to accept calls

1 While ringing ▶ Presses the switch

The FOMA terminal emits a short beep and answers the call.

The FOMA terminal answers the videophone call with the Substitute image when the FOMA terminal is folded and with the camera image when the FOMA terminal is opened.

2 When you finish talking, hold down the switch for 1 second or longer

The FOMA terminal emits a short double-beep and ends the call.

NOTE

- If you have subscribed to the "Call Waiting", you can answer a call that comes in during another call by pressing the switch on the flat-plug earphone/microphone with switch. You can also switch calls by pressing the switch for 1 second or longer. However, pressing the switch does not end the current call.
- Do not repeatedly press and release the switch on the flat-plug earphone/microphone. The FOMA terminal may answer the call automatically.

Connecting earphones and selecting person to call

<Headset sw to dial>

You can specify whether to make a call (Voice call/OFF) when you hold down the switch for 1 second or longer.

- You can set phone numbers stored in the phonebook of the FOMA terminal (Phone) to this function.

1  ► “Settings” ► “Dialing” ► “Headset sw to dial” ► “Voice call” or “OFF”

2 Display a phone number you want to set on the phonebook detail screen ►  (Select)

Searching the phonebook → p.79

NOTE

- If the phone number set in this function is not available due to the 2in1 setting, you cannot dial using a flat-plug earphone/microphone with switch.

Automatically receiving calls with an earphone/microphone connected

<Auto answer setting>

When a flat-plug earphone/microphone with switch (optional) is connected, this function allows you to answer received calls automatically without pressing the switch.

- You cannot answer the call automatically during a voice or videophone call.

1  ► “Settings” ► “External connection” ► “Auto answer setting” ► “Phone” or “Videophone” ► “ON” ► Enter the ring time (001 to 120 in 3 digits)

- To disable the setting
► “OFF”

NOTE

- When answering a videophone call automatically, your substitute image is displayed to the caller.
- Connecting an earphone/microphone with switch while the FOMA terminal is ringing does not answer a call automatically, but removing it while the terminal is ringing answers a call automatically.

Selecting a microphone when an earphone/microphone is connected

<Select microphone>

You can select the microphone to use when a flat-plug earphone/microphone with switch (optional) is connected from the microphone of the FOMA terminal or the microphone of the earphone/microphone.

1  ► “Settings” ► “External connection” ► “Select microphone” ► “Internal microphone” or “External microphone”

When you connect earphones without a microphone, select “Internal microphone”.

NOTE

- When “Select microphone” is set to “Internal microphone”, the microphone sensitivity becomes the same as the setting when handsfree is set to ON. When an earphone/microphone is connected, you do not need to talk with your mouth close to the mouthpiece.

Resetting the Function Settings

<Reset settings>

You can reset the FOMA terminal's function settings to the defaults set at the time of purchase.

Do not mistake “Initialize” for “Reset settings”. If you perform “Initialize”, you will lose all the data you have stored. → p.296

- For details on the functions that are reset, refer to “Menu Function List” (p.336).
- When the FOMA terminal is connected to an external device such as a PC, the setting of “USB mode setting” is not reset to the default setting.
- To reset the functions below to default, run Reset settings in each function:
 - i-mode settings (reset) → p.157
 - Reset mail settings → p.189
 - Reset Full Browser settings → p.223

1  ► “Settings” ► “Other settings” ► “Reset settings” ► Enter your security code ► “YES”

Resetting to the Default Settings of the FOMA Terminal

<Initialize>

This function deletes stored data and returns the settings for the FOMA terminal's functions to their defaults set at the time of purchase.

"Initialize" deletes all of your important data including phonebook, mail, downloaded images or melodies, i-appli, still images and movies shot with the camera (even protected data).

- Pre-installed data is not deleted.
- For more information on the restored default settings, see "Reset settings".
- "Initialize" resets the functions reset by "Reset settings" and the functions and data listed below to their default settings set at the time of purchase.

- Mail data*¹
- Mail folders*¹
- Template*¹
- i-mode settings
- URL History
- Additional service
- Multi Number (Phone number setting)
- FOMA terminal (Phone) Phonebook*²
- My Profile*¹
- Software list
- i-appli Auto start set
- i-appli action info
- Call data
- Kisekake Tool
- Pause dial
- Security code
- Learning record (Clear learned under Character input set)
- To Do list
- Schedule
- Play/Erase msg. (Record message*¹/Voice memo (in-call)*¹/Voice memo)
- Play/Erase VP msg.*¹
- Exchanging history (Data security service)
- Data stored by the user*³
- The operating history for the menu display setting
- Choku-Den*²
- The software updating information
- Auto-update setting for Software Update
- Music play history information
- Programs of the Music&Video Channel
- Bookmark
- Screen memo
- Enter URL
- Go to location
- Chaku-moji sent messages record
- Full Browser settings
- i-Channel setting
- Channel list
- Group setting*²
- Received calls*¹
- Redial/Dialed calls*¹
- Received address*¹
- Sent address*¹
- Mail member*¹
- Own dictionary
- Download dictionary
- Text memo
- External IC card information (IC card authentic.)
- Voice announce
- Mail Setting*¹
- Message
- Text reader
- Bar code reader
- Reference history of the dictionary
- Chara-den
- Decorate PI

*1: All data are initialized even if some data are not displayed in 2in1 A mode or B mode.

*2: All the data of A mode/B mode is reset regardless of the 2in1 mode.

*3: Stored data, downloaded data, i-appli, still images or movies shot with the camera, etc.

- Group names and folder names, etc. that you have edited revert to their default names.
- The secret data or data in Secret folder are also deleted.
- Ensure that the battery is fully charged before initializing the FOMA terminal. It may not be possible to initialize the FOMA terminal if the battery is low.
- Do not turn the FOMA terminal off while initializing.
- You cannot use any other functions while the FOMA terminal is being initialized. Also, you cannot receive voice or videophone calls or mails.

- Performing "Initialize" restores your FOMA terminal to the default settings. It is recommended to back up the data stored on the FOMA terminal by taking a note or using DoCoMo keitai datalink (p.326) or the microSD memory card.

1 MENU ▶ "Settings" ▶ "Other settings" ▶ "Initialize" ▶ Enter your security code

2 "YES" ▶ "YES"



Initialization begins.

Initialization may take several minutes.

When initialization ends, the FOMA terminal is automatically restarted and displays the Software Update descriptions.

■ If initialization is not completed correctly

▶ "OK" after turning the power on

The initialization starts again.

NOTE

- When the FOMA terminal is initialized, the i-Channel ticker is not displayed. The ticker is turned on again automatically when the information is updated automatically or when [CH] is pressed to receive the latest information.
- Settings of data communication which uses a PC are not initialized.
- The data of the Osaifu-Keitai i-appli and the data on the IC card are not deleted.

Character Entry

Character Entry.....		298
Entering Text Using 5-Touch	5-touch	300
Modifying/Storing Common Phrases	Store common phrases	304
Copying, Cutting and Pasting Text		304
Entering Text Using Kuten Codes	Kuten code	305
Storing Frequently Used Words	Own dictionary	305
Resetting the Learning Record	Clear learned	306
Using Download Dictionaries	Download dictionary	306
Entering Text Using 2-Touch	2-touch	306

For the “Kuten code list”, refer to the PDF format “Kuten Code List” in the provided CD-ROM.
 To view the PDF format “Kuten Code List”, Adobe® Reader® is required. If this software is not installed on your PC, install the Adobe® Reader® in the CD-ROM. Refer to the “Adobe Reader ヘルプ” (Help of the Adobe Reader) for details on how to use it.

Character Entry

The FOMA terminal has 2 character entry mode: "5-touch" and "2-touch". This section explains the character entry mainly using the "5-touch input".

- Refer to the following sections for the settings, characteristics and method of each character entry mode.


"Setting the character entry mode" → p.299

"Entering Text Using 5-Touch Input" → p.300

"Entering Text Using 2-Touch Input" → p.306

Character entry (edit) screen

The Character entry (edit) screen is made up of ① text entry area, ② information display area, and ③ list display area. The descriptions of icons displayed in each area are as follows:

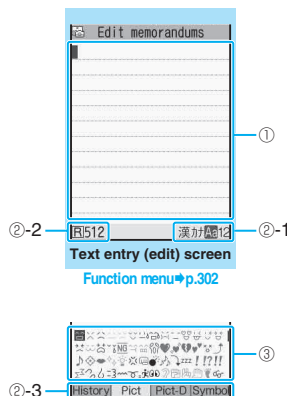

① Character entry area

Icon	Description
	Cursor (Text entry position)
	Line feed mark (Line break position)

② Information display area

②-1 Input mode display

Currently selected input mode highlights.

Displayed content varies depending on used input method.

- also appears in Kuten mode. → p.305

5-touch

Display	Input mode
	Single-byte alphabet
	Single-byte number
	Kanji/Hiragana
	Single-byte katakana
	Double-byte alphabet
	Double-byte number
	Double-byte katakana

2-touch

Display	Input mode
	Single-byte
	Double-byte
	Uppercase
	Lowercase

②-2 Character count display

Display	Input mode
	Number of remaining bytes that can be entered (single-byte character: 1 byte, double-byte character: 2 bytes)
	Number of characters that have been entered

②-3 Pictograph/Symbol type display

Type of listed pictographs/symbols.

Display	Input mode
	Pictograph/Symbol input history
	Pictographs
	Pictograph D
	Symbols

③ List display area


List of pictographs/symbols, conversion candidates, etc.

NOTE

- Even in single-byte mode, double-byte characters are entered in Kanji/Hiragana input mode.
- Pictograph D is Deco-mail pictograph that can only be entered on the Compose message screen, Edit header/signature screen or Edit Template screen.
- The number of characters that have been entered appears only in some functions, e.g. composing SMS.
- On the i-mode Message or Edit Template screen, if the number of characters that can be entered is exceeded, “—” (minus) appears.

Divided screen

Some screens, such as that for storing schedule entries while referring to the original message, are split into 2 windows displaying the function operation screen and the Character entry (edit) screen at the same time.

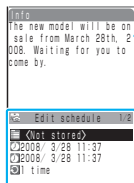

Operation screen for the function

Character entry (edit) screen

Saving schedule referring from i-mode

- The function operation screen and Character entry (edit) screen are displayed at the same time in the following cases:
 - Adding schedule entries while referring to an i-mode screen
 - Entering words to search by activating dictionaries from an i-mode screen
 - Editing text while referring to the results of a dictionary search

● Procedure for changing the active screen

When a function operation screen and the Character entry (edit) screen are displayed at the same time, select “Change window” from the function menu to switch between screen.

Setting the character entry mode

You can set the character entry mode you use from 2 character entry modes (5-touch/2-touch).

- 1 **MENU** ▶ “Settings” ▶ “Other settings” ▶ “Character input set” ▶ “Input mode” ▶ Select input mode

NOTE

- You can change input modes using the function menu while entering text.

Switching the character entry size

You can select the character size on the character entry (edit) screen or Symbol/Pictograph entry screen from 4 types of “Small/Standard/Large/X-large”.

- 1 **MENU** ▶ “Settings” ▶ “Other settings” ▶ “Character input set” ▶ “CHG input size” ▶ Select the input size

Setting the conversion method

Set the conversion method for Kanji/Hiragana input mode.

- Prediction candidates are stored at the time of purchase.
- Using Prediction to input characters → p.300

- 1 **MENU** ▶ “Settings” ▶ “Other settings” ▶ “Character input set” ▶ “Select conversion” ▶ Select conversion method

Prediction (default) Predicts a word for an entered character or following word for a selected word.

User conversion Converts the entire reading after entered.

NOTE

- You can change conversion methods using the function menu while entering text.

Entering Text Using 5-Touch

<5-touch>

You can enter 1 character by pressing a dial key for several times. For example, to enter “う”, the third character of the “あ column”, “あいうえお”, press  3 times.

- Refer to “Characters that can be entered using 5-touch input” (p.347) for details on the character assignment.

Entering kanji/hiragana/katakana

Enter the readings in hiragana, then convert them into the character such as kanji, hiragana or katakana.

Using Prediction to enter text

<Example: To enter “携帯電話”>


1 Character entry (edit) screen (p.298)▶ Set Kanji/Hiragana input mode

When “Kanji/Hiragana input mode ()” is not set, press  (Chrct) to switch the mode.

2 Enter a part of the reading

 4 times
け

“け” is entered in the text entry area and predicted candidates appear.

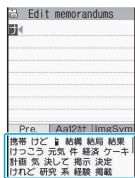

Predicted candidate list

3 Select a word

▶ Select “携帯”

The selected words appears in the text entry area. Next predicted candidates which follows the selected word appears in the candidate list.

■ When the candidates do not includes the word you want to enter

▶  (CLR)

Return to the reading entry. The predicted candidates change as you continue entering the reading.

■ To convert temporarily

▶  (Convert)

User conversion list appears. → p.300

■ To display alphanumeric-katakana candidate list or image-symbol candidate list

▶  (◀tab) or  (tab▶)

Each candidate list appears.

■ To confirm the hiragana

▶  (Set)

4 Select next word

▶ Select “電話”

NOTE

- Pictograph idioms appear in the candidate list depending on the entered reading. Pictograph idiom readings → p.353
- Use “Operation in item” to change operation modes to select word from candidate list. → p.299
- Conversion candidate list does not appear in the input mode other than Kanji/Hiragana input mode.
- A word entered for once is added to the predicted candidate by the learning function. You can delete the added word by highlighting the word and pressing  for 1 second or longer. To delete all the learned predicted candidates, clear the learned records of the word prediction with “Clear learned”. → p.306

Using User conversion

<Example: To enter “健闘を祈る”>

1 Character entry (edit) screen (p.298)▶ Set Kanji/Hiragana input mode

When “Kanji/Hiragana input mode ()” is not set, press  (Chrct) to switch the mode.


2 Enter hiragana

 4 times  3 times
け ん

 5 times  3 times
と う

 twice  twice
を い

 5 times  3 times
の る

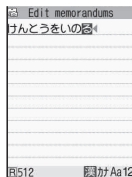

■ If you press the wrong key

▶ Press  to delete the character

■ If you press a key too many times

▶  #

The previous character assigned to that key appears.

■ When the next character to be entered is assigned to the same key

▶  or wait for cursor to move automatically
Cursor moves and the following characters can be entered. The wait time can be set from the function menu. → p.302

■ To confirm the hiragana

▶  (Set)

3 Convert entered text

The first syllable converts and highlights. The unconfirmed text is underlined ().

■ If the conversion candidate is the desired kanji or katakana

▶ (Select)

The word is confirmed and the next phrase is highlighted.

■ If the conversion candidate is not the kanji or katakana you want

▶ Select word

Select a word from the User Conversion Item. Hiragana and katakana are included in the User Conversion Item.

If the readings in the conversion range consists entirely of “あ”-level characters, numbers are also included in the conversion candidates. For example, entering (1)(2)(3) (あかさ) also shows the conversion candidate “123”.

■ To change the conversion range

▶ Press [] to change the conversion range ▶ Select word

Candidates listed in the User Conversion Item change as the conversion range changes.

■ To display the alphanumeric-katakana conversion candidate list

▶ [CLR] ▶ (Aa12カナ)

Aa12カナ Conversion Item of alphanumeric-katakana candidates appears. For example, pressing (2)(3) (かさ) (Aa12カナ) shows the conversion candidates such as “AD”, “23” or “カサ”.

For numbers of 2 to 4 digits which can be used as date (ex. 10/19) or time (ex. 10:19), such date and time are also displayed as conversion candidates.



NOTE

- If the User Conversion Item includes symbols, pictographs or face marks, you can convert the text to these symbols.
Refer to the following lists for the readings of symbols, pictographs and face marks.
 - “Symbols List” → p.349
 - “Pictographs List” → p.351
 - “Face Marks List” → p.356
- For other text entry operations such as entering symbols, pictographs, or inserting a space or a line-feed, refer to “Useful keys to assist text entry” (p.302) and “Function menu of the Character entry (edit)” screen (p.302).
- You can use kuten codes to enter kanji that cannot be entered by conversion. → p.305

Changing selection methods

Select [] method or [] method to select word from Prediction list or User Conversion Item.

1 “Settings” ▶ “Other settings” ▶ “Character input set” ▶ “Operation in item” ▶ Select any item:

↑ ↓ ← → Key (default) Use [] to select word from the displayed list. To change the conversion range, press [CLR] then use [].

↑ ↓ Key Use [] to select word from the displayed list. Press [] to highlight next candidate, and [] to highlight previous candidate. Press and hold [] for 1 second or longer to move between candidate lines. To change the conversion range, use [].

The number of characters and scrolling

■ The number of bytes remaining and the number entered

The number of bytes that can be entered or characters that have been entered on the Character entry (edit) screen is counted according to the rules listed below.

- When the number of bytes is counted, each double-byte character is counted as 2 bytes and each single-byte character is counted as 1 byte.
- When the number of characters is counted, single-byte/double-byte character, single-byte dakuten “ ” and han-dakuten “ ” are counted as 1 character respectively.

In the Character entry (edit) screen, if the number of characters that can be entered using the current function is exceeded, the exceeding part appears in gray. Use as an approximate guide to how many more characters you can enter.

■ Scrolling

In the Character entry (edit) screen, use [] to scroll up and down one line at a time, and [] and [] to scroll 1 page at a time.

In the conversion candidates list, you can also use [] or [] to scroll 1 page at a time.

Data protection during text entry and editing

When you are entering text in the Character entry (edit) screen and the battery fails or you receive a voice call, the entered text is stored and not cleared from the screen.

■ If the battery fails

If the low-voltage alarm sounds during text entry, the Character entry (edit) screen is replaced by the “Recharge battery” message screen. When this happens, the entered text is automatically confirmed

and saved so that you can continue entering the text when you turn the FOMA terminal back on and retrieve the function. However, in some functions, the entered data is not saved. Also, unconfirmed text that is being converted is not saved.
Re-editing the phonebook → p.77

■ If you press

If you press  while entering text, a message appears asking whether to discard and exit text entry. However, this message does not appear if no text is entered.

<To quit without saving the text>

Select "YES". The previous screen or standby screen reappears without saving the entered text.

You can also exit the text entry screen without saving the entered text by pressing .

<To continue entering text>

Select "NO". The Character entry (edit) screen reappears with the entered text still displayed.

You can also return to the Character entry (edit) screen by pressing .

■ When you receive a voice call

If you receive a voice call while entering text, you can answer the call without disturbing the text being entered. When the call ends, the Character entry (edit) screen reappears. You can use  (MULTI) during a voice call to display the task switch screen and return to the Character entry (edit) screen while talking. → p.279

Other text entry functions

For the operations such as switching the character entry mode on the Character entry (edit) screen or entering symbols or pictographs, you can use useful keys as well as the function menus.

● Useful keys to assist text entry

Key	Description
 (Pict/Sym)	Enters pictographs or symbols continuously. The list changes as follows every pressing  (Pict/Sym). History → Pict → Pict-D* → Symbol *: Only appears on the Compose message screen, Edit header/Edit signature screens and Edit Template screen. To end the continuous entry, press  (Close) or  (CLR). Symbols list → p.349 Pictographs → p.351

Key	Description
 (Pict/Sym) (1 second or longer)	Displays the Pictograph D (Decorate Pl) entry screen which is arranged by the categories. → p.167 *: Only available on the Compose message screen, Edit header/signature screen or Edit Template screen.
 (Chrct)	- The character mode switches each time you press  (Chrct) in 5-touch mode. Alphabetic (single-byte) → Numeric (single-byte) → Kanji/Hiragana (double-byte) → Katakana (single-byte) * Use the function menu "Single-byte/Double-byte" to switch "Single-byte" and "Double-byte" in Katakana, alphabets and numbers modes. - Double-byte and single-byte switches each time you press  (A/AB) in 2-touch mode. Double-byte → Single-byte
	Enter Dakuten, Han-dakuten or punctuation marks.
	- Enters a line feed " " and moves the cursor to the next line. - Returns to the previous reading in 5-touch input mode. (Example: え → う)
	Convert entered character to uppercase/lowercase. (Example: っ → っ, a → A)
	- Press repeatedly to enter a space. - Enter a punctuation mark, etc.
	When the cursor is at the end of the text, pressing  enters a space and pressing  enters a line feed symbol.

NOTE

<History>

- Previously entered pictographs and symbols appear.

Character entry (edit) screen (p.298)

Single-byte ⇄ **Double-byte** Switches the single-byte/double-byte modes.

Common phrases → p.303

Copy • Cut • Paste → p.304

Undo Undo the previous operation.

Input method Set input method.

Input mode (default: 5-touch) Toggle 5-touch/2-touch.

Auto cursor (default: 1) Set speed of auto cursor movement ( to 1). Select "off" or "1" to "5".
off: Does not move (remains )
1: Slowest, 5: Fastest

Quote phonebook..... Searches for a phonebook entry to quote from and selects an item to quote.

"About multiple-choice" → p.39

Searching the phonebook → p.79

Quote My Profile.....Selects an item to quote. "About multiple-choice" → p.39

Kuten code → p.305

Bar code reader.....Quote data read by Bar code reader. → p.138

Refer dictionary.....Starts the dictionary. → p.292

Enter.....Save edited text and exit text entry (edit).

Cancel.....Exit text entry without saving edited text.

NOTE

- You cannot switch the double-byte/single-byte modes in "Kanji/Hiragana input mode".
- You can delete the line-feed symbol "↵" in the same way as other characters.
- You cannot enter double-byte symbols in the e-mail address registration screen, i-mode mail address input screen or URL input screen.
- In the Character entry (edit) screens for specific items such as postal codes, it may not be able to switch the text entry mode.

<Undo>

- The following operations can be undone:
 - Enter text
 - Enter common phrases → p.303
 - Enter Pictographs/Symbols → p.302
 - Enter Kuten code → p.305
 - Cut & Paste → p.304
 - Delete text → p.303
 - Quote phonebook/My Profile → p.303

<Quote My Profile>

- When you quote an address information, a space may be entered between each item.
- NTT DoCoMo accepts no liability whatsoever regarding the problem caused by the incorrect input of the owner information.

Deleting text

Use  to move the cursor to the character you want to delete and hold down **[CLR]** briefly (less than 1 second). The character under cursor is deleted.



■ If you hold down **[CLR]** for 1 second or longer
Text under and following the cursor is deleted.

■ When there is no character under cursor and in the right side of cursor position

The character to the left of the cursor is deleted.

■ If you hold down **[CLR]** for 1 second or longer when there is no character under and following the cursor

All the text is deleted.

Entering common phrases

● Modifying/Storing Common Phrases → p.304

1  **Character entry (edit) screen (p.298) ▶**
(FUNC) ▶ "Common phrases" ▶
Select a folder

2 **Select a common phrase ▶  (Select)**

NOTE

- Common phrases can be used in the following Character entry (edit) screens:
 - Edit text memo
 - i-mode mail subject/message
 - i-mode mail headers/signatures/quotation marks
 - Enter mail search subject
 - Enter auto sort setting subject
 - Common phrase folder/Editing common phrase
 - Edit alarm title
 - Refer dic. words input
 - Edit To Do list
 - Edit Wake-up message
 - Edit i-mode text box
 - Edit i-appli text

Modifying/Storing Common Phrases


<Store common phrases>

You can store frequently used phrases as common phrases in advance so that they can be retrieved when entering text.


- Up to 10 original common phrases can be stored in the "Original" folder.
- Each of the 8 category folders other than "Original" contains 10 pre-installed common phrases. → p.357
- Pre-installed common phrases can be edited.
- Folders can be renamed.

Composing a new common phrase

- 1** **MENU** ▶ **"Own data" ▶ "Common phrases"**
The "Common phrase folder list" screen appears.

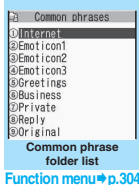

- 2** **Select a folder**
The "Common phrase list" screen appears.

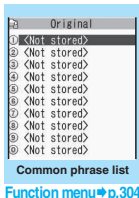

- 3** Highlight "<Not stored>" ▶ **(Edit)** ▶ Enter the common phrase

NOTE

- You can use pictographs in common phrases for mails.

FUNC

Common phrase folder list screen (p.304)

Edit folder name.....Edits the folder name. You can enter up to 10 double-byte or 20 single-byte characters.

Reset name.....Resets the folder name to the default folder name.

IC trans. all → p.260

Send all Ir data → p.258

FUNC

Common phrase list screen (p.304)

Edit.....Edits the common phrase.

IC transmission → p.259

Send Ir data → p.258

Delete this • Delete all.....Deletes one or all common phrase(s).

Copying, Cutting and Pasting Text

- Only one item of copied or cut data can be stored. Copying or cutting a new item overwrites the previously stored text.

Copying (or cutting) text

- 1** **Character entry (edit) screen (p.298)** ▶ **(FUNC)** ▶ **"Copy" or "Cut"**
- 2** **Move the cursor to the beginning of the text to be copied or cut** ▶ **(Start)**
 ■ To select all text
 ▶ **(All)**
- 3** **Move the cursor to the end of the text to be copied or cut** ▶ **(End)**
 The selected text is stored. You can store up to 5,000 double-byte characters or 10,000 single-byte characters.
 ■ **If the text is cut**
 The selected text is deleted, but it is stored in the FOMA terminal.

Pasting text

- Once you have cut or copied text, you can paste that text as many times as you like until you cut or copy other text next time or turn the FOMA terminal off.

1 Character entry (edit) screen (p.298)▶ Move the cursor to the position to paste▶[F] (FUNC)▶“Paste”

- If the text to be pasted includes characters that cannot be entered in the intended Character entry (edit) screen

A message appears notifying you that the characters will be replaced by spaces when the text is pasted.

Entering Text Using Kuten Codes

<Kuten code>

This function provides a way of entering kanji, hiragana, katakana, symbols and alphanumeric characters using 4-digit “kuten” codes.

- For the Kuten code and the characters that can be input using the Kuten code, refer to the PDF format “Kuten Code List” in the provided CD-ROM.
- The character or a symbol in the Kuten Code List may be displayed differently on the screen.

<Example: Entering “慶” (kuten code 2336)>

1 Character entry (edit) screen (p.298)▶ [F] (FUNC)▶“Kuten code”

The input mode changes to “Kuten code input mode” and “[X]” appears in the information display area.

2 Enter kuten code [2][3][3][6]

The character (“慶” in this example) for the entered code appears and the FOMA terminal reverts to the original input mode.

- If there is no corresponding character for the entered kuten code

A space is entered.

Storing Frequently Used Words


<Own dictionary>

You can store frequently used words in the own dictionary under your preferred reading and recall these words by entering and converting the reading in the Character entry (edit) screen.

- Own dictionary can store up to 100 words.
- Each Word can contain up to 10 double-byte or 20 single-byte characters. Readings can include up to 10 double-byte hiragana.

1 [MENU]▶“Own data”▶“Own dictionary”

The “Own dictionary” screen appears.

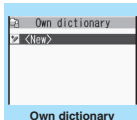

Own dictionary
Function menu▶p.305

2 “<New>”▶Enter the word▶Enter the reading

- To check the words
▶ Selecting checking words

- To edit a word
▶ Highlight the word you want to change▶
[E] (Edit)

NOTE

- Registered words can be entered using Prediction. Some readings do not show candidates until converted and entered.

[FUNC] Own dictionary screen (p.305)

Edit.....Edits the stored word.

iC transmission→p.259

Send Ir data→p.258

iC trans. all→p.260

Send all Ir data→p.258

Delete.....Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.39

Resetting the Learning Record

<Clear learned>

The learning record contains character strings that were entered in the past and automatically stored as candidates for character conversion. This procedure resets the learning record to its default status at the time of purchase.

- 1 **“Settings” ▶ “Other settings” ▶ “Character input set” ▶ “Clear learned” ▶ “Enter your security code”**

Prediction/ImgSym..... Clears the learned records stored using “Prediction”, “Pictograph”, “Face Mark” and “Symbol”.

Kana/Kanji change..... Clears the learned record order for User conversion.

Using Download Dictionaries


<Download dictionary>

You can set the dictionaries downloaded from i-mode sites, etc. for Prediction.

- The FOMA terminal can store up to 5 download dictionaries.
- The dictionary is activated when downloaded.
- For information on downloading dictionaries → p.155

- 1 **“Own data” ▶ “DL dictionary”**

The “Download dictionary” screen appears.

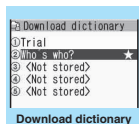

- 2 **Select a dictionary**

A star “★” appears next to the active dictionary.

■ To inactivate

- ▶ Select a dictionary marked with a star “★”.

The dictionary is inactivated and the star “★” disappears.

FUNC

Download dictionary screen (p.306)

Edit title..... Edits the title of the download dictionary. You can enter up to 10 double-byte or 20 single-byte characters.

Set dictionary..... Activates or inactivates the download dictionary.

Dictionary info..... Displays information for the download dictionary.

Delete this • Delete all..... Deletes one or all download dictionary (dictionaries).

Entering Text Using 2-Touch

<2-touch>

You can enter 1 character by pressing 2 dial keys.

For example, to enter “う”, press **1 3** in sequence as “う” is the third character of the “あ column”, “あいうえお”.

- Refer to “Characters that can be entered using 2-touch” (p.348) for details on the character assignment.
- The conversion method using Prediction/User conversion is the same as that of 5-touch. → p.300

<Example: To enter “けんとう”>

- 1 **Character entry (edit) screen (p.298) ▶**

Set to Double-byte input mode

When “Double-byte input mode (全)” is not set, press **1 2** (A/AB) to switch the mode.

- 2 **Enter the hiragana**

2 4 **0 3** **4 5** **1 3**
け っ と う

NOTE

- **1 2** is also available to enter “Dakuten/Han-dakuten” or to switch.
- **1 3** is also available to toggle “Uppercase/Lowercase”.
- Function menu “Single-byte/Double-byte” is also available to toggle “Single-byte/Double-byte”.

Network Services

Voice Mail Service	Voice Mail	308
Call Waiting	Call Waiting	309
Call Forwarding Service	Call Forwarding	310
Nuisance Call Blocking Service	Nuisance Call Blk	311
Caller ID Request Service	Caller ID Request	312
Dual Network Service	Dual Network	312
English Guidance	English Guidance	312
Service Dialing Number	Service Numbers	313
Handling Calls Received During a Call	In-Call Function Selection	313
Setting up Remote Control	Remote Control	314
Multi Number	Multi Number	315
2in1	2in1	316
OFFICEED	OFFICEED	319
Adding and Using Services	Additional service	319

Available Network Services

- Your FOMA terminal provides you with access to a range of useful DoCoMo network services. For the outline and the details on the services, refer to the reference pages in the following table.

Service name	Subscription	Monthly usage fees	Ref. page
Voice Mail Service	Required	Charged	p.308
Call Waiting	Required	Charged	p.309
Call Forwarding Service	Required	Free	p.310
Nuisance Call Blocking	Not required	Free	p.311
Caller ID Notification	Not required	Free	p.48
Caller ID Request	Not required	Free	p.312

Service name	Subscription	Monthly usage fees	Ref. page
Public mode (Driving mode)	Not required	Free	p.65
Public mode (Power OFF)	Not required	Free	p.66
Dual Network Service	Required	Charged	p.312
English Guidance	Not required	Free	p.312
Multi Number	Required	Charged	p.315
2in1	Required	Charged	p.316
OFFICEED	Required	Charged	p.319
Melody call	Required	Charged	p.90

- For the service used by connecting to the Network Service Center, you cannot operate the service with " ".
- For the application and questions, contact the inquiries number provided on the back of this manual.
- This section explains the overview of the network services using the menus on the FOMA terminal. For more details, see "Mobile Phone User's Guide [Network services]".
- "OFFICEED" is a fee-based service and requires a subscription. For details, visit DoCoMo Website for corporates (<http://www.docomo.biz/d/212/>) (Japanese).

When you are in the out of service area, when the FOMA terminal is not turned on, or when you cannot answer the call, this service plays an answer message to the caller of the voice or videophone call and stores the caller's message on your behalf.

- To give priority to voice mail when "Record message" (p.68) is set at the same time, ensure that the ring time set for voice mail is shorter than the ring time set for "Record message".
- When you do not answer the voice or videophone call when the Voice mail service is set to "Activate", calls are logged in the "Received calls" record as "Missed calls" record, and the "Missed call" shortcut icon appears on the standby screen.
- The message can be recorded up to 3 minutes for 1 message, up to 20 messages for each of the voice and videophone calls, and stored up to 72 hours.

Basic flow of Voice mail service operation

Voice Mail service activated



Your FOMA terminal receives a voice/
videophone call



You cannot answer the call and it is
connected to the Voice Mail service center



The caller records a message

If the caller is in a hurry and wishes to leave a message without listening to the Voice Mail answering message, he or she can interrupt the answering message and switch to message recording mode immediately by pressing [#].



The Voice Mail service center notifies you that
you have a recorded message



You listen to the recorded message

Using the Voice Mail service

1 "Service" ▶ "Voice Mail" ▶ Select any item:

Play messages^{*1}.....The FOMA terminal calls the Voice mail service center.

Plays the recorded messages by following the audio guidance.

Activate^{*1}.....Activates the Voice Mail service. The ring time (000 to 120 seconds) can be set. When set to 0 second, received calls are not recorded in the "Received calls" record.

Deactivate^{*1}.....Deactivates the Voice mail service.

Set ring time^{*1}.....Changes the ring time only (000 to 120 seconds).

Check setting^{*1}.....Checks the current Voice mail service settings.

- About the function menu of the displayed "Voice Mail setting" screen. → p.309

Setting^{*1}.....Changes the Voice mail service settings using audio guidance.

The FOMA terminal calls the Voice mail service center.

Specify the settings by following the audio guidance.

Check messages^{*1}.....Checking whether there is a recorded message.

Message notification^{*2}.....Emits the original notification tone when the number of recorded messages stored at the Voice mail service center increases.

Erase icon^{*1}.....Clears the "  " icon (Voice mail icon) from the standby screen.

Activate notice call^{*1}.....When you receive a call while the FOMA terminal is turned off or is out of the service area, an SMS is sent to notify you of the information about the call (date, time and the caller ID) once you turn the FOMA terminal back on or move back in to the service area.

All Calls^{*1}.....Notifies you of all received calls.

Calls with Caller ID^{*1}.....Notifies you of only the calls with the caller ID.

Deactivate notice call^{*1}.....Deactivates the notice call.

Notice call status^{*1}.....Checks the current Notice call service settings.

*1: When 2in1 is set to Dual mode, the screen appears to select Number A or Number B. However, the selection screen appears for "Check setting" even in B mode.

*2: Only for the recorded message of voice calls.

NOTE

- To change the Voice mail service setting for videophone calls, make a voice call to "1412".

<Check setting>

- When checking Number B setting for 2in1, only the active or inactive information appears.

<Check messages>

- If you have the recorded messages stored at the Voice mail service center, the "☎" (voice mail icon) and "☎" ("Voice mail" shortcut icon) appear on the standby screen for the recorded messages of voice calls. The recorded messages of videophone calls are notified by SMS.

- The number in the voice mail icon changes according to the number of stored messages "1", "2", "3" ... "10" (10 messages or more).

The displayed number of Voice mail messages is the number of new messages announced by the Voice mail center. The number of stored messages is not included.

- You may not be able to use this function to check for the message recorded after checking the message.

<Message notification>

- When 2in1 is set to A mode or B mode, the notification tone does not sound when a message is recorded for the unused number.

<Erase icon>

- Clearing the icon does not delete the corresponding recorded messages. The voice mail icon appears again when you check for messages.

<Activate notice call>

- Even if you set the SMS Rejection setting, the FOMA terminal receives the notification.



Voice Mail setting screen (p.308)

Activate • Deactivate Activates or deactivates the Voice mail service.

Set ring time Changes the ring time.

Call Waiting

<Call Waiting>

When you receive a call while talking on a call, this service notifies the call with a ring tone and you can answer the newly received call by putting the current call on hold. You can also put your current call on hold and make a new call to someone else.

- To use Call waiting, select "Answer" in "Incoming Call Mng" (p.313) beforehand. If another setting is selected, you will not be able to answer a voice call received during another voice call even when Call waiting is activated.
- You can answer another call when you receive a videophone call during a voice call or when you receive a voice call or videophone call during a videophone call if you activate Call waiting and set "Incoming Call Mng" to "Answer". In this case, you have to end the current voice call or videophone call (You cannot put the current call on hold).

→ p.313

Using the Call Waiting

- 1 **MENU** ▶ "Service" ▶ "Call Waiting" ▶ Select any item:

Activate • Deactivate Activates or deactivates the Call waiting service.

Check setting Checks the current Call waiting service settings.

Putting the current voice call on hold to answer a new received voice call

- 1 **When you hear the double tones (repeated soft double-beeps) during a voice call, press**

Your first call is automatically put on hold and the FOMA terminal answers the new voice call.

- 2 **Switch back to the first call**

■ **To end the call with the second caller**



This ends the call with the second caller and returns you to your first call.

■ **To put the second caller on hold**



This puts the second caller on hold and returns you to your first call.

You can switch back and forth between the 2 calls by pressing .

■ To end the voice call on hold

▶ [Envelope] (FUNC) ▶ "End held call"

Ending the current voice call to answer another voice call

1 When you hear the double tones (repeated soft double-beeps), press



The first call is ended and the ring tone sounds.



The FOMA terminal answers the new voice call.

Putting the current voice call on hold to make a voice call to someone else

You can put your current voice call on hold and make a new voice call to someone else.

1 Dial another phone number during your current call ▶

Your first call is automatically put on hold and the FOMA terminal switches to the new call.

You can also make calls by searching the phonebook.

Searching the phonebook → p.79

2 Switch back to the first call

■ To end the new call



This ends the new call and returns you to your first call.

■ To put the new call on hold



This puts the new call on hold and returns you to your first call.

You can switch back and forth between the 2 calls by pressing .

■ To end the voice call on hold

▶ [Envelope] (FUNC) ▶ "End held call"

Call Forwarding Service

<Call Forwarding>

When you are in out of service area or when the FOMA terminal is not turned on, or when you do not answer the call within the set ringing time, this service forwards the voice/videophone call.

- To give priority to the Call forwarding service when "Record message" (p.68) is set at the same time, ensure that the ring time set for the Call forwarding service is shorter than the ring time set for "Record message".
- When you do not answer the voice or videophone call when the Call forwarding service is set to "Activate", calls are logged in the "Received calls" record as "Missed calls" record, and the "Missed call" shortcut icon appears on the standby screen.

Basic flow of Call forwarding service operation

Call Forwarding number registered



Call Forwarding service activated

 


Your FOMA terminal receives a voice or videophone call



If you do not answer the voice or videophone call, it is automatically forwarded to the specified number

Call forwarding service call charges



Using the Call Forwarding service

1 "Service" ► "Call Forwarding" ► Select any item:

Activate^{*1}.....Set the forwarding number and the ring time, then select "Activate".

Register fwd number.....Enter the forwarding number.

Once you set the number, a star "★" appears next to "Register fwd number".

- You can use  or  to enter the number by searching the phonebook.

How to search the phonebook → p.79

Set ring time.....Enter the ring time (000 to 120 seconds).

Once you set the number, a star "★" appears next to "Set ringing time". When set to 0 second, received calls are not recorded in the "Received calls" record.

Activate.....Activates the Call forwarding service.

Deactivate^{*1}.....Deactivates the Call forwarding service.

Change forwarding No.....Enter a phone number to set a new forwarding number.

When you select "Change No.+Activate", you can also set the Call Forwarding Service to "Activate" at the same time.

Fwd number busy^{*2}.....When the forwarding number is busy, received calls are transferred to the Voice mail service center.

Check setting^{*1}.....Checks the current Call forwarding service settings.

^{*1}: When 2in1 is set to Dual mode, the screen appears to select Number A or Number B. However, the selection screen appears for "Check setting" even in B mode.

^{*2}: The subscription to the "Voice Mail service" is required.

NOTE

<Activate>

- When 2in1 is set to B mode, you cannot select "Register fwd number" and "Set ring time".
- To give priority to Call forwarding when "Remote monitoring" is set at the same time, ensure that the ring time set for Call forwarding is shorter than the ring time set for "Remote monitoring".

<Change forwarding number>

- When 2in1 is set to B mode, you cannot select "Change No. + Activate".

<Check setting>

- When checking Number B setting for 2in1, only "Active" or "Inactive" appears.

Setting or canceling the call forwarding guidance message

1 On the standby screen 1 4 2 9

- Set the call forwarding guidance message by following the audio guidance message.
- For more information, refer to the "Mobile Phone User's Guide [Network Services]".

Nuisance Call Blocking Service

<Nuisance Call Blk>

This service enables you to reject receiving "Nuisance calls". Once you store the number to reject, calls from the number are automatically rejected and answered by a message.

- The ring tone does not sound even when you receive a call from the number stored to reject. Also, the call is not recorded in "Received calls" record.

Using the Nuisance Call Blocking service

1 "Service" ► "Nuisance Call Blk" ► Select any item:

Register Caller.....Registers the number of the last caller you answered as a barred numbers.

Register number.....Registers the phone number by using the dial keys or quoting from the phonebook or Received calls record, etc.

- You can use  or  to enter the number by searching the phonebook. Searching the phonebook → p.79
- You can use  to search the Received calls record and  to search the Redial record.

Delete last entry.....Deletes the last registered phone number. By repeating the same procedure, you can delete the stored barred number one by one from the last one.

Delete all entries.....Deletes all the barred numbers.

The number of entries.....Checks the number of call barring entries.

Caller ID Request Service

<Caller ID Request>

When you receive a voice/videophone call from a caller who do not provide his or her phone number (caller ID), the call is answered by a message requesting the Caller ID, then the call automatically ends.

- Calls rejected by the Caller ID request service are not logged in the "Received calls" record and no "Missed call" shortcut icon appears.

Using the Caller ID Request service

1 [MENU] ▶ "Service" ▶ "Caller ID Request" ▶ Select any item:

Activate • Deactivate.....Activates or deactivates the Caller ID request service.

Check setting.....Checks the current Caller ID Request service settings.


Dual Network Service

<Dual Network>

This service enables you to use the mova terminal with the phone number of your FOMA terminal. You can switch between the FOMA network and the mova network depending on the service area.

- You cannot use the FOMA terminal and the mova terminal at the same time.
- Switch the Dual network service from the terminal which is not using the service.
- For details on how to access the service from a mova terminal, refer to the "Mobile Phone User's Guide [Network Services]".

Overview of Dual Network service

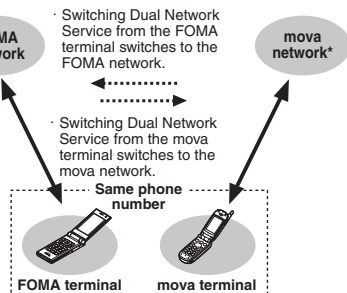

*: Some services are not available.

Using the Dual Network service

1 [MENU] ▶ "Service" ▶ "Dual Network" ▶ Select any item:

Dual Network switching.....The network security code is required to switch.

Network security code → p.108

Check setting.....Checks whether the FOMA terminal can access the services or not.

NOTE

- If you use Dual Network Service on the mova terminal in Japan after using the FOMA terminal overseas, turn on the FOMA terminal before use.

<Dual Network switching>

- To switch networks, end communication from the terminal that is currently able to access services before making the switch.

English Guidance

<English Guidance>

You can set English as the language used in guidance messages for setting network services such as the "Voice Mail" service or the audio message such as the out of area warnings.

Item	Language	Guidance
Outgoing (including the guidance for the settings of the network services)	Japanese	Plays in Japanese.
	English	Plays in English.
Incoming (guidance messages played to callers)	Japanese	Plays in Japanese.
	Japanese + English	Plays in Japanese first and then in English.
	English + Japanese	Plays in English first and then in Japanese.

NOTE

- Caller's setting has priority over receiver's setting between DoCoMo's handsets.

Using the English Guidance

1 ▶ “Service” ▶ “English Guidance” ▶ Select any item:

Guidance setting.....Selects the setting from the followings:

Outgoing+Incoming.....Selects the language for outgoing calls from “Japanese/English”, then selects the language for incoming calls from “Japanese/Japanese+English/English+Japanese”.

Outgoing call.....Selects the language only for the outgoing calls from “Japanese/English”.

Incoming call.....Selects the language only for the incoming calls from “Japanese/Japanese+English/English+Japanese”.

Check setting.....Checks the current English guidance settings.

Service Dialing Number

<Service Numbers>

You can make a call to the DoCoMo general help desk and service counter for information on faults, etc.

- The displayed items may be different or the items are not displayed depending on the FOMA card (UIM) you are using.

1 ▶ “Service” ▶ “Service Numbers” ▶ Select any item:

ドコモ故障問合せ.....Calls the DoCoMo service desk.

ドコモ総合案内・受付.....Calls the DoCoMo general information desk.

Handling Calls Received During a Call

<In-Call Function Selection>

You can specify how to handle voice calls, videophone calls and 64K data communication that arrives during a call when you have subscribed to the “Voice Mail”, “Call Forwarding” or “Call Waiting” service.

- If you have not subscribed to “Voice Mail”, “Call Forwarding” or “Call Waiting” service, you cannot answer the calls received during calls.
- To use “Incoming Call Mng”, set “Set in-call arrival” to “Active”.

Selecting how to handle incoming calls during another call

<Incoming Call Mng>

1 ▶ “Service” ▶ “Incoming Call Mng” ▶ Select any item:

Voice Mail.....Transfers voice or videophone calls received during a call to the Voice mail service center regardless of the “Call Waiting” and “Voice Mail” service settings.

Call Forwarding.....Transfers voice and videophone calls received during a call to the forwarding number regardless of the “Call Waiting” and “Call Forwarding” service settings.

Call Rejection.....Rejects voice and videophone calls and 64K data communication received during a call.

Answer.....If “Call Waiting” is activated and a voice call is received during another voice call, you can use the “Call Waiting” service. If call waiting is not activated or during a videophone call or 64K data communication, the call can be handled in any of the following ways:

- You can end the current voice or videophone call or 64K data communication, and answer the received voice or videophone call or 64K data communication.
- You can use the function menu to manually handle a voice call, videophone call or 64K data communication received during a call. → p.314
- If “Voice Mail” service or “Call Forwarding” service is activated, calls can be handled using these service settings.

Set in-call arrival

Activates/deactivates the function setting selected in “Incoming Call Mng” or checks the setting.

1 ▶ “Service” ▶ “Set in-call arrival” ▶ Select any item:

Activate.....Activates the “Incoming Call Mng” setting.

Deactivate.....Deactivates the “Incoming Call Mng” setting.

Check setting.....Displays the current setting.

Ending the current call or 64K data communication to answer a received call

● When the current call and incoming call are the same type

<Example: Ending the current voice call to answer a received voice call>

1 When you hear the double tones (repeated soft double-beeps), press



This ends the current call and the FOMA terminal starts ringing.

■ For videophone or 64K data communication

The ringing call screen appears.



2

This accepts the incoming voice call.

■ For 64K data communication

▶ Receive the call on a PC

● When the current call and incoming call are different types

If you receive a videophone call or 64K data communication during a voice call, if you receive a voice call or 64K data communication during a videophone call, or if you receive a voice or videophone call during 64K data communication, use this procedure to end your current call or 64K data communication to answer the incoming call.

<Example: Ending the current videophone call to answer an incoming voice call>

1 You hear the double tones (repeated soft double-beeps) and the voice call ringing screen appears

When you receive a 64K data communication, the double tones (repeated soft double-beeps) do not sound.

2

■ For 64K data communication

▶ ▶ Receive the call on a PC

Manually rejecting calls or connecting to the Call Forwarding or Voice Mail service

<Example: When Set in-call arrival is set to "Activate" and Incoming Call Mng is set to "Answer">

1 When you hear the double tones (repeated soft double-beeps), press (FUNC)

2 Select how to handle the received call

■ To reject a received call

▶ "Call Rejection"

■ To forward a received call to the forwarding number

▶ "Call Forwarding"

■ To transfer a call to the Voice mail service center

▶ "Voice Mail"

With any of the above procedures, you can return to your first call.

Setting up Remote Control

<Remote Control>

You can operate the "Voice Mail" or "Call Forwarding Service", etc. from push-key-type ordinary phones, payphones, DoCoMo mobile phones, etc.

- To use the "Voice Mail" or "Call Forwarding" service overseas, set Remote Control beforehand.
- For details on operating network services from a payphone, etc., refer to the "Mobile Phone User's Guide [Network Services]".

1 ▶ "Service" ▶ "Remote Control" ▶ Select any item:

Activate • Deactivate..... Activates or deactivates the Remote control.

Check setting..... Checks the current Remote control settings.

Multi Number

<Multi Number>

You can add and use the maximum of two additional numbers (additional number 1 and additional number 2) other than the basic number as the phone numbers of the FOMA terminal.

- Cannot be used with 2in1 at the same time.
- The name stored for the multi number (basic number, additional number 1/2) respectively appears on the screen when making or receiving a call.
- When you make a call using the Redial/Received calls record, the multi number used for making or receiving a call at the last time is displayed and the call is made from the number.

Using Multi Number

1 "Service" ▶ "Multi Number" ▶ Select any item:

Set Multi Number.....Specifies the phone number you use for ordinary calls.

Basic Number*.....Sets to call from the subscribed phone number (basic number).

Additional Number1 • Additional Number2*.....Sets to call from the additional number.

Check setting.....Checks the current Multi number settings.

Number Setting.....Registers the additional number notified at the subscription of the Multi number to the FOMA terminal.

▶ **Highlight the item to register (or change) the additional number** ▶  **(Edit)** ▶ **Enter the name** ▶ **Enter the additional number**

You can enter up to 8 double-byte or 16 single-byte characters for the name and you can enter up to 26 digits for the additional number.

- About the function menu of the "Multi Number setting" screen which appears when "Phone number record" is selected. → p.315

Select ring tone.....Sets the ring tone for the received calls to the additional number 1 and additional number 2 respectively. → p.88

* : When the name is changed, registered name appears respectively.

NOTE

- If you remove the FOMA card (UIM) or change to other FOMA card (UIM), the multi number settings data (names and phone numbers, etc) on the FOMA terminal may be erased. In this case, saving the data again.

NOTE

<Phone number record>

- The name appears when you make various settings of the multi number function or when you select a phone number to use for each call.

<Select ring tone>

- Refer to p.89 for the priority when the ring tone settings are duplicated.



Multi Number setting screen (p.315)

Edit.....Edits the name in the basic number or the phone number in the additional number.

Delete this.....Deletes one name in the basic number or one name and phone number in the additional number.

Delete all.....Deletes all names in the basic number and all names and phone numbers in the additional number.

Switching the phone number for each call

You can switch the phone number each time you make a call.

1 Enter phone number screen (p.50) ▶ (FUNC) ▶ "Multi Number" ▶ Select any item:

Basic Number*.....Sets to call from the subscribed phone number (basic number).

Additional Number1 • Additional Number2*.....Sets to call from the additional number.

Cancel number.....Cancels the setting, allowing you to dial following "Set Multi Number" setting.

* : When the name is changed, registered name appears respectively.

NOTE

- You can also switch the phone number from the function menu of phonebook detail screen, detail screen of Redial/Dialed calls/Received calls records, etc.

You can separately use 2 phone numbers and 2 mail addresses on your FOMA terminal as if you have 2 terminals.

- In this function, your phone number and mail address is called "Number A and Address A" and the additional phone number and mail address is "Number B and Address B".
- Cannot be used at the same time as Multi Number.

NOTE

- Information of Number B and Address B can be obtained with the following operation.
 - Number B: Run "Check 2in1" from the function menu in the My Profile screen for Number B → p.287
 - Address B: Run "Acquire Automatically" for the mail address when registering My Profile for Number B → p.287
- For details on 2in1, refer to "Mobile Phone User's Guide [2in1]".

About Modes

In 2in1, modes can be set to "A mode", "B mode" or "Dual mode".

Mode	Description
A mode	You can dial with your phone number (Number A), send i-mode mails with Address A, or browse related data.
B mode	You can dial with 2in1 phone number (Number B), access to sites where WEB Mail is available with Address B, and browse related data.
Dual mode	The mode that supports both functions of A and B mode.

- See **Table 1** (p.316) for the details of available services in each mode.

NOTE

- Mail transmission for Address B is executed in the specified WEB Mail site.
- Packet communication in B mode is available while subscribing to the i-mode service.
- Set A mode before you replace a FOMA card with the subscription to 2in1 service to the FOMA card without subscription.

[Table 1] Services available for each mode

- Only the functions with different operations depending on the mode are listed. (Those which operate in the same way as A mode are omitted.)

Service		A mode	B mode	Dual mode
Voice call/ Videophone	Dialing	Number A	Number B	Selectable on making a call ¹
	Receiving ²	All		
Phonebook ³	Display ⁴	A: Common	B: Common	All
	Name conversion ⁵	A: Common	B: Common	All
	2in1 setting on a new entry	A	B	A
	Receives all data through infrared data port/i/microSD memory card	Copies Phonebook 2in1 setting in the original source ⁶		
	Receives one data through infrared data port/i/microSD memory card	A	B	A
	FOMA Card Phonebook	Copy to UIM Copy to phone	Phonebook 2in1 setting is common	
Redial	Display	A	B	A
Received calls	Display	Dials with Number A	Dials with Number B	All
		Receives with Number A	Receives with Number B	All

Service			A mode	B mode	Dual mode
Mail/ SMS	Display ^{*4}		Sent/received mails with Address A Sent/received SMS with Number A	(FOMA terminal) Received mails (when “端末に保存 (Save to the terminal)” is selected on the WEB Mail site) or alert mails for new message/alarm to Address B which are saved in your FOMA terminal SMS received with Number B (WEB Mail site) Sent/received mails with Address B	(FOMA terminal) Sent/received mails with Address A, and received mails or alert mails for new message/alarm to Address B which are saved in your FOMA terminal Sent/received SMS with Number A SMS received with Number B (WEB Mail site) Sent/received mails with Address B
	Send		(FOMA terminal) Mails from Address A SMS from Number A	(FOMA terminal) Unavailable for sending mails/SMS (WEB Mail site) Mails with Address B	(FOMA terminal) Mails from Address A ^{*7} SMS from Number A (WEB Mail site) Mails with Address B
	Receive		Mails to Address A/ SMS to Number A (vibration) Mails or alert mails for new message/alarm to Address B saved in FOMA terminal, or SMS with Number B (no vibration)	Mails to Address A/ SMS to Number A (no vibration) Mails or alert mails for new message/ alarm to Address B saved in FOMA terminal, or SMS with Number B (vibration)	Mails to Address A/ SMS to Number A (vibration) Mails or alert mails for new message/alarm to Address B saved in FOMA terminal, or SMS with Number B (vibration)
	Receives all data through infrared data port/iC/microSD memory card		Copies the status in the original source. ^{*6}		
	Receives one data through infrared data port/iC/microSD memory card		A		
	FOMA Card (SMS only)	Copy to UIM	A		
		Copy to phone	A	Cannot be displayed	A
i-appli			All available	Available ^{*8}	Available ^{*9}
My Profile			Number A and Address A	Number B and Address B	Number A/B Address A/B

*1: When A or common setting phonebook is set, dialing is made with Number A, and Number B is applied with B setting phonebook.

*2: The restrictions on the selected function is operated differently depending on the combination of settings as shown below.

- A mode is for the specified phone number in the A or common setting phonebook.
- B mode is for the specified phone number in the B or common setting phonebook.
- Dual mode is for the specified phone number in all the phonebook.

However, when Restrict dialing is set, you cannot call the phone numbers that are not specified regardless of the 2in1 mode setting.

*3: Gives priority to Secret data when the data is saved as secret.

*4: In B mode, all phonebook entries in microSD memory card are displayed in a list. However the details are not displayed when 2in1 is set to A mode.

Although mails/SMS are also listed, the details are not displayed if the mail/SMS has been sent to Number A/ Address A.

- *5: This function shows names which are checked against the name of data saved in phonebook with each number/ address and converted into that name, when phone numbers on dialing/incoming, numbers on sending/receiving or addresses on sending/receiving are saved in phonebook.
- *6: A is applied when the terminal of the sender does not support 2in1.
- *7: The destination address is selectable from B setting phonebook when composing a new mail in Dual mode, however, please note that the mail is sent from Address A. Note that if you forward a mail to Address B in Dual mode, the mail is sent from Address A.
- *8: Unavailable for each i-αpli standby screen, Mail-connected i-αpli and the i-αpli used with mail functions.
- *9: Unavailable for i-αpli standby screen.

Using 2in1

Set 2in1 to ON and perform settings operations.

1 "Service" ► "2in1 setting" ► Enter your security code ► "YES" ► Select any item:

■ When 2in1 is set to ON

After entering the security code, 2in1 setting screen appears without showing the screen to confirm whether to set 2in1 to ON is not displayed.

Mode switching.....Selects the 2in1 mode from "A mode/B mode/Dual mode".

"About Modes"→p.316

Phonebook 2in1 setting

Phonebook 2in1 setting.....Highlight the phonebook entry to set and press  (Switch) to select the mode, then press  (Finish).

The mode switches as follows each time you press  (Switch):  (A mode) →  (B mode) →  (Dual mode)

How to search the phonebook→p.79

Group 2in1 setting.....Highlight the group to set and press  (Switch) to select the mode, then press  (Finish).

The mode switches as follows each time you press  (Switch): no setting →  (Dual mode) →  (A mode) →  (B mode)

Stand-by display.....Sets the standby screen displayed in B mode or Dual mode respectively. →p.95

"★" appears for the changed item. To reset the setting, press  (Release).

Set call/receive No.

Disp. call/receive No......Sets to display the information (name, phone number, mail address, etc.) of "Number A (Address A)" and "Number B (Address B)" in different font color to distinguish when making/receiving a call. Press  (Switch) to switch the color of the pallet (16 colors or 256 colors). Press  (Reset) to reset to the default setting.

Ringtone for Number B.....Sets ring tone (p.88), incoming call screen (p.94), illumination (p.99), vibration (p.90) and answering message (p.68) for the incoming voice and videophone calls, and mails on Number B.

2in1 function OFF.....Sets 2in1 to OFF.

Rcv. avoid. setting.....Restricts incoming calls for Number A and Number B.

Change rcv. avoid......Sets the Rcv. avoid. setting for Number A and Number B.

Check rcv. avoid......Checks the Rcv. avoid. setting for Number A and Number B.

Mode link.....Sets the linkage for changing 2in1 mode and Rcv. avoid. setting. Incoming calls only for Number A are accepted in A mode, incoming calls only for Number B are accepted in B mode, and incoming calls for both mode are accepted in Dual mode.

* When the function is activated, you cannot switch the mode with  displayed.

Rcv. avoid. (abroad).....Sets the Rcv. avoid. setting overseas (when Mode link is active, the Rcv. avoid. (abroad) is disabled).

NOTE

- When 2in1 is set to OFF, you can also perform "2in1 settings" by pressing  for 1 second or longer on the standby screen.

<Mode switching>

- You can also change mode by pressing  for 1 second or longer on the standby screen.

<Phonebook 2in1 setting>

- You cannot set this function to UIM phonebook entries.
- Select "Display detail" from the function menu to display "Phonebook detail" screen from "Phonebook list" screen in this function.

<Standby display>

- When Change Mode is set to A mode, standby screens are displayed according to "Display setting".
- When set to the Kisekai Tool you downloaded, the i-αpli standby screen or the random display, the default screen appears even when "Same as Number A" is set.

NOTE

<Disp. call/receive No.>

- Names, phone numbers and mail addresses in the screens below will be displayed in the set color.
 - In-call screen
 - Dialing/Receiving screen
 - Redial/Dialed calls (list/detail)
 - Received calls (list/detail)
 - Sent /Received address record screen (list/detail)
 - Chaku-moji Sent messages record screen
- * : In B mode, the screen for sent addresses cannot be displayed.
- The setting for Number A/Number B (Address A/ Address B) applies to each screen even when 2in1 is set to OFF.

<Ringtone for Number B>

- When making the same settings to Number A and Address A, set each item as "Same as Number A".
 - When the ring tone settings are duplicated, the priority applies. → p.89
- When you receive a call without caller ID on Number B, priority is given to the "Ringtone for Number B" setting.

Switching phone numbers each time when making a call

When 2in1 is set to ON and the mode is set to Dual mode, phone numbers can be switched when making a call.

- This function is available only on the detail screen of "Phonebook/Received calls/Dialed calls/Redial".

<Example: When making a call using the phonebook>

1 Phonebook detail screen (p.79)▶

☑ (FUNC)▶ "Dial setting"▶ "2in1/Multi Num."▶ Select any item:

Number A.....Allows calls to be made from Number A.

Number B.....Allows calls to be made from Number B.

Cancel number.....Releases the setting and allows calls to be made according to Phonebook 2in1 setting.

NOTE

- "2in1/Multi Num." in the function menu cannot be selected when the mode is set to A mode or B mode.

NOTE

- When the following operations are performed, the phone number selection screen is displayed and the phone number to use can be selected.
 - When making calls by entering phone number in the phone number entry screen
 - When using services from the special number registered in Additional service
 - When "Dialing" from the function menu in Sent/ Received address list is selected
 - When using the Phone to function
 - When pressing the switch on the flat-plug earphone/ microphone with switch (optional) on the phone number entry screen
- Dialing or AT command dialing from an external device uses Number A for A mode/Dual mode and Number B for B mode.

OFFICEED

<OFFICEED>

"OFFICEED" is an in-group flat-rate service provided by specified Inbuilding Mobile Communication System (IMCS). A separate subscription is required to use the service. For details, visit DoCoMo website for corporates (<http://www.docomo.biz/d/212/>) (Japanese).

Adding and Using Services

<Additional service>

When a new network service is added by DoCoMo, you can add the service to the menu and use the service.

Adding new services and response messages

1 "Service"▶ "Additional service"▶ Select any item:

Additional service.....Adds new services.

▶ Highlight "<Not stored>"▶ ☑ (FUNC)▶ "Add new service"▶ Enter the service name▶ Select any item:

You can enter up to 10 double-byte or 20 single-byte characters for the service name.

Enter number.....Uses the number to connect.
You can enter up to 20 digits.

Enter USSD number.....Uses the service code to connect.

You can enter up to 40 digits.

- About the function menu of the “Additional service” screen which appears when “Additional service” is selected → p.320

Additional guidance.....Registers the response messages for the commands posted from the network when using the added network service with “USSD” (service code).

▶ Highlight “<Not stored>”▶  (FUNC)▶ “Add new guidance”▶ Enter the command▶ Enter the response message name▶ “YES”

You can enter up to 20 digits for the command and you can enter up to 10 double-byte or 20 single-byte characters for the response message.

- About the function menu of the “Additional guidance” screen which appears when “Additional guidance” is selected → p.320

NOTE

<Additional service>

- To use the service, enter the “number” or “service code” provided by DoCoMo. The “number” is the number used to connect to the service center. The “service code” (USSD) is the code used for notifying the service center.

Additional service screen (p.319)/Additional guidance screen (p.320)



Add new service • **Add new guidance**.....Adds a setting.

Edit.....Changes the setting.

Delete this • **Delete all**.....Deletes one or all additional service(s) or additional guidance(s).

Using the newly added service

- 1 ▶ “Service”▶ “Additional service”▶ “Additional service”
- 2 Select a service▶  (Send)

PC Connection

About Data Communication Available for the FOMA Terminal	322
Before Using	324
Checking the Procedure	324
AT Commands	325
CD-ROM	325
DoCoMo keitai datalink	326

For details on the data communication, refer to the “Manual for PC connection setting” (PDF format) in the provided CD-ROM or DoCoMo's website.

To view the PDF-format “Manual for PC connection setting”, Adobe® Reader® is required. If this software is not installed on your PC, install the Adobe® Reader® in the provided CD-ROM.

Refer to the “Adobe Reader ヘルプ” (Help of the Adobe Reader) for details on how to use it.


About Data Communication Available for the FOMA Terminal

Available data communication

Available data communication between the FOMA terminal and PCs is classified in 3 categories: data exchange (OBEX™ connection), packet communication and 64K data communication.

Data exchange (OBEX™ connection)

You can exchange data such as images, music, phonebook and mail between the other FOMA terminal or PC, etc.

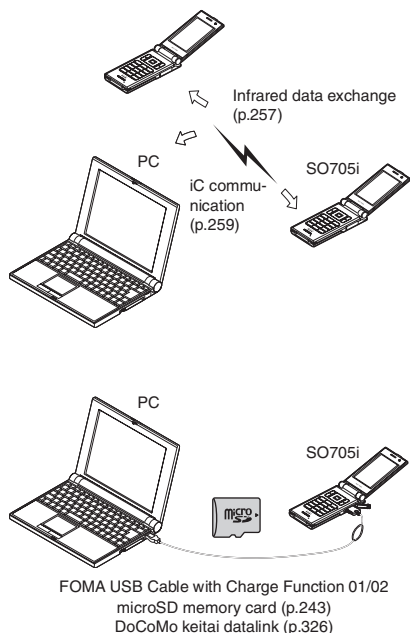

Packet communication

Packet communication is charged according to the amount of data sent and received^{*1}, and the data is received at the maximum speed of 3.6 Mbps^{*2} and sent at the maximum speed of 384 kbps.

You can also access a corporate LAN connected to the FOMA network.

Use an access point that supports FOMA packet communication, such as DoCoMo Internet connection service “mopera U” or “mopera”.

Packet communication is performed via the FOMA USB Cable with Charge Function 01/02 (optional) to a PC or via a dedicated cable connection to a PDA.

^{*1}: Note that the communication charge can become very expensive when large files are sent and received.

^{*2}: The communication speed is 384kbps at maximum for both sending and receiving in the following cases:

- When you are outside the FOMA HIGH-SPEED area
- When you use access points for “mopera”
- When you use packet communication with DoCoMo PDA “sigmarion III” or “musea”

64K data communication

Regardless of the data amount, 64K data communication is charged according to the length of time the line is connected. *

Use an access point that supports FOMA 64K data communication, such as DoCoMo Internet connection service “mopera U” or “mopera”, or ISDN synchronized 64K access point.

64K data communication is performed via the FOMA USB Cable with Charge Function 01/02 to a PC or via a dedicated cable connection to a PDA.

- 64K data communication is not available for overseas service.

^{*}: Note that the communication charge can become very expensive when the line is connected for a long time.

Internet service provider fees

In addition to FOMA service charges, you may need to pay user fees to an Internet service provider to use the Internet. These fees must be paid directly to the Internet service provider in addition to service fees of FOMA service. Contact your Internet service provider for details. DoCoMo Internet connection service "mopera U" or "mopera" is available. "mopera U" is a pay service for which you need to apply. "mopera" is a free service for which you do not need to apply.

Setting an access point (e.g. Internet service provider)

Packet communication and 64K data communication use different access points. If you are using packet communication, use an applicable access point for it; if 64K data communication, use an access point for FOMA 64K data communication or ISDN synchronized 64K.

- You cannot use DoPa access points.

User authorization when accessing network

Some access points may require your user authorization (ID and password) when connecting. Use communication software (Dial-up network) to enter your ID and password. ID and password will be provided by your Internet service provider or the network administrator. Contact the Internet service provider or administrator for details.

Access authorization when using a browser

When using FirstPass compliant sites on your PC's browser, FirstPass (user certification) for access authorization is required. Install the FirstPass PC software from the CD-ROM packaged provided with this product and conduct the setting. For details, refer to "FirstPassManual" (PDF format) stored in the "FirstPassPCSoft" folder included on the CD-ROM. (The "FirstPassManual" is in Japanese only.)

● Glossary for data communication

Administrative right

On Windows 2000, Windows XP and Windows Vista, users without this right cannot install/uninstall drivers or software because their access to the system is restricted.

Optimizing Communication Settings

Optimizing communication setting is a TCP parameter to optimize the transmission capacity of TCP/IP when packet communication is carried out on the FOMA network. This communication setting is required to make the most of communication performance of the FOMA terminal.

APN (Access Point Name)

APN is a string for identifying the Internet service provider or corporate LAN used to connect for packet communication. For example, it is described as "mopera.net" for mopera U.

cid (Context Identifier)

cid is a registration number for assigning the access point of packet communication (APN) to the FOMA terminal. It is used in the similar way as memory numbers in the phonebook and you can register 10 entries from 1 to 10.

DNS (Domain Name System)

DNS is a system which converts the domain name such as "nttdocomo.co.jp" to IP address indicated in numbers to make it easier for PCs to control.

HSDPA (High Speed Downlink Packet Access)

A standard designed to speed up data communication of the third-generation (3G) cell-phone system, "W-CDMA".

QoS (Quality of Service)

QoS is the service quality of network communication speed. QoS setting of the FOMA terminal can determine whether you allow any communication speed or connect at the maximum rate.

Before Using

Operational environment

The PC operation environment to use data communication is as shown below:

Item	Description
PC unit	• PC/AT compatible model with CD-ROM drive • USB port (compliant to Universal Serial Bus Specification Rev1.1) • Display resolution of 800 dots wide x 600 dots high, High Color (65,536 colors) is recommended
OS ^{*1}	• Windows 2000, Windows XP, Windows Vista (Japanese versions)
Required memory	• Windows 2000: 64M bytes or more^{*2} • Windows XP: 128M bytes or more^{*2} • Windows Vista: 512M bytes or more^{*2}
Hard disk space	• 5M bytes or more^{*2}

^{*1}: Operations after the OS upgrade are not covered by the warranty.

^{*2}: The required memory and necessary hard disk space may differ depending on the PC's system configuration.

NOTE

- You can transmit data with the FOMA SO705i connected to the DoCoMo PDA "musea" or "sigmarion III". Update "musea" to connect them to the FOMA SO705i. For how to update it and other details, visit the DoCoMo website.
- The FOMA SO705i is not compatible with Remote Wakeup function.
- The FOMA SO705i is not compatible with the FAX communication.

Required devices

The following hardware and software, in addition to the FOMA terminal and a PC, are required.

- FOMA USB Cable with Charge Function 01/02 (optional) or FOMA USB Cable (optional)
- Bundled CD-ROM "CD-ROM for FOMA SO705i"

NOTE

- Purchase the specified "FOMA USB Cable with Charge Function 01/02" or "FOMA USB Cable". The USB cable for PC cannot be used because the shape of the connector is different.
- In this manual, "FOMA USB Cable with Charge Function 01/02" is used for the operation example.
- USB HUB may not function correctly.

Checking the Procedure

In data communication, the connection is made through a dial-up connection with Internet service providers or LANs that support FOMA data communication.

■ About the software provided in the provided "CD-ROM for FOMA SO705i"

- The CD-ROM contains the SO705i Communication setting file (drivers), FOMA PC setting software and FirstPass PC software.
- The FOMA Communication setting file is a software (driver) required for connecting the FOMA terminal with a PC via the FOMA USB Cable with Charge Function 01/02 (optional) to carry out packet communication, 64K data communication or data transfer (OBEX™ connection). Installing the FOMA Communication setting file embeds each driver into Windows.

Using the FOMA PC setting software, you can easily set up packet communication and 64K data communication and create a dial-up connection.

Flow chart for completing the data communication setup

■ Data exchange (OBEX™ connection)

When you use the FOMA USB Cable with Charge Function 01/02 (optional), you have to install "FOMA 通信設定ファイル" (FOMA Communication setting file).

Download and Install the FOMA Communication setting file


Install FOMA Communication setting file in the provided CD-ROM or download and install it from the DoCoMo website



Data exchange

* Install DoCoMo keitai datalink (p.326) in addition.

■ Packet communication/64K data communication

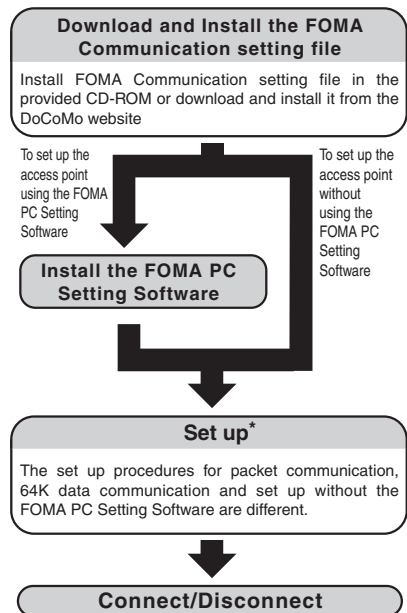

* : To use Internet with the FOMA terminal and PC connected, "mopera U" (separate subscription is required) is useful, which supports broadband connection, etc. Consider the plan in which you are charged only in a month when you use the service. If you use "mopera" for which you do not need a subscription, you can access Internet immediately.
For more information, visit the DoCoMo website.

AT Commands

AT commands are commands for controlling modem, etc. The FOMA terminal complies AT commands and supports some enhanced commands and its own AT commands.

For details on AT commands to set the FOMA terminal functions from your PC, refer to the "Manual for PC connection setting" (PDF format) in the provided CD-ROM.

CD-ROM

The provided CD-ROM contains the software for using the data communication with the FOMA terminal, "Manual for PC connection setting" and "Kuten Code List" (PDF). For details, refer to the provided CD-ROM.


Supplied software/PDF

The provided CD-ROM contains the following software/PDF:

- FOMA Communication setting file
- FOMA PC設定ソフト (FOMA PC setting software)
- FOMA バイトカウンタ (FOMA byte counter)
- Guide to DoCoMo keitai datalink
- FirstPass PCソフト (FirstPass PC software)
- Guide to mopera U (mopera U start up tool/mopera U connection & setting tool/mopera U requesting original data/FOMA byte counter)
- Guide to Napster®
- "パソコン接続マニュアル"/"Manual for PC connection setting" (PDF)
- "区間コード一覧"/"Kuten Code List" (PDF)
- Adobe® Reader®

The following warning screen may appear when you insert the CD-ROM into a PC. This warning is displayed according to the security setting of the Internet Explorer and does not affect the usage of the software. Click "はい" (Yes).

* The screen is the example when Windows XP is used. The displayed screen may be different depending on the PC environment.

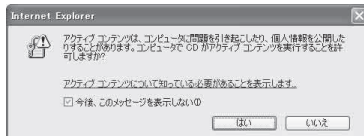

DoCoMo keitai datalink

"DoCoMo keitai datalink" is the software which enables you to back up your "Phonebook", "Mail", etc. on the FOMA terminal on a PC and edit the data. This software is provided on the DoCoMo website. For details and downloading, see the following website. You can also access to the following website from the provided CD-ROM.

<http://datalink.nttdocomo.co.jp/>

The above software and website are only in Japanese.

For details such as downloading method, transferable data, operating environment of each OS, installing method, operations and restrictions, see the above website. As for the operations after the installation, refer to the help files of the software. You need "USB Cable (optional)" to use DoCoMo keitai datalink.

Overseas Use

Overview of International Roaming (WORLD WING)	328
Available Services.....	328
Before Using the FOMA Terminal Overseas.....	329
Making a Call Abroad	330
Receiving a Call Abroad	331
Setting the Search Mode of the Operator	NW search mode 332
Displaying the Roaming Operator's Name.....	Display operator name 333
Commencing Roaming Guidance.....	Roam. Guidance 333
Setting to Bar Incoming Calls During Roaming	Bar incoming when roam 333
Network Services During Roaming.....	Service(Int.) 333

Overview of International Roaming (WORLD WING)

International roaming (WORLD WING) is a service that allows you to make/receive calls or use i-mode through the network of roaming service operator overseas.

- You can use the FOMA SO705i within the roaming area^{*1} of DoCoMo overseas. For details on the service area and charge, see the DoCoMo "International Services Website".
- DoCoMo's roaming area is the 3rd generation mobile network compliant with the 3GPP^{*2} global standard.

^{*1}: This terminal cannot be used in GSM/GPRS service areas.

^{*2}: 3GPP (3rd Generation Partnership Project)
A regional standardization body established to develop commonly applied technical specifications for 3rd-generation mobile communications systems (IMT-2000).

Country codes of major countries

Enter the following country codes when using international call or setting "Country code" in "Int'l dial assistance".

(as of January, 2008)

Area	Code	Area	Code
Australia	61	Korea	82
Austria	43	Macao	853
Belgium	32	Malaysia	60
Brazil	55	Maldives	960
Canada	1	New Caledonia	687
China	86	New Zealand	64
Czech	420	Norway	47
Egypt	20	Peru	51
Fiji	679	Philippines	63
Finland	358	Russia	7
France	33	Singapore	65
French Polynesia	689	Spain	34
Germany	49	Sweden	46
Greece	30	Switzerland	41
Holland	31	Taiwan	886
Hong Kong	852	Thailand	66
Hungary	36	Turkey	90
India	91	United Kingdom	44
Indonesia	62	United States of America	1
Italy	39		
Japan	81	Vietnam	84

* For other country codes and details, see the DoCoMo "international Services Website".

Available Services

- Some services may not be available depending on the operator or area.
- For details on communication services available during international roaming, refer to the international service guide such as "Mobile Phone User's Guide [International Services]".

Available communication services overseas

- Voice call^{*1}
- Videophone call^{*1*2}
- i-mode mail
- i-mode (including Full Browser)
- SMS
- i-Channel^{*3}

^{*1}: Outgoing calls using Number B of 2in1 is not available (when receive a call for Number B, some operators cannot recognized to which number the call was made). You cannot make a call from the additional number of multi number.

^{*2}: International videophone calls are available with users of specific roaming operators overseas or FOMA terminals in Japan.

^{*3}: The automatic update will be automatically paused when a roaming operator is connected. To resume the i-Channel automatic update, it is required to set the i-Channel setting again. However, you are charged for the packet communication in addition to the monthly charge. In addition, when you automatically update information on "Basic Channel", the packet communication charges will apply.

NOTE

- During international roaming, you cannot receive MessageF, receive Area Mail, send/receive Chaku-moji, "Pattern data update" and "Set auto-update" of Scanning function, update software, use 64K data communication connected with a PC or ON in 2in1 setting.

Before Using the FOMA Terminal Overseas

- Before using the FOMA terminal overseas, also refer to the "Mobile Phone User's Guide [Network Services]" and "Mobile Phone User's Guide [International Services]".
- For the customers who have subscribed to the FOMA service on September 1, 2005 or after, a separate subscription is not necessary. However, customers who declared that they did not require this service at the FOMA service subscription or who unsubscribe from this service need a separate subscription.
- For the customers who have subscribed to the FOMA service on August 31, 2005 or before without subscribing to "WORLD WING", a separate subscription is necessary.
- To use the international roaming service, the FOMA card (other than blue) which is compatible with WORLD WING must be inserted.
- This service is not available in some payment plans.
- Usage charges for the overseas services are included in your monthly bill of FOMA services. However, it may be charged in subsequent month due to the conditions of the roaming operator overseas.
- The call charge in "Call data" includes both incoming and outgoing calls. However, the displayed call charge may differ from the actual one, or "¥ * * *" may be displayed.

■ Battery pack charging

- Precautions for handling the AC adapter → p.19
- Charging with the AC adapter → pp.43, 44

■ Viewing i-mode sites

To view i-mode sites from overseas, set "International Settings" from "iMenu" beforehand.

- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

■ Network Services

You can also use network services such as the Voice Mail service and Call Forwarding service if you have subscribed to these network services.

- Before using the network services overseas, "Remote Control" (p.314) must be set to "Activate".
- Even when the operation such as Activate or Deactivate is available, the services may be restricted or unavailable. For details, refer to the "Mobile Phone User's Guide [Network Services]" and the international service guide such as "Mobile Phone User's Guide [International Services]", etc.

■ SMS

This service allows you to exchange text messages with subscribers to overseas carriers other than DoCoMo.

- To send an SMS to a user of a roaming operator overseas, enter "+" and the country code in front of the phone number (when the phone number begins with "0", omit the first "0").
You can also send SMS by entering "010", the country code, the other party's phone number in this order. (To reply to received SMS from overseas, enter "010".)
- When sending a SMS to a user of a roaming operator overseas and a character contained in SMS is not supported by the other party's mobile phone, the character may not be properly displayed. See international service guides such as "Mobile Phone User's Guide [International Services]" for details.

● Inquiries overseas

For inquiries overseas such as lost, stolen, charge accumulation or malfunction, refer to "For lost, stolen, accumulated amount settlement overseas" or "For malfunction overseas" on the back cover of this manual. Note that you are charged for the call and communication even after the FOMA terminal is lost or stolen.

- For the latest information about International Access Code and Universal Number International ID Code, see the DoCoMo "International Services Website".

■ International Access Codes of major countries (Table 1)

(as of August, 2007)

Area	Code		
Australia	0011	Macao	00
Belgium	00	Malaysia	00
Brazil	0041/ 0014	Monaco	00
		New Zealand	00
Canada	011	Norway	00
China	00	Philippines	00
Czech	00	Poland	00
Denmark	00	Portugal	00
Finland	00	Russia	810
France	00	Singapore	001
Germany	00	Spain	00
Greece	00	Sweden	00
Holland	00	Switzerland	00
Hong Kong	001	Taiwan	002
Hungary	00	Thailand	001
India	00	Turkey	00
Indonesia	001	United Arab Emirates	00
Ireland	00	United Kingdom	00
Italy	00	United States of America	011
Korea	001		
Luxemburg	00	Vietnam	00

* Charges apply for calls made to Japan.

■ Universal Number International ID Code

(Table 2)

(As of August, 2007)

Area	Code		
Argentina	00	Korea	001
Australia	0011	Luxemburg	00
Austria	00	Malaysia	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Bulgaria	00	Peru	00
Canada	011	Philippines	00
China	00	Portugal	00
Colombia	009	Singapore	001
Denmark	00	South Africa	09
Finland	990	Spain	00
France	00	Sweden	00
Germany	00	Switzerland	00
Holland	00	Taiwan	00
Hong Kong	001	Thailand	001
Hungary	00	United Kingdom	00
Ireland	00	United States of America	011
Israel	014		
Italy	00		

* Note that the universal numbers may not be available from mobile phones, public phones or hotels.

* The universal numbers are available only in the above countries.

* If you make a call from a hotel, the fees may be charged by the hotel. Check with the hotel before using.

* From mobile phones, domestic charges apply in the country.

Use in the local area

This FOMA SO705i is available in 3G roaming area. When the FOMA terminal is turned on after you arrive the destination overseas, a local roaming operator is automatically set.

● Display, date and time

While using the FOMA terminal overseas, the name of the operator connected appears on the standby screen.

- "Displaying the Roaming Operator's Name" → p.333
- Regardless of "Set time" setting, the received address list are time stamped as the date and time in Japan standard time.
- When "📶" remains on the screen, set "NW search mode" to "Auto". It may take some time to search network just after turning on the FOMA terminal and "📶" may appear while searching.

- If the used network or operator does not notify the caller ID, the caller ID does not appear on the FOMA terminal screen and displays "Unknown" or "withholding" even when the caller ID is notified. The FOMA terminal screen also displays "Unknown" even when "Caller ID Request Service" is set.

● After returning to Japan

When you returned to Japan and turn on the FOMA terminal, the network will be automatically searched and set to the FOMA network (DoCoMo).

"Setting the Search Mode of the Operator" → p.332

Making a Call Abroad

You can use the international roaming service to make voice or videophone calls from abroad.

Making a local call abroad

To make a call, dial the phone number of the other party's ordinary phone or mobile phone as making a call in Japan. → p.50

- The "Int'l dial assistance" message may appear when you use the phonebook to make a call. Select "Original phone No."

Making a call to outside your destination country (including Japan)

- 1 On the standby screen, dial the following; + (0) (1 second or longer) → Country code → Area code (Long distance code) → The other party's phone number

If the area code (long distance code) begins with "0", omit the first "0". However, to call to ordinary phones in Italy, "0" is required.

- 2  (voice call) /  (V.phone)

● Making a call to a country stored in “Country Code setting” in the “Int'l dial assistance”

You can easily dial the number by storing the country name and codes of a party you often call to “Int'l dial assistance”.

- You can also make an international call from the phonebook, Redial or Dialed calls record.

1 Enter the phone number of the other party▶ (FUNC)▶“Int'l call”▶Select a country▶ (voice call)/ (V.phone)

“+” and “Country code” is prefixed and an international call is made.

● Making a call to a country set in “Auto int'l call set.” under “Int'l dial assistance”

- You can also make an international call from the phonebook, Redial or Dialed calls record.
- Only available when the phone number begins with “0”.
- Set “Auto int'l call set.” under “Int'l dial assistance” to “ON”.

1 Enter the phone number of the other party▶ (voice call)/ (V.phone)▶“Dial”

Making a call to the overseas user of WORLD WING

When the other party is using the international roaming, make a call as an international call to Japan (dial “81” (Japan) as the country code) even when the other party is in the country you are staying.

Receiving a Call Abroad

You can use the international roaming service to receive a call without changing the phone number.
→ p.62

The other party's procedure to make a call

■ To have the other party make a call from Japan to your destination country

To have the other party make a call from Japan to your FOMA terminal in your destination country, the other party only needs to dial the phone number as in Japan.

090 (or 080)-XXXX-XXXX

■ To have the other party make a call from outside Japan to your destination country

The other party needs to dial the international access code and “81” (country code of Japan) no matter whether you are in Japan or overseas.
International access code-81-90 (or 80)-XXXX-XXXX

NOTE

- When you receive a call while using international roaming services, the call is sent to your usual mobile phone number in Japan and then forwarded to your travel destination no matter from which country the call originates. The caller has to bear charges for calls to Japan, and you have to bear incoming call charges including international forwarding charges.

Setting the Search Mode of the Operator

<NW search mode>

When you move out of the service area of the operator you are using, the FOMA terminal is reconnected to another operator's network.

- This function may not be set depending on the conditions of radio waves or networks.
- As of January 2008, no service provider other than DoCoMo can be selected in Japan.
- When “ ” appears when you return to Japan, check that “NW search mode” is set to “Auto”.

Changing the operator manually

- 1 “Settings”▶“Int'l roaming set”▶“NW search mode”▶“Display ON” or “Display OFF”

The “NW search mode” screen appears.



- 2 “Manual”▶Select an operator

- To switch the operator automatically▶“Auto”

You can set an operator to be preferably connected when searching the operator automatically. → p.332

Re-searching for the network

<Network re-search>

- You can re-search for a network then connect to the network if “NW search mode” is set to “Auto” and an operator could not be searched for, or if “NW search mode” is set to “Manual” and you want to change operators.

- 1 NW search mode screen (p.332)▶“Network re-search”▶Select an operator

- When “NW search mode” is set to “Auto”▶“Network re-search”

Setting an operator to be preferably connected

You can set an operator to be preferably connected when searching or re-searching the network automatically.

- The PLMN network list can store up to 20 operators.
- Operators designated by DoCoMo are stored to the PLMN network list.

- 1 NW search mode screen (p.332)▶“PLMN setting”

The “PLMN setting” screen appears. Operators are listed in the priority order.



Function menu ▶ p.332

- 2 Highlight the operator whose priority is to be changed▶ (FUNC)▶“Change priority”

- 3 Highlight the position to move to▶
☐ (Select)

The selected operator moves to the position above the highlighted item. Select “<last>” to move to the end.

- 4 (Finish)▶“YES”

PLMN setting screen (p.332)

PLMN manual select.....Enters and stores Country code (Operator Code (MCC)) and Network code (Operator Code (MNC)).

PLMN select.....Selects and stores the operator from the list.

Set VPLMN to PLMN.....Stores the currently selected operator.

Change priority→p.332

Delete.....Selects the deleting method from “Delete this/Delete selected/Delete all”.

“About multiple-choice”→p.39

NOTE

- The priority may not apply depending on the conditions of radio waves or networks.

Displaying the Roaming Operator's Name

<Display operator name>

You can set whether to display the name of the currently connected operator on the display during the international roaming.

- 1 ▶“Settings”▶“Int'l roaming set”▶“Display operator name”▶“Display ON” or “Display OFF”

NOTE

- Even when set to “Display ON”, the name of the operator is not displayed when you are in Japan (in the FOMA network).
- When “NW search mode” is set to “Manual” and the FOMA terminal is in “” area, “select net” appears.

Commencing Roaming Guidance

<Roam. Guidance>

You can set the FOMA terminal to notify the other party that you are roaming internationally when you receive a voice call or videophone call during international roaming.

- Make the setting in Japan.

- 1 ▶“Service”▶“Roam. Guidance”▶**Select any item:**

Activate • Deactivate.....Activates or deactivates the roaming guidance.

Check setting.....Checks the setting.

NOTE

- Even when the guidance is not set, the other party hears the ring tone set by the operator.
- The caller may hear the guidance in a foreign language depending on the conditions of the operators overseas.

Setting to Bar Incoming Calls During Roaming

<Bar incoming when roam>

- Depending on the operator overseas, the setting may be unavailable.

- 1 ▶“Service”▶“Bar incoming when roam”▶**Select any item:**

Activate.....Selects from “Bar All incoming” (bars all incoming calls) or “Data calls Barring” (bars incoming videophone calls and 64K data communications)

The network security code (p.108) is required for the setting.

Deactivate.....Deactivates the barring of incoming calls when roaming.

The network security code (p.108) is required for deactivating.

Check setting.....Checks the setting.

* : 64K data communication is not available on FOMA SO705i during international roaming.

Network Services During Roaming

<Service(Int.)>

- You can use some network services such as “Voice Mail” or “Call Forwarding” overseas.
- To use “Voice Mail(Int.)” or “Call Forwarding(Int.)”, the subscription to “Voice Mail” or “Call Forwarding” is required beforehand. Also, “Remote Control” must be set beforehand.
- You cannot perform the setting when “” is displayed.
- When you perform the operation overseas, you must bear the international call charges of the country you are staying.
- For details on the network services, refer to the “Mobile Phone User's Guide [Network Services]” and “Mobile Phone User's Guide [International Services]”, etc.

- 1 ▶“Service”▶“Service(Int.)”▶**Select any item:**

Voice Mail(Int.)

Activate • Deactivate • Play messages • Set ring time • Setting.....Follow the audio guidance to specify the setting.

Call Forwarding(Int.)

Activate • Deactivate • Setting.....Follow the audio guidance to specify the setting.

Roam. Guidance(Int.).....Specify the settings by following the audio guidance.

Remote access(Int.).....Specify the settings by following the audio guidance.

Caller ID req.(Int.).....Specify the settings by following the audio guidance.

Appendix/External Devices/Troubleshooting

Menu Function List	336
Character Assignment to Dial Keys	347
Symbols and Special Characters	349
Pictographs	351
Face Marks	356
Common Phrases	357
Multi Access Combination Patterns	358
Multitask Combination Patterns	359
Services Available for the FOMA Terminal	360
Options and Accessories	361
■ Using the FOMA Terminal with External Devices	
Movie Playing Software	361
■ Troubleshooting	
Malfunction Checklist	362
If Any Error Message Appears	365
Warranty and After-Sales Service	372
i-mode Malfunction Check Site	374
Updating Software	Software Update 374
Protecting the FOMA Terminal from Harmful Data	Scanning function 380
Specifications	382
Number of Data that can be Stored/Registered/Protected on the FOMA Terminal	383
Specific Absorption Rate of Mobile Phones, etc	384
Export Administration Regulations	389

Menu Function List

- The settings with  are restored to the default settings by "Reset settings".
- Refer to the **Table1** (p.345) for details of the reset settings of ① to ② and other functions.
- The key operation which uses menu numbers is available only when the main menu is set to "Standard Menu".

→ pp.33, 34

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Mail	Inbox		—		—	p.180
	Outbox		—		—	p.180
	Draft		—		—	p.171
	Compose message		—		—	p.166
	WEB Mail		—		—	p.167
	Compose SMS		—		—	p.192
	Check new messages	 (1 second or longer)			—	p.175
	Receive option		—		—	p.174
	Check new SMS		—		—	p.194
	Template		—		—	p.169
	Mail Setting		—		—	p.188
i-mode	iMenu		—		—	p.146
	Bookmark		—		—	p.152
	Screen memo		—		—	p.153
	URL History		—		—	p.148
	Go to location		—		—	p.151
	Full Browser		—		Specified URL http://www.google.co.jp	p.220
	i-Channel				—	p.163
	MessageR/F		—		—	p.190
	Check new messages	 (1 second or longer)			—	p.175
	Client certificate		—		—	p.159
	i-mode settings		—		—	p.157
i-appli	Software list	 (1 second or longer)			—	p.197
	microSD		—		—	p.210
	Auto-start set		—		—	p.207
	i-appli action info		—		—	p.199
Settings	Kisekai Tool setting		—		—	p.104
	Incoming call	Ring volume	  5 0	Phone to MessageF	All Level 4	p.64
		Select ring tone	  1 3	Phone	着信音 1	p.88
				Videophone	着信音 1	
				Mail	着信音 1	
				MessageR/ MessageF	着信音 1	
	Vibrator		  5 4	Phone to MessageF	All OFF	p.90

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings	Incoming call	Illumination	MENU [8] [9]	Set color	Phone: Color 5 Videophone: Color 5 Mail: Color 1 MessageR: Color 1 MessageF: Color 1	p.99
				Set pattern	Standard	
				Missed/Unread info	ON	
		Manner mode set	MENU [2] [0]		Manner mode (Original settings: Default → p.94)	p.92
		Disp. phonebook image	—		ON	p.95
		Answer setting	MENU [5] [8]		Any key answer	p.63
		Mail/Msg. ring time	MENU [6] [8]	Mail to MessageF	All ON (Ring time: 5 seconds)	p.91
		Ring time(sec.)	MENU [9] [0]	Set mute seconds	OFF Mute seconds: 1 sec (Set mute seconds is set to "ON")	p.122
				Missed calls display	Display	
		Info notice setting	MENU [6] [5]		In Japanese display: ボイス (Voice) (名前通知 (Name notification) : OFF) In English display: ON	p.68
		Record message	MENU [5] [5]		OFF Answer message: Japanese 1 (When Record message is set to "ON") Ringing time: 13 seconds (When Record message is set to "ON")	p.68
		Disp. call/receive No.	—		White (body color: Charcoal Gray, Cheek Pink) Black (body color: Sugar White)	p.96
		Melody Call setting	—		—	p.90
	Talk	Noise reduction	MENU [7] [6]		ON	p.61
		Quality alarm	MENU [7] [5]		No tone	p.91
		Reconnect signal	MENU [7] [7]		No tone	p.61
		Illumination in talk	—		OFF	p.99
		Set hold tone	—	On hold tone	Tone 1	p.65
		Setting when folded	MENU [1] [8]		End the call	p.64
	Dialing	Pause dial	MENU [8] [4]		—	p.60
		Sub-address setting	—		ON	p.61
		Prefix setting	—		"WORLD CALL" (009130010) User setting: Not recorded	p.60
		Headset sw to dial	—		OFF	p.295
		Int'l dial assistance	—	Auto int'l call set.	ON (automatically added)	p.55
				Country Code setting	"日本" (Country code: 81) 22 country codes are already stored.	
				IDD Prefix setting	"WORLD CALL" (009130010) User setting: Not recorded	

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings	Videophone	Visual preference	—		Normal	p.71
		Select image	—	On hold	Pre-installed	p.71
				Holding	Pre-installed	
				Substitute image	Chara-den (ミッフィー)	
				Record message	Pre-installed	
				Preparing	Pre-installed	
				Voice memo	Pre-installed	
		Auto redial as voice	—		OFF	p.71
		Remote monitoring	—	Other ID	Not recorded	p.73
				Ringing time	5 seconds	
				Set	OFF	
		Display setting	—	Main display	Other side	p.71
				Front camera	ON	
				Reverse		
		Ntly switch-mode	—		Indication ON	p.72
		Hands-free switch	—		ON	p.71
		V-phone while packet	—		V-phone priority	p.72
	Display	Display setting	Menu (5) (6)	Stand-by display	Metal (body color: Charcoal Gray) Flower (body color: Cheek Pink) Circle (body color: Sugar White)	p.94
				Wake-up display	ウェイクアップ Wake-up message: No messages	
				Dialing, V.phone Dialing	発信中3 (body color: Charcoal Gray) 発信中1 (body color: Cheek Pink) 発信中2 (body color: Sugar White)	
				Calling, V.phone Calling	着信中3 (body color: Charcoal Gray) 着信中1 (body color: Cheek Pink) 着信中2 (body color: Sugar White)	
				Mail sending	メール送信中3 (body color: Charcoal Gray) メール送信中1 (body color: Cheek Pink) メール送信中2 (body color: Sugar White)	
				Mail receiving	メール受信中3 (body color: Charcoal Gray) メール受信中1 (body color: Cheek Pink) メール受信中2 (body color: Sugar White)	
				Check new messages	問合わせ中3 (body color: Charcoal Gray) 問合わせ中1 (body color: Cheek Pink) 問合わせ中2 (body color: Sugar White)	

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings	Display	Display setting		Mail rec'd result	メール受信結果画面3 (body color: Charcoal Gray) メール受信結果画面1 (body color: Cheek Pink) メール受信結果画面2 (body color: Sugar White)	p.94
		Backlight		Lighting	ON (lighting) + Saver (Light time: 2 minutes)	p.96
				Charging	Standard	
				Area	LCD+Keys	
				Brightness	ON+Middle	
	Display design		Color pattern	Black (body color: Charcoal Gray) Red (body color: Cheek Pink) White (body color: Sugar White)	p.97	
			Icon pattern	Battery icon/Antenna icon Pattern 4 (body color: Charcoal Gray) Pattern 2 (body color: Cheek Pink) Pattern 3 (body color: Sugar White)		
			Soft key	Pattern 3 (body color: Charcoal Gray) Pattern 1 (body color: Cheek Pink) Pattern 2 (body color: Sugar White)		
	Illumination stg.			ON Select pattern Incoming call to Charging start: 着信中 (Square) to 充電開始 (Square) (body color: Charcoal Gray), 着信中 (Sparkling) to 充電開始 (Sparkling) (body color: Cheek Pink), 着信中 (Ring) to 充電開始 (Ring) (body color: Sugar White) Missed call: ON Missed mail: ON Time signal: 60 minutes Birthday: ON Called/Mail Called: ON Mail: ON	p.98	
			Font			Font type Thickness Character size
	My shortcut		Theme 1 to 3	My selection, Photo mode, Music	p.100	
	Select language			Japanese	p.46	

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings	Display	My selection	Menu [5] [2]		Receive Ir data Bar code reader Alarm Illumination stg. Shield view Dictionary	p.98
		Menu display set	Menu [5] [7]	Menu display	List	p.97
				Theme	Geometric Gray (body color: Charcoal Gray), Organic Pink (body color: Cheek Pink), Shiny White (body color: Sugar White)	
				Memory focus	ON	
				Reset menu op. log	—	
		Viewer settings	—		Picture	p.228
		Icons	Menu [3] [6]		—	p.29
		Icons setting	—		ON	p.103
		Shield view	[2] (1 second or longer)		OFF	p.96
	Call time/ Charge	Call data	Menu [6] [1]		—	p.289
		Notice designate calls	—	Cost limit setting	Not set	p.291
				Notify setting	OFF	
				Alarm tone	Alarm Tone	
				Volume	Level 4	
		Reset total	Menu [6] [0]		—	p.290
		Auto reset total cost	—		OFF	p.290
	Clock	Set time	Menu [3] [1]		Auto time set ON	p.47
		Clock display	Menu [3] [9]	Style	12h clock (body color: Cheek Pink, Sugar White), 24h clock (body color: Charcoal Gray)	p.100
				Size	Up Small (body color: Charcoal Gray), Small (body color: Cheek Pink, Sugar White)	
				Color	Black (body color: Sugar White)/ White (body color: Charcoal Gray, Cheek Pink)	
				Display type	World watch OFF	
		World watch	—	Time zone	(GMT+00) London	p.47
				Summer time	OFF	
		Alarm setting	—		Alarm preferred	p.285
		Clock Alarm Tone set	—		Alarm Tone	p.91
		Auto power ON	—		OFF	p.46
		Auto power OFF	—		OFF	
	Lock/ Security	Lock	—	Dial lock	Release	p.109
			—	Original lock 1 to 3	Release	p.114
					Group and item settings Data disp. Edit del.: All selected Dial/sending mail, Incoming/ Mail disp.: All deselected	

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings	Lock/ Security	IC card lock setting	 (1 second or longer)	IC card lock	OFF	p.217
			—	IC lock (power-off)	Maintain	
		Keypad lock	—	After folded	OFF	p.118
			—	Timer	OFF	
		Self mode	—		Release	p.123
		Secret mode	 4 0		Release	p.111
		Secret data only mode	 4 1		Release	
		Reject unknown	—		Accept	p.122
		Call setting w/o ID	 1 0	Unknown to User unset	All Accept Select ring tone: Same as normal ring tone Select calling disp.: Same as normal display	p.122
		Change security code	 2 9		0000 (4 zeros)	p.109
		IC card authentic.	—		OFF	p.118
					External IC card: Not set	
		PIN setting	—		—	p.109
		Scanning function	—	Set scan	Scan: ON	p.380
					Message scan: ON	
	Connection setting	Set connection timeout	—		60 seconds	p.157
		Set check new messages	—	Mail to MessageF	All checked	p.189
		Host selection	 8 1		i-mode User setting: Not recorded	p.158
		SMS center selection	—		DoCoMo User setting: Not recorded	p.194
		Certificate	—		All Valid	p.158
		Certificate host	—		DoCoMo User setting: Not recorded	p.160
	i-appli settings	Disp. Software info	—		Not display	p.197
		End stand-by display	—		—	p.209
		Background i-appli	—		OFF	p.199
		i-appli vol.	—		Level 4	p.199
	External connection	USB mode setting	—		Communication mode	p.251
		Headset usage setting	 5 1		Headset+speaker	p.91
		Select microphone	—		External microphone	p.295
		Auto answer setting	 9 4	Phone Videophone	OFF	p.295
	Int'l roaming set	NW search mode	—		Auto	p.332
		Display operator name	—		Display ON	p.333
	Other settings	Keypad sound	 3 0		ON	p.90
		Charge sound	—		ON	p.90
		Battery level	 7 1		—	p.45
		Side key guard	 (1 second or longer)		OFF	p.120

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings	Other settings	Character input set	  	Input mode	5-touch	p.299
				Auto cursor	1(Slow)	p.302
				Select conversion	Prediction	p.299
				CHG input size	Standard	p.299
				Operation in item	↑ ↓ ↔ Key	p.301
			Clear learned	—	p.306	
		Reset settings	  		—	p.295
		Initialize	—		—	p.296
Software Update		—	Set auto-update	Auto-update Date: Everyday Time: 03:00	p.374	
Data box		My picture	  			p.227
	Music	—		 	p.269	
	Music&Video Channel	—		 	p.267	
	i-motion	—		 	p.234	
	Melody	  			p.240	
	Chara-den	—			p.237	
	Kisekai Tool	—			p.242	
LifeKit	Bar code reader	—		—	p.138	
	Receive Ir data	  		—	p.258	
	microSD manager	—		—	p.247	
	Camera	—			p.131 p.135	
	Data security serv.	—	Sndg img in Phonebook	OFF	p.85	
	Schedule	  			p.281	
	Alarm	  		All OFF	p.280	
	To Do list	  		—	p.284	
	Text memo	  		—	p.292	
	Calculator	  		—	p.291	
	Play/Erase msg.	 		—	p.69	
	Play/Erase VP msg.	—		—	p.69	
	Voice memo*	  		—	p.288	
	Voice announce	  		—	p.289	
	UIM operation	—		—	p.254	
	My Profile	 			p.48 p.286	
	Forwarding image	—		ON	p.261	
	Text reader	—		—	p.140	
Dictionary	—		—	p.292		
Service	Chaku-moji	—	  	Create message	5 messages pre-installed	p.58
				MSG display settings	Calls with Caller ID	
	Caller ID Notification			—	p.48	
	Voice Mail		—	—	p.308	
	Call Waiting		—	—	p.309	
	Call Forwarding		—	—	p.310	
	2in1 setting		 (1 second or longer)		OFF	p.316

*: "Voice memo(in-call)" may appear depending on the main menu type.

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Service	2in1 setting		8 (1 second or longer)	Mode switching	Dual mode	p.318
				Phonebook 2in1 setting	—	
				Stand-by display	Dual mode: Flower arrangement B mode: Cake	
				Set call/receive No.	Disp. call/receive No. Number A: White (body color: Charcoal Gray, Cheek Pink)/ Black (body color: Sugar White) Number B: Gray Ringtone for Number B Voice call (recv.) Ring tone: 着信音2 Other than above: Same as Number A V. phone (recv.) Ring tone: 着信音2 Other than above: Same as Number A Mail (recv.) Ring tone: 着信音2 Other than above: Same as Number A	p.318
				2in1 function OFF	—	
				Rcv. avoid. setting	—	
	Nuisance Call Blk	—	—	—	—	p.311
	Caller ID Request	—	—	—	—	p.312
	Incoming Call Mng	—	—	—	Answer	p.313
	Set in-call arrival	—	—	—	—	p.313
	Remote Control	—	—	—	—	p.314
	Dual Network	—	—	—	—	p.312
	English Guidance	—	—	—	—	p.312
	Additional service	—	—	—	—	p.319
	Service Numbers	—	—	—	—	p.313
	Multi Number	—	—	Select ring tone	Same as normal ring tone	p.315
	Roam. Guidance	—	—	—	—	p.333
	Bar incoming when roam	—	—	—	—	p.333
	Service(Int.)	—	—	—	—	p.333
Phonebook	Phonebook	—	—	—	12	p.76 p.79
Own data	Received calls	9 2 4	—	—	—	p.56
	Dialed calls	—	—	—	—	p.56
	Mail member	9 7	—	—	—	p.172
	Choku-Den	5	—	—	—	p.84
	Common phrases	3 8	—	Default common phrases	—	p.304
	Own dictionary	8 2	—	—	—	p.305
	DL dictionary	—	—	—	—	p.306

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
MUSIC	Music Player	 (1 second or longer)			② ⑤	p.273
	Music&Video Channel	—			③ ⑤	p.264
Camera		 (1 second or longer)			⑧	p.131 p.135
Osaifu- Keitai	IC card content	—			—	p.213
	DCMX	—			—	p.205
	ToruCa	—			—	p.214
	IC card lock setting	 (1 second or longer)	IC card lock	OFF		p.217
		—	IC lock(power-off)	Maintain		
	Setting	—	ToruCa settings	Receive from R/W: Accept Repetition check: Yes Auto reading setting: ON Scroll: 1 line		p.216
			IC card Illumination	ON		p.99
	Search by i-mode	—			—	—

[Table 1] Other reset setting functions

Function	Default setting
① My picture	Sort: Chronological ↑ Set image disp.: Normal
② Music	List setting: Title Resume play: No data
③ Music&Video Channel	Sort: Chronological ↑ List setting: Title+image Playback start position: Beginning
④ i-motion	Sort: Chronological ↑ List setting: Title+image (FOMA terminal), Name+image (microSD) Playback start position: No data
⑤ Music Player	Sound effect Equalizer: OFF SRS_WOW: OFF Repeat setting: OFF Shuffle: OFF Volume: Level 10 Screen setting: Normal screen mode Set image disp.: Normal Change skin: Geometric Gray (body color: Charcoal Gray) Organic Pink (body color: Cheek Pink) Shiny White (body color: Sugar White) Set repeat play: OFF
⑥ Melody	Sort: Chronological ↑ Set repeat play: OFF
⑦ Chara-den	Substitute image: ミッフィー Set image disp.: Fit in display Rec. Chara-den: Photo mode Select size: QCIF (176 × 144) Movie type set: Video + voice Storage setting (movie): Normal Storage setting (image): Fine File size setting: 2MB
⑧ Kisekai Tool	Sort: Chronological ↑
⑨ Camera	Movie mode Select size: QCIF (176 × 144) File size setting: 2MB Quality setting: Normal Camera Settings Photo mode: Portrait White balance: Auto Flicker: Auto Shutter sound: Sound 1 Select to save: Phone (Camera folder)

Function	Default setting
⑨ Camera	Voice mode Shutter sound: Sound 1 Select to save: Phone (Camera folder) Photo mode Select size: Screen (240 × 427) Quality setting: Super Fine Camera Settings Photo mode: Auto White balance: Auto Flicker: Auto Shutter sound: Sound 1 Select to save: Phone (Camera folder) Movie mode/Photo mode Camera: Rear camera Auto timer: OFF (Delay time: 10 seconds) Auto save set: OFF File restriction: File unrestricted Continuous mode → p.133
⑩ Schedule	Display: Monthly display User icon settg.: Not recorded
⑪ My Profile	Big font ⇄ Standard font: Standard font
⑫ Phonebook	Ring tone/Image: All OFF Restrictions: All Released Big font ⇄ Standard font: Standard font
Other functions	During a videophone call Brightness of V.phone settings: 0 Display light: All time ON Last one function* Main menu: Data Box Phonebook: Search all (Prefer) Volume: Level 4 Manner mode: Released Public mode (Driving mode): Deactivated

*: "Last one function" makes the FOMA terminal select the function you select last time automatically when you operate the FOMA terminal next time.

Simple Menu function list

Main item	Sub item/Branch item	Ref. page
Phone	Phonebook	p.79
	Dialed calls	p.56
	Received calls	p.56
	Play/Erase msg.	p.68
	Add to phonebook	p.76
	My profile	p.48, p.286
Mail	Inbox	p.180
	Outbox	p.180
	Draft	p.171
	Compose msg.	p.166
	Check new msg.	p.175
i-mode	iMenu	p.146
	Bookmark	p.152
	Screen memo	p.153

Main item	Sub item/Branch item	Ref. page
Camera	Photo mode	p.131
	Movie mode	p.135
	My picture	p.227
	i-motion	p.234
Settings/Tools	Incoming call	p.88
	Display	p.95
	Alarm clock	p.280
	Calculator	p.291
	Call time/Charge	p.289
	Voice Mail	p.308

Character Assignment to Dial Keys

Characters that can be entered using 5-touch input

Key	Kanji/Hiragana input mode	Katakana input mode	Alphabetic input mode	Numeric input mode
[1]	あいうえおあいうえお	アイウエオアイウエオ	.@/: ☐ ☐ ☐ ~ 1	1
[2]	かきくけこ	カキクケコ カケ	ABCabc2	2
[3]	さしすせそ	サシスセソ	DEFdef3	3
[4]	たちつてとつ	タチツテトツ	GHIghi4	4
[5]	なにぬねの	ナニヌネノ	JKLjkl5	5
[6]	はひふへほ	ハヒフヘホ	MNOmno6	6
[7]	まみむめも	マミムメモ	PQRSpqrs7	7
[8]	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv8	8
[9]	らりるれろ	ラリルレロ	WXYZwxyz9	9
[0]	わをんわSpace、。ー・ ! ?	ワラン ☐ Space 、。ー・! ? ☐	Space ! ? - , ' : () * ☐ ☐ ~ & ¥ 0	0 + * ¹
[*]	、。ー・° ° ! ? * ²	、。ー・° ° ! ? ☐ ² * ³	! ? - , ' : () * ☐ ☐ ~ & ¥	*
[#]	_____ * ⁴			#

- ☐ only appears in double-byte input mode.
- Blue text only appears in single-byte input mode.

*1: "+" can be entered when you enter an SMS address by holding down the key for 1 second or longer.

*2: Dakuten/Handakuten change when pressed before entering Dakuten/Handakuten character.

*3: "°" or "°" appears at the beginning in single-byte input mode.

*4: Line feed "↵" is entered when pressed after text is set.

Assigned text changes in descending order when pressed before text is set.

Allowable characters for 2-touch

■ Double-byte input mode

Key	2nd key									
	1	2	3	4	5	6	7	8	9	0
1st key	1	あ	い	う	え	お	A	B	C	D E
		あ	い	う	え	お	a	b	c	d e
	2	か	き	く	け	こ	F	G	H	I J
							f	g	h	i j
	3	さ	し	す	せ	そ	K	L	M	N O
							k	l	m	n o
	4	た	ち	つ	て	と	P	Q	R	S T
				っ			p	q	r	s t
	5	な	に	ぬ	ね	の	U	V	W	X Y
							u	v	w	x y
	6	は	ひ	ふ	へ	ほ	Z	?	!	- /
							z			
	7	ま	み	む	め	も	¥	&		
	8	や	(	ゆ	)	よ	*	#		*1 *2
		や		ゆ		よ				
	9	ら	り	る	れ	ろ	1	2	3	4 5
	0	わ	を	ん	*3	*3	6	7	8	9 0
		わ								

■ Single-byte input mode

Key	2nd key									
	1	2	3	4	5	6	7	8	9	0
1st key	1	ア	イ	ウ	エ	オ	A	B	C	D E
		ア	イ	ウ	エ	オ	a	b	c	d e
	2	カ	キ	ク	ケ	コ	F	G	H	I J
							f	g	h	i j
	3	サ	シ	ス	セ	ソ	K	L	M	N O
							k	l	m	n o
	4	タ	チ	ツ	テ	ト	P	Q	R	S T
				ッ			p	q	r	s t
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X Y
							u	v	w	x y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	- /
							z			
	7	マ	ミ	ム	メ	モ	¥	&		*1
	8	ヤ	(	ユ	)	ヨ	*	#		*1 *2
		ヤ		ユ		ヨ				
	9	ラ	リ	ル	レ	ロ	1	2	3	4 5
		@	/	-	_	:	.ne.jp	.co.jp	.ac.jp	@docomo.ne.jp
	0	ワ	ヲ	ン	*	*	6	7	8	9 0
		~	'		,	.	www.	.com	.html	http:// https://

- During reading input when you are storing entries in the UIM phonebook, Double-byte input mode becomes katakana input.

*1: These can also be used only when pictograph input is possible, such as "Text memo" or storing "Common phrases".

Note that these icons are always entered as double-byte characters. "Pictograph" is not available when you are composing an SMS, but "" and "" can be entered.

*2: Pressing switches between upper case input mode (top) and lower case input mode (bottom). You can also enter upper case text and then change it to lower case by pressing .

*3: In "Double-byte input mode", dakuten "゛" and han-dakuten "゜" are only displayed for characters with which dakuten can be used. Dakuten entered with other characters appear as spaces.

: Spaces are entered.

Symbols and Special Characters


Double-byte symbols



* The space at the first character is a "Double-byte space".

* When entering the message of SMS,  and  appear at the end of the list.

Single-byte symbols

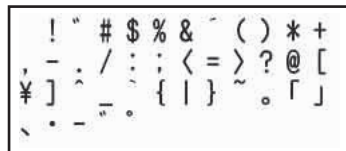

* The space at the first character is a "Single-byte space".

■ Symbols reading for conversion

Enter and convert “きこう”, and some symbols are displayed as conversion candidates. Entering reading as follows enables conversion to the corresponding symbol:

Reading	Symbol
あっと、あっとまーく	@
いこーる	=
えん	¥
おす	♂
おなじ	々
おなじく	//
おんぷ	♪
かける	×
かっこ	() [] {} < > " ' `

Reading	Symbol
から	~
こめ	※
ころん	:
こんま	,
さんかく	△ ▲ ▽ ▼
しゃせん	/ \
しかく	□ ■ ◇ ◆
しめ	♂
たす	+
どう	ゝ べ ぶ ぶ 〃 々
ぱーせんと	%

Reading	Symbol
ひく	—
ひしがた	◇ ◆
ほし	☆ ★
まる	○ ● ◎
むげん	∞
めす	♀
やじるし	→ ← ↑ ↓
ゆうびん	〒
るーと	√
わる	÷

Pictographs

Pictographs

You can enter the pictographs by entering and converting the following readings.

	Reading
♥	はーと
♡	はーと
💔	しつれん・はーと
♥	はーと
♡	わーい・かお・うれしい
×	いかり・かお
△	がく・かお・かなしい
△	やだ・かお・かなしい
××	ふらふら・かお
♪	るんるん・おんぷ
🎵	おんせん
💎	かわいい・はな
☂	きすまーく・きす・ちゅっ
💎	びかびか・あたらしい・きら・びか
☀	ひらめき・きら・びか
☀	むかつ・いかり
📺	ばんち・いかり・て
🎵	ぼくだん・ばくはつ・いかり
🎵	むーど・おんぷ
zzz	ねむい・すいみん・ねる・ぐー
!	びっくり・おどろき
!?	びっくり・おどろき
!!	びっくり・おどろき
Σ	どんっ・しょうげき
㊄	あせあせ・あせ
👉	あせ
三三	だっしゅ・にげろ
〜	ー
㊄	ー
↗	ぐっど・やじるし・や・うえ
↘	ぼっど・やじるし・や・した
↗	やじるし・うえ
↘	やじるし・した
↗	やじるし・うえ
↘	やじるし・した
☀	はれ・てんき・たいよう
☁	くもり・てんき・くも
☂	あめ・てんき・かさ

	Reading
🌀	ゆき・てんき・ゆきだるま
⚡	かみなり・てんき・ぴか
🌀	たいふう・てんき・まる・ぐるぐる
🌀	きり・てんき
🌧	こさめ・てんき・かさ
🌧	おひつじざ・せいざ
🌧	おうしざ・せいざ
🌧	ふたござ・せいざ
🌧	かにざ・せいざ
🌧	ししざ・せいざ
🌧	おとめざ・せいざ
🌧	てんびんざ・せいざ
🌧	さそりざ・せいざ
🌧	いてざ・せいざ
🌧	やぎざ・せいざ
🌧	みすがめざ・せいざ
🌧	うおざ・せいざ
🌧	すぽーつ・ふく
🌧	やきゅう・すぽーつ・ぼーる
🌧	ごるふ・すぽーつ
🌧	てにす・すぽーつ
🌧	ざっかー・すぽーつ・ぼーる
🌧	すきー・すぽーつ
🌧	ばすけつとぼーる・すぽーつ・ばすけ・ばすけつと
🌧	もーたーすぽーつ・はた・ふらっく・えふわん
🌧	ぼけつとべる・ぼけべる・べる
🌧	でんしゃ・のりもの
🌧	ちかてつ・のりもの・めとろ
🌧	しんかんせん・のりもの
🌧	くるま・のりもの・せだん
🌧	くるま・のりもの・あるがい
🌧	ばす・のりもの
🌧	ふね・のりもの
🌧	ひこうき・のりもの
🌧	いえ・たてもの・うち
🌧	びる・たてもの・かいしゃ
🌧	ゆうびんきょく・ゆうびん

	Reading
🏠	びょういん
🏠	ぎんこう・ばんく
🏠	えーていーえむ・ばんく
🏠	ほてる
🏠	こんびに
🏠	がそりすたんど・がすすたんど・がす
🏠	ちゅうしゃじょう・ばーきんぐ・びー
🏠	しんこう
🏠	といれ・べんじょ
🏠	れすとらん・しょくじ・ごはん・めし
🏠	きつさてん・しょくじ・さてん・おちゃ
🏠	ばー・しょくじ・さけ・かんぱい
🏠	びーる・しょくじ・さけ・かんぱい
🏠	ふあーすとふーど・しょくじ・はんばーがー
🏠	ぶていっく・くつ・ふく・はいひーる
🏠	びょういん・はさみ・とこや
🏠	からわけ・まいく・うた
🏠	えいが・びてお
🏠	ゆうえんち
🏠	おながく・きく・へっどほん
🏠	あーと・かいが
🏠	えんげき・しばい
🏠	いべんと
🏠	ちけつと・きつぷ
🏠	きつえん・たばこ
🏠	きんえん・たばこ
🏠	かめら・しゃしん
🏠	かばん・ぱっく
🏠	ほん
🏠	りほん
🏠	ぶれげんと・おめでとう
🏠	ばーすでー・おめでとう・たんじょうび
🏠	でんわ
🏠	けいたいでんわ・けいたい・けーたい・でんわ

	Reading
	めも
	てれび
	げーむ
	しーでいー
	はーと・とらんぶ
	すべーど・とらんぶ
	だいや・とらんぶ
	くらぶ・とらんぶ
	め・みる・みて
	みみ・きく
	て・ぐー
	て・ちょき
	て・ぱー
	あし・あしあと
	くつ
	めがね
	くるまいす
	しんげつ・つき・まる
	はんつき・つき
	はんつき・つき
	みかづき・つき
	まんげつ・つき・まる
	いぬ・どうぶつ
	ねこ・どうぶつ
	りぞーと・よつと・ふね
	くりすます・き
	かちんこ・かっと・かんとか
	ぶくろ
	べん・めも
	ひとかげ
	いす
	よる・つき・おやすみ
	えんど・おわり
	とけい・じかん
	でんわ・でんわばんごう
	めーる・あどれす
	ふあつくす
	あいもーど・あい
	あいもーど・あい
	めーる・てがみ・あどれす
	どこも

	Reading
	どこもぼいんと・どこも
	ゆうりょう・えん・かね
	むりょう・ただ・ふりー
	あいでいー
	ばすわーど・かぎ
	つぎ・りたーん
	くりあ
	さーち・しらべる・むしめがね
	にゅー・にゅー・あたらしい
	はた・ふらつぐ・いち
	ふりーだいやる
	しゃーぶ
	いち・すうじ
	に・すうじ
	さん・すうじ
	し・よん・すうじ
	ご・すうじ
	ろく・すうじ
	なな・しち・すうじ
	はち・すうじ
	きゅう・く・すうじ
	ぜろ・れい・すうじ
	けってい・おーけー・おっけー
	あいあぶり・あぶり
	あいあぶり・あぶり
	ていーしゃつ・しゃつ・ぶく
	さいふ・かね・おかね
	けしょう・くちべに
	じーんず・ぶく・すぽん
	すのぼ・すのぼーど・すぽーつ
	ちゃべる・べる・かね
	どあ・とびら
	どるぶくろ・かね・おかね
	ばそこん・びーしー
	らぶれたー・らぶめーる・てがみ・めーる
	れんち・しゅうり
	えんぴつ・めも
	おうかん・かんむり・おう
	ゆびわ
	すなどけい・じかん

	Reading
	じてんしゃ・のりもの・ちゃり
	ゆのみ・おちゃ・ちゃ
	うでどけい・とけい・じかん
	かんがえる・かお・うーむ
	ほつ・かお
	ひやあせ・かお
	ひやあせ・かお
	いかり・かお・ぶー
	ぼけー・かお
	はーと・かお
	おーけー・て・おっけー
	あかんべ・かお・ペー
	ういんく・かお
	うれい・かお・にこ
	がまん・かお
	ねこ・どうぶつ
	なみだ・かお・なき
	なみだ・かお・なき
	えぬじー・だめ
	くりつば・てんば
	はしるひと・だっしゅ・はしる・にげる
	まるひ・ひみつ
	りさいくる
	きけん・ちゅうい
	さんし
	くうしつ・くうせき・くうしゃ・あき
	ごうかく
	まんしつ・まんせき・まんしゃ・いっぱい
	やじるし・や
	やじるし・や
	がっこう
	なみ・うえーぶ・うみ
	ふじさん・やま
	くろーばー・はな
	さくらんぼ・はな・ちえりー
	ちゅーりつば・はな
	ばなな・たべもの
	りんご・たべもの
	め・はな

	Reading
★	もみじ・はな
✿	さくら・はな
🏠	おにぎり・おむすび・たべもの
🍰	しょーとけーき・けーき・たべもの
👤	とっくり・おちよこ・さけ・かんぱい
🍷	どんぶり・ごはん・たべもの・しょくじ

	Reading
🍷	ばん・しょくじ・たべもの
🍷	かたつむり・どうぶつ
🍷	ひよこ・どうぶつ
🍷	べんぎん・どうぶつ
🍷	さかな・どうぶつ
🍷	うまい・たべる・かお
🍷	にやり・かお・わらい

	Reading
🍷	うま・どうぶつ・けいば
🍷	ぶた・どうぶつ
🍷	わいんぐらす・わいん・さけ・かんぱい
🍷	げっそり・さけび・むんく・かお

* Pictographs with no reading can be entered only by Pictograph.

■ Pictograph idioms

In predicted conversion mode, some readings convert to pictograph idioms combining multiple pictographs.

Reading	Idiom
おたんじょうびおめでとう／はッピーばーすデー	🎁🍰🎁🍰
るるるん	🎵🎵
わーい	🎵🎵
るるー	🎵🎵🎵
きゃびきゃび	🎵🎵
めろめろ	🎵🎵
わくわく	🎵🎵
はッピー	🎵🎵
うきうき	🎵🎵
らぶらぶ	💖💖💖
どきどき	🎵💖
やったー	🎵💖🎵
だいすき	💖💖💖
わおっ	🌟🌟
がっかり	🎵🎵
しくしく	🎵🎵
しょんぼり	🎵🎵
ぶんぶん	🎵🎵
がーん	🎵💖
きらい	🎵🎵
しょっく	🎵🎵
つかれた	🎵🎵
すやすや	🎵ZZZ
おはよう	🎵🌞
こんにちは	🎵🌞🎵
はろー	🎵🌞🎵
こんばんは	🎵🌙
おやすみ	🎵🌙🎵
ばいばい	🎵🌙

Reading	Idiom
たのしみ	💖🎵💖
おつかれさま	🎵🎵
ありがとう	💖🎵💖
ごめんね	🎵🎵🎵
がんばろう	🎵🎵
ひさしぶり	🎵🎵
げんき?	🎵!?
にんまり	🎵🎵🎵
らぶりー	💖💖
すてき	🎵🎵
うれしい	🎵🎵
かなしい	🎵🎵
おいしい	🎵🎵
はやく	🎵🎵
いそいでいる	🎵🎵
ゆっくり	🎵🎵
ほんとうにはやく	🎵🎵
もうだっしゅ	🎵🎵
つうきん	🎵🎵
しはつ	🎵🎵
しゅうでん	🎵ZZZ
まんいんでんしゃ	🎵🎵
どらいぶ	🎵🎵
じゅうたい	🎵🎵
がすけつ	🎵🎵
かえる	🎵🎵
だんしこう	🎵🎵
じょしこう	💖🎵
だいがく	🎵🎵
しょうがっこう	🎵🎵

Reading	Idiom
てすとべんきょう	
てすとはんい	
もうべんきょうちゅう	
がっこうがやすみ	
しりよくけんさ	
ざんぎょう	
かえれない	
じゅうようしょるい	
きゅうりょうかつと	
のんびり	
きがえる	
ひとりぐらし	
やちん	
ろくが	
ゆめのなか	
ばくすい	
おふろにはいる	
すかっ	
さいこう	
さいあく	
ほんとうにつらい	
おこったぞ	
おこったぞ	
げきど	
きれそう	
りょうかい	
らじゃー	
あそぼう	
だいじょうぶ	
よろしく	
おねがい	
おっけー	
ほのぼの	
わかった	
あそびにいく	
よっぱらう	
ばかんす	
ばちんこ	
でいーじえー	
れすとらん	

Reading	Idiom
えすて	
なんば	
らいぶほうす	
ごうこん	
しんかんこんぱ	
いけめん	
いけめん	
ひとめぼれ	
としした	
としうえ	
こいのよかん	
えんきよりれんあい	
やきもち	
ふたまた	
えんをきる	
けっこん	
なやみちゅう	
おんしんぶつう	
かっぶる	
でーと	
ちこく	
まくどなるど	
てをつなぐ	
はなび	
かんばい	
くりすます	
えきまえ	
とない	
いどうじかん	
くやしい	
うるさい	
びっくり	
うらやましい	
はれめ	
まじで?	
さみしい	
たいへん	
はらいした	
なつばて	
ふらふら	

Reading	Idiom
ごうきゅう	👉 ☁️ 👉
のみすぎ	✖️ 🍷
めにくま	🍷 🍷
めーるそうしん	📧 ✉️ 📧
うれしめーる	🎵 📧 🎵
うれしめーる	💖 💖 💖 📧 💖 💖 💖
らぶめーる	💖 📧
はやめーる	📧 📧
りれーめーる	🏠 📧
しーくれっとめーる	📧 📧
あつい	🔥 ☀️
ひじょうにあつい	🔥 🔥 🔥 ☀️
おおゆき	❄️ ❄️ ❄️
さむい	❄️ ❄️
ありがとう	🙏 📱 9

Reading	Idiom
ごめんなさい	🙏 🙏
きいて	👂 🙏 👂
おしえて	👂 ?
みみよりじょうほう	NEW 👂
おはよう	☀️ 🙏 !
よろしく	🙏 🙏
ふあいと	🙏 🙏 🙏
こんばんにや	💎 🙏 🙏 🙏
こんばんわん	💎 🙏 🙏 🙏
わんざり	🙏 ~ 1
ながでんわ	📞 📞 ~ 📞
こくさいでんわ	📞 🙏 ~ 📞
ときがたつ	🕒 ⏳ ⏳
おみやげ	📦 📦

NOTE

- When you send pictographs to the mobile phone other than i-mode terminal or a PC, they may not be displayed correctly. Pictographs may not be displayed correctly depending on the model of the other party even when it is the i-mode terminal.

Face Marks

■ Face marks reading

You can enter the face marks by entering and converting the following readings. Also, all the following marks are displayed as conversion candidates when you enter “かお” or “かおもじ” and press **[oh]** (Convert) to convert.

Reading	Face mark
ありがとう	m()m
ばんざい	\(^\circ \square^\circ)/
わーい	(^\circ \square^\circ)
	(^\circ \square^\circ)
	(* ^\circ \square^\circ *)
	o(^\circ \square^\circ o)(o ^\circ \square^\circ o)
	(\geq \square \leq)
おーい	(^\circ \square^\circ)/
ぶい	(^\circ \square^\circ)v
ぎやはは	(^\circ \square^\circ)/ ^\circ
あは	(^\circ \square^\circ \square^\circ)
	(^\circ \square^\circ)
にこ	(^\circ \square^\circ)
	(* ^\circ \square^\circ *)
	(o ^\circ \square^\circ o)
	(o ^\circ \square^\circ o)
	(^\circ \square^\circ \bullet)
	(\bullet ^\circ \square^\circ \bullet)
	(o ^\circ \square^\circ o)
ちゅ	(^\circ \square^\circ)/
	(^\circ \square^\circ)-☆Chul
わくわく	o(^\circ \square^\circ)o
ういんく	(^\circ \square^\circ)
さよなら	(^\circ \square^\circ)/ ^\circ
	(^\circ \square^\circ)/ ^\circ
がんば	p(^\circ \square^\circ)q
ね	(^\circ \square^\circ)b
ぼりぼり	(^\circ \square^\circ)s
ひやあせ	(^\circ \square^\circ) ^\circ
あせあせ	(^\circ \square^\circ)A
びくっ	(* ^\circ \square^\circ *)
どき	(\odot - \odot)
え	(\odot \odot)
めがてん	(^\circ \square^\circ)

Reading	Face mark
はてな	(\cdot \cdot \cdot)
きらーん	(☆ \cdot ☆)
しくしく	(\top \top)
さよなら	(\top \top)/ ^\circ
いたた	(\odot \odot)
	(> <)
えーん	(; ;)
	(^\circ \square^\circ)
	Ω Δ Ω ;
	/ Δ < ^\circ
	^ \circ (p) ^\circ Δ < q ^\circ
	(\top \top \cdot)
	(? ?)
がーん	(\top \top) ;
	(\top \top) ;
	Σ (\top \top) ;
えへん	(^\circ \square^\circ)
む	(- - -)
	o(^\circ \square^\circ o)
いかり	(^\circ \square^\circ)
むか	(^\circ \square^\circ)
	(^\circ \square^\circ)
ごそごそ	(\cdot \cdot \cdot)
じーっ	(- - -)
きこえない	(\cdot \cdot \cdot)
こまったもんだ	(^\circ \square^\circ) ^\circ
ぶたー	(^\circ \square^\circ)
こあら	(- Q -)
いっぶく	(^\circ \square^\circ)y ^\circ
	(^\circ \square^\circ)y- ^\circ
ほし	☆シ
ねてる	(- -)zz
ねむい	\(^\circ \square^\circ)/

Reading	Face mark
ねむい	(\rho -)/
めも	φ (\cdot)
うん	(^\circ \square^\circ) (\cdot)
かんぱい	(^\circ \square^\circ) / (^\circ \square^\circ) / (^\circ \square^\circ) / (^\circ \square^\circ) /
ども	(^\circ \square^\circ) (^\circ \square^\circ) /
がまん	(; ; \square)
こんにちは	(^\circ \square^\circ) (^\circ \square^\circ) /
	(\bullet ^\circ \square^\circ \bullet) /
いいな	(o) > (o <)
	(\odot \square^\circ \odot)
	(m' \square^\circ m)
うーん	(^\circ \square^\circ) ;
てる	(\top \top) ;
	(* / \omega *)
	(/ / \top / /)
	(\geq \omega \leq)
しあわせ	^ \circ + (* ^\circ \square^\circ) ^\circ +
	(^\circ \square^\circ) /
	(* ^\circ \square^\circ *)
なかよし	(^\circ \square^\circ) \wedge (^\circ \square^\circ)
ごめん	(* C *)
いじいじ	φ (\cdot ;)
いじわる	ψ (^\circ \square^\circ #)
よろしく	☆ \wedge (\top \top *)
こまった	> <
やだ	(\odot > <)
へこむ	(^\circ \square^\circ)
	(^\circ \square^\circ)
びっくり	(o \square^\circ \odot)
	w(^\circ \square^\circ)w
だっしゅ	ε = \Gamma (\cdot \cdot) ^\circ

Common Phrases

Category		Common Phrase	
① Internet	① .co.jp	⑥ .go.jp	
	② .ne.jp	⑦ @docomo.ne.jp	
	③ .com	⑧ http://	
	④ .or.jp	⑨ https://	
	⑤ .ac.jp	⑩ www.	
② Emoticon1	① ^^;	⑥ (>_<)	
	② (^.^)	⑦ (^.^)	
	③ >^_^<	⑧ (@_@)	
	④ (:_:)	⑨ m()m	
	⑤ (+_+)	⑩ (^-^)/~~	
③ Emoticon2	① o(^w^)o	⑥ * 0^)ノ	
	② (o^-')b	⑦ (^^)y~~	
	③ \(^δ^)/	⑧ (o`v´o)	
	④ (ρ_—)o	⑨ (´□´)	
	⑤ (▽▽)v	⑩ (¥Δ¥;)	
④ Emoticon3	① (≥ε≤)	⑥ (^・^)Chu♪	
	② (≥▽≤)彡	⑦ ㄥ(◎_◎)ノベ	
	③ (:□:)!!	⑧ ε=┐(:▽▽)┐	
	④ (u_u)o"	⑨ ♪d(´〇´)b♪	
	⑤ =^ε^=	⑩ へ(´-´)X(´o´)ノ	
⑤ Greetings	① おはようございます	⑥ お疲れさまでした	
	② おやすみなさい	⑦ お世話になっております	
	③ 昨日は、どうもありがとうございました	⑧ こんにちは	
	④ 行ってきます	⑨ ごんぱんは	
	⑤ いってらっしゃい	⑩ よろしくお願い致します	
⑥ Business	① 直行します	⑥ 本日の会議は中止となりました	
	② 直帰します	⑦ 出欠をご連絡ください	
	③ 休暇をとります	⑧ 次の指示を待ってください	
	④ 半休します	⑨ 携帯の電源を切ります	
	⑤ 電車遅延のため、遅れます	⑩ メールで連絡してください	
⑦ Private	① 遊びに行こう	⑥ 先に行きます	
	② 飲みにいきませんか？	⑦ 先に帰ります	
	③ 遅れます	⑧ 時間です	
	④ 変更します	⑨ 何してるの？	
	⑤ 中止です	⑩ どこにいるの？	
⑧ Reply	① OKです	⑥ 今忙しい	
	② NGです	⑦ 後で連絡を入れます	
	③ ありがとう	⑧ 保留です	
	④ ごめんなさい	⑨ キャンセルです	
	⑤ 待ってて！	⑩ 時間がありません	
⑨ Original			

Multi Access Combination Patterns

Another communication Current condition	Voice call		Videophone		Using i-mode ^{*1}	Using i-appli	i-mode mail	
	Dialing	Incoming call	Dialing	Incoming call			Send	Receive
During a voice call	△ ^{*2}	△ ^{*3}	×	△ ^{*4}	○	×	○	○
During a videophone call	×	△ ^{*4}	—	△ ^{*4}	×	×	×	×
During i-mode ^{*1}	○	○	△ ^{*5}	△ ^{*6}	—	○	○	○
During packet communication with a PC	○	○	×	×	×	△ ^{*7}	×	×
During 64K data communication	×	△ ^{*4}	×	△ ^{*4}	×	×	×	×

Another communication Current condition	SMS		Packet communication		64K data communication	
	Send	Receive	Send	Receive	Send	Receive
During a voice call	○	○	○	○	×	△ ^{*4}
During a videophone call	×	○	×	×	×	△ ^{*4}
During i-mode ^{*1}	○	○	×	×	×	×
During packet communication with a PC	○	○	—	—	×	×
During 64K data communication	○	○	×	×	×	△ ^{*4}

○: Can be activated. ×: Cannot be activated. △: Can be activated depending on situation.

—: Functionally incompatible.

^{*1}: Includes i-Channel site view and communication via Full Browser or ToruCa.

^{*2}: If you have subscribed to "Call Waiting", you can hold the current voice call to make another call.

^{*3}: If you have subscribed to "Call Waiting", you can hold the current voice call to answer an incoming call. If you have subscribed to "Voice Mail" or "Call Forwarding", you can end the current communication and then answer a new incoming communication. → p.313

^{*4}: If you have subscribed to "Call Waiting", "Voice Mail" or "Call Forwarding", you can end the current communication and then answer a new incoming communication. → p.313

^{*5}: Make a videophone call after disconnecting the current i-mode.

^{*6}: If "V-phone while packet" is set to "V-phone priority", answering an incoming videophone call disconnects i-mode communication.

^{*7}: You cannot communicate via i-appli software.

^{*8}: An i-mode mail, MessageR or MessageF is not received, but is stored in the i-mode Center. You can receive a stored i-mode message, MessageR or MessageF by performing "Check new messages" after the current communication ends.

^{*9}: It is logged as a missed call.

Multitask Combination Patterns

Function Current status	Mail	i-mode menu/ i-Channel list	i-appli	Settings	Data Box	LifeKit	Service
Mail group activates	○*2	○	○	○*8	○	○*12	○*15
i-mode group activates	○	×	○	○*8	○	○*12	○*15
i-appli group activates	○	○*5	×	○*8	○*11	○*12	○*15
Settings group activates	○	○	○	×	○	○*12	×
Tools group activates*1	○	○	○	○*8	×	×	○*15
Music group	○*3	○*6	○*7	○*8	○*6	○*8	○*15
During a voice call	○*4	○*4	×	×	×	×	○*4*15 *16*17
During a videophone call	×	×	×	×	×	×	×
During packet communication with a PC	○	○	○	○*8	○	○*12	○*15
During 64K data communication	○	○	×	×	×	○*8	○*15*16

Function Current status	Phonebook	Own data	MUSIC	Camera	Osaifu-Keitai	Original menu
Mail group activates	○*18	○	○	○	○*8	○
i-mode group activates	○*18	○	○	○	○*8	○
i-appli group activates	○*18	○	○	○	○*8	○
Settings group activates	○*18	○	○	○	○*8	○
Tools group activates*1	×	×	○*8	×	○*8	○
Music group	○*18	○	×	○*21	○*8	○
During a voice call	○*18	○*4*19	×	○*4*22	×	○*4
During a videophone call	×	×	×	×	×	×
During packet communication with a PC	○*18	○	×	○	○*8	○
During 64K data communication	○*18	○*19	×	○*22	×	○

○ : Can be activated. × : Cannot be activated.

*1 : The function is unavailable when "Receive Ir data", "microSD manager" or "UIM operation" is selected.

*2 : "Compose message" and "Compose SMS" cannot be used simultaneously.

*3 : Read out mail function is not available during music playback. In addition, playing sounds such as melodies attached to files is not possible.

*4 : It is not available while switching between a voice call and a videophone call.

*5 : i-motion, Chaku-Uta-Full® and Music&Video Channel cannot be downloaded.

*6 : Playing sounds such as melodies and i-motion is not possible during playback of Music Player.

*7 : "Music&Video Channel"/"Music Player" is paused.

*8 : Some functions are unavailable.

*9 : Only "Pause dial", "Keypad sound" and "IC card lock setting" are available.

*10 : Only "Ntgy switch-mode" is available.

*11 : Editing, storing and copying still images to microSD memory card, editing, forwarding and copying/moving movies to FOMA terminal ⇄ microSD memory card, moving Chaku-Uta-Full® to FOMA terminal ⇄ microSD memory card are not available.

*12 : "Receive Ir data", "microSD manager", "Voice announce" and "UIM operation" are unavailable.

*13 : Only "Bar code reader", "Camera", "Data security serv.", "Schedule", "To Do list", "Text memo", "Calculator", "Voice memo (in-call)", "My Profile", "Text reader" and "Dictionary" are available. However, only "Photo mode" and "Continuous mode" are available in "Camera".

- *14 : "Voice memo (in-call)" is activated only by pressing [X-E] for 1 second or longer. However, it is not available while switching between a voice call and a videophone call.
- *15 : "Chaku-moji" is unavailable. Some functions such as "Phonebook 2in1 setting" are not available depending on the 2in1 setting.
- *16 : "Voice Mail" messages cannot be played. The Service Numbers (p.313) and special number (p.319) cannot be dialed (but can be dialed using USSD).
- *17 : "Caller ID Notification" and "2in1 setting" is unavailable.
- *18 : "Restrictions" is unavailable.
- *19 : "Common phrases", "Own dictionary" and "Download dictionary" are unavailable.
- *20 : Only "ToruCa", "IC card lock setting" and "Search by i-mode" are available.
- *21 : Camera cannot activate when Music Player is running.
- *22 : Only "Photo mode" and "Continuous mode" are available.

Services Available for the FOMA Terminal

Available service	Phone number
Directory assistance (pay: service charge + call charge) * Unlisted phone numbers cannot be given.	(No area code) 104
Telegram (pay: telegram charge)	(No area code) 115
Time (pay)	(No area code) 117
Weather forecast (pay)	Area code of an area you want to know + 177
Emergency call to the police	(No area code) 110
Emergency call for a fire engine or an ambulance	(No area code) 119
Emergency call for help with maritime accidents	(No area code) 118
Emergency Message Recording System (pay)	(No area code) 171
Collect call (pay: service charge + call charge)	(No area code) 106

NOTE

- When you use the Collect Call Service (106), the receiver will be billed for the call charge plus an additional service charge of 90 yen (94.5 yen tax included) for each call. (as of January, 2008)
- When you use the Directory Assistance Service (104), you will be billed for the call charge plus an additional service charge of 100 yen (105 yen tax included). A free service is available for persons with impaired vision or disability of the arms or hands. For further details, call 116 (NTT inquiries) from ordinary phones. (as of January, 2008)
- This FOMA terminal supports "緊急通報位置通知" (Emergency Location Report). When calling 110, 118 or 119 from the FOMA terminal, your current location (location information) is automatically notified to a concerned organization such as police office.
The location information may not be correctly sent depending on your current location or the condition of the signal reception.
If you dialed with "184" attached not to notify the caller information, your location information and caller ID is not notified. However, when the concerned organization judges the information is necessary for protection of a human life, your location information and caller ID may be acquired. Where and when to start the support of "緊急通報位置通知" (Emergency Location Report), differ in every local organization.
- When calling 110, 119 or 118 from the FOMA terminal, first inform that you are calling from a mobile phone, give your number, and state your location clearly so that the police or fire department can call you back. Also, do not move around when making the call. Do not turn off the FOMA terminal immediately after ending the call, but leave it turned on for another ten minutes or so, so that you can receive a call.
- Depending on the area you are calling from, you may not be connected with the nearest police or fire department. In that case, call again from a public phone or land line.
- If you are using a "Call Forwarding" service from a general phone and if a mobile phone is set as the forwarding number, depending on the settings of the general phone or mobile phone, the caller may simply hear the ring tone even when the mobile phone is busy with another call, out of range or turned off.
- Other services such as 116 (NTT inquiries), Dial Q2, message (Dengon) Dial, and Credit Call Service are not available (However, Credit Call Service calls can be made from public or general subscriber phones to the FOMA terminals).

Options and Accessories

By combining various options and accessories sold separately, your FOMA terminal can support a wide range of applications to meet both your personal and professional needs. Note that some products may not be available depending on the area you are in. For more information, contact an NTT DoCoMo shop or service counter.

For details of options and accessories, refer to relevant User's Manual.

- Earphone/Microphone with Switch P001^{*1}/P002^{*1}
- Stereo Earphone Set P001^{*1}
- Flat-plug Earphone/Microphone with Switch P01/P02^{*2}
- Flat-plug Stereo Earphone Set P01^{*2}
- Bone conduction microphone/receiver 01^{*2}
- FOMA USB Cable^{*3}
- FOMA AC Adapter 01/02^{*4}
- FOMA Dry Battery Adapter 01
- Carry Case S 01
- FOMA USB Cable with Charge Function 01/02^{*3}
- FOMA Portable Charging Adapter 01
- In-Car Hands-Free Kit 01^{*5}
- FOMA In-Car Hands-Free Cable 01
- FOMA Indoor Booster Antenna^{*6}
- FOMA Indoor Booster Antenna (Stand Type)^{*6}
- In-Car Holder 01^{*7}
- FOMA AC Adapter 01 for Global Use^{*4}
- FOMA DC Adapter 01/02
- Desktop Holder S009
- Battery Pack S003
- Back Cover S010
- Earphone Plug Adapter 01 for External connector
- Style-Up Panel S003

*1: To connect to FOMA SO705i, the Earphone Plug Adapter P001 and Earphone Plug Adapter for External connector terminal are required.

*2: To connect to FOMA SO705i, the Earphone Plug Adapter for External connector terminal is required.

*3: USB HUB may not function correctly.

*4: Charging with the AC adapter → pp.43, 44

*5: To connect/charge FOMA SO705i with USB, the FOMA In-car Hands-free Cable 01 is required.

*6: Use in Japan only.

*7: To attach FOMA SO705i to the In-Car Holder, attach to "5th position" shown as ② on the list of "In-Car Holder 01 Manual".

Movie Playing Software

- To play a movie (MP4-formatted file) on PC, install QuickTime Player (free) ver. 6.4 or later (or ver. 6.3 + 3GPP) of Apple Inc.
- Download QuickTime from the following website:
<http://www.apple.com/jp/quicktime/download/>
 - To download, you need PC to access Internet. You are charged for the Internet communication fee to download the software.
 - View the website above for more details on the environment, how to download or how to operate.

Malfunction Checklist

- Check first whether the software update is required. If it is required, update the software. → p.374
- In the following table, problems are written in blue, and points to check and reference pages are written in black.

The FOMA terminal does not turn on. (The FOMA terminal cannot be used.)

- Is the battery pack properly attached? → p.42
- Has the battery run out? → p.45

The animation shown on the right appears and an alarm tone sounds

- The battery has run out.
Recharge the battery. → pp.43, 45



The “” icon appears and I cannot make a call

- Are you out of range or is the reception poor? → p.46

Cannot access functions quickly by pressing the keys pre-assigned to the menu numbers (p.336).

- Set the Theme of the main menu to “Standard Menu”. → p.34

I cannot make a call by pressing the dial keys

- Is Original lock for “Keypad dial” under “Dial/sending mail” set? → p.117
- Is Keypad lock set? → p.118
- Is Restrict dialing set? → p.120

I dialed a number and initiated a call, but all I hear is a busy tone

- Did you start dialing before hearing the dial tone? → p.50
- Did you forget to dial the area code? → p.50
- Is “Please wait” displayed?

I cannot receive calls. Or I cannot hear the ring tone.

- Are any of the following functions set?
 - Restrictions → p.120
 - Call rejection
 - Call forwarding
 - Ring time(sec.) → p.122
 - Set mute seconds
 - Reject unknown → p.122
 - Call setting w/o ID → p.122
 - Unknown: Reject
 - User unset: Reject
 - Call acceptance
 - Voice Mail
 - Payphone: Reject
- Is the FOMA terminal in Manner mode? → p.92
- Is the FOMA terminal in Public mode (Driving mode)? → p.65

- Is Original lock for “Incoming call” under “Incoming/Mail disp.” set? → p.117
- Is Self mode set? → p.123
- Is the start time of Voice Mail or Call Forwarding service set to “0 second”? → pp.308, 311
- Is Caller ID Request set to Activate? → p.312
- Is mova valid with the Dual Network service? → p.312
- Is the ring volume set to “Silent”? → p.64
- Is “0 second” set as the ring time for Record message? → p.68

Mail ring tones and alarm tones sound but no ring tone sounds when receiving a call

- Is “Set mute seconds” under “Ring time(sec.)” set to longer time (e.g. 99 seconds)? Set “Set mute seconds” to shorter time. → p.122

The records of Dialed calls/Redial, Sent address disappear automatically

- Is “Restrict dialing” under “Restrictions” set? → p.120

The ring tone sounding when receiving a voice call or videophone call is different from what I selected

- When the ring tone settings are duplicated, the priority applies. → p.89

The image appearing when receiving a voice call or videophone call is different from what I selected

- When the image settings are duplicated, the priority applies. → p.89

When receiving a voice call or videophone call, the color or pattern of the incoming call lamp flashing is different from what I set up

- When the incoming call lamp settings are duplicated, the priority sequence will be assigned. → p.99

It takes long to display or play a movie/i-motion or a Chaku-Uta-Full®

- Is the movie/i-motion or the Chaku-Uta-Full® saved in “Movable contents” folder?
It may take long to display or play the data saved in the “Movable contents” folder.

Cannot copy or move a movie/i-motion or a Chaku-Uta-Full® to microSD memory card

- Is the Chaku-Uta-Full® saved partially? → p.269
- Is the replay restriction (number of times, period, time limit) of the movie/i-motion or the Chaku-Uta-Full® invalid? → pp.228, 269

The screen or ring tone for an incoming call or message is the default setting

- Depending on the combination of receiving screen and ring tone or the priority sequence, either the receiving screen or ring tone may be restored to default.

The ring tone sounding when receiving a message is different from what I selected for the mail address

- When the ring tone settings are duplicated, the priority applies. → p.89

- If you have received two or more messages, the tone set for the last received mail address sounds. → p.99
- If the format of the sender's mail address is "(phone number) @docomo.ne.jp", save only that phone number as a mail address and set a distinctive ring tone for that mail address in Select ring tone under Mail (recv.). → p.82
- Is the sender's mail address (a mail address shown on the received mail details screen) stored in the phonebook correctly and did you set a distinctive ring tone for that mail address in Select ring tone under Mail (recv.)? → p.82
- If you receive an SMS, a distinctive ring tone set in Mail (recv.) for the phone number in the phonebook sounds. → p.89

An icon appears instead of image, i-motion, music or Music&Video Channel

- The following icons indicate that the image, i-motion, music or Music&Video Channel cannot be selected for the function. Select another data. → pp.227, 234, 266, 269



The color of the incoming call lamp flashing when receiving a mail is different from what I selected for the mail address

- When the incoming call lamp settings are duplicated, the priority applies. → p.99
- If you receive two or more messages, the incoming call lamp flashes following the settings of the incoming call lamp under Mail (recv.) that is set to the last received mail address. → p.99
- If the format of the sender's mail address is "(phone number) @docomo.ne.jp", save only that phone number as a mail address and set distinctive incoming call lamp for that mail address in incoming call lamp under Mail (recv.). → p.82
- Is the sender's mail address (a mail address shown on the received mail details screen) stored in the phonebook correctly and did you set incoming call lamp for that mail address in incoming call lamp under Mail (recv.)? → p.82
- If you receive an SMS, distinctive incoming call lamp set in incoming call lamp under Mail (recv.) for the phone number in the phonebook flashes. → p.83

Cannot charge the FOMA terminal (the charge lamp of the FOMA terminal does not light)

- Is the battery pack properly attached to the FOMA terminal? → p.42
- Is the adapter firmly plugged into the electrical socket or cigarette lighter socket? → p.44
- Is the adapter and the FOMA terminal correctly connected (is the AC adapter firmly connected to the FOMA terminal or the desktop holder)?

Battery life is short

- Is the battery pack at the end of its life? The lifespan of the battery pack may be shortened depending on usage environment. → p.43
- Battery life will depend on how the FOMA terminal is used. → p.43

The key does not sound when I press it

- Is "Keypad sound" set to "OFF"? → p.90
- Is the FOMA terminal in Manner mode? → p.92

I cannot use Any key answer to answer a voice call or videophone call

- Is "Answer setting" set to "Quick silent" or "OFF"? → p.63
- You cannot use Any key answer to answer a videophone call.

The other party's voice is difficult to hear during a call

- Is the earpiece speaker properly placed against your ear? → p.24
- Is anything (e.g. a sticker) obstructing the earpiece speaker?
- Is anything obstructing the speaker in handsfree mode?
- Did you change the "Volume" setting?
Change the setting so that you can hear the other party clearly. → p.64

The other party's voice is too loud during a call

- Did you change the "Volume" setting?
Change the setting so that you can hear the other party clearly. → p.64

Pressing the side key does not operate the folded FOMA terminal

- Is Keypad lock set? → p.118
- Is "Side key guard" set to "ON"? → p.120

Pressing does not check missed calls, etc. when the FOMA terminal is folded Pressing and holding down for 1 second or longer does not launch the Music Player

- Is "Info notice setting" set to "OFF"? → p.68
- Is Keypad lock set? → p.118
- Is "Side key guard" set to "ON"? → p.120

The display is hard to see

- Is Brightness under Backlight set to "Dark"? → p.96
- Is "Shield view" set to "ON"? → p.96

The display light of the display or keypad does not turn on

- Is Lighting under Backlight set to "OFF"? → p.96
- Press and hold  for 1 second or longer to turn the backlight on or off.
Note that pressing and holding  for 1 second or longer will turn off the backlight e.g. while composing a message.

Receiving an incoming call immediately after turning on the power displays the phone number but does not display the name stored in the phonebook

- The FOMA terminal may be reading the FOMA card (UIM) immediately after turning on the power. The phonebook function may not be available then.

It takes some time for the power to turn on after pressing and holding for 1 second or longer

- Data checking may take time (e.g. if the phonebook is full of data). → p.82

Nothing appears on the display

- Is the FOMA terminal set to Power saver mode? Press any key to cancel Power saver mode. → p.96

Nothing appears on the sub display

- Is "Illumination setting" set to "OFF"? → p.98

The FOMA terminal does not perform incoming call operations (ring tone sounding, vibrator, incoming call lamp flashing) when receiving a call

- The FOMA terminal does not perform incoming call operations (ring tone sounding, vibrator, incoming call lamp flashing) until the set time is reached, when receiving a call from a phone number not stored in the phonebook or from a caller who does not notify his/her caller ID and if "Set mute seconds" under "Ring time(sec.)" is set to "ON". → p.122

Receiving an SMS does not display the sender's name stored in the phonebook

- Did you correctly store the sender's phone number on the phone number line  of the phonebook? → p.76

Mails are not automatically filtered

- If the sender's mail address is "(Phone number)@docomo.ne.jp", save only the phone number in the Auto-sort settings. → p.184
- If the sender's mail address is not "(Phone number)@docomo.ne.jp", save the entire address including the domain in the Auto-sort settings. → p.184

A message is not automatically received

- If you have set "Receive option setting" to "ON", set it to "OFF". → pp.174, 188

Cannot install the FOMA communication setting file (driver) or make data communication

- Is the USB mode setting set to "microSD mode" or "MTP mode"? Set it to "Communication mode". → p.251

Data transmission is not performed

- Do you use USB HUB? USB HUB may not function correctly.

PC cannot be connected in MTP mode.

- The microSD memory card which created on the other FOMA terminal is not available.

i-mode, i-mode mail, i-appli and i-Channel cannot be connected

- Is "Host selection" set to something other than "i-mode"? → p.158
- If you had started using the FOMA terminal before you subscribed to i-mode, turn the FOMA terminal off and then turn it back on.

The FOMA terminal does not perform receiving message operations (ring tone sounding, vibrator, incoming call lamp flashing) when receiving a message

- Is "Mail/Msg. ring time" set to "OFF"? → p.91
- Is Original lock for "Disp. recv. mail/msg." under "Incoming/Mail disp." set? → p.117
- Is "Receiving setting" set to "Operation preferred"? → p.188

A sent message is not saved to the Outbox

- Is "Sort all" set to the folder of mail-connected i-appli? Highlight the folder of mail-connected i-appli then select "Open folder" from the function menu to confirm the setting. → pp.181, 183

A received message is not saved to the Inbox, and (white) does not disappear

- Does  appear on the folder of mail-connected i-appli in the Inbox? Or is "Sort all" set to the folder of mail-connected i-appli? Highlight the folder of mail-connected i-appli then select "Open folder" from the function menu to confirm the setting. → pp.181, 183

I was disconnected while sending a message, then received an SMS

A message appears when I retry

- SMS interrupts communication and notifies you that a large amount of data is being transferred within a given time. Follow the contents of SMS and the displayed message.

Images taken with the rear camera are flickered

- When you take pictures indoors, flickering may appear due to the effect of fluorescent lighting, etc. Changing the "Flicker" setting may suppress flickering. → p.132

Still images or movies shot with the rear camera look too bright

- You may shoot them outside or in a bright place with "Flicker" set to "Mode 1(50Hz)" or "Mode 2(60Hz)". Restore the "Flicker" setting to "Auto". → p.132

Still images or movies look blurred

- Move the lens selector switch of the rear lens to the ● position (standard lens) for normal shooting or to the  position (macro lens) to switch to the close-up mode for close-up shooting. → p.126
- Set a mode suited to the scene being shot. → p.131

When I attempt to display the image, appears. Or when I attempt to play for demonstration or see a preview, appears

-  may appear when the image data is corrupted.

The terminal operates slowly when any keypads are pressed

- It may occur if a large amount of data is stored on the FOMA terminal or if you exchange large data by using the microSD reader/writer function.

Chance capture shooting shortens the shooting time

- Chance capture shooting saves control data together with movie data, which may shorten the shooting time.

■ For overseas use

“” or “select net” does not disappear from the screen, and international roaming service cannot be used

- Are you out of international roaming service area or is the reception poor?
- See the international service guide such as “Mobile Phone User’s Guide [International Services]” to check if the area or operator is available.
- Turn off the FOMA terminal then turn it back on the first time you use the service after you move from Japan to overseas.
- Launch “NW search mode” to search for a compatible operator. → p.332

A voice call or videophone call cannot be received

- Is “Bar incoming when roam” set to “Activate”? → p.333
- Is “V-phone while packet” set to something other than “V-phone priority”? → p.72

The other party’s caller ID is not notified. The notified caller ID is not the other party’s The FOMA terminal does not perform operations using phonebook data or Caller ID Notification

- If the used network or operator does not notify the caller ID, the caller ID does not appear on the FOMA terminal screen even when the caller ID is notified. Depending on the used network or operator, the notified caller ID may be different from the other party’s.

If Any Error Message Appears

- In the following table, error messages are written in blue, and explanation/solution and reference pages are written in black.
- Error messages are described in alphabetical and Kana order.
- Numbers in parentheses are codes used by the i-mode Center as separators between transmitted errors.

“Activating restrict dialing”

- This is displayed if you attempt a prohibited operation while Restrict dialing is set. → p.120

“Activating Box lock Cannot download”

- There is a lock on the inbox and outbox as a whole, or on folders using mail-linked i-appli, so mail-linked i-appli cannot be downloaded or upgraded. To download or upgrade the mail-linked i-appli, release the Mail box lock. → p.120

“Activating Box lock Unable to delete”

- There is a lock on the inbox and outbox as a whole, or on folders using mail-linked i-appli, so the mail-linked i-appli and the folders using them cannot be deleted. To delete the mail-linked i-appli and the folders using them, release the Mail box lock. If you delete only the mail-linked i-appli, a message will be displayed asking whether to delete the corresponding mail folders dedicated to that i-appli. Select “NO”. → p.120

“Activating Folder lock Cannot download”

- See “Activating Box lock Cannot download” (p.365) for the explanation and solution.

“Activating Folder lock Unable to delete”

- See “Activating Box lock Unable to delete” (p.365) for the explanation and solution.

“Address is not valid (451)”

- Displayed when the mail has not been sent to the specified address correctly. → p.166

“Attached file is deleted”

- This message appears when an i-mode message received that you attempt to quote to send a reply has any file attached. It is also displayed if you attempt to forward an i-mode mail that has a file attached that is prohibited from being attached to mail or output from the FOMA terminal. The attached file is deleted when you press .

“Authentication cancelled (401)”

- This is displayed when the Cancel button is pressed on the Authentication screen.

“Authentication type not supported (401)”

- This is displayed when authentication fails. Press  to return to the original page.

“Cannot dial by Number B in abroad. Dial by Number A”

- This is displayed when the 2in1 mode is set to B mode and you attempted to make a call while overseas. Select OFF for “Caller ID Notification” to make calls without caller ID with Number A.

“Cannot download because the IC card is full. Delete a service?”**“Cannot upgrade version because the IC card is full. Delete a service?”****“Cannot start because the IC card is full. Delete a service?”****“Cannot move because the IC card is full Delete a service?”**

- This is displayed when an Osaifu Keitai-related i-appli is downloaded or moved from a microSD memory card but there is not enough data capacity left on the IC card. Select “YES” to display a list of the Osaifu Keitai service names already registered, the space (bytes) which would be freed by deleting each service, and the size of the capacity shortage. Select one or more services to delete, then follow the messages to start an i-appli to delete them.

“Cannot download because UIM information does not match”**“Cannot move because UIM information does not match”****“Cannot save because UIM information does not match”****“Cannot start because UIM information does not match”****“Cannot delete because UIM information does not match”****“Cannot backup because UIM information does not match”**

- This is displayed when the inserted UIM does not match the UIM information registered for FeliCa or you tried to run Osaifu-Keitai i-appli.

“Cannot reset by this Ext. IC card”

- This is displayed when you put the FeliCa mark close to an unregistered contactless IC card during user authentication with the IC card authentication function. → p.118

“Cannot save attached file”

- This is displayed when a mail is received with an attached file that cannot be registered for Receive Ir data, cable connection communication or copying from microSD memory card.

“Cannot set this schedule”

- This is displayed when you have attempted to use “Copy & add this” on a schedule item with the same date and time as an existing item, or if you have received such a schedule item via infrared or iC exchange or cable connection.

“Cannot start while reading the FOMA card (UIM)”

- This is displayed when you attempt an operation related to the UIM while it is being read. Please try again later.

“Cannot start while talking”**“Cannot operate while talking”**

- This is displayed if you attempt an operation that is not possible while talking. → pp.279, 358, 359

“Cannot use because of a different FOMA card (UIM)”

- This is displayed when you select and attempt to run a shortcut icon for data that is protected by FOMA card operational restriction. → p.40
- This is displayed when you select and attempt to run a screen memo or MessageR/F that is protected by FOMA card (UIM) operational restriction. → p.40

“Caution! A telephone number or URL is written in this message. Be careful if you do not know the sender”

- This is displayed if Message Scan is turned on under Scan functions and you are about to display an SMS which contains a telephone number or URL in the text. Check the sender, then press  to display the text of the SMS. → p.380

“Certificate is rejected (tampered)”

- This is displayed when an altered SSL certificate has been received. An SSL communication cannot be established with this site.

“Certificate is rejected (tampered)”

- This is displayed when an altered SSL/TLS certificate has been received. An SSL/TLS communication cannot be established with this site.

“Channel is not searched”

- Available channels could not be found.

“Character count exceeded. Delete text to an allowable size”

- The combined double-byte character count for the main text and quotation symbols in a reply-with-quote i-mode mail exceeds 5,000 characters. Delete text to bring the count to 5,000 double-byte characters or less.

“Check new messages is set all OFF”

- New messages cannot be checked because none of the items is selected in “Set check new messages”. Select items to check in “Set check new messages”. → p.189

“Connection failed (403)”

- Connection to the site failed for some reason. Retry connection.

“Connection failed”

- This is displayed when the host settings are incorrect. Set the host correctly, using “Host selection” under Connection setting. → p.158
- Connection to i-mode failed for some reason. Retry connection.

“Connection failed”

- Set “Caller ID Notification” to “ON” and retry. → p.48

“Connection interrupted”

- i-mode connection was interrupted due to poor reception. Move to a location where the reception is good before using the i-mode service. → p.46
- If this message appears when the signal is strong and the “**“Continue using the i-αppli and communication?”**

- This is displayed when you selected “NO” or “Terminate i-αppli” in response to “The number of i-αppli communications is large. Continue communication?” Select “YES” to continue i-αppli communication. Select “Terminate i-αppli” to stop using the i-αppli.

“Could not read”

- Copying could not be completed, for some reason. Replace with a different microSD card and try to copy again.

“Could not start because of a different FOMA card (UIM)”

- This is displayed when an i-αppli that is restricted by FOMA card operational restriction attempted to start automatically. → p.40

“Could not start the specified software because of a different FOMA card (UIM)”

- This is displayed when you specify and attempt to start an i-αppli that is restricted by FOMA card operational restriction. → p.40

“Data is too long A part is deleted”

- The size of address, subject or text or more than one data exceeds the maximum, and the Compose message screen appears with the excess part deleted.

“Data transmission is frequent Press CLR and confirm data transmission”

- This is displayed when the number of communications from an i-αppli standby screen becomes very large within a certain period. Press  to select whether or not to permit communications from the i-αppli standby display, or to close the i-αppli standby display. → p.209

“Dial/Receive calls activating Original lock”

- This is displayed when you have attempted a prohibited operation while the original lock is applied to “Dial/sending mail”. → p.117

“Download failed”

- This is displayed when a download of a melody, Character or download dictionary suffered a communication error or improper data.

(During Infrared Data Exchange/iC Exchange)**“No response Retry?”**

- The receiving terminal cannot be found/detected. If Ir communication is used, make sure the Ir ports are facing each other. If iC exchange is used, check the FeliCa marks and place them together again. You can select “YES”, then press  to try again. → pp.257, 259

“Editing now Cannot delete”

- This is displayed if you attempt to delete a mail message saved in the Save box while it is being edited.

“Enter correct Network Security Code”

- This is displayed when an incorrect network security code was input for a function which requires network security code entry. Enter the correct network security code. → p.108

“Error in image Does not work correctly”

- This is displayed when a Flash movie cannot be played due to an error found in the data.

“Error Register forwarding number”

- This message appears when you have subscribed to the Call Forwarding service and attempt to forward an incoming call by selecting “Call Forwarding” from the function menu without setting the forwarding number. → p.310

“External IC card not found”

- This is displayed when the IC card authentication function was used for user authentication, but authentication timed out and failed. → p.118

“Failed to Copy all”

- Copying could not be complete, for some reason. Replace with a different microSD card and try to copy again.

“Failed to Copy this”

- Copying could not be completed, for some reason. Replace with a different microSD card and try to copy again.

“For security, the i-αppli standby screen was canceled”**“Closed due to security error”**

- This is displayed when an i-αppli or i-αppli standby screen (including i-αppli DX) was closed because you attempted to perform an unauthorized operation. → pp.199, 209

“Format microSD for your phone”

- There is an error such as a microSD memory card that has not been initialized. Reformat the microSD memory card. → p.251

“Input error (205)”

- This is displayed after you input and send data from a site of Internet homepage. Press  to cancel the input text or settings (The set or input content has been sent, so this operation does not cancel the transmission).

“Insert the FOMA card (UIM)”

- This is displayed when the UIM is not inserted correctly, or could be broken. Check that the FOMA card is inserted correctly. → p.40

“Interrupted because maximum number of frames exceeded”

- The webpage cannot be displayed because the frame count exceeds the maximum that can be displayed on Full Browser or pixel browser.

“Invalid address”

- The address contains a “.” and is invalid. Delete “.”.
- Mail cannot be replied to because the address of the received mail exceeds 50 single-byte characters.
- SMS cannot be sent because the address includes characters other than numerals, “#” and “*”. Delete characters and spaces other than numerals, “#” and “*”.

“Invalid URL”

- This is displayed when you entered a URL using “Enter URL” or “Home URL”, but it began with something other than “http://” or “https://”, or you selected OK without any input. Enter the URL again. → pp.151, 157, 220

“Is the ToruCa automatic reading function in a mobile phone used through the reader/writer?”

- This is displayed if you swiped the FeliCa mark over a reader with “Auto reading setting” set to “OFF”. Select “YES” to use the automatic reading function. → p.216

“Limited Unable to view”

- Cannot view limited broadcast.

“Maximum size exceeded. Cannot receive (452)”

- This is displayed when data being received cannot be received because it exceeds the maximum size.

“Memory full Cannot move”

- This is displayed when you try to move data out of a secret folder but the destination folder is full. Delete data from the destination folder, then move the data again. → p.112

“Memory No. XXXX cannot rewrite”

- This is displayed when you are not in Secret mode or Secret data only mode, but you try to register the same phone number as a secret data memory number in the phonebook. → p.111

“Memory shortage Quit”

- The process is interrupted due to memory shortage. When you are composing an i-mode mail, the number of tasks running and the combination of characters may make it impossible to input as many as 5,000 double-byte characters.

“Memory shortage Return to i-mode menu”

- The process is interrupted due to memory shortage. Press  to return to the i-mode menu.

“Memory shortage”

- This is displayed when the software cannot be launched due to memory shortage.
- Operation is interrupted due to memory shortage. If this message often appears, reboot handset.

“Message too long to add header & signature”

- This is displayed when you are forwarding i-mode mail, but it was not possible to automatically paste the header/signature because they would cause the character count to exceed the limit of 5,000 double-byte characters.

“Message too long to add header”

- This is displayed when the character count of the text and header in total exceeds 5,000 double-byte characters and the header cannot be added.

“Message too long to add signature”

- The signature cannot be pasted because the total of main text and signature would exceed 5,000 double-byte characters.

“No contract for this service”

- The i-mode service is not available because you have not subscribed to the service. A separate subscription is required to use the service.
- If you had started using the FOMA terminal before you subscribed to i-mode, turn the FOMA terminal off and then turn it back on.

“No data”

- This is displayed if there is no phonebook entry that matches the search conditions when you perform Phonebook search.

“No microSD inserted”

- The microSD memory card is not inserted correctly, or may be broken. Check that the microSD memory card is correctly inserted into the FOMA terminal. → p.244

“No more functions can be started”

- Close another function before continuing the operation.

“No requested data Delete this shortcut icon?”

- This is displayed when you select the shortcut icon for data that has been deleted and attempt to start it.

“No requested software”

- It is displayed when an i-appli is started from mail, Send Ir data function, Barcode reader or IC card, and the relevant software is absent.

“No response (408)”

- There was no response from the site, and communication was cut off. Retry connection.

“No Switch”

- This is displayed when you cannot switch to a videophone call during a voice call because the other party is establishing a packet communication (including i-mode). Check the other party's status and retry. → p.53

“No User Certificate. Continue?”

- User Certificate has not been downloaded. It may be possible to display the site by selecting “YES”, but for some sites it may be impossible to continue. → p.159

“No “i-appli To” setting”

- This is displayed when you attempted to start software from a site, mail, Send Ir data, barcode reader, IC card or ToruCa, but the software could not start because the specified software has no association permission. → p.207

“Not correspond contents”

- The information acquired by the bar code reader includes content not supported by this FOMA terminal, so it cannot be recognized.

“Omakase lock is engaged”

- Omakase lock is set. While Omakase Lock is set, all key operations are locked except receiving a voice call/ videophone call and turning the power on/off. → p.110

“Other function active Cannot start”**“Other function active Cannot operate”**

- This is displayed when you attempt an unavailable operation when another function is running.

“Out of service area”

- This is displayed when you attempt to use an i-mode service outside the service area, or where the radio waves do not reach. Move to a place where “” is displayed, then use the i-mode service. → p.46

“Page is not found (404)”

- The site is not found. It may not exist.

“Password is not correct (401)”

- This is displayed when the authentication did not go through on the “Authentication” or “Re-authentication” screen. Select “YES” to retry authentication.

“Please wait (packet)”

- The packet communication device may be malfunctioning. Otherwise, the packet communication network may be congested. Retry later.

“Please wait”

- The voice line or packet communication device may be malfunctioning. Otherwise, the voice line/packet communication network may be congested. Attempt to use a voice call, videophone call or i-mode later. You can still make an emergency call (110, 119 and 118). However, you may not be connected depending on the condition.

“Preparing Cannot record”

- Cannot record immediately after recording is finished. Retry later.

“Receiving failed Channel information cannot display”

- This is displayed when you display the channel list screen for the first time after purchase or when you attempt to display the channel list screen after resetting the i-Channel, changing the i-Channel host URL, initializing the FOMA terminal or exchanging the FOMA card (UIM), and then if i-Channel information cannot be obtained. Move to a location where “” is displayed, then display the channel list screen again. → p.163

“Reply period has expired”

- This is displayed when you select and attempt to run the shortcut icon for an i-motion which has finished its play duration or play time limit.

“Root certificate has expired Do you connect?”

- This is displayed when an SSL server certificate out of the validity period has been received. Select “YES” to connect. Otherwise, select “NO”.
- This is displayed when there was a request for a client certificate during connection to site of Internet page that uses SSL communication. → p.148

“Root certificate is not valid”

- This message appears when you receive an SSL/TLS certificate with the “Certificate” set to “Invalid”. Check the contents of the certificate, set the certificate to valid and reconnect. → p.158

“Root certificate is not valid”

- This is displayed when a certificate is received that is rendered invalid by Certificate settings. Check the content of the certificate, then set it as valid before trying to reconnect. → p.158

“Service is used by the previous software Unable to download Delete a service?”**“Service is used by the previous software Unable to move Delete a service?”****“Service is used by the previous software Unable to update Delete a service?”**

- When the same service has been already downloaded, you cannot download, upgrade or move new service from a microSD memory card unless you delete the existing service. If you select “YES”, the service subject to deletion is displayed. Delete the previously registered service.

“Service space is full. Tracks for overwritten services can no longer be played. Overwrite?”

- This is displayed if a limit has been exceeded on the number of music services which can be registered (member services). Select “YES” to overwrite service with the oldest playback time limit. Music downloaded from the overwritten service can no longer be played.

“Size of this page is not supported”

- The size of the data downloaded from a website (via i-mode, Full Browser or pixel browser) or Internet webpage exceeds the maximum of one page. The download is interrupted, and only the downloaded data is displayed.
- This message appears when the limit is exceeded while downloading a melody, download dictionary or Chara-den character.

“Software is stopped because of error”

- This is displayed when software is running but suffers an error that prevents it from functioning further.

“Some addresses are invalid”

- This is displayed when you attempt to reply to two or more addresses but not all addresses are valid.

“Some attached file will be deleted”

- A file is attached to the i-mode mail you are going to forward that is prohibited from being attached to mail or output from the FOMA terminal. Press  to delete the file that is prohibited from being attached to mail or output from the FOMA terminal.

“Some mail not sent (561)”

- Mail could not be sent correctly to some recipients.

“SSL session cannot be established”

- This is displayed when it was not possible to connect to a site or Internet page that uses SSL communication. Retry connection.

“SSL session failed”

- This is displayed when an authentication error occurred during SSL communication, causing interruption.

“SSL/TLS session failed”

- This message appears when an SSL communication is interrupted due to an error occurring during authentication for an SSL/TLS connection.

“Syntax error”**“Syntax error (XXX)”**

- The received data contains an error and cannot be displayed. The received data is discarded. A number indicating the contents of an error may appear in “XXX”.

“The number of i-appli communications is large. Continue communication?”

- This is displayed when the number of communications when using an i-appli becomes very large within a certain period. Select “Yes” to carry on i-appli communication, or “No” to stop communication. Select “Terminate i-appli” to stop using the i-appli.

“The PIN1 code is locked”

- When the PIN1 code is locked, this message is displayed when the power is switched on. Press  to display the input screen for the PIN lock release code, then enter the PIN lock release code correctly to unlock. → p.108

“The PIN1 lock release code is locked”

- This is displayed when you turn on the power and attempt a UIM-related operation while the PUK code is locked. Contact the DoCoMo service counter. → p.108

“The playback period has expired. Delete?”

- This is displayed when you attempt to play an i-motion or Chaku-Uta-Full[®] for which the playback period has expired. Select “YES” to delete.

“The relevant software has been deleted. Check inside the folder”

- The software cannot be launched because the mail-linked i-appli corresponding to the selected mail folder is deleted. Select a message contained in the folder from the function menu. → p.183

“This certificate is not valid for this URL Do you connect?”

- This is displayed when the CN (name) of an SSL certificate does not match. Select “YES” to connect. Otherwise, select “NO”.

“This data is not supported by this phone”

- This is displayed when an i-motion could not be acquired due to incompatible non-i-motion data.

“This data may not be replayed”

- This is displayed when the format of the acquired i-motion is not MP4 (Mobile MP4).

“This i-motion has reached the limit of plays”

- This is displayed when you select and attempt to run the shortcut icon for an i-motion which has finished its number of plays.

“This site is not certified. Do you connect?”

- This is displayed when an unsupported SSL certificate is received. Select “YES” to connect. Otherwise, select “NO”.

“This site may not be certified. Do you connect?”

- This is displayed when an SSL server certificate is received that has expired, or has not reached its period of validity. Select “YES” to connect. Otherwise, select “NO”.
- This is displayed when you try to connect to a site or Internet page that uses SSL communication, if you have not made the “Set time” setting. Make the “Set time” setting. → p.47

“This software contains an error”**“This software contains an error Unable to download”****“This software contains an error Unable to move”****“This software contains an error Unable to update”**

- This is displayed when the software cannot be downloaded, updated or moved from a microSD memory card because its data is inaccurate.

“This software is not supported by this phone”

- This is displayed when the acquired software cannot be downloaded or moved from a microSD memory card because it is not compatible with this FOMA terminal.

“This UIM cannot be recognized”

- This is displayed when a UIM that cannot be used in this FOMA terminal may have been inserted. Check that the right FOMA card (UIM) is inserted. → p.40

“Too much data was entered”

- Too many characters are entered, and the data cannot be sent. Reduce the number of characters before trying to resend. → p.149

“Transmitting the manufacturer numbers of the mobile phone/UIM”

- This may be displayed during viewing of an Internet page or other site. Select “YES” to send your mobile phone manufacturer number. Otherwise, select “NO”. → p.147

“Unable to connect within the set time”

- Accessing a site or sending a message was interrupted because the time, which is set in “Set connection timeout”, has elapsed. Retry later. → p.157

“Unable to obtain data due to replay restriction data error”

- The playback period of playback limit for a partially-acquired Chaku-Uta-Full® has expired, so the remaining data cannot be acquired. The partially saved data will be deleted.

“Unable to receive”

- This is displayed when you attempt to obtain data and a data error or communication error occurs.

“Unable to retrieve the requested URL (504)”

- Connection to the site failed for some reason. Retry connection.

“Unable to support this card”

- The FOMA terminal does not support this microSD memory card. Use a compatible microSD memory card. → p.243

“Upper limit has been exceeded. Connection failed”

- The upper limit set for a Limit billing plan (Type Limit and Family Wide Limit) is exceeded.

“URL address changed (301)”

- The URL has changed because the site has been relocated. If the URL was registered as a bookmark, shortcut icon or home URL, re-register it.
→ pp.100, 152, 157, 223

“URL is too long to register”

- The URL exceeds 256 single-byte characters, so the bookmark or URL cannot be registered.

“Usage is currently restricted Try again later”

- This is displayed if an extremely high volume of data communication occurred within a certain period while using a flat-rate i-mode packet service. Connection may become impossible for a period, so try to use i-mode again later.

“User Certificate has expired. Continue?”

- The site requested a User Certificate, but the certificate has expired. It may be possible to display the site by selecting “YES”, but you are advised to download a new User Certificate. → p.159

“Wrong security code”**“The security code has 4-8 digits”**

- This is displayed when an incorrect security code was input for a function which requires security code entry. Enter the correct security code. → p.108

“You are advised to replace the microSD or run checkdisk”

- Run checkdisk on the microSD memory card. → p.247

“You have used the allowable number of plays. Delete?”

- This is displayed when you attempt to play an i-motion or Chaku-Uta-Full® which has finished its number of plays. Select “YES” to delete.

“Your certificate is requested Send your certificate?”

- The site has requested a User Certificate. Select “YES” to send the User Certificate or “No” to avoid sending it.

““●▲■.ne.jp”宛のメールが混み合っているため、送信できません (555) Unable to send.**“●▲■.ne.jp” is not available temporarily.”*****Domain name indication differs according to the recipient.**

- The telephone lines are down or extremely busy. Please try again later.

Warranty and After-Sales Service

Warranty

- Make sure that the warranty card is included with your FOMA terminal at the time of purchase. Check the contents, the information about "the shop or date of purchase", etc. and keep the card in a safe place. If the card does not contain necessary information, immediately contact the shop and request them to fill in the card. The warranty period is one year from the date of purchase.
- The whole or part of the product, including its accessories, is subject to improvement without notice.
- The stored data such as phonebook entries may be altered or lost through the damage, repair or improper use of the FOMA terminal. It is recommended to take notes of the stored data such as phonebook entries just in case. Repairing the FOMA terminal cannot transfer most of the data downloaded via i-mode or i-appli, complying with the copyright law.
 - * With this FOMA terminal, you can save the data such as the phonebook, data used with i-motion or i-appli to the microSD memory card.
 - * With this FOMA terminal, you can keep the data such as the phonebook at the Data Security Center by using the Data Security Service (a pay service you need subscription).
 - * If you have a PC, you can transfer and save the data such as phonebook entries to your PC by using the DoCoMo keitai datalink (p.326) and the FOMA USB Cable with Charge Function 01/02 (Optional) or the FOMA USB Cable (optional).

After-sales service

● If you have problems with your FOMA terminal

Before having your FOMA terminal repaired, see the "Malfunction Checklist" in this manual.
If you still have problems, call at the technical inquiries number described on the back of the manual.

● If, after contacting DoCoMo, you are informed that your FOMA terminal is in need of repairs

Take your FOMA terminal to a designated repair shop. The repair shop is only open during business hours. Remember to take your warranty card with you.

■ During the warranty period

- The FOMA terminal will be repaired free of charge in accordance with our written warranty policy.
- Make sure to take the warranty card with you when having your FOMA terminal repaired. Even during the warranty period, a charge will be made for the repair if you cannot show the warranty card or if the malfunction or damage has resulted from improper use.
- Even during the warranty period, a charge will be made for the repair if the malfunction has resulted from the use of devices or consumables that are not specified by NTT DoCoMo.
- A charge will be made for repairs in the event of damage to the LCD screen, connectors and similar components after purchase.

■ The FOMA terminal may not be able to be repaired

The FOMA terminal may be unable to be repaired if the water reaction is found on the seal, if corrosion is found to result from water exposure, condensation or perspiration, or if the internal board is damaged or deformed. Even if the FOMA terminal can be repaired, a charge will be made as the repair is not under warranty.

■ After the warranty period has expired

You can request to have your FOMA terminal repaired, although a charge will be made for the repair.

■ Stock period of parts

Replacement parts (required for maintaining the functionality of the FOMA terminal) will be kept in stock basically for minimum of 6 years following the termination of production. However, the FOMA terminal may not be able to be repaired due to the lack of parts depending on the damaged parts. The repair may still be able to be performed even after the stock period has expired. Call at the technical inquiries number described on the back of the manual.

■ Important


- Do not attempt to adapt the FOMA terminal or its accessories by yourself.
 - Doing so may cause fire, injury or malfunction.
 - Repairs to modified devices will be accepted on the condition that the customer agrees to the said modifications being restored to their original condition. You may be rejected depending on the modification.
The following may be regarded as modifications:
 - Labels etc. affixed to the screen or keys.
 - Decorations to the FOMA terminal involving the use of adhesives.
 - Replacement of the exterior etc. of the terminal with non-DoCoMo components.
 - Even during the warranty period, a charge will be made for the repair if the malfunction or damage has resulted from adaptation.
- Do not peel off the model name seal attached to the FOMA terminal.
The model name seal plays the part of the certificate verifying that the FOMA terminal complies with the technical standard. If the seal cannot be confirmed because it has been peeled off or replaced, the conformity to the technical standard cannot be judged, and then the repair may be unable to be accepted.
- The settings of the functions or the information about total call time may be cleared (reset) due to the damage, repair or improper use of the FOMA terminal. In this case, specify the settings again.
- Magnetic components are used for the following part of the FOMA terminal. A cash card (ATM card, bank card), etc. which is easily affected by magnetism, may become unusable if it is kept close to the components:
Mouthpiece
- If your FOMA terminal gets wet or moist, immediately turn it off, remove the battery pack, and take the FOMA terminal to the repair shop as soon as possible. Note that the FOMA terminal may be unable to be repaired depending on the condition.

Memory dial (phonebook function) and downloaded information

- It is your responsibility to keep a separate record of all data stored on your FOMA terminal. NTT DoCoMo disclaims any responsibility for alteration or loss of data.
- The data you created, imported or downloaded may be modified or lost when you change the mobile phone model or send the FOMA terminal to repair. NTT DoCoMo accepts no liability whatsoever for any modification to or loss of such data. NTT DoCoMo may send you a replacement of your FOMA terminal, instead of renovation. The data which contains the images and ring tones downloaded to the FOMA terminal, and the user created data are transferred to the replacement only when the FOMA terminal is repaired (some contents can not be transferred. The data may not be transferred depending on the damage).
* It may take time to transfer the data or the data may not be transferred depending on the amount of the data stored on the FOMA terminal.

i-mode Malfunction Check Site

You can check if sending/receiving mails, downloading images/melodies or other operations are normally performed on the FOMA terminal by yourself.

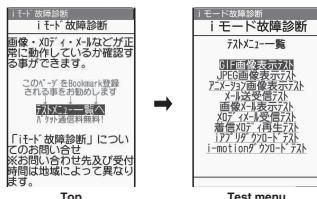

- Connecting to “i-mode Malfunction Check Site” (Only in Japanese)

- **[ch]**▶**[iMenu]**▶**[お知らせ]**▶**[サービス・機能]**▶**[iモード]**▶**[iモード故障診断]**



QR code for connecting to the site

- Packet communication charge is not charged for the i-mode malfunction check site.
 - * Charges apply when accessing from overseas.
- Test items vary depending on the FOMA terminal models. Also, the test items are subject to change.
- To check the operation with each test item, read the notes on the site carefully before performing test.
- When connecting to the i-mode malfunction check site or testing the mail sending, information specific to your FOMA terminal (model, mail address, etc.) is automatically sent to the server (i-mode malfunction check server). The information sent to DoCoMo is not used for any other purpose than i-mode malfunction checking.
- When there seems to be a malfunction as a result of the checking, contact the inquiries number provided on the back of this manual.

Updating Software

<Software Update>

Check whether it is necessary to update software on the FOMA terminal. Download and update the software via packet communication if necessary.

You will be notified of the update in the DoCoMo website or in “お知らせ” (News) of iMenu.

- A charge will not be made for the packet communication to update the software.
- There are 3 ways to update: “Auto-update”, “Now update” and “Reserved update”.
 - Auto-update: The new software is downloaded automatically and overwritten at the preset time.
 - Now update: Updates immediately.
 - Reserved update: Updates automatically on the date and time you specified.
- You can update the software if the i-mode host is set as the user defined host.
- Updating the software (downloading and installing) may take some time.
- When you update the software, an SSL connection is established with the server (the software update server managed by NTT DoCoMo). Validate the certificate beforehand (default: Valid. Setting procedure → p.158).
- Before updating the software, charge the battery to the full.

- It is recommended that you update the software staying in a place where the reception is good (three bars for the antenna icon).
 - * If the reception becomes poor and then the download is interrupted, try to update again in a place where the reception is good.
- Updating the software with the "PIN1 code entry set" set to "ON" displays the PIN1 code entry screen in the automatic restart after installing the software. You cannot make or receive a call or use other communication functions if you do not enter the correct PIN1 code.
- You cannot download the update software:
 - When the FOMA card (UIM) is not inserted
 - When PIN lock is set
 - No date and clock setting
 - When the Self mode is set
 - When packet dialing is restricted
 - During 64K data communication
 - The FOMA card (UIM) is invalid
 - When PIN Unlock Code (PUK Code) is locked
 - When Omakase Lock is set
 - When "Error" is displayed
 - While using mova terminal with Dual Network service
 - During international roaming

When the reservation time comes while the other function is used, downloading starts after finishing the function (cannot start depending on functions)
- You cannot rewrite the updated software:
 - When Omakase Lock is set
 - While other functions are running

If the auto-update rewriting fails, rewriting again at the Set auto-update time (next day or one week later).
- You cannot make or receive calls or use communication or other functions while updating software. However, you can receive voice calls while downloading.
- If the software has already been updated, "No update is needed Please continue to use as before" is displayed when you check for new software updates.
- After updating the software, the displayed i-mode Center storage status icon disappears. Also, if the receive option is set to "ON" and mail is received while updating the software, the mail notification screen may not be displayed after the software has been updated.
- When you update the software, information specific to your FOMA terminal (model, manufacturer number, etc.) is automatically sent to the server (the server for software updates managed by NTT DoCoMo). The information sent to NTT DoCoMo is not used for any other purpose than updating the software.
- If the software download fails, "Rewrite failed" is displayed and you cannot operate the FOMA terminal. If this happens, take your FOMA terminal to a designated repair shop.

NOTE

- Do not remove the battery pack while updating the software. Doing so may cause the update to fail.
- It is possible to perform software updates while keeping your Phonebook entries, camera images, downloaded data and other data saved on the FOMA terminal intact. However, note that in some cases data cannot be protected depending on the condition of your FOMA terminal (malfunction, damage, water exposure, etc.). It is recommended that you back up important data. However, note that some data such as downloaded data may not be able to be backed up.
- In case of Now update or Reserved update, when the software update is completed without operation for confirmation, you will see the shortcut icon  (Update complete) on the standby screen. Select  and enter the security code to see the detail results of the update.

The new software is downloaded automatically and rewritten at the preset time. When rewriting is possible,  (the rewrite warning icon) is displayed on the standby screen. You can check the time of the update and change the time, or perform immediate rewrite.

- The default setting is "Auto-update" (date: unspecified, time: 03:00).

1 MENU ▶ "Settings" ▶ "Other settings" ▶ "Software Update" ▶ Enter your security code

2 "Set auto-update" ▶ "Auto-update" ▶  (Set)

The new software is automatically downloaded, and  (the rewrite warning icon) is displayed on the standby screen.

■ **To change the date and time for updates**

▶ Select and set "Date" or "Time" ▶  (Set)

■ **To set for notification of updates only**

▶ Select "Only notification" ▶  (Set)

If a software update is necessary,  (the update notification icon) is displayed on the standby screen.

■ **To leave auto-update set to off**

▶ Select "Disable" ▶  (Set) ▶ "Yes"

3 On the standby screen ▶  ▶ Select "OK"

4 "OK"

Updating begins at the scheduled time. → p.378



■ **To change the time of the update**

▶ Select and set "Change time" ▶  (Set)

■ **To perform the software update immediately**

▶ "Rewrite Now" ▶ Enter your security code

Proceed to step 2 in "Updating software immediately" (p.377).

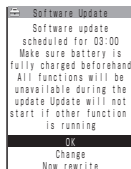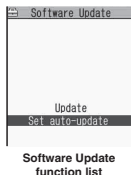

NOTE

-  (Update notification icon) appears when there is a notification from DoCoMo or if update is failed.

Running Software Update

To run Software update, you can select the  (Update notification icon) that appears on the standby screen or from the menu screen.

● **Select  (Update notification icon) and run Software update**


1 On the standby screen ▶  ▶ select "OK"

2 "YES"

■ **To delete without running Software update**

▶ "NO" ▶ "YES"

3 Enter your security code

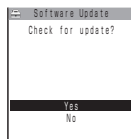

4 Check whether software update is required

Now it is required to send the FOMA terminal-specific information to the server.


5 The check result appears

■ When “Update is needed” appears

▶ Select “Now update” or “Reserve”

Select “Now update” to update the software immediately. → p.377

Select “Reserve” to update on the set time. → p.378

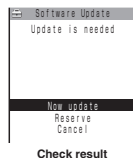

■ When “No update is needed” appears

▶ “OK”

Continue using the FOMA terminal as there is no need to update the software.



● Running Software Update from the menu

1 “Settings”▶“Other settings”▶“Software Update”▶Enter your security code

The Software update function list screen appears.

2 “Update”


Proceed to step 4 (p.377) in “Select and run Software update”.

<Now update>

1 Check result screen (p.377)▶“Now update”▶Select “OK” when “Start download Notice” is displayed

Downloading starts immediately.

Download starts after a while, even if you do not select “OK”.

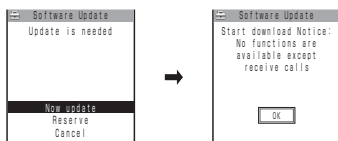

2 When the download ends and “Starting to rewrite” appears, select “OK”

The software starts rewriting.

Rewrite starts after a while, even if you do not select “OK”. It may take time to start rewriting.




All keys are disabled during software rewriting. You cannot stop rewriting either.

When the software is rewritten, the FOMA terminal will reload automatically.
After reloading, the message “Software update is complete” is displayed, select “OK” (not display for the Auto-update). Software update is completed.



NOTE

- If you stop downloading before the download is completed, the data that has been downloaded until then is deleted.
 - Even if the power is switched off during rewriting, it resumes when power is restored.
 - Once you start downloading, the update starts automatically with no need of selecting any item such as menu.
 - The screen on the right may be displayed if the server is busy.
- In this case, select “Reserve” to perform the reserved update.

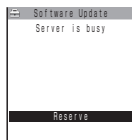

Selecting the reservation date and time to update software

<Reserved update>

If it takes a long time to download or when the server is busy, you can select the time to startup Software update by communicating with the server beforehand.

<Example: Reserving at 7:30 AM on April 19 (Saturday)>

1 Check result screen (p.377) ▶ “Reserve” ▶ Select the date and time

■ If there is no date and time you do want to reserve

 
▶ “Others” → p.379




2 Check the selected date and time ▶ “YES” ▶ “OK”

The software update is reserved.

■ To change the date and/or time
▶ “NO”



● At the scheduled time

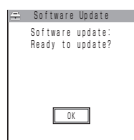

The screen on the left appears and the FOMA terminal starts the software update automatically, 5 seconds later. Charge the battery fully, put the FOMA terminal at a location with strong radio wave reception and display the standby screen before the reservation time. The rest of operation is same as “Updating software immediately <Now update>” (p.377).

NOTE

- The reservation time for the software update will be based on the server's time.
- When the reservation time for the software update is the same as the alarm notification time, priority is assigned to the software update.
- When the reservation time comes while the other function is used, updating starts after finishing the function.
- If you perform "Initialize" after the reservation procedure is complete, the software update does not start at the scheduled time. Reschedule the time for update.

● If you select "Others"

You can select the desired date and period of time after communicating with the server if you select "Others" at step 1 in p.378.


1 Select a desired date



In the date selection display, you will see the update availability represented as shown below:

- : Available
- △ : Almost full
- None : Full

2 Select an hour

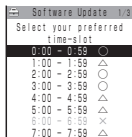


In the time selection display, you will see the update availability represented as shown below:

- : Available
- △ : Almost full
- × : Full

Select the period of time to display the candidates for the reservation time by communicating with the server again.

 3 Confirm the software update date and time




If you check the selected date and time and select "YES", you will communicate with the server again.
The software update is reserved.

● Checking/Changing/Canceling the reservation date and time

<Example: Canceling the reservation after checking it>

1 MENU ▶ "Settings" ▶ "Other settings" ▶ "Software Update" ▶ Enter your security code ▶ "Update"

2 "Cancel"

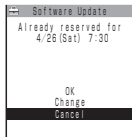

■ To accept the reservation date and time

▶ "OK"

■ To change the reservation date and time

▶ "Change"

Once information specific to your FOMA terminal has been sent to the server, follow the procedure used when "Others" is selected. → p.379

3 When you see the message “Cancel this reservation?”, select “YES”

At this point, information specific to your FOMA terminal is sent to the server.

NTT DoCoMo will never disclose or forward your FOMA terminal information (model and manufacturer number) to a third party.

After the message “The reservation is canceled” is displayed, select “OK”. The reservation is canceled.



Protecting the FOMA Terminal from Harmful Data

<Scanning function>

First, update the pattern data for the latest data.

When the FOMA terminal is downloading external files or programs from sites or i-mode mail, this function scans the data and deletes any data or cancels program activation where the data or the program could cause a fault.

- Pattern data is used for the check. Update the pattern data when it is upgraded because a problem has been detected. → p.381
- The Scanning function prevents the data that causes some fault from invading your FOMA terminal when viewing sites and websites or receiving mail. If the pattern data that fixes the error is not installed on your FOMA terminal or if the pattern data that fixes the fault does not exist, the Scanning function cannot prevent the error from occurring.
- The pattern data varies depending on the model of the FOMA terminal. As a matter of convenience, NTT DoCoMo may discontinue to distribute the pattern data for the model if three years have passed since it is first released.
- Set the date (year, month and day) correctly on the FOMA terminal.
- When the FOMA terminal is updating automatically or when you update the pattern data, information specific to your FOMA terminal (model, manufacturer number, etc.) is automatically sent to the server (scanning function server managed by NTT DoCoMo). NTT DoCoMo will not use that information for any purpose other than scanning function.
- Update of pattern data will be interrupted if a voice call is received or the FOMA terminal moves out of the service area while updating the pattern data.

Setting the scanning function

<Set scan>

When the Scanning function is set to “ON”, data and programs are automatically checked when they are executed.

When the message scan is set to “ON”, the message body of SMS is automatically checked.

1 [MENU] ▶ “Settings” ▶ “Lock/Security” ▶ “Scanning function”

The “Scanning function” screen appears.

2 “Set scan” ▶ “Scan” or “Message scan” ▶ “ON”

- If a message appears asking whether to change the settings
▶ “YES”



* If you enable the Scanning function and it detects potentially harmful data, the event is displayed using one of 5 warning levels. → p.381

NOTE

- The Voice mail notification is not checked even when “Message scan” is set to “ON”.

1 Scanning function screen (p.380) ▶ “Update” ▶ “YES” ▶ “YES”



* If no pattern data update is required, the “Pattern definitions are up-to-date” message appears. Continue using your current pattern data.

NOTE


- You cannot update the pattern data when the update information is notified from the network, when other function is activated, or during i-mode communication, packet communication or international roaming.

Updating pattern data automatically

1 Scanning function screen (p.380) ▶ “Set auto-update” ▶ “ON” ▶ “YES” ▶ “YES”

The scanning results display

■ Displaying problems detected by scanning

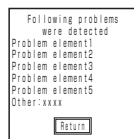

A list of up to 5 problems detected by the Scanning function is displayed, starting with the highest-level problem. If 6 or more problems were detected, the names of the 6th and subsequent problems are omitted.

The rest of the problem elements (sixth and later), of which names are omitted, are displayed as follows:

1 to 9998: The remaining count is displayed as it is.

9999 or more: “Other:9999” is displayed regardless of the count.

■ Results of scanning

Warning level 0	Warning level 1	Warning level 2	Warning level 3	Warning level 4
Operation may not run properly	Operation may not run properly Cancel operation?	Operation may not run properly Canceling operation	Operation may not run properly Delete data?	Operation may not run properly Deleting data
■ (Set)···Continues the operation.	■ (Cancel)···Stops and cancels the operation. ■ (Continue)···Continues the operation.	■ (Set)···Stops and cancels the operation.	■ (Delete)···Deletes the data and cancels the operation. ■ (Back)···Stops and cancels the operation.	■ (Set)···Deletes the data and cancels the operation.

NOTE

- A message other than the above may appear depending on the condition.

Checking the pattern data version

1 Scanning function screen (p.380) ▶ “Version”

Specifications

■ Phone

Model name		FOMA S0705i	
Size		Height 105 mm × Width 49 mm × Thickness 15.2 mm (When folded)	
Weight		Approx. 100 g (Battery pack attached)	
Continuous standby time		Stationary: Approx. 580 hours In transit: Approx. 430 hours	
Continuous talk time		Voice call: Approx. 220 min. Videophone call: Approx. 100 min.	
Charging time		AC Adapter: Approx. 120 min. DC Adapter: Approx. 120 min.	
Color LCD	Type	Display: TFT 262,144 colors Sub display: Organic Electro-Luminescence (OEL) monochrome 2 tones	
	Size	Display: Approx. 2.8 inches Sub display: Approx. 1.1 inches	
	Pixels	Display: 102,480 pixels (240 × 427 dots) Sub display: 4,608 pixels (36 × 128 dots)	
Imaging device	Type	Front Camera: CMOS	Rear Camera: CMOS
	Size	Front Camera: 1/8 inches	Rear Camera: 1/4 inches
	Effective pixels	Front Camera: Approx. 33 mill. pixels	Rear Camera: Approx. 200 mill. pixels
Camera	Maximum recorded pixels	Front Camera: Approx. 31 mill. pixels	Rear Camera: Approx. 190 mill. pixels
	Digital zoom	Front Camera: Up to approx. 2.0 ×	Rear Camera: Up to approx. 4.6 ×
Record	Still image	Approx. 1,000 photos ^{*1}	
	Continuous mode	4 to 20 ^{*2}	
	Still image file type	JPEG	
	Movie record time	Save to Phone: Approx. 276 sec. ^{*3} Save to microSD memory card (64M bytes): Approx. 90 min. ^{*3}	
	Movie file type	MP4	
Music playback	Continuous playback time	i-motion	Approx. 930 min. ^{*4}
		Chaku-Uta-Full®	Approx. 1,300 min. ^{*4*5}
		Windows Media Audio (WMA) file	Approx. 1,400 min. ^{*5}
		Music&Video Channel	Approx. 1,500 min. (Audio) ^{*5} Approx. 350 min. (Movie)
Memory	Chaku-Uta® · Chaku-Uta-Full®	Approx. 70.0M bytes ^{*6*7}	

*1: Select size=SubQCIF (128 × 96) Quality (Quality setting)=Fine (in case of File size=10KB)

*2: Varies depending on image size.

*3: Record time for 1 item under the following conditions.

<Phone>

Select size=SubQCIF (128 × 96) Quality setting=Normal File size=2MB

Movie type set=Normal

<microSD memory card (64M bytes)>

Select size=SubQCIF (128 × 96) Quality setting=Normal File size=Long time

Movie type set=Normal

*4: File type=AAC format

- *5: Background play supported
 *6: Available memories of Secret folder is up to 10M bytes.
 *7: Shared with images, i-motion and Screen memo

■ Battery pack

Product name	Battery Pack S003
Battery type	Lithium-ion
Nominal voltage	3.8V DC
Nominal size	770mAh

Number of Data that can be Stored/ Registered/Protected on the FOMA Terminal

Item		Store/Register	Protect
Phonebook		1,000 max. ^{*1}	—
Schedule	Schedule	500	—
	Holiday	100	—
	Anniversary	100	—
To Do list		100	—
Mail (SMS + i-mode)	Received mail	1,000 max. ^{*2*3*4}	500 max. ^{*2}
	Sent mail	500 max. ^{*2*3*4}	250 max. ^{*2}
	Draft mail	50 max. ^{*2}	—
Area Mail		100 max. ^{*2}	—
Template		45 max. ^{*2*5}	—
Message	MessageR	100 max. ^{*2}	50 max. ^{*2}
	MessageF	100 max. ^{*2}	50 max. ^{*2}
Bookmark	i-mode	100 ^{*6}	—
	Full Browser	100 ^{*6}	—
Screen memo		100 max. ^{*2}	50 max. ^{*2}
i-appli		200 max. ^{*2} (5 for mail-connected i-appli)	—
ToruCa		100 max. ^{*2}	—
Still image		1,000 max. ^{*2*4}	—
Movie/i-motion		100 max. ^{*2*6}	—
Chara-den		10 ^{*5}	—
Melody		200 max. ^{*2}	—
Kisekae Tool		100 max. ^{*2*5}	—
Music&Video Channel		30 max. ^{*2}	—
Music		100 max. ^{*2}	—

*1: Up to 50 phonebooks can be stored on the FOMA card (UIM).

*2: Actual storable, registerable or protectable counts may be decreased depending on the data size.

*3: Up to 20 more received or sent SMS messages can be additionally stored on the FOMA card (UIM).→p.254

*4: Up to 100 items can be additionally stored on the secret folder.

*5: Pre-installed data are included.

*6: Up to 10 items can be additionally stored or registered on the secret folder.

Specific Absorption Rate of Mobile Phones, etc.

★ Mobile Phone UMTS JP/EU

Specific Absorption Rate (SAR) of Mobile Phones

This model phone FOMA SO705i meets the MIC's^{*1} technical regulation for exposure to radio waves. The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)^{*2} averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP^{*3}. All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone FOMA SO705i is 0.811 W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the following websites:

World Health Organization (WHO): <http://www.who.int/peh-emf/>

ICNIRP: <http://www.icnirp.de/>

MIC: <http://www.tele.soumu.go.jp/e/ele/body/index.htm>

TELEC: http://www.telec.or.jp/ENG/Index_e.htm

NTT DoCoMo: <http://www.nttdocomo.co.jp/english/product/>

Sony Ericsson Mobile Communications Japan, Inc.: <http://www.SonyEricsson.co.jp/product/SAR/>
(only in Japanese)

Association of Radio Industries and Businesses: <http://www.arib-emf.org/index.html> (only in Japanese)

*1: Ministry of Internet Affairs and Communications

*2: The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

*3: International Commission on Non-ionizing Radiation Protection

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

This mobile phone model SO705i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User's Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission of Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone tested by Sony Ericsson for use at the ear is 0.63 W/kg (10g).

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.



These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.

Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- ☐ Always treat your product with care and keep it in a clean and dust-free place.
- ☐ Warning! May explode if disposed of in fire.
- ☐ Do not expose your product to liquid or moisture or humidity.
- ☐ Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +35°C (+95°F).
- ☐ Do not expose your product to open flames or lit tobacco products.



- ☐ Do not drop, throw or try to bend your product.
- ☐ Do not paint your product.
- ☐ Do not attempt to disassemble or modify your product.



- ☐ Do not close your product with an object inserted between keypad and display if you have a clamshell phone; this may damage your product.
- ☐ Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
- ☐ Do not use your product when in, or around aircraft, or areas showing the sign "turn off two-way radio."
- ☐ Do not use your product in an area where a potentially explosive atmosphere exists.
- ☐ Do not place your product or install wireless equipment in the area above an air bag in your car.
- ☐ Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.



KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.

Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug.

Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5°C (+41°F) and +35°C (+95°F).

Use only original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous.

Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

Personal medical devices

Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 22 cm (8.7 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your medical doctor for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions.

For the use of mobile phones in the vehicle, please follow instructions from vehicle manufacturers.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Efficient use

Hold your mobile phone as you would any other phone. Do not cover the hinge area when the phone is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Disposal of old electrical and electronic equipment



This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Disposing of the battery



Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

WARNING:

If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- ☐ Do not expose the memory card to moisture.
- ☐ Do not touch terminal connections with your hand or any metal object.
- ☐ Do not strike, bend, or drop the memory card.
- ☐ Do not attempt to disassemble or modify the memory card.
- ☐ Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.

- ☐ Do not press or bend the end of the memory card adapter with excessive force.
- ☐ Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- ☐ Check you have inserted the memory card correctly.
- ☐ Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- ☐ We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- ☐ Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product. To delete personal data, perform a master reset, remove the memory card or format the media memory. DELETION OF MATERIAL FROM THE PHONE AND MEDIA MEMORIES DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. DoCoMo/SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN IF A MASTER RESET AND A MEDIA MEMORY FORMAT HAS BEEN PERFORMED. If you are concerned about such potential disclosure retain your device or secure its permanent destruction.

Accessories

DoCoMo recommends use of DoCoMo's original accessories for safe and efficient use of its products. Use of third-party accessories may decrease performance or pose a risk to your health or safety.

LOUDNESS WARNING:

Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. DoCoMo does not test use of third-party audio accessories with this mobile phone. DoCoMo recommends using only DoCoMo original audio accessories.

Declaration of Conformity for SO705I

We,
Sony Ericsson Mobile Communications AB of
Nya Vattentorget
SE-221 88 Lund, Sweden
declare under our sole responsibility that our product

Sony Ericsson type AAG-3604021-BV

and in combination with FOMA global AC charger 01(MODEL:MAS-BH0008-A 002), to which this declaration relates is in conformity with the appropriate standards EN 301 908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 301 489-24:V1.3.1, EN 301 489-3:V1.4.1, EN 302 291-2:V1.1.1, and EN 60950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment Directive **1999/5/EC**

Lund, December 2007

CE 0682

Signature



Yukio Kubota, Head of Product Business Unit JAPAN

われわれは R&TTE 指令の要求事項を満たしています(1999/5/EC)

We fulfill the requirements of the R&TTE Directive (1999/5/EC)

Export Administration Regulations

This product and its accessories may be subject to the Japan Export Administration Regulations (the "Foreign Exchange and Foreign Trade Law" and its related regulations). When exporting this product and its accessories, take the required steps at your expense and under your responsibility. For more details, contact the Ministry of Economy, Trade and Industry (METI).

[Memo]

[Memo]

[Memo]

[Memo]

[Memo]

Index/Quick Manual

Index	396
Quick Manual	408



Index search

- This index has the function as an alphabetical list of contents. Not only can you find the words in this manual, but you can also the words that summarizes content of description. Try to search for another keyword if the words that wants to know is not collected.

<Example 1: To set the keypad lock to "ON">

Keypad light setting	96
Keypad lock	118
Keypad sound	90

Restriction	
Dial lock/Okakase Lock	109
IC card lock setting	217
Keypad lock	118

<Example 2: When you cannot answer a received call immediately>

Answer hold.	65
Answer setting.	63
Any key answer	63

Holding (during incoming call, talking)	65
Holiday (check)	283
Home URL (i-mode)	157

<Example 3: When the keyword is described by another term>

Initialize → Reset	
Intellectual property right.	20

Reset	
Auto reset total cost	290

- "Function menu" index comes after "Alphabetical/Numerical/Kana" index. When you search the item of function menu (p.38), use this index.

Alphabetical/Numerical/Kana

A

A mode (2in1)	316
AC adapter.	44
Accessories/Options	361
A-Continuous shooting.	133
Add bookmark	152
Adding a new word (Own dictionary)	305
Additional service (network services)	319
Address → Mail address	
Adjusting the volume	64
Earpiece volume.	64
i-appli sound.	199
Ring tone	64
Administrative right	323
After returning to Japan.	330
After-sales service.	372
Alarm notification	
Priority	286
Reconnection	61

Signal quality	91
Alarm notification actions	285, 291
Alarm setting	285
Alarm tone (pre-installed)	88
Alarm tone (stop)	286
Alarm (Timer)	280
Animation (create)	232
Animation (playback)	233
Anniversary (check)	283
Answer hold.	65
Answer setting	63
Any key answer	63
APN	323
Area Mail (Early warning)	191
Area Mail setting	192
Area Mail (Storage capacity)	383
AT Commands	325
Attach file	
Download selectively	176
Save	177
Send	170

Auto answer setting	295
Auto Decomail-picture (download)	155
Auto power ON/OFF	46
Auto receive (Mail/Message)	173
Auto redial as voice	71
Auto replay (i-motion)	162
Auto reset total cost	290
Auto save set (Movie)	136
Auto save set (Still image)	132
Auto timer	138
Auto-display setting	157
Auto-sort settings (Mail)	184
Auto-start set (i-appli)	207
Auto-start time (i-appli)	207
Auto-update (Software Update)	376
AV Phone To function	156
Available services overseas	328

B

B mode (2in1)	316
Background i-appli	199

Background play	276	Key operation	129	Download	155
Bar code reader	138	Notes on using	126	For videophone	70
Bar incoming when roam (Overseas)	333	Shooting settings	137	Guide to the Chara-den list	237
Basic channel (i-Channel)	163	When using the microSD memory card	127	Operation	238
Basic operation	35	Canceling operation	36	Shooting	239
Battery		CD-ROM for FOMA SO705i	325	Storage capacity	383
Attaching/removing the battery pack	42	Chaku-moji	58	What is Chara-den?	237
Battery pack life	43	Chaku-Uta-Full®		Chara-den setting	52
Charging the FOMA terminal	43	Acquire	268	Chara-den settings priority	77
Checking battery level	45	Move among Phone/microSD	250	Charge sound	90
Getting the best out of your battery pack	43	Play	269	Charge (setting the upper limit)	291
Low-voltage alarm	45	Pre-installed data	88	Charging the FOMA terminal	43
Power saver mode	96	Save	268	Check i-mode settings	157
Usage time	43	Chance capture	137	Check new messages	
Blocking noise (Noise reduction)	61	Change i-mode Password	151	Mail/Message	175
Bookmark	152	Change rcv. type (mail)	167	Set	189
Copy from microSD to Phone	249	Change security code	109	Check new SMS	194
Copy from Phone to microSD	248	Change size (Edit image)	233	Confirm Settings	
PIM data display	247	Change skin	275	Restrictions	121
Saving the attached file	177	Changing menu icon	97	Ring tone/Image	83
Send attach file	170	Changing the certificate host	160	Checking an address list	187
Storage capacity	383	Changing the main menu	34	Checking call times and charges	289
Brightness		Changing the Ring Tone	90	Checking the i-appli information	199
Camera	131	Changing window (Entering text		Checking the i-motion details	162
My picture	233	divided screen)	299	CHG camera-mode	131
Videophone	52	Channel list (i-Channel)	163	Choku-Den	84
Brightness (Edit image)	233	Chapter list	266	cid	323
C		Character		Clear learned (Character entry)	306
CA certificate	148	Changing the conversion range	301	Client certificate	148
Cable connection (USB)	260	Common phrases	303	Clock Alarm Tone set	91
Cache	149	Convert	301	Clock display	100
Calculator	291	Copy	304	Clock display setting (indicator display)	98
Calendar (standby screen)	95	Cut	304	Clock display (Indicator display)	29
Call acceptance (Restrictions)	120	Delete	303	Clock setting	47
Call charge (setting the upper limit)	291	Kuten code	305	Close-up mode	126
Call Forwarding	310	Line feed	302	CLR (CLR) key	36
Call forwarding (Restrictions)	120	Paste	305	Column search (Phonebook)	80
Call Forwarding(Int.)	334	Pict/Sym continuous entry	302	Common phrases (enter)	303
Call rejection (Restrictions)	120	Single-byte/Double-byte	302	Communication mode	251
Call setting w/o ID	122	Switching upper/lower case	302	Component names and functions	24
Call Waiting	309	Type/thickness/size	100	Composite image (4 images)	232
Caller ID Notification		Character assignment (5-touch/2-touch)	347	Continuous shooting	133
Basic setting	48	Character entry	297	Continuous standby time	43
Set for each call	48	Clear learned	306	Continuous talk time	43
186/184	48	Download dictionary setting	306	Convert readings to kanji	301
Caller ID Request	312	2-touch	306	Cookie settings	224
Caller ID req. (Int.)	334	5-touch	300	Copy	
Camera		Character entry (edit) screen	298	Character	304
Activate	126	Character input mode (5-touch/2-touch)	299	From microSD to Phone	249
Guide to the shooting screen	129	Character stamp (Edit image)	234	From Phone to microSD	248
How to use the camera	126	Chara-den		To the different folder in the microSD	250
		Display	237		

Copy to microSD	
Images, etc.	249
Phonebook, etc. (PIM data) ..	248
Copy to Phone	
Images, etc.	250
Phonebook, etc. (PIM data) ..	249
Copy to the FOMA terminal	
Images, etc.	250
Phonebook, etc. (PIM data) ..	249
Copyright	20
Correct backlight (Edit image) ..	233
Country code	328
Cut (Text)	304

D

Data Box	
Folder structure	226
Folder (create/delete/edit)	253
Data Communication	321
Data exchange (OBEX™ connection) ..	322
Data security serv.	123
Image	231
Mail	186
Phonebook	85
Datalink software→DoCoMo keitai datalink	
Date setting	47
DC adapter.	44
DCMXクレジットアプリ	205
Deco-mail	
Compose/send	168
Compose/send (Template)	169
Decomail-picture (download)	155
Decorate PI	167
Delete	
Bookmark	153
Character	303
Cookie (Full Browser)	224
Delete all bookmarks	152
Delete all images (own data) ..	253
Delete all mails (read/received/sent) ..	183
Delete all melodies (own data) ..	253
Delete all movies (own data) ..	253
i-appli	198
Image	230
Mail	185, 187
Melody	242
Message	191
Movie/i-motion	236
Music	270
Phonebook (detail screen)	82
Phonebook (list screen)	80
Received calls	58

Redial/Dialed calls	58
Screen memo	154
shortcut icon	102
ToruCa	216
Voice	289
Delete receiver	167
Description (Operation procedure) ..	37
Desktop holder	44
Dial lock	110
Dialed calls	56
Dictionary	292
Dictionary setting (Download dictionary) ..	306
Dictionary (download)	155
Display	
Backlight	96
Color pattern/background	97
Font	100
How to view the display	27
Shield view	96
Display design	97
Display during dialing/receiving calls ..	94
Display during dialing/receiving	
videophone calls	94
Display during mail/message checking ..	94
Display operator name (Overseas) ..	333
Display setting	71, 94
Display when the FOMA terminal is turned on ..	94
Display while receiving a call.	62
Displaying menu	97
Displaying SSL pages	148
Disp. call/receive No.	96
Disp. phonebook image	95
Disp. Software info (i-appli)	197
DNS	323
DoCoMo CA certificate	148
DoCoMo keitai datalink	326
Double-byte	302
Download	
Auto Decomail-picture	155
Chaku-Uta-Full®	268
Chara-den	155
Charged contents	154
Client certificate	159
Decomail-picture	155
Dictionary	155
i-appli	196
Image	154
i-melody	155
i-motion	161
Kisekai Tool	155
Template	155
ToruCa	155

Download dictionary setting	306
Downloading charged contents	154
Downloading remaining data	
Chaku-Uta-Full®	268
i-motion	235
Kisekai Tool	242
Downloading the program	265
DPOF setting	252
Driving mode→Public mode	
Dual mode (2in1)	316
Dual Network	312

E

Early warning "Area Mail"	191
Earphone/microphone with switch ..	294
Earpiece volume adjustment	64
Earthquake early warning	192
Easy search	4
Edit	
Draft mail	171
Image	233
Movie/i-motion	237
Phonebook	82
Edit file name	
Image	230
Melody	241
Movie/i-motion	235
Edit image	233
Edit title	
Bar code reader	139
Bookmark	153
Chara-den	238
DL dictionary	306
Image	230
Melody	241
microSD	248
Movie/i-motion	235
Original animation	232
Screen memo	154
Shortcut icon	102
Template	170
Edit (Mail)	186
English display	46
English Guidance	312
Entering a mail address from the	
address list	166
Entering a mail address from the	
phonebook	166
Entering numbers	36
Entering security code	36
Enter/add an address	166
Erase/play memo (voice/movie) ..	69

Error message list	365
Export administration regulations	389

Export administration regulations	389

F

Face marks list	356
Favorite channel (i-Channel)	163
FeliCa	212
FeliCa mark (F)	
Acquire ToruCa	214
IC card authentication	119
iC communication	259
Osaifu-Keitai	213
File attached mail	170
File restriction	230
File size	131
Filter function	
Mail	185
Message	191
To Do list	284
ToruCa	216
FirstPass setting	159
Flash movie	150
Folder lock	120
Folder (create/delete/edit)	
Bookmark	152
Data Box	253
Mail	183
microSD	253
FOMA card	
Add to phonebook	76
Functional differences	41
Insert/remove	40
Managing SMS	254
Managing the phonebook entry	254
Manufacturer number	147
Operational restriction function	40
Security code	108
Setting for replacing	41
FOMA通信環境確認アプリ	206
Font	100
Font size	
CHG input size	299
Font	100
Font size (i-mode)	157
Font size (Mail)	188
Phonebook (Big font/Standard font)	80
Ticker size setting (i-Channel)	164
Format (microSD)	251
Forward (Mail)	176
Forwarding image	261
Frame (Edit image)	234
Framed photography	134

Full Browser	219
How to view the screen	220
Operations on the screen	221
Full Browser settings	223
Function display	33
Function menu	38

G

Glossary for data communication	323
Go to location	151
GPRS network	328
Group search (Phonebook)	80
GSM network	328
Guide to the shooting screen (camera)	129
Gガイド番組表リモコン	204

H

Handling with care	18
Hands-free switch (videophone)	71
Hands-free (switch during a call)	56
Header/Signature	189
Headset sw to dial	295
Headset usage setting	91
High-speed Ir send (IrSS)	258
Holding (during incoming call, talking)	65
Holiday (check)	283
Home URL (i-mode)	157
Host selection (i-mode)	158
How to refer to this manual	2
How to use the function keys	33
How to view the indicator display	29
How to view the main menu	30
How to view the screen	
Full Browser	220
Music Player screen	273
Shooting screen	129
ToruCa display screen	215
Videophone	51
HSDPA	323

I

i-appli	195
Adjusting the volume	199
Auto-start set	207
Auto-start time	207
Checking the security error history	199
Delete	198
Download	196
Installed software	200
Launch (from a site/mail)	207
Storage capacity	383
Upgrade	209

i-appli info	
Launch/quit	197
Mail-connected i-appli	196
What is an i-appli?	196
i-appli stand-by screen	
End stand-by info	209
Release	209
Set	208
IC card authentic	118
IC card Illumination	99
IC card lock setting	217
iC communication	259
FeliCa mark (F)	259
Send/Receive all data	260
Send/receive one data	259
IC lock (power-off)	217
iC Transfer Service	212
iC trans. all	260
i-Channel setting	164
Icon description	
Display	27
i-appli	199
Image	149
Image/movie	228
Kisekai Tool	243
Mail detail screen	182
Mail folder list screen	181
Mail list screen	181
Melody	241
Message/R/F screens	190
Music	269
Music&Video Channel screen	265
Received calls/missed calls	57
Redial/Dialed calls	57
Ring tone/Image	83
Shooting menu	130
Shooting screen (camera)	129
Shortcut (paste)	100
Shortcut (providing information)	101
Text entry (edit) screen	298
Vibrator	90
Videophone screen	51
Icon operation	
Icons setting	103
shortcut icon	102
Icons setting	103
iD設定アプリ	205
Illumination	99
Illumination in talk	99
Illumination setting	
During calls	99
IC card	99

Receiving call/mail	99
Illumination (for missed call/new mail)	67
Image	
Copy from microSD to Phone	250
Copy from Phone to microSD	249
Delete	230
Display (microSD)	248
Display (Phone)	227
Download	154
Edit	233
Move	230
Save (from site/message)	154
Saving the attached file	177
Send attach file	170
Size	127
Storage capacity	383
Switching list display mode	228
Titles and file names	230
Image display in the picture list	36
Image priority	89
i-melody (download)	155
iMenu	146
i-mode host	158
i-mode info	
Displaying SSL pages	148
Image display	149
Jumping to previous/next pages	149
Operations for viewing sites	149
Scroll function	149
Start/exit	146
Viewing the iMenu screen	146
What is i-mode?	146
i-mode mail→mail	
i-mode malfunction check	374
i-mode menu	146
i-mode password	108
i-mode settings	157
i-mode settings (reset)	157
i-motion	
Automatic replay	162
Copy from microSD to Phone	250
Copy from Phone to microSD	249
Delete	236
Download	161
Edit	237
Folder (create/delete/edit)	253
Move	235
Move among Phone/microSD	250
Playback (microSD)	248
Playback (Phone)	234
Save (from site)	162
Saving the attached file	177

Send attach file	170
Storage capacity	383
Trimming (Edit i-motion)	237
What is i-motion?	161
Inbox	180
In-Call Function Selection	313
In-car Hands-free	61
Incoming call lamp priority	99
Incoming Call Mng	313
Indicator display (setting)	98
Info notice setting	68
Infrared data exchange	257
High-speed Ir send (IrSS)	258
Infrared data port	257
Send/Receive all data	258
Send/receive one data	258
Infrared remote control	261
Initial setting	47
Initialize	296
Initialize→Reset	
Intellectual property right	20
International Access Code	329
International calls	54
International ID Code	330
International roaming	328
Internet connection	151
Interval/number for shooting (continuous shooting)	134
Int'l dial assistance	55
ISP connection	158
i アプリバンキング	206
J	
JAN code	138
K	
Key operation	
Holding down	26
How to use the function keys	33
Key names and functions	24
Short cut key function	31
Key (Character assignment)	347
Keypad light setting	96
Keypad lock	118
Keypad sound	90
Kisekai Tool	
Download	155
Manage	242
Set	104
Storage capacity	383
拡大メニュー	104
Kuten code	305

Kuten code list→Refer to the provided CD-ROM

L

Launching i-appli from a mail	208
Launching i-appli from a site	208
Launching i-appli from IC card	208
Launching i-appli from ToruCa	208
Launching i-appli with Infrared data exchange	208
Launching i-appli with the Bar code reader	208
Lens selector switch	126
Light setting (backlight)	96
Line feed	302
Location information	156
Lock function	
Call setting w/o ID	122
Dial lock/Omakase Lock	109
IC card authentic	118
IC card lock setting	217
Keypad lock	118
Mail box lock/Folder lock	120
Original lock	114
Reject unknown	122
Restrictions	120
Ring time (sec)	122
Secret (data only) mode	111
Secret folder	112
Self mode	123
Side key guard	120
Lower case	302

M

Macro lens	126
Mail address	
Search (Phonebook)	80
Store (receiver's/sender's address)	176
Mail address storing	176
Mail box lock	120
Mail info	
Changing the list screen display mode	181
Changing the mail character size	180
Compose/send	166
Displaying mail menu	166
Guide to the folder list screens	181
Guide to the mail detail screens	182
Guide to the mail list screens	181
Mail display (Mail box)	180
Read out mail	178
Viewing new i-mode mail	173
What is i-mode Mail?	166
When you receive a message	172

Mail message (send/receive)	Dialing	191
Auto receive mail	Earphone/microphone with switch	191
Edit	From site/mail	191
Forward	International calls	189
Receive option	Overseas Use	383
Reply	Phonebook	190
Resend	Received calls	188
Send (from a site/mail)	Redial/Dialed calls	Message info
Sending draft i-mode mail	Two-touch dialing	Icon description
View (new message)	Malfunction check (i-mode)	When you receive a message
Mail settings	Malfunction checklist	Message list display
Auto-sort settings	Manner mode	Message (Ring tone)
Check settings	Manner mode set	Adjusting the volume
Display during sending/receiving mails	Manner mode when earphones are connected	Ring time
Mail box lock/Folder lock	Map i-appli	Select
Mail Setting	Marker stamp (Edit image)	microSD
Mail/Msg. ring time	Marking a checkbox	Data that can be copied
Reset mail settings	M-Continuous shooting	Displaying images, etc.
Set check new messages	Melody	Displaying phonebook, etc. (PIM data)
Mail To function	Copy from microSD to Phone	Folder structure
Mail (compose)	Copy from Phone to microSD	Folder (create/delete/edit)
Change rcv. type	Delete	Format
Delete receiver	Download	Handling with care
Entering an address from Mail member	Folder (create/delete/edit)	Insert/remove
Saving i-mode mail	Move	Storage capacity
Send attach file	Operations during playback	microSD data (i-appli)
Mail (manage)	Playback (microSD)	microSD manager
Copy from microSD to Phone	Playback (Phone)	microSD memory card → microSD
Copy from Phone to microSD	Playlist	microSD mode
Delete	Pre-installed data	microSD reader/writer
Display (Inbox)	Save (from site)	microSD software
Folder (create/delete/edit)	Saving the attached file	Missed call
Move (among folders)	Send attach file	Check
No. of messages	Storage capacity	Checking the number of missed calls
PIM data display	Titles and file names	Illumination information
Protect ON/OFF	Melody Call setting	Record
Saving the attached file	Melody linkage (vibrator)	Setting the notification tone
Search	Memory card → microSD	Missed calls display
Storage capacity	Memory info	Missed info (illumination)
Storing addresses in mail members	Chara-den list	Mobile phone manufacturer number
View (unread mail)	Image list	Movable contents
Mail (Ring tone)	Melody list	Move (among folders)
Adjusting the volume	Movie list	Bookmark
Priority	Movie mode	Image
Ring time	Still image/continuous shooting	Mail
Select	Memory No. search (Phonebook)	Melody
Mail-connected i-appli	Menu display set	Movie/i-motion
Main menu change	Menu function list	Music
Main menu (sort)	Menu numbers for function display	ToruCa
Making phone calls	Menu operation description	Move (among Phone/microSD)
Chaku-moji	Message	Chaku-Uta-Full®
Choku-Den	Auto receive mail	Movie/i-motion

Call rejection	120	Priority of functions		Release	
Compose message	167	Alarm notification	286	Dial lock	110
Copy from microSD to Phone	249	Chara-den setting	77	i-appli stand-by screen	209
Copy from Phone to microSD	248	Illumination	99	Mail protect	185, 186
Delete (detail screen)	82	Nuisance call blocking functions	124	Manner mode	92
Delete (list screen)	80	Ring tone/Image	89	Message protection	191
Difference between phone and UIM	76	Standby screen	94	PIN lock	109
Edit	82	Vibrator	90	Protect for screen memo	154
List screen (Tab display)	79	Program playback (Music&Video Channel)	266	Public mode (Driving mode)	65
No. of bookmarks	82	Program setting (Music&Video Channel)	264	Public mode (Power OFF)	66
PIM data display	247	Protect		Restrictions	120
Reject unknown	122	Mail	185, 186	Secret code	81
Renaming group name	78	Message	191	Secret data	111
Restrict dialing	120	Screen memo	154	Secret (data only) mode	111
Ring tone/Image	82	Public mode (Driving mode)	65	Vibrator	90
Saving the attached file	177	Public mode (Power OFF)	66	Release PIN lock	109
Search	79			Releasing Keypad lock temporarily	118
Secret code setting	81	Q		Remote access(Int.)	334
Secret data	111	QoS	323	Remote control function	261
Send attach file	170	QR code	138	Remote Control (Network service)	314
Storage capacity	383	Quality alarm	91	Remote monitoring (videophone)	73
Stored data	76	Quality setting (camera)	131	Renaming group name (phonebook)	78
Storing data from sites	150	Quick Manual	408	Reply with quote (Mail)	175
Voice mail (Restrictions)	120	Quick message	69	Reply (Mail)	175
Photo mode	131	Quick silent	63	Resend (Mail)	186
Pictographs list	351	Quotation mark	189	Reserved update (Software update)	378
Pict/Sym continuous entry	302	R		Reset	
Picture → Image		Reading out alarm contents	286	Auto reset total cost	290
Picture	228	Reading out rules	179	Clear learned	306
PIN code (PIN1/PIN2)	108	Reading search (Phonebook)	80	i-mode settings (reset)	157
PIN setting	109	Receive option (Mail)	174	Initialize	296
Play		Received address list	187	My profile	287
Recorded memo/voice memo	69	Received calls	56	Reset desktop	102
Voice	289	Receiving display (set)	94	Reset i-Channel	164
Playlist	271	Reception level (Signal strength)	46	Reset mail settings	189
Play/erase recorded messages	69	Reconnect signal	61	Reset menu op. log	97
Play/erase voice memo	69	Record		Reset original menu	98
PLMN setting (Overseas)	332	Voice	289	Reset settings	295
Portrait right	20	Voice memo	288	Reset total	290
Power saver mode	96	Record message setting	68	Reset desktop	102
Precautions	12	Redial	56	Reset i-Channel	164
Prefer attachment	188	Referer setting	224	Reset menu op. log	97
Prefix	60	Refresh skin tone (Edit image)	233	Reset settings	295
Pre-installed data		Registered trademark	20	Reset total (call time/charge)	290
Chaku-Uta-Full®	88	Reject unknown	122	Restrict dialing	120
i-appli software	200			Restrict dialing (Restrictions)	120
Ring tone/melody/alarm	88			Restriction	
拡大メニュー (Kisekai Tool)	104			Dial lock/Omakase Lock	109
Preview screen	235			IC card lock setting	217
Preview (SMS)	193			Keypad lock	118
Print setting (microSD)	252			Original lock	114
				Restrict dialing	120

Self mode	123	Secret (data only) mode	111	Shooting indicator (Flashing)	127
Side key guard	120	Secret (data only) mode releasing	111	Shooting menu icons	131
Restrictions	120	Security code	108	Shooting settings	137
Restrictions (release)	120	Change	109	Short cut key function	31
Retouch (Edit image)	233	Entry method	36	Short message → SMS	
Ring time (sec.)	122	Security codes for the FOMA terminal	108	Shot image (display)	227
Ring tone		Security error history (i-appli)	199	Side key guard	120
Adjusting the volume	64	Security scan → Scanning function		Signal strength (Reception level)	46
Increasing (Step)	64	Select image	71	Silent	
Pre-installed data	88	Select language	46	Recorded memo/voice memo	69
Priority	89	Select microphone	295	Ring volume	65
Ring time (mail/message)	91	Select ring tone	88	Voice	289
Silent	65	Select size	131	Simple Menu	34
Ring tone/Image	82	Select to save	132, 136	Simple Menu function list	346
Ring tone/Image (Check settings)	83	Selecting items with dial keys	35	Single-byte	302
Roam. Guidance (Int.)	333, 334	Selecting multiple items	39	SMS	
Rotate (Edit image)	233	Selecting ON/OFF	35	Compose/send	192
		Selecting the menu	30	Copy from microSD to Phone	249
		Selecting the shooting menu	130	Copy from Phone to microSD	248
		Selecting YES/NO	35	Preview (sent mail)	193
		Self mode	123	Receive	193
		Send DTMF tone	52	SMS center selection	194
		Sending all data (Infrared data exchange)	258	SMS input char.	193
		Sending one data (iC communication)	259	SMS report req.	193
		Sending one data (Infrared data exchange)	258	SMS settings	188
		Sending push signals	60	SMS valid. per.	193
		Sending the manufacturer number (i-mode)	147	Software	
		Sent address list	187	DoCoMo keitai datalink	326
		Sent/received data (data exchange)	256	ドコモテレビ電話ソフト	73
		Service Numbers	313	Software key → Function key	
		Services available for the FOMA terminal	360	Software Update	374
		Service(Int.)	333	Sort → Sort function, Filter function	
		Session number (data exchange)	257	Sort function	
		Set auto-update (Pattern data)	381	Image	230
		Set connection timeout (i-mode)	157	Mail	185
		Set hold tone	65	Melody	242
		Set i-appli To	207	Message	191
		Set image disp. (i-mode)	157	Movie/i-motion	235
		Set in-call arrival	313	Music	270
		Set main time	47	Phonebook	80
		Set mute seconds	122	Template	170
		Set sub clock	47	To Do list	284
		Set time	47	ToruCa	215
		Setting backlight	96	Sound effect (i-mode)	157
		Setting the clock display (standby screen)	100	Specific absorption rate (SAR)	384
		Setting when folded	64	Specifications	382
		Shield view	96	Standard lens	126
		Shooting		Standard type i-motion	161
		Compose message	135	Standby screen	
		Continuous shooting	133	Display setting	95
		Movie	135	Priority	94
		Still image	131	Return to the standby screen	36

Standby screen (i-appli)	208
Start attachment (auto) (Mail settings) . .	188
Start attachment (auto) (Message) . .	157
Still image	
Copy from microSD to Phone	250
Copy from Phone to microSD	249
Display (microSD)	248
Display (Phone)	227
Edit	233
Shooting	131
Storage capacity	128
Storage capacity for music data	383
Storage capacity for screen memo	383
Storage capacity (respective data)	383
Store common phrases	304
Storing phone number/mail	
address on sites	150
Storing receiver's address (Mail address) . .	176
Storing WMA data	272
Storing/displaying personal data	286
Streaming type i-motion	161
Sub-address setting	61
Super silent	92
Switch to BGM	276
Switch to front camera	126
Switch to rear camera	126
Switching pages	35
Switching screens (Text entry	
divided screen)	299
Symbols list	349

T

Template	
Download	155
No. of messages	170
Storage capacity	383
Text memo	292
Text reader	140
Theme change	97
Ticker	163
Ticker color setting	164
Ticker display setting	164
Ticker speed setting	164
Time signal (Indicator display)	98
Timer (Alarm)	280
Title list (Image)	228
Title list (Movie)	235
TLS	220
To Do list	284
Alarm notification actions	285
Check	285
Clock Alarm Tone set	91

Copy from microSD to Phone	249
Copy from Phone to microSD	248
Storage capacity	383
Store	284
ToruCa	213
Acquire	214
Copy from microSD to Phone	250
Copy from Phone to microSD	249
Display	214
Display (microSD)	248
Download	155
Guide to the screen	215
Saving the attached file	177
Send attach file	170
Set	216
Storage capacity	383
ToruCa viewer	214
Trademark	20
Trimming (Edit image)	233
Turning the FOMA terminal on/off	46
TV remote control	261
Two-touch dialing	85

U

UIM → FOMA card	
UIM operation	254
Universal Number International ID Code	330
Updating playback restrictions (Uta-hodai)	268
Upgrade (i-appli)	209
Upper case	302
URL entry	151
URL History	148
URL history	151
USB cable connection	260
USB mode setting	251
Use phone information (i-mode)	158
Using SSL Certificates	158

V

Version (Pattern data)	381
Vibrator	90
Vibrator priority	90
Videophone	
Answer mode during i-mode	72
Auto redial as voice	71
Chara-den setting	52
External devices	73
Hands-free switch	71
How to view the screen	51
Making videophone calls	50
Play/erase recorded messages	69
Receiving	62

Remote monitoring	73
Select image	71
Using Chara-den	70
Visual check	52
When a call is not connected	52
Videophone (Ring tone)	
Adjusting the volume	64
Select	88
Videophone/voice phone switch (Caller)	53
Videophone/voice phone switch (Receiver)	63
Viewer settings	228
Viewing sites	
Bookmark	152
From site/mail	156
Full Browser	220
i-Channel	163
i-mode	146
Multi window	150
My Menu	151
Screen memo	153
URL History	148
URL history	151
Visual check (videophone)	52
Voice announce	289
Voice clock	68
Voice Mail	308
Voice mail (Restrictions)	120
Voice Mail(Int.)	333
Voice memo	288
Voice memo(in-call)	288
Voice mode	137
Voice monitor	68
Voice/videophone switch (Caller)	53
Voice/videophone switch (Receiver)	63
V-phone while packet	72

W

Wake-up display setting	94
Warranty and after-sales service	372
WEB Mail	167
Web To function	156
Website	151
What is Area Mail?	191
What is i-Channel?	163
When the shooting is interrupted	127
White balance	131
Word prediction	299
WORLD CALL	54
WORLD WING	41, 328

Z

Zoom adjustment	137

Numerical

186/184	48
2in1	316
2-touch input (Character assignment)	348
2-touch input (Character entry)	306
3G network	328
4 images composite (Edit image)	232
5-touch input (Character assignment)	347
5-touch input (Character entry)	300
64K data communication	322

Kana

拡大メニュー (Kisekae Tool)	104
デコ絵つくーる (deco-e maker)	200
ドコモテレビ電話ソフト	73
はじめてのおつかい for SO	200
楽オク出品アプリ2	206

Function menu

Alarm

Detail	280
List	280

Bar code reader

Reading data detail	140
Reading data list	139
Scanning	139

Bookmark

Folder list	152
List	153

Calculator

	292

Channel list

	164

Character entry (edit)

	302

Chara-den

List	238
Player	238
Shooting	240

Choku-Den

	84

Common phrases

Folder list	304
List	304

Continuous shooting

Checking	134
Detail checking	134
Shooting	132

Country Code setting

	55

Create message list

	59

Data Box

Folder list	253

Deco-mail

Template list	170

Template preview

	170

Dialed calls

	57

Dictionary

Dictionary	293
Reference history	293
Reference result (list/detail)	293

Download dictionary

	306

Draft mail list

	172

Exchanging history

	85

Full Browser

	222

i-appli

End stand-by info	209
IC card content	198
microSD data list	210
microSD software list	209
Security error history	199
Software list	198

IC card authentic.

	119

IDD Prefix setting

	61

i-motion

Data acquisition	161

Kisekae Tool

Contents checking	105
Package list	243
Set list	104

Mail

Address (list/detail)	187
Detail	186
Folder list	183
List	185
Message	168
New mail	167
Unread mail list	186

Mail member

Detail	172
List	172

Melody

List	241
Melody	241

Message

Detail	191
List	191

microSD

Categories	247
Data detail	248
Data list	248
File list	248
Folder list	253

Movie

List	235
Playlist folder list	236

Movie mode

Checking	136
Shooting	136

Music Player

Music list	270
Player	275
Playlist list	271
Playlist music list	272

Music&Video Channel

Chapter list	266
Music&Video Channel	266
Program list	267

My picture

Image list	230
My picture	230
My Profile	287

Network services

Additional guidance	320
Additional service	320
Multi Number setting	315
Voice Mail setting	309

New SMS

	193

Original animation

List	232
Player	233

Original lock

Category list	118
Function list	118
Group list	118
Original menu	98
Original theme	98
Own dictionary	305
Pause dial	60

Phonebook

Detail	81
Group setting	78
List	80

Photo mode

Checking	132
Shooting	132

Play/Erase msg. (voice/video)

	70

PLMN setting

	332

Prefix setting

	61

Receive Ir data

	258

Received calls

	57

Redial

	57

Restrictions

	121

Schedule

List	283
Schedule	281
Schedule/Holiday/Anniversary detail	283

Screen memo	
Detail	154
List	154
Shortcut icon	
My shortcut (Theme/Detail) . .	102
Shortcut	102
Site	
Sites	147
URL History	148
URL list	152
Text memo	292
Text reader	
Reading data (list/detail)	143
Text reader	143
To Do list	
Detail	284
To Do list	284
ToruCa	
Display	216
Folder list	215
List	215
UIM operation	254
Voice announce	289
Voice/Videophone Calls	
Enter phone number	52
In-call	52
Ringing	62
Other ID	74

How to use the Quick Manual

The Quick Manual describes basic operations and displays of the FOMA terminal.

To use the Quick Manual embedded in this manual, cut the sheets along the cutting line and fold them as described below. Take the Quick Manual (For Overseas Use) when using international roaming (WORLD WING) abroad.



How to cut

Cut the Quick Manual sheets along the cutting line.

Use a ruler to cut along the cutting line as described below.



Detach one page at a time so that you do not tear other pages.

* Take care not to hurt yourself when cutting with scissors, etc.

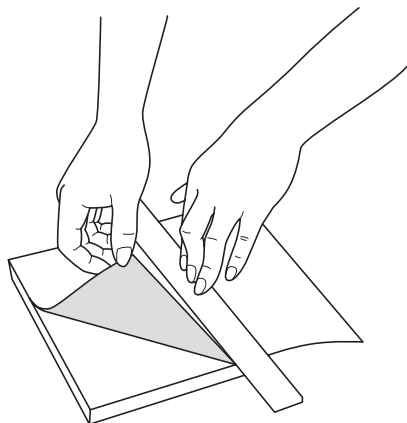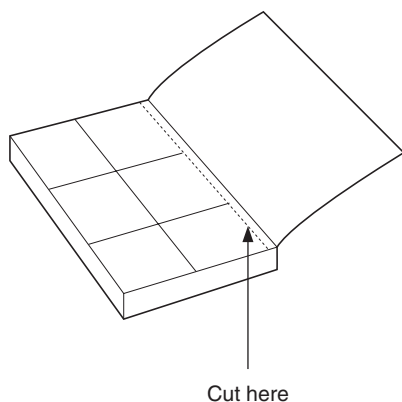

How to fold

Fold the Quick Manual along with the folding line as described below so that the front cover comes to the front.

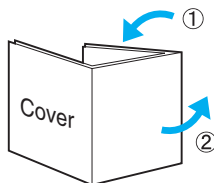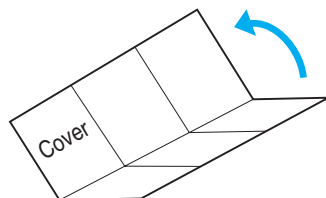

For inquiries, <Docomo Information Center>

For Docomo mobile phone:

[1] (No prefix) 151 (toll free) (only in Japanese)

● You cannot call the number from an ordinary (landline) phone.
From an ordinary (landline) phone:

00 0120-005-250 (toll free) (in English)

● Can be called from mobile phones and PHSs.

● Check the phone number carefully before calling.

For FOMA mobile phone:

For FOMA mobile phone:

[1] (No prefix) 113 (toll free) (only in Japanese)

● You cannot call the number from an ordinary (landline) phone.
From an ordinary (landline) phone:

00 0120-800-000 (only in Japanese)

● Can be called from mobile phones and PHSs.

● Check the phone number carefully before calling.

For details, check the "Service status list" provided with the FOMA terminal.

[4] [1] (Finish)

Only name, reading, group, phone number and mail address can be stored to the FOMA card (UM).

Edit/delete phonebook data

[1] Edit the phonebook data

Display the phonebook detail screen → **[2] (FUNC) →**

"Edit Phonebook" → Edit the items if necessary →

[1] (Finish) → "YES" (For the FOMA card (UM), press

[1] (Finish) and select "Overwrite" → "YES")

[1] Delete phonebook data

Display the phonebook list screen → **[2] (FUNC) →**

"Delete data" → "Delete this" → "YES" (Select "YES" again depending on the phonebook)

Add to phonebook

[1] [1] → "Phonebook" → **[2] (FUNC) → "Add to phonebook"**

● On add data from the received calls record

On the standby screen → **[2] (FUNC) → "Received calls record entry" → **[2] (FUNC) → "Add to phonebook"****

● To add data from the rec'dial

On the standby screen → **[2] (FUNC) → "Select the rec'dial" → **[2] (FUNC) → "Add to phonebook"****

[2] Select the destination → Enter a name → Check the reading of the name → **[1] (Set)**

[2] Select items and enter them

[1] Group (00 to 19, No Group)

[2] <Not stored> → Select a group


[1] Phone number (up to 4)

[2] <Not stored> → Enter phone number → Select an icon

1

Character entry

[1] Character entry (edit) screen

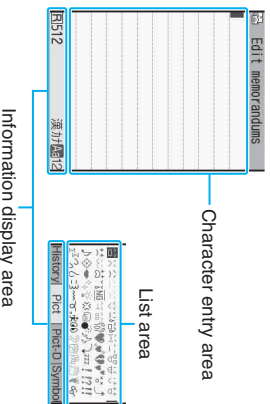

[1] Mail address (up to 3)

[2] <Not stored> → Enter mail address → Select an icon

[1] Address

[2] <Not stored> → Enter zip code → Enter address

[1] Birthday

[2] <Not stored> → Enter birthday

[1] Memorandums

[2] <Not stored> → Enter memorandums

[1] Image

[2] <Not stored> → Select the photo mode or image

[1] Chara-den

[2] <Not stored> → Select Chara-den

[1] Memory number (000 to 999)

[2] <Not stored> → Enter memory number

2

[1] Switch text entry mode

[2] (FUNC) → "input method" → "input mode"

[1] Enter dakuten, han-dakuten

[2] * (one time or more)

[1] Enter " " or " " "

[2] # (one time or more)

[1] Change input modes

[2] (Chrt) (one time or more, Selected mode highlights)

● Single-byte

Aa → 12 → 漢 → 卍

● Double-byte

A → 1 → 漢 → 力

3

4

5

■ Enter pictograph and symbol continuously

[Ch] (Pict/Sym) → Select pictograph or symbol → [Close] or [CLR] after entering

■ Clear character

Use [CLR] to move the cursor onto the character to clear

→ [CLR]

■ Enter space

[] (one time or more)

[] (Only when the cursor is at the end of the text)

■ Insert a line feed

[#]

[] (Only when the cursor is at the end of the text)

■ Switch the upper case/lower case of entered text

[]

6

Display still image/movie/play melody

■ Displaying a still image

[Menu] → "Data box" → "My picture" → Select folder → Select still image

■ Playing a movie

[Menu] → "Data box" → "i-motion" → Select folder → Select movie

■ Playing a melody

[Menu] → "Data box" → "Melody" → Select folder → Select melody

9

Enter "携帯" on Text memo

■ Character entry (edit) screen

[Menu] → "LifeKit" → "Text memo" → [Edit] → [Chnct] (one time or more) → Switch to "Kaniji/hiragana input mode" →

[] → [2] 4 times, [] twice,
た → [4] once, [] twice

■ Character conversion

[] → [] → Select "携帯" from the candidates

7

Using the music player

■ Playing the Music

[Menu] → "Data box" → "Music" → Select folder → Select music

Camera

■ Shoot still image

[Menu] → "Camera" → "Photo mode" → [] (Record) → [] (Save)

■ Continuous shooting

[Menu] → "Camera" → "Photo mode" → [] (FUNC) → "CHG camera-mode" → "Continuous mode" → "Auto" or "Manual" → [] (Cont./Record) → [] (FUNC) → Select saving method

■ Movie mode

[Menu] → "Camera" → "Movie mode" → [] (Record) → [] (Stop) → [] (Save)

8

Making/receiving videophone call

■ Make a videophone call

Enter the phone number → [] (V.phone) → [] after talking

■ Receiving a videophone call

When the ring tone sounds and the incoming call lamp flashes

[] or [] (Subst.) → [] after talking

[]: Sends your camera image to the caller

[] (Subst.): Sends your substitute image to the caller

■ During a call

 
[]: Switches/cancels hands-free (ON/OFF)

[] (Change): Switches the camera (Front camera/rear camera)

11

i-mode mail

Composing/sending i-mode mail



Compose message screen

Enter a message

Enter an address

Enter an address

Enter a subject

Enter a subject

12

Enter the message body

Enter the message body

Sending the mail

Send OK

Attaching files

Attaching an image, motion, melody, ToruCa, or other data

Display the new mail screen
Select an item
Select a folder
Select the data

Attaching phonebook

Display the new mail screen
Phonebook
Search a phonebook
Select a phonebook

13

Attaching My Profile

Display the new mail screen
My Profile
Enter your security code
Set

Attaching schedule

Display the new mail screen
Schedule
Select an item
Select the data
Select

Attaching bookmark

Display the new mail screen
Bookmark
Select an item
Select a folder
Select the data
Select

14

Receiving i-mode mail

Flashes
Received results screen appears
Select OK

Other mail functions

Replying mail

Display the mail to reply
Reply
Enter message
Send OK

Forwarding mail

Display the mail to forward
Forward
Enter a mail address
Send OK

Check new messages

1 second or longer

15

Menu function list

Main item	Sub item	Branch item
Mail	Inbox	
	Outbox	
	Draft	
	Compose message	
	WEB Mail	
	Compose SMS	
	Check new messages	
	Receive option	
	Check new SMS	
	Template	
I-mode	Mail Setting	
	Menu	
	Bookmark	
	Screen memo	

16

Cutting line

Main item	Sub item	Branch item

I-mode	URL history	
	Go to location	
	Full Browser	
	ICalendar	
	Message R/F	
	Check new messages	
	Client certificate	
	I-mode settings	
	Software list	
	microSD	
I-app	Auto-start set	
	I-app action info	
	Keisuke Tool setting	
	Ring volume	
	Select ring tone	
Settings	Incoming call	
	Vibrator	

17

Main item	Sub item	Branch item
Settings	Incoming call	Manner mode set
		Disp. phonebook image
		Answer setting
		MailMsg. ring time
		Ring time(sec.)
		Info notice setting
		Record message
		Disp. call/recvie No.
		Melody Call setting
		Noise reduction
Talk		Quality alarm
		Reconnect signal
		Illumination in talk
		Set hold tone
		Setting when folded
Dialing		Pause dial
		Sub-address setting
		Prefix setting

18

Main item	Sub item	Branch item
Settings	Dialing	Headset sw to dial
		Int'l dial assistance
		Visual preference
		Select image
		Auto redial as voice
	Videophone	Remote monitoring
		Display setting
		Ntly switch-mode
		Hands-free switch
		V-phone while packet
	Display	Display setting
		Backlight
		Display design
		Illumination sig.
		Font
		My shortcut
		Select language
		My selection
		Menu display set

19

Main item	Sub item	Branch item
Settings	Display	Viewer settings
		Icons
		Icons setting
		Shield view
		Call data
	Call timer/ Charge	Notice designate calls
		Reset total
		Auto reset total cost
		Set time
		Clock display
	Clock	World watch
		Alarm setting
		Clock Alarm Tone set
		Auto power ON
		Auto power OFF
Lock/ Security		Lock
		Dial lock
		Original lock
		IC card lock setting
		Keypad lock
		Self mode

20

Main item	Sub item	Branch item
Settings	Lock/ Security	Secret mode
		Secret data only mode
		Reject unknown
		Call setting w/o ID
		Change security code
		IC card authentic.
		PIN setting
		Scanning function
		Set connection timeout
		Set check new messages
Connection setting		Host selection
		SMS center selection
		Certificate
		Certificate host
		Disp. Software info
I-ruppl settings		End stand-by display
		Background I-ruppl
		I-ruppl vol.

21

Main item	Sub item	Branch item
Settings	External connection	USB mode setting
		Headset usage setting
		Select microphone
		Auto answer setting
		NW search mode
Int'l roaming set		Display operator name
		Keypad sound
		Charge sound
		Battery level
		Slide key guard
Other settings		Character input set
		Reset settings
		Initialize
		Software Update

22

Main item	Sub item	Branch item
Data box	My picture	Music
		Music&Video Channel
		F-motion
		Melody
		Chra-kae
		Keakae Tool
		Bar code reader
		Receive Ir data
		microSD manager
		Camera
LifeKit		Data security serv.
		Schedule
		Alarm
		To Do list

23

Cutting line

Main item	Sub item	Branch item
LinkIt		
	Text memo	
	Calculator	
	Play/Erase msg.	
	Voice memo	
	Voice announce	
	UIM operation	
	My Profile	
	Forwarding Image	
	T text reader	
	Dictionary	
Service	Chakuraji	
	Caller ID Notification	
	Voice Mail	
	Call Waiting	
	Call Forwarding	
	Zint setting	
	Nuisance Call Bk	

24

Network services

Voice Mail Service

- Activate**
~~key~~ → "Service" → "Voice Mail" → "Activate" → "YES" → "YES" → Enter "Ringing time (seconds)"
- Deactivate**
~~key~~ → "Service" → "Voice Mail" → "Deactivate" → "YES" → "YES" → Follow the voice guidance
- Play messages**
~~key~~ → "Service" → "Voice Mail" → "Play messages" → "YES" → Follow the voice guidance

27

Main item	Sub item	Branch item
Service		
	Caller ID Request	
	Incoming Call Mng	
	Set-in-call arrival	
	Remote Control	
	Dual Network	
	English Guidance	
	Additional service	
	Service Numbers	
	Multi Number	
	Room Guidance	
	Bar incoming when roam	
	ServiceCtrl	
Phonebook	Phonebook	
Own data	Received calls	
	Dialled calls	
	Mail member	
	Choku-Dan	

25

Call Waiting

- Activate**
~~key~~ → "Service" → "Call Waiting" → "Activate" → "YES"
- Deactivate**
~~key~~ → "Service" → "Call Waiting" → "Deactivate" → "YES"
- Answering another incoming call**
 Press ☒ to switch to incoming call
 To switch the calls, press ☒.

28

Cutting line

Main item	Sub item	Branch item
Own data		
	Common phrases	
	Own dictionary	
	DL dictionary	
MUSIC	Music Player	
	Musical Video Channel	
Camera		
	Osailu-Kelali	
	IC card content	
	DCMX	
	Tonduca	
	IC card lock setting	
	Setting	
	Search by mode	

<Other functions>

- Manner mode : ☒ (1 second or longer) (Self-release with each press)
- Public mode (Driving mode) : ☒ (1 second or longer) (Self-release with each press)

26

Call Forwarding Service

- Activate**
~~key~~ → "Service" → "Call Forwarding" → "Activate" → Set a forwarding number and the ring time, then select "Activate" → "YES"
- Deactivate**
~~key~~ → "Service" → "Call Forwarding" → "Deactivate" → "YES"
- Caller ID Request**
~~key~~ → "Service" → "Caller ID Request" → "Activate" → "YES" → "OK"
- Deactivate**
~~key~~ → "Service" → "Caller ID Request" → "Deactivate" → "YES" → "OK"

29

Services available for the FOMA terminal

Directory assistance (charged; service charge + call charge)*1	(No area code) 104
Telegram (pay; telegram charge)	(No area code) 115
Time (pay)	(No area code) 117
Weather forecast (pay)	Area code of an area you want to know + 177
Emergency call to the police*2	(No area code) 110
Emergency call for a fire engine or an ambulance*2	(No area code) 119
Emergency call for help with maritime accidents	(No area code) 118
Emergency Message Recording System (pay)	(No area code) 171
Collected call (charged; service charge + call charge)	(No area code) 106

*1: Unlisted phone numbers cannot be given.

*2: An emergency call to the local fire station or police station may not be connected in some areas. In that case, call again from a public phone or land line.

30

- : Manner mode is set
- : Public mode (Driving mode) is set
- : Music & Video Channel reservation is set
- : Alarm is set
- to : Voice mail message
- to : Record message is set
- to : Record message (Record VP message) is set
- : Backlight is set to "OFF"
- : Keypad lock is set/ready
- : When Side key guard is set to "ON"

33

Main icons



Icon display area

: Signal strength

: i-mode in progress

: SSL-compatible page displayed

: Unread mail

31

<Contact for lost, etc>

Omakase Lock

- Omakase Lock is a pay service. If you subscribe to the service at the time of the first suspension or resumption of suspending the service or while the service is suspended, no charge applies.

Set/Release Omakase Lock

0120-524-360

24 hours available (only in Japanese)

- Omakase Lock can be set/released from the My DoCoMo site on a PC, etc.

34

Cutting line

- : Unread Message R
- : Mail kept at the i-mode Center
- : When Dial lock is set
- : When IC card lock is set
- : Communication mode set (USB cable connected)
- : Ir data exchange in progress
- : microSD memory card inserted
- : During a voice call
- : Battery level
- : Vibrator is set
- : "Ring volume" is set to "Silent"

32

Other contacts

<Contact: >

<Contact: >

<Contact: >

- Check the phone number carefully before dialing.

35

- For test, stolon, charge accumulation, etc. overseas
- DoCoMo Information Center (24 hours) (Only in Japanese)
- For DoCoMo mobile phone
 - For international access code of the country (Table 1)
 - **-81-3-5366-3114* (toll free)**
 - * When you make a call from an ordinary phone, etc., the call charge applies. When calling from the SO705i, dial -81-3-5366-3114 (press and hold the "0" key for 1 second or longer to enter "1").
- For ordinary phone, etc. <Universal Number>
 - International ID Code (Table 2)
 - **-800-0120-0151***
 - * Local call charge may apply in the country you are staying. Refer to p.9 for the international access codes of major countries (Table 1) and p.10 for the universal number International ID code (Table 2).

Setting sub clock

- Settings → Clock → World watch → Set Time zone/ Summer time

Displaying clock

- Settings → Clock → Clock display → Display type → "World watch ON" → YES

Available Services Overseas

- Voice/video phone calls
- i-mode (including Full Browser)
- i-Channel
- Packet communication via PC
- Some services may not be available depending on the network or operator.
- i-mode mail
- Sending/Receiving SMS
- Messenger

- For malfunctions overseas
- Network Technical Support and Operation Center (24 hours)
- For DoCoMo mobile phone
 - For international access code of the country (Table 1)
 - **-81-3-6718-1414* (toll free)**
 - * When you make a call from an ordinary phone, etc., the call charge applies. When calling from the SO705i, dial -81-3-6718-1414 (press and hold the "0" key for 1 second or longer to enter "1").
- For ordinary phone, etc. <Universal Number>
 - Universal Number
 - International ID Code (Table 2)
 - **-800-5931-8600***
 - * Local call charge may apply in the country you are staying. Refer to p.9 for the international access codes of major countries (Table 1) and p.10 for the universal number International ID code (Table 2).

Setting the Search Mode of the Operator

Switching the operator automatically or manually

- Settings → "Int'l roaming set" → NW search mode → "Auto" or "Manual"

Re-searching the connectable operator

- Settings → "Int'l roaming set" → NW search mode → "Network re-search"
- When set to "Manual", select an operator.

Setting an operator to be preferably connected

- Settings → "Int'l roaming set" → NW search mode → "PLMN setting" → Highlight the operator to change the priority → (FUNC) → Change priority → Highlight the destination → (Select) → (Finish) → YES

Setting operator name display

- Settings → "Int'l roaming set" → Display operator name" → Display ON" or "Display OFF"

Before travelling

i-mode settings

Setting in Japan

- Menu → English Menu → Options → International Settings → i-mode services settings → Yes → Enter i-mode password → Select

Setting abroad

- Menu → English Menu → International Settings → Check "Yes" → Enter i-mode password → Set

Remote Control

Setting in Japan

- Service → Remote Control → Activate → YES

Setting abroad

- Service → Service (Int'l.) → Remote access (Int'l.) → YES → Follow the audio guidance

Display on the screen

- The name of the currently connected operator appears on the task icon area.



After returning to Japan

- When you returned to Japan and turn on the FOMA terminal, the network will be automatically searched and set to the FOMA network (DoCoMo).
- Setting the Search Mode of the Operator → p.4

Making a Call

Making a call to outside your destination country (including Japan)

- Making a call to a country registered in "Int'l dial assistance" → Select a country → (Func) or (V, phone)

Making a call by dialing from the country code

- On the standby screen, dial + (Func) (1 second or longer) → Country code → Area code (Long distance code) → The other party's phone number → (Func) or (V, phone)

Making a local call abroad

Dial the other party's phone number →  or  (V phone)

Receiving a call

When you receive a voice/video phone call, press .

Network services

Before using the network services overseas, you have to set "Remote Control".

Roam. Guidance

- Make the setting in Japan.
"Deactivate" → Roam. Guidance → "Activate" or "Deactivate" → YES

Bar incoming when roam

- Depending on the operator overseas, the setting may be unavailable.
"Service" → Bar incoming when roam → "Activate" or "Deactivate"
When set to "Activate", select the setting from "Bar All incoming" or "Data calls Barring". → YES → Enter your network security code

6

Voice Mail (Int.)

 → Service → "Service(Int.)" → Voice Mail(Int.) → Select the service → YES → Follow the audio guidance

Call Forwarding (Int.)

 → Service → "Service(Int.)" → Call Forwarding (Int.) → Select the service → YES → Follow the audio guidance

Roam. Guidance (Int.)

 → Service → "Service(Int.)" → Roam. Guidance (Int.) → YES → Follow the audio guidance

Remote access (Int.)

 → Service → "Service(Int.)" → Remote access (Int.) → YES → Follow the audio guidance

Caller ID req. (Int.)

 → Service → "Service(Int.)" → Caller ID req. (Int.) → YES → Follow the audio guidance

7

Country codes of major countries

Enter the following country codes when using international call or setting "Int'l dial assistance".

(As of January, 2008)

Area	Code	Area	Code	Area	Code
Australia	61	Holland	31	Peru	51
Austria	43	Hong Kong	852	Philippines	63
Belgium	32	Hungary	36	Russia	7
Brazil	55	India	91	Singapore	65
Canada	1	Indonesia	62	Spain	34
China	86	Italy	39	Sweden	46
Czech	420	Japan	81	Switzerland	41
Egypt	20	Korea	82	Taiwan	886
Fiji	679	Macao	853	Thailand	66
Finland	358	Malaysia	60	Turkey	90
France	33	Maldives	960	United Kingdom	44
French Polynesia	689	New Caledonia	687	United States of America	1
Germany	49	New Zealand	64		
Greece	30	Norway	47	Vietnam	84

* For other country codes and details, see the DoCoMo "International Services Website".

8

Universal Number International ID Code (Table 2)

(As of August, 2007)

Area	Code	Area	Code	Area	Code
Argentina	00	Holland	00	Portugal	00
Australia	0011	Hong Kong	001	Singapore	001
Austria	00	Hungary	00	South Africa	09
Belgium	00	Ireland	00	Spain	00
Brazil	0021	Israel	014	Sweden	00
Bulgaria	00	Italy	00	Switzerland	00
Canada	011	Korea	001	Taiwan	00
China	00	Luxembourg	00	Thailand	001
Colombia	009	Malaysia	00	United Kingdom	00
Denmark	00	New Zealand	00	United States of America	011
Finland	980	Norway	00		
France	00	Peru	00		
Germany	00	Philippines	00		

* Note that the universal numbers may not be available from mobile phones, public phones or hotels.

* For the latest information, see the DoCoMo "International Services Website".

9

International Access Codes of major countries (Table 1)

(As of August, 2007)

Area	Code	Area	Code	Area	Code
Australia	0011	Hungary	00	Portugal	810
Belgium	00	India	001	Russia	810
Brazil	0041	Indonesia	001	Singapore	001
Canada	011	Ireland	0014	Spain	00
China	00	Italy	00	Sweden	00
Czech	00	Korea	001	Switzerland	00
Denmark	00	Luxembourg	00	Taiwan	002
Finland	00	Macao	00	Thailand	001
France	00	Malaysia	00	Turkey	00
Germany	00	Monaco	00	United Arab Emirates	00
Greece	00	New Zealand	00	United Kingdom	00
Holland	00	Norway	00	United States of America	011
Hong Kong	001	Poland	00	Vietnam	808

* For the latest information, see the DoCoMo "International Services Website".

10

Cutting line

11

Inquiries

For inquiries overseas such as lost, stolen, charge accumulation, or malfunction, refer to "For lost, stolen, charge accumulation, etc. overseas" on the front cover of the Quick Manual ("For Overseas Use") or "For malfunctions overseas" in p.1.

- When dialing to the inquiries numbers "International access code" or "Universal number international ID code" assigned to your destination country is required. For details on "International access code" and "Universal number international ID code", refer to the "Mobile Phone User's Guide (International Services)".

* Note that the universal numbers may not be available from mobile phones, public phones or hotels.

Access DoCoMo e-site for procedures to change your address or billing plan and for request of information materials.

From i-mode iMenu ⇒ 料金&お申込・設定 (Charges & Applications/Setting) ⇒ 各種手続き (ドコモ e サイト) (Application procedure (DoCoMo e-site)) Packet communication charges free

From PC My DoCoMo (<http://www.mydocomo.com/>) ⇒ 各種手続き (ドコモ e サイト) (Application procedure (DoCoMo e-site))

- * You will need your "network ID" to access e-site from i-mode.
- * No packet communication charges are incurred when accessing e-site from i-mode. Accessing from overseas will incur charges.
- * You will need your "DoCoMo ID/password" to access e-site from PC.
- * If you do not have or you have forgotten your "network ID" or "DoCoMo ID/password", contact the DoCoMo information Center listed on the back cover of this manual.
- * DoCoMo e-site may not be available depending upon the content of your subscription.
- * You may not be able to access e-site services due to system maintenance, etc.

Using your FOMA Terminal Politely

When using your FOMA terminal, do not forget to consider the feelings of people around you.

Turn off your FOMA terminal when you are:

- In a place where it is prohibited to use a mobile phone.
It is prohibited to use a mobile phone in some places. Turn off your FOMA terminal in:
 - An airplane · A hospital
 - * There is not only a person in a ward who uses medical electrical equipment. Turn off your FOMA terminal even in a lobby or waiting room.
- Driving
The penalty shall be imposed on use of a handset held in your hand while driving.
 - * If you are obliged to receive a call, tell the other to call back later in handsfree mode and stop the car at a secure location for dialing.
- In a crowded place such as rush-hour train, where somebody nearby may be using an implantable cardiac pacemaker or implantable cardioverter-defibrillator
Radio waves may affect the operation of implantable cardiac pacemakers or implantable cardioverter-defibrillators.
- In a public place such as theater, cinema, or museum
Using the FOMA terminal in a public place, where you need to be quiet, annoys people around you.

Mind where you use your FOMA terminal and the loudness of your voice or the ring tone

- If you use your FOMA terminal in a quiet place such as restaurant or hotel lobby, mind the loudness of your voice is, etc.
- Take care not to disturb other people when you use your FOMA terminal in a public place.

Respect privacy

- ! Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

These functions enable you to be well-mannered

Your FOMA terminal is equipped with useful functions not to answer an incoming call or to mute the sounds of the FOMA terminal.

[Manner mode/Original manner mode] → p.92

Manner mode mutes the sounds of the FOMA terminal such as the keypad sounds and the ring tone. You can customize Manner mode by changing the settings of the Record message function, vibrator or ring tone (Original manner mode). However, neither Manner mode nor Original manner mode can mute the shutter sound of the camera.

[Public mode (Driving mode/Power OFF)] → pp.65, 66

The FOMA terminal announces to the caller that you cannot answer the call because you are driving, or you are in the place you have to refrain from calling or you have to turn off the mobile phone.

[Vibrator] → p.90

The FOMA terminal vibrates to notify you of an incoming call.

[Record message] → p.68

When you cannot answer a call, the caller can leave a message.

You can also use optional services such as the Voice Mail service (p.308) and Call Forwarding service (p.310).

This manual is bound in consideration of recycling. When this manual becomes unnecessary, we appreciate your cooperation of taking this manual out to the collection or recycling.

General Inquiries
<DoCoMo Information Center>

(In English)

 **0120-005-250 (toll free)**

*Can be called from mobile phones and PHSs.

(In Japanese only)

 **(No prefix) 151 (toll free)**

*Can only be called from DoCoMo mobile phones.

Lost or theft of FOMA terminal, or payment of cumulative cost overseas
<DoCoMo Information Center> (available 24 hours a day)

DoCoMo mobile phone

International Access Codes of the country (Table 1) **-81-3-5366-3114*** (toll free)

*Calling from the fixed phone will be charged according to the call rate for Japan.

*If you use S0705i, you should dial the number +81-3-5366-3114 (to dial "+", press the "0" key for over a second).

Fixed phone

<Universal number>

Universal Number International ID Code (Table 2) **-800-0120-0151***

*You are charged according to the call rate for the country where you are staying.

* See p.329 for International Access Codes of major countries (Table 1) and p.330 for Universal Number International ID Code (Table 2) in this manual.

● If your FOMA terminal is lost or stolen overseas, take procedure to suspend the subscription immediately.

● If your FOMA terminal has been damaged overseas, bring it to a repair counter designated by DoCoMo after returning to Japan.

Repairs

(In Japanese only)

 **(No prefix) 113 (toll free)**

*Can only be called from DoCoMo mobile phones.

(In Japanese only)

 **0120-800-000 (toll free)**

*Can be called from mobile phones and PHSs.

● Please confirm the phone number before you dial.

● For further information, refer to the "Nationwide Service Station List" included with your FOMA terminal and other devices.

Failures encountered overseas

<Network Technical Support and Operation Center> (available 24 hours a day)

DoCoMo mobile phone

International Access Codes of the country (Table 1) **-81-3-6718-1414*** (toll free)

*Calling from the fixed phone will be charged according to the call rate for Japan.

*If you use S0705i, you should dial the number +81-3-6718-1414 (to dial "+", press the "0" key for over a second).

Fixed phone

<Universal number>

Universal Number International ID Code (Table 2) **-800-5931-8600***

*You are charged according to the call rate for the country where you are staying.

* See p.329 for International Access Codes of major countries (Table 1) and p.330 for Universal Number International ID Code (Table 2) in this manual.



**Don't forget your cellular phone ...
or your manners!**

○When using your mobile phone in public, don't forget to show common courtesy and consideration for others around you.

Sales: NTT DoCoMo Group

NTT DoCoMo Hokkaido, Inc.

NTT DoCoMo Tohoku, Inc.

NTT DoCoMo, Inc.

NTT DoCoMo Tokai, Inc.

NTT DoCoMo Hokuriku, Inc.

NTT DoCoMo Kansai, Inc.

NTT DoCoMo Chugoku, Inc.

NTT DoCoMo Shikoku, Inc.

NTT DoCoMo Kyushu, Inc.

Manufacturer: Sony Ericsson Mobile Communications Japan, Inc.



Li-ion00

To prevent damage to the environment,
bring used battery packs to an NTT
DoCoMo service counter, an NTT
DoCoMo agent or a recycle center.



PRINTED WITH
SOY INK

This manual is printed using
an ink based on soy bean oil.

Made from recycled paper

'08.2 (1.1 Edition)
MDT-000080-EAAO

FOMA® SO705i

Manual for

PC connection setting

About Data Communication Available for the FOMA Terminal.....	1
Before Using.....	4
Checking the Procedure.....	5
Setting the PC	9
About the FOMA PC Setting Software.....	12
How to Set Various Settings.....	18
Executing Set Data Communication	24
Optimizing Communication Settings.....	27
Access Point Name (APN) Settings.....	28
Setting up Dial-up Network	29
Setting up Dial-up	36
AT Command List.....	47

About Manual for PC connection setting

This manual describes necessary information for data communication using the FOMA SO705i and how to install "FOMA communication setting file" and "FOMA PC setting software" provided in the provided CD-ROM.

The procedures or screens may vary depending on your environment.


About Data Communication Available for the FOMA Terminal

Available data communication

Available data communication between the FOMA terminal and PCs is classified in 3 categories: data exchange (OBEX™ communication), packet communication and 64K data communication.

Data exchange (OBEX™ communication)

The data such as images, music files, phonebook entries, mails, and more can be exchanged with equipment such as other FOMA terminals and PCs.

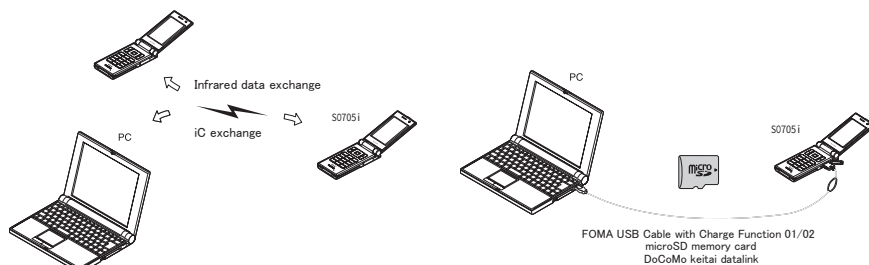

Packet communication

Packet communication is charged according to the amount of data sent and received, and the data is received at the maximum speed of 3.6Mbps and sent at the maximum speed of 384kbps (The communication speed is 384kbps at maximum for both sending and receiving outside FOMA HIGH-SPEED area.). This is suitable for exchanging small amount of data at high speed.


- When you use packet communication with DoCoMo PDA "sigmarion III" or "musea", the communication speed is 384kbps at maximum for both sending and receiving. It is not compatible with FOMA HIGH-SPEED Area communication.

You can also access a corporate LAN connected to the FOMA network.

Use an access point that supports FOMA packet communication, such as DoCoMo Internet connection service "mopera U" or "mopera" (When you use access points for "mopera", the communication speed is 384kbps at maximum for both sending and receiving.).

Packet communication is performed via the FOMA USB Cable with Charge Function 01/02 (optional) to a PC or via a dedicated cable connection to a PDA.

*Note that the communication charge can become very expensive when large files are sent and received.

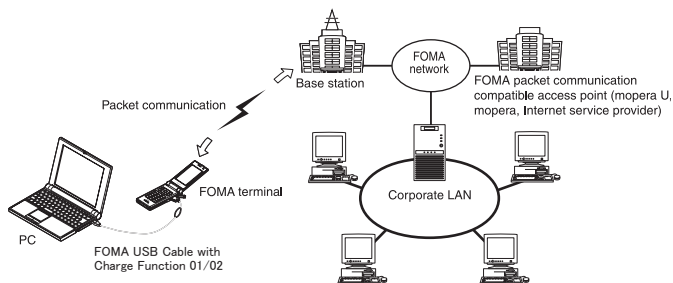


64K data communication

64K data communication is charged according to the length of time the line is connected, regardless of the amount of data.

Use an access point that supports FOMA 64K data communication, such as DoCoMo Internet connection service "mopera U" or "mopera", or ISDN synchronized 64K access point.

64K data communication is performed via the FOMA USB Cable with Charge Function 01/02 to a PC or via a dedicated cable connection to a PDA.

*Note that the communication charge can become very expensive when the line is connected for a long time.

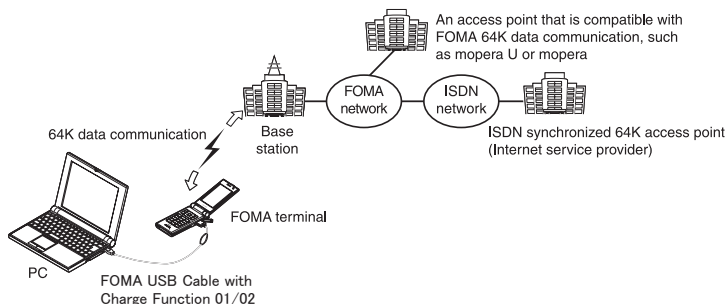

NOTE

- The communication speed is 384kbps at maximum for receiving and 64kbps at maximum for sending outside the FOMA service area and overseas.
- Select IP connection method when you perform packet communication overseas. (Packet communication using PPP connection is not supported.)
- 64K data communication is not available overseas.

Notice before using

Internet service provider fees

In addition to FOMA service charges, you may need to pay user fees to an Internet service provider to use the Internet. These fees must be paid directly to the Internet service provider in addition to service fees of FOMA service. Contact your Internet service provider for details.

DoCoMo Internet connection service "mopera U" or "mopera" is available. "mopera U" is a pay service for which you need to apply. "mopera" is a free service for which you do not need to apply.

Setting an access point (e.g. Internet service provider)

Packet communication and 64K data communication use different access points. If you are using packet communication, use an applicable access point for it; if 64K data communication, use an access point for FOMA 64K data communication or ISDN synchronized 64K.

- You cannot use DoPa access points.

User authorization when accessing network

Some access points may require your user authorization (ID and password) when connecting. Use communication software (Dial-up network) to enter your ID and password. ID and password will be provided by your Internet service provider or the network administrator. Contact the Internet service provider or network administrator for details.

Access authorization when using the browser

To view FirstPass compliant sites on your PC's browser, FirstPass (user certification) for access authorization is needed. Install the FirstPass PC software from the attached CD-ROM and conduct the setting. For details, refer to "FirstPassManual" (PDF format) under the "FirstPassPCSoft" folder provided in the CD-ROM. (The "FirstPassManual" is only in Japanese.) To view the "FirstPassManual" (PDF format), Adobe® Reader® is required. Unless you install it on your PC, install the Adobe® Reader® from the CD-ROM to read the document. For how to use it, refer to the "Adobe Reader help".

Required conditions for performing packet and 64K data communication

The following conditions are required to perform communication using the FOMA terminal (For communication in Japan):

- Your PC is compatible with the FOMA USB Cable with Charge Function 01/02 (optional).
- You are in the FOMA service area.
- For packet communication, the access point supports FOMA packet communication.
- For 64K data communication, the access point supports FOMA 64K data communication or ISDN synchronized 64K.

However, depending on congestion of the base station or weaker signal strength, you cannot perform communication even when the above conditions are satisfied.

Before Using

Operational environment

The PC operation environment to use data communication is as shown below:

PC unit	• PC/AT compatible model with CD-ROM drive • USB port (compliant to Universal Serial Bus Specification Rev1.1) • Display resolution of 800 dots wide × 600 dots high, High Color (65,536 colors) is recommended
OS ^{*1}	• Windows 2000 (Japanese version) • Windows XP (Japanese version) • Windows Vista (Japanese version)
Required memory	• Windows 2000: 64M bytes or higher^{*2} • Windows XP: 128M bytes or higher^{*2} • Windows Vista: 512M bytes or higher^{*2}
Hard disk space	• 5M bytes or higher^{*2}

*1 : The proper operations on the upgraded OS are not guaranteed.

*2 : The required memory and necessary hard disk space may differ depending on the PC's system configuration.


- Microsoft Internet Explorer 6.0 or later is recommended to run the menu (For Windows Vista, Microsoft Internet Explorer 7.0 or later is recommended.). If the menu screen does not appear even when you insert the CD-ROM, use the following procedure:

- ① Open "スタート" (Start) → "マイコンピュータ" (My Computer)
For Windows Vista, open " " → "コンピュータ" (Computer)
- ② Right-click the CD-ROM icon and select "開く" (Open)
- ③ Double-click "index.html"

When the CD-ROM is inserted to the PC, the warning screen as shown right may appear. This warning is displayed according to the security setting of the Internet Explorer. There is no matter with using the software. Click "はい" (Yes).

* This screen is an example when using Windows XP.

The warning screen may differ depending on the environments of your PC.

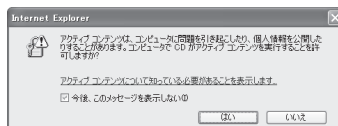

NOTE

- You can transmit data with the FOMA terminal connected to the DoCoMo PDA "musea" or "sigmarion III". Update "musea" when you connect it to a FOMA terminal. For how to update it and other details, visit the DoCoMo website.
- This FOMA terminal is not compatible with Remote Wakeup function.
- This FOMA terminal is not compatible with the FAX communication.

Required devices

The following hardware and software, in addition to the FOMA terminal and a PC, are required.

- "FOMA USB Cable with Charge Function 01/02" (optional) or "FOMA USB Cable" (optional)
- Provided CD- ROM "CD-ROM for FOMA SO705"

NOTE

- Purchase the specified "FOMA USB Cable with Charge Function 01/02" or "FOMA USB Cable". The USB cable for PC cannot be used because the shape of the connector is different.
- This manual gives an example when you use "FOMA USB Cable with Charge Function 01/02".
- The FOMA USB Cables may not function properly when connected to a USB HUB.

Checking the Procedure

In data communication, the connection is made through a dial-up connection with Internet service providers or LANs that support FOMA data communication.


■ About the “CD-ROM for FOMA SO705i”

- The CD-ROM contains the FOMA communication setting file (drivers), FOMA PC setting software and FirstPass PC software.
- The FOMA communication setting file is software (driver) needed for connecting the FOMA terminal with a PC via a FOMA USB Cable with Charge Function 01/02 (optional) to carry out packet communication, 64K data communication and data transfer (OBEX™ communication). Installing the FOMA communication setting file embeds each driver into Windows.
Using the FOMA PC setting software, you can easily set up packet communication and 64K data communication and create a dial-up connection.

Flow chart for completing the data communication setup


■ Data exchange (OBEX™ communication)

Install the FOMA communication setting file to use the FOMA USB Cable with Charge Function 01/02 (optional).

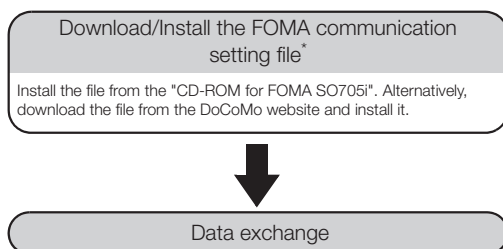

* : Install DoCoMo keitai datalink in addition.

■ Packet communication and 64K data communication

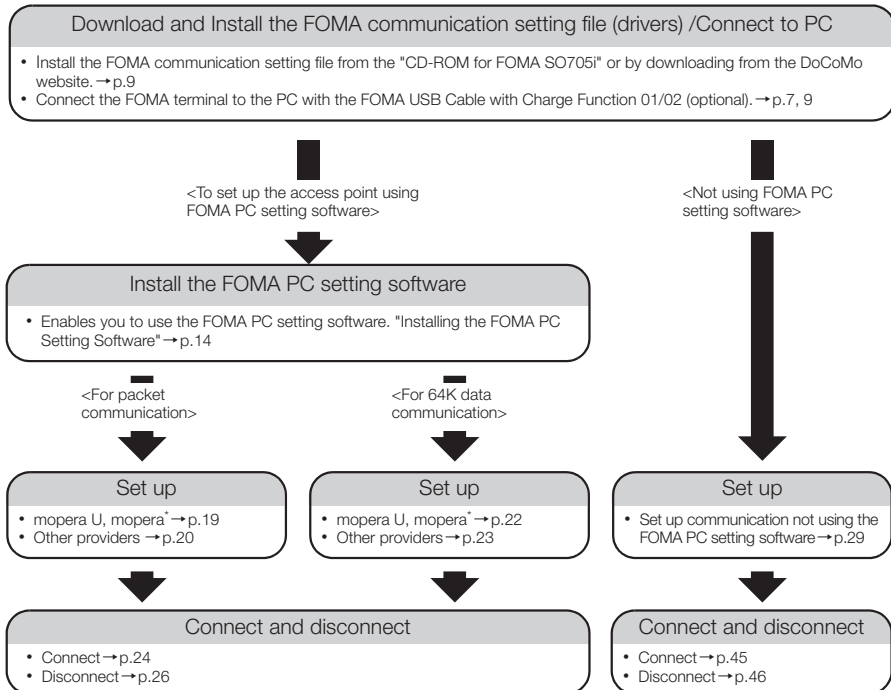

* : To use Internet with the FOMA terminal and PC connected, "mopera U" (you need to apply for) is useful, which supports broadband connection, etc. Consider the plan in which you are charged only in a month when you use the service. If you use "mopera" for which you do not need to apply, you can access Internet immediately.
For more information, visit the DoCoMo website.


Setting the USB mode setting to "Communication mode"

- Set the mode before connecting to PC.

1  ► "Settings" ► "External connection" ► "USB mode setting" ► "Communication mode"

Connecting the devices

The following procedure explains how to connect the FOMA USB Cable with Charge Function 01/02 (optional).

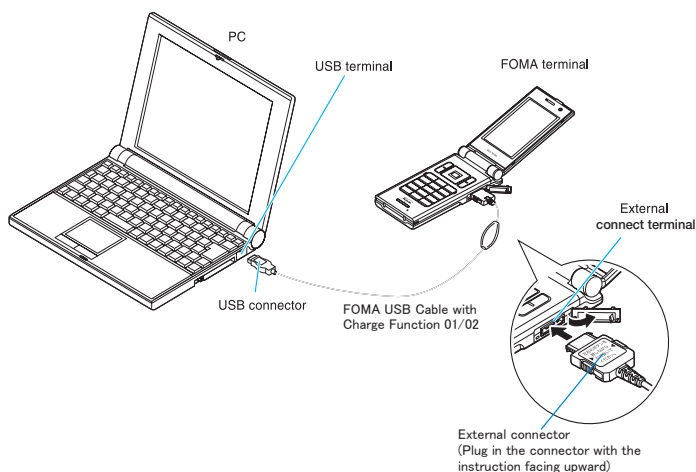

- 1** Open the external connector cap of the FOMA terminal
- 2** Check the orientation of the external connector of the FOMA terminal, then insert the external connector of the FOMA USB Cable with Charge Function 01/02 horizontally until you hear a click
- 3** Connect the USB connector of the FOMA USB Cable with Charge Function 01/02 to the USB terminal of your PC


" " appears on the FOMA terminal when the FOMA USB Cable with Charge Function 01/02 is connected.

NOTE

- " " appears on the FOMA terminal display when the FOMA communication setting file is installed and the connection with a PC is recognized.

Disconnecting the devices

The following procedure explains how to disconnect the FOMA USB Cable with Charge Function 01/02 (optional).

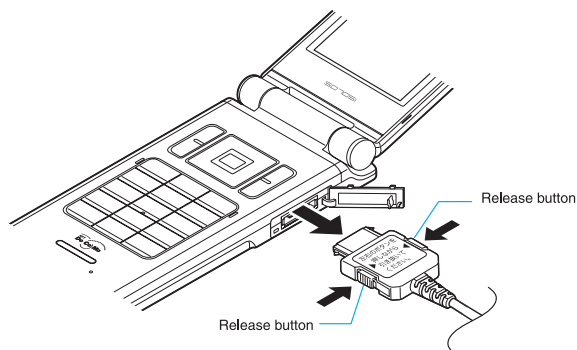

- 1** Remove the FOMA USB Cable with Charge Function 01/02 from the USB terminal of the PC
- 2** Pull the FOMA USB Cable with Charge Function 01/02 out horizontally while pressing the release buttons of the external connector of FOMA USB Cable
- 3** Close the external connector cap of the FOMA terminal

NOTE

- When you connect and disconnect the FOMA USB Cable with Charge Function 01/02 repeatedly, wait for a while in each step because the FOMA terminal may not recognize the PC correctly.
- Do not disconnect the FOMA USB Cable with Charge Function 01/02 during data communication because this may cause the disconnection of communication, malfunction or loss of data.
- Keep pressing the release buttons of the external connector of the FOMA USB Cable with Charge Function 01/02 when pulling it out of the external connector of the FOMA terminal. Using excessive force to pull the cable may cause malfunction.

Setting the PC

Installing the FOMA communication setting file (drivers)

- When installing FOMA communication setting file, be sure to log on as Administrator. If you attempt to install the file with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.
- You can download the FOMA communication setting file from the DoCoMo website.

1 Start up Windows and insert the "CD-ROM for FOMA SO705i" in the CD-ROM drive of your PC

This screen will automatically appear.



2 Click "データリンクソフト・各種設定ソフト" (Setup software)

3 Click "インストール" (Install) of "FOMA通信設定ファイル (USBドライバ)" (FOMA communication setting file (USB driver))

4 Double-click "FOMAIinst.exe" in the appeared folder

It is displayed as "FOMAIinst" depending on the setting of your PC.

5 Upon confirming the software license agreement, click "同意する" (Agree) to agree to it

If you click "同意しない" (Not agree), the installation is canceled.

6 Turn on the FOMA terminal and then connect the FOMA USB Cable with Charge Function 01/02 (optional) to your FOMA terminal

7 After the message requesting to connect the FOMA terminal to PC appears, connect the FOMA USB Cable with Charge Function 01/02 to the USB terminal of your PC

Installing the drivers automatically starts.

After drivers are successfully installed, FOMA byte counter can be installed successively. To install FOMA byte counter, click "インストールする (推奨)" (Install (Recommended)). Click "完了" (Complete) not to install it.

Proceed to the "Checking the installed driver" (p.10) for further steps.

Checking the installed driver

Check that the FOMA communication setting file (drivers) has been correctly installed. This section describes an example using Windows XP.

1 Select "スタート" (Start) → "コントロールパネル" (Control Panel)

For Windows Vista

Select "スタート" (Start) → "コントロールパネル" (Control Panel)

For Windows 2000

Select "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)

2 Click the "システム" (System) icon in "パフォーマンスとメンテナンス" (Performance and maintenance)

For Windows Vista

Open "システムとメンテナンス" (Systems and maintenance) in the "コントロールパネル" (Control Panel)

For Windows 2000

Open "システム" (System) in the "コントロールパネル" (Control Panel)

3 Click the "ハードウェア" (Hardware) tab and click "デバイスマネージャ" (Device manager)

For Windows Vista

Select "デバイスマネージャ" (Device Manager) and click "続行" (Continue)


For Windows 2000

Click the "ハードウェア" (Hardware) tab and click "デバイスマネージャ" (Device manager)

4 Click each device to check the installed driver name

Check that all the driver names are displayed under "ユニバーサルシリアルバスコントローラ" (Universal Serial Bus Controller) or "USB (Universal Serial Bus) コントローラ" (USB (Universal Serial Bus) controller), "ポート (COMとLPT)" (Ports (COM& LPT)) and "モデム" (Modems).

Check the driver name and proceed to "About the FOMA PC Setting Software" (p.12).

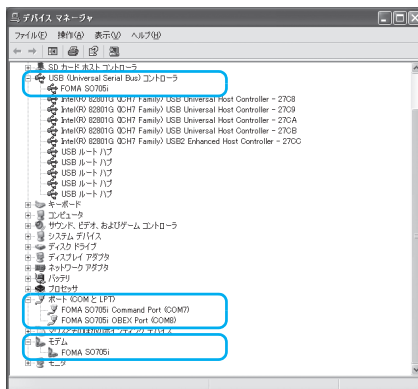

Device name	Driver name
ユニバーサルシリアルバスコントローラ or USB (Universal Serial Bus) コントローラ	• FOMA SO705i
ポート (COMとLPT)	• FOMA SO705i Command Port • FOMA SO705i OBEX Port
モデム	• FOMA SO705i

NOTE

- When you check the above, if not all the driver names appear, follow the uninstall instructions (p.11) to delete the FOMA communication setting file and install the proper file.

Uninstalling the FOMA communication setting file (drivers)

If necessary (when updating the drivers, etc.), uninstall the drivers as follows. The procedure for uninstalling from a Windows XP machine is described as an example.

- If you attempt to execute "プログラムの追加と削除" (Add and remove applications) while connecting to the FOMA terminal, the uninstall program does not run.
- When uninstalling FOMA communication setting file, be sure to log on as Administrator. If you attempt to uninstall the file with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.

1 If the FOMA terminal and the PC are connected by the FOMA USB Cable with Charge Function 01/02 (optional), remove the FOMA USB Cable with Charge Function 01/02

2 Start "プログラムの追加と削除" (Add and remove applications) on the Windows

Click "スタート" (Start) → "コントロールパネル" (Control Panel) → "プログラムの追加と削除" (Add and remove applications)

For Windows Vista

Click "🔍" → "コントロールパネル" (Control Panel) → "プログラムのアンインストール" (Uninstall a program)

For Windows 2000

Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel) → "アプリケーションの追加と削除" (Add and remove applications)

3 Select "FOMA SO705i USB" and click "変更と削除" (Change and delete)

For Windows Vista

Select "FOMA SO705i USB" and click "アンインストールと変更" (Uninstall/Change) and then "続行" (Continue)

For Windows 2000

Select "FOMA SO705i USB" and click "変更と削除" (Change and delete)

4 Click "OK" to uninstall

To cancel uninstallation, click "キャンセル" (Cancel).

5 Click "はい" (Yes) to restart Windows

Now the uninstallation is completed.

If you click "いいえ" (No), restart Windows manually.

NOTE

- When "FOMA SO705i USB" is not displayed in the "プログラムの追加と削除" (Add and remove applications) on the Windows, perform the following procedure:

① Insert the "CD-ROM for FOMA SO705i" in the CD-ROM drive of your PC

② Open "スタート" (Start) → "マイコンピュータ" (My Computer)

For Windows Vista, open "🔍" → "コンピュータ" (Computer)

③ Right-click the CD-ROM icon and select "開く" (Open)

④ Open "SO705i_USB_Driver" → "Drivers" → "Win2k_XP" folder in the CD-ROM

For Windows Vista, open "SO705i_USB_Driver" → "Drivers" → "WinVista32" folder

⑤ Double-click "so705iun.exe"

* : It is displayed as "so705iun" depending on the setting of your PC.

About the FOMA PC Setting Software

By using the FOMA PC setting software, you can easily set up the followings:

- You can also set up packet communication and 64K data communication without using the FOMA PC setting software. → p.29



See p.7 for the connection between the FOMA terminal and PC.

かんたん設定 (Easy settings)

The guide walks you through the procedures for "FOMAデータ通信用ダイヤルアップの作成" (Making a new dial-up connection for FOMA data communication) and "通信設定最適化" (Optimize communication settings) together.

通信設定最適化 (Optimize communication settings)

Optimizes the communication settings of a PC before using "FOMA packet communication".

To get the most out of communication performance, it is necessary to optimize communication settings.

接続先 (APN) の設定 (Access Point Name (APN) settings)

Sets the access point name (APN) required for packet communication.

Unlike 64K data communication, a normal phone number is not used for FOMA packet communication access point. Before you connect, register the APN (Access Point Name) of each access point in the FOMA terminal and assign its registration number (cid) to the connection point phone number field.

As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.

cid [Context Identifier] ... a number used to manage the Access Point Name (APN) for the packet communication registered in the FOMA terminal. It is set when registering the APN in the FOMA terminal.

NOTE

- When the old version of FOMA PC setting software (version 4.0.0 or older, hereafter referred to Previous FOMA PC setting software) is installed, uninstall it in advance.

Procedures ranging from installation of the FOMA PC setting software to connection to the Internet

STEP 1 Installing software



STEP 2 Setting preparation



STEP 3 Various settings



STEP 4 Connecting

Install the "FOMA PC setting software"

See p.14 for installation details.

When the "Previous FOMA PC setting software" is installed, uninstall it before installing the "FOMA PC setting software Ver4.0.0".

When the "Previous FOMA PC setting software" is installed, you cannot install the "FOMA PC setting software Ver4.0.0".

If a screen appears indicating that "Previous W-TCP setting software" or "Previous APN setting software" is installed, see p.15.

Make preparations for making various settings

Before making various settings, ensure that the FOMA terminal is connected to the PC and has been properly recognized by the PC.

See p.7 for how to connect the FOMA terminal to the PC.

See "Setting the PC" (p.9) for how to make the PC recognize the FOMA terminal properly.

If the FOMA terminal is not properly recognized by the PC, you cannot make various settings nor perform communication.

In this case, see p.9 and install the communication setting file.

Set according to the communication method you use

Easy settings: "Settings for Packet communication using mopera U or mopera" → p.19

Easy settings: "Settings for Packet communication using other providers" → p.20

Easy settings: "Settings for 64K data communication using mopera U or mopera" → p.22

Easy settings: "Settings for 64K data communication using other providers" → p.23

For other settings, see p.27 or the following pages.

Connect to the Internet

See p.24 for the executing communication.

Installing the FOMA PC Setting Software

- Check the operating environment prior to the installation of the FOMA PC setting software. → p.4
- When installing the "FOMA PC setting software", be sure to log on as Administrator. If you attempt to install the software with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.

1 Insert the CD-ROM in the CD-ROM drive of the PC

This screen will automatically appear.



2 Click "データリンクソフト・各種設定ソフト" (Data Link Software/Various Settings Software)

3 Click "インストール" (Install) of "FOMA PC 設定ソフト" (FOMA PC setting software)


When clicking "インストール" (Install), the warning screen as shown below may appear. This warning is displayed according to the security setting of the Internet Explorer. There is no matter with using the software.

* This screen is an example when using Windows XP. The warning screen may differ depending on the environments of your PC.

When the "ファイルのダウンロード - セキュリティの警告" (Download file - Security warning) screen appears

Click "実行" (Execute).

For Windows Vista, click "実行" (Execute) and then "続行" (Continue).

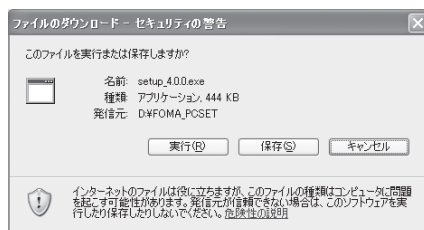

When the "Internet Explorer - セキュリティの警告" (Internet Explorer - Security warning) screen appears

Click "実行する" (Execute).

For Windows Vista, click "実行" (Execute) and then "続行" (Continue).



4 Click "次へ" (Next)

Before starting the setup process, make sure that no other program is currently running or resident. If there is any program running, click "キャンセル" (Cancel) to exit the program and resume installation. If a screen appears indicating that Previous W-TCP setting software or Previous APN setting software is installed, proceed to p.15.

5 Upon confirming the user agreement of "FOMA PC 設定ソフト" (FOMA PC setting software), click "はい" (Yes) to agree to it

If you click "いいえ" (No) and then click "はい" (Yes), the installation is canceled.
For Windows Vista, proceed to Step 7.

6 Click "次へ" (Next)

Select whether or not you want "通信設定最適化" (Optimize communication settings) to reside in the task-tray.

If you let it reside in the task-tray, click "次へ" (Next) with "タスクトレイに常駐する" (Let it reside in the task-tray) checked and continue with the installation. Even after installation, you can change the settings by selecting "メニュー" (Menu) → "「通信設定最適化」をタスクトレイに常駐させる" (Let Optimize communication settings reside in the task-tray) on the FOMA PC setting software.

(Note): This option is disabled when the "タスクトレイに常駐する" (Let it reside in the task-tray) setting is in effect.




If you let it reside in the task-tray, the 通信設定最適化 (Optimize communication settings) icon appears in the task-tray located at the bottom-right of the desktop.

7 Select the installation location and click "次へ" (Next)

If you want to change the location, click "参照" (Reference), specify the location and click "次へ" (Next).

8 Check the name of program folder and click "次へ" (Next)

If you want to change it, enter a new folder name and click "次へ" (Next).

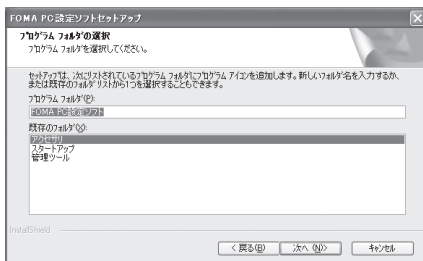


9 Click "完了" (Finish)

When the setup process is completed, the "FOMA PC 設定ソフト" (FOMA PC setting software) operation screen appears. You can specify various settings at this point.

Notes on installation of the FOMA PC setting software
 
<If the Previous W-TCP setting software is installed>



- Open "アプリケーション (プログラム) の追加と削除" (Add/Remove programs) and delete the old W-TCP setting software.

<If the Previous APN setting software is installed>



- When you click "OK", the previous APN setting software is automatically uninstalled, and the FOMA PC setting software will be installed.

<If the FOMA PC setting software is already installed>



- Click "OK", and the install is interrupted. Open "アプリケーション (プログラム) の追加と削除" (Add/Remove programs), uninstall the already installed "FOMA PC 設定ソフト" (FOMA PC setting software), and then reinstall the software.
- Perform the same procedure when an old version of "FOMA PC setting software" is installed.

<If the "キャンセル" (Cancel) button is clicked during installation>



- When you want to continue the installation, click "いいえ" (No). When you want to stop the procedure, click "はい" (Yes).

Confirming the version information of the FOMA PC setting software

1 Open "FOMA PC 設定ソフト" (FOMA PC setting software)

For Windows Vista and Windows XP

Open "スタート" (Start) or " " → "すべてのプログラム" (All programs) → "FOMA PC 設定ソフト" (FOMA PC setting software) → "FOMA PC 設定ソフト" (FOMA PC setting software)

For Windows 2000

Open "スタート" (Start) → "プログラム" (Program) → "FOMA PC 設定ソフト" (FOMA PC setting software) → "FOMA PC 設定ソフト" (FOMA PC setting software)

2 Open "メニュー" (Menu) → "バージョン情報" (Version information) of the toolbar

The version information of the FOMA PC setting software is displayed.

Uninstalling the FOMA PC Setting Software

If necessary (when upgrading the FOMA PC setting software, etc.), uninstall the software as follows. The procedure for uninstalling from a Windows XP machine is described as an example.

- When uninstalling the "FOMA PC setting software", be sure to log on as Administrator. If you attempt to uninstall the software with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.

1 Before uninstalling

For Windows XP and 2000, before starting the uninstallation process of the "FOMA PC設定ソフト" (FOMA PC setting software), the various changes made for FOMA must be returned to their default settings. For Windows Vista, proceed to Step 2.


(1) Disable the "通信設定最適化" (Optimize communication settings) in the task-tray

Right-click the "通信設定最適化" (Optimize communication settings) icon in the task-tray located at the bottom-right of the desktop and select "終了" (End).



(2) Exit any running program

If you try to begin uninstallation while the "FOMA PC setting software" or "通信設定最適化" (Optimize communication settings) is in operation, this screen appears. Cancel the uninstallation program and exit the respective programs.

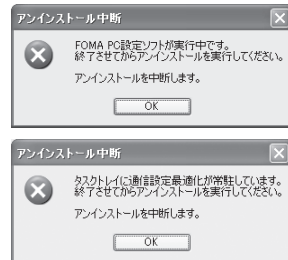

2 Start uninstallation

Open "スタート" (Start) → "コントロールパネル" (Control Panel) → "プログラムの追加と削除" (Add and remove programs)

For Windows Vista

Open "スタート" (Start) → "コントロールパネル" (Control Panel) → "プログラムのアンインストール" (Uninstall a program)

For Windows 2000

Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel) → "アプリケーションの追加と削除" (Add and remove applications)

3 Select "NTT DoCoMo FOMA PC 設定ソフト" (NTT DoCoMo FOMA PC setting software) and click "削除" (Delete)

For Windows Vista

Select "NTT DoCoMo FOMA PC設定ソフト" (NTT DoCoMo FOMA PC setting software) and click "続行" (Continue)

Select "NTT DoCoMo FOMA PC設定ソフト" (NTT DoCoMo FOMA PC setting software)



For Windows 2000

Select "NTT DoCoMo FOMA PC設定ソフト" (NTT DoCoMo FOMA PC setting software) and click "変更と削除" (Change and delete)


4 Check the program name to be deleted and click "はい" (Yes)

Uninstallation starts.



5 Click "完了" (Finish)



Uninstallation of the "FOMA PC setting software" is completed.

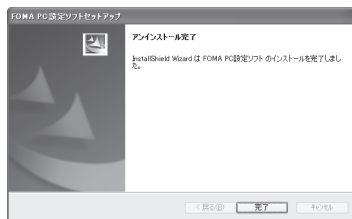

NOTE

- Canceling "通信設定最適化" (Optimize communication settings)
For Windows XP and 2000, this screen appears when "通信設定最適化" (Optimize communication settings) is performed. Usually, click "はい" (Yes) to uninstall and cancel the optimization.

 The cancellation of communication settings optimization is valid after the restart.

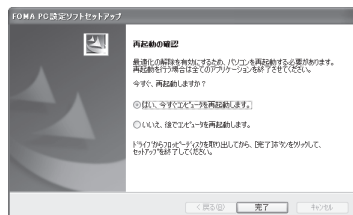

How to Set Various Settings

The FOMA terminal needs to be connected to your PC via FOMA USB Cable with Charge Function 01/02 (optional), and the FOMA communication setting file (drivers) needs to be properly recognized on the device of your PC to specify various settings.

1 Open "FOMA PC 設定ソフト" (FOMA PC setting software)


This operation screen appears when the software is started.

For Windows Vista and Windows XP

Open "スタート" (Start) or "すべてのプログラム" (All programs) → "FOMA PC 設定ソフト" (FOMA PC setting software) → "FOMA PC 設定ソフト" (FOMA PC setting software)

For Windows 2000

Open "スタート" (Start) → "プログラム" (Program) → "FOMA PC 設定ソフト" (FOMA PC setting software) → "FOMA PC 設定ソフト" (FOMA PC setting software)

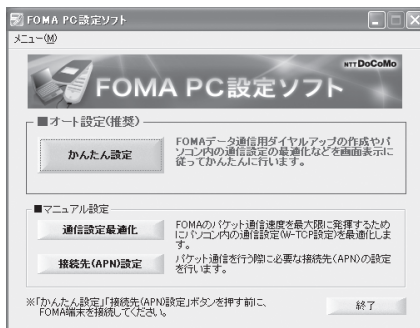

Easy settings: "Settings for Packet communication using mopera U or mopera"

- This section explains how to make settings for a packet communication of 3.6Mbps maximum. The DoCoMo Internet connection service "mopera U" or "mopera" will be used as a provider (When you use "mopera", the communication speed is 384kbps at maximum for both sending and receiving.). Packet communication: Enables high-speed packet communication of up to 3.6Mbps for receiving and up to 384kbps for sending (The communication speed is 384kbps at maximum for both sending and receiving outside FOMA HIGH-SPEED area.). Since you will be charged according to the amount of data transferred, you can enjoy data communication without worrying about time.
- Note that the communication charge can become expensive if "packet communication" is used to communicate large volumes of data such as to view sites and websites containing images or to download files.

1 Click "かんたん設定" (Easy settings)

2 Select "パケット通信 (HIGH-SPEED対応端末)" (Packet communication (HIGH-SPEED phone)) and click "次へ" (Next)

For Windows Vista

Select "パケット通信" (Packet communication) and click "次へ" (Next)

3 Select "『mopera U』 への接続" ('mopera U' access) or "『mopera』 への接続" ('mopera' access) and click "次へ" (Next)

See p.20 if you use a provider other than mopera U or mopera.

4 Click "OK"

The access point (APN) settings will be obtained from the FOMA terminal which is connected to the PC. Wait for a while.

5 Enter the connection name, select the connection method and click "次へ" (Next)

You can specify the name of the connection. Enter a name easy to recognize in the "接続名" (Connection name) column.

You cannot use the following reserved characters: #/: * ? ! < > | " (half-pitch only).

Select the "発信者番号通知" (Caller ID setting) and "接続方式" (Connection method).

As for "発信者番号通知" (Caller ID setting), select "設定しない (推奨)" (OFF (Recommended)) for overseas use.

As for "接続方式" (Connection method), mopera U supports both "PPP接続" (PPP connection) and "IP接続" (IP connection). Select "IP接続" (IP connection) for overseas use. mopera supports "PPP接続" (PPP connection) only, therefore is not available overseas.

6 Specify a user ID and password, select the accessible user and click "次へ" (Next)

You can leave user ID and password blank for the mopera U or mopera connection.

When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)
Proceed to Step 8.

7 Check "最適化を行う" (Optimize the setting) and click "次へ" (Next)


Optimize the communication settings of a PC to use FOMA packet communication. If they are already optimized, this screen does not appear.

8 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.

Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.

To change any setting, click "戻る" (Back).

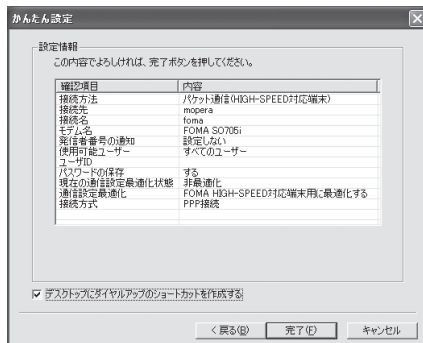

9 Click "OK"

You need to restart the PC to enable the optimized settings. If the restart selection screen appears, click "はい" (Yes).

Execute communication. → p.24

Easy settings: "Settings for Packet communication using other providers"

1 Click "かんたん設定" (Easy settings)

2 Select "パケット通信 (HIGH-SPEED 対応端末)" (Packet communication (HIGH-SPEED phone)) and click "次へ" (Next)

For Windows Vista

Select "パケット通信" (Packet communication) and click "次へ" (Next)

3 Select "その他" (Other) and click "次へ" (Next)

4 Click "OK"

The access point (APN) settings will be obtained from the FOMA terminal which is connected to the PC. Wait for a while.

5 Specify the packet communication settings

After the terminal setting is completely acquired, the screen "パケット通信設定" (Packet communication setting) appears.

Enter any name in "接続名" (Connection name). You cannot use the following reserved characters: ¥/: * ? ! < > | " (half-pitch only).


For the caller ID settings, follow the instructions from the provider.

Select "設定しない" (OFF) for overseas use.



6 Click "接続先 (APN) 設定" (Specify the access point (APN))

As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10. Open the "接続先 (APN) の追加" (Add the access point (APN)) screen by clicking the "追加" (Add) button, select the connection method, specify an access point name that supports FOMA packet communication and click "OK". The "接続先 (APN) 設定" (Specify the access point (APN)) screen reappears. Half-pitch alphanumeric characters, hyphen (-) and dots (.) can only be entered for the access point.

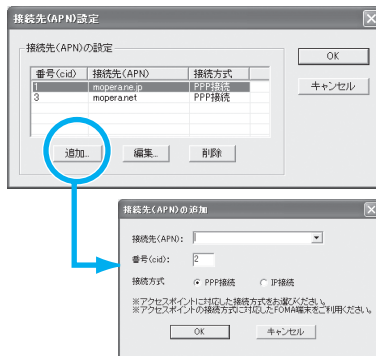

7 Select the Access point (APN) and click "OK"

The screen of Step 5 reappears.

The access point (APN) entered in Step 6 is displayed on "接続先 (APN) の選択" (Select the access point (APN)).

8 Confirm the Access point (APN) on "接続先 (APN) の選択" (Select the access point (APN)) and click "次へ" (Next)

To specify advanced settings (TCP/IP settings)

Clicking "詳細情報の設定" (Detailed settings) displays the setup screen for "IP address" and "Name server". If they must be input as the provider or corporate LAN information, follow the input information directions and enter the addresses.

9 Specify a user ID and password, select the accessible user and click "次へ" (Next)


When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

When setting the user ID and password, input the correct, case-sensitive data provided by the service provider.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)

Proceed to Step 11.

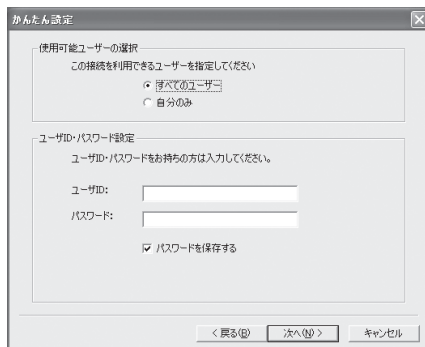

10 Check "最適化を行う" (Optimize the setting) and click "次へ" (Next)


Optimize the communication settings of a PC to use FOMA packet communication. If they are already optimized, this screen does not appear. Proceed to Step 11.

11 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.

Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.

To change any setting, click "戻る" (Back).

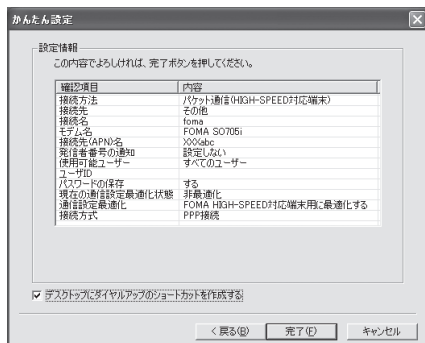

12 Click "OK"

You need to restart the PC to enable the optimized settings. If the restart selection screen appears, click "はい" (Yes).

Execute communication. → p.24

Easy settings: "Settings for 64K data communication using mopera U or mopera"

- This section explains how to specify settings for 64K data communication at the maximum speed of 64kbps. The DoCoMo Internet connection service "mopera U" or "mopera" will be used as a provider.
- 64K data communication is charged according to the length of time you connected.
- Note that the communication charge can become expensive if "64K data communication" is used for a long time.

1 Click "かんたん設定" (Easy settings)

2 Select "64K データ通信" (64K data communication) and click "次へ" (Next)

3 Select "『mopera U』への接続" ('mopera U' access) or "『mopera』への接続" ('mopera' access) and click "次へ" (Next)

See p.23 if you use a provider other than mopera U or mopera.

4 Enter the access point name and select the modem, and click "次へ" (Next)

The "64K データ通信設定" (64K data communication setting) screen appears. You can specify the name of the connection. Enter a name easy to recognize in the "接続名" (Connection name) column.

You cannot use the following reserved characters: ¥/: * ? ! < > | " (half-pitch only).

When using the FOMA USB Cable with Charge Function 01/02 (optional), confirm that modem name is set to "FOMA SO705i".

Select "設定しない" (OFF) or "186を付加する" (Add 186) for the caller ID settings.




5 Specify a user ID and password, select the accessible user and click "次へ" (Next)

You can leave user ID and password blank for the mopera U or mopera connection.

When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)

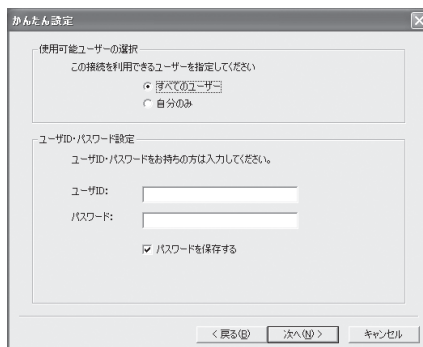


6 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.

Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.

To change any setting, click "戻る" (Back).

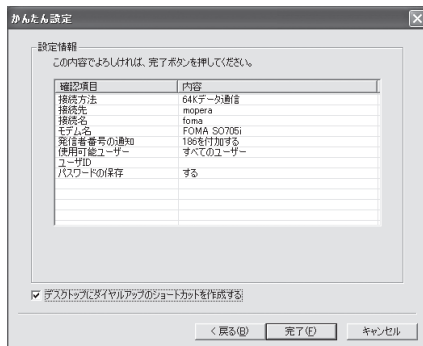

7 Click "OK"

Execute communication. → p.24

Easy settings: "Settings for 64K data communication using other providers"

1 Click "かんたん設定" (Easy settings)

2 Select "64Kデータ通信" (64K data communication) and click "次へ" (Next)

3 Select "その他" (Other) and click "次へ" (Next)

4 Enter the dial-up information and click "次へ" (Next)

Register the following items in order to connect to a service provider with ISDN synchronous 64K access points other than mopera U or mopera when creating a dial-up;

- "接続名" (Connection name) (optional)
- "モデムの選択" (Modem Selection) (FOMA SO705i)
- "電話番号" (Phone number)
- Notifying or not notifying the caller ID for dial-up connection

You cannot use the following reserved characters: ¥/: * ? ! < > | " (half-pitch only).

Enter the correct information according to the provider information. Enter the correct, case-sensitive phone number in half-pitch.

For the caller ID settings, follow the instructions from the provider.



To specify advanced settings (TCP/IP settings)

Clicking "詳細情報の設定" (Detailed settings) displays the setup screen for "IP address" and "Name server". If they must be input as the provider or corporate LAN information, follow the input information directions and enter the addresses.


5 Specify a user ID and password, select the accessible user and click "次へ" (Next)

When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

When setting the user ID and password, input the correct, case-sensitive data provided by the service provider.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)

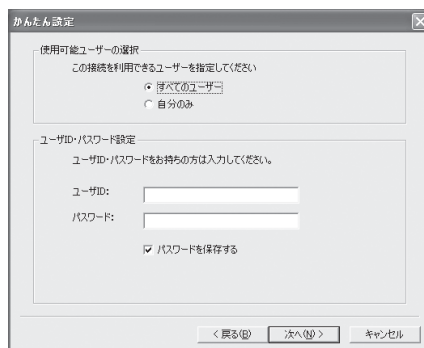


6 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.

Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.

To change any setting, click "戻る" (Back).

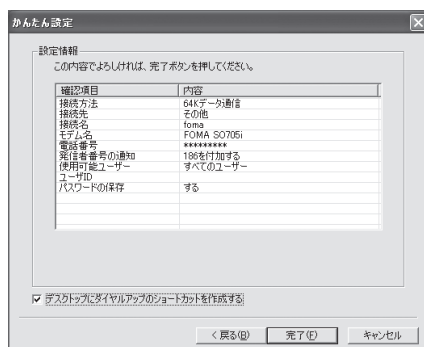

7 Click "OK"

Execute communication. → p.24

Executing Set Data Communication

1 Double-click the connection icon on the desktop



If the connection icon does not appear on the desktop, use the following procedure:

For Windows Vista

Open "☺" → "接続先" (Access point), select the access point and click "接続" (Connection)

For Windows XP

Open "スタート" (Start) → "すべてのプログラム" (All Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections) → Open the access point

For Windows 2000

Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワークとダイヤルアップ接続" (Network and dialup connection) → Open the access point

2 Click "ダイヤル" (Dial) and execute access operation

You can leave user name and password blank for the mopera U or mopera connection. If you select an Internet service provider other than mopera U, mopera or you use dial-up connection, enter the "ユーザー名" (User name) and "パスワード" (Password) and click "ダイヤル" (Dial).



<The Connecting screen appears>

While this screen appears, the log-on process such as confirmation of the user name and password is performed.



<Completion of the connection>


When the connection is complete, a message appears from the indicator of the taskbar located on the bottom-right of the desktop for a few seconds.

You can start browser software to view sites and websites or to use e-mail.

If this message does not appear, check "Setting up Dial-up Network" (p.29) and "Setting up Dial-up" (p.36).



- During packet communication, a different icon appears on the FOMA terminal depending on the communication conditions.

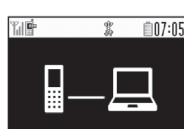

- ↑ (Communicating, sending data)
- ↓ (Communicating, receiving data)
- ↕ (Communicating, no data transfer)
- (Sending, or disconnecting)
- ← (Receiving, or disconnecting)

- " " appears on the FOMA terminal during 64K data communication.



NOTE

- When executing data communication by using the FOMA USB Cable with Charge Function 01/02 (optional), dialing from the dial-up icon is only valid for the FOMA terminal used when the icon is created. Therefore, to connect to another FOMA terminal, the communication setting file (drivers) must be installed again.

How to disconnect

Since just closing the browser on your PC may not disconnect, be sure to disconnect by the following procedure:

1 Double-click the dial-up icon in the task-tray

The connecting screen appears.

For Windows Vista

Open "  " → "接続先" (Access point)
Select the dial-up currently connected.



Dial-up icon

2 Click "切断" (Disconnect)



NOTE

- The communication speed displayed on the PC may be different from the actual communication speed.

When this happens

- Check the followings if you cannot connect to the network or dial-up successfully.

Problem	Points to check
"FOMA SO705i" is not recognized by the PC.	• Check if your PC satisfies the required operational environment (p.4). • Check if the FOMA communication setting file (drivers) is installed. • Check if the FOMA terminal is connected to the PC and the power is turned on. • Check if the FOMA USB Cable with Charge Function 01/02 (optional) is firmly connected. • Check if the USB mode setting (p.7) is set to "Communication mode".
Unable to connect with the access point.	• Check if the settings for the ID (user name) and password are correct. • Check if the FOMA USB Cable with Charge Function 01/02 (optional) is firmly connected. • If the access point requires the Caller ID, make sure that "184" is not added to the phone number. • Check if the box of "フロー制御を使う" (Use the flow control) of the modem property is checked. • Check if the APN is set correctly. • If you still cannot connect to the other end after checking the above, consult with the Internet service provider or network administrator about the setting method.

Optimizing Communication Settings

"通信設定最適化" (Optimize communication settings) is a "TCP parameter setup tool" to optimize the transmission capability of TCP/IP when "Packet communication" is carried out on the FOMA network. The communication settings by this software are required to make the most of communication performance of the FOMA terminal on Windows XP or 2000.

- Cancel optimization beforehand when you perform the PC connection overseas.


Setting up and canceling optimization

The procedure for setting up and canceling optimization from a Windows XP machine is described as an example.

1 Start the program

- (1) If you are operating from "FOMA PC設定ソフト" (FOMA PC setting software)

Click "通信設定最適化" (Optimize communication settings) of "マニュアル設定" (Manual setup) after starting the program.

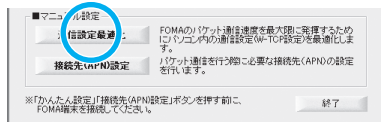

- (2) If you are operating from the task-tray

Click the "通信設定最適化" (Optimize communication settings) icon in the task-tray located at the bottom-right of the desktop to start the program.



 

2 Proceed with the following

Close all the programs open and follow the screen instructions to restart the PC. The optimized system settings become valid after the restart.

- (1) If the system settings have not been optimized


Select "FOMA HIGH-SPEED対応端末 (受信最大3.6Mbps)" (FOMA HIGH-SPEED phone (up to 3.6Mbps for receiving)) and click "最適化を行う" (Optimize the setting).

"HIGH-SPEED対応端末の確認" (Confirmation for HIGH-SPEED phone) screen appears. Click "はい" (Yes) to optimize the system settings.

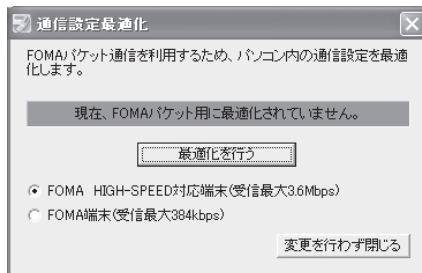

- (2) If the system settings have been optimized

When canceling the optimization settings to execute communication via a device other than a FOMA terminal, click "最適化を解除する" (Cancel optimization). Close all the programs open and restart the PC to enable the cancellation of the optimization.

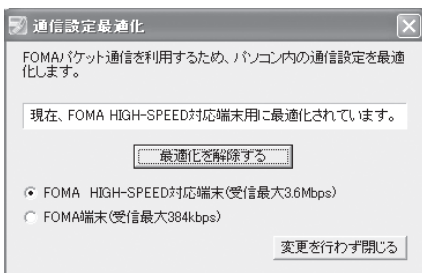


Access Point Name (APN) Settings

Set up the access point (APN) for packet communication. You can set up to 10 destinations and administer them by registering them into cid (Registration Numbers) 1 through 10.

- As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.

1 After starting "FOMA PC設定ソフト" (FOMA PC setting software), click "接続先(APN)設定" (Set up Access point (APN))

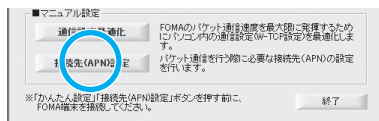

2 Click "OK" on the FOMA terminal settings acquisition screen

Automatically accesses the connected FOMA terminal and reads the registered Access point (APN) information.

It does not start if no FOMA terminal is connected.

3 Set up the access point (APN)



Adding/Editing/Deleting the Access point (APN)

• To add an access point (APN)

Click "追加" (Add) on the "接続先 (APN) 設定" (Set up Access point (APN)) screen.

• To edit a registered access point (APN)

Select the applicable access point (APN) from the list and click "編集" (Edit) on the "接続先 (APN) 設定" (Set up Access point (APN)) screen.

• To delete a registered access point (APN)

Select the applicable access point (APN) from the list and click "削除" (Delete) on the "接続先 (APN) 設定" (Set up Access point (APN)) screen.

You cannot delete the access point assigned to cid1 and cid3 (Even if you select cid3 and click "削除" (Delete), the access point is not deleted and remains "mopera.net").

Saving in File

If you want to back up the access point (APN) settings registered on the FOMA terminal and/or save the access point (APN) settings being edited, you can save the access point (APN) settings by setting from the "ファイル" (File) menu of the toolbar.

Reading from File

If you want to edit the saved access point (APN) settings and/or write into the FOMA terminal, you can read the access point (APN) settings saved on the PC by operating from the "ファイル" (File) menu of the toolbar.

Writing Access point (APN) information into FOMA terminal

Clicking "FOMA端末へ設定を書き込む" (Write settings into FOMA terminal) on the "接続先 (APN) 設定" (Set up Access point (APN)) screen allows you to write the displayed access point (APN) settings into the FOMA terminal.

Dial-up creating function

Select the added/edited access point (APN) on the "接続先 (APN) 設定" (Set up Access point (APN)) screen and click "ダイヤルアップ作成" (Create dial-up).

When the screen for writing into the FOMA terminal appears, click "はい" (Yes). After finishing writing into the FOMA terminal, the "パケット通信用ダイヤルアップの作成" (Create dial-up for packet communication) appears.

Enter any connection name you want and click "ユーザID・パスワードの設定" (Set up User ID/Password). Enter the user ID and password, and follow the onscreen instructions to configure the settings. You can leave the user ID and password blank for mopera U or mopera.

If your provider has given you instructions for setting IP and DNS information, click "詳細情報の設定" (Detailed settings) on the "パケット通信ダイヤルアップの作成" (Create dial-up for packet communication) screen, register necessary information and click "OK".

After entering the settings, click "FOMA端末へ設定を書き込む" (Write settings into FOMA terminal), confirm overwriting and start writing.

NOTE

- The APN settings (the access point for FOMA packet communication) are stored in the FOMA terminal. Therefore, the APN must be registered again if you connect to another FOMA terminal.
- When continuously using the dial-up setting created on the PC, register the same APN setting (cid setting) number with the FOMA terminal.

Setting up Dial-up Network

This section describes how to set up a dial-up connection for packet communication / 64K data communication without using the FOMA PC setting software. The flow of operation is described below.

- It is unnecessary to set up the dial-up network for 64K data communication. Go on to "Setting up Dial-up" (p.36).

About AT commands

- AT commands are commands for modem control. The FOMA terminal complies AT commands and supports some enhanced commands and its own AT commands.
- Entering an AT command allows you to set or confirm (display) the detail settings and the contents of the settings for the "Data communication" and FOMA terminal.

Checking the COM port

- To set up the access point (APN), you need to specify the COM port number assigned to "FOMA SO705i" (Modem) built in after installing the FOMA communication setting file (drivers). This section describes how to confirm the COM port number. The COM port confirmed here will be used in the access point (APN) set up (p.32).

● Preparation


- 1** Connect the FOMA USB Cable with Charge Function 01/02 (optional) to the FOMA terminal
- 2** Turn on the FOMA terminal, then connect the FOMA USB Cable with Charge Function 01/02 connected to the FOMA terminal to your PC

● To check the COM port on Windows Vista

- 1 Open " " → "コントロールパネル" (Control Panel)
- 2 Open "ハードウェアとサウンド" (Hardware and Sound) → "電話とモデムのオプション" (Telephone and modem options) in Control Panel
- 3 If the "所在地情報" (Address information) screen is displayed, enter "市外局番／エリアコード" (Area code) and click "OK"
- 4 Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA SO705i" and click "OK"

The COM port confirmed here will be used in the access point (APN) set up (p.32).

The contents displayed on the screen and the COM port number differ depending on the PC.

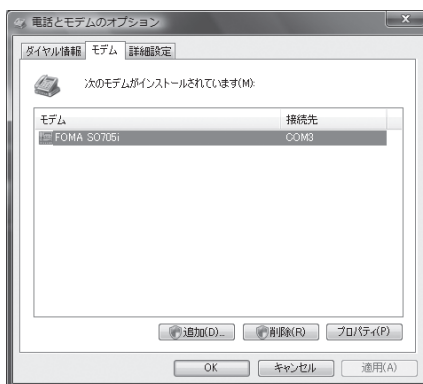


● To check the COM port on Windows XP

- 1 Open "スタート" (Start) → "コントロールパネル" (Control Panel)



- 2 Open "電話とモデムのオプション" (Telephone and modem options) from "プリンタとその他のハードウェア" (Printers and other hardware) in Control Panel

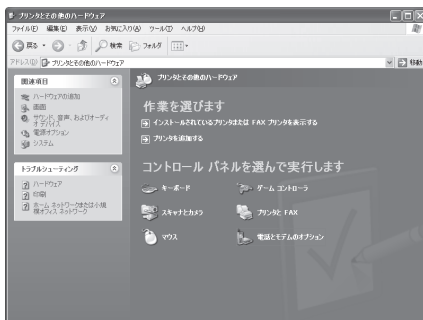

3 If the "所在地情報" (Address information) screen is displayed, enter "市外局番／エリアコード" (Area code) and click "OK"

4 Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA S0705i" and click "OK"

The COM port confirmed here will be used in the access point (APN) set up (p.32).


The contents displayed on the screen and the COM port number differ depending on the PC.



● To check the COM port on Windows 2000

1 Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)

2 Open "電話とモデムのオプション" (Telephone and modem options) in Control Panel

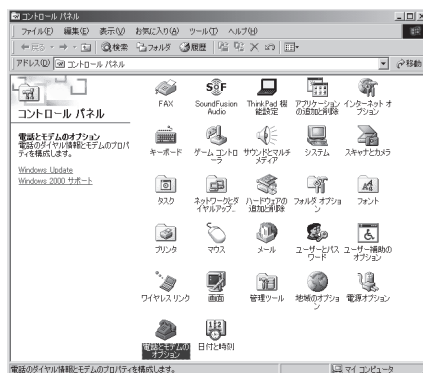

3 If the "所在地情報" (Address information) screen appears, enter "市外局番" (Area Code) and click "OK"

4 Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA SO705i" and click "OK"

The COM port confirmed here will be used in the access point (APN) set up (p.32).

The contents displayed on the screen and the COM port number differ depending on the PC.



Setting up the access point (APN)

Default setting	cid1 : mopera.ne.jp	cid3 : mopera.net	cid2, 4 to 10 : not set

Communication software to enter AT commands is required for the settings. This section describes how to set it up using "Hyper terminal" that comes with Windows.

- Windows Vista is not compatible with "Hyper terminal". For Windows Vista, set with compatible software. (Follow the instructions for the setting of the software.)

Access points <APN/cid>

- Normal telephone numbers are not used for access points for packet communication unlike 64K data communication. Set up APN instead of a telephone number for connection.
- The APN setting is just like registering a Phonebook for packet communication from a PC. Assign registration number (cid) 1 through 10 to register, which is used as a part of the access point number. As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.^{*1}
- APN is administered by "cid (administration numbers 1 through 10)". Specifying "*99** * <cid number> # " as the access point number enables the connection to the access point with the cid number.
- Specifying "*99** * 1 # " as the access point number for the mopera connection or "*99** * 3 # " for the mopera U connection enables you to use mopera or mopera U easily.^{*2}
- The APN setting registers the access point to the FOMA terminal just like registering other parties' information (telephone number, etc.) on a mobile phone. The following are comparisons with the Phonebook of the mobile phone:

		APN setting	Phonebook of mobile phone
Data to be registered		APN	Phone number
		cid	Memory number of Phonebook
		—	Other party's name
How to register	Register using PC	○ (FOMA PC setting software, etc.)	○ (Dedicated software required)
	Register using Mobile phone	× (Cannot even confirm)	○
How to use		Specify cid to connect	Look up Phonebook to call
		—	Enter the telephone number directly from the dial key on the FOMA terminal to call.

- Registered cid will be connection numbers in the dialup connection settings.
- Contact your Internet service provider or network administrator for an access point (APN) other than mopera U or mopera.

^{*1} : Set up the APN setting for the access point (Internet service provider) on the FOMA terminal in advance instead of entering APN in the Telephone Number column of "ダイヤルアップネットワーク" (Dial-up Network) for connection.

^{*2} : To connect to other Internet service providers, set the APN and assign it to cid2 or cid4 to cid10.

<Example: For Windows XP>

- 1 Connect the FOMA USB Cable with Charge Function 01/02 (optional) to the FOMA terminal
- 2 Turn on the FOMA terminal, then connect the FOMA USB Cable with Charge Function 01/02 connected to the FOMA terminal to the PC
- 3 Click "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ハイパーターミナル" (Hyper terminal) to start Hyper terminal

For Windows 2000

Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ハイパーターミナル" (Hyper terminal).

- 4 Select the "今後、このメッセージを表示しない" (Do not display this message again) checkbox and then click "はい" (Yes)
- 5 Enter any name in the "名前" (Name) column and click "OK"
"sample" is entered here as an example.



- 6 Select "FOMA SO705i" from "接続方法" (Connection method), and click "OK"

Click "キャンセル" (Cancel) after the connection screen appears.

If a COM port of "FOMA SO705i" can be selected

When Properties of the COM port is displayed, click "OK".

In this example, "COM3" is selected. See "Checking the COM port" (p.29) to confirm the actual COM port number of "FOMA SO705i" to be selected in "接続方法" (Connection method).



If a COM port of "FOMA SO705i" cannot be selected

Click "キャンセル" (Cancel) to close the "接続の設定" (Connection Settings) screen and then follow the steps below:

- (1) Select "ファイル" (File) menu → "プロパティ" (Properties)
- (2) Select "FOMA SO705i" in the "接続方法" (Connection method) column of the "接続の設定" (Connection Settings) tab on the "sampleのプロパティ" (sample Properties) screen
- (3) Uncheck "国/地域番号と市外局番を使う" (Use the Country/Region Code and Area Code)
- (4) Click "OK"



7 Enter the access point (APN) and press

Enter in the format of AT+CGDCONT=<cid>, "PDP_type", "APN"

<cid> : Enter any number from 2 or between 4 and 10.

Please be cautious because if cid has been already set, the setting will be overwritten.


"PDP_type" : Enter "PPP" or "IP".

"APN" : Put " " around the access point (APN) to enter.

If "OK" is displayed, the settings for the access point (APN) are completed.

Example: To enter APN named XXX.abc in cid Number2

Enter AT+CGDCONT=2,"PPP","XXX.abc"

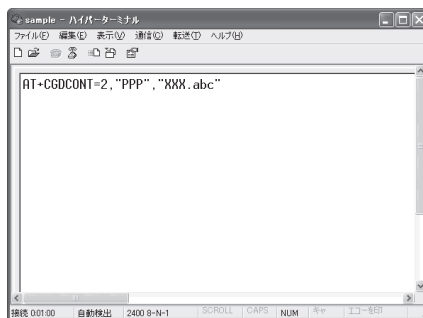

8 Confirm that "OK" appears and click "ハイパーターミナルの終了" (Close Hyper terminal) in the "ファイル" (File) menu

"sample"と名前付けされた接続を保存しますか？ (Are you going to save the connection "sample"?) appears, but it is not necessary to save.

NOTE

- The AT commands entered in "Hyper terminal" may not be displayed after Step 7 on p.34. In this case, if you enter ATE1, AT commands you enter from then on are displayed.
- To reset the access point (APN) settings using the AT command
 - ・ If reset, the access point (APN) setting with cid=1 will return to "mopera.ne.jp" (Default value) and cid=3 to "mopera.net" (Default value), and cid=2, 4 through 10 will be unregistered.
 - <How to enter>
 - AT+CGDCONT= (to reset all cid)
 - AT+CGDCONT= <cid> (to reset a certain cid only)
- To confirm the access point (APN) settings using the AT command
 - ・ Display the current settings.
 - <How to enter>
 - AT+CGDCONT?

Notifying or Not notifying the Caller ID

- You can set whether to notify the other person of your caller ID when packet communication is carried out. Since the caller ID is important information, please take care when you send your caller ID.
- You can set up the Notify or not notify Caller ID setting using the AT command prior to a dial-up connection.
- Use the * DGPIR command (p.48) to notify or not notify the caller ID or change back to "Not set" (Default value).

1 Start "ハイパーターミナル" (Hyper terminal)

2 Set up Notify (186) or Not notify (184) Caller ID for packet communication

Enter in the format of "AT * DGPIR=<n>".

To automatically attach 184 (Not notify) for dialing an outgoing call/answering an incoming call

Enter the following:



AT * DGPIR=1

To automatically attach 186 (Notify) for dialing an outgoing call/answering an incoming call

Enter the following:

AT * DGPIR=2

3 Confirm that "OK" appears and click "ハイパーターミナルの終了" (Close Hyper terminal) in the "ファイル" (File) menu

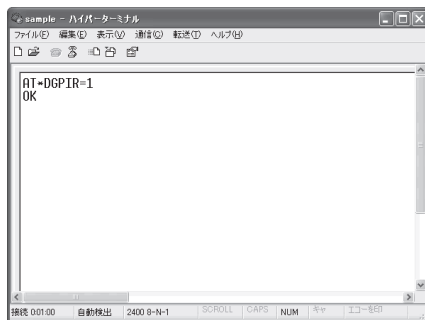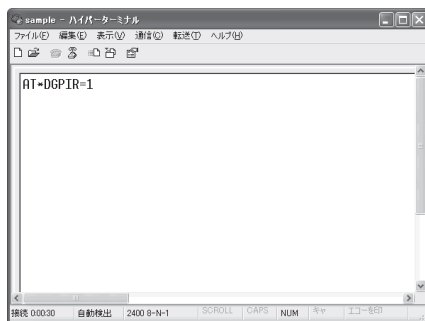

NOTE

- The Caller ID needs to be set to "Notify" to use DoCoMo's internet connection service mopera U or mopera.

About 186 (Notify)/184 (Not notify) in Dial-up Network

You can attach 186/184 to the access point number in the Dial-up network settings as well.

The following table shows what happens if you set 186/184 both for the * DGPIR command and the Dial-up network setting.

Dial-up network setting (for cid=1)	Notify/Not notify setting by * DGPIR command	Notify/Not notify Caller ID
* 99 * * * 1#	Not set	Notify
	Not notify	Not notify
	Notify	Notify
184 * 99 * * * 1#	Not set	Not notify (Dial-up network notification 184 has the priority)
	Not notify	
	Notify	
186 * 99 * * * 1#	Not set	Notify (Dial-up network notification 186 has the priority)
	Not notify	
	Notify	


Setting up Dial-up

- This section takes accessing mopera U by packet communication for example.
- To connect using packet communication, enter " * 99 * * * 3#" as the number of access point for mopera U or " * 99 * * * 1#" for mopera. To connect using 64K data communication, enter " * 8701" as the number of access point for mopera U or " * 9601" for mopera.

Setting up dial-up on Windows Vista

- 1 Open " " → "接続先" (Access point)
- 2 Click "接続またはネットワークをセットアップします" (Set up the connection or network)
- 3 Select "ダイヤルアップ接続をセットアップします" (Set up dial-up connection) and click "次へ" (Next)
- 4 If the modem selection screen appears, click "FOMA SO705i モデム" (FOMA SO705i modem)


The modem selection screen appears only if there are multiple modems.

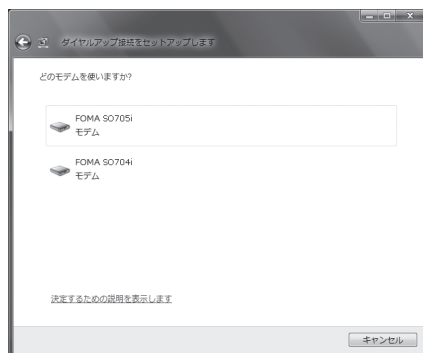

5 Select the "ダイヤルアップの電話番号" (Phone number for dial-up) and enter the number of the access point

You can leave user name and password blank for moper U or moper connection. To connect to any other provider than moper U or moper, enter the user name and password specified by the provider or network administrator in the "ユーザー名" (User Name) and "パスワード" (Password) columns as this screen.

This screen is an example of accessing moper U by packet communication.

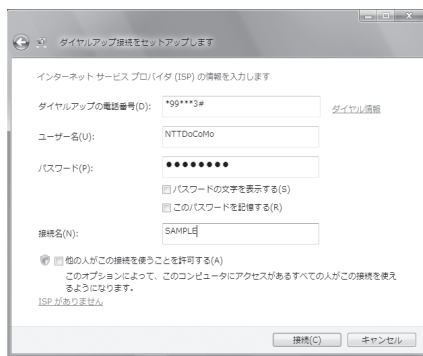


6 Click "接続" (Connect) and then click "スキップ" (Skip)

To confirm the settings, cancel a connection test.

7 Click "接続をセットアップします" (Set up the connection) and then "閉じる" (Close)

8 Open "🌐" → "接続先" (Access point)


9 Right-click the icon created for the dial-up and click "プロパティ" (Properties)

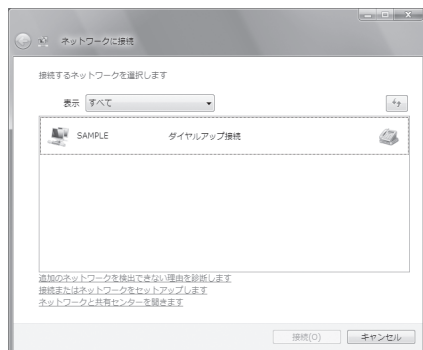

10 Confirm the settings on the "全般" (General) tab


If two or more modems are connected to the PC, confirm that only "モデム - FOMA SO705i" (Modem - FOMA SO705i) is checked in the "接続の方法" (Connection method) column. If not, check it.

Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If not, uncheck it.

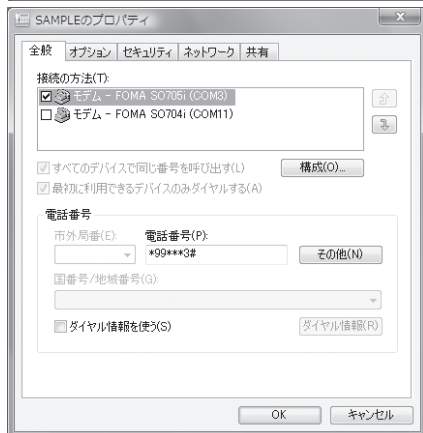


11 Click the "ネットワーク" (Network) tab and set up each setting

Check only "インターネット プロトコル バージョン 4 (TCP/IPv4)" (Internet Protocol version 4 (TCP/IPv4)) in the "この接続は次の項目を使用します" (Use the following items for this connection). Check "QoS パケットスケジューラ" (QoS Packet Scheduler) and other items if instructed by the provider.

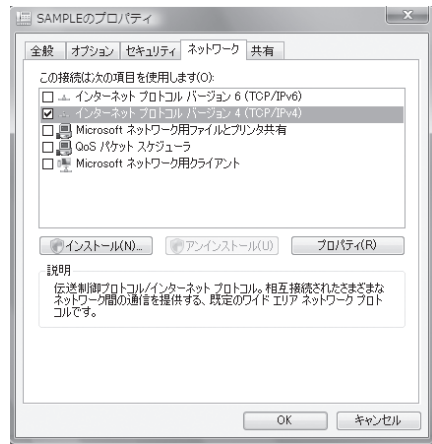

12 Click the "オプション" (Options) tab and click "PPP 設定" (PPP settings)

13 Clear all the boxes and click "OK"

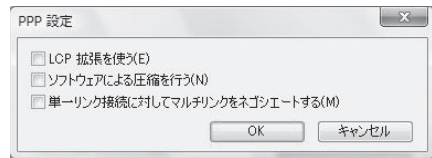


14 Click "OK"

Setting up dial-up on Windows XP

1 Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "新しい接続ウィザード" (New connection wizard)

2 When the "新しい接続ウィザード" (New Connection Wizard) screen appears, click "次へ" (Next)

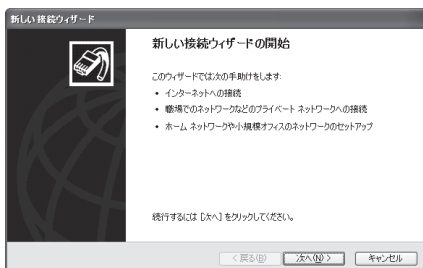


3 Select "インターネットに接続する" (Connect to the Internet) and click "次へ" (Next)

4 Select "接続を手動でセットアップする" (Set up the connection manually) and click "次へ" (Next)


5 Select "ダイヤルアップモデムを使用して接続する" (Connect using a dial-up modem) and click "次へ" (Next)

6 If the "デバイスの選択" (Select the device) screen appears, select only "モデム - FOMA SO705i (COMx)" (Modem - FOMA SO705i (COMx)), and click "次へ" (Next)

The "デバイスの選択" (Select the device) screen appears only if there are multiple modems. (COMx) is a number of COM port displayed in "Checking the COM port" (p.29).

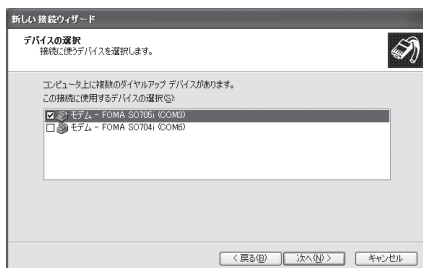


7 Enter any name you want in the "ISP 名" (ISP Name) and click "次へ" (Next)

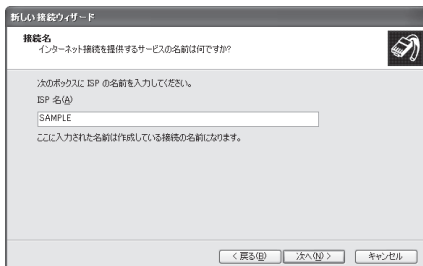

8 Enter the number of the access point in the "電話番号" (Telephone Number) column and click "次へ" (Next)


This screen is an example of accessing mopera U by packet communication.

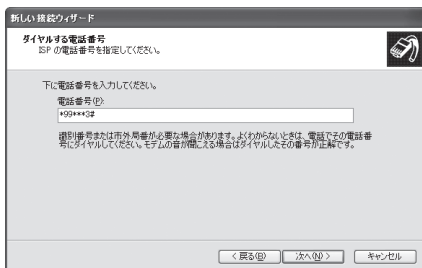

9 Click "次へ" (Next)


You can leave user name and password blank for mopera U or mopera connection.

To connect to any other provider than mopera U or mopera, enter exact information specified by the provider or network administrator in the "ユーザー名" (User Name), "パスワード" (Password) and "パスワードの確認入力" (Confirm Password) columns as this screen.

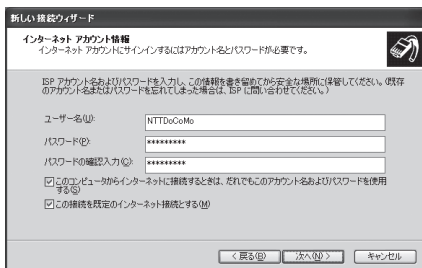

10 Click "完了" (Finish)

The newly created connection wizard appears.

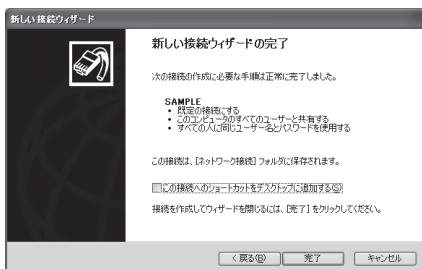

11 Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections)


12 Select the icon created for the dial-up and open "プロパティ" (Properties) in the "ファイル" (File) menu



13 Confirm the settings on the "全般" (General) tab

If two or more modems are connected to the PC, confirm that "モデム - FOMA SO705i" (Modem - FOMA SO705i) is checked in the "接続方法" (Connection method) column. If not, check it. Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If it is checked, uncheck it.


This screen is an example of accessing mopera U by packet communication.

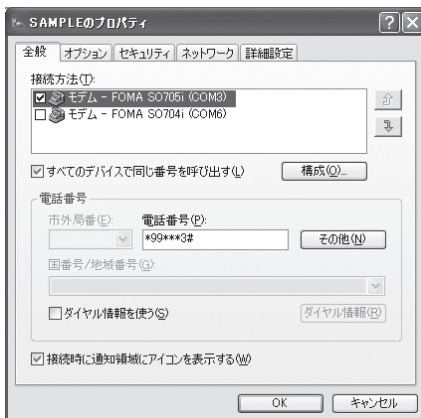

14 Click the "ネットワーク" (Network) tab and set up each setting


Select "PPP: Windows 95/98/NT4/2000, Internet" in the "呼び出すダイヤルアップサーバーの種類" (Type of the dial-up server to call).

Select "インターネットプロトコル (TCP/IP)" (Internet Protocol (TCP/IP)) in the "この接続は次の項目を使用します" (This connection uses the following items). Since the setting of "QoS/パケットスケジューラ" (QoS/ Packet Scheduler) cannot be changed, leave it as it is.

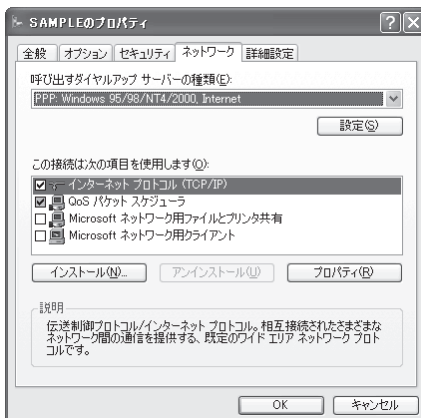

15 Click "設定" (Settings)

16 Clear all the boxes and click "OK"

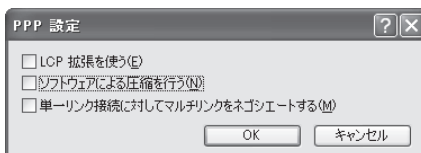


17 When the Step 14 screen reappears, click "OK"

Setting up dial-up on Windows 2000

- 1 Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワークとダイヤルアップ接続" (Network and Dial-up connections)

- 2 Double-click "新しい接続の作成" (Create a new connection) in Network and Dial-up Connections

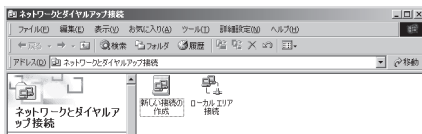

- 3 If the "所在地情報" (Address information) screen appears, enter "市外局番" (Area Code) and click "OK"

The "所在地情報" (Address Information) screen appears only when "新しい接続の作成" (Create a new connection) is started for the first time in Step 2. This screen does not appear from the second time on, but the "ネットワークの接続ウィザード" (Network Connection Wizard) screen does instead, proceed to Step 5.

- 4 When the "電話とモデムのオプション" (Telephone and Modem options) screen appears, click "OK"

- 5 When the "ネットワークの接続ウィザード" (Network Connection Wizard) screen appears, click "次へ" (Next)

- 6 Select "インターネットにダイヤルアップ接続する" (Connect to the Internet via dial-up) and click "次へ" (Next)


- 7 Select "インターネット接続を手動で設定するか、またはローカルエリアネットワーク(LAN)を使って接続します" (Set up an internet connection manually or connect using Local Area Network (LAN)) and click "次へ" (Next)

- 8 Select "電話回線とモデムを使ってインターネットに接続します" (Connect to the internet using a telephone line and a modem) and click "次へ" (Next)

- 9 Confirm that the "インターネットへの接続に使うモデムを選択する" (Select the modem used to connect to the internet) has "FOMA SO705i" and click "次へ" (Next)

If "FOMA SO705i" is not selected, select "FOMA SO705i".


If no other modem than "FOMA SO705i" has been installed, this screen does not appear.

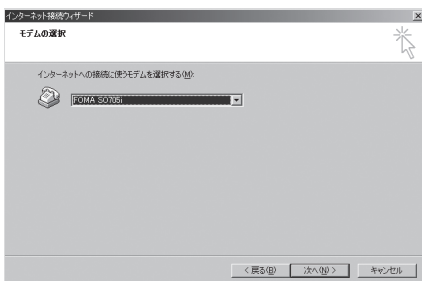

- 10 Enter the number of the access point in the "電話番号" (Telephone number) column and click "詳細設定" (Advanced settings)


Uncheck "市外局番とダイヤル情報を使う" (Use Area Code and Dial information).

This screen is an example of accessing mopera U by packet communication.

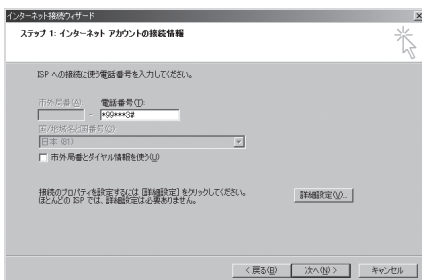


11 Set up the "接続" (Connection) tab as shown on the right and click the "アドレス" (Address) tab

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "接続の種類" (Connection Type) and "ログオンの手続き" (Logon Procedure).

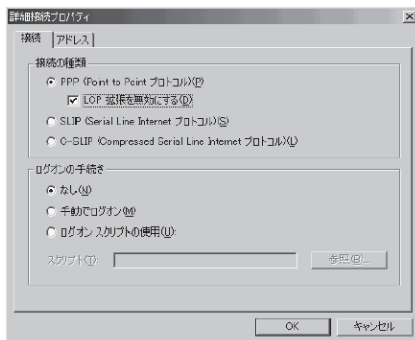

12 Set up the IP address and DNS (Domain Name Service) address on the "アドレス" (Address) tab as shown on the right and click "OK"

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "IPアドレス" (IP address) and "ISPによるDNS (ドメインネームサービス) アドレスの自動割り当て" (Automatically assign DNS (Domain Name Service) by ISP).

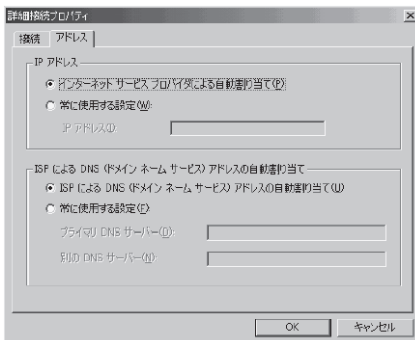


13 When the screen returns to Step 10, click "次へ" (Next)


14 Click "次へ" (Next)

You can leave user name and password blank for mopera U or mopera connection.

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "ユーザー名" (User Name) and "パスワード" (Password) columns as this screen.

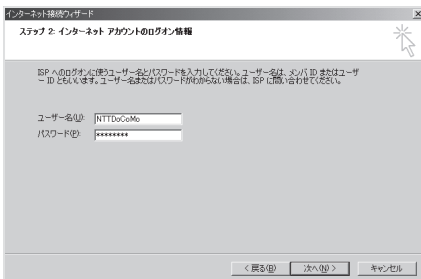


15 Enter any name you want in the "接続名" (Connection name) and click "次へ" (Next)

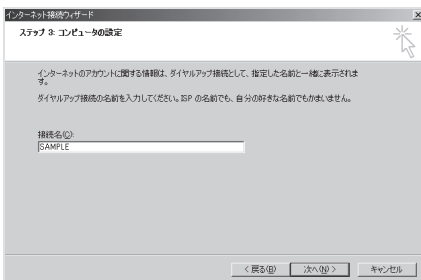

16 Select "いいえ" (No) and click "次へ" (Next)

17 Click "完了" (Finish)

18 Select the icon created for the dial-up and open "プロパティ" (Properties) in the "ファイル" (File) menu

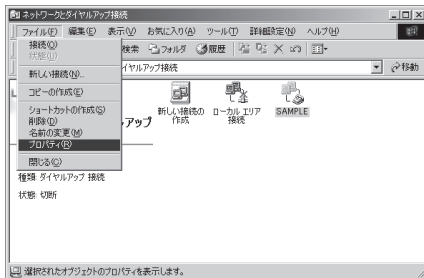


19 Confirm the settings on the "全般" (General) tab

If two or more modems are connected to the PC, confirm that only "モデム - FOMA SO705i" (Modem - FOMA SO705i) is checked in the "接続の方法" (Connection method) column. If not, check it.

Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If not, uncheck it.


This screen is an example of accessing mopera U by packet communication.

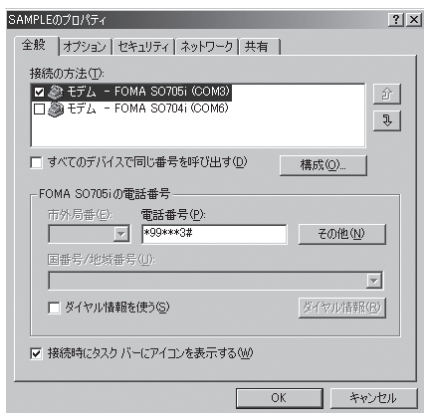

20 Click the "ネットワーク" (Network) tab and set up each setting


Select "PPP: Windows 95/98/NT4/2000, Internet" in the "呼び出すダイヤルアップサーバーの種類" (Type of the dial-up server to call).

Check only "インターネットプロトコル (TCP/IP)" (Internet Protocol (TCP/IP)) for components.

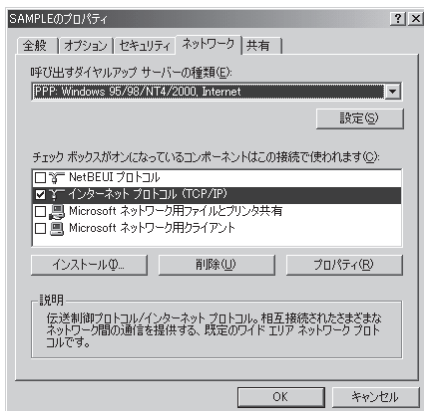

21 Click "設定" (Settings)

22 Clear all the boxes and click "OK"

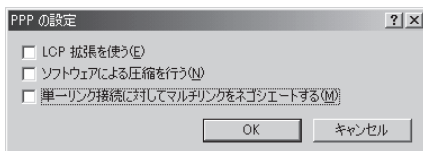

23 When the Step 20 screen reappears, click "OK"

Running dial-up connection

This section describes how to make a dial-up connection for packet communication by using the dial-up setting.

<Example: For Windows XP>


1 Connect the FOMA terminal to the PC with the FOMA USB Cable with Charge Function 01/02 (optional)

"Connecting the devices" → p.7

2 Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections)

3 Open Access point

Select the dial-up access point icon with the ISP name set in Step 7 on p.39 to select "ネットワークタスク" (Network task) → "この接続を開始する" (Start this connection) or double-click the icon of the access point.

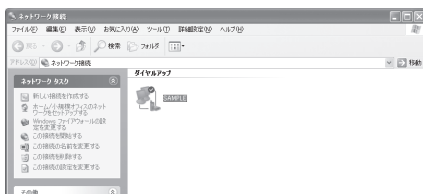

4 Confirm the settings and click "ダイヤル" (Dial)

This screen is an example for mopera U connection. You can leave user name and password blank for mopera U or mopera connection.



<The Connecting screen appears>

While this screen appears, the log-on process such as confirmation of the user name and password is performed.



<Completion of the connection>

When the connection is complete, a message appears from the indicator of the taskbar located on the bottom-right of the desktop for a few seconds (The completion of the connection screen may appear depending on the OS. Click "OK").

You can start browser software to view sites and websites or to use e-mail.

If this message does not appear, check "Setting up Dial-up Network" (p.29) and "Setting up Dial-up" (p.36).

See p.25 for communication conditions.



How to disconnect

Just closing the Internet browser may not disconnect the communication line. Follow the instructions below to disconnect for sure. This section describes an example using Windows XP.

1 Click the dial-up icon in the task-tray

The connection condition screen for Internet will be displayed.

For Windows Vista

Open " " → "接続先" (Access point)
Select the dial-up currently connected.



Dial-up icon

2 Click "切断" (Disconnect)

NOTE

- The communication speed displayed on the PC may be different from the actual communication speed.

AT Command List

AT commands available on FOMA terminal

- The following abbreviations are used in the AT command list;
 [&F] : Command of which setting is initialized by AT&F command.
 [&W] : Command of which setting is saved by AT&W command. The setting can be retrieved by ATZ command.
- When you make a call via an external device or using AT command, the call is made from Number A in A mode/Dual mode, and from Number B in B mode.

Modem port command list

The followings are the usable commands for "FOMA SO705i (モデム)" (modem):

AT command	Outline	Parameter/description	Command execution example
A/	Executes the last executed command again. No carriage return is necessary.	—	A/ OK
AT	—	The modem function of a FOMA terminal is controllable by adding the command of this table after this command. * OK is answered even when only AT is entered.	AT OK
AT%V	Displays the version of the FOMA terminal.	—	AT%V Ver1.00 OK
AT&C <i>n</i> [&F] [&W]	Selects the operating condition of the circuit CD signal to DTE.	<i>n</i> = 0 : CD is always ON. <i>n</i> = 1 : CD changes according to the carrier of the other party's modem (initial value).	AT&C1 OK
AT&D <i>n</i> [&F] [&W]	Selects the operation to take place when the circuit ER signal received from DTE transits between ON and OFF.	<i>n</i> = 0 : Ignores ER status (always assumed to be ON). <i>n</i> = 1 : When ER changes from ON to OFF, it becomes an on-line command status. <i>n</i> = 2 : If ER changes from ON to OFF, a connection is disconnected and it will be in an off-line command status (initial value).	AT&D1 OK
AT&E <i>n</i> [&F] [&W]	Selects how to display the connection speed.	<i>n</i> = 0 : Displays the wireless network transmission speed. <i>n</i> = 1 : Displays the DTE serial transmission speed (initial value).	AT&E0 OK
AT&F <i>n</i>	Restores all of registers to their defaults. If this command is input during communication, the line will be disconnected.	Only <i>n</i> = 0 can be specified (can be omitted).	(At the time of off-line mode) AT&F OK AT&F? ERROR AT&F = ? ERROR (At the time of on-line command mode) AT&F NO CARRIER (Change to off-line mode)
AT&S <i>n</i> [&F] [&W]	Sets the Data Set Ready signal to be output to DTE.	<i>n</i> = 0 : DR is always ON (initial value). <i>n</i> = 1 : DR signal is ON when the line is connected (when the communication call is established).	AT&S0 OK

AT command	Outline	Parameter/description	Command execution example
AT&W <i>n</i>	Stores the current settings.	Only <i>n</i> = 0 can be specified (can be omitted).	AT&W0 OK AT&W OK AT&W? ERROR AT&W = ? ERROR
AT * DANTE	Displays the FOMA terminal signal reception level.	0 : FOMA terminal signal reception level is displayed as out of area. 1 : FOMA terminal signal reception level is 0 or 1 bar. 2 : FOMA terminal signal reception level is 2 bars. 3 : FOMA terminal signal reception level is 3 bars.	AT * DANTE * DANTE:3 OK AT * DANTE = ? * DANTE:(0-3) OK
AT * DGANSM= <i>n</i>	Sets the reject/permit mode setting for the packet incoming call. This command is effective for those incoming packet calls after the setting command is input.	<i>n</i> = 0 : Disables the incoming call reject (AT * DGARL)/permit setting (AT * DGAPL) (initial value). <i>n</i> = 1 : Enables the incoming call reject setting. <i>n</i> = 2 : Enables the incoming call permit setting. AT * DGANSM? : Displays the current setting.	AT * DGANSM=0 OK AT * DGANSM? * DGANSM:0 OK
AT * DGAPL= <i>n</i> [,<cid>]	Sets APN, which permits incoming packet calls, by using <cid> parameter defined by +CGDCONT	<i>n</i> = 0 : Adds the APN defined by <cid> to incoming call permission list. <i>n</i> = 1 : Deletes the APN defined by <cid> from incoming call permission list. If <cid> is omitted, this will apply to all cid. AT * DGAPL? : Displays incoming call permission list.	AT * DGAPL =0,1 OK AT * DGAPL? * DGAPL:1 OK AT * DGAPL =1 OK AT * DGAPL? OK
AT * DGARL= <i>n</i> [,<cid>]	Sets APN, which rejects incoming packet calls, by using <cid> parameter defined by +CGDCONT	<i>n</i> = 0 : Adds the APN defined by <cid> to incoming call rejection list. <i>n</i> = 1 : Deletes the APN defined by <cid> from incoming call rejection list. If <cid> is omitted, this will apply to all cid. AT * DGARL? : Displays incoming call rejection list.	AT * DGARL =0,1 OK AT * DGARL? * DGARL:1 OK AT * DGARL =1 OK AT * DGARL? OK
AT * DGPIR= <i>n</i>	This command validates the setting for notifying Caller ID when sending/receiving packet communication. Even in the dial up network setting, you can also add 186 (notify) or 184 (not notify) to the access point number. (p.35)	<i>n</i> = 0 : Uses APN as it is (initial value). <i>n</i> = 1 : Uses APN by adding "184". (Caller ID is always not sent.) <i>n</i> = 2 : Uses APN by adding "186". (Caller ID is always sent.) AT * DGPIR? : Displays the current setting.	AT * DGPIR =0 OK AT * DGPIR? * DGPIR:0 OK
AT * DRPW	Displays the indicator value of the receiving power of the FOMA terminal.	—	AT * DRPW * DRPW:0 OK AT * DRPW=? * DRPW:(0-75) OK
AT+CAOC	Inquires for the current charge.	—	AT+CAOC +CAOC:"000014" OK

AT command	Outline	Parameter/description	Command execution example
AT+CBC	Displays the battery status of the FOMA terminal.	Result: +CBC:<bcs>,<bcl> bcs: 0 : FOMA terminal is powered by the battery. 1 : FOMA terminal is not powered by the battery. 2 : FOMA terminal is not connected to the battery. 3 : FOMA terminal is out of transmission due to the power-supply error. bcl: 0 : Battery has run out, or battery is not connected. 1-100 : Battery remained	AT+CBC +CBC:0,70 OK AT+CBC? ERROR AT+CBC=? +CBC:(0-3),(0-100) OK
AT+CBST	Changes the bearer service type.	Format: AT+CBST=<n>,1,0 n=116 : 64,000bps (bit transparent) (initial value) n=134 : 64,000bps (multimedia)	AT+CBST=134,1,0 OK AT+CBST? +CBST:134,1,0 OK AT+CBST=? +CBST:(116,134), (1),(0) OK
[&F] [&W]			
AT+CEER	Displays the reason for disconnection of the previous call.	Result: +CEER:<report> report: List of disconnection reasons (p.59).	AT+CEER +CEER:36 OK
AT+CGDCONT	Sets the access point name (APN) for packet origination.	p.56	p.56
AT+CGEQMIN	Registers a criterion to be used to decide whether or not to allow the QoS (quality of service) that is informed from the network side when PPP packet communication is established.	p.56	p.56
AT+CGEQREQ	Sets the QoS (quality of service) to be requested to network when originating a PPP packet communication.	p.57	p.57
AT+CGMR	Displays the version of the FOMA terminal.	—	AT+CGMR 12345xxxxxxxxxx OK
AT+CGREG=n	Specifies whether to notify the network registration condition. The returned notification displays whether you are inside or out of service.	n=0 : Not informed (initial value). n=1 : Informed. Informed when switching between "Inside the service area" and "Outside the service area" is completed. AT+CGREG? : Displays the current setting. +CGREG : <n>, <stat> n: Set value stat : 0: Out of packet area 1: Within packet area 4: Unknown 5: Within packet area	AT+CGREG=1 OK (Set to informed) AT+CGREG? +CGREG: 1,0 OK AT+CGREG=? +CGREG: (0,1) OK (Outside the service area) (When you move from "outside the service area" to "inside the service area".) +CGREG:1
[&F] [&W]			
AT+CGSN	Displays the product number of the FOMA terminal.	—	AT+CGSN 12345xxxxxxxxxx OK
AT+CLIP=n	Displays the other party's Caller ID on a PC when a 64K data communication call is received.	n=0 : Not display the result (initial value) n=1 : Display the result AT+CLIP? : Displays the current setting. +CLIP:n,m m=0 : NW setting not notifying the other party of the Caller ID in outgoing call. m=1 : NW setting notifying the other party of the Caller ID in outgoing call. m=2 : Unknown	AT+CLIP=0 OK AT+CLIP=? +CLIP:(0,1) OK (A call is received when +CLIP=1 is set) RING +CLIP: "090XXXXXXXX",177, "123",136
[&F] [&W]			

AT command	Outline	Parameter/description	Command execution example
AT+CLIR= <i>n</i>	Sets whether or not to notify the other party of the phone number when originating a 64K data communication call.	<i>n</i> =0 : Complies to the CLIR service contract. <i>n</i> =1 : Not notify the other party of the caller's phone number. <i>n</i> =2 : Notify the other party of the caller's phone number (initial value). AT+CLIR? : Displays the current setting. +CLIR: <i>n,m</i> <i>m</i> =0 : CLIR is not started (Caller ID is always sent) <i>m</i> =1 : CLIR is started (Caller ID is always not sent) <i>m</i> =2 : Unknown <i>m</i> =3 : CLIR temporary mode (default is not notify) <i>m</i> =4 : CLIR temporary mode (default is notify)	AT+CLIR=0 OK AT+CLIR? +CLIR:0,1 OK AT+CLIR=? +CLIR:(0-2) OK
AT+CMEE= <i>n</i>	Sets whether the error report of the FOMA terminal is present.	<i>n</i> =0 : Use the ERROR result (initial value). <i>n</i> =1 : +CME ERROR:<err> result code is used, and a numeral value is used for <err>. <i>n</i> =2 : +CME ERROR:<err> result code is used, and characters are used for <err>. AT+CMEE? : Displays the current setting. The command displayed on the right is the execution example for cases when there is a FOMA terminal problem or a connection error. +CME ERROR result code is as follows. 1 : no connection to phone 10 : SIM not inserted 15 : SIM wrong 16 : incorrect password 100 : unknown	AT+CMEE=0 OK AT+CNUM ERROR AT+CMEE=1 OK AT+CNUM +CME ERROR:10 AT+CMEE=2 OK AT+CNUM +CME ERROR:SIM not inserted
[&F] [&W]			
AT+CNUM	Displays the own number of the FOMA terminal.	Result: +CNUM:,<number>,<type> number: phone number type : 129 or 145 129 : International access code (+) is not included. 145 : International access code (+) is included.	AT+CNUM +CNUM:,"+8190XXXX XXX",145 OK
AT+COPS	Selects the network operator to connect.	Format : AT+COPS=<mode>,2,<oper> mode=0 : automatic (searches the network and switches the network operator automatically) mode=1 : manual (connects to the network operator specified in <oper>) mode=2 : Disconnects the connection to the network operator mode=3 : Mapping is not performed. mode=4 : manual/automatic (if the connection to the network operator specified in <oper> fails, works as automatic mode.) <oper> is a hexadecimal value which consists of Country code (MCC) and Network code (MNC). The format is as follows: Digit 1 of MCC···octet 1 bits 1 to 4 Digit 2 of MCC···octet 1 bits 5 to 8 Digit 3 of MCC···octet 2 bits 1 to 4 Digit 3 of MNC···octet 2 bits 5 to 8 Digit 2 of MNC···octet 3 bits 5 to 8	AT+COPS=0 OK AT+COPS? +COPS:0 OK AT+COPS=? +COPS:(2,,,"44F001"), (3,,,"44F002"),(0,1),(2) OK

AT command	Outline	Parameter/description	Command execution example
AT+CPAS	Displays whether the control signal to the FOMA terminal is available or not.	Result: +CPAS: <pas> pas: 0 : FOMA terminal can send/receive control signal. 1 : FOMA terminal can not send/receive control signal. 2 : Unknown (control signal sending/receiving is not assured). 3 : FOMA terminal can send/receive control signal and it is currently receiving. 4 : FOMA terminal can send/receive control signal and it is currently communicating.	AT+CPAS +CPAS:0 OK AT+CPAS? ERROR AT+CPAS=? +CPAS:(0-4)
AT+CPIN	Enters the PIN code in the FOMA terminal.	Format: AT+CPIN="<pin>" "<newpin>" This command is to enter the PIN1, PIN2, or PUK code - depending on the state of the result code returned when AT+CPIN? is entered - of the FOMA terminal. Even if PIN code entry or the PUK code is requested on the screen, depending on the state of the result code when AT+CPIN? is entered, you may not be able to use this command to enter the PIN. Do not use this command to change PIN code. Put <pin> and <newpin> in " ". AT+CPIN? result +CPIN : READY : PIN1 code, PIN2 code Cannot enter the PUK1 or PUK2 code +CPIN : SIM PIN : PIN1 entry standby +CPIN : SIM PIN2 : PIN2 entry standby +CPIN : SIM PUK : PIN1 blocked (Can enter PUK1 code) +CPIN:SIM PUK2 : PIN2 blocked (Can enter PUK2 code) The command displayed on the right is an entry sample of PIN code "1234" and PUK code "12345678".	(The status in which +CPIN: READY is answered when +CPIN? is entered) AT+CPIN="1234" ERROR (The status in which +CPIN: READY is answered when +CPIN? is entered) AT+CPIN="12345678", "1234" ERROR (The status in which +CPIN: SIM PIN is answered when +CPIN? is entered) AT+CPIN="1234" OK (The status in which +CPIN: SIM PUK is answered when +CPIN? is entered: PIN1 lock status) AT+CPIN="12345678", "1234" OK (The status in which +CPIN: SIM PUK2 is answered when +CPIN? is entered: PIN2 lock status) AT+CPIN="12345678", "1234" OK AT+CPIN? +CPIN:READY OK AT+CPIN=? OK
AT+CR= <i>n</i>	When the line is connected, displays the bearer service type before the CONNECT result code is displayed.	<i>n</i> = 0 : Not display (initial value). <i>n</i> = 1 : Display. <serv> : Displays only "GPRS", which means packet communication. (Displaying "SYNC" or "AV64K" depending on the line type.) AT+CR?: : Displays the current setting.	AT+CR=1 OK ATD *99 * * * 1# +CR : GPRS CONNECT
[&F] [&W]			

AT command	Outline	Parameter/description	Command execution example
AT+CRC= <i>n</i> [&F] [&W]	Sets whether to use the extended result code for the incoming call. ● This setting may not be available depending on the Operating System.	<i>n</i> =0 : Not use +CRING (initial value). <i>n</i> =1 : Use +CRING.<type>. Format of +CRING: +CRING : SYNC +CRING : AV64K : GPRS "PPP" ,,, "<APN>" AT+CRC? : Displays the current setting.	AT+CRC=0 OK AT+CRC? +CRC : 0 OK (PPPOverUD received) +CRING : SYNC (AV64K received) +CRING : AV64K (PPP packet received) +CRING : GPRS "PPP" ,,, "<APN>"
AT+CREG= <i>n</i> [&F] [&W]	Specifies whether the result screen is present regarding the inside/outside the service area information display. ● This setting may not be available depending on the Operating System.	<i>n</i> =0 : Not informed (initial value). <i>n</i> =1 : Informed. Informed when switching between "Inside the service area" and "Outside the service area" is complete. AT+CREG? : Displays the current setting. +CREG : < <i>n</i> >,<stat> <i>n</i> : Set value stat: 0: Outside voice call area 1: Inside voice call area 4: Unknown 5: Inside voice call area	AT+CREG=1 OK (Set to informed) AT+CREG? +CREG : 1,0 OK (Outside the service area) (When you move from outside the service area to inside the service area.) +CREG : 1
AT+CUSD [&F] [&W]	Specifies or inquires for the network setting regarding the additional services.	Format: AT+CUSD=< <i>n</i> >,"<str>"[,<0>] <i>n</i> =0 : Does not send mid result < <i>m</i> >[<str>,<dcs>] (initial value) <i>n</i> =1 : Sends mid result < <i>m</i> >[<str>,<dcs>] Mid result: <i>m</i> =0 : The settings completed <i>m</i> =1 : The network requires the information. str : Only 0-9, #, * can be entered. Enclose <str> with "" (double quotation mark).	AT+CUSD=0, "xxxxxxxx" OK AT+CUSD=1, " * 148 * 1 * 0000#",0 +CUSD:0,"148 * 7#",0 OK AT+CUSD? +CUSD:0 OK AT+CUSD=? +CUSD:(0,1) OK
AT+FCLASS= <i>n</i> [&F] [&W]	Sets the communication class supported by the FOMA terminal.	<i>n</i> =0 : data is only supported. (initial value)	AT+FCLASS=0 OK
AT+GCAP	Displays the supported area for the AT commands available for the FOMA terminal.	Result: +GCAP:<area>,<area>,<area> area : +CGSM : Some or all GSM commands are supported. +FCLASS : +FCLASS command is supported. +W : +W command is supported.	AT+GCAP +GCAP:+CGSM,+FCLASS,+W OK
AT+GMI	Displays the manufacturer name.	—	AT+GMI SEMC Japan, Inc. OK
AT+GMM	Displays the FOMA terminal product name (FOMA S0705i).	—	AT+GMM FOMA S0705i OK
AT+GMR	Displays the version of the FOMA terminal.	—	AT+GMR Ver1.00 OK

AT command	Outline	Parameter/description	Command execution example
AT+IFC= <i>n,m</i> [&F] [&W]	Selects the flow control method.	<i>n</i> : DCE by DTE <i>m</i> : DTE by DCE 0 : No flow control 1 : XON/XOFF flow control. 2 : RS/CS (RTS/CTS) flow control. initial value: <i>n,m</i> =2, 2 AT+IFC?: Displays the current setting.	AT+IFC=2,2 OK AT+IFC? +IFC : 2,2 OK AT+IFC=? +IFC : (0,1,2) ,(0,1,2) OK
AT+WS46	Displays the wireless communication network of the FOMA terminal.	22 : IMT fixed mode	AT+WS46? 22 OK
AT¥S	Displays the contents of commands and S registers currently set.	—	AT¥S E1 Q0 V1 X4 &C1 &D2 &S0 &E1 ¥V0 S000=000 S002=043 S003=013 S004=010 S005=008 S006=005 S007=060 S008=003 S010=001 S030=000 S103=001 S104=001 OK
AT¥V <i>n</i> [&F] [&W]	Selects the response code specification for connecting the line.	<i>n</i> =0 : Not use extended result code (initial value). <i>n</i> =1 : Use extended result code.	AT¥V0 OK
ATA	Handles the incoming call process according to the mode received by the FOMA terminal.	—	RING ATA CONNECT
ATD	Handles the automatic calling process for the FOMA terminal according to the specified parameters and dial parameters.	ATD *99 * * * <cid># : Packet communication <cid> 1 to 10: displays APN with +CGDCONT setting. AT+CBST=116,1,0 ATD<phone number> : 64K communication AT+CBST=134,1,0 ATD<phone number> : AV64K communication	<Packet communication> ATD *99 * * * 1# CONNECT <64K communication> AT+CBST=116,1,0 OK ATD090xxxxxxxxx CONNECT <AV64K communication> AT+CBST=134,1,0 OK ATD090xxxxxxxxx CONNECT
ATE <i>n</i> [&F] [&W]	Selects whether the echo back is present for DTE in the command mode.	<i>n</i> =0 : Echo back absent. <i>n</i> =1 : Echo back present (initial value).	ATE1 OK
ATH <i>n</i>	Performs on-hook operation for the FOMA terminal.	<i>n</i> =0 : Disconnect the line (can be omitted).	(During packet communication) +++ OK ATH NO CARRIER

AT command	Outline	Parameter/description	Command execution example
ATI <i>n</i>	Displays the ID code.	<i>n</i> = 0 : Displays "NTT DoCoMo". <i>n</i> = 1 : Displays the product name (same with +GMM). <i>n</i> = 2 : Displays the version of the FOMA terminal (same with +GMR). <i>n</i> = 3 : Displays the each element of ACMP signal. <i>n</i> = 4 : Displays the details of communication functions of the FOMA terminal.	ATI0 NTT DoCoMo OK ATI1 FOMA SO705i OK
ATO <i>n</i>	Returns from the online command mode to the online data mode during communication.	<i>n</i> = 0 : Returns from online command mode to online data mode (can be omitted).	ATO CONNECT
ATQ <i>n</i>	Specifies whether or not to display the result code for DTE.	<i>n</i> = 0 : Displays the result code (initial value). <i>n</i> = 1 : Not display the result code.	ATQ0 OK ATQ1 (At that time, OK is not returned.)
[&F] [&W]			
ATS0= <i>n</i>	Specifies how many times the FOMA terminal rings before it automatically receives a call.	<i>n</i> = 0 : No automatic answer (initial value). <i>n</i> = 1 - 255: A call is automatically answered after the specified number of rings. ATS0?: Displays the current setting.	ATS0=0 OK ATS0? 000 OK
[&F] [&W]			
ATS2= <i>n</i>	Sets an escape character.	<i>n</i> = 43 : Initial value. <i>n</i> = 127 : Escapes processing is invalid. ATS2? : Displays the current setting.	ATS2=43 OK ATS2? 043 OK
[&F]			
ATS3= <i>n</i>	Sets a carriage return (CR) character.	<i>n</i> = 13 : Initial value (Only <i>n</i> = 13 can be specified). ATS3? : Displays the current setting.	ATS3=13 OK ATS3? 013 OK
[&F]			
ATS4= <i>n</i>	Sets a line feed (LF) character.	<i>n</i> = 10 : Initial value (Only <i>n</i> = 10 can be specified). ATS4? : Displays the current setting.	ATS4=10 OK ATS4? 010 OK
[&F]			
ATS5= <i>n</i>	Sets a backspace (BS) character.	<i>n</i> = 8 : Initial value (Only <i>n</i> = 8 can be specified). ATS5? : Displays the current setting.	ATS5=8 OK ATS5? 008 OK
[&F]			
ATS6= <i>n</i>	Sets the pause time (second) until a dial starting.	This command can be set but cannot be operated.	ATS6=5 OK ATS6? 005 OK ATS6=? ERROR
[&F]			
ATS8= <i>n</i>	Sets the pause time (second) by using the comma dial.	This command can be set but cannot be operated.	ATS8=3 OK ATS8? 003 OK ATS8=? ERROR
[&F]			
ATS10= <i>n</i>	Automatic disconnection delay time setting. (1/10 second)	This command can be set but cannot be operated.	ATS10=1 OK ATS10? 001 OK ATS10=? ERROR
[&F][&W]			

AT command	Outline	Parameter/description	Command execution example
ATS30= <i>n</i> [&F]	Disconnects the line when there is no user data exchange for the time set in this command.	<i>n</i> = 0 : Inactive timer off (initial value) <i>n</i> = 0 - 255 Where <i>n</i> is the number of minutes.	ATS30=0 OK ATS30? 000 OK ATS30=? ERROR
ATS103= <i>n</i> [&F]	Sets the called sub address character.	<i>n</i> = 0 : * <i>n</i> = 1 : / (initial value) <i>n</i> = 2 : ¥ (¥ mark or back slash)	ATS103=0 OK ATS103? 000 OK ATS103=? ERROR
ATS104= <i>n</i> [&F]	Sets the calling sub address character.	<i>n</i> = 0 : # <i>n</i> = 1 : % (initial value) <i>n</i> = 2 : &	ATS104=0 OK ATS104? 000 OK ATS104=? ERROR
ATV <i>n</i> [&F] [&W]	Specifies whether the result code is returned in numerals or alphabets.	<i>n</i> = 0 : Returns the result code in numeral value. <i>n</i> = 1 : Returns the result code in characters (initial value).	ATV1 OK
ATX <i>n</i> [&F] [&W]	Specifies whether the speed indication is present in the CONNECT display when connecting the line. Also detects a busy tone or a dial tone.	<i>n</i> = 0 : Without dial tone detection; without busy tone detection; without speed display. <i>n</i> = 1 : Without dial tone detection; without busy tone detection; with speed display. <i>n</i> = 2 : With dial tone detection; without busy tone detection; with speed display. <i>n</i> = 3 : Without dial tone detection; with busy tone detection; with speed display. <i>n</i> = 4 : With dial tone detection; with busy tone detection; with speed display. (initial value)	ATX1 OK
ATZ	Resets the current setting to the contents of the non-volatile memory. If this command is input during communication, the line will be disconnected.	—	(Online command mode) ATZ NO CARRIER (Offline command mode) ATZ OK
+++	In response to the escape sequence, the online data mode changes to the online command mode while maintaining the line connection.	—	(Online data mode) +++ (No display) OK

● Supplementary explanation of AT command

■ Commands which do not function

The following commands do not generate errors but will not function as a command:

- ATT (Tone setting)
- ATP (Pulse setting)

■ Command name: +CGDCONT

• Outline

Sets the access point name (APN) for packet origination.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [W], nor reset by [F] or [Z].

• Format

+CGDCONT=[<cid>[, "<PDP_type>"[, "<APN>"]]]

• Explanation of the parameters

Sets the access point name (APN) for packet origination. See the following command execution example:

<cid>*1 : 1 ~ 10

<PDP_type>*2 : PPP or IP

<APN>*3 : Any value

*1 : <cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.

*2 : <PDP_type> is the connection method. For the FOMA terminal, you can specify PPP or IP. PPP is assigned to <cid>=1 and IP is assigned to <cid>=3 by default.

*3 : <APN> is an arbitrary character string indicating each access point name.

• Operation performed when the parameter is omitted

+CGDCONT= : Sets the initial value to all <cid>.

+CGDCONT=<cid> : Sets the specified <cid> to the initial value.

+CGDCONT=? : Displays a list of values that can be set.

+CGDCONT? : Displays the current setting.

• Command execution example

Command for registering an APN name of abc (when cid is 2).

AT+CGDCONT=2,"PPP","abc"

OK

■ Command name: +CGEQMIN=[parameter]

• Outline

Registers a criterion to be used to decide whether or not to allow the QoS (quality of service) that is informed from the network side when PPP packet communication is established.

There are 4 setting patterns as described in the following command execution example.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [W], nor reset by [F] or [Z].

• Format

+CGEQMIN=[<cid>[,<Maximum bitrate UL>[,<Maximum bitrate DL>]]]

• Explanation of the parameters

<cid>*1 : 1 ~ 10

<Maximum bitrate UL>*2 : None (initial value) or 384

<Maximum bitrate DL>*2 : None (initial value) or 3,648

*1 : <cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.

*2 : <Maximum bitrate UL> and <Maximum bitrate DL> set the minimum communication speed (kbps) of uplink and downlink between the FOMA terminal and base station. When it is set to "None" (initial value), all speeds will be permitted, but when set to 384 or 3,648, a connection at a speed of other values will not be permitted, and a packet communication may not be connected.

• Operation performed when the parameter is omitted

+CGEQMIN= : Sets the initial value to all <cid>.

+CGEQMIN=<cid> : Sets the specified <cid> to the initial value.

+CGEQMIN=? : Displays a list of values that can be set.

+CGEQMIN? : Displays the current setting.

- **Command execution example**

Only the following 4 patterns can be set. (1) is set as an initial value to each cid.

- (1) Command for permitting all speeds of both uplink and downlink (when cid is 2)
AT+CGEQMIN=2
OK
- (2) Command for permitting only the speed of uplink 384kbps and downlink 3,648kbps (when cid is 4)
AT+CGEQMIN=4,,384,3648
OK
- (3) Command for permitting uplink 384kbps and all speeds of downlink (when cid is 5).
AT+CGEQMIN=5,,384
OK
- (4) Command for permitting all speeds of uplink and only 3,648kbps of downlink (when cid is 6)
AT+CGEQMIN=6,,,3648
OK

■ **Command name: +CGEQREQ=[parameter]**

- **Outline**

Sets the QoS (quality of service) to be requested to network when originating a PPP packet communication.

For setting, only the following pattern in the command execution example can be set, which is also set as an initial value.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

- **Format**

+CGEQREQ=[<cid>]

- **Explanation of the parameters**

<cid>* : 1 to 10

* : <cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.

- **Operation performed when the parameter is omitted**

+CGEQREQ= : Sets the initial value to all <cid>.

+CGEQREQ=<cid> : Sets the specified <cid> to the initial value.

+CGEQREQ=? : Displays a list of values that can be set.

+CGEQREQ? : Displays the current setting.

- **Command execution example**

Only the following 1 pattern can be set. This is set to each cid as an initial value.

Command for requesting a connection at a speed of uplink 384kbps and downlink 3,648kbps (when cid is 2).

AT+CGEQREQ=2
OK

Saving modem port command setting value

The values set by AT commands are initialized every time the power of FOMA terminal is turned on or off, except the access point name (APN) set by AT+CGDCONT command (p.32), QoS setting by AT+CGEQMIN/AT+CGEQREQ command, permit or reject incoming call setting by AT * DGAPL/AT * DGARL/AT * DGANSIM command and the setting for specifying sending/not sending caller ID of packet communication set by AT * DGPIR command. However, you can save the values set by commands with [&W] if you enter

AT&W 

after the setting. In this case, other set values with [&W] will also be saved. These values can be retrieved by entering

ATZ 

even after the power is turned on or off.

Result codes

■ Result codes related with data communication

Number indication	Character indication	Description
0	OK	Successfully executed.
1	CONNECT	Connected.
2	RING	Incoming call.
3	NO CARRIER	Line disconnected.
4	ERROR	Command not acceptable.
6	NO DIALTONE	Unable to detect dialing tone.
7	BUSY	Busy tone detected.
8	NO ANSWER	Time out in connection completing.
100	RESTRICTION	Network restricted.
101	DELAYED	Redialing restricted.

■ Extended result codes

• &E0

Number indication	Character indication	Description
122	CONNECT 64000	Connected between the FOMA terminal and base station at 64,000bps.
125	CONNECT 384000	Connected between the FOMA terminal and base station at 384,000bps.
133	CONNECT 3648000	Connected between the FOMA terminal and base station at 3,648,000bps.

• &E1

Number indication	Character indication	Description
5	CONNECT 1200	Connected between the FOMA terminal and PC at 1,200bps.
10	CONNECT 2400	Connected between the FOMA terminal and PC at 2,400bps.
11	CONNECT 4800	Connected between the FOMA terminal and PC at 4,800bps.
13	CONNECT 7200	Connected between the FOMA terminal and PC at 7,200bps.
12	CONNECT 9600	Connected between the FOMA terminal and PC at 9,600bps.
15	CONNECT 14400	Connected between the FOMA terminal and PC at 14,400bps.
16	CONNECT 19200	Connected between the FOMA terminal and PC at 19,200bps.
17	CONNECT 38400	Connected between the FOMA terminal and PC at 38,400bps.
18	CONNECT 57600	Connected between the FOMA terminal and PC at 57,600bps.
19	CONNECT 115200	Connected between the FOMA terminal and PC at 115,200bps.
20	CONNECT 230400	Connected between the FOMA terminal and PC at 230,400bps.
21	CONNECT 460800	Connected between the FOMA terminal and PC at 460,800bps.

■ Communication protocol result codes

Number indication	Character indication	Description
1	PPPOverUD	Connected by PPPOverUD (BC=UDI, +CBST=116,1,0)
3	AV64K	Connected by AV (Videophone) [64K]
5	PACKET	Connected by Packet

NOTE

- The result code appears as character indication (default value) when ATV η command (p.55) is set to $\eta=1$, and as number indication when the command is set to $\eta=0$.
- Though the communication speed appears in order to maintain a compatibility with the modem connected by traditional RS-232C, it differs from the actual connection speed because the FOMA terminal and PC are connected via FOMA USB Cable with Charge Function 01/02 (optional).
- "RESTRICTION" (Number indication: 100) indicates that the network is congested. If this is displayed, wait for a while and then try again.

Result code display example

■ When ATX0 is set

Regardless of the AT+Vn command (p.53) setting, only CONNECT appears when the connection is completed.

Character indication example: ATD * 99 * * * 1#
CONNECT
Number indication example: ATD * 99 * * * 1#
1

■ When ATX1 is set

• ATX1, AT+V0 are set (default)

Displayed in CONNECT <rate between the FOMA terminal and the PC> format when the connection is completed.

Character indication example: ATD * 99 * * * 1#
CONNECT 460800
Number indication example: ATD * 99 * * * 1#
1 21

• ATX1, AT+V1 are set *

The following format appears when the connection is completed:

CONNECT <rate between the FOMA terminal and the PC> PACKET <Connecting party's APN>/ <Upstream (the FOMA terminal → Wireless base station) maximum rate>/<Downstream (the FOMA terminal ← Wireless base station) maximum rate >

The following sample indicates that a connection is made to mopera.ne.jp at maximum 384kbps for sending, and maximum 3,648kbps for receiving.

Character indication example: ATD * 99 * * * 1#
CONNECT 460800 PACKET mopera.ne.jp/384/3648
Number indication example: ATD * 99 * * * 1#
1 21 5

* : If both ATX1 and AT+V1 are set simultaneously, a dial-up connection may not be correctly made. The single setting of AT+V0 is recommended.

List of disconnection reasons

■ Packet communication

Value	Reason
26 27	Missing or incorrect APN.
30	Activation rejected by the network.
33	Requested service option not subscribed.
36	Disconnected successfully.

■ 64K data communication

Value	Reason
1	The specified number does not exist.
16	Disconnected successfully.
17	Cannot communicate because the other party's line is busy.
18	Dialed, but no response within the specified time.
19	Cannot communicate because the other party is ringing.
21	The other party has rejected the communication.
63	The service or option of the network is not valid.
65	A transmission capacity not provided has been specified.
88	Sent to a terminal with different terminal attributes or received call.

FOMA® SO705i

Kuten Code List

Kuten Code List

<Guide to the kuten code table>

First enter "digits 1-3 of the kuten code" then "digit 4".

- Some kuten codes in the table here may look different from what actually appear on screens.

[illegible]

First to third digits of Kuten codes	Fourth digit of Kuten codes									First to third digits of Kuten codes	Fourth digit of Kuten codes									First to third digits of Kuten codes	Fourth digit of Kuten codes									
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9								
245	糊	鼓	梧	孤	胡	虎	跨	鉗	雇		す										377	石	島	嶋	掉	搭	桃	棟		
246	顧	梧	伍	伍	伍	午	吾	娛	後		吹	簡	推	誦							378	盜	湯	湯	統	燈	東	桃	等	
247	御	鼓	伍	伍	伍	暮	語	公	嗣		逐	推	推	水							379	客	湯	湯	統	燈	當	瘡	等	
248	効	鯉	胡	胡	胡	候	誤	功	功		極	錘	錘	隨							380	陶	湯	湯	統	燈	當	瘡	等	
249	効	鯉	胡	胡	胡	候	誤	功	功		極	錘	錘	隨							381	童	湯	湯	統	燈	當	瘡	等	
250																					382	童	湯	湯	統	燈	當	瘡	等	
251																					383	童	湯	湯	統	燈	當	瘡	等	
252																					384	童	湯	湯	統	燈	當	瘡	等	
253																					385	童	湯	湯	統	燈	當	瘡	等	
254																					386	童	湯	湯	統	燈	當	瘡	等	
255																					387	童	湯	湯	統	燈	當	瘡	等	
256																					388	童	湯	湯	統	燈	當	瘡	等	
257																					389	童	湯	湯	統	燈	當	瘡	等	
258																					390	童	湯	湯	統	燈	當	瘡	等	
259																					391	童	湯	湯	統	燈	當	瘡	等	
260																					392	童	湯	湯	統	燈	當	瘡	等	
261																					393	童	湯	湯	統	燈	當	瘡	等	
262																					394	童	湯	湯	統	燈	當	瘡	等	
263																					395	童	湯	湯	統	燈	當	瘡	等	
264																					396	童	湯	湯	統	燈	當	瘡	等	
265																					397	童	湯	湯	統	燈	當	瘡	等	
266																					398	童	湯	湯	統	燈	當	瘡	等	
267																					399	童	湯	湯	統	燈	當	瘡	等	
268																					400	童	湯	湯	統	燈	當	瘡	等	
269																					401	童	湯	湯	統	燈	當	瘡	等	
270																					402	童	湯	湯	統	燈	當	瘡	等	
271																					403	童	湯	湯	統	燈	當	瘡	等	
272																					404	童	湯	湯	統	燈	當	瘡	等	
273																					405	童	湯	湯	統	燈	當	瘡	等	
274																					406	童	湯	湯	統	燈	當	瘡	等	
275																					407	童	湯	湯	統	燈	當	瘡	等	
276																					408	童	湯	湯	統	燈	當	瘡	等	
277																					409	童	湯	湯	統	燈	當	瘡	等	
278																					410	童	湯	湯	統	燈	當	瘡	等	
279																					411	童	湯	湯	統	燈	當	瘡	等	
280																					412	童	湯	湯	統	燈	當	瘡	等	
281																					413	童	湯	湯	統	燈	當	瘡	等	
282																					414	童	湯	湯	統	燈	當	瘡	等	
283																					415	童	湯	湯	統	燈	當	瘡	等	
284																					416	童	湯	湯	統	燈	當	瘡	等	
285																					417	童	湯	湯	統	燈	當	瘡	等	
286																					418	童	湯	湯	統	燈	當	瘡	等	
287																					419	童	湯	湯	統	燈	當	瘡	等	
288																					420	童	湯	湯	統	燈	當	瘡	等	
289																					421	童	湯	湯	統	燈	當	瘡	等	
290																					422	童	湯	湯	統	燈	當	瘡	等	
291																					423	童	湯	湯	統	燈	當	瘡	等	
292																					424	童	湯	湯	統	燈	當	瘡	等	
293																					425	童	湯	湯	統	燈	當	瘡	等	
294																					426	童	湯	湯	統	燈	當	瘡	等	
295																					427	童	湯	湯	統	燈	當	瘡	等	
296																					428	童	湯	湯	統	燈	當	瘡	等	
297																					429	童	湯	湯	統	燈	當	瘡	等	
298																					430	童	湯	湯	統	燈	當	瘡	等	
299																					431	童	湯	湯	統	燈	當	瘡	等	
300																					432	童	湯	湯	統	燈	當	瘡	等	
301																					433	童	湯	湯	統	燈	當	瘡	等	
302																					434	童	湯	湯	統	燈	當	瘡	等	
303																					435	童	湯	湯	統	燈	當	瘡	等	
304																					436	童	湯	湯	統	燈	當	瘡	等	
305																					437	童	湯	湯	統	燈	當	瘡	等	
306																					438	童	湯	湯	統	燈	當	瘡	等	
307																					439	童	湯	湯	統	燈	當	瘡	等	
308																					440	童	湯	湯	統	燈	當	瘡	等	
309																					441	童	湯	湯	統	燈	當	瘡	等	
310																					442	童	湯	湯	統	燈	當	瘡	等	
311																					443	童	湯	湯	統	燈	當	瘡	等	
312																					444	童	湯	湯	統	燈	當	瘡	等	
313																					445	童	湯	湯	統	燈	當	瘡	等	
314																					446	童	湯	湯	統	燈	當	瘡	等	
315																					447	童	湯	湯	統	燈	當	瘡	等	

First to third digits of Kuten codes	Fourth digit of Kuten codes									First to third digits of Kuten codes	Fourth digit of Kuten codes									First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8
436					ま					488	倭	假	偕	僂	僂	僂	僂	僂	僂	僂	564	愴	慼	慼	慼	慼	慼	慼	慼	慼	慼
437	味	枚	摩	磨	魔	麻	妹			489	傀	僂	僂	僂	僂	僂	僂	僂	僂	僂	565	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
438	樹	每	模	膜	末	沫	妹			490	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	566	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
439	鱗	亦	暮	抹	末	沫	妹			491	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	567	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
440	鱗	萬								492	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	568	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
441	蜜	奏	未	妙	已	箕	岬			493	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	569	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
442										494	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	570	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
443	夢	無	牟	霧	鵲	棕	婿			495	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	571	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
444										496	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	572	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
445	名	命	迷	銘	鳴	姪	娘			497	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	573	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
446	免	綿	迷	繡	繡	模	茂			498	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	574	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
447	孟	毛	盲	網	耗	摸	茂			499	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	575	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
448	目	猛	餅	網	耗	摸	茂			500	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	576	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
449	矢	厄	也	冶	夜	爺	耶			501	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	577	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
450	鐘	役	約	葉	詠	躍	柳			502	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	578	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
451										503	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	579	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
452	偷	油	愈	優	勇	有	幽			504	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	580	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
453	悠	輸	柚	優	勇	有	幽			505	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	581	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
454	祐	裕	遊	郵	雄	融	夕			506	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	582	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
455										507	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	583	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
456	余	與	預	備	洋	躍	妖			508	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	584	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
457	揚	搖	備	要	躍	躍	容			509	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	585	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
458	螺	裸	菜	賴	雷	洛	落			510	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	586	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
459	亂	卵	嵐	欄	蘭	蘭	覽			511	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	587	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
460										512	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	588	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
461	履	李	理	離	流	律	立			513	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	589	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
462	剋	裏	裡	離	流	律	立			514	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	590	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
463	隆	電	留	留	流	律	立			515	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	591	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
464	權	龍	留	留	流	律	立			516	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	592	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
465	厘	凌	留	留	流	律	立			517	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	593	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
466										518	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	594	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
467	壘	望	賴	雷	洛	落	落			519	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	595	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
468	嶺	玲	令	令	令	令	令			520	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	596	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
469	嶺	玲	令	令	令	令	令			521	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	597	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
470	嶺	玲	令	令	令	令	令			522	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	598	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
471										523	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	599	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
472	露	勞	婁							524	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	600	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
473	叅	狼	錄							525	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	601	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
474										526	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	602	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
475	梓	鷺	互							527	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	603	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
476										528	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	604	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
477	碗	碗	互	倭	巨	話				529	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	605	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
478										530	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	606	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
479										531	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	607	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
480										532	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	608	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
481										533	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	609	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
482										534	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	610	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
483										535	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	611	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
484										536	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	612	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
485										537	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	613	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
486										538	僂	僂	僂	僂	僂	僂	僂	僂	僂	僂	614	慼	慼	慼	慼	慼	慼	慼	慼	慼	慼
487																															

