

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



© Vodafone Group 2007. Vodafone, the Vodafone logos, and Vodafone live! are trade marks of the Vodafone Group. Other product and company names mentioned herein may be the trade marks of their respective owners.

Printed in Korea
Code No.:GH68-15332A
English. 07/2007. Rev. 1.0

User Manual
SGH-L760V

Draft_4th
2007. 07. 05

Designed for
Vodafone live!





Important safety precautions

- Failure to comply with the following precautions may be dangerous or illegal.

Copyright information

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Bluetooth QD ID: B012755
- Java™ is a trademark or registered trademark of Sun Microsystems, Inc.
- Picsel and Picsel Viewer™ are trademarks of Picsel Technologies, Inc.
- Window Media Player® is a registered trademark of Microsoft Corporation.

Drive safely at all times

Do not use a hand-held phone while driving. Park your vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service


 



Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 32.

About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  → Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
-  [] Indicates a key on the phone.
For example, []
-  < > Indicates a soft key, whose function is displayed on the phone screen.
For example, < **Select** >



- **3G**
Your phone is capable of operating in a 3G environment, allowing much greater data transfer speed, video streaming, and video conferencing.

Special features of your phone



- **Camera and camcorder**
Use the camera module on your phone to take a photo or record a video.



- **Synchronisation with Windows Media Player**
Transfer music files to your phone directly from the Windows Media Player.



- **Music player**

Play music files using your phone as a music player.



- **Bluetooth**

Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



- **File viewer**

Open documents in various formats on the phone without corruption.



- **Messenger**

Have a conversation with other people by sending and receiving instant messages.



- **Web browser**

Access the wireless web to get up-to-the-minute information and a wide variety of media content.



- **Email**

Send and receive emails with image, video, and audio attachments.



- **Postcard**

Send photos to your family or friends as an actual postcard.



- **Calendar**

Keep track of your daily, weekly, and monthly schedule.

Contents

Unpack **6**

Make sure you have each item

Get started **6**

First steps to operating your phone

Assemble and charge the phone	6
Power on or off.....	7
Phone layout.....	7
Keys and icons	8
Access menu functions	11
Use Toolbar menu icons.....	11
Enter text	12
Customise your phone.....	12

Step outside the phone **14**

Begin with call functions, camera, music player, web browser, and other special features

Make or answer calls.....	14
Use the camera	15
Play music	16
Browse the web.....	17
Use Contacts.....	19

Send messages.....	19
View messages	21
Use Bluetooth	21
Switch applications	22

Menu functions **23**

All menu options listed

Health and safety information **32**

Overview of menu functions

To access Menu mode, press <**Menu**> in Idle mode.

1 Entertainment

- 1 Games
- 2 Camera
- 3 Mobile TV
- 4 Videos

2 Vodafone Live!

- 1 Vodafone Live!
- 2 Enter URL
- 3 Bookmarks
- 4 History
- 5 Advanced
- 6 Browser settings
- 7 Saved pages
- 8 Games
- 9 Ringtones
- 10 Pictures
- 11 News
- 12 Sports

3 Calls

4 Music

- 1 My music
- 2 Radio DJ¹
- 3 Music store
- 4 My wishlist¹

5 Messaging

- 1 Create message
- 2 Inbox
- 3 Email inbox
- 4 Drafts
- 5 Outbox
- 6 Sent message
- 7 My folder
- 8 Templates
- 9 Messenger¹
- 10 Voice mail
- 11 live! Studio¹
- 12 Delete all
- 13 Messaging settings
- 14 Memory status

6 My files

- Pictures
- Videos
- Ringtones
- Games

6 My files

- Music
- Applications
- Themes
- Voice recordings
- Other documents
- live! Studio¹
- Memory status

7 Organiser & Tools

- 1 Vodafone²
- 2 Alarms
- 3 My Applications
- 4 Calendar
- 5 Bluetooth
- 6 Synchronise
- 7 Calculator
- 8 Converter
- 9 Task
- 10 Memo
- 11 Voice recorder
- 12 World clock
- 13 Timer
- 14 Stopwatch
- 15 Memory status

8 Contacts

9 Settings

- 1 Phone settings
- 2 Display & light settings
- 3 Messaging settings
- 4 Call settings
- 5 Contact settings
- 6 Calendar settings
- 7 Camera settings
- 8 Media player settings
- 9 Network settings
- 10 Security
- 11 Memory settings

1. Available only if supported by your country but labelled differently.

2. Available only if supported by your USIM or SIM card.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide
- Headset

 
You can obtain various accessories from your local Samsung dealer.

- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.


Get started

First steps to operating your phone

Assemble and charge the phone

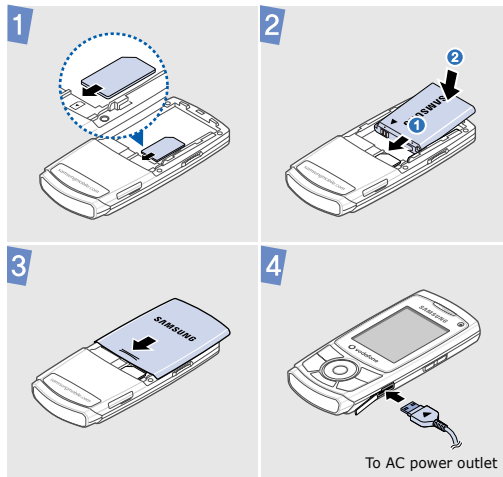

Removing the battery cover

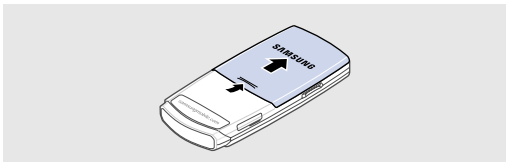 


Power on or off

Switch on	<ol style="list-style-type: none">1. Open the phone.2. Press and hold [Power].3. If necessary, enter the PIN and press <Confirm>.
Switch off	<ol style="list-style-type: none">1. Open the phone.2. Press and hold [Power].

Low battery indicator

When the battery is low:

- a warning tone sounds,
- the low battery message displays, and
- the empty battery icon  blinks.

 
If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

Phone layout

Front view



Rear view

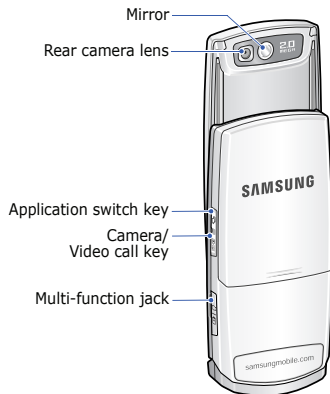

- When you close the phone, it locks the exposed keys to prevent any unwanted phone operations, from accidentally pressing any of the keys. To unlock the keypad, press <Unlock> and then <OK>.

Keys and icons

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, access your favourite menus directly.
In Menu mode, scroll through menu options.



In Idle mode, access Menu mode.
In Menu mode, select the highlighted menu option or confirm input.



Make or answer a call.
In Idle mode, retrieve the numbers recently dialed, missed, or received.



Delete characters from the display or items in an application.



Press and hold to switch the phone on or off.
End a call.
In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.

In Idle mode, press and hold [**1**] to access your voicemail server. Press and hold [**0**] to enter an international call prefix.



Enter special characters or perform special functions.



In Idle mode, press and hold [**#**] to activate or deactivate the Silent profile. Press and hold [*****] to enter a pause between numbers.



Adjust the phone volume.



Open the application switch window to access other applications without exiting the current application.



In Idle mode, press and hold to turn on the camera, or make a video call.

In Camera mode, take a photo or record a video.

In the dialling screen, make a video call.

Icons

The following icons may appear on the top line of the screen to indicate your phone's status. Depending on your country or service provider, the icons shown on the display may vary.



Signal strength



GPRS (2.5G) network



Connecting to GPRS (2.5G) network or transferring data in GPRS (2.5G) network



EDGE network



Connecting to EDGE network or transferring data in EDGE network



UMTS (3G) network



Connecting to UMTS (3G) network or transferring data in UMTS (3G) network



Voice call in progress



Out of your service area



Video call in progress



Out of your service area



Roaming network



Bluetooth active



Connected with PC via a USB port



Browsing Internet



Connected to secured web page



Memory card inserted



New message:

- : Text message
 - : Multimedia message
 - : Email
 - : Voicemail
 - : Push message
 - : Configuration message
-




Profile setting:

- : Normal
- : Silent
- : Car
- : Meeting
- : Outdoor
- : Sleeping
- : Flight









Battery power level

Access menu functions

Select an option	<ol style="list-style-type: none">1. Press a desired soft key.2. Press the Navigation keys to move to the next or previous option.3. Press <Select> or [Centre] to confirm the function displayed or option highlighted.4. Press <Back> to move up one level. Press [] to return to Idle mode.
Use menu numbers	Press the number key corresponding to the option you want.

Use Toolbar menu icons

In Idle mode, there are icons on the centre of the display, which give you easy access to popular menus.

Navigate around the Toolbar screen	<ul style="list-style-type: none">• To access Toolbar menu icons, press <Toolbar> in Idle mode.• To scroll through menu icons, press [Left] or [Right].• To scroll through submenus in a menu, press [Up] or [Down].• To open a menu window, press [Centre].• To close a menu window, press <Exit>.
Available menu icons	<ul style="list-style-type: none">•  : access the Vodafone Live! menu.•  : access a missed call log list.•  : create a new message or view received messages.•  : change the profile settings.•  : assign or change your shortcut assignments.•  : view missed event alarms and access the calendar.

Enter text

Change the text input mode	<ul style="list-style-type: none"> Press and hold [*] to switch between T9 mode and ABC mode. Press [*] to change case or switch to Number mode. Press and hold [#] to switch to Symbol mode.
ABC mode	<p>To enter a word:</p> <p>Press the appropriate key until the character you want appears on the display.</p>
T9 mode	<p>To enter a word:</p> <ol style="list-style-type: none"> Press [2] to [9] to start entering a word. Enter the whole word before editing or deleting characters. When the word displays correctly, press [#] to insert a space. Otherwise, press [0] to display alternative word choices.
Number mode	<p>Press the keys corresponding to the digits you want.</p>

Symbol mode	<p>Press the corresponding number key to select a symbol.</p>
Other operations	<ul style="list-style-type: none"> Press [1] to enter punctuation marks or special characters. Press [#] to insert a space. Press the Navigation keys to move the cursor. Press [C] to delete characters one by one. Press and hold [C] to clear the entire display.

Customise your phone

Display language	<ol style="list-style-type: none"> In Idle mode, press <Menu> and select Settings → Phone settings → Language → Screen text. Select a language and press <OK>. Press <Options> and select Save.
------------------	--

Call ringer melody

To change the profile properties:

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Phone profiles**.
2. Scroll to the sound profile you are using.
3. Press <Options> and select **Edit**.
4. Select **Voice call ringtone** or **Video call ringtone**.
5. Press <Options> and select **Change** → **Use my ringtone**.
6. Select a ringtone and press <Select>.
7. Press <Options> and select **Save**.

To change the sound profile:

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Phone profiles**.
2. Select the profile you want.
3. Press [Centre].

Key tone volume

In Idle mode, press [▲/▼] to adjust the key tone volume.

Idle mode wallpaper

1. In Idle mode, press <Menu> and select **Settings** → **Display & light settings** → **Wallpaper** → **Pictures**.
2. Press <Edit>.
3. Select an image.
4. Press <Set>.

Menu shortcuts

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.
4. Press <Save>.

Silent profile

You can activate the Silent profile to avoid disturbing other people. In Idle mode, press and hold [#].

Phone lock

1. In Idle mode, press <Menu> and select **Settings** → **Security** → **Phone lock**.
2. Select **Enable** and press <Save>.
3. Enter a new 4- to 8-digit password and press <Confirm>.
4. Enter the new password again and press <Confirm>.

Step outside the phone

Begin with call functions, camera, music player, web browser, and other special features

- Services might not be available in all countries.

Make or answer calls

Make a call

To make a voice call:

1. In Idle mode, enter an area code and phone number.
2. Press [].
Press [/] to adjust the volume.
3. Press [] to end the call.

To make a video call:

1. In Idle mode, enter an area code and phone number.
2. Press [].
3. Press [] to end the call.

Answer a call


1. When the phone rings, press [].
2. Press [] to end the call.

Use the speakerphone feature

During a call, press [Centre] and then <Yes> to activate the speaker.
Press [Centre] again to switch back to the earpiece.




- Closing the phone while using the speaker ends the current call.

Make a multi-party call

1. During a call, call the second participant.
The first call is put on hold.
2. Press <Options> and select **Conference call**.
3. Repeat step 1 and 2 to add more participants.
4. During a multi-party call:
 - Press <Options> and select **Private call** to have a private conversation with one participant.
 - Press <Options> and select **End** → **Select participant** → a participant you want to drop → **Drop** to drop one participant.
5. Press [>] to end the multi-party call.

Use the camera



Take a photo


1. In Idle mode, press and hold [>] to turn on the camera.
2. Aim the lens at the subject and make any desired adjustments.
3. Press [Centre] or [>] to take a photo. The photo is saved automatically.
4. Press [Centre] to send a message, or <> to take another photo.

View a photo

1. In Idle mode, press <Menu> and select **My files** → **Pictures**.
2. Select the photo you want.

Record a video

1. In Idle mode, press and hold [>] to turn on the camera.
2. Press [**1**] to switch to Record mode.
3. Press [Centre] or [>] to start recording.

4. Press [Centre] or [] to stop recording. The video is saved automatically.
5. Press <Back> to record another video.

View a video

1. In Idle mode, press <Menu> and select **My files** → **Videos**.
2. Select the video you want.

Play music

Prepare music files

Use these methods:

- Download from Vodafone Live!
- Download from a PC using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- Receive via Bluetooth.
- Copy to a memory card and insert the card into the phone.
- Synchronise music files with Windows Media Player. See the next section.

Synchronise with Windows Media Player

You can copy music files to your phone by synchronising with Windows Media Player 11.

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **USB** → **Media Player**.
2. Connect your phone and PC with an optional PC data cable.
3. Select **Sync digital media files to this device** when a pop-up window appears on your PC.
4. Enter the name of your phone and click **Finish**.
5. Select and drag the music files you want to the sync list.
6. Click **Start Sync**.
7. When synchronisation is finished, disconnect the phone from the PC.

Play music files

1. In Idle mode, press <**Menu**> and select **Music** → **My music**.
2. Select a music category → a music file.
3. During playback, use the following keys:
 - Centre: pause or resume playback.
 - Left: return to the previous file. Press and hold to scan backward in a file.
 - Right: skip to the next file. Press and hold to scan forward in a file.
 - Up: rate the current song.
 - ▲/▼: adjust the volume.
4. Press [Down] to stop playback.

Create a playlist

1. From the music player screen, press <**Options**> and select **Open playlist** → **All** → **Playlists**.
2. Press <**Options**> and select **Create playlist**.

3. Enter the title of the playlist and press <**Save**>.
4. Select the added playlist.
5. Press <**Options**> and select **Add** → a source.
6. Select a music category → a file, or select the files you want and press <**OK**>.
7. Press [Centre] to play music.

Browse the web

Launch the web browser

In Idle mode, press <**Menu**> and select **Vodafone Live!** → **Vodafone Live!** The Vodafone Live! homepage opens.

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [Centre].
- To return to the previous page, press <**Back**>.

Use the browser options

Press <**Options**> to access the following options:

- **Go to:** go to the linked web page.
- **Go:** move backward or forward through pages in history.
- **Reload:** reload the page with updated information.
- **Desktop view/Smart-fit view:** change the display mode of the browser.
- **Page size:** change the web page size.
- **Go to homepage:** return to the homepage.
- **Add to Bookmarks:** add the page to your bookmark list.
- **View Bookmarks:** access the bookmark list.
- **Send URL:** send the URL of the page as a data file via multimedia message, email, or Bluetooth.

- **Enter URL:** enter the URL address of the web page you want to access.
- **Copy URL:** send the URL address of the web page by adding it to the message text.
- **Save:** save images on the web page or the entire web page.
- **Saved pages:** access the web pages you have saved.
- **Last viewed page:** access the web page you have accessed recently.
- **History:** access the list of web pages you have accessed.
- **Advanced:** change the various settings for the browser.
- **Exit:** exit the web browser.

Use Contacts

Add a contact

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Add to Contacts** → a memory location → **New**.
3. For **Phone**, select a number type.
4. Specify contact information.
5. Press [Centre], or press **<Options>** and select **Save** to save the contact.

Find a contact

1. In Idle mode, press **<Menu>** and select **Contacts**.
2. Enter the first few letters of the name you want.
3. Select a contact.
4. Scroll to a number and press [↩] to dial, or press **<Options>** and select **Edit** to edit contact information.

Send messages

Send a text message

1. In Idle mode, press **<Menu>** and select **Messaging** → **Create message** → **Message**.
2. Enter your message.
3. Press [Up] to move to the recipient field.
4. Enter a destination number.
5. Press **<Options>** and select **Send** to send the message.

Send a multimedia message

1. In Idle mode, press **<Menu>** and select **Messaging** → **Create message** → **Message**.
2. Enter your message.
3. Press **<Options>** and select **Advanced** → **Add subject**.
4. Press **<OK>**.
5. Enter the message subject.
6. Press **<Options>** and select **Advanced** → **Add attachment** or **Insert**.
7. Add a media file, Contacts entry, Calendar item, or bookmark item.

8. Press [Up] to move to the recipient field.
9. Enter destination numbers or email addresses.
10. Press <Options> and select **Send** to send the message.

Send a postcard

1. In Idle mode, press <Menu> and select **Messaging** → **Create message** → **live!** → **Postcard**.
2. Press [Down] and enter your message.
3. Select **Picture** → an image.
4. When you have finished, select **[Recipient]** → **Contacts** or **New address**.
5. If you select **Contacts**, select a postal address.
If you select **New address**, specify the destination information.
6. When you have finished, press <Options> and select **Send** to send the postcard.

Depending on the country, this feature may not be available and be labelled differently.

Send an email

1. In Idle mode, press <Menu> and select **Messaging** → **Create message** → **Email**.
2. Enter the email text.
3. Press [Up] and enter the email subject.
4. Press <Options> and select **Add attachment** or **Create item**.
5. Add a media file, Contacts entry, Calendar item, or a bookmark item.
6. Press [Up] to move to the recipient field.
7. Enter email addresses.
8. Press <Options> and select **Send** to send the email.

View messages

View a text message

1. In Idle mode, press <Menu> and select **Messaging** → **Inbox**.
2. Select a text message.

View a multimedia message

1. In Idle mode, press <Menu> and select **Messaging** → **Inbox**.
2. Select a multimedia message.

View an email

1. In Idle mode, press <Menu> and select **Messaging** → **Email inbox**.
2. Press <Options> and select **Download**.
3. Select an email or a header.
4. If you selected a header, press <Options> and select **Retrieve** to view the body of the email.

Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

1. In Idle mode, press <Menu> and select **Organiser & Tools** → **Bluetooth** → **Activation** → **On**.
2. Select **My phone's visibility** → **On** to allow other devices to locate your phone.

Search for and pair with a Bluetooth device

1. In Idle mode, press <Menu> and select **Organiser & Tools** → **Bluetooth** → **My devices** → **Search new device**.
2. Select a device.
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press <OK>. When the owner of the other device enters the same code, pairing is complete.

Send data

1. Access an application, such as **Contacts**, **My files**, **Calendar**, **Task**, or **Memo**.
2. Select an item.
3. Press <Options> and select **Send contact detail via** or **Send** → **Bluetooth** or **Via Bluetooth**.
4. Search for and select a device.
5. If necessary, enter the Bluetooth PIN and press <OK>.

Receive data

1. When a device attempts to access your phone, press <Yes> to permit the connection.
2. If necessary, press <Yes> to confirm that you are willing to receive.

Switch applications

You can switch to other applications from a menu, without closing the menu screen you were using.

Switch to an application

1. While using a menu, press [⏏].
2. Select an application.

Available applications

- **Call**: open the dialling screen.
- **Messaging**: access the **Messaging** menu.
- **Vodafone Live!**: launch the web browser.

Close all running applications

1. Press [⏏].
2. Scroll to **End all?**.
3. Press <Yes>.

Menu functions

All menu options listed

This section provides brief explanations of menu functions on your phone.

Services might not be available in all countries.

Entertainment

Menu	Description
Games	Access the embedded Java games and download Java applications.
Camera	Use the camera embedded in your phone to take photos and record videos.
Mobile TV	Access the Vodafone online TV service to watch TV and use various Mobile TV services.
Videos	Access and play video files.

Vodafone Live!

Menu	Description
Vodafone Live!	Connect your phone to the network and load the Vodafone Live! homepage of the wireless web service provider.
Enter URL	Enter a URL address and access the associated web page.
Bookmarks	Save URL addresses in order to quickly access web pages.
History	Access the list of pages you have accessed recently.
Advanced	Access the advanced browser options and customise the settings.
Browser settings	Select a connection profile to be used for accessing the wireless web.

Menu	Description
Saved pages	Access the list of pages you have saved while online.
Games	Access the website preset by Vodafone Live! and download new games.
Ringtones	Access the website preset by Vodafone Live! and download ringtones.
Pictures	Access the website preset by Vodafone Live! and download pictures.
News	Access the website preset by Vodafone Live! and download recent news.
Sports	Access the website preset by Vodafone Live! and download sports news.

Calls

Check the most recent calls dialled, received, or missed.

Music

Menu	Description
My music	Access and listen to all music files sorted by criteria. You can also make your own music playlists.
Radio DJ	Listen to your favourite tracks, discover new music, and create your personal channels. You can also download music files you have just heard on the radio. This menu may not be available, depending on the country.
Music store	Access the website preset by Vodafone and download music.

Menu	Description
My wishlist	Access a list of tracks you added while using Radio DJ. This menu may not be available, depending on the country.

Messaging

Menu	Description
Create message	Create and send text, multimedia, voice, email messages, or postcards.
Inbox	Access messages that you have received.
Email inbox	Access emails that you have received.
Drafts	Access messages that you have saved to send at a later time.

Menu	Description
Outbox	Access messages that the phone is attempting to send or has failed to send.
Sent message	Access messages that you have sent.
My folder	Create new folders and organise your messages.
Templates	Make and use templates of frequently used messages or passages.
Messenger	Chat via the Instant Messaging service using your mobile phone with your friends or family.
Voice mail	Access the voicemail server.
live! Studio	Access your live! Studio online media album to upload media files and save multimedia messages on the web.

Menu	Description
Delete all	Delete messages in each message folder all at once.
Messaging settings	Set up various options for using the messaging services.
Memory status	Check information about the memory currently in use.

My files

Menu	Description
Pictures, Videos, Ringtones, Games, Music, Applications, Themes, Voice recordings, Other documents	Access media files and other files stored in the phone's memory.
live! Studio	Access your live! Studio web page and upload media files and multimedia messages to safe storage on the web.

Menu	Description
Memory status	Check information about the memory currently in use.

Organiser & Tools

Menu	Description
Vodafone	Use a variety of additional services offered by Vodafone. This menu is available only if supported by your USIM or SIM card.
Alarms	Set a wake-up call to wake you up in the morning or an alarm to alert you to an event at a specific time.
My Applications	Access applications stored in the phone memory.
Calendar	Keep track of your schedule.
Bluetooth	Connect the phone wirelessly to other Bluetooth devices.

Menu	Description
Synchronise	Synchronise your Contacts with the web server you have specified.
Calculator	Perform arithmetic functions.
Converter	Do conversions, such as length and temperature.
Task	Create a list of tasks you need to complete.
Memo	Make memos for things that are important and manage them.
Voice recorder	Record voice memos and any other sounds.
World clock	Set your local time zone and find out the current time in another part of the world.
Timer	Set a period of time for the phone to count down.

Menu	Description
Stopwatch	Measure elapsed time.
Memory status	Check memory information for calendar items.

Contacts

Search for contact information stored in Contacts.

Settings

Menu	Description
Phone settings → Phone profiles	Change the sound settings of the phone for different events or situations.
Phone settings → Language	Select a language for the display text.
Phone settings → Shortcuts	Use the Navigation keys as shortcuts to access specific menus directly from Idle mode.

Menu	Description
Phone settings → Time & date	Change the time and date displayed on your phone.
Phone settings → Volume key function	Set how the phone reacts if you press and hold [▲/▼] when a call comes in.
Phone settings → Camera key	Set a default function for [📷/📷].
Phone settings → Slide settings	Set how the phone reacts when you open it for an incoming call, and when you close it while using a function.
Phone settings → USB	Select a USB mode that will be used when you connect your phone to another device via USB interface.
Phone settings → Transaction tracking	Set the phone to keep track of your online purchases made on your phone.

Menu	Description
Phone settings → Expiry reminder	Set the phone to remind you of purchased items' expiry dates.
Display & light settings → Toolbar settings	Activate or deactivate Toolbar menu icons on the idle screen. You can also change your favourite shortcut menus.
Display & light settings → Wallpaper	Change the background image that is displayed in Idle mode.
Display & light settings → Greeting message	Enter the greeting that is displayed briefly on the display when the phone is switched on.
Display & light settings → Theme	Use this menu to select a theme. The theme is a collection of Idle mode wallpaper, Menu mode, wallpaper, power on/off image, voice/video call ringtone, and message alert tone assembled into one theme.

Menu	Description
Display & light settings → Pop up list menu	Display the pop-up list that shows the menu options.
Display & light settings → Brightness	Adjust the brightness of the display for varying lighting conditions.
Display & light settings → Backlight time	Select the length of time the backlight or display stays on when the phone is not used.
Display & light settings → Dialling display	Customise the settings for the display while dialling.
Messaging settings	Set up various options for using the messaging services.
Call settings → All calls	Change the default settings for voice calls, video calls, and data calls.
Call settings → Voice call	Access network services for voice calls.

Menu	Description
Call settings → Video call	Change the default settings for using the video call feature.
Call settings → Data call	Change the default settings for using the data call feature.
Contact settings → Speed dial	Assign speed dial numbers for your most frequently dialled numbers.
Contact settings → Save new contacts to	Select a default memory location for saving contacts.
Contact settings → View contacts from	Select a memory location from which Contacts shows entries.
Contact settings → Own number	Check your phone numbers, or assign a name to each of the numbers.
Calendar settings → Starting day	Select which day of the week the calendar starts with.

Menu	Description
Calendar settings → Default view mode	Select the default calendar view mode.
Camera settings	Change the default settings for taking photos or recording videos.
Media player settings	Change the default settings for playing music or video files.
Network settings → Network selection	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network settings → Network mode	Change to an appropriate band when you travel abroad.
Network settings → Preferred networks	Add a new network to your preferred network list, if your USIM or SIM card supports it.

Menu	Description
Network settings → Connections	Create and customise the profiles containing the settings for connecting your phone to the network.
Network settings → Browser settings	Select a connection profile to be used for accessing the wireless web.
Network settings → Streaming settings	Activate a connection profile to be used for accessing streaming servers.
Network settings → RDJ settings	Select a connection profile to be used for using the Radio DJ feature.
Security → Phone lock	Activate your phone password to protect your phone against unauthorised use.
Security → SIM lock	Set the phone to work only with the current USIM or SIM card by assigning a SIM lock password.

Menu	Description
Security → PIN lock	Activate your PIN to protect your USIM or SIM card against unauthorised use.
Security → Privacy lock	Lock access to messages, files, call logs, contacts, or calendar items.
Security → Fixed dialling mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your USIM or SIM card.
Security → Change phone password	Change the phone password.
Security → Change PIN code	Change the PIN.
Security → Change PIN2 code	Change your current PIN2, if supported by your USIM or SIM card.

Menu	Description
Security → Mobile tracker	Set the phone to send the preset tracking message to your family or friends when someone tries to use your phone with another USIM or SIM card. This feature may be unavailable due to certain features supported by your service provider.
Memory settings	Change the settings related with the memory and check information about the memory currently in use. You can also clear the memory.

Health and safety information

SAR certification information

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg and the highest SAR value for this device when tested at the ear was 0.554 W/kg¹. As mobile phone offer a range of functions, they can be used in other positions, such as on the body as described in this user guide². In this case, the highest tested SAR value is 0.574 W/kg.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

-
1. The tests are carried out in accordance with international guidelines for testing.
 2. For body worn operation, this model phone has been tested and meets the RF exposure guidelines when used with a Samsung-supplied or approved accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the service provider.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0° C (32° F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and - terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.

- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM Mobile Phone : SGH-L760W

Position only

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2001+A11:2004
	EN 301 489- 01 V1.5.1 (11-2004)
	EN 301 489- 07 V1.2.1 (08-2002)
EMC	EN 301 489- 17 V1.2.1 (08-2002)
	EN 301 489- 24 V1.2.1 (11-2002)
SAR	EN 50360 : 2001
	EN 50361 : 2001
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.6.1 (11-2004)
	EN 301 908- 1 V2.2.1 (10-2003)
	EN 301 908- 2 V2.2.1 (10-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex^(IV) of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

**BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168**

CE0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab,
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*
2007.04.23



Yong-Sang Park / S. Manager

(place and date of issue) (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.