

## Mobile Phone user manual

- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- Bluetooth QD ID : B015272

www.samsungmobile.com

Printed in Korea  
Code No.:GH68-23525A  
English (EU), 06/2009, Rev. 1.0



### Safety warnings

#### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

#### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

#### Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

#### Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

#### Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

#### Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

#### Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.

# CE0168



### Safety precautions

#### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

#### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

#### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

#### Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

#### Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

#### Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

#### Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.

- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

#### Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

#### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

#### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

#### Handle SIM cards and memory cards with care

 
- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.



### Important usage information

#### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

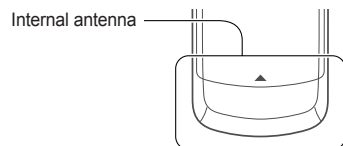

#### Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



#### Declaration of Conformity (R&TTE)

We, **Samsung Electronics**  
declare under our sole responsibility that the product

**GSM Mobile Phone : GT-M2510**

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2001 +A11:2004
EMC	EN 301 489-01 V1.6.1 (09-2005)
	EN 301 489-07 V1.3.1 (11-2005)
	EN 301 489-17 V1.2.1 (08-2002)
SAR	EN 50360 : 2001
	EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex(V) of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

 
BABT, Balfour House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK\*  
Identification mark: 0168

The technical documentation kept at:

**Samsung Electronics QA Lab.**


which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*

2009.05.19   
(place and date of issue) (name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

### Phone layout

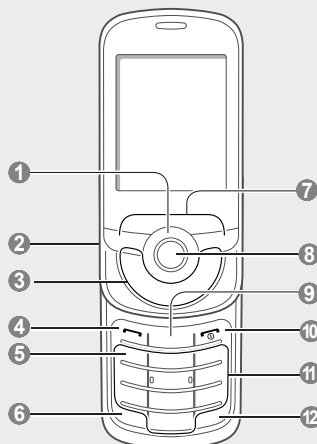 

#### 1 4-way navigation key

In Idle mode, access predefined menus; In Menu mode, scroll through menu options

#### 2 Volume key

In Idle mode, adjust the key tone volume  
▶ Activate and send an SOS message

#### 3 Music control keys

Control music playback

#### 4 Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

#### 5 Voice mail service key

In Idle mode, access voice mails (press and hold)

#### 6 Pause key

Enter a dial pause (press and hold)

#### 7 Softkeys

Perform actions indicated at the bottom of the display

#### 8 Confirm key

In Idle mode, access Menu mode; In Menu mode, select the highlighted menu option or confirm an input

#### 9 Delete key

Delete characters or items in an application

#### 10 Power/Menu exit key

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

#### 11 Alphanumeric keys

 
**Silent profile key**  
In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description	Icon	Description
	Signal strength		Music playback in progress
	GPRS network connected		Music playback paused
	EDGE network connected		FM radio on
	Call in progress		Normal profile activated
	SOS message feature activated		Silent profile activated
	Alarm activated		Battery power level
	Bluetooth activated		Current time
	New message		
	New voice mail message		

## Install the SIM card and battery

1. Remove the battery cover and insert the SIM card.

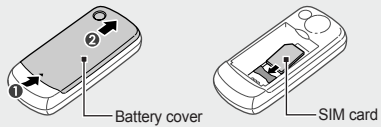

 2. Insert the battery and replace the battery cover.

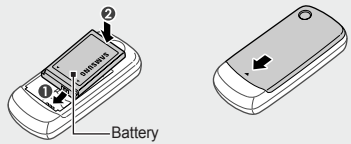


 

 
## Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.



- Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

## Instructional icons

	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Create message</b> (represents <b>Messages</b> , followed by <b>Create message</b> )
	<b>Square brackets:</b> phone keys; for example: [ <b>Power</b> ] (represents the Power/Menu exit key)
	<b>Angled brackets:</b> softkeys that control different functions at each screen; for example: < <b>OK</b> > (represents the <b>OK</b> softkey)

## Turn your phone on or off

To turn your phone on,

1. Slide open the phone.
2. Press and hold [**Power**].
3. Enter your PIN and press <**OK**> (if necessary).
4. When the setup wizard opens, customise your phone as desired by following the screen.

To turn your phone off, repeat steps 1 and 2 above.

## Access menus

To access your phone's menus,

1. In Idle mode, press the Confirm key to access Menu mode.

- You may need to press the Confirm key to access Menu mode depending on your region or service provider.

2. Use the Navigation key to scroll to a menu or option.
3. Press <**Select**>, <**Save**>, or the Confirm key to confirm the highlighted option.
4. Press <**Back**> to move up one level; Press [**Power**] to return to Idle mode.

- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

## Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [**Call**] to dial the number.
3. To end the call, press [**End**].

## Answer a call

1. When a call comes in, press [**Call**].
2. To end the call, press [**End**].

## Adjust the volume

### To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press <**Options**> → **Edit** → **Incoming calls**.
4. Select **Call alert volume**.
5. Scroll left or right to adjust the volume level.
6. Press <**Select**> → <**Save**>.

### To adjust the volume of voice during a call

While a call is in progress, press [**Up/Down**] to adjust the earpiece volume.

- In noisy environment, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

## Change your ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the profile you are using.
3. Press <**Options**> → **Edit** → **Incoming calls**.
4. Select **Voice call ringtone**.
5. Select a ringtone category → a ringtone.
6. Press <**Save**>.

## Call a recently dialed number

1. In Idle mode, press [**Call**].
2. Scroll left or right to a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or [**Call**] to dial the number.

## Enter text

### To change the text input mode

- Press and hold [**Hash**] to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [**Hash**] to change case or switch to Number mode.
- Press [**Asterisk**] to switch to Symbol mode.

### T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, select an alternate word from the list that appears.

### ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

### Number mode

Press the appropriate alphanumeric key to enter a number.

### Symbol mode

Press the appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press [C]. To delete all of the characters, press and hold [C].
- To insert a space between characters, press [0].
- To enter punctuation marks, press [1].

## Add a new contact

1. In Idle mode, enter a phone number and press <**Options**>.
2. Select **Save contact** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press <**Options**> → **Save** to add the contact to memory.

## Send and view messages

### To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a destination number and scroll down.
3. Enter the message text. ► *Enter text*  
For sending as a text message, skip to step 5.  
For attaching multimedia, continue with step 4.
4. Press <**Options**> → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

### To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

## Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To make a fake call, press and hold the Navigation key down in Idle mode.

## Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press <**OK**>.

- The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

3. Scroll left or right to **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press <**Options**> → **Phonebook** to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. Select a number (if necessary).
8. When you are finished selecting contacts, press <**Select**> to return to the recipient list.
9. Press <**Options**> → **OK** to save the recipients.
10. Scroll down and enter the sender's name.
11. Press <**Save**> → <**Accept**>.

## Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

### To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press <**Options**> → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <**Select**> to return to the recipient list.
8. Press <**Options**> → **Save** to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press <**Save**> → <**Yes**>.

### To send an SOS message

1. With the keys locked, press the Volume key down four times to send an SOS message to preset numbers.  
The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [**Power**].

## Use the Bluetooth wireless feature

### To turn on the Bluetooth wireless feature

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Press <**Options**> → **Settings**.
3. Scroll down to **Activation**.
4. Scroll left or right to **On**.
5. To allow other devices to locate your phone, scroll down to **My phone's visibility** and scroll left or right to **On**.
6. Press <**Save**>.

### To find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Applications** → **Bluetooth** → **Search for new devices**.
2. Scroll to a device and press <**Select**>.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press <**OK**>.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.

### To Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Press <**Options**> → **Send via** or **Send namecard via** → **Bluetooth** (when sending contact data, specify which data to send).

### To receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press <**OK**> (if necessary).
2. Press <**Yes**> to confirm that you are willing to receive data from the device (if necessary).

## Set and use alarms

### To set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press <**Save**>.

### To stop an alarm

When the alarm sounds,

- Press any key to stop an alarm without snooze.
- Press <**Confirm**> or the Confirm key to stop an alarm with snooze, or press <**Snooze**> or any key to silence the alarm for the snooze period.

### To deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate.
3. Scroll down (if necessary).
4. Scroll left or right to **Off**.
5. Press <**Save**>.

## Use the camera

### Capture photos

1. In Idle mode, press and hold [**Camera**].
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press [**Camera**] or the Confirm key to take a photo.
5. Press <[Camera]> to take another photo (step 3).

### View photos

In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

### Capture videos

1. In Idle mode, press and hold [**Camera**].
2. Press [1] to switch to Recording mode.
3. Rotate the phone anti-clockwise to landscape view.
4. Aim the lens at the subject and make any adjustments.
5. Press [**Camera**] or the Confirm key to start recording.
6. Press <[Camera]> or the Confirm key to stop recording.
7. Press <[Camera]> to record another video (step 4).

### View video

In Menu mode, select **My files** → **Videos** → **My video clips** → a video file.

## Listen to music files

1. In Menu mode, select **Music** → **Music player**.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
Confirm	Open a playlist
▲/▼	Adjust the volume
⏮	Left : Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold)
⏸	Pause or resume playback
⏭	Right : Skip forward; skip forward in a file (press and hold)

## Listen to the FM radio

1. Plug the supplied headset into the phone.
2. In Menu mode, select **FM radio**.
3. Press the Confirm key to start the FM radio.
4. Press <**Yes**> to start automatic tuning.  
The radio scans and saves available stations automatically.
- The first time you access the FM radio, you will be prompted to start automatic tuning.
5. Scroll up or down to a saved radio station. Scroll left or right to tune a radio station.
6. To turn off the FM radio, press the Confirm key.