

Sprint PCS®

The clear alternative to cellular.SM

Copyright © 2002 Sprint Spectrum L.P. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, Sprint PCS, Sprint PCS Phone, Sprint PCS Wireless Web, Sprint PCS Wireless Web Mail, Sprint PCS Wireless Web Short Mail and the diamond logo are trademarks of Sprint Communications Company L.P. All other trademarks are property of their respective owners.

Welcome to Sprint PCS

Sprint PCS built the largest all-digital, all-PCS nationwide network from the ground up for clearer calls, reaching more than 230 million people. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations and time-saving features.

And Sprint Personal Communications Services® can do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs so that one day you'll be able to rely entirely on your Sprint PCS Phone™ to stay connected.

This guide will introduce you to our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. Since you're probably anxious to start using your phone, we encourage you to immediately flip to Section One – Getting Started With Sprint PCS Service. This section provides all the information you need to quickly activate your phone, set up your voicemail and much more. It also contains information on how to contact Sprint PCS should you have questions about service, want to purchase additional products or services, or just check your account balance.

Thank you for choosing Sprint PCS.

Table of Contents

1. Getting Started With Sprint PCS Service	9
Turning Your Phone ON and OFF	10
Getting Started With Sprint PCS Service	10
Activating Your Phone	11
Setting Up Your Voicemail	11
Getting Help	12
Understanding This User Guide	14
2. Getting to Know Your Sprint PCS® Phone	15
Highlights and Features	16
Front View of Phone	17
Command Keys	18
Viewing the Display Screen	19
Using the Battery	19
3. Understanding Roaming	23
Understanding How Roaming Works	24
Setting Your Phone's Roam Mode	25
Setting an Alert When Roam Charges Apply (Call Guard)	26
4. Making and Answering Calls	29
Making Calls	30
Answering Calls	30
Adjusting Volume During a Conversation	30
Missed Call Notification	31
Muting a Call	31
Using Sprint PCS Voice Command	32
Dialing Options	33
In-Call Options	34
Incoming Call Notification	34
Changing Ringer Volume	35
End-of-Call Options	35
Saving a Phone Number	35
Finding a Phone Number	36
Four-Digit Dialing	36
Dialing and Saving Phone Numbers With Pauses	37
Calling Emergency Numbers	37

Using One/Two/Three Speed Dialing	38
Displaying Your Phone Number	38
5. Adjusting Volume	39
Changing Ringer Volume	40
Silencing the Ringer	40
Adjusting Volume During a Conversation	40
Muting a Call	40
6. Navigating Through Menus and Entering Text	41
Menu Navigation	42
Working Within the Menu Structure	42
Viewing the Menus	43
Selecting a Character Input Mode	47
Entering Characters by Tapping the Keypad	47
Entering Characters Using T9 Text Input	48
Entering Symbols and Numbers	48
7. Using Sprint PCS Service Features	49
Using Caller ID	50
Responding to Call Waiting	50
Three-Way Calling	51
Forwarding Your Calls	51
8. Managing Call History	53
Viewing Call History (Incoming, Outgoing and Missed)	54
Call History Options	54
Making a Call From Call History	55
Prepending a Phone Number From Call History	55
Saving a Phone Number From Call History	56
Erasing Call History	56
9. Managing Messaging	57
Setting Up Voicemail	58
Knowing When You Have Messages	58
Message Types	58
New Voicemail Message Alerts	58
Retrieving Your Voicemail Messages	59
Clearing the Voicemail Message Icon	60
Numeric Page Options	60

10.Using Your Internal Phone Book	61
Finding Internal Phone Book Entries	62
Internal Phone Book Entry Options	62
Adding a Phone Number to an Internal Phone Book Entry	63
Editing an Internal Phone Book Entry	63
Dialing Sprint PCS Services	64
My Sprint PCS Phone Number	64
11.Changing Your Phone's Settings	65
Changing the Greeting	66
Setting the Language of your Phone	66
Adjusting the Ringer Volume	66
Ringer Types	67
Selecting Ringer Types for Voice Calls	67
Selecting Ringer Types for Messages	67
Selecting Ringer Types for Alarms	68
Changing the Backlight Time Length	68
12.Setting Your Phone's Security	71
Accessing the Security Menu	72
Locking Your Phone	72
Unlocking Your Phone	72
Changing the Lock Code	73
Calling in Lock Mode	73
Using Special Numbers	73
Erasing Special Numbers	74
Erasing the Internal Phone Book	74
Resetting Your Phone	74
13.Personal Information Management	75
Accessing the Scheduler	76
Calendar	76
Today	76
Month View	76
Jump To Date	77
Task List	77
Countdown	77
Alarm Clock	77
Set Time	78

Adding New Events	78
Alarm Clock	80
14.Using the Voice Services of Your Sprint PCS Phone	81
Using Voice-Activated Dialing	82
Programming the Phone for Voice Dialing.....	82
Placing a Call Using Voice Dial	83
Reviewing Voice Dial Entries	83
Erasing Voice Dial Entries	84
15.Games	85
Flying Tight.....	86
Run For Money.....	87
16.Calculator	89
Accessing the Calculator.....	90
Performing a simple Calculations.....	90
17.Selecting Your Accessories	91
Accessory Options	92
18.Knowing Performance and Safety Guidelines	93
Getting the Most Out of Your Reception.....	94
Maintaining Safe Use of and Access to Your Phone.....	95
Caring for the Battery	97
Acknowledging Special Precautions and the FCC Notice	98
Owner's Record.....	99
User Guide Proprietary Notice	99
19.Terms and Conditions & Warranty Information	101
Terms and Conditions of Services	102
Manufacturer's Warranty.....	113

Getting Started With Sprint PCS Service

In This Section

- ▶ **Activating Your Phone**
 - ▶ **Setting Up Your Voicemail**
 - ▶ **Getting Help**
 - ▶ **Understanding This User Guide**
-

This section walks you through the step-by-step basics of setting up service for your Sprint PCS® Phone, including unlocking and activating your phone, setting up your voicemail and how to contact Sprint PCS for assistance.

Once you have completed this section, you're ready to explore the advanced features of your new phone.

Turning Your Phone ON and OFF

Turning Your Phone ON

To turn your phone on, press  for approximately two seconds.

Once your phone is ON, it displays “Looking for Service” indicating that your phone is searching for a signal. When your phone finds a signal, it automatically enters Standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In power save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone OFF

Press  for two seconds.

Your screen remains blank while your phone is off.

Getting Started With Sprint PCS Service



Determine If Your Phone Is Already Activated

If you received your phone in the mail or purchased it at a Sprint® Store, it probably has been activated. All you need to do is unlock your phone.

If your phone is not activated, please refer to your **Start Here Brochure** for easy step-by-step instructions.

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press and hold  to turn the phone on.
2. Press .
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number, or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).


Activating Your Phone

To activate your phone, follow the directions in the **Start Here Brochure** that was included with your phone. Or visit <http://activate.sprintpcs.com> and activate your phone online.

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS voicemail box and personal greeting as soon as your Sprint PCS Phone is activated.

To set up voicemail:

1. Press and hold .
2. Follow the system prompts to create your pass code, record your greeting, record your name announcement and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your pass code).

Note: The voicemail setup process may vary in certain affiliate areas.


 

Getting Help

Visit Our Web Site

Stop by www.sprintpcs.com to get up-to-date information on Sprint PCS. You can also:

- ▶ Review coverage maps
- ▶ Learn how to use voicemail
- ▶ Access your account information
- ▶ Purchase accessories
- ▶ Add additional options to your service plan
- ▶ Check out frequently asked questions
- ▶ And much more

Sprint PCS Customer Care

Sprint PCS Customer Advocates are available to assist you 24 hours a day, seven days a week. Simply dial 1-888-211-4PCS (4727) from any phone or press    from your activated Sprint PCS Phone while on the Sprint PCS Nationwide Network.




Tip: If you need to reach Sprint PCS Customer Care while you are off the Sprint PCS Network, dial 1-888-211-4PCS (4727).

Once you dial Sprint PCS Customer Care, you can access a number of helpful account services through our automated Customer Care line. By following the voice prompts, you'll be able to learn more about Sprint PCS Products and Services, get Sprint PCS coverage by zip code or request a copy of your invoice.

Tip: If you have a question regarding the operation of your Sprint PCS Phone, dial 1-888-211-4PCS (4727) from another phone so you can use your Sprint PCS Phone while speaking with Customer Care.

Receiving Automated Billing Information


 


For your convenience, your phone gives you free access to billing information on your Sprint PCS account. This information includes balance due, payment received, billing cycle and the amount of minutes used since your last billing cycle. Follow these steps to access this information:

1. Press  *  .
2. Follow the voice prompts to receive the information you want.

Note: This service may not be available in all affiliate markets.

Sprint PCS Directory Assistance

Sprint PCS Directory Assistance provides a variety of services, including residential, business and government listings; assistance with local or long-distance calls; movie listings; hotel, restaurant and shopping information and major local event information. There is a per call charge and you will be billed for airtime.

- ▶ Press    .

Sprint PCS Operator Services

Sprint PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

- ▶ Press  .

Note: Sprint PCS Operator Services may not be available in all affiliate markets.

Understanding This User Guide

This user guide introduces you to our technology and all the advantages of your new Sprint PCS Phone – through easy-to-follow instructions.

- ▶ Sections break down categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- ▶ Tips highlight special shortcuts and timely reminders to help you make the most of your new phone.
- ▶ The Index helps you find specific information quickly.

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, you'll be able to locate the specific section using the colored tabs. Follow the instructions in that section and you'll be ready to use your phone in no time.

Getting to Know Your Sprint PCS® Phone

- ▶ **Front View of Phone**
 - ▶ **Viewing the Display Screen**
 - ▶ **Your Phone's Highlights and Features**
 - ▶ **Using the Battery**
-

Your Sprint PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. We know that you're anxious to start using it, so this section will give you a quick introduction to your new phone. The easy-to-follow instructions will guide you through the basics of the most common features of your phone and you'll be on your way to using it in no time.

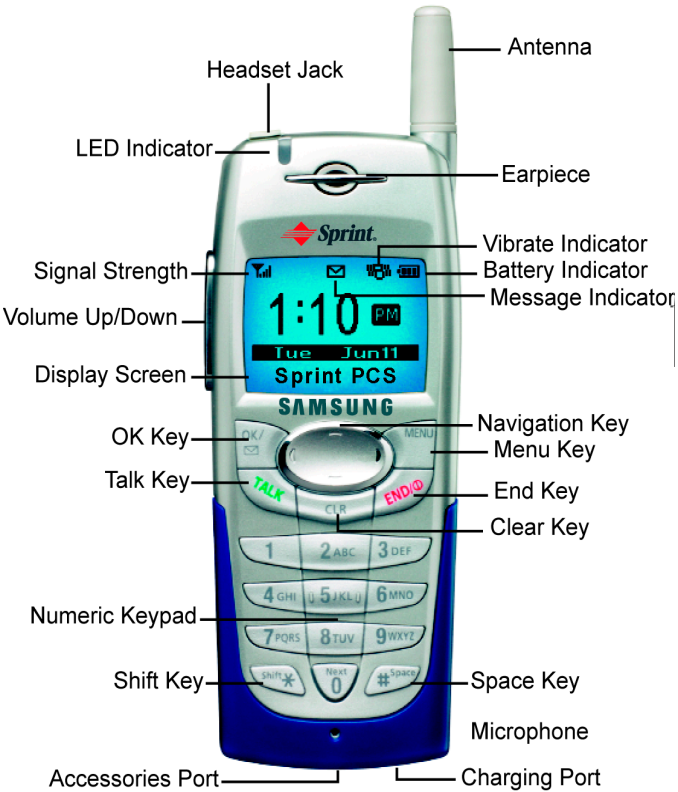 
Don't forget the other chapters in this guide. They're filled with information about the capabilities and benefits of your new Sprint PCS Phone. They include detailed step-by-step instructions that familiarize you with all the features and explain how to customize your phone to meet your specific needs.

Highlights and Features

Congratulations on the purchase of your phone (SPH-N240). This phone is lightweight, easy-to-use, reliable, and offers many significant features:

- ▶ Dual-band Tri-Mode capability provides access to other PCS CDMA and analog cellular networks where Sprint PCS has implemented roaming agreements. For further information see "Understanding How Roaming Works" on page 24.
- ▶ Sprint PCS Voice CommandSM lets you dial phone numbers by speaking someone's name or the digits in their phone number. For further information see "Using Sprint PCS Voice Command" on page 32.
- ▶ Large 4-level blue screen, 5-line display.
- ▶ User friendly, menu driven access to features and options.
- ▶ The lighted blue display screen makes it effortless to read the display in low light environments and at night.
- ▶ An Internal Phone Book with up to 180 entries.
- ▶ Speed Dialing, there are four methods of calling numbers previously stored in the Internal Phone Book.
- ▶ A Calendar function allows the scheduling of events, the ability to create a "Task List", set timers and alarms.
- ▶ Voice activated dialing with 10 locations.
- ▶ T9 predictive text entry for simplicity in entering names and events into both the Internal Phone Book and Calendar.
- ▶ Vibrate mode announces incoming calls and messages without disturbing people around you.
- ▶ Polyphonic Ringers & Melodies offer rich full sound for incoming calls and alerts.

Front View of Phone




Getting to Know
Your Phone



2

Command Keys



Menu: Displays the first level or Main Menu of options. Highlight and press  again to view the next menu page.



OK: Pressing  when navigating through a menu accepts the highlighted choice in the menu. Pressing  for two seconds automatically dials your voicemail.



Navigation Key: This key allows you to scroll through the phone menu options, and provides a shortcut to phone functions from Standby Mode.



Volume Key (On the side of your phone): Adjust the ringer volume in standby mode. Adjust the voice volume during a call. In a menu, scroll up or down to navigate through the menu options. Volume Keys also mute the ringer during an incoming call.



TALK: Place or receive a call. In standby mode, press the key once to enter the Outgoing call log. If you press and hold the key down you will initiate Voice Dial.



CLR: Deletes characters from the display. When in a menu, press to return to the previous menu.



END: Ends a call. Press and hold this key to turn your phone On or Off. While in the main menu, it returns the phone to standby mode and cancels your input.



Numeric Keys: Use these keys to enter numbers, letters, and characters.



Pound: Enters the pound [#] character for calling features. In text entry mode, press to enter a space.












Asterisk: Enters the asterisk [*] character for calling features. In text entry mode, press to change the character input type.



Headset Jack (on the top of the phone): Allows you to plug in an optional headset for safe, convenient hands-free conversations.

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.


- ▶  shows your current signal strength. The more lines you have, the stronger your signal.
- ▶  means your phone cannot find a signal.
- ▶  tells you a call is in progress.
- ▶  indicates you are “roaming” off the Sprint PCS Nationwide Network.
- ▶  indicates you are “roaming” off the Sprint PCS Nationwide Network on an analog system.
- ▶  indicates you have voicemail, text, or numeric pages waiting. Press  briefly to see a list of pending messages or press and hold to dial voicemail box.
- ▶  indicates your phone is in vibrate mode.
- ▶  shows your current battery charge strength. (Icon shown fully charged.)

Tip: Display indicators let you know when you're off the Sprint PCS Nationwide Network and whether you're operating in digital or analog mode.

Using the Battery

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 2 hours of continuous digital talk time (1 hour in analog) or approximately 192 hours of continuous digital standby time (15 hours in analog).

Approximately five minutes before the battery charge level gets too low to operate the phone, the battery sensor will let you know by blinking an empty battery icon () , sounding an audible alert and displaying a warning message. If you continue to operate the phone without charging, the phone will turn off automatically (after a three to five minute delay). If this happens, your call will end.

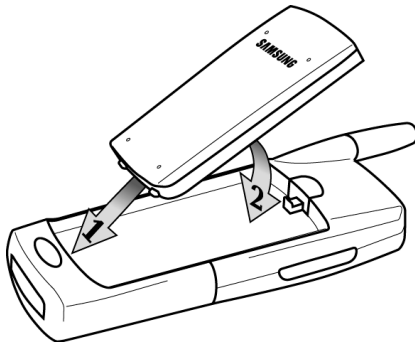 
Note: Long backlight settings, searching for service, and vibrate mode use affect the battery's talk and standby times.

Tip: Be sure to charge your phone's battery and watch your indicator to ensure your levels are okay.

Installing the Battery


Your Sprint PCS Phone comes with a Lithium Ion battery. Follow these steps to install it:

1. Place the battery on to the back of the phone, making sure that the three plastic tabs line up with the corresponding holes on the phone.
2. Gently push the battery down on the phone until it snaps into place.




Removing the Battery

To remove your battery for charging or for another reason, follow these easy steps:

1. Make sure the power is off by pressing and holding  so you don't lose any stored numbers or messages.
2. Push up on the battery release latch and pull the battery away from the latch.
3. Lift the battery away from the phone.

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone. Keeping track of your battery's charge is important. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge gets too low, the battery icon () blinks and the phone sounds a warning tone.

Always use a Sprint PCS-approved Travel Charger or Vehicle Power Adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Understanding Roaming

In This Section

- ▶ **Understanding How Roaming Works**
 - ▶ **Understanding the Difference Between Roaming and Sprint PCS Network Calls**
 - ▶ **Setting Your Phone's Roam Mode**
 - ▶ **Setting and Using Call Guard**
-




Roaming is the ability to make or receive calls while you're off the Sprint PCS Nationwide Network. Your new dual-band Sprint PCS Phone™ works anywhere on the Sprint PCS Nationwide Network and allows you to roam on analog and digital networks virtually anywhere in the U.S. where compatible wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding How Roaming Works

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint PCS Network and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

	Roaming Indicator	Analog Indicator
Sprint PCS Nationwide Network		
Other Digital Networks		
Analog Networks		

Tip: Remember, when you're using your phone off the Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number.)

Note: You will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls while on the Sprint PCS Network. You may not be able to access certain calling features.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some calling features may be unavailable, you can still make and receive calls. You will experience a few differences including:

- ▶ You are more likely to experience static, cross-talk, fade-out and dropped calls.
- ▶ Some calling features which are standard on the Sprint PCS Network, such as Call Waiting and direct international dialing, are unavailable.

- ▶ There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- ▶ Your battery needs recharging sooner when you use your phone for analog roaming.



 

Tip: If you're on a call when you leave the Sprint PCS Network and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Sprint PCS Nationwide Network.

Setting Your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your ability to roam. By using the **Roaming** menu option, you determine which signals your phone accepts.

Set Mode





Choose from three different settings on your dual-band mode phone to control your roaming experience:

1. Press  for **Main Menu**
 2. Press  for **Roaming**.
 3. Press  for **Set Mode**. To select an option, scroll to select **Automatic**, **Sprint PCS**, or **Analog**.
 4. Press  to **Save**.
- ▶ **Automatic:** This setting seeks Sprint PCS Service. When Sprint PCS Service is unavailable, it searches for an alternative system.
 - ▶ **Sprint PCS:** This setting allows you to select the Sprint PCS Nationwide Network only and prevents roaming on other networks.
 - ▶ **Analog:** This setting forces the phone to seek an analog roaming system. The previous setting is restored the next time the phone is turned on.


 
Setting an Alert When Roam Charges Apply (Call Guard)

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To Turn the Call Guard Feature On or Off:

1. Press  for the **Main Menu**.
2. Press  for **Roaming**.
3. Press  for **Call Guard**. Wait briefly until a message prompt displays and then disappears from the display screen.
4. Select **Yes** or **No**, and press .
 - ▶ If the **Yes** option is chosen, an extra step is required to make or take roaming calls.
 - ▶ If the **No** option is chosen, no extra step is required to make or take roaming calls.

To Place Roaming Calls With Call Guard On:





1. From the main menu, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Internal Phone Book or Call History) and press .
2. A message is displayed indicating that roaming rate applies. Press  to place the call.

To Answer Incoming Roaming Calls With Call Guard On:

Remember if the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls even if you have selected the **Analog** setting.

Setting the Time and Date in Analog mode

The time and date are set automatically by the Sprint PCS network. If you are outside your coverage area and are in analog mode, the time and date are not automatically updated. To set the time and date in analog mode:

1. Press  for the **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Set Time**.
4. Enter the correct time and date and press .

Making and Answering Calls

In This Section




 

- ▶ **Making Calls**
 - ▶ **Answering Calls**
 - ▶ **Using Sprint PCS Voice Command**
 - ▶ **Dialing Options**
 - ▶ **In-Call and End-of-Call Options**
 - ▶ **Using One, Two & Three-Touch Speed Dialing**
 - ▶ **Calling Emergency Numbers**
-



Your Sprint PCS® Phone gives you different options for placing calls, so you can use the method that works best for you. Once you learn the basics here, the possibilities are endless.

Making Calls

Your Sprint PCS® Phone offers many different ways to make calls, including Sprint PCS Voice CommandSM ("Using Sprint PCS Voice Command" on page 32), Speed Dialing ("Using One/Two/Three Speed Dialing" on page 38) and using Call History ("Viewing Call History (Incoming, Outgoing and Missed)" on page 54).


 

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press  to erase one digit at a time. Press and hold  to erase the entire number.)
3. Press . (To make calls when you are roaming, and Call Guard is enabled, press  to acknowledge Roaming rates. For further information see "To Place Roaming Calls With Call Guard On:" on page 26)
4. When you're finished, press  to complete the call.

Tip: To redial your last outgoing call, press  to view the phone number. Press  again to dial.

Tip: When making calls off the Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, press . (To answer incoming calls when you are roaming and Call Guard is enabled press . For further information see "To Answer Incoming Roaming Calls With Call Guard On:" on page 26)
3. To disconnect the call, press  briefly.


 

Adjusting Volume During a Conversation


To adjust the volume during a call, press the volume keys on the side of your phone up or down.

Missed Call Notification


When an incoming call is not answered, the number of missed calls together with the last call's phone number is displayed on your screen.

To display the Missed Call log and view the last 10 missed calls:

1. Press .
2. Press  for **Calls**.
3. Press  for **Missed**.

Note: To view the details of the missed call, highlight the entry and press .


 
To dial a missed call entry's phone number:

- ▶ Highlight the entry. Press and hold .

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

1. Press .
 2. Press  for **Mute**.
- ▶ When the phone is muted, "**Mute**" appears on the display.

To unmute a call:

1. Press .
2. Press  for **UnMute**.


 



Using Sprint PCS Voice Command

With Sprint PCS, the first wireless provider to offer innovative Voice Command technology, reaching your friends, family, co-workers and teammates has never been easier – especially when you're on the go.

With Sprint PCS Voice Command:

- ▶ You can store all your contact's phone numbers, so you can simply say the name of the person you want to call.
- ▶ There's no need to punch in a lot of numbers, memorize voicemail passwords or try to dial while you're driving.
- ▶ You can call anyone in your address book – even if you don't remember their phone number.



It's Easy To Start

Just dial  *   from your Sprint PCS Phone™ to activate the service. You can also dial  *  to go through a Sprint PCS Voice Command tutorial directly from your phone.

Create Your Own Address Book



You can program up to 250 names into your address book and with the advanced technology of Sprint PCS Voice Command – you can have instant access to all of them.

There are four ways to update your address book:

- ▶ **On the Web:** Go to www.talk.sprintpcs.com and receive a fully functional Web-based address book to create and update your contacts.
- ▶ **Use an Existing Address Book:** Upload your contacts from Microsoft® Outlook,® Microsoft Excel and other personal information software into your address book for no additional charge.
- ▶ **Call Directory Assistance:** If you don't have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just say, "Call operator," and we'll add two names and numbers to your address book for our standard directory assistance charge.
- ▶ **Use Voice Recordings:** Simply dial  *  and say, "Add name." You will then be asked to say the name and number you


want to add to your personal address book. Your address book can store up to 10 Voice Recordings at once.

 
How It Works

1. Once you've signed up for Sprint PCS Voice Command and created your address book, all you do is press  . You'll hear a tone followed by the prompt "Ready."
2. After the "Ready" prompt, simply say, in a natural voice, the name of the person or the number you'd like to call. For example, you can say, "Call Jane at work," "Call John on his wireless phone," "Call 555-1234" or "Look up Bob."
3. The number will automatically be dialed. Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, visit www.talk.sprintpcs.com.

Dialing Options

Dialing options are displayed when you enter numbers using the keypad. To select an option press  and the number on the keypad that corresponds with the desired choice.

- ▶ **(1) Talk** is used to dial the phone number. (If you are roaming and have the Call Guard feature activated, you must then press . See "To Place Roaming Calls With Call Guard On:" on page 26.)
- ▶ **(2) Save** to save the phone number in your Internal Phone Book. (See "Finding Internal Phone Book Entries" on page 62.)
- ▶ **(3) Find** is used to locate and display Internal Phone Book entries that contain the numbers entered. (See "Finding Internal Phone Book Entries" on page 62.)
- ▶ **(4) Hard Pause** is used to insert a hard pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 37.)
- ▶ **(5) 2-Sec Pause** to insert a 2-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 37.)

Tip: To speed dial a phone number from the main menu, press and hold the Internal Phone Book entry number. If the entry number is two digits, enter the first digit, then press and hold the second digit.

In-Call Options

During a call, your phone displays menu options in addition to the main menu.

To select an option, highlight it and press .

- ▶ **(1) Mute or UnMute** Select **Mute** to mute your phone's microphone. Select **UnMute** again to reactivate the microphone.
- ▶ **(2) 3-Way Call** allows you to talk to two different people at the same time. (For more information, see "Three-Way Calling" on page 51.)
- ▶ **(3) Calls** checks your call log for outgoing, incoming, and missed calls. You can also erase the logs from this menu.
- ▶ **(4) Messages** allows you to check for voicemail, page, and text messages.
- ▶ **(5) Phonebook** accesses the Phone Book menu options.
- ▶ **(6) Calendar** accesses the Calendar menu options which allows you to schedule different events.
- ▶ **(7) Version** displays the hardware and software version being used.

Incoming Call Notification

Depending on your settings, your Sprint PCS Phone notifies you of incoming calls in the following ways:

- ▶ The phone rings and/or vibrates.
- ▶ The LED flashes.
- ▶ The backlight illuminates.
- ▶ The screen displays an incoming call message.
- ▶ If the phone number is available, the phone number of the caller is displayed.
- ▶ If the phone number is in your Internal Phone Book, the Phone Book entry's name is displayed.

The following option is also displayed.

- ▶ End: Silent to mute the ringer.


Note: You can also mute the ringer by pressing the up or down volume key.

Changing Ringer Volume

To change the ringer volume, adjust the volume keys on the side of your phone when the phone is in Standby mode.

Note: To change the ringer volume from the main menu, see "Changing Ringer Volume" on page 40.

End-of-Call Options





After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number, the duration of the call and the following menu options are displayed for 10 seconds. During this time you can press  to add this number to your internal phone book.





Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your Sprint PCS Phone can store up to 180 Internal Phone Book numbers. Phone Book entries can store up to a total of six phone numbers and the entry's name can contain 12 characters. There are seven different labels that are available, they are home, work, mobile, pager, fax, or no label. Any of these labels can be selected to be use as the Speed Dial number. Speed dial can only be assigned to one number in each phone book entry.

To save a number from the main menu:





1. Enter a phone number.
2. Press .
3. Press  for **Save**.
4. Select the desired label by scrolling through **Home, Work, Mobile, Pager, Fax, or No Label** and Press .
5. Press  to **Add New Name**.

6. Enter the name of the entry using the keypad. (Press  to select the desired entry mode. For more information on the different entry modes, see "Selecting a Character Input Mode" on page 47. Press  to select the desired entry mode.)
7. Press  to **Save** the name.
8. Press the Navigation key to the left or right to display the desired location, or leave the value defaulted to the first available. Press  to save.

Finding a Phone Number

You can search for Internal Phone Book entries with phone numbers that contain a specific string of numbers.


To find a phone number:

 
1. Enter one or more digits. The more numbers you enter, the more specific the search becomes.
2. Press  to display the main menu options.
3. Press  for **Find**. The phone prompts you to "Wait" and tells you how many numbers match the number of digits you just entered into the phone.
4. Press the navigation key  up or down to scroll through the list of available matches.
5. When the desired number is displayed, press .

Four-Digit Dialing

Your phone has the ability to find and dial 4-digits of any phone number stored in the address book.


 
To call someone stored in your phone book by entering four digits of their phone number:

1. From the standby mode, enter four digits of any phone number stored in the phone book.
2. Press .

 
Note: If more than one number is found with the last four digits, use the navigation key to scroll up or down to the desired entry. When the desired number is displayed, press .

Or:

To dial four digits without the 4-digit dial feature interfering:




1. From the standby mode, enter four digits.
2. Press   for **4-Digit Dial**.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press . If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.


Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save a phone number with pauses:

1. When in standby mode, enter the first digits of the phone number that comes before the required pause.
2. Press  to open the Menu options.
3. Press  for Hard Pause or  for a 2sec Pause. (Hard Pauses are displayed as a “P” and 2sec Pauses as a “T”.)
4. Enter the additional numbers.

Note: Complete step three and four again, if necessary.

5. Press  to dial.

When dialing a number with a hard pause, highlight **Send Tones** and press  to send the next set of numbers.

Calling Emergency Numbers

You can place calls to 911 (dial    and press ) , even if your phone is locked or your account is restricted.

Using One/Two/Three Speed Dialing

With this feature, you can automatically call Speed Dial entries using one key press for locations 1-9, two key presses for locations 10-99, or three key presses for locations 100-180.

To use **One-Touch Dialing** for Speed Dial locations 1-9:

- ▶ Press and hold the appropriate key for two seconds. The display confirms that the number has been dialed when it shows “Connecting.”

To use **Two-Touch Dialing** for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for two seconds. The display confirms that the number has been dialed when it shows “Connecting.”


 
To use **Three-Touch Dialing** for Speed Dial locations 100-180:

1. Press the first digit.
2. Press the second digit.
3. Press and hold the third digit for two seconds. The display confirms that the number has been dialed when it shows “Connecting”.

Displaying Your Phone Number

Just in case you forget your phone number, your Sprint PCS Phone can remind you.

To display your phone number:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phonebook**.
3. Press  for My Phone #. Your phone number is displayed on the screen.

Adjusting Volume

In This Section



 


- ▶ **Changing the Ringer Volume**
 - ▶ **Silencing the Ringer**
 - ▶ **Adjusting Volume During a Conversation**
 - ▶ **Muting a Call**
-

With all the things that demand your attention in today's fast-paced world, it's important to tune-in to what really matters. Your phone gives you the ability to control your phone's volume with the touch of a button. Not only can you control what you hear, you can also control what your caller hears.

Changing Ringer Volume



To change the ringer volume, use the volume keys on the side of your phone when the phone is in standby mode.

To change the ringer volume from the **Main Menu**:

1. Press  for **Menu** options.
2. Press  for **Sounds**.
3. Press  for **Ringer Volume**.
4. Press  for **Calls**.
5. Select **Off/Vibrate/1-Beep/Low/Med/High/High+Vib**, and press .

Silencing the Ringer



To silence the ringer on incoming calls:

1. When the phone rings, press a volume key, or . Press  to answer the call.



 
Adjusting Volume During a Conversation

When you need to regulate the volume during a conversation, use the volume keys on the side of your phone to adjust the sound.



 
Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise. To mute a call, press and hold  for two seconds. To unmute a call, press and hold  for two seconds.

To **Mute** a call from the Main Menu:

1. Press  for **Menu** options, highlight **Mute**.
 2. Press either  or .
- ▶ When the phone is muted, "**Mute**" displays.

To **UnMute** a call:

1. Press  for **Menu** options.
2. Highlight **UnMute**, and press  or .

Navigating Through Menus and Entering Text

In This Section

- ▶ **Menu Navigation**
 - ▶ **Viewing the Menus**
 - ▶ **Entering Characters by Tapping the Keypad**
 - ▶ **Entering Characters Using T9 Text Input**
 - ▶ **Entering Symbols and Numbers**
-


This section is a road map to using your phone and also shows how to enter characters in your phone. Every function and feature can be accessed through a menu. Take a few moments to know your way around and how to enter text. You'll find that it makes your phone easier to use.

Menu Navigation



Your Sprint PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

Working Within the Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. From the main menu, highlight **Calls** and press .
 2. Press the navigation key down to highlight **Incoming** and press .
- If you have received any calls, they are displayed on the screen.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

Viewing the Menu

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Calls
 - 1: Outgoing
 - 2: Incoming
 - 3: Missed
 - 4: Erase History
 - 1: Outgoing
 - 2: Incoming
 - 3: Missed
 - 4: All Calls
 - 5: Air Time
 - 1: Last Call
 - 2: Total Airtime
2. Phone Book
 - 1: Find Name
 - 2: Add New Entry
 - 3: My Phone#
 - 4: Find Entry
 - 5: Services
 - 1: Account Info
 - 2: Customer Care
 - 3: Dir Assist
 - 4: Prepaid SVC
3. Roaming
 - 1: Set Mode
 - 1: Automatic
 - 2: Analog
 - 3: Sprint PCS
 - 2: Call Guard
 - 1: Yes
 - 2: No
4. Calendar
 - 1: Today
 - 2: Month View
 - 3: Jump to Date
 - 4: Task List
 - 5: Countdown

- 6: Alarm Clock
 - 1: Alarm # 1
 - 2: Alarm # 2
 - 3: Alarm # 3
- 7: Set Time
- 5: Messages
 - 1: Voicemail
 - 1: Listen
 - 2: Reset
 - 2: Page/Text
 - 3: Erase Msgs
 - 1: Page/Text
- 6. Voice Dial
 - 1: Record
 - 2: Review
 - 3: Erase All
- 7. Sounds
 - 1: Ringer Volume
 - 1: Calls
 - 1: Off
 - 2: Vibrate
 - 3: 1-Beep
 - 4: Low
 - 5: Med
 - 6: High
 - 7: High+Vib
 - 2: Messages
 - 1: Off
 - 2: Vibrate
 - 3: 1-Beep
 - 4: Low
 - 5: Med
 - 6: High
 - 3: Alarms
 - 1: Off
 - 2: Low
 - 3: Med
 - 4: High
 - 2: Ringer Type
 - 1: Voice Calls
 - 1: with Caller ID
 - 2: No Caller ID
 - 2: Messages
 - 1: Voicemail
 - 2: Page
 - 3: Text
 - 3: Alarm

3: Key Beep

- 1: Off
- 2: Low
- 3: Med
- 4: High

4: Tone Length

- 1: Short
- 2: Long

5: Alert

- 1: Minute Beep
 - 1: Off
 - 2: On
- 2: Service
 - 1: Off
 - 2: On
- 3: Connect
 - 1: Off
 - 2: On
- 4: Disconnect
 - 1: Off
 - 2: On

6: Roam Ringer

- 1: Distinctive
- 2: Normal

8. Setup/Tool

1: Display


- 1: Idle Screen
 - 1: Sprint logo
 - 2: Samsung logo
 - 3: Digital
- 2: Backlight
 - 1: 30 Seconds
 - 2: 8 seconds
 - 3: Off
- 3: Greeting
- 4: Contrast
 - 1: Lowest, Low, Med, High, Highest
- 5: Version

2: Security

- 1: Lock Phone
 - 1: Unlocked
 - 2: On Power Up
 - 3: Lock Now
- 2: Change Lock
- 3: Special #
 - 1: Empty
 - 2: Empty

- 3: Empty
- 4: ErasePhonebook
- 5: Reset Phone
- 3: Call Answer
 - 1: Any Key
 - 2: Talk Key
- 4: Auto Answer
 - 1: Car Kit /Headset Off
 - 2: Car Kit /Headset On
- 5: Language
 - 1: English
 - 2: Spanish
- 6: Calculator
- 9. Games
 - 1: Flying Tight
 - 2: Run for Money
- 0. Key Guard
- InUse Menu
 - 1: Mute
 - 2: 3-Way Call
 - 3: Calls
 - 1: Outgoing
 - 2: Incoming
 - 3: Missed
 - 4: Erase History
 - 5: Air Time
 - 4: Messages
 - 1: Voicemail
 - 2: Page/Text
 - 3: Erase Msgs
 - 5: PhoneBook
 - 1: Find Name
 - 2: Add New Entry
 - 3: My Phone #
 - 4: Find Entry
 - 5: Services
 - 6: Calendar
 - 1: Today
 - 2: Month View
 - 3: Jump to Date
 - 4: Task List
 - 5: Countdown
 - 6: Alarm Clock
 - 7: Set Time
 - 7: Version


Selecting a Character Input Mode


When prompted to enter text, the current text entry mode will appear above the  key in the lower right hand side of the display. There are four text entry modes:

 
1. T9 (English)
2. Alpha
3. Symbol
4. Number

To change the Input Mode, press  then the corresponding number on the keypad.

When entering text, use the indicated key to perform the following text entry functions:

Press  to cycle through T9 word matches.

 
 








Press  to insert a space.

Press  to enter a period (.). Press the other numeric keys for common symbols.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alpha** mode (see “Selecting a Character Input Mode” on page 47). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:



- ▶  . , - ? ! ‘ @ : 1
- ▶  A B C 2
- ▶  D E F 3
- ▶  G H I 4
- ▶  J K L 5
- ▶  M N O 6
- ▶  P Q R S 7
- ▶  T U V 8
- ▶  W X Y Z 9
- ▶  0



- ▶  Shift
- ▶  Space

Note: If you press and hold a numeric key for two seconds, the corresponding number automatically is displayed. All alpha characters associated with that key are bypassed.

Entering Characters Using T9 Text Input

To enter characters using T9 Text Input, select the **T9 English Mode** mode (For more information, see "Selecting a Character Input Mode" on page 47).

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press  to scroll through additional word selections. To accept a word and insert a space, press .

If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.

Entering Symbols and Numbers

To enter symbols, select the **Symbol** mode. (See "Selecting a Character Input Mode" on page 47). To enter a symbol, press the appropriate key indicated on the display.

To enter numbers, select the **Number** mode and press the appropriate key (For more information, see "Selecting a Character Input Mode" on page 47).

Using Sprint PCS Service Features

In This Section


 
- ▶ **Using Caller ID**
 - ▶ **Responding to Call Waiting**
 - ▶ **Three-Way Calling**
 - ▶ **Forwarding Your Calls**
-

Now that you've mastered the basics, you can begin to focus on where you want to go. This section guides you step-by-step through the calling features that enhance your Sprint PCS Service. From Caller ID to Call Forwarding, using these features will help you make the most of your Sprint PCS Service.

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number. In the same way, if you call someone who has this feature your phone number displays on their phone.

To block your phone number from being displayed for a specific outgoing call:



1. Press  *  .
2. Enter the number you want to call.
3. Press  (or highlight **Roam Call** and press .




To permanently block your number, call Sprint PCS Customer Care.

Responding to Call Waiting

Call Waiting alerts you of incoming calls while you're on a call by sounding a beep. The display screen informs you that a call is coming in and shows the caller's phone number (if it's available and you are in digital coverage).




To respond to an incoming call while you're on a call:

- ▶ Press . (This puts the first caller on hold and answers the second call.)
- ▶ To switch back to the first caller, press  again.



Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing  *   before placing your call. Call Waiting is automatically reactivated once you end the call.

Three-Way Calling

With Three-Way Calling, you can talk to two different people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. During a conversation, press .
2. Enter the number for the third party, and press .
3. When you are connected to the third party, press  once again to begin your Three-Way call.



 

If one of the people you called hangs up, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a Three-Way Call while on an existing call by displaying a phone number stored in your Internal Phone Book or Call History. Highlight the desired number and press . Once the party answers, press  again to connect all parties together.

Forwarding Your Calls

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

To Activate Call Forwarding:

1. Press   .
2. Enter the area code and phone number to which your calls should be forwarded.
3. Press . You will hear a tone confirming the activation of Call Forwarding.

To Deactivate Call Forwarding:

- ▶ Press    .
- ▶ Press . You hear a tone to confirm the deactivation.

Note: You are charged a higher rate for calls you have forwarded.

Managing Call History

In This Section

- ▶ **Viewing Call History (Outgoing, Incoming, and Missed)**
 - ▶ **Call History Options**
 - ▶ **Making a Call From Call History**
 - ▶ **Saving a Phone Number From Call History**
 - ▶ **Erasing Call History**
-


 
 


The Call History helps you manage your time more effectively. It keeps track of incoming calls, calls made from your Sprint PCS Phone™ and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing Call History (Incoming, Outgoing and Missed)



You'll find your Call History invaluable. It is a list of the last 10 phone numbers or Internal Phone Book entries for calls you placed, received or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Press  for Main Menu.
2. Press  for Calls.
3. Press  for **Outgoing**,  for **Incoming**, and  for **Missed**.


Call History Options

For additional information and options on a particular call, highlight a Call History entry and press  followed by  to view these options. This feature gives you the option of selecting:

- ▶ **Talk** to call the phone number.
- ▶ **Save** to save the sender's phone number (if the number is not already stored in your Internal Phone Book). For more information see "Saving a Phone Number From Call History" on page 56.
- ▶ **Prepend** to add numbers to the beginning of the phone number. (For more information see "Prepending a Phone Number From Call History" on page 55.)

Making a Call From Call History


 
 
 





To place a call from Call History:

1. Scroll to highlight the required number and press  to complete the call.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted.

Prepending a Phone Number From Call History



 
 



 
If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Press  for Main Menu.
2. Press  for Calls.
3. Press  for **Outgoing**, press  for **Incoming**, or press  for **Missed**.
4. When the call list displays, scroll to highlight the desired call log, and press .
5. Press  for Menu options.
6. Press  to Prepend.
7. Enter the appropriate digits to prepend, and press  to be connected.

Saving a Phone Number From Call History

Your Sprint PCS Phone can store up to 180 Internal Phone Book numbers. Phone Book entries can store up to a total of 6 phone numbers and the entry's name can contain 12 characters.


 



To save a phone number from Call History:

1. Press  for Main Menu.
2. Press  for Calls.
3. Press  for **Outgoing**, press  for **Incoming**, or press  for **Missed**.
4. Scroll to highlight the phone number and press .
5. Press for  Menu options.
6. Press  to save.
7. Follow the prompts to complete storing the number to your Internal Phone Book.

Note: You cannot save phone numbers already in your Internal Phone Book or from calls identified as No ID or Restricted.

Erasing Call History

To erase a Call History or all Call Histories:

1. From standby mode press  to open the Main Menu.
2. Press  for Calls.
3. Press  for Erase History. This opens the **Erase History** menu. Scroll to highlight one of the options:
Outgoing, Incoming, Missed and **All Calls**.
4. Press  to erase the calls within the selected option and follow the prompts, or press  to return to the previous menu.

Managing Messaging

In This Section

- ▶ **Message Types**
 - ▶ **New Message Alerts**
 - ▶ **Message Options**
-

Your Sprint PCS® Phone is always working to help you stay connected – even when you're unavailable. With three types of messaging, you can depend on being notified of important information. This section steps you through the messaging functions available on your Sprint PCS Phone.

Setting Up Voicemail

The first thing you'll want to do after activating your phone is set up your voicemail.

Knowing When You Have Messages

There are several ways your Sprint PCS Phone alerts you of new messages:

- ▶ By displaying a message on the screen.
- ▶ By playing the assigned ringer type.
- ▶ By the LED blinking red.

Message Types


There are two types of messaging features available from your Sprint PCS Phone's menu. You can receive voicemail and Sprint PCS Messages (also known as page/text or SMS messages) as long as your phone has enough memory to store them. If the memory is full, you will be prompted to delete old messages to make room.

- ▶ **Voicemail** automatically captures calls when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone when you have new voice messages or numeric pages.
- ▶ **Messages** include Sprint PCS Messages*. Sprint PCS messages are received to keep you updated about current account information.

* Based on your service plan, additional charges may apply for this service.


New Voicemail Message Alerts

When you receive a new voicemail message, your phone alerts you and displays .


Important: When you are roaming off the Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone Number. When your voicemail box answers, press  and enter your pass code.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint PCS Service area.



 

 
Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either press and hold  for two seconds or use the menu keys.

Using One-Touch Message Access:


- ▶ Press and hold . Follow the system prompts.

Using the Menu Keys on Your Sprint PCS Phone to Access your Messages:

1. From standby mode press  for **Main Menu**.
2. Press  for **Messages**.
3. Press  for **Voice Mail**.
4. Press .
5. Press  to **Listen**.

Note: You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Phone.



 

 
Using a Phone Other Than Your Sprint PCS Phone to Access Your Messages:

1. Dial your Sprint PCS Phone Number.
2. When your voicemail box answers, press .
3. Enter your pass code.



Clearing the Voicemail Message Icon

Your phone may temporarily continue to display the icon after you have checked your voicemail messages.

To clear the icon from the display screen:

1. From standby mode press  for **Main Menu**.
2. Press  for **Messages**.
3. Press  for **Voice Mail**.
4. Press .
5. Press  to **Reset**.

Numeric Page Options

After you display a numeric page, press  to display the numeric page message options. To select an option, scroll to highlight it and press .

- ▶ **Talk** - Calls the highlighted phone number.
- ▶ **Save #** - Saves the sender's phone number if it is not already in your Internal Phone Book (if applicable).
- ▶ **Erase** - Erases the current numeric page.
- ▶ **Next Msg** - Moves forward to the next message.
- ▶ **Prev Msg** - Returns to the previous message.
- ▶ **Extract#s** - Extracts the phone numbers (if there are numbers contained in the text message.)

Using Your Internal Phone Book

In This Section

- ▶ **Finding Internal Phone Book Entries**
 - ▶ **Internal Phone Book Entry Options**
 - ▶ **Adding a Call Alarm From the Internal Phone Book**
 - ▶ **Selecting a Ringer Type**
 - ▶ **Dialing Sprint PCS Services**
-


 
 
Now you know the basics that help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more effectively when you're trying to connect with the important people in your life.

Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries. Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.




Finding Names

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:


1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find Name**. The list of names is displayed in alphabetical order. (The Speed Dial number displays next to the entry.)
4. Enter the first letter of the person's name you want to find. Use the Navigation key to scroll through the list of possible matches. Additional letters may be entered to narrow the name matches.

Finding Entries

To find an Internal Phone Book entry by its entry number:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find Entry**. The list of names is displayed in numeric order of the Speed Dial number



 


 



Internal Phone Book Entry Options

When you display an Internal Phone Book entry, the following options are displayed. To select an option, highlight it and press .

- ▶ **Talk** to call the current phone number.
- ▶ **Add Phone #** to add a phone number.
- ▶ **Edit** to edit the current entry.
- ▶ **Prepend** to add numbers at the beginning of an existing phone number.
- ▶ **Erase** to erase the current entry.
- ▶ **Name Ringer** allows you to set a specific ring tone or melody to the address book entry. When that entry calls, the set tone is played.


 
 




Adding a Phone Number to an Internal Phone Book Entry

To add a phone number to an entry:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find Name**. The list of names is displayed in alphabetical order. (The Speed Dial number displays next to the entry.)
4. When the desired name is found, highlight it and press .
5. Press  and press  for **Add Phone #**.
6. Enter the new number using the keypad and press .
7. Select the desired Label and press .
8. Press  to save the entry and return to standby mode.

Editing an Internal Phone Book Entry

To make changes to an entry:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Select either  for **Find Name**, or  for **Find Entry**.
4. When the desired name is found, highlight it and press .
5. Press  for **Menu** options.
6. Press  for **Edit**.

To select an option, highlight it and press .


 



- ▶ **Phone #** allows you to enter a new phone number for the entry.
- ▶ **Name** allows you to change the name of the entry.
- ▶ **Entry #** allows you to save in a different memory location between 1 - 180.
- ▶ **Set Secret** hides the phone number and user information from displaying on the screen. Instead, Secret is displayed.
- ▶ **Set Speed Dial** allows you to choose between numbers saved in a particular entry that will be designated as the Speed Dial number. Only one number per entry can be set to Speed Dial.

Note: "Default" means the global ringer selected for all incoming calls will be played.

Dialing Sprint PCS Services


 

You must be in digital mode to access Sprint PCS Services.

To dial a service:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Services**.
4. Highlight **Account Info**, **Customer Care**, **Dir Assist**, or **Prepaid SVC** and press .
5. Press .

My Sprint PCS Phone Number

To display your phone number:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **My Phone#**.

Changing Your Phone's Settings

In This Section



 




 
- ▶ **Changing the Greeting**
 - ▶ **Adjusting the Volume**
 - ▶ **Ringer Types**
 - ▶ **Selecting Ringer Types**
 - ▶ **Changing the Contrast and Backlight Setting**
-

This section describes how you can change your phone's settings to best suit your requirements. Take a few moments to review these options and add or adjust the settings that are right for you.

Changing the Greeting




The greeting can be up to 12 characters and is displayed on the first line of your phone's display screen in standby mode.

To change your greeting:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Display**.
4. Press  for **Greeting**.
5. Press  for at least two seconds to erase the existing greeting.
6. Press  to display the text entry modes. Highlight the desired mode and press  to select.
7. Type in the new greeting and press .



 


Setting the Language of your Phone

Your phone can display all menus and messages in either Spanish or English; all verbal prompts will also be spoken by the phone in the selected language. It's quick, easy and very convenient for bilingual families or friends. To change the language of your phone:

1. From the **Main Menu** press  for **Setup/Tool**.
2. Press  for **Language**.
3. Scroll to highlight **English** or **Spanish**.
4. When the desired option displays, press .

Adjusting the Ringer Volume

To adjust the ringer volume:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Volume**. The following options display: **Calls**, **Messages** and/or **Alarms**.
4. Select the desired option and press .
5. Scroll to the desired **Ringer Volume**, and press .

Tip: You can use the volume control keys located on the side of the phone to adjust the ringer volume in standby mode or the voice volume during a call.



 
 


Ringer Types

Ringer types help you identify incoming calls and messages. You can assign Ringer Types to individual Internal Phone Book entries, calls and messages.

- ▶ **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- ▶ **Vibrating Ringer** alerts you to answer calls or messages without disturbing others.

Selecting Ringer Types for Voice Calls







To select a ringer type for voice calls:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Voice Calls**.
5. Select either with **with Caller ID** or **no Caller ID**, and press .
6. Listen to the available **Ringer Types** and press  to select.

Tip: If your ringer is set to vibrate or Off, you can review the ringer types but will not hear them.



 


Selecting Ringer Types for Messages

To select a ringer type for messages:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Messages**.
5. Select **Vicemail**, **Page**, or **Text** and press .
6. Listen to the available **Ringer Types**, and press  to select. For information on downloadable ringers, see "Selecting Ringer Types for Voice Calls" on page 67).

Selecting Ringer Types for Alarms



 
 

To select a ringer type for alarms:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Alarms**.
5. Listen to the available **Ringer Types**, and press  to select.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.



 


To change the backlight setting:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Display**.
4. Press  for **Backlight**.
5. Select from the following options:
 - ▶ 30 Seconds
 - ▶ 8 Seconds
 - ▶ Off
6. Press  to save and exit.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Contrast

To adjust the contrast on the phone's display:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Display**.
4. Press  for **Contrast**.
5. Select a setting from **Lowest, Low, Med, High, or Highest** and press  to select.

Setting Your Phone's Security

In This Section

- ▶ **Accessing the Security Menu**
 - ▶ **Locking Your Phone**
 - ▶ **Unlocking Your Phone**
 - ▶ **Restricting Calls**
 - ▶ **Using Special Numbers**
-

By using the security setting on your Sprint PCS® phone, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last four digits of your Social Security number, the last four digits of your phone Number, or “0000”.

 

To access the Security menu:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tools**.
3. Press  for **Security**.
4. Enter your lock code, and the **Security** menu displays.

Locking Your Phone

 

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint PCS Customer Care or special numbers.

To lock your phone:

1. Access the **Security** menu.
2. Press  for **Lock Phone**. The available options are:
 - ▶ Unlocked
 - ▶ On Power-Up
 - ▶ Lock Now
3. Select **Lock Now** and press .

Unlocking Your Phone



To unlock your phone:

1. Access the **Security** menu.
2. Press  for **Lock Phone**.
3. Select **Unlock** and press .

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).

Changing the Lock Code




To change your lock code:

1. Access the **Security** menu.
2. Press  for **Change Lock**. Your **Lock Code** number displays.
3. Enter a new **Lock Code** number (this will override your original lock code number), and press .

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode.

To place an outgoing call in lock mode:



 



- ▶ To call an emergency number, special number, or Sprint PCS Customer Service, enter the phone number and press .
- ▶ To place normal outgoing calls. Press  to display the lock code screen, enter the lock code. Enter the phone number, and press  to complete the call.

Using Special Numbers

You can hide up to three phone numbers that require your lock code to make them “special.”





All three special numbers can be manually dialed at any time, even when your phone is locked.

To make a number special:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Security**.
4. Enter the phone's lock code, the **Security** menu displays.
5. Press  for **Special #**.
6. Select an available space and press , or just enter the space's number. Enter the phone number, and press .

Erasing Special Numbers

To erase a special number:


1. Access the **Security** menu.
2. Press  for **Special #**.
3. Select the number that you wish to erase, and press .
4. Press  to erase the number, and press .

Erasing the Internal Phone Book

You can erase all the numbers stored in your Internal Phone Book. This is useful if you want to loan, or give your phone to a friend or family member.

To erase your Internal Phone Book:




1. Access the **Security** menu.
2. Press  for **ErasePhonebook**.
3. Press .

If you do not wish to erase your Internal Phone Book, press  to return to the previous menu.

Resetting Your Phone

Resetting your phone returns all setup options to the factory's default settings. All of your important personal data (Internal Phone Book, Voice Recordings), are unaffected by resetting your phone.

To reset your phone:

1. Access the **Security** menu.
2. Press  for **Reset Phone**.
3. Press .
4. Press  again to confirm and reset the phone to the factory defaults.

The phone reboots (turns itself off and back On), restores the default settings, such as ringtones, erases your messages and then returns to standby mode.

Personal Information Management

In This Section




- ▶ **Adding an Event to the Scheduler**
 - ▶ **Event Alerts**
 - ▶ **Adding a Call Alarm to the Scheduler**
 - ▶ **Adding To Do Items**
 - ▶ **Viewing the Scheduler Calendar**
-

Your Sprint PCS® Phone has been equipped with several personal information management features to help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. It takes productivity to a whole new level.

Accessing the Scheduler

Your scheduler helps organize your time and reminds you of important events.

How To Access Your Scheduler

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Scroll to highlight an option. The available options are:
 - ▶ Today
 - ▶ Month View
 - ▶ Jump To Date
 - ▶ Task List
 - ▶ Countdown
 - ▶ Alarm Clock
 - ▶ Set Time
4. Press  to open the selected option.

Calendar

Calendar functions allow you to schedule personal events and view them in an easily read calendar format. These functions are also available to you when you are talking on your phone.

Today

Allows you to schedule events for today, that will automatically appear on your “Today” events schedule for that day. You can schedule up to nine events for the current day with each event’s start and end time. You can even have your phone alert you before an event starts.

Month View

Month View allows you to view a calendar of the current month, a past month, or a future month. In Month View, the current date is highlighted on the calendar. Days with scheduled events are underlined. When in Month View, the navigation keys work like this:

- ▶ Moving the scroll left or right allows the calendar to be moved backward or forward a day.
- ▶ Moving the scroll up or down moves the calendar by one week.

- ▶ Pressing the volume keys up or down allows the calendar to move month to month.

Jump To Date

 

Jump To Date allows you to specify the calendar date you want to view. Arriving at the desired date, you can enter, edit, and/or erase events in your calendar.

Task List

Allows you to compile a list of items to be completed. Your phone can store and manage 10 “Task List” items.

Countdown

Countdown allows you to find out how much time will elapse between the time entered and an event scheduled.

- ▶ Press the correct volume key to scroll between A.M. or P.M. or press  for A.M., or  for P.M.
- ▶ Countdowns can be entered for dates between the years 1980 and 2099.

Alarm Clock




Your phone has an alarm clock with three separate alarms. Each alarm can be set once, or daily at a programmed time.

Set Time

Your phone keeps the time and date directly from the Sprint PCS system while inside the Sprint PCS Service Area. If you roam outside of the Sprint PCS Service Area, or turn on your phone in an analog roaming area, you'll need to set the time manually.



 






When you turn on your phone in Analog Mode you will be prompted to enter the current date and time. Press the appropriate keys to enter the correct date and time in a numeric mode. Time is represented as hh:mm A/P and the date is represented as DD/MM/YYYY.

To Set Time using the menu options

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Set Current**.

Tip: Use the numeric keys to enter the current time and date.


Adding New Events

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Today**.
4. Press  for input mode options **T9 (English), Alpha, Symbol, and Number**. Select an option and press  to activate.
5. Enter the event's title or name information. You can enter up to 32 characters. For more information on Text and Symbol Entry refer to "Selecting a Character Input Mode" on page 47. The default entry mode is T9 (English).
6. Press  to continue to the **Next Step**.
7. Enter the start time and move the scroll key down once to move to the date field. Enter the date, and press .
8. Enter the end time and move the scroll key down once to move to the date field. Enter the date if different from what is shown, and press .
9. Scroll to select the alarm option of choice, and press . The options are: **10 min Before, On time, No Alarm, 1 hour Before, or 30 min Before**.

Tip: Use the volume control keys to scroll by month through the Calendar, or scroll up or down to view by week.

10. Press .


▶ Notice the heading “Event” at the top of the display screen. This informs you of how many events you have scheduled for the day and the number of the event you are displaying.

11. Press and hold  to return to the **Calendar**.

 
Viewing an Event


The Event screen displays the number of events listed for the current day. Scroll through the other events. If no events are scheduled, you will be prompted to add a new event.

 
 

Editing an Event


1. From standby mode, press  for **Main Menu**.

2. Press  for **Calendar**.

3. Press  for **Today**.


4. Select an existing event, and press .

5. Press  to edit that event, and continue to press  until the information you want to edit displays. Enter the new information over the old, then press . (If you are editing an alarm, scroll to the “New” option.)

 
6. Press  until “Saved” is displayed.




7. Press  to return to the **Calendar**.

Erasing an Event

1. From standby mode, press  for **Main Menu**.

2. Press  for **Calendar**.

3. Press  for **Today**.









4. Scroll to highlight an existing event, press  and press , to erase. You are given the option to enter a new event. If you do not wish to enter a new event, press and hold  to return to the **Calendar**.

Alarm Clock


 
 


 

Note: Default alarm times are 10 minutes for Meetings, Events and Dining Appointments, 24 hours for Special Occasions and zero minutes for Call Alarms.

Your phone has an Alarm Clock feature with three separate alarms. Each alarm can be set once, or daily at a programmed time of your choosing.

To set the Alarm Clock:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Alarm Clock**.
4. Scroll to highlight **Alarm #1, #2, or #3**, and press , or select the number next to desired alarm.
5. Select **Daily** or **No Repeat** for the alarm, and press .
6. Enter the date and time for the alarm. Use the volume keys on the side of the phone to select AM. or P.M., or press  for A.M., or  for P.M. Note that no date setting is available for a **Daily** alarm.
7. Press .

Editing or Erasing a Programmed Alarm

1. Repeat steps 1 through 3 above.
2. Scroll to highlight the **Alarm #** you wish to set and press . The following options display: **Edit, Erase** or **Exit**.
3. Press  to select **Edit**. Choose either **Daily** or **No Repeat** and enter a new date and time. Use the volume keys on the side of the phone to select A.M. or P.M. or press  for A.M., or  for P.M. Press . Your phone returns to the **Alarm** menu displaying the date and time of each alarm that is set.
4. Press  to **Erase**. This erases the alarm and returns you to the **Alarm** menu.
5. Press  to **Exit** and return to the previous menu.

Using the Voice Services of Your Sprint PCS Phone

In This Section

► Using Voice-Activated Dialing

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to make calls or go to a menu by simply speaking a command. You'll also learn how to record memos and personal ringers.

Using Voice-Activated Dialing

Your phone features voice-activated dialing. You can call up to 10 stored entries by speaking the individual's or company's name into the microphone. Using the voice-activated dialing option requires that you first program the phone to recognize the name of the individual or company you are calling.


 
Tips on recording names


- ▶ Avoid recording similar names phonetically. If you record a name similar to one that is already stored in a voice-dial memory, the phone requests another name.
- ▶ Avoid recording in a noisy place.
- ▶ Speak clearly and naturally.
- ▶ Avoid very long or very short names. Names with two to five syllables are recommended.
- ▶ If a voice dial entry does not properly connect, you may need to record the name and number again.

Note: Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Programming the Phone for Voice Dialing


Programming your phone for voice activated dialing is easy. The phone provides voice prompts and screen displays to guide you through the recording process. To program the phone for voice activated dialing:

1. From the **Main Menu** press  for **Voice Dial**.
2. Press  for **Record**. The phone will prompt you to say the name you want to program.
3. Wait for the beep and then say the name. For best results, use names with at least two syllables, or use both a first and last name. The phone stores the name as a “first” sample, and then prompts you to say the name again.
4. Respond to the prompt by repeating the name after the beep exactly as you did the first time. The phone stores the name as a second sample and then requests the phone number.
5. Enter the phone number on the keypad.

6. To store the phone number, press . The number you entered displays, along with the notification 'Recorded'. If the number you entered matches a name/number already stored in your Internal Phone Book, then the name also displays.
7. The screen then returns to the **Voice Dial** menu.


 


Placing a Call Using Voice Dial

To place a call if Voice Dial is inactive:

1. Press and hold down the  key.
2. At the voice prompt, say the name into the phone.
 - ▶ The phone automatically places the call if it recognizes the name.
 - ▶ If the phone does not recognize the name, it says, **Who would you like to call?** again and displays **Locating Name**.
 - ▶ If the phone is unable to recognize the name after two attempts, it says, **The name cannot be recognized** and displays **Cannot recognize name. Please check name**. The phone returns automatically to standby mode, and you can try the call again later.


 


Reviewing Voice Dial Entries

To review Voice Dial entries:





1. From the **Main Menu** press  for **Voice Dial**.
2. Press  for **Review**. A list of your stored voice dial numbers display, (the names also display if stored in the Internal Phone Book).
3. Press the associated key to select the desired entry, or scroll to the desired entry and press . The recorded name plays audibly. You can scroll through entries without having to listen to each one, or you can listen to them all as they play in order.
4. Press  to return to the previous screen.

Erasing Voice Dial Entries

To erase an individual Voice Dial entry:

1. From the **Main Menu** press  for **Voice Dial**.
2. Press  for **Review**. A list of entries are displayed.
3. Press the associated key to select the desired entry, or scroll to highlight the desired entry, and press . The recorded name plays audibly and you are prompted with **"OK: Erase"**.
4. Press  to **Erase** that entry.

To erase all Voice Dial entries:

1. From the **Main Menu** press  for **Voice Dial**.
2. Press  for **Erase All**. You are given a confirmation screen and a confirmation voice prompt.
3. Press  to **Erase** all Voice Dial entries or  to return to the previous screen.

Games

In This Section

- ▶ **Flying Tight**
 - ▶ **Run for Money**
-

By now you've discovered the great features that come with your phone. Now it's time to experience the fun of playing games on your phone.





Flying Tight

In Flying Tight you must pilot your ship by different obstacles avoiding any collisions along the way. You can pick up a force field to help protect your ship from receiving too much damage. If too much damage is sustained, your ship is destroyed and you must start a new game. The further you fly, the more points you receive. If you receive enough points, you are awarded an extra ship.

To access Flying Tight:

1. Press  for **Main Menu**.
2. Press  for **Games**.
3. Press  for **Flying Tight**.

Playing Instructions

Keys	Action
2 or ▲	Moves the ship “UP”
8 or ▼	Moves the ship “Down”
	Starts the game
	Displays the “How to Play” screen
 	Ends the game







Run For Money

In Run For Money, you skate along the roadway and collect the money sacks by running over them. Be careful to avoid the traffic or else you will lose your collected money sacks. Each level has a goal reflecting the number of money sacks that must be collected before proceeding on to the next level. If the goal is not met, the game is over.

To access Run For Money:

1. Press  for **Main Menu**.
2. Press  for **Games**.
3. Press  for **Run For Money**.

Playing Instructions

Keys	Action
2 or 	Moves you "UP"
8 or 	Moves you "Down"
	Starts the game
	Displays the "How to Play" screen
 	Ends the game

Calculator

In This Section

- ▶ **Accessing the Calculator**
 - ▶ **Performing Simple Calculations**
-

Having a calculator handy is not only convenient, but practical. This easy to use calculator makes figuring out simple math equations a breeze.





Accessing the Calculator

The calculator allows you to perform basic mathematical calculations using your phone. Addition, subtraction, multiplication, and division can be performed.

To access the calculator:

1. Press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Calculator**.

Performing a simple Calculations

1. Press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Calculator**.
4. Using the keypad, enter the first number of the calculation.
5. Press the Navigation key up or down to scroll through the different mathematical signs.
6. When the desired sign is displayed, enter the second number of the calculation.
7. Press  to view the results.

Note: Perform steps 5 and 6 again to perform additional calculations.

Selecting Your Accessories

In This Section

- ▶ **Overview of Available Accessories for your Phone**
 - ▶ **How to Order**
-

We offer a variety of accessories for your new phone. Choose from chargers, batteries and hands-free devices – all designed to give you more flexibility and convenience.

Accessory Options

Standard Battery

The standard battery provides approximately up to 2 hours of continuous talk time in digital mode and up to 1 hour of continuous talk time in analog mode or up to 192 hours of continuous standby time in digital mode and up to 15 hours continuous standby time in analog mode. The battery charges in about 4 hours using any of the charging accessories available with this phone.

Vehicle Lighter Charger

You can charge your phone (even during a call) in your vehicle.

Hands-Free Car Kit

Allows you to operate your phone hands-free so you can drive safely. It also charges the phone's battery.

Travel Adapter

Compact and lightweight, this is a convenient way to charge your phone while on the road.

Leather Case

Made from high quality leather, this case provides durability and convenience while using your phone.

How To Order

Most Sprint PCS Accessories found at local Sprint PCS Centers can also be purchased through the Sprint PCS Accessory HotlineSM by calling 1-800-974-ACC1 (2221) or from your phone. Next day delivery is offered in select areas. You can also visit our web site at www.sprintpcs.com.

Knowing Performance and Safety Guidelines

In This Section

- ▶ **Getting the Most Out of Your Reception**
 - ▶ **Maintaining Safe Use and Access to Your Phone**
 - ▶ **Caring for the Battery**
 - ▶ **Acknowledging Special Precautions and the FCC Notice**
-

Part of getting the most out of your Sprint PCS Phone™ is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality your Sprint PCS Phone was designed to give you.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to Standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- ▶ The phone contains a fixed antenna. Do not hold or block the antenna while using the phone.
- ▶ Don't use the phone if the antenna is damaged.
- ▶ Speak directly into the mouthpiece.

- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Note: For the best care of your phone, only Sprint PCS authorized personnel should service your phone and accessories. Faulty service may void the warranty.


Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on the phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- ▶ Get to know your phone and its features, such as speed dial and redial.
- ▶ When available, use a hands-free device.
- ▶ Position your phone within easy reach.
- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.
- ▶ Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- ▶ Do not engage in stressful or emotional conversations that may divert your attention from the road.
- ▶ Dial  to report serious emergencies. It's free from your wireless phone.
- ▶ Use your phone to help others in emergencies.
- ▶ Call roadside assistance or a special non-emergency wireless number when necessary.

Tip: Purchase an optional Hands-Free Car Kit.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Fueling areas such as gas stations
- ▶ Below deck on boats
- ▶ Fuel or chemical transfer or storage facilities
- ▶ Areas where the air contains chemicals or particles such as grain, dust or metal powders
- ▶ Any other area where you would normally be advised to turn off your vehicle engine

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only Sprint PCS-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ The battery may need recharging if it has not been used for a long period of time.
- ▶ It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month: 4° F to 140° F (-20° C to 60° C)

More than one month: 4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your LiIon batteries, contact your nearest Sprint PCS-authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking LiIon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint PCS supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least one inch (2.5 centimeters) from your body when transmitting. Use of non-Sprint PCS approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number: **A3LSPHN240**. More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/fccid>

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model:

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,109,390	5,267,262	5,416,797
5,506,865	5,544,196	5,657,420	5,101,501
5,267,261	5,414,796	5,504,773	5,535,239
5,600,754	5,778,338	5,228,054	5,337,338
5,710,784	5,056,109	5,568,483	5,659,569
5,490,165	5,511,073		

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Terms and Conditions & Warranty Information

In This Section

- ▶ **Terms and Conditions of Services**
 - ▶ **Manufacturer's Warranty**
-

This section contains the Terms and Conditions of Services and the manufacturer's warranty for your Sprint PCS® Phone.

Terms and Conditions of Services

Thanks for choosing to connect with Sprint PCS. These terms and conditions are part of your agreement with Sprint PCS for Sprint Personal Communication Services.

For the most current version of the terms and conditions, please visit our website at www.sprintpcs.com or call Sprint PCS Customer Care at 1-888-211-4PCS, because the terms and conditions included with your Sprint PCS Phone™ may not be the most current version. If you activated Sprint PCS Services before the effective date of these terms and conditions, these terms and conditions replace and supersede any previous terms and conditions.

If you have questions about your Sprint PCS Services, call Sprint PCS Customer Care at 1-888-211-4PCS (4727) or visit our Web site at www.sprintpcs.com.

Agreement

Your agreement (“Agreement”) with Sprint Spectrum L.P. and any of its affiliates doing business as Sprint PCS providing Sprint Personal Communications Services (“Services”) to you is made up of these Terms and Conditions of Service (“Terms”) and the Service Plan that we agree to provide you. Your “Service Plan” is described in our marketing materials, and includes the rates and features we set for that Service Plan. We use the words “we,” “us,” “our” or “Sprint PCS” to refer to Sprint Spectrum L.P. and its affiliates doing business as Sprint PCS in these Terms. When you activate Services or attempt to use our Services (including, without limitation, attempting to place a call on the Sprint PCS Network or off the Sprint PCS Network when roaming, including “911” or similar calls), you accept the Agreement.

Provision of Service

Your purchase of Sprint PCS phones or other equipment does not mean that we must provide Services to you. We may decide not to provide Services to you for any lawful reason. We may request that you provide us with any information we reasonably require to determine whether you qualify for Services. Services in some areas are managed and provided under contract with Sprint PCS by independent affiliates with access to the Sprint PCS Network. Some Services may not be available or may operate differently in certain affiliate markets.

Credit Verification

You must have and keep satisfactory credit to receive and continue to receive Services. We will verify your credit before agreeing to provide Services to you and we may verify your credit at any time while we provide Services to you. Credit verification may include a review of credit reports that we receive from commercially available credit bureaus. We may require a guarantee of payment by an individual or entity approved by us. If at any time we determine, in our sole discretion, that payment for Services may not be made when due, we may suspend Services to your phone and require that you provide payment on account or a guarantee of payment before we resume Services to your phone.

Changes to Agreement

We may change this Agreement at any time (but see Service Plan). Any changes to the Terms are effective when we publish the revised terms. If you use our Services or make any payment to us on or after the effective date of the changes, you accept the changes. If you do not accept the changes, you may terminate Services (but see

Termination and Changing Service Plans). For purposes of the Agreement, “use” includes keeping the right to access the Sprint PCS Network by not terminating Services. You may not modify the Agreement except for your Service Plan (see Termination and Changing Service Plans).

Service Plan

You may be eligible for a fixed length Service Plan (“Term Service Plan”) or for a month-to-month Service Plan (“Non-Term Service Plan”). We determine the Service Plan for which you qualify. We may offer non-identical Service Plans to different individuals or entities. Services and coverage under some Service Plans may be more limited than available under other Service Plans. Your Service Plan sets out the charges for Services and is your Service Plan until that Service Plan is changed, you switch to a different Service Plan, or your Services terminate. Your Service Plan may require that you make a deposit, prepayment, or a series of deposits or prepayments, or be subject to an account spending limit, before Services are activated or maintained.

Changing Service Plans

If you are on a Non-Term Service Plan, you may change to a different Service Plan for which you qualify. Any change is effective at the start of your next full invoicing cycle unless otherwise specified by us at the time that you place your change order. If you change or add a different Service Plan or service feature and the change is effective prior to the start of your next full invoicing cycle, you will be invoiced a prorated amount. We may require a service charge for implementing any change directed by you as well as the Service Plan or optional service features you select. If you are on a Term Service Plan, your ability to change to another Service Plan may be limited and we may require you to pay a termination fee as set out in your Service Plan.

Use of Services and Equipment; Availability

You must be at least 18 years old to subscribe to our Services. We may require you to provide proof of your age and identity. If you are under 18 years old you may be eligible for certain Services that have Account Spending Limits if a person 18 years or older is also named as a subscriber on the Account. Services and equipment may not be used for any unlawful, fraudulent or abusive purpose. By requesting Services, you agree that you will not use Services and equipment in any unlawful, fraudulent or abusive manner. You may not resell or lease Services or equipment to anyone. Services are available within the operating range of the Sprint PCS Network. Coverage and quality of Services may be affected by conditions within or beyond our control, including atmospheric, geographic, or topographic conditions. We do not guarantee that there will be no interruptions or delays in Services. Your Sprint PCS[®] phone will not accept the services of any wireless provider other than Sprint PCS (but see Roaming).

Number

We assign a phone number (“Number”) to the phone or other equipment used by you on the Sprint PCS Network. We may change the Number without compensation by giving you prior notice. You do not own the Number. You may not modify the Number we program into any phone or other equipment.

Phone Activation Fee

You may be required to pay a non-refundable phone activation fee when you activate a new Number, have us switch a Number to a different phone, we activate a different phone on your existing account or your Service Plan says so. Details on any applicable phone activation fee are set out in your Service Plan or can be obtained by calling Sprint PCS Customer Care.

Charges

For most forms of wireless Service, your usage will be charged from the time you first initiate contact between your phone or other wireless device and the network until the network connection is broken, whether or not you are successful in connecting with the service with which you seek to connect, even if the connection is later broken or dropped. An exception is that you are not charged for voice calls that are not completed. You are charged for completed calls to your Number from the time shortly before the phone starts ringing until the call is terminated by either party. You will be charged peak rates for the entire duration of calls initiated during the peak time periods applicable to your Service. You will be charged off-peak rates for the entire duration of calls initiated during the off-peak time periods applicable to your Service. In addition to these usage charges, you may be charged for recurring monthly service charges, applicable local and long-distance toll charges, other usage charges, connection fees, roaming charges, directory assistance, call completion charges, optional features you select at an extra cost, and taxes and other regulatory related charges. Charges for most Services are incurred in one-minute increments, with partial minutes of use rounded up to the next highest minute. You must pay, by each invoice due date, all charges for Services provided to the Number for each phone or other equipment that our records show you activated, no matter who actually uses or has possession of the phone or other equipment at the time Services are provided.

Voice Command

Sprint PCS Voice CommandSM is an optional service that allows you to place calls by using speech recognition technology. Calls to 911 or similar emergency numbers cannot be placed through the Voice Command feature. Airtime and applicable long distance charges for a call completed from your Number using the Voice Command feature begin when you press or activate the TALK or similar keys and end when your call is terminated by hitting the END key or by returning to the Voice Command platform. If you initiate and complete another call without leaving the Voice Command platform, a separate charge for that call will begin from the time the previous call was terminated. Airtime and applicable long distance charges will be applied to the entire length of a completed call initiated from Voice Command. Using Directory Assistance to input names into your Voice Command address book will incur additional charges. Details on charges for the Voice Command feature can be found in the marketing materials for this feature, by visiting www.sprintpcs.com or by calling Sprint PCS Customer Care.

Invoicing

Invoicing cycles are approximately 30 days in length. Invoicing cycles and dates may change from time to time. Except as otherwise provided in your Service Plan, monthly recurring charges (MRCs) are invoiced one invoicing cycle in advance. Charges for Services are usually invoiced as soon as possible after the charges accrue. We may, however, invoice you for usage and charges occurring before the invoicing

cycle being invoiced, if they were not previously invoiced. If you are invoiced for usage incurred during a prior invoicing cycle, those minutes will be applied to your Service Plan minutes for the current invoicing cycle. However, if you change your Service Plan between the time the usage was incurred and the beginning of the current invoicing cycle, those minutes from the prior invoicing cycle will be charged at the rate per minute for usage over included minutes provided in the Service Plan in effect at the time the usage was incurred.

Payment

If you have authorized payment for Services or equipment by credit card or by debiting a bank account, no additional notice or consent is required before we invoice the credit card or debit the bank account for all amounts due to us or billed by us on behalf of a third party. You must promptly notify us of any change in your invoicing address or of the credit card or bank account used for payment. We reserve the right to require payment by money order, cashier's check or other secured form of payment. If we take action to receive payment beyond invoicing you for charges for Services or equipment, you must pay our costs and expenses of collection, including attorneys' fees and expenses, the fees of any collection agency and court costs. If we act as an invoicing agent for a third-party service provider, payments received are first applied to amounts due and owing to us and any remaining amounts are applied to sums due and owing to the third-party service provider. We may charge an additional fee for any check or other negotiable instrument endorsed by you and returned unpaid by a financial institution for any reason. You may be charged fees for certain methods of payment.

Late Payment Charges

Payment is past due if we do not receive it by the due date shown on your invoice. Any payment for Services and equipment not made when due accrues late charges until paid at the rate of 1.5% per month or at the highest rate allowed by law. Late charges are prorated daily for each day that payment is past due, but are not compounded monthly. Acceptance of late or partial payments (even if marked "paid in full") does not waive our right to collect all amounts that you owe us.

Disputed Charges

You must raise any dispute that you have about any charges invoiced to you within 15 days of the date of the invoice or you have accepted the invoice. You may notify us of any dispute by notifying Sprint PCS Customer Care. Calls to our sales or general business offices are not notice of a dispute. If disputed invoice procedures are described on the invoice, you must follow them.

Termination. Non-Term Service Plan.

If you are on a Non-Term Service Plan you may terminate Services at any time by giving us notice. Subject to the terms of this Agreement, we may terminate Services at any time, with or without notice. We may deactivate any Number before you receive notice of termination without liability to you. Termination by either of us may be with or without cause.

Termination. Term Service Plan.

If you are on a Term Service Plan (1) your ability to terminate Services before the end of the term is limited, (2) your ability to change to another Service Plan before the

end of the term may be limited, and may result in a termination or activation fee, (3) you may be required to pay a termination fee, (4) we may not terminate Services without cause before the end of the term and (5) if we terminate Services for cause before the end of the term, you may be required to pay a termination fee. No termination fee is charged if you terminate a Term Service Plan within 14 days of activation of your Sprint PCS Phone. During the term we must give each other notice to terminate Services. At and after the expiration of the term, you may terminate Services at any time by giving us notice and we may, subject to this Agreement, terminate Services at any time, with or without notice.

Termination. General.

Regardless of whether you have a Non-Term or a Term Service Plan, we may terminate or suspend Services to you without liability (1) if you breach any provision of this Agreement (including if you fail to pay any charges for Services), or (2) if you fail to pay any charges due us for equipment or otherwise. If you promptly cure the breach, we may, but are not obligated to, reactivate Services to you. You must pay all charges for (a) Services provided before termination of a Number and (b) equipment, regardless of who terminates Services. If Services are terminated before the end of your current invoicing cycle, (i) the monthly recurring charge is not prorated to the date of termination, and (ii) you will not receive a credit or refund for any unused minutes in your Service Plan.

Account Spending Limit

If we agree to provide Services to you on an Account Spending Limit basis, we will tell you your Account Spending Limit before we start Services to your Number, or as reasonably practicable after the limit is imposed. If we require a deposit for you to establish or keep Services on an Account Spending Limit basis, we will hold the deposit as partial guarantee of payment for Services (see Deposits). Charges for Services accrue against your Account Spending Limit as they are incurred. We may charge an initial ASL start up fee. We may charge a monthly ASL service fee, in addition to your recurring monthly service charge. We may suspend Services to your Number without prior notice to you when your account balance reaches your Account Spending Limit. Services are restored when you have paid any past due balance and pay a specified minimum amount to reduce your account balance below your Account Spending Limit. We may change this minimum amount at any time upon notice to you. You may pay any past due balance and the minimum amount by any method authorized by Sprint PCS. Call Sprint PCS Customer Care for information about authorized methods of making these payments. We may charge you a fee for calls that involve our live customer care services. If we provide Services to you on an Account Spending Limit basis, Services and coverage may be limited in certain ways. You must pay all charges for Services even if they exceed the amount of your Account Spending Limit.

Deposits

If we require a deposit for you to establish or keep Services, we will hold the deposit as partial guarantee of payment for Services. We may change the deposit amount at any time to reflect revised estimated monthly charges based upon your usage. A deposit may not be used to pay any invoice (unless it is used to pay a final invoice) or delay payment. The deposit amount, the length of time we hold the deposit and changes to the deposit amount are determined based on your credit and payment history. The rate of interest on the deposit is subject to change. We may mix deposits with our

other funds. If Services are terminated for any reason, we may, without notice to you, apply your deposit toward payment of outstanding charges and return any excess to you at your last known address within 75 days after termination of Services. If the U.S. Postal Service cannot deliver the money to you and returns it to us, we will hold it for you for one year from the date of return and, during that period, we may charge a monthly servicing fee against the deposit balance. Any money held during this one-year period will not accrue interest for your benefit. You forfeit any portion of the money left after the one-year period.

Wireless Web and Voice Portal Services

Wireless Web Services are part of the Services that can be obtained through Sprint PCS. Wireless Web Services may not be immediately available in some Sprint PCS affiliate markets. Use of Wireless Web Services requires a wireless data compatible phone or certain other equipment (or both) and is subject to any memory, storage or other limitation in the phone or other equipment. The Caller ID blocking feature is not available when using Wireless Web Services. For data calls (including Wireless Web and Voice Portal calls) that are attempted, but not completed, you are charged for the time during which the network attempts to connect the call. You are charged for time spent connected to the Wireless Web or Voice Portal, including time spent browsing on the Internet or Voice Portal and reviewing or scrolling through Internet information on-line while still connected to the Sprint PCS Network. Not all Internet sites can be accessed and you may receive an error message if you attempt to access a site that cannot be accessed through Wireless Web Services. You are also charged for Wireless Web connections to review your Sprint PCS account information. Wireless Web Services and Voice Portal data calls may not be available when you are roaming off the Sprint PCS Network. Wireless Web Services are not available to you if you are on a Sprint PCS Prepaid Service Plan. If you receive Services on an Account Spending Limit basis, you may be limited in the Wireless Web and Voice Portal Services available to you. Call Sprint PCS Customer Care or visit our website at www.sprintpcs.com for availability and equipment compatibility information. Specific additional information about Wireless Web Services and Voice Portal Services, including pricing, included minutes and combining with other Service Plans, is available in our standard sales collateral for Sprint PCS Wireless Web Services and Voice Portal Services or at www.sprintpcs.com. Sprint PCS is not a publisher of third party content that can be accessed through Wireless Web Services or Voice Portal Services. Sprint PCS is not responsible for any opinions, advice, statements, services or other information is provided by third parties and accessible through Wireless Web Services or Voice Portal Services. Neither Sprint PCS nor its vendors or licensors guarantees the accuracy, completeness or usefulness of information that is obtained through the Wireless Web Services or Voice Portal Services. You are responsible for evaluating such content.

Taxes and Other Regulatory Related Charges

We invoice you for taxes, fees and other charges levied by federal, state or local authorities, or foreign government on Services. We also assess charges associated with regulatory mandates and obligations, such as Universal Service and Enhanced 911 service. If you claim any tax exemption, you must provide us with a valid tax-exempt document. Any tax exemption applies only from the date we receive a valid tax-exempt document.

Roaming

Calls made outside of your Home Service Area and outside of the Sprint PCS Network are “roaming” calls. Your Sprint PCS phone is specifically designed and engineered to work only on the Sprint PCS Network. It works on another CDMA PCS provider’s system only when a roaming agreement is in place between Sprint PCS and the other provider. If your Sprint PCS Phone is a dual-band tri mode phone, it works on both a CDMA PCS provider’s system (in addition to the Sprint PCS Network) and a wireless analog telecommunications provider’s system only when roaming agreements are in place between Sprint PCS and the other providers. If we do not have a roaming agreement in place, you may be able to place roaming calls “manually” by using a valid credit card. If there is a gap or other interruption of coverage within a Sprint PCS coverage area that prevents connection with the Sprint PCS network and your dual-band tri mode phone is set to roam automatically when outside Sprint PCS coverage, you may incur roaming fees within a Sprint PCS coverage area. Certain features are not available when roaming. Roaming rates may be different from and higher than the rates you pay for calls within your Sprint PCS Home Service Area and on the Sprint PCS Network. Roaming charges are invoiced according to the practices of the roaming service provider. When roaming, you are subject to the limitation of liability provisions and other applicable rules imposed by the roaming service provider.

Interruption of Service

We may give credit for a continuous interruption of Services for more than 24 hours on a case-by-case basis. Interruptions caused by your negligent or willful actions, or by failure of equipment or service not provided by us, or by causes beyond our reasonable control, do not qualify for credit. We may provide you with an airtime credit of one minute for a call that is disconnected because of transmission limitations caused by atmospheric, geographic or topographic conditions and that you redial within one minute of disconnection. You must notify us within 24 hours of the disconnection to request credit.

Phones and Other Equipment

Phones and other equipment may be purchased and returned as provided in the purchase documents. We are not the manufacturer of the phones or other equipment. The only warranties on the phones or other equipment are any limited warranties extended by the manufacturers. We have no liability in connection with the phones and other equipment or for the manufacturers’ acts or omissions.

Lost or Stolen Equipment

If your phone or other equipment is lost or stolen, you must notify us by calling Sprint PCS Customer Care. You are responsible for all charges for Services provided to the Number for the lost or stolen equipment before you notify us of the loss or theft. We will deactivate Services to the Number upon notification to us of any loss or theft. You may be required to provide evidence of the loss or theft (for example, a police report or sworn statement). If the equipment is later found, we may require that you exchange it for another phone or other equipment before we reactivate Services (if we do reactivate Services), as well as require you to pay a reactivation fee. We will deactivate Services to any Number without prior notice to you if we suspect any unlawful or fraudulent use of the Number. You agree to cooperate reasonably with us in investigating suspected unlawful or fraudulent use.

Caller ID

If you do not want people you call to get the Number assigned to your phone, you must call Sprint PCS Customer Care for information about automatic Caller ID blocking. The Number assigned to your phone can be blocked on a per-call basis by dialing *67 + Destination Number + OK, but Caller ID delivery resumes on the next call you make. Caller ID display on incoming calls to your Number depends on receiving the information from the calling party.

TTY Access

A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. It is not possible to use your phone with a TTY.

Pay-Per-Call Service

We will not complete calls from your Number to 900, 976 and similar numbers for pay-per-call services.

International Calling

You may be limited in the international destinations that you can call with Services. You should contact Sprint PCS Customer Care for information about international destinations that you cannot call.

Limitation of Liability

Except as otherwise provided in this section, our sole liability to you for any loss or damage arising out of providing or failing to provide Services (including mistakes, omissions, interruptions, delays, errors, or defects) does not exceed (1) in cases related to a specific piece of equipment, the prorated MRC for Services to the piece of equipment during the affected period, or (2) in cases not related to a specific piece of equipment, the prorated MRCs for Services to you during the affected period. Neither we nor our vendors, suppliers or licensors are liable for any damage arising out of or in connection with:

- a) any act or omission of any telecommunications service or other service provider other than us;
- b) any directory listing;
- c) any dropped calls or inability to place or receive calls;
- d) any interruption of Services, including interruptions caused by equipment or facilities failure or shortages, transmission limitations or system capacity limitations;
- e) traffic or other accidents, or any health-related claims allegedly arising from the use of Services, phones, equipment or accessories used in connection with the Services;
- f) the use of Sprint PCS Wireless Web Services, including the accuracy or reliability of any information obtained from the Internet using Sprint PCS Wireless Web Services or from Voice Portal Services, or Internet services, content or applications not supported by Sprint PCS;
- g) any late or failed message delivery;

- h) any interruption or failure of 911 or E911 emergency services or identification of the Number, address or name associated with any person accessing or attempting to access emergency services from your phone;
- i) the installation or repair of any products or equipment by parties who are not our authorized employees or agents;
- j) events due to factors beyond our control, including acts of God (including, without limitation, weather-related phenomena, fire or earthquake), war, riot, strike, or orders of governmental authority;
- k) any act or omission of any third party or independent contractor that offers products or services in conjunction with or through the Services, or
- l) your negligent or intentional act or omission.

NO CONSEQUENTIAL OR OTHER DAMAGES

UNDER NO CIRCUMSTANCES ARE WE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OF ANY NATURE WHATSOEVER ARISING OUT OF OR IN CONNECTION WITH PROVIDING OR FAILING TO PROVIDE SERVICES, PHONES OR OTHER EQUIPMENT USED IN CONNECTION WITH THE SERVICES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOSS OF BUSINESS, OR COST OF REPLACEMENT PRODUCTS AND SERVICES. THIS SECTION SURVIVES TERMINATION OF THIS AGREEMENT.

Indemnification

You indemnify and defend us, our partners, directors, officers, employees and agents from and against any claim, action, damage, liability and expense arising out of or in connection with: (1) your acts or omissions that occur in connection with your use of the Services or equipment used in connection with the Services, and (2) any communications you make or receive using the Services. This indemnification extends to and includes any attorney's fees and costs incurred by us arising from any actions or claims to which this indemnification applies, or from the contesting of the applicability of this provision. This section survives termination of this Agreement.

ARBITRATION OF DISPUTES

ANY CLAIM, CONTROVERSY OR DISPUTE, WHETHER SOUNDING IN CONTRACT, STATUTE, OR TORT, INCLUDING FRAUD, MISREPRESENTATION, OR ANY OTHER LEGAL THEORY, RELATED DIRECTLY OR INDIRECTLY TO THE SERVICES, WHETHER BETWEEN THE COMPANY AND THE CUSTOMER OR BETWEEN THE COMPANY OR THE CUSTOMER, ON THE ONE HAND, AND EMPLOYEES, AGENTS OR AFFILIATED BUSINESSES OF THE OTHER PARTY, ON THE OTHER HAND, SHALL BE RESOLVED BY ARBITRATION AS PRESCRIBED IN THIS SECTION. THE FEDERAL ARBITRATION ACT, NOT STATE LAW, GOVERNS THE QUESTION OF WHETHER A CLAIM IS SUBJECT TO ARBITRATION.

A single arbitrator engaged in the practice of law will conduct the arbitration under the rules of the American Arbitration Association. The arbitrator will be selected in accordance with AAA procedures from a list of qualified people maintained by the AAA. All expedited procedures prescribed by the AAA rules will apply, and each party will bear their own costs and attorney's fees.

No discovery will be permitted, except that the parties will exchange, thirty days prior to the hearing on their dispute, all documents to be submitted to the arbitrator, including any reports or summaries, and a list of the names and addresses of those

persons to be called to testify. Following exchange of this information, the parties may agree to waive a hearing.

The arbitrator will have authority only to award compensatory damages and will not have authority to award punitive damages, lost profits, or other non-compensatory damages. The arbitrator's decision and award will be final and binding, and judgment on the award rendered by the arbitrator may be entered in any court with jurisdiction. The arbitrator's decision must not contain findings of fact or conclusions of law.

If any party files a judicial or administrative action asserting a claim that is subject to arbitration and another party successfully stays such action or compels arbitration, the party filing that action must pay the other party's costs and expenses incurred in seeking such stay or compelling arbitration, including attorney's fees.

Notices

You may get our current address for written notice by calling Sprint PCS Customer Care. Written notice to you is sent to your last known address in our invoicing records. Written notice is deemed delivered 3 days after deposit in the U.S. mail, postage prepaid, and properly addressed. Unless required by this Agreement or Applicable Laws, (1) you may notify us by calling Sprint PCS Customer Care, and (2) we may notify you by leaving a message for you on your Sprint PCS Phone, answering machine or with your answering service. Notice addresses may be changed by giving notice as provided in this section.

Choice of Law; Jurisdiction

This Agreement is governed by and must be construed under federal law and the laws of the State of Kansas, without regard to choice of law principles. You agree to submit yourself to the personal jurisdiction of the courts in the State of Kansas.

General

If either of us does not enforce any right or remedy available under this Agreement, that failure is not a waiver of the right or remedy for any other breach or failure by the other party. Our waiver of any requirement in any one instance is not a general waiver of that requirement and does not amend this Agreement. If any part of this Agreement is held invalid or unenforceable, that part is interpreted consistent with Applicable Laws as nearly as possible to reflect the original intentions of the parties and the rest of this Agreement remains in full force and effect. Section headings are for descriptive purposes only and are not used to interpret this Agreement. You may not assign this Agreement to any other person or entity without our prior written approval. This Agreement (including any referenced documents and attachments) makes up the entire agreement between you and us and replaces all prior written or spoken agreements, representations, promises or understandings between you and us. The provisions of this Agreement that are contemplated to be enforceable after the termination of the Agreement survive termination of this Agreement. This Agreement is subject to any applicable federal and state law (collectively, "Applicable Laws"). If there is a conflict, the Service Plan (including any Term Service Plan) controls over the Terms.

The following provisions are not generally applicable and apply only to customers whose Service Plans include these terms:

Traveling

If you are making or receiving calls outside your Home Service Area but on the Sprint PCS Network, you may be charged for Services at a “travel” rate for both outgoing and incoming traveling calls. Long distance charges may not be included in the travel rate. Traveling charges do not apply if you subscribe to a Home Rate USA plan or to both Toll-Free USA and Home Rate USA. (See Home Rate USA and Toll-Free USA for more information.) You do not have to register your Number when traveling outside your Home Service Area.

Home Rate USA

This service lets you make or receive calls from anywhere on the Sprint PCS Network at your Home Service Area airtime rates.

Toll-Free USA

This service lets you call from anywhere on the Sprint PCS Network to anywhere in the United States, Puerto Rico and the U.S. Virgin Islands and be charged at your Home Service Area airtime rates, with no additional long distance charges. If you have Home Rate USA but do not have Toll-Free USA, and if you make a long distance call outside of your defined local calling area, you are invoiced for the long distance charges.

Manufacturer's Warranty

DISCLAIMER OF WARRANTIES; EXCLUSION OF LIABILITY. EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THIS WARRANTY PAGE, THE PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

BROWSER BY



OPENWAVE

A

- Accessing the Calculator 90
- Accessing the Security Menu 72
- Accessories 91
- Accessory Options 92
- Adding a Phone Number to an Internal Phone Book Entry 63
- Alarm Clock 77, 80
- Answering Calls 30

B

- Backlight
 - Changing time length 68
- Battery
 - Capacity 19
 - Charging 21
 - Installation 20
 - Removing 20
- Battery - Using 19

C

- Calculator 89
- Calendar
 - Jump To Date 77
 - Task List 77
 - Today 76
- Call - Muting a call 40
- Call Forwarding 51
- Call Guard 26
- Call History
 - Erasing 56
 - Managing 53
 - Options 54
 - Viewing 54
- Call Waiting 50
- Caller ID 50
- Changing Ringer Volume 40
- Changing the Contrast 69
- Changing the Lock Code 73
- Command Keys 18
- Countdown 77
- Customer Care 12

D

- Dialing Options 33
- Dialing Phone Numbers With Pauses 37

Directory Assistance 13

Display Screen 19

E

Editing an Internal Phone Book Entry 63

Entering Characters

Character Input Mode 47

F

Finding Internal Phone Book Entries 62

Flying Tight - Playing Instructions 86

Forwarding Calls 51

Front View of Phone 17

G

Games 85

Getting Help 12

Getting Started With Sprint PCS Service 9, 10

Getting to Know Your Sprint PCS Phone 15

Greeting

Changing 66

I

Internal Phone Book 61

Adding a New Entry 62

Entry Options 62

Secret Entries 64

L

Language

Changing 66

Lock Mode

Calling in 73

Locking Your Phone 72

M

Making Calls 30

Menu Diagram 43

Menu Navigation 42

Menu Structure 42

Menus

Viewing 43

Message

Types 58

Messages

Knowing when you have them 58

Messaging

Managing 57

Missed Call Notification 31

Muting 31

N

Navigating Menus 42

Navigating Through Menus and Entering Text 41

New Events 78

Numeric Page Options 60

P

Performance and Safety Guidelines 93

Personal Information Management 75

R

Ringer - Silencing 40

Ringer Types 67

Ringer Types for Alarms 68

Ringer Types for Messages 67

Ringer Types for Voice Calls 67

Ringer Volume 66

Roaming

 Analog Networks 24

 Other Digital Networks 24

 Roam Mode 25

Run For Money 87

Run For Money - Playing Instructions 87

S

Security 71

Security - Erasing the Internal Phone Book 74

Security - Resetting Your Phone 74

Security Menu

 Accessing 72

Selecting a Ringer Type for an Entry 64

Sending Numeric Pages 60

Service Features 49

Set Time 78

Setting Up Your Voicemail 11

Special Numbers 73

Speed Dialing 38

Sprint PCS Ringers & More 67

Sprint PCS Services

 Billing Information 13

 Customer Care 12

 Directory Assistance 13

 Operator Services 13

Sprint PCS Voice Command 32

Symbols and Numbers

Entering 48

T

T9 Text Input 48

Termination

General 106

Non-Term Service Plan 105

Term Service Plan 105

Three-Way

Calling 51

Three-Way Calling 51

To edit a Today event 79

To Edit or Erase a Programmed Alarm 80

To erase an event 79

To Set Time using the menu options 78

To View, Add, Edit or Erase an event on your Calendar 76

Turning Your Phone On and Off 10

U

Understanding This User Guide 14

Unlocking Your Phone 11, 72

Using the Battery 19

V

Voice Services 81

Voice-Activated Dialing 82

Voicemail

Clearing the Icon 60

New message alerts 58

Retrieving 59

Retrieving messages 59

Setting Up 11

Setting up 58

Volume

Adjusting 39

Adjusting during a conversation 40

Conversation 30

Ringer 35, 40, 90, 92

W

Warranty 113

What are the Schedule Options 76

Y

Your Phone Number 38, 64