

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2004
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens-mobile.com

Designed for life

C65
CV65
CT65

Safety precautions	2	Voice message/CB	36
Overview of phone (schematic)	4	Surf & fun	37
Display symbols	6	Setup	40
Getting started	8	Fast access	49
Switch on/off, PIN entry	11	Organiser	50
General instructions	12	Extras	52
Standard functions	14	My stuff	54
Security	15	Customer Care	55
Text entry	17	Care and maintenance	57
Calling	19	Product data	58
Default book	21	Guarantee certificate (UK)	59
Addressbook	22	Guarantee certificate (IRL)	60
Phonebook	24	SAR – European Union (RTTE)	61
Call records	26	SAR – International (ICNIRP)	62
Camera	27	Menu tree	63
Message lists	29	Index	69
SMS	30		
MMS	32		

**This is a summarised version of the User Guide. The complete version can be found in the Internet at this address:
www.siemens-mobile.com/c65**

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The ring tone (p. 42), info tones (p. 44) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 19). Otherwise you risk serious permanent damage to your hearing.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



Do not open the phone. Only the battery (100% mercury-free) or SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the type approval required for operation of the unit.

Important:

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!
These safety instructions also apply to
Siemens original accessories.

Overview of phone (schematic)

① Call key

Dial displayed/highlighted phone numbers/names, take calls. Show last phone numbers dialed in standby mode.

② On/Off/End key.

- Switched off: press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** = go back a level. Press and **hold** = go back to standby mode.
- In standby mode: press and **hold** to switch off phone.

③ Joystick

Press the joystick down vertically to start an application or function.

In standby mode:

Open main menu.

Open user profiles.

Open Phonebook/Address-book.

Open Inbox.

Start the camera.

In lists, messages and menus:

Scroll up and down.

 
Back a level.

Has the same function as the right soft key.

During a call:

Set volume.

Call options.

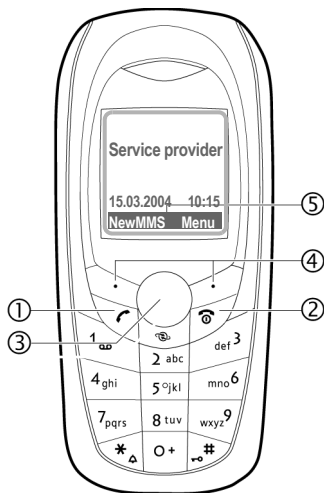

④ Soft keys

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g.).

- ⑤ Additional symbol to display which function pressing the joystick has in different situations (see p. 7).

① **Integrated antenna**

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② **Loudspeaker**③ **Display**④ **Infrared interface (IrDA)**⑤ **Access to the Internet portal**⑥ **Input keys**⑦ **Ringtone**

 
 
- Press and **hold** in standby mode: Switch all audible signals on/off (except alarm).
- Press and **hold on** incoming call: Switch off ringtone for this call only.

⑧ **Key lock**

Press and **hold** in standby mode: Switch key lock on/off.

⑨ **Connection socket**

For charger, headset, flash etc.

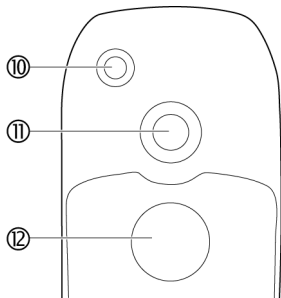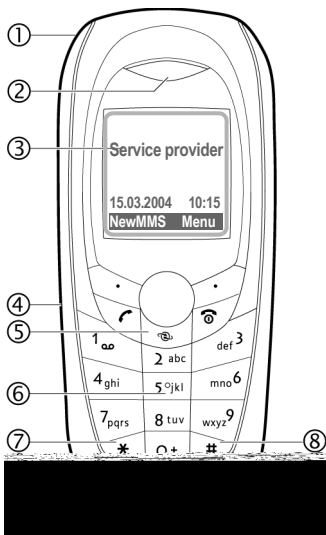⑩ **Connection for external antenna**⑪ **Camera lens**⑫ **Mirror** (depending on phone model)

Display symbols

Display symbols (selection)

Signal strength

Charging

Battery charge level, e.g. 50 %

Phonebook

Call records

Surf & fun/
Service provider portal

Organiser

Messages

Camera

Extras

My stuff

Setup

All calls are diverted

Ringer off

Short ring (beep) only

Ringer only if the caller is stored
in the Phonebook.

Alarm set

Keypad locked

Auto answer feature on

T9Abc Text input **with** T9.

Activated and available

Registered

Temporarily interrupted

Browser offline

Browser online

Browser via GPRS online

No network (Internet)

IrDA activated

IrDA transmission

Events (selection)

SMS memory full

MMS memory full

Phone memory full

No network access

Missed call

Delete assistant

Message symbols (selection)

Unread

Read

Draft

Sent

MMS not sent

MMS received

MMS read

MMS with DRM contents (p. 12)

Voice mail received

Camera symbols

Brightness

Zoom factor

White balance

Flash connected

Joystick symbols

Camera

Delete

Call/accept call

Menu

Zoom

 
OK

Getting started



Insert SIM card/battery

All data for your connection is saved on your SIM card.


Press grooved area ①, then push cover in the direction indicated by the arrow ②.

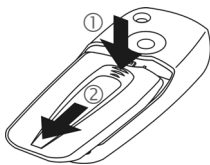

  Insert SIM card into the slot ③ with the contact surface facing downwards.

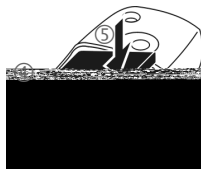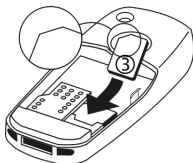

 Insert the battery sideways into the phone ④ and then press it downwards ⑤.

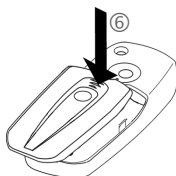

Push cover onto the side hooks ⑥, until it clicks into position.

Additional information

Switch the phone off before opening it.

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Charge battery

Charging procedure

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.



Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of 5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 300 minutes
Standby time: 60 to 250 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit supplied!

Display while in service

Charge level display during operation (empty-full):

A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Changing CLIPit™ covers

You can use CLIPit™ covers (accessories) to personalise the appearance of your phone as you wish.

 
Before changing the keypad or faceplate, switch the phone off.

Dismantle the phone

Take off the battery cover and remove the battery (see p. 8).

To remove the faceplate, insert the key into the opening provided, apply slight pressure ① and turn it at the same time ② to open the lock.


Do not use the key to lift the phone as this could damage the faceplate.

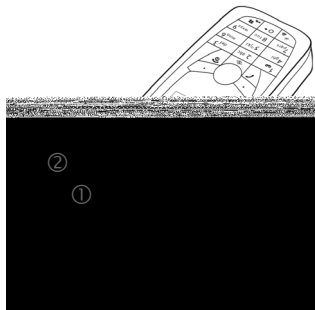

Assemble the phone

First insert the keypad mat ③ into the faceplate. Ensure that it is sitting exactly in place.

 *) If there are small pins at the bottom of the faceplate: position the tabs on both sides of the keypad mat precisely on these pins. before carrying out step ④.

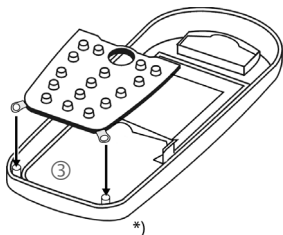

Insert the phone into the bottom of the upper faceplate ④ and then push it in carefully until it clicks into position ⑤. Finally, replace battery cover (see p. 8).



Switch on/off, PIN entry

Switching phone on/off

Press key and hold.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.

Enter the PIN using the number keys. The characters * * * * appear to ensure nobody can read your PIN on the display. Correct with .

Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Additional information

Change PIN.....p. 15

Clear SIM card barringp. 16

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

Set the clock correctly on a one-off basis when getting started.

Press this key, then select **Change**.

First enter the date (day/month/year), then the time (24 hours, including seconds).

Press. The time and date are updated.

Time zones

Set the time zone for your area.

Select the city in the desired time zone from the list ...

Set

... and set it.

Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 25).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.

By **pressing and holding**, you can return to standby mode from any situation.

Signal strength

Strong receiving signal.

A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your telephone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g., copy protection, use for a limited period of time only, number of times it can be used etc.

Main menu

The main menu is displayed graphically with symbols:

Call up from standby mode.

Select the application symbols.

Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

Big letters	Select between two font sizes.
Illumination	Set display illumination to brighter/darker.
Help	Display a help text.

User guide

Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide, e. g., to display record of missed calls in condensed form:

→ → **Calls missed**

This comprises the following steps:

Open main menu.

→ Select (highlight) by moving the joystick upwards, then press vertically down on the joystick before using the joystick to highlight **Calls missed**.

Select Confirm. The record is opened.

Menu speed dialling

All menus are numbered so that a function (such as writing a new SMS) can be selected directly from standby mode by entering a number:

Press to display the main menu. Then press

for **Messages**, then

for **Create new**, then

for **SMS text**.

Symbols

The following symbols are used to explain operation:

Enter numbers/letters.

On/Off/End key

Call key

Soft keys

Menu

Displays a soft-key function.

The joystick can be moved in 5 directions.

Press the joystick vertically, e.g., to call up the menu.

Press the joystick in the direction indicated.

Function dependent on service provider; special registration may be required.

Standard functions

Option menus

List of functions repeatedly appearing in options menus.

Options Open menu.

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry / delete all entries after confirmation.
New entry	Create new entry.
Send...	Select transmission service and medium for sending.
Reply/ Reply to all	The sender becomes the recipient. The received text is transferred into the new message.
Save	Store entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (according to alphabetical order, type, time).

Text input (p. 17) **T9 preferred:** Activate/deactivate T9 input.

Input language: Select language for text.

Rename Rename selected entry.

Capacity Display memory capacity.

Attributes Display properties of the highlighted object.

Help Display help text.

Highlighting mode

Highlight one or more entries in order to perform a function on it/them.

Options Open menu.

Mark Activate mode.

Mark Highlight a **non-highlighted** entry.

Unmark Remove the **highlighting** from a highlighted entry.

Additional highlighting functions:

Mark all Highlight all entries.

Unmark all Delete highlighting on all highlighted entries.

Delete marked All selected entries are deleted.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

- → Security
- Codes
- Select function.

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone together with your SIM card. Some service providers do not permit deactivating the control.

Select

Press.

Enter PIN.

Confirm input.

Change

Press.

Confirm.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.

Enter **current** PIN.

Press.

, Enter **new** PIN.

, Repeat **new** PIN.

- → Security
- Codes
- Select function

Change PIN2

(Display only if PIN2 is available).
Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, p. 46). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (p. 55).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated (p. 15) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.

Press and **hold**.

Press.

The phone switches on.

Cancel

Press this key or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears.

Example:

Press once **briefly** to write the letter **a**, twice to write **b** etc. **Press and hold** to write the number.

Press briefly to delete the letter before the cursor; **press and hold** to erase the whole word.

Move the cursor (forwards/back).

Press briefly: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **T9ABC**, **123**.

Press and hold: All input-variants are displayed.

Press briefly: Special characters are shown.

Press and hold: Open input menu.

Press once/repeatedly:

., ? ! ' " 0 + - () @ / : _

Press and hold: Writes 0.

Writes blank. **Press twice** = line break.

Special characters

Press briefly.

1)	¿	¡	_	;	!	?	,	.
+	-	"	'	:	(	)	/	*
¤	¥	\$	£	€	&	#	\	@
[	]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	≡	Π
Σ	Φ	Ψ	Ω					

1) Line break

, Navigate to characters.

Select Press.

Text entry menu

Press and **hold**:

Text format (SMS only),
Input language, **Mark**,
Copy/Insert

Text input with T9

"T9" deduces the correct word from the various key inputs.

Activate/deactivate T9.

Select input language

Options Open text menu.

Select **Text input**, then
select **Input language**.

Select Confirm.

Write with T9

It is best if you finish a word without looking at the display.

You simply press the keys where the relevant letter is located **once**.

/ A blank space or moving to the right ends the word.

Do not input special characters such as Ä. Use standard characters only e. g. A. T9 will do the rest.

T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.

Press. If this word is also incorrect, press

Keep pressing until the correct word is displayed.

Add a new word to the dictionary:

Spell Select and enter word without T9. Then **Save**.

Correct a word

Words written **with** T9:

Move left or right, word by word, until the required word is **highlighted**.

Scroll through the T9 word suggestions again.

Deletes the last character in a word **and** displays a new possible word.

Additional information

Press briefly: Switch between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**.

Press and **hold**: All input modes are displayed.

Press and **hold**: Opens input menu (p. 17).

T9® Text Input is licensed under one or more of the following:
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945 928 and 6,011,554;
Canadian Pat. No. 1,331,057;
United Kingdom Pat. No. 2238414B;
Hong Kong Standard Pat. No. HK0940329;
Republic of Singapore Pat. No. 51383;
Euro.Pat. No. 0 842 463 (96927260.8)
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
and additional patents are pending worldwide.

Text modules

→ → Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS).

Calling

Enter the number (always with dialling code / international dialling code).

A **short** press clears the last digit, a **long** press clears the entire phone number.

Dial phone number.

End call

Press the End key **briefly**.

Set volume

Press upwards / downwards to regulate the volume.

Redial previous numbers

Press **twice**. The phone number **last** called is redialled.

Call up the redial list:

Press **once**.

Pick out a phone number, then to dial press the ...

... key.

Auto. redial

Auto dial The phone number is dialled up to 10 times at increasing time intervals.

Call back



Call back Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder

Prompt A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call

Press.

Reject call

Press **briefly**.

Additional information

Accept the call before bringing the phone to your ear in order to avoid ear damage caused by the ringtones.

Store phone number in the Addressbook/Phonebook.

Handsfr. Playback using loudspeaker (handsfree talking).

Always switch off "handsfree talking" before holding the phone to your ear. This will avoid damage to your hearing.

Press and hold to switch microphone off.

International dialling codes

Press and **hold** until a "+"-is displayed.

Country Select country.

Call options

Options Functions which are only available **during** the call are offered.

Swap between two calls



Establish a second connection

Options Open menu

Hold Hold current call, then dial the new phone number.

Options Open menu.

Swap Swap between calls.

Incoming calls during a call

You will hear the "call waiting" tone and you can now:

- **Accept the waiting call in addition to the first.**

Swap Accept the call and put the current call on hold.

- **Reject the waiting call**

Reject Reject the call, or divert it to the mailbox via **Divert**.

- **Accept the waiting call and end the current call**

End call

Accept new call.

End call(s)

Press the End key.

Yes

Resume held call.

No

End all calls.

Conference



You call up to 5 conference participants one after the other. Once you have established a connection:

Options Open menu and select **Hold**. The current call is put on hold.

Now dial a new number. When the new connection is established ...

Options ... open menu and select **Conference**. Repeat until all participants are connected.

End

All calls in the multiparty conversation are ended when the End key is pressed.

Tone sequences (DTMF)

Enter tone sequences (digits) for remote inquiries to an answering machine.

Options Open menu and select **Send DTMF**.

Default book



→ Select function.

Show entries

The entries in the default book (Addressbook or Phonebook) are shown.

/ Select a name with the first letter and/or scroll.

New entry

Create new entry.

Addressbook (see also p. 22)

Phonebook (see also p. 24)

Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.

Open Phonebook or
Addressbook

Addressbook

A lot of data can be recorded in the Addressbook for each entry, and additional functions (e.g., pictures, birthdays) can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.

Move from field to field to enter your details.

Save

Press.

Additional information

The contents of the business card and the Addressbook entries correspond to international standards (vCard).

Copy numbers from
Addressbook/Phonebook.

Groups

See p. 23.

<Info numbers>

See p. 25.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of phone numbers and additional address details. These entries are managed separately from those in the Phonebook in the phone memory.

New entry

The Addressbook is set as standard:

Open Addressbook
(in standby mode).

Display input fields.

Select required input fields.

Fill in input fields.

At least one name must be entered. Always enter phone number with prefix.

Special input fields:

Group: Allocation to a group (p. 23).

Address: Extension to enter the complete address:
Street:, **Post code:**, **City:**,
Country:

Inst. message

Information if the entry is being used as a chat contact:

Nickname:, **WV user ID:**,
ICQ number:,
AIM screen name:

Birthday: After activation, you can enter the date of birth.

Reminder: The telephone reminds you one day before the birthday at the time entered.

Picture: Assign a picture to the entry. It is displayed if you are called by a corresponding phone number.

All fields/Reduced fields

Displays the required input fields.

Save

Save the entry.

Additional information

Temporary switch to
Phonebook.

Display/find entry

Open Addressbook
(in standby mode).

/ Select required entry.

Display.

Display options

Options Displays functions for the
selected input field.

Change entry

Open Addressbook
(in standby mode).

/ Select entry and press
Edit.

Select input field and, if
applicable, press **Edit**.

Make changes, then
Save.

Call entry

Open Addressbook
(in standby mode).

/ Select a name with the
first letter and/or scroll.

The number is dialled.

If there are several numbers in the
Addressbook entry, these are
offered for selection.

Addressbook options

Different functions are available,
depending on the context:

Options Open menu.

Move to ... Copy current entry or high-
lighted entries to a group.

**Copy to
SIM** Copies name and number to
the SIM card (Phonebook).

Import Set up readiness to receive
for an Addressbook entry via
IrDA (p. 45) or SMS (p. 30).

(For standard functions, see p. 14)

Groups

Nine groups are specified in your
phone to enable you to arrange your
Addressbook entries clearly. You can
rename seven groups.

Open Addressbook
(in standby mode).

<Groups> Select (the number of
entries is listed behind the
group name).

Select group.

Ringtone for group

See p. 42.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from the Addressbook.

New entry

If the Phonebook has been selected as standard:

Open Phonebook
(in standby mode).

Select <New entry>.

Display input fields.

Navigate between and fill
in the input fields.

Phone number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default **No group**

Important phone numbers are combined together in a group (VIP).

Location:

Default **SIM**

Special SIM cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

Record number:

Is automatically assigned to every entry. The phone number can be dialled with your entry number.

Save

Press to store the new entry.

Additional information

Temporary switch to
Addressbook.

Country

International dialling code.....p. 19

Call (search for an entry)

Open Phonebook.

/

Select a name with the
first letter and/or scroll.

Phone number is dialled.

Change entry

Select entry in Phonebook.

Edit

Press.

/

Select desired input field.

Make changes.

Save

Press.

Phonebook options

The following functions are available, depending on the current situation.

Options

Open menu.

Copy into 

Copy all highlighted entries to the Addressbook.

Copy all to 

Copy all entries to the Addressbook.

Delete all

Delete entire Phonebook. PIN-protected.

Import

Set up readiness to receive for a Phonebook entry via IrDA (p. 45) or SMS (p. 30).

(For standard functions see p. 14)

<Special books>

Open Phonebook and select <Special books>.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider.

Call records

Phone numbers are saved to make it easier to redial them.



Select record.

Open record.

Select phone number.

Dial phone number.

10 phone numbers can be stored in each call record:

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.

Missed call.

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.

Fast access in standby mode.

Delete records

The records are deleted.

Time/charge

You can display the charges and duration during a call.



→ Time/charge

Last call:, Incoming calls:,
Outgoing calls:, All calls:,
Remaining units:

Reset

Reset the selected setting.

Charge sett.

Open menu.

Personal rate

Enter the currency as well as the charge per unit and time.

Account limit

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.

Auto display

Call duration and charges are displayed automatically.

Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo via MMS.

Switch on



Or

Start camera in standby mode.

The current (preview) image is displayed. You will see the following in the first line from left to right:

Brightness

Zoom factor

White balance

Flash connected.

The number of photos that can still be taken in the selected resolution is displayed in the top right-hand corner of the preview image.

This number varies considerably from motif to motif (storage space required). Information about the selected resolution is located under the preview image.

Record

Takes a photo.

Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu (p. 28).

Settings prior to taking a photo:

Sets the brightness.

Sets the zoom factor.

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution, e.g.

Premium

Medium

Wallpaper

The resolution may decrease depending on the selected digital zoom.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is charged constantly while it is connected to the phone and the camera is activated. This reduces the standby time.

This symbol appears when the flash is being loaded.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options

Open menu.

Settings

- Name for recordings

Message lists

Inbox

The central inbox folder contains all messages which have been received. The entries are marked with a symbol to indicate their type and status (p. 6).

To call up the central inbox folder, e.g. if a new SMS has been received:

Press the soft key beneath the symbol.

When you open an entry, the relevant application also starts. After a set time (**Options**), entries which have already been read and opened are only displayed in the message-related incoming lists.

You will find the following **message types** in the inbox folder::
SMS, MMS

System messages:

Message about
MMS, Missed alarm, Missed appts.,
Calls missed, WAP push, Voice message

Data items:

Ringtones, Pictures, calendar entries,
Notes and Business card.

Message lists

All **SMS** and **MMS** are each displayed in four lists.

- → **Inbox**
- Select message type.

List of received messages.

- → **Draft**
- Select message type.

List of saved drafts.

- → **Unsent**
- Select message type.

List of messages not yet successfully sent.

- → **Sent**
- Select message type.

List of sent messages.

Options Call up the function menu to process the messages.

Inst. message



This function is not offered by all service providers. Please contact your service provider for more information. You will find a description in the comprehensive user guide on the Internet at:

www.siemens-mobile.com/c65

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges). You can also insert simple pictures and sounds in an SMS.

Write/send

- → Create new
- SMS text

Enter text (see also p. 17).

Options Text creation functions.

Start sending procedure.

- / Select phone number from the Phonebook/ Addressbook or enter it.

The SMS is transmitted to the service centre to be sent.

Special functions

Picture&sound

Send simple pictures and tones with or without accompanying text. Remember that these may be protected (DRM, p. 12).

With the text input field open:

Options

Open menu.

Select **Picture&sound**.

The menu contains:

Fix animations, Fix sounds, Own animat., Own pictures, Own sounds

Select list.

Confirm. The first entry of the selected section is displayed.

Scroll to entry required.

For **Fix animations/Fix sounds**:

The selection is added to the SMS.

For **Own animat., Own pictures, Own sounds**:

The selection is displayed/played back.

The selection is added to the SMS.

SMS archive

- → SMS archive

The list of SMS messages stored in the phone is displayed.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options

Open menu.

Send

Select.

Group

The list of groups is displayed.

Select group.

Open group and highlight all/individual entries.

Transmission is started after a security prompt.

Read

Arrival of a new SMS announced in the display.

Inbox is opened. It offers you a quick overview of the messages that have been received.

To read the SMS, press the joystick.

Scroll through message line by line.

If this symbol flashes, the SIM memory is full. Delete or archive messages.

Reply

You can answer the currently open SMS immediately. The newly added text is placed above the received text.

Functions for a direct reply.

Setting

SMS signature

→ → Message setup
→ SMS → SMS signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except for a **Reply** and when changes are made to an existing SMS.

SMS profiles

→ → Message setup
→ SMS → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these.

Activate profile

Select profile.

Activate.

Set profile

Select profile and open with **Edit** to process it.

MMS

The **Multimedia Messaging Service** enables you to send texts, pictures and sounds in a combined message to another mobile phone.

Depending on your telephone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

Create

An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, p. 12).

Create standard MMS

- → Create new
- MMS

First select an object for processing to be added to the first page of the MMS:

- <Picture> Select.
Display picture functions:
Insert picture, Camera

- <Sound> Select.
Display sound functions:
Insert sound, Record
- <Text> Select.
Display text functions
(see also p. 17).

Options

- Options** Open menu.

Send MMS	Send MMS.
Play	Playback entire MMS on the display.
Picture...	See above.
Sound...	See above.
Text...	See above.
Page	Add page: Insert new page behind current one. Delete page: Delete current page. Page list: Display available pages. Timing: Set the time sequence for the MMS presentation: • Page duration: Automatic or Manual • Show page: Only if Manual is set in front of it. Enter the lifespan of a page.
Msg. details	Enter sending parameters (see next chapter).

Save as templ. Save created MMS as a template. See also below:

Layout Select one of four possible layouts:
Text above, beneath, beside (on left or right of) picture.

Colours Select the colours for:

- Message
- Page
- Bitmap
- Text backg.
- Text colour

(For standard functions see p. 14)

Templates

→ → MMS templates

MMS templates are saved MMSs with no address. They can be sent as new MMSs or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

Options Open menu and select **Save as templ.**

Send

The page(s) of the new MMS has (have) already been created.
The MMS is displayed.

Open address entry.

MMS

Subject:
Greetings from Munich

Send to:
+1234567654321 |

Size:
85 KB

Options

Subject: Enter a brief description of the MMS.

Send to: Enter one or more phone number(s).

Size: Display the MMS size.
Start sending procedure.
The MMS is sent after confirmation.

More: Provide additional address fields.

Sending options

Options Open menu.

Send MMS	Send MMS.
Play	Play entire MMS on the display.
Edit	Display object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Add attachm.	Add attachment: • File • Business card • Appointment
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	Save created MMS as a template.

(For standard functions see p. 14)

Receive

/ Arrival of new MMS/notification announced on display.

Start reception. Depending on the setting, (p. 35) the MMS/notification is transferred into the central incoming message list (**Inbox**).

In order to receive the complete MMS **subsequently**, the notification must be opened.

Receive Start transmission.

Read

An MMS has been received in full.

Start playback.

Key functions for playback:

To the next page.

Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.

Set volume.

/ End.

The message details are displayed when the MMS is complete.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

More: Additional input fields.

Setting

- → Message setup → MMS
→ Select function.

MMS profile:

Six MMS profiles can be set. The sending properties are specified in these profiles. In most cases, the setting has already been made. If necessary, please check with your service provider.

Select profile.

Open to edit the profile.

Setting options

Options Open menu.

Activate, Rename, Change sett.

User settings

Set the MMS dispatch to suit your requirements:

Delivery report:	Request delivery confirmation for sent messages.
Read reply:	Request confirmation that the MMS has been read.
Default priority:	Send priority: Normal, High, Low

Validity:	Select the period in which the service centre is to try to deliver the message: Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum* * Maximum period that the service provider permits.
Earliest deliv. time:	Transmission from the service centre to the recipient: Immediate, Tomorrow
Default duration:	Length of display for an MMS page (standard requirement).
Retrieval:	Receive complete MMS or only notification of arrival. Immediate Receive complete MMS immediately. Auto.homenet Receive complete MMS immediately in home network. Manual Only the notification is received.
Spam filter:	Settings for receipt of promotional MMS.
Size indication:	Set a max. message size and how it is to be dealt with.

Voice message/CB

Voice message

- → Setup
- Voice message

If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and set it manually.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to your voice messages.

- → Setup
- Voice message

Enter phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.

- → Phone setup
- Divert
- e.g. Unanswered → Set

Enter phone number and register it at the network with **OK**.

Listen to message



A new voice message can be announced as follows, depending on the service provider:

Symbol plus beep.

Or

Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.

Press and **hold** (if necessary enter mailbox number once). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services

- → Setup
- CB services

Some service providers offer information services (info channels, Cell Broadcast). If reception is activated, you will receive messages on the activated topics in your Topic list.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet

→ → Internet

The browser is activated with the pre-set option as soon as you call up the function (**Browser settings**, S. 38; may be specified/pre-assigned by service provider).

Browser menu

Options Open menu.

Homepage	Call up the pre-set homepage or the current profile (p. 38).
Bookmarks	Display bookmarks stored in the phone; save bookmark.
Go to...	Enter a URL.
Reload	Reload current page.

Show URL	Display the URL of the page currently loaded for sending via SMS/e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page, display saved pages.
Setup	Browser settings (p. 38).
Exit browser	Close the browser.

End connection

Press and **hold** to clear down the connection and close the browser.

Navigation in the browser

- Select a link.
- Settings, status on/off.
- Press **briefly**: back a page.
- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser

Connect	No network
Network	GPRS online

Enter special characters

, Select important special characters.

Browser settings

→ → Internet

Options Open menu.

Setup Select.

Browser	Set start option as well as handling of pictures and tones and send options.
Profiles	The list of profiles is displayed for activation/setting (see below).
Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of Cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and Cookies.

Your Internet browser is licensed by:



OPENWAVE™



Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).

Select profile.

Activate profile.

Set profile manually

If necessary, contact your service provider. You can change settings and delete profiles here.

Bookmarks

→ → Bookmarks

URLs stored in the phone are displayed. New bookmarks can be saved. It is possible to process or manage bookmarks in files.

Games and Applications

Games and applications are offered on the Internet. Once downloaded these are available to you on your phone. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these listed here:

www.siemens-mobile.com/c65

Requirements

Browser profile (p. 38) and the access (p. 45) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:

→ → Games/Applications

In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

Download new

Select a service provider or URL.

Start browser and visit URL.

Additional information

You can use Browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired.

In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via Internet are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again, or to do so free of charge. If technically possible, secure your applications on the PC with the "mobile phone manager".

Downl. assis.

→ → Downl. assis.

You will not be left on your own during the download!

Setup

Profiles

→ → Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however: **Normal environment**, **Quiet environment**, **Noisy environment**, **Car Kit**, **Headset**
- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

Profile settings

Edit a default profile or create a new personal profile:

Select profile.

Options Open menu and select **Change sett.**

The list of available functions is displayed. When you have finished setting a function, you return to the profile menu where you can change a further setting.

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is inserted into the cradle (see accessories also).

Headset

The profile is only switched on automatically if an original Siemens headset is used (see accessories also).

Aircraft mode

The acoustic signals and vibration for the alarms (appointments, alarm clock) are switched off. The alarms continue to be shown in the display only.

Switch on

Scroll to **Aircraft mode**.

Confirm selection.

Confirm safety prompt again to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Themes

→ → Themes

Load a completely new visual presentation onto your phone. At the press of a key, various functions are re-organised on a theme basis, e.g. switch on/off animation, background image, screensaver, switch on/off melody, additional animations.

Theme files are compressed to save memory space. After being downloaded (p. 39) or called up from **My stuff**, these are automatically unzipped when activated.

Activate new theme

Select theme.

Display theme preview.

Activate new theme.

Display

→ → Display

→ Select function.

Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your home service provider with the following input (in standby mode):

***#0000#**

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set wallpaper graphic for the display.

Logo

Choose graphic to be displayed instead of the provider logo.

Colour skin

Select colour scheme, incl. background image for the entire user interface

Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. An incoming call and/or pressing any key will end the function except if the safety function is activated.

Note

The "picture" (animated) and "digital clock" screensavers significantly reduce the phone's standby time.

Start up anim.

Shown when the phone is switched on.

Shutdn anim.

Shown when the phone is switched off.

Own greeting

Is displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display illumination to brighter/darker.

Contrast

Set display contrast.

Ringtones

- → Ringtones
- Select function.

Set the signal tones on the phone to suit your requirements.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The vibration alarm can be switched on in addition to the ringtone. This function is deactivated when the battery is being loaded and accessories are connected (except the headset).

Volume

Set different volumes for types of call/functions.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Assign ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Call setup

- → Call setup
- Select function.

Hide ID



If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other phone numbers.

Set up call divert (example):

Unanswered



Select **Unanswered**.
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below.

Confirm and select **Set**, then enter the phone number to which the call will be diverted.

Confirm. The setting is confirmed by the network.

All calls



All calls are diverted.

Icon in the top line of the display in standby mode.

Other possibilities for divert:

Not reachable, **No reply**, **Busy**, **Receiving fax**, **Receiving data**

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or assigned to a group are signalled. Other calls are only displayed.

Any key answ.

Incoming calls can be accepted by pressing any key
(except for).

Minute beep

During a call you have initiated you, and only you, will hear a beep every minute so you can check the call's duration.

Phone setup

- → Phone setup
- Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Automatic switch off

The phone switches off each day at the set time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Alternatively enter in standby mode:
*** # 0 6 #**

Info Display further information about the appliance.

Device check

A self-test and an individual test are offered after the last information page. If you select **Selftest**, individual tests are carried out.

Software version

Display in standby mode:
*** # 0 6 #**, then press **Info**.

Memory assis.

The delete assistant will help you if there is insufficient phone memory.

File system

Format

(Phone-code protected)

The phone memory is formatted and **all** saved data such as ringtones, pictures, games etc. are deleted. Formatting may take longer than 1 minute.

Clean up

Create more memory by deleting temporary files no longer required.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:
*** # 9 9 9 9 #**

Clock

- → Clock
- Select function.

Time/date

Change First enter the date, then the time.

Time zones

World map: Displays world time zones.

Select a time zone.

City list: List of world cities.

Select a city in the selected time zone.

Date format

Select the display format for the date.

Time format

Select **24h** or **12h**.

Buddhist year

Switch over to the Buddhist year.

Show clock

Activate/deactivate time display.

Auto time zone



The time is set automatically via the GSM network.

Connectivity

- → Connectivity
- Select function.

GPRS



(General Packet Radio Service)

GPRS is a method for transmitting data faster in the mobile network. For symbols in the display see p. 6.

GPRS info

Display connection information.

IrDA

Your phone has an infrared interface. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other. For symbols in the display see p. 6.

Data services

Default setting and activation of the connection profiles for **MMS**, **WAP** applications. The phone default setting varies from service provider to service provider. Consult your service provider or go to this address in the Internet for more information **www.siemens-mobile.com/customercare** in the FAQ section.

HTTP profile

Only



Restrict calls to SIM-protected numbers in the Phonebook.

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Codes

For description see p. 15:
PIN control, Change PIN, Change PIN2, Chg.phonecode

Barrings



Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgo internat (outgoing international)

Only national calls can be made.

Out.int.x.home (outgoing international without home country)

No international calls, only calls to the home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring.

Clear all

Clear all barrings.

Network

- → Network
- Select function.

Line



Two independent phone numbers must be registered.

Network info

The list of GSM networks currently available is displayed.

Choose network

Network search is restarted.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Pref. network

Set the service providers you prefer when you leave your home network.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900.

Fast search

Network reconnection is speeded up.

User group



Depending on the service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.

Accessories

- → Accessories
- Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit (see accessories). The car kit profile is activated automatically when the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. Set the time that must elapse after the ignition has been switched off before the phone is automatically switched off.

Car loudspk.

Improves playback in certain circumstances.

Headset

Only in conjunction with an original Siemens headset (see accessories). If an original Siemens headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Fast access

Soft keys

Assign one phone number or function to each of the two soft keys.

Change

For example, the **Internet** function is assigned to the soft key. To change this (in standby mode):

Internet Press **briefly**, then **Change**.
Select a new function from the list and confirm with .

Apply

The "Internet" is just used as an example here.

Internet Press and **hold**; the application is started.

Speed dialling keys

Assign a phone number or function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox.

Assign

Press number key (e.g. the 3) **briefly** then press **Set**.

Select a new function from the list and confirm with .

Apply

Select a stored phone number or start a stored application (e.g. **Internet**).

In standby mode:

Press and **hold**.

My menu

Press.

My menu Press.

Set up your own menu. The list of 10 entries is preset, but can be changed.

Change menu

You can replace each entry (1-10) with another entry from the selection list.

Select entry.

Change Open the function list to make a selection.

Select the **new** entry from the list.

Confirm. The entry is saved.

Reset all

Reset all Select. After a security prompt, the default setting is reset.

Organiser



→ Select function.

Calendar

You can enter appointments in the calendar. Time and date must be set correctly.

The calendar offers you three views: monthly view, weekly view, daily view.

The various entries are colour-coded. Appointments are shown as a vertical colour bar on the horizontal hour division.

Navigation:

/ Scroll between
weeks/days/hours.

Calend. setup

Start of day:

Time when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts

Set weekend

Set the days for the weekend.

Show birthdays:

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Types:

Memo: Text input for description.

Voice memo: Enter voice memo.

Call: Enter phone number. This is shown with the alarm.

Meeting: Text input for description.

Holiday: Enter start and end date.

Birthday: Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.

Additional information

Alarm clock, alarm set.

Appointment, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, p. 40). The phone does not go to standby mode. To deactivate it press any key.

Tasks

A task is displayed like an appointment in the agenda for the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are same way as **Appointments** (see "Appointments").

Notes

T9 support (p. 17) makes writing short notes such as shopping lists easier. Save confidential notes with the phone code.

Missed appts.

Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.

Dictating mac

Use the dictating machine to record short voice memos.

New recording

<New entry>

Select.

After a brief beep, say the text.

Alternate between pause/record.

End recording. The recording is automatically saved with a time stamp.

Rename with **Options**.

Playback

Select the desired recording.

Alternate between playback/pause.

/

Press and hold rapid rewind and fast forward.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

Time zones

See p. 45.

Extras

→ → Select function.

SIM services (optional)

SIM services

Your service provider may offer applications such as mobile banking, share prices, etc. via the SIM card.

Symbol for SIM services.

For further information, please contact your service provider.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

Activate/deactivate the alarm.

Set the time for the alarm call (hh:mm).

Navigate to the various days.

Display options: alarm call time and days.

Set days for alarm calls.
Press and **hold** to high-light/unhighlight all the days.

OK

Confirm setting.

You can set the alarm to repeat with Snooze.

Sound recorder

Use the Sound recorder to record noises or sounds for use as ringtones.

New recording

<New entry>

Select. The remaining time available, as well as the recording time, are shown in the display.

Start it from another application as follows:

The recording display appears:

A brief tone sounds when the recording starts.

Alternate between pause/record.

End recording.

The recording is saved with a timestamp in the **Sounds** folder. **Rename** with **Options**.

Insert

Transfer the recording into the application.

Playback

Select the desired recording.

Alternate between playback/pause.

Press and **hold** for rapid rewind and fast forward.

/

Calc.

The calculator can be used in a basic version with an extended range of functions (**Options**).

Enter digit(s).

/ Navigate functions.

Use function.

Unit converter

You can convert various measurement units into other measurement units.

Select the source unit/
currency, then enter the
quantity.

Select the target measurement unit/currency.
The result is displayed.

Special key functions:

Set decimal point.

Change sign.

Currency

When you first call up the function, enter the basic currency.

Enter currency (e. g. euro)
and save the entry with
Save.

Now enter the name and
exchange rate of the currency
to be converted.

Stopwatch

Two intermediate times can be recorded and saved.

Start/stop/reset to zero.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Remote synchronisation

You can use this function remotely to access externally filed data (addresses, calendar, etc.) and synchronise these with the data on your phone.

Synchronise

Sync

Select calculator, start synchronisation.

Next

Scroll through the various displays.

Sync. setting

You can choose between 5 profiles.

My stuff

A file management function is available for you to organise your files. This functions in the same way as on a PC. Folders have already been created for different data types.



The list of the folders and files is displayed.

Navigation

Select file/folder in lists.



The cursor can be moved as required in the preview.

Open folder or start file with related application.

Options

Access to various administration functions.

<New picture>/<New sound>

The application for the folder currently selected is loaded.

<New downl.>

The WAP browser is started and the URLs for downloading displayed.

Media player

When you are viewing a picture or listening to a melody, the application starts a media playback.

Browse to the next media file.

- Switch on display illumination.

Pictures

Zoom. The two soft keys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.

Centre picture.

Switch to full screen mode and back again.

Send

E.g., send via MMS.

Melodies

Play or stop, depending on the situation.

Switch to mute.

Set volume.

End playback.

Picture processing

Options

Open menu and select Edit.

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.siemens-mobile.com/customercare

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

You can also get personal advice about our range of products on our Premium Hotline:

United Kingdom 0906 9597500
(£0.75 per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49

Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04

Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 80 95 50
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam	84 89 30 01 21
Zimbabwe	04 36 94 24

Note

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press ***#06#**), the software version (to display, press ***#06#**, then **info**) and if available, your Siemens Service customer number.

Care and maintenance

Your phone has been designed and crafted with great care and attention and should also be treated with care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic components.
- Do not drop, knock or shake your phone. Rough handling can damage components inside the device!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Battery quality declaration

The capacity of your mobile phone battery is reduced each time you charge/discharge it. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. This can significantly reduce the operating times of your mobile phone, even after it has been fully charged.

The battery is, however, designed to be capable of being charged and discharged for a period of six months from when the mobile phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance. Only purchase original Siemens batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

www.siemens-mobile.com/conformity.

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 - 1,990 MHz
Weight:	86 g
Size:	105 x 47 x 18 mm (75.6 ccm)
Li-Ion battery:	600 mAh
Operating temperature:	-10 °C to 55 °C
SIM card:	3.0 V

Phone ID

You will need the following details if you lose your phone or SIM card:

the number of the SIM card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

the customer service number of the service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 300 minutes

Standby time: 60 to 250 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30 - 90 minutes
Light *	1	40 minutes
Network search	1	5 - 10 minutes

* Keypad input, games, organiser etc.

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
- The device is opened (this is classed as third party intervention)
- Repairs or other work done by persons not authorised by Siemens.
- Components on the printed circuit board are manipulated
- The software is manipulated
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer them-

selves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

SAR – European Union (RTTE)

INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360. The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels

so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.73 W/kg****.

The SAR information can also be found on the Siemens web site at

www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

www.who.int/peh-emf,

www.mmfa.org,

www.siemens-mobile.com

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10 g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at **www.siemens-mobile.com**

SAR – International (ICNIRP)

INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.73 W/kg***.

SAR information can also be found at

www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

-
- * The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

 
Further information:

 
www.who.int/peh-emf,
www.mmfa.org,
www.siemens-mobile.com

 
- ** averaged over 10 g of tissue.

 
- *** SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at
www.siemens-mobile.com

 
Menu tree

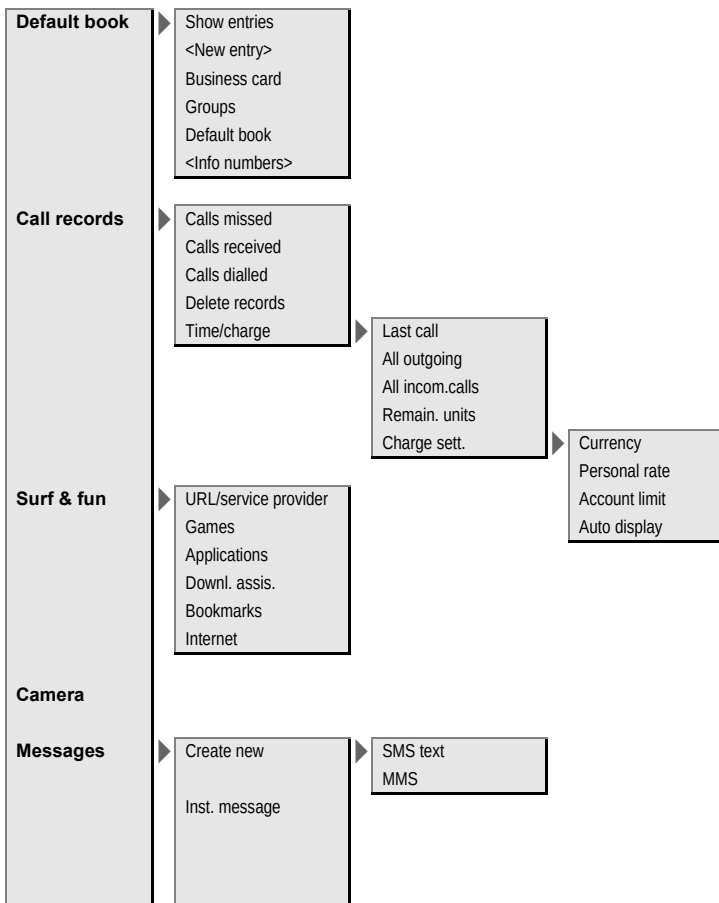 


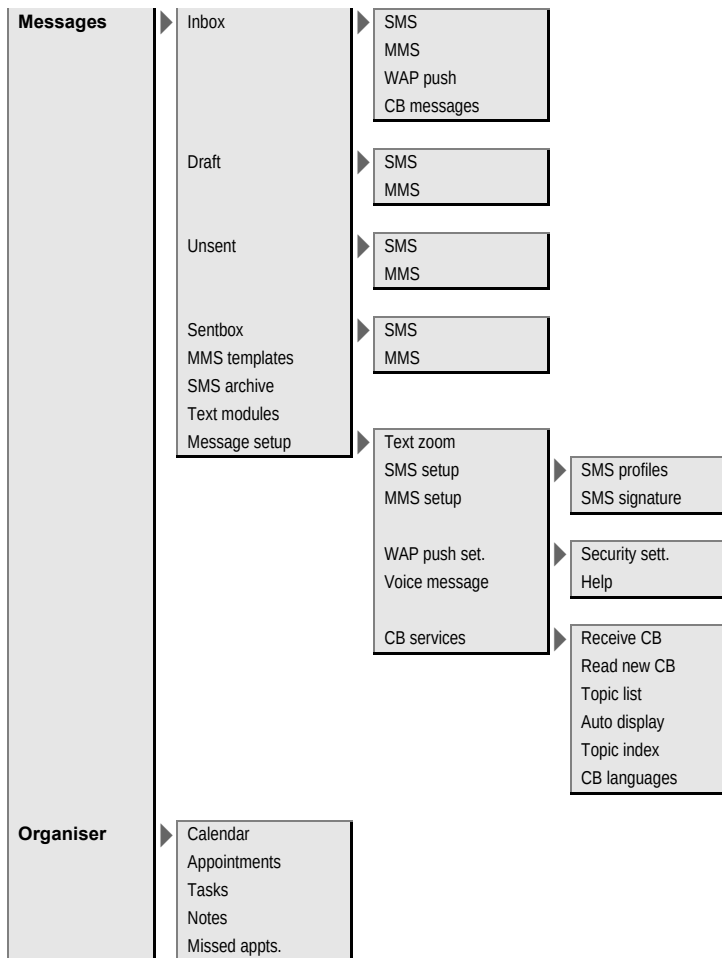

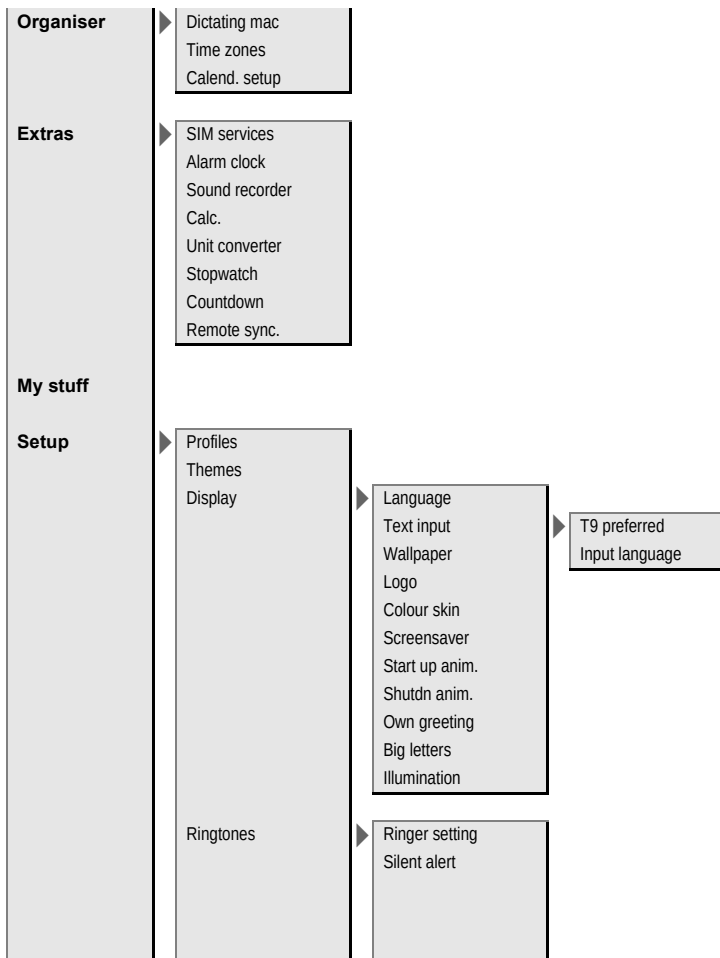

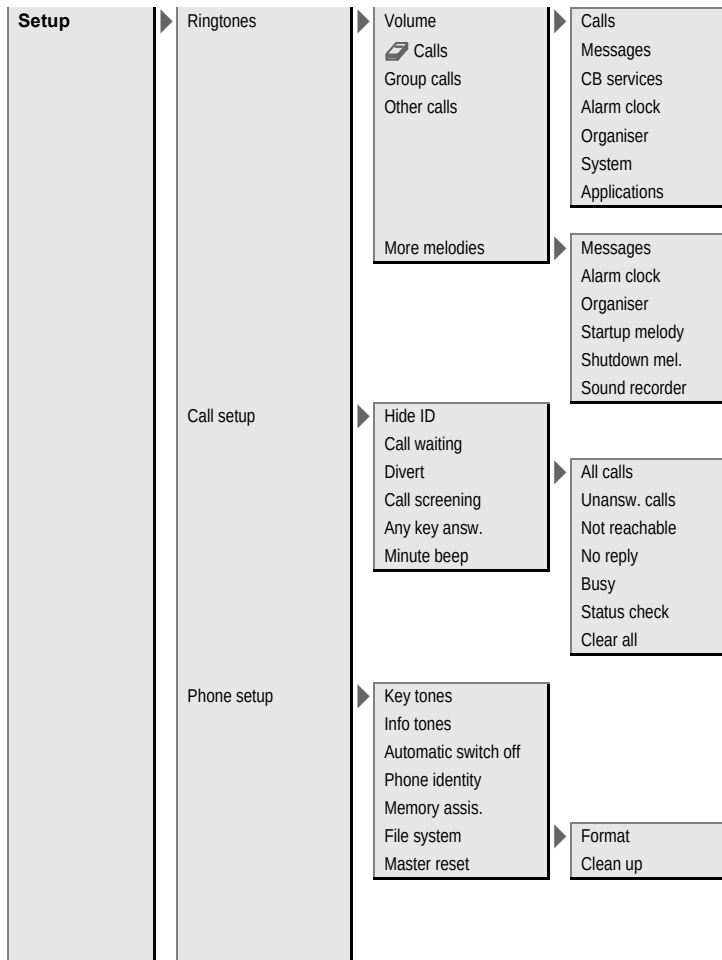

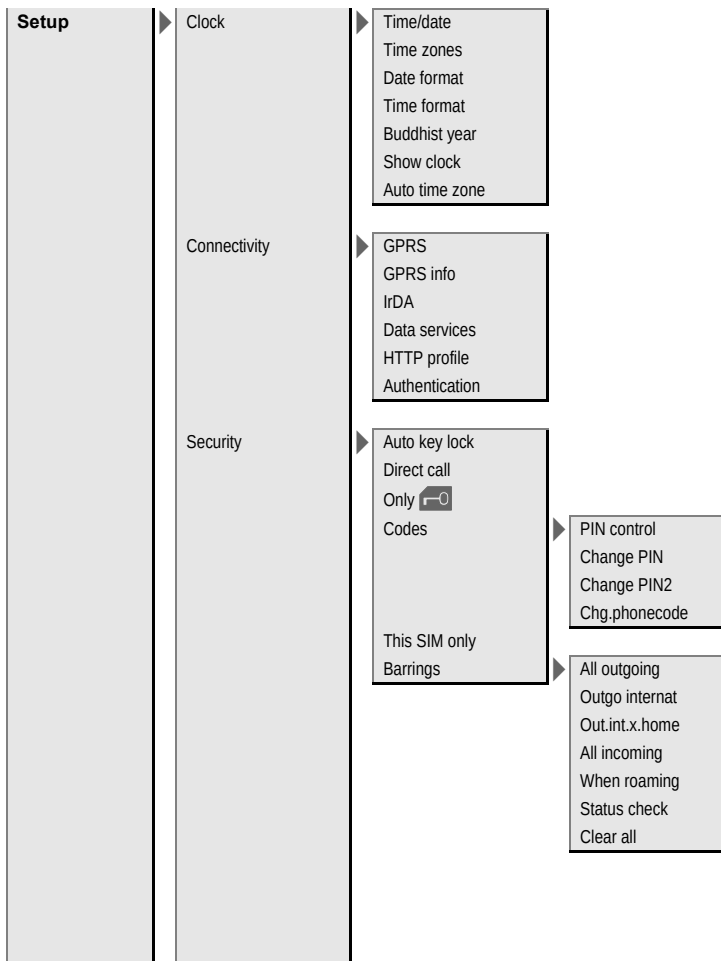

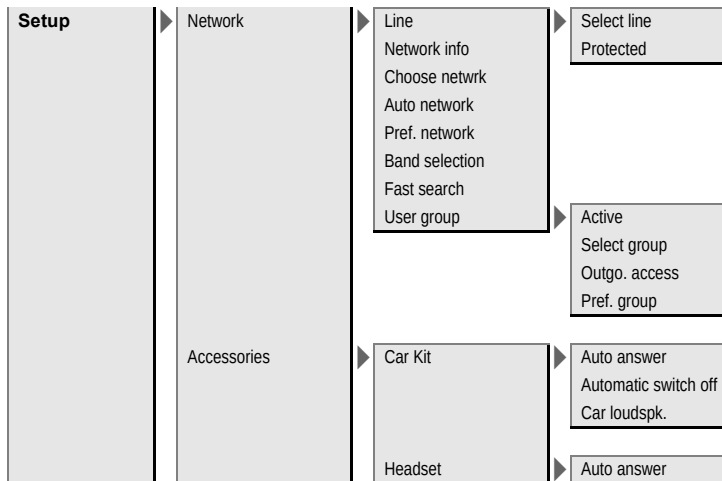

Index

A

Addressbook	
Dial entry	23
Groups	23
New entry	22
Read entry	23
Aircraft mode	40
Alarm (alarm clock)	52
Alarm clock	52
All calls (diversion)	43
All incoming (barrings)	47
Answering service	
(external)	36
Any to answer	43
Appointments	50
Auto display	
Clock	45
Duration/charges	26
Auto key lock	46
Auto. network selection	47
Auto. redial	19

B

Band selection	48
Battery	
Charge	8
Insert	8
Operating times	9, 58
Quality declaration	57
Big letters	42
Bookmarks	38
Browser	37
Buddh. year	45
Business card	21

C

Calculator	53
Calendar	50
Call	
Accept/end	19
Barring	47
Charges	26
Conference	20
Divert	43
End	19
Hold	20
Menu	20
Reject	19
Swap (change)	20
Call back	19
Call divert	43
Call screening	43
Call waiting	43
Calling	19
Calls dialled (call record)	26
Calls received (call record)	26
Camera	27
Car kit (setting)	48
Care of phone	57
Cell Broadcast (CB)	36
Central inbox	29
Change the faceplate	10
Change the keypad mat	10
Charge rate	26
Charges	26
Charging the battery	9
CLIPIt™ covers	8, 10
Clock	45
Colour skin	41
Conference	20
Connectivity	45
Control code (DTMF)	20

Countdown	53
Credit limit	26
Currency	53
Customer care	55

D

Date format	45
Default book	21
Delete assistant	44
Dialling code	19
Dialling with number keys	19
Dictating machine	51

Display

Illumination	42
Language	41
Symbols	6
Wallpaper	41

Divert	43
Download	39
DRM	12

DTMF tones

(tone sequences)	20
Duration/charges	26

E

Emergency number	11
Extras	52

F

Fast access	49
Fast search	48
File system	44
Formatting (phone memory)	44
Frequency range	48

G

Games and applications	39
GPRS	45
Groups	23
Guarantee certificate	59

H

Handsfree talking	19
Headset (setting)	48
Hide ID	43
Highlighting mode	14
Hold call	20
Hotline	55

I

Identity number (IMEI)	44
IMEI number	44
Info tones	44
Information services (CB)	36
Infrared	45
Infrared (IrDA)	45
Input language (T9)	17
Inst. Message	29
International dialling code	19
Internet	37

K

Key tones	44
-----------------	----

L

Language	41
Limit (call time/charge)	26
Logo	41
Loss of phone, SIM card	58

M

Mailbox	36
Maintenance of phone	57
Master reset	44
Media player	54
Menu	
Controls	13
My menu	49
Speed dialling	13
Menu tree	63

Message		Photo.....	27
CB	36	Pictures & sounds (SMS).....	30
Lists.....	29	PIN	
MMS.....	32	Change	15
SMS.....	30, 31	Control.....	15
Minute beep.....	43	Enter.....	11
Missed appointments	51	PIN2	15
Missed calls (call record).....	26	Preferred network.....	47
MMS		Preventing accidental	
Receive.....	34	activation.....	16
Send.....	33	Product data	58
Write	32	Profiles (phone)	40
My stuff.....	54	Provider logo	41
N		PUK, PUK2	15
Network		R	
Barring	47	Records.....	26
Connection.....	47	Redial	19
Setup.....	47	Reminder	19
Notes	51	Remote synchronisation.....	53
O		Ringtones	42
Only 	47	S	
Operating times		Safety precautions	2
(battery).....	9, 58	Screensaver	42
Organiser	50	Security	15
Own (phone) numbers	25	Security codes.....	15
P		Service tones	44
Phone code	15	Set time/date	45
Phone data.....	58	Settings	40
Phone identity number		Short message (SMS)	30
(IMEI)	44	Shown in the display.....	6
Phone number		Shut down animation.....	42
transmission.....	43	Signal strength	12
Phonebook		Silent alert	42
Call an entry	24	SIM card	
New entry.....	24	Clear barring	16
Protected SIM	25	Insert	8
Special books.....	25	SIM services (optional)	52
VIP numbers	25		

SMS	
Archive	30
Read	31
Settings	31
To group	31
Write	30
SMS push	29
SOS	11
Sound recorder	52
Special books	25
Special characters	17
Speech time (battery)	58
Speed dialling keys	49
Standard functions	14
Standby mode	13
Standby time	9
Start up animation	42
Stopwatch	53
Storage location	
(Phonebook)	24
Surf & fun	37
Swap	20
Switch off phone	
Automatic	44
Manually	11
Switch on phone	11
Symbols	6
Synchronisation	53
T	
T9	
Text entry	17
Word suggestions	18
Tasks	51
Technical data	58
Text entry	17
Text modules	18
Themes	41
This SIM only	47
Time zones	11, 45
U	
Unanswered	43
Unit converter	53
Upper and	
lowercase letters (T9)	17
User group	48
V	
Voice message	36
Volume	
Handset volume	19
Profiles	40
Ringtone	42
W	
Wallpaper (display)	41