



VIDEOCON

Videcon 1425

User's Guide

Table of contents

Legal Notices	iv
----------------------------	-----------

Introduction	1
---------------------------	----------

Safety Precaution / Measures	1
------------------------------------	---

Road safety	1
-------------------	---

Switch off in potentially	
---------------------------	--

hazardous environments	1
------------------------------	---

Emergency Calls	1
-----------------------	---

Battery Use	2
-------------------	---

Getting Started	3
------------------------------	----------

Installing and Removing the Battery	3
---	---

Inserting SIM Cards	4
---------------------------	---

Inserting the Memory Card	5
---------------------------------	---

Charging the Device	6
---------------------------	---

My V1425	7
-----------------------	----------

Phone Layout	7
--------------------	---

Screen Icons	10
--------------------	----

Basic Operations	11
-------------------------------	-----------

Make a Call	11
-------------------	----

Making a Call using Call History	11
--	----

v-connect	12
------------------------	-----------

SIM applicator / STK	12
----------------------------	----

Internet service	12
------------------------	----

Data account	12
--------------------	----

Call history	13
---------------------------	-----------

Multimedia	15
-------------------------	-----------

Camera	15
--------------	----

Image viewer	16
--------------------	----

Video recorder	16
----------------------	----

Video player	16
--------------------	----

Audio player	16
--------------------	----

Table of contents

Sound recorder	17	File Manager22
FM radio	17	Settings23
Schedule FM record	17	Dual SIM settings	23
Extras18	User profiles	23
Games	18	Phone settings	23
Mobile Tracker	18	Display setup	24
Private Protection	18	Call settings	25
SOS Settings	18	Network settings	26
Scheduled SMS	19	Security settings	26
SMS Filter	19	Connectivity	27
SMS Backup	19	Restore factory settings	27
Contact Backup	19	Shortcuts	27
Messaging20	Phonebook28
SMS	20	Organizer30
MMS	21		
Broadcast message	21		

Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as it is". Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a

particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Introduction

Safety Precaution / Measures

Please comply with these precautions / measures to avoid dangerous or illegal situation and ensure peak performance of your phone.

Road safety

The use of a mobile phone while driving is illegal and should be avoided at all costs. If you need to make or receive an urgent call, move your vehicle to the side of the road and allow it to come to a complete stop before using your phone.

Switch off in potentially hazardous environments

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.

Switch your phone off when entering any explosive area. Observe any provided guidelines or regulations.

Emergency Calls

In case of an accident or an emergency, dial 100 (Police), 101 (Fire) or 102 (Ambulance) from your phone. Being emergency numbers, these are toll free and can be reached even from areas where the network signal strength is very poor.

Introduction

Battery Use

First time charging must be done using the regular charger and not using the USB cable.

During the first 3-4 charge sessions, charge the battery until it has been fully charged according to the battery level indicator. This ensures higher battery backup and extends the battery life.

Avoid partial charging. Wait for the battery to discharge completely before charging it again.

Charging through the USB Cable should be reserved during an emergency.



Use the device in vibrating mode only on rare occasions.

Getting Started

Installing and Removing the Battery

To install the battery:

1. Locate the groove at the top of the phone, and pull the back cover to open.
2. Push the battery in the battery compartment in such a way that the connectors of the phone are aligned with the connectors on the battery.

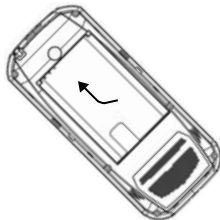
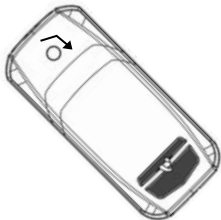


To remove the battery:

1. Turn off the phone and unplug it, if it is connected to an external power source.
2. Locate the groove at the top of the phone, and pull the back cover to open.

Getting Started

3. Pull out the flap on the battery to remove from the battery compartment.

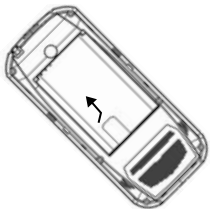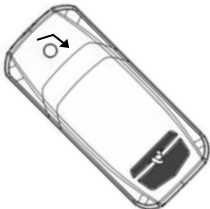


Inserting SIM Cards

The V1425 supports dual-SIM cards. The procedure for inserting both SIM cards is identical, only the slot for each is different. To insert SIM cards:

1. Turn off the phone and unplug it, if it is connected to an external power source.
2. Locate the groove at the top of the phone, and pull the back cover to open.
3. Remove the battery from the battery compartment.

Getting Started

- Slide the SIM card in the slots in such a way that the metal connectors of the SIM card are facing down.

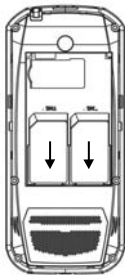


Inserting the Memory Card

Use a microSD card of up to 4GB capacity to store personal files such as photos, audio files, and videos. To insert the memory card:

1. Turn off the phone and unplug it, if it is connected to an external power source.
2. Locate the groove at the top of the phone, and pull the back cover to open.
3. Remove the battery from the battery compartment.

Getting Started

- Slide the memory card in the memory card slot with metal connectors facing down.

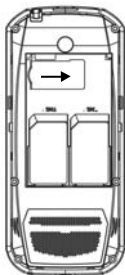

Charging the Device

Insert the plug of your charger to the charging port at the bottom of the phone.

When you begin to charge the battery, the stripe of battery on the top right corner of the screen starts to roll. When battery gets fully charged, the stripe becomes stable and stops rolling.

My V1425

Phone Layout



My V1425

Left Soft Key

Use to perform functions that display in the lower left of the display screen. In idle mode click to access the Menu.

Right Soft Key

Use to perform functions that display in the lower right of the display screen. In idle mode, click to access the phonebook contacts.

Dial Key

Press Dial key to view the Call history. Choose the SIM for which you need to view the recent calls.

End Key

End or reject calls; Press and hold this key to turn phone on/off; cancel function and return to the idle screen.

Previous and Next Keys

- In audio player, click to select the previous or next song in the playlist.
- In FM, click to go to the previous or next channel.

Navigation Keys

- Scroll to select options.
- In the idle screen, use direction keys to open dedicated keys applications.
- While creating a message, use direction keys to select a word from the dictionary.
- In function menu, scroll to select desired function.

My V1425

0-9 Keys

In standby mode, use the 0-9 keys to enter a number you wish to call. In standby mode, press and hold 1 key to enter Voice mailbox, press and hold 2-9 keys to directly call the number set in the speed dial list. In edit status, press to input numbers and characters. In edit mode, except input number, press 0 key to input space. In functional menu, press numbers to speed select submenu items.

* & # Keys

Functions vary in different situations or function menus: On Input Screen, press "*" for symbols. In standby and dial mode, press and hold "*" to input + for an international call. On Input Screen, press "#" to switch between different input methods. In standby mode, press and hold # key to switch between Silent mode and previous mode.










OK Key

- In idle mode, press to open the Audio player.
- In menu, use to perform the functions that display in the lower left of the display screen.

My V1425

Screen Icons

Indicator icons provide information such as battery level, network signal strength, current date & time and so forth.

Icon	Definition
	Network signal strength
	Active call
	Call on hold
	Keypad locked
	Battery Strength indicator
	Phone is in ring mode
	Bluetooth active
	GPRS active
	Alarm active



Depending on your country or service provider, the icons shown on the display may vary.

Basic Operations

Make a Call

In the idle mode:

- Enter the phone number including the area code. Press Clear to erase a digit.
- For international calls, insert the '+' sign followed by the country code, area code (without the initial zero and phone number.
- Press the dial key. Once the call is complete, press the End key.

To receive a call, press the **Option** → **Answer** or receive it directly by pressing the **Dial** key.

Making a Call using Call History

The number and time of each call that you make or receive is stored in the Call history module of the device. You can retrieve a number from call history and initiate a new call. To do so:

1. Press the Dial key, and select the SIM to view a list of recent call history.
2. Use the up and down navigation keys to select the number you wish to call.
3. Press the Dial key, and select the SIM from which you wish to make the call.

v-connect

SIM applicator / STK

STK (SIM Tool Kit) is shown only if it is provided by your SIM card. For further details, please contact your network operator.

Internet service

Internet service enables you to use the phone to surf the Internet. You can select the SIM card and the associated profile from the Settings option.

Data account

This function enables to set the account information. You can edit the account information from the GSM data and select the GPRS data to use from GPRS option.

Call history

Use this menu to view the dialled, received or missed calls. On the Idle screen, press **Menu** → **Call history**. The **Call history** sub-menu comprises of the following options for both the SIM cards:

- **All calls:** displays the list of recently dialled, received and missed calls.
- **Dialled calls:** displays the list of latest dialled calls.
- **Received calls:** displays the list of latest received calls.
- **Missed calls:** displays the list of latest missed calls.

Press the options key to access the following sub-options:

- **View:** view details of the selected number.
- **Call:** make a call to the selected number.
- **Send SMS:** send a text message to the selected number.
- **Send MMS:** send a multimedia message to the selected number.
- **Save to phonebook:** save the selected number to the phonebook. This option is enabled only if the selected number is not saved in the phonebook.
- **Add to Blacklist:** add the selected number to blacklist to block calls from that number.
- **Edit before call:** edit the number before you make a call to the selected number.

Call history

- **Delete:** delete the selected number from the call history.
- **Delete all:** delete all the numbers from call history.
- **Advanced:** view the advanced options of the call history. These are:
 - ♦ **Call timers:** view the duration of the last call, dialled calls, and received calls. You can also reset the timers of all the calls.
 - ♦ **Call cost:** view last call cost and total cost and so forth of the SIM card. You can also reset cost and set the maximum cost and the price per unit for SIM card. It requires network support.
- ♦ **Text msg. counter:** view and reset the numbers of text messages that are sent and received from the SIM card.
- ♦ **GPRS counter:** view and reset the total amount of data sent or received from the SIM card.

Multimedia

Camera

Your phone is equipped with a camera on the back of the device that can be used to take still photographs. Select **Menu** → **Multimedia** → **Camera** to launch the camera application. Once the camera application is enabled, press the **OK** key to capture the image. Press the left soft key to access the following sub-options:

- **Photos:** View the images captured by your phone. You can view, set the image as a wallpaper/screensaver/caller picture, rename or delete the images.
- **Camera Settings:** select the shutter sound, EV, Anti-flicker and the delay timer for the camera. You can select the frequency of the light using Anti-flicker.
- **Image Settings:** set the size and quality of the captured image.
- **White balance:** select the white balance for the camera to increase the intensity of white light.
- **Scene mode:** select the scene mode to activate night mode to capture images in dark.
- **Effect settings:** set the effects that you wish to use for the captured images such as grayscale, sepia, or gray invert.
- **Storage:** select the storage location of the captured images to phone memory or to memory card.
- **Restore default:** restore the default settings of the camera.

Multimedia

Image viewer

Image viewer stores all your pictures which are captured by the phone camera. It provides you the option to view, rename, and delete the images.

Video recorder

You can record videos on your phone. Press the **OK** Key to start the recording. The recorded videos are automatically saved to **Videos** folder in **File Manager**. Press left soft key to access the following sub-options:

- **Camcorder settings:** set the anti-flicker to select the frequency of light.
- **Restore Default:** restore the default settings of the camcorder.

Video player

Use Video Player to watch videos directly from the **Videos** folder in the **File Manager**.

Audio player

Your phone provides you a friendly audio player device for entertainment purpose. You may enter the audio player via main menu. Music tracks must be saved in **My Music** folder in **File Manager** in order to be automatically detected and added into the default play list. You may listen to music through the headset or loudspeaker. The user-friendly interface is specially designed to allow easy access to common functions such as play, pause, and stop.

Multimedia

Sound recorder

Your phone supports two kinds of recording formats: **AMR** and **WAV**. Select a format from settings in options. A call may also be recorded and saved to the phone or the memory card.

Depending upon the requirement, you may set the quality of the recorded sound to high or low.

FM radio

The FM radio application turns the mobile phone into a portable FM Radio device. It primarily provides users the interface to a single-chip electronically turned FM stereo radio for listening to live-broadcast stations. You must connect the hands free to your phone as it works as an antenna.

Schedule FM record

You can program this phone to record certain FM channel at a certain time and date.

Extras

Games

Select **Menu** → **Extras** → **Games**, to access the Games menu. Game interface offers option to select a game. You can select the following games from the interface:

- F1 race
- Copter
- Puzzle
- UFO

You can set the BGM (Background Sound) Sound Effect, vibration and the Volume from games settings option.

Mobile Tracker

This function enables you to track your phone in case it gets lost. The default password for mobile tracker is "0000". If someone inserts another

SIM card in your mobile, you will receive an SMS to the assigned number from the new SIM card to know who is using your mobile.

Private Protection

This option enables you to password protect your data such as messages and phonebook to avoid unauthorized access. If you enable this option, then you need to input the password to open your protected folders. The default password is 0000.

SOS Settings

You can turn on this function from status, and also edit the SMS content or the recipient numbers. When you long press Right Soft Key, SOS will send SMS to the recipient numbers and also Auto answer them.

Extras

Scheduled SMS

You can schedule your messages to be delivered at later time. You can schedule only the messages saved in your drafts or in outbox folder. You can edit the following information:

- **Status:** set the status of the scheduled SMS to on/off.
- **Time Setting:** set the time and date at which you wish to send the message.

SMS Filter

You can filter the text messages that you receive using this option. You edit the following sub-options:

- **Firewall Engine:** set the status of the SMS filter.

- **Recycle:** the messages that you receive from the blacklist numbers are saved in the recycle.
- **General Set:** set the message tone and the reject style whether you wish to reject the text messages from the numbers or you wish to save them in recycle folder.
- **Black List:** edit and add the numbers from which you do not wish to receive the text messages.

SMS Backup

Backup the text messages to the microSD card, or the phone memory.

Contact Backup

Backup and retrieve the phone contacts to the microSD card, or the phone memory.

Messaging

In Messaging, you can send and receive text and multimedia messages. To launch messages, on the idle screen, select **Menu → Messaging** to view the available functions. Message functions are available depending on network services that your service provider supports.

SMS

- **Write message:** create and send a text message.
 - **Inbox:** messages received using SMS are stored in the Inbox folder.
 - **Outbox:** sent messages are stored in the Outbox folder.
 - **Drafts:** saved messages are stored in the Drafts folder.
- **Templates:** your phone contains pre-defined templates for frequently used messages.
 - **SMS Settings:** You can edit the profile settings and the common settings, and check the memory status for both the SIM cards.

Messaging

MMS

- **Write message:** create and send a multimedia message.
- **Inbox:** messages received using MMS are stored in the Inbox folder.
- **Outbox:** sent messages are stored in the Outbox.
- **Drafts:** saved messages are stored in the draft folder.
- **Templates:** your phone contains pre-defined templates for frequently used messages.
- **MMS settings:** you can edit the settings for compose, send, retrieve, filter and the server profile. You can also check the memory status of the phone.

Broadcast message

Your phone is capable to receive and store broadcast messages. You can set the receive status to ON/OFF. These messages are stored in the **Read Message** folder.

File Manager

View the files stored in the phone memory and on the microSD card.

Settings

Dual SIM settings

You can select the SIM card that you wish to use from the dual SIM settings. The available options are:

- **Dual SIM:** This option activates both the SIM cards.
- **Only SIM1:** This option activates only SIM1.
- **Only SIM2:** This option activates only SIM2.
- **Flight mode:** This option disables all RF based communication for both SIM1 and SIM2. However, you can use other features/functions of the phone, such as games and alarm.

User profiles

This menu allows you to set the ring tone, alert type, ring volume, etc when you receive an incoming call or a new message so that you can adapt the use of your phone to different types of call environments. The available profiles are, General, Meeting, Outdoor, Indoor, Headset, and Bluetooth.

Phone settings

This option enables you to set the time, schedule power on/off, language, and so forth for the phone.

- **Time and date:** Lets you set the Time and date on the phone.
- **Schedule power on/off:** Lets you set a particular time on the phone when the phone should Power on/off itself.

Settings

- **Language:** Choose phone language you wish to use.
- **Pref. input methods:** This enables you to select the text input method. The available options are – Abc/abc/ABC, Smart Abc/abc/ABC, Hindi, and Numeric input.
- **Greeting text:** Let you set your own greeting message when you power ON the phone.
- **Dedicated key:** Enables you to set the dedicated keys for up, down, left and right navigation keys.
- **LCD backlight time:** Enables you to set the backlight time for the phone.

Display setup

Change the look and feel of your phone. The options are:

- **Wallpaper:** Set your favorite wallpaper on the phone.
- **Screen saver:** set an image as a screen saver.
- **Show date and time:** Enables you to see the date and time on the idle screen.
- **Show owner number:** Enables you to see the owner number on the idle screen.

Settings

Call settings

This option enables you to set the general call settings of the phone. The options are:

- **SIM1/2 call settings:** Enables you to set the call settings for SIM1 and SIM2. The options are:
 - **Caller ID:** Enables to set the caller ID status of the phone. It is a network based service.
 - **Call waiting:** Enables to Activate / Deactivate call waiting and check the query status.
 - **Call divert:** Enable to Activate / Deactivate call diversion and check the query status.
- **Call barring:** Enables you to restrict the calls that you make and receive with your phone. You can set outgoing calls, incoming calls, cancel all or change barring password. It is a network based service.
- **Advance settings:** manage the advance call settings of the phone. The options are:
 - **Blacklist:** enables you to add the number in the black list and activating it enables you to block calls from that number.
 - **Auto redial:** Enables to set the auto redial to on/off.
 - **Call time display:** Enables you to display the call duration.
 - **Call time reminder:** Set the call duration (in seconds), after which the phone plays a beep sound to indicate the call duration.

Settings

- **Auto quick end:** Set the duration (in seconds), after which the call is disconnected.
- **SMS Reject:** Enables to send a text message if you reject a call.

Network settings

A network setting gives you the option to select a desired network and add a new network to the network list. The network setting gives you the following options:

- Network selection (Automatic/Manual)
- **Preferences:** Will list down the entire network IDs (depending on the SIM card used).

Security settings

This option enables you to set the SIM lock, phone lock, mobile tracker to enhance the security of your phone.

SIM1/2 security setup

This option enables you to set the SIM lock, Fixed dial, Barred dial and change the SIM password.

Phone lock

This option enables you to set a lock for your phone that is required each time you change the SIM card of the phone, or you power on the phone.

Auto keypad lock

This option enables you to set the auto keypad lock time. You can set the time so that the phone keypad automatically locks when in idle screen.

Settings

Security Keyguard

This option enables you to set the password to unlock the keypad. The default password is 0000.

Change Password

This option enables you to change the default password of the phone.

Mobile Tracker

This function enables you to track your phone in case it gets lost. The default password for mobile tracker is "0000". If someone inserts another SIM card in your mobile, you will receive an SMS to the assigned number from the new SIM card to know who is using your mobile.

Private protection

This option enables you to password protect your data such as messages and phonebook to avoid unauthorized access. If you enable this option,

then you need to input the password to open your protected folders. The default password is 0000.

Connectivity

Bluetooth

This function enables you to switch on/off the Bluetooth, search for the new devices, and change the settings of the Bluetooth such as the visibility, device name and so forth.

Restore factory settings

Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is set as 0000.

Shortcuts

You can set the shortcut for various applications so that they can be accessed from a single place.

Phonebook

Phonebook is a location in your phone's internal memory on which you can store names and numbers of contacts. The SIM cards also allow you to store phone numbers, though the service provider decides the capacity. Even though, the SIM card and the phone's internal memory are physically separate, they are used as a single entity known as the Phonebook on the phone. In phonebook, use the left and right navigation keys to access the following options:

- **Phonebook:** displays the list of contacts saved in SIM card/Phone memory.
- **Caller groups:** your V1425 has five caller groups, in which you can group your contacts for identification. You can change the name of the group, assign ringtone and picture to the groups.
- **Add new contact:** add a new contact to the phonebook. You can choose to store the contact in the SIM card or phone memory. In addition, you can also copy and move contacts from SIM to phone and vice versa, or delete and take the backup of the contacts.
- **Phonebook settings:** The available sub-options in phonebook settings are:
 - **Display Contacts:** select the storage you wish to see the contacts from. If you wish to see all the contacts saved in SIM cards as well as phone memory, select All.
 - **Smart search:** switch on/off the smart search option. If you switch on this option, and input numbers in the idle screen, the matching contacts from the phonebook are displayed.

Phonebook

- ◆ **Speed dial:** Speed dialing allows you to make a call by pressing and holding a number key when on the idle screen. You may assign the numbers between 2-9 from your phonebook.
- ◆ **My vCard:** Store your personal contact information as a vCard to allow quick sharing of your details with contacts. Once you have entered your contact information, use the Send my vCard option to send your vCard as SMS, MMS or through file transfer over Bluetooth.
- ◆ **vCard version:** Enables to select the vCard version that you wish to use.
- ◆ **Extra numbers:** You can set the owner number, service dialing number and SOS number for SIM1 and SIM2.
- ◆ **Memory status:** Check out the memory status individually for both the SIM and phone respectively.

Organizer

Use this menu to keep track of your schedule. You can also use convenient features, such as Calendar, tasks, Alarm, World Clock, and so forth. To access this menu, press [Menu] in Idle mode and select Organizer. The available options are:

- **Calendar:** Helps you to keep track of your monthly schedule.
- **Tasks:** You can use your phone to keep track of all your Date, Call and Anniversary.
- **Alarm:** Set the alarm to ring at a specific time.
- **World clock:** Set your local time zone and find out the current time in another part of the world.
- **Calculator:** You can use your phone's calculator to perform basic operations such as addition, subtraction, multiplication and division.
- **Unit converter:** Use this feature to convert the units of weight and length.
- **Currency converter:** Use this feature for the exchange rate conversion.
- **Stopwatch:** The phone comes with 2 types of Stopwatch: Typical stopwatch and nWay stopwatch. Now, burn the track while you keep every move traced and counted.
- **Ebook reader:** With the function, you may read any file in TXT format saved in the memory card.
- **Answer machine:** Your V1425 is enabled with an answer machine that records your calls, if you are not able to pick up the call. The recorded calls are saved in the **Leaving messages** folder.
- **Flashlight:** switch on/off the flashlight on top of the phone.