



VIDEOCON

Videocon V1750

Table of contents

1. General Information	3	4. Using Your Phone	10
1.1 Introduction	3	4.1 Call history	10
1.2 For your safety	3	4.2 Phonebook	10
2. Getting Started	5	4.3 Services	12
2.1 Assembling your Phone	5	4.4 File Manager	12
2.2 Low battery indicator	5	4.5 Messages	12
2.3 Key Reference	6	4.6 Business	15
2.4 SIM card information	7	4.7 Multimedia	16
3. Navigation	8	4.8 Fun & Games	20
3.1 Icons	8	4.9 User Profiles	21
3.2 Widgets	9	4.10 Tools	21
3.3 Shortcuts	9	4.11 Settings	22

1. General Information

1.1 Introduction

The purpose of this document is to provide you with step-by-step information on how to use this device. Covered in this document is information initial tasks such as, unpacking the box, assembling it for the first time, making or receiving calls to advanced features such as creating e-mail accounts, using camera controls, or to schedule recording of FM radio channels.

It is highly recommended that you go through this document to understand the features, using the phone just the way it is intended to.

Note: All features and descriptions are subject to change without prior notice.

1.2 For your safety

Road safety

The use of a mobile phone while driving is illegal and should be avoided at all costs. If you need to make or receive an urgent call, move your vehicle to the side of the road and allow it to come to a complete stop before using your phone.

Switch off in potentially hazardous environments

Wireless phones can interfere with the smooth functioning of the aircrafts, petrol pumps, medical equipment in hospitals, and near blasting sites. It is extremely important that you do not use your mobile phones whilst in any of the above environments.

1. General Information

Additionally, do remember to deactivate any alarms that you may have set before you turn off the V1750 before an aircraft takeoff.

Emergency Calls


In case of an accident or an emergency, dial 100 (Police), 101 (Fire) or 102 (Ambulance) from your phone. Being emergency numbers, these are toll free and can be reached even from areas where the network signal strength is very poor.

Battery Use

- First time charging must be done using the regular charger and not using the USB cable.
 - During the first 3-4 charge sessions, charge the battery until it has been fully charged according to the battery level indicator. This ensures higher battery backup and extends the battery life.
- Avoid partial charging. Wait for the battery to discharge completely before charging it again.
 - Charging through the USB Cable should be reserved during an emergency.
 - Use the device in vibrating mode only on rare occasions.

2. Getting Started

2.Assembling your Phone

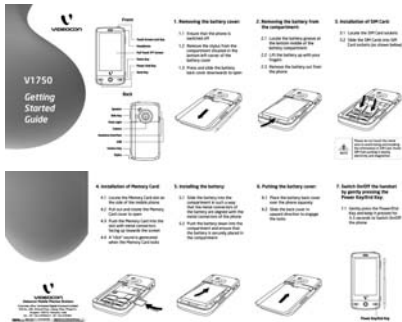

2.2 Low battery indicator

When the battery is low a warning tone sounds, the battery low message displays and the empty battery icon blinks. If the battery

level becomes too low, the phone automatically turns off. Recharge your battery.

Power On or Off

- Press and hold Power On/Off button to turn the phone on and off
- Enter your SIM card PIN, if requested.




Access Codes




- There are access codes for your SIM card. These codes help you to protect the phone against unauthorized use.
- When requested for any of the code explained below, key-in the appropriate code (displayed as asterisks) and press the OK key.

Note: When the battery is discharged completely, and not used for a while, the phone will not display the charging icon for a moment while charging. The phone will display the charging icon after that transition period.

2. Getting Started

2.3 Key Reference

Key	Function
 Home	Launch phone menu.
 Send	<ul style="list-style-type: none"> • Dial or answer a call. • Recall the last call numbers in the idle mode.
 Power on/off & End Key	<ul style="list-style-type: none"> • Switch the phone on or off, end a call (press and hold) cancel input To end a call. • Switch the phone on and off. (press this key and hold) • Cancel your input to return to the idle screen

Key	Function
 Volume	Use the Up or Down keys to control the volume.
 Camera	Click to launch the camera and take pictures or record video
 Lock	Lock or unlock the keypad and touch screen

Note: All illustrations are simulations, the actual icons and symbols may vary.


2. Getting Started

2.4 SIM card information

When you subscribe to a mobile service provided with a Subscriber Identity Module (SIM) card that keeps track of your phone number, the services that came bundled with your subscription, and a phonebook that stores numbers of your family and friends.

2.5 Text Entry

Text can be entered in several ways in the V1750. Open an application that allows text input, such as New Message or New Note, a virtual keyboard displays on the screen. You may then touch type, use the virtual keyboard, or use the stylus. The V1750 supports handwriting recognition that translates stylus gestures written on the screen into letters.

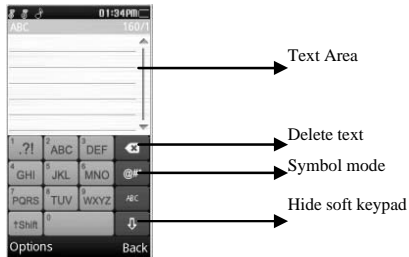



















3. Navigation

Your Videocon V1750 is a feature packed device,. To make navigation simpler, you can use the on-screen Widgets, Shortcuts, or the exhaustive phone menu.

3.1 Icons

Indicator icons provide information such as battery level, network signal strength, current date & time and so forth.

Icon	Definition
	Network signal strength
	Dual SIM Active
	SIM1 inserted
	SIM2 inserted
	Battery Strength
	Phone unlocked
	Phone is in ring mode
	Ring and Vibrate mode are active
	First ring then vibrate

Icon	Definition
	Only light displays on incoming call
	Alert type is set to vibrate only
	Headset connected
	Alarm is active
	In Roaming
	Missed call for SIM 1 or SIM 2
	SMS for SIM 1 or SIM 2
	New multimedia message(s)
	New voice mail message(s)

Note: Depending on your country or service provider, the icons shown on the display may vary.

3. Navigation

3.2 Widgets

In the V1750, you can display widgets to provide quick information on the idle screen. However these widgets are not shortcuts. For instance, the music player widget let's you play audio tracks from the idle screen itself.

To add a widget to the idle screen, drag-drop it from the widgets panel to the idle screen. The available widgets include, analog clock, digital clock, day & date, calendar, world clock, animated snowfall icon, photo frame, memo, alarm, quick message viewer, audio player, and FM player

3.3 Shortcuts

One touch Shortcuts on the idle screen, provide easy access to applications currently installed on the phone. These shortcuts launch their respective applications with a single touch.

In the V1750, you can create shortcuts for nine applications, such as; Main menu, Calling screen, Call history, Phone Book, Messages, Browser, File manager, Phone setup, User profile, Calendar, Video player, Audio player, Calculator, Alarm, Tasks, Yahoo messenger, Skype, and MSN Messenger

4. Using Your Phone

4.1 Call history

Use this menu to view the dialed, received or missed calls. On the Idle screen, press **[Menu]** select **Call history**. The **Call History** sub-menu comprises the following:

- **All Calls:** List of all dialed, received and missed calls
- **Dialed Calls:** List of the last 50 numbers you have dialed
- **Received Calls:** List of last 50 incoming calls
- **Missed Calls:** List of the last 50 calls you were unable to answer

4.2 Phonebook

The Phonebook is a location in your phone's internal memory on which you can store numbers of your contacts. The SIM card also allows you to

store phone numbers, though the permissible limit may vary from provider to provider. Even though, the SIM card and the phone's internal memory are physically separate, they are used as a single entity known as the Phonebook. **Choose Menu → Phonebook → Options → Phonebook Settings**. The available settings are:

- **Preferred Storage:** The memory type you want to use for storing contacts. The options available are SIM1, SIM2, Phone, and Select All.
- **Smart Search:** To search for a contact, type few letters of the contacts name to view the list of matching names in SIM1, SIM2, and Phone, select ALL. . In this case, the contacts are saved in the phone's memory.

4. Using Your Phone

- **Smart Search:** Enter few characters of a contact's name to display list of matching contacts. Use the navigation keys to select the contact you wish to call.
- **Speed Dial:** Speed dialing allows you to make a call by pressing and holding a number key when on the idle screen. You may assign the numbers between 2-9 contacts in your phonebook
- **My vCard:** Store your personal contact information as a vCard to allow quick sharing of your details with contacts. Once you have entered your contact information, use the Send my vCard option to send your vCard via SMS, MMS, or through file transfer over Bluetooth.
- **vCard version:** Choose vCard version
- **Special numbers:** Edit SIM owner number, SIM service dialing number and SIM SOS number in this menu.
- **Memory Status:** Check the usage (in percent) of the phone's internal memory is unutilized, and the number of contacts that can be stored in the SIM cards and phone.
- **Copy contacts:** Copy contacts from both SIM cards to the phone or vice versa.
- **Move contacts:** Move contacts from SIM cards to phone or vice versa.
- **Delete all contacts:** Delete entries from the SIM cards and phone memory. To delete entries select "From SIM 1", "From SIM 2" (if both are inserted in the phone) or "From Phone."
- **Phonebook backup:** Allows you to back up contacts on SIM cards or phone or the memory card. You can also restore previously backed up data.

4. Using Your Phone

4.3 Services

Services include the features that are supported by your service provider. If you cannot connect any of those services, please contact your service provider for assistance.

- **WAP:** the Internet browser of your V1750, you can use it to browse the Internet wirelessly.
- **Data account:** Specify the connection settings for the GPRS account that you hold with your service provider.
- **Rights Manager:** use to manage the rights for DRM

4.4 File Manager

Navigate the various files or folders available on the phone memory or the Micro SD (T-Flash) Card.

4.5 Messages

In Messaging, you can send and receive text messages, multimedia messages, audio messages, and e-mail messages. To launch messaging, on the idle screen, select **Menu** → **Messages** to view the available functions. Message functions are available depending on network services that your service provider supports.

4. Using Your Phone

SMS

- **Write Message:** Create and send a message.
- **Inbox:** Messages and data received using SMS or MMS are stored in the Inbox folder.
- **Drafts:** Messages that you have been writing are stored in the Drafts folder.
- **Outbox:** Messages that are waiting to be sent are stored in the Outbox.
- **Sent Messages:** Messages that have been sent are moved to the Sent Messages folder.
- **Archive:** You can move your message to archive folder
- Delete messages

- Use to delete all messages in Inbox, Outbox, Sent Messages, Drafts, and Archive.

E-Mail

To send and receive e-mail, you must have access to a remote mailbox service. This service may be offered by a Web-based service provider (such as GMAIL, Yahoo Mail), a network service provider (such as ones provided by your Internet service provider), or by your company. The V1750 is compliant with Internet standards such as SMTP, IMAP4 (revision 1), and POP3.

Note: While using IMAP4 protocol, you must be connected to the network at all times. If you are not connected, the e-mail inbox shall not display any messages

4. Using Your Phone

Send and Receive

Use to check for new mail and send any e-mails in the Outbox.

Write Email

Use the Write E-Mail command to create a new e-mail.

Inbox

This folder stores the list of emails you have received.

Outbox

This folder displays the list of unsent mails.

Sent

This folder displays the list of sent mails.

Drafts

This folder displays the list of e-mail Draft you saved.

Clear mailbox

To free up memory on the V1750 mobile phone, regularly clear the messages in the Inbox and Sent folders

Delete marked Email

This folder helps you to delete marked mails in selected folder.

Email Accounts

Configure e-mail accounts and settings.

Templates

Use this menu to make and use templates of frequently used email.

Note: This service may not be available on all networks. For more information about the available subjects, please contact your network service provider.

4. Using Your Phone

Broadcast Message

This network service allows you to receive the broadcast messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in your area.

For more information about broadcast message topics, please contact your service provider.

Templates

Save time by using the default templates for commonly sent e-mail.

Message Settings

Within the Message Settings sub-menu, you can define default profile setting, SMS and multimedia message.

Note: Voice mail is a network feature. Please contact your service provider for more information.

4.6 Business

Use this menu to keep track of your schedule. You can also use convenient features, such as Calendar, tasks, Alarm, World Clock.

To access this menu, press [Menu] in Idle mode and select Business.

Calendar

You can keep track of your monthly schedule.

Tasks

You can view all saved tasks.

Alarm

Set the alarm to ring at a specific time.

World clock

Set your local time zone and find out the current time in another part of the world.

4. Using Your Phone

4.7 Multimedia

Camera

Your Videocon V1750 is equipped with a 3.2 Megapixel camera on the back of the device that can be used to take still photographs or record videos.

Select **Menu** → **Multimedia** → **Camera** to launch the camera application. Alternately, press the camera button located on the side of your device.

Taking and Saving a Photo

Once the camera application is enabled, press and hold the camera button on the side of the phone. All pictures that you click are automatically saved to a folder that you specify using the **Options** menu on the camera screen.

Use the **Auto Focus** feature in the V1750 to sharpen the image quality. To enable **Auto**

Focus, half-press the camera button. A white rectangle displays on the screen indicating that the camera is trying to autofocus, once done, the rectangle changes to green. Fully press and release the camera button to click the photo. Do not move your hand until you hear the shutter sound, or the message **Capturing** is displayed on the screen. A steady hand can further enhance the image quality.

Setting Picture options

- Switch to video recorder: Launch the video recorder
- **Photos**: View previously clicked photos.
- **Camera Settings**: Control functions such as Camera Flash, Shutter Sound, EV, Contrast, Anti-flicker, Delay timer, and Cont. shot.

4. Using Your Phone

- **Image settings:** Set image size and quality
- **White Balance:** Auto / Daylight / Tungsten / Fluorescent / Cloudy/ Incandescent
- **Scene Mode:** Auto/ Night
- **Effect Settings:** Normal/ Grayscale/ Sepia/ Sepia green/ Sepia blue/ Color invert
- **Storage:** Specify the memory type where the pictures you click shall be saved.
- **Restore Default:** Reset camera defaults.

Image viewer

You can see your photos in your phone by choosing **[Image viewer]** menu in **[Multimedia]** menu. It will display the photos with image name, image size and date.

Video Recorder

Select Menu → Multimedia → Camera → switch to Video recording to enable the video mode for the camera. Alternately, press and hold camera button located on the side of your device to directly enable the video recording mode

Recording and Saving a Video

- Video recorder can be launched by long pressing the camera key.
- Choose **[Video Recorder]** menu.
- Set your video recorder by using **[Option]** or alphanumeric keys.
- After setting the view, start to record a video by pressing the **[OK]** key or camera key

4. Using Your Phone

- On pressing the **[Stop]** soft key (right), the phone will prompt whether or not you want to save the video.
- If you want to view the recorded file, you can access it via the Video Player menu.

Video player

Use Video Player to watch videos. The supported formats are 3GP and M-JPEG

Photo editor

You can edit the photo and slide show files saved in your phone or Memory card. The status of your photo editor setting will be displayed on the top of the preview mode

Audio player

Your phone provides you a friendly audio player device for entertainment purpose. You may enter the music player via main Menu You may also download the music content via USB or other

connection. Music tracks must be saved in Audio folder in File Manager in order to be automatically detected and added into the default play list. You may listen to the music through the headset or loudspeaker. The user-friendly interface is specially designed to allow easy access to common functions such as play, pause, and stop.

Playing Audio Tracks

In the Music Player menu, you may select List to access the following setting. If you are a first-time user, select Play List to add music tracks from your memory card. Your music player will automatically detect and add all the music tracks into the default play list. When you use the music player next time, select any music track to access the following options:

- **Now Playing:** Allows you to play the selected song immediately.

4. Using Your Phone

- **My Playlists:** Allows you to create play lists according to your personal preference, in addition to the default play list. Select one song in any play list, and access the following options:
- **Artists:** Allows you to sort your music by the name of the Artist.
- **Albums:** Allows you to sort your music by the title of the Album.
- **Genres:** Allows you to sort your music by Genre.
- **Tracks:** Allows you to sort your music by the track type.
- **Settings:** Allows you to set player settings, display settings sound effects and Bluetooth settings.
- The V1750 lets you play tracks of the following formats, AAC, AAC +, AAC+ v2,

AMR, AMR-WB, EES, AEC, MP3 and MIDI

Sound recorder

With this menu, you can record sound in AMR, WAV and AWB format and use it as voice memo, ring tone, MMS attachment.

To quickly record sounds, press and hold the down volume key.

FM radio

The FM Radio application turns the mobile phone into a portable FM Radio device. It primarily provides users the interface to a single-chip electronically turned FM stereo radio for listening to live-broadcast stations. You must connect the ear-phone to your phone as it works as an antenna.

4. Using Your Phone

To listen to the radio

Connect the earphone to your phone. When entering the main screen, a default frequency is selected and it's power off for the first time of entrance.

Schedule FM record

This menu allows you to set the Schedule FM Radio to record at a specific time. You can save up to 4 channels.

Melody composer

Compose your own melodies and use them as ringtones, or send to friends as MMS attachments.

Slide Show

View all images in a folder as a slideshow.

4.8 Fun & Games

- **MSN messenger:** To add a new contact, the contact must be online at the time of addition.
- **Skype messenger**
- **Yahoo messenger**
- **Games:** This phone provides you embedded games.
- **Motion games:** This phone provides you embedded motion games.
- **Java:** Your mobile phone features a Java run-time environment, which allows you to run Java applications, such as games downloaded on the Network. You can setup audio, network profile, and free data space.

4. Using Your Phone

- **Java settings:** You can set Java audio, Java backlight, Java vibration, Select SIM, Java SIM1 Profile, Java SIM2 Profile, Heap size in this menu
- **8.8 Java default security:** You can set third party settings, entrusted domain, restore default and domain options in this menu.

4.9 User Profiles

This menu allows you to set the ring tone, alert type, ring volume, answer mode and backlight, etc when you receive an incoming call or a new message so that you can adapt the use of your phone to different types of call environments. The available profiles are, General, Meeting, Outdoor, Indoor, Silent, Headset, and Bluetooth

4.10 Tools

You can use some convenient features in this menu, such as Calculator, Unit converter, Currency converter, Stopwatch, EBook reader, Answer machine.

- **Calculator:** You can use calculator by pressing the icons on the screen
- **Unit converter:** Convert from one type of unit to another for ex. Weight, Length, Volume, Temperature, Velocity, Surface
- **Currency converter:** You can use your phone for converting currency. You have to select the amount and currency rate to which the amount has to be converted.
- **Stopwatch:** Use the Stopwatch to measure the amount of time elapsed from a particular time when activated to when the piece is deactivated.

4. Using Your Phone

- **EBook reader:** With the function, you may read any file in TXT format saved in the memory card. You just have to copy the file in the folder of **[eBook]** in the memory card in the directory **[File management]**, and start up the function of electronic book. If the file is not in the folder, you just have to "open the electronic book" in the options of the file, and the file will be moved to the folder automatically.
- **Answer machine:** You can leave a message and set it to answer the call automatically.

4.11 Settings

The Settings menu provides you with various setting options to customize the phone to your preferences and needs. You can also reset the settings to their default values.

To access this menu, press **[Menu]** in Idle mode and select **Settings**.

Dual SIM Setting

This feature control the available SIM card

Pen calibration

Use this menu to Calibration touch screen.

Phone setup

This menu allows you to set items as below:

- Time and date
- Schedule power on/off
- Language

4. Using Your Phone

- Pref. input methods
- Display setup
- Greeting text
- Auto update of date and time
- Handwriting
- UART setup
- Touch screen affect
- Motion Sensor
- Shortcuts

Call settings

Smart Divert: Smart Divert is the function that phone enable you to divert Incoming call from

SIM1 to SIM2 and vice versa when either one of the SIM is in active call. When

Smart Divert is on, Call waiting and Call divert of both SIM cards will be activated automatically.

On: Set the Smart Divert function on.

Off: Set the Smart Divert function off

Status: Show status of Call waiting and Call divert function setting of two SIM cards.

SIM1 call settings

- **Input SIM1 Divert Number:** Input the SIM1 number
- **Input SIM2 Divert Number:** Input the SIM2 number
- **Remind When Power On:** When user power on the mobile, this status will remind which function is on or off.

Advance settings

- **Black List:** User can blacklist certain phone number

4. Using Your Phone

- **Auto redial:** The call again redials if not picked up
- **Background sound:** User can select different type's background sounds available while in an active call.
- **Call time display:** Display the call duration
- **Call time reminder:** Beep sounds come for the defined for an active call
- **Auto quick end:** The call automatically disconnected at the defined time.

Network setup

Network Setup helps you in Network Selection, and Preferences

Network Selection: The Network Selection feature enables you to select automatically or manually the network used when roaming outside of your home network.

Security setup

Use this menu to protect the phone against unauthorized use by managing the several access codes of your phone and SIM card.

You can optimize security mode by choosing sub menus in "Security Setup" in "Settings" menu. These security settings will help you to keep privacy and to prevent other people from using the phone without your permission.

SIM1 security setup

Your phone provides the following selections for your option:

- **SIM1 Lock:** This function allows you to lock the phone with a specific SIM card. The feature is designed to prevent the use

Note: You can select a network other than your home network only if it has a valid roaming agreement with your home network.

4. Using Your Phone

of your SIM cards by means of another person's phone if your SIM cards lost. You can switch on or off to activate the SIM1 Lock function.

- **Fixed Dial:** This function dials only the numbers in the fixed dialing number (FDN). To save and edit numbers on the list, you need the PIN2 code.
- **Barred Dial:** Allows you to switch on or off restricted call function. However, you need to check if your SIM supports this function.
- **Change Password:** Allows you to change PIN code and phone lock password.

SIM2 Setting

This function allows you to activate password to protect your phone against unauthorized use. Option list is same as SIM1 Settings

Mobile Tracker

This function enables you to trace the phone in case it gets lost. The default password is "0000". If someone inserts another SIM card into your lost mobile, you will receive an SMS from the new SIM card indicating the new user.

- **View IMSI:** View the IMSI of the SIM card phone has now
- **Owner Name:** please fill your own name
- **Tracking number1:** Mobile tracker SMS received number while the mobile tracker is active, and the SIM card is changed
- **Tracking number2:** Mobile tracker SMS received number while the mobile tracker is active, and the SIM card is changed

4. Using Your Phone

- **Status:** Switch on/Off Mobile tracker status
- **Change password:** change the password of mobile tracker

Phone Lock

You can switch on or off to activate the phone lock function to protect your phone. If you switch Phone Lock on, you need to enter the password to set the request on. The default password is "0000".

Auto Keypad Lock

This allows you to lock the phone's keypad to prevent accidental key pressed. In Auto Keypad Lock submenu, select the time that after the last key press will be disabled, and press **OK**.

Change Password

Allow you to change the phone lock password.

Connectivity

- **Bluetooth:** Bluetooth helps to transmit data or photos from your mobile phone to another device nearby without any cables.
- **Connection management:** This menu allows you to change the settings for the GSM and GPRS network services. For further details, contact your service provider.

Restore factory setting

This menu allows you to restore your default settings. (The initial password is 0000)

Sound effects

Allow you to set audio effect and bass enhancement.

4.12 Shortcuts

Quickly access frequently used applications or phone features.