



VIDEOCON

Videocon V1755

User's Manual

Table of contents

| | | | |
|-------------------------------|-----------|--|-----------|
| Legal Notices | iv | Making and Receiving calls..... | 9 |
| Introduction..... | 1 | Making a Call using Call History | 9 |
| Safety Precautions | 1 | Call Options | 9 |
| Assembling the Device..... | 2 | Connecting to the PC | 10 |
| Charge the Battery..... | 4 | Call history..... | 11 |
| Know your Device | 5 | Phonebook | 12 |
| Phone Layout | 5 | View Phonebook | 12 |
| Key Layout | 6 | Add new contact | 12 |
| Screen Icons..... | 7 | Phonebook Operations..... | 12 |
| Dual SIM Card..... | 8 | Memory card contacts..... | 13 |
| Flight Mode | 8 | Phonebook backup..... | 13 |
| Keypad lock..... | 8 | Phonebook settings..... | 14 |
| Basic Operations | 9 | Video | 15 |

Table of contents

| | | | |
|----------------------------|----|-------------------------|----|
| File Manager | 16 | Camera | 22 |
| Messages | 17 | Video recorder..... | 23 |
| SMS..... | 17 | FM radio..... | 24 |
| MMS..... | 17 | Image Viewer | 25 |
| Email..... | 18 | Photo editor | 25 |
| Broadcast message..... | 19 | Sound recorder | 25 |
| Music | 20 | Schedule FM record..... | 25 |
| Fun and Game. | 21 | Extras | 26 |
| Java..... | 21 | Bluetooth | 26 |
| Java settings..... | 21 | Alarm..... | 27 |
| Games..... | 21 | Calendar | 27 |
| Motion games..... | 21 | Calculator | 28 |
| Multimedia | 22 | Reminder | 28 |

Table of contents

| | | | |
|-------------------------------|-----------|--------------------------------|-----------|
| Stopwatch | 28 | Network setup | 35 |
| Health..... | 29 | Restore factory settings | 35 |
| Unit convertor | 29 | User profiles..... | 36 |
| Currency converter | 29 | Services..... | 37 |
| World Clock..... | 29 | STK | 37 |
| Ebook reader..... | 29 | WAP..... | 37 |
| Settings..... | 30 | Data account..... | 38 |
| Dual SIM settings..... | 30 | | |
| Display characteristics..... | 30 | | |
| Phone setup..... | 30 | | |
| Call settings | 31 | | |
| Touch screen calibration..... | 33 | | |
| Security setup..... | 33 | | |

Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited.

VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as it is". Except as required by applicable law, no warranties of any kind, either retouched or implied, including, but not limited to, the implied warranties of merchantability and fitness for a

particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Introduction

Safety Precautions

Please comply with these precautions / measures to avoid actions that may endanger your safety and those of other road users, and maximize device performance.

Road safety

The use of a mobile phone while driving is illegal. If you need to make or receive a call, move your vehicle to the left side of the road and allow it to come to a complete stop before using your phone.

Aircraft Safety

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.

Emergency Calls

In the event of an emergency, you may dial 100 (Police), 101 (Fire Brigade), and 102 (Ambulance). Even if you are out of the coverage area of your home mobile network, the device is programmed to connect to any available network and place your call.

Introduction


Battery Use

To extend the battery life of your device:

- Use the standard wall charger while charging the phone for the first time.
- During the first 3-4 charge cycles, charge the battery until the battery indicator on the display stops scrolling up and down.
- Avoid partial charging. Wait for the battery to discharge completely before charging it again.
- Use the USB cable to charge the device only during an emergency.

Assembling the device

1. At the bottom of the phone, insert your little finger into the groove. Pull the back cover upwards to remove it.

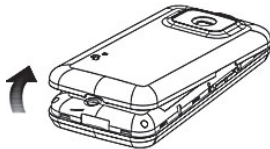


2. If the battery is inside its compartment, lift it in the direction of the arrow.




Introduction

3. Insert the SIM card in the given slot. Make sure that the contact area on the card is facing the connectors on the device as shown below.

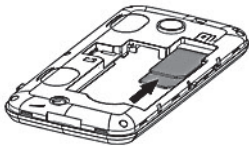

4. Insert the memory card in the slot and push it in until it gets locked into a given place. Make sure that the contact area is facing the connectors in the device.

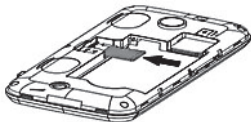

5. Insert the battery in the battery compartment. Align the contacts on the battery with the corresponding connectors in the battery compartment and insert in the direction of the arrow.



6. Close the battery cover in the direction of the arrow.



Introduction

Charge the battery

Before using the phone for the first time, you must charge the battery.

To charge the device:

1. Insert the smaller end of the travel charger into the multifunctional jack at the top of the phone.
2. Put the adaptor end of the travel charger into a standard AC wall socket.
3. When the battery is charged completely, the battery indicator icon on the screen becomes stable and stops scrolling.
4. Unplug the travel adaptor from the phone.

NOTE: Improperly connecting the travel adaptor can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

Know your device

Phone Layout



Know your device

Key Layout

Accessing menus and icons

Move your finger or the stylus up or down to scroll vertically.

Similarly, move your finger left or right to scroll horizontally. Press an icon to launch it.

Some menu items have three periods (...) printed against them to indicate that you must press your finger or stylus for at least three seconds to launch them.

Dial Key

Press Dial key to view the Call history. Scroll to the desired number, and press again to make a call.

End Key










End or reject calls. Press and hold this key to turn phone On/Off, cancel function and return to the idle screen.









OK Key

- In idle mode, press to open Menu.
- In menu, use to perform the functions that display in the lower left of the display screen.

Screen Icons

Screen icons provide important information about battery level, network signal strength and so forth.

| Icon | Definition |
|---|----------------------------|
|  | SIM 1 Network signal level |
|  | SIM 2 Network signal level |
|  | Indicates battery capacity |
|  | Alarm is activated |
|  | Keypad lock is activated |
|  | SIM 1 Unread Messages |
|  | SIM 2 Unread Messages |
|  | SIM 1 Missed calls |
|  | SIM 2 Missed calls |

| Icon | Definition |
|---|---------------------------|
|  | General profile activated |
|  | Meeting Profile activated |
|  | Outdoor profile activated |
|  | Indoor profile activated |
|  | Headset profile activated |
|  | Save power Profile |
|  | Silent profile |
|  | Bluetooth |

Know your device

Dual SIM Card

Your phone supports dual SIM cards, allowing you to use two different phone numbers on one mobile phone. However, at any given time, only one SIM card will be active.

Flight Mode

Continue using basic operations of the device while the transmitting function is switched off.

In Flight Mode, you cannot use the call or messaging functions of the phone. However, use of other functions of the phone is permitted.

Keypad lock

When you power on your phone for the first time, the keypad will get locked after few seconds. To unlock the keypad, slide the key towards the lock displayed on the screen and put it over the lock.

To lock the keypad, touch lock icon on the screen.

Basic Operations

Making and Receiving calls

In the idle mode:

1. Touch the phone icon at the bottom right-hand side of the screen to display the numeric keypad.
2. Enter the phone number including the area code. Touch Clear to erase a digit.

For international calls, insert the '+' sign followed by the country code, area code (without the initial zero and phone number).

To receive a call, press the dial key on the phone.

Making a Call using Call History

Call History keeps the record of each call you may have made or received. To make a call from Call history:

Press the dial key on your phone. The list of recent call history will be displayed. Scroll up or down to

navigate the list, and then press the dial key.

Call Options

During a call, the phone allows you to perform various functions.

To view the available options, press **Options** during a call:

- **Hold single Call:** Place the active call on hold.
- **End single Call:** End the active call.
- **New call:** Make a new call.
- **Phonebook:** View the phonebook.
- **Messages:** View the Messages menu.
- **Lock Phone:** You can lock your phone.
- **Sound Recorder:** Record the active call.
- **Background Sound:** Enable playing of background sounds during a call. Choose the

Basic Operations

desired sound effect from the Effects list.

- **Mute:** Turn On/Off the microphone.
- **DTMF:** Dual-tone Multi-frequency.: You can choose On/Off, to send dual-tone multi-frequency sound.

Connecting to the PC

You can connect this handset to a computer's USB port using the cable provided with the device packaging. To do so:

1. Connect the smaller end of the cable to the input slot at the top of the phone, and the other end to a standard USB port on your computer.
2. An on-screen dialog prompts you to select the connection mode. Your options are:
 - **Mass Storage:** Access the phone and memory card of your phone as a regular hard drive partition on your computer.

Display Map the device as drive on the computer and transfer files between the PC and phone. You can also take backup of phone data to your computer.

- **Web Cam:** Use the device as a web camera to voice chat on your favorite instant messaging application.
- **COM port:** Use this device as a modem to browse the Internet on your computer using your phone's GPRS connection.

Call history

Use Call history to view the All, Missed, Received, Dialed, and Rejected calls. On the Idle screen, touch Menu at the bottom left-hand corner of the screen, and then touch Call history.

Each entry in Call history is prefixed by the SIM using which the particular call was made or received.

The Call history menu comprises the following tabs:

- **All Calls:** List of all incoming, dialed, and missed calls.
- **Missed Calls:** Calls you were unable to answer before the termination of ringing.
- **Received Calls:** Displays the list of latest received calls.
- **Dialed Calls:** Displays the list of latest dialed calls.
- **Rejected Calls:** Calls you disconnected without pressing the dial key first.

Phonebook

Phonebook is a location in your phone's internal memory on which you can store names and numbers of contacts. The SIM card also allows you to store phone numbers, though the service provider decides the capacity. Even though, the SIM card and the phone's internal memory are physically separate, they are used as a single entity known as Phonebook on the phone.

View Phonebook

Touch View phonebook from the Phonebook menu to view an alphabetical list of all your contacts.

For faster access to a contact, Press Search Open to display an alphanumeric keypad. Enter the first few characters of the number or the name of a contact to view a matching list of contacts.

Add new contact

Add a new contact to the phonebook. You can choose to store the contact in the SIM cards,

Phone memory, or microSD card.

To add a contact:

1. Select **Menu** → **phonebook** → **Add new contact**, and choose the location where you want to store this contact. Your options are microSD Card, SIM Cards, and Phone memory.
2. Select **Name** and enter a name for the contact.
3. Select **Number** and enter phone number, and save the contact in the desired location.

NOTE: If you choose to store the contact on SIM memory, you can only enter a Name and a Number, but if you want to store the contact on Memory card or Phone memory, then you can enter other details such as company name, e-mail address, or alternate phone numbers etc.

Phonebook Operations

Use to perform the same action on multiple

Phonebook

contacts. Select the contacts on which you wish to perform an action, and Press **Options**. You can do the following:

- **Delete marked:** Remove the selected contacts from the phonebook.
- **Copy to SIM:** Copy marked contacts to SIM1 or SIM2.
- **Copy to Phone:** Copy marked contacts to phone memory.
- **Copy to Memory card:** Copy marked contacts to memory card.
- **Copy all:** Copy marked contacts to SIM1, SIM2, Phone memory, or microSD card and vice versa.
- **Delete all:** Delete contacts stored in SIM1, SIM2, phone memory, or microSD card.

Memory card contacts

View contacts stored on the microSD card. The options available in microSD card contacts are:

- o Send SMS
- o Send multimedia message
- o View
- o Edit
- o Delete
- o Copy
- o Move

Phonebook backup

Use this option to export or import a phonebook. The available options include Phonebook backup and Phonebook restore. You may choose to backup or restore contacts stored on SIM1, SIM2, or phone.

Phonebook

Phonebook settings

The available options in phonebook settings are:

- **Memory status:** View used and available memory for storing contacts.
- **Caller groups:** Create a caller group to apply one rule to multiple callers without having to recreate the rule several times. Caller groups contain multiple entries from your personal contacts list.
- **Owner numbers:** Numbers that are assigned to each SIM card.
- **Preferred storage:** Choose the location where you wish to store the contacts. You may choose SIM1, SIM2, Phone, or microSD card.
- **My vCard:** Store your personal contact information as a vCard to allow quick sharing of your details with contacts. Once you have entered your contact information, use the Send my vCard option to send your vCard via SMS, MMS, and Email or transfer over Bluetooth. You can also save your vCard as a file to the phone memory or to the microSD card.
- **Caller picture:** Set an image to a contact. This image displays each time you get a call from this contact.
- **Caller ringtone:** Set a ringtone to a contact. This ringtone plays each time you get a call from this contact.
- **Caller video:** For easy identification of the incoming call, choose a specific video to play when a certain contact calls.

Video

Use Video Player to watch videos directly from the Videos folder in the File Manager. Supported file formats include AVI, MP4, and 3GP.

File manager

View the files stored in the phone memory and on the microSD card. Select Phone or microSD card option, and then touch **Options** to display the following options:

- **Open:** View contents of an existing folder.
- **New Folder:** You can create a new folder.
- **Rename:** You can rename the folder available in Phone or microSD card.
- **Delete:** Erase all contents from the memory card.
- **Sort by:** You can sort the folders available in phone memory or microSD card by Name, Type, Time, and Size.

Messages

In Messages, you can send and receive text and multimedia messages. To launch messages on the idle screen, touch **Menu** → **Messages** to view the available functions:

SMS

On the idle screen, touch **Menu** → **Messages** → **SMS** to display the Messages. The various tabs are:

- **Inbox:** Messages you receive are stored in Inbox folder. Touch **Write** to display the **Write message** screen. If you prefer using a QWERTY keypad, turn your phone 90° to the left to display the keypad.
- **Outbox:** Stores all sent messages.
- **Drafts:** Partial or complete text messages that you wish to send at a later time.
- **Favorite:** Display messages that you mark as favorites.

- **Trash:** All rejected messages are stored in Trash folder.

MMS

The device supports multimedia messaging, which allows you to send rich content (images, videos, sounds and so on) as message attachment to recipients. The various options are:

- **Write message:** Create and send a multimedia message.
- **Inbox:** Messages you received using MMS are stored in the Inbox folder.
- **Outbox:** Stores all sent multimedia messages.
- **Drafts:** Partial or complete text messages that you wish to send at a later time.
- **Templates:** Speed up messaging by using built-in MMS templates. Templates store 5 preloaded/multimedia messages for ready usage.

Messages

- **MMS settings:** You can edit the settings for Compose, Send, Retrieve, Filter and the Server profile. You can also check the memory status of the phone.

Email

Use Email to send and receive corporate or Web based e-mail from the phone. To be able to do so, you need to configure your phone to connect to a mail service provider and download messages. The various options are:

- **Send and Receive:** Check for and download new messages, and send messages in your drafts folder.
- **Write Email:** Compose new Email messages.
- **Inbox:** Stores all the received Email messages.
- **Outbox:** Contains all the Email messages sent from your phone.
- **Sent:** Stores the copies of Emails you have already sent.
- **Drafts:** Partial or complete Email that you wish to send at a later time. To save a message as a draft, press Back while writing a message and choose Save to save the message as a draft.
- **Clear mailbox:** Delete messages from the Inbox, Outbox, Drafts, and Sent folders.
- **Delete marked emails:** Select individual messages from the Email folder and choose this option to delete them.
- **Email accounts:** To configure an Email account touch **Messages** → **Email** → **Email Accounts**, and then touch Options to create **New account** to begin creating the Email account. The options are:
 - **Email address:** Specify the Email address, and choose **Options** → **Next** to display the **Protocol** screen.

Messages

- o Choose the protocol your e-mail provider offers, options are **POP3** and **IMAP4**.
- o Follow the on-screen instructions to complete the configuration.

NOTE: To configure Email on your device, you need to know the server addresses and port numbers of the incoming and outgoing mail servers.

NOTE: You would also require a working GPRS connection that will be used to connect to your Email provider's servers.

- **Templates:** Templates store 10 preloaded/pre-written text messages for ready usage.

Broadcast message

Your phone is capable to receive and store broadcast messages. You can set the receive status to ON/OFF for both the SIM cards. The messages are stored in **Read Message** folder. If

Broadcast Message Receive Mode is ON, it is also displayed on the main screen.

NOTE: If you have both SIM cards inserted, then each SIM card will have its own broadcast message settings.

Music

Launch Music to listen songs stored on your microSD card.

- **Now Playing:** View the currently playing track.
- **Playlists:** A list containing the songs and the order you wish to play them in.
- **Artists:** Organize songs by the artists who sing them.
- **Albums:** Organize music file by the album they are part of.
- **Genres:** Organize audio tracks by the category they belong to.
- **Top 25:** List of the 25 most listened to tracks.
- **All Songs:** List of songs available in your memory card.
- **Random Play:** Allow the application to randomly play songs from your music collection.

- **Settings:** The available options under settings are:
 - o Play Mode
 - o Audio effect
 - o Play Speed
 - o Visualization
 - o Skin
 - o Background play
 - o Timing Stop
 - o Fade in and Fade out
 - o Lyrics Display
 - o Operation Suggestion
 - o BT stereo output
 - o Refresh list
 - o Reset Audio Player
 - o About

Fun & Game

Press **Menu** → **Fun & Game**, to access Fun & Games menu.

Java

List of java enabled games or applications currently available on your phone.

Java settings

Tweak various options while playing Java games. The options include, sound, vibrations, and the permitted heap size that help in making game play smoother.

Games

You may play Puzzle game. With the help of Game Settings, you can set the Background Music (BGM), Sound Effect, and Volume of the game.

Motion games

Motion games consist of Dice game. Shake the phone to make the dice roll. When the dice stop,

sum the numbers that display on each to execute a pre-defined event. You can create events using the Event settings under Options.

Multimedia

Camera

Use the in-built camera to take and save pictures. Press **Menu** → **Multimedia** → **Camera** to launch the camera function. To take a picture, focus the camera towards the object you wish to click and press OK.

NOTE: Do not move your hand until the captured photo displays on the screen as a still image.

Use the Options command to view and use other camera functions:

- **Switch to video recorder:** You can switch to video recorder to record the video.
- **Photos:** View the clicked images captured by your phone. You can view, set the image as a wallpaper, rename and delete the images etc.
- **Camera settings:** Select shutter sound, EV, Anti-flicker, Delay timer, and Cont. shot for the camera.
- **Image settings:** Set the image size (in pixels) and Image quality as Normal, High, and Low.
- **White balance:** Increase or decrease the white balance to get image colors to display as accurately as possible. You can select any option from the displayed list.
 - o Auto
 - o Daylight
 - o Tungsten
 - o Fluorescent
 - o Cloudy
 - o Incandescent
- **Scene mode:** Select the Auto or Night mode for the camera to capture images in dark.
- **Effect settings:** Set the effects that you wish to use for the captured images.
- **Storage:** Choose the location on which you would like to save the captured pictures.

Multimedia

You may either choose Phone memory or the microSD card.

- **Restore default:** Undo all customizations and restore to factory settings.

Video recorder

Press **Menu** → **Multimedia** → **Video recorder**.

Position the camera towards the moving object, and press the **OK** key or Camera key. To pause recording, press **OK** once again.

To watch the recorded videos, select Video Player.

The options available for video recorder settings are:

- **Switch to Camera:** While recording video you can switch to camera mode also.
- **To player:** Displays the list of recorded videos.

- **Camcorder settings:** Set the White balance, EV, Night mode, and Anti-flicker of the video recorder.
- **Video settings:** Set the quality of the video as Normal, High or Low.
- **Effect settings:** Select different effects for your recorded videos, such as normal, grayscale, Sepia, Sepia green, Sepia blue and so forth.
- **Storage:** Select the storage location of the recorded videos to phone memory or to microSD card.
- **Restore default:** Restore the default settings of the camcorder.

FM radio

The FM radio application turns the mobile phone into a portable FM Radio device. It primarily provides users the interface to a single-chip

Multimedia

electronically turned FM stereo radio for listening to live-broadcast stations. You must connect the handsfree cable to your phone as it works as an antenna.

The available options are:

- **Channel list:** Displays the list of channels you have saved.
- **Manual input:** Manually enter the frequency of the channel you want to listen.
- **Preset auto search:** Automatically search for available radio channels.
- **Record:** Start recoding the radio broadcast.
- **Append:** Continue recording at the end of a previously recorded sound file.
- **File list:** View list of recorded tracks.
- **Settings**

- **Background play** - To On/Off the FM background play.
- **Loudspeaker** - Switch loud speaker On or Off.
- **Record format** - Choose the file type in which the radio will be recorder. The supported formats are: WAV, AWB, and AMR.
- **Audio quality** - Set the quality of the audio to Low or High.
- **Record storage** - Select the medium where the recorded radio will be stored. Options are phone memory and microSD card.

Image Viewer

The Photos module stores all pictures you saved before and photos which are captured by the phone camera. It provides you the option to view, rename, and delete the images etc.

Multimedia

Photo editor

Photo artist

Use Photo artist to edit the existing images on your phone or memory card. You can also use it to edit a photo immediately after you capture it using the camera.

Image tiles

Arrange image thumbnails in a tile like format.

Sound recorder

Touch **Menu** → **Multimedia** → **Sound recorder**, and then touch Record option to record the sound. To record the sound, supported formats are: AMR, AWB and WAV. A call may also be recorded and saved to the phone or the microSD card.

Schedule FM record

You can program this phone to record certain FM channel at a certain time and date.

Extras

Bluetooth

You can communicate with other compatible devices through wireless Bluetooth connection. Compatible devices may include: Mobile Phones, Personal Computers, Bluetooth headsets. Via Bluetooth, you can send or receive pictures, videos or music files.

To access this menu, touch **Menu** → **Extras** → **Bluetooth**. The available options are:

- **Power:** Select Power On to activate Bluetooth and Power Off to deactivate it.
- **Inquiry audio device:** Locates other Bluetooth activated audio devices in the vicinity.
- **My device:** It is a list of devices which have been paired with your phone before.
- **Active devices:** Locates active Bluetooth devices in the vicinity.
- **Settings:** You can set Mobile Phone Bluetooth.

The available options are:

- o **Visibility** - Set the Visibility of the Bluetooth.
- o **Change device name** - Change the Bluetooth device name.
- o **Authentication** - Authenticate while Bluetooth connection is On/Off.
- o **Audio path** - To set whether the audio is to be transferred to headset or stay in phone while Bluetooth audio is connected.
- o **Storage** - Set whether the audio is to be stored in Phone memory or microSD card.
- o **FTP Settings** - Set the shared folder of the FTP.
- **About:** Displays the name of the Bluetooth Handset device, Device address, and Supported profiles.

Extras

Note: Bluetooth needs to be activated to perform all the above mentioned functions.

Alarm

Set the alarm to ring at a specific date and time. Touch **Edit** to access the following sub-options:

- **Status:** Set the status of the alarm to On/ Off.
- **Time:** Set the time at which you wish to ring the alarm.
- **Period:** Select the format at which you wish to ring the alarm, that is, every day, once, or on a specific day.
- **Alarm tone:** Set the tone of the alarm.
- **Snooze:** Set the time (in minutes) at which the alarm should snooze.
- **Alert type:** Set the alert type of the alarm whether you wish the phone to Vib. only, Vib. and ring, Ring only, and Vib. only.

Calendar

You can use the calendar to keep track of important meetings. To access calendar, touch **Menu** → **Extras** → **Calendar**. The calendar will be displayed with three tabs- Weekly, Schedule, and Back on the phone screen.

1. Select Year, Month, and Date from the Calendar.
2. To Add event, select **Schedule** option from the displayed tab.
3. Choose any one option from Reminder, Meeting, or Course, and then press OK.

The options available for Reminder, Meeting, and Course tab are:

- **Date:** Enter Start date and End date.
- **Time:** Enter Start time and End time.
- **Description:** Enter the description.

Extras

- **Alarm:** Set the Alarm status On, Off, 5min. before, 15min. before, and 30min. before.
- **Repeat:** Select the repeat format of the alarm whether you wish to ring the alarm Once, Every day, Weekly, Monthly on at a specific day.
- **Location:** Enter the location of chosen option.
- **Priority:** Set the priority of chosen option as High, Medium, or Low.

Calculator

Touch **Menu** → **Extras** → **Calculator** to display calculator screen.

Your phone comes with an in-built conversion application that you can use to perform calculations on a daily basis, such as addition, subtraction, division, and multiplication.

Reminder

Schedule sound alerts to play each time a pre-defined event is about to occur. You can use your phone to keep track of all your Date, Call, and Anniversary.

For example, set a reminder for your favorite TV show.

Stopwatch

Touch **Menu** → **Extras** → **Stopwatch** to display stopwatch screen.

Use the stopwatch to measure the amount of time elapsed from a particular time when activated to when the piece is deactivated.

The phone comes with two types of Stopwatch:

- Typical stopwatch
- nWay Stopwatch

Extras

Health

Body Mass Index (BMI) is a statistical measure of body weight based on a person's weight and height.

Unit convertor

Convert measurement unit of Weight, Length, Volume, Temperature, Velocity, and Surface from one unit convention to another.

Currency converter

Touch **Menu** → **Extras** → **Currency converter**, select OK, and then set the exchange rate. Select one of the displayed options, Input the change rate, and then select OK. The exchange rate will be kept in the memory till you input a new change rate to replace it. To convert between currencies, input the currency to be converted and then select OK.

World Clock

World clock can be used to know the time in various cities across the world. You can see a world map and immediate time in those cities using world clock. Touch **Menu** → **Extras** → **World clock**, to view a particular city time.

Ebook reader

The Ebook reader can read .txt electronic documents. You can connect the phone via a USB line to a PC and then place .txt documents in the Ebook folder on the phone or the microSD card. Touch **Menu** → **Extras** → **Ebook reader**, find a .txt document and then select Open Ebook to directly read the .txt document.

Settings

Dual SIM settings

You can select the SIM card that you wish to use from the dual SIM settings. The available options are:

- **Dual SIM open:** This option activates both the SIM cards.
- **Only SIM1 open:** This option activates only SIM1.
- **Only SIM2 open:** This option activates only SIM2.
- **Flight mode:** Disables all RF based communication for both SIM1 and SIM2. However, you can use other features/functions of the phone, such as games and alarm.

Display characteristics

Touch **Menu** → **Settings** → **Display characteristics**. Change the appearance of the phone. The available options are:

- **Wallpaper:** Set favorite wallpaper on the main screen of your phone. You can change the wallpaper of your phone through System or User defined option.
- **Screen saver:** Let you set an image as a screen saver.
- **Show owner number:** Set the status of SIM1 owner number and SIM2 owner number as On/Off.
- **Show operator name:** Set the status of operator name as On/Off.
- **Magic screen effect:** Select the transition effect to display while moving between screens.

Phone setup

Touch **Menu** → **Settings** → **Phone setup**, to view the following options displayed under Phone setup:

Settings

- **Time and date:** Let you set home city, Time and date on the phone.
- **Schedule power on/off:** Let you set a particular time on the phone when the phone should power on/off itself.
- **Language:** This device currently supports English only.
- **Pref. input methods:** This enables you to select the text input method. The available options are: Smart ABC/Smart abc/ Smart Abc, Multitap ABC/Multitap abc, and Numeric input.
- **Greeting text:** Choose the text you want to display each time you switch On your phone.
- **Touch Effect:** Set the phone to vibrate each time you touch an icon to launch it.
- **UART setup:** Dual SIM phone usually need to setup UART. You can choose SIM 1 or SIM 2.

- **LCD backlight:** Controls the brightness and time for which backlight displays.
- **Motion sensor settings:** Using the built-in motion sensor, you can perform the tasks just by shaking the phone.

The Motion sensor settings sub-menu displays a list of functions and the action that will result after you shake the phone. Based on your requirement, switch an application and the associated action.

Once you are done, launch the application for which you enabled motion sensing and shake the phone to bring about the desired change. For example, if you enable changing of wallpaper whilst on the idle screen, return to the idle screen and shake the phone, the wallpaper will change.

Call settings

This option enables you to set the Call settings of the phone. The options are:

Settings

Speed dial

Enable or disable speed dial, and associate contacts to the numbers available in the speed dial list.

Closed user group

This is a network based service. It enables to enter group name and edit as per individual requirement. Several numbers can be listed to form a user group. Use this option to specify restrictions to the communication of a user group.

SIM Call Settings

- **Caller ID:** Enables to set the caller ID status of the phone. It is a network based service.
- **Call waiting:** Enables to Activate / Deactivate call waiting and check the query status.
- **Call divert:** You can set to forward the incoming call in different conditions and

enable to Activate/Deactivate call diversion.

- **Call barring:** Enables you to restrict the calls that you make and receive with your phone. You can set outgoing calls, incoming calls, cancel all or change barring password. It is a network based service.

Note: The options are same for both the SIM cards.

Call time display

Set the status of call time display On/Off. After setting this function On, you can view the call time displayed on the screen.

Call time reminder

After setting this function to On, it will offer a warning tone towards the single or periodic setting as your own during the call process, so you will be reminded of the call time at periodic intervals during a call.

Settings

Background sound

You can set background sound while making a call, select Volume of background sound, and also select the options of Effect list.

Answering machine

Configure your phone to automatically play a pre-recorded message each time you are unable to attend a call.

Blacklist

Enables you to add the number in the black list so as to block calls from that number.

Whitelist

Set the status of the white list function. If you set the status On, you will receive the call only from the numbers that you edit in the white list.

Auto redial

Enable to have the device redial a number if it is busy.

Auto Call Disconnect

Set the Auto call disconnect to On/Off.

Touch screen calibration

Calibration is necessary when the coordinates of the area touched on the screen are not sufficiently close to the coordinates on the display. Without proper calibration, software may not respond correctly when a soft button or icon is pressed.

Security setup

Touch **Menu** → **Settings** → **Security setup**.

Under Security setup, we have the following options available:

- **SIM Security Setup**
 - **SIM lock** - Press OK key to enable PIN lock, which will require you to input a password when the mobile phone is switched On. Otherwise, the SIM card is unavailable.

Settings

- o **Fixed dial** - Outgoing calls from your phone can be restricted by making a fixed dialing list that allows only numbers on that list to be dialed from the phone.
- o **Barred dial** - Barred dialing is a SIM card/ Network dependent feature. If your operator supports it, then you can use the facility in the phone.
- o **Change password** - This option enables you to change the password of SIM1/2.

Note: These options are available for both the SIM cards.

- **Phone Lock:** Phone Lock protects your phone from any unauthorized usage or unauthorized access to information stored in the phone. When phone lock is activated, the phone would ask for the phone lock code every time you power-on the phone. Enter the lock code (default as 0000) to use the phone. You can

simply unlock the phone by touching **Menu** → **Settings** → **Security setup** → **Phone lock**, enter the lock code and put it off.

- **Auto keypad lock:** Auto Keypad lock automatically locks the keypad after a preset time interval. You can set the time from 15 seconds to 5 minutes.
- **Privacy Lock:** By entering the password (default as 0000), you can protect your SMS, Phonebook, Call History, MMS and Storage data.
- **Change password:** Change password option to change Phone lock password.
- **Mobile Tracker:** This function enables you to track your phone in case it gets lost. The default password for mobile tracker is 0000. If someone inserts another SIM card in your mobile, you will receive an SMS to the assigned number from the new SIM card

Settings

to know who is using your mobile. You must keep the Mobile Tracker Status ON and set the number on which you can receive the SMS.

Network setup

Network setup provides user the option to select a desired network and addition of a new network to the network list. The network setup gives you the option:

- **SIM Network setup:** The options available under network setup are:
 - o Network selection
 - o Preferences

Restore factory settings

Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is set as 0000.

User profiles

This function allows you to set the ring tone, alert type, ring volume, etc. when you receive an incoming call or a new message so that you can adapt the use of your phone to different types of call environments. The available profiles include General, Meeting, Outdoor, Indoor, and Headset, Bluetooth, Save power, and Silence.

Services

STK

The submenus of this feature depends on the operator and different operators may provide different services (some SIM cards do not support STK), which cannot be modified. Please contact your operator.

WAP

WAP or Wireless Application Protocol browser provides all the basic services of a computer based web browser but is simplified to operate within the restrictions of a mobile phone. The WAP Browser has the following options:

- **Homepage:** Homepage allows you to enter the default URL on the phone. This will enable you to go to the same page every time you access the homepage.
- **Bookmarks:** Bookmarks enable you to mark a place in an electronic document or a pointer (primarily to an internet URL) in an Internet web browser.
- **Recent pages:** Recent Pages store the list of URLs which have been recently visited by you on the WAP browser.
- **Offline pages:** Offline Pages store the list of URLs which you have saved.
- **Input address:** Enter the desired address (URL) of the website or webpage in this column.
- **Service inbox:** Service Inbox receives and stores URLs through text messages from the operator. You can read them and accept to go to the web page and browse.
- **Settings:** You can vary the following settings:
 - o Select SIM
 - o Edit account

Services

- o Browser options
- o Service message settings
- o Clear cache
- o Clear cookies
- o Trusted certificates

Data account

Data account contains two types of accounts used to establish GSM/GPRS connections for WAP, MMS and www browsing.

- GSM data
- GPRS

NOTE: Select the appropriate setting from the list for using a particular feature depending on the availability of the operator services.