

Explore your MOTOROLA **CRUSH**™



HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »





All screen images simulated

TUTORIAL







HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Know your phone (basics)

The important keys and connectors.



MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Windows and Windows Media Player are registered trademarks of Microsoft Corporation in the U.S. and other countries. All other product or service names are the property of their respective owners.

© 2009 Motorola, Inc. All rights reserved.

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/ or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this tutorial, are based on the latest available information and are believed to be accurate at the time of publication. Motorola reserves the right to change or modify any information or specifications without notice.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO >>

- support site
- download user guide (PDF)


PRINT >>

VIEW >>

EXIT »

One touch and you're done

Cut your time in half. One-touch access to most commonly used functions allows you to be connected instantly and easily. Convenient touch keys navigate you to the correct screens on the first try.

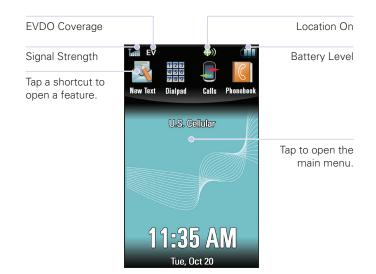

Silence, only a tap away

A movie theater and a ringing phone don't go together. Instead of fumbling in your pocket or purse, just tap the exterior of the phone to silence the ringer.











HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>


VIEW »

EXIT >>

How fast can u text?

Text your friends and family easily with your high-accuracy digital QWERTY keypad. The keypad automatically rotates to landscape mode for larger key access.

To **change text entry mode**, tap the mode key in the lower left corner of the screen:

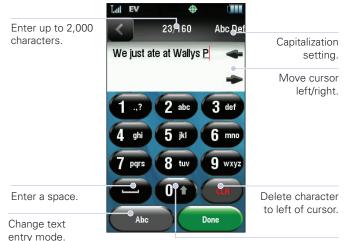

Select uppercase or lowercase text.



When entering text, tap **0** to select the letter capitalization setting (no capitals, all capitals, first letter capitalized, first letter in sentence capitalized).

To **accept** a word completion, tap the text entry area.

entry modes

iTAP	The phone predicts the word you want, with just one key tap per letter.
Abc	Tap a key repeatedly to cycle through its letters and number.
123	Enter numbers only. Shortcut: In other modes, tap and hold a number key to enter its number.
Symbols	Enter symbols. Shortcut: In other modes, tap 1 to enter basic symbols or punctuation.

Tip: To **move the cursor**, tap where you want it to appear. You can also press the volume keys or tap the touch screen navigation arrows to move the cursor.

Tip: A few ways to make your phone even easier to use.

To lock the touch screen and keys press the lock key ?.

To **unlock** your phone, drag the unlock button to the right in the touch screen.

Set airplane mode:

To turn off your phone's calling and wireless connectivity features where prohibited, open the main menu, tap

Settings > Phone >
Phone Settings, then tap the Airplane Mode button.

Create a voice record:

To **create** a voice record, press and hold the voice key on the side of your phone (page 2).

To **listen** to the voice record, open the main menu, then tap Multimedia > Sounds > Voice record









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

\/|F\// **>>**

EXIT »

See it, capture it, send it!

Your Motorola Crush™ takes and sends high-quality video and pictures to help capture the moments when you really just had to be there.

Capture the moment

To turn on the camera: Open the main menu, then tap **Multimedia** > **Camera**.



To take a photo:

- 1 Point the camera lens at the subject.
- 2 Press the camera key to take the photo.
- 3 Your phone shows options to Send, Send to Online Album, or View the photo, then returns to the camera viewfinder.



Record & send videos

To turn on the video camcorder: Open the main menu, then tap **Multimedia** > **Camcorder**.



To record a video:

- 1 Point the camera lens at the subject and select the camcorder icon on the screen to switch to camcorder mode.
- 2 Press and hold the camera key to start recording.
- 3 Press the camera key again to stop recording.
- 4 Your phone temporarily shows options to Send or Erase the video, then returns to the camcorder viewfinder.



SHORTCUT: Press the camera key on the side of your phone for instant access to your phone's camera.

TIP: Hold the phone upright to take a portrait photo, or turn the phone sideways (toward the left) to take a landscape photo.

HINT: Your photo/video is automatically saved in phone memory or on the memory card (depending on your settings).

SHORTCUT: When the camera is on, tap the camera viewfinder screen, then tap the camcorder icon to turn on the video camcorder.

NOTE: Turn the phone sideways (toward the left) to record a camcorder video.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

When music is what you need...

Never miss a beat with the Motorola Crush built-in music player. Motorola Crush makes for easy listening with a 3.5mm headset jack. Get, transfer and play your favorite tunes anytime!

 
Get music

Just load your favorite music onto your Windows® PC, then transfer the music from the PC to your phone.

- 1 On your Windows PC, open Windows Media Player 11.
- 2 Insert a CD in your computer's CD drive.
- 3 In the Windows Media Player window, click the "Rip" tab.
- 4 Select the songs you want to import and click "Rip Music."



**If your computer is connected to the Internet, the media player may retrieve information such as song titles, album name, artist name, and album artwork. This information will appear in your phone's music player screen after you transfer the music to the phone.



Note: Your phone supports Microsoft® Windows® XP and Windows Vista®. Other operating systems may not be compatible.

Note: Your phone does not support DRM-protected song files. It can play the following types of song files: **MP3**, **AAC**, **WMA**, **M4A**.

Note: The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Transfer music

To connect your phone to your Windows PC:

- 1 Insert a microSD memory card into your phone.
- 2 Set your phone to mass storage mode: Open the main menu, then tap Settings > Phone > Phone Settings > USB Mode > Mass Storage.
- 3 Connect a Motorola Original USB cable (not included) to your phone and your PC.









NOTE: Your phone does not come with a microSD card. To transfer music, you must purchase one.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>


VIEW »

EXIT >>

Transfer music (cont)

Now that you've connected, use USB drag and drop to copy your music:

- 1 On your Windows PC, double-click on "My Computer" to find the "Removable Disk" icons for your phone and memory card.
- 2 Double-click the "Removable Disk" icon for the memory card.
- 3 In the "Removable Disk" window, create the "Music" folder (if it doesn't already exist).
- 4 Drag and drop song files onto the "Music" folder.
- 5 When you're done, right-click the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen, then select "USB Mass Storage Device" (your memory card).
- 6 Disconnect the USB cable.

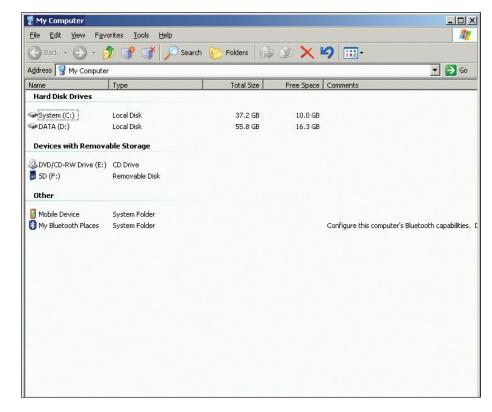

Note: The music player checks for songs only in the "Music" folder.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

\/|F\// **>>**

EXIT >>

Play music


Even personalize your music collection by creating your own playlists:

- 1 Open the main menu, then tap **Music Player** > **Playlist**.
- 2 Create new, then enter the name for the playlist and tap **Done**.
- 3 Tap the songs you want to add to the playlist. The songs you select are identified by a checkmark.
- 4 Tap **Done** when you're done adding songs.

To add a song to a playlist: Drag across the playlist from left to right to highlight it, then tap **Options** > **Add Songs**.

To remove a song from a playlist: Tap the playlist, drag across the song from left to right to highlight it, then tap **Options** > **Remove from Playlist**.

To delete a playlist: Drag across the playlist from left to right to highlight it, then tap Options > Remove Playlist.

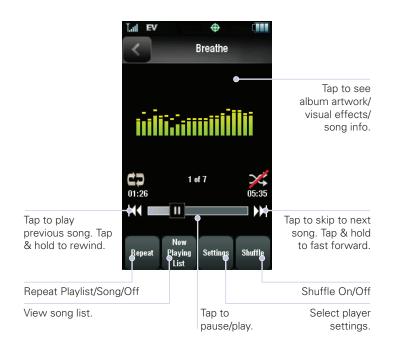

Note: If you can't find artist, album, or genre information for a song, the information may not be available.

Note: Playlist names cannot exceed 32 characters, and cannot include the characters / \: * ? < > | "







HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO »

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Lose the wires with wireless connectivity

Setting up a Bluetooth device can add even more portability and accessibility to your Motorola Crush.

Turn Bluetooth power on or off

Open the main menu, tap Bluetooth, then tap the Bluetooth Power button to turn it On or Off.



Connect new devices

To connect with a new device, you need to pair with it. You'll only need to do this once for each device.

- 1 Make sure the Bluetooth device you are pairing with is in discoverable mode.
- 2 Open the main menu, then tap *Bluetooth > DeviceList/NewDevice > Add New.



- 3 Tap **OK** to search for available Bluetooth devices. Your phone will list the devices it finds within range.
- 4 Tap **Pair** next to the device you want to connect. Your phone will attempt to pair with the device.
- 5 If prompted, enter the device PIN or passkey (usually set to 0000).



Note: To extend battery life, set Bluetooth Power to Off when not in use.

Note: If Bluetooth power is not turned on, your phone prompts you to turn it on.

Tip: For more Bluetooth support, go to www.motorola. com/Bluetoothsupport.

This device supports Bluetooth DUN, HS, HF, AT, FTP, OPP, BIP, BPP, A2DP and AVRCP profiles. In order for Bluetooth devices to communicate with one another, they must utilize the same Bluetooth profile. To determine the profile supported by other Motorola devices, visit www.hellomoto.com/bluetooth.

For maximum Bluetooth security, always connect Bluetooth devices in a safe, private environment.









HOME »

LESSON:

KNOW YOUR PHONE >>

- phone overview
- one-touch access
- text entry

CAMERA, PICTURES & VIDEO >>

- camera settings
- taking/sharing pictures
- taking/sharing video

MUSIC >>

- transfer music
- playing music
- setting up Bluetooth® headset

PEDOMETER >>

- setup
- tracking your steps

MORE INFO >>

- support site
- download user guide (PDF)

PRINT >>

VIEW »

EXIT »

Feel the burn while you track your steps with the built-in pedometer!

The pedometer counts and reports your steps—it's your ideal fitness companion.

To set up a daily exercise routine with the pedometer:

1 Open the main menu, then tap % Tools > Pedometer > Setup to set a daily steps goal, set the measurement units (US or metric), and set up your physical profile (gender, weight, and height).



Using your pedometer:

To view your step counts for the past 30 days, open the main menu, then tap **%Tools** > **Pedometer** > **History**.



2 Tap (), then tap **Turn On** to turn on the pedometer. The pedometer counts the number of steps you take each day, and lists the approximate number of calories used and distance walked for the day.



To turn off the pedometer, open the main menu, then tap **%Tools** > **Pedometer** > **Turn Off**.



Note: Pedometer report numbers are estimates and may not be totally accurate.