



MOTOMANUAL


V265 CDMA

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V265 wireless phone.



Check It Out!

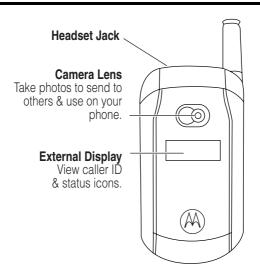

Feature	Description	
Take Photo	Open the phone, press the camera key to activate the camera, point lens at subject, press the camera key or CAPTURE () to take a photo.	
Send Photo	Send the photo to a phone number Press STORE () > Send in Message .	

Feature	Description
Send Multimedia	Send a multimedia message
Message	with pictures, animations, and sounds:
	Press 📀 to scroll to 🗀 (Message
	Center), then > Create Message > New MMS Msg
Send Text	Send a text message:
Message	Press 💮 to scroll to 🖂 (Message 🕺 📆 🖳
	Center), then > Create Message
	> New Short Msg
Read	Read a new multimedia
Multimedia	message or letter that you have
Message	received: Press READ ().

Motorola, Inc. Consumer Advocacy Office 1307 East Algonquin Road Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

www.motorola.com (United States) www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual number: 6809490A02-O

Contents

Getting Started	8
About This Guide	8
Installing the Battery	8
Battery Use	. 10
Charging the Battery	. 11
Removing a Flip Cover	. 12
Attaching a Flip Cover	. 12
Turning On Your Phone	. 12
Adjusting Volume	. 13
Making a Call	. 14
Answering a Call	
Changing the Call Alert	. 15
Viewing Your Phone Number	. 16
Highlight Features	. 17
Taking and Sending a Photo	. 17
Sending a Multimedia Message	. 19
Receiving a Multimedia Message	. 23
TTY Operation	. 23
Learning to Use Your Phone	. 26
Using the Display	. 26
Using the 5-Way Navigation Key	. 28
Using Menus	. 29
Entering Text	. 32
Using the Handsfree Speaker	. 41
Using the External Display	. 42
Changing a Code, PIN, or Password	. 44
Locking and Unlocking Your Phone	
If You Forget a Code, PIN, or Password	. 46

Setting up Your Phone	47
Storing Your Name and Phone Number	47
Setting an Alert Style	47
Setting Answer Options	48
Setting a Wallpaper Image	49
Setting a Screen Saver Image	50
Setting Display Contrast	51
Adjusting the Backlight	51
Hiding or Showing Location Information	52
Conserving Battery Power	53
Calling Features	54
Changing the Active Line	54
Redialing a Number	54
Using Automatic Redial	54
Turning Off a Call Alert	55
Calling an Emergency Number	55
Using AGPS During an Emergency Call	56
Viewing Recent Calls	57
Returning an Unanswered Call	58
Using the Notepad	59
Attaching a Number	60
Calling with Speed Dial	60
Calling with 1-Touch Dial	60
Using Voicemail	61
Phone Features	63
Main Menu	63
Calling Features	65
Messages	65
Contacts	67
Personalizing Features	70
Menu Features	77

Dialing Features	8
Call Monitoring	8
Handsfree Features7	9
Data and Fax Calls	1
Network Features	1
Personal Organizer Features	2
Security8	3
News and Entertainment	4
Specific Absorption Rate Data 8	5
Index	7

Getting Started



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories



This label identifies a feature that requires an optional Motorola Original® accessory.

Installing the Battery

 
You must install and charge the battery to use your phone.




Your phone is designed to use only Motorola Original batteries and accessories.



1 Press the release button on the battery cover.



 
2 Slide the cover back, then lift it away from the phone.



3 Insert the battery with the tabs toward the front and facing down.



 4 Lower the battery cover onto the phone, then slide it forward until it clicks into place.



Battery Use

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

Always use Motorola Original[™] batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



New batteries or batteries stored for a long time may take more time to charge.

When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.

Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.

It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.



Action

1 Plug the travel charger into your phone with the release tab facing up.



 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least 1 segment of the battery level indicator must be visible to ensure full phone functionality while charging.

Removing a Flip Cover








Notes:

- Do not use tools to remove a flip cover. Using tools to remove a flip cover will damage the cosmetic appearance of the phone.
- The flip cover is attached tightly to the phone.
 Considerable force is required to remove it.

Attaching a Flip Cover

Action

 Insert the tabs at the top of the cover into the slots at the top end of the phone, then push the cover down to snap it into place.



Turning On Your Phone

 
Action

 
1 Open your phone.

Action

2 Press and hold the power key for 3 seconds.


The phone may require several seconds to power on.





Adjusting Volume

 Press the up or down volume keys to:



- · increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open—see "Adjusting Volume" on page 13)
- turn off an incoming call alert



Making a Call

 


Action

Dial the number.

Tip: If you make a mistake, press the clear key to delete the last digit. Press and hold to clear all digits.

- 2 Press to make the call.
- 3 Press (5) to end the call.



Tip: You can also close the flip to end the call.

Note: You must dial the phone number from the home screen. See page 26.

Answering a Call

When you receive an incoming call, your phone rings and/ or vibrates and displays an incoming call message.

Note: If the phone is locked, you must unlock it to answer the call.

Phone Flip Open

Action

- 1 Open the flip to answer.
- 2 Close the flip to end the call.

Tip: To deactivate this feature, press = > Settings

> In-Call Setup > Answer Options > Open to Answer.

Phone Flip Closed

Action

 
- 1 Press to answer.
- 2 Press (3) to end the call.



Changing the Call Alert

Phone Flip Open

In the home screen, press the down volume key to switch to lower call alert volume, then switch to vibrate and, finally,



silent alert. Press the up volume key to cycle back from silent alert to vibrate and then to the lowest alert volume setting.

Phone Flip Closed

Press the up or down volume key, then press the speakerphone key to scroll through the alert styles: **Loud**,



Soft, Vibrate, Vibe & Ring, and **Silent**. The alert styles are shown on the external display.

After scrolling to the desired alert style, press the up or down volume key to save the setting and return to the home screen.

Viewing Your Phone Number

While you are on a call, press = > My Tel. Numbers.

Highlight Features


You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.



Taking and Sending a Photo

From the home screen, press the camera key $\ \ \ \ \ \ \ \$ to activate your phone's camera.

The active viewfinder image appears on your phone's display.

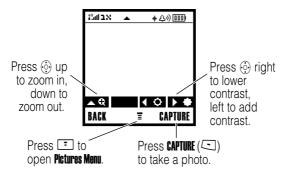

Point the camera lens at the photo subject, then:

	Press	То
1	0	take a photo
	or	
	CAPTURE (🗀)	
2	STORE (=)	view storage options
		If you choose to store the photo, continue to step 3.
	or	
	ERASE (-)	delete the photo and return to active viewfinder
3	③	scroll to Send in Message, Send to Online Album, Store Only, Apply as Wallpaper, or Apply as Screen Saver.
4	SELECT (=>)	perform the storage option of your choice

Pictures Menu Options

When the camera is active, press to access the **Pictures Menu**. The **Pictures Menu** can include the following options:

Option	Description	
Go To Pictures	View pictures and photos	
	stored on your phone.	

Option	Description
Auto-Timed Capture	Set a timer for the camera to take a photo.
Delete All	Delete all pictures.
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains for storing pictures.
Adjust Contrast	Increase or decrease contrast.
Capture Title	Assign a name to a captured photo.



Sending a Multimedia Message



A Multimedia Messaging Service (MMS) multimedia message contains 1 or more slides with text and embedded media objects (possibly including photos, pictures, animations, sounds,

voice records). You can send the multimedia message to other wireless phone users and to other email addresses.

Note: You can send the message after entering a recipient phone number and the message text. You do not need to complete other fields.

	Press	То
1	:	scroll to 🖾 (Message Center)
2	:	scroll to Create Message
3	SELECT (=>)	select Create Message



	Press	То
4	:	scroll to New MMS Message
5	SELECT (=>)	select New MMS Message
6	keypad keys, then OK (二)	enter a phone number
	or	
	CONTACTS (=), ③, then ADD (=) and DONE (=)	open Contacts , then scroll to and select 1 or more existing Contacts entries
7	keypad keys	enter slide text
		To add another slide to the message, continue to the next step.
		To insert a media object, go to step 8.
8	Ī	open the menu to insert a new slide
9	SELECT (=)	display a list of items you can insert
10	(⊙	scroll to New Page
11	SELECT (=)	insert a new slide after the current slide
		Return to step 2 to enter contents for the new slide.
12	Ī	open the menu
13	· •••	scroll to insert

Press	То
14 SELECT ()	display a list of items you can insert
15 📀	scroll to Voice Record, Sound, New Page, or Quick Ext
16 SELECT (🗀)	select the file type
17 💮	scroll through the files to the desired selection
18 SELECT (-)	select and insert the file
	Return to step 8 to add more media files.
19 OK (三)	save all inserted files
20 💮	scroll to Subject
21 CHANGE (-)	select Subject
22 keypad keys	enter the subject
or	
QK.NOTE (ニ),	open the Quick Notes list,
then 📀 and	then scroll to and select a
OK (三)	Quick Note as a subject
23 OK (三)	store the subject
24 💮	scroll to Attachments
25 CHANGE (-)	select Attachments
26 💮	scroll to Picture or Sound
27 SELECT ()	select the file type
28 💮	scroll through the files to the one you want
29 SELECT ()	select and insert the file





	_
Press	То
30 BACK (🔄)	return to the New MMS Message
	screen
or	
⊙, then	add more attachments
SELECT ()	
	II I - Bulantin
31 🍥	scroll to Priority
32 CHANGE (🗀)	select Priority
33 💮, then	scroll to and select Normal or
SELECT (=>)	Urgent, then return to the New
, ,	MMS Message screen
24 🖒	
34 💮	scroll to Receipt
35 CHANGE (🗀)	select Receipt
36 ADD (三)	with Delivery Report highlighted,
, ,	select it
37 SEND ()	send the message
37 OLND ()	send the message
or	
Ī	send the message later, view
	message details, save the
	<u> </u>
	message in the drafts folder,
	or cancel the message

Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the ☐ (message waiting) indicator and a New Message notification, and sounds an alert.



Press	То
READ (🗀)	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file begins playing when its slide is displayed.
 Use the volume keys to adjust the volume as the sound file plays.

Note: In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file.

Attached files are appended to the message. To open the attachment, highlight the file indicator/filename and press VIEW ((image file type), PLAY ((sound file), or OPEN (() (vObject such as a Contacts or datebook entry, or unknown file type).

TTY Operation

You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into

the phone's headset jack and set the phone to operate in 1 of 3 TTY modes.

Note: Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.

Note: Set the phone to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate.

Note: For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

Setting TTY Mode

When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find the Feature	■ > Settings > Initial Setup
------------------	------------------------------

	Press	То
1	:	scroll to TTY Setup
2	CHANGE (-)	select ITY Setup
3	:	scroll to the TTY mode
4	SELECT (-)	select the TTY mode

The TTY Setup menu can include the following options:

Press	То
Voice	return to normal voice mode
ΠΥ	transmit and receive TTY characters
VCO	receive TTY characters but transmit by speaking into microphone
HCO	transmit TTY characters but receive by listening to earpiece

When your phone is in a TTY mode, the international TTY mode, the international TTY symbol, and the mode setting display during an active TTY call.

Returning to Voice Mode

To return to normal voice mode, select $\mbox{\sc Voice}$ from the $\mbox{\sc TTY Setup}$ menu.


Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display



The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

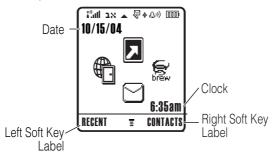


Note: Your home screen may look different than the display shown above.

The (menu) indicator indicates that you can press the menu key () to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen (see page 76). While powered on in analog mode, your phone may not always display the correct time.

The following status indicators can display:

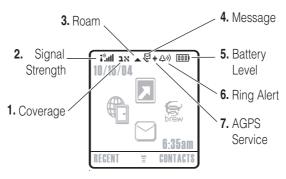



1. Coverage Indicator

2. Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when only the **i**^a (no signal) indicator or **i**^aX (no transmit) indicator is displayed.



3. Roam Indicator Shows when your phone is seeking or using another network outside your home network.



4. Message Indicator Displays when you receive a new message. Indicators can include:

₹[®] = voicemail and text message

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message or letter).

- 5. Battery Level Indicator Vertical bars show the battery charge level. Recharge the battery when Low Battery displays and the battery alert sounds.
- 6. Ring Alert Indicator Shows the ring alert setting.

△୬) = loud ring △୬ = soft ring

諸 = vibrate か = vibrate and ring

ರ್ಷ = silent


7. AGPS Service Indicator Indicates when AGPS Service is off (icon is grey), on (icon is white), or on and finding your location (icon is green).

Using the 5-Way Navigation Key

Use the 5-way navigation key $(\textcircled{\textcircled{}})$ to scroll up, down, left, or right through the menu system. Press the @ key in the center to select a highlighted menu item.

Using Menus

From the home screen, press 🔳 to enter the main menu.

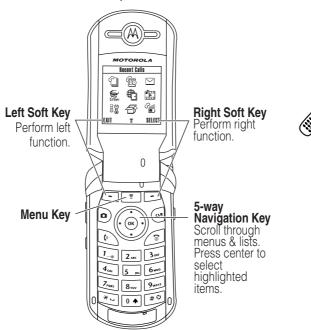

Press 📀 to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that

may appear in the main menu, depending on your service provider and service subscription options.

Menu		Menu	
lcon	Feature	lcon	Feature
	Contacts	æ	Recent Calls
	Message Center	brew.	Brew*
6	Web Access		Media Gallery
8	Settings	a	More
C∰	Phone Info		

Selecting a Menu Feature

This guide uses the following format to show you how to select a menu feature, starting from the home screen.


This example shows that from the home screen, you must press , scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed**. Press to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option

When you select certain features, your phone displays a list of items or options that you can select. For example,

^{*} Optional network/subscription dependent feature


when you view the dialed calls list, you can select an entry and perform additional tasks on that entry:

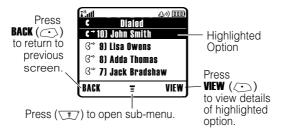


- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option
- When an option has a list of possible values, press left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information. The following is a sample of a screen for **Contacts** entry information.

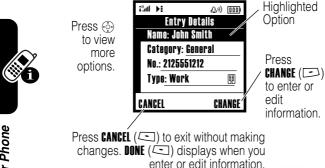

The message center lets you compose and send text messages.

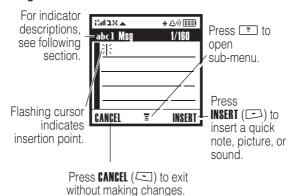

Choosing a Text Entry Method

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press in any text entry screen to select 1 of the following entry methods:

Primary The primary text entry method (see

below to set).

Numeric Enter numbers only (see page 39).

Symbol Enter symbols only (see page 40).

Secondary The secondary text entry method

(see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing $\boxed{=}$ > Entry Mode.

Setting Up a Text Entry Method

Press = > Entry Setup from any text entry screen. Select Primary Setup or Secondary Setup, and choose:

ITAP Let the phone predict each word as

you press keys (see page 37).

Tap Enter letters and numbers by pressing

a key 1 or more times.

Tap Extended Enter letters, numbers, and symbols

by pressing a key 1 or more times.

None Hide the Secondary setting (only

available for Secondary Setup).



Using Capitalization

Press in any text entry screen to change text case. The following indicators show capitalization status:

ABC = all capital letters letter only

Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
lŵ	2 û	Tap, capitalize next letter only
1 †	21	Tap, all capital letters
10	20	iTAP, no capital letters
迎	迎	iTAP, capitalize next letter only
1 1	21	iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry method:

123 = numeric method @ = symbol method

Using Tap Method


This is the standard method for entering text on your phone.

Regular **Tap** method cycles through the letters and numbers of the key you press. **Tap Extended** method also cycles through additional symbols as shown in the "Character Chart" on page 36.

	Press	То
1	a keypad key 1 or more times	select a letter, number, or symbol
2	keypad keys	enter remaining characters
		Tip: Press ⊕ right to accept a word completion, or ເ≥ to insert a space.
3	OK (三)	store the text

In a text entry screen, you can press of to switch entry methods. If Tap or Tap Extended is not available as the **Primary** or **Secondary** entry method, see page 33.

When you enter text with Tap or Tap Extended method, the soft key functions change.

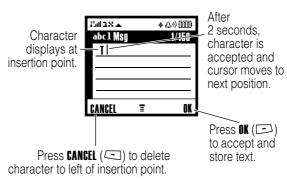



When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter prog you might see:



Press or right to accept Program, or press or to reject it and enter a space after prog.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.

1	.?!,@':;()&"~10¿;%£\$¥¤€ + x * / \ [] = > < # §	
2 мс	a b c 2	
3.11	d e f 3	
4 _{cis}	ghi4	
5 ps.	j k 5	
6 _{unn}	m n o 6	
Zress	pqrs7	
8 ₁₁₀	tuv8	
9 _{sext}	w x y z 9	
0 🛧	change text case, for capital letters	

*1	enter a space (hold to enter a return)
#0	change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In a URL editor, if first shows common characters for that editor.


Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press ② to exit without saving.

Using iTAP™ Method

iTAP™ software provides a predictive text entry method that lets you enter a word using 1 keypress per letter. This can be faster than Tap method, because your phone combines the key presses into common words.



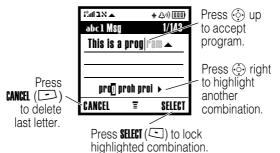

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press 🗐 to switch entry methods. An indicator tells you which method is active (see page 34). If ITAP method is not available as the **Primary** or **Secondary** entry method, see page 33.

	Press	То
1	keypad keys (1 press per letter)	show possible letter combinations at the bottom of the display
2	left or right	highlight the combination you want

	Press	То
3	SELECT (=)	lock a highlighted combination
		You can press keypad keys to add more letters to the end of the combination.
	or	
	*1	enter the highlighted combination when it spells a word
		A space is automatically inserted after the word.



If you enter a word your phone does not recognize, the phone stores it to use as 1 of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Method

In a text entry screen, press 195 to switch entry methods until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press 🗐 to switch to another entry method.

Using Symbol Method

In a text entry screen, press 🗐 to switch entry methods until the @ (symbol) indicator displays.


	Press	То
1	keypad keys (1 press per symbol)	show possible symbol combinations at the bottom of the display
2	left or right	highlight the combination you want
3	SELECT ()	lock a highlighted combination
		You can press keypad keys to add more symbols to the end of the combination.
	or	
	*1	enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol method.

1	.?!,@':;()&"~10¿;%£\$¥¤€ + x * / \ [] = > < # §
2 мс	@ _ \
300	/:;
4 _{cm}	" & '

5 на	()[]{}
6 _{wes}	¿ i ~
Znas	< > =
8114	\$ £ ¥ ¤ €
9,001	# % *
0 🛧	+ - x * / \ = > < # §
***	enter a space (hold to enter a return)
#0	change text entry method (hold for default)

 

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press
Hold ed to delete the entire message.

Using the Handsfree Speaker

Note: You must open your phone's flip to activate the speakerphone.

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.



Press and hold the smart/speakerphone key to turn the handsfree speaker on or off during a call. A soft audio alert confirms activation/deactivation.



When you turn on the handsfree speaker, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press the smart/ speakerphone key again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Using the External Display

When the flip is closed, you can use the external display for the following:

- View time, date, and phone status information.
- · Set phone alert styles.
- View message notifications.

Setting Phone Alert Style via the External Display

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

With the flip closed:

	Press	То
1	volume keys	scroll to \$tyle
2	smart/ speakerphone key	select an alert style
3	volume keys	return to the home screen

Viewing an Unanswered Call via the External Display

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

	Press	То
1	smart/ speakerphone key	view the received calls list
2	volume keys	scroll through and select a call
3	smart/ speakerphone key	view the selected call



Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

Find the Feature

> Settings > Security > New Passwords

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer**.

You can make emergency calls on your phone even when it is locked (see page 55).

Locking Your Phone Manually

Find the Feature

> Settings > Security
> Phone Lock > Lock Now

	Press	То
1	keypad keys	enter your unlock code
2	OK (三)	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the Enter Unlock Code prompt:

	Press	То
1	keypad keys	enter your unlock code
2	OK (==)	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature

> Settings > Security
> Phone Lock

> Automatic Lock > On

	Press	То
1	keypad keys	enter your unlock code
2	OK (=>)	activate automatic lock



If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.



If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

	Press	То
1	Ī	display the unlock code
		bypass screen
2	keypad keys	enter your security code
3	OK (三)	submit your security code

If you forget your security code, contact your service provider.

Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit your name and phone number information on your phone:

Find the Feature

> Phone Info > My Tel. Number

Shortcut: Press from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider. To view your phone number from the home screen or during a call, see page 16.

Setting an Alert Style

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events. This ring or vibration is called an *alert*. Your phone includes the following types of alerts: Ring Volume, Calls, Inbox, Voicemail, Alarms, Data Calls, Fax Calls, Ringer IDs, Key Volume, and Reminders.

You can define 5 groups of alert settings. These groups, called *alert styles*, include **Loud**, **Soft**, **Vibrate**, **Vibe&Ring**, and **Silent**. When you set your phone to use an alert style, the corresponding alert settings become active.



To select an alert style and specify its settings for specific alerts:

Find the Feature

Settings > Ring Styles

Action

- 1 Highlight Style.
- 2 Press CHANGE ().
- 3 Highlight the desired alert style (Loud, Soft, Vibrate, Vibe&Ring, or Silent).
- 4 Press SELECT ().
- 5 Highlight style Detail.
- 6 Press CHANGE ().
- 7 Highlight the setting you want to change: Ring Volume, Calls, Inbox, Voicemail, Alarms, Data Calls, Fax Calls, Ringer IDs, Key Volume, and Reminders.
- 8 Press CHANGE ().
- 9 Set or modify the style as desired.
- **10** Repeat steps 7 9 for all settings you want to change.

Setting Answer Options

You can use additional, alternative methods to answer an incoming call.

Multi-key Open To Answer answer by pressing any key answer by opening the flip



To activate or deactivate an answer option:

Find the Feature

> Settings > In-Call Setup > Answer Options

	Press	То
1	:	scroll to Multi-Key or
		Open to Answer
2	CHANGE (=>)	select the option
3	<u></u>	scroll to On or Off
4	SELECT (=>)	confirm the setting

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen.

Find the Feature

> Settings > Personalize > Wallpaper

	Press	То
1		scroll to Picture
2	CHANGE (=>)	open the picture viewer
3	⊕ up or down	scroll to a picture/animation
		Scroll to [None] to turn off the wallpaper image.
4	SELECT ()	select the image
5	:	scroll to Layout
6	CHANGE (🗀)	adjust the image layout



Press 7 • • •	To scroll to Center , Tile , or Fit-to-screen
	Center places the image in the center of the display.
	Tile fills the display with adjacent copies of the image.
	Fit-to-scroon resizes the image, if necessary, to fit the display.
8 SELECT ()	confirm the layout setting
9 BACK (🔄)	save wallpaper settings

Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for 1 minute, then the first frame of the animation displays.


Tip: Turn off the screen saver to extend battery life.

Press	То
1 💮	scroll to Picture
2 CHANGE ()	open the picture viewer

	Press	То
3	up or down	scroll to a picture/animation
		Scroll to (None) to turn off the screen saver image.
4	SELECT (=)	select the image
5	:	scroll to Delay
6	CHANGE (🗀)	set the delay interval
7	ⓒ	scroll to the inactivity interval that triggers the screen saver
8	SELECT (=)	confirm the delay setting
9	BACK (=)	save screen saver settings

Setting Display Contrast

 Find the Feature



Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.



Hiding or Showing Location Information



Your phone can use the *automatic location information* (ALI) feature to tell the network where you are physically located.

Find the Feature

٢	Ŧ	_	tta2	enni	\	Location
ι		_	OBLL	шиа	_	LUGALIVII

Press	То
1 💮	scroll to Location On or 911 Only
2 SELECT ()	select the setting

Limitations of AGPS

Sometimes adequate signals from multiple satellites are unavailable, usually because your AGPS phone's antenna cannot establish a view of a wide area of open sky. In these cases, the AGPS feature **will not work**. Such situations include, but are not limited to, the following:

- · in underground locations
- · inside of buildings, trains, or other covered vehicles
- · under any other metal or concrete roof or structure
- · between tall buildings or under dense tree cover
- · near a powerful radio or television tower
- when your AGPS antenna is covered (for example, by your hand or other object) or facing the ground
- when there are temperature extremes outside the operating limits of the phone

Even where location information can be calculated in such situations, it may take more time than usual, and your location estimate may not be as accurate.

Even where adequate signals from multiple satellites are available, your AGPS feature will provide only an approximate location, often within 150 feet (45 meters) but sometimes much farther from your actual location.

The satellites used by your phone's AGPS feature are controlled by the U.S. government and are subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes may affect the performance of your phone's AGPS feature.

Conserving Battery Power

Some networks and phones include a battery save setting to extend battery life. When this feature is activated, your phone automatically turns off the keypad backlight when it detects that enough ambient light is available.

Find the Feature

Settings > Initial SetupBattery Save

Calling Features

For basic instructions on how to make and answer calls, see page 14.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Find the Feature



Redialing a Number

	Press	То
1		view the dialed calls list
2	\odot	scroll to the entry you want to call
3		redial the number

Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed**, **Number Busy**.

With automatic redial, your phone automatically redials the number for 4 minutes. When the call goes through, your phone rings or vibrates 1 time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Falled**:

Press	То
🖎 or Retry (🗀)	activate automatic redial

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	То
either volume key	turn off the alert

Calling an Emergency Number

Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be



placed due to network, environmental, or interference issues.

	Press	То
1	keypad keys	dial the emergency number
2	0	call the emergency number

Using AGPS During an Emergency Call



When you make an emergency call, your phone's assisted-Global Positioning System (AGPS) feature can calculate your approximate location and help emergency service personnel find you.

Notes:

- This feature can work only if the emergency response center can receive and process location information. If you are concerned about whether your local emergency response center can receive AGPS location information, contact your local authorities.
 - In order for the AGPS feature to work when making emergency calls, the service must be turned on. See page 52.

For best results, you should be located where your phone's antenna can establish a clear view of the open sky. This allows your phone to access AGPS satellite signals. Even under good conditions, it may take 30 seconds or more to determine your approximate location.





This time increases and the accuracy of the results decreases with reduced access to satellite signals.

If your phone does not have adequate access to AGPS satellite signals, the location of the nearest cell tower in contact with your phone is automatically provided to the emergency response center.

Because of the limitations of the AGPS feature, always provide your best knowledge of your location to the emergency response center, just as you would when using a phone without AGPS capabilities. Also, remain on the phone for as long as the emergency response center instructs you.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press from the home screen to view the dialed calls list.

Find the Feature



	Press	То
1		scroll to Received or Dialed
2	SELECT (=)	select the list
3		scroll to an entry
		Note: ✓ means the call connected.



	Press	То
4		call the entry's number
	or	
	VIEW (二)	view entry details
	or	
	Ī	open the Last Calls Menu to perform various operations on the entry

The Last Calls Menu can include the following options:

Option	Description
Store	Create a Contacts entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the Io field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from Contacts or the recent calls lists.



Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

• the T+ (missed call) indicator

• X Missed Calls, where X is the number of missed calls

	Press	То
1	VIEW (🗀)	see the received calls list
2	:	select a call to return
3		make the call

Using the Notepad

The most recent set of digits that you enter are stored in your phone's *notepad* memory. This can be a phone number that you called or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature	🔳 > Recent Calls > Notepad
------------------	----------------------------

Press	То
	call the number
or	
Ī	open the Dialing Menu to attach a number or insert a special character
or	
STORE ()	create a Contacts entry with the number in the No. field



Attaching a Number

While dialing (with digits visible in the display):

Press	То
> Attach Number	attach a number from Contacts
	or the recent calls list

Calling with Speed Dial

Each entry you store in **Contacts** is assigned a unique *speed dial* number.

Tip: To see an entry's speed dial number, press

> Contacts, scroll to the entry, and press VIEW ().

To speed dial a **Contacts** entry:

	Press	То
1	keypad keys	enter the speed dial number for the entry you want to call
2	#3	submit the number
3		call the entry



Calling with 1-Touch Dial

To call **Contacts** entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

From the home screen:

	Press	То
1		scroll to 🖾 (Message Center)
2	:	scroll to VoiceMail
3	CALL (□)	call VoiceMail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Tip: Your service provider may also store your voicemail phone number as **Contacts** entry number 1. If so, you can press and hold to call your voicemail number.



Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the (voicemail message) indicator and a **New VoiceMail** notification.

Press	То
CALL (=)	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

	Press	То
1		scroll to 🗀 (Message Center)
2		scroll to Message Settings
3	SEELCT (三)	select Message Settings
4		scroll to VoiceMail No .
5	CHANGE (二)	select VoiceMail No. to enter or change the number




Phone Features

This section helps you locate features on your phone that are not described in detail in this guide.

Main Menu

Web Browser Web Sessions

This is the standard main menu layout. **Menu** organization and feature names may vary on your phone. Not all features may be available on your phone.

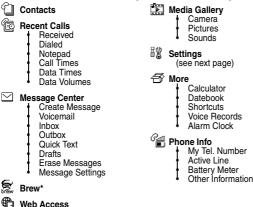

^{*}Your service provider may use a different name for the Brew feature.



Settings Menu

Ring Styles

Style Style Detail

■ Personalize

Home Screen
Main Menu
Voice Dial Setup
Color Style
Greeting
Wallpaper
Screen Saver

Sound Settings

ß In-Call Setup

In-Call Timer
Answer Options
MSG Alert

Security

Phone Lock
Lock Application
Restrict Calls
New Passwords

Time and Date

All Initial Setup

SpeakerPhone
Auto PIN Dial
Auto Redial
Backlight
TTY Setup
Scroll
Language
Battery Save
Contrast
DTMF
Hyphenation
Master Reset

Network Options

Current Network
Analog Only
Set Mode
Service Tone
Call Drop Tone

Master Clear

Car Settings

Auto Answer
Auto Handsfree
Power-off Delay
Charger Time

Headset

Auto Answer
Voice Dial

⊕ Location

Location On 911 Only

[™] Connection

Incoming Call

Shortcuts

Change ringer alert:

Open flip, press down volume key to decrease volume, then switch to vibrate alert, then silent alert. Press up volume key to reset ring alert and increase volume.

Display my phone number:

Press (from home screen).

Go to dialed calls list:

Press (from home screen).

Exit menu system:

Press 🗐.



Calling Features

Feature	Description
Restrict Calls	Restrict outgoing or incoming calls:
TTY Calls	Set up your phone for use with an optional TTY device: > Settings > Initial Setup > TTY Setup

Messages

Feature	Description	
Send Text	Send a text message:	NOTK I Subsc
Message	Press ⊕ to scroll to □	
	(Message Center), then	Sondent Feetle
	> Create Message	
	> New Short Msg	
Send	Send a multimedia	Nork I Subscr
Multimedia	message:	
Message	Press ⊕ to scroll to ⊡	Stendent Feetling
	(Message Center), then	
	> Create Message > New MMS Msg	
Insert	While composing a text	MOTH I Subsc
Objects In	message:	
Text	= > Insert	Sondent Feetle
Message		



Feature	Description	
Use MMS	Open an MMS template	MO ^K / Subsc
Template	with preloaded media:	
	Press ⊕ to scroll to □	Sondent Festill
	(Message Center), then	
	> Create Message > MMS Template	
Read	Read a new text or	N Subscript
Message	multimedia message that	
	you have received:	Sondent Febru
	Press READ (三).	
Store	Go to a multimedia	WORK I Subscribe
Message	message slide, or highlight	
Objects	an object in a letter, then:	Sondent Felili
	= > Store	
Quick Text	Send or create a quick note	WISUbsc
	message:	
	Press ⊕ to scroll to □	Sondent Febru
	(Message Center), then	
	> Quick Text	
Sent	View sent messages:	N Subscript
Messages	Press ⊕ to scroll to □	
	(Message Center), then > Outbox	Sondent Felili
Received	Read received messages:	work / Subscribe
Messages	Press ⊙ to scroll to □	
	(Message Center), then > Inbox	Bendent Felille
	Tip: Press 🔳 to perform va	arious
	operations on the message.	



Feature	Description
Drafts	View messages saved in drafts folder: Press ③ to scroll to 🖂
	(Message Center), then > Drafts
Erase	Delete all messages or only
Messages	messages from the Outbox or drafts folder:
	Press ⊙ to scroll to ⊡
	(Message Center), then > Erase Messages

Contacts

Feature	Description
Create Entry	Create a new Contacts entry:
	> [New Entry] > Phone Number
Create	Create a group mailing list as a
Group	Contacts entry:
Mailing List	= > Contacts
	= > [New Entry > Mailing List
Dial Number	Call a number stored in Contacts:



Feature	Description
Voice Dial Number	Dial a Contacts entry by saying the entry's name: Press and release the voice key, then (within 2 seconds of being prompted) say "Name dial." When prompted again, say the name of a Contacts entry.
	Note: All Contacts entries are automatically stored as voice dial numbers.
Digit Dial Number	Dial a number by saying the digits in the number: Press and release the voice key, then (within 2 seconds of being prompted) say "Digit dial." When prompted again, say the number you wish to call.
	Note: You can use digit dial for numbers not stored in Contacts .
Set Ringer ID for Entry	Assign a distinctive ringer alert to a Contacts entry: > Contacts > entry > Edit > Ringer ID > CHANGE > ringer name
Set Category for Entry	Set the category for a Contacts entry: Set the category for a Contacts entry: Set the category > CHANGE Set the category for a Contacts entry: Set the category for a Contacts entry: Set the category for a Contacts entry:



Feature	Description
Sort	Set the order in which Contacts entries
Contacts	are listed:
List	= > Contacts
	= > Setup > Sort by > sort order
Set Primary	Set the primary number for a contacts
Number	entry with multiple numbers:
	= > Contacts > entry > SELECT
	> Set Primary > phone number
\(\alpha\)	·
View	Set to view only primary numbers or
Primary or	all numbers when viewing entries:
All Numbers	> Contacts > entry
	> Setup > SELECT > CHANGE
	> All Contacts or Primary Contacts
Edit Entry	Edit a Contacts entry:
	= > Contacts > entry
	=> Edit
Delete Entry	Delete a Contacts entry:
	= > Contacts > entry
	= > Delete
Сору	Copy a Contacts entry to another
Contacts	location in Contacts :
Entry	= > Contacts > entry
	= > Copy Entry > location number



Feature	Description
Copy Multiple	Copy a Contacts entry to another location in Contacts:
Contacts	= > Contacts > entry
Entries	> Copy Entries > From(start): > location number > From(end):
	> location number > Tolktart): > location number

Personalizing Features

Using Voice Commands

You can place calls and access some menu options by speaking commands to your phone:

Action

1 Press and release the voice button on the right side of the phone.

Note: If **Speakerphone** is not already turned on and you want to activate it, press the smart/speakerphone key on the left side of your phone. You can then speak the commands aloud, and hear phone prompts played out loud.

Your phone displays Say a command.

2 Say 1 of the following commands:

Name Dial, Digit Dial, Camera, Voicemail, Redial, Received Your phone opens the corresponding menu or performs the corresponding action.



To Place Calls

Advanced Voice Dialing lets you use voice commands to place a call:

- Use Name Dial to dial a Contacts entry by speaking the name of the entry.
- Use Digit Dial to dial any number by speaking the digits in the number.

Note: This feature recognizes only 7-digit, 10-digit, and 11-digit numbers. It will **not** dial 3-digit numbers such as 911. To make an emergency call, use the phone keypad to dial and send the number.

Action

- 1 Press and release the voice button on the right side of the phone.
 - Your phone displays **Say a command** and plays the same prompt out loud.
- 2 Say "Name Dial" or "Digit Dial."
- **3** When prompted, say the name of the **Contacts** entry or speak the digits in the phone number.
 - If the phone recognizes the name or number, it places the call.

If the phone asks you to repeat a name or number, say it again. If the name or number is not valid or not recognized, the phone does not place the call.



Action

If the phone does not recognize the name or number, it displays a list of up to 3 names or numbers, asks, "Did you say ...," and highlights the first item in the list.

 If the item is correct, say "Yes" to place the call.

or

 If the item is not correct, say "No" to go to the next item.

or

Press to scroll to the correct item and press YBS ().

or

 Press the voice button to exit the list and repeat the name or number.

If you reach the end of the list without confirming a listed item, the phone asks if you want to try again. Say "Yes" if you want to speak the name or number again. Say "No" to exit without placing a call.

Tip: When saying a number, speak at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.



To Adapt Advanced Voice Dialing to Your Voice

For most people, Advanced Voice Dialing works well without any initial setup. However, if the phone is frequently unable to recognize numbers correctly when you use Advanced Voice Dialing, you may be able to improve your results by adapting it to your voice.

Note: If the phone is used by several people, reset Advanced Voice Dialing to its original setting before proceeding. This ensures that you are not saving your settings over someone else's.

Adapting Advanced Voice Dialing to Your Voice

Find the Feature

> Settings > Personalize > Voice Dial Setup

Action 1 Scroll to Adapt Digits. 2 Press SELECT (). 3 Press START (). 4 When the phone prompts you to say the 1st digit sequence, wait for the beep and then repeat the

digits in a normal tone of voice.



Action

5 If the recording sounds acceptable (no mistakes or background noises), say "Yes" or press YE\$ ().

or

If the recording is not acceptable, say "No" or press NO (). When prompted to say the digits again, wait for the beep and say the digits again. The phone will prompt you to repeat this process with up to 12 additional sets of digits.

6 When the phone prompts, "More Adaptation?", press YES () to continue or NO () to end the process.

When the adaptation process is complete, the phone will say "Adaptation Complete.")

Tip: When adapting Advanced Voice Dialing:

- Choose a quiet place for recording.
- Wait for the beep before you begin to speak.
- Speak at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.
- If you make a mistake while recording a sequence of digits, or if an unexpected noise spoils the recording, rerecord that sequence.

To Reset Advanced Voice Dialing

Find the Feature

> Settings > Personalize > Voice Dial Setup

	Press	То
1	:	scroll to Reset Digits
2	OK (=>)	reset Advanced Voice Dialing to the factory default

Additional Personalizing Features

Feature	Description
Ringer IDs	Activate distinctive ringer alerts assigned to Contacts entries:
Ring Volume	Set ringer volume:
Keypad Volume	Set keypad keypress volume: > Settings > Ring Styles > Style Detail > Key Volume
Reminders	Set reminder alerts for picture, text, or voicemail messages you receive:
Message Alerts	Set whether or not you are alerted to messages received during a call:



Feature	Description		
Greeting	Change the greeting that		
	appears when you turn on		
	your phone: Settings > Personalize		
	> Greeting > rersulanze		
D'ander Tool			
Display Text	Set home screen text to be left		
	justified or centered in the display: Settings > Personalize		
	> Home Screen > Layout		
Clock View	Display an analog clock or digital		
CIOCK VIEW	time readout in the home screen:		
	Settings > Personalize		
	> Home Screen > Clock		
Menu View	Display the main menu as graphic		
	icons or as a text-based list:		
	🔳 > Settings > Personalize > Main Menu		
	> View		
Main Menu	Reorder your phone's main menu:		
	= > Settings > Personalize > Main Menu		
	> Reorder		
Show or	Show or hide menu feature icons in		
Hide Menu	the home screen:		
Icons	> Settings > Personalize		
	> Home Screen > Home Keys > Icons		
Change Soft	Change soft key labels and menu		
Keys	feature icons in the home screen:		
	Settings > Personalize		
	> Home Screen > Home Keys > Left Soft Key or Right Soft Key		
	Z LOIL DUIL NOY OF HIGHL DUIL NOY		

Feature	Description	
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold .	Sindent Feeth
	Select a shortcut:	

Menu Features

Feature	Description
Language	Set menu language:
	= > Settings > Initial Setup > Language
Scroll	Set the highlight bar to stop or wrap
	around in menu lists:
	= > Settings > Initial Setup > Scroll
Master	Reset all options except unlock code,
Reset	security code, and lifetime timer:
	= > Settings > Initial Setup > Master Reset
Master	Reset all options except unlock code,
Clear	security code, and lifetime timer, and
	clear all user settings and entries:
	= > Settings > Initial Setup > Master Clear
	Note: Master Clear erases all of your
	Contacts entries.



Dialing Features

Feature	Description	
Auto PIN	Automatically dial an authenticating	
Dial	PIN code for outgoing calls:	
	= > Settings > Initial Setup	
	> Auto PIN Dial	
DTMF	Activate DTMF tones:	
Tones	= > Settings > Initial Setup > DTMF	
	Send DTMF tones during a call: Press number keys.	
	Send stored numbers as DTMF tones during a call: Highlight a number in the Contacts or recent calls lists, then press > Send Tones.	

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing ③. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service

provider. For billing information, please contact your service provider directly.

Feature	Description	
Call Times	View call timers: T > Recent Calls > Call Times	Sold of the second seco
In-Call Timer	Display time or cost information during a call:	Substitution of the state of th
Data Times	View data call timers:	Sondent Feet
Data Volumes	View data volume meters: > Recent Calls > Data Volumes	Spandent February

Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description	
Accessory	Adjust volume levels of car	4
Volume	kit accessory:	
Settings	During an active call, press	Optional Accessory
(car kit or	your phone's up or down	
headset)	volume keys.	



Feature	Description	
External Speaker- phone	Activate a connected external speakerphone during a call: Press the speakerphone button on the left side of the p	Optional Accessory Ohone.
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:	Optional Accessory
Voice Dial (headset)	Enable voice dial with headset send/end key:	Optional Accessory
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:	Optional Accessory
Power-Off Delay (car kit)	Set the phone to stay on for a period of time after the ignition is switched off: > Settings > Car Settings > Power-off Delay	Optional Accessory
Charger Time (car kit)	Charge your phone for a period of time after the ignition is switched off: Settings > Car Settings > Charger Time	Optional Accessory



Data and Fax Calls

Feature	Description	
Send Data or Fax	Connect your phone to the device, then place the call through the device application.	Optional Accessory
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.	Optional Accessory
Talk Then Fax	Connect your phone to the device, enter the number, press > Dialing Menu > Talk Then Fax, then press to make the call.	Optional Accessory

Network Features

Feature	Description	
Network	View network information and	NOW I Subsc
Settings	adjust network settings:	
	= > Settings > Network Options	Bendent Felling



Personal Organizer Features

Feature	Description	
Add	Add an event to the	MON I Subscition
Datebook	datebook:	
Event	> More > Datebook	Sendent Fedition
	> day [®]	
	> New	
View	View or edit event details:	SHOTK I Subscribe
Datebook	> More > Datebook	
Event	> day [⊙]	Sendent Febru
	> event > VIEW ()	
Event	View event reminder:	MOK I Subsci
Reminder	VIEW (□)	
	Dismiss event reminder:	Sendent Febru
	EXIT (=)	
Сору	Copy a datebook event to	WOOK I Subsc
Datebook	date and/or time:	
Event	= > More > Datebook	Sondent Feature
	> day [™] > event [™]	
	= > Copy	
Set Alarm	Set an alarm:	MOTH Subscribe
	= > More > Alarm Clock	
		Sendent Febru
Turn Off	Turn off alarm:	MOTH Subscribe
Alarm	Press DISABLE (🔄) or 🙉.	
	Set 8-minute delay:	Sandent Festill
	Press \$NOOZE ().	



Feature	Description
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key when finished speaking.
	Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.
Play Voice Record	Play back a voice record: Solution Play back a voice record Play bac
Calculator	Calculate numbers:
Currency Converter	Convert currency: T > More > Calculator T > Exchange Rate
	Enter exchange rate, press OK (), enter amount, press > Convert Currency.

Security

Feature	Description
Lock	Lock phone applications:
Application	► > Settings > Security
	> Lock Application



Phone Features

Start a micro-browser Start a micro-browser Session: Session: Select or create a Web Sessions Sessions Select or create a Web Sessions Select or create a Web				
Micro-Browser Session: Select or create a Web Sessions Select or create a Web Sessions Sessions	Feature	Description		
Browser	Launch	Start a micro-browser		
Select or create a Web Sessions Select or create a Web Sessions Sessions Sessions Sessions Sessions Sessions Sessions Sessions Sessions Select or category Select or create a Web Sessions Select or create a Web	Micro-	session:		
Select or create a Web sessions	Browser	> Web Access		
Sessions Sessions Sessions Sessions		> Web Browser		
Download Game or Application Download a Brew game or application: Frew > Brew Shop, press START (), select category, select application, select pricing option. Normal airtime and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or Application Manage Pictures Manage Pictures Manage Manage ring tones, sounds that you have composed or downloaded:	Web	Select or create a Web		
Download Game or Application Download a Brew game or application:	Sessions	session:		
Download Game or Application Download a Brew game or application:		> Web Access		
Application application: ¬ > Brew > Brew Shop, press START (□), select category, select application, select pricing option. Normal airtime and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or Application Launch a Brew game or application: ¬ > Brew > application Manage Pictures Manage pictures and animations: ¬ > Media Gallery > Pictures Manage ring tones, sounds that you have composed or downloaded:		> Web Sessions		
Application T	Download	Download a Brew game or		
press START (①), select category, select application, select pricing option. Normal airtime and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or Application Manage Pictures Manage pictures and animations: > Media Gallery > Pictures Manage ring tones, sounds that you have composed or downloaded:	Game or	application:		
category, select application, select pricing option. Normal airtime and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or Application Manage Pictures Manage Pictures Manage Sounds Category, select application, select pricing option. Normal airtime and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or application: Application: Serew > application Manage pictures and animations: Serew > Media Gallery > Pictures Manage Sounds Manage ring tones, sounds that you have composed or downloaded:	Application	> Brew > Brew Shop,		
pricing option. Normal airtime and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or Application Manage Pictures Manage pictures and animations: > Media Gallery > Pictures Manage Sounds Manage ring tones, sounds that you have composed or downloaded:		press START (<u></u>), select		
and/or carrier usage charges apply. Your service provider may use a different name for the Brew feature. Launch Game or Application Manage Pictures Manage pictures and animations: > Media Gallery > Pictures Manage ring tones, sounds that you have composed or downloaded:				
Your service provider may use a different name for the Brew feature. Launch Game or application: Application Manage Pictures Manage Pictures Manage Pictures Manage Sounds Your service provider may use a different name for the Brew feature. Launch a Brew game or application: Application: Shrew > application Manage pictures and animations: Shew > Application Manage pictures and animations: Media Gallery > Pictures Manage or John Shrew Sounds that you have composed or downloaded:		pricing option. Normal airtime		
different name for the Brew feature. Launch Game or Application Manage Pictures Manage Pictures Manage Manage ring tones, sounds that you have composed or downloaded:		and/or carrier usage charges apply.		
different name for the Brew feature. Launch Game or Application Manage Pictures Manage Pictures Manage Manage ring tones, sounds that you have composed or downloaded:		Your service provider may use a		
Game or Application: Application Manage Pictures Manage pictures and animations:				
Game or Application: Application Manage Pictures Manage pictures and animations:	Launch	Launch a Brew game or		
Application Manage Pictures Manage pictures and animations: > Media Gallery > Pictures Manage Sounds Manage ring tones, sounds that you have composed or downloaded:				
Manage Pictures and animations:	0.0			
Pictures animations: > Media Gallery > Pictures Manage Manage ring tones, sounds that you have composed or downloaded:		''		
> Media Gallery > Pictures Manage Manage ring tones, sounds that you have composed or downloaded:				
> Pictures Manage Manage ring tones, sounds that you have composed or downloaded:	Fictures			
Manage Manage ring tones, sounds that you have composed or downloaded:		_		
Sounds have composed or downloaded:		7 1.542.55		
That's sompossed of definitional and				
□ → Media Gallery > Sounds	Sounds	•		
		💷 > media Gallery > Sounds		

News and Entertainment



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg. ¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when

tested for use at the ear is 1.55 W/kg, and when worn on the body, as described in this user guide, is 1.48 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

http://www.phonefacts.net

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

http://www.cwta.ca

- In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

Α	extending battery life 10,
accessories 8, 43, 65 Advanced Voice Dialing 71 AGPS service indicator 28 alarm clock 82	50, 51, 53 installing 8 level indicator 28 browser. <i>See</i> micro-browser
alert defined 42, 47 downloading 66 setting 43, 47	C calculator 83 call
turning off 13, 15, 55 animation downloading 66 screen saver 50	adding digits after phone number 58 Advanced Voice Dialing 71
viewing 84 wallpaper 49 answering a call 14, 48	alert, setting 43, 47 alert, turning off 13, 15,
application, locking and unlocking 83 automatic location	answer options 48 answering 14 deleting 57
information sending 52 automatic redial 54	dialed calls list 57 dialing 14 emergency number 55
В	ending 14, 15 external speakerphone 80
backlight 51 battery charging 11	handsfree speaker 41 making 14 received calls list 57

receiving 14 recent calls 57	contrast, display 51 customizing the menu 76
storing 57 timers 79	D
unanswered call 43, 58 Call Failed, Number Busy message 54	data call 81 timers 79 volume meters 79
camera	datebook 82
taking a photo 2, 17	deleting a call 57
capitalization, changing 34	dialed calls list 57
car kit 79	dialing a number 14
character chart 36 codes	digit dialing 68
changing 44	display
default 13, 14, 44, 45, 46	backlight 51 contrast 51
forgetting 46	greeting 76
Contacts	language 77
1-touch dial 60	personalizing 76
attaching 2 numbers 58, 60	distinctive ringer alert 75 drafts folder 22, 67
deleting an entry 69	DTMF tones
dialing a number 67	activating 78
editing an entry 69	sending 78
entry category 68	Ü
group mailing list 67	E
primary number, setting 69	earpiece volume 13 email
ringer ID 68, 75	draft 22
sorting entries 69	emergency number 55
speed dial number 60	end key 14, 15
storing an entry 67 voice dialing 68	ending a call 14, 15

Enter Unlock Code message 45, 46 external display 42 F fax call 81 5-way navigation key 28 flip external display 42 open to answer 15, 48 screen saver 50	message waiting 23 missed call 58 ring alert 28 roam 27 signal strength 27 silent alert 28 soft ring alert 28 text case 34 text entry method 28, 34 vibrate alert 28 vibrate and ring alert 28 voicemail message 28,		
G	62		
greeting 76	iTAP software 37		
Н	K		
handsfree speaker 41 handsfree use 79 headset accessory, using 79 using with external display 43 home screen 26	key end 14, 15 5-way navigation 28 left soft key 26 menu 30 power 12 right soft key 26 send 14, 15, 57 volume control 13		
indicators AGPS service 28 battery level 28 loud ring alert 28 message 27	keypad answering calls 48 volume, setting 75 L language, setting 77		

eft soft key	drafts 67
functions 26	erase 67
ocation, sending to network	MMS template 66
52	MMS, defined 19
ock	multimedia message 65
application 83	outbox 66
phone 44	quick text 66
Low Battery message 28	reading 66
, ,	receiving 3
М	reminders, turning on/off
making a call 14	75
master clear 77	status 66
master reset 77	text 3, 65, 66
menu	message indicator 27
entering text 32	message waiting indicator
icons, converting to text	23
76	micro-browser
icons, showing or hiding	browser setup 84
76	using 84
language, setting 77	Web sessions 84
lists 30	missed call indicator 58
navigating 29	Missed Calls message 43,
personalizing 76	59
rearranging features 76	MMS. See message
scroll 77	multimedia message
using features 30	receiving 23
view, changing 76	sending 19, 65
wrap around 77	multimedia messaging
menu key 30	service. See
message	message
alerts 75	my telephone number 16,
	47, 64

N	language, setting 77
network settings 81 notepad 59 number storing your number 47 viewing your number 16, 64 numbers, entering 39	location 52 locking 44 network settings 81 reset all options 77 security code 44 unlock code 44 unlocking 13, 44, 45, 46 phone number
0	adding digits after 58
open to answer 48 optional accessory, defined 8 optional feature, defined 8 outbox 66	attaching 2 numbers 58, 60 redialing 54 storing in Contacts 67 storing your number 47 viewing your number 16, 64
passwords. See codes phone alert, setting 43, 47 alert, turning off 13, 15, 55 answer options 48 automatic location information 52 clear stored information 77 codes 44 flip 15 keypad, answering calls 48	photo downloading 66 sending 2, 17 taking 2, 17 picture downloading 66 screen saver 50 viewing 84 wallpaper 49 power key 12 predictive text entry 37 primary text entry method 33

Q	secondary text entry
quick text 66	method 33 security code
received calls list 57 recent calls 57 recent calls 57 redial automatic redial 54 busy number 54 reminders turning on/off 75 right soft key functions 26 ring alert setting 15, 43, 47 turning off 13, 15, 55 ring alert indicators 28 ring tone downloading 66 managing 84 ringer ID setting 68 turning on/off 75 ringer volume, setting 13, 75 roam indicator 27 S screen saver 50	changing 44 default 44 forgetting 46 send key 14, 15, 57 shortcuts 64, 77 signal strength indicator 27 silent alert indicator 28 silent alert, setting 43, 47 silent ring alert, setting 15 soft keys functions 26 sound downloading 66 managing 84 Speaker On message 42 speakerphone automatic answer 80 speakerphone, external activating 80 speed dial 60 standby time, increasing 50, 51 storing a call 57 symbol chart 40 symbols, entering 40
scroll, menu 77	tap method text entry 34

telephone number	uniock code
storing your number 47	bypassing 46
viewing your number 16,	changing 44
64	default 13, 14, 44, 45, 46
text 34	entering 13, 45
character chart 36	forgetting 46
entering 32	0 0
entry method, selecting	V
33	vibrate alert
entry method, setup 33	setting 43, 47
iTAP software predictive	turning off 13, 15, 55
text entry 37	vObject, defined 23
numeric method 39	voice dial 80
symbol chart 40	voice dialing 68
symbol method 40	Advanced Voice Dialing
tap method 34	71
text case indicator 34	voice key
text entry method	digit dialing 68
selecting 33	voice dialing 68
setup 33	voice record 83
text entry method indicator	voicemail 61
28, 34	voicemail message indicator
timers 79	28, 62
travel charger 11	volume
TTY device 65	earpiece 13
	keypad 75
U	ringer 13, 75
unlock	volume keys 13
application 83	
phone 44	W
	wallpaper 49

Web pages 84 Web sessions 84

motorola.com