 
 


HELLOMOTO

Introducing your new **MOTORAZR™ V3xx** 3G wireless phone. Here's a quick anatomy lesson.

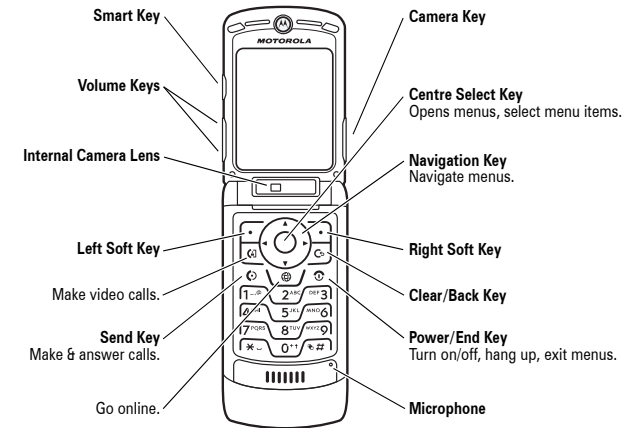

1

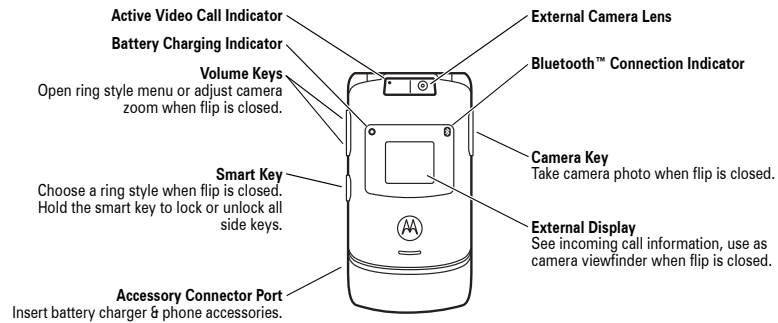

2

Home Screen



① Press and hold the **Power Key** [Power] for a few seconds or until the display lights up to turn on your phone.

② Press the **Centre Key** [Centre] to open the **Main Menu**.

Main Menu



③ Press the **Navigation Key** up, down, left, or right (←→) to highlight a menu feature.

④ Press the **Centre Key** [Centre] to select it.

3

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their

proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for

copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the

core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.





contents




menu map	8	main attractions	26	basics	45
safety information	10	Bluetooth™ wireless . .	26	display	45
use and care	17	audio player	32	text entry	48
EU Conformance	18	photos	34	volume	52
recycling information . . .	19	videos	36	navigation key	53
essentials	20	video calls	38	smart key	53
about this guide	20	text messages	38	external display	53
SIM card	20	memory card	41	handsfree speaker	54
battery	21	cable connections	43	codes & passwords	54
turn it on & off	23	phone updates	44	lock & unlock phone . . .	54
make a call	24			customise	56
answer a call	24			ring style	56
store a phone				time & date	57
number	24			wallpaper	58
call a stored phone				screen saver	58
number	25			themes	59
your phone number . . .	25			display appearance	59
				answer options	60


 
 




calls	61	SAR Data	92
turn off a call alert	61	WHO Information	94
recent calls	61	index	95
redial	63		
return a call	63		
caller ID	63		
emergency calls	64		
voicemail	64		
other features	66		
advanced calling	66		
phonebook	70		
messages	75		
instant messaging	79		
personalising	80		
call times & costs	82		
handsfree	83		
data calls	84		
network	85		
personal organiser	85		
security	88		
fun & games	89		

menu map

main menu

-  **Video Camera**
-  **Tools**
 - SIM *
 - Calculator
 - Calendar
 - Alarm Clock
 - Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial
 - Activation List
 - Messenger *
 - Voice Message
 - World Clock
-  **Camera**
-  **Multimedia**
 - Media Finder
 - Music
 - Pictures
 - Videos
 - Voice Record
 - Ring Tones
 - Wallpapers
 - Themes
 - Camera
 - Video Camera
 - Voice Record






-  **WebAccess**
 - Browser
 - Bookmarks
 - History
 - Go to Page
 - Browser Setup
 - Web Sessions *
-  **Games & Apps**
-  **Messages**
 - Create Message
 - Voicemail
 - Message Inbox
 - Email Msgs
 - Hot Messages
 - Browser Messages
 - Info Services *
 - Outbox
 - Drafts
 - Templates

-  **Recent Calls**
 - (press the  or  to scroll through the call lists)
-  **Phonebook**
-  **Settings**
 - (see next page)
-  **Connection**
 - Bluetooth Link
 - USB Settings
 - MOTOSYNC *
-  **Aeroplane Mode**
 - Aeroplane Mode
 - Prompt At Startup





* optional features





This is the standard main menu layout. Your phone's menu may be a little different.

settings menu

-  **Personalise**
 - Home Screen
 - Main Menu
 - Voice Dial setup
 - Skin
 - Greeting
 - Wallpaper
 - Screen Saver
-  **Ring Styles**
 - Style
 - style Detail
-  **Connection**
 - Bluetooth Link
 - USB Settings
 - MOTOSYNC *
-  **Call Divert ***
 - Voice Calls
 - Video Calls
 - Cancel All
 - Divert Status
 - Push to Call Fwd No.
-  **In-Call Setup**
 - In-Call Timer
 - Call Cost Setup *
 - My Caller ID
 - Answer Options
 - Call Waiting
 - MSG Alert

* optional features

-  **Initial Setup**
 - Time and Date
 - Speed Dial
 - Auto Redial
 - Display Timeout
 - Backlight
 - Charging Lights
 - Scroll
 - Language
 - Battery save
 - Brightness
 - DTMF
 - Master Reset
 - Master Clear
-  **Phone Status**
 - My Tel. Numbers
 - Credit Info/Available *
 - Active line *
 - Battery Meter
 - Download Location
 - Storage Devices
 - Voice Dial Languages
 - Software Update *
 - Other Information
-  **Headset**
 - Auto Answer
 - Ringer Options
 - Voice Dial
-  **Car Settings**
 - Auto Answer
 - Auto Handsfree
 - Power-off Delay
 - Charger Time

-  **Network**
 - New Network
 - Network Setup
 - Available Networks
 - My Network List *
 - Service Tone
 - Call Drop Tone
-  **Security**
 - Phone Lock
 - Keypad Lock
 - Lock Application
 - Show Private Entries
 - Fixed Dial *
 - Restrict Calls *
 - Call Barring *
 - SIM PIN
 - New Passwords
 - Certificate Mgmt *
-  **Java Settings**
 - Java System
 - Delete All Apps
 - App Vibration
 - App Volume
 - App Priority *
 - App Backlight
 - Set Standby App *
 - DNS IP *
-  **Aeroplane Mode**
 - Aeroplane Mode
 - Prompt At Startup

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

*. The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**



Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Symbol	Definition
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

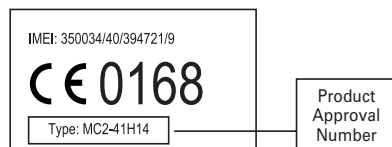

The above gives an example of a typical Product Approval Number.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Recycling Mobile Phones and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

essentials

about this guide

This guide shows how to open a menu feature as follows:

Find it: > Messages > Create Message

This means that, from the home screen:

- 1 Press the *centre key* to open the menu.
- 2 Press the *navigation key* to scroll to Messages, and press the centre key to select it.
- 3 Press the navigation key to scroll to **Create Message**, and press the centre key to select it.

symbols	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

 
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

 
battery installation

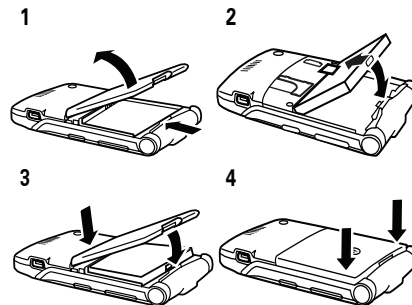

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

To insert and use a **memory card**, see page 41.

Turn off your phone and remove your battery before you install or remove a SIM card.

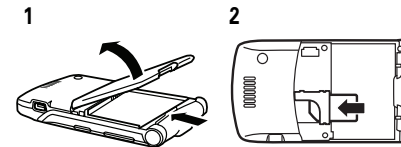 


battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge complete** when finished.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

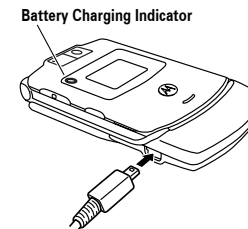

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.

- When charging your battery, keep it near room temperature.

When storing your battery, keep it uncharged in a cool, dark, dry place.

turn it on & off


Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.



To turn off your phone, press and hold for a few seconds.


make a call


Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .

To make video calls, see page 38.

answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .


store a phone number

You can store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.

 
- 2 Press the **Store** key.

Select **Create New Contact**, if necessary.



- 3 Enter a name and other details for the phone number. To select a highlighted item, press the centre key .

- 4 Press the **Done** key to store the number.

To edit or delete a phonebook entry, see page 71.

To store an email address from the home screen, press  >  **Phonebook** > **New Entry**. Enter the new contact’s name and email information.

 
 
call a stored phone number

Find it:  >  **Phonebook**



- 1 Scroll to the phonebook entry.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.



- 2 Press  to call the entry.

Note: Your phonebook can show you the entries stored in your phone’s memory or on your SIM card. To choose which entries you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

your phone number

From the home screen, press *the clear key*  then  to see your number.

Tip: Want to see your phone number while you’re on a call? Press **Options** > **My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don’t know your phone number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

You can also use Bluetooth™ A2DP stereo headphones to listen to music files you store on your phone.

Note: The use of wireless phones while driving may cause distraction. Discontinue a

call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a headset or handsfree car kit

 
 

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready in pairing or bonding mode** (see the user's guide for the device).

- Press **Options**, then select:
 - Manage > Copy** for media files.
 - Send Contact** for phonebook entries.
 - Send** for datebook events.
- Select a recognised device name, or select **[Look For Devices]** to search for the device where you want to copy the file.



If your phone could not copy the file to the other device, make sure the device is **on** and **ready in discoverable mode** (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's access setting, see page 31.

receive files from another device


If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  **Settings > Connection > Bluetooth Link > Setup > Power > On.**

 
- Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press  >  **Settings > Connection > Bluetooth Link > [Find Me].**
- Press the **Accept** key on your phone to accept the file from the other device.

Find it:  >  **Settings > Connection > Bluetooth Link > [Add Audio Device]** 

Your phone lists the devices it finds within range.

- Scroll to a device in the list and press the centre key .
- Press the **Yes** or **Ok** key to connect to the device.
- If necessary, enter the device passkey (such as **0000**) and press the **Ok** key.

When your phone is connected, the Bluetooth indicator  shows in the home screen, and the external Bluetooth indicator light flashes.


You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just

turn on the device or move it near the phone. During a call or while playing a sound file, you can press **Options > Use Bluetooth** to connect to a headset or handsfree device you have used before.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device


You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device. 

Note: You can't copy some copyrighted objects.

- On your phone, scroll to the object that you want to copy to the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or datebook view from your phone to a printer. 

Note: You cannot print message **Templates** or a phonebook **Mailing List**.

- On your phone, scroll to the object that you want to print, then press **Options > Print > Bluetooth**. In the datebook, you can print the month, week, or day.



 
Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.
- If available, choose additional objects or print options.

- Select a recognised printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.

Note: If you see **Service not Supported** when you try to print, select **Options > Manage > Copy > Bluetooth** instead. Always use this option to print 4x6 photos.

advanced Bluetooth features

A device is *recognised* after you connect to it once (see page 26).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone:   >  Settings > Connection > Bluetooth Link > [Find Me]

features	
connect to recognised device	Connect your phone to a recognised handsfree device: > Settings > Connection > Bluetooth Link > Audio Devices > <i>device name</i>
drop connection with headset or handsfree device	> Settings > Connection > Bluetooth Link > Audio Devices Scroll to the device name and press the Drop key.

features	
switch to headset or handsfree device during call	During a call, press Options > Use Bluetooth to switch to a recognised headset or car kit. Your phone connects automatically, or shows a list of devices you can select.
play sound files on a recognised headset	While playing a sound file, press Options > Use Bluetooth to switch to a recognised headset. Your phone connects automatically, or shows a list of devices you can select. You cannot play some copyrighted files over a Bluetooth connection.

features	
move multimedia object to device	Caution: Moving an object deletes the original object from your phone. Scroll to the object, press Options > Manage > Move , select the device name.
copy multimedia object to device	Scroll to the object, press Options > Manage > Copy , select the device name.

features	
edit device properties	> Settings > Connection > Bluetooth Link > Found Devices Scroll to the device name and press the centre key . Note: The Access setting can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once , Never , or Custom .

features	
set Bluetooth options	> Settings > Connection > Bluetooth Link > Setup Note: The Bluetooth Connection Indicator (see page 2) lights when your phone has a Bluetooth connection. To disable this indicator, choose Bluetooth Lights > Off under the Setup menu.

audio player

Your phone can play and store AU, WMA, and MP3 song files. You can use a removable memory card with your phone to store more songs (see page 41).

Find it: > **Multimedia** > **Media Finder** > **Music**

Press up or down to scroll to an option, and press the centre key to select it:

options	
All Songs	Show and play individual songs. Note: All of your phone's songs appear in this list. Some songs do not have any Artist , Album , or Genre information, so they don't appear in those lists.
Recently Played	Show songs you played recently.
Playlists	Create or play a playlist (see page 34).
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.

options	
Genres	Select a type of music to show or play songs.
Composers	Select a composer to show or play songs.

When you select a song:

- **Play or pause** the song by pressing the centre key .
- **Skip back or forward** by pressing left or right.
- **Change volume** by pressing the volume keys.
- **Hide the player** by pressing **Options** > **Hide**. This lets you use other phone features while the song plays. To stop the hidden audio player, press in the home screen.

Tip: You can listen to tunes on your way. You can use Bluetooth™ A2DP stereo headphones (page 26), and use *aeroplane mode* to make your phone safe to use even while you're on a plane (page 91).

Your phone also has a **Ring Tones** player. To use it, press > **Multimedia** > **Media Finder** > **Ring Tones**.

load music files

To download songs from the Internet, see page 90. To copy files between your phone and a computer, see page 43.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

create a playlist

Find it: > **Multimedia** > **Media Finder** > **Music** > **Playlists** > **[Create New Playlist]**

Open a song list, and press the centre key to select each song you want. After you press the **Done** key, enter a name for your list.

To hear your playlist, highlight it under **Playlists** and press **Options** > **Play**.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song artist, title, and time. While a song is playing:

- Press the **volume keys** to adjust playback volume.
- Hold the **smart key** to lock or unlock the side keys.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Internal View/External View	Switch to the camera facing you (Internal) or facing away from you (External).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card.

- Press the **smart key** to open the audio player menu. Press your volume keys to scroll through the menu, and press the smart key to select a menu item (or pause a song).

photos

To view, edit, or delete photos you've taken, see page 89.

Your camera lens is on the back of your phone when the phone is open.

options	
Free Space	See how much memory remains. Note: Your service provider may store some content in user memory before you receive the phone.

 
self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

videos

To view, edit, or delete videos you've recorded, see page 90.

- 1 Press > **Camera** to see the camera viewfinder.

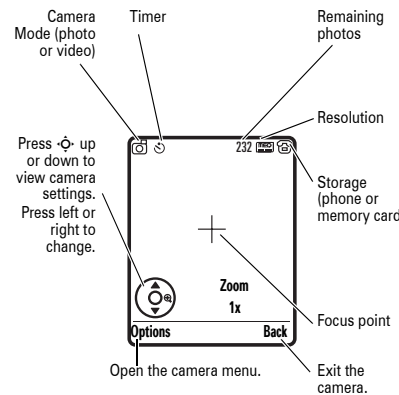

- 2 Press the centre key to take the photo in the viewfinder. You can:

 
- Press the **Options** key to store or discard the photo.

If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 29).
- Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.
- Press to discard the photo and return to the active viewfinder.

Your camera lens is on the back of your phone, when your phone is open.

Press > **Video Camera** to see the video viewfinder.

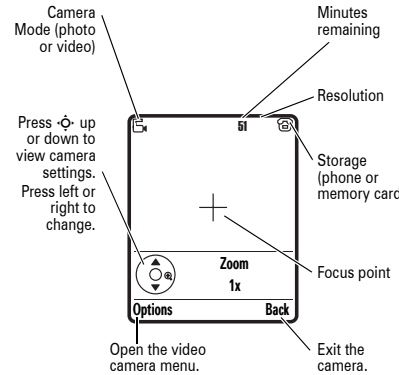

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options** > **Video Camera Setup** > **Video Length**.

- 1 Press the centre key to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press > **Multimedia** > **Media Finder** > **Videos** > **All Videos** > *video name*.
- Press the **Send** key to send the video in a message.

Enter text and press **Send To**, then scroll to a recipient address and press the centre key to select it. Press the

Note: The number of minutes remaining is an estimate.

- Options** key to enter a new number. To send the message, press the **Send** key.
- Note:** Some other phones or networks do not support messages with videos.
- Press **[X]** to discard the video and return to the active viewfinder.

video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 47).

Note: Your phone's external **video call indicator** blinks during a video call, to let people around you know that they might be in your video.

make a video call

- Enter a phone number and press **[V]** to see the video call preview.
- Press **[V]** to make the call.
During the call:
 - Press the **Stop Video** key to change the call to a voice call with the speakerphone on.
 - If you accept another **incoming voice call**, your phone changes this video call to a voice call.
 - If you accept another **incoming video call**, your phone ends this video call.
- To end the call, press **[X]**.

text messages

To create a group mailing list, see page 74.
For more message features, see page 75.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.

Find it: **[Phone Icon]** > **[Envelope Icon]** **Messages** > **Create Message** > **Messages**

- Press keypad keys to enter text on the page (for details about text entry, see page 48).

To insert a **picture, sound, or other object** on the page, press **Options** > **Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options** > **Insert** > **New Page**. You

- can enter more text and objects on the new page.
- When you finish the message, press the **Send To** key.
 - To **send** the message, press the **Send** key.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as **[Envelope Icon]**.

Press the **Read** key to open the message.

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.

- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

manage text messages

You can sort and move your messages.

Find it: **[Phone Icon]** > **[Envelope Icon]** **Messages** > **Message Inbox**

Scroll to a message and press the **Options** key. Your options include:

options	
Sort by	Sort messages by Time , Sender , Priority , or other details. Note: You can also sort the messages in your Email Msgs and Outbox lists.

options	
Move to Hot Messages	Move the selected message to your Hot Messages list, where you can keep your most important messages. To see your Hot Messages list: [Phone Icon] > [Envelope Icon] Messages > Hot Messages
Mark/Unmark as SPAM	Mark the selected message with a SPAM icon. Note: To turn on a SPAM filter, press [Phone Icon] > [Envelope Icon] Messages , then press > Options > Setup > Message Setup > SPAM Filter > On . This automatically adds a SPAM icon and turns off notification for new messages from anyone not in your phonebook.

 
memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install a memory card

- Remove the battery door.
 - Push the card into the metal holder until it clicks into place.
- To remove the memory card**, push it in until it clicks

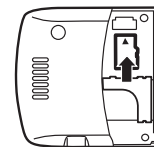

- again. It begins to slide out, and you can slide it the rest of the way out.
- Replace the battery door.

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 89). Icons can indicate if a file is stored in your phone memory (**[Phone Icon]**) or on your memory card (**[Card Icon]**).To copy or move a file from your phone to your memory card, highlight it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 43) or a Bluetooth connection (see page 27).

To see your **memory card name, available memory**, and other information about the card:

Find it: > **Settings** > **Phone Status** > **Storage Devices**

- 1 Press to scroll to the memory card that is installed.
- 2 Press the centre key to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Dev. Menu**, which lets you **Format** or **Rename** the memory card.

store and use protected content

If you try to play a copyrighted file, it might ask you to download a licence. Some licences only let you play a file for a certain number of times or days.

For example, a licence may allow you to play the content of your download five times or use the content for three days before it expires.

You cannot send, copy, or change copyrighted files.

 
To download a file, see page 90. To activate downloaded copyrighted files:

Find it: > **Tools** > **Activation List** > *file type* > *file*

You can see file's **Status**, **Type**, **Activation**, and **999 Remaining**.

cable connections

Your phone has a mini-USB port so you can connect it to a computer to transfer data.

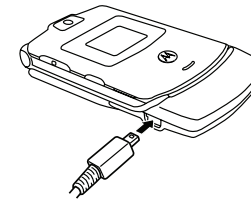

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 84.



connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press > **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.

- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then disconnect the "USB Mass Storage Device."
- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press > **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data connection**.

phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated and register for free update notifications at:
<http://www.hellomoto.com/support/update>

 
Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 85.

basics


See page 1 for a basic phone diagram.


display

 
The *home screen* shows when you turn on the phone.

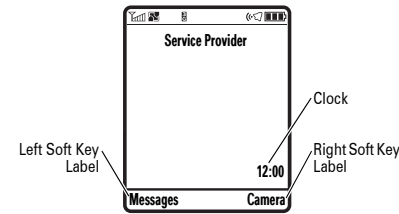

Note: Your home screen might look different from the one shown, depending on your service provider.

 
To dial a number from the home screen, press number keys and .

 

Press  up, down, left, or right in the home screen to open basic menu features.


 
Press the centre key  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

basics 45



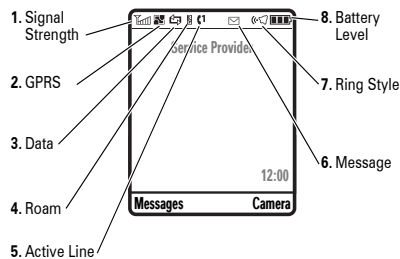

 

 

Status indicators can show at the top of the home screen:



 



 



- 1 **Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  shows.
- 2 **GPRS Indicator** – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Indicators show PDP

context active  or packet data available .

 

- 3 **Data Indicator** – Shows connection status.


 

 
 secure packet data transfer	 unsecure packet data transfer
 secure application connection	 unsecure application connection
 secure <i>Circuit Switch Data</i> (CSD) call	 unsecure CSD call
 <i>High-Speed Downlink Packet Access</i> (HSDPA) data transfer	
 Bluetooth™ connection is active	


- 4 **Roam Indicator** – Shows when your phone is seeking or using a network outside your home network. Indicators can include:

 2G home	 2G roam
 2.5G home	 2.5G roam
 3G home	 3G roam
 HSDPA home	 HSDPA roam




HSDPA is *High-Speed Downlink Packet Access*, available on some networks.

- 5 **Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:

 line 1 active	 line 1 active, call divert on
 line 2 active	 line 2 active, call divert on

When an alarm is activated,  can show here.

- 6 **Message Indicator** – Shows when you receive a new message. Indicators can include:

 text message	 voice message
 IM message	

- 7 **Ring Style Indicator** – Shows the ring style setting.
- loud ring vibrate & ring
 soft ring vibrate then ring
 vibrate silent
- 8 **Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

Press **[#]** in a text entry view to select an entry mode:

entry modes	
[1] or 1	Primary text entry mode can be set to any iTAP™ [1] or tap 1 mode.
[2] or 2	Secondary text entry mode can be set to any iTAP [2] or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

- iTAP™ and Tap mode tips
- Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).
 - To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
 - Press **[1]** to enter punctuation or other characters.
 - Press **[Left Arrow]** to move the flashing cursor to enter or edit message text.
 - Press **[Delete]** to delete the character to the left of the cursor. Hold **[Delete]** to delete the word.
 - To cancel your message, press **[Cancel]**.

iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap and tap extended modes

Press **[#]** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **TAP** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **[1]** one time, your display shows:

The first character of every sentence is capitalised. If necessary, press **[Left Arrow]** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **[#]** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
symbol mode

Press **[#]** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the centre key **•**.

volume

Press the volume keys to:

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

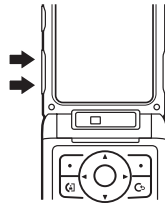 


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **[#]** in the home screen.

To change your ringer volume when your phone is closed, see page 53.

navigation key

Press the navigation key **•** up, down, left, or right to scroll to items in the display. When you scroll to an item, press the centre key **•** to select it.



smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the centre key **•**). The smart key usually does the same thing as pressing the centre key **•**. To find the smart key, see page 1. To change what the smart key does in the home screen, see page 81.

external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 46.

set phone ring style in external display

- 1 Press a volume key to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: **•** > **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press **•** and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press **•** > **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press **•** > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 64). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

- Loud
- Vibe & Ring
- Soft
- Vibe then Ring
- Vibrate
- Silent

The ring style profile’s indicator shows at the top of your home screen. To choose your profile:

Find it: > Settings > Ring Styles
> Style: *style name*

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your theme can also set your wallpaper (page 59).

Find it: > Settings > Personalise
> Wallpaper

options	
Picture	Press up or down to select a picture, or select None for no wallpaper.
Layout	Select Centre to centre the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

Tip: Do you get a lot of text messages? If you don’t want to hear incoming message alerts during phone calls, press > Settings > In-Call Setup > MSG Alert > Not in Call.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: > Settings > Ring Styles
> *style Detail*

screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Note: Your theme can also set your screen saver (page 59).

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it: > Settings > Personalise
> Screen Saver

options	
Picture	Press up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

Note: *Style* represents the current ring style. You can’t set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the centre key .
- 3 Press the **Back** key to save the alert setting.

time & date

Your phone can automatically update your time zone, time, and date. It uses the time and date for the datebook.

To **synchronise** the time zone, time, and date with the network: Press > Settings > Initial Setup > Time and Date > Autoupdate > Time & Time Zone. If you don’t want your phone to automatically update

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme, press > Multimedia > Themes > *theme*.

To **download** a theme, see page 90.

To **delete themes you downloaded**, press > Multimedia > Themes, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

To **preview** a theme, press > Multimedia > Themes, scroll to the theme, and press **Options** > **Preview**.

your time zone and date, choose **Time Only** instead.

To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press > Settings > Initial Setup > Time and Date > Time Zone, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.

Tip: To choose three time zones for easier access, press > Tools > World Clock. When you open **World Clock**, you can press the **Options** key to see the **Map View** of time zones.

To choose an **analogue** or **digital** clock for your home screen, press > Settings > Personalise > Home Screen > Clock.

display appearance

Note: The **Battery save** feature tells your phone not to light the display or keypad unless you’re in a dark place. To turn on this feature, press > Settings > Initial Setup > Battery save > On.

To choose a phone **skin** that sets the look and feel of your phone’s display: Press > Settings > Personalise > Skin. Your theme can also set your phone skin (page 59).



To set your display **brightness**: Press > Settings > Initial Setup > Brightness.

To save battery life, your keypad **backlight** turns off when you’re not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press > Settings > Initial Setup > Backlight.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings**
> **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup**
> **Display Timeout**.



options	
Multi-key	Answer by pressing any key.
Open To Answer	Answer by opening the flip.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup**
> **Answer Options**

options	
Video Call	Make a video call to the number.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Msg	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

options	
Send Tones	Send the number to the network as DTMF tones. Note: This option shows only during a call.
Filter by	Select dialled or received calls.
Notepad	Open the number in a text editor.
Call Times	Open your call time information. 
Call Cost	Open your call cost information. 

calls


To make and answer calls, see page 24.

turn off a call alert



You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialled calls.

redial

- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .


If you hear a **busy signal**, and you see  **Call Failed**, you can press  or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.



return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

 
- 1 Press the **View** key to see the received calls list.

Find it:  >  **Recent Calls**, press  or  to select > **Received Calls** or **Dialled Calls**


Scroll to a call. A  next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the centre key .
- To see the **Last Calls Menu**, press **Options**. This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.

- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID)  shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 72).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide ID/Show ID**.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.


Note: You can't do the following: **Insert Pause** (pause), **Insert Wait** (wait), or **Insert 'n'** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

other features

advanced calling

features

voice dial a number not stored in the phonebook (digit dial)

Press and hold .



When prompted, say “digit dial” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).


Your phone recognises the digits you want. To voice dial a phonebook entry, see page 70.

features

adapt your voice dial

You can improve voice dial operations by training the phone to recognise your voice.



 >  Settings > Personalise > Voice Dial setup > Adapt digits


attach a phone number 


Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.


features

notepad

Press  >  Recent Calls, press the **Options** key, then > **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialling Menu** to attach a number or insert a special character, press **Options**.

international calls 

If your phone service includes international dialling, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

features


hold a call

Press **Options** > **Hold** to put all active calls on hold.


mute a call

Press the **Mute** key (if available) or **Options** > **Mute** to put all active calls on mute.



features


call waiting 

When you're on a call, you'll hear an alert if you receive a second call.


Press  to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press **Options** > **End Call on Hold**.


To turn the call waiting feature on or off, press  >  Settings > In-Call Setup > Call Waiting > On or Off.

conference call 


During a call:


Dial next number, press , press the **Link** key.

features



transfer a call 

During a call:

Options > **Transfer**, dial transfer number, press 

automatic call diverting 


Set up or cancel automatic call diverting:

 >  Settings > Call Divert

Choose **Voice Calls** or **Video Calls** to set up diverting, or **Cancel All** to cancel diverting.



You can set how long your phone waits before it diverts a call (5, 10, 15, 20, or 25 seconds).

features



manual call diverting 


You can set your phone to divert an incoming call only when you press a key.

To set the number where your phone diverts the calls:



 >  Settings > Call Divert > Push to Call Fwd No., and enter the phone number

To choose which key you press to divert incoming calls:

 >  Settings > Personalise > Home Screen > Home Keys, select one of the key presses in the list, and then select **Push to Call Forward**


restrict calls 

Restrict outgoing or incoming calls:



 >  Settings > Security > Restrict Calls


Tell your phone to allow **All**, **None**, or only the calls from your **Phonebook**.

features

call barring 



Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.

 >  Settings > Security > Call Barring



fixed dial 






When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.



Turn fixed dialling on or off:

 >  Settings > Security > Fixed Dial


Use the fixed dial list:





 >  Tools > Dialling Services > Fixed Dial




features
service dial  <p>Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:</p> <p>☎ >  Tools > Dialling Services > Service Dial</p>
quick dial  <p>Dial preprogrammed phone numbers:</p> <p>☎ >  Tools > Dialling Services > Quick Dial</p>
DTMF tones <p>Activate DTMF tones:</p> <p>☎ >  Settings > Initial Setup > DTMF</p> <p>To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press Options > Send Tones.</p>



features
set ringer ID for a phonebook entry <p>Assign a ring alert (ringer ID) to an entry:</p> <p>☎ >  Phonebook > <i>entry</i>, then press Options > Edit Contact > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.</p> <p>Activate ringer IDs:</p> <p>☎ >  Settings > Ring Styles > <i>style Detail</i> > Ringer IDs</p>


 

phonebook



 
features
voice dial a phonebook entry (name dial) <p>Voice dial a number stored in the phonebook:</p> <p>Press and hold .</p> <p>When prompted, say “name dial” (within two seconds). When prompted again, say the entry’s name (within two seconds).</p> <p>Your phone matches your voice to a phonebook entry name. To voice dial a number not stored in the phonebook, see page 66.</p>

features
speed dial a phonebook entry <p>You can assign the keys  to  to phonebook entries. Then, when you press and hold a key, your phone calls the entry.</p> <p>Note: Your service provider might have assigned some keys, such as  for your voicemail number. You can only speed dial phonebook entries that are stored on your phone (not on your SIM card).</p> <p>To assign a speed dial key, press ☎ >  Phonebook and scroll to the phonebook entry. Then, press Options > Add to Speed Dial and pick a speed dial key.</p> <p>To use a speed dial key, just press and hold the key while in your home screen.</p>

features
edit or delete a phonebook entry <p>Edit a number stored in the phonebook:</p> <p>☎ >  Phonebook, scroll to the phonebook entry, and press Options. You can select Edit Contact, Delete, or other options.</p> <p>Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently or entries in other categories.</p>


features
set picture ID for a phonebook entry <p>Assign a photo or picture to show when you receive a call from an entry:</p> <p>☎ >  Phonebook > <i>entry</i>, then press Options > Edit Contact > Picture > <i>picture name</i></p> <p>Note: The Picture option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74</p>
set picture ID view for phonebook <p>Show entries as a text list, or with picture caller ID photos:</p> <p>☎ >  Phonebook, then press Options > Setup > View by > <i>view name</i></p>


features
set category for a phonebook entry <p>☎ >  Phonebook > <i>entry</i>, then press Options > Edit Contact > Category > <i>category name</i></p> <p>Note: The Category option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74</p> <p>When you open your phonebook, press  or  to see your categories.</p>


features
set category view for phonebook <p>☎ >  Phonebook, then press Options > Filter by > Category > <i>category name</i></p> <p>You can show all entries, entries in a predefined category (Business, Personal, General, VIP), or entries in a category you create.</p> <p>Shortcut: When you open your phonebook, press  or  to see your categories.</p>


features
create group mailing list <p>You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:</p> <p>☛ > ☑ Phonebook, then press Options > Create New > Message List</p> <p>You can select the list name as an address for multimedia messages.</p> <p>Note: A Message List cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74</p>
sort phonebook list <p>Set the order in which entries are listed:</p> <p>☛ > ☑ Phonebook, then press Options > Setup > Sort by > sort order</p> <p>You can sort the phonebook list by First Name or Last Name.</p>



features
copy one phonebook entry <p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p>☛ > ☑ Phonebook, scroll to the entry, press Options > Copy to SIM Card or Copy to Phone</p>
copy multiple phonebook entries <p>Copy multiple phonebook entries between the phone and SIM card:</p> <p>☛ > ☑ Phonebook, scroll to one entry, press Options > Select Multiple to, then select Copy to SIM Card or Copy to Phone</p>

features
send phonebook entry to another device <p>Send a phonebook entry to another phone, computer, or device:</p> <p>☛ > ☑ Phonebook, scroll to the entry, press Options > Send Contact</p> <p>For more information about copying files to another device, see page 27.</p>
print phonebook entry over Bluetooth™ connection  <p>You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.</p> <p>☛ > ☑ Phonebook</p> <p>Scroll to the entry you want to print, and press Options > Select Multiple to > Print.</p> <p>You cannot print a Mailing List. For more about Bluetooth connections, see page 26.</p>


features
send email  <p>☛ > ✉ Messages > Email Msgs > Create Email</p> <p>Note: To use email, you might need to enter a User ID and Password in your email settings (see page 78).</p>
messages <p>For basic text message features, see page 38.</p> <p>Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.</p>


features
send voice message  <p>☛ > ✉ Messages > Create Message > New Voice Msg</p> <p>To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.</p>



features
read and manage messages  <p>☛ > ✉ Messages > Message Inbox</p> <p>Icons next to each message indicate if it is read ☑ or unread ☐. Icons can also indicate if the message is locked 🔒, urgent !, or low priority ↓, or if it has an attachment 📎.</p> <p>To Reply, Forward, Lock, or Delete a message, scroll to it and press Options.</p> <p>To open a message, press ☛. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.</p>

features
read and manage email  <p>☛ > ✉ Messages > Email Msgs</p> <p>To Reply, Forward, Lock, or Delete a message, scroll to it and press Options.</p> <p>To open a message, press ☛. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.</p>
store message objects  <p>Go to a multimedia message page, or scroll to an object in a message, then:</p> <p>Options > Store</p>


features
print message over Bluetooth™ connection  <p>You can use a Bluetooth wireless connection to send a message from your phone to a printer.</p> <p>☛ > ✉ Messages > Message Inbox, Email Msgs, Outbox, or Drafts</p> <p>Scroll to the message you want to print and press Options > Print.</p> <p>You cannot print message Templates. For more about Bluetooth connections, see page 26.</p>





features
store text messages on your SIM card  <p>To store incoming text messages on your SIM card, press:</p> <p>☛ > ☑ Messages, then press Options > Setup > Message Setup > Text Msg Setup > Default Storage > SIM Card.</p>



features
edit email settings  <p>You can edit the settings for your Email connections. To use email, you need to store your email User ID and Password.</p> <p>☛ > ☑ Messages, then press Options > Setup > Email Msg Setup > Account Settings</p> <p>If you have more than one email account, select an account to edit.</p> <p>Your phone shows a list of email settings. Here is where you store your email User ID and Password.</p> <p>Note: To create a new account, select New Entry in the Account Settings list. Your display shows a folder for each email account under ☛ > ☑ Messages > Email Msgs.</p>

features
browser messages  <p>Read messages received by your micro-browser:</p> <p>☛ > ☑ Messages > Browser Messages</p>
info services  <p>Read subscription-based information services messages:</p> <p>☛ > ☑ Messages > Info Services</p>

instant messaging

features
log in  <p>☛ > ☑ Tools > Messenger</p> <p>Select an IM account, or select [New Account] to set up an IM account.</p>



features
add contacts  <p>After you log in:</p> <p>Press Options > Add Contact and enter the contact's name, mobile number, IM ID, and alias.</p>
find others online  <p>After you log in:</p> <p>Select Online Contacts to see a list of others online.</p>
start conversation  <p>Scroll to a name in Online Contacts and press the Send IM key.</p>
open active conversation  <p>Scroll to a name in Conversations and press the Select key.</p>

features
insert items during a conversation <p>From the conversation view:</p> <p>Options > Insert</p> <p>You can insert an Emoticon, Quick IM (such as Are you there?), or Contact Info (selected from your phonebook).</p>
end conversation  <p>From the conversation view:</p> <p>Options > End Conversation</p>
log out  <p>Select Log Out from the IM Online Menu menu.</p>

personalising

features
language <p>Set menu language:</p> <p>☛ > ☑ Settings > Initial Setup > Language</p>
scroll <p>Set the scroll bar to Up/Down or Wrap Around in menu lists:</p> <p>☛ > ☑ Settings > Initial Setup > Scroll</p>
activate ringer IDs <p>Activate ringer IDs assigned to phonebook entries and categories:</p> <p>☛ > ☑ Settings > Ring Styles > <i>style</i> Detail > Ringer IDs</p>
ring volume <p>☛ > ☑ Settings > Ring Styles > <i>style</i> Detail > Ring Volume</p>

features
keypad volume <p>☛ > ☑ Settings > Ring Styles > <i>style</i> Detail > Key Volume</p>
reminders <p>Set reminder alerts for messages that you receive:</p> <p>☛ > ☑ Settings > Ring Styles > <i>style</i> Detail > Reminders</p>
menu view <p>Show the main menu as graphic icons or as a text-based list:</p> <p>☛ > ☑ Settings > Personalise > Main Menu > View</p>
main menu <p>Reorder your phone's main menu:</p> <p>☛ > ☑ Settings > Personalise > Main Menu > Reorder</p>

features
show/hide menu icons  <p>Show or hide menu feature icons in the home screen:</p> <p>☛ > ☑ Settings > Personalise > Home Screen > Home Keys > Icons</p>
change home keys  <p>Change features for the soft keys, navigation key, and smart key in the home screen:</p> <p>☛ > ☑ Settings > Personalise > Home Screen > Home Keys</p>
master reset <p>Reset all options except unlock code, security code, and lifetime timer:</p> <p>☛ > ☑ Settings > Initial Setup > Master Reset</p>

features
master clear Caution: Master clear erases all information you have entered (including phonebook and datebook entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it. > Settings > Initial Setup > Master Clear

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

data calls

To connect your phone with a USB cable, see page 43.

features
send data Connect your phone to the device, then place the call through the device application.
receive data Connect your phone to the device, then answer the call through the device application.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features
call times Show call timers: > Recent Calls , press the Options key, then > Call Times
in-call timer Show time or cost information during a call: > Settings > In-Call Setup > In-Call Timer
call cost Show call cost trackers: > Recent Calls , press the Options key, then > Call Cost

features
setting up Exchange ActiveSync You can use the Internet to synchronise your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server. You need to know the email account's user name and password , the Microsoft® Exchange server name , and the user domain name . Confirm that the Mobility option is enabled on the email account, and that data service is activated with your phone service provider. To set up an ActiveSync partner, press > Settings > Connection > MOTOSYNC > Exchange , press the Options key, then > Setup . Enter the server details, including Server Name , Domain , and the Web Session to use. To set up a Web Session , see page 90.

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features
speakerphone Activate the speakerphone during a call: Press the Speaker key (if available, or Options > Speakerphone On).

features
using Exchange ActiveSync Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically. To schedule synchronisation, press > Settings > Connection > MOTOSYNC > Exchange , press the Options key, then > Auto Sync Setup . Enter the time and days you want your phone to synchronise.

network

features
network settings See network information and adjust network settings: > Settings > Network

features
auto answer (car kit or headset) Automatically answer calls when connected to a car kit or headset: > Settings > Car Settings or Headset > Auto Answer
voice dial (headset) Enable voice dial with headset send/end key: > Settings > Headset > Voice Dial
auto handsfree (car kit) Automatically route calls to a car kit when connected: > Settings > Car Settings > Auto Handsfree

features
software update Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded: > Settings > Phone Status > Software Update > Update Now

personal organiser

features
set alarm > Tools > Alarm Clock

features
turn off alarm When an alarm happens: To turn off the alarm, press the Disable key or . To set an eight-minute delay, press the Snooze key.
Note: The Snooze key is available only if the phone is already powered on when the alarm sounds.
add new datebook event or task Your datebook can store events (with a start and end time that can repeat) or tasks (with a due date). > Tools > Calendar , scroll to the day, press , press Options > Create New Event or Create New Task

features
see datebook event or task See or edit event or task details: > Tools > Calendar , scroll to the day, press . Tip: Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the datebook and press Options > View > Organised Events or Organised Tasks .

features
change datebook settings > Tools > Calendar , then press Options > Setup You can choose the Default View that appears when you open your datebook, and you can show or hide the Tasks On Day View . You can tell your phone to Power On if it is turned off when a datebook alert occurs. Turn on Lunar Calendar if you do not want to use a solar calendar.
event reminder When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Back key.

features
send datebook event to another device Send a datebook event to another phone, computer, or device: > Tools > Calendar , scroll to the day, press , scroll to the event, press Options > Send
print datebook month, week, or day over Bluetooth™ connection You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer. > Tools > Calendar Go to the month, week, or day view and press Options > Print . For more about Bluetooth connections, see page 26.

features
create voice record > Multimedia > Voice Record Press . When prompted, speak into the phone. Note: Recording phone calls is subject to varying Laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.
play voice record Play back a voice record: > Multimedia > Media Finder > Voice Record > All Voice Records > <i>voice record</i>
calculator > Tools > Calculator

features
currency converter > Tools > Calculator , then press Options > Exchange Rate Enter exchange rate, press the Ok key, enter amount, and press Options > Convert Currency .

security

features
SIM PIN Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked . Lock or unlock the SIM card: > Settings > Security > SIM PIN

features
lock feature > Settings > Security > Lock Application

fun & games

Note: Icons next to a picture, sound, or other object can indicate if the file is locked (), or if it is stored on your phone () or on your memory card ().
 For basic information on the camera, see page 34.

features
view, delete, or manage pictures Manage photos, pictures, and animations: > Multimedia > Media Finder > Pictures > All Pictures To copy or move a file from your memory card () to your phone memory () highlight it in the list and press Options > Manage > Copy or Move > Memory Card . You cannot copy or move some copyrighted files.

features
view, delete, or manage video clips ⬇️ > 📺 Multimedia > Media Finder > Videos > All Videos To copy or move a file from your memory card (💾) to your phone memory (📱), highlight it in the list and press Options > Manage > Copy or Move > Memory Card . You cannot copy or move some copyrighted files.
start micro-browser Just press 🌐. Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, press ⬇️ > 🌐 WebAccess > Web Sessions .

features
download objects from Web page Download a picture, sound, or other object from a Web page: Press 🌐, go to the page that links to the file, scroll to the link, and select it. Note: Normal airtime and/or carrier usage charges apply.
Web sessions A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session: ⬇️ > 🌐 WebAccess > Web Sessions
clear micro-browser history Clear the micro-browser's history, cache, or cookies: ⬇️ > 🌐 WebAccess > Browser Setup > Clear History , Reset Cache , or Clear Cookies

features
download game or application You can download a Java™ game or application the same way you download pictures or other objects: Press 🌐, go to the page that links to the file, scroll to the link, and select it. Note: Normal airtime and/or carrier usage charges apply.
start game or application Start a Java™ game or application: ⬇️ > 🎮 Games & Apps , scroll to the game or application, press the centre key ⬇️. Note: To install and run games stored on your memory card, press ⬇️ > 🎮 Games & Apps > [Install New] .

features
aeroplane mode You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications. ⬇️ > ✈️ Aeroplane Mode > Aeroplane Mode > On You can make the aeroplane mode option appear whenever you turn on your phone: ⬇️ > ✈️ Aeroplane Mode > Prompt At Startup > On

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.70 W/kg.¹ As

mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 1.14 W/kg.¹

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

-
1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
 2. Please see the Safety and General Information section about body worn operation.

Information from the World Health Organisation

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

<http://www.who.int./peh-emf>

centre select key 20
 clock 57
 codes 54
 conference call 68
 copy files 27
 copyrighted files 42
 costs, tracking 82

D

data call 84
 data indicator 46
 date, setting 57
 datebook 86, 87
 dial a phone number 24, 69, 70
 dialled calls 61
 digit dial 66
 digital audio 32
 display 3, 45, 59
 divert calls 68, 69
 downloaded files
 from Web pages 90

 in messages 77
 DTMF tones 62, 70

E

earpiece volume 52
 email
 reading and managing 77
 sending 75
 settings 78
 emergency number 64
 emoticon 80
 end a call 24, 38
 end key 1, 24
 Enter Unlock Code message 54
 external display 36, 53

F

fax call 84
 fixed dial 69
 flip 24, 60

G

games 91
 GPRS indicator 46
 group mailing list 74

H

handsfree speaker 54
 headset 83
 headset jack 1
 hold a call 67
 home screen 3, 45, 81
 hot message 40

I

IM 79
 in-call indicator 47
 Incoming Call message 63
 information services 79
 instant messaging. See IM
 international access code 67
 iTAP text entry mode 50

index

A

accessories 20, 83
 accessory connector port 1
 active line indicator 47
 aeroplane mode 91
 alarm clock 85, 86
 alarm indicator 47
 alert
 set 52, 53, 56
 turn off 52, 56, 61
 animation 89
 answer a call 24, 60
 attach a number 62, 66
 audio player 32

B

backlight 59

battery 22, 23
 extending battery life 21
 battery indicator 48
 battery life, extending 58, 59, 60
 Bluetooth connection
 datebook entry, printing 87
 datebook entry, sending 87
 description 26
 indicator 27, 32
 messages, printing 77
 phonebook entries 75
 restricting access 31
 brightness 59
 browser messages 79
 browser. See micro-browser

J

Java applications 91

K

keypad 60, 81

L

language 80
 licences 42
 linking. See Bluetooth connection
 lock
 application 89
 phone 54
 SIM card 88
 Low Battery message 48

M

make a call 24
 master clear 82
 master reset 81

Media Finder 32
 memory card 41
 menu 3, 20, 45, 80, 81
 menu icons 45, 81
 message 76, 78
 message alerts 56
 message indicator 39, 47
 message reminders 81
 micro-browser 79, 90, 91
 Missed Calls message 63
 MMS, defined 39
 MP3 sound files 32, 33
 multimedia message 38, 76, 78
 mute a call 67

N

name dial 70
 navigation key 1, 20, 53
 network settings 85
 notepad 67
 number. See phone number

C

cables 43
 calculator 88
 call
 answering 24, 60
 barring 54, 69
 diverting 68, 69
 end 24
 ending 24, 38
 making 24
 timers 82
 waiting 68
 call divert indicator 47
 caller ID 62, 63, 72
 camera 34
 car kit 83
 categories 73
 centre key 1, 53

numeric entry mode 52

O

object exchange 27
 open to answer 60
 optional accessory 20
 optional feature 20

P

pairing. See Bluetooth connection
 passwords. See codes
 personalise 80
 phone number 25
 phonebook 62, 66, 70, 71
 photo 34, 89
 picture 89
 picture ID 63, 72
 PIN code 23, 54, 88
 PIN2 code 54
 power key 1, 23

printing 29

Q

quick dial 70

R

received calls 61

recent calls 61

redial 63

reminders 81

restrict calls 69

return a call 63

ring style indicator 48

ring style, setting 52, 53, 56

ringer ID 63, 72, 80

ringer volume 52, 80

roam indicator 47

S

screen saver 58

scrolling 80

security code 54

send key 1, 24

service dial 70

signal strength indicator 46

SIM Blocked message 23, 88

SIM card 20, 23, 54, 70, 78,
88

skin 59

smart key 53, 81

smiley. See emoticon

soft keys 1, 45, 81

software update 85

speakerphone 83

speed dial 71

store your number 25

symbol entry mode 52

synchronising 84, 85

T

tap text entry mode 51

telephone number. See
phone number

text entry 48

text message 76, 78

theme 59

time zone 57

time, setting 57

timers 82

transfer a call 68

turn on/off 23

U

unlock

application 89

phone 23, 54

SIM card 88

unlock code 54

USB cables 43

V

video clip 90

videos 37

voice dial 66, 70, 83

voice message 76

voice record 88

voicemail 64

voicemail message indicator
47, 64

volume 52, 80, 81

W

wallpaper 58

Web pages 90

Web sessions 90

WHO information 94

Y

your phone number 25