 
 


Welcome to the world of Motorola digital mobile communications! We are pleased that you have chosen the **MOTORAZR™ maxx V6 3G** mobile phone.

Note: Your phone may not appear exactly as the phone images below and throughout this manual. However all key locations, sequences, and functions are the same.

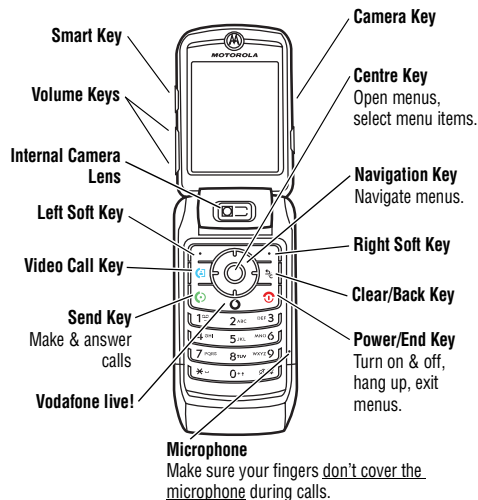

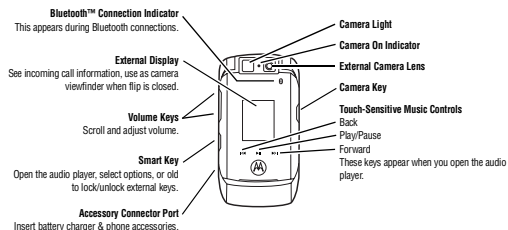

To make your phone light up when you receive calls or messages, see page 59.

www.motorola.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed

to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2006.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software.

2 Introduction

Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While features may be subject to change without notice, every effort is made to ensure that user manuals reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Introduction	1	Camera	31
Safety Information	6	Taking and Sending a Photo	31
Use and Care	13	Using Photos and Pictures	32
EU Conformance	14	Recording Video Clips	34
Recycling Information	15	Using Video Clips	35
Basics	16	Making Video Calls	36
About This Guide	16	Using and Transferring Files	39
Installing the USIM, SIM, or Memory Card	16	Playing or Viewing Media Files	39
Memory Card	17	Sending Media Files	39
User Memory	18	Audio Player	40
Battery Tips	18	Connecting Your Phone to Another Device	41
Installing the Battery	19	Connecting a Memory Card to your computer	45
Using Your Charger	19	Phone Updates	46
Charging the Battery	20	Vodafone live!	47
Turning Your Phone On	20	Vodafone live!	47
Adjusting Volume	21	Learning to Use Your Phone	50
Making a Call	21	Using the Display	50
Answering a Call	22	Using the 5-Way Navigation Key	52
Changing the Call Alert	22	Using Menus	53
Viewing Your Phone Number	22	Smart Key	54
Entering Text	23	External Display	54

Using the Handsfree Speaker	55	Using Call Waiting	65
Changing a Code, PIN, or Password	55	Using Caller ID	65
Locking and Unlocking Your Phone	56	Calling an Emergency Number	66
If You Forget a Code, PIN, or Password	57	Dialling International Numbers	66
Setting Up Your Phone	58	Calling With Speed Dial	66
Storing Your Name and Phone Number	58	Using Voicemail	67
Setting the Time and Date	58	Phone Features	69
Setting a Ring Style	58	Navigation Guide	69
Ring & Event Lights	59	Feature Quick Reference	71
Setting a Wallpaper Image	59	SAR Data	89
Setting a Screen Saver Image	60	WHO Information	90
Setting Display Appearance	60	Index	91
Setting Answer Options	61		
Calling Features	62		
Turning Off a Call Alert	62		
Viewing Call Log	62		
Redialling a Number	63		
Using Automatic Redial	63		
Returning an Unanswered Call	64		
Using the Notepad	64		
Putting a Call On Hold or Mute	64		

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

3.1 Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

3.2 Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

3.2.1 External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

3.2.2 Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

3.2.3 Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting.

3.2.4 Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body.

3.2.5 Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

3.3 RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3.3.1 Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

3.3.2 Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an aeroplane or entering an area where the use of wireless devices is restricted.

3.3.3 Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimetres (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your doctor may be able to assist you in obtaining this information.

3.4 Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the “Wireless Phone Safety Tips” at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

3.5 Operational Warnings

3.5.1 For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

3.5.2 Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorised staff.

3.5.3 Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

3.5.4

Blasting Caps and Areas

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

3.5.4 Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

3.5.5 Damaged Products



If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.




3.5.6 Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.

Symbol	Definition
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

3.6 Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

3.7 Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

3.8 Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone (the flashing-light feature is not available on all products).

3.9

Caution About High Volume Usage

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

3.9 Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

3.10 Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
 - If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
 - If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.
1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

To care for your Motorola phone, please keep it away from:



liquids of any kind

Do not expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Do not try to dry your phone in a microwave oven.



dust and dirt

Do not expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



the ground

 
Do not drop your phone.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

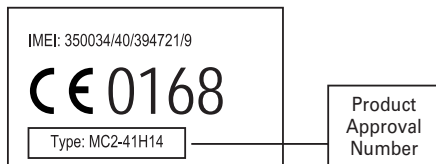

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

6.1 Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose of the product with household waste.

6.2 Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

7.1 About This Guide

This guide describes the basic features of your Motorola mobile phone.

To obtain another copy of this guide, see the Motorola Web site at:

www.hellomoto.com

A Quick Start Guide for this product is also available.

7.1.1 Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

7.1.2 Optional Accessories



 
This label identifies a feature that requires an optional Motorola Original™ accessory.

7.2 Installing the USIM, SIM, or Memory Card


Caution: Do not bend or scratch your card. Avoid exposing your card to static electricity, water, or dirt.

Turn off your phone and remove your battery before you install or remove a SIM card.


Your 3G USIM (Universal Subscriber Identity Module) Card contains your phone number, service details, and contacts list/message memory. Your phone can use GSM SIM (Subscriber Identity Module) cards, but not all features will be available.

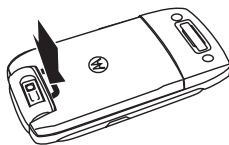

1

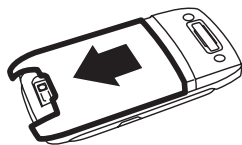 

2

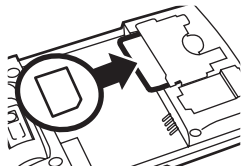 


3

7.3 Memory Card

Insert the Memory Card next to the SIM card. To remove the memory card, slide it out.

 The Memory Card provides you with a larger storage capacity than the Phone Memory. When you download pictures, sounds, video clips, or Java applications, they are saved to the Memory Card.

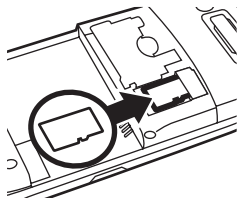

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

To show the amount of free space on the Memory Card:

Find the Feature



> Settings > Phone Status
> Storage Devices

Press



1

To

highlight the memory card

2



see the memory card information

When you look at a list of files in **My Files**, the icon next to it shows whether it is stored on your memory card or your internal memory.



= stored on internal
memory



= stored on memory
card

Note: A key over the icon indicates that the file has a copyright lock that keeps you from saving it on external memory, forwarding it, or editing it.



If you have a TransFlash removable memory card, the use of an SD adapter allows you to use it in other devices that are compatible with SD cards (for example, digital cameras, laptops, mp3-players).

7.4 User Memory

Your phone stores any content that you add, like ringtones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

7.5 Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and battery chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling centre for proper battery disposal.

 
Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, please read the battery safety information in the *Safety and General Information* section included in this guide.


7.6 Installing the Battery




™ Your phone is designed to use only Motorola Original™ batteries and accessories.

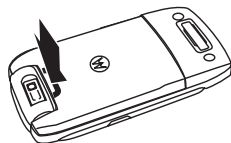


1

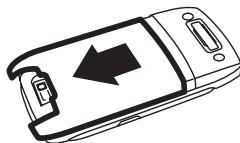 

2

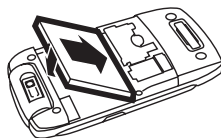 

3

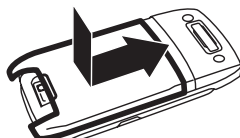 

4

7.7 Using Your Charger

The battery charger shipped with this device is specifically designed for use with Motorola 3G mobile phones. Other chargers might take longer to charge your battery or cause your calls to fail during charging.

For best performance, please use the following charger kit with this device:

- SPN5193 Charger.

7.8

 
Charging the Battery

7.8 Charging the Battery

New batteries are shipped partially charged. Before using your phone, please install and **fully charge the battery as described below**. Some batteries perform best after several full charge/discharge cycles.

Action

- 1 Plug the charger into your phone.

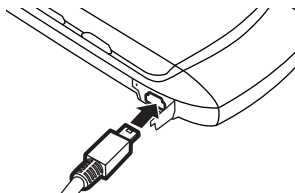


- 2 Plug the other end of the charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge complete**, remove the charger.

 
Your phone's battery charging indicator lights up while the battery is charging, and turns off when the battery is fully charged.


Tip: You can safely leave the charger connected to your phone after charging is complete. This will not damage the battery.

7.9 Turning Your Phone On

Action

- 1 Press and hold  for 2 seconds or until the display turns on.

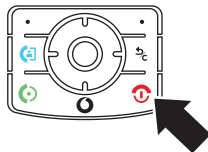

- 2 If you want to start in **Flight Mode**, see “Flight Mode” on page 88 for more details.
- 3 If you want to use a User Account, press  to scroll to the User Account you want. Then press the **Select** key to select the account from the list (stored on the SIM card).


Action

- 4 If you are prompted, enter your SIM card PIN code and press the **Ok** key to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 5 If you are prompted, enter your four-digit unlock code and press **Ok** key to unlock the phone.

 
Tip: The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

- 6 To turn off your phone, press and hold  for 2 seconds.

7.10 Adjusting Volume

Press the up or down volume keys to:

- increase or decrease earpiece volume during a call

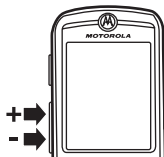


- increase or decrease speakerphone volume during a call
- turn off an incoming call alert
- increase or decrease the ringer volume setting when the home screen is visible


Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

To change your ringer volume when your phone is closed, see page 54.

7.11 Making a Call

To make video calls, see page 36.



Press	To
1 keypad keys	dial the phone number
2 	make the call


Press	To
3 	end the call and “hang up” the phone when you are finished
	or
	to “hang up” close the flip

Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted (see page 66).


7.12 Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.



Press	To
1 open the flip	
	or
	answer the call
Diverts or 	divert the call to your voicemail or call divert number, as though your line was busy

Press	To
2 	end the call and “hang up” the phone when you are finished



7.13 Changing the Call Alert

To set your Ring Style, press  > **Ring Styles** or **Settings** > **Ring Styles** (see page 58).

Shortcut: In the home screen, press the volume keys up or down to quickly change your ring style profile. With your phone closed, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

Shortcut: Press and hold  to quickly change to silent style. Press and hold  again to change back to previous ring style.

7.14 Viewing Your Phone Number

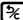
To view your phone number from the home screen, press  .

While you are on a call, press **Options** > **My Tel. Numbers**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 58. If you do not know your phone number, contact your service provider.

7.15 Entering Text

 Some features require you to enter information. The message centre lets you compose and send text messages.

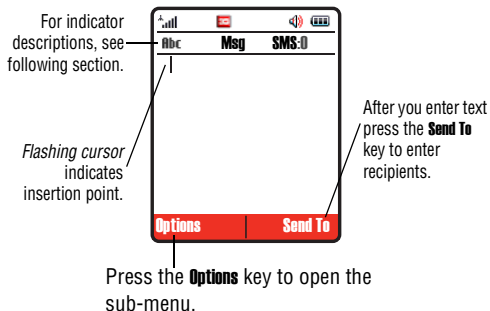

7.15.1 Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press **[#]** in any text entry screen to select one of the following entry modes:

- [1]** or **1** **Primary Text** entry mode can be set to any iTAP™ **[1]** or tap **1** mode.
- [2]** or **2** **Secondary Text** entry mode can be set to any iTAP™ **[2]** or tap **2** mode, or set to **None** if you don't want a secondary entry mode.
- 123** **Numeric** mode enters numbers only.
- &*** **Symbol** mode enters symbols only.

7.15.2

Setting Up a Text Entry Mode

7.15.2 Setting Up a Text Entry Mode

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view, select **Primary Text** or **Secondary Text**, and choose:

- iTAP** Let the phone predict each word as you press keys (see page 27).
- TAP** Enter letters and numbers by pressing a key one or more times.
- Tap Extended** Enter letters, numbers, and symbols by pressing a key one or more times.
- None** Hide the Secondary setting (only available for Secondary Setup).

Using Capitalisation

Press **[O]** in any text entry screen to change text case. The following indicators show capitalisation status:

- abc** = no capital letters **Abc** = capitalise next letter only
- ABC** = all capital letters

Text Entry Mode Indicators

When you select the **Primary Text** or **Secondary Text** entry mode, the following indicators identify the text entry setting:



Primary	Second.	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter only
1↑	2↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters


Two other indicators identify **Numeric** (123) or **Symbol** (&) entry modes.


7.15.3 Using Tap Mode

This is the standard mode for entering text on your phone.

Regular **TAP** mode cycles through the letters and number of the key you press. **Tap Extended** also cycles through additional symbols as shown in the chart on page 26.


Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
Tip: Press  right to accept a word completion, or  to insert a space.	

 In a text entry screen, you can press  to switch entry mode. If you don't see **Abc1** or **Abc2** then press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

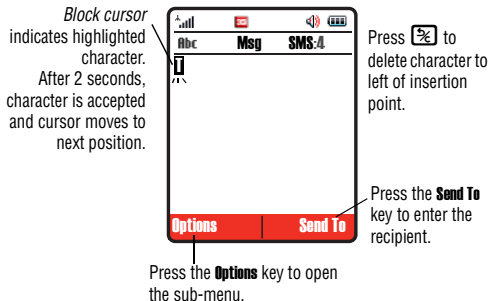

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

 When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **progr** you might see:

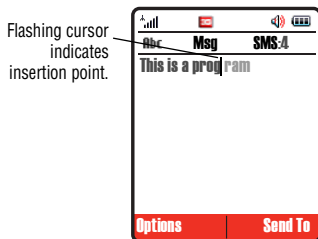

Press **⬅** right to accept **program**, or press **✖** to reject it and enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

- Press **⬅** left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press **⬇** down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press **⬇** to exit without saving.


Character Chart




Use this chart as a guide for entering characters with **Tap Extended**.




1	. ? ! , @ ' - _ : ; () & ` ~ " 1 0 ¿ ¡ ^ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
2	a b c 2 á à â ã ä å ç
3	d e f 3 é è ê ë
4	g h i 4 í î ï
5	j k l 5
6	m n o 6 ñ ò ó ô õ ö ø
7	p q r s 7
8	t u v 8 ú û ü ü
9	w x y z 9
0	change text case, for capital letters
✖	enter a space (hold to enter a return)
#	change text entry mode (hold for default)

7.15.4

Entering Words

In a text entry screen, you can press  to switch entry modes. An indicator shows which mode is active (see page 24). If iTAP mode is not available as the **Primary Text** or **Secondary Text** entry mode, see page 24.

Press	To
1 keypad keys (one press per letter)	show possible letter combinations If alternative combinations are available then an arrow appears below the letters.
2  up or down	go to the previous or next available predicted words Press and hold  up or down to display a popup window showing the next four predicted words. You can scroll up and down through this list and then press Select to accept the highlighted word.
3 	accept the predicted word

Press	To
4  left	move the cursor back one letter
5 	select a word You can press keypad keys to add more letters to the end of the combination.
or	
	enter the highlighted combination when it spells a word A space is automatically inserted after the word.

If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.

 
7.15.5 Using Numeric Mode

In a text entry screen, press **[#]** to switch entry modes until the **123 (Numeric)** indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press **[#]** to switch to another entry mode.

7.15.6 Using Symbol Mode

In a text entry screen, press **[#]** to switch entry modes until the **& (Symbol)** indicator displays.

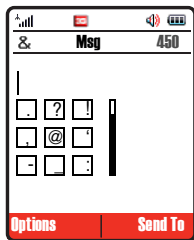

Press	To
1 ·◊· left, right, up or down	highlight the symbol you want
2 ·◊· down	view more symbols
3 ·◉· or the corresponding number key	enter the highlighted symbol
[*]	enter a space (hold to enter a return)
[#]	change text entry mode (hold for default)

7.15.7 Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action

Press **[X]** to delete the last letter.

Press and hold **[X]** to clear the entire message.

7.15.8 Copying, Cutting, and Pasting Text

From a text entry screen:

Find the Feature **Options > Editing Options**

Option	Description
Copy Text	Copy the text you are about to highlight (see “Highlighting Text” on page 30).
Cut Text	Cut the text you are about to highlight (see “Highlighting Text” on page 30).
Copy All Text	Copy all text in the editor.
Cut All Text	Cut all text in the editor.
Paste	Paste the text you cut or copied.
Undo	Undo the last copy, cut, or paste in the current text editor.

Note:



- **Paste** only displays once you have cut or copied some text.
- **Undo** only displays once you have cut, copied or pasted some text.

- **Copy All Text** also displays in the menu (press **Options**) when you are viewing details for a **Contacts** entry, **Calendar** event, **Vodafone live!** page, text message, or **Calls** entry.

Highlighting Text

In a text editor, to highlight and copy or cut text:

Find the Feature **Options > Editing Options > Copy Text or Cut Text**

Press	To
1 	scroll to the beginning of the text you want to copy or cut
2 Start key	turn on the highlighting marker
3 	scroll to the end of the text you want to copy or cut
4 Copy key	copy or cut the text you selected
or	
Cut key	You can now paste the text in another location or file.


Text remains on your clipboard, available to paste, until you copy or cut other text or until you turn off your phone.

You can do much more with your phone than make and receive calls! This section describes your phone's camera and video camera features.

8.1 Taking and Sending a Photo

To activate your phone's camera, press the camera key on the top right side of your phone (see page 1 for exact location), or select the camera icon on the main menu.

The active viewfinder image displays.

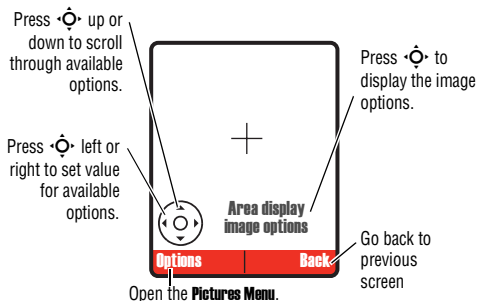 


Point the camera lens at the photo subject.

Press	To
1 or the camera key	take a photo Tip: Press to turn the light on or off
2 Options > Store Only or Options > Send or Send key or Options > Discard	store the photo send the photo in a message delete the photo and return to active viewfinder

Note: If you select **Store Only** you can select **Print and Store** to print the picture over a Bluetooth connection, see page 42.

Press **Options** to open the **Pictures Menu** when the camera is active. The menu can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Go To Video Mode	Capture and view videos stored on your phone.
Internal View/ External View	Switch between the internal (self-portrait) and external cameras.
Light On/Light Off	Turn the camera light on and off. <i>Note: The light stays on until you take a picture, receive a phone call, or select Light Off.</i>
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust picture and video settings.
Switch Storage Device	Choose to store and see pictures on your phone or memory card. 
Free Space	View memory space available for storing pictures.

Tip: To assign a stored picture to a contacts entry, open the entry and press **Options > Edit Contact > Picture**. You cannot assign pictures to entries stored on your SIM card.

8.1.1 Self Portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the camera key to capture and store the image.

8.2 Using Photos and Pictures

You can send your photos to other mobile phone users or email addresses, assign photos to specific contacts entries, and use them as wallpaper or screen saver images.

8.2.1 Downloading Pictures

Your phone may contain predefined photos, pictures, and animations. You can download and store additional images on your phone.

If you are unable to establish a network connection with Vodafone live!, contact your service provider.

Note: The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.





To download a picture from Vodafone live!, see page 47. To store a picture from a message, see page 74.


8.2.2 Viewing and Managing Pictures

Note: Some files might have a copyright lock that keeps you from saving them on external memory, forwarding them, or editing them.

To view a photo, picture, or animation stored on your phone:

Find the Feature  > **My Files > Pictures**

Press	To
1  up or down	scroll to the picture
2 	view the picture
	Press and hold  to go to full screen view. Press and hold  to return to normal view.

Press	To
3 	view the next/previous picture
or Options	open the Pictures Menu to perform other options

Tip: You can change the way your picture list displays using the **Pictures Setup** option in the **Pictures Menu**.

Press **Options** to open the **Pictures Menu** from the picture list. The menu can include the following options:

Option	Description
View	Details: View picture information. View Free Space: View memory space available for storing pictures.
Add to Album	Add picture to your album.
Create New	Capture a new picture or create an album of stored pictures.
Filter by	Filter pictures by Storage Location .
Send	Insert selected picture in a new message.

Option	Description
Apply As	Set the picture as your phone's Wallpaper or Screen Saver , or a Contacts .
Print	Print the picture.
Print Index	Details of printed pictures.
Manage	Select from Rename , Delete , Move or Copy To for the current picture.
Select Multiple to	Select more than one picture to Add to Album , Delete , Move , Copy or Print .
Properties	This lists the name, size, type, resolution, date stored.
Pictures Setup	Open the setup menu to adjust picture and video settings.

Note: **Send** and **Manage** are only available for photos you have taken or pictures you have downloaded.

8.3 Recording Video Clips

To record a video on your phone:

Find the Feature




> **Camera** > **Options**

> **Go To Video Mode**


The active viewfinder image displays.

 Note: Your phone's external **camera light** blinks during a video call, to let people around you know that they might be in your video.

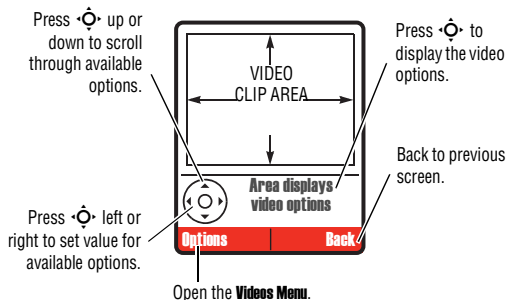

Note: The number of clips remaining is only an estimate.

Point the camera lens at the video subject, then:

Press	To
1  or the camera key	start the video Tip: You can press the Pause key to pause video capture.
2 Stop key	stop the video
3 Options > Store Only or Send key or Options > Discard	to store the video To play a stored video, see page 35. to send the video in a message delete the video and return to active viewfinder

Press **Options** to open the **Videos Menu** when the camera is active. The menu can include the following options:

Option	Description
Go To Videos	View videos stored on your phone.
Go To Photo Mode	Capture and view photos stored on your phone.
Internal View/ External View	Switch between the internal (self-portrait) and external cameras.
Videos Setup	Open the setup menu to adjust picture and video settings.
Switch Storage Device	Choose to store and see videos on your phone or memory card.
Free Space	See how much memory remains for storing videos.

8.4 Using Video Clips

You can download video clips with Vodafone live!, and receive video clips in multimedia messages.

8.4.1

Downloading Video Clips

8.4.1 Downloading Video Clips

To download a video clip with Vodafone live!, see page 47. To store a video clip from a message, see page 74.

8.4.2 Viewing and Managing Video Clips

To play a video clip stored on your phone:

Find the Feature



> My Files > Videos

Press	To
1 up or down	scroll to the video clip
2	start video clip playback

During video clip playback, press **Options** to open the **Videos Menu** to perform various operation on the video:

Option	Description
Play Full Screen	Stretch the video to fill the display. Tip: A video can also be viewed in full screen by pressing the key .
Listen via Bluetooth	Choose to enable Bluetooth to listen to your videos.

Option	Description
Create New	Capture a new video.
Properties	This lists the name, size, type, resolution, dated stored.
Videos Setup	Open the setup menu to adjust video settings.

8.5 Making Video Calls

With your phone you can make a video call to someone else who has a video phone and see each other while you talk. Please note that both parties participating in the video call have to be on the 3G network and in the 3G coverage area.

8.5.1 Making a Video Call

A quick guide to making a video call:

Press	To
1 keypad keys	dial the phone number
2	make the call
3	end the call and “hang up” the phone when you are finished

Options During an Active Video Call

Swapping Views

Press	To
Swap View	swap between the primary and the secondary video area during a video call

During an active video call, there are two video areas on your phone display. The primary video area shows your image (or the selected **Camera Off Image**) and the secondary video area shows your recipient's image. You can swap between the video areas to place your image onto the secondary video area, and the recipient's image onto the primary video area.

Selecting Applications

Press	To
More Apps	access other applications during a video call

During an active video call, you can access other applications, such as **Contacts**, **Calendar**, **My Files** or **Vodafone live!**

You can also send and receive messages during a video call or start a new video call.

Video Call Menu

Find the Feature **Options > Video Call Menu**

Some of the options accessed from the **Video Call Menu** during an active call include the following:

Press	To
More Apps	access applications during an active call, such as Contacts , Calendar or Vodafone live!
Brightness/Contrast	adjust the brightness/contrast level of the display. This does not affect the outgoing video image.
Camera On/Camera Off	change whether you want the camera to be on or off
External View/Internal View	if the camera is on, select the view from which the image is captured.

8.5.2

Recording a Video Call

Press	To
Swap View	change between the primary and secondary video area on your phone display
Hold/Resume	if the camera is off, put audio on hold to be able to e.g. change different image as your Camera Off Image . Select Resume to return to the Video Call Menu .
Audio Mute/Unmute Audio	stop sending video image temporarily. Select Unmute Audio to resume sending the video image
Use Bluetooth	choose to enable Bluetooth.
My Tel. Number	display your telephone number from the home screen.

8.5.2 Recording a Video Call

Note: Recording of phone calls is subject to varying country laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

You can record a video call as a video clip. During a video call:

Press	To
1 Options > Record	start recording the call Your phone displays Recording . It records incoming video and incoming and outgoing audio.
2 Options > Stop	stop recording and store the video clip The recording stops automatically if the call ends or you reach your video capture or memory limit. To view the video clip see page 35.

Note: Video recording requires video compatibility with the other caller's video phone.

You can store, send, and play music, videos, and other media files on your phone.

9.1 Playing or Viewing Media Files

To play music:

Find the Feature



> **My Files** > **My Music**
and select the file you want
to play

For more about playing music files, see page “Audio Player” on page 40.

To play or view other media, follow the instructions above but replace **My Music** with the type of media you want.

Tip: You can listen to tunes on your way. Use *flight mode* to make your phone safe to use even while you're on a plane. See page 88.

9.1.1 Viewing a full screen picture

To view a picture without any icons showing on the screen:

Press	To
and hold	view as full screen
left or right	scroll through all the pictures as full screen
and hold	return to normal view

9.2 Sending Media Files

To send music:

Find the Feature




> **My Files** > **My Music**

Highlight the file you want to send and press **Options** > **Send** > **in Message**.

To send other media, follow the instructions above but replace **My Music** with the type of media you want.

9.2.1 Create a Playlist

Find the Feature  > **My Files > My Music > Playlists**
> **[Create New Playlist]**


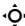
Open a song list, and press the *centre key*  to select each song you want. After you press the **Done** key, enter a name for your list.



To hear your playlist, highlight it under **Playlists** and press **Options > Play**.

9.3 Audio Player

You can't use the audio player with a USB cable connected to your phone.

Find the Feature  > **Music/My Files > My Music**
> **All Tracks** select the file you want to play

Press	To
	play or pause
 left or right	skip back or forward

Press	To
 up or down	change volume
 up	continue playing

Hide the audio player by pressing **Options > Hide**. This lets you use other phone features while the song plays.

Press  up or down to highlight an option:

Option	Description
Back	Takes you back to the previous menu screen.
Lock Keys	Enables external key lock.
Playlists	Create or play a playlist.
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Songs	Select songs to show or play the songs.
Exit	Takes you out of My Music.

To download songs to your phone, see page 49. To copy files between your phone and a computer, see page 41.

Note: Your phone cannot play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file. Metadata information is **not** supported for **MP4** formatted files.

9.3.1 Play Music With Your Phone Closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song artist, title, and time. To control your music playback:

- Press the **volume keys** to adjust the volume.
- Press the **smart key** to open the audio player menu. Press the volume keys to scroll through the menu, and press the **smart key** to select a menu item.
- Press and hold the **smart key** to lock or unlock the side keys.
- The controls close after 4 seconds, if you don't use them.

You can also use touch-sensitive music controls on the front of the phone:

Press	To
⏮	Previous track
⏸	Play/pause
⏭	Next track

9.4 Connecting Your Phone to Another Device

You can connect your phone to a computer or handheld device using a USB cable or a Bluetooth connection.



Note: Not all devices are compatible with all types of connections. Check your external device for specifications. The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

To make data calls through a connected computer, see page 83.

9.4.1

Setting Up a Cable Connection

 
9.4.1 Setting Up a Cable Connection

Attach a Motorola Original™ USB cable to the phone and external device as follows.

Note: Check your computer or hand-held device to determine the type of cable you need.

Action

- 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.
- 2 Plug the other end (the USB connection) into the USB port on the device.

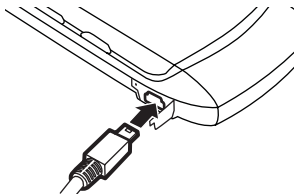

Bluetooth headset or car kit, or pair your phone with a computer to exchange and synchronise files.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Turning Bluetooth Power On or Off

Find the Feature



> **Connectivity** > **Bluetooth**
> **Setup** > **Power** > **On**

If Bluetooth **Power** is **On**, your phone can automatically pair with the handsfree device you have used before. Just turn on the device or move it near the phone.

Once you connect your phone to a Bluetooth device, your phone "recognises" that device in the future. If a recognised device starts a Bluetooth link with your phone, the Bluetooth status icon appears at the top of your display.

Note: To extend battery life, use the above procedure and set Bluetooth **Power** to **Off** when not in use. Your phone will not pair with devices until you set Bluetooth **Power** back to **On** and pair your phone with the devices again.

9.4.2 Setting Up a Wireless Connection

Your phone supports Bluetooth™ wireless pairing (also called *linking* or *bonding*). You can pair your phone with a

Pairing With a Headset or Handsfree Device

Before you try to pair your phone with a device, make sure the device is on and ready in *pairing* or *bonding* mode (see the user's guide for the device). For maximum Bluetooth security, you should always pair Bluetooth devices in a safe, private environment.


Find the Feature



> **Connectivity** > **Bluetooth**
> **[Add Audio Device]**

Your phone lists the devices it finds within range. Highlight a device in the list and:

Press	To
1 Select	select the device
2 Yes or Ok	pair with the device
3 keypad keys	enter the device passkey (such as 0000) if necessary, and then press the Ok key

When your phone is paired, the Bluetooth indicator  shows in the home screen.

Shortcut: After you have paired with a device, you can pair with it again by pressing **Options** > **Use Bluetooth** during a phone call or while playing a sound file.

Note: You can't play some copyrighted files over a Bluetooth connection.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

Copying Objects to Another Device



You can use Bluetooth pairing to copy a media object, contacts entry, calendar event, or bookmark from your phone to a computer or other device.

Note: You cannot copy a copyrighted object.

- 1 On your phone, highlight the object you want to copy to the other device.
- 2 Press **Options** and select **Manage** > **Copy** (for media objects), **Manage** > **Send** (for calendar events), or **Share** > **Contact** (for contact entries).
- 3 Select a recognised device name, or **[Look For Devices]** to search for the device where you want to copy the object.

Sending Objects to a Printer



You can use Bluetooth pairing to send a picture, message, contacts entry or datebook view from your phone to a printer.

Note: You cannot print message **Templates** or a contacts **Mailing List**.







Tip: After you capture a picture in the camera, you can select **Options** and press **Print**.

- 1 Highlight the object on your phone that you want to print
- 2 Press **Options** > **Print**. In the **Calendar**, you can print the month, week or day.
- 3 If available, choose additional objects or print options.
- 4 Select a recognised printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the device to which you want to send the object.

Note: You you see **Service not Supported** when you try to print, select, **Options** > **Manage** > **Copy** > **Bluetooth** instead. Always use this option to print 4x6 photos.

Advanced Bluetooth Features

A device is recognised after you pair with it once (see page 42).

Features	
Make phone visible to other device	Allow another Bluetooth device to discover your phone:  > Connectivity > Bluetooth > [Find Me] 
Pair with recognised device	Pair your phone with a recognised handsfree device:  > Connectivity > Bluetooth > [Add Audio Device] > <i>device name</i> 
Drop pairing with device	Highlight the device name and press the Drop key. 
Switch to recognised device during call	During a call press Options > Use Bluetooth to switch to a recognised headset or car kit. Your phone connects automatically, or shows a list of devices you can select. 

Features	
Play sound files on a recognised headset	<p>While playing a sound file press Options > Use Bluetooth to switch to a recognised headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>Note: You cannot play some copyrighted files over a Bluetooth connection.</p>
Move multimedia object to device	<p>Move a multimedia object to another device.</p> <p>Highlight the object, press Options > Manage > Move, select the device name.</p> <p>Caution: Moving an object deletes the original object from your phone.</p>
Set Bluetooth options	<p>Highlight the device name, press ••• > Connectivity > Bluetooth > Setup</p>

9.5 Connecting a Memory Card to your computer

For details on installing a memory card see “Memory Card” on page 17.

You can access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

- 1 Press **••• > Connectivity > USB > Memory Card**. This directs the USB connection to your memory card.
- 2 Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer.

On your computer:

- 1 Open your “My Computer” window, where your phone's memory card shows as a ‘Removable Disk’ icon.
- 2 Click on the ‘Removable Disk’ icon to access the files on your phone's memory card.

- 3 To store the desired files onto the memory card, drag and drop them as follows:
music files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, remove the device by selecting the 'Safely Remove Hardware' icon in the system tray at the bottom of your computer screen. Then select 'USB Mass Storage Devices' and 'Stop'.
- 5 Select 'USB Mass Storage Device' then 'OK'.

On your phone:

To return to Data as your USB default connection, press:

•◉• > **Connectivity** > **USB** > **Data connection**

9.6 Phone Updates

Sometimes we think of ways to make your phone's software faster or more efficient after you have purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/update>



Note: *Software updates do not affect your contacts entries or other personal entries. If you receive a software update but choose to install it later, see page 84.*

10.1 Vodafone live!

Your phone has been customised to give access to Vodafone live!. Visit www.vodafone.com for additional information about the services Vodafone live! offers.

To connect to the Vodafone live! service, press the Vodafone live! key on your handset. If you have any problems connecting to Vodafone live!, please contact Vodafone.

Find the Feature

Press  to connect


or



> Vodafone live!

> Vodafone live!



You have the following options while browsing:

Option	Description
	Go to the live! Homepage
Enter URL	Go to a requested page.
Shortcuts	View a list of shortcuts you have created.
Saved Pages	View a list of pages you have saved.
History	View a list of recently viewed pages.


Option	Description
Browser Settings	Change Vodafone live! settings.
Internet Profiles	Create an internet profile.


You can also download pictures, videos, ringtones and games from Vodafone live! and install them on your phone.

The Vodafone live! service allows you to access Web pages and Web-based applications on your phone. If necessary, please contact Vodafone to configure your phone.

Your phone will use a *High Speed Downlink Packet Access* (HSDPA) 3G broadband connection or a 3G connection when available. These connections bring improved quality, sound, pictures and videos, as well as increased speed when downloading games and ringtones. The HSDPA connection is indicated by a  indicator and the 3G connection by a  indicator.




Note: The availability of HSDPA may depend on the coverage at your location and/or your service provider.


Alternatively, your phone may use a high-speed *General Packet Radio Service* (GPRS) network connection. This type of connection is identified by a  (GPRS) indicator in the

home screen that disappears when you start Vodafone live!. If you see an  (in-call) indicator during a Vodafone live! session, your phone is using a standard voice connection. The type of network connection your phone uses depends on your service provider's network. Your network connection charges may vary depending on the type of connection used.

Note: Some features on your phone might open Vodafone live! automatically.




10.1.1 Starting Vodafone live!

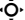Press	To
1 	start Vodafone live!
or	
Press  > Vodafone live! > Vodafone live!	
2  up or down	scroll to a shortcut, service or application
3 Select key	select the item

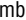Shortcut: If you open a text message with a Web address (URL) embedded in it, you can press  > **Go To** to launch Vodafone live! and go directly to the URL.

If you are unable to establish a network connection with Vodafone live!, contact your service provider.


10.1.2 Interacting With Web Pages

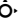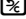Press	To
 up or down	scroll through text, or highlight a selectable item
Select key	select the highlighted item
keypad keys, followed by the Ok key	enter information Tip: If you make a mistake, press  to delete the last letter, or press and hold  to clear all letters.
Back key	go back to the previous page
Options	open the Browser Menu

10.1.3 Downloading Objects From a Web Page

You can download pictures, sounds, or other objects from a Web page by selecting the link. You can store media objects on your phone, and use them as wallpaper images, screen saver images and event alerts.

Note:

- The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.
- If you receive a call during the download, press the **More Apps** key to answer the call without ending the download.
- To end a download in progress, press .

10.1.4 Running Vodafone live! in the Background

Some phones are set up to run Vodafone live! in the background when the phone registers with a network. This lets your phone display information services messages sent by your service provider (such as stock updates, news headlines, or sports scores). These types of services

typically are available through subscription from your service provider.

Setting Up Vodafone live! Messages

Find the Feature




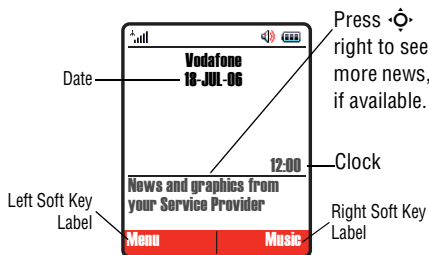 
- > **Messaging**
- > **Browser Messages**,
press **Options**
- > **Browser Message Setup**
- > **Service**

Option	Description
Off	Stop all Vodafone live! messages.
Receive All	Allow all Vodafone live! messages.
Restricted	Allow only Vodafone live! messages from your service centre number.

See page 1 for a basic phone diagram.

11.1 Using the Display

The *home screen* is displayed when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number. To dial a number from the home screen, press the number keys and .



 
Note: Your home screen may look different from the display shown above, depending on your service provider.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key or right soft key to



perform the function indicated by the left or right soft key label. For soft key locations see page 1.

The following status indicators can display:

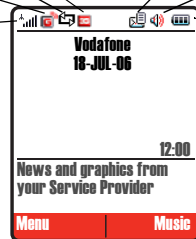1. Signal Strength
2. GPRS
3. Data
4. Roam
5. Messages
6. Ring Style
7. Battery Level



1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.

2. GPRS Indicator



Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:



= GPRS PDP context activate



= GPRS attach



= GPRS packet data available

3. Data Transmission Indicator

Shows connection and data transmission status. Indicators can include:



= secure packet data transfer



= unsecure packet data transfer



= secure application connection



= unsecure application connection



= secure Circuit Switch Data (CSD) call



= unsecure CSD call



= Bluetooth™ connection is active

4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:



= HSDPA home



= HSDPA roam



= 3G home



= 3G roam



= 2.5G home



= 2.5G roam



= 2G home





= 2G roam

11.2


Using the 5-Way Navigation Key

5. Message Indicator

 Displays when you receive a new message. Indicators can include:


 = text message


 = voicemail message

 = voice and text message

6. Ring Style Indicator


Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate and ring

 = vibrate then ring



 = vibrate


 = silent

7. Battery Level Indicator


Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.


11.2 Using the 5-Way Navigation Key

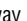  
Use the 5-way navigation key () to scroll up, down, left, or right in the menu system. Press the centre of the key () to select a highlighted menu item.

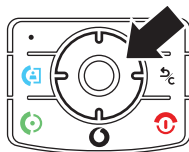





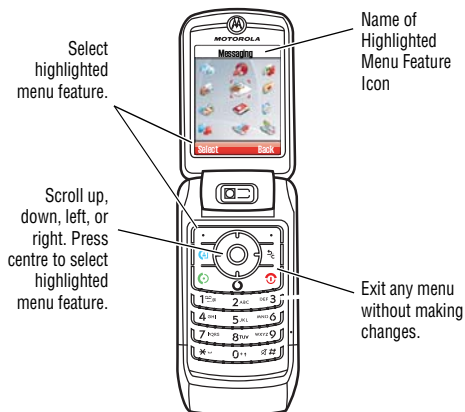







11.3 Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Entertainment		Organiser & Tools
	Vodafone live!		Contacts
	Music		Alarms
	Camera		Connectivity
	Messaging		Calls
	My Files		Settings



11.3.1 Selecting a Menu Feature


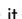
To select a menu feature, starting from the home screen:

Find the Feature



**Calls > Options > Filter by
> Dialed Numbers**

This example shows that from the home screen, you must press  to open the menu, highlight and select  **Calls > Options > Filter by > Dialed Numbers**, then highlight and select the call.

Press the navigation key () up, down, left or right to highlight items, and press it in () to select items. Press

 
11.3.2

Selecting a Feature Option

the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

11.3.2 Selecting a Feature Option

Some features require you to select an option from a list:

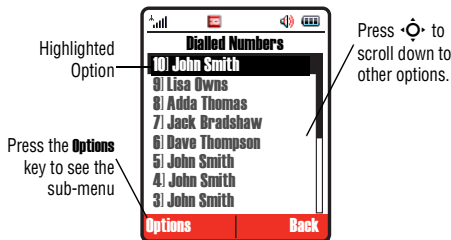

- Press <Left/Right> to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

- When an option has a list of possible values, press <Left/Right> left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

11.4 Smart Key

The smart key gives you another way to do things. For example, when you highlight a menu item, you can press the smart key to select it (instead of pressing <Enter>). The smart key usually does the same thing as <Enter>. To find the smart key, see page 1. To change what the smart key does in the home screen, see page 80.

11.5 External Display

When you close your phone, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. After your phone is inactive for a while, the display shows only a clock. For a list of phone status indicators, see page 50.

To set the phone ring style in the external display:

- 1 Press a volume key to see **Ring Styles**.

- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

11.6 Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the **Speaker** key to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speakerphone On** in the home screen. The handsfree speaker remains on until you press the **Speaker** key again or turn the phone off.

Note: *The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*

11.7 Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code or PIN2 code, if necessary. Your *Personal Identification Number* (PIN) code protects the information stored on your SIM card.

To change a code or password:

Find the Feature



> **Settings** > **Security**
> **Now Passwords**

11.8

Locking and Unlocking Your Phone

11.8 Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 66).

11.8.1 Locking Your Phone Manually

Find the Feature



> **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press

1 keypad keys

2 **OK** key

To

enter your unlock code

lock the phone

At the **Enter Unlock Code** prompt:

Press

1 keypad keys

2 **OK** key

To

enter your unlock code

unlock your phone

11.8.3 Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature



> **Settings** > **Security**
> **Phone Lock** > **Automatic Lock**
> **On**

Press

1 keypad keys

2 **OK** key

To

enter your unlock code

activate automatic lock



11.8.2 Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

11.9 If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code <i>bypass</i> screen
2 keypad keys	enter your 6 digit <i>security code</i>
3  key	submit your security code



If you forget your security code, SIM card PIN code or PIN2 code, contact your service provider.

12.1 Storing Your Name and Phone Number

To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view or edit your name and phone number.


Tip: If you want to see your phone number while you are on a call press **Options** > **My Tel. Numbers**.


If you do not know your phone number, contact your service provider.

12.2 Setting the Time and Date

Your phone uses the time and date for the **Calendar**.

Find the Feature

 > **Settings** > **Initial Setup**
> **Time and Date**

To synchronise the time and date with the network, press  > **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.



To manually set the time and date, turn off **Autoupdate**, then, press  > **Settings** > **Initial Setup** > **Time and Date** > *time* or *date*.

To choose an analogue or digital clock for your home screen, press  > **Settings** > **Personalise** > **Home Screen** > **Clock**.

To turn the date on or off on your home screen, press  > **Settings** > **Personalise** > **Home Screen** > **Date**.


12.3 Setting a Ring Style


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.


You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 52).



To set a ring style:

Find the Feature

 > **Settings** > **Ring Styles**
> *Style: style name*

Press	To
1  up or down	scroll to the ring style
2 Select key	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > *style Details*.

 
- If you select the **Silent** ring style, your phone will not use **Auto Answer** (see page 83).
- Java™ applications can make your phone vibrate or light up. You can turn off **App Vibration** and **App Backlight** under  > **Settings** > **Java Settings**.
- To change your ringer volume when your phone is closed, see page 54.
- To turn off alerts for messages that arrive during a call, select  > **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

12.4 Ring & Event Lights

Your phone has lights on the outside that can pulse for incoming calls or messages.

To set the light for your **incoming calls**, press  > **Settings** > **Ring Styles** > **Ring Lights**.

To set the light for your **incoming messages**, press  > **Settings** > **Ring Styles** > **Event Lights**.

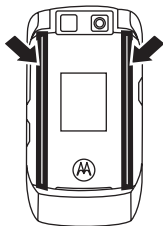

12.5 Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image displays as a faint watermark in text and menu displays.

When you set an animation as a wallpaper image, only the first frame of the animation displays.

Find the Feature  > **Settings** > **Personalise** > **Wallpaper**

12.6

Setting a Screen Saver Image

Setting	Description
Picture	Select the picture or animation for the background image in your home screen, or None for no wallpaper.
Layout	Select: Centre to centre the image on the display Tile to repeat the image across the display Fit-to-screen to stretch the image across the display.

12.6 Setting a Screen Saver Image

The screen saver image displays when the phone is on and no activity is detected for a specified time period.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

You can set a photo, picture, or animation as a screen saver image. The screen saver shows when the flip is open and no activity is detected for a specific time. The image shrinks to

fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Find the Feature



> **Settings** > **Personalise**
> **Screen Saver**

Setting	Description
Picture	Select the picture or animation for your screen saver or None for no screen saver.
Delay	Select how long your phone must be inactive before the screen saver picture displays. <i>Note: If this setting is longer than your Display Timeout setting, then your display will turn off before you see the screen saver.</i>

12.7 Setting Display Appearance

To choose a phone **skin** that sets the look and feel of your phone's display:

Find the Feature



> **Settings** > **Personalise**
> **Skin**

For basic instructions on how to make and answer calls, see page 21.


13.1 Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.









Press	To
either volume key	turn off the alert

13.2 Viewing Call Log

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the **Dialled Numbers** list.


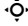

Find the Feature  > **Calls** > **Options** > **Filter by**

Press	To
1  up or down	scroll to Received Calls or Dialled Numbers
2 	select the list
3  up or down	scroll to an entry
	Note:  means the call is connected.
4 	call the entry's number
	Tip: Press and hold  for two seconds to send the number as DTMF tones during a call.
or 	make a video call to the entry's number
or 	view entry details
or Options	open the Last Calls Menu to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a contacts entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide Caller ID/Show Caller ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the Contacts or Calls lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.

13.3 Redialling a Number

Press	To
1 	view the dialled numbers list
2  up or down	scroll to the entry you want to call
3 	redial the number

13.4 Using Automatic Redial

When you receive a busy signal, your phone displays **Number Busy**.

With automatic redial, your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.


To turn automatic redial on or off:

Find the Feature  **> Settings > Initial Setup > Auto Redial**

13.5

Returning an Unanswered Call



When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see **Number Busy**:

Press	To
 or Retry key	activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.


13.5 Returning an Unanswered Call

 
Your phone keeps a record of your unanswered calls, and displays **x Missed Calls**, where **x** is the number of missed calls.

Press	To
1 View key	see the received calls list
2  up or down	select a call to return
3 	make the call

13.6 Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature  > **Calls** > **Notepad**

Press	To
	call the number
or	
Options	open the Dialling Menu to attach a number or insert a special character


13.7 Putting a Call On Hold or Mute

Press	To
Options > Hold	put all active calls on hold

Press	To
Mute key (if available) or Options > Mute	put all active calls on mute

13.8 Using Call Waiting

When you are on a call or downloading a file, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 Switch key or Link key or Options > End Call on Hold	switch between calls connect the 2 calls end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature  **> Settings > In-Call Setup > Call Waiting**

13.9 Using Caller ID

13.9.1 Incoming Calls

Calling line identification (Caller ID) displays the phone number for incoming calls.

The phone displays the caller's name (and picture, if available) if the name is stored in your contacts, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive **Ringer ID** for specific entries stored in your contacts. For more information, see page 77.

13.9.2 Outgoing Calls

You can show or hide your phone number as an ID for the calls that you make.

13.10

Calling an Emergency Number


While dialling (with digits visible in the display), press

Options > **Hide Caller ID/Show Caller ID**.


13.10 Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 112 or 000, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. Your service provider can program additional emergency numbers into your SIM card. *However, your SIM card must be inserted in your phone in order to use the numbers stored on it.* See your service provider for additional information on this issue.

Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

13.11 Dialling International Numbers

Press and hold  to insert the local international access code (+) from which you are calling. Then press the keypad keys to enter the country code and number.

13.12 Calling With Speed Dial

To call contact entries 1 to 9, press and hold the single-digit speed dial number for one second.

You can set speed dial to call the entries in your phone's contacts list or Fixed Dial list.

Find the Feature



> **Settings** > **Initial Setup**
> **Speed Dial** > **Phone** or **Fixed Dial**

To add a new contact entry, see page 76 To edit the **Location Number** for a contact entry, press  > **Contacts**, highlight the entry, and press **Options** > **Edit Contact**.

13.13 Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Note: Your service provider may include additional information about using this feature.

13.13.1 Listening to Voicemail Messages

Find the Feature  > **Messaging** > **Call Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number, see page 67. If you don't know your voicemail number, contact your service provider.

13.13.2 Receiving a Voicemail Message

When you receive a voicemail message, your phone displays  (voicemail message indicator) and **New Voicemail**.

Note: The icon may vary depending on your service provider.

Press	To
Call key	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

13.13.3 Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature  > **Messaging**

Press	To
1 keypad keys	enter your voicemail number
2 OK key	store the number

You cannot store a **Insert Pause** (pause), **Insert Wait** (wait), or **Insert 'n'** (number) character in this number. If you want to store a voicemail number with these characters, create a

contact entry for it. Then, you can use the entry to call your voicemail.

14.1 Navigation Guide

Main Menu



Entertainment

- Games



Vodafone live!

- Vodafone live!
- Enter URL
- Shortcuts
- Saved Pages
- History
- Browser Settings
- Internet Profiles

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.



Music

- Recently Played
- My Music
- Music Store
- My Wishlist



Camera



Messaging

- Create Message
- Inbox
- Drafts
- Outbox
- Email
- Call Voicemail
- Browser Messages
- Information Services
- Templates
- Vodafone Mail
- Live! Studio



My Files

- Pictures
- Ringtones
- My Music
- Videos
- Screen Saver
- Voice Notes
- Themes
- Games



Organiser & Tools

- SIM Toolkit *
- Alarms*
- Calendar
- Calculator
- Dialling Services*



Contacts



SIM Toolkit *



Alarms *



Connectivity

- Bluetooth
- USB
- Synchronisation*



Calls



Settings

(see next page)

* optional features

Settings Menu**Personalise**

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver

**Ring Styles**

- Style
- *Style* Details
- Ring Lights
- Event Lights

**Diverts**

- Voice Calls
- Video Calls
- Cancel All
- Diverts Status

**In-Call Setup**

- Date and Time
- In-Call Timer
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert

**Initial Setup**

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear

**Phone Status**

- My Tel. Numbers
- Credit Info
- Battery Meter
- Download Location
- Storage Devices
- Software Update
- Other Information

**Headset**

- Auto Answer
- Ringer Options
- Voice Dial

**Car Settings**

- Auto Answer
- Auto Handsfree
- Power-off Delay
- Charger Time

**Flight Mode****Network**

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone

**Security**

- Phone Lock
- External Key Lock
- Lock Application
- Restrict Calls *
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt







**Java Settings**

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight



14.2 Feature Quick Reference

Please note that not all features may be available.

14.2.1 Calling Features



Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press the Link key
Call Transferring	During a call: Options > Transfer , dial transfer number, press  
Call Diverting	Set up or cancel call diverting:  > Settings > Diverts You can set how long your phone waits before it diverts a call (5, 10, 15, 20, or 25 seconds).
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring

Feature	Description
Attaching a phone number	Dial an area code or a prefix for a contacts number then: Options > Attach Number
Speed Dialling a Contacts Entry	You can assign the keys 1 to 9 to contact entries. Then, when you press and hold a key, your phone calls the entry. Note: Your service provider might have assigned some keys, such as 1 for your voicemail number. You can only speed dial contact entries that are stored on your phone (not on your SIM card). To assign a speed dial key, see page 79. To use a speed dial key, just press and hold the key in your home screen.

Feature	Description
Voice Dial a Number not Stored in Contacts (Digit Dial)	<p>Press and hold .</p> <p>When prompted, say “digit dial” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).</p> <p>Your phone recognises the digits you want to dial. To voice dial a contacts entry, see page 77.</p>
adapt your voice dial	<p>You can improve voice dial operations by training the phone to recognise your voice:</p> <p> > Settings > Personalise > Voice Dial setup > Adapt digits</p>


14.2.2 Messaging



Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.

Feature	Description
Send Text Message	<p>Send a text message:</p> <p> > Messaging > Create Message > Message</p>
Send Voice Message	<p>While you are creating a message select: </p> <p>Options > Insert > New Voice Note</p> <p>To record the voice message, press the Capture key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.</p>

Feature	Description
Read and Manage Messages	<p>☛ > Messaging > Inbox</p> <p>Icons next to each message indicate if it is read ☐ or unread ☐. Icons can also indicate if the message is locked 🔒, urgent !, low priority ↓ or has an attachment 📎.</p> <p>To set message options like Lock or Delete, highlight a message and press Options.</p>
Send Quick Note Text Message	<p>Send a quick note:</p> <p>☛ > Messaging > Templates > Text Templates</p> <p>Scroll to a note and press the Send key.</p>
Send Multimedia Message (MMS)	<p>Send a multimedia message:</p> <p>☛ > Messaging > Create Message > Message > Options > Insert</p>

Feature	Description
Use MMS Template	<p>Open an MMS template with preloaded media:</p> <p>☛ > Messaging > Templates > Multimedia Templates</p> <p>Tip: To rename a template you created, highlight it in this list and press Options > Rename.</p>
Create MMS Template	<p>Save an MMS message to use as a template:</p> <p>While editing a message, press Options > Save as Template.</p> <p>Tip: To download templates or other objects from a Web page, see page 87.</p>
Insert Pictures and Other Objects	<p>While editing a message:</p> <p>Options > Insert</p> <p>Note: Some files might have a copyright lock that keeps you from forwarding them.</p>

Feature	Description
View Sent Messages	•◂• > Messaging > Outbox
Read Message	Read a new text or multimedia message that you have received: Press •◂•.
Reply to Message	While reading a message: Options > Reply Tip: To change the message type for your replies to MMS messages: •◂• > Messaging Options > Setup > Message Setup > MMS Message Setup > Composing MMS 
Store Message Objects	Go to a multimedia message slide, or highlight an object in a message, then: Options > Store

Feature	Description
Set Up Text Message Inbox	Set up or edit the text message inbox settings: •◂• > Messaging Options > Inbox Setup > Text Message Setup
Browser Messages	Read messages received by your micro-browser:  •◂• > Messaging > Browser Messages
Info Services	Read subscription-based information services messages:  •◂• > Messaging > Information Services

Feature	Description
Print Message Over Bluetooth™ Connection	<p>You can use a Bluetooth wireless connection to send a message from your phone to a printer.</p> <p>☛ > Messaging > Inbox, Email Inbox, Browser Messages, or Information Services</p> <p>Highlight the message you want to print and press Options > Print.</p> <p><i>Note: You cannot print Quick Notes.</i></p> <p>For more about Bluetooth connections, see page 42.</p>

14.2.3 Email




Your phone is compatible with some push-email servers. If your service provider has a compatible server then your email will automatically be delivered to your phone. Contact your service provider for more information.




Feature	Description
Send Email Message	<p>Send an email message:</p> <p>☛ > Messaging Create Message > New Email</p>
Read Email Message	<p>Read a new email message that you have received:</p> <p>Press ☛.</p>
Read Old Email	<p>☛ > Messaging > Email</p> <p>Select account and choose folder.</p> <p>Press Options to perform various operations on a message.</p>




Feature	Description
Set Up Email Account	<p>Set up or edit the email inbox settings:</p> <p>• > Messaging > Email</p> <p>Select (Create Account) to add new account or select account and press Options > Account Settings to modify account.</p>

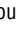

14.2.4 Contacts





Feature	Description
Create Entry	<p>Create a new contact entry:</p> <p>• > Contacts > (Create Contact) or Options > Create New > Phone Contact, SIM Contact, Distribution List or Email List</p> <p>Shortcut: Enter a phone number in the home screen, then press the Store key to create an entry for that number.</p>

Feature	Description
View All Entry Details	<p>View all the phone numbers, email addresses or URLs associated with a contact.</p> <p>• > Contacts, highlight the contact entry, press • left and right to view the other details.</p>
Dial Entry	<p>Call a number stored in the contacts:</p> <p>• > Contacts, highlight the contact entry, press  to call</p> <p>Shortcut: In the contacts, enter the first letters of an entry name to jump to the entry. You can also press  and  to see the entries that you use frequently or entries in other categories.</p>

Feature	Description
Voice Dial Entry (Name Dial)	<p>To Voice dial a number stored in the contacts:</p> <p>From idle, press and hold  then when prompted, say “name dial” (within two seconds). When prompted again, say the entry’s name (within two seconds).</p> <p>Your phone matches your voice to a contacts entry name. To voice dial a number not stored in the contacts, see page 72.</p>
Edit Entry	<p>Edit an entry stored in the contacts:</p> <p> > Contacts, highlight the contact entry, then press  > Options > Edit Contact</p>

Feature	Description
Set Ringer ID for Entry	<p>Assign a distinctive ringer alert to a contact entry:</p> <p> > Contacts > <i>entry</i> Options > Edit Contact > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option is not available for entries stored on the SIM card.</p> <p>Activate ringer IDs:</p> <p> > Settings > Ring Styles > <i>style Details</i> > Ringer IDs</p>
Set Picture ID for Entry	<p>Assign a photo or picture to show when you receive a call from an entry:</p> <p> > Contacts > <i>entry</i> Options > Edit Contact > Picture > <i>picture name</i></p> <p>Note: The Picture option is not available for entries stored on the SIM card.</p>






Feature	Description
Set Picture ID View	Show entries as a text list, or with picture caller ID photos:  > Contacts Options > Setup > View by > <i>view name</i>
Set Category for Entry	Set the category for a contact entry:  > Contacts > <i>entry</i> Options > Edit Contact > Category > <i>category name</i> <i>Note: The Category option is not available for entries stored on the SIM card.</i>





Feature	Description
Set Category View	Set a contacts category view:  > Contacts Options > Filter by > Category > <i>category view</i> You can show entries in a predefined category, or entries in a category you create. Shortcut: To see other categories in Contacts , press  or  .
Create Group Mailing List	You can put several Contacts entries in a group mailing list, then send a message to the list. To create a list:  > Contacts Options > Create New > Distribution List You can select the list name as an address for multimedia messages. <i>Note: A Distribution List cannot include entries stored on the SIM card.</i>



Feature	Description
Sort Contacts List	<p>Set the order in which contact entries are listed:</p> <p>•☎ > Contacts Options > Setup > Sort by > <i>sort order</i></p> <p>You can sort the contacts list by First Name or Last Name.</p>
Copy Contacts Entry	<p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone.</p> <p>•☎ > Contacts, highlight the entry, press Options > Copy to SIM Card or Copy to Phone.</p>
Copy Multiple Entries	<p>Copy multiple contact entries between the phone and the SIM card.</p> <p>•☎ > Contacts, highlight one entry, press Options > Select Multiple to then select Copy Phone to SIM or Copy SIM to Phone.</p>


Feature	Description
Send Contact Entry to Another Device	<p>Send a contact entry to another phone, computer, or device:</p> <p>•☎ > Contacts, highlight the entry, press Options > Send Contact</p>
Print Contacts Entry Over Bluetooth™ Connection	<p>You can use a Bluetooth™ wireless connection to send a contact entry from your phone to a printer</p> <p>•☎ > Contacts</p> <p>Highlight the entry that you want to print, and press Options > Print.</p> <p>Note: <i>You can't print a Mailing List.</i></p> <p>For more about Bluetooth connections, see page 42.</p>
Speed Dial	<p>Set speed dial to call entries stored in your phone memory contacts or the SIM card contacts:</p> <p>•☎ > Contacts > <i>entry</i> > Options > Add to Speed Dial</p>

14.2.5 Personalising Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language
Scroll	Set the highlight bar to stop or wraparound in lists:  > Settings > Initial Setup > Scroll
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > <i>style Details</i> > <i>event name</i>
Activate Ringer IDs	Activate distinctive ring alerts assigned to contact entries and categories:  > Settings > Ring Styles > <i>style Details</i> > Ringer IDs
Reminders	Set reminder alerts for messages that you receive:  > Settings > Ring Styles > <i>style Details</i> > Reminders

Feature	Description
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalise > Main Menu > View
Menu Order	Reorder your phone's main menu:  > Settings > Personalise > Main Menu > Reorder
Show/hide menu icons	Show or hide menu feature icons on the home screen:  > Settings > Personalise > Home Screen > Home Keys > Icons
Change Home Screen Nav Key Shortcuts	Change the features for the soft keys, navigation key and smart key in the home screen:  > Settings > Personalise > Home Screen > Home Keys


Feature	Description
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Erase all downloaded files and clear all settings and entries you made except SIM card information, unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Clear Caution: Master clear erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

Feature	Description
Software Update	Your service provider can update your phone software by sending software updates directly to your phone over the air. When you receive a software update, you can choose to download it and install it later. To install a software update you downloaded:  > Settings > Phone Status > Software Update > Update Now

14.2.6 Dialling Features

Feature	Description
DTMF Tones	<p>Activate DTMF tones:</p> <p>•> Settings > Initial Setup > DTMF</p> <p>To send DTMF tones during a call, just press the number keys.</p> <p>To send stored numbers as DTMF tones during a call: Highlight a number in the Contacts or Calls lists, then press •> Send Tones.</p>

14.2.7 Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.




The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.



Feature	Description
Call Timer	<p>View call timers:</p> <p>•> Calls > Call Timers</p>
In-Call Timer	<p>Display time or cost information during a call:</p> <p>•> Settings > In-Call Setup > In-Call Timer</p>
Call Cost	<p>View call cost trackers:</p> <p>•> Calls > Call Cost</p>

14.2.8 Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


Feature	Description
Speakerphone	<p>Activate the speakerphone during a call:</p> <p>Press the Speaker key (if available) or Options > Speakerphone On</p>



Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  <p>• > Settings > Car Settings or Headset > Auto Answer</p> <p><i>Note: Your phone will not automatically answer calls if the ring style is set to Silent.</i></p>
Voice Dial (headset)	Enable voice dial with headset send/end key:  <p>• > Settings > Headset > Voice Dial</p>
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  <p>• > Settings > Car Settings > Auto Handsfree</p>

Feature	Description
Power-off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  <p>• > Settings > Car Settings > Power-off Delay</p>
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  <p>• > Settings > Car Settings > Charger Time</p>


14.2.9 Data Calls



To connect a device to your phone with a USB cable see page 42.

Feature	Description
Send Data	Connect your phone to a device, then place a call through the device application. 



Feature	Description
Receive Data	Connect your phone to a device, then answer a call through the device application. 
Using Sync	<p>You can call an Internet server and synchronise your contacts and calendar entries with the server.</p> <p>To set up an Internet sync partner, press:</p> <p> > Connectivity > Synchronisation press Options > Setup</p>





14.2.10 Network Features






Feature	Description
Network Settings	<p>View network information and adjust network settings:</p> <p> > Settings > Network</p>


Feature	Description
Software Update	<p>Your service provider can send updated phone software over the air to your phone. </p> <p>When your phone receives a software update, you can choose to install it now or later. To install the software update now:</p> <p> > Settings > Phone Status > Software Update > Update Now</p>

14.2.11 Personal Organiser Features



Feature	Description
Create Calendar Event	<p>Create a new calendar event:</p> <p> > Organiser & Tools > Calendar, highlight the day, press , press Options > New</p>

Feature	Description
View Calendar Event	View or edit event details:  > Organiser & Tools > Calendar , highlight the day, press  , scroll to the event, and press Options > View
Send Calendar Event	Send an event in a Multimedia Message: While viewing an event, press Options > Send > Multimedia Message
Copy Calendar Event to Another Device	Copy a calendar event to another phone, computer, or device:  > Organiser & Tools > Calendar , highlight the day, press  , highlight the event, press Options > Send > Bluetooth

Feature	Description
Print Calendar Month, Week or Day Over Bluetooth™ Connection	You can use a Bluetooth™ wireless connection to send a calendar month, week or day from your phone to a printer.   > Organiser & Tools > Calendar Go to the month, week or day view and press Options > Print . For more about Bluetooth connections see page 42.
Set Alarm	Set an alarm:  > Alarms
Turn Off Alarm	Turn off alarm: Press the Disable key or  . Set 8-minute delay: Press the Snooze key.
Calculator	Calculate numbers:  > Organiser & Tools > Calculator

Feature	Description
Currency Converter	Convert currency:  > Organiser & Tools > Calculator Options > Exchange Rate Enter exchange rate, press the Ok key, enter amount, press Options > Convert Currency .

14.2.12 Security



Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application





14.2.13 News and Entertainment




Note: The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.

You can download for instance pictures, videos, ringtones and games from Vodafone live!

For basic information on the camera see page 31.

Feature	Description
Launch Vodafone live!	Start a Vodafone live! session:  or  > Vodafone live! > Vodafone live! Note: Your phone reads your micro-browser settings from the current USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, see page 87.

Feature	Description
Edit Micro-Browser Settings	You can edit the protocol, host, port and other information for your micro-browser connection:  > Vodafone live! > Browser Settings
Web Sessions	Select or create a Web session:  > Vodafone live! > Internet Profiles
Download Objects from Web Page	Download a picture, sound, or other file from a Web page: Press  > Vodafone live! , go to the page that links to the file, highlight the link, and select it.
Download Game or Application (Browser)	Download a Java™ game or application with the browser: Press  > Vodafone live! , go to the page that links to the file, highlight the link, and select it.

Feature	Description
Launch Game or Application	Launch a Java™ game or application:  > Entertainment > Games highlight the application, press the Select key <i>Note: To install and run games stored on your memory card, press</i>  > Entertainment > Games > [Install New]
Change Game or Application Settings	Change the volume, priority, or other settings for Java™ games or applications:  > Settings > Java Settings

Feature	Description
Flight Mode	<p>You can switch your phone to flight mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.</p> <p>•> Settings > Flight Mode > On</p> <p>You can make the flight mode option appear whenever you turn on your phone:</p> <p>•> Settings > Flight Mode > Prompt At Startup > On</p>
Manage Pictures	<p>Manage photos, pictures, wallpaper backgrounds and animations:</p> <p>•> My Files > Pictures</p>
Manage Ringtones and Music	<p>Manage ringtones and music that you have downloaded:</p> <p>•> My Files > Ringtones/My Music</p>

Feature	Description
Manage Video Clips	<p>Manage video clips:</p> <p>•> My Files > Videos</p>
Photo and Video Camera Settings	<p>Adjust settings for the integrated camera:</p> <p>•> Camera then press Options > Camera Setup</p> <p>or</p> <p>•> Video, then press Options > Videos Setup</p> <p><i>Note: The photo and video cameras use the same settings.</i></p>

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.47 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 1.17 W/kg.¹

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

-
1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
 2. Please see the Safety and General Information section about body worn operation.

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

<http://www.who.int./peh-emf>

A

- accessories 16, 18, 41, 43, 44, 45, 83,
84, 85
- alarms 85
- alert
 - lights 59
 - setting 21, 58, 80
 - turning off 21, 62
- animation
 - downloading 49, 87
 - managing 32, 88
 - screen saver 34, 60
 - wallpaper 34, 59
- answering a call 22, 61
- application, locking and unlocking 86
- audio player 40
- automatic redial 63

B

- backlight 61
- barring calls 71
- battery
 - charging 20

- extending battery life 18, 61
- installing 19
- level indicator 52
- battery charger 20
- Bluetooth™
 - connection 42
 - pairing 43
 - setting options 45
 - turning on and off 42
- brightness, setting 61
- browser 86
 - browser setup 87
 - Java applications 87
 - Web sessions 87

C

- calculator 85
- calendar 84, 85
- call
 - alert, turning off 21, 62
 - answer options 61
 - answering 22
 - barring 71

- barring password, changing 55
- call waiting 65
- costs 82
- dialled numbers list 62
- dialling 21
- diverting 71
- emergency number 66
- ending 22
- handsfree speaker 55
- holding 64
- international access code 66
- making 21
- muting 64
- received calls list 62
- receiving 22
- ring style 21, 58, 80
- speakerphone 82
- timers 82
- transferring 71
- unanswered call 64
- Call Failed, Number Busy** message 63
- call waiting 65
- caller ID 34, 65

calling line identification. *See* caller ID
calls 62
camera
 settings 88
 taking a photo 31
car kit
 auto handsfree 83
 charger time 83
 power-off delay 83
category
 contact entry 78
 view 78
centre select button 52
character chart 26
clock, setting 58
codes
 changing 55
 default 55, 57
 forgetting 57
computer
 connecting to phone 41
conference call 71

contacts
 attaching 2 numbers 71
 category for entry 78
 category view 78
 copying entries 79
 copying multiple entries 79
 creating mailing lists 78
 dialling a number 76
 editing an entry 77
 picture ID 34, 65, 77
 picture ID view 78
 printing entry 79
 ringer ID 77, 80
 sending entry to another device 79
 sorting entries 79
 speed dial 66
 speed dial number 71
 storing an entry 76
 voice dialling 77
currency converter 86
customising the menu 80

D

data call 84
 connecting to external device 41
date, setting 58
dialled numbers list 62
dialling a number 21
display
 backlight 61
 brightness 61
 description 50
 home screen 50
 personalising 80
 timeout 61
display appearance
 phone skin 60
 setting 60
distinctive ringer alert 80
diverting calls 71
downloading
 animation 49
 music 49

- photo 49
- picture 32, 49
- ringtone 49
- sound 49
- video clip 36, 49
- wallpaper 49
- DTMF tones
 - activating 82
 - sending 82

E

- earpiece volume 21
- email 75
 - inbox setup 76
- emergency number 66
- end key 1
- ending a call 22
- ending a video call 36
- Enter Unlock Code** message 56
- event lights 59
- external device
 - connecting to phone 41
- external display 32, 54

F

- 5-way navigation key 1, 52
- flight mode 88
- flip 61
- focus, photos 31
- full screen picture 33, 39

G

- games 87
- GPRS indicator 47, 51

H

- handsfree speaker 55
- holding a call 64
- home keys, personalising 80
- home screen, defined 50

I

- in-call timer 82
- incoming call
 - answering 22
 - diverting 71

- Incoming Call** message 65
- indicators
 - battery level 52
 - GPRS 47, 51
 - message 52
 - ring style 52
 - roam 51
 - signal strength 50
 - text case 24
 - text entry mode 24
 - transmission 51
 - voicemail message 52, 67
- info services 74
- international access code 66
- iTAP software 27

J

- Java applications 87

K

- key
 - centre select button 52
 - end 1

- 5-way navigation 1, 52
- left soft key 1, 50, 80
- power 1
- right soft key 1, 50, 80
- send 1
- volume control 1, 21

keypad 61

L

- language 80
- left soft key
 - functions 1, 50
 - personalising 80
- light 59
- lock
 - application 86
 - phone 56
 - SIM card 86

Low Battery message 52

M

- making a call 21
- making a video call 36

- master clear 81
- master reset 81
- media files
 - playing 39
 - sending 39
 - viewing 39
- memory card
 - connecting to computer 45
 - free space 17
 - installing 16
- menu
 - entering text 23
 - icons, changing in home screen 80
 - icons, converting to text 80
 - language 80
 - personalising 80
 - rearranging features 80
 - using 53
 - view, changing 80
- message
 - browser 74
 - creating MMS template 73
 - inbox 73

- info services 74
- inserting objects 73
- MMS template 73
- multimedia message 73
- outbox 74
- printing 75
- quick note 73
- reading 74
- replying 74
- storing objects 74
- text 72, 74
- text inbox 74
- voice 72
- message indicator 52
- Missed Calls** message 64
- MMS template 73
 - creating 73
- multimedia message
 - sending 73
- music
 - managing 88
- muting a call 64
- my telephone number 22, 58

N

network settings 84
notepad 64
number
 storing your number 58
 viewing your number 22
numbers, entering 29

O

open to answer 61
optional accessory 16, 18, 41, 43, 44,
 45, 83, 84, 85
optional accessory, defined 16
optional feature 16, 51, 52, 58, 71,
 72, 74
optional feature, defined 16

P

passwords. *See* codes
phone
 alert, turning off 21, 62
 answer options 61

 clear stored information 81
 codes 55
 connecting to external device 41
 date, setting 58
 locking 56
 network settings 84
 reset all options 81
 ring style 21, 58, 80
 security code 55
 time, setting 58
 turning on/off 20
 unlock code 55
 unlocking 21, 56
phone number
 attaching 2 numbers 71
 international access code 66
 redialling 63
 storing in contacts 76
 storing your number 58
 viewing your number 22
phone skin 60

photo
 downloading 49, 87
 managing 32
 picture ID 34, 65
 screen saver 34
 sending 31
 taking 31
 wallpaper 34
picture
 downloading 32, 49, 87
 full screen view 33, 39
 managing 32, 88
 screen saver 34, 60
 wallpaper 34, 59
picture ID 34, 65
 setting 77
 view 78
PIN code
 changing 55
 entering 86
PIN2 code, changing 55
playing media files 39

- power key 1
- predictive text entry 27
- printing
 - calendar entries 85
 - contacts entry 79
 - message 75
 - picture 31

R

- received calls list 62
- redial
 - automatic redial 63
 - busy number 63
- right soft key
 - functions 1, 50
 - personalising 80
- ring lights 59
- ring style indicators 52
- ring style, setting 21, 58, 80
- ringer ID
 - setting 77
 - turning on/off 80

- ringer volume, setting 21
- ringtone
 - downloading 49, 87
 - managing 88
- roam indicator 51

S

- screen saver 34, 60
- scrolling 80
- security code
 - changing 55
 - default 55
- send key 1
- sending media files 39
- signal strength indicator 50
- silent alert, setting 21, 58, 80
- SIM Blocked** message 21, 86
- SIM card
 - defined 16
 - installing 16
 - locking 86
 - PIN code entry 21
 - PIN code, changing 55

- PIN2 code, changing 55
- precautions 16
- SIM Blocked** message 21, 86
- SIM PIN code
 - changing 55
 - entering 86
- SIM PIN2 code, changing 55
- smart key 54, 55
- soft keys
 - functions 50
 - illustration 1
 - personalising 80
- software update 84
- sound
 - downloading 49, 87
 - managing 88
- speaker volume 21
- speakerphone
 - activating 82
 - automatic answer 83
- speed dial 71
 - setting preference 79
 - using 66

Spkrphone On message 55
standby time, increasing 61
symbols, entering 29
synchronising with Internet server 84

T

tap text entry 25
telephone number
 storing your number 58
 viewing your number 22
text
 capitalisation, changing 24
 character chart 26
 entering 23
 entry mode, setup 24
 iTap software predictive text entry 27
 numeric mode 29
 symbol mode 29
 tap 25
text case indicator 24
text entry mode
 setup 24
text entry mode indicator 24

time, setting 58
timer, in-call 82
timers 82
transferring a call 71
transmission indicator 51

U

Universal IC Card 16
unlock
 application 86
 phone 56
unlock code
 bypassing 57
 changing 55
 default 55, 57
 entering 21
USB cable 42
USIM 16

V

vibrate alert
 setting 21, 58, 80
 turning off 21, 62

video call
 ending 36
 making 36
 swapping views 37
video camera, settings 88
video clip
 downloading 36, 49
 managing 36, 88
 recording 34
 viewing 36
viewing media files 39
Vodafone live!
 animation 49
 background sessions 49
 picture 49
 ringtone 49
 using 47, 86
voice dial 77, 83
 adapt 72
 digit dial 72
voice message 72
voicemail 67
voicemail message indicator 52, 67

volume

earpiece 21

games 87

ringer 21

speaker 21

volume keys 1, 21

W

wallpaper 34, 59

managing 88

Web pages 47, 86

Web sessions 87

WHO information 90