

MOTO ZINE ZN5

User's Guide




HELLOMOTO


See It, Take It! Your MOTO ZINE ZN5 phone is made to take photos and videos!


- Take great looking photos with the 5-megapixel digital xenon flash camera, then share them with your friends (see your Getting Started Guide).
- Upload your photos to the KODAK Gallery Link (see your Getting Started Guide).
- Capture key moments in video, then upload to your blog (see your Getting Started Guide).
- Press the camera and video mode keys to instantly access viewing and camera functions (see your Getting Started Guide).
- Transfer your favourite music quickly and easily with Microsoft™ Windows™ Media Player 11 (page 33).
- Listen to your favourite **FM radio** stations with your 3.5mm stereo headset (page 42).
- Access Web sites just like you do on your computer, with your phone's full HTML browser (page 45).

For more information: To read feature instructions on your phone, press Main Menu > \P Office Tools > Help. To watch Web tutorials and learn more about your phone and accessories, go to www.hellomoto.com.

Introducing your new MOTO **ZINE** ZN5 GSM wireless phone. Here's a quick anatomy lesson.

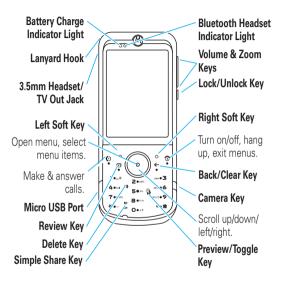

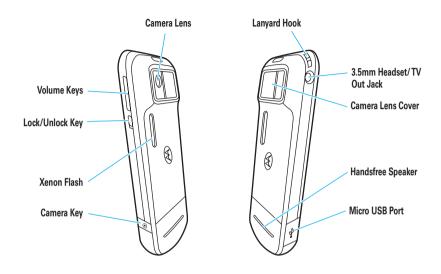

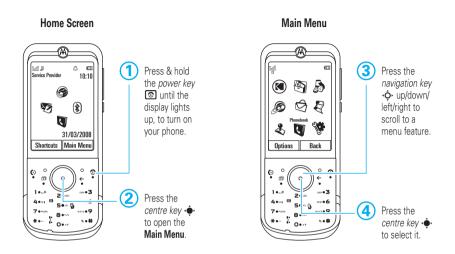

Note: This is the standard home screen and main menu layout. **Your phone's home screen and main menu may be different.** To change your home screen shortcuts and main menu appearance, see your *Getting Started Guide*.

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc. All other product or service names are the property of their respective owners. July 18 Computer, Inc. All Other product or service names are the property of their respective owners. Service Nark of the Wireless Fidelity Alliance, Inc. KODAK, EASYSHARE and PERFECT TOUCH are trademarks of Kodak.

© 2008 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified. reverse-engineered, distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive. royalty-free license to use that arises by operation of law in the sale of a product.

contents

menu map 8	customise24
Use and Care 10	profiles 24
European Union Directives	time & date 26
Conformance Statement 11	themes 27
essentials 12	display appearance 29
about this guide 12	answer options 29
battery	calls30
basics 14	turn off a call alert 30
display14	recent calls 30
text entry 17	redial
volume 20	return a call 31
lock/unlock key 20	caller ID 31
voice commands 21	emergency calls 32
talking phone 22	voicemail
handsfree speaker 22	entertainment 33
codes & passwords 22	camera 33
lock & unlock phone 23	videos

	music	3
	music player 35	ō
	FM radio 42	2
	browser 45	ō
n	essages4	7
	text messaging 4	7
O	nnections 52	2
	Sync	2
	file manager52	2
	cable connections 54	4
	Bluetooth® wireless 56	õ
	WiFi	9
	TV Out 6	1
	phone updates6	1
t	her features 62	2
	advanced calling 62	2
	phonebook69	

personalise6	38
call times & costs 6	39
handsfree	70
network	71
personal organiser	72
security	75
fun & games	75
Specific Absorption Rate	
Data	77
OPEN SOURCE SOFTWARE	
NFORMATION	78
ndex	79

menu map

main menu



Gallery Link



Calendar

 World Clock Sync

Download Manager

File Manager

 Music and Sounds Pictures

Videos

Voice Note

· Applic. Downloads Unrecognisable Files

My Documents

Memory Card *

 My Blog * SIM Applications *

Calculator

 Dialling Services Task List

 Notepad Help



Recent Calls



· My Bookmarks My Web Pages

History

Go to URI

Browser Setup

Messages

- Create Message
- Inhox
- My Folders
- Templates
- Drafts Outhox
- Create Postcard *
- Fmail
- Call Voicemail



- Media Finder
- Camera Video Camera
- FM Radio
- Voice Recorder





Phonebook



Settings

(see next page)

This is the standard main menu layout.

Your phone's menu may be different.

To change your home screen shortcuts and your main menu appearance, see your Getting Started Guide.

Tip: Press ← to exit the current menu, or press **①** to exit all menus.

* optional features

settings menu

- Profiles
- Themes
- Home Screen
 - Navigation Kevs
 - Change Wallpaper
- WiFi
 - Current Connection
 - Available Networks
 - Saved Networks
 Ouick Connect
 - Set up WiFi
- Connections
- Bluetooth®
 - USB Setting
 - Kodak EasyShare
 Media Sync
 - Memory Card
 - Modem
 - USB Printing
 Voice Networks
 - Current Network
 - Scan Avail. Networks
 - Find New Network
 - My Network List
 Search Setup
 - Service Tone
 - (continued next column)

- · Connections (continued)
 - Data Connections
 - Add a Connection
 Edit a Connection
 - Remove a Connection
 - TV Out
- Call Settings
 - Speed Dial
 Call Forward
 - In-Call Setup
 - In-Call Timer
 - Answer Options
 - In-Call Message Alert
 Roam Alert
 - Roam Alert
 Call Waiting
 - Auto-Redial
 - Call Drop Tone
 Dialling Setup
 - My Caller ID
 - DTMF
 - Dialling Prefix
 Call Barring *
 - Fixed Dialling *
 - My SIM Number
 Active Line *
- Phone Settings
 - Display Settings
 - Display Timeout
 - Screensaver
 Brightness
 - Aeroplane Mode
 - Battery Meter
 Time & Date
 - (continued next column)

- . Phone Settings (continued)
 - Language
 - Talking Phone
 Text Entry
 - Reset
 - Reset All Settings
 - Delete All Data
 - Delete Memory Cards
 - View MemoryProperties
 - Legal Notices
 - Java™ Svstem
 - OTA Updates
 - Headset Settings
 - Auto-Answer
 Voice Dial
- Security
 - Phone Lock
 - Application Lock
 - SIM Lock
 - Change Passwords
 - Certificates
- Network
 - Current Network
 - Scan Avail. Networks
 - Find New Network
 My Network List
 - IVIY NetWork LI
 Search Setup
 - Service Tone
- * optional features

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



extreme heat or cold

Avoid temperatures below $0^{\circ}\text{C}/32^{\circ}\text{F}$ or above $45^{\circ}\text{C}/113^{\circ}\text{F}$.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven



the ground

Don't drop your phone.

European Union Directives Conformance Statement





Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- · All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the website.

essentials

CAUTION: Before using the phone for the first time, read the *Important Safety* and Legal Information in the Getting Started Guide.

about this guide

This guide shows how to locate a menu feature as follows:

Find it: •• > ♥ Messages > Create Message

This means that, from the home screen:

1 Press the *centre key* • to open the menu.

- 3 Press the navigation key •♦ to scroll to Create Message, and press •• to select it.

This guide uses the following symbols:

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

battery

sold separately.

battery installation & charging

For battery installation and charging details, see your *Getting Started Guide*.

Tip: Motorola batteries have circuitry that protects the battery from damage from overcharging.

Note: You can charge your battery by connecting a cable from your phone's micro USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also


Caution: If your computer has a USB hub with multiple USB devices attached, connecting your phone to the USB hub could potentially overload the phone's battery. To avoid any possibility of overcharging, you should connect your phone to a dedicated USB port on the computer.

13

basics

display

The *home screen* appears when you turn on your phone.

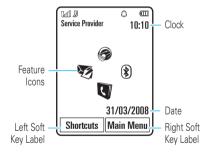

Note: Your home screen may look different, depending on your service provider.

To dial a number from the home screen, press number keys and **②**.

Press the *centre key* • or the **Main Menu** soft key to open the main menu.

Press Shortcuts in the home screen to change the alert style, change wallpaper, read or create a message, record a video, set an alarm or find a Bluetooth® device.

Press the *navigation key* •**\hat{\hat{\phi}}** up, down, left, or right in the home screen to open basic features. **To show**, **hide**, **or change feature icons** in the home screen, see your *Getting Started Guide*.

Tip: Want some help? Press Main Menu > Office Tools > Help. Select a Help topic to find information about phone features.

Status indicators appear at the top of the home screen:



- Signal Strength Indicator Show the strength of the wireless network connection.
- 2 EDGE/GPRS Indicator Shows when your phone is using a high-speed Enhanced Data for GSM Evolution (EDGE) network connection ☑, or General Packet Radio Service (GPRS) network connection ☑.
- 3 Bluetooth or WiFi Indicator Shows Bluetooth or WiFi status:
 - (solid blue) = Bluetooth powered on
 - (solid green) = Bluetooth connected

- (flashing blue) = Bluetooth discoverable mode
- (solid red) = WiFi powered on
- 4 Message Indicator Shows when you receive a new text or voice message. Other indicators can include:



- 5 Profile Indicator Shows the alert profile setting:
 - \square = ring only \square = ring
 - = ring and vibrate
 - §D = vibrate only
- u = vibrate then ring

- 🔁 = silent
- 6 Active Line Indicator Shows

 to indicate an active call, or

 to indicate




when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:

Battery Level Indicator - Vertical bars show the battery charge level. Recharge the battery when your phone shows Low Battery.

basics

text entry

Some features let you enter text.

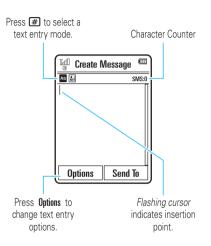

text entry modes		
Ab	"word" mode (see page 18)	
Ab	"abc" mode (see page 19)	
123	numeric mode (see page 20)	
;@	symbol mode (see page 20)	

To **change** text entry settings and languages:

Find it: **(•)** > **★** Settings > Phone Settings > Text Entry

Change text case: Press **①** to change text case to all capital letters (**凰**), next letter capitalised (**宀**), or next letter lowercase (no symbol).

Set word learning: Your phone can learn the words you enter, to improve text prediction and completion. Press Options > Text Entry > Set Text Prediction > Learn my words. Your phone shows when word learning is active.

Set text completion: Set your phone to complete words based on the characters you enter. Press **Options**

> Text Entry > Set Text Prediction > Offer Completions. Your phone shows \blacksquare when text completion is active.


Enter punctuation: Press to enter punctuation or other characters.

Edit or delete text: Press •Ô• to move the cursor to the right of text you want to edit. Press the clear/back key ← to delete the character left of the cursor. Hold ← to delete the entire word.

word mode

Press ## in a text entry screen to switch to "word" predictive text entry mode. Your phone shows ... in the display.

Word mode lets you enter words using one keypress per letter. The phone predicts each word as you enter it. For example, if you press **7 7 6 4**, your display might show:

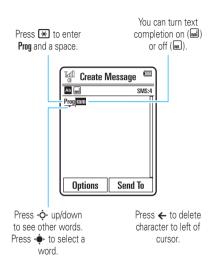

abc mode

Press # in a text entry screen to switch to "abc" text entry mode. Your phone shows $\textcircled{\tiny \square}$ in the display.

To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press one time, your display might show:

Character displays at insertion point.



After two seconds, the character is accepted and the cursor moves to the next position.

When text completion is activated, your phone tries to guess the rest of the word:

Press • to select the suggested word.

- Press right to enter the suggested word and a space.
- If you want a different word, press keypad keys to enter the remaining letters.

numeric mode

Press # in a text entry screen until you see 2.

Press the number keys to enter the numbers you want.


Tip: Just need one number? To enter a number quickly, press and hold a number key until the number appears.

symbol mode

Press # in a text entry screen until you see . The display shows the symbol associated with each keypad key. Press • • up/down repeatedly to see different symbols. To insert a symbol, press its key, or scroll to it and press • • .

volume

Press the volume keys to:

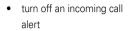



- change earpiece or speakerphone volume during a call
- change playback volume for a song or video
- set your phone's alert profile in the home screen (press the volume keys to scroll to a profile, then press *\phr.).

lock/unlock key

The *lock/unlock key* lets you lock and unlock the keypad. Slide down to lock and up to unlock.



voice commands

You can use voice commands to tell your phone what to do.

Note: Not all languages support voice commands.

voice dial a call

You can dial a contact list entry by speaking its name, or dial any phone number by speaking its digits.

- Press and hold ①. The phone loads the voice recognition software, then prompts you to say a command or name.
- Wait for the beep, then say the name of an entry as it appears in your contact list. Your phone confirms the name and makes the call.

or

Say "Dial Number." Your phone prompts you to speak the digits in the phone number. Speak the

digits. Your phone confirms the number and makes the call.

Tips:

- You can say a contact's name and number type together. For example, say "John Smith mobile" to call the mobile number stored for John Smith
- For voice command help, press and hold (), then press Help.

voice activate phone functions

You can use voice commands to open applications and perform many basic phone functions.

- 1 Press and hold ①. The phone prompts you to say a command.
- Press and hold to see the list of voice commands.

talking phone

You can set your phone to recite caller ID information for incoming messages, read the names of menu features or contact list entries, read messages you receive, and provide audio feedback for phone functions.

Find it: • > Settings > Phone Settings > Talking Phone

Shortcut: Press and hold ①. When the phone prompts you to say a command, say "Talking Phone."

handsfree speaker

During a call, press Options > Speaker On to turn the handsfree speaker on. Your display shows the speakerphone indicator until you turn it off (press Options > Speaker Off) or end the call.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't

concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: •• > ***** Settings > Security > Change Passwords

You can also change your **SIM PIN** codes or call barring password.

If you forget your unlock code: At the Please verify the Unlock Code prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press ## to enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To manually lock your phone:

Find it: ♠ > ❤ Settings > Security > Phone Lock > Lock Now

To **automatically lock** your phone whenever you turn it off:

Find it: ♠ > ❤ Settings > Security > Phone Lock > Lock at Power On > On

customise

profiles

Silent

You can quickly change your phone's alert style or profile to match your activity or environment. Each profile uses a different set of ringtones or vibrations for incoming calls and other events. The alert profile indicator shows at the top of the home screen (see page 15).

♀ Ring Only♀ Ring and Vibrate♀ Vibrate Only♀ Vibrate then Ring

To change your profile: From the home screen, press the external volume keys on the side of your phone.

Alternatively, from the home screen press Shortcuts

> Change Alert Style or Change Profile.

The **Silent** profile silences your phone until you set another profile.

Shortcut: From the home screen, press and hold #Uto quickly switch between Vibrate Only and Ring Only.

change alert style settings

You can change the ringtones that a standard alert style uses to notify you of incoming calls and other events. You can also change the alert style's ring volume, keypad tone volume, and media playback volume settings. For dual-line-enabled SIM cards, you can set different ringtones to identify incoming calls on line 1 or line 2.

Note: You can't set a ringtone for the **Silent** alert style, or change some settings for some alert styles.

Find it: •• > Settings > Profiles > Alert Style > alert style

- 1 Press • left/right to select the alerts tab □, volume tab □, messages tab □, or settings tab ⑤.
- 3 Press Back to exit and save your changes.

To **reset** the default settings for an alert style:

Find it: • > Settings > Profiles > Alert Style > alert style, press Options > Reset

create a new profile

To create a **new** profile with the ringtones and volume settings you specify:

Find it: • > Settings > Profiles > Alert Style > alert style

- 1 Change alert style settings as described in the previous section.
- Press Options > Save As Profile.
- 3 Enter a name for the profile, then press Save to save it.

To create additional profiles:

Find it: •♠ > ❤ Settings > Profiles, press Options > Create Profile

Note: Profile alert settings also can be set by the theme. When you apply a new theme, you can choose to apply the theme's alert settings to the current profile. Selecting this option **changes** the current profile to use the theme alert settings.

edit or delete profiles

To edit a profile:

Find it: • > Settings > Profiles, scroll to the profile, press Options > Edit

Note: You can't edit the **Silent** profile, or change some settings for some profiles.

To delete a user-defined profile:

Find it: ♠ > ❤ Settings > Profiles, scroll to the profile, press Options > Delete

restore alert style settings

To delete all user-defined profiles and restore your phone's original alert style settings:

Find it: • > \$ Settings > Profiles, press Options > Reset

time & date

Your phone can automatically update the time and date. It uses the time and date for the Calendar.

To **synchronize** time and date with the network:

Find it: •• > ***** Settings > Phone Settings > Time & Date > Auto-Update Time > On

To **manually** set the time and date:

Find it: •• > •• Settings > Phone Settings > Time & Date > Auto-Update Time > Off, then > Time and Date

To adjust time and date, press $\cdot \hat{\mathbf{Q}} \cdot \text{ left/right to scroll to}$ a setting, then press $\cdot \hat{\mathbf{Q}} \cdot \text{ up/down to change it. Press}$ Set to save your settings.

To show a **12-hour or 24-hour** digital clock in the home screen:

Find it: ♠ > ❤️ Settings > Phone Settings > Time & Date > Time Format > 12 Hour Clock or 24 Hour Clock

To set the **date format** in the home screen:

Find it: ♠ > ❤ Settings > Phone Settings > Time & Date > Date Format

To set your **time zone**:

Find it: ♠ > ❤ Settings > Phone Settings > Time & Date

> Time Zone, then select a city in your time zone

Shortcut: Press keypad keys to enter the first letters of the city you want.

themes

Use a phone *theme* to personalise the look and sound of your phone. Most themes include a wallpaper image, screensaver image, and ringtones.

To **apply** a theme:

Find it: • > Settings > Themes > theme

To download a theme, see page 45.

To delete a theme:

Find it: • > § Settings > Themes, scroll to the theme, then press Options > Manage > Delete

Note: You can delete only downloaded themes or custom themes you create.

preview ringtones

To preview the ringtones on your phone, and choose the ringtone a theme uses.

Find it: •• > Settings > Themes, press Options > Edit > Call Alert > Ringtones > Sound and Ringtones > Preloaded Ringtones

- Press up/down to scroll and listen to each ringtone in turn.
- Press to select the highlighted ringtone.
- 3 Press Save to save your selection.

apply a photo as wallpaper

To use a photo as a background *wallpaper* image in your home screen:

Find it: •• > *** Settings** > Themes, press Options > Edit

- Press ❖ right to select the **images** tab ₽.
- Press o down to scroll to Wallpaper, then press to select it.

3 Scroll to the photo you want to use, then press Select.

Note: To search for photos on the memory card, select Back to Pictures > Back to My Files > Memory Card > Pictures.

4 Press Save to save your selection.

Photos that you copy to your phone from another device may not scale correctly when applied as wallpaper images. To **resize a wallpaper photo**:

Find it: • > \$ Settings > Themes, press Options > Edit

- 1 Press •**Q•** right to select the **images** tab ₽.
- Press down to scroll to Wallpaper Layout, then press to select it.
- 3 Scroll to Fit-to-Screen, then press Select.
- 4 Press Save to save the setting.

modify a theme

Find it: $\hat{\Phi} >$ Settings > Themes, scroll to the theme, press Options > Edit

- Press Pr
- Press ♠ up/down to scroll to the setting you want to change, then press ♠.
- 3 Scroll to the image or sound file you want, then select it.
- 4 Press Save to save your theme changes.

The **Wallpaper** appears as a background image in your home screen.

The **Screensaver** appears in the display after a specified period of inactivity.

Skins set the look and feel of your phone's display.

To **reset** the standard settings for a modified theme:

Find it: • > Settings > Themes > theme, press
Outions > Manage > Reset

To **restore** the default theme on your phone:

Find it: •• > Settings > Themes, press Options > Manage > Restore to Default

create a new theme

Find it: • > Settings > Themes, press Options > Create Theme or Create a Copy

display appearance

To set the **brightness** of your internal display:

Find it: • > Settings > Phone Settings > Display Settings > Brightness

To save battery life, the **display** can turn off when you're not using your phone. To set the display timeout delay interval:

Find it: ♠ > ❤ Settings > Phone Settings > Display Settings > Display Timeout

To turn the internal display screensaver on or off:

Find it: • > Settings > Phone Settings > Display Settings > Screensaver > On or Off

Tip: To extend battery life, turn off the screensaver.

answer options

You can answer an incoming call by pressing any key. To turn any key answer option on or off:

Find it: ♠ > ❤ Settings > Call Settings > In-Call Setup > Answer Options > Any Key Answer

Note: You press (to answer a call.

calls

turn off a call alert

Press the external volume keys on the side of your phone to turn off the ringer before answering a call.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added

Shortcut: Press in the home screen to see the Dialled Calls list.

Find it: • > \clubsuit Recent Calls

- 1 Press 🌣 left/right to select a call list: All Calls, Dialled Calls, Answered Calls, Missed Calls, or Frequent Calls.
- Press � up/down to scroll to a phone number.

 Icons indicate if the call was incoming �, outgoing �, or missed 急. A check mark next to the icon indicates a connected call.
 - To call the number, press .
 - To see call details (like time and date), press
 .
 - Press Options to perform other operations on the number (send a message, save to contacts), or to set recent call options.

redial

- 1 Press from the home screen to see the Dialled Calls list.
- Scroll to the number you want to call, then press

 .

If you hear a **busy signal** and see **Call Failed**, press or **Retry** to redial the number. When the call goes through, your phone shows **Connected** and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

When you see the X Missed Calls message, press • to see the Missed Calls list. Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your phone's display.



Your phone shows the caller's name and picture when they're stored in your contact list, or **Incoming Call** when caller ID information isn't available

Note: Picture IDs aren't available for contacts stored on the SIM card.

Tip: Want to know who's calling without even looking at your phone? To give one of your contacts a special ringtone, see page 66.

To show or hide your phone number for the next outgoing call, enter the number you want to call, then press Options > Show ID or Hide ID.

To show or hide your phone number for all calls:

Find it: • > Settings > Call Settings > Dialling Setup > My Caller ID > All Calls > Show ID or Hide ID

emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, 911 or 112, that you can call at any time, even when your phone is locked or the SIM card is not inserted.

Note: Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications such as medical emergencies.

To make an emergency call: Turn your phone on, exit any open application such as games, dial the emergency number, then press the *send key* ① to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone display shows **New Voicemail** and the new message indicator **159**.

To check voicemail messages:

Find it: •• > ♥ Messages > Call Voicemail

Shortcut: Your service provider may store your voicemail phone number in speed dial location #1. If so, you can press and hold 1 in the home screen to listen to your voicemail message(s).

entertainment

camera

Take great looking photos with the 5-megapixel digital xenon flash camera. Just aim and shoot to take a photo, then press **Send** to send it to your friends (see your *Getting Started Guide*).

videos

The 5-megapixel digital camera on your phone can take videos. Just aim and shoot to take a video, then upload to a blog (see your *Getting Started Guide*).

music

To listen to music on your phone, you need to:

- Load music on your computer.
- 2 Transfer music from the computer to your phone.
- 3 Use the music player to play and manage music files on your phone.

1. load music on your computer

To create a music library on your computer, you can purchase Microsoft™ Windows™ Media DRM-protected music files from supported on-line music stores (such as Urge, Yahoo, and Napster).

You can also **load song files from a music CD** onto your computer:

- 1 Insert the music CD in your computer's CD drive.
- 2 Launch Windows Media Player 11.

3 Copy the music CD to the media player library (also called *ripping* the CD).

If your computer is connected to the Internet, the media player may retrieve CD information such as song titles, album name, artist name, and album artwork. This information will display in your phone's music player.

To minimise song file size, or convert iTunes song files to a format compatible with Microsoft™ Windows™ Player 11, see page 36.

2. transfer music to your phone

Use Windows Media Player 11 to transfer music from the computer to your phone. (If necessary, you can download Windows Media Player 11 at www.microsoft.com/windowsmedia).

Windows Media Player 11 requires Windows XP™ or later to run. If you are using an earlier version of

Windows OS, see page 37 to manually transfer music to your phone.

Windows Media Player 11 can only copy and sync music files to the memory card in your phone. To copy files to phone memory and to manually transfer music to your phone see page 37.

Note: Windows Media Player 11 can only be used to copy music files to your phone. You can't use Windows Media Player 11 to copy pictures or videos to the phone.

on your phone

Insert a memory card in your phone (see your Getting Started Guide), then press • > Settings > Connections > USB Setting > Media Sync.

Attach the Motorola Original USB cable to the micro USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and



supporting software may be included with your phone. These tools are also sold separately.

Note: Some phone functions are temporarily unavailable when a USB connection is active.

on your computer

Run Windows Media Player 11. Your phone appears in the upper right corner of the Windows Media Player 11 screen, and the music files stored on the phone's memory card are listed on the left side of the screen.

- Select the Sync tab in Windows Media Player 11.
- 2 Drag and drop songs or playlists onto the Sync List on the right side of the Windows Media Player 11 screen.
- 3 Click Start Sync to copy the songs onto the phone's memory card.
- 4 When you finish, disconnect your phone from the computer.

3. play music

Find it: • > {\(\hat{\Phi} \)} > {\(\hat{\Phi} \)} Multimedia > Media Finder > Music Library

Select a song or playlist from the following categories: Recently Played, Shuffle Songs (play songs in random order), All Songs, Playlists, Artists, Albums, Genres, or Composers.

Note: If you receive a call during a song, the song pauses until the call is over.

music player

Note: The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

set the default song format and bit rate on your computer

Microsoft™ Windows™ Media Player 11 lets you adjust format and bit rate settings to optimize sound quality or increase the number of song files you can store on your phone.

Windows Media Audio format offers the optimal balance between file size and sound quality. Song files in this format tend to require more storage space than files that use Windows Media Audio Pro format.

Windows Media Audio Pro format is designed for use in portable devices with limited storage capacity. The format provides improved sound quality at lower bit rates.

To set the default file format and bit rate:

- 1 Insert the music CD in your computer's CD drive.
- 2 Launch Windows Media Player 11.

- 3 Select the Rip tab in Windows Media Player 11.
- 4 Click the Rip tab down arrow, then choose Format > Windows Media Audio or Windows Media Audio Pro.
- 5 Click the Rip tab down arrow again, then choose Bit Rate > bit rate.

convert iTunes AAC files to MP3 files on your computer

Use the iTunes desktop application to convert standard iTunes AAC files to MP3 files that are compatible with Windows Media Player 11.

Note: The iTunes desktop application can only convert AAC files ripped from a music CD. It can't convert music files purchased from the iTunes store.

 Open the iTunes desktop application on your computer.

- Select Edit > Preferences, then click the Advanced tab and click Importing.
- 3 Open the Import Using pop-up menu, then select the MP3 Encoder option. Click OK to save your settings.
- Select one or more songs in your iTunes music library, then choose Advanced > Convert Selection to MP3.

The converted MP3 file copies appear in your computer's music library alongside the original AAC files.

manually transfer music to your phone or memory card

Without using Windows Media Player 11, you can manually copy or sync music files from the computer to phone memory, or to an optional microSD memory card in the phone. (To insert a memory card, see your *Getting Started Guide*).

supported audio formats

Before you copy audio files to your phone, make sure the files are in a format the phone recognises:

AMR-NB, AMR-WB, AAC (MPEG4 AAC-LC), AAC+,
Enhanced AAC+, MP3, 8-bit Linear PCM, 16-bit Linear
PCM, 8-bit A-law PCM, 8-bit mu-law PCM, WMA v9
L2 (also WMA v3, v7, v8), Real Audio LBR (Cook), Real
Audio Sipro (ACELP®.net), Real Audio 10 and
Windows Media Audio Pro.

on your phone

Attach the Motorola Original USB cable to the micro USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.

on your computer

Your phone and memory card appear as removable disks on your computer.

- 1 Find where your phone and memory card appear as Removable Disk icons. On a Windows PC, this is the My Computer window. On a Macintosh® computer, it's on the desktop.
- 2 Double-click the Removable Disk icon for your phone or memory card.
- 3 To copy the desired files onto the phone or memory card, drag and drop them onto the appropriate removable disk icon.
- 4 When you finish, remove the phone safely from your computer:
 - If you are using a PC, click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen, then select Safely Remove USB Mass Storage Device.


 If you are using a Mac, select and drag the Removable Disk icon to the Trash.

play music

Use the navigation key • or to control song playback.

Press � up to pause/play, press down to stop. Press � left/right to skip to previous/next song.

Timer Shows % Played

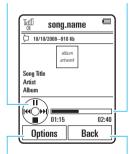

Select & adjust music player options.

Return to previous screen.

When a song is playing, press **Options** to select music player options:

options	
Hide	Hide the music player while music plays. To see the music player again, go to the home screen, then press •�• up.
Manage	Show song Properties , such as file name, type, and size.
Delete	Delete the song file.
Send To	Send the song in a message or email, or send it to Memory Card or another device over a Bluetooth® connection.
Apply to	Add the song to a playlist or make it a ringtone.

options	
Use Bluetooth/ Use Handset	To send the audio to a Bluetooth headset, turn on Bluetooth power, then select Use Bluetooth to connect to a recognised Bluetooth headset or search for a new headset.
	When a Bluetooth audio connection is active, select Use Handset to drop the Bluetooth connection and switch the audio back to the phone.
	Note: This option appears only when Bluetooth power is turned on.
Setup	Customise settings.

During a song, the music player shows the song title, artist, album, and artwork, if available. To see a larger image of the **artwork**, press ••• (press ••• again to return to the music player).

play a playlist

Find it: •• > Multimedia > Media Finder > Music Library > Playlists, scroll to the playlist, press Options > Play

create a playlist

create a playlist on your computer

Use Windows Media Player 11 (or your computer's media player program) to create a playlist of music files stored on the computer.

On your phone, press • > • Settings > Connections > USB Setting > Memory Card.

Connect your phone to the computer through a USB cable connection, then drag and drop the playlist onto the phone or memory card.

create a playlist on your phone

Find it: ♠ > २ Multimedia > Media Finder > Music Library > Playlists > Create New Playlist

- Enter a name for the playlist.
- 2 Select a storage location for the playlist (Memory Card or Phone Memory), then press Save.
- 3 Scroll to the playlist, and press to select it.
- 4 Scroll to Add Songs, and press the centre key to select it.
- 6 Press Add to add the selected songs to the playlist.
- 7 Repeat the procedure to add more songs, or press Back to return to the Playlists menu.

adjust audio settings

You can adjust audio settings to optimize the sound quality when listening to music through the phone speaker, stereo headphones, or headset.

To change **playback volume**, press the volume keys on the side of your phone.

To change the **equalizer setting**, press **Options** > **Setup** > **Equalizer** > *music type*.

To set **stereo separation**, press **Options** > **Setup** > **Soatial Audio** > *separation level*.

To set **bass boost**, press **Options** > **Setup** > **Bass Boost** > *bass level*.

use Bluetooth® stereo headphones

Connect your phone with optional Bluetooth stereo headphones to listen to music stored on your phone.



To connect your phone to a set of Bluetooth stereo headphones for the first time, make sure the headphones are **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide).

Find it: ♠ > ❤ Settings > Connections > Bluetooth

> Search for Devices > headset

Your phone lists the Bluetooth audio devices it finds within range.

- 1 Scroll to the stereo headphones in the list.
- Press to connect with the stereo headphones.

customise the music player

Find it: ♠ > ₹ Multimedia > Media Finder > Music Library press Options > Setup

You can select the following options:

options	
Shuffle	Play songs in a random order.
Equalizer	Set equalizer to a music style, such as Classical.

options	
Auto-Repeat	Replay the song or playlist when the last file finishes playing.
Spatial Audio	Set to customise sound.
Bass Boost	Set to customise sound.
Internet Connection	Set your Internet connection preferences.

When you scroll to a song in a list and press **Options**, you may see additional options for the song and list, such as **Delete**, **Send To**, and **Apply to**.

close the music player

From the music player screen or home screen, press to close the music player.


FM radio

You can use your phone to listen to FM radio stations. You can listen to the radio through the Motorola Original stereo headset included with your phone, or through the phone's handsfree speaker.

TM

Note: You must plug a wired headset into the headset jack on your phone to use the radio. The headset acts as a radio antenna to receive radio signals. You can't listen to the radio over a Bluetooth® wireless headset.

Find it: • > < Multimedia > FM Radio

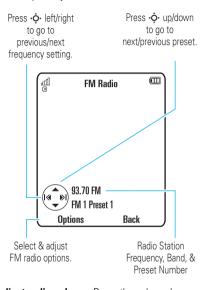

To **adjust radio volume**: Press the volume keys on the side of your phone.

To **store a preset** station: Press and hold a number key (11 through 9) to assign the number to the current tuned station. You can store nine presets in each of three separate FM bands (see the following section for details).

To **select a stored preset** station: Press the number key to select the preset station.

Note: If you receive a call while listening to the radio, press Answer. Press to end the call and return to the radio.

FM radio options

From the FM radio screen, press **Options** to select radio options:

options	
Hide	Hide the radio.
	To return to the radio display, press •• > ﴿ Multimedia > FM Radio or from the home screen press •• • up.
Mute/Unmute	Mute or unmute the radio.
	Shortcut: Press 🗶 to mute and unmute the radio in the radio screen.
Switch to Speaker/	Switch sound to your phone
Switch to Headset	speaker, or to the attached
	headset.

options	
Switch Bands	Switch between bands FM1, FM2, and FM3. Each band can store nine presets (select presets by pressing number keys 11-9).
	Shortcut: Press ## to switch bands in the radio screen.
Scan	Briefly hear each station your phone can receive. Press •• to stop the scan.
Scan Presets	Briefly hear each stored preset station. Press • • to stop the scan.
Presets List	See the list of preset stations.

close the FM radio

From the FM radio screen or home screen, press to close the radio.

browser

Use your phone's full HTML browser to surf to your favourite Web sites, upload videos to a video blog, and download files and applications to your phone. Log on to your Internet-based email account to check your email on the go.

To launch the browser:

Press • • up/down/left/right to scroll through Web pages. Scroll to a link and press • to select it.

Press Back at any time to return to the previous screen.

Some Web pages may contain a text entry window for exchanging information with a Web site. Scroll to the window, select it, and enter text as usual (for more information about text entry, see page 17).

To **go to a Web page**, press Options > Go to Page, enter the Web address, then press Go.

To **bookmark** the current Web page, press **Options** > Active Page > Add Bookmark.

To go to a **bookmarked Web page**, press **Options** > **My Bookmarks** > *bookmark*.

To **change the homepage** that appears when you launch the browser, go to the Web page you want to use, then press **Options** > **Active Page** > **Use as Homepage**.

To **upload** a video to a video blog site, see your *Getting Started Guide*.

To **download** a media file, theme, or Java[™] game or application to your phone, go to the page that links to the file, scroll to the link, and select it.

To **exit** the browser, press **Options** > **Exit**.

browser settings

To use your phone's browser, the browser must be configured with the appropriate settings for Internet access, and you must have data service activated for

your account with your service provider (additional fees may apply for this service).

If necessary, you can get the required Internet browsing settings for your phone by contacting your service provider directly, or by visiting the following Web site:

https://hellomoto.wdsglobal.com/site/phonefirst

Note: Not all service provider settings may be available yet through this Web site.

messages

text messaging

send a message

A message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message and put text and media objects on each page. You can send a message to other compatible phones or to email addresses.

Find it: •• > ♥ Messages > Create Message

1 Press keypad keys to enter text on the page (for more information about text entry, see page 17).
To insert a **picture**, **sound**, or other media object on the page, press **Options** > **Insert**. Select the file type and the file. (**Note:** File size restrictions may apply to pictures and videos sent in a message.)

To insert **another page**, press **Options > Insert > Page**. You can enter more text and objects on the new page.

- When you finish the message, press Options > Sending Options to set message options (such as Subject and Priority).
- When you finish setting message options, press Done.
- 4 Press Send To to select message recipients. You can:
 - Select one or more entries from your contact list (press • to scroll to an entry, and press to select it).

- Enter a new number or email address (press Options > Enter Number or Enter Email).
- 5 Press Send to send the message.

Your phone might tell you that this is a multimedia message, if it contains multiple pages or media objects. Some phones or networks don't support multimedia messages. Press Yes to send the message.

To save or cancel the message, press **Options** > **Save to Drafts** or **Cancel Message**.

receive a message

When you receive a message, your phone plays an alert, and the internal display shows **New Message** with the new message indicator \boxtimes .

To **read** the message, press **View**. If the message contains media objects:

- Pictures and animations show as you read the message.
- Sound files play as you read the message.
 Press the external volume keys on the side of your phone to change the sound volume.
- Attached files are added to the end of the message. To open an attachment, select the file indicator or file name.

To **answer** the message, press **Options** > **Reply**.

When you have unread notifications, the ① indicator appears. Press Shortcuts > View Notifications to read and then press Clear to delete.


more message & email features

features

confirm a message was sent



To confirm that your message was sent:

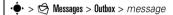

Your phone lists the message recipient(s) and shows message status. **Sent** indicates the message was sent successfully, **Failed** indicates the message was not sent.

send a prewritten quick note



• → > ☑ Messages > Templates > Text Templates

> quick note, press Options > Send

To create a new quick note:

• > \bigcirc Messages > Templates > Text Templates, press Options > Create Template

features

set up email accounts



You can set up and use multiple email accounts on your phone:



Note: Your display shows a separate folder for each email account.

send email





use a multimedia template



Open a multimedia template with pre-installed media:



read new message or email



When your display shows **New Message**, press **Read**

read old messages



♦ > 🖄 Messages > Inbox

Icons next to each message show if it is **read** △, **unread** ⊡, **urgent** ①, or has an **attachment** ⑩.

Press **Options** to perform various operations on a message.

read old email



••• > ♦ Messages > Email

Press **Options** to perform various operations on a message.

store message objects



Go to a multimedia message page, then press **Options** > **Store**.

features

create folder



Create a personal folder to store your messages.

- > Messages > My Folders, press Options
- > Create Folder

browser messages



Read messages received by your browser:

When your display shows $\textit{New Message}, \ \textit{press View}.$

To activate browser messages and adjust browser message settings:

- > Messages, press Options > Settings
- > Browser Messages

info services



Read subscription-based information services messages:

When your display shows New Message, press View.

To activate information services and adjust info services settings:



connections

Sync

You can use **Sync** to synchronize information between your phone and a remote server.



Sync with SyncML

Call a SyncML Internet server and synchronize your phone's contact list and calendar entries with the server.



To **synchronize files** with a partner you set up:

Find it: •• > Office Tools > Sync > SyncML

If no SyncML profile is stored on your phone, the phone prompts you to create a profile. Contact your IT system administrator to obtain the information you need to set up a profile.

Note: If your phone can't connect to the server, verify that your phone's network service provider has data service activated on your phone (additional fees may apply for this service).

file manager

Manage music and sound files, photos, videos, and other files stored on your phone, and on an optional removable microSD memory card.

Find it: ♠ > ♠ Office Tools > File Manager

Select a folder or **Memory Card** to see its contents.

To **play** a sound file or voice note, or **view** a photo or video, just scroll to the file and select it.

To **edit** a file: Scroll to the file and press **Options** > **Manage** to copy, move, or rename it. Other options let you delete, send, or apply the file. You can't perform some operations on some copyrighted or pre-installed files.

To **copy files** between your phone and a computer, you can use a cable connection (see following section) or a Bluetooth® connection (see page 57).

format memory card

To **format** the memory card or see memory card **properties** (such as name and available memory):

- 1 Press to scroll to the memory card.
- 2 Press Options > Memory Card > Format or Properties.

move or copy files between the phone and memory card

Caution: When you **move** a file to a new location, the file is **deleted** from its original location.

Find it: ♠ > ♠ Office Tools > File Manager

- 3 Scroll to the file you want to move or copy.
- 4 Press Options > Manage > Move or Copy.

Note: The **Move** and **Copy** options do not appear if the file is copyright-protected.

Scroll to the destination location, then press Place.

cable connections

To transfer data between your phone and a computer, insert the micro USB port connector plug from a USB cable into your phone's micro USB port.



Connect the other end of the cable to the computer.

Note: A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately. Check your computer to determine the type of cable you need.



Note: Some phone functions are temporarily unavailable when a USB connection is active.

To **transfer pictures** between your phone and computer: Press •• > **Settings** > **Connections**

> USB Setting > Kodak EasyShare, then connect your phone to your computer. The KODAK Digital Camera screen displays, select Kodak EasyShare software and press 0k.

To use Windows Media Player 11 to **sync music files** from a computer to a memory card installed in your phone: Press • Settings > Connections > USB Setting > Media Sync., then connect your phone to the computer. For more information, see page 52.

To manually **transfer music, pictures, and videos** between your computer and phone (phone memory or installed memory card): Press •• > **Settings** > **Connections** > **USB Setting** > **Memory Card**, then connect your phone to the computer. For more information about manually transferring music files, see page 37.

To use your phone as a **modem**: Press • > **Settings** > **Connections** > **USB Setting** > **Modem**, then connect your phone to the computer.

To **transfer contact lists and calendar entries** between your computer and phone: Press •

> Settings > Connections > USB Setting > Modem, then connect your phone to the computer. Run the optional Motorola Phone Tools accessory application on the computer. You can also use the Motorola Phone Tools application to transfer and sync music files from the computer to your phone. See the Phone Tools user's guide for more information.

To make **data calls** through a computer: Press • > **Settings** > **Connections** > **USB Setting** > **Modem**, then connect your phone to the computer. Use the computer application to place or answer the call.

To create a **new data connection** on your phone, press •• > •• Settings > Connections > Data Connections > Add a Connection.

To **print** an image over a USB PictBridge connection: Press •• > **Settings** > **Connections** > **USB Setting** > **USB Printing**, then connect your phone to a PictBridge-compatible printer. Select the image(s) you want to print, then press **Options** > **Print via** > **USB**.

end a USB connection

Caution: Do not disconnect your phone from the computer while files are being transferred.

On a PC running Windows XP™ or later: When file transfer is complete, remove the USB cable from your phone and computer.

On a PC running an earlier version of Windows OS: Click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen, then select Safely Remove USB Mass Storage Device. Remove the USB cable from your phone and computer.

On a Macintosh® computer: Select and drag the Removable Disk icon to the Trash. Remove the USB cable from your phone and computer.

Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with an optional Bluetooth headset or Bluetooth car kit to make handsfree calls, or with a set of Bluetooth stereo headphones to listen to music stored on your phone. Connect your phone with a device that supports Bluetooth connections to exchange files, connect with a printer that supports Bluetooth connections to print images, or use your phone as a Bluetooth wireless modem to connect to the Internet.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on & off

Your phone automatically turns Bluetooth power on when you use a Bluetooth feature.

To turn Bluetooth power on or off at any time:

Find it: •• > Settings > Connections > Bluetooth, press
Options > Setup Bluetooth > Bluetooth Power > On

Note: To extend battery life and maximize Bluetooth security, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to another device until you use a Bluetooth feature again, or set Bluetooth power back to **On**.

use a Bluetooth headset or handsfree car kit

Before you try to connect your phone to a handsfree device for the first time, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide). You can connect your phone with only one device at a time.

Find it: •• > Settings > Connections > Bluetooth, press
Options > Search for Devices > Headset

Your phone lists the Bluetooth audio devices it finds within range.

- 1 Scroll to a device in the list.
- 2 Press to connect with the highlighted device.

copy files to another device

You can copy a media file, contact, calendar event, or bookmark to another phone or computer that supports Bluetooth connections.

Note: You can't copy some copyrighted objects.

Before you try to copy a file to another device, make sure the receiving device is **on** and **ready** in discoverable mode. Also, make sure the device is not busy with another Bluetooth connection.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press Options, then select:
 - Send To > Bluetooth for an image or sound file.
 - Share > contact > Bluetooth for a contact.

- Share Via > Bluetooth for a calendar event or bookmark.
- 3 Select a recognised device name.

or

Select [Search For Devices] to search for new devices, then select the device where you want to copy the object.

- 4 Press Options > Send.
- 5 If necessary, enter a mutually agreed upon passkey (such as 0000) on your phone and the device, then press 0K to connect to the device.

Your phone shows **Sending** while the file is transferred. When file transfer is complete, the phone shows **Send Successful**, and prompts you to press **OK** to continue.

receive files from another device

Before you try to receive a file from another device, make sure your phone's Bluetooth power is **on** (see page 56).

Place your phone within range (approximately 10 meters/30 feet) of the other Bluetooth device, and send the file from the device.

If your phone and the sending device were not previously paired, place your phone in discoverable mode so the sending device can locate it. Press •

- > **Settings** > Connections > Bluetooth, press Options
- > Discoverable On 3 Minutes. The Bluetooth indicator **②** in the home screen flashes when your phone is in discoverable mode.

Your phone notifies you when file transfer is complete and saves the file.

send a photo to a printer

You can send a photo to a printer that supports Bluetooth connections.

Note: You can print A4, US Letter, and 4x6 size pages. To print another size, copy the image to a linked computer and print it from there.

 On your phone, take a new photo or scroll to a stored image that you want to print, then press Options > Print via > Bluetooth.

Note: If you see Service Not Supported when you try to print, select Send To > Bluetooth instead. (The Send To option does not print the image name or date stamp.)

- Select a recognized printer name, or press Options > Search for Printers to search for another printer where you want to send the image.
- 3 If available, modify print options.

more Bluetooth features

Note: A device is *recognized* after you connect to it once (see page 56).

features

pair with recognized device



Press $\cdot \hat{\phi} \cdot > \Re$ Settings > Connections > Bluetooth, press $\cdot \hat{Q} \cdot$ left to select the My Devices tab, press $\cdot \hat{Q} \cdot$ up/down to scroll to the device name, press $\cdot \hat{\Phi} \cdot$ to

up/down to scroll to the device name, press • to connect.

drop connection with device



Scroll to the connected device name and press • • to disconnect.

remove device from device list



Scroll to the device name and press Options

> Manage > Remove Device.

Note: You can't remove a device from the list while your phone is connected to the device.

features

switch audio to Bluetooth headset or Bluetooth car kit during call



Press Options > Use Bluetooth.

To switch audio back to the phone, press **Options** > **Ilse Handset**

edit properties of recognized device



Scroll to the device name, press **Options** > **Manage** > **Edit Device**.

set Bluetooth options



Press • > Settings > Connections > Bluetooth, press Options > Setup Bluetooth.

WiFi

Note: Your phone's WiFi features are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the WiFi features in France unless you are indoors.

Your phone can connect to WiFi networks when you are at home, in the office or at a hotspot. To use WiFi, it must be available at your location and you need to connect to it. Connect your phone with WiFi to exchange files, connect with a printer that supports WiFi to print images, or use your phone to connect to the Internet.

Note: WiFi is the preferred method of connecting to the KODAK Gallery Link, to send photos (see your *Getting Started Guide* for details).

turn WiFi on

To turn on your phone's WiFi feature, press •• Settings > WiFi > Set up WiFi > WiFi Power > On.

Note: To extend battery life set WiFi Power to Off when not in use.

WiFi search

Find it: (♠) > **** Settings > WiFi > Available Networks

- Scroll to a network in the list and press or Options > Connect.
- 2 Enter the Passphrase and press Continue. The passphrase is provided by the home, office, or hotspot network administrator and is unique.
- 3 Add to saved networks, press Yes or No.

Note: Make sure the WiFi network you connect to is secure.

WiFi options

To view saved WiFi networks • > • Settings > WiFi > Saved Networks.

To connect to a WiFi network that you have used before press •• > **Settings** > **WiFi** > **Quick Connect**.

To view the details of a WiFi connection press •• Settings > WiFi > Current Connection.

TV Out

Your phone has a 3.5mm TV Out port so you can connect it to a TV and see your phone's display on the TV. Watch your favourite video or show your friends that slideshow you put together (see your *Getting Started Guide*).

turn TV Out on

To turn on your phone's TV Out feature by press •

> Settings > Connections > TV Out > On > Select.

Select an option:

options	
Picture slideshow	Photos are displayed on TV.
Video slideshow	Video is displayed on TV in
	landscape format.
Browse Media	Media Finder is displayed on TV.

Press Cancel to see your phone's display on the TV.

phone updates

Sometimes, we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at: www.hellomoto.com/update

Note: Software updates do not affect your contact list or other personal entries or files. If you receive a software update but choose to install it later, see page 71.

other features

advanced calling

features

speed dial

Your phone can store nine phone numbers that you can call with a single keypress. To **store** a speed dial phone number:

> Setup > Speed Dial List

> speed dial location

To **call** a speed dial number, press and hold the single-digit speed dial number for one second.

features

international calls



If your phone service includes international dialling, press and hold 10 to insert your local international access code (indicated by +). Then, press number keys to dial the country code and phone number.

hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press Options > Mute to put all active calls on mute.

call waiting

(A)

When you're on a call, you'll hear an alert if you receive a second call. Press (to answer the new call.

- To switch between calls, press Switch.
- To connect the two calls, press Link.
- To end the call on hold, press
 Options > End Call on Hold.

To turn call waiting on or off:

•• > Settings > Call Settings > In-Call Setup > Call Waiting > On or Off

new call



During a call:

Options > New Call, press Options > Browse Contacts

features

conference call



During a call:

Dial next number, press Options > Link Calls

transfer a call




During a call:

Options > Transfer, dial transfer number, press

call forwarding




Set up or cancel call forwarding:

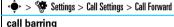



Restrict outgoing or incoming calls:

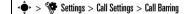

change phone line

If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number:



The active line indicator shows the active phone line (see illustration on page 15).

features

(A)

fixed dial



When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.

Note: You must enter your SIM PIN2 code to turn fixed dialling on or off. If you forget your PIN2 code, contact your service provider.

Turn fixed dialling on or off:



Use the fixed dial list:

•• > Office Tools > Dialling Services > Fixed Dial

DTMF tones

Activate DTMF tones:



Send DTMF tones during a call:

Press number keys

phonebook

For basic phonebook features, see your *Getting Started Guide*.

features

add new contact

•• > Phonebook, press Options > Create Contact

Press · Ŷ · left/right to select the **details** tab ℍ, address tab ຝ . ID tab ①, or notes tab ᠍. Press · Ŷ · up/down to scroll to information you want to change, then press · Ŷ to select it.

Note: The tab options are only available for contacts stored on your phone and not on your SIM card.

features

call contact

 $\stackrel{•}{•}$ > \bigcirc **Phonebook**, scroll to the contact, press \bigcirc to call

Note: If a contact has multiple phone numbers or email addresses, press •� left/right to select the number or email address you want.

send message to contact

•• > **(Type Phonebook**, scroll to the contact, press **Options** > **Send Message**

add additional phone number or email address to contact

•• > • Phonebook, scroll to the contact, press Options > Edit, press •• left/right to select the **details** tab ••, press •• up/down to scroll to an empty Number or Email field, press •• to select it

set picture ID for contact

Assign a photo or picture to show in the display when you receive a call from a contact:

 $\begin{tabular}{ll} $ \cdot \begin{tabular}{ll} \bullet & \bullet

set ring ID for contact

Assign a distinctive call alert (ring ID) for a contact:

• > • Phonebook, scroll to the contact, press Options > Edit, press • Deft/right to select the ID tab •, press • up/down to scroll to Ring ID, press • to select it

features

assign contact to category

 $\begin{array}{ll} • \\ \hline • > & \hline & \\ \hline &$

set category view

•• > • Phonebook, press Options > Filter by

You can show contacts in a predefined category (All Contacts, Email, Family, Friends, Work), or contacts in a category that you create (select Create Category).

create group mailing list

Assign contacts to a group message list or email list:

•• > \P Phonebook, press Options > Create List > Message or Fmail

show contact photos

Show contacts with picture ID photos, or as a text list:

•• > Phonebook, press Options > Setup > Default View > Thumbnail or List

set contact list sort order

•• > • Phonebook, press Options > Setup > Default Sort Order > First Name or Last Name

create and use private contacts

Identify one or more contacts as private contacts. You must enter your six-digit security code to access the private contacts on your contact list.

• > **W** Phonebook, press Options > Setup > Private Contacts

features

import contacts to phone memory

Import all contacts to phone memory, from the SIM card or from another location:

•• > Phonebook, press Options > Import Contacts > SIM Card or File Manager

manage SIM card contacts

•• > Phonebook, press Options > Setup > SIM Card Manager

Delete contacts stored on your SIM card, or import contact to the SIM card from phone memory, or from another location.

send contact(s) to another device

Send one or more contacts to another phone, computer, or device:

• > \P Phonebook, scroll to the contact, press Options

> Share, press • • to select the current contact, press • • up/down to scroll to Bluetooth, Messaging, or Email transfer method, press Select to select it

To send multiple contacts, press **Options** > **Share**

> Multiple Contacts (instead of the current contact).

delete contact(s)

Delete one or more contacts from your contact list:

• > \P Phonebook, scroll to the contact, press Options

> Delete, press • to select the current contact, press Yes to confirm deletion

To delete multiple contacts, press Options > Delete

> Multiple Contacts (instead of the current contact).

personalise

features

language

Set menu language:



reminders

Set the reminder alert for event notifications:

•• > **Settings** > **Profiles**, press •• left/right to select the **settings** tab ••, > **Remind me**

reset settings

Reset default settings for all options **except** the unlock code, security code, and lifetime timer:

• > Settings > Phone Settings > Reset > Reset All Settings

delete data

Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

This option does **not** delete SIM card information:



features

delete memory card information

Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including photos and sounds) stored On your memory card and/or SIM card. After you erase the information, you can't recover it.

•• > Settings > Phone Settings > Reset > Delete Memory Cards

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing <a>O. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the


amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times



See call timers:

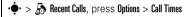

in-call timer



Show call time information during a call:



call cost



See call cost trackers and credit information:

•• > 🔊 Recent Calls, press Options > Call Costs

features

call cost setup



Set a credit limit:

•• > & Recent Calls, press Options > Call Costs > Call Cost Setup

data times



See data call timers:

•• > & Recent Calls, press Options > Data Times

data volumes



See data volume meters:

• > Recent Calls, press Options > Data Volumes

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of

wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

auto answer (headset)



Automatically answer calls when connected to a car kit or headset:





> Auto-Answer

voice dial (headset)



Enable voice dial with headset send/end key:



> Settings > Phone Settings > Headset Settings

> Voice Dial

network

features

network settings



See network information and adjust network settings:





software update



Your service provider can send updated phone software over-the-air to your phone. When your phone receives a software update, you can install it immediately, or defer installation until later. To install a deferred software update:



> Undate Software

personal organiser

features

set alarm



• > M Office Tools > Alarm Clock

Shortcut: From the home screen, press **Shortcuts** > Set Alarm

turn off alarm

When the display shows an alarm:

To turn off the alarm, press **Dismiss** or **.**

To set an eight-minute delay, press Snooze.

set calendar default view



> Calendar Setup > Default View

features

add new calendar event

• > M Office Tools > Calendar, scroll to the day and/or start time, press • , enter event details

You can set a music or sound file, voice note, or video as a calendar event reminder. When creating a calendar event, select Alarm Style > alarm type, scroll to the file (or create a new file), press Insert.

see calendar event

• > Office Tools > Calendar > event

To edit event details, press Options > Edit.

calendar event reminder

When the display shows and sounds an event reminder:

To see reminder details, select Open Event.

To close the reminder, press Dismiss.

features

send calendar event to another device

Send a calendar event to another phone, computer, or device:

• > • Office Tools > Calendar > event, press Options > Share Via > Bluetooth or Message

manage downloaded files

Manage files and applications that you've downloaded onto your phone from the browser or over a Bluetooth® connection:

• > 🔊 Office Tools > Download Manager

world clock

Show time and date information for multiple cities around the world:

• > Morld Clock

features

task list

Create a checklist of tasks you need to perform, and set your phone to notify you when task deadlines arrive:

•• > 🕙 Office Tools > Task List

notes

Write and store notes on your phone:

•• > 🕙 Office Tools > Notepad

features

record voice note

• > ${\begin{subarray}{l} \bullet}$ Multimedia > Voice Recorder, press • to start recording, press Stop to stop recording

To save the voice note, press Save.

To perform various operations on the voice note, press $\mbox{\it Options}.$

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

play voice note

Play back a voice note you've recorded:

•• > { Multimedia > Media Finder > Voice Notes

> voice note

features

calculator

•• > 🕙 Office Tools > Calculator

currency converter

• > • Office Tools > Calculator, press Options

> Set Exchange Rate, enter exchange rate, press Set, enter amount, press Options > Convert Currency


security

features

SIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

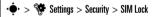

lock application


• > Settings > Security > Application Lock

features

manage certificates



Enable or disable Internet access certificates stored on your phone:

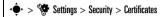

Certificates are used to verify the identity and security of Web sites when you download files or share information.


fun & games

features

start a game or application



Start a Java™ game or application:

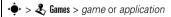

features

aeroplane mode

Turn off your phone's calling features in locations where wireless phone use is prohibited. This lets you use the music player and other non-network features while you are on an aeroplane, without interfering with aeroplane communications.



To reactivate your phone's calling features, turn off aeroplane mode.

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.86 W/kg. ¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. ² In this case, the highest tested SAR value is 0.51 W/kg. ¹

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this

product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (http://www.who.int/emf) or or Motorola. Inc

(http://www.motorola.com/rfhealth).

- The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure and measurement uncertainty range for this product.
- Please see the Safety and General Information section about body worn operation.

OPEN SOURCE SOFTWARE INFORMATION

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may send your request in writing to:

MOTOROLA, INC. OSS Management 600 North US Hwy 45 Libertyville, IL 60048 USA

The Motorola website <u>opensource.motorola.com</u> also contains information regarding Motorola's use of open source.

Motorola has created the **opensource.motorola.com** to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licences, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device. follow these instructions:

- 1 From the phone Main Menu, select Settings.
- 2 From Settings, select Phone Settings.
- 3 From Phone Settings, select Legal Notices.

index

B abc mode 19 back/clear key 2 cables, using 54 accessories 12, 41, 56, 70 battery 13 calculator 74 active line indicator, 15 battery charge indicator light 2 calendar active line, change 64 battery charging 13 add event 72 aeroplane mode 76 battery indicator 16 send event 73 alarm clock 72 battery installation 13 set view 72 battery life, extend 29, 56, 60 synchronise 52 alert set 24, 27 Bluetooth headset indicator call turn off 20, 30 light 2 answer 29 alert profile 20, 24 Bluetooth indicator 15 waiting 63 alert style profiles 15 Bluetooth wireless 41, 56 call alert 66 answer a call 29 bonding. See Bluetooth wireless call barring 22, 63 audio file formats 37 call forward indicator 15 brightness 29 audio player 35 browser 45, 50, 73 call forwarding 63 browser messages 50 call timers 70

caller ID 31, 66

camera 33	delete data 69	email address 65
camera key 2	delete key 2	emergency number 32
car kit 70	delete text 18	Enter Unlock Code message 22
centre key 12, 14	dial a phone number 64	
certificate management 75	dialed calls 30	F
clear/back key 18	digital audio 35	file manager 52
clock 26	display 4, 14, 29	filter contacts 66
codes 22, 23	download files 45	fixed dial 64
conference call 63	download manager 73	FM radio 42
contact list	download media objects 50	forward calls 63
add entry 65	drafts folder 48	
filter 66	DTMF tones 64	G
picture ID 31		GPRS indicator 15
send contact 68	E	group mailing list 66
synchronise 52	earpiece volume 20	
view 66	EDGE indicator 15	Н
costs, track 70	email	handsfree speaker 22
	create folder 50	headset 70
D	read 49, 50	headset jack 2, 42
data call 70	send 49	hold a call 62
date 26	setup 49	home screen 4, 14
80 index		

L	lock/unlock keypad 2	mute a call 62
in-call indicator 15	Low Battery message 16	N
Incoming Call message 31 information services 51 international access code 62	M media playback 24	navigation key 12 network settings 71
international access code 62	media volume, adjust 24	new 25
K	memory card 53	new call 63
keypad volume, adjust 24	menu 4, 14	notes 73
KODAK EASYSHARE software 54	menu icons 14	numeric entry mode 20
L	message read 48, 49, 50	0
language 68	send 47	optional accessory 12
lanyard hook 2	message indicator 15, 48	optional feature 12
line 1 and line 2 15 linking. See Bluetooth wireless	message reminders 68 micro USB port 2, 13, 54	P
lock application 75 phone 23 SIM card 75	Missed Calls message 31 MOTOSYNC 52 MP3 sound files 35 multimedia message 47	pairing. See Bluetooth wireless passwords. See codes personalise 68 phone number
lock/unlock key 20	multimedia message template 49 music player 35	store 65 your number 64

photo 33 picture ID 31, 66 PIN code 22, 75 PIN2 code 22, 64 playback volume 20 predictive text entry 18 preview/toggle key 2 printing 55, 58 profile 25 profile indicator 15 profiles 15, 24 Q

quick note 49

R

received calls 30 recent calls 30 redial 31 reminders 68 reset settings 68 return a call 31
review key 2
right soft key 2
ring ID 66
ringer ID 31
ringer volume, adjust 24
ringtone 24, 27, 39

S

screensaver 27, 29
search 60
security code 22
signal strength indicator 15
silent profile 24
SIM Blocked message 75
SIM card 22, 64, 75
SIM card, delete information 69
simple share key 2
soft key 2
soft keys 14
software update 61, 71

speakerphone 70 speed dial 62 stereo headphones 41 store phone numbers 65 symbol entry mode 20 synchronise 52

1

task list 73 text edit 18 text entry 17 text entry mode 19 text message 47 text messaging 47 text templates 49 theme 27 time 26 timers 70 transfer a call 63 transfer pictures 54 TV Out 61

TV Out on 61 W wallpaper 27 U Web pages 45 unlock WiFi 59 application 75 WiFi indicator 15 phone 22, 23 WiFi on 60 SIM card 75 WiFi options 60 unlock code 22, 23 WLAN 60 upload files 45 word text entry mode 18 USB cables 54 world clock 73 V Z vibrate profile 24 zoom keys 2 video 33 voice commands 21 U.S. patent Re. 34,976 voice dial 21, 71 voice note 74 voicemail 32

voicemail message indicator 32

volume 20, 24 volume keys 2, 20

www.motorola.com



