

# Nokia 2280

## User Guide

## DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product RH-17 is in conformity with the provisions of the following Council Directive:1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

# CE 168

The wireless phone described in this guide is approved for use in CDMA networks.

## LEGAL INFORMATION

Copyright ©2005 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 2280, the Nokia Original Accessories logos, Snake II, Space Impact II, and Bumper are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2004. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

The information in this user guide was written for the Nokia 2280 phone. Nokia operates a policy of on-going development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

9235342

## • CONTENTS

<b>For your safety .....</b>	<b>5</b>
Quick guide .....	7
Menu .....	8
<b>Welcome .....</b>	<b>9</b>
Get the most out of this guide .....	9
Understand wireless network services .....	10
<b>About your phone.....</b>	<b>11</b>
About the antennas .....	12
About the battery .....	12
Switch your phone on or off .....	14
Check the Start screen .....	14
Use the selection keys .....	15
use the scroll keys .....	15
Learn about the keys.....	16
Make and answer calls.....	16
Review phone symbols.....	17
Memory use .....	18
View your phone help system .....	18
Browse phone menus.....	18
Menu and menu shortcuts.....	20
Phone book menu .....	23
<b>Phone setup.....</b>	<b>24</b>
Learn about the HDB-4 and HS-5 headset .....	24
<b>Text entry .....</b>	<b>25</b>
Enter letters and numbers.....	25
Write using ABC and 123 modes .....	26
Write with predictive text.....	28
Tips for predictive text .....	29
<b>Phone book.....</b>	<b>31</b>
Saving contacts and numbers.....	31
Recall contacts and numbers.....	31
Use phone book menus.....	32
Edit a name or number .....	32
Add a number to a phone book entry .....	33
Delete stored and numbers.....	34
Add other information to a phone book entry .....	34

Use caller groups.....	35
Check memory status .....	35
<b>Call register .....</b>	<b>36</b>
Check missed or received calls, or dialled numbers.....	36
Delete recent call lists.....	37
Use call timers .....	38
Turn on a current call timer.....	38
Clear call timers .....	38
Data timers (Data/fax and Minibrowser).....	39
<b>Voice mailbox .....</b>	<b>40</b>
Store your voice mailbox number.....	40
Set greetings .....	40
Listen to your voice messages.....	40
<b>Text messages.....</b>	<b>42</b>
Write a text message.....	42
Use message templates.....	44
Learn about e-mail text messages .....	44
Receive text messages.....	45
Respond to a text message.....	46
Reply to a message.....	46
Delete messages.....	47
Message settings.....	49
Organise text messages using folders .....	49
<b>Personalisation .....</b>	<b>50</b>
Learn about profiles .....	50
Select a different profile.....	50
Personalise a profile.....	50
Rename profiles.....	52
Download a ringing tone .....	53
Set the display language .....	53
Set the clock.....	53
Customise the Welcome screen .....	55
Learn about voice commands.....	55
<b>Advanced features.....</b>	<b>57</b>
View in-call options .....	57
Use call Divert.....	57
Use call waiting59	

Send own caller ID when calling.....	59
Use automatic redial.....	60
Calling card.....	60
Voice dialling.....	62
Speed dialling.....	64
Learn about Caller Groups.....	64
Use Touch tones.....	65
Link phone book entries.....	67
Learn about Voice Recorder.....	67
<b>Security and System settings.....</b>	<b>69</b>
Lock keypad (Keyguard).....	69
Security code.....	69
Phone lock.....	70
Call restrictions.....	71
Automatic update of service.....	73
Learn about system selection.....	73
<b>Organiser.....</b>	<b>75</b>
Use the alarm clock.....	75
Calendar.....	76
Calculator.....	78
Stopwatch.....	79
<b>Applications.....</b>	<b>81</b>
Launching an application.....	81
Other options available for applications.....	81
Download a new application.....	82
<b>Games.....</b>	<b>83</b>
<b>Your phone and other devices.....</b>	<b>84</b>
PC Connectivity.....	84
<b>Minibrowser.....</b>	<b>85</b>
Understand browsing sessions and indicators.....	85
Launching the minibrowser.....	85
Minibrowser menu.....	86
Navigate in the minibrowser.....	87
Links.....	87
Bookmarks.....	88
Receive messages using the minibrowser.....	88
End the minibrowser session.....	89
Disable minibrowser confirmations.....	89
<b>Reference information.....</b>	<b>90</b>
Use accessories safely.....	90
Important safety information.....	91
Certification Information (SAR).....	93
Care and maintenance.....	94
Mobile enhancements.....	95
Battery information.....	96
Chargers and other accessories.....	97
Nokia Xpress-on™ color covers.....	100
Index.....	101

# 1 For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



## SWITCH OFF WHERE PROHIBITED

Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



## ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



## INTERFERENCE

All wireless phones may get interference, which could affect performance.



## SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



## SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



## SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



## SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



**USE SENSIBLY** Use only in the normal position. Don't touch the antenna unnecessarily.



## QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



## ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



## WATER-RESISTANCE

Your wireless phone is not water-resistant. Keep it dry.



### BACKUP COPIES

Remember to make backup copies of all important data.



### CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



### CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press the **Send** key. To end a call, press the **End** key. To answer a call, press the **Send** key.



### EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the **End** key as many times as needed (for example, to exit a call, to exit a menu) to clear the display. Enter the emergency number, then press the **Send** key. Give your location. Do not end the call until told to do so.

## • QUICK GUIDE <sup>1</sup>

Make a call	Enter a phone number, and press the <b>Send</b> key.
Answer a call	Press the <b>Send</b> key or <b>Answer</b> .
Answer a call with call waiting	Press the <b>Send</b> key or <b>Answer</b> .
End a call	Press the <b>End</b> key.
Ignore a call	Press <b>Silence</b> when your phone rings.
Redial	Press the <b>Send</b> key twice.
Adjust call volume	Press the up scroll key or the down scroll key.
Use the in-call menu	While in a call, press the left selection key to select <b>Options</b> .
Use Speed dialling	Press and hold any key 2-9.
Save a name and number	Enter a number, press the left selection key to select <b>Options</b> , and select <b>Save</b> . Enter a name and press <b>OK</b> .
Recall a name/number	Press <b>Contacts</b> , select <b>Search</b> . Enter first character of name and press <b>Search</b> .
Recall a name/number during a call	Press <b>Options</b> , scroll <b>New call</b> , press <b>Select</b> , press <b>Search</b> , and enter the first letter of the name to find.
Check voice mail	Press and hold <b>1 OR</b> dial your voice mailbox number.
Send a text message	Press <b>Menu 01-1-1</b> . Add recipient's phone number, then press <b>Options</b> . Scroll to <b>Enter text</b> , then press <b>Select</b> . Enter the message text, press <b>Options</b> , and select <b>Send</b> .
Send an e-mail message	Press <b>Menu 01-1-1</b> . Add recipient's e-mail address, press <b>Options</b> . Scroll to <b>Enter text</b> , then press <b>Select</b> . Enter the message text, then press <b>Options</b> , and select <b>Send</b> .
Read new message	Press <b>Show</b> .
Reply to a message	Press <b>Options</b> , select <b>Reply</b> , then select a reply option. Write the reply, press <b>Options</b> , and select <b>Send</b> .
Reply to an e-mail message	Press <b>Options</b> , select <b>Reply</b> , then select a reply option. Write the reply, press <b>Options</b> , and select <b>Send</b> .
Send a business card (SMS)	Recall a name from the phone book. Press <b>Details</b> , press <b>Options</b> , select <b>Send bus. card</b> , then select <b>Via text msg</b> . Enter the recipient's number or press <b>Search</b> to retrieve a number from the phone book. Press <b>OK</b> .

<sup>1</sup> For information about phone keys, see "About your phone" on page 11.

## • MENU

### 1 MESSAGES

Text messages .....	01-1
Create message .....	01-1-1
Inbox .....	01-1-2
Outbox .....	01-1-3
Archive .....	01-1-4
Templates .....	01-1-5
My folders .....	01-1-6
Delete messages .....	01-1-7
Message settings .....	01-1-8
Voice messages .....	01-2
Minibrowser messages .....	01-3

### 2 CALL REGISTER

Missed calls .....	2-1
Received calls .....	2-2
Dialled numbers .....	2-3
Delete recent call lists .....	2-4
Call timers .....	2-5
Data/fax calls .....	2-6
Minibrowser calls .....	2-7

### 3 PROFILES

General .....	3-1
Silent .....	3-2
Meeting .....	3-3
Outdoor .....	3-4
Pager .....	3-5

### 4 SETTINGS

Call settings .....	4-1
Phone settings .....	4-2
Time settings .....	4-3
Accessory settings .....	4-4
Security settings .....	4-5
Network services .....	4-6
System .....	4-7

### 5 GAMES

Select game .....	5-1
Snake II .....	5-1-1
Space Impact II .....	5-1-2

Bumper .....	5-1-3
Settings .....	5-2

### 6 VOICE

Voice tags .....	6-1
Voice commands .....	6-2
Profiles .....	6-2-1
Voice mailbox .....	6-2-2
Recorder .....	6-2-3
Call register .....	6-2-4
Voice recorder .....	6-3
Record .....	6-3-1
Recordings list .....	6-3-2

### 7 MINIBROWSER

### 8 ORGANISER

Alarm clock .....	8-1
Calendar .....	8-2
Calculator .....	8-3
Stopwatch .....	8-4


### 9 APPLICATIONS

Select app .....	9-1
App. downloads .....	9-2
Memory .....	9-3

### 10 KEYGUARD

## 2 Welcome

Congratulations on the purchase of your Nokia mobile phone—a new tool for the mobile information society.

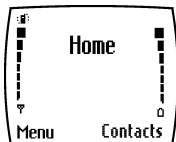

Nokia recommends that you read this chapter before you use your new phone. You will find useful information about:

- How to use this guide
- How to understand network services

### • GET THE MOST OUT OF THIS GUIDE

The tips that follow can help you use this guide efficiently as you learn to use your phone.

#### Understand the terms

This guide uses certain terms for certain actions.

- **Press** means to briefly press then release a key. For example, Press 0 means to press the zero key.
- **Press Menu** means to press the selection key that is below the word **Menu** on the phone screen.
- **Press and hold** means to press and hold a key for two to three seconds (depending on the feature you are using), then release the key.

- Use the **selection keys** to choose an option on a menu.
- **Highlighted** means that an option displayed on the screen is enclosed in a dark bar. Choices you make with the two selection keys act on the highlighted option.

#### Observe text conventions

This user guide provides text clues to make instructions easy to follow.

Convention	What it means
<b>bold</b>	Indicates one of the following items: <ul style="list-style-type: none"> <li>• The word or phrase appears on the phone's screen.</li> <li>• Special text such as <b>Notes and Warnings</b>.</li> </ul>
<b>bold and blue</b>	Indicates the text is an address on the World Wide Web.
<i>blue and italic</i>	A definition for the word or phrase appears in the terms list (glossary) near the end of the user guide.
<i>italic</i>	Italics indicate emphasis. Pay close attention to any information in italics.

#### Follow graphic clues

This user guide provides graphic clues (icons) to alert you to important information.



**Tip:** Information about a shortcut or another way to do something.



**Note:** Explanations about a feature or an important concept.



**Important:** Critical information about a feature.




**Caution!** Help to avoid information loss.



**Warning!** Helps to avoid personal injury, damage to the phone, or property damage.

## • UNDERSTAND WIRELESS NETWORK SERVICES

Your service provider's wireless network may be equipped to provide special features or functions for use with your Nokia phone. These features are called *network services*, and may include some of the following:

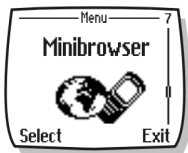

- Voice mail and voice privacy
- Call waiting, call diverting, and caller ID
- Text messages
- Ability to block or send your own caller ID
- News and information services
- Selected Internet access services


## Sign up with a service provider

Before you can take advantage of your service provider's network services, you must sign up with a wireless service provider and subscribe to these services. Your service provider will make available descriptions of its services and instructions for using them.


## Note differences among service providers

Wireless service providers may differ from each other in certain ways. For example, some networks may not support special language-dependent characters. Contact your service provider regarding your service needs.

### 3 About your phone

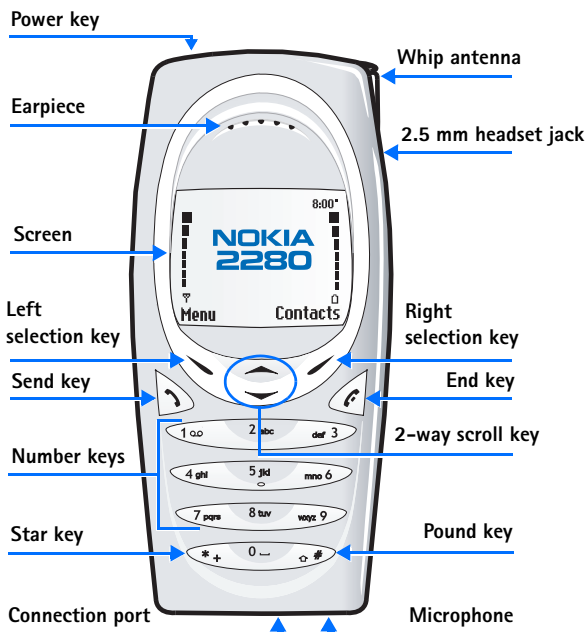

## • ABOUT THE ANTENNAS

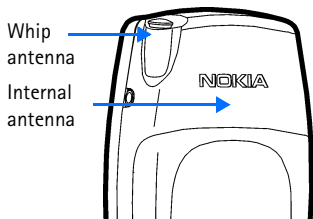

Your phone is equipped with two antennas. The internal antenna is always active. The whip antenna is activated when the whip antenna is fully extended.

As with any other radio transmitting device, do not touch either of the two



antennas unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimises the antenna performance and the talk time of your phone.

While in a call, hold the phone to your ear, placing your finger tips at the mid-center of the back cover, below the antenna area on the back of your phone.


## • ABOUT THE BATTERY

### Install the battery




**Warning!** Use only the BL-5C battery in this Nokia phone. If your dealer has already installed the battery, please see "Charge the battery" on page 13.

- 1 Remove the back cover of the phone by pressing and holding the release button while sliding the cover downward toward the bottom of the phone. Set the back cover aside.

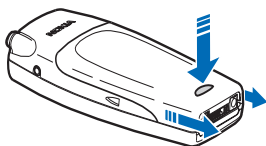


- 2 Place the battery in the compartment with the label side facing down and the metal contacts aligned with the contact prongs.

Metal contacts

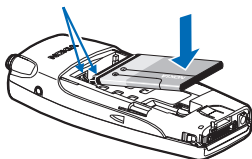


- 3 Snap the battery into place.

- 4 Replace the cover by placing it into the slots on the back of the phone, and sliding the cover upward until it is in place.

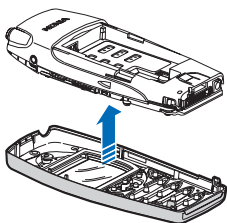

## Charge the battery

Follow these guidelines to charge the battery.

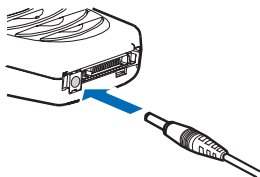

- 1 Connect the charger to an ac wall outlet.
- 2 With your phone on or off, connect the lead from the charger to the charging port located on the bottom of the phone.  
The battery indicator bar appears on the screen and starts to scroll up after a few seconds. With the phone off, only the battery indicator bar will appear.
- 3 Disconnect the charger from the phone and ac outlet when the battery is fully charged.



After the indicator bar stops scrolling, the battery is almost fully charged, and is fully charged after an additional hour (approximately). The message **Battery Full** is displayed.



**Note:** For best performance, charge the battery for 24 hours before you first use the phone. The charging time depends on the charger and battery you use. Do not leave the battery connected to a charger for more than 72 hours, since prolonged charging could shorten its lifetime.


## Remove the battery



**Warning!** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose off properly.

You will need to remove the existing battery if you want to install a new battery. Make sure the phone has been turned off for 10 seconds.


- 1 Remove the back cover of the phone as shown in step 1 on page 12.
- 2 Place your index finger in the space at the bottom of the battery, and press toward the top of the phone.

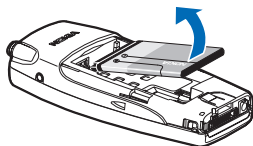

- 3 Take out the battery.

## Card slot

RUIM card slot

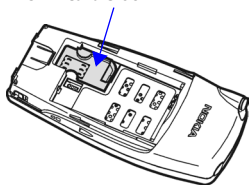

There is an open slot under the battery. Do not place any objects in this slot. This product does not support RUIM cards.

## Important battery information

- Recharge your battery only with a charger approved by Nokia.
- You can switch the phone on and use it for calls while the battery is charging.
- If the battery is totally empty, it may take a few minutes for the battery indicator to appear on the screen.
- If you switch the phone on when charging is complete, the message **Battery full** is displayed momentarily.
- Charging time depends on the charger and battery used. Please see "Battery information" on page 96, for more information.
- If the battery has become completely empty, you may need to recharge it for a few minutes before you can make or receive calls.

## • SWITCH YOUR PHONE ON OR OFF


To switch your phone on or off, press and hold the power key (located on the top of the phone) for two seconds.

Power key



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

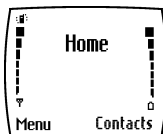


## • CHECK THE START SCREEN



The Start screen refers to the phone display when no calls are in progress, and there are currently no menu or phone book entries displayed.

You can easily return to the Start screen from any location (other than an active call) simply by pressing the **End** key. Keep in mind that any numbers that you were entering at the time will be lost. However, text messages will be saved.

The table on the following page describes the status indicators and icons found on the Start screen:

Element	Description
Home	Your service provider's name may appear here.
	Shows the signal strength of the wireless network where you are. The higher the bar, the stronger the signal.
	Shows the battery charge level. The higher the bar, the higher the power level in the battery.
Menu	The entry point for your phone menu. Press the left selection key to view the menu options.
Contacts	The entry point for the phone book menu. Press right selection key to view the phone book menu options.
	Icon appears in upper left corner of screen, indicating that you are in a digital network.

## • USE THE SELECTION KEYS

Note the two selection keys beneath the screen. The function of these keys is determined by the word shown above them on the screen.



For example, pressing the left selection key when the word **Menu** appears above it shows the first of many menus. Scroll through the menus using the scroll keys.

Likewise, pressing the right selection key when **Contacts** appears above it displays the phone book menu.



## • USE THE SCROLL KEYS

Note the two scroll keys in the center of the phone, beneath the screen. The function of these keys is to scroll through the different menus and lists within the phone.



## • LEARN ABOUT THE KEYS

The following table contains a summary of how the various keys on your phone work.

Key	Description
	<b>Send:</b> Press the <b>Send</b> key to make a call to the name or number shown on the screen or to answer a call. Pressing this key when not in a call (or when not in the menu or phone book) displays a list of recently dialled numbers.
	<b>End:</b> Press the <b>End</b> key to end a call, to silence the ring from an incoming call, or to exit the phone book or menus completely. Used as <b>Back</b> key in Minibrowser.
1 through 0	<b>Number:</b> Use keys 1 through 0 to enter numbers and letters. Press and hold 1 to dial your voice mailbox. Press and hold 0 to launch the minibrowser.
#	<b># key:</b> Press the # key to change case of text, or to enable or disable predictive text input.
*/+	<b>* key:</b> Press the * key to enter special characters (for example, punctuation) or access special characters menu.

## • MAKE AND ANSWER CALLS









Use the following table as a quick reference for making and answering calls:










Task	Instructions
Make a call	<ol style="list-style-type: none"> <li>1 Enter the number using the keypad (include area code as needed).</li> <li>2 Press the <b>Send</b> key.</li> <li>3 Hold the phone as you would any other telephone, with the ear piece over your ear and the microphone near your mouth.</li> </ol>
Answer a call	When your phone rings, press the <b>Send</b> key.
End a call	Press the <b>End</b> key to terminate the active call.
Silence a call	Press the <b>End</b> key or press the right selection key to select <b>Silence</b> , when you do not want to answer a call, but still want to silence the ringer.
Keyguard	To avoid accidental calls, select <b>Menu</b> , then scroll up once, and press <b>Select</b> . You could also press <b>Menu</b> , then press the */+ key (within three seconds) to lock your keypad. This activates the Keyguard feature.







Task	Instructions
Unlock keypad	When the keypad is locked, select <b>Unlock</b> , then press the <b>*/+</b> key (within three seconds). This deactivates the Keyguard feature.

## • REVIEW PHONE SYMBOLS

The following is a collection of the various indicators and icons you may see on your phone.

Symbol	Description
	A call is in progress.
	You have selected the <b>Silent</b> profile (silencing your phone ringer, keypad tones, warning tones, etc.)
	Keyguard is active
	You have one or more voice messages waiting.
	You have one or more unread text messages waiting.
	Digital service is available.
	Letters you enter appear as uppercase (ALL CAPS).
	Letters you enter appear in lowercase.

Symbol	Description
	Letters you enter appear in sentence case (first word in sentence capitalised) or title case (in phone book).
	Characters you enter appear as numbers.
	Predictive text mode is active. Predictive text feature available for Calendar and for text messages.
	Predictive text mode activated. Characters you enter appear in sentence case (only first word in sentence capitalised).
	Predictive text mode activated. Characters you enter appear as uppercase letters.
	Predictive text mode activated. Characters you enter appear as lowercase letters.
	Insert symbol mode, used to enter special characters such as punctuation marks.
	The alarm clock is set.
	Indicates that a reminder has expired.

Symbol	Description
	Indicates you are roaming. For more information on roaming, see "View Roaming options" on page 74.
	Indicates call over a secure connection.
	Indicates that a headset is connected (either through the 2.5 mm jack or to the accessory connector located at the bottom of phone).
	Indicates phone is in handsfree car kit.
	Indicates a connection to high-speed data network.
	Indicates you have a minibrowser message.

## • MEMORY USE

In your phone, **Calendar Notes** and **Java Applications** share a common pool of memory (storage capacity). When either of these features are used, there is less available memory for the other feature which is also dependent on shared memory. This is especially true with the heavy use of some features. If your use of a feature takes all of the shared memory, your phone may display a message saying **Memory full**. To proceed, you must delete some of the information or entries from these features to make additional memory space available.

For example, entering 75 calendar notes may consume significant shared memory. Consequently, if you attempt to download a Java midlet into your phone, a message saying **Memory Full** may appear. To proceed, you must delete some of the items or information occupying the memory.

## • VIEW YOUR PHONE HELP SYSTEM


Your phone provides brief descriptions of all menu options. To view any of the help texts:

- 1 Scroll to a menu or submenu option.
- 2 Wait about 15 seconds.  
A short message appears, describing the option and what it does.
- 3 Select **More**, by pressing the left select key to view more feature details.

## ENABLE/DISABLE HELP SYSTEM

Press Menu 4-2-5 (Settings > Phone settings > Help text activation) to turn the phone's help system on or off.

## • BROWSE PHONE MENUS

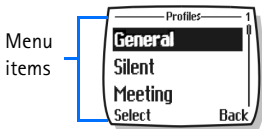


Your phone's menu system displays choices you can make to change settings on your phone or gives you access to various phone features. Your phone has 10 menus, plus the phone book menu (**Contacts**). Each menu can contain several levels of submenus.

You can use menus and submenus in two ways: by scrolling or by using a shortcut.

## Check the menu number, header line, and scroll bar

A **header line** appears at the top of your

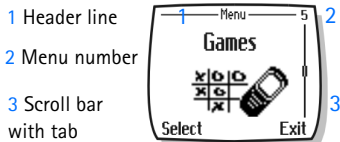

screen when in the phone book or while navigating the menus. The header line provides you with a reminder of the phone book entry or the menu or submenu with which you are working.

A **scroll bar** appears on the right side of the screen when you scroll through the main menu. A **tab** on the bar gives you a visual indication of your relative position in the menu structure.

The **menu number** is located at the top of the scroll bar.

## Scroll through menus

- 1 At the Start screen, press **Menu**, then scroll through the menus using the up and down scroll key.


- 2 Press **Settings**, **Select**, or **OK**, pressing the selection key for the option you want.
- 3 Use the scroll and selection keys to navigate the submenus. Press the **End** key to return to the Start screen.

## SCROLLING TIPS

- You can scroll up and down to find some of the most frequently used submenu options.
- You can return to the previous menu level by pressing **Back**.
- To exit a menu and return to the Start screen, press the **End** key.
- Some menus may not appear. Ask your service provider for details.

## Learn about menu shortcuts

Menus and options are numbered so that you can jump directly to the most frequently used option. The numbers appear in the top right corner of the screen and show your location in the menu.

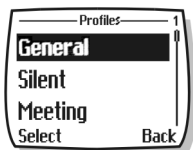

## USE A SHORTCUT

Example: To turn on **Automatic redial**:

- 1 Press **Menu**.
- 2 Within three seconds, press **4-1-2-1** (**Settings > Call settings > Automatic redial > On**).

## • MENU AND MENU SHORTCUTS

<b>MESSAGES</b> .....	1
Text messages .....	01-1
Create message	
(Text/Numeric Page) .....	01-1-1
Text .....	01-1-1-1
Numeric page .....	01-1-1-2
Inbox .....	01-1-2
Outbox .....	01-1-3
Archive .....	01-1-4
Templates .....	01-1-5
My folders .....	01-1-6
Delete messages .....	01-1-7
All read .....	01-1-7-1
Inbox .....	01-1-7-2
Outbox .....	01-1-7-3
Archive .....	01-1-7-4
Message settings .....	01-1-8
Sending options .....	01-1-8-1
Other settings .....	01-1-8-2
Voice messages <sup>1</sup> .....	01-2
Listen to voice messages ..	01-2-1
View details of last	
voice mail .....	01-2-2
Voice mailbox number .....	01-2-3
Clear voice mail icon .....	01-2-4
Minibrowser messages .....	01-3

<b>CALL REGISTER</b> .....	2
Missed calls .....	2-1
Received calls .....	2-2
Dialled numbers .....	2-3
Delete recent call lists .....	2-4
All .....	2-4-1
Missed .....	2-4-2
Received .....	2-4-3
Dialled .....	2-4-4

Call Timers .....	2-5
Duration of last call .....	2-5-1
Show call time	
on display .....	2-5-1-1
Duration of dialled calls ..	2-5-2
Duration of received calls ..	2-5-3
Duration of all calls .....	2-5-4
Life timer .....	2-5-5
Clear timers .....	2-5-6
Data/fax calls .....	2-6
Last sent data/fax .....	2-6-1
Last received data/fax .....	2-6-2
All sent data/fax .....	2-6-3
All received data/fax .....	2-6-4
Duration of last	
data/fax call .....	2-6-5
Duration of all	
data/fax calls .....	2-6-6
Clear all data/fax registers ..	2-6-7
Minibrowser .....	2-7
Last sent browser data .....	2-7-1
Last received browser data ..	2-7-2
All sent browser data .....	2-7-3
All received browser data ..	2-7-4
Last browser session .....	2-7-5
All browser sessions .....	2-7-6
Clear all browser logs .....	2-7-7

<b>PROFILES</b> .....	3
General .....	3-1
Select .....	3-1-1
Customise <sup>2</sup> .....	3-1-2
Ringing options .....	3-1-2-1
Ringing tone .....	3-1-2-2
Ringing volume .....	3-1-2-3
Vibrating alert .....	3-1-2-4

1 Menu option may vary, based on your service provider's requirements.

2 Customise options for Silent, Meeting, Outdoor, and Pager profiles are identical to those of the General profile

Message alert tone . . . . .	3-1-2-5	Welcome note . . . . .	4-2-3
Keypad tones . . . . .	3-1-2-6	Banner <sup>3</sup> . . . . .	4-2-4
Warning tones . . . . .	3-1-2-7	Help text activation . . . . .	4-2-5
Alert for . . . . .	3-1-2-8	Restore factory settings . . . . .	4-2-6
Profile name <sup>1</sup> . . . . .	3-1-2-9	Time settings . . . . .	4-3
Timed . . . . .	3-1-3	Clock . . . . .	4-3-1
Silent . . . . .	3-2	Show-Hide clock . . . . .	4-3-1-1
Meeting . . . . .	3-3	Set the time . . . . .	4-3-1-2
Outdoor . . . . .	3-4	Time format . . . . .	4-3-1-3
Pager . . . . .	3-5	Date . . . . .	4-3-2
<b>SETTINGS . . . . .</b>	<b>4</b>	Auto update of date . . . . .	
Call settings . . . . .	4-1	Et time . . . . .	4-3-3
Anykey answer . . . . .	4-1-1	On . . . . .	4-3-3-1
Automatic redial . . . . .	4-1-2	Confirm first . . . . .	4-3-3-2
Speed dialling . . . . .	4-1-3	Off . . . . .	4-3-3-3
Auto-update of service <sup>2</sup> . . . . .	4-1-4	Accessory settings <sup>4</sup> . . . . .	4-4
Minibrowser confirmation . . . . .	4-1-5	Handsfree . . . . .	4-4-1
None . . . . .	4-1-5-1	Default profile . . . . .	4-4-1-1
On connection . . . . .	4-1-5-2	Automatic answer . . . . .	4-4-1-2
On exit . . . . .	4-1-5-3	Lights . . . . .	4-4-1-3
Both . . . . .	4-1-5-4	Headset . . . . .	4-4-2
Calling card . . . . .	4-1-6	Default profile . . . . .	4-4-2-1
None . . . . .	4-1-6-1	Automatic answer . . . . .	4-4-2-2
Card A . . . . .	4-1-6-2	Loopset . . . . .	4-4-3
Card B . . . . .	4-1-6-3	Use loopset . . . . .	4-4-3-1
Card C . . . . .	4-1-6-4	Default profile . . . . .	4-4-3-2
Card D . . . . .	4-1-6-5	Automatic answer . . . . .	4-4-3-3
Data/fax calls . . . . .	4-1-7	Security settings . . . . .	4-5
Phone settings . . . . .	4-2	Call restrictions . . . . .	4-5-1
Language . . . . .	4-2-1	Restrict outgoing	
Touch tones . . . . .	4-2-2	calls . . . . .	4-5-1-1
Manual touch tones . . . . .	4-2-2-1	Restrict incoming	
Touch tone length . . . . .	4-2-2-2	calls . . . . .	4-5-1-2

---

1 General profile cannot be renamed.

2 Menu option may not be visible, based on your service provider's requirements.

3 This function can be used only if it is supported by your network operator or service provider. Please contact your service provider for more information.

4 Accessory settings does not appear in the menu until an accessory has been connected to the phone.

Access codes.....	4-5-2
Phone lock.....	4-5-2-1
Allowed number when phone locked.....	4-5-2-2
Change lock code ..	4-5-2-3
Change security code .....	4-5-2-4
Network services <sup>1</sup> .....	4-6
Voice privacy.....	4-6-1
Call diverting .....	4-6-2
Divert all calls.....	4-6-2-1
Divert if busy.....	4-6-2-2
Divert if not answered .....	4-6-2-3
Divert all data/fax calls.....	4-6-2-4
Cancel all call diverting.....	4-6-2-5
Call waiting .....	4-6-3
Send own caller ID when calling .....	4-6-4
Yes .....	4-6-4-1
No .....	4-6-4-2
Network feature setting .....	4-6-5
Own number selection.....	4-6-6
System <sup>2</sup> .....	4-7
Roaming options .....	4-7-1
Mode .....	4-7-2

<b>GAMES .....</b>	<b>5</b>
Select game .....	5-1
Snake II .....	5-1-1
Space impact II.....	5-1-2
Bumper .....	5-1-3
Settings .....	5-2
Game sounds .....	5-2-1
Game lights .....	5-2-2
Shakes.....	5-2-3

<b>VOICE.....</b>	<b>6</b>
Voice tags .....	6-1
Add voice tag <sup>3</sup> .....	6-1-1
Playback.....	6-1-1-1
Change.....	6-1-1-2
Delete.....	6-1-1-3
Voice commands.....	6-2
Profiles .....	6-2-1
General .....	6-2-1-1
Silent .....	6-2-1-2
Meeting.....	6-2-1-3
Outdoor .....	6-2-1-4
Pager .....	6-2-1-5
Voice mailbox.....	6-2-2
Call voice mailbox..	6-2-2-1
Recorder.....	6-2-3
Record .....	6-2-3-1
Call register .....	6-2-4
Missed calls.....	6-2-4-1
Received calls .....	6-2-4-2
Voice recorder .....	6-3
Record .....	6-3-1
Recordings list .....	6-3-2
Playback.....	6-3-2-1
Delete.....	6-3-2-2
Edit title.....	6-3-2-3
Alarm/Add alarm...	6-3-2-4

<b>MINIBROWSER.....</b>	<b>7</b>
-------------------------	----------

<b>ORGANISER .....</b>	<b>8</b>
Alarm clock .....	8-1
Calendar.....	8-2
View day.....	8-2-1
View.....	8-2-1-1
Make a note .....	8-2-1-2
Delete.....	8-2-1-3
Edit.....	8-2-1-4

1 Network services menu options are visible only after entering the correct services code.

2 Menu options may vary, depending on your service provider's requirements.

3 Voice command options for Profiles, Voice mailbox, and Call register are the same as Voice tag options.

Move .....	8-2-1-5
Repeat .....	8-2-1-6
Go to date .....	8-2-1-7
Send note .....	8-2-1-8
Copy .....	8-2-1-9
Settings .....	8-2-1-10
Make a note .....	8-2-2
Go to date .....	8-2-3
Settings .....	8-2-4
Set the date .....	8-2-4-1
Set the time .....	8-2-4-2
Date format .....	8-2-4-3
Date separator .....	8-2-4-4
Time format .....	8-2-4-5
Week starts .....	8-2-4-6
Auto delete .....	8-2-4-7
Calculator .....	8-3
Stopwatch .....	8-4
Continue .....	8-4-1
Show last time .....	8-4-2
Split timing .....	8-4-3
Lap timing .....	8-4-4
View times .....	8-4-5
Delete times .....	8-4-6
<b>APPLICATIONS .....</b>	<b>9</b>
<b>KEYGUARD .....</b>	<b>10</b>



**Important:** Some menu shortcuts may not be available. This list serves as a more detailed list of your phone menu structure, as well as a list of shortcuts.

## • PHONE BOOK MENU

From the Start screen, press **Contacts**. The following phone book options are available (see table on following page):

Menu	Menu (cont.)
<b>Search</b>	<b>Own number</b>
<b>Add new</b>	<b>Caller groups</b>
<b>Edit name</b>	Family <sup>a</sup>
<b>Delete</b>	Group name
One by one	Group ringing tone
Delete all	Group logo
<b>Add number</b>	On
<b>Settings</b>	Off
Scrolling view	View
Name list	Group members
Name+number	Remove name
Memory status	Add name
<b>Speed dialling</b>	VIP
View number	Friends
Change	Business
Delete	Other
<b>Voice tags</b>	
Playback	
Change	
Delete	

a. Menu options for VIP, Friends, Business, and Other are identical to Family options.

## 4 Phone setup


Now that you've had a chance to learn about some of the basic functions and features of your phone, you may want to explore a few options to improve the way you use your phone.

- **LEARN ABOUT THE HDB-4 AND HS-5 HEADSET**

Your sales package may include the HDB-4 or HS-5 headset. Each headset offers you convenient handsfree communications with the phone.

### Connect the headset

Before using the headset:

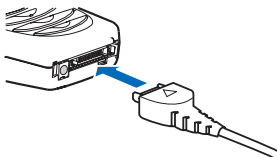

- 1 Plug the headset jack into the bottom of your phone.
- 2 Wrap the device around ear.


### Use the headset

You can make, answer, and end calls as usual with the headset connected. The headset fits over your ear and the microphone hangs at the side of your head. When using this headset you can speak at a normal volume.

You can use the headset's button to answer or end a call, as well as activate voice dialling or voice commands.

You can also use the **Send** key or the **End** key to answer and end calls.

### Adjust the volume

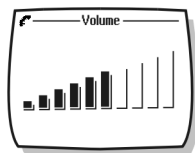


Change the phone ear piece volume, to make the caller's voice louder or softer. Adjustments to the volume can only be made during a call by pressing the up or down scroll key.

## 5 Text entry



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can enter letters, numbers, and special characters using the phone keypad when working with the phone book, calendar, text messaging, or while browsing the Internet. This section

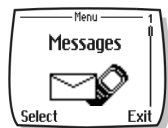


provides detailed instructions for the two text entry methods, that is, traditional text entry and predictive text input.

### • ENTER LETTERS AND NUMBERS

You have four modes available for entering information, based on the type of data you're entering (phone book, organiser notes or text messages):

Mode	The phone shows	Use for
ABC	<p> <b>ABC</b> - sentence case or title case (first letter capitalised)</p> <p> <b>ABC</b> - all uppercase letters</p> <p> <b>abc</b> - all lowercase letters</p>	<p>Entering contacts, numbers or addresses in phone book.</p> <p>Entering calendar notes.</p> <p>Write a text message.</p>
123	<b>123</b> - number entry.	Enter numbers.
Special characters	<b>?!@</b> - special characters list	Enter punctuation or special characters.
Predictive text	<b>ABC</b> - in combination with ABC mode indicators.	Write SMS text messages or calendar notes.

## • WRITE USING ABC AND 123 MODES

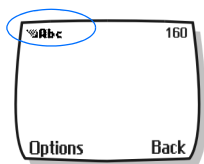

A status indicator in the upper left corner of your screen indicates the mode you are in whenever you are entering information into your phone book, calendar, or text messaging. Pressing # will change these modes.

### Enter letters

The following table contains a list of the characters displayed when entering text and numbers from your keypad:

Key	Characters	Key	Characters
1	., @?!-1	7	P Q R S 7
2	A B C 2	8	T U V 8
3	D E F 3	9	W X Y Z 9
4	G H I 4	0	Space, 0, return
5	J K L 5	*/+	Special characters menu
6	M N O 6	#	Changes letter case or mode.

Pressing a key repeatedly cycles you through all of that key's options. To enter a letter, press the appropriate key repeatedly until the desired letter appears. Continue this process until the word or name is completed.



**Note:** If the next letter in the word you are entering is on the same key, wait two to three seconds for the cursor to advance, then enter the new letter, or press 0 to advance the cursor.



**Important:** Phone language settings may affect the characters associated with the phone keypad.

For example: to enter the name "Albert":

Press 2	A
Press 5-5-5	l
Press 2-2	b
Press 3-3	e
Press 7-7-7	r
Press 8	t




**Note:** Default mode is sentence case **ABC** where the first letter of a name or sentence is automatically capitalised. Phone book default mode is title case—each word is capitalised.

### OTHER OPTIONS

- **Delete mistakes**—If you make a mistake, press **Clear** to delete one character to the left. Press and hold the **Clear** key to speed up the erasing process.
- **Enter a space**—When you have completed entering a word or name, press 0 to enter a space before the next word.



## • WRITE WITH PREDICTIVE TEXT

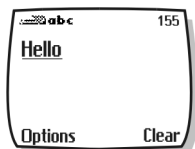

A quick way to enter text is using a highly compressed database (or dictionary) of common words that tries to anticipate the word as you enter it.

You can use predictive text input when you:

- Write or reply to a text message
- Create a note in the calendar
- Enter text while using the minibrowser

Watching predictive text guess a word can be confusing, so you should disregard the screen until all characters have been entered.

**Example:** To write "Nokia":

What you press	What you see
Press 6 - N	O
Press 6 - o	On
Press 5 - k	Onl
Press 4 - i	Onli
Press 2 - a	Nokia


## KEYS AND TOOLS FOR PREDICTIVE TEXT

Key	Description
2 - 9	Text entry. Press each key only once per letter.  Press and hold the key to enter the number.
*/+	If the underlined word is not the word you intended, press this key repeatedly until the word you want appears.  Press and hold this key to display a list of punctuation and special characters.
Spell	If the word entered is not recognised or if you have pressed */+ to search for a word, then <b>Spell</b> appears above the left selection key. Press <b>Spell</b> , enter the desired word, then press <b>Save</b> .
Clear	Press once to delete the character to the left of the cursor. Press and hold to delete characters faster.
0	Press once to accept the word and add a space. Press and hold to enter a zero.
#	Press and hold to enter <b>123</b> mode. Enter the desired number, then press and hold again to return to predictive text.

1	<p>Press once to add a period. Press 1 repeatedly to view other punctuation marks.</p> <p>Press once to add a punctuation mark that predictive text converts to an apostrophe.</p> <p>Press and hold to enter the numeral 1.</p>
#	<p>Press to switch between sentence case, lowercase, or uppercase modes or to switch to the above modes without predictive text.</p>

### Turn on predictive text input

You can turn on predictive text input from the **Options** menu while writing a text message. Once enabled, predictive text is available to all features that support it.

 in the upper left corner of the screen indicates predictive text is active.

### ENABLE PREDICTIVE TEXT (QUICK METHOD)

While creating a new text message or calendar note, press and hold the **Options** key for two seconds.

The message **T9 prediction on** is displayed and the English language dictionary is enabled (or the most recently selected dictionary).

### ENABLE PREDICTIVE TEXT (AND SELECT DICTIONARY)

While creating a new text message:

- 1 Press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to the dictionary you want (for example, **English**), then press **Select**.

The message **T9 prediction on** is displayed. The dictionary in the language is enabled.

### Turn off predictive text input

While creating a new text message, press and hold the **Options** key for two seconds.

- 1 Press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to **Prediction off**, then press **Select**.

### • TIPS FOR PREDICTIVE TEXT

#### Check a word

When you have finished writing a word and the word is correct as shown:

Press **0** to confirm the word, enter a space, and continue by writing the next word.

OR

Insert a punctuation mark, then press **0** for a new sentence.

If the displayed word is not correct:

- Press **\*/+** repeatedly until the word you want appears.
  - Press **0** to confirm your choice and continue.
- OR

- Press **Options**, scroll to **Matches**, then press **Select**. Scroll to the correct word and press **Use**.
- Press **0** to confirm the word and enter a space.



**Tip:** When you enter punctuation at the end of a sentence, the phone switches to sentence case. The first letter of the next word automatically appears in uppercase.

### ADD A WORD TO THE DICTIONARY

When the word you intended to write is not in the dictionary or when you are using **\*/+** to cycle through the available matches, the left selection key becomes **Spell**.

- 1 Select **Spell** and enter the word using standard text entry.
- 2 Press **Save** to insert the correct word and save it to the dictionary.

### INSERT NUMBERS AND SYMBOLS

The procedure for entering numbers with predictive text and standard text entry is the same. Please see "Enter numbers" on page 27.

The procedure for entering symbols with predictive text and standard text entry is the same. Please see "Enter punctuation or other characters" on page 27.

### WRITE COMPOUND WORDS


- 1 Write the first part of the compound word, then press the down scroll key to accept that part.
- 2 Write the last part of the compound word.
- 3 Press **0** to enter the word.

## 6 Phone book



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can save up to 250 entries (contacts and associated numbers) in your phone book. Phone memory can store multiple numbers for each name (home, business, mobile, etc.), as well as text information (postal address, e-mail address, or note).

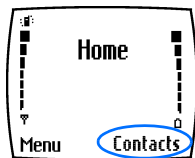

**Note:** The amount of detail stored for each entry may affect the total number of entries available. This feature shares memory space with other features. For more information, see "Memory use" on page 18.

### • SAVING CONTACTS AND NUMBERS

There are several ways to save contacts and numbers in your phone book. Instructions for the two most common ways are as follows:

#### SAVE A NUMBER AND NAME (USING PHONE BOOK MENU)

- 1 Press **Contacts**.
- 2 Scroll to **Add new** and press **Select**.

- 3 Enter the name and press **OK**.
- 4 Enter the area code (as necessary) and phone number, then press **OK**.

#### SAVE A NUMBER AND NAME (QUICK SAVE)

- 1 Enter the phone number using the keypad.
- 2 Press the left selection key two times (**Options** > **Save**).
- 3 Enter a name and press **OK**.
- 4 Press **Done** to return to the Start screen.



**Tip:** Press and hold the **Options** selection key for two seconds after entering the number to store the number only.

### • RECALL CONTACTS AND NUMBERS

There are several ways to recall phone book entries. Once you locate the desired name and number from the phone book, you can perform any of the following tasks: call the number, edit or add information to the selected phone book entry, or delete the entry.

From the Start screen, recall a phone book entry as follows:

- Press up or down scroll keys to display the list of phone book entries.
- Press repeatedly to scroll through the list of contacts.



**Tip:** When viewing the list of contacts, enter the first few letters of the desired entry. The phone book automatically jumps to that section of the phone book.

- Press **Contacts**, select **Search**, enter the first few letters of the entry, then press **Search**.

## • USE PHONE BOOK MENUS

The phone book has several menu options from which you can choose. These options appear when you press **Contacts**. Use the scroll keys to scroll to the option you want.

Option	Function
Search	Search for a specific phone book entry.
Add new	Add a new contact to your phone book.
Edit name	Edit the name of a phone book entry.
Delete	Delete phone book entries one by one or all at once.
Add number	Add a phone number to an existing contact.
Settings	Display a list of phone book options, including phone book memory status and scrolling view.
Speed dialling	Assign phone book entries to any of the 8 speed dialling locations.

Option	Function
Voice tags	Create and manage voice tags for voice dialling.
Own number	Displays your phone numbers.
Caller groups	Organise phone book entries into groups and categories and assign special ringing tones and graphics to the group.

## Display the phone book

Phone book information can be displayed in two different ways:

- **Name list**-Entries displayed as a list of names
- **Name+number**-Name and default number displayed

When viewing the phone book, use the up or down scroll keys to scroll through the phone book entries.

## Change phone book view

- 1 Press **Contacts**, scroll to **Settings**, then press **Select**.
- 2 Select **Scrolling view**, then scroll to the view option you want.
- 3 Press **Select** to confirm your choice.

## • EDIT A NAME OR NUMBER

You can edit a phone book entry at any time.

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, then press **Options**.

- 3 Scroll to **Edit name** or **Edit number** and press **Select**.
- 4 Edit the name or number, then press **OK**.

### • ADD A NUMBER TO A PHONE BOOK ENTRY

There are several ways to add additional numbers to an existing phone book entry (name). Phone memory book can store up to two numbers per name.

Once you choose to add a number, you can assign one of the following **number types** for the additional numbers: **General**, **Mobile**, **Home**, **Work**, or **Fax**.

### From the phone book

- 1 Press **Contacts**, scroll to **Add number**, then press **Select**.
- 2 Scroll to the entry you wish to modify, then press **Add number**.
- 3 Scroll to the type of number you are adding (**General**, **Mobile**, **Home**, **Work**, or **Fax**) then press **Select**.
- 4 Enter the number and press **OK**.

### From the Start screen

- 1 Enter the phone number using the keypad, then press **Options**.
- 2 Scroll to **Add to name**, then press **Select**.
- 3 Scroll to the desired phone book entry, then press **Add number**.
- 4 Scroll to the desired number type and press **Select**.

### By recalling the name

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, then select an entry and press **Options** again.
- 3 Scroll to **Add number**, then press **Select**.
- 4 Scroll to the desired number type and press **Select**.
- 5 Enter the number and press **OK**.

### Change the number type

Every time you create a new phone book entry, your phone automatically assigns the **General** number type to the new number. You can use a phone book entry **Options** menu to change the number type for any of the phone numbers. For example, change a number type from **Work** to **Home**.

- 1 Recall the name from the phone book.
- 2 Press **Details**, then scroll to highlight the number you want to modify.
- 3 Press **Options**, scroll to **Change type**, then press **Select**.
- 4 Scroll to the number type you want, then press **Select**.



**Important:** If you plan on using Nokia PC Suite to synchronise your phone book and your PC PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronise contacts correctly between phone and PC.

## Learn about default number

If a phone book entry (name) contains multiple numbers, the number entered when the phone book entry was created is designated as the **Default number**. When you highlight a phone book entry and press the **Send** key, your phone dials the default number.

Consider designating the number you dial most often (for phone book entries containing multiple numbers per name) as the default number.

## CHANGE DEFAULT NUMBER

Any phone number can be designated as the default number.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then scroll to the number you want to set as the default number.
- 3 Press **Options**, scroll to **Set as default**, then press **Select**.

## • DELETE STORED AND NUMBERS

You can delete a number from a phone book entry, delete all details of a contact, or delete the entire contents of your phone book. Once you delete information, it cannot be recovered.

## DELETE A NUMBER

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then scroll to the number you want to delete.
- 3 Press **Options**, scroll to **Delete number**, then press **Select**, then **OK**.

## DELETE ENTIRE PHONE BOOK ENTRY

- 1 Highlight the phone book entry you want to delete, then press **Details**.
- 2 Press **Options**. Scroll to **Delete**, press **Select**.
- 3 Press **OK** to delete the phone book entry (including all details).

## DELETE THE ENTIRE PHONE BOOK

- 1 Press **Contacts**, scroll to **Delete**, then press **Select**.
- 2 Scroll to **Delete all** and press **Select**.
- 3 When you see the message **Are you sure?**, press **OK**.
- 4 Enter your security code, then press **OK**.

For more information on the security code, see "Security code" on page 69.

## • ADD OTHER INFORMATION TO A PHONE BOOK ENTRY

Once you have created a contact, you can add an e-mail address, a mailing address, or a note to that contact.



**Note:** Text information can only be added to existing contacts. For example, you cannot create a new contact with only an e-mail address.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then press **Options** again.
- 3 Scroll to **Add detail**, then press **Select**.

- 4 Scroll to the type of information you would like to add (**E-mail**, **Street addr.**, etc.), then press **Select**.
- 5 Enter the information, then press **OK**.
- 6 Press the **End** key to return to the Start screen.

## • USE CALLER GROUPS

Your phone allows you to group phone book entries with similar attributes into *caller groups*. The five default caller groups are **Family**, **VIP**, **Friends**, **Business**, and **Other**. Each group has two attributes which can be defined by the user: *Group Name* and *Group Tone*.

### Assign phone number to a caller group

- 1 Recall the desired phone book entry, then press **Details**.
- 2 Scroll to the desired phone number, then press **Options**.
- 3 Scroll to **Caller groups**, then press **Select**.
- 4 Scroll to the desired caller group (for example, **Family**), then press **Select**.

### Edit caller group options

You can edit various aspects of a caller group.

## SETTING A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Contacts**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **caller groups** and press **Select**.

- 4 Scroll to one of the following functions and press **Select**.
  - **Rename group**—Enter the new name for the caller group and press **OK**.
  - **Group ringing tone**—Scroll to the desired tone and press **OK**. Default is the tone selected for the currently selected profile.
  - **Group logo**—Choose to turn the group logo on or off for the selected caller group.
  - **Group members**—Press **Select** to view group members. To add or remove a member, press **Options**, then select **Add name** or **Remove name**.



**Note:** If you selected **Send graphic**, enter the recipient's phone number or recall it from phone book and press **OK**. Check with your service provider for availability of this feature.

## • CHECK MEMORY STATUS

You can check the percentage of phone memory that is dedicated to the phone book, that is in use, and the percentage that remains available.


- 1 Press **Contacts**.
- 2 Scroll to **Settings**, then press **Select**.
- 3 Scroll to **Memory status** and press **Select**.

## 7 Call register



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Your phone keeps a register (record) of call-related information including phone numbers and call times. The Call register keeps track of:

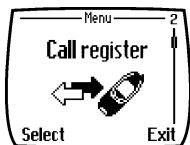

- Missed calls
- Received calls
- Dialed numbers
- Time spent on calls
- Time spent on digital data, fax or minibrowser calls
- Amount of data transferred during data, fax or minibrowser calls

### REQUIREMENTS

Before your phone can register missed or received calls properly:

- 1 You must have a subscription to caller ID service.
- 2 Your phone must be turned on and in a digital service area.

- 3 The caller must not have caller ID blocked.
- 4 Your phone time and date must be set.



**Note:** If the incoming call has caller ID blocked, the number cannot be recorded in the Call register. If you try to view the Call register, the message **No new numbers** is displayed.

### • CHECK MISSED OR RECEIVED CALLS, OR DIALLED NUMBERS

Your phone records information about the 60 most recently missed, received, and dialed numbers (20 entries for each type of call). To view Call register entries:

- 1 Press **Menu 2 (Call register)**, then scroll to the desired call type (**Missed calls**, **Received calls**, or **Dialed numbers**), then press **Select**.
- 2 Use up and down scroll keys to scroll to the desired Call register entry type (missed, received, or dialed numbers), then press **Options**.



**Note:** If the phone number recorded by the call register matches a number stored in your phone book, the name of the phone book entry is displayed.

## View call register options

The table below contains a list of options available for all call register entries.

Option	Description
Time of call	Shows the time when the call was missed, received or dialled.
Send message	Allows you to write and send a text message to numbers listed in the call register.
View number	Displays the phone number when call register entry matches a number found in your phone book.
Edit number	Allows you to use the number shown on the screen.
Save	Saves the number in your phone book.
Delete	Removes the number from the call register.
Call	Redials the displayed number.

## Use call register shortcuts

### MISSED CALLS

When you miss a call(s), the message **Missed calls** appears on your phone's screen, along with the number of calls missed.



**Important:** You are notified of missed calls only if your phone was turned on and you are in a digital service area.



**Note:** If you chose the **Divert if not answered** option in **Call Diverting**, your phone treats these diverted calls as missed calls.

### DIALLED NUMBERS

You can view the list of dialled numbers without having to access the **Call register** menu. From the **Start** screen:

- 1 Press the **Send** key. The most recently dialled call is displayed.
- 2 Use up scroll or down scroll key to view the other call register entries.
- 3 Press the **Send** key again to redial the number displayed, or press **Options** to work with the selected call register entry.



**Tip:** To redial the last number, press the **Send** key twice.

### • DELETE RECENT CALL LISTS

Your phone's **Call register** uses **call lists** to store numbers of incoming, outgoing, and missed calls. Use the **Delete call registers** menu to delete the log of phone numbers dialled, received, or missed.

The **All** option clears all numbers in all lists, whereas the other options clear only the numbers associated with that list.



**Caution!** This operation cannot be undone. Clearing the **Dialled numbers** call list clears the list of dialled numbers accessed by pressing the **Send** key.

- 1 Press Menu 2-4 (Call register > Delete call registers).
- 2 Use the up or down scroll keys to highlight the desired option: All, Missed, Dialled or Received.
- 3 Press Select to confirm your selection.

## • USE CALL TIMERS

Your phone uses **call timers** to track the amount of time you spend on each call. You can review phone use by checking the call timers.



**Important:** The actual time invoiced for calls by your service provider may vary, depending upon network features, billing round-off, and so forth.

## ACCESS THE VARIOUS CALL TIMERS:

- 1 Press Menu 2-5 (Call register > Call timers).
- 2 Use up or down scroll keys to scroll through the following options:

Option	Description
<b>Duration of last call</b>	Displays elapsed time of the last call you made.
<b>Duration of dialled calls</b>	Displays total time for all outgoing calls.

Option	Description
<b>Duration of received calls</b>	Displays total time for all incoming calls.
<b>Duration of all calls</b>	Displays sum total for all incoming and outgoing calls.
<b>Life timer</b>	Shows the time used for all calls for the life of your phone. This option cannot be reset.
<b>Clear timers</b>	Clears (deletes) all call timers except Life timer.

## • TURN ON A CURRENT CALL TIMER

Your phone can display a call timer showing elapsed time of the current call. When the call is completed, the timer displays the call length.

- 1 Press Menu 2-5-1-1 (Call register > Call timers > Duration of last call > Show call time on display).
- 2 Scroll to On and press OK.



**Tip:** After a call has ended, press any key on your phone to clear the current call time from the screen.

## • CLEAR CALL TIMERS

- 1 Press Menu 2-5-6 (Call register > Call timers > Clear timers).
- 2 The Security code field appears.
- 3 Enter your security code and press OK.



**Caution!** This action cannot be undone.



**Tip:** If using call timers to register the amount of time spent on calls, you may want to record the information from the call timers before you clear them.

## • DATA TIMERS (DATA/FAX AND MINIBROWSER)

The call register records and displays the length of digital data/fax calls, as well as meters the amount of data transferred during data/fax calls. The call register also records this same information when you use the Minibrowser to access the wireless Internet.

### Access data-related call timer

- For data/fax call timers, press **Menu 2-6 (Call register > Data/fax calls)**
- For minibrowser call timers, press **Menu 2-7 (Call register > Minibrowser calls)**

## Data-related call timer options

The following call timer options are available for data/fax and browser calls:

- **Last sent (or received) data/fax-** amount of data displayed in kilobytes (kB)
- **All sent (or received) data/fax-** amount of data displayed in kilobytes
- **Duration of last data/fax call-** length of time spent on last data/fax call.
- **Duration of all data/fax calls-** running total of all calls.
- **Clear all data/fax registers-** clears all timers and data/fax registers.

## Minibrowser timer options


The available options for the minibrowser call timers are similar to those listed above for data/fax calls.

## 8 Voice mailbox



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Voice mail is a feature that enables those who call you to leave a voice message in the event you are unable to answer your phone. When using your phone in conjunction with your service provider's voice mail system, you can retrieve your messages at any time.

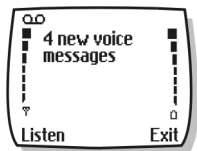

### • STORE YOUR VOICE MAILBOX NUMBER

Before you can retrieve any voice messages, you need to store your voice mailbox number in your phone:

- 1 Press Menu 01-2-3 (Messages > Voice messages > Voice mailbox number).
- 2 Enter your voice mailbox phone number, then press OK.

Your voice mailbox number can be up to 32 digits long.



**Note:** If your phone number changes, you may need to re-enter your voice mailbox number.



**Tip:** You can store your voice mailbox password and/or PIN number as a part of your voice mailbox number. For more information, see "Save touch tones as a phone book entry" on page 66.

### • SET GREETINGS

Voice greetings may vary in different wireless systems. If you need information about how to record your greeting, contact your service provider.

### • LISTEN TO YOUR VOICE MESSAGES



**Note:** There are various ways to retrieve your messages, depending on your service provider. Call your service provider if you have any questions.

### LISTEN TO MESSAGES WHEN NOTIFIED

If your phone plays an alert tone and **New voice message** is displayed, press **Listen** and follow the prompts. If you want to rather listen to your messages later, press **Exit**.

## **LISTEN TO MESSAGES LATER**

From the Start screen, press and hold 1 for two seconds.

OR

Press Menu 01-2-1 (Messages > Voice messages > Listen to voice messages).


Calling voice mailbox appears on the screen. Follow the audio prompts from the voice mail system to review your messages.

## 9 Text messages



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can use the **Messages** menu (**Menu 1**) and Short Message Service (SMS) to read, write, and send text messages to another phone in your network. You may also be able to use the minibrowser e-mail feature to send text messages to phones in other networks.

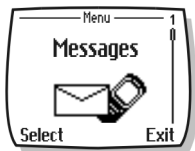

**Important:** When sending SMS messages, your phone may display **Message sent** (where service is available). This is an indication that the message has been sent by your phone to the SMS network. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.



**Note:** This function can be used only if it is supported by your network operator or service provider. Only devices that offer compatible e-mail features can receive and display messages. It may require a separate subscription.


### • WRITE A TEXT MESSAGE

You can use the **Messages** menu to create and send text messages to another mobile phone in your network, or to another mobile phone in another network, or to an e-mail recipient. You can also save a draft of your message in the **Outbox** folder for later use.

### Create and send a text message



**Important:** Use this method when sending a message to recipients in the same wireless network. If the recipient has a different service provider, you may need to send the message as an e-mail (see "Create and send an e-mail message" on page 45).

- 1 From the Start screen, press **Menu**, then press **Select**.
  - 2 Select **Text messages**, then select **Create message**.
  - 3 Select either **Text** (up to 160 characters) or **Numeric page** (message consists of phone number only).
-  **Note:** The ability to send a numerical page may be dependent on your wireless network. Please contact your service provider for more information on text messaging in your area.
- 4 Scroll to **Add number**, then press **Select**.

- 5 Enter the phone number of the recipient, then press **OK**.  
OR  
Press **Search**, highlight the desired number stored in your phone book, then press **Select**.
- 6 Press **Options**, scroll to **Edit message**, then press **Select**.
- 7 Enter your message.



**Tip:** Since the network limits the number of characters in a message, a character counter appears in the upper right-hand corner of your phone display. This phone supports 160 character SMS messages.

- 8 To send the message, press **Options**, then select **Send**.

## USE OTHER OPTIONS

You may use the following as a shortcut for sending a new text message:

- 1 Enter the recipient's phone number, then press **Options**.
- 2 Scroll to **Send message**, then press **Select**.  
  
Continue the creation process as described.

## View message options

The table below lists several options available while creating a text message. To view these options, press **Options** at the text entry screen.

Option	Description
Send	Sends the current text message to the recipients
List recipients	Adds or removes recipients to the message
Settings	Marks a message as urgent, to request a delivery receipt or to specify a callback number
Save message	Saves the current message to the desired folder
Clear text	Clears the screen of all text and characters
Exit editor	Returns to the Messages menu
Insert contact	Inserts a phone book entry into the text message
Insert number	Inserts a number or a phone book number into the text message
Use template	Adds text from a template to the current message
Insert picture	Inserts a picture into your message. Once a picture has been added, you can change or delete it from the message.
Insert word, Edit word	Inserts a word not found in the dictionary or edit a word then add it to the dictionary

Option	Description
Insert symbol	Enters punctuation or special characters into the current text message.
Predictive text	Enables or disables predictive text entry. Also used to select language of dictionary used
Matches	Displays a list of other options for the word currently displayed by predictive text

## • USE MESSAGE TEMPLATES

Templates are short, prewritten messages which can be recalled and inserted into new text messages when you're short on time.

- 1 Create a new text message as described in steps 1–6 in the section, "Create and send a text message" on page 42.
- 2 Instead of entering your own message, press **Options**, scroll to **Use template**, then press **Select**.
- 3 Scroll to one of the available templates:

1. Please call
2. I'm in a meeting. Call me after
3. I'm late and will be there in
4. Where are you? Can we talk?
5. I'm busy. I'll call you later
6. Let's meet today

7. Thanks for your help
8. Congratulations
9. Sorry, I can't help you on this
10. I will be arriving at

- 4 Press **Select** to enter the text into your new message.
- 5 Complete the process described earlier to send your message.

You can also create a new message while browsing the Templates folder.

- 1 Press **Menu 01–1–5 (Messages > Text messages > Templates)**.
- 2 Scroll to the desired template, then press **Select**.
- 3 Press **Options**, then select **Edit** to modify the message or **Use number** to select a recipient.
- 4 From the message options list, select **Send** to send your message.

## • LEARN ABOUT E-MAIL TEXT MESSAGES

You can also use the Messages menu to write and send text messages to a person's Internet or corporate e-mail account or to phones in other networks.



**Important:** The message can contain up to 160 characters. However, the length of your message is affected by the length of the e-mail address to which you are sending the message. A lengthy e-mail address will lessen the amount of available characters you can place in the message.

## Create and send an e-mail message

Use the same procedure for creating and sending e-mail messages as found in the section, "Write a text message" on page 42. However, select **Add e-mail**, then enter the e-mail address (or press **Search** and recall an e-mail address stored in your phone book).

## Messages to phones in other networks

Most service providers now have the ability to route e-mail messages to your phone (appearing as text messages). The following are just a few examples of how your phone e-mail address may appear:

2135551234@myserviceprovider.com  
 username@serviceprovider.com  
 2135551234@mobile.myserviceprovider.com

It can be difficult to send messages to phones outside your service provider's network using traditional text messaging. However, it is possible to send a text message as an e-mail to phones outside your service provider's network (provided the recipient's phone is capable of receiving e-mail text messages).

Follow the instructions, "Write a text message" on page 42 but select **Add e-mail**. Enter the e-mail address associated with the recipient's phone number (or press **Search** and recall the e-mail address stored in your phone book).



**Important:** This feature may require subscription to special services. Please check with your service provider for more information and for the e-mail address assigned to your phone.

## • RECEIVE TEXT MESSAGES

When you receive a text message, the



indicator and the text: **(#)**

**Message(s) received** appears on the screen (where # is the number of new messages received).

- 1 Press **Show** to read the message or **Exit** to view it later.
- 2 While reading the message, press **Options** to view the list of message options, then press **Select** to choose the desired option.





**Note:** If multiple messages have been received, then **Show** appears on the phone screen and must be selected in order to view the list of received messages. You must scroll to the message on the list which you want to read and press **Select**.

## READ MESSAGES LATER

- 1 Press **Menu**, select the **Messages** menu, then **Text messages**.
- 2 Scroll to **Inbox**, then press **Select**.
- 3 Scroll to the desired message, then press **Select** to read the message.



**Note:** The  icon in front of the message header indicates the message has not been read.  in front of the message title indicates you have already viewed the message.

## • RESPOND TO A TEXT MESSAGE

You have several options when reading a text message. Pressing **Options** displays the following list of choices:

Option	Description
Delete	Deletes the current message.
Reply	Reply to the current message.
Use number	Captures phone number in the message (or from the message sender) with the option to <b>Save</b> (as new phone book entry), <b>Add to name</b> , <b>Send message</b> , or <b>Call</b>
Forward	Forwards current message to another user
Save message	Saves current message to Archive folder
Rename	Renames existing message title as seen in the message list
Edit	Edits message before saving or forwarding

Option	Description
Use Web link	Captures the URL in the message and allows you to go directly to that site (through the minibrowser) or to save it as a bookmark
Save address	Captures an e-mail address in the message (or the sender of an e-mail text message)



**Note:** Some of these options may not be visible. For example, **Use Web link** appears only when a URL is present in an SMS message.

## • REPLY TO A MESSAGE

You can reply to a text message either by a traditional text message or by an e-mail message. The origin of the message or the sender's wireless network affects how you reply to the incoming message.

### Reply using SMS

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Reply** and press **Select**.
- 3 Scroll to one of the following reply types and press **Select**:
  - **Empty screen**—gives you an empty text buffer
  - **Original text**—includes original message in the reply message
  - **Template**—allows you to select a template from the **Templates** folder

- Standard answer templates (including: Yes; No; OK; Thank you; Congrats; Happy birthday; I love you too; Hugs and kisses; Sorry; Sorry, I'm late.)

- 4 After you write your reply, press **Options**, then select **Send**.

A copy of all sent messages (up to the memory limit) remain in your Outbox, unless you turn this feature off in **Message settings**.

Press **Back** to return to the Messages menu, or press the **End** key to return to the Start screen.

## Reply to an e-mail message

Use the methods described above for replying to SMS messages sent from an e-mail address.



**Note:** If the incoming e-mail message is improperly formatted, you may be required to re-enter the e-mail address. Press **Options**, then select **List recipients**, then select **Add e-mail** to re-enter the e-mail address.

## • DELETE MESSAGES

You have several options for erasing individual messages or erasing the contents of an entire folder. You may need to delete older or unwanted messages in order to free up phone memory for new messages.

## Learn about delete options

The **Messages** menu has an option that allows you to delete the entire contents of your folders as described below.

- **All read**-deletes all read messages from all folders (unread messages in **Inbox** remain intact).
- **Inbox**-deletes read messages in this folder (unread messages remain intact).
- **Outbox**-deletes all messages in this folder.
- **Archive**-deletes all messages in this folder.

## Erase messages in the message folders

- 1 At the Start screen, press **Menu 01-1-8 (Messages > Text messages > Delete messages)**.
- 2 Highlight the folder whose contents you want deleted and press **OK**.
- 3 Enter your security code (if prompted) and press **OK**.

## Erasing individual text messages

- 1 From the **Inbox**, **Outbox**, or **Archive** folder, highlight the message you wish to delete.
- 2 Press **Options**, scroll to **Delete**, and press **Select**.
- 3 Press **OK** to confirm your choice.

### Forward a message

You can forward any incoming text messages, whether they were sent as traditional text messages or as e-mail messages. You can forward a message to a single user or to a list of users.



**Tip:** When forwarding a message to multiple users, your recipient list can contain both phone numbers and e-mail addresses.

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Select **Add e-mail** or **Add number**, then address the message.

For multiple recipients, press **Options** again, then add additional e-mail addresses or phone numbers.

- 4 Press **Options**, scroll to **Send**, then press **OK**.

If you want to edit the forwarded message, select **Edit message** from the options menu prior to sending the message.

### View message settings

You can assign several settings to the text messages (new messages, replies, or forwarded messages). The following settings are available from the message **Options** menu:

- **Urgent** sends the message marked *urgent* and appears in recipient's **Inbox** with higher priority than other messages.
- **Deliv. note** lets you know when your message has been delivered.

- **Callback no.** includes your number (or a number that you enter or recall from the phone book) in the body of the message.


### ASSIGN MESSAGE OPTIONS

- 1 After entering text, press **Options**.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to the desired setting, then press **Mark**.
- 4 Press **Done**, then press **Yes** to save changes to your message.
- 5 Scroll to **Send**, then press **Select** (or select a different menu option).

### Learn about message memory

Messages are stored in the following locations:

- **Inbox** stores new messages and read messages.
- **Outbox** saves copies of all sent messages or messages waiting to be sent (in the event the network is temporarily unavailable).
- **Archive** used to file read messages and sent messages for long term storage.
- **My folders** used to store user-created personalised folders where messages can be saved.

A blinking  icon indicates the text message memory is full. Before you can receive, save, or send any new messages, you must delete older messages from your **Inbox**, **Outbox**, **Archive** or the **My folders** folder.

## • MESSAGE SETTINGS

Specify several settings that affect the overall way your phone handles text messaging. Use **Menu 01-1-9 (Messages > Text messages > Message settings)** to configure the following:

- **Send settings**—used to specify normal or urgent priority, request delivery note, or specify that a callback number be sent automatically.
- **Other settings**—used to specify the font size in which messages will be displayed. Also used to configure how your phone automatically handles incoming messages when your Inbox or Outbox are full, and saves copies of sent messages automatically.

## • ORGANISE TEXT MESSAGES USING FOLDERS

You have several options for storing and organising your text messages. The following pages explain further about the various folder options.

- **Inbox**—Text messages you receive remain stored in your **Inbox** until you delete them or move them to the **Archive** folder.
- **Outbox**—Messages that cannot be sent immediately can be saved so you can come back to it later. Your phone stores the message in the **Outbox**.

If you try to send a text message and the network is unavailable, the outgoing message will be saved in the **Outbox**.

## WORK WITH MESSAGES SAVED IN THE OUTBOX

- 1 From the **Text messages** menu, scroll to **Outbox** and press **Select**.
- 2 Scroll to the desired message, then press **Select**.
- 3 Press **Options**, then press **Resend** (or **Edit** if the message was a saved draft).

From this point, you have several options, including:

- Select **Enter text** and continue working with the message.
- Scroll to **Add e-mail** or **Add number** to add additional recipients.
- Scroll to **Send**, then press **Select** to send the message.




**Note:** If a message is saved from the **Outbox** to another folder, then the options are the same as if the message were still in the **Outbox**.

## 10 Personalisation



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

### • LEARN ABOUT PROFILES

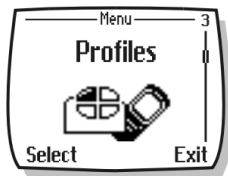

A **profile** refers to a group of settings you can use to customise the way your phone works. You can use the existing profiles or you can personalise a profile to suit your own preferences. Some of the items you can customise are:

- Ringing options and vibrating alert
- Ringing tones and ringing volume
- Keypad and message alert tones
- Warning tones

Your phone comes with five profiles: **General** (default setting), **Silent**, **Meeting**, **Outdoor**, and **Pager**.

### • SELECT A DIFFERENT PROFILE


#### QUICK METHOD

- 1 Press the power key **⏻** briefly.
- 2 Use the up and down scroll keys to scroll to the profile you want to use.
- 3 Press **Select** to select a profile.

#### USE PROFILES MENU

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the profile you want to use, then press **Select**.
- 3 Press **Select** again to choose the highlighted profile.

### • PERSONALISE A PROFILE

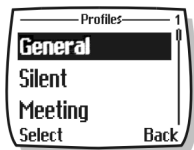

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the profile you want to customise, then press **Select**.
- 3 Scroll to **Personalise**, then press **Select**.

The following sections describe each of the options you can customise.

#### Set ringing options

You can choose the way your phone rings to notify you of incoming calls. This setting does not affect text message alert tones.

- 1 From a profile **Personalise** menu, scroll to **Incoming call alert**, then press **Select**.
- 2 Scroll to one of the ringing options described below, then press **Select**.

Option	Description
Ringing	The phone rings normally.
Ascending	Ringing volume begins softly, then increases in volume if the phone is not answered.
Ring once	The phone rings once to indicate an incoming call.
Beep once	The phone beeps once to indicate an incoming call.
Off	The phone makes no sound.

## Set a ringing tone

A **ringing tone** is the melody your phone plays when you receive a call. You can set the ringing tone to a specific sound effect, or to a melody to personalise how the phone rings. Your phone has 35 tones pre-loaded and you can store up to 10 more downloaded ringing tones. For more information, see "Download a ringing tone" on page 53.



**Important:** The Silent or Beep once ringing option disables any melody you may chose. To hear a ringing tone while editing a profile, make sure one of the other ringing options is selected.

- 1 From a profile **Personalise** menu, scroll to **Ringing tone** and press **Select**.
- 2 Scroll through the options and listen. When you hear the ringing tone you want to use, press **Select**.

## Set ringing volume

You can set the default ringing volume for incoming voice calls and message alert tones. There are five different levels of volume.

- 1 From a profile **Personalise** menu, scroll to **Ringing volume** and press **Select**.
- 2 Scroll to an option and listen. When you hear the ringing volume you want to use, press **Select**.

## Set a vibrating alert

Your phone has the ability to vibrate, indicating an incoming call (in addition to playing a ringing tone). Enabling a vibrating alert while selecting the Silent ringing option causes your phone to vibrate only on incoming calls.

- 1 From the selected profile's **Personalise** menu, scroll to **Vibrating alert** and press **Select**.
- 2 Scroll to **On** and press **Select**.



**Important:** The phone does not vibrate when it is connected to or placed in any charging device.

## Set message alert tone

Several message alert tone options are available to indicate incoming text messages.

- 1 From the selected profile **Personalise** menu, scroll to **Message alert tone** and press **Select**.
- 2 Scroll through the options and listen. When you hear the message alert tone you want to use, press **Select**.

### Set keypad tones

Use the **Keypad tones** option to set the volume of the tones heard when pressing your phone keys.

- 1 From the selected profile's **Personalise** menu, scroll to **Keypad tones** and press **Select**.
- 2 Scroll to one of the levels and press **Select**.



**Important:** If you choose **Off**, no keypad tones are heard. The **Silent** profile automatically turns keypad tones off.

### Set warning tones

You can customise the way your phone plays warning tones. **Warning tones** include the tones played when there is an error, during confirmations, when a battery is low, and when you need to recharge the battery.

- 1 From the selected profile's **Personalise** menu, scroll to **Warning tones** and press **Select**.
- 2 Scroll to **On** and press **Select**.

If you do not want to use warning tones, you can turn them off by scrolling to **Off** and pressing **Select**.

### • RENAME PROFILES

You can rename any of the profiles except **General**. You may want to use your own name for one of the profiles. When you select this profile, your name appears on the Start screen.

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the desired profile and press **Select**.

- 3 Select **Personalise**, scroll to **Profile name**, and press **Select**.

- 4 Enter the new name and press **OK**.



**Note:** You cannot rename the **General** profile.

### Select and customise an accessory profile



**Note:** You must have an accessory (such as a loopset) attached to your phone prior to selecting the **Accessory settings** menu.

To select and customise profiles for use with the headset, handsfree device (carkit), or loopset:

- 1 Press **Menu 4-4 (Settings > Accessory settings)**.
- 2 Scroll to **Headset** or **Loopset** and press **Select**.

### IF YOU SELECTED HEADSET

The **Default** profile and **Automatic answer** options are your available choice.

- **Default profile**—Choose the profile you wish to be automatically activated when your phone is connected to a carkit.
- **Automatic answer**—Calls are answered automatically after one ring when connected to a car kit. Scroll to **On** or **Off** and press **Select**.
- **Lights**—Choose to keep the phone lights always on, or to shut off automatically after several seconds. Scroll to **On** or **Automatic** and press **Select**.

## IF YOU SELECTED LOOPSET

The Default profile and Automatic answer options are available. Please refer to see "If you selected Headset" on page 52, for a description of these options. In addition, the following option is available:

**Use loopset**—Enables use of the LPS-4 mobile inductive loopset. Scroll to **Yes** or **No** and press **Select**.

### • DOWNLOAD A RINGING TONE

Your phone has 35 predefined ringing tones and can store up to 10 new ringing tones (sent from an Internet Web site as an SMS or created or downloaded using Nokia PC Suite).

### Play, save, or delete a ringing tone

Once your phone receives a new ringing tone, the phone displays the message **Ringing tone received**.

- 1 Press **Options**, then choose **Playback, Save, or Delete**.
- 2 Press **OK**.

If you choose to save the new ringing tone, it becomes part of the ringing tone list available to you when you customise a profile (see "Personalise a profile" on page 50).

### Use PC Composer

You can use Nokia PC Suite PC Composer to create new ringing tones and send them to your phone using the DKU-5 cable (available as an optional

accessory). For more information, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide*.

## Receive ringing tones from Minibrowser

You may also receive ringing tones from the Internet while in a minibrowser session. To save your tone, follow the on-screen prompts. Please see "Minibrowser" on page 85, for more information and availability of this service.

### • SET THE DISPLAY LANGUAGE

You can set your phone to display information in different languages.

Your possible choices are Spanish, Brazilian Portuguese, and English.



**Note:** Some languages may vary due to regional differences. All of these languages may not be available in your phone.

- 1 Press **Menu 4-2-1 (Settings > Phone settings > Language)**.
- 2 Scroll to the language you want to use and press **Select**.

### • SET THE CLOCK

Your phone contains a real-time clock that can be set two different ways: the clock can use the time and date information provided by the wireless system, or it can be set manually.

The clock will display the current time and date on the Start screen. You can also choose to hide the clock if you prefer. Please see "Display or hide the clock" on page 54.



**Note:** Your phone also has an alarm clock. See "Use the alarm clock" on page 75, for more information.

By default, the clock gets its information from the wireless network. If you wish to override the network clock, do the following:

### Manually setting the clock

- 1 Press Menu 4-3-1 (Settings > Time settings > Clock).
- 2 Scroll to Set the time, then press Select.
- 3 Enter the current time, then press OK.  
For example, to enter 7:30, enter 0730.
- 4 Scroll to am or pm, then press Select.

### Selecting time format

- 1 Press Menu 4-3-1 (Settings > Time settings > Clock).
- 2 Scroll to Time format, then press Select.
- 3 Scroll to either 24-hour or am/pm, then press Select.

### Allow the network to set the clock

- 1 Press Menu 4-3-1 (Settings > Time settings > Auto update of date and time).

- 2 Scroll to On (or Confirm first), then press Select.




**Important:** If you use the Auto update of date and time option while outside your digital network, you may be prompted to enter your own time manually (see "Manually setting the clock" on page 54). Network time will replace the time and date you set once you re-enter your digital network.



**Note:** If your battery has been removed or has drained outside the digital network, you may be prompted to enter your own time (once the battery is replaced/recharged, and you are still outside of the digital network).

### Display or hide the clock

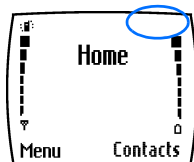

- 1 Press Menu 4-3-1 (Settings > Time settings > Clock).

Depending on the current settings, either Hide clock or Show clock is highlighted.

- 2 Press Select for Hide clock or Show clock.

## • CUSTOMISE THE WELCOME SCREEN



You can set your phone to display a brief message each time you switch on your phone. The message can include your name or a reminder and can be up to 44 characters long.

### Create a startup message

- 1 Press Menu 4-2-3 (Settings > Phone settings > Welcome note).
- 2 Enter the text of the startup message (using traditional text entry).
- 3 Press Options, then select Save.

## • LEARN ABOUT VOICE COMMANDS

The voice command feature provides handsfree operation of certain menu options and commands. Just like voice dialling, you must create a voice "tag" for the commands you want to use (please read "Assign a voice tag to a phone number" on page 62 for detailed information on voice tags).

The following table lists menu options for use with voice commands:


Option	Description
Profiles	Switch between the available profiles (General, Silent, Meeting, Outdoor, and Pager).
Voice mailbox	Access your voice messages.
Recorder	Start recording a memo.
Call register	Access the Call register menu.

### Create a voice tag for a menu option



**Important:** Please see "Important notes about voice tags" on page 62 for more information on creating voice tags.

- 1 Press Menu 6-2 (Voice > Voice commands).
- 2 Scroll to the menu option you wish to tag, then press Select.
- 3 Press Options, then select Add command.
- 4 Press Start.
- 5 After the tone sounds, speak the voice tag clearly into the microphone.

The phone replays, then saves the recorded tag. The  icon appears next to commands which have voice tags assigned.

## Use a voice command



**Warning!** Do not use voice command in an emergency situation. In emergencies, stress causes changes in your voice, which may keep the phone from recognising your voice command.

- 1 At the Start screen, press and hold **Contacts** for one to two seconds. A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.

The only other option for initiating a voice command is to press the headset button momentarily at the Start screen. The alert tones plays through the headset. Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

## Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), rerecord a voice tag, or delete an existing tag.

- 1 Press **Menu 6-2 (Voice > Voice commands)** then press **Select**.
- 2 Scroll to the menu option you wish to tag, then press **Select**.
- 3 Press **Options**, scroll to either **Playback**, **Change**, or **Delete**, and press **Select**.
- 4 If you chose **Change**, press **Start** to record again.

The new tag that is recorded replaces the old information.

# 11 Advanced features



**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



**Note:** Some in-call options are network services features. Please contact your service provider for information and availability.

This chapter describes advanced calling features such as call waiting, and the use of calling cards for calls. Not all the features described here are available in all wireless network systems.

## • VIEW IN-CALL OPTIONS

Your phone allows you to use a number of features during a call. These features are known as **in-call options**.

You cannot use all these options at all times. This section tells you when you can use a certain option.

- 1 To access an option during a call, press **Options**.
- 2 Scroll to one of the following options, then press **Select**:

Option	Description
Mute/End mute	Disables or enables the microphone. If mute has already been selected, <b>End mute</b> is displayed.  These options affect any accessories connected to the phone (headset, car kit).

Option	Description
New call	Initiates a new call while in a call (call waiting and three-way calling).
End all calls	Ends all active calls (call waiting or three-way calling).
Touch tones	Manually enters a touch tone string (series of tones) or search for a string in your phone.
Contacts	Views the phone book. Press <b>Exit</b> to close the phone book.
Menu	Display the main menu.

## • USE CALL DIVERT

When you use **Call divert**, your network redirects incoming calls to another phone number. Using this feature helps to prevent missing important phone calls.



**Important:** Call divert is a network-dependent feature and may not work the same in all networks. Contact your service provider for availability and for your network's feature codes.

## Learn about Call divert feature codes

Your network requires separate codes for activating and cancelling the various types of call forwarding. Your service provider can provide you with the necessary feature codes for these network services.

Once you store these feature codes in your phone, they are sent automatically to the network when you select one of the call forwarding options from your phone menu.

Your phone can store the following types of feature codes:

Feature code type	Description
Divert all calls	Diverts all incoming calls to the number you specify.
Divert if busy	Diverts incoming calls when you are in a call.
Divert if not answered	Diverts incoming calls to another number when you are unable to answer.
Divert if out of reach	Diverts incoming calls to another number when you are out of the network or when the phone is switched off.

Feature code type	Description
Divert all data/fax calls	Diverts all incoming data/fax calls to the number you specify.
Cancel all diverts	Cancels any and all call diverting options you may have set.

## Store a feature code

- 1 Press Menu 4-6-5 (Settings > Network services > Network feature setting).  
The Feature code field appears after a few seconds.
- 2 Enter the feature code your service provider gave you (for example, \*90 for activating Divert if busy), then press OK.
- 3 Press Select when Call diverting is displayed.
- 4 Scroll to the type of diverting that matches the feature code you entered (for example, Divert if busy), then press Select.
- 5 Select Activate.

The Activate feature code is now stored in your phone, and you are returned to the Feature code field.

Continue entering other feature codes (for example, \*900 to cancel Divert if busy), or press the End key to return to the Start screen.



**Important:** Once you enter a network feature code successfully, the feature becomes visible in the **Network services** menu, but will not work until activated through **Menu 4-6-2 (Settings > Network services > Call diverting)**.

## Activate/cancel call diverting

After you store the correct feature codes, you can activate (or cancel) call diverting as follows:

- 1 Press **Menu 4-6-2 (Settings > Network services > Call diverting)**.
- 2 Scroll to the desired call diverting option, then press **Select**.
- 3 Highlight **Activate** and press **Select**.
- 4 Enter the number to which you want your calls diverted (or press **Search** to recall a number from the phone book), and press **OK**.

Your phone calls the network to activate (or cancel) the feature you have requested. The network sends a confirmation note when the feature has been activated (or cancelled) successfully.

## • USE CALL WAITING

This network service lets you receive an incoming call when you are already in a call. When you receive an incoming call, your phone displays the caller's phone number (or the caller's entry in your phone book). The phone also beeps, notifying you of the incoming call.

## Answering a waiting call

Press the **Send** key (or press **Answer**) to place the current active call on hold automatically and answer the new call.

## Switch between the two calls

Accepting the waiting call puts your first caller on hold. To put the second caller on hold and reconnect with the first caller, press the **Send** key.

## End the active call

To end the active call, simply allow the other party to hang up; the call on hold then becomes the active call.

OR

- 1 Press the **End** key to terminate the active call.
- 2 The network redials your phone with the call on hold.

Answer this as you would any normal incoming call.

## • SEND OWN CALLER ID WHEN CALLING

This feature allows you to block caller ID when you call someone (your number will not be displayed on their caller ID). This feature may only be effective when calling a number equipped with caller ID.



**Note:** This feature is available only when supported by the wireless network.



**Important:** This feature works on a call-by-call basis. You must enable this feature each time

you want to block the sending of your own number to the recipient's caller ID.

### Store the feature codes

Before you can use the **Send own caller ID when calling** feature, you must store the feature codes for activating this feature. Once the code is stored in your phone, it is sent automatically to the network when you select this option from your phone's menu.

- 1 Press Menu 4-6-5 (Settings > Network services > Network feature setting).

The Feature code field appears after a few seconds.

- 2 Enter the feature code your service provider gave you (for example, \*67 for activating **Send own caller ID when calling**), then press OK.
- 3 Scroll to **Send own caller ID when calling** and press select.
- 4 Select **No** to assign the activation code.

### Place a call without sending your number

- 1 Press Menu 4-6-4 (Settings > Network services > Send own caller ID when calling).
- 2 Scroll to **No**, then press Select.
- 3 Enter the desired phone number, then press OK  
OR  
Press Search to recall a phone number from the phone book.

The phone automatically inserts the feature code into the dialling string and dials the phone number. The person you are calling cannot see your phone number on their caller ID.

### • USE AUTOMATIC REDIAL

There are times when you may not be able to place a call, for example, due to the high traffic volume on the wireless network. When the wireless network is busy or unavailable, **Automatic redial** instructs your phone to retry the call.

### ACTIVATE AUTOMATIC REDIAL

- 1 Press Menu 4-1-2 (Settings > Call settings > Automatic redial).
- 2 Scroll to **On** and press Select.

If the system is busy, your phone makes three additional call attempts. If you want to stop the automatic redial process before the last attempt, press the End key.



**Important:** This feature does not automatically retry a number when the number you are calling is busy.

### • CALLING CARD

If you wish to use a calling card for long distance calls, you can first save your calling card information into your phone. Your phone is equipped to handle up to four calling cards.

## Saving calling card information

- 1 Press Menu 4-1-6 (Settings > Call settings > Calling card).
- 2 Enter your security code, then press OK.
- 3 Scroll to one of the four memory locations, then press Options.
- 4 Scroll to Edit, then press OK.
- 5 Select Dialling sequence.
- 6 Scroll to one of the three sequence types as described in the following table, then press Select.

Dialling sequence	Use for cards that require you to:
Access number + phone number + card number	Dial 1-800 access number, then phone number, then card number (+ PIN if required)
Access number + card number + phone number	Dial 1-800 access number, then card number (+ PIN if required), then phone number
Prefix + phone number + card number	Dial the prefix (any numbers that must precede the phone number) and phone number you want to dial, then card number (+ PIN if required)

- 7 Enter the required information (access number or prefix and card number).
- 8 Press OK to confirm your entries.
- 9 Press OK to save your changes.
- 10 Scroll to Card name, then press Select.
- 11 Enter the card name, then press OK.



**Note:** This procedure might not work with all calling cards. Please look at the back of your calling card or contact your long distance company for more information.

## Choosing a calling card to use

Use Menu 4-1-6 (Settings > Call settings > Calling card) to select a calling card to use. You will be required to enter your security code.

## Making calling card calls

After you have saved your calling card information in your phone, you can make a call using your calling card.

- 1 Enter the phone number, including any prefix (such as 0 or 1) that your calling card may require when you make a calling card call.  
See your calling card for instructions.
- 2 Press and hold the Send key for a few seconds until your phone displays Card call.
- 3 Your phone displays Wait for tone, then press OK.
- 4 When you hear the tone or system message, press OK.

- 5 Your phone displays **Wait for tone**, press **OK** again.
- 6 When you hear the tone or system message, press **OK**.

### • VOICE DIALLING

You can dial up to 25 stored phone book numbers using the voice dialling feature. Before you can place a call using voice dialling, you must first assign a voice tag to the number. Before using voice dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, hold the phone in the normal position near to your ear.
- Very short are not accepted. Use long and avoid similar for different numbers.



**Important:** You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

### Assign a voice tag to a phone number

You must record a voice tag (up to two seconds) for a phone number before you can use the voice dialling feature to dial it.

### ADD A VOICE TAG TO A PHONE BOOK ENTRY


- 1 At the **Start** screen, press up scroll or down scroll keys.
- 2 Scroll to the desired phone book entry, and press **Details**.
- 3 Scroll to the phone number you want to tag and press **Options**.
- 4 Scroll to **Add voice tag** and press **Select**.

The phone displays **Press Start, then speak after the tone**.

- 5 Press **Start** and after the tone, speak the voice tag clearly into the microphone.



**Note:** Your phone informs you if the recording is not successful. Press **OK** to try again or **Back** to return to phone book.

The message **Voice tag saved** is displayed upon completion of the recording process. The  icon next to a phone number denotes that a voice tag exists for this number.

### IMPORTANT NOTES ABOUT VOICE TAGS

- The recording process stops automatically; pressing **Quit** aborts the recording attempt.
- Voice tags are sensitive to background noise. Record tags or use voice dialling in a quiet environment.
- Unique tags are recognised more accurately. Consider using first and last name or first name, last name, and number type when tagging a number.

Example: "John Smith, work."

- Avoid pauses or silence as you record the voice tag.
- If the voice tag memory is full, the phone displays **Delete an existing voice tag?** Press **OK**, scroll to locate a tag to delete, then press **Delete**.
- Deleting a phone number deletes any associated voice tags.



**Warning!** Do not use a voice tag for dialling emergency numbers. In emergencies, stress causes changes in your voice, which may keep the phone from recognising your voice command.

## Dialling a number using voice dialling



**Note:** You must say the name exactly as you said it when you recorded it.

- 1 At the Start screen, press and hold **Contacts** for two seconds. A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.



**Note:** If the voice tag is not recognised by the phone or if you fail to speak a tag within three seconds after the tone, the message **Name not recognised** is displayed, and you are returned to the Start screen.

- 3 When the voice tag is recognised, The phone book entry will be displayed on the screen for three seconds

AND

The voice tag is replayed (through the ear piece).

After three seconds, the number is dialled.

The only other option for initiating voice dialling is to press the headset button momentarily at the Start screen. The alert tones play through the headset.

Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

## Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), rerecord a voice tag, or delete an existing tag.

- 1 At the Start screen, press **Contacts**.
- 2 Scroll to **Voice tags**, then press **Select**.



**Note:** This option displays a list of only those names and numbers that have been assigned a voice tag.

- 3 Scroll to the phone number voice tag you want to edit, then press **Options**.
- 4 Scroll to either **Playback**, **Change**, or **Delete**, and press **Select**.
- 5 If you chose **Change**, press **Start** to begin rerecording.

The new tag that is recorded replaces the old information.

### • SPEED DIALLING

When a phone number is assigned to one of the Speed dialling locations (2-9), you can call the phone number in either of the following ways:

- Press the number key that corresponds to a Speed dials location and press the **Send** key.
- Press and hold the number key that corresponds to a Speed dialling location until the call is initiated.

1 is preassigned to dial your voice mailbox number and cannot be reassigned.

### Set up Speed dialling

If you want to assign a number to one of the number keys (2-9), do the following:

- 1 Press **Contacts**.
- 2 Scroll to **Speed dials** and press **Select**.
- 3 Scroll to the desired number key (2-9), and press **Assign**.



**Note:** If a phone number is already assigned to a key, the phone book entry name is displayed and the left selection key is **Options**.

- 4 Enter the phone number manually, or press **Search** to locate a phone book entry. Select the desired name or entry from the phone book. If more than one number is stored for that entry, scroll to the desired number and press **Select**.

### Speed dialling options

You can change or delete (clear) numbers assigned to Speed dialling or view the number assigned to a key from the Speed dialling menu.

- 1 Press **Contacts**.
- 2 Scroll to **Speed dials** and press **Select**.
- 3 Scroll to a key that is assigned a number, then press **Options**.
- 4 Scroll to either **View number**, **Change**, or **Delete**, then press **Select**.

### • LEARN ABOUT CALLER GROUPS

You can group phone book entries using one of the existing categories (**Family**, **VIP**, **Friends**, **Business**, and **Other**). Each group has its own unique ringing tone and logo.

When you receive a call from a number assigned to a caller group, the ringing tone for that caller group is used, and the caller group's logo is displayed on the screen. This feature can help you identify incoming calls more quickly.

### ADD A NUMBER TO A CALLER GROUP

- 1 At the Start screen, press the up or down scroll keys.
- 2 Scroll to the desired phone book entry, and press **Details**.
- 3 Scroll to the phone number you want to use and press **Options**.
- 4 Scroll to **Caller groups**, and press **Select**.

- 5 Scroll to the desired caller group (for example, **Friends**), and press **Select**.

## SELECT A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Contacts**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **caller groups** and press **Select**.
- 4 Scroll to one of the options on the following page and press **Select**:

Option	Description
Rename group	Renames the selected caller group.
Group ringing tone	Selects a ringing tone for this group. Scroll through list of ringing tones, then press <b>OK</b> .
Group logo	Views, activates or deactivates the group logo.
Group members	Assigns other phone book entries to the selected caller group.

## • USE TOUCH TONES



**Warning:** If you send touch tones while in analog mode, be careful not to send confidential information. Check your phone display for the **D** icon, indicating the presence of a digital network.

Touch tones (sometimes known as DTMF tones) are those tones produced when you press the keys on your phone keypad. You can use touch tones for many automated dial-up services such as banking and airlines, or for entering your voice mailbox number and password.

Touch tones are sent during an active call. You can send them manually from your phone keypad, or send them automatically by saving them in your phone.

## Set manual touch tone options

You may customise the way your phone sends the touch tones for optimum performance with the system you are calling.

## SET TOUCH TONE TYPE

- 1 Press **Menu 4-2-2-1** (**Settings > Phone settings > Touch tones > Manual touch tones**).
- 2 Select one of the following options, then press **Select**:

Option	Description
<b>Continuous</b>	Tone sounds for as long as you press and hold a key.
<b>Fixed</b>	Sends tones of the duration you specify in the <b>Touch tone length</b> option.
<b>Off</b>	Turns off tones. No tones are sent when you press a key.

## SET FIXED TOUCH TONE LENGTH

You can also specify touch tone length when using the **Fixed** option.

- 1 Press **Menu 4-2-2-2** (**Settings > Phone settings > Touch tones > Touch tone length**).
- 2 Scroll to **Short** (1/10 seconds) or **Long** (1/2 seconds), then press **Select**.

## Send a touch tone string manually

Before you begin, make sure that **Manual touch tones** is not set to **Off**.

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones**, and press **Select**.
- 2 Enter the touch tone string from your phone keypad as required by the service you are calling, then press **Tones**.

## Send touch tone string from phone book

You can save a touch tone string as a separate phone book entry, then recall and send the string using the in-call menu option **Touch tones**.

## SAVE TOUCH TONES AS A PHONE BOOK ENTRY

Save the touch tone string (including any pause or wait characters that may be required) to a new entry in the phone book. For more information on saving and number to your phone book see "Saving contacts and numbers" on page 31.

## RECALL A TOUCH TONE STRING FROM THE PHONE BOOK

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones**, and press **Select**.
- 2 Press **Search**, scroll to the touch tone string entry in your phone book, then press **OK**.
- 3 Press **Tones** to send the touch tones.

## Store a touch tone string with phone number

You can store touch tone strings (for example, voice mailbox number and PIN code) as a part of a phone book entry. Once the string is stored, it is sent automatically (instead of entering the touch tones from the keypad).

- 1 Enter the phone number of the automated service.
- 2 Use the **\*/+** key to enter a **w** or **p** after the number.
  - **w** (wait)-The phone waits for you to press **Send**. When you press **Send**, the phone sends the touch tone string you've saved.
  - **p** (pause)-The phone pauses for 2.5 seconds, then automatically sends the touch tone string you have saved.
- 3 Enter the touch tone string after the **w** or **p** characters as required by the service.

Example: 214-555-  
1234w1234#p5678#

- 4 Save this phone book entry as you normally would. Once the touch tone string is stored with the phone number, you can now call the number and have the touch tone strings sent automatically.

## • LINK PHONE BOOK ENTRIES

This feature allows you to store a phone number in one phone book location and link it to another phone book entry.

For example, linking the phone number of an automated service (for example, automated banking service) with a touch tone string entry in your phone book (for example, account and PIN numbers) automatically recalls and sends the touch tone string when you call the service.

### USE LINKING OPTIONS

- 1 Store the touch tone string into your phone book.
- 2 Assign the phone book entry with the touch tones to a Speed dialling location (for example, location 3). For more information on Speed dialling, see "1-touch dialing" on page 60.
- 3 Edit the automated service's phone number by adding +n to the end of the phone number (where n is the Speed dialling location).  
Example: 214-555-1234+3
- 4 Press **OK** to save your changes.
- 5 Dial the automated service's number from your phone book. Your phone automatically sends the touch tones when the call connects.



**Important:** You may need to enter a pause (p) before the + in order to account for delays in the automated system answering your call (for example, 214-555-1234p+3).

## • LEARN ABOUT VOICE RECORDER

**Voice recorder** allows you to record audio memos and store them in your phone. Use this feature to record things such as phone numbers and personal memos. Total time available for all memos is one minute (up to 60 seconds). Maximum length of a single message is one minute (up to 60 seconds).

The maximum number and length of remaining memos depends on how much memory is still available. A countdown timer is displayed while recording and shows remaining record time.

### Record a memo

- 1 Press **Menu 6-3-1 (Voice > Voice recorder > Record)**.
- 2 After the tone, begin recording your memo; when you finish recording, press **Stop**.
- 3 Enter the subject of the voice memo, then press **OK**.

### NOTES

- Press **Back** (instead of entering a subject) to discard the memo without saving.
- Pressing **OK** without entering a subject to assign the default name (**Recording**) to the memo.

## Work with recorded memos

To view a list of recorded memos:

- 1 Press **Menu 6-3-2 (Voice > Voice recorder > Recordings list)**.
- 2 Scroll through the list of memos, then press **Options**.

The following options are available:

Option	Description
Playback	Plays back the selected message through the earpiece (phone or headset).
Delete	Deletes selected voice memo.
Edit title	Edits the subject of the memo, or renames the memo.
Add alarm/ Alarm	Adds (edits, or removes) a reminder alarm for the memo.


## Notes about voice recorder

- An incoming call interrupts voice memo playback. When the call is complete, the phone returns to the **Options** menu for the selected voice memo.
- An incoming call stops voice memo recording. The recorded memo is automatically saved with the default name.
- You can enter numbers from the keypad during memo playback (For example, when voice memo contains a phone number). Pressing the **Send** key interrupts voice memo playback and places the call.

## 12 Security and System settings




**Warning!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

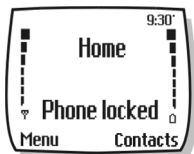

Your phone has a variety of security features that help prevent some of the following:


- Placing accidental or unintentional calls
- Unauthorised use of your phone
- Placing and accepting calls from certain phone numbers
- Accidental erasing of information or restoring factory settings

### • LOCK KEYPAD (KEYGUARD)

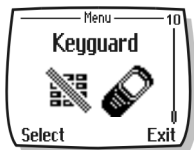


With keypad lock (Keyguard) you can temporarily lock your phone keypad and prevent the accidental placing of calls or pressing of the keypad (for example, when the phone is in your pocket or in your purse).

### Activate/deactivate Keyguard

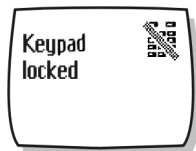

Press **Menu 10** or press **Menu** followed by **\*/+** (within three seconds) to activate Keyguard. It is possible to answer a call, even though Keyguard is activated. Press the **Send** key to answer the call. When the call has ended, the keypad remains locked.



**Important:**  appears at the top of the display. The left softkey is also labeled **Unlock**.

### UNLOCK KEYPAD

Press **Unlock** followed by **\*/+** (within three seconds) to deactivate Keyguard and unlock your phone keypad.



**Important:** When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

### • SECURITY CODE

Your phone prompts you for a five-digit **security code** for certain features and commands. Access is granted only after the correct security code has been entered successfully. The default security code is **12345**. It is recommended that

you change this code at once, write it down, and store it in a safe place away from your phone.



**Important:** When entering your security code, \*\*\*\*\* is displayed on the screen to keep others from viewing your code.

### Correct entry errors

You can delete the last entered digit by pressing **Clear** (or by pressing and holding **Clear** to delete all the digits more quickly). Enter the correct code or press **Back** to exit. If you enter an incorrect security code, **Code error** will appear five times in a row, and your phone will not accept any entries for the next five minutes.

### Change your security code

- 1 Press **Menu** 4-5-2-4 (**Settings** > **Security settings** > **Access codes** > **Change security code**) and press **Select**.
- 2 Enter the existing (or default) security code and press **OK**.
- 3 Enter the new five-digit security code and press **OK**.
- 4 Reenter the new five-digit security code for verification, then press **OK**.


Your phone displays the confirmation message **Security code changed**.



**Important:** If you change your security code and do not remember the new code, contact your service provider. Once you change your security code, the default code is no longer valid.

### • PHONE LOCK

This feature protects your phone from unauthorised outgoing calls or unauthorised access to information stored in the phone. When phone lock is activated, **Phone locked** is displayed each time you turn your phone on or off.

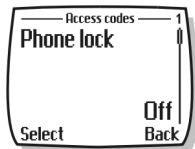

After pressing either **Contacts** or **Menu**, you must enter your lock code. Once your lock code has been accepted, your phone will function normally.



**Important:** **Call not allowed** is displayed if you attempt to place a call while phone is locked.



**Important:** When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

### Learn about the lock code

In addition to a security code, your phone also has a **lock code**. You will need the lock code to activate and deactivate the phone lock feature, or to change your lock code.

The default lock code is **1234**. If you enter an incorrect lock code five times in a row, your phone will prompt you for the security code (see page 69).

## CHANGE YOUR LOCK CODE

- 1 Enter Menu 4-5-2-3 (Settings > Security settings > Access codes > Change lock code) and press **Select**.
- 2 Enter the current (or default) lock code and press **OK**.
- 3 Enter the new lock code and press **OK**.
- 4 Reenter the new lock code for verification, then press **OK**.



**Important:** When you change your lock code, make sure you store it in a safe place, away from your phone. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

## Activating and deactivating phone lock

- 1 Press Menu 4-5-2-1 (Settings > Security settings > Access codes > Phone lock).
- 2 Enter the lock code, then press **OK**.
- 3 Scroll to **On** or **Off**, then press **Select**.
- 4 Turn your phone off and back on to complete the phone lock activation (or deactivation).

## Answer a call with phone lock on

Press the **Send** key or **Answer**.

## Allowed number when phone locked

When phone lock is on, the only outgoing calls that can be made are to the following numbers:

- The emergency number programmed into your phone (for example, 911 or other official emergency number).
- The number stored in the **Allowed number when phone locked** location.

## Store the unlocked phone number

- 1 Press Menu 4-5-2-2 (Settings > Security settings > Access codes > Allowed number when phone locked).
- 2 Enter the lock code and press **OK**.
- 3 Enter the phone number (or press **Search** and recall the number from the phone book), then press **Select**.

## Calling the allowed phone number

At the Start screen, press up scroll or down scroll key. The number is displayed. Press the **Send** key to place the call.



**Important:** Phone lock must be activated to use this feature.

## • CALL RESTRICTIONS

This feature allows you to restrict incoming and outgoing calls. You can restrict all calls or create a custom list of numbers to restrict.

## Learn about restriction options

When you select either **Restrict outgoing calls** or **Restrict incoming calls** from the Security settings options, your options are as follows:

- **Select**-Used to display a list of all available restricted numbers. Select those numbers you want to restrict from this screen.
- **Add restriction**-Used to create your own list of restricted numbers

Once you have added at least one restriction to either the outgoing or incoming calls list, the following options become visible:

- **Edit** - Used to edit an existing outgoing call restriction
- **Delete** - Used to delete call restrictions from the list



**Important:** When calls are restricted, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

### Adding a call restriction

You can add up to 15 restrictions for outgoing calls and 15 restrictions for incoming calls. The maximum number of characters you can enter for each restriction is 15.

- 1 Press Menu 4-5-1 (Settings > Security settings > Call restrictions).
- 2 Enter the security code and press OK.
- 3 Select either **Restrict outgoing calls** or **Restrict incoming calls**.
- 4 Scroll to **Add restriction** and press **Select**.
- 5 Enter the number string you wish to restrict and press **OK**.

For example:

- If you wish to restrict all calls that begin with 1, enter 1.
- If you wish to restrict all calls that begin with 1972, enter 1972.
- If you wish to restrict all calls that begin with 214, enter 214.

- 6 Enter a name to identify this restriction, or just press **OK**.



**Note:** When creating a new restriction, that restriction is automatically selected (enabled) at the time it is saved.

### Select call restrictions

- 1 Press Menu 4-5-1 (Settings > Security settings > Call restrictions).
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Select** and press **Select**.
- 5 Scroll to each restriction you wish to use and press **Mark**; press **Unmark** to deactivate existing restrictions.
- 6 Press **Done**, then press **Yes** to save the changes you have made.

### Edit call restrictions

You can edit the name or number of an entry in the call restrictions list.

- 1 Press Menu 4-5-1 (Settings > Security settings > Call restrictions).

- 2 Enter your security code and press **Select**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Edit** and press **Select**.
- 5 Scroll to the restriction you wish to edit, then press **OK**.



**Note:** If no name has been entered for a restriction, the restricted number will be displayed.

- 6 Edit the number (as needed), then press **OK**.
- 7 Edit the name (as needed), then press **OK**.

### Erasing call restrictions

You may want to delete a restriction that is no longer needed.

- 1 Press **Menu 4-5-1 (Settings > Security settings > Call restrictions)**.
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Delete** and press **Select**.
- 5 Scroll to the restriction you wish to delete, then press **OK**.
- 6 Press **OK** again to delete restriction.

### AUTOMATIC UPDATE OF SERVICE

Your phone is capable of receiving updates to wireless services sent to your phone by your service provider. Use **Menu 4-1-4 (Settings > Call settings > Auto-update of service)** to turn this feature on or off.

### LEARN ABOUT SYSTEM SELECTION

The **System** menu **Menu 4-7 (Settings > System)** allows you to customise the way your phone chooses a system in which to operate while you are within or outside of your primary or home system.

Your phone is set to search for the most cost-effective system. If your phone cannot find a preferred system, it selects a system automatically based on the option you choose in the **System** menu.



**Important:** Before selecting an item in the **System** menu, contact your service provider to find out how your selection will affect your service charges.


## View Roaming options

The menu options you see in your phone are based on your service provider's network. Their network determines which options actually appear in the phone menu. The following is a description of the options that may appear in your phone:


Option	Description
Home only	You can make and receive calls in your home area only. While roaming, <b>No Service</b> appears and you cannot make or receive calls.
Automatic	Your phone automatically selects the best available system.

## 13 Organiser

Your phone has a calendar, alarm clock, stopwatch, and contact database—everything you need in an organiser or personal digital assistant.

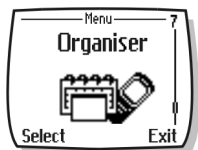

### • USE THE ALARM CLOCK

Your phone alarm clock can be set to sound an alarm at a time you specify. The alarm clock uses the clock time format (12-hour or 24-hour format). The  icon, displayed on the Start screen, indicates that an alarm is set. The alarm clock will work, regardless if the phone is on or off.



**Important:** The alarm clock works in conjunction with your phone clock. Make sure the time and date are correct before using this feature.

### Set the alarm

- 1 Press **Menu 8-1** (Organiser > Alarm clock), then press **Select**.
- 2 Enter the alarm time, then press **OK**.
- 3 Select **am** or **pm**, then press **OK**.

### Respond to an alarm

At the time of the alarm, the phone sounds an alert tone, displays an animated message, and flashes its lights.

Pressing **Stop** or the **End** key stops the alarm from sounding, and returns you to the Start screen.

### SNOOZING

There are several ways you can enable the Snooze feature:

- 1 Press the **Snooze** selection key.
- 2 Press any key (except the **End** key).
- 3 Allow the alarm to sound for one minute.

Once snooze is enabled, the alarm will sound again in 10 minutes.

### Alarm when phone power is off

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.



**Warning!** Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

### Alarm clock notes

- The alarm clock volume is determined by current volume and tone settings.
- If you have selected the **Silent** or **Beep once** ringing tone, the alarm clock beeps once.

## • CALENDAR



**Warning!** Your phone must be switched on to use the calendar feature. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can use your phone calendar to record notes to remind you of appointments such as meetings, phone calls, birthdays, or general reminders. Alarms can also be set to notify you of your appointments or notes.

You can also use the DKU-5 cable in conjunction with Nokia PC Suite to synchronise your PIM application calendar with your phone calendar, keeping you up-to-date when you are away from your office or PC.

### Calendar Options menu

The calendar Options menu displays a list of calendar options: **View day**, **Make a note**, **Go to date**, and the calendar **Settings** menu.

### Learn about Calendar views

#### WEEK LIST




From the **Organiser** menu, scroll to **Calendar**, and press **Select**. Use the week list to view four weeks at a glance.

When you view the calendar, notice that today's date is highlighted. Use the scroll keys to move to a different date.

- Use **2** to scroll **up**.
- Use **8** to scroll **down**.
- Use **4** to scroll **left**.
- Use **6** to scroll **right**.
- Use the left selection key to view the **Options** for that day.

### Day view

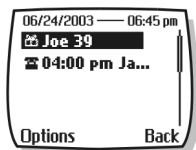

From the week list, scroll to the desired day. Press **Options**, then select **View day**. The day view allows you to scroll through the notes made for the selected day.

The Options list for day view includes:

- **View** the highlighted note.
- **Make a note** - create a new note for the selected day.
- **Delete, Edit, Move, or Repeat** the highlighted note (every day, every week, biweekly, every month or every year).
- **Go to date** - jump to a specific date.
- **Copy** - allows you to copy the note to another day
- **Send note** - provides various options for sending the current note (via SMS. Please check for available in your network)

- **Settings** – allows you to set the date, time, date format, time format and week format for the calendar. The **Auto delete** setting allows you to delete old notes after a specified period of time. However, repeat notes (for example, birthday or anniversary notes) will not be deleted.
- **Meeting** – Enter the note (or press **Options**, then **Find** to recall a name from the phone book) and press **Select**. Enter the time and press **OK**.
- **Call** – Enter the desired phone number (or press **Options** then **Find** to recall it from phone book) and press **Select**. Enter the time and press **OK**.
- **Birthday** – Enter the person's name (or press **Options** then **Find** to recall it from phone book) and press **Select**. Press **Options** then **Save** and enter date of birth and year (optional). Press **OK**.
- **Memo** – Enter the note. Press **Options** then select **Save**. Enter a date for the memo, then press **OK**.
- **Reminder** – Enter the note. Press **Options** then **Save**.

## NOTE VIEW

From the day view, scroll to the desired note. Press **Options**, scroll to **View**, and press **Select**. The details of the selected note are displayed.

The **Options** list for note view include:

- **Delete, Edit, Move, or Repeat** the current note (every day, every week, biweekly or every year).
- **Copy** – allows you to copy the note to another day.
- **Settings** – allows you to set the date, time, date format, date separator, time format and week format for the calendar. The **Auto delete** setting allows you to delete old notes after a specified period of time. However, repeat notes (for example, birthday or anniversary notes) will not be deleted.


## Add a calendar note



**Note:** Predictive text input is available for Calendar notes.

- 1 From the day list view, scroll to the desired day and press **Options**.
- 2 Select **Make a note**.
- 3 Scroll to one of the following note types and press **Select**:

- 4 Scroll to the desired alarm option (**With tone**, **No alarm**, or **Silent**), then press **Select**.

The presence of an alarm is indicated by  when you view the notes.

## WHEN THE ALARM SOUNDS FOR A NOTE

The phone flashes its lights, beeps, and displays the note. When a **Call** note is displayed, you can call the number by pressing the **Send** key.

To stop the alarm, press **Exit** or the **End** key.

### • CALCULATOR

You can use your phone calculator to add, subtract, multiply, or divide numbers and convert currencies.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### Use the calculator

- 1 From the **Organiser** menu, scroll to **Calculator**, and press **Select**.
- 2 Enter the first number in the calculation (press **#** for decimal point).
- 3 To add, press **\*/+** once (+ appears); to subtract, press **\*/+** twice ( - ); to multiply, press **\*/+** three times ( \* ); to divide, press **\*/+** four times ( / ).
- 4 You can also press **Options**, scroll to **Add**, **Subtract**, **Multiply**, **Divide**, **Square**, or **Square root**, and press **Select**.
- 5 Enter the second number.  
Repeat steps 3 and 4 as many times as necessary.



**Note:** A subtotal is shown after you enter the next operand (+, -, \*, or /).

- 6 For a total, press **Options** twice.
- 7 To start a new calculation, press and hold **Clear** for two seconds.



**Note:** This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

### Convert currency

You can use the calculator to first set the exchange rate and then to calculate the exchange value.

### SET THE EXCHANGE RATE

- 1 Press **Menu 8-3 (Organiser > Calculator)**, and then press **Options**.
- 2 Use the up scroll or down scroll key to scroll to **Exchange rate** and press **Select**.
- 3 Select the exchange rate: **Foreign units converted to home units** or **Home units converted to foreign units**.
- 4 Press **Select**.  
The exchange rate box opens, with the number 1.
- 5 Enter the appropriate number and press **OK**.  
The number 1 is overwritten by the number you entered. To enter a decimal point, press **#**.
- 6 Press **OK**.  
The **Exchange rate saved** message appears.

### CALCULATE CURRENCY USING THE EXCHANGE RATE

- 1 Press **Menu 8-3 (Menu > Organiser > Calculator)**.
- 2 Enter the number of units for the exchange rate.

- 3 Press **Options** and scroll to **To home** or **To foreign**.
  - **To home** converts foreign units of currency to home units using the exchange rate you entered.
  - **To foreign** converts home units of currency to foreign units using the exchange rate you entered.
- 4 Press **OK**.

## CALCULATE CURRENCY USING THE EXCHANGE RATE

- 1 Press **Menu 8-3** (**Menu > Organiser > Calculator**).
- 2 Enter the number of units for the exchange rate.
- 3 Press **Options** and scroll to **To home** or **To foreign**.
  - **To home** converts foreign units of currency to home units using the exchange rate you entered.
  - **To foreign** converts home units of currency to foreign units using the exchange rate you entered. Press **OK**.

## • STOPWATCH

You can use your phone **Stopwatch** feature to time an event in hours, minutes and seconds. The event time can be saved, viewed, or deleted.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



**Important:** Using the stopwatch consumes the battery and the operating time of the phone will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

## Time an event using split timing

The split time function allows you to measure the total time for an event, yet allows you to capture the elapsed time at various intervals. To measure split time:

- 1 From the **Organiser** menu, scroll to **Stopwatch** and press **Select**.
- 2 Scroll to **Split timing**, then press **Select**.
- 3 Press **Start**.

The running time appears on the display.

Once the split timer has started, you can:

- Press **Split** to display the split time while the timer continues to display elapsed time.
- Press **Stop** to stop the timer and view the total elapsed time.

If you continue pressing **Split**, the most recent split time appears at the top of the list of split times. You can scroll to review previous times.

## Time an event using lap timing

The lap time function allows you to measure the amount of time it takes to complete a cycle or lap. To measure lap time:

- 1 From the **Organiser** menu, scroll to **Stopwatch** and press **Select**.
- 2 Scroll to **Lap timing**, then press **Select**.
- 3 Press **Start**.

The running time appears on the display.

Once the lap timer has started, you can:

- Press **Stop** to stop the timer and view the elapsed time.
- Press **Lap** to display the lap time; the timer restarts from zero.

If you continue pressing **Lap**, the most recent lap time appears at the top of the list of lap times. You can scroll to review previous times.

Press **Stop** to stop the timer. The final lap time is displayed.

### View timing options

Once you have stopped timing an event (using lap or split), you have the option to save the information, reset the stopwatch, or continue timing (split timing only).

While stopwatch is running, press **Stop**, then press **Options**. Select one of the following:

- **Save** – saves the current timing data. Enter a name, then press **OK**.
- **Reset** clears the current timing data and resets the timer.
- **Start** restarts the split timer from the point the timer was stopped.

### Choose other stopwatch options

You can choose the following options from the **Stopwatch** menu.

Option	Description
Continue	Allows you to re-display active timer (for example, if you receive a call while the timer is still running).
Show last time	Allows you to view the last measured time.
View times	Allows you to view the list of saved times.
Delete times	Allows you to delete the saved times. You can delete the saved times one by one or all at once.




**Note:** If you receive a call while using the stopwatch, the timer continues running in the background. After ending the call, you can redisplay the timer by doing the following:

- 1 Press **Menu 8-4-1 (Organiser > Stopwatch > Continue)**.
- 2 Press **Select**.

## 14 Applications



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

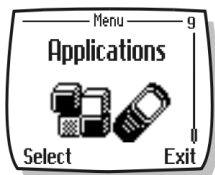

This menu allows the management of Java™ applications installed on your phone or downloaded from your PC using Nokia PC Suite. Your phone software includes Java applications designed for your Nokia phone. Some service providers offer other applications via mobile Internet services.



**Note:** This feature shares memory space with other features. For more information, see "Memory use" on page 18.

### • LAUNCHING AN APPLICATION

- 1 Press **Menu 9-1 (Applications - Select app.)** and scroll to an application (name depends on the application) and press **Options**.

If the selection is a single application it will launch. Otherwise, a list of applications is displayed corresponding to the selected application set.

- 2 Scroll to the desired application and press **Select**.

The application launches.



**Tip:** If an application uses the whole display area, no softkey selections are displayed. Press one of the selection keys to show the options list. Then select one of the options or press **Back** to continue with the application.

### • OTHER OPTIONS AVAILABLE FOR APPLICATIONS

- **Open**-opens the application or application set from the phone.
- **Delete**-deletes the application or application set from the phone.
- **Web access** allows the user to restrict the MIDlet Suite's access to the network.
- **Check version** checks availability of a new version of the application is for download from the mobile Internet services.
- **Service settings**-An active MIDlet may require network access to make network connections to update or obtain new data. This setting allows the user to set some restriction on this access, and applies to all MIDlets within the suite requesting network access.
- **Details** gives additional information about the application.



**Note:** Check the version; the Internet link may not be available for all applications.

### • DOWNLOAD A NEW APPLICATION



**Note:** The ability to download applications over the air is dependent on your service provider. To learn more about this function, contact your service provider.

You can use the Internet to download Java applications to your PC, then use the Java installer from PC Suite to download the applications in your phone. See "PC Connectivity" on page 84, for more information.



**Note:** Nokia does not provide any warranty for non-Nokia applications. If you choose to download and install an application, you should take the same precautions, for security or content, as you would with any Internet site.

## Check memory status

Allows you to view memory available for Applications

- Press **Menu**, scroll to **Applications**, then select **Memory**.
- You will see the amount of **Free memory** and the **Total memory**.

This will vary according to the number of applications you have installed.




**Note:** This feature utilises shared memory. For a detailed explanation on memory, see "Memory use" on page 18.

## 15 Games



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

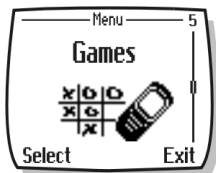

You can use your phone not only for communication but also for some serious fun. Your phone offers you four games from which to choose.

- In **Snake II**, you feed the snake with as many goodies as possible. The longer the snake's tail grows, the higher your score is.
- In **Space Impact II**, you try to destroy the falling asteroids before they destroy you.
- In **Bumper**, you can play an exciting game of pinball. Increase your score by keeping the ball on the table using the flippers.

### Game control

Your phone supports two-way scrolling while playing the games:

- Use the **2** key to scroll **up**.
- Use the **8** key to scroll **down**.
- Use the **4** key to scroll **left**.
- Use the **6** key to scroll **right**.

### Start a new game

- 1 Press **Menu 5-1 (Games > Select game)**, scroll to the desired game, and press **Select**.
- 2 Choose an option and press **Select**.

### LEARN ABOUT GAME OPTIONS

Use the option **Instructions** to learn how to play the game. With the option **Level** you can choose the difficulty level of the game.

In **Snake II** you can pause the game by pressing either selection key and resume a paused game with **Continue**. Use **Top score** (available in some games) to check the high score in your phone.

### Game settings

The following settings are available for all games:

Option	Description
Game sounds	Turns game sound effects <b>On</b> or <b>Off</b> .
Game lights	Turns screen lights <b>On</b> or <b>Off</b> during game play only.
Shakes	Turns game vibrating effects <b>On</b> or <b>Off</b> .

## 16 Your phone and other devices

Your phone is capable of interacting with, or connecting to a computer using the DKU-5 USB cable.

Your phone can exchange information with other desktop and laptop PCs. Your phone can also function as a wireless modem when connected to PCs.



**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### • PC CONNECTIVITY

You can make a serial connection between your Nokia phone and compatible PC using the DKU-5 USB cable. This cable is available for purchase as an optional accessory, or may be included in your sales package.

Once your phone and PC are connected, you can access phone information from your PC, or use your phone as a wireless modem for digital data/fax calls.



**Important:** Digital data services (including IS95, IS2000, 2G and 3G packet data) are network-dependent features and may require a subscription to these services. Please check with your service provider for the availability of digital data services.

### Nokia PC Suite

Once your phone is connected to your PC, you can use the various components of Nokia PC Suite to perform the following functions:

- Make a backup copy of the data in your phone (Content Copier).
- Edit phone book and numbers, profiles, and settings using your PC keyboard (Phone Editor).
- Synchronise your phone book and reminders with Personal Information Manager (PIM) applications such as Microsoft Outlook, Outlook Express, and Lotus Organizer (PC Sync).

Please refer to the document *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for installation and setup instructions.


### Modem setup

You can use your Nokia phone as a modem with your laptop computer or handheld device, giving you access to the Internet (for e-mail and Web browsing) or corporate networks wherever you are.

For more information on modem setup for PCs and handheld devices, please refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide*.

## 17 Minibrowser

The minibrowser feature allows you to access special mobile Internet content designed specifically for viewing from your mobile phone. You can use your minibrowser to view news, get weather reports, check flight times, access financial information, download new ringing tones or graphics, etc. The browser menu allows you to save addresses of Web sites as bookmarks, so you can return to your favorite sites quickly and easily.

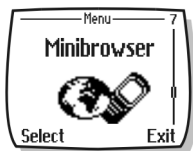


 
**Warning!** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.




**Important:** This feature is available only if your service provider's network supports mobile Internet access. Your service provider may also require that you subscribe to this additional service. For more information, contact your service provider.

### • UNDERSTAND BROWSING SESSIONS AND INDICATORS

When you launch the minibrowser, two icons appear on the screen:

-  Minibrowser icon (you are in a minibrowser session)
-  High-speed data icon (you are being billed accordingly)

The minibrowser disconnects you from the network after a period of inactivity. This is normal and is designed to minimise your bill. You may find, however, that you are billed for several network connections within a single session.

When the minibrowser disconnects from the network, only the browser icon  remains. While browsing, you can still access pages stored in memory without being connected to the Internet.

However, if you navigate to a page that is not stored in memory, a new connection is established and you will be billed accordingly.

### • LAUNCHING THE MINIBROWSER

The first time you launch the minibrowser, you go through a security setup process that takes three to five minutes (follow the on-screen prompts).

- 1 Press **Menu**, scroll to **Minibrowser**, then press **Connect**.

A message appears, reminding you that you may be billed for the connection time. (You can disable this message. See "Disable minibrowser confirmations" on page 89.)

- 2 Press **Yes**.

### Home Page

- 1 News
- 2 Yahoo
- 3 Weather
- 4 Finance
- 5 Web site

After a few seconds, the **Home Page** appears. Your menu may vary according to your service provider.

You can also launch the minibrowser by pressing and holding the **0** key from the Start screen.

## END A BROWSING SESSION

To end a minibrowser session, press and hold the **End** key.

### • MINIBROWSER MENU

While browsing, press and release the power key to display the minibrowser menu:

Option	Description
Reload	Reloads information for current page
Home	Returns you to the Home page.

Option	Description
Bookmarks	Displays a list of bookmarks you've saved.
Bookmark site	Save a bookmark for the current page.
Version	Displays information about the minibrowser's software version and developers
Advanced	Displays a several advanced browser options.
Downloads	View or access downloaded ringing tones
Exit browser	Exits the minibrowser and ends your browsing session.
Switch off!	Turns the phone off.

## ABOUT WEB PAGE CONTENT

The following items may appear on web pages:

- Menu choices may appear as a numbered list.
- **Hyperlinks** appear as underlined text.
- **Input fields** (for text or numbers) - appear as [...].
- **Standard text** (for reading only) requires no action.

## • NAVIGATE IN THE MINIBROWSER

### SCROLL THROUGH THE MENUS AND CONTENTS OF A PAGE

Press the up scroll or down scroll key to scroll through menus or the contents of a page (contents may not fit on one screen). To scroll quickly, press and hold the scroll key.



**Important:** There is no “circular scrolling” in minibrowser menus or pages. In other words, when you get to the end of a list or a body of text, the minibrowser does not automatically return you to the top of the list to begin scrolling again.

### GO BACK (PREVIOUS PAGE)

To go back to a previous page, press the **End** key.

### GO TO THE HOME PAGE

- Press the **End** key repeatedly to move back through previously viewed pages until the **Home Page** appears.
- OR
- Press the power key to display the minibrowser menu, scroll to **Home**, then press **OK**.

### SELECT OR OPEN AN ITEM (FOR EXAMPLE, A LINK)

- Press the appropriate number key on your phone's keypad (if the item on the page is numbered).
- OR

- Scroll to the item, then press the appropriate selection key (for example, to select or open a link).

### SELECTION KEYS

To navigate to different screens or select special functions, use the selection keys. The function of each selection key can change with each page and depends on each highlighted item.

**Left selection key** usually selects the highlighted item, but its function may change depending on what you are doing.

**Right selection key** usually selects a secondary option or displays a menu of secondary options.

## • LINKS

Links usually appear as items in a numbered list. Depending on its type, when activated, a link will do the following:

- Take you to another page or site.
- Make a phone call (some sites support this feature).

When you make the call, the browser connection terminates and the page you were viewing is stored in memory. When you end the call, the page you were viewing is displayed again and you can continue browsing.

### ACTIVATE/SELECT A LINK

- 1 Scroll to highlight the desired link.
  - 2 Press the appropriate selection key.
- If the link is a phone number, in some cases, you can also press the **Send** key to make the call.

### • BOOKMARKS

You can create a bookmark for a page so that you can quickly return to that page later. You may also be able to create bookmarks using your personal account at your service provider's web site.

#### BOOKMARK A PAGE

- 1 Go to the page for which you want to set a bookmark.
- 2 Press the power key to access the minibrowser menu.
- 3 Scroll to **Bookmark page**, then press **Select**.

A message may appear asking you to confirm this action.

#### GO TO A BOOKMARKED PAGE

- 1 From the **Home Page**, scroll to **Bookmarks**, then press **OK**.  
A list of your bookmarks appears.
- 2 Scroll to the bookmark you want to use, then press **Select**.




**Tip:** The first ten bookmarks are assigned to keys 1-0. Press and hold the number associated with the desired bookmark to go to the bookmarked site at any time during a browser session. This feature shares memory space with other features. For more information, see "Memory use" on page 18.

### • RECEIVE MESSAGES USING THE MINIBROWSER

Using your service provider, you may be able to receive text messages using the minibrowser. Unlike SMS text messages, minibrowser messages are not stored in the phone and must be accessed through the minibrowser homepage.

#### Notification of new minibrowser messages

When a new minibrowser message is received, the  icon appears in the status bar. Depending on the message priority, you may also hear an alert tone and/or see **New message from:** displayed on your screen.

- If you receive the message while browsing, press **View** to read the message or **Skip**, allowing you to view the message later.
- If you receive the message while phone is idle, press **Connect** to launch the browser and view the message, or press **Back** to return to the Start screen.

You can use the **Minibrowser messages** menu **Menu 01-3 (Messages > Minibrowser messages)** to read your messages at a later time.

#### Web links in minibrowser messages

You can receive minibrowser messages containing Web links. If you receive a message containing a link, select **Use Web link** from the message **Options** menu to open the link and go to the Web site.

You can also receive Web links in standard SMS messages. Selecting **Use Web link** from the message **Options** menu launches the minibrowser and takes you to the link Web site.

## • END THE MINIBROWSER SESSION

- Press and hold the **End** key.  
OR
- Press the power key, scroll to **Exit Minibrowser**, then press **OK**.

## • DISABLE MINIBROWSER CONFIRMATIONS

You can specify whether or not you want your phone to display messages when you begin or end a browser session.

To modify minibrowser confirmations settings:

- 1 Press **Menu 4-1-5 (Settings > Call settings > Minibrowser confirmation)**. The following four options will appear:

Option	Description
Both	Confirmation required before connecting to the Internet, and before you terminate a browser session.
None	No confirmation notes are displayed.

Option	Description
On connection	Phone asks you to confirm your awareness to possible charges incurred for Internet access.
On exit	Phone asks you to confirm your wish to end browsing.

- 2 Scroll to the appropriate option, then press **OK**.



**Tip:** To prevent unintentional exiting of the minibrowser session, select either the **Both** or **On exit** options. This ensures that a confirmation message appears before exiting.

- 3 Press and hold the **End** key to end the minibrowser session without confirmation (regardless of the minibrowser confirmation setting).

## 18 Reference information

### • USE ACCESSORIES SAFELY

This section provides information about the phone batteries, accessories, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and accessories change.

This phone is intended for use when supplied with power from an ACP-7, ACP-8, ACP-12, or LCH-9 charger. Other usage could invalidate any approval given to this apparatus and may be dangerous.



**Warning!** When you purchase batteries, chargers, and accessories for your phone, use *only* batteries, chargers, and accessories that have received approval from Nokia. The use of any other type may invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your service provider.



**Note:** For information on how to charge and recharge your battery, please see "Charge the battery" on page 13.

When the battery is fully charged, the indicator will tell you that the battery is fully charged.

When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime. If left unused, a fully-charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk or standby time is left, a warning tone is sounded and the phone switches itself off.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures below freezing.

Do not dispose of batteries in a fire!



**Warning!** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of properly.

## • IMPORTANT SAFETY INFORMATION

This section provides additional safety information. A brief overview of safety can be found in the section.

### Traffic Safety

Do not use a handheld telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

### Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

### Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of at least 6 inches (approximately 20 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are

consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 6 inches (20 cm) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- Switch off the phone immediately if you have any reason to suspect that interference is taking place.

### HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

### Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so.

Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic antiskid/antilock braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## POSTED FACILITIES

Switch your phone off in any facility where posted notices so require.

## Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in property and/or bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains

chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## Vehicles

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action or both.

## Emergency calls



**Important:** This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

## Make an Emergency Call

- 1 If the phone is not on, switch it on.
  - 2 Press the **End** key as many times as needed (for example, to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
  - 3 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
  - 4 Press the **Send** key.
- If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this user guide and your local cellular service provider.
  - When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your

wireless phone may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

## • CERTIFICATION INFORMATION (SAR)

### THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only

the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device.

The highest SAR value for this device when tested for use at the ear is 0.77W/kg.

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 2.2 cm away from your body.

In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

\* The SAR limit for mobile devices used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at [www.nokia.com](http://www.nokia.com).

## • CARE AND MAINTENANCE

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of small children.

- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside and may damage electronic circuit boards.
- Do not attempt to open the phone except to remove or change front and back covers. Nonexpert handling may damage it.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them are not working properly, take them to your

nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

## • MOBILE ENHANCEMENTS

If you want to enhance your phone's functionality, a range of accessories is available for you.



You can select any of these items to help accommodate your specific communication needs. For availability of these and other accessories, contact your service provider.

## A FEW PRACTICAL RULES FOR ACCESSORY OPERATION

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by Nokia. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous. Refer to "Use accessories safely" on page 90 for important battery usage information.

## • BATTERY INFORMATION



**Note:** The phone has a lithium ion (Li-Ion) battery. Dispose of batteries according to local regulations (for example, recycling). Do not dispose as household waste.

This section provides information about the phone battery. Be aware that the information in this section is subject to change.

The tables shown in this section provide information about the battery that is available for your phone, charging times with the Standard Travel Charger (ACP-7), the talk and standby times. Consult your service provider for more information.

### Charging Times

Charging times for the BL-5C Li-ion Battery (850 mA) are approximate:

Battery option:	ACP-7	ACP-12
BL-5C Li-ion	3 hrs	1 hr 15 min

### Standby and Talk Times

Mode	Talk time	Standby time
Digital	Up to 3 hrs and 30 min	Up to 12 days



**Note:** Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.

### Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that full performance of a new battery is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than 72 hours, since overcharging may shorten its lifetime. If left unused, a fully charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Battery will not charge at temperatures above 140°F (60°C).

## • CHARGERS AND OTHER ACCESSORIES

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the devices listed on the following pages.




**Warning!** Use only batteries, chargers, and accessories approved by Nokia for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

### Standard Charger (ACP-7)

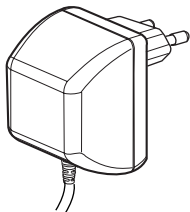

Note: The plug types vary according to different markets


This is a lightweight and durable ac charger.

To use the standard travel charger, plug it into a standard ac wall outlet and connect the lead from the charger to the base of your phone.



**Note:** If the battery is completely empty, you cannot use the phone until it has enough charge to operate.

### Rapid Travel Charger (ACP-8)

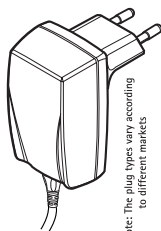


Note: The plug types vary according to different markets

This is a lightweight and durable ac charger. Calls can be made during charging, even with a fully discharged battery.

To use the Multi-voltage Charger (ACP-8), plug it into a standard ac wall outlet, and connect the lead from the charger to the base of your phone.

The charger can also be used together with the optional desktop charging stand. Approximate charging times for discharged batteries are shown in "Charging Times" on page 96.

## Travel Charger (ACP-12)

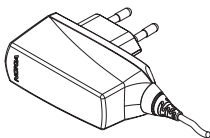


Note: The plug types vary according to different markets

This is a lightweight and durable ac charger. To use the standard travel charger, plug it into a standard ac wall outlet and connect the lead from the charger to the base of your phone.

## Rapid Mobile Charger (LCH-9)

You can charge your phone's battery from your vehicle battery by using the rapid mobile charger.

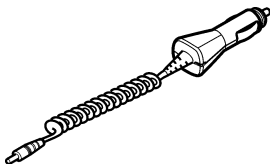

Calls are possible during charging. A green light indicates that the charger is ready for charging (when not charging). The battery charging times are the same as those for the multi-voltage charger (ACP-8).

The input voltage range is from 11 to 32 V-dc, negative grounding. Avoid prolonged charging with the Rapid Mobile Charger (LCH-9) when the car engine is not running; this could cause your car battery to drain. Note also, that in some cars, the cigarette lighter plug is not provided with electricity if the ignition is not switched on.

## Headset (HDB-4)



Small and lightweight, the Boom Headset fits over the ear. This headset has excellent audio quality with the microphone and speaker integrated into the unit. The Boom Headset provides basic handsfree functionality with an answer/end button.

See "Learn about the HDB-4 and HS-5 headset" on page 24, for more information.


## Headset (HS-5)



Small and lightweight, this headset fits over the ear. This headset has excellent audio quality with the microphone and speaker integrated into the unit. The headset provides basic handsfree functionality with an answer/end button.


See "Learn about the HDB-4 and HS-5 headset" on page 24, for more information.

### Connectivity Adapter Cable (DKU-5)

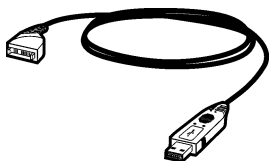


Easy and convenient connection to your PC or laptop computer for wireless modem functionality. DKU-5 is a USB cable that can be used with Nokia PC Suite and the DCV-15 Desktop charger with PC Sync.

### DCV-15 Desktop charger

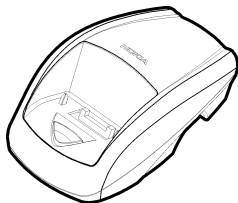


Used together with the standard travel charger or the rapid travel charger, the DCV-15 desktop charger allows you to charge your phone in an upright position, so that you have a clear view of the phone screen.

### Loopset (LPS-4)

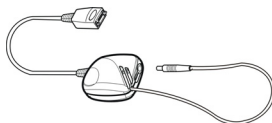


With the Nokia Loopset, people who use a T-coil equipped hearing aid have the freedom to talk on a digital mobile phone. The loopset goes around your neck so it can be worn comfortably and discreetly.

### BHF-1 Basic Car Kit

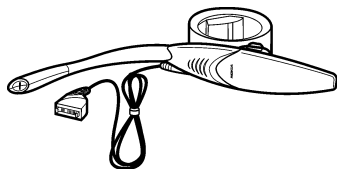

The BHF-1 Basic Car Kit offers a headrest handsfree option with an ergonomic design and easy installation.

### Mobile Holder (MBC-17)

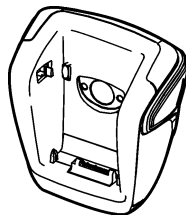

Holds phone securely in place while driving or during charging. Can be used with Rapid Cigarette Lighter Charger (LCH-9). This holder is used in the Car Kit (CARK-142) and can be used with BHF-1 Basic Handsfree Carkit.

## • NOKIA XPRESS-ON™ COLOR COVERS

The Xpress-on cover is available in several fashion colors. Xpress-on covers may be purchased from your authorised Nokia dealer.




**Warning!** Before changing the cover, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.

### REMOVE THE BACK COVER


Switch off the power. Disconnect the phone from the charger or any other device.

- 1 Push the release button on the back cover.

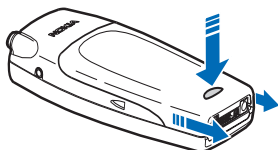

- 2 Slide the cover downward and lift off.

### REMOVE THE FRONT COVER

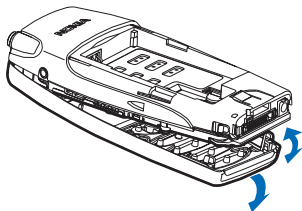


- 1 With the phone face down or up, grab the top of the front cover.
- 2 Gently pry the front cover away from the phone and lift the cover off the phone.




**Warning!** When the front cover is off the phone, be careful not to damage the phone screen face or the rubber gasket around it.

### REPLACE THE FRONT COVER

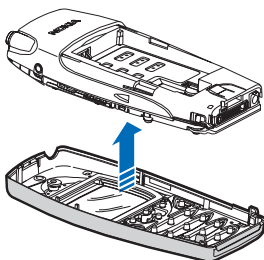

- 1 Align the keypad with the proper openings in the front cover.
- 2 Gently push the front cover into the phone until it clicks into place.

### REPLACE THE BACK COVER

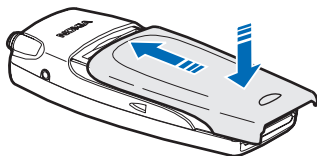

- 1 Insert the two catches of the back cover in the corresponding slots in the phone.
- 2 Slide the cover towards the bottom of the phone until it locks into place.

## • INDEX

### A

- ABC and 123 modes 26
- access codes
  - lock code 70
  - security code 69
- accessories
  - battery 96
  - loopset lps-4 99
  - mobile holder 99
- accessory
  - cigarette lighter charger 98
  - headset kit 98
  - standard travel charger 97
- activate
  - automatic redial 60
  - call forwarding 57, 59
  - TTY/TDD 52
- adjust the volume 24
- advanced calling features 57
- antenna
  - contact with 12
  - location 12
- Applications 81
  - launch 81
  - memory 82
- automatic redial 60
- Automatic update of service 73

### B

- battery
  - charging 13
  - important information 14
  - indicator 13
  - installing 12
  - prolonged charging 90
  - removal 13
- battery low indication 90

### C

- cable
  - connecting to a PC 84
- calculator 78
  - using 78
- calendar
  - alarms 77
  - day view 76
  - make a note 77
  - note types 77
  - note view 77
  - set the date 77
  - week list view 76
- call forwarding 59
  - activate 59
  - cancel 59
  - feature codes 58
- call restrictions 71
  - adding 72
  - editing 72
  - erasing 73
  - selecting 72
- call timers
  - clearing 38
  - turning on 38
- call waiting 59
  - answer a new call 59
  - switch between calls 59
- caller groups 35
  - assign a number 35
  - edit options 35
- calls
  - answer a call 16
  - call waiting 59
  - end a call 16
  - ignoring 7
  - make a call 16
  - phone lock 71

- redial last 7
- reject a call 16
- Speed dialling 64
- change letter case 27
- characters, entering 27
- charge the battery 13
- clock
  - automatic settings 54
  - displaying the clock 54
  - hiding the clock 54
  - set the time 53
  - time format 54
- color covers 100
- connecting to a PC 84
- Content Copier (PC Suite) 84
- convert currency 78
- currency
  - calculating 78, 79
- D**
- Data call timers 39
- Data Synchronisation (PC Sync) 84
- default number, specifying 34
- dialled calls, checking 36
- dictionary, add words 30
- Digital Data 84
- display language 53
- download
  - applications 82
- download a ringing tone 53
- dynamic memory 18
- E**
- edit a name or number 32
- e-mail 44
- emergency calls 93
- enter
  - characters 27
  - numbers 27
  - punctuation 27

- enter a space 26
- enter letters 26
- entering letters and numbers 26
- Entering text
  - change letter case 27
  - enter a space 26
- erase
  - mistakes 26
- erase mistakes 26
- erase names or numbers 33
- G**
- games 83
  - starting 83
- H**
- headset
  - connect 24
  - setup 24
  - use 24
- Headset Kit 98
- help 18
- I**
- icons 9
- in-call options 57
- J**
- Java applications 81
- K**
- keyguard 69
- keypad
  - about 16
  - lock 69
- keypad tones, setting 52
- keys, selection 15
- L**
- language setting 53
- letters, entering 26
- lock code 70
  - changing 71

lock keypad 69

loopset

description 99

## M

memory status, checking 35

menu

shortcuts 20

menu number and scroll bar 19

menu shortcuts 20

menu tips 19

menus, phone 18

message alert tone, setting 51

messages

e-mail messages 44

options 43

receiving via minibrowser 88

text 42

using templates 44

writing 42

Minibrowser

receiving messages via 88

Minibrowser timer options 39

missed calls, checking 36

mistakes, erasing 26

mobile holder 99

Modem Setup 84

## N

name or number edit 32

names or numbers, erasing 34

navigate phone menus 19

network services 10

subscribing 10

Nokia PC Suite 84

number type, changing 33

number types 33

numbers, add to message 30

numbers, entering 27

## O

options

in-call menu 57

## P

PC Connectivity 84

PC Suite

Content Copier 84

Instructions 84

PC Sync 84

PC Suite (application) 84

PC Sync (PC Suite) 84

phone book

add entries 31

add number to entry 33

add other info 34

caller groups 35

change number type 33

change views 32

default number 34

edit entry 32

erase names 34

erase numbers 34

erasing 34

menus 32

opening 31

phone book menu 23

phone book menu options 23

phone help 18

phone lock 70

activating/deactivating 71

allowed number 71

lock code 70

making a call 71

phone menus 18

phone symbols 17

power on your phone 14

predictive text 28

tips for 29

- turning off 29
- turning on 29
- profile
  - defined 50
  - personalising 50
  - renaming 52
  - selecting 50
- punctuation, entering 27

## Q

- quick save 31

## R

- Rapid Cigarette Lighter Charger 98
- received calls, checking 36
- remove the battery 13
- restrict calls 71
- ring options, setting 50
- ring volume 51
- ring volume, setting 51
- ringing tone, setting 51
- ringing tones, download 53
- rings and tones 50

## S

- save
  - e-mail address 35
  - phone book entry 31
  - street address 34
- scroll keys 19
- scroll through menus 19
- security 69
  - lock keypad 69
  - phone lock 70
  - security code 69
- security code
  - changing 70
- security settings
  - call restrictions 71
  - phone lock 70
- selecting call restrictions 72

- selection keys 15
- service provider
  - differences 10
  - signing up 10
- set the date 77
- set the ring volume and tone 51
- set up
  - your headset 24
  - your phone 12
- Setting time (manual) 54
- Setting time (network) 54
- shortcuts 19
- shortcuts, list of 20
- Snake II 83
- spaces, entering 27
- special characters 27
- specify a default number 34
- Speed dialling 64
  - setup 64
- Standard Travel Charger 97
- start screen
  - about 14
  - indicators 15
  - menu number 19
- starting a game 83
- strings, touch tone 66
- switch on your phone 14
- symbols displayed on your phone 17
- symbols, inserting 30

## T

- templates 44
- terms 9
- text conventions 9
- text messages
  - e-mail messages 44
- touch tones
  - length 66
  - manual 65

sending 66

storing 66

turn on your phone 14

## U

underlined words 29

understanding wireless network services 10

unlock keypad 69

use the headset 24

## V

vibrating alert, setting 51

view

calendar note 77

missed calls 36

new text messages 45

received calls 36

voice command

shortcut 8

Voice commands 55

voice commands

create a voice tag 55

using 56

voice dialling 62

dialling a number 63

important notes 62

voice tags 62

working with tags 56, 63

voice mail greetings 40

voice mail, setting up 40

voice messages, listening to 40

voice tags

add 62

change or erase 63

volume, adjusting 24

## W

warning and game tones, setting 52

welcome note, adding 55

wireless network services 10

## X

Xpress-on color covers 100