

Contents

Sony Ericsson T290i

Getting started 4

Make and receive the first call.

Getting to know your phone 7

Key functions, quick keys, entering letters and characters.

Personalizing your phone 21

Choose ring signal, theme and other settings.

Calling 28

Use the phonebook, call options.

Setting up Mobile Internet 42

Set up internet and e-mail.

Messaging 47

Chat, e-mail, text and picture messaging.

Using Mobile Internet 56

WAP browser, bookmarks.

More features 60

Events, alarm clock, stopwatch, timer, games.

Security 63

SIM card lock, phone lock.

Troubleshooting 65

Why doesn't the phone work the way I want?

Additional information 67

Sony Ericsson Consumer Web site, safe and efficient use, warranty, declaration of conformity.

Icons 75

What do the icons mean?

Index 79

Sony Ericsson T290i

GSM 900/1800

First edition (November 2004)

This user guide is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this user guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this user guide.

© 2004 Sony Ericsson Mobile Communications AB

All rights reserved.

Publication number: EN/LZT 108 7576 R1A

Please note:

Some of the services in this user guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are not sure whether you can use a particular service or not.

Please read the **Guidelines for Safe and Efficient Use** and the **Limited Warranty** chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

CommuniCam™ is a trademark or a registered trademark of Sony Ericsson Mobile Communications AB.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications.

T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Other product and company names may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

Sony Ericsson advises users to backup their personal data information.

All illustrations are for illustration only and may not accurately depict the actual phone.

Getting started

About this user's guide

For ease of reference, the “Getting to know your phone” chapter gives a quick overview of the main functions of the phone, shortcuts and general information.

More information and downloads are available at www.SonyEricsson.com.

Note: Throughout this user guide, *WAP* and *Web* are used interchangeably to refer to internet services.

Available services

Some services and functions described in this user's guide are network- or subscription-dependent. Because of this, some menus may not be available in your phone. This symbol indicates that a service or function is network or subscription-dependent.



Please consult your network operator for more information about your subscription.

The SIM card

When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your phonebook information.

Tip: Check if your information is saved to the SIM card before you remove it from another phone. For example, phonebook entries may be saved in the phone memory.

Assembly

Before you can use your phone you need to:

- Insert the SIM card.
- Attach and charge the battery. See “SIM card and battery information” on page 5.

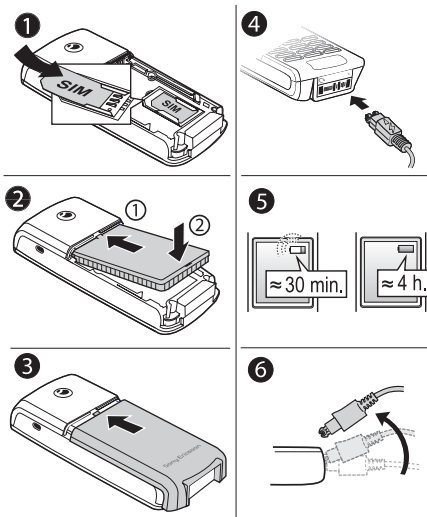
Note: Always turn off the phone and detach the charger before you insert or remove a SIM card.

SIM card and battery information

It may take up to 30 minutes before an icon appears when charging if the battery is completely discharged.

1. Insert the SIM card. Make sure the SIM card is placed under the metal clips.
2. Place the battery on the back of the phone with the connectors facing each other (label side up).
3. Place the back cover into the bottom of the phone and slide it up until it clicks into place.
4. Connect the charger to the phone at the flash symbol. The flash symbol on the charger plug must face upwards.
5. It may take up to 30 minutes before the battery charging icon appears in the display. Wait approximately 4 hours or until the icon indicates that the battery is fully charged. If you do not see the battery icon after this time, press any key or the centre select key to activate the display. The display will "sleep" during charging.
6. Remove the charger by tilting the plug upwards.

Note: *You have to insert the SIM card and charge the battery before you can use the phone.*



Holding the Phone

Hold your mobile phone as you would any other telephone. While speaking into the mouthpiece, angle the phone up and over your shoulder.

 
 


Internal Antenna

Your phone is equipped with an internal antenna. For best reception, try to hold your phone so your hand does not cover the internal antenna. The antenna is located on the back of the phone above the back cover.

Turning On the Phone

Press and hold **NO** until you hear a tone. Enter your PIN (Personal Identity Number), if you have one for your SIM card. Your PIN is provided by your network operator.



If you make a mistake while entering your PIN, delete the wrong number by pressing **C**.

If your PIN starts with the same digits as an emergency number, for example 911, the digits are not hidden with an * when you enter them. This is so that you can see and call an emergency number without entering a PIN. See “Emergency calls” on page 30 for more information.

Note: *If you enter the wrong PIN three times in a row, the SIM card is blocked and the message PIN blocked appears. To unblock it, you need to enter your PUK (Personal Unblocking Key). Your PUK is provided by your network operator.*

To make and receive calls

- Enter the area code and phone number, and press **YES** to make the call.
- Press **NO** to end the call.
- When the phone rings, press **YES** to answer the call.

Getting to know your phone

Key functions

Volume key Increase/decrease the earpiece volume during a call. Scroll through lists under menus. Enter the Phone status menu in standby. Press once to mute the ring signal when receiving a call. Press twice to reject an incoming call.

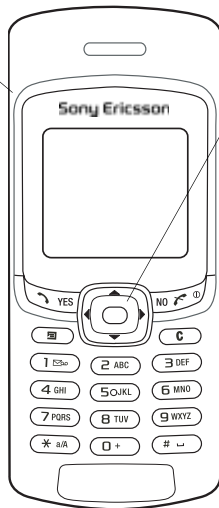


Make and answer calls. Select a menu, submenu or an option.



Press for options, help. Press and hold for WAP.

1-9, 0 Enter digits, 0-9, and letters. Press and hold (0+) to enter the international prefix +. Move through menus using shortcuts. Press and hold (2-9) to find a contact beginning with the first letter on that key.



Tilt the navigation key up, down, left or right to move through the menus, lists and texts. Press the centre select key as an alternative to **YES** to select an option.



Press and hold to turn the phone on or off (in standby) or to go back to standby mode from menus. Press to end or reject a call, go back one level in the menus or leave an option unchanged.



(clear)

Delete numbers, letters or an item from a list. Press and hold to mute the microphone (during calls) or mute the phone or lock the keypad (standby menu).



Enter # or a space.

Quick keys

Useful key combinations are described below.

To...	When in standby:
make an emergency call	enter the international emergency number and press YES
enter and move through the main menus	press ← or →
enter <i>Call contact</i>	press ↑ or ↓
enter <i>Call list</i>	press YES
call your voice mail	press and hold 1☎
enter the + sign	press and hold 0+
mute the ring signal when receiving a call	press C , or press one of the side volume keys once
write a new text message	press and hold ←
set the phone to silent or lock the keypad	press and hold C

To...	When in standby:
reach a contact beginning with a specific letter	press and hold any of the keys 2 - 9
reach a phone number at a specific position on the SIM card.	press the position number and #
speed dial	press any of the number keys 1☎ - 9 and YES
find a contact in the <i>Call contact</i> list	press and hold →
enter the Phone status menu to see today's date and the model name of the phone (may also indicate GPRS availability)	press the volume key up or down
reject a call	quickly press the upper or lower side volume key twice when receiving a call or press NO

To...	When in standby:
silence call ringer	quickly press the upper or lower side volume key once when receiving a call
change the language to <i>Automatic</i>	press ← 8888 →
change the language to English	press ← 0000 →
change the language to Chinese	press ← 0008 →

To...	During a call:
put a call on hold	press YES
retrieve the held call	press YES again
mute the microphone	press and hold C

 


To...	When in the menus:
move through menu lists	use the navigation key or press (and hold) the upper or lower side volume key
enter a quick options menu or help, if available.	press ⏏
delete an item	press and hold C when in lists
go back to standby	press and hold NO


To...	When entering letters using multitap text input:
reach the second letter or character of a key	press and hold the upper side volume key and press any of the number keys
reach the third letter or character of a key	press and hold the lower side volume key and press any of the number keys

To...	When entering letters using multitap text input:
shift between capital and lower-case letters	press , then the letter
enter numbers	press and hold any of the number keys
enter a question mark	press the upper side volume key and press
enter the @-sign	press the lower side volume key and press
enter a space	press
delete letters and numbers	press
shift between multitap or T9™ Text input methods (assuming T9 Text input is set to On)	press and hold

To...	When entering letters using multitap text input:
shift between input languages and other character or numeric input methods	press and hold

To...	When entering letters using T9 Text Input:
view alternative words	press or
accept a word and add a space	press
enter a period	press
view alternative punctuation marks	press , then or repeatedly
shift between capital and lower-case letters	press , then the letter
enter numbers	press and hold any of the number keys


To...	When entering letters using T9 Text Input:
delete letters and numbers	press 
shift between multitap or T9 Text input methods	press and hold 
shift between input languages and other character or numeric input methods	press and hold 

To...	When entering numbers:
enter a <i>p</i> (pause)	press and hold  when entering numbers or saving codes


Help texts/icons

More information, explanations or tips about selected menus or functions are available in your phone.

To get help

1. Scroll to the menu or function and press .
2. Select *Help* (if available), **YES**.

 

To access the Icon Glossary

1. Scroll to the menu or function and press .
2. Select *Icon glossary*.


Delete, edit and rename

If you add items, for example, a contact, an event or a web bookmark, it can be deleted, edited or renamed.

There are two ways to delete items:

- Select an item and press .
- Select an item, press , select *Delete* or *Delete all*.

There are two ways to edit items:

- Select an item, press , select *Edit*.
- Scroll to the item you want to edit and press **YES** twice, select *Edit*.

Tip: You can rename an item in the same way.

Menu overview

(1) Phonebook**



- 1 Call contact
- 2 Add contact
- 3 Manage contact
- 4 Pictures
- 5 Personal rings
- 6 Special numbers
- 7 Advanced
- 8 Options
- Find and send*

(2) Messages



- 1 Text
- 2 MMS
- 3 Call voice mail
- 4 E-mail
- 5 Chat
- 6 Push inbox
- 7 Area info **
- 8 Options

(3) Calls



- 1 Missed calls
- 2 Call list
- 3 Manage calls
- 4 Time and cost
- 5 Next call
- 6 Options
- Calling local**
- Switch to line 1**
- Switch to line 2**

or Ongoing call*



- 1 TurnOnSpeaker*
- TurnOffSpeaker*
- 2 Turn off tones*
- 3 Hold call*
- 4 Switch calls*
- 5 Release active*
- 6 Join calls*
- 7 Transfer call*
- 8 Release all*
- Extract part*
- Release party*
- Parties in conf.*
- 9 Calls*
- 10 Phone status*

Note:

(1) Main menu numbering does not appear (menu numbering may change with certain functions or services).

**Only available during a call or conference call.*

***Network- and subscription-dependent.*

(4) Pictures&Sounds



- 1 My pictures
- 2 More pictures
- 3 My sounds
- 4 More sounds
- 5 Themes
- 6 More Themes
- 7 Composer
- 8 Record sound
- 9 CommuniCam™

(5) Settings



- 1 Sounds & alerts
- 2 Display
- 3 Language
- 4 Time and date
- 5 Locks
- 6 Handsfree
- 7 Master reset

(6) Web services**



- 1 Sony Ericsson
- 2 Bookmarks
- 3 Push inbox
- 4 Enter address
- 5 Resume
- 6 Select profile
- 7 Advanced
- 8 Options

(7) Organizer



- 1 Events
- 2 Alarms
- 3 Timer
- 4 Stopwatch
- 5 Calculator

(8) Connect



- 1 GSM Networks
- 2 Data comm.
- 3 Accessories (if attached)

(9) Games**



Entering letters and characters

 
You can enter letters, for example, when you add names to the phonebook, write text messages or enter web addresses.


In addition to the way you normally enter letters in your phone, using multitap text input, you can use **T9™ Text Input** to enter text messages and e-mail, for example, if the input language you select supports this. T9 Text Input is a predictive input method and is a quicker way to write texts.

Input languages

Before you start entering letters, you need to select the input languages that you want to use when writing.

To select input languages

1. Scroll to *Settings*, **YES**, *Language*, **YES**, *Input*, **YES**.
2. Scroll to the language or alphabet that you want to use for entering letters and press  for each language you want.
3. Press **YES** to exit the menu.

When writing, you can switch to one of your selected input languages by pressing  and then selecting *Language*. See “The list of options” on page 20.

Chinese input

This mobile phone has different input methods for entering Chinese characters:

- Stroke input
- Pinyin input

You can use these methods to, for example, enter Chinese names and Chinese short messages.

Before you start

Chinese is the default language. If you want to select another language or input method before you start entering Chinese characters, please refer to the following procedures:

 
To select a menu language

Scroll to *Settings*, *Language*, *Menu*.

 
To select an input method

Scroll to *Settings*, *Language*, *Input*.

Switching between Chinese input methods


 

In the Chinese editing mode, you can select and switch quickly to another input method by pressing and holding .

 
Switching between Chinese and English input

In the Chinese editing mode, you can select and switch quickly to another input language by pressing and holding .

General instructions



 
Regardless of which input method you choose, your phone has a function to speed up the entry of Chinese characters. Whenever you enter a stroke or a Pinyin letter, a candidate row of the most frequently used characters containing that stroke or relating to that letter, appears at the bottom of the input area.

If the character you want is not displayed in the candidate row, press  to present another candidate row. Continue pressing  until the character you want is displayed. Alternatively, you can enter the next stroke or Pinyin letter and a new set of characters will immediately be displayed in the candidate row. To go back to the previous row, press . To enter a character

in the candidate row, move the cursor to that character and press **YES**. Alternatively, press and hold the key of which the number corresponds to the character position. For example, to enter the fourth character from the candidate row, press and hold .

Input methods in detail

Stroke input

A Chinese character is built up of strokes. There are more than 30 basic strokes, which are grouped into 5 stroke categories. Each category is represented on the keypad by one of the keys  - . The Wild Card key , is used when you are not sure of which stroke to use. For more information, please see “For example, to enter “信息”” on page 17 and “Example of using the Wild card key” on page 16.

Stroke categories

The 5 stroke categories and the mapping of stroke letters on the keypad are defined in the table below:

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
1 2 3 4	一	一	Over	王 十 在 七 天
		丿	Lift	海 红 牡 状 习
2	丨	丨	Down	中 业 上 门 丑
		㇏	Down-Hook	小 水 打 子 承
		丶	Short Slope Down	直 真 质 草
3	㇀	㇀	Long Left Slope	八 九 丹 风 片
		㇁	Over Slope	香 千 匕 后 丢
		㇂	Short left Slope	而 页 面 学 殷

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
4	㇀	㇀	Dot	六 学 雷 心 性
		㇁	Right Slope	人 火 又 送 林
		㇂	Down-Curved-Over	四 西 酉 酸
5	㇀	㇂	Down-Over	山 巨 屯 母 凶
		㇃	Left Slope-Over	么 去 公 约 能
		㇄	Left Slope-Dot	女 要 好 巡 巢
		㇅	Down-Lift	衣 以 饭 收 长
		㇆	Right Slope-Hook	我 或 民 成 伐
		㇇	Down-Over-Hook	心 必 思 忘
		㇈	Down-Over-Curved-Hook	电 也 毛 兄 孔

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
		㇏	Down-Over-Left Slope	专 传 转
		㇏	Down-Over-Down-Hook	马 与 张 号 费
		㇏	Down-Over-Down	鼎 鼐
		㇏	Over-Hook	写 字 皮 通 兔
		㇏	Over-Down	口 已 户 书 骨
		㇏	Over-Down-Hook	力 习 也 同 永
		㇏	Over-Left Slope	又 之 登 多 社
		㇏	Over-Down-Over-Left Slope	及 极 廷 建
		㇏	Over-Left Slope-Curved-Hook	阿 队 陈 那 部
		㇏	Over-Down-Over-Hook	乃 透 鼐 隹 杨

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
		㇏	Over-Down-Over-Down	凸
		㇏	Curved-Hook	狗 豹 家 逐 狂
		㇏	Over-Down-Curved-Hook	乙 九 瓦 飞 风
		㇏	Over-Down-Over	投 沿 船 凹
		㇏	Over-Down-Lift	话 计 认 讯
⓪	? (Wild card key)			

Example of using the Wild card key

The Wild card key (⓪), is used to supplement unclear strokes in entering characters. If you want to enter “五”, but you only know that “一” is the first and the last stroke of the character and that the total number of strokes is four:

- Enter (1⓪⓪), (⓪), (⓪), (1⓪⓪).
- The character is displayed in the candidate row.

Components

The basic building units of Chinese characters are components that are made of strokes. After entering the first stroke of the desired character, the component and character candidates that started with that stroke are displayed in the candidate row. Using components is a fast method for entering complex characters.

Note: *The smaller candidates surrounded by dotted frames are components, and the bigger candidates without dotted frames are characters.*

For example, to enter “信息”

1. Enter “丿”, “丨” and “丶”.
2. Move the cursor to “信”, **YES**.
3. Press **YES** again.
4. Select “息”.

Pinyin input

Press the keys containing the required Pinyin letters, and the phone will make various proposals on the display, according to the pronunciation rules of Mandarin.

Below is the key mapping of Pinyin letters on the keypad:

Number Key	Pinyin Letter
2	a b c
3	d e f
4	g h i
5	j k l
6	m n o
7	p q r s
8	t u ü
9	w x y z

Note: *On the keypad, the letter ü is replaced by v.*

For example, to enter “信息”

1. Press 9, 4, 6.
2. When “xin” is highlighted, move the cursor left or right and select “信”. If you want to enter any of the other suggested Pinyin combinations, scroll ↑ or ↓ to the desired combination, then press **YES**.
3. Select “息”.

Input punctuations, symbols and smilies

Under input mode, press **(*) a/A**, to see the table of punctuations, symbols and smilies. Press **(#)** to enter a space into the text.

Latin input

Multitap text input

When saving names in the phonebook or when writing web addresses, you enter letters using multitap text input. You press each key as many times as needed to show the letter you want. The following example shows how to write a name in the Phonebook.

Note: Multitap input only applies when latin characters are selected.

To enter letters using multitap text input

1. Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *Add contact*, **YES**, **YES** again.
2. Press the appropriate key, **(1 ☰)** - **(9)**, **(0+)** or **(#)**, repeatedly until the character you want appears. You can view the characters in the row that appears briefly at the top of the display when you press a key.

Note: Your selection of input languages and character or numeric input methods determines what you can see or enter.

See the Latin alphabet, abc, table below:

Press...	to see/enter...
(1 ☰)	- ? ! , . : ; ' " < = > () _ 1
(2)	A B C Å Ä Æ à Ç 2 Γ
(3)	D E F è É 3 Δ Φ
(4)	G H I i 4
(5)	J K L 5 Λ
(6)	M N O Ñ Ò Ø ò 6
(7)	P Q R S B 7 Π Σ
(8)	T U V Ü ù 8
(9)	W X Y Z 9
(0+)	+ & @ / % \$ € £ ¥ \ § ¨ ¡ 0 Θ Ξ Ψ Ω

Press...	to see/enter...
	Space # * _ ¶
	to delete letters and numbers
	to shift between capital and lower-case letters
-	press and hold to enter numbers

Example:

- To enter an 'A', press once.
- To enter a 'B', quickly press twice.
- To shift between capital and lower-case letters, press , then enter the letter.

Tip: You can also use the volume key as a shortcut to certain letters. To enter a 'B', press and hold the upper side volume key and press . To enter a 'C', press and hold the lower side volume key and press .

T9™ Text Input

You can use T9 Text Input when writing, for example, text messages and e-mail. The T9 Text Input method

uses a built-in dictionary to recognize the most commonly used word for each sequence of key presses. This way, you press each key only once, even if the letter you want is not the first letter on the key.

Note: A language must be selected to be able to use the T9 Text Input method.

To turn T9 Text Input on or off

 
Note: You can toggle T9 Text Input on/off by pressing and holding .

The following example shows how to start writing a text message:



To enter letters using T9 Text Input






 
1. Scroll to Messages, **YES**, Text, **YES**, Write new, **YES**.
2. For example, if you want to write "lane", press , , .
3. Press or repeatedly to view alternative words (candidates).
4. If the word shown is the one you want:
 - press to accept and add a space.
 - press or **YES** to accept without a space.

If the candidates do not include a word you want, you can add a new word to the list during selection.

 
Note: *To enter a digit while typing text, press and hold the digit key. For example, to enter a '5', press and hold .*

To add a word to candidates

1. Scroll to a similar candidate to the word you want to add, press , select *Spell word*, **YES**.
2. Press  repeatedly to delete one letter at a time. Write the new word using multitap text input, **YES**. The word is added to the dictionary. The next time you enter the word you just added to the dictionary, it appears as one of the alternative words.
3. Continue writing your message. See also “Sending text messages” on page 48.

Tip: *Press  to enter a period. To enter other punctuation marks, press  and then  or  repeatedly. Press  to accept and add a space. Press and hold  to select an input method for the text you are currently writing.*

The list of options

Press  when writing to enter a list of options:

- *Add symbol* – Symbols and punctuation marks are shown. Move between symbols with the centre select key.
- *Insert item* – Add a picture, sound effect, melody or animation to a message.
- *Spell word* – For T9 Text Input only. Edit the suggested word by using multitap text input.
- *Text format* – Edit size, style, alignment or start a new paragraph.
- *Language* – Show the input language selected earlier.
- *Input method* – A list of input methods available for the current input language is shown.
- *Candidates* – For T9 Text Input only. A list of alternative words is shown.
- *Help*.

Personalizing your phone

You can adjust the phone settings to suit your own requirements.

Themes

You can change the appearance of the display, for example, the colours and background picture, by using themes. Your phone comes with some pre-set themes. You cannot delete these, but you can create new themes on the Sony Ericsson Mobile Internet and download them to your phone. For more information, visit www.SonyEricsson.com.

To select a theme


- Scroll to *Pictures&Sounds*, **YES**, *Themes*.

Note: *If you need to adjust the display contrast, scroll to *Settings*, **YES**, *Display*, **YES**, *Contrast*.*

Exchanging themes

You can send and receive a theme via multimedia messaging (MMS), interchangeable with picture messaging, and e-mail or download it via WAP. For more information on sending themes in messages, see “Messaging” on page 47.

To send a theme

1. Scroll to *Pictures&Sounds*, **YES**, *Themes*.
2. Highlight a theme, press .
3. Select *Send*, **YES**.
4. Select a transfer method, **YES**.

Note: *You are not allowed to exchange copyright-protected material.*

Pictures

Your phone comes with a number of pictures. You can:

- Set a picture as background when in standby mode.
- Assign a picture to a contact in the phonebook. When that person calls, the picture appears in the display (provided your subscription supports the Calling Line Identification service). See “To add a picture to a phonebook contact” on page 33.
- Enclose a picture in a text message.
- Send a picture via picture messaging or e-mail.

All pictures are saved in *Pictures&Sounds*, **YES**, *My pictures*.

Handling pictures

You can also add, delete or rename pictures in *My pictures*. The number of pictures that can be saved depends on the size of the pictures. File types supported are GIF, JPEG and WBMP.

To view your pictures

- Scroll to *Pictures&Sounds*, **YES**, *My pictures*. The pictures are shown in thumbnail view. To get a full view, press **YES**.


Note: Animations for picture messages can be viewed in *My pictures*. Animations for text messages can only be viewed when inserting an item in a text message. See “To insert an item in a text message (EMS)” on page 48.

To view your camera pictures (if connected)

- Scroll to *Pictures&Sounds*, **YES**, *CommuniCam™* or
- Scroll to *Connect*, **YES**, *Accessories*.

To select a picture as background

1. Scroll to *Settings*, **YES**, *Display*, **YES**, *Wallpaper*.
2. Select *Set picture*, **YES**.
3. Select a picture, **YES**.

Tip: When viewing your pictures, you can set a background by pressing .

To turn the background picture On or Off


- Scroll to *Settings*, **YES**, *Display*, **YES**, *Wallpaper*, **YES**, *Activate*.

Exchanging pictures

You can send pictures via picture messaging or e-mail and receive via picture messaging. For more information on sending pictures in messages, see “Messaging” on page 47.

Note: You are not allowed to exchange copyright-protected material.

To send a picture

1. Scroll to *Pictures&Sounds*, **YES**, *My pictures* or *CommuniCam™*.
2. Highlight a picture, **YES**. Press .
3. Select *Send*, **YES**.
4. Select a transfer method.

- When you receive a picture via a text message or a picture message, a new message appears in your Inbox. Highlight the picture in the message, press **[Enter]** and select *Save* to save in *My pictures*.

Ring signals and melodies

Your phone comes with a number of standard and polyphonic melodies that can be used as ring signals. You can create and edit standard melodies, and send them to a friend in a text or picture message. You can also download standard and polyphonic melodies via WAP.

Note: *You are not allowed to exchange copyright-protected material.*

To select a ring signal

- Scroll to *Settings*, **YES**, *Sounds & alerts*, **YES**, *Ringtones*.

To set the ring signal volume

- Scroll to *Settings*, **YES**, *Sounds & alerts*, **YES**, *Ring volume*, **YES**.
- Press **←** or **→** to increase or decrease the volume.
- Press **YES** to save the setting.

Warning! *Exposure to excessive ring volume may damage hearing. Answer the call or lower the volume before placing the phone at your ear.*

To turn the ring signal on or off

- Press and hold **[C]** from standby and select *Turn on silent* or *Turn off silent*. All signals except the alarm and timer signals are turned off.

To compose a ring signal or melody

- Scroll to *Pictures&Sounds*, **YES**, *Composer*, **YES**.

- Press **[1234567890*#]** - **[7]** to enter a note.


- Press **[8]** or **[9]** to make the note shorter or longer.

There are six different lengths of notes.

- Press **[0+]** to change octave.
- Press **[# -]** once to raise the note one semitone.
- Press **[# -]** twice to lower the note one semitone.
- Press **[Enter]** to add a melody effect, and to set the tempo, volume, style and duration.
- Press **[* a/A]** to enter a pause (rest).
- Press **[C]** to remove notes.

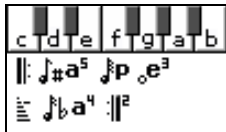


2. To listen to your melody, press **YES**.
3. Press **YES** again to save and name it, or press **NO** to continue composing.

Note: To edit a melody, scroll to *Pictures&Sounds*, **YES**, *My sounds*, select the melody and press .

To use the piano

1. In the *Composer*, press the upper or lower side volume key to activate the piano.
2. Use the centre select key to move between the keys.
3. Press **YES** to select a note.
4. Press the upper or lower side volume key to deactivate the piano.




See "Icons" on page 75.

Exchanging melodies

You can send and receive a sound or melody via SMS or MMS, or download it via WAP.

Note: You cannot exchange a polyphonic melody via SMS.

To send a melody

1. Scroll to *Pictures&Sounds*, **YES**, *My sounds*, **YES**.
2. Select a melody and press .
3. Select *Send*, **YES**.
4. Select a transfer method.

Note: To send a ring signal or melody in a text message, see "To insert an item in a text message (EMS)" on page 48.

Increasing ring

You can choose a ring signal that rises in steps from the lowest volume to the highest.

To turn increasing ring On or Off

- Scroll to *Settings*, **YES**, *Sounds & alerts*, **YES**, *Increasing ring*.

Specific ring signals for personal calls

If you subscribe to the Two Line Service, you can set different ring signals for the two voice lines. *Line 1* and *Line 2* are displayed instead of *Voice calls*.



If your subscription includes the Calling Line Identification (CLI) service, you can assign a personal ring signal to numerous callers.

To set a specific ring signal for a caller

1. Scroll to *Phonebook*, **YES**, *Personal rings*, **YES**, *Add new?*, **YES**.
2. Enter the first letter of the contact name, **YES**.
3. Select a contact, **YES**.
4. Select a ring signal, **YES**.

Note: *You cannot assign a ring signal to a number stored only on your SIM card.*

Sounds & alerts

You can choose to be notified of an incoming call by the buzzing of the vibrating alert. You can set the phone's vibrating alert to one of the following:

- *On* – all the time.
- *On if silent* – on when the ring volume is turned off or when you have set the phone to silent.
- *Off* – all the time.

To set the vibrating alert

1. Scroll to *Settings*, **YES**, *Sounds & alerts*, **YES**, *Vibrating alert*, **YES**.
2. Select the setting you want, **YES**.

From *Settings*, **YES**, *Sounds & alerts*, you can also select:

- *Alarm signal* that you hear during an alarm.
- *Message alert* when messages are received.
- *Key sound* when using the keypad.
- *Minute minder* to beep after every minute during calls.

Menu language

Most SIM cards automatically set the menu language to the language of the country/region where you bought your SIM card. If this is not the case, the preset language is English.

 
To change the menu language

1. Scroll to *Settings*, **YES**, *Language*, **YES**, *Menu*, **YES**.
2. Select a language, **YES**.

Display light

The display light can be set to automatic, off, or on. In automatic mode, the display light is turned off a few seconds after you press the last key.

Note: *The display light, if set to On, consumes extra battery power and reduces standby time.*

Note: *If keylock is on, the display light will only activate when  is pressed.*

To set the display light

- Scroll to *Settings*, **YES**, *Display*, **YES**, *Light*.

To set the display contrast

- Scroll to *Settings*, **YES**, *Display*, **YES**, *Contrast*.

Time settings

The time is always displayed in standby.


To set the time

- Scroll to *Settings*, **YES**, *Time and date*, **YES**, *Set time*.

You can choose a 12-hour clock or a 24-hour clock.

To set the time format

- Scroll to *Settings*, **YES**, *Time and date*, **YES**, *Time format*.

Note: *If you select the 12-hour clock, you can alternate between am and pm by pressing  when setting the time.*

Date

When the phone is in standby mode, you can press the upper or lower side volume key to see today's date in the Status menu.

To set the date and/or date format

- Scroll to *Settings*, **YES**, *Time and date*.

Advanced time settings

Under *Advanced* in the *Settings*, **YES**, *Time and date* menu, you can set time zone and daylight savings time. Making these changes alters the time accordingly, if your network operator supports this service.



Note: *Contact your network operator for more information.*

Answering mode

When using a portable handsfree kit, you can choose to answer a call by pressing any key (except the **NO** key) or set the phone to answer the call automatically.

To select answering mode

- Scroll to *Settings*, **YES**, *Handsfree*, **YES**, *Answering mode*.
- Scroll to the option that you want.
- Press the left softkey to select.

User greeting

When you turn your phone on or off, the Sony Ericsson greeting appears. Your network operator's own greeting may be shown instead.

To select a greeting

1. Scroll to *Settings*, **YES**, *Display*, **YES**, *Start-up picture*, **YES**.
2. Select a greeting, **YES**.
Your selected greeting will be shown when the phone is turned on.

My phone numbers

You can check your own phone number(s).

To check your phone number

- Scroll to *Phonebook*, **YES**, *Special numbers*, **YES**, *My numbers*. If your number is not saved on your SIM card, you can enter it yourself.

Keypad lock

You can lock the keypad to avoid dialling a number by accident.

Note: *Calls to emergency numbers can still be made, even when the keypad is locked.*

 
Automatic keylock

Automatic keylock means the keypad is locked 25 seconds after you last press a key.

To turn automatic keylock On or Off

- Scroll to *Settings*, **YES**, *Locks*, **YES**, *Auto keylock*.

To lock the keypad manually

- Press and hold  in standby, and select *Lock keypad*, **YES**.

The keypad remains locked until you answer an incoming call or until you unlock the keypad manually.

To unlock the keypad

- Press **C** when prompted with *Unlock keypad?*, press **YES**.

Master reset

Reset settings allows you to reset all the settings in the phone to the factory defaults. Factory defaults are not necessarily the same settings as when you purchased your phone.

Reset all allows you to reset all the settings in the phone to the factory defaults, resets your data and WAP account settings, and may delete user- downloaded images, ringtones and templates.

Note: *Before choosing Reset all, check with your service provider.*

To reset the phone

1. Scroll to *Settings*, **YES**, *Master reset*.
2. Select *Reset settings* or *Reset all*, **YES**.
3. Enter the phone lock code (0000 or the new code if you have changed it) and press **YES**.

Calling

Before you can make or receive any calls, you must turn on the phone and be within range of a network. See “Holding the Phone” on page 6.

Making calls

1. Enter the area code and the phone number.
2. Press **YES** to make the call.
3. Press **NO** to end the call.

Tip: *You can call numbers from the call list and the phonebook. See “Call list” on page 31 and “Phonebook” on page 32.*

To change the earpiece volume during a call

- Press the upper or lower side volume key to increase or decrease the earpiece volume.

To mute the microphone during a call



- Press and hold **C** until the display shows *Muted*. Press **C** again to resume the conversation. To mute the ringer, see “To mute the ringer” on page 31.

Using the speakerphone during a call

You can use your phone as a speakerphone during a call, for example, when you want others to participate in a conversation or when you need to have your hands free during the call. Your speakerphone works best in a quiet environment.

Note: *While the speakerphone is on, do not hold the phone close to your ear as this may cause damage to your hearing. Place the phone about 30-50 cm (12-20 inches) in front of you and with the microphone facing you.*

To turn the speakerphone on or off

1. During a call, press .
2. Press **YES** to select *TurnOnSpeaker*. If you want to turn off the speakerphone at any time during the call, press  and then press **YES** to select *TurnOffSpeaker*.
3. When your call ends, the speakerphone is automatically turned off.

Note: *The speakerphone is not available when you use your phone with any handsfree equipment.*

Automatic re-dialling

If the connection of the call failed and the display shows *Retry?*, press **YES**.

 
Note: *Do not hold the phone to your ear while waiting. When the call is connected, the phone gives a loud signal.*

The phone re-dials the number (up to ten times) or until:

- The call is connected.
- You press a key or receive a call.

Note: *Automatic re-dialling is not available for data calls.*

Making international calls

1. Press and hold  until a + sign appears in the display. The + replaces the international prefix number of the country/region from which you are calling.
2. Enter the country/region code, area code (without the leading zero) and phone number, **YES**.

Tip: *It is useful to enter the + sign and country/region code for **all** numbers in the phonebook as they can then be easily used whether home or abroad.*

Emergency calls

To make an emergency call

- Enter 112, **YES**.
Your phone supports the international emergency numbers, 112, 911 and 08. This means that these numbers can normally be used to make an emergency call in any country/region, with or without a SIM card inserted, if a GSM network is within range.

Note: *Some network operators may require that a SIM card be inserted, and in some cases that the PIN has been entered as well.*

In some countries, other emergency numbers may also be promoted. Your operator may therefore have saved additional local emergency numbers on the SIM card.

To view your local emergency numbers

- Scroll to *Phonebook*, **YES**, *Special numbers*, **YES**, *SOS numbers*.

Voice mail

If your subscription includes an answering service, callers can leave a voice mail message when you cannot answer a call.



Receiving a voice mail message

Depending on your network operator, you are informed that someone has left a message by a text message (SMS) or by a voice mail icon that indicates the number of voice mail messages waiting (📞).

Calling your voice mail service

You can easily call your voice mail service by pressing and holding (1☎), if you have saved your voice mail number in the phone. You get the number from your service provider.

To enter a voice mail number

- Scroll to *Messages*, **YES**, *Options*, **YES**, *Voice mail no.*

Note: *The voice mail number can be obtained from your service provider.*

Receiving calls

When you receive a call, the phone rings and *Answer?* appears. If the number is a restricted number, *Withheld* or *Unknown* appears.

To answer a call

- Press **YES**.

To reject a call

- Press **NO**.

To mute the ringer

Press the upper or lower side volume key. To mute the microphone during a call, see “To mute the microphone during a call” on page 28.

Missed calls

If you have missed a call, *Missed calls: 1* appears in standby, indicating the number of missed calls.


To check your missed calls

1. When *Missed calls: 1* is displayed, press **YES** to display the missed calls.
2. To call a number from the list, scroll to the number, **YES**.

Call list

The numbers of the last calls that you have made or received are saved in the call list. If your subscription includes the Calling Line Identification service, and the caller's number is identified, you will also find the numbers of answered and missed calls in the call list.

Note: *Your last outgoing call will always be listed first. All other incoming/outgoing calls are listed in time-sequential order.*

Note: *If a number is stored on your SIM card, the  icon will display next to the number.*

To call a number from the call list

1. To enter the call list, press **YES** from standby.
2. Scroll to the number you want to call, **YES**.

To clear the call list

- Scroll to *Calls*, **YES**, *Options*, **YES**, *Clear call list*, **YES**.

To turn the call list on or off

- Scroll to *Calls*, **YES**, *Options*, **YES**, *Call listing*, **YES**.

Phonebook

You can store contact information (names, phone numbers, e-mail addresses, and so on) in the phone's internal phonebook. There is space for up to 250 contacts.

You can copy the complete list of contacts from your internal phonebook to the SIM card and vice versa. Information on the SIM card is more portable since you can easily move your SIM card from one phone to another.


Note: *When you copy contacts to your SIM card, existing contacts on the SIM card will be deleted. The memory capacity of your SIM card varies.*

There are some other functions, such as assigning personal ring signals and picture phonebook that can only be used for contacts stored in the phone's internal phonebook. Personal ring signals and pictures are deleted from the contact information when you copy the contacts to the SIM card.

To add a contact

1. Scroll to *Phonebook*, **YES**, *Add contact*, **YES**.
2. Scroll to the field you want to fill in, press **YES**.

3. Enter the information, **YES**.
4. Select the next field and so on.
5. When you have entered the information, scroll to *Save and exit?*, **YES**.

Tip: *To enter an unsaved number, press  when you are in a number field, and select a number in the unsaved numbers list.*

Ask to save

You have the option of storing a dialled number as a phonebook contact upon call completion. If the phone number is already saved in your phonebook you will not be prompted to save it in your phonebook again.

To turn off Ask to Save

1. Scroll to *Phonebook*, **YES**, *Options*, **YES**.
2. Select *Ask to save* by pressing **YES**.
3. Select on or off by tilting the navigation key up or down.
4. Press **YES** to select.

Pictures and personal rings

You can add a picture and a personal ring signal to a contact.

To add a picture to a phonebook contact

1. Scroll to *Phonebook*, **YES**, *Pictures*, **YES**.
2. Enter the first letters of the contact, **YES**.
3. When the contact is highlighted, press **YES**.
4. This takes you to *My pictures*. Select a picture and press **YES** twice.

To add a personal ring to a phonebook contact

1. Scroll to *Phonebook*, **YES**, *Personal rings*, **YES**, *Add new?*, **YES**.
2. Enter the first letters of the contact, **YES**.
3. Scroll to the contact you want to select and press **YES**.
4. Scroll to the personal ring that you would like to select, **YES**.

To call a contact when Chinese has been selected as phone language

- For contacts written in Chinese characters.
1. Select *Phonebook*, **YES**.
 2. Select *Call contact*, and press **YES** twice.
 3. Press and hold (#) to switch the search mode to Chinese. Then enter the first Chinese (PinYin) letters of the name you want to call.
 4. Select the name you want to call, press **YES**.
 5. Select the number, press **YES**.

- For contacts in written in Latin letters:

1. Select *Phonebook*, **YES**.
2. Select *Call contact*, and press **YES** twice.
3. Press and hold (#) to switch the searchmode to English. Then enter the first letters of the name you want to call.
4. Select the name you want to call, press **YES**.
5. Select the number, press **YES**.

To call a contact when English has been selected as phonelanguage

- For contacts written in Chinese characters:

1. Select *Phonebook*, **YES**.
2. Select *Call contact*, and press **YES** twice.
3. Scroll to the contact you want to call, press **YES**.
4. Select the number, press **YES**.

- For contacts written in Latin characters.

1. Select *Phonebook*, **YES**.
2. Select *Call contact*, and press **YES** twice.
3. Scroll to the contact you want to call, press **YES**.
4. Select the number, press **YES**.

Note: You can also reach the *Call contact* from stand-by, by pressing **↑** or **↓**.

To call an entry on your SIM card

1. Scroll to *Phonebook*, **YES**, *Advanced*, **YES**, *Call from SIM*, **YES**.
2. Enter the first letters of the entry on the SIM card that you want to call. Press **YES**.
3. When the SIM card entry you want to call is highlighted, press **YES**.

Updating the phonebook

When needed, you can easily update or delete any contact information.

To edit a contact

1. You can edit a contact that is stored in your phonebook. Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *Edit contact*, **YES**.
2. Enter the first letters of the contact, **YES**.
3. When the contact is highlighted, press **YES**.
4. Select *Edit info*, **YES**.
5. Scroll to the field you want to fill in, **YES**.
6. Enter the information, **YES**.
7. When you have entered the information, scroll down to *Save and exit?*, **YES**.

- To delete a contact, scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *Delete contact*. Then select the contact and press **YES** twice.
- To delete all contacts, scroll to *Phonebook*, **YES**, *Advanced*, **YES**, *Delete all*. Then press **YES** twice, insert your phone lock code and press **YES**.

Note: *Entries on the SIM card are not deleted when you select Delete all.*

Default (standard) number

Each contact has a default phone number. The first phone number you link to a contact automatically becomes the default number. If you scroll to a certain contact in the *Call contact* list and then press and hold **YES**, the default number is dialled.

To set the default number

1. Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *Edit contact*, **YES**.
2. Enter the first letter of the contact, **YES**.
3. When the contact is highlighted, press **YES**.
4. Select *Default number*, **YES**. Select the number you want as default, **YES**.

Groups

You can create a group of contacts. By doing so, you can send text messages to several recipients at the same time. See “Sending text messages” on page 48.

To create a group of contacts

1. Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *Groups*, **YES**, *New group*, **YES**.
2. Enter a name for the group, **YES**.
3. Select *New member*, **YES**.
4. Enter the first letters of the contact you want to add, press **YES**.
5. Press **YES** to select the contact.
6. Select a phone number, press **YES**.
7. Repeat steps 3-6 to add more members.
8. Press **NO** to finish.

Business cards

You can add your own business card to the phonebook.

To add your own business card

- Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *My card*, **YES**. Select *Add*, **YES**.

Exchanging business cards

You can exchange business cards as a text message or a picture message.

To send your business card

1. Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *My card*, **YES**, *Send*, **YES**.
2. Select a transfer method, **YES**.

To save a business card in a picture message

1. Scroll to *Messages*, **YES**, *MMS*, **YES**.
2. Scroll to *Inbox*, **YES**, select the message, **YES**.
3. Scroll to the business card item, press **YES** to accept it.

To send a contact

1. Scroll to *Phonebook*, **YES**, *Manage contact*, **YES**, *Send contact*, **YES**.
2. Enter the first letters of the contact you want to send, **YES**.
3. Press **YES** to select the contact.
4. Select transfer method, **YES**.

Copy contacts

You can copy the names and numbers in your phonebook between your phone's memory and the SIM card. The number of phone numbers that can be saved depends on the type of SIM card.


Note: *When you copy contacts to your SIM card, existing contacts on the SIM card will be deleted. Be careful not to replace details by mistake.*

To copy names and phone numbers to the SIM card

- Scroll to *Phonebook*, **YES**, *Advanced*, **YES**, *Copy all to SIM*.

To copy names and phone numbers to the phone

- Scroll to *Phonebook*, **YES**, *Advanced*, **YES**, *Copy from SIM*.

Tip: *When you have selected a name in the Call from SIM menu, you can copy name and phone number to the phone by pressing  and then selecting Copy to phone.*

Speed dialling

You can save the phone numbers that you want to reach easily in positions 1-9 on your SIM card.

To call any of these phone numbers from standby

- Enter the position number and press **YES**.

To change position numbers

1. Scroll to *Phonebook*, **YES**, *Advanced*, **YES**, *Position list*, **YES**.
2. Select the phone number you want to move, **YES**.
3. Select the position to which you want to move the phone number, press **YES**.
4. When finished press **NO** to exit, **YES** to save to SIM.

Call time

During a call, the duration of the call is shown in the display.

You can check the duration of your last call, outgoing calls and the total time.

To check and reset the call time

- Scroll to *Calls*, **YES**, *Time and cost*, **YES**, *Call timers* and select an option.
- Select *Reset timers* to reset the call time metre.

Diverting calls

If you cannot answer incoming voice or data calls, you can divert them to another number: for example, your answering service.

For voice calls, you may be able to choose between the following divert alternatives:

- *Divert always* – divert all voice calls.
- *When busy* – divert calls if you are already on the phone.
- *Not reachable* – divert calls if your phone is turned off or if you are unreachable.
- *No reply* – divert calls that you do not answer within a specified time limit (operator-dependent).

Note: *When the Restrict calls function is on, some Divert calls options cannot be activated.*

To turn on call diverting

1. Scroll to **Calls, YES, Manage calls, YES, Divert calls, YES.**
2. Select a call category and then a divert alternative, **YES.**
3. Select **Activate, YES.**
4. Enter the phone number to which you want your calls to be diverted and press **YES**, or retrieve it from the phonebook.



To turn off a call diverting option

- Select a diverting option and select *Cancel*.

To check status

1. Scroll to **Calls, YES, Manage calls, YES, Divert calls, YES.**
2. Select a call type, **YES.**
3. Scroll to the diverting you want to check, **YES.**
Select *Get status, YES.*

To check the status of all call diverting

- Select *Check all* in the *Divert calls* menu.

More than one call

You can handle more than one call simultaneously. For example, you can put an ongoing call on hold, while you make or answer a second call, and then switch between the two calls.

Note: *During a call, the Ongoing call menu replaces the Calls menu.*



Call waiting service


If the call waiting service is activated, you hear a beep in the earpiece if you receive a second call during an ongoing call.

To activate or deactivate the call waiting service

- Scroll to **Calls**, **YES**, **Manage calls**, **YES**, **Call waiting**.

To make a second call

1. Press **YES** to put the ongoing call on hold.
2. Enter the number you want to call and press **YES**, or retrieve a number from the phonebook.



Note: *You can only put one call on hold. You can also reach different options by pressing .*

Receiving a second call

- To answer the second call and put the ongoing call on hold, press **YES**.
- To reject the second call and continue the ongoing call, select *Busy*.
- To answer the second call and to end the ongoing call, select *Release&answer*.

Handling two calls

When you have one ongoing call and one call on hold, you can do the following:

- Press **YES** to switch between the two calls.
- Press , then select *Join calls* to join the two calls into a conference call.
- Press , then select *Transfer call*, to connect the two calls. You are disconnected from both calls.
- Press **NO** to end the ongoing call, then press **YES** to retrieve the held call.
- Press **NO** twice to end both calls.

Note: *You cannot answer a third call without ending one of the first two calls.*

Conference calls

In a conference call, you can have a joint conversation with up to four other people. You can also put a conference on hold and make another call.




Creating a conference call


To create a conference call, you must first have one ongoing call and one call on hold.

- To join the two calls into a conference call*
- Scroll to *Ongoing call*, **YES**, *Join calls*, **YES**.

To add a new participant

1. Press **YES** to put the conference call on hold.
2. Call the next person you want on the conference call.
3. Press , select *Join calls*, **YES**.
Repeat steps 1 to 3 to include more participants.

To release a participant


1. Press , select *Release party*, **YES**.
2. Select the participant, **YES**.

To end the conference call

- Press **NO**.

Having a private conversation

You can have a private conversation with one of the participants and put the other participants on hold.

- Press , then select *Extract part* to select the participant that you want to talk with.
- Select *Join calls* to resume the conference call, again.

Restricted dialling

You can use the restrict calls service to restrict outgoing and incoming calls. This may be useful, for example, when you are abroad. To use this service, you need a password which you get from your service provider.



Note: *If you divert incoming calls, you cannot activate some Restrict calls options.*

The following calls can be restricted:

- All outgoing calls – *All outgoing*.
- All outgoing international calls – *Outgoing intl*.
- All outgoing international calls except to your home country/region – *Outg. intl roam*.
- All incoming calls – *All incoming*.
- All incoming calls when you are abroad (when roaming) – *Inc. when roam*.

To turn a call restriction on or off

1. Scroll to *Calls*, **YES**, *Manage calls*, **YES**, *Restrict calls*, **YES**.
2. Select an option, **YES**.
3. Select *Activate* or *Cancel*, **YES**.
4. Enter your password, **YES**.

- To turn off all call restrictions, select *Cancel all*.
- To change the password, select *Change passwd*.

Fixed dialling

The fixed dialling function allows calls to be made only to certain numbers saved on the SIM card. Fixed dialling requires a SIM card that allows fixed numbers to be saved. The fixed numbers are protected by your PIN2.



Note: *Calls to emergency numbers can still be made, even when the fixed dialling function is on.*

- Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456.
- Numbers with question marks can be saved. For example, saving 01234567?0, allows calls to be made to numbers from 0123456700 to 0123456790. To enter a question mark, press and hold (# →).

To turn fixed dialling on or off

1. Scroll to *Phonebook*, **YES**, *Options*, **YES**, *Fixed dialling*, **YES**.
2. Enter your PIN2, **YES**.
3. Select *On* or *Off*, **YES**.

To save a fixed number

- Scroll to *Phonebook*, **YES**, *Special numbers*, **YES**, *Fixed numbers*. Select *Add new?* and enter the number.

Note: *You can view fixed numbers when fixed dialling is on, but fixed dialling must be off to add new numbers to the list or to edit numbers already in the list.*

Closed user groups

The Closed User Group function is a way of lowering call costs. On some networks it is cheaper to make calls within a call group. You can save ten groups.



To add a group

1. Scroll to *Calls*, **YES**, *Manage calls*, **YES**, *Closed groups*, **YES**, *Edit list*, **YES**.
2. Scroll to *Add new?*, **YES**.
3. Enter the name of the user group, **YES**.
4. Enter the index number, **YES**.

You get the index number from your operator.

To activate a group

1. Scroll to *Calls*, **YES**, *Manage calls*, **YES**, *Closed groups*, **YES**, *Edit list*, **YES**.
2. Select a group, **YES**.
3. Select *Activate*, **YES**.
Calls can only be made within the selected group.

To call outside a Closed User Group

- Select *Open calls* and then select *On*.

Accept calls

With the accept calls service, you can choose to receive calls only from certain numbers or from members of a group. Other calls are automatically rejected by a busy tone. The phone numbers of calls you have rejected are saved in the Call List.

To add numbers to the accepted callers list

1. Scroll to *Calls*, **YES**, *Manage calls*, **YES**, *Accept calls*, **YES**, *Accepted list*, **YES**.
2. Scroll to *Add new?*, **YES**. This takes you to the phonebook.
3. Select an entry, **YES**.

To select an accept option

- Scroll to *Calls*, **YES**, *Manage calls*, **YES**, *Accept calls*, **YES**, *Accept options*.

Showing or hiding your number

If your subscription supports the Calling Line Identification Restriction (CLIR) service, you can hide your phone number when making a call.



To show or hide your phone number

1. Enter the phone number you want to call.
2. Scroll to *Calls*, **YES**, *Next call*, **YES**.
3. Select *Hide my number* or *Call and show ID* and press **YES** to make the call.

Setting up Mobile Internet

In order to use the Internet, browse via *Web services* or send and receive picture and e-mail messages, the following are required:



1. A phone subscription that supports data transmission.
2. Settings entered in your phone.
 - Settings may already be entered when you buy your phone.
 - You can receive settings in a text message from your network operator or service provider.
 - Settings are also available at www.SonyEricsson.com
3. You may also have to register as a WAP/e-mail user with your service provider or network operator.

Note: *This Sony Ericsson mobile phone does not support tethered data mode or synchronization.*

Note: *It is strongly recommended that you contact your service provider before editing or adjusting any data settings included in your phone at the time of purchase.*

Set up with the wizard

If your phone is not set up for WAP, you can ask your network operator or service provider to provide you with WAP settings information. Then you can simply use the wizard in your phone to help guide you through the relevant settings.

To use the wizard for setting up WAP

1. Scroll to *Web services*, **YES**, homepage (operator dependent), **YES**. The wizard now starts if no WAP settings exist.
2. Enter and save settings when asked, press **YES** to confirm.

Advanced setting information

To use the WAP browser, via a WAP service provider, you need settings for:

- a specific **data account** for WAP, and a **WAP profile**.

To use e-mail messaging, via an Internet service provider, you need settings for:

- a specific **data account** for e-mail, and an **e-mail account**.

- To send a text message (SMS) to an e-mail address via your network operator, you need to set:
- an e-mail gateway phone number.

Note: *Some advanced settings that are described in the following instructions are not necessarily mandatory; please consult your network operator or service provider for more information.*

A **data account** includes connection settings for access to a server at your service provider, for example via WAP (Mobile Internet) or via e-mail (Internet).

A **WAP profile** includes user settings that allow WAP browsing and picture messaging.

An **e-mail account** includes user settings that allow e-mail messaging direct from your phone, such as those provided by your Internet service provider. Alternatively, **e-mail via WAP** includes user settings that also allow e-mail messaging, such as those provided by your Internet service provider. However this is set up on your service provider's WAP site.

Note: *Check with your WAP service provider if their site supports e-mail.*

Data account settings

You can have several data accounts saved in your phone, with different settings for different purposes. The main setting for a data account is the *Account type* (connection method).



Tip: *If there are no data account or WAP profile settings in your phone, you can enter data account settings when you enter WAP profile settings. See Web services, YES, Options, YES, WAP profiles, YES, New profile, YES, Enter a name, YES, Connect using, YES, New account, YES.*

You can choose from *GPRS data* or *GSM data* account types.

Note: *Please contact your network operator for charging details.*

GPRS (General Packet Radio Service) allows fast and efficient access where you can always be online.



Note: *You need a subscription that supports GPRS.*

GPRS settings that are available:

- *APN* (Access point name address) – the address of the external data network you want to connect to, either an IP address or a text string.
- *User id* – your user id to log on to the external data network.
- *Password* – your password to log on to the external data network.
- *Passwd request* (Password request) – if this setting is on, you are asked for a password each time you log on to the external data network.
- *Allow calls* (Preferred service) – if you want to be able to accept incoming calls during a GPRS session, select *Automatic*. If not, select *GPRS only*.
- *IP address* – the IP address that the phone uses when communicating with the network. If you do not enter an address, the network provides you with a temporary IP address.
- *DNS address* – if the network does not provide the IP address to the DNS server automatically, you may enter it here.
- *Advan. settings* (Advanced settings) – these are optional. Consult your network operator.

GSM settings include some settings that are similar to GPRS settings and some that are GSM-specific as follows:



- *Phone number* – the phone number of your Internet service provider.
- *Data rate* – select the speed you want for the connection.
- *Dial type* – select analogue or ISDN connection.

Note: *If you want to change access type, you have to create a new data account and select the access type you want to use.*

To create a data account manually

1. Scroll to *Connect*, **YES**, *Data comm.*, **YES**, *Data accounts*, **YES**, *New account*, **YES**.
2. Select an account type for access.
3. Enter a name for the data account.
4. Enter the settings that you have received from your network operator or service provider. Confirm each setting by pressing **YES**.
5. Scroll to *Save?*, **YES**.

To edit a data account

1. Scroll to *Connect*, **YES**, *Data comm.*, **YES**, *Data accounts*, **YES**.
2. Select a data account, **YES**.
3. Select *Edit*.
4. Select the setting you want to edit, **YES**. Edit the setting, **YES**.
5. Repeat step 4 for other settings you want to edit.

Preferred service

You can set GPRS or GSM as the preferred service.

To select preferred mode

- Scroll to *Connect*, **YES**, *Data comm.*, **YES**, *Pref. service* and select *GPRS and GSM* or *GSM only*.

Note: *To see the status of GPRS coverage and connection, press the upper or lower side volume key from standby to enter the Status menu and then scroll to GPRS.*

WAP profile settings

The WAP settings are stored in a WAP profile. In most cases you only need to use one profile to access the Internet.

Tip: *If there are no data account or WAP profile settings in your phone, you can enter data account settings when you enter WAP profile settings. See *Web services*, **YES**, *Options*, **YES**, *WAP profiles*, **YES**, *New profile*, **YES**, *Enter a name*, **YES**, *Connect using*, **YES**, *New account*, **YES**.*

To enter WAP profile settings manually

1. Make sure you have a data account set up between your phone and the Internet server, as described in “Data account settings” on page 43.
2. Scroll to *Web services*, **YES**, *Options*, **YES**, *WAP profiles*, **YES**.
3. Select *New profile* to add a new profile or select an existing profile that you want to edit, **YES**.

When selecting *New profile* enter a name for the profile, **YES**, *Connect using*, **YES**, select the data account to be used, **YES** and enter the *IP address*, **YES**. A list appears. Scroll to *Save?*, **YES**.

When selecting an existing profile, you can do the following:

- *Rename* – Change the name of the profile.
- *Connect using* – Select data account.

- *IP address* – WAP gateway server address.
- *Advanced* – More profile settings, see below.
- *Delete* – Remove the profile.

If you select *Advanced* you can also do the following:

- *Chg. homepage* – Enter the address of the WAP site you want as the homepage.
- *Second account* – Select an alternative data account, if the first in *Connect using* fails.
- *User id* – Enter your user id for the WAP gateway.
- *Password* – Enter your password for the WAP gateway.
- *Security* – Ensure the security of your WAP connection.
- *Show pictures* – View pictures while browsing.

E-mail account settings

An e-mail account specifies, for example, the server that is used for your e-mail messages.

To create an e-mail account

1. Scroll to *Messages*, **YES**, *E-mail*, **YES**, *Options*, **YES**.
2. Select *Edit account*, **YES**.
3. Select *Add new?*, **YES**.
4. Enter a name for the account, for example **Home** or **Office**.

5. Select *Connect using*, **YES**.

A list appears with the data accounts that you have saved in your phone.

6. Select the data account you want to use with this e-mail account, **YES**.
7. Enter the rest of the settings in the list, some of which are optional. To enter the settings, scroll to the setting, press **YES** and enter the information. Press **YES** to confirm. Repeat this for each required setting. You use the same e-mail settings in your phone as in your PC e-mail program. If you do not have an e-mail service, contact your operator to get all the necessary settings.
 - *Protocol* – select *POP3* or *IMAP4*.
 - *Inc. server* (Incoming server)– enter the name or IP address of the service provider for incoming e-mail messages. For example, mail.server.com or 10.1.1.1.
 - *Incoming port* – if needed, change the number of the port used by the protocol you are using.
 - *Mailbox* – enter a user name for your e-mail account.
 - *Password* – enter a password for your e-mail account. Your service provider may alternatively request a password on connection.
 - *Outgoing server* – enter the name or IP address of the SMTP server to be able to send e-mail messages.

- *Outgoing port* – if needed, change the number of the port used by the SMTP protocol.
- *E-mail address* – enter your e-mail address.
- *Download* – select whether to receive headers and text or headers only.
- *From name:* – enter your name.
- *Signature* – select if you want to add your business card to your e-mail messages.
- *Copy outgoing* – Select *On*, if you want e-mail messages sent from your phone also to be sent to an e-mail address of your choice. This way, your sent messages are copied and can be saved for future reference.
- *Check interval* – Select how often you want the phone to connect to your e-mail server and check for incoming e-mail messages.

If you have both an office and a home e-mail account, you can set one of them as default:

- Select *Set account* from the *Messages*, **YES**, *E-mail*, **YES**, *Options* menu and select the account. See “E-mail” on page 53 for information about how to use e-mail.

Messaging

Your phone supports various messaging services – text messages, chat messages, picture messages and e-mail. Please contact your service provider for details on which services you can use.



Text messages

Text messages are sent via SMS (Short Message Service). They can be sent to one person or to a number of recipients, for example, that you may have saved in the phonebook.

You can add pictures, animations, melodies, and sound effects to a text message, and format the text using EMS (Enhanced Messaging Service).

Note: *Text messages with EMS functionality can only be sent to other compatible phones supporting the EMS standard.*

Before you start


First make sure that the number of your service centre is set. The number is supplied by your service provider and is usually saved on the SIM card.

To set the service centre number

1. Scroll to *Messages*, **YES**, *Text*, **YES**, *Options*, **YES**, *Service centres*, **YES**. The service centre number appears if it is saved on the SIM card.
2. If there is no number in the list, select *Add new?*, **YES**.
3. Enter the number, including the international “+” sign and country/region code, **YES**.

Sending text messages

For information about entering letters, see “Entering letters and characters” on page 13.


Tip: *A quick and easy way to write a new text message is to press and hold  from the standby screen*

To enable text message subject line

- Scroll to *Messages*, **YES**, *Text*, **YES**, *Options*, **YES**, *Subject*, **YES**.



To write and send a text message

1. Scroll to *Messages*, **YES**, *Text*, **YES**, *Write new*, **YES**.
2. Write your message, **YES**.
3. Enter a recipient or more as follows:
 - Enter a recipient’s phone number, **YES**.
 - For more recipients, scroll to *Add recipient*, **YES**, enter the number, **YES**.

- Press  to retrieve a number from the phonebook or other options.
4. Select *Send*, **YES**.

Note: *You may be charged per recipient for sending text messages.*

To insert an item in a text message (EMS)

1. Scroll to *Messages*, **YES**, *Text*, **YES**, *Write new*, **YES**.
2. While writing your message press .
3. Select *Insert item*, **YES**.
4. Select *Picture*, *Sound effect*, *Melody*, *Animation* or *Picture*, **YES**.
5. Select an item, **YES**. Then press **YES** again to confirm. After inserting an item, press  to select, delete or replace options.

E-mail gateway

Your network operator may have a phone number to an e-mail gateway that allows you to send a text message to an e-mail address.

To set up an e-mail gateway


1. Scroll to *Messages*, **YES**, *Text*, **YES**, *Options*, **YES**, *E-mail gateways*, **YES**.
2. If there is no number in the list, select *Add new?*, **YES**.
3. Enter the number, including the international “+” sign and country/region code, **YES**.

You can activate, edit or delete e-mail gateways.

Text formatting (EMS)

You can change the style, size and alignment of the text, and create new paragraphs, in a text message.

To format the text in a text message

1. Scroll to *Messages*, **YES**, *Text*, **YES**, *Write new*, **YES**.
2. Write the text message. Highlight the text you want to format by pressing the volume key down while scrolling back with the navigation key.
3. Press .
4. Select *Text format*, **YES**. Then select *Text style*, *Text size*, *Alignment* or *New paragraph*, **YES**.
5. Select a text format, **YES**.

Tip: *You can also select text formats before you start writing the text message.*

Receiving text messages

When you receive a text message, the phone will give you an audio alert (if the phone is not in ‘Silent’ mode) and the message *New messages Read now?* appears in the display. If you receive a text message from someone you have saved as a contact in your phonebook, the name of that contact appears in the display along with the text message.

To read the text message

Press **YES** to read the text message, or **NO** if you want to read the message later. The message is saved in *Inbox* in the *Text* menu.


While reading the text message you can, for example, start a chat session with the sender or go to a WAP address found in the text message.

When you have read the text message, press **YES** to select one of the following options, for example, *Reply*, *Forward* or *Delete* the text message. Press **NO** to close the text message.

Saving incoming text messages

Incoming text messages are saved in the phone memory. You can also save messages on the SIM card. Messages that you have saved on the SIM card remain there until you delete them.

To save from a text message

When the melody, phone number, WAP address, picture or animation is highlighted, press **YES**. Then select to save the item and press  **YES**.

- A melody is saved in *My sounds*.
- A phone number is saved in *Phonebook*.
- A WAP address is saved in *Bookmarks*.
- All pictures are saved in *My pictures*.

Note: Animations can only be viewed when inserting an item in a text message. See “To insert an item in a text message (EMS)” on page 48.

Long messages

A single text message can contain up to 160 characters. You may not receive all parts of a long message at the same time. You can send a longer message where two or more messages are linked together.

Note: A text message can contain up to 160 latin characters or 70 Chinese characters.

Note: You are charged for the number of linked messages.

To turn long messages off

- Scroll to *Messages*, **YES**, *Text*, **YES**, *Options*, **YES**, *Long messages*, **YES**, select *Off*, **YES**.

Templates

If you have one or more messages that you send often, you can save these as templates. Your service provider may also have saved some templates in your phone.

To create a template

1. Scroll to *Messages*, **YES**, *Text*, **YES**, *Templates*, **YES**, *Add new?*, **YES**.
2. Write the message, **YES**.
3. Press **YES** if you want to send the message now. Press **NO** to save the template.

Picture messages

Picture messages can be sent to a mobile phone and/or an e-mail account via MMS (Multimedia Messaging Service). A picture message can contain text, pictures, animations, melodies and sound. You can also send contacts and event entries as attachments.



Before you start

Make sure you have the following settings:

- An address to your service centre.
- A specific WAP profile for picture messages.

Note: Contact your network operator to automatically download settings or for more information.

To enter the service centre address

- Scroll to *Messages*, **YES**, *MMS*, **YES**, *Options*, **YES**, *Message server*.

To select or enter settings for MMS

- Scroll to *Messages*, **YES**, *MMS*, **YES**, *Options*, **YES**, *WAP profile* and select *Select* or *Create new*. See “To enter WAP profile settings manually” on page 45 for information how to create a WAP profile.




More Options

 
You can set different options for sending and receiving picture messages.

To edit an option

- Scroll to *Messages*, **YES**, *MMS*, **YES**, *Options*.

To compose and send a new picture message


 
1. Scroll to *Messages*, **YES**, *MMS*, **YES**, *Write new*, **YES**.
2. Select from the submenus, press **YES**.
3. Enter the information you want to send, press **YES**. Press **YES** again to continue.
4. Select , **YES** to add other items or more options.
5. Scroll  to *Send*, **YES**.
6. Enter the recipients phone number or press  to retrieve a phone number or e-mail address from the phonebook.
7. Press **YES** to send the message.

Tip: Highlight a part of the message and press  if you are not satisfied and want to delete a part while writing.

To use a pre-defined template for a picture message

- Scroll to *Messages*, **YES**, *MMS*, **YES**, *Templates*, **YES**.

To edit the message before sending it

- To edit an item, select it and press **YES**.
 - Pictures – Add or replace an existing picture with one from *My pictures*.
 - Text – Add or edit existing text. To change text size, select the text and press . Select *Text size*, **YES**.
 - Sound – Add or replace an existing sound with an alternative from *My sounds*.
 - Page – Insert a new page.
 - Timing – To set how many seconds you want an item to be displayed, select the item and press . Select *Item timing*, **YES**. To set the timing for the page, select the cursor icon in the message, press **YES** and select *Page timing*, **YES**.
 - Colour – Set the background colour.
 - Delete page – Remove a page.
 - Preview page – View a page before sending.
 - Preview – View the message.

Receiving picture messages

When you receive a picture message, the phone will notify you that you have a new message. Press **YES** to read the message.

Note: *Memory capacity is limited. You may have to delete old messages before you can receive new ones.*

Automatic download options

There are two ways to change the automatic download options. The set of instructions that is available to you depends on your network operator.

From the *Messages*, **YES**, *MMS*, **YES**, *Options*, **YES**, *Auto download* menu select one of the following:

- *On* – Messages are automatically downloaded to your phone by default.
- *Confirm* – Press **YES** to download or **NO** to save it on your network operator's server.
- *Off* – A new message icon appears in the inbox. Select the message and press **YES** to download.

or


From the *Messages*, **YES**, *MMS*, **YES**, *Options*, **YES**, *Restrict msg*, **YES**, *Home network or Roaming net*. menu select one of the following:


- *Allow* – Messages are automatically downloaded to your phone by default.
- *Always ask* – Press **YES** to download or **NO** to save it on your network operator's server.
- *Restrict* – A new message icon appears in the inbox. Select the message and press **YES** to download.

Note: Check with your network operator regarding how many messages can be saved or the space available on the network server.

To view a picture message

1. Press **YES**. The message is automatically played.
2. Press any key to stop.

When you have viewed a picture message, you can use the navigation key to scroll through the message again. When an item is highlighted, press  to save it in your phone.

Tip: You can also select a message from the list of messages and press  to delete the entire message.

E-mail

You can use your phone to send and receive e-mail messages via the Internet, as you would from a PC.

Note: This Sony Ericsson phone supports e-mail services using POP3, IMAP4, and SMTP protocols. Certain e-mail services use proprietary systems that are not supported.

Before you start

First make sure that you have:

- A subscription that supports data transmission. For more information, consult your service provider.
- Set up a data account. See “Data account settings” on page 43.
- Set up and selected an e-mail account. See “E-mail account settings” on page 46.

Sending and receiving e-mail messages

The *Send & receive* option offers the fastest way to send e-mail messages saved in the *Outbox* and check for new e-mail messages.

To write and send an e-mail message

1. Scroll to *Messages*, **YES**, *E-mail*, **YES**, *Write new*, **YES**.
2. Select:
 - *To:* – Then add name, enter an e-mail address, or retrieve an e-mail address from the phonebook. You can also retrieve a saved address from received messages in your inbox.
 - *Cc:* – If you want to send a copy of the message to someone.
 - *Priority:* – Set the message priority.
 - *Subject:* – Write a title, **YES**.

- *Text*: – Write your message, **YES**.
 - *Attachments* – Add up to five items to a message.
3. Highlight and select *Continue?* to proceed.
 4. Select one of the following:
 - *Send now* – The e-mail message is sent.
 - *Send w. attach.* – You can attach a picture from *My pictures* or from your CommuniCam™ accessory. Select a picture and press **YES** to send.
 - *Save to outbox* – The e-mail message is saved in the *Outbox*.
 - *Saved to drafts* – The e-mail message is saved in the *Drafts* folder
 5. *Send & receive* in the *E-mail* menu – All e-mail messages in the *Outbox* are sent and any new e-mail messages are received in the *Inbox*.

To receive and read e-mail messages

1. Scroll to *Messages*, **YES**, *E-mail*, **YES**, *Send & receive*, **YES**.
2. When the e-mail messages have been downloaded to the phone, scroll to *Messages*, **YES**, *E-mail*, **YES**, *Inbox* to read them.
3. Although your phone can send attachments, you cannot receive attachments attached to e-mails.

Note: *The phone can save up to six complete e-mail messages depending on the size. You can modify settings to download headers only, see “E-mail account settings” on page 46. All e-mail messages are also saved on your e-mail server.*

More messages on the server are indicated by:


- Arrows in the top or bottom left corners.
- Numbers in brackets for the previous and following messages in the list.

Note: *If you select a WAP address when reading an e-mail message, e-mail disconnects and WAP starts.*

To retrieve more messages

- Scroll to the arrow and press **YES**.

To reply to an e-mail message

1. Open the e-mail message.
2. Place the cursor in the text and press .
3. Select *Reply* or *Reply all*, **YES**.
4. Select *Write new* or *Include this msg* to include the message you received, press **YES**.
5. Write a message, **YES**.


To save an e-mail address or a phone number

- When the e-mail address or phone number is highlighted, press **YES**. Select *Save*, **YES**.


Archiving

You can archive an e-mail message in order to read it later, or if you want to save important information. You can archive only as much text as the display shows.

To archive an e-mail message

1. Open the e-mail message.
2. Make sure that the text you want to archive is visible in the display.
3. Place the cursor in the text and press .
4. Select *Copy to arch.*, **YES**. The text can be found in *Archive* in the *E-mail* menu.

To delete an e-mail message (POP3 users)

1. Scroll to *Messages*, **YES**, *E-mail*, **YES**, *Inbox*, **YES**.
2. Scroll to the message and press .
3. Select *Mark f.deletion*, **YES**.

The message is deleted the next time you connect to your e-mail server by selecting *Send & receive*.

To delete e-mail messages (IMAP4 users)

1. Scroll to *Messages*, **YES**, *E-mail*, **YES**, *Options*, **YES**.
2. Select *Empty inbox*, **YES**.
3. Select whether to delete with *Send & receive* or not.

Using Mobile Internet



Your phone has a WAP (Wireless Application Protocol) browser and e-mail messaging which are designed to bring a modified Internet to your mobile phone. A wide range of services are available, including news, entertainment, timetables, reservations, banking, e-commerce, and e-mail.

Before you start

You should already have a phone subscription that supports data transmission and you should also have default settings to access your Mobile Internet.


For troubleshooting your Mobile Internet settings, see “Setting up Mobile Internet” on page 42.

- For correct settings in your phone for Mobile Internet, WAP and/or e-mail messaging, see “Setting up Mobile Internet” on page 42.
- You may additionally need to register as a WAP/e-mail user with your network operator or service provider specifically for e-mail.

Note: See “E-mail account settings” on page 46 or “E-mail” on page 53 for more information about e-mail set-up and messaging.

Using the WAP browser

To start browsing


- Press and hold the  key.

To reset your WAP Profile, do the following:


1. First select the WAP profile you want to use. Scroll to *Web services*, **YES**, *Options*, **YES**, *WAP profiles*, **YES**.
2. Then select one of the following:
 - Open your homepage.
 - Go to one of your bookmarks. Select *Bookmarks*, **YES**.
 - Enter the address of a WAP site. Select *Enter address*, **YES**, *New address* to enter a new WAP address or select one of the 10 latest entered addresses.

Tip: When you enter a WAP address, the normal *http://* prefix is not needed.

To exit WAP and disconnect

- Press and hold **NO**
- Press , select *Exit WAP*.

Options when browsing

When you have started browsing, you can reach different browsing options by pressing .




- *Home* – Go to the homepage set for the current WAP profile.
- *Back* – Go back to the previous page.
- *Bookmarks* – Add the site you are currently browsing to your list of bookmarks, or see the list of bookmarks for the current profile.
- *Enter address* – Enter the WAP address of a site you want to visit.
- *Save picture* – Save a picture from the site.
- *SendAsTextMsg* – Send a text message with a link to the current WAP page to another phone.
- *Send link* – Send a link to the current site to another phone.
- *Reload* – Refresh the contents of the WAP page.
- *Exit WAP* – Disconnect and go to standby.
- *Status* – Display current status information, for example, profile, access type, connection time, data rate, security, address.
- *Set as homepage* – Set the current site as the homepage of the WAP profile you are using.
- *Push inbox* – Receive messages via push inbox.

Note: If you select an e-mail address when browsing a WAP site, you can reply with a text message.

Using bookmarks

You use bookmarks in your mobile phone just as you do with a PC Internet browser. You can have up to a maximum of 25 bookmarks.

To work with bookmarks

1. Scroll to *Web services*, **YES**, *Bookmarks*, **YES**.
2. Select the bookmark you want to work with, .
3. Select one of the following options and press **YES**:
 - *Go to* – Go to the marked WAP address.
 - *Edit* – Edit the name and/or the WAP address of the bookmark. See “Options when browsing” on page 57 for more information.
 - *Delete* – Delete the bookmark.
 - *SendAsTextMsg* – Send a link to the WAP address in a text message.
 - *Send* – Send a link to the current WAP address.
 - *Set as homepage* – Set the WAP address as the homepage.

Downloading

You can download, for example, pictures, themes, games and ring signals, from WAP sites directly to your phone.

To download from www.sonyericsson.com

1. Scroll to *Web services*, **YES**, *Bookmarks*, **YES**, *Mobile Internet*, **YES**.
2. Select what you want to download and follow the instructions that appear, **YES**.

Note: *Make sure the file sizes do not exceed the free memory in your phone, see “Memory Status” on page 67 for more information.*

WAP push messages

You can receive push messages via Web Services. This means that a service provider sends WAP content (information) to your phone without you having to do anything. You can, for example, get updated news or new WAP settings from your service provider.

There are two kinds of push messages:

- Text messages that inform you about Web services, by sending a link. To go to Web services, click the link and select *Load*.
- Updated information from a Web service is sent to appear in the browser.

Receiving a push message

You can set your phone to either accept or reject push messages. This is valid for all your WAP profiles.

To set push message acceptance

1. Scroll to *Web services*, **YES**, *Options*, **YES**, *Common*, **YES**, *Push access*, **YES**.
2. Select one of the following settings:
 - *On* – You allow push messages to be automatically loaded.
 - *Prompt* – You allow push messages, but only when you confirm.
 - *Off* – You do not allow push messages.

To respond to a push message

- Scroll to *Web services*, **YES**, *Push inbox*, **YES**, scroll to any push message, **YES** and select one of the following:
 - *Load* – The browser starts and loads the WAP site so that you can see the push content.
 - *Delete* – Deletes the push message.
 - *Postpone* – Save the message, to be loaded later.

To receive a call when browsing

- When you are browsing and a call is received, a menu will prompt you with *Answer* or *Busy*.

Stored information

The following information can be saved in your phone:

- Cache – improves memory efficiency.
- Passwords – improves server access efficiency.
- Cookies – improves site access efficiency.

To allow Mobile Internet information in your phone

1. Scroll to *Web services*, **YES**, *Options*, **YES**, *Common*, **YES**.
2. Select the information to allow, **YES**.

It is advisable to clear any sensitive information about previously visited Web services. This is to avoid a security risk if your phone is misplaced, lost or stolen.

To clear cache, password list, cookies or push inbox

1. Scroll to *Web services*, **YES**, *Advanced*, **YES**.
2. Select the information to be cleared.
3. Press **YES** to confirm.

More features

Alarm clock

The alarm can be set to ring at a specific time within 24 hours, or recurrently at a specific time on several days. You can have both these alarms set at the same time. Even if you have set your phone to silent, the alarm and timer signals ring. The alarm clock also rings if the phone is turned off.

To set an alarm

1. Scroll to *Organizer*, **YES**, *Alarms*, **YES**, *One-time alarm* or *Recurrent alarm*, **YES**.
 2. Enter the time, **YES** and day, if recurrent, by scrolling and pressing **(⌘ a/A)**, **YES**.
- To change the alarm time, scroll to *Organizer*, **YES**, *Alarms*, **YES**, *One-time alarm*, **YES**, *Set new time*.
 - Press any key to turn the alarm signal off when it rings. If you do not want the alarm to be repeated, press **YES**.
 - To cancel the alarm, scroll to *Organizer*, **YES**, *Alarms*, **YES**, *One-time alarm* or *Recurrent alarm*, **YES**, *Cancel*.
 - To select an alarm signal, scroll to *Settings*, **YES**, *Sounds & alerts*, **YES**, *Alarm signal*.

Stopwatch

Scroll to *Organizer*, **YES**, *Stopwatch*, **YES**.

- To start, stop or re-start the stopwatch, press **YES**.
- To save up to nine lap times, press **(# ↵)**.
- To check saved lap times, scroll using the centre select key or simply select the lap number from your keypad.
- To reset the stopwatch, press **(C)** or **NO**.

Note: *The stopwatch is turned off when you answer an incoming call or when you exit the stopwatch menu.*

Timer

The phone has a built-in 24-hour timer.

 
To set the timer

- Scroll to *Organizer*, **YES**, *Timer*. When the signal rings, press any key to turn it off.

Calculator

The phone has a built-in calculator, which can add, subtract, multiply, divide and calculate percentages.

To use the calculator

- Scroll to *Organizer*, **YES**, *Calculator*, **YES**.
- Enter digit keys by pressing the digit keys on the keypad.
- Press the right or left arrow key repeatedly to highlight one of the options on the bottom row of the display.
- Select an option by pressing **YES** or by pressing the centre select key.
- Clear the calculator screen by pressing .

Events

Keep track of important things that you need to do. You can choose to add, reschedule, edit, send or delete events.

Note: *This Sony Ericsson phone does not support PC synchronization.*

Note: *Events can only be sent as picture messages.*


To add a new event

1. Scroll to *Organizer*, **YES**, *Events*, **YES**, *New?*, **YES**.
2. Enter the appropriate information: date, time, subject, icon, reminder.
Confirm each entry with **YES**.

 
To view or edit your events

- Scroll to *Organizer*, **YES**, *Events*, **YES** and then select an event, **YES**.

Events options

- Scroll to an event, press  and then select one of the options to reschedule, edit, send, delete or delete all.

To send an event

1. Scroll to the item you want to send and press .
2. Scroll to *Send*, **YES**.

Note: *If the events list is full, you must remove events before you can save any new ones.*

Sound recorder

With the Sound recorder function, you can record either your own memos or ring tones. The recordings are saved in your mobile phone and can be accessed even if you change your SIM card.

Note: *You cannot record a phone conversation.*

To start a sound recording


- Scroll to *Pictures&Sounds*, **YES**, *Record sound*, **YES**. Recording starts and the display shows *Recording* together with the time of the current recording (increasing).

Note: *Recordings are saved in Pictures&Sounds, YES, My sounds.*

To end the recording

- Press **NO**.

To set a recording as a ring tone

- Scroll to *Pictures&Sounds*, **YES**, *My sounds*.
- Press , scroll to *Set as Ring Tone*, **YES**.

The recording stops automatically if you receive an incoming call. You hear a tone a few seconds before the memory is full.


To listen to your recordings

1. Scroll to *Pictures&Sounds*, **YES**, *My sounds*, **YES**.
2. Scroll to *Recording* or go to next or previous by moving the centre select key up or down, respectively.
3. Press **NO** to stop playback.


You can listen to your recordings at any time, even during a call, and you and the person you are talking to will hear them.

Note: *You can also send, delete, rename, check sound information and memory status.*

To send a recording

1. Scroll to *Pictures&Sounds*, **YES**, *My sounds*, **YES**.
2. Scroll to the recording you wish to send.
3. Press  and select *Send*.

To erase or rename a sound recording


1. Scroll to *Pictures&Sounds*, **YES**, *My sounds*, **YES**.
2. Scroll to the recording you wish to erase or rename.
3. Press  when the recording is highlighted.
4. Select *Delete* or *Rename*, **YES**.

Games

Your phone has games and you can download additional games.

To start a game

1. Scroll to *Games*, **YES**.
2. Select a game, **YES**.
3. Select *New game*, **YES**.
4. Start the game.

Note: Press  to manage downloaded games.

To download a new game

1. Make sure you have entered WAP settings, see “Setting up Mobile Internet” on page 42.
2. Scroll to *Games*, **YES**, *Sony Ericsson*, **YES**.
3. Press **YES** to download a new game via WAP.
A WAP session starts. You will see the phone’s memory status and you will be asked if you want to save it to your phone.
4. Select a game from the WAP site, **YES**.
The game is downloaded and saved in *Games*.

Security

SIM card lock

The SIM card lock protects your subscription, but not your phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card.

To unblock your SIM card

1. *PIN blocked* appears.
2. Enter your PUK and press **YES**.
3. Enter a new four- to eight-digit PIN and press **YES**.
4. Re-enter the new PIN to confirm and press **YES**.

Note: Your PUK is provided by your network operator.

To edit your PIN

- Scroll to *Settings*, **YES**, *Locks*, **YES**, *SIM lock*, **YES**, *Change PIN*.

Note: If the message “Codes do not match” appears, you entered the new PIN incorrectly. If the message “Wrong PIN” appears, followed by “Old PIN:”, you entered your old PIN incorrectly.

PIN2

Certain services are protected by a second PIN.

To edit your PIN2

- Scroll to *Settings*, **YES**, *Locks*, **YES**, *SIM lock*, **YES**, *Change PIN2*.

To turn the SIM card lock on or off

1. Scroll to *Settings*, **YES**, *Locks*, **YES**, *SIM lock*, **YES**, *Protection*, **YES**.
2. Select *On* or *Off*, and press **YES**.
3. Enter your PIN and press **YES**.



Phone lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. It is not on when you buy the phone. You can change the phone lock code (0000) to any four- to eight-digit personal code. The phone lock can be set to on, automatic or off.

Phone lock on

If the phone lock is on, the message *Phone locked* appears each time you turn on the phone. You have to enter your code followed by **YES** to use your phone.

Automatic

If the phone lock is set to automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.

To edit your phone lock code

- Scroll to *Settings*, **YES**, *Locks*, **YES**, *Phone lock*, **YES**, *Change code*.

Note: *It is important that you remember your new code. If you should forget it, contact your service provider.*

To set the phone lock

1. Scroll to *Settings*, **YES**, *Locks*, **YES**, *Phone lock*, **YES**, *Protection*, **YES**.
2. Select an alternative and press **YES**.
3. Enter the phone lock code and press **YES**.

Troubleshooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of the problems you can easily correct yourself.

The phone cannot be switched on

Recharge or replace the battery. See “SIM card and battery information” on page 5.

No indication of charging

When charging a fully-discharged battery, it may take up to 30 minutes before the battery icon appears in the display.

Grey menu options

Grey text indicates a function is temporarily unavailable. This may be because the service is not included in your phone service subscription, or because a certain phone setting has not been turned on, or is otherwise not selectable. For example, the *Send* menu may be displayed in grey if you selected a copyright-protected theme, picture or sound.



Display Messages

Insert SIM

There is no SIM card in the phone or you may have inserted it incorrectly. See “SIM card and battery information” on page 5.

Insert correct SIM card

The phone is set to work only with operator-specific SIM cards. Insert the correct SIM card.

SOS calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some operators allow you to call an emergency number. See “Emergency calls” on page 30.

No network (or no operator name displayed)

There is no network within range or the received signal is too weak. You have to move to get a signal that is strong enough.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly. Enter the correct PIN or PIN2, and press **YES**. See “SIM card lock” on page 63.

Codes do not match

When you want to change a security code (for example your PIN) you have to confirm the new code by entering it again. The two codes that you have entered do not match. See “SIM card lock” on page 63.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 incorrectly three times in a row. To unblock, see “SIM card lock” on page 63.

PUK blocked- contact operator

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row. Contact your network operator or service provider.

Phone locked

The phone is locked. To unlock the phone, see “Phone lock” on page 64.

Phone lock

Your phone comes with the phone lock code, 0000. You can change it to any four- to eight-digit code. See “Phone lock” on page 64.

Number not permitted

The Fixed Dialling function is on and the number you have dialled is not on your fixed numbers list. See “Fixed dialling” on page 40.

Charging, alien battery

The battery you are using is not a Sony Ericsson-approved battery and is charging slowly for safety reasons.

Cannot connect to server

If your settings have previously worked, try again later as the network server may be temporarily busy or experiencing problems.

Memory full

Free memory by deleting unused files or information. See the following section.

 
Memory Status

You can check for example, how many positions are left in your phonebook or how much memory is used.

To check the phonebook memory

- Scroll to *Phonebook*, **YES**, *Advanced*, **YES**, *Memory status*.

 
To check themes, pictures, sounds and games memory

- Scroll to *Pictures&Sounds*, **YES**, select one of the menus, **YES**, , select *Memory status*, **YES**.

To check memory for text/picture messages

- Scroll to *Messages*, **YES**, select one of the menus, **YES**, *Memory status*, **YES**.

To delete saved files or information

- Select a file or information, press , **YES**.
- Select a submenu option or advanced option to delete.

Note: *Some factory default files and information cannot be deleted.*

Additional information

Sony Ericsson Consumer web site

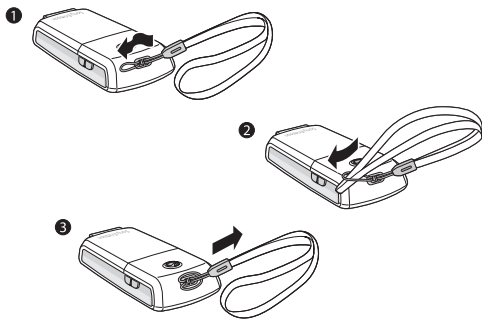
On www.SonyEricsson.com there is a support section where help and tips are only a few clicks away. Here you find the latest software updates, tips on how to use your product more efficiently, function guides for some of the products and additional help when you require it.

Carrying strap

You can attach a carrying strap to your phone.

To attach a carrying strap to your phone

1. Feed the thin end of the strap through the loophole at the top of your phone.
2. Feed the thick end of the strap through the thin end of the strap.
3. Pull the thick end of the strap to tighten it.



Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.



RECOMMENDATIONS

- Always treat your product with care and keep it in a clean and dust-free place
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperatures.
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use your product near medical equipment without requesting permission.
- Do not use your product when in, or around aircraft, or areas posted "turn off two-way radio".
- Do not use your product in an area where a potentially explosive atmosphere exists.



- Do not place your product or install wireless equipment in the area above your car's air bag.
- Do not attempt to disassemble your product. Only Sony Ericsson authorised personnel should perform service.



ANTENNA

Only use an antenna that has been specifically designed by Sony Ericsson for your mobile phone. Use of unauthorised or modified antennas could damage your mobile phone and may violate regulations, causing loss of performance and SAR levels above the recommended limits (see below).

EFFICIENT USE

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

RADIO FREQUENCY (RF) EXPOSURE AND SAR

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

A separate leaflet with SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be

found, together with more information on radio frequency exposure and SAR, on: www.SonyEricsson.com.

DRIVING

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Ericsson or Sony Ericsson handsfree solutions intended for use with your product. Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna supports the installation.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

PERSONAL MEDICAL DEVICES

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your

mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult the manufacturer of the device.

CHILDREN

DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BE DETACHED AND CREATE A CHOKING HAZARD.



DISPOSING OF THE PRODUCT

Your mobile phone should not be placed in municipal waste. Please check local regulations for disposal of electronic products.



POWER SUPPLY

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp

areas. Never alter the cord or plug. If the plug will not fit into the outlet, have a proper outlet installed by a qualified electrician.

EMERGENCY CALLS

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider.

BATTERY USE AND CARE

We recommend that you fully charge the battery before you use your mobile phone for the first time. The battery can only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used.

The talk and standby times depend on the actual transmission conditions when using the mobile phone. If the mobile phone is used near a base station, less power is required and talk and standby times are prolonged.

- **Warning!** May explode if disposed of in fire.

- Use only Sony Ericsson branded original batteries and chargers intended for use with your mobile phone. Other chargers may not charge sufficiently or may produce excessive heat. Using other batteries and chargers could be dangerous.
- Do not expose the battery to liquid.
- Do not let the metal contacts on the battery touch another metal object. This could short-circuit and damage the battery.
- Do not disassemble or modify the battery.
- Do not expose the battery to extreme temperatures, never above +60°C (+140°F). For maximum battery capacity, use the battery in room temperature.
- Turn off your mobile phone before removing the battery.
- Keep out of children's reach.
- Use the battery for the intended purpose only.
- Do not allow the battery to be put into the mouth. Battery electrolytes may be toxic if swallowed.



DISPOSING OF THE BATTERY

Please check local regulations for disposal of batteries or call your local Sony Ericsson Customer Care Center for information.

Please recycle waste batteries.



Limited Warranty

Sony Ericsson Mobile Communications AB, S-221 88 Lund, Sweden, (Sony Ericsson), provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Customer Care Centre (national rates may apply) or visit www.SonyEricsson.com to get further information.

Our Warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

What We Will Do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that your personal settings/downloads might be lost when the Product is repaired or replaced.

Conditions

1. The warranty is valid only if the original proof of purchase issued to the original purchaser by an, for this Product, Sony Ericsson authorised dealer, specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is

longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.

3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.
4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Ericsson or Sony Ericsson branded original accessories intended for use with the Product.
7. Tampering with any of the seals on the Product will void the warranty.

8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS, TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you. The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales/ purchase contract.

* EUROPEAN UNION (EU)

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country you are in,

please call the local Sony Ericsson Customer Care Centre. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries. It may not be possible to repair SIM-locked Products.

** In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

Declaration of Conformity

We, **Sony Ericsson Mobile Communications AB of Nya Vattentorget S-221 88 Lund, Sweden.**

declare under our sole responsibility that our product

Sony Ericsson type AAA-1001013-CN

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards 3GPP TS 51.010-1, EN 301 489-7 and EN 60950, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive **99/5/EC** with requirements covering EMC directive **89/336/EEC**, and Low Voltage directive **73/23/EEC**.

Lund, November 2004

CE 0682

Place & date of issue











Hiroshi Yoshioka, Head of Product Business Unit GSM/UMTS




We fulfil the requirements of the R&TTE Directive (**99/5/EC**).

Icons










The table below shows icons which may appear in standby or in the menus.












 

You can access the Icon Glossary by scrolling to a particular menu or function and pressing . Then select *Icon glossary*.







Icon	Description
<i>Main menus</i>	
	Your personal phonebook.
	Handling of text, picture, e-mail messages, and voice messages.
	Handling of outgoing/incoming calls, call time and cost information.
	Handling of ongoing calls. Alternates with the Calls menu, that is only available during calls.
	Handling of pictures, sounds and themes.
	Personal settings including display, language, time and locks.
	Gives you access to Web services on the Internet.

Icon	Description
	Events, alarm clock and other extras.
	Networks, data communications settings and accessories.
	Play games on your phone.








Standby

	Tells you the strength of the GSM network signal.
	GPRS is within range.
	GPRS is within range and can be used.
	Tells you the status of the battery.
	You cannot receive any incoming calls.
	You have missed an incoming call.
	All incoming calls are diverted to a defined number.
	No calls or only certain calls from numbers in a list are received.
	All sounds are off, except the alarm and timer.

Icon	Description
	The alarm clock has been set and is on.
	The timer has been set and is on.
	The keypad is locked.
	The card lock or phone lock is on.
	A secure WAP connection is established.
	You have received voice mail messages (number indicates the number of received voice mail messages).
	You have received a text message.
	You have received an e-mail message.
	You have received a picture message.
	You have received a WAP push message.
	A GPRS session is in progress.
	Line 1 is in use for outgoing calls.
	Line 2 is in use for outgoing calls.

Icon	Description
	Encoding is currently not being provided by the network.
	The network is preferred and can be used.
	The network is forbidden and cannot be used.
	Your home network is within range and can be used.
	An ongoing call.
	A chat session is in progress.

Phonebook

	A group of contacts in the phonebook.
	You can enter the phonebook by pressing  .
	A home number in the phonebook.
	A work number in the phonebook.
	A mobile number in the phonebook.
	An e-mail address in the phonebook.

Icon	Description
------	-------------



A picture is connected to the contact.

Messages



A text message is saved on the SIM card.



A message has not been read.



A message has been read.



Only part of a read e-mail message or a multimedia message is saved in the phone.



Only part of an unread e-mail message or a multimedia message is saved in the phone.



A read message will be deleted the next time you connect to the server.



An unread message will be deleted the next time you connect to the server.



A damaged message.



A read picture message.



An unread picture message.

Icon	Description
------	-------------



The message has not been sent.



The message has been sent.



A message has been delivered or read by the recipient.



A sent message that has expired or been rejected by the recipient.



Pre-defined message template (not editable).



User-defined message template.



A multimedia message is playing.



A multimedia message has been stopped.



A multimedia message has been paused.














Picture could not be shown.




 





A business card is attached to a multimedia message.



An event is attached to a multimedia message.

Icon	Description
	A theme is attached to a multimedia message.
	A multimedia message contains a melody.
	A multimedia message contains a recorded sound.
	Cursor in a multimedia message.
	More message options.
	Chat message prompt.
<i>Calls</i>	
	A missed call in the call list.
	An answered call in the call list.
	A dialled number in the call list.
<i>Pictures&Sounds</i>	
	A standard melody saved in My Sounds.
	A polyphonic melody saved in My Sounds.

Icon	Description
<i>Pictures&Sounds/Composer</i>	
	Turns backlight on and off.
	Turns vibrating alert on and off.
	Starts and stops a melody loop.
	Increases and decreases the volume one step.
	A volume between 0 and 15 has been selected.
	Whole note, half note, 1/4 note.
	1/8 note, 1/16 note, 1/32 note.

Index

A

- Alarm clock 60
- Animations 22
- Answering mode 27

B

- Battery 5
- Bookmarks 57
- Business cards 35

C

- Calculator 60
- Call costs 36
 - minute minder 25
- Call time 36
- Calls
 - accept 41
 - answer 6, 31
 - automatic redialing 29
 - call list 31
 - emergency 30
 - fixed dialing 40
 - forward 37
 - groups 35

- international 29
- make 6, 28
- missed 31
- put on hold 37
- receive 6, 31
- reject 31
- restrict 39
- speed dialing 36
- Carrying strap 68
- Charging (battery) 5
- Chinese input 13
- Conference calls 38
- Contacts 32
- Contrast (display) 26

D

- Declaration of conformity 74
- Display
 - contrast 26
 - greeting 27
 - help texts 11
 - icons 75
 - light 26
- Display messages 65
- Downloading 58

E

- E-mail 53
 - gateway 43, 48
 - settings 42, 46
- Emergency calls 30
- Events 61

F

- Fixed dialing 40
- Forwarding calls 37

G

- Games 63
- GPRS 43
- Greeting 27
- Groups 35
 - closed user groups 40
 - conference calls 38

H

- Handsfree 27
- Help texts 11

I

- Icons (display) 75
- International
 - calls 29
 - emergency number 30

K

- Key functions 7
- Key sound 25
- Keypad lock 27

L

- Language (display) 25
- Locks
 - keypad 27
 - phone 64
 - SIM card 63

M

- Melodies, see Ring signals 23
- Memory
 - full 67
- Menu language 25
- Menu overview 12
- Minute Minder 25
- Missed calls 31
- MMS, see Picture messages 51

Mobile Internet 56

- bookmarks 57
- downloading 58
- e-mail settings 42, 46
- options 57
- settings 42

Multimedia messages 51

- Multitap text input 18
- Mute 7, 8, 9, 28
- My numbers 27
- My own number 27

N

- Networks 6

P

- Pause 11
- Personal ring signal 24
- Phone lock 64
- Phonebook 32
- Picture messages 51
- Pictures 21
 - animations 22
 - background picture 22
 - exchange 22

PIN

- change 63
- enter 6
- PIN2 64
- Pinyin input 17
- PUK 63

Q

- Quick keys 8

R

- Redialing 29
 - using call list 31
- Reset 28
- Ring signals 23

S

- Security
 - phonelock 64
 - SIM card 63
- Shortcuts 8
- Silent ring signal 23
- SIM card 5
 - copy contacts 36
 - lock 63
 - unblock 63
- SMS, see Text messages 47

- Sony Ericsson
 - Mobile Internet 21
 - web site 67
- Sound recorder 61
- Speakerphone 29
- Speed dialing 36
- Stopwatch 60
- Strap 68
- Stroke input 14

T

- T9 Text input 19
- Text messages 47
 - E-mail gateway 43, 48
- Themes 21
- Time settings 26
- Timer 60
- Turning the phone on/off 6

V

- Vibrating alert 25
- Voicemail 36

W

- WAP, see Mobile Internet 56