

 
# SIEMENS

Be inspired

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2002  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.my-siemens.com](http://www.my-siemens.com)

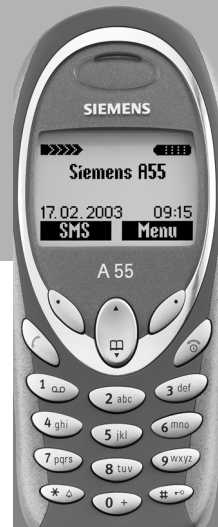

# A55

<b>Safety precautions .....</b>	<b>3</b>	Location: .....	25
<b>Overview of the phone .....</b>	<b>5</b>	Assign animation .....	26
<b>Display symbols (selection) .....</b>	<b>7</b>	Groups .....	27
<b>Getting Started .....</b>	<b>8</b>	<b>Call records .....</b>	<b>31</b>
Insert SIM card/battery .....	9	<b>Duration/ charges .....</b>	<b>32</b>
Charge battery .....	10	<b>Voice message/Mailbox .....</b>	<b>33</b>
<b>Switch on, off / PIN entry .....</b>	<b>11</b>	<b>Messages (SMS) .....</b>	<b>34</b>
<b>General Instructions .....</b>	<b>12</b>	Read messages .....	34
User Guide .....	12	Inbox/outbox .....	35
Menu Control .....	12	Compose a message .....	36
<b>Security .....</b>	<b>14</b>	Predefined text .....	37
<b>My phone .....</b>	<b>16</b>	Text entry with T9 .....	37
<b>Making a phone call .....</b>	<b>17</b>	SMS to group .....	39
Dialling with number keys .....	17	Picture & sound .....	39
End call .....	17	SMS profiles .....	40
Set volume .....	17	<b>Cell broadcast services .....</b>	<b>42</b>
Redial previous numbers .....	17	<b>Surf &amp; fun .....</b>	<b>43</b>
When a number is busy .....	18	Internet (WAP) .....	43
Accept call .....	18	Games .....	47
Reject call .....	19	Own pictures/Own animations .....	48
Handsfree .....	19	Own sounds .....	49
Held call .....	19	Calculator .....	51
Call waiting/Swap .....	20	Currency converter .....	51
Conference .....	21	<b>Ring tones .....</b>	<b>53</b>
Call menu .....	21	<b>Setup .....</b>	<b>56</b>
Direct call .....	22	Language .....	56
<b>Phonebook .....</b>	<b>23</b>	Display .....	56
<New entry> .....	23	Screensaver .....	57
Call/search for an entry .....	24	Call setup .....	57
Call with record no. ....	24	Divert .....	59
Edit entry .....	24	Clock .....	60

**See also Index at the end of this User Guide**

Security .....	61
Network .....	62
Master reset .....	64
<b>Profiles .....</b>	<b>65</b>
Change setting .....	65
Car Kit .....	66
Headset .....	66
Aircraft mode .....	66
<b>Alarm clock .....</b>	<b>67</b>
<b>Fast access key .....</b>	<b>68</b>
Left soft key .....	68
Speed dialling keys .....	69
<b>Notes A-Z .....</b>	<b>70</b>
<b>Questions&amp;Answers .....</b>	<b>77</b>
<b>Customer Care .....</b>	<b>80</b>
<b>Specifications/maintenance .....</b>	<b>82</b>
<b>Accessories .....</b>	<b>83</b>
Basics .....	83
Car Solutions .....	83
<b>Quality declaration for battery</b>	<b>84</b>
<b>Guarantee certificate (UK) .....</b>	<b>85</b>
<b>Index .....</b>	<b>86</b>

**See also Index at the end of this User Guide**

## Note for parents

Read the operating instructions and safety precautions carefully before use.  
Explain the content to your children and the hazards associated with using the phone.



When in a hospital switch off your phone. Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20cm/9 inches between the phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The main voltage (V) specified on the power supply unit must not be exceeded.



The ringtone (p. 53), info tones (p. 55) and handsfree talking are reproduced through the loud-speaker. Do not hold the phone to your ear when it rings or when you have switched on the hands-free function (p. 19). You otherwise risk serious, permanent damage to your hearing.



Always use the handsfree kit for calls while driving (p. 83).



Only use original Siemens batteries (100% mercury-free) and charging devices. You otherwise risk serious damage to health and property: the battery could explode, for instance.



Mobile phones must be switched off at all times in an aircraft. To prevent accidental activation, see p. 66.



Switch off near petrol stations, fuel depots, chemical plants or blasting operations. Mobile phones can interfere with the operation of technical installations.



You may only open the phone to replace the battery (100% mercury-free), front and back covers, keypad or SIM card. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the guarantee.



SIM card may be removed. Caution! Small parts could be swallowed by children.

**Please note:**

Safely dispose of used batteries and phones according to the legal regulations.



Mobile phones can interfere with the operation of nearby TVs, radios or PCs.



Only use original Siemens accessories as the only way to avoid possible damage to health and property and to comply with the existing regulations.

Improper use invalidates the warranty!

## ① Integrated antenna

Do not interfere with the phone above the battery cover unnecessarily. This reduces the signal strength.

## ② Loudspeaker


## ③ Display indicators

Signal strength/battery level.

## ④ Soft keys

Press the soft key to call up the function that is displayed as **Text** or icon on the grey fields above the key (see also p. 68). These are in standby mode (factory default):

**New SMS** or e.g.

 (SIM services) and

**Menu** (main menu).

## ⑤ Call key

 
Dial displayed phone number or name, accept calls. In standby mode: Display the last calls.

## ⑥ On/Off/End key

- Switched off: hold **down**, to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level. **Hold down**, return to the standby mode.
- In standby mode: **hold down**, to switch off phone.

## ⑦ Input keys

Numbers, letters.

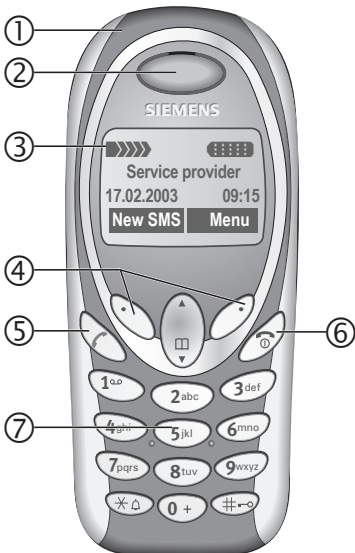

## ① Scroll key

In lists and menus:



Scroll up and down.

During a call:



Volume adjustment.

In standby mode:



Press at the top: read new message.



Press at the bottom: open Phonebook.

Edit Text:



Short press at top or bottom:  
Move cursor character by character.



Long press at top or bottom:  
Move cursor word by word.

Read Text (e.g. SMS):



Scroll line by line.

## ② Hold down

- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: only switch off ringtones.

## ③ Hold down

In standby mode: switch key lock on/off.

## ④ Microphone

## ⑤ Device interface

Connection for charger, headset etc.



## Display indicators



Signal strength.



Charging.



Battery level.



All calls are diverted.



Ringer off.



Short ringer (beep) only.



Ringer only, if the caller is stored in the Phonebook.



Alarm clock active.



Key lock active.

Phone numbers/names:



On the SIM card



On the SIM card (PIN 2 protected).



In the phone memory.



No network access.



Function activated/deactivated.



Phonebook.

ABC/  
Abc/abc

Indicates whether upper- or lower case letters are active.



Text input **with** T9.



WAP Online.



WAP No network.



Loudspeaker Car Kit.



Car Kit active.



Headset active.



Auto answer feature on.

## Left and right soft key



Message received.



Voice mail received.



Unanswered call.



SIM memory full.



SIM services.



Store in Phonebook.



Retrieve from Phonebook.



T9 word selection.



# Getting Started

The front and back covers of the casing (CLIPit™ Covers, my-CLIPit™: p. 16 and p. 83) as well as the keypad can be changed in a matter of seconds - no tools required. Please switch the phone off first.

## To attach



## To remove



### Note

Your phone's display and the display on the top shell are delivered with a protective film. **Remove this film before getting started.**

 
In rare cases the static discharge may cause discolouration at the edges of the display. However this will disappear within 10 minutes.

To avoid damage to the display, the phone should not be used without the top shell.

## Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your subscription is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


- Press grooved area ❶, then lift cover in the direction indicated by the arrow ❷.

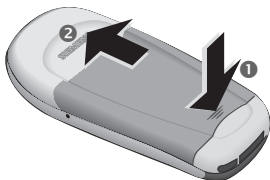


- Press latch in the direction indicated by the arrow ❸, lift battery at the cutout on the side of the phone, then tilt upwards and remove ❹.



 - Insert SIM card in the opening, contacts pointing downwards (make sure the angled corner is in correct position ❺). Push gently until it engages ❻.

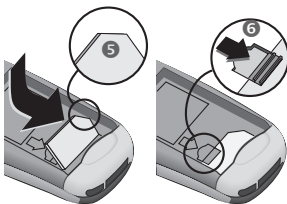

 - Insert battery in the phone sideways ❷, then press downwards until it engages ❸.

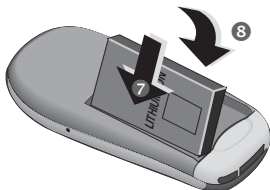

- Replace cover and press downwards until it engages.

### Note


Always switch off phone before removing the battery!

Only 3-volt-SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM card .....p. 76

## Charge battery

 The battery is not fully charged when delivered. Plug in the charger cable at the bottom of the phone, plug in the power supply unit to the mains power socket and charge for least two hours.

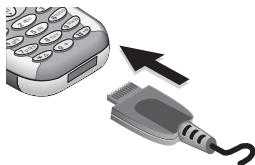

Display when charging is in progress

### Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible in an ambient temperature of 5°C to 40°C (the charge icon flashes as a warning when the temperature is 5°C above/below this range). The voltage specified on the power supply unit must not be exceeded.

To use the full performance of the battery, the battery must be fully charged and discharged at least five times.

### Charge icon not visible

If the battery is totally discharged no charge icon is displayed when the charger is plugged in. It is displayed after 2 hours at most. In this case the battery is fully charged after 3-4 hours.

Only use the charger provided!

### Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should not remove the battery unnecessarily and if possible not end charging prematurely..

#### Note

The charger heats up when used for long periods. This is normal and not dangerous.

Operating times.....p. 72

Quality declaration for the battery..... p. 84

## Switch on/off



Hold **down** On/Off/End key to switch on or off.

## Enter PIN

The SIM card can be protected with a 4-8 digit PIN.



Enter the PIN code using the number keys (the display shows a series of asterisks, if you make a mistake press **Clear**).

 


**OK**

Press the **right** soft key to confirm the input.

Logging on to the network will take a few seconds.

## Standby mode

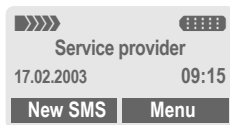

When the name of the service provider/logo appears on the display, the phone is **in standby mode** and **ready for use**.

### Note

Signal strength .....	p. 73
SIM services (optional) .....	p. 74
<b>New SMS</b> .....	p. 36
<b>SOS</b> .....	p. 70
Change PIN .....	p. 14
SIM card problems .....	p. 73
Clear SIM card barring .....	p. 15
Other network .....	p. 63
Deactivate/activate screensaver .....	p. 57
Set display contrast .....	p. 56
Set time .....	p. 60

### Note

First time switching on phone, the time and date must be set.

## User Guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press scroll key **at the top/ at the bottom** to scroll up and down.



Press the **left** or **right** soft key to call a function.

**Menu**

Displays a function.



Function depends on the service provider, special registration may be necessary.

 
## Menu Control

Steps for calling a function are shown in a **condensed form** in this user guide, e.g.: to display the call list for missed calls:

**Menu** → Call records → Missed calls

This corresponds to:

1

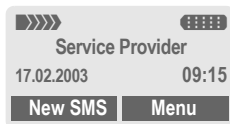


**Menu**

Open menu.

From standby mode: Press **right** soft key.

 
2

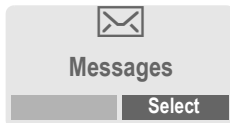

Scroll to Call records.

Press scroll key **at the bottom** to scroll downwards.

 3

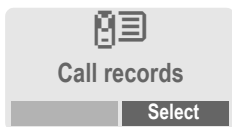


Select

Press.

Press **right** soft key to open the Call records submenu.

 4

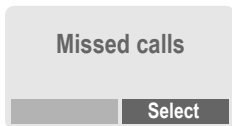


Select

Press.

Press **right** soft key to open the list of Missed calls.

 
5

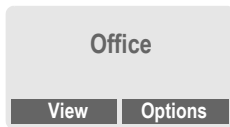

The last call is displayed. Scroll to the required entry.

Press scroll key **at the bottom** to scroll downwards.

 6

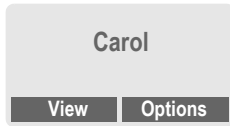


View

Press.



 Press **left** soft key to display the phone number with date and time.

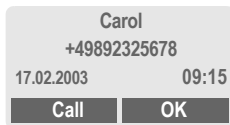7



The phone and SIM card are protected against misuse by several security codes.

**Keep these confidential numbers in a safe place where you can access them again if required.**

<b>PIN</b>	Protects your SIM card (personal identification number).
<b>PIN2</b> 	This is needed to set the charge detail display and to access additional functions on special SIM cards.
<b>PUK PUK2</b> 	Key code. Used to unlock SIM cards after the wrong PIN has been entered.
<b>Phone code</b>	Protects some functions of your phone. Must be defined at the first security setting.

**Menu** → **Setup** → **Security**  
→ then select function

## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivation of the control.

**Select**



Press.

**OK**

Enter PIN.

**Change**

Confirm input.

**OK**

Press.

Confirm.

## Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.



Enter **old** PIN.

**OK**

Press.



**OK**

Enter **new** PIN.



**OK**

Repeat **new** PIN.

## Change PIN 2



(displayed only if PIN 2 is available).  
Proceed as with **Change PIN**.

## Change phonecode

You define and enter the phone code (4 - 8 digits) when calling a phone code protected function (e.g. **Direct call**, p. 22) for the first time. It is then valid for all protected functions.

If it is entered incorrectly three times the phone is locked. Contact the Siemens Service (p. 80).

## Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

### Note

Direct call .....	p. 22
Screensaver .....	p. 57
Key lock .....	p. 72
Further security settings.....	p. 61

## Prevent accidental activation

Even if PIN use is deactivated (p. 14) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Hold **down**.

Please confirm switch on

OK

Cancel

OK

Press to switch on the phone.

Cancel

Press (or no further input) to stop switch-on procedure. The phone does not switch on.



Your phone offers a number of functions so that you can adapt it to meet your personal requirements.

## Ring tones

Assign individual ringtones to caller groups (page 49, page 54).

## Logo, Screensaver, Animation

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

### To switch on

Select a bitmap style and a greeting (p. 56) that you create yourself.

### Screensaver

You can set an analogue clock, an animation or an individual picture as screensaver (p. 57). The screensaver's appearance can change automatically at various times set by you.

### (Provider) Logo

Select an individual picture to replace the network provider's logo/name (p. 56).

## Where do I get what?

You can order additional ringtones, logos and screensavers on the Internet and receive them via SMS:

[www.my-siemens.com/ringtones](http://www.my-siemens.com/ringtones)

[www.my-siemens.com/logos](http://www.my-siemens.com/logos)

[www.my-siemens.com/screensaver](http://www.my-siemens.com/screensaver)

Or you can download them directly via WAP:

[wap.my-siemens.com](http://wap.my-siemens.com)

## Siemens City Portal

Further services for your mobile phone such as a Photo Logo Composer to create personal pictures for your Phonebook can be found on page 26:

[www.my-siemens.com/city](http://www.my-siemens.com/city)

The Siemens City Portal also offers a list of countries in which these services are available.

## CLIPit™ Covers

Select different colours for the top and bottom covers from the Siemens City Portal. Or use a personal photo to make your phone unique:

[www.my-siemens.com/my-clipit](http://www.my-siemens.com/my-clipit)

## Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with prefix, if necessary with the international dialling code).

**Clear** A **short** press clears the last digit, a **long** press clears the entire number.



Press the Call key. The phone number displayed is dialled.

## End call



Press the End key **briefly**. The call is ended. Press this key even if the person on the other end of the line has hung up first.

## Set volume



You can activate adjustment of the handset volume with the scroll key (at the top), but only during a call.



Set volume.

If a car kit is used, its volume setting will not affect the usual setting on the phone.

## Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then press...



... to dial.

### Note

Store number .....	p. 23
<b>Options</b> Call lists .....	p. 31
<b>Hold</b> Swap/conference .....	p. 20
menu Call menu .....	p. 21
<b>Divert</b> Divert set .....	p. 59
<b>Handsfr.</b> Handsfree .....	p. 19
International dialling codes .....	p. 72
Key lock .....	p. 72
Phone number memo .....	p. 73
Microphone off .....	p. 21
Phone number transmission off/on (Hide ID) .....	p. 57
Control codes (DTMF) .....	p. 70

## When a number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

### Auto redial previous numbers

**Auto dial** Press. The number is automatically dialed for up to 15 minutes at increasing intervals. End with:



End key.

Or

### Call back



 
**Call back** Press. Your phone rings when the busy number is free. Press the Call key to dial the number.

Or

### Reminder

**Prompt** Press. A beep reminds you to redial the displayed phone number after 15 minutes.

## Accept call

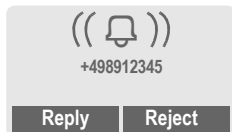

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

**Reply** Press.

Or



Press.

If the phone number has been transmitted by the network, it is displayed. If the number and the name are stored in the Phonebook, the corresponding name is displayed instead. If set, an animation can be displayed instead of the bell icon (p. 26).

### Note

Please make sure you have accepted the call before holding the phone to your ear. This will avoid possible damage to your hearing by a loud ringtone.

## Reject call

**Reject** Press.

Or



Press **briefly**.

### Note

Missed calls.....p. 31

## Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.



**Handsfr.** Activate handsfree function.

**Yes** Activate.



Control volume.

**Handsfr.** Deactivate.

### Note

**Always deactivate "handsfree talking"** before holding the phone to your ear. This will avoid damage to your hearing.

 
**menu** Call menu .....p. 21

## Held call

You can call another number during a call.

**menu** Open call menu.

**Hold** The current call is put on hold.

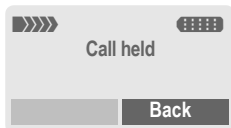

Now dial the new phone number (also from Phonebook: ).

When the new connection is established:

**menu** Open call menu

**Swap** Swap back and forth between both calls.

### Note

Additional costs will be incurred for the 2nd phone connection.

## Call waiting/Swap



You may need to register for this function with the service provider and set your phone accordingly (p. 57).

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

### Accept the waiting call

**Swap**

Accept the waiting call and place the current call on hold. To swap between the two calls, proceed as above.

End the current call:



**Yes**

Return to the held call.

**Or**

**No**

The held call is ended.

## Reject waiting call

**Reject**

Reject the waiting call. The caller hears the busy tone.

**Or**

**Divert**

If this is set, the waiting call will be diverted to the mailbox for example (setting, p. 59).

## End current call



End the current call.

**Reply**

Accept the new call.

## Conference



Call up to 5 parties one by one and link them together in a phone conference. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

You have established a connection:



Open menu and select **Hold**. The current call is put on hold. Now dial a new number. When the new connection is established ...



... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

## End



**All** calls in the conference are ended simultaneously when the End key is pressed.

### Note

Additional costs will be incurred for every additional phone connection.

## Call menu

The following functions are only available during a call:



Open menu.

### Hold

(p. 20)

### Microphone on

Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting).

Alternatively:  Hold down.

### Handsfree

(p. 19)

### Volume

Adjust handset volume.

### Conference

(p. 21)

### Time/cost

While the connection continues, the call duration and (if set, p. 32) the charge details are displayed.

### Send DTMF

(p. 70)

### Swap

(p. 20)

### Call transfer



The original call is joined to the second one. For you, both calls are now ended.

### Main menu

Access to the main menu.

### Call status

List all held and active calls (e.g. participants in a conference).

## Direct call

The phone can be locked, so it's only possible to dial a defined number, for e.g. your babysitter and your child at school.

### Switch on

**Menu** → **Setup** → **Code protect.**  
→ **Direct call**

**Select** Press.



Enter phone code:

When first prompted you define and enter the phone code (4 - 8 digits).

**Please do not forget this code!**

**OK** Confirm input.

 
**Change** Press.



Select phone number from the Phonebook (p. 23) or enter a new one.

**OK** Confirm On.

### Use

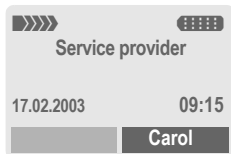

Hold **down** the **right** soft key to dial (e.g. Carol's phone number).

### Switch off



Hold **down**.



Enter phone code.

**OK** Confirm input.

**Change** Press.

**OK** Confirm Off.

#### Note

 
Change phone code ..... p. 15

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Entries that belong together can be combined to form a **group**.

## <New entry>



Open Phonebook (in standby mode).

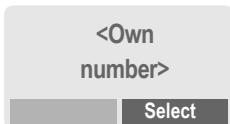

Select <New entry>.



Press.



Activate input fields.



Make the following entries. The maximum number of characters available is shown at the top of the display.

## Number:

Always enter phone number with an area dialling code.

## Name:

Enter (Text entry, p. 24).

## Group:

Default: **No group**



Entries can be organised by groups (p. 27) for example:

Family, Friends, VIP, Others

## Location:

Default: **SIM**



Select a storage location: **SIM**, **Mobile** or **Protected SIM** (p. 25).

## Record no.:

Each entry is automatically assigned a number under which it can also be selected (p. 24).



Press to change the entry number.



Press to store the new entry.

### Note

<Groups> .....	p. 27
<Own number> .....	p. 73
<b>+List</b> International dialling code .....	p. 72
Service numbers .....	p. 73
Store control codes .....	p. 70



## Text entry

Press number key repeatedly until the required letter is displayed. The cursor advances after a short delay.



**Press once for a, twice for b** etc. The first letter of a name is automatically written in UPPER CASE.

**Hold down:** Writes the digit.



Umlauts and numbers are displayed after the relevant letters.



**Press briefly** to delete the letter before the cursor.

**Hold down** to delete the whole name.



Move the cursor (forward/back).



**Press briefly:** Switch between: **abc, Abc, ABC, T9abc, T9Abc, T9ABC, 123**. Status indicator in the top line of the display.

**Hold down:** All input modes are displayed.



**Press briefly:** Select special characters (p. 71).

**Hold down:** Open input menu (p. 72).



**Press once/repeatedly:**

., ? ! ' " 0 - ( ) @ / : \_ + ~ &

**Hold down:** Write 0



Space. Press twice = skip line.

## Call/search for an entry



Open Phonebook.



Select a name with the first letter and/or scroll.



Dial number.

## Call with record no.

A record number is automatically assigned to every new entry in the Phonebook.



Enter record number (in standby mode).



Press.



Dial number.

## Edit entry



Select entry in the Phonebook.



Press and select **Edit**.



Select required input field.



Make your changes.



Press.

## Phonebook menu

<b>Options</b>	Open menu.
<b>View</b>	Display entry.
<b>Edit</b>	Open entry for editing.
<b>New entry</b>	Create a new Phonebook entry.
<b>Delete</b>	Delete entry from the Phonebook.
<b>Delete all</b>	Select storage location. Delete all entries after confirmation.
<b>Send SMS...</b>	<b>as entry:</b> Send Phonebook entry as vCard to recipient. <b>as text:</b> Send entry as text of an SMS message.
<b>Animation</b>	Assign an individual animation to the phone number (p. 26).
<b>Capacity</b>	Display the maximum memory and the available capacity for SIM, Protected SIM, phone memory and animations.

## Location:

An entry can be moved to different storage locations in the Phonebook (change entry, p. 24).

### SIM (standard)

Entries that are stored in the Phonebook on the SIM card can also be used on a different GSM phone.

### Mobile

Phonebook entries are stored in the memory of the mobile phone when the memory of the SIM card is full.

### Protected SIM



Phone numbers can be stored in protected locations on a special SIM card. A PIN 2 is needed for editing (p. 14).

### Symbols in the opened entry



Storage location (p. 25)



Animation (p. 26)



Groups (p. 27)

## Assign animation

Assign an individual animation to phone numbers. This animation will appear in the display when there is a call from this number.

### Assign animation



Open Phonebook.



Select entry.

**Options**

Open menu.

**Select**

Select **Animation**.  
Select **Own animations** or **Own pictures**.



**Show**

Select **Animation**.

The preview (p. 48) is opened and the animation is displayed.

**Select**

The animation is assigned to the phone number. It appears with a symbol in the Phonebook.

## Delete/change animation

If an animation is assigned to a phone number, it can be deleted or replaced.



Select entry with animation in the Phonebook.

**Options**

Press.

**Select**

Select **Animation**.

**Delete**

The assignment is cleared after confirmation.

**Or**

**Select**

The current animation is displayed.

### Note

Animations can simply be pictures.

An animation can be assigned to several phone numbers.

Add pictures/animations ..... p. 48

Siemens City Portal ..... p. 16

## Groups

If there are many Phonebook entries it is best to assign them to a group, e.g.: **Family, Friends, VIP, Others**

 
A special ringtone can sound (p. 54) and/or a symbol can be displayed if the phone number of a call is registered in a group.

## Select a group

**Menu** → Phonebook → <Groups>



Select a group (the number of the entries is listed behind the group name).

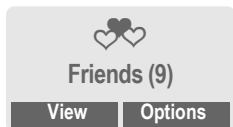

**View**

Press. All entries of the selected group are displayed.

The following functions are applied to the group or all entries of a group:

## Groups menu

**Options** Open menu.

**View members** Display all entries assigned to the group.

**Rename group** Change the current name of the group.

**Call to group** Call up to 5 members of a group one by one and link them together in a conference (p. 29).

**SMS to group** Send an SMS to all members of a group (p. 28).

## Change group assignment

You can assign a Phonebook entry to a group when you enter it (p. 23).

To change the group assignment or to assign to a group later:

When the Phonebook is open:



Select entry.

**View**

Press.

**Edit**

Press.



Scroll to Group.

**Change**

Press and select a new group.

**Save**

Confirm assignment.

## Group entry menu

 
<b>Options</b>	Open menu.
<b>View</b>	Display entry.
<b>Edit</b>	Open entry for editing.
<b>New entry</b>	Enter new member.
<b>Remove</b>	Remove entry only from the group. It is still available in the Phonebook.
<b>Remove all</b>	Remove all entries from the group.
<b>Send SMS...</b>	<p><b>as entry:</b> Send Phonebook entry to recipient.</p> <p><b>as text:</b> Send entry as text of an SMS message.</p>
<b>Animation</b>	Assign an individual animation to the phone number (p. 26).

## SMS to group

A memo (SMS) can be sent as a "circular" to all members of a group. Each SMS is charged separately!



Select a group (the number of the entries is listed behind the group name).

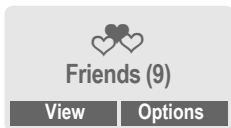**Options**

Press and select **SMS to group**.

**Select**

Press. The editor is opened.



Compose message.



Press. The Group is displayed.

**OK**

Press. The first recipient is displayed.



Press. The SMS is sent to the first recipient.



Press to start the next send operation.

Each send operation must be confirmed. Individual recipients may be skipped.

## Call to group



You can call up to 5 group members one by one and link them together in a conference (function may need to be enabled by the service provider).



Select a group.

**Select**

 
Press. The members of the group are listed.



Select the entries you want to call.

**Change**

Press. Mark entry/unmark entry.

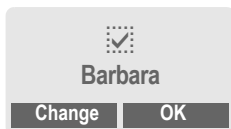

**OK**

 


Confirm selection. The first entry is dialled. When the connection has been established, the call is put on hold.

Proceed by calling the next entry until all marked entries are called (up to 5, depending on the service provider).

**Options**

Open menu e.g. to link the calls on hold in a conference.

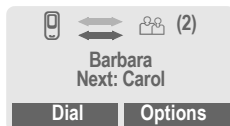



## Call to group menu

**Options**

Open menu.

Dial	Dial current entry.
Skip	Skip next number.
Conference	Link all calls on hold in a conference (p. 21).
Swap	Accept the waiting call and put the current call on hold (p. 20).
Hold	Put call on hold to call another entry.

<b>Microphone</b>	Switch the microphone on or off. If it is switched off, the person on the other end of the line cannot hear you (muting). Alternatively:  Hold <b>down</b> .
<b>Handsfree</b>	Call via the loudspeaker.
<b>Volume</b>	Adjust handset volume.
<b>Time/cost</b>	While the connection continues, the call cost and (if set, p. 32) the call time/cost are displayed.
<b>Send DTMF</b>	(p. 70)
<b>Call transfer</b> 	The original call is joined to the second one. For you, both calls are now ended.
<b>Main menu</b>	Direct access to the main menu.
<b>Call status</b>	List all held and active calls (e.g. participants in a conference).

Your phone stores the phone numbers of calls for convenient redialling.

**Menu** → Call records

**Select** Press.



Choose call list.

**Select** Press.



Select phone number.



Dial phone number.


Or

**View** Display information on the phone number.

The following call lists are available:

## Missed calls

The phone numbers of the last ten calls that you have received but not answered are stored for call back purposes.

 Icon in standby mode for missed call. When you press the control key (on the left), the phone number is displayed.

Requirement: The network supports the "Caller Identity" feature.

## Calls received

The last ten accepted calls are listed. Requirement: The network supports the "Caller Identity" feature.

## Calls dialled

Access to the last ten numbers you dialled.



Fast access in standby mode.


## Erase records

The contents of all call lists are deleted.

## Call list menu

The call list menu can be called up if an entry is highlighted.

**Options** Open call list menu.

View	View entry.
Correct no.	Load number into display and correct it there if necessary.
Save no. to 	Store entry in the Phonebook.
Delete	Delete entry after confirmation.
Delete all	Delete all entries of the call list after confirmation.



You can display the charge details and the duration of calls as you speak as well as setting a unit limit for outgoing calls.

**Menu** → Call records  
→ Duration/ charges

After you have made the charge detail settings, you can display the call duration/charges for the various call types or you can display the credit balance.

Select a function:

Last call

All outgoing calls

All incoming calls

Remaining units

Charge settings

**Select** Display the data.

When displayed, you can:

**Reset** Reset display.

**OK** End display.

## Charge settings

**Menu** → Call records  
→ Duration/ charges  
→ Charge settings

**Currency**  
(PIN 2 query)



Enter the currency in which the charge details are to be shown.

**Personal rate**  
(PIN 2 query)



Enter the charges per unit/period.

**A/c limit**  
(PIN 2 query)



Special SIM cards allow you or the service provider to define a credit or period after which the phone is barred for outgoing calls.

**Select** Press, enter PIN 2.

**A/c limit** Activate.



Enter the number of the units and ...

**OK** confirm.

Then confirm the credit or reset the counter. The display of the credit balance of prepaid cards may vary depending on the service provider.

## Automatic Display

Call duration and charges of the last call are automatically displayed after each call.

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer calls,
- if you are making a phone call (and if **Call waiting** is not active, p. 57).

If the voice mail service is not part of your service provider's user package, you will need to register for it and the settings must be made manually. The procedure described below may vary slightly depending on the service provider.

## Settings

Your service provider supplies you with two phone numbers:

### Mailbox number

You call this phone number to listen to the voice mails left for you. To set it up:

**Menu** → Messages → Voice message

Select phone number from Phonebook or dial/change it and confirm with **OK**.

### Call divert

Calls are diverted to this phone number. To set it up:

**Menu** → Setup → Divert  
→ e.g. Unanswered → Set



Dial the number of the mailbox.

**OK**

Registration at the network will be confirmed after a few seconds.

For further information on call divert, see p. 59.

## Play back messages

A new voice mail can be announced as follows:



Icon including beep.

Or



A text message announces a new voice mail.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold **down** (if necessary enter mailbox number once only).

Confirm with **OK** or **Mailbox** depending on your service provider.

Outside your home network, you may need to dial a different mailbox number and enter a password to access your mailbox.

 
You may transmit and receive very long messages (up to 760 characters) on your phone, which are automatically composed from several "normal" SMS messages (note the accruing charges).

Depending on the service provider, e-mails and faxes can also be sent or e-mails can be received via SMS (change setting if necessary, p. 40).


## Read messages



Display indicates a new message.

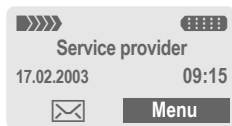

 Press the control key on the left to read the message.

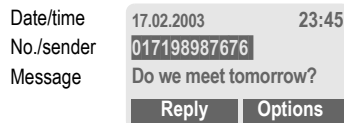

Scroll through the message line by line.

**Reply**

Reply menu shown below.

**Options**


Inbox/outbox menu (p. 35).

## Pictures and sounds in SMS

**Pictures** or **sounds** can be part of messages you receive.

Pictures are shown in the message, sounds are indicated as notes. If a note is reached when scrolling through the message, the corresponding sound is played (to send pictures and sounds see p. 39).

### Note

 Message store full ..... p. 72  
Use **highlighted** phone no./URL ..... p. 73

## Reply menu

### Reply

Open the reply menu.

 
<b>Write message</b>	Create a new reply text.
<b>Edit</b>	Edit message received or assign a new text to it.
<b>Answer is YES</b>	Add YES to the message.
<b>Answer is NO</b>	Add NO to the message.
<b>Call back</b>	Append a standard text to the message as a reply.
<b>Delay</b>	
<b>Thanks</b>	

When the message has been edited in the editor, it can be stored or sent with **Options**.

## Inbox/outbox

**Menu** → Messages  
→ Inbox / or Outbox /

The list of saved messages is shown.

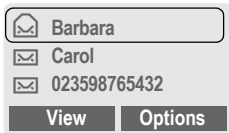

**Options** See below.

Symbol	Inbox /	Outbox /
	Read	Not sent
	Unread	Sent

## Inbox/outbox menu

Different functions are available depending on the context:

**Options** Open menu.

<b>View</b>	Read entry.
<b>Reply (Inbox only)</b>	Directly answer incoming SMS messages.
<b>Delete</b>	Delete selected message.
<b>Delete all</b>	Delete all entries after confirmation.
<b>Send</b>	Dial number or select from the Phonebook, then send.
<b>Edit</b>	Open editor for editing.
<b>Picture &amp; sound (p. 39)</b>	List pictures and sounds included in the message.
<b>Capacity</b>	Display maximum and available capacity.
<b>Status report </b>	(Outbox list only) Request delivery confirmation for messages sent.
<b>Mark as unread (Inbox only)</b>	Mark the message as unread.
<b>Save no. to </b>	Copy a selected phone number to the Phonebook.
<b>Send with...</b>	Change SMS profile before sending (p. 40).

## Compose a message

**Menu** → Messages → New SMS



Text entry with T9, p. 37 allows you to create long text messages quickly using just a few key entries.

**Clear** Press **briefly** to delete letter by letter, hold **down** to delete the entire word.

Press.



Dial number or pick out from the Phonebook.

**OK**

Confirm. The message is sent to the service centre for transmission.


**OK**

Return to the message.

**Options**

Open menu and select **Save** to store the message.

**Display in the uppermost line:**

 Abc SMS 1 739  
We start at 8 a.m.

### Note

Insert pictures&sounds into text ..... p. 39

If **Message type**, **Validity period**, **Service centre** are requested ..... p. 40

T9 information ..... p. 37

Enter special characters..... p. 71

SMS status report..... p. 74

## Text menu

**Options**

Open the text menu.

**Send**

Dial the number or select from Phonebook, then send.

**Save**

Save SMS in the outbox list.

**Picture & sound**

Add pictures and sounds to SMS (p. 39)

**Format**

Line feed

Small font, Medium font, Large font

Underline

Left, Right, Center (align)

Mark text (highlight text with the scroll key)

**Clear text**

Delete the whole text.

**Insert text**

Insert predefined text fragment.

**Insert from**  


Open Phonebook and copy phone number into the message.

**Insert URL**

Insert URL from the WAP bookmarks in the text.

 Abc

Example for T9 active.

abc/Abc/ABC/  
T9abc/T9Abc/  
T9ABC/123

Lowercase/uppercase letters and digits.

SMS

Display title.

1

Number of the required SMS messages.

739

Number of characters still available.

<b>Text input</b>	<b>T9 preferred:</b> Activate/deactivate T9 input (p. 37). <b>Input language:</b> Select the language in which the message is to be composed (p. 37).
<b>Send with...</b>	Change SMS profile before sending (p. 40).

## Predefined text

Standard text fragments which can be added to messages are stored in the phone. You can also create five additional text fragments yourself.

### Write text fragments

**Menu** → Messages → Predefined text



Select <New entry>.



Write text fragment.

**Save**

Press.

### Use text fragments



Compose message.

**Options**

Open the text menu.



Select **Insert text**.



Select text fragment from the list.

**Select**

Confirm. The text fragment is inserted in the message at the cursor position.

## Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

### Setup

**Menu** → Messages → Text input

**Activate, deactivate T9**

**T9 preferred** Select.



Activate T9.

**Change**

Confirm.

<sup>T9</sup>Abc on the display indicates for example whether lower case/upper case is active.

### Select input language

Select the language in which you want to compose your message.

**Input language** Select.

**Select**

Confirm, the new language is set.

Languages with T9 support are marked by the T9 symbol.


## Create a word using T9

Since the display changes as you proceed it is best if you finish a word without looking at the display.

You simply press the keys where the relevant letter is located **once only**. For "hotel", for example:

 Press briefly for T9 **Abc** then

 Press. A blank ends a word.

Do not use special characters such as Å but write the standard character, e.g. A, T9 will do the rest for you.

### Note



Full stop. Ends a word when a blank follows. Acts as a wildcard character for an apostrophe/hyphen in the word:

e. g. **provider.s** = provider's.



Press control key at the bottom to end a word.



**Press briefly:** Switch between: **abc, Abc, T9abc, T9Abc, T9ABC, 123**. Status indicator in the top line of the display.

**Hold down:** All input modes are displayed.



**Press briefly:** Write special characters (p. 71).

**Hold down** to open the input menu (p. 72).

## T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**. Then press

 


The displayed word is replaced with a different word. If this word is also incorrect,



press again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it may be written without T9.

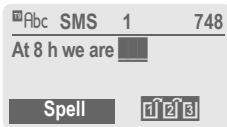

To add a word to the dictionary:

**Spell** Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

## Correct a word

Words created **using** T9:



Move word by word to the left/right until the required word is highlighted.



Scroll through the T9 word suggestions again.

**Clear**

Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** created using T9:



Move character by character to the left/right.

**Clear**

Deletes the character to the left of the cursor.



Characters are inserted at the cursor position.

## Note

Within a "T9 word", individual letters may not be edited without removing T9 first. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

## SMS to group

You can send messages (SMS messages) as "circulars" to all members of a group (p. 27).

## Picture & sound

Insert pictures and sounds in the message (EMS, p. 71).



Compose the message.

**Options**

Open the text menu at the end of a word.



Select **Picture & sound**.

The Pictures&Sound menu opens:

Fix animations

Fix sounds

Own animations

Own pictures

Own sounds



Select range.

**Select**

Confirm.

The first entry of the selected range is displayed.

Scroll in the list to the required entry.



**Select**

The picture/the animation is inserted in the message. Sounds are indicated by a wildcard.



**Show** To select from Own pictures/Own animations, you must open the preview first.

## Note

Playback only occurs on phones that support this function.

In input mode a wildcard is shown instead of the sound.

Own pictures/Own animations ..... p. 48.

## SMS profiles

**Menu** → Messages → SMS profiles

### Activate SMS profile

You can change the current profile.



Select a profile.

**Select**

Press to activate. The current profile is selected.

Irrespective of this setting, you may always decide before sending an SMS which profile you want to use (see text menu **Options** → Send with..., p. 36).

### Set SMS profiles

A maximum of 3 SMS profiles can be set. They define the transmission characteristics for an SMS. The pre-setting depends on the SIM card inserted.

To set a new profile:



Select profile.

**Options**

Open menu.

**Change settings** Select and confirm.

**Service centre**

Enter or change the phone numbers of the service centre as supplied by the service provider.

**Recipient**

Enter the standard recipient for this transmission profile or select from the Phonebook.

**Message type**

**Manual**

The message type is requested for each message.

**Standard text**

Normal SMS message.

**Fax**

Transmission via SMS.

**E-mail**

Transmission via SMS.

**New**

You may need to obtain the required code number from your service provider.

<b>Validity period</b>	<p>Select the period in which the service centre tries to deliver the message:</p> <p>Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*</p> <p>*) Maximum period that the service provider permits.</p>
<b>Status report</b> 	<p>You are given confirmation of the successful or unsuccessful delivery of a sent message. This service may be subject to a charge.</p>
<b>Direct reply</b> 	<p>The reply to your message is handled via your service centre when <b>Direct Answer</b> is activated (for information please contact your service provider).</p>

Some service providers offer information services (info channels). If reception is activated, you receive messages on the activated topics in your "Topic list".

**Menu** → Messages  
→ Cell broadcast services

## Receive CB



You can activate and deactivate the CB service. If the CB service is activated, the standby time of the phone will be reduced.

## Read new CB

All unread CB messages are displayed.

## Topic list

You can add an unrestricted number of topics to this personal list from the topic index (**Topic index**). You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

## New topic

Select <New Topic>.

- If no topic index (**Topic index**) is available enter a topic with its channel number and confirm with **OK**.
- If the topic index has already been transmitted select a topic and confirm with **OK**.

## Selection from a list


**Options** Open list menu.

If a topic is selected in the list you can have a look at it, activate, deactivate, edit or delete it.

## Auto display

CB messages are displayed in standby mode, longer messages are automatically scrolled. This display can be activated/deactivated for all or only new messages.

To switch to "full page view":

, then press **View CB**.

## Topic index



The list of topics is displayed for you to choose from. If none are displayed, you must enter the channel numbers (ID) manually (**Topic list**). Please contact your service provider for details.

## CB languages

You may define whether you want to receive Cell Broadcast messages in a specific language only or in all languages.

### Displays



Topic activated/deactivated.



New messages received on the topic.



Messages already read.

## Internet (WAP)

Get the latest WAP information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download sounds, pictures and animations to your phone via WAP. Internet access may require registration with the service provider.

 
### Internet access



**Menu** → Surf & fun → Internet

The browser is activated as soon as you call up the function. If necessary, set how the Internet access should be made (see in the browser menu **Setup** → **Start with...**, p. 44).

The start menu appears, for example:

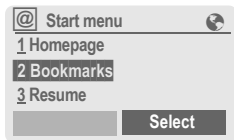

Select required function.

**Select**

Confirm.

You can now surf the Internet. For further instructions see p. 75.

## Start menu

<b>Homepage</b>	The connection to the Internet provider's portal is established (may be set/preset by the service provider).
<b>Bookmarks</b>	Display up to 9 URLs stored in the phone for fast access.
<b>Resume</b>	Call up recently visited pages that are still in the memory.
<b>Profiles</b>	Set up to 10 access profiles (p. 46).
<b>Inbox</b>	Inbox for messages from the WAP server.
<b>Exit browser</b>	Close the browser and clear down the connection.

## End connection



Hold **down** to end the connection.

## Browser menu

If the browser is active, the menu can be activated as follows:



Press

or



confirm.

<b>Homepage</b>	The first WAP Internet page that is displayed after connection is established (may have been set/preset by the service provider).
<b>Bookmarks</b>	Display up to 9 URLs stored in the phone for fast access.
<b>Resume</b>	Call up recently visited pages that are still in the memory.
<b>Go to URL</b>	Enter URL for directly accessing an Internet address, e.g. <b>wap.my-siemens.com</b>
<b>Show URL</b>	Show Internet address of the current page.
<b>Reload</b>	The page is reloaded.
<b>Disconnect</b>	End connection.
<b>More ...</b>	See below.
<b>Exit browser</b>	Close the browser and clear down the connection.

## More ...

<b>Profiles</b>	Set up to 10 access profiles (p. 46).
<b>Reset</b>	Delete the pages last visited (cache).
<b>Setup</b>	<b>Font size</b> <b>Protocol parameters</b> <ul style="list-style-type: none"> <li>• Push</li> <li>• Push can force online</li> <li>• Timeout for unanswered network requests</li> </ul> <b>Security</b> <ul style="list-style-type: none"> <li>• Connection prompt</li> <li>• Secure prompt</li> <li>• Current certificate</li> <li>• CA certificates</li> <li>• Private Key PINs</li> <li>• Encryption</li> </ul> <b>Start with...</b> <ul style="list-style-type: none"> <li>• Start menu</li> <li>• Browser menu</li> <li>• Homepage</li> <li>• Resume</li> <li>• Bookmarks</li> </ul>
<b>Inbox</b>	Inbox for messages from the WAP server.
<b>About Openwave</b>	Display the browser version.