

Table of Contents 1

Safety precautions	2	Voicemail/CB services	27
Phone overview	4	SMS	28
Display symbols (selection)	6	Surf & fun	30
Getting started	8	Internet browser (WAP)	30
Using the SIM card/battery	9	Games	31
Charging the battery	10	Profiles	32
Switching on/off, PIN	11	Setup	34
Switching on your phone		Ring tones	39
for the first time	11	Extras	40
Strong reception signal	12	Alarm clock	40
Without a SIM card	12	Calculator	40
General information	13	Stopwatch	40
User guide	13	SIM services (optional)	40
Menu Control	13	Fast access	41
Standby mode	13	Own stuff	42
Security	14	Questions & Answers	43
Codes	14	Customer Care	46
Clear SIM card barring	15	Care and maintenance	48
Making a phone call	16	Product data	49
Text entry	19	Battery quality statement	51
Predef. texts	22	SAR - European Union (RTTE) ...	52
Phonebook	23	SAR - International (ICNIRP)	54
<New entry>	23	Guarantee certificate (UK)	55
Call (search for an entry)	23	Guarantee certificate (IRL)	56
Edit entry	23	Menu tree	57
Assign picture	24	Index	61
Groups	25		
Records/Durat/charges	26		

This is a short version of the operating instructions. You
can download the detailed version from the Internet at:
www.siemens-mobile.com/a60

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



The ring tone (p. 39), info tones (p. 39) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 17). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100% mercury-free) and -charging devices. Otherwise you risk serious damage to health and property: The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

Important:

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!

Phone overview

① Call key




Dial phone number /name displayed, take calls. Show last phone numbers dialed in standby mode.

② On/Off/End key

- Switched off: **Hold down** to switch on.
- During a call or in use: **press briefly** to finish.
- In menus: **Press briefly**: one level back. **Press and hold**: return to standby mode.
- In standby mode: **Hold down**, to switch off phone.

③ Control key




In lists and menus:

-  Scroll up and down.
-  Function call.
-  Back a menu level.

During a call:

-  Open call menu.

In standby mode:

-  Open Phonebook.
-  Open menu.
-  GPRS info



① Integrated antenna

Do not interfere unnecessarily with the phone above the battery cover. This reduces reception quality.

② Loudspeaker**③ Display symbols**

Signal strength/GPRS available/battery level.

④ Display keys

The current functions of these keys are shown in the bottom line of the display as **text** / symbol (e.g.).

⑤ Input keys

Numbers, letters.

⑥ Press and hold


- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: switch off ring tones only.

⑦ Press and hold

In standby mode: switch key lock on/off.

⑧ Microphone**⑨ Plug socket**

Connection for charger, headset etc.

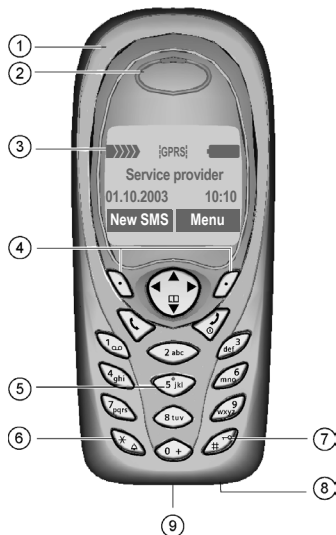

Display symbols (selection)

Display symbols

	Signal strength.
	Charging.
	Battery charging status, e.g., 50%.
	Phonebook
	Call records
	Surf & Fun
	Ring tones
	Messages
	Profiles
	Extras
	Own files
	Setup
	All calls are diverted.
	Ringer off.
	Short ring (beep) only.
	Ring only if the caller is stored in the Phonebook.
	Alarm set.
	Alarm clock active.
	Key lock active.

Phone numbers/names:

	On the SIM card
	On the SIM card (PIN 2 protected).
	In the phone memory.
	No network access.
	Function activated/deactivated.
	Phonebook.
ABC/ Abc/abc	Indicates whether upper- or lower case letters are active.
	Text input with T9.
GPRS	Activated and available.
	Registered.
	Temporarily interrupted.
GPRS	GPRS download.
	WAP Online.
	WAP via GPRS online.
	WAP No network.
	Headset active.
	Auto answer feature on.

Depending on your service provider, some of the symbols displayed here may differ from those on the phone.

Display symbols (selection)

7

Soft keys

Message received.



Voice mail received.



Data received.



Picture received.



Melody received.



Unanswered call.



Store in Phonebook.



Retrieve from Phonebook.

Getting started

The front and back covers of the phone and the keypad itself can be changed in seconds – no tools required (CLIPit™). Please switch the phone off first:

Assembling



Dismantling



Additional notes

Your phone's display and the camera lens on the back are covered with a protective film when delivered. **Remove this film before getting started.**

To avoid damage to the display, the phone should not be used without the front cover.


Using the SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is credit card-sized, snap out the smaller segment and trim any rough edges.


- Remove the cover in the direction of the arrow ①.




- Insert the SIM card in the opening with the contact area **facing downwards** and push gently until it engages below the holder (make sure the angled corner is in the correct position ②).

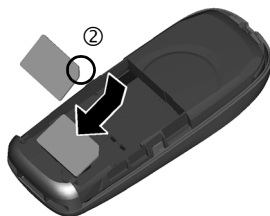

- Insert the battery sideways into the phone ③, then press downwards ④ until it engages.

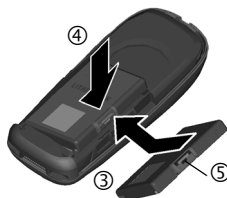

- To remove, press the retaining tab ⑤ then lift the battery out.
- Slide the cover over the phone ⑥ until it latches into place.

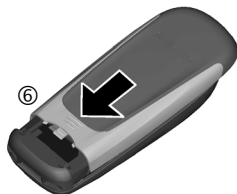

Additional notes

Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM cardp. 12

Charging the battery

The battery is not supplied fully charged. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**.



Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The voltage specified on the power supply unit must not be exceeded.

Charge icon not visible

If the battery was fully discharged, the charging symbol will not be immediately visible on connection to the power supply unit. It will appear after up to two hours. In this case the battery is fully charged after 3–4 hours.

Only use the power supply unit provided!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should therefore **not remove the battery unnecessarily** and where possible **not interrupt charging prematurely**.

Additional notes

The power supply unit will become hot after extended use. This is normal and is not dangerous.

Switching on/off, PIN

Turning the phone on/off




Hold down the On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

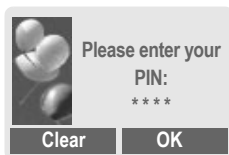

OK

Confirm your input with the right soft key. Logging on to the network will take a few seconds.

Switching on your phone for the first time

Time/Date

The clock must be set to the right time once at start-up.

Yes

Press.



First enter the date (day/month/year), then the time (24 hours, including seconds).

OK

Press. The time and date are updated.

Time zones

Specify your current time zone.




Select the desired time zone from the list ...

Set

... Apply it.

Additional notes

Change PIN	p. 14
Clear SIM card barring	p. 15
Additional clock settings	p. 36
 SIM services (optional)	p. 40

Language

On start-up, you are asked to specify up to two languages for T9 input. This determines which languages are T9-supported on your phone (p. 19).

To free up more space for your own pictures and sounds, the dictionaries for all unselected languages are deleted from the phone.

You can also make this selection at a later time. If you decide to do this, you will be asked to make the selection again the next time you turn on the phone.



Select language.

Change

Activate/deactivate selection. A maximum of two languages can be selected simultaneously.

OK

Confirm selection.

Additional notes

If **all** dictionaries are deleted (no language is selected), T9 input is deactivated and you cannot reactivate it.

If you want to load a dictionary in another language, you will find a large selection to download from the Internet as well as installation instructions at:

www.siemens-mobile.com/t9

Selecting the Input language.....p. 20

Emergency number (SOS)

Use only in real emergencies!

By pressing the soft key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Strong reception signal



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Without a SIM card

If you switch on the phone **without** a SIM card you can still use some phone functions.

Menu

Press soft key. The functions are displayed.

SOS

Emergency, SOS.

General information

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press the control key on the side indicated.



Soft keys



Displays a soft-key function.



Function depends on the service provider, special registration may be necessary.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g. write new SMS:



Press.



for Messages



for New SMS

Menu Control

The steps needed to reach a function are shown in a **condensed form** in this user guide.


For example.

A condensed version of the steps for calling the call list of missed calls:

Menu →  → **Calls missed**

This consists of the following steps:

Menu Open main menu.

→ Select menu  **Records**, then the **Calls missed** function.

Select Confirm.

Standby mode

When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**.

The left soft key may have different functions pre-assigned.



Hold **down** the On/Off/End key to return to standby mode from any situation.

Security

Codes

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

Menu



→ Security

→ Codes

→ Select a function

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Select

Press.



Enter PIN.

OK

Confirm input.

Change

Press.

OK

Confirm.

Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.

Enter **current** PIN.

OK

Press.



OK

Enter new PIN.



OK

Reenter new PIN.

- Menu** →  → **Security**
 → **Codes**
 → Select a function.

Change PIN2

(Display only if PIN 2 is available).
 Proceed as with **Change PIN**.

Change phonecode

You define the phone code (4 to 8 digits) when calling up a phone-code protected function for the first time. It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. In such an instance contact Siemens Service (p. 46).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN entry is deactivated (p. 14) confirmation is required to switch on phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Hold down.

Please confirm switch on

OK

Cancel

OK

Press. The phone switches on.

Cancel

Press or take no action.
 The phone does not switch on.

Additional notes

Screensaver	p. 34
Keylock.....	p. 5
Further security settings	p. 37

Making a phone call

Dialling with number keys

The phone must be switched on (standby mode).



Dial number (always with area code, if necessary with international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key to dial.

End call



Press the End key **briefly**. The call is ended. Press this key even if the person on the other end of the line has hung up first.

Set volume



Use the control key (top) to start adjusting the volume during conversation.



Set volume and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

For redialling previously dialled numbers:



Press the Call key once.



Pick out the required phone number from the list, then press ...



Press

If number busy

Autom. Redial previous numbers

Auto dial

The phone number is automatically dialled ten times at increasing time intervals.

Or

Call back

Call back

Your phone rings when the busy number is free.



Reminder

Prompt

A beep reminds you to redial the displayed phone number after 15 minutes.

International dialling codes




Hold down until a "+" is displayed.

+List

Press and select country.


Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

Answer or  press.

If the phone number has been transmitted by the network, it is displayed. If the caller's name also appears in the Phonebook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon.

Additional notes

-  Save phone number p. 23
- Key barring p. 5
- Accept call using any key p. 35

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!

Reject call

Reject or press  briefly.

Handsfree

You can put the phone down during a call. You can then hear the caller via the loudspeaker.

- Handsfr.** Activate handsfree function.
- Yes** Switch on.



Use the control key to adjust the volume.

- Handsfr.** Switch off.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing!

Swapping between 2 calls



- Making a new connection during a call.

menu Open the call menu.

Hold Hold current call.

Dial a new phone number.

When the new connection is established:

menu Open the call menu

Swap Swap back and forth between both calls.

- You are called during a phone call and you can hear the "call waiting tone" (p. 35).

Swap Accept the waiting call, putting the current call on hold to do so. Swap back and forth between the calls as previously described.

Or



End the current call.

Answer Accept the new call.

Conference



- You can call up to 5 subscribers and connect them to set up a telephone conference. When the new connection is established:

menu Open the menu and select Hold. The current call is put on hold.



Now dial a new number. When the new connection is established ...

menu ... Open the menu and select Conference. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the conference are ended simultaneously when the End key is pressed.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. The cursor advances after a short delay.
Example:



Pressing briefly **once** types the letter **a**, twice the letter **b**, etc.

Hold down to write the number.

Ä,ä,1-9

Umlauts and numbers are displayed after the relevant letters.

Clear

Press briefly to delete the letter before the cursor, **hold down** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Switch between **abc**, **Abc**, **ABC**, **T9abc**, **T9Abc**, **T9ABC**, **123**. Status indicator in the top line of the display.

Hold down: All input modes are displayed.



Press briefly: Special characters are shown.

Hold down: Open input menu.



Press once/repeatedly:

.,?!' " 0 - () @ / : _



Hold down: Writes 0.

Writes blank. Press twice = skip line.

Special characters



Press briefly. The character map is displayed:

1)	¿	¡	_	;	.	,	?	!	+	-
"	'	:	*	/	()	¤	¥	\$	£
€	@	\	&	#	[]	{	}	%	~
<	=	>		^	§	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω						

1) Line skip



Navigate to characters.

Select

Press.

Input menu

With text input:



Hold down: The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add

Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu, select **T9 input**, then **T9 preferred**.

Change Activate T9.

Select Input language

Select the language in which you want to compose your message.

Options Open text menu, **T9 input select**, then **Input language**.

Select Confirm, the new language is set.

Or

Delete Delete T9 dictionary for the selected language.

Type a word using T9

The display changes as you proceed. Therefore, it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



Press briefly for **T9Abc** then



Press. A blank ends a word.

Do not use special characters such as Å but rather use the standard characters, e.g. A; T9 will do the rest for you.

Additional notes



Setting a full stop. Word is ended when followed by a blank space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.

Move to the right. Ends a word.



Press briefly: Swap between: **abc, Abc, T9abc, T9Abc, 123**. Status indicator in the top line of the display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 19).

Hold down: Open input menu (p. 19).

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first.

The word must be highlighted as **inverted**. Then press



buttons. The displayed word is replaced with a different word. If this is also incorrect, repeat until the correct word is displayed.

To add a word to the dictionary:

Spell Select.

Now write the word without T9-support and accept with **Save** into the dictionary.

Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **inverted**.



Scroll through the T9 word suggestions again.

Clear

Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** created using T9:



Move letter by letter to the left/right.

Clear

Deletes the letter to the left of the cursor.



Characters are inserted at the cursor position.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Predef. texts

The phone contains predefined texts that you can add to your messages. You can also create and store up to 5 personal stored texts. Each stored text can contain up to 32 characters.

Unlike personal stored texts, predefined texts cannot be changed or deleted.

Write personal stored texts

Menu →  → Predef. texts

Options Select <New entry>.



Write personal stored text.

Save Press. The text is saved.

Use predefined texts



Write message text.

Options Open text menu.



Select **Predef. texts**.



Select predefined text from the list.

Select Confirm. The predefined text is inserted into the text to the left of the cursor.


Phonebook

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Important numbers can be assigned to different groups.

<New entry>



Open Addressbook (in standby mode).

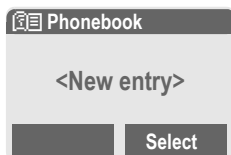

Select

Display of entry fields.



Select entry fields and fill in. The max. number of characters is indicated in the display.

Number: Always enter phone number with prefix.

Name: Enter first name or surname.

Group: Organise entries in groups, select with **Change**.

Location: Select location: **Mobile**, **SIM** or **Protected SIM**.

Record no.: This is automatically assigned to the entry.

Save Press to store the new entry.

Call (search for an entry)



Open Phonebook and select name.



Phone number is selected.

Edit entry



Select entry in Phonebook.

Options Press, **Edit Select**. After making the change **Save**.

Additional notes

<Special books>:

<Own numbrs>: Enter 'own' phone number. <Service number>/<Protected SIM>/<SIM phonebook>

Text entryp. 19

Assign picture

Assign a maximum of 50 phone numbers to an individual picture. This picture will appear in the display when there is a call from this number.



Open Phonebook.



Select entry.



Options Open menu.



Select **Picture**. A picture list is displayed.



Select picture.



Picture is displayed.



The picture is assigned to the phone number and it appears with a ☺ symbol in the Phonebook.

Delete/change image

If a picture is assigned to a phone number, it can be deleted or replaced.



Select entry with picture ☺ in Phonebook.



Press.



Select **Picture**.



The assignment is cleared after confirmation.

Additional notes

One picture can be assigned to multiple phone numbers.

Add pictures.....p. 42


Groups

Four groups are specified in your phone to enable you to arrange your Phonebook entries clearly. You can rename these groups.



Open Addressbook (in standby mode).

<Groups> Select (the number of entries is listed behind the group name).

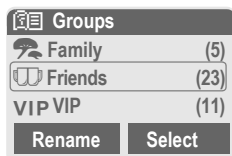

Select a group.

Select

Open group.

or

Rename

Select and give group a name.

Additional notes

No group: Contains all Phonebook entries that do not belong to a group (name cannot be changed).

SMS to groupp. 28

Ring tone for group

If you assign a ring tone to a group, it sounds when one of the group members rings.

Menu → → **Group calls**



Select a group.

Select

Confirm.



Select ring tone.

Select

Confirm.

Records/Durat/charges

Your phone stores the phone numbers of calls for convenient redialling.

Menu → 

Select Press.



Select call record and press **Select**.



Select phone number.




Dial phone number.

Calls missed



The phone numbers of calls that you have not accepted are stored for call-back purposes, if the network supports the "Caller Identity" feature.

 Symbol for acc. call.

Calls received



Accepted calls are listed, if the network supports the "Caller Identity" feature.

Calls dialled

Access to the last numbers dialled.



Fast access in standby mode.

Erase records

The records are deleted.

Call list menu

Options Edit entries.

Durat/charges

You can display the charges and the duration of a call and set a unit limit for outgoing calls.

Menu →  → **Durat/charges**

Select a function:

Last call, All outgoing, All incoming, Remain. units

Select Display data.

Reset Clear display.

OK End display.

Charge sett.

Menu →  → **Durat/charges**
→ **Charge sett.**

Conv.

(PIN 2 prompt)

Currency for charge display.

Personal rate

(PIN 2 prompt)

Charges per unit/period.

A/c limit

(PIN 2 prompt)

Fix a credit/usage period on a special SIM card.

Auto display

Call duration and call charges are automatically displayed for each call.

Voicemail/CB services

Voice mail/mailbox

Menu →  → Msg. setup
→ Voice message

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this service with your service provider and perform some manual settings.

Settings:



Your service provider supplies you with two phone numbers:

Save mailbox number


You call this phone number to listen to the voice mails left for you.

Menu →  → Msg. setup
→ Voice message

Enter mailbox phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.



Menu →  → Divert
→ e. g. Unanswered → Set

Enter call divert number and log on **OK** to network. Divert will be confirmed after a few seconds (see also p. 36).

Play back messages



A new voice mail can be announced as follows:

A  symbol with beep or  an SMS indicates a new voice mail or that you are receiving an automatic announcement. Dial into your mailbox and listen to your message(s).



Hold **down** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services

Menu →  → Msg. setup
→ CB services

Some service providers offer information services (info channels,). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Writing/sending SMS messages

Menu →  → **New SMS**



Write text (for text entry see p. 19).



Press.



Enter phone number or select from Phonebook.

OK

Confirm. Send the SMS to the service centre for transmission.

Receiving SMS



Arrival of new SMS announced on display. To read the SMS, press left soft key.



Scroll through message line by line.

Reply

Functions for a direct reply.

Special functions

Options Open options menu.

SMS to group

Send SMS as a "circular" to a group.

Send Select.

Group Press. Phonebook is opened. Select group members and send SMS.

Picture&sound

Insert pictures and sounds into message.

Picture&sound

Select. The menu contains:

Fix animations, Fix sounds, Own anim., Own pictures, Own sounds



Select section, then select the desired entry and confirm.

Lists

All SMS messages are stored in one of the following lists according to status:

Inbox

Menu →  → **Inbox**

The list of received SMS messages is displayed.

Outbox

Menu →  → **Outbox**

The list of sent SMS messages is displayed.

SMS archive

Menu →  → **SMS archive**

The list of SMS messages stored in the telephone is displayed.

Setup

T9 settings

Menu →  → **Setup**
→ Select a function.

T9 preferred

Activate/deactivate intelligent text entry (see also p. 20).

Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol (see also p. 12).

SMS profiles


Menu →  → **Setup**
→ **SMS profiles**

A profile must be set up for SMS. The transmission characteristics are defined in this profile. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. For further information, please refer to the detailed user guide on the Internet under:

www.siemens-mobile.com/a60

Surf & fun

Internet browser (WAP)

Menu →  → Select a function

Get the latest information from the Internet that is specifically adapted to the display options of your phone. Internet access may required registration with your service provider.

Home



A connection is established with the Internet provider's portal (may be specified/configured by default by your service provider).

Bookmarks

List of URLs for fast access.

Internet



The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable. If necessary set how the Internet access should be made. To this end



Open browser menu and select **Setup/Start with...**

Additional notes



Browser menu.



Offline.



Online.



GPRS online.



No network.



Select special characters, such as @, ~, \, see p. 19

or



press repeatedly for:

., ? ! ' " 0 - () @ / : _

End connection



Hold **down** to end the connection and close the browser.

WAP profiles

Menu →  → Internet
→ Profiles

Preparation of the phone for WAP Internet access depends on your service provider. If these settings have already been applied by the service provider, select and activate profile. If you have to configure the access profile manually, consult your service provider if necessary.

Activate WAP profile

You can change the active profile each time before you access the Internet (if the profile has been set already).



Select profile, then **Select**.

WAP profile setting

Up to 5 WAP profiles can be configured (may be limited by the service provider). The specifications may vary according to service provider:



Select profile, then **Edit**.
Now fill in the data fields.

Select the connection profile:
see p. 37.


Games


The phone includes a number of games. Select the desired game from the list.

Menu →  → **Games**
→ Select game.

There are special instructions and/or notes in the Options menu of each game.

Key control

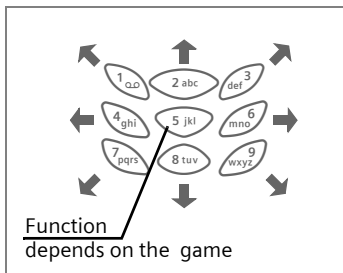

or with the key .

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five profiles are standard with default settings, they can be changed however:

Normal envi.

Quiet environ.

Noisy environ.

Car Kit

Headset

- You can set two personal profiles (<No Title>).
- The special profile **Aircraft mode** is fixed and cannot be changed, (p. 33).


Activate



Select default profile or personal profile.

Activate

Activate profile.

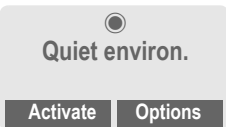

Setup

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change sett.

Select.

The list of available functions is displayed:

Ringer setting S. 39

Silent alert..... S. 39

Volume S. 39

Call screening..... S. 39

Key tones..... S. 39

Info tones..... S. 39

Big letters..... S. 34

Illumination S. 34

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Additional notes



Active profile

Profile menu

Options Open menu.

Activate	Activate selected profile.
Change sett.	Change profile settings.
Copy from	Copy settings from another profile.
Rename	Change personal profile (except default profiles).

Car Kit

If a Siemens original Car Kit is used (p. 35) the profile is activated automatically as soon as the phone is inserted into the cradle (p. 35).

Headset

If an original Siemens headset is used, the profile is activated automatically when the headset is used.

Aircraft mode

The alarm tone is deactivated. An alarm is only shown on the display. This profile **cannot be modified**. The phone will switch off if you select this profile.

Activate



Scroll to Aircraft mode.

Select

Switch on profile.

A security prompt must be confirmed.

The phone switches itself off automatically.

Normal operation

The next time you switch on the phone and return to normal operation the default profile will be activated.

Setup

Display

Menu



Display

→ Select a function.

Language

Set the language of the display text. "Automatic" will set the language of your home service provider. Reset to this language in standby status:

*#0000# 

Wallpaper

Set background graphic for the display.

Logo

Select graphic to be used instead of provider logo.

Colour scheme

Select colour scheme for the whole service system.

Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.

Contrast

Set display contrast.

Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key.

Call setup

Menu →  → **Call setup**
→ Select a function.

Hide ID




When switched on, the display of the calling party shows your phone number (dependent on service provider).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate **Call waiting**.

Any to answer

Incoming calls can be accepted by pressing any key
(except for ).

Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

Car Kit

Only in combination with an original Siemens handsfree Car Kit. If an original Siemens Car Kit Portable is used the profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Auto phone off

When powering the unit from the car, the time taken for the phone to switch when the ignition is turned off can be configured.

Car loudspeaker

Select another audio setting as needed for your car kit for better acoustics.

Headset

Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

Accept call with the Call key or PTT key (Push To Talk) when the key lock is activated.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Divert

You can set the conditions for which calls are diverted to your mailbox or other numbers.

Menu →  → **Divert**
→ Select a function.

Set up call divert (example):

All calls

All calls are diverted.



Symbol in the top line of the display in standby mode.

Unanswered



Select **Unanswered**. (Covers the conditions **Not reachable**, **No reply**, **Busy**)

Select

Press and **Set** select. Enter the phone number, to which the call should be diverted.

OK

Press. After a short pause, the setting is confirmed by the network.

Other divert options:

Not reachable, **No reply**, **Busy**

Status check

After a short pause the current information is shown.



Condition set.



Not set.

Display if status is unknown (e.g. with a new SIM card).

Clear all

All set diversions are cleared.



Clock

Menu →  → **Clock**
→ Select function.

Time/Date

Change Enter the date first, then the time.

Additional notes

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time format

Select **24h** or **12h**.

Time zones

Specify your current time zone.

Date format

DD.MM.YYYY or **MM/DD/YYYY** or **YYYY-MM-DD**

Show clock

Switch on/off time display.

Buddhist year

Change to Buddhist date (not available in all phones).

Connectivity

Menu →  → **Connectivity**
→ Select a function.

GPRS



Yes / No Switch GPRS on /off.

GPRS info

Display connection information.

Connection profiles

Menu →  → **Connectivity**
→ **Connection profiles**
→ Select a function.

At least one connection profile must have been set up and activated for the WAP application.

Enter the **CSD settings** and **GPRS settings** where necessary (you can obtain information regarding this from your service provider if necessary):

Options Open, select **Change sett.**
→ **Edit** and enter data.

Save Save settings.

Authentication

Menu →  → **Connectivity**
→ **Authentication**

Change Activate encrypted WAP dial-up.

Security

Menu →  → **Security**
→ Select a functionn

Direct call

Only **one** phone number can be dialled. To do so hold **down** the right soft key.

Only



Restrict calls to SIM-protected numbers in the Phonebook.

Last 10 only



Limit calls to call list of "dialled numbers" (p. 26).

Codes


(see p. 14)

This SIM only



Your phone is prevented from being used with a **different** SIM card.

Menu

→  → **Security**
→ Select a function

Barrings

Network barring restricts the use of your SIM card.

All outgoing: Outgoing calls, except emergency 999 calls, are blocked.

Outgo internat: Only domestic calls are possible.

Outgo internat. x home barred: International calls are not permitted, except for calls to your home country.

All incoming calls: The phone is blocked from receiving all incoming calls.

When roaming: You do not receive any calls outside your home network.

Status check: Query the status of your barrings.

Clear all: Remove all barrings.


Phone identity

Display the phone identity number (IMEI) and software version.

Master reset

Reset phone to standard values (factory setting).

Network**Menu**

→  → **Network**
→ Select a function

Line

Two independent **phone numbers** have to be registered.

Network info

The list of GSM networks currently available is displayed.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Choose network

The network search is restarted.

Preferred network

Set the service providers you prefer when you leave your home network.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

Ring tones

Menu →  → Select a function.

You can set the tones to match your needs.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

Activate/deactivate the silent alert (functions in addition to ringer).

Volume

Set the same volume for all ring tones.

Additional notes

Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!

Calls, Group calls, Other calls, Alarm clock, Messages

The ring tones for the stated types of call/functions can be set separately.

More tones...

Menu →  → More tones...
→ Select a function.

Call screening

Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

Key tones

Set acoustic key acknowledge: **Click** or **Tone** or **Silent**

Minute beep

During the call, you will hear a beep once a minute as a reminder.

Info tones

Set service and alarm tones.

Extras

Menu



→ Select a function.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

On/off

Switch on/off.

Setting

Set the time for the alarm call (hh:mm), then **OK**.

Calculator



Enter number (maximum of 8 characters).



+ Select calculate function.



Repeat procedure with other numbers.



Result is displayed.



Press the right display key repeatedly.



Toggle between "+" and "-".



Convert to percent.



Save, recall number.



Exponent (maximum of two digits).

Special keys:



Set decimal point.



Add (**hold down**).

Stopwatch

Two intermediate times can be recorded and saved.

Reset

Reset to zero.



Start/stop.



Intermediate time.

SIM services (optional)



Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card.

If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left).



Symbol for SIM services.

Where there are several applications, these are displayed in a menu.

With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

Fast access

The left soft key and the number keys 2 to 9 (speed dialling numbers) can each be assigned an important phone number or a function. The phone number can then be dialled or the function can be started at the touch of a button.

Left soft key

Assign an Assign function/phone number to this key.

Change (example)

InternetPress **briefly**.**Change**Search for application, e. g. **New SMS**.**Phone number:** Select from Phonebook.**Select**

Confirm setting.

Apply (example)

Key assigned with Phone number/name.

Carola**Hold down.**

Speed dialling keys

Only possible for keys 2 to 9. Key 1 is reserved for the mailbox.

Change (example)



Press an unassigned number key (2-9):

Set

Select application, e. g. **New SMS**.

Phone number: Select from Phonebook.

Bookmarks: Select URL from Bookmarks.

Select

Confirm setting.

Apply (example)



Press and hold **down** key.

Own stuff

The following folders are provided for organizing your photos: Pictures, Animations, Sounds.



Files and folders are displayed.

You can scroll through these lists using the control key:



Scroll up and down.



Jump back from a folder.



Open folder or execute file using related application.

Index structure

Special folders are provided in the file system for the different data types.


Folders	Contents	Format
Pictures	Images	*.bmp *.gif *.jpg *.jpeg
Animations	Animations	*.bmx *.gif
Sounds	Ring tones, melodies, sounds	*.mid

The following folders are also included in these main folders:



Download new	This enables you to download new files from the Internet.
EMS	Files that can be received per SMS.

Questions & Answers

If you have any questions regarding the use of your phone, you can contact us at **www.siemens-mobile.com/mobilescustomer care** at any time. In addition to this we have listed some frequently asked questions and answers below.

Question	Possible causes	Possible solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under: "Charging error"	
Insufficient standby time.	Frequent use of organiser or games.	Restrict use if necessary.
	Speed search active.	Deactivate speed search (p. 38).
	Display illumination switched on.	Switch off display illumination (p. 34).
	Unintentional keystrokes (illumination!).	Switch on key lock ( press for long time).
Charging error (charge icon not displayed).	Battery totally discharged.	1) Plug in charger cable, battery is on charge. 2) Charge icon appears after approx. 2 hours. 3) Charge battery.
	Temperature out of range: 5 °C to 40 °C.	Make sure the ambient temperature is right, wait a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device plug socket, clean them if necessary, then insert battery again.
	No mains voltage.	Use different mains power socket, check mains voltage.
	Wrong charger.	Only use original Siemens accessories.
	Battery faulty.	Replace battery.
SIM error	SIM card not correctly inserted.	Check that the SIM card is inserted correctly (p. 9).
	SIM card contacts dirty.	Use a dry cloth to clean the SIM card.
	SIM card with wrong voltage.	Use 3 V SIM cards only.
	SIM card damaged (e.g. broken).	Visually inspect the damage. Have SIM card replaced by service provider.

44 Questions & Answers

Question	Possible causes	Possible solution
No connection to network.	Weak signal. Outside GSM range. SIM card not valid. New network not authorised. Network barring is set. Network overloaded.	Move to higher location, to a window or open space. Check coverage area of service provider. Contact the service provider. Try manual selection or select a different network (p. 38). Check barrings (p. 38). Try again later.
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 38). Switching the phone off and on may speed this up.
Calls not possible.	2nd line set. New SIM card inserted. Charge limit reached. Credit used up.	Set first line  (p. 38). Check for new restrictions. Reset limit with PIN 2 (p. 26). Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (p. 38).
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p. 23).
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 36).
SMS (text message)  flashing.	SMS memory full.	To free up capacity, delete or file messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems for, e.g. messages, ring tones, pictures.	Phone memory full.	Delete files in the applicable areas and unneeded T9 dictionaries.
No WAP access, no download possible.	Profile not activated, profile settings wrong/incomplete.	Activate WAP profile (p. 31), set (p. 31). If necessary ask your service provider.

Questions & Answers

45

Question	Possible causes	Possible solution
Message cannot be sent.	Service provider does not support this service.	Check with your service provider.
	Phone number of the service centre is not set or is wrong.	Set service centre (p. 29).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a compatible phone.	Check.
EMS pictures and sounds not displayed at destination phone.	Recipient's phone does not support EMS standard.	
No Internet access possible.	Wrong WAP profile set or settings wrong, incomplete.	Check settings, speak to service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.
Phone code error.	Three wrong entries.	Contact Siemens Service (p. 46).
Service provider code error.	No authorisation for this service.	Contact your service provider.
Too few/too many menu entries.	Functions may have been added or removed by your service provider via the SIM card.	Check with your service provider.
Charge counter does not work.	Charge pulse is not transmitted.	Contact your service provider.
Damage		
Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!	
Phone became wet.	Remove battery and SIM. Dry immediately with a cloth, but do not apply heat. Dry connector contacts thoroughly. Set phone to vertical position in air flow. Do not dismantle phone!	

Reset settings to factory default (see also p. 38): * 9 9 9 9 #

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens-mobile.com/
mobilescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press ***#06#**), the software version (to display, press ***#06#**, then **Please use at least 1 character**) and if available, your Siemens Service customer number.

You will also find the most frequently asked questions and answers in the section entitled "Questions & Answers" in this user guide on page 43.

You can also get personal advice about our range of products on our Premium Hotline:
United Kingdom 0906 9597500
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany *	0 18 05 33 32 26
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84

* 0,12 Euro/min.

Malaysia.....	+ 6 03 77 12 43 04
Malta.....	+ 35 32 14 94 06 32
Mauritius.....	2 11 62 13
Mexico.....	01 80 07 11 00 03
Morocco.....	22 66 92 09
Netherlands.....	0 90 03 33 31 00
New Zealand.....	08 00 27 43 63
Nigeria.....	0 14 50 05 00
Norway.....	22 70 84 00
Oman.....	79 10 12
Pakistan.....	02 15 66 22 00
Paraguay.....	8 00 10 20 04
Philippines.....	0 27 57 11 18
Poland.....	08 01 30 00 30
Portugal.....	8 08 20 15 21
Qatar.....	04 32 20 10
Romania.....	02 12 04 60 00
Russia.....	8 80 02 00 10 10
Saudi Arabia.....	0 22 26 00 43
Serbia.....	01 13 80 95 50
Singapore.....	62 27 11 18
Slovak Republic.....	02 59 68 22 66
Slovenia.....	0 14 74 63 36
South Africa.....	08 60 10 11 57
Spain.....	9 02 11 50 61
Sweden.....	0 87 50 99 11
Switzerland.....	08 48 21 20 00
Taiwan.....	02 23 96 10 06
Thailand.....	0 27 22 11 18
Tunisia.....	71 86 19 02
Turkey.....	0 21 65 79 71 00
Ukraine.....	8 80 05 01 00 00
United Arab Emirates.....	0 43 66 03 86
United Kingdom.....	0 87 05 33 44 11
USA.....	1 88 87 77 02 11
Vietnam.....	84 89 30 01 21
Zimbabwe.....	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with the greatest of care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply and remove the battery!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.

- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

Product data

Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

CE 0682

Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1.710 - 1.880 MHz
GSM class:	1 (1 watt)
Frequency range:	1.850 - 1.990 MHz
Weight:	85 g

Size: 110x47x23 mm
(91 ccm)

Li-ion battery: 700 mAh

Operating temperature: -10 °C ... 55 °C

SIM card: 3.0 V

Operating time

A full battery will deliver 60 to 250 hours of standby time or 100 to 300 minutes of talktime.

The operating time depends upon the use:

Action taken	Time (min)	Reduces standby time by
Making a phone call	1	30 - 90 minutes
Light *	1	40 minutes
Network search	1	5 - 10 minutes
* Keypad entry, games etc.		

Extreme temperatures reduce the phone's standby time considerably. You should therefore avoid the leaving the phone in the sun or on a radiator.

50 Product data

Phone ID

You will need the following details if you lose your phone or SIM card. Please enter here:

the number of the SIM card (on the card):

.....

the 15-digit serial number of the phone
(under the battery):

.....

the service provider's Customer Service
number:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

SAR - European Union (RTTE)

INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS SET BY THE EU (1999/519/EC) FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

These limits are part of comprehensive recommendations for the protection of the public. The recommendations were developed and confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Before a radio equipment may be placed on the market, compliance with the European laws and the respective technical limit requirements must be demonstrated. Only then the CE mark may be affixed**. The limit for mobile phones recommended by the Council of the European Union employs a unit of measurement known as the Specific Absorption Rate, or SAR. This SAR limit is 2.0 W/kg***. This corresponds with the requirements of the International Commission for Non-Ionizing Radiation Protection ICNIRP and was adopted into the European Norm for Mobile Radio Equipment EN 50360.

The SAR of mobile phones is determined in accordance with the European Norm EN 50361. This involves measuring the maximum value in all frequency bands of the mobile phone with the phone transmitting at its highest power level. The actual SAR level of the phone during normal operation may be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for compliance against the norm is

0.67 W/kg****.

The SAR information can also be found on the Siemens web site at **www.siemens-mobile.com**

While there may be differences between the SAR levels of various phones and at various positions, all Siemens products meet the legal requirements.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**www.who.int/peh-emf, www.mmfa.org,
www.siemens-mobile.com**

** The CE mark confirms that the product is in compliance with the legal requirements of the European Union as a prerequisite for the placing on the market and the free movement of goods within the European internal market.

*** averaged over 10g body tissue.

**** SAR values may vary depending on national requirements and frequency bands. SAR information for different regions can be found at **www.siemens-mobile.com**

SAR - International (ICNIRP)

INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTRO-MAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg**. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest

power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is

0.67 W/kg***.

SAR information can also be found at www.siemens-mobile.com

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

www.who.int/peh-emf, www.mmfaai.org,
www.siemens-mobile.com

** averaged over 10g of tissue.

*** SAR values may vary depending on national requirements and frequency bands. Information for different regions can be found at www.siemens-mobile.com

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:


- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Siemens
- This Guarantee shall not apply to or extend to services performed by the author-


ised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.


- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandford Industrial Estate, Dublin 18 - The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.


To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

Menu tree

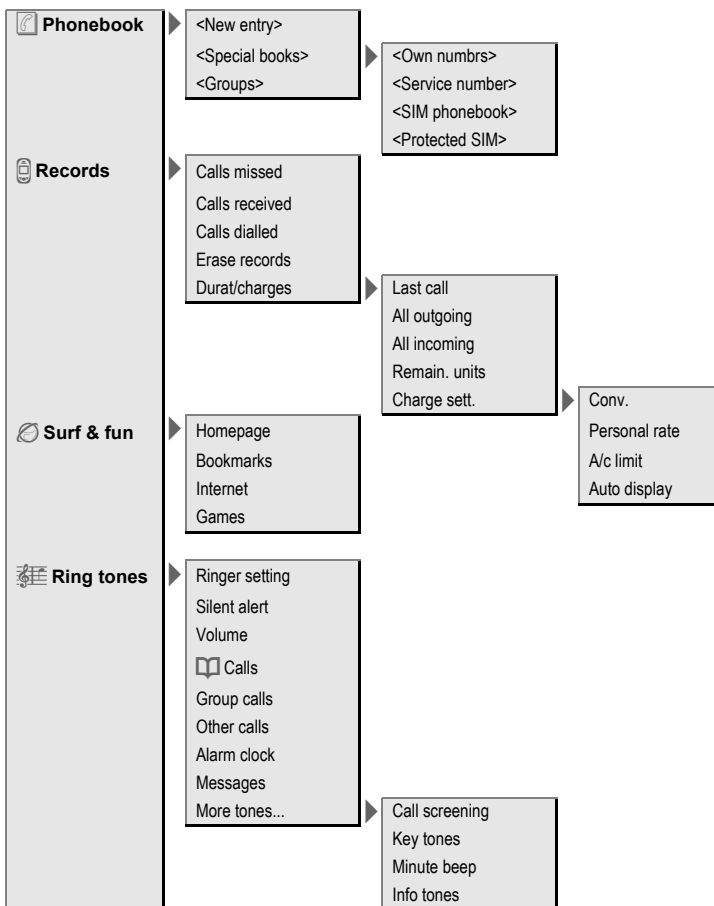

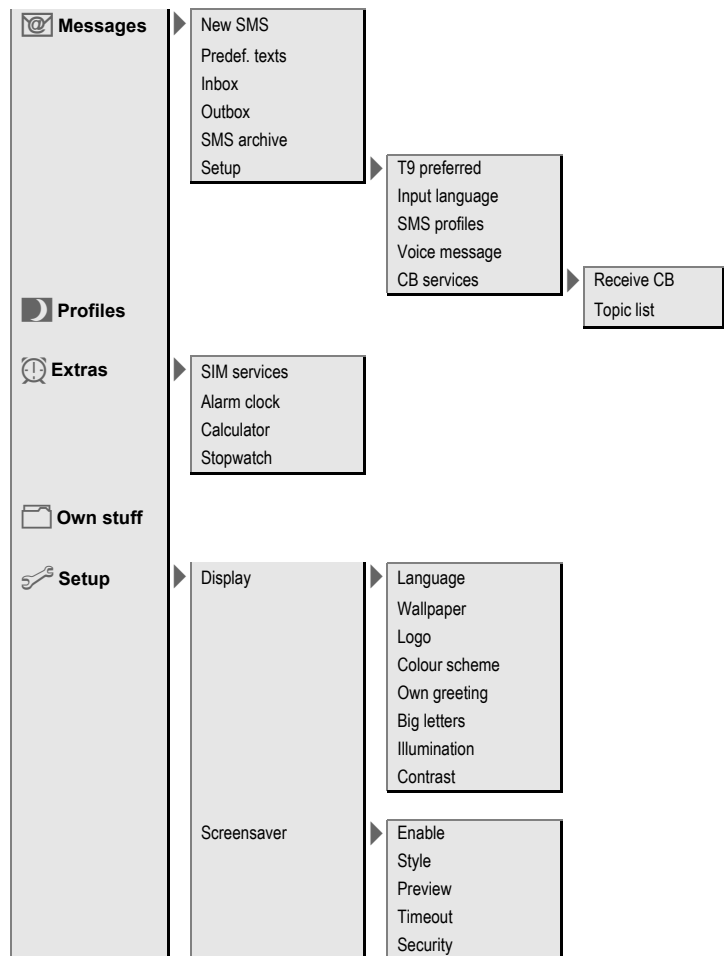

 Setup	▶ Call setup	▶ <ul style="list-style-type: none">Hide IDCall waitingAny to answerMinute beepCar KitHeadset
	▶ Divert	▶ <ul style="list-style-type: none">All callsUnansweredNot reachableNo replyBusyStatus checkClear all
	▶ Clock	▶ <ul style="list-style-type: none">Time/DateTime formatTime zonesDate formatBuddhist yearShow clock
	▶ Connectivity	▶ <ul style="list-style-type: none">GPRSGPRS infoConnection profilesAuthentication

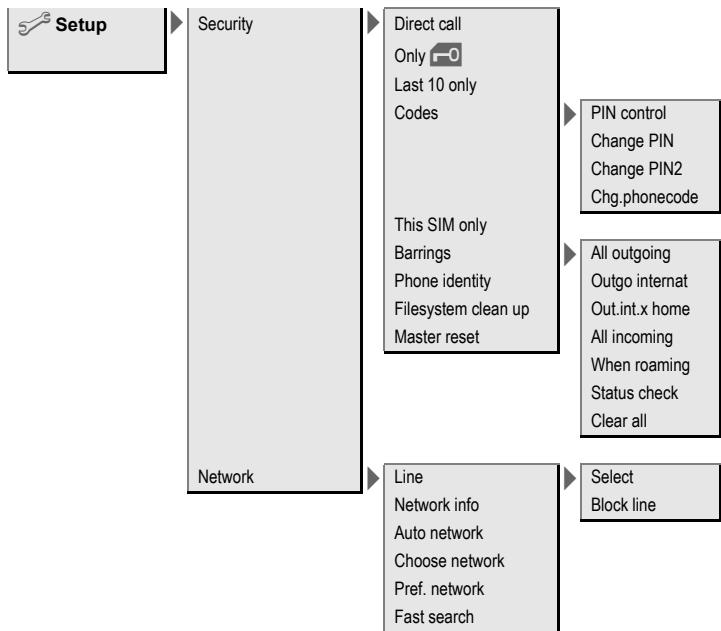

Index

A

Account limit.....	26
Aircraft mode.....	33
Alarm	
Alarm clock.....	40
Alarm clock.....	40
Alarm tones.....	39
All calls (call time/charge).....	26
All calls (diversion).....	36
All incoming (Barrings).....	38
Answering service	
(in the network).....	27
Any key answer	
(answer call).....	35
Authentication.....	37
Auto display	
Clock.....	36
Duration/charges.....	26
Automatic Redial previous	
numbers.....	16

B

Battery	
charge.....	10
insert.....	9
operating time.....	49
quality declaration.....	51
Battery operating time.....	49
Bookmarks (WAP).....	30
Busy number.....	16

C

Calculator.....	40
Calculator functions.....	40
Call	
accept/end.....	17
barred.....	38
charges.....	26
conference.....	18
divert.....	36

Call

End.....	16
reject.....	17
Call back.....	16
Call divert.....	36
Call records.....	26
Calls dialled (call list).....	26
Calls received (call list).....	26
Car Kit	
Setting.....	35
Care of phone.....	48
CB Service.....	32
CB services.....	27, 32
Cell Broadcast (CB).....	27
Charge battery.....	10
Charge rate.....	26
Charges.....	26
Clock.....	36
Colour schemes.....	34
Conference.....	18
Connection profile.....	37
Contrast	
(message on display).....	34

D

Data exchange (settings).....	37
Date format.....	36
Dialling with number keys.....	16
Dial-up access (connection).....	37
Directory (own files).....	42
Display	
Colour schemes.....	34
contrast.....	34
illumination.....	34
Symbols.....	6
Upper-case letters.....	34
Display (settings).....	34
Divert.....	36
Duration/charges.....	26

62 Index

E

Emergency number	12
Entry no. (phonebook).....	23
Extras.....	40, 48

F

Factory settings	38
Fast access	41
Fast search	38
Filter	
Incoming calls.....	39

G

Games.....	31
Getting started	8
Group.....	25
SMS to group.....	28
Guarantee certificate	55

H

Handsfree function.....	17
Headset	
Setting	35
Headset volume	16
Held call	18
Hide ID	35
Hotline	46

I

Identity number (IMEI).....	38
Illumination (display).....	34
IMEI number.....	38
Inbox (SMS).....	29
Information services (CB).....	27
Input language (T9).....	20
International dialling code	16
Internet.....	30

L

Last 10 only.....	37
Limit (call time/charge)	26
Logo, provider logo	34
Loss of phone, SIM card	50


M

Mailbox	27
Maintenance of phone	48
Menu control/speed dialling	13
Menu tree	57
Message	
CB.....	27
SMS	28
Minute beep	35, 39
Missed calls (call list).....	26

N

Network	
barrings	38
connection.....	38
Setup	38

O

Only 	37
Only this SIM	37
Own files	42
Own greeting.....	34

P

Phone (settings).....	35
Phone code	14
Phone data	49
Phone identity number (IMEI)	38
Phone number transfer on/off	35
Phonebook	
call an entry	23
new entry	23
Picture in Phonebook	24
Pictures & sounds (SMS).....	28
PIN	
Change	14
control	14
enter	11
error	45
PIN 2.....	14

Pocket calculator	40	SIM card	
Predefined text	22	clear barring	15
Prefix	16	insert	9
Preventing accidental		problems	43
activation	15	SIM services (optional)	40
Product data	49	SMS	
Profiles		Archive	29
Connection profile	37	Picture & sounds	28
phone	32	Profiles	29
SMS	29	read	28
WAP	31	T9 input	20
Provider logo	34	to group	28
PUK, PUK2	14	write	28
Q		SOS	12
Questions & Answers	43	Special characters	19
R		Speech time (battery)	49
Redial previous numbers	16	Speed dialling (menu)	13
Reminder	16	Speed dialling keys	41
Ring tones	39	Standard values	38
Ringer setting	39	Standby mode	13
S		Standby time	49
Safety precautions	2	Stopwatch	40
Screensaver	34	Surf & Fun	30
Second phone number	38	Switch on	11
Security	14, 37	Symbols	6
Security codes	14	T	
Service tones	39	T9	
Setup		Text entry	20
Clock	36	word suggestions	21
Data connection	37	Technical data	49
display	34	Text entry with T9	20
Divert	36	Text entry without T9	19
Network	38	Time zones	11, 36
phone	35	Time/Date setting	36
Security	37	U	
SMS	29	Unanswered	36
Short message (SMS)	28	Upper, lowercase letters	19
Shown in the display	6	Upper-case letters	
Signal strength	12	(message on display)	34
Silent alert	39		

64 Index

V

Voice message (mailbox) 27

Volume, handset

Headset volume..... 16

Profiles 32

Ring tone..... 39

W

Wallpaper..... 34