SIEMENS Mobile SIEMENS Mobile

Issued by Information and Communication mobile Haidenauplatz 1 D-81667 Munich

© Siemens AG 2004 All rights reserved. Subject to availability. Rights of modification reserved.

Siemens Aktiengesellschaft www.siemens-mobile.com



M65

Safety precautions3	Phonebook	35
Overview of the phone5	New entry	35
Display symbols 7	Call (search for an entry)	36
Getting started9	Change entry	
Charge battery11	<special books=""></special>	
Switching phone on and off/	Call records	38
entering PIN12	Time/charge	39
Entering the PIN 12	Camera	40
Emergency number (SOS) 12	Photo mode	40
General instructions 13	Video mode	41
Standby mode 13	Inbox	42
Signal strength 13	SMS	43
Digital Rights Mgmt. (DRM) 13	Write/send	43
Main menu 13	Read	45
Standard functions15	Setting	47
Highlighting mode 16	MMS	49
Menu speed dialling 16	Create	49
Security17	Templates	51
Codes 17	Send	52
Preventing accidental	Receive	
activation18	Read	
Text entry 19	Setting	
My phone 23	E-mail	
Calling 24	Write	
Default book30	Receive/read	
Addressbook 31	Setting	
New entry 31	Voice message/mailbox	
Change entry 33	Start menu	
Call entry33	Login	
Groups 34	Contact lists	
•	Start chat	64

Msg. history 65 Setting 65 CB services 67 Surf & fun 68 Internet 68 Bookmarks 70	Extras 103 SIM services (optional) 103 Alarm clock 103 Sound recorder 104 Calc 105 Unit converter 105 Stopwatch 106
Games and Applications 71 Downl. assis	Countdown107
Setup73	Remote synchronisation 107
Profiles	Media player109
Themes 75	My stuff110
Display 76	Mobile Phone Manager112
Dynamic light78	Questions & Answers114
Ringtones79	Customer Care117
Call setup 81	Care and maintenance 119
Phone setup 83	Product data120
Clock	Accessories121
Connectivity	Quality123
Security	Guarantee certificate (UK) 124
Accessories	Guarantee certificate (IRL) 126
My menu94	SAR – European Union (RTTE)128
Fast access95	SAR – International (ICNIRP) 130
Organiser	Menu tree131
Calendar	Index137
Appointments 98	137
Tasks99	
Notes 100	
Missed appts 100	

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (S. 79), info tones (S. 83) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (S. 26). Otherwise you risk serious permanent damage to your hearing.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode. for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the quarantee.

Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!

Overview of the phone

- ① Son/Off/End key
 - · Switched off: press and hold to switch on
 - · During a conversation or in an application: press briefly to finish.
 - · In menus: press briefly to go back a level

Hold **down** to return to standby mode.

· In standby mode: hold down to switch off phone.

(2) < Call key</p>

Dial displayed/highlighted phone numbers/names, take calls. Show last phone numbers dialled in standby mode.

- 3 Display in standby mode
- 4 Soft keys

The current functions of this key are shown in the bottom line of the display as Text/symbol (e.g. \(\subseteq \).

(5) Joystick



Press the joystick vertically downwards to start an application or function.

In standby mode:



Open main menu.

- Open user profiles.
- Open Phonebook/Addresshook
- Open Inbox.
- Start the camera

In lists, messages and menus:

Scroll up and down.

Back one level.

During a call:

Set volume.

Call options.



- ① Loudspeaker
- ② LED for dynamic light (p. 78)
- ③ Infrared interface (IrDA)
- 4 Ringtone
 - Hold down in standby mode: Switch all audible signals on/off (except alarm).
 - Hold down on incoming call: Switch off ringtone for this call only.
- ⑤

 Key lock

Hold down in standby mode: Switch key lock on/off.

6 Connection socket


For charger, headset, flash etc.

Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

- 8 Connection for external antenna
- Camera lens



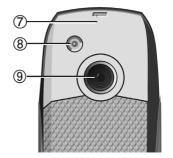

Display symbols

Display symbols (selection)				Keypad locked
111111	Signal strength	_	F	Auto answer feature on
\Longrightarrow	Charging	_	T9Abc	Text input with T9
	Battery charge level, e.g. 50 %		GP RS	Activated and available
a6 _	Phonebook		IGPI IRSI	Registered
	Call records		GP RS	Temporarily interrupted
(£)	Surf & fun/ Service provider portal		•	Browser Offline
1/	Organiser		3	Browser online
	Messages	_	→ GP ←RS	Browser via GPRS online
0	Camera	_		Browser no network
<u></u>	Extras		D :	IrDA activated
	My stuff		Dm	IrDA transmission
		E	rents (sel	ection)
<u>~</u>	Setup		!	SMS memory full
4	All calls are diverted		∑i]	MMS memory full
	Signal tone off	_	ĹŢ	Phone memory full
Û	Short ring (beep) only	_	<u></u>	No network access
≯¦Ĉ	Ringtone only if the caller is stored in the Phonebook	_	<u></u>	Missed call
(<u>Ö</u>)	Alarm set	_		Delete assistant
		_		

Message symbols (selection)				
	Unread			
	Read			
	Draft			
	Sent			
	Unsent			
4	Forwarded			
	With DRM contents (p. 13)			
ΣŲ	With attachment			
NK.	MMS received			
NK.	MMS read			
00	Voice mail received			


Camera symbols			
020	Switch between photo and video		
\$ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Brightness		
⊕Q ×1	Zoom factor		
e a	White balance		
S _n	Flash connected		

Getting started

The phone must be assembled before you can get started.

SIM card and battery

 Place the SIM card in front of the slot with the contact surface facing downwards. Then slide the SIM into the holder ①).

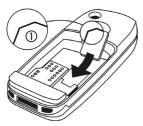


• Insert the battery sideways into the phone ②, then press it downwards ③ until it clicks into place.



Battery cover

  Pull the rubber gasket over the locating lugs ① on the cover, then push it onto the four studs ② so that it is firmly positioned on the cover.



 Push cover forwards ③ until the locating lugs engage in the openings in the phone.



Additional information

Your phone's display is supplied with a **protective film**. Remove this film slowly before assembling the phone. In rare cases, static discharge may cause discolouration at the edges of the display. However this will disappear within approx. 10 minutes.

Metal bracket

 Slide the metal bracket open until the openings in the metal bracket and in the cover are directly above each other ①. The hooks ② must engage in the openings on the front of the phone.



 Insert the locking catch into the metal bracket ③ and turn it ninety degrees to the right ④ to join the metal bracket to the phone.



Seals

- Insert the contacts cover ① into the connection socket.
- The camera lens and antenna socket are protected by the lens cap ②. Using the rubber washer ③ in its place does not offer better protection (p. 119).



Additional information

Please switch off your phone before removing the battery!

Only 3 V SIM cards are supported. Please contact your service provider if you have an older SIM card.

Charge battery

Charging procedure

The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**.



Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating times

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 100 to 330 minutes Standby time: 60 to 300 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit included in delivery!

Display while in service

Charge level display during operation (empty – full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore not remove the battery unnecessarily and where possible not finish the charging process prematurely.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching phone on and off/entering PIN

Switching phone on/off



Hold down the On/Off/End key.

Entering the PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct with C.



Confirm by pressing the joystick. Logging on to the network will take a few seconds

Additional information	
Change PINp.	17
Clear SIM card barringp.	18

Emergency number (SOS)

Only to be used in real emergencies! By pressing the SOS soft key you can

make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Switching your phone on for the first time

Time/date

Set the clock correctly on a one-off basis when getting started.



Press this key, then select Change .



First enter the date (day/ month/year), then the time (24 hours, including seconds).



Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the city in the desired time zone from the list



... and set it.

Copy SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook, Please do not interrupt this procedure. During this time, do not accept incoming calls. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 36).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Hold down the On/Off/End key to return to standby mode from any situation.

Signal strength



Strong signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your telephone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc. (see also p. 72).

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.


Different functions are available depending on the context:

Big letters	Select between two font sizes.
Illumination	Set display illumination to brighter/darker.
Help	Display a help text.

User guide

Menu controls

 The steps needed to reach a function are shown in a **condensed form** in the user guide, e.g. to display record of missed calls in condensed form:



This comprises the following steps:



Open main menu.

Select (highlight) \(\bar{\textstyle 0} \) by moving the joystick upwards, then press vertically down on the joystick before using the joystick to highlight Calls missed.



Confirm. The list is opened.

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key



Call key



Soft keys



Displays a soft-key func-

The joystick can be moved in 5 directions.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the directions shown.



Function dependent on service provider. May require special registration.

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options Open menu.

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send	Select transmission service and medium for sending or printing.
Reply/Reply to all	The sender becomes the recipient, "Re:" is placed in front of the subject matter and the received text is transferred into the new message.
Save	Store entry.
Save to 2	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical order, type, time).

Text input (p. 19)	T9 preferred: Activate/ deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity.
Attributes	Display properties of the highlighted object.
Help	Display help text.

Highlighting mode

With some applications (e.g. Phonebook/Addressbook) one or more entries in a list can be highlighted to carry out a function jointly.

Options

Open menu.

Mark

Activate highlighting

mode.

If a **non-highlighted** entry is selected, this can be highlighted:

Mark

The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark

Unhighlight the current entry.

Additional highlighting functions:

Mark all	Highlight all entries.
Unmark all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g., write new SMS (from standby mode):



Press to display the main menu. Then press

5 jkl

for Messages, then



for Write message, then



for SMS.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

Protects your SIM card

(Personal Identification

Codes


PIN

	Number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



PIN control

 The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.





Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.







- → Security → Codes
 → Select function
- **Change PIN2**

(Display only if PIN2 is available). Proceed as for Change PIN.

Chg.phonecode

(Change phonecode)

You define the phone code (4 to 8 digits) when you call up a phone-code protected function for the first time (e.g. Direct call, p. 28). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (p. 117).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated (p. 17) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Hold down.



Press. The phone switches on.



Press this key or take no action. The phone does not switch on.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:



Press **once briefly** to write the letter **a**, twice to type **b** etc.

Hold down to write the number.

Ä, ä, 1–9

'Umlauts' and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor. Hold down to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between abc, Abc, T9abc, T9Abc, T9ABC, 123. Status shown in top line of display.

Hold down: All inputvariants are displayed.



Press briefly: Special characters are shown.

Hold down: Open input menu.

0 +

Press once/repeatedly:

.,?!'"0+-()@/:_ Hold down: Writes 0



Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The symbols chart is displayed

1)	ż	i	_	;	!	?	,	
+	-	"	,	:	()	1	*
n	¥	\$	£	€	&	#	١	@
[]	{	}	%	~	<	=	>
Τ	٨	§	Γ	Δ	Θ	٨	Ξ	П
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.



Confirm.

Input menu

With text input:



Hold **down**. The input menu is displayed:

Text format (SMS only)

Input language

Mark

Copy/Insert

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options

Open text menu.

Text input Select.

T9 preferred

Select.

Change

Activate T9.

Select input language

Select the language in which you want to compose your message.

Options Open text menu.

Text input Select.

Input language

Select.

Select

Confirm, the new language is set. Languages with T9 support are marked with the T9 symbol.

Writing with T9

Since the display changes as you proceed,

it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:



Press **briefly** for T9Abc then













A blank ends a word.

Do not use special characters such as Ä; use standard characters instead e.g. A. T9 will do the rest for you.

T9® Text Input is licensed under one or more of the following:
U.S. Pat. Nos. 5,818,437, 5,953,541,
5,187,480, 5,945 928 and 6,011,554;
Canadian Pat. No. 1,331,057;
United Kingdom Pat. No. 2238414B;
Hong Kong Standard Pat. No. HK0940329;
Republic of Singapore Pat. No. 51383;
Euro. Pat. No. 0 842 463 (96927260.8)
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;
and additional patents are pending worldwide.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be shown highlighted. Then press



The displayed word is replaced with a different word. If this word is also incorrect, press again.



Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:



Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press Save to add it automatically to the dictionary.

Correct a word



Move left or right, word by word, until the required word is highlighted.



Scroll through the T9 word suggestions again.



Deletes the last character in a word **and** displays a new possible word.

Additional information

Within a "T9 word", individual letters may not be edited without first removing the T9 status. In most cases it is better to rewrite the complete word.



Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:





Moving the cursor to the right ends the word.



Press briefly: Switch between: abc, Abc, ^{T9}abc, ^{T9}Abc, 123. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 19).

Hold down: Opens input menu (p. 20).

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Write text module





→ Text modules



Select New text. Write text.

Options

Open menu and select Save. Accept the specified name or allocate a new





Use text module



Write message (SMS, MMS, e-mail).

Options

Open text menu.

Insert

Select.



Select Text modules.



Select text module from the list.



Confirm. The text module is displayed.



Confirm. The text module is inserted in the message to the right of the cursor.

My phone

The following shows how to adjust your phone and give it a personal touch.

Ringtones (p. 79)

Assign individual ringtones to caller groups or special dates

Pictures (p. 110)

Assign individual pictures or photos to your Addressbook entries.

Animations (p. 77)

Choose a start-up and closing animation as well as a personal greeting.

Screensaver (p. 76)

Choose an analogue or digital clock, or a personal picture.

(Operator) Logo (p. 76)

Choose an individual picture (to be displayed in standby mode)

Wallpaper (p. 76)

Choose your own permanent background image.

Topics (p. 75)

Load a completely new visual presentation onto your phone.

Applications (p. 71)

Download your own applications from the Internet.

Where do I get what?

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

Service provider portal

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

Siemens City Portal

You will find additional ringtones, logos, animations and screensavers as well as more applications, games and services in the Internet at this address:

www.siemens-mobile.com

Or you can download them directly via WAP:

wap.siemens-mobile.com

You will also find a service for saving data here as well as a list of the countries in which these services are available.

My menu

Create your own menu (p. 94) with frequently used functions, phone numbers or WAP pages.

Calling

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with area/international dialling code).

A short press clears the last digit, a long press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

Fnd call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Set volume



Regulate the volume (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key **twice**.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the phone number from the list, then to dial press the ...



... key.

If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Auto. redial

Auto dial

 
The phone number is automatically dialled ten times at increasing time intervals. End with:



Or

Call back





Reminder

Prompt

A beep reminds you to redial the displayed phone number after 15 minutes.

Additional information

•Ф

Store phone number in the Addressbook/Phonebook.

Handsfr.

Switch on Handsfree (playback from loudspeaker).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!



Press and hold to switch microphone off.

International dialling codes



Ø.

Press and hold until a "+" is displayed.

Country

Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



A phone number transmitted by the network plus the corresponding name (possibly with a picture) are displayed if they are stored in the Phonebook/Addressbook (p. 32).

Reject call



Press.





Press briefly.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information



Press and hold to switch off the ringtone and silent alert.



Missed call display.

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

Handsfr.

Activate handsfree talk-ing.



Switch on.



Use the joystick to adjust

Handsfr.

Deactivate.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

Swapping between two calls

Establish a second connection

You can call another number during a call.

Options

Open call menu.

Hold

The current call is put on

hold.



Now dial the new phone number or select

Options, the Phonebook, Addressbook, or phone number.

When the new connection is established:



Swap between calls.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 81). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

· Accept the waiting call in addition to the first

Swap

Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

· Reject the waiting call

Reject

Press.

Or

Divert

The waiting call is diverted, for example, to the mailbox.

Accept the waiting call and end the current call



End the current call.



Accept new call.

End call(s)



Press the End key.

After the Return to held call? display, you have the following selection:



You accept the call on hold.

No

You end the second call too.

Conference

Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established.

Options

Open menu and select Hold. The current connection is maintained.



Now dial a new number. When the new connection is established ...



... open menu and select Conference. The held call is ioined.

Repeat procedure until all participants are linked together (up to 5 participants).

Fnd



All calls in the multiparty conversation are ended when the End key is pressed.

Call options

Ontiona

Main menu

Call status

The following functions are only available during a call: Onen menu

Options Op	oen menu.
Hold	Hold current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also: Also: Hold down
Handsfree	Playback from loud- speaker.
Volume	Adjust handset volume.
Default book	Phonebook/Addressbook.
Conference	(p. 27)
Time/charge	Display talktime that has elapsed so far and (if set) charges incurred during the connection.
Send DTMF	Enter tone sequences (numbers) for remote inquiries to an answering machine.
Call transfer ⊗!	Connect the original call to a second call. For you,

both calls are now ended

Access to the main menu

List all held and active calls

(e.g. participants in a con-

ference).

Direct call

 
If this is active, only one number can be dialled.

Switch on





Confirm selection.



When first prompted you define and enter the phone code (4 - 8 digits).



Confirm selection.

Please do not forget this code (p. 17)!



Select phone number from the Phonebook/Addressbook or enter it.



Confirm.

Apply



To dial the phone number (e.g. Carol's phone number), press and hold the right soft key.

Switch off



Press and hold down.

Enter phone code.



Confirm input.

Tone sequences (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine while another connection exists. These entries are transmitted directly as DTMF codes (control codes).

Options Open menu.

Send DTMF

Select.

Using the Phonebook/Addressbook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.

[]

Enter phone number.

0 +

Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.

Save

Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

Default book





Select function.

Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry.

Addressbook (see also p. 31)

Phonebook (see also p. 35)

Default book

You can set which directory you prefer to use.

The selected default book is opened in standby mode with the joystick.



Open Phonebook or Addresshook

Addressbook

In the Addressbook, a lot of data can be recorded for each entry and additional functions (such as pictures. birthdays, chat room) can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to send to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter your details.



Press.

Additional information

The content of the business card and the Addressbook entries correspond to international standards (vCard).



Copy numbers from Addressbook/Phonebook.

Groups

See p. 34.

<Info numbers>

See p. 37.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed in the phone memory separately from those in the Phonebook. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

New entry

The Addressbook is set as standard:



Open Addressbook (in standby mode).



Display input fields.





Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with dialling code.

Possible input fields

Last name:	URL:
First name:	Inst. message >>
Phone number:	Group:
Phone no./office:	Company:
Phone no./mobile:	Address: >>
Fax:	Birthday: >>
Fax 2:	Picture:
E-mail address:	
E-mail 2:	All fields

Additional information

Group: Assignment to a group

(p. 34).

Address: Extension to enter the

complete address:

Street:, Post code:, City:,

Country:

Com. services

Information if the entry is being used as a chat room

contact (p. 61):

Nickname:, WV user ID:, ICQ number:, AIM screen name:

Birthday: After activation, the date

of birth is entered.

Reminder: The telephone reminds you one day before the birthday.

Picture: Assign a picture to the entry. This is displayed when you are are called

number.

All fields/Reduced fields

Displays the number of

by a corresponding phone

input fields.

Save the entry.

Additional information

Temporary switch to Phone-

Synchronisation

With the mobile phone manager (p. 112), you can synchronise your Addressbook with Outlook® and other Siemens telephones.

Using Remote sync. you can synchronise your mobile with an organiser stored on the Internet (see also p. 107).

Display/find entry



Open Addressbook (in standby mode).



Select required entry.



Display.

Display options

Options

The options menu only ever offers the functions for the currently selected input field.

Move to ...

Assign current entry or highlighted entries to a group.

View

Display an assigned picture

ture.

New SMS,

Copy to SIM

Create a message with the selected entry.

Copy name and one phone

number to the SIM card

(Phonebook).

visit URL.

New MMS, New e-mail

Start WAP browser and

Inst. message

Start a dialogue with the selected entry (p. 61).

(For standard functions see p. 15)

Change entry



Open Addressbook (in standby mode).



Select required entry.





Select input field.



Open entry if necessary.



Make changes.



Save.

Press.

Call entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



The number is dialled.

If there are several numbers in the address book entry, these are offered for selection.



Select phone number.



The number is dialled.

Addressbook options

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options O	pen menu.
Move to	Move current entry or high-lighted entries to a group.
Copy to SIM	Copy name and phone number to the SIM card (Phonebook).
Filter	Only those entries which match the filter criteria are displayed.
Import	Set up readiness to receive for a Phonebook entry via IrDA (p. 86) or SMS (p. 43).
Sort	Specify sorting criteria for output of the Addressbook entries.
Search	Enter search term.

(For standard functions see p. 15)

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

Open Addressbook (in standby mode).

<Groups>

Select (the number of entries is listed behind the group name).

•

Select group.

Groups menu

Options

Open menu.

Rename group

Change name of group.

Group symbol Assign a symbol to a group. The symbol will then appear in the display when one of the group members calls.

Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains Addressbook entries received by IrDA (p. 86) or SMS (p. 43) (name cannot be changed).

Ringtone for group

Assign a ringtone to a group that plays when one of its members calls you.



→ ○ → Ringtones → Group calls



Select group.



Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.



If necessary, select a ringtone.

Confirm.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook. You can. however, exchange data between the Phonebook and the Addressbook.

New entry

If the Phonebook has been selected as standard.



Open Phonebook (in standby mode).



Select <New entry>.



Display input fields.



Select input field.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

Phone number:

Always enter phone number with dialling code. An entry is not saved if it does not have a phone number.

Name:

Enter first and/or last names

Group:

Default No group

Important phone numbers may be combined in a group (VIP).

Location:

Default SIM

Special SIM cards can save phone numbers in a protected area (Protected SIM) (PIN2 required).

Record number:

Each entry is automatically assigned a record number. You can also dial using the record number.



Press to store the new entry.

Additional information



Temporary switch to Address-

Country International dialling codep. 25

Functions concerning Text entryp. 19

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Phone number is dialled.

Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

Change entry



Open phonebook.



Select entry in Phonebook.



Press.



Select desired input field.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situation.

Options

Open menu.

Copy into Copy all to 2 Copy all highlighted entries to the Addressbook

Copy all entries to the Addressbook

Delete all The entire Phonebook is deleted (PIN-protected).

Import Set up readiness to

receive for a Phonebook entry via IrDA (p. 86) or SMS (p. 43).

(For standard functions see p. 15)

<Special books>



Open Phonebook (in standby mode).

<Special books>
 Select.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for your information. These numbers can be changed, deleted and also sent as an SMS message.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Completing phone numbers in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook:



Press and hold down

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook.



Press.



Replace "?" with numbers.

The phone number is dialled.

Call records

The phone number of a caller is displayed if

- · the caller has switched off the Hide ID function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Phonebook/Addressbook.

Your phone stores the phone numbers of calls for convenient redialling.







Select record.



Open call record.



Select phone number. Dial phone number.





Display information on the phone number.

Up to 500 entries are stored in the records:

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Icon for missed call (in standby mode). Press the soft key beneath the symbol to bring up the Inbox (p. 42).

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers you have dialled.



Fast access in standby mode.

Delete records

The records are deleted.

Records menu

The records menu can be called up if an entry is highlighted.

Options

Open menu.



Copy the currently selected phone number into the preferred directory.

(For standard functions see p. 15)

Time/charge

You can display the charges and duration during a call. You can set a unit limitation for outgoing calls.





Select

Last call:

Incoming calls:

Outgoing calls:

Outgoing SMS:

Outgoing MMS:

GPRS data flow:

All calls:

Remaining units:



Scroll through the display.



Reset the selected setting.

Charge sett.



Open menu.

Personal rate

(PIN2 prompt)

Enter the currency as well as the charge per unit and time.

Account limit

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit limit or a period after which the phone is barred for outgoing calls.



Press.

Enter PIN2.

Account limit

Switch on.



Enter number of units.



Confirm.

Then confirm the credit or reset the counter. The status display for prepaid cards may vary depending on the service provider.

Auto display

Call duration and charges are displayed automatically.

Camera

You can view photos/videos recorded on the integrated camera immediately and

- use the photo as a background image, logo, a switch on/off animation or a screensaver.
- send the photo/video via MMS or e-mail.

Switch on







Start camera in standby mode.



Switches between frame and videorecording.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



700m factor



White balance



Flash connected.

In the top right-hand corner of the preview image, the number of photos which can still be taken in the selected resolution is displayed. This number varies considerably according to the subject matter (storage space required). You will find a reference to the selected resolution beneath the preview image. In video

mode, the recording time already used and the maximum recording time still available is shown here.

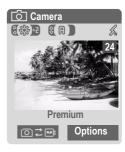


Photo mode



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see Setup in the options menu.

Settings prior to taking a photo:



Sets the brightness.



Sets the zoom factor.

Image resolution

The image resolution quality can be adjusted regardless of the preview image resolution.

Premium: 640 × 480 (VGA) High: 320 × 240 (QVGA) Medium: 160 × 120 (QQVGA)

 132×176 Wallpaper:

The resolution may decrease depending on the selected digital zoom.

Video mode

The video mode resolution is the same as the preview image resolution.



Start the video recording.



End video recording.

A red dot appears in the top right of the display while the video recording is active.



Plays the video recording.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly charged while connected to the telephone and switched on. This reduces the stand-by time.



This symbol appears when the flash is being charged.

For settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options

Open menu.

Settings

- · Name for recordings
- · Image resolution.
- · Colour mode: normal. sepia, grey tints

Pictures

Displays list of photos.

Other videos

Displays list of videos.

Microphone on

Switches the microphone on or off

Use flash

Choose between:

Automatic, Off, Red eve red.

Self timer

The photo is taken approx. 15 seconds after triggering. For the last 5 seconds. you will hear a signal tone

each second.

White halance

Choose between: Automatic, Indoor, Out-

door

(For standard functions see p. 15)

Additional information



Insufficient memory available. Start the delete assistant to delete specific data (p. 83).

Inbox

The inbox folder offers immediate access to the messages currently received. This means that you no longer have to look through all inbox folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find an overview of the symbols on p. 7.

To call up the inbox folder, e.g. if a new SMS has been received:



Press the soft key beneath the symbol,

or

in standby mode.

In the inbox folder you will find the following message types:

SMS, MMS, E-mail

System messages

Notification about MMS, Missed alarm, Missed appts., Calls missed, WAP push, Voice message

Data objects

Ringtones, Pictures and Video, calendar entries, Notes and Business card.



When you open an entry, the relevant application also starts.

After a set period, entries which have already been read and opened are only displayed in the message-related incoming lists (see Setup in the optionsmenu).

Inbox options

Options Open menu.

Receive e-mail
Select set access and transfer all e-mails from the server to the phone.

Setup
If entries have been read, remove them from the Inbox:
Daily, Never, Immediately

If Daily has been selected, specify the time.

uiiic.

(For standard functions see p. 15)

SMS

You can transmit and receive very long messages (up to 760 characters). They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Write/send





→ Write message → SMS



Enter text.

You will find information on writing texts with and without T9 in the chapter "Text entry" (p. 19).

The following is displayed in the display line: Text entry status, number of SMSs required, number of characters still available



Start sending procedure.



Select phone number from the Phonebook/ Addressbook or enter it.

Group If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the Sentbox list.

Text options

Options	pen menu.
Save	Save composed text in draft list.
Pic- ture&sound	Add pictures, animations and sounds into message (see following text).
Text modules	Add text modules (p. 22).
Format	Font size: Small font, Medium font, Large font Underline Alignment: Default alignm., Left, Centre, Right
	Mark (highlight text with the joystick)
Delete text	Delete the whole text.
Send with	Select SMS profile so the SMS can be sent.
(For standard	functions see p. 15)

Picture&sound

Send pictures and sounds with or without accompanying text.

Remember that these may be protected (DRM, p. 13).

With the text input field open:



Open menu.

Select Picture&sound.

The menu contains:

Fix animations

Fix sounds

Own animat.

Own pictures

Own sounds



Select list.



Confirm. The first entry in the selected list is displayed.



Scroll to entry required.

For Fix animations/Fix sounds:



The selection is added to the SMS.

For Own animat./Own pictures/ Own sounds:



The selection is displayed/played back.



The selection is added to the SMS.

The pictures which have been added are displayed. Sounds are displayed in the form of "wildcards".

SMS to group

You can send an SMS message to a recipient group.



Open menu.

Send

Select.



The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



A safety inquiry is made and then sending is started.

Read



Arrival of a new SMS announced in the display. Use the soft key beneath to open the Inbox (p. 42). Reading the SMS.



Scroll through message line by line.



Reply

You can answer the SMS immediately. The newly added text is placed above the received text.

Reply options



Open reply menu.

_	
Write message	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add Answer is YES to the SMS.
Answer is NO	Add Answer is NO to the SMS.
Call back, Delay, Thanks	Add a standard text as a reply to the SMS.

Read options

Options	Open reply menu
----------------	-----------------

Reply	See "Reply options" above.
Picture&sound	Save picture/sound contained in the SMS.
Text zoom	Enlarge/reduce text display.
Archive	Move SMS message to archive.
(For standard functions see p. 15)	



Lists

All SMS messages are archived in different folders, according to their status. (For overview of message symbols, see p. 7):

Inhox



The list of received SMS messages is displayed.

Draft



The list of not yet transmitted SMS messages is displayed.

Unsent



The list of concatenated SMS messages not yet sent are displayed. Transmission can be restarted.

Sent



The list of sent SMS messages is displayed.

SMS archive



The list of SMS messages stored in the phone is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

Send Send or forward entry.

Send with... Select an SMS profile for transmission

Archive Move SMS message to archive.

(For standard functions see p. 15)

Setting

SMS signature



(→ Message setup

→ SMS → SMS signature

You can enter a "signature" with up to 16 characters. This signature will then be attached to each SMS except for a Reply and when changes are made to an existing SMS.

SMS profiles



(→ Message setup

→ SMS → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The presetting depends on the SIM card inserted.

Activate profile



Select profile.



Activate.

Set profile



Select profile.

Service

Open to edit the profile.

centre

Enter the phone numbers for the service centre as provided by the service provider.

Recipient

Enter a standard recipient for the profile.

Message type

- · Manual: Inquiry for all messages.
- Standard text: Normal SMS message.
- Fax: Transmission via SMS.
- · E-mail: Transmission via SMS
- · New: You may need to obtain the required code number from your service provider.

Validity period

Period in which the service centre is to try to deliver the message:

Manual 1 hour 3 hours. 6 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

Status report 81

Receive confirmation of successful/failed transmission of a message. This service may be subject to a charge.

Direct reply <
□

If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

SMS via **GPRS ☆!**

Send SMS automatically via GPRS (p. 86).

Save aft. send

Sent SMS messages are saved in the Sentbox list.

More information on SMS

SMS status report

If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The Message sent! message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also Validity period (p. 47).

 
Phone number in SMS

Phone numbers displayed in the highlighted text can be dialled () or saved in the Phonebook/Addressbook.

Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key, start the download. Please check that the dial-in access (p. 87) is configured.

Remember that these may be protected (DRM, p. 13).



If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Messages must be deleted or archived.

MMS

The Multimedia Messaging Service enables you to send texts, pictures/ videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Create





An MMS consists of the address header and the content.

An MMS may consists of a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (DRM, p. 13).

Write texts with the help of T9 (p. 19).

Pictures and videos can be recorded with the integrated camera and/or loaded from My stuff (p. 110).

Sounds can be recorded with the sound recorder and/or loaded from My stuff (p. 110).

First select an object for processing to be added to the first page of the MMS:

Pictures/videos

Limits on picture size can be set in the user settings.

<Picture> Select.



Display picture/video functions:

Insert picture

Open list to select a picture.

Insert video

Open list to select a video.

Camera

Activate the camera to take a photo or record a video for the MMS (p. 40).



Also possible.

Open

Display picture.

Delete

Delete inserted picture/video.

Save

Save picture/video for use later on.

Msa. details

Display properties, including any user right restrictions (p. 13).

Sounds

<Sound> Select.



Display sound functions:

Insert sound

Open list to select a sound.

Record

Activate sound recording to record sounds (p. 104).



Also possible.

Open

Playback the sound.

Delete

Delete inserted sound.

Save

Save sound to use later on.

Msg. details

Display properties, including any user right restrictions (p. 13).

Text

<Text> Select and write the text.



The text functions are displayed (see also p. 19):

Insert from...

Choose any of the following for insertion: Text modules, Bookmark, Insert from

Delete text

Delete text on current page.

Save

Save text on the page as text module.

Text input

T9 settings:

T9 preferred, Input language

Mark

Text processing together with Copy and Insert.

Generation options

Options Open menu.

Send MMS	Send MMS.
Play	Play entire MMS on the display.
Picture	See p. 49.
Sound	See p. 50.
Text	See p. 50.
Page	Add page: Insert new page behind current one. Delete page: Delete current page. Page list: Display available pages. Timing: Set the time sequence for the MMS presentation: Page duration: Automatic or Manual Show page: Only if Manual is set in front of it. Enter the lifespan of a page.
Msg. details	Enter sending parameters (see next chapter).

Save as templ.	Save created MMS as a template. See also below.
Layout	Select one of four possible layouts: Text above, beneath, beside (on left or right of) picture.
Colours	Select the colours for: • Message • Page • Bitmap • Text backg. • Text colour
(For standard	functions see p. 15)

Templates

(●) → MMS templates

MMS templates are saved MMSs with no address. They can be sent as new MMSs or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

Options Open menu and select Save as templ.

Send

The page(s) of the new MMS is(are) already created and the MMS is displayed.



Open address entry.



Subject: Enter a brief description.

Send to: Enter one/several phone

number(s)/e-mail

 
address(es).

 
Insert from Address-

book.

Size: Display the size of the

current MMS.





Expanded address fields



Scroll downwards.

More: Provide additional

address fields.

Cc: Address(es) of copy recip-

ient(s).

Bcc: Address(es) of copy recip-

ient(s) who are not visible to the other recipients.

Attachments:

Insert attachments.

Date: Creation date.

Use delivery time:

Use specified send time.

If Yes:

Delivery date: Send date.

Delivery time: Send time.

Icons for status information

<u>CHHS</u>

Priority.

∑;]

Send report.



Contains DRM (p. 13).

Sending options

Options)pen menu.
Send MMS	Send MMS.
Play	Play entire MMS on the display.
Edit	Display object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Add attachm.	Add attachment: File Business card Appointment
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	Save created MMS as a template.
(For standard	functions see p. 15)

Receive

Depending on the setting (p. 55), an MMS can be received in two ways:

Complete transmission

The complete MMS is sent to your phone. This can take quite a long time if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

Prior notification

You are notified that an MMS is waiting to be received.



Shown in the display.



Read the notification. Display the size of the MMS.



The complete MMS is

sent.



Display in Inbox.

Read

An MMS has been received in full.



Select the MMS.



Start automatic playing of the MMS.

Key functions for playback:

To the next page.

4

Press briefly once to return to the start of the current page; press briefly twice to return to the start of the previous page.



Set volume.



End.

The message details are displayed when the MMS is complete.

Subject:

Description of the MMS.

From:

Information about the

sender

Size: Size of the MMS.

Expanded address fields

Scroll downwards

More:

Additional input fields.

Cc:

Copy recipient.

Attachments:

Save attachments.

Date:

Date received.

Symbols for status information

(see p. 52)

Lists

All MMS messages are in four different lists (for overview of message icons, see p. 7):

Inhox



→ Inbox → MMS

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press Receive.

Draft



→ Draft → MMS

The list of stored drafts is displayed.

Unsent



O → Unsent → MMS

The list of the MMS messages not yet transmitted is displayed.

Sent



() → () → Sent → MMS

The list of sent MMS messages is displayed.

List options

Different functions are offered depending on the list/situation.

Options Open menu.

ļ	Ориона	Opei	i iliciia.
	Play		Play MMS on the display.
	Edit		Display MMS for processing.
	View		Display MMS for viewing only (write-protected).
	Send MMS		Send MMS.
	Reply MMS		Reply to MMS immediately.
	Forward MI	MS	Enter recipient(s) for forwarding.
	Msg. detail	S	Display message parameters.
	Receiv.all N	MMS	Send all new MMS immediately.
	(For standar	rd fund	ctions see p. 15)

Setting



→ Message setup → MMS → Select function.

MMS profile:

Six MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, the setting are preloaded. If necessary, check with your service provider for details.

Activate profile



Select profile.

Options

Open menu and select Activate.

Set profile

Select profile.

Options

Open menu and select Change sett.

User settings

Set the MMS dispatch to suit your requirements:

requirements:				
	Delivery report:	Request delivery confirmation for sent messages.		Retriev
	Read reply:	Request confirmation that the MMS has been read.		
	Default priority:	Send priority: Normal, High, Low		
	Validity:	Select the period in which the service centre is to try to deliver the message:		
		Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week,		
		Maximum* * Maximum period that the service provider permits.		Spam f
	Earliest deliv. time:	Transmission from the service centre to the		Size ind tion: ⋖
	donv. timo.	recipient:		
		Immediate, Tomorrow		

Default duration:	Length of display for an MMS page (standard requirement).
Retrieval:	Receive complete MMS or only notification of arrival.
	Immediate
	Receive complete MMS immediately.
	Auto.homenet
	Receive complete MMS immediately in home network
	Manual
	Only receive the notification.
Spam filter:	Settings for receipt of promotional MMS.
Size indication: ⊲!	Set max. message size and message handling.

E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Write

→ Write message → E-mail

Enter the address data for the e-mail:

Send to: Enter one or more e-mail

address(es).

☐→ Insert them from the Addressbook/Phonebook.

Subject: Enter e-mail heading

(up to 255 characters).

Content Enter text.

To send:

Options Open menu.

Send e-mail

Select.

Or

All fields Open additional input

fields.

Cc: Address(es) of copy

recipient(s).

Bcc: Address(es) of copy recip-

ient(s) who are not visible to the other recipients.

Attachments:

Add attachments such as pictures and sounds.

Options

Different functions are offered depending on the position of the cursor.

Options Open menu.

Send e-mail	Send e-mail.
Send later	Transfer e-mail into the Unsent list.
Save	Save e-mail in the Draft list.
Add recipient	Add recipient from the current address directory.
Delete line	Delete current line.
Insert from	Bookmark Insert from the Addressbook/Phonebook.
Add attachm.	My stuff Open to make a selection. Remember that pictures and sounds may be pro- tected (DRM, p. 13).
Delete text	Delete the whole text.
Text input	• T9 preferred • Input language

Receive/read



→ Select function

Before an e-mail can be read, it must be retrieved from the server. You have two options:

Retr. e-mail

Only the message header in Inbox (p. 42) is sent. You can then decide if you also want to receive the contents:



Open menu and select Retrieve body

or want to delete the e-mail on the server:

Options

Open menu and select Del on server

Send/rec_mail

The set access is selected and all e-mails transferred into the Inbox (p. 42). At the same time, completed e-mails are transferred from the Unsent list.

Attachments

Contains the e-mail attachments: these can be saved in My stuff (p. 110).



Open menu and select Save attach

Lists

All e-mails are saved in different lists depending on their status (for overview of message icons, see p. 7):

Inhox



The list of received e-mails is displayed.

Draft



The list of e-mails not vet transmitted is displayed.

Unsent



The list of e-mails not yet transmitted is displayed.

Sent



The list of transmitted e-mails is displayed.

List options

Different functions are offered depending on the list.

Options Open menu.

open mena		
Retr. e-mail	Only transfer the message header into the Inbox (p. 42).	
Retrieve body	Retrieve the contents from the server if only the message header was received.	
Del. on server	Delete the contents on the server if only the message header was received.	
(For standard functions see p. 15)		

Setting



Before using this service, you must set the server access and your e-mail options. Most of this data has already been entered. If not, you can obtain this from your service provider. See also on the Internet at:

www.siemens-mobile.com/m65

Accounts



Select account.



Open.

Activate access



Select access.



Activate access.

Set access



Select access or <Empty>.



Start the processing and fill in the data fields as specified by the service provider.

General sett.

Enter an e-mail address to which a **Bcc** (blind carbon copy) is **always** sent.

Voice message/mailbox



→ Voice message

Most service providers provide a mailbox in which a caller can leave a voice mail for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- · if you are making a phone call (and if Call waiting (p. 81) is not activated).

If the voice mail service is not part of your service provider's standard package, you will need to register, and possibly input the settings manually. The following sequence may vary from service provider to service provider.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.





→ Setup → Voice message



Select number from Phonebook/Addressbook or enter/change it.



Confirm.

Save call divert number

Calls are diverted to this phone number.



→ → Phone setup → Divert → e.a. Unanswered → Set



Enter phone number.



Registration with the network is confirmed a few seconds later.

Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and hold down (if necessary enter mailbox number). Confirm with OK and Mailbox depending on your service provider.

Inst. message

With this function you can transfer text, audio clips, pictures and files straight to and from one or more terminals (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether they want to be disturbed and what mood they are in.

GPRS must be switched on.





Start menu

Login

Select the access via which the dialogue runs

or

Account: select (p. 65).

Msq. history

Read the messages from

the last meeting.

Setup Settings for your representation, the applica-

tions and servers.

End application. Quit

Rapid access ...

Select the access (p. 65)



Ø!



The current contact list or the list is displayed (if necessary, set access first, p. 65).

Specify your own status (p. 66)

Options

Open menu.

My settings

Select and make entries.



Return to contact list.

Enter new contact (p. 61)

Options

Open menu.

Manage

Press, then:

Add contact

select and enter the user

ID at least.



Return to contact list.

Inst. Message with new contact (p. 64)



Select the contact.



Start Inst. Message.



Open editor.



Write text.



Send text.



Login



Select the last access to be used (see also Automatic login: p. 66).

Contact lists

When the connection has been established, the contact list or the list of the contact lists is shown for selection.

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an "empty" contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays of the online contacts for the messages are available.

-Online

Online contacts with whom no conversation is being held at the moment.

-Group



Groups for Inst. Message with several contacts.

-Offline

Contacts who are not online at present.

Managing the contacts



Select a contact.

Options

Open menu.

Manage Select.

Contacts

Different functions are offered depending on the selection:

Add contact User ID:

Enter a non-ambiguous user (login) name.

Nickname:

Enter your own nickname for the contact.

Friend:

The contact receives the status Friend: and access to personal information (p. 66).

Search contact

Search for contact.

Delete contact

Delete contact from the list

Block contact

No more messages are received from the contact and the contact receives no status information from you. This function works for all your lists.

Managing the groups



Select one of the groups you set up yourself.

⟨Ω!

Options

Open menu.

Manage Select.

Manage group

Different functions are offered depending on the selection:

Add member	Add a new group member, see also Add contact
Search memb.	Search for group member.
Invite	Invitation to the contacts in your own group to Inst. Message.
Delete member	Delete contact from the group member list.
Add group	Add new group.
Search group	Search for group on the server (no longer in the "administered groups" list).

Create group Group ID:

Enter a non-ambiguous group name.

Name:

Name of group.

Topic:

Topic of group.

Searchable:

Other people can look for

the group.
Welcome note:

Enter welcome text.

Delete group Delete group.

Creating a new contact list

The current contact list is displayed.

Options Open menu.

Contact lists

Available contact lists are

displayed.

Options Open menu.

Create Select.

Contact list ID:

Give the contact list its

own, specific name.

Name: Allocate self-explanatory

names.



Confirm.

Help

Contact list options

Options Open menu. Details < Additional information about the contact or the aroup. My settings Information on your current personal status (p. 66). Manage Functions for managing a contact or a group. Contact lists Display contact lists for selection Block list Display all blocked contacts. Can be unblocked. Appl. settings Set the application (p. 66). Suspend Terminate the application, the server remains connected Logout Log off from the server and return to start menu

Display help text.

Start chat

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page is displayed. During Inst. Message with a group, the name of the sender is placed in front of each contribution.



Open editor.



Write text



Send text. The text appears in the chat soon afterwards.

Naturally, you can also receive messages from contacts whom you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

Options (individual contact)

Options Open menu.

Send sound Select and send a melody/ 8 tone from the list (DRM p. 13). Send Select and send a picture picture < from the list (DRM p. 13). Send anv Send any file. 8 **Details** Information about the contact (if this is authorised by him). Clear all Delete all texts in the current Inst. Message. Block No more messages are contact received from the contact and the contact receives no status information from vou. This function works

Options (group contact)

Options Open menu.

Leave group	Exit group.
Details	Information about the group: Group ID:, Name:, Topic:, Owner:
Clear all	Delete all texts in the current Inst. Message.

for all your lists.

Receiving objects

You will be informed in the display if sounds or pictures are sent to you during a dialogue.

Receive Accept object.

or

Reject

Reject object.

Msg. history



→ Inst. message → Msg. history

The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see Suspend (p. 64) and Automatic login: (p. 66).

Setting



⊗I

→ Inst. message → Setup → Select function

Account

The list of available accesses is displayed.



Select an access to establish a connection.

⊗Ι

Or

<New entry>/Account sett.

Set up an access or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of the access.
URL:	Enter URL, e.g. http:// www.abc.com
User ID:	Enter a non-ambiguous user (login) name.
Password:	Enter password (shown as a series of asterisks).

My settings

Information on your current personal status:

Alias:	Your own alias by which you can be found on the server.
AIM screen name:	Name to be displayed in the group.
Mood:	Information about your own mood, e.g. Happy, Sad, Sleepy, etc.
Status text:	Random text information, e.g. "Am at home".
Availability:	Availability: Available, Not available, Discreet
Mobile:	Enter the phone number with internal extension code.

Options |

For **each** setting, specify who is allowed to view your personal information: **Public**All contacts. **Private**

Contacts designated as

Friend: (p. 62). Hidden Nobody.

Appl. settings

Settings for the application used:

Automatic login: Auto-reconnect to the last access to be used. Timeout: Time without action after which the application is terminated. However, the server remains connected. Message info:/ Online info: Signal the receipt of messages: Yes/No Signal given as: Sound Signal given as: Sound Signal alert Pop-up Popup windows authorised: Yes/No		
which the application is terminated. However, the server remains connected. Message info:/ Signal the receipt of messages: Yes/No Signal given as: Sound Silent alert Pop-up Popup windows		
Online info: sages: Yes/No Signal given as: Sound Silent alert Pop-up Popup windows	Timeout:	which the application is terminated. However, the server remains con-
		sages: Yes/No Signal given as: Sound Silent alert Pop-up

CB services



→ Setup → CB services

Some service providers offer information services (info channels, Cell Broadcast). If reception is activated, you will receive messages on the activated topics in your Topic list.

CB messages are displayed in standby mode, longer messages are scrolled automatically.

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New topic Select.

- · If no topic index is available, enter a topic with its channel number and confirm with OK.
- If the topic index has already been transmitted, select a topic and activate it with Options

Topic Select.

Options Open list menu.

If a topic is selected in the list you can view it. activate/ deactivate it. edit it or delete it.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays

Topic activated/deactivated.

New messages received on the topic.



Messages already read.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Internet





The browser is activated with the pre-set option as soon as you call up the function (Browser settings, p. 69; may be specified/pre-assigned by service provider).

Browser menu

Options

Open menu.

Homepage	Call up the pre-set homepage for the current profile.
Bookmarks	List bookmarks Dis- play list of bookmarks

- Display list of bookmarks stored in the phone.
- · Bookmark site The current page is saved as a bookmark.

Go to	Enter URL for direct dial to an Internet address, e.g. wap.siemens-mobile.com
Reload	Reload current page.
Show URL	Display the URL of the page currently loaded for sending via SMS/MME/ e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the com- plete page; display saved pages.
Setup	Set or reset browser (p. 69).
Exit browser	Close the browser.

End connection



Press and hold to clear down the connection and close the browser.

Navigation in the browser



- Select a link
- · Settings, status on/off.



· Press briefly: back a page.



- · One input field/link forward/back.
- Scroll one line

Display symbols in the browser (selection)



Connect



No network

Network



GPRS online

Enter special characters



Select important special characters.

Browser settings





Options

Open menu.

Setup

Select

Browser

Set start option as well as handling of pictures and sounds plus send options.

Profiles

The list of profiles is displayed for activation/setting. For more information, contact your service provider.

Protocol parameters

Set protocol parameters. push messages and abort time as well as handling of cookies

Security

Set encryption.

Context

Reset session: delete cache, history and cookies. Your Internet browser is licensed by:



Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

Set profile manually

If necessary, contact your service provider.

Options

Open menu.

Edit	Start processing. For the Internet-specific settings below, please contact your service provider.
Delete	Delete selected profile

Delete selected profile.

Bookmarks





Display URL/call up page

List bookmarks

Display list of bookmarks stored in the phone.



Select bookmark.



Call up URL.

Save

Bookmark site

The current page is saved in the phone as a bookmark.

Bookmark options

Options

Open menu.

Here you will find functions for changing and managing bookmarks and their folders. This includes editing individual entries with the corresponding URLs as well as deleting and moving them to other folders.