BenQ·SIEMENS



Issued by BenQ Mobile GmbH & Co. OHG Haidenauplatz 1 D-81667 Munich

© BenQ Mobile GmbH & Co. OHG 2006 All rights reserved. Subject to availability. Rights of modification reserved. Manufactured by BenQ Mobile GmbH & Co. OHG under trademark license of Siemens AG

www.BenQ-Siemens.com/m81





M81

Safety precautions2	Internet35
Phone overview5	Settings 37
Display symbols 7	Organiser47
Getting started8	Extras49
Switching on/off, PIN entry11	Alarm clock 52
General instructions12	Media player53
Security15	My stuff54
Text input	Mobile Phone Manager57
Calling 19	Customer Care58
Contacts21	Care and maintenance 60
Call records 24	Product data61
Camera25	SAR 62
SMS/MMS27	Guarantee certificate (UK)63
E-mail 32	Guarantee certificate (IRL)63
WAP push	Licence Agreement65
Voice mailbox/CB services 34	Index69

This is a summarised version of the User Guide. The complete version can be found on the Internet at this address: www.BenQ-Siemens.com/m81

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or whilst driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep a distance of at least 20cm/9 inches between the phone and pacemaker. Whilst using the mobile phone, hold it to the ear furthest away from the pacemaker. For more information consult your doctor



Tones, music and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



Only use original batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. For instance, the battery may explode.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Do not look at the LED (e.g. activated infrared port, flash LED) with optical magnifiers because of radiation.

This product complies with IEC/EN 60825-1 "Safety of Laser Products" for LED Class IM products; such products are safe under reasonably foreseeable operating conditions.



Small parts such as the SIM Card, dust cap, lens ring and lens cap as well as the RS MultiMediaCard can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



You may only open the phone to replace the battery (100 % mercury-free), SIM and RS MultiMediaCard. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Permanent hearing loss may occur if you use ear- or head-phones at high volume. You can adapt over time to a higher volume, which may sound normal but can be damaging to your hearing. Set your volume to a safe level. If you experience ringing in your ears, reduce the volume or discontinue use of your system.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheelie bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for re-use and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council, waste disposal service or the shop where you purchased the product.



Use only original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to original accessories.

As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of 1.5 cm is required.

Bluetooth®

Your phone has a Bluetooth interface. This makes it possible to establish a wireless connection with your phone and a headset, Car Kit, or other Bluetooth-enabled devices.

In order to establish a secure link between the devices and to prevent a third party from having access to your phone, you should observe the following points:

- The initial connection between two devices, what is called "pairing", should take place in familiar surroundings.
- Both devices must be able to identify themselves once by using a password/PIN. To ensure sufficient security, you should choose a 16-digit number combination for a password that would be difficult to guess (if a PIN has not been assigned).
- An automatic connection acceptance ("connection without confirmation") should only be used in exceptional cases.
- In general, only trustworthy devices should be linked in order to minimize security risks.
- You should restrict the "visibility" of your phone if possible. This will make it much more difficult for unknown devices to establish a connection with your phone. To do this, in the Bluetooth menu, set the option Visib.to others from Always visible to Not visible (page 39).

- The name of your phone is transmitted in a Bluetooth connection. The factory default is the "Bluetooth ID". The first time Bluetooth is activated, or later in the Bluetooth menu, you can change this name (My BT info, page 39).
- If Bluetooth is not needed, this function should be deactivated.

Before using Bluetooth accessories, or a mobile phone inside a vehicle, check the vehicle user guide for any limitations on the use of these products.

The Bluetooth *word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by BenQ Corp. is under licence. Other trademarks and trade names are those of their respective owners.

Phone overview

Softkeys

The current functions of these keys are shown as text / symbols (e.g.).

(2) Call key (green)

Dial displayed/highlighted phone numbers/names, accepts calls. In standby mode, show last phone numbers dialled.

- ③ On/Off/End key (red)
 - · Switched off: press to switch on.
 - · During a conversation or in an application: press briefly to end.
 - · In menus: return to standby mode.
 - · In standby mode: Press and hold to switch off the phone:

press briefly: switch-off menu.

4 Media player key

Direct key for media player.

⑤ Internet key

Key for Internet access unless otherwise preconfigured.

6 Centre key

Press the centre key to open the main menu and to start an application or function (page 13).

Navigation keys

In standby mode:

- Open user profiles.
 - Open contacts.
- Open inbox.
- Start the camera.

In lists, messages and menus:

Scroll upwards/downwards.

During a conversation:

Open contacts.



- ① Integrated antenna
- ② Loudspeaker
- ③ (+)/(−) Volume control
- ④ Display
- S Ringtone
 - Press and hold in standby mode: switch all acoustic signals on/off (except alarm clock).
 - Press and hold during incoming call: switch off ringtone for this call only.
- 6 Wey lock

Press and **hold** in standby mode: activate/deactivate key lock.

- Plug socket
- Slot for RS MultiMediaCard[™]




① Flash/torch

Switch torch on/off: press (change, see page 40).

2 Camera lens

In order to shield the camera lens, please twist the cover to the right by 90° (protection against dirt/damage and splash water).

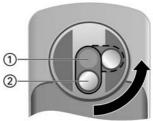

Display symbols

Keypad locked

2 10 P 1	ay 0 y 1110 010				
Display s	symbols (selection)	GP RS	Activated and available		
	Signal strength	€\$	Browser is being connected		
	Battery charge level, e.g. 50 $\%$	Events (selection)		
21	Contacts	!	SMS memory full		
4 3	Call records	∑!]	MMS memory full		
(3)	Internet/Service provider portal		Phone memory full		
		N	No network access		
	Games		Inbox		
	Organiser	Message symbols (selection)			
	Messages		Unread		
	Camera		Read		
	Extras		Sent		
	Media player	=123	Sent		
			MMS notification received		
	My stuff		MMS with DRM contents		
Ø	Alarm clock		(page 12)		
E.	Settings		E-mail with attachment		
4	All calls are diverted.	00	Voice mail received		
Ø	Ringer (beep) off				
(b)	Alarm set				

Getting started

Your phone's display is covered with a protective film. Remove this before using the phone.



In rare cases static discharge can cause temporary discolouration in the display. However, this will disappear within approx. 10 minutes.

Inserting SIM Card/ battery

The service provider supplies you with a SIM Card on which all the important data for your line is stored. If the SIM Card has been delivered in creditcard size, snap the smaller segment out and remove any rough edges.

 Place the SIM Card in front of the slot with the contacts facing downwards.
 Then push the SIM Card fully into the holder using gentle pressure ①.
 Ensure that the cut-off corner is in the correct position.



 Insert the battery sideways into the phone ②, then press it downwards ③ until it engages.



 To remove, press the retaining tab on the side of the battery, then lift the battery out. Place the battery cover on the phone slightly off centre and then slide it until it clicks into place.



• To remove, press the battery cover ⑤, and slide it off the phone ⑥.



 
Additional information

Please switch off your phone before removing the battery!

1.8 volt and 3.0 volt SIM Cards are supported. Please contact your service provider if you have a different card.

RS MultiMediaCard[™]

• To insert, place the card in the card holder ①, ensuring the cut off corner is in the correct position. Push the card holder with the card into the phone until it clicks into place ②.




• Before removing the card, call up the Eject card function in the My stuff options menu. This saves data you have not yet saved and avoids losing data. Press the small button ③ to remove (e.g. with a pin). The card holder will pop out a little and you can remove it.



Charging the battery

Charging

 The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours** (for charging via USB, see page 46). Do not interrupt the charging procedure prematurely.





Display when charging is in progress.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the respective network conditions and conditions of use. Extreme temperatures considerably reduce the phone's standby time. You should therefore avoid

leaving the phone in the sun or on a radiator (talktime, standby time see page 61).

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply unit included in delivery!

Display during operation

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore not remove the battery unnecessarily and where possible not terminate the charging process before completion.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching on/off, PIN entry

Switching on/off



Press and **hold** the red On/Off/End key.

Entering the PIN

The SIM Card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear in the display to ensure nobody can read your PIN. Correct with *C .



Press the left softkey to confirm. Logging on to the network will take a few seconds.

Additional information

Changing the PIN	page	15
Clearing SIM Card barring	page	16

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the left softkey SOS you can make an emergency call on any network without a SIM Card and without entering a PIN (not available in all countries).

Switching your phone on for the first time

Time/date

Set the clock correctly once when getting started.



Confirm.



Start entry.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Confirm. The time and date are updated.

Time zones



Select the city in the desired time zone.



Confirm.

General instructions

Standby mode

The phone is in standby mode and is ready for use when the name of the service provider appears on the display.



Press the On/Off/End key to return to standby mode from any situation.

Receiving signal



Strong receiving signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your phone has Digital Rights Management. The use of downloaded pictures, sounds or applications can be restricted by the suppliers, e.g., copy protection, use for a limited period of time only, number of times it can be used etc.

User guide

The following symbols are used to explain operation:



Enter numbers, letters.



On/Off/End key (red)





Displays a softkey function



Press the centre key, e.g., to call up the menu.



Press the navigation key on the side marked with a triangle.



Function dependent on the service provider.

Main menu

The applications are shown with symbols in the main menu:



Call up from standby mode using the centre key.



Select application with the navigation key.




Start application.

Main menu options

Options O	pen menu.
Search	List output of the menu.
Big letters	Select one of two font sizes.
Illumination	Set display light brighter/darker.
Eject card	Data backup before removing the RS MultiMediaCard.
Help	Display a help text.

 Tabs




If an input field is activated on a tab, it is only possible to navigate within the field using the navigation key.

Menu controls

The steps needed to reach a function are shown in a condensed form in the user guide, e.g. to display record of missed calls in condensed form:



 This comprises of the following steps:



Select the record application 🚮.

Confirm with the centre key.

Select the Calls missed function.

Confirm with the centre key.

Centre key

The symbol in the centre of the lower line of the display shows the current function when the centre key is pressed.



Calls Edit Insert

Options

Camera

Send











Standard functions

Functions which appear repeatedly in the options menu are listed here.

Options Op	en menu.
Edit	Open the entry to edit.
View 1	Display entry.
Delete 1	Delete entry.
New entry	Create new entry.
	Select transmission service and medium for sending.
1	Printout on a suitable ter- minal via, Bluetooth or USB.
Reply to all	The sender becomes the recipient, "Re:" is placed before the subject, and the received text is transferred into the new message.
Save S	Store entry.
Save to 🖾 🥴	Save recipient in Contacts.
	Set sort criteria (alphabetical, type, time).
Rename 1	Rename selected entry.
Capacity 1	Display memory capacity.
·	Device ready to receive da- ca (vcard, vcal, vnotes) via Bluetooth.
	Display properties of the nighlighted object.
Help 1	Display help text.

Printing via USB

This Mobile Printing Ready product is designed to provide easy printing from mobile phones. This product follows Mobile Imaging and Printing Consortium (MIPC) Implementation Guidelines for Home Printing with Mobile Terminals, Version 1.0, for PictBridge.

Connect the mobile phone to the printer with a USB data cable: First select Print, then Via USB and then connect the USB cable.

Mark mode

For some applications (e.g. deleting several SMS messages) you can highlight several entries on the tab in order to perform multiple functions at once.

Options Open menu.

Mark text Activate mark mode.

Select entry/entries.

Additional highlighting functions:

Mark or unmark.

Options Open menu.

	•
Mark all	Mark all entries.
Unmark all	Unmark all marked entries.
Delete marked	All marked entries are deleted.

Security

The phone and SIM Card are protected against misuse by several security codes.

Keep these security codes in a safe place where you can access them again if required.

PIN codes

PIN	Protects your SIM Card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM Cards.
PUK PUK2	Key code. Used to unlock SIM Cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.



Edit.



Enter PIN.



Confirm entry.

Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.



Edit.



Enter current PIN.



Confirm.



Enter new PIN.



Repeat new PIN.



→ Security

→ PIN codes

→ Select function.

Change PIN2

Proceed as for Change PIN.

Chg. phonecode

(Change phone code)

You define the phone code (4-8 digit number) the first time you call up a phone-code protected function (e.g. Direct call, page 44). It is then valid for all phone-code protected functions. If the phone code is entered incorrectly three times, access to the phone code and the functions that use it is denied. If this happens please contact Service Centre (page 58).

Clearing SIM Card barrings

If the PIN is entered incorrectly three times, the SIM Card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM Card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (page 11) confirmation is required to switch on the phone.

This prevents the phone from being switched on accidentally, e.g. when carried in a pocket or whilst you are on an aircraft.



Press and hold.



Press. The phone switches on



Press (or no further input) to stop switch-on procedure. The phone does not switch on

Connection with PCs

You can connect your phone to a PC using Bluetooth or a data cable (accessory). The PC program MPM (Mobile Phone Manager) enables you to store data on your PC and, for example, synchronise the contacts with Outlook*, Lotus Notes™. You will find Mobile Phone Manager on the CD-ROM supplied or you can download it from the Internet at:

www.BenQMobile.com/customercare

Text input

Text input without T9

Press the number key repeatedly until the required character appears. After a brief interval the cursor will advance. Example:



Press **briefly** once to write the letter **a**, twice for **b** etc. Press and **hold** to write the number.



Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.



Move the cursor (forward/back).



Press **briefly**: swap between abc, Abc, ^{T9}abc, ^{T9}Abc, 123.

Press and **hold**: all input variants are displayed.



Press once/repeatedly:

.,?!'"0+-()@/:_

Press and hold: write 0.



Inserts a space. Press twice = line break.

Special characters



Press briefly:

	7							
1)	ż	i	_	;		,	?	!
+	-	"	,	:	*	1	()
¤	¥	\$	£	€	@	1	&	#
[]	{	}	%	~	<	=	>
Ι	٨	`	§	Γ	Δ	Θ	٨	Ξ
П	Σ	Φ	Ψ	Ω				

1) Line break



Scroll to a character.



Confirm.

Text input withT9

"T9" uses various key entries to deduce the correct word.



Activate/deactivate T9.

Writing with T9

It is best if you finish a word without looking at the display.

Simply press the keys where the relevant letter is located **once**.



A blank space or moving to the right ends a word.

Do not use special characters such as Ä. Use standard characters only, e.g. A. T9 will do the rest.

T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.

11213

Press. If this word is incorrect, press again.

11213

Keep pressing until the correct word is displayed.

To enter a word in the dictionary:

Spell

Select and enter the word without T9, then Save.

Correcting a word



Move left or right, word by word, until the required word is highlighted.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word.

Additional information



Press **briefly**: swap between: abc, Abc, T9abc, T9Abc, 123. Status shown in top line of the display.

Press and **hold**: all input variants are displayed.



Press **briefly**: select special characters (page 17).

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, 6,636,162 and 6,646,573; Australian Pat. Nos. 727539, 746674 and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595 and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959 and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1; People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141: Russian Federation Pat. No. 2206118; and additional patents are pending worldwide.

Text templates



→ → Templates
→ Text templates

Text templates can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Calling



Enter number (always with area/international dialling code).



Press the green Call key. The displayed phone number is dialled.

Ending a call



Press the red End key **briefly**.

Setting the volume



Adjust the volume with the plus/minus side keys.

Last number redial



Press the green Call key twice. The phone number last called is redialled.

Call from the redial list:



Press **once**; choose phone number.

Dial phone number.

Auto last number redial



Open, then Auto dial. The phone number is dialled ten times at increasing time intervals.

Reminder



Open, then **Reminder**. A beep reminds you to redial the displayed phone number after 15 minutes.

Accepting a call



Press the green Call key.

Rejecting a call



Press the red End key **briefly**.

Additional information

Accept the call before bringing the telephone to your ear in order to avoid ear damage caused by the ringtones.

Handsfree

Options

Open, then activate/deactivate Handsfr. Always switch off "handsfree talking" before holding the phone to your ear. Otherwise, you will damage your hearing!

International dialling codes

0 +

Press and **hold** until a "+" is displayed.

Options

ons Open call menu,

Country codes

Confirm, then select country.

Call options

Functions which are only available during the call are offered in the call menii

 
Swapping between 2 calls



Establishing a second connection



Open, then Hold.



Contacts or enter it manuallv. When the connection is established:

Options

Open call menu.

Swap between the calls. Swap

Incoming calls during a call

You will hear the "call waiting" tone (page 41) and have the following options:

· Accept the waiting call in addition to the first

Swap

Accept the call and put the current call on hold.

Reject the waiting call

Reject

Reject or use Divert to divert to the mailbox.

· Accept the waiting call and end the current call



End call (red key).



Accept new call.

End call(s)



Press the red End key briefly.

Resume the held call.

No

End all calls.

Conference



You can call up to 5 conference participants one after the other. When the first connection is established:

Options

Open, then Hold.

Select phone number from Contacts or enter it manually. When the connection is established:

Options

Open, then use Conference to join in the held connection. Repeat until all participants are connected.

Ending



All calls in the conference finish simultaneously when the red End key is pressed.

Tone sequences (DTMF)

Enter tone sequences (digits) for remote access to an answering machine.

Options

Open, then select Send DTMF

Contacts



You can store up to 2500 entries in this phone directory, with several phone and fax numbers plus additional address details. Five tabs are offered for fast access:

All contacts, Groups, Online status, SIM, Filter



Open Contacts (in standby mode).



Switch between the individual tabs.

Communication



Select contact.



Call selected contact.

Or

Options

Open menu, then **Create** message, to start a message dialogue.

All contacts

Display all entries stored in the phone or on the SIM Card in alphabetical order.

<New entry>



Confirm < New entry>. The tabs are displayed.



Switch between the individual tabs:

General sett.

First name, surname and important phone numbers. A ringtone, a picture or video with sound can be assigned to each contact.

Private

General address information and additional communication numbers such as fax and e-mail.

Business

Company information, address, communication numbers.

Person

Personal details such as date of birth, group membership and other notes.

Online status

Contact information for Instant Messaging (page 31).

In the respective tabs:



Select required input fields.



Enter at least one name/ company. Enter phone number with dialling code.



Open menu and select Save.

Viewing/editing entries



Select required entry.



Open current tab to edit.



Groups

You are offered 10 different groups to enable you to arrange your contacts clearly.

Editing group attributes



Select group.



Open menu and select

Adding a contact

Contacts which are stored in the phone directory may be added to a group via All contacts tab.



Select contact, open Options and select → group then a group. A contact can only belong to one group.

Online status

Display all contacts that have WV addresses (Instant Messages).

SIM

Display contacts on the SIM Card.

<New entry>



Confirm <New entry> and name, enter phone number and select the storage location.

Viewing/editing entries



Select required entry and edit entry.

<Own numbers>

Store your own phone numbers.

<Service nos.>

There might be phone numbers saved that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Filter

Those entries which match the selected filter criteria are displayed, e.g. those containing a picture.

General functions

Options

Different functions are offered depending on the tab and the current situation.

Filter	Only those entries which match the filter criteria are displayed.	
Create message	Create a message for the selected contact.	
Search ID	Search for assigned Instant Message ID (only if lnst. messaging is activated (page 31).	
Internet	The URL assigned to the contact is visited via the wap browser.	
Open	Display "own" phone numbers (e.g. fax) for reference.	
Search	Search for names, phone numbers, addresses and E-mail addresses.	
→ group	Add entry to a group.	
Take a picture, Record video, Record sound, etc.	Create picture, video and sound informa- tion for a contact from scratch or add from My stuff.	
More	See below.	
(For standard functions see page 14)		

More

Location

Swap entries between the phone memory and the SIM Card.

Synchronisation

You can synchronise your mobile with an organiser stored on the Internet (Remote sync., page 48).

Capacity

Display memory capacity.

Settings

Set displays in the tabs.

As business crd

Define a selected contact as a business card.

Business card

Establish a contact as your own business card to send to a different GSM phone.

Import

Set up readiness to receive via Bluetooth.

Add more fields

Move SIM Card entry to the phone memory. Now all tabs are offered for further entries.

Call records

Phone numbers are stored for easy redialling.



Select and open record.

Select phone number.

Up to 500 entries are stored in the records:

Calls missed

The phone numbers of calls that you have received but not answered are stored for callback purposes.

Symbol in the display for a missed call.

 
Dial phone number.

Calls received

List accepted calls.

Calls dialled

Access to the last numbers you have dialled.




Delete records

Delete records

Durat./charges

 Display charges and duration during a call.



Last call, All outg. calls, All incom.calls, Remaining units

Options



8!

Open menu.

Reset	Reset the currently selected setting.
Reset all	Reset all settings.
Charge	Call up the menu

Charge settings

Currency	Enter desired currency.
Personal rate	Enter the currency as well as the charge per unit and time (PIN2).
Account limit	Special SIM Cards allow you or the service provider to define a credit limit after which the phone is barred for outgoing calls.
Auto display	Call duration and charges are displayed automatically.

Camera

A camera with flash is integrated in the phone. Use photos/videos as:

- wallpaper, logo, screensaver, startup and shutdown animation
- · a picture of your contact entries
- an attachment to an MMS or e-mail.

Save photos and videos in My stuff (page 54) or on the RS MultiMediaCard (page 56).

Switching on







Switch between the Take a picture and Record video tabs.

The preview image is displayed. In the first line you will see:



Zoom factor



Night mode White balance




Flash active

The number of photos that can still be taken in the selected resolution is displayed in the preview image. This number varies considerably depending on the subject matter and how much storage space is required. You will also see an indication of the selected resolution or, if video mode has been selected, there is an indication as to how much recording time has already been used and how much time is still available.

Take a picture



 Take a photo.



The photo is saved with a name, the date and the time in the Pictures folder in My stuff (page 54). Change the name with Rename in the camera options menu.

Image resolution

It is possible to set the quality of the image regardless of the preview image resolution. The best possible resolution is 1280 x 960 pixels.

To take individual wallpaper images you need to set Wallpaper as the image resolution in the options.

The resolution may decrease depending on the selected digital zoom.

Record video

The video mode resolution is the same as the preview image resolution.



Switch to the Record video tab.



Start video recording. A red dot appears in the display.



Video resolution

It is possible to set the quality of the image for a video regardless of the preview image resolution.

The best possible resolution is 176 x 144 pixels.

Flash

For settings, see options menu.



This symbol appears in the display if the automatic mode is activated.

In the automatic mode the flash would be turned on depending on the lighting condition. This mode is recommended to save standby time. The flash performance depends on the outside temperature and the charge status of the battery. If the temperature is low and the battery needs charging the flash performance deteriorates.

Camera Options

The following functions are available, depending on the current situation.

Options O	pen menu.	
Memory assist.	Starts if there is insufficient memory.	
Pictures	Display list of photos.	
Other videos	Display list of videos.	
Microphone on	Switch microphone on or off.	
Flash	Choose between: Automatic, On, Off, Red eye reduct.	
Settings	Name for video/picture Resolution: Brightness: Colour mode: Night mode: Self-timer: Recording time: Set video recording time for short/long MMS Save to:	
Frame	Select decorative frame. Only available if resolution is not too high.	
Self-timer	Set camera to take photo after a determined period of time.	
White balance	Automatic, Indoor, Outdoor	
(For standard functions see page 14)		

SMS/MMS

You can use your phone to send and receive messages via SMS and MMS (Multimedia Messaging Service).

Information about SMS

You can use your phone to transmit and receive very long messages (up to 760 characters). They are automatically composed of several "normal" SMS messages (note higher charges). Using special letters in some languages reduces the maximum possible length of an SMS. If you do not wish to use these letters, please change the input language in the options menu.

Information about MMS

The Multimedia Messaging Service enables you to send texts, pictures/ videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available, and register for it if necessary.

Writing an SMS





Enter text. You will find information on writing texts with and without T9 in the chapter "Text input" (page 17).



Enter phone number or
open menu, then select

Add from □, select recipient
from Contacts. You can add
more than one.



Start sending process.

Additional information

The following is displayed in the uppermost line: text input status, number of SMS messages required, number of characters still available for the current SMS.

If the length of the text precede 760 plants

If the length of the text exceeds 760 characters, the message is converted into an MMS.

Writing an MMS





→ Create new → MMS

Layout

An MMS may comprise a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (note DRM, page 12).

Content



Enter text.

 
Options

Open menu, then select Add item. Choose between Text, Picture, Sound, Video and/or add an Attachment. If you want to insert a subject, then select Add subject.

Sending



Enter phone number or open menu, then select Add from \(\square\), select recipient from Contacts. You can add more than one.



Options for writing and sending an SMS/MMS

Options

Open.

Save as templ.	Save MMS as a template.
----------------	-------------------------

Add recipient Add recipient.

Add from

Add a recipient from Contacts.

Remove recip.	Remove recipient.
Add subject	Add subject field.
Add item	Add pictures, videos, sounds, contacts or other files from the phone.
Create item	Create contents. Camera/video (page 25), sound recorder (page 50).
Preview MMS	Play entire MMS in the display.
Save as draft	Store the SMS/MMS as a draft.
Text edit menu	Input language, Mark text, Copy, Insert
Send options	See page 31.
Insert text	Template, Signature, Opening senten., Contact details, Bookmark
Page duration:	Adjust the time the page will be displayed.
Emoticons	Insert symbols, page 31.
View pictures/ Play sound/ Play video	Show pictures and play back melodies or videos.
Open attachm.	Show selected attached files.

(For standard functions see page 14)

Receiving/reading

A new incoming message is displayed () in standby mode.



Use the softkey underneath to open the Inbox.









Select the required message. Read the message or the no-

tification about an MMS.

To receive a complete MMS later on:

Options Then select Retrieve MMS.

Additional Inbox Options are View, Reply/Reply to all, Forward. For standard functions see page 14.

Additional information about MMS:



Scroll up/down within a page.



Jump to next page and return at end to first page. Jump to the start of a page or



to the previous page.

Read options

Different functions are offered depending on the situation.



Open menu.

	Save picture/ Save sound/ Save video	Allows you to save selected pictures, videos or sounds on the phone
	Play	Play back MMS.
	Pause	Pause playback of an MMS.
	Select	Opens submenu for Call, Save to contact, Open link, etc. depending on the text selection.
	Open item	The contents of the MMS are listed for playback with the media player or for saving.
	Save item	The contents of the MMS are listed for saving in the relevant folder.
	To archive	Moves the selected message to the archive.
	Open attachm.	Open an attachment.
	Save attach.	Opens the relevant folder in My stuff for saving.
	(For standard f	unctions see page 14)

Draft

The list of drafts is displayed. Messages you have not yet finished can be saved as drafts.

Outbox

The list of messages not sent is displayed. Failure may be caused by loss of network connection.

Sent

The tab for the messages sent is displayed.

Archive

Messages are saved in the archive according to their type and origin. Select tab and read required message(s).

Templates



MMS templates

MMS templates are messages saved without an address. They can be sent as a whole or as part of a new MMS.

Text templates

See page 18.

SMS settings

Normally the basic settings have already been made by the service provider.

Send options

Set send options such as Service centre, Recipient, etc.

Creation

Set layout options such as Add signature, Signature, etc.

MMS settings

Normally the basic settings have already been made by the service provider.

Send options

Set send options such as Delivery report, Validity period, etc.

Creation

Set layout options such as Creation mode, Opening senten., etc.

Retrieval

Settings for receipt of the message: Retriev.(roam.), Allow deliv.rep., Allow read rep., etc.

Connect. sett.

Select the required MMS profile in which the connection attributes are specified. You can obtain the data you need for this from the service provider or at:

www.BenQMobile.com/customercare

Save after send



SMS messages are always saved in the **Sent** list after sending.

Text zoom



You can select one of three specified text sizes for presenting a message.

Emoticons



Emoticons are small symbols (smileys) with which you can show your feelings in pictorial form.

Inst. messaging (IMSG) ⊗!



This function is not supported by all service providers. Please contact your service provider for more information. You will find a description in the comprehensive user guide on the Internet at: www.BenQ-Siemens.com/m81

E-mail

Your phone has an e-mail program (client).

Writing/sending







Enter text.



Open menu, then select Add item. Choose between e.g. Text, Picture, Sound, Video and/or add an Attachment. Insert a subject, then select Add subject.



Enter e-mail address or open menu, then select Add from , select recipient from Contacts. You can add more than one. Add Cc. Add Bcc can be added via Options



Send e-mail.

Receiving/reading





Select the E-mail tab. Before an e-mail can be read, it must be retrieved from the server.



Open menu, then select Retrieve e-mail/Retrieve body.



Select message.



Read message.

Additional options include Reply, Forward, Save attach.

Message lists



→ Draft/Sent/Outbox/
Msg. archive → E-mail

The tab for the messages not sent yet/sent/archived is displayed.

Settings





Before using this service you must set the server access and your e-mail parameters. You will receive the necessary data from the service provider.

General sett.

General settings for receiving and sending.

Connect, sett.



Select the profile and activate



Change settings as indicated by your service provider.

Options

Open, then select Save.

WAP push

WAP push messages are transmitted from special service centres. If, for example, you have requested configuration data from your service provider this will be transmitted via WAP push.

A new incoming message is displayed () in standby mode.

Use the softkey underneath to open the lnbox.

Or





Select the required message.



Read the message or information about the transmitted data/programs and, if applicable, start a download.

Inbox options

Different functions are offered depending on the situation.

Options Open menu.

Execute	Execute program	
Install	Start installation	
Accept/ Reject	Accept/reject message	
(For standard functions see page 14)		

Settings



Options

Open menu, then select **Settings**.

Allow push	Settings to receive WAP push messages: Allow specific, Allow none, Allow all If Allow specific has been set, the following lists may be edited.
Accept list	All messages from senders included in this list are accepted (max. 20 entries possible).
Reject list	All messages from senders included in this list are automatically deleted (max. 20 entries possible).
Unknown addr.	Handling of messages from senders are neither in the accept nor the reject list: Reject, Delete

Voice mailbox/CB services

Voice mailbox





W → Voice mailbox

Most service providers provide a mailbox in which a caller can leave voice mail for you. If the voice mail service is not part of your service provider's standard package, you will need to register for it, and possibly set it manually.

Settings



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to your voice messages.





IIII → ✓ → Voice mailbox

Enter/edit the phone number and confirm with OK.

Save call divert number

Calls are diverted to this phone number.





Options Open, then select e.g. Unanswered and

then Set.



Enter phone number.

Options

Open, then select Save.

Listening



One of the following symbols will appear when you receive a new voice message:



Symbol with beep/an SMS or a call with automatic announcement.

Call your mailbox and play the message(s) back.



Hold down (if necessary enter mailbox number once only). Confirm with OK and Mailbox depending on your service provider.

CB services







Some service providers offer information services (info channels, Cell Broadcast). If reception is activated, you will receive messages on the activated topics in your Topic list.

Internet





→ Select function.

Download games, applications, sounds, graphics and more for your phone at wap.BenQ-Siemens.com ("Downloads"). Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Downl. assist.

You will not be left on your own during the download.

Enter URL

When a URL is entered, the browser starts and the entered page is displayed.

Bookmarks

List bookmarks

Display list and select a bookmark.



Select bookmark.

Call up URL.

Saving

Bookmark site

The current page is saved as a bookmark.

Internet

The browser is started with the pre-set option.

Browser menu

Options

Open menu.

I T	
Homepage	Call up the pre-set homepage of the current profile.
Bookmarks	Display stored list of bookmarks; save bookmark.
Go to	Enter a URL.
Reload	Reload current page.
Show URL	Display the URL of the current page for sending via SMS/MMS/e-mail.
History	Display most recently visited Internet sites.
Disconnect	Disconnect from the Internet.
File	Save the object on the current page or the complete page; display saved pages.
Setup	Settings for the browser.
Exit browser	Close the browser.

End connection



Press to end the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.


Back

- · Go back a level.
- One input field/link
 - forward/back.
 Scroll one line.

Display symbols in the browser (selection)

9 \$	Connect	90	No network
GPRS	GPRS	•	Network

 Enter special characters



Browser settings



Options Open menu.

Setup :	Select.
Browser	Set start option as well as handling of pictures/sounds plus send options.
Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and cookies.

Calast

Connection settings

Handling depends on the service provider (see page 40).

Your Internet browser is licensed by:



History

Catura

Display most recently visited Internet sites.

Stored pages

Display list of pages stored in the phone.

Settings

Profiles



Several settings can be stored in a phone profile so that the phone can be adapted, for example, to the surrounding level of noise.

- Six profiles are provided with default settings. They can be changed, however:
 - General, Vibration, Meeting, Outdoor, Car Kit, Headset
- You can name two personal profiles (<Name>).



Select default profile or personal profile.



Activate the profile.

Changing profile settings

Edit a default profile or create a new personal profile:



Select profile.

Options

Open menu.

Change sett.

Select.

When you have finished setting a function, you return to the profile menu where you can change a further setting.

Car Kit

If an original Car Kit is used, the profile is activated automatically when the phone is connected to the Car Kit.

Headset

If an original headset is used, the profile is activated automatically when the headset is in operation.

Additional information

- · To call up the list in standby mode: no profile list is displayed.
- The active profile is identified with .

Ringtones





Choose individual ringtones for different functions and set the volume for all tones.

Themes



Load a completely new visual presentation onto your phone. Various functions are re-organised on a theme basis at the press of a key, e.g.

Animations, Sounds, Colour skins, Wallpaper

Theme files are compressed to save memory space. After a download or a call from My stuff, these are automatically unzipped when activated.



Select theme.



Activate; if required, view Preview.

Display



Wallpaper

Set wallpaper graphic for the display.

Logo

Choose picture to be displayed instead of the provider logo.

Screensaver

After a set time, the screensaver shows a picture in the display. An incoming call and/or pressing any key will end the function except if the code security with the telephone code is activated.

Startup anim./Shutdown anim.

Shown when the phone is switched on/off.

Welcome text

Displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker.

Vibration



To avoid the disturbance caused by a ringtone, you can activate the vibration as an alternative for various applications. The vibration can be switched on in addition to the ringtone (e.g. in a noisy environment).

Connectivity



EGPRS (EDGE)

EGPRS is a method for transmitting data in the mobile network faster than with GPRS.

EGPRS info

Display information on connection status.

Bluetooth® (BT)



Activate/deactivate Bluetooth.

Bluetooth sett.



Bluetooth activation.

Search

Specify which BT devices are to be searched for.

Device list

· Known devices

Record frequent BT partners in the list of known devices. If entries are "confidential", no password query is made. Last connected

List of most recently and/or still connected devices

· Reject list

Attempts to make connections to devices in this list are rejected.

· Last srch.result

List of the last devices found.

My BT info

The phone is given a name (max. 20 characters) – this is the name the partner sees. If no name is given, the phone uses the non-changeable device address.

Visib.to others

Make settings to specify how your phone should "act" when in contact with other BT devices. This means (if "visible"), for example, that the device address or the BT name of your phone is shown to other BT devices if they request this in order to receive or send data.

· Not visible

Your phone is not "visible" to other BT devices. Known devices such as the Bluetooth Headset/Car Kit continue operating.

Auto mode

Your phone is "visible" to other BT devices for five minutes. You will then be asked if "visibility" should continue.

Always visible

Your phone is always "visible" to other BT devices. These devices can create a connection to your phone and be added to the known device list if necessary.

BT audiostream

When a Bluetooth headset is used, all audio signals are transmitted to this exclusively.

Shown in the display in standby mode

?ٍ₿

Device not visible

₹X

Device visible to others.

Online settings

Default setting and activation of the connection profiles for data transmission. The phone default setting varies from service provider to service provider. Consult your service provider or go to this address on the Internet for more information

www.BenQMobile.com/customercare

Fax/data

Send voice/fax

⊗!

Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

Receive fax

Ø!

The call is signalled by a special ringtone and the type of call is displayed. Now start the communication program in your PC to receive the fax.

Shortcuts





Soft keys

You can assign one function to the right softkey.



Select key.



Call up the edit function.



Scroll to new assignment in the list.



Confirm

Apply

The "Internet" is just used as an example here



Press. The application is started.

Additional information

The service provider may have already assigned functions to all the keys (e.g. access to "SIM services" or direct call-up of the Internet portal). It may not be possible to modify this key assignment.

Navigation keys

The navigation key can be assigned a function for three directions (only effective in standby mode). The downwards movement is assigned to opening contacts and cannot be modified.

Number keys

Number keys 2 to 9 can be used as speed dialling numbers or as fast access to functions. **Number key 1** is reserved for the mailbox phone number.

Assigning numbers or functions



Select the key.



Call up the edit function.



Choose application from the list



Confirm selection

Show functions

Show the functions set for the number keys.

Call settings



Hide ID

8!

If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other phone numbers

Setting up call divert (example)

Unanswered





Select Unanswered. (Includes the conditions Not reachable, No reply, Busy, see page 42.)



Confirm and select Set, then enter the phone number to which the call is to be diverted.



Confirm. The setting is confirmed by the network.

All calls

All calls are diverted.



Symbol in the top line of display in standby mode.

Other possibilities for divert:

Not reachable, No reply, Busy, Receiving fax, Receiving data

Alert calls from

Only calls from phone numbers that are in contacts or in a group are signalled audibly. Other calls are only displayed.

Any key answer

Incoming calls can be accepted by pressing any key (except for).

Minute beep

During the call, you (and only you) will hear a beep after each minute as a reminder of the time elapsed.

Phone settings



Language

Ø.

Set the language for the display text.

Input language

Select the language for text input. Languages supported by T9 are marked with the T9 symbol.

User dictionary

Load and save database for T9 support for the current language.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Auto switch off

The phone switches off each day at the set time.

File system

Format

(Phone-code protected)

The telephone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted.

Format card

All data saved on the RS MultiMediaCard is deleted.

Eject card

Remove the RS MultiMediaCard without loss of data.

Licence mgr.

The licensed data/applications can be displayed and managed (see also DRM, page 12).

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

Device check

Self test and individual tests are offered.

Software version

★ # **0 6** #, then press .

Memory assist.

The memory assistant will help you if there is insufficient phone memory.

Device mgr.

With the device manager you can download and install software/firmware. Services Over Air (S.O.A.) enables you to update the software of your phone.

Master reset

The phone is reset to the default values (factory setting). This does not affect SIM Card and network settings.

In standby mode enter:

*#9999#

Clock



Time/date

The clock must be set to the right time once at start-up.



Start editing and enter date/time.

Time zones

Choice of time zone:

World map



Select the desired time zone.

City list



Select a city in the selected time zone

Time format

Select 24h or 12h.

Date format

Select the display format for the date.

Start of week

Weekday on which the monthly and weekly view on the left starts.

Buddhist year

Ø.

Change over to Buddhist year.

Show clock

Activate/deactivate the time display.

Auto time

8!

Time and time zone are set automatically. The time zone is detected automatically.

Security



→ Security

Auto key lock

The keypad is locked automatically if no key has been pressed for a specific time. However, you can still be called and you can still make an emergency call.

Lock/unlock keypad in standby mode. In each case:



Press and hold

Direct call

Only **one** phone number can be dialled.

Only 🗗

Ø!

Restrict calls to SIM-protected numbers.

This SIM only

8!

Your phone is prevented from being used with a different SIM Card.

Certificates

Display certificates for secure data connections.

PIN codes

For description, see page 15: PIN control, Change PIN, Change PIN2, Chg. phonecode

Barrings



Network barring restricts the use of your SIM Card.

Outgo. access

All outgoing calls except emergency numbers are barred.

Outgoing intl. (outgoing international)

Only national calls can be made.

Out.int.x.home (international outgoing without home country)

No international calls, only calls to the home country.

All incom.calls

The phone is barred for all incoming calls

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring.

Clear all

Clear all network barrings.

Network



Line

There must be **two independent** phone numbers registered.

Network info

The list of GSM networks currently available is displayed.

Choose netwrk

Network search is restarted.

Pref. network

If activated, the next network is dialled in the order of your "preferred networks".

Band selection

<u>8</u>!

Select the GSM band supported by your service provider.

Fast search

Network reconnection is speeded up.

User group

⊗!

Depending on your service provider, you can create groups with this service. These have access, for example, to internal (company) information, or special tariffs apply to them. The details can be clarified with your service provider.

Accessories



Car Kit

Ø.

Only in combination with an original wired handsfree Car Kit. The Car Kit profile is activated automatically when the phone is connected to the Car Kit.

Edit profile

See page 37.

Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Auto switch off

(Factory default: 2 hours)

The phone is powered by the car's power supply. You can adjust the time between switching off the ignition and the time at which the phone switches off automatically.

Automatic settings

- · Permanent illumination: activated.
- · Auto key lock: deactivated.
- · Charging the phone battery.
- Automatic activation of the Car Kit profile when the phone is connected to the Car Kit

Headset

Only in conjunction with an original headset. If an original headset is used the profile is automatically activated when the headset is plugged in.

Edit profile

See page 37.

Auto answer

(Factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Automatic setting

Accept call with Call key or Call acceptance key, even when the auto key lock is activated.

USB

If the phone is connected with the data cable to a PC, the battery can also be charged in this way (only with original accessories).

Organiser



Calendar

You can enter appointments in the calendar. Time and date must be set for the calendar to work correctly. The calendar offers you three views: monthly view, weekly view and daily view. Appointments are shown as a colour bar on the vertical hour division. Conflicting appointments are highlighted in colour.





Scroll between weeks/days/hours.

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Category:



Memo: Text input for description.



Voice reminder: Enter voice memo. Shown with alarm.



Call: Enter phone number to be displayed with the alarm.



Meeting: Text input for description.



Holiday: Enter start and end date



Birthday: Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see All fields/Reduced fields at the end of the list.

Additional information

An alarm sounds even when the phone is switched off. To deactivate it press any key.

Tasks

A task is displayed like an appointment in the agenda for the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The first entries are similar to those for Appointments.

Notes



Write and manage text notes. Protect confidential information using a phone code.

Dictat.machine





→ 1 → Dictat.machine

Use the dictating machine to record short voice memos or for recording calls.

New recording

Record new

Select.



A brief beep sounds when the recording starts. Now dictate the text.





Switch between pause/record.



End recording. Recording is saved with a time stamp. Rename with Options.

Playback (via Media player)



 
Select the desired recording.





Switch between playback/ pause.





Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

Time zones

(see page 43)

Remote synchronisation

You can use this function remotely to synchronise the personal data on your phone (contacts, notes, calendar entries) with a remote server. The external data can, for example, be saved on a company computer. A request to synchronise data can also be received via WAP push (page 33). The user, however, must agree to the start.

Synchronisation

Before synchronisation you must select a profile (Active account) and the sync mode for the database(s). Confidential notes are not transferred.



 
The computer is selected and synchronisation started.

Extras



SIM services (optional) <

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM Card.



For further information, please contact your service provider.

My applications

To help you organise the applications you download from the Internet you can use the My applications folder in My stuff.

For further information, see page 54.

Calculator

The calculator is offered in a basic version and with an advanced range of functions.

The input line is in the middle of the display with two calculation lines above it. Beneath it is the matrix with the calculation functions.



Enter digit(s).



Navigate to functions in the



Accept function.



Enter digit(s).



Apply function. The result is calculated and displayed immediately.

Unit converter

You can convert various measurement units in the decimal system into other measurement units.



Select the source unit/ currency.



Switch to the input field, enter amount, and then switch to the selection field



Select the target measurement, unit or currency. The result is displayed.

You can use both input fields alternately.

Special key functions:



Set the decimal point.



Change the preceding sign.

Currency

When you call up the function for the first time, you must enter currencies into which the conversions are to be made.



 
Enter the name of the currency (e.g. euros).



Open menu and select with Save.

Now enter the names and exchange rates of up to three additional currencies for conversion.

Online status



Sound recorder

Use the sound recorder to record noises and tones for use as ringtones. The sound recorder is usually started from other applications/functions such as assigning a ringtone.

New recording

<New entry> Select





A brief beep sounds when the recording starts.



Switch between pause/record.



The recording is ended and saved with a time stamp (Rename with Options).

Playback (via Media player)



Select the desired recording.





Switch between playback/ pause.





Press and hold for fast forward and rewind.

Stopwatch

The stopwatch can work with lap times and intermediate times.

With Lap timing, each time a time is taken the stopwatch returns to zero.

 
With Split timing, the clock continues to run and the respective intermediate time is stored (max. 99).





Start, stop or continue, depending on the situation.





Countdown

A set time elapses. It is possible to call up or set five timings with different countdown times.

Date calculator

Calculate the period between two specified dates.

My menu

Create your own menu with frequently used functions, phone numbers or Internet pages.

Alarm clock



The alarm sounds at the set time even when the ringtones or the phone are switched off. The alarm clock is activated automatically after a change is made.



Press to end the alarm.





Set the time for the alarm call (hh:mm).





Activate/deactivate the

Setting the days for an alarm

Options Op

Open the menu and select **Set days**.

Switch between the days of the week.



Mark or unmark the days for an alarm.

Save

Save the alarm call time.

Alarm clock Options

Options Open menu.

Alarm on Activate the alarm clock.

Set time Set the alarm call time.

Set days Set the days for an alarm.

Set melody

Clock Set time (page 43).

Auto snooze If user does not react: snooze only or deactivate alarm

(For standard functions see page 14)

Set ringtone.

Additional information



Screen display in standby mode:

alarm clock activated.

Use Snooze or press any number key to set the current alarm to repeat.

Media player

Starting from an application

When you are viewing a picture/ video or listening to a melody, the application starts a media playback.

Direct number for the media player



Press key

or



All the media files on your phone are offered on four tabs:

Music, Playlist, Pictures, Videos



Select tab.



Select file and start playback.

Music/Videos

Play back melodies or videos.



Play or pause, depending on the situation.



Fast foward/rewind while key is pressed.



Load next/previous media file.



/ (Set volume.



Switch to mute.

Switch to full screen mode and back again.



End playback.

Playlist

All playlists (file format: *.m3u) are displayed.



Open menu, select New and then Playlist.

Pictures



Zoom function. Zoom in/out with the (\oplus/\bigcirc) softkeys.



Move enlarged picture detail



Centre picture.

Centre key functions:



Play, play back

Pause Stop

Incoming call

An incoming call pauses the playback and puts the media player into the background. After the call has ended the playback continues automatically.

Playback in the background



Press key repeatedly to switch between foreground and background operation.

My stuff

To organise your files, you can use the file system like a PC file manager. There are separate folders for the various data types in My stuff.





The list of the folders and files is displayed (on two tabs if an RS MultiMediaCard is used).



Select file or folder.





Open folder and select file or link. Depending on the selection, the file with the associated application is opened or the download started.

Download

Melodies, pictures, games and other applications are offered on the Internet. Once downloaded, you can access these via the phone. Most applications include instructions. The appropriate folders contain the download function to download new pictures and sounds, for example.

Remember that pictures and sounds may be protected (DRM, page 12).

Some applications and games are already pre-installed on your phone.

Downloading can, if necessary, take place in two stages:

Description file only



The description file is loaded for information purposes only. The application/game itself must be loaded separately.

or complete download



The application/game is completely loaded.

Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

BenQ Mobile excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again. Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. BenQ Mobile offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your Windows PC using the "Mobile Phone Manager".

You will find this on the supplied CD-ROM or you can download the relevant latest version of the MPM from the Internet at:

www.BenO-Siemens.com/m81

Directory structure

Separate folders have already been created for different data types in My stuff. These folders cannot be changed.

·		
Folder	Description The structure and contents can vary, depending on the service provider	For- mat
Sounds	Sounds, ringtones	mp3 aac aac+ aac++ eaac+ m3u mid amr wav
Pictures	Pictures	bmp bmx jpg jpeg png gif
Videos	Videos	3gp
Themes	Loaded theme (zipped)	sdt
	Theme configuration (unzipped)	stc
Games	Java archive	jar
	Download info	jad
Applica- tions	Applications, such as Photo Editor or Download Assistant	*

Folder	Description The structure and contents can vary, depending on the service provider	For- mat
Miscella-	Text modules	tmo
neous	Internet pages	html wml

Arranging files

After the media player starts the following tabs are displayed:

Songs

All AAC, AAC+, AAC++, eAAC+ and MP3 files are displayed.

Playlists

All playlists (file format: *.m3u) are displayed.

Pictures/Videos

All supported picture and video formats are displayed.

All files stored in the phone or on the RS MultiMediaCard are automatically shown in a list in the tabs. This list can be arranged according to the meta data (ID3 Tags) according to album, artist, genre or title.

RS MultiMediaCard[™]

The RS MultiMediaCard extends the memory capacity of your phone by up to a gigabyte. This permits you to store a large number of pictures, videos or sounds, for example. You can also use the memory card as a removable medium (see page 9).





The list of the folders and files is displayed. The folders and files are treated as in My stuff. If a file is opened whose application is in the phone the file is copied to there.

RS MultiMediaCard[™] is a trademark of the MultiMediaCard Association.

Mobile Phone Manager



MPM (Mobile Phone Manager) enables you to use extended phone functions from your PC. The phone and PC communicate via a

data cable or Bluetooth. MPM offers you a wide range of functions.

You can manage your address data and contacts and synchronise them with other BenQ-Siemens phones, dial on a mouse click and manage phone conferences. Creating, reading, saving and sending SMS messages is also supported.

MPM makes managing your music and sound files, playlists, ringtones and videos effortless. With a mouse click you can transfer the entire contents of a music CD to your phone in the form of space-saving AAC or MP3 files, maintaining first class quality.

With MPM you can easily and conveniently edit your photos, pictures and wallpaper logos and add a wide variety of effects.

Mobile Modem Assistant enables you to use your phone conveniently and easily as a modem both at home and when travelling. You can easily compile your WAP favourites and copy them to your phone.

Naturally the data and settings on your phone can also be backed up on your PC with MPM. With Phone Explorer you can access the files in your phone as if it was simply another folder in your PC.

If you wish, the software can also automatically take over such routine tasks as synchronising your contacts, downloading the latest photos you have taken, or updating your music files.

MPM, a detailed user guide and online help are contained on the CD enclosed with this phone. You can download future versions of the software from the Internet at:

www.BenQ-Siemens.com/m81

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

www.BenQMobile.com/customercare

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then □) and if available, your Service customer number.

Qualified employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 81 02 22 66 24
Australia	
Austria	05 17 05 17
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
•	

Bolivia 0 21 21 41 14 Bosnia Herzegovina 0 33 27 66 49 Brunei 02 43 08 01 Bulgaria 02 73 94 88 Cambodia 12 80 05 00 Canada 188 87 77 02 11 Chile 8 00 53 06 62 China 40 08 88 56 56 Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 Germany 0 18 05 33 32 26 Gerece 80 11 11 11 11 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 52 03 000 India 22 24 98 70 00 Extr. 70 40 India 22 24 98 70 00 Extr. 70 40 Indonesia 02 1 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90
Brunei 02 43 08 01 Bulgaria 02 73 94 88 Cambodia 12 80 05 00 Canada 188 87 77 02 11 Chile 8 00 53 06 62 China 40 08 88 56 56 Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 018 05 33 32 26 Greece 80 11 11 11 11 6 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 52 03 00 India 22 24 98 70 00 Extr. 70 40 Indionesia 02 1 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 79 03 6 Ivory Coast 05 02 02 59 Jordan 06 43 98 64 2 Kenya 272 37 17 <tr< td=""></tr<>
Bulgaria 02 73 94 88 Cambodia 12 80 05 00 Canada 18 8777 02 11 Chile 80053 06 62 China 40 08 88 56 56 Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 Germany 0 18 05 33 32 26 Gerece 80 11 11 11 11 Hong Kong 28 61 11 18 Hungary 06 1471 24 44 Iceland 5 20 30 00 India 22 249 870 00 Extr. 70 40 Indonesia 02 14 68 26 081 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 4178
Cambodia 12800500 Canada 1887770211 Chile 800530662 China 400885656 Colombia 018007006624 Croatia 016105381 Czech Republic 233032727 Denmark 35256529 Dubai 043966433 Ecuador 1800101000 Egypt 02334111 Estonia 56645400 Finland 0922943700 Germany 01805333226 Gerece 80111111116 Hong Kong 28611118 Hungary 0614712444 Iceland 5203000 India 222498700 Extr. 7040 Indonesia 02146826081 Ireland 185077277 Italy 0245279036 Ivory Coast 05020259 Jordan 06439864 Kenya 2723717 Kuwait 2454178 Latvia 7501118 Lebanon 014304304 Lithuaia 8
Canada 1 88 87 77 02 11 Chile 8 00 53 06 62 China 40 08 88 56 56 Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 0 18 05 33 32 26 Greece 80 1111 11 Hong Kong 28 61 11 18 Hungary 06 1471 24 44 Iceland 5 20 30 00 India 22 24 98 70 00 Extr. 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 272 37 17 Kuwait 24 54 178 Lebanon 01 14 30 43
Chile 8 00 53 06 62 China 40 08 88 56 56 Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 0 18 05 33 32 26 Greece 80 11 11 11 16 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 52 03 00 0 India 22 249 870 00 Extr. 70 40 India 22 249 870 00 Extr. 70 40 Indonesia 021 46 82 60 81 Ivery Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 4178 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00
China 40 08 88 56 56 Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 0 18 05 33 32 26 Greece 80 11 11 11 11 16 Hong Kong 28 61 11 18 Hungary 06 1471 24 44 Iceland 5 20 30 00 India 22 249 87 00 0 Extr. 70 40 India 22 249 87 00 0 Extr. 70 40 Incland 18 50 77 72 77 Italy 0.24 52 790 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 44 54 178 Latvia 7 50 11 18 Lebanon 01 44 30 43 Lithuania 8 70 07 70
Colombia 01 80 07 00 66 24 Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 0 180 53 33 22 6 Greece 80 11 11 11 11 6 Hong Kong 28 61 11 18 Hungary 06 147 124 44 Iceland 5 20 30 00 India 22 24 98 70 00 Extra: 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 5077 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Lithuania 8 700 07 07 00 Luxembourg 40 66 61 56 40
Croatia 0 16 10 53 81 Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 0 18 05 33 32 26 Greece 80 1111 11 11 6 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 52 03 00 India 22 24 98 70 00 Extr. 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 0 24 52 79 03 6 Ivory Coast 0 5 02 02 59 Jordan 0 64 39 86 42 Kenya 272 37 17 Kuwait 24 54 178 Latvia 7 50 11 18 Lebanon 01 14 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40
Czech Republic 2 33 03 27 27 Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 0 18 05 33 32 26 Greece 80 11 11 11 11 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 520 30 00 India 22 249 87 00 Extr. 70 40 Indonesia 02 14 68 260 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 06 43 98 64 Kenya 27 237 17 Kuwait 24 54 178 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 07 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48
Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 0.1 56 38 42 00 Germany 0.1 80 53 33 22 66 Gecce 80 11 11 11 11 16 Hong Kong 28 61 11 18 Hungary 0.6 1471 24 44 Iceland 520 30 00 India 22 24 98 700 Extr. 70 40 India 0.2 14 68 26 08 Ireland 18 50 77 72 77 Italy 0.2 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0.6 43 98 64 Kenya 2.72 37 17 Kuwait 2.45 4178 Latvia 7.50 11 18 Lebanon 0.14 30 43 Lithuania 8.70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 60 37 71 24 30 Malta + 35 21 49 40 632
Denmark 35 25 65 29 Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 0.1 56 38 42 00 Germany 0.1 80 53 33 22 66 Gecce 80 11 11 11 11 16 Hong Kong 28 61 11 18 Hungary 0.6 1471 24 44 Iceland 520 30 00 India 22 24 98 700 Extr. 70 40 India 0.2 14 68 26 08 Ireland 18 50 77 72 77 Italy 0.2 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0.6 43 98 64 Kenya 2.72 37 17 Kuwait 2.45 4178 Latvia 7.50 11 18 Lebanon 0.14 30 43 Lithuania 8.70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 60 37 71 24 30 Malta + 35 21 49 40 632
Dubai 0 43 96 64 33 Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 01 80 53 33 22 66 Greece 80 11 11 11 16 Hong Kong 28 61 11 18 Hungary 06 1471 24 44 Leland 52 03 00 00 India 22 24 98 70 00 Extr. 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 5077 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 06 43 98 64 42 Kenya 272 37 17 Kuwait 24 54 178 Lebanon 01 14 30 43 Libuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 211 62 13
Ecuador 18 00 10 10 00 Egypt 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 01 80 53 33 22 66 Greece 80 11 11 11 11 6 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 52 03 00 India 22 24 98 70 00 Extr. 70 40 Indonesia 02 1 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 06 43 98 64 2 Kenya 272 37 17 Kuwait 24 54 178 Latvia 7 50 11 18 Lebanon 01 44 30 43 Lithuania 8 70 07 07 00 Lithuania 8 70 07 07 07 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 21 49 40 63 22
Egypt. 0 23 33 41 11 Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany. 0 18 05 33 32 26 Greece 80 11 11 11 11 6 Hong Kong. 28 61 11 18 Hungary. 06 14 71 24 44 Iceland. 5 20 30 00 India. 22 24 98 70 00 Extr. 70 40 Indonesia. 02 14 68 26 081 Ireland. 18 50 77 72 77 Italy. 02 45 27 90 36 Ivory Coast. 05 02 02 59 Jordan. 0 64 39 86 42 Kenya. 2 72 37 17 Kuwait. 2 45 4178 Latvia. 7 50 11 18 Lebanon. 01 44 30 43 Libya. 02 13 50 28 82 Lithuania. 8 70 07 07 00 Luxembourg. 40 66 61 56 40 Macedonia. 0 23 13 18 48 Malaysia. + 6 03 77 12 43 04 Malta. + 35 32 14 94 06 32 Mauritius. 2 11 62 13
Estonia 56 64 54 00 Finland 09 22 94 37 00 France 01 56 38 42 00 Germany 01 80 53 32 26 Greece 80 11 11 11 11 16 Hong Kong 28 61 11 18 Hungary 06 147 12 44 Iceland 5 20 30 00 India 22 24 98 70 00 Extn: 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 5077 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Lithuania 8 700 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 60 37 71 24 30 4 Maltia + 35 32 149 40 63 2 Lithua 21 16 21 3
Finland .09 22 94 37 00 France .01 56 38 42 00 Germany .01 80 53 33 22 66 Greece .80 11 11 11 16 Hong Kong .28 61 11 18 Hungary .06 1471 24 44 Iceland .5 20 30 00 India .22 24 98 70 00 Extr. 70 40 Indonesia .0 21 46 82 60 81 Ireland .18 5077 727 Italy .02 45 27 90 36 Ivory Coast .05 02 02 59 Jordan .06 43 98 64 22 Kenya .272 37 17 Kuwait .24 54 17 78 Latvia .7 50 11 18 Lebanon .01 44 30 43 Libuania .8 70 07 07 00 Luxembourg .40 66 61 56 40 Macedonia .0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta .43 24 40 63 22 Mauritius .211 62 13
France 01 56 38 42 00 Germany 01 80 53 33 22 6 Greece 80 11 11 11 11 6 Greece 80 11 11 11 11 6 Hong Kong 28 61 11 18 Hungary 06 14 71 24 44 Iceland 52 03 00 00 India 22 24 98 70 00 Extr. 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 24 54 178 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Germany 0 18 05 33 32 26 Greece 80 11 11 11 11 11 Hong Kong 28 61 11 18 Hungary 06 1471 24 44 Iceland 5 20 30 00 India 22 24 98 70 00 Extr. 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 4178 Latvia 7 50 1118 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Greece 80 11 11 11 11 16 Hong Kong 28 61 11 18 Hungary .06 14 71 24 44 Iceland 5 20 30 00 India .22 24 98 70 00 Extn: 70 40 Indonesia .0 21 46 82 60 81 Ireland .18 50 77 72 77 Italy .02 45 27 90 36 Ivory Coast .05 02 02 59 Jordan .0 64 39 86 42 Kenya .27 23 71 7 Kuwait .2 45 41 78 Latvia .7 50 11 18 Lebanon .01 44 30 43 Libya .02 13 50 28 82 Lithuania .8 70 07 07 00 Luxembourg .40 66 61 56 40 Macedonia .0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius .211 62 13
Hong Kong 28 61 11 18 Hungary 06 1471 24 44 Iceland 5 20 30 00 India 22 24 98 70 00 Extr: 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 24 54 17 78 Latvia 7 50 11 18 Lebanon 01 14 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 71 24 30 4 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Hungary .06 14 71 24 44 Iceland 5 20 30 00 India .22 24 98 70 00 Extr. 70 40 Indonesia .02 1 46 82 60 81 Ireland .18 50 77 72 77 Italy .02 45 27 90 36 Ivory Coast .05 02 02 59 Jordan .06 43 9 86 42 Kenya .2 72 37 17 Kuwait .2 45 41 78 Latvia .7 50 11 18 Lebanon .01 44 30 43 Libya .02 13 50 28 82 Lithuania .8 70 07 07 00 Luxembourg .40 66 61 56 40 Macedonia .0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius .211 62 13
Iceland 5 20 30 00 India 22 249 870 00 Extn: 70 40 Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
India 22 24 98 70 00 Extn: 70 40 Indonesia 0.21 46 82 60 81 Ireland 18 50 77 72 77 Italy 0.24 52 79 036 Ivory Coast 0.5 02 02 59 Jordan 0.64 39 86 42 Kenya 2.7 23 71 7 Kuwait 2.45 41 78 Latvia 7.50 11 18 Lebanon 0.14 43 04 34 Libya 0.2 13 50 28 82 Lithuania 8.7 00 70 70 70 Luxembourg 40 66 61 56 40 Macedonia 0.23 13 18 48 Malaysia + 60 37 71 24 30 4 Malta + 35 32 14 94 06 32 Mauritius 2.11 62 13
Indonesia 0 21 46 82 60 81 Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 22 14 94 06 32 Mauritius 2 11 62 13
Ireland 18 50 77 72 77 Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 06 43 9 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Italy 02 45 27 90 36 Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 60 377 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Ivory Coast 05 02 02 59 Jordan 0 64 39 86 42 Kenya 2.72 37 17 Kuwait 2.45 41 78 Latvia 7.50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8.70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 60 37 71 24 30 4 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Jordan 0 64 39 86 42 Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 60 37 71 24 30 4 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Kenya 2 72 37 17 Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Kuwait 2 45 41 78 Latvia 7 50 11 18 Lebanon 01 43 0 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Latvia
Lebanon 01 44 30 43 Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Libya 02 13 50 28 82 Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Lithuania 8 70 07 07 00 Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Luxembourg 40 66 61 56 40 Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Macedonia 0 23 13 18 48 Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Malaysia + 6 03 77 12 43 04 Malta + 35 32 14 94 06 32 Mauritius 2 11 62 13
Malta
Mauritius
Mauritius
Mexico01 80 07 11 00 03
Morocco
Netherlands
New Zealand 08 00 27 43 63

Nigeria	
Norway	22 57 77 46
Oman	
Pakistan	02 15 66 22 00
Paraguay	
Peru	0 80 05 24 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	
Romania	02 12 09 99 66
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	
Slovenia	
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Śweden	08 57 92 90 49
Switzerland	08 48 84 08 45
Taiwan	02 23 96 10 06
Thailand	0 29 53 50 00
Tunisia	71 86 19 02
Turkey	0 21 64 59 98 98
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
Uruguay	00 04 05 46 62
USA	1 88 87 77 02 11
Venezuela	0 80 01 00 56 66
Vietnam	84 89 20 24 64
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. on a vehicle's dashboard in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone.
 Rough handling can damage internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone.

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of you mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only original batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

Hereby, BenQ Mobile, declares that this M81 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The relevant declaration of conformity (DoC) has been signed. Please call the company hotline if you require a copy of the original or visit: www.BenQMobile.com/conformity

(€ 0168

Technical data

GSM class: 4 (2 watt)
Frequency range: 880–960 MHz

GSM class: 1 (1 watt)

Frequency range: 1,710–1,880 MHz

GSM class: 1 (1 watt)

Frequency range: 1,850-1,990 MHz

Weight: 96 g

Size: 105.3 × 47.5 × 18.4 mm

(84 ccm)

Li-Ion battery: 820 mAh

Operating

temperature: -10 °C to 55 °C

SIM Card: 1.8 V and 3.0 V

RS MultiMediaCard: max. 1 GB

Phone ID

You will need the following information if you lose your phone or SIM Card:

the number of the SIM Card (on the card):

15-digit serial number of the phone (under the battery):

the customer service number of the service provider:

Lost phone

If you lose your phone or SIM Card, contact your service provider immediately to prevent misuse.

Operating time

Talktime: up to 300 minutes Standby time: up to 300 hours

The operating time depends upon the respective network conditions and conditions of use. Extreme temperatures considerably reduce the standby time. You should therefore avoid the leaving the phone exposed to the sun or on a radiator.

The following applications reduce the stand-by time and can be deactivated if required:

- CB services (page 34)
- Screensaver (page 38)
- Illumination (page 38)
- Bluetooth (page 39)

 Front and the form 45
- Fast search (page 45)
- EGPRS (page 39)
- Flash (page 26), torch (page 6)

SAR

European Union (RTTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0.94** W/kg¹. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **1.5** cm is required.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (www.who.int/emf) or BenQ Mobile (www.BenOMobile.com).

Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, BenQ Mobile shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including, but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to BenQ Mobile shall vest in BenQ Mobile.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by BenQ Mobile UK Ltd., 1 Arlington Square, Downshire Way, Bracknell, Berkshire, RG12 1WA, U.K.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, BenQ Mobile reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet www.BenQMobile.com/customercare or the telephone service. The relevant number is to be found in the accompanying user guide.

Guarantee certificate (IRL)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, BenQ Mobile shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including, but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals
- In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by BenQ Mobile.
 - authorised by BenQ Mobile.Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by BenQ Mobile
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to BenQ Mobile shall vest in BenQ Mobile.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by BenQ Mobile UK, Branch Ireland, 1st Floor, Riverview House, 21–23 City Quay, Dublin– The Republic of Ireland.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, BenQ Mobile reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact our online support on the Internet www.BenQMobile.com/customercare or the telephone service. The relevant number is to be found in the accompanying user guide.

Licence Agreement

This License Agreement ("Agreement") is between You and BenQ Mobile GmbH & Co. OHG ("BenQ"). The Agreement authorizes You to use the Licensed Software, specified in Clause I below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from BenQ Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if BenQ or any licensor of BenQ ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, BenQ and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software

1. LICENSED SOFTWARE. As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related BenQ or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Soft-

- ware, if any, distributed over the air, downloaded from BenQ Web pages or servers or from other sources.
- COPYRIGHT. The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by BenQ, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of BenO, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software
- 3. LICENCE AND USE. BenQ grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.
- LIMITATIONS ON LICENCE. You may not copy, distribute, or make derivative works of the Licensed Software except as follows:
- (a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

- (b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.
- (c) You may not sublicense, rent or lease the Licensed Software.
- (d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate licence terms. Such terms are set out within the documentation.

- 5. MISUSE OF THE LICENSED SOFT-WARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY BENQ, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.
- 6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this licence at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by BenQ. Your licence rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agree-

- ment. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.
- YOU ACKNOWLEDGE THE LI-CENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER BENO NOR ANY OF ITS LICENSORS MAKE ANY REPRE-SENTATIONS OR WARRANTIES, EX-PRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT IN-FRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR OTH-ER RIGHTS. THERE IS NO WARRANTY BY BENQ OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFT-WARE WILL MEET YOUR REQUIRE-MENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND BENQ AND ITS LICENSORS HERE-BY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF, NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A BENQ REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.
- NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of BenQ other than as specifically set forth herein.
- 9. LIMITATION OF LIABILITY. IN NO EVENT SHALL BENQ, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE

LIABLE FOR ANY DIRECT DAMAGES. LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTI-TUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCI-DENTAL, EXEMPLARY, ECONOMIC, PU-NITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CON-TRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF BENQ IS ADVISED OF THE POSSIBILI-TY OF SUCH DAMAGES. THE LIMITA-TION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT BENQ'S LIABIL-ITY IS MANDATORY UNDER THE AP-PLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCON-DUCT, PERSONAL INIURY OR DEATH.

10. TECHNICAL SUPPORT. BenQ and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and BenQ or the applicable Licensor.

BenQ and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. EXPORT CONTROL. The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable

import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

12. APPLICABLE LAW AND FORUM. The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

MISCELLANEOUS. This Agreement represents the entire agreement between You and BenQ relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this Licence. Notwithstanding the foregoing, some products of BenQ may require You to agree to additional terms through an on-line "click-wrap" licence, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorised representative of each party. This Agreement shall be

binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, BenQ and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

Index

A		Charges	
Accessories (settings)	45	Charges/units	
Alarm clock		Charging the battery	
All calls (diversion)	42	Clock	
All incoming (network barrings)		Codes	
Any key to answer		Conference	
Appointments		Connection profiles	4
Auto key lock		Connectivity	3
Auto last number redial		Contacts	
Autom. display, clock		Converter	
_		Countdown	
В		Credit limit	
Band selection	45	Currency converter	
Battery		Customer care	5
Charging	10	D	
Inserting		_	
Operating times	10	Date format	
Quality declaration	60	Deactivating autom. phone	
Big letters	38	Device manager	
Bluetooth® (BT)	39	Dialling code	
Bookmarks (WAP)	35	Dialling with number keys	
Browser	36	Dictating machine	
Buddhist year	44	Digital Rights Management	1
C		Display	
_		Illumination	
Calculator		Symbols	
Calendar	47	Wallpaper	3
Call		Divert	4
Accepting/ending		DTMF tones (tone sequences)	
Blocked		Duration/charges	2
Conference		E	
Diverting		EGPRS	21
Putting on hold		E-mail	
Rejecting		Receiving/reading	
Toggling (swapping)			
Call divert		Writing	3.
Call screening		Emergency number Extras	
Call settings		EXITAS	4
Call waiting		F	
Calling	19	Factory settings	4
Calls received (call record)		Fast access	
Camera		Frequency range	
Car Kit		1 , 0	
Care of phone		G	
CB services		Guarantee certificate	6
Certificates	44		

Н		O	
Handsfree talking	20	Only 🗗	44
Headset	46	Operating times (battery)	
Hide ID	41	Organiser	
Hotline	58	p	
I		PC connection	16
Identity number (IMEI)	43	Phone code	15
IMEI number		Phone data	61
Inbox	29, 33	Phone ID (IMEI)	43
Inst. messaging (IMSG)	31	Phone number transmission	41
International dialling code	19	Phone settings	42
Internet		Photo	
К		PictBridge	14
==		PIN	
Key tones	42	Changing	15
L		Entering	11
	42	Use	15
Language, display text/text input Last number redial		PIN2	15
		Preferred network	
Licence Agreement		Preventing accidental activation	16
Limit (duration/charges)		Product data	
Logo		Profiles	
Loss of phone, SIM Card	61	Provider logo	
M		PUK, PUK2	
Mailbox	34	Putting a call on hold	20
Maintenance of phone		· ·	
Media player		R	
Messages		Receiving signal	12
Microphone on/off		Record video	
Minute beep	42	Records	
Missed calls (call record)	24	Reminder	
MMS/SMS		Ringtones	37
Mobile Phone Manager		S	
MultiMediaCard		-	40
Music playback		S.O.A	
My menu		Safety precautions	
My stuff		Screensaver	
•		Second phone number	
N		Security	
Network		Service tones	
Barring	44	Services Over Air (S.O.A.)	
Connection	45	Setting time/date	
Settings		Settings	
Notes		Short message (SMS)	
Numbers dialled (call record)		Shortcuts	
		Shown in the display	7

Shut down animation38
Silent alert38
SIM Card
Clearing barrings16
Inserting8
SIM services (optional)49
SMS/MMS
SOS11
Sound recorder50, 51
Special characters17
Standard functions 14
Standby mode12
Standby time61
Start up animation38
Stopwatch51
Switching off the phone, manual11
Switching on (phone)11
Symbols
Synchronisation48
T
T9 text input17
Take a picture25
Tasks
Technical data61
Text input17
Text module 18
Themes
This SIM only44
Time zones11, 43, 48
Toggling
Tone sequence (DTMF)20

U	
Unanswered calls	41
Upper and lowercase letters (T9)	17
User group	
V	
Vibration	38
Video playback	53
Video recording	
Voice mailbox	34
Volume	
Earpiece volume	19
Profiles	37
Ringtone	37
W	
Wallpaper (display)	38
WAP	
WAP push	
Welcome text	