

SIEMENS

SIEMENS

Issued by
BenQ Mobile GmbH & Co. OHG
Haidenauplatz 1
D-81667 Munich

© BenQ Mobile GmbH & Co. OHG 2005
All rights reserved. Subject to availability.
Rights of modification reserved.
Manufactured by BenQ Mobile GmbH & Co. OHG
under trademark license of Siemens AG

www.siemens.com/me75



Designed for life

ME75

Safety precautions	2	MMS	32
Display symbols	4	Email	36
Overview of phone	5	Voice message/CB	38
Getting started	7	Surf & fun	39
Switching on/off/ entering PIN	10	Setup	42
General instructions	11	Fast access key	52
Standard functions	13	Organizer	53
Security	14	Extras	55
Text entry	16	My stuff	58
Calling	18	Customer Care	59
Default book	20	Care and maintenance	61
Addressbook	21	Product data	62
Phonebook	23	SAR	64
Call records	25	Limited Manufacturer's Guarantee	65
Camera	26	Sınırlı Üretici Garantisi	66
Message list	28	License Agreement	67
SMS	29	Index	70

This is a summarised version of the Operating Manual. The complete version can be found in the Internet at this address:
www.siemens.com/me75

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



Do not place the phone near to electromagnetic data carriers such as credit cards and floppy disks. Information stored on them could be lost.



Do not look at the LED (e.g. activated infrared port, flash LED) with optical magnifiers because of radiation. This product complies with IEC/EN 60825-1 "Safety of Laser Products" for LED Class 1M products; such products are safe under reasonably foreseeable operating conditions.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



Ringtones (page 44), info tones (page 46) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the handsfree function (page 18). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

This mobile phone offers various functions and can therefore be used in various positions other than being held to the ear, e.g. elsewhere on the body. In this case, a minimum distance of **1.5 cm** must be kept between your body and phone to enable data transfer (GPRS).

Improper use will invalidate the guarantee!
These safety instructions also apply to Siemens original accessories.

Display symbols

Display symbols (selection)



Signal strength



Battery charge level, e.g. 50%



Phonebook/Addressbook



Call records



Surf & fun/Service supplier portal



Organizer



Messages



Camera



Extras



My stuff



Setup



All calls are diverted



Ringing tone off



Short ring (beep) only



Ringtone only if the caller is stored in the Phonebook



Alarm set



Keypad locked



Auto answer feature on



Activated and available



Browser connecting



Infrared transmission

Events (selection)



SIM card memory full



MMS memory full



Phone memory full



No network access



Missed call



Delete assistant

Message symbols (selection)



Unread



Read



Sent



MMS received



MMS with DRM contents (page 11)



E-mail forwarded



E-mail with attachment



Voice mail received

Overview of phone

① Joystick

- Press the joystick down vertically to start an application or function (page 12).

In standby mode

- Open main menu.
- Open user profiles.
- Open Phonebook/Addressbook.
- Open **Inbox**.
- Start the camera.

In lists, messages and menus

- Scroll up and down.
- Back one level.

During a call

- Set volume.
- Call options.

② Call key

Dial phone number/name displayed/highlighted, take calls. Show last phone numbers dialled in standby mode.

③ On/Off/End key

- Switched off: Press and **hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: Press **briefly** to go back a level. Press and **hold** to go back to standby mode.
- In standby mode: Press and **hold** to switch off phone.



① Integrated antenna


Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② Loudspeaker

③ Display

④ Infrared interface

⑤ Softkeys

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g. ).

⑥ Key lock

Press and **hold** in standby mode:
Switch key lock on/off.

⑦ Ringtone

- Press and **hold** in standby mode:
Switch all audible signals on/off (except alarm).
- Press and **hold** on incoming call:
Switch off ringtone for this call only.

⑧ Connection socket

For charger, headset, flash, etc.

⑨ Car kit holder

⑩ Connection for external antenna

⑪ Camera lens



Getting started

Inserting the SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

 
Additional information

Please switch off your phone before removing the battery!


1.8- and 3-V SIM cards are supported.

Please contact your service provider if you have an older SIM card.


- Place the SIM card in front of the slot with the contact surface facing **downwards**. Then push the SIM card in using gentle pressure ① (ensure that the chamfered corner is in the correct position).

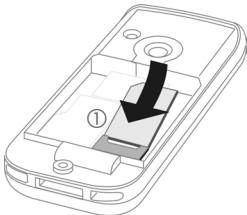

 
- Insert the battery sideways into the phone ②, then press downward ③, until it engages (to remove, press the retaining tab on the side of the battery, then lift the battery out).

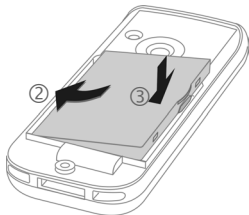

 - Push the cover forwards until the two lugs engage in the openings ④, then push it down until it clicks into place ⑤.

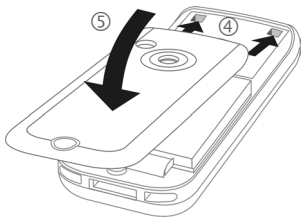

 
- Insert the locking screw ⑥ and turn it ninety degrees to lock ⑦.

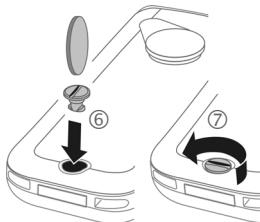


- To remove the cover, undo the locking screw by turning it back ninety degrees, then use the opening lip to pull off the cover.

Dust and splash-proof seals

 - Position the cover ① correctly in the connection socket.
- The camera lens and antenna socket are protected by the lens cap ②.

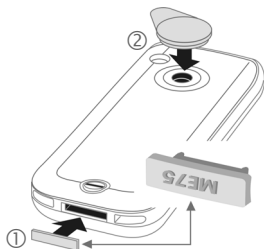

Charging the battery

 

The battery is not fully charged when delivered. Plug the charger cable into the bot-

tom of the phone, plug the power supply unit into a mains power socket and charge for at least **three hours**.

As an alternative, the battery can be charged via the USB port (see Accessories: USB data cable).



Display during charging.

Charging time

An empty battery is fully charged after approx. 3 hours. Charging is only possible within a temperature range of +5 °C to +45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the respective conditions of use. Extreme temperatures reduce the phone's standby time. Do not leave the phone in direct sunlight or on a radiator.

Talktime: 3 to 8 hours

Standby time: 270 to 450 hours

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply included in delivery!

Display while in service

Charge level display during operation (empty–full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switching on/off/entering PIN

Switching phone on and off



Press and **hold** the On/Off/End key.

Enter PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correction with **⌫**.



Confirm. Logging on to the network will take a few seconds.

Additional information

Change PIN.....page 14
Clear SIM card barringpage 15

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the softkey **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

During commissioning, set the clock so that it displays the correct time. You will not have to make this setting again.



Press this key, then select **Change**.



First enter the date (day/month/year), then the time (24 hours, including seconds).



Press this key. The time and date are updated.

Time zones



Set the time zone you are in.



Select the city in the desired time zone.

Options

Use **Set time zone** to save.

Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, **do not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (page 24).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



By pressing and **holding**, you can return to standby mode from any situation.

Signal strength



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that your telephone has digital rights management. The use of downloaded pictures, tones or applications can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc.

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

Big letters

Selection between two font sizes.

Illumination

Set display light brighter/darker.

Search

List output of the menu. Entering letters will access a function directly.





User guide

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e. g. to display call list for missed calls in condensed form:







This comprises the following steps:

-  Open main menu.
-  Select , then select function **Missed calls**.
-  Press to confirm.

Menu speed dialling

All menus are numbered so that a function (such as writing a new SMS) can be selected directly from standby mode by entering a number:

-  Press this key to display the main menu.
-  Press this key for **Messages**.
-  Press this key for **Write message**.
-  Press this key for **SMS**.

Symbols

The following symbols are used to explain operation:



Enter numbers/letters



On/Off/End key



Call key



Softkeys



Displays a soft-key function.



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the direction indicated.



Function dependent on service provider, special registration may be required.



Press joystick

The symbol in the centre of the lower line of the display shows the current function when the joystick is pressed down vertically, e.g.:



Display menu



Take photos



Zoom



Call, accept call




OK

Standard functions

Option menus



List of functions repeatedly appearing in options menus.

Options	Open menu.
Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send...	Select transmission service and medium for sending.
Reply/ Reply to all	The sender becomes the recipient, "Re" is placed in front of the subject matter and the received text is transferred into the new message.
Save	Store entry.
Save to 	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical, type, time).
Text input (page 16)	T9 preferred: Activate/deactivate T9 input. Input language: Select language for text.

Rename	Rename selected entry.
Capacity	Display memory capacity
Attributes	Display properties of the highlighted object
Help	Display help text.

Highlighting mode

Highlight one or more entries in order to perform a function on it/them.

Options	Open menu.
Mark	Activate mode.
	Select entry/entries.
	Highlight or delete highlighting.
Mark	Highlight a non-highlighted entry.
Unmark	Remove the highlighting from a highlighted entry.

Additional highlighting functions:

Options	Open menu.
Mark all	Highlight all entries.
Unmark all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN codes

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.



→ Security → PIN codes
→ Select function.

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Change

Press this key.



Enter PIN.



Confirm input.

Change PIN

You can change the PIN to any 4 to 8-digit number you find easier to remember.

Select

Press this key.



Enter **current** PIN.



Confirm input.



Enter **new** PIN.



Re-enter **new** PIN.



→  → Security → PIN codes
→ Select function.

Change PIN2

(Display only if PIN2 is available)

Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4–8 digits) when you call up a phone-code protected function for the first time (e.g. **Direct call**, page 49). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this occurs, contact the Siemens Service (page 59).

Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (page 14) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press and **hold**.

OK

Press this key. The phone switches on.

Cancel

Press this key or take no action. The phone does not switch on.

Connecting to PCs

You can connect the phone to a PC via infrared or a data cable (accessories). With the MPM program (Mobile Phone Manager) you can save data from the phone onto your PC. Copying your addressbook entries from Outlook®, Lotus Notes™ and other Siemens phones (including Gigaset) is also supported. You can download Mobile Phone Manager from the following website:

www.siemens.com/me75

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears.

Example:



Press once **briefly** to type the letter **a**, twice to type **b** etc. Press and **hold** to write the number.



Press **briefly** to delete the letter before the cursor, press and **hold** to erase the whole word.



Move the cursor.



Press **briefly**: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **123**.

Press and **hold**: All input-variants are displayed.



Press **briefly**: Special characters are shown.

Press and **hold**: Open input menu.



Press **once/repeatedly**:

., ? ! ' ' " 0 + - () @ / : _

Press and **hold**: Writes 0.



Writes blank.

Press **twice** = line break.

Special characters



Press **briefly**.

1)	¿	¡	_	;	.	,	?	!
+	-	"	'	:	*	/	()
¤	¥	\$	£	€	@	\	&	#
[]	{	}	%	~	<	=	>
	^	`	§	Γ	Δ	Θ	Λ	≡
Π	Σ	Φ	Ψ	Ω				

1) Line break



Navigate to characters.



Press.

Text entry menu



Press **down**:

Text format (SMS only), Input language, Mark, Copy/Insert

Text input with T9

"T9" combines the correct value from the various key inputs.



Activate, deactivate T9.

Select input language



Open text menu.

Input language, then select language.





Confirm.

Write with T9

it is best if you finish a word without looking at the display.


You simply press the keys where the relevant letter is located **once only**.


 /  A blank space or moving to the right ends the word.

Do not use special characters such as Ä. Instead use the standard characters such as A and T9 will do the rest for you.

T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.

 Press this key. If this word is also incorrect, press the key again.


 Press this key until the correct word is displayed.

Add a new word to the dictionary:

Spell Select and enter word without T9. Then **Save**.

Correct a word

Words written **with** T9:

 Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word!

Additional information



Press **briefly**: Switch between: **abc, Abc, T9abc, T9Abc, 123**.

Press and **hold**: All input modes are displayed.



Press and **hold**: Open input menu (page 16).

T9®Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573;
 Australian Pat. Nos. 727539, 746674, and 747901;
 Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904;
 Japan Pat. No. 3532780, 3492981;
 United Kingdom Pat. No. 2238414B;
 Hong Kong Standard Pat. No. HK1010924;
 Republic of Singapore Pat. No. 51383, 66959, and 71979;
 European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2);
 Republic of Korea Pat. Nos. KR201211B1 and KR226206B1.
 People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0;
 Mexico Pat. No. 208141;
 Russian Federation Pat. No. 2206118;
 and additional patents are pending worldwide.

Calling



Enter the number (always with prefix/international dialling code).

◀ A **short** press clears the last digit, a **long** press clears the entire phone number.



Dial phone number.

End call



Press the End key **briefly**.

Set volume



Press upwards/downwards in order to regulate the volume.

Redial previous numbers



Twice press. To redial the phone number **last** called:

Call up the redial list:



Once press.



Pick out a phone number, then to select it ...



... press this key.

Auto redial

Auto dial

The phone number is dialled ten times at increasing time intervals.

Reminder

Prompt

A beep reminds you to redial the displayed phone number after 15 minutes.

Accept call



Press.

Reject call



Press **briefly**.

Additional information

Accept the call before bringing the telephone to your ear in order to avoid ear damage caused by the ringing tones.



Store phone number in the addressbook/phonebook.

Handsfr.

Playback via loudspeaker (hands-free calling).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you might damage your hearing!



Press and **hold** to switch microphone off.

International dialling codes



Press and **hold** until a "+" is displayed.

Country

Select country.

Call options

Options Functions which are only available **during** the call are offered.

Swapping between 2 calls





Establish a second connection

- Options** Open the menu
- Hold** Hold current call, then dial the new phone number.
- Options** Open menu.
- Swap** Swapping between calls.

Incoming calls during a call

You will hear a "knocking tone" and you can now:

- **Accept the waiting call in addition to the first**
Swap Accept the call and put the current call on hold.
- **Reject the waiting call**
Reject Reject the call, or via **Divert** divert it to the mailbox.
- **Accept the waiting call and end the current call**
 End call.
 Accept new call.

End call(s)




- Yes** Take call on hold.
- No** End all calls.

Conference



You call 5 up to conference participants one after the other. Once you have established a connection:

- Options** Open menu and select **Hold**. The current call is put on hold.
-  Now dial a new number. When the new connection is established ...
- Options** ... open menu and select **Conference**. Repeat until all participants are connected.

End



When the End key is pressed, **all** calls in the multiparty conversation are ended.

Tone sequences (DTMF)

Enter tone sequences (numbers) for remote inquiries to an answering machine.

- Options** Open menu and select **Send DTMF**.

Default book



→ Select function.

Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown.



Select a name with the first letter and/or scroll.

New entry

Create new entry.

Addressbook (see also page 21)

Phonebook (see also page 23)

Default book

You can set a particular directory as your preferred one to use.

The selected standard book is opened in standby mode with the joystick.



Open Phonebook or Addressbook.

Addressbook

In the address book, a lot of data can be recorded for each entry and additional functions such as pictures, birthdays, Inst. Message can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different phone.

Business card

Create your own business card to sent to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to put in your details.

Save

Press.

Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook

Groups

See page 22.

<Info numbers>

See page 24.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory.

New entry

The address book is set as standard:



Open Addressbook
(in standby mode)



Display input fields.



Select required input
fields.



Fill in input fields.
At least one name must
be entered. Always enter
phone number with
prefix.

Special input fields

Group: Allocation to a group
(page 22).

Address: Extension to enter the
complete address: **Street:**,
Post code:, **City:**, **Country:**

Com. services

Information if the entry is
being used as an inst.
message contact
(page 28):

Nickname:, **WV user ID:**,
ICQ number:,
AIM screen name:

Birthday: After activation, you can
enter the date of birth.

Reminder: The telephone
reminds you one day be-
fore the birthday at the
time entered.

Picture: Assign a picture to the en-
try. It is displayed if you
are called by a corre-
sponding phone number.

All fields/Reduced fields

Display of number of in-
put fields.

Save

Save the entry.

Additional information



Temporary switch to
Phonebook.

Display/find entry



Open Addressbook
(in standby mode).



Select required entry.



Display.

Display options

Options

Display of functions for
the selected input field.

Change entry



Open Addressbook
(in standby mode).



Select entry and
press **Edit**.



Select input field.



Make changes. If necessary,
delete or overwrite entry, then **Save**.

Calling an entry



Open Addressbook
(in standby mode).



Select a name with the
first letter and/or scroll.



The number is dialled.

If there are several numbers in the
address book entry, these are offered
for selection.

Addressbook options

Different functions are available, depending
on the context:

Options

Open menu.

Move to ...

Allocates current or highlighted
entries to a group.

Copy to SIM

Copies name and number
to the SIM card (Phonebook).

Import

Set up readiness to receive
for an address book entry
via Infrared (page 48) or
SMS (page 29).

(For standard functions see page 13)

Groups

Nine groups are specified in your
phone to enable you to arrange your
Addressbook entries clearly. You can
rename seven groups.



Open Addressbook
(in standby mode).

<Groups>

Select (the number of entries
is listed behind the group name).



Select group.

Ringtone for group

See page 44.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook.

New entry

If the Phonebook has been selected as standard:



Open Phonebook (in standby mode).



Select <New entry>.



Display input fields.



Navigate between and fill in the input fields.

Number:

Always enter phone number with prefix. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default **No group**

Important phone numbers can be combined together in a group (**VIP**). This is independent of the Addressbook groups.

Location:

Default **SIM**

Special SIM cards can save phone numbers in a protected area (**Protected SIM**) (PIN2 required).

Record number:

Is automatically allocated to every entry. The phone number can be dialled with your record number.



Press to store the new entry.

Additional information



Temporary switch to Addressbook.



International dialling code.....page 18

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialled.

Change entry



Select entry in Phonebook.



Press this key.



Select desired input field.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situation.

Options Open menu.

Copy into Copy all highlighted entries to the Addressbook.

Copy all to Copy all entries to the Addressbook.

Delete all Delete entire Phonebook. PIN-protected

Import Set up readiness to receive for a Phonebook entry via Infrared (page 48) or SMS (page 29).

(For standard functions see page 13)

<Special books>



Open Phonebook and select <Special books>.

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information.

<VIP numbers>

Display the phone numbers saved in the **VIP** group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider.

Call records

Phone numbers are saved to make it easier to redial them.



Select record.



Open call list.



Select phone number.



Dial phone number.

Up to 500 entries are stored in the records:

Missed calls



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Missed call.

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode.

Delete records

The records are deleted.

Durat/charges



→ → Durat/charges

Last call, All outg. calls, All incom.calls, Remain. units, Charge sett.



Select.



Open report or settings.

Reset

Reset the selected report.

Charge sett.



Open menu.

Currency

Edit your currency.

Personal rate

Enter the currency as well as the charge per unit and time.

Account limit

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

Auto display

Call duration and charges are automatically displayed.

Camera

You can view photos/videos recorded on the integrated camera immediately and,

- use the photo as a background image, logo, a switch on/off animation or a screensaver
- send the photo/video via MMS or e-mail.

Switch on



Or



Starts camera in standby mode.



Switch over to single image



and video recording.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



Zoom factor.



White balance.



Flash connected.

In the top right-hand corner of the preview image, the number of photos which can still be taken in the selected resolution is displayed. This number varies considerably from motif to motif (storage space required).

Beneath the preview image, you will find a reference to the selected resolution. In video mode, the recording time already used and the maximum recording time still available is shown here.

Photo mode



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see **Setup** in the options menu (page 27).

Settings prior to taking a photo:



Sets the brightness.



Sets the zoom factor.

Image resolution

A setting can be made for the quality of the image regardless of the preview image resolution.

Premium:	640 × 480 (VGA)
High:	320 × 240 (QVGA)
Medium:	160 × 120 (QQVGA)
Wallpaper:	132 × 176

The resolution may decrease depending on the selected digital zoom.

Video mode

The video mode resolution is the same as the preview image resolution.



Start the video recording.



Terminate the video recording.

A red point appears in the top right in the display while the video recording is being made.



Plays the video recording.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly loaded while connected to the telephone. This reduces the stand-by time.



This symbol flashes when the flash is being loaded.

Settings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options

Open menu.

Settings

- Name for recordings
- Image resolution.

Pictures

Displays list of photos.

Other videos

Displays list of videos.

Microphone on

Switches the microphone on or off.

Use flash

Choose between:
Automatic, Off,
Red eye red.

Self timer

The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a signal tone each second.

White balance

Choose between:
Automatic, Indoor,
Outdoor

(For standard functions see page 13)

Additional information



There is insufficient storage space available. Start the storage assistant to delete specific data (page 47).

Message list

Inbox

The central input folder contains all messages which have been received. The entries are marked with a symbol to indicate their type and status (page 4).

To call up the central input folder, e.g. if a new SMS has been received:



Press the softkey beneath the symbol.

When you open an entry, the relevant application also starts. After a set time span, entries which have already been read and opened are only displayed in the **(Options)** message-related incoming lists.

In the central input folder, you will find the following **message types**:
SMS, MMS, Email

System messages

Message about MMS, Missed alarm, Missed appts., Missed calls, WAP push, Voice message

Data objects

Ringtones, Pictures and Video, calendar entries, Notes and Business card

Lists

All SMS, MMS and Email are each displayed in four separate lists:



→ → Inbox or Draft or Unsent or Sent → Select message type.

Options

Call up the function menu to process the messages.

Inst. message



This function is not offered by all service providers. Please contact your service provider for more information. You will find a description in the comprehensive operating instructions on the Internet at this address:

www.siemens.com/me75

Text modules



→ → Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

SMS

You can send and receive very long messages (up to 760 characters) on your phone. These long text messages are automatically composed of "normal" SMS messages (note higher charges). The maximum possible length of an SMS is reduced if you use special letters from some languages. If you do not wish to use these letters then change the input language in the options menu. Additionally, you can insert pictures and sounds in an SMS.

Write/send



→  → Create new
→ SMS text



Enter text
(see also page 16).
Options Text creation
functions.



Start sending procedure.



Select phone number
from the Phonebook/
Addressbook or enter it.



The SMS is transmitted to
the service centre to be
sent.

Special functions

Picture&sound

Send the pictures and tones with or without accompanying text. Remember that these may be protected (DRM, page 11).

The text input field is open:

Options



Open menu.

Select **Picture&sound**.

The menu contains:
Fix animations, **Fix sounds**,
Own animat., **Own pictures**,
Own sounds



Select area.



Confirm. The first entry of
the selected section is
displayed.



Scroll to entry required.

For **Fix animations**/**Fix sounds**:



The selection is added to
the SMS.

For **Own animat.**, **Own pictures**,
Own sounds:



The selection is displayed/
played back.



The selection is added to
the SMS.

SMS archive



→  → SMS archive

The list of SMS messages stored in the phone is displayed.

SMS to group

You can send an SMS message as a "circular" to a recipient group.



Start sending procedure.

Group

The Addressbook is opened.

<Groups> The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



Sending is started after a safety inquiry.

Read



Arrival of a new SMS announced in the display.

The **Inbox** is opened. It offers you a quick overview of the messages currently received.



To read the SMS, press the joystick.



Scroll through message line by line.



If this symbol flashes, the SIM memory is full. Delete or file messages.

Reply

You can answer the SMS now open immediately. The new additional text is placed above the received text.



Reply immediately.

Setting

SMS signature



→ Message setup

→ SMS setup → SMS signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except **Reply** and when changes are made to an existing SMS.

SMS profiles



→ Message setup

→ SMS setup → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these.

Activate profile



Select profile.



Activate.

Set profile



Select profile and open with **Edit** to process it.

MMS

The **M**ultimedia **M**essaging **S**ervice enables you to send texts, pictures/ videos and sounds in a combined message to another mobile phone or to an e-mail address.

Depending on your telephone setting, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.


Create

An MMS consists of the address header and the content. This may consist of a series of pages. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected (DRM, page 11).

Create standard MMS

 →  → **Create new** → **MMS**

First select an object for processing to be added to the first page of the MMS:

 Display picture/video functions: **Insert picture**, **Insert video**, **Camera**

SOUND



Select.

Display sound functions:
Insert sound, **Record**

TEXT



Select.

Display text functions
(see also page 16).

Options

Options

Open menu.

Send	Send MMS.
Preview	Play entire MMS on the display.
Picture...	See above.
Sound...	See above.
Text...	See above.
Page...	<p>Add page: Insert new page behind current one.</p> <p>Delete page: Delete current page.</p> <p>Page list: Display available pages.</p> <p>Timing: Enter the lifespan of a page in seconds.</p>
Msg. details	Enter sending parameters (see next chapter).
Save as templ.	After creating MMS, save it as a template. See also below:

Layout Select one of four possible layouts:

Text above, beneath, beside (on left or right) of picture.

Colour... Select the colours for:

- Picture backg.
- Text backg.
- Text colour

(For standard functions see page 13)

Templates



→  → MMS templates

MMS templates are saved MMS with not address. They can be sent as new MMS or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.


Options Open menu and select **Save as templ.**

Send

The page(s) of the new MMS is (are) already created. The MMS is displayed.



Open address entry.







MMS

Subject:
Greetings from London

To:
+1234567654321 |

Size:
85 KB



☒ **Options**

Subject: Enter a brief description of the MMS.

Send to: Enter one or more phone number(s)/ e-mail address(es).

Size: Display the MMS size.

Attachments: Insert attachments.



Start sending procedure.



The MMS is sent after confirmation.



More: Provide additional address fields.

Sending options

Options Open menu.

Send	Send MMS.
Play	Play entire MMS on the display.
Edit	Object selection to change an object.
Add recipient	Add recipient from the current address directory.
Delete recip.	Delete individual recipient.
Add attachm.	Add attachment: <ul style="list-style-type: none"> • Business card • Appointments • Picture • Video • Sound • File
Page list	Display MMS pages for viewing and/or changing.
Save as templ.	After creating MMS, save it as a template.
(For standard functions see page 13)	

Receive

 /  Arrival of new MMS/notification announced on display.



Start reception. Depending on the setting (page 35), the MMS/message is transferred into the central incoming message list (**Inbox**).

In order to receive the complete MMS **subsequently**, the message must be opened.

Receive Start transfer.

Read

An MMS has been fully received.



Start playback.

Key functions for playback:



To the next page.



Press **briefly once** to return to the start of the current page; press **briefly twice** to return to the start of the previous page.



Set volume.



Terminate.

When the MMS is complete, the message details are displayed.

Subject: Description of the MMS.

From: Information about the sender.

Size: Size of the MMS in KB.

More: Additional input fields.

Setting



-  → Message setup
- MMS setup
- Select function.

Connection profile:

Six MMS profiles can be set. The sending properties are specified in these profiles. If the setting has not yet been set, you will receive the necessary data from the service provider or via the "Setting Configurator" at:

www.siemens.com/mobilephonescustomercare



Select profile.



Profile is activated.

Set profile



Display list of profiles.



Select profile.



Press. Make settings.

User settings

Set the MMS dispatch to suit your requirements:

Delivery report:	Request delivery confirmation for sent messages.
Default priority:	Send priority: Normal, High, Low

Expiry time: Select the period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

Page duration: Enter the lifespan of a page in seconds (standard requirement).

Scroll forward in **Manual** or **Automatic** mode.

Retrieval: Receive complete MMS or only notification of arrival.

Automatic

Receive complete MMS immediately.

Auto.homenet

Receive complete MMS immediately in home network

Manual

Only receive the notification.

Creation mode: **Free, Restricted, Warning**
May be used to receive a warning message or to limit the size of a message.

Size indication: Set max. message size and message handling.



Email

Your telephone has an e-mail program (Client) with which you can write and receive e-mails.

Write/send



→  → Create new → Email

Enter address data:

To: Enter one or more e-mail address(es).

Subject: Enter the title of the e-mail.

Text: Enter text.

Expanded address fields

More: Opens additional input fields.

Cc: Address(es) of copy recipient(s).

Bcc: Address(es) of copy recipient(s) who are not visible to the other recipients.

Attachments:

Adds attachments such as images and sounds.

To send:



Press.

Receive/read



→  → Inbox

→ Select function.

Before an e-mail can be read, it must be retrieved from the server.

Retr. e-mail Only the message header is sent.

Options

Open menu and select **Retrieve body**.

Send/rec. mail

All e-mails are sent into **Inbox** and all completed e-mails from the **Unsent** list are sent.

Setting



-  → Message setup
- Email setup
- Select function.

Accounts

Before using this service you must set the server access (account) and your e-mail parameters. You will receive the necessary data from the service provider.



Select account.

Activate access



Activate an account that has already been created.

Set access



Start editing. Fill in the data fields as specified by your service provider.

Voice message/CB

Voice message



If you have a mailbox, a caller can leave a voice message for you

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- or if you are making a phone call.

You may have to register for this function and make manual settings.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to your voice messages.



Enter phone number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number.



→ e. g. Unanswered → Set

Enter phone number and register it at the network with **OK**.

Listening to message



A new voice message can be announced as follows, depending on the service provider:



Icon plus beep.

Or



Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated, your **Topic list** will supply you with messages on the activated topics.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet



The browser is activated with the pre-set option as soon as you call up the function (Browser settings, page 40; may be specified/pre-assigned by service provider).

Browser menu

Options Open menu.

Homepage	Call up the pre-set homepage or the current profile (page 40).
Bookmarks	Display bookmarks stored in the phone; save bookmark.
Go to...	Enter a URL.
Reload	Reload current page.

Show URL	Display the URL of the page currently loaded for sending via SMS/MMS/e-mail.
History	Display last Internet sites to be visited.
Disconnect	Disconnect the Internet.
File	Save object on the current page or save the complete page, display saved pages.
Setup	Browser settings (page 40).
Exit browser	Close the browser.

End connection



Press and **hold** to clear down the connection and close the browser.

Navigation in the browser



- Select a link.
- Settings, status on/off.

 


- Press **briefly**: back a page.




- One input field/link forward/back.
- Scroll one line.

Display symbols in the browser



Enter special characters

 

Browser settings



Options Open menu.

Setup Select.


Browser	Set start option as well as handling of pictures and tones and send options.
Profiles	The list of profiles is displayed for activation/setting (see below).
Protocol parameters	Set protocol parameters, push messages and abort time as well as handling of Cookies.
Security	Set encryption.
Context	Reset session; delete cache, history and Cookies.

Profiles

Preparation of the phone for Internet access depends on the service provider concerned:

Profile pre-set

 In most cases, access profiles have already been created for one or more service provider(s).



Set profile manually

You will receive the necessary data from the service provider or via the "Setting Configurator" at:

www.siemens.com/mobilephonescustomercare

Bookmarks



URLs stored in the phone are displayed. New bookmarks can be saved. It is possible to process or manage bookmarks in files.

Your Internet browser is licensed by:



OPENWAVE™



Games and Applications

Games and applications are offered on the Internet. Once downloaded, these are available to you via the telephone. Most applications include instructions. Some applications and games are already pre-installed on your telephone. You will find these listed here:

www.siemens.com/me75

Requirements

WAP profile (page 40) and the access (page 48) must be configured.

Download

Select the correct access depending on whether you are loading games or applications:



Or



Load or start games, or else start applications or reload them with
Downl. assist.

Additional information

You can use the browser to download applications (e.g. ringtones, games, pictures, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or enable the application again.

Please ensure that your phone has Digital Rights Management (DRM) so that downloaded applications are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens offers no warranty or guarantee nor does it accept any liability for the customer's ability to download or enable applications again or to do so free of charge. We recommend that you carry out a backup from time to time of the applications on your PC using the "Mobile Phone Manager" (**www.siemens.com/me75**).

Downl. assist.



You will not be left on your own during the download!

Setup

Profiles



Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

 
- Five standard profiles are provided with default settings. They can be changed however: **Normal environment**, **Quiet environment**, **Noisy environment**, **Car Kit**, **Headset**.
- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** is fixed and cannot be changed.

Profile settings

Edit a default profile or create a new personal profile:



Select profile.



Open menu and select **Change sett.**

The list of available functions is displayed. When you have finished setting a function, you return to the profile menu where you can change a further setting.

Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically as soon as the phone is inserted into the cradle.

Headset

The profile is only switched on automatically if an original Siemens headset is used.

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**.

Switch on



Scroll to **Aircraft mode**.



Confirm selection.



Confirm safety inquiry again in order to activate the profile. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.

Themes



Load a completely new user interface in your telephone. At the press of a button, various functions are rearranged thematically, e.g. start up/shutdown animation, Wallpaper, Screensaver, start-up/shutdown melody, additional animations.

It is possible that the existing settings could be overwritten.

Topic files are compressed to save memory space. After a download or a call from **My stuff**, these are automatically unzipped when activated.

Activate new topic



Select topic.



Activate new theme.



Confirm.


Display



Language

Set the language of the display text. When "automatic" is set, the language of your home service provider is used.

If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

***#0000#** 

Text input

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry.

Wallpaper

Set wallpaper graphic for display.

Logo

Choose picture to be displayed instead of the provider logo.

Colour skin

Select colour scheme, incl. background image for the entire user interface.

Screensaver

The screensaver shows a picture in the display when a period of time set by you has elapsed. An incoming call and pressing any key will end the function except if the safety function is activated.

Note

The **Digital clock** screensaver reduces the phone standby time.

Startup anim.

Shown when the phone is switched on.

Shutdn anim.

Shown when the phone is switched off.

Own greeting

Is displayed instead of an animation when you switch on the phone.

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker.

Ringtones



→  → **Ringtones**
→ Select function.

Set the tones on the telephone to suit your requirements.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The vibration alarm can be switched on in addition to the ring tone. This function is deactivated when the battery is being loaded and accessories are connected (except the headset).

Volume

Set different volumes for types of call/functions.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Allocate ringtone

A ringtone which has already been selected will be played or the list of possible ringtones will be displayed for selection.

Phone Pilot



 →  → Phone Pilot
→ Select function.

Your **Phone Pilot** accompanies you with instructions for many actions you can perform with your phone. It reminds you of important deadlines or birthdays.

A **Phone Pilot** is in the phone by default and cannot be deleted.

Activate/deactivate

Off You can deactivate **Phone Pilot** function.

Standard Select the included "standard figure".

If you have additional figures downloaded, you can also install, activate, or delete them:



Select entry.



Activate.

Install

You can download additional figures on the Internet.



Select entry in the list or **Inbox**.



When installing a new **Phone Pilot** you can give it its own name.

Yes Activate.

Call setup

 →  → Call setup
→ Select function.

Hide ID



If activated, your phone number will not appear on the other party's display (depending on the service providers).

Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

Divert

You can specify when calls should be diverted to your mailbox or other numbers.

Set up call divert (example)

Unanswered



Select **Unanswered**.
(Includes the conditions **Not reachable**, **No reply**, **Busy**, see below.)



Confirm and select **Set**, then enter the phone number to which the call will be diverted.



Confirm. The network setting confirms.

All calls



All calls are diverted.



Icon in the top line of the display in standby mode.


Other possibilities for divert:

Not reachable, No reply, Busy, Receiving fax, Receiving data

Call screening

Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled. Other calls are only displayed.

Any key answ.

Incoming calls can be accepted by pressing any key (except for .

Minute beep

During the call, you (and only you!) will hear a beep after each minute as a reminder of the time elapsed.

Phone setup



→  → Phone setup
→ Select function.

Key tones

Set the type of acoustic key acknowledgement.

Info tones

Set service and alarm tones.

Auto off

The phone switches off each day at the set time.

Phone identity

The phone identity number (IMEI) is displayed. This information may be useful for customer service.

More

Press several times to display additional information about the device.

Device check

After the last information page, a self-test as well as individual test are offered. If you select **Selftest**, all individual test are carried out.

Software version

Display in standby mode:

*** # 0 6 #**, then press **More**.

Memory assis.

The memory assistant will help you if there is insufficient phone memory.

File system

Format

(Phone-code protected)

The telephone memory is formatted and **all** saved data such as ringtones, pictures, games, etc. is deleted. Formatting can last longer than one minute.


Clean up

Create more memory by deleting temporary files no longer required.

Master reset

Reset phone to default values (factory setting). This does not affect the SIM card or the network settings.

Alternatively enter in standby mode:

*#9999# 

Clock

 →  → Clock
→ Select function.

Time/date

Change First enter the date, then the time.

Time zones


World map

Display of the world time zones.

 Select a time zone.

City list

List of world cities.

 Select a city in the selected time zone.

Date format

Select the display format for the date.

Time format

Select 24h or 12h.

Buddhist year



Switch over to the Buddhism date.

Show clock

Activate/deactivate time display.

Auto time



The time setting is made automatically in the GSM network.

Connectivity



→  → **Connectivity**
→ Select function.

GPRS



(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. Symbols in the display, see page 4.

GPRS info

Display connection information.

IrDA

Your phone has an infrared interface. The distance between the two devices must not exceed 30 cm. The infrared windows in both appliances must be aligned as accurately as possible with each other. Symbols in the display, see page 4.

Data services

Default setting and activation of the connection profiles for the applications **MMS**, **WAP**. The phone default setting varies from service provider to service provider: You will receive any data necessary from the service provider or via the "Setting Configurator" at:

[www.siemens.com/
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)

HTTP profile

The phone default setting varies from service provider to service provider. Consult your service provider or go to this address in the Internet for more information

[www.siemens.com/
mobilephonescustomercare](http://www.siemens.com/mobilephonescustomercare)

Authentication

Activate or deactivate encrypted WAP dial-up (CSD connections only).

Fax/data

Send voice/fax



Set this function on the phone **before** transmission so that you can switch from voice mode to fax mode.

Rec. voice/fax



Start the required communication program on your PC and select the function on the phone **during** the call (the PC will take over the connection).

Rec. fax/data



The call is signalled by a special ringtone and the type of call (fax or data) is displayed. Now start the communication program in your PC to receive the fax/data.

Security



→ Security



→ Select function.

Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Additional information

Block/unblock in standby mode. In each case:



Press and **hold**.

Direct call

Only **one** phone number can be dialled. The required phone code (4 to 8 digits) is set by you and entered at the first security setting.



To switch off, press and **hold**, then enter the telephone code.

Only



Restrict calls to SIM-protected numbers in the Phonebook.

This SIM only



Your phone is prevented from being used with a **different** SIM card.

PIN codes

Description, see page 14:

PIN control, **Change PIN**, **Change PIN2**, **Chg.phonecode**

Barrings



Network barring restricts the use of your SIM card.

All outgoing

All outgoing calls except emergency numbers are barred.

Outgoing intl. (International outgoing)

Only national calls can be made.

Out.int.x.home (International outgoing without home country)

No international calls, only calls to the home country.

All incoming

The phone is barred for all incoming calls.

When roaming

You will not receive calls when outside your home network.

Status check

Status check for network barring

Clear all

Clear all barrings.

Network



→ Network

→ Select function.

Line



Two independent phone numbers must be registered.

Network info

The list of GSM networks currently available is displayed.

Choose network

Network search is restarted.

Auto network

If activated, the next network is dialled in the order of your "preferred networks".

Pref. network

Set the service providers you prefer when you leave your home network.

Band selection



Select either GSM 900, GSM 1800 or GSM 1900. Make sure that your service provider supports the selected band.

Fast search

Network reconnection is speeded up.

User group



Depending on service provider, you can create groups with this service. These can have access to internal (company) information, for example, or special tariffs apply. Please check with your service provider for details.

Accessories



→  → Accessories
→ Select function.

Car Kit

Only in combination with an original Siemens handsfree car kit. The car kit profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Automatic switch off

(factory default: 2 hours)

The phone is powered by the car's power supply. Set the time which must elapse after the ignition has been switched off and before the telephone is automatically switched off.

Car loudspk.

Improves playback in certain circumstances.

Headset

Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in.

Auto answer

(factory default: off)

Calls are accepted automatically after a few seconds (except where the ringer is switched off or set to beep). You should therefore be wearing the headset.

Auto answer

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.


Fast access key

Softkeys

Assign one phone number or function to each of the two softkeys.

Change

For example, the **Internet** function is assigned to the softkey. To change this (in standby mode):

Internet Briefly press, then **Change**.
Select a new function from the list and confirm with .

Apply



The "Internet" is just used as an example here.

Internet Press and **hold**, the application is started.

Speed keys

Assign one phone number or function to each of the keys from 2 to 9. Number key 1 is reserved for the mailbox.

Assigning functions

 Press a number key (e.g. key 3) **briefly**, then press **Set**. Select a new function to be assigned from the list and confirm with .

Apply

Select a stored phone number or start a stored application (e. g. **Calendar**).

In standby mode:

 Press and **hold**.

My menu

 Press.

My menu Press.


Set up your own menu. The list of 10 entries is preset, but can be changed.


Change menu

You can replace each entry (1–10) with another entry from the selection list.

 Select entry.

Change Open the function list opened for selection.

 Select the **new** entry from the list.

 Confirm. The entry is saved.

Reset all

Reset all Select. After a security-query, the default setting is reset.

Organizer



→ Select function.

Calendar

You can enter appointments in the calendar. Time and date must be set correctly.

The calendar offers you three views: monthly view, weekly view, daily view.

The various entries are colour-coded. Appointments are shown as a horizontal colour bar on the vertical hour division.

Navigation:



Scroll between weeks/
days/hours.

Calendar setup

Start of day:

Hour when the working day begins.

Start of week:

Weekday on which the monthly and weekly view on the left starts

Set weekend

Set the days for the weekend.

Show birthdays:

Yes/No.

Appointments

Appointments are displayed in chronological order in a list.

Enter new appointment

<New entry>

Select.

Category:



Memo: Text input for description



Voice memo: Enter voice memos.



Call: Enter phone number. Shown with alarm.



Meeting: Text input for description.



Holiday: Enter start and end date.



Birthday: Enter name and date.

Different input/selection fields are displayed depending on the type. The number of fields can be restricted, see **Standard** at the end of the list.

Additional information



Alarm clock, alarm set.



Appointment, alarm set.

An alarm sounds even when the phone is switched off (except in **Aircraft mode**, page 42). The phone does not go to standby mode. To deactivate it press any key.

 →  → Select function.

Tasks

A task is displayed like an appointment in the agenda of the selected day. However, unlike an appointment it does not require a time. When no time is entered the task appears at the top of the list every day until it is marked as completed. The entries are made in the same way as **Appointments** (see "Appointments").

Notes

T9-support (page 16) makes writing short notes such as shopping lists easier. Save confidential notes with the phone code.

Missed appts.


Events with an alarm (**Appointments**, **Tasks**) to which you have not reacted are listed for reading.


Dictat.machine


Use the dictating machine to record short voice memos.

New recording


<Record new>
Select.


 After a brief beep, say the text.


 Pause/recording alternately.

 End recording. The recording is automatically saved with a time stamp. **Rename** with **Options**.

Playback

 Select the desired recording.

 Playback/pause, alternately.

 Press and **hold** rapid rewind and fast forward.

Warning!

The use of this feature may be subject to restrictions under criminal law.

Please inform the other party to the conversation in advance if you want to record the conversation and please keep such recordings confidential.

You may only use this feature if the other party to the conversation agrees.

Time zones

See page 47.

Extras

 →  → Select function.

SIM services (optional)

Your service provider may offer applications such as mobile banking, share prices, etc. via the SIM card.



Symbol for SIM services.

For further information, please contact your service provider.

Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.



Press to set.



Activate/deactivate the alarm.



Set the time for the alarm call (hh:mm).



Navigate to the various days.



Display options: alarm call time and days.



Set days for alarm calls. Press and **hold** to highlight/unhighlight all the days.



Confirm setting.

You can set the alarm to repeat with **Snooze**.

Sound recorder

Use the sound recorder to record noises and tones for use as ringtones.

New recording

Start from main menu



→  → **Sound recorder**

or also start from another application:

<Record new>

Select. The remaining time available, as well as the recording time, are shown in the display.



A brief beep sounds when the recording starts.



Switch between pause/record.



End recording.

The recording is saved with a timestamp in the folder **Sounds**. Rename with **Options**.

If starting from another application, e.g. create MMS:



Transfer the recording into the application.

Playback



Select the desired recording.



Switch between playback/pause.



Press and **hold** for rapid rewind and fast forward.

Calculator



→ → Calculator

The calculator can be used in a basic version or with an extended range of functions (**Options**).



Enter digits(s).



Navigate functions.



Use function.



Enter digits(s).



Use function. The result is calculated and displayed immediately.



→ → Select function.

Unit converter

You can convert various measurement units into other measurement units.



Select the source unit/currency, then enter the quantity.



Select the target measurement unit/currency. The result is displayed.

Special key functions:



Set decimal point.



Change sign.

Currency

When you call up the function the first time, enter the basic currency.



Enter currency (e.g. euro) and press **Save** to save the entry. Now enter the name and exchange rate of the currency to be converted.

Stopwatch

Two intermediate times can be recorded and saved.



Start/stop.

Reset

Reset to zero.

 →  → Select function.

Countdown

A set time elapses. The last 3 seconds are indicated by a beep. At the end a special beep sounds.

Remote synchronisation

Synchronise externally saved data (addresses, calendar etc.) with data on the phone.

Synchronise

Sync Select computer, start synchronisation.

Next Scroll through the various displays.

Sync. Setting

You can choose between 5 profiles.

Device manag.

If you were informed about software updates by a push message, you can establish a connection to the provider's server, so you can download them.

My stuff

To organise your files, you can use the file system like a PC file manager. There are some folders in **My stuff** for the various data types for this purpose. If, for example, you want to download new pictures or sounds, the download function is contained in the relevant folder.

Remember that pictures and sounds may be protected (DRM, page 11).



The list of the folders and files is displayed.

Navigation



Select file/folder in lists.



The cursor can be moved freely in the preview.



Open folder or start file with related application.

Options

Access to various administration functions.

Mobile Phone Manager (MPM)

MPM (Mobile Phone Manager) enables you to use extended phone functions from your PC. The phone and PC communicate via Infrared or a data cable (Accessories). You can download the newest version of MPM from the internet:

www.siemens.com/me75

 
Please consult the online help for further information on the functions and use of MPM.

Media player

When you are viewing a picture/video or listening to a melody, the application starts a media playback.



Scroll to the next media file.



Switch on display illumination.

Pictures



Zoom. The two softkeys (+/-) enlarge/reduce the picture. The joystick moves the picture detail.



Centre the picture.



Switch to full screen mode and back again.



Send via MMS or e-mail, for example.

Melodies/video



Play or pause, depending on the situation.



Switch to mute.



Set volume.



End playback.

Picture processing



Open menu and select Edit.

Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens.com/
mobilephonescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press *#06#), the software version (to display, press *#06#, then **More**) and if available, your Siemens Service customer number.

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 81 02 22 66 24
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00

Canada	1 88 87 77 02 11
Chile	8 00 53 06 62
China	40 08 88 56 56
Colombia	01 80 07 00 66 24
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Ecuador	18 00 10 10 00
Egypt	0 23 33 41 11
Estonia	6 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 70 07 07 00
Luxembourg	43 84 33 99
Macedonia	0 23 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 27 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Paraguay	8 00 10 20 04

Peru	0 80 05 24 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 08 20 15 21
Qatar	04 32 20 10
Romania	02 12 09 99 66
Russia	8 80 02 00 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 07 00 80
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 23 96 10 06
Thailand	0 27 22 11 18
Tunisia	71 86 19 02
Turkey	0 21 64 59 98 98
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 66 03 86
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Venezuela	0 80 01 00 56 66
Vietnam	84 89 20 24 64
Zimbabwe	04 36 94 24

Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Nevertheless, should your phone become wet, disconnect it immediately from the power supply to avoid electric shock. Do not place your phone (even to dry it) on/in a source of heat such as a microwave oven, oven or radiator. The phone may become overheated and possibly explode.
- Do not use or store the phone in dusty, dirty areas. Its moving parts may be damaged and the casing may become deformed and discoloured.
- Do not store your phone in hot environments (e.g. vehicle instrument panel in the summer). High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold environments. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!
- The phone has better protection against splashes, dust and knocks if the supplied seals are used.

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts is not working properly, obtain fast and reliable help at our service centres.

Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Just remember that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

Product data

Declaration of conformity

BenQ Mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or:

www.siemens.com/mobiledocs

Uygunluk bildirimi

BenQ Mobile, bu kullanım kılavuzunda sözü edilen mobil telefonun 1999/5/EC (R&TTE) tarih ve başlıklı yönergede yer alan hükümlerine ve temel taleplerine uygun olduğunu beyan eder. İlgili uygunluk bildirimi (DoC) imzalanmıştır. Gerekirse aslının bir kopyası, şirket yardım hattı üzerinden talep edebilirsiniz veya İnternet'te bkz.:

www.siemens.com/mobiledocs

Manufacturer and Conformity Information

Manufacturer

BenQ Mobile GmbH & Co. OHG
Haidenauplatz 1
D-81667 München
Germany

Telefon: +49 89 722 0

Fax: +49 89 722 913 311

www.siemens.com/mobilephonescustomercare

Importer

Siemens Sanayi ve Ticaret A. Ş.
Yakacık Yolu No: 111
34861 Kartal
İSTANBUL

Telefon: 0216 - 459 2000

www.siemens.com.tr

Notified Body

BABT
Clarmemont House,
34 Molesey Road
Walton-on-Thames
Surrey KT12 4RQ
United Kingdom

Telefon: +44 1932 251 251

Fax: +44 1932 251 252

e-mail: **Customer.Services@babt.com**

This product has a 7 year lifetime.

CE 0168

Technical data

GSM class:	4 (2 watt)
Frequency range:	880 ... 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 ... 1,880 MHz
GSM class:	1 (1 watt)
Frequency range:	1,850 ... 1,990 MHz
Weight:	85 g
Weight of power supply unit:	54 g
Size:	103 × 44 × 17 mm (70 ccm)
Li-Ion battery:	1000 mAh
Operating temperature:	-10 °C ... +55 °C
SIM card:	Plug-In 1.8 V/3.0 V

Operating time

The operating time depends upon the respective conditions of use: Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 3 to 8 hours

Standby time: 270 to 450 hours

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	30–90 minutes
Light *	1	40 minutes
Network search	1	5–10 minutes
* Key input, games, organiser etc.		

Phone ID

You will need the following details if you lose your phone or SIM card:

The number of the SIM card (on the card):

.....

15-digit serial number of the phone
(under the battery):

.....

The customer service number of the
service provider:

.....

Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

SAR

European Union (RTTE) and international (ICNIRP)

INFORMATION ON RF EXPOSURE/ SPECIFIC ABSORPTION RATE (SAR)

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and was adopted into the European Standard EN 50360 and into other national standards. The CE mark demonstrates that the EU requirements are met.

The highest SAR value for this device when tested at the ear was **0.53 W/kg¹**. As mobile devices offer a range of functions, they can be used in positions other than the head, such as on the body. In this case, at data transfer (GPRS) a separation distance of **1.5 cm** is required.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you nevertheless want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (www.who.int/emf) or Siemens (www.siemens.com/mobilephones).

1 The tests are carried out in accordance with international guidelines for testing.

Limited Manufacturer's Guarantee

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a limited manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 12 months of purchase, SIEMENS shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union and Turkey. For Products sold in Turkey that are imported by SIEMENS Sanayi ve Ticaret A.Ş., a separate importer's warranty is issued by SIEMENS Sanayi ve Ticaret A.Ş. Yakacık Caddesi No: 111 KARTAL ISTANBUL.

- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall be extended by the time period used for services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Sınırlı Üretici Garantisi

Kullanıcının (müşterinin) satıcı veya perakendeci ile ilgili herhangi bir tazminat talebine dokunmaksızın, müşteriye aşağıda belirtilen koşullar altında bir sınırlı Üretici Garantisi verilecektir:

- Yeni cihazların ve parçalarının satın alma tarihinden itibaren 12 ay içinde imalat ve/veya malzeme hatalarından dolayı kusurlu çıkmaları durumunda, SIEMENS kendi seçimine kalmış bir şekilde ve bedelsiz olarak cihazı mevcut teknolojiyi yansıtan başka bir cihazla değiştirecek veya sözkonusu cihazı tamir edecektir.
- Eğer cihazdaki kusur yanlış kullanımdan veya kullanıcı kılavuzlarındaki bilgilere uyulmamasından kaynaklanıyorsa bu Garanti geçersiz olacaktır.
- Bu garanti, yetkili satıcı veya müşterinin kendisi tarafından gerçekleştirilen servisler (örn. Kurulum, yapılandırma, yazılım indirme) için uygulanmayacak veya bunları kapsayamayacaktır. Kullanıcı kılavuzları veya ayrı bir veri aracı üzerinde temin edilen yazılımlar Garanti kapsamında yer almayacaklardır.
- Garanti talebinde bulunmak için kanıt olarak satın alma tarihini içeren satın alma makbuzuna gerek olacaktır.
- Siemens tarafından değiştirilen ve Siemens'e iade edilen cihazların veya parçaların mülkiyeti Siemens'e ait olacaktır.
- Bu Sınırlı Üretici Garantisi Avrupa Birliği ülkelerinde ve Türkiye'de geçerli olacaktır. Türkiye'de satılan SIEMENS Sanayi ve Ticaret A.Ş. ithalatı ürünler için ayrıca SIEMENS Sanayi ve Ticaret A.Ş. Yakacık Caddesi No: 111 KARTAL ISTANBUL

tarafından ithalatçı Garanti belgesi düzenlenmektedir.

- Cihazdan kaynaklanan veya onunla bağlantılı diğer talepler bu Garanti kapsamı dışında olacaktır. Bu Garantide yer alan hiçbir şey, Müşterinin Yasal Haklarını veya imalatçının ihmalden dolayı meydana gelen ölüm veya yaralanma bakımından imalatçının yükümlülüğünü sınırlandırmayacak veya kapsam dışı bırakmayacaktır.
- Garantinin süresi, Garantinin koşulları altında verilen hizmetler için kullanılan süre kadar uzatılacaktır.
- Garanti kapsamında herhangi bir kusur mevcut olmadıkça, Siemens değiştirme veya tamir için müşteriye fatura düzenleme hakkını saklı tutmaktadır.
- Yukarıdaki hükümler, kanıtlama yükümlülüğünde müşterinin zararına olarak bir değişiklik getirmemektedirler.

Bu Garanti kapsamında talepte bulunmak için, lütfen Siemens Mobil Ürünler Çağrı Merkeziyle irtibata geçiniz. İlgili telefon numarasını, ekli kullanım kılavuzunda bulabilirsiniz.

License Agreement

This License Agreement ("Agreement") is between You and Siemens Aktiengesellschaft ("Siemens"). The Agreement authorizes You to use the Licensed Software, specified in Clause 1 below, which may be included in your phone, stored on a CD-ROM, sent to You by electronic mail or over the air, downloaded from Siemens Web pages or servers or from other sources under the terms and conditions set forth below.

Read this Agreement carefully before using your phone. By using your phone or installing, copying, and/or using the Licensed Software, You acknowledge that You have read and understood the Agreement and agree to be bound by all of the terms and conditions stated below. You further agree that if Siemens or any licensor of Siemens ("Licensor") is required to engage in any proceeding, legal or otherwise, to enforce their rights under this Agreement, Siemens and/or its Licensor shall be entitled to recover from You, in addition to any other sums due, reasonable attorney's fees, costs and disbursements. If You do not agree to all of the terms and conditions of this Agreement, do not install or use the Licensed Software. This Agreement governs any Updates, releases, revisions, or enhancements to the Licensed Software.

1. **LICENSED SOFTWARE.** As used in this Agreement, the term "Licensed Software" means collectively: all the software in Your phone, all of the contents of the disk(s), CD-ROM(s), electronic mail and its file attachments, or other media with which this Agreement is provided and includes any related Siemens or third party software and upgrades, modified versions, updates, additions and copies of the Licensed Software, if any, distributed over the air, downloaded from Siemens Web pages or servers or from other sources.

2. **COPYRIGHT.** The Licensed Software and all related rights, without limitation including proprietary rights therein, are owned by Siemens, its Licensors or affiliates and are protected by international treaty provisions and all applicable national laws. This Agreement does not convey to You nor allow You to acquire any title or ownership interest in the Licensed Software or rights therein. The structure, organization, data and code of the Licensed Software are the valuable trade secrets and confidential information of Siemens, its Licensors or affiliates. You must reproduce and include the copyright notices with any permitted copies You make of the Licensed Software.

3. **LICENSE AND USE.** Siemens grants to You a non-exclusive, non-transferable end user right to install the Licensed Software or use the Licensed Software installed on the phone. The Licensed Software is licensed with the phone as a single integrated product and may be used with the phone only as set forth in these licensing terms.

4. **LIMITATIONS ON LICENSE.** You may not copy, distribute, or make derivative works of the Licensed Software except as follows:

(a) You may make one copy of the Licensed Software, excluding the documentation, as an archival backup copy of the original. Any other copies You make of the Licensed Software are in violation of this Agreement.

(b) You may not use, modify, or transfer the right to use the Licensed Software other than together with the accompanying hardware or copy the Licensed Software except as expressly provided in this Agreement.

(c) You may not sublicense, rent or lease the Licensed Software.

(d) You may not reverse engineer, decompile, modify, or disassemble those Licensed Software programs except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Parts of the Licensed Software may be supplied by third parties and may be subject to separate license terms. Such terms are set out within the documentation.

5. MISUSE OF THE LICENSED SOFTWARE OR DATA GENERATED BY THE LICENSED SOFTWARE IS STRICTLY PROHIBITED BY SIEMENS, MAY VIOLATE GERMAN, U.S. AND OTHER LAWS AND MAY SUBJECT YOU TO SUBSTANTIAL LIABILITY. You are solely responsible for any misuse of the Licensed Software under this Agreement and for any liability or damage related in any way to your use of the Licensed Software in violation of this Agreement. You are also responsible for using the Licensed Software in accordance with the limitations of this Agreement.

6. TERMINATION. This Agreement is effective from the first date You install, copy or otherwise use the Licensed Software. You may terminate this license at any time by deleting or destroying the Licensed Software, all back up copies and all related materials provided to You by Siemens. Your license rights terminate automatically and immediately without notice if You fail to comply with any provision of this Agreement. The rights and obligations under sections 2, 5, 6, 7, 9, 12 and 13 of this Agreement shall survive the termination of this Agreement.

7. YOU ACKNOWLEDGE THE LICENSED SOFTWARE IS PROVIDED "AS IS" AND NEITHER SIEMENS NOR ANY OF ITS LICENSORS MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR THAT THE LICENSED SOFTWARE WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADEMARKS OR

OTHER RIGHTS. THERE IS NO WARRANTY BY SIEMENS OR ITS LICENSORS OR BY ANY OTHER PARTY THAT THE FUNCTIONS CONTAINED IN THE LICENSED SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF THE LICENSED SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND SIEMENS AND ITS LICENSORS HEREBY DISCLAIM ANY AND ALL LIABILITY ON ACCOUNT THEREOF. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY A SIEMENS REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY AFFECT THIS DISCLAIMER. YOU ASSUME ALL RESPONSIBILITY TO ACHIEVE YOUR INTENDED RESULTS AND FOR THE INSTALLATION, USE, AND RESULTS OBTAINED FROM IT.

8. NO OTHER OBLIGATIONS. This Agreement creates no obligations on the part of Siemens other than as specifically set forth herein.

9. LIMITATION OF LIABILITY. IN NO EVENT SHALL SIEMENS, ITS EMPLOYEES, LICENSORS, AFFILIATES OR AGENTS BE LIABLE FOR ANY DIRECT DAMAGES, LOST PROFITS, DATA OR BUSINESS, OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, PROPERTY DAMAGE, INTERRUPTION OF BUSINESS OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY, ECONOMIC, PUNITIVE OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED, AND WHETHER ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY, OR ARISING OUT OF THE USE OF OR INABILITY TO USE THE LICENSED SOFTWARE, EVEN IF SIEMENS IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE LIMITATION OF LIABILITY SHALL NOT APPLY IF AND TO THE EXTENT SIEMENS' LIABILITY IS MANDATORY

UNDER THE APPLICABLE LAW E.G. ACCORDING TO PRODUCT LIABILITY LAW OR IN THE EVENT OF INTENTIONAL MISCONDUCT, PERSONAL INJURY OR DEATH.

10. **TECHNICAL SUPPORT.** Siemens has and its Licensors have no obligation to furnish You with technical support unless separately agreed in writing between You and Siemens or the applicable Licensor.

Siemens and where applicable its Licensors in the Licensed Software shall be free to use any feedback received from You resulting from your access to and use of the Licensed Software for any purpose including (without limitation) the manufacture, marketing and maintenance or support of products and services.

11. **EXPORT CONTROL.** The Licensed Software may include technical data and cryptographic software and is subject to German, European Union and U.S. export controls and may be subject to import or export controls in other countries. You agree to strictly comply with all applicable import and export laws and regulations. Specifically, You agree, to the extent required by U.S. Export Administration Regulations, that You shall not disclose or otherwise export or re-export the Licensed Software or any part thereof delivered under this Agreement to (a) Cuba, Iran, Iraq, Libya, North Korea, Sudan, Syria or any other country (including a national or resident of such country) to which the U.S. has restricted or prohibited the export of goods or services.

12. **APPLICABLE LAW AND FORUM.** The laws of Germany govern this Agreement. No choice of law rules of any jurisdiction will apply. The courts in Munich shall settle any disputes arising out of or relating to this Agreement provided you are a merchant.

13. **MISCELLANEOUS.** This Agreement represents the entire agreement between You and Siemens relating to the Licensed Software and (i) supersedes all prior or contemporaneous oral or written communications, proposals, and representations with respect to its subject matter; and (ii) prevails over any conflicting or additional terms of any acknowledgement or similar communication between the parties during the term of this License. Notwithstanding the foregoing, some products of Siemens may require You to agree to additional terms through an online "click-wrap" license, and such terms shall supplement this Agreement. If any provision of this Agreement is held invalid, all other provisions shall remain valid unless such validity would frustrate the purpose of this Agreement, and this Agreement shall be enforced to the full extent allowable under applicable law. No modification to this Agreement is binding, unless in writing and signed by a duly authorized representative of each party. This Agreement shall be binding on and shall inure to the benefit of the heirs, successors, and assigns of the parties hereto. The failure of either party to enforce any right resulting from the breach of any provision of this Agreement by the other party will not be deemed a waiver of any right related to a subsequent breach of such provision or any other right hereunder. Notwithstanding anything to the contrary in this Agreement, Siemens and/or its licensors may enforce its rights, including but not limited to copyright, trademark or trade names, in accordance with the rules of law in each country.

Index

- A**
- Additional books 24
 - Addressbook 21
 - Aircraft mode 42
 - Alarm (alarm clock) 55
 - Alarm clock 55
 - All calls (diversion) 46
 - All incoming (barrings) 49
 - Answering service (external) 38
 - Any to answer 46
 - Appointments 53
 - Auto display
 - Clock 47
 - Duration/charges 25
 - Auto key lock 49
 - Auto. Network selection 50
 - Auto. redial 18
- B**
- Band selection 50
 - Battery
 - Charging 8
 - Insert 7
 - Operating time 63
 - Operating times 8
 - quality declaration 61
 - Big letters 44
 - Bookmarks 40
 - Browser 39
 - Buddh. Date 47
 - Business card 20
- C**
- Calculator 56
 - Calendar 53
 - Call divert 45
 - Call waiting 45
 - Calling 18
 - Calls dialled (call list) 25
 - Calls received (call list) 25
 - Camera 26
 - Car kit (setting) 51
 - Care of phone 61
 - Cell Broadcast (CB) 38
 - Central input 28
 - Charge rate 25
 - Charging the battery 8
 - Cihaz bilgileri 62
 - Clock 47
 - Codes 14
 - Colour scheme 43
 - Conference 19
 - Control code (DTMF) 19
 - Converter 56
 - Countdown 57
 - Credit limit 25
 - Currency converter 56
- D**
- Data connection 48
 - Date format 47
 - Default book 20
 - Device manag. 57
 - Dialling code 18
 - Dialling with number keys 18
 - Dictating machine 54
 - Display
 - Illumination 44
 - Language 43
 - Symbols 4
 - Divert 45
 - DRM 11
 - DTMF codes (tone sequences) 19
 - Duration/charges 25
- E**
- E-mail 36
 - Emergency number 10
 - Extras 55
- F**
- Factory settings 47
 - Fast access 52
 - Fast search 50
 - Filter 46
 - Formatting (telephone memory) 47
 - Frequency range 50
- G**
- Games and applications 41
 - GPRS 48
 - Groups 22

H

Handsfree talking.....	18
Headset (setting).....	51
Hide ID.....	45
Highlighting mode.....	13
Hold call.....	19
Hotline.....	59

I

Identity number (IMEI).....	46
IMEI number.....	46
Info tones.....	46
Information services (CB).....	38
Infrared.....	48
Input language (T9).....	16
Inst. Message.....	28
International dialling code.....	18
Internet.....	39

K

Key tones.....	46
----------------	----

L

Language.....	43
License Agreement.....	67
Limit (call time/charge).....	25
Logo.....	43
Loss of phone, SIM card.....	63


M

Mailbox.....	38
Maintenance of phone.....	61
Media player.....	58
Menu.....	
Controls.....	12
My menu.....	52
Speed dialling.....	12
Message.....	
CB.....	38
E-mail.....	36
Lists.....	28
MMS.....	32
SMS.....	29, 30
Microphone on/off.....	27
Minute beep.....	46
Missed appointments.....	54
Missed calls (call list).....	25
MMS.....	32
Mobile Phone Manager (MPM).....	58
Muting (microphone).....	27
My stuff.....	58

N

Network.....	50
Notes.....	54

O

Only 	49
Only this SIM.....	49
Operating times (battery).....	8, 63
Organiser.....	53
Own (phone) numbers.....	24

P

PC connection.....	15
Phone code.....	14
Phone data.....	63
Phone identity number (IMEI).....	46
Phone number transmission.....	45
Phone Pilot.....	45
Phonebook.....	23
Pictures & sounds (SMS).....	29
PIN.....	
Change.....	14
Control.....	14
Enter.....	10
PIN2.....	14
Preferred network.....	50
Profiles (telephone).....	42
Provider logo.....	43
PUK, PUK2.....	14

R

Records.....	25
Remote synchronisation.....	57
Ringtones.....	44, 45

S

Safety precautions.....	2
SAR.....	64
Screensaver.....	44
Security.....	14
Service tones.....	46
Set time/date.....	47
Settings.....	42
Shut down animation.....	44
Signal strength.....	11
Silent alert.....	44
SIM card.....	
Clear barring.....	15
Insert.....	7
SMS.....	29
SMS push.....	28

SOS	10
Sound recorder	55
Speech time (battery)	63
Speed dialling keys	52
Standard functions.....	13
Standby mode	11
Standby time	8
Start up animation	44
Stopwatch	56
Surf & fun	39
Swap	19
Switch off phone	
Automatic	46
Manually	10
Switch on phone.....	10
Synchronisation	57

T

T9, Text entry	16
Tasks	54
Technical data	63
Text module	28
Time zones	10, 47

U

Upper and lowercase letters	16
User group	50

V

Volume	
Handset volume	18
Profiles.....	42
ringtone.....	44

W

Wallpaper (display)	43
---------------------------	----