



Part List , Mechanical


Applicable for D750, W800, K758 and W700


1	Exploded view	2
1.1	Exploded view upper cabinet	2
2	Part List	5
2.1	Part list phone	5
3	Label Part List.....	7
4	Revision History	8




1 Exploded view

1.1 Exploded view upper cabinet

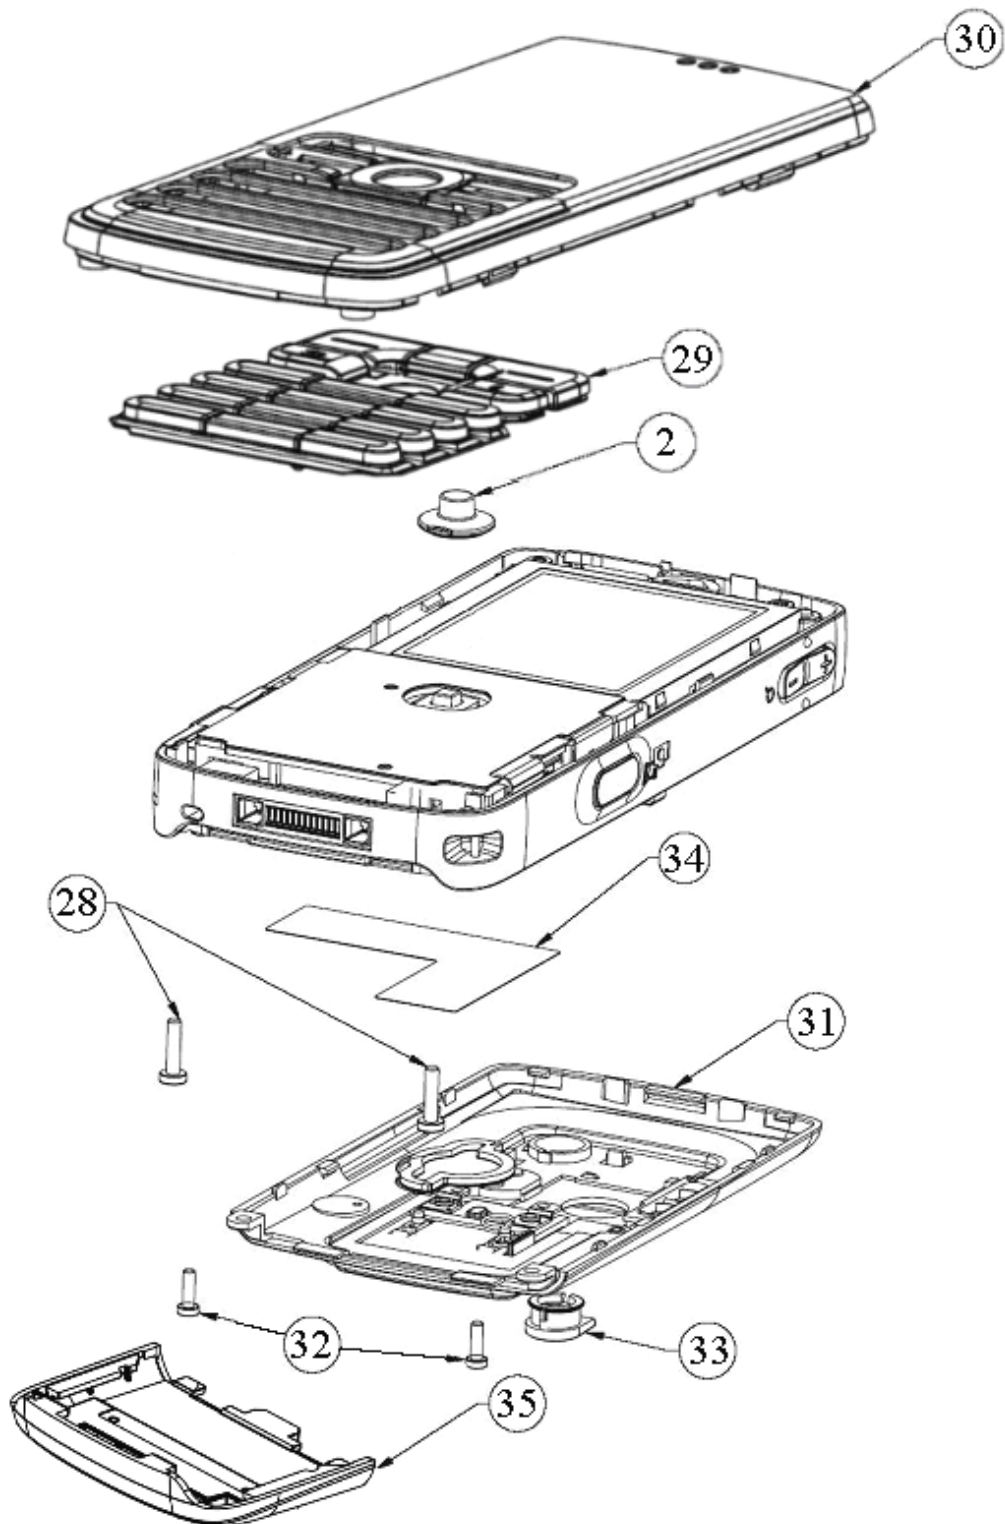

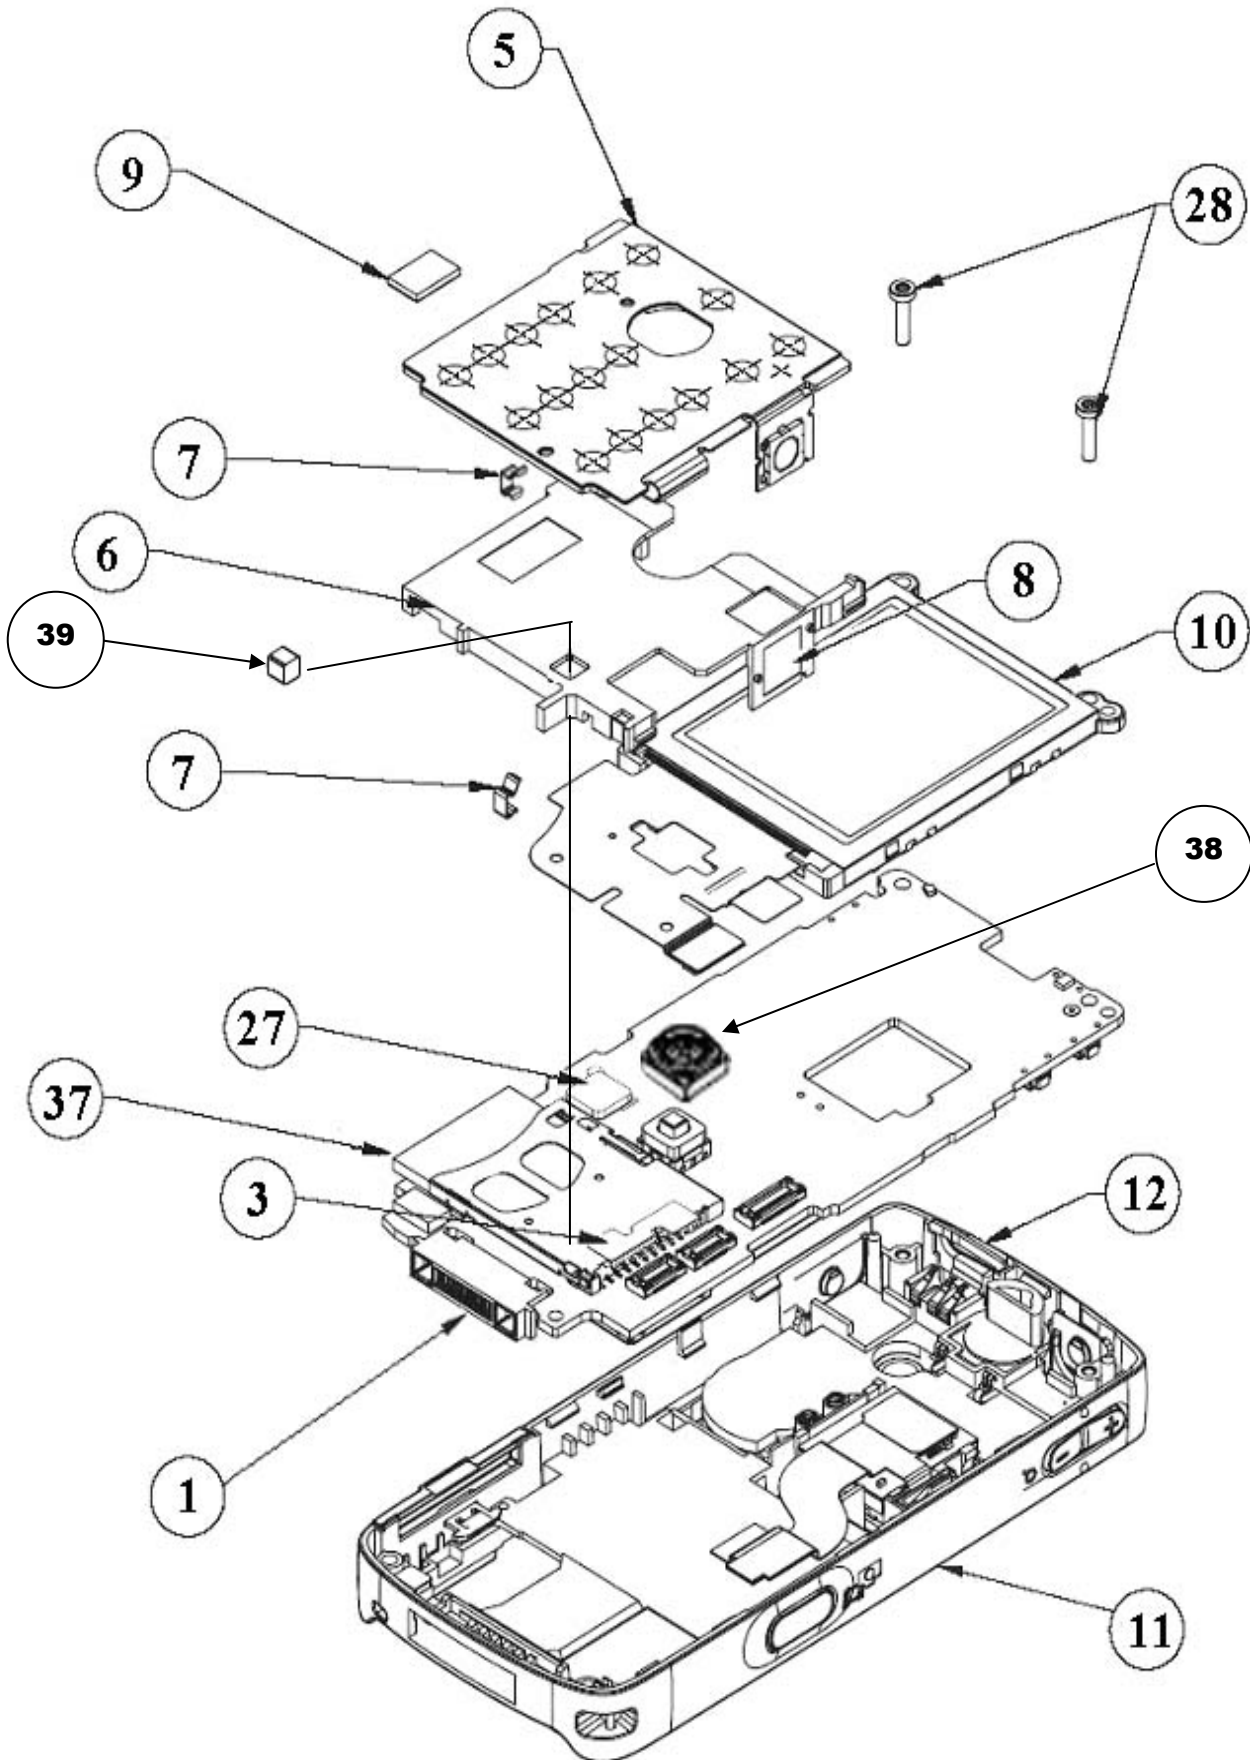

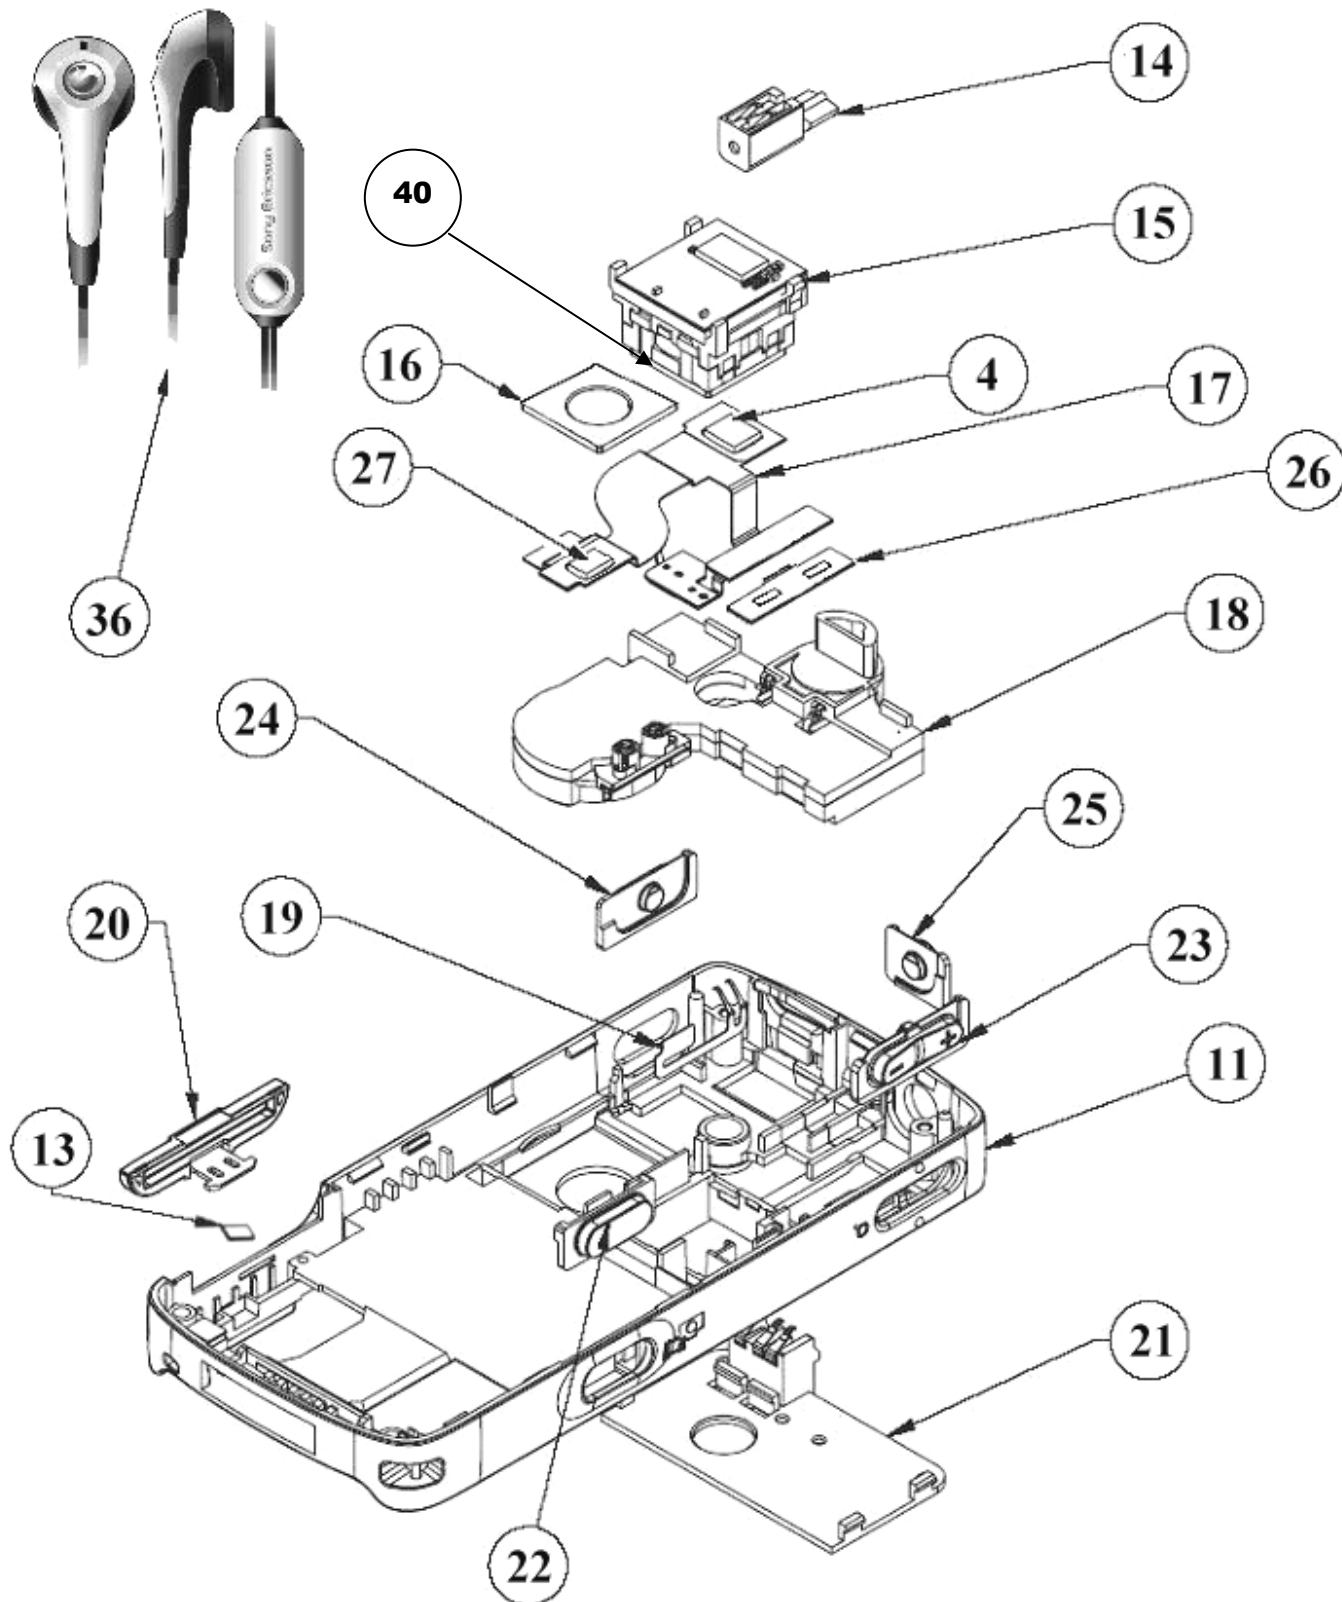



2 Part List

2.1 Part list phone

This Part List includes all parts possible to replace by using the Mechanical Repair Process. Parts available to order will be found in the Web Shop.

Pos. number refers to the Exploded View.

Pos.	Description	Part Number	Comments
1	System connector	RNV 799 36	
2	Joystick button assembly	SXK 109 6713/2	D750/K758
2	Joystick button assembly	SXK 109 6713/3	W800/W700
3	Tape, MS Duo	SXA 109 5741	
4	Support pad LCD	SXA 109 5047	
5	Keyboard Foil	SXA 109 5046/1	D750/K758
5	Keyboard Foil	SXA 109 5046/3	W800/W700
6	Plastic carrier assembly	SXK 109 6124	
7	Ground spring (2 pcs)	SXA 109 5035	
8	Tape (plastic carrier)	SXA 109 5152	
9	Spacer (Board to board connector)	SXA 109 5087	
10	LCD	RNH 942 29	
11	Frame assembly	SXK 109 6123	D750/K758
11	Frame assembly/ Smooth White	SXK 109 6123/1	W800/W700
11	Frame assembly/ Titanium	SXK 109 6123/2	W700
12	Irda window	SXA 109 5039	
13	Liquid Intrusion Indicator (frame)	SXA 109 4884	
14	Vibrator assembly (Shicoh)	BKE 903 24	
15	Camera module	KNC 201 15	
15	Camera module	KNC 201 37	W700
16	Camera gasket	SXA 109 5243	Not for W700
17	Camera flex	ROA 128 1186	
17	Camera flex	ROA 128 1973	W700
18	Speaker Box (AAC)	RLE 908 22/3	
19	Bluetooth antenna	KRE 101 1362	
20	Memory card rubber lid / Titanium	SXA 109 5048	D750/K758/W700
20	Memory card rubber lid / Smooth White	SXA 109 5048/1	W800/W700
21	Antenna	KRE 101 1593	Old: KRE 101 1586
21	Antenna	KRE 101 1593/2	W700
22	Camera key	SXA 109 5082	
23	Volume key / Titanium	SXA 109 5050	D750/K758/W700
23	Volume key / Smooth White	SXA 109 5050/1	W800/W700
24	Music Player Key / Titanium	SXA 109 5053	D750/K758/W700
24	Music Player Key / Smooth White	SXA 109 5053/1	W800/W700
25	On/Off key / Titanium	SXA 109 5052	D750/K758/W700



Pos.	Description	Part Number	Comments
25	On/Off key / Smooth White	SXA 109 5052/1	W800/W700
26	Tape Camera FPC	SXA 109 5034	
27	Camera flex pad, upper	SXA 109 5947	Not W700
28	Screw (4 pcs) 1,7 mm self threading	SXA 109 5242	
29	Keyboard/Latin/Generic	SXA 109 5214	D750
29	Keyboard/Latin/T-Mobile	SXA 109 5214/41	D750
29	Keyboard/CMCC	SXA1095214/83	K758
29	Keyboard/Latin/Smooth White	SXA 109 5214/61	W800/W700
29	Keyboard/Arabic/Smooth White	SXA 109 5214/62	W800/W700
29	Keyboard/Chinese/Smooth White	SXA 109 5214/63	W800/W700
29	Keyboard/Hebrew/Smooth White	SXA 109 5214/64	W800/W700
29	Keyboard/Cyrillic/Smooth White	SXA 109 5214/65	W800/W700
29	Keyboard/Bopomofo/Smooth White	SXA 109 5214/66	W800/W700
29	Keyboard/Thai/Smooth White	SXA 109 5214/67	W800/W700
29	Keyboard/ Titanium/ Latin	SXA 109 5214/91	W700
29	Keyboard/ Titanium/Arabic	SXA 109 5214/92	W700
29	Keyboard/ Titanium/ Chinese	SXA 109 5214/93	W700
29	Keyboard/ Titanium/ Cyrillic	SXA 109 5214/95	W700
29	Keyboard/ Titanium/ Bopomofo	SXA 109 5214/96	W700
29	Keyboard/ Titanium/ Thai	SXA 109 5214/97	W700
30	Front assembly complete/T-Mobile	SXK 109 6232/4Z	D750
30	Front assembly complete/TIM	SXK 109 6232/8Z	D750
30	Front assembly complete/CMCC	SXK 109 6232/9Z	K758
30	Front assembly complete/ Smooth White	SXK 109 6232/1Z	W800/W700
30	Front assembly complete/ Titanium	SXK 109 6232/2Z	W700
31	Antenna cover assembly	SXK 109 6233	D750/K758
31	Antenna cover assembly/ Smooth White	SXK 109 6233/1	W800
31	Antenna cover assembly/ Titanium	SXK 109 6233/2	W700
31	Antenna cover assembly/ Classic	SXK 109 6233/3	W700
32	Screw (2 pcs) 1,4 mm (for antenna cover)	SXA 109 4662	
33	Plug external antenna	SXK 109 5230	D750/K758
33	Plug external antenna/ Smooth White	SXA 109 5230/1	W800/W700
33	Plug external antenna/ Titanium	SXA 109 5230/2	W700
34	KRH label	SVF 930 1371	
35	Battery cover	SXA 109 5231	D750/K758
35	Battery cover/ Smooth White	SXA 109 5231/1	W800/W700
35	Battery cover/ Titanium	SXA 109 5231/2	W700
36	HPM-61 (Stereo PHF)	RLF 501 54	D750
37	Sony 64MB Memory stick duo	KDR 109 044/64	D750/K758
37	512MB Memorystick Duo PRO	KDR 109 083/512	W800
37	256MB MemoryStick Duo PRO	KDR 109 084/256	W700
38	Joystick gasket	SXA 109 6315	
39	Conductive pad	SXA 109 6358	
40	Camera glas	SXA 109 7497	
	Camera Holder Assembly	SXK 109 7202	W700
	Camera holder lid assy	SXK 109 7374	W700



3 Label Part List

Pos.	Description	Part Number	Comments
34	KRH Label	SVF 930 1371	
	Printer Ribbon	LZK 102 734/1	



4 Revision History

Rev.	Date	Changes / Comments
A	2005-05-18	Initial release
B	2005-07-05	Corrected SXX 109 6232/4Z, R1A Added SXX 109 6232/8Z,R1A
C	2005-07-13	Changed SXX 109 6713/1 to SXX 109 6713/2
D	2005-07-19	Added W800 and K758
E	2005-07-20	Added Keyboard for K758c. Updated part number of Liquid Intrusion Indicator (frame)
F	2005-08-12	Removed K758 from HPM-61. Updated part number of K758 Keyboard
G	2005-08-31	Not valid part numbers for vibrator and speaker box removed
H	2005-09-01	Updated part number of Irda window
J	2005-10-17	Updated Part Number for Camera Flexfilm Support Pad
K	2006-03-21	Joystick Gasket Added SXX 1096315 and Conductive Pad Added SXX1096358
L	2006-05-18	W700 added
M	2006-06-01	Updated antenna part number for W800/K758/D750
N	2006-06-08	Clarified what parts are to be used for W700 Titanium and Smooth White
S	2006-07-21	Named more parts Smooth White and Titanium to even more clarify what parts are to be used for the different models
T	2007-01-11	Added Camera Glas