



# Test Instructions, SP/Mechanical

Applicable for Z600/Z608

## Contents

<b>1</b>	<b>Abstract.....</b>	<b>2</b>
<b>2</b>	<b>Test Procedure .....</b>	<b>2</b>
<b>3</b>	<b>Test flow .....</b>	<b>2</b>
3.1	Software Update .....	2
3.1.1	Verify Software Version.....	2
3.1.2	Update Software Version .....	2
3.2	Service Settings .....	3
3.2.1	Contrast .....	3
3.3	Service Tests.....	3
3.3.1	Display Test.....	3
3.3.2	Camera Test.....	3
3.3.3	LED/Illumination Test.....	4
3.3.4	Keyboard Test .....	4
3.3.5	Polyphonic Ring signal Test.....	4
3.3.6	Vibrator Test.....	4
3.3.7	Earphone Test.....	4
3.3.8	Microphone Test.....	5
3.3.9	Real Time Clock Test.....	5
3.4	Manual Tests .....	5
3.4.1	On The Air Call To Mobile.....	5
3.4.2	Infrared Test .....	6
3.4.3	Bluetooth Test .....	6
3.4.4	System Connector Test.....	6
<b>4</b>	<b>Revision History .....</b>	<b>6</b>



# 1 Abstract

This document describes the test procedure for the SP/Mechanical repair package.

## 2 Test Procedure

To verify all components within the SP/Mechanical repair package, all tests must be performed.

## 3 Test flow

If the unit is passing these steps of testing without any failures, it is OK to return it to the customer.

If there are any failures, the phone must be repaired according to the troubleshooting guide or sent to a higher repair level.

### 3.1 Software Update

Update to latest signalling software and run the service activities software from EMMA II.

#### 3.1.1 Verify Software Version

To verify if the phone needs new software, you have to check the Software Version in the phone. Current Software Versions are checked through the following steps:

1. Start the phone.
2. Press the following navigation-key and keyboard sequence: ⇒ \* ⇐ ⇐ \* ⇐ \*
3. Select Service info.
4. Select SW Information.
5. Check the software file revisions on the display.
6. Press OK to return to the Service info menu.

#### 3.1.2 Update Software Version

Update the software in the phone by doing the following steps:

1. Make assure that the phone's battery is fully charged or use a Dummy battery. Connect correct flash cable and interface according to the Installation instruction.
2. Connect to the EMMA II server, choose application "GSM" and follow the instructions.



## 3.2 Service Settings

Start the phone.

**Note:** It is not necessary to have a SIM card inserted.

The Service Settings menu is entered using the following navigation-key and key sequence:  
⇒ \* ⇐ ⇐ \* ⇐ \* and select "Service Settings".

### 3.2.1 Contrast

To adjust the contrast:

1. Make assure that the contrast setting in the display menu (in the user MMI) is set to 0.
2. Select "Contrast" from the "Service Settings".
3. Adjust the contrast with the navigation-key.
4. Press save and you will return to the Main menu.

## 3.3 Service Tests

Start the phone.

**Note:** It is not necessary to have a SIM card inserted.

The Service Tests menu is entered using the following navigation-key and key sequence:  
⇒ \* ⇐ ⇐ \* ⇐ \* and select "Service Tests".

### 3.3.1 Display Test

To verify the display:

1. Select "Display" from the "Service Tests" menu.
2. The display toggles between four different test patterns.  
Make sure that there are no dots missing and that the colours and contrast is OK.
3. Close the flip and make sure that the status-display is starting up and that the information is visible and the backlight is turned on.
4. Open the flip and press the "↵" key to go back to the service tests menu.

### 3.3.2 Camera Test

To verify the camera functionality:

1. Select Camera from the "Service Tests" menu.
2. The camera function will now starts and are visible in the display. Make sure that the contrast and light is OK.
3. Press the "↵" key to go back to the service tests menu.



### **3.3.3 LED/Illumination Test**

To verify that the backlight and the Top LED's are OK:

1. Select "LED/illumination" from the "Service Tests" menu.
2. Check that the backlight is toggle between on and off, and that the LED on the left side toggles between "red", "green" and "off".
3. Press the "Ok" key to go back to the service tests menu.

### **3.3.4 Keyboard Test**

To verify that the keyboard, the navigation-key and the volume key are OK:

1. Select "Keyboard" from the "Service Tests".
2. Press all keys on the keypad, the camera key on the right side and the volume keys on the left side. If they are ok a text feedback is displayed showing the information which key was pressed. All keys should be tested. On/Off button is not included in the test; functionality is secured if the phone can be switched on/off.
3. If you stop pressing keys the phone will return to the service test menu after 3 seconds.

### **3.3.5 Polyphonic Ring signal Test**

To verify the Polyphonic Ring signal function:

1. Select Polyphonic from the Service Tests menu.
2. Adjust the volume with the navigation-key and then press "Ok" to go back to the service test menu.

### **3.3.6 Vibrator Test**

To verify the vibrator function:

1. Select "Vibrate" from the "Service Tests" menu.
2. Press any key and the vibrator will vibrate 3 times.
3. Press the "Ok" key to go back to the service tests menu.

### **3.3.7 Earphone Test**

The earphone is tested using DTMF tones.

1. Select "Earphone" from the "Service Tests" menu.
2. Press a numeric key and check that you get a tone in the earphone.
3. Press the "Ok" key to go back to the service tests menu.



### **3.3.8 Microphone Test**

This test is intended to test the microphone. Therefore, the earphone should be tested before this test is entered.

1. Select "Microphone" from the "Service Tests" menu.
2. Check that every sound that is going into the microphone can be instantly heard in the earphone.
3. Press the "Ok" key to go back to the service tests menu.

### **3.3.9 Real Time Clock Test**

This test will check if the built in real time clock works.

1. Select "Real time clock" from the "Service Tests" menu.  
After approximately 5 seconds you will get information whether the clock is ok or not.
2. Press the "↵" key to go back to the service tests menu.

## **3.4 Manual Tests**

### **3.4.1 On The Air Call To Mobile**

To verify the function of the earphone, microphone, buzzer, volumes button and radio:

1. Insert an operator SIM card and start the phone.
2. Set up a call from another phone to the mobile phone.
3. Answer the phone call.
4. Check that the polyphonic ring signal is working and that the backlight switches on OK.
5. Also check that the quality of the sound both in the mobile phone and the other phone are OK.
6. Press the volume key up and down and check that the volume in the phone is altered.
7. End the call.
8. Check that the ending procedure is OK and that the speech time is displayed.



### **3.4.2 Infrared Test**

To verify that the Infrared communication is working:

1. Insert a SIM card, connect a battery and start the unit.
2. Activate the function by entering Connectivity/Infrared port and select "10 minutes".
3. Set up an infrared link between an IR device and the phone. The IR-module is placed on the right side of the phone. If a link can be established, the module is considered working.

### **3.4.3 Bluetooth Test**

To verify that the Bluetooth communication is working:

1. Insert a SIM card, connect a battery and start the unit.
2. Activate the Bluetooth function by entering Connectivity/Bluetooth and turn it on.
3. Set up a link between the phone and another Bluetooth compatible device. If a connection can be established the Bluetooth module is considered working.

### **3.4.4 System Connector Test**

Hands free equipment and a charger are used in this test, to check the functionality of the System Connector.

1. Insert a SIM card, connect a battery and start the unit.
2. Connect the Hands free equipment to the system connector and set up a call and listen if you can speak/hear in the hands free set.
3. Connect the charger to the system connector and see if the phone starts to charge and if the charging is indicated in the display.

## **4 Revision History**

<b>Rev.</b>	<b>Date</b>	<b>Changes / Comments</b>
A	2003-09-17	First release