


SGCEM™ is a trademark of Sagem Communication SFRAN Group.  
Capital 300 272 000 € - 480 108 198 RCS RCS PARIS  
Société Anonyme  
Le Ponant de Paris - 27, rue Leblanc - 75112 PARIS CEDEX 15 - FRANCE  
www.sagem.com/obis  
SFRAN Group  
Sagem Communication  
Mobile Communication Business Group

to the section "Care and safety information".  
Please read the safety precautions carefully to ensure the correct  
and safe use of your mobile phone. For detailed information, refer  
of any kind, expressed or implied.  
and recommendations in this manual do not constitute a warranty.  
Ensure accuracy of the contents, but all statements, information,  
information has been made in the preparation of this manual to  
The information in this manual is subject to change without notice.

Notice

ENGLISH

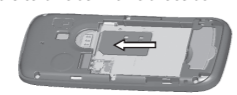
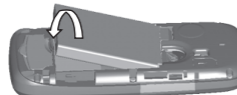
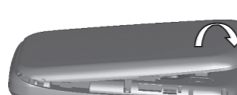


**User Manual  
my226X**

### Battery & SIM card

Switch off your phone and disconnect the charger.  
The SIM card is inserted beneath the phone's battery.

- Slide the SIM card, with cut corner as shown on the phone, into the card holder with fold face down.
- Place the battery by first inserting the upper section into the opening.
- Replace the back cover, making it slide.

### Charging the battery

Your phone is powered by a rechargeable battery. A new battery must be charged for at least 4 hours before being used for the first time. It reaches its optimum capacity after a few cycles of use. When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any more calls so as to avoid being cut off mid-call.

It is possible that the battery may heat up slightly during charging; this phenomenon is normal.

**WARNING**  
There is danger of explosion if the battery is placed in an incorrect way or if it is exposed to fire.  
Do not short circuit it.  
The use of other types of chargers or batteries as shown in the phone manufacturer's catalogue.  
The use of other types of chargers or batteries may be dangerous and invalidate the warranty.  
Use batteries must be disposed of in the appropriate places. We advise you to take the battery out if you plan not to use the phone for extended periods.  
You are strongly advised not to connect your phone to the charger if it doesn't contain a battery.  
The charger is a safety step-down transformer, it is forbidden to modify, alter or replace it by another component (power supply plug, etc).  
If the battery is entirely discharged, the phone cannot start. Plug the phone to the charger. The phone will switch on after a few minutes of charge. You can use the phone again when the Start option is displayed on the screen.

### Technical features

Weight: 65g  
Size: 103 x 46 x 11  
Original battery: Li-ion 670 mAh  
Battery life calls/standby: up to 3 hours / up to 240 hours (these values are theoretical ones and given for information only)  
Operating temperature: from -10°C to +50°C  
The technical characteristics of the product are subject to change without notice.

### Key description

**Red key:**  
In idle screen: Long press: Switch on/off  
In call context: Reject a call - hang up  
In menus: Return to idle screen

**Green key:**  
In idle screen: Short press: Fast access to the list of calls  
In call context: Call - receiving a call

**Right soft key:**  
In idle screen: Access to certain functions (shortcuts)  
In other screens: Chooses the function shown directly above the soft key, usually Back, Delete or Cancel

**Left soft key:**  
In idle screen: Access to main menu  
In other screens: Chooses the function shown directly above the soft key, usually Select, OK or Save

In the remaining, we will refer to this key as **OK key**

In idle screen: Access to main menu  
In menus: Context-sensitive access to different functions  
During a call: Access to in-call menu

**Long press:** lock the keypad  
Short press: + OK key to unlock the keypad  
When composing a message:  
Short press: switch from one input mode to another (Eng, upper case/lower case, 123 mode)

**In idle screen: Long press:** activate/deactivate the silent mode  
When composing a message:  
Short press: display the symbol table

**0 to 9 Alphanumeric keys**  
Press corresponding keys to input numbers when dialing or numbers and characters when editing  
**Long press[0]:** to input "+" for international access  
**Long press[1]:** to call voicemail  
**Long press[2-9]** then **Green key:** to call the contact specified in the menu **Contacts/Contacts menu/Speed dial**

### Screen content description

The idle screen may contain the following information:

- The title bar icons:  
Battery  
Silent mode (the ringtones is off)  
Call forward  
Roaming  
Signal strength level (between 0 and 5 bars)  
Message received (read your message)  
Alarm  
Voice message (at least 1 message that hasn't been listened to in the Voicemail)
- Network provider
- Date and time
- The following information may also be displayed:  
+1 New message or +1 missed call (incoming call failed). It can be deleted by pressing the **Red key** briefly.

### Soft keys

Two soft keys (left and right) perform the actions indicated by the icon above them (respectively on the bottom left and bottom right sides of the screen).

Here is the list of possible actions of the left soft key:

- Enter the main menu
- Options
- Ok/Yes/Select
- Save

and the right soft key:

- Shortcut
- Delete
- Back/No/Cancel
- Disconnect
- Resume/Hold
- Mute/Unmute

### Main Menu description

- Contacts  
Contacts menu
- Messages  
Write message  
Inbox  
Sentbox  
Drafts  
Voicemail  
Settings  
Local info.
- Calls  
Received  
Missed  
Dialled  
Call duration
- Settings  
Display  
Sounds  
Date / Time  
Shortcuts  
Own number  
Automatic keypad lock  
Call  
Network  
Security  
Factory default
- Extras  
Calculator  
Calendar  
mySudoku  
Conversion  
Service
- Alarm

### Using your phone

#### Switching on

Press and hold the **Red key** to switch your phone on. A short display appears.  
If access to the SIM card is protected, the phone prompts you to enter the PIN number: between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

**WARNING**  
When a wrong PIN number is entered three times consecutively, your SIM card will be locked. To activate it:  
- Enter the PUK (Personal Unblocking Key) code provided by your operator, and accept.  
- Enter your PIN number and accept.  
- Enter your PIN number again and accept.  
After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitively locked. You must then contact your operator or your SMC to obtain a new card.

Then the mobile searches a network to lock on and displays on the screen for you to use.

#### Making a call

Dial the number of your correspondent and press the **Green key**. During the call, the tones may indicate the establishment of the call. Once communication has been established, you can adjust the sound level (volume) using the **Up/Down keys**. At the end of the conversation press the **Red key** to hang up.

International call  
Long press 0 to display "+", then dial the country code without waiting for the dial tone, then the number of the called party.

Emergency services  
To obtain the international emergency service, dial **112** then press the **Green key**. Depending on the operators you can obtain the emergency service with or without SIM card or when the keypad is locked. It is enough to be in an area served by a network.

#### Receiving a call

When you receive a call, the number of your correspondent is displayed when it is presented by the network.  
Press the **Green key** or the **Left soft key** to answer, and speak. To refuse the call, press the **Red key**.  
To stop the ring tone or the vibrate, without refusing the call, press the **Right soft key**.

Hands-free mode  
To change to hands-free mode during a call, make a short press on the **Left soft key** and select **Speakerphone**, then press the **OK key** or the **Left soft key** to confirm activation of the amplified mode.  
**WARNING:** in this mode do not bring the phone up to your ear.

All the numbers corresponding to incoming and outgoing calls are logged in the list of recent calls.

#### Switching off

Press the **Red key** for five (5) seconds.  
The end message is displayed. The phone switches off.

### Contacts

#### Using the contacts

Enter the **Contacts menu**, the contacts list is displayed if you already have some (otherwise, go to *Storing a new contact*). When a contact is selected, an icon is displayed in the title bar. You can search for a contact quickly by typing the first letter.

#### Storing a new contact

From the **Contacts menu**, select **Add contact** and press the **Left soft key** to enter the menu.  
- Choose the place where you wish to store the contact (SIM card or phone) using the **Up/Down keys**, and validate.  
- Select name and press the **OK key**, enter name of your correspondent and press the **OK key** again to confirm.  
- Select number and press the **OK key**, enter phone number and press the **Left soft key** or the **OK key** to confirm.  
- Press the **Left soft key** to store it.

#### Copy / Delete contact

From the **Contacts menu**, select **Copy all** to copy all the SIM contacts to the phone memory or all the phone contacts to the SIM card. Select **Delete all** to delete all the SIM entries or all the mobile phone entries.

#### Fixed dial

This menu allows you to restrict the outgoing calls. The availability of this menu depends on your SIM.  
From the **Contacts menu**, select **Fixed dial** menu and validate. Enter PIN2 number and validate.  
When activating this function, only the numbers stored in the fixed dialing can be called. This phonebook is linked to the SIM card, and its size depends on the card's capacity.

#### Speed dial

You can assign any one of the 8 numbers from 2 to 9 to specific contact. Enter the specific contact numbers, then press the **Green key** to make a speed dial in the home page only.  
To set up the speed dial, from the speed dial menu, select "Invalid record" to the "Select contact", then enter **Contacts list** to select a contact.  
If a contact is used in the speed dial, you can press the **Left soft key** for available functions.

2. Enter the sequential phone contact number (only for the contacts stored in the SIM card memory) with "#" key, (example : 2#), the contact will be displayed.

#### Calls

This menu allows you to access the list of last numbers used. Enter **Calls menu**, you can access the call log divided into three lists that you can display with the navigator key: Received, Missed and Dialed calls. Each call has information on type of call, date and time. Select a call from the list and validate, various options are proposed: Call, Send message, Delete, Save etc.  
You can also make a call to a number by pressing the **Green key**. Fast access to the list of calls from the idle screen: press the **Green key**.

### Messages

#### Compose & send message

From **Messages menu** select the **Write message** menu and validate. The number of characters in an SMS is limited to 160 characters (or even less in the case of exotic languages). When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen.  
When the text has been entered, press the **Left soft key** - select **Send**, to send the message by entering the recipient's number or selecting it in the contacts.  
- select **Save to drafts**, if you do not want to send message immediately or if you want to send it several times; it is saved in the **Drafts**.  
- select **Send and save**, to send the message by entering the correspondent's number while saving a copy in the **Sentbox**.

#### Receiving messages

When you receive a message, a melody (defined in the menu **Setting /Sounds/SMS**) warns you and a message icon is displayed on the screen.  
You can press the **Left soft key** to read the new message directly. If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full. Received messages are stored in the SIM card or in the phone until you choose to delete them.

#### Local information

This menu is used to activate reception of local information broadcast by voicemail. If your voicemail number has not been entered yet, you must enter it in the menu **Messages/Voicemail/Voicemail number**. If your voicemail number is stored, you can quickly access your voicemail from the idle screen via a long press on key 1.

#### Voicemail

This function allows you to call your voicemail number and listen to voicemail. If your voicemail number has not been entered yet, you must enter it in the menu **Messages/Voicemail/Voicemail number**. If your voicemail number is stored, you can quickly access your voicemail from the idle screen via a long press on key 1.

#### Extras

This menu allows you to access the various extra features offered by your phone.  
**Calculator**  
This menu allows you to use your phone as a calculator.  
**Calendar**  
This menu allows you to display a calendar.  
**mySudoku**  
Your phone is supplied with mySudoku game.  
**Conversion**  
This menu allows you to convert one currency to another.  
**Services**  
This menu allows you to access numerous services offered by your operator. The list of these services will appear in the menu depending on your subscription.

#### Alarm

From the **Alarm menu**, select either **Alarm 1**, or **Alarm 2**, or **Alarm 3** and validate.  
To activate or deactivate the alarm, select **On** or **Off** and validate. If **On** is selected, you can set the waking time by entering the numbers directly or using the **Up/Down keys** and validate.  
The alarm icon appears on the home page.  
The alarm works even when the phone is switched off.

### Settings

#### Date and Time

From the **Date / Time menu**, select:  
**Set date / time:** set the time by entering it directly in digital format or by using the **Up/Down keys**, then use the **Right key** or **Left key** to access the next (or previous) input field. Once the time is correct, accept it. Date: same procedure as for setting the time.  
**Date format:** it allows to choose which date format shall be used. Use the **Up/Down keys** to select date format and validate.  
**Date separator:** it allows choosing which mark to use for dividing date display (19/01/07). Use the **Up/Down keys** to select and validate.  
**Time format:** it allows choosing which time format to use. Use the **Up/Down keys** to select 12 hours or 24 hours and validate.  
**Display:** select the desired display type, either None or Analog or Digital.

#### Shortcuts

The **Left/Right/Up/Down keys** can be customized as shortcut of the following features: None, Main menu, Inbox, Contacts, Calls, Alarm. This menu allows you to customize the settings of your phone to make it as convenient as possible.  
In the menu **Settings/Shortcuts**, select the key that you wish to customize and validate. Choose then the function that you want to access through this key and validate.

#### Lock /unlock keypad

On the **Settings menu**, please select the **Automatic keypad lock** menu and validate.  
If the automatic keypad lock is activated, the keypad will be locked after 30 seconds of inactivity.  
When the keypad is locked, emergency calls are still possible. In order to unlock your keypad, press the \*# key then the **OK key**.

#### Sounds

This menu allows you to customize the ringtones, to adjust the volume and set the vibrating mode.  
From the **Sounds menu**, choose **Call/SMS/Alarm** menu and validate. Use the **Up/Down keys** to select the ringtones from the proposed list and validate.  
From the **Sounds menu**, choose **Volume menu** and validate. Adjust the volume of the ringtones using the **Left and Right keys** of the navigator.  
Note that the keypad beeps can be deactivated by reducing their volume to zero.  
During a call, you can also use the navigator keys to adjust the call volume.

#### Any key answer

If you choose enable, you can press any key to answer the incoming call except the **Red key** and the **Right soft key**.  
On the **Call menu**, please select the **Any key answer** menu and validate. You can set the function to enable or disable.

#### Call waiting

While you are already in a call, the Call waiting function informs you thanks to a special tone that someone else is trying to call you. Simultaneously, the name and/or phone number of the person who is trying to call you is displayed on the screen.  
Note that the availability of this service depends on your operator. In the menu **Call/Call waiting**, you can activate, deactivate, or consult the status of the call waiting service.

#### Call forward

The Call forward function allows you to divert the incoming calls to your voicemail or to another phone number.  
Note that the availability of this service depends on your operator. In the menu **Call/Call forward**, choose the type of forwarding from the available options.

#### Call barring

The Call barring function allows you to block the incoming and/or outgoing calls, either permanently or when you are abroad and if a roaming service is available.  
Note that the availability of this service depends on your operator and requires a specific password provided by your operator.

#### Security

**PIN:** this is your SIM's secret code. If access to the SIM card is protected, the phone prompts you to enter the PIN number: between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.  
**PUK:** you have a second PIN number to allow you to access certain functions. These functions may or may not be available depending on your SIM card.  
**Phone code:** when the Phone code is activated, it prevents anybody to use your phone with another SIM card than yours. Practically, you will be prompted for the phone code anytime you change the SIM card.

#### Settings

**Lock /unlock keypad**  
On the **Settings menu**, please select the **Automatic keypad lock** menu and validate.  
If the automatic keypad lock is activated, the keypad will be locked after 30 seconds of inactivity.  
When the keypad is locked, emergency calls are still possible. In order to unlock your keypad, press the \*# key then the **OK key**.

### CE Conformance Document

Déclaration CE de Conformité

Fabricant: Sagem Communication  
Manufacturer

Adresse: Le Ponant de Paris  
27 rue Leblanc F-75112 Paris cedex 15 FRANCE

Declares under our sole responsibility that our product

nom du produit: Dual Band GSM/DCS AX2007CS2  
Product Name: (Vodafone 226, my220V, my226X)

est conforme aux exigences des directives européennes suivantes:  
conforms to the requirements of the following EEC directives:  
**EEC Directive 1999/5/CE**

Sécurité (Safety) EN 60950  
CEM (EMC) EN 301 489-1  
EN 301 489-7

Réseau 3GPP TS 51.010-1 v 7.5.0 avec GCF-CC v 3.25.0 inclus  
(Network) (3GPP TS 51.010-1 v 7.5.0 selected with GCF-CC v3.25.0 included)  
EN 301 511 V9.0.2

Santé (Health) EN 50360, EN 50361

Place and date of issue: Copy of Christophe Joux, 2007

Signature: [Signature]

### Care and safety information

#### SAR

**THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES**  
Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.  
The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.29 W/kg (\*). As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide (\*\*).  
As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.  
The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body. Additional information can be found on the websites of the World Health Organization (<http://www.who.int/emf/>)  
(\*) The tests are carried out in accordance with international guidelines for testing.  
(\*\*) Please see the Distance of operation section about body worn operation in the "Safety" section.

#### Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice: Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.  
Further information on this subject can be obtained from the WHO home page [http://www.who.int/peh-enf/WHO\\_Fact\\_sheet\\_193](http://www.who.int/peh-enf/WHO_Fact_sheet_193): June 2000.

#### Environment

**Packaging**  
To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.  
**Batteries**  
Spent batteries must be deposited at the designated collection points.  
The product  
The crossed-out waste bin mark affixed to the product (including its accessories) means that it belongs to the family of electrical and electronic equipment.  
To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

#### Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.  
As a general rule, always switch off your phone wherever the use of a phone is prohibited.  
Use of your phone is subject to safety measures designed to protect users and their environment.  
Do not use your phone in damp areas (bathroom, swimming pool...).  
Protect it from liquids and other moisture.  
Do not expose your phone to extreme temperatures lower than -10°C or higher than +50°C.  
The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.  
Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).  
Electrical safety  
Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.  
Aircraft safety  
When travelling by plane, you will need to switch your phone off as so instructed by the cabin crew or the warning signs.  
Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.  
Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.  
Explosive materials  
Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with fuel equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

#### Electric equipment

To avoid the risk of demagnetisation, do not let electronic devices close to your phone for a long time.  
Electronic medical equipment  
Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.  
Hospitals  
Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.  
Road safety  
Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.  
Distance of operation  
This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:  
- against the ear: place or receive a phone call and hold the phone as you would a wireline telephone.  
- body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 1.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone in the ear, position the phone a minimum of 1.5 cm from your body.  
- data operation: when using a data feature, position the phone a minimum of 1.5 cm from your body for the whole duration of the data transmission.  
Accessories  
We advise you the use of SAGEM brand accessories for an optimal operating of your phone and of your accessories.

### Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. Sagem Communication declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use. The software program developed by SAGEM remains the exclusive property of Sagem Communication. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.  
Usage precautions  
Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example). For this reason, Sagem Communication accepts all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, Sagem Communication states that a failure caused by receiving downloaded data that do not comply with the specifications set by Sagem Communication is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.  
Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, Sagem Communication does not guarantee the accuracy nor the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. Sagem Communication cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.  
Warranty conditions  
Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.  
If a fault occurs, he will advise you.  
1. The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by Sagem Communication, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.  
Damage resulting from inadequate packaging and/or poor packing of the phone sent back to Sagem Communication.  
Normal wear and tear of the phone and accessories.  
Communication problems linked with a poor environment, especially:  
- Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).  
Change of parameters of the cellular network made after the phone replacement of these consumables.  
2. All faulty phones under warranty will be replaced or repaired free of charge at Sagem Communication's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the Sagem Communication after-sales service, whose phone number will appear on the delivery note, will be charged to the customer.

Subject to essential legal provisions, Sagem Communication does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall Sagem Communication accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.  
3. The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.  
The warranty applies in normal conditions of use.  
Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by Sagem Communication on request. The responsibility of Sagem Communication cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.  
Sagem Communication may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work, Sagem Communication reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.  
Faulty parts to be replaced during a repair under warranty will become the property of Sagem Communication.  
The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.  
The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

4. The following are excluded from the warranty:  
Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of Sagem Communication, to a servicing fault, as described in the documentation supplied with the phone made without the written consent of Sagem Communication, to a servicing fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).  
Change of parameters of the cellular network made after the phone replacement of these consumables.  
Current servicing work: delivery of consumables, installation or replacement of these consumables.  
Call-outs for phone or software modified or added without the written consent of Sagem Communication.  
Faults or disruptions resulting from the use of products or accessories not compatible with the phone.  
Phones returned to Sagem Communication without having complied with the return procedure specific to the phone covered by this warranty.

### Customer care

Austria	01 36 02 77 16 64
Belgium	02 62 77 016
Denmark	02 32 33 28 52
France	0 892 701 799 (0,34 €/min)
Germany	01805 843 850
Greece	0800 44 14 20 38
Hungary	06 1 7774 839
Ireland	0 160 58 355
Italy	800 800 485
Netherlands	020 65 45 724
Poland	0801 801 101
Portugal	21 316 41 95
Romania	0800 89 45 21
Russia	495 258 54 33
Slovakia	(421) 02 68 629 355
South Africa	08 519 923 21
Spain	91 375 3376
Sweden	08 519 923 21
Switzerland	02 25 67 53 99
United Kingdom	0870 24 05 613

Customer Care e-mail address: [support.mobiles@sagem.com](mailto:support.mobiles@sagem.com)

Web sites: [www.sagem.com/mobiles](http://www.sagem.com/mobiles)  
[www.planetsagem.com](http://www.planetsagem.com)  
[www.sagem-online.com](http://www.sagem-online.com)