



MOTOROLA **CLIQ XT™** with MOTOBLUR™

Congratulations

MOTOROLA **CLIQ XT™** with MOTOBLUR™ syncs contacts, posts, messages, photos and much more—from sources, such as Facebook®, Twitter, MySpace, Gmail™, work and personal e-mail, and LastFM—and automatically delivers it to your home screen.

- **Streamlined Messaging:** Sync messages, feeds and updates from your office to today's most popular social sites.
- **Contacts Connected:** Contact updates are delivered automatically without your raising a finger.
- **More Web:** The enhanced browser lets you see more of the Web, while pinch-and-zoom and front-nav-pad features give you more control of it.
- **Music Connectivity:** The music player directly connects online for instant music, such as Internet radio; Widgets and applications let you share preferences and see lyrics.

Caution: Before assembling, charging, or using your phone for the first time, please read the important legal and safety information packaged with your product.

More information

On your phone—Touch  > **Help Center**.

You can also flick your home screen left or right to see **Getting Started** and **Tips & Tricks** widgets.

On your computer—Go to www.motorola.com/support.


After you create a MOTOBLUR account, you can also log in and find help with MOTOBLUR: www.motorola.com/mymotoblur

So, whether you want to read, watch, or play, we can help.

Your phone



* If you use a wired headset with built-in microphone, you'll need to use an OMTP (Open Mobile Terminal Platform) compliant headset such as the Motorola OH15. Look for the OMTP logo shown here, or go to www.motorola.com/wired for additional information.

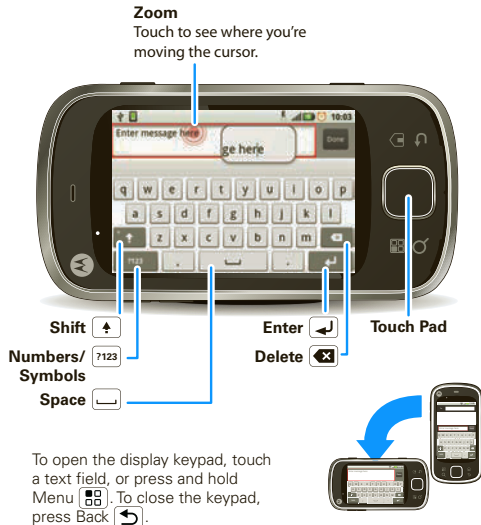

Note: Your phone might look a little different.

Contents


Let's go	3
Touchscreen & keys	6
Home screen	8
App menu	10
Social networking	10
Calls	12
Contacts	16
Messaging	19
Text entry	21
Tips & tricks	22
Personalize	25
Photos & videos	27
Music	30
Web	36
YouTube™	39
Locations	40
Apps for all	42
Bluetooth™ wireless	42
Wi-Fi™	44
Memory card & file transfer	45
Synchronize	46
Tools	47
Management	49
Security	50
Troubleshooting	53
Safety, Regulatory & Legal	54

Let's go

let's get you up and running

Assemble & charge

1 cover off

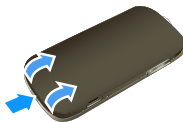


2 SIM in



3 battery in




4 microSD in
(already done)

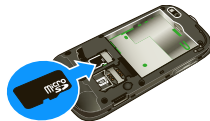

5 cover on



6 charge up

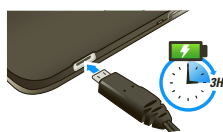

Caution: Please read the Battery use and safety text in the important legal and safety information packaged with your product.

Tip: To save battery life, see “Battery tips” on page 24.

Set up & go

Create or log into a MOTOBLUR account to get your contacts, email, messages, and status information, for all your accounts, all in one place, all the time. There's more in “Your MOTOBLUR account” on page 10. Registration is secure, and should only take a few minutes:

- 1 Turn on.
- 2 Select a language.
- 3 Register or log in.

Tip: Turn your phone to type.



If you haven't created a MOTOBLUR account, you'll need to register: Enter your name, your email address (where MOTOBLUR can send account information), and a MOTOBLUR account password.

A screenshot of the MOTOBLUR registration screen. It has three input fields: "Your name:" with the example "e.g. John Smith", "MOTOBLUR ID:" with the placeholder "Enter email address", and "Password:". Below these fields is a "Next" button, which is circled in blue with a hand icon pointing to it. At the bottom, there is a progress bar and the text "Creating your MOTOBLUR account".

- 4 Add your accounts to MOTOBLUR.




To add an account, touch it. Then, enter the user name or email and password that you set up on that account.

Tip: For more, or to add accounts anytime, go to “Add account” on page 11.


- 5 Import your SIM contacts.




After you sign in, your phone shows your home screen. Touch **Contacts**, then press Menu  > **Settings** > **Import from SIM card**. Touch **OK** to confirm.

Note: To use MOTOBLUR, please read the terms and conditions during registration and, if you agree, choose to continue.

Turn it on & off

To turn on your phone, press Power  (on the right side).

To turn off your phone, press and hold Power , then touch **Power off** in the menu that opens.




Note: Do not remove your memory card while your phone is using it or writing files on it.

Security

Your contacts are backed-up on MOTOBLUR, so don't worry. Even if you lose your phone, MOTOBLUR can help you find it or wipe it. And when you get your next MOTOBLUR product, your stored info makes it a snap to set up with just a username and password.

Of course it doesn't stop there. There are plenty of ways to protect your phone and your information, in "Security" on page 50.

Wi-Fi™ connect

If you want to use a Wi-Fi network, press Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**. Touch **Wi-Fi** to search for and connect to wireless networks. There's more in "Wi-Fi™" on page 44.

Cool content & more

Note: You might not have some features. For details, ask your service provider.

Browse and download thousands of the coolest apps on the planet from Android™. On top of that, you get a full HTML browser, so you can surf in style.

Download new apps with "Apps for all" on page 42. Your phone comes with a microSD memory card installed—you can load it up with photos, videos, and music from your computer using "Transfer files with a USB connection" on page 45.

Touchscreen & keys


a few essentials

Touch tips

Here are some tips on how to navigate around your phone.


Touch


To choose an icon or option, *Touch* it. Try it: In the home screen, touch

 **Contacts**.




Touch & hold


To open special options, *touch and hold* an icon or other item. Try it: In the home screen, touch  **Contacts**, then touch and hold a contact to open options.

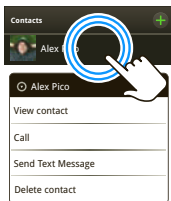

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch  **Contacts**, then drag your list up or down.

Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.

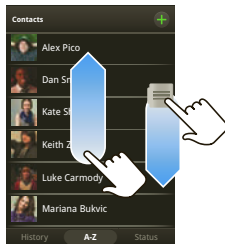

Flick

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.




Touch pad



You can use the touch pad to select small items in the display (like a small link on a Web page), or control a game without blocking your view. Just flick across the pad to scroll or move, and press the pad to select.





Key tips

Menu, home, search, & back





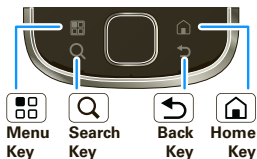

Press Home  to close any menu or app and return to the home screen. Press and hold Home  to show the last few apps you used, then touch an app to open it. In the home screen, press Home  to open or close the app menu.

Press Menu  to open menu options, or Back  to go back.



Press Search  to open a Web search.

Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power . To wake up the touchscreen, just press Power , Menu , Search , Home , or Back .



To change how long your phone waits before the screen goes to sleep automatically, press Menu  > **Settings** > **Display & security** > **Screen timeout**.

Tip: To make the screen lock when it goes to sleep, use “Screen lock” on page 50.

Power key menu

Press and hold Power  to open the menu where you can turn off the phone (**Power off**), or turn off features (**Airplane mode**, **Bluetooth**, **Wi-Fi**, or **GPS**).

Adjust volume


Press the volume keys to change the ring volume (in the home screen), or the earpiece volume (during a call).



Home screen

quick access to the things you need most

Quick start: Home screen



The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Home  from a menu. It's basically like this:



Use & change your home screen

On your home screen, *shortcuts* are icons for opening your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.

Click the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Press Home  to return to the home screen.
- To **change** a widget's settings, open it and then press Menu  > **Setup**.


You can find details about the settings for **Happenings** ("Add account" on page 11), **Messages** ("Set up messaging" on page 20), **Music** ("Music" on page 30), **Social Status** ("Update your status" on page 10), or **News** or **Weather** ("Set up widgets" on page 25).


- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

You can add a folder to organize your shortcuts.


- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash at the bottom of the screen.

Search

To search, use a Search widget on your home screen or press Search .





















Type, then tap the icon for a text search.

Tip: In your app menu or **Contacts**, you can press and hold Menu  for a keypad to type contact details to search.

Phone status & notifications

At the top of the screen, icons on the left notify you about new messages or events (flick the bar down for details). Icons on the right tell you phone status:






	Bluetooth™ active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi active		GPRS (fast data)
	downloading		EDGE (faster data)
	vibrate		3G (fastest data)
	silent		flight mode
	mute call		battery (charging)
	speakerphone active		battery (full charge)
	Google™ sync active		alarm set

Tip: To see today's date, touch and hold the status indicators.

App menu



Quick start: App menu

The app menu shows you all of your applications. To open it from the home screen, touch . To close it, touch  again.

Tip: To find an app in the menu, press and hold Menu  to open a display keypad, then type the app name.



Recent apps

Press and hold Home  to see the last few apps you used, then touch the app you want. Press Home  to return to the home screen.

Social networking

my life, your life

Your MOTOBLUR account

The first time you turned on your phone, you registered for a MOTOBLUR account that manages your messages, contacts, and more (“Set up & go” on page 4). You can log into this account from a computer to upload contacts, reset your password, get help, or even locate your phone: www.motorola.com/mymotoblur

What is MOTOBLUR?

Only MOTOBLUR syncs contacts, posts, feeds, messages, e-mails, photos and much more—from sources like Facebook®, Twitter, MySpace, your work e-mail, Picasa™, Photobucket—and automatically serves it up just the way you want it. No opening and closing apps and menus, it’s all front and center on your home screen and integrated throughout the entire phone so you can communicate anyway you like.

Update your status

After you add a social networking account, you can update and see your current status in a **Social Status** widget on your home screen.

To update your status, just touch your **Social Status** widget and enter text. If you have more than one account, you can use the pull-down menu to limit which accounts are updated. If you don't see a **Social Status** widget, flick your home screen left or right to check all panels.

To add a **Social Status** widget:

- 1 Touch and hold an empty spot on your home screen to open the **Add to Home screen** menu.
- 2 Touch **Widgets** > **Social Status**. The widget appears in the empty spot, and will show your status the next time your phone updates from the network.

Add account

Note: You can add your **Facebook**, **MySpace**, **Twitter**, or other accounts to your phone. If you don't have accounts, you can visit their Web sites to set them up.

Find it: Menu  > **Settings** > **Accounts** > **Add account**

To sign into your account, use the user name or email and password that you set up on that account (the same as on your computer).

When you sign into social networking accounts, you'll see your friends and contacts in your **Contacts** list,

and your status and updates can appear in **Social Status** and **Happenings** widgets.


Twitter and MySpace messages will always appear as "read" on your phone, but your phone notifies you when you receive a new message. MySpace marks your messages as "read" online.

For email accounts, see "Set up messaging" on page 20.

Tip: To download updates faster, use "Wi-Fi™" on page 44.


View account updates & features

After you add a social networking account, you can see and respond to friends' updates with the **Happenings** widget on your home screen. If you don't see one, set one up in "Widgets" on page 25.

When you touch the **Happenings** widget to open an update, you can touch  to open the full update, then touch the social network's icon to open its Web site.

Note: Your network or other factors might affect the speed of widget updates.

Edit & delete accounts

Find it: Menu  > **Settings** > **Accounts**


Touch and hold an account, then touch **Open account** to edit it, or touch **Delete account** to remove it (along with its contacts and messages).


Calls

it's good to talk

Quick start: Calls

Find it:  **Dialer**

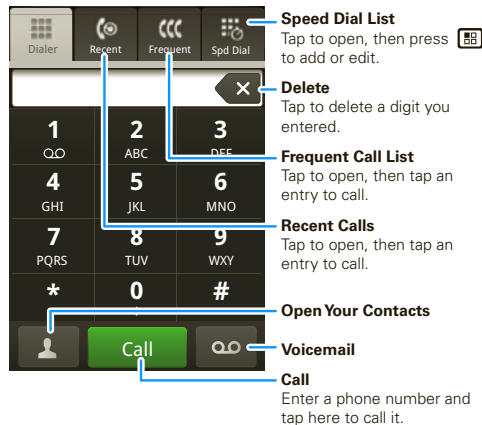

During a call, press Menu  to choose **Hold**, **New call**, or **Use Bluetooth**, or to wake up the touchscreen

if it's dark. Your touchscreen goes dark to avoid accidental touches.




Tip: You can press Home or Back to hide the active call display. To reopen it, touch **Dialer**.

Make & answer calls

To make a call, touch **Dialer**, enter a number, then touch **Call**.

Tip: To enter the international dialing code, touch and hold . To add a pause or wait after numbers, press Menu .

To answer a call, drag **Answer** to the right (when your phone is unlocked, **Answer** is just a touch button).



End calls

Touch **End call**.

Note: When you hold your phone to your ear, the display goes dark to avoid accidental touches.

When you move your phone away from your ear, the display lights up again.



Tip: You can press Home or Back to hide the active call display. To reopen it, touch **Dialer**.

Speed dial


Find it: **Dialer** > **Spd Dial**

- To call a number, touch it.
- To add, edit, or clear entries, press Menu .

Handsfree


Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call:


- To use the speakerphone, touch **Speaker**.
- To use a Bluetooth™ device, press Menu  > **Use Bluetooth**.

Mute & hold

During a call:

- To mute the current call, touch **Mute**.
- To put a call on hold, press Menu  > **Hold**.

Enter numbers during a call


To enter numbers during a call, touch  and then touch the dial pad.



Recent calls

Find it:  **Dialer > Recent**

- To call a number, touch it.
- To send a text message, create a contact, view a contact, add the call to speed dial, or other options, touch and hold an entry.



- To filter the list, touch the view name (like **All calls**) at the top.
- To clear the list, press Menu .

Frequent calls

Find it:  **Dialer > Frequent**

- To call a number, touch it.
- To send a text message, view a contact, add the call to speed dial, or other options, touch and hold an entry.

Conference calls


To start a conference call, call the first number. After they answer, press Menu  > **New call** and call the next number. When the next number answers, press Menu  > **Join**.

Your phone number

Find it: Menu  > **Settings > About phone > Status > Phone number**

Your caller ID

Note: You might not have this feature. For details, ask your service provider.

To hide your number from the people you call, press Menu  > **Settings** > **Call settings** > **Additional call settings** > **Caller ID**.

Call forwarding & waiting

You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network):

Find it: Menu  > **Settings** > **Call settings** > **Call forwarding**

When you're on a call and a second call comes in, **Call waiting** lets you answer it by touching **Answer**. You can turn off **Call waiting**, to send second calls straight to your voicemail:

Find it: Menu  > **Settings** > **Call settings** > **Additional call settings** > **Call waiting**

Restrict outgoing calls

To restrict your phone so that it can only dial a few numbers:



Find it: Menu  > **Settings** > **Call settings** > **Fixed dialing number**

- To turn fixed dialing on, touch **FDN disabled**.

- To add or delete the allowed numbers, touch **Manage FDN list**.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Touch  **Dialer** (if your phone is locked, touch **Emergency Call** or press Menu  > **Emergency call**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.


Note: Your mobile device can use AGPS satellite signals to help emergency services find you (see the important legal and safety information packaged with your phone).

Contacts


contacts like you've never had before

Quick start: Contacts

Find it:  **Contacts**

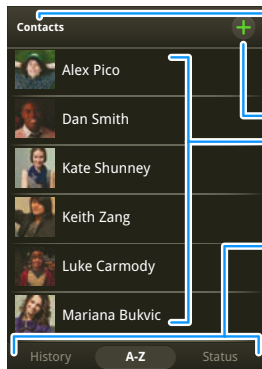

Group

Press Menu  to choose which group to show (like All, Favorites, or Facebook).

Create Contacts


Contacts List

Touch to view contact information. Touch & hold to edit, delete, and more.

Views



Touch a list view, or flick the display right or left to show:

History - recently used
A-Z - list without status
Status - list with status

Tip: To search the list, press and hold Menu  to open a display keypad, then type a name. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.

Import contacts from your SIM

Note: You might have already done this during “Set up & go” on page 4.

If you need to import the contacts from your SIM card, touch  **Contacts**, then press Menu  > **Settings** > **Import from SIM card**.



Call, text, or email contacts

Find it:  **Contacts**

For **Call**, **Send Text Message**, **Email**, **View contact**, or other options, touch and hold the contact.

View & use contacts

With a MOTOROLA **CLIQ XT** with MOTOBLUR, you'll know what everybody's up to and when. Every time you pick up a call, check a message, or look up a friend's contact info, sure, you'll see their name and number, but you'll see their social network status and smiling face, too.

Find it:  **Contacts**

- To filter the contacts by group (**All**, **Facebook**, and so on) touch the filter name at the top.

Tip: To change which account provides the pictures for your **Contacts**, from the home screen


press Menu  > **Settings** > **Accounts**, then press Menu  > **Picture source**.

- To change the list view, touch **History** (recently used), **A-Z** (list without status), or **Status** (list with status) at the bottom.
- To find a contact, just type the name.

Touch a contact to open their details. To start a call or message, just touch their phone number or other info. You can touch **History**, **Info**, or **Happenings** at the bottom of the screen to see more.

Edit or delete contacts

Find it:  **Contacts**

Touch the contact, then press Menu  > **Edit** or **Delete**. You can set a ringer, address, and other details that will be saved on your phone and your MOTOBLUR account.


Where are contacts edited or deleted? Your phone edits the contacts in its memory, and also updates your MOTOBLUR account. Your changes won't affect your SIM card.

Link contacts



You might have two **Contacts** for the same person, maybe a Facebook® friend who is also stored on your

SIM card, or one friend with two email addresses. To combine these two contacts:

Find it:  **Contacts**

Touch a contact to open it, then press Menu  > **Link contact** and touch the second entry. Your MOTOBLUR account remembers this connection.


Create contacts

Find it:  **Contacts**, press Menu  > **Add contact**


Touch **Mobile** to choose a different type for this entry.


+ adds another entry.

- removes this entry.

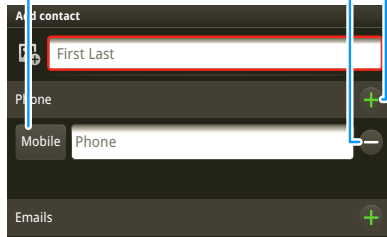

To see more details, flick up.

When you're finished, press Menu  > **Save**.

Where are contacts saved? Your phone saves new contacts in its memory, your MOTOBLUR account, and other accounts you select: In **Contacts**, press Menu  > **Settings** to choose which accounts get updated. New contacts won't be on your SIM card, but they will download to any new MOTOBLUR phone when you log into your MOTOBLUR account.



Synchronize contacts

Note: You might not have this feature. For details, ask your service provider. To synchronize contacts in your service provider account, ask your service provider.

When you change one of your **Contacts**, your phone automatically updates your MOTOBLUR account online. Also, your phone updates your **Contacts** and MOTOBLUR account whenever you change a friend in your social networking accounts.

So, you don't have to do anything to synchronize your **Contacts** with your other accounts! MOTOBLUR takes care of it for you.


My details

Find it:  **Contacts**, press Menu  > **View my details**

To edit details, touch them.

Groups

You can put your **Contacts** into groups that you create (like "friends," "family," or "work"). Then, you can find contacts faster by showing one group at a time.

To create a group in your **Contacts**, press Menu  > **Add group**. Enter a group name, then touch **Add** to add members.


To show only one group in your **Contacts**, touch **Contacts** at the top of your screen and choose the group name.

Messaging

sometimes it's best to text, or IM, or email . . .

Quick start: Messaging

Find it:  **Messaging > Universal Inbox**

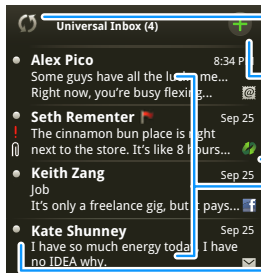

Check for Messages Now

Create Message

Touch to create a new message, and see a list of your drafts (indicated by the number).




Message Type

Message List

Touch to open a message. Touch & hold to move, delete, and more.

Message Status

Icons indicate:

-  unread
-  urgent
-  has attachments

menus—every message streams right to the phone, viewable exactly the way you want.

Find it:  **Messaging > Universal Inbox**

Note: **Universal Inbox** shows all of your messages together—text, email, and social networking messages. To show only one type of message, touch a message account type instead of **Universal Inbox**.

- To **open** a message and all of its replies, touch it.
- To **respond** to a message, just open it and enter your response in the text box at the bottom.

To **forward** a text message, touch and hold a message in the conversation, then touch **Forward message**.

For email, touch  to choose a reply or forward option.



- To open options, touch and hold a message.

Tip: Try the **Messages** widget in “Widgets” on page 25.

Create messages

Find it:  **Messaging >** 




Choose a message type. Then, enter the recipient and message.


Tip: To see more messages, flick or drag up.

Read & reply to messages

Every text, email, friend-feed, wall post, and bulletin is automatically delivered to you. The best part is you don't have to dig through any apps, screens or

In text messages and emails, press Menu  to add files or choose other options.


Send & receive attachments

To send a file in a message, open a new message, press Menu , and choose the file.

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show a button that says **Get HTML version**.


Tip: To send and receive large attachments faster, use a Wi-Fi connection, in “Wi-Fi™” on page 44.

Set up messaging

To add email accounts, press Menu  > **Settings** > **Accounts** > **Add account**.



- **Corporate Sync** is for Exchange server work email accounts. Enter details from your IT administrator.

Tip: You might need to enter your domain name with your user name (like *domain/username*)




Note: Some work accounts might require you to add a password lock to your phone, for security. To stop an account from showing the contacts you create on your phone, touch  **Contacts**,

press Menu  > **Settings**, then uncheck the account under **New contacts**.

- **Email** is for most personal email accounts. For account details, contact the account provider.

To change your settings, touch  **Messaging**, press Menu , then touch:

- **Manage accounts** to change your user name or password (or server settings, for email).
- **Edit Universal Inbox** to choose which accounts show messages in the **Universal Inbox**.
- **Messaging Settings** to set the notification for each account type (along with other preferences, for email).

To get Gmail™ in your Messages widget and **Universal Inbox**, you'll need to add it as an **Email** account: Touch  **Messaging**, press Menu , then touch **Manage accounts** > **Add account** > **Email** and enter your Gmail details. If you added your **Google** account too, turn off its email sync to avoid duplicate email notices: Touch  > **Accounts**, touch your Google™ account, and touch the checkmark to turn off **Gmail**.

Tip: For social network accounts, see “Add account” on page 11.

Instant messages

Note: You might not have this feature. For details, ask your service provider.

To send and receive instant messages, you can use an instant messaging app or your browser.

- To download and use an instant messaging app, touch > **Market** > **Applications** > **Communication**, then choose an app for your provider. Once you download the app, you'll see it in "App menu" on page 10.
- If you don't see an app for your IM provider, you can use your Web browser. Touch **Browser**, press Menu > **Go**, then enter your provider's Web site. Once you're there, follow the link to sign in.

Note: Your IM options will depend on your IM provider. To browse instant messaging apps from your computer, go to www.android.com/market.

Voicemail

When you have a new voicemail, shows at the top of your screen. To hear the voicemail, touch **Dialer**, then touch and hold .


If you need to change your voicemail number, in the home screen press Menu > **Settings** > **Call settings** > **Voicemail**.

Text entry

think keyboard, now think smaller

Touchscreen keypad

To open the touchscreen keypad, touch a text field or press and hold Menu . To close it, press Back .

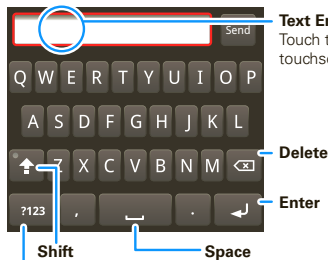

Text Entry

Touch to open the touchscreen keypad.

Delete

Enter

Numbers/Symbols

Touch to see numbers and symbols. Then, touch Alt to see more symbols.


Copy, cut, & paste

Note: **Cursor positioning aid** must be disabled. Press Menu > **Settings** > **Locale & text** > **Cursor positioning aid**.

After you enter text, you can touch it to copy, cut, or paste:

- 1 Touch a word to open the menu.
Tip: You can drag the text editing menu to move it.
- 2 Touch **Select text** (to select the word), or press **Menu > Select Line** or **Select all**.
- 3 Touch **Cut** or **Copy**.
- 4 Now, go to another message or text field. Touch and hold the text field, then touch **Paste**.











Text entry settings










When you enter text, your phone automatically corrects or suggests words. To change these settings, press Menu  > **Settings > Locale & text**, then:




- To edit your word suggestion dictionary, touch **User dictionary**.
- To change the language and the style for your touchscreen keypad, touch **Select locale**.
- To change the sounds, corrections, and other settings for your touchscreen keypad, touch **Android keyboard**.

Tips & tricks

a few handy hints

To...	
Return to the home screen	Press Home  .
Open option menus	Touch and hold an item, or press Menu  , to see all of your options.
See recently dialed numbers	Touch  Dialer > Recent .
Sleep/wake your phone	To sleep, press Power  . To wake, press Menu  .
Set lock screen	Press Menu  > Settings > Display & security > Screen lock .
Google™ search	Press Search  on the keypad.
Show last few apps used	Press and hold Home  .
Turn airplane mode on/off	Press and hold Power  > Airplane mode .
Turn Bluetooth™ , Wi-Fi , GPS or on/off	Press and hold Power  > Bluetooth, Wi-Fi, or GPS .

To...	
Zoom in to select a link on a web page	Touch  > <i>link</i> .
Go to the top of a list	Touch Alternate  > Scroll  up.
Go to the bottom of a list	Touch Alternate  > Scroll  down.
Scroll list up one screen	Touch Shift  > Scroll  up.
Scroll list down one screen	Touch Shift  > Scroll  down.
Sync media to your desktop / laptop	visit motorola.com/medialink
Sync contacts from your desktop / laptop to your phone	Use the MOTOBLUR portal: www.motorola.com/mymotoblur .

To...	
Show email or updates from a group of friends	Touch  Contacts , press Menu  > Add group . Create a group, then open the group (touch Contacts at the top of your Contacts list). Touch History to see this group's messages, or Status to see their updates.
Change which messages appear in the Universal Inbox	Open the Universal Inbox, then press Menu  > Edit Universal Inbox .
Add a shortcut on your home screen for an app or contact	Touch and hold an open area on your home screen to open the Add to Home screen menu, then choose Shortcuts . Then, you can choose from the Applications or Contacts lists.
Move a widget or shortcut	Touch and hold the widget or shortcut until you feel a vibration, then drag it to where you want.


To...

Delete a widget or shortcut

Touch and hold a widget or shortcut until you feel a vibration, then drag it to the trash can at the bottom of your screen.









Battery tips

Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power.

To start getting the most out of your battery, press Menu  > **Settings** > **Battery Manager** > **Battery Profile**. Choose **Performance Mode** for constant data transfer and battery use, **Battery Saver Mode** when your battery is low, or **Smart Mode** if you want to set **Battery Profile Options** that limit your data and wireless connections during off-peak hours.

To save even more battery life between charges, you could reduce:

- recording or watching videos, listening to music, or taking pictures.

- widgets that stream information to your home screen, like news or weather (“Use & change your home screen” on page 8).
- unused online accounts that you registered with MOTOBUR (“Edit & delete accounts” on page 11).
- GPS, Wi-Fi, and Bluetooth™ use: Press and hold Power  to open the Power key menu, then touch items to turn them off or on.
- Email updates: Touch  **Messaging**, press Menu  > **Messaging Settings** > **Email** > **Get new email** > **Every hour** or **Manually**.
- Google™ app updates: Press Menu  > **Settings** > **Google synchronization** > **Background data**.
- network speed: Press Menu  > **Settings** > **Wireless controls** > **Mobile networks** > **Select network** > **2G Only saves battery**.
- network searching: If you are out of coverage, to keep your phone from looking for networks, press and hold Power  to open the Power key menu, then touch **Airplane mode**.
- display brightness: Press Menu  > **Settings** > **Display & security** > **Brightness** > *(dimmer setting)*.
- display timeout delay: Press Menu  > **Settings** > **Display & security** > **Screen timeout** > *(shorter setting)*.

Personalize

add your personal touch


Widgets

Note: You might not have this feature. For details, ask your service provider.



Create widgets

- 1 Find an empty spot on your home screen where you want to add a widget. You can flick left or right to open other panels on your home screen.
- 2 Touch and hold the empty spot until you see the **Add to Home screen** menu.
- 3 Touch **Widgets**.
- 4 Touch the type of widget. If necessary, enter the widget settings.

Set up widgets


You can customize some widgets. Touch a widget to open it, then press Menu .

- **Happenings:** Update your status, choose which accounts appear in this widget, or manage your accounts (the same as “Add account” on page 11).
- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, “Set up messaging” on page 20.



- **Music:** Set this widget to an artist, album, song, playlist, or just press **Shuffle All Songs**. There’s more about “Music” on page 30.
- **News:** Change the widget name, choose how long it shows new stories, or choose a news source. To choose a source, touch , then choose preset **Bundles** or **Channels**, or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.
- **Weather:** Change temperature units or add locations. To add locations, touch , enter a city, and touch **Search**. When you open the weather widget, flick left to see other locations you added.

Note: Some apps have custom widget types that you can add and set up after you install the app.

Ringtones

To change your ringtone and notifications, press Menu  > **Settings** > **Sound & ringtones**.


To set vibrate for messages, touch  **Messaging**, press Menu  > **Messaging Settings** > **Text Messaging**, **Email**, or **Social Messaging**.

Tip: To use a song as a ringtone, touch  >  **Music** > **My Music** > **Songs**, touch and hold the song name, then touch **Set as ringtone**.


Sounds

features

set volume for media and videos

Menu  > **Settings** > **Sound & ringtones**
> **Media volume**

play sound on screen selection


Menu  > **Settings** > **Sound & ringtones**
> **Audible selection**

Display settings


features

notification LED


Blinks to tell you a notification has been received.

Menu  > **Settings** > **Display & security**
> **Notification LED**



set display brightness

Menu  > **Settings** > **Display & security**
> **Brightness**

set animation

Menu  > **Settings** > **Display & security**
> **Animation**

Quick launch shortcuts

To use a quick launch shortcut, press and hold Search  on the keypad, then press the assigned key, like Search  and **B** to launch the browser.

Date & time

Set date, time, time zone, and formats:

Find it: Menu  > **Settings** > **Date & time**

Language & region

Set your menu language and region:

Find it: Menu  > **Settings** > **Locale & text**
> **Select locale**


Photos & videos


see it, capture it, share it!

Photos

Take & share photos


Take that family photo, and post it online for everyone to see.


Find it: Press Camera 

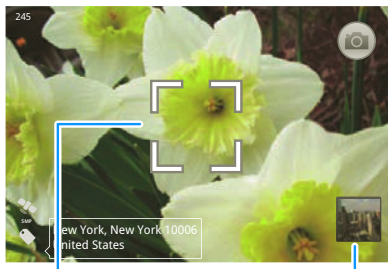

Autofocus Box

Touch the thumbnail to open your last photo.


Note: Photos are stored on your microSD memory card. To change picture resolution, in the viewfinder press Menu  > **Settings** > **Picture Resolution**.

To take the photo, lightly press Camera  halfway until the autofocus box turns green, then press all the way to take the photo.

You will see a thumbnail of the photo you've just taken on the right. Touch the thumbnail, then:

- To **see** all your photos, touch **Gallery**.
- To **set** the photo as a wallpaper, contact photo, or social network profile photo, touch **Set as**.
- To **send** the photo in a message or post it online, touch **Share**. For more info on sharing your photos, see "Share your photo gallery" on page 28.
- To **delete** the photo and return to the viewfinder, touch **Delete**.

Photo options

In the viewfinder, press Menu  > **Settings** to open a menu:


options	
Store location in pictures	Save the details of where the photo was taken.
Picture Resolution	Set the resolution of your photo.

options

Color Effects	Choose your color settings, like None , Negative , or B/W .
Reset Settings	Undo all of your camera setting changes.
Advanced settings	Set the Picture Quality of your photo, or choose your White Balance light settings, like Auto , Daylight , or Cloudy .

View your photos

Find it:  >  **Picture Gallery**

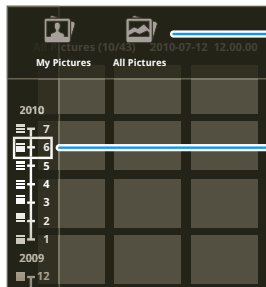

Categories

Touch at the top to open, then touch a category.

Picture Dates

Touch on the left to open the date list, then drag the dates to find pictures.

Play a slideshow

Touch  >  **Picture Gallery**, touch a picture, then touch  to start a slideshow. To stop the slideshow, touch the display. To return to the gallery, press Back .

Share your photo gallery

Find it:  >  **Picture Gallery**

To send your photo in a message or post it online:

- 1 Touch and hold a photo, then touch **Share**.
- 2 Choose how you want to share—like **Email**, **MySpace**, **Social sharing** or **Text Messaging**.

Tip: With **Social sharing**, you can post a photo to more than one social network at the same time.

Manage your photos

Find it:  >  **Picture Gallery**

Touch and hold a photo, then:

- To delete the photo, touch **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, touch **Set as**.
- To open file details, touch **Picture Info**.

Tip: To copy photos to/from a computer, go to “Transfer files with a USB connection” on page 45.

Edit your photos

Find it:  >  **Picture Gallery** > *picture*, press Menu  > **Edit**

To crop a photo, touch the crop tool, stretch and drag the crop square to the image you want, then touch the crop save icon.


Videos



Record & share videos

Find it:  >  **Camcorder**



Touch the thumbnail to open your last recording.


Tip: To send your video in a message, set the video quality to **Low (for MMS messages)**: Press Menu  > **Settings** > **Video quality**.

To record the video, press Camera . To stop the video recording, press Camera  again. After you record a video, touch the thumbnail:

- To **see** all your videos, touch **Gallery**.
- To **play** the video, touch **Play**.
- To **send** the video in a message or post it online, touch **Share**. For more info on sharing your photos, see “Share your video gallery” on page 30.
- To **delete** the video, touch **Delete**.

Play your videos

Find it:  >  **Video Gallery** > *video*

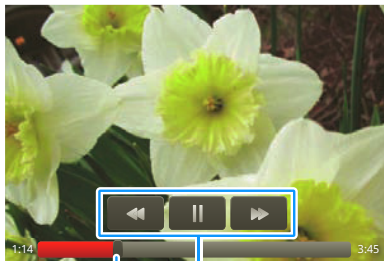

Progress Bar

Video Controls

Share your video gallery

Find it:  >  **Video Gallery**

To send your video in a message or post online:

- 1 Touch & hold a video, then touch **Share**.
- 2 Choose how you want to share—like **Text Messaging**, **Facebook**, or **MySpace**.

Manage your videos

Find it:  >  **Video Gallery**

To delete a video, touch and hold a video, then touch **Delete**.


Music

when music is what you need...

Quick start: Music


Touch, touch, play—instant music. Just open your music library, then select what you want to play.

Find it:  >  **Music > My Music**

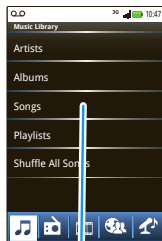


Categories

Touch a category, then touch a song or playlist.

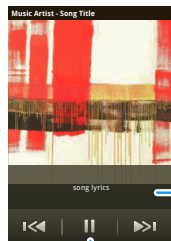

Music Controls


See song lyrics in real time.

Tip: When a song is playing, you can add it to a playlist by pressing Menu  > **More > Add to playlist**.

Your music community

Listen to the radio, watch videos, read music news, and more.

Find it:  >  **Music**

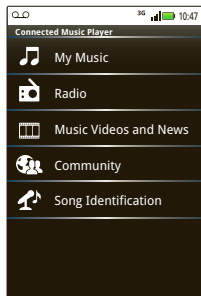

My Music. Listen to your tunes.


Radio. Surf the airwaves for fresh music. There's something for everyone. You need a headset for FM Radio. Check out SHOUTcast™ Radio for music from all generations and types.

Music Videos and News. Watch videos from YouTube™, prerecorded TV shows, and your own videos.

Community. Find songs, see what people are listening to all around the world, and see what's hot on the music charts.

Song Identification. Get information about a song that is playing. Select **Tell me what is playing** and hold your phone close to the source of the music.

Note: Song identification may not be successful if the music is from a live concert or a musical event in which digital recording is not even.

Configuration data. Some features, such as Music Videos and News, Community, Song Identification and Song lyrics, require data traffic. Set the data mode before using the music player. Press Menu  > **Settings** > **Data Usage** > **Data Mode**.


Set up music

What music transfer tools do I need?

To put music on your computer and then load it on your phone, you need:

- Microsoft™ Windows™ PC or Apple™ Macintosh™.
- USB data cable.
- memory card. Your music is stored on your memory card. Your phone supports removable microSD memory cards up to 32 GB capacity. To make sure

your memory card is installed, go to “Assemble & charge” on page 3.

Tip: To see the available memory on your memory card, from the home screen press Menu  > **Settings** > **SD card & storage**.

What music file formats can I play?

Your phone can play many types of files: MP3, M4A, AAC, ACC+, MIDI, WAV, and OGG Vorbis.

Note: Your phone does not support any DRM protected files.

What headphones can I use?

Your phone has a 3.5mm headset jack for wired stereo listening. You can go wireless with Bluetooth™ stereo headphones or speakers (see “Bluetooth™ wireless” on page 42).

Get music

Rip a CD

Not literally. If you’re new to digital music transfer, this means transferring music from a music CD to your computer.

To rip a music CD on your computer, you can use Microsoft™ Windows™ Media Player. You can

download Windows Media Player from www.microsoft.com.

- 1 On your computer, open Windows Media Player.
- 2 Insert a music CD into the computer’s CD ROM drive.

Note: Make sure you change the format to MP3 in “Rip > Format > Rip Settings.”

- 3 In the Windows Media Player window, click on the “Rip” tab.
- 4 Highlight the songs you want to import, and click “Start Rip.”


The songs are imported to the Windows Media Player Library.

Transfer using Windows Media Player

Transfer music files from a computer to your memory card.

Note: Copyright—do you have the right? Always follow the rules in your phone’s safety, regulatory, and legal information, packaged with your phone.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone’s micro USB

port to a USB port on your computer. Your phone should show  in the status bar.

Note: Your phone supports Microsoft™ Windows™ XP, Windows Vista™, and Apple™ Macintosh™. Other operating systems may not be compatible.

- 2 Your phone shows a USB connection dialog. Touch **USB drive**. You can't use the files on your memory card while it is connected.
- 3 On your computer, open Windows Media Player.
- 4 On the "Sync" tab, select "More Options." Under "Device," select your phone.
- 5 Select "Properties," check the "Create folder hierarchy on device" box, and click "OK."
- 6 Drag your music files over to the "Sync List" and press "Start Sync."

Transfer using USB


To use a USB cable, see "Transfer files with a USB connection" on page 45.

Play music

Music library

Open your music library, then select what you want to play.

Find it:  >  **Music > My Music**

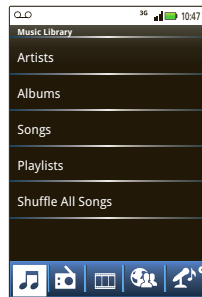

Categories

Touch to list songs or playlists.


Music Activities & Community

Play music, radio, videos, visit music community, or ID songs.

Your music is stored by artists, albums, songs, and playlists. Touch a category, then touch the song or playlist you want to play. Or, touch **Shuffle All Songs** to randomly play all your songs.

Music player

Just touch a song or playlist to get going.

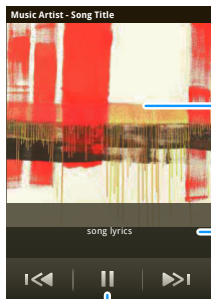






Touch to see a progress bar.

See song lyrics in real time.

Music Controls

Music player controls

controls	
play/pause	Touch  .
previous/next	Touch   .
fast forward/rewind	Touch & hold   .
volume	Press the side volume keys.

controls


send song clip

Press Menu  > **Send Blip.**

go back to music home

Press Menu  > **Music Home.**

find videos

Press Menu  > **Find videos.**

see what others are listening to

Press Menu  > **Music Maps.**

add to playlist

Press Menu  > **More** > **Add to playlist.**


delete


Press Menu  > **More** > **Delete.**

use as ringtone

Press Menu  > **More** > **Set as ringtone.**

Hide, wake, turn off


Press Home  to use another app. Your music continues to play.

When you see  in the status bar a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch .

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

To add a song to the playlist you're playing, press Menu  > **Add to playlist** in the music player.

To delete and rename playlists, touch and hold the playlist.



FM Radio






Plug in a 3.5mm headset and surf the airwaves for fresh music.

Find it:  >  **FM Radio**







Radio controls

controls	
search for stations	Touch  .
scan for stations	Touch  .
volume	Press the side volume keys.

controls	
edit station (preset) name	Press Menu  > Edit Preset.
clear saved stations	Press Menu  > Clear Presets.
listen with speaker (headset must stay plugged in)	Press Menu  > Loudspeaker.
scan for local stations	Press Menu  > Scan and Save.
turn off	Press Menu  > Exit.

Set stations (presets)

The first time you plug in your headset and turn on the radio, you can scan and set your preset stations. You can save up to 20 of them.

To **find a station**, you can search by touching /, scan by touching /, or just tap the frequency bar,

To **save the frequency** you're listening to, select the unassigned preset (or preset you want to reset) and edit the name. Then, touch **Done** > **Save**.


Web

surf the web with your phone


Quick start: Browser

Note: You might not have this feature. For details, ask your service provider.


Find it:  **Browser**

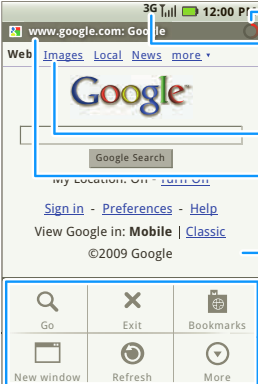


The page is loading.

Connection
Over the air:
Mobile Network: **G, E, 3G**
Wi-Fi: 

Links
Touch to open.

Web Address
To go to a URL, press  > **Go**.

Drag or flick to scroll.


Press  to open a menu where you can open a Web page, your bookmarks, a new window, and more.

Note: If you can't connect, contact your service provider.

Connect

Your phone uses the mobile phone network (over the air) to automatically connect to the Web.

Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, press Menu  > **Settings** > **Wireless controls**. Touch **Wi-Fi** to turn it on, then touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect. There's more in "Wi-Fi™" on page 44.

Web touch tips

Zoom & magnify

In Web pages, when you scroll (drag or flick), zoom icons appear at the bottom of your screen.




Zoom In/Out



Magnify

Open a magnifying window that you can drag.

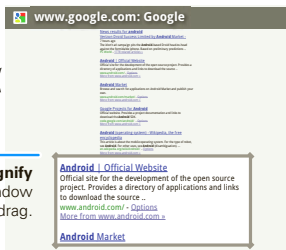


Select links

When you touch a link, your phone outlines it. If you touch and hold the link, your phone shows options, like **Open in new window** or **Bookmark link**.



Tip: To help select links, use the "Touch pad" on page 7.



Browser options

Press Menu  to see browser options:

options	
Go	Enter the Web address (URL) you want. Tip: Some sites are optimized for mobile phones, and they use an "m" in the URL instead of "www" (like m.youtube.com).
Exit	Close the browser.
Bookmarks	Shows a list of your bookmarks. Touch Add bookmark... to add the current page to your list.
New window	Opens a new window.
Refresh	Reloads the current page.

options

More Shows browser options, like **Find on page**, **Select text**, **Page info**, **Share page**, **Downloads**, and **Settings**.



To clear your download history, press Menu  > **Clear list**. To cancel, press Menu  > **Cancel all downloads**.

Download apps



Warning: Apps downloaded from the Web can be from unknown sources. To protect your phone and personal data, only download apps from sources you trust, like “Apps for all” on page 42.

Note: All apps downloaded are stored in your phone memory.

To download apps:

- 1 If you want to download apps from any Web page, press Menu  > **Settings** > **Applications** > **Unknown sources**.
- 2 To launch the browser, touch  **Browser**.
- 3 Find the app you want to download and touch the download link.

Manage your downloads

To view files or applications you have downloaded, touch  **Browser**, press Menu  > **More** > **Downloads**.


YouTube™

go and create your own classic

Note: You might not have this feature. For details, ask your service provider.


Quick start: YouTube

Find it:  >  **YouTube**

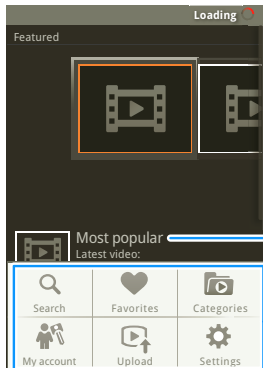

Categories

Touch a video to play.

Press  to open a menu where you can search, upload, edit your account, and more.


The YouTube user-generated content Web site lets you share videos with YouTube users everywhere. You

don't need a YouTube account to browse and view videos.




Note: If you don't have a YouTube account, visit www.youtube.com to find out more. To create an account or sign in, go to "Your account" on page 40.

Watch YouTube videos

See popular video categories, like Featured, Most viewed, and Top rated. Touch a category, then touch the video to start playing it.

To see more video categories, press Menu  > **Categories**.


Search for YouTube videos

Find it:  >  **YouTube**, press Menu  > **Search**

Enter text, then touch **Search**. To clear your search history, press Menu  > **Settings** > **Clear search history**.

Share videos

Send someone a link to a video that you are watching.



1 Press Menu  > **Share**.

Tip: Just touch and hold a video to open the **Share** menu.

- 2 Choose the type of message and recipients, then touch **Send**.

Your account




Log in or create account

Find it:  >  **YouTube**, press Menu  > **My account**

If you have a YouTube account, enter your username, password and touch **Sign in**.

To create a YouTube account, touch the link to open the YouTube site and enter your information.

Upload videos

Find it:  >  **YouTube**, press Menu  > **Upload**

- 1 Touch the video you want to upload. You can change the video title, description, set the access, and add tags.
- 2 Touch **Upload**.

Locations


toss away your maps

Google Maps™

Note: You might not have this feature. For details, ask your service provider.


Where am I? What's around here? Let Google Maps help you explore your surroundings and find what you're looking for.

Find it:  >  **Google Maps**

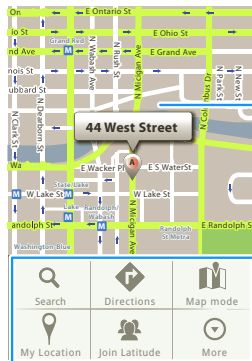

Map View

Drag or flick to scroll.
Touch to show zoom.


Press  to open a menu where you can search, get directions, find your location, and more.

Google Maps opens by default in “Map mode.”




Latitude

Join Latitude


See where your friends and family are on Google Maps™. Plan to meet up, check that your parents got home safely, or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Latitude, and then invite your friends to view your location or accept their invitations. When using Google Maps (in any mode except in Street View), press Menu  > **Join Latitude**. Read the privacy policy and, if you agree with it, choose to continue.

Add & remove friends

Find it:  >  **Google Maps**, press Menu  > **Latitude**

To add friends:

- 1 Press Menu  > **Add friends**.
- 2 Touch **Select from Contacts** or **Add via email address**, then touch a contact and **Add friends**.

If your friends already use Latitude, they'll receive an email request and a notification. If they have not yet joined Latitude, they'll receive an email request that invites them to sign in to Latitude with their Google™ account.

To remove friends:



- 1 Press Menu  > **Latitude** to show your friend's list, then touch a friend in your list.
- 2 Touch **Remove**.

Share location



When you receive a request to share location details you can choose to:

- **Accept and share back**—see your friend's location, and your friend can see yours.
- **Accept, but hide my location**—see your friend's location, but they can't see yours.
- **Don't accept**—location information is not shared between you and your friend.

Hide your location

To hide your location from a friend, press Menu  > **Latitude** to show your friend's list. Touch your contact name, then press Menu  > **Privacy** > **Hide your location**.

Turn off Latitude

Press Menu  > **Latitude** to show your friend's list.
Press Menu  > **Privacy** > **Turn off Latitude**.


Apps for all

get the app you want

About Android Market™

Note: You might not have this feature. For details, ask your service provider.

Find it:  >  **Market**

Get all the fun games and cool apps you want! Android Market provides access to applications developed by developers worldwide, so you can find the app you want. If you need help or have questions about Android Market, press Menu  > **Help**.



Browse & install apps

Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.

Manage & restore apps

Find it: Menu  > **Settings** > **Applications** > **Manage applications**


Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.


To reinstall any downloaded items, touch  >  **Market** > **My downloads**. Previously installed apps are listed and available for download.

Bluetooth™ wireless

lose the wires and go wireless

Quick start: Bluetooth wireless

Find it: Menu  > **Settings** > **Wireless controls** > **Bluetooth settings**

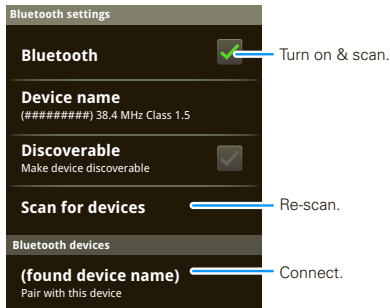

Turn Bluetooth power on or off

Find it: Press and hold Power  > **Bluetooth**

Note: To extend battery life, turn Bluetooth power off when not in use.



Connect new devices

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, just turn on the device.

- 1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

- 2 Press Menu  > **Settings** > **Wireless controls** > **Bluetooth settings**.
- 3 Touch **Bluetooth** to turn on and scan. If Bluetooth power is already on, touch **Scan for devices**.
- 4 Touch a device to connect.
- 5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Reconnect devices

To automatically reconnect your phone with a paired device, simply turn on the device.

To manually reconnect your phone with a paired device, touch the device name in the **Bluetooth devices** list.

Disconnect devices


To automatically disconnect your phone from a paired device, simply turn off the device.

To manually disconnect your phone from a paired device, touch the device name in the devices list, then press Menu  > **Disconnect**.

Edit properties


Press Menu  > **Settings** > **Wireless controls** > **Bluetooth settings** > **Device name**. Enter a name and touch **OK**.

Quick start: Wi-Fi

Find it: Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**

Note: Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Use a wireless network for fast Internet access and to download data.

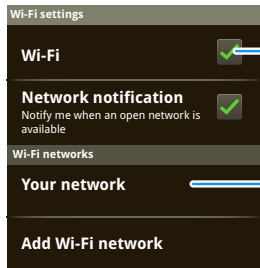





Turn Wi-Fi on or off

Find it: Press and hold Power  > **Wi-Fi**

Note: To extend battery life, turn off Wi-Fi power when not in use.

Wi-Fi search & connect

To find networks in your range:

- 1 Press Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**.
- 2 Touch **Wi-Fi** to turn on and scan. If Wi-Fi is already on, press Menu  > **Scan**. Your phone lists the networks it finds within range.
Tip: To see your phone's MAC address or other Wi-Fi details, press Menu  > **Advanced**.
- 3 Touch a network to connect.
- 4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and touch **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

Memory card & file transfer

copy photos, music, and more to your phone

Memory card

Note: You need the memory card installed for some features on your phone, like **Camera**.

To insert a memory card, see “Assemble & charge” on page 3.

To open and manage memory card files on your phone, use “Quickoffice” on page 48.

Note: Do not remove your memory card while your phone is using it or writing files on it.

Warning: When you format a memory card, all data on the card is deleted.

To remove or format your memory card, you need to unmount it. Press Menu  > **Settings** > **SD card & storage** > **Unmount SD card**. Then, to format your memory card, touch **Format SD card**.

Transfer files with a USB connection

Note: This feature requires an optional accessory.

There are two ways to transfer files with a USB connection:


- You can use Motorola Media Link (MML) on your computer to bridge your digital world—manage,


sync, and back up files, or quickly upload files to the Web.

To use MML, install it on your computer (use a CD that came with your phone, or downloaded MML). To download MML or get more information, visit www.motorola.com/mymedialink.

- You can use the “My Computer” program on a PC to drag and drop files between your phone and computer.

On your computer, open MML or “My Computer,” then:

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

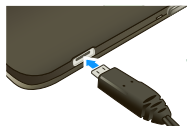

Note: Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.

- 2 On your phone, touch **USB drive** in the USB connection dialog. You can't use the files on your memory card while it is connected.

3 On your computer:


- To use MML, open it and select a tab to manage **Photos**, **Videos**, or **Music**. You can back up content with the Synch button, drag and drop content, or upload files to social networking sites.
 - To use “My Computer,” open it and select “Removable Disk” to see your memory card folders.
- Drag and drop files between your computer and memory card folders. When you’re done, use the “Safely Remove Hardware” feature.

Synchronize

keep up-to-date

Google™ data synchronization

Note: You might not have this feature. For details, ask your service provider.

Find it: Menu  > **Settings** > **Google synchronization**

The Google apps on your phone give you access to the same personal information (emails, events, and contacts) that you have on a computer using Gmail™, Google Calendar™, and Contacts. It’s easy to synchronize the Google apps information you want to keep up-to-date.

Select apps to synchronize

- 1 Touch **Background data** and **Auto-sync**.

Tip: To save battery power do not touch **Background data**.

- 2 Touch the apps you want to synchronize, like **Gmail**, **Calendar**, or **Contacts**.

Sync with Microsoft™ Office Outlook

If you use Microsoft Office Outlook on your work computer, your phone can synchronize emails, events, and contacts with your Microsoft Exchange server.

Find it: Menu  > **Settings** > **Accounts** > **Add account** > **Corporate Sync**

- 1 Enter your username (username@company.com), password, email address, and server details (server address is the same URL you use to access your company's email using the Web on your computer).

Note: Contact your business IT department for server details.

- 2 Touch **Next**.

Tools


stay on top of things


Alarm clock


Find it:  >  **Alarm Clock**

To turn on an alarm, touch the check box.

When an alarm sounds, drag **Dismiss** to turn it off or touch the screen to delay.


To add an alarm, press Menu  > **Add alarm**, then enter alarm details.

To set a snooze period, in the **Alarm Clock** list press Menu  > **Snooze time**.

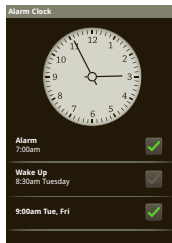


Calendar

Find it:  >  **Calendar**

Your calendar events can be viewed in different ways: Press Menu  > **Agenda, Day, or Week**. When you highlight an event in the day and week views, more details appear.


Add calendar events

From any calendar view, press Menu  > **New event**. Enter event details and touch **Save**.

Manage calendar events

To edit an event, touch and hold it, then touch **Edit event**. When you're done, touch **Save**.

To delete an event, touch and hold it, then touch **Delete event**.

To go to today, press Menu  > **Today**.

Calculator

Find it:  >  **Calculator**

Your calculator has two views: basic and advanced. To change your views, press Menu  > **Advanced**

panel or **Basic panel**. To clear history, press Menu  > **Clear history**.


Quickoffice

Use Quickoffice to view recent documents and files on your memory card.

Find it:  >  **Quickoffice**

Touch a file or folder to open, or touch and hold a file for options.

To manage your folders and transfer files, see “Memory card & file transfer” on page 45.

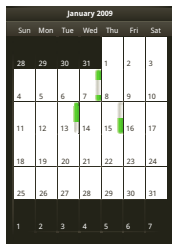


Management

stay in control


Wireless manager

Find it: Menu  > **Settings** > **Wireless controls**


Manage all your wireless connections: Wi-Fi, Bluetooth™, airplane mode, & mobile networks (“Network” on page 49).

Shortcut: Press and hold Power  to display the power menu—from here you can control Bluetooth power, Wi-Fi and GPS as well as turn the phone off and set airplane mode.

Airplane mode


Use airplane mode to turn all your wireless connections off—useful when flying. Press and hold Power  > **Airplane mode**.

Update my phone

To keep your phone current, software updates may be available. Press Menu  > **Settings** > **About phone** > **System updates** to see if your phone is up to date. If it isn't, touch **Update**.

Network

You should not need to change any network settings. Contact your service provider for help.

Press Menu  > **Settings** > **Wireless controls** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.


Security

help keep your phone safe

Quick start: Security

Find it: Menu  > **Settings** > **Display & security**

You have lots of ways to keep your phone safe.

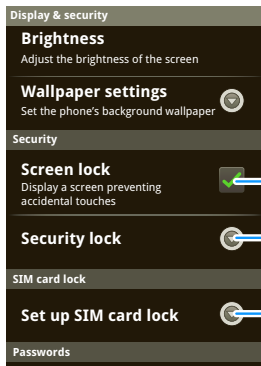


Turn on.


Set lock type, code, and timer.

Set SIM card lock and change SIM PIN.

If you lose your phone, you can log into your MOTOBLUR account from a computer to locate your phone or clear the data on it: www.motorola.com/mymotoblur.

Screen lock


Set your phone to display a lock screen, and prevent accidental key presses, press Menu  > **Settings** > **Display & security** > **Screen lock**. You can also set a security lock to prevent others from using your phone.

To set your security level, press Menu  > **Settings** > **Display & security** > **Security lock** > **Security lock type**. Some work accounts might require you to add a password lock to your phone, for security.


- **Pattern lock:** draw a pattern to unlock.
- **Passcode lock:** enter a code to unlock.

Note: You can make emergency calls on a locked phone ("Emergency calls" on page 15). A locked phone still rings, **but you need to unlock it to answer**.

Lock pattern


To set the lock pattern, press Menu  > **Settings** > **Display & security** > **Security lock** > **Security lock type** > **Pattern lock**.

Follow the instructions to draw your lock pattern.

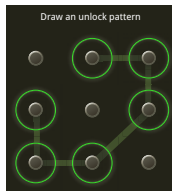

When prompted, draw the pattern to unlock the phone.


Passcode lock


To set the passcode, press Menu  > **Settings** > **Display & security** > **Security lock** > **Security lock type** > **Passcode lock**.

Enter a passcode, then confirm it.

When prompted, enter the passcode to unlock the phone.


Personalize your lock screen

To change your timeout, press Menu  > **Settings** > **Display & security** > **Screen timeout**. If you don't touch the screen or press any keys for this amount of time, the screen locks automatically. To unlock, see “Lock & unlock” on page 51.



To change your lock screen picture, press Menu  > **Settings** > **Display & security** > **Wallpaper settings**.

Lock & unlock


To lock the screen/phone:

- Press Power .
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen/phone:

- Press Menu  or switch the phone on to display the lock screen.
- Press Menu  to unlock—if you've set a lock pattern or passcode, you'll be asked to enter it.


Forgot your pattern or passcode?

In the **passcode** unlock screen, press Menu  > **Forgot passcode?** to unlock your phone with your MOTOBLUR email address and MOTOBLUR password.

In the **pattern** unlock screen, after you enter an incorrect pattern five times, you can touch **Forgot passcode?** to unlock your phone with your MOTOBLUR email address and MOTOBLUR password.

Lock your SIM

Enable SIM PIN

To lock your SIM (the next time you power up the phone you will need to enter your SIM PIN), press Menu  > **Settings** > **Display & security** > **Set up SIM card lock** > **Lock SIM card**. Enter your SIM PIN code.

Caution: If you enter an incorrect PIN code three times, your phone locks your SIM card and asks for your PIN unlock code, contact your service provider.

Change SIM PIN


To change your **SIM PIN**, press Menu  > **Settings** > **Display & security** > **Set up SIM card lock** > **Change SIM PIN**.

PUK code

To unlock your SIM PIN, you need to enter your PIN unlock code (PUK code) when prompted.

Note: Your PUK code is provided by your service provider.

Reset

To reset your phone to factory settings and erase all the data on your phone, press Menu  > **Settings** > **SD card & storage** > **Factory data reset** > **Reset phone**.

Warning: All downloaded apps and user data on your phone will be deleted. Data on your memory card will not be deleted.

Lost, stolen, broken, cleared

Don't you just hate it when your life is on your phone and it all goes wrong? Lose it, break it, reset it, or even worse—stolen! Relax, MOTOBLUR can help find your phone, clear it (if you need to) and best of all, restore all your stuff.

Track your phone

To locate your phone:

- 1 Log into your MOTOBLUR account:
www.motorola.com/mymotoblur.
- 2 On the phone profile page, follow the link to locate your phone.

MOTOBLUR locates your phone using GPS and AGPS (see the important legal and safety information packaged with your phone).

Remote clear






To wipe your phone data:

- 1 Log into your MOTOBLUR account:
www.motorola.com/mymotoblur.
- 2 On the phone profile page, follow the link to delete data.

Warning: All downloaded apps and user data on your phone will be deleted. Data on your memory card will not be deleted.

Restore your phone

If you lose your phone don't worry, your contacts are backed-up on MOTOBLUR.

Note: If you recover your phone after a remote clear, you need to complete a factory reset: Hold the Camera  key and press Power  to turn on your phone. When you see a blue screen, press Press Alternate +**L** and Alternate +**W**. Now, press Power  and log into MOTOBLUR.

If you get your next MOTOBLUR product, just log into your existing MOTOBLUR account on your phone to recover all your stuff automatically.

To recover your Android Market™ apps, see “Manage & restore apps” on page 42.

Troubleshooting

we're here to help

Crash recovery

In the unlikely event that your phone stops responding to touches and key presses, try a quick reset. Remove the back cover and battery (“Assemble & charge” on page 3), then replace and turn on your phone as usual.

Service & Repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/repair (United States) or www.motorola.com/support (Canada), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States - Android products), 1-800-331-6456 (United States - all other products), 1-888-390-6456 (TTY/TDD United States for hearing impaired - all products), or 1-800-461-4575 (Canada - all products).

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come in contact with water.*** Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- **Don't dry a wet or damp battery with an appliance or heat source**, such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.**

* **Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.

Warning: Never dispose of batteries in a fire because they may explode.



Battery Charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the "Smart Practices While Driving" in this guide and at www.motorola.com/callsmart (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device. Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.



To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.


Potentially Explosive Atmospheres






Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.

Symbol	Definition
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	For indoor use only.
	Listening at full volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.
- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is 1.41 W/kg, and when worn on the

body, as described in this guide, is 1.55 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

Information from the World Health Organization

"Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body."

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

European Union Directives Conformance Statement

CE 0168



[Only Indoor Use Allowed In France
for Bluetooth and/or Wi-Fi]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9

CE 0168

Type: MC2-41H14

Product
Approval
Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19[3].

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5. This Class B digital apparatus complies with Canadian ICES-003.

GPS & AGPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges,

and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Performance Tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to

www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.
- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your mobile device in a microwave oven.



dust and dirt

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



shock and vibration

Don't drop your mobile device.



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply when the battery is recycled or disposed of. See www.dtsc.ca.gov/hazardouswaste/perchlorate
There is no special handling required by consumers.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the

normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY, INC.

OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please press Menu Key > **Settings** > **About Phone** > **Legal information** > **Open source licenses**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions.

Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola Mobility, Inc. warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions (Products and Accessories)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions (Software)

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	All Products, Accessories, and Software: 1-800-331-6456
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO

EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Copyright & Trademarks

Motorola Mobility, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048
www.hellomoto.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States - Android products)

1-800-331-6456 (United States - all other products)

1-888-390-6456 (TTY/TDD United States for hearing impaired - all products)

1-800-461-4575 (Canada - all products)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA, the Stylized M Logo, MOTOBLUR and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. Android and Android Market are trademarks of Google, Inc. Use of these trademarks is subject to Google Permissions. Facebook is a registered trademark of Facebook, Inc. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Apple, Macintosh, Quicktime and Quicktime logo are registered trademarks of Apple Computer, Inc. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Bluetooth ID: B016118

MOTOROLA **CLIQ-XT** with MOTOBLUR

Manual Number: 68014235001-A

