



Installation Instruction, SP/Mechanical

Applicable for Z200, Z208

Contents

1	Abstract	2
2	General	2
3	Hardware	2
3.1	Test Setup	2
3.2	Computer	3
3.3	Flash Interface	3
3.4	Serial cable	3
3.5	Hardlock	3
3.6	Service Card Reader	4
3.7	Sony Ericsson programming interface – SEPI (optional).....	4
3.8	Sony Ericsson interface – SEPI (optional)	4
3.9	USB PC cable (optional)	4
3.10	Infrared Device	5
3.11	Label Printer (optional)	5
4	Software	5
4.1	EMMA II	5
4.2	Labelmake software (optional).....	5
5	Revision History	6



1 Abstract

This document describes the installation procedure for the SP/Mechanical repair package.


2 General

The Mechanical repair package consists of a Computer and Interface Cables. A Hardlock and a Service Card are required for security reasons. A label printer can be installed to be able to print new labels (optional).

3 Hardware

All hardware must be approved by Sony Ericsson and is documented in the Equipment List.

3.1 Test Setup

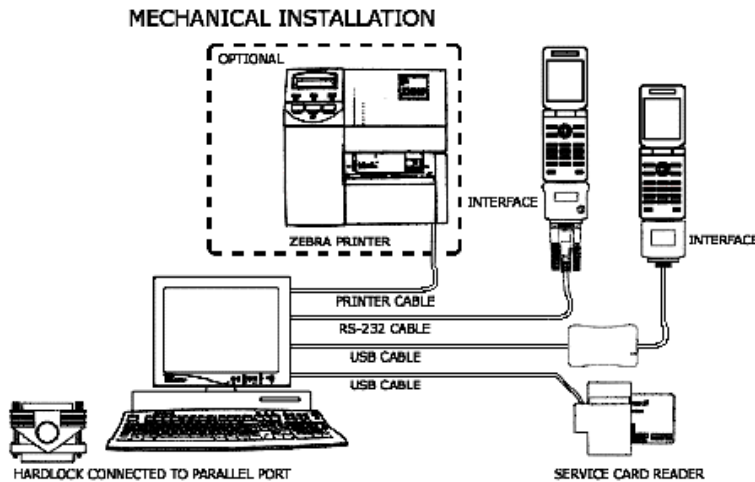

*The equipment in this picture is specified in the Equipment List.



3.2 Computer

IBM compatible computer with Windows 98, Windows XP or Windows 2000 installed. The computer should include at least two USB-ports.

Note: For SEPI is only Windows 2000 and Windows XP supported.

3.3 Flash Interface

The flash interface connects the phone to the computer and makes it possible to send and receive information to the Emma II application.



3.4 Serial cable

The 9-pin RS 232 serial cable is the interface between the flash interface and the computer. Should be connected to the serial port on the computer.



3.5 Hardlock

Hardlock with article number KRY 105 165 is required. The Hardlock should be connected to the parallel port on the computer.





3.6 Service Card Reader

The Service Card Reader is delivered with the necessary software and instructions for installation. The Service Card Reader should be connected to an USB-port on the computer.



Service Card



Service Card Reader

3.7 Sony Ericsson programming interface – SEPI (optional)

The USB programming interface is delivered with the necessary software and instruction for installation. The USB programming interface should be connected to an USB-port on the computer.



NEW!

3.8 Sony Ericsson interface – SEPI (optional)

The cable is the interface between the USB programming interface and the phone.



NEW!

3.9 USB PC cable (optional)





The A-B Plug-Plug cable is the interface between the computer and the USB interface. Connect the cable between the USB programming interface and the computer.

3.10 Infrared Device

A Jet-Eye, built in Infrared on laptop or other Infrared device can be used to verify the Infrared function in the phone. Install the chosen equipment according to the installation instruction from the manufacture.

3.11 Label Printer (optional)

A Zebra printer model 90xi, 90xiII or 4000 deluxe shall be used. Connect the printer with a standard RS 232 serial printer cable [refer to the Zebra printer manual] to the serial port on the computer. Read the Zebra installation manual for more information about the installation.

4 Software

4.1 EMMA II

EMMA II contains all software required to service the product. Installation and user manuals are available in the EMMA II start page.

<http://emma.extranet.sonyericsson.com>

4.2 Labelmake software (optional)

Download the Labelmake software from [CSPN](#). Unzip the file and run the setup.exe and follow the instructions. Read the file README.txt under C:\Program Files\Ericsson\Labelmake and follow the instructions. Start the program by selecting Labelmake in your Windows START-menu.

This product is using labels from the EU-database. To add the latest Database from [CSPN](#), download the latest file and run the Setup.exe and follow the instructions.

<http://cspn.extranet.sonyericsson.com>



5 Revision History

Rev.	Date	Changes / Comments
A	2003-09-17	First release